

Safety Instructions

Liquicap M

FMI51, FMI52, FTI51, FTI52

Ex ia IIC T* Ga/Gb

Ex ia IIB T* Ga/Gb

Ex ia IIIC T90 °C Da/Db IP66



Document: XA01172F-B

Safety instructions for electrical apparatus for explosion-hazardous areas → 3



Liquicap M FMI51, FMI52, FTI51, FTI52

Table of contents

Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	7
Safety instructions: Special conditions	7
Safety instructions: Installation	8
Safety instructions: Zone 0	9
Safety instructions: Zone 20, Zone 21	9
Temperature tables	10
Connection data	12

Associated documentation	<p>This document is an integral part of the following Operating Instructions:</p> <ul style="list-style-type: none"> ■ BA00297F/00, BA00298F/00 (FMI51, FMI52) ■ BA00299F/00 (FTI51, FTI52) 										
Supplementary documentation	<p>Explosion-protection brochure: CP00021Z/11</p> <p>The Explosion-protection brochure is available:</p> <ul style="list-style-type: none"> ■ In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Media Type: Documentation -> Documentation Type: Brochures and catalogs -> Text Search: CP00021Z ■ On the CD for devices with CD-based documentation 										
Manufacturer's certificates	<p>Certificate of Conformity</p> <p>Certificate number: TÜV 13.0904 X</p> <p>Affixing the certificate number certifies conformity with the following standards (depending on the device version):</p> <ul style="list-style-type: none"> ■ ABNT NBR IEC 60079-0:2013 ■ ABNT NBR IEC 60079-11:2013 ■ ABNT NBR IEC 60079-26:2008 										
Manufacturer address	<p>Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.</p>										
Extended order code	<p>The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.</p> <p>Structure of the extended order code</p> <table border="0" style="margin-left: 40px;"> <tr> <td style="text-align: center;">FMI5x, FTI5x</td> <td style="text-align: center;">–</td> <td style="text-align: center;">*****</td> <td style="text-align: center;">+</td> <td style="text-align: center;">A*B*C*D*E*F*G*..</td> </tr> <tr> <td style="text-align: center;"><i>(Device type)</i></td> <td></td> <td style="text-align: center;"><i>(Basic specifications)</i></td> <td></td> <td style="text-align: center;"><i>(Optional specifications)</i></td> </tr> </table> <p>* = Placeholder At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.</p> <p><i>Basic specifications</i></p> <p>The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.</p> <p><i>Optional specifications</i></p> <p>The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).</p>	FMI5x, FTI5x	–	*****	+	A*B*C*D*E*F*G*..	<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>
FMI5x, FTI5x	–	*****	+	A*B*C*D*E*F*G*..							
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>							

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Liquicap M



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMI51, FMI52

Basic specifications

Position 1 (Approval)		
Selected option		Description
FMI5x	7	INMETRO Ex ia IIB T* Ga/Gb, Ex ia IIC T* Ga/Gb, Ex ia IIIC T90°C Da/Db IP66

Position 3 (Active Probe length L1; Insulation)		
Selected option		Description
FMI51	A, B, C, D, H, K, M, N mm/in, rod, 316L
	E, F, G, P, R, S mm/in, rod, 316L + ground tube
FMI52	A, B, C, D mm/in, 316

Position 7 (Electronics; Output)		
Selected option		Description
FMI5x	A	FEI50H; 4-20mA HART + display
	B	FEI50H; 4-20mA HART
	C	FEI57C; 2-wire PFM

Position 8 (Housing)		
Selected option		Description
FMI5x	1	F15 316L hygiene IP66/67 NEMA4X
	2	F16 Polyester IP66/67 NEMA4X
	3	F17 Alu IP66/67 NEMA4X
	4	F13 Alu IP66 NEMA4X + gas-tight probe seal
	5	T13 Alu IP66 NEMA4X + gas-tight probe seal + separate conn. compartment
	6	F27 316L IP66/67 NEMA6P + gas-tight probe seal

Position 9 (Cable Entry)		
Selected option		Description
FMI5x	A	Gland M20 (Ex d > thread M20)
	B	Thread G1/2
	C	Thread NPT1/2
	D	Thread NPT3/4
	E	Plug M12
	F	Plug 7/8"

Position 10 (Type of Probe)		
Selected option		Description
FMI5x	1	Compact
	2, 3, 4, 5 mm/in, L4 cable > separate housing

Optional specifications

No options specific to hazardous locations are available.

 The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FTI51, FTI52

Basic specifications

Position 1 (Approval)		
Selected option		Description
FTI5x	7	INMETRO Ex ia IIB T* Ga/Gb, Ex ia IIC T* Ga/Gb, Ex ia IIIC T90°C Da/Db IP66

Position 3 (Active Probe length L1; Insulation)		
Selected option		Description
FTI51	A, B, C, D, H, K, M, N, T, 1 mm/in, rod, 316L
	E, F, G, P, R, S mm/in, rod, 316L + ground tube
FTI52	A, B, C, D mm/in, 316

Position 7 (Electronics; Output)		
Selected option		Description
FTI5x	5	FEI55; 8/16 mA, 11-35 VDC
	7	FEI57S; 2-wire PFM
	8	FEI58; NAMUR + test button (H-L signal)

Position 8 (Housing)		
Selected option		Description
FTI5x	1	F15 316L hygiene IP66/67 NEMA4X
	2	F16 Polyester IP66/67 NEMA4X
	3	F17 Alu IP66/67 NEMA4X
	4	F13 Alu IP66 NEMA4X + gas-tight probe seal
	5	T13 Alu IP66 NEMA4X + gas-tight probe seal + separate conn. compartment
	6	F27 316L IP66/67 NEMA6P + gas-tight probe seal

Position 9 (Cable Entry)		
Selected option		Description
FTI5x	A	Gland M20 (Ex d > thread M20)
	B	Thread G1/2
	C	Thread NPT1/2
	D	Thread NPT3/4
	E	Plug M12
	F	Plug 7/8"

Position 10 (Type of Probe)		
Selected option		Description
FTI5x	1	Compact
	2, 3, 4, 5 mm/in, L4 cable > separate housing

Optional specifications

No options specific to hazardous locations are available.


Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)

Safety instructions: Special conditions

- Avoid electrostatic charging of the probe (e.g. do not rub dry and install outside the filling flow).
- Do not use in areas where electrostatic charge caused by the process can occur.
- In the event of additional or alternative special varnishing on the housing or other metal parts:
 - Observe the danger of electrostatic charging and discharge.
 - Do not rub surfaces with a dry cloth.

Safety instructions: Installation

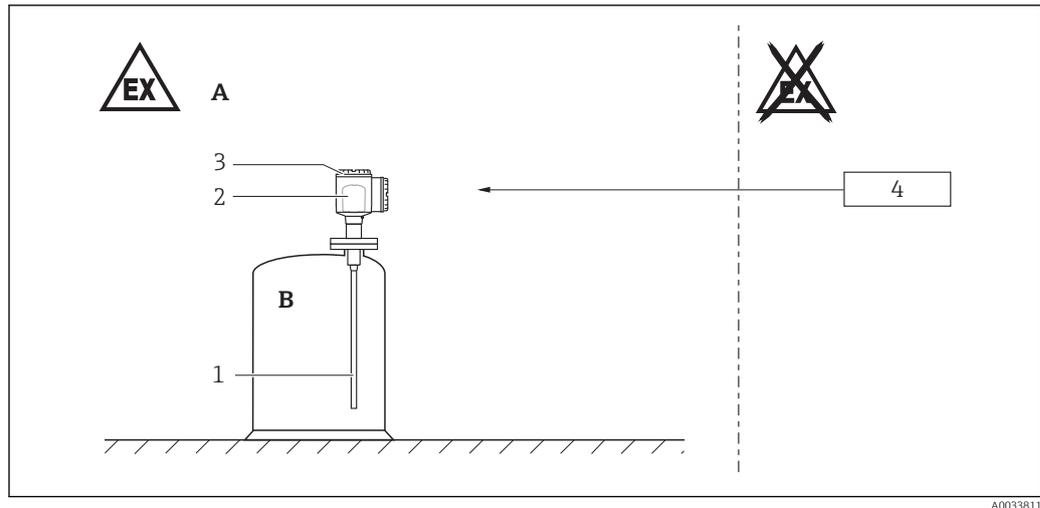

1

- A Zone 1, Zone 21
 B Zone 0, Zone 20
 1 Rope or rod probes
 2 Electronic insert
 3 Housing
 4 Certified associated apparatus

- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.
- Replace cable glands and sealing plugs only with identical parts.
- Perform the following to achieve the degree of protection:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- Mechanically fix probes which are more than 3 m (e.g. using guy ropes).
- Level probes with ground tubes: Suitable for use in Group IIC, IIB, IIA and IIIC, IIIB, IIIA.
- Level probes without ground tubes: Suitable for use in Group IIC, IIB, IIA and IIIC, IIIB, IIIA, if avoiding electrostatic charging of the probe. Designation of the device with warning sign: "Avoid electrostatic charging".
- The device is designed for operation in Zone 1 or Zone 21 (housing) as well as Zone 0 or Zone 20 (probe). In the event of potentially explosive gas-air and dust-air mixtures occurring simultaneously: Suitability requires further assessment.

Basic specification, Position 8 (Housing) = 2

- Only suitable for use in Zone 1!
- Avoid electrostatic charging of the housing (e.g. friction, cleaning, maintenance, strong medium flow).
- Do not clean the transparent cover in an explosive atmosphere.
- Application of a plug is only suitable for gas group IIB.

Basic specification, Position 8 (Housing) = 3, 4, 5

Avoid sparks caused by impact and friction.

Intrinsic safety


Observe the pertinent guidelines when interconnecting intrinsically safe circuits.

Potential equalization

Install potential equalization between the certified associated apparatus (non-hazardous area, \otimes) and the device (explosion-hazardous area, $\triangle EX$).

Overvoltage protection

For installations which require overvoltage protection to comply with national regulations or standards, install the device using overvoltage protection (e.g. HAW56x from Endress+Hauser).

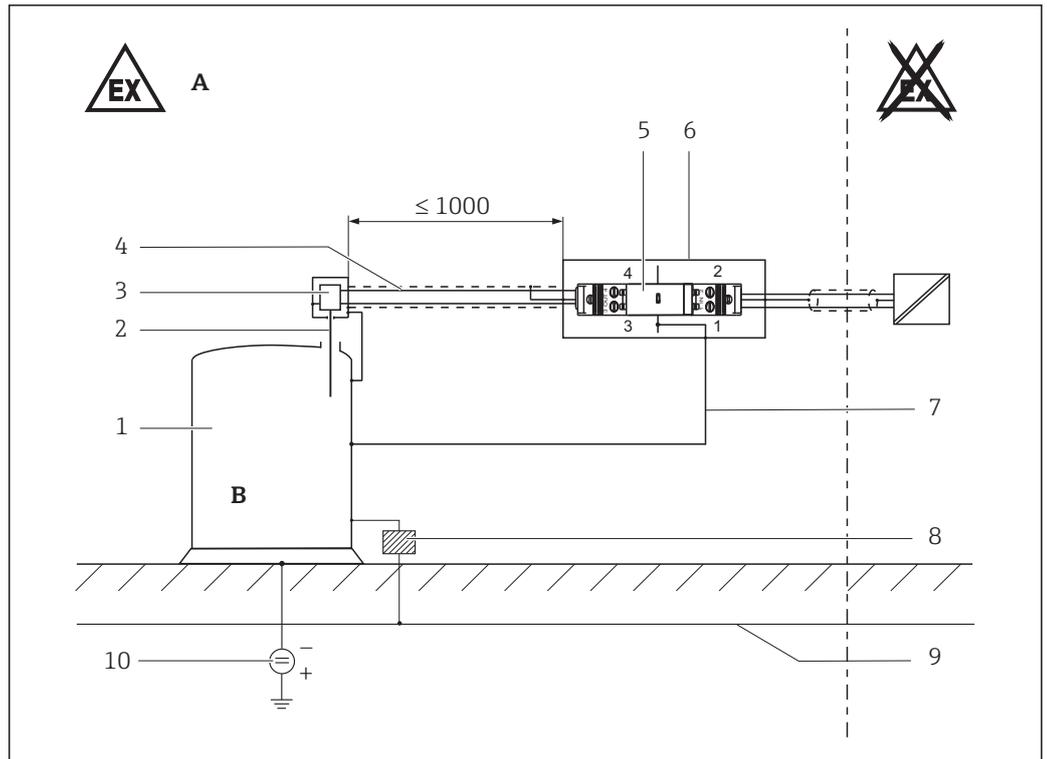

A0032138

2 Dimensions in mm

A Zone 1, Zone 21

B Zone 0, Zone 20

1 Tank

2 Probe

3 Electronic insert

4 e.g. metal hose, metal pipe

5 Overvoltage protection, e.g. HAW56xZ

6 Grounding via top-hat rail or 51003750 metallic protective housing

7 Potential equalization line $\geq 4 \text{ mm}^2 \text{ Cu}$

8 Insulator (optional)

9 Potential equalization

10 Cathodic protection (Object voltage $\leq 24 \text{ V}$), (optional)

Safety instructions: Zone 0

- In the event of potentially explosive vapor-air and/or dust-air mixtures, only operate the device under atmospheric conditions.
 - Temperature: -20 to $+60 \text{ }^\circ\text{C}$
 - Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
 - Air with normal oxygen content, usually 21 % (V/V)
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

Safety instructions: Zone 20, Zone 21

- Seal the cable entry or piping tight.
- Do not open in a potentially explosive dust atmosphere.
- Avoid electrostatic charging of the sensor cable (e.g. do not rub dry and install outside the filling flow).

Zone 21

Only use cable and wire entries suitable for Zone 21 with the degree of protection IP66. Cable and wire entries must be suitable for an ambient temperature of at least -50 to $+90 \text{ }^\circ\text{C}$.

Basic specification, Position 8 (Housing) = 3, 4, 5, 6

Tighten the cover with torque 12 Nm.


Temperature tables

Application in gas:

Type of protection: Ex ia IIC T* Ga/Gb, Ex ia IIB T* Ga/Gb

Basic specification, Position 7 (Electronics; Output)	Ambient temperature T_a (ambient): electronics	Temperature class
A, B	$-50\text{ °C} \leq T_a \leq +60\text{ °C}$	T6
	$-50\text{ °C} \leq T_a \leq +70\text{ °C}$	T3...T5
C	$-50\text{ °C} \leq T_a \leq +60\text{ °C}$	T6
	$-50\text{ °C} \leq T_a \leq +70\text{ °C}$	T3...T5
5	$-50\text{ °C} \leq T_a \leq +55\text{ °C}$	T6
	$-50\text{ °C} \leq T_a \leq +70\text{ °C}$	T3...T5
7	$-50\text{ °C} \leq T_a \leq +55\text{ °C}$	T6
	$-50\text{ °C} \leq T_a \leq +70\text{ °C}$	T3...T5
8	$-50\text{ °C} \leq T_a \leq +60\text{ °C}$	T3...T6
Restrictions for Basic specification, Position 8 (Housing) = 2	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$	T6
	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$ or $+70\text{ °C}$, respectively	T3...T5

Compact version

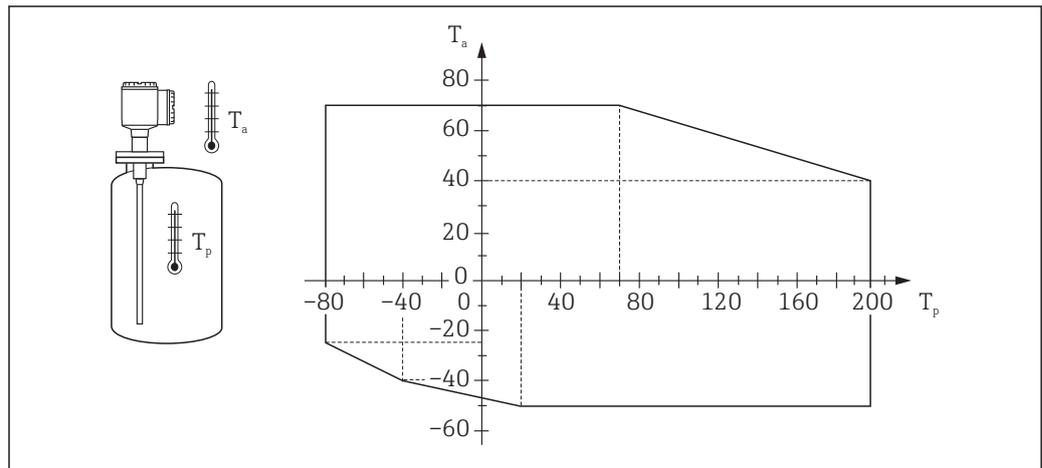


A0032139

3

T_a Ambient temperature in °C

T_p Process temperature in °C

Version with separate housing

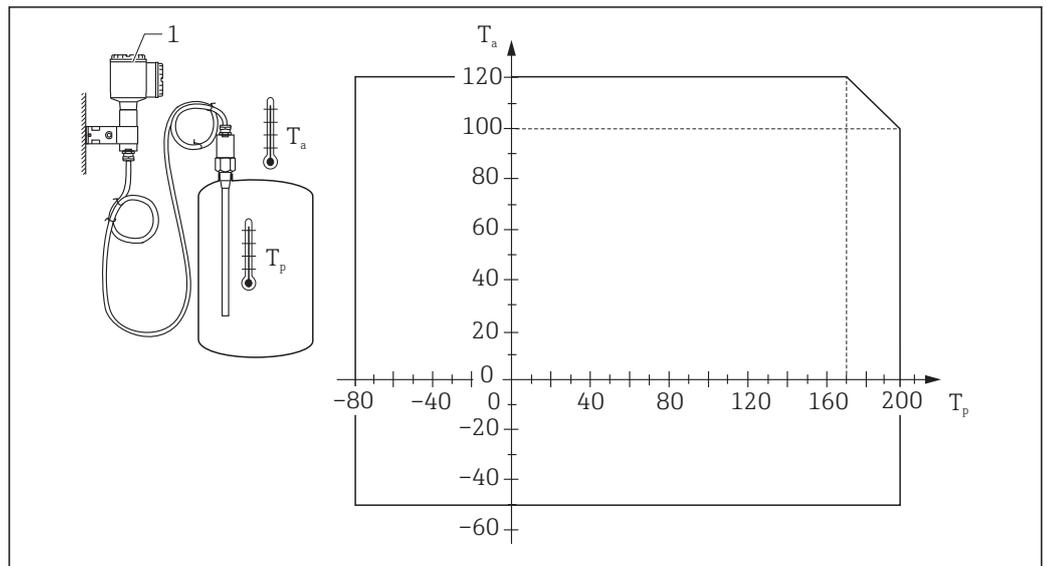

4

T_a Ambient temperature in °C

T_p Process temperature in °C

1 Temperature at Basic specification, Position 10 (Type of Probe) = 2, 3, 4, 5: ≤ 70 °C

Application in dust:

Type of protection: Ex ia IIC T90°C Da/Db IP66

<i>Basic specification, Position 7 (Electronics; Output)</i>	Ambient temperature T_a (ambient): electronics
A, B, C, 5, 7, 8	-50 °C $\leq T_a \leq +70$ °C

	Probe in Zone 20	Electronics housing in Zone 21
Maximum permitted process or ambient temperature	-50 °C $\leq T_p \leq +200$ °C	-50 °C $\leq T_a \leq +70$ °C

	Probe in Zone 20	Electronics housing in Zone 21
Maximum surface temperature at a process temperature or ambient temperature of 40 °C	T40 °C at $T_p = +40$ °C	T60 °C at $T_a = +40$ °C
Maximum surface temperature at a process temperature or ambient temperature of 70 °C	T70 °C at $T_p = +70$ °C	T90 °C at $T_a = +70$ °C
Maximum surface temperature for probe process temperatures ≥ 80 to 200 °C, under compliance of the permitted ambient temperature at the electronics housing, \rightarrow 3, 10, \rightarrow 4, 11	T80 °C at $T_p = +80$ °C	T90 °C at $T_a = +70$ °C
	T200 °C at $T_p = +200$ °C	T90 °C at $T_a = +38$ °C

Connection data

<i>Basic specification, Position 7 (Electronics; Output)</i>	Electrical data
A, B	$U_i \leq 30 \text{ V}$ $I_i \leq 120 \text{ mA}$ $P_i \leq 1 \text{ W}$ $L_i = \text{negligible}$ $C_i \leq 2.4 \text{ nF}$
C	$U_i \leq 19.2 \text{ V}$ $I_i \leq 108 \text{ mA}$ $P_i \leq 1 \text{ W}$ $L_i = \text{negligible}$ $C_i \leq 2.4 \text{ nF}$
5	$U_i \leq 36 \text{ V}$ $I_i \leq 100 \text{ mA}$ $P_i \leq 1 \text{ W}$ $L_i = \text{negligible}$ $C_i \leq 2.4 \text{ nF}$
7	$U_i \leq 16.1 \text{ V}$ $I_i \leq 100 \text{ mA}$ $P_i \leq 1 \text{ W}$ $L_i = \text{negligible}$ $C_i \leq 2.4 \text{ nF}$
8	$U_i \leq 18 \text{ V}$ $I_i \leq 52 \text{ mA}$ $P_i \leq 170 \text{ mW}$ $L_i = \text{negligible}$ $C_i = \text{negligible}$





71466807

www.addresses.endress.com
