Safety Instructions **Minicap FTC262**

ATEX: II 1/2 D

Ex ia/tb [ia Da] IIIC T_{200} 108°C T91°C Da/Db IECEx: Ex ia/tb [ia Da] IIIC T_{200} 108°C T91°C Da/Db







Minicap FTC262

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	5
Other standards	5
Extended order code	5
Safety instructions: General	7
Safety instructions: Special conditions	7
Safety instructions: Installation	8
Temperature tables	8
Connection data	9

XA00092F-D Minicap FTC262

About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
 www.endress.com -> Downloads -> Manuals and Datasheets ->
 Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features



If not yet available, the document can be ordered.

Associated documentation

This document is an integral part of the following Operating Instructions:

TI00287F/00, KA00155F/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z
- On the CD for devices with CD-based documentation

Manufacturer's certificates

EU Declaration of Conformity

Declaration Number: EG00006

The EU Declaration of Conformity is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Declaration -> Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number: KEMA 99 ATEX 5112 X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number: IECEx DEK 20.0051X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

IEC 60079-0:2017IEC 60079-11:2011IEC 60079-31:2013

Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTC262	_ ********	+	A*B*C*D*E*F*G*
(Device type)	(Basic specifications)		(Optional specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of

XA00092F-D Minicap FTC262

> positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Minicap



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type FTC262

Basic specifications

Position 1 (Approval)			
Selected option Description			
FTC262 B ATEX II 1/2 D Ex ia/tb [ia Da] IIIC T ₂₀₀ 108°C T91°C Da/Db		ATEX II 1/2 D Ex ia/tb [ia Da] IIIC T ₂₀₀ 108°C T91°C Da/Db	
C IECEx Ex ia/tb [ia Da] IIIC T ₂₀₀ 108°C T91°C Da/Db			

Position 4 (Switch Output)		
Selected option Description		Description
FTC262 2		3-wire PNP 10.8-45VDC
4 Relay 20-253VAC/20-55VDC		

Position 5 (Housing, Cable Entry)			
Selected option Description			
FTC262 H F34 Alu IP66; thread NPT1/2, NEMA Type 4 Encl.			
I F34 Alu IP66; thread G1/2, NEMA Type 4 Encl.		F34 Alu IP66; thread G1/2, NEMA Type 4 Encl.	
	J	F34 Alu IP66; gland M20, NEMA Type 4 Encl.	

Position 6 (Additional Option)			
Selected option Description		Description	
FTC262 1 B		Basic version	
3 Glass inspection window, aluminium			

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General


- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)

Safety instructions: Special conditions

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.

XA00092F-D Minicap FTC262

Safety instructions: Installation

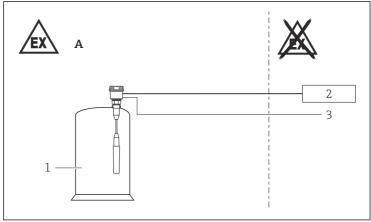

A0033923

1

- A Zone 21
- 1 Tank; Hazardous area Zone 20
- 2 Power supply or switching unit
- 3 Potential equalization
- The intrinsically safe signal circuit is grounded: For this reason
 potentials must be equalised along the route of the cable (inside and
 outside of the explosion hazardous area).
- After mounting and connecting the sensor, check that a degree of protection of at least IP66 has been achieved (screw lid tight, mount cable glands correctly).

Temperature tables

Thermal performance limits				
Temperature of the sensor (Zone 20)	Permissible process temperature	−40 to +80 °C		
	Maximum surface temperature			
	at an ambient temperature of 40 °C	68°C		
	at an ambient temperature of 80 °C	108℃		
Temperature of the electronics	Permissible ambient temperature	−40 to +60 °C		
enclosure (Zone 21)	Maximum surface temperature			
	at an ambient temperature of 40 °C	71°C		
	at an ambient temperature of 60 °C	91℃		


Degree of ingress protection		
Sensor (Zone 20)	IP66	
Electronics enclosure (Zone 21)	IP66	

Connection data

Electrical performance limits				
Basic specification, Position 4 = 4 (AC/DC relay version)	Maximum operating voltage	20 to 253 V_{AC} , 50/60 Hz or 20 to 55 V_{DC}		
	Current consumption	max. 2 W		
	Relay circuit	253 V _{AC} / 4 A / 1000 VA or 253 V _{DC} / 0.2 A / 50 W or 30 V _{DC} / 4 A / 120 W		
	Fuse	500 mA		
Basic specification, Position 4 = 2 (DC PNP version)	Maximum operating voltage	10.8 to 45 V _{DC}		
	Current consumption	max. 1.5 W		
	Switch output (PNP)			
	Current	max. 200 mA		
	Switching capacity	9 W		

Mechanical performance limits				
On rope	Maximum pull-down forces			
	at room temperature and at -40 °C 3 000 N			
	at +80 °C	2 800 N		

XA00092F-D Minicap FTC262

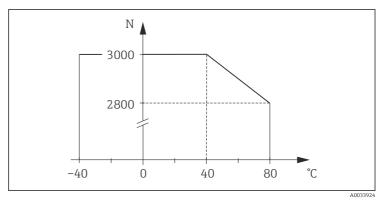

₽ 2

Cable entry: Connection compartment Ex tb

Cable gland: *Basic specification, Position* 5 = J

preferably

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 8 to 10.5 mm ¹⁾ (ø 6.5 to 13 mm) ²⁾	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

- 1) Standard
- 2) Separate clamping inserts available

alternatively

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)



- The tightening torque refers to cable glands installed by the manufacturer:
 - Recommended: 3.5 Nm
 - Maximum: 10 Nm
- This value may be different depending on the type of cable.
 However, the maximum value must not be exceeded.

 Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.

- The cable glands are suitable for a low risk of mechanical danger (4 Joule) and must be mounted in a protected position if larger impact energy levels are expected.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.



www.addresses.endress.com