# Technical Information iTHERM ModuLine TM111

Trend-setting, robust and modular thermometer for direct measurement, for use in a wide range of industrial applications

# Easy-to-use metric version with superior RTD or TC sensor technology. Direct installation without a thermowell

#### Application

- For universal use
- Measuring range: -200 to +1100 °C (-328 to +2012 °F)
- Pressure range: up to 75 bar (1088 psi)

#### Head transmitter

Endress+Hauser transmitters are available with enhanced accuracy and reliability compared to directly wired sensors. With a choice of the following outputs and communication protocols, they are easily customized to your measuring task:

- Analog output 4 to 20 mA, HART<sup>®</sup> HART<sup>®</sup> SIL transmitter, optional
- PROFIBUS<sup>®</sup> PA, FOUNDATION Fieldbus<sup>™</sup>
- PROFINET<sup>®</sup> with Ethernet-APL

#### Your benefits

- User-friendly and reliable from product selection to maintenance
- iTHERM inserts: globally unique, automated production. Full traceability and consistently high product quality for reliable measured values
- iTHERM QuickSens: fastest response times of 1.5 sfor optimum process control
- iTHERM StrongSens: unsurpassed vibration resistance (> 60g) for ultimate plant safety
- International certification: explosion protection according to ATEX, IECEx, CSA and NEPSI
- Bluetooth<sup>®</sup> connectivity (optional)





# Table of contents

<b>Function and system design</b>	3
applications	4
Input	
Output	<b>7</b> 7 7
Power supply	<b>8</b> 10 14
Performance characteristics	<b>15</b> 15 15 16 16 16 17
Installation         Orientation         Installation instructions	<b>17</b> 17 18
Environment	<ol> <li>18</li> <li>18</li> <li>18</li> <li>18</li> <li>19</li> <li>19</li> </ol>
Process	<b>19</b> 19 19
Mechanical construction	<b>19</b> 22 22 24 26 26 26

Certificates and approvals	32
Test on thermowell	32
MID	32
Ordering information	32
	22
A	22
Accessories	
Service-specific accessories	32
Supplementary documentation	33

## Function and system design


iTHERM ModuLine thermometer for general applications This thermometer is part of the product line of modular thermometers for industrial applications.

Differentiating factors when selecting a suitable thermometer




#### Advanced technology

"Advanced" thermometers offer cutting-edge technology with features such as a replaceable insert, quickfastening extension neck (iTHERM QuickNeck), vibration-resistant and fast-response sensor technology (iTHERM StrongSens and QuickSens) and safety features like approvals for use in hazardous areas, second process seal "Dual Seal" or SIL thermometers

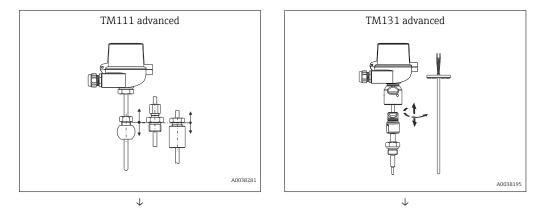

#### Basic technology

"Basic" thermometers are characterized by basic sensor technology and are a low-cost alternative to thermometers with cutting-edge technology. The insert is not always replaceable. Application only in the non-hazardous area.

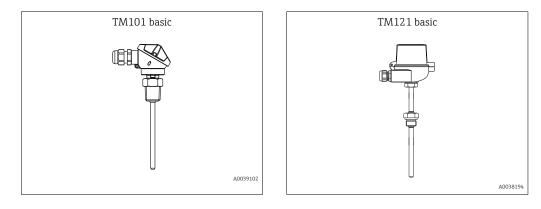

#### Measuring principle

#### **Resistance thermometer (RTD)**

These resistance thermometers use a Pt100 temperature sensor according to IEC 60751. The temperature sensor is a temperature-sensitive platinum resistor with a resistance of 100  $\Omega$  at 0 °C (32 °F) and a temperature coefficient  $\alpha$  = 0.003851 °C<sup>-1</sup>.

#### There are generally two different kinds of platinum resistance thermometers:

- Wire wound (WW): Here, a double coil of fine, high-purity platinum wire is located in a ceramic support. This is then sealed top and bottom with a ceramic protective layer. Such resistance thermometers not only facilitate very reproducible measurements but also offer good long-term stability of the resistance/temperature characteristic within temperature ranges up to 600 °C (1112 °F). This type of sensor is relatively large in size and it is comparatively sensitive to vibrations.
- Thin film platinum resistance thermometers (TF): A very thin, ultrapure platinum layer, approx. 1 µm thick, is vaporized in a vacuum on a ceramic substrate and then structured photolithographically. The platinum conductor paths formed in this way create the measuring resistance. Additional covering and passivation layers are applied and reliably protect the thin platinum layer from contamination and oxidation, even at high temperatures.

The primary advantages of thin film temperature sensors over wire wound versions are their smaller sizes and better vibration resistance. A relatively low principle-based deviation of the resistance/ temperature characteristic from the standard characteristic of IEC 60751 can frequently be observed among TF sensors at high temperatures. As a result, the tight limit values of tolerance category A as per IEC 60751 can only be observed with TF sensors at temperatures up to approx. 300 °C (572 °F).

#### Thermocouples (TC)


Thermocouples are comparatively simple, robust temperature sensors which use the Seebeck effect for temperature measurement: if two electrical conductors made of different materials are connected at a point, a weak electrical voltage can be measured between the two open conductor ends if the conductors are subjected to a thermal gradient. This voltage is called thermoelectric voltage or electromotive force (emf.). Its magnitude depends on the type of conducting materials and the temperature difference between the "measuring point" (the junction of the two conductors) and the "cold junction" (the open conductor ends). Accordingly, thermocouples primarily only measure differences in temperature. The absolute temperature at the measuring point can be determined from these if the associated temperature at the cold junction is known or is measured separately and compensated for. The material combinations and associated thermoelectric voltage/temperature characteristics of the most common types of thermocouple are standardized in the IEC 60584 and ASTM E230/ANSI MC96.1 standards.

#### Measuring system

Endress+Hauser offers a complete portfolio of optimized components for the temperature measuring point – everything you need for the seamless integration of the measuring point into the overall facility. This includes:


- Power supply unit/barrier
- Display units
- Overvoltage protection

For more information, see the brochure "System Components - Solutions for a Complete Measuring Point" (FA00016K)

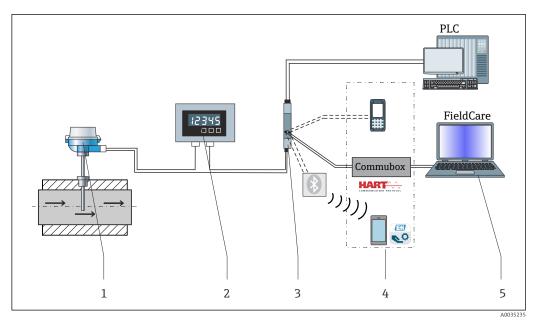

- 1 Example of application, measuring point layout with additional Endress+Hauser components
- 1 Installed iTHERM thermometer with HART<sup>®</sup> communication protocol
- 2 RIA15 loop powered process display It is integrated in the current loop and displays the measuring signal or HART<sup>®</sup> process variables in digital form. The process display unit does not require an external power supply. It is powered directly from the current loop. More information on this can be found in the Technical Information, see "Documentation".
- 3 Active barrier RN42 The RN42 (17.5 V<sub>DC</sub>, 20 mA) active barrier has a galvanically isolated output for supplying voltage to loop-powered transmitters. The universal power supply works with an input supply voltage of 24 to 230 V AC/DC, 0/50/60 Hz, which means that it can be used in all international power grids. More information on this can be found in the Technical Information, see "Documentation".
- 4 Communication examples: HART<sup>®</sup> Communicator (handheld terminal), FieldXpert, Commubox FXA195 for intrinsically safe HART<sup>®</sup> communication with FieldCare via the USB interface, Bluetooth<sup>®</sup> technology with SmartBlue App.
- 5 FieldCare is a FDT-based plant asset management tool from Endress+Hauser, for details see section "accessories".

#### Modular design

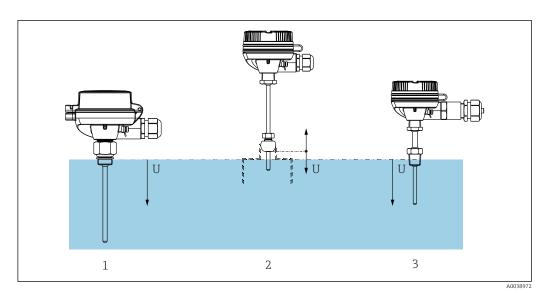

- 2 The thermometer is designed for direct process installation.
- 1 Threaded process connection without lagging
- 2 Weld-in adapter, spherical or cylindrical version
- 3 With extension neck and threaded process connection

Construction		Options
	1: Terminal head	<ul> <li>Variety of terminal heads made of aluminum, polyamide or stainless steel</li> <li>Your benefits:         <ul> <li>Optimum terminal access thanks to low housing edge of bottom section:                 <ul> <li>Easier to use</li> <li>Lower installation and maintenance costs</li> <li>Optional display: local process display for added reliability</li> </ul> </li> </ul> </li> </ul>
1	2: Wiring, electrical connection, output signal	<ul> <li>Ceramic terminal block</li> <li>Flying leads</li> <li>Head transmitter (4 to 20 mA, HART<sup>®</sup>, PROFINET<sup>®</sup> with Ethernet-APL, PROFIBUS<sup>®</sup> PA, FOUNDATION™ Fieldbus), single-channel or two-channel</li> <li>Attachable display</li> </ul>
	3: Plug or cable gland	<ul> <li>PROFIBUS<sup>®</sup> plug PA/FOUNDATION™ Fieldbus/PROFINET<sup>®</sup>, 4- pin</li> <li>8-pin plug</li> <li>Polyamide or brass cable glands</li> </ul>
	4: Lagging	<ul> <li>Different options are available for the lagging</li> <li>Without extension (versions without fixed process connection)</li> <li>Defined extension (minimum available extension for fixed process connections)</li> <li>Extension welded in place (selectable lengths)</li> </ul>
5	5: Process connection	Variety of process connections including threads, cap nuts and compression fittings
	6: Insert 6a: iTHERM QuickSens 6b: iTHERM StrongSens	The sheath of the insert is in direct contact with the process medium and does not have to be inserted into a thermowell. The process connection is welded to the insert. The insert is not replaceable and not spring-loaded. However, if a compression fitting is used as the process connection, the insert can be replaced. Sensor models: RTD - wire wound (WW), thin-film sensor (TF) or thermocouples type K, J or N. Insert diameter $Ø3 \text{ mm} (\frac{1}{6} \text{ in})$ or $Ø6 \text{ mm} (\frac{1}{4} \text{ in})$ , depending on thermowell tip or selected thermometer
A038973		<ul> <li>Your benefits:         <ul> <li>iTHERM QuickSens - insert with the world's fastest response time:                 <ul> <li>Insert: Ø3 mm (¼ in) or Ø6 mm (¼ in)</li> <li>Fast, highly accurate measurements, delivering maximum process safety and control</li> <li>Quality and cost optimization</li></ul></li></ul></li></ul>

Measured variable	Temperature (temperature-linear transmission behavior)										
Measuring range	Depends on the type of sensor used										
	Sensor type	Measuring range									
	Pt100 thin-film	–50 to +400 °C (–58 to +752 °F)									
	Pt100 thin-film, iTHERM StrongSens, vibration- resistant > 60g	−50 to +500 °C (−58 to +932 °F)									
	Pt100 thin-film, iTHERM QuickSens, fast-response	−50 to +200 °C (−58 to +392 °F)									
	Pt100 wire wound, extended measuring range	-200 to +600 °C (-328 to +1112 °F)									
	Thermocouple TC, type J	-40 to +750 °C (-40 to +1382 °F)									
	Thermocouple TC, type K	-40 to +1100 °C (-40 to +2012 °F)									
	Thermocouple TC, type N										

# Input

# Output

Output signal	Generally, the measured value can be transmitted in one of two ways:						
	<ul> <li>Directly-wired sensors - sensor measured values forwarded without a transmitter.</li> <li>By selecting the corresponding Endress+Hauser iTEMP temperature transmitter via all commo protocols. All the transmitters listed below are mounted directly in the terminal head and wire with the sensory mechanism.</li> </ul>						
Family of temperature transmitters	Thermometers fitted with iTEMP transmitters are an installation-ready complete solution to improve temperature measurement by significantly increasing accuracy and reliability, when compared to direct wired sensors, as well as reducing both wiring and maintenance costs.						
	<b>4 to 20 mA head transmitters</b> They offer a high degree of flexibility, thereby supporting universal application with low inventory storage. The iTEMP transmitters can be configured quickly and easily at a PC. Endress+Hauser offers free configuration software which can be downloaded from the Endress+Hauser Website.						
	<b>HART<sup>®</sup> head transmitters</b> The transmitter is a 2-wire device with one or two measuring inputs and one analog output. The device not only transfers converted signals from resistance thermometers and thermocouples, it also transfers resistance and voltage signals using HART <sup>®</sup> communication. Swift and easy operation, visualization and maintenance using universal configuration software like FieldCare, DeviceCare or FieldCommunicator 375/475. Integrated Bluetooth <sup>®</sup> interface for the wireless display of measured values and configuration via E+H SmartBlue (app), optional.						
	<b>PROFIBUS® PA head transmitters</b> Universally programmable head transmitter with PROFIBUS® PA communication. Conversion of various input signals into digital output signals. High accuracy over the complete ambient temperature range. PROFIBUS PA functions and device-specific parameters are configured via fieldbus communication.						
	<b>FOUNDATION Fieldbus™ head transmitters</b> Universally programmable head transmitter with FOUNDATION Fieldbus™ communication. Conversion of various input signals into digital output signals. High accuracy over the complete ambient temperature range. All transmitters are approved for use in all the main distributed control systems. The integration tests are performed in Endress+Hauser's 'System World'.						
	<b>Head transmitter with PROFINET® and Ethernet-APL</b> The temperature transmitter is a 2-wire device with two measuring inputs. The device not only transfers converted signals from resistance thermometers and thermocouples, it also transfers resistance and voltage signals using the PROFINET® protocol. Power is supplied via the 2-wire						

Ethernet connection according to IEEE 802.3cg 10Base-T1. The transmitter can be installed as an intrinsically safe electrical apparatus in Zone 1 hazardous areas. The device can be used for instrumentation purposes in the terminal head form B (flat face) according to DIN EN 50446.

Advantages of the iTEMP transmitters:


- Dual or single sensor input (optionally for certain transmitters)
- Attachable display (optionally for certain transmitters)
- Unsurpassed reliability, accuracy and long-term stability in critical processes
- Mathematical functions
- Monitoring of the thermometer drift, sensor backup functionality, sensor diagnostic functions
- Sensor-transmitter-matching for dual-channel transmitters, based on the Callendar van Dusen coefficients (CvD).

## Power supply

The sensor connection wires are equipped with terminal lugs. The nominal diameter of a lug is 1.3 mm (0.05 in)


#### Terminal assignment

#### Type of sensor connection RTD

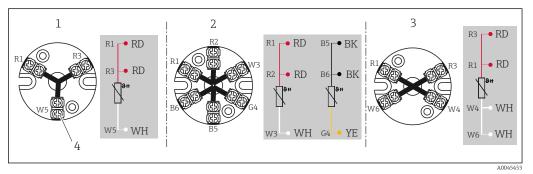

#### E 3 Terminal block mounted


- 1 3-wire, single
- 2 2 x 3-wire, single
- 3 4-wire, single
- 4 Outside screw

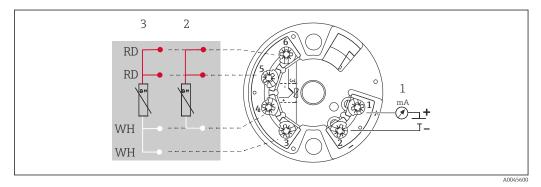

I Head mounted transmitter TMT18x (single input)

- 1 Power supply head transmitter and analog output 4 to 20 mA or fieldbus connection
- 2 RTD, 3-wire
- 3 RTD, 4-wire


Only available with screw terminals

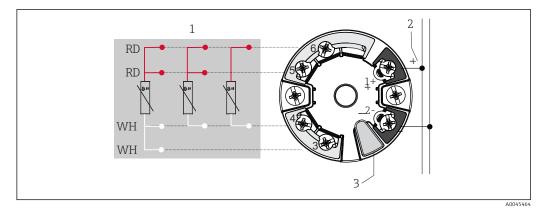

■ 5 Head mounted transmitter TMT7x or TMT31 (single input)

- 1 Sensor input, RTD and  $\Omega$ : 4-, 3- and 2-wire
- 2 Power supply or fieldbus connection
- 3 Display connection/CDI interface

Fitted with spring terminals if screw terminals are not explicitly selected or a double sensor is installed

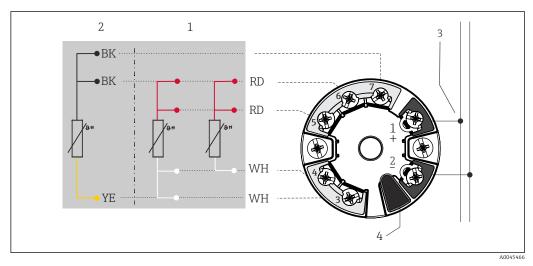


■ 6 Head mounted transmitter TMT8x (dual input)


- 1 Sensor input 1, RTD: 4- and 3-wire
- 2 Sensor input 2, RTD: 3-wire
- 3 Power supply or fieldbus connection
- 4 Display connection

Fitted with spring terminals if screw terminals are not explicitly selected or a double sensor is installed.

Type of sensor connection thermocouple (TC)

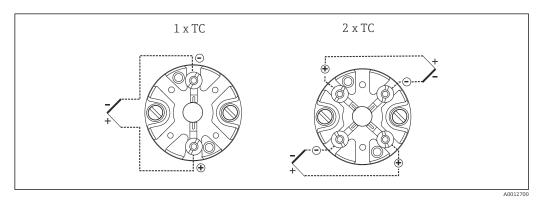

7 Terminal block mounted

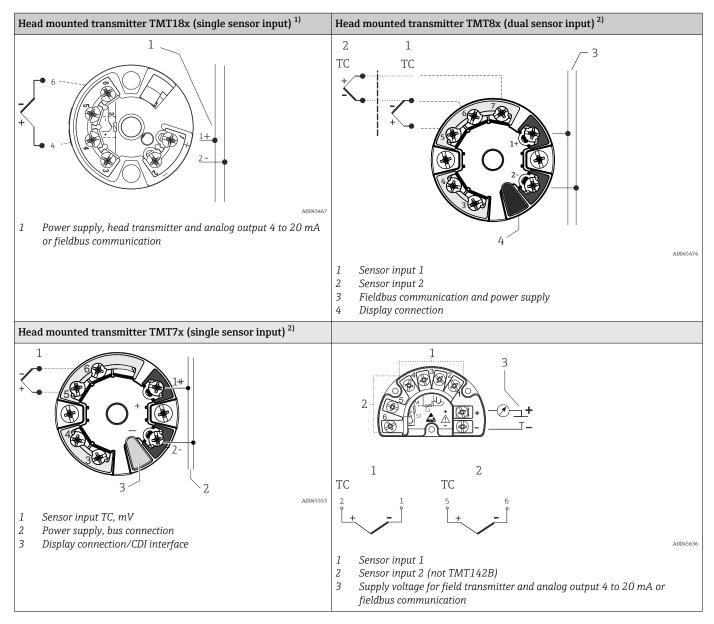

1) Fitted with screw terminals

2) Fitted with spring terminals if screw terminals are not explicitly selected or a double sensor is installed.

Thermocouple wire colors

As per IEC 60584	As per ASTM E230	
<ul> <li>Type J: black (+), white (-)</li> <li>Type K: green (+), white (-)</li> <li>Type N: pink (+), white (-)</li> </ul>	<ul> <li>Type J: white (+), red (-)</li> <li>Type K: yellow (+), red (-)</li> <li>Type N: orange (+), red (-)</li> </ul>	

#### **Cable entries**

#### See "Terminal heads" section

The cable entries must be selected during the configuration of the device. Different terminal heads offer different possibilities with regard to threads and the number of available cable entries.

#### Connectors

Endress+Hauser offers a wide variety of connectors for the simple and fast integration of the thermometer into a process control system. The following tables show the PIN assignments of the various plug connector combinations.

We do not recommend connecting thermocouples directly to connectors. The direct connection to the pins of the plug might generate a new 'thermocouple' which influences the accuracy of the measurement. Therefore we do not connect thermocouples directly to connectors. The thermocouples are connected in combination with a transmitter.

#### Abbreviations

#1	Order: first transmitter/insert	#2	Order: second transmitter/insert
i	Insulated. Wires marked " are not connected and are insulated with heat shrink tubes.	YE	Yellow
GND	Grounded. Wires marked 'GND' are connected to the internal grounding screw in the terminal head.	RD	Red
BN	Brown	WH	White
GNYE	Green-yellow	PK	Pink
BU	Blue	GN	Green
GY	Gray	BK	Black

#### Terminal head with one cable entry

Plug			1	x PROF	TIBUS PA	ł		1x FO	UNDATI (F		eldbus	1x PROFINET and Ethernet- APL					
Plug thread		M	12			7/	8"		7/8"				M12				
PIN number	1	2	3	4	1	2	3	4	1	2	3	4	1	2	3	4	
Electrical connection (	Electrical connection (terminal head)																
Flying leads and TC	d TC Not connected (not insulated)																
3-wire terminal block (1x Pt100)	RD RD		w	Н			W	Н	RD		W	/Ή			W	/H	
4-wire terminal block (1x Pt100)	RD	RD	WH	WH RD	RD	) RD -	WH	WH	RD	RD -	WH	WH	RD	RD	WH	WH	
6-wire terminal block (2x Pt100)	RD (#1) <sup>1</sup>	RD (#1)	WH (#1)		RD (#1)	RD (#1)	WH	WH (#1)		RD (#1) WH (#1)				WH (#1)			
1x TMT 4 to 20 mA or HART®	+	i	-	i	+	i	-	i	+	i	-	i	+	i	-	i	
2x TMT 4 to 20 mA or HART® in the terminal head with a high cover	+(#1)	+(#2)	-(#1)	- (#2)	+(#1)	+(#2)	-(#1)	- (#2)	+(#1)	+(#2)	-(#1)	-(#2)	+(#1)	+(#2)	-(#1)	-(#2)	
1x TMT PROFIBUS® PA	+		-	GND	+		-	GND						,			
2x TMT PROFIBUS® PA	+(#1)	i	-(#1)	2)	+	i	-	2)			Li	annot de	combin	ea			
1x TMT FF			1			1	I	1	-	+						,	
2x TMT FF									-(#1)	+(#1)	GND	i	La Ca	annot be	combin	ea	
1x TMT PROFINET®	Cannot be combined				Ca	nnot be	combine	ed	Ca	annot be	combin	ed	APL signal -	APL signal +	GND	i	

Plug	1x PROF	TBUS PA	1x FOUNDATION™ Fieldbus (FF)	1x PROFINET and Ethernet- APL			
2x TMT PROFINET®				APL signal - (#1) APL signal + (#1)			
PIN position and color code	4 3 3 3 4 3 8 4 3 8 4 3 8 4 3 8 4 6 9 2 6 9 2 6 9 2 6 9 1 8 1 8 1 8 1 8 1 8 1 8 1 8 1 9 1 1 1 1 1 1 1 1 1 1 1 1 1	1 0 0 1 1 BN 2 GNYE 3 BU 2 4 GY 4 0018930	1 0 0 1 BU 2 BN 3 GY 2 0 4 GNYE A0018931	4 • • • 3 1 RD 2 GN 4 • • • 2 2 A0052119			

1) Second Pt100 is not connected

2) If using a head without a grounding screw, e.g. plastic housing TA30S or TA30P, insulated 'i' instead of grounded GND

#### Terminal head with one cable entry (continued)

Plug				4-pin	/ 8-pin								
Plug thread				М	12								
PIN number	1	2	3	4	5	6	7	8					
Electrical connection (terminal head)													
Flying leads and TC		Not connected (not insulated)											
3-wire terminal block (1x Pt100)			V	ЛН			:						
4-wire terminal block (1x Pt100)	RD	RD WH WH		- i									
6-wire terminal block (2x Pt100)	-		V	WH		BK	У	Æ					
1x TMT 4 to 20 mA or HART®							i						
2x TMT 4 to 20 mA or HART <sup>®</sup> in the terminal head with a high cover	+(#1)	i	-(#1)	i	+(#2)	i	-(#2)	i					
1x TMT PROFIBUS® PA					1. 1								
2x TMT PROFIBUS® PA	-			Cannot be	combined								
1x TMT FF				<b>C</b> 11	1. 1								
2x TMT FF	-			Cannot be	combined								
1x TMT PROFINET®				Cannot be	combined								
2x TMT PROFINET®				Cannot be	combined								
PIN position and color code	e 8	$\begin{array}{c} 4 \\ \bullet \\ \bullet \\ 1 \\ \bullet \\ 2 \\ 4 \\ GY \\ \end{array}$						A0018927					

Terminal head with two cable entries

Plug	2x PROFIBUS® PA									FOUNI Fieldbu		тм	2x PROFINET and Ethernet-APL				
Plug thread																	
#1-0-#2	M12(#1) / M12(#2)				7	/8"(#1).	/7/8"(#2	2)	7	/8"(#1)/	7/8"(#2	2)	M12 (#1)/M12 (#2)				
PIN number	1	2	3	4	1	2	3	4	1	2	3	4	1	2	3	4	

Plug			2:	x PROF	IBUS® P	A	2x FOUNDATION™ Fieldbus (FF)				2x PROFINET and Ethernet-APL								
Electrical connection (termi	inal hea	ad)																	
Flying leads and TC							Not co	nnected	(not ins	sulated)									
3-wire terminal block (1x Pt100)	RD/i	RD/i	W	H/i	RD/i	RD/i	W	H/i	RD/i	RD/i	W.	H/i	RD/i	RD/i	W	H/i			
4-wire terminal block (1x Pt100)		KD/1	WH/i	WH/i		KD/1	WH/i	WH/i	KD/I	KD/1	WH/i	WH/i		KD/1	WH/i	WH/i			
6-wire terminal block (2x Pt100)	RD/B K	RD/B K	WH	I/YE	RD/B K	RD/B K	WH	I/YE	RD/B K	RD/B K	WH	I/YE	RD/B K	RD/B K	WH	I/YE			
1x TMT 4 to 20 mA or HART®	+/i		-/i		+/i		-/i		+/i		-/i		+/i		-/i				
2x TMT 4 to 20 mA or HART <sup>®</sup> in the terminal head with a high cover	+ (#1)/ + (#2)	i/i	- (#1)/ -(#2)	i/i	+ (#1)/ + (#2)	i/i	- (#1)/ -(#2)	i/i	+ (#1)/ + (#2)	i/i	- (#1)/ -(#2)	i/i	+ (#1)/ +(#2)	i/i	- (#1)/ -(#2)	i/i			
1x TMT PROFIBUS® PA	+/i		-/i		+/i		-/i			1		1	1		1	1			
2x TMT PROFIBUS® PA	+ (#1)/ + (#2)	-	- (#1)/ -(#2)	GND/ GND	+ (#1)/ + (#2)		- (#1)/ -(#2)	GND/ GND	Cannot be combined										
1x TMT FF				1				1	-/i	+/i									
2x TMT FF	Ca	nnot be	combin	ied	Cannot be combined				- (#1)/ -(#2)	+ (#1)/ + (#2)	i/i	GND/ GND	Ca	nnot be	combin	ed			
1x TMT PROFINET®	Ca	nnot be	combin	ied	Ca	nnot be	combir	ied	Cannot be combined				APL signal -	APL signa l+					
2x TMT PROFINET®	Ca	nnot be	combin	ed	Ca	Cannot be combined			Cannot be combined				APL signal - (#1) and (#2)	APL signa l+ (#1) and (#2)	GND	i			
PIN position and color code	4		1 BN 2 GI 3 BU 4 GY	NYE J	1		1 BN 2 GI 3 BU 4 G	NYE J	1		1 BU 2 BN 3 G 4 GI	V Y	4		3 1 R 2 C				

#### Terminal head with two cable entries (continued)

Plug	4-pin / 8-pin				
Plug thread					
#1-0-#2	M12 (#1)/M12 (#2)				
PIN number	1 2 3 4 5 6 7 8				8
Electrical connection (termi	Electrical connection (terminal head)				
Flying leads and TC	Not connected (not insulated)				
3-wire terminal block (1x Pt100)	RD/i	RD/i WH/i i/i			

Plug	4-pin / 8-pin				
4-wire terminal block (1x Pt100)			WH/i	WH/i	
6-wire terminal block (2x Pt100)	RD/BK	RD/BK	WH	I/YE	
1x TMT 4 to 20 mA or HART®	+/i		-/i		
2x TMT 4 to 20 mA or HART® in the terminal head with a high cover	+(#1)/+(#2)	i/i	-(#1)/-(#2)	i/i	
1x TMT PROFIBUS® PA				Commothe asy	mbin od
2x TMT PROFIBUS® PA	Cannot be combined				
1x TMT FF				Cannot be cor	mbined
2x TMT FF	Cannot be combined				
1x TMT PROFINET®	Cannot be combined				
2x TMT PROFINET®	Cannot be combined				
PIN position and color code	<b>1</b> 0	4 • • 3 1 • • 2 4-p	1 BN 2 GNYE 3 BU 4 GY in plug	A0018929	3 GN 2 BN 4 YE 6 PK 7 BU 5 GY 6 PK 7 BU 8-pin plug

Connection combination: insert - transmitter

	Transmitter connection <sup>1)</sup>				
Insert	TMT180	/TMT7x	TMT8x		
	1x 1-channel	2x 1-channel	1x 2-channel	2x 2-channel	
1x sensor (Pt100 or TC), flying leads	Sensor (#1) : transmitter (#1)	Sensor (#1) : transmitter (#1) (Transmitter (#2) not connected)	Sensor (#1) : transmitter (#1)	Sensor (#1) : transmitter (#1) Transmitter (#2) not connected	
2x sensor (2x Pt100 or 2x TC), flying leads	Sensor (#1) : transmitter (#1) Sensor (#2) insulated	Sensor (#1) : transmitter (#1) Sensor (#2): transmitter (#2)	Sensor (#1) : transmitter (#1) Sensor (#2): transmitter (#1)	Sensor (#1) : transmitter (#1) Sensor (#2): transmitter (#1) (Transmitter (#2) not connected)	
1x sensor (Pt100 or TC), with terminal block <sup>2)</sup>	Sensor (#1) : transmitter in cover		Sensor (#1) : transmitter in cover		
2x sensor (2x Pt100 or 2x TC) with terminal block	Sensor (#1) : transmitter in cover Sensor (#2) not connected	Cannot be combined	Sensor (#1) : transmitter in cover Sensor (#2): transmitter in cover	Cannot be combined	

 If 2 transmitters are selected in a terminal head, transmitter (#1) is installed directly on the insert. Transmitter (#2) is installed in the high cover. A TAG cannot be ordered for the 2nd transmitter as standard. The bus address is set to the default value and, if necessary, must be changed manually before commissioning.

2) Only in the terminal head with a high cover, only 1 transmitter possible. A ceramic terminal block is automatically fitted on the insert.

**Overvoltage** protection

To protect against overvoltage in the power supply and signal/communication cables for the thermometer electronics, Endress+Hauser offers the HAW562 surge arrester for DIN rail mounting and the HAW569 for field housing installation.

For more information see the Technical Information "HAW562 Surge arrester" TI01012K and "HAW569 Surge arrester" TI01013K.

## **Performance characteristics**


RTD assembly as per IEC 60751

**Reference conditions** These data are relevant for determining the accuracy of the temperature transmitters used. More information on this can be found in the Technical Information of the iTEMP temperature transmitters.

Class Max. tolerances (°C) Characteristics RTD maximum sensor error  $\pm (0.15 + 0.002 \cdot |t|^{-1})$ Cl. A Max. deviation (°C) 3.0  $\pm (0.1 + 0.0017 \cdot |t|)^{1)}$ Cl. AA, formerly 2.5 1/3 Cl. B  $\pm (0.3 + 0.005 \cdot |t|^{-1})$ 2.0 Cl. B В 1.5 1.0 0.5 AA 100 100 200 300 400 500 600°C - 0.5 - 1.0 - 1.5 B - 2.0 - 2.5 - 3.0 Max. deviation (°C) A0045598

Maximum measured error

1) |t| = absolute temperature value in °C

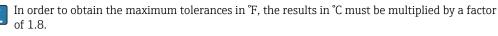

#### Temperature ranges

Sensor type	Operating temperature range	Class A	Class AA
Pt100 (TF) iTHERM StrongSens	−50 to +500 °C (−58 to +932 °F)	−30 to +300 °C (−22 to +572 °F)	0 to 200 ℃ (-58 to +392 ℉)
iTHERM QuickSens	−50 to 200 °C (−58 to 392 °F)	−50 to 200 °C (−58 to 392 °F)	0 to 150 ℃ (32 to 302 ℉)
Thin-film sensor (TF)	−50 to 400 °C (−58 to 752 °F)	−50 to 250 °C (−58 to 482 °F)	0 to 100 °C (32 to 212 °F)
Wire wound sensor (WW)	-200 to 600 °C (-328 to 1 112 °F)	−200 to 600 °C (−328 to 1 112 °F)	−50 to 250 ℃ (−58 to 482 ℉)

#### Influence of ambient temperature

Depends on the head transmitter used. For details, see the Technical Information.

current causes a self-heating effect in the RTD measurement error. In addition to the measur also affected by the temperature conductivity a	RTD elements are passive resistors that are measured using an external current. This measurement current causes a self-heating effect in the RTD element itself, which in turn creates an additional measurement error. In addition to the measurement current, the size of the measurement error is also affected by the temperature conductivity and flow velocity of the process. This self-heating error is negligible when an Endress+Hauser iTEMP temperature transmitter (very small measurement current) is connected.		
Tests have been performed in water at 0.4 m/s (according to IEC 60751) and with a 10 K temperature step change.			
Standard Pt100, typical values	t <sub>50</sub>	t <sub>90</sub>	
Direct contact: TF, WW 5 s		11 s	
iTHERM QuickSens	0.5 s	1.5 s	
		·	
	current causes a self-heating effect in the RTE measurement error. In addition to the measur also affected by the temperature conductivity is negligible when an Endress+Hauser iTEMP current) is connected. Tests have been performed in water at 0.4 m/ temperature step change. <b>Standard Pt100, typical values</b> Direct contact: TF, WW 3 or 6 mm diameter	current causes a self-heating effect in the RTD element itself, which in turn creates the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement current, the size of the measurement error. In addition to the measurement error. In the size of the process. I	

Type J, K, N (TC), typical values	t <sub>50</sub>	t <sub>90</sub>
Direct contact 3 or 6 mm diameter	2.5 s	7 s

#### Calibration

Self

#### Calibration of thermometers

Calibration involves comparing the measured values of a device under test (DUT) with those of a more precise calibration standard using a defined and reproducible measurement method. The aim is to determine the deviation of the DUT's measured values from the true value of the measured variable. Two different methods are used for thermometers:

Calibration at fixed-point temperatures, e.g. at the freezing point of water at 0 °C,

• Calibration compared against a precise reference thermometer.

The thermometer to be calibrated must display the fixed point temperature or the temperature of the reference thermometer as accurately as possible. Temperature-controlled calibration baths with very homogeneous thermal values, or special calibration furnaces into which the DUT and the reference thermometer, where necessary, can project to a sufficient degree, are typically used for thermometer calibrations. The measurement uncertainty can increase due to heat dissipation errors and short immersion lengths. The existing measurement uncertainty is listed on the individual calibration certificate. For accredited calibrations according to ISO17025, the measurement uncertainty shouldn't be twice as high as the accredited measurement uncertainty. If this is exceeded, only a factory calibration can be performed.

#### **Evaluation of thermometers**

If a calibration with an acceptable uncertainty of measurement and transferable measurement results is not possible, Endress+Hauser offers customers a thermometer evaluation measurement service, if technically feasible. This is the case when:

- The process connections/flanges are too big or the immersion length (IL) is too short to allow the DUT to be immersed sufficiently in the calibration bath or furnace (see the following table), or
- Due to heat conduction along the thermometer tube, the resulting sensor temperature generally deviates significantly from the actual bath/furnace temperature.

The measured value of the DUT is determined using the maximum possible immersion depth and the specific measuring conditions and measurement results are documented on an evaluation certificate.

#### Sensor-transmitter matching

The resistance/temperature curve of platinum resistance thermometers is standardized but in practice it is rarely possible to keep to the values precisely over the entire operating temperature range. For this reason, platinum resistance sensors are divided into tolerance classes, such as Class A, AA or B as per IEC 60751. These tolerance classes describe the maximum permissible deviation of the specific sensor characteristic curve from the standard curve, i.e. the maximum temperaturedependent characteristic error that is permitted. The conversion of measured sensor resistance values to temperatures in temperature transmitters or other meter electronics is often susceptible to considerable errors as the conversion is generally based on the standard characteristic curve.


When using temperature transmitters from Endress+Hauser, this conversion error can be reduced significantly by sensor-transmitter matching:

- Calibration at three temperatures at least and determination of the actual temperature sensor characteristic curve,
- Adjustment of the sensor-specific polynomial function using Calendar-van Dusen (CvD) coefficients,
- Configuration of the temperature transmitter with the sensor-specific CvD coefficients for resistance/temperature conversion, and
- another calibration of the reconfigured temperature transmitter with connected resistance thermometer.

Endress+Hauser offers this kind of sensor-transmitter matching as a separate service. Furthermore, the sensor-specific polynomial coefficients of platinum resistance thermometers are always provided on every Endress+Hauser calibration certificate where possible, e.g. at least three calibration points, so that users themselves can also appropriately configure suitable temperature transmitters.

For the device, Endress+Hauser offers standard calibrations at a reference temperature of -80 to +600 °C (-112 to +1112 °F) based on the ITS90 (International Temperature Scale). Calibrations in other temperature ranges are available from your Endress+Hauser sales center on request. Calibrations are traceable to national and international standards. The calibration certificate is referenced to the serial number of the device. Only the insert is calibrated.

#### Minimum insertion length (IL) for inserts required to perform a correct calibration

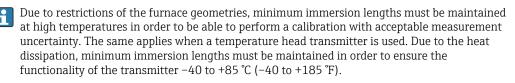

Calibration temperature	Minimum immersion length (IL) in mm without head transmitter
–196 °C (–320.8 °F)	120 mm (4.72 in) <sup>1)</sup>
-80 to 250 °C (-112 to 482 °F)	No minimum immersion length needed <sup>2)</sup>
251 to 550 °C (483.8 to 1022 °F)	300 mm (11.81 in)
551 to 600 °C (1023.8 to 1112 °F)	400 mm (15.75 in)

1) With TMT a minimum of 150 mm (5.91 in) is required

2) At a temperature of +80 to +250 °C (+176 to +482 °F) with TMT a minimum of 50 mm (1.97 in) is required


 Insulation resistance
 RTD: Insulation resistance according to IEC 60751 > 100 MΩ at 25 °C between terminals and sheath material measured with a minimum test voltage of 100 V DC
 TC: Insulation resistance according to IEC 1515 between terminals and sheath material with a test voltage of 500 V DC:
 > 1 GΩ at 20 °C
 > 5 MΩ at 500 °C

## Installation

Orientation

No restrictions. However, self-draining in the process should be guaranteed depending on the application.

#### Installation instructions

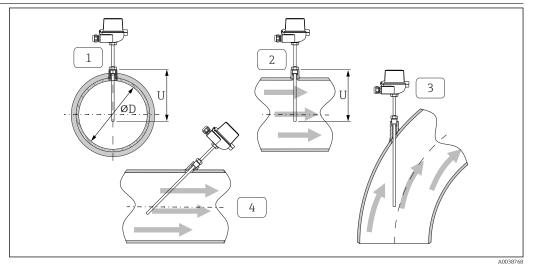

#### ■ 12 Installation examples

- 1 2 In pipes with a small cross-section, the sensor tip should reach or extend slightly past the center axis of the pipe (=U).
- 3 4 Slanted orientation.

The immersion length of the thermometer influences the accuracy. If the immersion length is too small, errors in the measurement are caused by heat conduction via the process connection and the container wall. Therefore, if installing in a pipe the immersion length should be at least half the pipe diameter. Installation at an angle (see 3 and 4) could be another solution. When determining the immersion length or installation depth all the parameters of the thermometer and of the process to be measured must be taken into account (e.g. flow velocity, process pressure).

The counterparts for process connections and seals are not supplied with the thermometer and must be ordered separately if needed.

Ambient temperature range	Terminal head	Temperature in °C (°F)		
	Without mounted head trans	smitter Depends on the terminal head used and the cable gland or fieldbus connector, see 'Terminal heads' section		
	With mounted head transmi	tter -40 to 85 °C (-40 to 185 °F)		
	With mounted head transmi display	tter and -20 to 70 °C (-4 to 158 °F)		
Storage temperature	For information, see the ambient temperature above.			
Humidity	<ul> <li>Depends on the transmitter used. If Endress+Hauser iTEMP head transmitters are used:</li> <li>Condensation permitted as per IEC 60 068-2-33</li> <li>Max. rel. humidity: 95% as per IEC 60068-2-30</li> </ul>			
Climate class	As per EN 60654-1, Class C			
Degree of protection     Max. IP 66 (NEMA Type 4x encl.)     Depends on the design (terminal head, connector, etc.)		Depends on the design (terminal head, connector, etc.)		
	Partly IP 68Tested in 1.83 m (6 ft) over 24 h			

### Environment

# Shock and vibration resistance

The Endress+Hauser inserts exceed the IEC 60751 requirements stating a shock and vibration resistance of 3g within a range of 10 to 500 Hz. The vibration resistance of the measurement point depends on the sensor type and design. See the following table:

Sensor type	Vibration resistance for the sensor tip
Pt100 (WW)	— > 30 m/s² (3q)
Pt100 (TF), basic	
Pt100 (TF)	> 40 m/s <sup>2</sup> (4g)
iTHERM StrongSens Pt100 (TF) iTHERM QuickSens Pt100 (TF), version: Ø6 mm (0.24 in)	> 600 m/s <sup>2</sup> (60g)
Thermocouple inserts	> 30 m/s² (3g)

# Electromagnetic compatibility (EMC)

Depends on the head transmitter used. For details see the Technical Information.

## Process

Process temperature range	Depends on the type of sensor and material used, maximum $-200$ to $+1100$ °C ( $-328$ to $+2012$ °F).
Process pressure range	<ul> <li>Pressure range:</li> <li>Max. 75 bar (1088 psi) to +200 °C (+392 °F) for standard thin-film and iTHERM QuickSens Pt100 sensors.</li> <li>Max. 50 bar (725 psi) to +400 °C (+752 °F) for all other sensor types.</li> </ul>
	The maximum possible process pressure depends on various influencing factors, such as the design, process connection and process temperature. For information on the maximum possible process pressures for the individual process connections, see the 'Process connection' section.
	It is possible to calculate the permitted flow rate according to DIN 43772 for thermometers with a thermowell. A calculation is not standardized and not usual for thermometers without a thermowell. If there are any concerns regarding the mechanical loading capacity of the device, the use of a thermometer with a thermowell is recommended.

## Mechanical construction


Design, dimensions

All dimensions in mm (in). The design of the thermometer depends on the general design version used.


Various dimensions, such as the immersion length U for example, are variable values and are therefore indicated as items in the following dimensional drawings.

Variable dimensions:

Position	Description
IL	Insertion length of insert
Т	Length of lagging: variable or predefined, depends on thermowell version (see also the individual table data)
U	Immersion length: variable, depending on the configuration

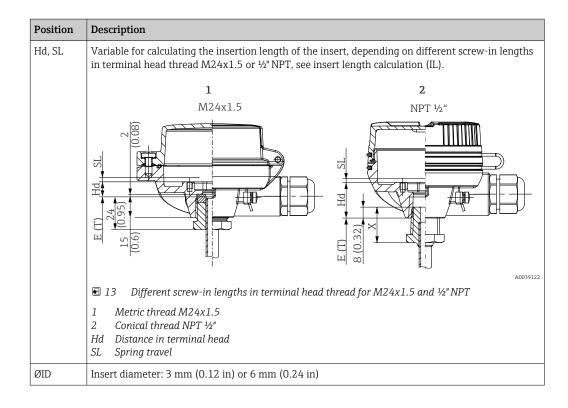


#### Thermometer without fixed process connection

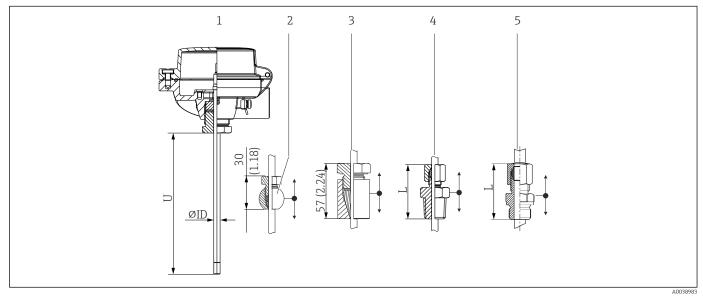

- 1 Without process connection
- 2 Thermometer with spherical, movable TK40 compression fitting for weld-in application
- 3 Thermometer with cylindrical, movable TK40 compression fitting for weld-in application
- 4 With compression fitting NPT thread, spring loaded version as option
- 5 With compression fitting G thread, spring loaded version as option
  - The versions with an M24 thread to the terminal head use a replaceable TS111 insert. All other versions do not have a replaceable insert.

Type of compression fitting	L	U $_{\rm min}$ (with use of compression fitting)
NPT thread, not spring loaded	51 mm (2.0 in)	
G thread, not spring loaded	47 mm (1.85 in)	≥ 70 mm (2.76 in)
G- or NPT-thread, spring loaded	60 mm (2.36 in)	

#### Thermometer with fixed process connection

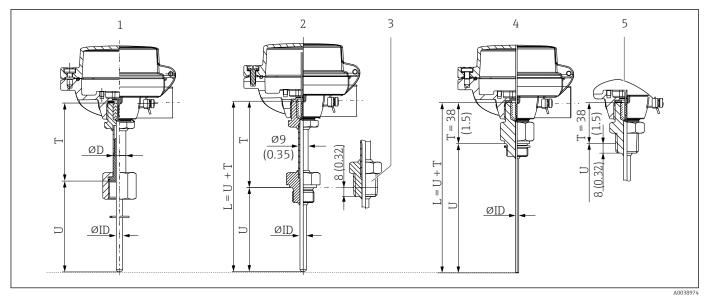


- 1 With lagging and cap nut, female thread, available in  $G^{4}$ " and  $G^{4}$ ", ØD = 9 mm (0.35 in) or 12 mm (0.47 in)
- 2 With lagging, G- or M-thread version
- 3 With lagging, NPT-thread version
- 4 Without lagging, terminal head process connection, M- or G-thread version
- 5 Without lagging, terminal head process connection, NPT-thread version

The versions do not have a replaceable insert. The insert is not spring-loaded even if the cap nut is used.

#### Minimum length definition

Thermometer version	U	Т
1		≥ 85 mm (3.35 in)
2+3	<ul> <li>≥ 50 mm (1.97 in) for sensor type iTHERM QuickSens</li> <li>≥ 40 mm (1.57 in) for all other sensor types</li> </ul>	
4+5	, ,	38 mm (1.5 in)

As illustrated in the following figure, the lagging length may influence the temperature in the terminal head. This temperature must remain within the limit values defined in the "Operating conditions" section.

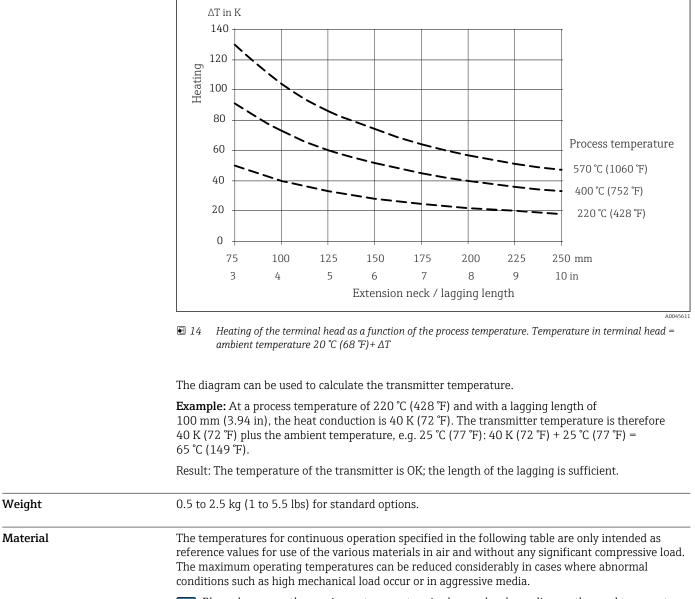

Please be aware, the maximum temperature is always also depending on the used temperature sensor!

Material name	Short form	Recommended max. temperature for continuous use in air	Properties
AISI 316L/1.4401	X5CrNiMo 17-12-2	650 °C (1202 °F) <sup>1)</sup>	<ul> <li>Austenitic, stainless steel</li> <li>High corrosion resistance in general</li> <li>Particularly high corrosion resistance in chlorine-based and acidic, non-oxidizing atmospheres through the addition of molybdenum (e.g. phosphoric and sulfuric acids, acetic and tartaric acids with a low concentration)</li> </ul>
AISI 316L/1.4404 1.4435	X2CrNiMo17-12-2 X2CrNiMo18-14-3	650 °C (1202 °F) <sup>1)</sup>	<ul> <li>Austenitic, stainless steel</li> <li>High corrosion resistance in general</li> <li>Particularly high corrosion resistance in chlorine-based and acidic, non-oxidizing atmospheres through the addition of molybdenum (e.g. phosphoric and sulfuric acids, acetic and tartaric acids with a low concentration)</li> <li>Increased resistance to intergranular corrosion and pitting</li> <li>Compared to 1.4404, 1.4435 has even higher corrosion resistance and a lower delta ferrite content</li> </ul>
Alloy600/2.4816	NiCr15Fe	1100 °C (2012 °F)	<ul> <li>A nickel/chromium alloy with very good resistance to aggressive, oxidizing and reducing atmospheres, even at high temperatures</li> <li>Resistance to corrosion caused by chlorine gases and chlorinated media as well as many oxidizing mineral and organic acids, sea water etc.</li> <li>Corrosion from ultrapure water</li> <li>Not to be used in sulfur-containing atmospheres</li> </ul>

1) Can be used to a limited extent up to 800 °C (1472 °F) for low compressive loads and in non-corrosive media. Please contact your Endress+Hauser sales team for further information.

#### **Process connections**

Threaded process connection

					Dimensions	
Туре				Thread length TL in mm (in)	Width across flats AF	Technical properties
E	SW/AF	М	M20x1.5	14 mm (0.55 in)	27	• $P_{max.} =$ 75 bar
×			M18x1.5	12 mm (0.47 in)	24	(1088 psi) to +200 °C
		G	G ½"	15 mm (0.6 in)	27	(+392 °F) for standard
ML, L			G ¼"	12 mm (0.47 in)	24	thin-film and iTHERM
<b>1</b> 5	Cylindrical (left side) and conical (right side) version	NPT	NPT ½" NPT ¾"	8 mm (0.32 in) 8.5 mm (0.33 in)	22 27	QuickSens Pt100 sensors. P <sub>max.</sub> = 50 bar (725 psi) to +400 °C (+752 °F) for all other sensor types. <sup>1</sup> )

1) The insert type is the deciding factor here. The process connection thread is of secondary importance.


Connection thread Cap nut <sup>1)</sup>	Version	Thread length TL	Width across flats	
	G <sup>1</sup> /2"	15.5 mm (0.61 in)	27 mm (1.06 in)	The cap nuts are
	G¾"	19.5 mm (0.77 in)	32 mm (1.26 in)	not designed as process connections. This connection is only available for thermometers without a thermowell.
1 Cap nut thread	43608			

1) For selection without thermowell. Only available for installation in an existing thermowell. Special attention has to be paid to the length as the insert is not springload!

The 316L compression fittings can only be used once due to deformation. This applies to all the components of the compression fittings! A replacement compression fitting must be secured at another point (grooves in thermowell). PEEK compression fittings must never be used at a temperature that is lower than the temperature present when the compression fitting is secured. This is because the fitting would no longer be leak-tight as a result of heat contraction of the PEEK material.

For higher requirements: SWAGELOCK or similar fittings are urgently recommended.

#### Compression fitting

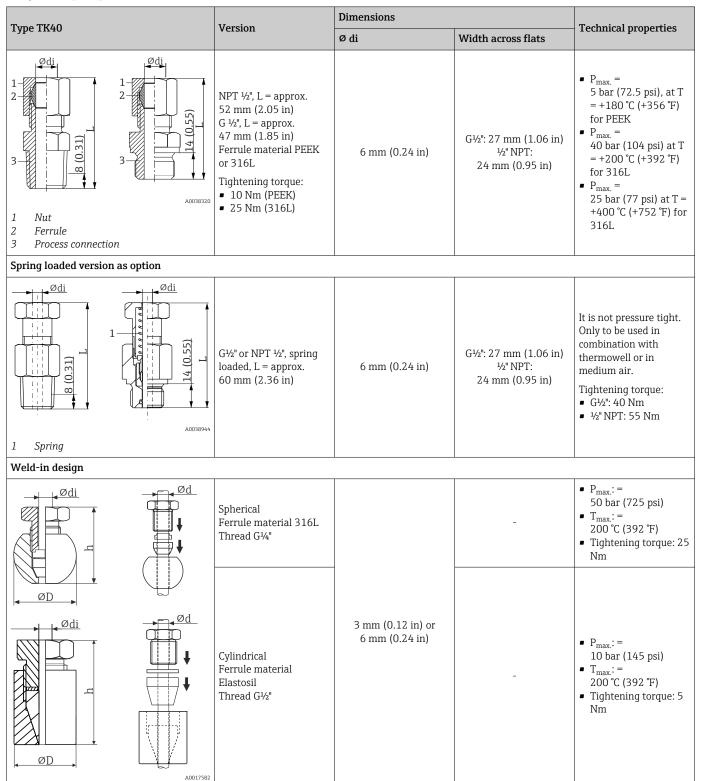

#### Inserts

Sensor	Standard thin-film	iTHERM StrongSens	iTHERM QuickSens 1)	Wire wound	
Sensor design; connection method	1x Pt100, 3- or 4-wire, mineral insulated	1x Pt100, 3- or 4-wire, mineral insulated	<ul> <li>1x Pt100, 3- or 4-wire</li> <li>φ6 mm (¼ in), mineral insulated</li> <li>φ3 mm (¼ in), teflon insulated</li> </ul>	1x Pt100, 3- or 4- wire, mineral insulated	2x Pt100, 3-wire, mineral insulated
Vibration resistance of the insert tip	> 3g	Enhanced vibration resistance > 60g	<ul> <li>\$\\$\\$</li></ul>	> 3g	
Measuring range; accuracy class -50 to +400 °C (-58 to +752 °F), Class A or AA		−50 to +500 °C (−58 to +932 °F), Class A or AA	−50 to +200 °C (−58 to +392 °F), Class A or AA	92 °F), Class A	
Diameter	3 mm (¼ in), 6 mm (¼ in)	6 mm (¼ in)	3 mm (¼ in), 6 mm (¼ in)		

1) Recommended for immersion lengths U < 70 mm (2.76 in)

TC thermocouples	Туре К Туре Ј		Туре N	
Sensor design	Mineral insulated, Alloy600 sheated cable	Mineral insulated, stainless steel sheathed cable	Mineral insulated, Alloy TD sheated cable	
Vibration resistance of the insert tip	> 3g			
Measuring range	−40 to 1100 °C (−40 to 2012 °F)	–40 to 750 °C (–40 to 1382 °F)	–40 to 1100 °C (–40 to 2012 °F)	
Connection type	Grounded or ungrounded			
Temperature-sensitive length	Insert length			
Diameter	3 mm (¼ in), 6 mm (¼ in)			

Surface roughness

Values for wetted surfaces:


Standard surface	$R_a \le 0.76 \ \mu m \ (0.03 \ \mu in)$

**Terminal heads** 


All terminal heads have an internal shape and size in accordance with DIN EN 50446, flat face and a thermometer connection with a M24x1.5 or ½" NPT thread. All dimensions in mm (in). The sample cable glands in the diagrams correspond to M20x1.5 connections with non-Ex polyamide cable glands. Specifications without head transmitter installed. For ambient temperatures with head transmitter installed, see the "Environment" section.


As a special feature, Endress+Hauser offers terminal heads with optimized terminal accessibility for easy installation and maintenance.


TA20AB	Specification
77.2 (3.04) (57) (27) (28) (1.10) 70 (2.76) A0038413	<ul> <li>Protection class: IP 66/68, NEMA 4x</li> <li>Temperature: -40 to +100 °C (-40 to +212 °F), polyamide cable gland</li> <li>Material: aluminum; polyester powder coated Seals: silicone</li> <li>Threaded cable entry: NPT ½" and M20x1.5</li> <li>Color: blue, RAL 5012</li> <li>Weight: approx. 300 g (10.6 oz)</li> </ul>
A0038413	

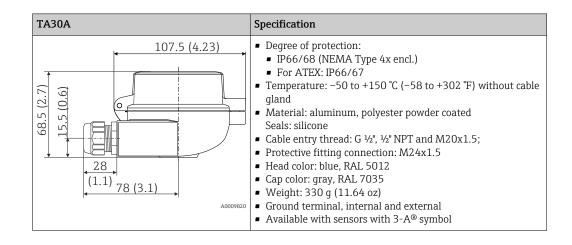

TA30A with display window in cover	Specification
107.5 (4.23) 107.5 (4.23) 10	<ul> <li>Degree of protection: <ul> <li>IP66/68 (NEMA Type 4x encl.)</li> <li>For ATEX: IP66/67</li> </ul> </li> <li>Temperature: -50 to +150 °C (-58 to +302 °F) without cable gland</li> <li>Material: aluminum, polyester powder coated Seals: silicone</li> <li>Cable entry thread: G <sup>1</sup>/<sub>2</sub>", <sup>1</sup>/<sub>2</sub>" NPT and M20x1.5</li> <li>Protective fitting connection: M24x1.5</li> <li>Head color: blue, RAL 5012 <ul> <li>Cap color: gray, RAL 7035</li> <li>Weight: 420 g (14.81 oz)</li> <li>Display window: single-pane safety glass according to DIN 8902</li> <li>For TID10 display</li> <li>Ground terminal, internal and external</li> <li>Available with sensors with 3-A<sup>®</sup> symbol</li> </ul> </li> </ul>

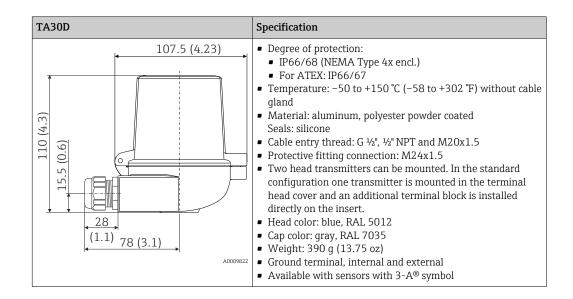


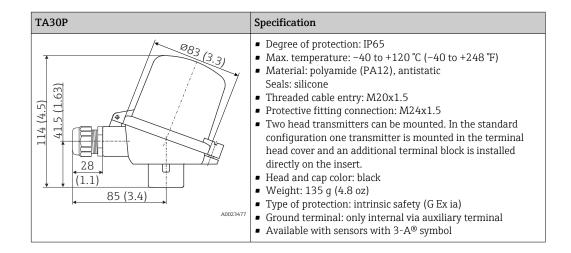


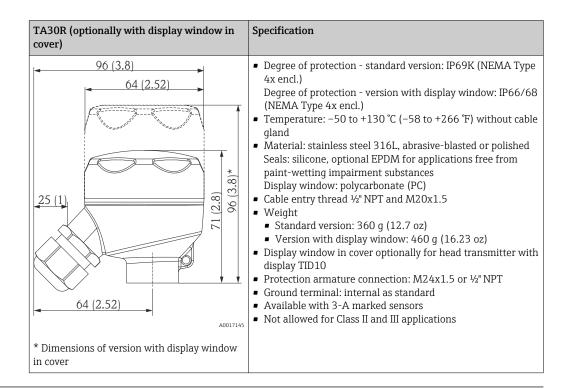


TA30R (high version for two transmitters)	Specification
96 (3.8) 64 (2.52)	<ul> <li>Degree of protection: IP69K (NEMA Type 4x encl.)</li> <li>Temperature: -50 to +130 °C (-58 to +266 °F) without cable gland</li> <li>Material: stainless steel 316L, abrasive-blasted or polished Seals: EPDM</li> <li>Cable entry thread ½" NPT and M20x1.5</li> <li>Weight: 460 g (16.23 oz)</li> <li>For two head transmitter</li> <li>Protection armature connection: M24x1.5 or ½" NPT</li> <li>Ground terminal: internal in standard version</li> <li>Not allowed for Class II and III applications</li> <li>Available with 3-A marked sensors</li> </ul>
25 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	

TA30H with display window in cover	Specification
125 (4.92) (E5 H) 51 (E5 H) 50 (1.1) 78 (3.01) (1.1) 78 (3.01) (0.1) (0.1) 78 (3.01) (0.1) 78 (3.01) (0.1) 78 (3.01) (0.1) 78 (3.01)	<ul> <li>Flameproof (XP) version, explosion-protected, captive screw cap, available with one or two cable entries</li> <li>Degree of protection: IP 66/68, NEMA Type 4x encl. Ex-version: IP 66/67</li> <li>Temperature: -50 to +150 °C (-58 to +302 °F) for rubber seal without cable gland (observe max. permitted temperature of cable gland!)</li> <li>Material: <ul> <li>Aluminum; polyester powder coated</li> <li>Stainless steel 316L without coating</li> <li>Klüber Syntheso Glep 1 dry-film lubricant</li> </ul> </li> <li>Display window: single-pane safety glass according to DIN 8902</li> <li>Thread: ½" NPT, ¾" NPT, M20x1.5, G½"</li> <li>Extension neck/thermowell connection: M20x1.5 or ½" NPT</li> <li>Color of aluminum head: blue, RAL 5012</li> <li>Color of aluminum cap: gray, RAL 7035</li> <li>Weight: <ul> <li>Aluminum approx. 860 g (30.33 oz)</li> <li>Stainless steel approx. 2 900 g (102.3 oz)</li> </ul> </li> <li>Head transmitter optionally available with TID10 display</li> <li>If the housing cover is unscrewed: Before tightening, clean the thread in the cover and housing base and lubricate if necessary (Recommended lubricant: Klüber Syntheso Glep 1)</li> </ul>

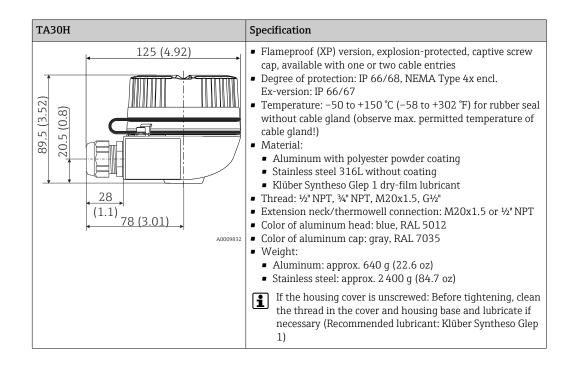

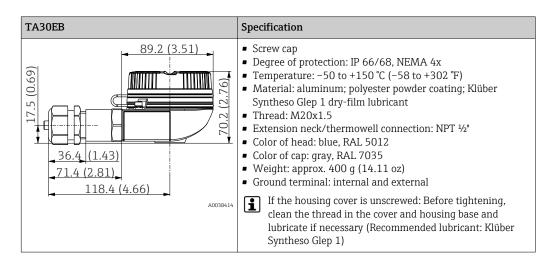

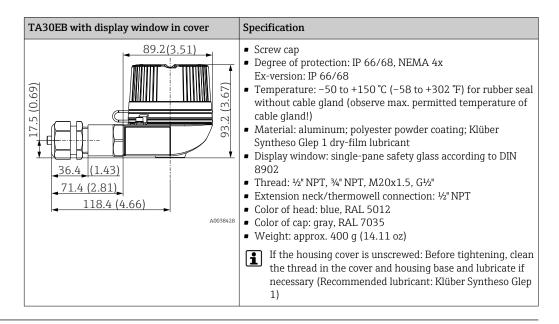

#### Cable glands and connectors

Туре	Suitable for cable entry	Degree of protection	Temperature range	Suitable cable diameter
Cable gland, polyamide blue (indication of Ex-i circuit)	<sup>1</sup> ⁄2" NPT	IP68	−30 to +95 °C (−22 to +203 °F)	7 to 12 mm (0.27 to 0.47 in)
Cable gland, polyamide	<sup>1</sup> / <sub>2</sub> " NPT, <sup>3</sup> / <sub>4</sub> " NPT, M20x1.5 (optionally 2x cable entry)	T, IP68 -40 to +100 °C (-40 to +212 °F)		
	<sup>1</sup> / <sub>2</sub> " NPT, M20x1.5 (optionally 2x cable entry)	ІР69К	−20 to +95 °C (−4 to +203 °F)	5 to 9 mm (0.19 to 0.35 in)
Cable gland for dust ignition-proof area, polyamide	½" NPT, M20x1.5	IP68	−20 to +95 °C (−4 to +203 °F)	-
Cable gland for dust ignition-proof area, brass	M20x1.5	IP68 (NEMA Type 4x)	−20 to +130 °C (−4 to +266 °F)	-
Fieldbus connector (M12x1 PA, 7/8" PA, FF)	½" NPT, M20x1.5	IP67, NEMA Type 6	-40 to +105 ℃ (-40 to +221 ℉)	-
Fieldbus connector (M12, 8-pin)	M20x1.5	IP67	−30 to +90 °C (−22 to +194 °F)	-



For explosion proof thermometers no cable glands are assembled.

## Certificates and approvals

Current certificates and approvals for the product are available at <u>www.endress.com</u> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.

3. Select **Downloads**.

# Test on thermowellThermowell pressure tests are carried out in accordance with the specifications in DIN 43772. With<br/>regard to thermowells with tapered or reduced tips that do not comply with this standard, these are<br/>tested using the pressure of corresponding straight thermowells. Sensors for use in hazardous areas<br/>are also always subjected to a comparative pressure during the tests. Tests according to other<br/>specifications can be carried out on request. The liquid penetration test verifies that there are no<br/>cracks in the welded seams of the thermowell.

MID

Test certificate (only in SIL mode). In compliance with:

- WELMEC 8.8, "Guide on the General and Administrative Aspects of the Voluntary System of Modular Evaluation of Measuring Instruments."
- OIML R117-1 Edition 2007 (E) "Dynamic measuring systems for liquids other than water"
- EN 12405-1/A2 Edition 2010 "Gas meters Conversion devices Part 1: Volume conversion"
- OIML R140-1 Edition 2007 (E) "Measuring systems for gaseous fuel"

# Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select Configuration.

#### Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.

Service-specific accessories	Accessories	Description
	Applicator	<ul> <li>Software for selecting and sizing Endress+Hauser measuring devices:</li> <li>Calculation of all the necessary data for identifying the optimum measuring device: e.g. pressure loss, accuracy or process connections.</li> <li>Graphic illustration of the calculation results</li> </ul>
		Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
		Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator

Accessories	Description
Configurator	<ul> <li>Product Configurator - the tool for individual product configuration</li> <li>Up-to-the-minute configuration data</li> <li>Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language</li> <li>Automatic verification of exclusion criteria</li> <li>Automatic creation of the order code and its breakdown in PDF or Excel output format</li> <li>Ability to order directly in the Endress+Hauser Online Shop</li> </ul>
	The Configurator is available on the Endress+Hauser website at: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
DeviceCare SFE100	Configuration tool for devices via fieldbus protocols and Endress+Hauser service protocols. DeviceCare is the tool developed by Endress+Hauser for the configuration of Endress+Hauser devices. All smart devices in a plant can be configured via a point-to-point or point-to-bus connection. The user-friendly menus enable transparent and intuitive access to the field devices. For details, see Operating Instructions BA00027S
FieldCare SFE500	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00065S

# Supplementary documentation

The following types of documentation are available on the product pages and in the Download Area of the Endress+Hauser website (www.endress.com/downloads) (depending on the selected device version):

Document	Purpose and content of the document
Technical Information (TI)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	<b>Guide that takes you quickly to the 1st measured value</b> The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	<b>Your reference document</b> The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

Document	Purpose and content of the document
Safety Instructions (XA)	Depending on the approval, Safety Instructions (XA) are supplied with the device. The Safety Instructions are an integral part of the Operating Instructions.
	Information on the Safety Instructions (XA) that are relevant for the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is an integral part of the device documentation.



www.addresses.endress.com

