# Technical Information **Proline Promass F 500**

Coriolis flowmeter



# Flowmeter with premium accuracy and robustness, as remote version with up to 4 I/Os

# Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Highest measurement performance for liquids and gases under varying, demanding process conditions

#### Device properties

- Mass/volume flow: measurement error ±0.05 %
- Medium temperature: -196 to +350 °C (-320 to +662 °F)
- Nominal diameter: DN 8 to 250 ( $\frac{3}{8}$  to 10")
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

#### Your benefits

- Highest process safety immune to fluctuating and harsh environments
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no in-/outlet run needs
- Full access to process and diagnostic information numerous, freely combinable I/Os and Ethernet
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



# Table of contents

About this document	1	Environment	
Symbols	. 4	Ambient temperature range	
		Storage temperature	68
Function and system design	5	Climate class	68
Measuring principle		Relative humidity	68
		Operating height	. 68
Measuring system	. ,	Degree of protection	
Equipment architecture		Shock and vibration resistance	. 68
Reliability	9	Internal cleaning	
		Mechanical load	
Input	12	Electromagnetic compatibility (EMC)	
Measured variable	12	,,	
Measuring range		<b>.</b>	
Operable flow range		Process	
Input signal		Medium temperature range	
mp at 3.g.a.		Pressure-temperature ratings	
		Sensor housing	
Output	15	Rupture disk	
Output and input variants	15	Flow limit	
Output signal	17	Pressure loss	76
Signal on alarm		Static pressure	76
Load	26	Thermal insulation	77
Ex connection data	26	Heating	77
Low flow cut off	27	Vibrations	
Galvanic isolation	28		
Protocol-specific data	28	Custodurtususfau	70
		Custody transfer	79
Power supply	33		
Terminal assignment	1	Mechanical construction	
Available device plugs	35	Dimensions in SI units	
Pin assignment, device plug		Dimensions in US units	103
Supply voltage	38	Weight	116
Power consumption	38	Materials	117
Current consumption	38	Process connections	120
Power supply failure	38	Surface roughness	120
Overcurrent protection element	38		
Electrical connection	38	Display and user interface	121
Potential equalization	52	Operation concept	
Terminals	52		121
Cable entries	52		121
			122
Cable specification			
Overvoltage protection	5/	Service interface	120
		Network integration	
Performance characteristics	57	Supported operating tools	
Reference operating conditions	57	HistoROM data management	131
Maximum measurement error	57		
Repeatability	60	Certificates and approvals	133
Response time	60		133
Influence of ambient temperature	60		133
Influence of medium temperature		•	133
Influence of medium pressure	61		133
Design fundamentals	1		136
2 corg	<u> </u>		137
			137
Mounting			137
Installation point	62		137
Orientation	63		137
Inlet and outlet runs	64	PROFINET with Ethernet-APL certification	
Mounting the transmitter housing	65		
Special mounting instructions	66	Pressure Equipment Directive	137

2

Radio approval	138
Measuring instrument approval	138
Additional certification	138 139
External standards and guidelines	135
Ordering information	139
Application packages	140
Diagnostic functionality	140
Heartbeat Technology	140
Concentration measurement	140
Special density	141
Extended density	141
Petroleum	141
Petroleum & locking function	141
OPC-UA Server	141
Accessories	142
Device-specific accessories	142
Communication-specific accessories	143
Service-specific accessories	144
System components	144
Supplemental documentation	145
Standard documentation	
Supplementary device-dependent documentation	
	\
Registered trademarks	147

# About this document

# Symbols Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
<u></u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.

# Communication-specific symbols

Symbol	Meaning
ि	Wireless Local Area Network (WLAN) Communication via a wireless, local network.

# Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
<u> </u>	Reference to documentation
	Reference to page
	Reference to graphic
	Visual inspection

# Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections

Symbol	Meaning
EX	Hazardous area
×	Safe area (non-hazardous area)
≋ <b>→</b>	Flow direction

# Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega$  = rotational velocity

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, two parallel measuring tubes containing flowing fluid oscillate in antiphase, acting like a tuning fork. The Coriolis forces produced at the measuring tubes cause a phase shift in the tube oscillations (see illustration):

- At zero flow (when the fluid is at a standstill) the two tubes oscillate in phase (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

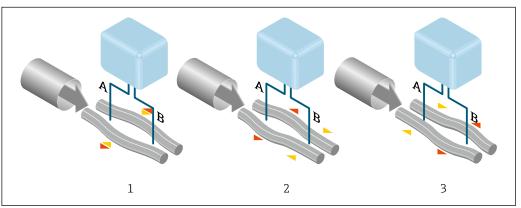

A0028850

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of the two measuring tubes. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### **Density measurement**

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

#### Volume measurement


Together with the measured mass flow, this is used to calculate the volume flow.

#### Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

#### Gas Fraction Handler (GFH)

The Gas Fraction Handler is a Promass software function that improves measurement stability and repeatability. The function continuously checks for the presence of disturbances in single-phase flow, i.e. gas bubbles in liquids or droplets in gas. In the presence of the second phase, flow and density become increasingly unstable. The Gas Fraction Handler function improves measurement stability with respect to the severity of the disturbances, without any effect under single-phase flow conditions.

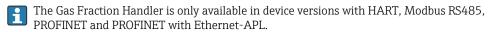


#### Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

#### Transmitter

Two versions of the transmitter are available.

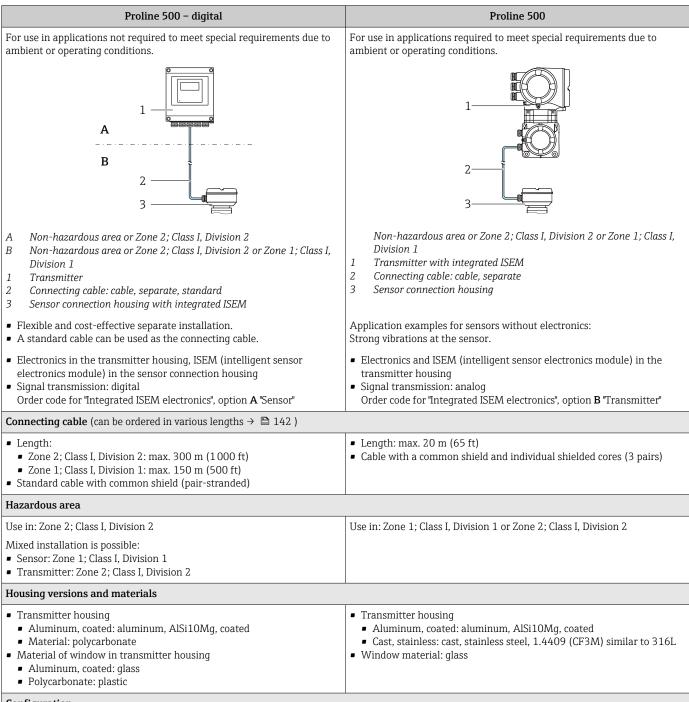

#### Configuration


- External operation via 4-line, illuminated graphic local display (LCD) with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.
- Via service interface or WLAN interface:
  - Operating tools (e.g. FieldCare, DeviceCare)
  - Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

#### Sensor connection housing


Different versions of the connection housing are available.

Order code for "Sensor connection housing", option A, "Aluminum, coated": Aluminum, AlSi10Mg, coated  This device version is only available in conjunction with the Proline 500 – digital transmitter.
Order code for "Sensor connection housing", option B, "Stainless":  Hygienic version, stainless steel 1.4301 (304)  Optional: order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel 1.4404 (316L)
Order code for "Sensor connection housing", option C, "Ultra-compact hygienic, stainless":  Hygienic version, stainless steel 1.4301 (304)  Optional: order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel 1.4404 (316L)  This device version is only available in conjunction with the Proline 500 – digital transmitter.
Order code for "Sensor connection housing", option L, "Cast, stainless": 1.4409 (CF3M) similar to 316L

#### Sensor

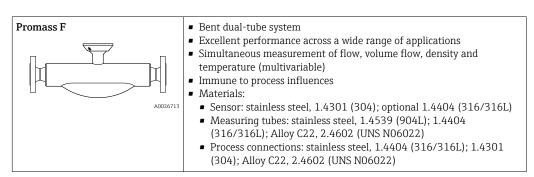

#### Equipment architecture

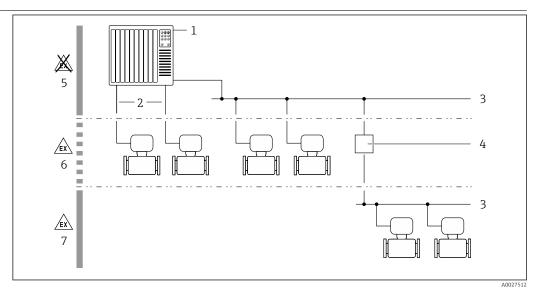

 $\blacksquare$  1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Coupler
- 5 Non-hazardous area
- 6 Hazardous area: Zone 2; Class I, Division 2
- 7 Hazardous area: Zone 1; Class I, Division 1

#### Reliability

#### IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

#### **Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\Rightarrow \ \  \   \   \   \   \   \   \$	Not enabled	On an individual basis following risk assessment
Access code (also applies to web server login or FieldCare connection) → 🖺 10	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (Password) → 🖺 10	Serial number	Assign an individual WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server → 🖺 10	Enabled	On an individual basis following risk assessment
Service interface CDI-RJ45 → 🖺 11	-	On an individual basis following risk assessment

Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

#### Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
  - Protect write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase
  - The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
  - When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface, which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for safety reasons.
- Follow the general rules for generating a secure password when defining and managing the access code and network key.
- The user is responsible for the management and careful handling of the access code and network key.

#### Access via web server

The device can be operated and configured via a web browser with the integrated web server. The connection is established via the service interface (CDI-RJ45) or the WLAN interface. For device versions with the EtherNet/IP and PROFINET communication protocols, the connection can also be established via the terminal connection for signal transmission with EtherNet/IP, PROFINET (RJ45 pluq) or PROFINET with Ethernet-APL (two-wire).

The web server is enabled when the device is delivered. The web server can be disabled via the **Web server functionality** parameter if necessary (e.g., after commissioning).

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

Detailed information on the device parameters:

"Description of device parameters" document .

#### Access via OPC-UA

The device can communicate with OPC UA clients using the "OPC UA Server" application package.

The OPC UA server integrated in the device can be accessed via the WLAN access point using the WLAN interface - which can be ordered as an optional extra - or the service interface (CDI- RJ45) via Ethernet network. Access rights and authorization as per separate configuration.

The following Security Modes are supported as per the OPC UA Specification (IEC 62541):

- None
- Basic128Rsa15 signed
- Basic128Rsa15 signed and encrypted

Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions quarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

- Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

  Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB BB, C2, GB, MB, NB
- The device can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45)  $\rightarrow \blacksquare$  128.

# Input

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

#### Measuring range for liquids


DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	3/8	0 to 2 000	0 to 73.50
15	1/2	0 to 6500	0 to 238.9
25	1	0 to 18000	0 to 661.5
40	1½	0 to 45 000	0 to 1654
50	2	0 to 70 000	0 to 2 573
80	3	0 to 180 000	0 to 6615
100	4	0 to 350 000	0 to 12 860
150	6	0 to 800 000	0 to 29 400
250	10	0 to 2 200 000	0 to 80 850

# Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used. The full scale value can be calculated with the following formulas:

$$\dot{m}_{\text{max}(G)} = (\rho_G \cdot (c_G/m) \cdot d_i^2 \cdot (\pi/4) \cdot 3600 \cdot n)$$

ḿ <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
$\rho_{G}$	Gas density in [kg/m³] at operating conditions
$\mathbf{c}_{G}$	Sound velocity (gas) [m/s]
d <sub>i</sub>	Measuring tube internal diameter [m]
π	Pi
n = 2	Number of measuring tubes
m = 2	For all gases except pure H2 and He gas
m = 3	For pure H2 and He gas

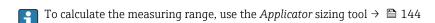

#### Recommended measuring range

Flow limit → 🖺 76

#### Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

#### **Output and input variants**

→ 🖺 15

#### External measured values

To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases
- Various pressure and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section  $\rightarrow \stackrel{ riangle}{\Rightarrow} 144$

It is recommended to read in external measured values to calculate the corrected volume flow.

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Current input

The measured values are written from the automation system to the measuring device via the current input  $\rightarrow \blacksquare 13$ .

#### Digital communication

The measured values can be written by the automation system via:

- FOUNDATION Fieldbus
- PROFIBUS DP
- PROFIBUS PA
- Modbus RS485
- Modbus TCP over Ethernet-APL
- Ethernet/IP
- PROFINET
- PROFINET over Ethernet-APL

#### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul> <li>4 to 20 mA (active)</li> <li>0/4 to 20 mA (passive)</li> </ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>

#### Status input

Maximum input values	■ DC $-3$ to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Configurable: 5 to 200 ms

Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

# Output

#### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The following tables must be read vertically  $(\downarrow)$ .

Example: If the option BA "4-20 mA HART" was selected for output/input 1, one of the options A, B, D, E, F, H, I or J is available for output 2 and one of the options A, B, D, E, F, H, I or J is available for output 3 and 4.

#### Output/input 1 and options for output/input 2



Options for output/input 3 and 4  $\rightarrow$   $\stackrel{\triangle}{=}$  16

Order code for "Output; input 1" (020) →	Order code for "Output; input 1" (020) → Possible options												
Current output 4 to 20 mA HART	BA												
Current output 4 to 20 mA HART Ex i passive	<b>1</b>	CA											
Current output 4 to 20 mA HART Ex i active		<b>1</b>	CC										
FOUNDATION Fieldbus			<b>1</b>	SA									
FOUNDATION Fieldbus Ex i				<b>4</b>	TA								
PROFIBUS DP					4	LA							
PROFIBUS PA						4	GA						
PROFIBUS PA Ex i							4	НА					
Modbus RS485								1	MA				
EtherNet/IP 2-port switch integrated									1	NA			
PROFINET 2-port switch integrated										<b>→</b>	RA		
PROFINET over Ethernet-APL											<b>\</b>	RB	
PROFINET over Ethernet-APL Ex i												<b>\</b>	RC
Order code for "Output; input 2" (021) →	4	<b>\</b>	<b>1</b>	4	4	4	4	1	1	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>
Not used	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В			В		В	В		В	В	В	В	
Current output 4 to 20 mA Ex i passive		С	С		С			С					С
User-configurable input/output 1)	D			D		D	D		D	D	D	D	
Pulse/frequency/switch output	Е			Е		Е	Е		Е	E	E	Е	
Double pulse output <sup>2)</sup>	F								F				
Pulse/frequency/switch output Ex i passive		G	G		G			G					G
Relay output	Н			Н		Н	Н		Н	Н	Н	Н	
Current input 0/4 to 20 mA	I			I		I	I		I	I	I	I	
Status input	J			J		J	J		J	J	J	J	

<sup>2)</sup> If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).

#### Output/input 1 and options for output/input 3 and 4

Options for output/input  $2 \rightarrow \triangleq 15$ 

Order code for "Output; input 1" (020) →						Possi	ble o	ption	ıs										
Current output 4 to 20 mA HART	ВА																		
Current output 4 to 20 mA HART Ex i passive	<b>\</b>	CA																	
Current output 4 to 20 mA HART Ex i active		<b>4</b>	СС																
FOUNDATION Fieldbus			4	SA															
FOUNDATION Fieldbus Ex i				<b>+</b>	TA														
PROFIBUS DP					4	LA													
PROFIBUS PA						4	GA												
PROFIBUS PA Ex i							<b>4</b>	НА											
Modbus RS485								<b>\</b>	MA										
EtherNet/IP 2-port switch integrated									<b>\</b>	NA									
PROFINET 2-port switch integrated										4	RA								
PROFINET over Ethernet-APL/SPE, 10 Mbit/s, 2-wire											4	RB							
PROFINET over Ethernet-APL Ex i, 10 Mbit/s, 2-wire												<b>→</b>	RC						
Order code for "Output; input 3" (022), "Output; input 4" (023) $^{1)}$ $\rightarrow$	<b>\</b>	<b>\</b>	4	4	4	4	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	4	<b>\</b>	<b>4</b>						
Not used	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α						
Current output 4 to 20 mA	В					В			В	В	В	В							
Current output 4 to 20 mA Ex i passive <sup>2)</sup>		С	С																
User-configurable input/output	D					D			D	D	D	D							
Pulse/frequency/switch output	E					Е			Е	Е	Е	Е							
Double pulse output (slave) 3)	F								F										
Pulse/frequency/switch output Ex i passive 4)		G	G																
Relay output	Н					Н			Н	Н	Н	Н							
Current input 0/4 to 20 mA	I					I			I	I	I	I							
Status input	J					J			J	J	J	J							

The order code for "Output; input 4" (023) is only available for the Proline 500-digital transmitter, order code for "Integrated ISEM electronics", 1)

The current output 4 to 20 mA Ex i passive (C) option is not available for input/output 4.

<sup>3)</sup> 

The double pulse output (F) option is not available for input/output 4.

The pulse/frequency/switch output Ex i passive (G) option is not available for input/output 4. 4)

# Output signal

# Current output 4 to 20 mA HART

Order code	"Output; input 1" (20): Option BA: current output 4 to 20 mA HART
Signal mode	Can be set to: Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	250 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# Current output 4 to 20 mA HART Ex i

Order code	"Output; input 1" (20) choose from:  Option CA: current output 4 to 20 mA HART Ex i passive  Option CC: current output 4 to 20 mA HART Ex i active
Signal mode	Depends on the selected order version.
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Open-circuit voltage	DC 21.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	<ul> <li>250 to 400 Ω (active)</li> <li>250 to 700 Ω (passive)</li> </ul>
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s
<b>Current consumption</b>	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

# PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud
Terminating resistor	Integrated, can be activated via DIP switches

# PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

# Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

# EtherNet/IP

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

# PROFINET

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

#### PROFINET with Ethernet-APL

Device use	Device connection to an APL field switch  The device may only be operated according to the following APL port classifications:  If used in hazardous areas: SLAA or SLAC 1)  If used in non-hazardous areas: SLAX  Connection values of APL field switch (corresponds to APL port classification SPCC or SPAA, for instance):  Maximum input voltage: 15 V <sub>DC</sub>
	■ Minimum output values: 0.54 W
	<ul> <li>Device connection to an SPE switch</li> <li>■ In non-hazardous areas, the device can be used with an appropriate SPE switch: The device can be connected to an SPE switch with a maximum voltage of 30 V<sub>DC</sub> and a minimum output power of 1.85 W connected.</li> <li>■ The SPE switch must support the 10BASE-T1L standard and PoDL power classes 10, 11 or 12 and have a function to disable power class detection.</li> </ul>
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transmission	10 Mbit/s
Current consumption	Transmitter ■ Max. 400 mA(24 V) ■ Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)
Permitted supply voltage	9 to 30 V
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

# Current output 4 to 20 mA

Order code	"Output; input 2" (21), "Output; input 3" (022) or "Output; input 4" (023): Option B: current output 4 to 20 mA
Signal mode	Can be set to: Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  for index is active)  Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 $\Omega$
Resolution	0.38 μΑ

Assignable measured variables  - Mass flow - Volume flow - Corrected volume flow - Density - Reference density - Temperature - Electronics temperature - Oscillation frequency 0 - Oscillation damping 0 - Signal asymmetry - Exciter current 0	Damping	Configurable: 0 to 999.9 s
The range of options increases if the measuring device has one or more application packages.		<ul> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more</li> </ul>

# Current output 4 to 20 mA Ex i passive

Order code	"Output; input 2" (21), "Output; input 3" (022): Option C: current output 4 to 20 mA Ex i passive
Signal mode	Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  Fixed current
Maximum output values	22.5 mA
Maximum input voltage	DC 30 V
Load	0 to 700 $\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to:  Active Passive Passive Lari, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V

20

Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000Hz(f_{max} = 12500Hz)$
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more</li> </ul>
	application packages.
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s

Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> </ul> The range of options increases if the measuring device has one or more
	application packages.

# Double pulse output

Function	Double pulse
Version	Open collector  Can be set to:
	<ul> <li>Active</li> <li>Passive</li> <li>Passive NAMUR</li> </ul>
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)

Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### User-configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **HART** current output

Device diagnostics	Device condition can be read out via HART Command 48
--------------------	--

#### **PROFIBUS PA**

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Failure current FDE (Fault Disconnection Electronic)	0 mA

## PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

# EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

#### **PROFINET**

Device diagnostics	According to "Application Layer protocol for decentralized periphery", Version 2.3
--------------------	--

#### PROFINET with Ethernet-APL

Device diagnostics
--------------------

#### **FOUNDATION Fieldbus**

Status and alarm messages	Diagnostics in accordance with FF-891
Failure current FDE (Fault Disconnection Electronic)	0 mA

# Modbus RS485

Failure mode	Choose from:
	<ul> <li>NaN value instead of current value</li> </ul>
	■ Last valid value

# Modbus TCP-APL

Failure mode	Choose from:
	<ul> <li>NaN value instead of current value</li> </ul>
	<ul> <li>Last valid value</li> </ul>

# Current output 0/4 to 20 mA

#### 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Definable value between: 3.59 to 22.5 mA
	<ul><li>Actual value</li><li>Last valid value</li></ul>

#### 0 to 20 mA

Failure mode	Choose from:
	<ul><li>Maximum alarm: 22 mA</li><li>Definable value between: 0 to 20.5 mA</li></ul>

# Pulse/frequency/switch output

Pulse output	
Fault mode	Choose from: Actual value No pulses
Frequency output	
Fault mode	Choose from: Actual value O Hz Definable value between: 2 to 12 500 Hz

Switch output	
Fault mode	Choose from:  Current status  Open Closed

# Relay output

Failure mode	Choose from:
	■ Current status
	■ Open
	■ Closed

#### Local display

Plain text display	With information on cause and remedial measures
Backlight	Red lighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

# Interface/protocol

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - PROFIBUS DP
  - Modbus RS485
  - Modbus TCP with Ethernet-APL
  - EtherNet/IP
  - PROFINET
  - PROFINET with Ethernet-APL
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---



Additional information on remote operation  $\rightarrow \implies 122$ 

#### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

# Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes		
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred  EtherNet/IP network available  EtherNet/IP connection established  PROFINET network available  PROFINET connection established  PROFINET blinking feature		

Load

Output signal  $\rightarrow$   $\blacksquare$  17

# Ex connection data

# Safety-related values

Order code "Output; input 1"	Output type	Safety-related values "Output; input 1"		
		26 (+)	27 (-)	
Option <b>BA</b>	Current output 4 to 20 mA HART	$U_{\rm N} = 30  V_{\rm DC}$ $U_{\rm M} = 250  V_{\rm AC}$		
Option <b>GA</b>	PROFIBUS PA	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>LA</b>	PROFIBUS DP	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>MA</b>	Modbus RS485	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>MB</b>	Modbus TCP with Ethernet-APL	$ \begin{array}{l} \text{APL port profile SLAX} \\ \text{SPE PoDL classes 10, 11, 12} \\ U_{N} = 30 \ V_{DC} \\ U_{M} = 250 \ V_{AC} \end{array} $		
Option <b>SA</b>	FOUNDATION Fieldbus	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>NA</b>	EtherNet/IP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>RA</b>	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>RB</b>	PROFINET with Ethernet- APL	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N$ = 30 $V_{DC}$ $U_M$ = 250 $V_{AC}$		

Order code	Output type	Safety-related values				
"Output; input 2"; "Output; input 3" "Output; input 4"		Output; input 2 Output; input 3 Output				
		24 (+) 25 (-)	22 (+) 23	3 (-)	20 (+)	21 (-)
Option <b>B</b>	Current output 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$				
Option <b>D</b>	User-configurable input/ output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$				
Option <b>E</b>	Pulse/frequency/switch output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$				
Option <b>F</b>	Double pulse output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$				
Option <b>H</b>	Relay output	$U_{N} = 30 V_{DC}$ $I_{N} = 100 \text{ mA}_{DC} / 500$ $U_{M} = 250 V_{AC}$	mA <sub>AC</sub>			
Option <b>I</b>	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$				
Option <b>J</b>	Status input	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		·		·

<sup>1)</sup> The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

#### Intrinsically safe values

Order code "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"			
		26 (+)	27 (-)		
Option <b>CA</b>	Current output 4 to 20 mA HART Ex i passive	$\begin{split} &U_{i} = 30 \text{ V} \\ &I_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0  \mu\text{H} \\ &C_{i} = 6 \text{ nF} \end{split}$			
Option CC	Current output 4 to 20 mA HART Ex i active	Ex ia $^{1)}$ $U_0 = 21.8 \text{ V}$ $l_0 = 90 \text{ mA}$ $P_0 = 491 \text{ mW}$ $L_0 = 4.1 \text{ mH (IIC)/15 mH (IIB)}$ $C_0 = 160 \text{ nF (IIC)/}$ $1 160 \text{ nF (IIB)}$	Ex ic $^{2)}$ $U_0 = 21.8 \text{ V}$ $l_0 = 90 \text{ mA}$ $P_0 = 491 \text{ mW}$ $L_0 = 9 \text{ mH (IIC)/39 mH (IIB)}$ $C_0 = 600 \text{ nF (IIC)/}$ $4000 \text{ nF (IIB)}$		
		$\begin{aligned} &U_i = 30 \text{ V} \\ &I_i = 10 \text{ mA} \\ &P_i = 0.3 \text{ W} \\ &L_i = 5  \mu\text{H} \\ &C_i = 6 \text{ nF} \end{aligned}$			
Option <b>HA</b>	PROFIBUS PA Ex i (FISCO Field Device)	$Ex ia^{1}$ $U_{i} = 30 V$ $l_{i} = 570 mA$ $P_{i} = 8.5 W$ $L_{i} = 10 \mu H$ $C_{i} = 5 nF$	Ex ic $^{2)}$ $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$		
Option TA	FOUNDATION Fieldbus Ex i	$Ex ia^{1)} \\ U_i = 30 \text{ V} \\ l_i = 570 \text{ mA} \\ P_i = 8.5 \text{ W} \\ L_i = 10  \mu\text{H} \\ C_i = 5 \text{ nF}$	Ex ic $^{2)}$ $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$		
Option RC	PROFINET with Ethernet- APL Ex i	Ex ia <sup>1)</sup> 2-WISE power load APL port profile SLAA	<b>Ex ic</b> <sup>2)</sup> 2-WISE power load APL port profile SLAC		

- 1)
- Only available for Proline 500 transmitter Zone 1; Class I, Division 1. Only available for transmitter Zone 2; Class I, Division 2 and only for Proline 500 digital transmitter 2)

Order code	Output type	Intrinsically safe values or NIFW values						
"Output; input 2"; "Output; input 3";		Output; input 2		Output; input 2 Output; input 3		Output; i	Output; input 4 1)	
"Output; input 4"		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
Option C	Current output 4 to 20 mA Ex i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA					
Option G	Pulse/frequency/switch output Ex-i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA					

The order code "Output; input 4" is only available for the Proline 500- digital transmitter.

#### Low flow cut off

The switch points for low flow cut off are user-selectable.

# Galvanic isolation

The outputs are galvanically isolated:
from the power supplyfrom one another

- from the potential equalization (PE) terminal

# Protocol-specific data

# HART

Manufacturer ID	0x11
Device type ID	0x3B
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω
System integration	Information on system integration: Operating Instructions → 🗎 145.  ■ Measured variables via HART protocol  ■ Burst Mode functionality

# FOUNDATION Fieldbus

Manufacturer ID	0x452B48 (hex)
Ident number	0x103B (hex)
Device revision	1
DD revision	Information and files under:
CFF revision	<ul><li>www.endress.com</li><li>www.fieldcommgroup.org</li></ul>
Interoperability Test Kit (ITK)	Version 6.2.0
ITK Test Campaign Number	Information:  www.endress.com  www.fieldcommgroup.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported:  Restart  ENP Restart  Diagnostic  Set to OOS  Set to AUTO  Read trend data  Read event logbook
Virtual Communication Relation	onships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43

Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	16
System integration	Information regarding system integration: Operating Instructions → 🗎 145.  Cyclic data transmission Description of the modules Execution times Methods

# PROFIBUS DP

Manufacturer ID	0x11						
Ident number	0x156F						
Profile version	3.02						
Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com						
Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur						
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>						
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.  Previous model: Promass 83 PROFIBUS DP ■ ID No.: 1529 (hex) ■ Extended GSD file: EH3x1529.gsd ■ Standard GSD file: EH3_1529.gsd  Description of the function scope of compatibility: Operating Instructions → 🖺 145.						
System integration	Information regarding system integration: Operating Instructions → 🖺 145.  ■ Cyclic data transmission  ■ Block model  ■ Description of the modules						

# PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x156D
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com

Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Local display</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.  Earlier models:  Promass 80 PROFIBUS PA  ID No.: 1528 (hex)  Extended GSD file: EH3x1528.gsd  Standard GSD file: EH3_1528.gsd  Promass 83 PROFIBUS PA  ID No.: 152A (hex)  Extended GSD file: EH3x152A.gsd  Standard GSD file: EH3x152A.gsd  Description of the function scope of compatibility: Operating Instructions →  145.
System integration	Information regarding system integration: Operating Instructions → 🗎 145.  Cyclic data transmission  Block model  Description of the modules

# Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1						
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>						
Device type	Slave						
Slave address range	1 to 247						
Broadcast address range	0						
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>						
Broadcast messages	Supported by the following function codes:  • 06: Write single registers  • 16: Write multiple registers  • 23: Read/write multiple registers						
Supported baud rate	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> </ul>						
Data transmission mode	ASCII     RTU						

Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information					
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system.  □ Description of the function scope of compatibility:  Operating Instructions → □ 145.					
System integration	Information regarding system integration: Operating Instructions → 🖺 145.  ■ Modbus RS485 information  ■ Function codes  ■ Register information  ■ Response time  ■ Modbus data map					

# EtherNet/IP

Protocol	<ul> <li>The CIP Networks Library Volume 1: Common Industrial Protocol</li> <li>The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP</li> </ul>					
Communication type	■ 10Base-T ■ 100Base-TX					
Device profile	Generic device (product type: 0x2B)					
Manufacturer ID	0x000049E					
Device type ID	0x103B					
Baud rates	Automatic <sup>10</sup> / <sub>100</sub> Mbit with half-duplex and full-duplex detection					
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs					
Supported CIP connections	Max. 3 connections					
Explicit connections	Max. 6 connections					
I/O connections	Max. 6 connections (scanner)					
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring device</li> </ul>					
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>					
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>EtherNet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>					
Device Level Ring (DLR)	Yes					
System integration	Information regarding system integration: Operating Instructions → 🖺 145.					
	<ul><li>Cyclic data transmission</li><li>Block model</li><li>Input and output groups</li></ul>					

# PROFINET

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.3
Communication type	100 MBit/s

Conformance Class	Conformance Class B						
Netload Class	Netload Class 2 0 Mbps						
Baud rates	Automatic 100 Mbit/s with full-duplex detection						
Cycle times	From 8 ms						
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs						
Media Redundancy Protocol (MRP)	Yes						
System redundancy support	System redundancy S2 (2 AR with 1 NAP)						
Device profile	Application interface identifier 0xF600 Generic device						
Manufacturer ID	0x11						
Device type ID	0x843B						
Device description files (GSD, DTM, DD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device driver  ■ www.profibus.com						
Supported connections	<ul> <li>2 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>						
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>						
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>						
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM)</li> </ul>						
System integration	Information regarding system integration: Operating Instructions → 🗎 14!  Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting						

# PROFINET with Ethernet-APL

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.43			
Communication type Ethernet Advanced Physical Layer 10BASE-T1L				
Conformance Class B (PA)				
Netload Class	PROFINET Netload Robustness Class 2 10 Mbit/s			

Baud rates	10 Mbit/s Full-duplex						
Cycle times	64 ms						
Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines						
Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)						
System redundancy support	System redundancy S2 (2 AR with 1 NAP)						
Device profile	PROFINET PA profile 4 (Application interface identifier API: 0x9700)						
Manufacturer ID	17						
Device type ID	0xA43B						
Device description files (GSD, DTM, FDI)	<ul> <li>Information and files available at:</li> <li>www.endress.com → Downloads section</li> <li>www.profibus.com</li> </ul>						
Supported connections	<ul> <li>2x AR (IO Controller AR)</li> <li>2x AR (IO Supervisor Device AR connection allowed)</li> </ul>						
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>						
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>						
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package)</li> </ul>						
System integration  Information regarding system integration: Operating Instructions →  Cyclic data transmission  Overview and description of the modules  Status coding  Factory setting							

# **Power supply**

# Terminal assignment

Transmitter: supply voltage, input/outputs

# HART

Supply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow  \stackrel{ ext{$\cong$}}{=}  15.$							

#### FOUNDATION Fieldbus

Supply voltage		Input/output		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $ ightarrow$ $ ightharpoons$ 15.							

#### PROFIBUS DP

Supply voltage		Input/	output l	Input/	output 2	Input/	output 3	Input/	output 4
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $ ightarrow$ $ ightharpoons$ 15.							

# PROFIBUS PA

Supply	voltage	Input/	output I	Input/	output 2	Input/	output 3	Input/	output <del>i</del>
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow  \stackrel{ ext{$\cong$}}{ ext{$\cong$}}  15.$							

# Modbus RS485

Supply	voltage	Input/	output I	Input/	output 2	Input/	output B	Input/	output 1
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

# Modbus TCP with Ethernet-APL

Supply	voltage	Input/	output L	Input/	output 2	Input/	output 3	Input/	output <del>i</del>
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \stackrel{\square}{=} 15$ .							

#### EtherNet/IP

Supply	voltage	Input/output 1	Input/	output 2	Input/	output 3	Input/	output <del>i</del>	
1 (+)	2 (-)	EtherNet/IP	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
		(RJ45 connector)	The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

# PROFINET

Supply voltage		Input/output 1	Input/	output 2	Input/	output 3	Input/	output 4
1 (+)	2 (-)	PROFINET	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		(RJ45 connector)	The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					

#### PROFINET with Ethernet-APL

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \stackrel{\square}{\cong} 15$ .							

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline  $500 digital \rightarrow$  38
- Proline 500 → 🖺 39

#### Available device plugs



Device plugs may not be used in hazardous areas!

#### Device plugs for fieldbus systems:

Order code for "Input; output 1"

- Option **SA** "FOUNDATION Fieldbus" → 🖺 35
- Option GA "PROFIBUS PA" → 

  35
- Option **NA** "EtherNet/IP" → 🖺 35
- Option **RA** "PROFINET" → 🖺 36
- Option **RB** "PROFINET with Ethernet-APL" → 🗎 36

#### Device plug for connecting to the service interface:

Order code for "Accessory mounted"

Option **NB**, RJ45 M12 adapter (service interface)  $\rightarrow \triangleq 37$ 

#### Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/connection → 🗎 40				
"Electrical connection"	2	3			
M, 3, 4, 5	7/8" connector	-			

### Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for	Cable entry/connection → 🖺 40				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			

#### Order code for "Input; output 1", option NA "EtherNet/IP"

Order code for	Cable entry/connection → 🖺 40				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			
R <sup>1)2)</sup> , S <sup>1)2)</sup> , T <sup>1)2)</sup> , V <sup>1)2)</sup>	Connector M12 × 1	Connector M12 × 1			

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection → 🗎 40			
"Electrical connection"	2	3		
L, N, P, U	Connector M12 × 1	-		
R <sup>1)2)</sup> , S <sup>1)2)</sup> , T <sup>1)2)</sup> , V <sup>1)2)</sup>	Connector M12 × 1	Connector M12 × 1		

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of 1) an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RB "PROFINET with Ethernet-APL"

Order code	Cable entry/connection $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $				
"Electrical connection"	2	3			
L, N, P, U	M12 plug × 1	-			

#### Order code for "Accessory mounted", option NB "Adapter RJ45 M12 (service interface)"

Order code	Cable entry/coupling → 🖺 40			
"Accessory mounted"	Cable entry 2	Cable entry 3		
NB	Plug M12 × 1	-		

#### Pin assignment, device plug

#### **FOUNDATION Fieldbus**


	Pin	Assignment		Coding	Plug/socket
2 3	1	+	Signal +	A	Plug
1 4	2	-	Signal –		
	3		Grounding		
	4		Not assigned		

#### **PROFIBUS PA**

	Pin	Assignment		Coding	Plug/socket
2 3	1	+	PROFIBUS PA +	A	Plug
1 4	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

- Recommended plug:
  Binder, series 713, part no. 99 1430 814 04
  - Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

#### **PROFINET**

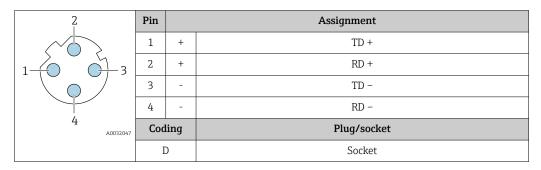

## Recommended plug:

- Binder, series 825, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q

### PROFINET with Ethernet-APL

	Pin	Assignment	Coding	Plug/socket
3 4	1	APL signal -	А	Socket
2 1	2	APL signal +		
	3	Cable shield <sup>1</sup>		
	4	Not used		
	Metal plug housing	Cable shield		
	<sup>1</sup> If a cable shield is used			

## Recommended plug:

- Binder, series 713, part no. 99 1430 814 04
- Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

### EtherNet/IP

2	Pin		Assignment
	1	+	Tx
1 3	2	+	Rx
	3	-	Tx
	4	-	Rx
4 A0032047	Cod	ling	Plug/socket
	I	)	Socket

## Recommended plug:

- Binder, series 825, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q

## Service interface for

Order code for "Accessories mounted", option NB: Adapter RJ45 M12 (service interface)

2	Pin		Assignment
	1	+	Tx
1 3	2	+	Rx
	3	-	Tx
	4	-	Rx
4 A0032047			

Coding	Plug/socket
D	Socket

Recommended plug:

- Binder, series 825, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q

## Supply voltage

Order code "Power supply"	Terminal voltage		Frequency range
Option <b>D</b>	DC 24 V	±20%	-
Option <b>E</b>	AC 100 to 240 V	-15+10%	50/60 Hz
Option I	DC 24 V	±20%	-
Орион 1	AC 100 to 240 V	-15+10%	50/60 Hz

#### Power consumption

#### Transmitter

Max. 10 W (active power)

switch-on current	Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21
-------------------	---

#### **Current consumption**

#### Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.


### Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch

- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

## **Electrical connection**

## Connection of connecting cable: Proline 500 - digital

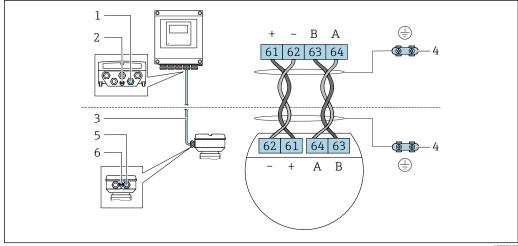

A0028198

- Cable entry for cable on transmitter housing
- 2 Terminal connection for potential equalization (PE)
- 3 Connecting cable ISEM communication
- Grounding via ground connection; in the version with a device plug, grounding is ensured through the plug 4 itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- Terminal connection for potential equalization (PE)

38

Depending on the device version of the sensor connection housing, the connecting cable is attached via terminals or device plugs.

Sensor connection housing Order code for "Housing"	Connection to sensor connection housing via	Connection to transmitter housing via	
Option <b>A</b> : aluminum coated	Terminals	Terminals	
Option <b>B</b> : stainless	Terminals	Terminals	
Option <b>C</b> : ultra-compact, hygienic, stainless	Device plug	Terminals	
Option <b>L</b> : cast, stainless	Terminals	Terminals	

Pin assignment, device plug

Device plugs are only available for device version, order code for "Housing":

Option  ${\bf C}$ : ultra-compact, hygienic, stainless

For connection to sensor connection housing.

2	Pin	Color 1)		Assignment	Connection to terminal
	1	Brown	+	Supply voltage	61
3 0 0 1	2	White	Α	ISEM communication	64
_5	3	Blue	В	ISEM communication	63
4	4	Black	-	Supply voltage	62
	5	_		_	-
	Coding			Plug/socket	
	A			Plug	


l) Cable colors of connecting cable



A connecting cable with a device plug is optionally available.

### Connection of the connecting cable: Proline 500

The connecting cable is connected via terminals.

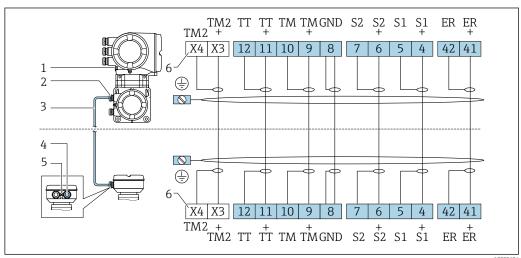

Terminal connection for potential equalization (PE)

- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Terminal connection for potential equalization (PE)
- Terminals X3, X4: temperature sensor; only for device version with order code for "Test, certificate", option JQ

Endress+Hauser 39

A0033694


#### Transmitter connection



■ Terminal assignment → 🖺 33

■ Device plug pin assignment → 🖺 36

Transmitter connection: Proline 500 - digital

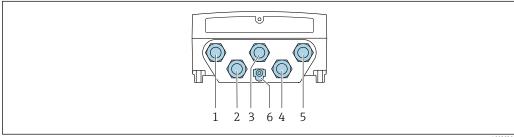


- Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- Terminal connection for signal transmission, input/output 3
- Terminal connection for connecting cable between sensor and transmitter
- Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: connection for external WLAN antenna
- Terminal connection for potential equalization (PE)
- An adapter for the RJ45 to the M12 plug is optionally available: Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can thus be established via an M12 plug without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45) → 🖺 128

Connecting the transmitter: Proline 500

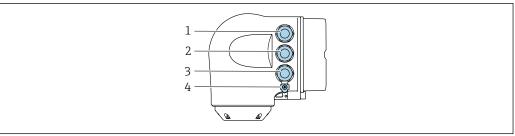

- Terminal connection for supply voltage
- Terminal connection for signal transmission, input/output 2
- 3 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: connection for external WLAN antenna
- Terminal connection for potential equalization (PE)
- An adapter for the RJ45 to the M12 plug is optionally available: Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can thus be established via an M12 plug without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45) → 128


### Connecting in a ring topology

Device versions with EtherNet/IP and PROFINET communication protocols can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

- Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB
- Integrate the transmitter in a ring topology:

  EtherNet/IP
  - PROFINET


Transmitter: Proline 500 – digital

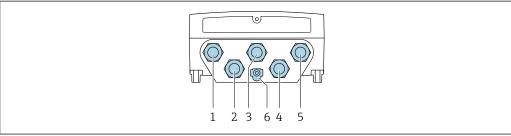

Δ002820

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 plug)
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection to service interface (CDI-RJ45)
- 6 Terminal connection for potential equalization (PE)

Transmitter: Proline 500

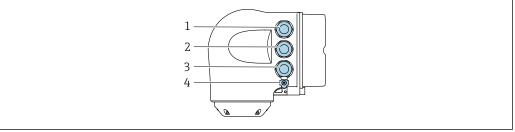


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 plug)
- 3 Terminal connection to service interface (CDI-RJ45)
- 4 Terminal connection for potential equalization (PE)

If the device has additional inputs/outputs, these are routed in parallel via the cable entry for connection to the service interface.


### **Connection examples**

Current output 4 to 20 mA HART

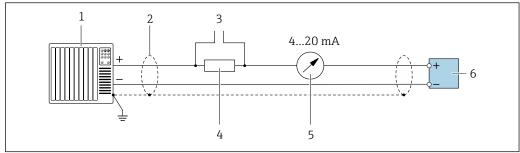

A0029055


- 2 Connection example for 4 to 20 mA HART current output (active)
- 1 Automation system with current input (e.g. PLC)
- 3 Connection for HART operating devices → 🖺 122
- 4 Resistor for HART communication ( $\geq 250 \Omega$ ): observe maximum load  $\Rightarrow \triangleq 17$
- 5 Analog display unit: observe maximum load  $\rightarrow \square$  17
- 6 Transmitter

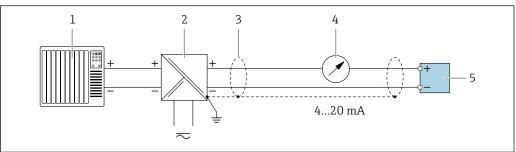

A002876

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Ground cable shield at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications  $\rightarrow \blacksquare 52$
- 4 Analog display unit: observe maximum load → 🖺 17
- 5 Transmitter


### HART input

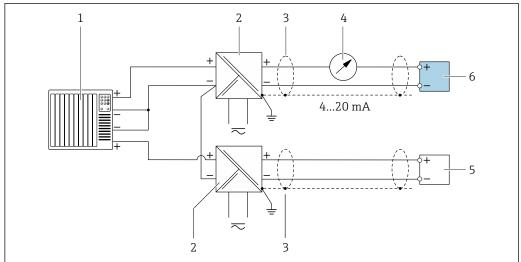

A0029763


- 4 Connection example for HART input with a common negative (passive)
- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Ground cable shield at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load  $\Rightarrow \triangleq 17$
- 5 Pressure measuring device (e.g. Cerabar M, Cerabar S): observe requirements
- 6 Transmitter

## PROFIBUS PA

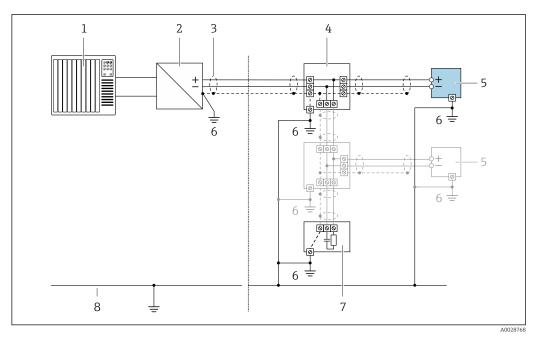


- 5 Connection example for PROFIBUS PA
- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

#### PROFIBUS DP

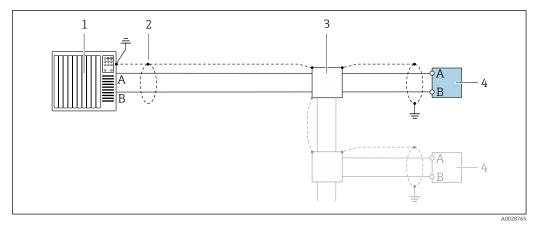

- $\blacksquare$  6 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter
- If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


### EtherNet/IP

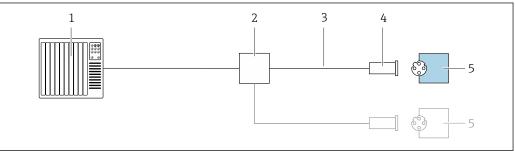

A002876


- 7 Connection example for EtherNet/IP
- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

## EtherNet/IP: DLR (Device Level Ring)

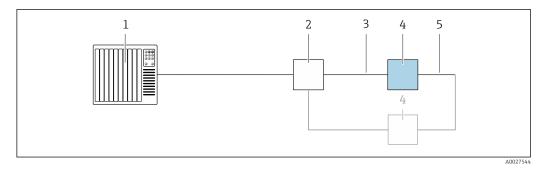

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 4 Transmitter
- 5 Connecting cable between the two transmitters


## PROFINET

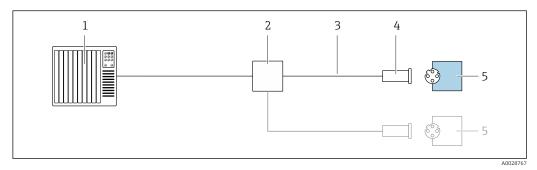

■ 8 Connection example for PROFINET


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

### PROFINET with Ethernet-APL

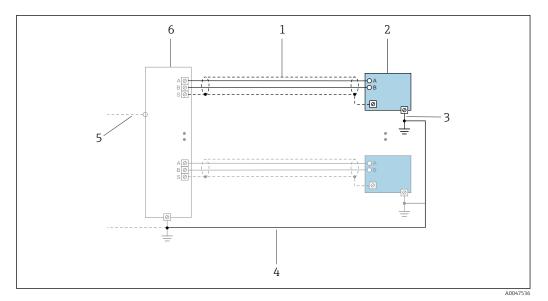

- **9**  ${\it Connection example for PROFINET with Ethernet-APL}$
- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- Potential equalization
  Trunk or TCP
- 5
- Field switch


## PROFINET: MRP (Media Redundancy Protocol)

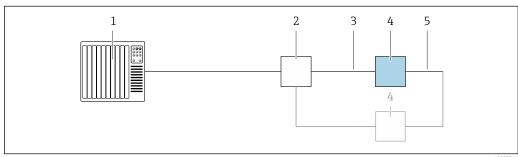

A0027544

- Control system (e.g. PLC) Ethernet switch
- 2
- 3 *Observe cable specifications*  $\rightarrow \implies 52$
- Transmitter 4
- ${\it Connecting\ cable\ between\ the\ two\ transmitters}$


### PROFINET: system redundancy S2

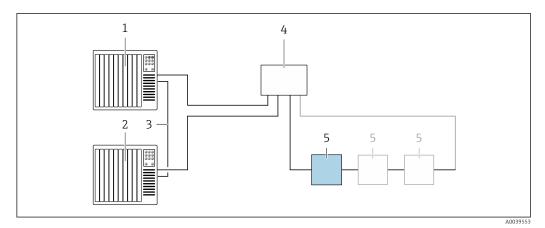

**■** 10 Connection example for system redundancy S2

- Control system 1 (e.g. PLC)
- Synchronization of control systems 2
- Control system 2 (e.g. PLC)
- Industrial Ethernet Managed Switch 4
- Transmitter

### FOUNDATION Fieldbus

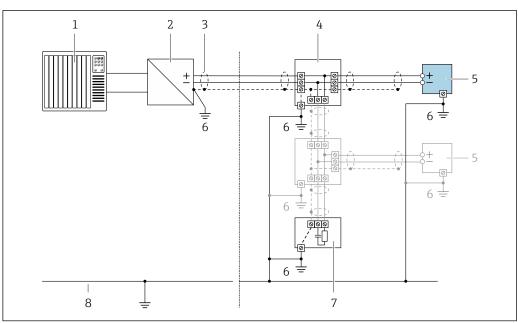


#### ■ 11 Connection example for FOUNDATION Fieldbus

- 1
- Control system (e.g. PLC) Power Conditioner (FOUNDATION Fieldbus) 2
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- T-box
- Measuring device
- Local grounding 6
- Bus terminator
- Potential matching line

Endress+Hauser 47

A0028768


### Modbus RS485

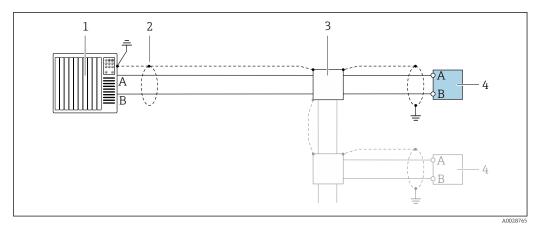

 $\blacksquare$  12 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2

- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter


### Modbus with TCP-APL

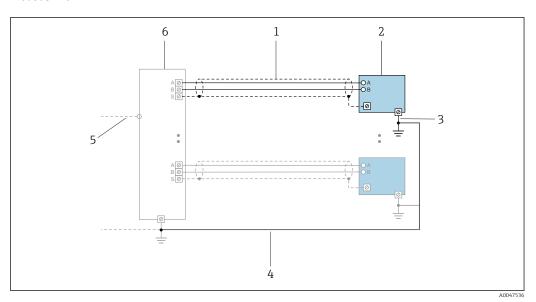


■ 13 Connection example for Modbus with TCP-APL

- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- 4 Potential equalization
- 5 Trunk or TCP
- 6 Field switch

### Current output 4-20 mA

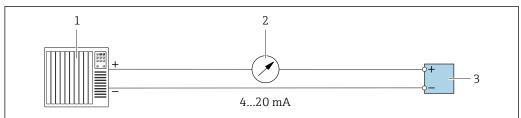


- 14 Connection example for 4-20 mA current output (active)
- Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load  $\rightarrow~ \blacksquare~ 17$
- 3 Transmitter

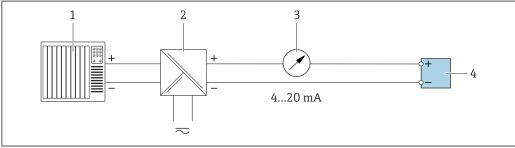


- **■** 15 Connection example for 4-20 mA current output (passive)
- Automation system with current input (e.g. PLC)
- Active barrier for power supply (e.g. RN221N)
- 3
- 4 Transmitter

### Pulse/frequency output

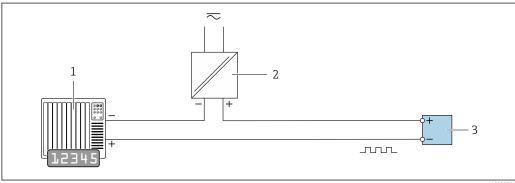

- **■** 16 Connection example for pulse/frequency output (passive)
- Automation system with pulse/frequency input (e.g. PLC with 10 k $\Omega$  pull-up or pull-down resistor)
- Power supply


### Switch output

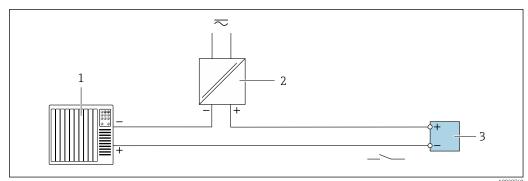

17 Connection example for switch output (passive)


- Automation system with switch input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- *3 Transmitter: observe input values* → 🖺 20

## Double pulse output

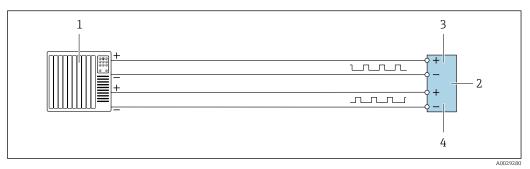

■ 18 Connection example for double pulse output (active)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: observe input values → 🖺 22
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

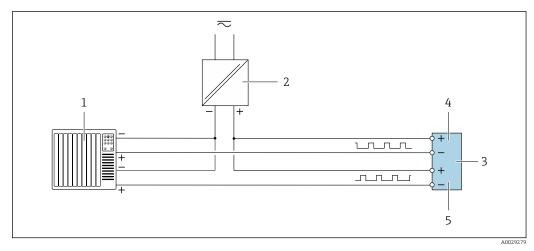


■ 19 Connection example for double pulse output (passive)

- Automation system with double pulse input (e.g. PLC with a 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted

50 Endress+Hauser

AUU2876


## Relay output

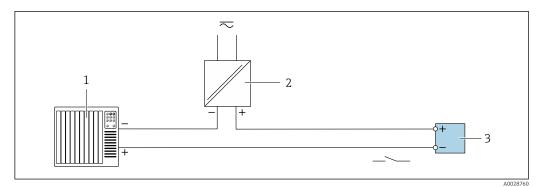

■ 20 Connection example for relay output (passive)

- Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values → 🖺 22


## Current input

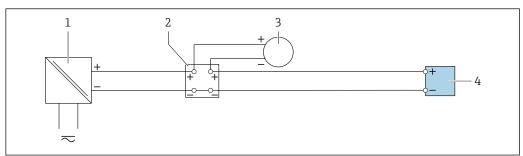

A002891

- 21 Connection example for 4 to 20 mA current input
- Power supply
- 2 Terminal box3 External meas
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

## Status input

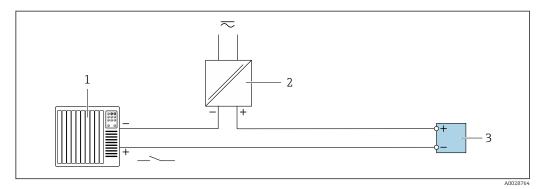

 $\blacksquare$  22 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

#### Potential equalization

### Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions, such as the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

#### **Terminals**

Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

#### Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT 1/2"
  - G ½"
  - M20
- Device plug for digital communication: M12 Only available for certain device versions  $\rightarrow \blacksquare 35$ .
- Device plug for connecting cable: M12 A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".

#### Cable specification

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

#### Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm<sup>2</sup> (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\Omega$ .

## Signal cable



For custody transfer, all signal lines must be shielded cables (tinned copper braiding, optical coverage  $\geq$  85 %). The cable shield must be connected on both sides.

Current output 4 to 20 mA HART

Shielded twisted-pair cable.



See https://www.fieldcommgroup.org "HART PROTOCOL SPECIFICATIONS".

#### PROFIBUS PA

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com "PROFIBUS Installation Guidelines".

#### PROFIBUS DP

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com "PROFIBUS Installation Guidelines".

#### EtherNet/IP

Twisted-pair Ethernet CAT 5 or better.



See https://www.odva.org"EtherNet/IP Media Planning & Installation Manual".

52

#### **PROFINET**

Only PROFINET cables.



See https://www.profibus.com "PROFINET Planning guideline".

Ethernet-APL

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com Ethernet-APL White Paper "

#### FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

#### Modbus RS485

Shielded twisted-pair cable.



See https://modbus.org "MODBUS over Serial Line Specification and Implementation Guide".

Current output 0 /4 to 20 mA (excluding HART)

Standard installation cable is sufficient.

Pulse /frequency /switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 4 to 20 mA


Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

#### Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

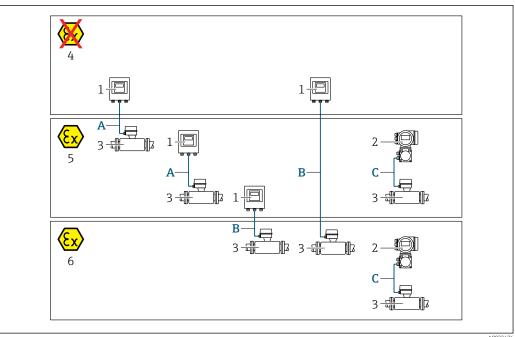

- Proline 500 digital transmitter 1
- Proline 500 transmitter 2
- 3 Sensor Promass
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- Hazardous area: Zone 1; Class I, Division 1 6
- Standard cable to 500 digital transmitter  $\rightarrow \implies 54$ Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 2; Class I, Division 2
- Standard cable to 500 digital transmitter  $\rightarrow \implies 55$ В Transmitter installed in the hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 1; Class I, Division 1
- Signal cable to 500 transmitter  $\rightarrow \implies 57$ Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

## A: Connecting cable between sensor and transmitter: Proline 500 – digital

### Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield	
Shield	Tin-plated copper braid, optical cover ≥ 85 %	
Loop resistance	Power supply line (+, -): maximum $10 \Omega$	
Cable length	Maximum 300 m (900 ft), see the following table.	
Device plug, side 1	M12 socket, 5-pin, A-coded.	
Device plug, side 2	M12 plug, 5-pin, A-coded.	
Pins 1+2	Connected cores as twisted pair.	
Pins 3+4	Connected cores as twisted pair.	

Cross-section	Cable length [max.]
0.34 mm <sup>2</sup> (AWG 22)	80 m (240 ft)
0.50 mm <sup>2</sup> (AWG 20)	120 m (360 ft)
0.75 mm <sup>2</sup> (AWG 18)	180 m (540 ft)

54

Cross-section	Cable length [max.]
1.00 mm <sup>2</sup> (AWG 17)	240 m (720 ft)
1.50 mm <sup>2</sup> (AWG 15)	300 m (900 ft)

## Optionally available connecting cable

Design	$2 \times 2 \times 0.34~\text{mm}^2$ (AWG 22) PVC cable $^{1)}$ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil resistance	According to DIN EN 60811-2-1
Shield	Tin-plated copper braid, optical cover ≥ 85 %
Continuous operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)


1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

B: Connecting cable between sensor and transmitter: Proline 500-digital

### Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield	
Shielding	n-plated copper braid, optical cover ≥ 85 %	
Capacitance C	Maximum 760 nF IIC, maximum 4.2 μF IIB	
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB	
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu H/\Omega$ IIC, maximum 35.6 $\mu H/\Omega$ IIB (e.g. according to IEC 60079-25)	
Loop resistance	Power supply line (+, $-$ ): maximum 5 $\Omega$	
Cable length	Maximum 150 m (450 ft), see the following table.	

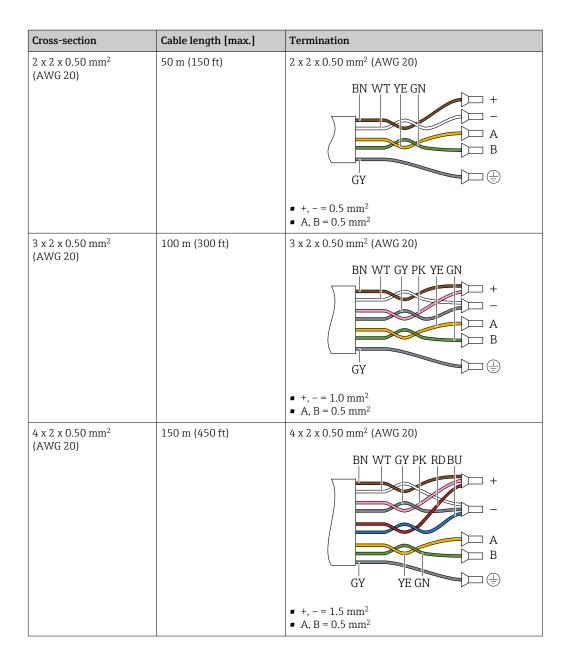

## Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1
Standard cable	$2\times2\times0.5~\text{mm}^2$ (AWG 20) PVC cable $^{1)}$ with common shield (2 pairs, pairstranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper braid, optical cover ≥ 85 %
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

56

C: Connecting cable between sensor and transmitter: Proline 500

Design	$6 \times 0.38 \text{ mm}^2 \text{ PVC cable}^{-1)}$ with individual shielded cores and common copper shield	
	With order code for "Test, certificate", option $JQ$ 7 $\times$ 0.38 mm <sup>2</sup> PUR cable <sup>1)</sup> with individual shielded cores and common copper shield	
Conductor resistance	≤ 50 Ω/km (0.015 Ω/ft)	
Capacitance: core/shield	≤ 420 pF/m (128 pF/ft)	
Cable length (max.)	20 m (60 ft)	
Cable lengths (available for order)	5 m (15 ft), 10 m (30 ft), 20 m (60 ft)	
Cable diameter $11 \text{ mm } (0.43 \text{ in}) \pm 0.5 \text{ mm } (0.02 \text{ in})$		
Operating temperature	Depends on the device version and how the cable is installed:  Standard version:  Cable - fixed installation: -40 to +105 °C (-40 to +221 °F)  Cable - movable: -25 to +105 °C (-13 to +221 °F)  Order code for "Test, certificate", option JP:  Cable - fixed installation: -50 to +105 °C (-58 to +221 °F)  Cable - movable: -25 to +105 °C (-13 to +221 °F)  Order code for "Test, certificate", option JQ:  Cable - fixed installation: -60 to +105 °C (-76 to +221 °F)  Cable - movable: -25 to +105 °C (-13 to +221 °F)	

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

#### Overvoltage protection

Mains voltage fluctuations	→ 🖺 38
Overvoltage category	Overvoltage category II
Short-term, temporary overvoltage	Between cable and ground up to 1200 V, for max. 5 s
Long-term, temporary overvoltage	Between cable and ground up to 500 V

## **Performance characteristics**

## Reference operating conditions

- Error limits based on ISO 11631
- Water
  - +15 to +45 °C (+59 to +113 °F)
  - 2 to 6 bar (29 to 87 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025



## Maximum measurement error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base accuracy



Mass flow and volume flow (liquids)

- ±0.05 % o.r. (optional for mass flow: PremiumCal; order code for "Calibration flow", option D)
- ±0.10 % o.r. (standard)

Mass flow (gases)

±0.25 % o.r.

Mass flow (cryogenic liquids and gases under  $-100 \,^{\circ}\text{C}$  ( $-148 \,^{\circ}\text{F}$ ))  $\pm 0.35 \,^{\circ}\text{W}$  o.r. (order code for "Measuring tube material", option LA)

## Density (liquids)

Under reference conditions	Standard density calibration	Wide-range Density specification <sup>1) 2)</sup>	Extended density calibration <sup>3) 4)</sup>	
[g/cm³]	[g/cm³]	[g/cm³]	[g/cm³]	
±0.0005	±0.0005	±0.001	±0.0005	

- 1) Valid range for special density calibration: 0 to 2  $g/cm^3$ , +5 to +80 °C (+41 to +176 °F)
- 2) order code for "Application package", option EE "Special density" (for nominal diameter ≤ 100 DN)
- Valid range for extended density calibration: 0 to 2 g/cm<sup>3</sup>, +20 to +60  $^{\circ}$ C (+68 to +140  $^{\circ}$ F)
- 4) order code for "Application package", option E1 "Extended density"

Density (cryogenic liquids and gases under -100 °C (-148 °F))  $\pm 0.05$  g/cm<sup>3</sup> (order code for "Measuring tube material", option LA)

### **Temperature**

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

### Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	3/8	0.030	0.001
15	1/2	0.200	0.007
25	1	0.540	0.019
40	1½	2.25	0.083
50	2	3.50	0.129
80	3	9.0	0.330
100	4	14.0	0.514
150	6	32.0	1.17
250	10	88.0	3.23

High-temperature version: order code for "Measuring tube material", option TS, TT, TU

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
15	1/2	0.3	0.011
25	1	1.8	0.0662
50	2	7	0.2573
80	3	18	0.6615
100	4	21	0.7718
150	6	48	1.764
250	10	132	4.851

For devices with low-temperature version, order code for "Measuring tube mat., wetted surface", option LA, please note the following:

## NOTICE

Zero point confirmation and zero adjustment are difficult to carry out in the field due to the vaporization of the cryogenic liquid.

As a general rule, the factory-set zero point should not be changed. Please ensure that the medium is in the liquid phase if a zero adjustment is to be carried out.

#### Flow values

Flow values as turndown parameters depending on nominal diameter.

### SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18 000	1800	900	360	180	36
40	45 000	4500	2 250	900	450	90
50	70 000	7 000	3 500	1400	700	140
80	180 000	18000	9 000	3 600	1800	360
100	350000	35 000	17500	7 000	3 500	700
150	800 000	80 000	40 000	16000	8000	1600
250	2 200 000	220 000	110 000	44 000	22 000	4 400

#### US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
11/2	1654	165.4	82.70	33.08	16.54	3.308
2	2 5 7 3	257.3	128.7	51.46	25.73	5.146
3	6615	661.5	330.8	132.3	66.15	13.23
4	12860	1286	643.0	257.2	128.6	25.72
6	29 400	2 940	1470	588	294	58.80
10	80850	8085	4043	1617	808.5	161.7

## Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy ±5 μA	

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

#### Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base repeatability



Design fundamentals  $\rightarrow \triangleq 61$ 

Mass flow and volume flow (liquids)

±0.025 % o.r. (PremiumCal)

±0.05 % o.r.

Mass flow (gases)

±0.20 % o.r.

Mass flow (cryogenic liquids and gases under –100  $^{\circ}$ C (–148  $^{\circ}$ F))

 $\pm 0.175$  % % o.r. (order code for "Measuring tube material", option LA)

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$ 

Density (cryogenic liquids and gases under −100 °C (−148 °F))

±0.025 g/cm<sup>3</sup> (order code for "Measuring tube material", option LA)

**Temperature** 

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$ 

#### Response time

The response time depends on the configuration (damping).

## Influence of ambient temperature

### **Current output**

Temperature coefficient	Max. 1 μA/°C
-------------------------	--------------

### Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

## Influence of medium temperature

#### Mass flow

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measurement error of the sensors is typically  $\pm 0.0002$  %o.f.s./°C ( $\pm 0.0001$  % o.f.s./°F).

The influence is reduced when the zero adjustment is performed at process temperature.

#### Density

If there is a difference between the density calibration temperature and the process temperature, the measurement error of the sensors is typically  $\pm 0.00005$  g/cm<sup>3</sup>/°C ( $\pm 0.000025$  g/cm<sup>3</sup>/°F). Field density adjustment is possible.


Can also be used for order code for "Measuring tube material", option LA up to  $-100\,^{\circ}\text{C}$  ( $-148\,^{\circ}\text{F}$ ).

#### Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \equiv 57$ ) the measurement error is  $\pm 0.00005 \text{ g/cm}^3$  °C ( $\pm 0.000025 \text{ g/cm}^3$  °F)

#### Extended density specification

If the process temperature is outside the valid range ( $\rightarrow \triangleq 57$ ) the measurement error is  $\pm 0.000025 \text{ g/cm}^3 \text{ }^\circ\text{C} (\pm 0.0000125 \text{ g/cm}^3 \text{ }^\circ\text{F})$ 

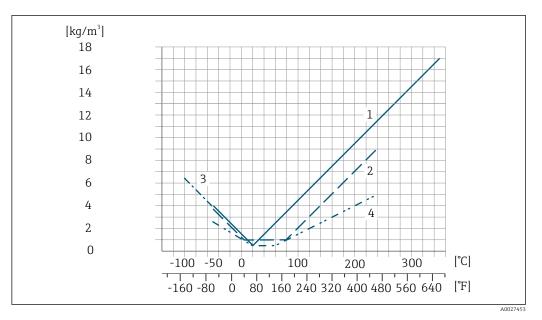

- Field density adjustment, for example at  $+20 \,^{\circ}\text{C}$  ( $+68 \,^{\circ}\text{F}$ )
- 2 Special density calibration
- 3 Applicable for the order code for "Measuring tube material", option LA
- 4 Extended density calibration

### Temperature

 $\pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

# Influence of medium pressure

The following shows how the process pressure (gauge pressure) affects the accuracy of the mass flow.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input or a digital input.
- Specifying a fixed value for the pressure in the device parameters.



Operating Instructions  $\rightarrow \blacksquare 145$ .

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
8	3/8	no influer	nce
15	1/2	-0.002	-0.0001
25	1	no influence	
40	11/2	-0.003	-0.0002
50	2	-0.008	-0.0006
80	3	-0.009	-0.0006
100	4	-0.007	-0.0005
150	6	-0.009	-0.0006
250	10	-0.009	-0.0006

## Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


### Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	N0021333
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± ZeroPoint MeasValue · 100
A0021333	A0021334

## ${\it Calculation of the maximum repeatability as a function of the flow rate}$

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	
$<\frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± ½ · ZeroPoint MeasValue · 100
A0021336	A0021337


## Example of maximum measurement error

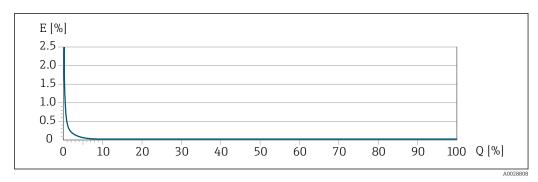

- $E \qquad \textit{Maximum measurement error in \% o.r. (example with PremiumCal)}$
- Q Flow rate in % of maximum full scale value

## Mounting

## Installation point

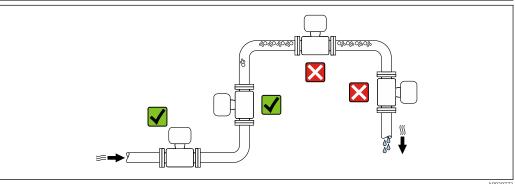

A002877


To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

62

## Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

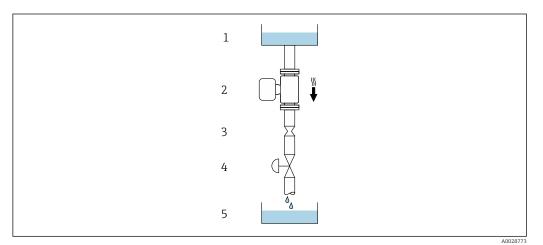

■ 23 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- *3 Orifice plate, pipe restriction*
- 4 Valve
- 5 Filling vessel

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	3/8	6	0.24
15	1/2	10	0.40
25	1	14	0.55
40	1 ½	22	0.87
50	2	28	1.10
80	3	50	1.97
100	4	65	2.60
150	6	90	3.54
250	10	150	5.91

## Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation	A0015591	<b>√ √</b> 1)
В	Horizontal orientation, transmitter at top	A0015589	✓ ✓ <sup>2)</sup> Exception: → 💀 24, 🖺 64

Orientation			Recommendation
С	Horizontal orientation, transmitter at bottom	A0015590	✓ ✓ ³) Exception: → 🖸 24, 🖺 64
D	Horizontal orientation, transmitter at side	A0015592	×

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

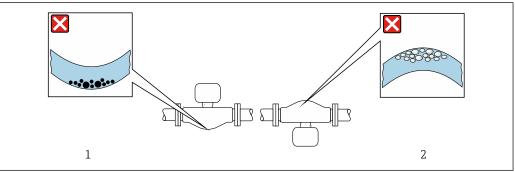

A00287

- 24 Orientation of sensor with curved measuring tube
- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating

Inlet and outlet runs


### Mounting the transmitter housing

## Proline 500 - digital transmitter

Pipe mounting

Required tools:

- Open-ended wrench AF 10
- Torx screwdriver TX 25

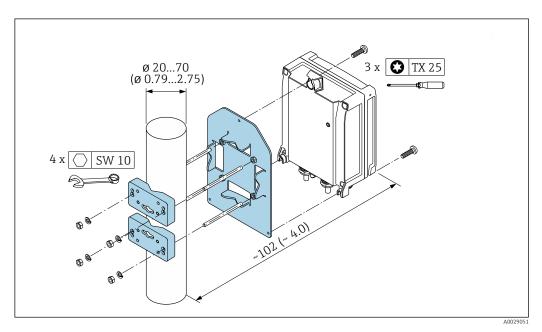


**₽** 25 Unit mm (in)

Wall mounting

Required tools:

Drill with drill bit Ø 6.0 mm

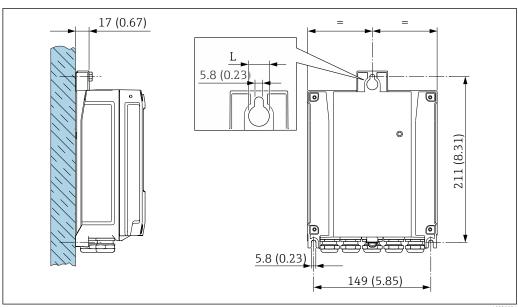

Engineering unit mm (in)

Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum, coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

### Proline 500 transmitter

Pipe mounting


Required tools Open-ended wrench AF 13

## **A** WARNING

## Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very

They are unstable if they are not mounted on a secure, fixed post.


▶ Only mount the transmitter on a secure, fixed post on a stable surface.

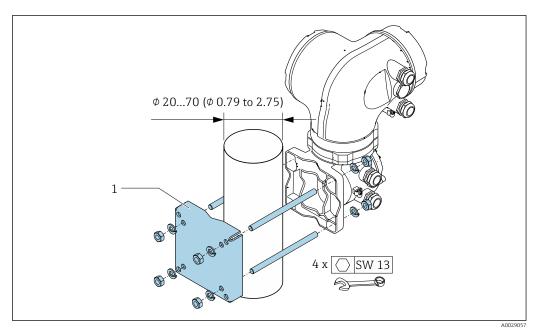

Engineering unit mm (in)

Wall mounting

Required tools Drill with drill bit Ø 6.0 mm

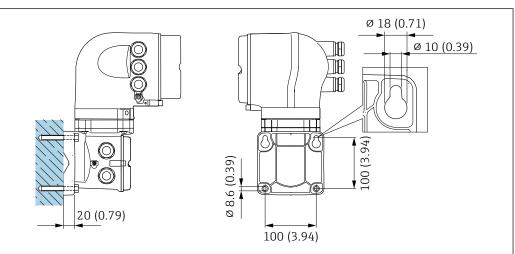

₽ 28 Engineering unit mm (in)

### Special mounting instructions

#### Drainability

When installed vertically, the measuring tubes can be drained completely and protected against buildup.

#### Hygienic compatibility



#### Rupture disk

Process-related information:  $\rightarrow \blacksquare 76$ .

### **A** WARNING

#### Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.


- ▶ Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- ▶ Observe the information on the rupture disk sticker.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Do not use a heating jacket.
- ▶ Do not remove or damage the rupture disk.

The position of the rupture disk is indicated by a sticker affixed beside it.

The transportation quard must be removed.

The existing connecting nozzles are not intended for the purpose of rinsing or pressure monitoring, but instead serve as the mounting location for the rupture disk.

In the event of a failure of the rupture disk, a drain device can be screwed onto the internal thread of the rupture disk in order to drain off any escaping medium.

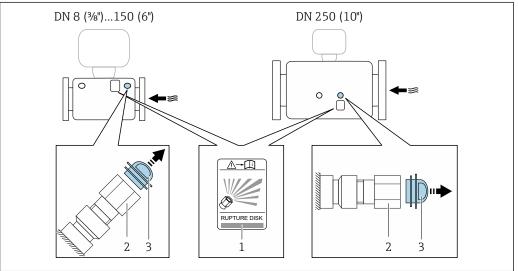

Δ002890

- 1 Rupture disk label
- 2 Rupture disk with 1/2" NPT internal thread and 1" width across flats
- 3 Transportation guard

For information on the dimensions, see the "Mechanical construction" section (accessories).

### Zero verification and zero adjustment

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very highviscosity fluids).
- For gas applications with low pressure

For information on checking the zero point and performing a zero adjustment, see the Operating Instructions for the device.



To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stresses during operation.

## **Environment**

## Ambient temperature range

Measuring device	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JP:         <ul> <li>-50 to +60 °C (-58 to +140 °F)</li> </ul> </li> <li>Order code for "Test, certificate", option JQ:         <ul> <li>Sensor: -60 to +60 °C (-76 to +140 °F)</li> </ul> </li> <li>Transmitter: -50 to +60 °C (-58 to +140 °F)</li> </ul>
Readability of the local display	-20 to $+60$ °C ( $-4$ to $+140$ °F) The readability of the display may be impaired at temperatures outside the temperature range.



▶ If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.

### Storage temperature

Climate	class
Cilliate	Class

DIN EN 60068-2-38 (test Z/AD)

#### Relative humidity

The device is suitable for use outdoors and indoors with a relative humidity of 4 to 95 %.

## Operating height

According to EN 61010-1

- ≤ 2 000 m (6 562 ft)
- > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)

#### Degree of protection

#### Transmitter

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2
- Display module: IP20, Type 1 enclosure, suitable for pollution degree 2

#### Sensor

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2

#### Optional

Order code for "Sensor options", option CM "IP69

#### External WLAN antenna

IP67

## Shock and vibration resistance

#### Vibration sinusoidal, in accordance with IEC 60068-2-6

Sensor: order code for "Meas. tube mat., wetted parts surface", option LA, SD, SE, SF, TH, TT, TU

- 2 to 8.4 Hz, 3.5 mm peak
- 8.4 to 2000 Hz, 1 g peak

Sensor: order code for "Meas. tube mat., wetted parts surface", option HA, SA, SB, SC

- 2 to 8.4 Hz, 7.5 mm peak
- 8.4 to 2000 Hz, 2 g peak

#### Transmitter

- 2 to 8.4 Hz, 7.5 mm peak
- 8.4 to 2000 Hz, 2 g peak

#### Vibration broad-band random, according to IEC 60068-2-64

Sensor: order code for "Meas. tube mat., wetted parts surface", option LA, SD, SE, SF, TH, TT, TU

- 10 to 200 Hz,  $0.003 \, g^2/Hz$
- 200 to 2000 Hz, 0.001 q<sup>2</sup>/Hz
- Total: 1.54 g rms

Sensor: order code for "Meas. tube mat., wetted parts surface", option HA, SA, SB, SC

- 10 to 200 Hz, 0.01 g<sup>2</sup>/Hz
- 200 to 2000 Hz, 0.003 g<sup>2</sup>/Hz
- Total: 2.70 g rms

#### Transmitter

- 10 to 200 Hz, 0.01 g<sup>2</sup>/Hz
- $\blacksquare$  200 to 2000 Hz, 0.003 g<sup>2</sup>/Hz
- Total: 2.70 g rms

### Shock half-sine, according to IEC 60068-2-27

- Sensor: order code for "Meas. tube mat., wetted parts surface", option LA, SD, SE, SF, TH, TT, TU 6 ms 30 q
- Sensor: order code for "Meas. tube mat., wetted parts surface", option HA, SA, SB, SC 6 ms 50 q
- Transmitter6 ms 50 g

### Rough handling shocks according to IEC 60068-2-31

#### Internal cleaning

- CIP cleaning
- SIP cleaning

#### **Options**

- Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA 1)
- Oil- and grease-free version for wetted parts as per IEC/TR 60877-2.0 and BOC 50000810-4, with declaration

Order code for "Service", option HB 1)

#### Mechanical load

Transmitter housing and sensor connection housing:

- Protect against mechanical effects, such as shock or impact
- Do not use as a ladder or climbing aid

## Electromagnetic compatibility (EMC)

- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- As per IEC/EN 61000-6-2 and IEC/EN 61000-6-4
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170
   Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.
- This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

## **Process**

## Medium temperature range

<sup>1)</sup> The cleaning refers to the measuring instrument only. Any accessories supplied are not cleaned.

Standard version	-50 to +150 °C (−58 to +302 °F)	Order code for "Measuring tube mat., wetted surface", option HA, SA, SB, SC
Extended temperature version	-50 to +240 °C (-58 to +464 °F)	Order code for "Measuring tube mat., wetted surface", option SD, SE, SF, TH
High-temperature version	-50 to +350 °C (−58 to +662 °F)	For nominal diameters DN 15 (½"), 25 (1"), 50 to 250 (2 to 10") Order code for "Measuring tube mat., wetted surface", option TS, TT, TU
Low-temperature version	-196 to +150 °C (-320 to +302 °F)  NOTICE  Material fatigue due to excessive temperature difference!  ► Maximum temperature difference of media used: 300 K	Order code for "Measuring tube mat., wetted surface", option LA

## Pressure-temperature ratings

The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.


- The medium temperature range of the device depends on the device version → 🗎 69.

  The values in the pressure-temperature curves only apply for the medium temperature range of the specific device version.
- The extended ambient temperature range for device versions with the order code for "Test, certificate", option JQ (sensor –60 to +60 °C (–76 to +140 °F)) has no effect on the values in the pressure-temperature ratings.

The value for the minimum ambient temperature  $-60\,^{\circ}\text{C}$  ( $-76\,^{\circ}\text{F}$ ) corresponds to the value for the minimum medium temperature of the standard version that is indicated in the pressure-temperature rating  $-50\,^{\circ}\text{C}$  ( $-58\,^{\circ}\text{F}$ ).


- Pressure-temperature ratings with the +151 to +240  $^{\circ}$ C (+304 to +464  $^{\circ}$ F) temperature range only for the extended temperature version of the measuring device.
  - Pressure-temperature ratings with the +241 to +350 °C (+466 to +662 °F) temperature range only for the high-temperature version of the measuring device.
  - Pressure-temperature ratings with the −196 to +150 °C (−320 to +302 °F) temperature range only for the low-temperature version of the measuring device.

#### Flange similar to EN 1092-1 (DIN 2501)

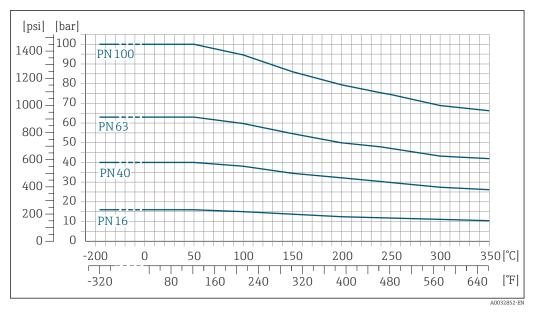


■ 29 With flange material 1.4404 (F316/F316L), Alloy C22

### Flange similar to ASME B16.5

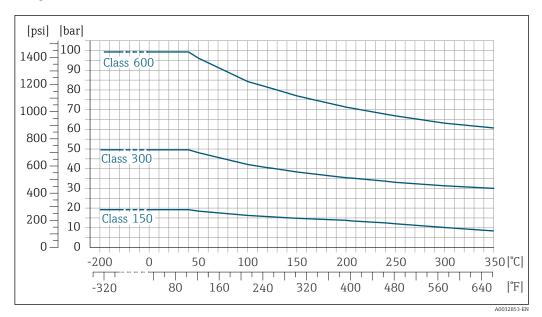


■ 30 With flange material 1.4404 (F316/F316L)

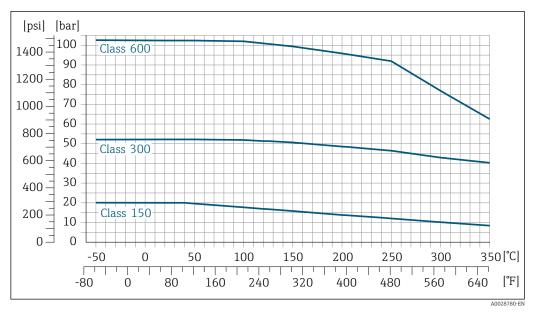


■ 31 With flange material Alloy C22

## Flange JIS B2220

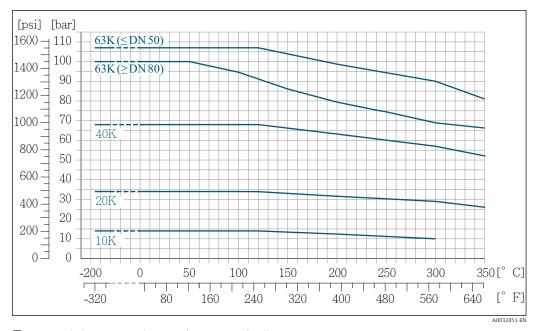


**■** 32 With flange material 1.4404 (F316/F316L), Alloy C22

## Flange DIN 11864-2 Form A

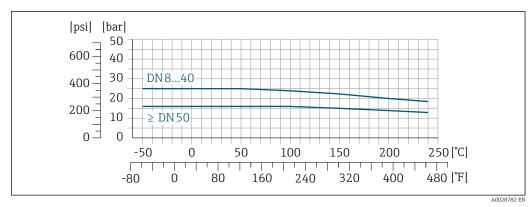

**■** 33 With connection material 1.4404 (316/316L)

## Lap joint flange according to EN 1092-1 (DIN 2501)

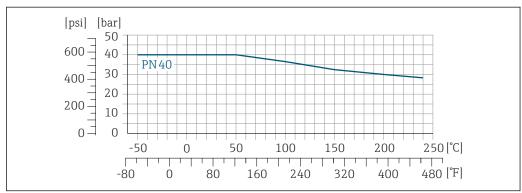


₹ 34 With flange material 1.4301 (F304); wetted parts Alloy C22

72 Endress+Hauser


A0028784-EN

#### Lap joint flange according to ASME B16.5

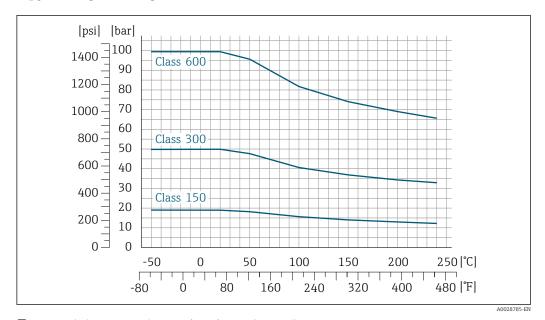


With flange material 1.4301 (F304); wetted parts Alloy C22

# Lap joint flange JIS B2220

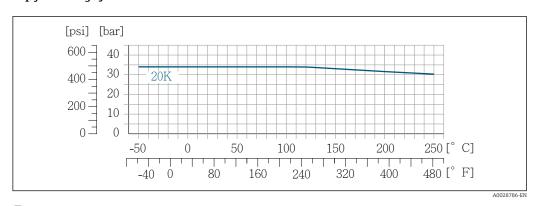

**№** 36 With flange material 1.4301 (F304); wetted parts Alloy C22


# Thread DIN 11851

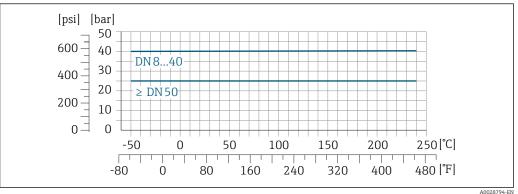

**■** 37 With connection material 1.4404 (316/316L)


DIN 11851 allows for applications up to +140  $^{\circ}$ C (+284  $^{\circ}$ F) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.

#### Thread DIN 11864-1 Form A

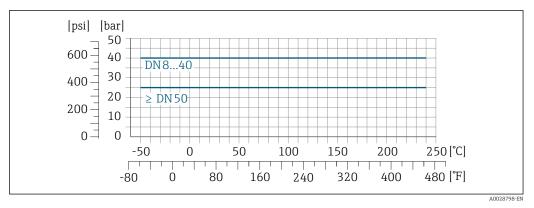


■ 38 With connection material 1.4404 (316/316L)

#### Thread ISO 2853

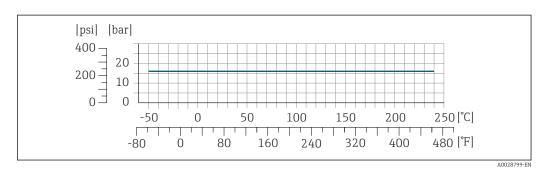

**■** 39 With connection material 1.4404 (316/316L)


# Thread SMS 1145

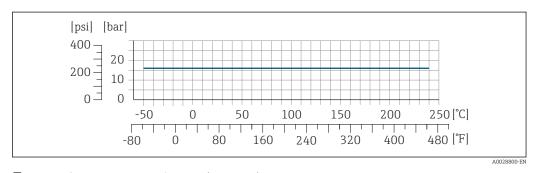

 $\blacksquare$  40 With connection material 1.4404 (316/316L)


SMS 1145 allows for applications up to 16 bar (232 psi) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.

#### VCO

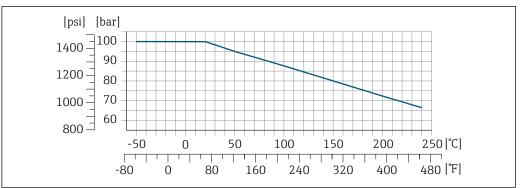

■ 41 With connection material 1.4404 (316/316L)

#### Tri-Clamp

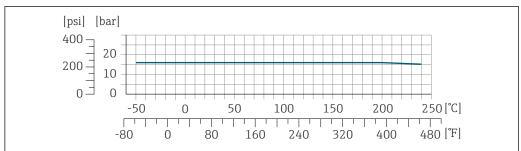

A0032216-EN

The clamp connections are suitable up to a maximum pressure of 16 bar (232 psi). Please observe the operating limits of the clamp and seal used as they can be over 16 bar (232 psi). The clamp and seal are not included in the scope of supply.

#### Sensor housing

For standard versions with the temperature range -50 to +150 °C (-58 to +302 °F), the sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

For all other temperature versions the sensor housing is filled with dry inert gas.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

In the event of a tube failure, the pressure level inside the sensor housing will rise according to the operating process pressure. If the user judges that the sensor housing burst pressure does not provide an adequate safety margin, the device can be fitted with a rupture disk. This prevents excessively high pressure from forming inside the sensor housing. Therefore, the use of a rupture disk is strongly recommended in applications involving high gas pressures, and particularly in applications in which the process pressure is greater than 2/3 of the sensor housing burst pressure.

If there is a need to drain the leaking medium into a discharge device, the sensor should be fitted with a rupture disk. Connect the discharge to the additional threaded connection  $\rightarrow \triangleq 99$ .

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

i

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure:

- DN 08 to 150 (3/8 to 6"): 5 bar (72.5 psi)
- DN 250 (10"):
  - Medium temperature ≤ 100 °C (212 °F): 5 bar (72.5 psi)
  - Medium temperature > 100 °C (212 °F): 3 bar (43.5 psi)

#### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive .

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing	burst pressure
[mm]	[in]	[bar]	[psi]
8	3/8	400	5800
15	1/2	350	5070
25	1	280	4060
40	11/2	260	3770
50	2	180	2610
80	3	120	1740
100	4	95	1370
150	6	75	1080
250	10	50	720

For information on the dimensions: see the "Mechanical construction" section  $\rightarrow \triangleq 80$ 

# Rupture disk


To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA "rupture disk").

The use of rupture disks cannot be combined with the separately available heating jacket.

For information on the dimensions: see the "Mechanical construction" section (accessories) > 🖺 99

#### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

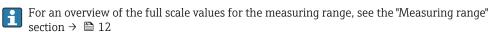

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- $\blacksquare$  In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
  - The maximum mass flow depends on the density of the gas: formula

#### Pressure loss

Promass F with reduced pressure loss: order code for "Sensor option", option CE "Reduced pressure loss"


#### Static pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high static pressure.

76

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

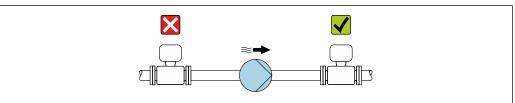

A002877

#### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation:

- Version with extended neck for insulation:
- Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).
- Extended temperature version:
  - Order code for "Measuring tube material", option SD, SE, SF or TH with an extended neck length of 105 mm (4.13 in).
- High-temperature version:
   Order code for "Measuring tube material", option TS, TT or TU with an extended neck length of 142 mm (5.59 in).

#### NOTICE

#### Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards
- ▶ Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- ► Regarding thermal insulation with an exposed extended neck: We advise against insulating the extended neck to ensure optimal heat dissipation.

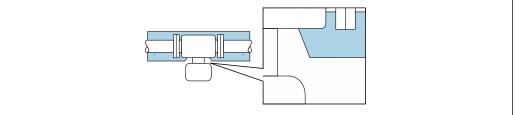

A0034391

■ 42 Thermal insulation with exposed extended neck



Low-temperature version: It is generally not necessary to insulate the sensor connection housing. If insulation is provided, the rules that apply are the same as those for thermal insulation.

#### Heating

Some fluids require suitable measures to avoid loss of heat at the sensor.

#### Heating options

- Electrical heating, e.g. with electric band heaters<sup>2)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

<sup>2)</sup> The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems" > 147

# NOTICE

#### Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ► Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- ► Consider the "830 ambient temperature too high" and "832 electronics temperature too high" process diagnostics if overheating cannot be ruled out based on a suitable system design.

#### **Vibrations**

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

# **Custody transfer**

The measuring device is optionally tested in accordance with OIML R117/R81 and has an EU type evaluation certificate which authorizes the use in EU type-examination certificates according to Measuring Instruments Directive 2014/32/EU for service subject to legal metrological control ("custody transfer") for liquids other than water and cryogenic liquids (Annex VII).

The measuring device is optionally tested according to OIML R137 and has an EU type-examination certificate according to Measuring Instruments Directive 2014/32/EU for service subject to legal metrological control ("custody transfer") as a gas meter (Annex IV).

The device is used with a legally controlled totalizer display on the local display and optionally with outputs subject to legal metrological control.

Measuring devices subject to legal metrological control totalize in both directions, i.e. all the outputs consider flow components in the positive (forward) and negative (reverse) flow direction.

Generally a measuring device subject to legal metrological control is secured against tampering by seals on the transmitter or sensor. These seals may normally only be opened by a representative of the competent authority for legal metrology controls.

After putting the device into circulation or after sealing the device, operation is only possible to a limited extent.

Detailed ordering information is available from your local Endress+Hauser sales center for national approvals, which are based on the OIML certificates, for applications with liquids other than water, cryogenic liquids or gases.




More information is provided in the supplementary documentation.

# Mechanical construction

#### Dimensions in SI units

Housing of Proline 500 – digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

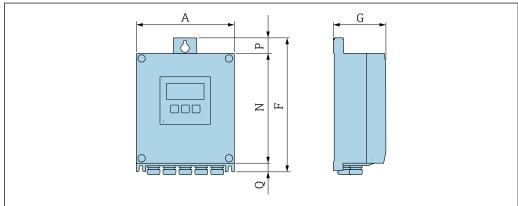

A003378

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"


A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
167	232	89	187	24	

 ${\it Order\ code\ for\ "Transmitter\ housing",\ option\ D\ "Polycarbonate"\ and\ order\ code\ for\ "Integrated\ ISEM\ electronics",\ option\ A\ "Sensor"$ 

A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
177	234	89	197	17	

# Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

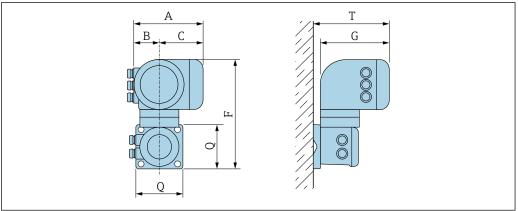

A003378

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"


A	B	C	F	G	Q	T
[mm]						
188	85	103	318	217	130	

80

 $\label{lem:code} \textit{Order code for "Transmitter housing", option $L$ "Cast, stainless" and order code for "Integrated ISEM electronics", option $B$ "Transmitter"}$ 

A	B	C	F	G	Q	T
[mm]						
188	85	103	295	217	130	

# Sensor with connection housing

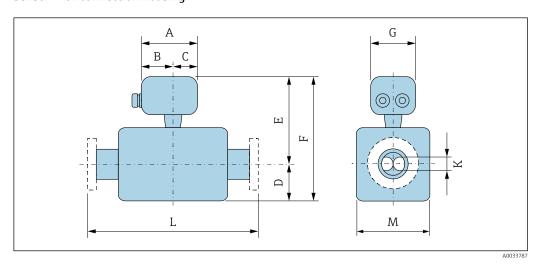

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	M
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	148	94	54	75	185	260	136	5.35	4)	70
15	148	94	54	75	185	260	136	8.31	4)	70
25	148	94	54	75 <sup>5)</sup>	185	260 <sup>5)</sup>	136	12.0	4)	70
40	148	94	54	105	189.5	294.5	136	17.6	4)	79
50	148	94	54	141	199.5	340.5	136	26.0	4)	99
80	148	94	54	200	219.5	419.5	136	40.5	4)	139
100	148	94	54	254	238	492	136	51.2	4)	176
150	148	94	54	378	259	637	136	68.9	4)	218
250	148	94	54	548	302.5	850.5	136	102.3	4)	305

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +70 mm
- 3) With order code for "Measuring tube material", option TS, TT, TU: values  $\pm 104 \text{ mm}$
- 4) Depending on the process connection  $\rightarrow$   $\blacksquare$  84
- 5) With order code for "Measuring tube material", option TT, TU: value +25 mm

Order code for "Sensor connection housing", option B "Stainless"

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	137	78	59	75	180	255	134	5.35	4)	70
15	137	78	59	75	180	255	134	8.31	4)	70
25	137	78	59	75 <sup>5)</sup>	180	255 <sup>5)</sup>	134	12.0	4)	70
40	137	78	59	105	184.5	289.5	134	17.6	4)	79

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
50	137	78	59	141	194.5	335.5	134	26.0	4)	99
80	137	78	59	200	214.5	414.5	134	40.5	4)	139
100	137	78	59	254	233	487	134	51.2	4)	176
150	137	78	59	378	254	632	134	68.9	4)	218
250	137	78	59	548	297.5	845.5	134	102.3	4)	305

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +70 mm
- 3) With order code for "Measuring tube material", option TS, TT, TU: values  $\pm 104 \text{ mm}$
- 4) Depending on the process connection  $\rightarrow \triangleq 84$
- 5) With order code for "Measuring tube material", option TT, TU: value +25 mm

Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	M
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	
8	124	68	56	75	180	255	112	5.35	4)	70
15	124	68	56	75	180	255	112	8.31	4)	70
25	124	68	56	75 <sup>5)</sup>	180	255 <sup>5)</sup>	112	12.0	4)	70
40	124	68	56	105	184.5	289.5	112	17.6	4)	79
50	124	68	56	141	194.5	335.5	112	26.0	4)	99
80	124	68	56	200	214.5	414.5	112	40.5	4)	139
100	124	68	56	254	233	487	112	51.2	4)	176
150	124	68	56	378	254	632	112	68.9	4)	218
250	124	68	56	548	297.5	845.5	112	102.3	4)	305

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +70 mm
- 3) With order code for "Measuring tube material", option TS, TT, TU: values  $\pm 104 \text{ mm}$
- 5) With order code for "Measuring tube material", option TT, TU: value +25 mm

Order code for "Sensor connection housing", option L "Cast, stainless"


DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	145	86	59	75	208	283	136	5.35	4)	70
15	145	86	59	75	208	283	136	8.31	4)	70
25	145	86	59	75 <sup>5)</sup>	208	283 <sup>5)</sup>	136	12.0	4)	70
40	145	86	59	105	212.5	317.5	136	17.6	4)	79
50	145	86	59	141	222.5	363.5	136	26.0	4)	99
80	145	86	59	200	242.5	442.5	136	40.5	4)	139
100	145	86	59	254	261	515	136	51.2	4)	176

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	M
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
150	145	86	59	378	282	660	136	68.9	4)	218
250	145	86	59	548	325.5	873.5	136	102.3	4)	305

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +70 mm
- 3) With order code for "Measuring tube material", option TS, TT, TU: values +104 mm
- 4) Depending on the process connection → 🗎 84
- 5) With order code for "Measuring tube material", option TT, TU: value +25 mm

#### Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

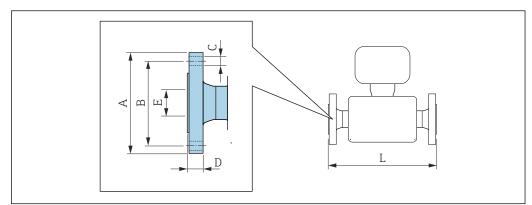

Length tolerance for dimension L in mm:

- DN  $\leq$  100: +1.5/-2.0
- DN ≥ 150: ±3.5

#### Flange similar to EN 1092-1 (DIN 2501): PN16

1.4404 (F316/F316L): order code for "Process connection", option D1S

Alloy C22: order code for "Process connection", option D1C

#### Flange with groove similar to EN 1092-1 Form D (DIN 2512N): PN16

1.4404 (F316/F316L): order code for "Process connection", option D5S Alloy C22: order code for "Process connection", option D5C

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
100	220	180	8 × Ø18	20	107.1	1 127/1 400 <sup>1)</sup>
150	285	240	8 × Ø22	22	159.3	1330/1700 <sup>1)</sup>
250	405	355	12 × Ø26	26	260.4	1775

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$ 

1) Installed length in accordance with NAMUR recommendation NE 132 optionally available (order code for "Process connection", option D1N or D5N (with groove))

	Flange similar to EN 1092-1 (DIN 2501): PN16 with reduction in nominal diameter 1.4404 (F316/F316L									
DN [mm]	Reduction to DN [mm]	Order code "Process connection", Option	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
100	80	DHS	220	180	8 × Ø18	20	107.1	874		
150	100	DJS	285	240	8 × Ø22	22	159.3	1167		
200	150	DLS	340	295	12 × Ø22	24	206.5	1461		
Surface ro	oughness (flang	e): EN 1092-1 Form	B1 (DIN 2	526 Form	C), Ra 3.2 to 12	.5 µm				

#### Flange similar to EN 1092-1 (DIN 2501): PN 40

1.4404 (F316/F316L): order code for "Process connection", option D2S

Alloy C22: order code for "Process connection", option D2C

#### Flange with groove similar to EN 1092-1 Form D (DIN 2512N): PN 40

1.4404 (F316/F316L): order code for "Process connection", option D6S

Alloy C22: order code for "Process connection", option D6C

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	95	65	4 × Ø14	16	17.3	370/510 <sup>2)</sup>
15	95	65	4 × Ø14	16	17.3	404/510 <sup>2)</sup>
25	115	85	4 × Ø14	18	28.5	440/600 <sup>2)</sup>
40	150	110	4 × Ø18	18	43.1	550
50	165	125	4 × Ø18	20	54.5	715/715 <sup>2)</sup>
80	200	160	8 × Ø18	24	82.5	840/915 2)
100	235	190	8 × Ø22	24	107.1	1 127
150	300	250	8 × Ø26	28	159.3	1370
250	450	385	12 × Ø33	38	258.8	1845
Surface rough	ness (flange):	EN 1092-1 For	m B1 (DIN 2526 Fo	orm C), Ra 3.2	to 12.5 μm	

- 1) DN 8 with DN 15 flanges as standard
- 2) Installed length in accordance with NAMUR recommendation NE 132 optionally available (order code for "Process connection", option D2N or D6N (with groove))

	Flange similar to EN 1092-1 (DIN 2501): PN 40 (with DN 25 flanges) 1.4404 (F316/F316L): order code for "Process connection", option R2S									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]				
8	115	85	4 × Ø14	18	28.5	440				
15	115	85	4 × Ø14	18	28.5	440				
Surface roughr	ness (flange): EN	I 1092-1 Form I		n C). Ra 3.2 to 1	2.5 um					

	Flange similar to EN 1092-1 (DIN 2501): PN 40 with reduction in nominal diameter 1.4404 (F316/F316L)										
DN [mm]	Reduction to DN [mm]	Order code "Process connection", Option	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
50	40	DFS	165	125	4 × Ø18	20	54.5	555			
80	50	DGS	200	160	8 × Ø18	24	82.5	840			
100	80	DIS	235	190	8 × Ø22	24	107.1	874			
150	100	DKS	300	250	8 × Ø26	28	159.3	1167			
200	150	DMS	375	320	12 × Ø30	34	206.5	1461			
Surface ro	oughness (flang	e): EN 1092-1 Form	B1 (DIN 2	526 Form	C), Ra 3.2 to 12	.5 µm					

Flange similar to EN 1092-1 (DIN 2501): PN 63

1.4404 (F316/F316L): order code for "Process connection", option D3S

Alloy C22: order code for "Process connection", option D3C

Flange with groove similar to EN 1092-1 Form D (DIN 2512N): PN 63

1.4404 (F316/F316L): order code for "Process connection", option D7S

Alloy C22: order code for "Process connection", option D7C

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
50	180	135	4 × Ø22	26	54.5	724
80	215	170	8 × Ø22	28	81.7	875
100	250	200	8 × Ø26	30	106.3	1127
150	345	280	8 × Ø33	36	157.1	1410
250	470	400	12 × Ø36	46	255.4	1885

Surface roughness (flange):

EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$  EN 1092-1 Form B2 (DIN 2526 Form E), Ra 0.8 to 3.2  $\mu m$ 

#### Flange similar to EN 1092-1 (DIN 2501): PN 100

1.4404 (F316/F316L): order code for "Process connection", option D4S

Alloy C22: order code for "Process connection", option D4C

# Flange with groove similar to EN 1092-1 Form D (DIN 2512N): PN 100 $\,$

1.4404 (F316/F316L): order code for "Process connection", option D8S

Alloy C22: order code for "Process connection", option D8C

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	105	75	4 × Ø14	20	17.3	400
15	105	75	4 × Ø14	20	17.3	420
25	140	100	4 × Ø18	24	28.5	470
40	170	125	4 × Ø22	26	42.5	590
50	195	145	4 × Ø26	28	53.9	740
80	230	180	8 × Ø26	32	80.9	885
100	265	210	8 × Ø30	36	104.3	1127
150	355	290	12 × Ø33	44	154.0	1450
	(6)		/	=\ = 0.0.	_	

Surface roughness (flange): EN 1092-1 Form B2 (DIN 2526 Form E), Ra 0.8 to  $3.2~\mu m$ 

#### 1) DN 8 with DN 15 flanges as standard

Flange similar to EN 1092-1 (DIN 2501): PN 100  $\,$ 

Alloy C22: order code for "Process connection", option  ${\bf D4C}$ 

# Flange with groove similar to EN 1092-1 Form D (DIN 2512N): PN 100 $\,$

Alloy C22: order code for "Process connection", option D8C

DN	A	B	C	D	E	L
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
250	505	430	12 × Ø39	60	248.0	1949

Surface roughness (flange): EN 1092-1 Form B2 (DIN 2526 Form E), Ra 0.8 to 3.2  $\mu m$ 

86

1.4404 (F316	Flange similar to ASME B16.5: Class 150 1.4404 (F316/F316L): order code for "Process connection", option AAS Alloy C22: order code for "Process connection", option AAC										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]					
8 <sup>1)</sup>	90	60.3	4 × Ø15.7	11.2	15.7	370					
15	90	60.3	4 × Ø15.7	11.2	15.7	404					
25	110	79.4	4 × Ø15.7	14.2	26.7	440					
40	125	98.4	4 × Ø15.9	15.9	40.9	550					
50	150	120.7	4 × Ø19.1	19.1	52.6	715					
80	190	152.4	4 × Ø19.1	23.9	78.0	840					
100	230	190.5	8 × Ø19.1	23.9	102.4	1127					
150	280	241.3	8 × Ø22.4	25.4	154.2	1398					
250	405	362	12 × Ø25.4	30.2	254.5	1832					
Surface rough	ness (flange): F	Ra 3.2 to 6.3 µm	n								

Flange similar to ASME B16.5: Class 150 with reduction in nominal diameter 1.4404 (F316/F316L)										
DN [mm]	Reduction to DN [mm]	Order code "Process connection", Option	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
50	40	AHS	150	120.7	4 × Ø19.1	19.1	52.6	550		
80	50	AJS	190	152.4	4 × Ø19.1	23.9	78.0	720		
100	80	ALS	230	190.5	8 × Ø19.1	23.9	102.4	874		
150	100	ANS	280	241.3	8 × Ø22.4	25.4	154.2	1167		
200	150	APS	345	298.5	8 × Ø22.4	29	202.7	1461		
Surface ro	oughness (flang	e): Ra 3.2 to 6.3 µm					1			

1.4404 (F316	Flange similar to ASME B16.5: Class 300 1.4404 (F316/F316L): order code for "Process connection", option ABS Alloy C22: order code for "Process connection", option ABC										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]					
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	14.2	15.7	370					
15	95	66.7	4 × Ø15.7	14.2	15.7	404					
25	125	88.9	4 × Ø19.1	17.5	26.7	440					
40	155	114.3	4 × Ø22.3	20.6	40.9	550					
50	165	127	8 × Ø19.1	22.3	52.6	715					
80	210	168.3	8 × Ø22.3	28.4	78.0	840					
100	255	200	8 × Ø22.3	31.7	102.4	1127					
150	320	269.9	12 × Ø22.3	36.5	154.2	1417					
250	445	387.4	16 × Ø28.4	47.4	254.5	1863					
Surface rough	ness (flange): F	Ra 3.2 to 6.3 µn	n								

1) DN 8 with DN 15 flanges as standard

	Flange similar to ASME B16.5: Class 300 with reduction in nominal diameter 1.4404 (F316/F316L)										
DN [mm]	Reduction to DN [mm]	Order code "Process connection", Option	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
50	40	AIS	165	127	8 × Ø19.1	22.3	52.6	615			
80	50	AKS	210	168.3	8 × Ø22.3	28.4	78.0	732			
100	80	AMS	255	200	8 × Ø22.3	31.7	102.4	894			
150	100	AOS	320	269.9	12 × Ø22.3	36.5	154.2	1187			
200	150	AQS	380	330.2	12 × Ø25.4	41.7	202.7	1461			
Surface ro	oughness (flang	e): Ra 3.2 to 6.3 µm									

1.4404 (F316	Flange similar to ASME B16.5: Class 600 1.4404 (F316/F316L): order code for "Process connection", option ACS Alloy C22: order code for "Process connection", option ACC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]				
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	20.6	13.9	400				
15	95	66.7	4 × Ø15.7	20.6	13.9	420				
25	125	88.9	4 × Ø19.1	23.9	24.3	490				
40	155	114.3	4 × Ø22.3	28.7	38.1	600				
50	165	127	8 × Ø19.1	31.8	49.2	742				
80	210	168.3	8 × Ø22.3	38.2	73.7	900				
100	275	215.9	8 × Ø25.4	48.4	97.3	1157				
150	355	292.1	12 × Ø28.4	47.8	154.2	1467				
250	510	431.8	16 × Ø35.1	69.9	254.5	1946				
Surface rough	Surface roughness (flange): Ra 3.2 to 6.3 μm									

Flange JIS B2220: 10K 1.4404 (F316/F316L): order code for "Process connection", option NDS Alloy C22: order code for "Process connection", option NDC									
DN         A         B         C         D         E         L           [mm]         [mm]         [mm]         [mm]         [mm]									
50	155	120	4 × Ø19	16	50	715			
80	185	150	8 × Ø19	18	80	832			
100	210	175	8 × Ø19	18	100	1127			
150	280	240	8 × Ø23	22	150	1354			
250 400 355 12 × Ø25 24 250 1775									
Surface rough	ness (flange): Ra	a 3.2 to 6.3 µm							

Flange JIS B2220: 20K 1.4404 (F316/F316L): order code for "Process connection", option NES Alloy C22: order code for "Process connection", option NEC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
8 <sup>1)</sup>	95	70	4 × Ø15	14	15	370			
15	95	70	4 × Ø15	14	15	404			
25	125	90	4 × Ø19	16	25	440			
40	140	105	4 × Ø19	18	40	550			
50	155	120	8 × Ø19	18	50	715			
80	200	160	8 × Ø23	22	80	832			
100	225	185	8 × Ø23	24	100	1127			
150	305	260	12 × Ø25	28	150	1386			
250	430	380	12 × Ø27	34	250	1845			
Surface rough	ness (flange): Ra	a 1.6 to 3.2 µm							


1.4404 (F316	Flange JIS B2220: 40K 1.4404 (F316/F316L): order code for "Process connection", option NGS Alloy C22: order code for "Process connection", option NGC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]				
8 1)	115	80	4 × Ø19	20	15	400				
15	115	80	4 × Ø19	20	15	425				
25	130	95	4 × Ø19	22	25	485				
40	160	120	4 × Ø23	24	38	600				
50	165	130	8 × Ø19	26	50	760				
80	210	170	8 × Ø23	32	75	890				
100	250	205	8 × Ø25	36	100	1167				
150	355	295	12 × Ø33	44	150	1498				
Surface rough	ness (flange): Ra	a 1.6 to 3.2 µm								

1) DN 8 with DN 15 flanges as standard

Flange JIS B2220: 63K 1.4404 (F316/F316L): order code for "Process connection", option NHS Alloy C22: order code for "Process connection", option NHC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
8 <sup>1)</sup>	120	85	4 × Ø19	23	12	420			
15	120	85	4 × Ø19	23	12	440			
25	140	100	4 × Ø23	27	22	494			
40	175	130	4 × Ø25	32	35	620			
50	185	145	8 × Ø23	34	48	775			
80	230	185	8 × Ø25	40	73	915			
100	270	220	8 × Ø27	44	98	1167			

Flange JIS B2220: 63K 1.4404 (F316/F316L): order code for "Process connection", option NHS Alloy C22: order code for "Process connection", option NHC									
DN [mm]									
150 365 305 12 × Ø33 54 146 1528									
Surface rough	Surface roughness (flange): Ra 1.6 to 3.2 µm								

#### Fixed flange DIN 11864-2

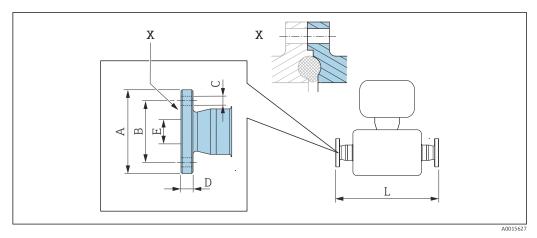

 $\blacksquare$  43 Detail X: Asymmetrical process connection; the part shown in blue is provided by the supplier.

Flange DIN11864-2 Form A, for pipe according to DIN11866 series A, flange with notch

Length tolerance for dimension L in mm: +1.5 / -2.0

#### 1.4404 (316/316L) Order code for "Process connection", option KCS Α С Ε [mm] [mm] [mm] [mm] [mm] [mm] [mm] 8 1) 54 37 $4 \times Ø9$ 10 10 387 15 59 42 4 × Ø9 10 418 16 25 70 53 $4 \times Ø9$ 10 26 454 40 82 65 $4 \times Ø9$ 10 38 560 $4 \times Ø9$ 94 77 10 720 50 50 80 133 112 8 × Ø11 12 81 900

8 × Ø11

100

1127

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 0.76 \ \mu m$ : order code for "Measuring tube material", option SB, SE, SJ, SL or

137

 $Ra \le 0.38 \ \mu m$ : order code for "Measuring tube material", option SC, SF, SK, SM


 $Ra \leq 0.38~\mu m$  electropolished: order code for "Measuring tube material", option BC, BG

1) DN 8 with DN 10 flanges as standard

159

100

# Lap joint flange EN 1092-1, ASME B16.5, JIS B2220

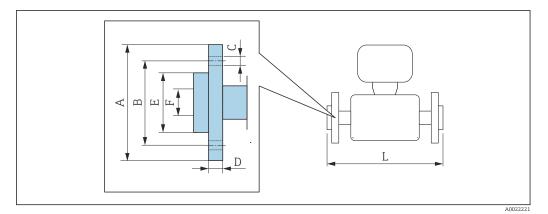

Length tolerance for dimension L in mm: +1.5 / -2.0

Lap joint flange similar to EN 1092-1 Form D: PN 40 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option DAC								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	L <sub>diff</sub> 1) [mm]
8 <sup>2)</sup>	95	65	4 × Ø14	14.5	45	17.3	370	0
15	95	65	4 × Ø14	14.5	45	17.3	404	0
25	115	85	4 × Ø14	16.5	68	28.5	444	+4
40	150	110	4 × Ø18	21	88	43.1	560	+10
50	165	125	4 × Ø18	23	102	54.5	719	+4
80	200	160	8 × Ø18	29	138	82.5	848	+8
100	235	190	8 × Ø22	34	162	107.1	1131	+4
Surface rou	ighness (fla	nge): Ra 3.2	to 12.5 µm					

- 1) Difference to installed length of the welding neck flange (order code for "Process connection", option D2C)
- 2) DN 8 with DN 15 flanges as standard

1.4301 (F	Lap joint flange similar to ASME B16.5: Class 150 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option ADC								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	L <sub>diff</sub> 1) [mm]	
8 <sup>2)</sup>	90	60.3	4 × Ø 15.7	15	35.1	15.7	370	0	
15	90	60.3	4 × Ø 15.7	15	35.1	15.7	404	0	
25	110	79.4	4 × Ø 15.7	16	50.8	26.7	440	0	
40	125	98.4	4 × Ø 15.7	15.9	73.2	40.9	550	0	
50	150	120.7	4 × Ø 19.1	19	91.9	52.6	715	0	
80	190	152.4	4 × Ø 19.1	22.3	127.0	78.0	840	0	
100	230	190.5	8 × Ø 19.1	26	157.2	102.4	1 127	0	
Surface rou	ighness (fla	nge): Ra 3.2	to 12.5 µm						

- 1) Difference to installed length of the welding neck flange (order code for "Process connection", option AAC)
- 2) DN 8 with DN 15 flanges as standard

Lap joint flange similar to ASME B16.5: Class 300 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option AEC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	L <sub>diff</sub> 1) [mm]	
8 <sup>2)</sup>	95	66.7	4 × Ø 15.7	16.5	35.1	15.7	376	+6	
15	95	66.7	4 × Ø 15.7	16.5	35.1	15.7	406	+2	
25	125	88.9	4 × Ø 19.1	21.0	50.8	26.7	450	+10	
40	155	114.3	4 × Ø 22.3	23.0	73.2	40.9	564	+14	
50	165	127	8 × Ø 19.1	25.5	91.9	52.6	717	+2	
80	210	168.3	8 × Ø 22.3	31.0	127.0	78.0	852.6	+12.6	
100	255	200	8 × Ø 22.3	32.0	157.2	102.4	1139	+12	
Surface rou	ıghness (fla	nge): Ra 3.2	to 12.5 um	•	•				

- Difference to installed length of the welding neck flange (order code for "Process connection", option ABC)
- 2) DN 8 with DN 15 flanges as standard

Lap joint flange similar to ASME B16.5: Class 600 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option AFC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	L <sub>diff</sub> 1) [mm]	
8 <sup>2)</sup>	95	66.7	4 × Ø 15.7	17.0	35.1	13.9	400	0	
15	95	66.7	4 × Ø 15.7	17.0	35.1	13.9	420	0	
25	125	88.9	4 × Ø 19.1	21.5	50.8	24.3	490	0	
40	155	114.3	4 × Ø 22.3	25.0	73.2	38.1	600	0	
50	165	127	8 × Ø 19.1	28.0	91.9	49.2	742	0	
80	210	168.3	8 × Ø 22.3	35.0	127.0	73.7	900	0	
100	275	215.9	8 × Ø 25.4	44.0	157.2	97.3	1167	+10	
Surface rou	ighness (fla	nge): Ra 3.2	to 12.5 µm						


- Difference to installed length of the welding neck flange (order code for "Process connection", option ACC)
- DN 8 with DN 15 flanges as standard

1.4301 (F3	Lap joint flange JIS B2220: 20K 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option NIC										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	L <sub>diff</sub> 1) [mm]			
8 <sup>2)</sup>	95	70	4 × Ø 15	14	51	15	370	0			
15	95	70	4 × Ø 15	14	51	15	404	0			
25	125	90	4 × Ø 19	18.5	67	25	440	0			
40	140	105	4 × Ø 19	18.5	81	40	550	0			
50	155	120	8 × Ø 19	23	96	50	715	0			
80	200	160	8 × Ø 23	29	132	80	844	+12			
100	225	185	8 × Ø 23	29	160	100	1127	0			
Surface rou	ghness (flan	ge): Ra 3.2 to	o 12.5 µm								

- Difference to installed length of the welding neck flange (order code for "Process connection", option NEC) DN 8 with DN 15 flanges as standard  $\,$ 1)
- 2)

#### Clamp connections

#### Tri-Clamp

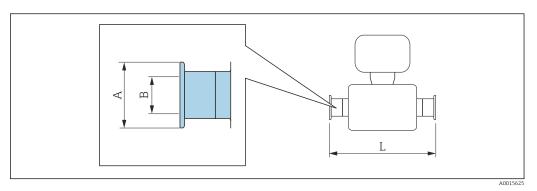

Length tolerance for dimension L in mm: +1.5 / -2.0

#### Tri-Clamp (1/2"), for pipe according to DIN 11866 series C 1.4404 (316/316L) Order code for "Process connection", option FDW DN В Clamp Α [mm] [in] [mm] [mm] [mm] 8 25.0 9.5 367 15 1/2 25.0 9.5 398

3-A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 0.76 \ \mu m$ : order code for "Measuring tube material", option SB, SE, SJ, SL or

 $Ra \le 0.38 \ \mu m$ : order code for "Measuring tube material", option SC, SF, SK, SM

 $Ra \le 0.38 \ \mu m$  electropolished: order code for "Measuring tube material", option BC, BG

Tri-Clamp ( ≥ 1"), for pipe according to DIN 11866 series C  1.4404 (316/316L)  Order code for "Process connection", option FTS								
DN [mm]	Clamp [in]	A [mm]	B [mm]	L [mm]				
8	1	50.4	22.1	367				
15	1	50.4	22.1	398				
25	1	50.4	22.1	434				
40	11/2	50.4	34.8	560				
50	2	63.9	47.5	720				
80	3	90.9	72.9	900				
100	4	118.9	97.4	1 127				

 $3-A\ version\ available: order\ code\ for\ "Additional\ approval",\ option\ LP\ in\ conjunction\ with$ 


 $Ra \le 0.76 \ \mu m$ : order code for "Measuring tube material", option SB, SE, SJ, SL or

 $Ra \le 0.38 \ \mu m$ : order code for "Measuring tube material", option SC, SF, SK, SM

Ra  $\leq 0.38 \, \mu m$  electropolished: order code for "Measuring tube material", option BC, BG

# Threaded couplings

Threaded adapter DIN 11851, DIN11864-1, SMS 1145

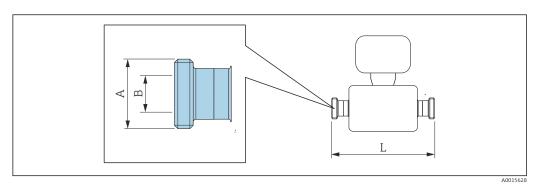

Length tolerance for dimension L in mm: +1.5 / -2.0

Threaded adapter DIN 11851, for pipe according to DIN11866 series A 1.4404 (316/316L) Order code for "Process connection", option FMW								
DN [mm]	A [in]	B [mm]	L [mm]					
8	Rd 34 × ½	16	367					
15	Rd 34 × ½	16	398					
25	Rd 52 × ½	26	434					
40	Rd 65 × ½	38	560					
50	Rd 78 × ½	50	720					
80	Rd 110 × 1/4	81	900					
100 Rd 130 × 1/4 100 1127								
	3-A version available: order code for "Additional approval", option LP in conjunction with Ra ≤ 0.76 µm: order code for "Measuring tube material", option SB, SE, SJ, SL							

Threaded adapter DIN11864-1 Form A, for pipe according to DIN11866 series A 1.4404 (316/316L)  Order code for "Process connection", option FLW									
DN A B L [mm] [mm]									
8	Rd 28 × ½	10	367						
15	Rd 34 × <sup>1</sup> ⁄ <sub>8</sub>	16	398						
25	Rd 52 × ½	26	434						
40	Rd 65 × ½	38	560						
50	Rd 78 × 1/ <sub>6</sub>	50	720						
80	Rd 110 × 1/4	81	900						
100	Rd 130 × 1/4	100	1127						

3-A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 0.76 \ \mu m$ : order code for "Measuring tube material", option SB, SE, SJ, SL or

 $Ra \leq 0.38~\mu m$ : order code for "Measuring tube material", option SC, SF, SK, SM

 $Ra \le 0.38 \ \mu m$  electropolished: order code for "Measuring tube material", option BC, BG


# Threaded adapter SMS 1145 1.4404 (316/316L)

Order code for "Process connection", option SCS

order code jor trocess con	inection, option bas		
DN [mm]	A [in]	B [mm]	L [mm]
8	Rd 40 × <sup>1</sup> ⁄ <sub>6</sub>	22.6	367
15	Rd 40 × 1/ <sub>6</sub>	22.6	398
25	Rd 40 × 1/ <sub>6</sub>	22.6	434
40	Rd 60 × 1/ <sub>6</sub>	35.6	560
50	Rd 70 × ⅓	48.6	720
80	Rd 98 × 1/ <sub>6</sub>	72.9	900
100	Rd 132 × <sup>1</sup> / <sub>6</sub>	97.6	1127

<sup>3-</sup>A version available: order code for "Additional approval", option LP in conjunction with Ra  $\leq 0.76~\mu m$ : order code for "Measuring tube material", option SB, SE, SJ, SL

# Threaded adapter ISO 2853

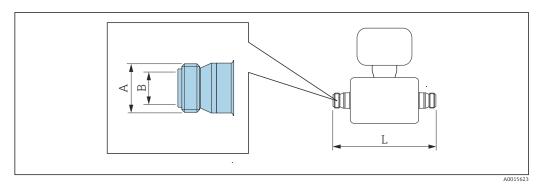

Length tolerance for dimension L in mm: +1.5 / -2.0

Threaded adapter ISO 2853, for pipe according to ISO 2037 1.4404 (316/316L) Order code for "Process connection", option JSF										
DN A 1) B L [mm] [mm] [mm]										
8	37.13	22.6	367							
15	37.13	22.6	398							
25	37.13	22.6	434							
40	52.68	35.6	560							
50	64.16	48.6	720							
80	91.19	72.9	900							
100	118.21	97.6	1127							


3-A version available: order code for "Additional approval", option LP in conjunction with

Ra  $\leq 0.76~\mu m$ : order code for "Measuring tube material", option SB, SE, SJ, SL or Ra  $\leq 0.38~\mu m$ : order code for "Measuring tube material", option SC, SF, SK, SM

 $Ra \le 0.38 \ \mu m$  electropolished: order code for "Measuring tube material", option BC, BG

Max. thread diameter according to ISO 2853 Annex A 1)

VCO

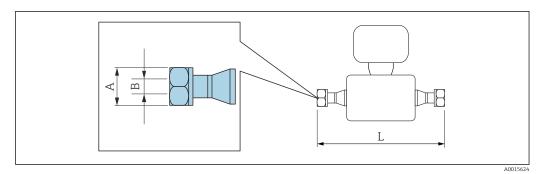

Length tolerance for dimension L in mm: +1.5 / -2.0


8-VCO-4 (½") 1.4404 (316/316L) Order code for "Process conne	ection", option <b>CVS</b>		
DN [mm]	A [in]	B [mm]	L [mm]
8	AF 1	10.2	390

12-VCO-4 (¾") 1.4404 (316/316L) Order code for "Process conr								
DN [mm]	A [in]	B [mm]	L [mm]					
15	AF 1½	15.7	430					

98

#### Accessories

# Rupture disk/purge connections

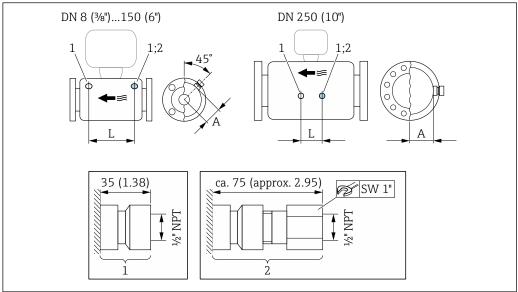


A0028914

#### **€** 44


- Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"
- 2 Connection nipple with rupture disk: order code for "Sensor option", option CA "Rupture disk"

DN	А	L
[mm]	[mm]	[mm]
8	62	216
15	62	220
25	62	260
40	67	310
50	79	452
80	101	560
100	120	684
150	141	880
250	182	380

# Weather protection cover

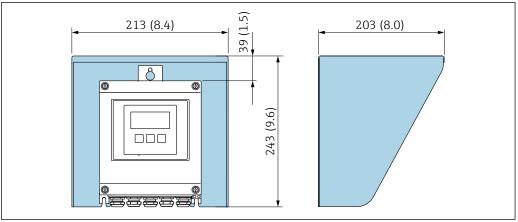

■ 45 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

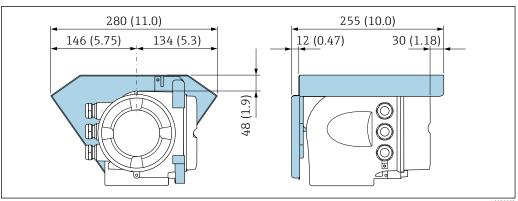


 $\blacksquare$  46 Weather protection cover for Proline 500; engineering unit mm (in)

External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

Proline 500 – digital

External WLAN antenna mounted on device

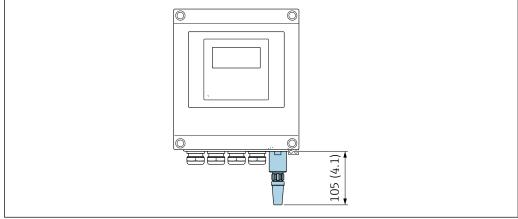

■ 47 Engineering unit mm (in)

100 Endress+Hauser


A002955

A002955

A00336

#### External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

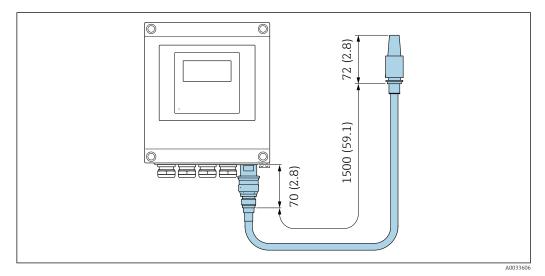

🖪 48 🛮 Engineering unit mm (in)

#### Proline 500


External WLAN antenna mounted on device

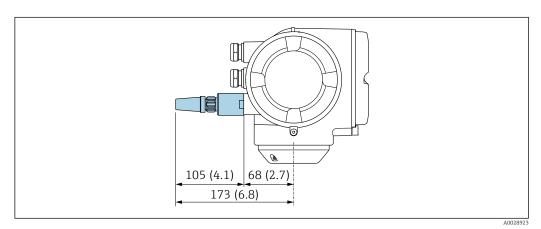

■ 49 Engineering unit mm (in)

#### External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

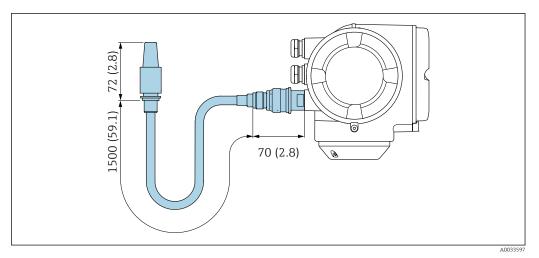


■ 50 Engineering unit mm (in)

#### Dimensions in US units

# Housing of Proline 500 - digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

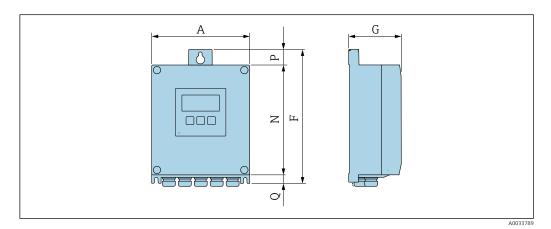

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"


A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.57	9.13	3.50	7.36	0.94	

Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor"

A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.97	9.21	3.50	7.76	0.67	

# Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

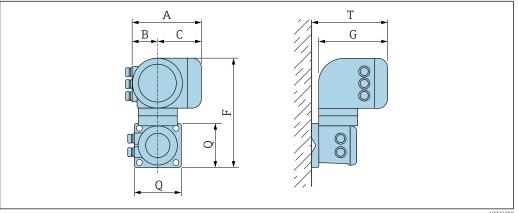


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	12.5	8.54	5.12	9.41

Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Transmitter"

A [in]	B [in]	C [in]	F [in]	G [in]	Q [in]	T [in]	
7.40	3.35	4.06	11.6	8.54	5.12	9.41	

# Sensor with connection housing

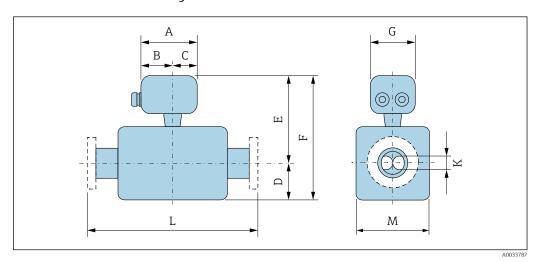

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	5.83	3.70	2.13	2.95	7.28	10.24	5.35	0.21	4)	2.76
1/2	5.83	3.70	2.13	2.95	7.28	10.24	5.35	0.33	4)	2.76
1	5.83	3.70	2.13	2.95 <sup>5)</sup>	7.28	10.24 5)	5.35	0.47	4)	2.76
1½	5.83	3.70	2.13	4.13	7.46	11.59	5.35	0.69	4)	3.11
2	5.83	3.70	2.13	5.55	7.85	13.41	5.35	1.02	4)	3.90
3	5.83	3.70	2.13	7.87	8.64	16.52	5.35	1.59	4)	5.47
4	5.83	3.70	2.13	10	9.37	19.37	5.35	2.02	4)	6.93
6	5.83	3.70	2.13	14.88	10.2	25.08	5.35	2.71	4)	8.58
10	5.83	3.70	2.13	21.57	11.91	33.48	5.35	4.03	4)	12.01

- Depending on the cable gland used: values up to  $\pm$  1.18 in 1)
- With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, 2) SF, TH, LA: values +2.76 in
- 3) With order code for "Measuring tube material", option TS, TT, TU: values +4.09 in
- Depending on the process connection  $\rightarrow \blacksquare 107$ 4)
- With order code for "Measuring tube material", option TT, TU: value +0.98 in

Order code for "Sensor connection housing", option B "Stainless"

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	5.39	3.07	2.32	2.95	7.09	10.04	5.28	0.21	4)	2.76
1/2	5.39	3.07	2.32	2.95	7.09	10.04	5.28	0.33	4)	2.76
1	5.39	3.07	2.32	2.95 <sup>5)</sup>	7.09	10.04 <sup>5)</sup>	5.28	0.47	4)	2.76
1½	5.39	3.07	2.32	4.13	7.26	11.4	5.28	0.69	4)	3.11

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
2	5.39	3.07	2.32	5.55	7.66	13.21	5.28	1.02	4)	3.90
3	5.39	3.07	2.32	7.87	8.44	16.32	5.28	1.59	4)	5.47
4	5.39	3.07	2.32	10	9.17	19.17	5.28	2.02	4)	6.93
6	5.39	3.07	2.32	14.88	10	24.88	5.28	2.71	4)	8.58
10	5.39	3.07	2.32	21.57	11.71	33.29	5.28	4.03	4)	12.01

- 1) Depending on the cable gland used: values up to +1.18 in
- 2) With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +2.76 in
- 3) With order code for "Measuring tube material", option TS, TT, TU: values +4.09 in
- 4) Depending on the process connection  $\rightarrow \triangleq 107$
- 5) With order code for "Measuring tube material", option TT, TU: value +0.98 in

#### Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	К	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	4.88	2.68	2.20	2.95	7.09	10.04	4.41	0.21	4)	2.76
1/2	4.88	2.68	2.20	2.95	7.09	10.04	4.41	0.33	4)	2.76
1	4.88	2.68	2.20	2.95 <sup>5)</sup>	7.09	10.04 5)	4.41	0.47	4)	2.76
1½	4.88	2.68	2.20	4.13	7.26	11.4	4.41	0.69	4)	3.11
2	4.88	2.68	2.20	5.55	7.66	13.21	4.41	1.02	4)	3.90
3	4.88	2.68	2.20	7.87	8.44	16.32	4.41	1.59	4)	5.47
4	4.88	2.68	2.20	10	9.17	19.17	4.41	2.02	4)	6.93
6	4.88	2.68	2.20	14.88	10	24.88	4.41	2.71	4)	8.58
10	4.88	2.68	2.20	21.57	11.71	33.29	4.41	4.03	4)	12.01

- 1) Depending on the cable gland used: values up to +1.18 in
- 2) With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +2.76 in
- 3) With order code for "Measuring tube material", option TS, TT, TU: values  $\pm 4.09$  in
- 4) Depending on the process connection  $\rightarrow = 107$
- 5) With order code for "Measuring tube material", option TT, TU: value +0.98 in

# Order code for "Sensor connection housing", option L "Cast, stainless"


DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	5.71	3.39	2.32	2.95	8.19	11.14	5.35	0.21	4)	2.76
1/2	5.71	3.39	2.32	2.95	8.19	11.14	5.35	0.33	4)	2.76
1	5.71	3.39	2.32	2.95 <sup>5)</sup>	8.19	11.14 5)	5.35	0.47	4)	2.76
11/2	5.71	3.39	2.32	4.13	8.37	12.5	5.35	0.69	4)	3.11
2	5.71	3.39	2.32	5.55	8.76	14.31	5.35	1.02	4)	3.90
3	5.71	3.39	2.32	7.87	9.55	17.42	5.35	1.59	4)	5.47
4	5.71	3.39	2.32	10	10.28	20.28	5.35	2.02	4)	6.93

DN	A 1)	B 1)	С	D	E <sup>2)3)</sup>	F <sup>2)3)</sup>	G	K	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
6	5.71	3.39	2.32	14.88	11.1	25.98	5.35	2.71	4)	8.58
10	5.71	3.39	2.32	21.57	12.81	34.39	5.35	4.03	4)	12.01

- Depending on the cable gland used: values up to  $\pm 1.18$  in 1)
- With order code for "Sensor option", option CG or order code for "Measuring tube material", option SD, SE, 2) SF, TH, LA: values +2.76 in
- With order code for "Measuring tube material", option TS, TT, TU: values +4.09 in Depending on the process connection  $\Rightarrow \triangleq 107$ 3)
- With order code for "Measuring tube material", option TT, TU: value +0.98 in

# Flange connections

Fixed flange ASME B16.5

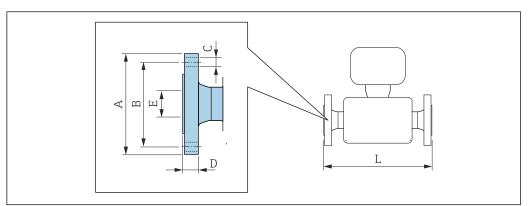

Length tolerance for dimension L in inches: • DN  $\leq$  4": +0.06/-0.08 • DN  $\geq$  6":  $\pm$ 0.14

Flange similar to ASME B16.5: Class 150 1.4404 (F316/F316L): order code for "Process connection", option AAS Alloy C22: order code for "Process connection", option AAC										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]				
3/8 1)	3.54	2.37	4 × Ø0.62	0.44	0.62	14.57				
1/2	3.54	2.37	4 × Ø0.62	0.44	0.62	15.91				
1	4.33	3.13	4 × Ø0.62	0.56	1.05	17.32				
11/2	4.92	3.87	4 × Ø0.63	0.63	1.61	21.65				
2	5.91	4.75	4 × Ø0.75	0.75	2.07	28.15				
3	7.48	6.00	4 × Ø0.75	0.94	3.07	33.07				
4	9.06	7.50	8 × Ø0.75	0.94	4.03	44.37				
6	11.02	9.50	8 × Ø0.88	1	6.07	55.04				
10	15.94	14.25	12 × Ø1.0	1.19	10.02	72.13				
Surface roug	hness (flange): Ra	a 126 to 248 µin								

DN  $^3\!/\!_8$  with DN  $^1\!/\!_2$  flanges as standard 1)

	Flange similar to ASME B16.5: Class 150 with reduction in nominal diameter 1.4404 (F316/F316L)										
DN [in]	Reduction to DN [in]	Order code "Process connection", Option	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]			
2	11/2	AHS	5.91	4.75	4 × Ø0.75	0.75	2.07	21.65			
3	2	AJS	7.48	6	4 × Ø0.75	0.94	3.07	28.35			
4	3	ALS	9.06	7.5	8 × Ø0.75	0.94	4.03	34.41			
6	4	ANS	11.02	9.5	8 × Ø0.88	1	6.07	45.94			
8	6	APS	13.58	11.75	8 × Ø0.88	1.14	7.98	57.52			
Surface ro	oughness (flang	e): Ra 126 to 248 µiı	1								

1.4404 (F3	Flange similar to ASME B16.5: Class 300 1.4404 (F316/F316L): order code for "Process connection", option ABS Alloy C22: order code for "Process connection", option ABC										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]					
3/8 1)	3.74	2.63	4 × Ø0.62	0.56	0.62	14.57					
1/2	3.74	2.63	4 × Ø0.62	0.56	0.62	15.91					
1	4.92	3.50	4 × Ø0.75	0.69	1.05	17.32					
1½	6.10	4.50	4 × Ø0.88	0.81	1.61	21.65					
2	6.50	5.00	8 × Ø0.75	0.88	2.07	28.15					
3	8.27	6.63	8 × Ø0.88	1.12	3.07	33.07					
4	10.04	7.87	8 × Ø0.88	1.25	4.03	44.37					
6	12.6	10.63	12 × Ø0.88	1.44	6.07	55.79					
10	17.52	15.25	16 × Ø1.12	1.87	10.02	73.35					
Surface rou	ghness (flange):	Ra 126 to 248	μin								


1) DN  $\frac{3}{8}$ " with DN  $\frac{1}{2}$ " flanges as standard

	Flange similar to ASME B16.5: Class 300 with reduction in nominal diameter 1.4404 (F316/F316L)										
DN [in]	Reduction to DN [in]	Order code "Process connection", Option	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]			
2	11/2	AIS	6.5	5	8 × Ø0.75	0.88	2.07	24.21			
3	2	AKS	8.27	6.63	8 × Ø0.88	1.12	3.07	28.82			
4	3	AMS	10.04	7.87	8 × Ø0.88	1.25	4.03	35.2			
6	4	AOS	12.6	10.63	12 × Ø0.88	1.44	6.07	46.73			
8	6	AQS	14.96	13	12 × Ø1	1.64	7.98	57.52			
Surface ro	oughness (flang	e): Ra 126 to 248 µiı	n								

1.4404 (F3	Flange similar to ASME B16.5: Class 600 1.4404 (F316/F316L): order code for "Process connection", option ACS Alloy C22: order code for "Process connection", option ACC										
DN [in]	A [in]	B [in]	E [in]	L [in]							
3/8 1)	3.74	2.63	4 × Ø0.62	0.81	0.55	15.75					
1/2	3.74	2.63	4 × Ø0.62	0.81	0.55	16.54					
1	4.92	3.50	4 × Ø0.75	0.94	0.96	19.29					
1½	6.10	4.50	4 × Ø0.88	1.13	1.5	23.62					
2	6.50	5.00	8 × Ø0.75	1.25	1.94	29.21					
3	8.27	6.63	8 × Ø0.88	1.5	2.9	35.43					
4	10.83	8.50	8 × Ø1.00	1.91	3.83	45.55					
6	13.98	11.50	12 × Ø1.12	1.88	6.07	57.76					
10	20.08	17.00	16 × Ø1.38	2.75	10.02	76.61					
Surface rou	ghness (flange)	: Ra 126 to 248	μin								

1) DN  $^3\!/_8$  with DN  $^1\!/_2$  flanges as standard

## Lap joint flange ASME B16.5

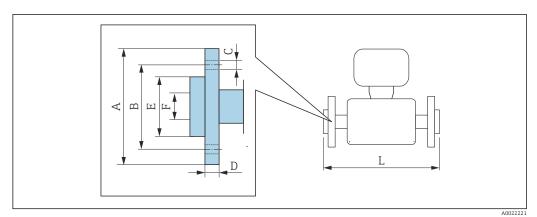

Length tolerance for dimension L in inch: +0.06 / -0.08

1.4301 (F	Lap joint flange similar to ASME B16.5: Class 150 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option ADC							
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	L [in]	L <sub>diff</sub> 1) [in]
3/8 2)	3.54	2.37	4 × Ø 0.62	0.59	1.38	0.62	14.57	0
1/2	3.54	2.37	4 × Ø 0.62	0.59	1.38	0.62	15.91	0
1	4.33	3.13	4 × Ø 0.62	0.63	2	1.05	17.32	0
11/2	4.92	3.87	4 × Ø 0.62	0.63	2.88	1.61	21.65	0
2	5.91	4.75	4 × Ø 0.75	0.75	3.62	2.07	28.15	0
3	7.48	6.00	4 × Ø 0.75	0.88	5	3.07	33.07	0
4	9.06	7.50	8 × Ø 0.75	1.02	6.19	4.03	44.37	0
Surface rou	Surface roughness (flange): Ra 126 to 492 µin							

- 1) Difference to installed length of the welding neck flange (order code for "Process connection", option AAC)
- 2) DN  $\frac{3}{8}$ " with DN  $\frac{1}{2}$ " flanges as standard

1.4301 (F	Lap joint flange similar to ASME B16.5: Class 300 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option AEC							
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	L [in]	L <sub>diff</sub> 1) [in]
3/8 2)	3.74	2.63	4 × Ø 0.62	0.65	1.38	0.62	14.8	+0.23
1/2	3.74	2.63	4 × Ø 0.62	0.65	1.38	0.62	15.98	+0.07
1	4.92	3.50	4 × Ø 0.75	0.83	2	1.05	17.72	+0.40
1½	6.10	4.50	4 × Ø 0.88	0.91	2.88	1.61	22.2	+0.55
2	6.50	5.00	8 × Ø 0.75	1	3.62	2.07	28.23	+0.08
3	8.27	6.63	8 × Ø 0.88	1.22	5	3.07	33.57	+0.50
4	10.04	7.87	8 × Ø 0.88	1.26	6.19	4.03	44.84	+0.47
Surface rou	Surface roughness (flange): Ra 126 to 492 µin							

- 1) Difference to installed length of the welding neck flange (order code for "Process connection", option AAC)
- 2) DN  $\frac{3}{8}$ " with DN  $\frac{1}{2}$ " flanges as standard


1.4301 (F	Lap joint flange similar to ASME B16.5, Class 600 1.4301 (F304), wetted parts Alloy C22 Order code for "Process connection", option AFC							
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	L [in]	L <sub>diff</sub> 1) [in]
3/8 2)	3.74	2.63	4 × Ø 0.62	0.67	1.38	0.55	15.75	0
1/2	3.74	2.63	4 × Ø 0.62	0.67	1.38	0.55	16.54	0
1	4.92	3.50	4 × Ø 0.75	0.85	2	0.96	19.29	0
11/2	6.10	4.50	4 × Ø 0.88	0.98	2.88	1.5	23.62	0
2	6.50	5.00	8 × Ø 0.75	1.1	3.62	1.94	29.21	0
3	8.27	6.63	8 × Ø 0.88	1.38	5	2.9	35.43	0
4	10.83	8.50	8 × Ø 1	1.73	6.19	3.83	45.94	+0.39
Surface rou	ıghness (fla	nge): Ra 126	5 to 492 μin					

Difference to installed length of the welding neck flange (order code for "Process connection", option AAC) DN  $^3/_8$ " with DN  $^4/_2$ " flanges as standard

<sup>1)</sup> 2)

## Clamp connections

## Tri-Clamp

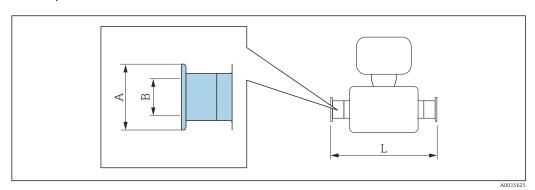

Length tolerance for dimension L in inch: +0.06 / -0.08

Tri-Clamp (½"), DIN 11866 series C 1.4404 (316/316L) Order code for "Process connection", option FDW				
DN [in]	Clamp [in]	A [in]	B [in]	L [in]
3/8	1/2	0.98	0.37	14.4
1/2	1/2	0.98	0.37	15.7

3-A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 30~\mu in:$  order code for "Measuring tube material", option SB, SE, SJ, SJ, SL or

 $Ra \le 15 \mu in$ : order code for "Measuring tube material", option SC, SF, SK, SM

 $Ra \le 15 \mu in$  electropolished: order code for "Measuring tube material", option BC, BG

1.4404 (316/316L)	Tri-Clamp ( ≥ 1"), DIN 11866 series C 1.4404 (316/316L)  Order code for "Process connection", option FTS				
DN [in]	Clamp [in]	A [in]	B [in]	L [in]	
3/8	1	1.98	0.87	14.4	
1/2	1	1.98	0.87	15.7	
1	1	1.98	0.87	17.1	
1½	1½	1.98	1.37	22.0	
2	2	2.52	1.87	28.3	
3	3	3.58	2.87	35.4	
4	4	4.68	3.83	44.4	

3-A version available: order code for "Additional approval", option LP in conjunction with


 $Ra \leq 30~\mu in:$  order code for "Measuring tube material", option SB, SE, SJ, SJ, SL or

 $Ra \leq 15~\mu in:$  order code for "Measuring tube material", option SC, SF, SK, SM

 $\text{Ra} \leq 15~\mu\text{in}$  electropolished: order code for "Measuring tube material", option BC, BG

## Threaded couplings

Threaded adapter SMS 1145

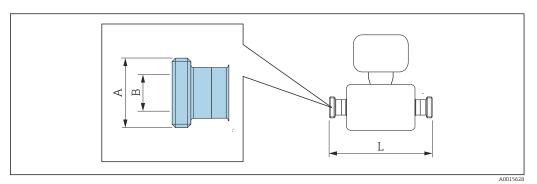


Length tolerance for dimension L in inch: +0.06 / -0.08

Threaded adapter SMS 1145 1.4404 (316/316L) Order code for "Process connection", option SCS			
DN [in]	A [in]	B [in]	L [in]
3/8	Rd 40 × 1/ <sub>6</sub>	0.89	14.45
1/2	Rd 40 × 1/ <sub>6</sub>	0.89	15.67
1	Rd 40 × 1/ <sub>6</sub>	0.89	17.09
11/2	Rd 60 × ½	1.4	22.05
2	Rd 70 × 1/ <sub>6</sub>	1.91	28.35
3	Rd 98 × 1/ <sub>6</sub>	2.87	35.43
4	Rd 132 × ½	3.84	44.37

3-A version available: order code for "Additional approval", option LP in conjunction with Ra  $\leq 30~\mu in$ : order code for "Measuring tube material", option SB, SE, SJ, SL

112

## VCO

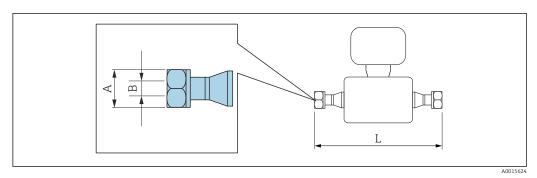


Length tolerance for dimension L in inch: +0.06 / -0.08

-	8-VCO-4 (½") 1.4404 (316/316L) Order code for "Process connection", option CVS			
	DN [in]	A [in]	B [in]	L [in]
Г	3/8	AF 1	0.4	15.35

12-VCO-4 (¾") 1.4404 (316/316L) Order code for "Process connection", option CWS			
DN [in]	A [in]	B [in]	L [in]
1/2	AF 1½	0.62	16.93

## Accessories


Rupture disk/purge connections

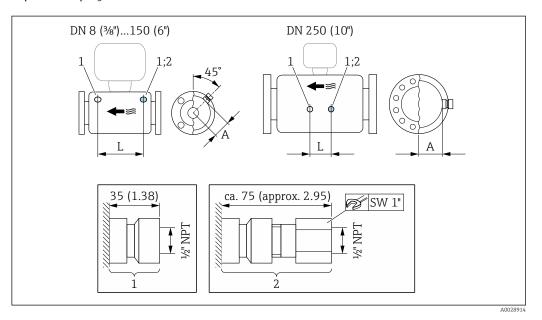


Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection" Connection nipple with rupture disk: order code for "Sensor option", option CA "Rupture disk"

DN	A	L
[in]	[in]	[in]
3/8	2.44	8.50
1/2	2.44	8.66
1	2.44	10.24
1½	2.64	12.20
2	3.11	17.78
3	3.98	22.0
4	4.72	27.0
6	5.55	34.6
10	7.17	14.96

## Weather protection cover

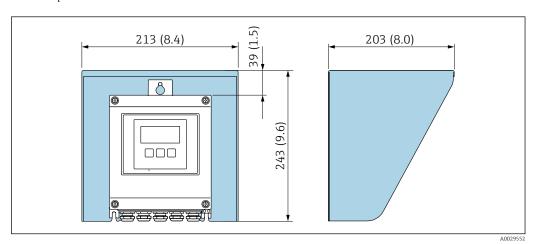

■ 51 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

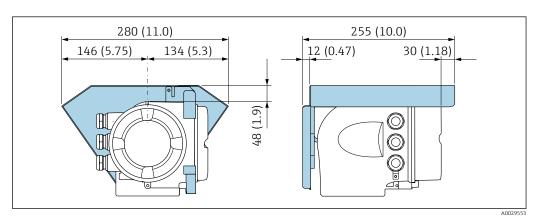


 $\blacksquare$  52 Weather protection cover for Proline 500; engineering unit mm (in)

## External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

## Proline 500 – digital


## External WLAN antenna mounted on device

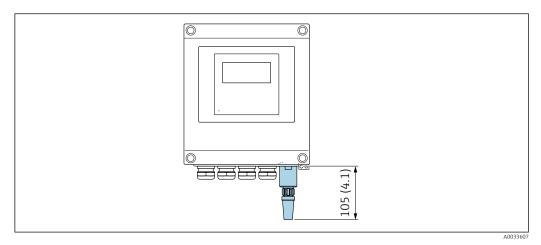

**■** 53 Engineering unit mm (in)

## External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

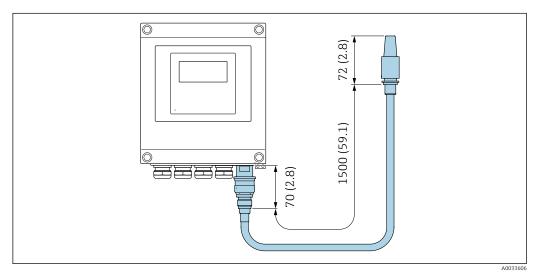

■ 54 Engineering unit mm (in)

## Proline 500


## External WLAN antenna mounted on device

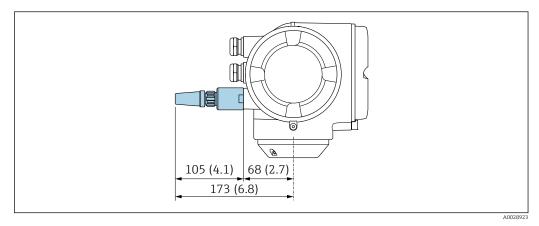

■ 55 Engineering unit mm (in)

## External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

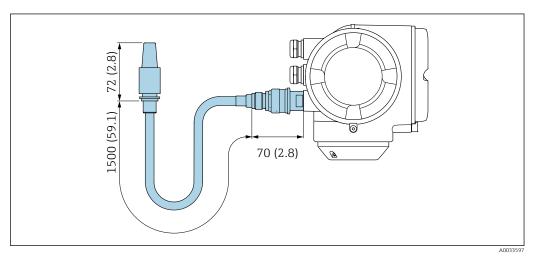

**■** 56 Engineering unit mm (in)

## Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.

## Transmitter

- $\bullet$  Proline 500 digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

#### Sensor

- Sensor with cast connection housing version, stainless: +3.7 kg (+8.2 lbs)
- Sensor with aluminum connection housing version:

## Weight in SI units

DN [mm]	Weight [kg]
8	9
15	10
25	12
40	17

DN [mm]	Weight [kg]
50	28
80	53
100	94
150	152
250	398

## Weight in US units

DN [in]	Weight [lbs]
3/8	20
1/2	22
1	26
1½	37
2	62
3	117
4	207
6	335
10	878

#### Materials

## Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mq, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mq, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

## Window material

Order code for "Transmitter housing":

- Option A "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option L "Cast, stainless": glass

Fastening components for mounting on a post


- Screws, threaded bolts, washers, nuts: stainless A2 (chrome-nickel steel)
- Metal plates: stainless steel, 1.4301 (304)

## Sensor connection housing

Order code for "Sensor connection housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
  - Stainless steel 1.4301 (304)
- Optional: Order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

## Cable entries/cable glands

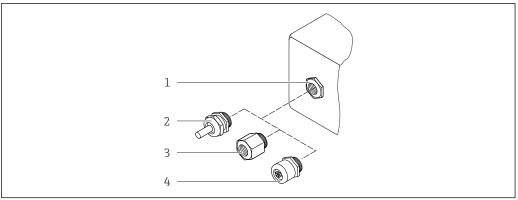

Possible cable entries/cable glands

- Female thread M20  $\times$  1.5
- Cable gland M20  $\times$  1.5 Adapter for cable entry with female thread G  $\frac{1}{2}$  or NPT  $\frac{1}{2}$ " 3
- Device plug

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
<ul> <li>Adapter for cable entry with female thread G ½"</li> <li>Adapter for cable entry with female thread NPT ½"</li> </ul>	Nickel-plated brass
Only available for certain device versions:  Order code for "Transmitter housing":  Option A "Aluminum, coated"  Order code for "Sensor connection housing":  Proline 500 – digital: Option A "Aluminum coated" Option B "Stainless" Option L "Cast, stainless"  Proline 500: Option B "Stainless" Option B "Stainless"	
<ul> <li>Adapter for cable entry with female thread G ½"</li> <li>Adapter for cable entry with female thread NPT ½"</li> </ul>	Stainless steel, 1.4404 (316L)
Only available for certain device versions:  Order code for "Transmitter housing": Option L "Cast, stainless"  Order code for "Sensor connection housing": Option L "Cast, stainless"	
Adapter for device plug	Stainless steel, 1.4404 (316L)
<ul> <li>Device plug for digital communication:         Only available for certain device versions →          ⇒ 35.</li> <li>Device plug for connecting cable:         A device plug is always used for the device version, order code for "Sensor connection housing", option C (ultracompact, hygienic, stainless).</li> </ul>	

## Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

## Connecting cables



UV rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- PVC cable with copper shield
- Devices with order code for "Test, certificate", option JQ: PUR with copper shield

#### Sensor housing



The material of the sensor housing depends on the option selected in the order code for "Measuring tube mat., wetted surface".

Order code for "Measuring tube mat., wetted surface"	Material
Option HA, SA, SD, TH	<ul><li>Acid and alkali-resistant outer surface</li><li>Stainless steel 1.4301 (304)</li></ul>
	With order code for "Sensor option", option CC "316L Sensor housing": stainless steel, 1.4404 (316L)
Option SB, SC, SE, SF	<ul><li>Acid and alkali-resistant outer surface</li><li>Stainless steel 1.4301 (304)</li></ul>
Option TS, TT, TU, LA	<ul> <li>Acid and alkali-resistant outer surface</li> <li>Stainless steel, 1.4404 (316L)</li> </ul>

## Measuring tubes

- DN 8 to 100 (3/8 to 4"): stainless steel, 1.4539 (904L);
   Manifold: stainless steel, 1.4404 (316/316L)
- DN 150 (6"), DN 250 (10"): stainless steel, 1.4404 (316/316L);
   Manifold: stainless steel, 1.4404 (316/316L)
- DN 8 to 250 (3/8 to 10"): Alloy C22, 2.4602 (UNS N06022);
   Manifold: Alloy C22, 2.4602 (UNS N06022)

## High-temperature version

DN 15 (½"), 25 (1"), 50 to 250 (2 to 10"):

- DN 15 to 100 (½ to 4"): stainless steel, 1.4539 (904L)
- DN 150 (6"), 250 (10"): stainless steel, 1.4404 (316/316L)
- DN 15 to 250 (½ to 10"): Alloy C22, 2.4602 (UNS N06022)


## **Process connections**

- Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:
  - Stainless steel, 1.4404 (F316/F316L)
  - Alloy C22, 2.4602 (UNS N06022)
  - Lap joint flanges: stainless steel, 1.4301 (F304); wetted parts Alloy C22
- All other process connections: Stainless steel, 1.4404 (316/316L)

#### High-temperature version

Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:

- DN 15 to 250 (½ to 10"): stainless steel, 1.4404 (316/316L)
- DN 15 to 250 (½ to 10"): Alloy C22, 2.4602 (UNS N06022)

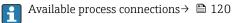

#### Seals

Welded process connections without internal seals

## Accessories

Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

## **Process connections**

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - NAMUR lengths in accordance with NE 132
  - ASME B16.5 flange
  - JIS B2220 flange
  - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections:

Tri-Clamp (OD tubes), DIN 11866 series C

- Thread:
  - DIN 11851 thread, DIN 11866 series A
  - SMS 1145 thread
  - ISO 2853 thread, ISO 2037
  - DIN 11864-1 Form A thread, DIN 11866 series A
- VCO connections:
  - 8-VCO-4
  - 12-VCO-4
- +

Process connection materials  $\rightarrow \implies 119$ 

## Surface roughness

All data refer to parts in contact with the medium.

The following surface roughness categories can be ordered:

Category	Method	Option(s) order code "Measuring tube mat., wetted surface"
Not polished	_	HA. LA, SA, SD, TH, TS, TT, TU
Ra $\leq$ 0.76 $\mu$ m (30 $\mu$ in) 1)	Mechanically polished <sup>2)</sup>	SB, SE
Ra $\leq$ 0.76 µm (30 µin) 1)	Mechanically polished <sup>2)</sup> , welds in as-welded condition	SJ, SL
Ra $\leq$ 0.38 $\mu$ m (15 $\mu$ in) 1)	Mechanically polished <sup>2)</sup>	SC, SF
Ra $\leq$ 0.38 $\mu$ m (15 $\mu$ in) 1)	Mechanically polished <sup>2)</sup> , welds in as-welded condition	SK, SM
Ra $\leq$ 0.38 $\mu$ m (15 $\mu$ in) 1)	Mechanical <sup>2)</sup> and electropolished	ВС
Ra $\leq$ 0.38 µm (15 µin) 1)	Mechanical <sup>2)</sup> and electropolished, welds in as-welded condition	BG

- 1) Ra according to ISO 21920
- 2) Except for inaccessible welds between pipe and manifold

## Display and user interface

## Operation concept

#### Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnosis
- Expert level

#### Quick and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu quidance with brief descriptions of the individual parameter functions
- Access to the device via web server
- WLAN access to the device via mobile handheld terminal, tablet or smart phone

## Reliable operation

- Operation in local language
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (HistoROM backup) which contains the process and measuring device data and the event logbook. No need to reconfigure.

## Efficient diagnostics increase measurement reliability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

## Languages

Can be operated in the following languages:

- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Korean, Vietnamese, Czech, Swedish
- Via web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


## Onsite operation

## Via display module

#### Features:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + W/I A N"
- i

Information about WLAN interface → 128

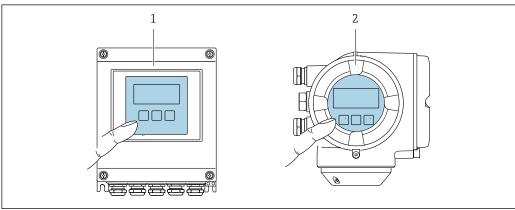

A00282

■ 58 Operation with touch control

- 1 Proline 500 digital
- 2 Proline 500

## Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured


## Operating elements

- External operation via touch control (3 optical keys) without opening the housing: 🕀, 🖃, 🗉
- Operating elements also accessible in the various zones of the hazardous area

## Remote operation

## Via HART protocol


This communication interface is available in device versions with a HART output.

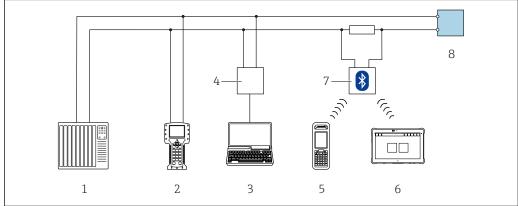

A0028747

■ 59 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

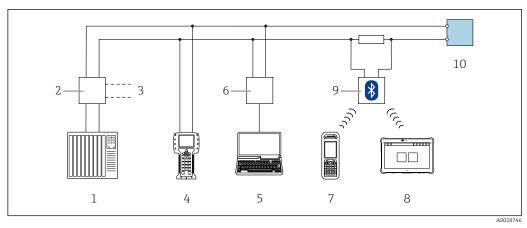


■ 60 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 Field Xpert SMT70
- 9 VIATOR Bluetooth modem with connecting cable
- 10 Transmitter

#### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

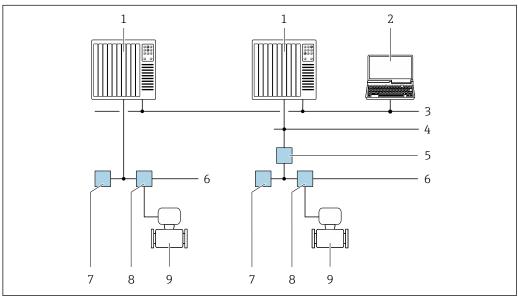


A002883

■ 61 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

## Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

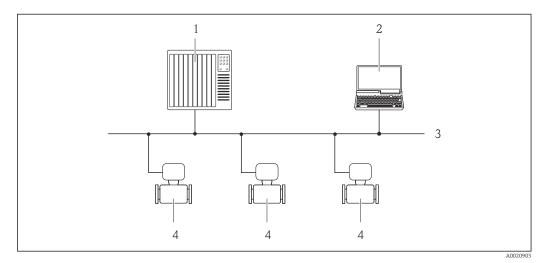


**₽** 62 Options for remote operation via PROFIBUS DP network

- Automation system
- Computer with PROFIBUS network card 2
- 3 PROFIBUS DP network
- Measuring device

## Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

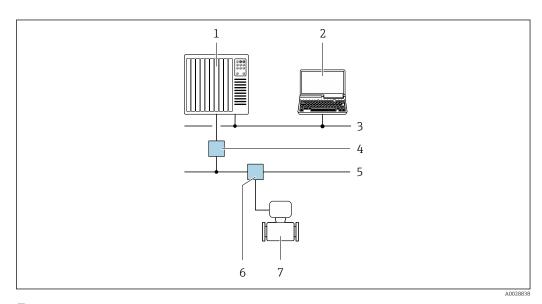


**№** 63 Options for remote operation via PROFIBUS PA network

- 1
- Automation system Computer with PROFIBUS network card 2
- 3 PROFIBUS DP network
- Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- T-box
- Measuring device

## Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus RS485 output.

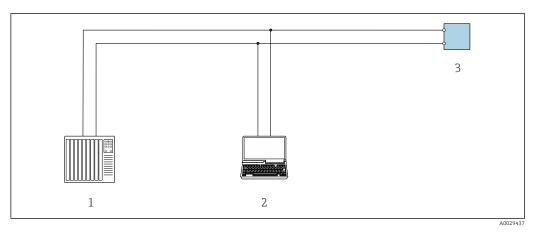


€ 64 Options for remote operation via Modbus RS485 protocol (active)

- Control system (e.g. PLC)
- Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Transmitter

## Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

## Star topology

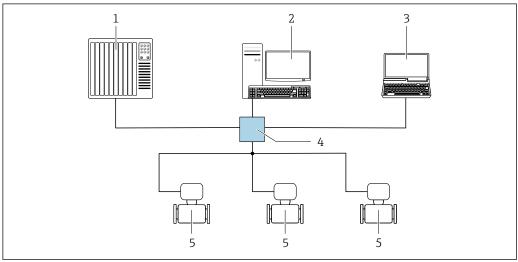


€ 65 Options for remote operation via EtherNet/IP network: star topology

- Automation system, e.g. "RSLogix" (Rockwell Automation)
- Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- Measuring device

## Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

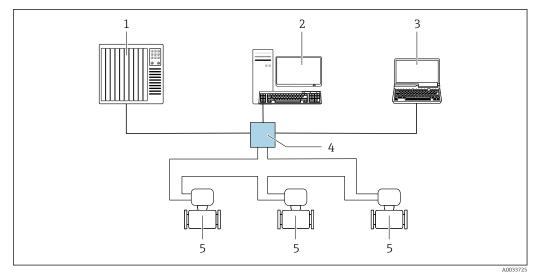


■ 66 Options for remote operation via EtherNet/IP network: ring topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 5 Measuring device

## Via PROFINET network

This communication interface is available in device versions with PROFINET.

## Star topology

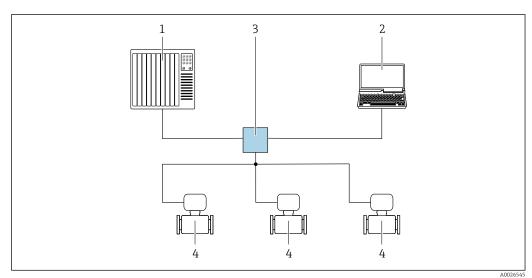


■ 67 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

## Ring topology


The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

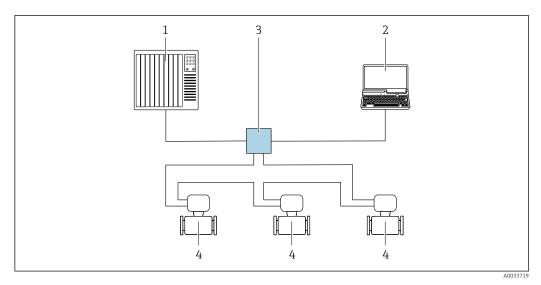

**■** 68 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

## Via APL network

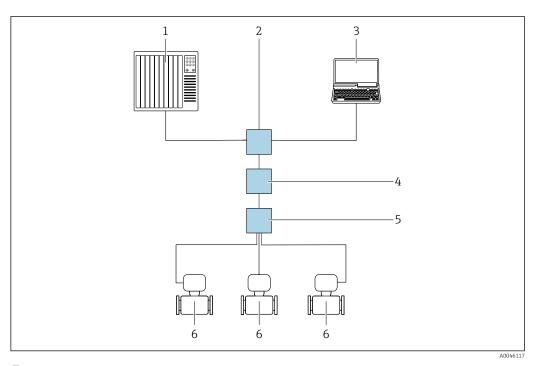

 $\blacksquare$  69 Options for remote operation via APL network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch, e.g. Scalance X204 (Siemens)
- 3 Computer with Web browser (e.g. Internet Explorer) for access to integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI-Package)
- 4 APL power switch (optional)
- 5 APL field switch
- 6 Measuring device

#### Service interface

## Via service interface (CDI-RJ45)


A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

i

An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area: Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.

Proline 500 – digital transmitter

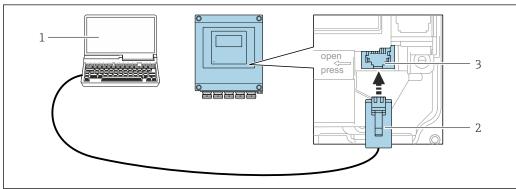


A002916

#### ■ 70 Connection via service interface (CDI-RJ45)

- 1 Computer with web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated web server or with "FieldCare" operating tool, "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

## Proline 500 transmitter

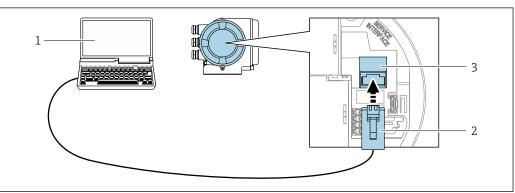


A0027563

#### ■ 71 Connection via service interface (CDI-RJ45)

- 1 Computer with web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated web server or with "FieldCare" operating tool, "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

## Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

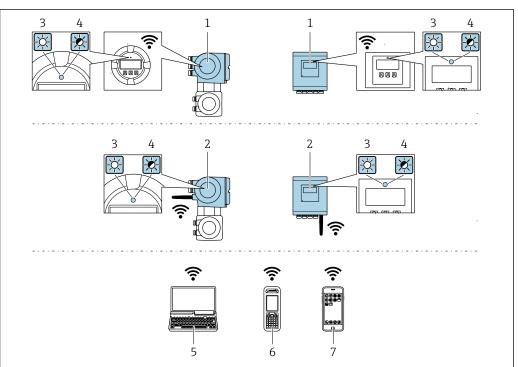

A0024E60

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)
	• Access Point with DHCP server (factory setting)
	• Network
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.         Available as an accessory .     </li> <li>Only 1 antenna is active at any one time!</li> </ul>
Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>

Network integration


i

Network integration is only available for the HART communication protocol.

With the optional "OPC-UA Server" application package, the device can be integrated into an Ethernet network via the service interface (CDI-RJ45 and WLAN) and communicate with OPC-UA clients. If the device is used in this way, IT security must be considered.

Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB

For permanent access to device data and for device configuration via the Web server, the device is incorporated directly in a network via the service interface (CDI-RJ45). In this way, the device can be accessed any time from the control station. The measured values are processed separately via the inputs and outputs through the automation system.

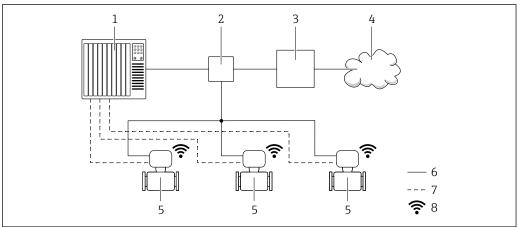

A003361

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Edge Gateway
- 4 Cloud
- 5 Measuring device
- 6 Ethernet network
- 7 Measured values via inputs and outputs
- 8 Optional WLAN interface
- The optional WLAN interface is available on the following device version:

  Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"

## Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Ethernet-based fieldbus (EtherNet/IP, PROFINET)</li> </ul>	Special Documentation for device → 🖺 146
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 144
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 144

Supported operating tools	Operating unit	Interface	Additional information
Field Xpert	SMT70/77/50	<ul> <li>All fieldbus protocols</li> <li>WLAN interface</li> <li>Bluetooth</li> <li>CDI-RJ45 service interface</li> </ul>	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue app	Smartphone or tablet with iOs or Android	WLAN	→ 🗎 144



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) from Rockwell Automation → www.rockwellautomation.com
- Process Device Manager (PDM) from Siemens → www.siemens.com
- Asset Management Solutions (AMS) from Emerson → www.emersonprocess.com
- FieldCommunicator 375/475 from Emerson → www.emersonprocess.com
- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Download Area

#### Web server

With the integrated web server, the device can be operated and configured via a web browser using Ethernet-APL, and via the service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

Access to the network is required for the Ethernet-APL connection.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

## Supported functions

Data exchange between the operating unit (such as a notebook, for example,) and measuring instrument:

- Upload the configuration from the measuring instrument (XML format, configuration backup)
- Save the configuration to the measuring instrument (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat Technology verification report (PDF file, only available with the **Heartbeat Verification** → 🖺 140 application package)
- Flash firmware version for device firmware upgrade, for example
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package → 
   <sup>1</sup> 140)

#### HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

## Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook, e.g. diagnostic events</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via web server, e.g.:</li> <li>GSD for PROFIBUS DP</li> <li>GSD for PROFIBUS PA</li> <li>GSDML for PROFINET</li> <li>EDS for EtherNet/IP</li> <li>DD for FOUNDATION Fieldbus</li> </ul>	Measured value logging ("Extended HistoROM" order option)     Current parameter data record (used by firmware at run time)     Indicator (minimum/maximum values)     Totalizer value	<ul> <li>Sensor data: e.g. nominal diameter</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface PC board in the connection compartment	Can be plugged into the user interface PC board in the connection compartment	In the sensor plug in the transmitter neck part

## Data backup

## **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

#### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

## Data transmission

#### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.:
  - GSD for PROFIBUS DP
  - GSD for PROFIBUS PA
  - GSDML for PROFINET
  - EDS for EtherNet/IP
  - DD for FOUNDATION Fieldbus

## Event list

## Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

## Data logging

#### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Recording of 1 to 4 channels of up to 1000 measured values (up to 250 measured values per channel)
- User configurable recording interval
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

## Certificates and approvals

Current certificates and approvals for the product are available at <a href="www.endress.com">www.endress.com</a> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

#### CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

#### **UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

## RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

## Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

The following devices have equipment protection level (EPL) Ga/Gb (Zone 0 in the measuring tube):

- Device versions with the order code for "Integrated ISEM electronics", option A and the order code for "Approval; transmitter; sensor", option BI, BJ, BM or BN.
- Device versions with the order code for "Integrated ISEM electronics", option B and the order code for "Approval; transmitter; sensor", option BA, BB, BC or BD.
- The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

## Proline 500 - digital

## ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

## Ex ia

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II(1)G	[Ex ia] IIC	II1/2G	Ex ia IIC T6T1 Ga/Gb Ex ia IIB T6T1 Ga/Gb
II(1)G	[Ex ia] IIC	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II1/2G	Ex ia IIC T6T1 Ga/Gb Ex ia IIB T6T1 Ga/Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb

## Ex tb

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

## Non-Ex / Ex ec

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
Non - Ex	Non-Ex	II3G	Ex ec IIC T5T1 Gc
II3G	Ex ec IIC T5T4 Gc	II3G	Ex ec IIC T5T1 Gc

# $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

## IS (Ex nA, Ex i)

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups C-G

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	A - D

## Ex nA / Ex i

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Ga/Gb
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

## Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

## Ex tb

Transmitter	Sensor
[AEx / Ex ia ] IIIC	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Proline 500

## ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

## Ex db eb

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db eb ia IIC T6T4 Gb	II1/2G	Ex ia IIC T6T1 Ga/Gb
II2G	Ex db eb ia IIB T6T4 Gb	II1/2G	Ex ia IIB T6T1 Ga/Gb
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db eb ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

## Ex db

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db ia IIC T6T4 Gb	II1/2G	Ex ia IIC T6T1 Ga/Gb
II2G	Ex db ia IIB T6T4 Gb	II1/2G	Ex ia IIB T6T1 Ga/Gb
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

## Ex tb

Category	Type of protection	
	Transmitter Sensor	
II2D	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db

## Ех ес

Category	Type of protection	
	Transmitter Sensor	
II3G	Ex ec IIC T5T4 Gc	Ex ec IIC T5T1 Gc

## $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

## IS (Ex i) and XP (Ex d)

Transmitter	Sensor
Class I, II, III Division 1 Groups A-G	
Class I, II, III Division 1 Groups C-G	

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	ABCD

## Ex de

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

#### Ex d

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

#### Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

## Ex tb

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85°C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Hygienic compatibility

- 3-A approval
  - Only measuring instruments with the order code for "Additional approval", option LP "3A" have 3-A approval.
  - The 3-A approval refers to the measuring instrument.
  - When installing the measuring instrument, ensure that no liquid can accumulate on the outside of the measuring instrument.
    - A remote display module must be installed in accordance with the 3-A Standard.
  - Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard.
    - $\label{lem:eq:constraint} \mbox{Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.}$
- EHEDG-tested

Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.

To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org).

To meet the requirements for EHEDG certification, the device must be installed in a position that ensures drainability.

- FDA
- Food Contact Materials Regulation (EC) 1935/2004
- Observe the special installation instructions  $\rightarrow \triangleq 66$

#### HART certification

#### HART interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

# FOUNDATION Fieldbus certification

## **FOUNDATION Fieldbus interface**

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFIBUS**

#### **PROFIBUS** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFINET**

#### **PROFINET** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V.  $\prime$  PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level 2 Netload Class 2 0 Mbps
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

## PROFINET with Ethernet-APL certification

#### **PROFINET** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e. V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET PA Profile 4
  - PROFINET netload robustness Class 2 10 Mbit/s
  - APL conformance test
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

## Pressure Equipment Directive

The measuring devices can be ordered with or without PED or PESR. If a device with PED or PESR is required, this must be ordered explicitly. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary. A UK order option must be selected for PESR under the order code for "Approvals".

- With the marking
  - a) PED/G1/x (x = category) or
  - b) PESR/G1/x (x = category)
  - on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"
  - a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
  - b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices bearing this marking (PED or PESR) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of
  - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

## Radio approval

The measuring device has radio approval.



# Measuring instrument approval

The measuring device is (optionally) approved as a gas meter (MI-002) or component in measuring systems (MI-005) in service subject to legal metrological control in accordance with the European Measuring Instruments Directive 2014/32/EU (MID).

The measuring device is qualified to OIML R117 or OIML R137 OIML R117 and has an OIML Certificate of Conformity (optional).

#### Additional certification

## CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

## Tests and certificates

- ISO 23277 ZG2x (PT)+ISO 10675-1 ZG1 (RT) measuring pipe (PT) + process connection (RT) weld seam, Heartbeat Technology verification report
- Penetrant + radiographic testing ASME B31.3 NFS(RT) measuring pipe (PT) + process connection (RT) weld seam, Heartbeat Technology verification report
- Penetrant + radiographic testing ASME VIII Div.1(RT) measuring pipe (PT) + process connection (RT) weld seam, Heartbeat Technology verification report
- Visual+penetrant+radiographic testing NORSOK M-601 (RT) measuring pipe (VT+PT) +process connection (VT+RT) weld seam, Heartbeat Technology verification report
- ISO 23277 ZG2x (PT)+ISO 10675-1 ZG1 (DR) measuring pipe (PT) + process connection (DR) weld seam. Heartbeat Technology verification report
- Penetrant + radiographic testing ASME B31.3 NFS(DR) measuring pipe (PT) + process connection (DR) weld seam, Heartbeat Technology verification report
- Penetrant +radiographic testing ASME VIII Div.1(DR) measuring pipe (PT) + process connection (DR) weld seam, Heartbeat Technology verification report
- Visual +penetrant+radiographic testing NORSOK M-601 (DR) measuring pipe (VT+PT) +process connection (VT+DR) weld seam, Heartbeat Technology verification report

## *Testing of welded connections*

Option	Test standard			Component		
	ISO 23277 AL2x (PT) ISO 10675-1 AL1 (RT, DR)	ASME B31.3 NFS	ASME VIII Div.1 Appx. 4+8	NORSOK M-601	Measuring pipe	Process connection
KF	х				PT	RT
KK		Х			PT	RT
KP			Х		PT	RT

138

Option	Test standard				Component	
	ISO 23277 AL2x (PT) ISO 10675-1 AL1 (RT, DR)	ASME B31.3 NFS	ASME VIII Div.1 Appx. 4+8	NORSOK M-601	Measuring pipe	Process connection
KR				х	VT, PT	VT, RT
K1	Х				PT	DR
K2		х			PT	DR
КЗ			х		PT	DR
K4				х	VT, PT	VT, DR

PT = penetrant testing, RT = radiographic testing, VT = visual testing, DR = digital radiography All options with test report

# External standards and guidelines

#### ■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ EN 61326-1/-2-3

EMC requirements for electrical equipment for measurement, control and laboratory use

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

■ NACE MR0103

Materials resistant to sulfide stress cracking in corrosive petroleum refining environments.

■ NACE MR0175/ISO 15156-1

Materials for use in H2S-containing Environments in Oil and Gas Production.

■ ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

# Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

1. Select the product using the filters and search field.

- 2. Open the product page.
- 3. Select **Configuration**.

## Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



Detailed information on the application packages:

Special Documentation  $\rightarrow \blacksquare 146$ 

## Diagnostic functionality

Order code for "Application package", option EA "Extended HistoROM"

Comprises extended functions concerning the event log and the activation of the measured value memory.

Event log:

Memory volume is extended from 20 message entries (standard version) to up to 100 entries.

Data logging (line recorder):

- Memory capacity for up to 1000 measured values is activated.
- 250 measured values can be output via each of the 4 memory channels. The recording interval can
  be defined and configured by the user.
- Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



For detailed information, see the Operating Instructions for the device.

#### **Heartbeat Technology**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

## Heartbeat Verification

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk assessment.

## Heartbeat Monitoring

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact process influences (e.g. corrosion, abrasion, buildup etc.) have on the measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets .



For detailed information, see the Special Documentation for the device.

#### **Concentration measurement**

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units (Brix, Plato, mass, volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.



For detailed information, see the Special Documentation for the device.

## Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The measuring instrument measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

The calibration certificate supplied contains the following information:

- Density performance in air
- Density performance in liquids with different density
- Density performance in water with different temperatures



For detailed information, see the Operating Instructions for the device.

#### Extended density

Order code for "Application package", option E1 "Extended density"

For volume-based applications, the device can calculate and output a volume flow rate by dividing the mass flow rate by the measured density.

This application package is the standard calibration for custody transfer applications according to national and international standards (e.g. OIML, MID). It is recommended for volume-based fiscal dosing applications over a wide temperature range.

The calibration certificate supplied describes the density performance in air and water at various temperatures in detail.



For detailed information, see the Operating Instructions for the device.

#### Petroleum

Order code for "Application package", option EJ "Petroleum"

The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package.

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- Water content, based on density measurement
- Weighted mean of the density and temperature



For detailed information, see the Special Documentation for the device.

## Petroleum & locking function

Order code for "Application package", option EM "Petroleum & locking function"

The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package. It is also possible to lock the settings.

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- Water content, based on density measurement
- Weighted mean of the density and temperature



For detailed information, see the Special Documentation for the device.

## **OPC-UA Server**

Order code for "Application package", option EL "OPC-UA Server"

The application package provides an integrated OPC-UA server for comprehensive device services for IoT and SCADA applications.



For detailed information, see the Special Documentation for the device.

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## Device-specific accessories

## For the transmitter

Accessories	Description		
Transmitter Proline 500 – digital Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals Output Input Display/operation Housing Software  Proline 500 – digital transmitter: Order number: 8X5BXX-*******A Proline 500 transmitter: Order number: 8X5BXX-**********************************		
	Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. On the basis of the serial number, the device-specific data (e.g. calibration factors) of the replaced device can be used for the new transmitter.		
	<ul> <li>Proline 500 – digital transmitter: Installation Instructions EA01151D</li> <li>Proline 500 transmitter: Installation Instructions EA01152D</li> </ul>		
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".  ■ The external WLAN antenna is not suitable for use in hygienic applications.  ■ Additional information regarding the WLAN interface → 🗎 128.  ■ Order number: 71351317  Installation Instructions EA01238D		
Pipe mounting set	Pipe mounting set for transmitter.		
	Proline 500 – digital transmitter Order number: 71346427  Installation Instructions EA01195D  Proline 500 transmitter Order number: 71346428		
Weather protection cover Transmitter Proline 500 – digital Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  Proline 500 – digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505 Installation Instructions EA01191D		

Display guard Proline 500 – digital	Is used to protect the display against impact or scoring, for example from sand in desert areas.  Order number: 71228792  Installation Instructions EA01093D
Connecting cable Proline 500 – digital Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012).  The following cable lengths are available: order code for "Cable, sensor connection"  Option B: 20 m (65 ft)
	<ul> <li>Option E: User-configurable up to max. 50 m</li> <li>Option F: User-configurable up to max. 165 ft</li> <li>Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)</li> </ul>
Connecting cables Proline 500	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection") or as an accessory (order number DK8012).
Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection"  Option 1: 5 m (16 ft)  Option 2: 10 m (32 ft)  Option 3: 20 m (65 ft)
	Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

## For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	Heating jackets cannot be used with sensors fitted with a rupture disk. Use the order code with the product root DK8003.
	Special Documentation SD02156D

# Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB port.  Technical Information TI00404F
HART loop converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  Technical Information TI00429F Operating Instructions BA00371F
Fieldgate FXA42	Transmission of the measured values of connected 4 to 20 mA analog measuring instruments, as well as digital measuring instruments  Technical Information TI01297S Operating Instructions BA01778S Product page: www.endress.com/fxa42
Field Xpert SMT50	The Field Xpert SMT50 tablet PC for device configuration enables mobile plant asset management in the non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01555S</li> <li>Operating Instructions BA02053S</li> <li>Product page: www.endress.com/smt50</li> </ul>

Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digita communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver libr and is an easy-to-use, touch-sensitive tool which can be used to manage the field instruments throughout their entire life cycle.	
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>	
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.	
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>	

## Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring instruments:  Choice of measuring instruments for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and measurement accuracy.  Graphic display of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.  Applicator is available:
	Via the Internet: https://portal.endress.com/webapp/applicator
Netilion	lloT ecosystem: Unlock knowledge With the Netilion IIoT ecosystem,Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration. Drawing upon decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem designed to effortlessly extract insights from data. These insights allow process optimization, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant. www.netilion.endress.com
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  Innovation brochure IN01047S

## System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	<ul><li>Technical Information TI00133R</li><li>Operating Instructions BA00247R</li></ul>
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	<ul> <li>Technical Information TI00426P and TI00436P</li> <li>Operating Instructions BA00200P and BA00382P</li> </ul>

Accessories	Description
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	<ul><li>Technical Information TI00383P</li><li>Operating Instructions BA00271P</li></ul>
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

# Supplemental documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

## Standard documentation



 $Supplementary\ information\ on\ the\ semi\mbox{-}standard\ options\ is\ available\ in\ the\ relevant\ Special$ Documentation in the TSP database.

## **Brief operating instructions**

Brief Operating Instructions for the sensor

Measuring instrument	Documentation code
Proline Promass F	KA01261D

## *Brief operating instructions for transmitter*

	Documentation code							
Measuring instrument	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	Ethernet/IP	PROFINET	PROFINET over Ethernet- APL
Proline 500 – digital	KA01315D	KA01233D	KA01392D	KA01390D	KA01319D	KA01346D	KA01351D	KA01521D
Proline 500	KA01314D	KA01291D	KA01391D	KA01389D	KA01318D	KA01347D	KA01350D	KA01520D

## **Operating Instructions**

Measuring	Documentation code							
instrument	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	Ethernet/IP	PROFINET	PROFINET over Ethernet- APL
Promass F 500	BA01529D	BA01562D	BA01551D	BA01873D	BA01540D	BA01750D	BA01761D	BA02119D

## **Description of parameters**

	Documentatio	Documentation code						
Measuring instrument	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	Ethernet/IP	PROFINET	PROFINET over Ethernet- APL
Promass 500	GP01060D	GP01096D	GP01061D	GP01137D	GP01062D	GP01120D	GP01121D	GP01173D

Supplementary devicedependent documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Documentation code
Measuring device
XA01473D
XA01474D
XA01475D
XA01509D
XA01510D
XA01476D
XA01477D
XA01478D
XA01479D
XA01658D
XA01659D
XA01780D

## **Functional Safety Manual**

Contents	Documentation code
Proline Promass 500	SD01729D

## Special documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
OPC-UA server <sup>1)</sup>	SD02040D

1) This Special Documentation is only available for device versions with a HART output.

Contents	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP	PROFINET with Ethernet- APL
Web server	SD01666D	SD01669D	SD01668D	SD02232D	SD01667D	SD01971D	SD01970D	SD02769D
Heartbeat Technology	SD01643D	SD01608D	SD01705D	SD02203D	SD01704D	SD01989D	SD01983D	SD02732D

Contents	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP	PROFINET with Ethernet- APL
Concentration measurement	SD01645D	SD01709D	SD01711D	SD02213D	SD01710D	SD02007D	SD02006D	SD02736D
Petroleum	SD02013D	_	SD02292D	SD02217D	SD02014D	SD02015D	SD02012D	SD02740D
Petroleum & locking function	SD02499D	-	-	-	SD02500D	-	-	-
Gas fraction handler	SD02584D	-	-	-	SD02584D	SD02584D	-	SD02584D
Custody transfer (counter for liquids other than water)	SD01690D	-	-	-	SD01691D	-	-	-
Custody transfer (counter for gas)	SD02464D	-	-	-	SD02465D	_	-	-
Custody transfer (counter for gas, in accordance with the German Measurement and Calibration Ordinance (Mess- und Eichverordnung))	SD02582D	-	-	-	SD02583D	-	-	-

## **Installation instructions**

Contents	Note
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

# Registered trademarks

#### **HART®**

Registered trademark of the FieldComm Group, Austin, Texas USA

#### PROFIBIIS®

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

## FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA  $\,$ 

#### Modbus<sup>®</sup>

Registered trademark of SCHNEIDER AUTOMATION, INC.

## EtherNet/IP™

Trademark of ODVA, Inc.

## $\textbf{Ethernet-APL}^{\intercal M}$

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

## **PROFINET®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

#### TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA



www.addresses.endress.com