# Technical Information **CCS51**

Sensor for determining free chlorine



CCS51 offers high-precision measurement with long-term stability to guarantee optimum process monitoring

## **Application**

CCS51 is a free chlorine sensor for skid builders and end customers. It measures reliably in:

- Drinking water to ensure reliable disinfection
- Food to guarantee food safety and provide hygienic packaging and bottling
- Utilities to detect the absence or presence of free chlorine
- Pool water to dose disinfectant efficiently

## Your benefits

- Fast response time (t<sub>90</sub> < 25 s) provides an accurate process view and enables prompt reaction to process changes as well as efficient process control.
- Increased process safety: precise and long-term stable measurement ensures consistent process monitoring and allows for individually adapted disinfectant dosing.
- The low-maintenance, amperometric sensor reduces the cost of ownership of the measuring point, particularly compared to colorimetric measuring systems.
- Connection to the Liquisys chlorine transmitter ensures continuity for the installed base of analog free chlorine measuring points.



# Function and system design

## Measuring principle

Free chlorine levels are determined using hypochlorous acid in accordance with the amperometric measuring principle.

The hypochlorous acid (HOCl) contained in the medium diffuses through the sensor membrane and is reduced to chloride ions ( $Cl^-$ ) at the gold cathode. At the silver anode, silver is oxidized to silver chloride. Electron donation at the gold cathode and electron acceptance at the silver anode causes a current to flow which is proportional to the concentration of free chlorine in the medium at constant conditions.

The concentration of hypochlorous acid depends on the pH value. An additional pH measurement is used to compensate for this dependency.

The transmitter uses the current signal to calculate the measured variable for concentration in mg/l (ppm).

### **Function**

The sensor consists of:

- Membrane cap (measuring chamber with membrane)
- Sensor shaft with anode with large surface area (counter-electrode) and a cathode embedded in plastic (working electrode)


The electrodes are in an electrolyte which is separated from the medium by a membrane. The membrane prevents the electrolyte from leaking and protects against contaminant penetration.

The measuring system is calibrated by means of a colorimetric comparison measurement in accordance with the DPD method for free chlorine. The calibration value determined is entered in the transmitter.

#### Measuring system

A complete measuring system comprises:

- Disinfection sensor CCS51 (membrane-covered, Ø25 mm) with corresponding installation adapter
- Flowfit CCA250 flow assembly
- Transmitter, e. g. Liquisys CCM223/253
- Optional: Immersion assembly Flexdip CYA112
- Optional: proximity switch

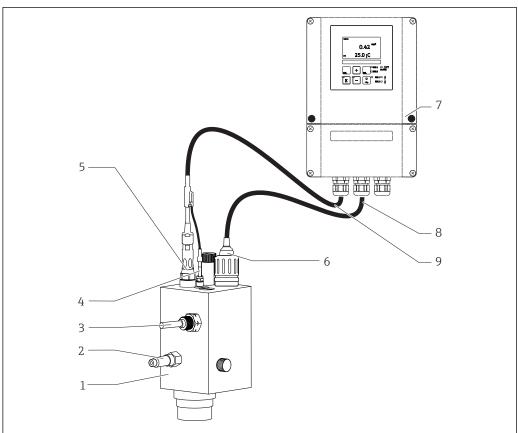

A0036971

- **№** 1 Example of a measuring system
- Flowfit CCA250 flow assembly
- Inlet to Flowfit CCA250 flow assembly
- 2 3 Proximity switch (optional)
- 4 PML pin
- pH sensor CPS31
- Disinfection sensor CCS51 (membrane-covered, Ø25 mm)
- Liquisys CCM223/253 transmitter
- Fixed cable of CCS51 disinfection sensor
- Measuring cable CPK9
- Ground the medium at the sensor by means of the PML pin to ensure a high reading stability.

# Input

Measured variables	Free chlorine (HOCl) Temperature	[mg/l, μg/l, ppm, ppb] [°C, °F]	
Measuring ranges	CCS51-**11AD* CCS51-**11BF*	0 to 5 mg/l (ppm) HOCl 0 to 20 mg/l (ppm) HOCl	
Signal current	CCS51-**11AD* CCS51-**11BF*	33 to 63 nA per 1 mg/l (ppm) HOCl 9 to 18 nA per 1 mg/l (ppm) HOCl	

# **Power supply**

## **Electrical connection**

► Install the grounding bar (order number 51501086) in accordance with the accompanying instructions in order to guarantee a high reading stability.

## **NOTICE**


## Measured errors due to faulty connection

► When connecting the sensor cable, make sure that the black semi-conductor layer is removed as far as the inner shield.

The sensors have a fixed cable of 3 m (9.8 ft) maximum in length.

▶ Connect the sensors to the transmitter according to the following diagram:

Sensor: assignment	Sensor: core	Transmitter: terminal
Outer shield		S
Anode	[A] red	91
Cathode	[K] transparent	90
NTC temperature sensor	Green	11
NTC temperature sensor	Brown	12

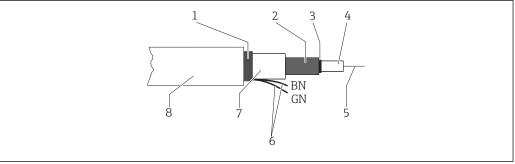

A003697

■ 2 Structure of the sensor cable

- 1 Outer shield
- 2 Inner shield, anode
- 3 Semi-conductor layer
- 4 Inner insulation
- 5 Inner conductor, measured signal
- 6 Temperature sensor connection
- 7 2nd insulation
- 3 Outer insulation

# Performance characteristics

Reference operating	Temperature	20°C (68°F)			
conditions	pH value	pH 5.5 ±0.2			
	Flow	40 to 60 cm/s			
	HOCl-free base med	lium Mains water			
Response time	T <sub>90</sub> < 25 s (after completing polarization)				
	The $T_{90}$ time can be longer under certain conditions. If the sensor is operated or stored in a chlorine-free medium for a longer period, the sensor response starts immediately if chlorine is present but only reaches the exact concentration value after a delay.				
Measured value resolution of	CCS51-**11AD*	0.03 μ	g/l (ppb) HOCl		
sensor	CCS51-**11BF*	0.13 μ	g/l (ppb) HOCl		
Measured error 1)	±2 % or ±5 μg/l (pp	b) of value measured (depending	g on which value is higher)		
		LOD (limit of detection)	LOQ (limit of quantification)		
	CCS51-**11AD*	0.002 mg/l (ppm) 0.005 mg/l (ppm)			
	CCS51-**11BF*	0.002 mg/l (ppm)	0.007 mg/l (ppm)		
Repeatability	CCS51-**11AD*	0.0031 mg/l (ppm)			
	CCS51-**11BF*	0.0035 mg/l (ppm)			
Nominal slope	CCS51-**11AD*	48 nA per 1 m	g/l (ppm) ClO <sub>2</sub>		
	CCS51-**11BF*	14 nA per 1 m	g/l (ppm) ClO <sub>2</sub>		
Long-term drift	$\!<\!1$ % per month (mean value, determined while operating at varying concentrations and under reference conditions)				
Polarization time	Initial commissionir	ng 60 min			
	Recommissioning	30 min			
Operating time of the	at maximum concer	ntration and 55 °C	60 days		
electrolyte	at 50 % of measuring	1 year			
	at 10 % of measuring	2 years			


<sup>1)</sup> Based on ISO 15839. The measured error includes all the uncertainties of the sensor and transmitter (measuring chain). It does not contain all the uncertainties caused by the reference material and adjustments that may have been performed.

## Installation

#### Orientation

Do not install upside-down!

- ▶ Install the sensor in an assembly, support or appropriate process connection at an angle of at least 15 ° to the horizontal.
- ▶ Other angles of inclination are not permitted.
- ► Follow the instructions for installing the sensor in the Operating Instructions of the assembly used

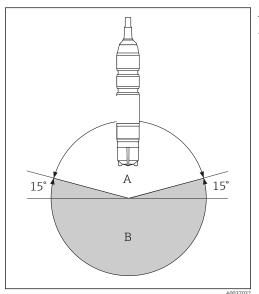

A Permitted orientation

3 Incorrect orientation

Immersion depth

77 mm (3.03 in)

#### **Installation instructions**

## Installation in Flowfit CCA151 flow assembly




The disinfection sensor (membrane-covered,  $\emptyset 25$  mm) is designed for installation in the Flowfit CCA151 flow assembly if the pH value for compensation is provided in another way.

Please note the following during installation:

- ► The flow rate must be at least 5 l/h (1.32 gal/h).
- ▶ If the medium is returned to an overflow basin, pipe or similar, the resulting counterpressure on the sensor must not exceed 1 bar (14.5 psi) and must remain constant.
- ► Avoid negative pressure at the sensor, e.g. due to medium being returned to the suction side of a pump.
- ► To avoid buildup, heavily contaminated water should also be filtered.

## Preparing assembly

1. The assembly is supplied to the customer with a union nut screwed onto the assembly: unscrew union nut from assembly.

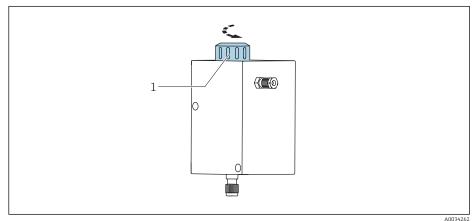

■ 3 Flowfit CCA151 flow assembly


l Union nut

2. The assembly is supplied to the customer with a dummy plug inserted in the assembly: remove dummy plug from assembly.

## Equip sensor with adapter

The required adapter (clamping ring, thrust collar and O-ring) can be ordered as a mounted sensor accessory or as a separate accessory .

1. First slide the clamping ring, then the thrust collar, and then the O-ring from the membrane cap towards the sensor head and into the lower groove.

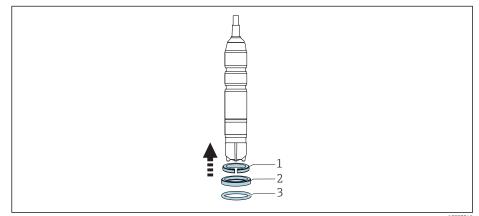


A0037041

 $\blacksquare$  4 Slide clamping ring, thrust collar and O-ring upwards from the membrane cap to the sensor shaft and into the lower groove

## Installing sensor in assembly

2. Slide sensor with adapter for Flowfit CCA151 into the opening in the assembly.

3. Screw union nut onto assembly on block.

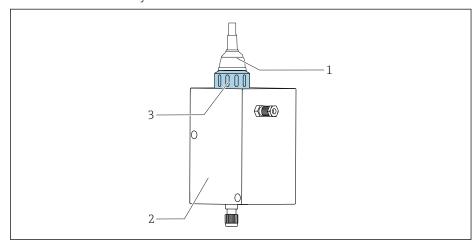

■ 5 Flowfit CCA151 flow assembly

- 1 Disinfection sensor
- 2 Flowfit CCA151 flow assembly
- 3 Union nut for securing a disinfection sensor

## Installation in Flowfit CCA250 flow assembly

The sensor can be installed in the Flowfit CCA250 flow assembly. It allows a pH and ORP sensor to be installed, in addition to the chlorine or chlorine dioxide sensor. A needle valve regulates the flow in the range of 30 to  $120 \, l/h$  (7.9 to  $30 \, qal/h$ ).


Please note the following during installation:

- ► The flow rate must be at least 30 l/h (7.92 gal/h). If the flow drops below this value or stops completely, this can be detected by an inductive proximity switch and used to trigger an alarm with locking of the dosage pumps.
- ▶ If the medium is returned to an overflow basin, pipe or similar, the resulting counterpressure on the sensor must not exceed 1 bar (14.5 psi) and must remain constant.
- Negative pressure at the sensor e.g. due to medium being returned to the suction side of a pump, must be avoided.

## Equip sensor with adapter

The required adapter can be ordered as a mounted sensor accessory or as a separate accessory.

1. Slide adapter for Flowfit CCA250 from the sensor head up to the stop on the sensor.

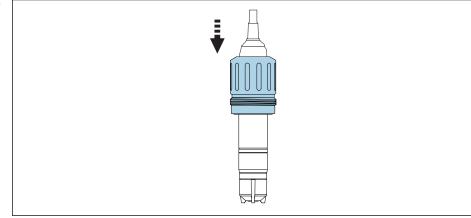

■ 6 Slide on adapter for Flowfit CCA250.

2. Lock the adapter in place using the two studs provided.

For detailed information on "Installing sensor in Flowfit CCA250 assembly", see Operating Instructions for assembly

8 Endress+Hauser

A0037

## Installation in other flow assemblies

When using other flow assemblies, please ensure the following:

- ightharpoonup The flow velocity at the membrane must always be at least 15 cm/s (0.49 ft/s).
- ► The flow direction is upwards. Transported air bubbles must be removed so that they do not collect in front of the membrane.
- ▶ The flow must be directed to the membrane.

## Installation in Flexdip CYA112 immersion assembly


Alternatively, the sensor can be installed in an immersion assembly with  ${\sf G1}$  threaded connection, e. q.

 $\ensuremath{\mathbf{1}}$  Ensure sufficient flow towards the sensor when using the immersion assembly .

## Equip sensor with adapter

The required adapter can be ordered as a mounted sensor accessory or as a separate accessory.

1. Slide adapter for Flexdip CYA112 from the sensor head up to the stop on the sensor.

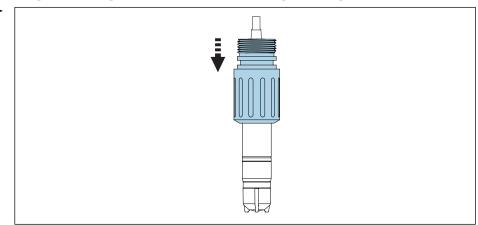

A00370

■ 7 Slide on adapter for Flexdip CYA112.

- 2. Lock the adapter in place using the two studs provided.
- For detailed information on "Installing sensor in Flexdip CYA112 assembly", see Operating Instructions for assembly

## **Environment**

**Ambient temperature range** -20 to +60 °C (-4 to 140 °F)

Storage temperature		Longterm storage	Storage up to max 48 h	
	With electrolyte	+0 to 35 °C (32 to 95 °F) (non-freezing)	35 to 50 °C (95 to 122 °F) (non-freezing)	
	Without electrolyte	-20 to 60 °C (-4 to 140 °F)		

Degree of protection

IP 68 (1.8 m (5.91 ft)) water column over 7 days at 20  $^{\circ}\text{C}$  (68  $^{\circ}\text{F})$ 

## **Process**

Process temperature	+0 to 55 °C (32 to 130 °F), non-freezing
Process pressure	The inlet pressure depends on the specific fitting and installation.

The measurement can take place with a free outlet.

The medium pressure directly upstream from the sensor membrane must not exceed 1 bar (14.5 psi) abs.

► In terms of sensor condition and performance, it is essential that the flow velocity limits specified in the following table be observed.

	Flow	Volume flow [l/h]			
	velocity [cm/s]	Flowfit CCA250	Flowfit CCA151	FlexdipCYA112	
Minimum	15	30	5	The sensor is suspended freely in the medium;	
Maximum	80	145	20	pay attention to the minimum flow velocity 15 cm/s during installation.	


pH range	Calibration Measurement	pH 4 to 8 pH 4 to 9		
Flow	remains stable for a minimum of 5 l/h (1.32 gal/hr), in the Flowfit CCA151 flow assembly remains stable for a minimum of 30 l/h (8 gal/hr), in the Flowfit CCA250 flow assembly			

Minimum flow

remains stable for a minimum of 15 cm/s (0.5 ft/s), e.g. with Flexdip CYA112 immersion assembly

## **Mechanical construction**

## Dimensions

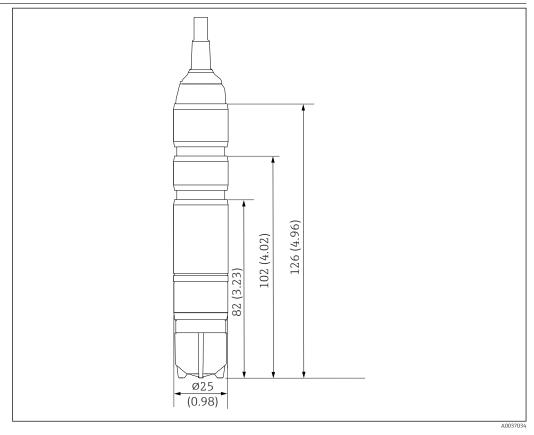

■ 8 Dimensions in mm (in)

Weight Sensor with membrane cap and electrolyte (without protection cap and without adapter)

Approx. 250 g (8.82 oz)

10

Materials	Sensor shaft	PVC
	Cable sheathing	PVC
	Membrane	PVDF
	Membrane cap	PVDF
	Protection cap	<ul> <li>Vessel: PC Makrolon (polycarbonate)</li> <li>Seal: Kraiburg TPE TM5MED</li> <li>Cover: PC Makrolon (polycarbonate)</li> </ul>
	Sealing ring	FKM
Cable specification	max. 3 m (9.84 ft)	

# Certificates and approvals

## C€ mark

## **Declaration of Conformity**

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CC mark.

# Ordering information

#### Product page

#### www.endress.com/ccs51

## **Product Configurator**

On the product page there is a **Configure** button to the right of the product image.

- 1. Click this button.
  - └ The Configurator opens in a separate window.
- 2. Select all the options to configure the device in line with your requirements.
  - └ In this way, you receive a valid and complete order code for the device.
- 3. Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.
- For many products you also have the option of downloading CAD or 2D drawings of the selected product version. Click the **CAD** tab for this and select the desired file type using picklists.

## Scope of delivery

The delivery comprises:

- Disinfection sensor (membrane-covered, Ø25 mm) with protection cap (ready for use)
- Bottle of electrolyte (50 ml (1.69 fl.oz))
- Replacement membrane cap in protection cap
- Operating Instructions

## Accessories

The following are the most important accessories available at the time this documentation was issued.

▶ For accessories not listed here, please contact your Service or Sales Center.

#### Maintenance kit CCV05

Order according to product structure

- 2 x membrane caps and 1 x electrolyte 50 ml (1.69 fl.oz)
- 1 x electrolyte50 ml (1.69 fl.oz)
- 2 x sealing set

## **Device-specific accessories**

#### Flowfit CCA151

- Flow assembly for chlorine dioxide sensors
- Product Configurator on the product page: www.endress.com/cca151



Technical Information TI01357C

## Flowfit CCA250

- Flow assembly for chlorine and pH/ORP sensors
- Product Configurator on the product page: www.endress.com/cca250



Technical Information TI00062C

### FlexdipCYA112

- Immersion assembly for water and wastewater
- Modular assembly system for sensors in open basins, channels and tanks
- Material: PVC or stainless steel
- Product Configurator on the product page: www.endress.com/cya112



Technical Information TI00432C

## Photometer PF-3

- Compact hand-held photometer for determining free available chlorine
- Color-coded reagent bottles with clear dosing instructions
- Order No.: 71257946

## Adapter kit CCS5x(D) for CCA250

- Adapter incl. O-rings
- 2 studs for locking in place
- Order No. 71372025

## Adapter kit CCS5x(D) for CYA112

- Adapter incl. O-rings
- 2 studs for locking in place
- Order No. 71372026

#### COY8

Zero-point gel for oxygen and chlorine sensors

- Oxygen-free gel for the validation, calibration and adjustment of oxygen measuring cells
- Product Configurator on the product page: www.endress.com/coy8



Technical Information TIO1244C







