XA01594P-C/00/EN/ 03.21 71526963 2021-05-03

Safety Instructions **Deltabar FMD71, FMD72**

Services

4-20 mA HART

Ga/Gb Ex ia IIC T6...T4 1Ex ia IIC T6...T4 Gb







Deltabar FMD71, FMD72 XA01594P-C

Deltabar FMD71, FMD72

4-20 mA HART

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	6
Safety instructions: Special conditions	6
Safety instructions: Installation	7
Safety instructions: Zone 0	8
Temperature tables	9
Connection data	9

XA01594P-C Deltabar FMD71, FMD72

About this document



This document has been translated into several languages. Legally determined is solely the English source text.

Associated documentation

This document is an integral part of the following Operating Instructions:

BA01044P/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

 In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.

• On the CD for devices with CD-based documentation

Manufacturer's certificates

Certificate of Conformity TP TC 012/2011

Inspection authority: LLC NANIO CCVE (ООО «НАНИО ЦСВЭ»)

Certificate number:

EA3C RU C-DE AA87 B 00701/21

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GOST 31610.0-2014 (IEC 60079-0:2011)
- GOST 31610.11-2014 (IEC 60079-11:2011)
- GOST 31610.26-2012/IEC 60079-26:2006

Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Deltabar FMD71, FMD72 XA01594P-C

Structure of the extended order code

FMD7x	-	******	+	A*B*C*D*E*F*G*.
(Device		(Basic		(Optional
type)		specifications)		specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Deltabar



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMD71, FMD72

XA01594P-C Deltabar FMD71, FMD72

Basic specifications

Position 1,	Position 1, 2 (Approval)		
Selected option		Description	
FMD7x	GA	EAC Ga/Gb Ex ia IIC T6T4 EAC 1Ex ia IIC T6T4 Gb	

Position 5 (F	ition 5 (Housing Transmitter)		
Selected opt	ion	Description	
FMD7x	Α	Aluminium T14	
	В	Stainless steel T14	
	С	Stainless steel T17, hygiene	

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Only use the device in media to which the wetted materials have sufficient durability.

Safety instructions: Special conditions

- For light metal flanges or flange faces (e.g. titanium, zirconium), avoid sparks caused by impact and friction.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts:
 - Observe the danger of electrostatic charging and discharge.
 - Do not rub surfaces with a dry cloth.
- The sensors can be installed in the boundary wall between Zone 0 and the less hazardous area Zone 1. In this configuration, the process connection is installed in Zone 0, while the sensor enclosure is installed in Zone 1.

Deltabar FMD71, FMD72 XA01594P-C


Cover with plastic viewing window (Basic specification, Position 5 = C) Avoid electrostatic charqing.

Potential Electrostatic Charging Hazard

Avoid electrostatic charging:

- Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
- Of isolated capacities (e.g. isolated metallic plates)

Safety instructions: Installation

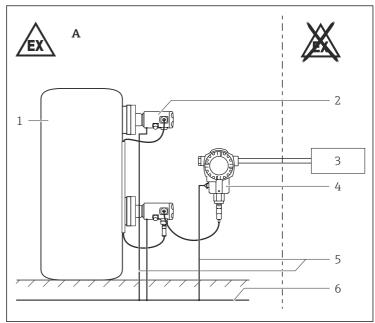

A0032293

■ 1

- A Zone 1
- 1 Tank: Zone 0
- 2 Sensor module
- 3 Certified associated apparatus
- 4 Transmitter enclosure
- 5 Potential equalization line
- 6 Potential equalization

XA01594P-C Deltabar FMD71, FMD72

• After aligning (rotating) the enclosure, retighten the fixing screw.

- Sensor modules may only be connected to the transmitter and interconnected to each other. Any further connections are not allowed.
- Transmitter enclosure and sensor modules must have the same ground potential (e.g. transmitter enclosure and sensor modules all mounted to the same metal structure).

If potential equalisation can not be achieved by the installation, the devices must be interconnected with a suitable bonding conductor using the external ground connections.

Intrinsic safety

- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 $V_{\rm rms}$.
- When the device is connected to an intrinsically safe circuit Ex ib, the type of protection changes to Ex ib. Do not operate intrinsically safe circuits Ex ib in Zone 0.

Overvoltage protection

Versions with optional terminal block with integrated overvoltage protection: Isolation voltage greater than $290\ V_{rms}/420\ V_{DC}$ between terminal connection and potentially grounded metal parts.

Safety instructions: Zone 0

- In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.
 - Temperature: -20 to +60 °C
 - Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
 - Air with normal oxygen content, usually 21 % (V/V)
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.
- Associated devices with galvanic isolation between the intrinsically safe and non-intrinsically safe circuits are preferred.

Device type FMD71

For installations which require overvoltage protection to comply with national regulations or standards, install the device using overvoltage protection (e.q. HAW56x from Endress+Hauser).

Deltabar FMD71, FMD72 XA01594P-C

Temperature tables

Device type FMD71

Temperature class	ocess temperature T_p Ambient temperature T_a (ambient): enclosure	
T6	≤ 80 °C	$-40 ^{\circ}\text{C} \le T_{a} \le +40 ^{\circ}\text{C}$
T4	≤ 125 °C	-40 °C ≤ T _a ≤ +70 °C

The process temperatures refer to the temperature at the separation membrane.

Device type FMD72

Temperature class	Process temperature T _p (process)	$\begin{array}{c} \text{apperature } T_p \\ \text{(ambient temperature } T_a \\ \text{(ambient): enclosure} \end{array}$	
Т6	≤ 80 °C	$-40 ^{\circ}\text{C} \le T_a \le +40 ^{\circ}\text{C}$	
T4	≤ 125 °C	-40 °C ≤ T _a ≤ +70 °C	



- The process temperatures refer to the temperature at the separation membrane.
 - Higher temperatures are permitted depending on the type of diaphragm seal.
 - Do not exceed the max. ambient temperature at the enclosure.

Connection data

Electrical data

 $U_i \le 30 V_{DC}$ $l_i \le 300 \text{ mA}$ $P_i \le 1 W$ $C_i \le 11.8 \text{ nF}$ $L_i = 0$





www.addresses.endress.com