

Safety Instructions

Gammapilot M FMG60

PROFIBUS PA, FOUNDATION Fieldbus (Ex t)

Ex tb [ia Da] IIIC T80°C...T85°C Db

Ex tb [ia Da] IIIC T80°C Db



Gammapilot M FMG60

PROFIBUS PA, FOUNDATION Fieldbus (Ex t)

Table of contents

Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Other standards	4
Extended order code	4
Safety instructions: General	7
Safety instructions: Special conditions	7
Safety instructions: Installation	7
Temperature tables	10
Connection data	10

Associated documentation	<p>This document is an integral part of the following Operating Instructions:</p> <p>PROFIBUS PA: BA00329F/00</p> <p>FOUNDATION Fieldbus: BA00330F/00</p>
Supplementary documentation	<p>Explosion-protection brochure: CP00021Z/11</p> <p>The Explosion-protection brochure is available:</p> <ul style="list-style-type: none">▪ In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z▪ On the CD for devices with CD-based documentation
Manufacturer's certificates	<p>IEC Declaration of Conformity</p> <p>Certificate number: IECEX DEK 13.0071X</p> <p>Affixing the certificate number certifies conformity with the following standards (depending on the device version):</p> <ul style="list-style-type: none">▪ IEC 60079-0 : 2017▪ IEC 60079-11 : 2011▪ IEC 60079-31 : 2013
Manufacturer address	<p>Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany</p> <p>Address of the manufacturing plant: See nameplate.</p>
Other standards	<p>Among other things, the following standards shall be observed in their current version for proper installation:</p> <ul style="list-style-type: none">▪ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"▪ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"
Extended order code	<p>The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional</p>

information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMG60	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Gammapilot M



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMG60

Basic specifications

Position 1 (Approval)		
Selected option	Description	
FMG60	I	IECEx Ex tb [ia Da] IIIC T80°C/T85°C Db

Position 2 (Power Supply)		
Selected option	Description	
FMG60	1	90-253 VAC
	2	18-35 VDC

Position 3 (Connect. Power Supply; Connect. Output)		
Selected option	Description	
FMG60	F	Dust-Ex; dust-Ex

Position 4 (Output)		
Selected option	Description	
FMG60	2	PROFIBUS PA
	3	FOUNDATION Fieldbus

Position 5 (Scintillator; Measuring Range)		
Selected option	Description	
FMG60	A-D	NaJ-Crystal
	G-T	PVT

Optional specifications

No options specific to hazardous locations are available.

Safety instructions:
General


- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)

Safety instructions:
Special conditions

In the event of additional or alternative special varnishing on the housing or other metal parts:

- Observe the danger of electrostatic charging and discharge.
- Do not rub surfaces with a dry cloth.
- Do not install in the vicinity of processes generating strong electrostatic charges.

Safety instructions:
Installation

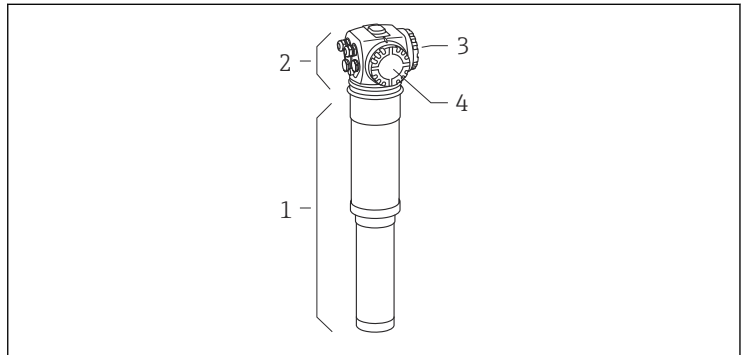


A0031753

- 1 Pipe housing
- 2 Compartment housing
- 3 Terminal compartment A
- 4 Terminal compartment B

Communication PROFIBUS PA, FOUNDATION Fieldbus

Basic specification, Position 3 = F

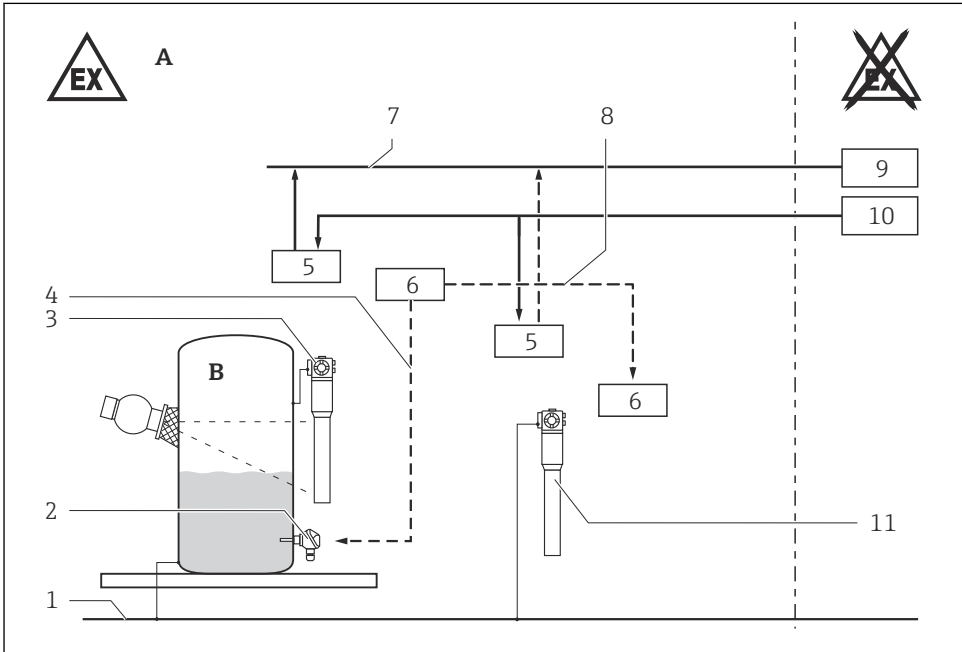


A0031795

- A Zone 21 or Zone 22
 B Zone 20, Zone 21 or Zone 22
 1 Local potential equalization line
 2 PT100; approved Ex ia equipment
 3 FMG60 with NaJ crystal scintillator, PVT plastic scintillator
 4 [Ex ia] circuit
 5 Terminal compartment A (Ex t)
 6 Terminal compartment B (Ex i)
 7 Communication: PROFIBUS PA or FOUNDATION Fieldbus
 8 [Ex ia] circuit; Cascade in, out
 9 Supply unit/Segment coupler
 10 Power supply
 11 FMG60 with NaJ crystal scintillator, PVT plastic scintillator

- To maintain the ingress protection of the housing IP65/67: Install the housing cover, cable glands and blind plugs correctly.
- Cable glands as well as sealing plugs of the terminal compartment A must not be exchanged with those of the terminal compartment B.
- Do not open the terminal compartment A when energized.

- In an explosive atmosphere: Minimum waiting time before opening the terminal compartment A after switching off the power supply: 3 minutes.
- For service operations, the terminal compartment B (Ex i) may be opened under voltage for a short time. When the terminal compartment is opened make sure that no dust may deposit. After configuration screw the cover down to limit stop.
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- Continuous service temperature of the connecting cable: $\geq T_a + 20 \text{ K}$.
- Replace cable glands and sealing plugs only with identical parts.

The safety screws at the pipe housing must not be loosened:

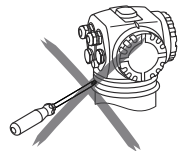

A0031759

When using the water cooling

To avoid damages at the detector or at the cooling jacket if the cooling water freezes: Empty cooling jacket or protect against freezing.

Supplementary cable glands and associated seals

Only use suitable certified metallic cable glands with an ingress protection of at least IP65.

Intrinsic safety

- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- The intrinsically-safe input circuits are galvanically isolated from other circuits up to a peak value of the nominal voltage of 375 V.
- The intrinsically safe circuits of the device are isolated from ground and have a dielectric strength of at least $500 V_{\text{rms}}$.
- When the device is connected to an intrinsically safe circuit Ex ib, the type of protection changes to Ex ib. Do not operate the temperature sensor in Zone 20 if the device is connected to an intrinsically safe circuit of Category Ex ib.
- When the device is connected to an intrinsically safe circuit Ex ic, the type of protection changes to Ex ic. Do not operate the temperature sensor in Zone 20 or Zone 21 if the device is connected to an intrinsically safe circuit of Category Ex ic.

Potential equalization

Integrate the device into the local potential equalization.

Temperature tables

Basic specification, Position 5 = A-D, G-T

Ambient temperature T_a (ambient)	
Without water cooling or water cooling out of operation.	
<ul style="list-style-type: none"> ■ Devices with NaJ crystal scintillator: ■ Devices with PVT plastic scintillator: 	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$ $-40\text{ °C} \leq T_a \leq +60\text{ °C}$
With water cooling in operation.	
At the pipe housing (within the water cooling):	
<ul style="list-style-type: none"> ■ Devices with NaJ crystal scintillator: ■ Devices with PVT plastic scintillator: 	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$ $-40\text{ °C} \leq T_a \leq +60\text{ °C}$
At the compartment housing:	$-40\text{ °C} \leq T_a \leq +80\text{ °C}$


Max. surface temperature ($T_{a,max}$)	
Without water cooling or water cooling out of operation.	$T_{80\text{ °C}}$ at $T_a = +60\text{ °C}$
With water cooling in operation.	
At the pipe housing (within the water cooling):	$T_{80\text{ °C}}$ at $T_a = +60\text{ °C}$
At the compartment housing:	$T_{80\text{ °C}}$ at $T_a = +75\text{ °C}$ $T_{85\text{ °C}}$ at $T_a = +80\text{ °C}$

Type of protection	
Terminal compartment A and B	Ex tb
Signal circuits in terminal compartment B	Ex ia

Connection data


- Tightening torque of the terminal screws: max. 0.4 Nm.
- Strip the insulation of the connection wires with suitable length. Bare parts of the wires must not emerge from the terminal.
- Ensure that the wires are securely clamped.

Terminal compartment A

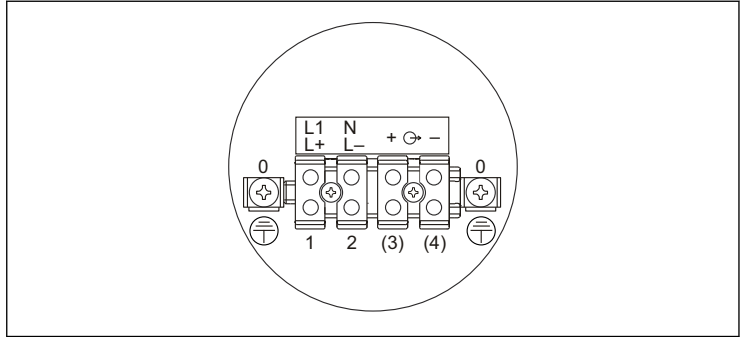


A0031763

Power supply circuit		
Basic specification, Position 2 = 1	L1 N	$U_e = 90 \text{ to } 253 \text{ V}_{AC}$, 50/60 Hz, 8.5 VA
Basic specification, Position 2 = 2	L+ L-	$U_e = 18 \text{ to } 35 \text{ V}_{DC}$, 3.5 W $U_m = 253 \text{ V}_{AC}$






Signal circuit	
Basic specification, Position 3 = F	 <p> $U_e \leq 32 \text{ V}_{DC}$ $I = 10 \text{ mA}$ (nominal current) $U_m = 253 \text{ V}_{AC}$ </p> <p>The detector ensures galvanic isolation up to a maximum of 253 V_{AC} between the fieldbus circuit and any other circuit.</p>

Terminal compartment B

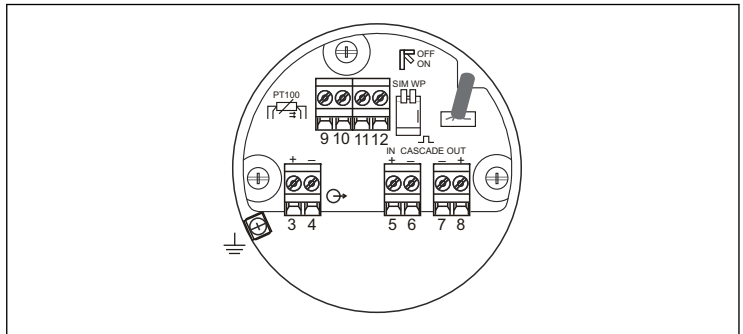Intrinsic safety (Ex ia)



A0031764

Signal circuit		Ex ia IIIC	
Terminals 3, 4 not connected	 + -		
PT100		$U_o = 8.4 \text{ V}$ $I_o = 8.3 \text{ mA}$ $P_o = 17.5 \text{ mW}$ $R_i = 1012 \Omega$ $C_i = 0$ $L_i = 0$ Characteristic curve: linear	$C_o = 6 \mu\text{F at}$ $L_o = 1 \text{ mH}$ $C_o = 5.2 \mu\text{F at}$ $L_o = 2 \text{ mH}$
Cascade out ¹⁾	 - +	$U_o = 8.4 \text{ V}$ $I_o = 19.2 \text{ mA}$ $P_o = 40.3 \text{ mW}$ $R_i = 439 \Omega$ $C_i = 5.3 \text{ nF}$ $L_i = 67 \mu\text{H}$ Characteristic curve: linear	$C_o = 42 \mu\text{F}$ $L_o = 199 \text{ mH}$
Cascade in ²⁾	 + -	$U_i = 8.4 \text{ V}$ $I_i = 19.2 \text{ mA}$ $P_i = 40.3 \text{ mW}$ $C_i = 0$ $L_i = 67 \mu\text{H}$	
Connection for FHX40		$U_o = 4.7 \text{ V}$ $I_o = 37.7 \text{ mA}$ $P_o = 44.3 \text{ mW}$ $R_i = 125 \Omega$ $C_i = 12.7 \text{ nF}$ $L_i = 0$ Characteristic curve: linear	Observe correct type of protection and associated Safety Instructions of FHX40.

- 1) Only for connection to FMG60 signal circuit Cascade in
 2) Only for connection to FMG60 signal circuit Cascade out



71523871

www.addresses.endress.com
