



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services



Solutions

Operating manual

Thermophant T TTR 31, TTR 35

Temperature switch

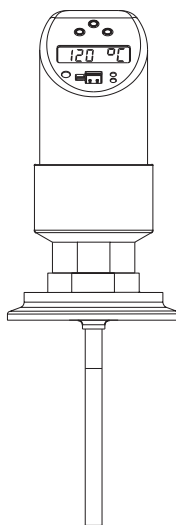
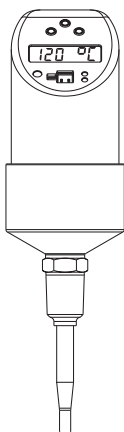


Table of contents

1 Safety instructions 3

1.1 Designated use 3

1.2 Installation, commissioning and operation . . 3

1.3 Operational safety 3

1.4 Return 3

2 Device identification 4

2.1 Nameplate 4

3 Installation 5

3.1 Incoming acceptance, storage 5

3.2 Dimensions 5

3.3 Process connection 6

3.4 Installation instructions 7

4 Wiring 8

4.1 DC voltage version with M12 connector . . 8

4.2 DC voltage version with valve connector . . 8

5 Operation 9

5.1 On-site operation 9

5.2 Operation with PC and Readwin® 2000 . 16

6 Accessories 18

6.1 Adapter concept for TTR 35 18

6.2 Welding bosses and coupling 20

6.3 Electrical connection 21

6.4 Configuration kit 22

7 Trouble-shooting. 23

7.1 Errors and warnings 23

7.2 Spare parts 24

7.3 Repair 24

7.4 Disposal 24

7.5 Change status (release) 24

7.6 Release history 24

8 The most important technical data 25

8.1 Power supply 25

8.2 Output 25

8.3 Operating conditions 25

9 Dangerous good sheet 27

1 Safety instructions

1.1 Designated use

The Thermophant T is a temperature switch for monitoring, displaying and regulating process temperatures. The device has been safely built with state-of-the-art technology and meets the applicable requirements and EC Directives. It can, however, be a source of danger if used incorrectly or for anything other than the designated use.

1.2 Installation, commissioning and operation

Installation, electrical connection, commissioning, operation and maintenance of the measuring system must be carried out by trained, qualified specialists authorised to perform such work by the facility's owner-operator. The specialist must have read and understood these Operating Instructions and must follow the instructions they contain. The device may only be modified and repair work carried out if this is explicitly permitted in the Operating Instructions. Damaged devices which could be a source of danger may not be commissioned and must be labelled and identified as defective.

1.3 Operational safety

■ Functional safety

The Thermophant T temperature switches were developed according to the standards IEC 61508 and IEC 61511-1 (FDIS). The device version with PNP switch output and additional analog output is equipped with fault detection and fault prevention facilities within the electronics and software. This device version can therefore be used to monitor temperature up to SIL 2 (Safety Integrity Level).

■ Ex-area

The Thermophant T is not approved for use in Ex-areas.

1.4 Return

The following procedures must be carried out before a device is returned to Endress+Hauser:

- Always enclose a fully completed “Declaration of Contamination” form with the device. Only then can Endress+Hauser transport and examine a returned device. A copy of the “Declaration of Contamination” can be found on the second last page of these Operating Instructions.
- Remove all fluid residues. This is particularly important if the fluid is hazardous to health, e.g. flammable, toxic, caustic, carcinogenic, etc.



Warning!

Do not return a measuring device if you are not absolutely certain that all traces of hazardous substances have been removed, e.g. substances which have penetrated crevices or diffused through plastic.

2 Device identification

2.1 Nameplate

To identify your device, compare the complete order code and the version information on the delivery papers with the data on the nameplate.

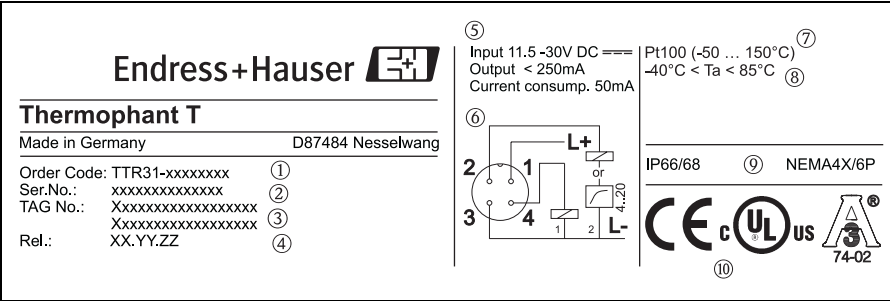


Fig. 1: Nameplate for device identification (as example)

①	Order code	⑥	Connection diagram
②	Serial number	⑦	Measuring range
③	TAG number	⑧	Ambient temperature
④	Release number (change status)	⑨	Degree of protection
⑤	Connection values	⑩	Approvals



Note!


- The release number indicates the change status of the device. A change in the last two figures does not have any affect on the compatibility - see also → Chap. 7.

3 Installation

3.1 Incoming acceptance, storage

- Incoming acceptance:
Check the packaging and the device for damage. Check that the goods delivered are complete and nothing is missing.
- Storage:
Storage temperature $-40\text{ }^{\circ}\text{C}$ to $+85\text{ }^{\circ}\text{C}$.

3.2 Dimensions

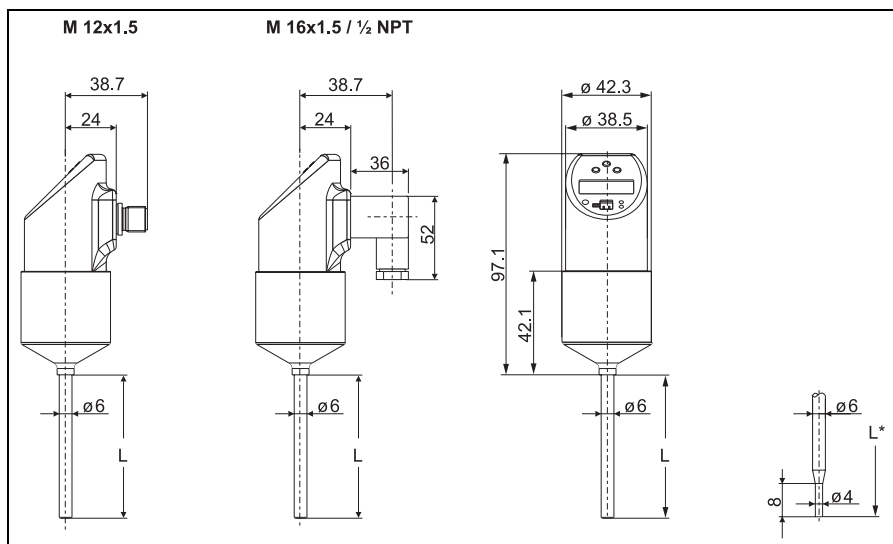

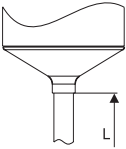
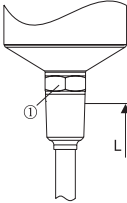
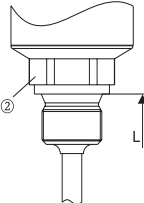
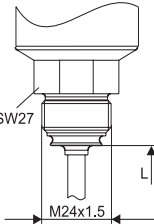
T09-TTR31xxx-06-xx-xx-xx-000

Fig. 2: Dimensions in mm


Version L in 100 and 200 mm, version L* = 50 mm with reduced sensor tip
 M 12x1.5 connector as per IEC 60947-5-2
 M 16x1.5 or 1/2 NPT valve plug as per DIN 43650A/ISO 4400

3.3 Process connection

The following table illustrates the versions of Thermophant T.

	TTR 31			TTR 35
	<div><div>TTR 31</div><div><p>A</p></div><div><p>B</p></div><div><p>C</p></div></div> <div><div>TTR 35</div><div><p>D</p></div><div>T09-TTR31xxx-17-xx-xx-xx-000</div></div>			
Field of application	Monitoring, display and control of process temperatures			Monitoring, display and control of process temperatures in hygienic processes
Process connection	Item A Version without process connection ("w"). Suitable welding bosses and coupling (see Section 6)	Item B Version with thread process connection ANSI 1/4" NPT (① = AF14) and 1/2" NPT (① = AF27)	Item C Version with thread process connection G 1/4A (② = AF14) and G 1/2A (② = AF27) as per ISO 228	Item D Adapter concept - version with M24x1.5 thread for adapters with process connection for hygienic processes (see Section 6.1.2)
Sensor length L	Version L in 100 and 200 mm, version L = 50 mm only with reduced sensor tip			
Measuring range	-50 °C to +150 °C			-50 °C to +150 °C

3.4 Installation instructions

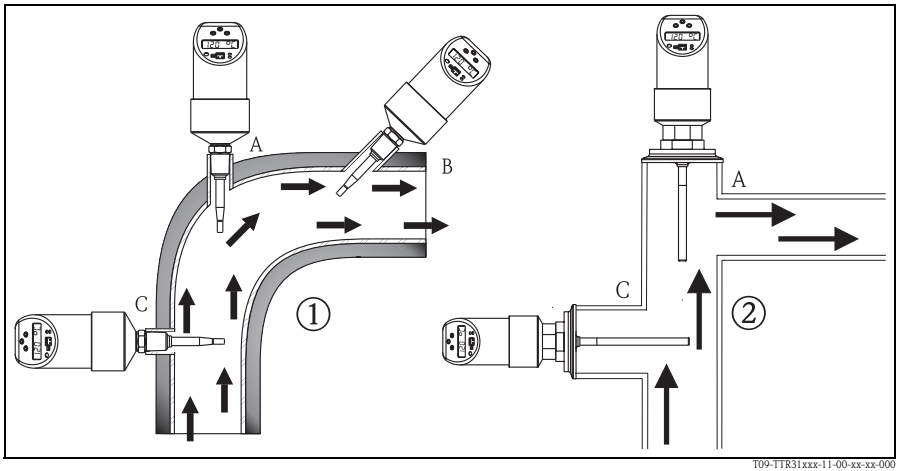

T09-TTR31xxx-11-00-xx-xx-000

Fig. 3: Possible installation options for temperature monitoring in pipes


- ① TTR 31
- ② TTR 35 for use in hygienic processes

Mounting instructions:

- Installation at angle pieces, against the direction of flow (Fig. 3, Item A)
- Installation in smaller pipes, inclined against the direction of flow (Fig. 3, Item B)
- Installation vertical to the direction of flow (Fig. 3, Item C)
- The on-site display can be rotated electronically 180° – see Section 5.1 "On-site operation"
- The housing can be rotated up to 310°.

4 Wiring

4. 1 DC voltage version with M12 connector

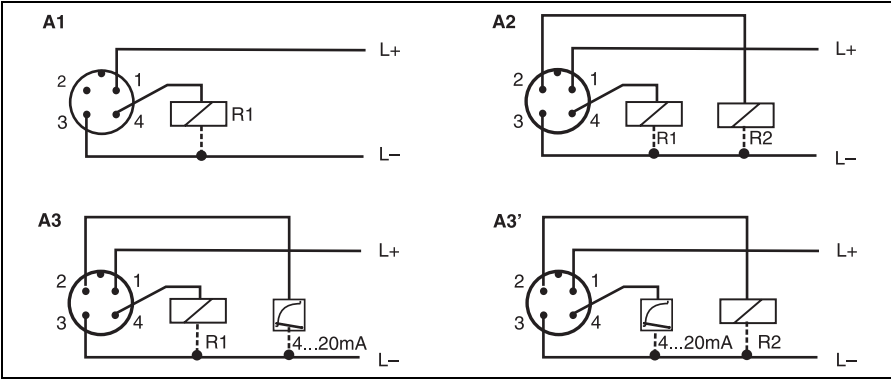

P01-PTx3xxxx-04-xx-xx-xx-002


Fig. 4: Thermophant T with M12x1.5 connector

- A1: 1x PNP switch output
- A2: 2x PNP switch output
- A3: PNP switch output with additional analog output
- A3': PNP switch output with additional analog output (PIN assignment with "DESINA" setting)



Note!
DESINA (→ Chap. 5.1.3 Basic settings):
R2 = Diagnosis/break contact (more informations about DESINA see www.desina.de)

4. 2 DC voltage version with valve connector

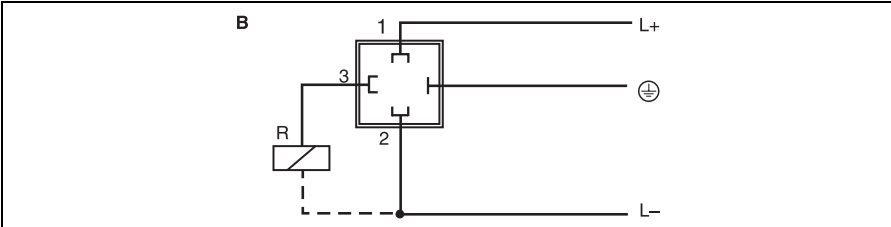

P01-PTx3xxxx-04-xx-xx-xx-003


Fig. 5: Thermophant T with M 16x1.5 or 1/2 NPT valve plug

- B: 1x PNP switch output

5 Operation

5.1 On-site operation

The Thermophant T is operated by means of three keys. The digital display and the light emitting diodes (LED) support navigation in the operating menu.

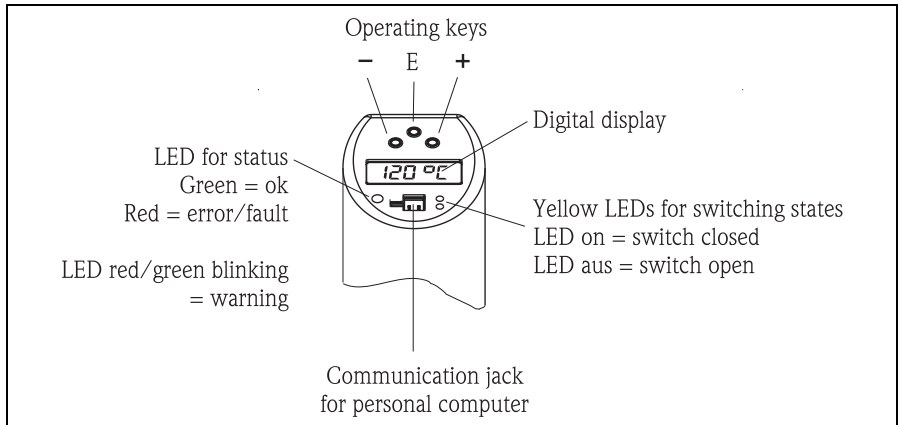


T09-TTR31xxx-19-xx-xx-en-001

Fig. 6: Position of operating elements and possibilities for display

Background illumination of the digital display:

- White = OK status
- Red = error status

5.1.1 Navigating in the operating menu

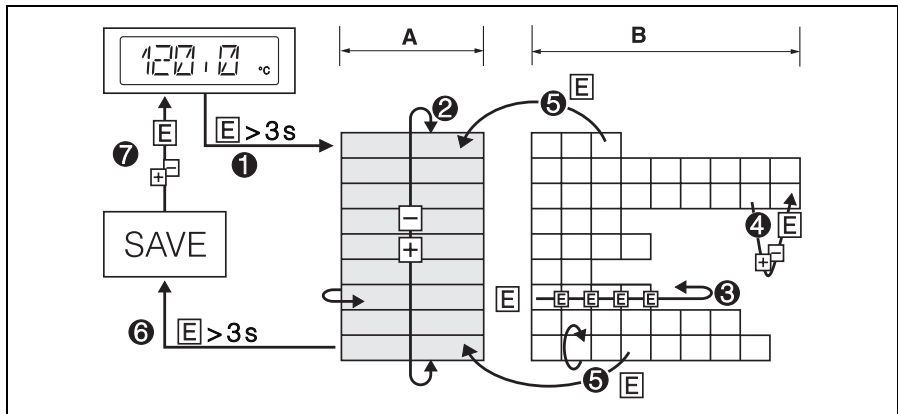

T09-TTR3|xxx-19-xx-xx-xx-002

Fig. 7: Navigating in the operating menu

A Function group selection

B Function selection

- ① Enter the operating menu
 - Press the E key for longer than 3 s
- ② Select the "Function group" with the + or – key
- ③ Select the "Function" with the E key
- ④ Enter or change parameters with the + or – key
 - Then return to "Function" with the E key *Note: If software locking is enabled, it must be disabled before making entries or changes*
- ⑤ Press the E key several times to return to the "Function group"
- ⑥ Jump back to the measuring position (Home position)
 - Press the E key for longer than 3 s
- ⑦ Query to save data (select "YES" or "NO" with the + or – key)
 - Confirm with the E key




Note!

Changes to the parameter settings only become effective if you choose ⑦ 'YES' when asked to save data.

5.1.2 Structure of the operating menu

The structure below shows all the possible fields of the operating menu.

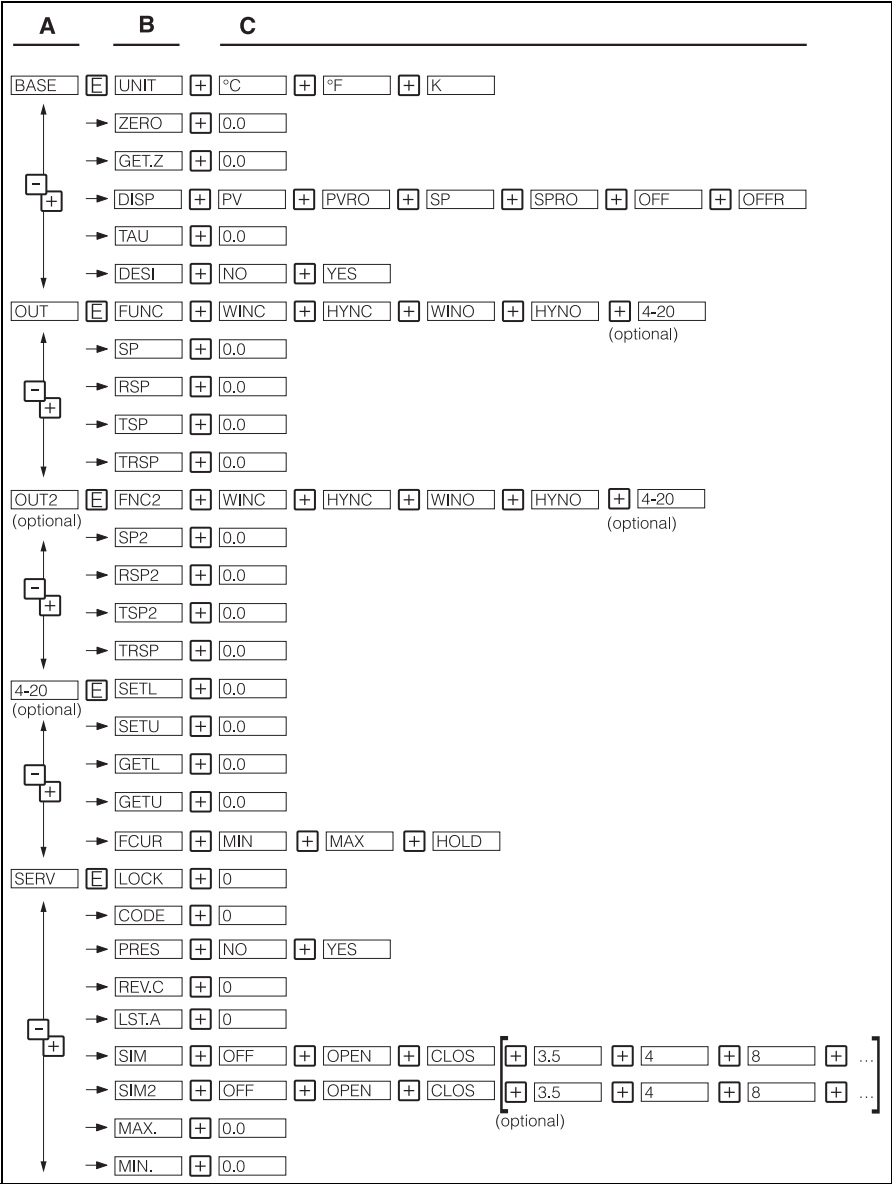

T09-TTR31xxx-19-xx-xx-xx-003

Fig. 8: Operating menu: A function groups, B functions, C settings

5.1.3 Basic settings

Base	Basic settings			
BASE	UNIT	Technical unit	°C °F K	Select technical unit: °C °F K
	ZERO	Configure zero point	0.0	Position adjustment: within ±10 % of the upper range limit
	GET.Z	Accept zero point	0.0	No settings possible
	TAU	Damping: display value, out-put signal	0.0	0...40 s
	DISP	Display	PV PVRO SP SPRO OFF OFFR	PV: measured value display PVRO: measured value display rotated 180° SP: set switch point display SPRO: set switch point display rotated 180° OFF: display off OFFR: display off rotated 180°
	DESI	DESINA	NO YES	Connection in accordance with DESINA guidelines

5.1.4 Output setting

- Hysteresis function

The hysteresis function enables two-point control via a hysteresis. Depending on the temperature T , the hysteresis can be set via the switch point SP and the switch-back point RSP .

- Window function

The window function enables the monitoring of a process temperature range.

- NO contact or NC contact

This switch function is freely selectable.

- Range of adjustment

LRL = Lower Range Limit

URL = Upper Range Limit

LRV = Lower Range Value

URV = Upper Range Value

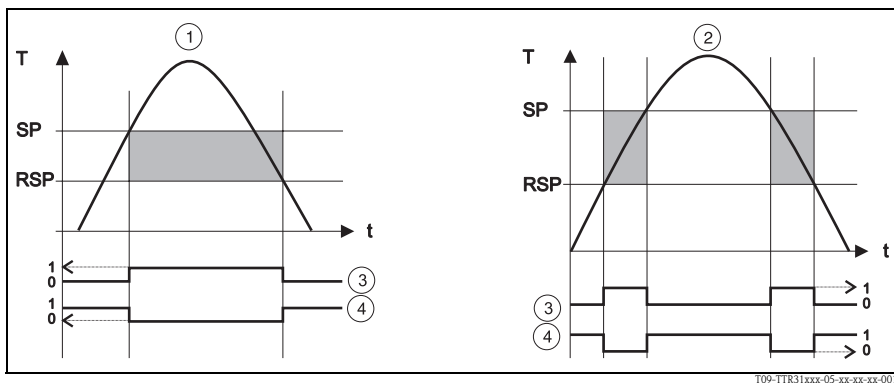


Fig. 9: ① Hysteresis function, ② Window function, ③ NO contact switch status, ④ NC contact switch status
 SP Switch point; RSP Switch-back point

OUT/ OUT2	Output/output 2 (optional)			
OUT OUT2 (optional)	FUNC FNC2	Switching characteristic	WINC HYNC WIND HYNO	HYNC: hysteresis/NC contact WINC: window/NC contact WIND: window/NO contact HYNO: hysteresis/NO contact
	SP SP2	Switch point value	0.0	Switch point -50 °C to 150.5 °C in increments of 0.1 °C
	RSP RSP2	Switch-back point value	0.0	Switch-back point -50.5 °C to 150 °C in increments of 0.1 °C
	TSP TSP2	Switch point delay	0.0	Delay time 0...99 s in increments of 0.1 s
	TRSP TRSP2	Switch-back point delay	0.0	Delay time 0...99 s in increments of 0.1 s
4--20 (optional)	SETL	Value for 4 mA (LRV)		Lower range value in increments of 0.1 °C
	SETU	Value for 20 mA (URV)		Enter upper range value in increments of 0.1 °C
	GETL	Temperature applied for 4 mA (LRV)		Take temperature value as lower range value
	GETU	Temperature applied for 20 mA (URV)		Take temperature value as upper range value
	FCUR	Error current		Current value in event of error

5.1.5 Service function setting

SERV	Service functions			
SERV	LOCK	Locking code	0	Enter the locking code for enabling the device.
	CODE	Change locking code	0	Freely selectable code 1...9999. 0 = no locking; A locking code already assigned can only be changed by first entering the old code for enabling the device.
	PRES	Reset	NO YES	Reset all entries to the factory setting
	REV.C	Revision counter	0	Increases by 1 with each configuration
	LST.A	Last device status	0	Displays the last device status to occur ≠ 0
	SIM SIM2 (if output 2 available)	Simulation output 1 or 2	OFF OPEN CLOS 3.5 (if analog output available)	OFF: No simulation OPEN: Switch output open CLOS: Switch output closed 3.5: Simulation values for analog output in mA (3.5/4.0/8.0/12.0/16.0/20.0/21.7)
	MAX.	Max. indicator	0.0	Display of max. measured process value
	MIN.	Min. indicator	0.0	Display of min. measured process value

5. 2 Operation with PC and Readwin® 2000

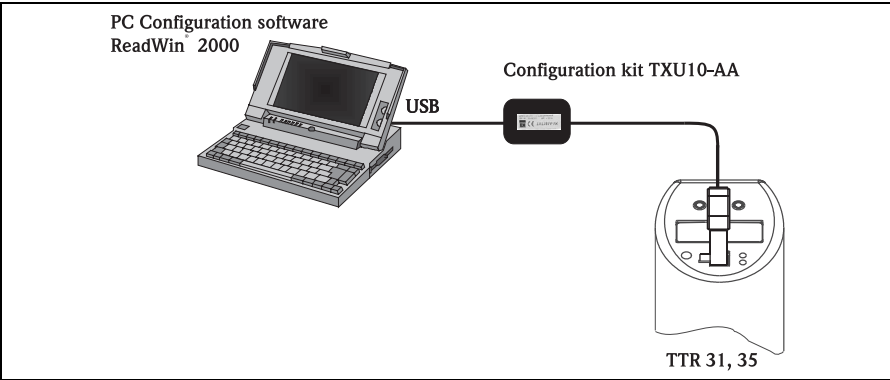


Fig. 10: Operation with PC

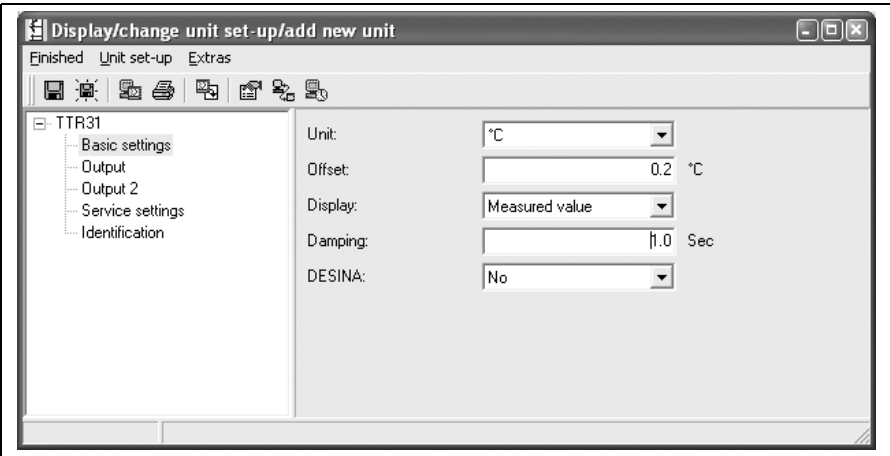


Fig. 11: Device configuration with Readwin® 2000

5.2.1 Additional operating options

In addition to the operating options listed in the previous "On-site operation" section, the ReadWin® 2000 configuration software provides further information on the Thermophant T:

Function group	Description
SERV	Number of switch changes for output 1
	Number of switch changes for output 2
	Device status
	Last error to occur
INFO	Tag number
	Order code
	Limit switch serial number
	Sensor serial number
	Electronics serial number
	Device release (change status)
	Hardware version
	Software version

5.2.2 Operating Instructions for Readwin® 2000

Comprehensive information on the ReadWin® 2000 configuration software may be found in the Operating Instructions BA 137R/09/en.

6 Accessories


All dimensions in the drawings are given in mm.

6.1 Adapter concept for TTR 35

The process connection is an adapter and the sensor module has an adapter thread (see Section 3.3, process connection). As a result, the process connection can easily be changed at a later stage.

6.1.1 Adapter change

The adapter can be changed on TTR 35.

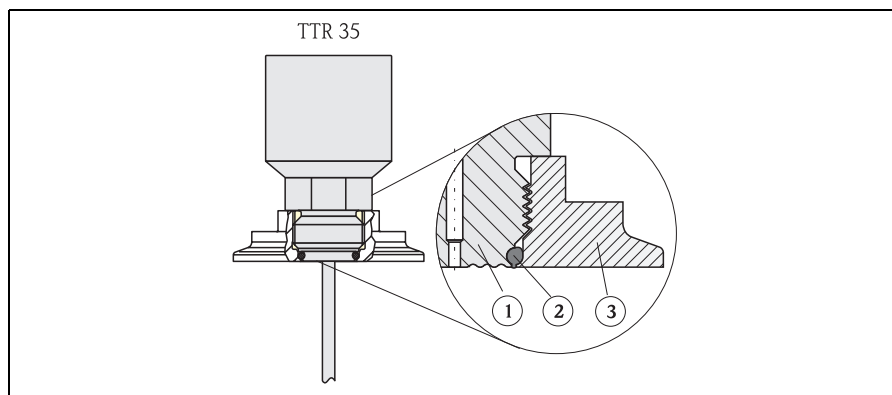

T09-TTR31xxx-17-xx-xx-xx-000

Fig. 12: Changing the adapter

- ① Sensor module with adapter thread
- ② Standard O-ring
- ③ Adapter

Please note the following when changing the adapter:


- Use a new O-ring. Diameter 15.54 x 2.62 mm.
With either EPDM 70 Shore FDA or FKM 70 Shore FDA material
- The device (sensor module) can be fixed in place with an open-ended wrench AF 27.
- The adapter can be screwed on with an open-ended wrench AF 28 or AF 32 (depending on the process connection, (see Section 6.1.2 adapter versions)).
The maximum torque is 80 Nm. The thread can become loose if exposed to severe strain through pressure and temperature. For this reason, the air-tightness must be checked regularly and the thread tightened if necessary. We recommend using Teflon tape as an additional thread seal.
- When changing the adapter, make sure that the sensor tube of the sensor is not damaged.

6.1.2 Adapter versions

TTR 35: order numbers for clamp adapter versions.

Version DB: order no. 52023994

Version DL: order no. 52023995

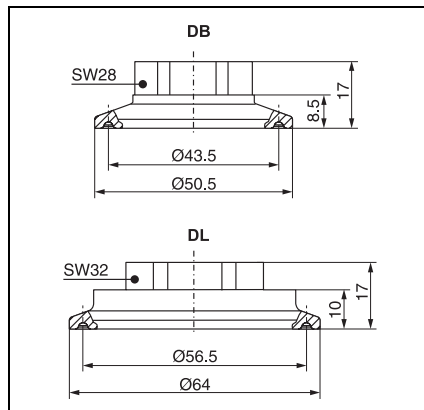

P01-PTx3xxxx-06-xx-xx-xx-009

TTR 35: order numbers for hygiene adapter versions.


Version LB: order no. 52023996

Version LL: order no. 52023997

Version PH: order no. 52023999

Version PL: order no. 52023998

Version HL: order no. 52024000

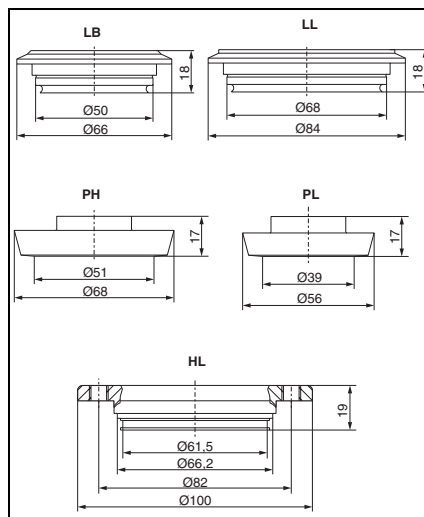

P01-PTx3xxxx-06-xx-xx-xx-010

6.2 Welding bosses and coupling


6.2.1 Welding boss with sealing taper

Collar welding boss

Seal, moveable coupling, material of parts in contact with process:

316L, PEEK

Order number: 51004751

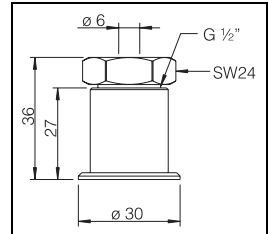


T09-TSM470AX-06-09-00-en-000

6.2.2 Collar welding boss

Material of parts in contact with process: 316L

Order no. 51004752

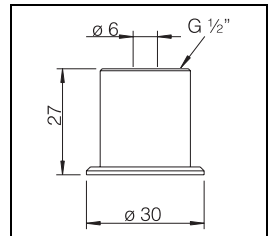


T09-TSM470BX-06-09-00-en-000

6.2.3 Coupling with sealing taper

G 1/2 inch process connection

Seal, moveable coupling, material of parts in contact with process: 316L

Order no. 51004753

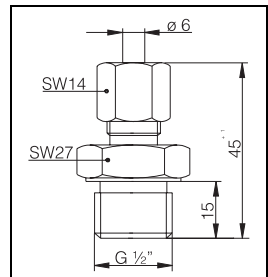

T09-TSM470AX-06-09-00-en-001

6.3 Electrical connection


6.3.1 Plug-in jack

M 12x1.5 plug-in jack

Self-made connection to

M 12x1.5 housing connector

Order number: 52006263

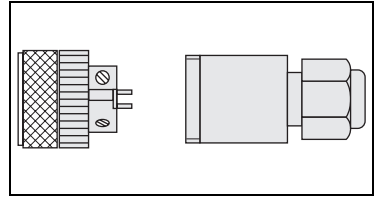


P01-PMP13xxx-00-xx-00-xx-003

6.3.2 Elbow plug

Elbow plug

4-pole M12 connector for customised cable construction, elbowed, IP67, PG7

Order number: 51006327

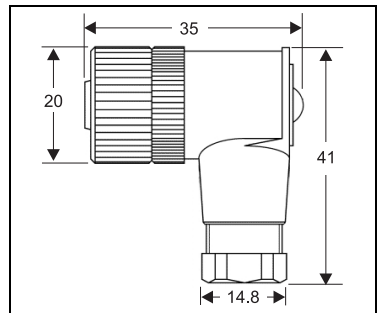

T09-TTR3xxx-06-09-xx-de-000

6.3.3 Connecting cable


- Cable, 4 x 0.34 mm² with M12 socket, elbowed, screw plug, length 5 m, sprayed PVC cable
Order number: 52010285
- Cable, 4 x 0.34 mm² with M12 socket, with LED, elbowed, 316 L screw plug, length 5 m, sprayed PVC cable, special for hygiene applications, order number: 52018763

Display:

- gn: device operational
- ye1: switch status 1
- ye2: switch status 2

Core colours:

- 1 = BN brown
- 2 = WH white
- 3 = BU blue
- 4 = BK black

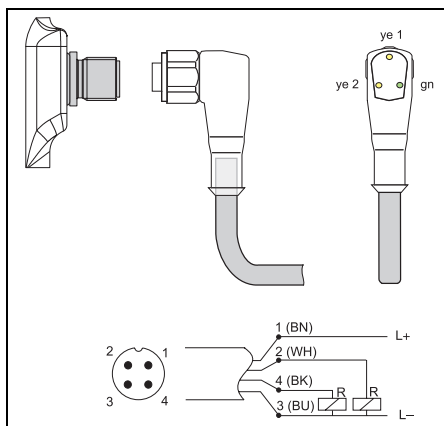


T09-TTR31xxx-00-00-xx-xx-001

6.4 Configuration kit

- Configuration kit for PC-programmable transmitters – ReadWin® 2000 setup program and interface cable for PCs with USB port; Adapter for transmitters with 4-pole post connector
Order code: TXU10-AA

- ReadWin® 2000 can be downloaded free of charge directly from the internet at the following address:

www.endress.com/readwin

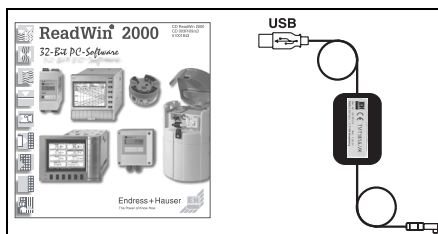

T09-TTR31xxx-00-00-xx-xx-000

7 Trouble-shooting

7. 1 Errors and warnings

If an error in the device occurs, the colour of the status LED changes from green to red and the background illumination of the digital display changes from white to red. The display shows:

- E-code for errors
In the event of an error message, the measured value is uncertain.
- W-code for warnings
In the event of a warning, the measured value is reliable.

Code	Explanation
E011	Device configuration faulty
E012	Error in measurement or underreach/overreach in SIL mode
E015	Error in EEPROM
E019	Power supply has undervoltage/overvoltage
E020	Error in Flash
E021	Error in RAM
E025	Switching contact 1 is not open although it should be
E026	Switching contact 2 is not open although it should be

Code	Explanation
W107	Simulation active
W202	Temperature outside the sensor range (not SIL mode)
W209	Device starts
W210	Configuration modified
W212	Sensor signal outside the permitted range (not SIL mode)

Code	Explanation
W250	Number of switch cycles exceeded
W270	Short-circuit and overload at output 1
W280	Short-circuit and overload at output 2

7.2 Spare parts

- O-ring for adapter change
 - O-ring 15.54 x 2.62 mm, EPDM 70 Shore FDA, order number 52024267
 - O-ring 15.54 x 2.62 mm, FKM 70 Shore FDA, order number 52024268

7.3 Repair

A repair is not planned.

7.4 Disposal

When disposing, ensure that the materials of the device components are separated and processed accordingly.

7.5 Change status (release)

The release number on the nameplate and in the Operating Instructions indicates the change status of the device: XX.YY.ZZ (example 01.02.01).

XX	Change in the main version. Compatibility no longer provided. Device and Operating Instructions change.
YY	Change in functionality and operation. Compatibility provided. Operating Instructions change.
ZZ	Trouble-shooting and internal modifications. Operating Instructions do not change.

7.6 Release history

Release no.	Device and software no.	Changes
01.00.00		

8 The most important technical data

8.1 Power supply

Supply voltage

- DC voltage version
12...30 V DC

Current consumption

- Without load < 60 mA, with reverse polarity protection

Power supply failure

- Behaviour in case of overvoltage (> 30 V)
The device works continuously up to 34 V DC without any damage. No damage is caused to the device in case of a short-term overvoltage up to 1 kV (as per EN 61000-4-5). If the supply voltage is exceeded, the properties specified are no longer guaranteed.
- Behaviour in case of undervoltage
If the supply voltage drops below the minimum value, the device switches off (status as if not supplied with power = switch open).

8.2 Output

Switching capacity

- Switch status ON: $I_a \leq 250$ mA
- Switch status OFF: $I_a \leq 1$ mA
- Switching cycles: > 10,000,000
- Voltage drop PNP: ≤ 2 V
- Overload protection

Automatic load testing of switching current; output is switched off in case of overcurrent, the switching current is tested again every 0.4 s; max. capacitance load: 14 μ F for max. supply voltage (without resistive load).

8.3 Operating conditions

- Any orientation

Operating conditions: Environment

- Ambient temperature range
-40...+85 °C
- Storage temperature
-40...+85 °C

Operating conditions: Process

- Process temperature limits
-50 to 150 °C




Caution!

Restrictions depending on process connection and ambient temperature:

- No restriction with coupling (see Accessories, → Chap. 6.2.1, → Chap. 6.2.3, order no. **51004751**, **51004753**) and neck tube length min. 20 mm.
- with process connection:

max. ambient temperature	max. process temperature
up to 25 °C	no restriction
up to 40 °C	135 °C
up to 60 °C	120 °C
up to 85 °C	100 °C

- Process pressure limits
p/T load diagram as per DIN 43763 or Dittrich

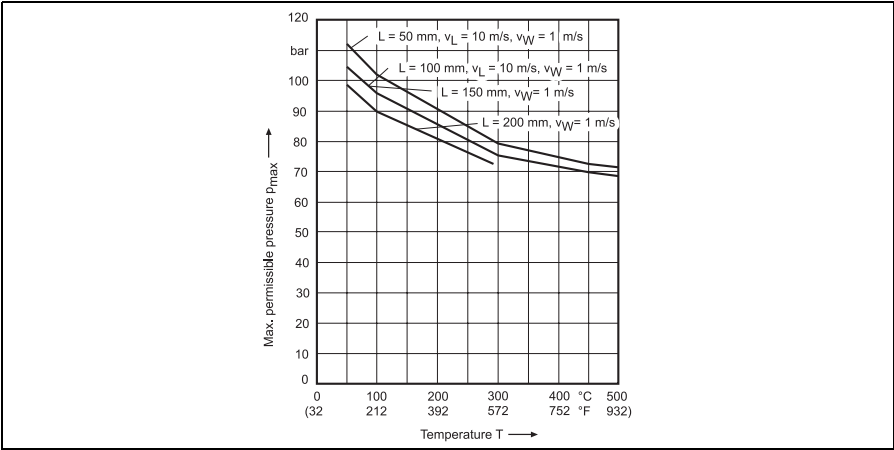

T09-TSM470ZZ-05-00-xx-en-000

Fig. 13: p/T load diagram

L = insertion length

v_L = medium velocity air

v_W = medium velocity water









9 Dangerous good sheet

Declaration of contamination

Dear customer,
Because of legal determinations and for the safety of our employees and operating equipment, we need this "Declaration of contamination" with your signature before your order can be handled. Please, include the completely filled in declaration with the device and the shipping documents in any case. Add also safety sheets and / or specific handling instructions if necessary.

Type of device / sensor:	_____	Serial no.:	_____
Medium / concentration:	_____	Temperature:	_____ Pressure: _____
Cleaned with:	_____	Conductivity:	_____ Viscosity: _____

Warning hints for medium used (mark the appropriate hints)

							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
radioactive	explosive	caustic	poisonous	harmful to health	biologically hazardous	inflammable	safe

Reason for return

Company data

Company:	_____	Contact person:	_____
	_____		_____
	_____	Department:	_____
Address:	_____	Phone:	_____
	_____	Fax / e-mail:	_____
	_____	Your order no.:	_____

I hereby certify that the returned equipment has been cleaned and decontaminated acc. to good industrial practices and is in compliance with all regulations. This equipment poses no health or safety risks due to contamination.

(Place, date)

(Company stamp and legally binding signature)

More information about services and repairs:
www.services.endress.com

Endress+Hauser 
People for Process Automation

www.endress.com/worldwide

Endress+Hauser 
People for Process Automation