



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services



Solutions

Operating Instructions

Cleanfit P CPA471

Retractable process assembly

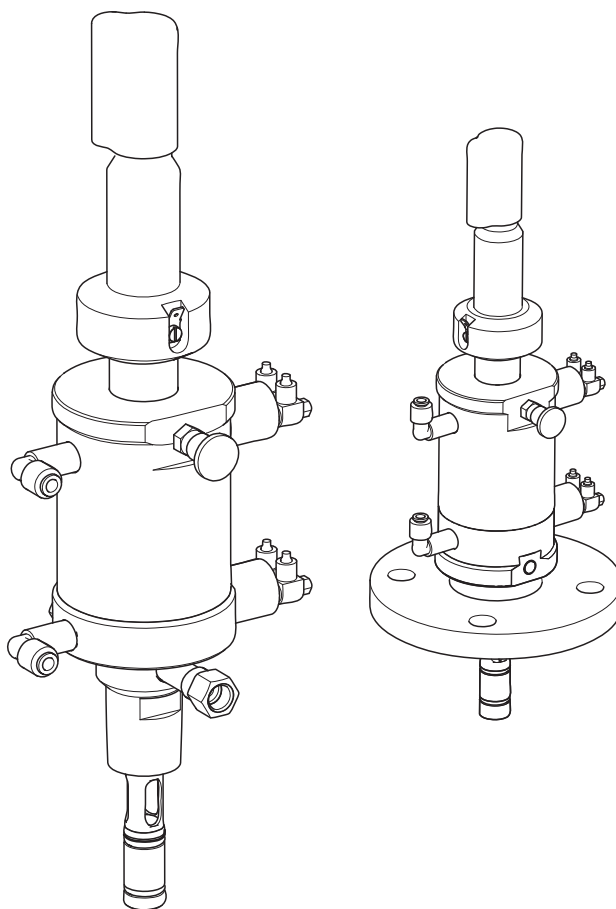


Table of contents

1	Safety instructions	4
1.1	Designated use	4
1.2	Installation, commissioning and operation	4
1.3	Operational safety	4
1.4	Notes on safety icons and symbols	5
2	Identification	6
2.1	Nameplate	6
2.2	Order code and device version	6
2.3	Scope of delivery	6
3	Installation	7
3.1	Incoming acceptance, transport, storage	7
3.2	Installation conditions	7
3.3	Installation instructions	12
3.4	Sensor installation	16
3.5	Post-installation check	18
4	Operation	19
4.1	First commissioning	19
4.2	Operating elements	19
4.3	Manual operation	20
4.4	Pneumatic operation	20
5	Maintenance	21
5.1	Cleaning the assembly	21
5.2	Cleaning the sensor	21
5.3	Cleaning agents	22
5.4	Replacing seals	22
6	Accessories	25
6.1	Installation accessories	25
6.2	Limit position switches	26
6.3	Sensors	26
7	Trouble-shooting	28
7.1	Replacing damaged parts	28
7.2	Spare part kits	29
7.3	Return	32
7.4	Disposal	32
8	Technical data	33
8.1	Environment	33
8.2	Process	33
8.3	Mechanical construction	34
	Index	35

1 Safety instructions

1.1 Designated use

The manually or pneumatically operated retractable assembly Cleanfit P CPA471 is designed for installing pH/ORP sensors in tanks and pipes.

Its mechanical design permits its use in pressurized systems (see "Technical data").

Any other use than the one described here compromises the safety of persons and the entire measuring system and is not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

1.2 Installation, commissioning and operation

Please note the following items:

- Installation, commissioning, operation and maintenance of the measuring system must only be carried out by trained technical personnel.
Trained personnel must be authorized for the specified activities by the system operator.
- Electrical connection must only be carried out by a certified electrician.
- Technical personnel must have read and understood these Operating Instructions and must adhere to them.
- Before commissioning the entire measuring point, check all the connections. Ensure that electrical cables and hose connections are not damaged.
- Do not operate damaged products and secure them against unintentional commissioning.
Mark the damaged product as being defective.
- Measuring point faults may only be rectified by authorized and specially trained personnel.
- If faults can not be rectified, the products must be taken out of service and secured against unintentional commissioning.
- Repairs not described in these Operating Instructions may only be carried out at the manufacturer's or by the service organization.

1.3 Operational safety

The assembly has been designed and tested in accordance with the latest industry standards and left the factory in perfect functioning order.

Relevant regulations and standards have been met.

As the user, you are responsible for complying with the following safety conditions:

- Installation instructions
- Local prevailing standards and regulations.

1.4 Notes on safety icons and symbols

The structure, signal words and safety colors of the signs comply with the specifications of ANSI Z535.6 ("Product safety information in product manuals, instructions and other collateral materials").

Safety message structure	Meaning
⚠ DANGER Cause (/consequences) Consequences if safety message is not heeded <ul style="list-style-type: none"> ■ Corrective action 	This symbol alerts you to a dangerous situation. Failure to avoid the situation will result in a fatal or serious injury.
⚠ WARNING Cause (/consequences) Consequences if safety message is not heeded <ul style="list-style-type: none"> ■ Corrective action 	This symbol alerts you to a dangerous situation. Failure to avoid the situation can result in a fatal or serious injury.
⚠ CAUTION Cause (/consequences) Consequences if safety message is not heeded <ul style="list-style-type: none"> ■ Corrective action 	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE Cause/situation Consequences if safety message is not heeded <ul style="list-style-type: none"> ■ Action/note 	This symbol alerts you to situations that can result in damage to property and equipment.

2 Identification

2.1 Nameplate

The nameplate contains the following information:

- Manufacturer data
- Order code
- Extended order code
- Serial number
- Operating conditions
- Safety icons

Compare the order code on the nameplate with your order.

2.2 Order code and device version

Enter the following address in your browser to access the product page:

www.products.endress.com/cpa471

1. You can choose from the following options on the product page located on the right:

Product page function
:: Add to product list
:: Price & order information
:: Compare this product
:: Configure this product

2. Click "Configure this product".
3. The configurator opens in a separate window. You can now configure your device and receive the complete order code that applies for the device.
4. Afterwards, export the order code as a PDF or Excel file. To do so, click the appropriate button at the top of the page.

2.3 Scope of delivery

The scope of delivery comprises:

- Cleanfit assembly (ordered version)
- Operating Instructions (English)

If you have any questions, please contact your supplier or your local sales center.

3 Installation


3.1 Incoming acceptance, transport, storage

- Make sure the packaging is undamaged!
- Inform the supplier about any damage to the packaging.
Keep the damaged packaging until the matter has been settled.
- Make sure the contents are undamaged!
- Inform the supplier about damage to the contents. Keep the damaged products until the matter has been settled.
- Check that the order is complete and agrees with your shipping documents.
- The packaging material used to store or to transport the product must provide shock protection and humidity protection. The original packaging offers the best protection. Also, keep to the approved ambient conditions (see "Technical data").
- If you have any questions, please contact your supplier or your local sales center.

3.2 Installation conditions

3.2.1 Notes on installation

The assembly is designed for installation on tanks and pipes. Suitable nozzles must be available for this.

i When using standard glass sensors, only installation positions are permitted in which the middle axis of the assembly lies at an angle greater than 15° from the horizontal (\rightarrow  1). Otherwise, there will not be a reliable contact between the inner side of the pH membrane and the inner terminal leads via the electrolytes. Limited permissible angle of the installation position is above 75° from the horizontal, air bubbles can accumulate in the chamber.

When using an ISFET Tophit sensor, there are, in principle, no restrictions for the installation position. An installation angle of 0 to 75° is, however, recommended. An overhead installation is possible.

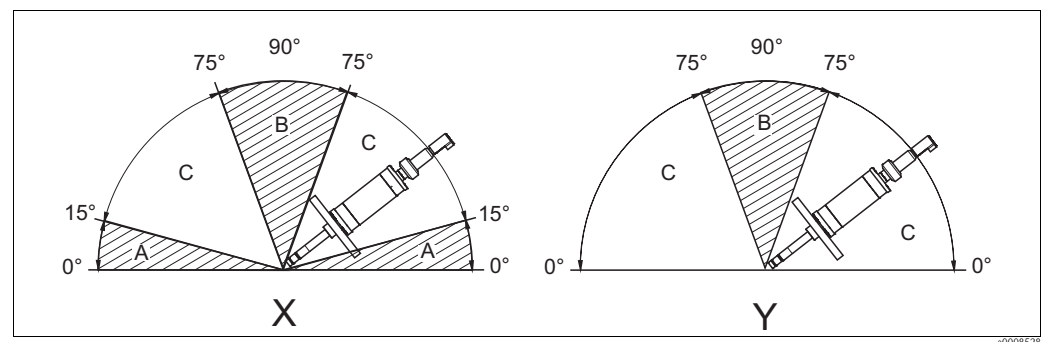


Fig. 1: Installation angles for glass sensors (X) and ISFET sensors (Y)

- A Inadmissible installation angle
- B Limited permissible angle (air bubbles can build up in the chamber)
- C Recommended installation angle

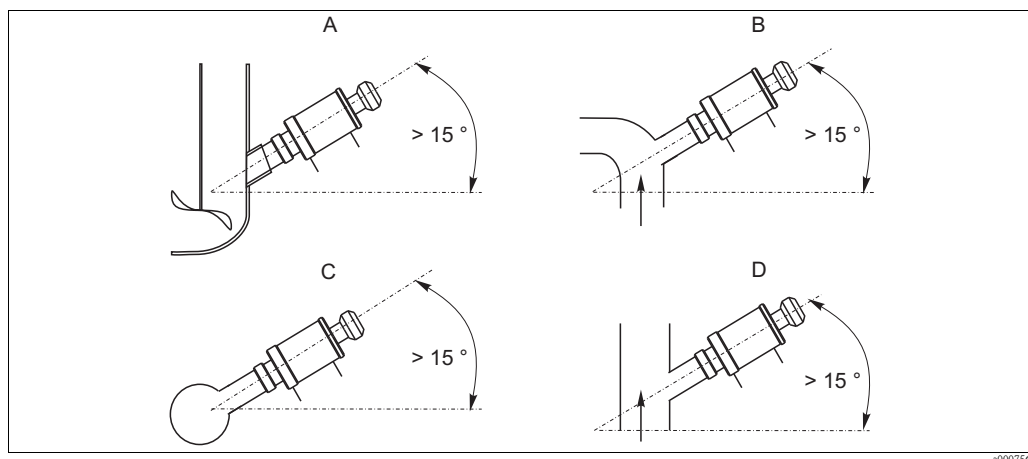


Fig. 2: Installation examples with recommended installation angle (glass electrodes)

- A Tank
- B Pipe bend
- C Horizontal pipe
- D Ascending pipe

NOTICE

Wrong connection affects process safety

- For all assemblies with stainless steel pressure cylinders, we recommend to use a flanged version when installing with inclined orientation. Otherwise, the weight of the assembly could affect the safety of the process connection.
 - Avoid a siphon effect¹⁾ at the rinse chamber outlet when installing with inclined orientation. The inlet to the rinse chamber must be from below.
- i** The minimum diameter for direct installation in pipework is DN 80. This diameter is required so that the assembly has sufficient distance from the pipe wall when brought into the "Measuring" position.
- Use a flow assembly to install the assembly in smaller pipe diameters (see Accessories).
- When designing the installation nozzle, please observe the total immersion depth in operation (sensor holder not inserted). Ensure that the sensor is always immersed in the medium during operation (see "Dimensions").

1) Siphon effect: line emptied by vacuum

3.2.2 Dimensions

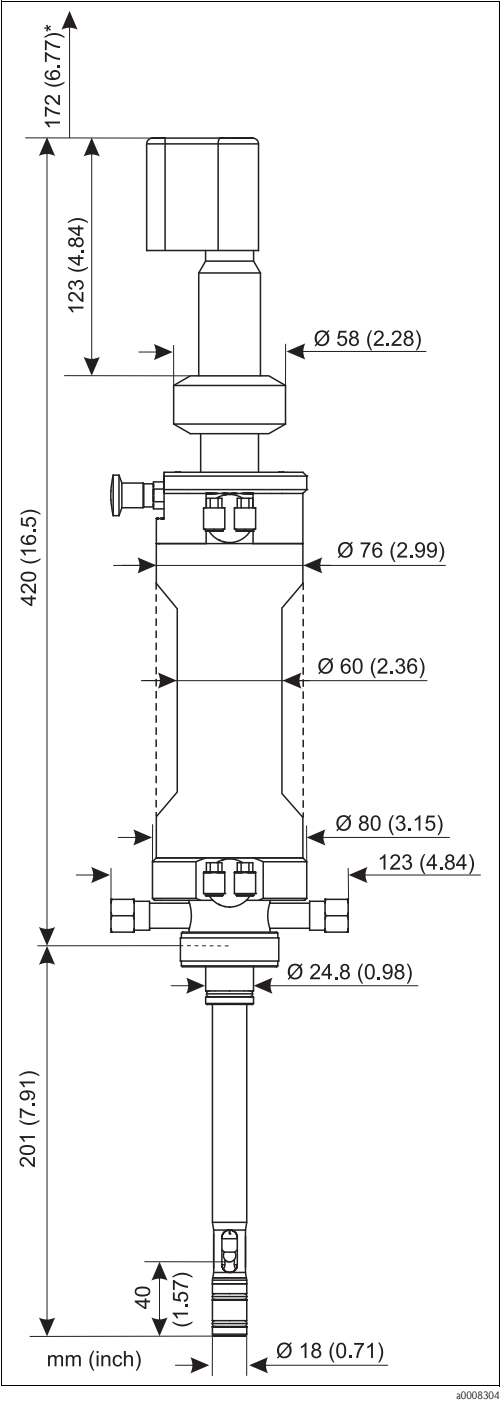


Fig. 3: Long version for gel sensors

* Stroke

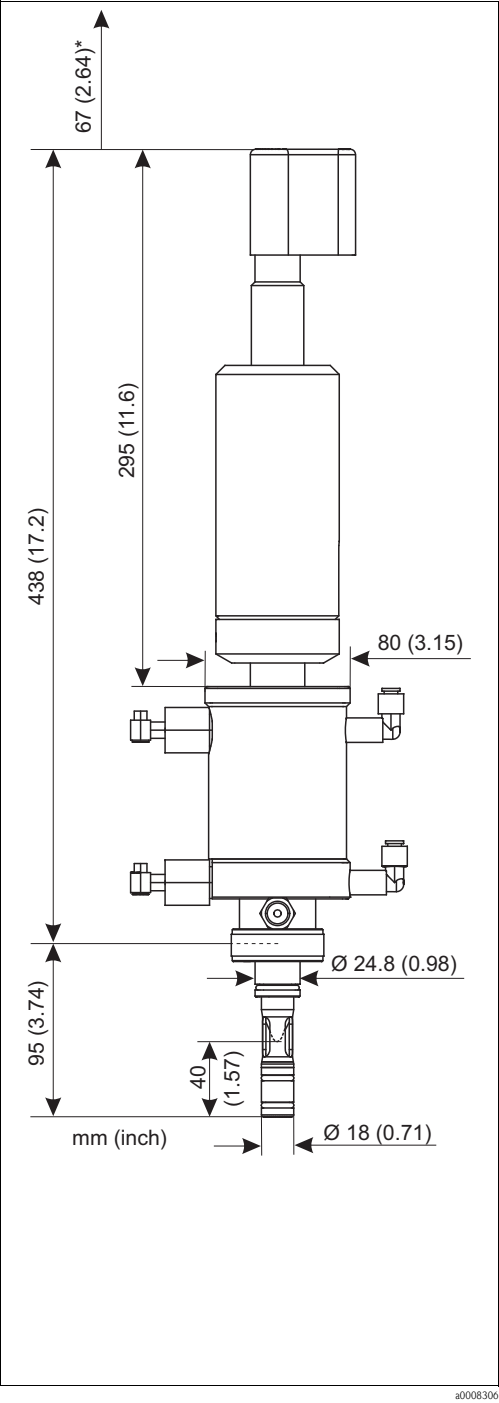


Fig. 4: Short version for KCl sensors

* Stroke

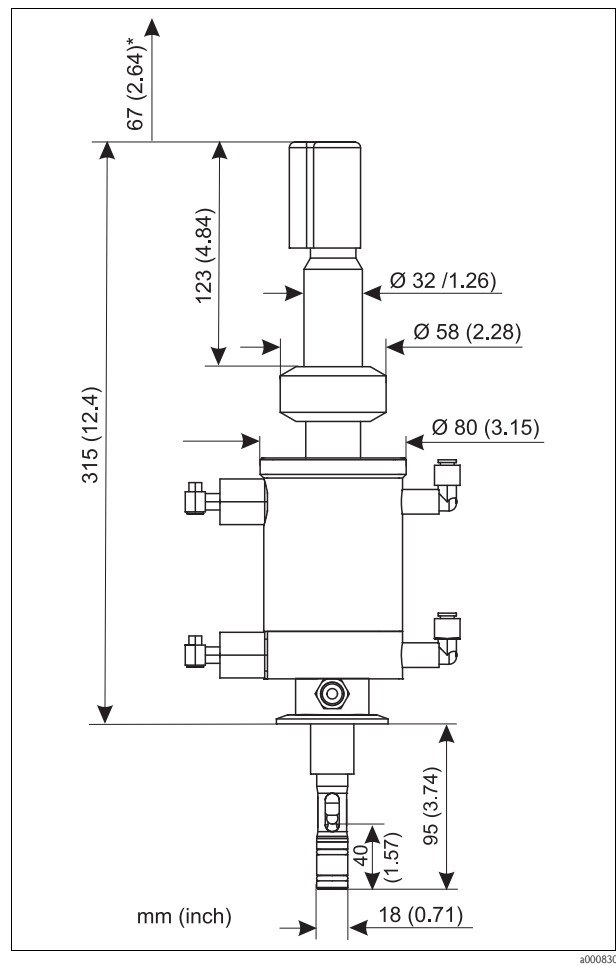


Fig. 5: Short version for gel sensors

* Stroke

- i** The short version with flange DN 50 is suitable for compact block flanges only. Flanges with nozzle require the long version.
Use liquid KCl electrodes with the short version only!

3.2.3 Process connections

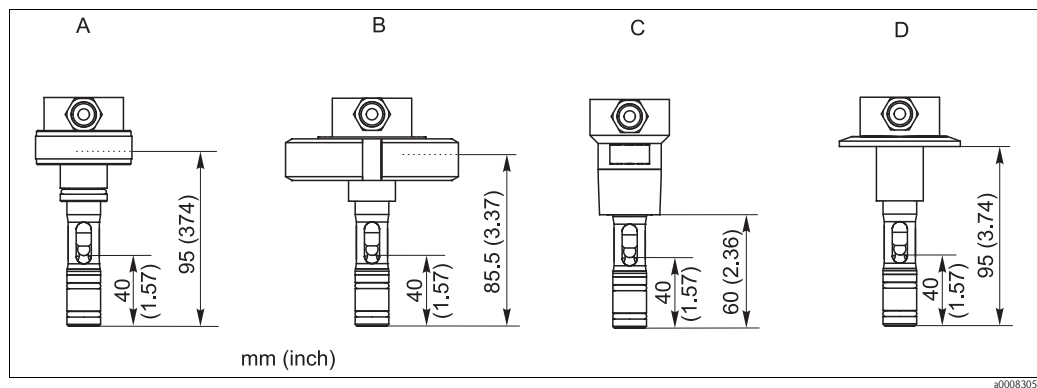


Fig. 6: Process connections (short version)

- A G1¼ internal thread with union nut
B DN 50 dairy fitting
C NPT 1" external thread
D Triclamp 2"

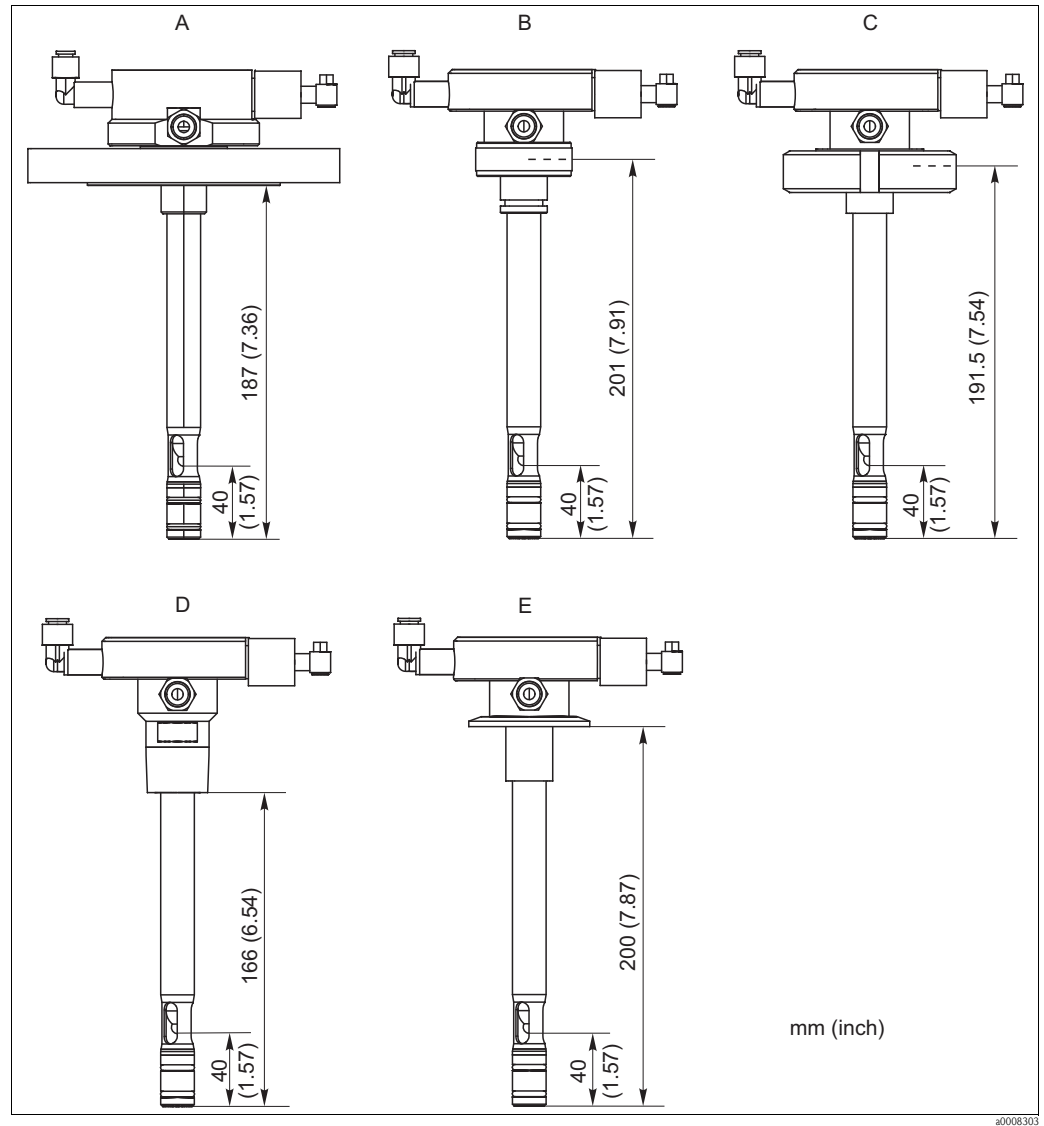


Fig. 7: Process connections (long version)

- A DN 50 flange
- B G1 1/4 internal thread with union nut
- C DN 50 dairy fitting
- D NPT 1" external thread
- E Triclamp 2"

3.3 Installation instructions

3.3.1 Measuring system

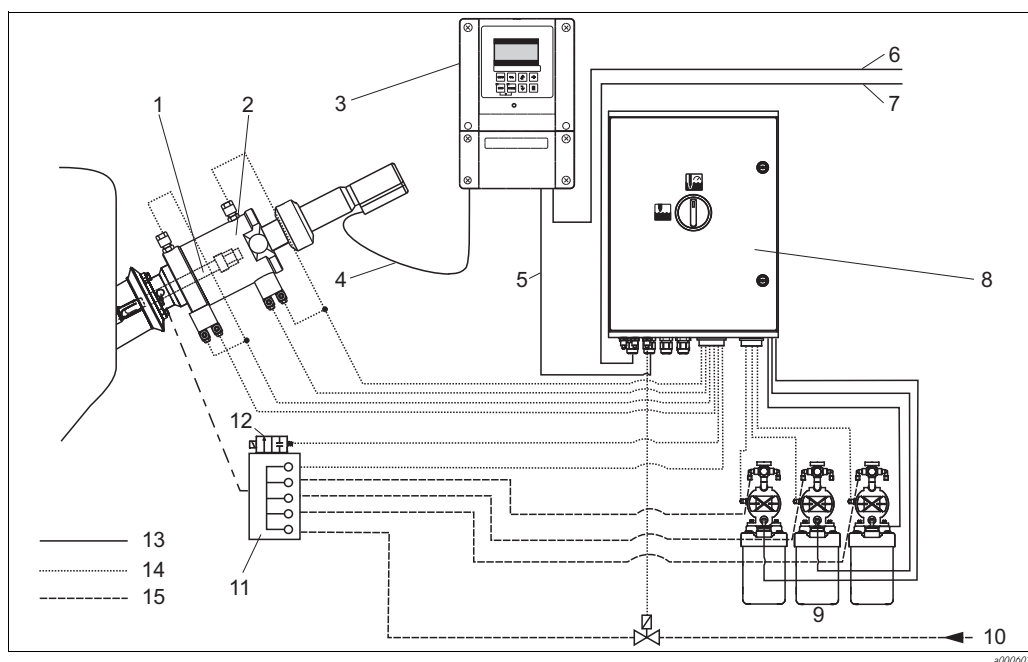


Fig. 8: Measuring system with pneumatic control

- | | | | |
|---|------------------------------------|----|---|
| 1 | pH/ORP sensor | 9 | Canisters for cleaning and buffer solutions |
| 2 | Assembly Cleanfit | 10 | Superheated steam/water/cleaning solutions (optional) |
| 3 | Transmitter Mycom CPM153 | 11 | Rinse block |
| 4 | Special measuring cable | 12 | Rinse water valve |
| 5 | Communication / power supply cable | 13 | Power/signal cables |
| 6 | Power supply Mycom | 14 | Air hoses |
| 7 | Power supply CPG310 | 15 | Media |
| 8 | Control unit CPG310 | | |

3.3.2 Installing the assembly into the process

⚠ WARNING

Risk of injury if medium escapes!

- Never insert the assembly into measuring position if no sensor is installed. Medium could leak out.
- i** Depending on the process connection, please observe the following:
Check the flange seal between the flanges before installing the assembly.
The thread adapter nut of thread G 1 1/4 does not function as a seal. Therefore, simply tighten the thread adapter nut by hand.

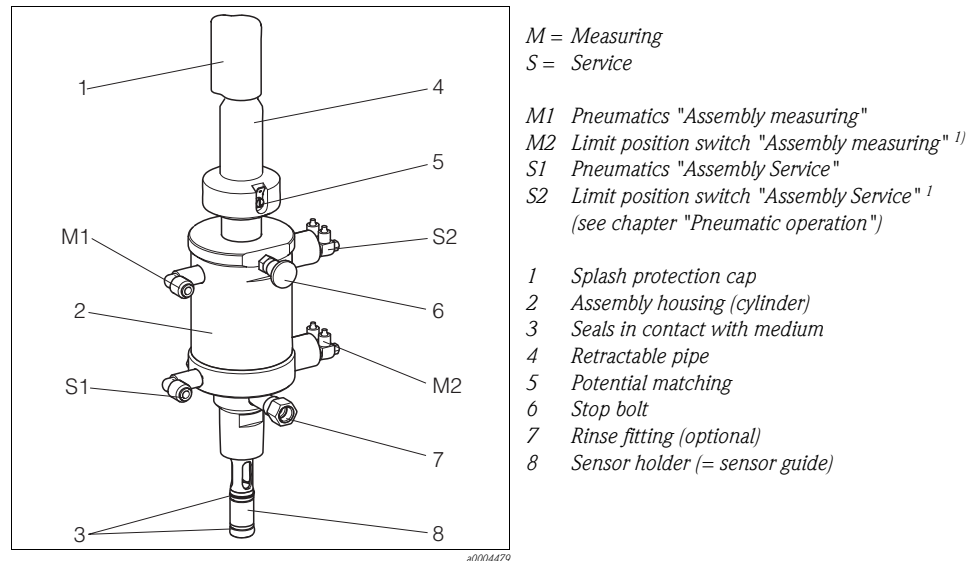


Fig. 9: Operating elements

- 1) pneumatic or electric limit position switch depending on assembly version (see product structure)
1. Move the assembly into the "Service" position (electrode holder inserted in the assembly).
2. Secure the assembly to the tank or the piping using your selected process connection.
3. Follow the instructions for compressed air and rinse water connection (if used) given in the following chapters.

3.3.3 Compressed air connection²⁾

Prerequisites:

- Air pressure from 4 to 6 bar (58 to 87 psi)
- The air must be filtered (40 µm), and free of oil and water
- No continuous air consumption
- Minimum nominal diameter of air ducts: 4 mm (0.16 ")

Connection thread: 2 x G 1/8

⚠ CAUTION


If the air pressure can exceed 6 bar or 87 psi (even transient pressure surges), the assembly can leak, putting the user at risk of injury.

- Install a pressure-reducing valve upstream of the assembly.
- We recommend you also use a pneumatic throttle for lower pressures. This results in smoother assembly operation. Such a throttle is available as an accessory (see "Accessories" section).

2) pneumatically operated assembly only

Limit position switches

- Pneumatic: 3/2 way valve; thread M 12 x 1;
connection for hoses with OD = 6 mm (0.24")
- Electric: inductive (NAMUR type); cable length: 10 m (32.8 ft);
housing material: stainless steel; thread M 12 x 1;
nominal voltage: 8 V
ⓈII 1G EEx ia IIC T6; switching distance: 2 mm, flush

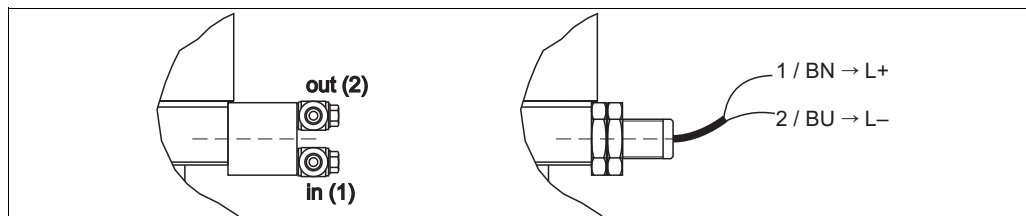


a0002727

Fig. 10: Limit position switches, left: pneumatic (1 = compressed air inlet, 2 = compressed air outlet)
right: electric (NAMUR)

- i** The position of the input resp. the output may be different from the figure. Please, refer to the marks at the limit position switch: "1" is the input (in), "2" is the output (out).

Pneumatics and limit position switch connection

Following, you find the connection of the compressed air lines to the assembly. The compressed air supply and the tapping of the position feedback signals are described for Topcal S CPC310 resp. Topclean S CPC30 as an example.

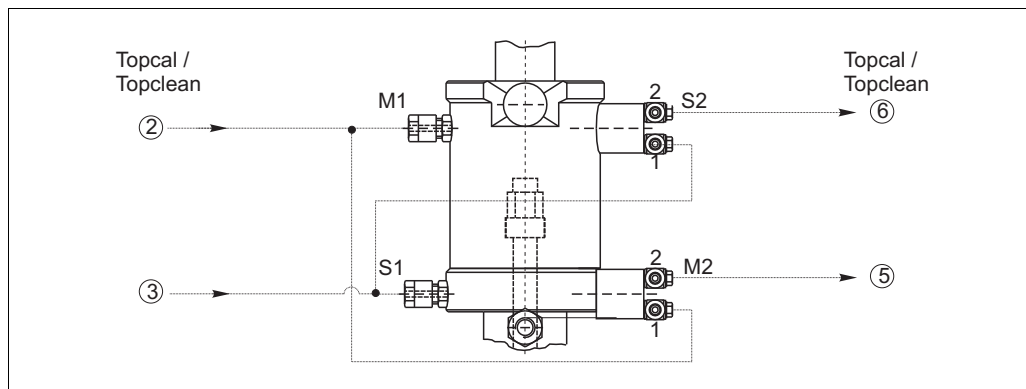

a0004480

Fig. 11: Pneumatic connections and pneumatic limit position switches (1=inlet, 2=outlet)

- M1 Pneumatics "Assembly measuring"
M2 Position feedback signal "Assembly measuring"
S1 Pneumatics "Assembly service"
S2 Position feedback signal "Assembly service"
② Topcal/Topclean: hose no. 2
③ Topcal/Topclean: hose no. 3
⑤ Topcal/Topclean: hose no. 5
⑥ Topcal/Topclean: hose no. 6

The pneumatic limit position switches serve as control elements and determine the sequence of the individual steps.

1. Connect the compressed air supply line for "Assembly measuring" (Topcal/Topclean: hose no. ②) to the upper G 1/8 pneumatics connection (Fig. 11).
2. Also, connect the compressed air supply line no. ② to the inlet (1) of the lower limit position switch (M2, via T-piece). This limit position switch supplies the position feedback signal "Assembly measuring".

3. When the "Measuring" position is reached, the air applied to the inlet M2 (1) is switched through and can be tapped at the outlet M2 (2) (Topcal/ Topclean: connect hose ⑤ to the limit position switch outlet).
4. Connect the compressed air supply line for "Assembly service" (Topcal/Topclean: hose no. ③) to the lower G 1/8 pneumatics connection.
5. Also, connect the compressed air supply line no. ③ to the inlet (1) of the upper limit position switch (S2, via T-piece). This limit position switch supplies the position feedback signal "Assembly service".
6. When the position "Service" is reached, the air applied to the inlet S2 (1) is switched through and can be tapped at the outlet S2 (2) (Topcal/ Topclean: hose no. ⑥).

Electric limit position switch connection

Like the pneumatic limit position switches, the electric limit position switches also serve as control elements and determine the sequence of the individual steps.

Connect the NAMUR limit position switches to the corresponding terminals at the transmitter.

Please, refer to the Operating Instructions of the transmitter for the terminal numbers. The following figure shows the electric limit position switch connection to the terminals 11 to 14 of the Topcal S control unit, as an example.

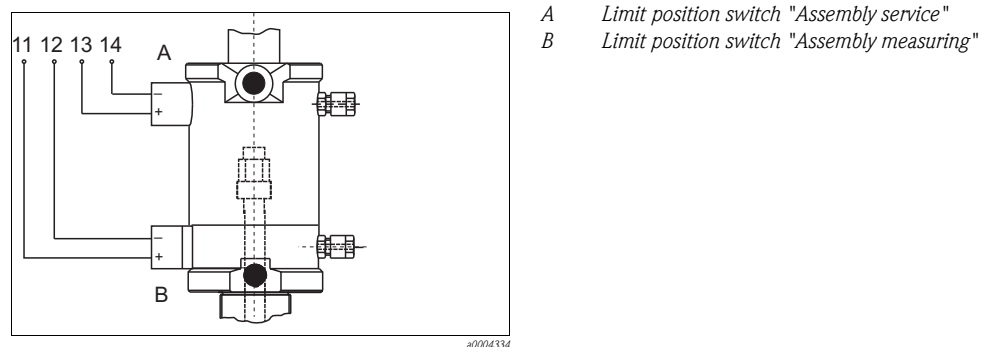


Abb. 12: Electric limit position switches to Topcal

3.3.4 Rinse water connection

1. Connect the rinse water pipe to the designated rinse nozzle. Both rinse nozzles on the assembly are identical. Use one as an inlet and the other as an outlet.
2. Operate the rinse water connection of the assembly with a water pressure of 2 to max. 6 bar (29 to 87 psi).
3. In addition, install a non-return valve and a dirt trap (100 µm) in the water supply line (at the inlet to the assembly).

Besides water, other or additional cleaning solutions may be used in the rinse chamber. Pay attention to the material resistance of the assembly and comply with the maximum permitted temperatures and pressures.

NOTICE



Water pressure too high


The assembly could be damaged.

- If it is possible for the water pressure to rise above 6 bar (87 psi, including any transient pressure surges), install a pressure reducing valve upstream. Otherwise the assembly may be damaged.

3.4 Sensor installation

3.4.1 Preparing sensor and assembly


1. Remove the protection cap from the sensor. Make sure the sensor shaft is fitted with the O-ring and the thrust collar (→  13).
2. Moisten the sensor shaft before installing the sensor.
3. Depending on the assembly version:
 - a. *Manually driven assembly:*
Pull the retractable pipe as far as possible out of the assembly.
 - b. *Pneumatically driven assembly:*
Move the assembly into the "Service" position.
4. Turn the stop lock bolt through 90° so that the plastic grooves are located above the recesses (→  14, A).
5. Turn the retractable pipe **clockwise** until the stop lock bolt engages (B).
6. Vent the rinse chamber.

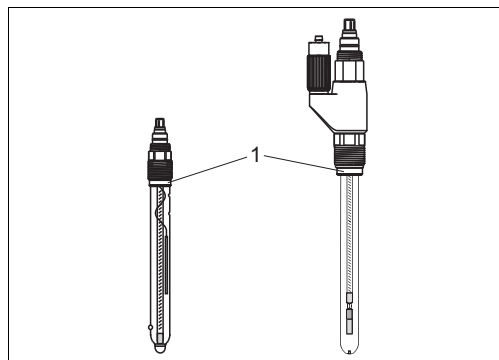

a0006214

Fig. 13: Sensor installation

1 Thrust collar and O-ring

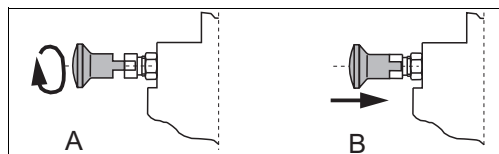

a0002738


Fig. 14: Stop bolt

NOTICE

Malfunction due to counter clockwise rotation

- If turned in the opposite direction, the stop lock bolt does engage, too. This could, however, loosen the sensor holder. The reason for this are adhesions on the lower part of the sensor holder. These can cause the sensor holder to get stuck, producing a counterforce when unscrewing the sensor holder.

3.4.2 Gel sensor installation

1. Remove the splash protection cap (→  15, pos. 5) from the assembly.
2. Then loosen the retractable pipe (pos. 2) by turning it anticlockwise.
3. Install the sensor (pos. 7) instead of the dummy plug (pos. 3):
 - first screw by hand
 - then tighten the sensor by approx. ¼ turn using an open end wrench (AF 17).
4. Insert the measuring cable through the retractable pipe (pos. 2):
 - Fixed cable: from the bottom through the retractable pipe, from the sensor to the transmitter
 - Plug-in head sensor: from the top to the sensor head
5. *Plug-in head sensor only:*
Connect sensor and cable.
6. Screw the retractable pipe back onto the pressure cylinder (clockwise, by hand).
7. Place the measuring cable in the splash protection cap and place the cap on the retractable pipe.
8. Unlock the stop lock bolt (pos. 4).

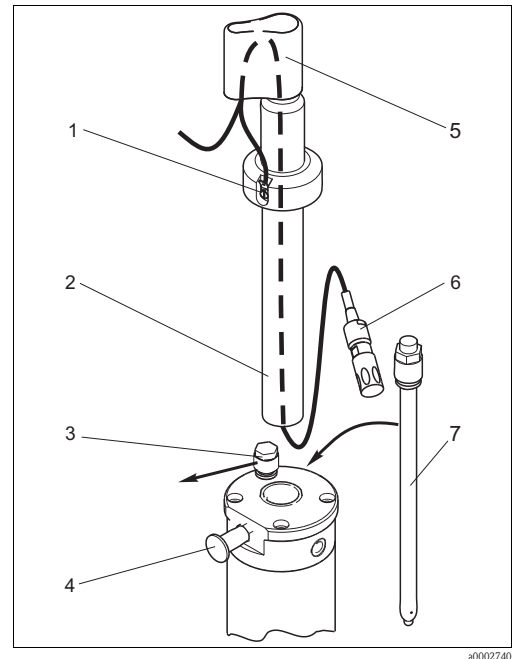



Fig. 15: Sensor installation

- | | |
|---|---------------------------------|
| 1 | PML connection |
| 2 | Retractable pipe |
| 3 | Dummy plug |
| 4 | Stop lock bolt |
| 5 | Splash protection cap |
| 6 | Measuring cable with cable plug |
| 7 | Sensor or electrode |

Remove the sensor in the reverse sequence of operations.

-  In case of symmetrical pH measurement, you must push the PML connector onto the PML connection (PML = potential matching line, position 1). Please, read the Operating Instructions of the transmitter.

3.4.3 Sensor with liquid KCl electrolyte

1. Verify that the assembly is in the service position and the stop lock bolt is engaged.
2. Remove the splash protection cap (→ 16, pos. 6) and the KCl hood (pos. 7).
 ⓘ From version 11/2010 on the retractable pipe stays in the cylinder head.
3. Screw in the sensor directly into the inner thread of the retractable pipe:
 - first screw by hand
 - then tighten the sensor by approx. ¼ turn using an open end wrench (AF 17).
4. Insert the measuring cable through the protective tube and the KCl hood:
 - Fixed cable: from the sensor upwards to the transmitter
 - Sensor with plug-in head: from the top through the KCl hood to the sensor
 - In case of symmetrical pH measurement, you must push the PML connector onto the PML connection (PML = potential matching line, pos. 3).
5. *Plug-in head sensor only:* Connect sensor and cable.
6. Connect the electrolyte supply tube (pos. 1) to the electrolyte connection of the sensor.
7. Affix the supplied tubing support (pos. 9) to the electrolyte supply tube directly above the electrolyte connection.
8. Attach the KCl hood to the retractable pipe. Guide the electrolyte supply tube through the lateral slot of the hood.
9. Place the measuring cable in the splash protection cap and place the cap on the KCl hood.
10. Unlock the stop lock bolt (pos. 5).

Remove the sensor in the reverse sequence of operations.

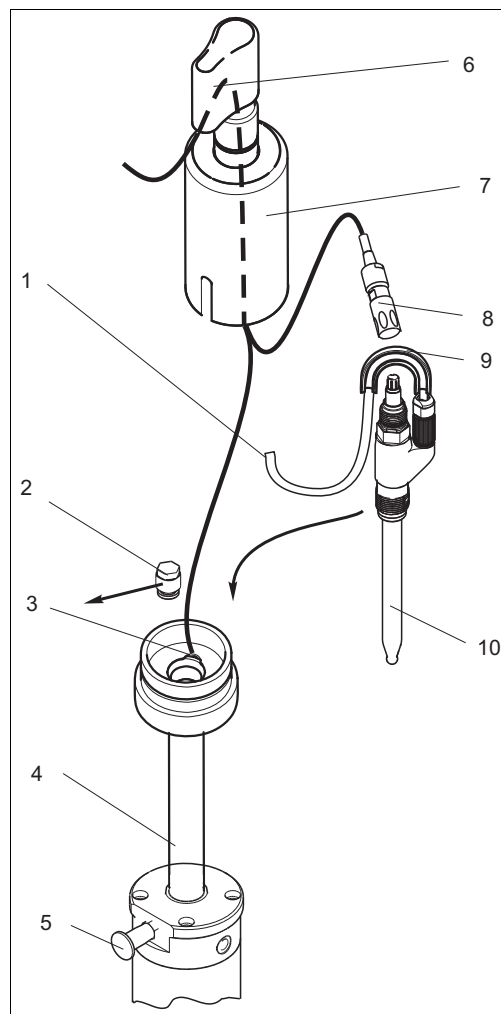


Fig. 16: Liquid KCl electrolyte sensor installation

- | | |
|----|-----------------------------------|
| 1 | Liquid KCl supply tube |
| 2 | Dummy plug |
| 3 | PML connection |
| 4 | Retractable pipe |
| 5 | Stop lock bolt |
| 6 | Splash protection cap |
| 7 | KCl hood |
| 8 | Plug-in head cable |
| 9 | Tubing support |
| 10 | Sensor with liquid KCl connection |

3.5 Post-installation check

- After installation, check that all connections are firmly in position and leak-tight.
- Ensure that the hoses cannot be removed without force.
- Check all hoses for damage.

4 Operation

4.1 First commissioning

Before the first commissioning, make sure of the following items:



- All seals are correctly seated (on the assembly and process connection).
- The sensor is correctly installed and connected.
- The water supply line is correctly connected to the rinse connections (if fitted).
- The limit position switches (according to assembly version) are correctly connected.

⚠ WARNING

Risk of injury if medium escapes!

- Make sure the connections are correctly fitted with either rinsing hoses or dummy plugs before applying compressed air to the pneumatic assembly. Otherwise the assembly may **not** be put into the process!

4.2 Operating elements

Use the stop lock bolt to lock or release the retractable pipe (→  17, →  18).

When using manually operated assemblies, the retractable pipe can be locked in both, the "Measuring" position and the "Service" position. When using pneumatically operated assemblies, this can only be done in the "Service" position.

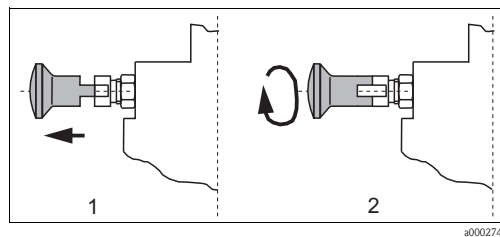


Fig. 17: Releasing the stop lock bolt

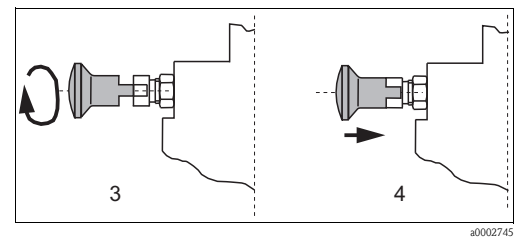


Fig. 18: Locking the stop lock bolt

Releasing the stop lock bolt:

1. Pull the bolt out.
2. Turn the bolt by 90° so that the plastic grooves rest on the metal edge.

Locking the stop lock bolt:

3. Turn the stop lock bolt through 90° so that the plastic grooves are located above the recesses.
4. When the retractable pipe is turned clockwise, the bolt engages.

4.3 Manual operation

Moving the assembly from the "Service" position to the "Measuring" position

1. Release the stop lock bolt catch.
2. Push the retractable pipe so that the sensor holder is inserted fully into the process.
3. Lock the sensor holder with the stop lock bolt. This prevents the retractable pipe from returning inadvertently into the "Service" position.

WARNING

Uncontrolled movement of the retractable pipe

Risk of injury


- Always lock the sensor holder. Otherwise, the retractable pipe may exit uncontrolled as a result of the process pressure and injure somebody.

Moving the assembly from the "Measuring" position to the "Service" position

1. Release the stop lock bolt catch.
2. Pull the retractable pipe out as far as possible ("Service" position).
3. Lock the sensor holder with the stop lock bolt.
4. Complete the necessary service tasks.

4.4 Pneumatic operation

Operation of the pneumatic version depends on the used control unit. Refer to the operating manual of the control unit for instructions.

-  During maintenance work (e.g. installing and removing the sensor), always lock the assembly in the "Service" position by the stop lock bolt.
During the automatic rinse process, do not lock the retractable pipe by the stop lock bolt. Otherwise the assembly can no longer move automatically to the "Measuring" position.
If a maintenance switch is fitted on the transmitter, set it to "Maintenance" or "Service".
It is not possible to lock the assembly in the **"Measuring"** position. The pneumatic system maintains the back pressure to the process pressure.

5 Maintenance

WARNING

Risk of injury if medium escapes!

- Prior to performing any maintenance task, make sure that the process pipe is unpressurized, empty and rinsed.

Move the assembly to the "Service" position and lock the retractable pipe by the stop lock bolt.


5.1 Cleaning the assembly

To ensure a reliable measurement, the assembly and the sensor must be cleaned at regular intervals. The frequency and intensity of the cleaning operation depend on the process medium.

5.1.1 Manually operated assembly

All parts in contact with the medium, e.g. the sensor and the sensor holder, must be cleaned at regular intervals. Remove the sensor³⁾.

- Remove light dirt using suitable cleaning agents (see chapter "Cleaning agents").
- Remove severe fouling with a soft brush and a suitable cleaning agent.
- Remove persistent fouling by soaking in a liquid cleaner and if necessary by cleaning with a soft brush.

 A typical cleaning interval for e.g. drinking water is at least half a year.

5.1.2 Pneumatically operated assembly

Pneumatically-controlled cleaning can be carried out regularly via the rinse connection and the corresponding equipment, e.g. with the fully automatic cleaning and calibration system Topcal S CPC310.

5.2 Cleaning the sensor

You have to clean the sensor:

- before every calibration
- regularly during operation
- before being returned to the supplier

You can remove and clean the sensor manually or perform an automatic cleaning operation⁴⁾ via the rinse connection.

NOTICE

Incorrect measurement or damage of the sensor due to inaccurate cleaning

- Clean ORP electrodes only mechanically and with water, do not use any chemical cleaning agents. These cleaning agents apply a potential to the electrode that takes several hours to decay. This potential causes measuring errors.
- Do not use any abrasive cleaning agents. This can lead to irreparable damage of the sensor.
- After cleaning the sensor, rinse the rinse chamber of the assembly with copious amounts of water (possibly distilled or de-ionized). Otherwise, remaining residues of cleaning agent can corrupt measurement.
- If required, re-calibrate after cleaning.

3) in reverse sequence of operations to the installation procedure

4) with the corresponding assembly equipment only

5.3 Cleaning agents

The selection of the cleaning agent is dependent on the degree and type of contamination. The most common contaminations and the suitable cleaning agents are listed in the following table.

Type of contamination	Cleaning agent
Greases and oils	Hot water or tempered substances containing tensides (alkaline) ¹⁾ or water-soluble organic solvents (e.g. ethanol)
Calciferous deposits, metal hydroxide deposits, lyophobic biological deposits	Approx. 3% hydrochloric acid
Sulphide deposits	Mixture of 3% hydrochloric acid and thiocarbamide (commercially available)
Protein deposits	Mixture of 3% hydrochloric acid and pepsin (commercially available)
Fibers, suspended substances	Water under pressure, poss. with surface-active agents
Light biological deposits	Water under pressure

- 1) do not use for Tophit ISFET sensors! Instead, use commercially available acidic cleaning agents for the food industry (e.g. P3-horolith CIP, P3-horolith FL, P3-oxonia active).

⚠ CAUTION

Health hazards due to solvents

- Do not use organic solvents containing halogen or acetone. These solvents could destroy plastic components of the assembly or the sensor and are suspected carcinogens.

5.4 Replacing seals

To replace the seals of the assembly you have to interrupt the process and to remove the assembly completely

⚠ CAUTION

Medium residues and higher temperatures

Risk of injury

- Beware of medium residues and higher temperatures when handling components that were in contact with medium. Wear protection gloves and protection glasses.

Clean the assembly before replacing the seals (see chapter "Cleaning the assembly").

i The retractable pipe is used as seal face. Do not scratch the surface.

Preparation:

- Interrupt the process. Beware of medium residues, residual pressure and higher temperatures.
- Move the assembly to the "Service" position. Secure this position by the stop lock bolt (pos. 7).
- Dismount the sensor.
- Dismount the assembly from the process connection.
- Clean the assembly (see chapter "Cleaning the assembly").

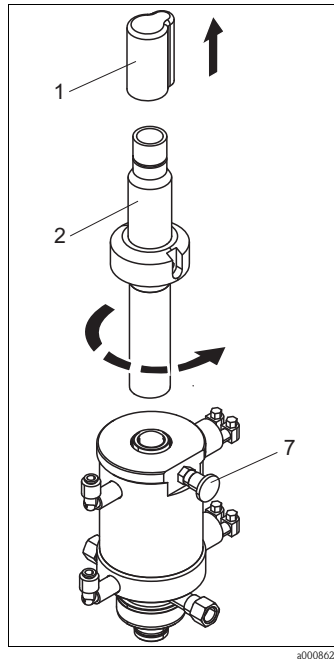
Dismantling the assembly:

Fig. 19: Dismantling part 1

- 1 Splash protection cap
2 Retractable pipe
7 Stop lock bolt

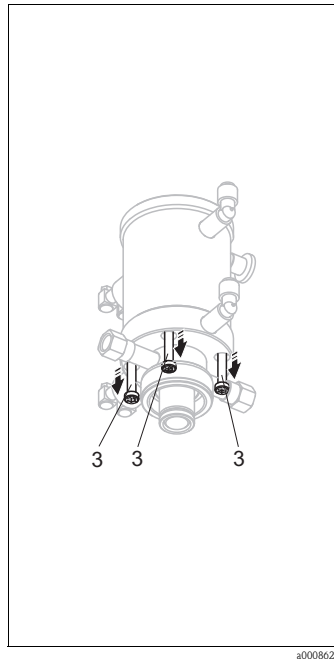


Fig. 20: Dismantling part 2

- 3 Connecting bolts (4 pcs.)

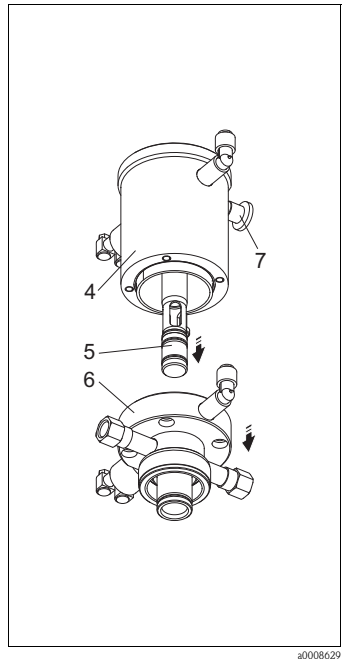


Fig. 21: Dismantling part 3

- 4 Cylinder
5 Sensor holder
6 Rinse chamber

1. Pull off the splash protection cap (pos. 1).
2. Make sure the stop lock bolt (pos. 7) is locked.
3. Only version with gel sensor: Unscrew the retractable pipe (pos. 2).
4. Loosen the four connecting bolts (pos. 3) of the rinse chamber (pos. 6).
5. Remove the rinse chamber.
6. Pull the stop bolt and turn it by 90° (unlock).
7. Pull the sensor holder (pos. 5) downwards out of the cylinder.

Replacing the seals

1. Apply a thin layer of grease to the new seals (e.g. Syntheso Glep1).
2. Replace the seals as shown in Fig. 22.
3. Re-assemble the assembly.

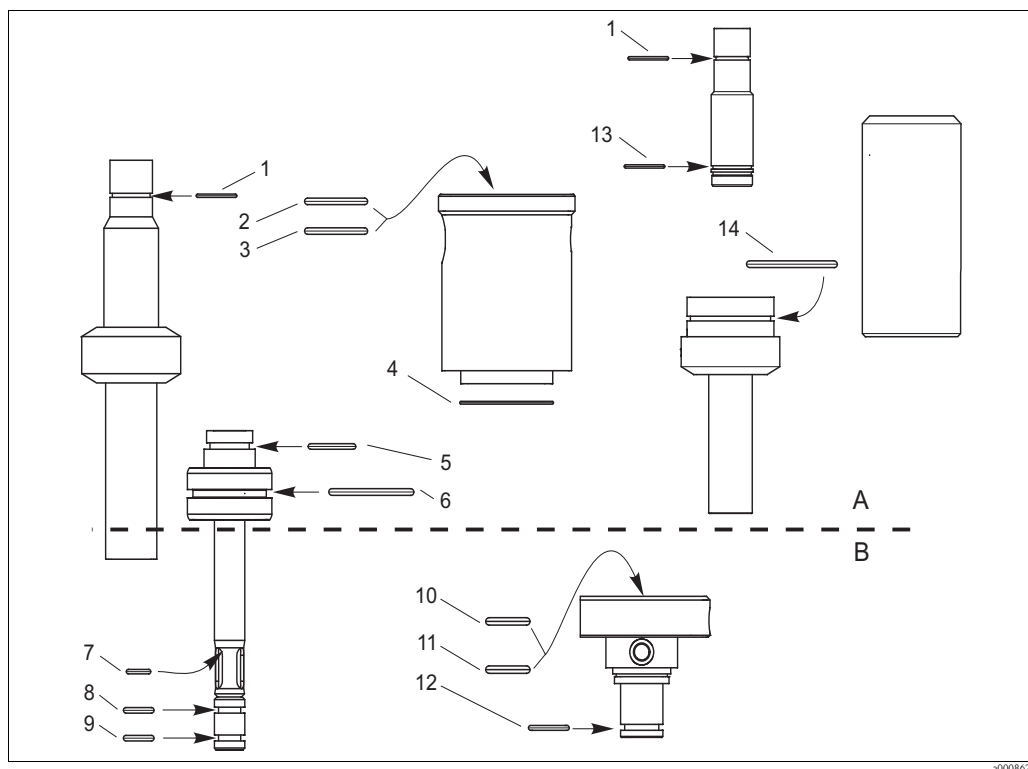


Fig. 22: Position of the seals

A O-rings, not in contact with medium

B O-rings, in contact with medium

No	Kit-no.	Kit pos. no.	Size	Remarks/materials
1	71064624	Pos. 60	ID20.35 W1.78	
2	71064624	Pos. 20	ID30.00 W3.50	Manual version
2+3	71064624	Pos. 20	ID30.00 W3.50	Pneumatic version
4	71064624	Pos. 50	ID52.00 W1.50	2x at long version
5	71064624	Pos. 10	ID22.00 W3.00	
6	71064624	Pos. 30	ID42.00 W4.00	Pneumatic version only
6	71064624	Pos. 40	ID37.00 W4.00	Manual version only
7	51502802	Pos. 10	ID11.00 W2.00	EPDM
7	51502803	Pos. 10	ID11.00 W2.00	VITON
7	51502804	Pos. 10	ID11.00 W2.00	KALREZ
8+9	51502802	Pos. 40	ID12.00 W3.00	EPDM
8+9	51502803	Pos. 40	ID12.00 W3.00	VITON
8+9	51502804	Pos. 40	ID12.00 W3.00	KALREZ
10+11	51502802	Pos. 20	ID18.00 W4.00	EPDM
10+11	51502803	Pos. 20	ID18.00 W4.00	VITON
10+11	51502804	Pos. 20	ID18.00 W4.00	KALREZ
12	51502802	Pos. 30	ID19.00 W3.00	EPDM
12	51502803	Pos. 30	ID19.00 W3.00	VITON
12	51502804	Pos. 30	ID19.00 W3.00	KALREZ
13	71064624	Pos. 80	ID23.52 W1.78	KCl version
14	71064624	Pos. 90	ID55.25 W2.62	KCl version

6 Accessories

6.1 Installation accessories

Pressure reducer kit

- complete, incl. manometer and angle bracket;
- order no. 51505755

Pneumatic throttle for the reduction of the assembly moving speed,

- G1/8 threaded connection
- order no. 50036864

Welded fitting G1¼, straight,

- SS 1.4435 (AISI 316L); order no. 51502798

Welded fitting G1¼, angular 15°,

- SS 1.4435 (AISI 316L); order no. 51502799

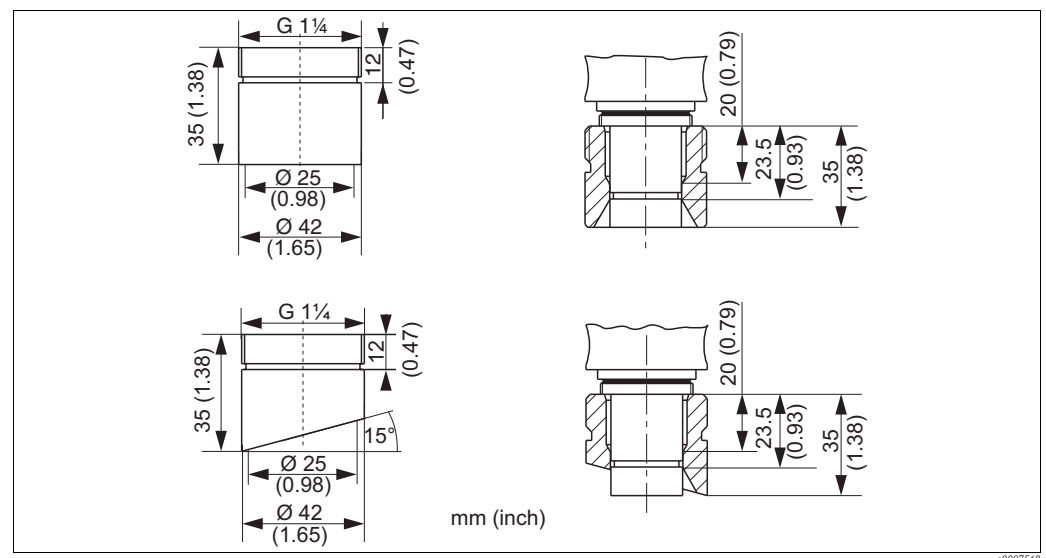


Abb. 23: Welded fittings

Dummy plug for G1¼ process connection,

- SS 1.4435 (AISI 316L), FPM (Viton®) seal, G1¼ internal thread; order no. 51502800

Dummy plug for G¼ rinse connection,

- SS 1.4404 (AISI 316L); order no. 50092264

DN 25 flow vessel,

- G1¼ external thread, SS 1.4404 (AISI 316L);
- order no. 51502801

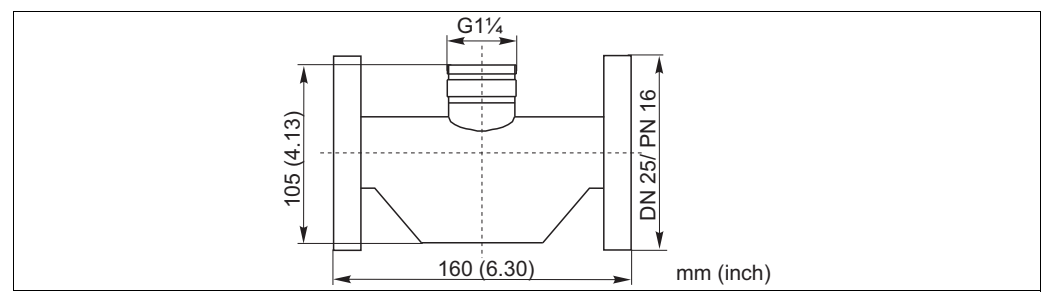


Fig. 24: Flow vessel

Hose nozzles for rinse connections G $\frac{1}{4}$, DN 12

- SS 1.4404 (AISI 316L), 2 pieces
- Order no.: 51502808

Hose nozzles for rinse connections G $\frac{1}{4}$, DN 12

- PVDF, 2 pieces
- Order no.: 50090491

6.2 Limit position switches

Set of pneumatic limit position switches (2 pieces);

- order no. 51502874

Set of electric limit position switches, Ex and non-Ex (2 pieces);

- order no. 51502873

6.3 Sensors

6.3.1 Glass electrodes

Orbisint CPS11/CPS11D

- pH sensor for process applications
- Optional SIL version for connection to SIL approved transmitters
- With dirt-repellent PTFE diaphragm
- Ordering per product structure (→ Online configurator, www.products.endress.com/cps11 or www.products.endress.com/cps11d)
- Technical Information TI028C/07/EN

Orbisint CPS12/CPS12D

- ORP electrode for process applications
- With dirt-repellent PTFE diaphragm
- Ordering per product structure (→ Online configurator, www.products.endress.com/cps12 or www.products.endress.com/cps12d)
- Technical Information TI367C/07/EN

Ceraliquid CPS41/CPS41D

- pH sensor
- With ceramics diaphragm and liquid KCl electrolyte
- Ordering per product structure (→ Online configurator, www.products.endress.com/cps41 or www.products.endress.com/cps41d)
- Technical Information TI079C/07/EN

Ceraliquid CPS42/CPS42D

- ORP electrode
- With ceramics diaphragm and liquid KCl electrolyte
- Ordering per product structure (→ Online configurator, www.products.endress.com/cps42 or www.products.endress.com/cps42d)
- Technical Information TI373C/07/EN

Ceragel CPS71/CPS71D

- pH sensor
- With double chamber reference system and integrated bridge electrolyte
- Ordering per product structure (→ Online configurator, www.products.endress.com/cps71 or www.products.endress.com/cps71d)
- Technical Information TI245C/07/EN

Ceragel CPS72/CPS72D

- ORP electrode
- With double chamber reference system and integrated bridge electrolyte
- Ordering per product structure (→ Online configurator, www.products.endress.com/cps72 or www.products.endress.com/cps72d)
- Technical Information TI374C/07/EN

Orbipore CPS91/CPS91D

- pH sensor
- With open aperture for media with high dirt load
- Ordering per product structure (—> Online configurator, www.products.endress.com/cps91 or www.products.endress.com/cps91d)
- Technical Information TI375C/07/EN

Orbipore CPS92/CPS92D

- ORP sensor
- With open aperture for media with high dirt load
- Ordering per product structure (—> Online configurator, www.products.endress.com/cps92 or www.products.endress.com/cps92d)
- Technical Information TI435C/07/EN

6.3.2 ISFET sensors

Tophit CPS471/CPS471D

- Sterilizable and autoclavable ISFET sensor for food and pharmaceuticals, process technology, water treatment and biotechnology;
- Ordering per product structure (—> Online configurator, www.products.endress.com/cps471 or www.products.endress.com/cps471d)
- Technical Information TI283C/07/EN

Tophit CPS441/CPS441D

- Sterilizable ISFET sensor for media with low conductivity, with liquid KCl electrolyte;
- Ordering per product structure (—> Online configurator, www.products.endress.com/cps441 or www.products.endress.com/cps441d)
- Technical Information TI352C/07/EN

Tophit CPS491/CPS491D

- ISFET sensor with open aperture for media with high dirt load;
- Ordering per product structure (—> Online configurator, www.products.endress.com/cps491 or www.products.endress.com/cps491d)
- Technical Information TI377C/07/EN

7 Trouble-shooting

7.1 Replacing damaged parts

⚠ WARNING

Incorrectly repaired devices can be a source of danger

- Assembly damage which affects the pressure safety may **only** be repaired by authorized technical personnel.
- Following every repair and maintenance task, suitable measures must be taken to ensure that the assembly is leak-tight. The assembly must once again meet the technical data specifications when it has been repaired.

Replace all other damaged components immediately. To order accessories and spare parts, please use the "Accessories" and "Spare parts" chapters or contact your local sales center.

7.2 Spare part kits

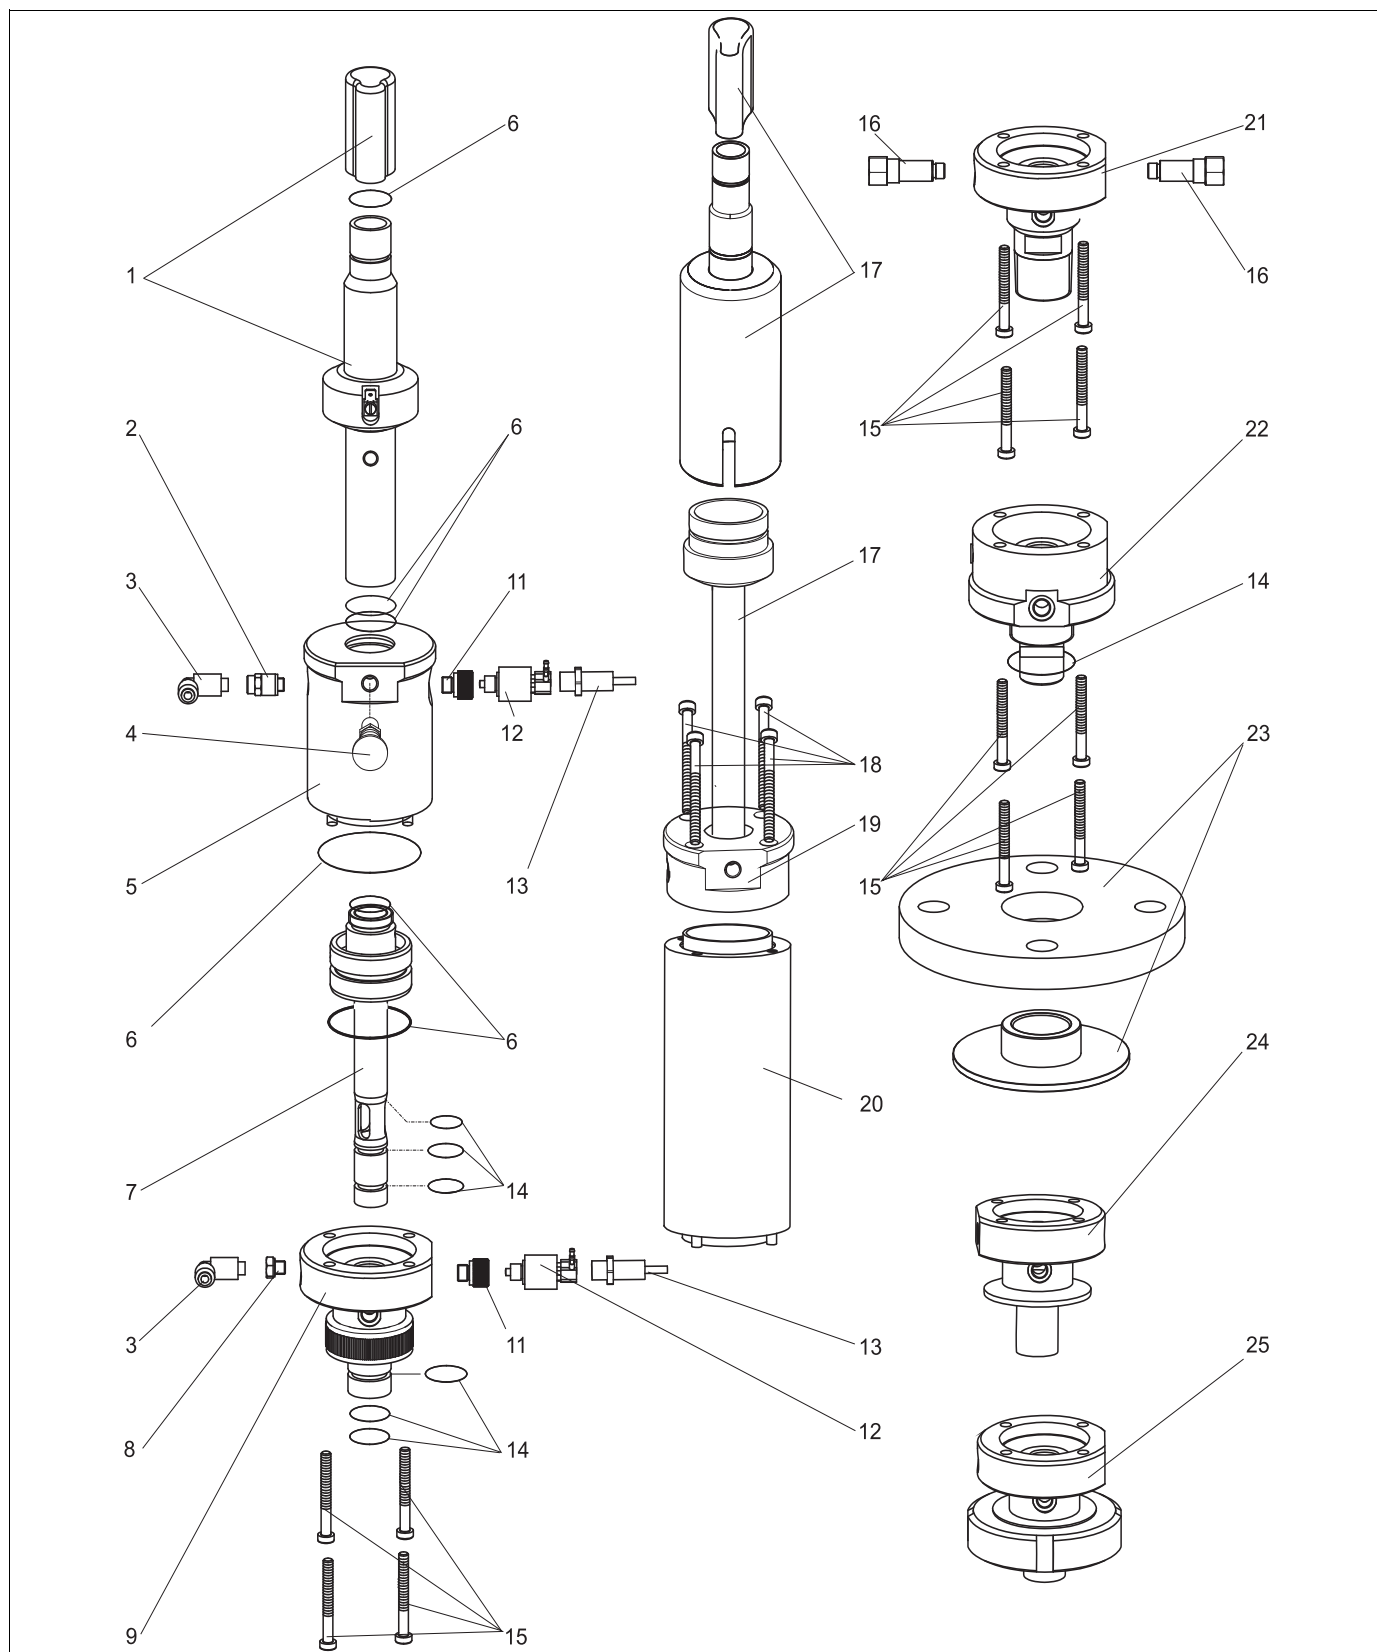


Fig. 25: Spare parts (all assembly versions)



Refer to the table on the next page for the order numbers of the spare part kits based on the item numbers in → 25.

Position	Description and kit content	Spare part kit order no.
1	Retractable pipe for 120 mm (4.72 inch) gel electrodes For assembly version: – pneumatic – short, immersion depth up to 101 mm (3.98 inch) Kit 471/472 short, pneumatic	51503715
	Retractable pipe for 225 mm (8.86 inch) gel electrodes For assembly version: – pneumatic – long, immersion depth up to 208 mm (8.19 inch) Kit 471/472 long, pneumatic	51503716
	Retractable pipe for 120 mm (4.72 inch) gel electrodes For assembly version: – manual – short, immersion depth up to 101 mm (3.98 inch) Kit 471/472 short, manual	51503717
	Retractable pipe for 225 mm (8.86 inch) gel electrodes For assembly version: – manual – long, immersion depth up to 208 mm (8.19 inch) Kit 471/472 long, manual	51503718
2	Pneumatic throttle For assembly version: – pneumatic	50036864
2, 8	Exhaust air restrictor (pos. 2) and SS 1.4404 (AISI 316L) dummy plug (pos. 8) For assembly version: – manual 5 pieces each	51503732
3	G1/8 pneumatic connections For assembly version: – pneumatic 10 pieces	51503730
4	Stop bolt	51503731
5	PA cylinder, with O-ring For assembly version: – short, immersion depth up to 101 mm (3.98 inch)	51503773
	SS 1.4404 (AISI 316L) cylinder, with O-ring For assembly version: – short, immersion depth up to 101 mm (3.98 inch)	51503775
6	Set of gaskets, not in contact with medium	71064624
7	Sensor guide, standard version, complete For assembly version: – short, immersion depth up to 101 mm (3.98 inch)	51503719
	Sensor guide, standard version, complete For assembly version: – long, immersion depth up to 208 mm (8.19 inch)	51503720

Position	Description and kit content	Spare part kit order no.
9	Rinse chamber, complete For assembly version: – process connection: G1¼ thread adapter – without rinse fittings	51503760
	Rinse chamber, complete For assembly version: – process connection: G1¼ thread adapter – with G1/8 rinse fittings	51503761
11	M12x1 stopper For assembly version: – pneumatic, without limit switch 10 pieces	51503733
12	Set of pneumatic limit switches For assembly version: – pneumatic 2 pieces	51502874
13	Set of electric limit switches, Ex and Non-Ex For assembly version: – pneumatic 2 pieces	51502873
14	Set of gaskets, in contact with medium EPDM	51502802
	Set of gaskets, in contact with medium VITON	51502803
	Set of gaskets, in contact with medium KALREZ	51502804
15	M6x30 screws, DIN 69612 A-4/2, 20 pieces	51503734
16	Set of G¼ rinse fittings, complete	51503771
	Set of NPT¼" rinse fittings, complete	51503772
17	Retractable pipe for 225 mm (8.86 inch) liquid KCl electrodes For assembly version: – pneumatic, short, immersion depth up to 101 mm (3.98 inch) Kit 471/472 short, pneumatic, sensor installation without disassembling of the retractable pipe	71162343
	Retractable pipe for 225 mm (8.86 inch) liquid KCl electrodes For assembly version: – manual, short, immersion depth up to 101 mm (3.98 inch) Kit 471/472 short, manual, sensor installation without disassembling of the retractable pipe	71162344
18	M6x45 screws, DIN 69612 A-4/3 For assembly version: – long, immersion depth up to 208 mm (8.19 inch) 20 pieces	51503738
18-20	PA cylinder (pos. 20), with O-ring (pos. 6-1), cylinder head (pos. 19), screws (Pos. 18) For assembly version: – long, immersion depth up to 208 mm (8.19 inch)	51503774
	SS 1.4404 (AISI 316L) cylinder (pos. 20), with O-ring (pos. 6-1), cylinder head (pos. 19), screws (Pos. 18) For assembly version: – long, immersion depth up to 208 mm (8.19 inch)	51503776

Position	Description and kit content	Spare part kit order no.
21	Rinse chamber, complete For assembly version: – process connection: NPT 1" thread adapter – without rinse fittings	51503762
	Rinse chamber, complete For assembly version: – process connection: NPT 1" thread adapter – with G1/8 rinse fittings	51503763
22	Rinse chamber, complete For assembly version: – process connection: DN 50 or ANSI 2" flange – without rinse fittings	51503764
	Rinse chamber, complete For assembly version: – process connection: DN 50 or ANSI 2" flange – with G1/8 rinse fittings	51503765
23	DN 50 flange, with sealing element	51503766
	ANSI 2" flange, with sealing element	51503767
24	Rinse chamber, complete For assembly version: – process connection: Clamp 2" – without rinse fittings	51513046
	Rinse chamber, complete For assembly version: – process connection: Clamp 2" – with G1/8 rinse fittings	51513047
25	Rinse chamber, complete For assembly version: – process connection: DN 50 dairy fitting – without rinse fittings	51513049
	Rinse chamber, complete For assembly version: – process connection: DN 50 dairy fitting – with G1/8 rinse fittings	51513051

7.3 Return

The device must be returned if repairs or a factory calibration are required, or if the wrong device has been ordered or delivered. According to legal regulations, Endress+Hauser, as an ISO-certified company, is required to follow certain procedures when handling returned products that are in contact with medium.

To ensure swift, safe and professional device returns, please read the return procedures and conditions on the internet site:

www.services.endress.com/return-material

7.4 Disposal

Remove electronic components, e.g. electric limit position switches. Dispose of these components in accordance with regulations on the disposal of electronic waste.

You have to separately dispose of pressure cylinder, sensor holder and other components according to their material.

Please observe local regulations.

8 Technical data

8.1 Environment

Ambient temperature	Ambient temperature not below 0 °C (32 °F). The maximum permissible temperature for electric limit position switches (NAMUR type) is 90 °C (194 °F).
----------------------------	---

8.2 Process

Process pressure	0 to max. 4 bar (0 to max. 58 psi) overpressure for manual actuation 0 to 10 bar (0 to 145 psi) overpressure for pneumatic actuation
Process temperature	0 to 140 °C (32 to 284 °F)

Pressure temperature diagram

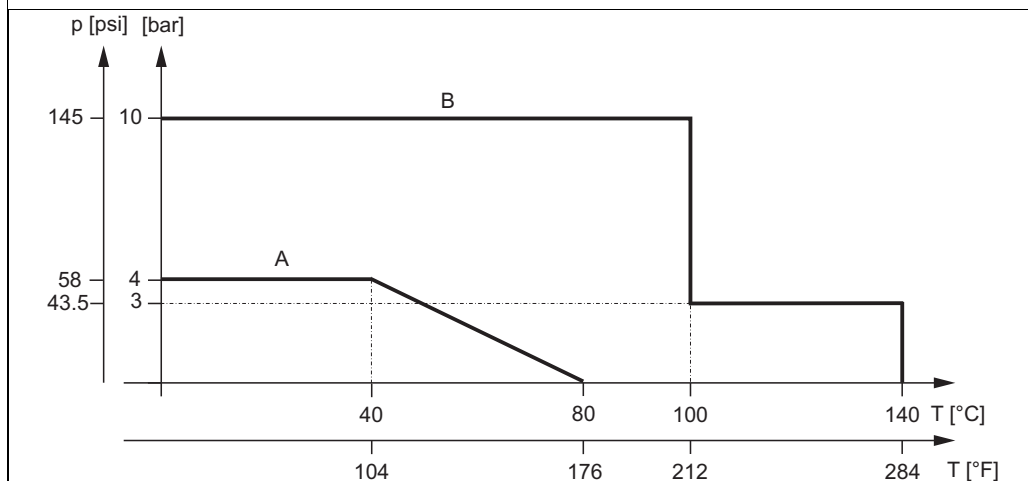


Fig. 26: Pressure-temperature diagramm

- A PA housing (manual actuation only)
B Stainless steel housing 1.4404 (AISI 316L)

i The process pressure for a manually driven assembly must not exceed 4 bar (58psi)!

8.3 Mechanical construction

Design, dimensions	see chapter "Installation"	
Sensors	Short version	pH glass electrodes, gel, 120 mm pH glass electrodes, KCl, 225 mm pH ISFET sensors, gel, 120 mm pH ISFET sensors, KCl, 225 mm
	Long version	pH glass electrodes, gel, 225 mm pH ISFET sensors, gel, 225 mm
Weight	2.5 to 9 kg (5.5 to 19.8 lb), depending on cylinder material, on process connection and additional equipment, see product structure	
Material (in contact with medium)	Seals Sensor holder Rinse fittings	EPDM / FPM / Kalrez® SS 1.4404 (AISI 316L) SS 1.4404 (AISI 316L)
Material (not in contact with medium)	Cylinder Electric limit position switch	PA / SS 1.4404 (AISI 316L) fore-part PBT, cable PVC
Rinse connection fittings	2 x G ¼ (internal) or 2 x NPT ¼" (internal)	

Index

A

Accessories	
Glass electrodes	26
Installation	25
ISFET sensors	27
Limit position switches	26
Sensors	26
Assembly	
Cleaning	21

C

Checking	
Installation	18
Cleaning	
Agents	22
Assembly	21
Sensor	21
Commissioning	4, 19
Compressed air connection	13
Connection	
Compressed air	13
Rinse water	15

D

Designated use	4
Dimensions	9
Disposal	32

E

Environment	33
-------------	----

G

Glass electrode	26
-----------------	----

I

Icons	5
Immersion depth	8
Incoming acceptance	7
Installation	4, 7, 12
Immersion depth	8
Process	13
Sensor	16
ISFET	27
ISFET sensor	7

L

Limit position switches	26
Connection	14
Electric	15
Pneumatic	14

M

Maintenance	21
Manual operation	20
Measuring	20
Measuring system	12
Mechanical construction	34

N

Nameplate	6
-----------	---

O

Operating elements	19
Operation	4
Manually	20
Pneumatically	20
Operational safety	4
Order code	6

P

Parts	
Replacing	28
Pneumatic connection	13
Pneumatic operation	20
Pneumatics	14
Pressure surges	13, 15
Process	33
Process connection	10

R

Replacing	
Parts	28
Seals	22
Retractable pipe	16
Return	32
Rinse water connection	15

S

Safety icons	5
Scope of delivery	6
Seals replacement	22
Sensor	
Cleaning	21
Installation	16
Sensor holder	16
Sensors	26
Service	20
Spare parts	29
Splash protection cap	16
Stop lock bolt	16, 19
Storage	7
Symbols	5

T

Transport	7
-----------	---

U

Use	4
-----	---

W

Wall spacing	8
--------------	---

www.endress.com/worldwide

Endress+Hauser 
People for Process Automation

