

Operating Instructions

CCS50

Sensor for measuring chlorine dioxide

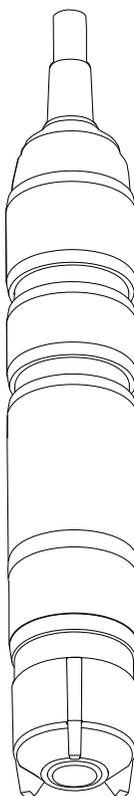


Table of contents

1	About this document	4	10.3	Disposal	39
1.1	Warnings	4	11	Accessories	40
1.2	Symbols used	4	11.1	Maintenance kit CCV05	40
2	Basic safety instructions	6	11.2	Device-specific accessories	40
2.1	Requirements for personnel	6	12	Technical data	42
2.2	Designated use	6	12.1	Input	42
2.3	Workplace safety	6	12.2	Performance characteristics	42
2.4	Operational safety	6	12.3	Environment	43
2.5	Product safety	7	12.4	Process	44
3	Product description	8	12.5	Mechanical construction	45
3.1	Product design	8	Index		46
4	Incoming acceptance and product identification	12			
4.1	Incoming acceptance	12			
4.2	Product identification	12			
5	Installation	14			
5.1	Installation conditions	14			
5.2	Mounting the sensor	16			
5.3	Post-installation check	23			
6	Electrical connection	24			
6.1	Connecting the sensor	24			
6.2	Ensuring the degree of protection	25			
6.3	Post-connection check	25			
7	Commissioning	26			
7.1	Function check	26			
7.2	Selecting the sensor type at the transmitter	26			
7.3	Sensor polarization	27			
7.4	Sensor calibration	27			
8	Diagnostics and troubleshooting	29			
9	Maintenance	31			
9.1	Maintenance schedule	31			
9.2	Maintenance tasks	32			
10	Repair	39			
10.1	Spare parts	39			
10.2	Return	39			

1 About this document

1.1 Warnings

Structure of information	Meaning
 <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action</p>	<p>This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.</p>
 <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action</p>	<p>This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.</p>
 <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action</p>	<p>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.</p>
 <p>Cause/situation If necessary, Consequences of non-compliance (if applicable) ▶ Action/note</p>	<p>This symbol alerts you to situations which may result in damage to property.</p>

1.2 Symbols used

Symbol	Meaning
	Additional information, tips
	Permitted or recommended
	Not permitted or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step

1.2.1 Symbols on the device

Symbol	Meaning
	Reference to device documentation
	Minimum immersion depth

2 Basic safety instructions

2.1 Requirements for personnel

Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.

- ▶ The technical personnel must be authorized by the plant operator to carry out the specified activities.
- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ Measuring point faults may be repaired only by authorized and specially trained personnel.



Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

2.2 Designated use

Drinking water and industrial water must be disinfected through the addition of appropriate disinfectants such as chlorine gas or inorganic chlorine compounds. The dosing quantity must be adapted to continuously fluctuating operating conditions. If the concentrations in the water are too low, this could jeopardize the effectiveness of the disinfection. On the other hand, concentrations which are too high can lead to signs of corrosion and have an adverse effect on taste, as well as generating unnecessary costs.

The sensor was specifically developed for this application and is designed for continuous measurement of chlorine dioxide in water. In conjunction with measuring and control equipment, it allows optimal control of disinfection.

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

1. Verify that all connections are correct.

2. Ensure that electrical cables and hose connections are undamaged.
3. Do not operate damaged products, and protect them against unintentional operation.
4. Label damaged products as defective.

During operation:

- ▶ If faults cannot be rectified:
products must be taken out of service and protected against unintentional operation.

2.4.1 Special instructions

- ▶ Do not operate the sensors under process conditions where it is expected that osmotic conditions will cause electrolyte components to pass through the membrane and into the process.

2.5 Product safety


The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.

3 Product description

3.1 Product design

The sensor consists of the following functional units:

- Membrane cap (measuring chamber with membrane)
 - Separates the inner amperometric system from the medium
 - With robust PVDF membrane and pressure relief valve
 - With special support grid between working electrode and membrane for a defined and consistent electrolyte film and thus a relatively constant indication even at varying pressures and flows
- Sensor shaft with
 - Large counter electrode
 - Working electrode embedded in plastic
 - Embedded temperature sensor

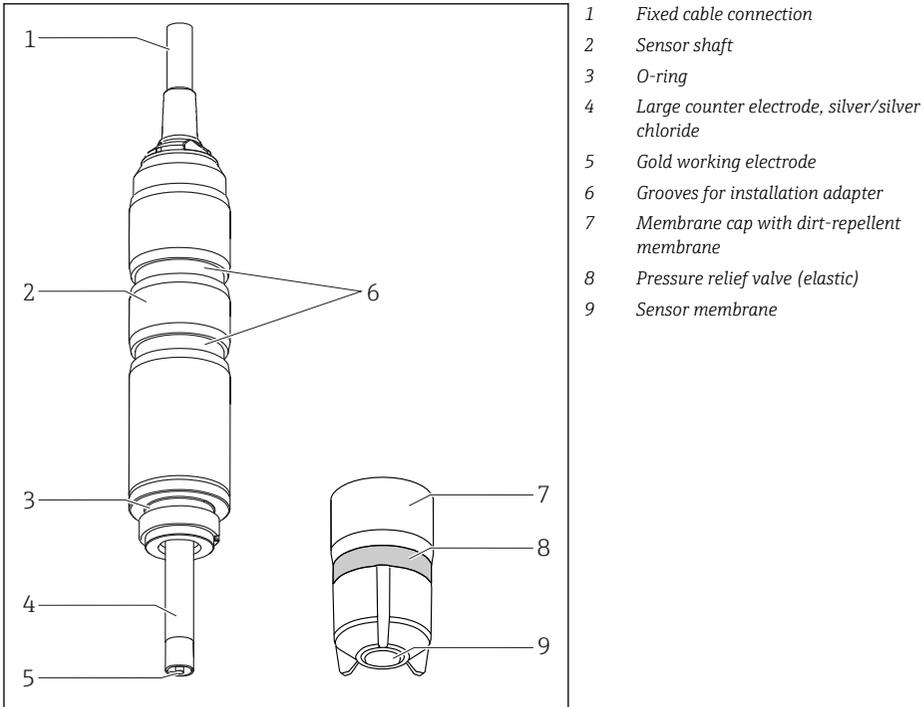

A0039302

1 Sensor structure

3.1.1 Measuring principle

Chlorine dioxide levels are determined in accordance with the amperometric measuring principle.

The chlorine dioxide (ClO_2) in the medium diffuses through the sensor membrane and is reduced to chloride ions (Cl^-) at the gold working electrode. At the silver counter electrode, silver is oxidized to silver chloride. Electron donation at the gold working electrode and electron acceptance at the silver counter electrode cause a current to flow which is proportional to the concentration of chlorine dioxide in the medium. This process does not depend on the pH value over a wide range.

The transmitter uses the current signal to calculate the measured variable for concentration in mg/l (ppm).

3.1.2 Effects on the measured signal

pH value


pH dependency

pH value	Result
< 3.5	Chlorine is produced if chloride (Cl^-) is present in the medium at the same time. The strong cross-sensitivity to chlorine dioxide causes an increase in the measured value.
3.5 to 9	The pH value does not affect measurement of the chlorine dioxide concentration in the medium.
> 9	Chlorine dioxide is unstable and decomposes.

Flow

The minimum flow velocity at the membrane-covered measuring cell is 15 cm/s (0.5 ft/s).

- When using the Flowfit CCA151 flow assembly, the minimum flow velocity corresponds to a volume flow of 5 l/h (1.3 gal/h).
- When using flow assembly CCA250, the minimum flow velocity corresponds to a volume flow of 30 l/h (7.9 gal/h) (upper edge of float at the height of the red bar mark).

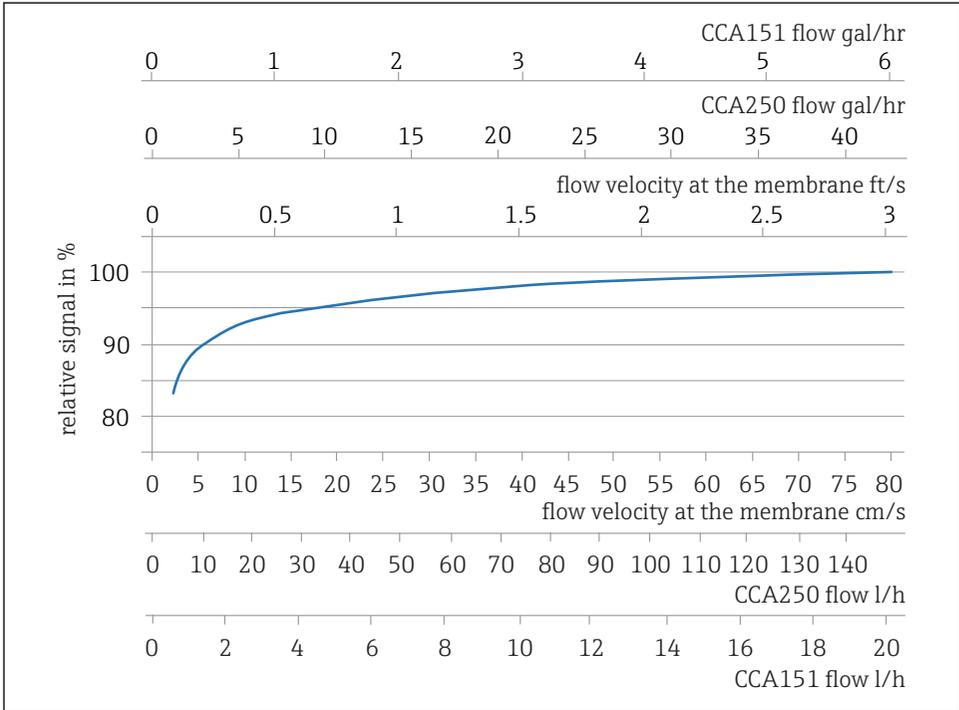

A0042804

2 *Correlation between slope of electrode and flow velocity at the membrane/volume flow in assembly*

At higher flow rates, the measured signal is virtually flow-independent. However, if the flow rate falls below the specified value, the measured signal depends on the flow.

The installation of an INS proximity switch in the assembly enables reliable detection of this invalid operating status, thus triggering an alarm or causing the dosing process to be switched off if necessary.

Below the minimum flow rate, the sensor current is more sensitive to flow fluctuations. For abrasive media, it is recommended not to exceed the minimum flow. If suspended solids are present, which may form deposits, the maximum flow rate is recommended.

Temperature

Changes in the temperature of the medium affect the measured value:

- Increases in temperature result in a higher measured value (approx. 4 % per K)
- Decreases in temperature result in a lower measured value.

Use of the sensor in combination with the Liquisys CCM223/253 enables automatic temperature compensation (ATC). Recalibration in the case of temperature changes is not necessary.

1. If automatic temperature compensation is disabled at the transmitter, the temperature must be maintained at a constant level following calibration.
2. Otherwise, recalibrate the sensor.

In the event of normal and slow changes in temperature (0.3 K / minute), the internal temperature sensor is sufficient.

Cross-sensitivities ¹⁾

There are cross-sensitivities for: free chlorine, ozone, free bromine.

There are no cross-sensitivities for: H₂O₂, peracetic acid.

1) The listed substances have been tested with different concentrations. An additive effect has not been investigated.

4 Incoming acceptance and product identification

4.1 Incoming acceptance

1. Verify that the packaging is undamaged.
 - ↳ Notify the supplier of any damage to the packaging.
Keep the damaged packaging until the issue has been resolved.
2. Verify that the contents are undamaged.
 - ↳ Notify the supplier of any damage to the delivery contents.
Keep the damaged goods until the issue has been resolved.
3. Check that the delivery is complete and nothing is missing.
 - ↳ Compare the shipping documents with your order.
4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - ↳ The original packaging offers the best protection.
Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

4.2 Product identification

4.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Extended order code
- Serial number
- Safety information and warnings

► Compare the information on the nameplate with the order.

4.2.2 Product page

www.endress.com/ccs50

4.2.3 Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

1. Go to www.endress.com.
2. Call up the site search (magnifying glass).
3. Enter a valid serial number.
4. Search.
 - ↳ The product structure is displayed in a popup window.

5. Click on the product image in the popup window.
 - ↳ A new window (**Device Viewer**) opens. All of the information relating to your device is displayed in this window as well as the product documentation.

4.2.4 Manufacturer address

Endress+Hauser Conducta GmbH+Co. KG
Dieselstraße 24
D-70839 Gerlingen

4.2.5 Scope of delivery

The delivery comprises:

- Disinfection sensor (membrane-covered, Ø25 mm) with protection cap (ready for use)
- Bottle with electrolyte (50 ml (1.69 fl.oz))
- Replacement membrane cap in protection cap
- Operating Instructions
- Manufacturer inspection certificate

4.2.6 Certificates and approvals

CE mark

Declaration of Conformity

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CE mark.

EAC

The product has been certified according to guidelines TP TC 004/2011 and TP TC 020/2011 which apply in the European Economic Area (EEA). The EAC conformity mark is affixed to the product.


5 Installation

5.1 Installation conditions

5.1.1 Orientation

Do not install upside-down!

- ▶ Install the sensor in an assembly, support or appropriate process connection at an angle of at least 15° to the horizontal.
- ▶ Other angles of inclination are not permitted.
- ▶ Follow the instructions for installing the sensor in the Operating Instructions of the assembly used.

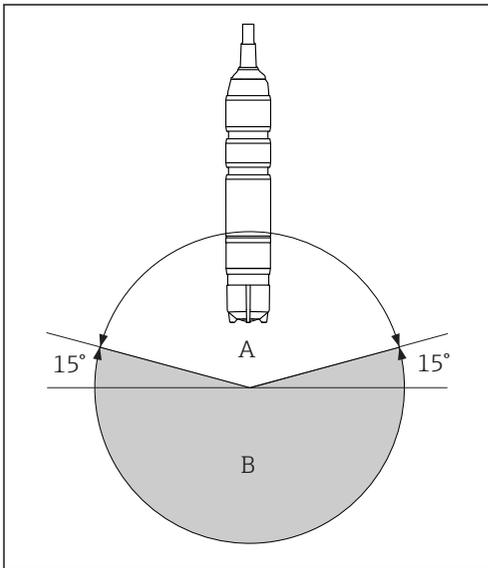


A *Permitted orientation*

B *Incorrect orientation*

5.1.2 Immersion depth

50 mm (1.97 in)

5.1.3 Dimensions

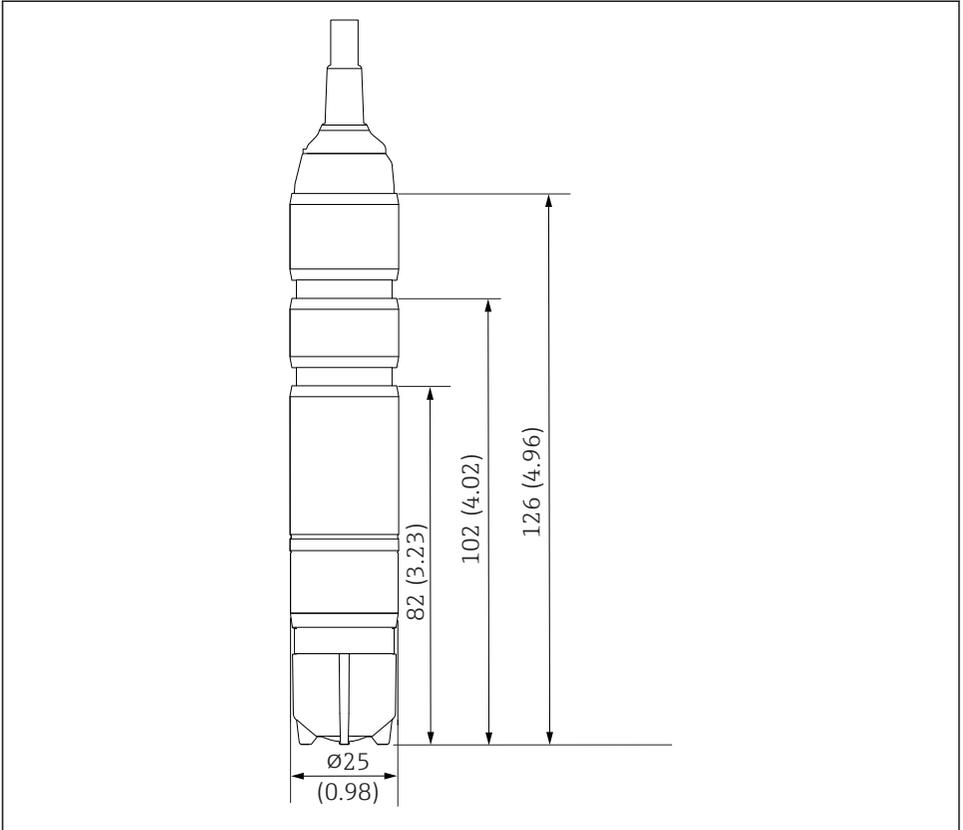

A0037034


3 Dimensions in mm (in)

5.2 Mounting the sensor

5.2.1 Measuring system

A complete measuring system comprises:

- Disinfection sensor CCS50 (membrane-covered, \varnothing 25 mm) with appropriate mounting adapter
- Flowfit CCA151 flow assembly
- Transmitter, e. g. Liquisys CCM223/253
- Optional: proximity switch
- Optional: CPS31
- Optional: Flowfit CCA250 flow assembly (a pH/ORP sensor can also be installed here)
- Optional: Flexdip CYA112

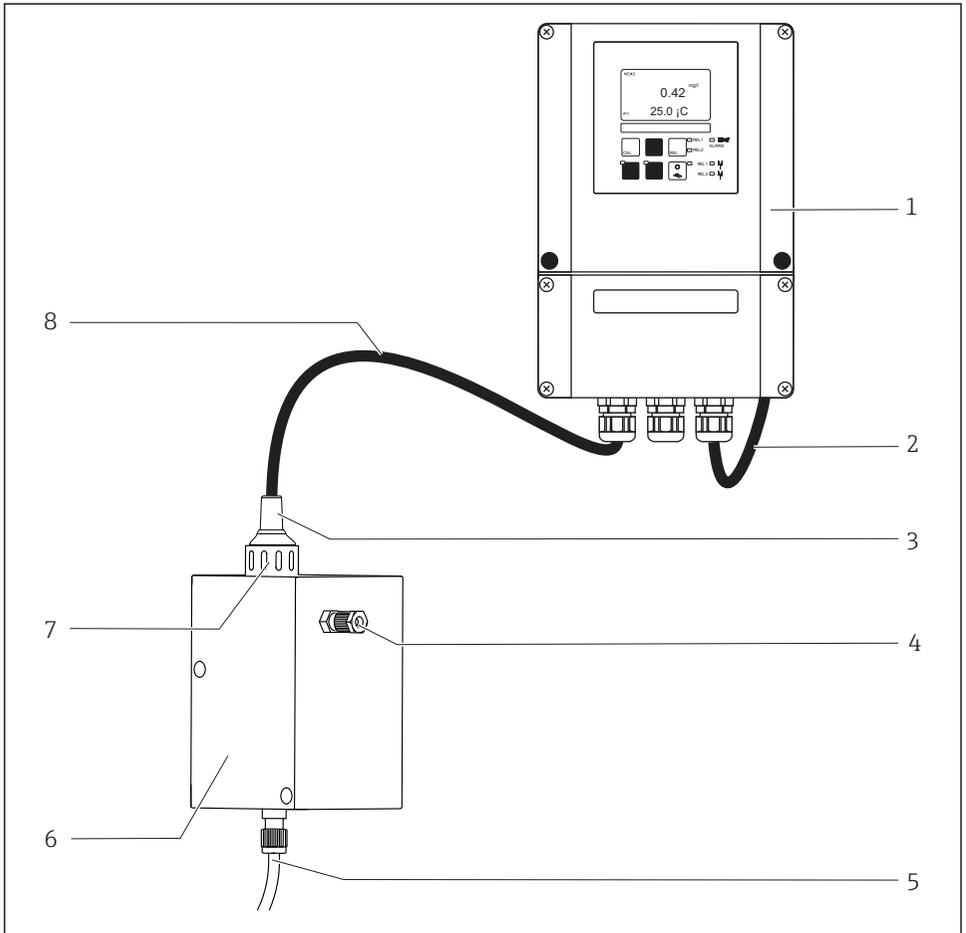

A0036970

4 Example of a measuring system

- 1 Liquisys CCM223/253 transmitter
- 2 Power cable for transmitter
- 3 Disinfection sensor CCS50 (membrane-covered, $\varnothing 25$ mm)
- 4 Outlet
- 5 Inlet
- 6 Flowfit CCA151 flow assembly
- 7 Union nut for installing a disinfection sensor in the Flowfit CCA151 flow assembly
- 8 Fixed cable of disinfection sensor CCS50

- To ensure a high reading stability, as an option use the Flowfit CCA250 and ground using the PAL pin.

5.2.2 Preparing the sensor


Removing protection cap from sensor

NOTICE

Negative pressure causes damage to the sensor's membrane cap

- ▶ If the protection cap is attached, carefully remove it from sensor.


1. When supplied to the customer and when in storage, the sensor is fitted with a protection cap: First release just the top part of the protection cap by turning it.

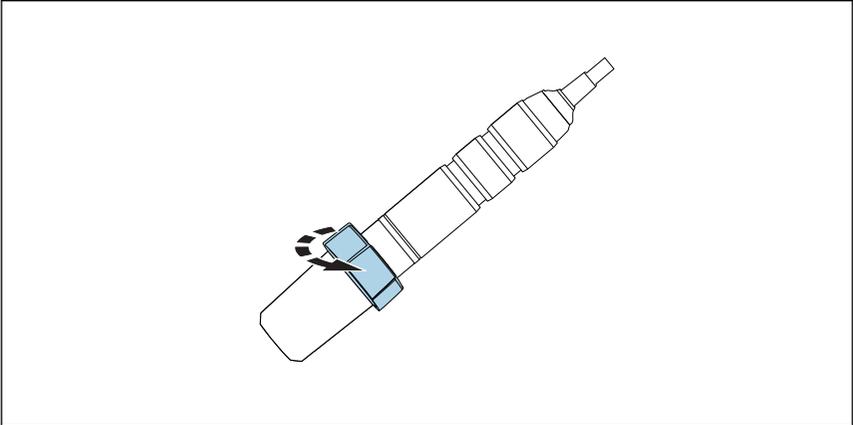

A0037037

-  5 *Releasing top part of protection cap by turning*

2. Carefully remove protection cap from sensor.

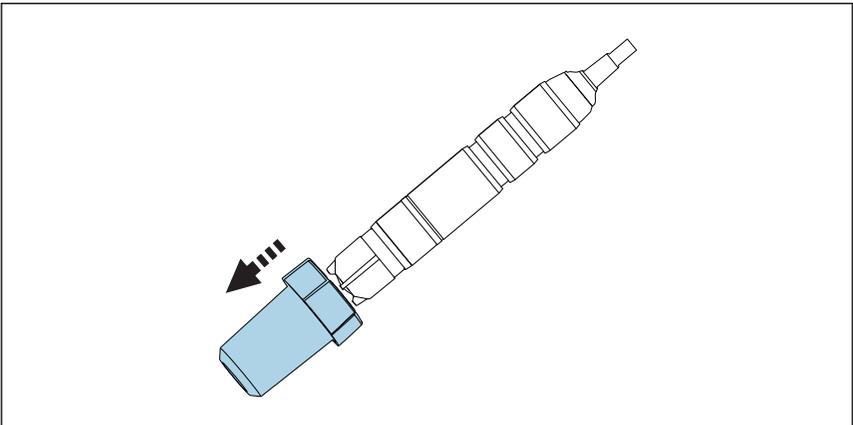

A0037038

-  6 *Carefully remove protection cap*

5.2.3 Installing the sensor in the CCA151 assembly


The disinfection sensor (membrane-covered, $\varnothing 25$ mm) is designed for installation in the Flowfit CCA151 flow assembly.

Please note the following during installation:

- ▶ The volume flow must be at least 5 l/h (1.3 gal/h).
- ▶ If the medium is fed back into an overflow basin, pipe or similar, the resulting counterpressure on the sensor may not exceed 1 bar (14.5 psi)(2 bar abs. (29 psi abs.)) and must remain constant.
- ▶ Avoid negative pressure at the sensor, e.g. due to medium being returned to the suction side of a pump.
- ▶ To avoid buildup, heavily contaminated water should also be filtered.

Preparing the assembly

1. The assembly is supplied to the customer with a union nut screwed onto the assembly: unscrew union nut from assembly.

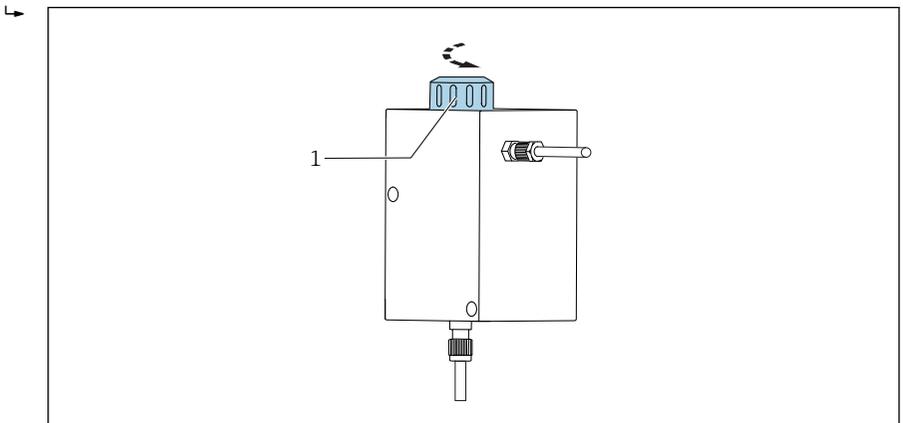

A0034262

 7 Flowfit CCA151 flow assembly


1 Union nut

2. The assembly is supplied to the customer with a dummy plug inserted in the assembly: remove dummy plug from assembly.

Equipping sensor with adapter

The required adapter (clamping ring, thrust collar and O-ring) can be ordered as a mounted sensor accessory or as a separate accessory →  40.

1. First slide the clamping ring, then the thrust collar, and then the O-ring from the membrane cap towards the sensor head and into the lower groove.

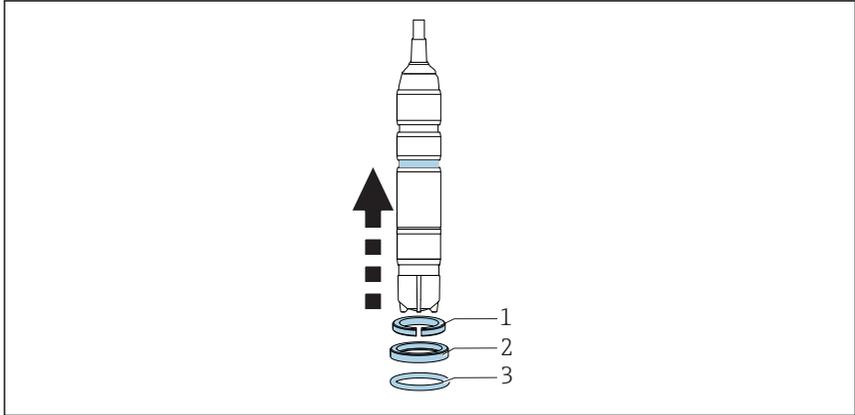


A0037041

-  8 *Slide clamping ring, thrust collar and O-ring upwards from the membrane cap to the sensor shaft and into the lower groove*

Installing sensor in assembly

2. Slide sensor with adapter for Flowfit CCA151 into the opening in the assembly.

3. Screw union nut onto assembly on block.

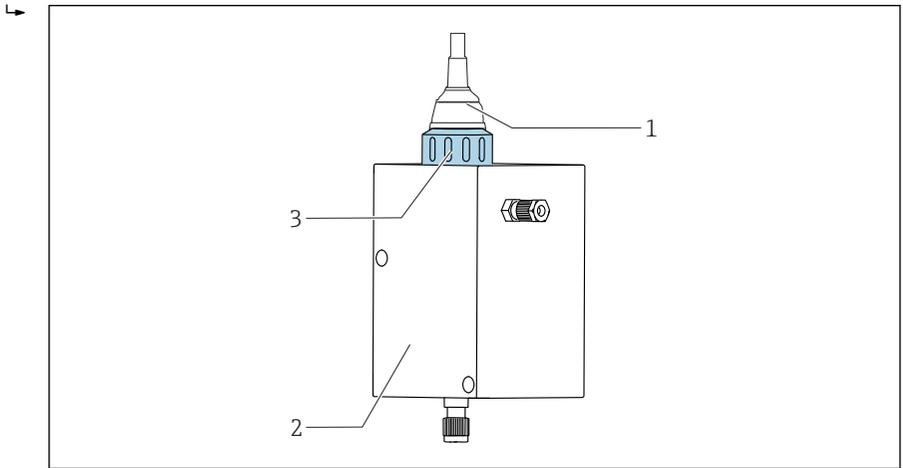

A0037049

9 Flowfit CCA151 flow assembly

- 1 Disinfection sensor
- 2 Flowfit CCA151 flow assembly
- 3 Union nut for securing a disinfection sensor

5.2.4 Installing the sensor in the CCA250 assembly

The sensor can be installed in the Flowfit CCA250 flow assembly. In addition to allowing the installation of a chlorine or chlorine dioxide sensor, this also allows the simultaneous operation of a pH and an ORP sensor for example. A needle valve controls the volume flow in the range of 30 to 120 l/h (7.9 to 31.7 gal/h).


Please note the following during installation:

- ▶ The volume flow must be at least 30 l/h (7.9 gal/h). If the flow drops below this value or stops completely, this can be detected by an inductive proximity switch and used to trigger an alarm with locking of the dosage pumps.
- ▶ If the medium is fed back into an overflow basin, pipe or similar, the resulting counterpressure on the sensor may not exceed 1 bar (14.5 psi) (2 bar abs. (29 psi abs.)) and must remain constant.
- ▶ Negative pressure at the sensor, e.g. due to medium being returned to the suction side of a pump, must be avoided.

Equipping sensor with adapter

The required adapter can be ordered as a mounted sensor accessory or as a separate accessory. →  40

1. Slide adapter for Flowfit CCA250 from the sensor head up to the stop on the sensor.

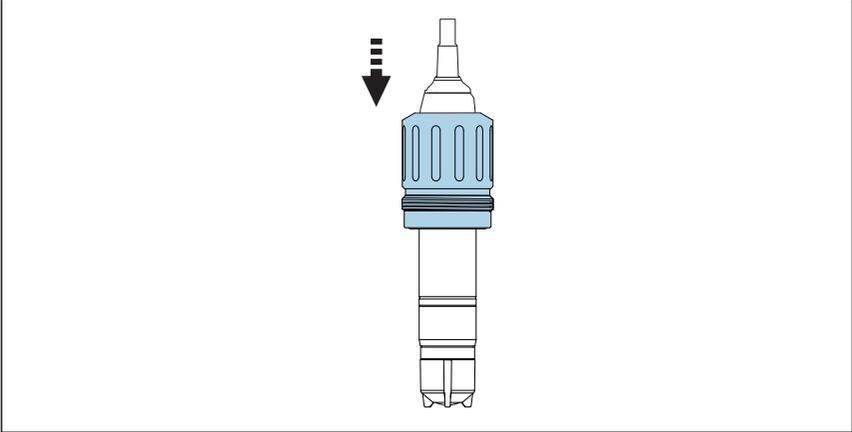

A0037051

-  10 Slide on adapter for Flowfit CCA250.

2. Fix the adapter with the 2 stud screws supplied and an Allen screw (2 mm).
3. Screw the sensor into the assembly.

 For detailed information on "Installing sensor in Flowfit CCA250 assembly", see Operating Instructions for assembly

5.2.5 Installing the sensor in other flow assemblies

When using other flow assemblies, please ensure the following:

- ▶ A flow velocity of at least 15 cm/s (0.49 ft/s) must always be ensured at the membrane.
- ▶ The flow direction is upwards. Transported air bubbles must be removed so that they do not collect in front of the membrane.
- ▶ The flow must be directed to the membrane.




5.2.6 Installing the sensor in the CYA112 immersion assembly

Alternatively, the sensor can be installed in an immersion assembly with a G1 threaded connection.

Equipping sensor with adapter

The required adapter can be ordered as a mounted sensor accessory or as a separate accessory. →  40

1. Slide adapter for Flexdip CYA112 from the sensor head up to the stop on the sensor.

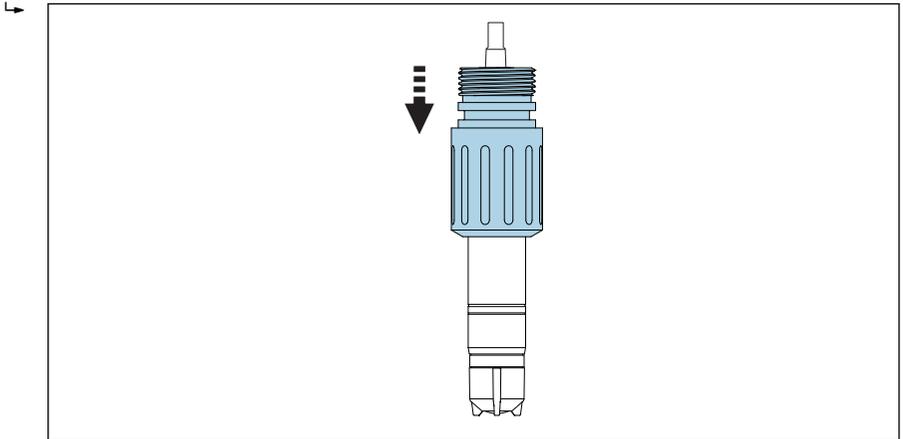

A0037053

 11 Slide on adapter for Flexdip CYA112.

2. Fix the adapter with the 2 stud screws supplied and an Allen screw (2 mm).
3. Screw the sensor into the assembly. The use of a quick release fastener is recommended.



For detailed information on "Installing sensor in Flexdip CYA112 assembly", see Operating Instructions for assembly

5.3 Post-installation check

1. Is the adapter locked in place and unable to move freely?
2. Is the sensor installed in an assembly and not freely suspended from the cable?
 - ↳ Install the sensor in an assembly or directly via the process connection.
3. Is the membrane cap leak-tight?
 - ↳ Screw tight or replace.
4. Is the membrane intact and lying flat: Is the membrane bulging slightly (not flat)?
5. Is there electrolyte in the membrane cap?
 - ↳ If necessary, refill the membrane cap with electrolyte.

6 Electrical connection

⚠ CAUTION

Device is live

Incorrect connection may result in injury!

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

6.1 Connecting the sensor

NOTICE


Measured errors due to faulty connection

- ▶ When connecting the sensor cable, make sure that the black semi-conductor layer is removed as far as the inner shield.

The sensors have a fixed cable with a maximum length of 3 m (9.8 ft).

- ▶ Connect the sensors to the transmitter according to the following diagram:

Sensor: assignment	Sensor: core	Transmitter: terminal
Outer shield		S
Counter electrode	[A] red	91
Working electrode	[K] transparent	90
NTC temperature sensor	Green	11
NTC temperature sensor	Brown	12

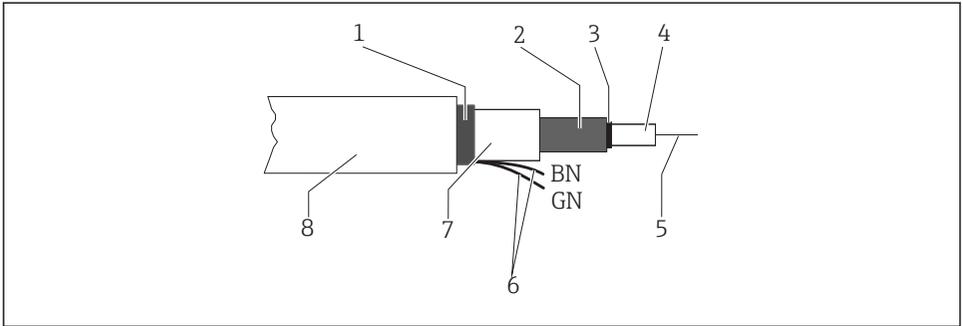

A0036973

12 Structure of the sensor cable

- 1 Outer shield
- 2 Inner shield, counter electrode
- 3 Semi-conductor layer
- 4 Inner insulation
- 5 Inner conductor, measured signal
- 6 Temperature sensor connection
- 7 2nd insulation
- 8 Outer insulation

6.2 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

- Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example to covers being left off or cable (ends) that are loose or insufficiently secured.

6.3 Post-connection check

Device condition and specifications	Notes
Are the sensor, assembly, or cables free from damage on the outside?	Visual inspection
Electrical connection	Notes
Are the mounted cables strain-relieved and not twisted?	
Is a sufficient length of the cable cores stripped, and are the cores positioned in the terminal correctly?	Check the fit (by pulling gently)
Are all the screw terminals properly tightened?	Tighten
Are all the cable entries installed, tightened and sealed?	For lateral cable entries, make sure the cables loop downwards to allow water to drip off
Are all cable entries installed downwards or mounted laterally?	

7 Commissioning

7.1 Function check

Prior to initial commissioning, ensure that:

- The sensor is correctly installed.
- The electrical connection is correct.
- There is sufficient electrolyte in the membrane cap and the transmitter is not displaying a warning about electrolyte depletion.



Please note the information on the safety data sheet to ensure safe use of the electrolyte.



Always keep the sensor moist after commissioning.

⚠ WARNING

Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards

- ▶ Before applying pressure to an assembly with cleaning system, ensure that the system has been connected correctly.
- ▶ Do not install the assembly in the process if you cannot reliably establish the correct connection.

7.2 Selecting the sensor type at the transmitter



The settings and calibration for the Liquisys CCM223/253 transmitter are the same as CCS240/241.

Coding	Field	Range of adjustment (factory settings in bold)	Display	Info
A	SETUP 1 function group		<p>A0007824-EN</p>	Configuration of basic functions
A1	Select the connected sensor type	120 = CCS120 140 = CCS140 240 = CCS240 241 = CCS241 963 50-AD = CCS50 Trace 50-BF = CCS50 Standard 51-AD = CCS51 Trace 51-BF = CCS51 Standard	<p>A0001954-EN</p>	If the device is reset in field S9, the configured sensor type is not modified.

7.3 Sensor polarization

The voltage applied by the transmitter between the working electrode and counter electrode polarizes the surface of the working electrode. Therefore, after switching on the transmitter with the sensor connected, you must wait until the polarization period has elapsed before starting calibration.

To achieve a stable display value, the sensor requires the following polarization periods:

Initial commissioning	60 min
Recommissioning	30 min

7.4 Sensor calibration

Reference measurement according to the DPD method

To calibrate the measuring system, carry out a colorimetric comparison measurement in accordance with the DPD method for chlorine dioxide. Chlorine dioxide reacts with diethyl-p-phenylendiamine (DPD) to form a red dye, the intensity of the red color being proportional to the chlorine dioxide content.

Measure the intensity of the red color using a photometer, e.g. PF-3 (→  40). The photometer indicates the chlorine dioxide content.

If the photometer used indicates the presence of chlorine, follow the manufacturer's instructions to convert the chlorine content into the chlorine dioxide content.

Requirements

The sensor reading is stable (no drifts or unsteady values for at least 5 minutes), and the medium is stable. This is normally guaranteed once the following preconditions have been met:

- The polarization period has elapsed.
- The flow is constant and within the correct range.
- The sensor and the medium are at the same temperature.
- The pH value is within the permitted range.
- Optional:
For zero point adjustment: electrolyte has been replaced (→  33)

Zero point adjustment

A zero point adjustment is not required due to the zero point stability of the membrane-covered sensor.

However, a zero point adjustment can be performed if desired.

1. To perform a zero point adjustment, operate the sensor for at least 15 minutes in chlorine-free water, using the assembly or protection cap as a vessel.
2. Alternatively, perform the zero point adjustment using the zero point gel COY8 →  40.

Slope calibration

- i** Always perform a slope calibration in the following cases:
- After replacing the membrane cap
 - After replacing electrolyte
 - After the membrane cap has been screwed back on
1. Ensure that the temperature of the medium is constant.
 2. Take a representative sample for the DPD measurement. This must be done in close proximity to the sensor. Use the sampling tap if available.
 3. Determine the chlorine dioxide content using the DPD method.
 4. Enter the measured value into the transmitter (see Operating Instructions for transmitter).
 5. To ensure greater accuracy, check the calibration several hours or 24 hours later using the DPD method.

8 Diagnostics and troubleshooting

When troubleshooting, the entire measuring point must be taken into account. This comprises:

- Transmitter
- Electrical connections and lines
- Assembly
- Sensor

The possible causes of error in the following table refer primarily to the sensor. Before commencing troubleshooting, ensure that the following operating conditions have been met:

- Constant temperature following calibration
- Flow rate of at least 15 cm/s (0.5 ft/s) (when using the Flowfit CCA151 flow assembly)
- No organic chlorination agents are used



If the value measured by the sensor differs significantly from that of the DPD method, first consider all possible malfunctions of the photometric DPD method (see Operating Instructions for photometer). If necessary, repeat the DPD measurement several times.

Error	Possible cause	Remedy
No display, no sensor current	No supply voltage at the transmitter	▶ Establish mains connection
	Connection cable between sensor and transmitter interrupted	▶ Establish cable connection
	There is no electrolyte in the membrane cap	▶ Fill membrane cap
	No input flow of medium	▶ Establish flow, clean filter
Display value too high	Polarization of the sensor not yet completed	▶ Wait for polarization to be completed
	Membrane defective	▶ Replace membrane cap
	Shunt resistance (e.g. moisture contact) in the sensor shaft	▶ Remove membrane cap, rub working electrode dry. ▶ If the transmitter display does not return to zero, there is a shunt present: replace sensor.
	Foreign oxidants interfering with sensor	▶ Examine medium, check chemicals

Error	Possible cause	Remedy
Display value too low	Membrane cap not screwed on fully	<ul style="list-style-type: none"> ▶ Fill membrane cap with fresh electrolyte → 📄 33 ▶ Screw membrane cap on fully
	Membrane soiled	▶ Clean membrane → 📄 32
	Air bubble in front of membrane	▶ Release air bubble
	Air bubble between working electrode and membrane	<ul style="list-style-type: none"> ▶ Remove membrane cap, top up electrolyte ▶ Remove air bubble by tapping on the outside of the membrane cap ▶ Screw on membrane cap
	Input flow of medium too low	▶ Establish correct flow
	Foreign oxidants interfering with DPD reference measurement	▶ Examine medium, check chemicals
	Use of organic disinfectants	<ul style="list-style-type: none"> ▶ Use suitable agent (e.g. as per DIN 19643) (water may need to be replaced first) ▶ Use suitable reference system.
Display fluctuates considerably	Hole in membrane Electromagnetic interferences	<ul style="list-style-type: none"> ▶ Replace membrane cap ▶ Use grounding bar (order number 51501086). ▶ Grounding of the medium at sensor (connect PML to grounding potential)

9 Maintenance



Please note the information on the safety data sheet to ensure safe use of the electrolyte.

Take all the necessary precautions in time to ensure the operational safety and reliability of the entire measuring system.

NOTICE

Effects on process and process control!

- ▶ When carrying out any work on the system, bear in mind any potential impact this could have on the process control system and the process itself.
- ▶ For your own safety, only use genuine accessories. With genuine parts, the function, accuracy and reliability are also ensured after maintenance work.

9.1 Maintenance schedule

Interval	Maintenance work
If deposits are visible on the membrane (biofilm, limescale)	Clean sensor membrane → 33
If dirt is visible on the surface of the electrode body	Clean electrode body of sensor → 33
<ul style="list-style-type: none"> ▪ Slope depending on application: <ul style="list-style-type: none"> ▪ Every 12 months (at maximum) under constant conditions in the permitted range of 0 to 55 °C (32 to 131 °F) ▪ In the case of severe temperature fluctuations, e.g. from 10 °C (50 °F) to 25 °C (77 °F) and back 100 times ▪ Zero point calibration: <ul style="list-style-type: none"> ▪ If operated in concentration range below 0.5 mg/l (ppm) ▪ If negative measured value is displayed with factory calibration 	Sensor calibration
<ul style="list-style-type: none"> ▪ If cap is replaced ▪ For determining the zero point ▪ If the slope is too low or too high relative to the nominal slope and the membrane cap is not visibly damaged or dirty 	Fill membrane cap with fresh electrolyte → 33
<ul style="list-style-type: none"> ▪ If there are grease/oil deposits (dark or transparent spots on the membrane) ▪ If slope is too high or too low or sensor current is very noisy ▪ If it is obvious that the sensor current is significantly dependent on the temperature (temperature compensation not working). 	Replace membrane cap → 34
If changes are visible on the working electrode or counter electrode (brown coating no longer present)	Regenerate sensor → 37

9.2 Maintenance tasks

9.2.1 Cleaning the sensor

CAUTION

Diluted hydrochloric acid

Hydrochloric acid causes irritation if it comes into contact with the skin or eyes.

- ▶ When using diluted hydrochloric acid, wear protective clothing such as gloves and goggles.
- ▶ Avoid splashes.

NOTICE


Chemicals that reduce surface tension (e.g. surfactants in cleaning agents or organic solvents such as alcohol that can be mixed with water)

Chemicals that reduce the surface tension cause the sensor membrane to lose its special property and protective function, which results in measured errors.

- ▶ Do not use any chemicals that reduce surface tension.

Removing the sensor from assembly CCA151

1. Remove the cable.
2. Unscrew the union nut from the assembly.

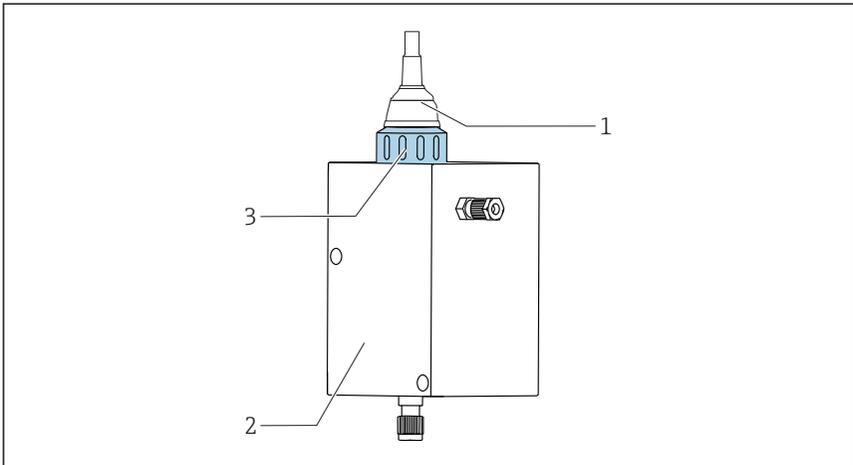

A0037049

- 1 Disinfection sensor CCS50
- 2 Flowfit CCA151 flow assembly
- 3 Union nut for securing a disinfection sensor CCS50

3. Pull sensor out through opening in assembly.

Removing the sensor from assembly CCA250

1. Remove the cable.

2. Unscrew the sensor, along with the adapter, from the assembly.



The adapter does not need to be disassembled.



For detailed information on "Removing sensor from assembly CCA250", see Operating Instructions for assembly.

Removing the sensor from assembly CYA112

1. Remove the cable.
2. Unscrew the sensor, along with the adapter, from the assembly.



The adapter does not need to be disassembled.



For detailed information on "Removing sensor from assembly CYA112", see Operating Instructions for assembly.

Cleaning the sensor membrane

If the membrane is visibly dirty, e.g. biofilm, proceed as follows:

1. Remove sensor from flow assembly → 32.
2. Remove membrane cap → 34.
3. Clean the membrane cap mechanically only using a gentle water jet. Alternatively, clean for several minutes in diluted acids or in specified cleaning agents without any further chemical additives.
4. Then rinse thoroughly with water.
5. Screw membrane cap back onto sensor → 34.

Cleaning the electrode body

1. Remove sensor from flow assembly → 32.
2. Remove membrane cap → 34.
3. Wipe gold electrode carefully using a soft sponge.
4. Rinse electrode body with demineralized water, alcohol or acid.
5. Screw membrane cap back onto sensor → 34.

9.2.2 Filling the membrane cap with fresh electrolyte



Please note the information on the safety data sheet to ensure safe use of the electrolyte.

NOTICE**Damage to membrane and electrodes, air bubbles**

Possibility of measured errors to complete failure of the measuring point

- ▶ Avoid damage to membrane and electrodes.
- ▶ The electrolyte is chemically neutral and is not hazardous to health. Nonetheless, do not swallow it and avoid contact with eyes.
- ▶ Keep the electrolyte bottle closed after use. Do not transfer electrolyte to other vessels.
- ▶ Do not store electrolyte for longer than 2 years. The electrolyte must not be yellow in color. Observe the use-by date on the label.
- ▶ Avoid air bubbles when pouring electrolyte into membrane cap.

Filling the membrane cap with electrolyte


1. Remove membrane cap →  35.
2. Approx. 7 ml (0.24 fl.oz) Fill the membrane cap with electrolyte until it is level with the start of the internal thread.
3. Slowly screw on membrane cap up to the stop →  33. This will cause excess electrolyte to be displaced at the valve and thread.
4. If necessary, pat the sensor and membrane cap dry using a cloth.

9.2.3 Replacing the membrane cap

1. Remove sensor from flow assembly →  32.
2. Remove membrane cap →  35.
3. Pour fresh electrolyte into the new membrane cap until it is level with the start of the internal thread.
4. Check if the sealing ring is mounted in the membrane cap.
5. Screw new membrane cap onto sensor shaft →  36.
6. Screw on membrane cap until the membrane at the working electrode is slightly overstretched (1 mm (0.04 in)).


Removing the membrane cap

- ▶ Carefully rotate membrane cap and remove.

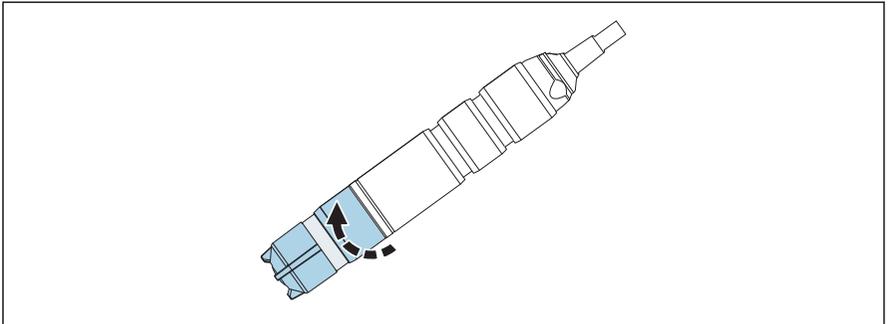

A0037054

- ▣ 13 Carefully rotate membrane cap.

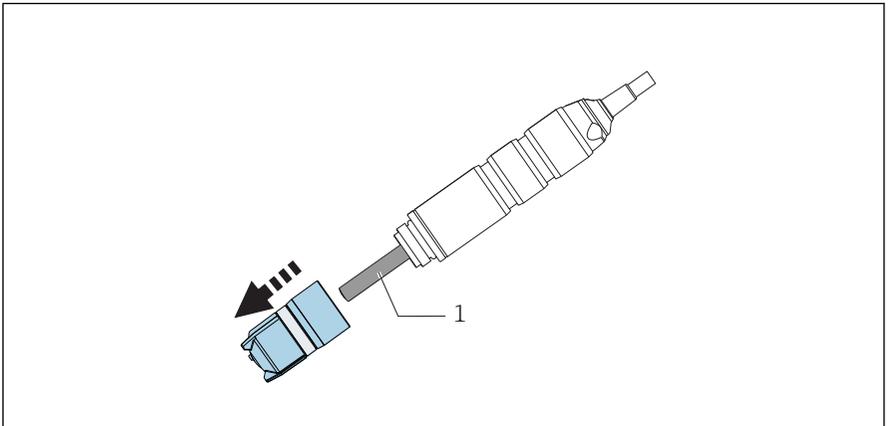


A0037055

- ▣ 14 Carefully remove membrane cap.

1 Electrode body

Screwing the membrane cap onto the sensor

- Screw membrane cap onto sensor shaft: hold sensor by the shaft. Keep valve clear.

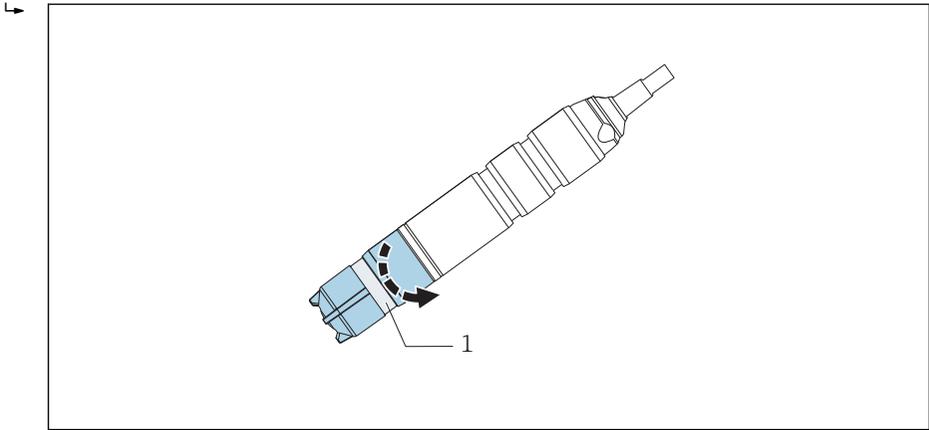

A0037056

 15 Screw on membrane cap: keep pressure relief valve clear.

1 Pressure relief valve

9.2.4 Storing the sensor

If measurement is suspended for a short period of time and it can be guaranteed that the sensor will be kept moist while in storage:

1. If the assembly is guaranteed not to empty out, you may leave the sensor in the flow assembly.
2. If there is a possibility that the assembly may empty out, remove the sensor from assembly .
3. To keep the membrane moist after the sensor has been removed, refill the protection cap with electrolyte or clean water.
4. Fit protection cap on sensor →  37.


During longterm interruptions to measurement, particularly if dehydration is possible:

1. Remove sensor from assembly.
2. Clean sensor shaft and membrane cap with cold water and leave to dry.
3. Loosely screw on membrane cap up to the stop. This ensures that the membrane remains slack.
4. Pour electrolyte or clean water into protection cap and attach →  36.
5. For recommissioning, follow the same procedure as for commissioning →  26.

 Ensure that no biofouling occurs during longer interruptions to measurement. Remove continuous organic deposits, such as films of bacteria.

Fitting the protection cap on the sensor


1. To keep the membrane moist after the sensor has been removed, fill the protection cap with some electrolyte or clean water.

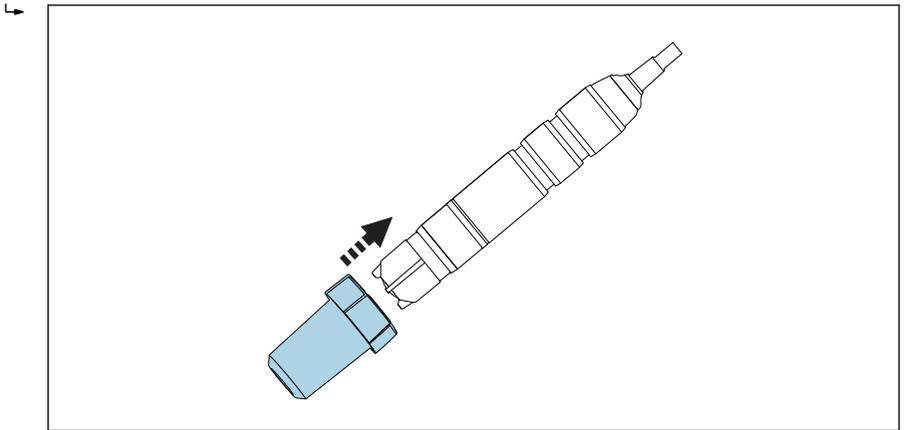

A0037044

 16 Carefully slide protection cap onto the membrane cap.

2. Top part of protection cap is in the open position. Carefully slide protection cap onto the membrane cap.
3. Secure protection cap by rotating the top part of the protection cap.

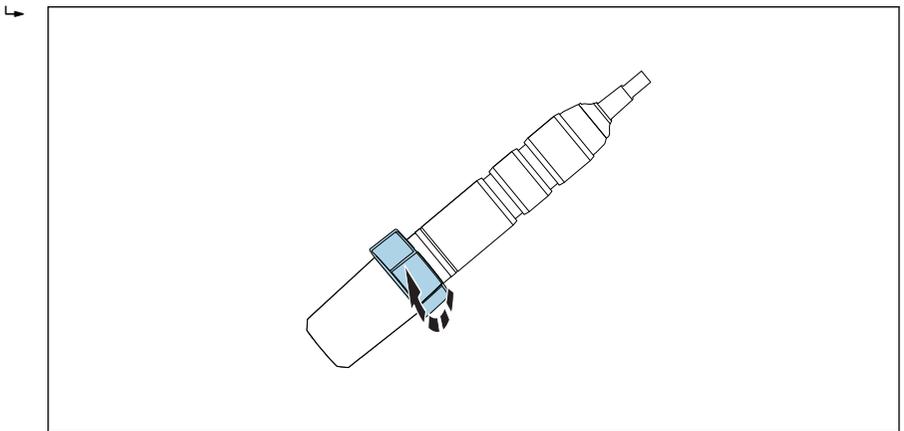

A0037047

 17 Securing protection cap by rotating the top part

9.2.5 Regenerating the sensor

During measurement, the electrolyte in the sensor is gradually exhausted due to chemical reactions. The gray-brown silver chloride layer that is applied to the counter electrode at the factory continues to grow during sensor operation. However, this has no effect on the reaction taking place at the working electrode.

A change in the color of the silver chloride layer indicates an effect of the reaction that is taking place. Carry out a visual inspection to ensure that the gray-brown color of the counter electrode has not changed. If the color of the counter electrode has changed, e.g. if it is spotted, white or silvery, the sensor must be regenerated.

- ▶ Send the sensor to the manufacturer for regeneration.

10 Repair

10.1 Spare parts

For more detailed information on spare parts kits, please refer to the "Spare Part Finding Tool" on the Internet:

www.endress.com/spareparts_consumables

10.2 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

- ▶ Refer to the website www.endress.com/support/return-material for information on the procedure and conditions for returning devices.

10.3 Disposal

- ▶ Please observe local regulations!

11 Accessories

The following are the most important accessories available at the time this documentation was issued.

- ▶ For accessories not listed here, please contact your Service or Sales Center.

11.1 Maintenance kit CCV05

Order according to product structure

- 2 x membrane caps and 1 x electrolyte 50 ml (1.69 fl.oz)
- 1 x electrolyte 50 ml (1.69 fl.oz)
- 2 x sealing set

11.2 Device-specific accessories

Flowfit CCA151

- Flow assembly for disinfection sensors
- Product Configurator on the product page: www.endress.com/cca151



Technical Information TI01357C

Flowfit CCA250

- Flow assembly for disinfection and pH/ORP sensors
- Product Configurator on the product page: www.endress.com/cca250



Technical Information TI00062C

Flexdip CYA112

- Immersion assembly for water and wastewater
- Modular assembly system for sensors in open basins, channels and tanks
- Material: PVC or stainless steel
- Product Configurator on the product page: www.endress.com/cya112



Technical Information TI00432C

Photometer PF-3

- Compact hand-held photometer for determining the reference measured value
- Color-coded reagent bottles with clear dosing instructions
- Order No.: 71257946

Kit adapter CCS5xD for CCA151

- Clamping ring
- Thrust collar
- O-ring
- Order No. 71372027

Adapter kit CCS5x(D) for CCA250

- Adapter incl. O-rings
- 2 studs for locking in place
- Order No. 71372025

Adapter kit CCS5x(D) for CYA112

- Adapter incl. O-rings
- 2 studs for locking in place
- Order No. 71372026

COY8

Zero-point gel for oxygen and disinfection sensors

- Oxygen-free and chlorine-free gel for the verification, zero point calibration and adjustment of oxygen and disinfection measuring points
- Product Configurator on the product page: www.endress.com/coy8



Technical Information TI01244C

12 Technical data

12.1 Input

12.1.1 Measured values

Chlorine dioxide (ClO ₂)	[mg/l, µg/l, ppm, ppb]
Temperature	[°C, °F]

12.1.2 Measuring ranges

CCS50-**11AD*	0 to 5 mg/l (ppm) ClO ₂
CCS50-**11BF*	0 to 20 mg/l (ppm) ClO ₂

12.1.3 Signal current

CCS50-**11AD*	135 to 250 nA per 1 mg/l (ppm) ClO ₂
CCS50-**11BF*	35 to 65 nA per 1 mg/l (ppm) ClO ₂

12.2 Performance characteristics

12.2.1 Reference operating conditions

Temperature	20 °C (68 °F)
pH value	pH 6 to 7
Flow	40 to 60 cm/s
ClO ₂ -free base medium	Deionized water

12.2.2 Response time

T₉₀ < 15 s (after completing polarization)

12.2.3 Measured value resolution of sensor

CCS50-**11AD*	0.03 µg/l (ppb) ClO ₂
CCS50-**11BF*	0.13 µg/l (ppb) ClO ₂

12.2.4 Maximum measured error

$\pm 2\%$ and $\pm 5\ \mu\text{g/l}$ (ppb) of value measured (depending on which value is higher)

	LOD (limit of detection) ¹⁾	LOQ (limit of quantification) ¹⁾
CCS50-**11AD*	0.0007 mg/l (ppm)	0.002 mg/l (ppm)
CCS50-**11BF*	0.0013 mg/l (ppm)	0.004 mg/l (ppm)

1) Based on ISO 15839. The measured error includes all the uncertainties of the sensor and transmitter (electrode system). It does not contain all the uncertainties caused by the reference material and adjustments that may have been performed.

12.2.5 Repeatability

CCS50-**11AD*	0.002 mg/l (ppm)
CCS50-**11BF*	0.007 mg/l (ppm)

12.2.6 Nominal slope

CCS50-**11AD*	195 nA per 1 mg/l (ppm) ClO_2
CCS50-**11BF*	50 nA per 1 mg/l (ppm) ClO_2

12.2.7 Long-term drift

< 1 % per month (mean value, determined while operating at varying concentrations and under reference conditions)

12.2.8 Polarization time

Initial commissioning	60 min
Recommissioning	30 min

12.2.9 Operating time of the electrolyte

at 10 % of measuring range and 20 °C	2 years
at 50 % of measuring range and 20 °C	1 year
at maximum concentration and 55 °C	60 days

12.3 Environment

12.3.1 Ambient temperature

-20 to 60 °C (-4 to 140 °F)

12.3.2 Storage temperature

	Long-term storage up to 2 years (maximum)	Storage up to 48 h (maximum)
With electrolyte	0 to 35 °C (32 to 95 °F) (non-freezing)	35 to 50 °C (95 to 122 °F)
Without electrolyte	-20 to 60 °C (-4 to 140 °F)	

12.3.3 Degree of protection

IP68 (1.8 m (5.91 ft)) water column over 7 days at 20 °C (68 °F)

12.4 Process

12.4.1 Process temperature

0 to 55 °C (32 to 130 °F), non-freezing

12.4.2 Process pressure

The inlet pressure depends on the specific fitting and installation.

The measurement can take place with a free outlet.

The sensor can be operated at process pressures up to 1 bar (14.5 psi) (2 bar abs. (29 psi abs.)).

- In terms of sensor condition and performance, it is essential that the flow velocity limits specified in the following table be observed.

	Flow velocity [cm/s]	Volume flow [l/h]		
		Flowfit CCA250	Flowfit CCA151	Flexdip CYA112
Minimum	15	30	5	The sensor is suspended freely in the medium; pay attention to the minimum flow velocity of 15 cm/s during installation.
Maximum	80	120	20	

12.4.3 pH range

Stability range of chlorine dioxide (ClO₂) pH 2 to 10¹⁾

Calibration pH 4 to 8

Measurement pH 4 to 9

From pH values > 9, ClO₂ is unstable and decomposes.

1) Up to pH 3.5 and in the presence of chloride ions (Cl⁻), free chlorine is produced and included in the measurement

12.4.4 Flow

At least 5 l/h (1.3 gal/h), in the Flowfit CCA151 flow assembly

At least 30 l/h (7.9 gal/h), in the Flowfit CCA250 flow assembly

12.4.5 Inflow

At least 15 cm/s (0.5 ft/s) , e.g. with Flexdip CYA112 immersion assembly

12.5 Mechanical construction

12.5.1 Dimensions

→  15

12.5.2 Weight

Sensor with membrane cap and electrolyte (without protection cap and adapter)	
with 0.6 m (1.97 ft) cable	Approx. 121 g (4.27 oz)
with 1 m (3.28 ft) cable	Approx. 135 g (4.76 oz)
with 3 m (9.84 ft) cable	Approx. 253 g (8.92 oz)

12.5.3 Materials

Sensor shaft	POM or PVC
Cable sheathing	PVC
Membrane	PVDF
Membrane cap	PVDF
Protection cap	<ul style="list-style-type: none"> ■ Vessel: PC Makrolon (polycarbonate) ■ Seal: Kraiburg TPE TM5MED ■ Cover: PC Makrolon (polycarbonate)
Sealing ring	FKM
Sensor shaft coupling	PPS

12.5.4 Cable specification

max. 3 m (9.84 ft)

Index

A

Accessories	40
Ambient temperature	43

C

Cable specification	45
Check	
Connection	25
Function	26
Installation	23
Cleaning	32
Connection	
Check	25
Ensuring the degree of protection	25

D

Declaration of Conformity	13
Degree of protection	
Ensuring	25
Technical data	44
Designated use	6
Device description	8
Diagnostics	29
Disposal	39

E

Effect on the measured signal	
Flow	9
pH value	9
Temperature	10
Electrical connection	24
Environment	43

F

Flow	9, 44
Flow assembly	21, 22
Function check	26

I

Immersion assembly	22
Incoming acceptance	12
Inflow	45
Installation	
Check	23
Flow assembly	21

Immersion assembly	22
Orientation	14
Sensor	16
Installation check	26

L

Long-term drift	43
---------------------------	----

M

Maintenance schedule	31
Maintenance tasks	32
Materials	45
Maximum measured error	43
Measured signal	9
Measured value resolution	42
Measured values	42
Measuring principle	8
Measuring ranges	42
Measuring system	16
Mounting instructions	14

N

Nameplate	12
Nominal slope	43

O

Operating principle	8
Operating time of the electrolyte	43
Orientation	14

P

Performance characteristics	42
pH range	44
pH value	9
Polarization time	43
Process	44
Process pressure	44
Process temperature	44

R

Reference operating conditions	42
Regeneration	37
Repair	39
Repeatability	43
Response time	42
Return	39

S

Safety instructions	6
Scope of delivery	13
Sensor	
Calibration	27
Cleaning	32
Connecting	24
Mounting	16
Polarization	27
Regenerating	37
Storage	36
Spare parts	39
Storage	36
Storage temperature	44
Symbols	4

T

Technical data	
Environment	43
Input	42
Mechanical construction	45
Performance characteristics	42
Process	44
Temperature	10
Troubleshooting	29

U

Use	6
---------------	---

W

Warnings	4
Weight	45



71489166

www.addresses.endress.com
