


Kit 71242170: CUA252 Air bubble trap

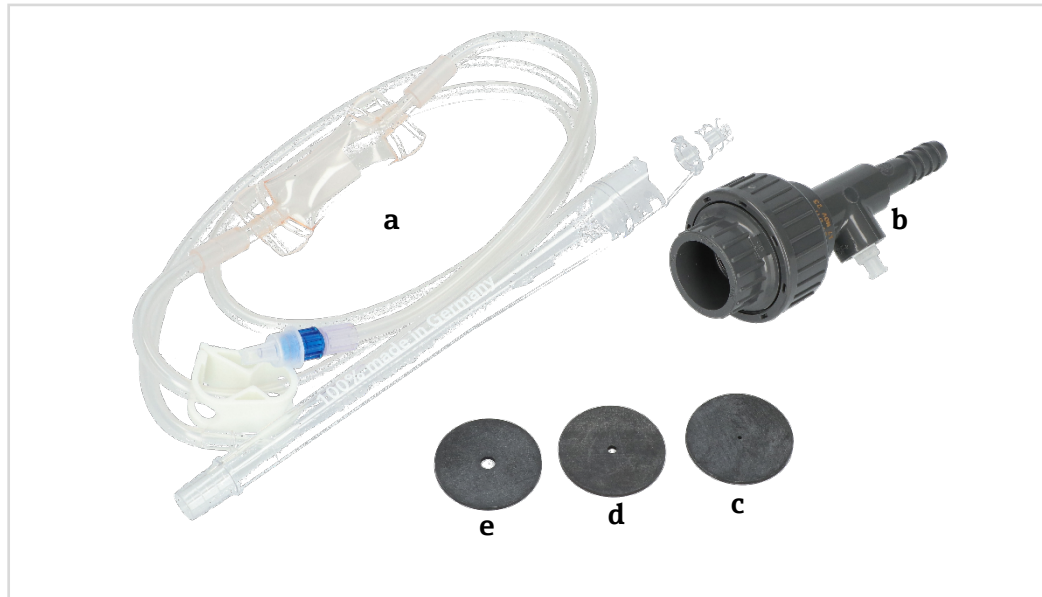

Select the correct orifice plate and insert it into the upper process connection of the flow assembly to get the desired volume flow rate:

- 1 mm for volume flow rate < 60 l/h (15.8 gal/hr)
- 3 mm for volume flow rate 60 to 100 l/h (15.8 to 26.4 gal/hr)
- 5 mm for volume flow rate > 100 l/h (26.4 gal/hr)

Kit Content	Pcs.	Pos.
Air bubble trap	1	a
Connection air bubble trap CUA252	1	b
Orifice plate 1 mm	1	c
Orifice plate 3 mm	1	d
Orifice plate 5 mm	1	e