
Brief Operating Instructions Proline 500 PROFIBUS PA


Transmitter with Coriolis sensor



These instructions are Brief Operating Instructions; they are **not** a substitute for the Operating Instructions pertaining to the device.

Transmitter Brief Operating InstructionsContain information about the transmitter.

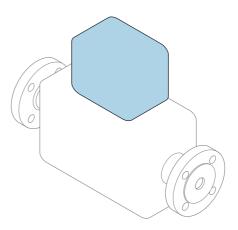

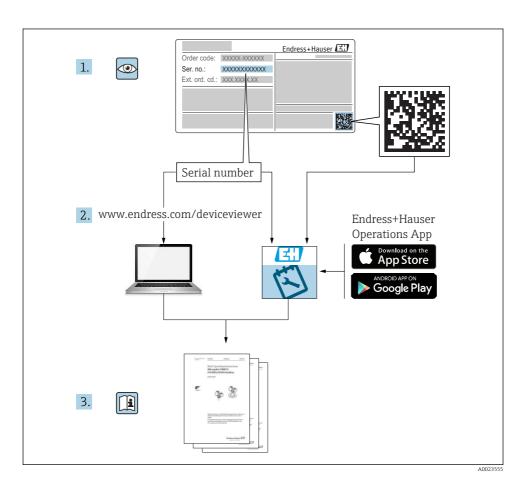

Brief Operating Instructions for the device

The device consists of a transmitter and a sensor.

The process of commissioning these two components is described in two separate manuals:

- Sensor Brief Operating Instructions
- Transmitter Brief Operating Instructions

Please refer to both Brief Operating Instructions when commissioning the device as the contents of the manuals complement one another:

Sensor Brief Operating Instructions

The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device.

- Incoming acceptance and product identification
- Storage and transport
- Installation

Transmitter Brief Operating Instructions

The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value).

- Product description
- Installation
- Electrical connection
- Operation options
- System integration
- Commissioning
- Diagnostic information

Additional device documentation



These Brief Operating Instructions are the **Transmitter Brief Operating Instructions**.

The "Sensor Brief Operating Instructions" are available via:

- Internet: www.endress.com/deviceviewer
- Smart phone/tablet: Endress+Hauser Operations App

Detailed information about the device can be found in the Operating Instructions and the other documentation:

- Internet: www.endress.com/deviceviewer
- Smart phone/tablet: Endress+Hauser Operations App

Table of contents

1 1.1	About this document Symbols used	
2.1 2.2 2.3	Basic safety instructions Requirements for the personnel Designated use Workplace safety	7 7
2.5 2.4 2.5	Volkplace salety Operational safety Product safety	8
2.6 2.7	IT security	9
3	Product description	. 10
4	Installation	
4.1	Mounting the transmitter housing	
4.2	Turning the transmitter housing	
4.3 4.4	Turning the display module	
5	Electrical connection	16
5.1	Connection conditions	
5.2	Connecting the measuring device	
5.3 5.4	Ensuring potential equalization	
5.4 5.5	Hardware settings	
5.6	Post-connection check	
6	Operation options	
6.1	Overview of operation options	
6.2 6.3	Structure and function of the operating menu	
6.4	Access to the operating menu via the local display Access to the operating menu via the operating tool	
6.5	Access to the operating menu via the Web server	
7	System integration	34
8	Commissioning	
8.1	Function check	
8.2	Setting the operating language	
8.3 8.4	Configuring the measuring device	
9	Diagnostic information	37

Proline 500 PROFIBUS PA About this document

1 About this document

1.1 Symbols used

1.1.1 Safety symbols

Symbol	Meaning
▲ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
▲ WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
A CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.1.2 Symbols for certain types of information

Symbol	Meaning	Symbol	Meaning
~	Permitted Procedures, processes or actions that are permitted.	✓ ✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.	i	Tip Indicates additional information.
Ţ <u>i</u>	Reference to documentation	A	Reference to page
	Reference to graphic	1., 2., 3	Series of steps
L_	Result of a step		Visual inspection

1.1.3 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current	~	Alternating current
≂	Direct current and alternating current	÷	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

About this document Proline 500 PROFIBUS PA

Symbol	Meaning
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.
	The ground terminals are situated inside and outside the device: Inner ground terminal: Connects the protectiv earth to the mains supply. Outer ground terminal: Connects the device to the plant grounding system.

1.1.4 Communication symbols

Symbol	Meaning	Symbol	Meaning
(i:-	Wireless Local Area Network (WLAN) Communication via a wireless, local network.		LED Light emitting diode is off.
-\$-	LED Light emitting diode is on.	*	LED Light emitting diode is flashing.

1.1.5 Tool symbols

Symbol	Meaning	Symbol	Meaning
Torx screwdriver		0	Flat blade screwdriver
96	Cross-head screwdriver		Allen key
Ø.	Open-ended wrench		

1.1.6 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,	1, 2, 3, Item numbers		Series of steps
A, B, C,	A, B, C, Views		Sections
EX	Hazardous area Safe are		Safe area (non-hazardous area)
≋➡	Flow direction		

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel must fulfill the following requirements for its tasks:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

2.2 Designated use

Application and media

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ► Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ► Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation.
- Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ► Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

Basic safety instructions Proline 500 PROFIBUS PA

NOTICE

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks



The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

► For elevated fluid temperatures, ensure protection against contact to prevent burns.

A WARNING

Danger from medium escaping!

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

► Take precautions to prevent injury and material damage if the rupture disk is actuated.

2.3 Workplace safety

For work on and with the device:

► Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

Proline 500 PROFIBUS PA Basic safety instructions

2.6 IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

2.7 **Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and quarantee greater in-operation safety if used correctly.



For detailed information on device-specific IT security, see the Operating Instructions for

2.7.1 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions quarantee the secure operation of the device in a network.


The use of relevant industrial standards and quidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

Product description Proline 500 PROFIBUS PA

3 Product description

The measuring system consists of a Proline 500 transmitter and a Proline Promass or Cubemass Coriolis sensor.

The transmitter and sensor are mounted in physically separate locations. They are interconnected via one connecting cable.

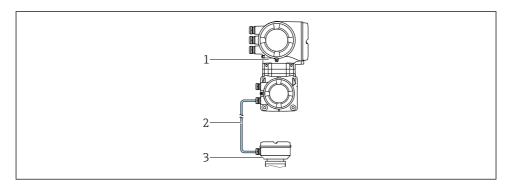

- 1 Transmitter with integrated ISEM (intelligent sensor electronics module)
- 2 Connecting cable: cable, separate
- 3 Sensor connection housing



For detailed information on the product description, see the Operating Instructions for the device

4 Installation



4.1 Mounting the transmitter housing

A CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ► Do not exceed the permitted maximum ambient temperature .
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

A CAUTION

Excessive force can damage the housing!


Avoid excessive mechanical stress.

Proline 500 PROFIBUS PA Installation

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting


4.1.1 Wall mounting

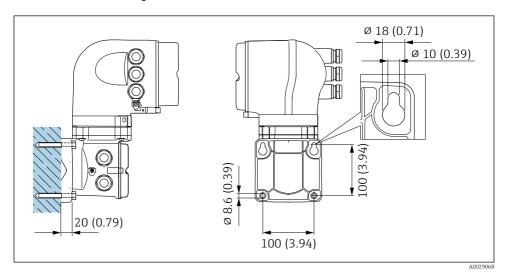

■ 1 Engineering unit mm (in)

Installation Proline 500 PROFIBUS PA

4.1.2 Post mounting

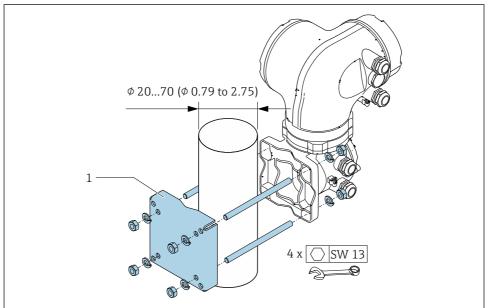


A0029057

■ 2 Engineering unit mm (in)

Proline 500 PROFIBUS PA Installation

4.2 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

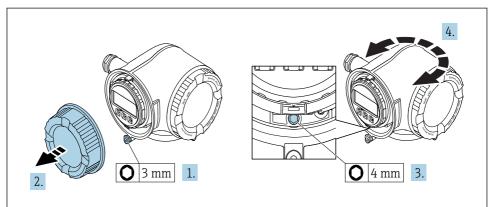


A0029993

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Release the fixing screw.
- 4. Turn the housing to the desired position.
- 5. Firmly tighten the securing screw.
- 6. Screw on the connection compartment cover
- 7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

Installation Proline 500 PROFIBUS PA

4.3 Turning the display module

The display module can be turned to optimize display readability and operability.

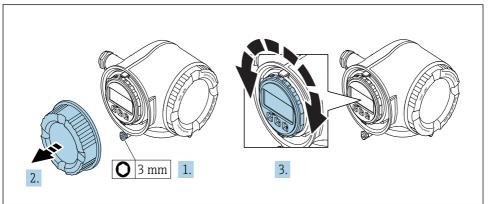

A0030035

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max. $8 \times 45^{\circ}$ in each direction.
- 4. Screw on the connection compartment cover.
- 5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

Proline 500 PROFIBUS PA Installation

4.4 Transmitter post-installation check

The post-installation check must always be performed after the following tasks:

- Mounting the transmitter housing:
 - Post mounting
 - Wall mounting
- Turning the transmitter housing
- Turning the display module

Is the device undamaged (visual inspection)? Turning the transmitter housing: Is the securing screw firmly tightened? Is the connection compartment cover screwed on tightly? Is the securing clamp firmly tightened? Turning the display module: Is the connection compartment cover screwed on tightly? Is the securing clamp firmly tightened? Post and wall mounting: Are the securing screws firmly tightened?		
■ Is the securing screw firmly tightened? ■ Is the connection compartment cover screwed on tightly? ■ Is the securing clamp firmly tightened? Turning the display module: ■ Is the connection compartment cover screwed on tightly? ■ Is the securing clamp firmly tightened? Post and wall mounting:	Is the device undamaged (visual inspection)?	
■ Is the connection compartment cover screwed on tightly? ■ Is the securing clamp firmly tightened? Turning the display module: ■ Is the connection compartment cover screwed on tightly? ■ Is the securing clamp firmly tightened? Post and wall mounting:	Turning the transmitter housing:	
■ Is the securing clamp firmly tightened? Turning the display module: ■ Is the connection compartment cover screwed on tightly? ■ Is the securing clamp firmly tightened? Post and wall mounting:	Is the securing screw firmly tightened?	
Turning the display module: Is the connection compartment cover screwed on tightly? Is the securing clamp firmly tightened? Post and wall mounting:	Is the connection compartment cover screwed on tightly?	
■ Is the connection compartment cover screwed on tightly? ■ Is the securing clamp firmly tightened? Post and wall mounting:	■ Is the securing clamp firmly tightened?	
■ Is the securing clamp firmly tightened? Post and wall mounting:	Turning the display module:	
Post and wall mounting:	Is the connection compartment cover screwed on tightly?	
	■ Is the securing clamp firmly tightened?	
Are the securing screws firmly tightened?	Post and wall mounting:	
	Are the securing screws firmly tightened?	

Electrical connection Proline 500 PROFIBUS PA

5 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ► For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ► Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

5.1 Connection conditions

5.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

5.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable \geq 2.08 mm² (14 AWG)

The grounding impedance must be less than 1 Ω .

Permitted temperature range

- The installation quidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
 M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules.
 Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Proline 500 PROFIBUS PA Electrical connection

Signal cable

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended .



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

5.1.3 Connecting cable

Standard cable	 Promass A, E, F, H, I, O, P, S, X and Cubemass C: 6 × 0.38 mm² PVC cable ¹⁾ with common shield and individually shielded cores Promass Q: 7 × 0.38 mm² PVC cable ¹⁾ with common shield and individually shielded cores
Conductor resistance	≤50 Ω/km (0.015 Ω/ft)
Capacitance: core/shield	<420 pF/m (128 pF/ft)
Cable length (max.)	20 m (65 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (32 ft), 20 m (65 ft)
Operating temperature	Max. 105 °C (221 °F)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

Electrical connection Proline 500 PROFIBUS PA

5.1.4 Terminal assignment


Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/o	utput 1	Input/o	utput 2	Input/o	output 3
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.					over.

Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.



5.1.5 Pin assignment of device plug

The device plug can be ordered as an optional extra.

	Pin	Assignment		Coding	Plug/socket
2 / 3	1	+	PROFIBUS PA +	A	Plug
	2		Grounding		
1 4	3	-	PROFIBUS PA -		
	4		Not assigned		

5.1.6 Preparing the measuring device

Carry out the steps in the following order:

- 1. Mount the sensor and transmitter.
- 2. Connection housing, sensor: Connect connecting cable.
- 3. Transmitter: Connect connecting cable.
- 4. Transmitter: Connect signal cable and cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.

Proline 500 PROFIBUS PA Electrical connection

3. If the measuring device is supplied with cable glands:

Observe requirements for connecting cables →

16.

Electrical connection Proline 500 PROFIBUS PA

5.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation

5.2.1 Connecting the connecting cable


A WARNING

Risk of damaging the electronic components!

- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- Ground the connection housing of the sensor via the external screw terminal.

Connecting cable terminal assignment

Terminal assignment of Promass A, E, H, I, O, P, S and Cubemass C

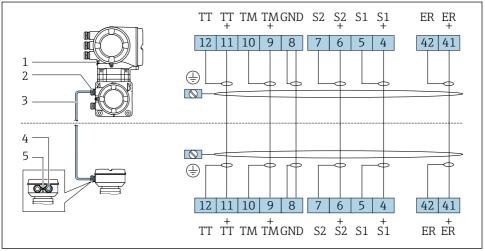


- 1 Protective ground (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- Connecting cable
- Cable entry for connecting cable on sensor connection housing

Protective ground (PE)

Proline 500 PROFIBUS PA Electrical connection

Terminal assignment of Promass F, Q, X

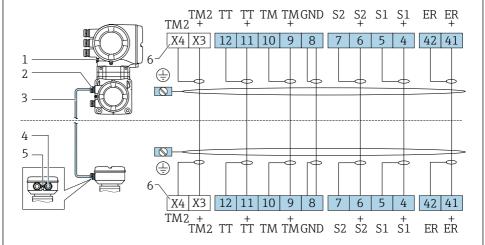

VUU33604

- 1 Protective ground (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Protective ground (PE)
- 6 Terminals X3, X4: temperature sensor; only for device version with order for "Test, certificate", option JQ


Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Housing"		Available for sensor	
Option B "Stainless"		Promass A, E, F, H, I, O, P, Q, SCubemass C	
Option L "Cast, stainless"		Promass F, H, I, O, Q, XCubemass C	

Connecting the connecting cable to the transmitter

Electrical connection Proline 500 PROFIBUS PA

Connecting the connecting cable to the transmitter

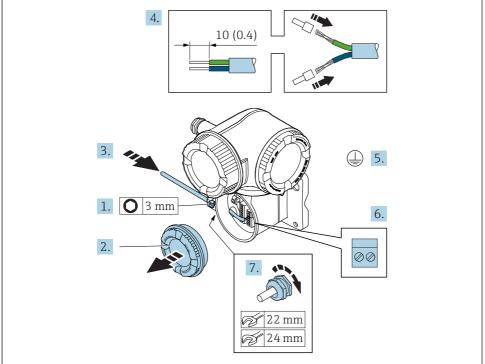


A0029592

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 5. Connect the protective ground.
- 7. Firmly tighten the cable glands.
 - ightharpoonup This concludes the process for connecting the connecting cable.
- 8. Screw on the connection compartment cover.
- 9. Tighten the securing clamp of the connection compartment cover.


Proline 500 PROFIBUS PA Electrical connection

5.2.2 Connecting the signal cable and the supply voltage cable

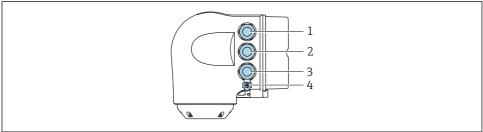

.


- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45)
- 4 Protective earth (PE)

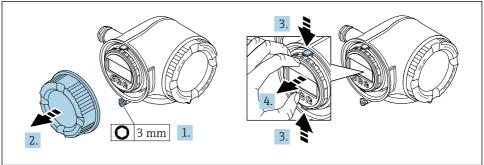

A0029813


- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

Electrical connection Proline 500 PROFIBUS PA

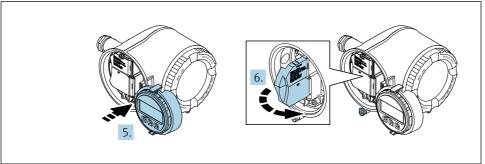

A0029814


- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

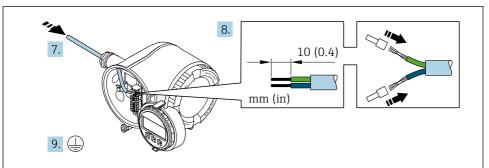

A0029815

- 7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 9. Connect the protective ground.

Proline 500 PROFIBUS PA Electrical connection

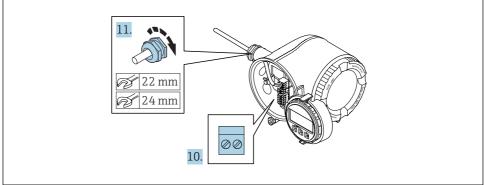

A0029816

- 10. Connect the cable in accordance with the terminal assignment.
- 11. Firmly tighten the cable glands.
 - ► This concludes the cable connection process.
- 12. Close the terminal cover.
- 13. Fit the display module holder in the electronics compartment.
- 14. Screw on the connection compartment cover.
- **15.** Secure the securing clamp of the connection compartment cover.

5.3 Ensuring potential equalization

5.3.1 Requirements

No special measures for potential equalization are required.

For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

Electrical connection Proline 500 PROFIBUS PA

5.4 Hardware settings

5.4.1 Setting the device address


The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

Risk of electric shock when opening the transmitter housing.

- ► Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

Hardware addressing




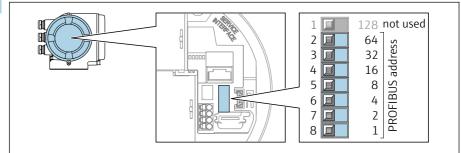

A0029637

Set the desired device address using the DIP switches in the connection compartment.

2.

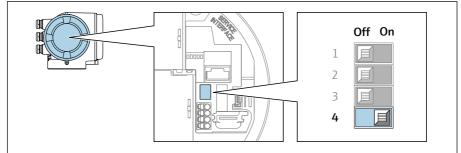

A0029633

To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.

 $\,\,\,\rule{0mm}{4em}\,\,$ The change of device address takes effect after 10 seconds. The device is restarted.

Proline 500 PROFIBUS PA Electrical connection

Software addressing

➤ To switch addressing from hardware addressing to software addressing: set DIP switch No. 4 to Off.


The device address configured in the **Device address** parameter takes effect after 10 seconds. The device is restarted.

5.4.2 Activating the default IP address

The default IP address 192.168.1.212 can be activated by DIP switch.

Risk of electric shock when opening the transmitter housing.

- ▶ Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

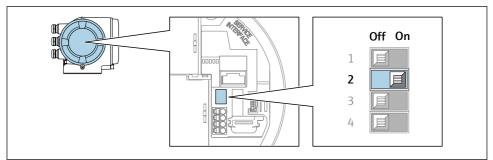

A0034499

▶ Set DIP switch No. 2 on the I/O electronics module from **OFF** \rightarrow **ON**.

5.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.


To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.

Electrical connection Proline 500 PROFIBUS PA

5. To ensure that moisture does not enter the cable entry:

Route the cable so that it loops down before the cable entry ("water trap").

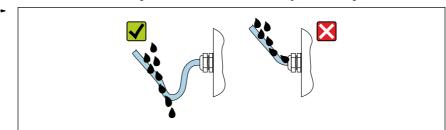

A0029278

6. Insert dummy plugs into unused cable entries.


5.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used meet the requirements?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 🖺 27?	

Proline 500 PROFIBUS PA Operation options

6 Operation options

6.1 Overview of operation options

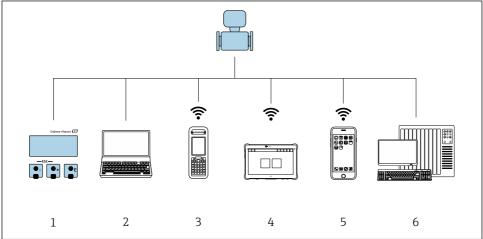


A0034513

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Xpert SMT70
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

Operation options Proline 500 PROFIBUS PA

6.2 Structure and function of the operating menu

6.2.1 Structure of the operating menu

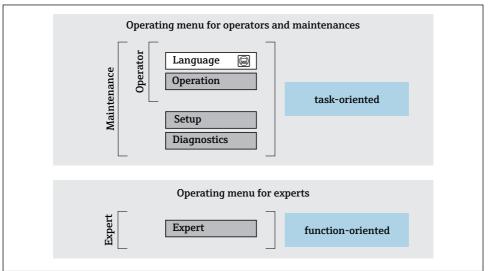

A0014058-EN

■ 3 Schematic structure of the operating menu

6.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.



For detailed information on the operating philosophy, see the Operating Instructions for the device.

Proline 500 PROFIBUS PA Operation options

6.3 Access to the operating menu via the local display

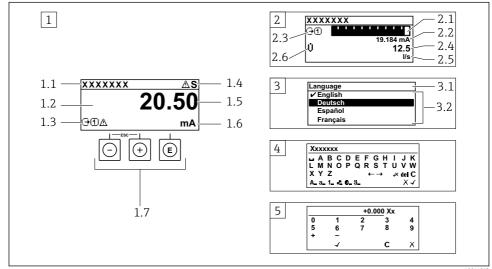

A001401

- 1 Operational display with measured value shown as "1 value, max." (example)
- 1.1 Device tag
- 1.2 Display area for measured values (4-line)
- 1.3 Explanatory symbols for measured value: Measured value type, measuring channel number, symbol for diagnostic behavior
- 1.4 Status area
- 1.5 Measured value
- 1.6 Unit for the measured value
- 1.7 Operating elements
- 2 Operational display with measured value shown as "1 bar graph + 1 value" (example)
- 2.1 Bar graph display for measured value 1
- 2.2 Measured value 1 with unit
- 2.3 Explanatory symbols for measured value 1: measured value type, measuring channel number
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Explanatory symbols for measured value 2: measured value type, measuring channel number
- 3 Navigation view: picklist of a parameter
- 3.1 Navigation path and status area
- *3.2* Display area for navigation: ✓ designates the current parameter value
- 4 Editing view: text editor with input mask
- 5 Editing view: numeric editor with input mask

Operation options Proline 500 PROFIBUS PA

6.3.1 Operational display

Explanatory symbols for the measured value	Status area
 Depends on the device version, e.g.: j: Volume flow m: Mass flow ρ: Density G: Conductivity ½: Temperature ∑: Totalizer (⇒: Output Э: Input 1 _ (±): Measurement channel number 1 Diagnostic behavior 2) ★: Alarm Λ: Warning 	The following symbols appear in the status area of the operational display at the top right: ■ Status signals — F: Failure — C: Function check — S: Out of specification — M: Maintenance required ■ Diagnostic behavior — M: Alarm — M: Warning ■ \(\text{\t
- G: Conductivity - &: Temperature - ∑: Totalizer - ⓒ: Output - ᢒ: Input - 1 'B: Measurement channel number 1) - Diagnostic behavior 2)	- C: Function check - S: Out of specification - M: Maintenance required - Diagnostic behavior - ★: Alarm - ★: Warning - ♠: Locking (locked via hardware))

- If there is more than one channel for the same measured variable type (totalizer, output etc.). For a diagnostic event that concerns the displayed measured variable. 1)
- 2)

6.3.2 Navigation view

Status area	Display area
The following appears in the status area of the navigation view in the top right corner: In the submenu The direct access code for the parameter you are navigating to (e.g. 0022-1) If a diagnostic event is present, the diagnostic behavior and status signal In the wizard If a diagnostic event is present, the diagnostic behavior and status signal	■ Icons for menus — ③: Operation — ✔: Setup — ②: Diagnostics — ★: Expert ■ *: Submenus ■ ∴: Wizards ■ ②: Parameters within a wizard ■ ②: Parameter locked
3	

6.3.3 **Editing view**

Text editor		Correction symbols under ℯズC←→		
√	Confirms selection.	C	Clears all entered characters.	
X	Exits the input without applying the changes.	₽	Moves the input position one position to the right.	
C	Clears all entered characters.	€	Moves the input position one position to the left.	
€XC+→	Switches to the selection of the correction tools.	×	Deletes one character immediately to the left of the input position.	
Aa1@	Toggle Between upper-case and lower-case letters For entering numbers For entering special characters			

Proline 500 PROFIBUS PA Operation options

Numeric editor	
Confirms selection.	Moves the input position one position to the left.
Exits the input without applying the changes.	Inserts decimal separator at the input position.
Inserts minus sign at the input position.	C Clears all entered characters.

6.3.4 Operating elements

Keys and meaning

Enter key

With an operational display

Pressing the key briefly opens the operating menu.

In a menu, submenu

- Pressing the key briefly:
 - Opens the selected menu, submenu or parameter.
 - Starts the wizard.
 - If help text is open:

Closes the help text of the parameter.

• Pressing the key for 2 s in the case of a parameter:

If present, opens the help text for the function of the parameter.

With a wizard: Opens the editing view of the parameter.

With a text and numeric editor

- Press the key briefly: confirm your selection.
- Press the key for 2 s: confirm the entry.

Minus key

- *In a menu, submenu*: Moves the selection bar upwards in a picklist.
- *With a wizard:* Confirms the parameter value and goes to the previous parameter.
- With a text and numeric editor: Moves the cursor position to the left.

Plus key

- In a menu, submenu: Moves the selection bar downwards in a picklist.
- With a wizard: Confirms the parameter value and goes to the next parameter.
- With a text and numeric editor: Moves the cursor position to the right.

⊕+⊙ Escape key combination (press keys simultaneously)

In a menu, submenu

- Pressing the key briefly:
 - Exits the current menu level and takes you to the next higher level.
 - If help text is open, closes the help text of the parameter.
- Pressing the key for 2 s in the case of a parameter: Returns you to the operational display ("home position").

With a wizard: Exits the wizard and takes you to the next higher level.

With a text and numeric editor: Closes the editor view without applying any changes.

System integration Proline 500 PROFIBUS PA

Keys and meaning

(a)+(c)

Minus/Enter key combination (press the keys simultaneously)

With an operational display:

If keypad lock is active:

Press the key for 3 s: Deactivates the keypad lock.

• If keypad lock is not active:

Press the key for 3 s: Opens the context menu including the option for activating the keypad lock.

6.3.5 Further information



For further information on the following topics, see the Operating Instructions for the device

- Calling up help text
- User roles and related access authorization
- Disabling write protection via access code
- Enabling and disabling the keypad lock

6.4 Access to the operating menu via the operating tool



The operating menu can also be accessed via the FieldCare and DeviceCare operating tools. See the Operating Instructions for the device.

6.5 Access to the operating menu via the Web server



The operating menu can also be accessed via the Web server. See the Operating Instructions for the device.

System integration



For detailed information on system integration, see the Operating Instructions for the device.

- Overview of device description files:
 - Current version data for the device
 - Operating tools
- Device master file (GSD)
 - Manufacturer-specific GSD
 - Profile GSD
- Compatibility with previous model
- Using the GSD modules of the previous model
- Cyclic data transmission
 - Block model
 - Description of the modules

Proline 500 PROFIBUS PA Commissioning

8 Commissioning


8.1 Function check

Before commissioning the measuring device:

- ► Make sure that the post-installation and post-connection checks have been performed.
- "Post-connection check" checklist → 🖺 28

8.2 Setting the operating language

Factory setting: English or ordered local language

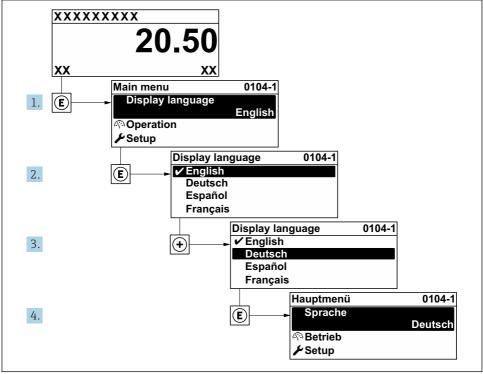

Taking the example of the local display

Endress+Hauser 35

A0029420

Commissioning Proline 500 PROFIBUS PA

8.3 Configuring the measuring device

The **Setup** menu with its submenus and guided wizards is used for fast commissioning of the device. They contain all the parameters required for configuration, such as for measurement or communication.

H

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Example: Available submenus, wizards	Meaning
System units	Configure the units for all measured values
Medium selection	Define the medium
Analog inputs	Configure the analog inputs
Current input	Configuration of the input/output type
Status input	
Current output 1 to n	
Pulse/frequency/switch output 1 to n	
Relay output	
User interface	Configure the display format on the local display
Low flow cut off	Set the low flow cut off
Partially filled pipe detection	Configure partial and empty pipe detection
Advanced setup	Additional parameters for configuration: Calculated process variables Sensor adjustment Totalizer User interface WLAN settings Data backup Administration

8.4 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:


- Protect access to parameters via access code
- Protect access to local operation via key locking
- $\ \ \, \blacksquare$ Protect access to measuring device via write protection switch

For detailed information on protecting the settings against unauthorized access, see the Operating Instructions for the device.

Proline 500 PROFIBUS PA Diagnostic information

9 Diagnostic information

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display. The message about remedial measures can be called up from the diagnostic message, and contains important information on the fault.

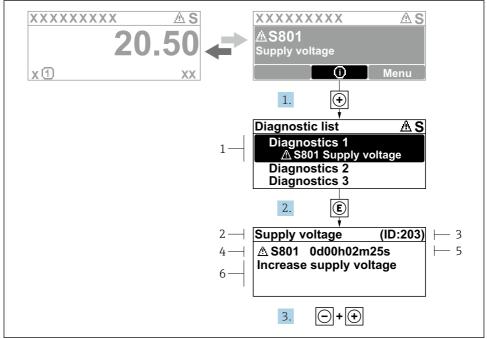

A0029431-EN

- 5 Message about remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures
- 1. The user is in the diagnostic message.
 - Press ± (① symbol).
 - ► The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with \pm or \Box and press \Box .
 - ► The message about the remedial measures opens.
- 3. Press □ + ± simultaneously.
 - └ The message about the remedial measures closes.



www.addresses.endress.com

