Products

Operating Instructions CCS240/241

Sensors for measuring chlorine dioxide





CCS240/241 Table of contents

Table of contents

1 1.1 1.2	About this document	. 4
2.1 2.2 2.3 2.4 2.5	Basic safety instructions Requirements for the personnel Designated use Workplace safety Operational safety Product safety	6 . 6 . 6
3 3.1	Product description	. 7 . 7
4 4.1 4.2	Incoming acceptance and product identification Incoming acceptance Product identification	
5 5.1 5.2 5.3	Installation Installation conditions Mounting the sensor Post-installation check	13
6 6.1 6.2 6.3	Electrical connection Connecting the sensor Ensuring the degree of protection Post-connection check	15 16 18 18
7 7.1 7.2 7.3	Commissioning	19 19
8	Diagnostics and troubleshooting	21
9 9.1 9.2	Maintenance	23
10 10.1 10.2 10.3	Repair	30 30 30 30

11	Accessories	31
11.1	Device-specific accessories	. 31
12	Technical data	32
12.1	Input	. 32
12.2	Performance characteristics	33
12.3	Environment	33
12.4	Process	. 33
12.5	Mechanical construction	34
Inde	Y.	31

About this document CCS240/241

1 About this document

1.1 Warnings

Structure of information	Meaning
⚠ DANGER Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.
Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.
Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.
NOTICE Cause/situation If necessary, Consequences of non- compliance (if applicable) Action/note	This symbol alerts you to situations which may result in damage to property.

1.2 Symbols used

Symbol	Meaning
i	Additional information, tips
✓	Permitted or recommended
×	Not permitted or not recommended
A	Reference to device documentation
	Reference to page
	Reference to graphic
L.	Result of a step

CCS240/241 About this document

1.2.1 Symbols on the device

Symbol	Meaning
<u>^</u> i	Reference to device documentation


Basic safety instructions CCS240/241

2 Basic safety instructions

2.1 Requirements for the personnel

Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.

- ► The technical personnel must be authorized by the plant operator to carry out the specified activities.
- ▶ The electrical connection may be performed only by an electrical technician.
- ► The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ Measuring point faults may be repaired only by authorized and specially trained personnel.

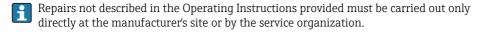

2.2 Designated use

Drinking water and industrial water must be disinfected through the addition of appropriate disinfectants such as chlorine gas or inorganic chlorine compounds. The dosing quantity must be adapted to continuously fluctuating operating conditions. If the concentrations in the water are too low, this could jeopardize the effectiveness of the disinfection. On the other hand, concentrations which are too high can lead to signs of corrosion and have an adverse effect on taste, as well as generating unnecessary costs.

The sensor was specifically developed for this application and is designed for continuous measurement of chlorine dioxide in water. In conjunction with measuring and control equipment, it allows optimal control of disinfection.

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable European standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

1. Verify that all connections are correct.

CCS240/241 Product description

- 2. Ensure that electrical cables and hose connections are undamaged.
- 3. Do not operate damaged products, and protect them against unintentional operation.
- 4. Label damaged products as defective.

During operation:

► If faults cannot be rectified: products must be taken out of service and protected against unintentional operation.

2.4.1 Special instructions

 Do not operate the sensors under process conditions where it is expected that osmotic conditions will cause electrolyte components to pass through the membrane and into the process.

2.5 Product safety

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and European standards have been observed.


3 Product description

3.1 Product design

The sensor consists of the following functional units:

- Measuring chamber
 - To protect the anode or cathode from the medium
 - With a large volume of electrolyte for a long service life in combination with the large anode and the small cathode
- Sensor shaft with
 - Large anode
 - Cathode embedded in plastic
 - Optional temperature sensor
- Membrane cap with
 - Robust PTFE membrane
 - Special support grid between cathode and membrane for a defined and consistent electrolyte film and thus a relatively constant indication even at varying pressures and flows

Product description CCS240/241

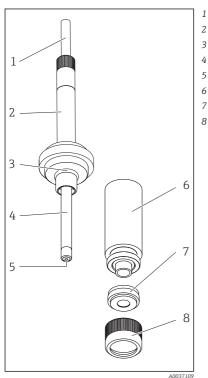

Fixed cable

- Sensor shaft
- O-ring
- Large anode, silver/silver chloride
- 5 Gold cathode
 - Measuring chamber
- 7 Membrane cap with dirt-repellent membrane
 - Screw cap for securing the membrane cap

3.1.1 Measuring principle

Chlorine dioxide levels are determined in accordance with the amperometric measuring principle.

The chlorine dioxide (CIO_2) in the medium diffuses through the sensor membrane and is reduced to chloride ions (CI^-) at the gold cathode. At the silver anode, silver is oxidized to silver chloride. Electron donation at the gold cathode and electron acceptance at the silver anode cause a current to flow which is proportional to the concentration of chlorine dioxide in the medium. This process does not depend on the pH value over a wide range.

The transmitter uses the current signal to calculate the measured variable for concentration in mg/l (ppm).

3.1.2 Effects on the measured signal

Flow

The minimum flow velocity of the membrane-covered measuring cell is 15 cm/s (0.5 ft/s). When using the CCA250 flow assembly, this corresponds to a flow rate of 30 l/h (7.9 gal/h) (upper edge of float at level of red bar mark).

At higher flow rates, the measured signal is virtually flow-independent. However, if the flow rate falls below the specified value, the measured signal depends on the flow.

CCS240/241 Product description

The installation of an INS proximity switch in the assembly enables reliable detection of this invalid operating status, thus triggering an alarm or causing the dosing process to be switched off if necessary.

Below the minimum flow rate, the sensor current is more sensitive to flow fluctuations. For abrasive media, it is recommended not to exceed the minimum flow. If suspended solids are present, which may form deposits, the maximum flow rate is recommended.

Temperature

Changes in the temperature of the medium affect the measured value:

- Increases in temperature result in a higher measured value (approx. 4 % per K)
- Decreases in temperature result in a lower measured value.

Using the sensor in combination with the Liquisys CCM223/253 enables automatic temperature compensation (ATC). Recalibration in the case of temperature changes is not necessary.

- 1. If automatic temperature compensation is disabled at the transmitter, the temperature must be maintained at a constant level following calibration.
- 2. Otherwise, recalibrate the sensor.

4 Incoming acceptance and product identification

4.1 Incoming acceptance

- 1. Verify that the packaging is undamaged.
 - Notify the supplier of any damage to the packaging.

 Keep the damaged packaging until the issue has been resolved.
- 2. Verify that the contents are undamaged.
 - Notify the supplier of any damage to the delivery contents. Keep the damaged goods until the issue has been resolved.
- 3. Check that the delivery is complete and nothing is missing.
 - ► Compare the shipping documents with your order.
- 4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - The original packaging offers the best protection.

 Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

4.2 Product identification

4.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Order code
- Extended order code
- Serial number
- Safety information and warnings
- ► Compare the information on the nameplate with the order.

4.2.2 Product page

www.endress.com/ccs240

www.endress.com/ccs241

4.2.3 Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

- 1. Go to www.endress.com.
- 2. Call up the site search (magnifying glass).
- 3. Enter a valid serial number.

- 4. Search.
 - ► The product structure is displayed in a popup window.
- 5. Click on the product image in the popup window.
 - A new window (**Device Viewer**) opens. All of the information relating to your device is displayed in this window as well as the product documentation.

4.2.4 Manufacturer address

Endress+Hauser Conducta GmbH+Co. KG Dieselstraße 24 D-70839 Gerlingen

4.2.5 Scope of delivery

The delivery comprises:

- Disinfection sensor (membrane-covered, Ø25 mm) with protection cap (ready for use)
- Bottle with electrolyte (50 ml (1.69 fl.oz))
- Replacement cartridge with pretensioned membrane
- Operating Instructions
- Manufacturer's certificate

4.2.6 Certificates and approvals

C€ mark

Declaration of conformity

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CC mark.


Installation CCS240/241

5 Installation

5.1 Installation conditions

5.1.1 Installation position

5.1.2 Dimensions

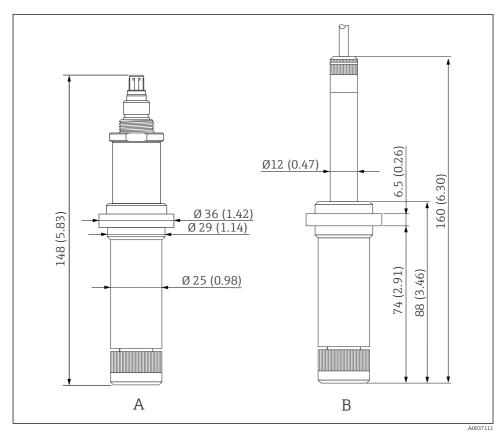

■ 1 Dimensions in mm (in)

A Version with TOP68 plug-in head

B Version with fixed cable connection


CCS240/241 Installation

5.2 Mounting the sensor

5.2.1 Measuring system

A complete measuring system comprises:

- Chlorine sensor
- Liquisys CCM223/253 transmitter
- Measuring cable CPK9
- Flowfit CCA250 flow assembly
- Optional: extension cable CYK71

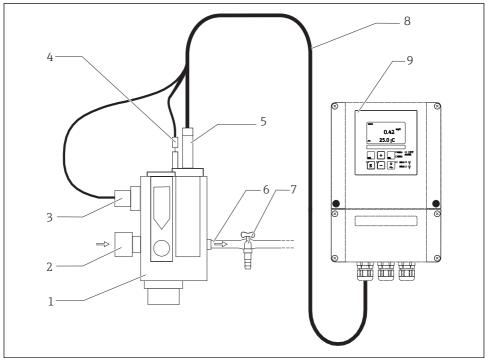

A0037976

■ 2 Example of a measuring system

- 1 Flowfit CCA250 flow assembly
- 2 Inlet to Flowfit CCA250 flow assembly
- *3 Proximity switch (optional)*
- 4 PML pin
- 5 Chlorine dioxide sensor l CCS240
- 6 Procedure
- 7 Sampling tap
- 8 Measuring cable CPK9
- 9 Liquisys CCM223/253 transmitter

Installation CCS240/241

► Ground the medium at the sensor by means of the PML pin to ensure a high reading stability.


5.2.2 Preparing the sensor

Removing protection cap from sensor

NOTICE


Negative pressure causes damage to the sensor's membrane cap.

- ▶ If the protection cap is attached, carefully remove it from sensor.
- When supplied to the customer and when in storage, the sensor is fitted with a protection cap: First release just the top part of the protection cap by turning it.

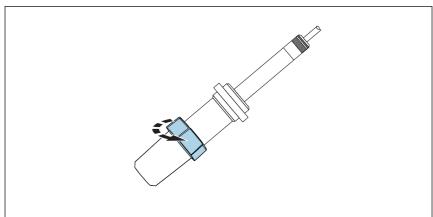

■ 3 Releasing top part of protection cap by turning

2. Carefully remove protection cap from sensor.

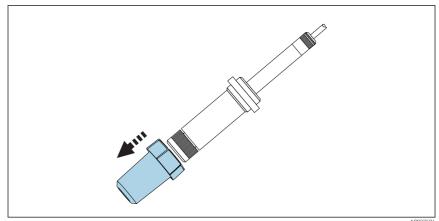

■ 4 Carefully remove protection cap

CCS240/241 Electrical connection

5.2.3 Installing sensor in assembly CCA250

The Flowfit CCA250 flow assembly is designed for installing the sensor. It allows a pH and ORP sensor to be installed, in addition to the chlorine or chlorine dioxide sensor. A needle valve controls the flow rate in the range of 30 to 120 l/h (7.9 to 31.7 gal/h).

Please note the following during installation:

- ► The flow rate must be at least 30 l/h (7.9 gal/h). If the flow drops below this value or stops completely, this can be detected by an inductive proximity switch and used to trigger an alarm with locking of the dosage pumps.
- ► If the medium is returned to an overflow basin, pipe or similar, the resulting counterpressure on the sensor must not exceed 1 bar (14.5 psi) and must remain constant.
- ► Negative pressure at the sensor e.g. caused by feedback of the medium to the suction side of a pump, must be avoided.
- ► To avoid buildup, heavily contaminated water should also be filtered.
- Additional installation instructions can be found in the Operating Instructions for the assembly.

5.2.4 Installing sensor in other flow assemblies

When using other flow assemblies, please ensure the following:

- ► A flow velocity of at least 15 cm/s (0.49 ft/s) must be guaranteed at all times at the membrane.
- ► The flow direction is upwards. Transported air bubbles must be removed so that they do not collect in front of the membrane.
- ► The flow must be directed to the membrane.

5.3 Post-installation check

- 1. Check the membrane to ensure it is sealed and undamaged.
 - ► Replace if necessary.
- 2. Is the sensor installed in an assembly and not suspended from the cable?
 - The sensor may be installed only in an assembly or directly via the process connection.

6 Electrical connection

A CAUTION

Device is live

Incorrect connection may result in injury!

- $\,\blacktriangleright\,$ The electrical connection may be performed only by an electrical technician.
- ► The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- lacktriangledown **Prior** to commencing connection work, ensure that no voltage is present on any cable.

Electrical connection CCS240/241

6.1 Connecting the sensor

► Install the grounding bar (order number 51501086) in accordance with the accompanying instructions in order to guarantee a high reading stability.

NOTICE


Measured errors due to faulty connection

► When connecting the sensor cable, make sure that the black semi-conductor layer is removed as far as the inner shield.

The sensors have a fixed cable with a maximum length of 3 m (9.8 ft).

► Connect the sensors to the transmitter according to the following diagram:

Sensor: assignment	Sensor: core	Transmitter: terminal
Outer shield		S
Anode	[A] red	91
Cathode	[K] transparent	90
NTC temperature sensor	Green	11
NTC temperature sensor	Brown	12

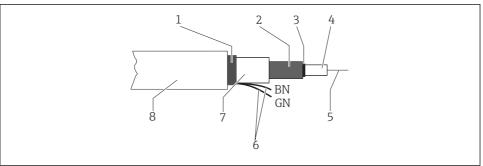


A0036973

■ 5 Structure of the sensor cable

- 1 Outer shield
- 2 Inner shield, anode
- 3 Semi-conductor layer
- 4 Inner insulation
- 5 Inner conductor, measured signal
- 6 Temperature sensor connection
- 7 2nd insulation
- 8 Outer insulation

CCS240/241 Electrical connection

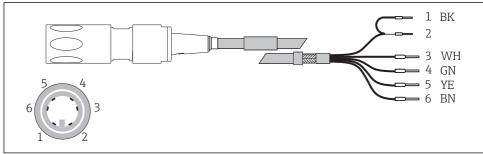

Δ003711

■ 6 Sensor with TOP68 pluq-in head and CPK9 measuring cable with internal PAL (CPK9-N*A1B)


- 1 Signal (cathode) (black coax)
- 2 Reference (anode) (screened coax)
- 3 Not used (white)
- 4 Temperature sensor (green)
- 5 Temperature sensor (yellow)
- 6 Not used (brown)

6.1.1 Connecting the cable extension

To extend the sensor connection, use the VBC junction box.

Extend the connections as follows:


- Chlorine sensor with measuring cable CYK71
- pH and ORP sensors measuring cable CYK71
- Inductive proximity switch with measuring cable MK

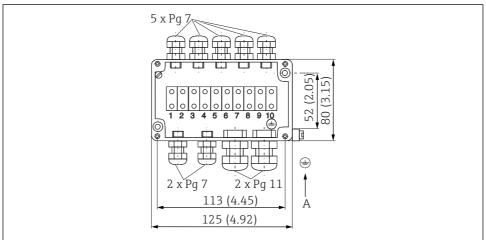

A0037107

■ 7 VBC junction box with grounding option, specifications in mm (in)

Electrical connection CCS240/241

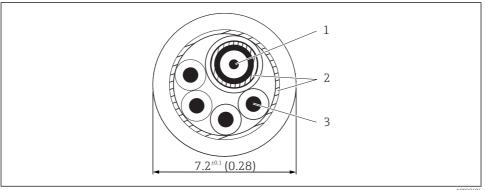

₽8 Structure of measuring cable CYK71, specifications in mm (in)

- 1 Coax, e.g. pH, ORP
- 2 Shielding
- 3 4 control lines YE/GN/WH/BN

6.2 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

► Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example to covers being left off or cable (ends) that are loose or insufficiently secured.

6.3 Post-connection check

Device condition and specifications	Notes	
Are the sensor, assembly, or cables free from damage on the outside?	Visual inspection	
Electrical connection	Notes	
Are the mounted cables strain-relieved and not twisted?		
Is a sufficient length of the cable cores stripped, and are the cores positioned in the terminal correctly?	Check the fit (by pulling gently)	
Are all the screw terminals properly tightened?	Tighten	
Are all the cable entries installed, tightened and sealed?	For lateral cable entries, make sure the cables	
Are all cable entries installed downwards or mounted laterally?	loop downwards to allow water to drip off	

CCS240/241 Commissioning

7 Commissioning

7.1 Function check

Prior to initial commissioning, ensure that:

- The sensor is correctly installed
- The electrical connection is correct.
- There is sufficient electrolyte in the membrane cap and the transmitter is not displaying a warning about electrolyte depletion.



Please note the information on the safety data sheet to ensure safe use of the electrolyte.

WARNING

Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards

- ► Before applying pressure to an assembly with cleaning system, ensure that the system has been connected correctly.
- ► Do not install the assembly in the process if you cannot reliably establish the correct connection.

7.2 Sensor polarization

The voltage applied by the transmitter between cathode and anode polarizes the surface of the working electrode. Therefore, after switching on the transmitter with the sensor connected, you must wait until the polarization period has elapsed before starting calibration.

To achieve a stable display value, the sensor requires the following polarization periods: Initial commissioning

CCS240	30 minutes
CCS241	90 minutes

Recommissioning

CCS240 10 minutes CCS241 45 minutes

7.3 Sensor calibration

Reference measurement according to the DPD method

To calibrate the measuring system, carry out a colorimetric comparison measurement in accordance with the DPD method for chlorine dioxide. Chlorine dioxide reacts with diethyl-phenylendiamine (DPD) to form a red dye, the intensity of the red color being proportional to the chlorine dioxide content.

If the photometer used indicates the presence of chlorine, follow the manufacturer's instructions to convert the chlorine content into the chlorine dioxide content.

Commissioning CCS240/241

Requirements

The sensor reading is stable (no drifts or unsteady values for at least 5 minutes), and the medium is stable. This is normally guaranteed once the following preconditions have been met:

- The polarization period has elapsed.
- The flow is constant and within the correct range.
- The sensor and the medium are at the same temperature.
- The pH value is within the permitted range.
- Optional:

For zero point adjustment: electrolyte has been replaced.

Zero point adjustment

A zero point adjustment is not required due to the zero point stability of the membrane-covered sensor.

However, a zero point adjustment can be performed if desired.

- 1. To perform a zero point adjustment, operate the sensor for at least 15 minutes in chlorine-free water, using the assembly or protection cap as a vessel.
- 2. Alternatively, perform the zero point adjustment using the zero point gel COY8→

 31.

Slope calibration

- Always perform a slope calibration in the following cases:
 - After replacing membrane
 - After replacing electrolyte
 - After the membrane cap has been screwed back on
- 1. Ensure that the temperature of the medium is constant.
- 2. Take a representative sample for the DPD measurement. This must be done in close proximity to the sensor. Use the sampling tap if available.
- 3. Determine the chlorine dioxide content using the DPD method.
- Enter the measured value into the transmitter (see Operating Instructions for transmitter).
- 5. To ensure greater accuracy, check the calibration several hours or 24 hours later using the DPD method.

8 Diagnostics and troubleshooting

When troubleshooting, you must take account of the entire measuring system. This comprises:

- Transmitter
- Electrical connections and lines
- Assembly
- Sensor

The possible causes of error in the following table refer primarily to the sensor. Before commencing troubleshooting, ensure that the following operating conditions have been met:

- Constant temperature after calibration, not required for measurement in "temperature-compensated" mode
- Medium flow rate of at least 30 l/h (7.9 gal/h) (red bar mark when using the CCA250 flow assembly)
- No use of organic chlorination agents



If the value measured by the sensor differs significantly from that of the DPD method, you should first consider all possible malfunctions of the photometric DPD method (see Operating Instructions for photometer). If necessary, repeat the DPD measurement several times.

Error	Possible cause	Remedy
No display, no sensor current	No supply voltage at the transmitter	► Establish mains connection
	Connection cable between sensor and transmitter interrupted	► Establish cable connection
	Measuring chamber is not filled with electrolyte	► Fill measuring chamber (→ 🖺 25)
	No input flow of medium	► Establish flow, clean filter
Display value too high	Polarization of the sensor not yet completed	► Wait for polarization to be completed
	Membrane defective	► Replace membrane cap
	Shunt resistance (e.g. moisture contact) in the sensor shaft	► Open measuring chamber, rub gold cathode dry. If the transmitter display does not return to zero, there is a shunt present.
	Foreign oxidants interfering with sensor	► Examine medium, check chemicals

Error	Possible cause	Remedy	
Display value too low	Measuring chamber not completely tightened	► Fully tighten measuring chamber or screw cap	
	Membrane soiled	► Clean membrane	
	Air bubble in front of membrane	► Release air bubble	
	Air bubble between cathode and membrane	Open measuring chamber, top up electrolyte, tap	
	Input flow of medium too low	► Establish correct flow (→ 🖺 8)	
	Foreign oxidants interfering with DPD reference measurement	► Examine medium, check chemicals	
	Use of organic chlorination agents	► Use agents according to DIN 19643 (water may need to be replaced beforehand)	
Display fluctuates	Hole in membrane	► Replace membrane cap	
considerably	External voltage in medium	► Measure voltage between the PML pin and the protective ground of the measuring device (both AC and DC ranges). For values greater than approx. 0.5 V, find and eliminate external cause.	
Temperature reading is too low	Supply line to NTC temperature sensor interrupted	Perform line test (fixed cable: green/brown, TOP68: green/yellow) and resistance measurement (NTC).	
		2. Where applicable, change sensor.	
Temperature reading is too high	Short-circuit in supply line to NTC temperature sensor	Perform line test (fixed cable: green/brown, TOP68: green/yellow) and resistance measurement (NTC).	
		2. Where applicable, change sensor.	

CCS240/241 Maintenance

9 Maintenance

Please note the information on the safety data sheet to ensure safe use of the electrolyte.

Take all the necessary precautions in time to ensure the operational safety and reliability of the entire measuring system.

NOTICE

Effects on process and process control!

- When carrying out any work on the system, bear in mind any potential impact this could have on the process control system and the process itself.
- ► For your own safety, only use genuine accessories. With genuine parts, the function, accuracy and reliability are also ensured after maintenance work.

9.1 Maintenance schedule

- Check the measurement at regular intervals; depending on the prevailing conditions, at least once a month.
- 2. Clean the sensor if the membrane is visibly soiled ($(\rightarrow \cong 23)$).
- 3. Replace the electrolyte **once per season or every 12 months** or depending on the chlorine content on site.
- 4. Calibrate the sensor if desired or when necessary (($\Rightarrow \implies 19$)).

9.2 Maintenance tasks

9.2.1 Cleaning the sensor

A CAUTION

Diluted hydrochloric acid

Hydrochloric acid causes irritation if it comes into contact with the skin or eyes.

- ▶ When using diluted hydrochloric acid, wear protective clothing such as gloves and goggles.
- Avoid splashes.

NOTICE

Chemicals that reduce surface tension

Chemicals that reduce surface tension can penetrate the sensor membrane and cause measuring errors due to clogging.


▶ Do not use any chemicals that reduce surface tension.

If the membrane is visibly soiled, proceed as follows:

- 1. Remove sensor from flow assembly.
- Clean the membrane by mechanical means only, using a gentle water jet. Alternatively, place it for several minutes in 1 to 5% hydrochloric acid without any other chemical additives.
- 3. If cleaning in hydrochloric acid, rinse off the hydrochloric acid with plenty of water.

Maintenance CCS240/241

9.2.2 Replacing the membrane

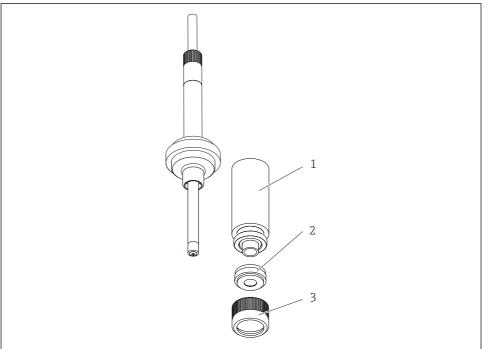

A0037110

■ 9 Replacing the membrane

- 1 Measuring chamber
- 2 Membrane cap
- 3 Screw cap
- 1. Unscrew the measuring chamber (1).
- 2. Unscrew the front screw cap (3).
- 3. Remove the membrane cap (2) and replace it with a CCY14-WP replacement cartridge.
- 4. Refill the measuring chamber with electrolyte CCY14-F($\rightarrow \triangleq 25$).

CCS240/241 Maintenance

9.2.3 Refilling the electrolyte

NOTICE

Damage to membrane and electrodes, air bubbles

Possibility of measured errors to complete failure of the measuring point

- ▶ Do not touch the membrane or electrodes. Avoid damaging them.
- ► The electrolyte is chemically neutral and is not hazardous to health. Nonetheless, do not swallow it and avoid contact with eyes.
- ► Keep the electrolyte bottle closed after use. Do not transfer electrolyte to other vessels.
- ▶ Do not store electrolyte for longer than 2 years. The electrolyte must not be yellow in color. Observe the use-by date on the label.
- ▶ Avoid air bubbles when pouring electrolyte into the membrane cap.
- 1. Unscrew the measuring chamber from the shaft.
- 2. Hold the measuring chamber at an angle and pour in approx. 7 to 8 ml (0.24 to 0.27 fl.oz) of electrolyte, up to the internal thread.
- 3. Tap the filled chamber several times against a flat surface so that adherent air bubbles on the inside can detach and rise.
- 4. Insert the sensor shaft vertically into the measuring chamber.
- 5. Slowly tighten the measuring chamber to the stop. While tightening, excess electrolyte is forced out at the bottom of the sensor.
- 6. If necessary, use a cloth to wipe the measuring chamber and screw cap dry.

9.2.4 Storing the sensor

If measurement is suspended for a short period of time and it can be guaranteed that the sensor will be kept moist while in storage:

- 1. If the assembly is guaranteed not to empty out, you may leave the sensor in the flow assembly.
- 2. If there is a possibility that the assembly may empty out, Remove sensor from assembly .
- 3. To keep the membrane moist after the sensor has been removed, refill the protection cap with electrolyte or clean water.
- 4. Fit protection cap on sensor $\rightarrow \triangleq 26$.

During longterm interruptions to measurement, particularly if dehydration is possible:


- 1. Remove sensor from assembly.
- 2. Clean sensor shaft and membrane cap with cold water and leave to dry.
- 3. Loosely screw on membrane cap up to the stop. This ensures that the membrane remains slack.

Maintenance CCS240/241

- For recommissioning, follow the same procedure as for commissioning $\rightarrow \equiv 19$.
- Ensure that no biofouling occurs during longer interruptions to measurement. Remove continuous organic deposits such as films of bacteria.

Fit protection cap on sensor.


To keep the membrane moist after the sensor has been removed, refill the protection cap with electrolyte or clean water.

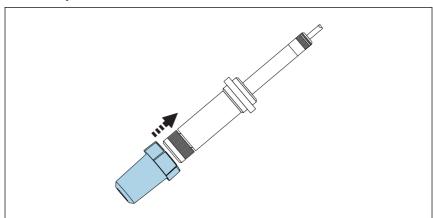

Carefully slide protection cap onto the membrane cap.

Top part of protection cap is in the open position. Carefully slide protection cap onto the membrane cap.

Secure protection cap by rotating the top part of the protection cap.

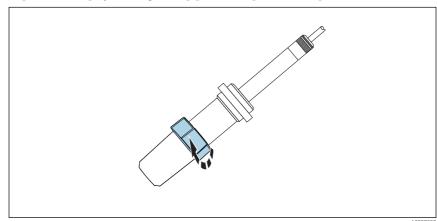

■ 11 Securing protection cap by rotating the top part

CCS240/241 Maintenance

9.2.5 Regenerating the sensor

During measurement, the electrolyte in the sensor is gradually exhausted due to chemical reactions. The gray-brown silver chloride layer that is applied to the anode at the factory continues to grow during sensor operation. However, this has no effect on the reaction taking place at the cathode.

A change in the color of the silver chloride layer indicates an effect on the reaction that is taking place. Carry out a visual inspection to ensure that the gray-brown color of the anode has not changed. If the color of the anode has changed, e.g. if it is spotted, white or silvery, the sensor must be reqenerated.

► Send the sensor to the manufacturer for regeneration.


9.2.6 Reconditioning the sensor

Longterm operation of the sensor (> 3 months) in a chlorine-free medium, i.e. with very low sensor currents, may lead to deactivation of the sensor. This deactivation is a continuous process that results in a lower slope and longer response times. After long-term operation in a chlorine-free medium, the sensor can be reconditioned.

The following materials are required for reconditioning:

- Deminieralized water
- Beaker
- Pour approx. 100 ml (3.38 fl.oz) aqueous chlorine dioxide solution

Maintenance CCS240/241

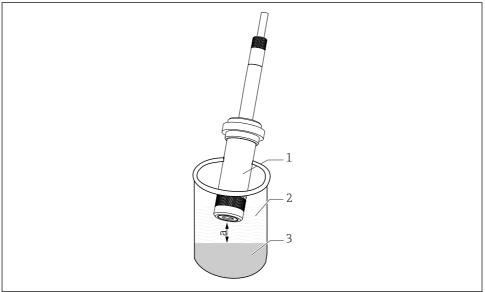

A0037414

- 1 Sensor
- 2 Gas phase of aqueous chlorine dioxide solution
- 3 Aqueous chlorine dioxide solution
- a Distance between sensor and liquid, 5 to 10 mm (0.2 to 0.4 in)
- 1. Close the medium inlet and outlet and make sure that no medium can escape from the assembly.
- 2. Remove sensor from assembly.
- 3. Unscrew measuring chamber and set aside.
- 4. Polish the sensor's gold cathode using the polishing sheet: Place a wetted strip of the sheet in your hand, polish the gold cathode on the strip using circular movements, and rinse the sensor with deionized water.
- 5. If necessary:
 - Top up the electrolyte in the measuring chamber and screw the measuring chamber back onto the sensor shaft.
- 6. Fill the beaker to approx. 10 mm (0.4 in) with aqueous chlorine dioxide solution and put in a safe place.
- 7. The sensor must not touch the liquid.
 - Place the sensor in the gas phase approx. 5 to 10 mm (0.2 to 0.4 in) above the aqueous chlorine dioxide solution.
 - The sensor current will now increase. The absolute value and the rate of increase depend on the temperature of the aqueous chlorine dioxide solution.

CCS240/241 Maintenance

8. When the sensor current has reached a value of several hundred nA: Leave the sensor in this position for approx. 20 minutes.

- If the value of several hundred nA is not reached:Cover the beaker to avoid a rapid exchange of air.
- 10. Once the 20 minutes have elapsed, re-install the sensor in the assembly.
- 11. Open the medium inlet and outlet again.
 - ► The sensor current will now normalize.

After allowing sufficient settling time (no noticeable drift), calibrate the measuring chain.

Repair CCS240/241

10 Repair

10.1 Spare parts

For more detailed information on spare parts kits, please refer to the "Spare Part Finding Tool" on the Internet:

www.endress.com/spareparts consumables

10.1.1

10.2 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

► Refer to the website www.endress.com/support/return-material for information on the procedure and conditions for returning devices.

10.3 Disposal

The device contains electronic components. The product must be disposed of as electronic waste.

▶ Observe the local regulations.

CCS240/241 Accessories

11 Accessories

The following are the most important accessories available at the time this documentation was issued

► For accessories not listed here, please contact your Service or Sales Center.

11.1 Device-specific accessories

VBC junction box

- For cable extension (for chlorine measuring systems)
- Dimensions (B x D x H): 125 x 80 x 54 mm (4.92 x 3.15 x 2.13 ")
- 10 terminal strips
- Cable entries: 7 x Pg 7, 2 x Pg 11
- Material: aluminum
- Degree of protection: IP65 (i NEMA 4x)
- Order No. 50005181

Measuring cable CYK71

- Unterminated cable for connecting analog sensors and for extending sensor cables
- Sold by the meter, order numbers:
 - Non-Ex version, black: 50085333
 - Ex-version, blue: 50085673

Measuring cable CPK9

- Terminated measuring cable for connecting analog sensors with TOP68 plug-in head
- Selection in accordance with product structure
- Ordering information: Endress+Hauser sales office or www.endress.com.

MK extension cable

- Twin-core signal cable with additional shielding and PVC insulation
- Preferably for the transmission of output signals from transmitters or input signals from controllers and for temperature measurement.
- Order number: 50000662

Flowfit CCA151

- Flow assembly for chlorine dioxide sensors
- Product Configurator on the product page: www.endress.com/cca151



Technical Information TI01357C

Flowfit CCA250

- Flow assembly for chlorine and pH/ORP sensors
- Product Configurator on the product page: www.endress.com/cca250



Technical Information TI00062C

Photometer PF-3

- Compact hand-held photometer for determining free available chlorine
- Color-coded reagent bottles with clear dosing instructions
- Order No.: 71257946

Technical data CCS240/241

Compact measuring station CCE10/CCE11

 Fully assembled and wired panel for one or three transmitters, with CCA250-A1 flow assembly

 Product Configurator on the product page: www.endress.com/cce10 or www.endress.com/cce11



Technical Information TI00440C

COY8

Zero-point gel for oxygen and chlorine sensors

- Oxygen-free gel for the validation, calibration and adjustment of oxygen measuring cells
- Product Configurator on the product page: www.endress.com/coy8



Technical Information TI01244C

Service kit CCS24x

- For chlorine dioxide sensors CCS240 / CCS241
- 2 replacement cartridges, electrolyte 50 ml (1.69 fl.oz), sanding sheets
- Order No. 71076922

Polishing sheet COY31-PF

- For oxygen and chlorine sensors
- 10 pieces for cleaning gold cathode
- Order No. 51506973

12 Technical data

12.1 Input

12.1.1 Measured values

Chlorine dioxide (ClO₂)

 $[mg/l, \mu g/l, ppm, ppb]$

12.1.2 Measuring ranges

CCS240-* (for industrial water, bathing water)	0.05 to 20 mg/l (ppm) ClO ₂
CCS241-* (for drinking water applications)	0.01 to 5 mg/l (ppm) ClO ₂

CCS240/241 Technical data

12.2 Performance characteristics

12.2.1 Response time

CCS240-*	T ₉₀ < 2 minutes
CCS241-*	T_{90} < 5 minutes

in applications involving mainly active chlorination

12.2.2 Long-term drift

< 1.5 % per month

12.2.3 Polarization time

	Initial commissioning	Recommissioning
CCS240-*	30 min	10 min
CCS241-*	90 min	45 min

12.3 Environment

12.3.1 Ambient temperature range

-5 to 55 °C (20 to 130 °F)

12.3.2 Storage temperature

With electrolyte 5 to 50 $^{\circ}$ C (40 to 120 $^{\circ}$ F) Without electrolyte -20 to 60 $^{\circ}$ C (-4 to 140 $^{\circ}$ F)

12.3.3 Degree of protection

IP68 IP (up to mounting collar Ø 36 mm (1.42"))

12.4 Process

12.4.1 Process temperature

CCS240, CCS241

2 to 45 °C (36 to 113 °F)

12.4.2 Process pressure

max. 1 bar (14.5 psi) absolute, if installed in the Flowfit CCA250 assembly

Technical data CCS240/241

12.4.3 pH range

in stability range of ClO₂ (typical application: pH 4 to 10)



Chlorine measurement possible up to pH 9 with limited accuracy

12.4.4 Flow

At least 30 l/h (7.9 gal/h), in the CCA250 assembly

12.4.5 Minimum flow

At least 15 cm/s (0.5 ft/s)

12.5 Mechanical construction

12.5.1 Dimensions

→ 🖺 12.

12.5.2 Weight

Approx. 500 g (1.1 lbs)

12.5.3 Materials

Sensor shaft PVC
Membrane PTFE

Membrane cap PBT (GF 30), PVDF

Cathode Gold

Anode Silver/silver chloride

12.5.4 Cable specification

max. 3 m (9.84 ft)

CCS240/241 Index

Index

A	Installation position
Accessories	Ţ
Ambient temperature range	L
С	Long-term drift
Cable specification	M
Cable specification	Maintenance schedule
Connection	Maintenance tasks
Function	Materials
Installation	Measured signal 8
Cleaning	Measured values
Connection	Measuring principle 8
Check	Measuring ranges
Ensuring the degree of protection 18	Measuring system
3 3 1	Minimum flow
D	Mounting instructions
Declaration of conformity	N
Degree of protection	
Ensuring	Nameplate
Technical data	0
Designated use 6	Operating principle
Device description	operating principle
Diagnostics	P
Disposal	Performance characteristics
Е	pH range
	Polarization time
Effect on the measured signal Flow	Post-installation check 19
Temperature	Process
Electrical connection	Process pressure
Electrolyte	Process temperature
Environment	n.
Livironment	R
F	Reconditioning
Flow	Regeneration
Flow assembly	Repair
Function check	Replacing the membrane
_	Response time 33 Return 30
I	Return
Incoming acceptance 10	S
Installation	Safety instructions 6
Check	Scope of delivery
Flow assembly	Sensor
Installation position	Calibration
Sensor	Cleaning
	<u> </u>

Index CCS240/241

Connecting	16
Mounting	13
Polarization	19
Reconditioning	27
Refilling the electrolyte	25
Regenerating	27
Replacing the membrane	24
storage	25
Spare parts	30
Storage	25
Storage temperature	33
Symbols	. 4
Т	
Technical data	
Environment	33
Input	
Mechanical construction	34
Performance characteristics	33
Process	
Temperature	
Troubleshooting	
110ublesi100thig	21
U	
Use	. 6
W	
Warnings	4
Weight	
vvcigitt	ノユ







www.addresses.endress.com