
Operating Instructions **Liquistation CSF48**

Automatic sampler for liquid media Operation & settings



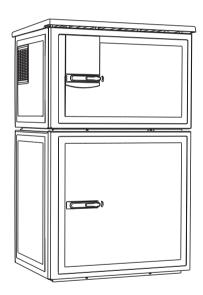

Operation concept

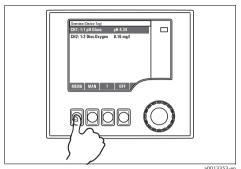


Abb. 1: Pressing the soft key: selecting the menu directly

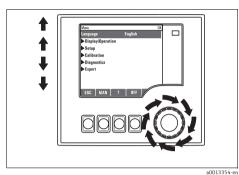


Abb. 2: Turning the navigator: moving the cursor in the menu

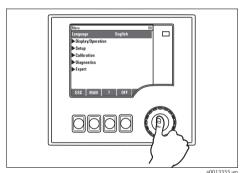


Abb. 3: Pressing the navigator: launching a function

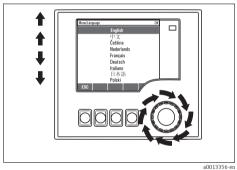


Abb. 4: Turning the navigator: selecting a value (e.g. from a list)

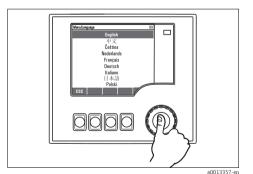


Abb. 5: Pressing the navigator: accepting the new value

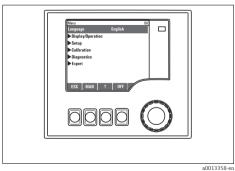


Abb. 6: Result: new setting is accepted

Table of contents

1	About this manual 5	8	Information on sensors with Memosens protocol	
2	General settings6		Memosens protocol	.107
2.1	Basic settings 6	9	Inputs: General	.108
2.2	Date and time	9.1	Configuration	
2.3	Automatic hold (optional) 8	9.2	Frequently occurring functions	. 108
2.4	Logbooks		1 3	
2.5	Configuring the sampling depending on the device version	10	Inputs: pH/ORP Incl. combi	
2.6	Extended setup		sensors	.115
2.0	Extended Setup	10.1	Basic settings	
3	Inputs24		Extended setup	
3.1	Binary inputs			
3.2	Current inputs	11	Inputs: Conductivity	.124
			Basic settings	
4	Programming32	11.2	Extended setup	. 130
4.1	Overview of the possible program types 33	10	T	10/
4.2	Program type: Basic	12	1))	
4.3	Program types: Standard and Advanced 57		Basic settings	
4.4	Selecting and executing the program 80	12.2	Extended setup	. 135
5	Outputs82	13	Inputs: Chlorine	.144
5.1	Binary outputs	13.1	Basic settings	
5.2	Current outputs (optional) 85		Extended setup	
5.3	Alarm relays 87			
5.4	HART 90	14		
5.5	PROFIBUS DP		Basic settings	
5.6	Modbus RS485 and Modbus TCP 91	14.2	Extended setup	. 153
6	Additional functions92	15	Inputs: SAC	.157
6.1	Limit switch 92	15.1	Basic settings	
6.2	Cleaning programs		Extended setup	
6.3	Mathematical functions 98			
7	Communication103	16	Inputs: Nitrate	
			Basic settings	
7.1 7.2	Web server103Service interface105	16.2	Extended setup	. 163
7.3	Fieldbuses	17	Innuta: ICE	167
		17	Inputs: ISE	
			Extended setup	
			Electrode slot menus	
			Limits operating hours	
			=	

18	Inputs: Interface177
18.1	Basic settings 177
18.2	Manual hold 177
18.3	Tank configuration 178
18.4	Sensor signal 179
18.5	Extended setup
	Index

Liquistation CSF48 About this manual

1 About this manual

This manual gives a detailed account of all the configuration options in the "Setup" menu.

A description of the following menus is provided here:

- Inputs
 - Input configuration
 - Split into separate sections based on the different types of sensor that can be connected
 - Some submenus are identical for all sensor types.

 These submenus are repeated in each input-specific section to make sure you can find the information you need quickly and easily.
- Outputs
 - Output configuration
 - Split into separate sections based on the different output types
- Sampling programs
 - Creating sampling programs
 - Configuring different types of programs
- Additional functions
 - Settings for the alarm sensor
 - Cleaning program configuration
- Data management
 - Firmware updates
 - Saving and loading configurations

This manual does not include the following:

- Setup/General settings
 - --> Operating Instructions BA00443C "Commissioning"
- Display/Operation
 - --> Operating Instructions BA00443C "Commissioning"
- Calibration
 - --> Operating Instructions BA00467C "Calibration"
- Diagnostics
 - --> Operating Instructions BA00463C "Maintenance & diagnostics"
- Expert
 - --> Internal Service Manual

2 General settings

Many settings are not visible when a program is running.

If a program is running, stop the program before making any settings!

2.1 Basic settings

Path: Menu/Setup/General settings

Function	Options	Info
runction	Options	nno
Device tag	Customized text, 32 characters	Select any name for your controller. Use the TAG name for example.
Temperature unit	Options C K Factory setting C	
Current output range	Options • 0 to 20 mA • 4 to 20 mA Factory setting 4 to 20 mA	In accordance with Namur NE43, the linear range is from 3.8 to 20.5 mA (Current output range="4 to 20 mA") or from 0 to 20.5 mA (Current output range="0 to 20 mA"). If the range is exceeded or undershot, the current value stops at the range limit and a diagnostics message (460 or 461) is output. You must select the "4 to 20 mA" range for HART communication.
Error current	0.0 to 23.0 mA Factory setting 21.5 mA	The function meets NAMUR NE43. Set the current value that should be output at the current outputs in the event of an error.
The value for "Error current" should be outside the measuring range. If you decided that your Current output range = "-0 to 20 mA", you should set an error current between 20.1 and 23 mA. If the Current output range = "4 to 20 mA" you could also define a value < 4 mA as the error current. The device allows an error current within the measuring range. In such instances pay attention to possible affects this may have on your process.		
Alarm delay	0 to 9999 s Factory setting 0 s	The system only displays the errors that are present longer than the set delay time. This makes it possible to suppress error messages that only occur briefly and are caused by normal process-specific fluctuations.
Device Hold	Options Disabled Enabled	You can enable an immediate, general hold here. The function has the same effect as the "HOLD" soft key in the measuring screens.

Factory setting Disabled

2.2 Date and time

Path: Menu/Setup/General settings/Date/Time

Function	Options	Info
Set date	Depends on the format	Editing mode: DD (day): 01 to 31 MM (month): 01 to 12 YYYY (year): 1970 to 2106
Set time	Depends on the format	Editing mode: hh (hour): 00 to 23 / 0 am to 12 pm mm (minutes): 00 to 59 ss (seconds): 00 to 59
▶ Extended setup		
Date format	Options DD.MM.YYYY YYYY-MM-DD MM-DD-YYYY	Decide which date format you want to use.
	Factory setting DD.MM.YYYY	
Time format	Options HH:MM am (12h) HH:MM (24h) HH:MM:SS (24h)	Decide whether you want to use the 12-hour or 24-hour clock. Seconds can also be displayed with the latter version.
	Factory setting HH:MM:SS (24h)	
Time zone	Options None Choice of 35 time zones Factory setting	If no time zone is selected, then Greenwich Mean Time is used (London).
	None	
DST	Options Off Europe USA Manual Factory setting Off	The controller adapts the summertime/normal time changeover automatically if you choose European or American daylight saving time. Manual means that you can specify the start and end of daylight saving time yourself. Here, two additional submenus are displayed in which you specify the changeover date and time.

2.3 Automatic hold (optional)

Path: Menu/Setup/General settings/Automatic hold

Function	Options	Info
▶ Device specific hold	·	
Setup menu	Options	Decide whether a hold should be output at the current
Diagnostics menu	DisabledEnabled	output when the particular menu is opened.
	Factory setting Disabled	
Calibration active	Factory setting Enabled	
Hold release time		The hold is maintained for the duration of the delay
	Factory setting 0 s	time when you switch to the measuring mode.

If a device-specific hold is enabled, any cleaning that was previously started is stopped. You can only start a manual cleaning if a hold is active.

2.4 Logbooks

Logbooks record the following events:

- Calibration/adjustment events
- Operation events
- Diagnostic events
- Programming events

Here you define how the logbooks should store the data.

In addition, you are also able to define individual data logbooks. Assign the logbook name and select the measured value to be recorded. You can configure the recording rate (Scan time) individually for every data logbook.

More information on the logbooks is provided in BA00463C "Maintenance & diagnostics", "Diagnostics menu" section.

Path: Menu/Setup/General settings/Logbooks

Function	Options	Info
Logbook ident	Customized text	Part of the file name when exporting a logbook
Event logbook	Options Off Ring buffer Fill up buffer Factory setting Ring buffer	All diagnostic messages are recorded Ring buffer If the memory is full, the latest entry automatically overwrites the oldest entry. Fill up buffer If the memory is 80% full, the device displays a diagnostic message. If the memory is full, there is an overflow, i.e. no new values can be saved. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
Logbook program	Options Off Ring buffer Fill up buffer Factory setting Ring buffer	All program messages are recorded Ring buffer If the memory is full, the latest entry automatically overwrites the oldest entry. Fill up buffer If the memory is 80% full, the device displays a diagnostic message. If the memory is full, there is an overflow, i.e. no new values can be saved. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
► Overflow warnings		
Event logbook="Fill up buffer"		
Calibration logbook	Off	Decide whether you want to receive a diagnostic message from the controller in the event of memory
Diagnostic logbook		overrun of the logbook in question.
Configuration logbook	Factory setting Off	

Path: Menu/Setup/General settings/Logbooks

Function	Options	Info
Overflow warnings Logbook program="Fill up buffer"	Options Off On Factory setting Off	If the fill-up buffer overruns, you can decide whether you want to receive a diagnostic message from the controller or not for each individual logbook.
▶ Data logbooks		
▶New		You can create a maximum of 8 data logbooks.
Logbook name	Customized text, 20 characters	
Source of data	Options None Binary input 1 Binary input 2 Analog input 1 Analog input 2 Temperature Factory setting None	Select the input that should be the data source of the logbook entries.
Measured value	Options Depends on Source of data Factory setting None	You can record different measured values depending on the source of data.
Scan time	00:00:01 to 01:00:00 Factory setting 00:01:00	Minimum interval between two entries Format: HH:MM:SS
Data logbook	Options Off Ring buffer Fill up buffer Factory setting Off	Ring buffer If the memory is full, the latest entry automatically overwrites the oldest entry. Fill up buffer If the memory is 80% full, the device displays a diagnostic message. If the memory is full, there is an overflow, i.e. no new values can be saved. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
Overflow warning Data logbook="Fill up buffer"	Options Off On Factory setting Off	If the fill-up buffer overruns, you can decide whether you want to receive a diagnostic message from the controller or not for each individual logbook.
Add another logbook	Action	Only if you want to create another data logbook immediately. You add a new data logbook at a later data using New.
Finished	Action	This allows you to exit the menu New.

Path: Menu/Setup/General settings/Logbooks

Function	Options	Info
Start/stop simultaneously	Action	Appears if you have created more than one data logbook. With one click, you can start or stop recording for all the data logbooks.
▶ "Logbook name"		The name of this submenu is based on the name of the logbook and only appears once you have created a logbook.
This menu appears se	veral times if you have several	data logbooks.
Source of data Measured value	Read only	This is for information purposes only. If you want to record another value, delete this logbook and create a
Log time left Data logbook="Fill up buffer"	Read only	new data logbook. Displays the days, hours and minutes remaining until the logbook is full.
Log size Data logbook="Ring buffer"	Read only	Displays the number of entries remaining until the logbook is full.
Logbook name	Customized text, 20 characters	You can change the name here again.
Scan time	00:00:01 to 01:00:00 Factory setting 00:01:00	As above Minimum interval between two entries Format: HH:MM:SS
Data logbook	Options Off Ring buffer Fill up buffer Factory setting Off	Ring buffer If the memory is full, the latest entry automatically overwrites the oldest entry. Fill up buffer If the memory is 80% full, the device displays a diagnostic message. If the memory is full, there is an overflow, i.e. no new values can be saved. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
Line plotter		Menu to define the graphic display
Axes	Options Off On	Should the axes (x, y) be displayed (On) or not (Off)?
	Factory setting On	
Orientation	Options Horizontal Vertical Factory setting Horizontal	You can choose whether the value curves should be displayed from left to right ("Horizontal") or from top to bottom ("Vertical"). If you want to display two data logbooks simultaneously, make sure that both logbooks have the same settings here.

Path: Menu/Setup/General settings/Logbooks

_		
Function	Options	Info
X-Description	Options	Decide whether a description should be displayed for the
Y-Description	• Off • On	axes and whether grids should be shown. In addition, you can also decide whether a pitch should be displayed
Grids	Factory setting	
Pitches	_ Oii	
X Pitch/Grid distance	10 to 50%	Specify the pitch.
Y Pitch/Grid distance	Factory setting 10 %	
Remove	Action	This action removes the data logbook. Any data that have not been saved are lost.

Example for setting up a new data logbook

- 1. Menu/Setup/General settings/Logbooks/Data logbooks/New:
 - a. Logbook name: Assign a name, e.g. "01".
 - b. Source of data: Select a data source, e.g. the sensor connected to binary input 1.
 - c. Measured value: Select the measured value that you want to record.
 - d. Scan time: Specify the interval between two logbook entries.
 - e. Data logbook: Activate the logbook. Specify the type of memory, "Ring buffer" or "Fill up buffer".
- 2. ../Finished: Execute this action.
 - --> Your new logbook now appears in the list of data logbooks.
- 3. Select the data logbook with the name "01".
- 4. If you selected "Fill up buffer", you can also decide whether you want to receive a diagnostic message in the event of memory overrun.
- 5. Depending on the type of memory selected, you receive information about the memory space (for "Ring buffer") or the time remaining until memory overrun (for "Fill up buffer").
- 6. Define the graphic display mode in the "Line plotter" submenu.

2.5 Configuring the sampling depending on the device version

The list of functions displayed depends on the device version selected. Functions marked ¹⁾ are available in device versions with a vacuum pump. Functions marked ²⁾ are available in device versions with a peristaltic pump. Functions marked ³⁾ are available in device versions with a distribution arm drive. Functions marked ⁴⁾ are available in device versions with a sampling assembly.

Function	Options	Info		
▶ Sampling				
Number of bottles	Choice of all possible bottle combinations	The bottle configuration you ordered is preset in the device.		
Bottle volume	0 to 100000 ml Factory setting Depends on the bottle configu-			
Distribution reference ³⁾	ration Options Pre sampling Pre bottle change Pre program start Factory setting Pre sampling	The distribution arm goes through a reference point depending on the option selected. Pre sampling: This means that the distribution arm performs a reference test before each individual sampling. Pre bottle change: This means that the distribution arm performs a reference test in every subprogram. Pre program start: This means that a single reference test is performed before the program starts.		
Power failure	Options Resume program Stop program Factory setting Resume program	Decide how the sampler should react when it is energized after a power failure. Resume program: Time and flow-paced The program calculates the omitted samples and enters them in the logbook as failed. When the program is restarted, it continues where it was interrupted. Flow-paced No samples are entered in the logbook during the power failure. When the program is restarted, it continues where it was interrupted.		
Sample retries ^{1), 2), 3)}	0 to 3 Factory setting 0	If sampling is started and no sample is drawn in, sampling can be repeated up to 3 times.		
Sampling delay	0 to 99 s Factory setting 0 s	The start of the sampling cycle can be delayed by up to 99 s. The binary output is switched without any delay.		

Function	Options	Info
Liquid detection ¹⁾	Options Automatic Semi automatic Factory setting Automatic	If "Semiautomatic" is selected, the purge times and intake times can be defined separately.
Dosing volume ^{1), 4)}	1)20 to 350 ml Factory setting 200 ml 4)10 to 1000 ml Factory setting 200 ml	Adjust the dosing tube in the dosing chamber to change the dosing volume. The level in the bottle is calculated using the set dosing volume. Hif the sampling assembly CSA420 is used, 10, 30 or 50 ml are the only values that are permitted.
Conductive sensor ¹⁾	Options Low sensitivity Medium sensitivity High sensitivity Factory setting Medium sensitivity	The switching behavior can be set with the liquid detection function. Use the high sensitivity setting if the sample has a low conductivity, for example.
Dosing chamber ¹⁾	Options Dose without pressure (A) Dose with pressure (B) Factory setting Dose without pressure (A)	Dosing with pressure e.g. in conditions with low suction heights and slight counterpressure or low volumes.
Liquid detection ²⁾	Options Automatic Semi automatic Off Factory setting Automatic	If "Semiautomatic" is selected, the purge times and intake times can be defined separately. Off: The definition of the purge times and intake times is completely time-controlled. Automatic: The last intake time determined is the new purge time. Semi automatic: If the suction heights tend to vary greatly.
Rinse cycles ²⁾	0 to 3 Factory setting 0	The suction line is rinsed with the sample up to 3 times.
Safety interlock ²⁾ (optional)	Options Off On Factory setting Off	If the peristaltic pump is opened, the safety interlock stops all the functions.
Samping time ⁴⁾	5 to 20 s Factory setting 5 s	Enter the time during which the injected piston is located in the sample.

Function	Options	Info
Dosing time ⁴⁾	5 to 100 s Factory setting 5 s	Enter the time until the sample is dosed.
Dosing mode ⁴⁾	Options Dose without pressure (A) Dose with pressure (B) Factory setting Dose without pressure (A)	Dose with pressure (B): The sample is conveyed with pressure from the sample compartment of the assembly into the sampler. This function is only possible if the compressed air valve is connected to 1.
Time after sampling ⁴⁾ (is only displayed if more than one bottle is present)	1 to 100 s Factory setting 5 s	The time the tap waits in the bottle position when dosing has finished
Sample pre shots ⁴⁾ (is only displayed if more than one bottle is present)	0 to 10 Factory setting 0	Enter the sample rinsing cycles with the current sample.
Assembly cleaning ⁴⁾ (is only displayed if more than one bottle is present)	Options Off with air with water Factory setting Off	Select the purge medium: air connected to binary output 1 or water connected to binary output 2. If "Off" is selected, the binary outputs can be used as in the standard version.
▶ Diagnostics settings		
► Sensor fouling ¹⁾		
Warning	0 to 10 Factory setting 7	Indicates maintenance work must be performed on the conductivity sensors. If there is conductive fouling between the conductivity 1 and conductivity 2 electrode, a diagnostic message is displayed when this level of fouling is reached.
Alarm	7 to 10 Factory setting 10	If there is conductive fouling between the conductivity 1 and conductivity 2 electrode, a diagnostic message is displayed when this level of fouling is reached.
▶ Pump tube life ²⁾		
Control	Options Off On Factory setting On	Indicates the pump hose has to be exchanged.
Warning	10 to 50 h Factory setting 30 h	When the tube has been in operation for this length of time, a diagnostic message is displayed to indicate that the tube should be replaced in time.

Function	Options	Info
Alarm	30 to 200 h	
	Factory setting 50 h	
Totalizer	00-00:00 to 49710-06:28	Operating time of the current pump hose in days,
	Factory setting 00-00:00	hours and minutes
Reset	Action	The tube life counter is reset to 0:00 h.
▶ Process sealing ⁴⁾		
Control	Options Off On	Monitoring of the process seal
	Factory setting On	
Warning	100 to 80000	Enter the number of samples until a warning is
	Factory setting 50000	issued.
Alarm	50000 to 1000000	Enter the number of samples until an alarm is
	Factory setting 80000	issued.
Totalizer	Read only	Settings for the sample totalizer
Reset	Action	
► Armature lock postion	14)	Assembly is set to the lock position.
Sample temperature (optional)	i-	
Temp. control	Options Off On	Switch the temperature control of the sample compartment on or off here.
	Factory setting On	
Economy operation	Options Off On	On: Cooling is not enabled until the program takes the
		first sample. After this, the cooling regulator runs until the program is restarted.
Sample temperature	2 to 20 °C	Set the sample compartment temperature.
	Factory setting 4 °C	

Function	Options	Info
Cooling control	Options Standard operation Quick cool down	The temperature regulator is switched off for a certain time if quick cool-down is selected.
	Factory setting Standard operation	
▶ Defrosting		
The automatic defrosting s ged in the Expert mode.	system is preset at the factory. The	e following menu items can only be viewed and chan-
Mode	Options Off On	Configuration of the automatic defrosting function
	Factory setting On	
Interval	Options Hourly Daily Weekly Monthly	Select the defrosting interval
	Factory setting Hourly	
Time	00-01:00 to 00-23:59	
	Factory setting 00-04:00	
Duration	00:01 to 02:00	
	Factory setting 00:05	

2.6 Extended setup

2.6.1 Diagnostics settings

The list of diagnostic messages displayed depends on the path selected. There are device-specific messages, and messages that depend on what sensor is connected.

Path: .../Extended setup/Diagnostics settings/Diag. behavior (optional)

Function	Options	Info
List of diagnostic messages		Select the message to be changed. Only then can you make the settings for this message.
Diag. code	Read only	
Diagnostic message	Options On Off Factory setting Depends on the message	You can deactivate or reactivate a diagnostic message here. Deactivating means: No error message in the measuring mode No error current at the current output
Error current	Options On Off	Decide whether an error current should be output at the current output if the diagnostic message display is activated.
	Factory setting Depends on the message	If general device errors occur, the error current is output at all the current outputs. In the case of channel-specific errors, the error current is only output at the specific current output.
Status signal	Options Maintenance (M) Out of specification (S) Function check (C) Failure (F) Factory setting Depends on the message	The messages are divided into different error categories in accordance with NAMUR NE 107. Decide whether you want to change the status signal assignment for your application.
Diag. output	Options None Alarm relay Relay 1 to n (depends on the device version) Factory setting None	You can use this function to select a relay output and/or binary output to which the diagnostic message should be assigned. For sensors with the Memosens protocol: You first have to configure a relay output for "Diagnostics" (Menu/Setup/Outputs, assign "Diagnostics" function and set Operating mode to "as assigned") before being able to assign the message to an output.
Cleaning program (optional)	Options None Cleaning 1 Cleaning 2 Cleaning 3 Cleaning 4 Factory setting None	Decide whether the diagnostic message should trigger a cleaning program. You can define the cleaning programs under: Menu/Setup/Additional functions/Cleaning.

Path: ... /Extended setup/Diagnostics settings/Diag. behavior (optional)

Function	Options	Info
Detail information	Read only	Here you can find more information on the diagnostic message and instructions on how to resolve the problem.

2.6.2 HART bus address

If Multidrop is active (Bus address > 0), the current at current output 1 is fixed at 4 mA. Here, it does not matter what function has been assigned to the output (measured value/controller etc.). Current simulation is no longer possible.

Path: Menu/Setup/General settings/Extended setup/HART

Function	Options	Info
Bus address	0 to 63 Factory setting 0	You can change the device address to integrate several HART devices in a network (Multidrop mode).

If you reset the device to the factory settings (Diagnostics/Systemtest/Reset/Factory default), the bus address is not reset. Your setting is retained.

2.6.3 PROFIBUS DP

Path: Menu/Setup/General settings/Extended setup/PROFIBUS

Function	Options	Info
Enable	Options Off On Factory setting Off	You can switch off PROFIBUS communication at this point. The software can then only be accessed via local operation.
Termination	Read only	If the device is the last in the bus, you can terminate via the hardware> BA00443C, "Wiring" section
Bus address	1 to 125	If you have addressed the bus via hardware (DIP switches on the module,> BA00443C), you can only read the address here. If an invalid address is set via the hardware, you have to assign a valid address for your device either here or via the bus.

Path: Menu/Setup/General settings/Extended setup/PROFIBUS

Function	Options	Info
Ident number	Options Automatic PA-Profile 3.02 (9760) Liquiline CM44x (155D) Liquistation CSFxx (155C)	
	Factory setting Automatic	

2.6.4 Modbus

Path: Menu/Setup/General settings/Extended setup/Modbus

Function	Options	Info
Enable	Options Off On	You can switch off Modbus communication at this point. The software can then only be accessed via local operation.
	Factory setting Off	
Termination	Read only	If the device is the last in the bus, you can terminate via the hardware. > BA00443C, "Wiring" section
Settings	·	
Transmission Mode	Options TCP RTU ASCII	The transmission mode is displayed depending on the version ordered. In the case of RS485 transmission, you can choose between "RTU" and "ASCII".
Watchdog	0 to 999 s Factory setting 5 s	If no data transmission takes place for longer than the time set, this is an indicator that communication has been interrupted. After this time, input values received via the Modbus are considered to be invalid.

2.6.5 Ethernet

Path: Menu/Setup/General settings/Extended setup/Ethernet

Function	Options	Info
Enable	Options • Off • On	You can switch ethernet communication on and off at this point.
	Factory setting On	
Settings		

Path: Menu/Setup/General settings/Extended setup/Ethernet

Function	Options	Info
Webserver	Options Off On Factory setting On	You can switch the internal web server on and off at this point. Off: It is then not possible to access the device via the web browser.
DHCP	Options Off On Factory setting Off	The Dynamic Host Configuration Protocol (DHCP) makes it possible to assign the network configuration to clients via a server. With DHCP, it is possible to automatically integrate the device into an existing network without the need for manual configuration. Normally, the client need only be configured for automatic retrieval of the IP addresses. During startup, the IP address, the netmask and the gateway are retrieved from a DHCP server.
IP-Address	xxx.xxx.xxx Factory setting 192.168.1.212	An IP address is an address in computer networks which are based on the Internet protocol (IP).
Netmask	xxx.xxx.xxx Factory setting 255.255.255.0	On the basis of the IP address of a device, the netmask specifies which IP addresses this device searches for in its own network and which addresses it could access in other networks via a router. It therefore divides the IP address into a network part (network prefix) and a device part. The network part must be identical for all devices in the individual network, and the device part must be different for every device within the network.
Gateway	x.x.x.x Factory setting 0.0.0.0	A gateway (protocol converter) enables communication between networks that are based on completely different protocols.
MAC-Address	Read only	The MAC address (Media Access Control address) is the hardware address of every individual network adapter which is used to uniquely identify the device in a computer network.
Modbus TCP port	Read only	The Transmission Control Protocol (TCP) is an
Webserver TCP port	Read only	arrangement (protocol) as to how data should be exchanged between computers. A port is a part of an address which assigns data segments to a network protocol.

2.6.6 Data management

Firmware update

Please contact your local sales office for information on firmware updates available for your controller and its compatibility with earlier versions.

Your **current firmware version** can be found at: Menu/Diagnostics/System information/Software version.

First save your current setup on an SD card since a firmware update overwrites your settings with the factory settings. After updating the firmware, you can restore your setup by uploading it from the SD card.

To install a firmware update, you must have the update available on an SD card.

- 1. Insert the SD card into the controller card reader.
- 2. Go to: Menu/Setup/General settings/Extended setup/Data management/Firmware update.
 - --> The update files on the SD card are displayed.
- 3. Select the desired update and select yes when the following question is displayed: The current firmware will be overwritten. After this the device will reboot. Do you want to proceed?
 - --> The firmware is loaded and the device is then started with the new firmware.

Saving the setup

Saving the setup gives you the following advantages:

- Quick and easy to restore a setup following a firmware update
- Copying settings for other devices
- Quick and easy switching between various setups, e.g. for different user groups or for recurring sensor type change
- Restoring a tried-and-tested setup, e.g. if you have changed a lot of settings and no longer know what the original settings were
- 1. Insert the SD card into the controller card reader.
- 2. Go to: Menu/Setup/General settings/Extended setup/Data management/Save setup.
- 3. Assign a file name (Name).
- 4. Then select "Save".
- 5. If you have already assigned the file name, you will be asked whether you want to overwrite the existing setup.
 - Select "OK" to confirm, or cancel the action and give the file a new name.
- --> Your setup is stored on the SD card and you can upload it quickly to the device at a later date.

Loading the setup

You can load a setup you have saved quickly and easily:

- 1. Insert the SD card into the controller card reader.
- 2. Go to: Menu/Setup/General settings/Extended setup/Data management/Load setup.
 - --> A list of all the setups on the SD card is displayed.

- 3. Select the desired setup.
 - The device then displays the following message: The current parameters will be overwritten and the device will reboot. Warning: Please note that cleaning and controller programs can be active. Do you want to proceed?
- 4. Select "OK" to confirm or cancel the action.
- --> The desired setup is restored after restarting the device.

Exporting the setup

Exporting the setup gives you the following advantages

- Export in xml format
- Import the data e.q. into MS Excel (drag&drop the xml file in an open Excel window)
- 1. Insert the SD card into the controller card reader.
- 2. Go to: Menu/Setup/General settings/Extended setup/Data management/Export setup.
- 3. Assign a file name (Name).
- 4. Then select "Export".
- 5. If you have already assigned the file name, you will be asked whether you want to overwrite the existing setup.

 Select "OK" to confirm, or cancel the action and give the file a new name.
- --> Your setup is saved on the SD card.

Activation code

You require activation codes for:

- Additional functions, e.g. fieldbus communication
- Software upgrades

Enter the activation code:

- Menu/Setup/General settings/Extended setup/Data management/Activation code.
- Confirm your entry. Your new hardware or software function is then activated and can be configured.
- If activation codes are available for your device, these codes are provided on the inner nameplate. The corresponding device functions are activated at the factory. You only require the codes if servicing the device.

The table below tells you what functions an activation code enables:

Function	Activation code beginning with
Second Memosens input	062
Two current outputs (BASE-E module only)	081
HART	0B1
PROFIBUS DP	0B3
Modbus TCP	0B4
Modbus RS485	0B5

Inputs Liquistation CSF48

3 Inputs

Liquistation CSF48 has 2 binary inputs and 2 current inputs as standard. All inputs are galvanically isolated from one another.

3.1 Binary inputs

The binary inputs are used to control the sampler using external signals. With the CSF48, the auxiliary voltage of 24 V DC from the terminal block in the connection compartment of the sampler can be used for floating contacts (see BA00443C "Commissioning").

Function	Options	Info		
▶ Binary input S:x	Binary input S:x			
Mode	Options Off On Factory setting Off	Switches the function on or off		
Input mode	Options Flow rate Rainfall External event Armature end position detection (only for version with sampling assembly) Factory setting Flow rate	 Pulse input for connected flowmeters or rain gages Control of sampling functions via external signals 		
If Input mode Flow rate is sele	rted:			
Signal slope	Options Low-High High-Low Factory setting	Preselect the level change of the signal.		
	Low-High			
Unit	Options m³ l cf gal Factory setting m³	Select the unit.		
Meas. value format	Factory setting	Specify the number of decimal places for the flow.		
1 Impulse =	0 to 1000 m ³ Factory setting 10 m ³	Definition of the pulse value, limits are calculated depending on the unit		

Liquistation CSF48 Inputs

Function	Options	Info		
▶ Unit of totalized flow				
Current totalized flow		The totalized flow values are displayed.		
Reset totalizer	Options Manual Automatic At program start	Manual: Reset the counter manually. Automatic: The counter is reset automatically at intervals.		
	Factory setting Manual	At program start: The counter is reset at program start.		
If counter reset Manual is sele	cted:			
Reset totalized flow	Action	The totalized flow currently calculated is set to zero when the counter is reset.		
If counter reset Automatic is s	elected:			
Interval	Options Daily Weekly Monthly Factory setting Daily	Daily: If a daily interval is selected, set the Time in the menu item that follows. Weekly: If a weekly interval is selected, set the Day of week and the Time in the menu items that follow. Monthly:		
		If a monthly interval is selected, set the Day of month and the Time in the menu items that follow.		
Time	00:00:00 to 23:59:59 HH:MM:SS Factory setting 12:00:00 HH:MM:SS			
If Input mode Rainfall is select	red:			
Signal slope	Options Low-High High-Low Factory setting	Preselect the level change of the signal.		
	Low-High			
Unit	Options mm inch	Select the unit.		
	Factory setting mm			
Meas. value format	Factory setting #.#	Specify the number of decimal places.		
1 Impulse =	0.00 to 5.00 mm Factory setting 1.0 mm	Definition of the pulse value, limits are calculated depending on the unit. The correct switch value is provided in the Operating Instructions of your rain gage.		

Inputs Liquistation CSF48

ınction	ptions	
,		e intensity per minute, hour or day according equirements.
	actory setting um/min	
▶ Totalized rainfall	'	
Totalized rainfall	The totali	ized rainfall is displayed.
	Automatic At program start actory setting lanual Automat The count At program At program	ter is reset automatically at intervals.
counter reset Manual is select	1:	
Reset totalized rainfall		ized rainfall currently calculated is set to zero meter is reset manually.
counter reset Automatic is sel	rted:	
	Weekly Monthly actory setting aily Meekly: If a weekl the Time Monthly: If a monthly:	ly interval is selected, set the Day of week and in the menu items that follow.
	0:00:00 to 23:59:59 H:MM:SS actory setting 2:00:00 HH:MM:SS	,
	actory setting 2:00:00 HH:MM:SS	

Liquistation CSF48 Inputs

Function	Options	Info
Operation	Options No operation Start sampling Program start Program stop Program duration Program pause Partprogram activation Change bottle Bottle synchronization External hold Start cleaning Factory setting No operation	No operation: No action is executed. Start sampling: A pulse triggers sampling. Program start: A pulse starts a program. Program stop: A pulse stops the program running. Program duration: A program is active as long as the input signal is present. The signal is a level signal, i.e. the action takes effect as long as the level is present. The level that triggers the action is configured in the Signal slope menu item that follows. Program pause: The input signal stops the program running. The programs continue running when the signal disappears. The signal is a level signal, i.e. the action takes effect as long as the level is present. The level that triggers the action is configured in the Signal slope menu item that follows. Partprogram activation: A pulse triggers a subprogram. Change bottle: A pulse triggers a changeover to the next bottle. Bottle synchronization: A pulse triggers a changeover to the set bottle position—> Then select the bottle position (depends on the bottle configuration). External hold: The input signal triggers an external hold. The signal is a level signal, i.e. the action takes effect as long as the level is present. The level that triggers the action is configured in the Signal slope menu item that follows. Start cleaning: A pulse triggers the cleaning.
Signal slope	Options Low-High High-Low	Preselect the level change of the signal> If Low-High is selected, the high level brings about the corresponding setting.

Inputs Liquistation CSF48

Path: Menu/Setup/Inputs

Function	Options	Info
Position	Options Off Front (sampling) Back (dosing) Factory setting Off	
Binary input assignment view		

3.2 Current inputs

The current input must be assigned an analog signal for the functions described. Active and passive current inputs are available to connect two-wire or four-wire devices.

For the correct wiring of the current inputs, see: BA00443C "Commissioning"

Path: Menu/Setup/Inputs

Function	Options	Info
Current input S:x		
Mode	Options Off Off Oto 20 mA Vectory setting Off	Enter the output signal of the connected device: 0 to 20 mA or 4 to 20 mA.
Input mode	Options Flow rate Parameter Current Factory setting Current	Select the input variable. Flow rate: The input can be used as the source for time/flow-paced or flow-paced sampling programs. Parameter: The input can be used as the source for limit switches, logbooks and enabling and disabling events for sampling programs.
		Current: The input can be used as the source for limit switches, logbooks and enabling and disabling events for sampling programs. A unit name cannot be specified.

Liquistation CSF48 Inputs

Function	Options	Info	
Unit of flow	Options I/s m³/s m³/s m³/h m³/d cfs cfm gpm gph mgd Factory setting l/s	Select the unit.	
Unit of totalized flow	Options l m³ cf gal Factory setting m³	Select the unit for the totalized flow.	
Meas. value format	Factory setting	Specify the number of decimal places for the flow.	
Minimum flow	0 to 10000 l/s Factory setting 0 l/s	The set limit value prevents sampling if the flow falls below this value (only for time/flow-paced sampling)).	
Lower range value	0 to 10000 l/s Factory setting 0 l/s	Enter a value for the start of the measuring range. 0/4 mA is assigned to this value as per your specifications.	
Upper range value	0 to 10000 l/s Factory setting 100000 l/s	Enter a value for the end of the measuring range. 20 mA is assigned to this value as per your specifications.	
Damping	0 to 60 s Factory setting 0 s	The damping causes a floating average curve of the measured values over the time specified.	

Inputs Liquistation CSF48

Patn: Menu/Setup/Inputs	Omtions	Tf.			
Function	Options	Info			
▶ Totalized flow					
flow-paced sampling value. The current tot	The totalized flow is calculated when the program is started if you use a sampling program with volume, flow-paced sampling or time/flow-paced sampling as the start condition. The samples are taken based on this value. The current totalizer is used for calculating purposes if the totalized flow is used as the measured value for an enabling or disabling event.				
Current totalized flow		The totalized flow values are displayed.			
Reset totalizer	Options Manual Automatic	Manual: Reset the counter manually.			
	 At program start 	Automatic: The counter is reset automatically at intervals.			
	Factory setting Manual	At program start: The counter is reset at program start.			
Flow rate		The current flow rate is displayed.			
If counter reset Manual is selec	cted:				
Reset totalized flow	Action	The totalized flow currently calculated is set to zero when the counter is reset.			
If counter reset Automatic is se	elected:				
Interval	Options Daily Weekly Monthly Factory setting Daily	Daily: If a daily interval is selected, set the Time in the menu item that follows.			
		Weekly: If a weekly interval is selected, set the Day of week and the Time in the menu items that follow.			
		Monthly: If a monthly interval is selected, set the Day of month and the Time in the menu items that follow.			
If Input mode Parameter is sele	If Input mode Parameter is selected:				
Meas. value format	Factory setting #.#	Specify the number of decimal places.			
Parameter name	Customized text	Assign a name.			
Unit of measure	Customized text	Enter the engineering unit.			
Lower range value	-20 to 10000	Enter a value for the start of the measuring range. 0/4 mA is assigned to this value as per your specifica-			
	Factory setting 0	tions.			
Upper range value					
	Factory setting 10	20 mA is assigned to this value as per your specifications.			
Damping	0 to 60 s	The damping causes a floating average curve of the			
	Factory setting 0 s	measured values over the time specified.			


Liquistation CSF48 Inputs

Function	Options	Info
If Input mode Current is selected:		
Meas. value format	Factory setting #.#	Specify the number of decimal places.
Damping	0 to 60 s Factory setting 0 s	The damping causes a floating average curve of the measured values over the time specified.

Programming Liquistation CSF48

4 Programming

The Liquistation CSF48 offers users a wide range of options for configuring individual sampling programs. The 3 different program types (Basic, Standard and Advanced) make it easy for you to find the right program for your application.

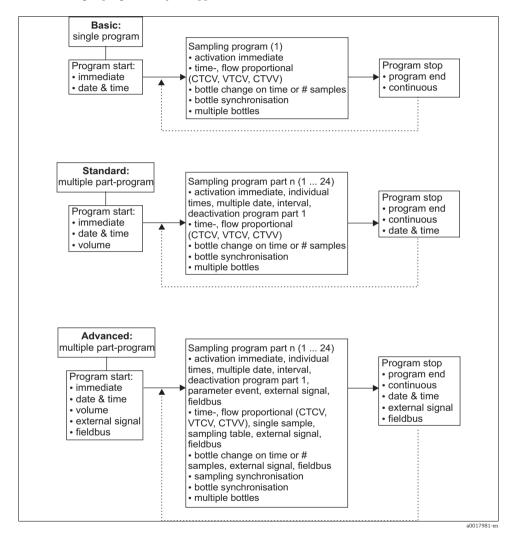

32

Liquistation CSF48 Programming

4.1 Overview of the possible program types

Sampling mode	Basic program type	Standard program type	Advanced program type
	Time-paced	Time-paced	Time-paced
	Flow-paced	Flow-paced	Flow-paced
Vacuum/peristaltic pump,			Single sample
Sampling assembly			Sampling table
			External signal
			Fieldbus (optional)
Peristaltic pump	Time/flow-paced	Time/flow-paced	Time/flow-paced

The graphic below explains the various ways sampling can be controlled on the basis of a flow

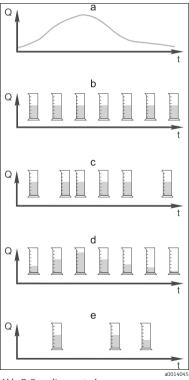


Abb. 7: Sampling control

a. Flow curve

b. Time-paced sampling

A constant sampling volume (e.g. 50 ml) is taken at steady intervals (e.g. every 5 min).

c. Flow-paced sampling

A constant sampling volume is taken at variable intervals (depending on the inflow volume).

d. Time/flow-paced sampling

A variable sampling volume (the sampling volume depends on the inflow) is taken at steady time intervals (e.g. every 10 min).

e. Event-controlled sampling

Sampling is triggered by an event (e.g. pH limit value). Sampling can be time-paced, flow-paced, or time/flow-paced, or single samples can be taken.

Programming Liquistation CSF48

The following table explains the various types of sampling using specific examples.

Type of sampling	Example	Info
Time-paced	 Sampling interval: 5 min Sampling volume: 50 ml Bottle change mode: 2 h 	This type of sampling remains constant over time and does not take changes in flow or pollu- ting load into account. It is possible to take a representative sample if the intervals are brief
	With this setting, a 50 ml sample is taken every 5 minutes. 12 samples are thus taken every hour. Each bottle is filled over a period of 2 hours. This results in a total sampling volume of 24 samples per bottles x 50 ml = 1200 ml.	(e.g. 5 min).
Flow-paced	Controlled via current input Signal: 0 to 20 mA = 0 to 600 m³/h Sampling volume: 50 ml Sampling interval: 20 m³ Bottle change mode: 2 h	 The current inputs can be configured for the current range of 0 to 20 mA or 4 to 20 mA. The binary inputs require power (24 V DC) for floating contacts.
	If 20 mA = 600 m³/h, a sample is taken every 2 minutes (smallest sampling interval with maximum flow). The total number of samples amounts to 60 samples per bottle. With a flow of 300 m³/h, a sample is taken every 4 minutes. Controlled via binary input Signal pulse: 5 m³ Sampling volume: 50 ml Sampling interval: 20 m³ Bottle change mode: 2 h	In the case of flow-paced sampling, the sampling interval is calculated on the basis of the volume flow. The same sampling volume is take at variable intervals.
		Advantage: Good, representative results in the event of minor fluctuations in flow.
		Disadvantage: Longer intervals when the level of water is low mean that malfunctions cannot be detected.
	The pulses are scaled at the flowmeter. By multiplying the pulses at the sampling interval, the shortest sampling interval at the maximum pulse frequency can be set. Example: Given a maximum flow of 600 m³/h, the pulse frequency at 5 m³ is 120 pulses/h or 2 pulses/min. With a sampling interval of 20 m³, sampling takes place after 4 pulses = 2 minutes.	

Liquistation CSF48 Programming

Type of sampling	Example	Info
Time/flow-paced (only possible with peristaltic pump)	Controlled via current input ■ Signal: 0 to 20 mA ■ Sampling interval: 10 min ■ Sampling volume: variable The maximum sampling volume is defined at the maximum flow rate. Example: The maximum flow rate at 20 mA at the current input is 160 l/s, and the maximum sampling volume is 200 ml. When transferring samples into a 30l mixed sample container, 144 samples are taken per day with a maximum sampling volume of 28.8 l. With a flow rate of 80 l/s, a sampling volume of only 100 ml would be grabbed, and a sampling volume of 50 ml would be grabbed at a flow rate of 40 l/s. The sampling volume is always calculated based on the flow. Controlled via binary input ■ Binary input (pulse per flow unit) ■ Sampling interval: 10 min ■ Sampling volume: variable The sampling volume is defined for a flow pulse, e.g.: 1 pulse is 20 ml. For instance, if 5 flow pulses are counted between the sampling intervals, this results in a sampling volume of 5 x 20 = 100 ml, and a volume of 8 x 20 = 160 ml for 8 pulses. If a binary input is used for time/flow-paced sampling, the sampling volume is calculated per sample as a percentage of the specified sampling volume.	Samples are taken at set intervals with a variable sampling volume. The sampling volume is calculated from the flow rate. More volume is grabbed when the flow is high than when it is low. Since the flow normally fluctuates and the maximum flow is only rarely a constant variable, the sampling volume transferred to the container will depend on the daily average. Advantage: Very good, representative sampling given large fluctuations in the flow and constant time intervals. Disadvantage: Too little sampling volume is made available for analysis when the flow is low. Advantage with current input: For the sampling interval, either the current flow rate or the average value between the last and current flow rate is used to calculate the exact sampling volume (depending on the presetting). Disadvantage with binary input: For the sampling interval, the pulses counted since the last sampling are multiplied by a volume. If this is too high - e.g. 100 ml - the composition of the sample is not representative for analysis.
Event	Event-based sampling is controlled via the current input, binary input and/or sensor input. The subprogram created waits to be activated by an event that can consist of up to 3 individual events. Every possible condition can be created using logical "and" / "or" links. For example, the information from a flowmeter connected to the current input can be linked to a rain gage and a pH sensor signal connected to the binary input. An event is defined as limit value violation (exceeded or undershot), range monitoring within or outside a range, or a rate of change. Users can decide whether additional sampling is started when the event starts and/or ends. For the duration of the event, users can choose from time-paced, flow-paced or time/flow-paced sampling, or can take single samples, use a sampling table or the external control system.	The sampler waits for an event. This event takes place via internal sensor signal processing or via devices connected externally. As bottle assignment is possible when using several bottles, events can be assigned to individual bottles. A maximum of 24 subprograms can be started simultaneously and assigned to individual bottles.

Programming Liquistation CSF48

4.1.1 Bottle synchronization

The bottle synchronization setting is possible with all types of program. In addition, bottle synchronization can be switched via an external signal.

Bottle synchronization is only possible with a bottle change after a specific time and not with a bottle change after a number of samples.

Specific bottles can be assigned specific filling times with the bottle synchronization function. For example, bottle 1 is to be filled from midnight to 2 a.m., bottle 2 from 2 a.m. to 4 a.m. etc.. The following options are available for this:

- None: The time of sampling and bottle change are not synchronized.
- 1. bottle change time: Sampling starts with the first bottle. The changeover to the next bottles is synchronized. For example, a time of 2 hours was set for bottle changeover, and 00:00 was set for the synchronization. If the program is started at 5:23 a.m., for example, bottle 1 is initially filled. The system switches for the first time to bottle 2 at midnight (00:00), to bottle 3 at 2 a.m. etc.
- 1. Time of change + bottle number: A specific filling time is assigned to every bottle. For example, midnight to 2 a.m. for bottle 1; 2 a.m. to 4 a.m. for bottle 2; 4 a.m. to 6 a.m. for bottle 3 etc. If the program is started at 10 a.m., for example, the device starts filling bottle 6. It is also possible to start synchronization on a specific day of the week. For example, a time of 24 hours was set for bottle changeover, Monday 00:00 was the time set for synchronization, and Tuesday 8 a.m. was set for starting the program. The system fills bottle 2 until 00:00 on Wednesday and then switches to bottle 3.
- External signal: The system changes to the next bottle when an external signal is received.
 The external signal first has to be configured via the binary input. The binary input can then be selected as the source.

4.2 Program type: Basic

With the Basic program type, you can create simple sampling programs quickly based on time, volume and flow. In the case of volume- and flow-controlled sampling, the inputs have to be configured appropriately beforehand. If you want to create a program and use it immediately, you have to check the configuration of the sampler before programming. You can make the settings under "Menu/Setup/General settings/Sampling": e.g. the bottle configuration, and the bottle volume, as well as the correct dosing volume for the device version with a vacuum pump. The dosing volume setting makes it possible to correctly calculate the level in the bottle and is a reliable way of preventing the bottles from being overfilled.

You can go to the Setup program either via the overview under "Select sampling program" or via the path "Menu/Setup/Sampling programs".

Path: Menu/Setup/Sampling programs

Function	Options	Info
Current program:	Read only	The last sampling program to be created or used is displayed.
Status	Read only	Display "Active": The sampling program has been started and the device takes a sample as per the set parameters. Display "Inactive": No sampling program has been started, or a program that was running has been paused. Display "Pause": Sampling program paused.
▶ Setup program		
New		A list of all the programs created is displayed. For this reason, it is often helpful to add a "B" for Basic in the program name.
Program1, which is supplied with the device, is displayed, as is a list of all the programs already created (Basic, Standard or Advanced programs). You can either create a new program or select an existing one. If you select an existing program, you can edit, delete, start or duplicate it. Furthermore, you can also see whether this program is a Basic, Standard or Advanced program. If you are creating a new program, select the Basic, Standard or Advanced program type.		
Basic		
Program name	Customized text	Use a distinct name for your sampling program. The program name can be up to 16 characters long.
Bottle configuration	Choice of all possible bottle combinations	The ordered bottle configuration is preset or the configuration selected in the setup is displayed.

Function	Options	Info
	Options: - 1x - PE direct distribution - 2x - PE direct distribution - 4x - PE direct distribution - 4x - PE direct distribution - 12x - PE direct distribution - 12x - PE direct distribution - 12x - PE direct distributor plate - 24x - PE direct distributor plate - 24x - PE direct distributor plate - 6x+1x - PE/glass distributor plate - 6x+2x - PE+PE distributor plate - 6x+2x - PE+glass distributor plate - 12x+1x - PE/glass distributor plate - 12x+2x - PE+PE distributor plate - 12x+2x - PE+PE distributor plate - 12x+2x - PE+BE distributor plate - 12x+2x - PE+BE distributor plate - 12x+2x - PE+BE distributor plate - 12x+6x PE direct distribution - 12x+6x PE/glass distributor plate	¹⁾ Use this option for bottle configuration "W" (4 x 5000 ml Schott bottles, DURAN GLS 80).
Bottle volume	0 to 100000 ml Factory setting 30000 ml	Set the bottle volume. The preset value depends on the bottle configuration configured. The bottle volume is always 30 l for individual containers. In the case of asymmetric distribution, e.g. 6 x 3 l + 2 x 13 l, you can set the bottle volume on the left and right in the menu items that follow.
Sampling mode	Options Time paced CTCV Flow paced VTCV Time/flow paced CTVV Factory setting Time paced CTCV	The following functions depend on the option selected. These versions are illustrated individually in the following section to provide a clearer understanding of the options. Time paced CTCV: A constant sampling volume is taken at steady intervals. Flow paced VTCV: A constant sampling volume is taken at variable intervals. Time/flow paced CTVV (only for version with peristaltic pump): A variable sampling volume is taken at steady intervals.

4.2.1 Settings with a time-paced Basic program

Settings with the Basic program type with 1 bottle

Sampling mode = "Time paced CTCV"

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info	
Sampling interval (for version with vacuum pump or peristaltic pump)	00:01:00 to 99:59:00 HH:MM:SS Factory setting 00:10:00 HH:MM:SS	Set the sampling interval.	
Sampling interval (for version with sampling assembly)	00:00:10 to 99:59:00 HH:MM:SS		
	Factory setting 00:10:00 HH:MM:SS		
Dosing volume (for version with vacuum pump or sampling assembly) Sampling volume (for version with peristaltic pump)	Vacuum pump: 20 to 350 ml Peristaltic pump: 10 to 10000 ml Sampling assembly: 10 to 1000 ml Factory setting Vacuum pump: 200 ml Peristaltic pump: 100 ml Sampling assembly: 200 ml	Set the dosing volume or the sampling volume. In the version with a vacuum pump or sampling assembly, the volume is taken from the setup and can only be modified there. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.	
Multiplier (for version with vacuum pump or sampling assembly)	1 to 10 Factory setting 1	You can change the sampling volume using the multiplier. For example, if the dosing volume is set to 200 ml, set the multiplier to 2 for a sampling volume of 400 ml. 2 samples are taken in succession when sampling.	
Bottle change mode	Options Number of samples Time External signal Factory setting Number of samples	The bottle can be changed after a specific number of samples, after a time or by an external signal.	
If Bottle change mode Number of samples is selected:			
Samples per bottle	1 to 9999 Factory setting 1	Set the number of samples. If the bottle is full beforehand based on the calculated level, the system prevents more samples being added to the bottle. Such samples are logged as failed samples in the program logbook. At the same time, the diagnostics message "Overfill check" (F353) is also triggered.	
If Bottle change mode Time is selected:			

Function	Options	Info
Time interval	00-00:02 to 31-00:00 DD-HH:MM Factory setting 00-01:00 DD-HH:MM	Set the time (days, hours and minutes) after which the system should change to the next bottle.
Bottle synchronization	Options None 1. bottle change time 1. Time of change + bottle number Factory setting None	None: The time of sampling and bottle change are not synchronized. 1. bottle change time: Sampling starts with the first bottle. Set the synchronization time. 1. Time of change + bottle number: Each bottle is assigned to a specific fill time. Set the synchronization time and the weekday.
	T	
Start condition	Options Immediate Date/time	The sampling program can be started either immediately or at a specific, configurable time.
	Factory setting Immediate	
If Start condition Date/time is	selected:	
Start date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the start date for the sampling program. The format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is started. The format depends on the option configured under general settings.
Stop condition	Options - Program end - Continuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶Inputs		Settings for the inputs can be made as described in the "Inputs" section.

Settings with the Basic program type with multiple bottles

Sampling mode = "Time paced CTCV"

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info	
Sampling interval (for version with vacuum pump or peristaltic pump)	00:01:00 to 99:59:00 HH:MM:SS Factory setting 00:10:00 HH:MM:SS	Set the sampling interval.	
Sampling interval (for version with sampling assembly)	00:00:10 to 99:59:00 HH:MM:SS Factory setting 00:10:00 HH:MM:SS		
Dosing volume (for version with vacuum pump or sampling assembly) Sampling volume (for version with peristaltic pump)	Vacuum pump: 20 to 350 ml Peristaltic pump: 10 to 10000 ml Sampling assembly: 10 to 1000 ml Factory setting Vacuum pump: 200 ml Peristaltic pump: 100 ml Sampling assembly: 200 ml	Set the dosing volume or the sampling volume. The volume is taken from the setup in the version with a vacuum pump or sampling assembly. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.	
Multiplier (only for version with vacuum pump or sampling assembly)	1 to 10 Factory setting 1	You can change the sampling volume using the multiplier. For example, if the dosing volume is set to 200 ml, set the multiplier to 2 for a sampling volume of 400 ml. 2 samples are taken in succession when sampling.	
Bottle change mode	Options Number of samples Time External signal Factory setting Number of samples	The bottle can be changed after a specific number of samples, after a time or by an external signal.	
If Bottle change mode Number of samples is selected:			
Samples per bottle	1 to 9999 Factory setting 1	Set the number of samples. If the bottle is full beforehand based on the calculated level, the system prevents more samples being added to the bottle. Such samples are logged as failed samples in the program logbook.	
If Bottle change mode Time is selected:			

Function	Options	Info
Time interval	00-00:02 to 31-00:00 DD-HH:MM Factory setting 00-01:00 DD-HH:MM	Set the time (days, hours and minutes) after which the system should change to the next bottle.
Multiple bottles	0 to 23 The configuration options depend on the current number of bottles Factory setting 0	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.
Bottle synchronization	Options None 1. bottle change time 1. Time of change + bottle number Factory setting None	None: The time of sampling and bottle change are not synchronized. 1. bottle change time: Sampling starts with the first bottle. Set the synchronization time. 1. Time of change + bottle number: Each bottle is assigned to a specific fill time. Set the synchronization time and the weekday.
If Bottle change mode Externa	al signal is selected:	
Bottle change signal input	Options No bottle change input configured Binary input S:x Factory setting No bottle change input configured	The bottle change input can be configured under Inputs.
Multiple bottles	O to 23 The configuration options depend on the current number of bottles Factory setting 0	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.
Start condition	Options Immediate Date/time Factory setting	The sampling program can be started either immediately or at a specific, configurable time.
If Start condition Date/time is	Immediate	
		Court the second data for the second
Start date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the start date for the sampling program. The format depends on the option configured under general settings.

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info
Start time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is started. The format depends on the option configured under general settings.
Stop condition	Options Program end Continuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles. The bottle level is reset once a program loop has been run through.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.

4.2.2 Settings with a flow-paced Basic program

Settings with the Basic program type with 1 bottle

Sampling mode = "Flow paced VTCV"

Function	Options	Info
Flowmeter input	Options No flow input configured Binary input S:x Current input S:x Factory setting No flow input configured	Select the flow input. The binary input or the current input must be configured for this function. Only the inputs configured as a flow input are displayed.
Sampling interval (for versions with vacuum pump or peristaltic pump)	1.000 to 9999.000 m ³ Factory setting 10.000 m ³	Set the sampling interval. The unit and the number of decimal places are displayed as configured under Setup/Inputs.

Function	Options	Info
Dosing volume (for version with vacuum pump or sampling assembly) Sampling volume (for version with peristaltic pump)	Vacuum pump: 20 to 350 ml Peristaltic pump: 10 to 10000 ml Sampling assembly: 10 to 1000 ml Factory setting Vacuum pump: 200 ml Peristaltic pump: 100 ml Sampling assembly: 200 ml	Set the dosing volume or the sampling volume. The volume is taken from the setup in the version with a vacuum pump or sampling assembly. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.
Multiplier (only for version with vacuum pump or sampling assembly)	1 to 10 Factory setting 1	You can change the sampling volume using the multiplier. For example, if the dosing volume is set to 200 ml, set the multiplier to 2 for a sampling volume of 400 ml. 2 samples are taken in succession when sampling.
Bottle change mode	Options Number of samples Time External signal Factory setting Number of samples	The bottle can be changed after a specific number of samples, after a time or by an external signal.
If Bottle change mode Number	of samples is selected:	
Samples per bottle	1 to 9999 Factory setting 1	Set the number of samples.
If Bottle change mode Time is s	selected:	
Time interval	00-00:02 to 31-00:00 DD-HH:MM Factory setting 00-01:00 DD-HH:MM	Set the time (days, hours and minutes) after which the system should change to the next bottle.
Bottle synchronization	Options None 1. bottle change time 1. Time of change + bottle number Factory setting None	None: The time of sampling and bottle change are not synchronized. 1. bottle change time: Sampling starts with the first bottle. Set the synchronization time. 1. Time of change + bottle number: Each bottle is assigned to a specific fill time. Set the synchronization time and the weekday.

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info
Start condition	Options Immediate Date/time	The sampling program can be started either immediately or at a specific, configurable time.
	Factory setting Immediate	
If Start condition Date/time is	selected:	
Start date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the start date for the sampling program. The format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is started. The format depends on the option configured under general settings.
Stop condition	Options Program end Continuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.

Settings with the Basic program type with multiple bottles Sampling mode = "Flow paced VTCV" $^{\circ}$

Function	Options	Info
Flowmeter input	Options No flow input configured Binary input S:x Current input S:x Factory setting No flow input configured	Select the flow input. The binary input or the current input must be configured for this function. Only the inputs configured as a flow input are displayed.
Sampling interval (for version with vacuum pump or peristaltic pump)	1.000 to 9999.000 m ³ Factory setting 10.000 m ³	Set the sampling interval. The unit and the number of decimal places are displayed as configured under Setup/Inputs.

Function	Options	Info
Dosing volume (for version with vacuum pump or sampling assembly) Sampling volume (for version with peristaltic pump)	Vacuum pump: 20 to 350 ml Peristaltic pump: 10 to 10000 ml Sampling assembly: 10 to 1000 ml Factory setting Vacuum pump: 200 ml Peristaltic pump: 100 ml Sampling assembly: 200 ml	Set the dosing volume or the sampling volume. The volume is taken from the setup in the version with a vacuum pump or sampling assembly. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.
Multiplier (only for version with vacuum pump)	1 to 10 Factory setting	You can change the sampling volume using the multiplier. For example, if the dosing volume is set to 200 ml, set the multiplier to 2 for a sampling volume of 400 ml. 2 samples are taken in succession when sampling.
Bottle change mode	Options Number of samples Time External signal Factory setting Number of samples	The bottle can be changed after a specific number of samples, after a time or by an external signal.
If Bottle change mode Number	of samples is selected:	
Samples per bottle	1 to 9999 Factory setting	Set the number of samples.
If Bottle change mode Time is s	selected:	
Time interval	00-00:02 to 31-00:00 DD-HH:MM Factory setting 00-01:00 DD-HH:MM	Set the time (in days, hours and minutes) after which the system should change to the next bottle.
Multiple bottles	O to 23 The configuration options depend on the current number of bottles. Factory setting 0	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info
Bottle synchronization	Options None 1. bottle change time	None: The time of sampling and bottle change are not synchronized.
	1. Time of change + bottle number	1. bottle change time: Sampling starts with the first bottle.
	Factory setting None	1. Time of change + bottle number: Each bottle is assigned to a specific fill time.
If Bottle change mode Externa	l signal is selected:	
Bottle change signal input	Options No bottle change input configured	The bottle change input can be configured under ▶ Inputs .
	Factory setting No bottle change input configured	
Multiple bottles	O to 23 The configuration options depend on the current number of bottles	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.
	Factory setting 0	
Start condition	Options Immediate Date/time	The sampling program can be started either immediately or at a specific, configurable time.
	Factory setting Immediate	
If Start condition Date/time is	selected:	
Start date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the start date for the sampling program. The format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59	Set the time when the sampling program is started.
	Factory setting HH:MM:SS (24h)	The format depends on the option configured under general settings.
_		
Stop condition	Options Program end Continuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info	
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x Factory setting No binary output config. for state reporting	Assig	nment of the binary output to the program cycle.
▶ Inputs		i	Settings for the inputs can be made as described in the "Inputs" section.

4.2.3 Settings with a time/flow-paced Basic program (only for version with peristaltic pump)

Settings with the Basic program type with 1 bottle

Sampling mode = "Time/flow paced CTVV"

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

A contraction of the programmy of the pr		
Function	Options	Info
Sampling volume input	Options No flow input configured Binary input S:x Current input S:x Factory setting No flow input configured	Select the sampling volume input. The binary input or the current input must be configured for this function. Only the inputs configured as a sampling volume input are displayed.
Sampling interval	00:01:00 to 99:59:00 HH:MM:SS	Set the sampling interval.
	Factory setting 00:10:00 HH:MM:SS	
If Sampling volume input Bina	ry input is selected:	
Sampling volume / pulse	10 to 1000 ml Factory setting 20 ml	Set what sampling volume should be grabbed per pulse. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.
If Sampling volume input Current input is selected:		
Sampling volume 20mA	10 to 10000 ml Factory setting 100 ml	Set what sampling volume should be grabbed at 20 mA. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.

Function	Options	Info		
Flow calculation	Options Current Average flow	Current: The current flow is converted to the sampling volume at the time of sampling.		
	Factory setting Current	Average flow: The system calculates the mean between the last and the current sample and sets the sampling volume accordingly.		
Bottle change mode	Options Number of samples Time External signal	The bottle can be changed after a specific number of samples, after a time or by an external signal.		
	Factory setting Number of samples			
If Bottle change mode Number	of samples is selected:			
Samples per bottle	1 to 9999	Set the number of samples.		
	Factory setting			
If Bottle change mode Time is s	selected:			
Time interval	00-00:02 to 31-00:00 DD-HH:MM	Set the time (days, hours and minutes) after which the system should change to the next bottle.		
	Factory setting 00-01:00 DD-HH:MM			
Bottle synchronization	Options None 1. bottle change time	None: The time of sampling and bottle change are not synchronized.		
	 1. Time of change + bottle number Factory setting 	bottle change time: Sampling starts with the first bottle. Set the synchronization time.		
	None	Time of change + bottle number: Each bottle is assigned to a specific fill time. Set the synchronization time and the weekday.		
Start condition	Options Immediate Date/time	The sampling program can be started either immediately or at a specific, configurable time.		
	Factory setting Immediate			
If Start condition Date/time is	If Start condition Date/time is selected:			
Start date	01.01.2000 to 31.12.2099	Set the start date for the sampling program. The		
	Factory setting DD.MM.YYYY	format depends on the option configured under general settings.		

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info
Start time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is started. The format depends on the option configured under general settings.
Stop condition	Options Program end Continuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.

Settings with the Basic program type with multiple bottles

Sampling mode = "Time/flow paced CTVV"

Function	Options	Info
Sampling volume input	Options No flow input configured Binary input S:x Current input S:x Factory setting No flow input configured	Select the sampling volume input. The binary input or the current input must be configured for this function. Only the inputs configured as a sampling volume input are displayed.
Sampling interval	00:01:00 to 99:59:00 HH:MM:SS Factory setting 00:10:00 HH:MM:SS	Set the sampling interval.
If Sampling volume input Binary input is selected:		
Sampling volume / pulse	10 to 1000 ml Factory setting 20 ml	Set what sampling volume should be grabbed per pulse. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.

Function	Options	Info	
If Sampling volume input Current input is selected:			
Sampling volume 20mA	10 to 10000 ml Factory setting 100 ml	Set what sampling volume should be grabbed at 20 mA. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.	
Flow calculation	Options Current Average flow Factory setting Current	Current: The current flow is converted to the sampling volume at the time of sampling. Average flow: The system calculates the mean between the last and	
		the current sample and sets the sampling volume accordingly.	
Bottle change mode	Options Number of samples Time External signal	The bottle can be changed either after a specific number of samples, after a time or by an external signal.	
	Factory setting Number of samples		
If Bottle change mode Number	er of samples is selected:		
Samples per bottle	1 to 9999	Set the number of samples.	
	Factory setting		
If Bottle change mode Time is	s selected:		
Time interval	00-00:02 to 31-00:00 DD-HH:MM	Set the time (in days, hours and minutes) after which the system should change to the next bottle.	
	Factory setting 00-01:00 DD-HH:MM		
Multiple bottles	0 to 23 The configuration options depend on the current number of bottles	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.	
	Factory setting 0		
If Bottle change mode External signal is selected:			
Bottle change signal input	Options No bottle change input configured Binary input S:x	The bottle change input can be configured under ▶ Inputs .	
	Factory setting No bottle change input configured		

Function	Options	Info
Multiple bottles	0 to 23 The configuration options depend on the current number of bottles Factory setting 0	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.
Start condition	Options ImmediateDate/time	The sampling program can be started either immediately or at a specific, configurable time.
	Factory setting Immediate	
If Start condition Date/time	e is selected:	
Start date	01.01.2000 to 31.12.2099	Set the start date for the sampling program. The
	Factory setting DD.MM.YYYY	format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59	Set the time when the sampling program is started.
	Factory setting HH:MM:SS (24h)	The format depends on the option configured under general settings.
Stop condition	Options Program endContinuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.

4.2.4 Settings with a Basic program and external signal

Settings with the Basic program type with 1 bottle

Sampling mode = "External signal"

Function	Options	Info
Sampling volume	10 to 1000 ml	Enter the sample volume.
	Factory setting 100 ml	
Sampling signal input	Options No sampling input	Select the input for the sampling signal. The fieldbus must be configured for this function.
	configured Factory setting No sampling input configured	The sampling input can be configured under ▶ Inputs .
Bottle change mode	Options Number of samples Time External signal	The bottle can be changed after a specific number of samples, after a time or by an external signal.
	Factory setting Number of samples	
If Bottle change mode Number	of samples is selected:	
Samples per bottle	1 to 9999	Set the number of samples.
	Factory setting	
If Bottle change mode Time is s	selected:	
Time interval	00-00:02 to 31-00:00 DD-HH:MM	Set the time (days, hours and minutes) after which the system should change to the next bottle.
	Factory setting 00-01:00 DD-HH:MM	
No 1.1 1.1 nu	Options None 1. bottle change time 1. Time of change + bottle number Factory setting None	None: The time of sampling and bottle change are not synchronized.
		bottle change time: Sampling starts with the first bottle. Set the synchronization time.
		Time of change + bottle number: Each bottle is assigned to a specific fill time. Set the synchronization time and the weekday.

Function	Options	Info
Start condition	Options Immediate Date/time	The sampling program can be started either immediately or at a specific, configurable time.
	Factory setting Immediate	
If Start condition Date/time	is selected:	
Start date	01.01.2000 to 31.12.2099	Set the start date for the sampling program. The
	Factory setting DD.MM.YYYY	format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59	Set the time when the sampling program is started.
	Factory setting HH:MM:SS (24h)	The format depends on the option configured under general settings.
Stop condition	Options Program endContinuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.

Settings with the Basic program type with multiple bottles

Sampling mode = "External signal"

Path: Menu/Setup/Sampling programs/Setup program/New/Basic

Function	Options	Info	
Sampling volume	10 to 1000 ml	Enter the sample volume.	
	Factory setting 100 ml		
Sampling signal input	Options No sampling input configured	Select the input for the sampling signal. The fieldbus must be configured for this function. The sampling input can be configured under ▶ Inputs	
	Factory setting No sampling input configured		
Bottle change mode	Options Number of samples Time External signal	The bottle can be changed either after a specific number of samples, after a time or by an external signal.	
	Factory setting Number of samples		
If Bottle change mode Number	of samples is selected:		
Samples per bottle	1 to 9999	Set the number of samples.	
	Factory setting		
If Bottle change mode Time is s	selected:		
Time interval	00-00:02 to 31-00:00 DD-HH:MM	Set the time (in days, hours and minutes) after which the system should change to the next bottle.	
	Factory setting 00-01:00 DD-HH:MM		
If Bottle change mode External	signal is selected:		
Bottle change signal input	Options No bottle change input configured	The bottle change input can be configured under lnputs .	
	Factory setting No bottle change input configured		
Multiple bottles	O to 23 The configuration options depend on the current number of bottles	Multiple bottles: "Simultaneous" transfer of two samples to separate bottles.	
	Factory setting 0		

Function	Options	Info
Start condition	Options Immediate Date/time	The sampling program can be started either immediately or at a specific, configurable time.
	Factory setting Immediate	
If Start condition Date/time	is selected:	
Start date	01.01.2000 to 31.12.2099	Set the start date for the sampling program. The
	Factory setting DD.MM.YYYY	format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59	Set the time when the sampling program is started. The format depends on the option configured under
	Factory setting HH:MM:SS (24h)	general settings.
Stop condition	Options Program endContinuous	Program end: The device stops sampling automatically once it has run through the set program.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x	Assignment of the binary output to the program cycle.
	Factory setting No binary output config. for state reporting	
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.

4.3 Program types: Standard and Advanced

A Standard program can comprise a maximum of 5 subprograms. An Advanced program can comprise a maximum of 24 subprograms. These subprograms can be run simultaneously or consecutively.

Each event subprogram can consist of up to 3 conditions.

As the device contains dual bottle trays, you can assign a program easily, and easily detect a change in the program.

4.3.1 Settings for the Standard program

Path: Menu/Setup/Sampling programs

Function	Options	Info		
▶ Setup program				
New		A list of all the programs created is displayed. For this reason, it is often helpful to add an "S" for Standard in the program name.		
▶ Standard	•			
Program name	Customized text	Use a distinct name for your sampling program. The program name can be up to 16 characters long.		
Bottle configuration	Choice of all possible bottle combinations	The ordered bottle configuration is preset or the configuration selected in the setup is displayed.		
Bottle volume	0 to 100000 ml	Set the bottle volume. The preset value depends on the bottle configuration		
	Factory setting 30000 ml	in the preset value depends on the bottle configuration configured. The bottle volume is always 30 l for individual containers. In the case of asymmetric distribution, e.g. 6 x 3 l + 2 x 13 l, you can set the bottle volume on the left and right in the menu items that follow.		
Start condition	Options Immediate Date/time Volume	The sampling program can be started either immediately, at a specific, configurable time, or when a certain totalized flow is reached.		
	Factory setting Immediate			
If Start condition Date/time is selected:				
Start date	01.01.2000 to 31.12.2099	Set the start date for the sampling program. The for-		
	Factory setting DD.MM.YYYY	mat depends on the option configured under general settings.		
Start time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is started. The format depends on the option configured under general settings.		
If Start condition Volume is selected:				

Function	Options	Info
Start volume input	Options No flow input configured Binary input S:x Current input S:x Factory setting No flow input configured	Select the start volume input. The binary input or the current input must be configured for this function. Only the inputs configured for flow measurement are displayed.
Start flow sum	1.000 to 9999.000 m ³	Set the start volume.
	Factory setting 10.000 m ³	
Stop condition	Options Program end Continuous Date/time	Program end: The device stops sampling automatically once it has run through the set program. All the assigned bottles are filled.
	Factory setting Program end	Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles.
		Date/time: The device stops the set program at a specific time.
If Stop condition Date/tim	e is selected:	
Stop date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the stop date for the sampling program. The format depends on the option configured under general settings.
Stop time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is stopped. The format depends on the option configured under general settings.
► Setup subprogram		
New		
Programpart		Use a distinct name for your subprogram. The program name can be up to 16 characters long.
Sampling mode	Options Time paced CTCV Flow paced VTCV Time (flow paced CTV)	Time paced CTCV: A constant sampling volume is taken at steady intervals.
	 Time/flow paced CTVV External signal Factory setting Time paced CTCV 	Flow paced VTCV: A constant sampling volume is taken at variable intervals.
	Time paced CTCV	Time/flow paced CTVV(only for version with peristaltic pump): A variable sampling volume is taken at steady intervals.
		External signal A pulse at the binary input starts a sampling cycle

Function	Options	Info	
The settings that de	The settings that depend on the sampling mode are listed in the "Program type: Basic" section.		
• 1	Options Immediate	Immediate: The subprogram is enabled immediately.	
	Individual datesRepeating dateIntervalDeactivation	Individual dates: Set the start and stop dates for enabling the subprogram.	
	Factory setting Immediate	Repeating date: Set the start condition, activity time and repetition interval for the subprogram.	
		Interval: Set the start condition, activity time and inactivity time for the subprogram.	
		Deactivation: Only visible if there is more than one subprogram	
If Enable subprogram Indiv	ridual dates is selected:		
▶ Individual dates			
Set the start and stop assign a maximum of	times for the subprogram. Enter a 25 start and stop dates.	new date via "INSERT". Delete a date via "DELETE". You can	
If Enable subprogram Repe	eating date is selected:		
Start condition	Options No delay Date/Time Time Factory setting No delay	No delay: The subprogram is started when the program is enabled. Date/Time: Set the start date and start time for enabling the subprogram. Time: Set the start time for enabling the subprogram.	
Activity time	00:01 to 99:59 HH:MM Factory setting 00:01 HH:MM	Specify how long the subprogram should be active in hours and minutes. The time to be selected depends on the setting for the repetition mode.	
▶ Multiple date		4	
Repetition mode	Options Daily interval Weekly interval Days of week Factory setting Daily interval	Daily interval: Specify whether the subprogram should be repeated every day. Weekly interval: Specify whether the subprogram should be repeated every week.	
		Days of week: Specify whether the subprogram should be repeated on certain days of the week> Select the days of the week in the subsequent menu item.	

Function	Options	Info
Repetition interval (only for Daily interval and Weekly interval)	1 to 999 Factory setting 1	Specify for how many days or weeks the subprogram should be active. Example: Repetition mode = daily interval Repetition interval = 2 The subprogram is enabled every second day from the start condition.
If Enable subprogram Interval	is selected:	
Start condition	Options No delay Date/Time Time Factory setting Date/Time	No delay: The subprogram is started when the program is enabled. Date/Time: Set the start date and start time for enabling the subprogram. Time: Set the start time for enabling the subprogram.
	04.04.0000	
Start date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the start date for the 1st interval. The format depends on the option configured under general settings.
Start time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time for the 1st interval. The format depends on the option configured under general settings.
Activity time	00-00:01 to 31-00:00 DD-HH:MM Factory setting 00-00:01 DD-HH:MM	Specify how long the subprogram should be active in days, hours and minutes. The subprogram always begins with an activation.
Inactivity time	00-00:01 to 31-00:00 DD-HH:MM Factory setting 00-00:01 DD-HH:MM	Specify how long the subprogram should be inactive in days, hours and minutes.
Sample at enable Options No Yes Factory setting Yes		Specify whether the first sample should be taken directly when the subprogram is enabled. For example, with intervals, a sample is taken at the start of every activation interval.
Sample at disable	Options No Yes Factory setting	Specify whether a sample should be taken when the subprogram is disabled. For example, with intervals, a sample is taken at the end of every activation interval.

Function	Options	Info
New bottle at disable	Options No Yes Factory setting Yes	
Bottle synchronization	Options None 1. bottle change time 1. Time of change + bottle number External BC sync input Factory setting None	Specific bottles can be assigned specific filling times with the bottle synchronization function. For example, bottle 1 is to be filled from midnight to 2 a.m., bottle 2 from 2 a.m. to 4 a.m. etc None The time of sampling and bottle change are not synchronized. 1. bottle change time Sampling starts with the first bottle. The changeover to the next bottles is synchronized. 1. Time of change + bottle number A specific fill time is assigned to each bottle. External BC sync input The system changes to the next bottle when an external signal is received. The external signal first has to be configured via the binary input. The binary input can then be selected as the source.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x Factory setting No binary output config. for state reporting	Assignment of the binary output to the program cycle.

Assignment bin. output	 No binary output config. for state reporting Binary output S:x 	cycle.
	Factory setting No binary output config. for state reporting	
	ram setup. Then press "ESC" to rett appears if you have not yet saved t	urn to the main program. the subprogram. You can avoid saving the program by
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.
Bottle assignment (only possible with multiple bottles) This menu item appears when more	Options No bottle assignment Dynamical bottle assignment Statical bottle assignment	No bottle assignment: Each subprogram fills the same bottle until the bottle is full. All the subprograms then change to the next bottle. Only visible if there is more than one subprogram.
than one bottle is available, regardless of the number of subpro- grams.	Factory setting Dynamical bottle assignment	Dynamical bottle assignment: When the subprogram changes, the system switches to the next empty bottle.
		Statical bottle assignment: A table can be used to assign a subprogram to each bottle.
	1	

Path: Menu/Setup/Sampling programs

Func	tion	Options	Info
•	Via the "Bottle change" menu item, the bottle change can be configured after a certain time or number of samples if bottle distribution with more than one bottle has been selected and either dynamic or static bottle assignment has been selected.		
If Bottle assignment Statical bottle assignment is selected:			
Во	▶ Bottle assignment table		
Selec	Select a bottle and assign it a subprogram.		

4.3.2 Programming example: Program switchover

The following example explains how to program a program change with flow-paced sampling as the daily average sample from Monday to Friday and time-paced sampling to a composite container on Saturday and Sunday.

Path: Menu/Setup/Sampling programs/Setup program/New

Function Entry for sample program		
Standard		
Program name	TDVT 6+20	
Bottle configuration	6x + 1x	
Bottle volume left	3000 ml	
Bottle volume right	20000 ml	
Start condition	Date/time	
Start date	DD.MM.YYYY e.g. 03.06.2010	
Start time	HH:MM:SS e.g. 12:00:00	
Stop condition	Continuous	
▶ Setup subprogram		
Programpart MO - FR		
"SAVE" - saves the "MO - FR" subprogram		
► Setup subprogram		
Programpart SAT - SUN		
"SAVE" - saves the "SAT - SUN" subprogram	n	
"ESC" - the main program is displayed		
Bottle assignment	Statical bottle assignment	
▶ Setup subprogram: MO - FR		

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program	
▶Edit		
Sampling mode	Flow paced VTCV	
Flowmeter input	Current input S:1	
Sampling interval	1000 m³	
Sampling volume	80 ml	
Bottle change mode	Time	
Time interval	04:00	
Multiple bottles	0	
Enable subprogram	Multiple date	
Start condition	No delay	
Activity time	24:00	
▶ Repeating date		
Repetition mode	Days of week	
Monday	Yes	
Tuesday	Yes	
Wednesday	Yes	
Thursday	Yes	
Friday	Yes	
Saturday	No	
Sunday	No	
Sample at enable	Yes	
Sample at disable	No	
"SAVE" - saves the "MO - FR" subprogram		
"ESC" - "ESC"		
► Setup subprogram: SAT - SUN		
▶ Edit		
Sampling mode	Time paced CTCV	
Sampling interval	15 min	
Sampling volume	100 ml	
Bottle change mode	Time	
Time interval	48:00	

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program
Multiple bottles	0
Enable subprogram	Multiple date
Start condition	No delay
Activity time	24:00
► Repeating date	<u>'</u>
Repetition mode	Days of week
Monday	No
Tuesday	No
Wednesday	No
Thursday	No
Friday	No
Saturday	Yes
Sunday	Yes
Sample at enable	Yes
Sample at disable	No
"SAVE" - saves the "SAT - SUN" subprogram	1
"ESC" - "ESC"	
▶ Bottle assignment table	
Bottle 1 to	MO - FR
Bottle 6	
Bottle 7 SAT - SUN	

Press the "SAVE" soft key to save the program. In the overview, you can start the program created under "Select sampling program".

4.3.3 Settings for the Advanced program

Path: Menu/Setup/Sampling programs

Info
A list of all the programs created is displayed. For this reason, it is often helpful to add an "A" for Advanced in the program name.
•
Use a distinct name for your sampling program. The program name can be up to 16 characters long.
The ordered bottle configuration is preset or the configuration selected in the setup is displayed.
Set the bottle volume. The preset value depends on the bottle configuration configured. The bottle volume is always 30 l for individual containers. In the case of asymmetric distribution, e.g. 6 x 3 l + 2 x 13 l, you can set the bottle volume on the left and right in the menu items that follow.
Immediate The sampling program is started immediately. Date/time The sampling program is started at a specific time that can be configured. Volume The sampling program is started when a certain totalized flow is reached. External start The sampling program is started by a pulse at the configured binary input. External duration The sampling program is active as long as the configured input has the corresponding level. Fieldbus(optional): The sampling program is started by a signal from the control system.
Set the start date for the sampling program. The format depends on the option configured under general settings.
Set the time when the sampling program is started. The format depends on the option configured under general settings.
_

Function	Options	Info
Start volume input	Options No flow input configured Binary input S:x Current input S:x Factory setting No flow input configured	Select the start volume input. The binary input or the current input must be configured for this function. Only the inputs configured for flow measurement are displayed.
Start flow sum	1.000 to 9999.000 m ³	Set the start volume.
	Factory setting 10.000 m ³	
If Start condition External	start is selected:	
Start signal input	Options No program start input configured Binary input S:x	Select the program start input. The binary input must be configured for this function. Only the inputs configured as a program start input are displayed.
	Factory setting No program start input configured	
If Start condition External	duration is selected:	
Start signal input	Options No program duration input configured Binary input S:x Factory setting No program duration input	Select the program duration input. The binary input must be configured for this function. Only the inputs configured as a program duration input are displayed.
	configured	
If Start condition PROFIBU	S DP or Modbus is selected:	
Start signal input	Options None None Nov Do 01 Nov Do 02 Nov Do 03 Nov Do 04 Nov Do 05 Nov Do 06 Nov Do 07 Correcting None	Select the program start input.

Function	Options	Info
Stop condition (not for External start)	Options Program end Continuous Date/time External signal Fieldbus (optional) Factory setting Program end	Program end: The device stops sampling automatically once it has run through the set program. Continuous: The device runs through the set program continuously in an infinite loop. Do not forget to empty the bottles. Date/time: The device stops the set program at a specific time. External signal: The device stops the set program if a pulse is sent to a binary input configured accordingly. Fieldbus: The sampling program is stopped by a signal from the control system.
If Stop condition Date/time is	selected:	,
Stop date	01.01.2000 to 31.12.2099 Factory setting DD.MM.YYYY	Set the stop date for the sampling program. The format depends on the option configured under general settings.
Stop time	00:00:00 to 23:59:59 Factory setting HH:MM:SS (24h)	Set the time when the sampling program is stopped. The format depends on the option configured under general settings.
If Stop condition External sign	al is selected:	
Stop signal input	Options No program stop input configured Binary input S:x Factory setting No program stop input configured	Select the program stop input. The binary input must be configured for this function. Only the inputs configured as a program stop input are displayed.
If Stop condition PROFIBUS DF	or Modbus is selected:	
Stop signal input	Options None %0V DO 01 %0V DO 02 %0V DO 03 %0V DO 04 %0V DO 05 %0V DO 06 %0V DO 07 %0V DO 08 Factory setting None	Select the program stop input.
▶ Setup subprogram	-	
New		

Path: Menu/Setup/Sampling programs

Function	Options	Info
Programpart		Use a distinct name for your subprogram. The program name can be up to 16 characters long.
Sampling mode	Options Time paced CTCV Flow paced VTCV Time/flow paced CTVV	Time paced CTCV: A constant sampling volume is taken at steady intervals. Flow paced VTCV:
 Single sample Sampling table External signal Fieldbus (optional) Factory setting Time paced CTCV 	 Sampling table 	A constant sampling volume is taken at variable intervals.
	Time/flow paced CTVV (only for version with peristaltic pump): A variable sampling volume is taken at steady intervals.	
		Single sample: The device takes a single sample with a specific volume.
		Sampling table: The time and the sampling volume is assigned to a certain bottle in the sampling table.
		External signal: A sample is taken when an external signal is received.
		Fieldbus: The sampling cycle is triggered via the control system.

The settings that depend on the sampling mode (time-paced, flow-paced and time/flow-paced sampling) are listed in the "Program type: Basic" section.

If Sampling mode Single sample is selected:

Dosing volume (for version with vacuum pump or sampling assembly) Sampling volume (for version with peristaltic pump)	Vacuum pump: 20 to 350 ml Peristaltic pump: 10 to 10000 ml Sampling assembly: 10 to 1000 ml Factory setting Vacuum pump: 200 ml Peristaltic pump: 100 ml Sampling assembly: 200 ml	Depending on the version, set the dosing volume or the sampling volume. The volume is taken from the setup in the version with a vacuum pump or sampling assembly. The dosing accuracy and the repeatability of a sample volume < 20 ml can vary, depending on the specific application.
-----------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

If Sampling mode **Sampling table** is selected:

▶ Sampling table

Assign the time and sampling volume to a certain bottle. Add a new entry via "INSERT". Delete an entry via "DELETE". You can make a maximum of 24 entries.

Function	Options	Info	
Example: - Bottle: 1 - Bottle: 2	- Delta (=waiting time): 01:00:00 - Delta (=waiting time): 00:10:00	- Volume: 100 ml - Volume: 100 ml	
	1st sampling one hour after program start: 100 ml in bottle 1 2nd sampling 10 minutes later: 100 ml in bottle 2 $$		
The sampling table indication the bottle of column 1.	ates: After the defined "Delta time"	(column 2) the volume of column 3 will be dosed into	
If Sampling mode External sig	nal is selected:		
Sampling signal input	Options No sampling input configured Binary input S:x	Select the input for the sampling signal. The binary input must be configured for this function. Only the configured inputs are displayed.	
	Factory setting No sampling input configured		
If Sampling mode PROFIBUS D	P or Modbus is selected:		
Sampling signal input	Options None None Nov Do 01 Nov Do 02 Nov Do 03 Nov Do 04 Nov Do 05 Nov Do 06 Nov Do 07 Nov Do 08	Select the input for the sampling signal. The fieldbus must be configured for this function.	
	Factory setting None		
Change signal This item only appears if bottle changeover is set to fieldbus.	Options None None None Nov Do 01 Nov Do 02 Nov Do 03 Nov Do 04 Nov Do 05 Nov Do 06 Nov Do 06 Rov Do 08 Factory setting None	Select the input for the bottle change signal.	

Function	Options	Info
Enable subprogram	Options Immediate Individual dates Repeating date Interval Event External start Deactivation Fieldbus (optional) Factory setting Immediate	Immediate: The subprogram is enabled immediately. Individual dates: Set the start and stop dates for enabling the subprogram. Repeating date: Set the start condition, activity time and repetition interval for the subprogram. Interval: Set the start condition, activity time and inactivity time for the subprogram. Event: The subprogram is enabled by an event. Up to 3 measuring signals are linked to form a start signal using And/Or logic. External start: The subprogram is enabled by a pulse at a binary input configured accordingly. Deactivation: Subprogram 2 or 2+n is started as soon as subprogram 1 is disabled. (Only possible with multiple subprograms) Fieldbus: The subprogram is enabled by a signal from the control system.
	 , Individual dates, Repeating date the "Program type: Standard" sect	and Interval) that depend on the activation of the
1 3		
If Enable subprogram Event is s		I
Start condition	Options No delay Date/Time Time Factory setting No delay	No delay: The subprogram is started when the program is enabled. Date/Time: Set the start date and start time for enabling the subprogram. Time: Set the start time for enabling the subprogram.
Activation event		
Number of events	Options 1 2 3 Factory setting	Specify how many measuring inputs (1-3) you want to link to generate an activation signal.

Function	Options	Info
Event Editor 1 If you have more than one event editor, the "Event editor" menu item appears often. Use the "Link" menu item to configure the logical link between the signals.		
Source of data	Options None Binary input S:x Current input S:x Temperature input Fieldbus (depending on the version and sensor) Factory setting None	Select the input via which the activation event is to be output. The inputs are configured in the "Setup/Inputs" menu. The binary inputs are only visible if they have been configured accordingly (rainfall or flow).
Measured value	Options (depends on sensor/data source) None Totalized flow %0V AO 01 %0V AO 02 %0V AO 03 %0V AO 04 %0V DO 01 %0V DO 01 %0V DO 05 %0V DO 07 %0V DO 08 Factory setting None	
Operating mode	Options Upper limit Lower limit Within range Out of range Rate of change Factory setting Upper limit	Type of limit value monitoring: Limit value overshoot or undershoot Measured value within or outside a range Rate of change
Limit value	Range of adjustment and factory setting Depends on the measured value	Operating mode="Above limit check" or "Below limit check" The event is triggered if the limit value + hysteresis is exceeded for the switch-on duration. The event is reset again if the limit value - hysteresis is undershot for the duration of the switch-off delay at least.

Function	Options	Info	
Range lower value	Range of adjustment and factory setting Depends on the measured value	Operating mode="In range check" or "Out of range check"	
		 The event is triggered if the range lower value + hysteresis is exceeded for the switch-on duration. The event is reset again if the range upper value - hysteresis is undershot for the duration of the switch-off delay at least. 	
Hysteresis	Range of adjustment and factory setting Depends on the measured value	The hysteresis is the difference between the switch-on point and the switch-off point if values, which cause the limit switch to pick up, become closer or move further apart. It is needed to ensure a stable switching behavior.	
Start delay	0 to 9999 s	Synonyms: pick-up and drop-out delay	
Switch off delay	Factory setting 0 s		
Delta value	Range of adjustment and factory setting	Operating mode="Change rate"	
	Depends on the measured value	The event is triggered if the measured value changes by at least the delta value (both positive and	
Delta time	00:01 to 23:59	negative) within the set delta time. The event is deleted as soon as the rate of change is lower than	
	Factory setting 01:00	the set value and the auto confirmation time has elapsed.	
Auto Confirm	00:01 to 23:59		
	Factory setting 00:01		
If Enable subprogram External	start is selected:		
Activation input	Options No program part start input configured Binary input S:x	Select the input for start of the subprogram. The binary input must be configured for this function. Only the configured inputs are displayed.	
	Factory setting No program part start input configured		
If Enable subprogram PROFIBUS DP or Modbus is selected:			
Activation signal	Options None None NOV DO 01 NOV DO 02 NOV DO 03 NOV DO 04 NOV DO 05 NOV DO 06 NOV DO 06 NOV DO 08	Enable subprogram via fieldbus.	
	Factory setting None		

Liquistation CSF48 Programming

Path: Menu/Setup/Sampling programs

Function	Options	Info
Sample at enable (not for single sample and sampling table)	Options No Yes Factory setting Yes	Specify whether the first sample should be taken directly when the subprogram is enabled.
Sample at disable (not for single sample and sampling table and also not for "Immediate" and event)	Options No Yes Factory setting No	Specify whether a sample should be taken when the subprogram is disabled.
Deactivation	Options Bottles full Enable invalid Deactivation with event Factory setting Enable invalid	Select the disable function of the subprogram: Bottles full The subprogram is disabled once all the assigned bottles have been filled. Enable invalid Disable via limit value Deactivation with event New parameter can be defined
Bottle change mode	Options No Yes Factory setting Yes	No: The bottle is changed following a disable/enable Yes: When the cycle is finished, the system continues filling the last bottle.
Synchronize samplings	Options To subprogram start To clock Factory setting To subprogram start	To subprogram start The intervals defined in the sampling mode are enabled when the subprogram is started. To clock The intervals defined in the sampling mode are enabled after a specific time. For example, if 30 min is entered this means that the interval is only activated at a time of xx:30. > You configure this time in the "Offset synchronization" menu item.

Programming Liquistation CSF48

Path: Menu/Setup/Sampling programs

Function	Options	Info
Bottle synchronization	Options None 1. bottle change time 1. Time of change + bottle number External BC sync input Factory setting None	Specific bottles can be assigned specific filling times with the bottle synchronization function. For example, bottle 1 is to be filled from midnight to 2 a.m., bottle 2 from 2 a.m. to 4 a.m. etc None The time of sampling and bottle change are not synchronized. 1. bottle change time Sampling starts with the first bottle. The changeove to the next bottles is synchronized. 1. Time of change + bottle number A specific fill time is assigned to each bottle. External BC sync input The system changes to the next bottle when an extenal signal is received. The external signal first has to be configured via the binary input. The binary input can then be selected as the source.
Assignment bin. output	Options No binary output config. for state reporting Binary output S:x Factory setting No binary output config. for state reporting	Assignment of the binary output to the program cycle.
Use "SAVE" to save the subprogr	ram setup. Then press "ESC" to ret	urn to the main program.
▶ Inputs		Settings for the inputs can be made as described in the "Inputs" section.
Bottle assignment (only possible with multiple bottles) This menu item does not appear unless 2 or more bottles are available.	Options No bottle assignment Dynamical bottle assignment Statical bottle assignment Factory setting No bottle assignment	No bottle assignment: Each subprogram fills the same bottle until the bottl is full. All the subprograms then change to the next bottle. Dynamical bottle assignment: When the subprogram changes, the system switche to the next bottle. Statical bottle assignment: A table can be used to assign a subprogram to each bottle.
		be configured after a certain time or number of sample c or static bottle assignment has been selected.
If Bottle assignment Statical bo	ottle assignment is selected:	
▶ Bottle assignment table	The abolymical is selected.	
-		

Liquistation CSF48 Programming

4.3.4 Programming example: Event program

The following example explains how to program an event program with time-paced sampling into a composite container and time-paced sampling into individual bottles. The composite container is emptied daily.

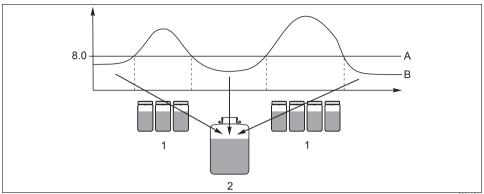


Abb. 8: Event-controlled sampling

a0014126s

- A pH value: 8.0
- B pH value
- Sampling into individual bottles when pH value > 8.0
- 2 Sampling into composite container when pH value < 8.0

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program	
▶ Advanced		
Program name	TDTE 12+20	
Bottle configuration	12x + 1x	
Bottle volume left	1000 ml	
Bottle volume right	2000 ml	
Start condition	Immediate	
Stop condition	Continuous	
Bottle assignment	Statical bottle assignment	
▶ Setup subprogram: New		
Programpart	TD1	
Sampling mode	Time paced CTCV	
Sampling interval	15 min	
Sampling volume	100 ml	

Programming Liquistation CSF48

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program
Multiple bottles	1
Enable subprogram	Immediate
Sample at enable	Yes
Synchronize samplings	To subprogram start
-> "SAVE" -> "ESC"	
▶ Setup subprogram: New	
Programpart	EE1
Sampling mode	Time paced CTCV
Sampling interval	6 min
Sampling volume	100 ml
Bottle change mode	Number of samples
Only if Bottle assignment = "Statical bottle assignment" is selected in the main program	
Samples per bottle	10
Multiple bottles	0
Enable subprogram	Event
Start condition	No delay
Activation event	
Number of events	1
▶ Event Editor 1	
Source of data	CH1: 1:1 pH glass
Measured value	рН
Operating mode	Upper limit
Limit value	pH 8.00
Hysteresis	pH 0.20
Start delay	0 s
Switch off delay	0 s
Sample at enable	Yes
Sample at disable	No
Deactivation	Enable invalid
Synchronize samplings	To subprogram start

Liquistation CSF48 Programming

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program	
-> "SAVE" -> "ESC" -> "ESC"		
Bottle assignment Statical bottle assignment		
▶ Bottle assignment table		
Bottle 1	EE1	
 Bottle 12	EE1	
Bottle 13	TD1	
-> "ESC"		

Press the "SAVE" soft key to save the program. In the overview, you can start the program created under "Select sampling program".

4.3.5 Programming example: Limit value-controlled program

The following example explains how to program a limit value-controlled sampling program with flow-paced sampling into individual bottles above the limit value and time-paced sampling into individual bottles below the limit value. When the subprogram changes, the system switches to the next bottle.

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program		
▶Advanced			
Program name	UVT 12x3		
Bottle configuration	12x		
Bottle volume	3000 ml		
Start condition	Date/time		
Start date	DD.MM.YYYY e.g. 03.06.2010		
Start time	HH:MM:SS e.g. 12:00:00		
Stop condition	Continuous		
▶ Setup subprogram: New			
Programpart VD1			
"SAVE" - saves the "VD1" subprogram			
▶ Setup subprogram: New			
Programpart	ZD1		
"SAVE" - saves the "ZD1" subprogram			

Programming Liquistation CSF48

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program	
"ESC" - the main program is displayed		
Bottle assignment	Dynamical bottle assignment	
▶ Setup subprogram: VD1		
▶Edit		
Sampling mode	Flow paced VTCV	
Flowmeter input	Current input S:1 (max. 15 samples/h = 4 min)	
Sampling interval	50 m ³	
Sampling volume	100 ml	
Bottle change mode	Time	
Time interval	06:00	
Multiple bottles	0	
Enable subprogram	External activation	
Start condition	No delay	
Activation event		
Number of events	1	
▶ Event Editor 1		
Source of data	Current input S:1	
Measured value	Flow rate	
Operating mode	Upper limit	
Limit value	155 l/s	
Hysteresis	5 l/s	
Start delay	0 s	
Switch off delay	0 s	
"ESC" - "ESC"		
Sample at enable	Yes	
Sample at disable	No	
Stop condition	Enable invalid	
Synchronize samplings	To subprogram start	
"SAVE" - "ESC"		
▶ Setup subprogram: ZD1		
▶Edit		

Liquistation CSF48 Programming

Path: Menu/Setup/Sampling programs/Setup program/New

Function	Entry for sample program	
Sampling mode	Time paced CTCV	
Sampling interval	15 min	
Sampling volume	100 ml	
Bottle change mode	Time	
Time interval	06:00	
Multiple bottles	0	
Enable subprogram	Event	
Start condition	No delay	
Activation event		
Number of events	1	
Event Editor 1		
Source of data	Current input S:1	
Measured value	Flow rate	
Operating mode	Lower limit	
Limit value	150 l/s	
Hysteresis	5 1/s	
Start delay	0 s	
Switch off delay	0 s	
"ESC" - "ESC"		
Sample at enable	Yes	
Sample at disable	No	
Stop condition	Enable invalid	
Synchronize samplings	To subprogram start	
"SAVE" - "ESC"	,	

Press the "SAVE" soft key to save the program. In the overview, you can start the program created under "Select sampling program".

Programming Liquistation CSF48

4.4 Selecting and executing the program

In the overview, you can see all the programs created under "Select sampling program". Here, you also have the possibility of creating a new program with "New". Using the navigator, you can select the program you want to execute here and then choose from the following items: "Edit", "Delete", "Start", "Duplicate or "Cancel".

Path: Setup program

Function	Info
▶ Edit	The selected program is displayed and can be edited. Press the "SAVE" key to save the changes.
▶ Delete	The selected program is deleted following a confirmation prompt.
▶ Start	The selected program is started immediately. The program can be canceled or paused by pressing the "OFF" key.
	If there are differences between the setup and the selected program, the "Program configuration contains errors!" message appears, e.g. the bottle configuration in the program does not match the configuration in the setup. The program is not started. In this example, the actual bottle configuration must be checked against the configuration in the setup and the program and changed accordingly. Only the bottle configuration entered in the setup is valid for the program to be executed.
▶ Duplicate	The selected program is duplicated and saved with an ID.
► Cancel	Back to the overview.

Liquistation CSF48 Programming

The "Setup program" display contains the "ESC", "MAN", "?" and "OFF" soft keys.

Path: Setup program

Function	Info
▶ ESC	Back to the overview. Any program currently running is canceled.
▶ MAN	Manual sampling can be configured and started here. Any program currently running is paused> See BA00443C "Commissioning", Sampling program/Manual sampling section
▶?	A help text is displayed for the item.
▶ OFF	If no program is enabled, the device can be switched off here. If a program is enabled, the following options appear:
	Power down sampler: Following a confirmation prompt, the device is set to the standby mode. Power continues to be supplied to the device and the LED flashes green.
	Stop program %0V: ¹⁾ Stops a program currently running following a confirmation prompt. The overview display appears.
	Pause program %0V: ¹⁾ Is selected if maintenance work is pending. The program is paused and the pause time is entered in the logbook. The current program is resumed when the "Resume program" button is pressed.

Path: <emphasis/>Program active

Function	Info
▶ ESC	Back to the overview. Any program currently running is canceled.
▶ STAT	For selecting statistics about measured values, sampling and inputs See "Display settings" section in BA00443C.
▶ OFF	If no program is enabled, the device can be switched off here. If a program is enabled, the following options appear:
	Power down sampler: Following a confirmation prompt, the device is set to the standby mode. Power continues to be supplied to the device and the LED flashes green.
	Stop program $\%0V:^1$ Stops a program currently running following a confirmation prompt. The overview display appears.
	Pause program %0V: Is selected if maintenance work is pending. The program is paused and the pause time is entered in the logbook. The current program is resumed when the "Resume program" button is pressed.

1) "%0V" here stands for text that depends on the context. This text is generated automatically by the software and inserted in place of %0V. In the simplest situations, the generated text could be the name of the measuring channel, for example.

Outputs Liquistation CSF48

5 Outputs

5.1 Binary outputs

The basic version of the device always has two binary outputs.

Possible application

- --> For outputting a manipulated variable to connected actuators
- The binary output must be assigned in the program or subprogram before it can be activated.

Path: Menu/Setup/Outputs

Function	Options	Info		
▶ OutputBinary	▶ OutputBinary			
Function	Options Off Event Limit value Diagnostics message Cleaning (only for version with sensors with the Memosens protocol) Factory setting Off	The following functions depend on the option selected. Function = "Off" switches off the function of the binary output and means no further settings are required. For Cleaning: The outputs can only switch 100mA. A relay must be added to control valves or motors.		
If Function: Event is selected:				
Signal slope	Options Low-High High-Low	Select the level change of the signal		
	Factory setting Low-High			

Liquistation CSF48

Path: Menu/Setup/Outputs

Function	Options	Info	
Event	Options Program enabled End of program Sampling start End of sampling Dosing Sampling cycle Bottle change External stop No sample Sub program enabled Factory setting Sampling cycle	Program enabled: A permanent signal is switched when the sampling program starts. End of program: A pulse or permanent signal is switched when the sampling program ends. Sampling start: A pulse is switched when a sample is taken. End of sampling: A pulse is switched when sampling has ended. Dosing: A pulse is switched when sampling has ended. Dosing: A pulse is switched while the device doses a sample. Sampling cycle: The output signal is switched for the duration of the sampling cycle. Bottle change: A pulse is switched when a bottle is changed. External stop: A pulse is switched when an external stop is performed. No sample: The output signal is switched if no sample was taken. Sub program enabled: The output signal is switched if this subprogram is active.	
If Function: Limit value is sel	ected:		
Signal slope	Options Low-High High-Low Factory setting Low-High	Select the level change of the signal	
Source of data	Options None Limit switch 1-8 Factory setting None	Select the limit switch via which the status of the relay is to be output. The limit switches are configured in the "Setup/Additional functions/LimitSwitch" menu.	
If Function: Diagnostics message is selected:			
Signal slope	Options Low-High High-Low Factory setting Low-High	Select the level change of the signal	

Outputs

Outputs Liquistation CSF48

Path: Menu/Setup/Outputs

Function	Options	Info
Operating mode	Options as assigned Namur M Namur S Namur C Namur F Factory setting as assigned	as assigned: If this option is selected, the diagnostics messages which you have individually assigned to the binary output are output via the binary output. Namur M - F: If you decided to use one of the Namur classes, all the messages that are assigned to the individual class are output via the binary output. You can also change the Namur class assignment for every diagnostics message. (Menu/Setup/General settings/Diagnostics/Device behavior or Menu/Setup/Inputs//Diagnostics settings/Diag. behavior)
Attributed diagnostic messages	Read only List of diagnostic messages	All the messages assigned to the relay output appear on the display. You do not have the option of editing the information here.
If Function: Cleaning is selecte	d: (only for version with sensors	with the Memosens protocol)
Signal slope	Options Low-High High-Low Factory setting Low-High	Select the level change of the signal
Assignment	Options None Cleaning 1-4 Factory setting None	Use this function to choose the cleaning instance which should be started when the binary output is active.

Liquistation CSF48

5.2 Current outputs (optional)

Two optional current outputs are available on Basic module L. Set the current range from 0 to 20 mA or 4 to 20 mA under Menu/Setup/General settings.

Possible applications

- For outputting a measured value to a process control system or an external recorder
- For outputting a manipulated variable to connected actuators
- The current output curve is always linear.

Path: Menu/Setup/Outputs/Current output		
Function	Options	Info
Current output	Options On Off	Use this function to activate and deactivate a variable being output at the current output
	Factory setting Off	
Source of data	Options None Connected inputs Temperature sensors	The sources of data on offer depend on your device version. All the sensors and controllers connected to inputs are available for selection.
	Factory setting None	
Measured value	Options None Depends on theSource of data	The measured value you can select depends on the option selected under "Source of data".
	Factory setting None	
		railable depending on the data source. and configure the current output for outputting the
Range lower value	Selection range and factory	You can output the entire measuring range of the

Range lower value Range upper value	Selection range and factory settings depend on: "Measured value"	You can output the entire measuring range of the "Measured value" or just some of it at the current output. For this purpose, specify the start and end of the range in accordance with your requirements.
Hold behavior	Options Freeze Fixed value None Factory setting Depends on the channel:output	Freeze The device freezes the last current value. Fixed value You define a fixed current value that is output at the output. None A hold does not affect this current output.
Hold current Hold behavior="Fixed value"	0.0 to 23.0 mA Factory setting 22.0 mA	Specify which current should be output at this current output in the event of a hold.

Outputs

Measured valuedepending on the Source of data

Source of data	Measured value
pH Glass pH ISFET	Options Raw value mV pH Temperature
Redox	Options Temperature Redox mV Redox %
Oxygen (amp.)	Options
Oxygen (opt.)	 Temperature Partial pressure Concentration liquid Saturation Raw value nA(only Oxygen (amp.)) Raw value μs(only Oxygen (opt.))
Cond i	Options
Cond c	 Temperature Conductivity Resistance(only Cond c) Concentration(only Cond i)
Chlorine	Options Temperature Current Concentration
ISE	Options Temperature pH Ammonium Nitrate Potassium Chloride
TU/TS	Options Temperature Turbidity g/l Turbidity FNU
Nitrate	Options Temperature NO3 NO3-N
Ultrasonic interface (interface measurement)	Options Interface Turbidity

Liquistation CSF48

Measured valuedepending on the Source of data

Source of data	Measured value
SAC	Options Temperature SAC Transm. Absorption COD BOD
Current input 1-3	Options depend on the configuration
Temperature 1-3	
Mathematical functions	All the mathematical functions can also be used as a data source and the calculated value can be used as the measured value.

5.3 Alarm relays

The alarm relay is not available in devices with a battery backup system. The alarm relay is required to switch off the device completely when operating with the storage battery.

The following functions can be output via a relay

- Limit switch status
- Diagnostics messages
- Status of a cleaning function in order to control a pump or a valve
- You can assign a relay to multiple inputs in order to clean several sensors with just one cleaning unit, for example.

Path: Menu/Setup/Outputs/Alarm relay or relay at channel no.

Function	Options	Info
Function	Options Off LimitSwitch Diagnostics Cleaning Factory setting Off	The following functions depend on the option selected. These versions are illustrated individually in the following section to provide a clearer understanding of the options. Function="Off" switches off the relay function and means no further settings are required.

Outputs

Outputs Liquistation CSF48

5.3.1 Outputting the status of a limit switch

Function="LimitSwitch"

Function	Options	Info
Source of data	Options None Limit switch 1 Limit switch 2 Limit switch 3 Limit switch 4 Limit switch 4 Limit switch 6 Limit switch 7 Limit switch 8 Factory setting None	Select the limit switch via which the status of the relay is to be output. The limit switches are configured in the "Setup/Additional functions/Limit switches" menu.

5.3.2 Outputting diagnostics messages via the relay

You can output two categories of diagnostics messages via the relay:

- 1. Diagnostics messages from one of the 4 Namur classes (--> BA00463C "Maintenance&diagnostics" for more information on the Namur classes)
- 2. Diagnostics messages which you have individually assigned to the relay output

A message is individually assigned to the relay output at 2 specific points in the menu:

- Menu/Setup/General settings/Diagnostics/Device behavior (device-specific messages)
- Menu/Setup/Inputs/../Diagnostics settings/Diag. behavior (sensor-specific messages)
- Before being able to assign a special message to the relay output in "Device behavior", you must first configure Outputs/relay x:y or /Alarm relay/Function="Diagnostics".

Liquistation CSF48

Function="Diagnostics"

Function	Options	Info
Operating mode	Options as assigned Namur M Namur S Namur C Namur F Factory setting as assigned	as assigned If this option is selected, the diagnostics messages which you have individually assigned to the relay are output via the relay. Namur M F If you decided to use one of the Namur classes, all the messages that are assigned to the individual class are output via the relay. You can also change the Namur class assignment for every diagnostics message. (Menu/Setup/General settings/Diagnostics/Device behavior or Menu/Setup/Inputs//Diagnostics settings/Diag. behavior)
Attributed diagnostic messages Operating mode="as assigned"	Read only List of diagnostic messages	All the messages assigned to the relay output appear on the display. You do not have the option of editing the information here.

5.3.3 Outputting the status of a cleaning function

Function="Cleaning"

Function	Options	Info
Assignment	Options None Cleaning 1 - Water Cleaning 1 - Cleaner Cleaning 2 - Water Cleaning 2 - Cleaner Cleaning 3 - Water Cleaning 3 - Cleaner Cleaning 4 - Cleaner Cleaning 4 - Water Cleaning 4 - Cleaner Factory setting None	Here you can specify how a cleaning function should be displayed for the alarm relay. You can define the cleaning programs under: Menu/Setup/Additional functions/Cleaning.

Outputs

Outputs Liquistation CSF48

5.4 HART

Specify which device variables should be output via HART communication.

You can define a maximum of 16 device variables:

- ▶ Define the data source. You can choose from the sensor inputs and the controllers.
- ▶ From the source, select the measured value that should be output.
- ▶ Define how the device should behave in the event of a "Hold".
- ► The configuration options for "Source of data", "Measured value" and "Hold behavior" are identical to those described in the "Outputs/Current outputs" section. Please refer to this section for more information.
- ► Please note that if you select Hold behavior="Freeze", the system not only flags the status but also actually "freezes" the measured value.
- More information is provided in BA00486C "HART communication".

5.5 PROFIBUS DP

5.5.1 Device variables (device --> PROFIBUS)

Specify which process values should be mapped to the PROFIBUS function blocks and are thereby available for transmission via PROFIBUS communication.

You can define a maximum of 16 device variables (AI Blocks):

▶ Define the data source.

Choose between sensor inputs, current inputs or mathematical functions whose measured values should be transmitted.

▶ From the data source, select the measured value to be transmitted.

In addition, you can define 8 binary variables (DI Blocks):

Define the data source.

Select the limit switch or relay whose status should be transmitted.

5.5.2 PROFIBUS variables (PROFIBUS --> device)

Not in the "Menu/Setup/Outputs" menu

- ▶ A maximum of 4 analog (AO) and 8 digital (DO) PROFIBUS variables are available as measured values in the controller, limit switch or current output menus.
- ► Example: Using an AO or DO value as the set point for the controller
 - "Menu/Setup/Additional functions/Controller 1" menu
 - In the menu mentioned, define PROFIBUS as the data source.
 - Select the desired analog output (AO) or digital output (DO) as the measured value.
- More information is provided in the "E+H Liquiline CM44x PROFIBUS Guideline" document on the CD.

Liquistation CSF48

5.6 Modbus RS485 and Modbus TCP

Specify which process values should be output via Modbus RS485 communication or via Modbus TCP.

In the case of Modbus RS485, you can switch between the RTU and the ASCII protocol.

You can define a maximum of 16 device variables:

- ▶ Define the data source. You can choose from the sensor inputs and the controllers.
- ► From the source, select the measured value that should be output.
- Define how the device should behave in the event of a "Hold".
- ► The configuration options for "Source of data", "Measured value" and "Hold behavior" are identical to those described in the "Outputs/Current outputs" section. Please refer to this section for more information.
- ► Please note that if you select Hold behavior="Freeze", the system not only flags the status but also actually "freezes" the measured value.
- More information is provided in the "E+H Liquiline CM44x MODBUS Guideline" document.

Outputs

Additional functions Liquistation CSF48

6 Additional functions

6.1 Limit switch

There are different ways of configuring a limit switch:

- Assigning a switch-on and switch-off point
- Assigning a switch-on and switch-off delay for a relay
- Setting an alarm threshold and also outputting an error message
- Starting a cleaning function

Path: Menu/Setup/Additional functions/Limit switches/Limit switches 1 to 8

Function	Options	Info
Source of data	Options None Connected sensors Connected inputs Temperature sensors Factory setting None	Specify the input or output which should be the source of data for the limit switch. The sources of data on offer depend on your device version. All the sensors and controllers connected to inputs are available for selection.
Measuring value	Options None Depends on the Source of data Factory setting None	The measured value you can select depends on the option selected under "Source of data".

Measured valuedepending on the Source of data

measured valuedepending on the source of data		
Source of data	Measured value	
pH Glass	Options	
pH ISFET	 Raw value mV pH Temperature 	
Redox	Options Temperature Redox mV Redox %	
Oxygen (amp.)	Options	
Oxygen (opt.)	 Temperature Partial pressure Concentration liquid Saturation Raw value nA (only Oxygen (amp.)) Raw value μs (only Oxygen (opt.)) 	

Liquistation CSF48 Additional functions

Measured valuedepending on the Source of data

Source of data	Measured value
Cond i	Options
Cond c	 Temperature Conductivity Resistance (only Cond c) Concentration (only Cond i)
Chlorine	Options Temperature Current Concentration
ISE	Options Temperature pH Ammonium Nitrate Potassium Chloride
TU/TS	Options Temperature Turbidity g/l Turbidity FNU
Nitrate	Options Temperature NO3 NO3-N
Ultrasonic interface(interface measurement)	Options Interface Turbidity
SAC	Options Temperature SAC Transm. Absorption COD BOD
Current input 1-3	The options for selection depend on the configuration
Temperature 1-3	
Mathematical functions	All the mathematical functions can also be used as a data source and the calculated value can be used as the measured value.

Additional functions Liquistation CSF48

Path: Menu/Setup/Additional functions/Limit switches/Limit switches 1 to 8

Function	Options	Info
Cleaning program	Options None Cleaning 1 Cleaning 2 Cleaning 3 Cleaning 4 Factory setting None	Use this function to choose the cleaning instance which should be started when the limit switch is active.
Function	Options On Off Factory setting Off	Activating/deactivating the limit switch
Operating mode	Options Above limit check Below limit check In range check Out of range check Change rate Factory setting Above limit check	Type of limit value monitoring: ■ Limit value overshoot or undershoot → 🕥 9 ■ Measured value within or outside a range → 🕥 10 ■ aChange rate → 🐼 12
Limit value	Settings Depends on the measured value	Operating mode="Above limit check" or "Below limit check"
A		B
1 2 1 t ₁ t ₂ t ₃	t_4 t_5 t	MV 2 t ₁ t ₂ t ₃ t ₄ t ₅ t

Abb. 9: ÜExceeding (A) and undershooting (B) a limit value (without hysteresis and switch-on delay)

- 1 Limit value
- 2 Alarm range
- t_1, t_3, t_5 No action
- t_2 , t_4 An event is generated
- If the measured values (MV) are increasing, the relay contact is closed when the on-value is exceeded ("Limit value" +
 "Hysteresis") and the start delay has elapsed ("Start delay").

t₅ t

If the measured values are decreasing, the relay contact is reset when the off-value is undershot ("Limit value" "Hysteresis") and following the release delay ("Switch off delay").

Liquistation CSF48 Additional functions

Path: Menu/Setup/Additional functions/Limit switches/Limit switches 1 to 8

Function	Options	Info
Range lower value	Settings	Operating mode="In range check" or "Out of range check"
Range upper value	Depends on the measured value	

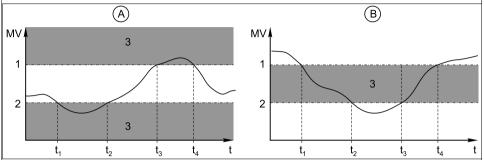


Abb. 10: Monitoring outside (A) and within (B) a range (without hysteresis and switch-on delay)

Depends on the measured


a0018081

- 1 End of range
- 2 Start of range
- 3 Alarm range

Hysteresis

 $t_{1, 2, 3, 4}$ An event is generated

- If the measured values (MV) are increasing, the relay contact is closed when the on-value is exceeded ("Range lower value" + "Hysteresis") and the start delay has elapsed ("Start delay").
- If the measured values are decreasing, the relay contact is reset when the off-value is undershot ("Range upper value" - "Hysteresis") and following the release delay ("Switch off delay").

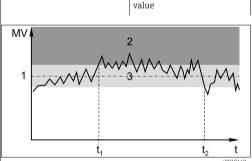

Settings

Abb. 11: Hysteresis taking the example of limit value overshoot

- 1 Limit value
- 2 Alarm range 3
 - Hysteresis range
- An event is generated t_1, t_2

Operating mode="In range check", "Out of range check"."Above limit check" or "Below limit check"

The hysteresis is needed to ensure a stable switching behavior.

The device software adds or subtracts the value set here to/from the limit value (Limit value, Range lower value or Range upper value). This results in the double "Hysteresis" value for the hysteresis range around the limit value.

An event is then only generated if the measured value (MV) completely passes through the hysteresis range.

 $\rightarrow \boxed{2}$ 11

Additional functions Liquistation CSF48

Path: Menu/Setup/Additional functions/Limit switches/Limit switches 1 to 8

Function	Options	Info
Start delay Switch off delay	0 to 9999 s Factory setting 0 s	Operating mode="In range check", "Out of range check","Above limit check" or "Below limit check" Synonyms: pick-up and drop-out delay
Delta value	Settings Depends on the measured value	Operating mode="Change rate" The slope of the measured value (MV) is monitored in this mode.
Delta time	00:01 23:59 Factory setting 01:00	An event is generated if, in the given timeframe (Delta time), the measured value increases or decreases by more than the specified value (Delta value). No further event is generated if the value continues to experience
Auto Confirm	00:01 23:59 Factory setting 00:01	such a steep increase or decrease. If the slope is back below the limit value, the alarm status is reset after a preset time (Auto Confirm). Events are triggered by the following conditions in the example given:
ΔMV_2 ΔMV_1 ΔMV_1 ΔMV_1 ΔMV_2 ΔMV_1 ΔMV_2 ΔMV_1 ΔMV_2 ΔMV_1 ΔMV_2 ΔMV_2 ΔMV_1 ΔMV_2 ΔMV_2 ΔMV_2 ΔMV_2 ΔMV_2 ΔMV_2 ΔMV_1 ΔMV_2 Δ	ΔMV ₃	t_2 - t_1 < "Delta time" and ΔMV_1 > "Delta value" t_4 - t_3 > "Auto Confirm" and ΔMV_2 < "Delta value" t_6 - t_5 < "Delta time" and ΔMV_3 > ΔMV

6.2 Cleaning programs

Path: Menu/Setup/Additional functions/Cleaning/Cleaning $1\dots 4$

Function	Options	Info
Cleaning type	Options Standard clean Chemoclean	
	Factory setting Standard clean	
Cleaning time	5 to 600 s	Cleaning time Cleaning duration
	Factory setting 10 s	The cleaning duration and interval depend on the process and sensor. Determine the variables empirically or based on experience.
Cleaning interval	00-00:01 to 07-00:00 (DD-hh:mm) Factory setting 01-00:00	The interval value can be between 1 minute and 7 days. Example: You have set the value "01-00:00". Each day, the cleaning cycle starts at the same time you started the first cleaning cycle.

Liquistation CSF48 Additional functions

Path: Menu/Setup/Additional functions/Cleaning/Cleaning $1\dots 4$

Function	Options	Info
Hold	Options On Off	Decide whether there should be a hold for the assigned sensor during the cleaning process.
	Factory setting Off	
▶ Output selection		Goes to the "Outputs" menu You can assign the cleaning program directly to one or more outputs. > "Outputs" section
Start cycle	Action	Start the cyclical cleaning process with the settings above
Start manually	Action	Start an individual cleaning process If cyclical cleaning is enabled, there are times in which it is not possible to manually start the process.
Stop	Action	End the cleaning process (cyclically or manually)
State of cleaning	Read only	Indicates whether cleaning is currently taking place or not
Time to next clean	Read only	Countdown to the next cleaning process (only if cyclical cleaning has been started)

Additional functions Liquistation CSF48

6.3 Mathematical functions

In addition to "real" process values which are delivered by analog inputs or physical sensors connected to the device, you can also calculate a maximum of 6 "virtual" process values using mathematical functions

The "virtual" process values can be:

- Output via a current output or a fieldbus
- Used as a controlled variable
- Assigned as a measured variable to a limit contactor
- Used as a measured variable to trigger cleaning
- Displayed in user-defined measuring menus

6.3.1 Difference

You can subtract the measured values of two sensors and use the result to detect incorrect measurements, for example.

To calculate a difference, you must use two measured values with the same engineering unit.

Path: Menu/Setup/Additional functions/Mathematical functions/MF 1 to 6/Mode/Difference

Function	Options	Info
Calculation	Options Off On	On/off switch for the function
	Factory setting Off	
Y1	The options depend on the sensors connected	Select the sensors and the measured variables that should be used as the minuend (Y1) or subtrahend (Y2).
Measured value		
Y2		
Measured value		
Difference value	Read only	View this value in a user-defined measuring screen or output the value via the current output.

Liquistation CSF48 Additional functions

6.3.2 Redundancy

Use this function to monitor two or three sensors with redundant measurements. The arithmetic average of the two closest measured values is calculated and output as the redundancy value.

Path: Menu/Setup/Additional functions/Mathematical functions/MF 1 to 6/Mode/Redundancy

Function	Options	Info
Calculation	Options Off On	On/off switch for the function
	Factory setting Off	
Y1	The options depend on the sensors connected	You can select different types of sensor that output the same measured value
Measured value	Selisors connected	Example for temperature redundancy:
Y2		You have a pH sensor and an oxygen sensor at inputs 1 and 2. Select both as "Y1" and "Y2". For "Measured value" select the temperature.
Measured value		
Y3 (optional)		
Measured value		
Deviation control	Options Off On	You can monitor the redundancy. Specify an absolute limit value that may not be exceeded.
	Factory setting Off	
Deviation limit	Depends on the selected measured value	
Redundancy	Read only	View this value in a user-defined measuring screen or output the value via the current output.

6.3.3 rH value

To calculate the rH value, a pH sensor and an ORP sensor must be connected. It is irrelevant whether you are using a pH glass sensor, an ISFET sensor or the pH electrode of an ISE sensor.

Path: Menu/Setup/Additional functions/Mathematical functions/MF 1 to 6/Mode/rH calculation

Function	Options	Info
Calculation	Options • Off • On	On/off switch for the function
	Factory setting Off	

Additional functions Liquistation CSF48

Function	Options	Info
pH source	Connected pH sensor	Set the input for the pH sensor and the input for the ORP sensor. Measured value interrogation is obsolete as you
Redox source	Connected ORP sensor	must select pH or ORP mV.
Calculated rH	Read only	View this value in a user-defined measuring screen or output the value via the current output.

6.3.4 Degassed conductivity

Carbon dioxide from the air can be a contributing factor to the conductivity of a medium. The degassed conductivity is the conductivity of the medium excluding the conductivity caused by carbon dioxide.

In the power station industry, for example, it is advantageous to use the degassed conductivity:

- The percentage of conductivity caused by corrosion products or fouling in the feed water can be determined as early as when the turbines are started. The system excludes the initially high conductivity values resulting from the ingress of air.
- If carbon dioxide is regarded as non-corrosive, the live steam can be directed to the turbine far earlier during startup.
- If the conductivity value increases during normal operation, it is possible to immediately determine an ingress of coolant or air by calculating the degassed conductivity.

Path: Menu/Setup/Additional functions/Mathematical functions/MF 1 to 6/Mode/Degassed conductivity

Function	Options	Info
Calculation	Options Off On Factory setting Off	On/off switch for the function
	OII	
Cation conductivity	Connected conductivity sensor	"Cation conductivity" is the sensor downstream from the cation exchanger and upstream from the "degassing module", "Degassed conductivity" is the sensor at the
Degassed conductivity	Connected conductivity sensor	outlet of the degassing module. Measured value interrogation is obsolete as you can only choose conductivity.
CO2 concentration	Read only	View this value in a user-defined measuring screen or output the value via the current output.

Liquistation CSF48 Additional functions

6.3.5 Dual conductivity

You can subtract two conductivity values and use the result, for example, to monitor the efficiency of an ion exchanger.

Path: Menu/Setup/Additional functions/Mathematical functions/MF 1 to 6/Mode/Dual conductivity

Function	Options	Info
Calculation	Options Off On Factory setting Off	On/off switch for the function
Inlet	The options depend on the sensors connected	Select the sensors that should be used as the minuend (Inlet, e.g. sensor upstream from the ion exchanger) and subtrahend (Outlet, e.g. sensor downstream from the ion exchanger).
Measured value		
Outlet		
Measured value		
Main value format	Options Auto # #### #### Factory setting Auto	
Cond. unit	Options Auto µS/cm mS/cm S/cm µS/m µS/m mS/m MS/m MS/m Auto	
Dual conductivity	Read only	View this value in a user-defined measuring screen or output the value via the current output.

Additional functions Liquistation CSF48

6.3.6 Calculated pH value

The pH value can be calculated from the measured values of two conductivity sensors under certain conditions. Areas of application include power stations, steam generators and boiler feedwater.

 $Path: Menu/Setup/Additional functions/Mathematical functions/MF\ 1\ to\ 6/Mode/pH\ calculation\ from\ conductivity$

Function	Options	Info
Calculation	Options Off On Factory setting	On/off switch for the function
	Off	
Method	Options NaOH NH3 LiOH	The calculation is performed on the basis of Guideline VGB-R-450L of the Technical Association of Large Power Plant Operators (Verband der Großkesselbetreiber, (VGB)).
	Factory setting NaOH	$\label{eq:nable_nable} \begin{split} &\textbf{NaOH} \\ &p\text{H} = 11 + \log \left\{ (\kappa_{_{V}} - 1/3 \; \kappa_{_{h}})/273 \right\} \\ &\textbf{NH3} \\ &p\text{H} = 11 + \log \left\{ (\kappa_{_{V}} - 1/3 \; \kappa_{_{h}})/243 \right\} \\ &\textbf{LiOH} \\ &p\text{H} = 11 + \log \left\{ (\kappa_{_{V}} - 1/3 \; \kappa_{_{h}})/228 \right\} \\ &\kappa_{_{W}} \dots \text{'Inlet''} \dots \text{ direct conductivity} \end{split}$
		$\kappa_{\rm h}$ "Outlet" acid conductivity
Inlet	Choice of conductivity sensor	Inlet
Outlet		Sensor upstream from the cation exchanger, "direct conductivity" Outlet Sensor downstream from the cation exchanger, "acid conductivity" The choice of measured value is obsolete since it must always be "Conductivity".
Calculated pH	Read only	View this value in a user-defined measuring screen or output the value via the current output.

Liquistation CSF48 Communication

7 Communication

7.1 Web server

7.1.1 Connection

► Connect the PC communication cable to the RJ45 port of module 485.

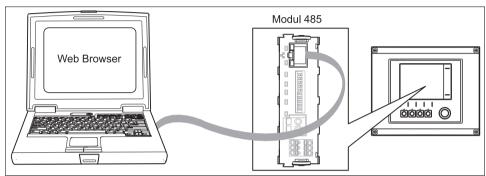


Fig. 13: Ethernet connection

a0016228

7.1.2 Creating the data connection

- 1. Start your PC.
- 2. First, set a manual IP address in the network connection settings of the operating system.
 - └ This address must be in the same subnetwork as the IP address of the device.

Example:

- IP address for Liquistation: 192.168.1.212 (Diagnostics/System information/Ethernet/IP-Address)
- IP address for the PC: 192.168.1.213
- 3. Start the Internet browser.

If you use a proxy server to connect to the Internet:

- 4. Disable the proxy (browser settings under "Connections/LAN settings").
- 5. Enter the IP address of your device in the address line.
 - ☐ The system takes a few moments to establish the connection and then the CM44 web server starts.

Communication Liquistation CSF48

- ► Enter the following address(es) to download logbooks:
 - 192.168.1.212/logbooks csv.fhtml (for logbooks in CSV format)
 - 192.168.1.212/logbooks_fdm.fhtml (for logbooks in FDM format)
- Downloads in FDM format can be securely transmitted, saved and visualized with Endress+Hauser's "Field Data Manager Software".

(--> www.products.endress.com/ms20)

7.1.3 Operation

The menu structure of the web server corresponds to the onsite operation.

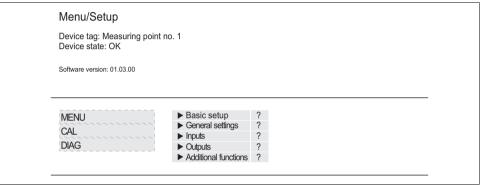


Abb. 14: Example of web server (menu/language=English)

a0016397

- Clicking a menu name or a function corresponds to pressing the navigator.
- You can make your settings conveniently via the computer keyboard.
- Instead of using an Internet browser, you can also use FieldCare for configuration via ethernet. The ethernet DTM required for this purpose can be downloaded from the product page.

Liquistation CSF48 Communication

7.2 Service interface

You can connect the device to a computer via the service interface and configure it using "Fieldcare". Furthermore, configurations can also be saved, transferred and documented.

7.2.1 Connection

- Connect the service connector to the interface on the Liquiline basic module and connect it to the Commubox.
- ▶ Via the USB port, connect the Commubox to the computer running the Fieldcare software.

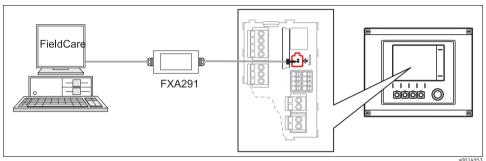


Fig. 15: Connection overview

40011333

7.2.2 Creating the data connection

- ▶ Start Fieldcare.
- Establish the connection to the Commubox.
- ▶ For this purpose, under "Host PC" click "Add device" and select "CDI Communication FXA291".
- Click "Configuration" to select the serial interface for FXA291 and to set the baud rate (115200).
- \triangleright Click "Link connection" to start communicating with the FXA291 ($\triangleleft \triangleright$ are green).
- ► Click "Add device" again and select your device type.
- ► Click "Link connection" to start communicating with the device (⟨□⟩ are green).
- ► Select "Online parameterize" to be able to communicate with the device online.

You can now start online configuration via the DTM.

Online configuration competes with onsite operation, i.e. each of the two options blocks the other one. Either side is able to prevent access from the other side.

Communication Liquistation CSF48

7.2.3 Operation

■ In the DTM the menu structure corresponds to the onsite operation. The functions of the Liquiline soft keys are found in the main window on the left.

- Clicking a menu name or a function corresponds to pressing the navigator.
- You can make your settings conveniently via the computer keyboard.
- Via Fieldcare, you can save logbooks, make backups of configurations and transfer the configurations to other devices.
- You can also print out configurations or save them as PDFs.

7.3 Fieldbuses

7.3.1 HART

You can communicate using the HART protocol via current output 1.

- ► Connect the HART modem or handheld to current output 1 (communication load 230 500 Ohm).
- ► Establish the connection via your HART device.
- Operate Liquistation via the HART device. To do so, follow the instructions in the manual.
- All the information on HART communication is provided on the CD (--> BA00486C).

7.3.2 PROFIBUS-DP

With the fieldbus module 485 and the appropriate device version, you can communicate via PROFIBUS DP.

Connect the PROFIBUS data cable to the terminals of the fieldbus module as described (--> BA00443C "Commissioning").

7.3.3 Modbus

With the fieldbus module 485 and the appropriate device version, you can communicate via Modbus RS485 or Modbus TCP.

Connect the Modbus data cable to the terminals of the fieldbus module (RS 485) or to the RJ45 (TCP) port as described (--> BA00443C "Commissioning").

8 Information on sensors with the Memosens protocol

The options described below are only available on devices with a least one Memosens input. Sensors with the Memosens protocol have integrated electronics that save calibration data and other information. The sensor data are automatically communicated to the transmitter when the sensor is connected and are used to calculate the measured value.

Data digital sensors save include:

- Manufacturer data
 - Serial number
 - Order code
 - Date of manufacture
- Calibration data
 - Date of calibration
 - Calibration values
 - Number of calibrations
 - Serial number of the transmitter used to perform the last calibration
- Operating data
 - Date of initial commissioning
 - Hours of operation under extreme operating conditions
 - Sensor monitoring data
- The specific data that are recorded and communicated to the transmitter depend on the sensor used. Differences can also occur within a sensor type.

This causes different menu items to be displayed or hidden depending on the sensor connected.

Pay attention to specific information in this manual.

Example:

The amperometric oxygen sensor COS51D cannot be sterilized. For this reason, you will not be able to define limit values for sterilization in the diagnostics settings for this sensor. On the other hand, these menu items are displayed for a sterilizable amperometric sensor, such as COS22D.

Inputs: General Liquistation CSF48

9 Inputs: General

9.1 Configuration

An input can be configured in one of two ways:

- 1. Configuration where a sensor is not connected
 - ► Select the appropriate channel.
 - ► From the list of sensor types, select the sensor which you want to configure.
 - ► Configure the channel as explained in following sections.
 - ► Connect the selected sensor type later on.
- 2. Configuration where a sensor is connected
 - Configure the channel as explained in following sections.

The following applies when configuring without a sensor:

- Some settings require sensor communication.

 You cannot make these settings if a consor is not sony.
 - You cannot make these settings if a sensor is not connected.
- It is also possible to save a setup and transfer it to another device (see "Data management" in the "General settings" section). This function might be a better option than performing a configuration when a sensor is not connected.

9.2 Frequently occurring functions

Some submenus are identical for all sensor types.

These submenus are explained below so you can find a description of these menus at one central place. Instead of repeating the description, the sensor-specific section then only contains a reference to this chapter.

9.2.1 Damping

The damping causes a floating average curve of the measured values over the time specified.

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Damping <sensor type=""></sensor>	0 to 600 s	You specify the damping of the main measured value of
Damping temp.	Factory setting 0 s	the connected sensor and that of the integrated temperature sensor.

Liquistation CSF48 Inputs: General

9.2.2 Manual hold

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Manual hold	Options On Off Factory setting Off	On You can use this function to set the channel manually to "Hold". Off No hold

9.2.3 Cleaning

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup

Function	Options	Info
Cleaning	Options None Cleaning 1 Cleaning 2 Cleaning 3 Cleaning 4 Factory setting None	Select a cleaning program. This program is executed: In a specified interval To do so, the cleaning program must be started. If a diagnostic message is pending on the channel and a cleaning has been specified for this message (> "Inputs/Diagnostics settings/Diag. behavior").
You define the cleaning programs in the "Setup/Additional functions/Cleaning" menu.		

9.2.4 Calibration timer and calibration expiration date

You can specify the calibration interval for the sensor here.

Once the time configured elapses, the "Calibration timer" diagnostics message appears on the display.

 \blacksquare The timer is reset automatically if you recalibrate the sensor.

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup/Calib. settings

Function	Options	Info
Calibration timer	Options • Off • On	Switches the function on or off
	Factory setting Off	

Inputs: General Liquistation CSF48

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup/Calib. settings

Function	Options	Info
Calibration timer value Calibration timer="On"	14 to 365 d (chlorine sensor) 1 to 10000 h (all others) Factory setting 180 d (chlorine sensor) 1000 h (all others)	Specify the time after which the timer should have timed out. Once this time has elapsed, the 'Calib. Timer' diagnostics message, along with the code 102, appears on the display.
Calib. expiration date	Options Off On Factory setting Off	The function checks whether the calibration of a sensor is still valid. Example: You install a precalibrated sensor. The function checks how much time has elapsed since the sensor was last calibrated. A diagnostics message is displayed if the time since the last calibration is longer than the predefined warning and alarm limit.
Calib. expiration date		
Warning limit	Factory setting 11 months	Diagnostics message: 105 "Calib. validity"
Alarm limit	Factory setting 12 months	Diagnostics message: 104 "Calib. validity"

Warning and alarm limits mutually affect each other's possible ranges for adjustment. Range of adjustment which must include both limits: 1 to 24 months Generally the following applies: alarm limit > warning limit

9.2.5 Process check system (PCS)

The process check system (PCS) checks the measuring signal for stagnation. An alarm is triggered if the measuring signal does not change over a certain period (several measured values).


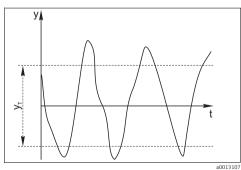


Abb. 16: Normal measuring signal, no alarm

y Measuring signal y_T Set value for "Tolerance width"

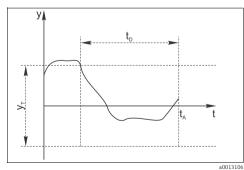

 $Abb.\ 17: Stagnating\ signal,\ alarm\ is\ triggered$

 $t_{\rm D}$ Set value for "Duration" $t_{\rm A}$ Time when the alarm is triggered

Liquistation CSF48 Inputs: General

The main causes of stagnating measured values are:

- Sensor fouled or outside the medium
- Sensor defective
- Process error (e.g. through control system)

Remedial action

- Clean the sensor.
- ► Check the position of the sensor in the medium.
- ► Check the measuring chain.
- Switch off the controller and switch it back on again.

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup/Diagnostics settings

Function	Options	Info
▶ Process Check System		Diagnostics code and associated message text: 904 "Process check"
Function	Options On Off	
	Factory setting Off	
Duration	1 to 240 min Factory setting 60 min	The measured value must change during this time. Otherwise the error message is triggered.
Tolerance width Not available for pH/ORP	The range depends on the sensor Factory setting Depends on the sensor	Interval around the measuring signal (raw value) for detecting stagnation. Measured values within the set interval are regarded as stagnating.

9.2.6 Diagnostic behavior

The list of diagnostic messages displayed depends on the path selected. There are device-specific messages, and messages that depend on what sensor is connected.

Path: ... /Extended setup/Diagnostics settings/Diag. behavior (optional)

Function	Options	Info
List of diagnostic messages		Select the message to be changed. Only then can you make the settings for this message.
Diag. code	Read only	
Diagnostic message	Options On Off Factory setting Depends on the message	You can deactivate or reactivate a diagnostics message here. Deactivating means: No error message in the measuring mode No error current at the current output

Inputs: General Liquistation CSF48

Path: .../Extended setup/Diagnostics settings/Diag. behavior (optional)

Function	Options	Info
Error current	Options On Off Factory setting Depends on the message	Decide whether an error current should be output at the current output if the diagnostic message display is activated. In the event of general device errors, the error current is switched to all the current outputs. In the event of channel-specific errors, the error
		current is only switched to the current output concerned.
Status signal	Options • Maintenance (M)	The messages are divided into different error categories in accordance with NAMUR NE 107.
	Out of specification (S)Function check (C)Failure (F)	Decide whether you want to change a status signal assignment for your application.
	Factory setting Depends on the message	
Diag. output	Diag. output Options None Alarm relay Relay 1 to n (depends on the device version) Factory setting None	You can use this function to select a relay output and/or binary output to which the diagnostic message should be assigned.
		For sensors with the Memosens protocol: Before you can assign the message to an output, you must first configure a relay output to "Diagnostics" (Menu/Setup/Outputs, assign the "Diagnostics" function and set the Operating mode to "as assigned").
Cleaning program(optional)	Options None Cleaning 1 Cleaning 2 Cleaning 3 Cleaning 4	Decide whether the diagnostic message should trigger a cleaning program. You can define the cleaning programs under: Menu/Setup/Additional functions/Cleaning.
	Factory setting None	
Detail information	Read only	Here you can find more information on the diagnostic message and instructions on how to resolve the problem.

Liquistation CSF48 Inputs: General

9.2.7 Sterilizations

The system counts the number of operating hours in which the sensor is exposed to a temperature that is typical for a sterilization. This temperature depends on the sensor.

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup/Diagnostics settings

Function	Options	Info
Sterilizations	0 to 99	Specify the limit values for the number of sensor sterilizations.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting 30 ¹⁾	Diagnostics code and associated message text: 108 "Sterilization"

1) For oxygen: 25

9.2.8 Tag control

With this function, you specify which sensors are accepted at your device.

"Tag" stands for the name of a measuring point, and is used in many areas of process measuring technology.

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup

Function	Options	Info
► Tag control		Additional information on the display: tag control currently used
Operating mode	Options Off Tag Group Factory setting Off	Off No tag control, all sensors are accepted. Tag Only sensors with the same tag are accepted. Group Only sensors in the same tag group are accepted.
Tag	Free text Factory setting EH_CSF48_	Enter the tag name. The controller checks every sensor to be connected as to whether this sensor belongs to the measuring point, and only accepts the sensors that have the same tag.
Group	Numerical Factory setting 0	

Inputs: General Liquistation CSF48

9.2.9 Sensor replacement

When the sensor is replaced, the last measured value is retained via the "hold" function. A diagnostics message is not triggered.

9.2.10 Data processing factory setting

Here you can restore the factory settings for the sensor input. For this purpose, simply press the navigator button and select "OK" when the prompt for the device software appears. Only the factory settings for this particular input are restored. All other settings remain unchanged.

9.2.11 Sensor factory setting

Here you can restore the sensor factory settings. For this purpose, simply press the navigator button and select "OK" when the prompt for the device software appears. Only the factory settings for the sensor are restored. The settings for the input remain unchanged.

10 Inputs: pH/ORP Incl. combi sensors

10.1 Basic settings

10.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only (Only available if a sensor is connected)	Connected sensor type
Order code		Order code of the connected sensor

10.1.2 Main value

Path: Menu/Setup/Inputs/pH or Redox or pH/Redox

Function	Options	Info
Main value	Options pH(only pH sensor) mV (only ORP sensor) Redox mV (only combi sensor) Redox % (only combi sensor) rH (only combi sensor) Factory setting pH (pH sensor and combi sensors) mV(ORP sensor)	Select how the main measured value should be displayed. You can display the main measured value of a pH sensor as a pH value or as a raw value in mV. If using an ORP sensor, here you decide which ORP mode to use: mV or %. If you have connected a combi sensor, you can also select the rH value. Subsequent configuration options depend on the option selected here.

10.1.3 Damping

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ all}{=} \, 108$

10.1.4 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

10.2 Extended setup

10.2.1 Temperature and medium compensation (only pH)

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup

Function	Options	Info
Temp. compensation	Options Off Automatic Manual Factory setting Automatic	Decide how you want to compensate the medium temperature: Automatically using the temperature sensor of your sensor (ATC) Manually by entering the medium temperature Not at all
This setting only refers to calibration settings.	compensation during measure	ment. You enter the compensation for calibration in the
Medium comp. only pH sensor	Options Off 2-point Table	Take a sample from the medium and determine its pH value at different temperatures in the lab. Decide whether you want to compensate using two points or several points in a table.
	Factory setting Off	
The dissociation of water changes with increasing temperature. The balance shifts towards the protons; the pH value drops. You can balance out this effect with the "Medium compensation" function.		
Internal buffer (only pH glass or combi sensor)	pH 0 to 14 Factory setting pH 7.00	Only change the value if you are using a sensor with an internal buffer other than pH 7.

10.2.2 Measured value formats

Path: Menu/Setup/Inputs/pH or Redox or pH/Redox/Extended setup

Function	Options	Info
Main value format (only pH)	Options # #.# # #.##	Specify the number of decimal places for displaying the main measured value.
	Factory setting #.#	
Temperature format	Options # #.# # #.##	Select how many decimal places should be used to display the temperature.
	Factory setting #.#	

10.2.3 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

10.2.4 Calibration settings

Stability criteria

You define the permitted measured value fluctuation which must not be exceeded in a certain timeframe during calibration.

If the permitted difference is exceeded, calibration is not permitted and is aborted automatically.

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup/Calib. settings

Function	Options	Info
▶ Stability criteria		
Delta mV	1 to 10 mV Factory setting 1 mV	Permitted measured value fluctuation during calibration
Duration	10 to 60 s Factory setting 20 s	Timeframe within which the permitted range for measured value fluctuation should not be exceeded

Buffer recognition (only pH or combi sensor)

Automatic buffer recognition

To ensure a buffer is detected correctly, the measuring signal may deviate by a maximum of 30 mV from the value stored in the buffer table. This is approx. 0.5 pH at a temperature of $25\,^{\circ}$ C. If both buffers - 9.00 and 9.20 - were used, this would cause the signal intervals to overlap and buffer recognition would not work. For this reason, the device would recognize a buffer with a pH of 9.00 as a pH of 9.20. --> Do not use the buffer with a pH of 9.00 for automatic buffer recognition.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Calib. settings

compensation in the measuring mode further down in the menu.

Function	Options	Info
Temp. compensation	Options Off Automatic Manual Factory setting Automatic	Decide how you want to compensate the buffer temperature: Automatically using the temperature sensor of your sensor (ATC) Manually by entering the buffer temperature Not at all
Temperature Temp. compensation="Manual"	-50 to 250 °C (-58 to 482 °F) Factory setting 25 °C (77 °F)	Specify the buffer temperature.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Calib. settings

Function	Options	Info
Buffer recognition	Options Fixed Automatic(only pH glass or combi sensor) Manual Factory setting Fixed	Fixed You choose values from a list. This list depends on the setting for "Buffer manufacturer". Automatic(only pH glass or combi sensor) The device recognizes the buffer automatically. The recognition depends on the setting for "Buffer manufacturer". Manual You enter any two buffer values. These must differ in terms of their pH value.
Buffer manufacturer	Options Endress+Hauser Ingold/Mettler DIN 19266 DIN 19267 Merck/Riedel Hamilton Special buffer Factory setting Endress+Hauser	Temperature tables are stored internally in the unit for the following pH values: Endress+Hauser 2.00 / 4.00 / 7.00 / (9.00) / 9.20 / 10.00 / 12.00 Ingold/Mettler 2.00 / 4.01 / 7.00 / 9.21 DIN 19266 1.68 / 4.01 / 6.86 / 9.18 DIN 19267 1.09 / 4.65 / 6.79 / 9.23 / 12.75 Merck/Riedel 2.00 / 4.01 / 6.98 / 8.95 / 12.00 Hamilton 1.09 / 1.68 / 2.00 / 3.06 / 4.01 / 5.00 / 6.00 7.00 / 8.00 / 9.21 / 10.01 / 11.00 / 12.00

Calibration timer and calibration expiration date

10.2.5 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Sensor check system (only pH glass or combi sensor)

The sensor check system (SCS) monitors the high impedance of the pH glass.

tables are displayed in which you can enter value pH value/temperature value pairs.

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

An alarm is issued if a minimum impedance value is undershot or a maximum impedance is exceeded.

- Glass breakage is the main reason for a drop in high impedance values.
- The reasons for increasing impedance values include:
 - Dry sensor
 - Worn pH glass membrane.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
▶ Glass impedance (SCS)	0 to 10000 MΩ	Specify your limit values for monitoring the impedance of the pH glass.
Upper limit	Options On Off Factory setting On	On SCS operates with the following settings for the upper warning and alarm limits. Off SCS is switched off.
Upper alarm limit	Factory setting 2000 MΩ	Diagnostics code and associated message text: 124 "Sensor glass"
Upper warning limit	Factory setting 1600 MΩ	Diagnostics code and associated message text: 125 "Sensor glass"
Lower limit	Options On Off Factory setting On	On SCS operates with the following settings for the lower warning and alarm limits. Off SCS is switched off.
Lower warning limit	Factory setting $1~\mathrm{M}\Omega$	Diagnostics code and associated message text: 123 "Sensor glass"
Lower alarm limit	Factory setting $0 \ M\Omega$	Diagnostics code and associated message text: 122 "Sensor glass"

The upper and lower limit values of the glass SCS value can be switched on or off independently of each other.

Slope (only pH or combi sensor)

The slope characterizes the sensor condition. The bigger the deviation from the ideal value (59 $\,$ mV/pH) the poorer the condition of the sensor.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
▶ Slope	5.00 to 99.00 mV/pH	Specify your limit values for slope monitoring.
Warning limit	Factory setting 55.00 mV/pH	Associated diagnostics code and message text: 509 "Sensor calib."

Zero point (only pH glass or combi sensor) or Operating point (only pH ISFET)

pH glass sensors

The zero point characterizes the condition of the sensor reference. The bigger the deviation from the ideal value (pH 7.00) the poorer the condition. This can be caused by KCl dissolving away or reference contamination.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
Zero point(pH glass or combi sensor) Operating point (pH ISFET)	pH glass -2.00 to 16.00 pH ISFET -950 mV to 950 mV	Specify your limit values for zero point or operating point monitoring.
Upper warning limit	Factory setting pH 8.00 / 300 mV	Associated diagnostics code and message text: 505 "Sensor calib." (pH glass) 515 "Sensor calib." (pH ISFET)
Lower warning limit	Factory setting pH 6.00 / -300 mV	Associated diagnostics code and message text: 507 "Sensor calib." (pH glass) 517 "Sensor calib." (pH ISFET)

Sensor condition check (only pH glass or combi sensor)

Sensor condition check (SCC) monitors the electrode status and the degree of electrode aging. The electrode status is updated after every calibration.

The main reasons for a deteriorating electrode status are:

- Glass membrane blocked or dry
- Diaphragm (reference) blocked

Remedial action

- ► Clean or regenerate the sensor.
- Replace the sensor if this does not have the desired effect.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
Sensor Condition Check		The function can only be switched on or off. It uses internal limit values
Function	Options On Off Factory setting On	Diagnostics code and associated message text: 127 "SCC sufficient" 126 "SCC bad"

Redox-Meas value (only ORP or combi sensor in ORP or rH mode)

You can specify limit values in order to monitor your process. A diagnostics message is displayed if the limits are exceeded or undershot.

Path: Menu/Setup/Inputs/Redox or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
▶ Redox-Meas value		Specify your limit values for monitoring the measured value.
Upper warning limit	Factory setting 900 mV	Diagnostics code and associated message text: 942 "Process value"
Lower warning limit	Factory setting -900 mV	Diagnostics code and associated message text: 943 "Process value"

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Path: Menu/Setup/Inputs/pH or Redox or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
Limits operating hours		Specify your limit values for monitoring the number of operating hours under extreme conditions.
The range of adjustment for	the operating hours alarm a	and warning limits is generally 1 to 50000 h.
Function	Options On Off Factory setting On	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.

Path: Menu/Setup/Inputs/pH or Redox or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
▶ Operating time		Total operating time of the sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"
▶ Operation > 80°C		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 193 "Operating time"
▶ Operation > 100°C		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 194 "Operating time"
▶ Operation < -300 mV		only pH or combi sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 180 "Operating time"
Operation > 300 mV		only pH or combi sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 179 "Operating time"

Delta slope(only pH)

The device determines the difference in slope between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. The greater the change, the greater the wear experienced by the pH-sensitive glass membrane as a result of chemical corrosion or abrasion.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta slope	0.10 to 10.00 mV/pH	Specify your limit values for monitoring the slope differential.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting 5.00 mV/pH	Diagnostics code and associated message text: 518 "Sensor calib."

Delta zero point (only pH glass or combi sensor) or Delta operating point (only pH ISFET)

The device determines the difference between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. The following applies to pH glass electrodes: The greater the change, the greater the wear experienced by the reference as a result of contaminating ions or KCl dissolving away.

Path: Menu/Setup/Inputs/pH or pH/Redox/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta zero point (pH glass or combi sensor) Delta operating point (pH ISFET)	pH glass pH 0.00 to 2.00 pH ISFET 0 to 950 mV	Specify your limit values for monitoring the zero point or operating point differential.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting pH 0.50 / 25 mV	Diagnostics code and associated message text: 520 "Sensor calib." (pH glass) 522 "Sensor calib." (pH ISFET)

Sterilizations

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

10.2.6 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

10.2.7 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

10.2.8 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

Inputs: Conductivity Liquistation CSF48

11 Inputs: Conductivity

11.1 Basic settings

11.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only	Connected sensor type
Order code	(Only available if a sensor is connected)	Order code of the connected sensor

11.1.2 Damping

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{=} 108$

11.1.3 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ all}{=} \, 108$

11.1.4 Operating mode and cell constant

Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Operating mode	Options Conductivity Resistance (only Cond c) Concentration (only Cond i) TDS (only Cond c) Factory setting Conductivity	Alternatively to the conductivity, you can also measure the resistivity and the total dissolved solids (TDS) parameter with a conductive conductivity sensor . Alternatively to the conductivity, you can determine the concentration of the medium with an inductive conductivity sensor . TDS TDS stands for all the organic and inorganic substances in the water in ionic, molecular or microgranular (<2 µm) form. Compared with laboratory methods (gravimetric analysis), TDS measurement via the conductivity value delivers a maximum measured error of less than 10%.
Cell constant	Read only (Only available if a sensor is connected)	The cell constant of the connected sensor is displayed (> sensor certificate)

Liquistation CSF48 Inputs: Conductivity

11.1.5 Installation factor (only inductive sensors)

Path: Menu/Setup/Inputs/Conductivity

following diagram.

Function	Options	Info
Inst. factor	Read only (Only available if a sensor is connected)	Displays the current value. Only changes with a calibration.

In confined installation conditions, the wall affects conductivity measurement in the liquid. The installation factor compensates for this effect. The transmitter corrects the cell constant by multiplying by the installation factor.

The size of the installation factor depends on the diameter and the conductivity of the pipe nozzle, as well as the distance between the sensor and the wall.

If there is a sufficient distance between the wall and the sensor (a > 15 mm (0.59"), from DN 80), the installation factor f does not have to be taken into consideration (f = 1.00). If distances from the wall are smaller, the installation factor is bigger for electrically insulating

pipes (f > 1), and smaller for electrically conductive pipes (f < 1). It can be measured using calibration solutions, or a close approximation determined from the

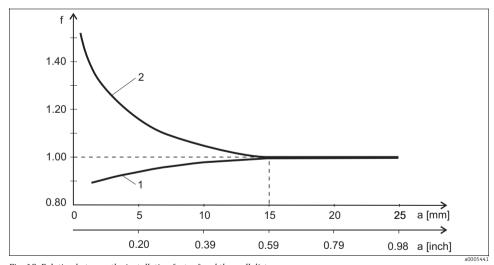


Fig. 18: Relation between the installation factor f and the wall distance

- 1 Electrically conductive pipe wall
- 2 Electrically insulating pipe wall

Inputs: Conductivity Liquistation CSF48

11.1.6 Concentration table (only inductive sensors)

Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Conc. Table (Operating mode=Concentration)	Options NaOH 0 to 15% HCl 0 to 20% HNO3 0 to 25% HNO3 24 to 30% H2SO4 0 to 28% H2SO4 40 to 80% H2SO4 93 to 100% H3PO4 0 to 40% NaCl 0 to 26% User table 1 User table 2 User table 3 User table 4 Factory setting NaOH 0 to 15%	Concentration tables saved at the factory: NaOH: 0 to 15%, 0 to 100 °C (32 to 212 °F) HCI: 0 to 20%, 0 to 65 °C (32 to 149 °F) HNO ₃ : 0 to 25%, 2 to 80 °C (36 to 176 °F) H ₂ SO ₄ : 0 to 28%, 0 to 100 °C (32 to 212 °F) H ₂ SO ₄ : 40 to 80%, 0 to 100 °C (32 to 212 °F) H ₂ SO ₄ : 40 to 80%, 0 to 100 °C (32 to 212 °F) H ₃ SO ₄ : 93 to 100%, 0 to 100 °C (32 to 212 °F) H ₃ PO ₄ : 0 to 40%, 2 to 80 °C (36 to 176 °F) NaCl: 0 to 26%, 2 to 80 °C (36 to 176 °F)
Temp. comp. mode (Operating mode=Concentration)	Options with temp. comp without temp. comp Factory setting with temp. comp	Only select "without temp. comp" in very small temperature ranges. In all other cases, select "with temp. comp".
Table name (Conc. Table=one of the user tables)	Customized text, 16 characters	Assign a meaningful name to the selected table.
▶ Edit table (Conc. Table=one of the user tables)	3-column table	Assign conductivity and concentration value pairs for a specific temperature.
Conc. unit (Operating mode=Concentration)	Read only %	This is for information purposes only. No options are available.

Example of a concentration table:

Conductivity (uncompensated)	Concentration	Temperature
1.000 mS/cm	0.000 mg/l	0.00 °C
2.000 mS/cm	0.000 mg/l	100.00 °C
100.0 mS/cm	3.000 mg/l	0.00 °C
300.0 mS/cm	3.000 mg/l	100.00 °C

Yalues must be constantly increasing or decreasing.

Liquistation CSF48 Inputs: Conductivity

11.1.7 Unit and format

Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Main value format	Options Auto # ### ### #### Factory setting Auto	Specify the number of decimal places.
Cond. unit (Operating mode=Conductivity) Unit (Operating mode=Resistance)	Options Conductivity/resistance Auto / Auto µS/cm / MΩm mS/cm / MΩcm S/cm / kΩcm µS/m / kΩm MS/m / kΩm MS/m / Ωm S/m / Ωm S/m / Ωcm Factory setting Auto / Auto	The picklist depends on the operating mode. You can either choose from units for conductivity or units for resistivity. Since there are no options for concentration measurement, this function is not displayed for such measurements.

11.1.8 Temperature compensation

Temperature coefficient α = change in the conductivity per degree of temperature change:

$$\kappa(T) = \kappa(T_0)(1 + \alpha(T - T_0))$$

 $\kappa(T)$... conductivity at process temperature T

 $\kappa(T_0)$... conductivity at reference temperature \boldsymbol{T}_0

The temperature coefficient depends both on the chemical composition of the solution and the temperature itself.

Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Temp. source	Options Sensor Manual Factory setting Sensor	Decide how you want to compensate the medium temperature: Automatically using the temperature sensor of your sensor Manually by entering the medium temperature
Medium temperature (Temp. source=Manual)	-50.0 to 250.0 °C (-58.0 to 482.0 °F) Factory setting 25.0 °C (77 °F)	Enter the temperature of your medium.

Inputs: Conductivity Liquistation CSF48

Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Compensation (Operating mode=Conductivity)	Options None Linear NaCl (IEC 746-3) Water ISO7888 (20°C) Water ISO7888 (25°C) UPW NaCl UPW HCl User table 1 User table 2 User table 3 User table 4 Factory setting Linear	Various methods are available to compensate for the temperature dependency. Depending on your process, decide which type of compensation you want to use. Alternatively, you can also select "None" and thus measure uncompensated conductivity.

Linear temperature compensation

The change between two temperature points is taken to be constant, i.e. α = const. The value for alpha remains stored in the sensor and is recalculated for each calibration.

Reference temperature and alpha coefficient (only for linear temperature compensation) The alpha coefficients and alpha reference temperatures of your process medium must be known. Typical alpha coefficients at a reference temperature from 25 °C are:

Salts (e.g. NaCl): approx. 2.1 %/K
Bases (e.g. NaOH): approx. 1.7 %/K
Acids (e.g. HNO₃): approx. 1.3 %/K


Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Ref. temp.	-5.0 to 100.0 °C (23.0 to 212.0 °F)	Reference temperature for calculating the temperature-compensated conductivity
	Factory setting 25.0 °C (77.0 °F)	
Factor alpha	0.000 to 20.000 %/K Factory setting 2.100 %/K	Enter the conductivity coefficient of your process medium

Liquistation CSF48 Inputs: Conductivity

NaCl compensation

In the case of NaCl compensation (as per IEC 60746), a fixed non-linear curve specifying the relationship between the temperature coefficient and temperature is saved in the device. This curve applies to low concentrations of up to approx. 5 % NaCl.

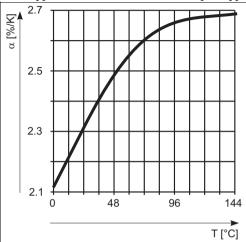

Compensation for natural water

A non-linear in accordance with ISO 7888 is saved in the device for temperature compensation in natural water.

Ultrapure water compensation (for conductive sensors)

Algorithms for pure and ultrapure water are stored in the device. These algorithms take the dissociation of the water and its temperature dependency into account. They are used for conductivity values up to approx. 100 μ S/cm.

- UPW NaCl: Optimized for pH-neutral contamination.
- UPW HCl: Optimized for measuring the acid conductivity downstream of a cation exchanger. Also suitable for ammonia (NH₃) and caustic soda (NaOH).

User-defined tables

You can save a function that takes the properties of your specific process into account. To do so, determine the value pairs made up of the temperature T and conductivity κ with:

- $\kappa(T_0)$ for the reference temperature T_0
- $\,\blacksquare\,\,\kappa(T)$ for the temperatures that occur in the process

Use the following formula to calculate the α values for the temperatures that are relevant in your process:

$$\alpha = \ \frac{100\%}{\kappa(T_{\scriptscriptstyle 0})} \cdot \frac{\kappa(T) - \kappa(T_{\scriptscriptstyle 0})}{T - T_{\scriptscriptstyle 0}} \; ; \; T \neq T_{\scriptscriptstyle 0}$$

Values must be constantly increasing or decreasing.

Inputs: Conductivity Liquistation CSF48

Path: Menu/Setup/Inputs/Conductivity

Function	Options	Info
Temp. comp. mode (Compensation=one of the user tables)	Options Conductivity Coeff. Alpha Factory setting Conductivity	Conductivity You specify the temperature, conductivity and uncompensated conductivity. Recommended for large measuring ranges and small measured values. Coeff. Alpha As the value pairs, you specify an alpha value and the related temperature.
Table name (Compensation=one of the user tables)	Customized text, 16 characters	Assign a meaningful name to the selected table.
Edit table (Compensation=one of the user tables)	 Temperature Conductivity Temperature comp. cond. or Temperature Coefficient alpha 	Maximum number of rows: 25 The type of table depends on the option under "Temp. comp. mode".

11.2 Extended setup

11.2.1 Temperature format

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup

Function	Options	Info
Temperature format	Options ### ### Factory setting ###	Select how many decimal places should be used to display the temperature.

11.2.2 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

11.2.3 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Liquistation CSF48 Inputs: Conductivity

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Path: Menu/Setup/Inputs/Conductivity/Extended setup/Diagnostics settings

Function	Options	Info
Limits operating hours		
The range of adjustment f	or the operating hours alarm	and warning limits is generally 1 to 50000 h.
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.
▶ Operating time		Total operating time of the sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"
▶ Operation > 80°C		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 193 "Operating time"
▶ Operation > 120°C		Only conductive sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 195 "Operating time"
▶ Operation > 125°C		Only inductive sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 196 "Operating time"
▶ Operation > 140°C		Only conductive sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 197 "Operating time"
▶ Operation > 150°C		Only inductive sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 198 "Operating time"

Inputs: Conductivity Liquistation CSF48

Path: Menu/Setup/Inputs/Conductivity/Extended setup/Diagnostics settings

Function	Options	Info
Operation > 80°C < 100nS/cm		Only conductive sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 187 "Operating time"
▶ Operation < 5°C		Only inductive sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 188 "Operating time"

Sterilizations

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny l}}{=} 108$

Polarization detection (only conductive sensors)

As a result of flow through the electrolyte/electrode interface, reactions take place here which result in additional voltage. These polarization effects limit the measuring range of conductive sensors. Sensor-specific compensation increases the level of accuracy at the measuring range limits.



The controller recognizes the Memosens sensor and automatically uses suitable compensation. You can view the measuring range limits of the sensor under Diagnostics/Sensor information/Sensor specifications.

Path: Menu/Setup/Inputs/Conductivity/Extended setup/Diagnostics settings/Polarization detetected

Function	Options	Info
Polarization detetected	Options On Off	Diagnostics code and associated message text: 168 "Polarization"
	Factory setting Off	

Liquistation CSF48 Inputs: Conductivity

11.2.4 Pharmaceutical water

Here you can make settings for monitoring pharmaceutical water in accordance with the United States Pharmacopeia (USP) or European Pharmacopeia (EP).

The uncompensated conductivity value and the temperature are measured for the limit functions. The measured values are compared with the tables defined in the standards. If the limit is exceeded, an alarm is triggered. Furthermore, you can also set a preliminary alarm (warning limit) which signals undesired operating states before they occur.

Path: Menu/Setup/Inputs/Conductivity/Extended setup/Diagnostics settings/Pharmacy-water

Function	Options	Info
Function	Options Off EP USP Factory setting Off	The alarm values are stored in the device in accordance with USP or EP specifications. You define the warning limit as a % of the alarm value.
Warning limit	10.0 to 99.9 % Factory setting 80.0 %	Diagnostics code and associated message text: 915 "USP / EP warning" If the value exceeds the USP or EP alarm values saved in the software, diagnostics message 914 "USP / EP alarm" is displayed.

11.2.5 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

11.2.6 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section → 108

11.2.7 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

11.2.8 Sensor factory setting (only CLS50D)

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Inputs: Oxygen Liquistation CSF48

12 Inputs: Oxygen

12.1 Basic settings

12.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only (Only available if a sensor is connected)	Connected sensor type
Order code		Order code of the connected sensor

12.1.2 Main value

Path: Menu/Setup/Inputs/DO

Options	Info
Options Concentration liquid Concentration gaseous Saturation Partial pressure Raw value nA (only Oxygen (amp.)) Raw value µs (only Oxygen (opt.))	Decide how you want to display the main value. Other functions, such as the setting for the unit, depend on this setting.
	Options

12.1.3 **Damping**

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ all}{=} \, 108$

Liquistation CSF48 Inputs: Oxygen

12.1.4 Unit

Path: Menu/Setup/Inputs/DO

Function	Options	Info
Unit	Options	
Main value="Concentration liquid" or "Concentration gaseous"	(Main value="Concentration liquid") mg/l pg/l ppm ppb	
	Options (Main value="Concentration gaseous") • %Vol • ppmVol (Main value="Concentration gaseous"	
	Factory setting mg/l %Vol	

12.1.5 Manual hold

12.2 Extended setup

12.2.1 Temperature compensation (only amperometric sensors)

Path: Menu/Setup/Inputs/DO/Extended setup

Function	Options	Info
Temp. compensation	Options Automatic Manual Factory setting Automatic	Decide how you want to compensate the medium temperature: Automatically using the temperature sensor of your sensor This means that the temperature is always compensated based on the current temperature value. Manually by entering the medium temperature This means that the measured value is always compensated against the value entered, e.g. for inlet and outlet monitoring in a cooling facility.
Temperature (Temp. compensation=Manual)	0.0 to 80.0 °C (32.0 to 176.0 °F) Factory setting 20.0 °C (68 °F)	Enter the temperature of your medium, or another temperature which you want to use as a reference temperature.

Inputs: Oxygen Liquistation CSF48

12.2.2 Measured value formats

Path: Menu/Setup/Inputs/DO or Chlorine/Extended setup¹⁾

Function	Options	Info
Main value format	Options ### ##### ### Factory setting ###	Specify the number of decimal places for displaying the main measured value.
Temperature format	Options ### ### Factory setting ###	Select how many decimal places should be used to display the temperature.

¹⁾ In the case of chlorine, the sequence of the two menu functions is reversed

12.2.3 Medium compensation (in the process)

Path: Menu/Setup/Inputs/DO/Extended setup

Function	Options	Info
Medium pressure	Options Process pressure Air pressure Altitude	
	Factory setting Air pressure	
Altitude	-300 to 4000 m	Enter the altitude or the average air pressure (mutually
Medium pressure="Altitude"	Factory setting 0 m	dependent values). If you specify the altitude, the average air pressure is calculated from the barometric altitude formula and vice
Air pressureorProcess pressure	Medium pressure="Air pressure" 500 to 1200 hPa	versa. If you are compensating using the process pressure, enter the pressure in your process here. The pressure is then independent of the altitude.
	Medium pressure="Process pressure" 500 to 9999 hPa	
	Factory setting 1013 hPa	
Salinity	0 to 40 g/kg	The influence of salt content on oxygen measurement is
	Factory setting 0 g/kg	compensated with this function. Example: sea water measurement as per Copenhagen Standard (30 g/kg).

Liquistation CSF48 Inputs: Oxygen

12.2.4 Cleaning

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup

Function	Options	Info
Cleaning	Options None Cleaning 1 Cleaning 2 Cleaning 3 Cleaning 4 Factory setting None	Select a cleaning program. This program is executed: In a specified interval To do so, the cleaning program must be started. If a diagnostic message is pending on the channel and a cleaning has been specified for this message (> "Inputs/Diagnostics settings/Diag. behavior").
You define the cleaning programs in the "Setup/Additional functions/Cleaning" menu.		

12.2.5 Calibration settings

Stability criteria

You define the permitted measured value fluctuation which must not be exceeded in a certain timeframe during calibration.

If the permitted difference is exceeded, calibration is not permitted and is aborted automatically.

Path: Menu/Setup/Inputs/Oxygen/Extended setup/Calib. settings

Function	Options	Info	
▶ Stability criteria	▶ Stability criteria		
Delta signal	0.1 to 2.0 % Factory setting 0.2 %	Permitted measured value fluctuation during calibration. Referenced to the raw value in nA in the case of amperometric sensors, and referenced to the partial pressure in the case of optical sensors.	
Delta temperature	0.10 to 2.00 K Factory setting 0.50 K	Permitted temperature fluctuation during calibration	
Duration	5 to 60 s Factory setting 20 s	Timeframe within which the permitted range for measured value fluctuation should not be exceeded	

Inputs: Oxygen Liquistation CSF48

Medium compensation (during calibration)

Path: Menu/Setup/Inputs/DO/Extended setup/Calib. settings

Function	Options	Info
Medium pressure	Options Process pressure Air pressure Altitude Factory setting	
	Air pressure	
Altitude	-300 to 4000 m	Enter the altitude or the average air pressure (mutually
Medium pressure="Altitude"	Factory setting 0 m	dependent values). If you specify the altitude, the average air pressure is calculated from the barometric altitude formula and vice
Air pressureorProcess pressure	Medium pressure="Air pressure" 500 to 1200 hPa Medium pressure="Process pressure" 500 to 9999 hPa Factory setting	versa. If you are compensating using the process pressure, enter the pressure in your process here. The pressure is then independent of the altitude.
	1013 hPa	
Rel. hum. (air variable)	0 to 100 %	
	Factory setting 100 %	

Calibration timer and calibration expiration date

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \,\, \stackrel{\scriptscriptstyle ..}{\scriptscriptstyle \, =}\, 108$

12.2.6 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Slope

The (relative) slope characterizes the sensor condition. Decreasing values indicate electrolyte exhaustion. You can control when the electrolyte should be replaced by specifying limit values and the diagnostics messages these limit values trigger.

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
Slope	0.0 to 200.0 %	Specify the limit values for slope monitoring in your sensor.

Liquistation CSF48 Inputs: Oxygen

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
Upper warning limit	Factory setting 140.0 %	Diagnostics code and associated message text: 511 "Sensor calib."
Lower warning limit	Factory setting 60.0 %	Diagnostics code and associated message text: 509 "Sensor calib."

Delta slope (only amperometric sensors)

The device determines the difference in slope between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. An increasing change indicates the formation of buildup on the sensor diaphragm or electrolyte contamination. Replace the diaphragm and electrolyte as specified in the instructions in the sensor operating manual.

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta slope	0.0 to 50.0 %	Specify the limit values for monitoring the slope differential.
Function	Options On Off Factory setting On	
Warning limit	Factory setting 5.0 %	Diagnostics code and associated message text: 518 "Sensor calib."

Zero point (only amperometric sensors)

The zero point corresponds to the sensor signal that is measured in a medium in the absence of oxygen. You can calibrate the zero point in water that is free from oxygen or in high-purity nitrogen. This improves accuracy in the trace range.

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
▶ Zero point	0.0 to 10.0 nA	Specify the limit values for zero point monitoring in your sensor.
Warning limit	Factory setting 3.0 nA	Diagnostics code and associated message text: 513 "Zero Warn"

Inputs: Oxygen Liquistation CSF48

Delta zero point (only amperometric sensors)

The device determines the difference between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. Increasing differences indicate the formation of buildup on the cathode. Clean or replace the cathode as specified in the instructions in the sensor operating manual.

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta zero point	0.0 to 10 nA	Specify your limit values for monitoring the zero point differential.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting 1.0 nA	Diagnostics code and associated message text: 520 "Sensor calib."

Cap calibrations (only amperometric sensors)

The calibration counters in the sensor make a distinction between sensor calibrations and calibrations with the membrane cap currently used. If this cap is replaced, only the (cap) counter is reset.

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
▶ Number of cap calibrations		Specify how many calibrations may be performed with a membrane cap before the cap has to be replaced.
Function	Options On Off Factory setting Off	The number depends heavily on the process and must be determined individually.
Warning limit	0 to 1000 Factory setting	Diagnostics code and associated message text: 535 "Sensor check"

Liquistation CSF48 Inputs: Oxygen

Cap sterilizations (only sterilizable, amperometric sensors)

The sterilization counters in the sensor make a distinction between the sensor and the membrane cap currently used. If this cap is replaced, only the (cap) counter is reset.

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
▶ Number of cap sterilizations		Specify how many sterilizations may be performed with
Function	Options On Off	a membrane cap before the cap has to be replaced. The number depends heavily on the process and must be determined individually.
	Factory setting Off	
Warning limit	0 to 100 Factory setting 25	Diagnostics code and associated message text: 109 "Sterilizat. cap"

Sterilizations (only sterilizable sensors)

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Inputs: Oxygen Liquistation CSF48

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
Limits operating hours		
1 The range of adjustment	for the operating hours alarm	and warning limits is generally 1 to 50000 h.
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.
▶ Operating time		Total operating time of the sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"
▶ Operation < 5°C		Only optical sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 188 "Operating time"
▶ Operation > 5°C		only COS51D
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 189 "Operating time"
▶ Operation > 25°C		Only optical sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 190 "Operating time"
▶ Operation > 30°C		only COS51D
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 191 "Operating time"
▶ Operation > 40°C		only COS22D, COS61D
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 192 "Operating time"
▶ Operation > 80°C		only COS22D
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 193 "Operating time"
(Operation above first specified nA value)		Only amperometric sensors, sensor-specific limit - COS22D: >15 nA - COS51D: >30 nA
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 183 "Operating time" (COS22D) 184 "Operating time" (COS51D)

Liquistation CSF48 Inputs: Oxygen

Path: Menu/Setup/Inputs/DO/Extended setup/Diagnostics settings

Function	Options	Info
(Operation above second specified nA value)		Only amperometric sensors, sensor-specific limit - COS22D: >50 nA - COS51D: >160 nA
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 185 "Operating time" (COS22D) 186 "Operating time" (COS51D)
▶ Operation < 25 μs		Only optical sensors (μS = fluorescence decay time, raw value of optical measurement)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 181 "Operating time"
▶ Operation > 40 µs		Only optical sensors
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 182 "Operating time"

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny \square}}{}$ 108

12.2.7 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny l}}{=} 108$

12.2.8 Sensor replacement

12.2.9 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

12.2.10 Sensor factory setting (only COS61D)

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Inputs: Chlorine Liquistation CSF48

13 Inputs: Chlorine

13.1 Basic settings

13.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only (Only available if a sensor is connected)	Connected sensor type
Order code		Order code of the connected sensor

13.1.2 Main value

Path: Menu/Setup/Inputs/Chlorine

Function	Options	Info
Main value	Options Concentration Sensor current (nA)	Decide how you want to display the main value.
	Factory setting Concentration	

13.1.3 Damping

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

13.1.4 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Liquistation CSF48 Inputs: Chlorine

13.1.5 Unit

Path: Menu/Setup/Inputs/Chlorine

Function	Options	Info
Unit Main value="Concentration liquid"	Options mg/l µg/l ppm ppb	
	Factory setting mg/l	

13.2 Extended setup

13.2.1 Measured value formats

Path: Menu/Setup/Inputs/DO or Chlorine/Extended setup1)

Function	Options	Info
Main value format	Options ### #.## #.### Factory setting #.##	Specify the number of decimal places for displaying the main measured value.
Temperature format	Options ##.# ### Factory setting #.#	Select how many decimal places should be used to display the temperature.

¹⁾ In the case of chlorine, the sequence of the two menu functions is reversed $\frac{1}{2}$

13.2.2 Medium compensation (in the process)

Path: Menu/Setup/Inputs/Chlorine/Extended setup

Function	Options	Info
Medium comp. (pH)	Options • Off • On	Off The concentration measured value is calculated as HClO (=free available chlorine).
	Factory setting On	On The pH value is used to calculate a cumulative concentration value from HCIO and CIO (=total chlorine).

Inputs: Chlorine Liquistation CSF48

Path: Menu/Setup/Inputs/Chlorine/Extended setup

Function	Options	Info
Mode Medium comp. (pH)="On"	Options Fixed value Measured value Factory setting Fixed value	Decide whether you want to specify a fixed pH value for calculating the total chlorine or whether the measured value of a pH sensor attached to another input should be used.
Fixed pH	4.00 to 9.00 pH	Useful for media with a constant pH value
Mode="Fixed value"	Factory setting 7.20 pH	Enter the pH value of your medium which you determined with a reference measurement.
Associated pH-sensor	Select the pH sensor	Preferred method for media with varying pH values
Mode="Measured value"	Factory setting None	Select the sensor input with the connected pH sensor. The measured value of the sensor is then continuously used to calculate the total chlorine.
Temp. compensation	Options Off Automatic Manual Factory setting Automatic	Decide whether and how you want to compensate the medium temperature: No compensation Automatically using the temperature sensor of your sensor Manually by entering the medium temperature
Medium temperature (Temp. compensation=Manual)	-5.0 to 50.0 °C (23.0 to 122.0 °F) Factory setting 20.0 °C (68 °F)	Enter the temperature of your medium.

13.2.3 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

13.2.4 Calibration settings

Calibration timer and calibration expiration date

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Stability criteria

You define the permitted measured value fluctuation which must not be exceeded in a certain timeframe during calibration.

If the permitted difference is exceeded, calibration is not permitted and is aborted automatically.

Liquistation CSF48 Inputs: Chlorine

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Calib. settings

Function	Options	Info
▶ Stability criteria		
Delta signal	0.1 to 5.0 % Factory setting 1 %	Permitted measured value fluctuation during calibration. (With reference to the raw value in nA)
Delta temperature	0.10 to 2.00 K Factory setting 0.50 K	Permitted temperature fluctuation during calibration
Duration	5 to 100 s Factory setting 20 s	Timeframe within which the permitted range for measured value fluctuation should not be exceeded

13.2.5 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Slope

The (relative) slope characterizes the sensor condition. Decreasing values indicate electrolyte exhaustion. You can control when the electrolyte should be replaced by specifying limit values and the diagnostics messages these limit values trigger.

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
▶ Slope	3.0 to 500.0 %	Specify the limit values for slope monitoring in your sensor.
Upper warning limit	Factory setting 200.0 %	Diagnostics code and associated message text: 511 "Sensor calib."
Lower warning limit	Factory setting 25.0 %	Diagnostics code and associated message text: 509 "Sensor calib."

Inputs: Chlorine Liquistation CSF48

Delta slope

The device determines the difference in slope between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. An increasing change indicates the formation of buildup on the sensor diaphragm or electrolyte contamination. Replace the diaphragm and electrolyte as specified in the instructions in the sensor operating manual.

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta slope	1 to 15 %	Specify the limit values for monitoring the slope differential.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting 5 %	Diagnostics code and associated message text: 518 "Sensor calib."

Zero point

The zero point corresponds to the sensor signal that is measured in a medium in the absence of chlorine. You can calibrate the zero point in water that is free from chlorine. This improves accuracy in the trace range.

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
▶ Zero point	0.0 to 3.2 nA	Specify the limit values for zero point monitoring in your sensor.
Warning limit	Factory setting 2.0 nA	Diagnostics code and associated message text: 513 "Zero Warn"

Liquistation CSF48 Inputs: Chlorine

Delta zero point

The device determines the difference between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. Increasing differences indicate the formation of buildup on the cathode. Clean the cathode as specified in the instructions in the sensor operating manual.

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
Delta zero point	0.0 to 3.2 nA	Specify your limit values for monitoring the zero point differential.
Function	Options On Off Factory setting On	
Warning limit	Factory setting 1.0 nA	Diagnostics code and associated message text: 520 "Sensor calib."

Number of cap calibrations

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
Number of cap calibrations Function	Options On Off Factory setting Off	Specify how many calibrations may be performed with a membrane cap before the cap has to be replaced. The number depends heavily on the process and must be determined individually.
Warning limit	1 to 20 Factory setting 6	Diagnostics code and associated message text: 535 "Sensor check"

Process check system

Inputs: Chlorine Liquistation CSF48

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
Limits operating hours		
The range of adjustment fo	r the operating hours alarm a	and warning limits is generally 1 to 100000 h.
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.
▶ Operating time		Total operating time of the sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"
▶ Operation > 15°C		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 178 "Operating time"
▶ Operation > 30°C		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 191 "Operating time"
▶ Operation > 20 nA		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 177 "Operating time"
▶ Operation > 100 nA		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 176 "Operating time"

Liquistation CSF48 Inputs: Chlorine

Electrolyte counter

The electrolyte consumption is calculated on the basis of the amount of charge that penetrates the sensor diaphragm.

The following applies for the sensor CCS142D:

Half the chloride would be consumed and the entire dihydrogen phosphate would be converted to monohydrogen phosphate in an electrolyte filling (4 ml) at 20 000 000 μ As (=20 As). This would render the electrolyte and the sensor unusable.

With a view to predictive maintenance, you should replace the electrolyte at 10 000 000 μAs , and preferably at 5 000 000 μAs . 25%-50% of the dihydrogen phosphate is then consumed. The calculation presumes that the buffer of the electrolyte is only changed by the electrochemical conversion of hypochlorous acid. It does not take into account the penetration of acids or bases into the sensor.

Depending on the application it can be necessary to change the electrolyte before a charge of 5 As is reached.

Path: Menu/Setup/Inputs/Chlorine/Extended setup/Diagnostics settings

Function	Options	Info
▶ Electrolyte counter	0 to 2000000 μAs	
Function	Options On Off Factory setting On	
Warning limit	Factory setting 1000000 μAs	Diagnostics code and associated message text: 534 "Sensor calib."

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

13.2.6 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

13.2.7 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

13.2.8 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Inputs: Turbidity and solids Liquistation CSF48

14 Inputs: Turbidity and solids

14.1 Basic settings

14.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only	Connected sensor type
Order code	(Only available if a sensor is connected)	Order code of the connected sensor

14.1.2 Application

The sensor is precalibrated on leaving the factory. As such, it can be used in a wide range of applications (e.g. clear water measurement) without the need for additional calibration. The factory calibration is based on a three-point calibration of a reference sample.

The factory calibration cannot be deleted and can be retrieved at any time. All other calibrations ${\bf r}$

performed as customer calibrations - are referenced to this factory calibration.

Calibration data records are saved under an individual name. You can add your own data records during each calibration. These are then available for selection under "Application".

Path: Menu/Setup/Inputs/Turbidity

Function	Options	Info
Application type	Options • Clear water • Solid	Preselection for saved calibration data records
	Factory setting Clear water	
Application	Depends on the sensor	Select a saved calibration data record

14.1.3 Damping

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Liquistation CSF48 Inputs: Turbidity and solids

14.1.4 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny l}}{=} 108$

14.2 Extended setup

14.2.1 Measured value formats

Path: Menu/Setup/Inputs/Turbidity/Extended setup

Function	Options	Info
Temperature format	Options ### ### Factory setting ###	Select how many decimal places should be used to display the temperature.
Main value format	Options ## ### #### ### Factory setting ##	Specify the number of decimal places for the main value.
Unit	Options Application="Formacine" FNU NTU Options All apart from "Formacine" g/l ppm %TS Factory setting FNU g/l	Select the unit for the main measured value.

14.2.2 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }$ 108

14.2.3 Calibration settings

Calibration timer and calibration expiration date

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }$ 108

Inputs: Turbidity and solids Liquistation CSF48

Stability criteria

You define the permitted measured value fluctuation which must not be exceeded in a certain timeframe during calibration.

If the permitted difference is exceeded, calibration is not permitted and is aborted automatically.

Path: Menu/Setup/Inputs/Turbidity/Extended setup/Calib. settings

Function	Options	Info
▶ Stability criteria		
Delta turbidity	0.1 to 5.0 % Factory setting 2.0 %	Permitted measured value fluctuation during calibration
Delta temperature	0.10 to 2.00 K Factory setting 0.50 K	Permitted temperature fluctuation during calibration
Duration	0 to 100 s Factory setting 20 s	Timeframe within which the permitted range for measured value fluctuation should not be exceeded


14.2.4 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.



Liquistation CSF48 Inputs: Turbidity and solids

Path: Menu/Setup/Inputs/Turbidity/Extended setup/Diagnostics settings

Function	Options	Info
		Specify your limit values for monitoring the number of operating hours under extreme conditions.
The range of adjustme	ent for the operating hours ala	arm and warning limits is generally 1 to 50000 h.
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.
Operating time		Total operating time of the sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"
The names of the sub they cannot be specif		rackets depend on the sensor specification. For this reason,
(Operation below sp	ecified temperature limit, e.g.	. < -5 °C)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 935 "Process temp."
(Operation above sp	ecified temperature limit, e.g.	> 55 °C)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 934 "Process temp."
(Operation below sp	ecified limit value, e.g. < 0 FN	IU)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 943 "Process value"
(Operation above sp	ecified limit value, e.g. > 1000	00 FNU)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 942 "Process value"
		•

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{=} 108$

Sensor operating hours

The data displayed here are the current hours the device has been in operation under extreme conditions. You cannot make any changes. You can only read the values.

The same data can be found in the Diagnostics menu.

Inputs: Turbidity and solids Liquistation CSF48

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

14.2.5 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

14.2.6 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

14.2.7 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

14.2.8 Sensor factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{=} 108$

Liquistation CSF48 Inputs: SAC

15 Inputs: SAC

15.1 Basic settings

15.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only (Only available if a sensor is connected)	Connected sensor type
Order code		Order code of the connected sensor

15.1.2 Application

Calibration data records are saved under an individual name in the sensor. A new sensor is calibrated at the factory and thus already has appropriate data records. You can add your own data records during each calibration. These are then available for selection under "Application".

Path: Menu/Setup/Inputs/SAC

Function	Options	Info
Basic application	Options SAC Transm. Absorption COD TOC DOC BOD Factory setting SAC	Preselection for saved calibration data records
Application	Options Factory calib. Souther data records Factory setting Factory calib.	Select a saved calibration data record

15.1.3 Damping

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ a}{=} 108$

Inputs: SAC Liquistation CSF48

15.1.4 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny l}}{=} 108$

15.2 Extended setup

15.2.1 Measured value formats

Path: Menu/Setup/Inputs/SAC/Extended setup

Function	Options	Info
Temperature format	Options ##.# ### Factory setting #.#	Select how many decimal places should be used to display the temperature.
Main value format	Options ## #.## #.## ## Factory setting #.#	Specify the number of decimal places for the main value.
Unit	Options None % mg/l ppm 1/m	The unit of the main value depends on the basic application selected. Depending on this setting only certain units are available for selection.
	Factory setting Depends on "Basic application"	

15.2.2 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ }{ riangle} \, 108$

15.2.3 Calibration settings

Calibration timer and calibration expiration date

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny l}}{=} 108$

Liquistation CSF48 Inputs: SAC

Stability criteria

You define the permitted measured value fluctuation which must not be exceeded in a certain timeframe during calibration.

If the permitted difference is exceeded, calibration is not permitted and is aborted automatically.

Path: Menu/Setup/Inputs/SAC/Extended setup/Calib. settings

Function	Options	Info	
▶ Stability criteria	▶ Stability criteria		
Delta SAC	0.1 to 5.0 % Factory setting 2.0 %	Permitted measured value fluctuation during calibration	
Delta temperature	0.10 to 2.00 K Factory setting 0.50 K	Permitted temperature fluctuation during calibration	
Duration	0 to 100 s Factory setting 10 s	Timeframe within which the permitted range for measured value fluctuation should not be exceeded	

15.2.4 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diaquostics tools should be used.

The associated diagnostics code is displayed for every setting.

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Inputs: SAC Liquistation CSF48

Path: Menu/Setup/Inputs/SAC/Extended setup/Diagnostics settings

Path: Menu/Setup/Inputs/SAC/Extended setup/Diagnostics settings		
Function	Options	Info
Limits operating hours		Specify your limit values for monitoring the number of operating hours under extreme conditions.
The range of adjustmen	nt for the operating hours ala	arm and warning limits is generally 1 to 50000 h.
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.
Operating time		Total operating time of the sensor
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"
(Operation below spe	Factory setting 10000 h	Diagnostics code and associated message text: 935 "Process temp."
(Operation above spe	cified temperature limit, e.g.	•
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 934 "Process temp."
(Operation below spe	cified limit value, e.g. < 50 n	ng/l)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 170 "Process value"
(Operation above spe	cified limit value, e.g. > 200	mg/l)
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 169 "Process value"
Filter change		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 157 "Filter change"
Alarm limit	Factory setting 15000 h	Diagnostics code and associated message text: 161 "Filter change"

Liquistation CSF48 Inputs: SAC

Path: Menu/Setup/Inputs/SAC/Extended setup/Diagnostics settings

Function	Options	Info
▶ Lamp life		
Warning limit	Factory setting 35040 h	Diagnostics code and associated message text: 171 "Lamp change"
Alarm limit	Factory setting 36500 h	Diagnostics code and associated message text: 71 "Lamp change"

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{=} 108$

Sensor operating hours

The data displayed here are the current hours the device has been in operation under extreme conditions. You cannot make any changes. You can only read the values. The same data can be found in the Diagnostics menu.

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

15.2.5 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny \square}}{}$ 108

15.2.6 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

15.2.7 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

15.2.8 Sensor factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\text{\tiny l}}{=} 108$

Inputs: Nitrate Liquistation CSF48

16 Inputs: Nitrate

16.1 Basic settings

16.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only	Connected sensor type
Order code	(Only available if a sensor is connected)	Order code of the connected sensor

16.1.2 Application

Calibration data records are saved under an individual name in the nitrate sensor. A new sensor is calibrated at the factory and always has a corresponding data record. You can add additional data records during each calibration. These are then available for selection under "Application".

Path: Menu/Setup/Inputs/Nitrate

Function	Options	Info
Application	Depends on the sensor	Select a saved calibration data record

16.1.3 Damping

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ }{ riangle} \, 108$

16.1.4 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Liquistation CSF48 Inputs: Nitrate

16.2 Extended setup

16.2.1 Measured value formats

Path: Menu/Setup/Inputs/Nitrate/Extended setup

Function	Options	Info
Temperature format	Options ##.# #.## Factory setting #.#	Select how many decimal places should be used to display the temperature.
Main value format	Options ### #### #### #Factory setting ###	Specify the number of decimal places.
Unit	Options mg/l NO3-N mg/l NO3 ppm NO3-N ppm NO3 Factory setting mg/l NO3-N	Select the unit for the main measured value.

16.2.2 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{\scriptscriptstyle \square}{\scriptscriptstyle =} \, 108$

Inputs: Nitrate Liquistation CSF48

16.2.3 Calibration settings

Calibration timer and calibration expiration date

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Stability criteria

You define the permitted measured value fluctuation which must not be exceeded in a certain timeframe during calibration.

If the permitted difference is exceeded, calibration is not permitted and is aborted automatically.

Path: Menu/Setup/Inputs/Nitrate/Extended setup/Calib. settings

Function	Options	Info	
Stability criteria	▶ Stability criteria		
Delta nitrate	0.1 to 5.0 % Factory setting 2.0 %	Permitted measured value fluctuation during calibration	
Delta temperature	0.10 to 2.00 °C 0.18 to 3.60 °F Factory setting 0.50 °C 0.90 °F	Permitted temperature fluctuation during calibration	
Duration	0 to 100 s Factory setting 10 s	Timeframe within which the permitted range for measured value fluctuation should not be exceeded	

16.2.4 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diaquostics tools should be used.

The associated diagnostics code is displayed for every setting.

Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Liquistation CSF48 Inputs: Nitrate

Path: Menu/Setup/Inputs/Nitrate/Extended setup/Diagnostics settings

Function	Options	Info		
Limits operating hours		Specify your limit values for monitoring the number of operating hours under extreme conditions.		
The range of adjustment for	The range of adjustment for the operating hours alarm and warning limits is generally 1 to 50000 h.			
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.		
▶ Operating time		Total operating time of the sensor		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 199 "Operating time"		
The names of the menu fur specified here.	nctions in brackets depend o	n the sensor specification. For this reason, they cannot be		
(Operation below specified	l temperature limit, e.g. < 5	°C)		
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 935 "Process temp."		
(Operation above specified) °C)			
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 934 "Process temp."		
(Operation below specified	(Operation below specified limit value, e.g. < 50 mg/l)			
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 943 "Process value"		
(Operation above specified	(Operation above specified limit value, e.g. > 200 mg/l)			
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 942 "Process value"		
▶ Filter change				
Warning limit	Factory setting 10000 h	Diagnostics code and associated message text: 157 "Filter change"		
Alarm limit	Factory setting 15000 h	Diagnostics code and associated message text: 161 "Filter change"		

Inputs: Nitrate Liquistation CSF48

Path: Menu/Setup/Inputs/Nitrate/Extended setup/Diagnostics settings

Function	Options	Info
▶ Lamp life		
Warning limit	Factory setting 35000 h	Diagnostics code and associated message text: 171 "Lamp change"
Alarm limit	Factory setting 36500 h	Diagnostics code and associated message text: 71 "Lamp change"

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Sensor operating hours

The data displayed here are the current hours the device has been in operation under extreme conditions. You cannot make any changes. You can only read the values. The same data can be found in the Diagnostics menu.

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

16.2.5 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

16.2.6 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ a}{=} \, 108$

16.2.7 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

16.2.8 Sensor factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Liquistation CSF48 Inputs: ISE

17 Inputs: ISE

17.1 Basic settings

17.1.1 Sensor identification

Path: Menu/Setup/Inputs/<Sensor type>

Function	Options	Info
Channel	Options On Off Factory setting On	On The channel display is switched on in the measuring mode Off The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only	Connected sensor type
Order code	(Only available if a sensor is connected)	Order code of the connected sensor

17.1.2 Main value

The main value can be any parameter which is returned by one of the electrodes in the ISE-sensor.

Path: Menu/Setup/Inputs/ISE

Function	Options	Info
Main value	Options Ammonium Nitrate Potassium Chloride pH ORP Factory setting pH	Decide which parameter you want to display as the main value for the ISE channel. Here, you can only choose from the electrodes which you configured via the electrode slot menus. At the factory, this is equivalent to the types of electrode that are actually installed in the ISE sensor.

17.1.3 Damping of the temperature value

The damping causes a floating average curve of the measured values over the time specified.

Path: Menu/Setup/Inputs/ISE

Function	Options	Info
Damping temp.	0 to 300 s	Specify the damping for the temperature measurement.
	Factory setting 0 s	

Inputs: ISE Liquistation CSF48

17.1.4 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

17.2 Extended setup

17.2.1 Temperature format

Path: Menu/Setup/Inputs/<Sensor type>/Extended setup

Function	Options	Info
Temperature format	Options ### ###	Select how many decimal places should be used to display the temperature.
	Factory setting #.#	

17.2.2 Cleaning

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ all}{=} \, 108$

17.2.3 Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

17.2.4 Tag control

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \, \stackrel{ a}{=} \, 108$

17.2.5 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

17.2.6 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{ }$ 108

Liquistation CSF48 Inputs: ISE

17.3 Electrode slot menus

17.3.1 Electrode slot

A CAS40D sensor has 4 electrode slots in total. Consequently, each of these slots has its own menu.

Make settings:

- ▶ Define the parameter for the slot (only slots 2-4).

 The 1st slot is always designated to the pH electrode. It is not possible to select another parameter for this slot.
- ► You can complete and assign the other 3 slots as you prefer.
- ► Specify the measured variable that should be output. No options can be selected for pH which is why the "Measured variable" function is not available for this parameter.

Options displayed for	Options displayed for "Measured variable" with the following parameters:			
pН	Ammonium	Nitrate	Potassium	Chloride
-	■ NH4-N ■ NH4	■ NO3-N ■ NO3	• K	■ C1

NOTICE

Incorrect assignment between the electrode (hardware) and the software menu

Unreliable measured values and faults in the measuring point can occur

- ▶ When assigning the slot in the software, make sure it matches the assignment in the sensor.
- Example: You have connected the ammonium electrode to cable no. 2 in the sensor. Then configure the ammonium parameter in the "Slot 2:1 (ISE)" software menu.

17.3.2 Damping

The damping causes a floating average curve of the measured values over the time specified.

Path: Menu/Setup/Inputs/ISE/Electrode slot

Function	Options	Info
Damping	0 to 600 s Factory setting 0 s	Specify the damping of the main value of the electrode assigned to the slot.

Inputs: ISE Liquistation CSF48

17.3.3 Compensation

Depending on the selectivity of the ion-selective electrode vis-à-vis other ions (interference ions), and the concentration of these ions, such ions could also be interpreted as part of the measuring signal and thus cause measuring errors.

When measuring in wastewater, the potassium ion - which is chemically similar to the ammonium ion - can cause higher measured values.

The measured values for nitrate can be too high due to high concentrations of chloride. To reduce measuring errors resulting from such cross-interference, the concentration of the potassium or chloride interference ion can be measured and compensated for with a suitable additional electrode.

For the pH, chloride and the potassium electrode, you can only configure an offset. The settings for compensation of the effect of interference ions are available only for ammonium and nitrate.

Path: Menu/Setup/Inputs/ISE/Electrode slot/Compensation

Function	Options	Info
Compensation	Options Off On Factory setting Off	If you want to use the compensation function, you must have installed a compensation electrode (potassium or chloride) in another electrode slot and have configured it in the software.
Offset	-14.00 to 14.00 pH -100 to 100 mg/l Factory setting 0.00 pH 0.00 mg/l	The offset compensates for a difference between a laboratory measurement and an online measurement which is caused by interference ions. Enter this value manually. If you are using a compensation electrode, keep the offset at zero.
Compensation type	Options	The options depend on the parameter to be compensated. You compensate for chloride when using a nitrate electrode, and you can compensate for potassium and pH when using the ammonium electrode. The factory setting depends on the electrode used.
Comp. electrode	Choice of slot	If you have installed and configured several compensation electrodes of the same type in the CAS40D sensor, in this function you have to define which electrode is used for compensation. Generally, you have a potassium or chloride electrode and Liquiline recognizes the right slot.
Selectivity coefficient	-10.00 to 10.00 Factory setting -2.00 (chloride) -0.85 (potassium)	The coefficients are empirical values.

Liquistation CSF48 Inputs: ISE

Path: Menu/Setup/Inputs/ISE/Electrode slot/Compensation

Function	Options	Info
Mode	Options + -	The standard setting (-) corrects a measured value that is too high as a result of the effect of interference ions.
	Factory setting	

17.3.4 Extended setup

Main value format

If the measured variable of the electrode slot is not your main value for the ISE input, it will be displayed with all the measured values in the measuring mode.

Path: Menu/Setup/Inputs/ISE/Extended setup

Function	Options	Info
Main value format	Options # # # #.# Factory setting #.##	Specify the number of decimal places for the measured variable of the electrode slot.

Membrane timer

Path: Menu/Setup/Inputs/ISE/<Electrode slot>Extended setup

Function	Options	Info
Membrane timer	Options Off On Factory setting Off	Switches the timer on or off For sending a reminder to replace the sensor membrane
Membrane timer value	0 to 80 weeks Factory setting 26 weeks	After the time expires, diagnostic message M720, "Membrane change" appears. Then, replace the sensor diaphragm with a new one.

Inputs: ISE Liquistation CSF48

Calibration settings

Stability criteria

Path: Menu/Setup/Inputs/ISE/<Electrode slot>Extended setup/Calib. settings

Function	Options	Info
Stability criteria	Options Off Weak Medium Hard	In normal situations leave the stability criteria set to "Medium".
	Factory setting Medium	

Buffer recognition (only pH)

Path: Menu/Setup/Inputs/ISE/<Electrode slot>Extended setup/Calib. settings

Function	Options	Info
Buffer recognition	Options Fixed Manual Factory setting Fixed	Fixed You choose values from a list. This list depends on the setting for "Buffer manufacturer". Manual You enter any two buffer values. These must differ in
Buffer manufacturer	Options	terms of their pH value. Temperature tables are stored internally in the unit for the following pH values: Endress+Hauser 2.00 / 4.00 / 7.00 / (9.00) / 9.20 / 10.00 / 12.00 Ingold/Mettler 2.00 / 4.01 / 7.00 / 9.21 DIN 19266 1.68 / 4.01 / 6.86 / 9.18 DIN 19267 1.09 / 4.65 / 6.79 / 9.23 / 12.75 Merck/Riedel 2.00 / 4.01 / 6.98 / 8.95 / 12.00 Hamilton 1.09 / 1.68 / 2.00 / 3.06 / 4.01 / 5.00 / 6.00 7.00 / 8.00 / 9.21 / 10.01 / 11.00 / 12.00

i

You have the possibility of defining two buffers of your own with the "Special buffer" option. For this purpose, two tables are displayed in which you can enter value pH value/temperature value pairs.

Liquistation CSF48 Inputs: ISE

Standard addition (all except for pH)

The "Standard addition" calibration type is available only via the "Expert" menu, which is normally available to service personnel only.

Different types of calibration are available to calibrate an ion-selective electrode. Initial settings only have to be made for the standard addition method.

Path: Menu/Setup/Inputs/ISE/<Electrode slot>Extended setup/Calib. settings

Function	Options	Info
▶ Standard addition		
Sampling volume	0.00 to 5000.00 ml Factory setting 1000.00 ml	Here, specify the sample volume which you use during the calibration.
Standard volume	0.00 to 100.00 ml Factory setting 1.00 ml	Volume of the added standard solution per addition step
Standard concentration	0.00 to 10.00 mol/l Factory setting 1.00 mol/l	Concentration of the standard solution
No. of steps	1 to 4 Factory setting 3	Number of addition steps (=measuring points of the calibration function)

Calibration timer

You can specify the calibration interval for the sensor here.

Once the time configured elapses, the "Calibration timer" diagnostics message appears on the display.

The timer is reset automatically if you recalibrate the sensor.

Path: Menu/Setup/Inputs/ISE/<Slot>/Extended setup/Calib. settings

Function	Options	Info
Calibration timer	Options Off On Factory setting Off	Switches the function on or off
Calibration timer Calibration timer="On"	1 to 10000 h Factory setting 1000 h	Specify the time after which the timer should have timed out. Once this time has elapsed, the "Calib. Timer" diagnostics message, along with the code 102, appears on the display.

Inputs: ISE Liquistation CSF48

Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Process check system

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Slope (only pH)

The slope characterizes the sensor condition. The bigger the deviation from the ideal value (100%, corresponds to -59 mV/pH) the poorer the condition of the sensor.

Path: Menu/Setup/Inputs/ISE/Extended setup/Diagnostics settings

Function	Options	Info
▶ Slope	80.00 to 100.00 %	Specify your limit values for slope monitoring.
Warning limit	Factory setting 90.00 %	Associated diagnostics code and message text: 509 "Sensor calib."

Zero point (only pH)

The zero point characterizes the condition of the sensor reference. The bigger the deviation from the ideal value (pH 7.00) the poorer the condition. This can be caused by KCl dissolving away or reference contamination.

Path: Menu/Setup/Inputs/ISE/Extended setup/Diagnostics settings

Function	Options	Info
Zero point (pH glass)	-10.00 to 10.00	Specify your limit values for zero point or operating point monitoring.
Upper warning limit	Factory setting 2.50	Associated diagnostics code and message text: 505 "Sensor calib."
Lower warning limit	Factory setting -2.50	Associated diagnostics code and message text: 507 "Sensor calib."

Liquistation CSF48 Inputs: ISE

Delta slope (only pH)

The device determines the difference in slope between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. The greater the change, the greater the wear experienced by the pH-sensitive glass membrane as a result of chemical corrosion or abrasion.

Path: Menu/Setup/Inputs/ISE/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta slope	0.50 to 10.00 %	Specify your limit values for monitoring the slope differential.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting 2.5 %	Diagnostics code and associated message text: 518 "Sensor calib."

Delta zero point (only pH)

The device determines the difference between the last calibration and the penultimate calibration, and issues a warning or an alarm depending on the setting configured. The difference is an indicator for the condition of the sensor. The following applies to pH glass electrodes: The greater the change, the greater the wear experienced by the reference as a result of contaminating ions or KCl dissolving away.

Path: Menu/Setup/Inputs/ISE/Extended setup/Diagnostics settings

Function	Options	Info
▶ Delta zero point	0.00 to 5.00	Specify your limit values for monitoring the zero point or operating point differential.
Function	Options On Off Factory setting Off	
Warning limit	Factory setting 1.00	Diagnostics code and associated message text: 520 "Sensor calib."

Inputs: ISE Liquistation CSF48

17.4 Limits operating hours

The total operating time of the sensor and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.

Each sensor has a limited life expectancy which heavily depends on the operating conditions. If you specify warning limits for operating times under extreme conditions, you can guarantee the operation of your measuring point without any downtime by performing maintenance tasks in time.

Path: Menu/Setup/Inputs/ISE

tuti. Menar becap, inputs, ion		
Function	Options	Info
Limits operating hours		Specify your limit values for monitoring the number of operating hours under extreme conditions.
The range of adjustmen	nt for the operating hours ala	arm and warning limits is generally 1 to 50000 h.
Function	Options On Off Factory setting Off	On The operation of the sensor under extreme conditions is monitored, recorded in the sensor and diagnostics messages are displayed on the controller. Off No diagnostics messages. However, the time the sensor operates under extreme conditions is recorded in the sensor and can be read in the sensor information in the diagnostics menu.
▶ Operating time		Total operating time of the sensor
Warning limit	Factory setting 36000 h	Diagnostics code and associated message text: 199 "Operating time"
▶ Operation > 30°C		
Warning limit	Factory setting 36000 h	Diagnostics code and associated message text: 191 "Operating time"
▶ Operation > 40°C		
Warning limit	Factory setting 36000 h	Diagnostics code and associated message text: 192 "Operating time"

Liquistation CSF48 Inputs: Interface

18 Inputs: Interface

18.1 Basic settings

The CUS71DOUS71D is not detected automatically. It must be selected manually (Current sensor). During initial commissioning, data are recorded and calculated for 3 to 5 minutes before a measured value is displayed.

Path: Menu/Setup/Inputs/Ultrasonic interface

Function	Options	Info
Sensor operation	Options Scan for memosens sensor Current sensor Factory setting Current sensor	Scan for memosens sensor Searches for Memosens sensors Current sensor Connected sensor is used
Wiper function	Options Off On Factory setting On	Only for sensor version with wiper function
Wiper timing	1 to 240 min Factory setting 10 min	Only for sensor version with wiper function
Turbidity measurement	Options Off On Factory setting On	Only for sensor version with integrated turbidity measurement and wiper function
Turbidity unit	Options FNU NTU Factory setting FNU	Only for sensor version with integrated turbidity measurement and wiper function

18.2 Manual hold

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

Inputs: Interface Liquistation CSF48

18.3 Tank configuration

The mounting location is defined by the tank depth and the sensor zero point. The accuracy of the measurement results depends on the accuracy of these settings.

Since the data in the sensor are overwritten with each change, data input might be delayed.

Path: Menu/Setup/Inputs/Ultrasonic interface/Tank configuration

Function	Options	Info
Blanket definition	Options Interface level Interface range Factory setting Interface level	Type of measurement that should be displayed and calculated: Interface level Distance from the tank floor to the interface, measuring direction from bottom to top Interface range Distance from the water line to the interface, measuring
Unit of measure	Options m cm ft inch Factory setting m	direction from top to bottom Any change to the unit is automatically accepted in all the displays.
Tank depth	0.4 to 10.0 m (1.4 to 32.8 ft) Factory setting 8.0 m (26.2 ft)	Distance from the water level to the tank floor
Zero adjust	0.4 to 10.0 m (1.4 to 32.8 ft) Factory setting 0.4 m (1.3 ft)	Distance from the water level to the sensor diaphragm
Blanking zone	Options Off On Factory setting Off	Permanent echo signals above and below a search window are masked out as interference signals.
Upper window limit	0.0 m to Lower window limit (1.4 ft) Factory setting 0.3 m (1.0 ft)	Distance to the water line below which the system should search for an interface. Permanent echo signals above this value are masked out as interference signals.
Lower window limit	Upper window limit to 11.0 m (to 32.8 ft) Factory setting 3.3 m (10.8 ft)	Distance to the water line Permanent echo signals below this value are masked out as interference signals.

Liquistation CSF48 Inputs: Interface

18.4 Sensor signal

Change the factory settings in this menu if you discover incorrect measurements.

Path: Menu/Setup/Inputs/Ultrasonic interface/Sensor signal

Function	Options	Info
Acoustic control	Options Manual Automatic Factory setting Automatic	Controls the graphic display of the echo signal Automatic The transmitter uses the gain value determined in the self-test (initialization). In the measuring mode, this value is automatically adapted to the current process conditions. Manual You can enter a fixed gain value for diagnostics or test purposes.
35. The values can be as	high as 60 if the sludge/water	ly clear water and a "hard" interface are between 25 and transition is relatively "soft". If you require significantly It is then difficult or impossible to reliably evaluate the
Current gain	0 to 100 Factory setting 30	You can only configure the value with manual acoustic control. The value is read-only for automatic acoustic control.
Gain control set point Acoustic control="Automatic"	1 to 50 Factory setting 20	Horizontal position of the intersection of the interface line with the echo peak. The factory setting "20" corresponds to 20 % of the maximum display height.
Refresh rate	 2 s 4 s 6 s 8 s Factory setting 4 s 	Time frame for data refresh
Damping	5 to 255 Factory setting 130	Number of averaged values until data refresh Select a low damping value if the height of the interface can change very quickly. Higher damping prevents the system from tracking echo signals that occur briefly (e.g. caused by material movement, a rake or a floor scraper).

Inputs: Interface Liquistation CSF48

18.5 Extended setup

18.5.1 Sensor signal

You can adapt the sensor signal to the measuring point in this menu.

Path: Menu/Setup/Inputs/Ultrasonic interface/Extended setup/Sensor signal

Function	Options	Info
Speed of sound	300 to 2000 m/s (985 to 6561 ft/s) Factory setting 1482 m/s (4862 ft/s)	The sound speed depends on the medium temperature and the medium density. Since the temperature and density only fluctuate slightly in most water and wastewater applications, the factory setting of 1482 m/s has proven to be a suitable value.
Always speak to the ma	anufacturer's service team before	changing the setting for Speed of sound.
Sedimentation area		
Gain band	5 to 30 Factory setting 20	Restricts the gain in automatic mode in order to prevent system overload.
Gain increment	0.1 to 0.5 Factory setting 0.1	Defines how quickly the gain can adapt to changing process conditions in the automatic mode.
▶ Bottom definition		
Range above bottom	0.0 to 1.0 m (0.0 to 3.2 ft) Factory setting 0.1 m (0.3 ft)	Zone around the tank bottom in which extraneous signals can occur. Signals above your setting are masked out. This is needed for very low sludge levels or tanks free from sludge.
Bottom signal set point	0 to 100 Factory setting 60	Restricts the gain in automatic mode in order to prevent system overload when the tank is empty or does not have an interface.

Liquistation CSF48 Inputs: Interface

18.5.2 Calculation

Path: Menu/Setup/Inputs/Ultrasonic interface/Extended setup/Calculation

Function	Options	Info
Interface Options • Top layer	■ Top layer	Defines which signal the system should track and display when several interfaces are calculated.
	Lower interfaceFactory settingTop layer	Top layer Determine the interface of thin material in the upper section
		Lower interface Determine the interface of thicker material near the floor
Interface window	Options Off On Factory setting Off	You can open another window near the interface. Specify a distance above and below the interface. The system primarily focuses on the signal within this window. Any signal outside this window must meet the search criteria for an interface for an extended period before the system recognizes it as an interface.
Above interface Interface window="On"	0.0 to 10.0 m (0.0 to 32.8 ft)	The search window is indicated by broken lines in the graphic mode. The search window is 1.2 m wide in the factory setting
Below interface Interface window="On"	Factory setting 0.6 m (2.0 ft)	for both parameters.
Gate response rate	0 to 50	The response rate determines the speed at which the
	Factory setting	system updates the measuring window. A high value stands for a quick change.
Threshold	0 to 100 Factory setting 0	Filter for examining signals If a high value is selected, stronger signals are taken into account more. If a low value is selected, weaker signals are taken into account more.

18.5.3 Diagnostics settings

This menu branch is used for specifying warning limits, and for defining whether and how diagnostics tools should be used.

The associated diagnostics code is displayed for every setting.

Alarm delay echo loss

Path: Menu/Setup/Inputs/Ultrasonic interface/Extended setup/Diagnostics settings

Function	Options	Info
Alarm delay echo loss	0 to 255 min	Delay time for an error message if the echo is lost
	Factory setting 10 min	

Inputs: Interface Liquistation CSF48

Diagnostic behavior

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

18.5.4 Restart the sensor signal

The sensor is reinitialized with the "Restart sensor signal" action.

The sensor starts in the automatic mode and searches for the interface with the last sensor settings. The first measured value appears after around 3 to 5 minutes.

18.5.5 Sensor replacement

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{\triangle}{=} 108$

18.5.6 Data processing factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow \stackrel{ }{=} 108$

18.5.7 Sensor factory setting

--> "Inputs: General/Frequently occurring functions" section $\rightarrow 108$

Index

A	Cap	
Activation code	Calibrations	140
Additional functions		149
Cleaning programs96	Sterilizations	141
Limit switch	Cell constant	124
Mathematical functions	Chloride compensation	170
Alarm relay	Chlorine	
Cleaning	Basic settings	144
Diagnostics message 88	2	146
Limit switch	g	147
Automatic hold8		145
	Main value	
В	F	145
Basic program	Unit	
Basic settings 6	Cleaning	
Chlorine	Cleaning programs	96
Conductivity	Communication	
Interface measurement 177	Fieldbus	
ISE		106
Nitrate 162		106
Oxygen		106
pH/ORP 115		105
SAC157	Web server	103
Turbidity	Conductivity	
Binary inputs	3	130
Binary outputs 82	F	130
Bottle synchronization		127
Bus address	Temperature format	
		127
C	Connection	105
Calibration settings	Service interface	
Chlorine	Web server	103
ISE	Creating a connection	100
Nitrate	Web server	
Oxygen	Current inputs	28
pH/ORP 117		
SAC		
Turbidity		
Calibration timer		
Calibrations		
Cap, chlorine		
Calibrations, cap		

D	pH/ORP
Damping	Polarization detection
Data administration	Process check system 130
Firmware update	SAC
Loading the setup	Sensor check system
Saving the setup	Sensor condition check 120–121
Data management	Slope ISE
Activation code	Slope oxygen
Exporting the setup	Slope pH
Data processing	Turbidity
Date and time	Zero point chlorine 148
Delta slope	Zero point ISE
Chlorine	Zero point Oxygen
ISE	Zero point pH
Oxygen	89 E
pH	<u> </u>
Delta zero point	Electrode slot
Chlorine	Electrolyte counter
ISE	EP
Oxygen	Event program
pH	Extended setup
Device variables	
PROFIBUS	00 Conductivity
Diagnostics settings	Data management
Chlorine	Diagnostics settings
Chlorine slope	HART bus address
Conductivity	Interface
Delta slope chlorine	ISE 168, 171
Delta slope ISE	
Delta slope oxygen	Oxygen
Delta slope pH	
Delta zero point chlorine 14	
Delta zero point ISE	
Delta zero point oxygen 14	F
Delta zero point pH	23 - Eastern auttin a
Diagnostic behavior	
Interface	Congon 11/
ISE	Fieldhua 106
Nitrate)4 F: 1 .
Operating hours conductivity13	/1
Operating hours ISE	Classe manadama arana (2)
Operating hours oxygen	
Operating hours pH/ORP	
Operating hours, chlorine	
Operating hours, nitrate	
Operating hours, SAC	
Operating hours, turbidity	04

G	L
General settings	Limit switch
Automatic hold 8	Limit value-controlled program
Basic settings 6	Logbooks9
Date and time 7	
Extended setup	M
Logbooks	Main value
-	Chlorine
H	ISE
HART 90, 106	Oxygen 134
_	Manual hold
I	Mathematical functions
Inputs	Degassed conductivity 100
Chlorine	Difference
Conductivity	Dual conductivity 101
General108	pH calculation
Interface	Redundancy99
ISE	rH value 99
Nitrate	Measured value formats
Oxygen	Nitrate
pH/ORP 115	SAC
SAC157	Turbidity
Turbidity and solids	Medium compensation
Installation factor	Chlorine
Interface	Oxygen 136, 138
Alarm delay	pH
Calculation	Membrane timer
Diagnostics settings	Modbus
Extended setup	Modbus RS485 91
Sensor signal 179–180	Modbus TCP
Signal restart	N
Tank configuration	
Interface measurement	Nitrate
Basic settings 177	Basic settings
ISE 167	Calibration settings
Basic settings	Diagnostics settings
Calibration settings	Extended setup
Compensation K and Cl	Formats
Diagnostics settings	Stability criteria 164
Electrode slot	
Extended setup	
Main value	
Membrane timer	

0	Program type
Operating hours	Advanced
Chlorine	Basic
Conductivity	external signal53
ISE	Flow-paced 43
Nitrate	Standard 57
Oxygen	Time/flow-paced
pH/ORP121	Time-paced
SAC	Program types
Turbidity	
Operating mode	R
Operation Operation	Relay
Via service interface	Cleaning 89
Via web server	Diagnostics message
	Limit switch
Outputs	
Alarm relays	S
Binary outputs	SAC
Current outputs	Basic settings
Oxygen	Calibration settings
Basic settings	Diagnostics settings
Calibration settings	Extended setup
Diagnostics settings	Formats
Extended setup	Stability criteria
Main value	Sampling methods
Temperature compensation	Sensor check system
Unit	Sensor condition check
P	Sensor factory setting
_	Sensor identification . 115, 124, 134, 144, 152,
pH/ORP	157, 162, 167
Basic settings	Sensor replacement
Calibration settings	Sensor signal
diagnostics settings118	Service interface
Extended setup	Connection
Tag control	
Pharmaceutical water	Setup
Polarization detection	Export
Potassium compensation 170	Load
Process check system	Save
PROFIBUS	Slope
Device variables	Chlorine
PROFIBUS variables 90	ISE
PROFIBUS DP 90	Oxygen
PROFIBUS-DP	pH 119
Program switchover 62	

Stability criteria
Chlorine
Nitrate
Oxygen
pH/ORP 117
SAC159
Turbidity
Standard addition
Sterilizations113
Sterilizations, cap
m.
T
Tag control
Tank configuration
Temperature compensation
Oxygen
Temperature format
Time/flow-paced program
Time-paced program
Turbidity
Basic settings
Calibration settings
Diagnostics settings
Extended setup
Formats
Stability criteria
U
Unit
Chlorine
Oxygen
USP
W
Web server
Connection
Creating a connection
Operation
· · · · · · · · · · · · · · · · · · ·
Z
Zero point
Chlorine
ISE
Oxygen
pH120

www.addresses.endress.com

