



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services




Solutions

## Description of Device Functions

# Proline Prosonic Flow 93C PROFIBUS DP/PA

Ultrasonic flow measuring system

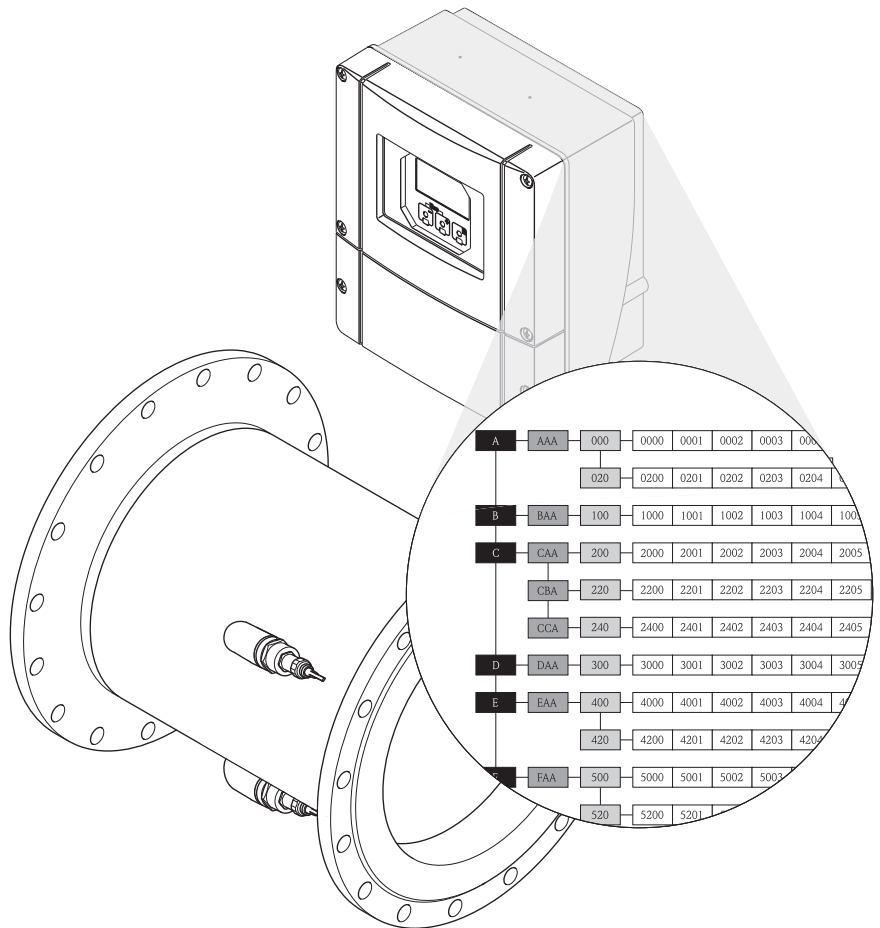

BA00090D/06/EN/13.10  
71121242

Valid as of version:  
PROFIBUS DP: V 3.06.XX (device software)  
PROFIBUS PA: V 3.06.XX (device software)

**Endress+Hauser**

People for Process Automation



## Contents

<b>1</b>	<b>Using this Manual</b>	<b>5</b>
1.1	Using the table of contents to locate a function description	5
1.2	Using the graphic of the function matrix to locate a function description	5
1.3	Using the index of the function matrix to locate a function description	5
<b>2</b>	<b>Function matrix</b>	<b>6</b>
2.1	General layout of the function matrix	6
2.1.1	Blocks (A, B, C, etc.)	6
2.1.2	Groups (AAA, AEA, CAA, etc.)	6
2.1.3	Function groups (000, 020, 060, etc.)	6
2.1.4	Functions (0000, 0001, 0002, etc.)	6
2.1.5	Codes identifying cells	7
2.2	Illustration of the function descriptions	7
2.3	Max. number of writes	8
2.4	Display lines on the local display	8
2.5	Available Blocks, Groups, etc.	8
2.6	Function matrix Prosonic Flow 93C PROFIBUS	9
<b>3</b>	<b>Block MEASURED VARIABLES</b>	<b>10</b>
3.1	Group MEASURING VALUES	11
3.1.1	Function group MAIN VALUES CH1	11
3.1.2	Function group MAIN VALUES CH2	11
3.1.3	Function group CALCULATED MAIN VALUES	12
3.2	Group SYSTEM UNITS	13
3.2.1	Function group CONFIGURATION	13
3.2.2	Function group ADDITIONAL CONFIGURATION	15
<b>4</b>	<b>Block QUICK-SETUP</b>	<b>17</b>
4.1	Quick Setup "Commissioning"	18
<b>5</b>	<b>Block USER INTERFACE</b>	<b>20</b>
5.1	Group CONTROL	21
5.1.1	Function group BASIC CONFIGURATION	21
5.1.2	Function group UN-/LOCKING	23
5.1.3	Function group OPERATION	24
5.2	Group MAIN LINE	25
5.2.1	Function group CONFIGURATION	25
5.2.2	Function group MULTIPLEX	27
5.3	Group ADDITION LINE	28
5.3.1	Function group CONFIGURATION	28
5.3.2	Function group MULTIPLEX	30
5.4	Group INFORMATION LINE	32
5.4.1	Function group CONFIGURATION	32
5.4.2	Function group MULTIPLEX	34
<b>6</b>	<b>Block OUTPUTS</b>	<b>36</b>
6.1	Group CURRENT OUTPUT 1	37
6.1.1	Function group CONFIGURATION	37
6.1.2	Function group OPERATION	46
6.1.3	Function group INFORMATION	47
6.2	Group PULSE/FREQUENCY OUTPUT 1	48
6.2.1	Function group CONFIGURATION	48
6.2.2	Function group OPERATION	69
6.2.3	Function group INFORMATION	72

6.3	Group RELAY OUTPUT (1 to 2) .....	73
6.3.1	Function group CONFIGURATION .....	73
6.3.2	Function group OPERATION .....	77
6.3.3	Function group INFORMATION .....	79
6.3.4	Response of the relay output .....	80
6.3.5	Switching action of the relay output .....	81
<b>7</b>	<b>Block INPUTS .....</b>	<b>83</b>
7.1	Group STATUS INPUT .....	84
7.1.1	Function group CONFIGURATION .....	84
7.1.2	Function group OPERATION .....	85
7.1.3	Function group INFORMATION .....	86
<b>8</b>	<b>Block BASIC FUNCTION .....</b>	<b>87</b>
8.1	Group PROFIBUS DP / PROFIBUS PA .....	88
8.1.1	Function group CONFIGURATION .....	88
8.1.2	Function group FUNCTION BLOCKS .....	89
8.1.3	Function group TOTALIZER .....	90
8.1.4	Function group OPERATION .....	93
8.1.5	Function group INFORMATION .....	94
8.2	Group PROCESS PARAMETER (CH1 to CH2) .....	95
8.2.1	Function group CONFIGURATION .....	95
8.2.2	Function group ADJUSTMENT .....	97
8.2.3	Function group LIQUID DATA .....	98
8.3	Group SYSTEM PARAMETER (CH1 to CH2) .....	101
8.3.1	Function group CONFIGURATION .....	101
8.4	Group SENSOR DATA (CH1 to CH2) .....	103
8.4.1	Function group CONFIGURATION .....	103
8.4.2	Function group MEASURING TUBE .....	104
8.4.3	Function group SENSOR PARAMETER .....	105
8.4.4	Function group CALIBRATION DATA .....	107
8.4.5	Function group ORIG. FACT. CALIBR. ....	108
<b>9</b>	<b>Block SUPERVISION .....</b>	<b>109</b>
9.1	Group SYSTEM (SYSTEM CH2) .....	110
9.1.1	Function group CONFIGURATION .....	110
9.1.2	Function group OPERATION .....	111
9.2	Group VERSION INFO .....	113
9.2.1	Function group DEVICE .....	113
9.2.2	Function group SENSOR .....	113
9.2.3	Function group AMPLIFIER .....	113
9.2.4	Function group F-CHIP .....	114
9.2.5	Function group I/O MODULE .....	114
<b>10</b>	<b>Factory settings .....</b>	<b>115</b>
10.1	SI units .....	115
10.1.1	Low flow cutoff, totalizer .....	115
10.1.2	Language .....	115
10.1.3	Length, temperature .....	116
10.2	US units (for USA and Canada only) .....	116
10.2.1	Low flow cutoff, totalizer .....	116
10.2.2	Language, length, temperature .....	116
<b>11</b>	<b>Index function matrix .....</b>	<b>117</b>
<b>12</b>	<b>Index .....</b>	<b>121</b>

# 1 Using this Manual

There are various ways of locating the description of a function of your choice in the manual:

## 1.1 Using the table of contents to locate a function description

The designations of all the cells in the function matrix are listed in the table of contents. You can use these unambiguous designations (such as USER INTERFACE, INPUTS, OUTPUTS, etc.) to choose whichever functions are applicable to a particular set of conditions. The page references show you exactly where to find the detailed descriptions of the functions in question. The table of contents is on Page 3.

## 1.2 Using the graphic of the function matrix to locate a function description



This step-by-step, top-down approach starts with the blocks, the highest level, and works down through the matrix to the description of the function you need:

1. All blocks available, and their related groups, are illustrated on Page 6. Select the block (or the group within the block) which you need for your application and use the page reference to locate the information corresponding to the next level.
2. The page in question contains a graphic showing of the block with all its subordinate groups, function groups and functions. Select the function which you need for your application and use the page reference to locate the detailed function description.

## 1.3 Using the index of the function matrix to locate a function description

Each "cell" in the function matrix (blocks, groups, function groups, functions) has a unique identifier in the form of a code consisting of one or three letters or a three- or four-digit number. The code identifying a selected "cell" appears at the top right on the local display.

Example:

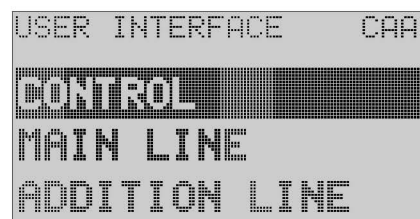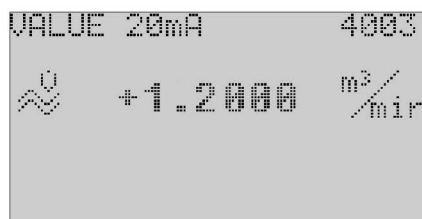

A0001653-en


The function-matrix index lists the codes for all the available "cells" in alphabetic and consecutive order, complete with the page references for the corresponding functions. The index to the function matrix is on Page 117.

## 2 Function matrix

### 2.1 General layout of the function matrix

The function matrix consists of four levels:

**Blocks -> Groups -> Function groups -> Functions**

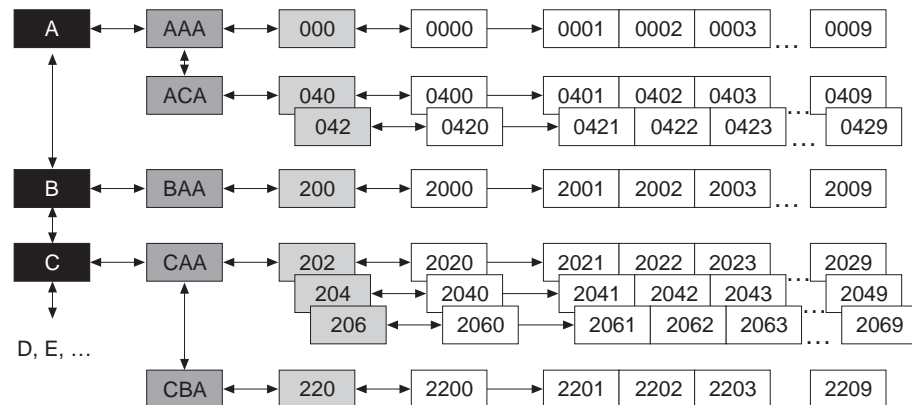

A0000961

#### 2.1.1 Blocks (A, B, C, etc.)

The blocks are the "highest-level grouping" of the operation options for the device.

Examples of blocks available are MEASURED VARIABLES, QUICK SETUP, USER INTERFACE, TOTALIZERS, etc.

#### 2.1.2 Groups (AAA, AEA, CAA, etc.)

A block consists of one or more groups. Each group represents a more detailed selection of the operation options in the higher-order block. The groups in the "USER INTERFACE" block, for example, include: CONTROL, MAIN LINE, ADDITION LINE, etc.

#### 2.1.3 Function groups (000, 020, 060, etc.)

A group consists of one or more function groups. Each function group represents a more detailed selection of the operation options in the higher-order group. The function groups in the "CONTROL" group, for example, include: BASIC CONFIGURATION, UN-/LOCKING, OPERATION, etc.

#### 2.1.4 Functions (0000, 0001, 0002, etc.)

Each function group consists of one or more functions. The functions are used to operate and parameterize the device. Numerical values can be entered or parameters selected and saved. The functions in the "BASIC CONFIGURATION" function group include LANGUAGE, DISPLAY DAMPING, CONTRAST LCD, etc. The procedure for changing the language of the user interface, for example, is as follows:

1. Select the block "USER INTERFACE".
2. Select the group "CONTROL".
3. Select the function group "BASIC CONFIGURATION".
4. Select the function "LANGUAGE" (here you can set the language required).

2.1.5 Codes identifying cells


Each cell (block, group, function group and function) in the function matrix has an individual, unique code.

**Blocks:**  
The code is a letter (A, B, C, etc.)

**Groups:**  
The code consists of three letters (AAA, ABA, BAA, etc.).  
The first letter matches the block code (i.e. each group in block A has a code starting with an A \_ \_; the codes of the groups in block B start with a B \_ \_, and so on). The other two letters are for identifying the group within the respective block.


**Function groups:**  
The code consists of three digits (000, 001, 100, etc.)

**Functions:**  
The code consists of four digits (0000, 0001, 0201, etc.).  
The first three digits are the same as the code for the function group.  
The last digit in the code is a counter for the functions in the function group, incrementing from 0 to 9 (e.g. function 0005 is the sixth function in group 000).

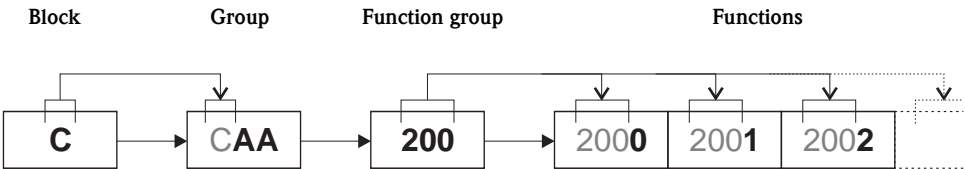

A0001251

2.2 Illustration of the function descriptions

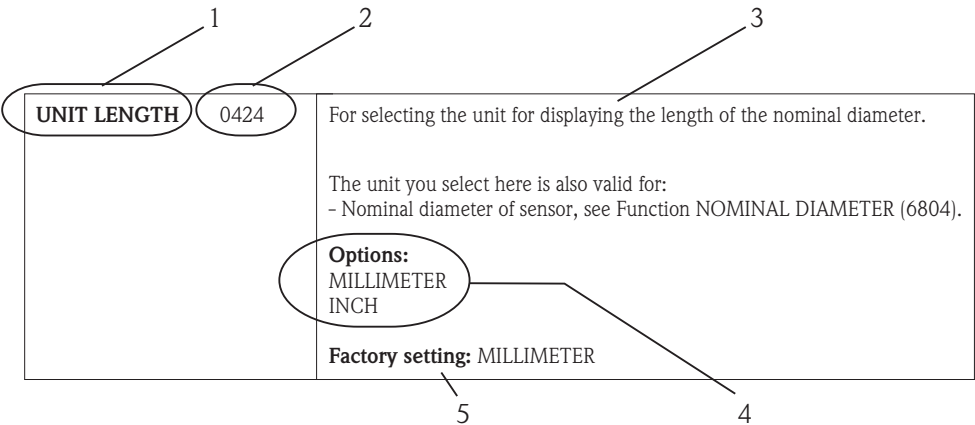

A0004822-en

Fig. 1: Example for the description of a function


- 1 Name of the function
- 2 Number of the function (appears on the local display)
- 3 Description of the function
- 4 Selection or entry options or display
- 5 Factory setting (the measuring device is delivered with this setting/selected option)

2.3 Max. number of writes

The number of writes to the EEPROM is technically restricted to a maximum of 1 million. Attention must be paid to this limit since, if exceeded, it results in data loss and measuring device failure. For this reason, avoid constantly writing nonvolatile device parameters via the PROFIBUS!

2.4 Display lines on the local display

The local display is split into various display lines.

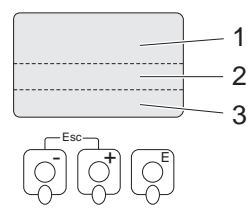

A0001253

Fig. 2: Local display

- 1 Main line
- 2 Additional line
- 3 Information line

The values are assigned to the individual lines in the USER INTERFACE block → Page 20.

2.5 Available Blocks, Groups, etc.


Type code of the measuring device	Available In-/Outputs							Available Blocks, Groups, etc.									
	PROFIBUS PA	PROFIBUS DP	Current output	Pulse/freq. output	Relay output 1	Relay output 2	Status input	MEASURED VARIABLES	QUICK SETUP	USER INTERFACE	Current output	Pulse/freq. output	Relay output 1	Relay output 2	INPUTS	BASIC FUNCTION	SUPERVISION
93***_*****H	X	-	-	-	-	-	-	X	X	X	-	-	-	-	-	X	X
93***_*****J	-	X	-	-	-	-	-	X	X	X	-	-	-	-	-	X	X
93***_*****P	-	X	X	X	-	-	X	X	X	X	X	X	-	-	X	X	X
93***_*****V	-	X	-	-	X	X	X	X	X	X	-	-	X	X	X	X	X



## 2.6 Function matrix Prosonic Flow 93C PROFIBUS

BLOCKS		GROUPS		FUNCTION GROUPS
<b>MEASURED VARIABLES A</b> (s. Page 10)	→	MEASURING VALUES AAA	→	Page 11
		SYSTEM UNITS ACA	→	Page 13
↓				
<b>QUICK-SETUP B</b> (s. Page 17)	→	Commissioning and application setups	→	Page 17
↓				
<b>USER INTERFACE C</b> (s. Page 20)	→	CONTROL CAA	→	Page 21
		MAIN LINE CCA	→	Page 25
		ADDITION LINE CEA	→	Page 28
		INFORMATION LINE CGA	→	Page 32
↓				
<b>OUTPUTS E</b> (see P. 36)	→	CURRENT OUTPUT (1 to 3) EAA,B,C	→	Page 37
		PULSE/FREQUENCY OUTPUT (1 to 2) ECA,B	→	Page 48
		RELAY OUTPUT (1 to 2) EGA, EGB,B	→	Page 73
↓				
<b>INPUTS F</b> (see P. 83)	→	STATUS INPUT FAA	→	Page 84
↓				
<b>BASIC FUNCTION G</b> (s. Page 87)	→	PROFIBUS-DP or PROFIBUS-PA GBA/GCA	→	Page 88
		PROC. PARAM. (CH1 to CH2) GIA, -B	→	Page 95
		SYS. PARAM. (CH1 to CH2) GLA, GLB	→	Page 101
		SENSOR DATA (CH1 to CH2) GNA, GNB	→	Page 103
↓				
<b>SUPERVISION J</b> (s. Page 109)	→	SYSTEM JAA	→	Page 110
		SYSTEM CH2 JAB	→	Page 110
		VERSION INFO JCA	→	Page 113

3 Block MEASURED VARIABLES

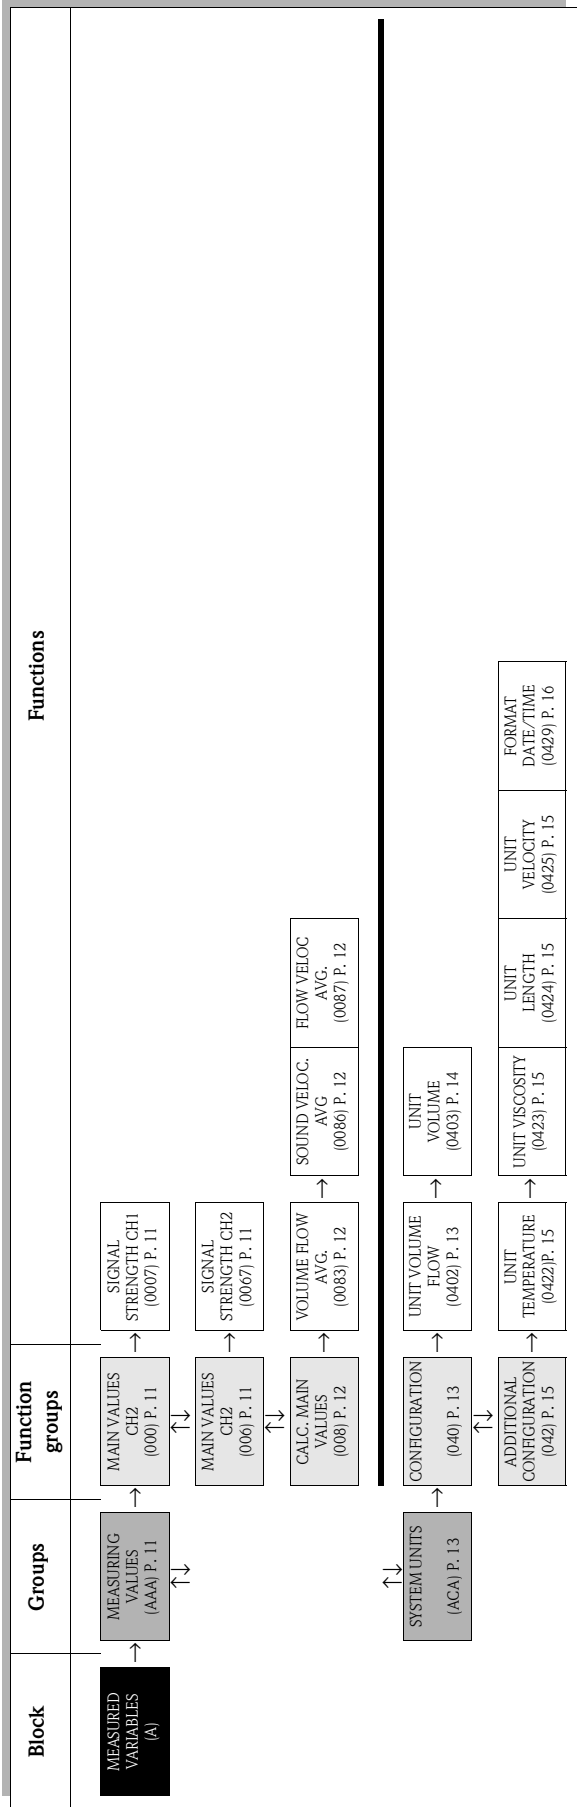

### 3.1 Group MEASURING VALUES

#### 3.1.1 Function group MAIN VALUES CH1



Functional description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH1	
SIGNAL STRENGTH CH1 (0007)	<div>The signal strength appears on the display (channel 1).</div> <div>Display: 4-digit fixed point number (e.g. 80.0)</div> <div>Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of &gt; 30.</div>


#### 3.1.2 Function group MAIN VALUES CH2



Functional description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH2	
SIGNAL STRENGTH CH2 (0067)	<div>The signal strength appears on the display (channel 2).</div> <div>Display: 4-digit fixed-point number (e.g. 80.0)</div> <div>Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of &gt; 30.</div>


### 3.1.3 Function group CALCULATED MAIN VALUES

MEASURED VARIABLE. A → MEASURING VALUES AAA → CALC. MAIN VALUES 008


Functional description	
MEASURED VARIABLES → MEASURING VALUES → CALC. MAIN VALUES	
<p>The calculated measured values appear on the display. The measured values of both channels are used when calculating the values.</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The units of measure of all the measured variables shown here can be set in the "SYSTEM UNITS" group.</li> <li>■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.</li> </ul>	
<b>VOLUME FLOW AVG</b> <b>(0083)</b>	<p>The average volume flow appears on the display. Calculated from the measured values:  <math>(\text{VOLUME FLOW CH1} + \text{VOLUME FLOW CH2}) \cdot 1/2</math></p> <p><b>Display:</b>            5-digit floating-point number, including unit and sign            (e.g. 5.5445 dm<sup>3</sup>/min; 1.4359 m<sup>3</sup>/h; -731.63 gal/d; etc.)</p>
<b>SOUND VELOCITY AVERAGE</b> <b>(0086)</b>	<p>The average sound velocity appears on the display. Calculated from the measured values:  <math>(\text{SOUND VELOCITY CH1} + \text{SOUND VELOCITY CH2}) \cdot 1/2</math></p> <p><b>Display:</b>            5-digit fixed-point number, incl. units            (e.g. 1400.0 m/s, 5249.3 ft/s)</p>
<b>FLOW VELOCITY AVERAGE</b> <b>(0087)</b>	<p>The average flow velocity appears on the display. Calculated from the measured values:  <math>(\text{FLOW VEL. CH1} + \text{FLOW VEL. CH2}) \cdot 1/2</math></p> <p><b>Display:</b>            5-digit floating-point number, including unit and sign            (e.g. 8.0000 m/s, 26.247 ft/s)</p>

### 3.2 Group SYSTEM UNITS


#### 3.2.1 Function group CONFIGURATION




Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
You can select the units for measured variables in this function group.	
<b>UNIT VOLUME FLOW (0402)</b>	<p>Use this function to select the unit for displaying the volume flow.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ PROFIBUS DP/PA output</li> <li>■ Low flow cut off</li> </ul> <p><b>Options:</b></p> <p> Note!</p> <p>The following units of time (...) can be selected: s = second, m = minute, h = hour, d = day</p> <p><i>Metric:</i> Cubic centimeter → cm<sup>3</sup>/... Cubic decimeter → dm<sup>3</sup>/... Cubic meter → m<sup>3</sup>/... Milliliter → ml/... Liter → l/... Hectoliter → hl/... Megaliter → Ml/... MEGA</p> <p><i>US:</i> Cubic centimeter → cc/... Acre foot → af/... Cubic foot → ft<sup>3</sup>/... Fluid ounce → oz f/... Gallon → US gal/... Million gallon → US Mgal/... Barrel (normal fluids: 31.5 gal/bbl) → US bbl/... NORM. Barrel (beer: 31.0 gal/bbl) → US bbl/... BEER Barrel (petrochemicals: 42.0 gal/bbl) → US bbl/... PETR. Barrel (filling tanks: 55.0 gal/bbl) → US bbl/... TANK</p> <p><i>Imperial:</i> Gallon → imp. gal/... Mega gallon → imp. Mgal/... Barrel (beer: 36.0 gal/bbl) → imp. bbl/... BEER Barrel (petrochemicals: 34.97 gal/bbl) → imp. bbl/... PETR.</p> <p><b>Factory setting:</b> l/s</p>

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
UNIT VOLUME (0403)	<p>Use this function to select the unit for displaying the volume.</p> <p><b>Options:</b></p> <p><i>Metric:</i> Cubic centimeter → cm<sup>3</sup> Cubic decimeter → dm<sup>3</sup> Cubic meter → m<sup>3</sup> Milliliter → ml Liter → l Hectoliter → hl Megaliter → Ml MEGA</p> <p><i>US:</i> Cubic centimeter → cc Acre foot → af Cubic foot → ft<sup>3</sup> Fluid ounce → oz f Gallon → US gal Million gallon → US Mgal Barrel (normal fluids: 31.5 gal/bbl) → US bbl NORM.FL. Barrel (beer: 31.0 gal/bbl) → US bbl BEER Barrel (petrochemicals: 42.0 gal/bbl) → US bbl PETROCH. Barrel (filling tanks: 55.0 gal/bbl) → US bbl TANK</p> <p><i>Imperial:</i> Gallon → imp. gal Mega gallon → imp. Mgal Barrel (beer: 36.0 gal/bbl) → imp. bbl BEER Barrel (petrochemicals: 34.97 gal/bbl) → imp. bbl PETROCH.</p> <p><b>Factory setting:</b> l (liter)</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The unit of the totalizers is independent of your choice here. The unit for each totalizer is selected separately for the totalizer in question.</li><li>■ The unit selected in this function is only for showing the values on the local display, i.e. the measuring system does not use it for further processing of the measured variables.</li></ul>

### 3.2.2 Function group ADDITIONAL CONFIGURATION

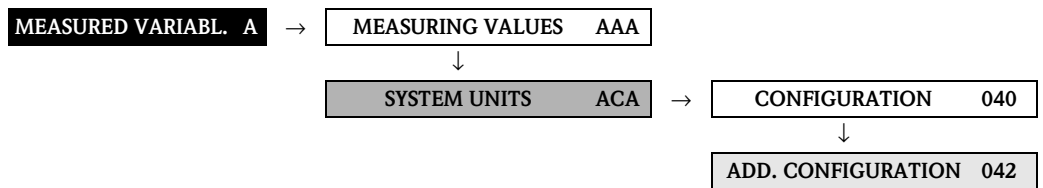



Functional description	
MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
<b>UNIT TEMPERATURE (0422)</b>	<p>Use this function to select the unit for displaying the fluid temperature.</p> <p> <b>Note!</b> The fluid temperature is entered in the TEMPERATURE function → Page 98.</p> <p><b>Options:</b> °C (Celsius) K (Kelvin) °F (Fahrenheit) R (Rankine)</p> <p><b>Factory setting:</b> °C</p>
<b>UNIT VISCOSITY (0423)</b>	<p>Use this function to select the unit for fluid viscosity.</p> <p><b>Options:</b> mm<sup>2</sup>/s cSt St</p> <p><b>Factory setting:</b> mm<sup>2</sup>/s</p>
<b>UNIT LENGTH (0424)</b>	<p>Use this function to select the unit for the measure of length.</p> <p>The unit you select here is valid for:</p> <ul style="list-style-type: none"> <li>■ Nominal diameter</li> <li>■ Diameter</li> <li>■ Wall thickness</li> </ul> <p><b>Options:</b> MILLIMETER INCH</p> <p><b>Factory setting:</b> MILLIMETER</p>
<b>UNIT VELOCITY (0425)</b>	<p>Use this function to select the unit for displaying the velocity. The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Sound velocity</li> <li>■ Flow velocity</li> </ul> <p><b>Options:</b> m/s ft/s</p> <p><b>Factory setting:</b> m/s</p>

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
FORMAT DATE/TIME (0429)	<p>Use this function to select the date and time format of the calibration history.</p> <p><b>Options:</b> DD.MM.YY 24 H MM/DD/YY 12 H A/P DD.MM.YY 12 H A/P MM/DD/YY 24 H</p> <p><b>Factory setting:</b> DD.MM.YY 24 H</p>



## 4 Block QUICK-SETUP


Block	Group	Function groups	Functions
QUICK-SETUP (B)	→	→	<div>QS-COMMISSION. (1002) P. 17</div> → <div>T-DAT SAVE/LOAD (1009) P. 17</div>

Functional description QUICK-SETUP	
<b>SETUP COMMISSIONING (1002)</b>	<p>Use this function to start the Quick Setup menu for commissioning.</p> <p><b>Options:</b> YES NO</p> <p><b>Factory setting:</b> NO</p> <p> <b>Note!</b> You will find a flowchart of the "COMMISSIONING" Quick Setup menu on Page 18. Please refer to the Operating Instructions for Prosonic Flow 93C PROFIBUS DP/PA, BA 089D, for more information on Quick Setup menus.</p>
<b>T-DAT SAVE/LOAD (1009)</b>	<p>Use this function to save the parameter settings / configuration of the <b>transmitter</b> in a transmitter DAT (T-DAT), or to load the parameter settings from the T-DAT into the EEPROM (<b>manual</b> security function).</p> <p>Application examples:</p> <ul style="list-style-type: none"> <li>■ After commissioning, the current measuring point parameters can be saved to the T-DAT as a backup.</li> <li>■ If the transmitter is replaced for some reason, the data from the T-DAT can be loaded into the new transmitter (EEPROM).</li> </ul> <p><b>Options:</b> CANCEL SAVE (from EEPROM to T-DAT) LOAD (from the T-DAT into EEPROM)</p> <p><b>Factory setting:</b> CANCEL</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If the power supply fails, the totalizer readings are automatically saved to the EEPROM.</li> <li>■ The option "LOAD" cannot be executed if the T-DAT is empty or faulty.</li> <li>■ The option "LOAD" and "SAVE" cannot be executed if no T-DAT is present.</li> </ul>

## 4.1 Quick Setup "Commissioning"

In the case of measuring devices without a local display, the individual parameters and functions must be configured via the operating program, e.g. FieldCare.

If the measuring device is equipped with a local display, all the important device parameters for standard operation, as well as additional functions, can be configured quickly and easily by means of the following Quick Setup menus.

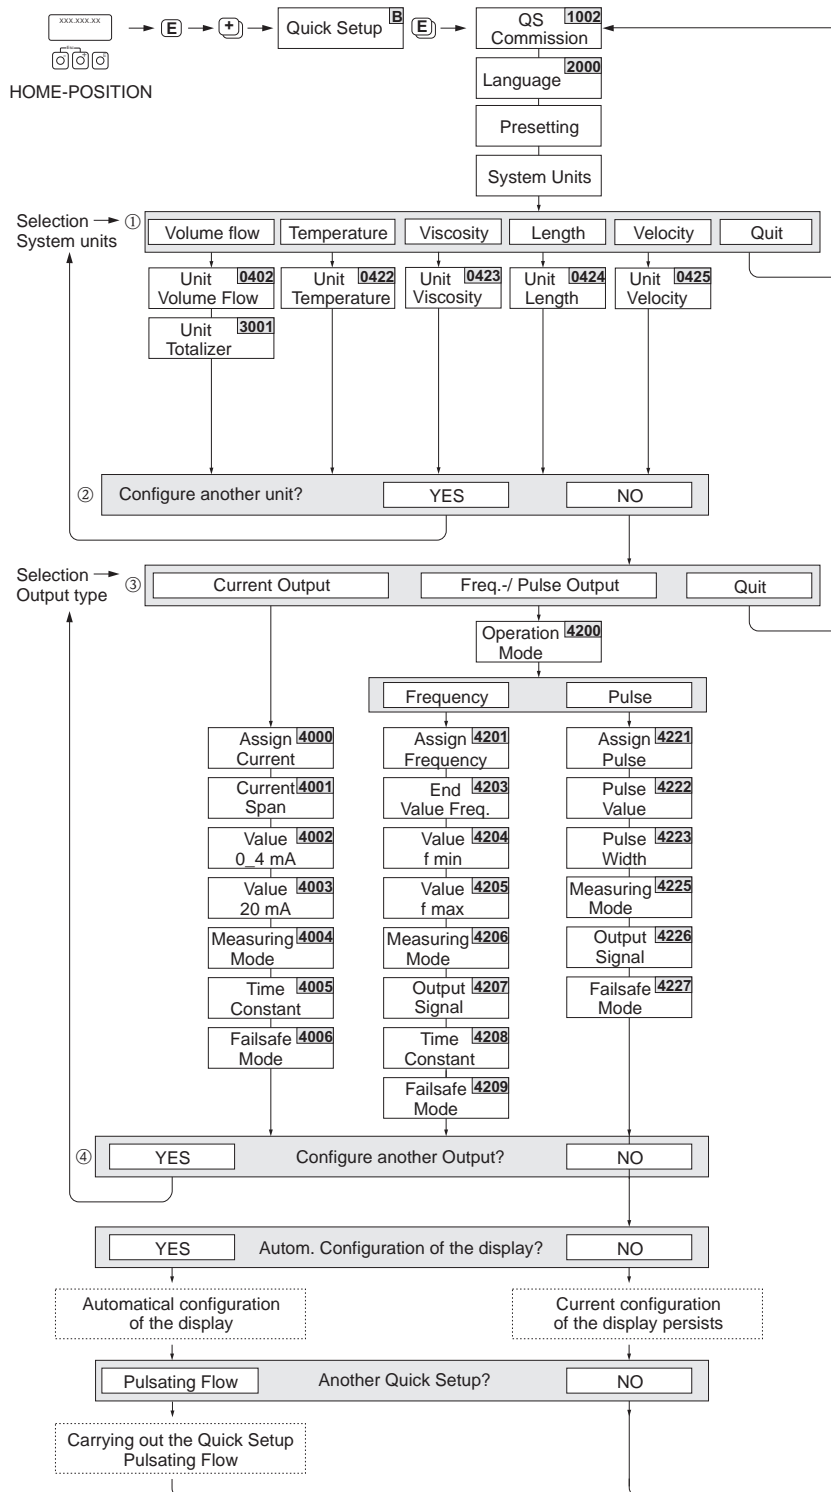

A0009881-en

**Note!**

- The display returns to the function SETUP COMMISSIONING (1002) if you press the ESC key combination during parameter interrogation.
- If you answer YES to the question regarding the "Automatic configuration of the display", the display lines are assigned as follows:


Main line = volume flow

Additional line = totalizer 1

Information line = operating/system condition

- ① Only units not yet configured in the current Quick Setup are offered for selection in each cycle. The volume unit is derived from the volume flow unit.
- ② The "YES" option remains visible until all the units have been configured.  
"NO" is the only option displayed when no further units are available.
- ③ Only outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The "YES" option appears as long as a free output is still available.  
"NO" is the only option displayed when no further outputs are available.

5 Block USER INTERFACE

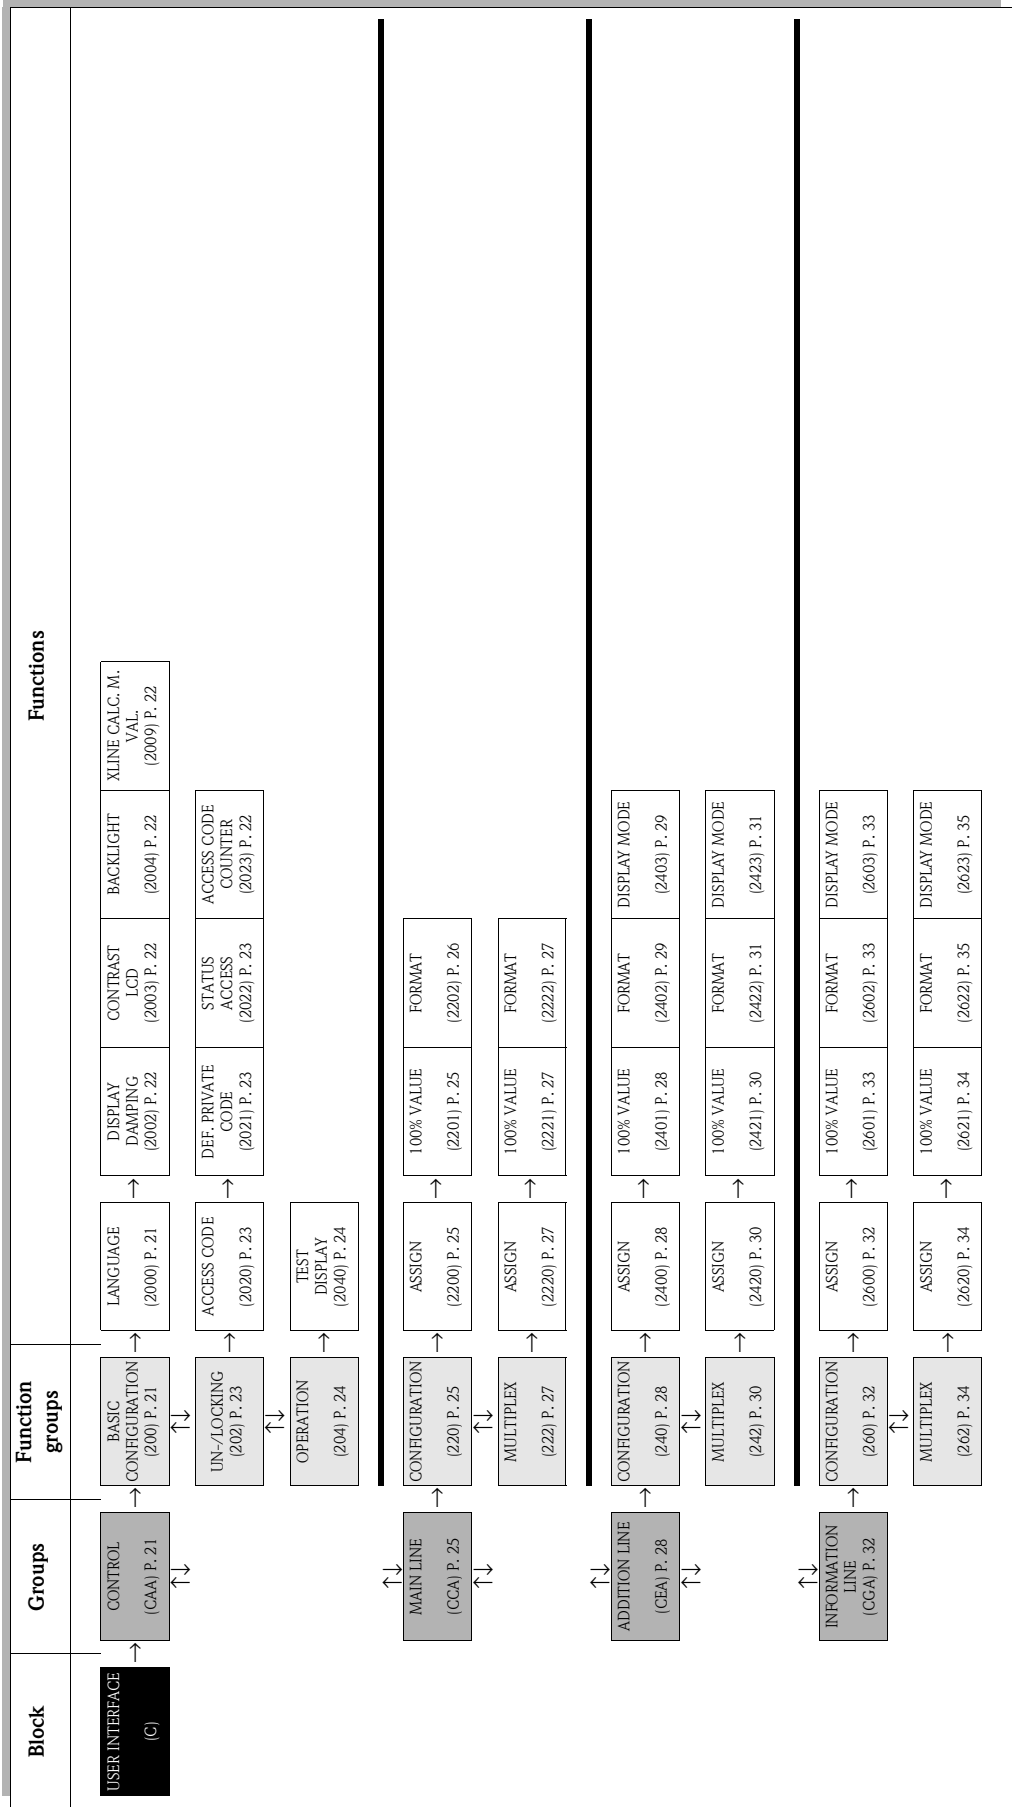

## 5.1 Group CONTROL





### 5.1.1 Function group BASIC CONFIGURATION


USER INTERFACE C →

CONTROL


CAA →




BASIC CONFIGURATION 200

Functional description																																							
USER INTERFACE → CONTROL → BASIC CONFIGURATION																																							
<b>LANGUAGE (2000)</b>	<p>Use this function to select the language for all texts, parameters and messages shown on the local display.</p> <p> <b>Note!</b> The displayed options depend on the available language group shown in the LANGUAGE GROUP function (8226).</p> <p><b>Options:</b></p> <table> <tr> <td>Language group</td><td>ENGLISH</td></tr> <tr> <td>WEST EU / USA</td><td>DEUTSCH</td></tr> <tr> <td></td><td>FRANCAIS</td></tr> <tr> <td></td><td>ESPAÑOL</td></tr> <tr> <td></td><td>ITALIANO</td></tr> <tr> <td></td><td>NEDERLANDS</td></tr> <tr> <td></td><td>PORTUGUESE</td></tr> <tr> <td>Language group</td><td>ENGLISH</td></tr> <tr> <td>EAST EU / SCAND.</td><td>NORSK</td></tr> <tr> <td></td><td>SVENSKA</td></tr> <tr> <td></td><td>SUOMI</td></tr> <tr> <td></td><td>POLISH</td></tr> <tr> <td></td><td>CZECH</td></tr> <tr> <td></td><td>RUSSIAN</td></tr> <tr> <td>Language group ASIA</td><td>ENGLISH</td></tr> <tr> <td></td><td>BAHASA INDONESIA</td></tr> <tr> <td></td><td>JAPANESE (syllabary)</td></tr> <tr> <td>Language group</td><td>CHINESE</td></tr> <tr> <td>CHINESE</td><td>ENGLISH</td></tr> </table> <p><b>Factory setting:</b> Depends on country → Page 115</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If you press the  keys simultaneously during startup, the language defaults to "ENGLISH".</li> <li>■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.</li> </ul>	Language group	ENGLISH	WEST EU / USA	DEUTSCH		FRANCAIS		ESPAÑOL		ITALIANO		NEDERLANDS		PORTUGUESE	Language group	ENGLISH	EAST EU / SCAND.	NORSK		SVENSKA		SUOMI		POLISH		CZECH		RUSSIAN	Language group ASIA	ENGLISH		BAHASA INDONESIA		JAPANESE (syllabary)	Language group	CHINESE	CHINESE	ENGLISH
Language group	ENGLISH																																						
WEST EU / USA	DEUTSCH																																						
	FRANCAIS																																						
	ESPAÑOL																																						
	ITALIANO																																						
	NEDERLANDS																																						
	PORTUGUESE																																						
Language group	ENGLISH																																						
EAST EU / SCAND.	NORSK																																						
	SVENSKA																																						
	SUOMI																																						
	POLISH																																						
	CZECH																																						
	RUSSIAN																																						
Language group ASIA	ENGLISH																																						
	BAHASA INDONESIA																																						
	JAPANESE (syllabary)																																						
Language group	CHINESE																																						
CHINESE	ENGLISH																																						
<b>DISPLAY DAMPING (2002)</b>	<p>Use this function to enter a time constant defining how the display reacts to severely fluctuating flow variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p><b>User input:</b> 0 to 100 seconds</p> <p><b>Factory setting:</b> 1 s</p> <p> <b>Note!</b> Setting the time constant to zero seconds switches off damping.</p>																																						


<b>Functional description</b> USER INTERFACE → CONTROL → BASIC CONFIGURATION	
<b>CONTRAST LCD</b> <b>(2003)</b>	Use this function to optimize display contrast to suit local operating conditions.  <b>User input:</b> 10...100%  <b>Factory setting:</b> 50%
<b>BACKLIGHT</b> <b>(2004)</b>	Use this function to optimize the backlight to suit local operating conditions.  <b>User input:</b> 10...100%  <b>Factory setting:</b> 50%
<b>X-LINE CALCULATED MAIN VALUES</b> <b>(2009)</b>	Use this function to indicate which "calculated main value" from the measured values of both channels is displayed. The option CALCULATED VOLUME FLOW must be selected in the ASSIGN function (2200, main line), (2400, additional line), (2600, information line) so that the value appears in the line desired.   <b>Note!</b> This function does <b>not</b> appear if OFF was selected on at least one channel in the MEASUREMENT function (6880).  <b>Options:</b> (CH1 + CH2)/2  <b>Factory setting:</b> (CH1 + CH2)/2

### 5.1.2 Function group UN-/LOCKING



Functional description	
USER INTERFACE → CONTROL → UN-/LOCKING	
<b>ACCESS CODE (2020)</b>	<p>All data of the measuring system are protected against inadvertent change. Programming is disabled and the settings cannot be changed until a code is entered in this function. If you press the  keys in any function, the measuring system automatically goes to this function and the prompt to enter the code appears on the display (when programming is disabled).</p> <p>You can enable programming by entering your personal code (<b>factory setting = 93</b>, see DEF.PRIVATE CODE (2021)) .</p> <p><b>User input:</b> Max. 4-digit number: 0 to 9999</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The programming levels are disabled if you do not press a key within 60 seconds following automatic return to the HOME position.</li> <li>■ You can also disable programming in this function by entering any number (other than the defined private code).</li> <li>■ The Endress+Hauser service organization can be of assistance if you mislay your personal code.</li> </ul>
<b>DEF. PRIVATE CODE (2021)</b>	<p>Use this function to specify a personal code number for enabling programming in the ACCESS CODE function.</p> <p><b>User input:</b> 0 to 9999 (max. 4-digit number)</p> <p><b>Factory setting:</b> 93</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Programming is always enabled with the code "0".</li> <li>■ Programming has to be enabled before this code can be changed. When programming is disabled this function is not available, thus preventing others from accessing your personal code.</li> </ul>
<b>STATUS ACCESS (2022)</b>	<p>Use this function to check the access status for the function matrix.</p> <p><b>Display:</b> ACCESS CUSTOMER (parameterization possible) LOCKED (parameterization disabled)</p>
<b>ACCESS CODE COUNTER (2023)</b>	<p>The number of times the private or service code was entered to access the device appears on the display.</p> <p><b>Display:</b> Integer (delivery status: 0)</p>

5.1.3 Function group OPERATION

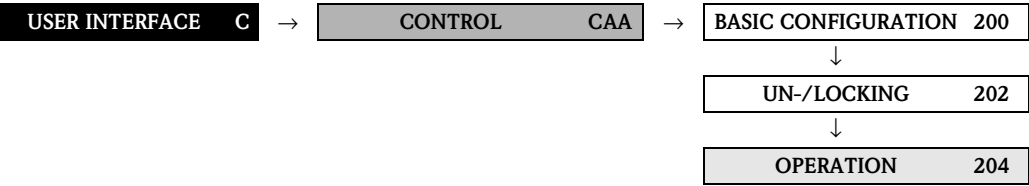





Functional description	
USER INTERFACE → CONTROL → OPERATION	
TEST DISPLAY (2040)	<p>Use this function to test the operability of the local display and its pixels.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p>Test sequence:</p> <ol style="list-style-type: none"><li>1. Start the test by selecting ON.</li><li>2. All pixels of the main line, additional line and information line are darkened for minimum 0.75 seconds.</li><li>3. Main line, additional line and information line show an "8" in each field for minimum 0.75 seconds.</li><li>4. Main line, additional line and information line show a "0" in each field for minimum 0.75 seconds.</li><li>5. Main line, additional line and information line show nothing (blank display) for minimum 0.75 seconds.</li></ol> <p>When the test completes the local display returns to its initial state and the setting changes to OFF.</p>




5.2 Group MAIN LINE


5.2.1 Function group CONFIGURATION

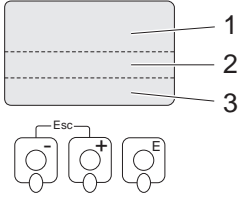

Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
<div><div>1 = Main line 2 = Additional line 3 = Information line</div><div></div></div> <div>A0001253</div>	
<b>ASSIGN</b> <b>(2200)</b>	<p>Use this function to define the display value assigned to the main line (the top line of the local display) during normal measuring operation.</p> <p><b>Options:</b> OFF CALCULATED VOLUME FLOW CALCULATED VOLUME FLOW IN % SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1 to CH2) FLOW VELOCITY AVERAGE AI1 to AI8 - OUT VALUE AO - DISP. VALUE TOT. OUT VALUE 1 to 3</p> <p> <b>Note!</b> If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the following options are not available in this function: AI 3 to AI 8 - OUT VALUE, AO - DISP. VALUE, TOT 2 and TOT 3 - OUT VALUE</p> <p><b>Factory setting:</b> CALCULATED VOLUME FLOW</p>
<b>100% VALUE</b> <b>(2201)</b>	<p> <b>Note!</b> This function is not available unless the CALCULATED VOLUME FLOW IN % setting was selected in the ASSIGN function (2200).</p> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 10 l/s</p>

Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
FORMAT (2202)	<p>Use this function to define the maximum number of places after the decimal point displayed for the reading in the main line.</p> <p><b>Options:</b> XXXXX. – XXXX.X – XXX.XX – XX.XXX – X.XXXX</p> <p><b>Factory setting:</b> X.XXXX</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m<sup>3</sup>/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul>


### 5.2.2 Function group MULTIPLEX

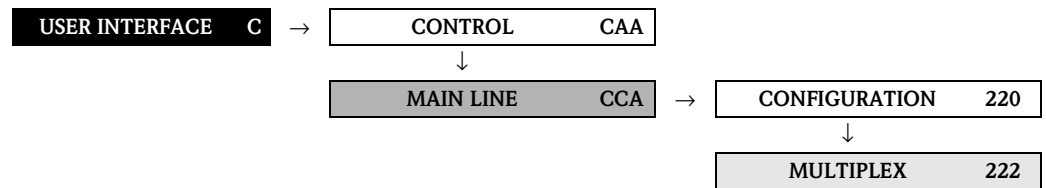







Functional description USER INTERFACE → MAIN LINE → MULTIPLEX	
<b>ASSIGN (2220)</b>	<p>Use this function to define a second reading to be displayed in the main line alternatively (every 10 seconds) with the reading defined in the ASSIGN function (2200).</p> <p><b>Options:</b>            OFF            CALCULATED VOLUME FLOW            CALCULATED VOLUME FLOW IN %            SOUND VELOCITY AVERAGE            SIGNAL STRENGTH (CH1 to CH2)            FLOW VELOCITY AVERAGE            AI1 to AI8 - OUT VALUE            AO - DISP. VALUE            TOT. OUT VALUE 1 to 3</p> <p> <b>Note!</b>            If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the following options are not available in this function:            AI 3 to AI 8 - OUT VALUE, AO - DISP. VALUE, TOT 2 and TOT 3 - OUT VALUE</p> <p><b>Factory setting:</b>            OFF</p>
<b>100% VALUE (2221)</b>	<p> <b>Note!</b>            This function is not available unless the CALCULATED VOLUME FLOW IN % setting was selected in the ASSIGN function (2200).</p> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p><b>User input:</b>            5-digit floating-point number</p> <p><b>Factory setting:</b>            10 l/s</p>
<b>FORMAT (2222)</b>	<p>Use this function to define the maximum number of places after the decimal point for the second value displayed in the main line.</p> <p><b>Options:</b>            XXXXX. – XXXX.X – XXX.XX – XX.XXX – X.XXXX</p> <p><b>Factory setting:</b>            X.XXXX</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li> <li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m<sup>3</sup>/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li> </ul>

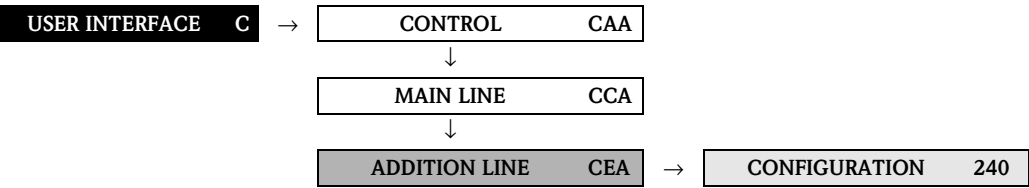5.3 Group ADDITION LINE

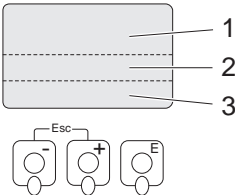
5.3.1 Function group CONFIGURATION








Functional description	
USER INTERFACE → ADDITION LINE → CONFIGURATION	
<div><div>1 = Main line 2 = Additional line 3 = Information line</div><div></div></div> <div>A0001253</div>	
ASSIGN (2400)	<p>Use this function to define the display value assigned to the additional line (the middle line of the local display) during normal measuring operation.</p> <p><b>Options:</b> OFF CALCULATED VOLUME FLOW CALCULATED VOLUME FLOW IN % SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1 to CH2) FLOW VELOCITY AVERAGE CALCULATED VOLUME FLOW BARGRAPH % SIGNAL STRENGTH BARGRAPH % (CH1 to CH2) FLOW DIRECTION (CH1 to CH2) CALCULATED FLOW DIRECTION AI1 to AI8 - OUT VALUE AO - DISP. VALUE TOT. OUT VALUE 1 to 3 TAG NAME</p> <p><b>Factory setting:</b> TOT. OUT VALUE 1</p> <p> <b>Note!</b> If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the following options are not available in this function: AI 3 to AI 8 - OUT VALUE, AO - DISP. VALUE, TOT 2 and TOT 3 - OUT VALUE</p>
100% VALUE (2401)	<p> <b>Note!</b> This function is not available unless one of the following was selected in the ASSIGN function (2400):</p> <ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW IN %</li><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li></ul> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 10 l/s</p>

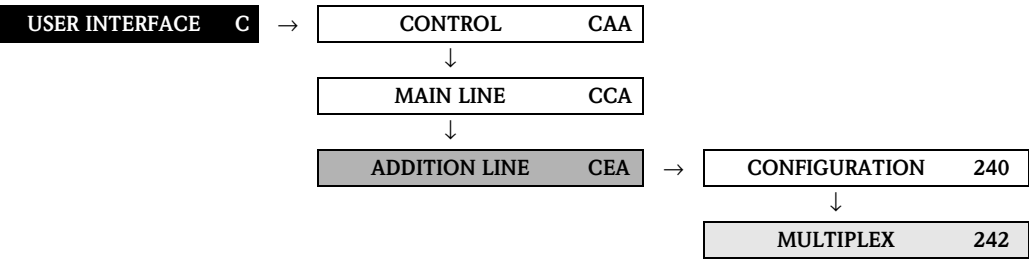Functional description	
USER INTERFACE → ADDITION LINE → CONFIGURATION	
FORMAT (2402)	<div><div> Note!</div><p>This function is not available unless a number was selected in the ASSIGN function (2400).</p><p>Use this function to define the maximum number of places after the decimal point displayed for the reading in the additional line.</p><p><b>Options:</b> XXXXX. – XXXX.X – XXX.XX – XX.XXX – X.XXXX</p><p><b>Factory setting:</b> X.XXXX</p><div><div> Note!</div><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m<sup>3</sup>/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div></div>
DISPLAY MODE (2403)	<div><div><div><div> Note!</div><p>This function is not available unless one of the following was selected in the ASSIGN function (2400):</p><ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li><li>■ SIGNAL STRENGTH BARGRAPH %</li></ul><p>Use this function to define the format of the bar graph.</p><p><b>Options:</b> STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p><div><div><div><div></div><div></div><div></div></div><div><div>+25</div><div>+50</div><div>+75</div></div><div>%</div></div></div><div>A0001258</div><p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with –50 / 0 / +50% gradations and integrated sign).</p><div><div><div><div></div><div></div><div></div></div><div><div>-50</div><div>-</div><div>+50</div></div><div>%</div></div></div><div>A0001259</div><p><b>Factory setting:</b> STANDARD</p></div></div></div>

5.3.2 Function group MULTIPLEX




Functional description	
USER INTERFACE → ADDITION LINE → MULTIPLEX	
ASSIGN (2420)	<p>Use this function to define a second reading to be displayed in the additional line alternatively (every 10 seconds) with the reading defined in the ASSIGN function (2400).</p> <p><b>Options:</b> OFF CALCULATED VOLUME FLOW CALCULATED VOLUME FLOW IN % SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1 to CH2) FLOW VELOCITY AVERAGE CALCULATED VOLUME FLOW BARGRAPH % SIGNAL STRENGTH BARGRAPH % (CH1 to CH2) CALCULATED FLOW DIRECTION AI1 to AI8 - OUT VALUE AO - DISP. VALUE TOT. OUT VALUE 1 to 3 TAG NAME</p> <p><b>Factory setting:</b> OFF</p> <p> Note!</p> <ul style="list-style-type: none"><li>■ Multiplex mode is suspended as soon as a fault / notice message is generated.</li><li>■ If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the following options are not available in this function: AI 3 to AI 8 - OUT VALUE, AO - DISP. VALUE, TOT 2 and TOT 3 - OUT VALUE</li></ul>
100% VALUE (2421)	<p> Note!</p> <p>This function is not available unless one of the following was selected in the ASSIGN function (2420):</p> <ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW IN %</li><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li></ul> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting</b> 10 l/s</p>

Functional description	
USER INTERFACE → ADDITION LINE → MULTIPLEX	
FORMAT (2422)	<div><p> <b>Note!</b> This function is not available unless a number was selected in the ASSIGN function (2420).</p><p>Use this function to define the maximum number of places after the decimal point for the second value displayed in the additional line.</p><p><b>Options:</b> XXXXX. – XXXX.X – XXX.XX – XX.XXX – X.XXXX</p><p><b>Factory setting:</b> X.XXXX</p><p> <b>Note!</b></p><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m<sup>3</sup>/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div>
DISPLAY MODE (2423)	<div><p> <b>Note!</b> This function is not available unless one of the following was selected in the ASSIGN function (2420):</p><ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li><li>■ SIGNAL STRENGTH BARGRAPH %</li></ul><p>Use this function to define the format of the bar graph.</p><p><b>Options:</b> STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p><div></div><p>A0001258</p><p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with –50 / 0 / +50% gradations and integrated sign).</p><div></div><p>A0001259</p><p><b>Factory setting:</b> STANDARD</p></div>





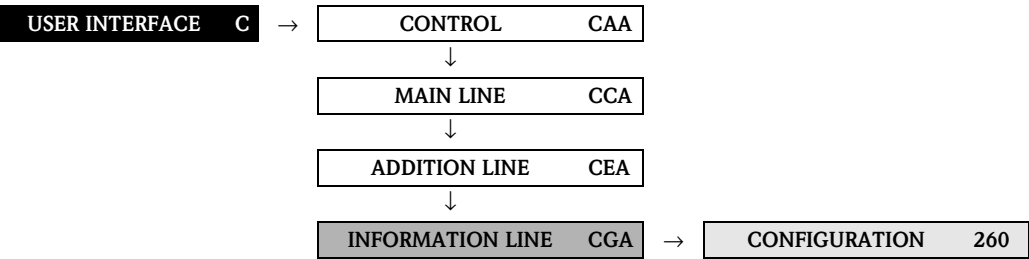

5.4 Group INFORMATION LINE

5.4.1 Function group CONFIGURATION




Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
<div>1 = Main line</div> <div>2 = Additional line</div> <div>3 = Information line</div> <div></div>	<div>A0001253</div>
<div>ASSIGN</div> <div>(2600)</div>	<div>Use this function to define the display value assigned to the information line (the bottom line of the local display) during normal measuring operation.</div> <div><b>Options:</b></div> <div>OFF</div> <div>CALCULATED VOLUME FLOW</div> <div>CALCULATED VOLUME FLOW IN %</div> <div>SOUND VELOCITY AVERAGE</div> <div>SIGNAL STRENGTH (CH1 to CH2)</div> <div>FLOW VELOCITY AVERAGE</div> <div>CALCULATED VOLUME FLOW BARGRAPH %</div> <div>SIGNAL STRENGTH BARGRAPH % (CH1 to CH2)</div> <div>OPERATING/SYSTEM CONDITIONS</div> <div>CALCULATED FLOW DIRECTION</div> <div>AI1 to AI8 - OUT VALUE</div> <div>AO - DISP. VALUE</div> <div>TOT. OUT VALUE 1 to 3</div> <div>TAG NAME</div> <div><b>Factory setting:</b></div> <div>OPERATING/SYSTEM CONDITIONS</div> <div><div></div> <b>Note!</b></div> <div>If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the following options are not available in this function:</div> <div>AI 3 to AI 8 - OUT VALUE, AO - DISP. VALUE, TOT 2 and TOT 3 - OUT VALUE</div>



Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
100% VALUE (2601)	<div><div> Note!</div><p>This function is not available unless one of the following was selected in the ASSIGN function (2400):</p><ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW IN %</li><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li></ul><p>Use this function to define the flow value to be shown on the display as the 100% value.</p><p><b>User input:</b> 5-digit floating-point number</p><p><b>Factory setting:</b> 10 l/s</p></div>
FORMAT (2602)	<div><div><div><div> Note!</div><p>This function is not available unless a number was selected in the ASSIGN function (2600).</p><p>Use this function to define the maximum number of places after the decimal point displayed for the reading in the information line.</p><p><b>Options:</b> XXXXX. – XXXX.X – XXX.XX – XX.XXX – X.XXXX</p><p><b>Factory setting:</b> X.XXXX</p></div><div><div> Note!</div><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m<sup>3</sup>/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div></div></div>
DISPLAY MODE (2603)	<div><div><div><div> Note!</div><p>This function is not available unless one of the following was selected in the ASSIGN function (2600):</p><ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li><li>■ SIGNAL STRENGTH BARGRAPH %</li></ul><p>Use this function to define the format of the bar graph.</p><p><b>Options:</b> STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p><div></div><p>A0001258</p><p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with –50 / 0 / +50% gradations and integrated sign).</p><div></div><p>A0001259</p><p><b>Factory setting:</b> STANDARD</p></div></div></div>

5.4.2 Function group MULTIPLEX

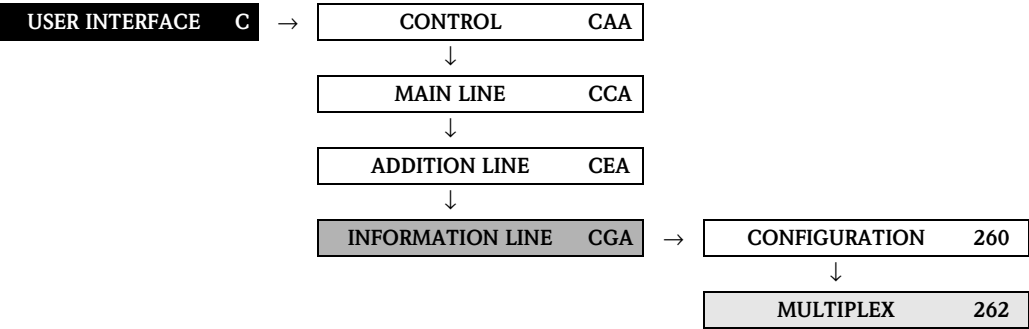


Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
ASSIGN (2620)	<p>Use this function to define a second reading to be displayed in the information line alternatively (every 10 seconds) with the reading defined in the ASSIGN function (2600).</p> <p><b>Options:</b> OFF CALCULATED VOLUME FLOW CALCULATED VOLUME FLOW IN % SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1 to CH2) FLOW VELOCITY AVERAGE CALCULATED VOLUME FLOW BARGRAPH % (CH1 to CH2) SIGNAL STRENGTH BARGRAPH % (CH1 to CH2) OPERATING/SYSTEM CONDITIONS CALCULATED FLOW DIRECTION AI1 to AI8 - OUT VALUE AO - DISP. VALUE TOT. OUT VALUE 1 to 3 TAG NAME</p> <p><b>Factory setting:</b> OFF</p> <p> Note!</p> <ul style="list-style-type: none"><li>■ Multiplex mode is suspended as soon as a fault / notice message is generated.</li><li>■ If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the following options are not available in this function: AI 3 to AI 8 - OUT VALUE, AO - DISP. VALUE, TOT 2 and TOT 3 - OUT VALUE</li></ul>
100% VALUE (2621)	<p> Note!</p> <p>This function is not available unless one of the following was selected in the ASSIGN function (2400):</p> <ul style="list-style-type: none"><li>■ CALCULATED VOLUME FLOW IN %</li><li>■ CALCULATED VOLUME FLOW BARGRAPH %</li></ul> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 10 l/s</p>

Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
FORMAT (2622)	<div><div> Note!</div><p>This function is not available unless a number was selected in the ASSIGN function (2600).</p><p>Use this function to define the maximum number of places after the decimal point for the second value displayed in the information line.</p><p><b>Options:</b> XXXXX. – XXXX.X – XXX.XX – XX.XXX – X.XXXX</p><p><b>Factory setting:</b> X.XXXX</p><div><div> Note!</div><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m<sup>3</sup>/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div></div>


6 Block OUTPUTS


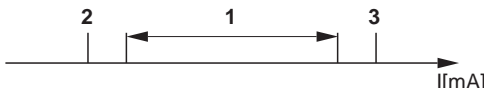

Note!  
Block not available for all measuring devices → Page 8 (available blocks, groups etc.).

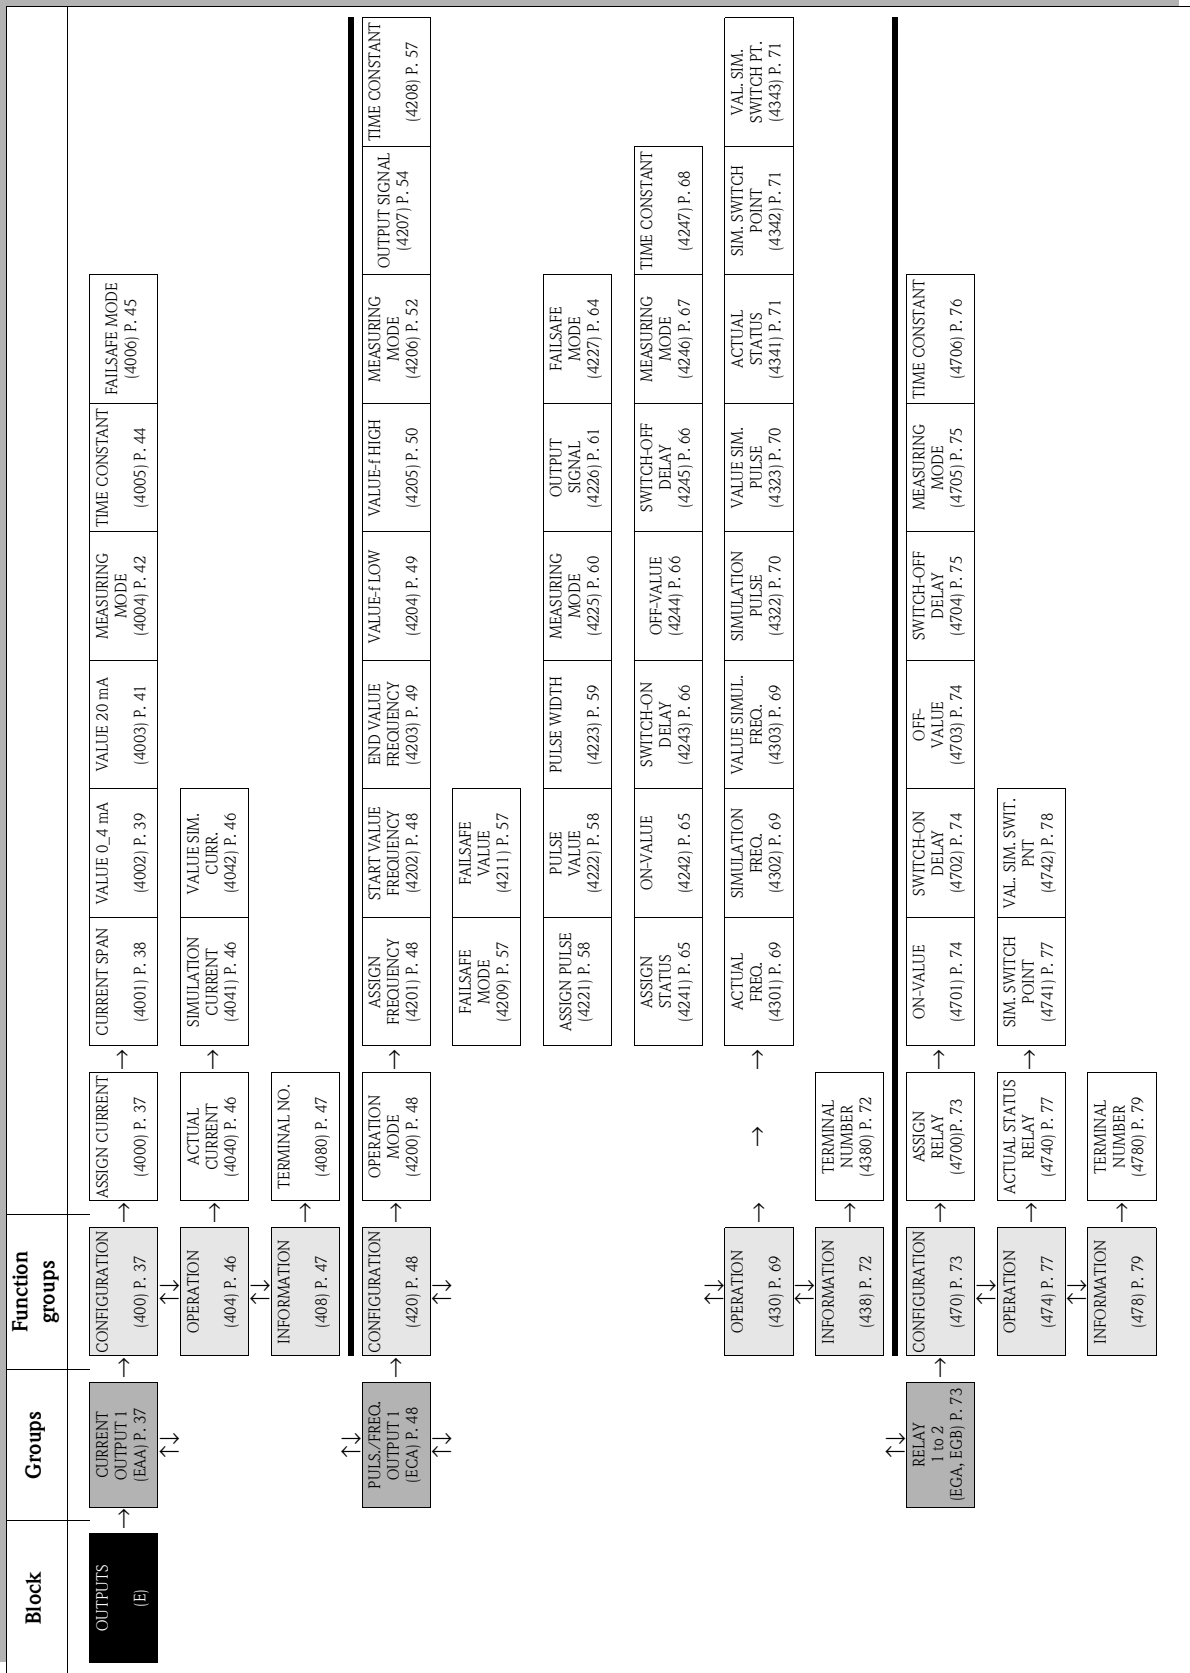

6.1 Group CURRENT OUTPUT 1

6.1.1 Function group CONFIGURATION

OUTPUTS	E	→	CURRENT OUTPUT 1	EAA	→	CONFIGURATION	400
<div>Functional description</div> <div>OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION</div> <div>(only with PROFIBUS DP)</div>							
ASSIGN CURRENT OUTPUT (4000)		<div>Use this function to assign a measured variable to the current output.</div> <div>Options:</div> <div>OFF</div> <div>VOLUME FLOW AVERAGE</div> <div>SOUND VELOC. AVG</div> <div>FLOW VELOCITY AVERAGE</div> <div>Factory setting:</div> <div>VOLUME FLOW AVERAGE</div> <div> Note!</div> <div>If you select OFF, the only function shown in the CONFIGURATION function group (400) is the function ASSIGN CURRENT OUTPUT (4000).</div>					

Functional description																													
OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION (only with PROFIBUS DP)																													
CURRENT SPAN (4001)	<p>Use this function to define the current span. The selection specifies the operational range and the lower and upper signal on alarm.</p> <p><b>Options:</b> 0–20 mA (25 mA) 4–20 mA (25 mA) 0–20 mA 4–20 mA 4–20 mA NAMUR 4–20 mA US</p> <p><b>Factory setting:</b> 4–20 mA NAMUR</p> <p> <b>Note!</b> When switching the hardware from an active (factory setting) to a passive output signal select a current span of 4–20 mA, (see Operating Instructions)</p> <p><b>Current span, operational range and signal on alarm level</b></p> <div></div> <table><tr><th>a</th><th>1</th><th>2</th><th>3</th></tr><tr><td>0-20 mA (25 mA)</td><td>0 - 24 mA</td><td>0</td><td>25</td></tr><tr><td>4-20 mA (25 mA)</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr><tr><td>0-20 mA</td><td>0 - 20.5 mA</td><td>0</td><td>22</td></tr><tr><td>4-20 mA</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr></table> <div><div>A0002959</div><div><div>a</div><div>1</div><div>2</div><div>3</div><div>Current span</div><div>Operational range (measuring information)</div><div>Lower signal on alarm level</div><div>Upper signal on alarm level</div></div></div> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ If the measured value exceeds the measuring range (as defined in the functions VALUE 0_4 mA (4002) and VALUE 20 mA (4003), a notice message is generated (#351–354, current range).</li><li>■ In case of a fault the behavior of the current output is according to the selected option in the FAILSAFE MODE function (4006).</li></ul>	a	1	2	3	0-20 mA (25 mA)	0 - 24 mA	0	25	4-20 mA (25 mA)	4 - 24 mA	2	25	0-20 mA	0 - 20.5 mA	0	22	4-20 mA	4 - 20.5 mA	2	22	4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA US	3.9 - 20.8 mA	3.75	22.6
a	1	2	3																										
0-20 mA (25 mA)	0 - 24 mA	0	25																										
4-20 mA (25 mA)	4 - 24 mA	2	25																										
0-20 mA	0 - 20.5 mA	0	22																										
4-20 mA	4 - 20.5 mA	2	22																										
4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6																										
4-20 mA US	3.9 - 20.8 mA	3.75	22.6																										

## Functional description

OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION  
(only with PROFIBUS DP)

VALUE 0\_4 mA  
(4002)

Use this function to assign the 0/4 mA current a value.

The value can be greater or less than the value assigned to 20 mA, (function VALUE 20 mA (4003)). Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow).

Example:


4 mA assigned value =  $-250 \text{ l/h}$

20 mA assigned value = +750 l/h

Calculated current value = 8 mA (at zero flow)

Note that values with different signs cannot be entered for 0/4 mA and 20 mA (function 4003) if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case the message "INPUT RANGE EXCEEDED" appears on the display.

Example for STANDARD measuring mode:

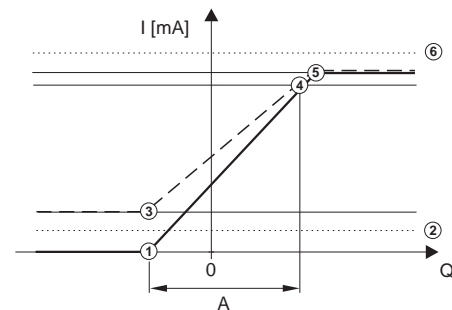

A0001223

- ① = Initial value (0 to 20 mA)  
 ② = Lower signal on alarm level: depends on the setting in the CURRENT SPAN function  
 ③ = Initial value (4 to 20 mA): depends on the setting in the CURRENT SPAN function  
 ④ = Full scale value (0/4 to 20 mA): depends on the setting in the CURRENT SPAN function  
 ⑤ = Maximum current value: depends on the setting in the CURRENT SPAN function  
 ⑥ = Failsafe mode (upper signal on alarm level): depends on the setting in the functions CURRENT SPAN → Page 38 and FAILSAFE MODE → Page 45  
 A = Measuring range (the minimum measuring range has to exceed the value that correlates with a flow velocity of 0.3 m/s)

User input:

5-digit floating-point number, with sign

**Factory setting:**

0 [unit]



Note!

- The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) → Page 13.






**Caution!**

The current output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the current output are given in the following section.

(continued on next page)





Functional description	
OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION (only with PROFIBUS DP)	
VALUE 0_4 mA (Continued)	<p><b>Parameter setting example A:</b></p> <ol style="list-style-type: none"><li>VALUE 0_4 mA (4002) = not equal to zero flow (e.g. <math>-5\text{ m}^3/\text{h}</math>) VALUE 20 mA (4003) = not equal to zero flow (e.g. <math>10\text{ m}^3/\text{h}</math>) or</li><li>VALUE 0_4 mA (4002) = not equal to zero flow (e.g. <math>100\text{ m}^3/\text{h}</math>) VALUE 20 mA (4003) = not equal to zero flow (e.g. <math>-40\text{ m}^3/\text{h}</math>)</li></ol> <p>and MEASURING MODE (4004) = STANDARD</p> <p>When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see Fig.), a fault/notice message is generated (#351-354, current range) and the current output responds in accordance with the parameter settings in the FAILSAFE MODE function (4006)).</p> <div><div>1) </div><div>2) </div></div> <p>A0001262</p> <p><b>Parameter setting example B:</b></p> <ol style="list-style-type: none"><li>VALUE 0_4 mA (4002) = equal to zero flow (e.g. <math>0\text{ m}^3/\text{h}</math>) VALUE 20 mA (4003) = not equal to zero flow (e.g. <math>10\text{ m}^3/\text{h}</math>) or</li><li>VALUE 0_4 mA (4002) = not equal to zero flow (e.g. <math>100\text{ m}^3/\text{h}</math>) VALUE 20 mA (4003) = equal to zero flow (e.g. <math>0\text{ m}^3/\text{h}</math>)</li></ol> <p>and MEASURING MODE (4004) = STANDARD</p> <p>When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. In doing so, one of the two values is parameterized as zero flow (e.g. <math>0\text{ m}^3/\text{h}</math>).</p> <p>If the effective flow drops below or exceeds the value parameterized as the zero flow, no fault/notice message is generated and the current output retains its value.</p> <p>If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351-354, current range) and the current output responds in accordance with the parameter settings in the FAILSAFE MODE function (4006).</p> <div><div>1) </div><div>2) </div></div> <p>A0001264</p> <p>Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed.</p> <p><b>Parameter setting example C:</b> MEASURING MODE (4004) = SYMMETRY</p> <p>The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA VALUE ① and the 20 mA VALUE ② must have the same sign (+ or -). The "20 mA VALUE" ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).</p> <div></div> <p>A0001249</p> <p>ASSIGN RELAY (4700) = FLOW DIRECTION</p> <p>With this setting e.g. the flow direction output via a switching contact can be made.</p> <p><b>Parameter setting example D:</b> MEASURING MODE (4004) = PULSATING FLOW → Page 42</p>



<div>Functional description</div> <div>OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION</div> <div>(only with PROFIBUS DP)</div>	
<div>VALUE 20 mA</div> <div>(4003)</div>	<div>Use this function to assign the 20 mA current a value.</div> <div>The value can be greater or less than the value assigned to 0/4 mA, (function VALUE 0_4 mA (4002) → Page 39). Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow).</div> <div>Example:</div> <div>4 mA assigned value = − 250 l/h</div> <div>20 mA assigned value = +750 l/h</div> <div>Calculated current value = 8 mA (at zero flow)</div> <div>Note that values with different signs cannot be entered for 0/4 mA and 20 mA (function 4002) if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case the message "INPUT AREA EXCEEDED" appears.</div> <div>Example for STANDARD measuring mode → Page 39.</div> <div>User input:</div> <div>5-digit floating-point number, with sign</div> <div>Factory setting:</div> <div>Depends on the setting in the ASSIGN CURRENT OUTPUT function (4000):</div> <div>volume flow: 10 l/s</div> <div>sound velocity: 1800 m/s</div> <div>flow velocity: 10 m/s</div> <div>corresponds to the factory setting for the final value.</div> <div> Note!</div> <div>The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) .</div> <div> Caution!</div> <div>It is very important to read and comply with the information in the VALUE 0_4 mA function (under " Caution"; Examples of parameter settings) on Page 39.</div>


Functional description	
OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION (only with PROFIBUS DP)	
MEASURING MODE (4004)	<p>Use this function to define the measuring mode for the current output.</p> <p><b>Options:</b> STANDARD SYMMETRY PULSATING FLOW</p> <p><b>Factory setting:</b> STANDARD</p> <p><b>Description of the individual options:</b></p> <p>■ STANDARD</p> <p>The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the 0_4 mA VALUE ① and the 20 mA VALUE ②) are taken into account as follows for signal output.</p> <ul style="list-style-type: none"><li>– If one of the values is defined as equal to the zero flow (for example VALUE 0_4 mA = 0 m<sup>3</sup>/h), no message is given if this value is exceeded or not achieved and the current output retains its value (4 mA in the example). If the other value is exceeded or not achieved, the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears and the current output responds in accordance with the parameter setting in the FAILSAFE MODE function (4006).</li><li>– If both values are defined as not equal to the zero flow (for example VALUE 0_4 mA = -5 m<sup>3</sup>/h; VALUE 20 mA = 10 m<sup>3</sup>/h) the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the current output responds in accordance with the parameter setting in the FAILSAFE MODE function (4006).</li></ul> <div></div> <p>A0001248</p> <p>■ SYMMETRY</p> <p>The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA VALUE ① and the 20 mA VALUE ② must have the same sign (+ or -). The "20 mA VALUE" ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).</p> <div></div> <p>A0001249</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The direction of flow can be output via the configurable relay or status outputs.</li><li>■ SYMMETRY cannot be selected unless the values in the VALUE 0_4 mA (4002) and VALUE 20 mA (4003) functions have the same sign or one of the values is zero. If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.</li></ul> <p>(continued on next page)</p>



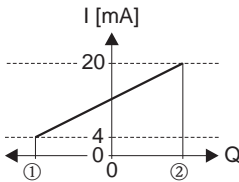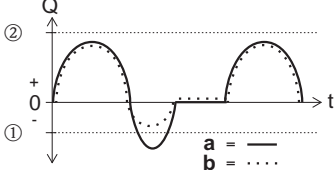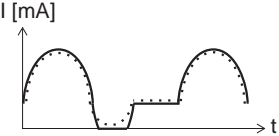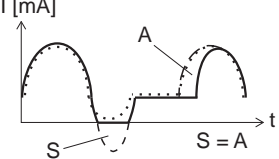

<div>Functional description</div> <div>           OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION            (only with PROFIBUS DP)         </div>	
<b>MEASURING MODE</b> (Continued)	<div> <div>■ PULSATING FLOW</div> <p>             If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the data cannot be buffered within approx. 60 seconds, a fault or notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the current output.           </p> </div>
Detailed explanations and information	<div> <div> <b>How the current output responds under the following postulated conditions:</b> </div> <div>           1. Defined measuring range (① – ②): ① and ② have the <b>same</b> sign           <div> </div> <div>             and the following flow behavior:             <div> </div> </div> <div> <div>■ STANDARD</div> <p>             The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range are not taken into account for signal output.           </p> <div> </div> </div> <div> <div>■ SYMMETRY</div> <p>             The current output signal is independent of the direction of flow.           </p> <div> </div> </div> <div> <div>■ PULSATING FLOW</div> <p>             Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.           </p> <div> </div> </div> </div> </div>

Functional description	
OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION (only with PROFIBUS DP)	
Detailed explanations and information (Continued)	<div>2. Defined measuring range (① – ②): ① and ② have <b>different</b> signs</div> <div></div> <div>A0001272</div> <div>Flow a (—) outside, b (---) within the measuring range.</div> <div></div> <div>A0001273</div> <div><div>■ STANDARD</div><div>a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output. A fault message is generated (# 351-354, current range) and the current output responds in accordance with the parameter settings in the FAILSAFE MODE function (4006).</div><div>b (- -): The current output signal is proportional to the measured variable assigned.</div></div> <div></div> <div>A0001274</div> <div><div>■ SYMMETRY</div><div>This option is not available under these circumstances, because the 0_4 mA value and the 20 mA value have different signs.</div></div> <div><div>■ PULSATING FLOW</div><div>Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.</div></div> <div></div> <div>A0001275</div>
<b>TIME CONSTANT (4005)</b>	<div>Use this function to enter a time constant defining how the current output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</div> <div><b>User input:</b> Fixed point number 0.01 to 100.00 s</div> <div><b>Factory setting:</b> 3.00 s</div>


<div>Functional description</div> <div>OUTPUTS → CURRENT OUTPUT 1 → CONFIGURATION</div> <div>(only with PROFIBUS DP)</div>	
<div>FAILSAFE MODE</div> <div>(4006)</div>	<div>For safety reasons it is advisable to ensure that the current output assumes a predefined state in the event of a fault. The setting you select here affects only the current output. It has no effect on other outputs and the display (e.g. totalizers).</div> <div>Options:</div> <div>MIN. CURRENT</div> <div>The current output adopts the value of the lower signal on alarm level (as defined in the CURRENT SPAN function (4001) on Page 38).</div> <div>MAX. CURRENT</div> <div>The current output adopts the value of the upper signal on alarm level (as defined in the CURRENT SPAN function (4001) on Page 38).</div> <div>HOLD VALUE (not recommended)</div> <div>Measuring value output is based on the last measuring value saved before the error occurred .</div> <div>ACTUAL VALUE</div> <div>Measured value output is based on the current flow measurement.</div> <div>The fault is ignored.</div> <div>Factory setting:</div> <div>MIN. CURRENT</div>

6.1.2 Function group OPERATION



Functional description	
OUTPUTS → CURRENT OUTPUT 1 → OPERATION (only with PROFIBUS DP)	
ACTUAL CURRENT (4040)	<p>Use this function to view the computed actual value of the output current.</p> <p><b>Display:</b> 0.00 to 25.00 mA</p>
SIMULATION CURR. (4041)	<p>Use this function to activate simulation of the current output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The "SIMULATION CURRENT OUTPUT" message indicates that simulation is active.</li><li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li></ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
VAL. SIM. CURR. (4042)	<p> <b>Note!</b> The function is not visible unless the SIMULATION CURR. function (4041) is active (= ON).</p> <p>Use this function to define a freely selectable value (e.g. 12 mA) to be output at the current output. This value is used to test downstream devices and the measuring device itself.</p> <p><b>User input:</b> 0.00 to 25.00 mA</p> <p><b>Factory setting:</b> 0.00 mA</p> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>


6.1.3      **Function group INFORMATION**

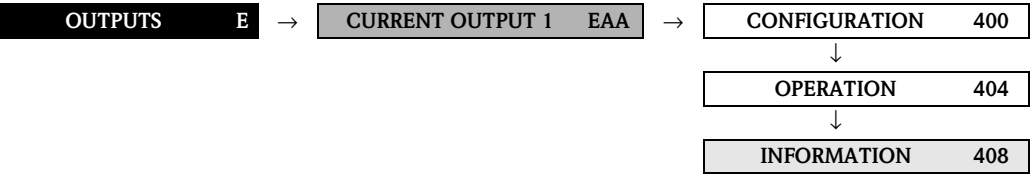



Functional description	
OUTPUTS → CURRENT OUTPUT 1 → INFORMATION (only with PROFIBUS DP)	
TERMINAL NO. (4080)	<div>Use this function to display the numbers of the terminals (in the connection compartment) which are used by the current output.</div> <div>Display: 20 (+) / 21 (-)</div>





## 6.2 Group PULSE/FREQUENCY OUTPUT 1




### 6.2.1 Function group CONFIGURATION







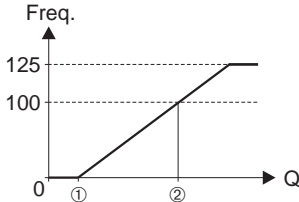
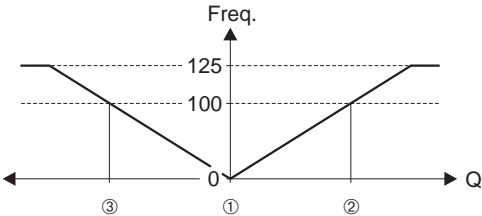

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (GENERAL/ FREQUENCY) (only with PROFIBUS DP)	
OPERATION MODE (4200)	<p>Use this function to configure the output as a pulse output, frequency output or status output. The functions available in this function group vary, depending on which option you select here.</p> <p><b>Options:</b> PULSE FREQUENCY STATUS</p> <p><b>Factory setting:</b> PULSE</p>
ASSIGN FREQUENCY (4201)	<p><b>Options:</b> OFF VOLUME FLOW AVERAGE SOUND VELOC. AVG FLOW VELOCITY AVERAGE</p> <p><b>Factory setting:</b> VOLUME FLOW AVERAGE</p> <p> <b>Note!</b> If you select OFF, the only function shown in the CONFIGURATION function group (400) is the function ASSIGN CURRENT OUTPUT (4000).</p>
START VALUE FREQ. (4202)	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to define an initial frequency for the frequency output. You define the associated measuring value of the measuring range in the VALUE-f LOW function (4204) on Page 49.</p> <p><b>User input:</b> 5-digit fixed-point number: 0 to 10000 Hz</p> <p><b>Factory setting:</b> 0 Hz</p> <p>Example:</p> <ul style="list-style-type: none"><li>■ VALUE- f LOW = 0 l/h, initial frequency = 0 Hz: i.e. a frequency of 0 Hz is output at a flow of 0 l/h.</li><li>■ VALUE-f LOW = 1 l/h, initial frequency = 10 Hz: i.e. a frequency of 10 Hz is output at a flow of 1 l/h.</li></ul>



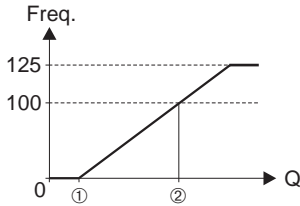



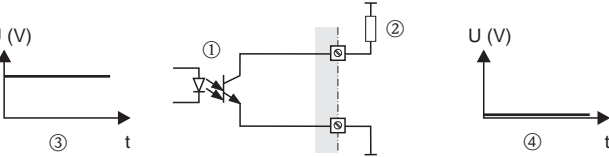

<b>Functional description</b> OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
<b>END VALUE FREQ. (4203)</b>	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to define an end frequency for the frequency output. You define the associated measuring value of the measuring range in the VALUE-f HIGH function (4205) on Page 50.</p> <p><b>User input:</b> 5-digit fixed point number 2 to 10000 Hz</p> <p><b>Factory setting:</b> 10000 Hz</p> <p>Example:</p> <ul style="list-style-type: none"> <li>■ VALUE-f HIGH = 1000 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 1000 l/h, a frequency of 1000 Hz is output.</li> <li>■ VALUE-f HIGH = 3600 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 3600 l/h, a frequency of 1000 Hz is output.</li> </ul> <p> <b>Note!</b> In the FREQUENCY operating mode the output signal is symmetrical (on/off ratio = 1:1). At low frequencies the pulse duration is limited to a maximum of 2 seconds, i.e. the on/off ratio is no longer symmetrical.</p>
<b>VALUE-f LOW (4204)</b>	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to assign a value to the start value frequency (4202). The value can be higher or lower than the value assigned to the VALUE-f HIGH. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE-f LOW and VALUE-f HIGH values.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 0 [unit]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ For a graphic illustration of the VALUE-f LOW (see the VALUE-f HIGH function).</li> <li>■ The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) → Page 13.</li> </ul>

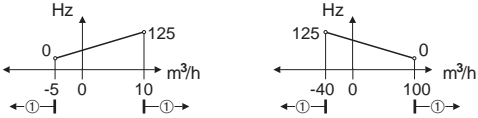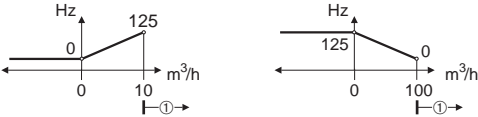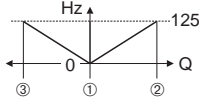Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
VALUE-f HIGH (4205)	<div><div><p> <b>Note!</b></p><p>This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p><p>Use this function to assign a value to the end value frequency (4203). The value can be higher or lower than the value assigned to the VALUE-f LOW. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE-f LOW and VALUE-f HIGH values.</p><p><b>User input:</b> 5-digit floating-point number</p><p><b>Factory setting:</b> Depends on the setting in the ASSIGN FREQUENCY function (4201): volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value.</p><p> <b>Note!</b></p><p>Note that values with different signs cannot be entered for VALUE-f LOW and VALUE-f HIGH if SYMMETRY is the setting selected for the MEASURING MODE function (4206). In this case the message "INPUT RANGE EXCEEDED" appears on the display.</p><div></div><p>① = Value-f low ② = Value-f high</p></div><div><p>(continued on next page)</p></div></div>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
VALUE-f HIGH (Continued)	<p><b>Parameter setting example 1:</b></p> <ol style="list-style-type: none"><li>VALUE-f LOW (4204) = not equal to zero flow (e.g. -5 m<sup>3</sup>/h) VALUE-f HIGH (4205) = not equal to zero flow (e.g. 10 m<sup>3</sup>/h) or</li><li>VALUE-f LOW (4204) = not equal to zero flow (e.g. 100 m<sup>3</sup>/h) VALUE-f HIGH (4205) = not equal to zero flow (e.g. -40 m<sup>3</sup>/h) and MEASURING MODE (4004) = STANDARD</li></ol> <p>When you enter the values for VALUE-f LOW and VALUE-f HIGH the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see Fig.), a fault or notice message is generated (#355-358, frequency range) and the frequency output responds in accordance with the parameter settings in the FAILSAFE MODE function (4209)..</p> <div><div>a0001276</div></div> <p><b>Parameter setting example 2:</b></p> <ol style="list-style-type: none"><li>VALUE-f LOW (4204) = not equal to zero flow (e.g. 0 m<sup>3</sup>/h) VALUE-f HIGH (4205) = not equal to zero flow (e.g. 10 m<sup>3</sup>/h) or</li><li>VALUE-f LOW (4204) = not equal to zero flow (e.g. 100 m<sup>3</sup>/h) VALUE-f HIGH (4205) = not equal to zero flow (e.g. 0 m<sup>3</sup>/h) and MEASURING MODE (4004) = STANDARD</li></ol> <p>When you enter the values for VALUE-f LOW and VALUE-f HIGH the working range of the measuring device is defined. In doing so, one of the two values is parameterized as zero flow (e.g. 0 m<sup>3</sup>/h). If the effective flow drops below or exceeds the value parameterized as the zero flow, no fault/notice message is generated and the frequency output retains its value. If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#355-358, frequency range) and the frequency output responds in accordance with the parameters set in the FAILSAFE MODE function (4209).</p> <div><div>A0001277</div></div> <p>Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed.</p> <p><b>Parameter setting example 3:</b> MEASURING MODE (4206) = SYMMETRY</p> <p>The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE-f LOW ① and VALUE-f HIGH ② must have the same sign (+ or -). The "VALUE-f HIGH" ③ (e.g. backflow) corresponds to the mirrored VALUE-f HIGH ② (e.g. flow).</p> <div><div>A0001278</div></div> <p>ASSIGN RELAY (4700) = FLOW DIRECTION With this setting e.g. the flow direction output via a switching contact can be made.</p> <p><b>Parameter setting example 4:</b> MEASURING MODE (4004) = PULSATING FLOW → Page 42 ff.</p>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
MEASURING MODE (4206)	<div><p> <b>Note!</b></p><p>This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p><p>Use this function to define the measuring mode for the frequency output.</p><p><b>Options:</b> STANDARD SYMMETRY PULSATING FLOW</p><p><b>Factory setting</b> STANDARD</p><p><b>Description of the individual options:</b></p><div><p>■ <b>STANDARD</b></p><p>The frequency output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the VALUE-f LOW ① and the VALUE-f HIGH ②) are not taken into account for signal output.</p><ul style="list-style-type: none"><li>– If one of the values is defined as equal to the zero flow (e.g. VALUE-f LOW = 0 m<sup>3</sup>/h) no message is given if this value is exceeded or not achieved and the frequency output retains its value (0 Hz in the example). If the other value is exceeded or not achieved, the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears and the frequency output responds in accordance with the parameter setting in the FAILSAFE MODE function (4209).</li><li>– If both values are defined as not equal to the zero flow (for example VALUE-f LOW = -5 m<sup>3</sup>/h; VALUE-f HIGH = 10 m<sup>3</sup>/h), the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the frequency output responds in accordance with the parameter setting in the FAILSAFE MODE function (4209).</li></ul></div><div></div><div><p>A0001279</p></div><div><p>■ <b>SYMMETRY</b></p><p>The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE-f LOW ① and VALUE-f HIGH ② must have the same sign (+ or -). The VALUE-f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE-f HIGH ② (e.g. flow).</p></div><div></div><div><p>A0001280</p></div><div><p> <b>Note!</b></p><ul style="list-style-type: none"><li>■ The direction of flow can be output via the configurable relay or status outputs.</li><li>■ SYMMETRY cannot be selected unless the values in the VALUE-f LOW (4204) and VALUE-f HIGH (4205) functions have the same sign or one of the values is zero. If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.</li></ul></div><div><p>(continued on next page)</p></div></div>

<div>Functional description</div> <div>OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)</div>	
<div>MEASURING MODE</div> <div>(Continued)</div>	<div><div>■ PULSATING FLOW</div><div>If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the data cannot be buffered within approx. 60 seconds, a fault or notice message appears.</div><div>Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.</div></div>

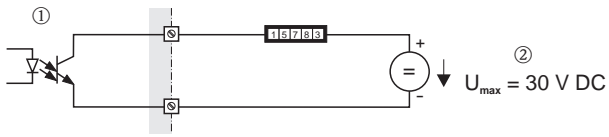Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
OUTPUT SIGNAL (4207)	<div><p> <b>Note!</b> Function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p><p>For selecting the output configuration of the frequency output.</p><p><b>Options:</b> PASSIVE - POSITIVE PASSIVE - NEGATIVE ACTIVE - POSITIVE ACTIVE - NEGATIVE</p><p><b>Factory setting:</b> PASSIVE - POSITIVE</p><p><b>Explanation</b></p><ul style="list-style-type: none"><li>■ PASSIVE = power is supplied to the frequency output by means of an external power supply.</li><li>■ ACTIVE = power is supplied to the frequency output by means of the device-internal power supply.</li></ul><p>Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behavior (at zero flow) of the frequency output. The internal transistor is activated as follows:</p><ul style="list-style-type: none"><li>■ If POSITIVE is selected, the internal transistor is activated with a <b>positive</b> signal level.</li><li>■ If NEGATIVE is selected, the internal transistor is activated with a <b>negative</b> signal level (0 V).</li></ul><p> <b>Note!</b> With the passive output configuration, the output signal levels of the frequency output depend on the external circuit (see examples).</p><p><b>Example for passive output circuit (PASSIVE)</b> If PASSIVE is selected, the frequency output is configured as an open collector.</p><div></div><p>① = Open Collector n = External power supply</p><p> <b>Note!</b> For continuous currents up to 25 mA (<math>I_{max} = 250 \text{ mA} / 20 \text{ ms}</math>).</p><p><b>Example for output configuration PASSIVE-POSITIVE:</b> Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p><div></div><p>① = Open Collector n = Pull-Up-Resistance</p><p>③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p><p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</p><div></div><p>(continued on next page)</p></div>

## Functional description

OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY)  
(only with PROFIBUS DP)


OUTPUT SIGNAL

(Continued)

**Example for output configuration PASSIVE-POSITIVE:**

Output configuration with an external pull-down resistance.

In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.

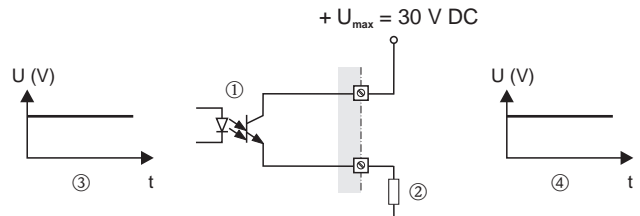

A0004689


① = Open Collector

$$n = \text{Pull-Down-Resistance}$$

③ = Transistor activation in "POSITIVE" quiescent state (at zero flow)

④ = Output signal level in quiescent state (at zero flow)

In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.

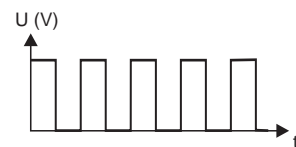


A0001981

**Example for output configuration PASSIVE-NEGATIVE:**

Output configuration with an external pull-up resistance.

In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.

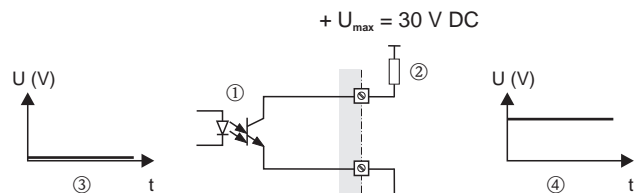

A0004690


① = Open Collector

$$n = \text{Pull-Up-Resistance}$$

③ = Transistor activation in "NEGATIVE" quiescent state (at zero flow)



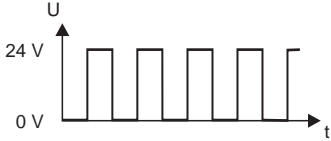
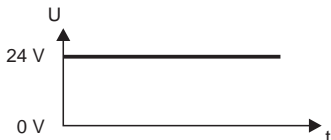
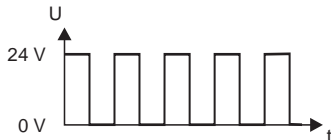
④ = Output signal level in quiescent state (at zero flow)

In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.

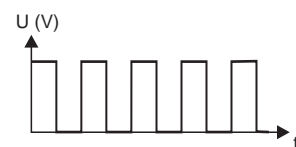





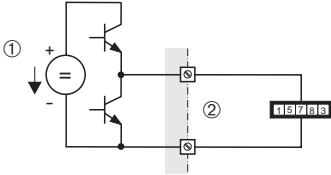


A0001981

(continued on next page)



Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
OUTPUT SIGNAL (Continued)	<div>Example for active output circuit (ACTIVE): With an active circuit, the internal power supply is 24 V. The frequency output is short-circuit proof.</div> <div></div> <div>A0004691</div> <div>① = 24 V DC internal power supply ② = Short-circuit proof output</div> <div>The signal levels are to be seen as analogous to the passive circuit.</div> <div>The following applies for the output configuration <b>ACTIVE-POSITIVE</b>: In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</div> <div></div> <div>A0004694</div> <div>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</div> <div></div> <div>A0004692</div> <div>The following applies for the output configuration <b>ACTIVE-NEGATIVE</b>: In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</div> <div></div> <div>A0006493</div> <div>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</div> <div></div> <div>A0004710</div>










<b>Functional description</b> OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (FREQUENCY) (only with PROFIBUS DP)	
<b>TIME CONSTANT (4208)</b>	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to enter a time constant defining how the frequency output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p><b>User input:</b> Fixed point number 0.00 to 100.00 s</p> <p><b>Factory setting:</b> 0.00 s</p>
<b>FAILSAFE MODE (4209)</b>	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>For safety reasons it is advisable to ensure that the frequency output assumes a predefined state in the event of a fault. The setting you select here affects only the frequency output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p><b>Options:</b>            FALLBACK VALUE            Output is 0 Hz.             FAILSAFE LEVEL            The frequency specified in the FAILSAFE VALUE function (4211) is output.             HOLD VALUE            Measuring value output is based on the last measuring value saved before the error occurred.             ACTUAL VALUE            Measuring value output is based on the current flow measurement (fault is ignored).</p> <p><b>Factory setting:</b> FALLBACK VALUE</p>
<b>FAILSAFE VALUE (4211)</b>	<p> <b>Note!</b> This function is not available unless FREQUENCY was selected in the OPERATION MODE function (4200) and FAILSAFE LEVEL was selected in the FAILSAFE MODE function (4209).</p> <p>Use this function to define the frequency that the measuring device outputs in the event of an error.</p> <p><b>User input:</b> max. 5-digit number: 0 to 12500 Hz</p> <p><b>Factory setting:</b> 12500 Hz</p>



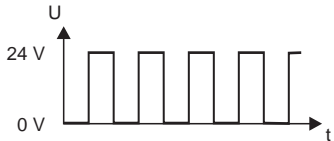
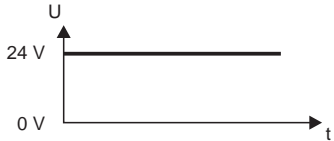
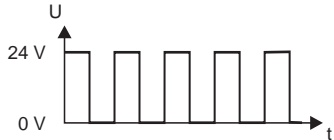
<div>Functional description</div> <div>OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)</div>	
<div>ASSIGN PULSE (4221)</div>	<div> <b>Note!</b> This function is not available unless the PULSE setting was selected in the OPERATION MODE function (4200).</div> <div>Use this function to assign a measured variable to the pulse output.</div> <div><b>Options:</b> OFF VOLUME FLOW AVERAGE</div> <div><b>Factory setting:</b> VOLUME FLOW AVERAGE</div> <div> <b>Note!</b> If you select OFF, the only function shown in the CONFIGURATION function group is the ASSIGN PULSE function (4221).</div>
<div>PULSE VALUE (4222)</div>	<div> <b>Note!</b> This function is not available unless the PULSE setting was selected in the OPERATION MODE function (4200).</div> <div>Use this function to define the flow at which a pulse is triggered. These pulses can be totaled by an external totalizer and in this way the total flow since measuring commenced can be registered.</div> <div><b>User input:</b> 5-digit floating-point number, [unit]</div> <div><b>Factory setting:</b> 1 l/pulse</div> <div> <b>Note!</b> The appropriate unit is taken from the UNIT VOLUME function (0403) → Page 14.</div>


Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)	
PULSE WIDTH (4223)	<div><div><div>Note!</div><div>This function is not available unless the PULSE setting was selected in the OPERATION MODE function (4200).</div><div>Use this function to enter the pulse width of the output pulse.</div><div>User input: 0.05 to 2000 ms</div><div>Factory setting: 100 ms</div><div>Pulse output is <b>always</b> with the pulse width (B) entered in this function. The pauses (P) between the individual pulses are automatically configured. However, they must at least correspond to the pulse width (<math>B = P</math>).</div><div><div><div>transistor</div><div><div>conducting</div><div>nonconducting</div></div><div><div><div>B</div><div>P</div></div><div><div><math>B &lt; P</math></div><div>t</div></div></div><div><div>transistor</div><div><div>conducting</div><div>nonconducting</div></div><div><div><div>B</div><div>P</div></div><div><div><math>B = P</math></div><div>t</div></div></div></div><div>A0001233-EN</div><div><div>B = Pulse width entered (the illustration applies to positive pulses)</div><div>P= Intervals between the individual pulses</div></div><div><div>Note!</div><div>When entering the pulse width, select a value that can still be processed by an external totalizer (e.g. mechanical totalizer, PLC, etc.) .</div></div><div><div>Caution!</div><div>If the pulse number or frequency resulting from the pulse value entered, (see the PULSE VALUE function (4222) on Page 58) and from the current flow is too large to maintain the pulse width selected (the interval P is smaller than the pulse width B entered), a system error message (# 359–362, pulse memory) is generated after buffering/balancing has occurred.</div></div></div></div></div></div>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)	
MEASURING MODE (4225)	<div> <b>Note!</b> This function is not available unless the PULSE setting was selected in the OPERATION MODE function (4200).</div> <p>Use this function to define the measuring mode for the pulse output.</p> <p><b>Options:</b></p> <p>STANDARD Only positive flow components are totaled. Negative components are not taken into account.</p> <p>SYMMETRY Positive and negative flow components are taken into account.</p> <div> <b>Note!</b> The direction of flow can be output via the relay output.</div> <p>PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, the positive and negative flow components are totaled, with the signs taken into account (e.g. -10 l and +25 l = 15 l). Flow components outside the maximum pulse number per second (value/width) are buffered, balanced and output after a maximum delay of 60 seconds. If the data cannot be buffered within approx. 60 seconds, a fault or notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the pulse output.</p> <p>STANDARD REVERSE Only negative flow components are totaled. Positive components are not taken into account.</p> <p><b>Factory setting:</b> STANDARD</p>

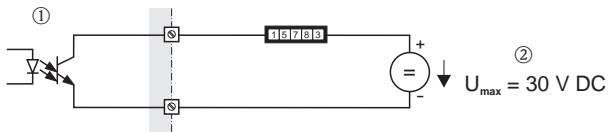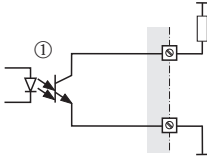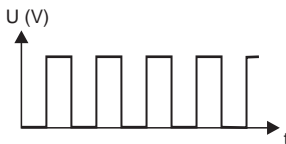

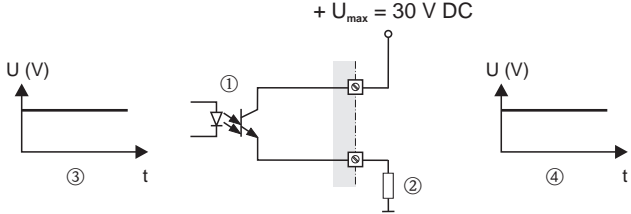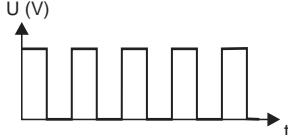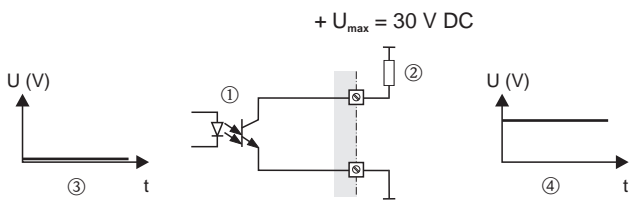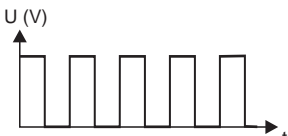

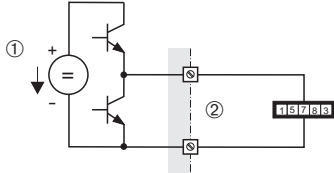
Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)	
OUTPUT SIGNAL (4226)	<div><div>Note!</div><div>Function is not available unless the PULSE setting was selected in the OPERATION MODE function (4200).</div><div>For selecting the output configuration of the pulse output.</div><div>Options: PASSIVE - POSITIVE PASSIVE - NEGATIVE ACTIVE - POSITIVE ACTIVE - NEGATIVE</div><div>Factory setting: PASSIVE - POSITIVE</div><div>Explanation</div><div><div>PASSIVE = power is supplied to the pulse output by means of an external power supply.</div><div>ACTIVE = power is supplied to the pulse output by means of the device-internal power supply.</div></div><div>Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behavior (at zero flow) of the pulse output.</div><div>The internal transistor is activated as follows:</div><div><div>If POSITIVE is selected, the internal transistor is activated with a <b>positive</b> signal level.</div><div>If NEGATIVE is selected, the internal transistor is activated with a <b>negative</b> signal level (0 V).</div></div><div><div>Note!</div><div>With the passive output configuration, the output signal levels of the pulse output depend on the external circuit (see examples).</div></div><div>Example for passive output circuit (PASSIVE)</div><div>If PASSIVE is selected, the pulse output is configured as an open collector.</div><div></div><div>A0001225</div><div><div>① = Open Collector</div><div>n = External power supply</div></div><div><div>Note!</div><div>For continuous currents up to 25 mA (<math>I_{\text{max}} = 250 \text{ mA} / 20 \text{ ms}</math>).</div></div><div>Example for output configuration PASSIVE-POSITIVE:</div><div>Output configuration with an external pull-up resistance.</div><div>In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</div><div><div><div><div><div>U (V)</div><div>③</div><div>t</div></div><div></div><div><div><div>U (V)</div><div>④</div><div>t</div></div></div></div><div>A0004687</div><div><div>① = Open Collector</div><div>n = Pull-Up-Resistance</div><div>③ = Transistor activation in "POSITIVE" quiescent state (at zero flow)</div><div>④ = Output signal level in quiescent state (at zero flow)</div></div><div>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</div><div></div><div>A0001975</div><div>(continued on next page)</div></div></div></div>





Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)	
OUTPUT SIGNAL (Continued)	<div>Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.</div> <div></div> <div>A0004689</div> <div>① = Open Collector n = Pull-Down-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</div> <div>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</div> <div></div> <div>A0001981</div> <div>Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</div> <div></div> <div>A0004690</div> <div>① = Open Collector n = Pull-Up-Resistance ③ = Transistor activation in "NEGATIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</div> <div>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</div> <div></div> <div>A0001981</div> <div>(continued on next page)</div>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)	
OUTPUT SIGNAL (Continued)	<div><div><div>Example for active output circuit (ACTIVE):</div><div>With an active circuit, the internal power supply is 24 V. The pulse output is short-circuit proof.</div><div></div><div><div>① = 24 V DC internal power supply</div><div>② = Short-circuit proof output</div></div><div>The signal levels are to be seen as analogous to the passive circuit.</div><div><div>The following applies for the output configuration <b>ACTIVE-POSITIVE</b>:</div><div>In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</div><div></div><div><div>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</div><div></div><div><div>The following applies for the output configuration <b>ACTIVE-NEGATIVE</b>:</div><div>In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</div><div></div><div><div>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</div><div></div></div></div></div></div></div></div>


<div>Functional description</div> <div>OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (PULSE) (only with PROFIBUS DP)</div>	
<div>FAILSAFE MODE (4227)</div>	<div><div> Note!</div><div>This function is not available unless the PULSE setting was selected in the OPERATION MODE function (4200).</div><div>For safety reasons it is advisable to ensure that the pulse output assumes a predefined state in the event of a fault. The setting you select here affects only the pulse output. It has no effect on other outputs and the display (e.g. totalizers).</div><div><b>Options:</b> FALLBACK VALUE Output is 0 pulse.  ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored.</div><div><b>Factory setting:</b> FALLBACK VALUE</div></div>




<b>Functional description</b> OUTPUTS→ PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (STATUS) (only with PROFIBUS DP)	
<b>ASSIGN STATUS (4241)</b>	<p> <b>Note!</b> This function is not available unless the STATUS setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to assign a switching function to the status output.</p> <p><b>Options:</b>            OFF            ON (operation)            NOTICE MESSAGE            FAULT MESSAGE            FAULT MESSAGE &amp; NOTICE MESSAGE            LIMIT TOTALIZER (1 to 3)            FLOW DIRECTION AVERAGE            LIMIT VOLUME FLOW AVERAGE            LIMIT SOUND VELOCITY AVERAGE            LIMIT AVERAGE FLOW VELOCITY</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The following settings/entries must be made to ensure correct and immediate signal output:               <ul style="list-style-type: none"> <li>– Function SWITCH-ON DELAY (4243) = 0 ms → Page 66</li> <li>– Function SWITCH-OFF DELAY (4245) = 0 ms → Page 66</li> <li>– Function TIME CONSTANT (4247) = 0 ms → Page 68</li> </ul> </li> </ul> <p><b>Factory setting:</b>            FAULT MESSAGE</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The behavior of the status output is a normally closed behavior, in other words the output is closed (transistor conductive) when normal, error-free measuring is in progress.</li> <li>■ If you select OFF, the only function shown in the CONFIGURATION function group is the ASSIGN STATUS function (4241).</li> </ul>
<b>ON-VALUE (4242)</b>	<p> <b>Note!</b> This function is not available unless STATUS was selected in the OPERATION MODE function (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN STATUS function (4241).</p> <p>Use this function to assign a value to the switch-on point (activation of the status output). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow).</p> <p><b>User input:</b>            5-digit floating-point number, [unit]</p> <p><b>Factory setting:</b>            0 [unit]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) .</li> <li>■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.</li> </ul>

<b>Functional description</b> OUTPUTS→ PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (STATUS) (only with PROFIBUS DP)	
<b>SWITCH-ON DELAY (4243)</b>	<p> <b>Note!</b> This function is not available unless STATUS was selected in the OPERATION MODE function (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN STATUS function (4241).</p> <p>Use this function to specify a delay (0 to 100 seconds) for switching on the status output (i.e. signal changes from 0 to 1). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch-on condition has been valid over the delay time.</p> <p><b>User input:</b> fixed point number: 0.0 to 100.0 s</p> <p><b>Factory setting:</b> 0.0 s</p>
<b>OFF-VALUE (4244)</b>	<p> <b>Note!</b> This function is not available unless STATUS was selected in the OPERATION MODE function (4200) and LIMIT VALUE was selected in the ASSIGN STATUS function (4241).</p> <p>Use this function to assign a value to the switch-off point (deactivation of the status output). The value can be equal to, greater than or less than the switch-on point. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow).</p> <p><b>User input:</b> 5-digit floating-point number, [unit]</p> <p><b>Factory setting:</b> 0 [unit]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) .</li> <li>■ If SYMMETRY is the setting selected in the MEASURING MODE function (4246) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.</li> </ul>
<b>SWITCH-OFF DELAY (4245)</b>	<p> <b>Note!</b> This function is not available unless the STATUS setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to define a delay (0 to 100 seconds) for switching off the status output (i.e. signal changes from 1 to 0). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time.</p> <p><b>User input:</b> Fixed point number 0.0 to 100.0 s</p> <p><b>Factory setting:</b> 0.0 s</p>







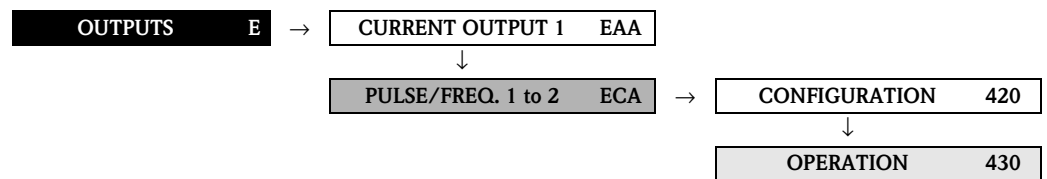




Functional description	
OUTPUTS→ PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (STATUS) (only with PROFIBUS DP)	
MEASURING MODE (4246)	<div><div><div>Note!</div><div><p>This function is not available unless the STATUS setting was selected in the OPERATION MODE function (4200) and the status output was assigned a limit value.</p><p>Use this function to define the measuring mode for the status output.</p><p><b>Options:</b> STANDARD The status output signal switches at the defined switch points.</p><p>SYMMETRY The status output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the status output signal switches as soon as the value is reached in the negative direction (negative sign), see illustration.</p><p><b>Factory setting:</b> STANDARD</p><p>Example for the SYMMETRY measuring mode: On-value: Q = 4, off-value: Q = 10 ① = Status output switched on (conductive) ② = Status output switched off (not conductive)</p><div></div></div></div><div><div><div>Note!</div><div><ul style="list-style-type: none"><li>■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4242) and OFF-VALUE (4244) functions have the same sign or one of the values is zero.</li><li>■ If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.</li></ul></div></div></div></div>







Functional description	
OUTPUTS→ PULSE/FREQUENCY OUTPUT 1 → CONFIGURATION (STATUS) (only with PROFIBUS DP)	
TIME CONSTANT (4247)	<div> <b>Note!</b> This function is not available unless the STATUS setting was selected in the OPERATION MODE function (4200).</div> <div>Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the status output changing state continuously in response to fluctuations in flow.</div> <div><b>User input:</b> Fixed point number 0.00 to 100.00 s</div> <div><b>Factory setting:</b> 0.00 s</div>

## 6.2.2 Function group OPERATION




<b>Functional description</b> OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → OPERATION (FREQUENCY) (only with PROFIBUS DP)	
<b>ACTUAL FREQUENCY (4301)</b>	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to view the computed value of the output frequency.</p> <p><b>Display:</b> 0 to 12500 Hz</p>
<b>SIMULATION FREQUENCY (4302)</b>	<p> <b>Note!</b> This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to activate simulation of the frequency output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The "SIMULATION FREQUENCY OUTPUT" message indicates that simulation is active.</li> <li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
<b>VALUE SIMULATION FREQUENCY (4303)</b>	<p> <b>Note!</b> This function is not available unless FREQUENCY was selected in the OPERATION MODE function (4200) and the SIMULATION FREQUENCY function (4302) is active (= ON).</p> <p>Use this function to define a selectable frequency value (e.g. 500 Hz) to be output at the frequency output. This value is used to test downstream devices and the measuring device itself.</p> <p><b>User input:</b> 0 to 12500 Hz</p> <p><b>Factory setting:</b> 0 Hz</p> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

<b>Functional description</b> OUTPUTS→ PULSE/FREQUENCY OUTPUT 1 → OPERATION (PULSE) (only with PROFIBUS DP)	
<b>SIMULATION PULSE (4322)</b>	<p> <b>Note!</b> This function is not available unless the PULSE setting was selected in the OPERATION MODE function.</p> <p>Use this function to activate simulation of the pulse output.</p> <p><b>Options:</b> OFF COUNTDOWN The pulses specified in the VALUE SIMULATION PULSE function are output.</p> <p>CONTINUOUSLY Pulses are continuously output with the pulse width specified in the PULSE WIDTH function. Simulation is started once the CONTINUOUSLY option is confirmed with the  key.</p> <p> <b>Note!</b> Simulation is started by confirming the CONTINUOUSLY option with the  key. The simulation can be switched off again via the SIMULATION PULSE function.</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The notice message #631 “SIM. PULSE” indicates that simulation is active.</li> <li>■ The on/off ratio is 1:1 for both types of simulation.</li> <li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
<b>VALUE SIMULATION PULSE (4323)</b>	<p> <b>Note!</b> This function is not available unless the COUNTDOWN setting was selected in the SIMULATION PULSE function.</p> <p>Use this function to specify the number of pulses (e.g. 50) which are output during the simulation. This value is used to test downstream devices and the measuring device itself. The pulses are output with the pulse width specified in the PULSE WIDTH function. The on/off ratio is 1:1.</p> <p>Simulation is started once the specified value is confirmed with the  key. The display remains at 0 if the specified pulses have been output.</p> <p><b>User input:</b> 0...10 000</p> <p><b>Factory setting:</b> 0</p> <p> <b>Note!</b> Simulation is started by confirming the simulation value with the  key. The simulation can be switched off again via the SIMULATION PULSE function.</p> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

<b>Functional description</b> OUTPUTS→ PULSE/FREQUENCY OUTPUT 1 → OPERATION (PULSE) (only with PROFIBUS DP)	
<b>ACTUAL STATUS (4341)</b>	<p> <b>Note!</b> This function is not available unless the STATUS setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to check the current status of the status output.</p> <p><b>Display:</b> NOT CONDUCTIVE CONDUCTIVE</p>
<b>SIM. SWITCH POINT (4343)</b>	<p> <b>Note!</b> This function is not available unless the STATUS setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to activate simulation of the status output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The "SIMULATION SWITCH POINT" message indicates that simulation is active.</li> <li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
<b>VALUE SIM. SWITCH POINT (4343)</b>	<p> <b>Note!</b> This function is not available unless STATUS was selected in the OPERATION MODE function (4200) and the SIMULATION SWITCH POINT function (4342) is active (= ON).</p> <p>Use this function to define the switching response of the status output during the simulation. This value is used to test downstream devices and the measuring device itself.</p> <p><b>Options:</b> NOT CONDUCTIVE CONDUCTIVE</p> <p><b>Factory setting:</b> NOT CONDUCTIVE</p> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

6.2.3 Function group INFORMATION

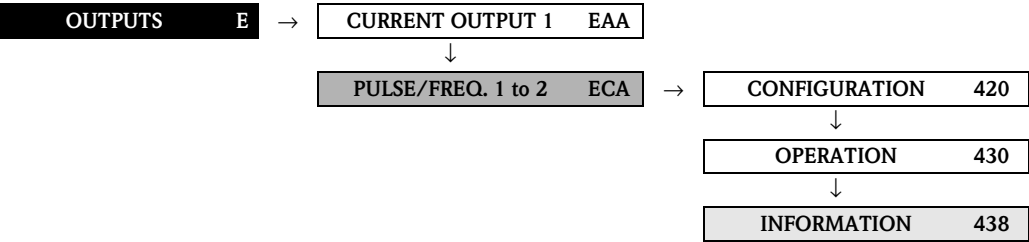


Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT 1 → INFORMATION (only with PROFIBUS DP)	
TERMINAL NO. (4380)	<p>Use this function to display the numbers of the terminals (in the connection compartment) which are used by the pulse/frequency output.</p> <p><b>Display:</b> 22 (+) / 23 (-)</p>





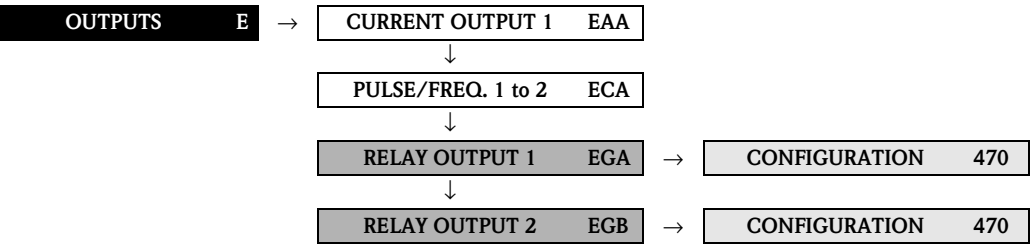


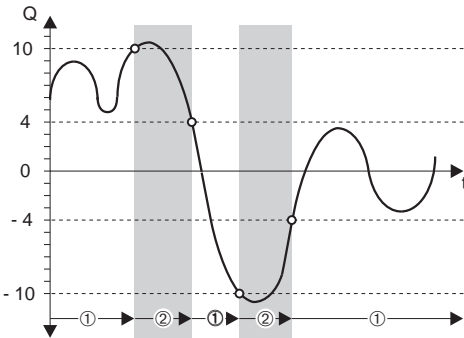
6.3 Group RELAY OUTPUT (1 to 2)

6.3.1 Function group CONFIGURATION




Functional description	
OUTPUTS → RELAY OUTPUT (1 to 2) → CONFIGURATION (only with PROFIBUS DP)	
ASSIGN RELAY (4700)	<p>Use this function to assign a switching function to the relay output.</p> <p><b>Options:</b> OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE &amp; NOTICE MESSAGE LIMIT TOTALIZER (1 to 3) FLOW DIRECTION AVERAGE LIMIT VOLUME FLOW AVERAGE LIMIT SOUND VELOCITY AVERAGE LIMIT AVERAGE FLOW VELOCITY</p> <p><b>Factory setting:</b> FAULT MESSAGE</p> <p> Note!</p> <ul style="list-style-type: none"><li>■ Pay particular attention to the illustrations and detailed information on the switching behavior of the relay output ( → Page 80).</li><li>■ We recommend you configure at least one relay output as the fault output and define the failsafe mode of the outputs.</li><li>■ In the standard configuration, relay output 1 is configured as a normally open contact and relay output 2 as a normally closed contact. The outputs can be reconfigured using a jumper on the relay module (see Operating Instructions for Prosonic 93C PROFIBUS DP/PA, BA089 D).</li><li>■ If you select OFF, this function (4700) is the only function shown in the CONFIGURATION function group.</li></ul>



<b>Functional description</b> OUTPUTS → RELAY OUTPUT (1 to 2) → CONFIGURATION (only with PROFIBUS DP)	
<b>ON-VALUE (4701)</b>	<p> <b>Note!</b> This function is not available unless LIMIT or FLOW DIRECTION was selected in the ASSIGN RELAY function (4700).</p> <p>Use this function to assign a value to the switch-on point (relay output pulls up). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow).</p> <p><b>User input:</b> 5-digit floating-point number, [unit]</p> <p><b>Factory setting:</b> 0 [unit]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) .</li> <li>■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.</li> </ul>
<b>SWITCH-ON DELAY (4702)</b>	<p> <b>Note!</b> This function is not available unless LIMIT or FLOW DIRECTION was selected in the ASSIGN RELAY function (4700).</p> <p>Use this function to define a delay (0 to 100 seconds) for pull-up (i.e. signal changes from 0 to 1) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time.</p> <p><b>User input:</b> Fixed point number 0.0 to 100.0 s</p> <p><b>Factory setting:</b> 0.0 s</p>
<b>OFF-VALUE (4703)</b>	<p> <b>Note!</b> This function is not available unless LIMIT was selected in the ASSIGN RELAY function (4700).</p> <p>Use this function to assign a value to the switch-off point (relay drops out). The value can be equal to, greater than or less than the switch-on point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow).</p> <p><b>User input:</b> 5-digit floating-point number, [unit]</p> <p><b>Factory setting:</b> 0 [unit]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) .</li> <li>■ If SYMMETRY is the setting selected in the MEASURING MODE function (4705) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.</li> </ul>



Functional description	
OUTPUTS → RELAY OUTPUT (1 to 2) → CONFIGURATION (only with PROFIBUS DP)	
SWITCH-OFF DELAY (4704)	<div><div><div>Note!</div><div>This function is not available unless LIMIT was selected in the ASSIGN RELAY function (4700).</div><div>Use this function to define a delay (0 to 100 seconds) for dropout (i.e. signal changes from 1 to 0) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time.</div><div>User input: Fixed point number 0.0 to 100.0 s</div><div>Factory setting: 0.0 s</div></div></div>
MEASURING MODE (4705)	<div><div><div>Note!</div><div>This function is not visible unless a limit value was assigned to the relay output.</div><div>Use this function to define the measuring mode for the relay output.</div><div>Options: STANDARD The relay output signal switches at the defined switch points.</div><div>SYMMETRY The relay output signal switches at the defined switching points, irrespective of the sign. If you define a switch point with a positive sign, the relay output switches as soon as the value is reached in the negative direction (negative sign), (see illustration).</div><div>Factory setting: STANDARD</div><div>Example for the SYMMETRY measuring mode: Switch-on point Q = 4 Switch-off point Q = 10 ① = Relay energized ② = Relay de-energized</div><div></div></div><div><div>Note!</div><div><div>■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4701) and OFF-VALUE (4703) functions have the same sign or one of the values is zero.</div><div>■ If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.</div></div></div></div>
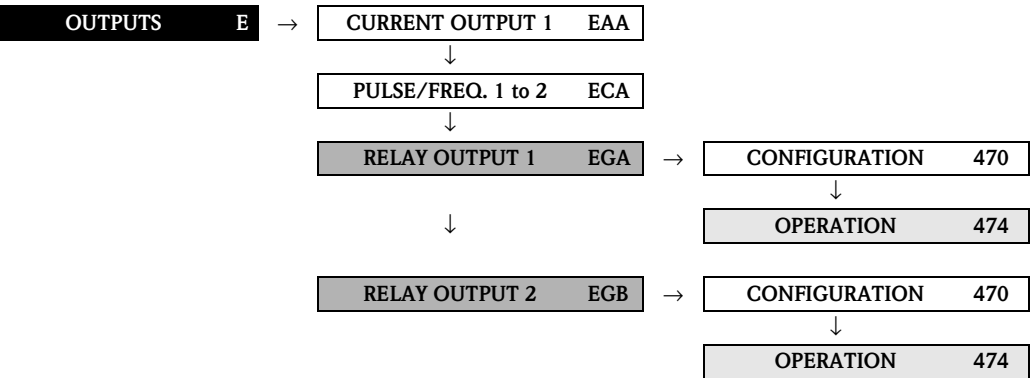
<div>Functional description</div> <div>OUTPUTS → RELAY OUTPUT (1 to 2) → CONFIGURATION</div> <div>(only with PROFIBUS DP)</div>	
<div>TIME CONSTANT</div> <div>(4706)</div>	<div>Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</div> <div>Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated.</div> <div>The purpose of damping, therefore, is to prevent the relay output changing state continuously in response to fluctuations in flow.</div> <div>User input:</div> <div>Fixed point number 0.00 to 100.00 s</div> <div>Factory setting:</div> <div>0.00 s</div>


6.3.2 Function group OPERATION



Functional description	
OUTPUTS → RELAY OUTPUT (1 to 2) → OPERATION (only with PROFIBUS DP)	
ACTUAL STATUS RELAY OUTPUT (4740)	<p>Use this function to check the current status of the relay output.</p> <p>A jumper on the contact side defines the relay output as a normally open (NO or make) or normally closed (NC or break) contact, see the Operating Instructions for Prosonic 93C PROFIBUS DP/PA, BA089 D.</p> <p><b>Display:</b> BREAK CONTACT OPEN BREAK CONTACT CLOSED MAKE CONTACT OPEN MAKE CONTACT CLOSED</p>
SIM. SWITCH POINT (4741)	<p>Use this function to activate simulation of the relay output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The "SIMULATION RELAY" message indicates that simulation is active.</li><li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li></ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

<div>Functional description</div> <div>OUTPUTS → RELAY OUTPUT (1 to 2) → OPERATION</div> <div>(only with PROFIBUS DP)</div>	
<div>VALUE SIM. SWITCH POINT (4742)</div>	<div><div> Note!</div><div>The function is not visible unless the SIMULATION SWITCH POINT function (4741) is active (= ON).</div><div>Use this function to define the status of the relay output during the simulation. This value is used to test downstream devices and the measuring device itself. Depending on the relay configuration (as make or break contact) the following selections are available.</div><div><b>Options:</b></div><div>Relay output configured as normally open (make) contact: BREAK CONTACT OPEN BREAK CONTACT CLOSED</div><div>Relay output configured as normally closed (break) contact: MAKE CONTACT OPEN MAKE CONTACT CLOSED</div><div><div> Caution!</div><div>The setting is not saved in the event of a power failure.</div></div></div>

6.3.3 Function group INFORMATION

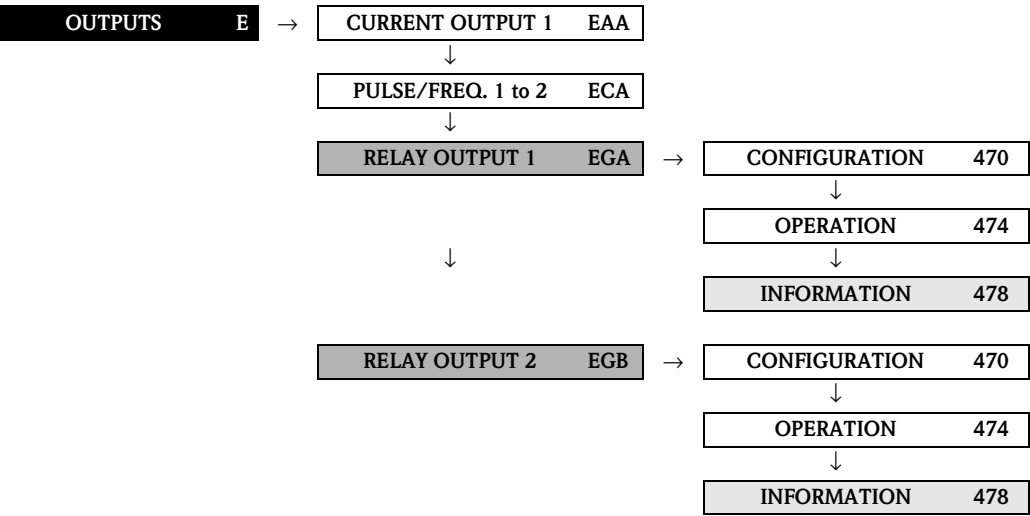

Functional description	
OUTPUTS → RELAY OUTPUT (1 to 2) → INFORMATION (only with PROFIBUS DP)	
TERMINAL NO. (4780)	<p>Use this function to display the numbers of the terminals (in the connection compartment) which are used by the relay output.</p> <p><b>Display:</b> 22 (+) / 23 (–) →RELAY OUTPUT 1 20 (+) / 21 (–) → RELAY OUTPUT 2</p>

### 6.3.4 Response of the relay output


#### General

If you have configured the relay output signal for "LIMIT VALUE" or "FLOW DIRECTION", you can define the requisite switch points in the ON-VALUE and OFF-VALUE functions. When the measured variable in question reaches one of these predefined values, the relay output switches as shown in the illustrations below.

#### Relay output configured for limit value

The relay or status output switches as soon as the measured variable undershoots or overshoots a defined switch point.


Application: Monitoring flow or process-related boundary conditions.

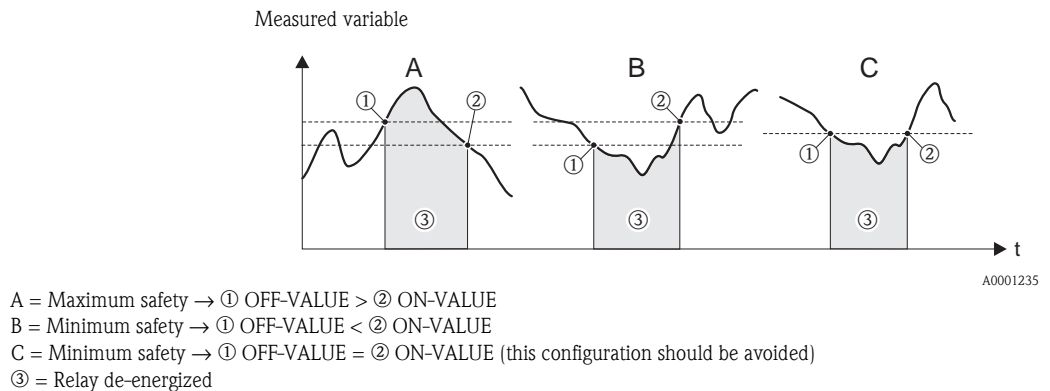

#### Relay output configured for "flow direction"





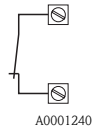
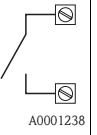
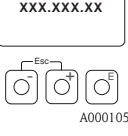
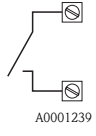
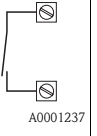

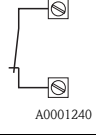
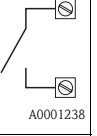
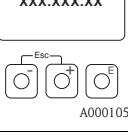

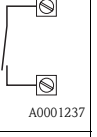

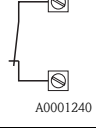

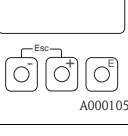



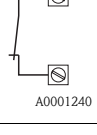
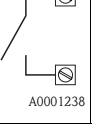
The value you entered in the ON-VALUE function defines the switching point for the positive and negative directions of flow.

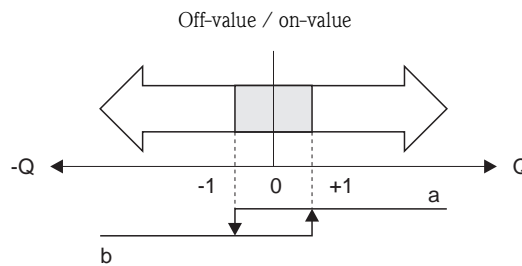
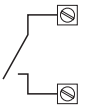
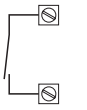

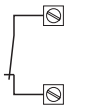
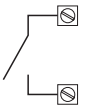

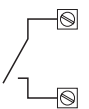
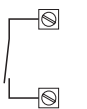

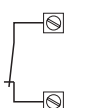
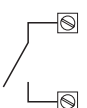

If, for example, the switch point you define is  $1 \text{ m}^3/\text{h}$ , the relay drops out at  $-1 \text{ m}^3/\text{h}$  and pulls up at  $+1 \text{ m}^3/\text{h}$ . Set the switch point to 0 if your process calls for direct switchover (no switching hysteresis). If low flow cut off is used, it is advisable to set hysteresis to a value greater than or equal to the low flow cut off rate.



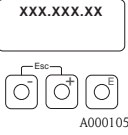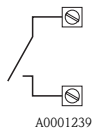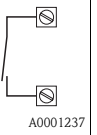

### 6.3.5 Switching action of the relay output


Function	Status		Relay coil	Contact*	
				NC	NO
<b>ON (operation)</b>	System in measuring mode	 A0001052	energized	 A0001239	 A0001237
	System not in measuring mode (power supply failed)	 A0001291	de-energized	 A0001240	 A0001238
<b>Fault message</b>	System OK	 A0001052	energized	 A0001239	 A0001237
	(System or process error) Fault → Response to error OUTPUTS/INPUTS AND TOTALIZERS	 A0001291	de-energized	 A0001240	 A0001238
<b>Notice message</b>	System OK	 A0001052	energized	 A0001239	 A0001237
	(System or process error) Fault → Continuation of measuring	 A0001291	de-energized	 A0001240	 A0001238
<b>Fault message or Notice message</b>	System OK	 A0001052	energized	 A0001239	 A0001237
	(System or process error) Fault → Response to error or Note → Continuation of measuring	 A0001291	de-energized	 A0001240	 A0001238

Function	Status	Relay coil	Contact*	
			NC	NO
<b>Flow direction</b> CH1, CH2, AVG.	forward  A0001241	energized	 A0001239	 A0001237
	reverse  A0001242	de-energized	 A0001240	 A0001238
<b>Limit value</b> – Volume flow – Totalizer – Sound velocity – Flow velocity – CH1, CH2, AVG.	Limit value <b>not</b> overshoot or undershot  A0001243	energized	 A0001239	 A0001237
	Limit value overshoot or undershot  A0001244	de-energized	 A0001240	 A0001238
<p>* Terminal numbers in accordance with the TERMINAL NUMBER function (4780) → Page 79.</p> <p> <b>Note!</b> If the measuring device has two relays, the factory setting is:</p> <ul style="list-style-type: none"><li>■ Relay 1 → normally open contact</li><li>■ Relay 2 → normally closed contact</li></ul>				

7 Block INPUTS

Note!


Block not available for all measuring devices → Page 8 (available blocks, groups etc.).

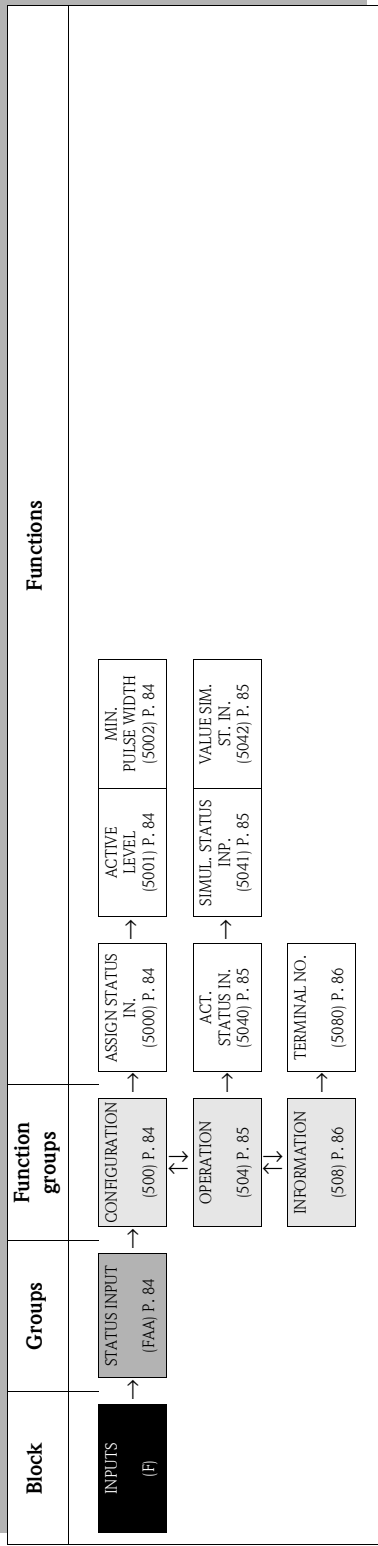


## 7.1 Group STATUS INPUT





### 7.1.1 Function group CONFIGURATION

INPUTS	F	→	STATUS INPUT	FAA	→	CONFIGURATION	500
--------	---	---	--------------	-----	---	---------------	-----


<b>Functional description</b> INPUTS → STATUS INPUT → CONFIGURATION (only with PROFIBUS DP)	
<b>ASSIGN STATUS INPUT (5000)</b>	<p>Use this function to assign a switching function to the status input.</p> <p><b>Options:</b>            OFF            RESET TOTALIZER (1 to 3)            RESET ALL TOTALIZERS            POSITIVE ZERO RETURN CH1&amp;CH2            RESET FAULT MESSAGE            ZERO ADJUST (CH1 to CH2)</p> <p><b>Factory setting:</b>            OFF</p> <p> <b>Caution!</b>            Positive zero return is active as long as the level is available at the status input (continuous signal). All other assignments react to a change in level (pulse) at the status input.</p>
<b>ACTIVE LEVEL (5001)</b>	<p>Use this function to define whether the assigned switch function is released or sustained when the signal level is present (HIGH) or not present (LOW).</p> <p><b>Options:</b>            HIGH            LOW</p> <p><b>Factory setting:</b>            HIGH</p>
<b>MIN. PULSE WIDTH (5002)</b>	<p>Use this function to define a minimum pulse width which the input pulse must achieve in order to trigger the selected switching function (see the ASSIGN STATUS INPUT function (5000)).</p> <p><b>User input:</b>            20 to 100 ms</p> <p><b>Factory setting:</b>            50 ms</p>

7.1.2      **Function group OPERATION**



Functional description INPUTS → STATUS INPUT → OPERATION (only with PROFIBUS DP)	
ACTUAL STATUS INPUT (5040)	<p>Use this function to view the current level of the status input.</p> <p><b>Display:</b> HIGH LOW</p>
SIMULATION STATUS INPUT (5041)	<p>Use this function to simulate the status input, i.e. to trigger the function (see Function ASSIGN STATUS INPUT (5000) on Page 84) assigned to the status input.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The "SIMULATION STATUS INPUT" message indicates that simulation is active.</li><li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li></ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
VALUE SIMULATION STATUS INPUT (5042)	<p> <b>Note!</b> The function is not visible unless the SIMULATION STATUS INPUT function (5041) is active (= ON).</p> <p>Use this function to define the level to be assumed at the status output during the simulation. This value is used to test downstream devices and the measuring device itself.</p> <p><b>Options:</b> HIGH LOW</p> <p><b>Factory setting:</b> LOW</p> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

7.1.3      Function group INFORMATION

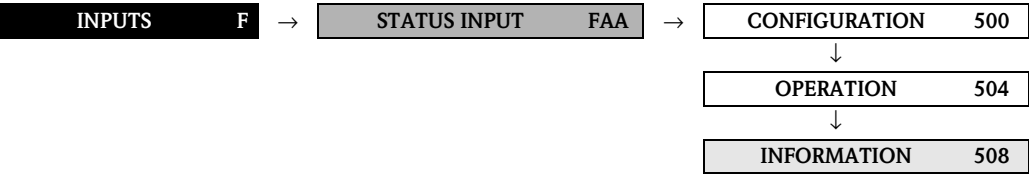


Functional description	
INPUTS → STATUS INPUT → INFORMATION (only with PROFIBUS DP)	
TERMINAL NO. (5080)	<p>Use this function to display the numbers of the terminals (in the connection compartment) which are used by the status input.</p> <p><b>Display:</b> 24 (+) / 25 (-)</p>


# 8 Block BASIC FUNCTION

Block	Groups	Function groups	Functions
BASIC FUNCTION (G)	PROFIBUS-PA / PROFIBUS-DP GBA/(GCA) P. 88	CONFIGURATION (610) P. 88	TAG NAME (6100) P. 88
		↑	FIELD BUS ADDRESS (6101) P. 88
		↑	WRITE PROTECT (6102) P. 88
		↑	OUT VALUE (6121) P. 89
		↑	DISPLAY VALUE (6122) P. 89
		↑	TOTALIZER OUT VALUE (6131) P. 90
		↑	OVERFLOW (6132) P. 90
		↑	CHANNEL (6133) P. 90
		↑	UNIT TOTALIZER (6134) P. 91
		↑	SET TOTALIZER (6135) P. 91
		↑	TOTALIZER MODE (6137) P. 92
		↑	SET UNIT TO BUS (6141) P. 93
		↑	SELECTION GSD (6140) P. 93
		↑	ACTUAL BAUD RATE (6161) P. 94
		↑	DEVICE ID (6162) P. 94
		↑	CHECK CONFIG. (6163) P. 94
		↑	ON-VALUE LF CUT OFF (6402) P. 95
		↑	OFF VAL. LF CUTOFF (6403) P. 95
		↑	PRESS.SHOCK SUPP. (6404) P. 96
		↑	ZERO POINT ADJUSTMENT (6480) P. 97
		↑	LIQUID (6540) P. 98
		↑	TEMPERATURE (6541) P. 98
		↑	SOUND VEL. LIQ. (6542) P. 99
		↑	VISCOSITY (6543) P. 99
		↑	SOUND VEL. NEG. (6545) P. 99
		↑	SOUND VEL. POS. (6546) P. 100
		↑	MEASURING MODE (6601) P. 101
		↑	FLOW DAMPING (6603) P. 101
		↑	POS. ZERO RETURN (6605) P. 102
		↑	ZERO POINT (6803) P. 103
		↑	C0 (6806) P. 103
		↑	NOMINAL DIAMETER (6812) P. 104
		↑	PIPE DIAMETER (6813) P. 104
		↑	WALL THICKNESS (6813) P. 104
		↑	MEASUREMENT (6880) P. 105
		↑	SENSOR TYPE (6881) P. 105
		↑	SENSOR CONFIG (6882) P. 105
		↑	CABLE LENGTH (6883) P. 106
		↑	P-FACTOR (6890) P. 107
		↑	ZERO POINT (6881) P. 107
		↑	CORR. FACTOR (6893) P. 107
		↑	CALIBRATION DATE (6910) P. 108
		↑	ORIG. FACT. CALIBR. (6911) P. 108

## 8.1 Group PROFIBUS DP / PROFIBUS PA


### 8.1.1 Function group CONFIGURATION






Functional description	
BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → CONFIGURATION	
<b>TAG NAME</b> <b>(6100)</b>	<p>Use this function to assign a tag name to the measuring device. You can edit and read this tag name via local operation or via the PROFIBUS protocol (Class 2 master).</p> <p><b>User input:</b> max. 16-character text, permissible: A-Z, 0-9, +,-, punctuation marks</p> <p><b>Factory setting:</b> " _____ " (without text)</p>
<b>FIELD BUS ADDRESS</b> <b>(6101)</b>	<p>Use this function to define the address for the exchange of data with the PROFIBUS DP/PA protocol.</p> <p><b>User input:</b> 0...126</p> <p><b>Factory setting:</b> 126</p>
<b>WRITE PROTECT</b> <b>(6102)</b>	<p>Use this function to view the position of the jumper via which the general write protection is configured.</p> <p><b>Display:</b> OFF→ not protected ON → protected; it is not possible to change functions either via local operation or via the PROFIBUS protocol (Class 2 master).</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b> Write protection is activated and deactivated by means of a jumper on the I/O module (see Operating Instructions for Prosonic Flow 93C PROFIBUS DP/PA, BA 089D).</p>

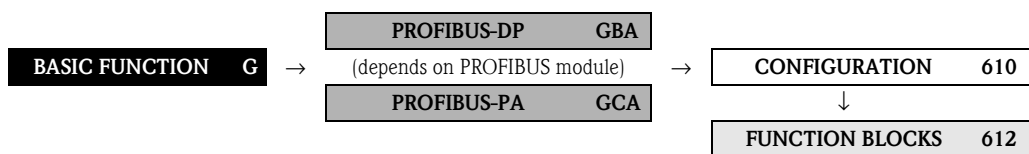


### 8.1.2 Function group FUNCTION BLOCKS





Functional description	
BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → FUNCTION BLOCKS	
<b>BLOCK SELECTION (6120)</b>	<p>Use this function to select an Analog Input function block or the Analog Output (display value).</p> <ul style="list-style-type: none"> <li>– If you select an Analog Input function block, the current measured value is displayed in the OUT VALUE function (6121).</li> <li>– If you select the Analog Output (display value), the current measured value is displayed in the DISPLAY VALUE function (6122).</li> </ul> <p><b>Options:</b>            ANALOG INPUT 1 (factory setting: average volume flow)            ANALOG INPUT 2 (factory setting: average sound velocity)            ANALOG INPUT 3 (factory setting: average flow velocity)            ANALOG INPUT 4 (factory setting: average volume flow)            ANALOG INPUT 5 (factory setting: average sound velocity)            ANALOG INPUT 6 (factory setting: average flow velocity)            ANALOG INPUT 7 (factory setting: average volume flow)            ANALOG INPUT 8 (factory setting: average sound velocity)            ANALOG OUTPUT 1 (factory setting: display value)</p> <p><b>Factory setting:</b>            ANALOG INPUT 1 (average volume flow)</p> <p> <b>Note!</b>            If the option PROFILE-GSD was selected in the SELECTION GSD function (6140), the only options that appear in this function are:            ANALOG INPUT 1            ANALOG INPUT 2</p>
<b>OUT VALUE (6121)</b>	<p> <b>Note!</b>            This function is not available unless one of the following was selected in the BLOCK SELECTION function (6120):</p> <ul style="list-style-type: none"> <li>■ ANALOG INPUT 1</li> <li>■ ANALOG INPUT 2</li> <li>■ ANALOG INPUT 3</li> <li>■ ANALOG INPUT 4</li> <li>■ ANALOG INPUT 5</li> <li>■ ANALOG INPUT 6</li> <li>■ ANALOG INPUT 7</li> <li>■ ANALOG INPUT 8</li> </ul> <p>Use this function to display the OUT value, incl. the unit and status, of the Analog Input function block selected in the BLOCK SELECTION function (6120).</p>
<b>DISPLAY VALUE (6122)</b>	<p> <b>Note!</b>            This function is not available unless ANALOG OUTPUT 1 was selected in the BLOCK SELECTION function (6120).</p> <p>Use this function to display the display value (output measured value) incl. the unit and status.</p>
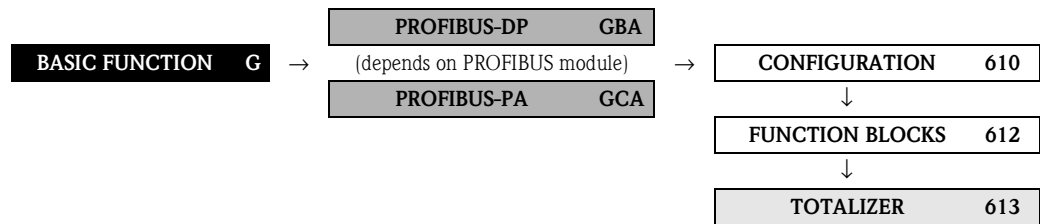
### 8.1.3 Function group TOTALIZER









Functional description BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → TOTALIZER	
<b>SELECT TOTALIZER (6130)</b>	<p>Use this function to select a totalizer.</p> <p><b>Options:</b> TOTALIZER 1 TOTALIZER 2 TOTALIZER 3</p> <p><b>Factory setting:</b> TOTALIZER 1</p> <p> <b>Note!</b> If the option PROFILE-GSD was selected in the SELECTION GSD function (6140) the only option available in this function is TOTALIZER 1.</p>
<b>TOTALIZER OUT VALUE (6131)</b>	<p>Use this function to display the OUT value incl. the unit and status of the totalizer selected in the SELECT TOTALIZER function (6130).</p>
<b>OVERFLOW (6132)</b>	<p>Use this function to view the totaled overflow for the totalizer aggregated since measuring commenced.</p> <p>Total flow quantity is represented by a floating-point number consisting of max. 7 digits. This function can be used to view higher numerical values (&gt;9,999,999) as overflows. The effective quantity is thus the total of OVERFLOW plus the value returned by the SUM function.</p> <p>Example: Reading for 2 overflows: <math>2 \cdot 10^7 \text{ m}^3</math> (= 20,000,000 m<sup>3</sup>). The value displayed in the SUM function = 196,845.7 m<sup>3</sup> Effective total quantity = 20,196,845.7 m<sup>3</sup></p> <p><b>Display:</b> Integer with exponent, including sign (e.g. 2 E 7)</p>
<b>CHANNEL (6133)</b>	<p>Use this function to assign a measured variable to the totalizer.</p> <p><b>Options:</b> OFF VOLUME FLOW AVERAGE</p> <p><b>Factory setting:</b> VOLUME FLOW AVERAGE</p> <p> <b>Note!</b> The totalizer is reset to "0" as soon as the selection is changed.</p>

<b>Functional description</b> BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → TOTALIZER	
<b>UNIT TOTALIZER</b> <b>(6134)</b>	<p>Use this function to define a unit for the measured variable of the totalizer.</p> <p><b>Options:</b>            Metric → cm<sup>3</sup>; dm<sup>3</sup>; m<sup>3</sup>; ml; l; hl; Ml</p> <p>US → cc; af; ft<sup>3</sup>; oz f; gal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks)</p> <p>Imperial → gal; Mgal; bbl (beer); bbl (petrochemicals)</p> <p><b>Factory setting:</b>            m<sup>3</sup></p>
<b>SET TOTALIZER</b> <b>(6135)</b>	<p>Use this function to assign a status to the totalizer.</p> <p><b>Options:</b>            TOTALIZE            Total the measured variable selected in the CHANNEL function (6133).</p> <p>RESET            Reset the totalizer to zero.</p> <p>PRESET            The totalizer is set to the value defined in the PRESET TOTALIZER function (6136).</p> <p> <b>Note!</b>            Note that selecting RESET or PRESET resets the totalizer to "0" or sets it to the preset value respectively, but does not stop the totalizer. This means that it immediately recommences totaling from the new setting. If you want to stop the totalizer you must select HOLD in the TOTALIZER MODE (6137) function.</p> <p><b>Factory setting:</b>            TOTALIZE</p>
<b>PRESET TOTALIZER</b> <b>(6136)</b>	<p>Use this function to define a start value for the totalizer.</p> <p> <b>Note!</b>            This value is not accepted by the totalizer unless the PRESET option is selected in the SET TOTALIZER function (6135).</p> <p><b>User input:</b>            -99999...99999</p> <p><b>Factory setting:</b>            0</p>

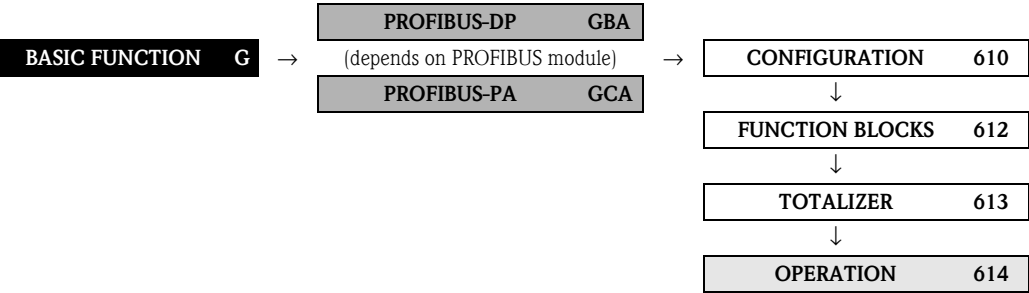
Functional description	
BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → TOTALIZER	
TOTALIZER MODE (6137)	<p>Use this function to define how the totalizer totals the flow components.</p> <p><b>Options:</b></p> <p>BALANCE Positive and negative flow components. The positive and negative flow components are balanced. In other words, net flow in the flow direction is registered.</p> <p>FORWARD / POSITIVE Positive flow components only</p> <p>REVERSE / NEGATIVE Negative flow components only</p> <p>HOLD VALUE (HOLD) The totalizer stops. No further flow components are totaled.</p> <p><b>Factory setting:</b></p> <p>Totalizer 1: BALANCE Totalizer 2: FORWARD / POSITIVE Totalizer 3: REVERSE / NEGATIVE</p>


8.1.4 Function group OPERATION



Functional description	
BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → OPERATION	
SELECTION GSD (6140)	<div> <b>Note!</b></div> <p>Each PROFIBUS device must verify an ID number allocated by the PNO in the configuration phase. In addition to this device-specific ID number, there are also PROFILE ID numbers which also have to be accepted during the configuration phase to ensure interchangeability among vendors. In such instances, the device might reduce the functionality with regard to cyclic data to a profile-defined level.</p> <p>Use this function to select the configuration behavior of the measuring device.</p> <p><b>Options:</b> MANUFACT.SPEC PROFIL-GSD</p> <p><b>Factory setting:</b> MANUFACT.SPEC</p>
SET UNIT TO BUS (6141)	<p>Use this function to enable transmission of the configured system units to the automation system. The configured system units are transmitted to the automation system by pressing the  key.</p> <p><b>Options:</b> SET UNITS (transmission is started by pressing the  key)</p> <div> <b>Note!</b></div> <p>During transmission, the OUT value in the Analog Input Block is automatically scaled to the configured system unit and the OUT unit (output unit) is displayed in the OUT_UNIT parameter.</p> <p>The preconfigured system units are listed in the Operating Instructions for Prosonic Flow 93C PROFIBUS DP/PA, BA 089D.</p> <div> <b>Caution!</b></div> <p>Activating this function can cause the output value OUT to change suddenly, and thus affect subsequent control loops.</p>


8.1.5 Function group INFORMATION

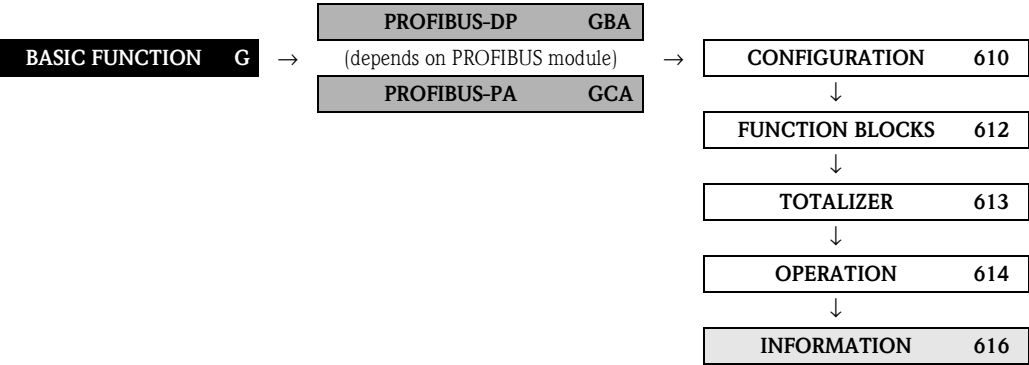
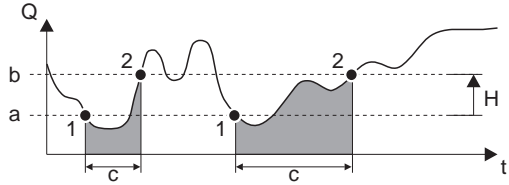


Functional description	
BASIC FUNCTION → PROFIBUS-DP / PROFIBUS-PA → FUNCTION BLOCKS	
PROFILE VERSION (6160)	Use this function to view the profile version.
ACTUAL BAUD RATE (6161)	Use this function to view the data transfer rate at which the device communicates. This transfer rate is configured in the automation system.
DEVICE ID (6162)	Use this function to view the manufacturer-specific device identification.  <b>Display:</b> <ul style="list-style-type: none"><li>■ PROFIBUS DP communication output = 1531 Hex</li><li>■ PROFIBUS PA communication output = 1530 Hex</li></ul>  <b>Note!</b> If the option PROFILE-GSD was selected in the SELECTION GSD function (6140) the PROFILE ID = 9741 Hex is displayed in this function.
CHECK CONFIGURATION (6163)	Use this function to display whether the configuration for cyclic data transmission of a Class 1 master was accepted in the Prosonic Flow 93C PROFIBUS.  <b>Display:</b> ACCEPTED (configuration accepted) NOT ACCEPTED (configuration not accepted)




8.2 Group PROCESS PARAMETER (CH1 to CH2)

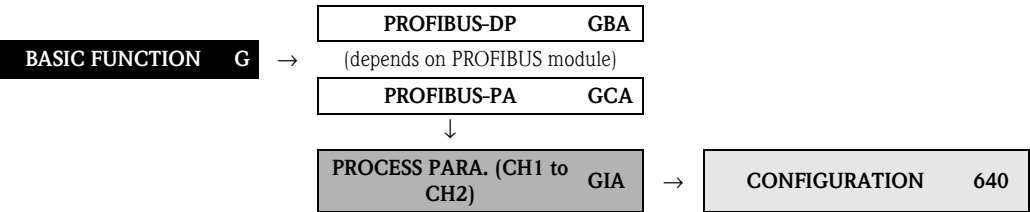8.2.1 Function group CONFIGURATION




Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1 to CH2) → CONFIGURATION	
ASSIGN LF CUTOFF (6400)	<p>Use this function to assign the switch point for low flow cut off rate suppression.</p> <p><b>Options:</b> OFF VOLUME FLOW</p> <p><b>Factory setting:</b> VOLUME FLOW</p>
ON-VALUE LOW FLOW CUT OFF (6402)	<p>Use this function to assign a value to the switch-on point for low flow cut off. Low flow cut off is active if the value entered is not equal to 0. The sign of the flow value is highlighted on the display to indicate that low flow cut off is active.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 0 l/s</p> <p> <b>Note!</b> The appropriate unit is taken from the UNIT VOLUME FLOW function (0402) → Page 13.</p>
OFF-VALUE LOW FLOW CUT OFF (6403)	<p>Use this function to enter the switch-off (b) point for low flow cut off. Enter the switch-off point as a positive hysteresis (H) from the switch-on point (a).</p> <p><b>User input:</b> Integer 0 to 100%</p> <p><b>Factory setting:</b> 50%</p> <p>Example:</p> <div></div> <p>Q = Flow [volume/time] t = Time a = ON-VALUE LOW FLOW CUT OFF (6402) = 200 dm<sup>3</sup>/h b = OFF-VALUE LOW FLOW CUT OFF (6403) = 10% c = Low flow cut off active 1 = Low flow cut off is switched on at 200 dm<sup>3</sup>/h 2 = Low flow cut off is switched off at 220 dm<sup>3</sup>/h</p>

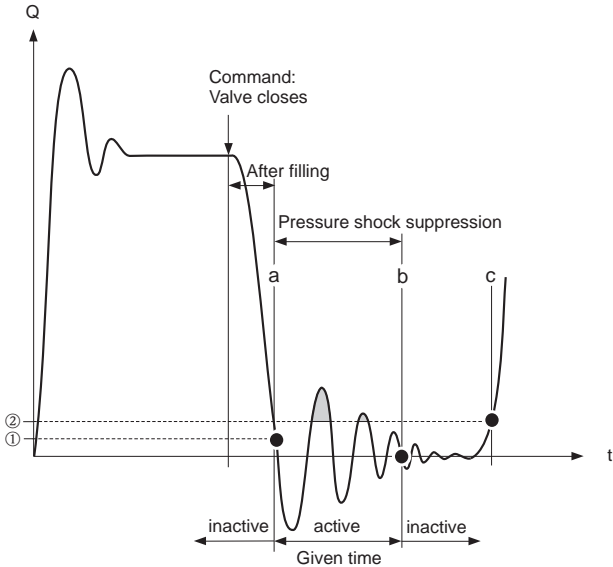

A0001245

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1 to CH2) → CONFIGURATION	
<div><b>PRESSURE SHOCK SUPPRESSION (6404)</b></div>	<div><p>The closure of a valve can cause brief but severe movements of the fluid in the piping system, movements which the measuring system registers. The pulses totaled in this way result in a totalizer reading error, particularly in the case of batching processes. For this reason, the measuring device is equipped with pressure shock suppression (= short-term signal suppression) which can eliminate system-related "disruptions".</p><div><div> Note!</div><p>Note that pressure shock suppression cannot be used unless the low flow cut off is active, (see function ON-VALUE LOW FLOW CUT OFF on Page 95).</p><p>Use this function to define the time span for active pressure shock suppression.</p><p><b>Activation of the pressure shock suppression</b></p><p>Pressure shock suppression is activated after the flow falls below the switch-on point of the low flow cut off (see point <b>a</b> in graphic).</p><p>While pressure shock suppression is active, the following conditions apply:</p><ul style="list-style-type: none"><li>■ Flow reading on display = → 0.</li><li>■ Totalizer reading → the totalizers are pegged at the last correct value.</li></ul><p><b>Deactivation of the pressure shock suppression</b></p><p>The pressure shock suppression is deactivated after the time interval, set in this function, has passed (see point <b>b</b> in graphic).</p><div><div> Note!</div><p>The actual flow value is displayed and output when the time interval for the pressure shock suppression has passed and the flow exceeds the switch-off point of the low flow cut off (see point <b>c</b> in graphic).</p></div><div></div><div><div>① = off-value (low flow cut off), ② = on-value (low flow cut off)</div><div>a Activated when the on-value for low flow cut off is undershot</div><div>b Deactivated once the time specified passes</div><div>c Flow values are taken into account again for calculating the pulses</div><div>■ Suppressed values</div><div>Q Flow</div></div><div><p><b>User input:</b> max. 4-digit number, incl. unit: 0.00 to 100.0 s</p><p><b>Factory setting:</b> 0.00 s</p></div></div></div>

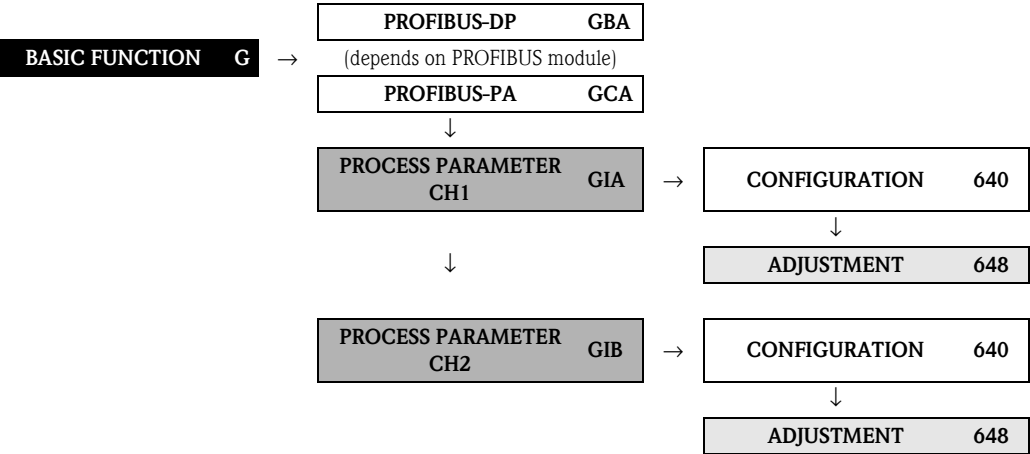


8.2.2 Function group ADJUSTMENT


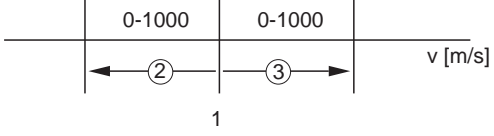



Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1 to CH2) → ADJUSTMENT	
<b>ZERO POINT ADJUSTMENT (6480)</b>	<p>This function enables a zero point adjustment to be automatically carried out. The new zero point determined by the measuring system is adopted by the ZERO POINT function (6891) ( → Page 107).</p> <p><b>User input:</b> CANCEL START</p> <p><b>Factory setting:</b> CANCEL</p> <p> <b>Caution!</b> Before carrying this out, please refer to the Operating Instructions for Prosonic Flow 93C PROFIBUS DP/PA, BA 089D, for a detailed description of the procedure for zero point adjustment.</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ Programming is locked during zero point adjustment. The message "ZERO ADJUST RUNNING" appears on the display.</li><li>■ If the zero point adjustment is not possible, e.g. with a flow velocity &gt; 0.1 m/s, or has been canceled, then the alarm message "ZERO ADJUST NOT POSSIBLE" is shown on the display.</li></ul>


8.2.3 Function group LIQUID DATA

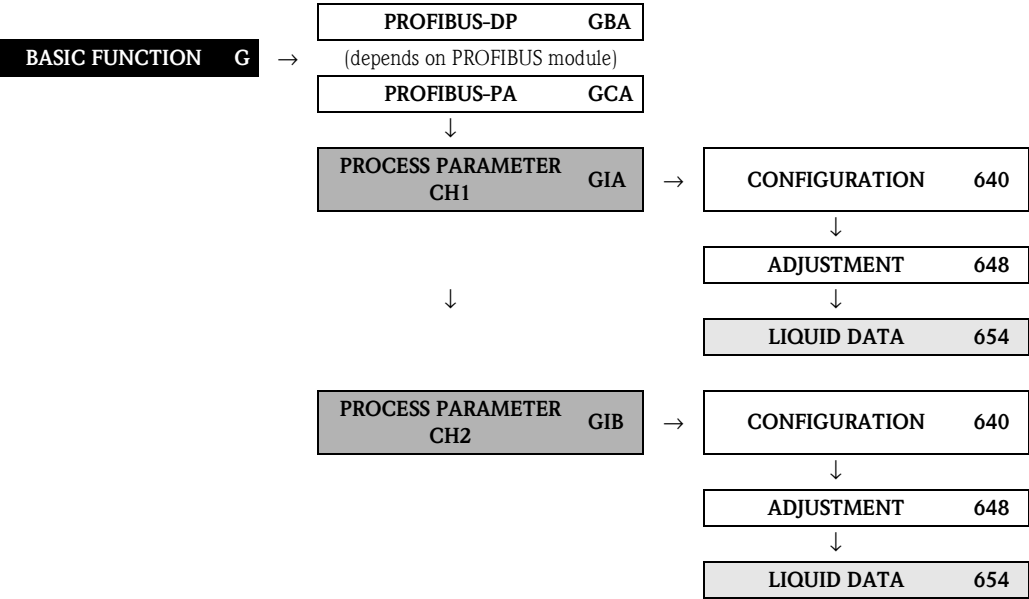

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1 to CH2) → LIQUID DATA	
LIQUID (6540)	<p>Use this function to select the liquid in the pipe.</p> <p><b>Options:</b> WATER, SEA WATER, DISTILLED WATER, AMMONIA, ALCOHOL, BENZENE, BROMIDE, ETHANOL, GLYCOL, KEROSENE, MILK, METHANOL, TOLUENE, LUBE OIL, DIESEL, PETROL, OTHERS</p> <p> <b>Note!</b> The selection specifies the values for the sound velocity and viscosity. If OTHERS is selected, these values must be entered via the SOUND VELOCITY LIQUID (6542) and VISCOSITY (6543) functions.</p> <p><b>Factory setting:</b> WATER</p>
TEMPERATURE (6541)	<p>Use this function to enter the process temperature of the liquid. Via the sound velocity, the value influences the determination of the sensor distance. Enter the process temperature at normal operating conditions to achieve an optimum configuration of the measuring system.</p> <p><b>User input:</b> Fixed-point number -273.15 to 726.85 °C (0 to 1000 K)</p> <p><b>Factory setting:</b> 20 °C</p>


<b>Functional description</b> BASIC FUNCTION → PROCESS PARAMETER (CH1 to CH2) → LIQUID DATA	
<b>SOUND VELOCITY LIQUID (6542)</b>	<p>This function displays the sound velocity of the liquid. This is determined via the values entered in the LIQUID (6540) and TEMPERATURE (6541) functions. If you edit the predetermined value the LIQUID function (6540) will be reset to the option OTHERS. The sound velocity of the liquid must be entered if the liquid is not listed in the LIQUID function (6540) and the OTHERS option was selected.</p> <p><b>Transmitter search range:</b>            The measuring device searches for the measuring signal within a defined sound velocity range. You specify the search range in the SOUND VELOCITY NEGATIVE (6545) or SOUND VELOCITY POSITIVE (6546) functions. An error message is displayed if the sound velocity of the liquid exceeds the search range.</p> <p> <b>Note!</b>            We recommend you select a smaller search range by unfavorable signal conditions (signal strength &lt; 50%).</p> <div style="text-align: center;">  </div> <p>1 = Sound velocity of the liquid            ② = Lower search range: is specified in the SOUND VELOCITY NEGATIVE function (6545)            ③ = Upper search range: is specified in the SOUND VELOCITY POSITIVE function (6546)</p> <p><b>User input:</b>            Fixed-point number 400 to 3000 m/s</p> <p><b>Factory setting:</b>            1485 m/s</p>
<b>VISCOSITY (6543)</b>	<p>This function displays the viscosity of the liquid. This is determined via the values entered in the LIQUID (6540) and TEMPERATURE (6541) functions. If you edit the predetermined value the LIQUID function (6540) will be reset to the option OTHERS. The viscosity must be entered if the liquid is not listed in the LIQUID function (6540) and the OTHERS option was selected.</p> <p><b>User input:</b>            Fixed-point number 0.0 to 5000.0 mm<sup>2</sup>/s (cSt)</p> <p><b>Factory setting:</b>            1 mm<sup>2</sup>/s</p>
<b>SOUND VELOCITY NEGATIVE (6545)</b>	<p>Use this function to specify the lower search range for the sound velocity of the liquid.</p> <p><b>User input:</b>            Fixed-point number 0 to 1000 m/s</p> <p><b>Factory setting:</b>            500 m/s</p> <p> <b>Note!</b>            See the explanations in the SOUND VELOCITY LIQUID function (6542).</p>


A0001246

<div>Functional description</div> <div>BASIC FUNCTION → PROCESS PARAMETER (CH1 to CH2) → LIQUID DATA</div>	
<div>SOUND VELOCITY POSITIVE (6546)</div>	<div>Use this function to specify the upper search range for the sound velocity of the liquid.</div> <div><b>User input:</b> Fixed-point number 0 to 1000 m/s</div> <div><b>Factory setting:</b> 300 m/s</div> <div> <b>Note!</b> See the explanations in the SOUND VELOCITY LIQUID function (6542).</div>

8.3 Group SYSTEM PARAMETER (CH1 to CH2)

8.3.1 Function group CONFIGURATION

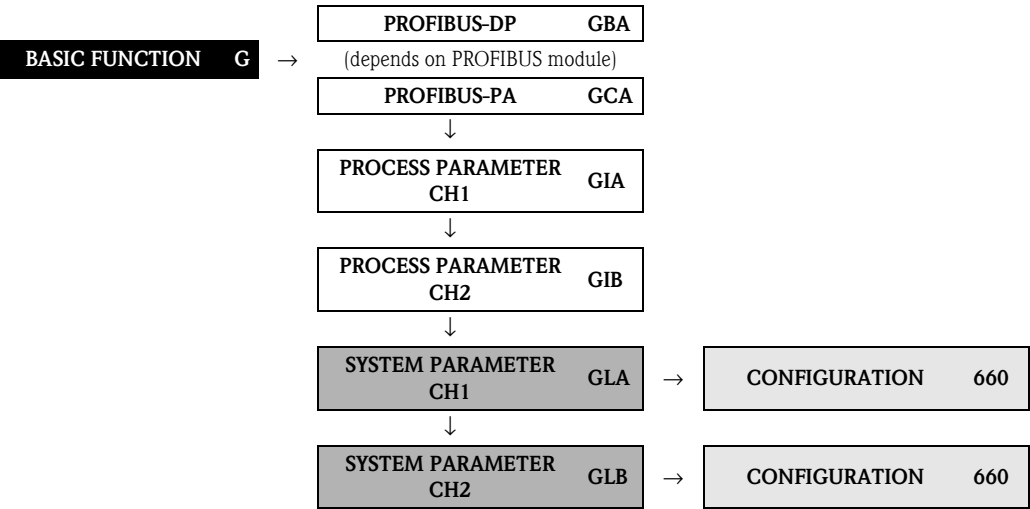


Functional description	
BASIC FUNCTION → SYSTEM PARAMETER (CH1...CH2) → CONFIGURATION	
INSTALLATION DIRECTION SENSOR (6600)	Use this function to reverse the sign of the flow quantity, if necessary.  <b>Options:</b> NORMAL INVERSE (REVERSE)  <b>Factory setting:</b> NORMAL
MEASURING MODE (6601)	Use this function to specify the flow direction for outputting the signal:  Unidirectional: Signal is only output if the flow direction is positive (forward flow). Flow in the negative flow direction (reverse flow) is not taken into account or totalized by the measuring system.  Bidirectional: Signal is output with flow in both directions (forward and reverse flow).  <b>Options:</b> UNIDIRECTIONAL BIDIRECTIONAL  <b>Factory setting:</b> UNIDIRECTIONAL
FLOW DAMPING (6603)	 <b>Note!</b> The system damping acts on all functions and outputs of the measuring device.  Use this function to set the filter depth of the digital filter. This reduces the sensitivity of the measuring signal to interference peaks (e.g. high solids content, gas bubbles in the fluid, etc.). The system reaction time increases with the filter setting.  <b>User input:</b> 0 to 100 s  <b>Factory setting:</b> 0 s

<div>Functional description</div> <div>BASIC FUNCTION → SYSTEM PARAMETER (CH1...CH2) → CONFIGURATION</div>	
<div>POSITIVE ZERO RETURN</div> <div>(6605)</div>	<div>Use this function to interrupt evaluation of measured variables. This is necessary when a piping system is being cleaned, for example. This setting acts on all function and outputs of the measuring device.</div> <div>Options:</div> <div>OFF</div> <div>ON (signal output is set to the "zero flow" value)</div> <div>Factory setting:</div> <div>OFF</div>


8.4 Group SENSOR DATA (CH1 to CH2)

8.4.1 Function group CONFIGURATION

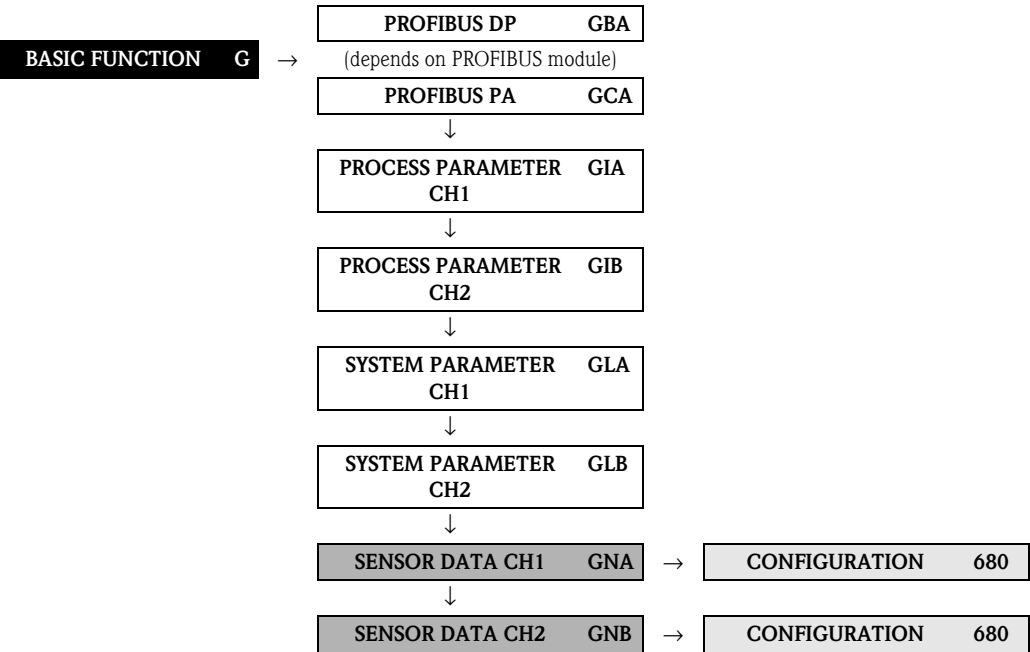

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1 to CH2) → CONFIGURATION	
K-FACTOR (6800)	<p>Use this function to view the current calibration factor for the measuring tube and the measuring sensors.</p> <p><b>Display:</b> 5-digit floating-point number, (including sign)</p> <p><b>Factory setting:</b> Depends on the measuring tube and the calibration.</p>
ZERO POINT (6803)	<p>Use this function to view the zero-point correction value for the measuring tube and the measuring sensors. The calibration at the factory determines the zero-point correction value.</p> <p><b>Display:</b> Max. 5-digit number</p> <p><b>Factory setting:</b> Depends on the measuring tube and the calibration</p>
C0 (6806)	<p>Use this function to view the current correction factor of the sound velocity for the measuring tube and the measuring sensors. The correction factor is determined during factory calibration.</p> <p><b>Display:</b> Max. 5-digit number</p> <p><b>Factory setting:</b> 1.0000 (= no correction)</p>


8.4.2 Function group MEASURING TUBE

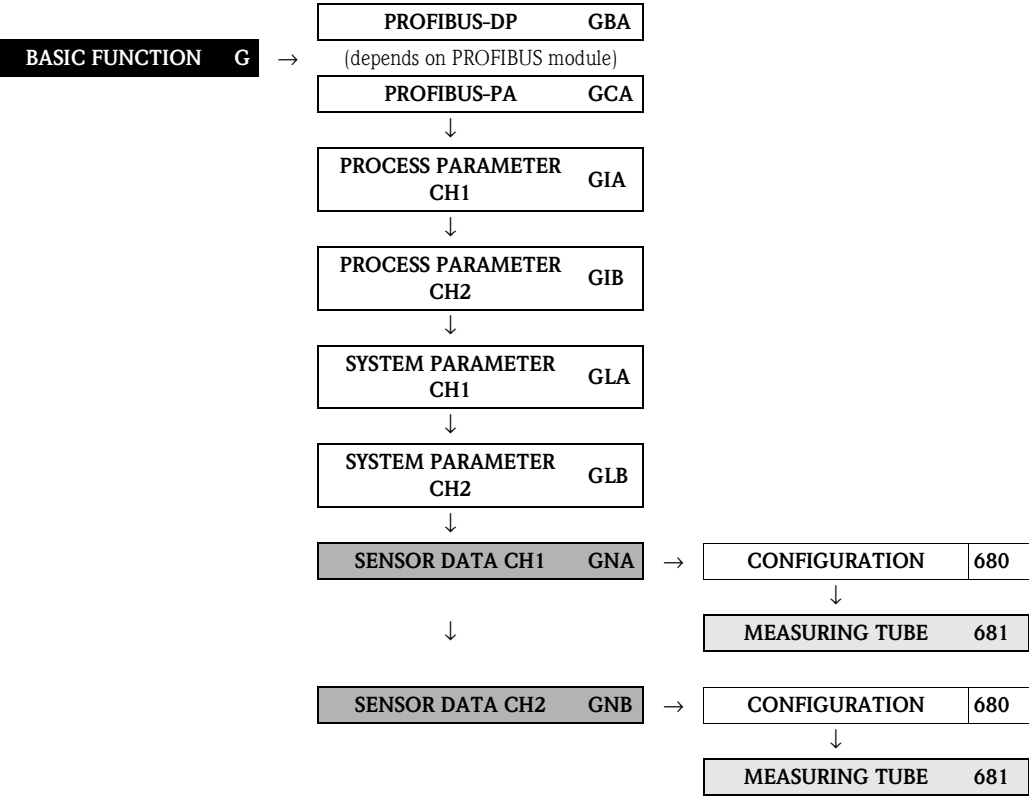

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1 to CH2) → MEASURING TUBE	
PIPE STANDARD (6810)	Use this function to view the pipe standard for the measuring pipe.  <b>Factory setting:</b> Depends on the measuring pipe
NOMINAL DIAMETER (6811)	Use this function to view the nominal diameter of the measuring pipe.  <b>Factory setting:</b> Depends on the measuring pipe
PIPE DIAMETER (6812)	Use this function to view the pipe outer diameter of the measuring pipe.  <b>Display:</b> 5-digit floating-point number (incl. unit)  <b>Factory setting:</b> Depends on the measuring pipe
WALL THICKNESS (6813)	Use this function to view the wall thickness of the measuring pipe.  <b>Display:</b> 4-digit floating-point number (incl. unit)  <b>Factory setting:</b> Depends on the measuring pipe




8.4.3 Function group SENSOR PARAMETER

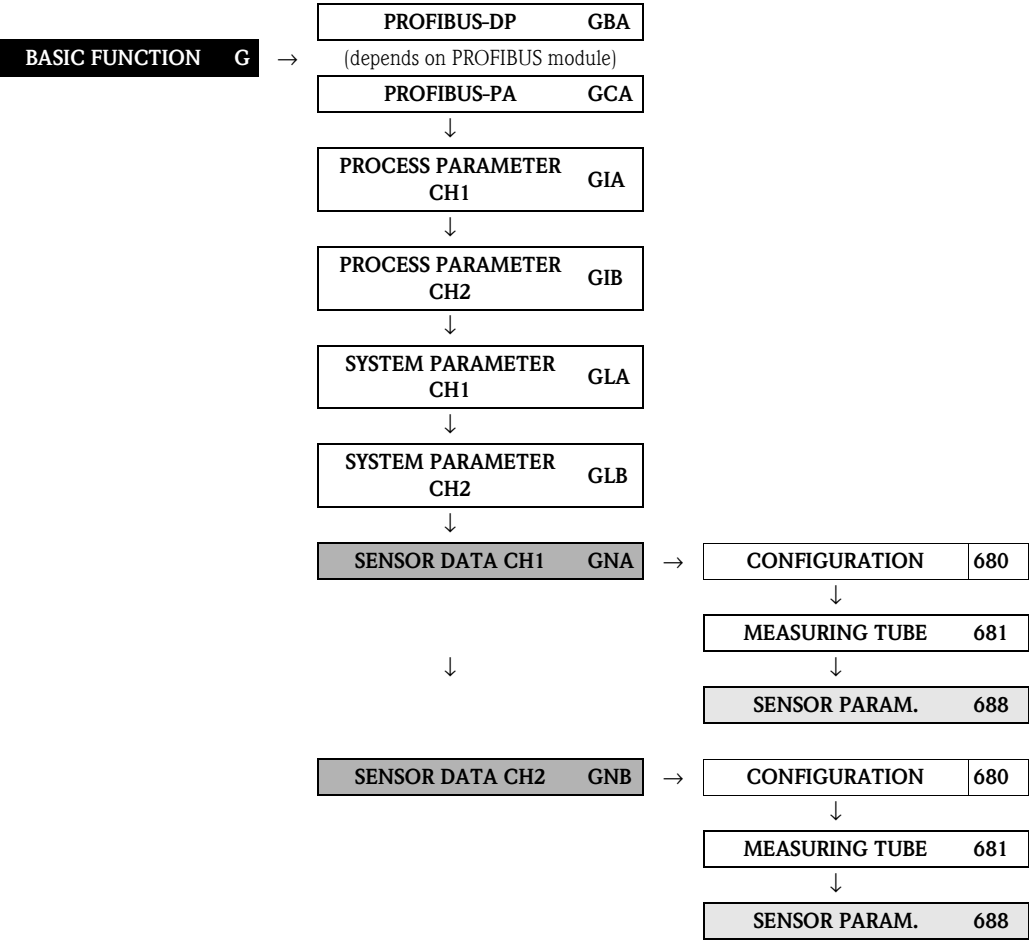

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1 to CH2) → CONFIGURATION	
MEASUREMENT (6880)	<p><b>Options:</b> INLINE</p> <p><b>Factory setting:</b> INLINE</p>
SENSOR TYPE (6881)	<p> <b>Note!</b> This function is only available if the OFF setting was not selected in the MEASUREMENT function.</p> <p><b>Options:</b> W-IN-1F-L-C</p> <p><b>Factory setting:</b> W-IN-1F-L-C</p>
SENSOR CONFIGURATION (6882)	<p>Use this function to select the configuration for the ultrasonic sensors.</p> <p> <b>Note!</b> Only the DUAL PATH option can be selected for Prosonic Flow 93C.</p> <p><b>Options:</b> DUAL PATH</p> <p><b>Factory setting:</b> DUAL PATH</p>


Functional description	
BASIC FUNCTION → SENSOR DATA (CH1 to CH2) → CONFIGURATION	
CABLE LENGTH (6883)	<p>Use this function to select the length of the sensor cable.</p> <p><b>Options:</b> LENGTH 5m/15 feet LENGTH 10m/30 feet LENGTH 15m/45 feet LENGTH 30m/90 feet</p> <p><b>Factory setting:</b> LENGTH 5m/15 feet</p>


### 8.4.4 Function group CALIBRATION DATA

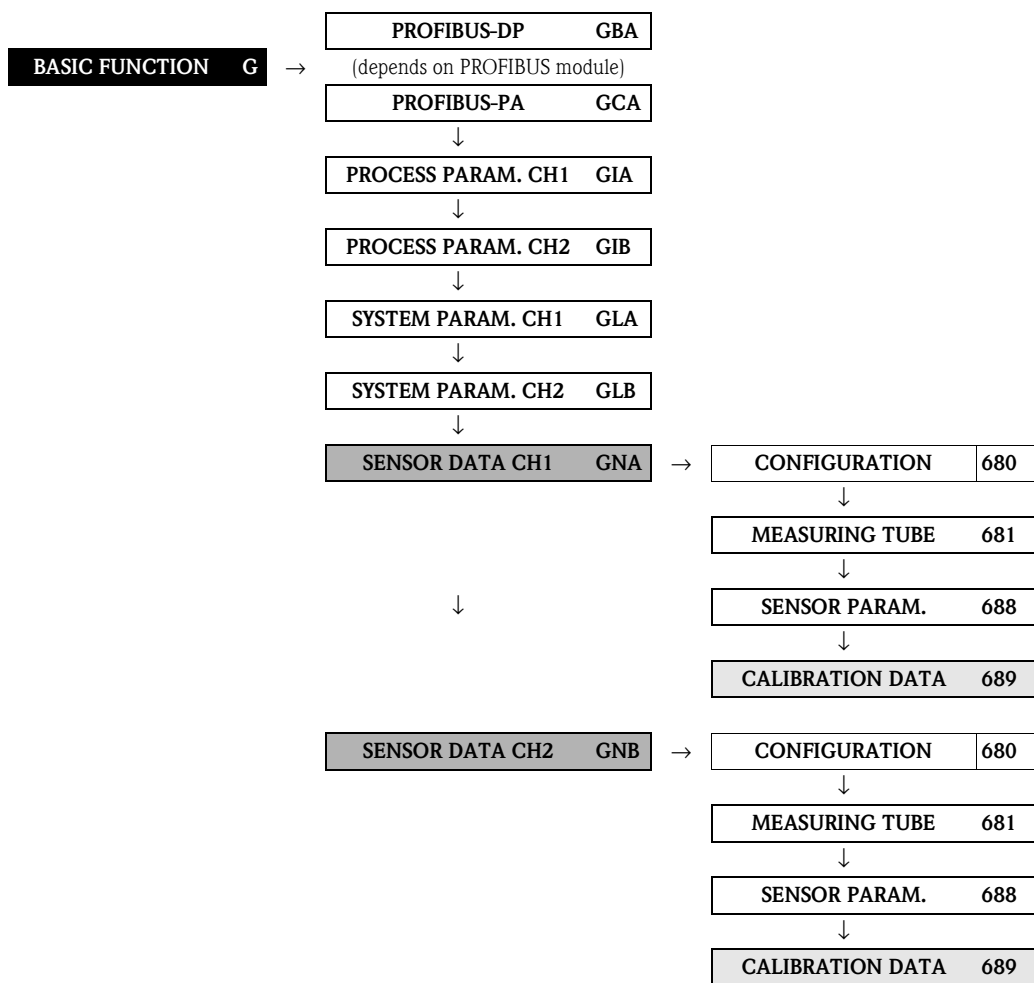


Functional description	
BASIC FUNCTION → SENSOR DATA (CH1 to CH2) → CALIBRATION DATA	
<b>P-FACTOR</b> (6890)	<p>Use this function to display the P-factor.</p> <p>The P-factor describes the influence of the velocity distribution of the flow profile in the pipe and depends on the Reynolds number. The P-factor is in the range from 0.98 to 1.02.</p>
<b>ZERO POINT</b> (6891)	<p>Use this function to call up or manually change the zero point correction currently being used.</p> <p><b>User input:</b> 5-digit floating-point number, including unit and sign (e.g. +1.0 ns)</p> <p><b>Factory setting:</b> 0.0 ns (no correction)</p>
<b>CORRECTION FACTOR</b> (6893)	<p>Use this function to enter a correction factor at the client's site. It is advisable to only enter values in the range from 0.5 to 2.</p> <p><b>User input:</b> 5-digit floating-point number (0.5 to 2)</p> <p><b>Factory setting:</b> 1.0000 (no correction)</p>

8.4.5 Function group ORIG. FACT. CALIBR.

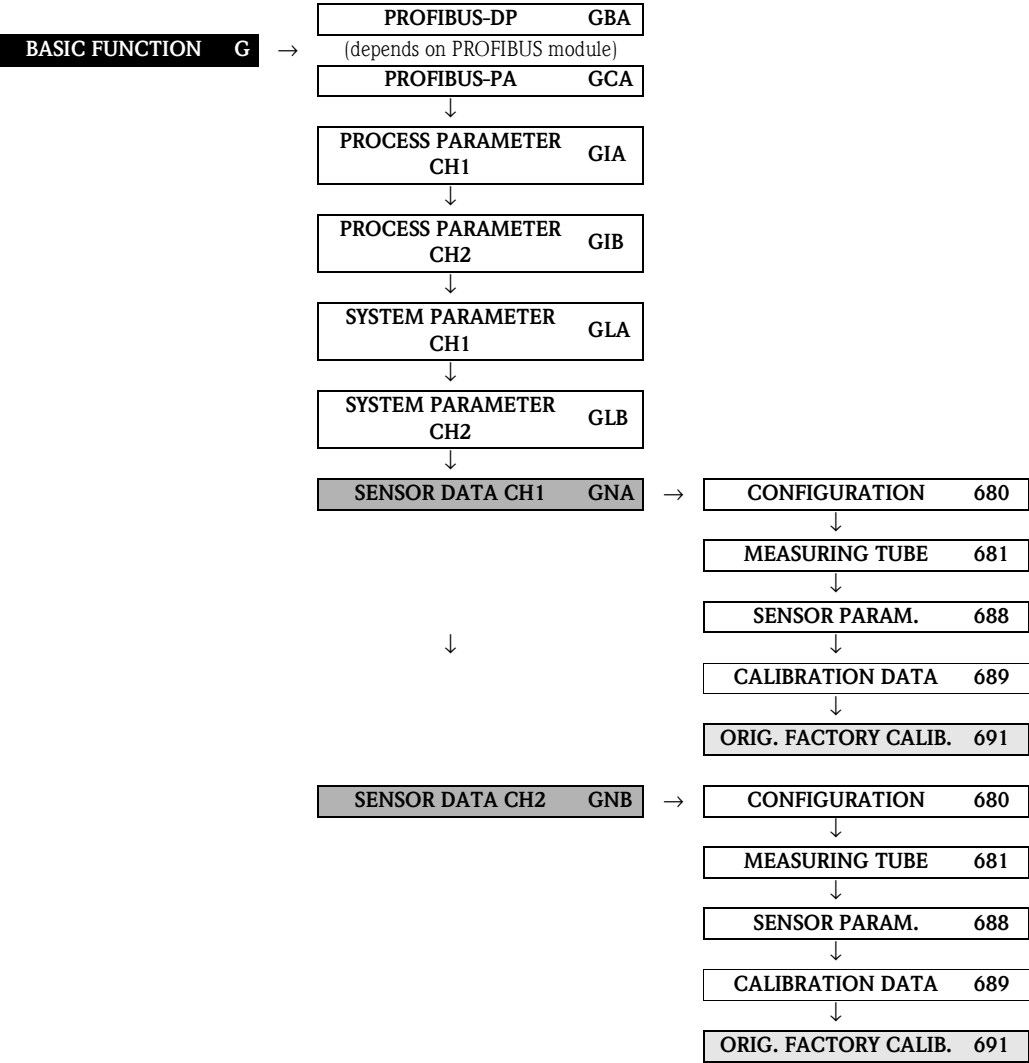

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1 to CH2) → ORIG. FACTORY CALIB.	
<b>CALIBRATION DATE (6910)</b>	<p>This function resets the calibration data of the measuring device to the factory settings.</p> <p>Procedure:</p> <ol style="list-style-type: none"><li>1. Enter current date.</li><li>2. Store it.</li></ol> <p>The measuring device resets the calibration data to the factory settings and restarts automatically.</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The calibration data reset is recorded in the calibration history.</li><li>■ The date in the CALIBRATION DATE function (6808) is overwritten.</li></ul> <p><b>User input:</b> Format depends on the selection in function FORMAT DATE/TIME (0429)</p>

9 Block SUPERVISION

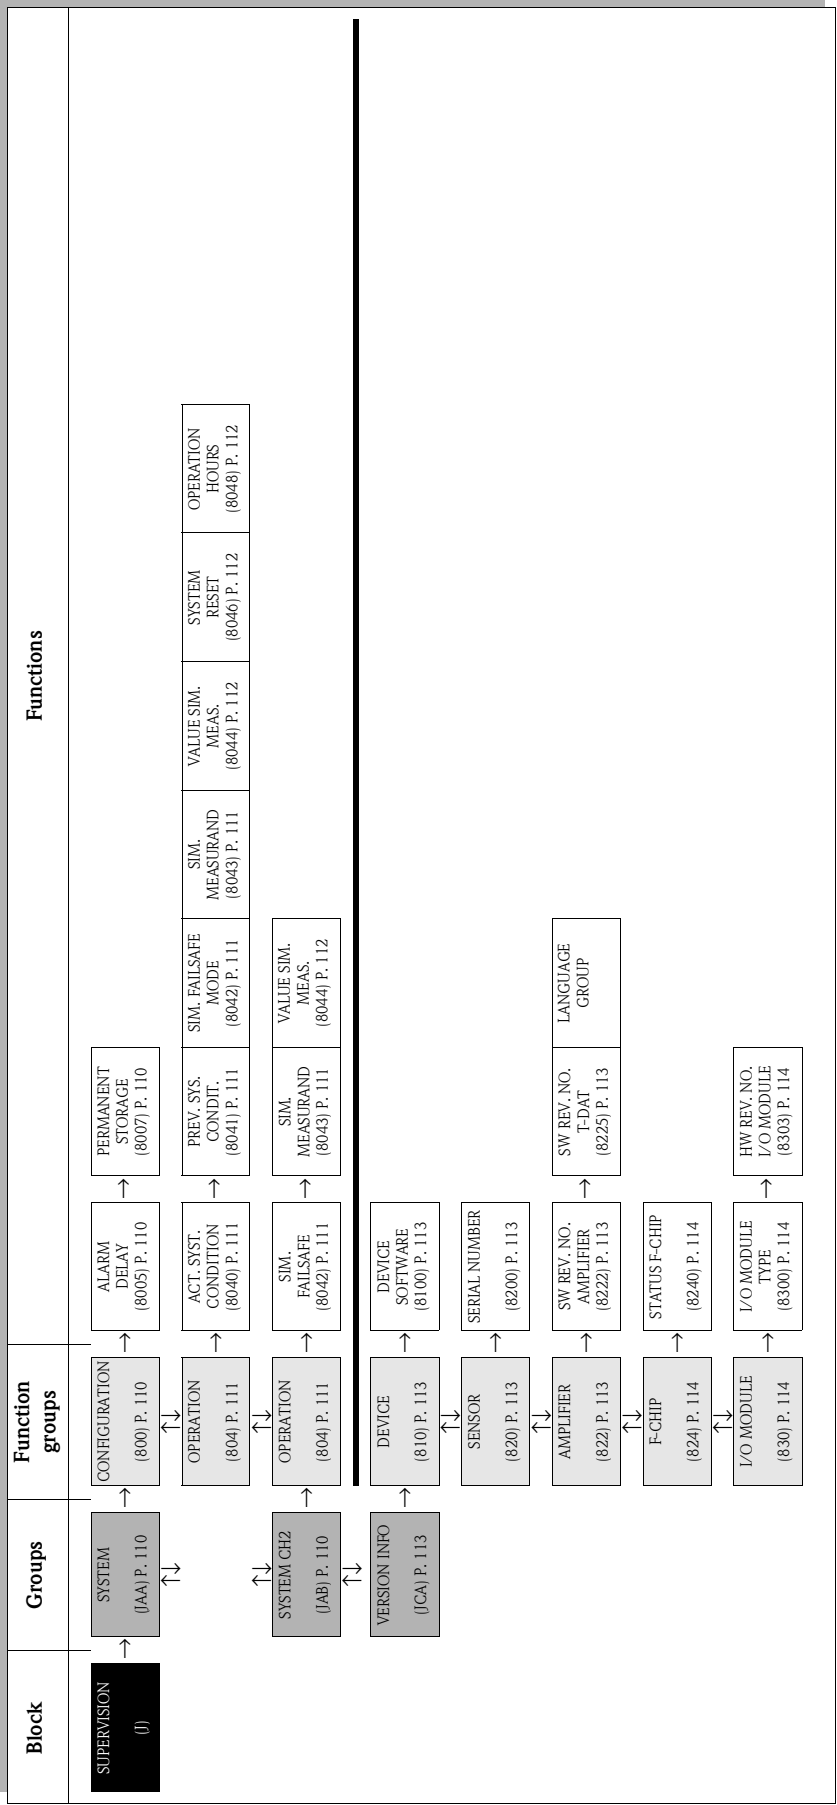



9.1 Group SYSTEM (SYSTEM CH2)




9.1.1 Function group CONFIGURATION

SUPERVISION	J	→	SYSTEM	JAA	→	CONFIGURATION	800
<div>Functional description</div> <div>SUPERVISION → SYSTEM → CONFIGURATION</div>							
ALARM DELAY (8005)		<div>Use this function to specify a time period for suppressing the appearance of fault or notice messages.</div> <div>This suppression acts on:<ul style="list-style-type: none"><li>■ Display</li><li>■ Current output</li><li>■ Frequency output</li><li>■ Relay output</li><li>■ PROFIBUS DP/PA</li></ul></div> <div>User input: 0 to 100 s (in steps of one second)</div> <div>Factory setting: 0 s</div> <div><div>⚠ Caution!</div><div>If this function is activated, error and notice messages are delayed by the time corresponding to the setting before being forwarded to the higher-order controller (process controller, etc.).</div><div>It is therefore imperative to check in advance in order to make sure whether a delay of this nature could affect the safety requirements of the process. If error and notice messages cannot be suppressed, a value of 0 seconds must be entered here.</div></div>					
PERMANENT STORAGE (8007)		<div>This function displays whether permanent storage of all parameters in the EEPROM is switched on or off.</div> <div>Options: OFF ON</div> <div>Factory setting: ON</div>					
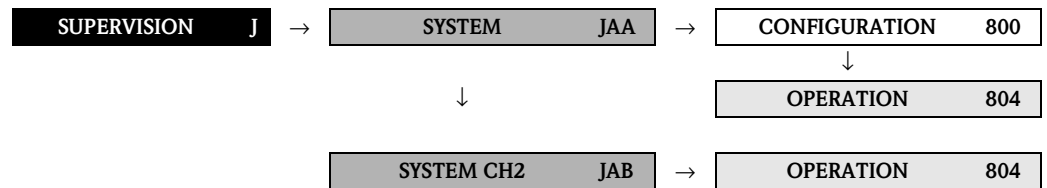
### 9.1.2 Function group OPERATION




Functional description SUPERVISION → SYSTEM [CH2] → OPERATION	
<b>ACTUAL SYSTEM CONDITION (8040)</b>	<p>Use this function to check the present system condition.</p> <p><b>Display:</b> "SYSTEM OK" or the fault / notice message with the highest priority.</p>
<b>PREVIOUS SYSTEM CONDITIONS (8041)</b>	<p>Use this function to view the fifteen most recent error and notice messages since measuring last started.</p> <p><b>Display:</b> The last 15 fault/notice messages appear on the display.</p>
<b>SIMULATION FAILSAFE MODE (8042)</b>	<p>Use this function to set all inputs, outputs and totalizers to their defined failsafe modes, in order to check whether they respond correctly. During this time, the words "SIMULATION FAILSAFE MODE" appear on the display.</p> <p><b>Options:</b> ON OFF</p> <p><b>Factory setting:</b> OFF</p>
<b>SIMULATION MEASURAND (8043)</b>	<p>Use this function to set all inputs, outputs and totalizers to their defined flow-response modes, in order to check whether they respond correctly. During this time, the words "SIMULATION MEASURAND" appear on the display.</p> <p><b>Options:</b> OFF VOLUME FLOW (CH1 to CH2) SOUND VELOCITY (CH1 to CH2)</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Caution!</b></p> <ul style="list-style-type: none"> <li>■ The measuring device cannot be used for measuring while this simulation is in progress.</li> <li>■ The setting is not saved in the event of a power failure.</li> </ul>

<b>Functional description</b> SUPERVISION → SYSTEM [CH2] → OPERATION	
<b>VALUE SIMULATION MEASURAND (8044)</b>	<p> <b>Note!</b> The function is not visible unless the function SIMULATION MEASURAND (8043) is active.</p> <p>Use this function to specify a selectable value (e.g. 12 m<sup>3</sup>/s). This is used to test the associated functions in the device itself and downstream signal loops.</p> <p><b>User input:</b> 5-digit floating-point number, [unit]</p> <p><b>Factory setting:</b> 0 [unit]</p> <p> <b>Caution!</b></p> <ul style="list-style-type: none"> <li>■ The setting is not saved in the event of a power failure.</li> <li>■ The appropriate unit is taken from the SYSTEM UNITS (ACA) function group, ( → Page 13).</li> </ul>
<b>SYSTEM RESET (8046)</b>	<p>Use this function to perform a reset of the measuring system.</p> <p><b>Options:</b> NO RESTART SYSTEM (restart without interrupting power supply) MEASURING TUBE DATA (restore the original calibration data)</p> <p> <b>Note!</b> The T-DAT must be present in order to successfully restore the original calibration data when the MEASURING TUBE DATA option is selected. If it is not, the error message K-CAL T-DAT (# 043) appears on the display. For further information, see PROline Prosonic Flow 93C PROFIBUS, BA089D</p> <p><b>Factory setting:</b> MEASURING TUBE DATA</p>
<b>OPERATION HOURS (8048)</b>	<p>The hours of operation of the device appear on the display.</p> <p><b>Display:</b> Depends on the number of hours of operation elapsed: Hours of operation &lt; 10 hours → display format = 00:00:00 (hr:min:sec) Hours of operation 10 to 10,000 hours → display format = 0000:00 (hr:min) Hours of operation &gt; 10,000 hours → display format = 000000 (hr)</p>




9.2 Group VERSION INFO


9.2.1 Function group DEVICE

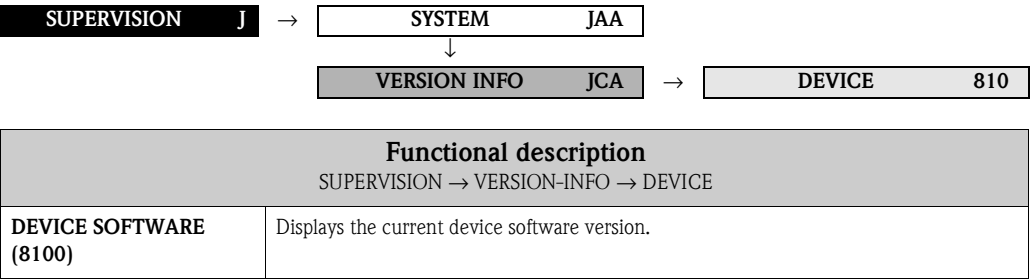


9.2.2 Function group SENSOR

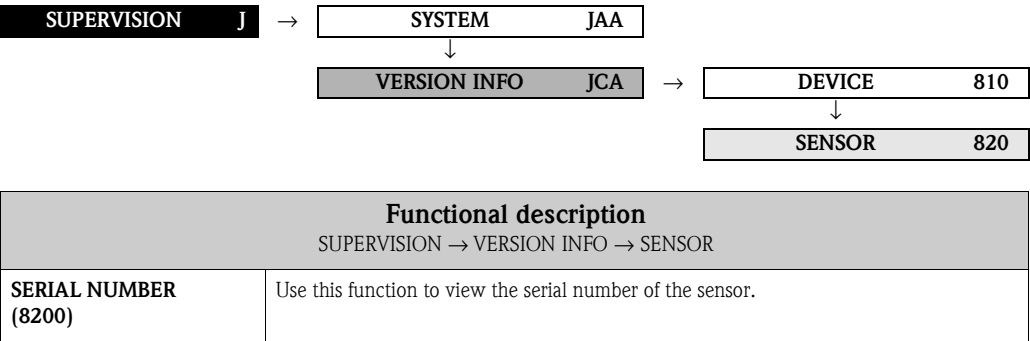


9.2.3 Function group AMPLIFIER

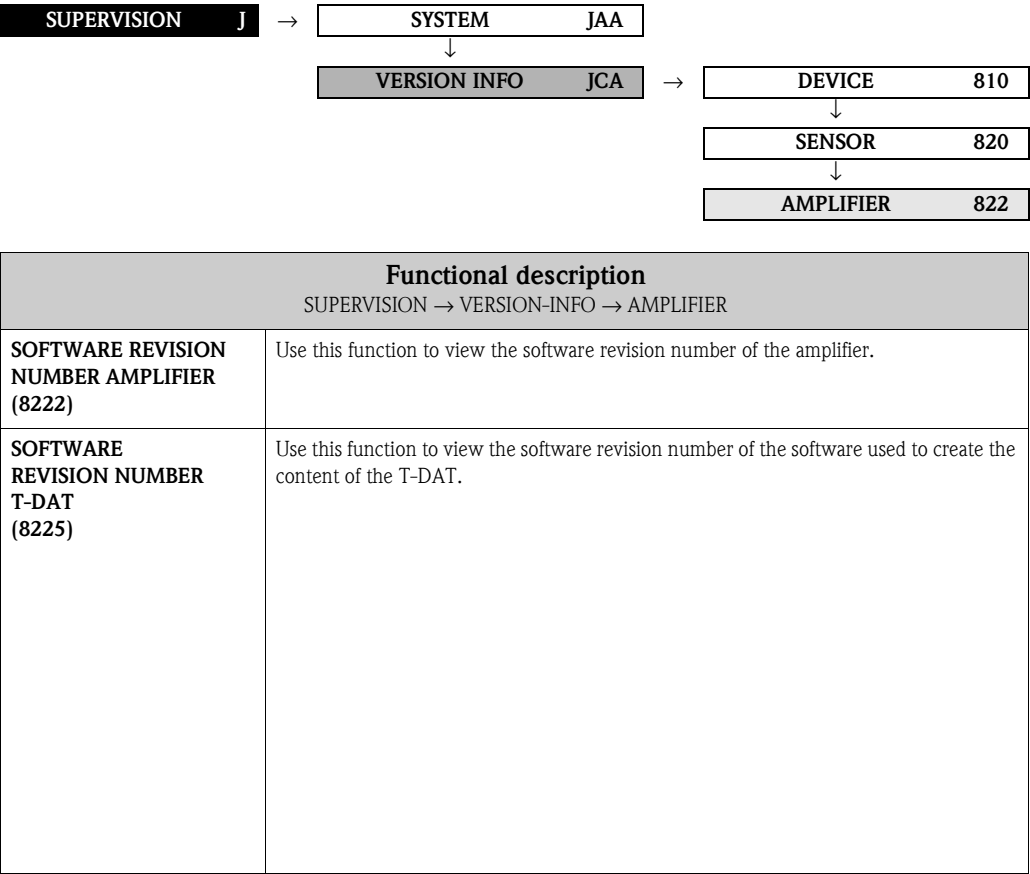


Functional description	
SUPERVISION → VERSION-INFO → AMPLIFIER	
LANGUAGE GROUP (8226)	<p>Use this function to view the language group.</p> <p>The following language groups can be ordered: WEST EU / USA, EAST EU / SCAND., ASIA, CHINESE.</p> <p><b>Display:</b> available language group</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The language options of the available language group are displayed in the LANGUAGE function (2000).</li><li>■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.</li></ul>

9.2.4 Function group F-CHIP

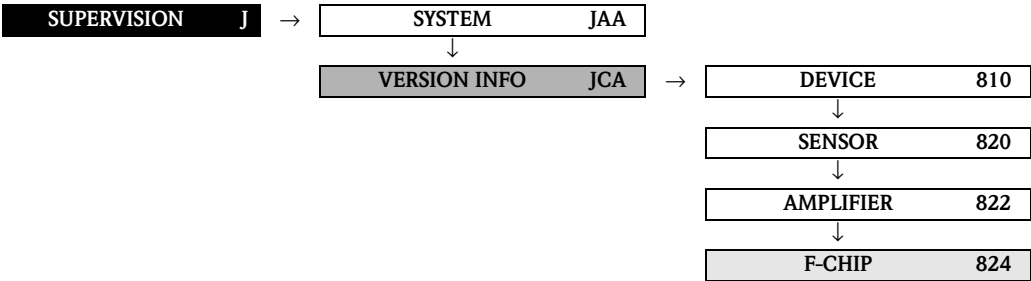

Functional description	
SUPERVISION → VERSION-INFO → F-CHIP	
STATUS F-CHIP (8240)	Use this function to check whether an F-CHIP is installed.

9.2.5 Function group I/O MODULE

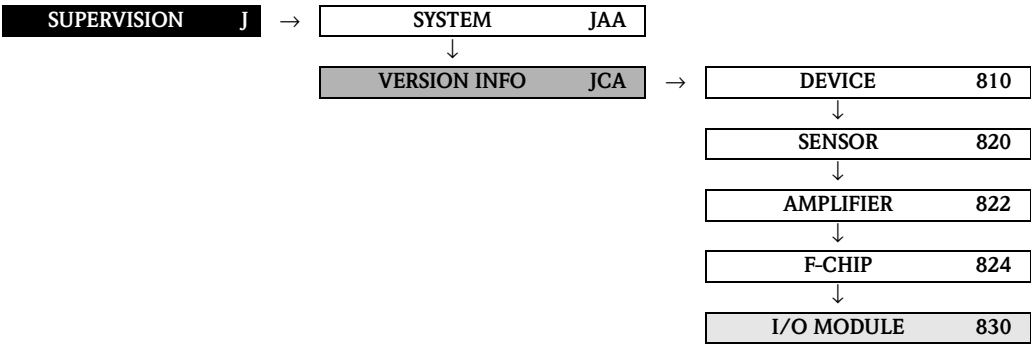

Functional description	
SUPERVISION → VERSION-INFO → I/O MODULE	
I/O MODULE TYPE (8300)	Use this function to view the configuration of the I/O module complete with terminal numbers.
SOFTWARE REVISION NUMBER I/O MODULE (8303)	Use this function to view the software revision number of the I/O module.

## 10 Factory settings

### 10.1 SI units

#### 10.1.1 Low flow cutoff, totalizer

Nominal diameter		Low flow cut off (approx. $v = 0.04 \text{ m/s}$ )		Totalizer
[mm]	[inch]		Volume	Vol.
300	12"	10	$\text{m}^3/\text{h}$	$\text{m}^3$
350	14"	15	$\text{m}^3/\text{h}$	$\text{m}^3$
400	16"	20	$\text{m}^3/\text{h}$	$\text{m}^3$
450	18"	20	$\text{m}^3/\text{h}$	$\text{m}^3$
500	20"	30	$\text{m}^3/\text{h}$	$\text{m}^3$
600	24"	40	$\text{m}^3/\text{h}$	$\text{m}^3$
700	28"	55	$\text{m}^3/\text{h}$	$\text{m}^3$
–	30"	65	$\text{m}^3/\text{h}$	$\text{m}^3$
800	32"	75	$\text{m}^3/\text{h}$	$\text{m}^3$
900	36"	90	$\text{m}^3/\text{h}$	$\text{m}^3$
1000	40"	115	$\text{m}^3/\text{h}$	$\text{m}^3$
–	42"	125	$\text{m}^3/\text{h}$	$\text{m}^3$
1200	48"	160	$\text{m}^3/\text{h}$	$\text{m}^3$
–	54"	205	$\text{m}^3/\text{h}$	$\text{m}^3$
1400	–	220	$\text{m}^3/\text{h}$	$\text{m}^3$
–	60"	255	$\text{m}^3/\text{h}$	$\text{m}^3$
1600	–	285	$\text{m}^3/\text{h}$	$\text{m}^3$
–	66"	305	$\text{m}^3/\text{h}$	$\text{m}^3$
1800	72"	360	$\text{m}^3/\text{h}$	$\text{m}^3$
–	78"	450	$\text{m}^3/\text{h}$	$\text{m}^3$
2000	–	450	$\text{m}^3/\text{h}$	$\text{m}^3$

#### 10.1.2 Language

Country	Language	Country	Language
Australia	English	Italy	Italiano
Austria	Deutsch	Japan	Japanese
Belgium	Francais	Malaysia	English
Canada	English	Netherlands	Nederlands
Denmark	Dansk	Norway	Norsk
England	English	Singapore	English
Finland	Suomi	South Africa	English
France	Francais	Spain	Espanol
Germany	Deutsch	Sweden	Svenska
Hong Kong	English	Switzerland	Deutsch
Hungary	English	Thailand	English
India	English	USA	English
Instruments International	English		

### 10.1.3 Length, temperature

	Unit
Length	mm
Temperature	°C

## 10.2 US units (for USA and Canada only)

### 10.2.1 Low flow cutoff, totalizer

Nominal diameter		Low flow cut off (approx. $v = 0.04 \text{ m/s}$ )		Totalizer
[inch]	[mm]		Volume	Vol.
12"	300	45	gal/min	gal
14"	350	65	gal/min	gal
16"	400	90	gal/min	gal
18"	450	90	gal/min	gal
20"	500	130	gal/min	gal
24"	600	175	gal/min	gal
28"	700	240	gal/min	gal
30"	–	275	gal/min	gal
32"	800	325	gal/min	gal
36"	900	400	gal/min	gal
40"	1000	500	gal/min	gal
42"	–	550	gal/min	gal
48"	1200	700	gal/min	gal
54"	–	1.3	Mgal/d	Mgal
–	1400	1.4	Mgal/d	Mgal
60"	–	1.6	Mgal/d	Mgal
–	1600	1.8	Mgal/d	Mgal
66"	–	1.9	Mgal/d	Mgal
72"	1800	2.3	Mgal/d	Mgal
78"	–	2.9	Mgal/d	Mgal
–	2000	2.9	Mgal/d	Mgal

### 10.2.2 Language, length, temperature

	Unit
Language	English
Length	mm
Temperature	°C

# 11 Index function matrix

## Blocks

A = MEASURED VARIABLES .....	10
B = QUICK SETUP .....	17
C = USER INTERFACE .....	20
E = OUTPUT .....	36
F = INPUT .....	83
G = BASIC FUNCTION .....	87
J = SUPERVISION .....	109

## Groups

AAA = MEASURING VALUES .....	11
ACA = SYSTEM UNITS .....	13
CAA = CONTROL .....	21
CCA = MAIN LINE .....	25
CEA = ADDITIONAL LINE .....	28
CGA = INFORMATION LINE .....	32
EAA = CURRENT OUTPUT 1 .....	37
EAB = CURRENT OUTPUT 2 .....	37
ECA = PULSE/FREQUENCY OUTPUT 1 .....	48
ECB = PULSE/FREQUENCY OUTPUT 2 .....	48
EGA = RELAY OUTPUT 1 .....	73
EGB = RELAY OUTPUT 2 .....	73
FAA = STATUS INPUT .....	84
GBA = PROFIBUS-DP .....	88
GCA = PROFIBUS-PA .....	88
GIA = PROCESS PARAMETER .....	95
GLA, GLB = SYSTEM PARAMETER (CH1...CH2) .....	101
GNA, GNB = SENSOR DATA (CH1...CH2) .....	103
JAA = SYSTEM .....	110
JAB = SYSTEM CH2 .....	111
JCA = VERSION INFO .....	113

## Function groups

000 = MAIN VALUES .....	11
006 = MAIN VALUES CH2 .....	11
008 = CALCULATED MAIN VALUES .....	12
040 = CONFIGURATION .....	13
042 = ADDITIONAL CONFIGURATION .....	15
200 = BASIC CONFIGURATION .....	21
202 = UNLOCKING/LOCKING .....	23
204 = OPERATION .....	24
220 = CONFIGURATION .....	25
222 = MULTIPLEX .....	27
240 = CONFIGURATION .....	28
242 = MULTIPLEX .....	30
260 = CONFIGURATION .....	32
262 = MULTIPLEX .....	34
400 = CONFIGURATION .....	37
404 = OPERATION .....	46
408 = INFORMATION .....	47
420 = CONFIGURATION .....	48
430 = OPERATION .....	69
438 = INFORMATION .....	72
470 = CONFIGURATION .....	73
474 = OPERATION .....	77
478 = INFORMATION .....	79
500 = CONFIGURATION .....	84
504 = OPERATION .....	85
508 = INFORMATION .....	86
610 = CONFIGURATION .....	88
612 = FUNCTION BLOCKS .....	89
613 = TOTALIZER .....	90
614 = OPERATION .....	93
616 = INFORMATION .....	94
640 = CONFIGURATION .....	95
648 = ADJUSTMENT .....	97
654 = LIQUID DATA .....	98
660 = CONFIGURATION .....	101
680 = CONFIGURATION .....	103
681 = MEASURING TUBE .....	104
688 = SENSOR PARAMETER .....	105
689 = CALIBRATION DATA .....	107
691 = ORIG. FACT. CALIBRATION .....	108
800 = CONFIGURATION .....	110
804 = OPERATION .....	111
810 = DEVICE .....	113
820 = SENSOR .....	113
822 = AMPLIFIER .....	113
824 = F-CHIP .....	114
830 = I/O MODULE .....	114

**Functions 0...**

0007 = SIGNAL STRENGTH CH1 .....	11
0067 = SIGNAL STRENGTH CH2 .....	11
0083 = AVERAGE VOLUME FLOW .....	12
0086 = AVERAGE SOUND VELOCITY .....	12
0087 = AVERAGE FLOW VELOCITY .....	12
0402 = UNIT VOLUME FLOW .....	13
0403 = UNIT VOLUME .....	14
0422 = UNIT TEMPERATURE .....	15
0423 = UNIT VISCOSITY .....	15
0424 = UNIT LENGTH .....	15
0425 = UNIT VELOCITY .....	15
0429 = FORMAT DATE/TIME .....	16

**Functions 1...**

1002 = QUICK SETUP COMMISSIONING .....	17
1009 = T-DAT SAVE/LOAD .....	17

**Functions 2...**

2000 = LANGUAGE .....	21
2002 = DISPLAY DAMPING .....	21
2003 = CONTRAST LCD .....	22
2004 = BACKLIGHT .....	22
2009 = X-LINE CALCULATED MAIN VALUES .....	22
2020 = ACCESS CODE .....	23
2021 = DEFINE PRIVATE CODE .....	23
2022 = STATUS ACCESS .....	23
2023 = ACCESS CODE COUNTER .....	23
2040 = TEST DISPLAY .....	24
2200 = ASSIGN .....	25
2201 = 100% VALUE .....	25
2202 = FORMAT .....	26
2220 = ASSIGN .....	27
2221 = 100% VALUE .....	27
2222 = FORMAT .....	27
2400 = ASSIGN .....	28
2401 = 100% VALUE .....	28
2402 = FORMAT .....	29
2403 = DISPLAY MODE .....	29
2420 = ASSIGN .....	30
2421 = 100% VALUE .....	30
2422 = FORMAT .....	31
2423 = DISPLAY MODE .....	31
2600 = ASSIGN .....	32
2601 = 100% VALUE .....	33
2602 = FORMAT .....	33
2603 = DISPLAY MODE .....	33
2620 = ASSIGN .....	34
2621 = 100% VALUE .....	34
2622 = FORMAT .....	35
2623 = DISPLAY MODE .....	35

**Functions 4...**

4000 = ASSIGN CURRENT OUTPUT .....	37
4001 = CURRENT SPAN .....	38
4002 = VALUE 0_4 mA .....	39, 40
4003 = VALUE 20 mA .....	41
4004 = MEASURING MODE .....	42, 43
4005 = TIME CONSTANT .....	44
4006 = FAILSAFE MODE .....	45

4040 = ACTUAL CURRENT .....	46
4041 = SIMULATION CURRENT .....	46
4042 = VALUE SIMULATION CURRENT .....	46
4080 = TERMINAL NUMBER .....	47
4200 = OPERATION MODE .....	48
4201 = ASSIGN FREQUENCY .....	48
4202 = START VALUE FREQUENCY .....	48
4203 = END VALUE FREQUENCY .....	49
4204 = VALUE-F LOW .....	49
4205 = VALUE-F HIGH .....	50
4206 = MEASURING MODE .....	52
4207 = OUTPUT SIGNAL .....	54
4208 = TIME CONSTANT .....	57
4209 = FAILSAFE MODE .....	57
4211 = FAILSAFE VALUE .....	57
4221 = ASSIGN PULSE .....	58
4222 = PULSE VALUE .....	58
4223 = PULSE WIDTH .....	59
4225 = MEASURING MODE .....	60
4226 = OUTPUT SIGNAL .....	61
4227 = FAILSAFE MODE .....	64
4241 = ASSIGN STATUS .....	65
4242 = ON-VALUE .....	65
4243 = SWITCH-ON DELAY .....	66
4244 = OFF-VALUE .....	66
4245 = SWITCH-OFF DELAY .....	66
4246 = MEASURING MODE .....	67
4247 = TIME CONSTANT .....	68
4301 = ACTUAL FREQUENCY .....	69
4302 = SIMULATION FREQUENCY .....	69
4303 = VALUE SIMULATION FREQUENCY .....	69
4322 = SIMULATION PULSE .....	70
4323 = VALUE SIMULATION PULSE .....	70
4341 = ACTUAL STATUS .....	71
4342 = SIMULATION SWITCH POINT .....	71
4343 = VALUE SIMULATION SWITCH POINT .....	71
4380 = TERMINAL NUMBER .....	72
4700 = ASSIGN RELAY .....	73
4701 = ON-VALUE .....	74
4702 = SWITCH-ON DELAY .....	74
4703 = OFF-VALUE .....	74
4704 = SWITCH-OFF DELAY .....	75
4705 = MEASURING MODE .....	75
4706 = TIME CONSTANT .....	76
4740 = ACTUAL STATUS RELAY .....	77
4741 = SIMULATION SWITCH POINT .....	77
4742 = VALUE SIMULATION SWITCH POINT .....	78
4780 = TERMINAL NUMBER .....	79

**Functions 5...**

5000 = ASSIGN STATUS INPUT .....	84
5001 = ACTIVE LEVEL .....	84
5002 = MINIMUM PULSE WIDTH .....	84
5040 = ACTUAL STATUS INPUT .....	85
5041 = SIMULATION STATUS INPUT .....	85
5042 = VALUE SIMULATION STATUS INPUT .....	85
5080 = TERMINAL NUMBER .....	86

**Functions 6...**

6100 = TAG NAME .....	88
6101 = FIELDBUS ADDRESS .....	88
6102 = WRITE PROTECTION .....	88
6120 = BLOCK SELECTION .....	89
6121 = OUT VALUE .....	89
6122 = DISPLAY VALUE .....	89
6130 = SELECT TOTALIZER .....	90
6131 = TOTALIZER OUT VALUE .....	90
6132 = OVERFLOW .....	90
6133 = CHANNEL .....	90
6134 = UNIT TOTALIZER .....	91
6135 = SET TOTALIZER .....	91
6136 = PRESET TOTALIZER .....	91
6137 = TOTALIZER MODE .....	92
6140 = SELECTION GSD .....	93
6141 = SET UNIT TO BUS .....	93
6160 = PROFILE VERSION .....	94
6161 = ACTUAL BAUD RATE .....	94
6162 = DEVICE ID .....	94
6163 = CHECK CONFIGURATION .....	94
6400 = ASSIGN LOW FLOW CUT OFF .....	95
6402 = ON-VALUE LOW FLOW CUT OFF .....	95
6403 = OFF-VALUE LOW FLOW CUT OFF .....	95
6404 = PRESSURE SHOCK SUPPRESSION .....	96
6480 = ZEROPOINT ADJUSTMENT .....	97
6540 = LIQUID .....	98
6541 = TEMPERATURE .....	98
6542 = SOUND VELOCITY LIQUID .....	99
6543 = VISCOSITY .....	99
6545 = SOUND VELOCITY NEGATIVE .....	99
6546 = SOUND VELOCITY POSITIVE .....	100
6600 = INSTALLATION DIRECTION SENSOR .....	101
6601 = MEASURING MODE .....	101
6603 = FLOW DAMPING .....	101
6605 = POSITIVE ZERO RETURN .....	102
6800 = K-FACTOR .....	103
6803 = ZERO POINT .....	103
6806 = CO .....	103
6810 = PIPE STANDARD .....	104
6811 = NOMINAL DIAMETER .....	104
6812 = PIPE DIAMETER .....	104
6813 = WALL THICKNESS .....	104
6880 = MEASUREMENT .....	105
6881 = SENSOR TYPE .....	105
6882 = SENSOR CONFIGURATION .....	105
6883 = CABLE LENGTH .....	106
6890 = P-FACTOR .....	107
6891 = ZERO POINT .....	107
6893 = CORRECTION FACTOR .....	107
6910 = CALIBRATION DATE .....	108

**Functions 8...**

8005 = ALARM DELAY .....	110
8007 = PERMANENT STORAGE .....	110
8040 = ACTUAL SYSTEM CONDITION .....	111
8041 = PREVIOUS SYSTEM CONDITIONS .....	111
8042 = SIMULATION FAILSAFE MODE .....	111
8043 = SIMULATION MEASURAND .....	111
8044 = VALUE SIMULATION MEASURAND .....	112
8046 = SYSTEM RESET .....	112
8048 = OPERATION HOURS .....	112
8100 = DEVICE SOFTWARE .....	113
8200 = SERIAL NUMBER .....	113
8222 = SOFTWARE REVISION NUMBER AMPLIFIER ..	113
8225 = SOFTWARE REVISION NUMBER T-DAT .....	113
8226 = LANGUAGE GROUP .....	114
8240 = STATUS F-CHIP .....	114
8300 = I/O MODULE TYPE .....	114
8303 = SOFTWARE REVISION NUMBER I/O MODULE	114





## 12 Index

### A

Active level (status input) .....	84
Actual	
Current (current output) .....	46
Frequency .....	69
Actual baud rate .....	94
Actual status	
Relay output .....	77
Status input .....	85
Status (pulse/frequency output) .....	71
Actual system condition .....	111
Additional configuration .....	15
Additional line (Group CEA)	
Configuration .....	28
Multiplex .....	30
Adjustment	
Function group .....	97
Zero point .....	97
Alarm delay .....	110
Amplifier (version info) .....	113
Assign	
Additional line .....	28
Additional line (Multiplex) .....	30
Current output .....	37
Frequency (Pulse/freq. output) .....	48
Information line .....	32
Information line (Multiplex) .....	34
Low flow cut off .....	95
Main line .....	25
Main line (Multiplex) .....	27
Pulse output .....	58
Relay (relay output) .....	73
Status input .....	84
Status (pulse/frequency output) .....	65
Available functions .....	8
Average flow velocity .....	12
Average sound velocity .....	12
Average volume flow .....	12

### B

Basic configuration (user interface) .....	21
Basic function .....	87
Block	
Basic function .....	87
Display .....	20
Inputs .....	83
Measured variables .....	10
Outputs .....	36
Quick Setup .....	17
Supervision .....	109
Block selection .....	89
Bus address .....	88

### C

Cable length .....	106
Calculated main values (displaying) .....	22
Calibration data .....	107
Calibration date .....	108
Channel .....	90
Check configuration .....	94
Code	
Access .....	23
Access counter .....	23
Configuration	
Additional line .....	28
Current output .....	37
Information line .....	32
Main line .....	25
Process parameter .....	95
PROFIBUS-DP .....	88
PROFIBUS-PA .....	88
Pulse/frequency output .....	48
Relay output .....	73
Sensor data (group GNA, GNB) .....	103
Status input .....	84
System .....	110
System parameter (CH1...CH2) .....	101
System units .....	13
Contrast LCD .....	22
Control (group CAA)	
Basic configuration .....	21
Operation .....	24
Unlocking/locking .....	23
Correction factor .....	107
Current output	
Configuration .....	37
Current span .....	38
Information .....	47
Operation .....	46
C0 .....	103

### D

Damping	
Relay, time constant .....	76
Status output, time constant .....	68
Data transmission .....	93
Define private code .....	23
Device ID .....	94
Device software .....	113
Device (version info) .....	113
Diagram	
Quick Setup Commissioning .....	18
Display	
Calculated main values .....	22
Lighting (back lighting) .....	22
Display damping .....	21
Display lines of local operation .....	8

Display mode			
Additional line	29		
Additional line (Multiplex)	31		
Information line	33		
Information line (Multiplex)	35		
Display value	89		
<b>E</b>			
End value frequency	49		
<b>F</b>			
Factory calibration	108		
Failsafe mode			
Current output	45		
Frequency output	57		
Pulse output	64		
Failsafe value	57		
F-CHIP (version info)	114		
Flow damping	101		
Format			
Additional line	29		
Additional line (Multiplex)	31		
Date/Time	16		
Information line	33		
Information line (Multiplex)	35		
Main line	26		
Main line (Multiplex)	27		
Function group			
Additional configuration	15		
Adjustment	97		
Amplifier	113		
Basic configuration (user interface)	21		
Calculated main values	12		
Calibration data	107		
Configuration	103		
Additional line	28		
Current output	37		
Information line	32		
Main line	25		
Process parameter	95		
PROFIBUS-DP	88		
PROFIBUS-PA	88		
Pulse/freq. output	48		
Relay output	73		
Status input	84		
System	110		
System parameter (CH1...CH2)	101		
System units	13		
F-CHIP	114		
Function blocks			
PROFIBUS-DP	89		
PROFIBUS-PA	89		
Information			
Current output	47		
PROFIBUS-DP	94		
PROFIBUS-PA	94		
Pulse/Frequency output	72		
Relay output	79		
Status input	86		
I/O Module	114		
Liquid data	98		
Main values CH1	11		
Main values CH2	11		
Measuring tube	104		
Multiplex			
Additional line	30		
Information line	34		
Main line	27		
Operation			
Current output	46		
Display	24		
PROFIBUS-DP	93		
PROFIBUS-PA	93		
Pulse/frequency output	69		
Relay output	77		
Status input	85		
System (system CH2)	111		
Original factory calibration	108		
Sensor	113		
Sensor parameter	105		
Totalizer			
PROFIBUS-DP	90		
PROFIBUS-PA	90		
Unlocking/locking (user interface)	23		
Function matrix			
General layout	6		
Identification code	7		
Overview	9		
<b>G</b>			
Group			
Additional line	28		
Control (User interface)	21		
Current output	37		
Information line	32		
Main line	25		
Measuring values	11		
Process parameter	95		
PROFIBUS-DP/-PA	88		
Pulse/frequency output	48		
Relay output	73		
Sensor data (CH1...CH2)	103		
Status input	84		
System parameter (CH1...CH2)	101		
System units	13		
System (system CH2)	110		
Version info	113		
GSD selection	93		
<b>I</b>			
Illustration of function description	7		
Information			
Current output	47		
Pulse/frequency output	72		
Relay output	79		
Status input	86		
Information line (Group CGA)			
Configuration	32		
Multiplex	34		

Inputs .....	83	Operation .....	
Installation direction sensor .....	101	Current output .....	46
I/O Module .....	114	Display .....	24
<b>K</b>		PROFIBUS-DP .....	93
K-Factor .....	103	PROFIBUS-PA .....	93
<b>L</b>		Pulse/frequency output .....	69
Language .....	21	Relay output .....	77
Factory settings (country) .....	115	Status input .....	85
Language group .....	114	System (system CH2) .....	111
Liquid .....	98	Operation hours .....	112
Liquid data (function group) .....	98	Operation mode .....	
Local operation (display lines) .....	8	Pulse/frequency output .....	48
Low flow cut off .....		OUT Value .....	89
Assign .....	95	OUT Value totalizer .....	90
Off-value .....	95	Output signal .....	
On-value .....	95	Frequency output .....	54
<b>M</b>		Pulse output .....	61
Main line (Group CCA) .....		Outputs .....	36
Configuration .....	25	Overflow totalizer .....	90
Multiplex .....	27	<b>P</b>	
Main values CH1 .....	11	Permanent storage .....	110
Main values CH2 .....	11	P-factor .....	107
Measured variables (block A) .....	10	Pipe diameter .....	104
Measurement .....	105	Pipe standard .....	104
Measuring mode .....	101	Positive zero return .....	102
Current output .....	42, 43	Pressure shock suppression .....	96
Frequency (Pulse/freq. output) .....	52, 53	Previous system conditions .....	111
Pulse output .....	60	Process parameter (CH1...CH2), (Group GIA, GIB) .....	
Relay output .....	75	Adjustment .....	97
Status (pulse/frequency output) .....	67	Configuration .....	95
Measuring tube .....	104	Liquid data .....	98
Measuring values (Group AAA) .....		PROFIBUS-DP (Group GBA) .....	
Calculated main values .....	12	Configuration .....	88
Main values CH1 .....	11	Function blocks .....	89
Main values CH2 .....	11	Information .....	94
Minimum pulse width .....	84	Operation .....	93
Multiplex .....		Totalizer .....	90
Additional line .....	30	PROFIBUS-PA (Group GCA) .....	
Information line .....	34	Configuration .....	88
Main line .....	27	Function blocks .....	89
<b>N</b>		Information .....	94
Nominal diameter .....	104	Operation .....	93
<b>O</b>		Totalizer .....	90
Off-value .....		Profile version .....	94
Relay output .....	74	Pulse value .....	58
Status (pulse/frequency output) .....	66	Pulse width .....	59
Off-value, low-flow cutoff .....	95	Pulse/frequency output .....	
On-value .....		Configuration .....	48
Relay output .....	74	Information .....	72
Status (pulse/frequency output) .....	65	Operation .....	69
On-value, low-flow cutoff .....	95	<b>Q</b>	
		Quick Setup (Block B) .....	
		Commission .....	17
		Overview .....	17

**R**

Relay output	
Configuration	73
General	80
Information	79
Operation	77
Switching response	81

**S**

Select totalizer	90
Selection GSD	93
Sensor configuration	105
Sensor data (group GNA, GNB)	
Calibration data	107
Configuration	103
Measuring tube	104
Original factory calibration	108
Sensor parameter	105
Sensor parameter	105
Sensor type	105
Sensor (version info)	113
Serial number sensor	113
Signal strength	
Channel 1	11
Channel 2	11
Simulation	
Current (current output)	46
Failsafe mode	111
Frequency	69
Measured variable	111
Pulse	70
Relay output switch point	77
Status input	85
Status (pulse/frequency output)	71
Value measured variable	112
Software revision number	
Amplifier	113
I/O Module	114
T-DAT	113
Sound velocity	
Liquid	99
Negative	99
Positive	100
Start value frequency	48
Status access	23
Status F-CHIP	114
Status input	
Configuration	84
Information	86
Operation	85
Supervision (Block J)	109
Switching action of the relay output	81
Switch-off delay	
Relay output	75
Status (pulse/frequency output)	66
Switch-on delay	
Relay output	74
Status (pulse/frequency output)	66

## System condition

Actual	111
Previous	111
System parameter (Group GLA, GLB)	
Configuration	101
System units (Group ACA)	
Additional configuration	15
Configuration	13
System (group JAA)	
Configuration	110
Reset	112
System (system CH2) (Group JAA, JAB)	
Operation	111

**T**

Tag name	88
T-DAT Save/Load	17
Temperature	98
Terminal number	
Current output	47
Pulse/Frequency output	72
Relay output	79
Status input	86
Test display	24
Time constant	
Current output	44
Frequency output	57
Relay output	76
Status (pulse/frequency output)	68
Totalizer	
Default value	91
Mode	92
Operating mode	91
Options	90
OUT Value	90
Overflow	90
Unit	91
Type	
I/O Module	114

**U**

Unit	
Length	15
Temperature	15
Totalizer	91
Velocity	15
Viscosity	15
Volume	14
Volume flow	13
Unlocking/locking (user interface)	23
User interface (Block C)	20

**V**

Value simulation	
Current (current output)	46
Frequency	69
Pulse	70
Relay output switch point	78
Status input	85
Status (pulse/frequency output)	71

Value 0_4 mA	
Current output .....	39
Value 20 mA	
Current output .....	41
Value-f high .....	50
Value-f low .....	49
Version-Info (group JCA)	
Amplifier .....	113
F-CHIP .....	114
I/O Module .....	114
Sensor .....	113
Viscosity .....	99
<b>W</b>	
Wall thickness .....	104
Write protection .....	88
<b>Z</b>	
Zero point .....	103, 107
Zero point adjustment .....	97
<b>Numbers</b>	
100% value flow	
Additional line .....	28
Additional line (Multiplex) .....	30
Information line .....	33
Information line (Multiplex) .....	34
Main line .....	25
Main line (Multiplex) .....	27

[www.endress.com/worldwide](http://www.endress.com/worldwide)

---

**Endress+Hauser**   
People for Process Automation

---