


# Brief Operating Instructions Micropilot S FMR540

## Level-Radar

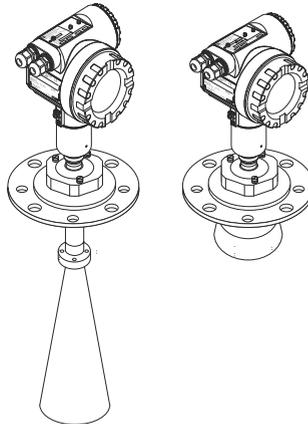

These Instructions are Brief Operating Instructions; they do not replace the Operating Instructions included in the scope of supply.

For detailed information, refer to the Operating Instructions and other documentation on the CD-ROM provided or visit "[www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)".

# Table of contents

|     |   |    |
|-----|---|----|
| 1   | Safety instructions                       | 3  |
| 1.1 | Designated use                            | 3  |
| 1.2 | Installation, commissioning and operation | 3  |
| 1.3 | Operational safety and process safety     | 3  |
| 1.4 | Return                                    | 4  |
| 1.5 | Notes on safety conventions and symbols   | 4  |
| 2   | Installation instructions                 | 7  |
| 2.1 | Quick installation guide                  | 7  |
| 2.2 | Incoming acceptance, transport, storage   | 7  |
| 2.3 | Installation instructions                 | 8  |
| 2.4 | Post-installation check                   | 18 |
| 3   | Wiring                                    | 19 |
| 3.1 | Quick wiring guide                        | 19 |
| 3.2 | Connecting the measuring unit             | 22 |
| 3.3 | Equipotential bonding                     | 23 |
| 3.4 | Degree of protection                      | 23 |
| 3.5 | Post-connection check                     | 23 |
| 4   | Operation                                 | 24 |
| 4.1 | General structure of the operating menu   | 24 |
| 4.2 | Display and operating elements            | 25 |
| 5   | Commissioning                             | 28 |
| 5.1 | Function check                            | 28 |
| 5.2 | Switching on the measuring device         | 28 |
| 5.3 | Overview Basic Setup                      | 29 |
| 5.4 | Basic Setup with device display VU331     | 31 |
| 5.5 | Envelope curve with device display VU331  | 41 |

# 1 Safety instructions

## 1.1 Designated use

The Micropilot S is a compact radar level transmitter for the continuous, contactless measurement of predominantly solids. The device can also be freely mounted outside closed metal vessels because of its operating frequency in the K-band and a maximum radiated pulsed energy of 1 mW (average power output 1  $\mu$ W). Operation is completely harmless to humans and animals.

## 1.2 Installation, commissioning and operation

The Micropilot S has been designed to operate safely in accordance with current technical, safety and EU standards. If installed incorrectly or used for applications for which it is not intended, however, it is possible that application-related dangers may arise, e.g. product overflow due to incorrect installation or calibration. For this reason, the device must be installed, connected, operated and maintained according to the instructions in this manual: personnel must be authorised and suitably qualified. The manual must have been read and understood, and the instructions followed. Modifications and repairs to the device are permissible only when they are expressly approved in the manual.

## 1.3 Operational safety and process safety

Alternative monitoring measures must be taken to ensure operational safety and process safety during configuration, testing and maintenance work on the device.

### 1.3.1 Hazardous areas

Measuring systems for use in hazardous environments are accompanied by separate "Ex documentation", which is an integral part of this Operating Manual. Strict compliance with the installation instructions and ratings as stated in this supplementary documentation is mandatory.

- Ensure that all personnel are suitably qualified.
- Observe the specifications in the certificate as well as national and local regulations.

### 1.3.2 FCC approval

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**⚠ CAUTION**

Changes or modifications not expressly approved by the part responsible for compliance could void the user’s authority to operate the equipment.

## 1.4 Return

Follow the instructions on returning the device as outlined in the Operating Instructions (BA00326F/00/EN) on the CD-ROM provided.

## 1.5 Notes on safety conventions and symbols

In order to highlight safety-relevant or alternative operating procedures in the manual, the following conventions have been used, each indicated by a corresponding symbol in the margin.

### 1.5.1 Safety symbols

| Symbol  | Meaning  |
|---|--|
| <br>A0011189-EN | <b>DANGER!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury. |
| <br>A0011190-EN | <b>WARNING!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
| <br>A0011191-EN | <b>CAUTION!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.  |
| <br>A0011192-EN | <b>NOTICE!</b><br>This symbol contains information on procedures and other facts which do not result in personal injury.                   |

### 1.5.2 Electrical symbols

| Symbol  | Meaning  |
|---|--|
| <br>A0018339 | <b>Protective ground connection</b><br>A terminal which must be connected to ground prior to establishing any other connections. |

### 1.5.3 Tool symbols

| Symbol  | Meaning   |
|---|-----------|
| <br>A0011221 | Allen key |

### 1.5.4 Symbols for certain types of information

| Symbol  | Meaning  |
|---|--|
| <br>A0011182 | <b>Allowed</b><br>Indicates procedures, processes or actions that are allowed.     |
| <br>A0011184 | <b>Forbidden</b><br>Indicates procedures, processes or actions that are forbidden. |
| <br>A0011193 | <b>Tip</b><br>Indicates additional information.                                    |
| <br>A0015484 | <b>Reference to page</b><br>Refers to the corresponding page number.               |
| 1. , 2. , 3. , ...  | Series of steps  |

### 1.5.5 Symbols in graphics


| Symbol             | Meaning         |
|--------------------|-----------------|
| 1, 2, 3, 4, ...    | Item numbers    |
| 1. , 2. , 3. , ... | Series of steps |
| A, B, C, D, ...    | Views           |

1.5.6 Symbols at the device

| Symbol  | Meaning  |
|---|--|
|  <p style="text-align: center; font-size: small;">A0019159</p>  | <p><b>Safety instructions</b><br/>Observe the safety instructions contained in the associated Operating Instructions.</p>                      |
|  <p style="text-align: center; font-size: small;">A0019221</p> | <p>Temperature resistance of the connection cables<br/>Specifies the minimum value of the temperature resistance of the connection cables.</p> |

## 2 Installation instructions

### 2.1 Quick installation guide

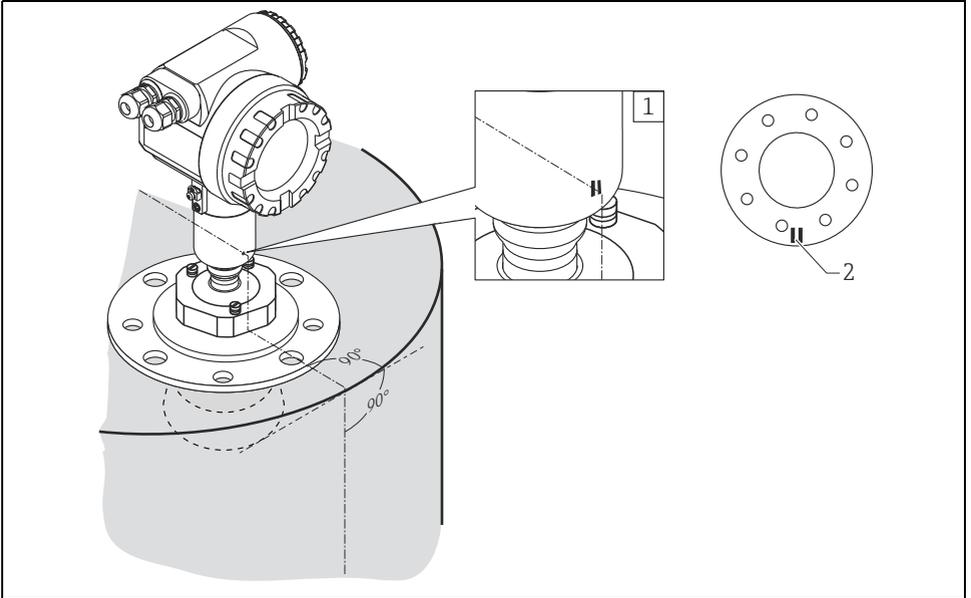

- 1 Marker at sensor  
2 Marker at flange

A0020810

### 2.2 Incoming acceptance, transport, storage

#### 2.2.1 Incoming acceptance

Check the packing and contents for any signs of damage. Check the shipment, make sure nothing is missing and that the scope of supply matches your order.

#### 2.2.2 Transport

##### **⚠ CAUTION**

Follow the safety instructions and transport conditions for devices of more than 18 kg (39.69 lbs).

#### 2.2.3 Storage

Pack the measuring device so that is protected against impacts for storage and transport. The original packing material provides the optimum protection for this. The permissible storage temperature is  $-40$  to  $+80$  °C ( $-40$  to  $+176$  °F).

## 2.3 Installation instructions

### 2.3.1 Mounting kit

For the mounting, you will require the following tool:

- The tool for flange mounting
- 90 mm wrench for adjustment of the alignment device (only for devices with alignment device)
- 4 mm (0.1") Allen wrench for turning the housing


### 2.3.2 Engineering hints

#### Tank installations

- Avoid any installations (1), like limit switches, temperature sensors, etc., inside the signal beam ("Beam angle", → 9).
- It is essential that HiHi alarm is below the blocking distance (BD) and the safety distance (SD).
- Symmetrical installations (2), e.g. vacuum rings, heating coils, baffles, etc., can also interfere with the measurement.

#### Optimization options

- Antenna size: the bigger the antenna, the smaller the beam angle, the less interference echoes.
- Mapping: the measurement can be optimized by means of electronic suppression of interference echoes.
- Antenna alignment: refer to BA00326F/00/EN.
- Stilling well: a stilling well can always be used to avoid interference. The FMR532 with planar antenna is recommended for stilling wells with a diameter DN150 (6") and larger.
- Metallic screens (3) mounted at a slope spread the radar signals and can, therefore, reduce interference echoes.

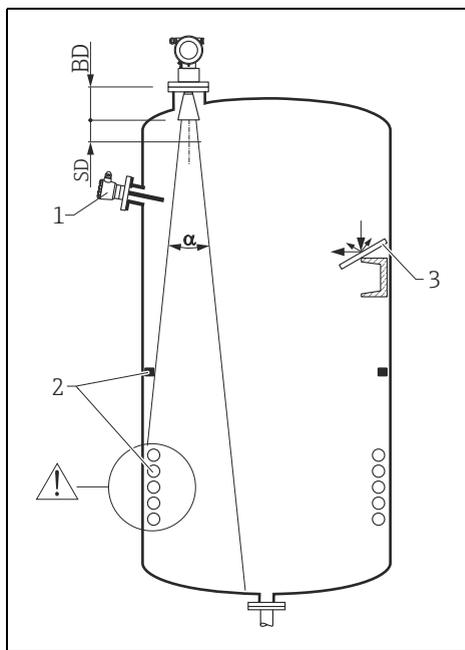


A0020450

Please contact Endress+Hauser for further information.

### 2.3.3 Orientation

#### Orientation

- Recommended distance (1) wall - **outer edge** of nozzle:  $\sim 1/6$  of tank diameter ("Beam angle",  $\rightarrow$  9).
- Not in the centre (3), interference can cause signal loss.
- Not above the fill stream (4).
- It is recommended to use a weather protection cover (2) in order to protect the transmitter from direct sun or rain. Assembly and disassembly is simply done by means of a tension clamp (see BA00326F/00/EN on CD-ROM).

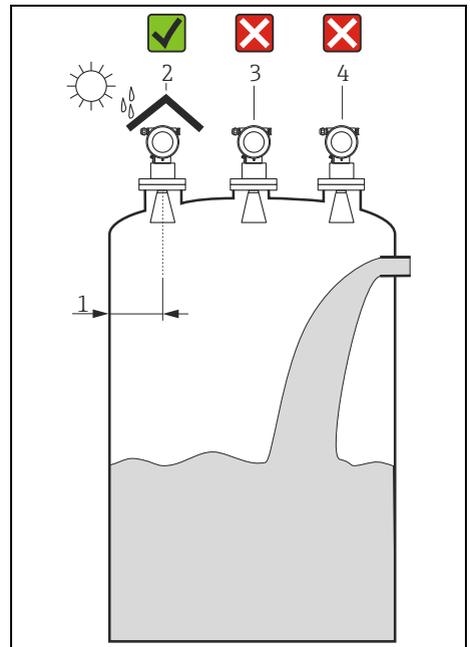


A0020541

### 2.3.4 Beam angle

The beam angle is defined as the angle  $\alpha$  where the energy density of the radar waves reaches half the value of the maximum energy density (3dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations. Beam diameter  $W$  is a function of antenna type (beam angle  $\alpha$ ) and measuring distance  $D$ . The recommended distance to the tank wall is indicated in the tables below. It is strongly recommended to avoid any mechanical obstacles within the highlighted area.

| <b>Horn antenna</b>                     |             |
|---|-------------|
| <b>Antenna size</b>                     | 100 mm (4") |
| <b>Beam angle (<math>\alpha</math>)</b> | 8°          |


| Measuring distance (D) | Beamwidth diameter (W) | Recommended distance to wall |                 |
|------------------------|------------------------|------------------------------|-----------------|
|                        |                        | 0° tilting                   | 3° tilting      |
| 5 m (16 ft)            | 0,70 m (2.3 ft)        | 0,89 m (2.9 ft)              | 0,62 m (2 ft)   |
| 10 m (33 ft)           | 1,40 m (2.6 ft)        | 1,77 m (5.8 ft)              | 1,23 m (4 ft)   |
| 15 m (49 ft)           | 2,10 m (6.9 ft)        | 2,65 m (8.7 ft)              | 1,85 m (6.1 ft) |
| 20 m (66 ft)           | 2,80 m (9.2 ft)        | 3,53 m (12 ft)               | 2,46 m (8.1 ft) |
| 25 m (82 ft)           | 3,50 m (11 ft)         | 4,41 m (14 ft)               | 3,07 m (10 ft)  |
| 30 m (98 ft)           | 4,20 m (14 ft)         | 5,29 m (17 ft)               | 3,69 m (12 ft)  |

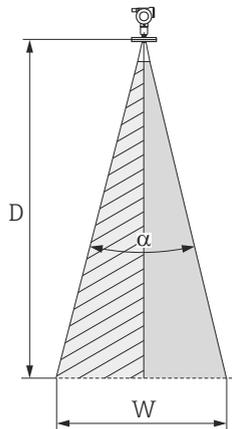

A0020805

| <b>Parabolic antenna</b>                |             |              |
|---|-------------|--------------|
| <b>Antenna size</b>                     | 200 mm (8") | 250 mm (10") |
| <b>Beam angle (<math>\alpha</math>)</b> | 4.4°        | 3.3°         |


| Measuring distance (D) | Recommended distance to wall |                 |
|------------------------|------------------------------|-----------------|
|                        |                              |                 |
| 5 m (16 ft)            | 0,35 m (1.1 ft)              | 0,2 m (0.7 ft)  |
| 10 m (33 ft)           | 0,70 m (2.3 ft)              | 0,5 m (1.6 ft)  |
| 15 m (49 ft)           | 1,05 m (3.4 ft)              | 0,75 m (2.5 ft) |
| 20 m (66 ft)           | 1,40 m (2.6 ft)              | 1,05 m (3.4 ft) |
| 25 m (82 ft)           | 1,75 m (5.7 ft)              | 1,3 m (4.3 ft)  |
| 30 m (98 ft)           | 2,10 m (6.9 ft)              | 1,6 m (5.2 ft)  |
| 35 m (115 ft)          | 2,45 m (8 ft)                | 1,85 m (6.1 ft) |
| 40 m (131 ft)          | 2,80 m (9.2 ft)              | 2,10 m (6.9 ft) |

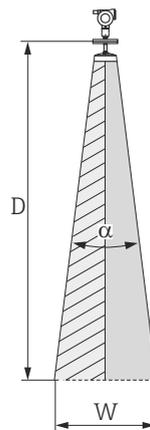

A0020806

### 2.3.5 Measuring conditions

- Tank diameter and height should be at least dimensioned such that a reflection of the radar signal on both sides of the tank can be avoided.
- In case of media with a low dielectric constant (groups A and B), the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see Fig.) above the tank bottom in these applications.
- In principle, it is possible to measure up to the tip of the antenna with the FMR540. However, due to corrosion and build-up, the end of the measuring range should not be any closer than **A** (see Fig.).

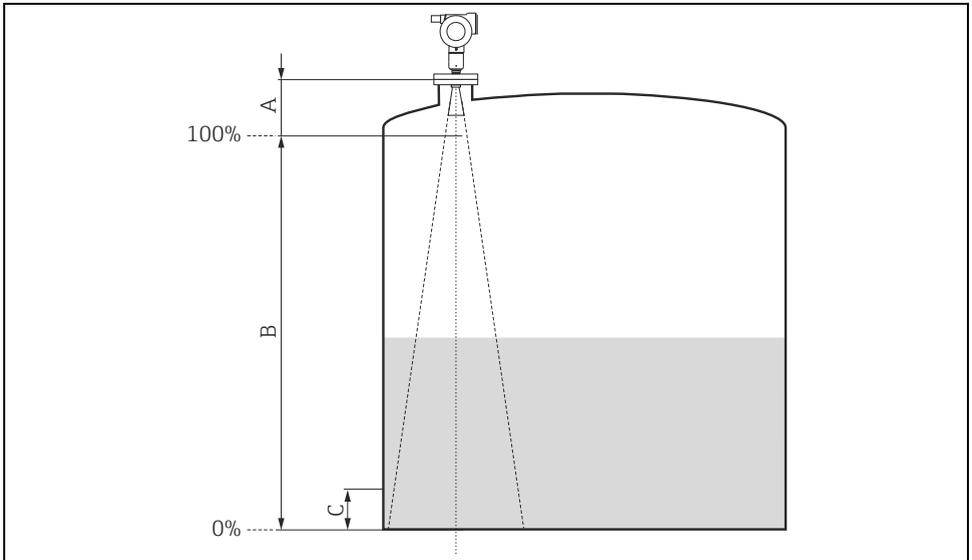

A0020737

| 1)   | A [mm (in)]     |                      |                       | B [m (ft)]   | C [mm (in)] |
|--|-----------------|----------------------|-----------------------|--------------|-------------|
|  | 4" Horn antenna | 8" Parabolic antenna | 10" Parabolic antenna | All antennas |             |
| <b>FMR540 (without extension)</b>            | 870 (34.3)      | 502 (19.8)           | 530 (20.9)            | >0.5 (1.6)   | >300 (11.8) |
| <b>FMR540 with Extension 150 mm (5.9 in)</b> | 1020 (40.2)     | 652 (25.7)           | 680 (26.8)            | >0.5 (1.6)   | >300 (11.8) |
| <b>FMR540 with Extension 250 mm (9.8 in)</b> | 1120 (44.1)     | 752 (29.6)           | 780 (30.7)            | >0.5 (1.6)   | >300 (11.8) |
| <b>FMR540 with Extension 450 mm (18 in)</b>  | 1320 (52.0)     | 952 (37.5)           | 980 (38.6)            | >0.5 (1.6)   | >300 (11.8) |

1) All values are based on reference conditions.

## Behaviour if measuring range is exceeded


The behaviour in case of the measuring range being exceeded can be freely set:

The default setting is a current of 22 mA and the generation of a digital warning (E651).

### 2.3.6 Standard installation FMR540 with horn antenna

#### Standard installation FMR540 with horn antenna

- Observe installation instructions, → 8.
- Marker must be aligned towards tank wall. The marker is located clearly visible on the sensor neck or the flange.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment.
- Adjust vertical sensor alignment in case the flange is not parallel to the face is medium surface.
- The horn antenna should protrude from the nozzle. If necessary, choose version with antenna extension. Please contact Endress+Hauser for application with higher nozzle.
- The horn antenna should be installed with 3° inclination towards the tank center. To avoid interference reflections or for optimum alignment within the tank, the FMR540 with optional alignment device can be swiveled by 15° in all directions. For more informations please see Operating Instructions KA00274F/00/A2. Please contact Endress+Hauser Service Organization for commissioning.

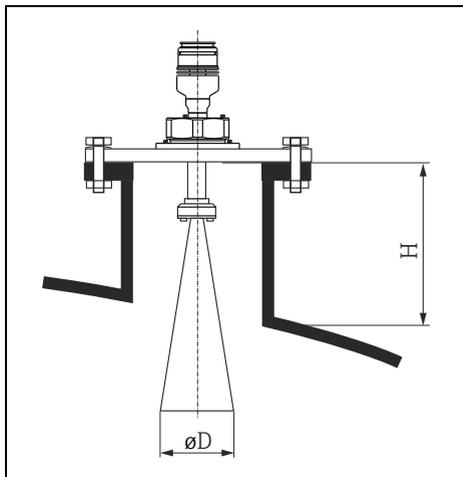

A0020809


|   |                    |
|---|--------------------|
| <b>Antenna size</b>                               | <b>100 mm (4")</b> |
| <b>D [mm (in)]</b>                                | 95 (3.74)          |
| <b>H [mm (in)]</b><br>(without antenna extension) | < 430 (16.9)       |

### 2.3.7 Standard installation FMR540 with parabolic antenna

- Observe installation instructions, → 8.
- Marker is aligned towards tank wall.  
The marker is located clearly visible on the sensor neck or the flange.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment.
- Ideally the parabolic antenna should protrude from the nozzle (1). Particularly when using the alignment device, please ensure that the parabolic reflector is protruding from the nozzle/roof so as not to inhibit alignment.

**i** For application with higher nozzle install parabolic antenna completely in the nozzle (B), including RF-wave guide.

- The parabolic antenna should be installed vertically.  
To avoid interference reflections or for optimum alignment within the vessel, the FMR540 with optional alignment device can be swiveled by 15° in all directions.  
For more informations please see Operating Instructiosn KA00274F/00/A2.  
Please, contact Endress+Hauser Service organization for commissioning.

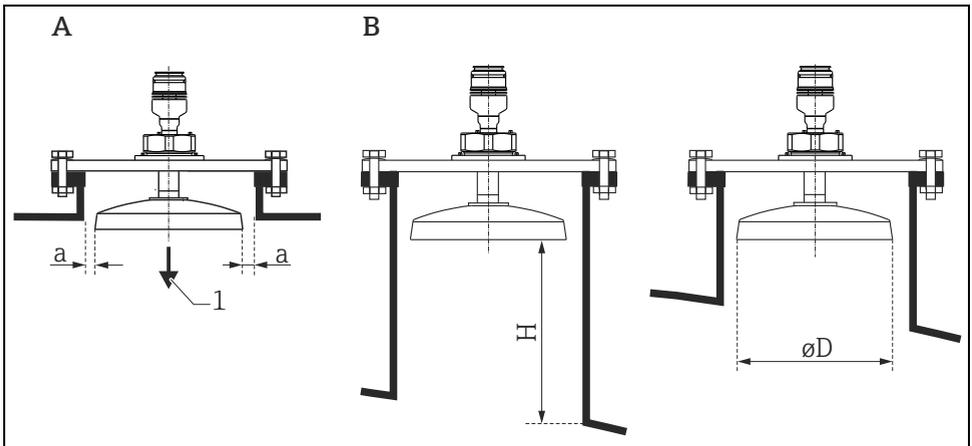


- A Antenne ragt aus dem Stutzen  
 B Einbau der Antenne im Stutzen  
 1 Einbau senkrecht zur Flüssigkeitsoberfläche  
 a Abstand beachten

A0020808

| Antenna size                               | 200 mm (8")  | 250 mm (10") |
|--|--------------|--------------|
| D [mm (in)]                                | 173 (6.81)   | 236 (9.29)   |
| H [mm (in)]<br>(without antenna extension) | < 200 (7.87) | < 200 (7.87) |

### 2.3.8 FMR540 with alignment device

Micropilot S should be installed vertically towards the Liquid surface for best measuring performance of  $\pm 1$  mm (0.04 in). Using the alignment device it is possible to tilt the antenna axis by up to  $15^\circ$  in all directions. The alignment device is used for the optimum alignment of the radar beam to the liquid surface. The Sensor should be positioned vertical to the liquid surface in inclination of  $0^\circ$  for Parabolic Antenna and up to  $3^\circ$  for Horn Antenna.

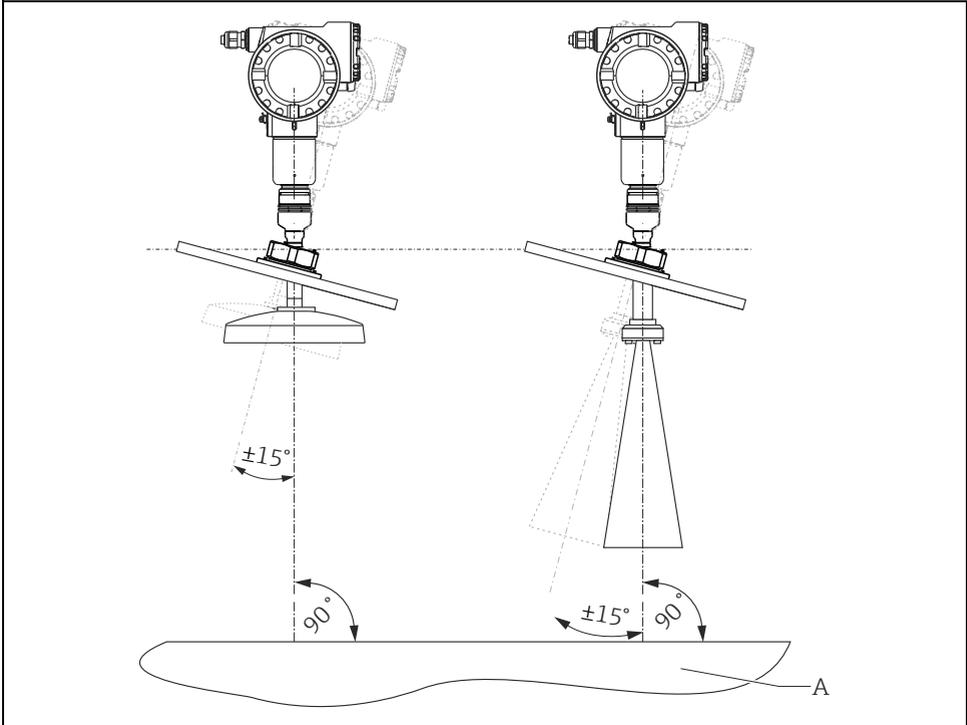

A Medium

A0020807

To align the antenna as precisely as possible, it is recommended to use the sensor alignment tool, which is available as an accessory.

For more informations please see instructions in KA00274F/00/A2.

In case of custody Application, the screws must be locked with wires.

### 2.3.9 Sensor alignment tool for alignment device

A sensor alignment tool (1) is recommended to be used at the time of installation for FMR540 with alignment device.

#### Alignment procedure

**i** This procedure is only applicable to the sensors purchased with alignment device (3). To carry out this procedure requires an accessory from Endress+Hauser, sensor alignment tool (1) for Micropilot S FMR540.

Before starting this procedure, please observe Micropilot S FMR540 has been mounted on the tank in proper position and all flange bolts (2) are tightened.

Tools: 90 mm open wrench

Accessory Package contains:


Sensor alignment tool (part no. 52026756)

Description of procedure "Sensor Alignment using Sensor alignment tool"


(KA00274F/00/A2 part no. 52027425)

1. Loosen the nut (3), so that the FMR540 can tilt smoothly.
2. Observe the sensor can smoothly tilt its position. The nut should not be too loose.

Tilt the Micropilot S to approximately vertical to the medium surface (A) or horizontal plane.

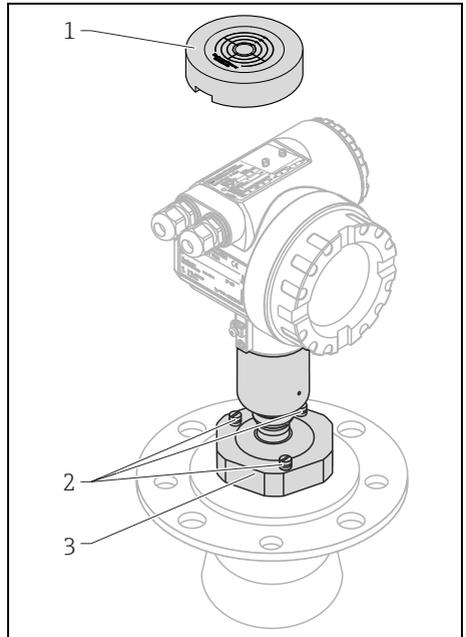


A0021554

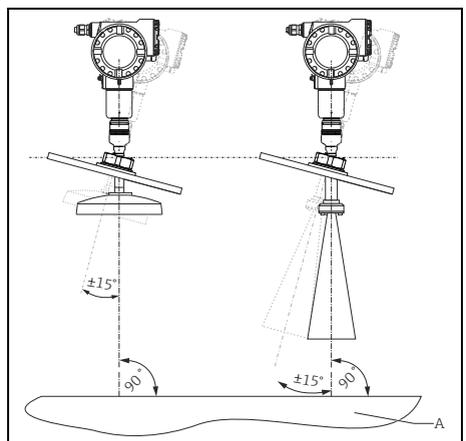

A0020807

3. Place the Sensor alignment tool (1) for Micropilot S FMR540. Please, note to avoid any obstacles between the backside of the Alignment tool and the nameplate of Micropilot S FMR540.

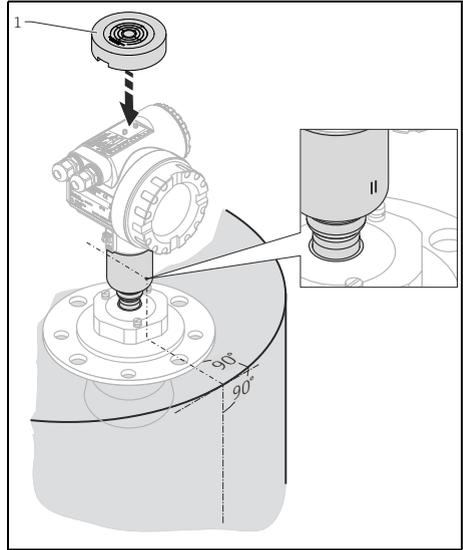

A0021550


4. Micropilot S FMR540 with Horn Antenna: Tilt the FMR540 targeting the direction of tank center up to the position where the angle indicators' s outer circle reaches the circle of 3 deg (4).

**i** Exceeding the 3 degree position may cause a weaker signal (or loss of signal).

Micropilot S FMR540 with Parabolic Antenna:

Tilt the FMR540 to the position where the bubble comes into the center (5) of the inclination indicator (0 deg).

Gradually tighten the nut of the alignment tool and make sure to keep the position of 0 degree/3 degree inclination.

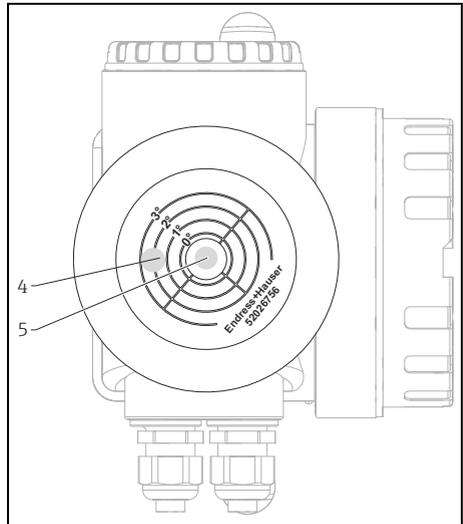


A0021415

After tightening the nut, check if the sensor cannot tilt and change its position. Torque for the nut: 80 to 85 Nm (59 to 62.69 lbf ft). If it is required by the local custody transfer authority, please seal the alignment device at the sealing screws using the provided wires and seal metals.

### 2.3.10 Sealing for custody transfer applications

The alignment device can be sealed using the provided slotted capstan screws. The seal wires must be installed against the open direction in order to assure that a loosening of the alignment device is not possible.

It is recommended to seal at least two of the three sealing points provided.

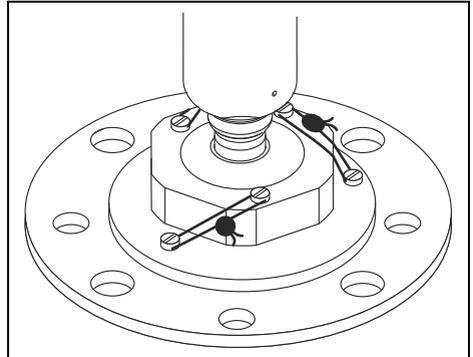


A0021559

### 2.3.11 Turn housing

After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment. Proceed as follows to turn the housing to the required position:

1. Undo the allen screw
2. Turn the housing in the required direction
3. Tighten up the allen screw strongly by hand

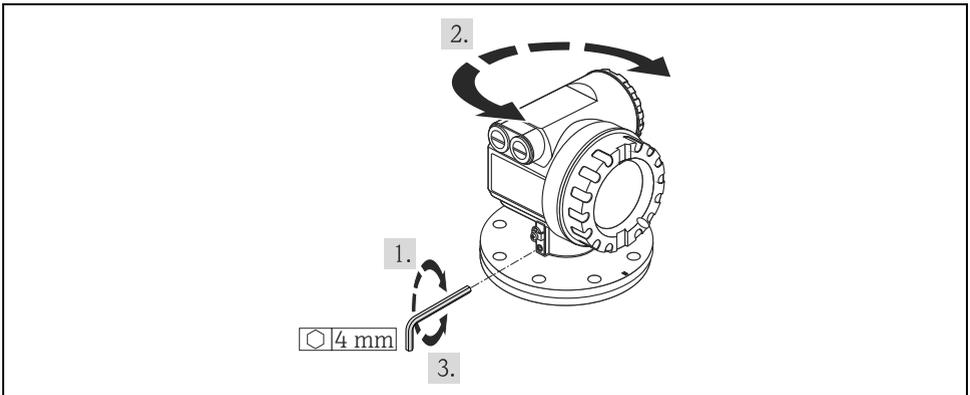

A0020470

## 2.4 Post-installation check

After the measuring device has been installed, perform the following checks:

- Is the measuring device damaged (visual check)?
- Does the measuring device correspond to the measuring point specifications such as process temperature/pressure, ambient temperature, measuring range, etc.?
- Is the flange marking correctly aligned (→  7)?
- Have the flange screws been tightened up with the respective tightening torque?
- Are the measuring point number and labeling correct (visual check)?
- Is the measuring device adequately protected against rain and direct sunlight (see Chapter "Accessories" in the Operating Instruction on CD-ROM)?

## 3 Wiring

### 3.1 Quick wiring guide

When grounding conductive screens, the corresponding directives EN 60079-14 and EN 1127-1 must be observed. Recommendation for safe grounding of conductive screens:

#### **⚠ CAUTION**

**Before connection please note the following:**

- ▶ The power supply must be identical to the data on the nameplate.
- ▶ Switch off power supply before connecting the device.
- ▶ Connect equipotential bonding to transmitter ground terminal before connecting the device.
- ▶ Tighten the locking screw:  
It forms the connection between the antenna and the housing ground potential.
- ▶ When you use the measuring system in hazardous areas, make sure you comply with national standards and the specifications in the safety instructions (XA's)

### 3.1.1 Wiring

**⚠ CAUTION**

Before connection please note the following:

- ▶ The power supply to be delivered by a transmitter supply unit.
- ▶ Befor removing housing cover at seperate connection compartment turn off the power supply!


1. Insert cable through gland . Use screened, twisted 2-wire or 4-wire cable.

**⚠ CAUTION**

**Only ground screening of the line on sensor side.**

2. Make connection (see pin assignment).
3. Tighten cable gland.
4. Replace and tighten off housing cover.
5. Switch on power supply.

A Micropilot S situated in a hazardous area is connected as a **single device** to a **power supply unit and transmitter** situated outside of the hazardous area. In this case, it is recommended that the screen be connected directly to the Micropilot at the housing's earth, whereby the Micropilot S and the power supply unit are connected to the same potential equalization line.

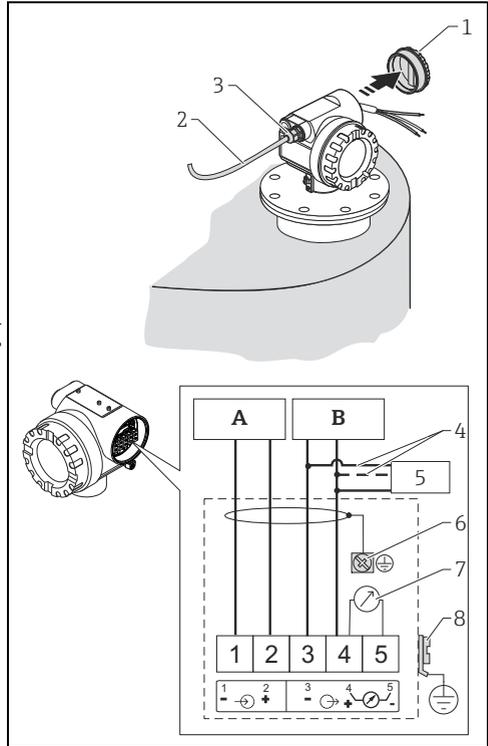

- A0020479
- A Power 24 VDC; from a transmitter supply unit
  - B Signal 24 VDC; from a transmitter supply unit
  - 1 Housing cover
  - 2 Cable
  - 3 Cable gland
  - 4 Alternative connection
  - 5 Commubox FXA195, Field Communicator
  - 6 Shield ground
  - 7 Test socket; Output current
  - 8 PML (potential matching line)

### 3.1.2 Wiring with Tank Side Monitor NRF590

**⚠ CAUTION**

Before connection please note the following:

- ▶ Make sure you use the specified cable gland.
- ▶ Befor removing housing cover at separate connection compartment turn off the power supply!


1. Insert cable through gland . Use screened, twisted 2-wire or 4-wire cable.

**⚠ CAUTION**

Only ground screening of the line on sensor side.

2. Make connection (see pin assignment).
3. Tighten cable gland.
4. Replace and tighten off housing cover.
5. Switch on power supply.

The Micropilot S is - possibly in combination with other devices - connected to a Tank Side Monitor in a hazardous area. In this case, it is recommended that you ground the cable screen centrally at the NRF590 and connect all devices to the same potential equalization line (PML). If, for functional reasons, a capacitive coupling is required between local earth and screen (multiple grounding), ceramic condensers with a dielectric strength of min. 1500 Veff must be used, whereby the total capacitance of 10 nF must not be exceeded. Notes on grounding interconnected intrinsically safe devices are provided by the FISCO model. If there is no way to set a ground cable between NRF590 and Micropilot S it is possible to ground single side (grounding on side NRF590). In this case it's imperative to ground the shield (on Micropilot S side) via a ceramic capacitor with a maximum capacitance of 10 nF and a minimum insulating voltage of 1500 V.

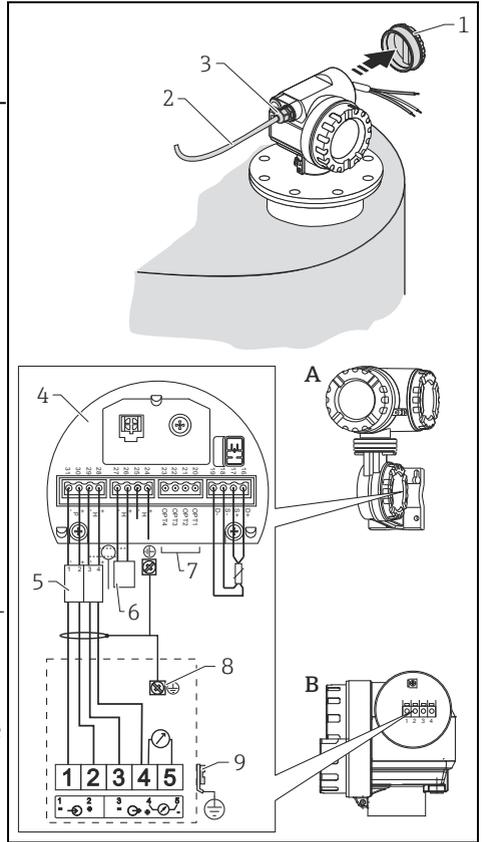

AA0020479

- A Tank Side Monitor NRF590
- B Micropilot S
- 1 Housing cover
- 2 Cabel
- 3 Cabel gland
- 4 Intrinsically safe terminal board
- 5 Only for Micropilot S
- 6 HART Sensor
- 7 Grounding single sided on Tank Side Monitor NRF590
- 8 Shield ground
- 9 PML (potential equalization line)

## 3.2 Connecting the measuring unit

### Load HART

Minimum load for HART communication: 250  $\Omega$

### Cable entry

| Description                   | Feature | Option model |
|-------------------------------|---------|--------------|
| Thread for cable gland M20    | 070     | 1            |
| Cable gland M20               | 070     | 2            |
| Thread for cable gland G ½"   | 070     | 3            |
| Thread for cable gland NPT ½" | 070     | 4            |

### Supply voltage

DC voltage: per table below

| Communication |          | Terminal voltage | minimum | maximum |
|---------------|----------|------------------|---------|---------|
| Power supply  | Standard | U (20 mA) =      | 16 V    | 36 V    |
|               | Ex       | U (20 mA) =      | 16 V    | 30 V    |
| Signal        | Ex       | U (4 mA) =       | 11.5 V  | 30 V    |
|               |          | U (20 mA) =      | 11.5 V  | 30 V    |

### Power consumption

- max. 400 mW at 16 V
- max. 600 mW at 24 V
- max. 750 mW at 30 V
- Non-Ex: max. 900 mW at 36 V

### Current consumption

Max. 25 mA (55 mA inrush current).

## Overvoltage protector

- The level transmitter Micropilot S is equipped with an internal overvoltage protector (600 Vrms surge arrester) according to EN/IEC 60079-14 or EN/IEC 60060-1 (impulse current test 8/20  $\mu$ s,  $\hat{I} = 10$  kA, 10 pulses). Additionally, the device is protected by a galvanic insulation of 500 Vrms between the power supply and the (HART) current output. Connect the metallic housing of the Micropilot S to the tank wall or screen directly with an electrically conductive lead to ensure reliable potential matching.
- Installation with additional overvoltage protector HAW560Z/HAW562Z (see XA00338F "Safety instructions for electrical apparatus certified for use in explosion-hazardous areas").
  - Connect the external overvoltage protector and the Micropilot S transmitter to the local potential matching system.
  - Potentials shall be equalised both inside and outside the explosion hazardous area.
  - The cable connecting the overvoltage protector and the Micropilot S transmitter shall not exceed 1 m (3.3 ft) in length.
  - The cable shall be protected e.g. routed in an armoured hose.

## Power supply

- For stand alone operation via two Endress+Hauser RN221N.
- Integrated in tank gauging system via Endress+Hauser Tank Side Monitor NRF590 (recommended operation mode).

## Highly accurate measurements

For highly accurate measurements the measured variable must be transmitted using HART protocol to ensure the necessary resolution.

## 3.3 Equipotential bonding

Connect the Equipotential bonding to the external ground terminal of the transmitter.

## 3.4 Degree of protection

- Housing: IP65/68; NEMA 4X/6P
- Antenna: IP65/68; NEMA 4X/6P

## 3.5 Post-connection check

After wiring the measuring device, perform the following checks:

- Is the terminal allocation correct (→  19)?
- Is the cable gland tight?
- Is the housing cover screwed tight?
- If auxiliary power is available:
  - Is the device ready for operation and does the liquid crystal display show any value?
- Is grounding (tank potential) correct?

## 4 Operation

### 4.1 General structure of the operating menu

The operating menu is made up of two levels:


- **Function groups (00, 01, 03, ..., 0C, 0D):** The individual operating options of the device are split up roughly into different function groups. The function groups that are available include, e.g.: "basic setup", "safety settings", "output", "display", etc.
- **Functions (001, 002, 003, ..., 0D8, 0D9):** Each function group consists of one or more functions. The functions perform the actual operation or parameterisation of the device. Numerical values can be entered here and parameters can be selected and saved. The available functions of the "basic setup" (00) function group include, e.g.: "tank shape" (002), "medium property" (003), "process cond." (004), "empty calibr" (005), etc.

If, for example, the application of the device is to be changed, carry out the following procedure:

1. Select the "basic setup" (00) function group.
2. Select the "tank shape" (002) function (where the existing tank shape is selected).

#### 4.1.1 Identifying the functions

For simple orientation within the function menus (see chapter "Appendix" in BA00326F/00/EN), for each function a position is shown on the display.

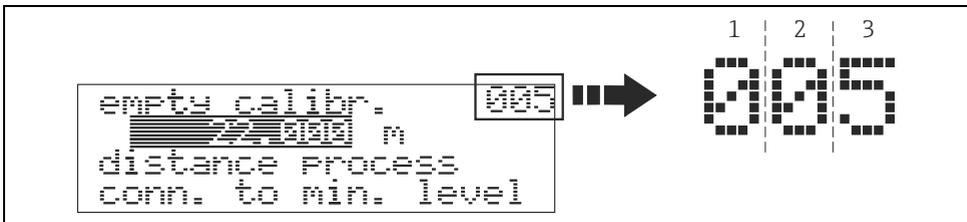

- |   |                |
|---|----------------|
| 1 | Function group |
| 2 | Function       |

A0020505-EN

The first two digits identify the function group:

- basic setup           00
- safety settings       01
- linearisation        04


...

The third digit numbers the individual functions within the function group:

- |                      |    |   |                          |     |
|----------------------|----|---|--------------------------|-----|
| ■ <b>basic setup</b> | 00 | → | ■ <b>tank shape</b>      | 002 |
|                      |    |   | ■ <b>medium property</b> | 003 |
|                      |    |   | ■ <b>process cond.</b>   | 004 |
|                      |    |   | ...                      |     |

Hereafter the position is always given in brackets (e.g. "tank shape" (002)) after the described function.

## 4.2 Display and operating elements

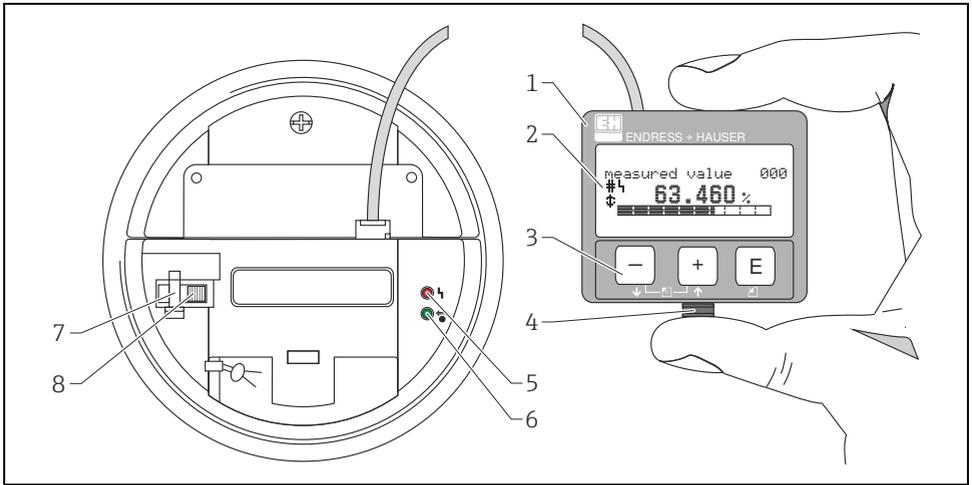

- |   |                              |
|---|------------------------------|
| 1 | LCD (liquid crystal display) |
| 2 | Symbols                      |
| 3 | Operating keys               |
| 4 | Snap-fit                     |

- |   |                        |
|---|------------------------|
| 5 | Red LED                |
| 6 | Green LED              |
| 7 | Custody locking switch |
| 8 | Sealing pin            |

A0020494-EN


### NOTICE

To access the display the cover of the electronic compartment may be removed even in hazardous area. The LCD-display can be removed to ease operation by simply pressing the snap-fit (see graphic above). It is connected to the device by means of a 500 mm (19.7 in) cable.

### 4.2.1 Display

#### Liquid crystal display (LCD)

Four lines with 20 characters each. Display contrast adjustable through key combination.

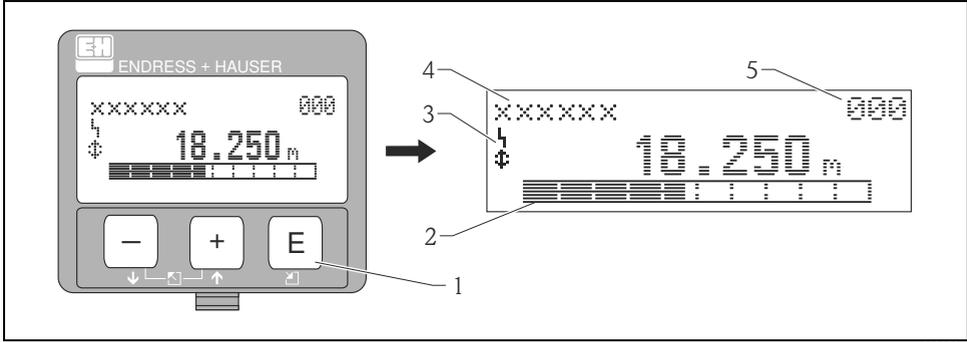

- 1 Operating keys
- 2 Bargraph
- 3 Symbols
- 4 Function name
- 5 Parameter Identification number

A0020501

#### 4.2.2 Display symbols

The following table describes the symbols that appear on the liquid crystal display:

| Symbols | Meaning  |
|---------|--|
|         | <b>ALARM_SYMBOL</b><br>This alarm symbol appears when the device is in an alarm state. If the symbol flashes, this indicates a warning.  |
|         | <b>LOCK_SYMBOL</b><br>This lock symbol appears when the device is locked, i.e. if no input is possible.  |
|         | <b>COM_SYMBOL</b><br>This communication symbol appears when a data transmission via e.g. HART is in progress.  |
|         | <b>Calibration to regulatory standards disturbed</b><br>If the device is not locked or it cannot guarantee the calibration to regulatory standards, the situation will be indicated on the display via the symbol. |

### 4.2.3 Light emitting diodes (LEDs)

There is a green and a red LED besides the Liquid crystal display.

| LED (LED)                 | Meaning                            |
|---------------------------|------------------------------------|
| red LED continuously on   | Alarm                              |
| red LED flashes           | Warning                            |
| red LED off               | No alarm                           |
| green LED continuously on | Operation                          |
| Green LED flashes         | Communication with external device |

### 4.2.4 Function of the keys

| Key(s)   | Meaning  |
|--|--|
|  or    | <ul style="list-style-type: none"> <li>▪ Navigate upwards in the selection list.</li> <li>▪ Edit numeric value within a function.</li> </ul>   |
|  or    | <ul style="list-style-type: none"> <li>▪ Navigate downwards in the selection list.</li> <li>▪ Edit numeric value within a function.</li> </ul>   |
|   or    | Navigate to the left within a function group.  |
|   | <ul style="list-style-type: none"> <li>▪ Navigate to the right within a function group.</li> <li>▪ Confirm entry.</li> </ul>   |
|  and <br>or<br> and  | Contrast settings of the LCD.  |
|  and  and   | Hardware lock / unlock<br>After a hardware lock, an operation of the device via display or communication is not possible! The hardware can only be unlocked via the display. An unlock parameter must be entered to do so. |

### 4.2.5 Custody locking switch

Access to the electronics can be prevented by means of a custody locking switch that locks the device settings. The custody locking switch can be sealed for custody transfer applications.

## 5 Commissioning

### 5.1 Function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post installation check", →  18.
- Checklist "Post connection check", →  23.

### 5.2 Switching on the measuring device

When the device is switched on for the first time, the following messages appear in a sequence of 5 s on the display: software version, communication protocol and language selection.

| On-site display |     |
|-----------------|-----|
| Language        | 092 |
| ✓ English       |     |
| Deutsch         |     |
| Français        |     |

#### Meaning

Select the language  
(this message appears the first time the device is switched on)

|               |     |
|---------------|-----|
| distance unit | 0C5 |
| ✓ m           |     |
| ft            |     |
| mm            |     |

Select the basic unit  
(this message appears the first time the device is switched on)

|  |     |
|--|-----|
| measured value   | 000 |
|  |     |


The current measured value is displayed

|                 |     |
|-----------------|-----|
| Group selection | 00→ |
| ✓ basic setup   |     |
| safety settings |     |
| linearisation   |     |

After  is pressed, you reach the group selection

This selection enables you to perform the basic setup

### 5.3 Overview Basic Setup

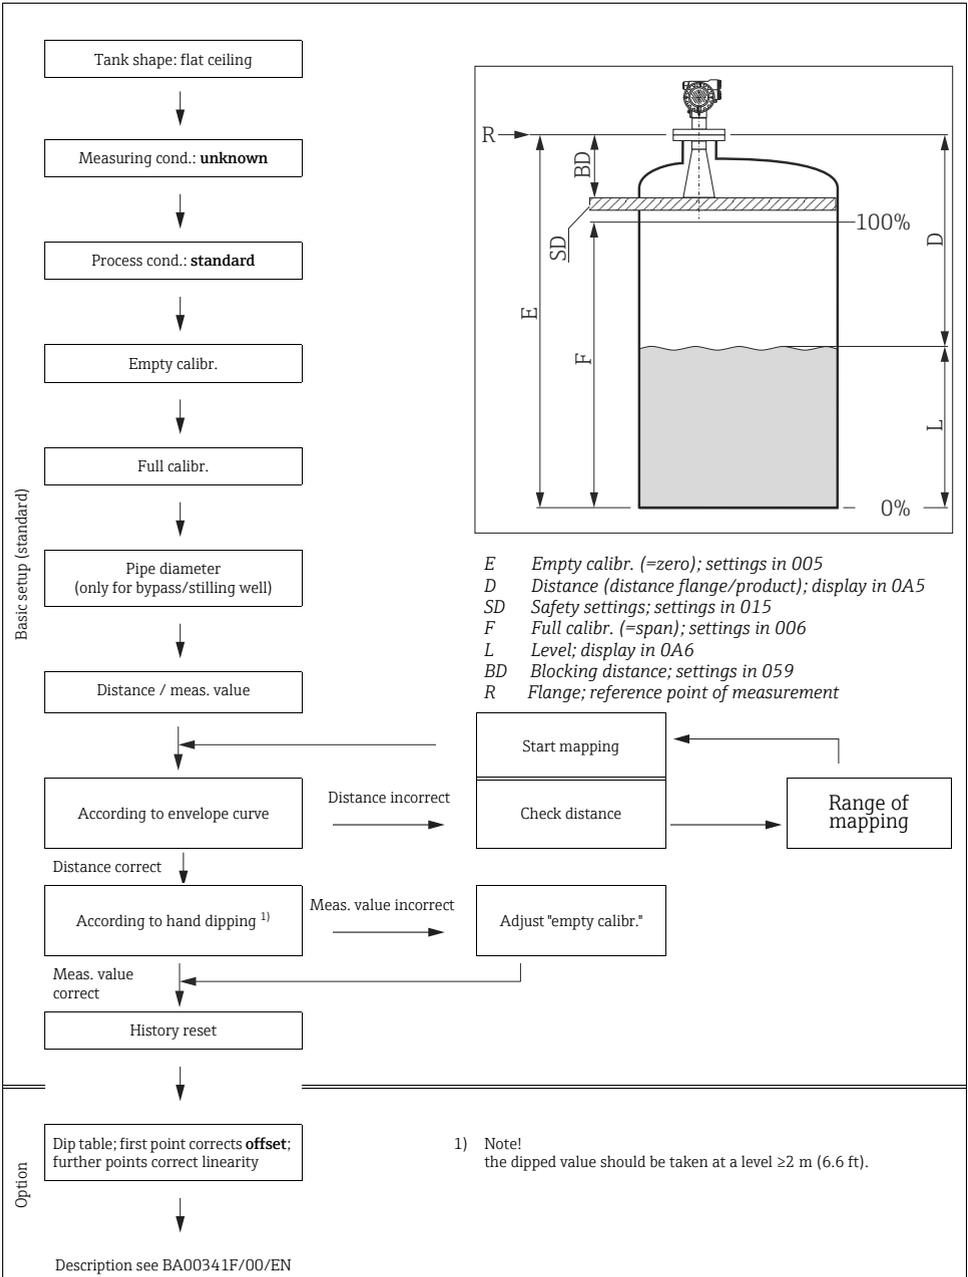

**⚠ CAUTION**

The basic setup is sufficient for successful commissioning in most applications. Complex measuring operations necessitate additional functions that the user can use to customise the Micropilot as necessary to suit his specific requirements. The functions available to do this are described in detail in the BA00341F/00/EN. Comply with the following instructions when configuring the functions in the "basic setup" (00):

- ▶ Select the functions as described in BA00326F/00/EN.
- ▶ Some functions can only be used depending on the parameterisation of the device. For example, the pipe diameter of a stilling well can only be entered if "stilling well" was selected beforehand in the "tank shape" (002) function.
- ▶ Certain functions (e.g. starting an interference echo mapping (053)) prompt you to confirm your data entries. Press + or - to select "YES" and press E to confirm. The function is now started.
- ▶ If you do not press a key during a configurable time period (function group "display" (09)), an automatic return is made to the home position (measured value display).

**NOTICE**

After finishing the basic setup pairs of values "measuring value Micropilot S - hand dipping value" should be collected and if necessary a further correction should be performed through entering characteristic pairs of values into the dip table. Information on the usage of the dip table can be found in BA00326F/00/EN.

**NOTICE****Data handling during setup**

- ▶ The device continues to measure while data entry is in progress, i.e. the current measured values are output via the signal outputs in the normal way.
- ▶ If the envelope curve mode is active on the display, the measured values are updated in a slower cycle time. Thus, it is advisable to leave the envelope curve mode after the measuring point has been optimised.
- ▶ If the power supply fails, all preset and parameterised values remain safely stored in the EEPROM.
- ▶ All functions are described in detail, as is the overview of the operating menu itself, in the manual "BA00341F - Description of Instrument Functions", which can be found on the enclosed CD-ROM.
- ▶ The default values of the parameters are typed in **boldface**.

## 5.4 Basic Setup with device display VU331

### 5.4.1 Function "measured value" (000)

| On-site display   |     |
|---|-----|
| measured value  | 000 |
| 63.455 %  |     |
|  |     |

#### Meaning

This function displays the current measured value in the selected unit (see "**customer unit**" (042) function). The number of digits after decimal point can be selected in the "**no.of decimals**" (095) function. The length of the bargraph corresponds to the percental value of the present measured value with regard to the span.

### 5.4.2 Function group "basic setup" (00)

| On-site display |     |
|-----------------|-----|
| Group selection | 00→ |
| ✓ basic setup   |     |
| safety settings |     |
| linearisation   |     |

**Function "tank shape" (002), liquids only**


| On-site display |     |
|-----------------|-----|
| tank shape      | 002 |
| ✓ dome ceiling  |     |
| horizontal cyl  |     |
| bypass          |     |

**Meaning**

This function is used to select the tank shape.

Further options:

- **Dome ceiling**
- Horizontal cyl
- Bypass (Not weights and measures approved, accuracy is not guaranteed. Recommendation: FMR532)
- Stilling well (Not weights and measures approved, accuracy is not guaranteed. Recommendation: FMR532)
- Flat ceiling (Typical ceiling of storage tanks: a slight slope of only a few degrees can be neglected)
- Sphere

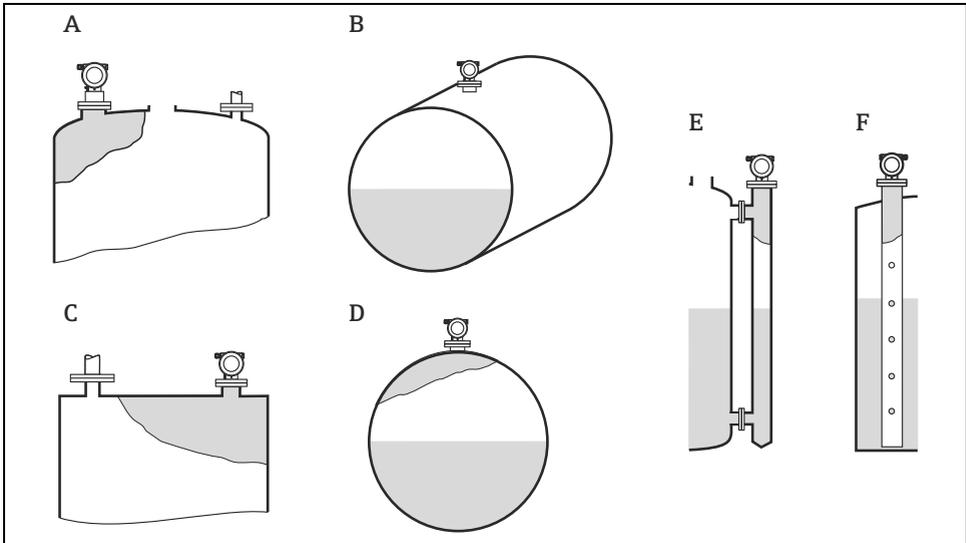

A Dome ceiling  
 B horizontal cyl  
 C Flat ceiling

D Sphere  
 E Bypass  
 F Stilling well

A0020493

## Function "medium property." (003), liquids only

| On-site display |     |
|-----------------|-----|
| medium property | 003 |
| ✓ unknown       |     |
| DC: < 1.9.      |     |
| DC: 1.9...4     |     |

### Meaning

This function is used to select the dielectric constant.

Further options:

- **unknown**
- DC: < 1.9
- DC: 1.9 to 4
- DC: 4 to 10
- DC: > 10

| Media group | DC ( $\epsilon_r$ ) | Examples  |
|-------------|---------------------|---|
| A           | 1.4 to 1.9          | Non-conducting liquids, e.g. liquefied gas (LPG). For more information please contact your Endress+Hauser representative. |
| B           | 1.9 to 4            | Non-conducting liquids, e.g. benzene, oil, toluene, white products, black products, crudes, bitumen/asphalts, ...         |
| C           | 4 to 10             | E.g. concentrated acids, organic solvents, esters, aniline, alcohol, acetone, ...   |
| D           | >10                 | Conducting liquids, e.g. aqueous solutions, dilute acids and alkalis  |

**Function "process cond." (004), liquids only**


| On-site display |     |
|-----------------|-----|
| process cond.   | 004 |
| ✓ standard      |     |
| calm surfaces.  |     |
| turb. surface   |     |

**Meaning**

This function is used to select the process conditions.

Further options:

- **Standard**
- Calm surface
- Turb. surface
- Agitator
- Fast change
- Test: no filter
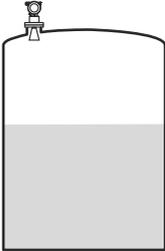
| Standard  | Calm surface  |
|---|---|
| For all applications that do not fit into any of the following groups.  | Storage tanks with immersion tube or bottom filling   |
|  <p style="text-align: right; font-size: small;">A0020531</p> |  <p style="text-align: right; font-size: small;">A0020533</p> |
| The filter and output damping are set to average values.  | The averaging filters and output damping are set to high values.<br>→ Steady meas. value<br>→ Precise measurement<br>→ Slower reaction time     |

**Function "empty calibr." (005)**

| On-site display     |     |
|---------------------|-----|
| empty calibr.       | 005 |
| 5.000 m             |     |
| distance process    |     |
| conn. to min. level |     |

**Meaning**

This function is used to enter the distance from the flange (reference point of the measurement) to the minimum level (= zero).

**⚠ CAUTION**

For dish bottoms or conical outlets, the zero point should be no lower than the point at which the radar beam hits the bottom of the tank.

**Function "full calibr." (006)**

| On-site display |     |
|-----------------|-----|
| full calibr.    | 006 |
| 5.000 m         |     |
| span            |     |

**Meaning**

This function is used to enter the distance from the minimum level to the maximum level (= span). In principle, it is possible to measure up to the tip of the antenna. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than 50 mm (1.97 in) to the tip of the antenna.

**NOTICE**

If bypass or stilling well was selected in the "tank shape" (002) function, the pipe diameter is requested in the following step.

## Function "pipe diameter" (007)

| On-site display                           |     |
|---|-----|
| pipe diameter                             | 007 |
| 204.425 m                                 |     |
| inner diameter of<br>bypass/stilling well |     |

### Meaning

This function is used to enter the pipe diameter of the stilling well or bypass pipe.

Microwaves propagate slower in pipes than in free space. This effect depends on the inside diameter of the pipe and is automatically taken into account by the Micropilot. It is only necessary to enter the pipe diameter for applications in a bypass or stilling well.

## Function "dist./ meas. value" (008)

| On-site display   |     |
|-------------------|-----|
| dist./meas.value  | 008 |
| dist. 2.463 m     |     |
| m.value. 63.414 % |     |

### Meaning

The **distance** measured from the reference point to the product surface and the **level** calculated with the aid of the empty adjustment are displayed. Check whether the values correspond to the actual level or the actual distance. The following cases can occur:

- Distance correct - meas. value correct:  
Continue with the next function "**check distance**" (051)
- Distance correct - meas. value incorrect:  
Check "**empty calibr.**" (005)
- Distance incorrect - meas. value incorrect:  
Continue with the next function "**check distance**" (051)

### Function "check distance" (051)


| On-site display |     |
|-----------------|-----|
| check distance  | 051 |
| ✓ dist. unknown |     |
| manual          |     |
| distance = ok   |     |

#### Meaning

This function triggers the mapping of interference echoes. To do so, the measured distance must be compared with the actual distance to the product surface.

Further options:

- distance = ok
- dist. too small
- dist. too big
- **dist. unknown**
- manual

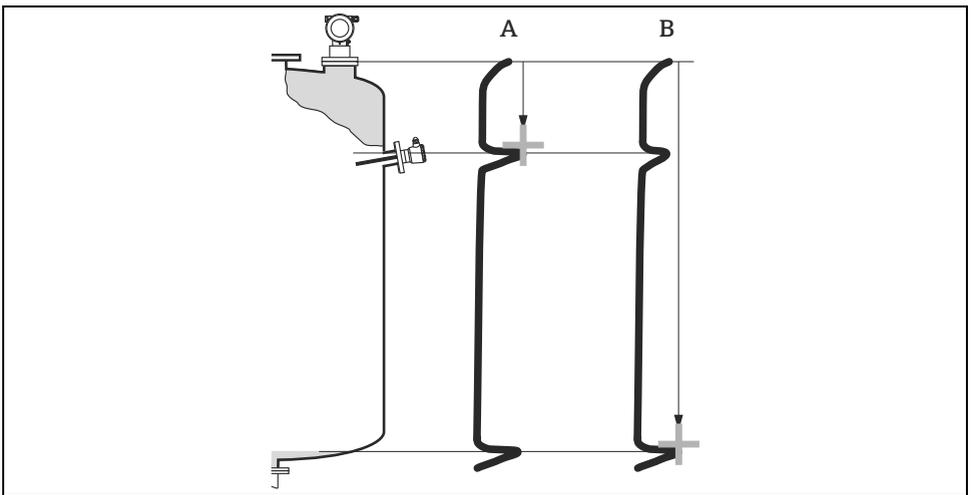

- A    *Distance too small*  
 B    *Distance ok*

A0020563

#### distance = ok

- mapping is carried out up to the currently measured echo
- The range to be suppressed is suggested in the "range of mapping." (052) function

#### NOTICE

Anyway, it is wise to carry out a mapping even in this case.

**dist. too small**

- At the moment, an interference is being evaluated
- Therefore, a mapping is carried out including the presently measured echoes
- The range to be suppressed is suggested in the "**range of mapping.**" (052) function

**dist. too big**

- This error cannot be remedied by interference echo mapping
- Check the application parameters (002), (003), (004) and "empty calibr." (005)

**dist. unknown**

If the actual distance is not known, no mapping can be carried out.

**manual**

A mapping is also possible by manual entry of the range to be suppressed. This entry is made in the "**range of mapping.**" (052) function.

**⚠ CAUTION**

The range of mapping must end 0.5 m (1.6 ft) before the echo of the actual level. For an empty tank, do not enter E, but E – 0.5 m (1.6 ft). If a mapping already exists, it is overwritten up to the distance specified in "range of mapping" (052). Beyond this value the existing mapping remains unchanged.

**Function "range of mapping" (052)**

| On-site display  |         |
|------------------|---------|
| range of mapping | 052     |
|                  | 0.000 m |
| input of         |         |
| mapping range    |         |

**Meaning**

This function displays the suggested range of mapping. The reference point is always the reference point of the measurement (→ 29). This value can be edited by the operator. For manual mapping, the default value is: 0 m.

## Function "start mapping" (053)

| On-site display |     |
|-----------------|-----|
| start mapping   | 053 |
| ✓ off           |     |
| on              |     |

### Meaning

This function is used to start the interference echo mapping up to the distance given in **"range of mapping" (052)**.

Selection:

- **off**  
No mapping is carried out
- **on**  
Mapping is started

During the mapping process the message **"record mapping"** is displayed.

### **⚠ CAUTION**

**A mapping will be recorded only, if the device is not in alarm-state.**

## Display "dist./meas.value" (008)

| On-site display  |          |
|------------------|----------|
| dist./meas.value | 008      |
| dist.            | 2.463 m  |
| m.value.         | 63.414 % |

### Meaning

The **distance** measured from the reference point to the product surface and the **level** calculated with the aid of the empty adjustment are displayed. Check whether the values correspond to the actual level or the actual distance.

The following cases can occur:


- Distance correct - meas. value correct:  
Continue with the next function **"check distance" (051)**
- Distance correct - meas. value incorrect:  
Check **"empty calibr." (005)**
- Distance incorrect - meas. value incorrect:  
Continue with the next function **"check distance" (051)**

**Function "set value" (009)**

| On-site display      |     |
|----------------------|-----|
| set value            | 009 |
| 3.000                | mm  |
| for empty correction |     |

**Meaning**

This function enables the user to offset the difference between the reference level and the measured level (or between ullage value and measured distance). To make an offset effective, input the reference level measured by the dip measurement by using key buttons. The software offsets the dist./meas value with the difference between reference level and measured value.

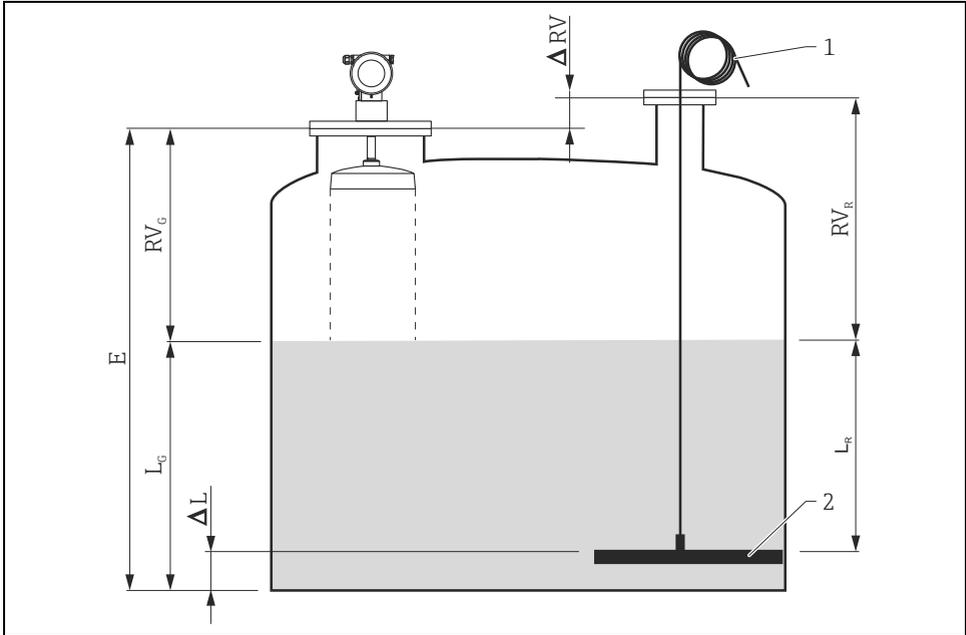

A0021569

- 1 Dipping
- 2 Datum plate

- $\Delta L$  Difference Level
- $L_G$  Level (measured)
- $L_R$  Level (reference)
- $E$  Empty value
- $\Delta RV$  Difference ullage
- $RV_G$  Ullage (measured)
- $RV_R$  Ullage (reference)

| On-site display              | Meaning |
|------------------------------|---------|
| Return to<br>Group Selection |         |

After 3 s, the following message appears

|                 |     |
|-----------------|-----|
| Group selection | 00→ |
| ✓ basic setup   |     |
| safety settings |     |
| linearisation   |     |

## NOTICE

After the basic setup, an evaluation of the measurement with the aid of the envelope curve (function group "Envelope curve" (0E)) is recommended.

## 5.5 Envelope curve with device display VU331

After the basic setup, an evaluation of the measurement with the aid of the envelope curve (function group "envelope curve" (0E)) is recommended.

### 5.5.1 Function "plot settings" (0E1)

| On-site display     |     |
|---------------------|-----|
| plot settings       | 0E1 |
| ✓ envelope curve    |     |
| env.curve+FAC       |     |
| env.curve+cust.map. |     |

Select which information will be displayed in the LCD:

- **Envelope curve**
- Env.curve+FAC (on FAC see BA00341F/00/EN)
- Env.curve+cust.map (i.e. customer tank map is also displayed)

### 5.5.2 Function "recording curve" (OE2)

This function defines whether the envelope curve is read as a

- **single curve** or
- cyclic.


| On-site display |     |
|-----------------|-----|
| recording curve | OE2 |
| ✓ single curve  |     |
| cyclic          |     |

#### **NOTICE**

If the envelope curve mode is active on the display, the measured values are updated in a slower cycle time. Thus, it is advisable to leave the envelope curve mode after the measuring point has been optimised.

### 5.5.3 Function "envelope curve display" (0E3)

The envelope curve is displayed in this function. You can use it to obtain the following information:

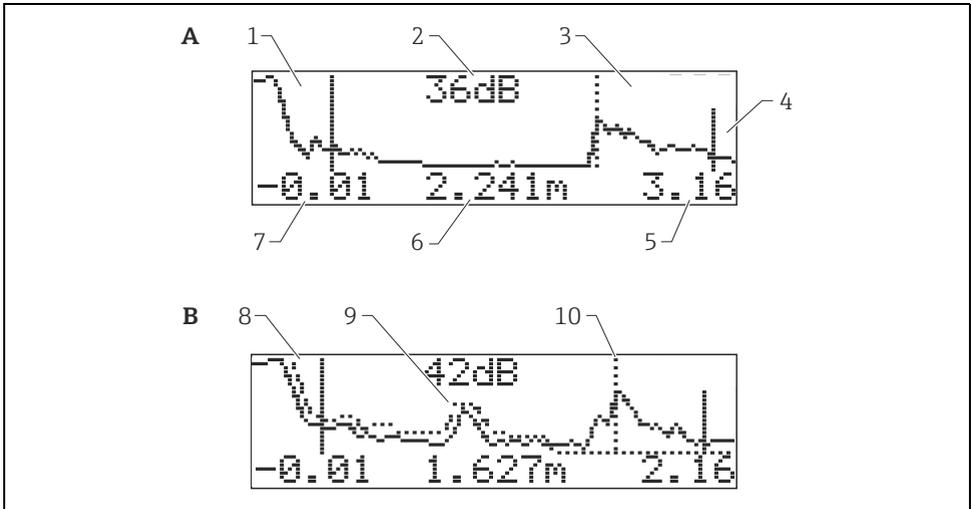

A0021046

- A Envelope curve only
- B Envelope curve and interference echo suppression (map)
- 1 Full calibr.
- 2 Quality of evaluated echo
- 3 Evaluated echo is marked
- 4 Empty calibr.
- 5 Maximum distance of the plot
- 6 Distance of the evaluated echo
- 7 Minimum distance of the plot
- 8 Map
- 9 Interference echo
- 10 Level echo



71263611

[www.addresses.endress.com](http://www.addresses.endress.com)

---