



# Operating Instructions

## Levelflex FMP53

### FOUNDATION Fieldbus

Guided wave radar

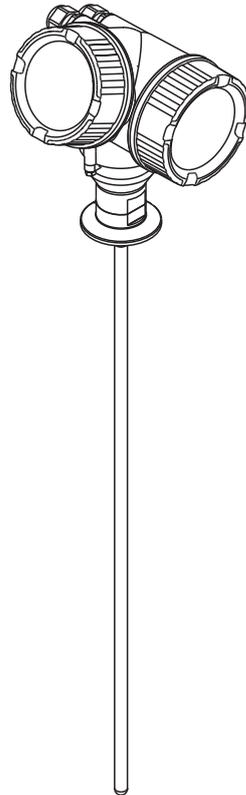

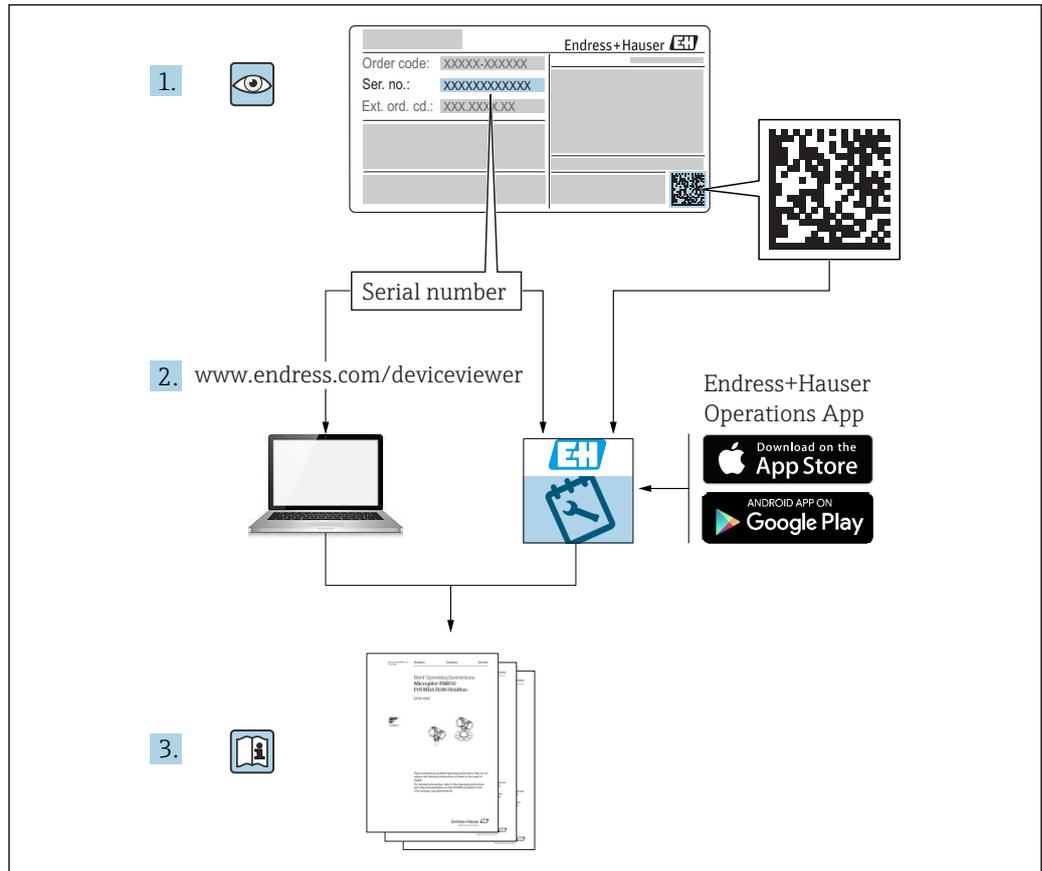

A0023555

## Table of contents

<b>1</b>	<b>Important document information</b>	<b>6</b>		
1.1	Document function	6		
1.2	Symbols	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.2.6	Symbols at the device	8		
1.3	Supplementary documentation	9		
1.4	Terms and abbreviations	10		
1.5	Registered trademarks	11		
<b>2</b>	<b>Basic safety instructions</b>	<b>12</b>		
2.1	Requirements for the personnel	12		
2.2	Designated use	12		
2.3	Workplace safety	13		
2.4	Operational safety	13		
2.5	Product safety	13		
2.5.1	CE mark	13		
2.5.2	EAC conformity	14		
2.6	Safety Instructions (XA)	15		
2.6.1	Ex-marking in case of connected FHX50 remote display	17		
<b>3</b>	<b>Product description</b>	<b>18</b>		
3.1	Product design	18		
3.1.1	Levelflex FMP53	18		
3.1.2	Electronics housing	19		
<b>4</b>	<b>Incoming acceptance and product identification</b>	<b>20</b>		
4.1	Incoming acceptance	20		
4.2	Product identification	20		
4.2.1	Nameplate	21		
<b>5</b>	<b>Storage, Transport</b>	<b>22</b>		
5.1	Storage conditions	22		
5.2	Transport product to the measuring point	22		
<b>6</b>	<b>Mounting</b>	<b>23</b>		
6.1	Mounting requirements	23		
6.1.1	Suitable mounting position	23		
6.1.2	Applications with restricted mounting space	25		
6.1.3	Notes on the mechanical load of the probe	27		
6.1.4	Special mounting conditions	28		
6.2	Mounting the device	34		
6.2.1	Required mounting tools	34		
6.2.2	Mounting the "Sensor remote" version	34		
6.2.3	Turning the transmitter housing	35		
6.2.4	Turning the display	36		
6.3	Post-installation check	38		
<b>7</b>	<b>Electrical connection</b>	<b>39</b>		
7.1	Connection conditions	39		
7.1.1	Terminal assignment	39		
7.1.2	Cable specification	41		
7.1.3	Device plug connectors	42		
7.1.4	Power supply	43		
7.1.5	Overvoltage protection	43		
7.2	Connecting the measuring device	44		
7.2.1	Opening connection compartment cover	44		
7.2.2	Connecting	45		
7.2.3	Plug-in spring-force terminals	45		
7.2.4	Closing connection compartment cover	46		
7.3	Post-connection check	46		
<b>8</b>	<b>Operation options</b>	<b>48</b>		
8.1	Overview	48		
8.1.1	Local operation	48		
8.1.2	Operation with remote display and operating module FHX50	49		
8.1.3	Remote operation	49		
8.2	Structure and function of the operating menu	51		
8.2.1	Structure of the operating menu	51		
8.2.2	User roles and related access authorization	53		
8.2.3	Data access - Security	53		
8.3	Display and operating module	58		
8.3.1	Display appearance	58		
8.3.2	Operating elements	61		
8.3.3	Entering numbers and text	62		
8.3.4	Opening the context menu	64		
8.3.5	Envelope curve on the display and operating module	65		
<b>9</b>	<b>Integration into a FOUNDATION Fieldbus network</b>	<b>66</b>		
9.1	Device Description (DD)	66		
9.2	Integration into the FOUNDATION Fieldbus network	66		
9.3	Device identification and addressing	66		
9.4	Block model	67		
9.4.1	Blocks of the device software	67		
9.4.2	Block configuration when device is delivered	68		

9.5	Assignment of the measured values (CHANNEL) in an AI Block . . . . .	68	12.8.4	Transmission of the event messages to the bus . . . . .	99
9.6	Index tables of Endress+Hauser parameters . .	69	12.9	Protection of the settings against unauthorized changes . . . . .	99
9.6.1	Setup Transducer Block . . . . .	69	<b>13</b>	<b>Diagnostics and troubleshooting . .</b>	<b>100</b>
9.6.2	Advanced Setup Transducer Block . . .	70	13.1	General trouble shooting . . . . .	100
9.6.3	Display Transducer Block . . . . .	71	13.1.1	General errors . . . . .	100
9.6.4	Diagnostic Transducer Block . . . . .	71	13.1.2	Parametrization errors . . . . .	101
9.6.5	Expert Configuration Transducer Block . . . . .	72	13.2	Diagnostic information on local display . . . . .	102
9.6.6	Expert Information Transducer Block . . . . .	74	13.2.1	Diagnostic message . . . . .	102
9.6.7	Service Sensor Transducer Block . . . . .	75	13.2.2	Calling up remedial measures . . . . .	104
9.6.8	Service Information Transducer Block . . . . .	75	13.3	Diagnostic event in the operating tool . . . . .	105
9.6.9	Data Transfer Transducer Block . . . . .	76	13.4	Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG) . . . . .	106
9.7	Methods . . . . .	77	13.5	Diagnostic list . . . . .	106
<b>10</b>	<b>Commissioning via wizard . . . . .</b>	<b>78</b>	13.6	Event logbook . . . . .	107
<b>11</b>	<b>Commissioning via operating menu . . . . .</b>	<b>79</b>	13.6.1	Event history . . . . .	107
11.1	Installation and function check . . . . .	79	13.6.2	Filtering the event logbook . . . . .	107
11.2	Setting the operating language . . . . .	79	13.6.3	Overview of information events . . . . .	107
11.3	Configuration of a level measurement . . . . .	80	13.7	Firmware history . . . . .	109
11.4	Recording the reference curve . . . . .	82	<b>14</b>	<b>Maintenance . . . . .</b>	<b>110</b>
11.5	Configuration of the on-site display . . . . .	83	14.1	Exterior cleaning . . . . .	110
11.5.1	Factory settings of the on-site display for level measurements . . . . .	83	14.2	Cleaning the probe . . . . .	110
11.5.2	Adjustment of the on-site display . . . . .	83	14.2.1	Cleaning the probe in the tank . . . . .	110
11.6	Configuration management . . . . .	84	14.2.2	Cleaning the probe outside the tank . . . . .	111
11.7	Protection of the settings against unauthorized changes . . . . .	85	<b>15</b>	<b>Repairs . . . . .</b>	<b>112</b>
<b>12</b>	<b>Commissioning (block-based operation) . . . . .</b>	<b>86</b>	15.1	General information on repairs . . . . .	112
12.1	Function check . . . . .	86	15.1.1	Repair concept . . . . .	112
12.2	Block configuration . . . . .	86	15.1.2	Repairs to Ex-approved devices . . . . .	112
12.2.1	Preparatory steps . . . . .	86	15.1.3	Replacement of an electronics module . . . . .	112
12.2.2	Configuring the Resource Block . . . . .	86	15.1.4	Replacement of a device . . . . .	112
12.2.3	Configuring the Transducer Blocks . . . . .	86	15.2	Spare parts . . . . .	113
12.2.4	Configuring the Analog Input Blocks . . . . .	87	15.3	Return . . . . .	113
12.2.5	Additional configuration . . . . .	87	15.4	Disposal . . . . .	113
12.3	Scaling of the measured value in an AI Block . .	87	<b>16</b>	<b>Accessories . . . . .</b>	<b>114</b>
12.4	Language selection . . . . .	88	16.1	Device-specific accessories . . . . .	114
12.5	Configuration of a level measurement . . . . .	89	16.1.1	Weather protection cover . . . . .	114
12.6	Configuration of the on-site display . . . . .	90	16.1.2	Mounting bracket for the electronics housing . . . . .	115
12.6.1	Factory settings of the on-site display for level measurements . . . . .	90	16.1.3	Weld-in adapter . . . . .	115
12.7	Configuration management . . . . .	90	16.1.4	Protective cover . . . . .	116
12.8	Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912 . . . . .	92	16.1.5	Calibration kit . . . . .	116
12.8.1	Groups of events . . . . .	93	16.1.6	Remote display FHX50 . . . . .	117
12.8.2	Allocation parameters . . . . .	95	16.1.7	Overvoltage protection . . . . .	118
12.8.3	Configurable area . . . . .	98	16.1.8	Bluetooth module for HART devices . . . . .	119
			16.2	Communication-specific accessories . . . . .	120
			16.3	Service-specific accessories . . . . .	120
			16.4	System components . . . . .	120

<b>17</b>	<b>Operating menu</b> .....	<b>121</b>
17.1	Overview of the operating menu (display module) .....	121
17.2	Overview of the operating menu (operating tool) .....	128
17.3	"Setup" menu .....	134
17.3.1	"Mapping" wizard .....	141
17.3.2	"Analog input 1 to 5" submenu .....	142
17.3.3	"Advanced setup" submenu .....	144
17.4	"Diagnostics" menu .....	185
17.4.1	"Diagnostic list" submenu .....	187
17.4.2	"Event logbook" submenu .....	188
17.4.3	"Device information" submenu .....	189
17.4.4	"Measured values" submenu .....	191
17.4.5	"Analog input 1 to 5" submenu .....	192
17.4.6	"Data logging" submenu .....	194
17.4.7	"Simulation" submenu .....	197
17.4.8	"Device check" submenu .....	202
17.4.9	"Heartbeat" submenu .....	204
	<b>Index</b> .....	<b>205</b>

# 1 Important document information

## 1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

### 1.2.1 Safety symbols


Symbol	Meaning
	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	<b>NOTE!</b> This symbol contains information on procedures and other facts which do not result in personal injury.

### 1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective Earth (PE)</b> A terminal which must be connected to ground prior to establishing any other connections.  The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> <li>▪ Inner ground terminal: Connects the protective earth to the mains supply.</li> <li>▪ Outer ground terminal: Connects the device to the plant grounding system.</li> </ul>

### 1.2.3 Tool symbols

Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver

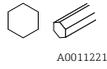Symbol	Meaning
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

### 1.2.4 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.
	Help in the event of a problem.
	Visual inspection.

### 1.2.5 Symbols in graphics

Symbol	Meaning
	Item numbers
	Series of steps
	Views
	Sections
	<b>Hazardous area</b> Indicates a hazardous area.
	<b>Safe area (non-hazardous area)</b> Indicates the non-hazardous area.

### 1.2.6 Symbols at the device

Symbol	Meaning
	<b>Safety instructions</b> Observe the safety instructions contained in the associated Operating Instructions.
	<b>Temperature resistance of the connection cables</b> Specifies the minimum value of the temperature resistance of the connection cables.

### 1.3 Supplementary documentation

Document	Purpose and content of the document
Technical Information TI01002F (FMP53)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01108F (FMP53, FOUNDATION Fieldbus)	<b>Guide that takes you quickly to the 1st measured value</b> The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GP01015F (FMP5x, FOUNDATION Fieldbus)	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Special documentation SD00326F	<b>Functional Safety Manual</b> The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.
Special documentation SD01872F	<b>Manual for Heartbeat Verification and Heartbeat Monitoring</b> The document contains descriptions of the additional parameters and technical data which are available with the <b>Heartbeat Verification</b> and <b>Heartbeat Monitoring</b> application packages.

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

## 1.4 Terms and abbreviations

Term/abbreviation	Explanation
BA	Document type "Operating Instructions"
KA	Document type "Brief Operating Instructions"
TI	Document type "Technical Information"
SD	Document type "Special Documentation"
XA	Document type "Safety Instructions"
PN	Nominal pressure
MWP	Maximum Working Pressure The MWP can also be found on the nameplate.
ToF	Time of Flight
FieldCare	Scalable software tool for device configuration and integrated plant asset management solutions
DeviceCare	Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices
DTM	Device Type Manager
DD	Device Description for HART communication protocol
$\epsilon_r$ (DC value)	Relative dielectric constant
Operating tool	The term "operating tool" is used in place of the following operating software: <ul style="list-style-type: none"> <li>▪ FieldCare / DeviceCare, for operation via HART communication and PC</li> <li>▪ SmartBlue (app), for operation using an Android or iOS smartphone or tablet.</li> </ul>
BD	Blocking Distance; no signals are analyzed within the BD.
PLC	Programmable Logic Controller
CDI	Common Data Interface
PFS	Pulse Frequency Status (Switching output)
MBP	Manchester Bus Powered
PDU	Protocol Data Unit

## 1.5 Registered trademarks

### **FOUNDATION™ Fieldbus**

Registered trademark of the FieldComm Group, Austin, Texas, USA

### **Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

### **Apple®**

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

### **Android®**

Android, Google Play and the Google Play logo are trademarks of Google Inc.

### **KALREZ®, VITON®**

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

### **TEFLON®**

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

### **TRI CLAMP®**

Registered trademark of Alfa Laval Inc., Kenosha, USA

## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Designated use

#### **Application and measured materials**

The measuring device described in these Operating Instructions is intended only for level measurement of liquids. Depending on the version ordered the device can also measure potentially explosive, flammable, poisonous and oxidizing materials.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level
- ▶ Calculated process variables: Volume or mass in arbitrarily shaped vessels (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

#### **Incorrect use**

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

#### **Residual risk**

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

With divisible probe rods, medium may penetrate into the joints between the individual parts of the rod. This medium may escape when loosening the joints. In the case of dangerous (e.g. aggressive or toxic) media this may cause injuries.

- ▶ When loosening the joints between the individual parts of the probe rod: Wear appropriate protective equipment according to the medium.

## 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

### Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

- ▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

### 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

### **2.5.2 EAC conformity**

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

## 2.6 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
BA	ATEX II 1G Ex ia IIC T6 Ga	FMP53	XA00496F	XA01125F	XA01126F	XA00516F	-
BB	ATEX II 1/2G Ex ia IIC T6 Ga/Gb	FMP53	XA00496F	XA01125F	XA01126F	XA00516F	-
BC	ATEX II 1/2G Ex d[ia] IIC T6 Ga/Gb	FMP53	XA00499F	XA00499F	XA00499F	XA00519F	XA01133F
BG	ATEX II 3G Ex nA IIC T6 Gc	FMP53	XA00498F	XA01130F	XA01131F	XA00518F	XA01132F
BH	ATEX II 3G Ex ic IIC T6 Gc	FMP53	XA00498F	XA01130F	XA01131F	XA00518F	-
B2	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, 1/2D Ex ia IIIC Da/Db	FMP53	XA00502F	XA00502F	XA00502F	XA00522F	-
B3	ATEX II 1/2G Ex d[ia] IIC T6 Ga/Gb, 1/2 D Ex t IIIC Da/Db	FMP53	XA00503F	XA00503F	XA00503F	XA00523F	XA01136F
B4	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb	FMP53	XA00500F	XA01134F	XA01135F	XA00520F	-
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	FMP53	XA00530F	XA00530F	XA00530F	XA00571F	XA00530F
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	FMP53	XA00529F	XA00529F	XA00529F	XA00570F	XA00529F
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	FMP53	XA00531F	XA00531F	XA00531F	XA00573F	XA00531F
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	FMP53	XA00532F	XA00532F	XA00532F	XA00572F	XA00532F
GA	EAC Ex ia IIC T6 Ga	FMP53	XA01380F	XA01380F	XA01380F	XA01381F	XA01380F
GB	EAC Ex ia IIC T6 Ga/Gb	FMP53	XA01380F	XA01380F	XA01380F	XA01381F	XA01380F
GC	EAC Ex d[ia] IIC T6 Ga/Gb	FMP53	XA01382F	XA01382F	XA01382F	XA01383F	XA01382F
IA	IEC Ex ia IIC T6 Ga	FMP53	XA00496F	XA01125F	XA01126F	XA00516F	-
IB	IEC Ex ia IIC T6 Ga/Gb	FMP53	XA00496F	XA01125F	XA01126F	XA00516F	-
IC	IEC Ex d[ia] IIC T6 Ga/Gb	FMP53	XA00499F	XA00499F	XA00499F	XA00519F	XA01133F
IG	IEC Ex nA IIC T6 Gc	FMP53	XA00498F	XA01130F	XA01131F	XA00518F	XA01132F
IH	IEC Ex ic IIC T6 Gc	FMP53	XA00498F	XA01130F	XA01131F	XA00518F	-
I2	IEC Ex ia IIC T6 Ga/Gb, Ex ia IIIC Da/Db	FMP53	XA00502F	XA00502F	XA00502F	XA00522F	-
I3	IEC Ex d [ia] IIC T6 Ga/Gb, Ex t IIIC Da/Db	FMP53	XA00503F	XA00503F	XA00503F	XA00523F	XA01136F
I4	IEC Ex II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb	FMP53	XA00500F	XA01134F	XA01135F	XA00520F	-
KA	KC Ex ia IIC T6 Ga	FMP53	XA01169F	-	XA01169F	-	-
KB	KC Ex ia IIC T6 Ga/Gb	FMP53	XA01169F	-	XA01169F	-	-
KC	KC Ex d[ia] IIC T6	FMP53	-	-	XA01170F	-	-
MA	INMETRO Ex ia IIC T6 Ga	FMP53	XA01038F	XA01038F	XA01038F	-	XA01038F
MC	INMETRO Ex d[ia] IIC T6 Ga/Gb	FMP53	XA01041F	XA01041F	XA01041F	-	XA01041F
MH	INMETRO Ex ic IIC T6 Gc	FMP53	XA01040F	XA01040F	XA01040F	-	XA01040F
NA	NEPSI Ex ia IIC T6 Ga	FMP53	XA00634F	XA00634F	XA00634F	XA00640F	XA00634F
NB	NEPSI Ex ia IIC T6 Ga/Gb	FMP53	XA00634F	XA00634F	XA00634F	XA00640F	XA00634F
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	FMP53	XA00636F	XA00636F	XA00636F	XA00642F	XA00636F
NG	NEPSI Ex nA II T6 Gc	FMP53	XA00635F	XA00635F	XA00635F	XA00641F	XA00635F
NH	NEPSI Ex ic IIC T6 Gc	FMP53	XA00635F	XA00635F	XA00635F	XA00641F	XA00635F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90°C	FMP53	XA00638F	XA00638F	XA00638F	XA00644F	XA00638F

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90°C IP66	FMP53	XA00639F	XA00639F	XA00639F	XA00645F	XA00639F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	FMP53	XA00531F XA00532F	XA00531F XA00532F	XA00531F XA00532F	XA00572F XA00573F	XA00531F XA00532F

- 1) A: 2-wire; 4-20mA HART
- 2) B: 2-wire; 4-20mA HART, switch output
- 3) C: 2-wire; 4-20mA HART, 4-20mA
- 4) E: 2-wire; FOUNDATION Fieldbus, switch output
- 5) G: 2-wire; PROFIBUS PA, switch output
- 6) K: 4-wire 90-253VAC; 4-20mA HART
- 7) L: 4-wire 10,4-48VDC; 4-20mA HART

 For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

### 2.6.1 Ex-marking in case of connected FHX50 remote display

If the device is prepared for the remote display FHX50 (product structure: feature 030: "Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table <sup>1)</sup>:


Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex-marking
BG	L, M or N	ATEX II 3G Ex nA [ia Ga] IIC T6 Gc
BH	L, M or N	ATEX II 3G Ex ic [ia Ga] IIC T6 Gc
B3	L, M or N	ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IG	L, M or N	IECEX Ex nA [ia Ga] IIC T6 Gc
IH	L, M or N	IECEX Ex ic [ia Ga] IIC T6 Gc
I3	L, M or N	IECEX Ex d [ia] IIC T6 Ga/Gb, IECEX Ex ta [ia Db] IIIC Txx°C Da/Db

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

## 3 Product description

### 3.1 Product design

#### 3.1.1 Levelflex FMP53

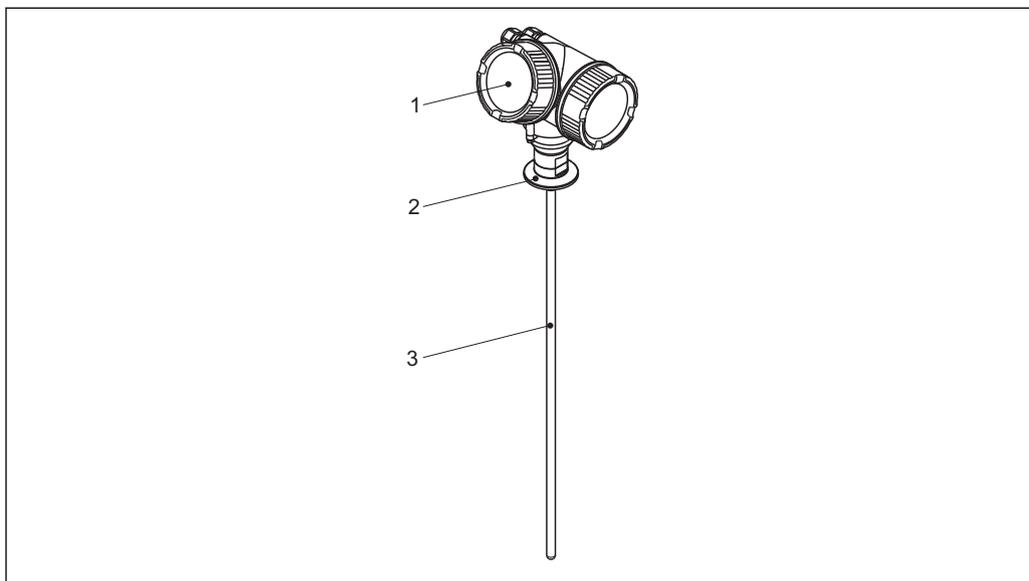


A0013421

#### 1 Design of the Levelflex

- 1 Electronics housing
- 2 Process connection
- 3 Rod probe

### 3.1.2 Electronics housing

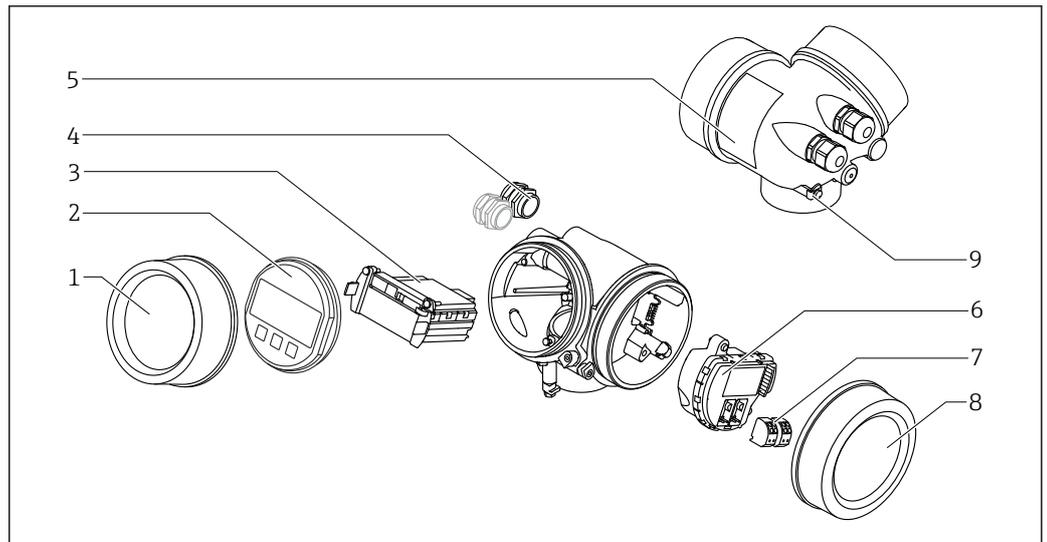

A0012422

#### 2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

## 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) present?




If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

### 4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

### 4.2.1 Nameplate

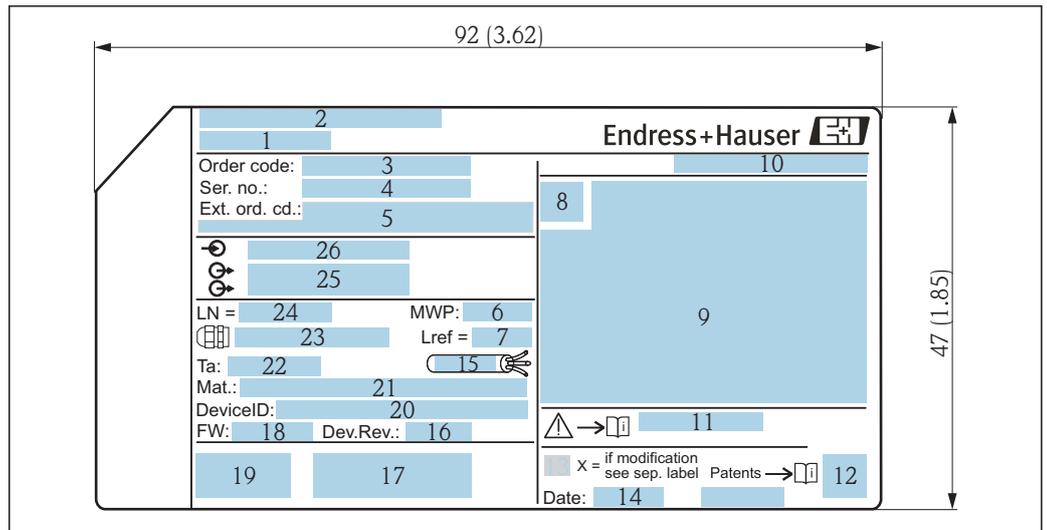

3 Nameplate of the Levelflex; Dimensions: mm (in)

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Gas phase compensation: reference distance
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 2-D matrix code (QR code)
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Permitted temperature range for cable
- 16 Device revision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 DeviceID
- 21 Material in contact with process
- 22 Permitted ambient temperature ( $T_a$ )
- 23 Size of the thread of the cable glands
- 24 Length of probe
- 25 Signal outputs
- 26 Operating voltage

**i** Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device in the **Extended order code 1 to 3** parameter.

## 5 Storage, Transport

### 5.1 Storage conditions

- Permitted storage temperature:  $-40$  to  $+80$  °C ( $-40$  to  $+176$  °F)
- Use the original packaging.


### 5.2 Transport product to the measuring point

**⚠ WARNING**

**Housing or probe may be damaged or break away.**

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the probe but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

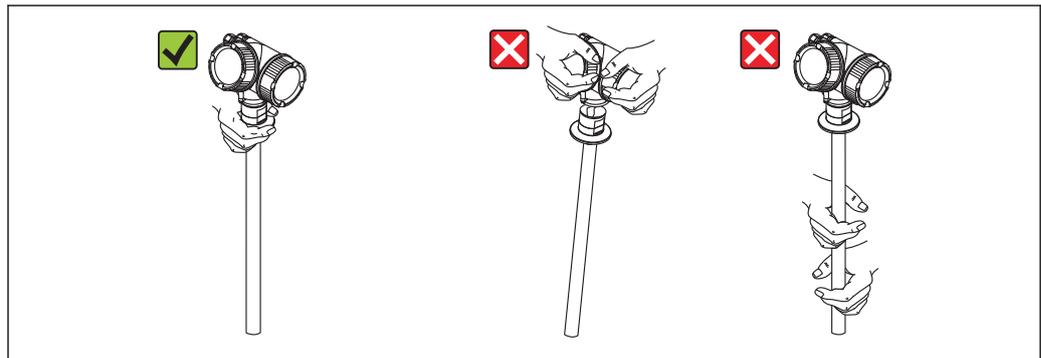


A0014267

## 6 Mounting

### 6.1 Mounting requirements

#### 6.1.1 Suitable mounting position

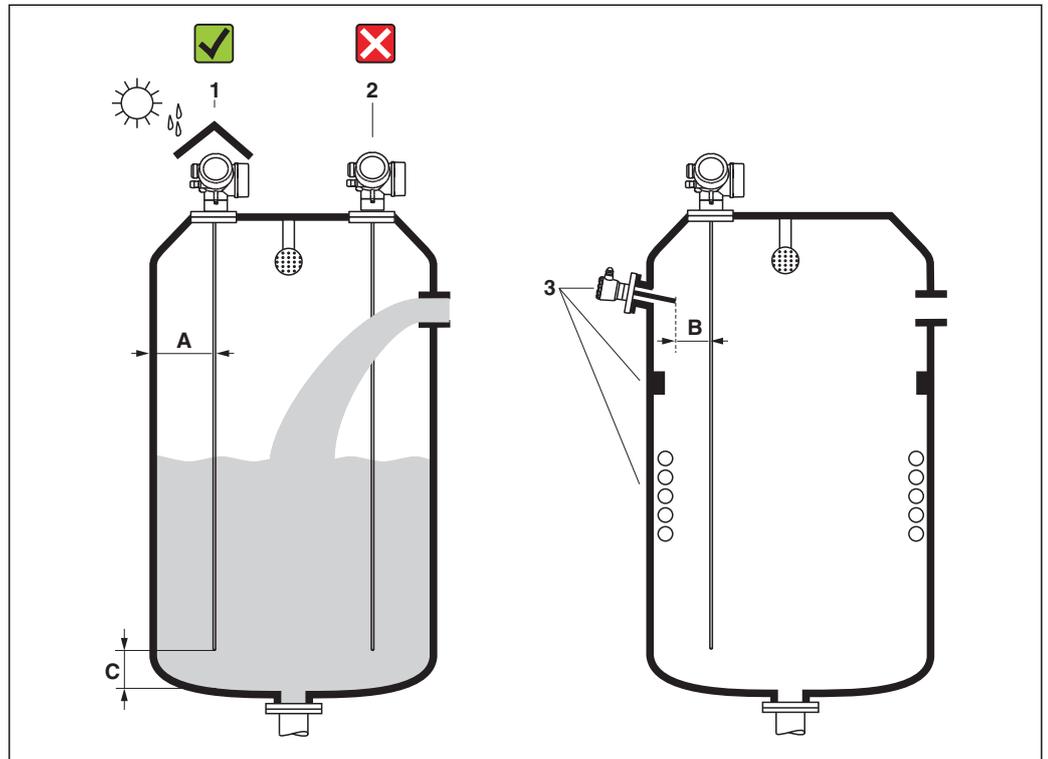

4 Mounting requirements for Levelflex

A0014130

#### Mounting distances

- Distance (A) between wall and rod probe:
  - for smooth metallic walls: > 50 mm (2 in)
  - for plastic walls: > 300 mm (12 in) to metallic parts outside the vessel
- Distance (B) between rod probe and internal fittings (3) in the vessel: > 300 mm (12 in)
- When using more than one Levelflex:
  - Minimum distance between the sensor axes: 100 mm (3.94 in)
- Distance (C) from end of probe to bottom of the vessel: > 10 mm (0.4 in).


**Additional conditions**

- When mounting in the open, a weather protection cover (1) may be installed to protect the device against extreme weather conditions.
  - Do not mount the probe in the filling curtain (2).
-  When mounting the electronics housing into a recess (e.g. in a concrete ceiling), observe a minimum distance of 100 mm (4 inch) between the cover of the terminal compartment / electronics compartment and the wall. Otherwise the connection compartment / electronics compartment is not accessible after installation.

## 6.1.2 Applications with restricted mounting space


### Mounting with remote sensor

The device version with a remote sensor is suited for applications with restricted mounting space. In this case the electronics housing is mounted at a separate position from which it is easier accessible.

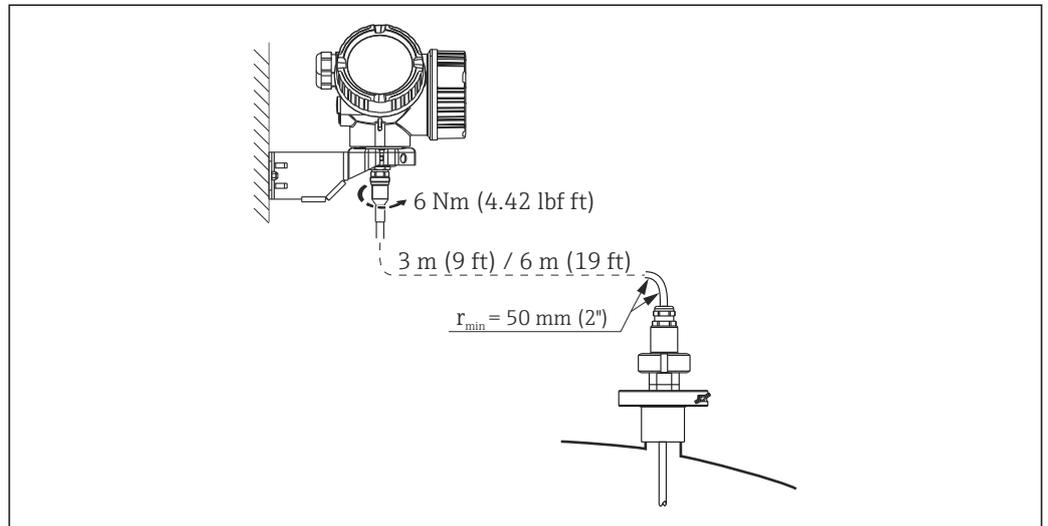

- Levelflex version (see product structure):  
Feature 600 "Probe Design"
  - Option MB "Sensor remote, 3m/9ft cable, detachable+mounting bracket"
  - Option MC "Sensor remote, 6m/18ft cable, detachable+mounting bracket"
- On delivery, the connection cable is fixed to the probe.
  - Length: 3 m (9 ft) or 6 m (19 ft)
  - Minimum bending radius: 50 mm (2 inch)
- A mounting bracket for the electronics housing is supplied with this device version.  
Mounting options:
  - Wall mounting
  - Pipe mounting; diameter: 42 to 60 mm (1-1/4 to 2 inch)
- **i** The probe with connection cable and the electronics are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.

### Divisible probes

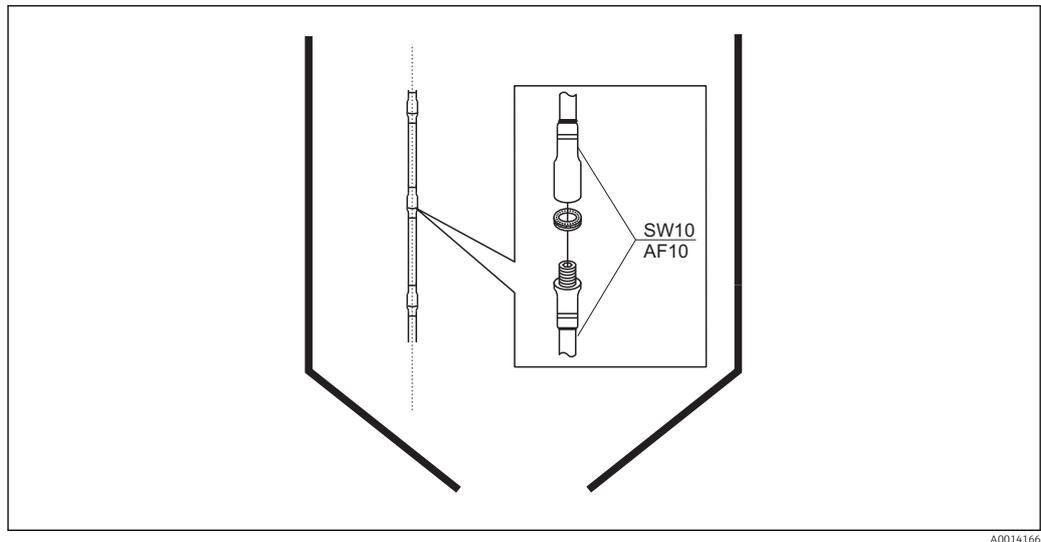

A0014166

If there is little mounting space (distance to the ceiling), it is advisable to use divisible rod probes ( $\varnothing$  8 mm).

- max. probe length 6 m/236 inch
- max. sideways capacity 10 Nm
- probes are separable several times with the following lengths of the individual parts:
  - 500 mm (20 in)
  - 1 000 mm (40 in)
- torque: 4.5 Nm
- The joints are sealed seamlessly with an O-ring.

- i** The joints between the individual rod segments are secured by the included Nord-Lock washers. Install the pre-assembled washers in pairs, cam face to cam face.
- i** In order to avoid damages of the probe surface: Use plumber wrenches with plastic surface to mount the probe rod.

### 6.1.3 Notes on the mechanical load of the probe

#### Bending strength of rod probes

Sensor	Feature 060	Probe	Bending strength [Nm]
FMP53	DA, DB, EA, EB	Rod 8mm (0.31") 316L	10
	FA, FB, GA, GB, HA, HB, IA, IB	Rod 8mm (0.31") 316L divisible	10

#### Bending load (torque) through fluid flow

The formula for calculating the bending torque  $M$  impacting on the probe:

$$M = c_w \cdot \rho / 2 \cdot v^2 \cdot d \cdot L \cdot (L_N - 0.5 \cdot L)$$

with:

$c_w$ : Friction factor

$\rho$  [kg/m<sup>3</sup>]: Density of the medium

$v$  [m/s]: Velocity of the medium perpendicular to the probe rod

$d$  [m]: Diameter of the probe rod

$L$  [m]: Level

$L_N$  [m]: Probe length


#### Calculation example

Friction factor  $c_w$  0,9 (on the assumption of a turbulent current - high Reynolds number)


Density  $\rho$  [kg/m<sup>3</sup>] 1000 (e.g. water)

Probe diameter  $d$  [m] 0,008

$L = L_N$  (worst case)

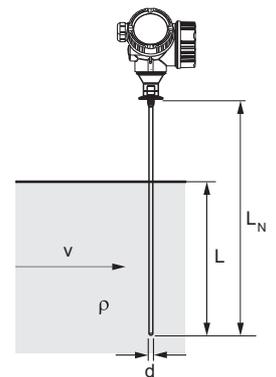


A0014175

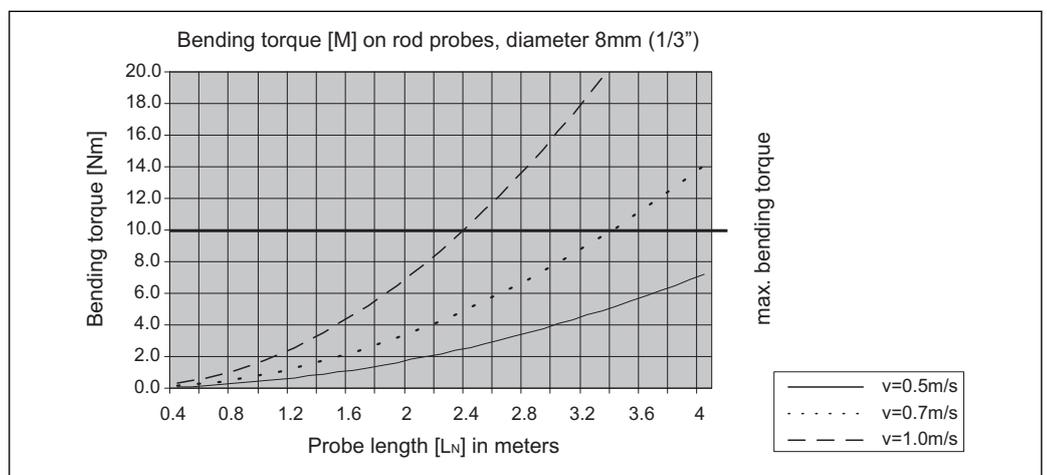

A0014182-EN

### 6.1.4 Special mounting conditions

#### Tanks with spray ball for cleaning the probe

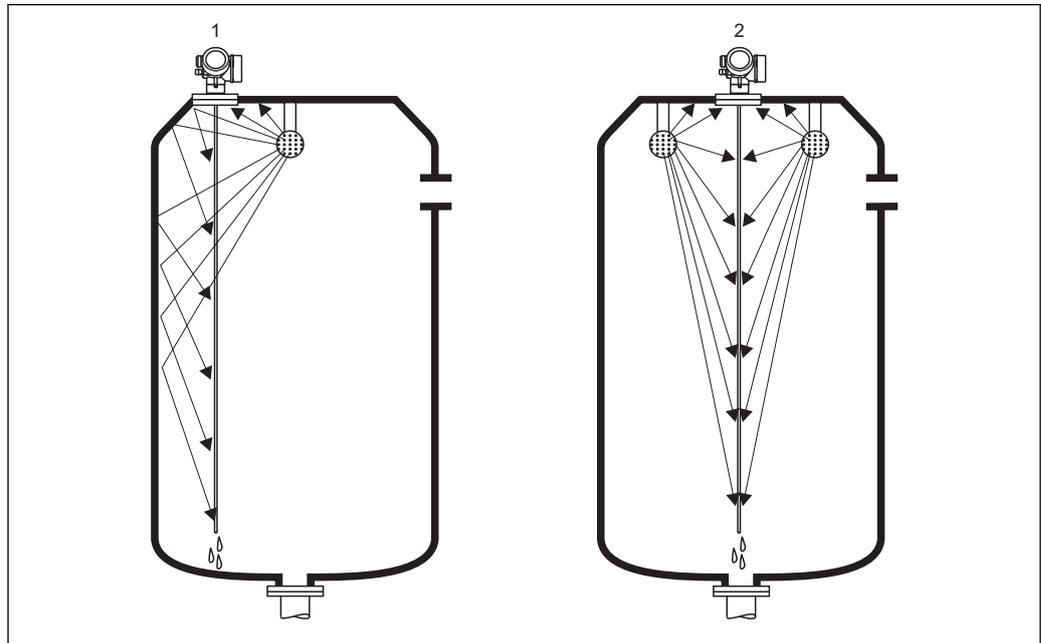

A0014131


#### *Installation close to tank wall*

By installing the probe close to the tank wall, the cleaning effect is improved in cases where a spray ball is used. The cleaning jet is deflected against the tank wall and onto the probe. This means that those parts of the probe are cleaned which would normally not be reached by the spray ball jet. If the probe is positioned in this way, only one spray ball is needed.

#### *Installation in the center of the tank*


If the probe is mounted in the center of the tank, it may be necessary to use a second spray ball. The spray balls should then be mounted to the left and right of the probe.

### Installation at an angle

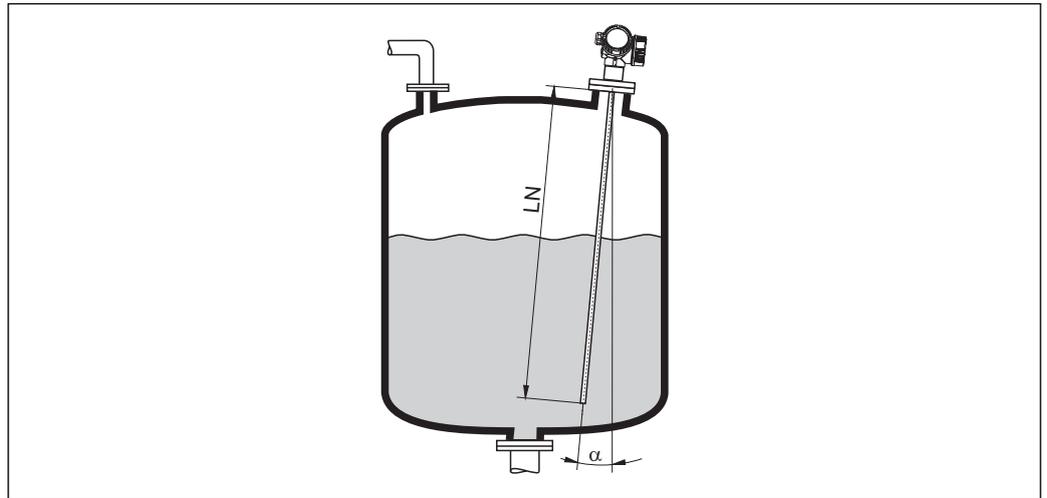

A0014145

- For mechanical reasons, the probe should be installed as vertically as possible.
- With inclined installations the probe length has to be adjusted in dependence to the installation angle.
  - Up to LN = 1 m (3.3 ft):  $\alpha = 30^\circ$
  - Up to LN = 2 m (6.6 ft):  $\alpha = 10^\circ$
  - Up to LN = 4 m (13.1 ft):  $\alpha = 5^\circ$

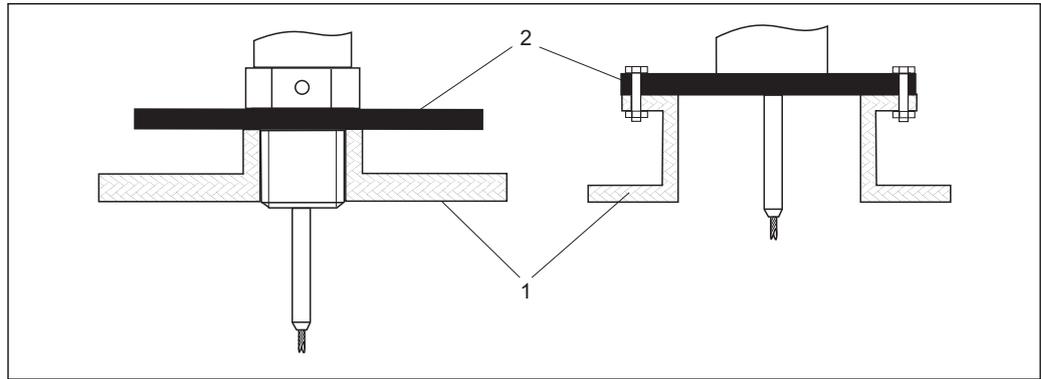
**Non-metallic vessels**

A0012527

- 1 *Non-metallic vessel*
- 2 *Metal sheet or metal flange*

To ensure reliable measurements in non-metallic vessels mount a metal sheet with a diameter of at least 200 mm (8 in) to the probe at the process connection. Its orientation must be perpendicular to the probe.

### Plastic or glass tanks: Mounting the probe externally at the wall

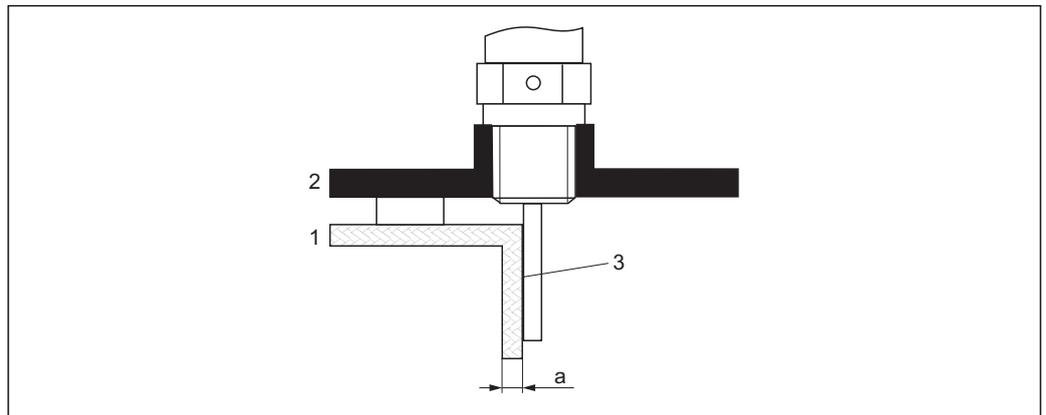

A0014150

- 1 Plastic or glass tank
- 2 Metall sheet with threaded sleeve
- 3 No free space between tank wall and probe!

#### Requirements

- The dielectric constant of the medium must be at least  $DC > 7$ .
- The tank wall must be non-conductive.
- Maximum wall thickness (a):
  - Plastic: < 15 mm (0.6")
  - Glass: < 10 mm (0.4")
- There may be no metallic reinforcements fixed to the tank.

#### Mounting conditions:

- The probe must be mounted directly to the tank wall (no open space)
- A plastic half pipe with a diameter of approx. 200 mm (8"), or some other protective unit, must be affixed externally to the probe to prevent any influences on the measurement.
- If the tank diameter is less than 300 mm (12"):
  - A metallic grounding sheet must be installed at the opposite side of the tank. The sheet must be conductively connected to the process connection and cover about the half of the vessel's circumference.
- If the tank diameter exceeds 300 mm (12"):
  - A metal sheet with a diameter of at least 200 mm (8") must be mounted to the probe at the process connection. Its orientation must be perpendicular to the probe (see above).

#### Calibration for external probe mounting

If the probe is mounted externally at the wall of the tank, the speed of signal propagation will be reduced. There are two possibilities to compensate for this effect.

#### Compensation with the gas phase compensation factor

The effect of the dielectric wall can be compared to the effect of a dielectric gas phase. Thus it can be compensated for in the same manner. The compensation factor is given by the quotient of the actual probe length  $L_N$  and the probe length measured when the tank is empty.

- i The device looks for the end of probe signal in the subtracted curve. Thus, the value of the measured probe length depends on the mapping. In order to obtain an exact value, it is advisable to determine the probe length manually using the envelope curve display in FieldCare.

Step	Parameter	Action
1	Expert → Sensor → Gas phase compensation → GPC mode	Select the <b>Const. GPC factor</b> option.
2	Expert → Sensor → Gas phase compensation → Const. GPC factor	Enter quotient: "(Actual probe length)/(Measured probe length)".

#### *Compensation via the calibration parameters*


If an actual gas phase has to be compensated for, the gas phase compensation functionality is no longer available for a correction of the external mounting. In this case the calibration parameters (**Empty calibration** and **Full calibration**) must be adjusted and a value longer than the actual probe length has to be entered into the **Present probe length** parameter. The correction factor for these three parameters is given by the quotient of the probe length measured when the tank is empty and the actual probe length LN.

 The device looks for the end of probe signal in the subtracted curve. Thus, the value of the measured probe length depends on the mapping. In order to obtain an exact value, it is advisable to determine the probe length manually using the envelope curve display in FieldCare.

Step	Parameter	Action
1	Setup → Empty calibration	Increase parameter value by "(Measured probe length)/(Actual probe length)".
2	Setup → Full calibration	Increase parameter value by "(Measured probe length)/(Actual probe length)".
3	Setup → Advanced setup → Probe settings → Probe length correction → Confirm probe length	Select the <b>Manual input</b> option.
4	Setup → Advanced setup → Probe settings → Probe length correction → Present probe length	Enter measured probe length.

### Vessels with heat insulation

**i** If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the points labeled "MAX" in the drawings.

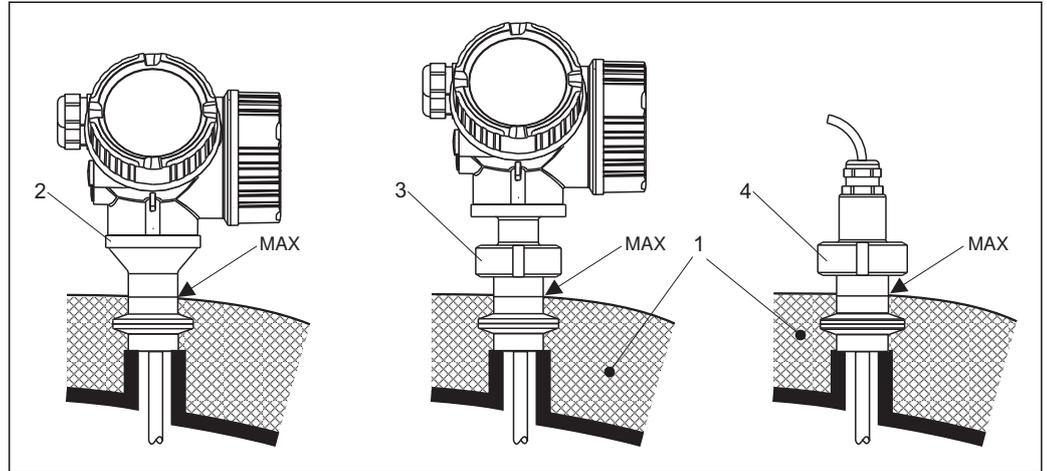

**5** Hygienic process connections - FMP53

- 1 Tank insulation
- 2 Compact device
- 3 Compact device, detachable (feature 600)
- 4 Sensor remote (feature 600)

## 6.2 Mounting the device

### 6.2.1 Required mounting tools

- To shorten rod or coax probes: Saw
- For flanges and other process connections: appropriate mounting tools
- To turn the housing: Hexagonal wrench 8 mm

### 6.2.2 Mounting the "Sensor remote" version

 This section is only valid for devices of the version "Probe Design" = "Sensor remote" (feature 600, option MB or MC).

For the version "Probe design" = "Sensor remote" the following is supplied:

- The probe with the process connection and the connection cable (3m/9ft or 6m/18ft)
- The electronics housing
- The mounting bracket for wall or pipe mounting of the electronics housing

 The connection cable is fixed to the probe on delivery.

 The probe with connection cable and the electronics are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.


#### CAUTION

**Mechanical stress may damage the plugs of the connection cable or cause accidental loosening of the plugs.**

- ▶ Mount the probe and the electronics housing tightly before connecting the cable.
- ▶ Lay the cable such that it is not exposed to mechanical stress. Minimum bending radius: 50 mm (2").
- ▶ Torque for the coupling nut at the electronics housing: 6 Nm
- ▶ Torque for the coupling nut at the probe: 20 Nm

 If the measuring point is exposed to strong vibrations, an additional locking compound (e.g. Loctite 243) can be applied at the plug connector of the electronics housing.

### Mounting the electronics housing

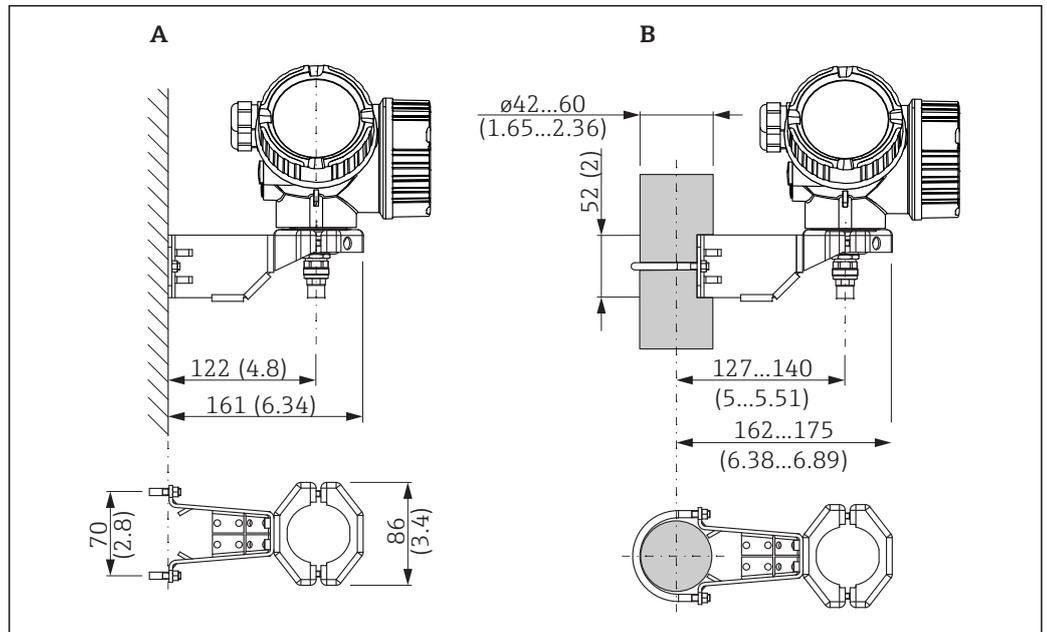

6 Mounting the electronics housing using the mounting bracket; dimensions: mm (In)


A Wall mounting

B Pipe mounting

### Connecting the cable


#### Required tools:

- For the coupling nut at the housing side of the cable: Open-end wrench AF 18mm
- For the coupling nut at the probe side of the cable: 54mm (2.1") hook wrench and 27 mm (1-1/16") open-end wrench

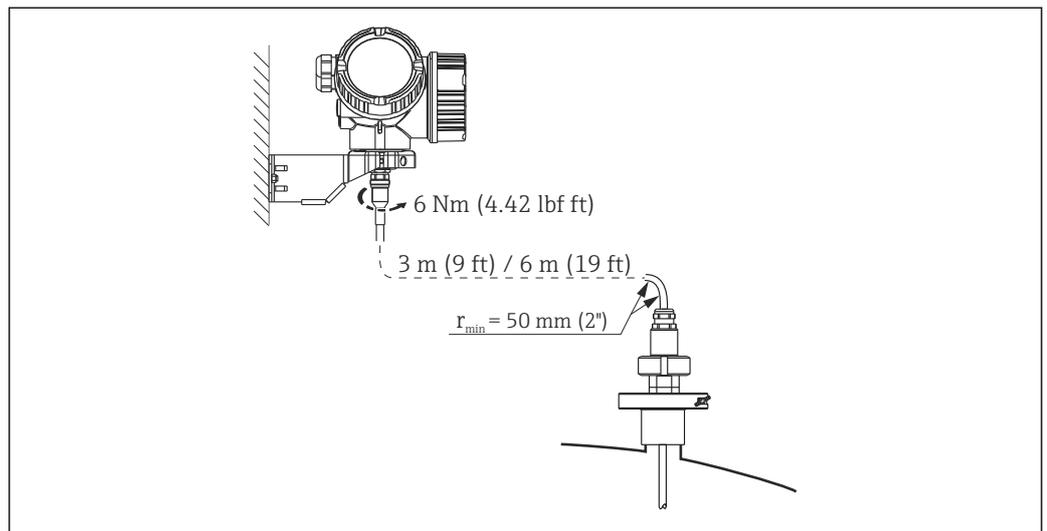

### 6.2.3 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

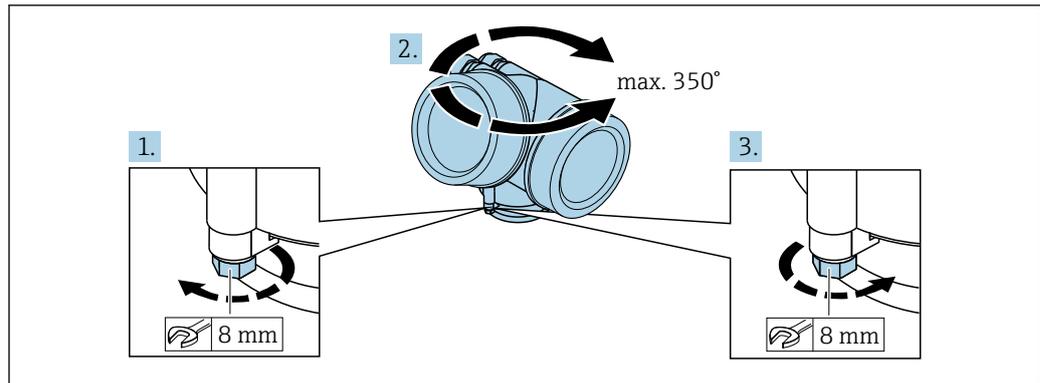


A0032242

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).

### 6.2.4 Turning the display


#### Opening cover

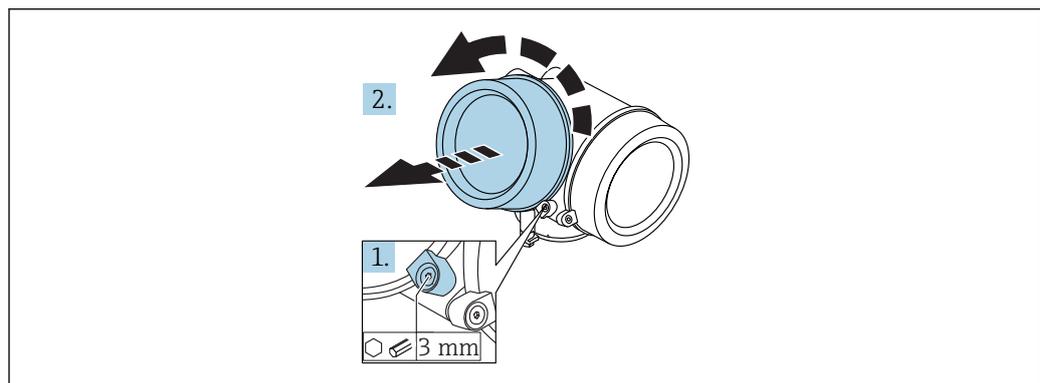

A0021430

1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
2. Unscrew cover and check lid gasket, replace if necessary.

#### Turning the display module

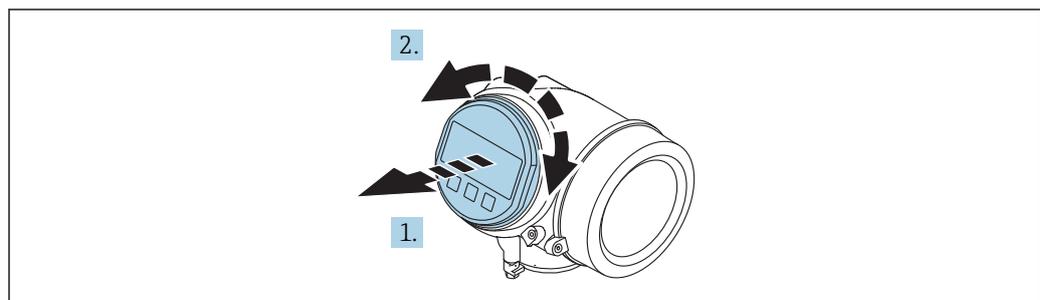


A0036401

1. Pull out the display module with a gentle rotational movement.
2. Rotate the display module to the desired position: max.  $8 \times 45^\circ$  in each direction.

3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

### Closing electronics compartment cover

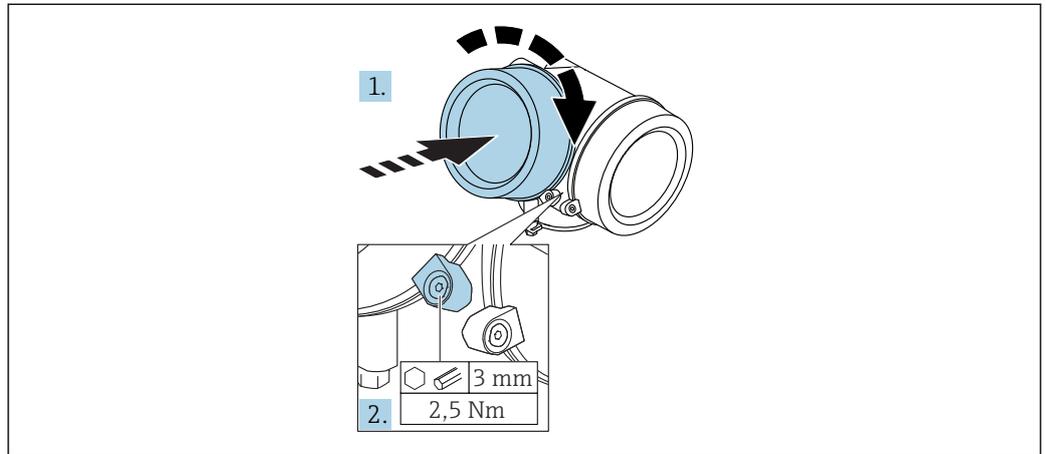

A0021451

1. Screw back firmly electronics compartment cover.
2. Turning securing clamp 90 ° clockwise and tighten the clamp with 2.5 Nm using the Allen key (3 mm).

### 6.3 Post-installation check


<input type="radio"/>	Is the device undamaged (visual inspection)?
<input type="radio"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none"><li>▪ Process temperature</li><li>▪ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)</li><li>▪ Ambient temperature range</li><li>▪ Measuring range</li></ul>
<input type="radio"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="radio"/>	Is the device adequately protected from precipitation and direct sunlight?
<input type="radio"/>	Are the securing screw and securing clamp tightened securely?

## 7 Electrical connection

### 7.1 Connection conditions

#### 7.1.1 Terminal assignment

##### Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

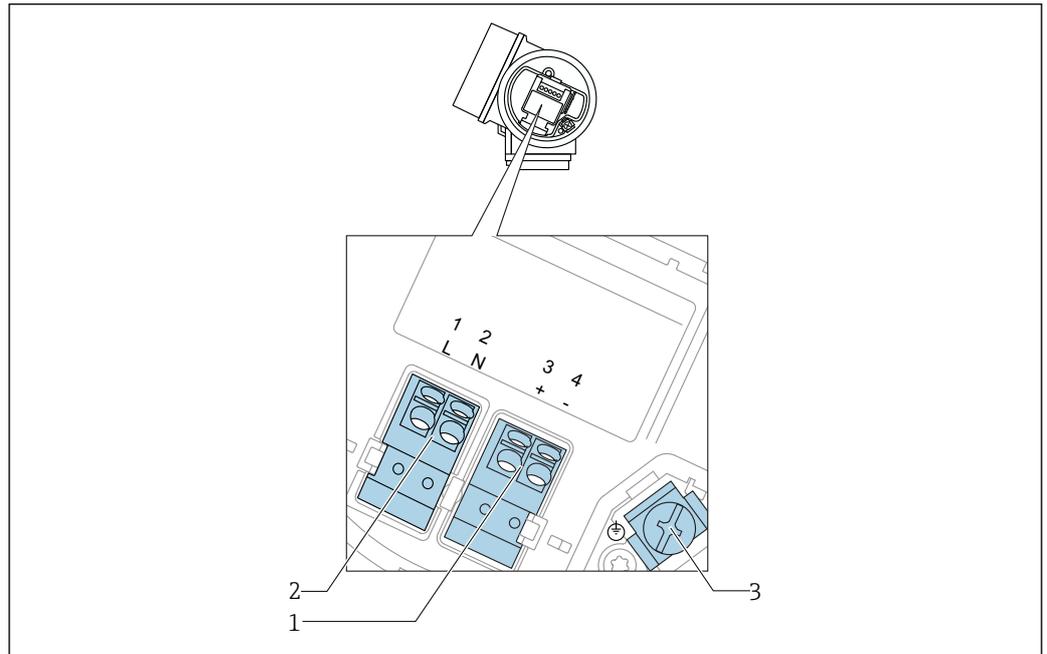

**7** Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen


#### **CAUTION**

##### To ensure electrical safety:

- ▶ Do not disconnect the protective connection.
- ▶ Disconnect the supply voltage before disconnecting the protective earth.

- i** Connect protective earth to the internal ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal.
- i** In order to ensure electromagnetic compatibility (EMC): Do **not** only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnecter for the device (IEC/EN61010).

**Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus**

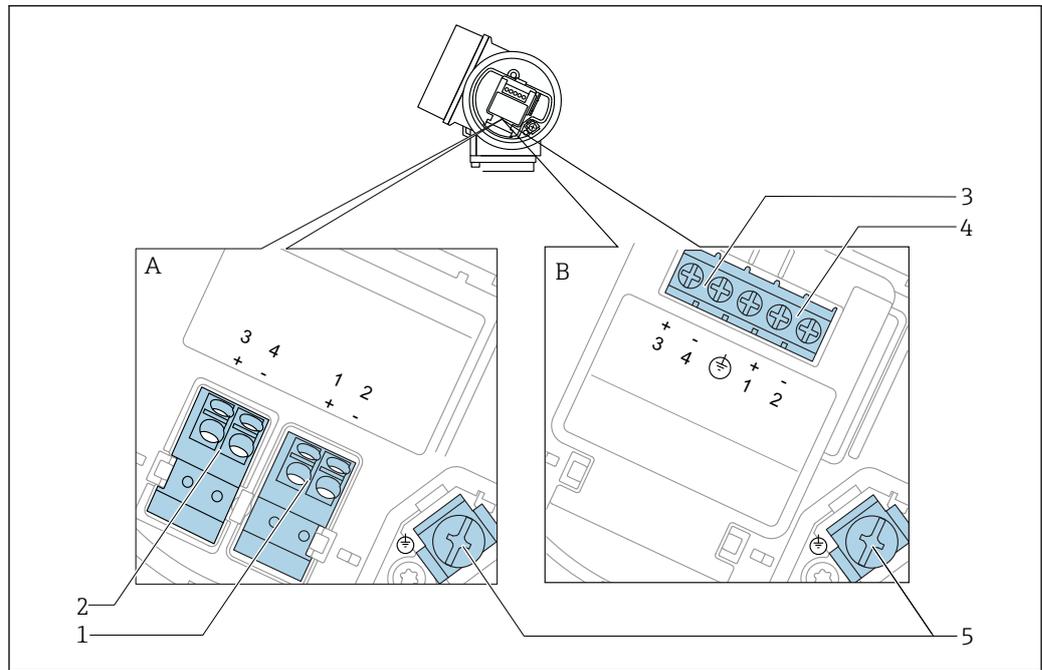

A0036500

8 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection


2 Connection switch output (Open Collector): terminals 3 and 4, without integrated overvoltage protection

3 Connection switch output (Open Collector): terminals 3 and 4, with integrated overvoltage protection

4 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable screen

**Block diagram PROFIBUS PA / FOUNDATION Fieldbus**

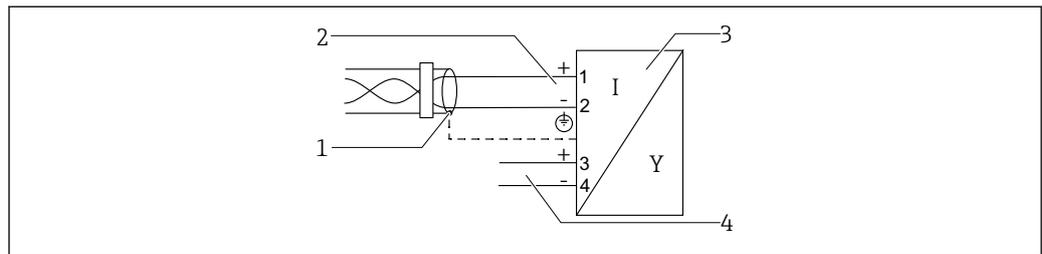

A0036530

9 Block diagram PROFIBUS PA / FOUNDATION Fieldbus



1 Cable screen; observe cable specifications

2 Connection PROFIBUS PA / FOUNDATION Fieldbus

3 Measuring device

4 Switch output (open collector)

**Connection examples for the switch output**

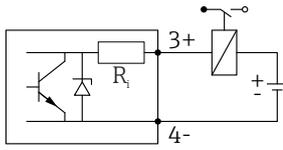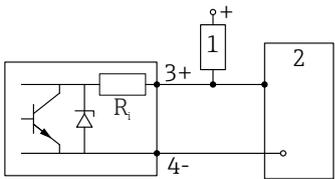 <p><b>10</b> Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> <li>▪ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS</li> <li>▪ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21</li> </ul>	 <p><b>11</b> Connection of a digital input</p> <p>1 Pull-up resistor 2 Digital input</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**i** For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of < 1 000 Ω.

**7.1.2 Cable specification**

- **Devices without integrated overvoltage protection**  
Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- **Devices with integrated overvoltage protection**  
Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)
- For ambient temperature T<sub>U</sub> ≥ 60 °C (140 °F): use cable for temperature T<sub>U</sub> + 20 K.

**FOUNDATION Fieldbus**


Endress+Hauser recommends using twisted, shielded two-wire cables.

**i** For further information on the cable specifications, see Operating Instructions BA00013S "FOUNDATION Fieldbus Overview", FOUNDATION Fieldbus Guideline and IEC 61158-2 (MBP).


### 7.1.3 Device plug connectors

**i** For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

*Pin assignment of the M12 plug connector*

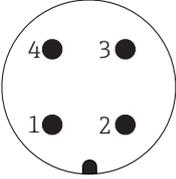 <p style="text-align: right; font-size: small;">A0011175</p>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

*Pin assignment of the 7/8" plug connector*

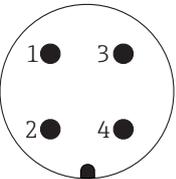 <p style="text-align: right; font-size: small;">A0011176</p>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen

### 7.1.4 Power supply

#### PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage
<b>E:</b> 2-wire; FOUNDATION Fieldbus, switch output <b>G:</b> 2-wire; PROFIBUS PA, switch output	<ul style="list-style-type: none"> <li>■ Non-Ex</li> <li>■ Ex nA</li> <li>■ Ex nA[ia]</li> <li>■ Ex ic</li> <li>■ Ex ic[ia]</li> <li>■ Ex d[ia] / XP</li> <li>■ Ex ta / DIP</li> <li>■ CSA GP</li> </ul>	9 to 32 V <sup>3)</sup>
	<ul style="list-style-type: none"> <li>■ Ex ia / IS</li> <li>■ Ex ia + Ex d[ia] / IS + XP</li> </ul>	9 to 30 V <sup>3)</sup>

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) Input voltages up to 35 V will not spoil the device.

<b>Polarity sensitive</b>	No
<b>FISCO/FNICO compliant according to IEC 60079-27</b>	Yes

### 7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 μs), an overvoltage protection module has to be installed.

#### Integrated overvoltage protection module

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 × 0.5 Ω max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 μs)	10 kA

#### External overvoltage protection module

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

-  For detailed information please refer to the following documents:
- HAW562: TI01012K
  - HAW569: TI01013K

## 7.2 Connecting the measuring device

### **⚠ WARNING**


#### **Risk of explosion!**

- ▶ Observe applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

#### **Required tools/accessories:**

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


### 7.2.1 Opening connection compartment cover

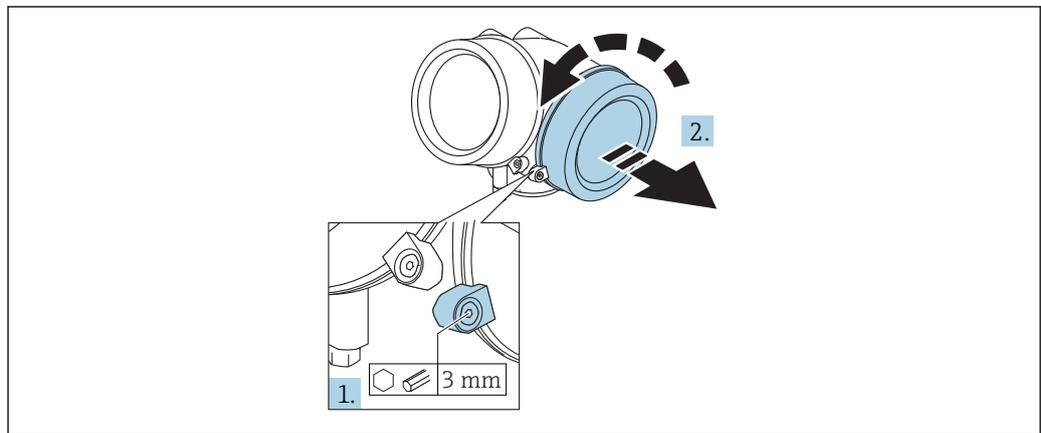

A0021490


1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90 ° clockwise.
2. Afterwards unscrew connection compartment cover and check lid gasket, replace if necessary.

### 7.2.2 Connecting

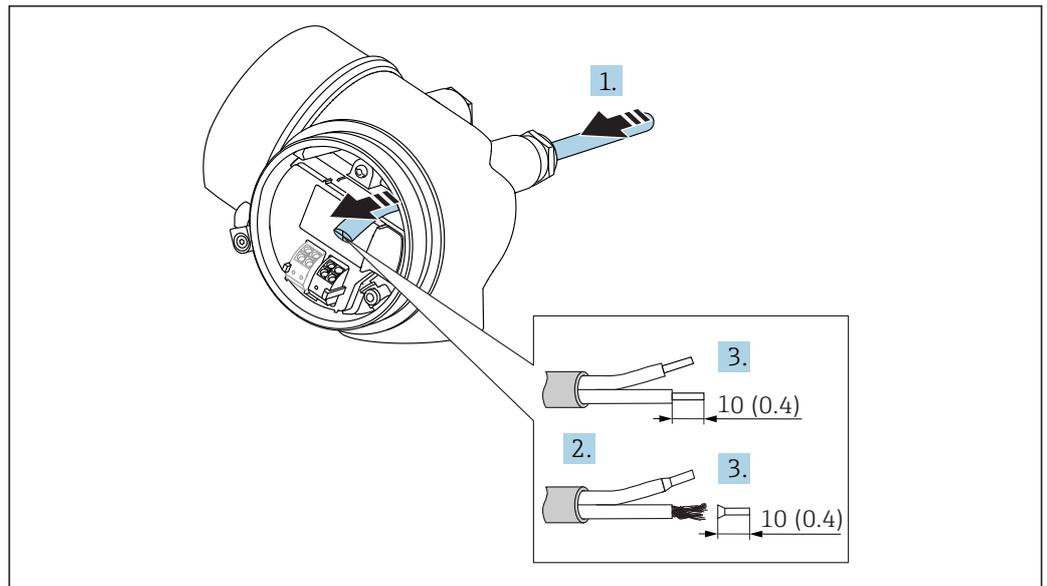

12 Dimensions: mm (in)


1. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
2. Remove the cable sheath.
3. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
4. Firmly tighten the cable glands.
5. Connect the cable in accordance with the terminal assignment.

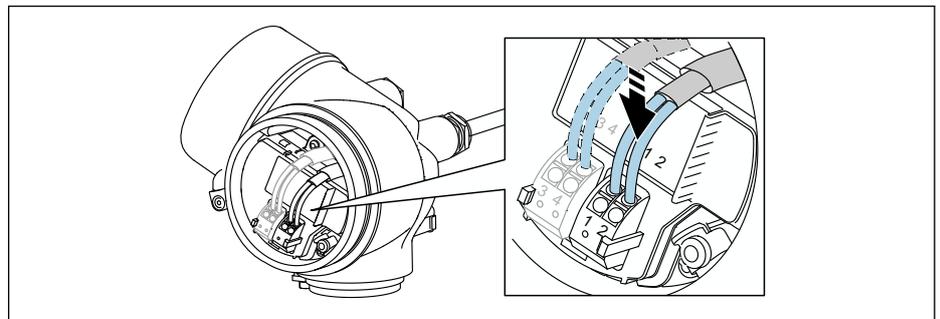

6. If using shielded cables: Connect the cable shield to the ground terminal.

### 7.2.3 Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

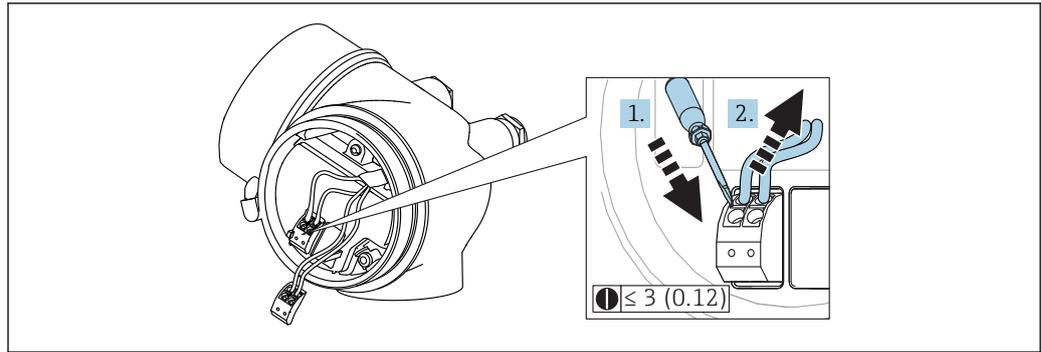


A0013661

13 Dimensions: mm (in)

To remove cables from the terminal:

1. Using a flat-blade screwdriver  $\leq 3$  mm, press down on the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

### 7.2.4 Closing connection compartment cover

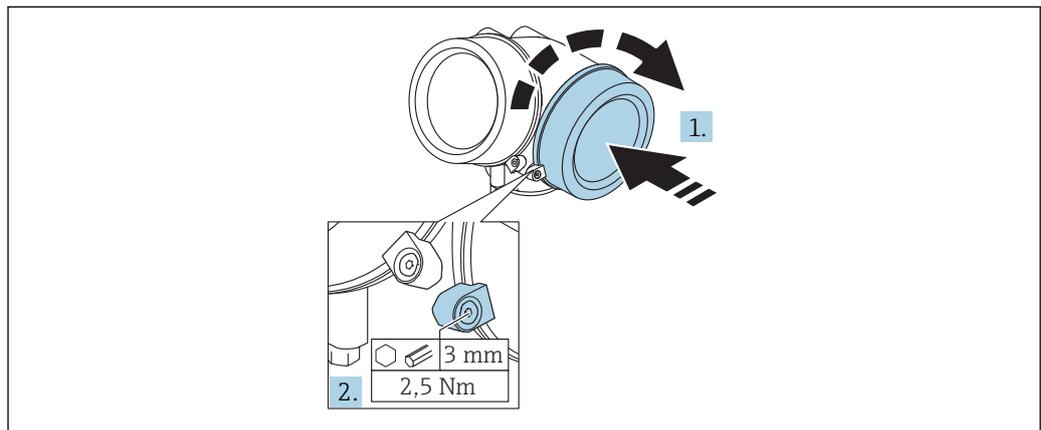

A0021491

1. Screw back firmly connection compartment cover.
2. Turning securing clamp  $90^\circ$  counterclockwise and tighten the clamp with 2.5 Nm (1.84 lbf ft) again using the Allen key (3 mm).

## 7.3 Post-connection check



<input type="checkbox"/>	Is the device or cable undamaged (visual check)?
<input type="checkbox"/>	Do the cables comply with the requirements ?
<input type="checkbox"/>	Do the cables have adequate strain relief?
<input type="checkbox"/>	Are all cable glands installed, securely tightened and leak-tight?
<input type="checkbox"/>	Does the supply voltage match the specifications on the nameplate?
<input type="checkbox"/>	Is the terminal assignment correct?

<input type="checkbox"/>	If required: Has protective ground connection been established ?
<input type="checkbox"/>	If supply voltage is present, is the device ready for operation and do values appear on the display module?
<input type="checkbox"/>	Are all housing covers installed and securely tightened?
<input type="checkbox"/>	Is the securing clamp tightened correctly?


## 8 Operation options

### 8.1 Overview

#### 8.1.1 Local operation

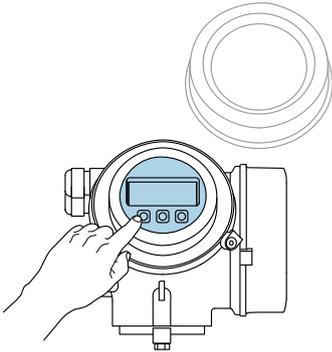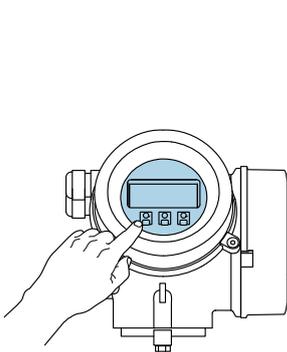Operation with	<i>Pushbuttons</i>	<i>Touch Control</i>
Order code for "Display; Operation"	Option C "SD02"	Option E "SD03"
	 A0036312	 A0036313
<b>Display elements</b>	4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
<b>Operating elements</b>	local operation with 3 push buttons (⊕, ⊖, ⊞)	external operation via touch control; 3 optical keys: ⊕, ⊖, ⊞
	Operating elements also accessible in various hazardous areas	
<b>Additional functionality</b>	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

### 8.1.2 Operation with remote display and operating module FHX50

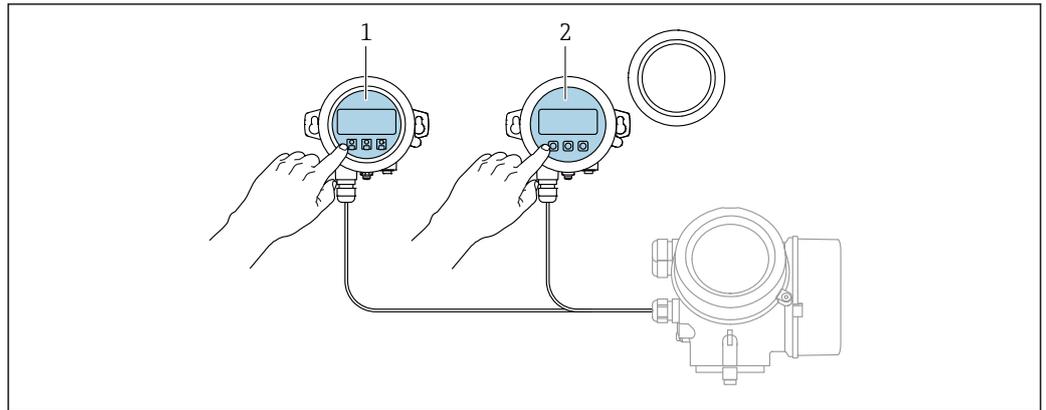


A0036314

14 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

### 8.1.3 Remote operation

Via FOUNDATION Fieldbus

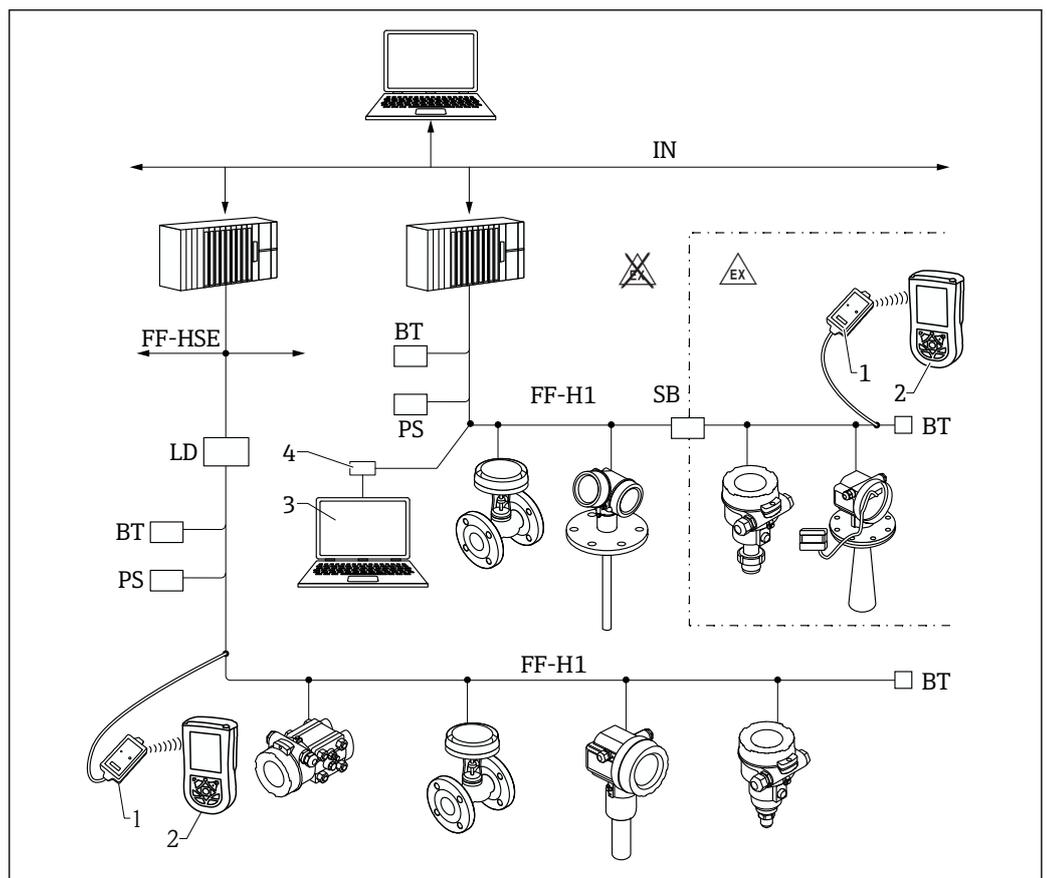


A0017188

15 FOUNDATION Fieldbus system architecture with associated components

- 1 FFblue Bluetooth modem
- 2 Field Xpert SFX350/SFX370
- 3 DeviceCare/FieldCare
- 4 NI-FF interface card

IN	Industrial network
FF-HSE	High Speed Ethernet
FF-H1	FOUNDATION Fieldbus-H1
LD	Linking Device FF-HSE/FF-H1
PS	Bus Power Supply
SB	Safety Barrier
BT	Bus Terminator

**DeviceCare/FieldCare via service interface (CDI)**

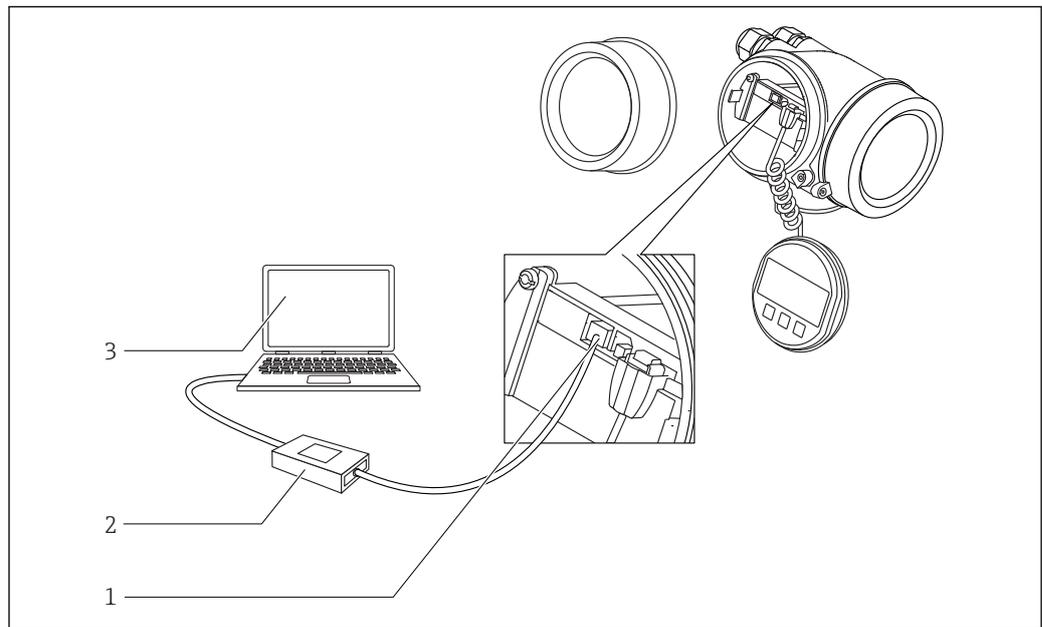

A0032466

16 DeviceCare/FieldCare via service interface (CDI)

- 1 Service interface (CDI) of the instrument (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with DeviceCare/FieldCare operating tool

## 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the on-site display
<b>Commissioning</b> <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
<b>Setup</b>	Parameter 1 ... Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	<b>Advanced setup</b>	Contains additional submenus and parameters: <ul style="list-style-type: none"> <li>▪ to adapt the device to special measuring conditions.</li> <li>▪ to process the measured value (scaling, linearization).</li> <li>▪ to configure the signal output.</li> </ul>
<b>Diagnostics</b>	<b>Diagnostic list</b>	Contains up to 5 currently active error messages.
	<b>Event logbook</b> <sup>3)</sup>	Contains the last 20 messages (which are no longer active).
	<b>Device information</b>	Contains information for identifying the device.
	<b>Measured values</b>	Contains all current measured values.
	<b>Data logging</b>	Contains the history of the individual measuring values.
	<b>Simulation</b>	Is used to simulate measured values or output values.
	<b>Device check</b>	Contains all parameters needed to check the measurement capability of the device.
	<b>Heartbeat</b> <sup>4)</sup>	Contains all the wizards for the <b>Heartbeat Verification</b> and <b>Heartbeat Monitoring</b> application packages.
<b>Expert</b> <sup>5)</sup> Contains all parameters of the device (including those that are already in one of the other menus). This menu is organized according to the function blocks of the device. The parameters of the Expert menu are described in: GP01015F (FOUNDATION Fieldbus)	<b>System</b>	Contains all higher-order device parameters that do not concern the measurement or measured value communication.
	<b>Sensor</b>	Contains all parameters needed to configure the measurement.
	<b>Output</b>	Contains all parameters needed to configure the switch output (PFS).

Menu	Submenu / parameter	Meaning
	<b>Communication</b>	Contains all parameters needed to configure the digital communication interface.
	<b>Diagnostics</b>	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) only available with local operation
- 4) only available if operating via DeviceCare or FieldCare
- 5) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.

### 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  53.

*Access authorization to parameters*

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

### 8.2.3 Data access - Security

#### Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

#### Define access code via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
  - ↳ The -symbol appears in front of all write-protected parameters.

#### Define access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
  - ↳ Write protection is active.

#### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.

-  If write access is activated via access code, it can be also be deactivated only via the access code →  54.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

### Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  53.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
  - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

### Deactivation of the write protection via access code

#### Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code  
→ Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

#### Via an operating tool (e.g. FieldCare)


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

### Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via FOUNDATION Fieldbus

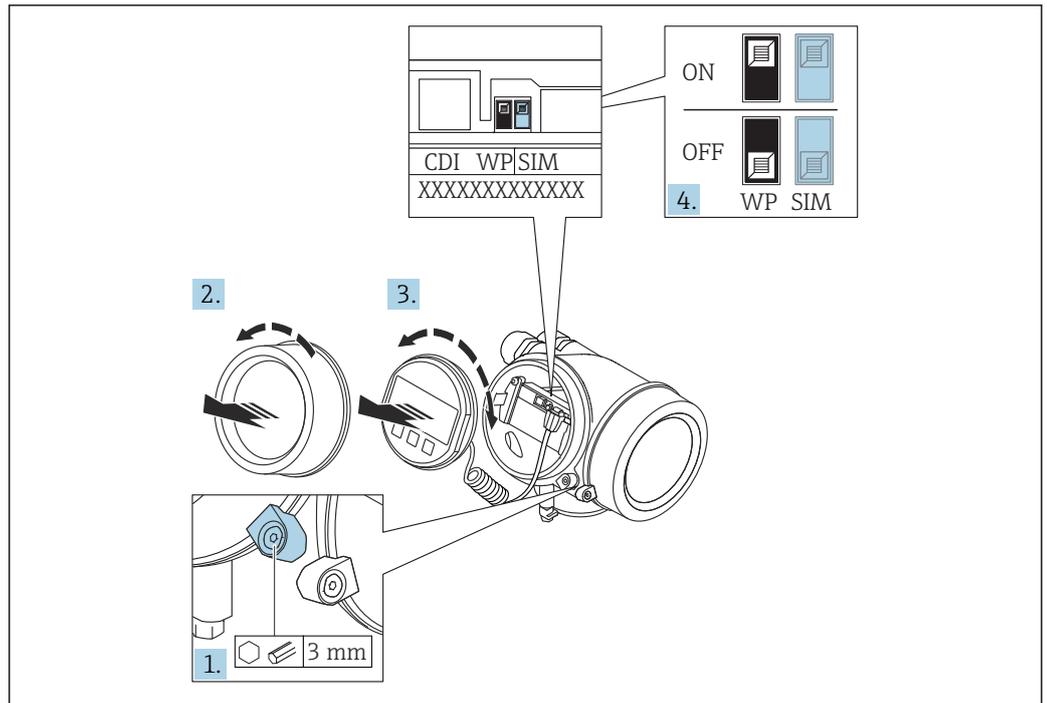


A0021474

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

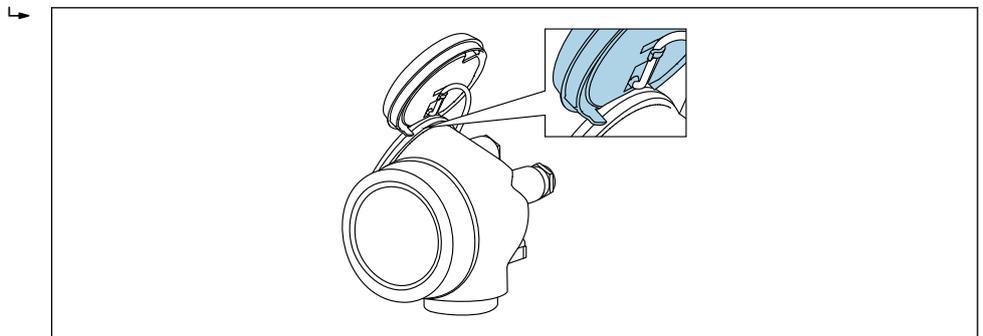

A0036086

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

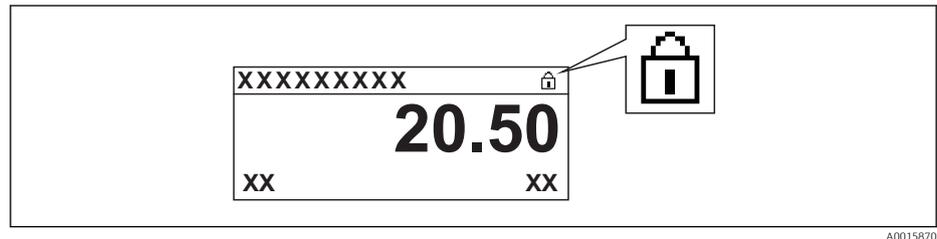

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

### Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

#### *Switching on the keypad lock*



#### **For the SD03 display only**

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### **To activate the keylock manually:**

1. The device is in the measured value display.  
Press for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.  
↳ The keypad lock is switched on.



If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

#### *Switching off the keypad lock*

1. The keypad lock is switched on.  
Press for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.  
↳ The keypad lock is switched off.


### Bluetooth® wireless technology

**Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute**

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue app
- Only one point-to-point connection between **one** sensor and **one** smartphone or tablet is established

## 8.3 Display and operating module

### 8.3.1 Display appearance

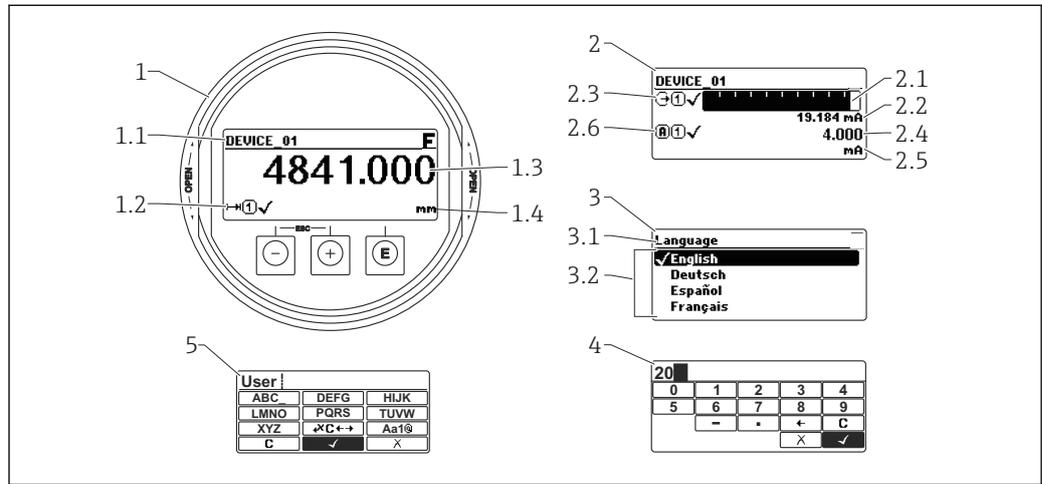

A0012635

17 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list;  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

### Display symbols for the submenus

Symbol	Meaning
 <small>A0018367</small>	<b>Display/operation</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Display/operation"</li> <li>in the header, if you are in the "Display/operation" menu</li> </ul>
 <small>A0018364</small>	<b>Setup</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Setup"</li> <li>in the header, if you are in the "Setup" menu</li> </ul>
 <small>A0018365</small>	<b>Expert</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Expert"</li> <li>in the header, if you are in the "Expert" menu</li> </ul>
 <small>A0018366</small>	<b>Diagnostics</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Diagnostics"</li> <li>in the header, if you are in the "Diagnostics" menu</li> </ul>

### Status signals

<b>F</b> <small>A0032902</small>	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0032903</small>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0032904</small>	<b>"Out of specification"</b> The device is operated: <ul style="list-style-type: none"> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0032905</small>	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.

### Display symbols for the locking state

Symbol	Meaning
 <small>A0013148</small>	<b>Display parameter</b> Marks display-only parameters which can not be edited.
 <small>A0013150</small>	<b>Device locked</b> <ul style="list-style-type: none"> <li>In front of a parameter name: The device is locked via software and/or hardware.</li> <li>In the header of the measured value screen: The device is locked via hardware.</li> </ul>


**Measured value symbols**

Symbol	Meaning
<b>Measured values</b>	
 <small>A0032892</small>	<b>Level</b>
 <small>A0032893</small>	<b>Distance</b>
 <small>A0032908</small>	<b>Current output</b>
 <small>A0032894</small>	<b>Measured current</b>
 <small>A0032895</small>	<b>Terminal voltage</b>
 <small>A0032896</small>	<b>Temperature of the electronics or the sensor</b>
<b>Measuring channels</b>	
 <small>A0032897</small>	<b>Measuring channel 1</b>
 <small>A0032898</small>	<b>Measuring channel 2</b>
<b>Status of the measured value</b>	
 <small>A0018361</small>	<p><b>Status "Alarm"</b>                      The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.</p>
 <small>A0018360</small>	<p><b>Status "Warning"</b>                      The device continues measuring. A diagnostic message is generated.</p>

### 8.3.2 Operating elements

Key	Meaning
 <small>A0018330</small>	<p><b>Minus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0018329</small>	<p><b>Plus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0018328</small>	<p><b>Enter key</b></p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly opens the operating menu.</li> <li>▪ Pressing the key for 2 s opens the context menu.</li> </ul> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly                      Opens the selected menu, submenu or parameter.</li> <li>▪ Pressing the key for 2 s for parameter:                      If present, opens the help text for the function of the parameter.</li> </ul> <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly                             <ul style="list-style-type: none"> <li>- Opens the selected group.</li> <li>- Carries out the selected action.</li> </ul> </li> <li>▪ Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
 <small>A0032909</small>	<p><b>Escape key combination (press keys simultaneously)</b></p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly                             <ul style="list-style-type: none"> <li>- Exits the current menu level and takes you to the next higher level.</li> <li>- If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>▪ Pressing the key for 2 s returns you to the measured value display ("home position").</li> </ul> <p><i>For text and numeric editor</i>                      Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p><b>Minus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p><b>Plus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Increases the contrast (darker setting).</p>

### 8.3.3 Entering numbers and text

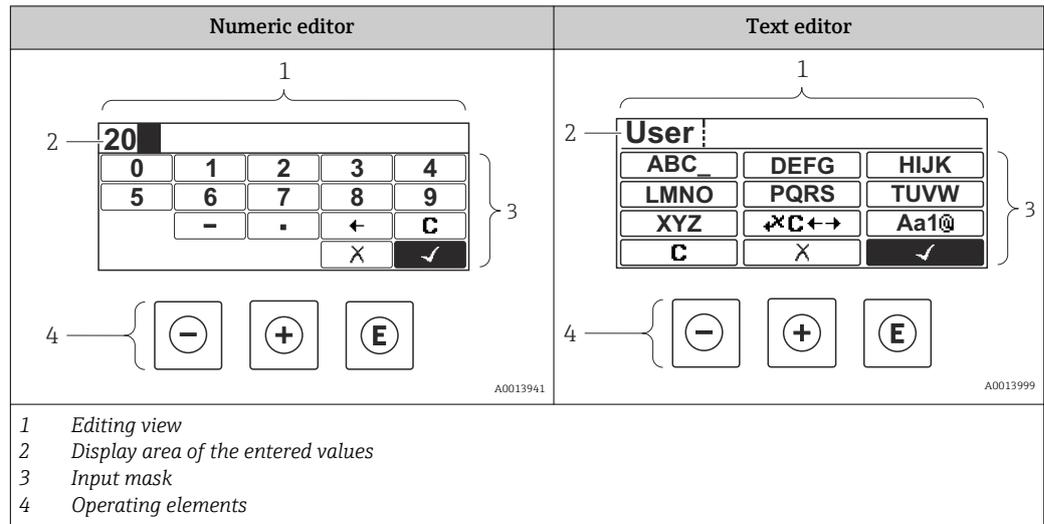

#### Input mask

The following input symbols are available in the input mask of the numeric and text editor:

##### Numeric editor symbols

Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9.
 <small>A0016619</small>	Inserts decimal separator at the input position.
 <small>A0016620</small>	Inserts minus sign at the input position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

##### Text editor symbols

Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> <li>Between upper-case and lower-case letters</li> <li>For entering numbers</li> <li>For entering special characters</li> </ul>

 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

*Correction symbols under *

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.
 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.

### 8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Env. curve
- Keylock on

#### Opening and closing the context menu

The user is in the operational display.

1. Press  $\square$  for 2 s.
  - ↳ The context menu opens.

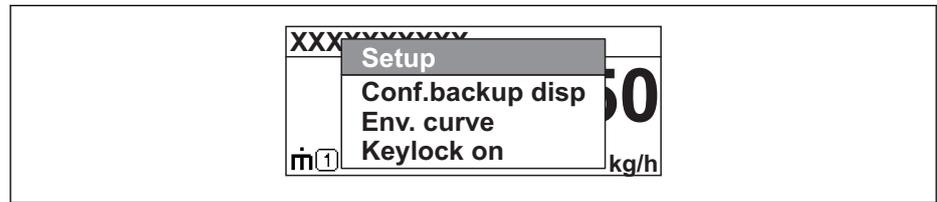

A0033110-EN


2. Press  $\square$  +  $\oplus$  simultaneously.
  - ↳ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu

1. Open the context menu.
2. Press  $\oplus$  to navigate to the desired menu.
3. Press  $\square$  to confirm the selection.
  - ↳ The selected menu opens.

### 8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

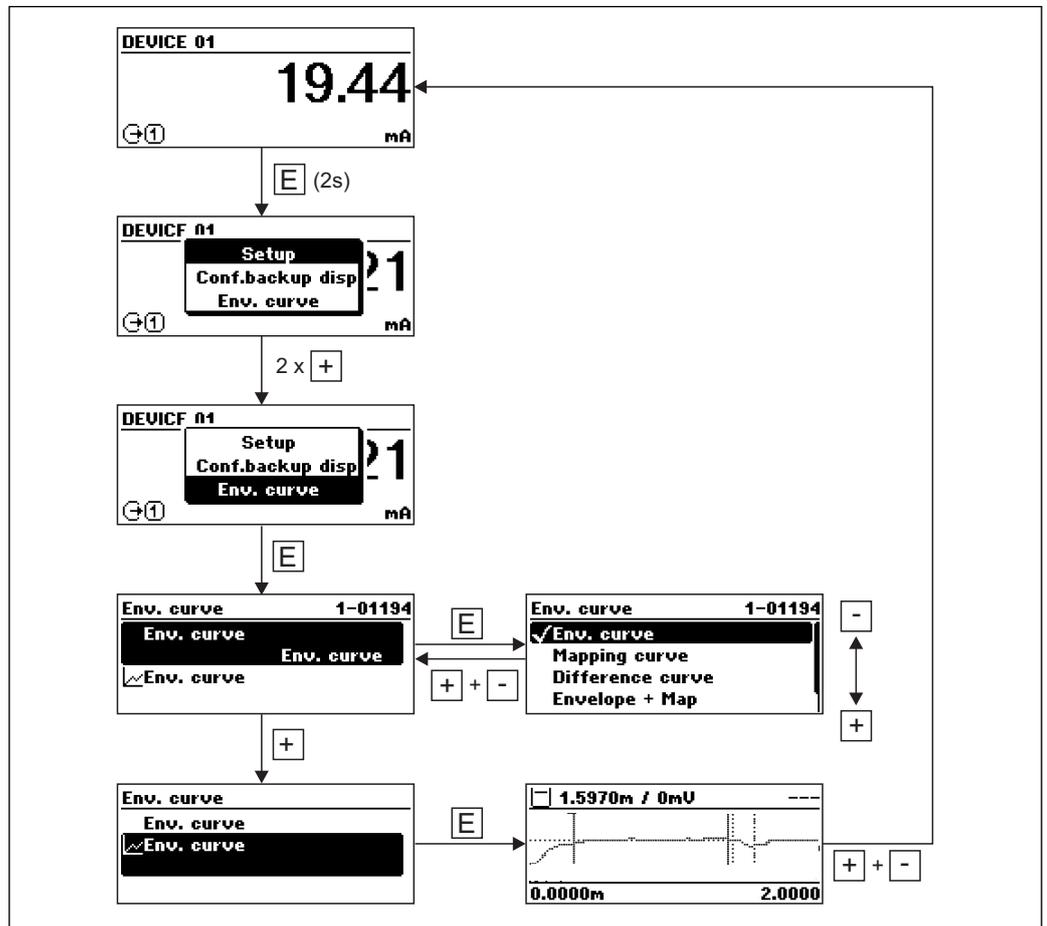

A0014277

## 9 Integration into a FOUNDATION Fieldbus network

### 9.1 Device Description (DD)

You require the following to configure a device and integrate it into an FF network:

- An FF configuration program
- The Cff file (Common File Format: \*.cff)
- The device description (DD) in one of the following formats
  - Device Description format 4 : \*sym, \*ffo
  - Device Description format 5 : \*sy5, \*ff5

*Information on the device-specific DD*

Manufacturer ID	452B48hex
Device Type	100Fhex
Device Revision	05hex
DD Revision	Information and files at:
CFF Revision	<ul style="list-style-type: none"> <li>■ <a href="http://www.endress.com">www.endress.com</a></li> <li>■ <a href="http://www.fieldcommgroup.org">www.fieldcommgroup.org</a></li> </ul>

### 9.2 Integration into the FOUNDATION Fieldbus network

-  ■ For more in-depth information on integrating the device into the FF system, see the description for the configuration software used.
- When integrating the field devices into the FF system, make sure you are using the right files. You can read out the required version by means of the Device Revision/ DEV\_REV and DD Revision/ DD\_REV parameters in the Resource Block.


The device is integrated into the FF network as follows:

1. Start the FF configuration program.
2. Download the Cff and device description files (\*.ffo, \*.sym (for format 4) \*ff5, \*sy5 (for format 5) to the system.
3. Configure the interface.
4. Configure the device for the measuring task and for the FF system.

### 9.3 Device identification and addressing

FOUNDATION Fieldbus identifies the device using its ID code (Device ID) and automatically assigns it a suitable field address. The identity code cannot be changed. The device appears in the network display once you have started the FF configuration program and integrated the device into the network. The blocks available are displayed under the device name.

If the device description has not yet been loaded, the blocks report "Unknown" or "(UNK)".

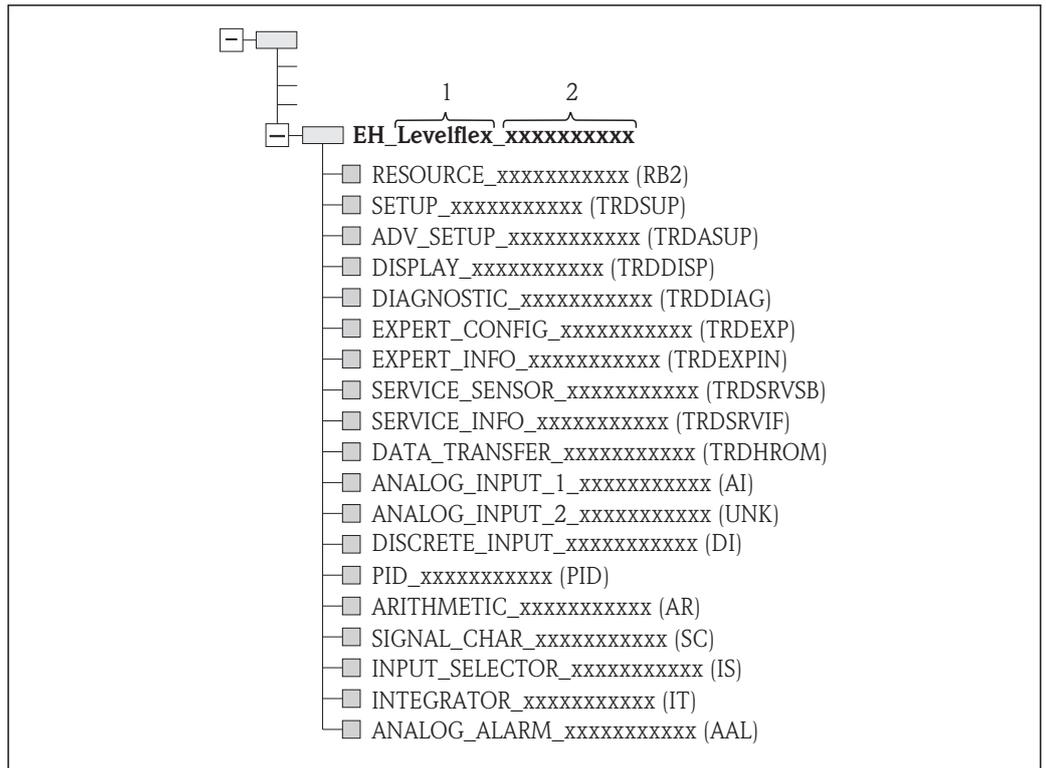

A0017208

18 Typical display in a configuration program after the connection has been established

- 1 Device name
- 2 Serial number

## 9.4 Block model

### 9.4.1 Blocks of the device software

The device has the following blocks:

- Resource Block (device block)
- Transducer Blocks
  - Setup Transducer Block (TRDSUP)
  - Advanced Setup Transducer Block (TRDASUP)
  - Display Transducer Block (TRDDISP)
  - Diagnostic Transducer Block (TRDDIAG)
  - Expert Configuration Transducer Block (TRDEXP)
  - Expert Information Transducer Block (TRDEXPIN)
  - Service Sensor Transducer Block (TRDSRVSB)
  - Service Information Transducer Block (TRDSRVIF)
  - Data Transfer Transducer Block (TRDHROM)
- Function Blocks
  - 2 Analog Input Blocks (AI)
  - 1 Discrete Input Block (DI)
  - 1 PID Block (PID)
  - 1 Arithmetic Block (AR)
  - 1 Signal Characterizer Block (SC)
  - 1 Input Selector Block (IS)
  - 1 Integrator Block (IT)
  - 1 Analog Alarm Block (AAL)

In addition to the pre-instantiated blocks already mentioned, the following blocks can also be instantiated:


- 5 Analog Input Blocks (AI)
- 2 Discrete Input Blocks (DI)
- 3 PID Blocks (PID)
- 3 Arithmetic Blocks (AR)
- 2 Signal Characterizer Blocks (SC)
- 5 Input Selector Blocks (IS)
- 3 Integrator Blocks (IT)
- 2 Analog Alarm Blocks (AAL)

Up to 20 blocks can be instantiated in the device altogether, including the blocks already instantiated. For instantiating blocks, see the appropriate Operating Instructions of the configuration program used.

**i** Endress+Hauser Guideline BA00062S.

The guideline provides an overview of the standard function blocks that are described in FOUNDATION Fieldbus Specifications FF 890 - 894. It is designed to help operators use the blocks implemented in the Endress+Hauser field devices.

### 9.4.2 Block configuration when device is delivered

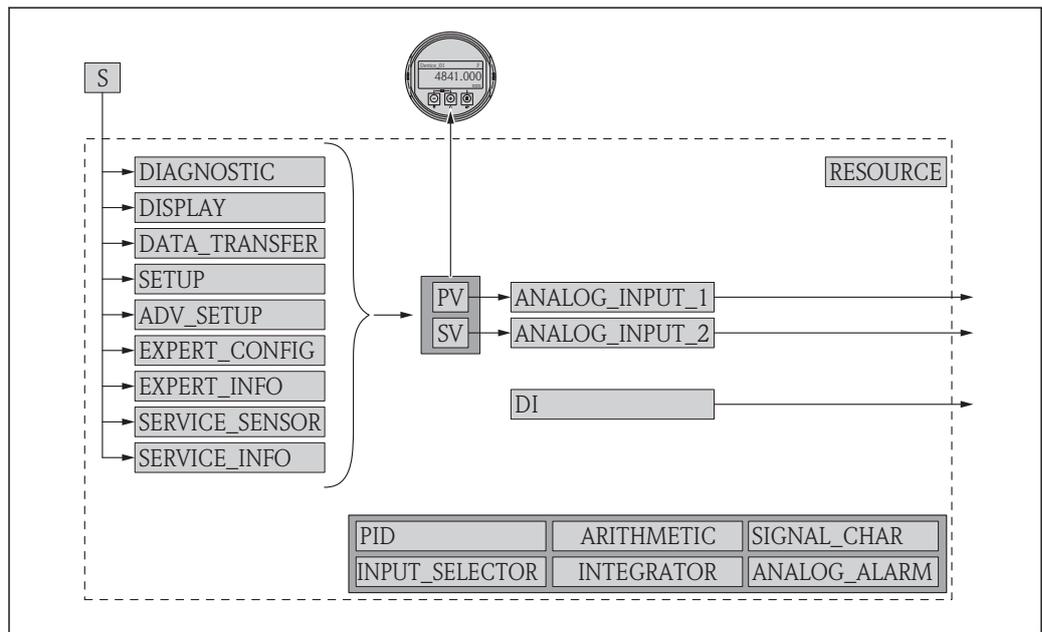

**19** Block configuration when device is delivered

S Sensor  
 PV Primary value: Level linearized  
 SV Secondary value: Distance

## 9.5 Assignment of the measured values (CHANNEL) in an AI Block

The input value of an Analog Input Block is defined by the CHANNEL parameter.

Channel	Measured value
0	Uninitialized
89	Measured capacitance
144	EOP shift

Channel	Measured value
145	Interface distance
172	Calculated DC value
211	Terminal voltage
212	Sensor debug
32785	Absolute EOP amplitude
32786	Absolute echo amplitude
32787	Absolute interface amplitude
32856	Distance
32885	Elektronic temperature
32938	Interface linearized
32949	Level linearized
33044	Relative echo amplitude
33045	Relative interface amplitude
33070	Noise of signal
33107	Upper interface thickness

## 9.6 Index tables of Endress+Hauser parameters

The following tables list the manufacturer-specific device parameters for the Resource Blocks. For the FOUNDATION Fieldbus parameters, see the document BA062S "Guideline - FOUNDATION Fieldbus Function Blocks", which can be downloaded from [www.endress.com](http://www.endress.com).

### 9.6.1 Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
confirm_distance	Confirm distance	82	ENUM16	2	Static	x	OOS	→ ⓘ 138
filtered_dist_val	Distance	76	FLOAT	4	Dynamic			→ ⓘ 137
map_end_x	Present mapping	84	FLOAT	4	Dynamic			→ ⓘ 139
mapping_end_point	Mapping end point	83	FLOAT	4	Static	x	AUTO	→ ⓘ 139
record_map	Record map	86	ENUM16	2	Static	x	OOS	→ ⓘ 140
signal_quality	Signal quality	81	ENUM16	2	Dynamic			→ ⓘ 138
medium_group	Medium group	55	ENUM16	2	Static	x	OOS	→ ⓘ 135
tank_type	Tank type	52	ENUM16	2	Static	x	OOS	→ ⓘ 134
tube_diameter	Tube diameter	53	FLOAT	4	Static	x	OOS	→ ⓘ 135
empty_calibration	Empty calibration	56	FLOAT	4	Static	x	OOS	→ ⓘ 135
full_calibration	Full calibration	57	FLOAT	4	Static	x	OOS	→ ⓘ 136
distance_unit	Distance unit	51	ENUM16	2	Static	x	OOS	→ ⓘ 134
level_unit	Level unit	58	ENUM16	2	Static	x	OOS	→ ⓘ 149
output_unit_after_linearization	Unit after linearization	62	ENUM16	2	Static			→ ⓘ 155
level_linearized	Level linearized	64	FLOAT	4	Dynamic			→ ⓘ 156
present_probe_length	Present probe length	87	FLOAT	4	Dynamic	x	AUTO	→ ⓘ 164
level	Level	60	FLOAT	4	Dynamic			→ ⓘ 137

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
decimal_places_menu_ro	Decimal places	93	ENUM16	2	Static	x	AUTO	→ ⓘ 175
locking_status	Locking status	96	BIT_ENUM16	2	Dynamic			→ ⓘ 144
medium_type_ro	Medium type	92	ENUM16	2	Static	x	OOS	→ ⓘ 146

## 9.6.2 Advanced Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
blocking_distance	Blocking distance	55	FLOAT	4	Static	x	OOS	→ ⓘ 149
medium_type	Medium type	50	ENUM16	2	Static	x	OOS	→ ⓘ 146
present_probe_length_ro	Present probe length	80	FLOAT	4	Dynamic	x	AUTO	→ ⓘ 164
confirm_probe_length	Confirm probe length	79	ENUM16	2	Static	x	OOS	→ ⓘ 165
process_property	Process property	52	ENUM16	2	Static	x	OOS	→ ⓘ 147
advanced_process_conditions	Advanced process conditions	53	ENUM16	2	Static	x	OOS	→ ⓘ 148
medium_property	Medium property	51	ENUM16	2	Static	x	OOS	→ ⓘ 146
linearization_type	Linearization type	71	ENUM16	2	Static	x	OOS	→ ⓘ 154
activate_table	Activate table	70	ENUM16	2	Static	x	OOS	→ ⓘ 160
table_mode	Table mode	69	ENUM16	2	Static	x	OOS	→ ⓘ 158
custom_table_sel_level	Level	73	FLOAT	4	Static	x	OOS	→ ⓘ 137
custom_table_sel_value	Customer value	74	FLOAT	4	Static	x	OOS	→ ⓘ 160
unit_after_linearization	Unit after linearization	63	ENUM16	2	Static	x	OOS	→ ⓘ 155
free_text	Free text	64	STRING		Static	x	AUTO	→ ⓘ 156
diameter	Diameter	66	FLOAT	4	Static	x	OOS	→ ⓘ 157
output_echo_lost	Output echo lost	76	ENUM16	2	Static	x	OOS	→ ⓘ 161
intermediate_height	Intermediate height	67	FLOAT	4	Static	x	AUTO	→ ⓘ 157
level_correction	Level correction	56	FLOAT	4	Static	x	OOS	→ ⓘ 150
level_unit_ro	Level unit	54	ENUM16	2	Static	x	OOS	→ ⓘ 149
assign_limit	Assign limit	82	ENUM16	2	Static	x	AUTO	→ ⓘ 168
maximum_value	Maximum value	65	FLOAT	4	Static	x	OOS	→ ⓘ 157
assign_diag_behavior	Assign diagnostic behavior	83	ENUM16	2	Static	x	AUTO	→ ⓘ 168
value_echo_lost	Value echo lost	77	FLOAT	4	Static	x	OOS	→ ⓘ 161
ramp_at_echo_lost	Ramp at echo lost	78	FLOAT	4	Static	x	OOS	→ ⓘ 162
switch_output_failure_mode	Failure mode	88	ENUM16	2	Static	x	AUTO	→ ⓘ 171
switch_output_function	Switch output function	81	ENUM16	2	Static	x	AUTO	→ ⓘ 167
switch_status	Switch status	89	ENUM16	2	Dynamic			→ ⓘ 171
switch_off_delay	Switch-off delay	87	FLOAT	4	Static	x	AUTO	→ ⓘ 171
switch_off_value	Switch-off value	86	FLOAT	4	Static	x	AUTO	→ ⓘ 170
switch_on_delay	Switch-on delay	85	FLOAT	4	Static	x	AUTO	→ ⓘ 170
switch_on_value	Switch-on value	84	FLOAT	4	Static	x	AUTO	→ ⓘ 169
table_number	Table number	68	UINT8	1	Static	x	OOS	→ ⓘ 159
level_semiautomatic	Level	75	FLOAT	4	Dynamic			→ ⓘ 160

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
assign_status	Assign status	91	ENUM16	2	Static	x	AUTO	→ 167
locking_status	Locking status	99	BIT_ENUM16	2	Dynamic			→ 144
decimal_places_menu	Decimal places menu	93	ENUM16	2	Static	x	AUTO	→ 177
distance_unit_ro	Distance unit	92	ENUM16	2	Static	x	OOS	→ 134

### 9.6.3 Display Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
access_status_display	Access status display	51	ENUM16	2	Static			→ 144
display_damping	Display damping	65	FLOAT	4	Static	x	AUTO	→ 176
display_interval	Display interval	64	FLOAT	4	Static	x	AUTO	→ 176
header	Header	66	ENUM16	2	Static	x	AUTO	→ 176
format_display	Format display	55	ENUM16	2	Static	x	AUTO	→ 173
number_format	Number format	69	ENUM16	2	Static	x	AUTO	→ 177
display_separator	Separator	68	ENUM16	2	Static	x	AUTO	→ 177
language	Language	54	ENUM16	2	Static	x	AUTO	→ 173
contrast_display	Contrast display	71	FLOAT	4	Static	x	AUTO	→ 178
header_text	Header text	67	STRING		Static	x	AUTO	→ 177
access_code_for_display	Enter access code	52	UINT16	2	Static	x	AUTO	→ 145
configuration_management	Configuration management	75	ENUM16	2	Static	x	AUTO	→ 179
decimal_places_1	Decimal places 1	57	ENUM16	2	Static	x	AUTO	→ 175
decimal_places_2	Decimal places 2	59	ENUM16	2	Static	x	AUTO	→ 175
decimal_places_3	Decimal places 3	61	ENUM16	2	Static	x	AUTO	→ 175
decimal_places_4	Decimal places 4	63	ENUM16	2	Static	x	AUTO	→ 175
last_backup	Last backup	74	STRING		Static	x	AUTO	→ 179
value_1_display	Value 1 display	56	ENUM16	2	Static	x	AUTO	→ 175
value_2_display	Value 2 display	58	ENUM16	2	Static	x	AUTO	→ 175
value_3_display	Value 3 display	60	ENUM16	2	Static	x	AUTO	→ 175
value_4_display	Value 4 display	62	ENUM16	2	Static	x	AUTO	→ 175
locking_status_display	Locking status	50	ENUM16	2	Static			→ 144
define_access_code	Define access code	53	UINT16	2	Static	x	AUTO	→ 182
comparison_result	Comparison result	76	ENUM16	2	Static	x	AUTO	→ 180
decimal_places_menu	Decimal places menu	70	ENUM16	2	Static	x	AUTO	→ 177
operating_time	Operating time	73	STRING		Dynamic			→ 179
locking_status	Locking status	85	BIT_ENUM16	2	Dynamic			→ 144

### 9.6.4 Diagnostic Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
operating_time	Operating time	55	STRING		Dynamic			→ 179
diagnostics_1	Diagnostics	56	UINT32	4	Static			→ 187

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
diagnostics_2	Diagnostics 2	58	UINT32	4	Static			→ ⓘ 187
diagnostics_3	Diagnostics 3	60	UINT32	4	Static			→ ⓘ 187
diagnostics_4	Diagnostics 4	62	UINT32	4	Static			→ ⓘ 187
diagnostics_5	Diagnostics 5	64	UINT32	4	Static			→ ⓘ 187
operating_time_from_restart	Operating time from restart	54	STRING		Dynamic			→ ⓘ 186
launch_signal	Launch signal	81	ENUM16	2	Dynamic			→ ⓘ 203
start_device_check	Start device check	77	ENUM16	2	Static	x	AUTO	→ ⓘ 202
level_signal	Level signal	80	ENUM16	2	Dynamic			→ ⓘ 203
simulation_device_alarm	Simulation device alarm	75	ENUM16	2	Static	x	OOS	→ ⓘ 201
filter_options	Filter options	66	ENUM8	1	Static	x	AUTO	→ ⓘ 188
previous_diagnostics	Previous diagnostics	52	UINT32	4	Static			→ ⓘ 185
actual_diagnostics	Actual diagnostics	50	UINT32	4	Static			→ ⓘ 185
assign_sim_meas	Assign measurement variable	71	ENUM16	2	Static	x	OOS	→ ⓘ 200
sim_value_process_variable	Process variable value	72	FLOAT	4	Static	x	OOS	→ ⓘ 200
switch_output_simulation	Switch output simulation	73	ENUM16	2	Static	x	OOS	→ ⓘ 200
sim_switch_status	Switch status	74	ENUM16	2	Static	x	OOS	→ ⓘ 201
result_device_check	Result device check	78	ENUM16	2	Dynamic			→ ⓘ 202
last_check_time	Last check time	79	STRING		Dynamic			→ ⓘ 202
linearization_type	Linearization type	84	ENUM16	2	Static	x	OOS	→ ⓘ 154
unit_after_linearization_ro	Unit after linearization	85	STRING		Static	x	AUTO	→ ⓘ 155
decimal_places_menu	Decimal places menu	88	ENUM16	2	Static	x	AUTO	→ ⓘ 177
level_unit_ro	Level unit	90	ENUM16	2	Static	x	OOS	→ ⓘ 149
assign_channel_1	Assign channel 1	92	ENUM16	2	Static	x	AUTO	→ ⓘ 194
assign_channel_2	Assign channel 2	93	ENUM16	2	Static	x	AUTO	→ ⓘ 194
assign_channel_3	Assign channel 3	94	ENUM16	2	Static	x	AUTO	→ ⓘ 194
assign_channel_4	Assign channel 4	95	ENUM16	2	Static	x	AUTO	→ ⓘ 194
clear_logging_data	Clear logging data	97	ENUM16	2	Static	x	AUTO	→ ⓘ 195
logging_interval	Logging interval	96	FLOAT	4	Static	x	AUTO	→ ⓘ 195
display_filter_options	Filter options	99	ENUM8	1	Static	x	AUTO	→ ⓘ 188
locking_status	Locking status	108	BIT_ENUM16	2	Dynamic			→ ⓘ 144
distance_unit_ro	Distance unit	89	ENUM16	2	Static	x	OOS	→ ⓘ 134

### 9.6.5 Expert Configuration Transducer Block

 The parameters of the **Expert Configuration Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
acknowledge_alarm	Acknowledge alarm	81	ENUM16	2	Static	x	AUTO
integration_time	Integration time	67	FLOAT	4	Static	x	OOS
result_self_check	Result self check	77	ENUM16	2	Dynamic		

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
start_self_check	Start self check	76	ENUM16	2	Static	x	AUTO
broken_probe_detection	Broken probe detection	75	ENUM16	2	Static	x	AUTO
gpc_mode	GPC mode	68	ENUM16	2	Static	x	OOS
reference_echo_threshold	Reference echo threshold	73	FLOAT	4	Static	x	OOS
const_gpc_factor	Const. GPC factor	74	FLOAT	4	Static	x	OOS
build_up_ratio	Build-up ratio	90	FLOAT	4	Dynamic		
build_up_threshold	Build-up thres.	91	FLOAT	4	Static	x	AUTO
delay_time_echo_lost	Delay time echo lost	78	FLOAT	4	Static	x	AUTO
empty_capacity	Empty capacity	92	FLOAT	4	Static	x	AUTO
external_pressure_selector	External pressure selector	69	ENUM16	2	Static	x	OOS
measured_capacity	Measured capacitance	89	FLOAT	4	Dynamic		
gas_phase_compens_factor	Gas phase compensation factor	70	FLOT	4	Static	x	OOS
in_safety_distance	In safety distance	80	ENUM16	2	Static	x	OOS
ratio_amplitude_interface_level	Ratio amplitude interface/level	86	FLOAT	4	Static	x	OOS
interface_criterion	Interface criterion	87	FLOAT	4	Dynamic		
control_measurement	Measurement	106	ENUM16	2	Static	x	AUTO
control_measurement	Control measurement	105	ENUM16	2	Static	x	AUTO
filter_dead_time	Dead time	66	FLOAT	4	Static	x	OOS
present_reference_distance	Present reference distance	72	FLOAT	4	Dynamic		
history_reset	History reset	83	ENUM16	2	Static	x	OOS
safety_distance	Safety distance	79	FLOAT	4	Static	x	OOS
history_learning_control	History learning	85	ENUM16	2	Static	x	AUTO
history_learning_control	History learning control	84	ENUM16	2	Static	x	AUTO
sensor_module	Sensor module	107	ENUM16	2	Static		
evaluation_mode	Evaluation mode	82	ENUM16	2	Static	x	OOS
thin_interface	Thin interface	88	ENUM16	2	Static	x	OOS
calculated_dc_value	Calculated DC value	59	FLOAT	4	Dynamic	x	AUTO
dc_value_expert	DC value	55	FLOAT	4	Static	x	OOS
distance_offset	Distance offset	60	FLOAT	4	Static	x	OOS
level_limit_mode	Level limit mode	62	ENUM16	2	Static	x	OOS
level_high_limit	High limit	63	FLOAT	4	Static	x	OOS
level_low_limit	Low limit	64	FLOAT	4	Static	x	OOS
output_mode	Output mode	65	ENUM16	2	Static	x	OOS
level_external_input_1	Level external input 1	93	ENUM16	2	Static	x	AUTO
level_external_input_2	Level external input 2	96	ENUM16	2	Static	x	AUTO
function_input_1_level	Function Input 1 Level	94	ENUM16	2	Static	x	AUTO
function_input_2_level	Function Input 2 Level	97	ENUM16	2	Static	x	AUTO
fixed_value_inp_1	Fixed value inp.1	95	FLOAT	4	Static	x	AUTO
fixed_value_inp_2	Fixed value inp.2	98	FLOAT	4	Static	x	AUTO
interface_external_input_1	Interface external input 1	99	ENUM16	2	Static	x	OOS
interface_external_input_2	Interface external input 2	102	ENUM16	2	Static	x	OOS
function_input_1_interface	Function input 1 interface	100	ENUM16	2	Static	x	OOS
function_input_2_interface	Function input 2 interface	103	ENUM16	2	Static	x	OOS

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
fixed_value_input_1_interface	Fixed value input 1 interface	101	FLOAT	4	Static	x	OOS
fixed_value_input_2_interface	Fixed value input 2 interface	104	FLOAT	4	Static	x	OOS
distance_unit_ro	Distance unit	53	ENUM16	2	Static	x	OOS
level_unit_ro	Level unit	61	ENUM16	2	Static	x	OOS
operating_mode_ro	Operating mode	54	ENUM16	2	Static	x	OOS
enter_access_code	Enter access code	52	UINT16	2	Static	x	AUTO
locking_status	Locking status	50	BIT_ENUM16	2	Dynamic		
access_status_tooling	Access status tooling	51	ENUM16	2	Static		
reference_distance	Reference distance	71	FLOAT	4	Static	x	OOS
sw_option_active_overview	SW option active overview	110	BIT_ENUM32	4	Static		
decimal_places_menu	Decimal places menu	109	ENUM16	2	Static	x	AUTO
fieldbus_type	Fieldbus Type	111	ENUM8	1	Static		
interface_property_ro	Interface property	108	ENUM16	2	Static	x	OOS
medium_type_ro	Medium type	112	ENUM16	2	Static	x	OOS
eop_level_evaluation_ro	EOP level evaluation	113	ENUM16	2	Static	x	OOS
sensor_type_ro	Sensor type	114	ENUM16	2	Static	x	OOS
calculated_dc_status_en	Status	58	ENUM8	1	Dynamic		

### 9.6.6 Expert Information Transducer Block



The parameters of the **Expert Information Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
abs_echo_amp_val	Absolute echo amplitude	51	FLOAT	4	Dynamic		
abs_eop_amp_val	Absolute EOP amplitude	55	FLOAT	4	Dynamic		
absolute_interface_amplitude	Absolute interface amplitude	58	FLOAT	4	Dynamic		
application_parameter	Application parameter	74	ENUM16	2	Dynamic		
electronic_temp_value	Electronic temperature	66	FLOAT	4	Dynamic		
eop_shift_value	EOP shift	69	FLOAT	4	Dynamic		
found_echoes	Found echoes	71	ENUM16	2	Dynamic		
max_electr_temp	Max. electronics temperature	73	FLOAT	4	Dynamic	x	AUTO
time_max_electr_temp	Time max. electronics temperature	75	STRING		Dynamic		
measurement_frequency	Measurement frequency	76	FLOAT	4	Dynamic		
min_electr_temp	Min. electronics temperature	77	FLOAT	4	Dynamic	x	AUTO
time_min_electr_temp	Time min. electronics temperature	78	STRING		Dynamic		
rel_echo_amp_val	Relative echo amplitude	53	FLOAT	4	Dynamic		
relative_interface_amplitude	Relative interface amplitude	60	FLOAT	4	Dynamic		
reset_min_max_temp	Reset min./max. temp.	79	ENUM16	2	Static	x	AUTO
noise_signal_val	Noise of signal	63	FLOAT	4	Dynamic		
used_calculation	Used calculation	80	ENUM16	2	Dynamic		
tank_trace_state	Tank trace state	81	ENUM16	2	Dynamic		
max_draining_speed	Max. draining speed	82	FLOAT	4	Dynamic	x	AUTO

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
max_filling_speed	L max. fill speed	83	FLOAT	4	Dynamic	x	AUTO
time_max_level	Time max. level	84	STRING		Dynamic		
max_level_value	Max. level value	85	FLOAT	4	Dynamic	x	AUTO
time_min_level	Time min. level	86	STRING		Dynamic		
min_level_value	Min. level value	87	FLOAT	4	Dynamic	x	AUTO
reset_min_max	Reset min./max.	94	ENUM16	2	Static	x	AUTO
interf_max_drain_speed	I max. drain speed	88	FLOAT	4	Dynamic	x	AUTO
interf_max_fill_speed	I max. fill speed	89	FLOAT	4	Dynamic	x	AUTO
time_max_interface	Time max. interface	90	STRING		Dynamic		
max_interface_value	Max. interface value	91	FLOAT	4	Dynamic	x	AUTO
time_min_interface	Time min. interface	92	STRING		Dynamic		
min_interface_value	Min. interface value	93	FLOAT	4	Dynamic	x	AUTO
application_parameter	Application parameter	95	ENUM16	2	Dynamic		
operating_mode_ro	Operating mode	108	ENUM16	2	Static	x	OOS
temperature_unit	Temperature unit	72	ENUM16	2	Static	x	AUTO
activate_sw_option	Activate SW option	110	UINT32	4	Static	x	AUTO
target_echo_status	Status	56	ENUM8	1	Dynamic		
iface_target_echo_status	Status	61	ENUM8	1	Dynamic		
signal_noise_status	Status	64	ENUM8	1	Dynamic		
sens_temp_status	Status	67	ENUM8	1	Dynamic		
eop_shift_status	Status	70	ENUM8	1	Dynamic		
terminal_voltage_1	Terminal voltage 1	97	FLOAT	4	Dynamic		
calculated_dc_value	Calculated DC value	100	FLOAT	4	Dynamic	x	AUTO
upper_interface_thickness	Upper interface thickness	103	FLOAT	4	Dynamic		
debug_value	Debug value	106	FLOAT	4	Dynamic	x	AUTO
sw_option_active_overview	SW option active overview	111	BIT_ENUM32	4	Static		
locking_status	Locking status	113	BIT_ENUM16	2	Dynamic		
decimal_places_menu_ro	Decimal places menu	109	ENUM16	2	Static	x	AUTO
linearization_type	Linearization type	104	ENUM16	2	Static	x	OOS
eop_level_evaluation	EOP level evaluation	112	ENUM16	2	Static	x	OOS
access_status_tooling	Access status tooling	114	ENUM16	2	Static		
calculated_dc_status	Status	99	UINT8	1	Dynamic		
status_up_iface_thickness	Customized upper phase thickness status	102	UINT8	1	Dynamic		
debug_status		107	UINT8	1	Dynamic	x	AUTO

### 9.6.7 Service Sensor Transducer Block

The parameters of the **Service Sensor** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

### 9.6.8 Service Information Transducer Block

The parameters of the **Service Information** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

### 9.6.9 Data Transfer Transducer Block

 The parameters of the **Data Transfer Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
used_calculation	Used calculation	87	ENUM16	2	Dynamic		
bdt_cfg_rdwr_ctrl		101	UINT16	2	Static	x	AUTO
bdt_transferred_ctrl		102	BYTEARRAY		Static	x	AUTO
bdt_data_trans		103	BYTEARRAY		Static	x	AUTO
bdt_prepare		99	BYTEARRAY		Static	x	AUTO
bdt_status		100	BYTEARRAY		Static		
sw_option_active_overview	SW option active overview	98	BIT_ENUM32	4	Static		
digits_at_0_mVdB		90	FLOAT	4	Dynamic	x	AUTO
digits_per_mVdB		91	FLOAT	4	Dynamic	x	AUTO
actual_diagnostics	Actual diagnostics	97	UINT32	4	Static		
electric_probe_length	Electric probe length	92	FLOAT	4	Dynamic		
empty_calibration_ro	Empty calibration	93	FLOAT	4	Static	x	OOS
full_calibration_ro	Full calibration	94	FLOAT	4	Static	x	OOS
distance_unit_ro	Distance unit	95	ENUM16	2	Static	x	OOS
operating_mode_ro	Operating mode	88	ENUM16	2	Static	x	OOS
present_probe_length_ro	Present probe length	89	FLOAT	4	Dynamic	x	AUTO
trend_operation_hours		104	UINT32	4	Static		
trend_package_size		105	UINT8	1	Static	x	AUTO
trend_storage_time	Trend storage time	106	UINT32	4	Static		
trend_sup_pack_size		107	UINT8	1	Static		
gpc_mode_ro	GPC mode	109	ENUM16	2	Static	x	OOS
eop_level_evaluation_ro	EOP level evaluation	110	ENUM16	2	Static	x	OOS
temperature_unit_ro	Temperature unit	111	ENUM16	2	Static	x	OOS
max_trend_entries		108	UINT16	2	Static		
line_mapping_point_number	Line mapping point number	126	UINT16	2	Static	x	AUTO
line_mapping_array_x	Line mapping array X	127	FLOAT	4	Static	x	AUTO
line_mapping_array_y	Line mapping array Y	128	FLOAT	4	Static	x	AUTO
mapping_end_point_ro	Mapping end point	125	FLOAT	4	Static	x	AUTO
mapping_start_point	Mapping start point	124	FLOAT	4	Static	x	AUTO
function_block_table		143	UINT32	4	Static		
custom_empty_value		112	FLOAT	4	Static		
custom_full_value		113	FLOAT	4	Static		
customized	Customized	121	UINT8	1	Static		
reset_ordered_configuration	Reset ordered configuration	122	ENUM16	2	Static	x	AUTO
empty_scale		114	FLOAT	4	Static	x	AUTO
eop_map_point_number		116	UINT16	2	Static	x	AUTO
factory_data_valid		123	UINT8	1	Static		
fieldbus_type	Fieldbus Type	144	ENUM8	1	Static		
full_scale		115	FLOAT	4	Static	x	AUTO

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
init_map_point_number		117	UINT16	2	Static	x	AUTO
max_not_assoc_track		118	UINT16	2	Static	x	AUTO
ref_max_dist	Ref max. dist.	119	FLOAT	4	Static	x	AUTO
ref_min_dist	Ref min. dist.	120	FLOAT	4	Static	x	AUTO
line_mapping_accuracy	Line mapping accuracy	130	FLOAT	4	Static	x	AUTO
mapping_curve_left_margin	Mapping curve left margin	131	FLOAT	4	Static	x	AUTO
device_calib_changed		133	ENUM16	2	Static	x	AUTO
echo_thresh_attenuat_const_ee	Threshold attenuation constant	134	FLOAT	4	Dynamic	x	AUTO
echo_threshold_far_ee		135	FLOAT	4	Static	x	AUTO
echo_thresh_inactive_len		137	FLOAT	4	Static	x	AUTO
echo_threshold_near_ee		136	FLOAT	4	Static	x	AUTO
present_probe_length_ee		138	FLOAT	4	Static	x	AUTO
reset_appl_para_chg_flags		139	ENUM16	2	Static	x	AUTO
reset_dyn_persistent		140	ENUM16	2	Static	x	AUTO
locking_status	Locking status	142	BIT_ENUM16	2	Dynamic		
decimal_places_menu	Decimal places menu	96	ENUM16	2	Static	x	AUTO
access_status_tooling	Access status tooling	141	ENUM16	2	Static		
level_linearized	Level linearized	147	FLOAT	4	Dynamic		
bdt_transferred_ctrl		197	UINT8	1	Static	x	AUTO
bdt_cfg_rdwr_ctrl		196	UINT16	2	Static	x	AUTO

## 9.7 Methods

The FOUNDATION Fieldbus Specification includes the use of methods to make device operation easier. A method is a sequence of interactive steps to be carried out in the specified order so as to configure certain device functions.

The following methods are available for the device:

- **Restart**

This method is located in the Resource Block and directly prompts the setting of the **Device reset** parameter. This resets the device configuration to a defined state.

- **ENP Restart**

This method is located in the Resource Block and directly prompts the setting of the parameters of the Electronic Name Plate (ENP).

- **Setup**

This method is located in the SETUP Transducer Block and allows to set the most important parameters in this block for device configuration (measuring units, type of tank or vessel, type of medium, empty and full calibration).

- **Linearization**

This method is located in the ADV\_SETUP Transducer Block and allows to manage the linearization table by which the measured value is converted into volume, mass or flow.


- **Self Check**

This method is located in the EXPERT\_CONFIG Transducer Block and prompts the device self check parameters.

## 10 Commissioning via wizard

A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare <sup>2)</sup>.

1. Connect the device to FieldCare or DeviceCare →  49.
2. Open the device in FieldCare or DeviceCare.
  - ↳ The dashboard (home page) of the device appears:

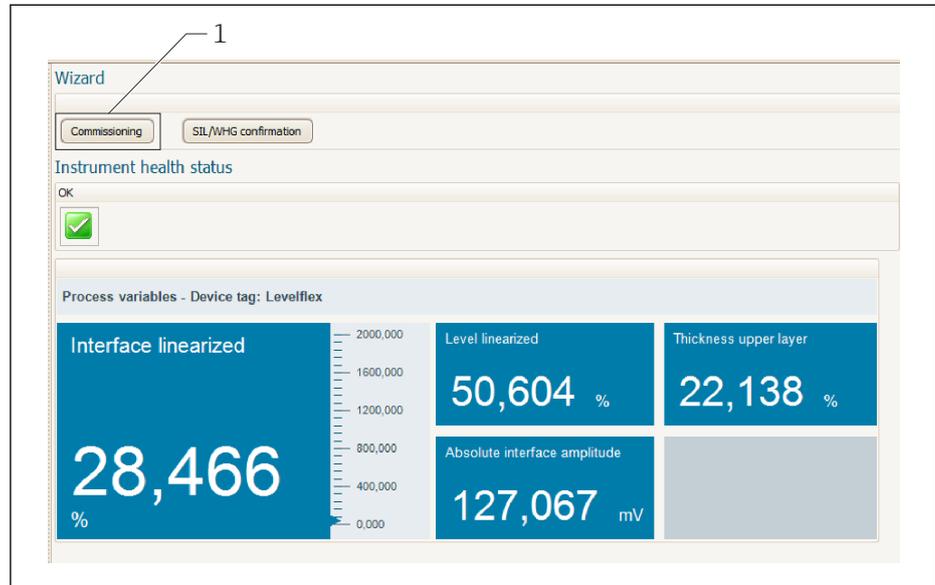

1 "Commissioning" button calls up the wizard.

3. Click on "Commissioning" to call up the wizard.
  4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
  5. Click "Next" to switch to the next page.
  6. After finishing the last page, click "End of sequence" to close the wizard.
- i** If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

2) DeviceCare is available for download at [www.software-products.endress.com](http://www.software-products.endress.com). The download requires a registration in the Endress+Hauser software portal.

# 11 Commissioning via operating menu


## 11.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 38
- Checklist "Post-connection check" → 46

## 11.2 Setting the operating language


Factory setting: English or ordered local language

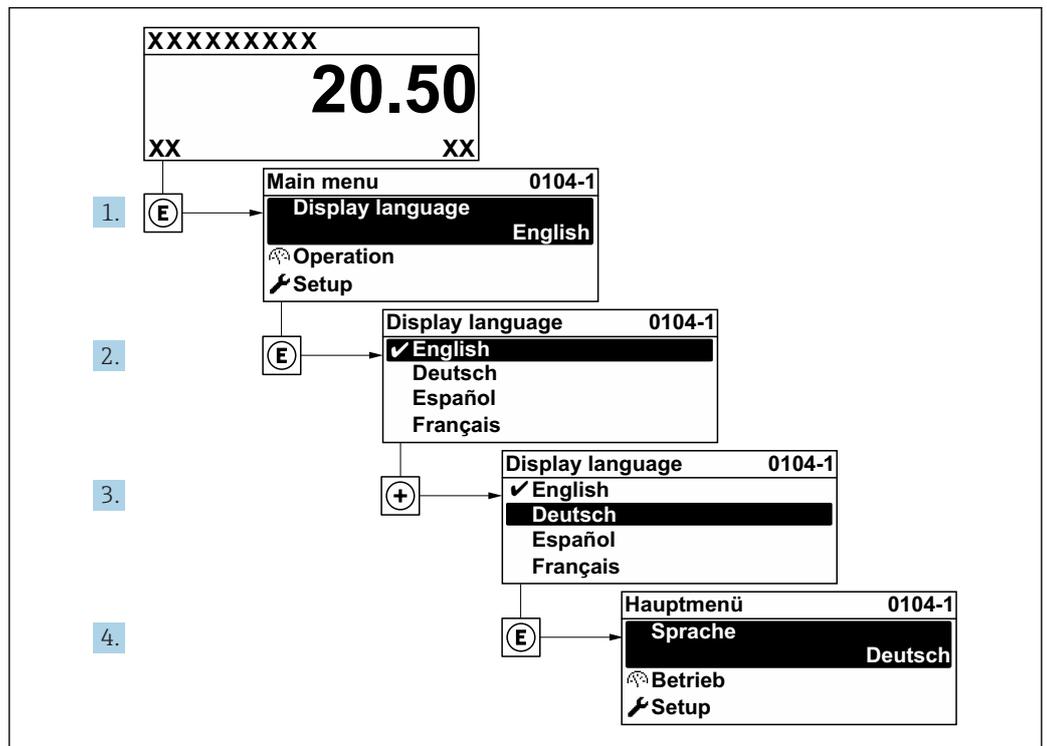

20 Using the example of the local display

A0029420

### 11.3 Configuration of a level measurement

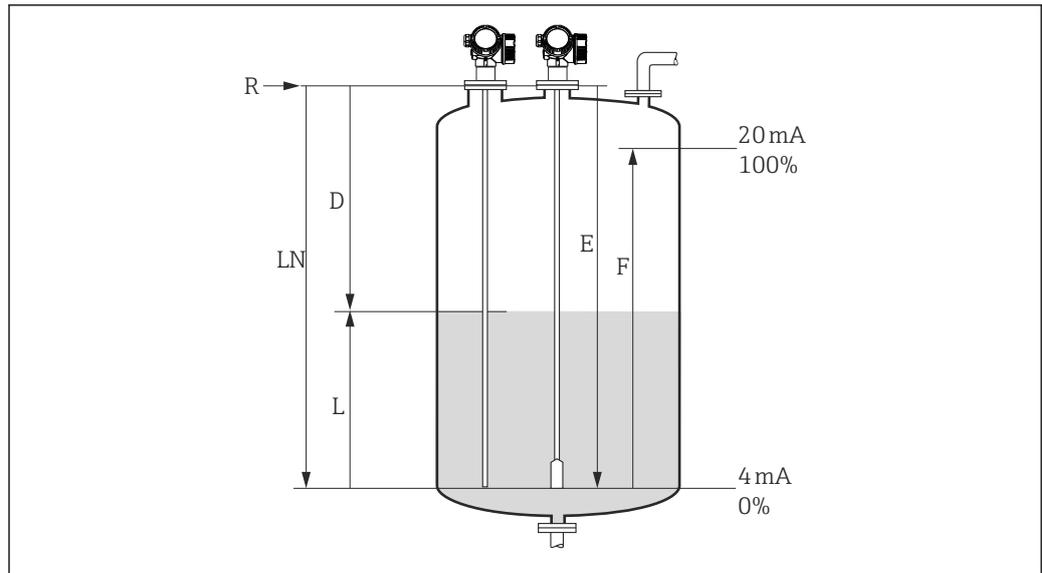

21 Configuration parameters for level measurements in liquids

<i>LN</i>	Length of probe
<i>R</i>	Reference point of the measurement
<i>D</i>	Distance
<i>L</i>	Level
<i>E</i>	Empty calibration (= Zero point)
<i>F</i>	Full calibration (= Span)

**i** If for rope probes the DC value is less than 7, then measurement is not possible in the area of the straining weight. In these cases, the maximum recommended value for the empty calibration E is  $LN - 250 \text{ mm}$  ( $LN - 10 \text{ in}$ ).

1. Setup → Device tag
  - ↳ Enter tag for measuring point.
2. Navigate to: Setup → Distance unit
  - ↳ Select distance unit.
3. Navigate to: Setup → Tank type
  - ↳ Select tank type.
4. For Tank type = Bypass / pipe:
  - Navigate to: Setup → Tube diameter
  - ↳ Enter the diameter of the bypass or stilling well.
5. Navigate to: Setup → Medium group
  - ↳ Select medium group: (**Water based (DC >= 4)** or **Others**)
6. Navigate to: Setup → Empty calibration
  - ↳ Enter the distance E between the reference point R and the minimum level (0%).
7. Navigate to: Setup → Full calibration
  - ↳ Enter distance F between the minimum (0%) and maximum (100%) level.
8. Navigate to: Setup → Level
  - ↳ Displays the measured level L.
9. Navigate to: Setup → Distance
  - ↳ Displays the distance D between the reference point R and the level L.
10. Navigate to: Setup → Signal quality
  - ↳ Displays the signal quality of the level echo.

11. For operation via local display:  
Navigate to: Setup → Mapping → Confirm distance
  - ↳ Compare the displayed distance to the real distance in order to start the recording of the mapping curve if required.
12. For operation via operating tool:  
Navigate to: Setup → Confirm distance
  - ↳ Compare the displayed distance to the real distance in order to start the recording of the mapping curve if required.

## 11.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

### Navigation in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

### Meaning of the options

- No  
No action
- Yes  
The current envelope curve is saved as reference curve.

 In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.

 The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare:



 22 The "Load Reference Curve" function

## 11.5 Configuration of the on-site display

### 11.5.1 Factory settings of the on-site display for level measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Level linearized	Level linearized
Value 2 display	Distance	Distance
Value 3 display	Current output 1	Current output 1
Value 4 display	None	Current output 2

### 11.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following menu:  
Setup → Advanced setup → Display

## 11.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

### Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

### Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

 If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset →  182 will not restore the original status..

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

## 11.7 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  53
- Via locking switch (hardware locking) →  54

## 12 Commissioning (block-based operation)

### 12.1 Function check

Carry out a post-installation and a post-connection check as per the checklist before commissioning the device:

- "Post-installation check" checklist →  38
- "Post-connection check" checklist →  46

### 12.2 Block configuration

#### 12.2.1 Preparatory steps

1. Switch on the device.
2. Note the `DEVICE_ID`.
3. Open the configuration program.
4. Load Cff and device description files into the host system or the configuration program. Make sure you are using the right system files.
5. Identify the device using the **DEVICE\_ID** (see Point 2). Assign the desired tag name to the device by means of the **Pd-tag/FF\_PD\_TAG** parameter.

#### 12.2.2 Configuring the Resource Block

1. Open the Resource Block.
2. If necessary, disable the lock for device operation.
3. If necessary, change the block name. Factory setting: RS-xxxxxxxxxxx (RB2)
4. If necessary, assign a description to the block by means of the **Tag Description/TAG\_DESC** parameter.
5. If necessary, change other parameters as per the requirements.

#### 12.2.3 Configuring the Transducer Blocks

The measurement and the display module are configured using the Transducer Blocks. The general procedure is the same for all Transducer Blocks:

1. If necessary, change the block name.
2. Set the block mode to **OOS** by means of the **Block Mode/MODE\_BLK** parameter, **TARGET** element.
3. Configure the device in accordance with the measuring task.
4. Set the block mode to **Auto** by means of the **Block Mode/MODE\_BLK** parameter, **TARGET** element.

 The block mode must be set to **Auto** for the measuring device to function correctly.

### 12.2.4 Configuring the Analog Input Blocks

The device has 2 Analog Input Blocks that can be assigned as required to the various process variables.

Default settings	
Analog Input Block	CHANNEL
AI 1	32949: Level linearized
AI 2	32856: Distance


1. If necessary, change the block name.
2. Set the block mode to **OOS** by means of the **Block Mode/MODE\_BLK** parameter, **TARGET** element.
3. Use the **Channel/CHANNEL** parameter to select the process variable which should be used as the input value for the Analog Input Block → 68.
4. Use the **Transducer Scale/XD\_SCALE** parameter to select the desired unit and the block input range for the process variable → 87. Make sure that the unit selected suits the process variable selected. If the process variable does not suit the unit, the **Block Error/BLOCK\_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
5. Use the **Linearization Type/L\_TYPE** parameter to select the type of linearization for the input variable (factory setting: **Direct**). Make sure that the settings for the **Transducer Scale/XD\_SCALE** and **Output Scale/OUT\_SCALE** parameters are the same for the **Direct** linearization type. If the values and units do not match, the **Block Error/BLOCK\_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
6. Enter the alarm and critical alarm messages by means of the **High High Limit/ HI\_HI\_LIM**, **High Limit/HI\_LIM**, **Low Low Limit/LO\_LO\_LIM** and **Low Limit/LO\_LIM** parameters. The limit values entered must be within the value range specified for the **Output Scale/OUT\_SCALE** parameter → 87.
7. Specify the alarm priorities by means of the **High High Priority/HI\_HI\_PRI**, **High Priority/HI\_PRI**, **Low Low Priority/LO\_LO\_PRI** and **Low Priority/LO\_PRI** parameters. Reporting to the field host system only takes place with alarms with a priority greater than 2.
8. Set the block mode to **Auto** using the **Block Mode/MODE\_BLK** parameter, **TARGET** element. For this purpose, the Resource Block must also be set to the **Auto** block mode.

### 12.2.5 Additional configuration

1. Link the function blocks and output blocks.
2. After specifying the active LAS, download all the data and parameters to the field device.

## 12.3 Scaling of the measured value in an AI Block

If the type of linearisation **L\_TYPE = indirect** has been selected in an AI block, the measured value can be scaled within the block. The input range is defined by the **XD\_SCALE** parameter through its **EU\_0** and **EU\_100** elements. This range is mapped linearly to the output range defined by the **OUT\_SCALE** parameter through its **EU\_0** and **EU\_100** elements.

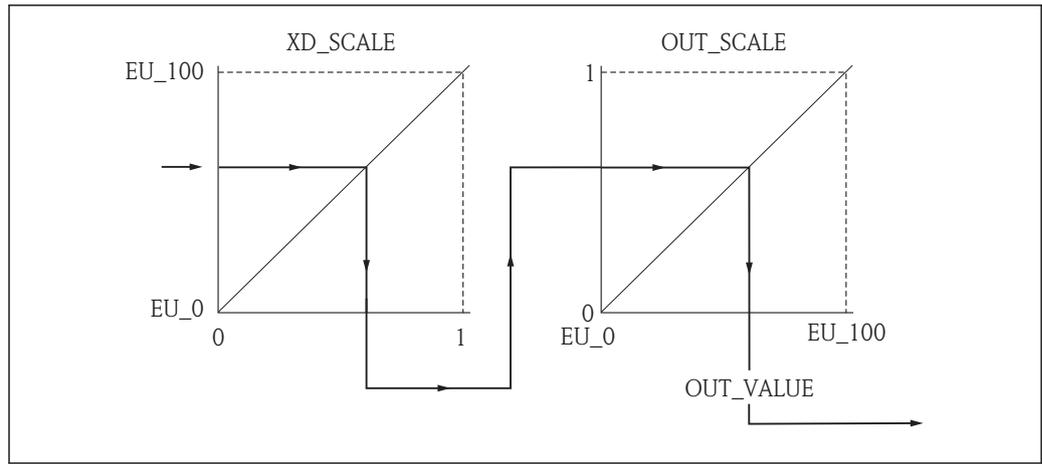

A0017336

23 Scaling of the measured value in an AI Block

- i** If you have selected the **Direct** mode for the **L\_TYPE** parameter, you cannot change the values and units for **XD\_SCALE** and **OUT\_SCALE**.
- The **L\_TYPE**, **XD\_SCALE** and **OUT\_SCALE** parameters can only be changed in the OOS block mode.


## 12.4 Language selection

Step	Block	Parameter	Action
1	DISPLAY (TRDDISP)	Language (language)	Select language <sup>1)</sup> . <b>Selection:</b> <ul style="list-style-type: none"> <li>▪ 32805: Arabian</li> <li>▪ 32824: Chinese simplified</li> <li>▪ 32842: Czech</li> <li>▪ 32881: Dutch</li> <li>▪ 32888: English</li> <li>▪ 32917: French</li> <li>▪ 32920: German</li> <li>▪ 32945: Italian</li> <li>▪ 32946: Japanese</li> <li>▪ 32948: Korean</li> <li>▪ 33026: Polish</li> <li>▪ 33027: Portuguese</li> <li>▪ 33062: Russian</li> <li>▪ 33083: Spanish</li> <li>▪ 33103: Thai</li> <li>▪ 33120: Vietnamese</li> <li>▪ 33155: Bahasa</li> <li>▪ 33166: Turkish</li> </ul>

1) When ordering a device the set of available languages is defined. Refer to the product structure, feature 500 "Additional Operation Language".

## 12.5 Configuration of a level measurement

**i** The **Setup** method can also be used to configure the measurement. It is called up via the SETUP (TRDSUP) transducer block.

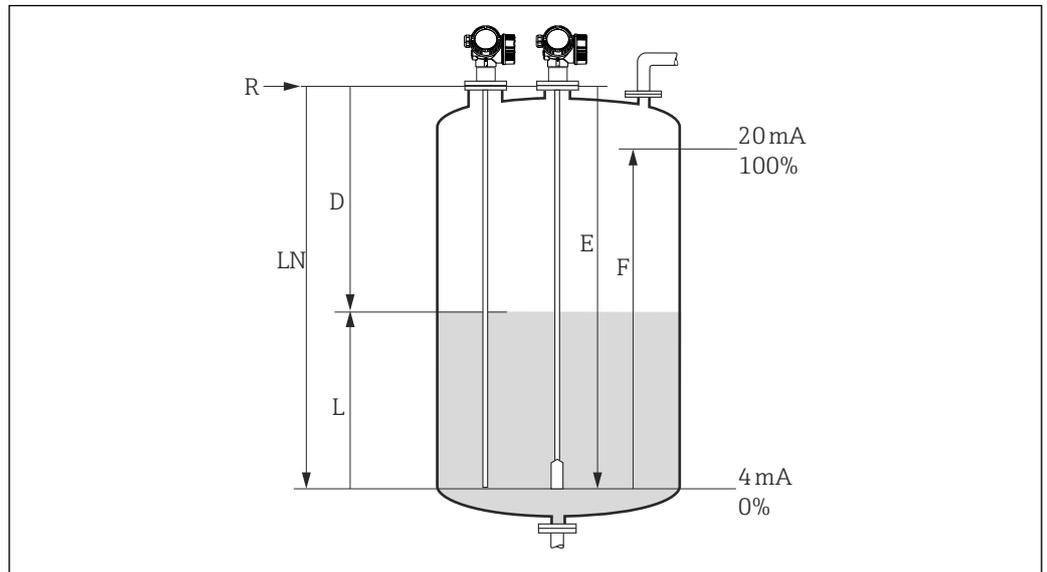

**24** Configuration parameters for level measurements in liquids

LN = Length of probe

D = Distance

L = Level

R = Reference point of the measurement

E = Empty calibration (= Zero point)

F = Full calibration (= span)

**i** If for rope probes the DC value is less than 7, then measurement is not possible in the area of the straining weight. In these cases, the maximum allowed value for the empty calibration E is  $LN - 250 \text{ mm}$  ( $LN - 10 \text{ in}$ ).

Step	Block	Parameter	Action
1	SETUP (TRDSUP)	Distance unit (distance_unit)	Select distance unit. <b>Selection:</b> <ul style="list-style-type: none"> <li>▪ 1010: m</li> <li>▪ 1013: mm</li> <li>▪ 1018: in</li> <li>▪ 1019: ft</li> </ul>
2	SETUP (TRDSUP)	Tank type (tank_type)	Select tank type. <b>Selection:</b> <ul style="list-style-type: none"> <li>▪ 32816: Bypass / pipe</li> <li>▪ 33288: Metallic</li> <li>▪ 33302: Coaxial</li> <li>▪ 33432: Twin rope</li> <li>▪ 33433: Twin rod</li> <li>▪ 33437: Rope centering disc metallic</li> <li>▪ 33438: Rod centering disc metallic</li> <li>▪ 33441: Non metallic</li> <li>▪ 33444: Mounted outside</li> </ul>
3	SETUP (TRDSUP)	Tube diameter (tube_diameter) <sup>1)</sup>	Enter the diameter of the bypass or stilling well.
4	SETUP (TRDSUP)	Medium group (medium_group)	Select medium group. <b>Selection:</b> <ul style="list-style-type: none"> <li>▪ 316: water based (DC&gt;4)</li> <li>▪ 256: other (DC≥ 1.9) <sup>2)</sup></li> </ul>

Step	Block	Parameter	Action
5	SETUP (TRDSUP)	Empty calibration (empty_calibration)	Enter the distance E between the reference point R and the minimum level (0%).
6	SETUP (TRDSUP)	Full calibration (full_calibration)	Enter distance F between the minimum (0%) and maximum (100%) level.
7	SETUP (TRDSUP)	Level (level)	Displays the measured level L.
8	SETUP (TRDSUP)	Distance (filtered_dist_val)	Displays the distance D between the reference point R and the level L.
9	SETUP (TRDSUP)	Signal quality (signal_quality)	Displays the signal quality of the level echo.
10	SETUP (TRDSUP)	Confirm distance (confirm_distance)	Compare the displayed distance to the real distance in order to start the recording of the mapping curve. <b>Selection:</b> <ul style="list-style-type: none"> <li>▪ 179: Manual map</li> <li>▪ 32847: Delete all</li> <li>▪ 32859: Distance ok</li> <li>▪ 32860: Distance too big</li> <li>▪ 32861: Distance too small</li> <li>▪ 32862: Distance unknown</li> <li>▪ 33100: Tank empty</li> </ul>

- 1) only available for coated probes and "Tank type" = "Bypass/pipe"
- 2) If required, lower DCs can be entered into the "DC value (dc\_value)" parameter. However, for DC<1.6 the measuring range may be reduced; for details please contact Endress+Hauser.

## 12.6 Configuration of the on-site display

### 12.6.1 Factory settings of the on-site display for level measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Level linearized	Level linearized
Value 2 display	Distance	Distance
Value 3 display	Current output 1	Current output 1
Value 4 display	None	Current output 21

 The on-site display can be adjusted in the **DISPLAY (TRDDISP)** transducer block.

## 12.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

### Navigation path in the operating menu

Setup → Advanced setup → Conf.backup disp → Config. managem.

### Block operation

Block: **DISPLAY (TRDDISP)**

Parameter: **Configuration management (configuration\_management)**

*Functions of the parameter options*

Options	Description
33097: Execute backup	A backup copy of the current device configuration in the HistoROM is saved to the display module of the device. The backup copy comprises the transmitter data of the device.
33057: Restore	The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter data of the device.
33838: Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
265: Compare	The device configuration saved in the display module is compared to the current device configuration of the HistoROM.
32848: Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

*HistoROM*

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.


-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  For devices with FOUNDATION Fieldbus communication, the **PD Tag** parameter is also transmitted when duplicating the parameter configuration. If required change **PD Tag** to the required value after duplicating the set.

## 12.8 Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912

The device complies with the FOUNDATION Fieldbus specification FF912. This has - among other things - the following consequences:

- The diagnostic category according to NAMUR recommendation NE107 is transmitted via the fieldbus in a manufacturer-independent form:
  - F: Failure
  - C: Function check
  - S: Out of specification
  - M: Maintenance required
- The diagnostic category of pre-defined groups of events can be adjusted by the user according to the requirements of the specific application.
- Certain events can be separated from their group and can be handled individually:
  - 941: Echo lost
  - 942: In safety distance
- Additional information and remedial measures are transmitted together with the event message via the fieldbus.

**i** The diagnostic messages according to FF912 are available in the host only if the **Multi-bit support** option has been activated in the **FEATURE\_SEL** parameter of the Resource block. For reasons of compatibility, this option is **not** activated on delivery:

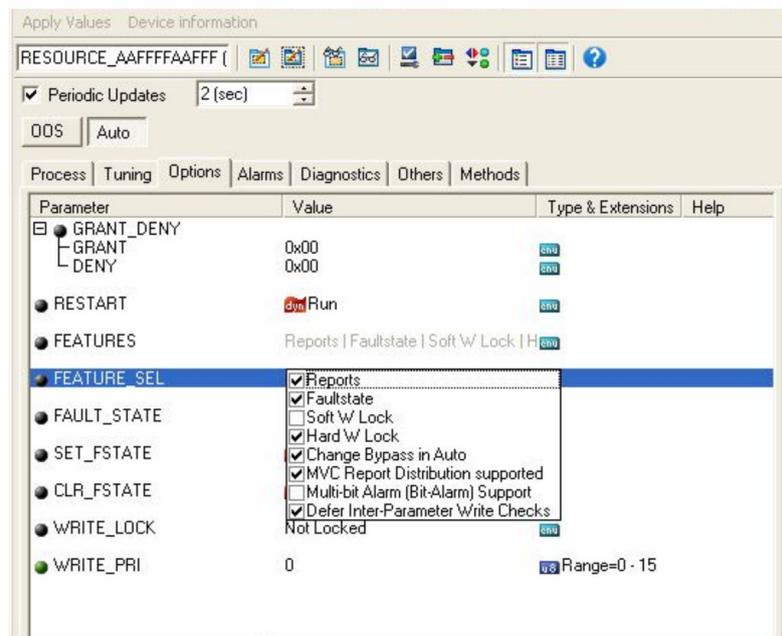

### 12.8.1 Groups of events

The diagnostic messages are classified into 16 groups according to the **source** and **severity** of the respective event. A **default diagnostic category** is allocated to each group. Each group is also represented by one bit of the allocation parameters.

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Highest severity	Failure (F)	Sensor	31	<ul style="list-style-type: none"> <li>▪ F003: Broken probe detected</li> <li>▪ F046: Build-up detected</li> <li>▪ F083: Memory content</li> <li>▪ F104: HF cable</li> <li>▪ F105: HF cable</li> <li>▪ F106: Sensor</li> </ul>
		Electronics	30	<ul style="list-style-type: none"> <li>▪ F242: Software incompatible</li> <li>▪ F252: Modules incompatible</li> <li>▪ F261: Electronic modules</li> <li>▪ F262: Module connecting</li> <li>▪ F270: Main electronic failure</li> <li>▪ F271: Main electronic failure</li> <li>▪ F272: Main electronic failure</li> <li>▪ F273: Main electronic failure</li> <li>▪ F275: I/O-Modul failure</li> <li>▪ F276: I/O module failure</li> <li>▪ F282: Datenspeicher</li> <li>▪ F283: Electronic memory</li> <li>▪ F311: Memory content</li> </ul>
		Configuration	29	<ul style="list-style-type: none"> <li>▪ F410: Data transfer</li> <li>▪ F411: Up-/download</li> <li>▪ F435: Linearization</li> <li>▪ F437: Configuration incompatible</li> </ul>
		Process	28	<ul style="list-style-type: none"> <li>▪ F803: Current loop 1</li> <li>▪ F825: Current loop 1</li> <li>▪ F936: EMC interference</li> <li>▪ F941: Echo lost <sup>1)</sup></li> <li>▪ F970: Linearization</li> </ul>

1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
High severity	Function check (C)	Sensor	27	not used in Levelflex
		Electronics	26	not used in Levelflex
		Configuration	25	<ul style="list-style-type: none"> <li>▪ C411: Up-/download</li> <li>▪ C431: Trim</li> <li>▪ C484: Simulation failure mode</li> <li>▪ C485: Simulation measured value</li> <li>▪ C491: Simulation current output</li> <li>▪ C585: Simulation distance</li> </ul>
		Process	24	not used in Levelflex

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Low severity	Out of specification (S)	Sensor	23	not used in Levelflex
		Electronics	22	not used in Levelflex

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
		Configuration	21	S441: Current output 1
		Process	20	<ul style="list-style-type: none"> <li>▪ S801: Energy too low</li> <li>▪ S825: Operating temperature</li> <li>▪ S921: Change of reference</li> <li>▪ S942: In safety distance <sup>1)</sup></li> <li>▪ S943: In blocking distance</li> <li>▪ S944: Level range</li> <li>▪ S968: Level limited</li> </ul>

- 1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Lowest severity	Maintenance required (M)	Sensor	19	not used in Levelflex
		Elektronics	18	<ul style="list-style-type: none"> <li>▪ M270: Main electronics failure</li> <li>▪ M272: Main electronics failure</li> <li>▪ M311: Electronics failure</li> </ul>
		Configuration	17	M438: Data set
		Process	16	M803: Current loop 1

### 12.8.2 Allocation parameters

The allocation of event categories to the event groups is controlled by the allocation parameters. They reside in the **RESOURCE (RB2)** block:

- **FD\_FAIL\_MAP**: for the **Failure (F)** event category
- **FD\_CHECK\_MAP**: for the **Function check (C)** event category
- **FD\_OFFSPEC\_MAP**: for the **Out of specification (S)** event category
- **FD\_MAINT\_MAP**: for the **Maintenance required (M)** event category

Each allocation parameter consists of 32 bits with the following meaning:

- **Bit 0**: reserved by the Fieldbus Foundation
- **Bits 1 to 15**: Configurable area; here, a number of predefined diagnostic events can be allocated irrespective of the group of events they belong to. In this case they are removed from their group and their behavior can be configured individually. With Levelflex, the following parameters can be allocated to the configurable area:
  - 941: Echo lost
  - 942: In safety distance
- **Bits 16 ... 31**: Standard area; these bits are permanently allocated to a specific group of events. If a bit is set to **1**, the respective event category is assigned to the group.

The following table represents the default setting of the allocation parameters. In the default setting there is a unique relationship between the severity of the event and its category (i.e. its allocation parameter).

Default setting of the allocation parameters

Severity of the event	Standard area																Configurable area
	Highest severity				High severity				Low severity				Lowest severity				
Source of the event <sup>1)</sup>	S	E	C	P	S	E	C	P	S	E	C	P	S	E	C	P	
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15 ... 1
FD_FAIL_MAP	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
FD_CHECK_MAP	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
FD_OFFSPEC_MAP	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0
FD_MAINT_MAP	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0


1) S: Sensor; E: Electronics; C: Configuration; P: Process

In order to change the diagnostic behavior of a group of events, proceed as follows:


1. Open the allocation parameter to which the group is currently allocated.
2. Switch the bit of the group from **1** to **0**. In the case of operation via FieldCare this is done by deactivating the respective checkbox (see the example below).
3. Open the allocation to which the group is to be allocated.
4. Switch the bit of the group from **0** to **1**. In the case of operation via FieldCare this is done by activating the respective checkbox (see the example below).

**Example**

The **Highest severity / Configuration** group contains the messages **410: Data transfer**, **411: Up-/Download**, **435: Linearization** and **437: Configuration incompatible**. These messages are no longer to be classified as **Failure (F)** but as **Function check (C)**.

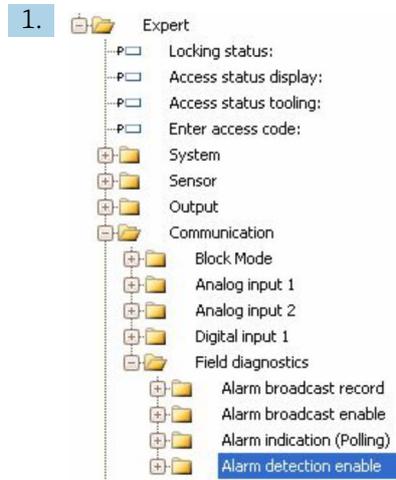

Use the FieldCare navigation window to navigate to the the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.

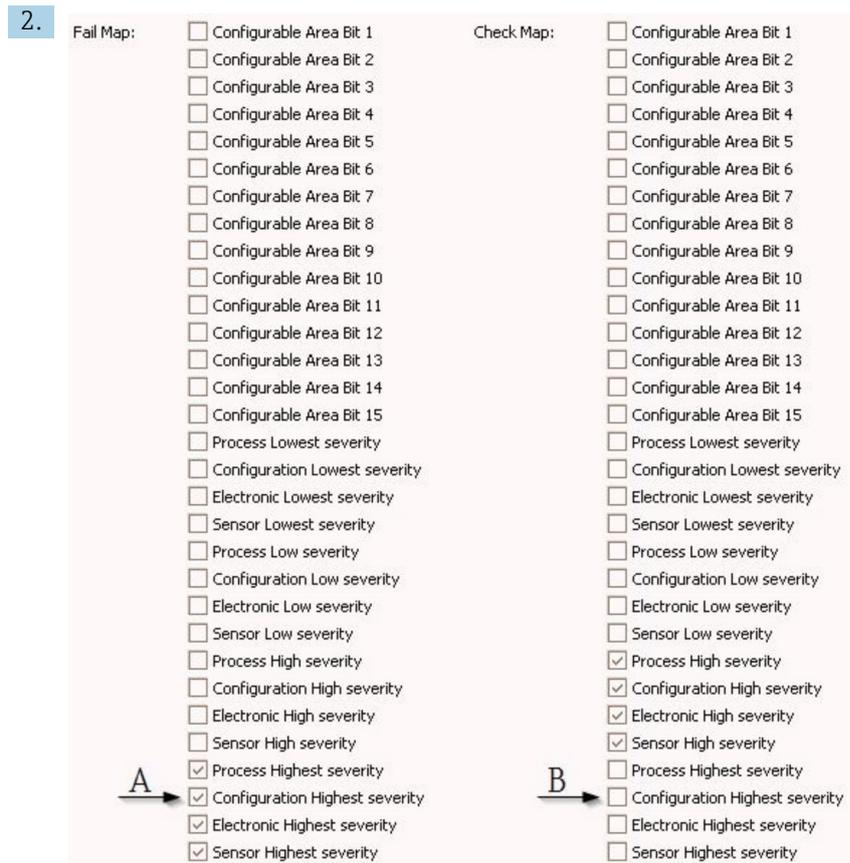

25 Default state of the "Fail Map" and "Check Map" columns

Look for the **Configuration Highest Severity** group in the **Fail Map** column and deactivate the associated checkbox (A). Activate the respective checkbox in the **Check Map** column (B). Remember to confirm each change by pressing the Enter key.



26 Changed state of the "Fail Map" and "Check Map" columns

-  Make sure that for each group the corresponding bit is set to **1** in at least one of the allocation parameters. Otherwise no event category is transmitted with the event message. As a consequence the message will not be recognized by the control system.
-  The **Alarm detection enable** screen is used to configure the detection of diagnostic events but not the transmission of event messages to the bus. The latter is configured on the **Alarm broadcast enable** screen, which is operated exactly in the same way as the **Alarm detection enable** screen. Status information is only transmitted to the bus if the Resource Block is in the **Auto** mode.

### 12.8.3 Configurable area


An event category can be individually defined for the following parameters - irrespective of the group of events they belong to by default.

- **F941**: Echo lost
- **S942**: In safety distance

Prior to changing the event category, the event must be allocated to one of the bits 1 to 15. This is performed by the parameters **FF912 ConfigArea\_1** to **FF912 ConfigArea\_15** in the **DIAGNOSTIC (TRDDIAG)** block. Thereafter, the selected bit can be switched from **0** to **1** in the desired allocation parameter.

#### Example

To change the category of error **942 "In safety distance"** from **Out of specification (S)** (default), to **Function check (C)**, proceed as follows.

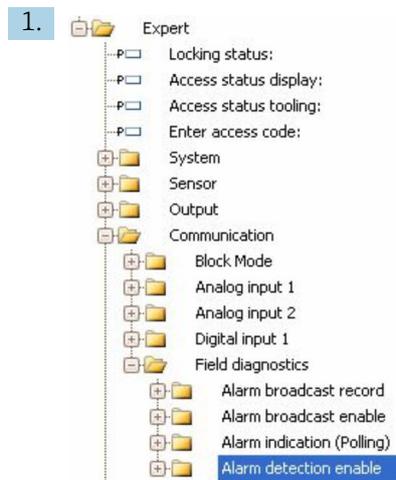


Use the FieldCare navigation window to navigate to the the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.



By default all **Configurable Area Bits** are set to **not used**.



Select one of these bits (in the example: Configurable Area Bit 1) and select **In safety distance** from the associated drop-down menu. Confirm the selection by pressing the Enter key.

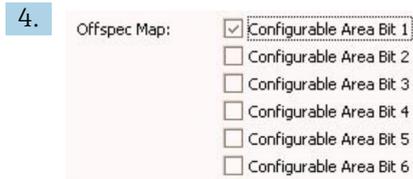


Got to the **Offspec Map** column and activate the checkbox of the respective bit (in the example: **Configurable Area Bit 1**). Confirm the selection by pressing the Enter key.

**i** A change of the error category of **In safety distance** does not affect an error which is already present. The new category is only assigned if a new error of this type occurs after the change.

### 12.8.4 Transmission of the event messages to the bus

#### Event priority

Event messages are only transmitted to the bus if their priority is between 2 and 15. Events of priority 1 are indicated on the display but not transmitted to the bus. Events of priority 0 are ignored. By default, the priority is 0 for all events. The priority can be adjusted individually for each allocation parameter. This is done by the following four priority parameters:

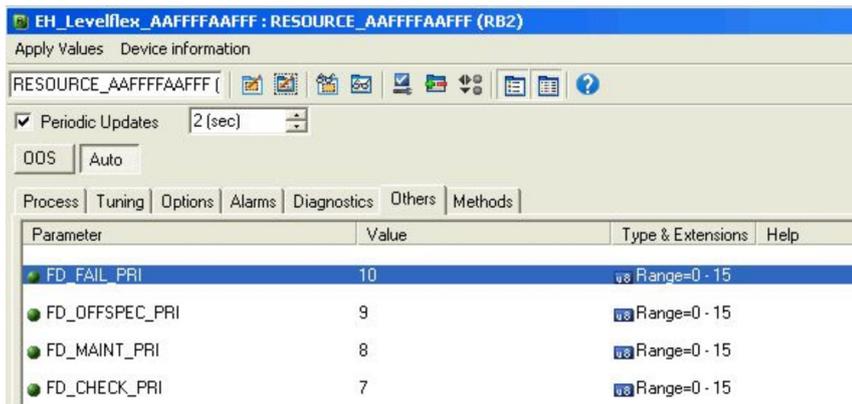

#### Suppression of individual events

For individual events, the transmission to the bus can be suppressed by the use of a mask. The corresponding events will be displayed but not transmitted to the bus. In FieldCare, this mask can be found at **Expert → Communication → Field diagnostics → Alarm broadcast enable**. This mask functions as a negative mask, which means that, if a field is marked, the corresponding events will **not** be transmitted to the bus.

## 12.9 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via locking switch (hardware locking)
- Via operating menu (software locking)
- Via block operation:
  - Block: **DISPLAY (TRDDISP)**; parameter: **Define access code (define\_access\_code)**
  - Block: **EXPERT\_CONFIG (TRDEXP)**; parameter: **Enter access code (enter\_access\_code)**

## 13 Diagnostics and troubleshooting

### 13.1 General trouble shooting

#### 13.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> <li>▪ Increase contrast by pressing <math>\oplus</math> and <math>\boxminus</math> simultaneously.</li> <li>▪ Decrease contrast by pressing <math>\ominus</math> and <math>\boxplus</math> simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Exchange display.
Duplicating of the parameters from one device to another via the display doesn't work. Only the "Save" and "Abort" options are available.	Display with backup is not recognized if no data backup has been performed at the device before.	Connect display (with the backup) and restart the device.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

### 13.1.2 Parametrization errors


#### Parametrization errors for level measurements

Error	Possible cause	Remedial action
Measured value wrong	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> <li>▪ Check and adjust the <b>Empty calibration</b> parameter (→ 135) if necessary.</li> <li>▪ Check and adjust the <b>Full calibration</b> parameter (→ 136) if necessary.</li> <li>▪ Check and adjust linearization if necessary (<b>Linearization</b> submenu (→ 152)).</li> </ul>
	If measured distance (Setup → Distance) does not match the real distance: An interference echo affects the measurement.	Perform mapping ( <b>Confirm distance</b> parameter (→ 138)).
No change of the measured value when emptying/filling the tank	An interference echo affects the measurement.	Perform mapping ( <b>Confirm distance</b> parameter (→ 138)).
	Build-up at the probe.	Clean the probe.
	Error in the echo tracking	Deactivate echo tracking: Expert → Sensor → Echo tracking → Evaluation mode = <b>History off</b> .
The diagnostic message <b>Echo lost</b> appears after switching on the supply voltage.	Echo threshold too high.	Check the <b>Medium group</b> parameter (→ 135). If necessary select a more detailed setting in the <b>Medium property</b> parameter (→ 146).
	Level echo suppressed.	Delete mapping and record new mapping curve if required ( <b>Record map</b> parameter (→ 140)).
Device displays a level when the tank is empty.	Incorrect probe length	Carry out probe length correction ( <b>Confirm probe length</b> parameter (→ 165)).
	Interference echo	Carry out mapping over entire probe while the tank is empty ( <b>Confirm distance</b> parameter (→ 138)).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set <b>Tank type</b> parameter (→ 134) correctly.

## 13.2 Diagnostic information on local display

### 13.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

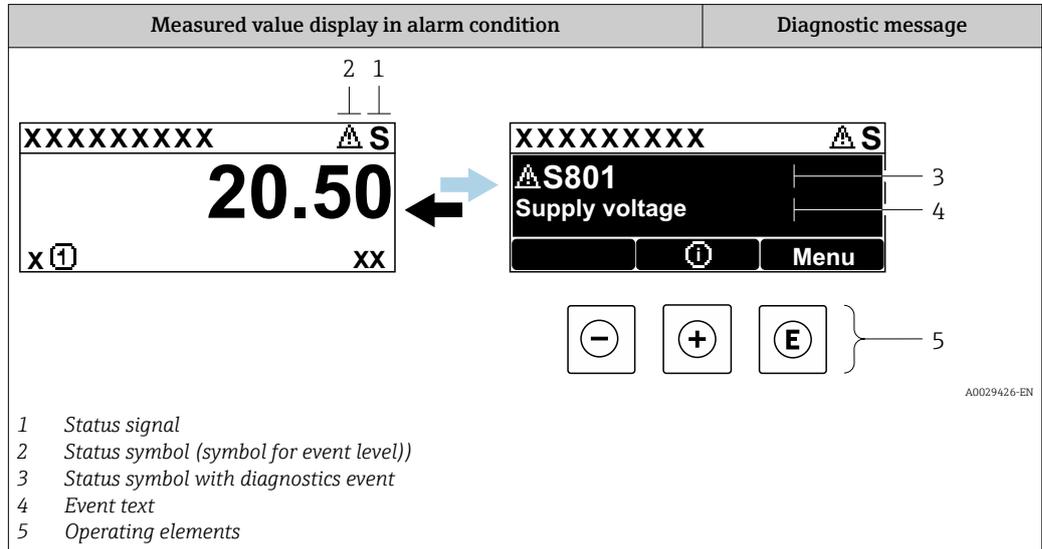

### Status signals


<b>F</b> <small>A0032902</small>	<b>"Failure (F)" option</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0032903</small>	<b>"Function check (C)" option</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0032904</small>	<b>"Out of specification (S)" option</b> The device is operated: <ul style="list-style-type: none"> <li>▪ Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>▪ Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0032905</small>	<b>"Maintenance required (M)" option</b> Maintenance is required. The measured value is still valid.

### Status symbol (symbol for event level)

⊗	<b>"Alarm" status</b> The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
⚠	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

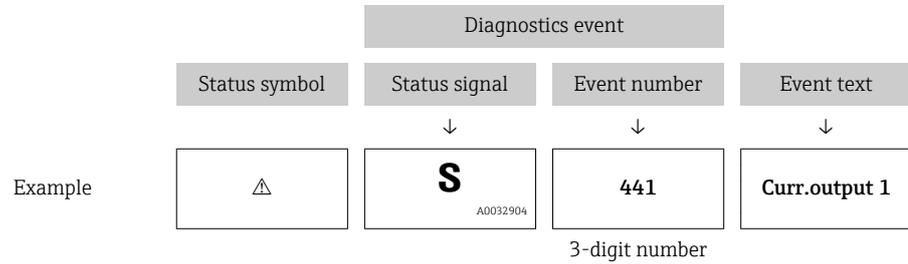


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.

-  Past diagnostic messages that are no longer pending are shown as follows:
  - On the local display:
    - in the **Event logbook** submenu
  - In FieldCare:
    - via the "Event List /HistoROM" function.

### Operating elements

Operating functions in menu, submenu	
+	<b>Plus key</b> Opens the message about the remedial measures.
E	<b>Enter key</b> Opens the operating menu.

### 13.2.2 Calling up remedial measures

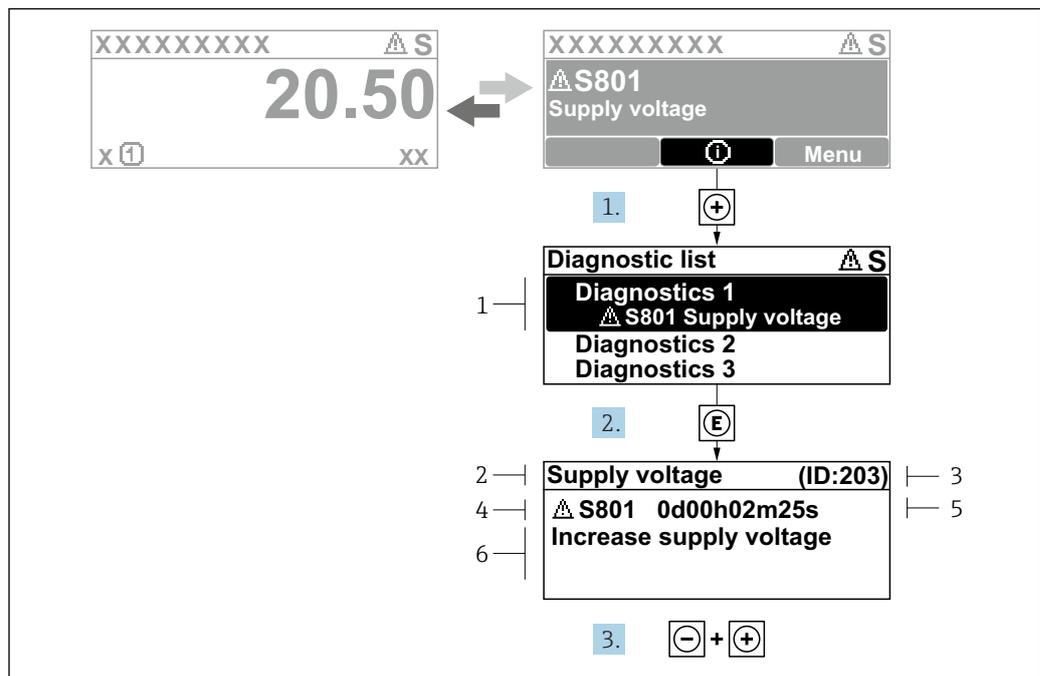

27 Message for remedial measures

A0029431-EN

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press  $\oplus$  ( $\text{\textcircled{1}}$ -Symbol).
  - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with  $\oplus$  or  $\ominus$  and press  $\text{\textcircled{E}}$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press  $\ominus$  +  $\oplus$  simultaneously.
  - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press  $\text{\textcircled{E}}$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  $\ominus$  +  $\oplus$  simultaneously.
  - ↳ The message for the remedial measures closes.


### 13.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

#### A: Via the operating menu

1. Navigate to the **Diagnostics** menu.
  - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

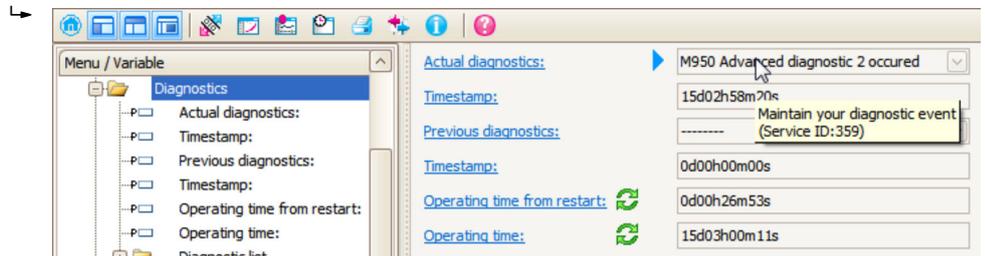

A tool tip with remedial measures for the diagnostic event appears.

#### B: Via the "Create documentation" function

- 1.

Select the "Create documentation" function.

2.
 


Documentation	Status
<input checked="" type="checkbox"/> Documentation	Initialized
<input checked="" type="checkbox"/> Title Pages	Initialized
<input checked="" type="checkbox"/> Cover Page	Initialized
<input checked="" type="checkbox"/> Signatures Page	Initialized
<input checked="" type="checkbox"/> Device parameters	Initialized
<input checked="" type="checkbox"/> Linearization table	Initialized
<input checked="" type="checkbox"/> Envelope curve	Initialized
<input checked="" type="checkbox"/> Extended HistoROM	Initialized
<input checked="" type="checkbox"/> Diagram data	Initialized
<input checked="" type="checkbox"/> Data overview	Initialized
<input type="checkbox"/> Compare Datasets	Not available

Make sure "Data overview" is marked.

3. Click "Save as ..." and save a PDF of the protocol.
  - ↳ The protocol contains the diagnostic messages and remedy information.


### C: Via the "Eventlist / Extended HistoROM" function

1.

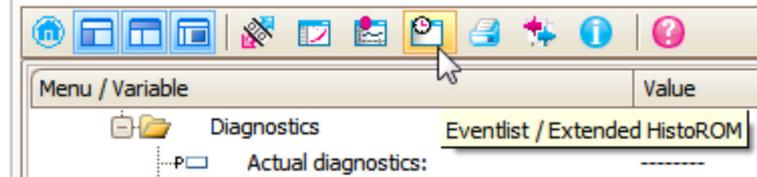

Select the "Eventlist / Extended HistoROM" function.

2.

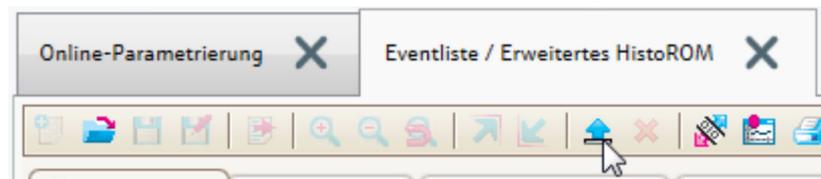

Select the "Load Eventlist" function.

- ↳ The list of events, including remedy information, is shown in the "Data overview" window.

## 13.4 Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)

- The **Actual diagnostics** parameter displays the message with the highest priority. Every message is also output as per the FOUNDATION Fieldbus Specification by means of the **XD\_ERROR** and **BLOCK\_ERROR** parameters.
- A list of diagnostic messages is displayed in the **Diagnostics 1** to **Diagnostics 5** parameters. If more than 5 messages are currently active, only those with the highest priority are displayed.
- You can view a list of alarms which are no longer active (event log) via the **Previous diagnostics** parameter.

## 13.5 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

### Calling up and closing the remedial measures

1. Press  $\square$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  $\square + \oplus$  simultaneously.
  - ↳ The message about the remedial measures closes.

## 13.6 Event logbook

### 13.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu <sup>3)</sup>.

#### Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.

Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - ☉: Event has occurred
  - ☿: Event has ended
- Information event
  - ☉: Event has occurred

#### Calling up and closing the remedial measures

1. Press 
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
  - ↳ The message about the remedial measures closes.

### 13.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

#### Navigation path

Diagnostics → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

### 13.6.3 Overview of information events

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed

3) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

Info number	Info name
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

## 13.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMP53, FOUNDATION Fieldbus)		
			Operating Instructions	Description of Parameters	Technical Information
04.2012	01.00.zz	Original software	BA01053F/00/EN/01.12	GP01015F/00/EN/01.12	TI01002F/00/EN/14.12
05.2015	01.01.zz	<ul style="list-style-type: none"> <li>▪ Support of SD03</li> <li>▪ additional languages</li> <li>▪ HistoROM functionality enhanced</li> <li>▪ "Advanced Diagnostic" function block integrated</li> <li>▪ Improvements and bugfixes</li> </ul>	BA01053F/00/EN/03.15 BA01053F/00/EN/04.16 <sup>1)</sup>	GP01015F/00/EN/02.15	TI01002F/00/EN/17.15 TI01002F/00/EN/20.16 <sup>1)</sup>

1) Contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.

 The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## **14 Maintenance**

The measuring device requires no special maintenance.

### **14.1 Exterior cleaning**

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

### **14.2 Cleaning the probe**

#### **14.2.1 Cleaning the probe in the tank**

If the device has been mounted in a suitable position, the probe can be cleaned in the tank using a spray ball →  28.

### 14.2.2 Cleaning the probe outside the tank

The probe can be disassembled so it can be cleaned better.

The disassembly requires the following tools:

- vise with fiber braces (surface protection for the polished probe rod)
- hook wrench  $\varnothing$  54 mm (21 in)
- open-ended wrench AF27 / AF32 with a torque adjustment up to 20 Nm

#### Caution!

- Before disassembly, it has to be made sure that the supply voltage for the instrument is switched off!
- When releasing the slotted nut (1) make sure to counterhold at the process connection ring (5) with an open-ended wrench as the adapter (3) could otherwise be released from the flange.

#### Unmounting the electronics housing

- Unscrew the grooved nut with a hook wrench.
- Remove the unscrewed housing (2) together with the housing adapter from the adapter (3) of the process connection.
- The housing adapter is still connected with the housing. For the remote version: remove only the cable adapter.
- Replace O-ring (7) where necessary.  
Order code: see Device Viewer → 113.

#### Disassembly of the rod probe

- Unscrew adapter (3) from the process connection (as example: flange); unscrew adapter at the wrench faces with hook wrench (AF27) and pull it out of the tank together with the rod probe (length max. 4 m).
- Clamp the probe rod (4) at the wrench flats or use fitting pliers.


**Caution:** Protect the surface of the polished probe rod! Do not damage the surface by scratching or denting it.

- Unscrew adapter (3) from the probe rod (approx. 12 rotations counter-clockwise) and remove (plug connection). The probe rod is screwed in the insulating bush with 4.5 Nm.
- The O-rings (6) of the probe rod and adapter are now freely accessible and can be exchanged if necessary. The probe rod can be cleaned (autoclaved).  
Order code of the O-rings: see Device Viewer → 113.

#### Assembly of the probe

The assembly is done in reversed order:

- Screw adapter (3) with 4.5 Nm on the probe rod (4).
- Screw the adapter into the container process connection together with the probe rod and tighten with 20 Nm.
- Stick housing (2) with housing adapter on the adapter and bolt it with the grooved nut (1) - torque 20 Nm.

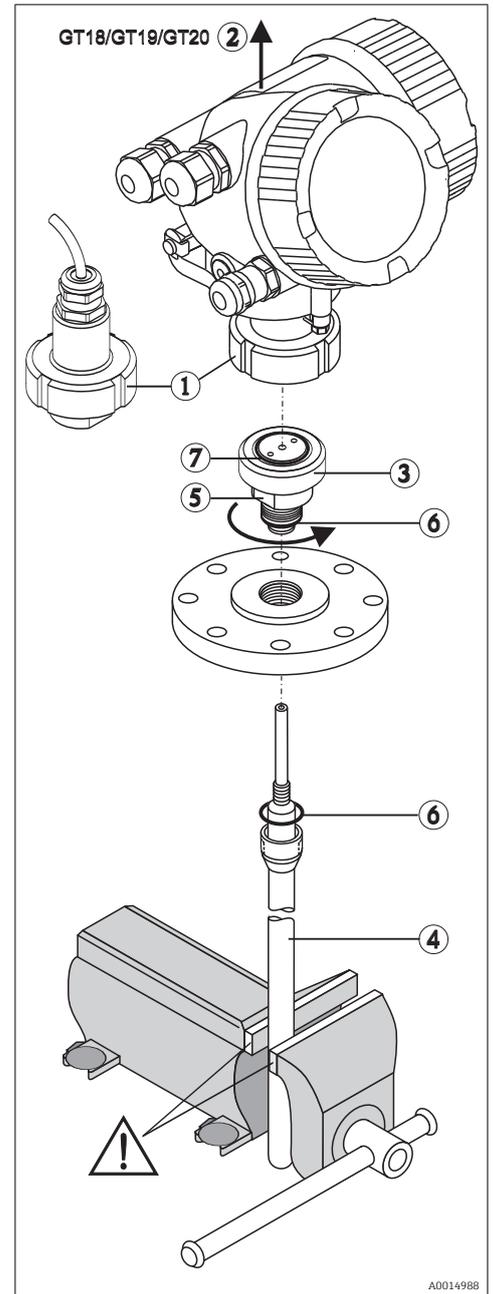

A0014988

## 15 Repairs

### 15.1 General information on repairs

#### 15.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

#### 15.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

#### 15.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

#### 15.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module  
Condition: The configuration of the old device has been saved in the display module  
→  179.
- Via FieldCare  
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

## 15.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL for the *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

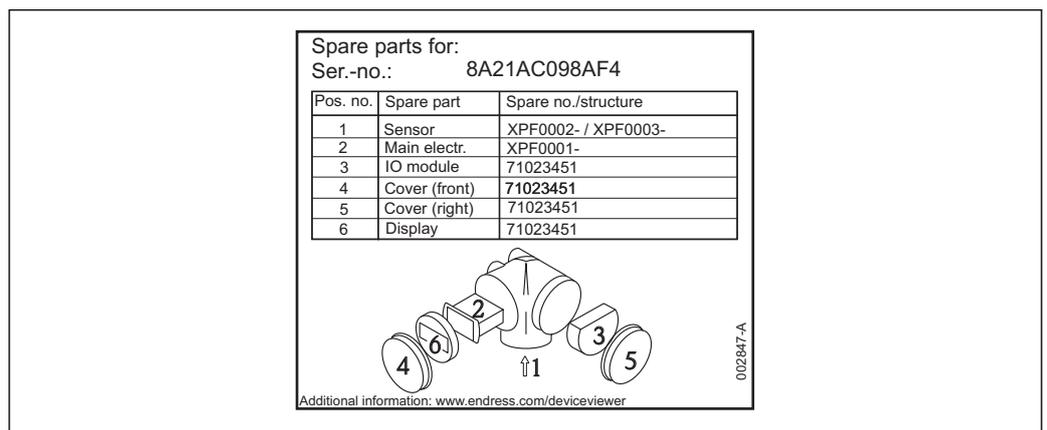

28 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
  - Is located on the device and spare part nameplate.
  - Can be read out via the "Serial number" parameter in the "Device information" submenu.

## 15.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

## 15.4 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.



## 16 Accessories

### 16.1 Device-specific accessories


#### 16.1.1 Weather protection cover

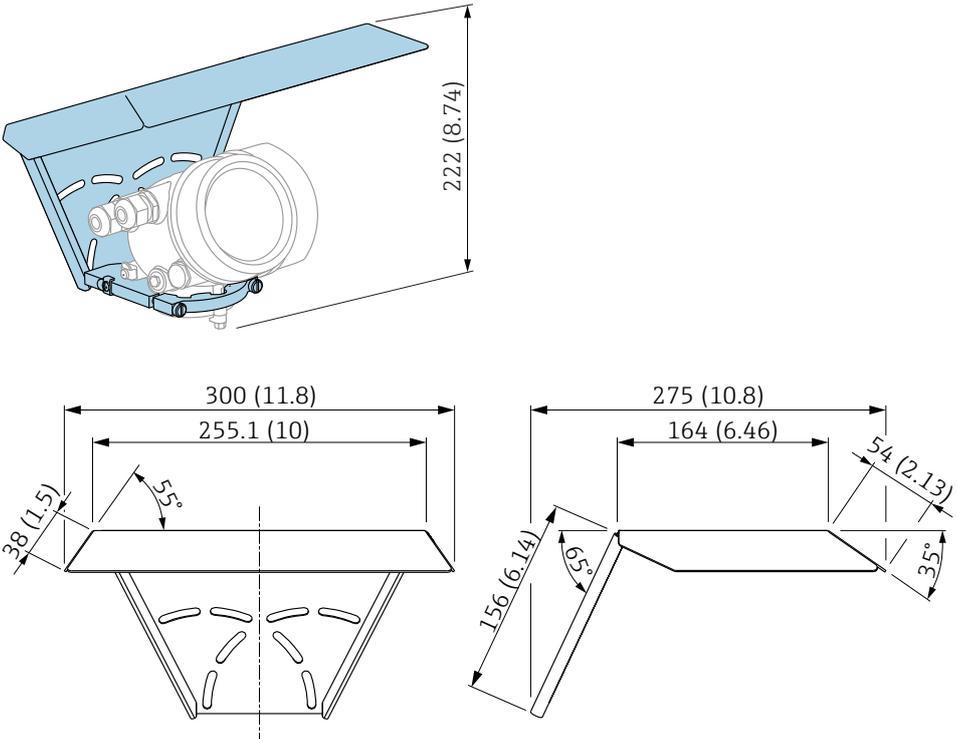Accessory	Description
Weather protection cover	 <p data-bbox="1380 862 1436 884">A0015466</p> <p data-bbox="1380 1276 1436 1299">A0015472</p> <p data-bbox="327 1299 837 1332">  29 Weather protection cover; Dimensions: mm (in)         </p> <p data-bbox="327 1355 1404 1433">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242.         </p>


### 16.1.2 Mounting bracket for the electronics housing

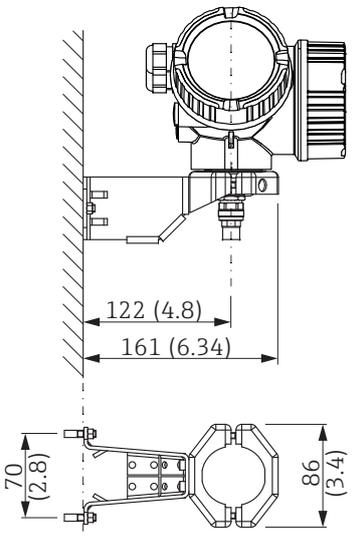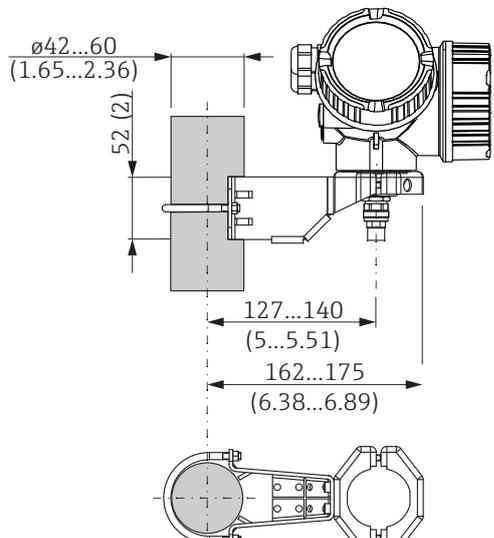Accessory	Description
Mounting bracket for the electronics housing	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>A</b></p>  </div> <div style="text-align: center;"> <p><b>B</b></p>  </div> </div> <p> 30 Mounting bracket for the electronics housing; Dimensions: mm (in)</p> <p>A Wall mounting B Pipe mounting</p> <p> For the "Sensor remote" device version (see feature O60 of the product structure), the mounting bracket is part of the delivery. If required, it can also be ordered as an accessory (order code 71102216).</p> <p style="text-align: right; font-size: small;">A0014793</p>

### 16.1.3 Weld-in adapter

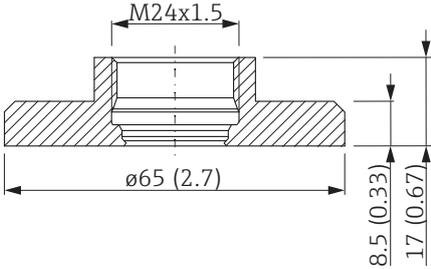Accessory	Description
Weld-in adapter M24 D65	<div style="text-align: center;">  </div> <p>With M24x1.5 thread for flush-mounted sensors. Material: 1.4435 (AISI 316L) Weight: 0.22 kg (0.48 lbs)</p> <p>Order No.</p> <ul style="list-style-type: none"> <li>■ Standard version: 71041381</li> <li>■ with 3.1 material certificate: 71041383</li> </ul> <p>For details see Operating Instructions BA361F.</p> <p style="text-align: right; font-size: small;">A0012776</p>


### 16.1.4 Protective cover

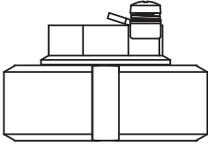Accessory	Description
Protective cover	 <p data-bbox="1380 477 1436 492">A0013589</p> <p data-bbox="676 517 1388 600">With the protective cover the probe can be locked with dismantled electronics. Order no.: 71041379 For details refer to Operating Instructions BA362F.</p>

### 16.1.5 Calibration kit

Accessory	Description
Calibration kit	<p data-bbox="676 779 1417 831">The calibration kit is used to regularly test the accuracy and reproducibility of the Levelflex FMP53 level measurement device.</p> <p data-bbox="676 831 874 857">Order No.: 71041382</p> <p data-bbox="676 857 1161 884">For details refer to Operating Instructions SD01003F.</p>

### 16.1.6 Remote display FHX50

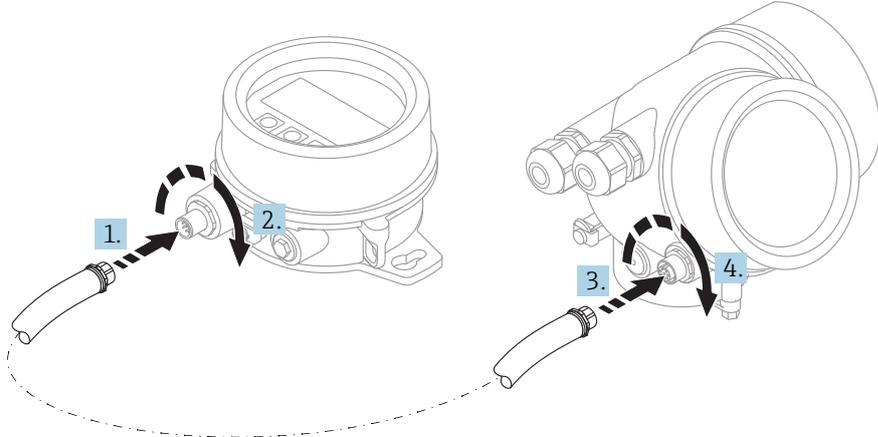
Accessories	Description
Remote display FHX50	<div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> <li>▪ Material:             <ul style="list-style-type: none"> <li>- Plastic PBT</li> <li>- 316L/1.4404</li> <li>- Aluminum</li> </ul> </li> <li>▪ Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x</li> <li>▪ Suitable for display modules:             <ul style="list-style-type: none"> <li>- SD02 (push buttons)</li> <li>- SD03 (touch control)</li> </ul> </li> <li>▪ Connecting cable:             <ul style="list-style-type: none"> <li>- Cable supplied with device up to 30 m (98 ft)</li> <li>- Standard cable supplied by customer up to 60 m (196 ft)</li> </ul> </li> <li>▪ Ambient temperature range: -40 to 80 °C (-40 to 176 °F)</li> <li>▪ Ambient temperature range (option): -50 to 80 °C (-58 to 176 °F) <sup>1)</sup></li> </ul> <p> <span style="font-size: small;">i</span> ▪ If the remote display should be used, order the device version "Prepared for display FHX50" (feature 030, version L, M or N). For the FHX50, you must select option A: "Prepared for display FHX50" under feature 050 "Measuring device version".         </p> <p> <span style="font-size: small;">i</span> ▪ If the device version "Prepared for display FHX50" was not originally ordered and a FHX50 display is to be retrofitted, you must select version B "Not prepared for display FHX50" under feature 050: "Measuring device version" when ordering the FHX50. In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used.         </p> <p> <span style="font-size: small;">i</span> Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option L, M or N ("Prepared for FHX50") is listed under <i>Basic specifications</i>, item 4 "Display, operation" in the Safety Instructions (XA) for the device.              Also pay attention to the Safety Instructions (XA) of the FHX50.         </p> <p> <span style="font-size: small;">i</span> Retrofitting is not possible on transmitters with:             <ul style="list-style-type: none"> <li>▪ An approval for use in areas with flammable dust (dust ignition-proof approval)</li> <li>▪ Ex nA type of protection</li> </ul> </p> <p> <span style="font-size: small;">i</span> For details, see document SD01007F.         </p>

1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.

## 16.1.7 Overvoltage protection

Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	<div data-bbox="327 324 715 660" data-label="Image"> </div> <div data-bbox="1380 667 1437 683" data-label="Text"> <p>A0021734</p> </div> <p data-bbox="327 712 470 734"><b>Technical data</b></p> <ul data-bbox="327 739 917 896" style="list-style-type: none"> <li>▪ Resistance per channel: <math>2 * 0.5 \Omega_{max}</math></li> <li>▪ Threshold DC voltage: 400 to 700 V</li> <li>▪ Threshold impulse voltage: &lt; 800 V</li> <li>▪ Capacitance at 1 MHz: &lt; 1.5 pF</li> <li>▪ Nominal arrest impulse voltage (8/20 <math>\mu</math>s): 10 kA</li> <li>▪ Suited for wire cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)</li> </ul> <p data-bbox="327 907 582 929"><b>i Ordering with device</b></p> <p data-bbox="375 934 1388 1008">The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p data-bbox="327 1025 630 1048"><b>i Order code for retrofitting</b></p> <ul data-bbox="375 1052 901 1153" style="list-style-type: none"> <li>▪ For 1-channel devices (feature 020, option A) OVP10: 71128617</li> <li>▪ For 2-channel devices (feature 020, option B, C, E or G) OVP20 : 71128619</li> </ul> <p data-bbox="375 1169 638 1191"><b>Housing lid for retrofitting</b></p> <p data-bbox="375 1196 1420 1243">In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul data-bbox="375 1247 678 1326" style="list-style-type: none"> <li>▪ GT18 housing: Lid 71185516</li> <li>▪ GT19 housing: Lid 71185518</li> <li>▪ GT20 housing: Lid 71185516</li> </ul> <p data-bbox="327 1339 646 1361"><b>i Restrictions for retrofitting</b></p> <p data-bbox="375 1366 1428 1440">Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p data-bbox="327 1456 662 1478"><b>i</b> For details refer to SD01090F.</p>

### 16.1.8 Bluetooth module for HART devices

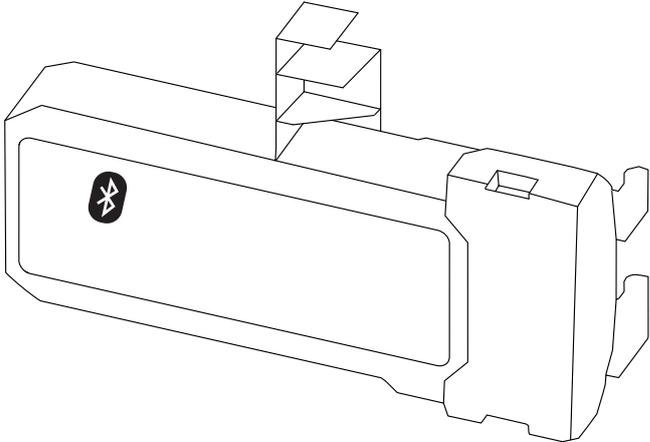Accessory	Description
Bluetooth module	<div style="text-align: right; margin-bottom: 10px;">A0036493</div>  <ul style="list-style-type: none"> <li>▪ Quick and easy commissioning via SmartBlue (app)</li> <li>▪ No additional tools or adapters required</li> <li>▪ Signal curve via SmartBlue (app)</li> <li>▪ Encrypted single point-to-point data transmission (tested by Fraunhofer institute) and password protected communication via Bluetooth® wireless technology</li> <li>▪ Range under reference conditions: &gt; 10 m (33 ft)</li> </ul> <p><b>i</b> When using the Bluetooth module the minimum supply voltage increases by up to 3 V.</p> <p><b>i</b> <b>Ordering with device</b> The Bluetooth module is preferably ordered with the device. See product structure, feature 610 "Accessory Mounted", option NF "Bluetooth". A separate order is only necessary in case of retrofitting.</p> <p><b>i</b> <b>Order code for retrofitting</b> Bluetooth module (BT10): 71377355</p> <p><b>i</b> <b>Restrictions in case of retrofitting</b> Depending on the approval of the transmitter, application of the Bluetooth module may be restricted. A device may only be retrofitted with a Bluetooth module if the option <i>NF</i> (Bluetooth) is listed in the associated Safety Instructions (<i>XA</i>) under <i>Optional specifications</i>.</p> <p><b>i</b> For details refer to SD02252F.</p>

## 16.2 Communication-specific accessories

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C

Accessory	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> .  For details, see Operating Instructions BA01202S

Accessory	Description
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> and the <b>Ex area</b> .  For details, see Operating Instructions BA01202S

## 16.3 Service-specific accessories

Accessory	Description
DeviceCare SFE100	Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus devices  Technical Information TI01134S  <ul style="list-style-type: none"> <li>▪ DeviceCare is available for download at <a href="http://www.software-products.endress.com">www.software-products.endress.com</a>. The download requires a registration in the Endress+Hauser software portal.</li> <li>▪ Alternatively, a DeviceCare DVD can be ordered with the device. Product structure: Feature 570 "Service", Option IV "Tooling DVD (DeviceCare Setup)".</li> </ul>
FieldCare SFE500	FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  Technical Information TI00028S

## 16.4 System components

Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R

# 17 Operating menu

## 17.1 Overview of the operating menu (display module)

Navigation  Operating menu

Language	→  173
<b>Setup</b>	→  134
Distance unit	→  134
Tank type	→  134
Tube diameter	→  135
Medium group	→  135
Empty calibration	→  135
Full calibration	→  136
Level	→  137
Distance	→  137
Signal quality	→  138
<b>Mapping</b>	→  141
Confirm distance	→  141
Mapping end point	→  141
Record map	→  141
Distance	→  141
<b>Analog inputs</b>	
<b>Analog input 1 to 5</b>	→  142
Block tag	→  142

Channel	→ 142
Process Value Filter Time	→ 143
<b>▶ Advanced setup</b>	→ 144
Locking status	→ 144
Access status display	→ 144
Enter access code	→ 145
<b>▶ Level</b>	→ 146
Medium type	→ 146
Medium property	→ 146
Process property	→ 147
Advanced process conditions	→ 148
Level unit	→ 149
Blocking distance	→ 149
Level correction	→ 150
<b>▶ Linearization</b>	→ 152
Linearization type	→ 154
Unit after linearization	→ 155
Free text	→ 156
Maximum value	→ 157
Diameter	→ 157
Intermediate height	→ 157
Table mode	→ 158

▶ Edit table		
	Level	→ 159
	Customer value	→ 160
	Activate table	→ 160
▶ Safety settings		→ 161
	Output echo lost	→ 161
	Value echo lost	→ 161
	Ramp at echo lost	→ 162
	Blocking distance	→ 149
▶ Probe settings		→ 164
	Probe grounded	→ 164
	▶ Probe length correction	→ 166
	Confirm probe length	→ 166
	Present probe length	→ 166
▶ Switch output		→ 167
	Switch output function	→ 167
	Assign status	→ 167
	Assign limit	→ 168
	Assign diagnostic behavior	→ 168
	Switch-on value	→ 169
	Switch-on delay	→ 170
	Switch-off value	→ 170
	Switch-off delay	→ 171
	Failure mode	→ 171

Switch status	→  171
Invert output signal	→  171
<b>► Display</b>	→  173
Language	→  173
Format display	→  173
Value 1 to 4 display	→  175
Decimal places 1 to 4	→  175
Display interval	→  176
Display damping	→  176
Header	→  176
Header text	→  177
Separator	→  177
Number format	→  177
Decimal places menu	→  177
Backlight	→  178
Contrast display	→  178
<b>► Configuration backup display</b>	→  179
Operating time	→  179
Last backup	→  179

Configuration management	→ 179
Comparison result	→ 180
▶ Administration	→ 182
▶ Define access code	→ 184
Define access code	→ 184
Confirm access code	→ 184
Device reset	→ 182
🔍 Diagnostics	→ 185
Actual diagnostics	→ 185
Previous diagnostics	→ 185
Operating time from restart	→ 186
Operating time	→ 179
▶ Diagnostic list	→ 187
Diagnostics 1 to 5	→ 187
▶ Event logbook	→ 188
Filter options	→ 188
▶ Event list	→ 188
▶ Device information	→ 189
Device tag	→ 189
Serial number	→ 189
Firmware version	→ 189
Device name	→ 190
Order code	→ 190
Extended order code 1 to 3	→ 190

▶ Measured values	→ 191
Distance	→ 137
Level linearized	→ 156
Terminal voltage 1	→ 192
▶ Analog inputs	
▶ Analog input 1 to 5	→ 192
Block tag	→ 142
Channel	→ 142
Status	→ 193
Value	→ 193
Units index	→ 193
▶ Data logging	→ 194
Assign channel 1 to 4	→ 194
Logging interval	→ 195
Clear logging data	→ 195
▶ Display channel 1 to 4	→ 196
▶ Simulation	→ 199
Assign measurement variable	→ 200
Process variable value	→ 200
Switch output simulation	→ 200
Switch status	→ 201
Simulation device alarm	→ 201
▶ Device check	→ 202
Start device check	→ 202
Result device check	→ 202

Last check time	→  202
Level signal	→  203
Launch signal	→  203

## 17.2 Overview of the operating menu (operating tool)

Navigation



Operating menu

<b>Setup</b>	→	134
Distance unit	→	134
Tank type	→	134
Tube diameter	→	135
Medium group	→	135
Empty calibration	→	135
Full calibration	→	136
Level	→	137
Distance	→	137
Signal quality	→	138
Confirm distance	→	138
Present mapping	→	139
Mapping end point	→	139
Record map	→	140
<b>▶ Analog inputs</b>		
<b>▶ Analog input 1 to 5</b>	→	142
Block tag	→	142
Channel	→	142
Process Value Filter Time	→	143
<b>▶ Advanced setup</b>	→	144
Locking status	→	144
Access status tooling	→	144
Enter access code	→	145

▶ Level	→ 146
Medium type	→ 146
Medium property	→ 146
Process property	→ 147
Advanced process conditions	→ 148
Level unit	→ 149
Blocking distance	→ 149
Level correction	→ 150
▶ Linearization	→ 152
Linearization type	→ 154
Unit after linearization	→ 155
Free text	→ 156
Level linearized	→ 156
Maximum value	→ 157
Diameter	→ 157
Intermediate height	→ 157
Table mode	→ 158
Table number	→ 159
Level	→ 159
Level	→ 160
Customer value	→ 160
Activate table	→ 160
▶ Safety settings	→ 161
Output echo lost	→ 161
Value echo lost	→ 161

Ramp at echo lost	→  162
Blocking distance	→  149
<b>► Probe settings</b>	→  164
Probe grounded	→  164
Present probe length	→  164
Confirm probe length	→  165
<b>► Switch output</b>	→  167
Switch output function	→  167
Assign status	→  167
Assign limit	→  168
Assign diagnostic behavior	→  168
Switch-on value	→  169
Switch-on delay	→  170
Switch-off value	→  170
Switch-off delay	→  171
Failure mode	→  171
Switch status	→  171
Invert output signal	→  171
<b>► Display</b>	→  173
Language	→  173
Format display	→  173
Value 1 to 4 display	→  175
Decimal places 1 to 4	→  175
Display interval	→  176
Display damping	→  176

Header	→  176
Header text	→  177
Separator	→  177
Number format	→  177
Decimal places menu	→  177
Backlight	→  178
Contrast display	→  178
<b>► Configuration backup display</b>	→  179
Operating time	→  179
Last backup	→  179
Configuration management	→  179
Backup state	→  180
Comparison result	→  180
<b>► Administration</b>	→  182
Define access code	→  184
Device reset	→  182
<b> Diagnostics</b>	→  185
Actual diagnostics	→  185
Timestamp	→  185
Previous diagnostics	→  185
Timestamp	→  186
Operating time from restart	→  186
Operating time	→  179

▶ Diagnostic list	→  187
Diagnostics 1 to 5	→  187
Timestamp 1 to 5	→  187
▶ Device information	→  189
Device tag	→  189
Serial number	→  189
Firmware version	→  189
Device name	→  190
Order code	→  190
Extended order code 1 to 3	→  190
▶ Measured values	→  191
Distance	→  137
Level linearized	→  156
Terminal voltage 1	→  192
▶ Analog inputs	
▶ Analog input 1 to 5	→  192
Block tag	→  142
Channel	→  142
Status	→  193
Value	→  193
Units index	→  193
▶ Data logging	→  194
Assign channel 1 to 4	→  194
Logging interval	→  195
Clear logging data	→  195

▶ <b>Simulation</b>	→ 199
Assign measurement variable	→ 200
Process variable value	→ 200
Switch output simulation	→ 200
Switch status	→ 201
Simulation device alarm	→ 201
▶ <b>Device check</b>	→ 202
Start device check	→ 202
Result device check	→ 202
Last check time	→ 202
Level signal	→ 203
Launch signal	→ 203
▶ <b>Heartbeat</b>	→ 204

### 17.3 "Setup" menu

- i
  -  : Marks the navigation path to the parameter via the display and operating module.
  -  : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
  -  : Marks parameters which can be locked via the software locking.

Navigation   Setup

---

#### Distance unit

---

<b>Navigation</b>	  Setup → Distance unit	
<b>Description</b>	Length unit for distance calculation.	
<b>Selection</b>	<i>SI units</i> <ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> </ul>	<i>US units</i> <ul style="list-style-type: none"> <li>▪ ft</li> <li>▪ in</li> </ul>
<b>Factory setting</b>	m	

---

#### Tank type

---

<b>Navigation</b>	  Setup → Tank type	
<b>Prerequisite</b>	<b>Medium type</b> (→  146) = <b>Liquid</b>	
<b>Description</b>	Select tank type.	
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Metallic</li> <li>▪ Bypass / pipe</li> <li>▪ Non metallic</li> <li>▪ Mounted outside</li> <li>▪ Coaxial</li> </ul>	
<b>Factory setting</b>	Depending on the probe	
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ Depending on the probe some of the options mentioned above may not be available or there may be additional options.</li> <li>▪ For coax probes and probes with metallic center washer <b>Tank type</b> parameter corresponds to the type of probe and cannot be changed.</li> </ul>	

**Tube diameter**



- Navigation** Setup → Tube diameter
- Prerequisite** **Tank type** (→ 134) = **Bypass / pipe**
- Description** Specify diameter of bypass or stilling well.
- User entry** 0 to 9.999 m
- Factory setting** 0.0384 m

**Medium group**



- Navigation** Setup → Medium group
- Prerequisite** **Medium type** (→ 146) = **Liquid**
- Description** Select medium group.
- Selection**
  - Others
  - Water based (DC >= 4)
- Factory setting** Others
- Additional information** This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter (→ 146).  
The **Medium group** parameter presets the **Medium property** parameter (→ 146) as follows:

Medium group	Medium property (→  146)
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

- The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.
- The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

**Empty calibration**




- Navigation** Setup → Empty calibration
- Description** Distance process connection to min. level.
- User entry** Depending on the probe

**Factory setting**

Depending on the probe

**Additional information**

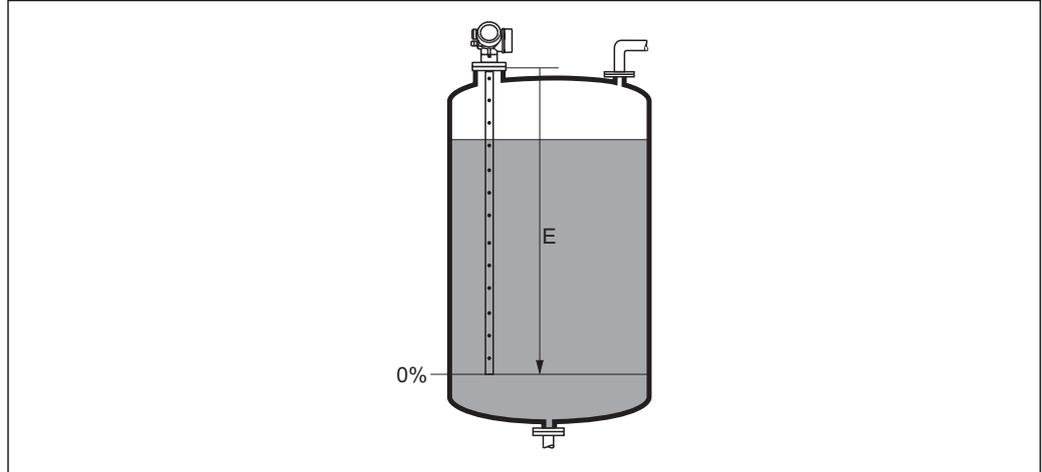

A0013178

31 Empty calibration (E) for level measurements in liquids

**Full calibration**



**Navigation**

Setup → Full calibration

**Description**

Span: max. level - min level.


**User entry**

Depending on the probe

**Factory setting**

Depending on the probe

**Additional information**

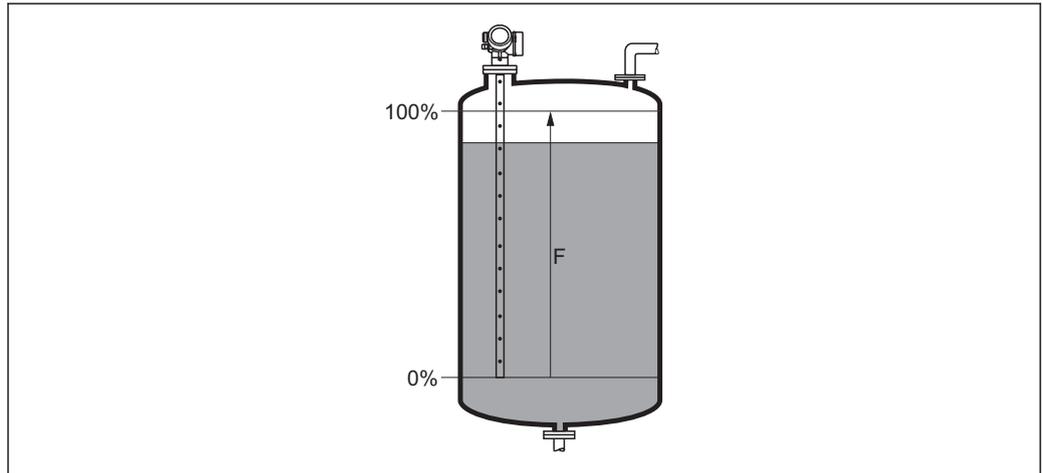

A0013186

32 Full calibration (F) for level measurements in liquids

---


**Level**

---

**Navigation**        Setup → Level

**Description**      Displays measured level  $L_L$  (before linearization).

**Additional information**

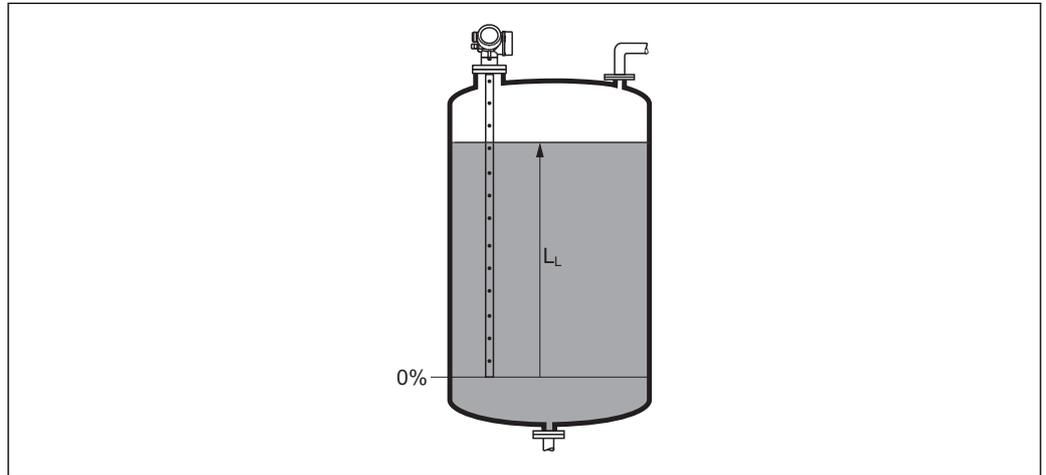

 33    *Level in case of liquid measurements*

 The unit is defined in the **Level unit** parameter (→  149).

---


**Distance**

---

**Navigation**        Setup → Distance

**Description**      Displays the measured distance  $D_L$  between the reference point (lower edge of the flange or threaded connection) and the level.

**Additional information**

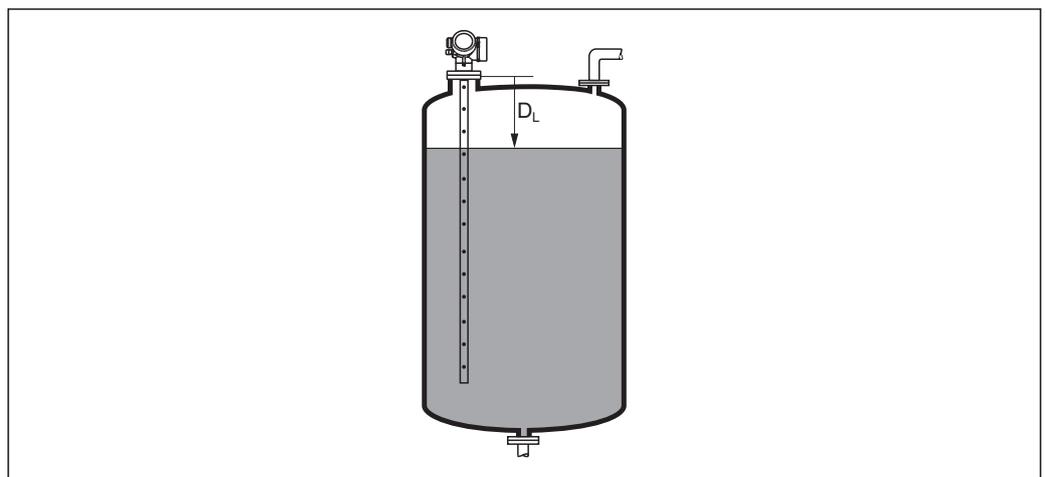

 34    *Distance for liquid measurements*

 The unit is defined in the **Distance unit** parameter (→  134).

---

**Signal quality**


---

**Navigation**   Setup → Signal quality

**Description** Displays the signal quality of the evaluated echo.

**Additional information** **Meaning of the display options**

- **Strong**  
The evaluated echo exceeds the threshold by at least 10 mV.
- **Medium**  
The evaluated echo exceeds the threshold by at least 5 mV.
- **Weak**  
The evaluated echo exceeds the threshold by less than 5 mV.
- **No signal**  
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo <sup>4)</sup> or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.

 In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  161) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  161).

---

**Confirm distance**


---



**Navigation**  Setup → Confirm distance

**Description** Specify, whether the measured distance matches the real distance.  
Depending on the selection the device automatically sets the range of mapping.

**Selection**

- Manual map
- Distance ok
- Distance unknown
- Distance too small \*
- Distance too big \*
- Tank empty
- Delete map

**Factory setting** Distance unknown

---

4) Of these two echos the one with the lower quality is indicated.

\* Visibility depends on order options or device settings

**Additional information**

**Meaning of the options**

- **Manual map**  
To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  139). In this case it is not necessary to confirm the distance.
  - **Distance ok**  
To be selected if the measured distance matches the actual distance. The device performs a mapping.
  - **Distance unknown**  
To be selected if the actual distance is unknown. A mapping can not be performed in this case.
  - **Distance too small**  
To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
  - **Distance too big**<sup>5)</sup>  
To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
  - **Tank empty**  
To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.
  - **Factory map**  
To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.
-  When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
-  If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

---

**Present mapping**

---

**Navigation**

 Setup → Present mapping

**Description**

Indicates up to which distance a mapping has already been recorded.

---

**Mapping end point**

---

**Navigation**

 Setup → Mapping end point

**Prerequisite**

**Confirm distance** (→  138) = **Manual map** or **Distance too small**

**Description**

Specify new end of the mapping.

---

5) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"

**User entry** 0 to 200 000.0 m

**Factory setting** 0.1 m

**Additional information** This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.

 For reference purposes the **Present mapping** parameter (→  139) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.

---

## Record map

---

**Navigation**  Setup → Record map

**Prerequisite** **Confirm distance** (→  138) = **Manual map** or **Distance too small**

**Description** Start recording of the map.

**Selection**

- No
- Record map
- Delete map

**Factory setting** No

**Additional information** **Meaning of the options**

- **No**  
The map is not recorded.
- **Record map**  
The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing .
- **Delete map**  
The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing .

### 17.3.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  134).
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

*Navigation*            Setup → Mapping

---

#### Confirm distance

---

**Navigation**            Setup → Mapping → Confirm distance

**Description**      →  138

---

#### Mapping end point

---

**Navigation**            Setup → Mapping → Mapping end point

**Description**      →  139

---

#### Record map

---

**Navigation**            Setup → Mapping → Record map

**Description**      →  140

---

#### Distance

---

**Navigation**            Setup → Mapping → Distance

**Description**      →  137

### 17.3.2 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

*Navigation*  Setup → Analog inputs → Analog input 1 to 5

---

#### Block tag

---

**Navigation**  Setup → Analog inputs → Analog input 1 to 7 → Block tag

**Description** Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB\_Tag service.

#### Factory setting

---

#### Channel

---

**Navigation**  Setup → Analog inputs → Analog input 1 to 7 → Channel

**Description** Use this function to select the input value that should be processed in the Analog Input function block.

**Selection**

- Uninitialized
- Level linearized
- Absolute echo amplitude
- Absolute EOP amplitude
- Absolute interface amplitude \*
- Distance
- Electronic temperature
- EOP shift
- Interface linearized \*
- Interface distance \*
- Measured capacitance \*
- Relative echo amplitude
- Relative interface amplitude \*
- Noise of signal
- Terminal voltage
- Thickness upper layer \*
- Calculated DC value \*
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 1

**Factory setting** Uninitialized

---

\* Visibility depends on order options or device settings

---

**Process Value Filter Time**

---

<b>Navigation</b>	 Setup → Analog inputs → Analog input 1 to 7 → Process Value Filter Time
<b>Description</b>	Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).
<b>User entry</b>	Positive floating-point number
<b>Factory setting</b>	0 s
<b>Additional information</b>	<i>Factory setting</i>  If the value 0 s is entered, filtering will not be performed.

### 17.3.3 "Advanced setup" submenu

Navigation  Setup → Advanced setup

---

#### Locking status

---

<b>Navigation</b>	  Setup → Advanced setup → Locking status
<b>Description</b>	Indicates the write protection with the highest priority that is currently active.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Hardware locked</li> <li>▪ Temporarily locked</li> </ul>
<b>Additional information</b>	<p><b>Meaning and priorities of the types of write protection</b></p> <ul style="list-style-type: none"> <li>▪ <b>Hardware locked (priority 1)</b> The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.</li> <li>▪ <b>SIL locked (priority 2)</b> The SIL mode is activated. Writing access to the relevant parameters is denied.</li> <li>▪ <b>WHG locked (priority 3)</b> The WHG mode is activated. Writing access to the relevant parameters is denied.</li> <li>▪ <b>Temporarily locked (priority 4)</b> Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.</li> </ul> <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

---

#### Access status tooling

---

<b>Navigation</b>	 Setup → Advanced setup → Access status tooling
<b>Description</b>	Shows the access authorization to the parameters via the operating tool.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  145).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  144).</p>

---

#### Access status display

---

<b>Navigation</b>	 Setup → Advanced setup → Access status display
<b>Prerequisite</b>	The device has a local display.

**Description** Indicates access authorization to parameters via local display.

**Additional information**

-  The access authorization can be changed via the **Enter access code** parameter (→  145).
-  If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  144).

---

## Enter access code

---

**Navigation**  Setup → Advanced setup → Enter access code

**Description** Enter access code to disable write protection of parameters.

**User entry** 0 to 9999

**Additional information**

- For local operation, the customer-specific access code, which has been defined in the **Define access code** parameter (→  182), has to be entered.
- If an incorrect access code is entered, the user retains his current access authorization.
- The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected.
- If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.

 Please contact your Endress+Hauser Sales Center if you lose your access code.

**"Level" submenu**

Navigation  Setup → Advanced setup → Level

**Medium type** **Navigation**

 Setup → Advanced setup → Level → Medium type

**Description**

Specify type of medium.

**User interface**

- Liquid
- Solid

**Factory setting**

FMP50, FMP51, FMP52, FMP53, FMP54, FMP55: **Liquid**

**Additional information**

 This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended **not to change** the factory setting.

**Medium property** **Navigation**

 Setup → Advanced setup → Level → Medium property

**Prerequisite**

**EOP level evaluation ≠ Fix DC**

**Description**

Specify relative dielectric constant  $\epsilon_r$  of the medium.

**Selection**

- Unknown
- DC 1.4 ... 1.6
- DC 1.6 ... 1.9
- DC 1.9 ... 2.5
- DC 2.5 ... 4
- DC 4 ... 7
- DC 7 ... 15
- DC > 15

**Factory setting**

Dependent on **Medium type** (→  146) and **Medium group** (→  135).

**Additional information**

*Dependency on "Medium type" and "Medium group"*

Medium type (→ ⓘ 146)	Medium group (→ ⓘ 135)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

-  For dielectric constants (DC values) of many media commonly used in various industries refer to:
  - the Endress+Hauser DC manual (CP01076F)
  - the Endress+Hauser "DC Values App" (available for Android and iOS)

-  For **EOP level evaluation = Fix DC**, the exact dielectric constant has to be entered into the **DC value** parameter. Therefore, the **Medium property** parameter is not available in this case.

**Process property**



**Navigation**

  Setup → Advanced setup → Level → Process property

**Description**

Specify typical rate of level change.

**Selection**

- For "Medium type" = "Liquid"**
- Very fast > 10 m (400 in)/min
  - Fast > 1 m (40 in)/min
  - Standard < 1 m (40in) /min
  - Medium < 10 cm (4in) /min
  - Slow < 1 cm (0.4in) /min
  - No filter / test
- For "Medium type" = "Solid"**
- Very fast > 100 m (333 ft) /h
  - Fast > 10 m (33 ft) /h
  - Standard < 10 m (33 ft) /h
  - Medium < 1 m (3ft) /h
  - Slow < 0.1 m (0.3ft) /h
  - No filter / test

**Factory setting**

Standard < 1 m (40in) /min

**Additional information**

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

*For "Operating mode" = "Level" and "Medium type" = "Liquid"*

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	14
Medium < 10 cm (4in) /min	39
Slow < 1 cm (0.4in) /min	76
No filter / test	< 1

For "Operating mode" = "Level" and "Medium type" = "Solid"

Process property	Step response time / s
Very fast > 100 m (333 ft) /h	37
Fast > 10 m (33 ft) /h	37
Standard < 10 m (33 ft) /h	74
Medium < 1 m (3ft) /h	146
Slow < 0.1 m (0.3ft) /h	290
No filter / test	< 1

For "Operating mode" = "Interface" or "Interface with capacitance"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	23
Medium < 10 cm (4in) /min	47
Slow < 1 cm (0.4in) /min	81
No filter / test	2.2

Advanced process conditions



Navigation

Setup → Advanced setup → Level → Advanced process conditions

Description

Specify additional process conditions (if required).

Selection

- None
- Oil/Water condensate
- Probe near tank bottom
- Build up
- Foam (>5cm/0,16ft)

Factory setting

None

Additional information

**Meaning of the options**

- **Oil/Water condensate** (only **Medium type = Liquid**)  
Makes sure that in the case of two-phase media only the total level is detected (example: oil/condensate application).
- **Probe near tank bottom** (only for **Medium type = Liquid**)  
Improves the empty detection, especially if the probe is mounted close to the tank bottom.
- **Build up**  
Enables a safe empty-detection even if the end-of-probe signal has shifted due to build-up.
- **Foam (>5cm/0,16ft)** (only for **Medium type = Liquid**)  
Optimizes the signal evaluation in applications with foam formation.

---


**Level unit**


<b>Navigation</b>	Setup → Advanced setup → Level → Level unit								
<b>Description</b>	Select level unit.								
<b>Selection</b>	<table> <thead> <tr> <th><i>SI units</i></th> <th><i>US units</i></th> </tr> </thead> <tbody> <tr> <td>■ %</td> <td>■ ft</td> </tr> <tr> <td>■ m</td> <td>■ in</td> </tr> <tr> <td>■ mm</td> <td></td> </tr> </tbody> </table>	<i>SI units</i>	<i>US units</i>	■ %	■ ft	■ m	■ in	■ mm	
<i>SI units</i>	<i>US units</i>								
■ %	■ ft								
■ m	■ in								
■ mm									
<b>Factory setting</b>	%								
<b>Additional information</b>	<p>The level unit may differ from the distance unit defined in the <b>Distance unit</b> parameter (→  134):</p> <ul style="list-style-type: none"> <li>■ The unit defined in the <b>Distance unit</b> parameter is used for the basic calibration (<b>Empty calibration</b> (→  135) and <b>Full calibration</b> (→  136)).</li> <li>■ The unit defined in the <b>Level unit</b> parameter is used to display the (nonlinearized) level.</li> </ul>								

---

**Blocking distance**


<b>Navigation</b>	Setup → Advanced setup → Level → Blocking distance
<b>Description</b>	Specify upper blocking distance UB.
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
<b>Additional information</b>	<p>Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.</p> <p> This behavior is only valid if the following two conditions are met:</p> <ul style="list-style-type: none"> <li>■ Expert → Sensor → Echo tracking → Evaluation mode = <b>Short time history</b> or <b>Long time history</b>)</li> <li>■ Expert → Sensor → Gas phase compensation → GPC mode= <b>On, Without correction</b> or <b>External correction</b></li> </ul> <p>If one of these conditions is not met, signals in the blocking distance will always be ignored.</p> <p> If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.</p>

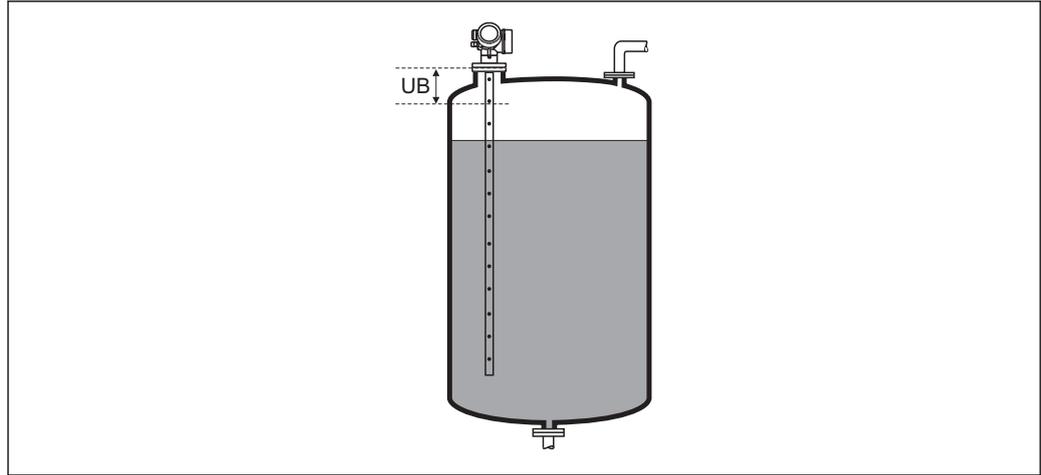

A0013219


35 Blocking distance (UB) for liquid measurements

Level correction



<b>Navigation</b>	 Setup → Advanced setup → Level → Level correction
<b>Description</b>	Specify level correction (if required).
<b>User entry</b>	-200 000.0 to 200 000.0 %
<b>Factory setting</b>	0.0 %
<b>Additional information</b>	The value specified in this parameter is added to the measured level (before linearization).

"Linearization" submenu

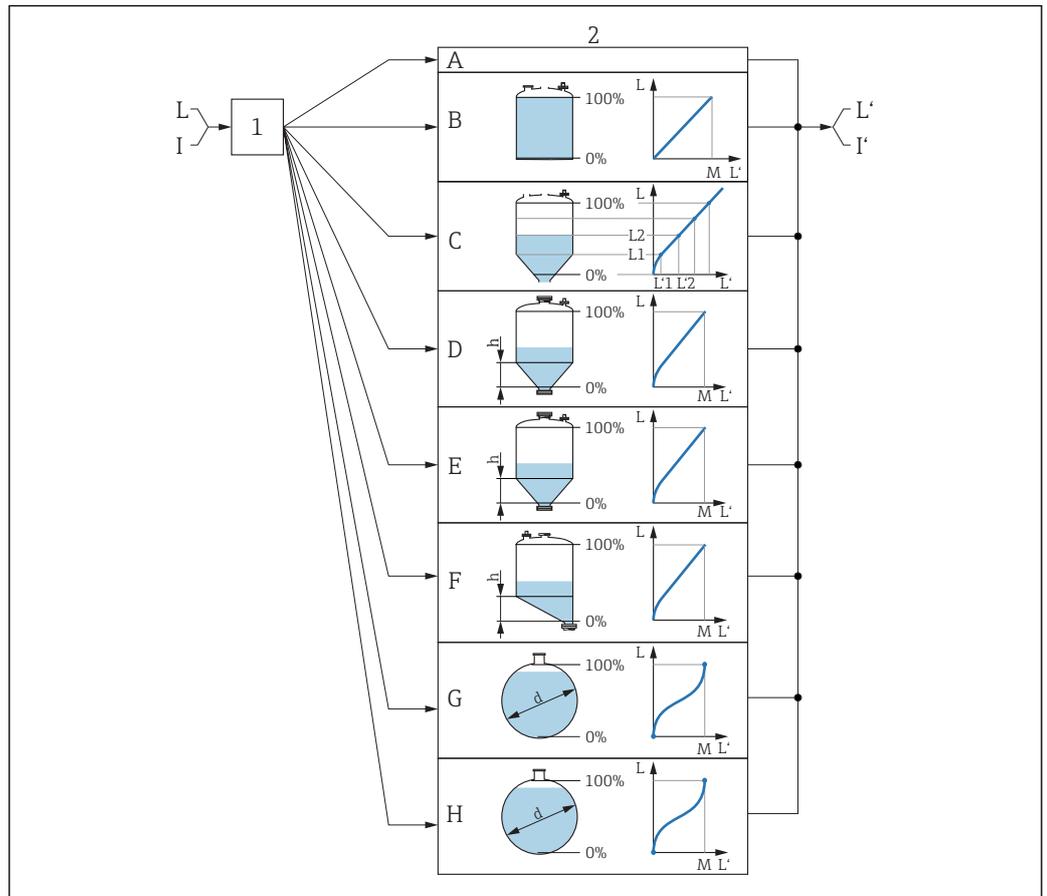

A0016084

36 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 154) = None
- B Linearization type (→ 154) = Linear
- C Linearization type (→ 154) = Table
- D Linearization type (→ 154) = Pyramid bottom
- E Linearization type (→ 154) = Conical bottom
- F Linearization type (→ 154) = Angled bottom
- G Linearization type (→ 154) = Horizontal cylinder
- H Linearization type (→ 154) = Sphere
- I For "Operating mode" = "Interface" or "Interface with capacitance": Interface before linearization (measured in distance units)
- I' For "Operating mode" = "Interface" or "Interface with capacitance": Interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in distance units)
- L' Level linearized (→ 156) (corresponds to volume or weight)
- M Maximum value (→ 157)
- d Diameter (→ 157)
- h Intermediate height (→ 157)

*Structure of the submenu on the display module*

Navigation  Setup → Advanced setup → Linearization

<b>► Linearization</b>		
Linearization type		→  154
Unit after linearization		→  155
Free text		→  156
Maximum value		→  157
Diameter		→  157
Intermediate height		→  157
Table mode		→  158
<b>► Edit table</b>		
	Level	→  159
	Customer value	→  160
	Activate table	→  160

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

<b>► Linearization</b>	
Linearization type	→  154
Unit after linearization	→  155
Free text	→  156
Level linearized	→  156
Maximum value	→  157
Diameter	→  157
Intermediate height	→  157
Table mode	→  158
Table number	→  159
Level	→  159
Level	→  160
Customer value	→  160
Activate table	→  160

*Description of parameters*

Navigation  Setup → Advanced setup → Linearization

**Linearization type** 


**Navigation**  Setup → Advanced setup → Linearization → Linearization type

**Description** Select linearization type.

- Selection**
- None
  - Linear
  - Table
  - Pyramid bottom
  - Conical bottom
  - Angled bottom
  - Horizontal cylinder
  - Sphere

**Factory setting** None

**Additional information**

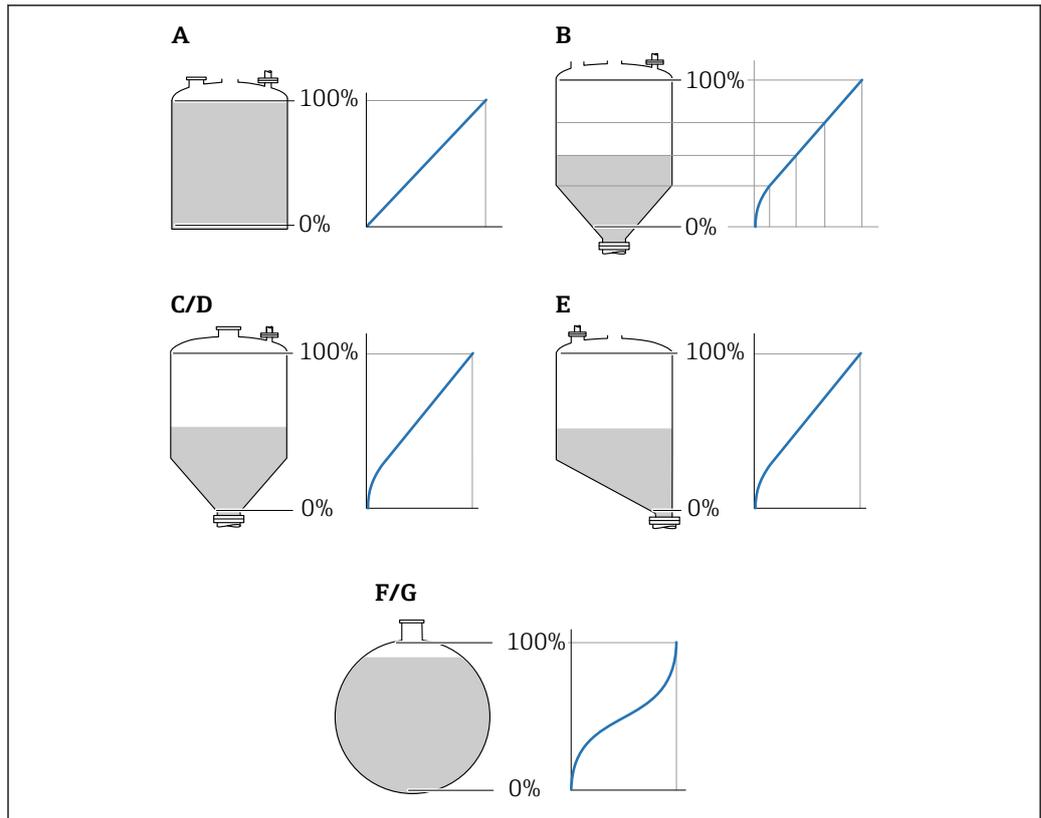

A0021476

 37 *Linearization types*

- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder

**Meaning of the options**

■ **None**

The level is transmitted in the level unit without linearization.

■ **Linear**

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Maximum value** (→  157): Maximum volume or weight

■ **Table**

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Table mode** (→  158)
- For each table point: **Level** (→  159)
- For each table point: **Customer value** (→  160)
- **Activate table** (→  160)

■ **Pyramid bottom**

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Maximum value** (→  157): Maximum volume or weight
- **Intermediate height** (→  157): The height of the pyramid

■ **Conical bottom**

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Maximum value** (→  157): Maximum volume or weight
- **Intermediate height** (→  157): The height of the conical part of the tank

■ **Angled bottom**

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Maximum value** (→  157): Maximum volume or weight
- **Intermediate height** (→  157): Height of the angled bottom

■ **Horizontal cylinder**

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Maximum value** (→  157): Maximum volume or weight
- **Diameter** (→  157)

■ **Sphere**

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  155)
- **Maximum value** (→  157): Maximum volume or weight
- **Diameter** (→  157)

---

**Unit after linearization**



**Navigation**

  Setup → Advanced setup → Linearization → Unit after linearization

**Prerequisite**

**Linearization type** (→  154) ≠ None

**Description**

Select unit of the linealized value.

<b>Selection</b>	<i>SI units</i> <ul style="list-style-type: none"> <li>■ STon</li> <li>■ t</li> <li>■ kg</li> <li>■ cm<sup>3</sup></li> <li>■ dm<sup>3</sup></li> <li>■ m<sup>3</sup></li> <li>■ hl</li> <li>■ l</li> <li>■ %</li> </ul> <i>Custom-specific units</i> Free text	<i>US units</i> <ul style="list-style-type: none"> <li>■ lb</li> <li>■ UsGal</li> <li>■ ft<sup>3</sup></li> </ul>	<i>Imperial units</i> impGal
------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	---------------------------------

**Factory setting**                    %

**Additional information**            The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

 It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter (→  156).

---

**Free text** 

**Navigation**                              Setup → Advanced setup → Linearization → Free text

**Prerequisite**                           **Unit after linearization** (→  155) = **Free text**

**Description**                            Enter unit symbol.

**User entry**                              Up to 32 alphanumerical characters (letters, numbers, special characters)

**Factory setting**                        Free text

---

**Level linearized**

**Navigation**                             Setup → Advanced setup → Linearization → Level linearized

**Description**                            Displays linearized level.

**Additional information**             The unit is defined by the **Unit after linearization** parameter →  155.

---

**Maximum value**

---



<b>Navigation</b>	  Setup → Advanced setup → Linearization → Maximum value
<b>Prerequisite</b>	<b>Linearization type</b> (→  154) has one of the following values: <ul style="list-style-type: none"><li>■ Linear</li><li>■ Pyramid bottom</li><li>■ Conical bottom</li><li>■ Angled bottom</li><li>■ Horizontal cylinder</li><li>■ Sphere</li></ul>
<b>User entry</b>	-50 000.0 to 50 000.0 %
<b>Factory setting</b>	100.0 %

---

**Diameter**

---



<b>Navigation</b>	  Setup → Advanced setup → Linearization → Diameter
<b>Prerequisite</b>	<b>Linearization type</b> (→  154) has one of the following values: <ul style="list-style-type: none"><li>■ Horizontal cylinder</li><li>■ Sphere</li></ul>
<b>User entry</b>	0 to 9 999.999 m
<b>Factory setting</b>	2 m
<b>Additional information</b>	The unit is defined in the <b>Distance unit</b> parameter (→  134).

---


**Intermediate height**

---



<b>Navigation</b>	  Setup → Advanced setup → Linearization → Intermediate height
<b>Prerequisite</b>	<b>Linearization type</b> (→  154) has one of the following values: <ul style="list-style-type: none"><li>■ Pyramid bottom</li><li>■ Conical bottom</li><li>■ Angled bottom</li></ul>
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	0 m

## Additional information

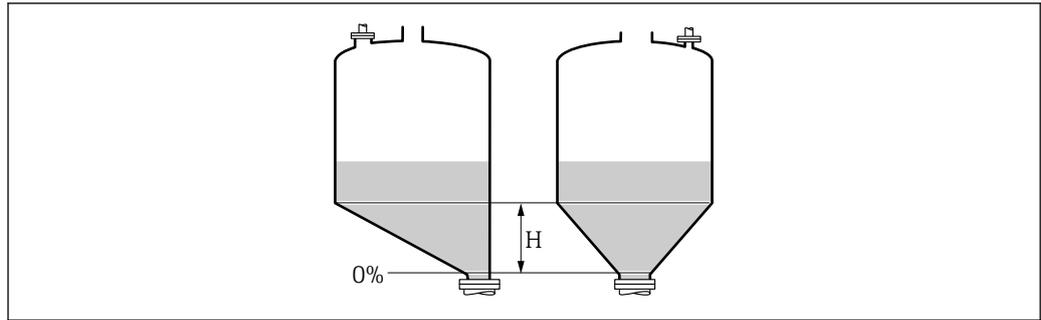

A0013264

$H$  Intermediate height

The unit is defined in the **Distance unit** parameter (→ 134).

## Table mode



## Navigation

Setup → Advanced setup → Linearization → Table mode

## Prerequisite

**Linearization type** (→ 154) = Table

## Description

Select editing mode of the linearization table.

## Selection

- Manual
- Semiautomatic \*
- Clear table
- Sort table

## Factory setting

Manual

## Additional information

**Meaning of the options**

- **Manual**  
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**  
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**  
Deletes the existing linearization table.
- **Sort table**  
Rearranges the linearization points into an ascending order.

\* Visibility depends on order options or device settings

**Conditions the linearization table must meet:**

- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

 Before entering a linearization table, the values for **Empty calibration** (→  135) and **Full calibration** (→  136) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  158) = **Clear table**). Then enter a new table.

**How to enter the table**

- Via FieldCare  
The table points can be entered via the **Table number** (→  159), **Level** (→  159) and **Customer value** (→  160) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- Via local display  
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  149) beforehand.

---

<b>Table number</b>		
<hr/>		
<b>Navigation</b>	 Setup → Advanced setup → Linearization → Table number	
<b>Prerequisite</b>	<b>Linearization type</b> (→  154) = <b>Table</b>	
<b>Description</b>	Select table point you are going to enter or change.	
<b>User entry</b>	1 to 32	
<b>Factory setting</b>	1	

---

<b>Level (Manual)</b>		
<hr/>		
<b>Navigation</b>	 Setup → Advanced setup → Linearization → Level	
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Linearization type</b> (→  154) = <b>Table</b></li> <li>▪ <b>Table mode</b> (→  158) = <b>Manual</b></li> </ul>	
<b>Description</b>	Enter level value of the table point (value before linearization).	
<b>User entry</b>	Signed floating-point number	

**Factory setting** 0 %

---

### Level (Semiautomatic)

---

**Navigation**  Setup → Advanced setup → Linearization → Level

**Prerequisite**

- **Linearization type** (→  154) = **Table**
- **Table mode** (→  158) = **Semiautomatic**

**Description** Displays measured level (value before linearization). This value is transmitted to the table.

---

### Customer value

---

**Navigation**  Setup → Advanced setup → Linearization → Customer value

**Prerequisite** **Linearization type** (→  154) = **Table**

**Description** Enter linearized value for the table point.

**User entry** Signed floating-point number

**Factory setting** 0 %

---

### Activate table

---

**Navigation**   Setup → Advanced setup → Linearization → Activate table

**Prerequisite** **Linearization type** (→  154) = **Table**

**Description** Activate (enable) or deactivate (disable) the linearization table.

**Selection**

- **Disable**
- **Enable**

**Factory setting** Disable

**Additional information** **Meaning of the options**

- **Disable**  
The measured level is not linearized.  
If **Linearization type** (→  154) = **Table** at the same time, the device issues error message F435.

- **Enable**  
The measured level is linearized according to the table.

 When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

**"Safety settings" submenu**

*Navigation*       Setup → Advanced setup → Safety settings

**Output echo lost** 

<b>Navigation</b>	 Setup → Advanced setup → Safety settings → Output echo lost
<b>Description</b>	Output signal in case of a lost echo.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Last valid value</li> <li>■ Ramp at echo lost</li> <li>■ Value echo lost</li> <li>■ Alarm</li> </ul>
<b>Factory setting</b>	Last valid value
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>■ <b>Last valid value</b> The last valid value is kept in the case of a lost echo.</li> <li>■ <b>Ramp at echo lost</b> <sup>6)</sup> In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the <b>Ramp at echo lost</b> parameter (→  162).</li> <li>■ <b>Value echo lost</b> <sup>6)</sup> In the case of a lost echo the output assumes the value defined in the <b>Value echo lost</b> parameter (→  161).</li> <li>■ <b>Alarm</b> In the case of a lost echo the device generates an alarm; see the <b>Failure mode</b> parameter</li> </ul>

**Value echo lost** 

<b>Navigation</b>	 Setup → Advanced setup → Safety settings → Value echo lost
<b>Prerequisite</b>	<b>Output echo lost</b> (→  161) = <b>Value echo lost</b>
<b>Description</b>	Output value in case of a lost echo
<b>User entry</b>	0 to 200 000.0 %
<b>Factory setting</b>	0.0 %
<b>Additional information</b>	<p>Use the unit which has been defined for the measured value output:</p> <ul style="list-style-type: none"> <li>■ without linearization: <b>Level unit</b> (→  149)</li> <li>■ with linearization: <b>Unit after linearization</b> (→  155)</li> </ul>


6) Only visible if "Linearization type" (→  154) = "None"

## Ramp at echo lost



<b>Navigation</b>	Setup → Advanced setup → Safety settings → Ramp at echo lost
<b>Prerequisite</b>	<b>Output echo lost (→  161) = Ramp at echo lost</b>
<b>Description</b>	Slope of the ramp in the case of a lost echo
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0.0 %/min

## Additional information

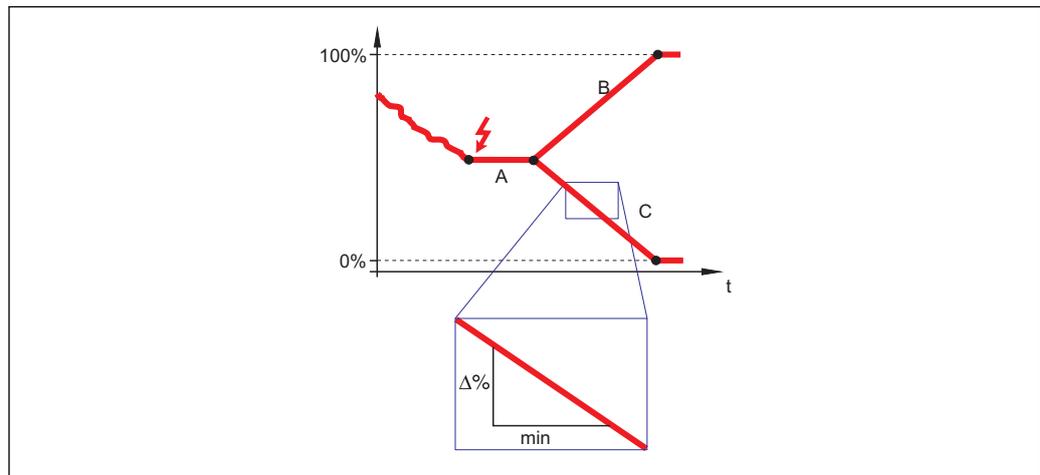

A0013269

- A Delay time echo lost  
 B Ramp at echo lost (→ 162) (positive value)  
 C Ramp at echo lost (→ 162) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

## Blocking distance




<b>Navigation</b>	Setup → Advanced setup → Safety settings → Blocking distance
<b>Description</b>	Specify upper blocking distance UB.
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
<b>Additional information</b>	Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance

due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
  - Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

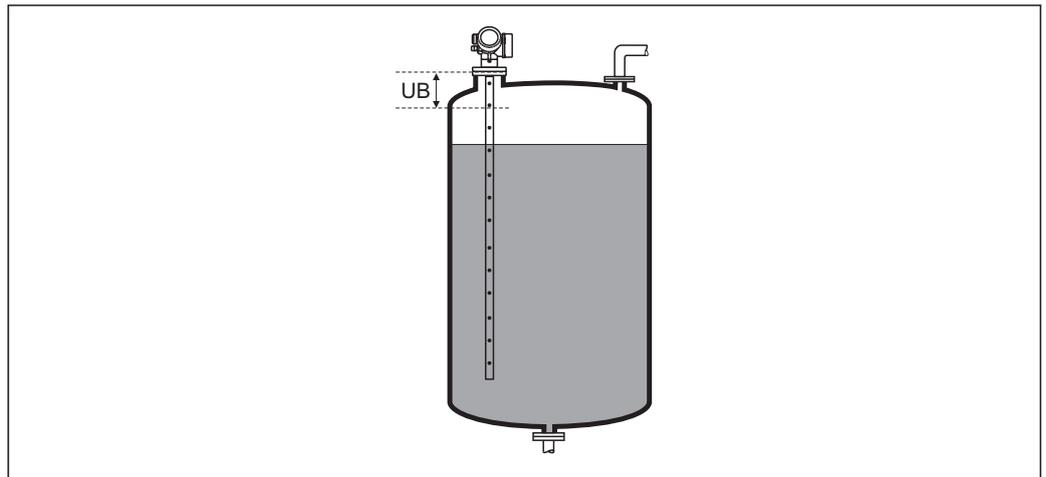

A0013219

**38** Blocking distance (UB) for liquid measurements

**"Probe settings" submenu**

The **Probe settings** submenu helps to ensure that the end of probe signal within the envelope curve is correctly assigned by the evaluation algorithm. The assignment is correct if the length of probe indicated by the device matches the actual length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium). For partially filled vessels and if the probe length is known, select **Confirm probe length** (→  165) = **Manual input** in order to enter the value manually.

-  If a mapping (interference echo suppression) has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. In this case there are two options:
  - Delete the map using the **Record map** parameter (→  140) before performing the automatic probe length correction. After the probe length correction, a new map can be recorded using the **Record map** parameter (→  140).
  - Alternative: Select **Confirm probe length** (→  165) = **Manual input** and enter the probe length manually into the **Present probe length** parameter →  164.
-  An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter (→  164).

*Navigation*        Setup → Advanced setup → Probe settings

---

**Probe grounded** 

<b>Navigation</b>	  Setup → Advanced setup → Probe settings → Probe grounded
<b>Prerequisite</b>	<b>Operating mode = Level</b>
<b>Description</b>	Specify whether the probe is grounded.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>
<b>Factory setting</b>	No

---

**Present probe length** 

<b>Navigation</b>	 Setup → Advanced setup → Probe settings → Present probe length
<b>Description</b>	<ul style="list-style-type: none"> <li>▪ In most cases: Displays the length of the probe according to the currently measured end-of-probe signal.</li> <li>▪ For <b>Confirm probe length</b> (→  165) = <b>Manual input</b>: Enter actual length of probe.</li> </ul>
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	4 m

---

**Confirm probe length**


<b>Navigation</b>	Setup → Advanced setup → Probe settings → Confirm probe length
<b>Description</b>	Select, whether the value displayed in the <b>Present probe length</b> parameter →  164 matches the actual length of the probe. Based on this input, the device performs a probe length correction.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Probe length OK</li> <li>■ Probe length too small</li> <li>■ Probe length too big</li> <li>■ Probe covered</li> <li>■ Manual input</li> <li>■ Probe length unknown</li> </ul>
<b>Factory setting</b>	Probe length OK
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>■ <b>Probe length OK</b> To be selected if the indicated length is correct. An adjustment is not required. The device quits the sequence.</li> <li>■ <b>Probe length too small</b> To be selected if the displayed length is smaller than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is displayed in the <b>Present probe length</b> parameter →  164. This procedure has to be repeated until the displayed value matches the actual length of the probe.</li> <li>■ <b>Probe length too big</b> To be selected if the displayed length is bigger than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the <b>Present probe length</b> parameter →  164. This procedure has to be repeated until the displayed value matches the actual length of the probe.</li> <li>■ <b>Probe covered</b> To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case. The device quits the sequence.</li> <li>■ <b>Manual input</b> To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually into the <b>Present probe length</b> parameter →  164<sup>7)</sup>.</li> <li>■ <b>Probe length unknown</b> To be selected if the actual length of the probe is unknown. A probe length correction is impossible in this case and the device quits the sequence.</li> </ul>

---

7) When operated via FieldCare, the **Manual input** option needs not to be selected explicitly. In FieldCare the length of the probe can always be edited.

*"Probe length correction" wizard*

 The **Probe length correction** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the probe length correction are located directly in the **Probe settings** submenu (→  164).

*Navigation*  Setup → Advanced setup → Probe settings → Probe length correction

**Confirm probe length** 

**Navigation**  Setup → Advanced setup → Probe settings → Probe length correction → Confirm probe length

**Description** →  165

**Present probe length** 

**Navigation**  Setup → Advanced setup → Probe settings → Probe length correction → Present probe length

**Description** →  164

**"Switch output" submenu**

 The **Switch output** submenu (→  167) is only visible for devices with switch output.<sup>8)</sup>

*Navigation*        Setup → Advanced setup → Switch output

**Switch output function**

**Navigation**        Setup → Advanced setup → Switch output → Switch output function

**Description**      Select function for switch output.

**Selection**

- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

**Factory setting**      Off

**Additional information**      **Meaning of the options**

- **Off**  
The output is always open (non-conductive).
- **On**  
The output is always closed (conductive).
- **Diagnostic behavior**  
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  168) determines for which type of event the output is opened.
- **Limit**  
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
  - **Assign limit** (→  168)
  - **Switch-on value** (→  169)
  - **Switch-off value** (→  170)
- **Digital Output**  
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  167).

 The **Off** and **On** options can be used to simulate the switch output.

**Assign status**

**Navigation**        Setup → Advanced setup → Switch output → Assign status

**Prerequisite**      **Switch output function (→  167) = Digital Output**

8) Ordering feature 020 "Power supply; Output", option B, E or G

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Digital output AD 1</li> <li>■ Digital output AD 2</li> <li>■ Digital output 1</li> <li>■ Digital output 2</li> <li>■ Digital output 3</li> <li>■ Digital output 4</li> <li>■ Digital output 5</li> <li>■ Digital output 6</li> <li>■ Digital output 7</li> <li>■ Digital output 8</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	The <b>Digital output AD 1</b> and <b>Digital output AD 2</b> options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

---

### Assign limit

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Assign limit
<b>Prerequisite</b>	<b>Switch output function (→  167) = Limit</b>
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Interface linearized *</li> <li>■ Interface distance *</li> <li>■ Thickness upper layer *</li> <li>■ Terminal voltage</li> <li>■ Electronic temperature</li> <li>■ Measured capacitance *</li> <li>■ Relative echo amplitude</li> <li>■ Relative interface amplitude *</li> <li>■ Absolute echo amplitude</li> <li>■ Absolute interface amplitude *</li> </ul>
<b>Factory setting</b>	Off

---

### Assign diagnostic behavior

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Assign diagnostic behavior
<b>Prerequisite</b>	<b>Switch output function (→  167) = Diagnostic behavior</b>
<b>Description</b>	Select diagnostic behavior for switch output.

---


\* Visibility depends on order options or device settings

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Alarm</li> <li>■ Alarm or warning</li> <li>■ Warning</li> </ul>
<b>Factory setting</b>	Alarm

**Switch-on value**



<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch-on value
<b>Prerequisite</b>	<b>Switch output function</b> (→  167) = <b>Limit</b>
<b>Description</b>	Enter measured value for the switch-on point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<p>The switching behavior depends on the relative position of the <b>Switch-on value</b> and <b>Switch-off value</b> parameters:</p> <p><b>Switch-on value &gt; Switch-off value</b></p> <ul style="list-style-type: none"> <li>– The output is closed if the measured value is larger than <b>Switch-on value</b>.</li> <li>– The output is opened if the measured value is smaller than <b>Switch-off value</b>.</li> </ul>

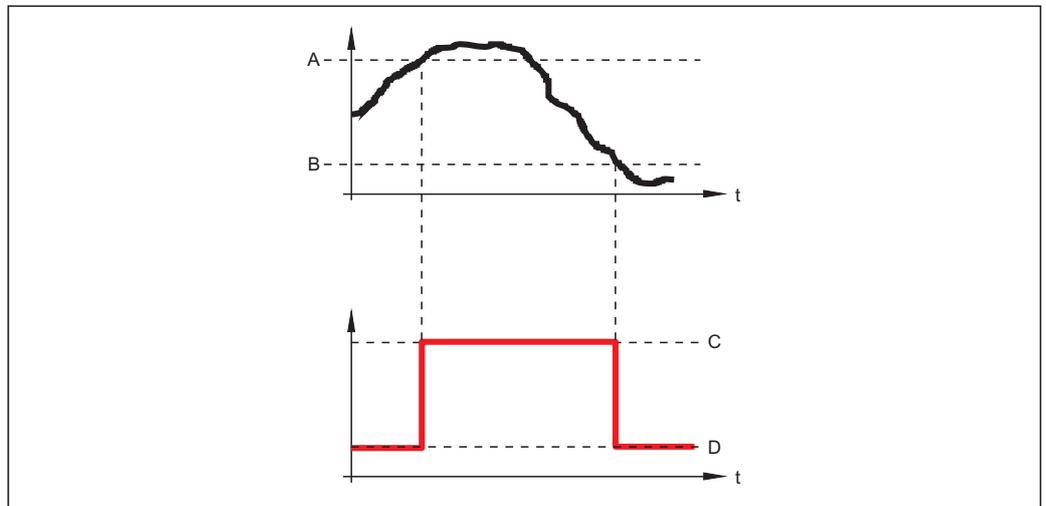


A0015585

- A *Switch-on value*
- B *Switch-off value*
- C *Output closed (conductive)*
- D *Output opened (non-conductive)*

**Switch-on value < Switch-off value**

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

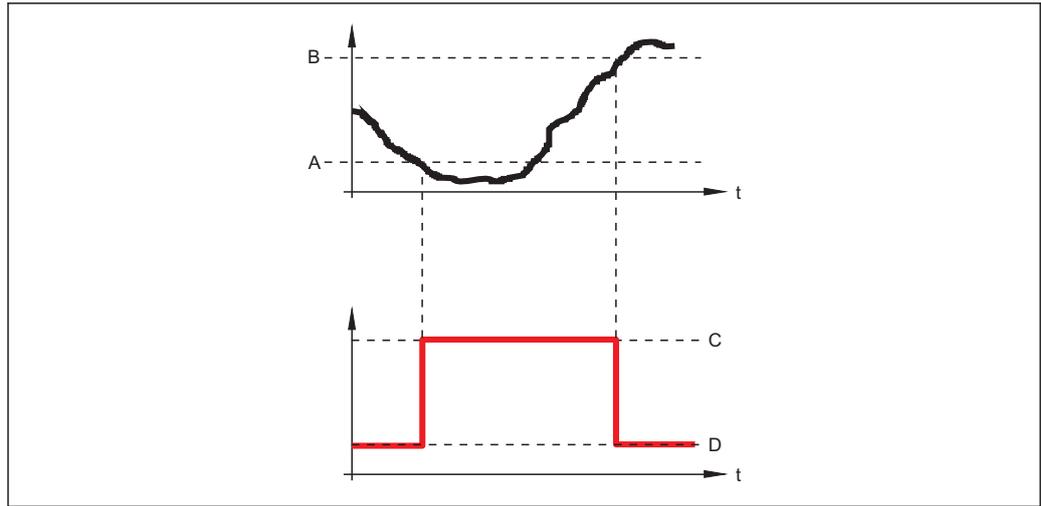

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



<b>Navigation</b>	☰☰ Setup → Advanced setup → Switch output → Switch-on delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ Switch output function (→ ☰ 167) = Limit</li> <li>▪ Assign limit (→ ☰ 168) ≠ Off</li> </ul>
<b>Description</b>	Define delay for the switch-on of status output.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

Switch-off value



<b>Navigation</b>	☰☰ Setup → Advanced setup → Switch output → Switch-off value
<b>Prerequisite</b>	<b>Switch output function (→ ☰ 167) = Limit</b>
<b>Description</b>	Enter measured value for the switch-off point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	The switching behavior depends on the relative position of the <b>Switch-on value</b> and <b>Switch-off value</b> parameters; description: see the <b>Switch-on value</b> parameter (→ ☰ 169).

---

**Switch-off delay**

---



<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch-off delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Switch output function</b> (→  167) = <b>Limit</b></li> <li>▪ <b>Assign limit</b> (→  168) ≠ <b>Off</b></li> </ul>
<b>Description</b>	Define delay for the switch-off of status output.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

---

**Failure mode**

---



<b>Navigation</b>	Setup → Advanced setup → Switch output → Failure mode
<b>Prerequisite</b>	<b>Switch output function</b> (→  167) = <b>Limit</b> or <b>Digital Output</b>
<b>Description</b>	Define output behavior in alarm condition.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Actual status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Factory setting</b>	Open
<b>Additional information</b>	

---

**Switch status**

---

<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch status
<b>Description</b>	Shows the current switch output status.

---

**Invert output signal**

---



<b>Navigation</b>	Setup → Advanced setup → Switch output → Invert output signal
<b>Description</b>	Invert the output signal.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>
<b>Factory setting</b>	No

**Additional information****Meaning of the options**■ **No**

The behavior of the switch output is as described above.

■ **Yes**

The states **Open** and **Closed** are inverted as compared to the description above.

**"Display" submenu**

 The **Display** submenu is only visible if a display module is connected to the device.

*Navigation*        Setup → Advanced setup → Display

---

**Language**


---

**Navigation**        Setup → Advanced setup → Display → Language

**Description**      Set display language.

**Selection**

- English
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык (Russian) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- Bahasa Indonesia \*
- tiếng Việt (Vietnamese) \*
- čeština (Czech) \*

**Factory setting**      The language selected in feature 500 of the product structure.  
If no language has been selected: **English**

**Additional information**


---

**Format display**


---

**Navigation**        Setup → Advanced setup → Display → Format display

**Description**      Select how measured values are shown on the display.

**Selection**

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

**Factory setting**      1 value, max. size

---


\* Visibility depends on order options or device settings

Additional information




A0019963

39 "Format display" = "1 value, max. size"

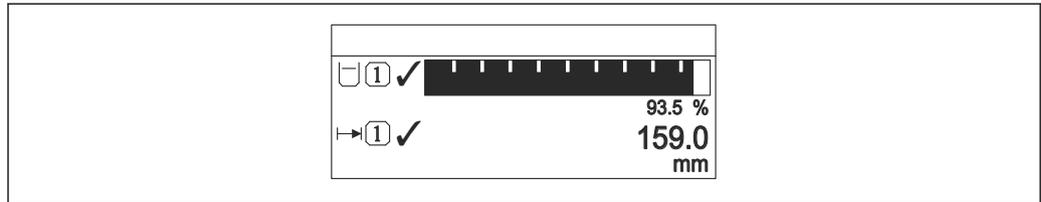


A0019964

40 "Format display" = "1 bargraph + 1 value"

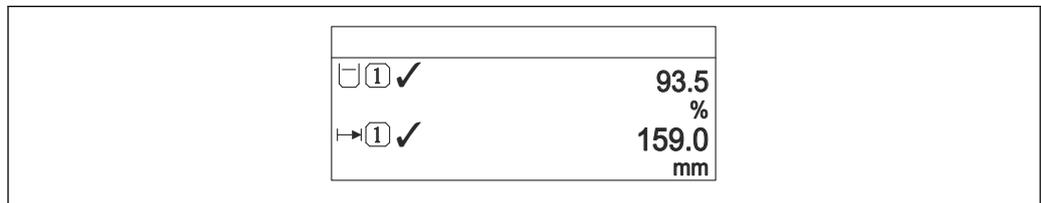


A0019965

41 "Format display" = "2 values"

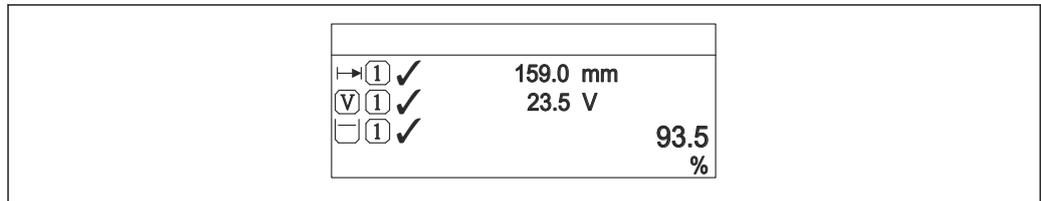

A0019966

42 "Format display" = "1 value large + 2 values"

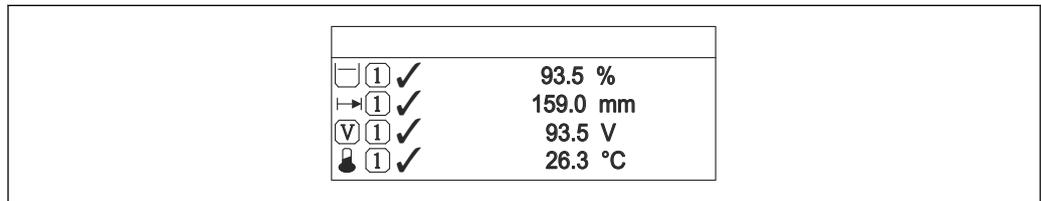

A0019968

43 "Format display" = "4 values"

- i
■
 The **Value 1 to 4 display** → 175 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 176).

---

**Value 1 to 4 display**


<b>Navigation</b>	Setup → Advanced setup → Display → Value 1 display
<b>Description</b>	Select the measured value that is shown on the local display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Interface linearized *</li> <li>■ Interface distance *</li> <li>■ Thickness upper layer *</li> <li>■ Terminal voltage</li> <li>■ Electronic temperature</li> <li>■ Measured capacitance *</li> <li>■ Analog output adv. diagnostics 1</li> <li>■ Analog output adv. diagnostics 2</li> <li>■ Analog output 1</li> <li>■ Analog output 2</li> <li>■ Analog output 3</li> <li>■ Analog output 4</li> <li>■ Analog output 5</li> <li>■ Analog output 6</li> <li>■ Analog output 7</li> <li>■ Analog output 8</li> </ul>
<b>Factory setting</b>	<p><b>For level measurements</b></p> <ul style="list-style-type: none"> <li>■ Value 1 display: Level linearized</li> <li>■ Value 2 display: Distance</li> <li>■ Value 3 display: Current output 1</li> <li>■ Value 4 display: None</li> </ul>

---

**Decimal places 1 to 4**


<b>Navigation</b>	Setup → Advanced setup → Display → Decimal places 1
<b>Description</b>	Select the number of decimal places for the display value.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>
<b>Factory setting</b>	x.xx
<b>Additional information</b>	The setting does not affect the measuring or computational accuracy of the device.

---

\* Visibility depends on order options or device settings

**Display interval**

<b>Navigation</b>	☰☰ Setup → Advanced setup → Display → Display interval
<b>Description</b>	Set time measured values are shown on display if display alternates between values.
<b>User entry</b>	1 to 10 s
<b>Factory setting</b>	5 s
<b>Additional information</b>	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

**Display damping**




<b>Navigation</b>	☰☰ Setup → Advanced setup → Display → Display damping
<b>Description</b>	Set display reaction time to fluctuations in the measured value.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	0.0 s

**Header**



<b>Navigation</b>	☰☰ Setup → Advanced setup → Display → Header
<b>Description</b>	Select header contents on local display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Device tag</li> <li>■ Free text</li> </ul>
<b>Factory setting</b>	Device tag

**Additional information**

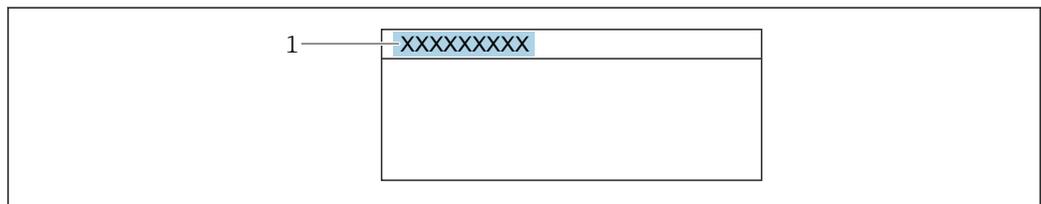

A0029422

1 Position of the header text on the display

*Meaning of the options*

- **Device tag**  
Is defined in the **Device tag** parameter
- **Free text**  
Is defined in the **Header text** parameter (→ ☰ 177)

---

**Header text**


<b>Navigation</b>	Setup → Advanced setup → Display → Header text
<b>Prerequisite</b>	<b>Header (→  176) = Free text</b>
<b>Description</b>	Enter display header text.
<b>Factory setting</b>	-----
<b>Additional information</b>	The number of characters which can be displayed depends on the characters used.

---

**Separator**


<b>Navigation</b>	Setup → Advanced setup → Display → Separator
<b>Description</b>	Select decimal separator for displaying numerical values.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ .</li> <li>▪ ,</li> </ul>
<b>Factory setting</b>	.

---

**Number format**


<b>Navigation</b>	Setup → Advanced setup → Display → Number format
<b>Description</b>	Choose number format for the display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Decimal</li> <li>▪ ft-in-1/16"</li> </ul>
<b>Factory setting</b>	Decimal
<b>Additional information</b>	The <b>ft-in-1/16"</b> option is only valid for distance units.

---

**Decimal places menu**


<b>Navigation</b>	Setup → Advanced setup → Display → Decimal places menu
<b>Description</b>	Select number of decimal places for the representation of numbers within the operating menu.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ X</li> <li>■ X.X</li> <li>■ X.XX</li> <li>■ X.XXX</li> <li>■ X.XXXX</li> </ul>
<b>Factory setting</b>	x.xxxx
<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ Is only valid for numbers in the operating menu (e.g. <b>Empty calibration, Full calibration</b>), but not for the measured value display. The number of decimal places for the measured value display is defined in the <b>Decimal places 1 to 4</b> →  175 parameters.</li> <li>■ The setting does not affect the accuracy of the measurement or the calculations.</li> </ul>

---

## Backlight

---

<b>Navigation</b>	  Setup → Advanced setup → Display → Backlight
<b>Prerequisite</b>	The device has the SD03 local display (with optical keys).
<b>Description</b>	Switch the local display backlight on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Disable</li> <li>■ Enable</li> </ul>
<b>Factory setting</b>	Disable
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>■ <b>Disable</b> Switches the backlight off.</li> <li>■ <b>Enable</b> Switches the backlight on.</li> </ul> <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p>

---

## Contrast display

---

<b>Navigation</b>	  Setup → Advanced setup → Display → Contrast display
<b>Description</b>	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
<b>User entry</b>	20 to 80 %
<b>Factory setting</b>	Dependent on the display.
<b>Additional information</b>	<p> Setting the contrast via push-buttons:</p> <ul style="list-style-type: none"> <li>■ Darker: press the   buttons simultaneously.</li> <li>■ Brighter: press the   buttons simultaneously.</li> </ul>

**"Configuration backup display" submenu**

 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

*Navigation*        Setup → Advanced setup → Configuration backup display

**Operating time**

**Navigation**        Setup → Advanced setup → Configuration backup display → Operating time

**Description**      Indicates how long the device has been in operation.

**Additional information**      *Maximum time*  
9 999 d ( ≈ 27 years)

**Last backup**

**Navigation**        Setup → Advanced setup → Configuration backup display → Last backup

**Description**      Indicates when the last data backup was saved to the display module.

**Configuration management**



**Navigation**        Setup → Advanced setup → Configuration backup display → Configuration management

**Description**      Select action for managing the device data in the display module.

**Selection**

- Cancel
- Execute backup
- Restore
- Duplicate
- Compare
- Clear backup data
- Display incompatible

**Factory setting**      Cancel

**Additional information**

**Meaning of the options**

- **Cancel**  
No user is executed and the user exits the parameter.
  - **Execute backup**  
A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.
  - **Restore**  
The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.
  - **Duplicate**  
The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:  
Medium type
  - **Compare**  
The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  180).
  - **Clear backup data**  
The backup copy of the device configuration is deleted from the display module of the device.
-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.
- In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

---

**Backup state**

---

**Navigation**

 Setup → Advanced setup → Configuration backup display → Backup state

**Description**

Displays which backup action is currently in progress.

---

**Comparison result**

---

**Navigation**

  Setup → Advanced setup → Configuration backup display → Comparison result

**Description**

Comparison between present device data and display backup.

**Additional information****Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

**■ Settings not identical**

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

**■ No backup available**

There is no backup copy of the device configuration of the HistoROM in the display module.

**■ Backup settings corrupt**

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

**■ Check not done**

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

**■ Dataset incompatible**

The data sets are incompatible and can not be compared.



To start the comparison, set **Configuration management** (→  179) = **Compare**.



If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  179) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

**"Administration" submenu**

Navigation  Setup → Advanced setup → Administration

**Define access code** 

**Navigation**   Setup → Advanced setup → Administration → Define access code

**Description** Define release code for write access to parameters.

**User entry** 0 to 9999

**Factory setting** 0

**Additional information**

-  If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
-  The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.
-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  145).
-  Please contact your Endress+Hauser Sales Center if you lose your access code.
-  For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter (→  184).

**Device reset** 

**Navigation**  Setup → Advanced setup → Administration → Device reset  
 Setup → Advanced setup → Administration → Device reset

**Selection**

- Cancel
- To fieldbus defaults
- To factory defaults
- To delivery settings
- Of customer settings
- To transducer defaults
- Restart device

**Factory setting** Cancel

**Additional information****Meaning of the options****■ Cancel**

No action

**■ To factory defaults**

All parameters are reset to the order-code specific factory setting.

**■ To delivery settings**

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

**■ Of customer settings**

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

**■ To transducer defaults**

Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

**■ Restart device**

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

*"Define access code" wizard*

 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

*Navigation*  Setup → Advanced setup → Administration → Define access code

---

**Define access code** 

**Navigation**  Setup → Advanced setup → Administration → Define access code → Define access code

**Description** →  182

---

**Confirm access code** 

**Navigation**  Setup → Advanced setup → Administration → Define access code → Confirm access code

**Description** Confirm the entered access code.

**User entry** 0 to 9 999

**Factory setting** 0

## 17.4 "Diagnostics" menu

Navigation   Diagnostics

---

### Actual diagnostics

---

**Navigation**   Diagnostics → Actual diagnostics

**Description** Displays current diagnostic message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

### Timestamp

---

**Navigation**  Diagnostics → Timestamp

---

### Previous diagnostics

---

**Navigation**   Diagnostics → Previous diagnostics

**Description** Displays the last diagnostic message which has been active before the current message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

**Timestamp**

---

**Navigation**  Diagnostics → Timestamp

---

**Operating time from restart**

---

**Navigation**   Diagnostics → Operating time from restart

**Description** Displays the time the device has been in operation since the last device restart.

---

**Operating time**

---

**Navigation**   Diagnostics → Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time*  
9 999 d ( ≈ 27 years)

### 17.4.1 "Diagnostic list" submenu

*Navigation*        Diagnostics → Diagnostic list

---

#### Diagnostics 1 to 5

---

<b>Navigation</b>	  Diagnostics → Diagnostic list → Diagnostics 1
<b>Description</b>	Display the current diagnostics messages with the highest to fifth-highest priority.
<b>Additional information</b>	The display consists of: <ul style="list-style-type: none"><li>■ Symbol for event behavior</li><li>■ Code for diagnostic behavior</li><li>■ Operating time of occurrence</li><li>■ Event text</li></ul>

---

#### Timestamp 1 to 5

---

<b>Navigation</b>	 Diagnostics → Diagnostic list → Timestamp
-------------------	-------------------------------------------------------------------------------------------------------------------------------

## 17.4.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

*Navigation*  Diagnostics → Event logbook

---

### Filter options

#### Navigation

 Diagnostics → Event logbook → Filter options

#### Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

#### Factory setting

All

#### Additional information

-  ■ This parameter is only used for operation via the local display.  
 ■ The status signals are categorized according to NAMUR NE 107.

### "Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  188). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

#### Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

*Navigation*  Diagnostics → Event logbook → Event list

### 17.4.3 "Device information" submenu

Navigation   Diagnostics → Device information

---

#### Device tag

---

<b>Navigation</b>	 Diagnostics → Device information → Device tag
	 Diagnostics → Device information → Device tag
<b>Description</b>	Enter tag for measuring point.
<b>Factory setting</b>	FMP5x

---

#### Serial number

---

<b>Navigation</b>	 Diagnostics → Device information → Serial number
	 Diagnostics → Device information → Serial number
<b>Additional information</b>	<p> <b>Uses of the serial number</b></p> <ul style="list-style-type: none"> <li>■ To identify the device quickly, e.g. when contacting Endress+Hauser.</li> <li>■ To obtain specific information on the device using the Device Viewer: <a href="http://www.endress.com/deviceviewer">www.endress.com/deviceviewer</a></li> </ul> <p> The serial number is also indicated on the nameplate.</p>

---

#### Firmware version

---

<b>Navigation</b>	 Diagnostics → Device information → Firmware version
	 Diagnostics → Device information → Firmware version
<b>User interface</b>	xx.yy.zz
<b>Additional information</b>	<p> For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.</p>

---

**Device name**


---

- Navigation**
-  Diagnostics → Device information → Device name
  -  Diagnostics → Device information → Device name

---

**Order code**


---



- Navigation**
-  Diagnostics → Device information → Order code
  -  Diagnostics → Device information → Order code

**Additional information** The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

---

**Extended order code 1 to 3**


---



- Navigation**
-  Diagnostics → Device information → Extended order code 1
  -  Diagnostics → Device information → Extended order code 1

**Description** Display the three parts of the extended order code.

**Additional information** The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

### 17.4.4 "Measured values" submenu

Navigation  Diagnostics → Measured values

---


#### Distance

---

Navigation  Diagnostics → Measured values → Distance

Description Displays the measured distance  $D_L$  between the reference point (lower edge of the flange or threaded connection) and the level.

#### Additional information

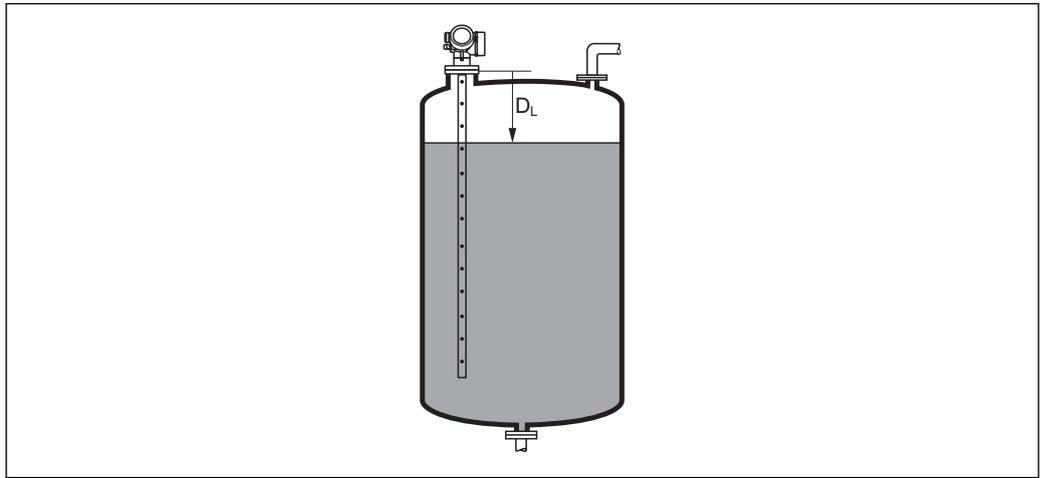

A0013198

 44 Distance for liquid measurements

 The unit is defined in the **Distance unit** parameter (→  134).

---

#### Level linearized

---

Navigation  Diagnostics → Measured values → Level linearized

Description Displays linearized level.

Additional information  The unit is defined by the **Unit after linearization** parameter →  155.

---

**Terminal voltage 1**


---

**Navigation**
 Diagnostics → Measured values → Terminal voltage 1

### 17.4.5 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

*Navigation*  Diagnostics → Analog inputs → Analog input 1 to 5

---

**Block tag**


---

**Navigation**
 Diagnostics → Analog inputs → Analog input 1 to 7 → Block tag
**Description**

Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB\_Tag service.

**Factory setting**


---

**Channel**


---

**Navigation**
 Diagnostics → Analog inputs → Analog input 1 to 7 → Channel
**Description**

Use this function to select the input value that should be processed in the Analog Input function block.

**Selection**

- Uninitialized
- Level linearized
- Absolute echo amplitude
- Absolute EOP amplitude
- Absolute interface amplitude \*
- Distance
- Electronic temperature
- EOP shift
- Interface linearized \*
- Interface distance \*
- Measured capacitance \*
- Relative echo amplitude
- Relative interface amplitude \*
- Noise of signal

---

\* Visibility depends on order options or device settings

- Terminal voltage
- Thickness upper layer \*
- Calculated DC value \*
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 1

**Factory setting** Uninitialized

---

### Status

---

**Navigation**  Diagnostics → Analog inputs → Analog input 1 to 7 → Status

**Description** Indicates the status of the output of the AI block according to the FOUNDATION Fieldbus specification.

---

### Value

---

**Navigation**  Diagnostics → Analog inputs → Analog input 1 to 7 → Value

**Description** Indicates the output value of the AI block.

---

### Units index

---

**Navigation**  Diagnostics → Analog inputs → Analog input 1 to 7 → Units index

**Description** Indicates the unit of the output value.

---

\* Visibility depends on order options or device settings

## 17.4.6 "Data logging" submenu

Navigation  Diagnostics → Data logging

### Assign channel 1 to 4

**Navigation**  Diagnostics → Data logging → Assign channel 1 to 4

**Selection**

- Off
- Level linearized
- Distance
- Unfiltered distance
- Interface linearized \*
- Interface distance \*
- Unfiltered interface distance
- Thickness upper layer \*
- Terminal voltage
- Electronic temperature
- Measured capacitance \*
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude \*
- Relative interface amplitude \*
- Absolute EOP amplitude
- EOP shift
- Noise of signal
- Calculated DC value \*
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Analog output 1
- Analog output 2
- Analog output 3
- Analog output 4

**Factory setting** Off

**Additional information** A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

\* Visibility depends on order options or device settings

---

**Logging interval**
**Navigation**

-  Diagnostics → Data logging → Logging interval
-  Diagnostics → Data logging → Logging interval

**User entry**

1.0 to 3 600.0 s

**Factory setting**

30.0 s

**Additional information**

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time  $T_{\log}$ :

- If 1 logging channel is used:  $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used:  $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used:  $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used:  $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of  $T_{\log}$  always remains in the memory (ring memory principle).

 The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 10000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

---

**Clear logging data**
**Navigation**

-  Diagnostics → Data logging → Clear logging data
-  Diagnostics → Data logging → Clear logging data

**Selection**

- Cancel
- Clear data


**Factory setting**

Cancel

**"Display channel 1 to 4" submenu**

**i** The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

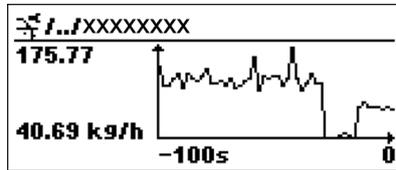

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.

**i** To return to the operating menu, press  $\oplus$  and  $\ominus$  simultaneously.

*Navigation*       $\text{☰}$   $\text{☰}$  Diagnostics → Data logging → Display channel 1 to 4

### 17.4.7 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.


*Conditions which can be simulated*

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> <li>▪ Assign measurement variable (→ 200)</li> <li>▪ Process variable value (→ 200)</li> </ul>
Specific state of the switch output	<ul style="list-style-type: none"> <li>▪ Switch output simulation (→ 200)</li> <li>▪ Switch status (→ 201)</li> </ul>
Existence of an alarm	Simulation device alarm (→ 201)

#### Enable/disable simulation


The simulation of measured values can be enabled or disabled via a hardware switch (SIM switch) at the electronics. Simulating a measured value is only possible if the SIM switch is in the ON position.

The switch output can always be simulated, irrespective of the position of the SIM switch.

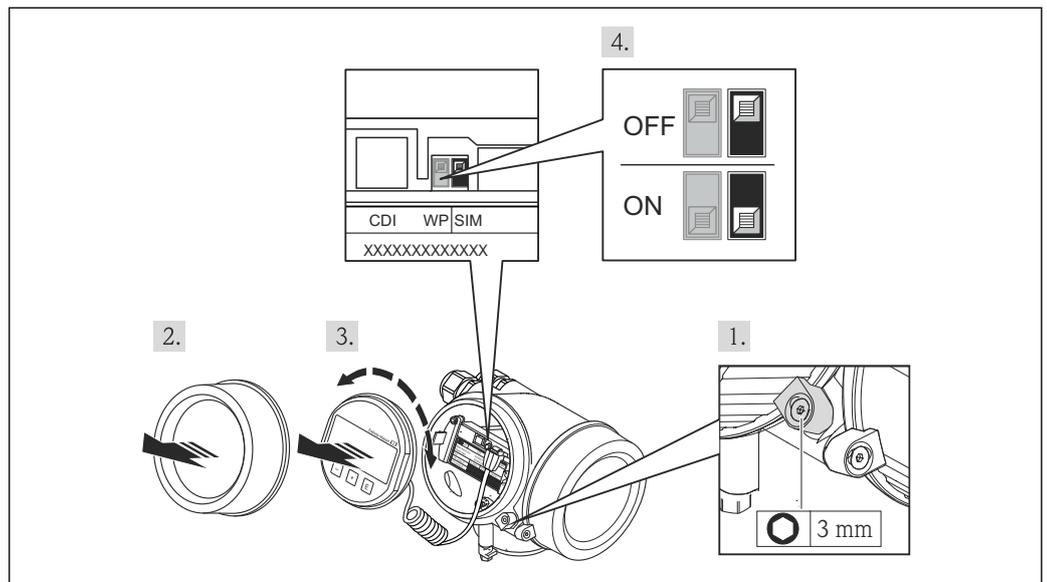

1. Loosen the securing clamp.
2. Unscrew the housing cover.

3. Pull out the display module with a gentle rotation movement. To make it easier to access the SIM switch, attach the display module to the edge of the electronics compartment.
  - ↳ Display module is attached to the edge of the electronics compartment.

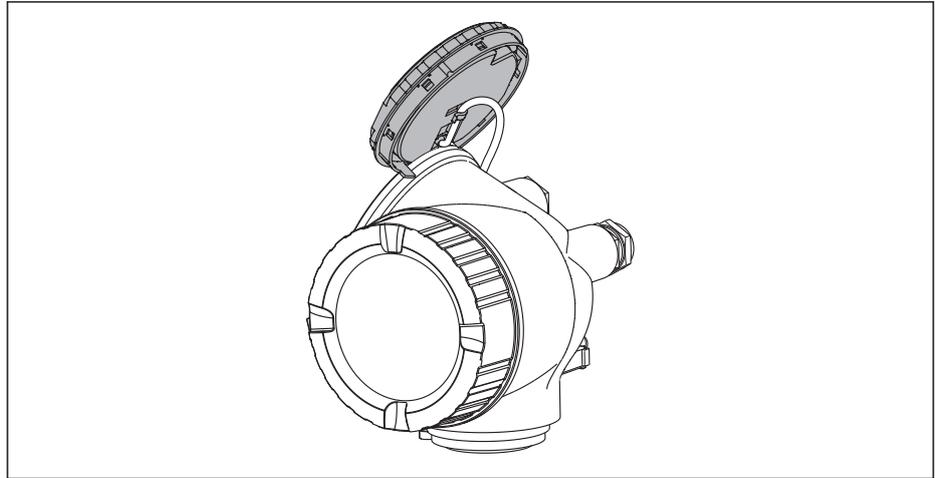

A0013909

4. SIM switch in the **ON** position: measured values can be simulated. SIM switch in the **OFF** position (factory setting): Simulation of measured values is disabled.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

**Structure of the submenu**

*Navigation*            Expert → Diagnostics → Simulation

<b>▶ Simulation</b>	
Assign measurement variable	→  200
Process variable value	→  200
Switch output simulation	→  200
Switch status	→  201
Simulation device alarm	→  201

## Description of parameters

Navigation  Expert → Diagnostics → Simulation

---

### Assign measurement variable

---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Assign measurement variable
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Level</li> <li>■ Interface *</li> <li>■ Level linearized</li> <li>■ Interface linearized</li> <li>■ Thickness linearized</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ The value of the variable to be simulated is defined in the <b>Process variable value</b> parameter (→  200).</li> <li>■ If <b>Assign measurement variable</b> ≠ <b>Off</b>, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.</li> </ul>

---

### Process variable value

---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Process variable value
<b>Prerequisite</b>	<b>Assign measurement variable</b> (→  200) ≠ <b>Off</b>
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

---

### Switch output simulation

---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Switch output simulation
<b>Description</b>	Switch the simulation of the switch output on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>

---

\* Visibility depends on order options or device settings

**Factory setting** Off

---

### Switch status

---

**Navigation**   Expert → Diagnostics → Simulation → Switch status

**Prerequisite** **Switch output simulation** (→  200) = On

**Description** Select the status of the status output for the simulation.

**Selection**

- Open
- Closed

**Factory setting** Open

**Additional information** The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

---

### Simulation device alarm

---

**Navigation**   Expert → Diagnostics → Simulation → Simulation device alarm

**Description** Switch the device alarm on and off.

**Selection**

- Off
- On

**Factory setting** Off

**Additional information** When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.  
An active simulation is indicated by the diagnostic message  **C484 Simulation failure mode**.

---

### Diagnostic event simulation

---

**Navigation**   Expert → Diagnostics → Simulation → Diagnostic event simulation

**Description** Select a diagnostic event to simulate this event.

**Factory setting** Off

**Additional information** When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter).

## 17.4.8 "Device check" submenu

Navigation  Diagnostics → Device check

---

### Start device check

---

<b>Navigation</b>	 Diagnostics → Device check → Start device check
<b>Description</b>	Start a device check.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>
<b>Factory setting</b>	No
<b>Additional information</b>	In the case of a lost echo a device check can not be performed.

---

### Result device check

---

<b>Navigation</b>	 Diagnostics → Device check → Result device check
<b>Description</b>	Displays the result of the device check.
<b>Additional information</b>	<p><b>Meaning of the display options</b></p> <ul style="list-style-type: none"> <li>■ <b>Installation ok</b> Measurement possible without restrictions.</li> <li>■ <b>Accuracy reduced</b> A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.</li> <li>■ <b>Measurement capability reduced</b> A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.</li> <li>■ <b>Check not done</b> No device check has been performed.</li> </ul>

---

### Last check time

---

<b>Navigation</b>	 Diagnostics → Device check → Last check time
<b>Description</b>	Displays the operating time at which the last device check has been performed.

---

**Level signal**

---

<b>Navigation</b>	  Diagnostics → Device check → Level signal
<b>Prerequisite</b>	Device check has been performed.
<b>Description</b>	Displays result of the device check for the level signal.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Check not done</li><li>■ Check not OK</li><li>■ Check OK</li></ul>
<b>Additional information</b>	For <b>Level signal = Check not OK</b> : Check the mounting position of the device and the dielectric constant of the medium.

---

**Launch signal**

---

<b>Navigation</b>	  Diagnostics → Device check → Launch signal
<b>Prerequisite</b>	Device check has been performed.
<b>Description</b>	Displays result of the display check for the launch signal.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Check not done</li><li>■ Check not OK</li><li>■ Check OK</li></ul>
<b>Additional information</b>	For <b>Launch signal = Check not OK</b> : Check the mounting position of the device. In non-metallic vessels use a metal plate or a metal flange.

### 17.4.9 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

#### Detailed description

SD01872F

*Navigation*

 Diagnostics → Heartbeat

# Index

## A

- Access authorization to parameters
  - Read access . . . . . 53
  - Write access . . . . . 53
- Access code . . . . . 53
  - Incorrect input . . . . . 53
- Access status display (Parameter) . . . . . 144
- Access status tooling (Parameter) . . . . . 144
- Accessories
  - Communication specific . . . . . 120
  - Device specific . . . . . 114
  - Service specific . . . . . 120
- Activate table (Parameter) . . . . . 160
- Actual diagnostics (Parameter) . . . . . 185
- Administration (Submenu) . . . . . 182
- Advanced process conditions (Parameter) . . . . . 148
- Advanced setup (Submenu) . . . . . 144
- Analog input 1 to 5 (Submenu) . . . . . 142, 192
- Application . . . . . 12
  - Residual risk . . . . . 12
- Assign channel 1 to 4 (Parameter) . . . . . 194
- Assign diagnostic behavior (Parameter) . . . . . 168
- Assign limit (Parameter) . . . . . 168
- Assign measurement variable (Parameter) . . . . . 200
- Assign status (Parameter) . . . . . 167

## B

- Backlight (Parameter) . . . . . 178
- Backup state (Parameter) . . . . . 180
- Block tag (Parameter) . . . . . 142, 192
- Blocking distance (Parameter) . . . . . 149, 162

## C

- CE mark . . . . . 13
- Channel (Parameter) . . . . . 142, 192
- Cleaning . . . . . 110
- Clear logging data (Parameter) . . . . . 195
- Comparison result (Parameter) . . . . . 180
- Configuration backup display (Submenu) . . . . . 179
- Configuration management (Parameter) . . . . . 179
- Configuration of a level measurement . . . . . 80, 89
- Confirm access code (Parameter) . . . . . 184
- Confirm distance (Parameter) . . . . . 138, 141
- Confirm probe length (Parameter) . . . . . 165, 166
- Context menu . . . . . 64
- Contrast display (Parameter) . . . . . 178
- Customer value (Parameter) . . . . . 160

## D

- Data logging (Submenu) . . . . . 194
- Decimal places 1 (Parameter) . . . . . 175
- Decimal places menu (Parameter) . . . . . 177
- Declaration of Conformity . . . . . 13
- Define access code . . . . . 53
- Define access code (Parameter) . . . . . 182, 184
- Define access code (Wizard) . . . . . 184

- Designated use . . . . . 12
- Device check (Submenu) . . . . . 202
- Device information (Submenu) . . . . . 189
- Device name (Parameter) . . . . . 190
- Device replacement . . . . . 112
- Device reset (Parameter) . . . . . 182
- Device tag (Parameter) . . . . . 189
- Diagnostic event
  - In the operating tool . . . . . 105
- Diagnostic event simulation (Parameter) . . . . . 201
- Diagnostic events . . . . . 102
- Diagnostic list . . . . . 106
- Diagnostic list (Submenu) . . . . . 187
- Diagnostic message . . . . . 102
- Diagnostics
  - Symbols . . . . . 102
- Diagnostics (Menu) . . . . . 185
- Diagnostics 1 (Parameter) . . . . . 187
- Diagnostics event . . . . . 103
- Diameter (Parameter) . . . . . 157
- DIP switch
  - see Write protection switch
- Disable simulation . . . . . 197
- Display (Submenu) . . . . . 173
- Display and operating module FHX50 . . . . . 49
- Display channel 1 to 4 (Submenu) . . . . . 196
- Display damping (Parameter) . . . . . 176
- Display interval (Parameter) . . . . . 176
- Display module . . . . . 58
- Display symbols for submenus . . . . . 59
- Display symbols for the locking state . . . . . 59
- Disposal . . . . . 113
- Distance (Parameter) . . . . . 137, 141, 191
- Distance unit (Parameter) . . . . . 134
- Document
  - Function . . . . . 6
- Document function . . . . . 6

## E

- Electronics housing
  - Design . . . . . 19
- Empty calibration (Parameter) . . . . . 135
- Enable simulation . . . . . 197
- Enter access code (Parameter) . . . . . 145
- Envelope curve display . . . . . 65
- Event history . . . . . 107
- Event level
  - Explanation . . . . . 102
  - Symbols . . . . . 102
- Event list (Submenu) . . . . . 188
- Event logbook (Submenu) . . . . . 188
- Event text . . . . . 103
- Events list . . . . . 107
- Extended order code 1 (Parameter) . . . . . 190
- Exterior cleaning . . . . . 110
- External mounting . . . . . 31

**F**

Failure mode (Parameter) . . . . .	171
FHX50 . . . . .	49
Filter options (Parameter) . . . . .	188
Filtering the event logbook . . . . .	107
Firmware version (Parameter) . . . . .	189
Format display (Parameter) . . . . .	173
Free text (Parameter) . . . . .	156
Full calibration (Parameter) . . . . .	136

**H**

Hardware write protection . . . . .	54
Header (Parameter) . . . . .	176
Header text (Parameter) . . . . .	177
Heartbeat (Submenu) . . . . .	204
Heat insulation . . . . .	33
HistoROM (description) . . . . .	90
Housing	
Design . . . . .	19
Turning . . . . .	35

**I**

Input mask . . . . .	62
Intermediate height (Parameter) . . . . .	157
Invert output signal (Parameter) . . . . .	171

**K**

Keypad lock	
Disabling . . . . .	57
Switching on . . . . .	57

**L**

Language (Parameter) . . . . .	173
Language selection . . . . .	88
Last backup (Parameter) . . . . .	179
Last check time (Parameter) . . . . .	202
Launch signal (Parameter) . . . . .	203
Level (Parameter) . . . . .	137, 159, 160
Level (Submenu) . . . . .	146
Level correction (Parameter) . . . . .	150
Level linearized (Parameter) . . . . .	156, 191
Level measurement configuration . . . . .	80, 89
Level signal (Parameter) . . . . .	203
Level unit (Parameter) . . . . .	149
Linearization (Submenu) . . . . .	152, 153, 154
Linearization type (Parameter) . . . . .	154
Local display . . . . .	48
see Diagnostics message	
see In alarm condition	
Locking status (Parameter) . . . . .	144
Logging interval (Parameter) . . . . .	195

**M**

Maintenance . . . . .	110
Manage device configuration . . . . .	84, 90
Mapping (Wizard) . . . . .	141
Mapping end point (Parameter) . . . . .	139, 141
Maximum value (Parameter) . . . . .	157
Measured materials . . . . .	12

Measured value symbols . . . . .	60
Measured values (Submenu) . . . . .	191
Medium group (Parameter) . . . . .	135
Medium property (Parameter) . . . . .	146
Medium type (Parameter) . . . . .	146
Menu	
Diagnostics . . . . .	185
Setup . . . . .	134
Mounting position for level measurements . . . . .	23

**N**

Non-metallic vessels . . . . .	30
Number format (Parameter) . . . . .	177

**O**

Operating elements	
Diagnostics message . . . . .	103
Operating module . . . . .	58
Operating time (Parameter) . . . . .	179, 186
Operating time from restart (Parameter) . . . . .	186
Operational safety . . . . .	13
Order code (Parameter) . . . . .	190
Output echo lost (Parameter) . . . . .	161
Overvoltage protection	
General information . . . . .	43

**P**

Present mapping (Parameter) . . . . .	139
Present probe length (Parameter) . . . . .	164, 166
Previous diagnostics (Parameter) . . . . .	185
Probe grounded (Parameter) . . . . .	164
Probe length correction (Wizard) . . . . .	166
Probe settings (Submenu) . . . . .	164
Process property (Parameter) . . . . .	147
Process Value Filter Time (Parameter) . . . . .	143
Process variable value (Parameter) . . . . .	200
Product safety . . . . .	13

**R**

Ramp at echo lost (Parameter) . . . . .	162
Read access . . . . .	53
Record map (Parameter) . . . . .	140, 141
Registered trademarks . . . . .	11
Remedial measures	
Calling up . . . . .	104
Closing . . . . .	104
Remote operation . . . . .	49
Repair concept . . . . .	112
Replacing a device . . . . .	112
Requirements for personnel . . . . .	12
Result device check (Parameter) . . . . .	202
Return . . . . .	113
Rod probe	
Design . . . . .	18
Rod probes	
Bending strength . . . . .	27

**S**

Safety instructions	
Basic . . . . .	12

- Safety Instructions (XA) . . . . . 15
  - Safety settings (Submenu) . . . . . 161
  - Separator (Parameter) . . . . . 177
  - Serial number (Parameter) . . . . . 189
  - Service interface (CDI) . . . . . 50
  - Setting the operating language . . . . . 79
  - Settings
    - Manage device configuration . . . . . 84, 90
    - Operating language . . . . . 79
  - Setup (Menu) . . . . . 134
  - Signal quality (Parameter) . . . . . 138
  - SIM switch . . . . . 197
  - Simulation (Submenu) . . . . . 199, 200
  - Simulation device alarm (Parameter) . . . . . 201
  - Spare parts . . . . . 113
    - Nameplate . . . . . 113
  - Start device check (Parameter) . . . . . 202
  - Status (Parameter) . . . . . 193
  - Status signals . . . . . 59, 102
  - Störungsbehebung . . . . . 100
  - Submenu
    - Administration . . . . . 182
    - Advanced setup . . . . . 144
    - Analog input 1 to 5 . . . . . 142, 192
    - Configuration backup display . . . . . 179
    - Data logging . . . . . 194
    - Device check . . . . . 202
    - Device information . . . . . 189
    - Diagnostic list . . . . . 187
    - Display . . . . . 173
    - Display channel 1 to 4 . . . . . 196
    - Event list . . . . . 188
    - Event logbook . . . . . 188
    - Events list . . . . . 107
    - Heartbeat . . . . . 204
    - Level . . . . . 146
    - Linearization . . . . . 152, 153, 154
    - Measured values . . . . . 191
    - Probe settings . . . . . 164
    - Safety settings . . . . . 161
    - Simulation . . . . . 199, 200
    - Switch output . . . . . 167
  - Switch output (Submenu) . . . . . 167
  - Switch output function (Parameter) . . . . . 167
  - Switch output simulation (Parameter) . . . . . 200
  - Switch status (Parameter) . . . . . 171, 201
  - Switch-off delay (Parameter) . . . . . 171
  - Switch-off value (Parameter) . . . . . 170
  - Switch-on delay (Parameter) . . . . . 170
  - Switch-on value (Parameter) . . . . . 169
  - Symbols
    - For correction . . . . . 62
    - In the text and numeric editor . . . . . 62
  - System components . . . . . 120
- T**
- Table mode (Parameter) . . . . . 158
  - Table number (Parameter) . . . . . 159
  - Tank type (Parameter) . . . . . 134
  - Terminal voltage 1 (Parameter) . . . . . 192
  - Timestamp (Parameter) . . . . . 185, 186, 187
  - Tools . . . . . 34
  - Transmitter
    - Turning the display . . . . . 36
    - Turning the display module . . . . . 36
  - Transmitter housing
    - Turning . . . . . 35
  - Tube diameter (Parameter) . . . . . 135
  - Turning the display . . . . . 36
  - Turning the display module . . . . . 36
- U**
- Unit after linearization (Parameter) . . . . . 155
  - Units index (Parameter) . . . . . 193
- V**
- Value (Parameter) . . . . . 193
  - Value 1 display (Parameter) . . . . . 175
  - Value echo lost (Parameter) . . . . . 161
- W**
- W@M Device Viewer . . . . . 113
  - Wizard
    - Define access code . . . . . 184
    - Mapping . . . . . 141
    - Probe length correction . . . . . 166
  - Workplace safety . . . . . 13
  - Write access . . . . . 53
  - Write protection
    - Via access code . . . . . 53
    - Via write protection switch . . . . . 54
  - Write protection switch . . . . . 54



[www.addresses.endress.com](http://www.addresses.endress.com)

---