
01.00.zz (Device firmware)

Products Solutions

Services

Operating Instructions Proline Promag P 100 PROFIBUS DP

Electromagnetic flowmeter

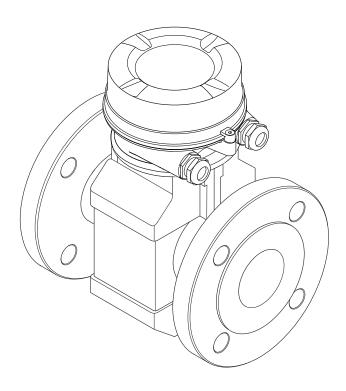



- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

l l.1 l.2	About this document	6 6 6	6.2	Mounting the measuring device	23 23 23 28
	1.2.3 Tool symbols	6	6.3	Post-installation check	
	certain types of information		7	Electrical connection	
1.3 1.4	1.2.5 Symbols in graphics	7 8 8	7.1	Connection conditions	30 30 31 32
		_	7.2	Connecting the measuring device	33
2.1 2.2 2.3 2.4 2.5 2.6	,	9 10	7.3 7.4 7.5	7.2.1 Connecting the transmitter	34 37 37 37 37 38
3	Product description	12	7.6	Post-connection check	
3.1	Product design	12	8 8.1 8.2	Operation options	41
′1	Incoming acceptance and product			menu	42 42
•		L3		8.2.2 Operating philosophy	43
4.1 4.2	Incoming acceptance	13 13 14 15	8.3	Access to the operating menu via the web browser	44 44 45 46
5	Storage and transport 1	L7		8.3.6 Disabling the Web server	48
5.1 5.2	3	17 17 18 18	8.4	8.3.7 Logging out	48 49 49 50 51
ر.ر	rackaging disposal	10	9	System integration	52
ó .1	Installation conditions	L9 19 19	9.1 9.2	Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools	52 52
	6.1.2 Requirements from environment and process	21	7.4	9.2.1 Manufacturer-specific GSD	52

9.3	Cyclic data transmission	53	12.6	Overview of diagnostic information \dots	
	9.3.1 Block model	53		12.6.1 Diagnostic of sensor	
	9.3.2 Description of the modules	54		12.6.2 Diagnostic of electronic	
				12.6.3 Diagnostic of configuration	
10	Commissioning	59		12.6.4 Diagnostic of process	
10.1	Function check	59		Pending diagnostic events	100
10.1	Connecting via FieldCare			Diagnostic list	100
10.2	Configuring the device address via software	59	12.9	Event logbook	101
10.5	10.3.1 PROFIBUS network			12.9.1 Reading out the event logbook	101
10.4	Setting the operating language			12.9.2 Filtering the event logbook	101
10.4	Configuring the measuring device			12.9.3 Overview of information events	101
10.5	10.5.1 Defining the tag name		12.10	Resetting the measuring device	102
	10.5.2 Setting the system units	60		12.10.1 Function scope of the "Device reset"	
	10.5.3 Configuring communication		40.44	parameter	103
	interface	62		Device information	103
	10.5.4 Configuring the local display		12.12	Firmware history	105
	10.5.5 Configuring the analog inputs	64			
	10.5.6 Configuring the low flow cut off		13	Maintenance	106
	10.5.7 Configuring empty pipe detection	66	13.1	Maintenance tasks	106
10.6	Advanced settings	67	13.1	13.1.1 Exterior cleaning	
10.0	10.6.1 Carrying out a sensor adjustment			13.1.2 Interior cleaning	
	10.6.2 Configuring the totalizer			13.1.3 Replacing seals	
	10.6.3 Carrying out additional display	0,	13.2	Measuring and test equipment	
	configurations	69		Endress+Hauser services	106
	10.6.4 Performing electrode cleaning		23.3		
	10.6.5 Using parameters for device	-	17.	Donaira	107
	administration	72		•	107
10.7	Simulation		14.1	General notes	107
10.8	Protecting settings from unauthorized			14.1.1 Repair and conversion concept	
	access	74		14.1.2 Notes for repair and conversion	
	10.8.1 Write protection via access code			Spare parts	107
	10.8.2 Write protection via write protection			Endress+Hauser services	107
	switch	74		Return	
			14.5	Disposal	108
11	Operation	76		14.5.1 Removing the measuring device	
	-			14.5.2 Disposing of the measuring device	108
11.1	Reading the device locking status				
11.2	Reading measured values		15	Accessories	109
	11.2.1 "Process variables" submenu			Device-specific accessories	109
	11.2.2 Totalizer	77	17.1	15.1.1 For the transmitter	109
11.3	Adapting the measuring device to the process			15.1.2 For the dansmitter	
	conditions	78	15.2	Communication-specific accessories	109
11.4	Performing a totalizer reset	78		Service-specific accessories	
				System components	
12	Diagnostics and troubleshooting	80	15.1	System components	110
12.1	General troubleshooting	80	16	Tochnical data	111
12.2	Diagnostic information via light emitting				111
	diodes	81		Application	
	12.2.1 Transmitter			Function and system design	
12.3	Diagnostic information in the Web browser	82		Input	
	12.3.1 Diagnostic options			Output	112
	12.3.2 Calling up remedy information			Power supply	
12.4	Diagnostic information in DeviceCare or			Performance characteristics	115
	FieldCare	83		Installation	116
	12.4.1 Diagnostic options			Environment	117
	12.4.2 Calling up remedy information			Process	118
12.5	Adapting the diagnostic information	84		Mechanical construction	120
	12.5.1 Adapting the diagnostic behavior	84	16.11	Operability	124

Index		130
16.15	Supplementary documentation	128
16.14	Accessories	128
16.13	Application packages	127
16.12	Certificates and approvals	126

1 About this document

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning	
▲ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.	
A WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.	
▲ CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.	
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.	

1.2.2 Electrical symbols

Symbol	Meaning	
	Direct current	
~	Alternating current	
$\overline{\sim}$	Direct current and alternating current	
-	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.	
Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.		
	The ground terminals are situated inside and outside the device: Inner ground terminal: Connects the protectiv earth to the mains supply. Outer ground terminal: Connects the device to the plant grounding system.	

1.2.3 Tool symbols

Symbol	Meaning
06	Allen key
Ŕ	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning	
✓	Permitted Procedures, processes or actions that are permitted.	
✓ ✓	Preferred Procedures, processes or actions that are preferred.	
X	Forbidden Procedures, processes or actions that are forbidden.	
i	Tip Indicates additional information.	
<u> </u>	Reference to documentation.	
A	Reference to page.	
	Reference to graphic.	
•	Notice or individual step to be observed.	
1., 2., 3	Series of steps.	
L	Result of a step.	
?	Help in the event of a problem.	
	Visual inspection.	

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C, Sections	
EX	Hazardous area
Safe area (non-hazardous area)	
≋➡	Flow direction

1.3 Documentation

- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.
- For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device.
	 Incoming acceptance and product identification Storage and transport Installation
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value).
	 Product description Installation Electrical connection Operation options System integration Commissioning Diagnostic information
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

Microsoft®

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- Follow the instructions in this manual.

2.2 Designated use

Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids with a minimum conductivity of 5 μ S/cm.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ► Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ► Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section → 🖺 7.
- ► Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

A WARNING

Danger of breakage due to corrosive or abrasive fluids!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ► Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

A WARNING

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

► For elevated fluid temperatures, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

► Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

3 Product description


The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

3.1.1 Device version with PROFIBUS DP communication type

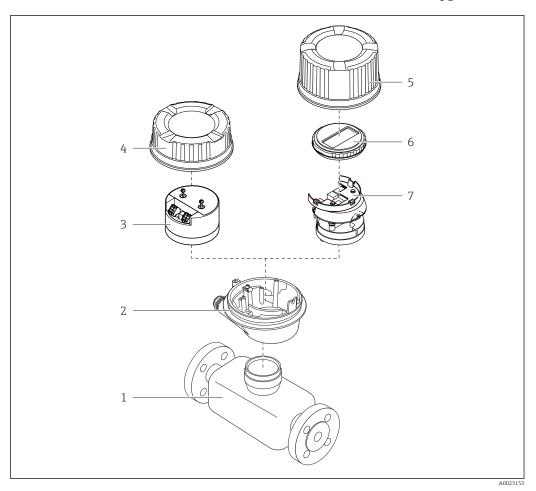


■ 1 Important components of a measuring device

- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover
- 5 Transmitter housing cover (version for optional onsite display)
- 6 Onsite display (optional)
- 7 Main electronics module (with bracket for optional onsite display)

4 Incoming acceptance and product identification

4.1 Incoming acceptance

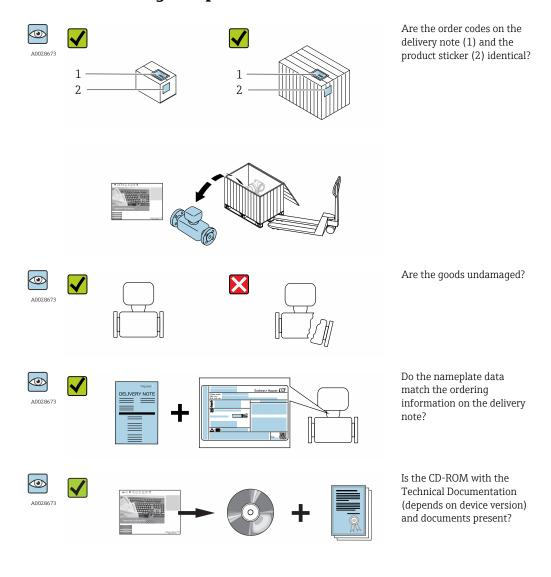

- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
 - Depending on the device version, the CD-ROM might not be part of the delivery!
 The Technical Documentation is available via the Internet or via the Endress+Hauser Operations App, see the "Product identification" section → 14.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" \rightarrow \blacksquare 8 and "Supplementary device-dependent documentation" \rightarrow \blacksquare 8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.


4.2.1 Transmitter nameplate

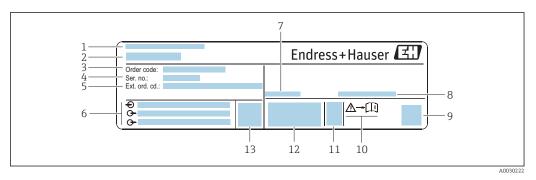

■ 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature (T_a)
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

4.2.2 Sensor nameplate

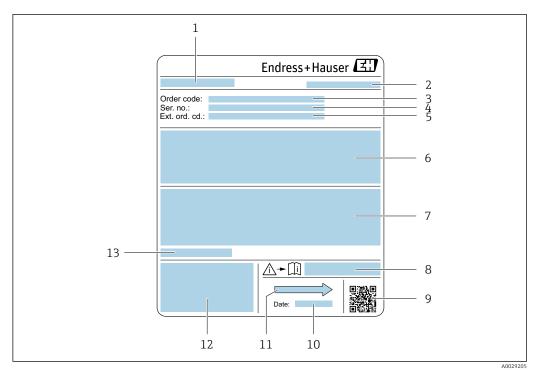

■ 3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Flow; nominal diameter of the sensor; pressure rating; nominal pressure; system pressure; fluid temperature range; material of liner and electrodes
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Document number of safety-related supplementary documentation $\Rightarrow riangleq 128$
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Flow direction
- 12 CE mark, C-Tick
- 13 Permitted ambient temperature (T_a)

🚹 Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
Δ	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
[ji	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ► Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ► Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- ▶ Store in a dry and dust-free place.
- ► Do not store outdoors.

Storage temperature→ 🖺 117

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

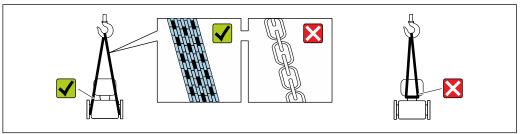

A002925

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ► Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

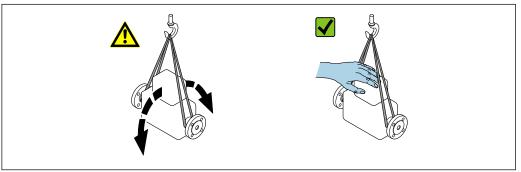

A002921

5.2.2 Measuring devices with lifting lugs

A CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.


5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

A CAUTION

Risk of damaging the magnetic coil

- ► If transporting by forklift, do not lift the sensor by the metal casing.
- ▶ This would buckle the casing and damage the internal magnetic coils.

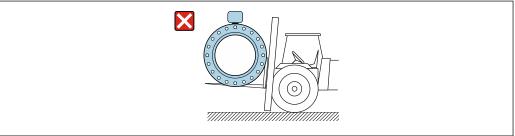

A0029319

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - $\,$ Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.

or


- Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

Installation 6

6.1 **Installation conditions**

6.1.1 Mounting position


Mounting location

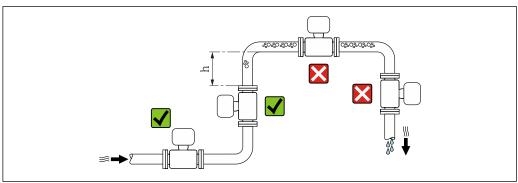

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h \ge 2 \times DN$

Installation in down pipes


Install a siphon with a vent valve downstream of the sensor in down pipes whose length h \geq 5 m (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.




- € 4 Installation in a down pipe
- Vent valve
- 2 Pipe siphon
- Length of down pipe

Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

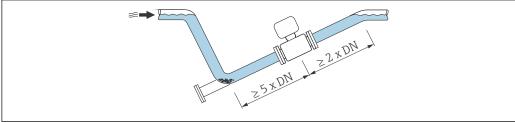

For heavy sensors $DN \ge 350 (14")$

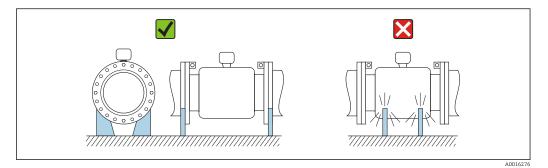

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientation		
A	Vertical orientation	A0015591	
В	Horizontal orientation, transmitter at top	A0015589	✓ ✓ 1)
С	Horizontal orientation, transmitter at bottom	A0015590	√ √ ²⁾ 3)
D	Horizontal orientation, transmitter at side	A0015592	×

- Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.
- To prevent the electronics module from overheating in the case of a sharp rise in temperature (e.g. CIP- or SIP processes), install the device with the transmitter component pointing downwards.

Horizontal

- Ideally, the measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as
 otherwise there is no guarantee that the empty pipe detection function will actually
 respond to a partially filled or empty measuring tube.

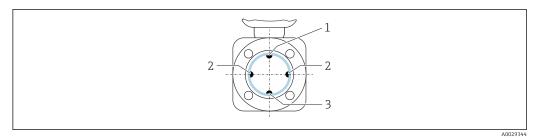


1 EPD electrode for empty pipe detection

- 2 Measuring electrodes for signal detection
- 3 Reference electrode for potential equalization

Measuring devices with tantalum or platinum electrodes can be ordered without an EPD electrode. In this case, empty pipe detection is performed via the measuring electrodes.


Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows. Observe the following inlet and outlet runs to comply with accuracy specifications:

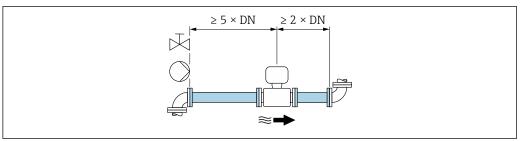

A0028997

Order code for "Design", option A "Insertion length short, ISO/DVGW until DN400, DN450-2000 1:1" and order code for "Design", option B "Insertion length long, ISO/DVGW until DN400, DN450-2000 1:1.3"



A0032859

■ 6 Order code for "Design", option C "Insertion length short ISO/DVGW until DN300, w/o inlet and outlet runs, constricted meas.tube"

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

6.1.2 Requirements from environment and process

Ambient temperature range


Transmitter $-40 \text{ to } +60 ^{\circ}\text{C} (-40 \text{ to } +140 ^{\circ}\text{F})$	
Local display	-20 to $+60$ °C (-4 to $+140$ °F), the readability of the display may be impaired at temperatures outside the temperature range.

Sensor	 Process connection material, carbon steel: 10 to +60 °C (+14 to +140 °F) Process connection material, stainless steel: 40 to +60 °C (-40 to +140 °F)
Liner	Do not exceed or fall below the permitted temperature range of the liner .

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

System pressure




A0028777

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.

- Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.
- Information on the liner's resistance to partial vacuum → 🗎 118

 - Information on the vibration resistance of the measuring system \rightarrow 🗎 117

Vibrations

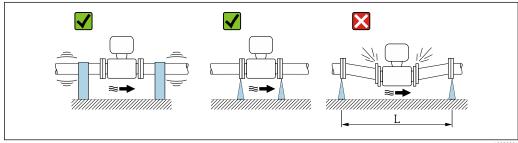

A0029004

 \blacksquare 7 Measures to avoid device vibrations (L > 10 m (33 ft))

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

Information on the shock resistance of the measuring system → □ 117
 Information on the vibration resistance of the measuring system → □ 117


Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.

- The nomogram only applies to liquids with a viscosity similar to that of water.
- 1. Calculate the ratio of the diameters d/D.

22

2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

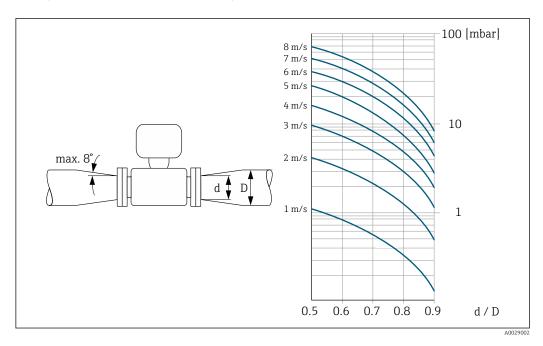

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the sensor

A WARNING

Danger due to improper process sealing!

- ► Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ► Ensure that the gaskets are clean and undamaged.
- ► Install the gaskets correctly.
- 1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
- 2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
- 3. If using ground disks, comply with the Installation Instructions provided.
- 4. Observe required screw tightening torques $\rightarrow \triangleq 24$.

5. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

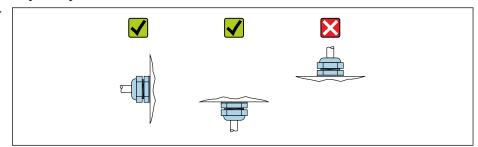

Mounting the seals

A CAUTION

An electrically conductive layer could form on the inside of the measuring tube! Risk of measuring signal short circuit.

▶ Do not use electrically conductive sealing compounds such as graphite.

Comply with the following instructions when installing seals:

- 1. When mounting the process connections, make sure that the seals concerned are clean and centered correctly.
- 2. For DIN flanges: only use seals according to DIN EN 1514-1.
- 3. For "PFA" lining: generally additional seals are **not** required.
- 4. For "PTFE" lining: generally additional seals are **not** required.

Mounting the ground cable/ground disks

Comply with the information on potential equalization and detailed mounting instructions for the use of ground cables/ground disks .

Screw tightening torques

Please note the following:

- The screw tightening torques listed below apply only to lubricated threads and to pipes not subjected to tensile stress.
- Tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.

Screw tightening torques for EN 1092-1 (DIN 2501), PN 10/16/25/40

Nominal diameter	Pressure rating	Screws	Flange thickness	Max. screw tightening torque [Nm]	
[mm]	[bar]	[mm]	[mm]	PTFE	PFA
15	PN 40	4 × M12	16	11	-
25	PN 40	4 × M12	18	26	20
32	PN 40	4 × M16	18	41	35
40	PN 40	4 × M16	18	52	47
50	PN 40	4 × M16	20	65	59
65 ¹⁾	PN 16	8 × M16	18	43	40
65	PN 40	8 × M16	22	43	40
80	PN 16	8 × M16	20	53	48
80	PN 40	8 × M16	24	53	48
100	PN 16	8 × M16	20	57	51

Nominal diameter	Pressure rating	Screws	Flange thickness	Max. screw tightening torqu [Nm]	
[mm]	[bar]	[mm]	[mm]	PTFE	PFA
100	PN 40	8 × M20	24	78	70
125	PN 16	8 × M16	22	75	67
125	PN 40	8 × M24	26	111	99
150	PN 16	8 × M20	22	99	85
150	PN 40	8 × M24	28	136	120
200	PN 10	8 × M20	24	141	101
200	PN 16	12 × M20	24	94	67
200	PN 25	12 × M24	30	138	105
250	PN 10	12 × M20	26	110	-
250	PN 16	12 × M24	26	131	-
250	PN 25	12 × M27	32	200	-
300	PN 10	12 × M20	26	125	-
300	PN 16	12 × M24	28	179	-
300	PN 25	16 × M27	34	204	-
350	PN 10	16 × M20	26	188	-
350	PN 16	16 × M24	30	254	-
350	PN 25	16 × M30	38	380	-
400	PN 10	16 × M24	26	260	-
400	PN 16	16 × M27	32	330	-
400	PN 25	16 × M33	40	488	-
450	PN 10	20 × M24	28	235	-
450	PN 16	20 × M27	40	300	-
450	PN 25	20 × M33	46	385	-
500	PN 10	20 × M24	28	265	-
500	PN 16	20 × M30	34	448	-
500	PN 25	20 × M33	48	533	-
600	PN 10	20 × M27	28	345	_
600 ¹⁾	PN 16	20 × M33	36	658	-
600	PN 25	20 × M36	58	731	-

¹⁾ Designed acc. to EN 1092-1 (not to DIN 2501)

Screw tightening torques for EN 1092-1 (DIN 2501), PN 10/16/25, P245GH/stainless; calculated according to EN 1591-1:2014 for flanges as per EN 1092-1:2013

Nominal diameter	Pressure rating	Screws	Flange thickness	Nom. screw tightening torque [Nm]
[mm]	[bar]	[mm]	[mm]	PTFE
350	PN 10	16 × M20	26	60
350	PN 16	16 × M24	30	115
350	PN 25	16 × M30	38	220
400	PN 10	16 × M24	26	90
400	PN 16	16 × M27	32	155

Nominal diameter	Pressure rating	Screws	Flange thickness	Nom. screw tightening torque [Nm]
[mm]	[bar]	[mm]	[mm]	PTFE
400	PN 25	16 × M33	40	290
450	PN 10	20 × M24	28	90
450	PN 16	20 × M27	34	155
450	PN 25	20 × M33	46	290
500	PN 10	20 × M24	28	100
500	PN 16	20 × M30	36	205
500	PN 25	20 × M33	48	345
600	PN 10	20 × M27	30	150
600	PN 16	20 × M33	40	310
600	PN 25	20 × M36	48	500

Screw tightening torques for ASME B16.5, Class 150/300

Nominal	diameter	Pressure rating	Screws	Max. screw tightening torque [Nm ([lbf · ft])	
[mm]	[in]	[psi]	[in]	PTFE	PFA
15	1/2	Class 150	4 × ½	6 (4)	- (-)
15	1/2	Class 300	4 × ½	6 (4)	- (-)
25	1	Class 150	4 × ½	11 (8)	10 (7)
25	1	Class 300	4 × 5/8	14 (10)	12 (9)
40	1 ½	Class 150	4 × ½	24 (18)	21 (15)
40	1 ½	Class 300	4 × 3/4	34 (25)	31 (23)
50	2	Class 150	4 × 5/8	47 (35)	44 (32)
50	2	Class 300	8 × 5/8	23 (17)	22 (16)
80	3	Class 150	4 × 5/8	79 (58)	67 (49)
80	3	Class 300	8 × ¾	47 (35)	42 (31)
100	4	Class 150	8 × 5/8	56 (41)	50 (37)
100	4	Class 300	8 × ¾	67 (49)	59 (44)
150	6	Class 150	8 × ¾	106 (78)	86 (63)
150	6	Class 300	12 × ¾	73 (54)	67 (49)
200	8	Class 150	8 × ¾	143 (105)	109 (80)
250	10	Class 150	12 × 7/8	135 (100)	- (-)
300	12	Class 150	12 × 7/8	178 (131)	- (-)
350	14	Class 150	12 × 1	260 (192)	- (-)
400	16	Class 150	16 × 1	246 (181)	- (-)
450	18	Class 150	16 × 1 1/8	371 (274)	- (-)
500	20	Class 150	20 × 1 1/8	341 (252)	- (-)
600	24	Class 150	20 × 1 ¼	477 (352)	- (-)

Screw tightening torques for JIS B2220, 10/20K

Nominal diameter	Pressure rating	Screws	Max. screw tighte	ening torque [Nm]
[mm]	[bar]	[mm]	PTFE	PFA
25	10K	4 × M16	32	27
25	20K	4 × M16	32	27
32	10K	4 × M16	38	-
32	20K	4 × M16	38	-
40	10K	4 × M16	41	37
40	20K	4 × M16	41	37
50	10K	4 × M16	54	46
50	20K	8 × M16	27	23
65	10K	4 × M16	74	63
65	20K	8 × M16	37	31
80	10K	8 × M16	38	32
80	20K	8 × M20	57	46
100	10K	8 × M16	47	38
100	20K	8 × M20	75	58
125	10K	8 × M20	80	66
125	20K	8 × M22	121	103
150	10K	8 × M20	99	81
150	20K	12 × M22	108	72
200	10K	12 × M20	82	54
200	20K	12 × M22	121	88
250	10K	12 × M22	133	-
250	20K	12 × M24	212	-
300	10K	16 × M22	99	-
300	20K	16 × M24	183	-

Screw tightening torques for JIS B2220, 10/20K

Nominal diameter	Pressure rating	Screws	Nom. screw tightening torque [Nm]	
[mm]	[bar]	[mm]	PUR	HG
350	10K	16 × M22	109	109
350	20K	16 × M30×3	217	217
400	10K	16 × M24	163	163
400	20K	16 × M30×3	258	258
450	10K	16 × M24	155	155
450	20K	16 × M30×3	272	272
500	10K	16 × M24	183	183
500	20K	16 × M30×3	315	315
600	10K	16 × M30	235	235
600	20K	16 × M36×3	381	381
700	10K	16 × M30	300	300
750	10K	16 × M30	339	339

Screw tightening torques for AS 2129, Table E

Nominal diameter	Screws	Max. screw tightening torque [Nm]
[mm]	[mm]	PTFE
25	4 × M12	21
50	4 × M16	42

Screw tightening torques for AS 4087, PN 16


Nominal diameter	Screws	Max. screw tightening torque [Nm]
[mm]	[mm]	PTFE
50	4 × M16	42

6.2.4 Turning the display module

The local display is only available with the following device version: Order code for "Display; Operation", option ${\bf B}$: 4-line; lit, via communication

The display module can be turned to optimize display readability.

Aluminum housing version, AlSi10Mg, coated

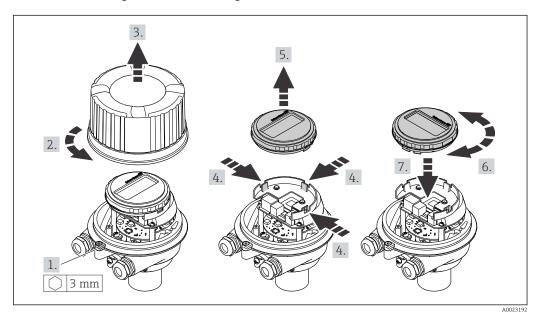

6.3 Post-installation check

Is the device undamaged (visual inspection)?	
Does the measuring device conform to the measuring point specifications?	
For example: Process temperature Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range	

 Has the correct orientation for the sensor been selected? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids) 		
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ?		
Are the measuring point identification and labeling correct (visual inspection)?		
Is the device adequately protected from precipitation and direct sunlight?		
Have the fixing screws been tightened with the correct tightening torque?		

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ► For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 16 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable

Standard installation cable is sufficient.

Signal cable

PROFIBUS DP

The IEC 61158 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A	
Characteristic impedance	135 to 165 Ω at a measuring frequency of 3 to 20 MHz	
Cable capacitance	< 30 pF/m	
Wire cross-section	> 0.34 mm ² (22 AWG)	
Cable type	Twisted pairs	
Loop resistance	≤110 Ω/km	
Signal damping	Max. 9 dB over the entire length of the cable cross-section	
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.	

Cable diameter

- Cable glands supplied: $M20 \times 1.5$ with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring terminals: Wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

7.1.3 Terminal assignment

Transmitter

PROFIBUS DP connection version



For use in the non-hazardous area and Zone 2/Div. 2


Order code for "Output", option L

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code	Connection me	thods available	Descible autions for order and	
"Housing"	Output Power supply		Possible options for order code "Electrical connection"	
Option A	Terminals	Terminals	 Option A: coupling M20x1 Option B: thread M20x1 Option C: thread G ½" Option D: thread NPT ½" 	
Option A	Device plugs → 🖺 32	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20	
Option A	Device plugs → 🗎 32	Device plugs → 🖺 32	Option Q : 2 x plug M12x1	
Order code for "Hou	eina":	•		

Order code for "Housing":

Option A: compact, coated aluminum

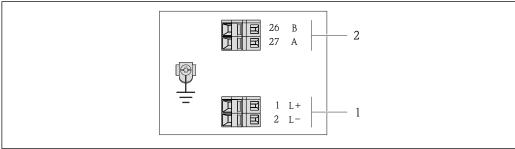

- ₽8 PROFIBUS DP terminal assignment
- Power supply: DC 24 V
- PROFIBUS DP

	Terminal number			
Order code	Power	supply	Output	
"Output"	2 (L-)	1 (L+)	26 (RxD/TxD-P)	27 (RxD/TxD- N)
Option L	DC :	24 V	В	A
Order code for "Output":				

Option L: PROFIBUS DP, for use in non-hazardous areas and Zone 2/Div. 2

7.1.4 Pin assignment, device plug

Supply voltage

For use in the non-hazardous area and Zone 2/Div. 2.

2	Pin	Assignment	
	1	L+	DC 24 V
3 0 0 0 1	2		Not assigned
	3		Not assigned
5	4	L-	DC 24 V
4 A0016809	5		Grounding/shielding
	Coding		Plug/socket
	A	A	Plug

Device plug for signal transmission (device side)

2	Pin		Assignment
	1		Not assigned
$1 \longrightarrow 0 \longrightarrow 3$	2	A	PROFIBUS DP
	3		Not assigned
5	4	В	PROFIBUS DP
4 A0016811	5		Grounding/shielding
	Coding		Plug/socket
	I	3	Socket

7.1.5 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands:
 Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands: Observe requirements for connecting cables → 🗎 30.

7.2 Connecting the measuring device

NOTICE


Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.
- ► The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:


- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

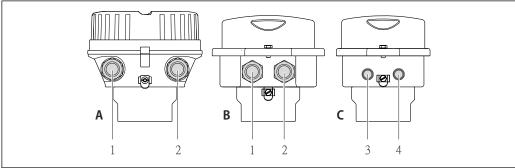

A001692

• 9 Housing versions and connection versions

- A Compact, coated aluminum
- B Compact hygienic, stainless or compact, stainless
- 1 Cable entry or device plug for signal transmission
- 2 Cable entry or device plug for supply voltage
- C Ultra-compact hygienic, stainless or ultra-compact, stainless
- 3 Device plug for signal transmission
- 4 Device plug for supply voltage

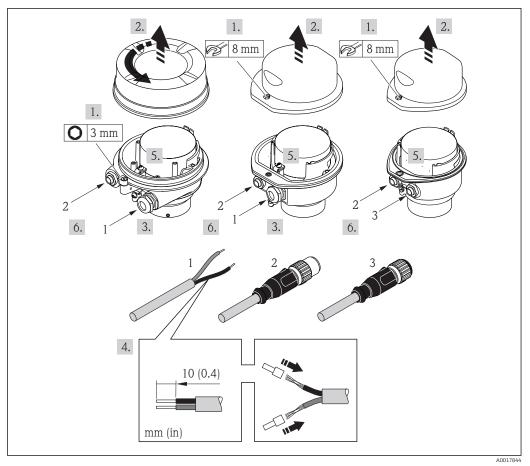

■ 10 Device versions with connection examples

- 1 Cable
- 2 Device plug for signal transmission
- 3 Device plug for supply voltage
- Depending on the housing version disconnect the local display from the main electronics module: Operating Instructions for the device .
- ► Connect the cable in accordance with the terminal assignment or the device plug pin assignment .

7.2.2 Ensure potential equalization

Requirements


A CAUTION

Electrode damage can result in the complete failure of the device!

- ► Same electrical potential for the medium and sensor
- ► Company-internal grounding concepts
- ▶ Pipe material and grounding
- For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

Connection example, standard scenario

Metal, grounded pipe

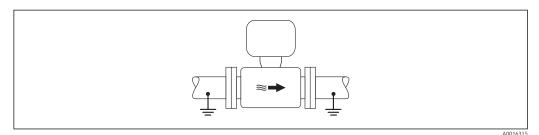

■ 11 Potential equalization via measuring tube


Connection example in special situations

Unlined and ungrounded metal pipe

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

Ground cable Copper wire, at least 6 mm² (0.0093 in²)

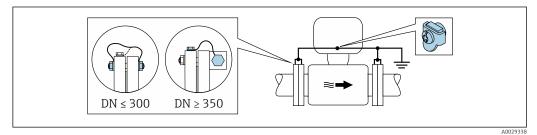

Potential equalization via ground terminal and pipe flanges


- 1. Connect both sensor flanges to the pipe flange via a ground cable and ground them.
- 2. If DN \leq 300 (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws.
- 3. If DN ≥ 350 (14"): Mount the ground cable directly on the metal transport bracket. Observe screw tightening torques: see the Sensor Brief Operating Instructions.
- 4. Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose.

Plastic pipe or pipe with insulating liner

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

Ground cable	Copper wire, at least 6 mm^2 (0.0093 in^2)
--------------	---

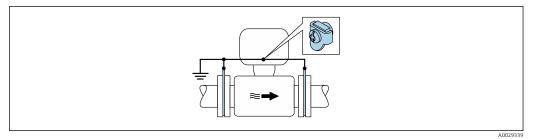

■ 13 Potential equalization via ground terminal and ground disks


- 1. Connect the ground disks to the ground terminal via the ground cable.
- 2. Connect the ground disks to ground potential.

Pipe with a cathodic protection unit

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

Ground cable Copper wire, at least 6 mm² (0.0093 in²)

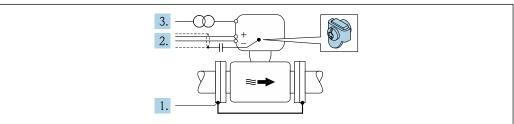

A0029340


Prerequisite: The sensor is installed in the pipe in a way that provides electrical insulation.

- 1. Connect the two flanges of the pipe to one another via a ground cable.
- 2. Guide the shield of the signal lines through a capacitor.
- 3. Connect the measuring device to the power supply such that it is floating in relation to the protective ground (isolation transformer).

7.3 Special connection instructions

7.3.1 Connection examples

PROFIBUS DP

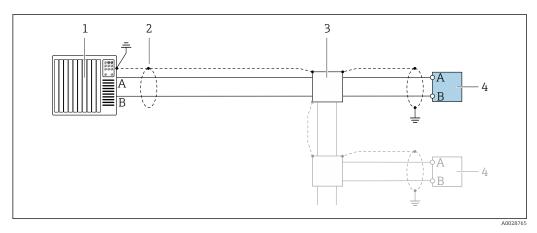

🛮 14 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2

- 1 Control system (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Transmitter

If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


7.4 Hardware settings

7.4.1 Setting the device address

PROFIBUS DP

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

Setting the address

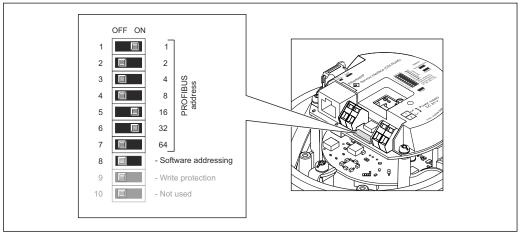

A0021265

- 15 Addressing using DIP switches on the I/O electronics module
- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary → 125.
- 3. Disable software addressing via DIP switch 8 (OFF).
- 4. Set the desired device address via the corresponding DIP switches.
 - Example $\rightarrow \blacksquare$ 15, \blacksquare 38: 1 + 16 + 32 = device address 49


 The device demands rebooting after 10 s. After rebooting, hardware addressing is enabled with the configured IP address.
- 5. Reverse the removal procedure to reassemble the transmitter.

7.4.2 Enabling the terminating resistor

PROFIBUS DP

To avoid incorrect communication transmission caused by impedance mismatch, terminate the PROFIBUS DP cable correctly at the start and end of the bus segment.

- If the device is operated with a baud rate of 1.5 MBaud and under: For the last transmitter on the bus, terminate via DIP switch 2 (bus termination) and DIP switch 1 and 3 (bus polarization). Setting: ON − ON − ON → ■ 16, ■ 39.
- For baud rates > 1.5 MBaud:
 Due to the capacitance load of the user and the line reflections generated as a result, ensure that an external bus terminator is used.
- It is generally advisable to use an external bus terminator as the entire segment can fail if a device that is terminated internally is defective.

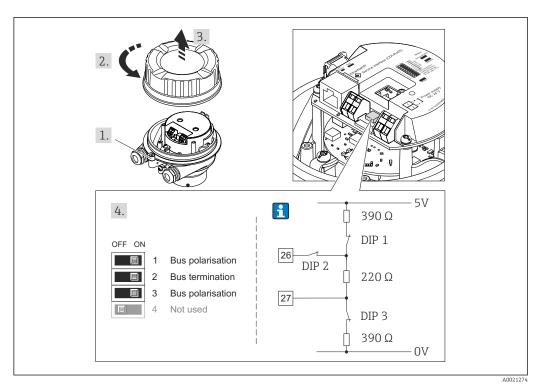


 \blacksquare 16 Termination using DIP switches on the I/O electronics module (for baud rates < 1.5 MBaud)

7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:
 Route the cable so that it loops down before the cable entry ("water trap").

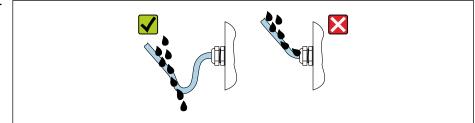

A002927

6. Insert dummy plugs into unused cable entries.


7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used meet the requirements→ 🖺 30?	
Do the cables have adequate strain relief?	

Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	0
Depending on the device version: are all the device plugs firmly tightened ?	
Does the supply voltage match the specifications on the transmitter nameplate $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Is the terminal assignment \rightarrow $\ \ \ \ \ \ \ \ $	
If supply voltage is present, is the power LED on the electronics module of the transmitter lit green \rightarrow $\stackrel{ riangle}{=}$ 12?	
Is the potential equalization established correctly ?	
Depending on the device version, is the securing clamp or fixing screw firmly tightened?	

8 Operation options

8.1 Overview of operating options

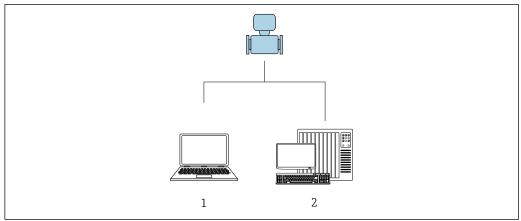


A0017760

- 1 Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- 2 Automation system, e.g. "RSLogix" (Rockwell Automation) and work station for measuring device operation with Add-on Profile Level 3 for "RSLogix 5000" software (Rockwell Automation)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device

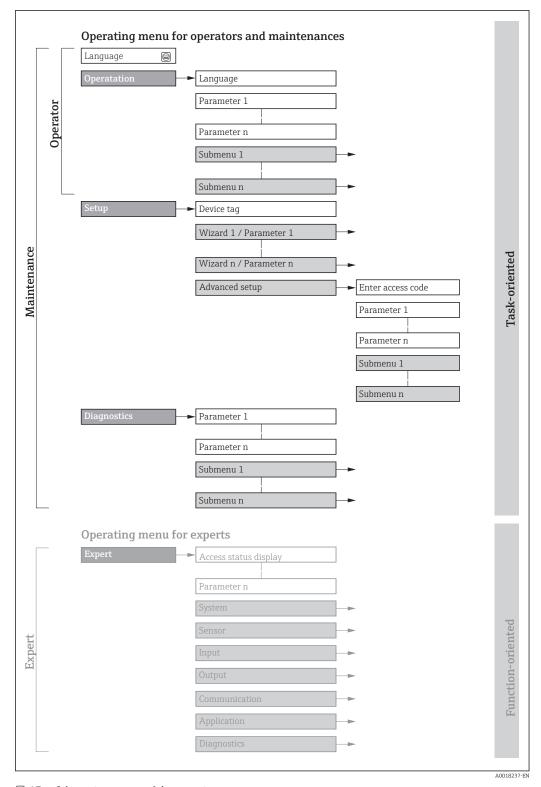

 \blacksquare 17 Schematic structure of the operating menu

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: Configuring the operational	 Defining the operating language Defining the Web server operating language Resetting and controlling totalizers
Operation		display Reading measured values	 Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: Configuration of the measurement	Submenus for fast commissioning: Set the system units Configuring the operational display Set the low flow cut off Empty pipe detection Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configuration of electrode cleaning (optional) Configure the WLAN settings
Diagnostics		"Maintenance" role Fault elimination: Diagnostics and elimination of process and device errors Measured value simulation	 Administration (define access code, reset measuring device) Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Analog inputs Is used to display the analog input. Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Communication Configuration of the digital communication interface and the Web server. Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks. Application Configure the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the web browser

8.3.1 **Function range**

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) . In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.



For additional information on the Web server, refer to the Special Documentation for the device \rightarrow \blacksquare 129

8.3.2 **Prerequisites**

Computer hardware

Interface	The computer must have an RJ45 interface.	
Connection	Standard Ethernet cable with RJ45 connector.	
Screen	Recommended size: ≥12" (depends on the screen resolution)	

Computer software

Recommended operating systems	Microsoft Windows 7 or higher. Microsoft Windows XP is supported.
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari

Computer settings

User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).	
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .	
JavaScript	JavaScript must be enabled.	
	If JavaScript cannot be enabled: enter http://XXX.XXX.XXX/basic.html in the address line of the Web browser, e.g. http://192.168.1.212/basic.html. A fully functional but simplified version of the operating menu structure starts in the Web browser.	
Network connections	Only the active network connections to the measuring device should be used.	
	Switch off all other network connections such as WLAN.	

In the event of connection problems: $\rightarrow \triangleq 80$

Measuring device: Via CDI-RJ45 service interface

CDI-RJ45 service interface	
The measuring device has an RJ45 interface.	
Web server must be enabled; factory setting: ON For information on enabling the Web server → 48	

8.3.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)


- 1. Switch on the measuring device.
- 2. Connect to the computer using a cable $\rightarrow \triangleq 125$.
- 3. If a 2nd network card is not used, close all the applications on the notebook.
 - Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- **5.** Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213	
Subnet mask	255.255.255.0	
Default gateway	192.168.1.212 or leave cells empty	

Starting the Web browser

1. Start the Web browser on the computer.

- 2. Enter the IP address of the Web server in the address line of the Web browser: 192.168.1.212
 - ► The login page appears.

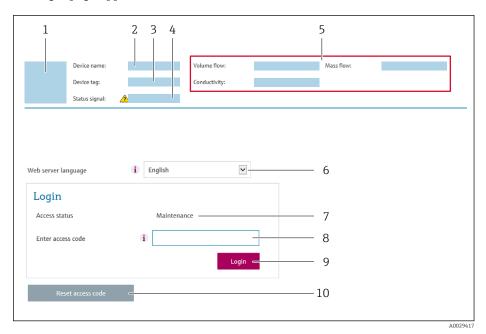

- Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code


8.3.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.3.5 User interface

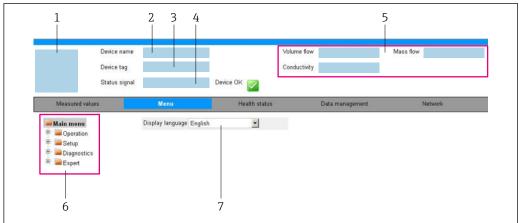

A0032879

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Navigation area
- 7 Local display language

Header

The following information appears in the header:

- Device tag
- Device status with status signal \rightarrow 🖺 82
- Current measured values

Function row

Functions	Meaning		
Measured values	Displays the measured values of the measuring device		
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the operating tools For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device 		
Device status	Displays the diagnostic messages currently pending, listed in order of priority		
Data management	Data exchange between PC and measuring device: ■ Device configuration: — Load settings from the device (XML format, save configuration) — Save settings to the device (XML format, restore configuration) ■ Logbook - Export Event logbook (.csv file) ■ Documents - Export documents: — Export backup data record (.csv file, create documentation of the measuring point configuration) — Verification report (PDF file, only available with the "Heartbeat Verification" application package) ■ File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: PROFIBUS DP: GSD file		
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: Network settings (e.g. IP address, MAC address) Device information (e.g. serial number, firmware version)		
Logout	End the operation and call up the login page		

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.3.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	■ Off ■ On	On

Function scope of the "Web server functionality" parameter

Option	Description
Off	The web server is completely disabled.Port 80 is locked.
On	 The complete functionality of the web server is available. JavaScript is used. The password is transferred in an encrypted state. Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.3.7 Logging out


- Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.
- 1. Select the **Logout** entry in the function row.
 - ► The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

8.4 Access to the operating menu via the operating tool

8.4.1 Connecting the operating tool

Via PROFIBUS DP network


This communication interface is available in device versions with PROFIBUS DP.

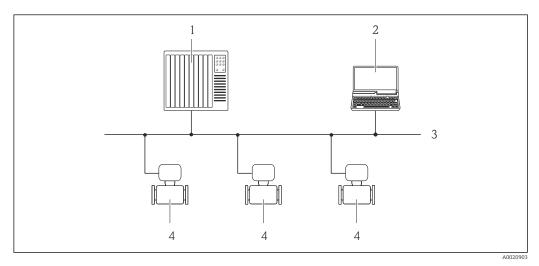

■ 18 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

Via service interface (CDI)

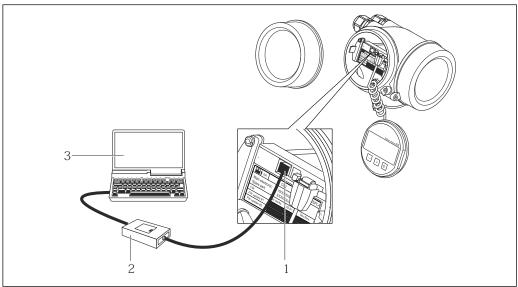


A001401

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- ${\it 3} \quad \textit{Computer with FieldCare operating tool with COM DTM CDI Communication FXA291}$

Via service interface (CDI-RJ45)

PROFIBUS DP

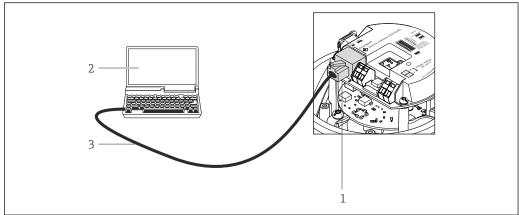

A0021270

Connection for order code for "Output", option L: PROFIBUS DP

- 1 Service interface (CDI -RJ45) of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

8.4.2 FieldCare

Function scope


FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

CDI-RJ45 service interface

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



Source for device description files


See information $\rightarrow \implies 52$

Establishing a connection

- 1. Start FieldCare and launch the project.
- 2. In the network: Add a device.
 - ► The **Add device** window opens.
- 3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
- 4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
- 5. Select the desired device from the list and press **OK** to confirm.
 - The **CDI Communication TCP/IP (Configuration)** window opens.
- 6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known.

- 7. Establish the online connection to the device.
- For additional information, see Operating Instructions BA00027S and BA00059S

User interface

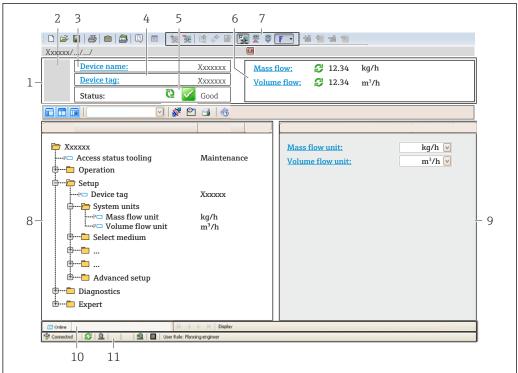

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal→ 🖺 82
- 6 Display area for current measured values
- Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.4.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

For details, see Innovation Brochure IN01047S

Source for device description files

See information \rightarrow \blacksquare 52

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	 On the title page of the Operating instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	10.2014	
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device type ID	0x1560	Device type Diagnostics → Device information → Device type
Profile version	3.02	

For an overview of the different firmware versions for the device

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions	
FieldCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser) 	
DeviceCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser) 	

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.0 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking two different GSD versions are possible with Profile 3.0 and higher.

- Before configuring, the user must decide which GSD should be used to operate the system.
 - The setting can be changed via a Class 2 master.

9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS DP	0x1561	EH3x1561.gsd

The fact that the manufacturer-specific GSD should be used is specified in the **Ident number selector** parameter by selecting the **Manufacturer** option.

i

Where to acquire the manufacturer-specific GSD:

www.endress.com → Download Area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels
0x9740	1 Analog Input1 Totalizer	Channel Analog Input: volume flowChannel totalizer: volume flow
0x9741	2 Analog Input1 Totalizer	 Channel Analog Input 1: volume flow Channel Analog Input 2: mass flow Channel totalizer: volume flow
0x9742	3 Analog Input1 Totalizer	 Channel Analog Input 1: volume flow Channel Analog Input 2: mass flow Channel Analog Input 3: corrected volume flow Channel totalizer: volume flow

The Profile GSD that is to be used is specified in the **Ident number selector** parameter by selecting the **Profile 0x9740** option, **Profile 0x9741** option or **Profile 0x9742** option.

9.3 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.3.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system etc.

	Measuring device				Control system
	Analog Input block 1 to 4	→ 🖺 54	Output value AI	\rightarrow	
			Output value TOTAL	\rightarrow	
	Totalizer block 1 to 3	→ 🖺 55	Controller SETTOT	←	
Transducer			Configuration MODETOT	←	
Block	Analog Output block 1 to 2	→ 🖺 57	Input values AO	+	PROFIBUS DP
	Discrete Input block 1 to 2	→ 🖺 57	Output values DI	\rightarrow	
	Discrete Output block 1 to 2	→ 🖺 58	Input values DO	+	

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
14	AI	Analog Input block 1 to 4
5	TOTAL or	Totalizer block 1
6	SETTOT_TOTAL or SETOT MODETOT TOTAL	Totalizer block 2
7		Totalizer block 3
89	AO	Analog Output block 1 to 2
1011	DI	Discrete Input block 1 to 2
1213	DO	Discrete Output block 1 to 2

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. If this results in gaps between the configured modules, these gaps must be assigned to the EMPTY MODULE.

9.3.2 Description of the modules



The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS Master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Four Analog Input blocks are available (slot 1 to 4).

Selection: input variable

The input variable can be specified using the CHANNEL parameter.

CHANNEL	Input variable	
33122	Volume flow	
32961	Mass flow	
33093	Corrected volume flow	
708	Flow velocity	
1132	Conductivity	
1407	Corrected conductivity	
33101	Temperature	
1042	Electronic temperature	

Factory setting

Function block	Factory setting	
AI 1	Volume flow	
AI 2	Mass flow	
AI 3	Corrected volume flow	
AI 4	Flow velocity	

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number (II		EEE 754)	Status

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

A selected totalizer value, along with the status, is cyclically transmitted to a PROFIBUS Master (Class 1) via the TOTAL module. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three Totalizer blocks are available (slot 5 to 7).

Selection: totalizer value

The totalizer value can be specified using the CHANNEL parameter.

CHANNEL	Input variable	
33122	Volume flow	
32961	Mass flow	
33093	Corrected volume flow	

Factory setting

Function block	Factory setting: TOTAL
Totalizer 1, 2 and 3	Volume flow

Data structure

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (I		EEE 754)	Status	

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 5 to 7).

Selection: control totalizer

CHANNEL	Value SETTOT	Control totalizer
33310	0	Totalize
33046	1	Resetting
33308	2	Adopt totalizer initial setting

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

Data structure

Output data of SETTOT

	Byte 1	
(Control variable 1	

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	ed value: floating	point number (IE	EEE 754)	Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 5 to 7).

Selection: totalizer configuration

CHANNEL	MODETOT value	Totalizer configuration
33306	0	Balancing
33028	1	Balance the positive flow
32976	2	Balance the negative flow
32928	3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

Data structure

Output data of SETTOT and MODETOT

Byte 1	Byte 2
Control variable 1: SETTOT	Control variable 2: MODETOT

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	d value: floating	point number (IE	EEE 754)	Status

AO module (Analog Output)

Transmit a compensation value from the PROFIBUS master (Class 1) to the measuring device.

A compensation value, along with the status, is cyclically transmitted from the PROFIBUS Master (Class 1) to the measuring device via the AO module. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Two Analog Output blocks are available (slot 8 to 9).

Assigned compensation values

A compensation value is permanently assigned to the individual Analog Output blocks.

CHANNEL	Function block	Compensation value
731	AO 1	External density
307	AO 2	External temperature 1)

1) The compensation variables must be transmitted to the device in the SI basic unit



The selection is made via: Expert \rightarrow Sensor \rightarrow External compensation

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	ed value: floating	point number (IE	EEE 754)	Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS Master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 10 to 11).

Selection: device function

The device function can be specified using the CHANNEL parameter.

CHANNEL	Device function	Factory setting: Status (meaning)
893	Status switch output	0 (device function not active)
894	Empty pipe detection	■ 1 (device function active)

CHANNEL	Device function	Factory setting: Status (meaning)
895	Low flow cut off	
1430	Status verification 1)	

1) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

Data structure

Input data of Discrete Input

Byte 1	Byte 2
Discrete	Status

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Two Discrete Output blocks are available (slot 12 to 13).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

CHANNEL	Function block	Device function	Values: control (meaning)
891	DO 1	Flow override	• 0 (disable device function)
1429	DO 2	Start verification 1)	■ 1 (enable device function)

1) Only available with the Heartbeat Verification application package

Data structure

Output data of Discrete Output

Byte 1	Byte 2
Discrete	Status

EMPTY_MODULE module

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 🗎 28
- "Post-connection check" checklist → 🖺 39

10.2 Connecting via FieldCare

- For FieldCare connection
- For connecting via FieldCare $\rightarrow \triangleq 50$
- For the FieldCare → 🖺 51 user interface

10.3 Configuring the device address via software

In the "Communication" submenu the device address can be set.


Navigation

"Setup" menu \rightarrow Communication \rightarrow Device address

10.3.1 PROFIBUS network

At time of delivery, the measuring device has the following factory setting:





If hardware addressing is active, software addressing is blocked

10.4 Setting the operating language

Factory setting: English or ordered local language

The operating language can be set in FieldCare, DeviceCare or via the Web server: Operation \rightarrow Display language


10.5 Configuring the measuring device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.

Navigation


"Setup" menu



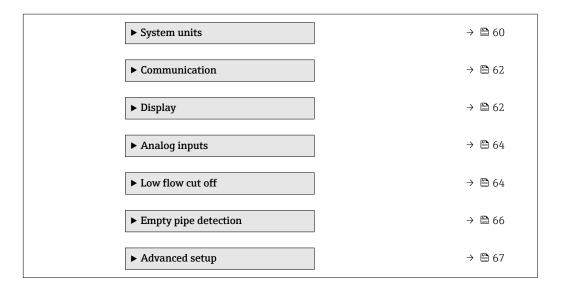

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.



Navigation


"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	31	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag 100 DP


10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.



Navigation

"Setup" menu → Advanced setup → System units

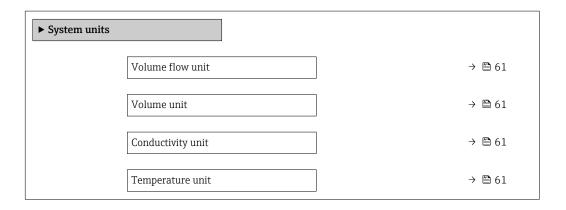

Mass flow unit	→ 🖺 61
Mass unit	→ 🖺 61
Density unit	→ 🖺 61
Corrected volume flow unit	→ 🖺 62
Corrected volume unit	→ 🗎 62

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Volume flow unit	-	Select volume flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: l/h gal/min (us)
Volume unit	-	Select volume unit.	Unit choose list	Country-specific: m³ gal (us)
Conductivity unit	The On option is selected in the Conductivity measurement parameter parameter.	Select conductivity unit. Effect The selected unit applies for: Simulation process variable	Unit choose list	μS/cm
Temperature unit	_	Select temperature unit. Result The selected unit applies for: Temperature parameter Maximum value parameter Minimum value parameter External temperature parameter Maximum value parameter Maximum value parameter Minimum value parameter	Unit choose list	Country-specific: °C °F
Mass flow unit	-	Select mass flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: kg/h lb/min
Mass unit	-	Select mass unit.	Unit choose list	Country-specific: kg lb
Density unit	-	Select density unit. Result The selected unit applies for: Output Simulation process variable	Unit choose list	Country-specific: kg/l lb/ft³

Parameter	Prerequisite	Description	Selection	Factory setting
Corrected volume flow unit	-	Select corrected volume flow unit. *Result* The selected unit applies for: *Corrected volume flow* parameter (> *\Bar\) 77)	Unit choose list	Country-specific: Nl/h Sft³/h
Corrected volume unit	-	Select corrected volume unit.	Unit choose list	Country-specific: Nm³ Sft³

10.5.3 Configuring communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation

"Setup" menu \rightarrow Communication



Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126

10.5.4 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu \rightarrow Display

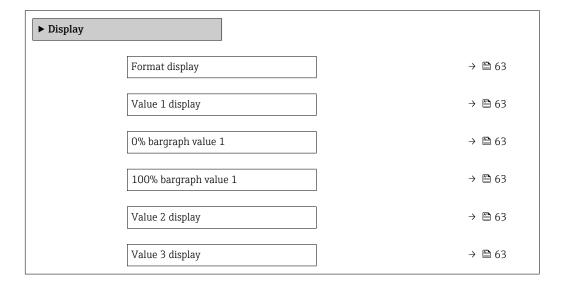

0% bargraph value 3	→ 🖺 63
100% bargraph value 3	→ 🖺 63
Value 4 display	→ 🖺 63

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Volume flow Mass flow Corrected volume flow Flow velocity None Totalizer 1 Totalizer 2 Totalizer 3 Electronic temperature 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 🖺 63)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 🖺 63)	None

10.5.5 Configuring the analog inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu \rightarrow Analog inputs

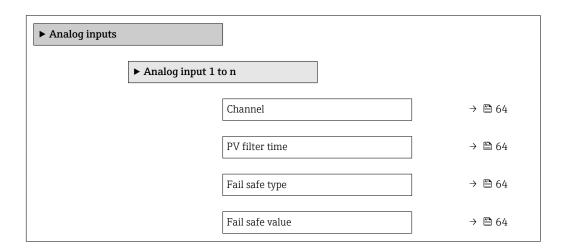

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Channel	-	Select the process variable.	 Volume flow Mass flow Corrected volume flow Flow velocity Temperature Electronic temperature 	Volume flow
PV filter time	-	Specify the time to suppress signal peaks. During the specified time the analog input does not respond to an erratic increase in the process variable.	Positive floating- point number	0
Fail safe type	-	Select the failure mode.	Fail safe valueFallback valueOff	Off
Fail safe value	In Fail safe type parameter, the Fail safe value option is selected.	Specify the values to be output when an error occurs.	Signed floating-point number	0

10.5.6 Configuring the low flow cut off

The **Low flow cut off** submenu contains the parameters that must be set in order to configure the low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

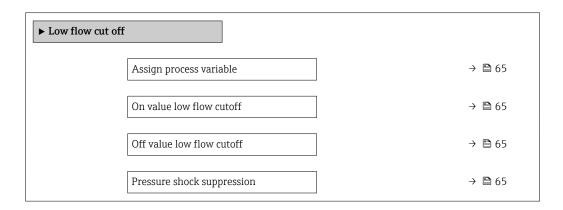

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	OffVolume flowMass flowCorrected volume flow	Volume flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🖺 65): Volume flow Mass flow Corrected volume flow	Enter on value for low flow cut off.	Signed floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🖺 65): • Volume flow • Mass flow • Corrected volume flow	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→ 🖺 65): ■ Volume flow ■ Mass flow ■ Corrected volume flow	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

10.5.7 Configuring empty pipe detection

The **Empty pipe detection** submenu contains parameters that must be configured for the configuration of empty pipe detection.

Navigation

"Setup" menu → Empty pipe detection

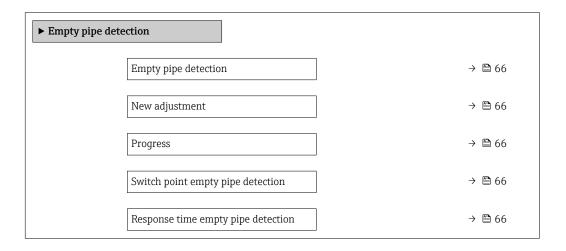

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Empty pipe detection	-	Switch empty pipe detection on and off.	Off On	Off
New adjustment	The On option is selected in the Empty pipe detection parameter.	Select type of adjustment.	CancelEmpty pipe adjustFull pipe adjust	Cancel
Progress	The On option is selected in the Empty pipe detection parameter.	Shows the progress.	OkBusyNot ok	-
Switch point empty pipe detection	The On option is selected in the Empty pipe detection parameter.	Enter hysteresis in %, below this value the measuring tube will detected as empty.	0 to 100 %	10 %
Response time empty pipe detection	In the Empty pipe detection parameter (→ 🖺 66), the On option is selected.	Enter the time before diagnostic message S862 'Pipe empty' is displayed for empty pipe detection.	0 to 100 s	1 s

10.6 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation

"Setup" menu \rightarrow Advanced setup

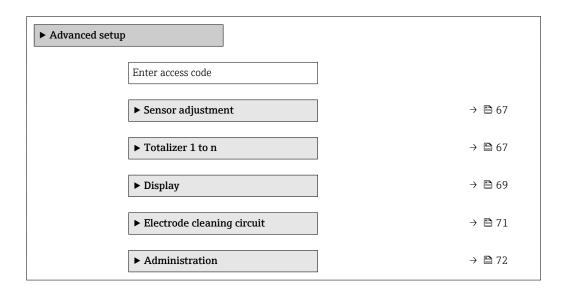

10.6.1 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment



Parameter overview with brief description


Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	Flow in arrow directionFlow against arrow direction	Flow in arrow direction

10.6.2 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

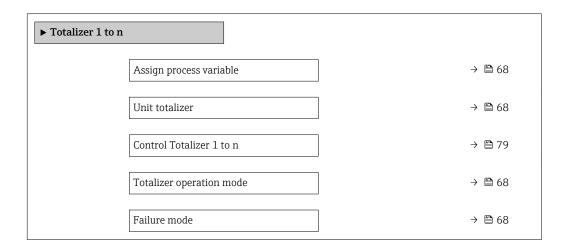

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	-	Select process variable for totalizer.	Volume flowMass flowCorrected volume flow	Volume flow
Unit totalizer	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow Corrected volume flow	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: • m³ • ft³
Totalizer operation mode	In the Assign process variable parameter, one of the following options is selected: Volume flow Mass flow Corrected volume flow	Select totalizer calculation mode.	 Net flow total Forward flow total Reverse flow total Last valid value 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow Corrected volume flow	Define the totalizer behavior in the event of a device alarm.	StopActual valueLast valid value	Actual value

10.6.3 Carrying out additional display configurations

In the $\bf Display$ submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display			
	Format display		→ 🖺 70
	Value 1 display		→ 🖺 70
	0% bargraph value 1		→ 🖺 70
	100% bargraph value 1		→ 🖺 70
	Decimal places 1		→ 🖺 70
	Value 2 display		→ 🖺 70
	Decimal places 2		→ 🖺 70
	Value 3 display		→ 🖺 70
	0% bargraph value 3		→ 🖺 70
	100% bargraph value 3		→ 🖺 70
	Decimal places 3		→ 🖺 70
	Value 4 display		→ 🖺 70
	Decimal places 4		→ 🖺 70
	Display language		→ 🖺 71
	Display interval		→ 🖺 71
	Display damping		→ 🖺 71
	Header		→ 🖺 71
	Header text		→ 🖺 71
	Separator		→ 🖺 71
	Backlight]	

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Volume flow Mass flow Corrected volume flow Flow velocity None Totalizer 1 Totalizer 2 Totalizer 3 Electronic temperature 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 1/h 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 🖺 63)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX • X.XXXX	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 🖺 63)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Display language	A local display is provided.	Set display language.	English Deutsch* Français* Español* Italiano* Nederlands* Portuguesa* Polski* pyсский язык (Russian)* Svenska* Türkçe* 中文 (Chinese)* 日本語 (Japanese)* 한국어 (Korean)* 한국어 (Korean)* 한국어 (Korean)* 한국어 (Korean)* 한국에 (Arabic)* Bahasa Indonesia* ภาษาไทย (Thai)* tiếng Việt (Vietnamese)* čeština (Czech)*	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	Device tagFree text	Device tag
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	• . (point) • , (comma)	. (point)

^{*} Visibility depends on order options or device settings


10.6.4 Performing electrode cleaning

The **Electrode cleaning circuit** submenu contains parameters that must be configured for the configuration of electrode cleaning.

The submenu is only available if the device was ordered with electrode cleaning.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Electrode cleaning circuit

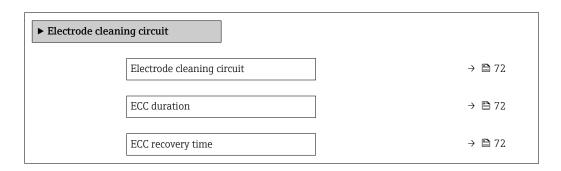

ECC cleaning cycle	→ 🖺 72
ECC Polarity	→ 🗎 72

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Electrode cleaning circuit	For the following order code: "Application package", option EC "ECC electrode cleaning"	Enable the cyclic electrode cleaning circuit.	• Off • On	Off
ECC duration	For the following order code: "Application package", option EC "ECC electrode cleaning"	Enter the duration of electrode cleaning in seconds.	0.01 to 30 s	2 s
ECC recovery time	For the following order code: "Application package", option EC "ECC electrode cleaning"	Define recovery time after electrode cleaning. During this time the current output values will be held at last valid value.	Positive floating- point number	60 s
ECC cleaning cycle	For the following order code: "Application package", option EC "ECC electrode cleaning"	Enter the pause duration between electrode cleaning cycles.	0.5 to 168 h	0.5 h
ECC Polarity	For the following order code: "Application package", option EC "ECC electrode cleaning"	Select the polarity of the electrode cleaning circuit.	PositiveNegative	Depends on the electrode material: Platinum: Negative option Tantalum, Alloy C22, stainless steel: Positive option

10.6.5 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

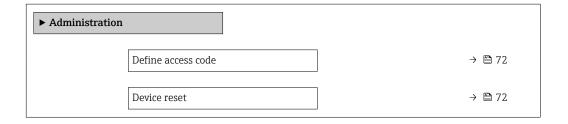

Parameter overview with brief description


Parameter	Description	User entry / Selection	Factory setting
Define access code	Define release code for write access to parameters.	0 to 9 999	0
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	CancelTo delivery settingsRestart device	Cancel

10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation

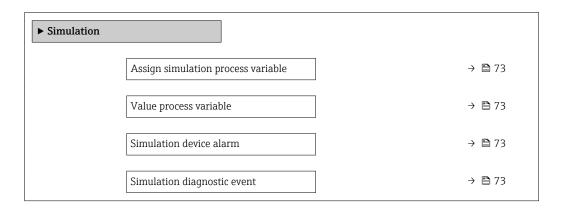

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	 Off Volume flow Mass flow Corrected volume flow Conductivity* 	Off
Value process variable	One of the following options is selected in the Assign simulation process variable parameter (→ 🖹 73): Volume flow Mass flow Corrected volume flow Conductivity* Corrected conductivity* Temperature*	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Simulation device alarm	-	Switch the device alarm on and off.	Off On	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Simulation diagnostic event	-	Select a diagnostic event for the simulation process that is activated.	Off Diagnostic event picklist (depends on the category selected)	Off

Visibility depends on order options or device settings

10.8 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:


- Write protection via write protection switch \rightarrow $\stackrel{ riangle}{=}$ 74

10.8.1 Write protection via access code

With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

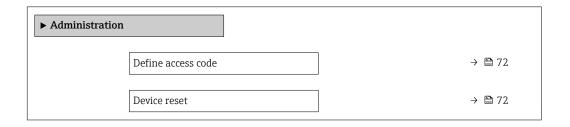

Defining the access code via the Web browser

- 1. Navigate to the **Define access code** parameter.
- 2. Define a max. 16-digit numeric code as an access code.
- 3. Enter the access code again in the to confirm the code.
 - ► The Web browser switches to the login page.
- If no action is performed for 10 minutes, the Web browser automatically returns to the login page.
- If parameter write protection is activated via an access code, it can also only be deactivated via this access code.
 - The user role with which the user is currently logged on via Web browser is indicated by the **Access status tooling** parameter. Navigation path: Operation → Access status tooling


10.8.2 Write protection via write protection switch

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:

- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer

The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI-RJ45)
- Via PROFIBUS DP
- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary → 125.

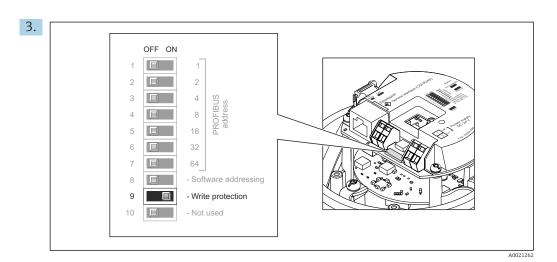

Setting the write protection switch on the main electronics module to the \mathbf{On} position enables hardware write protection. Setting the write protection switch on the main electronics module to the \mathbf{Off} position (factory setting) disables hardware write protection.

If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option; if disabled, the **Locking status** parameter does not display any option.

4. Reverse the removal procedure to reassemble the transmitter.

11 Operation

11.1 Reading the device locking status

Device active write protection: Locking status parameter

Navigation

"Operation" menu → Locking status

Function scope of "Locking status" parameter


Options	Description
Hardware locked	The write protection switch (DIP switch) for hardware locking is activated on the I/O electronic module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu \rightarrow Measured values

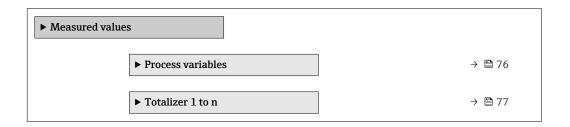


11.2.1 "Process variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Process variables

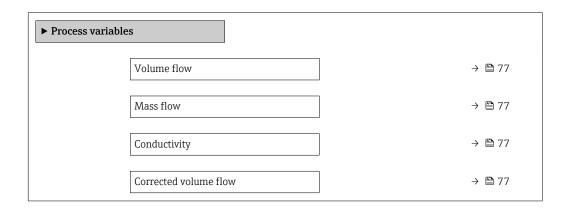

Temperature	→ 🖺 77
Corrected conductivity	→ 🗎 77

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Volume flow	-	Displays the volume flow currently measured.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter $(\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
Mass flow	-	Displays the mass flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Mass flow unit parameter $(\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
Corrected volume flow	-	Displays the corrected volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Corrected volume flow unit parameter $(\rightarrow \stackrel{\cong}{=} 62)$.	
Conductivity	The On option is selected in the Conductivity measurement	Displays the conductivity currently measured.	Signed floating-point number
	parameter.	Dependency The unit is taken from the Conductivity unit parameter (→ 🖺 61).	
Corrected conductivity	One of the following conditions is met: Order code for "Sensor option", option	Displays the conductivity currently corrected.	Positive floating-point number
	CI "Medium temperature sensor" orThe temperature is read into the flowmeter from an external device.	Dependency The unit is taken from the Conductivity unit parameter $(\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
Temperature	For the following order code: "Sensor option", option CI "Medium	Displays the temperature currently calculated.	Positive floating-point number
	temperature sensor"	Dependency The unit is taken from the Temperature unit parameter (→ 🖺 61).	

11.2.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer 1 to n

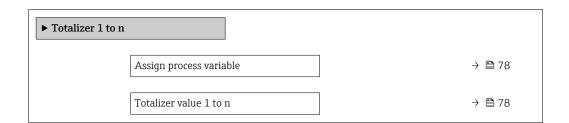

Totalizer status 1 to n	→ 🖺 78
Totalizer status (Hex) 1 to n	→ 🖺 78

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	_	Select process variable for totalizer.	Volume flowMass flowCorrected volume flow	Volume flow
Totalizer value 1 to n	In the Assign process variable parameter one of the following options is selected: Volume flow Mass flow Corrected volume flow Total mass flow Condensate mass flow Energy flow Heat flow difference	Displays the current totalizer counter value.	Signed floating-point number	0 m³
Totalizer status 1 to n	-	Displays the current totalizer status.	GoodUncertainBad	-
Totalizer status (Hex) 1 to n	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF	-

11.3 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the**Setup** menu (→ 🖺 59)
- Advanced settings using the **Advanced setup** submenu (→ 🖺 67)

11.4 Performing a totalizer reset

The totalizers are reset in the ${\bf Operation}$ submenu: Control Totalizer 1 to n


Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to n parameter.
Stop totalizing option	Totalizing is stopped.

78

Navigation

"Operation" menu → Totalizer handling

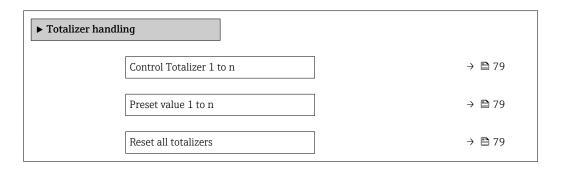

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	In the Assign process variable parameter, one of the following options is selected: Volume flow Mass flow Corrected volume flow	Control totalizer value.	TotalizeReset + holdPreset + hold	Totalize
Preset value 1 to n	-	Specify start value for totalizer.	Signed floating-point number	0 m ³
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	Cancel

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate. Apply the correct supply vol	
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 🖺 107.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing ± + E. Set the display darker by simultaneously pressing □ + E.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 107.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → 107.

For output signals

Error Possible causes		Solution	
Green power LED on the main electronics module of the transmitter is dark	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .	
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration. Observe limit values specified in the "Technical Data".	

For access

Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the OFF position $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
No connection via PROFIBUS DP	PROFIBUS DP bus cable connected incorrectly	Check terminal assignment → 🖺 31.
No connection via PROFIBUS DP	Device plug connected incorrectly	Check the pin assignment of the connector .

Error	Possible causes	Solution
No connection via PROFIBUS DP	PROFIBUS DP cable incorrectly terminated	Check terminating resistor → 🖺 38.
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary > \bigsim 48.
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 🖺 45. 2. Check the network settings with the IT manager.
Not connecting to Web server	Incorrect IP address	Check the IP address: 192.168.1.212 → 🖺 45
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	Check cable connection and power supply. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version → 🖺 44. 2. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	 JavaScript not enabled JavaScript cannot be enabled	Enable JavaScript. Enter http://XXX.XXX.X.XXX/ basic.html as the IP address.
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter


Different LEDs in the transmitter provide information on the device status.

LED	Color	Meaning
Supply voltage	Off	Supply voltage is off or too low
	Green	Supply voltage is ok
Alarm	Off	Device status is ok
	Flashing red	A device error of diagnostic behavior "Warning" has occurred
	Red	 A device error of diagnostic behavior "Alarm" has occurred Boot loader is active
Communication	Flashing white	PROFIBUS DP communication is active

12.3 Diagnostic information in the Web browser

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

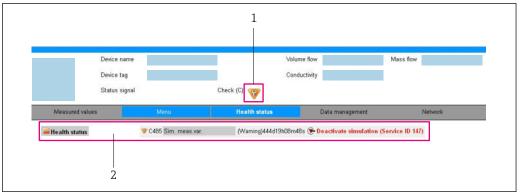

A003288

- 1 Status area with status signal
- 2 Diagnostic information \rightarrow B 82 and remedial measures with Service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
 - Via parameter
 - Via submenu → 🗎 100

Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
8	Failure A device error has occurred. The measured value is no longer valid.
w w	Function check The device is in service mode (e.g. during a simulation).
<u>^</u>	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
&	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

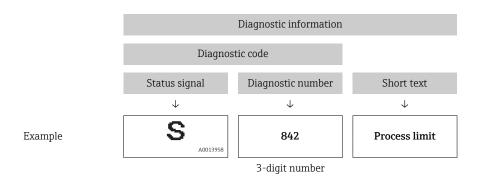


12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.4 Diagnostic information in DeviceCare or FieldCare

12.4.1 Diagnostic options


Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

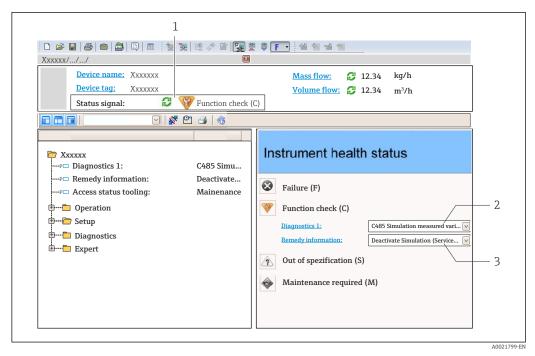

- 1 Status area with status signal
- 2 Diagnostic information $\rightarrow = 82$
- 3 Remedy information with Service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
 - Via parameter
 - Via submenu → 🖺 100

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

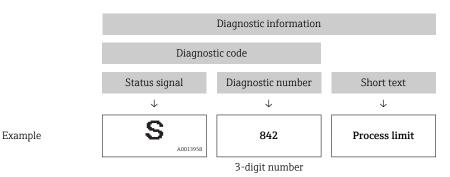

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
 Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ► A tool tip with remedy information for the diagnostic event appears.

12.5 Adapting the diagnostic information

12.5.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFIBUS and the totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS PA Profile 3.02 Specification and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

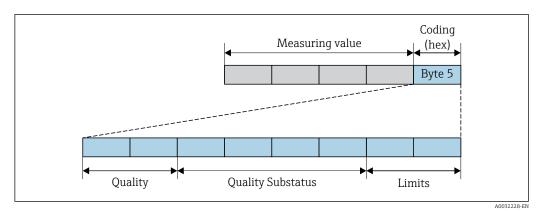

■ 20 Structure of the coding byte

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS PA Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte .

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and on the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199 \rightarrow $\stackrel{ riangle}{=}$ 85

- Diagnostic information pertaining to the process: diagnostic number 800 to 999 \rightarrow $\stackrel{ riangle}{ riangle}$ 86

Depending on the group in which the diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor: diagnostic number 000 to 199

Diagnostic behavior (configurable)	<i>N</i> Quality	Device diagnosis (fixed assignment)			
(comiguitable)	Substat	Substatus	tus (hex)	(NE107)	, ,
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded

Diagnostic hohavior	N	leasured value st	Device diagnosis		
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Logbook entry only	GOOD	ok	0x80 to 0x8E	_	_
Off	GOOD	ÜK	OXOU TO OXOE	_	_

Diagnostic information pertaining to the electronics: diagnostic number 200 to 399

Diagnostis hohovion	Measured value status (fixed assignment)				Dovino dingposis
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	Device diagnosis (fixed assignment)
Alarm	BAD	Maintenance	0x24 to 0x27	F	Maintenance
Warning	BAD	alarm	0.824 (0.0827	(Failure)	alarm
Logbook entry only	COOD	ok	0x80 to 0x8E		
Off	GOOD			_	_

Diagnostic information pertaining to the configuration: diagnostic number 400 to 599

Diagnostic behavior	M	leasured value sta	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	GOOD ok	0x80 to 0x8E	_	_
Off	GOOD	OK	OXOO TO OXOE		

Diagnostic information pertaining to the process: diagnostic number 800 to 999

Diagnostic hohovion	Measured value status (fixed assignment)				Device diagnosis
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	_	_
Off	GOOD	UK	OXOU TO OXOE	_	_

12.6 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

12.6.1 Diagnostic of sensor

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
004	Sensor		Change sensor Contact service	Empty pipe detectionLow flow cut off
	Status signal	S		Mass flowVolume flow
	Diagnostic behavior	Alarm		- volume now

	Diagnostic	information	Remedy instructions	Influenced measured
No.	Short text			variables
022	1		Change main electronic module Change sensor	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
043	Sensor short circuit		Check sensor and cable Change sensor or cable	Empty pipe detectionLow flow cut off
	Status signal	S		Mass flowVolume flow
	Diagnostic behavior	Warning		- volume now

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
062	Sensor connection		Check sensor connections Contact service	ConductivityCorrected conductivity
	Status signal F	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
082	Data storage		Check module connections Contact service	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
083	Memory content		Restart device Contact service	ConductivityCorrected conductivity
	Status signal	F		Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
190	Special event 1		Contact service	 Conductivity Corrected conductivity Density Empty pipe detection
	Status signal	F		
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
191	191 Special event 5		Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

12.6.2 Diagnostic of electronic

	Diagnostic	information	Remedy instructions	Influenced measured
No.	S	hort text		variables
201	Device failure		Restart device Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic	information	Remedy instructions	Influenced measured
No.	Short text			variables
222	Electronic drift		Change main electronic module	Empty pipe detectionLow flow cut off
	Status signal	F		Mass flowVolume flow
	Diagnostic behavior	Alarm		- volume now

	Diagnostic	information	Remedy instructions	Influenced measured
No.	S	hort text		variables
242	Software incompatible		Check software Flash or change main electronics	ConductivityCorrected conductivity
	Status signal	F	module	Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
252	Modules incompatible		Check electronic modules Change electronic modules	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
262	Module connection 1. Check module connections 2. Change main electronics	Check module connections Change main electronics	ConductivityCorrected conductivity	
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
270	Main electronic failure		Change main electronic module	ConductivityCorrected conductivity
	Status signal	F		DensityElectronic temperature
	Diagnostic behavior	Alarm		 Electronic temperature Electronic temperature Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
271	Main electronic failure		Restart device Change main electronic module	ConductivityCorrected conductivity
	Status signal	F		Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
272	Main electronic failure		Restart device Contact service	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
273	Main electronic failure Status signal	F	Change electronic	ConductivityCorrected conductivityElectronic temperature
	Diagnostic behavior	Alarm		 Electronic temperature Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
281	Electronic initialization		Firmware update active, please wait!	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
283	Memory content		Reset device Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
302	Device verification active		Device verification active, please wait.	ConductivityCorrected conductivity
	Status signal	С		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
311	Electronic failure		Reset device Contact service	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
311	Electronic failure		Do not reset device Contact service	ConductivityCorrected conductivity
	Status signal	M		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
322	Electronic drift		1. Perform verification manually 2. Change electronic Corrected conductiv	ConductivityCorrected conductivity
	Status signal	S		DensityEmpty pipe detection
	Diagnostic behavior	Warning		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
382	Data storage		Insert DAT module Change DAT module	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Si	hort text		variables
383	Memory content		Restart device Check or change DAT module 3. Contact	ConductivityCorrected conductivity
	Status signal Diagnostic behavior	F Alarm	service	 Density Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
390	Special event 2		Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
391	Special event 6		Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

12.6.3 Diagnostic of configuration

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
410	Data transfer		Check connection Retry data transfer	ConductivityCorrected conductivity
	Status signal	F	2. Tetry data transfer	Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Electronic temperature Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
411	Up-/download active		Up-/download active, please wait	ConductivityCorrected conductivity
	Status signal	С		Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
411	Up-/download active		Up-/download active, please wait	ConductivityCorrected conductivity
	Status signal	С		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
437	Configuration incompatible		Restart device Contact service	ConductivityCorrected conductivity
	Status signal	F		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
438	Dataset		Check data set file Check device configuration	ConductivityCorrected conductivity
	Status signal	M	3. Up- and download new configuration	 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
453	Flow override		Deactivate flow override	ConductivityCorrected conductivity
	Status signal	С		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		variables
482	FB not Auto/Cas		Set Block in AUTO mode	_
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
484	Simulation failure mode		Deactivate simulation	ConductivityCorrected conductivity
	Status signal	С		 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
485	Simulation measured variable	Ta	Deactivate simulation	 Conductivity Corrected conductivity Electronic temporature
	Status signal Diagnostic behavior	Warning		 Electronic temperature Electronic temperature Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow
				TemperatureVolume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
495	Simulation diagnostic event		Deactivate simulation	-
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
497	Simulation block output		Deactivate simulation	-
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
500	Electrode 1 potential exceeded		Check process cond. Increase system pressure	Empty pipe detectionLow flow cut off
	Status signal	F		Mass flowVolume flow
	Diagnostic behavior	Alarm		- volume now

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
500	Electrode difference voltage too high		Check process cond. Increase system pressure	Empty pipe detectionLow flow cut off
	Status signal	F		Mass flowVolume flow
	Diagnostic behavior	Alarm		- volume now

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
530	Electrode cleaning is running		Check process cond. Increase system pressure	-
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
531	Empty pipe detection		Execute EPD adjustment	ConductivityCorrected conductivity
	Status signal	S		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic	information	Remedy instructions	Influenced measured variables
No.	Si	hort text		variables
537	Configuration		Check IP addresses in network Change IP address	-
			2. Change ir address	
	Status signal	F		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
590	Special event 3		Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
591	Special event 7		Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

12.6.4 Diagnostic of process

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
832	Electronic temperature too hig	h	Reduce ambient temperature	ConductivityCorrected conductivity
	Status signal	S		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
833	Electronic temperature too low	,	Increase ambient temperature	ConductivityCorrected conductivity
	Status signal	S		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
834	Process temperature too high	c	Reduce process temperature	ConductivityCorrected conductivityElectronic temperature
	Status signal Diagnostic behavior	Warning		 Electronic temperature Electronic temperature Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
835	Process temperature too low		Increase process temperature	ConductivityCorrected conductivity
	Status signal	S		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
842	Process limit		Low flow cut off active! 1. Check low flow cut off configuration	Empty pipe detectionLow flow cut off
	Status signal	S		Mass flowVolume flow
	Diagnostic behavior	Warning		- volume novv

	Diagnostic	information	Remedy instructions	Influenced measured
No.	s	hort text		variables
862	Empty pipe		Check for gas in process Adjust empty pipe detection	ConductivityCorrected conductivity
	Status signal	S		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
882	2 Input signal		Check input configuration Check external device or process	Empty pipe detectionLow flow cut off
	Status signal	F	conditions	Mass flowVolume flow
	Diagnostic behavior	Alarm		- volume now

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
937	EMC interference		Change main electronic module	ConductivityCorrected conductivity
	Status signal	S		 Electronic temperature Electronic temperature
	Diagnostic behavior	Warning		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

Diagnostic information			Remedy instructions	Influenced measured
No.	S	hort text		variables
938	EMC interference		Check ambient conditions regarding EMC influence	ConductivityCorrected conductivity
	Status signal	F	2. Change main electronic module	 Electronic temperature Electronic temperature
	Diagnostic behavior	Alarm		 Empty pipe detection Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

Diagnostic information		Remedy instructions	Influenced measured	
No.	. Short text			variables
990	Special event 4		Contact service	ConductivityCorrected conductivity
	Status signal	F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
991	Special event 8			ConductivityCorrected conductivity
	Status signal	tatus signal F		DensityEmpty pipe detection
	Diagnostic behavior	Alarm		 Flow velocity Low flow cut off Mass flow Corrected volume flow Temperature Volume flow


12.7 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:
 - - Via "FieldCare" operating tool → 🖺 84
- Other pending diagnostic events can be displayed in the **Diagnostic list** submenu $\rightarrow \stackrel{\cong}{=} 100$

Navigation

"Diagnostics" menu

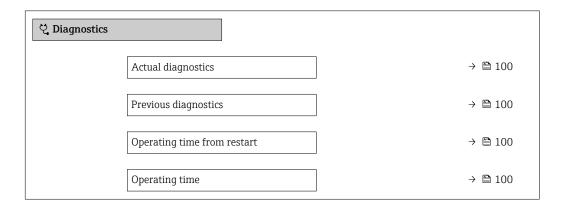

Parameter overview with brief description

Parameter Prerequisite		Description	User interface
Actual diagnostics	Actual diagnostics A diagnostic event has occurred.		Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.8 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

100

Navigation path

Diagnostics → Diagnostic list



To call up the measures to rectify a diagnostic event:

- Via Web browser →

 83
- Via "FieldCare" operating tool → 🖺 84
- Via "DeviceCare" operating tool → 🖺 84

12.9 Event logbook

12.9.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

A maximum of 20 event messages can be displayed in chronological order.

The event history includes entries for:

- Diagnostic events → 🖺 86
- Information events \rightarrow 🗎 101

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - €: Occurrence of the event
 - →: End of the event
- Information event
 - €: Occurrence of the event
- To call up the measures to rectify a diagnostic event:
 - Via Web browser →

 83
 - Via "FieldCare" operating tool → 🖺 84
- For filtering the displayed event messages $\rightarrow \stackrel{\triangle}{=} 101$

12.9.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.9.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1351	Empty pipe detection adjustment failure
I1353	Empty pipe detection adjustment ok
I1361	Wrong web server login
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1443	Coating thickness not determined
I1444	Device verification passed
I1445	Device verification failed
I1446	Device verification active
I1457	Failed:Measured error verification
I1459	Failed: I/O module verification
I1461	Failed: Sensor verification
I1462	Failed:Sensor electronic module verific.

12.10 Resetting the measuring device

Using the **Device reset** parameter ($\rightarrow \implies 72$) it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.10.1 Function scope of the "Device reset" parameter


Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting. This option is not visible if no customer-specific settings have been ordered.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

12.11 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu → Device information

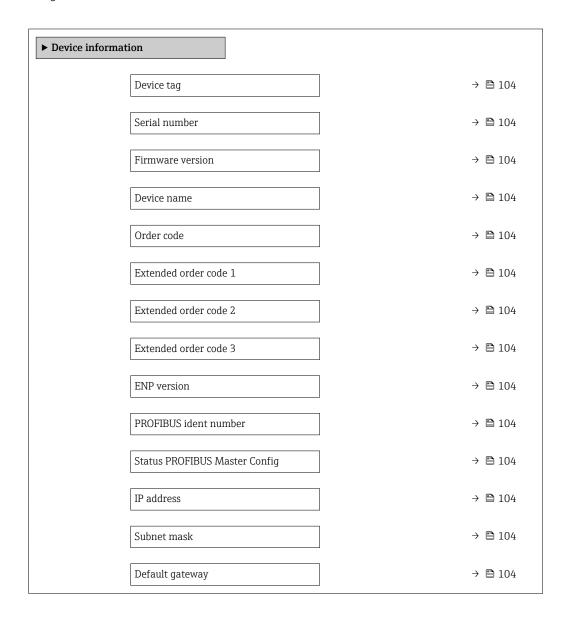

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag 100 DP
Serial number	Shows the serial number of the measuring device.	A maximum of 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Max. 32 characters such as letters or numbers.	Promag 100 DP
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.		-
Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.		Character string	-
Extended order code 3 Shows the 3rd part of the extended code. The extended order code of found on the nameplate or and transmitter in the "Extended code."		Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00
PROFIBUS ident number Displays the PROFIBUS identification number. 0 to FFFF		0 to FFFF	0x1560
Status PROFIBUS Master Config	Displays the status of the PROFIBUS Master configuration.		
IP address	Displays the IP address of the Web server of the measuring device.	of 4 octet: 0 to 255 (in the particular octet) 192.168.1.212	
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet) 255.255.255.0	
Default gateway Displays the default gateway.		4 octet: 0 to 255 (in the particular octet)	0.0.0.0

12.12 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
09.2013	01.01.00	Option 78	Original firmware	Operating Instructions	BA01238D/06/EN/01.13
10.2014	01.01.zz	Option 69	 Integration of optional local display New unit "Beer Barrel (BBL)" Simulation of diagnostic events 	Operating Instructions	 BA01238D/06/EN/ 02.14 BA01307D/06/EN/ 01.14

- It is possible to flash the firmware to the current version or the previous version using the service interface.
- For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
 - \blacksquare In the Download Area of the Endress+Hauser web site: www.endress.com \to Downloads
 - Specify the following details:
 - Product root: e.g. 5H1B
 The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

No interior cleaning is planned for the device.

13.1.3 Replacing seals

The sensor's seals (particularly aseptic molded seals) must be replaced periodically.

The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory part) $\rightarrow \triangleq 128$

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \triangleq 109$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repairs

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ► Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W*@*M* life cycle management database.

14.2 Spare parts


W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

- Measuring device serial number:
 - Is located on the nameplate of the device.
 - Can be read out via the Serial number parameter (→ 104) in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at http://www.endress.com/support/return-material

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions.

- ► Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

MARNING

Danger to personnel and environment from fluids that are hazardous to health.

► Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

108

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Ground cable	Set, consisting of two ground cables for potential equalization.

15.1.2 For the sensor

Accessories	Description
Ground disks	Are used to ground the medium in lined measuring tubes to ensure proper measurement. For details, see Installation Instructions EA00070D

15.2 Communication-specific accessories

Accessories	Description
Commubox FXA291	Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.
	For details, see the "Technical Information" document TI405C/07

15.3 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: • Via the Internet: https://wapps.endress.com/applicator • As a downloadable DVD for local PC installation.

W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices. For details, see Innovation brochure IN01047S

15.4 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	For details, see "Technical Information" TI00133R and Operating Instructions BA00247R

16 Technical data

16.1 Application

The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 5 μ S/cm.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Electromagnetic flow measurement on the basis of Faraday's law of magnetic induction.
Measuring system	The device consists of a transmitter and a sensor.
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.
	For information on the structure of the device \rightarrow $\ \ \ \ \ \ \ \ \$
	16.3 Input
 Measured variable	Direct measured variables
	Volume flow (proportional to induced voltage)Electrical conductivity
	Calculated measured variables
	Mass flowCorrected volume flow
 Measuring range	Typically $v = 0.01$ to 10 m/s (0.03 to 33 ft/s) with the specified accuracy
	Electrical conductivity: $\geq 5 \mu S/cm$ for liquids in general
	Recommended measuring range
	"Flow limit" section → 🖺 119
Operable flow range	Over 1000 : 1

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow
- Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section → 🗎 110

It is recommended to read in external measured values to calculate the following measured variables:

Corrected volume flow

Digital communication

The measured values are written from the automation system to the measuring device via PROFIBUS DP.

16.4 Output

Output signal

PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Current output 4 to 20 mA

4 to 20 mA

Failure mode	Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Freely definable value between: 3.59 to 22.5 mA Actual value Lact valid value
	■ Last valid value

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: Actual value No pulses
Frequency output	
Failure mode	Choose from: Actual value O Hz Defined value: 0 to 12 500 Hz

Switch output	
Failure mode	Choose from: Current status Open Closed

PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red backlighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: PROFIBUS DP
- Via service interface CDI-RJ45 service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web server

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes		
The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred			
	Diagnostic information via light emitting diodes		

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

The following connections are galvanically isolated from each other:

- Outputs
- Power supply

Protocol-specific data

Protocol-specific data

Manufacturer ID	0x11
Ident number	0x1561

Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under: ■ www.endress.com On the product page for the device: Documents/Software → Device drivers ■ www.profibus.org
Output values (from measuring device to automation system)	Analog input 1 to 4 Volume flow Mass flow Corrected volume flow Flow velocity Conductivity Corrected conductivity Temperature Electronic temperature
	Digital input 1 to 2 ■ Empty pipe detection ■ Low flow cut off ■ Verification status
	Totalizer 1 to 3 ■ Volume flow ■ Mass flow ■ Corrected volume flow
Input values (from automation system to measuring device)	Analog output 1 to 2 (fixed assignment) ■ External temperature ■ External density
	Digital output 1 to 2 (fixed assignment) Digital output 1: switch positive zero return on/off Digital output 2: start verification
	Totalizer 1 to 3 Totalize Reset and hold Preset and hold Stop Operating mode configuration: Net flow total Forward flow total Reverse flow total
Supported functions	Identification & Maintenance Simplest device identification on the part of the control system and nameplate PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	 DIP switches on the I/O electronics module Via operating tools (e.g. FieldCare)

16.5 Power supply

Terminal assignment	→ 🖺 31
Pin assignment, device plug	→ 🖺 32

Supply voltage The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

Transmitter

DC 20 to 30 V

Power consumption

Transmitter

Order code for "Output"	Maximum Power consumption
Option L : PROFIBUS DP	3.5 W

Current consumption

Transmitter

Order code for "Output"	Maximum Current consumption	Maximum switch-on current
Option L: PROFIBUS DP	145 mA	18 A (< 0.125 ms)

Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→ 🖺 33

Potential equalization

→ 🖺 34

Terminals

Transmitter

Spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Cable entries

- Cable gland: M20 \times 1.5 with cable ϕ 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - M20
 - G ½"
 - NPT ½"

Cable specification

→ 🖺 30

16.6 Performance characteristics

Reference operating conditions

- Error limits following DIN EN 29104, in future ISO 20456
- Water, typically +15 to +45 °C (+59 to +113 °F); 0.5 to 7 bar (73 to 101 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025


Maximum measured error

Error limits under reference operating conditions

o.r. = of reading

Volume flow

- $\pm 0.5 \%$ o.r. ± 1 mm/s (0.04 in/s)
- Optional: ±0.2 % o.r. ± 2 mm/s (0.08 in/s)
- Fluctuations in the supply voltage do not have any effect within the specified range.

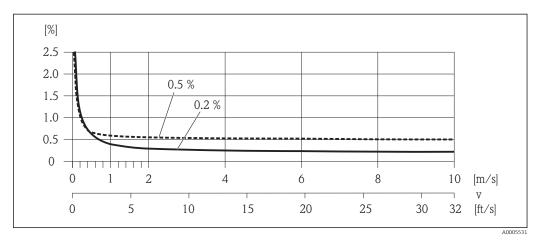

■ 21 Maximum measured error in % o.r.

Electrical conductivity

Max. measured error not specified.

Accuracy of outputs

The output accuracy must be factored into the measured error if analog outputs are used, but can be ignored for fieldbus outputs (e.g. Modbus RS485, EtherNet/IP).

The outputs have the following base accuracy specifications.

Repeatability

o.r. = of reading

Volume flow

Max. ± 0.1 % o.r. ± 0.5 mm/s (0.02 in/s)

Electrical conductivity

Max. ±5 % o.r.

Temperature measurement response time

 T_{90} < 15 s

Influence of ambient temperature

Current output

o.r. = of reading

Temperature coefficient	Max. ±0.005 % o.r./°C
-------------------------	-----------------------

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.

16.7 Installation

"Mounting requirements"

16.8 Environment

Ambient temperature range

→ ■ 21

Temperature tables



Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors. $\rightarrow \implies 21$

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.

Degree of protection

Transmitter and sensor

- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69 can also be ordered
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Vibration resistance

- Vibration, sinusoidal according to IEC 60068-2-6
 - 2 to 8.4 Hz, 3.5 mm peak
 - 8.4 to 2000 Hz, 1 g peak
- Vibration broad-band random, according to IEC 60068-2-64
- $-10 \text{ to } 200 \text{ Hz}, 0.003 \text{ g}^2/\text{Hz}$
- -200 to 2000 Hz, 0.001 q^2/Hz
- Total: 1.54 g rms

Shock resistance

Shock, half-sine according to IEC 60068-2-27 6 ms 30 g

Impact resistance

Rough handling shocks according to IEC 60068-2-31

Mechanical load

- Protect the transmitter housing against mechanical effects, such as shock or impact.
- Never use the transmitter housing as a ladder or climbing aid.


Electromagnetic compatibility (EMC)

- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- Complies with emission limits for industry as per EN 55011 (Class A)
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170 Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.

16.9 **Process**

Medium temperature range

- -20 to +150 °C (-4 to +302 °F) for PFA, DN 25 to 200 (1 to 8")
- $-20 \text{ to } +180 \,^{\circ}\text{C} \, (-4 \text{ to } +356 \,^{\circ}\text{F}) \, \text{for PFA high-temperature, DN 25 to 200 (1 to 8")}$
- $-40 \text{ to } +130 \,^{\circ}\text{C} \, (-40 \text{ to } +266 \,^{\circ}\text{F}) \text{ for PTFE, DN } 15 \text{ to } 600 \, (\frac{1}{2} \text{ to } 24^{\circ})$

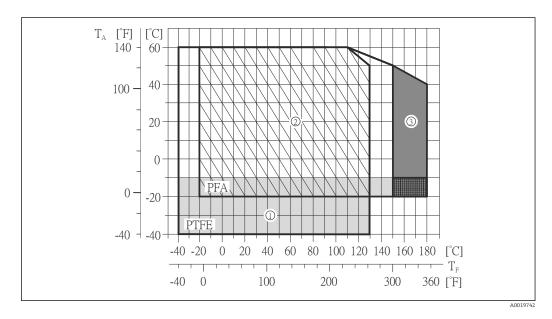

 T_{A} Ambient temperature

 $T_{\rm F}$ Medium temperature

- Gray area: the ambient and fluid temperature range of -10 to -40 °C (-14 to -40 °F) applies to stainless flanges only
- 2 Hatched area: harsh environment and IP68 only up to +130 $^{\circ}$ C (+266 $^{\circ}$ F)
- Dark-gray area: high-temperature version with insulation

Conductivity

 \geq 5 μ S/cm for liquids in general. Stronger filter damping is required for very low conductivity values.

Pressure-temperature ratings



An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Pressure tightness

"-" = no specifications possible

Liner: PFA

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 to +180 °C (+212 to +356 °F)
25	1	0 (0)	0 (0)	0 (0)
32	-	0 (0)	0 (0)	0 (0)
40	1 ½	0 (0)	0 (0)	0 (0)
50	2	0 (0)	0 (0)	0 (0)
65	-	0 (0)	_	0 (0)
80	3	0 (0)	_	0 (0)

Nominal	for fluid temperatures:			
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 to +180 °C (+212 to +356 °F)
100	4	0 (0)	-	0 (0)
125	-	0 (0)	-	0 (0)
150	6	0 (0)	-	0 (0)
200	8	0 (0)	_	0 (0)

Liner: PTFE

Nominal	diameter	Limit values for	absolute pressure in	[mbar] ([psi]) for flu	id temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)		
15	1/2	0 (0)	0 (0)	0 (0)	100 (1.45)		
25	1	0 (0)	0 (0)	0 (0)	100 (1.45)		
32	-	0 (0)	0 (0)	0 (0)	100 (1.45)		
40	1 ½	0 (0)	0 (0)	0 (0)	100 (1.45)		
50	2	0 (0)	0 (0)	0 (0)	100 (1.45)		
65	-	0 (0)	_	40 (0.58)	130 (1.89)		
80	3	0 (0)	-	40 (0.58)	130 (1.89)		
100	4	0 (0)	_	135 (1.96)	170 (2.47)		
125	-	135 (1.96)	_	240 (3.48)	385 (5.58)		
150	6	135 (1.96)	-	240 (3.48)	385 (5.58)		
200	8	200 (2.90)	_	290 (4.21)	410 (5.95)		
250	10	330 (4.79)	_	400 (5.80)	530 (7.69)		
300	12	400 (5.80)	_	500 (7.25)	630 (9.14)		
350	14	470 (6.82)	-	600 (8.70)	730 (10.6)		
400	16	540 (7.83)	-	670 (9.72)	800 (11.6)		
450	18						
500	20		No negative pressure permitted!				
600	24						


Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:


- v < 2 m/s (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- v > 2 m/s (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludge)
- A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.

Pressure loss

- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545
 → 22

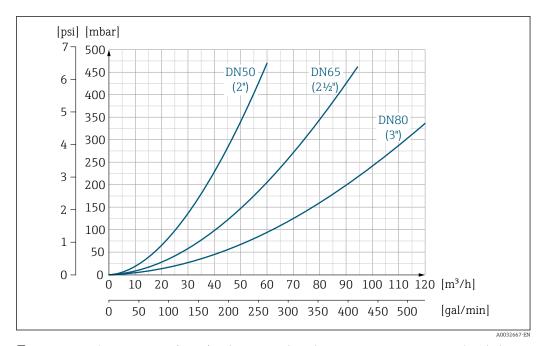

■ 22 Pressure loss DN 50 to 80 (2 to 3") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

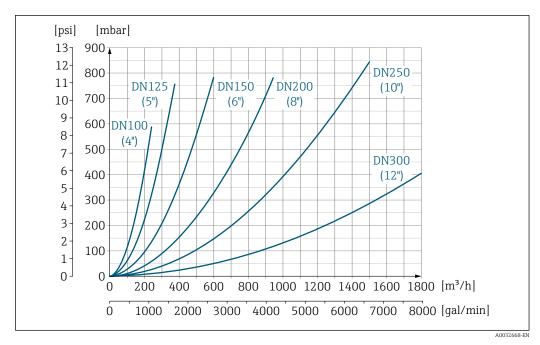

■ 23 Pressure loss DN 100 to 300 (4 to 12") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

16.10 Mechanical construction

Design, dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

All values (weight exclusive of packaging material) refer to devices for standard pressure ratings. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

Different values due to different transmitter versions:

Compact version

- Including the transmitter
- High-temperature version + 1.5 kg (3.31 lb)
- Weight specifications apply to standard pressure ratings and without packaging material.

Weight in SI units

Nominal d	liameter	EN (DIN), AS 1)		ASME		JIS	
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
15	1/2	PN 40	4.5	Class 150	4.5	10K	4.5
25	1	PN 40	5.3	Class 150	5.3	10K	5.3
32	-	PN 40	6	Class 150	-	10K	5.3
40	1 ½	PN 40	7.4	Class 150	7.4	10K	6.3
50	2	PN 40	8.6	Class 150	8.6	10K	7.3
65	-	PN 16	10	Class 150	-	10K	9.1
80	3	PN 16	12	Class 150	12	10K	10.5
100	4	PN 16	14	Class 150	14	10K	12.7
125	-	PN 16	19.5	Class 150	-	10K	19
150	6	PN 16	23.5	Class 150	23.5	10K	22.5
200	8	PN 10	43	Class 150	43	10K	39.9
250	10	PN 10	63	Class 150	73	10K	67.4
300	12	PN 10	68	Class 150	108	10K	70.3
350	14	PN 10	103	Class 150	173	10K	79
400	16	PN 10	118	Class 150	203	10K	100
450	18	PN 10	159	Class 150	253	10K	128
500	20	PN 10	154	Class 150	283	10K	142
600	24	PN 10	206	Class 150	403	10K	188

¹⁾ For flanges to AS, only DN 25 and 50 are available.

Weight in US units

Nominal diameter		ASME		
[mm]	[in]	Pressure rating	[lbs]	
15	1/2	Class 150	9.92	
25	1	Class 150	11.7	
40	1 ½	Class 150	16.3	
50	2	Class 150	19.0	
80	3	Class 150	26.5	
100	4	Class 150	30.9	
150	6	Class 150	51.8	

Nominal diameter		ASME		
[mm]	[in]	Pressure rating	[lbs]	
200	8	Class 150	94.8	
250	10	Class 150	161.0	
300	12	Class 150	238.1	
350	14	Class 150	381.5	
400	16	Class 150	447.6	
450	18	Class 150	557.9	
500	20	Class 150	624.0	
600	24	Class 150	888.6	

Measuring tube specification

Nom diam							Process connection		n internal diameter		
		EN (DIN)	ASME	AS 2129	AS 4087	JIS	PI	FA.	PT	PTFE	
[mm]	[in]	[bar]	[psi]	[bar]	[bar]	[bar]	[mm]	[in]	[mm]	[in]	
15	1/2	PN 40	Class 150	-	-	20K	-	-	15	0.59	
25	1	PN 40	Class 150	Table E	_	20K	23	0.91	26	1.02	
32	-	PN 40	-	-	_	20K	32	1.26	35	1.38	
40	1 ½	PN 40	Class 150	-	_	20K	36	1.42	41	1.61	
50	2	PN 40	Class 150	Table E	PN 16	10K	48	1.89	52	2.05	
65	-	PN 16	-	-	_	10K	63	2.48	67	2.64	
80	3	PN 16	Class 150	-	_	10K	75	2.95	80	3.15	
100	4	PN 16	Class 150	-	_	10K	101	3.98	104	4.09	
125	-	PN 16	-	-	_	10K	126	4.96	129	5.08	
150	6	PN 16	Class 150	-	_	10K	154	6.06	156	6.14	
200	8	PN 10	Class 150	-	-	10K	201	7.91	202	7.95	
250	10	PN 10	Class 150	-	_	10K	-	-	256	10.1	
300	12	PN 10	Class 150	-	_	10K	-	-	306	12.0	
350	14	PN 10	Class 150	-	-	10K	-	-	337	13.3	
400	16	PN 10	Class 150	-	-	10K	-	-	387	15.2	
450	18	PN 10	Class 150	-	-	10K	-	-	432	17.0	
500	20	PN 10	Class 150	-	-	10K	-	-	487	19.2	
600	24	PN 10	Class 150	-	_	10K	-	-	593	23.3	


Materials

Transmitter housing

- Order code for "Housing", option **A** "Compact, aluminum coated": Aluminum, AlSi10Mg, coated \blacksquare Window material for optional local display ($\rightarrow \blacksquare$ 124):
- For order code for "Housing", option A: glass

122

Cable entries/cable glands

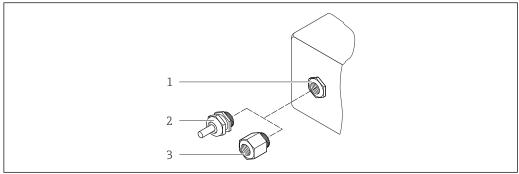

A0020640

 \blacksquare 24 Possible cable entries/cable glands

- 1 Female thread M20 \times 1.5
- 2 Cable gland $M20 \times 1.5$
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"

Order code for "Housing", option A "Compact, coated aluminum"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Nickel-plated brass
Adapter for cable entry with internal thread G ½"	
Adapter for cable entry with internal thread NPT ½"	

Device plug

Electrical connection	Material
Plug M12x1	 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Sensor housing

- DN 15 to 300 (½ to 12"): coated aluminum AlSi10Mg
- DN 350 to 600 (14 to 24"): carbon steel with protective varnish

Measuring tubes

Stainless steel, 1.4301/304/1.4306/304L; for flanges made of carbon with Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

Liner

- PFA
- PTFE

Process connections

EN 1092-1 (DIN 2501)

Stainless steel, 1.4571 (F316L); carbon steel, E250C 1)/S235JRG2/P245GH

¹⁾ DN 15 to 300 ($\frac{1}{2}$ to 12") with Al/Zn protective coating; DN 350 to 600 (14 to 24") with protective varnish

ASME B16.5

Stainless steel, F316L; carbon steel, A105 1)

JIS B2220

Stainless steel, 1.0425 (F316L) 1); carbon steel, A105/A350 LF2

AS 2129 Table E

- DN 25 (1"): carbon steel, A105/S235JRG2
- DN 40 (1 ½"): carbon steel, A105/S275JR

AS 4087 PN 16

Carbon steel, A105/S275JR

Electrodes

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium

Seals

As per DIN EN 1514-1, form IBC

Accessories

Ground disks

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum; titanium


Fitted electrodes

Measuring electrodes, reference electrodes and electrodes for empty pipe detection:

- Standard: stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum, titanium
- Optional: only platinum measuring electrodes

Process connections

- EN 1092-1 (DIN 2501): DN \leq 300 (12") Form A, DN \geq 350 (14") Form B; dimensions DN 65 PN 16 and only as per EN 1092-1
- ASME B16.5
- JIS B2220
- AS 2129 Table E
- AS 4087 PN 16



Surface roughness

Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium:

 ≤ 0.3 to 0.5 µm (11.8 to 19.7 µin)

(All data relate to parts in contact with fluid)

Liner with PFA: $\leq 0.4 \mu \text{m} (15.7 \mu \text{in})$

(All data relate to parts in contact with fluid)

16.11 Operability

Local display

The local display is only available with the following device order code: Order code for "Display; operation", option **B**: 4-line; illuminated, via communication

Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

Disconnecting the local display from the main electronics module

In the case of the "Compact, aluminum coated" housing version, the local display must only be disconnected manually from the main electronics module. In the case of the "Compact, hygienic, stainless" and "Ultra-compact, hygienic, stainless" housing versions, the local display is integrated in the housing cover and is disconnected from the main electronics module when the housing cover is opened.

"Compact, aluminum coated" housing version

The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.

For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:


- 1. Press in the side latches of the local display.
- 2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so.

Once the work is completed, plug the local display back on.

Remote operation

Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

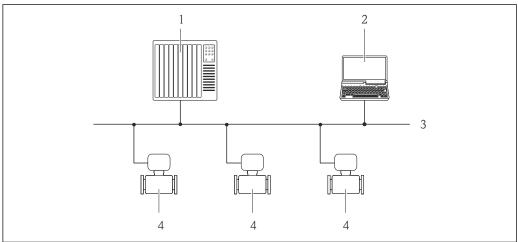

A002090


■ 25 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

Service interface

Via service interface (CDI-RJ45)

PROFIBUS DP

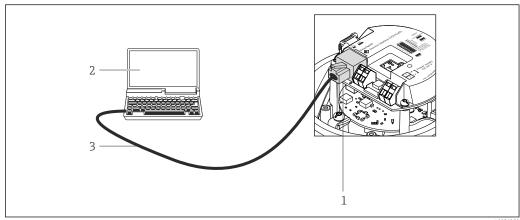

A002127

26 Connection for order code for "Output", option L: PROFIBUS DP

- 1 Service interface (CDI -RJ45) of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

Languages

Can be operated in the following languages:

- Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
- Via Web browser
 English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish,
 Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech, Swedish, Korean

16.12 Certificates and approvals

CE mark

The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

Certification PROFIBUS

PROFIBUS interface

The measuring device is certified and registered by the PNO (PROFIBUS User Organization Organization). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

126

Pressure Equipment Directive

- With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EC.
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art. 4, Par. 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EC.

Other standards and quidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Cleaning

Package	Description
Electrode cleaning circuit (ECC)	The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite (Fe_3O_4) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite).


Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk assessment.
	Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets.

16.14 Accessories



Supplementary documentation



- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions



Brief Operating Instructions containing all the important information for standard commissioning is enclosed with the device.

Operating Instructions

Measuring	Documentation code						
device	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET		
Promag P 100	BA01172D	BA01238D	BA01176D	BA01174D	BA01422D		

Description of device parameters

Measuring device	Documentation code						
	HART PROFIBUS DP Modbus RS485 EtherNet/IP PROFINET						
Promag 100	GP01038D	GP01039D	GP01040D	GP01041D	GP01042D		

Supplementary devicedependent documentation

Safety Instructions

Contents	Documentation code
ATEX/IECEx Ex nA	XA01090D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01056D
Heartbeat Technology	SD01149D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	 Access the overview of all the available spare part sets via W@M Device Viewer → 100 107 Accessories available for order with Installation Instructions → 100 109

Index

A	Transmitter
Adapters	Device repair
Adapting the diagnostic behavior 84	Device revision
Ambient temperature	Device type ID
Influence	DeviceCare
Ambient temperature range 21	Diagnostic information
Application	Design, description 82, 84
Applicator	DeviceCare
Approvals	FieldCare
Tapprotons	Light emitting diodes 81
C	Overview
C-Tick symbol	Remedial measures 86
Cable entries	Web browser
Technical data	Diagnostic list
Cable entry	DIP switches
Degree of protection	see Write protection switch
CE mark	Disabling write protection
Certificates	Display values
Certification PROFIBUS	For locking status
Checklist	Disposal
Post-connection check	Document
Post-installation check	Function 6
Cleaning	Symbols used 6
Exterior cleaning	Document function 6
Interior cleaning	Down pipe
Commissioning	Down pipe
Advanced settings 67	E
Configuring the measuring device	ECC
Compatibility with earlier model	Electrical connection
Conductivity	Commubox FXA291 49
Connecting cable	Degree of protection
Connecting the measuring device	Measuring device
Connection	Operating tools
see Electrical connection	Via PROFIBUS DP network 49, 125
Connection examples, potential equalization	Via service interface (CDI-RJ45) 49, 125
Connection preparations	Via service interface (CDI) 49
Connection tools	Web server
Current consumption	Electromagnetic compatibility
Cyclic data transmission	Enabling write protection
	Endress+Hauser services
D	Maintenance
Declaration of Conformity	Repair
Define access code	Environment
Degree of protection	Ambient temperature 21
Design	Impact resistance
Measuring device	Mechanical load
Designated use	Shock resistance
Device components	Storage temperature
Device description files	Vibration resistance
Device documentation	Error messages
Supplementary documentation 8	see Diagnostic messages
Device locking, status	Event list
Device master file	Event logbook
GSD	Ex approval
Device name	Extended order code
Sensor	Sensor

130

Transmitter	L
Exterior cleaning	Languages, operation options
Ç	Low flow cut off
F	20W How cut off 113
Field of application	M
Residual risks	Main electronics module
FieldCare	Maintenance tasks
Device description file	Replacing seals
Establishing a connection 50	Manufacturer ID
Function	Manufacturing date
User interface	Materials
Filtering the event logbook 101	Maximum measured error
Firmware	Measured values
Release date	Calculated
Version	Measured
Firmware history	see Process variables
Fitted electrodes	Measuring and test equipment
Flow direction	Measuring device
Flow limit	Configuration
Function check	Conversion
Functions	Design
see Parameter	Disposal
	Integrating via communication protocol 52
G	Mounting the sensor
Galvanic isolation	Mounting the ground cable/ground disks 24
	Mounting the seals
H	Screw tightening torques 24
Hardware write protection	Preparing for electrical connection
Heavy sensors	Preparing for mounting
_	Removing
I	Repairs
I/O electronics module	Measuring principle
Identifying the measuring device	Measuring range
Impact resistance	Measuring system
Incoming acceptance	Measuring tube specification
Influence	Mechanical load
Ambient temperature	Medium temperature range
Information on the document 6	Menu
Inlet runs	Diagnostics
Input	Operation
Inspection	Setup
Installation	Menus
Received goods	For measuring device configuration
Inspection check	For specific settings 67
Connection	Mounting dimensions
Installation	see Installation dimensions
Installation conditions	Mounting location
Adapters	Mounting preparations
Down pipe	Mounting tools
Heavy sensors	iviounting tools
Inlet and outlet runs	N
Installation dimensions	Nameplate
Mounting location	Sensor
Orientation	Transmitter
Partially filled pipe	11
System pressure	0
Vibrations	Operable flow range
Installation dimensions	Operating menu
Interior cleaning	Menus, submenus 42

Structure	Registered trademarks
Submenus and user roles 43	Remote operation
Operating philosophy 43	Repair of a device
Operation	Repairs
Operation options	Notes
Operational safety	Repeatability
Order code	Replacement
Orientation (vertical, horizontal) 20	Device components
Outlet runs	Replacing seals
Output	Requirements for personnel
Output signal	Return
_	
2	S
Packaging disposal	Safety
Parameter settings	Screw tightening torques
Administration (Submenu)	Sensor
Analog inputs (Submenu) 64	Mounting
Communication (Submenu) 62	Serial number
Device information (Submenu) 103	Setting the operating language 59
Diagnostics (Menu)	Settings
Display (Submenu) 69	Adapting the measuring device to the process
Display (Wizard) 62	conditions
Electrode cleaning circuit (Submenu) 71	Administration
Empty pipe detection (Wizard) 66	Advanced display configurations 69
Low flow cut off (Wizard) 64	Analog input
Process variables (Submenu)	Communication interface 62
Sensor adjustment (Submenu) 67	Device reset
Setup (Menu) 60	Device tag 60
Simulation (Submenu)	Electrode cleaning circuit (ECC) 71
System units (Submenu) 60	Empty pipe detection (EPD) 66
Totalizer 1 to n (Submenu) 67, 77	Low flow cut off
Totalizer handling (Submenu)	Onsite display 62
Web server (Submenu) 48	Operating language59
Partially filled pipe	Resetting the totalizer
Performance characteristics	Sensor adjustment 67
Post-connection check (checklist)	Simulation
Post-installation check	System units 60
Post-installation check (checklist) 28	Totalizer
Potential equalization	Totalizer reset
Power consumption	Shock resistance
Power supply failure	Signal on alarm
Pressure Equipment Directive	Software release
Pressure loss	Spare part
Pressure tightness	Spare parts
Pressure-temperature ratings	Special connection instructions
Process conditions	Standards and guidelines
Conductivity	Status signals
Flow limit	Storage conditions
Medium temperature	Storage temperature
Pressure loss	Storage temperature range
Pressure tightness	Structure
Process connections	Operating menu 42
Product safety	Submenu
Protecting parameter settings	Administration
. To cooming parameter occurry	Advanced setup 67
R	Analog inputs
Reading measured values	Communication
Recalibration	Device information
Reference operating conditions	
Acterence operating continuous	Display

132

Electrode cleaning circuit	
Measured values	
Overview	43
Process variables	76
Sensor adjustment	67
Simulation	73
System units	60
Totalizer 1 to n	
Totalizer handling	78 48
Web server	40 128
	$120 \\ 114$
Surface roughness	
System design	
Measuring system	111
see Measuring device design	
System integration	52
System pressure	22
Т	
_	111
Technical data, overview	
Temperature range	110
Storage temperature	. 17
Terminal assignment	
Terminals	
Tools	
Electrical connection	
For mounting	
Transport	. 17
Totalizer	
Assign process variable	
Configuration	
Operation	
Transmitter	70
Connecting the signal cables	33
Turning the display module	
Transporting the measuring device	
Troubleshooting	
General	
Turning the display module	28
U	
Use of the measuring device	
Borderline cases	9
Incorrect use	
see Designated use	
User interface	
Current diagnostic event	100
Previous diagnostic event	
User roles	43
V	
Version data for the device	52
Vibration resistance	
Vibrations	

VV
W@M 106, 107
W@M Device Viewer
Weight
Compact version
Transport (notes)
Wizard
Define access code
Display
Empty pipe detection 66
Low flow cut off 64
Workplace safety
Write protection
Via access code
Via write protection switch
Write protection switch



