

Description of Device Parameters

Proline Promass 300

FOUNDATION Fieldbus

Coriolis flowmeter

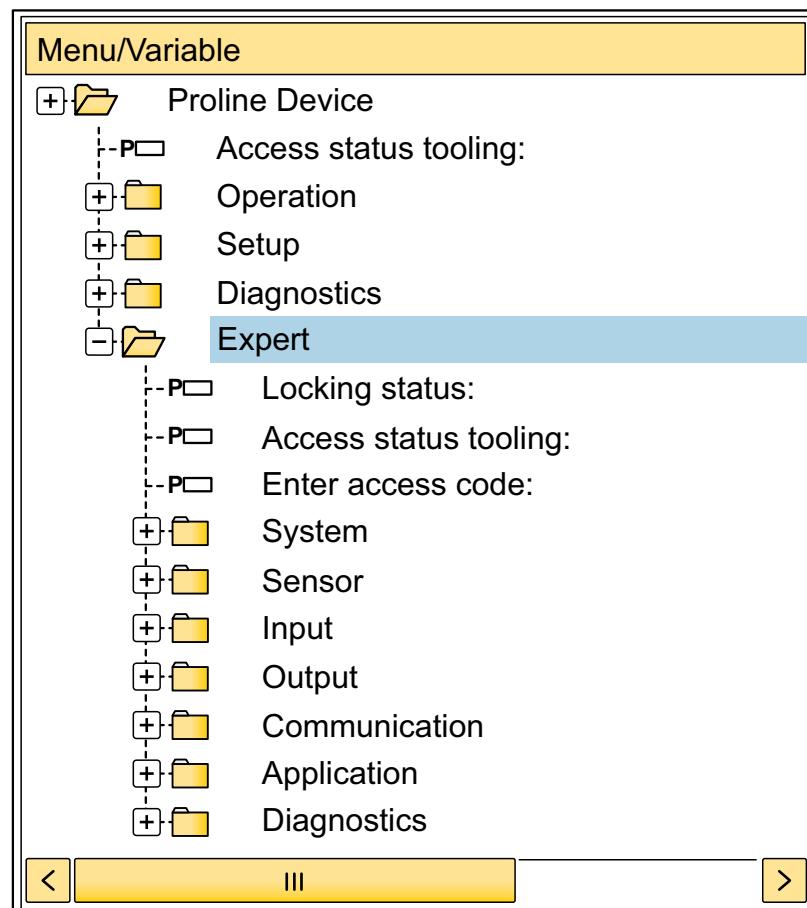


Table of contents

1 About this document	4		
1.1 Document function	4	3.10 "Discrete outputs" submenu	266
1.2 Target group	4	3.10.1 "Multiple DO" submenu	266
1.3 Using this document	4	3.11 "Application" submenu	275
1.3.1 Information on the document structure	4	3.11.1 "Totalizer 1 to n" submenu	275
1.3.2 Structure of a parameter description	6	3.11.2 "Viscosity" submenu	279
1.4 Symbols used	6	3.11.3 "Concentration" submenu	280
1.4.1 Symbols for certain types of information	6	3.12 "Diagnostics" submenu	280
1.4.2 Symbols in graphics	7	3.12.1 "Diagnostic list" submenu	283
1.5 Documentation	7	3.12.2 "Event logbook" submenu	287
1.5.1 Standard documentation	7	3.12.3 "Device information" submenu	289
1.5.2 Supplementary device-dependent documentation	7	3.12.4 "Mainboard module" submenu	294
2 Overview of the Expert operating menu	8	3.12.5 "Sens. electronic" submenu	295
3 Description of device parameters ...	11	3.12.6 "I/O module 1" submenu	296
3.1 "System" submenu	13	3.12.7 "I/O module 2" submenu	297
3.1.1 "Display" submenu	14	3.12.8 "Display module" submenu	298
3.1.2 "Configuration backup" submenu	27	3.12.9 "Min/max val." submenu	299
3.1.3 "Diagnostic handling" submenu	30	3.12.10 "Data logging" submenu	309
3.1.4 "Administration" submenu	45	3.12.11 "Heartbeat" submenu	318
3.2 "Sensor" submenu	50	3.12.12 "Simulation" submenu	318
3.2.1 "Measured val." submenu	51		
3.2.2 "System units" submenu	66		
3.2.3 "Process param." submenu	74		
3.2.4 "Measurement mode" submenu	82		
3.2.5 "External comp." submenu	84		
3.2.6 "Calculated value" submenu	87		
3.2.7 "Sensor adjustment" submenu	90		
3.2.8 "Calibration" submenu	97		
3.3 "I/O configuration" submenu	99		
3.4 "Input" submenu	101		
3.4.1 "Current input 1 to n" submenu	101		
3.4.2 "Status input 1 to n" submenu	104		
3.5 "Output" submenu	106		
3.5.1 "Current output 1 to n" submenu	107		
3.5.2 "Pulse/frequency/switch output 1 to n" submenu	121		
3.5.3 "Relay output 1 to n" submenu	142		
3.6 "Communication" submenu	148		
3.6.1 "Resource block" submenu	149		
3.6.2 "WLAN settings" submenu	170		
3.6.3 "Web server" submenu	176		
3.7 "Analog inputs" submenu	179		
3.7.1 "Analog input 1 to n" submenu	180		
3.8 "Discrete inputs" submenu	228		
3.8.1 "Discrete input 1 to n" submenu	229		
3.9 "Analog outputs" submenu	257		
3.9.1 "Multiple AO" submenu	257		
4 Country-specific factory settings ..	328		
4.1 SI units	328		
4.1.1 System units	328		
4.1.2 Full scale values	328		
4.1.3 Output current span	329		
4.1.4 Pulse value	329		
4.1.5 On value low flow cut off	329		
4.2 US units	330		
4.2.1 System units	330		
4.2.2 Full scale values	331		
4.2.3 Output current span	331		
4.2.4 Pulse value	331		
4.2.5 On value low flow cut off	332		
5 Explanation of abbreviated units ..	334		
5.1 SI units	334		
5.2 US units	334		
5.3 Imperial units	336		
Index	337		

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the **Expert** menu (→ 8), which is displayed when the "**Maintenance**" user role is enabled.

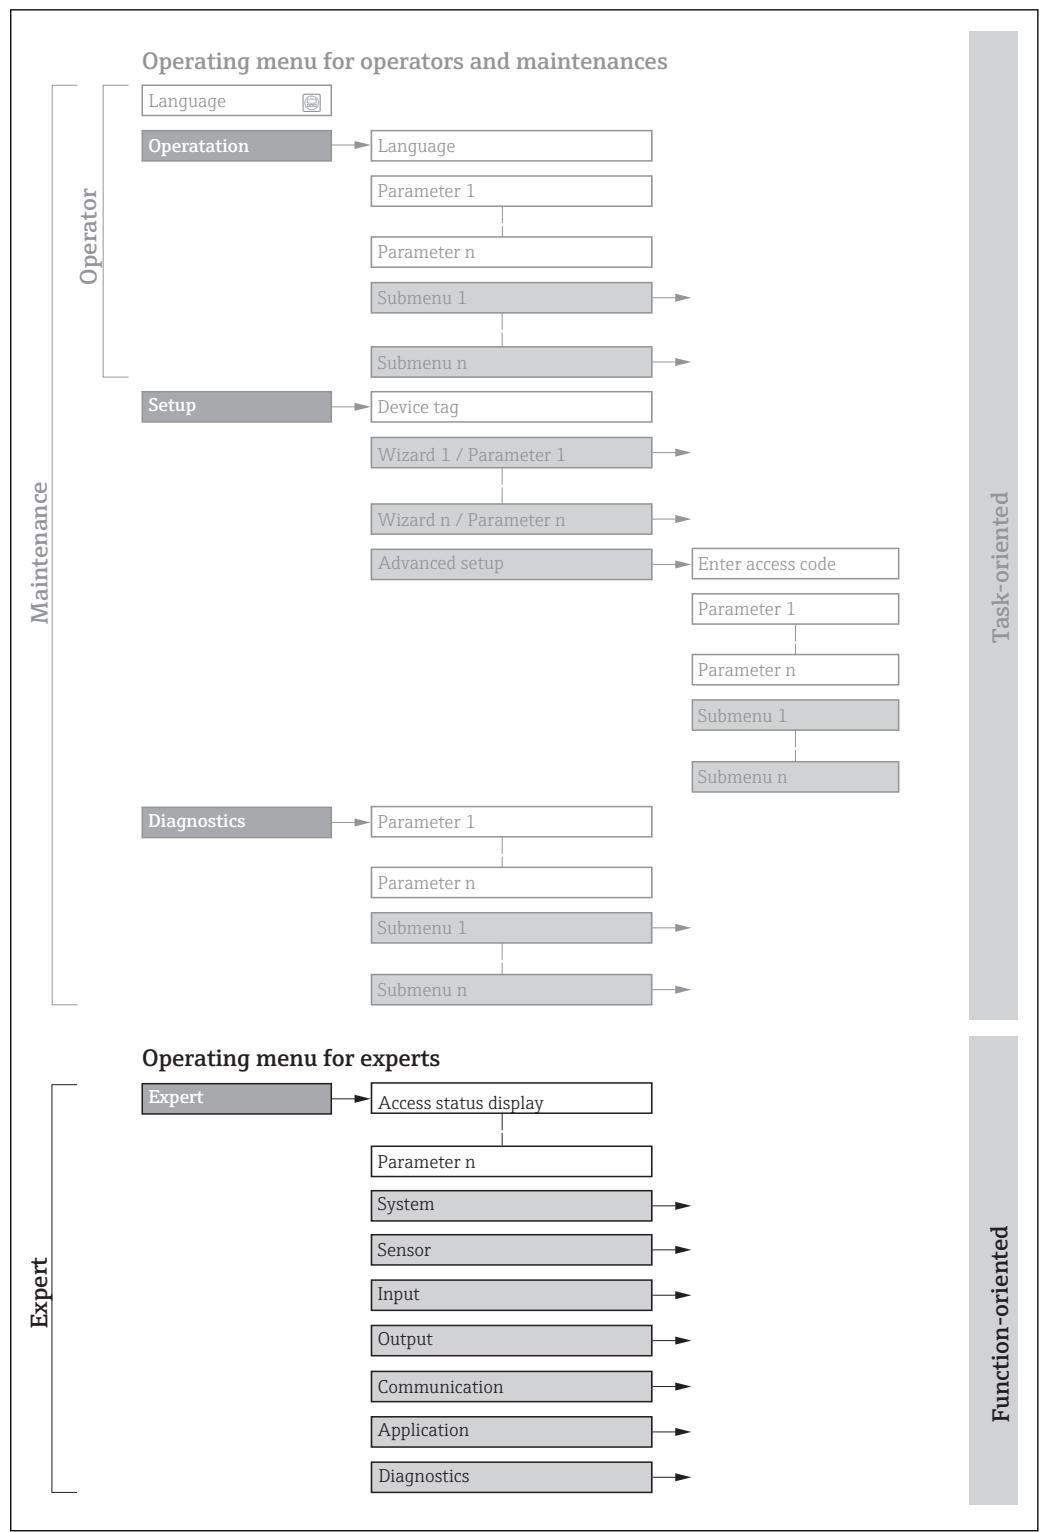

1 Sample graphic for the schematic layout of the operating menu



Additional information regarding:

- The arrangement of the parameters according to the menu structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu with a brief description: Operating Instructions → 7
- Operating concept of the operating menus: Operating Instructions → 7

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name

Write-protected parameter = 

Navigation



- Navigation path to the parameter via the local display (direct access code) or web browser
- Navigation path to the parameter via the operating tool
- The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.

Prerequisite

The parameter is only available under these specific conditions

Description

Description of the parameter function

Selection

List of the individual options for the parameter

- Option 1
- Option 2

User entry

Input range for the parameter

User interface

Display value/data for the parameter

Factory setting

Default setting ex works

Additional information

Additional explanations (e.g. in examples):

- On individual options
- On display values/data
- On the input range
- On the factory setting
- On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

1.5 Documentation

1.5.1 Standard documentation

Operating Instructions

Measuring device	Documentation code
Promass A 300 (8A3B**-...)	BA01515D
Promass A 300 (8A3C**-...)	BA01843D
Promass E 300	BA01517D
Promass F 300	BA01518D
Promass H 300	BA01519D
Promass I 300	BA01520D
Promass O 300	BA01521D
Promass P 300	BA01522D
Promass Q 300	BA01523D
Promass S 300	BA01524D
Promass X 300	BA01525D

1.5.2 Supplementary device-dependent documentation

Special documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD01665D
Heartbeat Technology	SD01696D
Concentration measurement	SD01706D
Petroleum	-
Viscosity measurement Promass I	SD01720D
Viscosity measurement Promass Q	SD01720D

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

⚡ Expert	
Direct access (0106)	→ ↗ 11
Locking status (0004)	→ ↗ 12
Access status (0005)	→ ↗ 13
Ent. access code (0003)	→ ↗ 13
▶ System	→ ↗ 13
▶ Display	→ ↗ 14
▶ Config. backup	→ ↗ 27
▶ Diagn. handling	→ ↗ 30
▶ Administration	→ ↗ 45
▶ Sensor	→ ↗ 50
▶ Measured val.	→ ↗ 51
▶ System units	→ ↗ 66
▶ Process param.	→ ↗ 74
▶ Measurement mode	→ ↗ 82
▶ External comp.	→ ↗ 84
▶ Calculated value	→ ↗ 87
▶ Sensor adjustm.	→ ↗ 90
▶ Calibration	→ ↗ 97
▶ I/O config.	→ ↗ 99
I/O 1 to n terminals (3902–1 to n)	→ ↗ 99
I/O 1 to n info (3906–1 to n)	→ ↗ 99

I/O 1 to n type (3901-1 to n)	→ 100
Apply I/O config (3907)	→ 100
Conversion code (2762)	→ 101
▶ Input	→ 101
▶ Current input 1 to n	→ 101
▶ Status input 1 to n	→ 104
▶ Output	→ 106
▶ Curr.output 1 to n	→ 107
▶ PFS output 1 to n	→ 121
▶ Relay output 1 to n	→ 142
▶ Communication	→ 148
Device address (11061)	→ 149
▶ Resource block	→ 149
▶ WLAN settings	→ 170
▶ Web server	→ 176
▶ Analog inputs	→ 179
▶ Analog input 1 to n	→ 180
▶ Discrete inputs	→ 228
▶ Discrete input 1 to n	→ 229
▶ Analog outputs	→ 257
▶ Multiple AO	→ 257
▶ Discrete outputs	→ 266
▶ Multiple DO	→ 266
▶ Application	→ 275
Reset all tot. (2806)	→ 275

▶ Totalizer 1 to n	→ 275
▶ Viscosity	→ 279
▶ Concentration	→ 280
▶ Diagnostics	→ 280
Actual diagnos. (0691)	→ 281
Prev.diagnostics (0690)	→ 282
Time fr. restart (0653)	→ 282
Operating time (0652)	→ 283
▶ Diagnostic list	→ 283
▶ Event logbook	→ 287
▶ Device info	→ 289
▶ Mainboard module	
▶ Sens. electronic	→ 295
▶ I/O module 1	→ 296
▶ I/O module 2	→ 297
▶ I/O module 3	→ 296
▶ I/O module 4	→ 296
▶ Display module	→ 298
▶ Min/max val.	→ 299
▶ Data logging	→ 309
▶ Heartbeat	→ 318
▶ Simulation	→ 318

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert	
Direct access (0106)	→ 11
Locking status (0004)	→ 12
Access status (0005)	→ 13
Ent. access code (0003)	→ 13
▶ System	→ 13
▶ Sensor	→ 50
▶ I/O config.	→ 99
▶ Input	→ 101
▶ Output	→ 106
▶ Communication	→ 148
▶ Analog inputs	→ 179
▶ Discrete inputs	→ 228
▶ Analog outputs	→ 257
▶ Discrete outputs	→ 266
▶ Application	→ 275
▶ Diagnostics	→ 280

Direct access



Navigation

Expert → Direct access (0106)

Description


Use this function to enter the access code to enable direct access to the desired parameter via the local display. A parameter number is assigned to each parameter for this purpose.

User entry

0 to 65 535

Additional information*User entry*

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

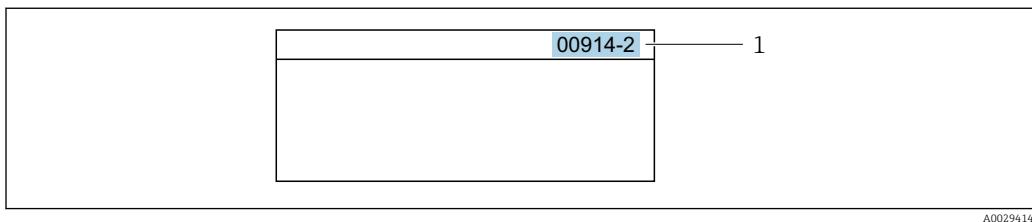

1 Direct access code

A0029414

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is accessed automatically.
Example: Enter 00914 → **Assign variable** parameter
- If a different channel is accessed: Enter the direct access code with the corresponding channel number.
Example: Enter 00914-2 → **Assign variable** parameter

Locking status

Navigation

Expert → Locking status (0004)

Description

Displays the active write protection.

User interface

- Hardware locked
- Temp. locked

Additional information*Display*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device →  7

Selection

Options	Description
None	The access status displayed in the Access status parameter (→  13) applies . Only appears on local display.
Hardware locked (priority 1)	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) .
Temp. locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

Access status


Navigation	  Expert → Access status (0005)
Description	Displays the access authorization to the parameters via the local display, Web browser or operating tool.
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance
Factory setting	Maintenance
Additional information	<p><i>Description</i></p> <p> Access authorization can be modified via the Ent. access code parameter (→  13).</p> <p> If additional write protection is active, this restricts the current access authorization even further.</p> <p><i>Display</i></p> <p> Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device →  7</p>

Ent. access code

Navigation	  Expert → Ent. access code (0003)
Description	Use this function to enter the user-specific release code to remove parameter write protection.
User entry	0 to 9 999

3.1 "System" submenu

Navigation   Expert → System

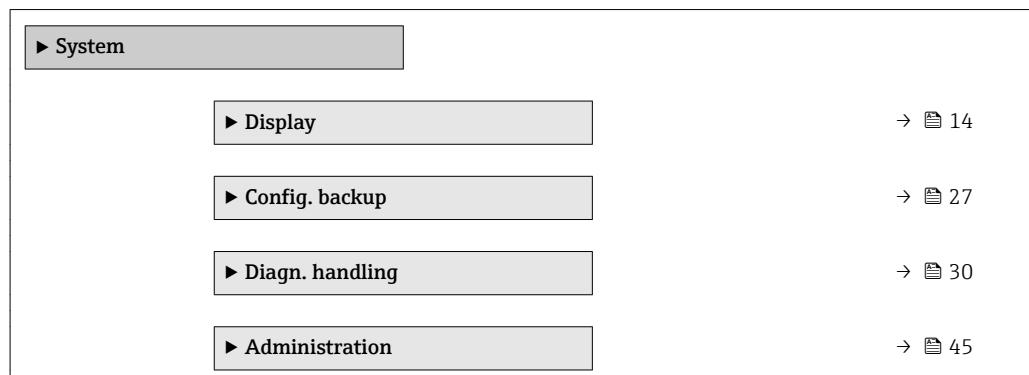

3.1.1 "Display" submenu

Navigation

Expert → System → Display

Item	Page
► Display	
Display language (0104)	→ 15
Format display (0098)	→ 15
Value 1 display (0107)	→ 18
0% bargraph 1 (0123)	→ 19
100% bargraph 1 (0125)	→ 20
Decimal places 1 (0095)	→ 20
Value 2 display (0108)	→ 20
Decimal places 2 (0117)	→ 21
Value 3 display (0110)	→ 21
0% bargraph 3 (0124)	→ 22
100% bargraph 3 (0126)	→ 22
Decimal places 3 (0118)	→ 23
Value 4 display (0109)	→ 23
Decimal places 4 (0119)	→ 24
Display interval (0096)	→ 24
Display damping (0094)	→ 25
Header (0097)	→ 25
Header text (0112)	→ 26
Separator (0101)	→ 26
Contrast display (0105)	→ 27
Backlight (0111)	→ 27

Display language

Navigation  Expert → System → Display → Display language (0104)

Prerequisite A local display is provided.

Description Use this function to select the configured language on the local display.

Selection

- English *
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык(Ru) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Viet) *
- čeština (Czech) *

Factory setting English (alternatively, the ordered language is preset in the device)

Format display

Navigation  Expert → System → Display → Format display (0098)

Prerequisite A local display is provided.

Description Use this function to select how the measured value is shown on the local display.

Selection

- 1 value, max.
- Bagr. + 1 value
- 2 values
- Val. large+2val.
- 4 values

Factory setting 1 value, max.

* Visibility depends on order options or device settings

Additional information*Description*


The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.




- The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 23) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured via the **Display interval** parameter (→ 24).

Possible measured values shown on the local display:


"1 value, max." option

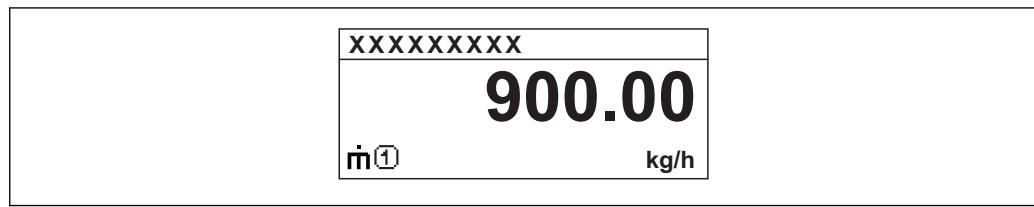


"Bagr. + 1 value" option

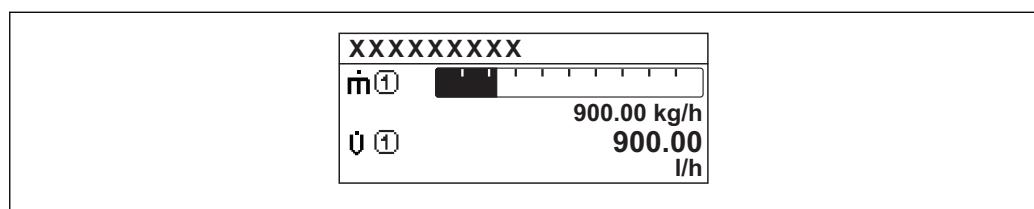


"2 values" option

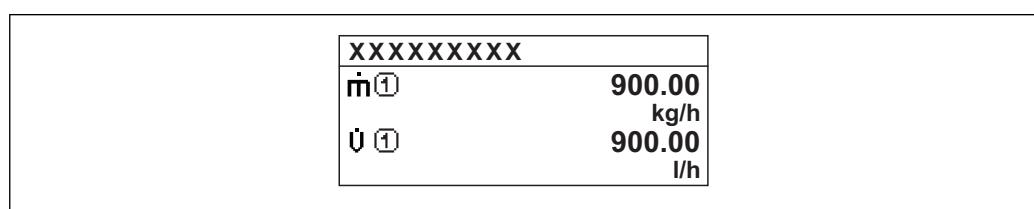

"Val. large+2val." option

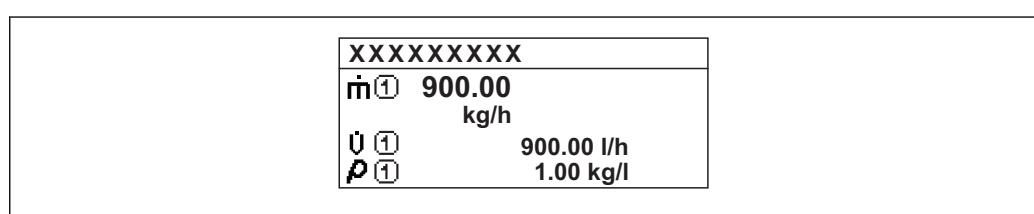

"4 values" option

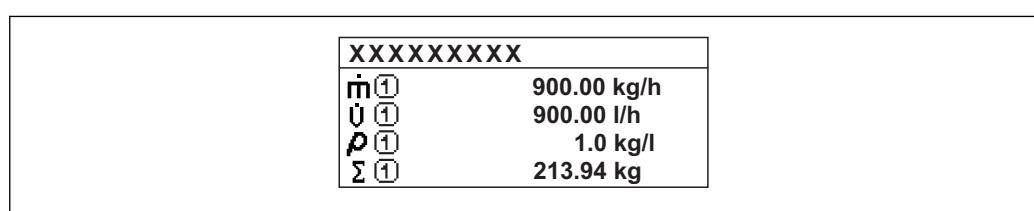

Value 1 display**Navigation**

Expert → System → Display → Value 1 display (0107)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl.
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Osc. ampl. 0 *
- Osc. ampl. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *
- HBSI *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Curr.output 1

Factory setting

Mass flow

* Visibility depends on order options or device settings

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Dependency

The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

Selection■ **Oscil. frequency** option

Displays the current oscillation frequency of the measuring tubes. This frequency depends on the density of the medium.

■ **Oscil. amplitude** option

Displays the relative oscillation amplitude of the measuring tubes in relation to the preset value. This value is 100 % under optimum conditions.

■ **Oscil. damping** option

Displays the current oscillation damping. Oscillation damping is an indicator of the sensor's current need for excitation power.

■ **Signal asymmetry** option

Displays the relative difference between the oscillation amplitude at the inlet and outlet of the sensor. The measured value is the result of production tolerances of the sensor coils and should remain constant over the life time of a sensor.

0% bargraph 1**Navigation**

Expert → System → Display → 0% bargraph 1 (0123)

Prerequisite

A local display is provided.

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 kg/h
- 0 lb/min

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

100% bargraph 1



Navigation

Expert → System → Display → 100% bargraph 1 (0125)

Prerequisite

A local display is provided.

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter → [328](#)

Additional information

Description

The **Format display** parameter (→ [15](#)) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ [66](#)).

Decimal places 1



Navigation

Expert → System → Display → Decimal places 1 (0095)

Prerequisite

A measured value is specified in the **Value 1 display** parameter (→ [18](#)).

Description

Use this function to select the number of decimal places for measured value 1.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information

Description

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 2 display



Navigation

Expert → System → Display → Value 2 display (0108)

Prerequisite

A local display is provided.

Description	Use this function to select one of the measured values to be shown on the local display.
Selection	For the picklist, see the Value 1 display parameter (→ 18)
Factory setting	None
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Dependency</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 66).</p>

Decimal places 2



Navigation	 Expert → System → Display → Decimal places 2 (0117)
Prerequisite	A measured value is specified in the Value 2 display parameter (→ 20).
Description	Use this function to select the number of decimal places for measured value 2.
Selection	<ul style="list-style-type: none"> <input type="checkbox"/> X <input type="checkbox"/> X.X <input type="checkbox"/> X.XX <input type="checkbox"/> X.XXX <input type="checkbox"/> X.XXXX
Factory setting	x.xx
Additional information	<p><i>Description</i></p> <p> This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.</p>

Value 3 display



Navigation	 Expert → System → Display → Value 3 display (0110)
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values to be shown on the local display.
Selection	For the picklist, see the Value 1 display parameter (→ 18)
Factory setting	None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

0% bargraph 3**Navigation**

  Expert → System → Display → 0% bargraph 3 (0124)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 21).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 kg/h
- 0 lb/min

Additional information*Description*

 The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

 The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

100% bargraph 3**Navigation**

  Expert → System → Display → 100% bargraph 3 (0126)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 21).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

0

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

Decimal places 3**Navigation**

Expert → System → Display → Decimal places 3 (0118)

Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 21).

Description

Use this function to select the number of decimal places for measured value 3.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 4 display**Navigation**

Expert → System → Display → Value 4 display (0109)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

For the picklist, see the **Value 1 display** parameter (→ 18)

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

Decimal places 4**Navigation**

 Expert → System → Display → Decimal places 4 (0119)

Prerequisite

A measured value is specified in the **Value 4 display** parameter (→ 23).

Description

Use this function to select the number of decimal places for measured value 4.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

 This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Display interval**Navigation**

 Expert → System → Display → Display interval (0096)

Prerequisite

A local display is provided.

Description

Use this function to enter the length of time the measured values are displayed if the values alternate on the display.

User entry

1 to 10 s

Factory setting

5 s

Additional information*Description*

This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.



- The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 23) are used to specify which measured values are shown on the local display.
- The display format of the displayed measured values is specified using the **Format display** parameter (→ 15).

Display damping**Navigation**

Expert → System → Display → Display damping (0094)

Prerequisite

A local display is provided.

Description

Use this function to enter a time constant for the reaction time of the local display to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

0.0 s

Additional information*User entry*

Use this function to enter a time constant (PT1 element¹⁾) for display damping:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.



Damping is switched off if **0** is entered (factory setting).

Header**Navigation**

Expert → System → Display → Header (0097)

Prerequisite

A local display is provided.

Description

Use this function to select the contents of the header of the local display.

Selection

- Device tag
- Free text


Factory setting

Device tag

Additional information*Description*

The header text only appears during normal operation.

1) proportional transmission behavior with first order delay

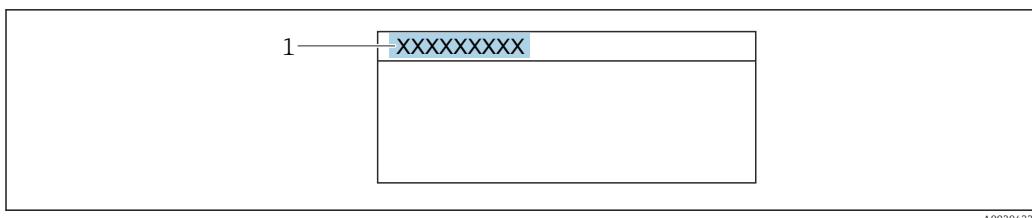

A0029422

1 Position of the header text on the display

Selection

- Device tag
Is defined in the **Device tag** parameter (→ 290).
- Free text
Is defined in the **Header text** parameter (→ 26).

Header text



Navigation

Expert → System → Display → Header text (0112)

Prerequisite

In the **Header** parameter (→ 25), the **Free text** option is selected.

Description

Use this function to enter a customer-specific text for the header of the local display.

User entry


Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Additional information

Description

The header text only appears during normal operation.

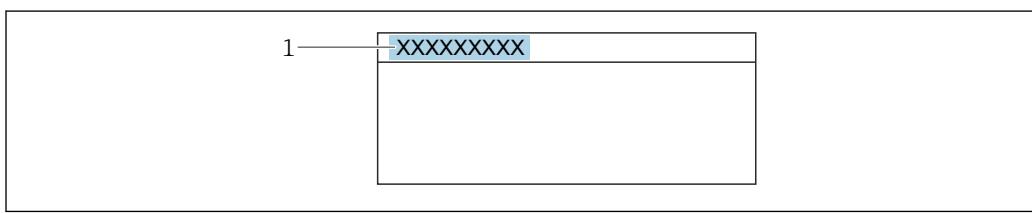

A0029422

1 Position of the header text on the display

User entry

The number of characters displayed depends on the characters used.

Separator



Navigation

Expert → System → Display → Separator (0101)

Prerequisite

A local display is provided.

Description Use this function to select the decimal separator.

Selection

- . (point)
- , (comma)

Factory setting . (point)

Contrast display

Navigation  Expert → System → Display → Contrast display (0105)

Prerequisite A local display is provided.

Description Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

User entry 20 to 80 %

Factory setting Depends on the display

Backlight

Navigation  Expert → System → Display → Backlight (0111)

Prerequisite One of the following conditions is met:

- Order code for "Display; operation", option **F** "4-line, illum.; touch control"
- Order code for "Display; operation", option **G** "4-line, illum.; touch control +WLAN"
- Order code for "Display; operation", option **O** "Separate 4-line display, illum.; 10m/30ft cable; touch control"

Description Use this function to switch the backlight of the local display on and off.

Selection

- Disable
- Enable

Factory setting Enable

3.1.2 "Configuration backup" submenu

Navigation

 Expert → System → Config. backup

► Config. backup

Operating time

→  28

Last backup	→ 28
Config. managem.	→ 28
Backup state	→ 29
Compar. result	→ 29

Operating time

Navigation Expert → System → Config. backup → Operating time (0652)

Description Use this function to display the length of time the device has been in operation.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

Last backup

Navigation Expert → System → Config. backup → Last backup (2757)

Description Displays the time since a backup copy of the data was last saved to the device memory.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Config. managem.



Navigation Expert → System → Config. backup → Config. managem. (2758)

Description Use this function to select an action to save the data to the device memory.

Selection

- Cancel
- Execute backup
- Restore
- Compare
- Clear backup

Factory setting Cancel

Additional information*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device. The following message appears on local display: Backup active, please wait!
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. The following message appears on local display: Restore active! Do not interrupt power supply!
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. The following message appears on local display: Comparing files The result can be viewed in Compar. result parameter.
Clear backup	The backup copy of the device configuration is deleted from the memory of the device. The following message appears on local display: Deleting file

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

Backup state**Navigation**
 Expert → System → Config. backup → Backup state (2759)
Description

Displays the status of the data backup process.

User interface

- None
- Backup in progr.
- Restore in progr
- Delete in progr.
- Comp. in progr.
- Restoring failed
- Backup failed

Factory setting

None

Compar. result**Navigation**
 Expert → System → Config. backup → Compar. result (2760)
Description

Displays the last result of the comparison of the data records in the device memory and in the HistoROM.

User interface

- Set. identical
- Set. not ident.
- No backup

- Backup corrupt
- Check not done
- Dataset incomp.

Factory setting Check not done

Additional information *Description*

i The comparison is started via the **Compare** option in the **Config. managem.** parameter (→ 28).

Selection

Options	Description
Set. identical	The current device configuration of the HistoROM is identical to the backup copy in the device memory. If the transmitter configuration of another device has been transmitted to the device via HistoROM in the Config. managem. parameter, the current device configuration of the HistoROM is only partially identical to the backup copy in the device memory: The settings for the transmitter are not identical.
Set. not ident.	The current device configuration of the HistoROM is not identical to the backup copy in the device memory.
No backup	There is no backup copy of the device configuration of the HistoROM in the device memory.
Backup corrupt	The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the device memory.
Check not done	The device configuration of the HistoROM has not yet been compared to the backup copy in the device memory.
Dataset incomp.	The backup copy in the device memory is not compatible with the device.


HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.1.3 "Diagnostic handling" submenu

Navigation

Expert → System → Diagn. handling

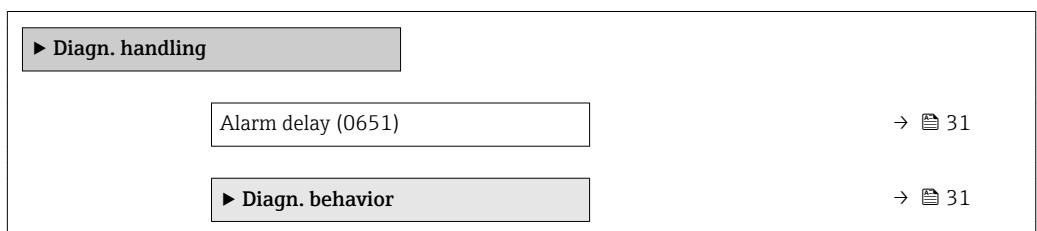

Alarm delay**Navigation**

Expert → System → Diagn. handling → Alarm delay (0651)

Description

Use this function to enter the time interval until the device generates a diagnostic message.



The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting

0 s

Additional information*Result*

This setting affects the following diagnostic messages:

- 046 Sensor limit
- 140 Sensor sig.asym.
- 144 MeasErrorTooHigh
- 830 Sensor temp.
- 831 Sensor temp.
- 832 Electronic temp.
- 833 Electronic temp.
- 834 Process temp.
- 835 Process temp.
- 843 Process limit
- 862 Partly filled
- 912 Medium inhomog.
- 913 Medium unsuitab.
- 944 MonitoringFailed

"Diagnostic behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagn. behavior** submenu (→ 31).

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Options	Description
Alarm	The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Options	Description
Logbook only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (→ 287) (Event list submenu (→ 288)) and is not displayed in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

 Assignment of the status of a diagnostic event.

The following options are available in the **Assign status of diagnostic no. xxx** parameters:

- Bad
The status of the input value (PV) is Bad.
- Uncertain
The status of the input value (PV) is Uncertain.
- Good
The status of the input value (PV) is Good.

 For a list of all the diagnostic events, see the Operating Instructions for the device
→ 7

Navigation

 Expert → System → Diagn. handling → Diagn. behavior

► Diagn. behavior	
Diagnostic no. 046 (0709)	→ 33
Diagnostic no. 140 (0708)	→ 34
Diagnostic no. 144 (0731)	→ 34
Diagnostic no. 374 (0710)	→ 35
Diagnostic no. 441 (0657)	→ 35
Diagnostic no. 442 (0658)	→ 35
Diagnostic no. 443 (0659)	→ 36
Diagnostic no. 444 (0740)	→ 36
Diagnostic no. 830 (0800)	→ 36
Diagnostic no. 831 (0641)	→ 37
Diagnostic no. 832 (0681)	→ 37
Diagnostic no. 833 (0682)	→ 38
Diagnostic no. 834 (0700)	→ 38
Diagnostic no. 835 (0702)	→ 38

Diagnostic no. 862 (0679)	→ 39
Diagnostic no. 912 (0703)	→ 39
Diagnostic no. 913 (0712)	→ 39
Diagnostic no. 944 (0732)	→ 40
Diagnostic no. 948 (0744)	→ 40
Status diag. 046 (11042)	→ 40
Status diag. 140 (11041)	→ 41
Status diag. 144 (11016)	→ 41
Status diag. 374 (11000)	→ 41
Status diag. 830 (11006)	→ 42
Status diag. 831 (11007)	→ 42
Status diag. 832 (11002)	→ 42
Status diag. 833 (11003)	→ 43
Status diag. 834 (11004)	→ 43
Status diag. 835 (11005)	→ 43
Status diag. 862 (11008)	→ 44
Status diag. 912 (11009)	→ 44
Status diag. 913 (11010)	→ 44
Status diag. 944 (11014)	→ 45
Status diag. 948 (11011)	→ 45

Diagnostic no. 046 (Sensor limit)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 046 (0709)

Description

Option for changing the diagnostic behavior of the diagnostic message **046 Sensor limit**.

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Alarm
Additional information	 Detailed description of the options available for selection: → 31

Diagnostic no. 140 (Sensor sig.asym.)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 140 (0708)
Description	Option for changing the diagnostic behavior of the diagnostic message 140 Sensor sig.asym..
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Alarm
Additional information	 Detailed description of the options available for selection: → 31

Diagnostic no. 144 (MeasErrorTooHigh)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 144 (0731)
Description	Option for changing the diagnostic behavior of the diagnostic message 144 MeasErrorTooHigh.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Alarm
Additional information	 Detailed description of the options available for selection: → 31

Diagnostic no. 374 (Sensor electron.)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 374 (0710)
Description	Option for changing the diagnostic behavior of the diagnostic message 374 Sensor electron. .
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Diagnostic no. 441 (Curr.output 1 to n)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 441 (0657)
Description	Option for changing the diagnostic behavior of the diagnostic message 441 Curr.output 1 to n .
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Diagnostic no. 442 (Freq. output 1 to n)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 442 (0658)
Prerequisite	The measuring device has a pulse/frequency/switch output.
Description	Option for changing the diagnostic behavior of the diagnostic message 442 Freq. output 1 to n .
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook only
Factory setting	Warning

Additional information

Detailed description of the options available for selection: → [31](#)

Diagnostic no. 443 (Pulse output 1 to n)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 443 (0659)

Prerequisite

The measuring device has a pulse/frequency/switch output.

Description

Option for changing the diagnostic behavior of the diagnostic message **443 Pulse output 1 to n**.

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → [31](#)

Diagnostic no. 444 (Current input 1 to n)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 444 (0740)

Prerequisite

The device has one current input.

Description

Option for changing the diagnostic behavior of the diagnostic message **444 Current input 1 to n**.

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → [31](#)

Diagnostic no. 830 (Sensor temp.)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 830 (0800)

Description

Option for changing the diagnostic behavior of the diagnostic message **830 Sensor temp..**

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	---

Diagnostic no. 831 (Sensor temp.)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 831 (0641)
-------------------	---

Description	Option for changing the diagnostic behavior of the diagnostic message 831 Sensor temp. .
--------------------	---

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	---

Diagnostic no. 832 (Electronic temp.)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832 (0681)
-------------------	---

Description	Option for changing the diagnostic behavior of the diagnostic message 832 Electronic temp. .
--------------------	---

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook only
------------------	--

Factory setting	Logbook only
------------------------	--------------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	---

Diagnostic no. 833 (Electronic temp.)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833 (0682)

Description

Option for changing the diagnostic behavior of the diagnostic message **833 Electronic temp..**

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting

Logbook only

Additional information

Detailed description of the options available for selection: → 31

Diagnostic no. 834 (Process temp.)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834 (0700)

Description

Option for changing the diagnostic behavior of the diagnostic message **834 Process temp..**

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → 31

Diagnostic no. 835 (Process temp.)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835 (0702)

Description

Option for changing the diagnostic behavior of the diagnostic message **835 Process temp..**

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → 31

Diagnostic no. 862 (Empty pipe)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 862 (0679)
Description	Option for changing the diagnostic behavior of the diagnostic message 862 Empty pipe .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Diagnostic no. 912 (Medium inhomog.)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 912 (0703)
Description	Option for changing the diagnostic behavior of the diagnostic message 912 Medium inhomog..
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Diagnostic no. 913 (Medium unsuitab.)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 913 (0712)
Description	Option for changing the diagnostic behavior of the diagnostic message 913 Medium unsuitab..
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Diagnostic no. 944 (MonitoringFailed)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 944 (0732)
Description	Option for changing the diagnostic behavior of the diagnostic message 944 MonitoringFailed .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Diagnostic no. 948 (Oscill. damping)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 948 (0744)
Description	Option for changing the diagnostic behavior of the diagnostic message 948 Oscill. damping .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Status diag. 046 (Sensor limit)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Status diag. 046 (11042)
Description	Use this function to change the status of diagnostic message 046 Sensor limit .
Selection	<ul style="list-style-type: none">▪ Bad▪ Uncertain▪ Good
Factory setting	Uncertain
Additional information	Detailed description of the options available for selection: → 32

Status diag. 140 (Sensor sig.asym.)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 140 (11041)
Description	Use this function to change the status of diagnostic message 140 Sensor sig.asym..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Bad
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 144 (MeasErrorTooHigh)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 144 (11016)
Description	Use this function to change the status of diagnostic message 144 MeasErrorTooHigh..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 374 (Sensor electron.)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 374 (11000)
Description	Use this function to change the status of diagnostic message △S374 Sensor electron..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 830 (Sensor temp.)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 830 (11006)
Description	Use this function to change the status of diagnostic message 830 Sensor temp..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 831 (Sensor temp.)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 831 (11007)
Description	Use this function to change the status of diagnostic message 831 Sensor temp..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 832 (Electronic temp.)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 832 (11002)
Description	Option for changing the status of the diagnostic message 832 Electronic temp..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 833 (Electronic temp.)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 833 (11003)
Description	Option for changing the status of the diagnostic message 833 Electronic temp..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 834 (Process temp.)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 834 (11004)
Description	Use this function to change the status of diagnostic message 834 Process temp..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 835 (Process temp.)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 835 (11005)
Description	Use this function to change the status of diagnostic message 835 Process temp..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 862 (Empty pipe)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 862 (11008)
Description	Use this function to change the status of diagnostic message 862 Empty pipe .
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 912 (Medium inhomog.)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 912 (11009)
Description	Use this function to change the status of diagnostic message 912 Medium inhomog..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 913 (Medium unsuitab.)

Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 913 (11010)
Description	Use this function to change the status of diagnostic message 913 Medium unsuitab..
Selection	<ul style="list-style-type: none">■ Bad■ Uncertain■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: →  32

Status diag. 944 (MonitoringFailed)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 944 (11014)
Description	Use this function to change the status of diagnostic message 944 MonitoringFailed .
Selection	<ul style="list-style-type: none"> ■ Bad ■ Uncertain ■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: → 32

Status diag. 948 (Oscill. damping)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 948 (11011)
Description	Use this function to change the status of diagnostic message 948 Oscill. damping .
Selection	<ul style="list-style-type: none"> ■ Bad ■ Uncertain ■ Good
Factory setting	Uncertain
Additional information	 Detailed description of the options available for selection: → 32

3.1.4 "Administration" submenu

Navigation  Expert → System → Administration

 Administration	
 Def. access code	→ 46
 Reset acc. code	→ 47
Device reset (0000)	→ 48
Activate SW opt. (0029)	→ 48
SW option overv. (0015)	→ 49

"Def. access code" wizard


i The **Def. access code** wizard (→ 46) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Def. access code** parameter can be found directly in the **Administration** submenu. There is no **Confirm code** parameter if the device is operated via the operating tool.

Navigation



Expert → System → Administration → Def. access code

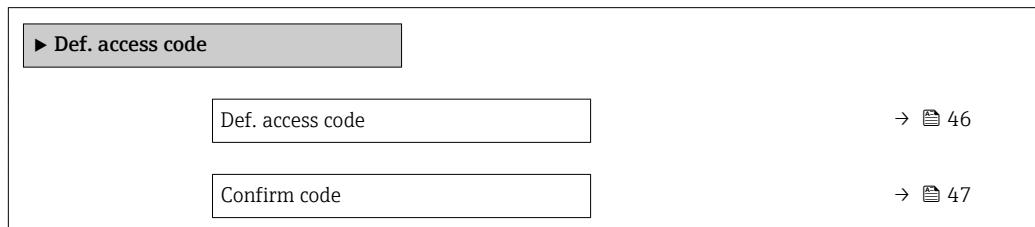

Def. access code



Navigation

Expert → System → Administration → Def. access code → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the device configuration against any inadvertent modifications via the local display, Web browser, FieldCare or DeviceCare (via CDI-RJ45 service interface).

User entry

Max. 16-digit character string comprising numbers, letters and special characters

Additional information

Description

The write protection affects all parameters in the document marked with the symbol.

On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

i Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Ent. access code** parameter (→ 13).

i If you lose the access code, please contact your Endress+Hauser sales organization.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Confirm code

Navigation Expert → System → Administration → Def. access code → Confirm code

Description Enter the defined release code a second time to confirm the release code.

User entry Max. 16-digit character string comprising numbers, letters and special characters

"Reset access code" submenu

Navigation Expert → System → Administration → Reset acc. code

► Reset acc. code

Operating time (0652)

→ 47

Reset acc. code (0024)

→ 47

Operating time

Navigation Expert → System → Administration → Reset acc. code → Operating time (0652)

Description Use this function to display the length of time the device has been in operation.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

Reset acc. code

Navigation Expert → System → Administration → Reset acc. code → Reset acc. code (0024)

Description Use this function to enter a reset code to reset the user-specific release code to the factory setting.

User entry Character string comprising numbers, letters and special characters

Factory setting 0x00

Additional information*Description*

For a reset code, contact your Endress+Hauser service organization.

User entry

The reset code can only be entered via:

- Web browser
- DeviceCare, FieldCare (via interface CDI RJ45)
- Fieldbus

Additional parameters in the "Administration" submenu**Device reset****Navigation**

Expert → System → Administration → Device reset (0000)

Description

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To delivery set.
- Restart device
- ENP restart

Factory setting

Cancel

Additional information*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery set.	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
ENP restart	The parameters of the electronic name plate are reset. The device is restarted.

Activate SW opt.**Navigation**

Expert → System → Administration → Activate SW opt. (0029)

Description

Use this function to enter an activation code to enable an additional, ordered software option.

User entry	Max. 10-digit string consisting of numbers.
Factory setting	Depends on the software option ordered
Additional information	<p><i>Description</i></p> <p>If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.</p> <p><i>User entry</i></p> <p> To activate a software option subsequently, please contact your Endress+Hauser sales organization.</p> <p>NOTE!</p> <p>The activation code is linked to the serial number of the measuring device and varies according to the device and software option.</p> <p>If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.</p> <ul style="list-style-type: none"> ▶ Before you enter a new activation code, make a note of the current activation code . ▶ Enter the new activation code provided by Endress+Hauser when the new software option was ordered. ▶ Once the activation code has been entered, check if the new software option is displayed in the SW option overv. parameter (→ 49). ↳ The new software option is active if it is displayed. ↳ If the new software option is not displayed or all software options have been deleted, the code entered was either incorrect or invalid. ▶ If the code entered is incorrect or invalid, enter the old activation code . ▶ Have your Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again. <p><i>Example for a software option</i></p> <p>Order code for "Application package", option EA "Extended HistoROM"</p> <p> The software options currently enabled are displayed in the SW option overv. parameter (→ 49).</p> <p><i>Web browser</i></p> <p> Once a software option has been activated, the page must be loaded again in the Web browser.</p>

SW option overv.

Navigation	 Expert → System → Administration → SW option overv. (0015)
Description	Displays all the software options that are enabled in the device.
User interface	<ul style="list-style-type: none"> ▪ Extend. HistoROM ▪ HBT Verification ▪ HBT Monitoring ▪ Concentration ▪ Viscosity

Additional information**Description**

Displays all the options that are available if ordered by the customer.

"Extend. HistoROM" option

Order code for "Application package", option **EA** "Extended HistoROM"

"HBT Verification" option and "HBT Monitoring" option

Order code for "Application package", option **EB** "Heartbeat Verification + Monitoring"

"Concentration" option

Order code for "Application package", option **ED** "Concentration" and option **EE** "Special density"

"Viscosity" option

 Only available for Promass I.

Order code for "Application package", option **EG** "Viscosity"

3.2 "Sensor" submenu

Navigation

  Expert → Sensor

 Sensor	
 Measured val.	→  51
 System units	→  66
 Process param.	→  74
 Measurement mode	→  82
 External comp.	→  84
 Calculated value	→  87
 Sensor adjustm.	→  90
 Calibration	→  97

3.2.1 "Measured val." submenu

Navigation

Expert → Sensor → Measured val.

► Measured val.	
► Process variab.	→ 51
► Totalizer	→ 59
► Input values	→ 60
► Output values	→ 62

"Process variab." submenu

Navigation

Expert → Sensor → Measured val. → Process variab.

► Process variab.	
Mass flow (1838)	→ 52
Volume flow (1847)	→ 52
Correct.vol.flow (1851)	→ 52
Density (1850)	→ 53
Ref.density (1852)	→ 53
Temperature (1853)	→ 53
Pressure value (6129)	→ 54
Dynam. viscosity (1854)	→ 54
Kinematic visc. (1857)	→ 54
TempCompDynVisc (1872)	→ 55
TempCompKinVisc (1863)	→ 55
Concentration (1887)	→ 55
Target mass flow (1864)	→ 56
Carrier mass fl. (1865)	→ 56
Targ.corr.vol.fl (1893)	→ 57

Carr.corr.vol.fl (1894)	→ 57
Target vol. flow (1895)	→ 58
Carrier vol. fl. (1896)	→ 58

Mass flow

Navigation Expert → Sensor → Measured val. → Process variab. → Mass flow (1838)

Description Displays the mass flow that is currently measured.

User interface Signed floating-point number

Additional information *Dependency*

The unit is taken from the **Mass flow unit** parameter (→ 66)

Volume flow

Navigation Expert → Sensor → Measured val. → Process variab. → Volume flow (1847)

Description Displays the volume flow currently calculated.

User interface Signed floating-point number

Additional information *Description*

The volume flow is calculated from the mass flow currently measured and the density currently measured.

Dependency

The unit is taken from the **Volume flow unit** parameter (→ 68)

Correct.vol.flow

Navigation Expert → Sensor → Measured val. → Process variab. → Correct.vol.flow (1851)

Description Displays the corrected volume flow currently measured.

User interface Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Cor.volflow unit** parameter (→ [69](#))

Density**Navigation**

Expert → Sensor → Measured val. → Process variab. → Density (1850)

Description

Displays the density currently measured.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Density unit** parameter (→ [71](#))

Ref.density**Navigation**

Expert → Sensor → Measured val. → Process variab. → Ref.density (1852)

Description

Displays the reference density currently calculated.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Ref. dens. unit** parameter (→ [71](#))

Temperature**Navigation**

Expert → Sensor → Measured val. → Process variab. → Temperature (1853)

Description

Displays the medium temperature currently measured.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Temperature unit** parameter (→ [72](#))

Pressure value

Navigation	 Expert → Sensor → Measured val. → Process variab. → Pressure value (6129)
Description	Displays the fixed or external pressure value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Pressure unit parameter (→  73)

Dynam. viscosity

Navigation	 Expert → Sensor → Measured val. → Process variab. → Dynam. viscosity (1854)
Prerequisite	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the SW option overv. parameter (→  49).
Description	Displays the dynamic viscosity currently calculated.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Dyn. visc. unit parameter.

Kinematic visc.

Navigation	 Expert → Sensor → Measured val. → Process variab. → Kinematic visc. (1857)
Prerequisite	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the SW option overv. parameter (→  49).
Description	Displays the kinematic viscosity currently calculated.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Kin. visc. unit parameter (0578).

TempCompDynVisc

Navigation	  Expert → Sensor → Measured val. → Process variab. → TempCompDynVisc (1872)
Prerequisite	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the SW option overv. parameter (→  49).
Description	Displays the temperature compensation currently calculated for the viscosity.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Dyn. visc. unit parameter.

TempCompKinVisc

Navigation	  Expert → Sensor → Measured val. → Process variab. → TempCompKinVisc (1863)
Prerequisite	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the SW option overv. parameter (→  49).
Description	Displays the temperature compensation currently calculated for the kinetic viscosity.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Kin. visc. unit parameter (0578).

Concentration

Navigation	  Expert → Sensor → Measured val. → Process variab. → Concentration (1887)
Prerequisite	For the following order code: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the SW option overv. parameter (→  49).
Description	Displays the concentration currently calculated.
User interface	Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Concentr. unit** parameter (0613).

Target mass flow

Navigation

Expert → Sensor → Measured val. → Process variab. → Target mass flow (1864)

Prerequisite

With the following conditions:

Order code for "Application package", option **ED** "Concentration"



The software options currently enabled are displayed in the **SW option overv.** parameter (→ 49).

Description

Displays the mass flow currently measured for the target medium.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Mass flow unit** parameter (→ 66)

Carrier mass fl.

Navigation

Expert → Sensor → Measured val. → Process variab. → Carrier mass fl. (1865)

Prerequisite

With the following conditions:

Order code for "Application package", option **ED** "Concentration"



The software options currently enabled are displayed in the **SW option overv.** parameter (→ 49).

Description

Displays the mass flow currently measured for the carrier medium.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Mass flow unit** parameter (→ 66)

Targ.corr.vol.fl

Navigation	  Expert → Sensor → Measured val. → Process variab. → Targ.corr.vol.fl (1893)
Prerequisite	With the following conditions: <ul style="list-style-type: none">▪ Order code for "Application package", option ED "Concentration"▪ In the Liquid type parameter, the Ethanol in water option or %mass / %volume option is selected. <p> The software options currently enabled are displayed in the SW option overv. parameter (→  49).</p>
Description	Displays the corrected volume flow currently measured for the target fluid.
User interface	Signed floating-point number
Additional information	<i>Dependency</i> <p> The unit is taken from the Volume flow unit parameter (→  68)</p>

Carr.corr.vol.fl

Navigation	  Expert → Sensor → Measured val. → Process variab. → Carr.corr.vol.fl (1894)
Prerequisite	With the following conditions: <ul style="list-style-type: none">▪ Order code for "Application package", option ED "Concentration"▪ In the Liquid type parameter, the Ethanol in water option or %mass / %volume option is selected. <p> The software options currently enabled are displayed in the SW option overv. parameter (→  49).</p>
Description	Displays the corrected volume flow currently measured for the carrier fluid.
User interface	Signed floating-point number
Additional information	<i>Dependency</i> <p> The unit is taken from the Volume flow unit parameter (→  68)</p>

Target vol. flow

Navigation   Expert → Sensor → Measured val. → Process variab. → Target vol. flow (1895)

Prerequisite

With the following conditions:

- Order code for "Application package", option **ED** "Concentration"
- The **Ethanol in water** option or **%mass / %volume** option is selected in the **Liquid type** parameter.
- The **%vol** option is selected in the **Concentr. unit** parameter.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  49).

Description

Displays the volume flow currently measured for the target medium.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Volume flow unit** parameter (→  68)

Carrier vol. fl.

Navigation   Expert → Sensor → Measured val. → Process variab. → Carrier vol. fl. (1896)

Prerequisite

With the following conditions:

- Order code for "Application package", option **ED** "Concentration"
- The **Ethanol in water** option or **%mass / %volume** option is selected in the **Liquid type** parameter.
- The **%vol** option is selected in the **Concentr. unit** parameter.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  49).

Description

Use this function to display the volume flow currently measured for the carrier medium.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Volume flow unit** parameter (→  68)

"Totalizer" submenu***Navigation***

Diagram: Expert → Sensor → Measured val. → Totalizer

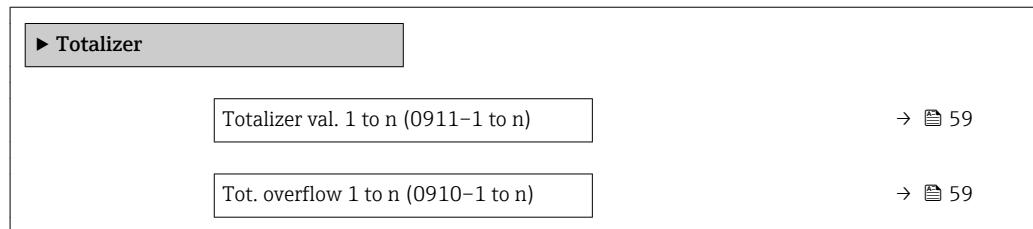
**Totalizer val. 1 to n*****Navigation***

Diagram: Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to n (0911-1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 276) of the **Totalizer 1 to n** submenu.

Description

Displays the current totalizer reading.

User interface

Signed floating-point number

Additional information*Description*

As it is only possible to display a maximum of 7 digits in the operating tool, the current counter value is the sum of the totalizer value and the overflow value from the **Tot. overflow 1 to n** parameter if the display range is exceeded.

i In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter (→ 279).

User interface

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Operation mode** parameter (→ 277).

i The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 276).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer val. 1** parameter: 1 968 457 m³
- Value in the **Tot. overflow 1** parameter: $1 \cdot 10^7$ (1 overflow) = 10 000 000 [m³]
- Current totalizer reading: 11 968 457 m³

Tot. overflow 1 to n***Navigation***

Diagram: Expert → Sensor → Measured val. → Totalizer → Tot. overflow 1 to n (0910-1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 276) of the **Totalizer 1 to n** submenu.

Description Displays the current totalizer overflow.

User interface Integer with sign

Additional information

Description

If the current totalizer reading exceeds 7 digits, which is the maximum value range that can be displayed by the operating tool, the value above this range is output as an overflow. The current totalizer value is therefore the sum of the overflow value and the totalizer value from the **Totalizer val. 1 to n** parameter.

User interface

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 276).

Example


Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer val. 1** parameter: 1968457 m³
- Value in the **Tot. overflow 1** parameter: $2 \cdot 10^7$ (2 overflows) = 20 000 000 [m³]
- Current totalizer reading: 21968457 m³

"Input values" submenu

Navigation


Expert → Sensor → Measured val. → Input values

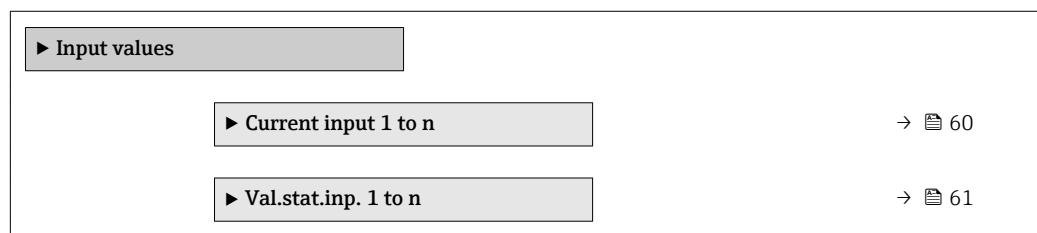

"Current input 1 to n" submenu

Navigation

Expert → Sensor → Measured val. → Input values → Current input 1 to n

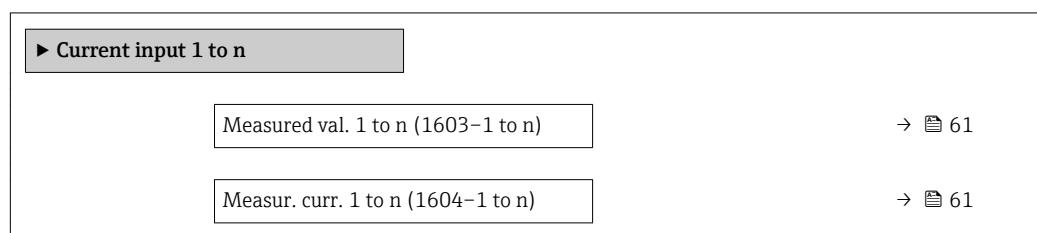

Measured val.

Navigation  Expert → Sensor → Measured val. → Input values → Current input 1 to n
→ Measured val. 1 to n (1603–1 to n)

Description Displays the current input value.

User interface Signed floating-point number

Measur. curr.

Navigation  Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measur. curr. 1 to n (1604–1 to n)

Description Displays the current value of the current input.

User interface 0 to 22.5 mA

"Value status input 1 to n" submenu

Navigation   Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n

► Val.stat.inp. 1 to n

Val.stat.inp. (1353–1 to n)

→  61

Val.stat.inp.

Navigation  Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n
→ Val.stat.inp. (1353–1 to n)


Description Displays the current input signal level.

User interface ■ High
■ Low

"Output values" submenu


Navigation

Expert → Sensor → Measured val. → Output values

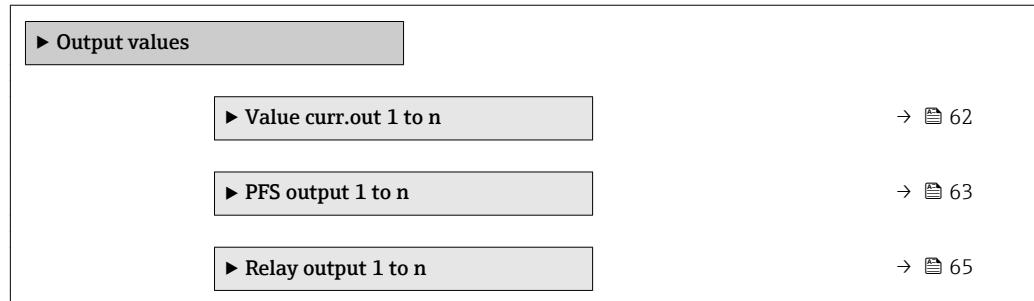**"Value current output 1 to n" submenu**

Navigation

Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n

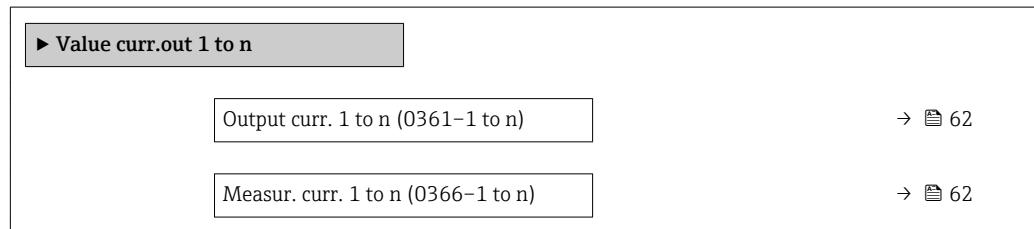**Output curr.****Navigation**

- ④ Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Output curr. 1 to n (0361-1 to n)
- ④ Expert → Output → Curr.output 1 to n → Output curr. 1 to n (0361-1 to n)
- ④ Diagnostics → Measured val. → Output values → Curr.output 1 to n → Output curr. 1 to n (0361-1 to n)

Description

Displays the current value currently calculated for the current output.

User interface

0 to 22.5 mA

Measur. curr.**Navigation**

- ④ Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Measur. curr. 1 to n (0366-1 to n)
- ④ Expert → Output → Curr.output 1 to n → Measur. curr. 1 to n (0366-1 to n)
- ④ Diagnostics → Measured val. → Output values → Curr.output 1 to n → Measur. curr. 1 to n (0366-1 to n)


Description

Use this function to display the actual measured value of the output current.

User interface 0 to 30 mA

"Pulse/frequency/switch output 1 to n" submenu

Navigation Expert → Sensor → Measured val. → Output values → PFS output 1 to n

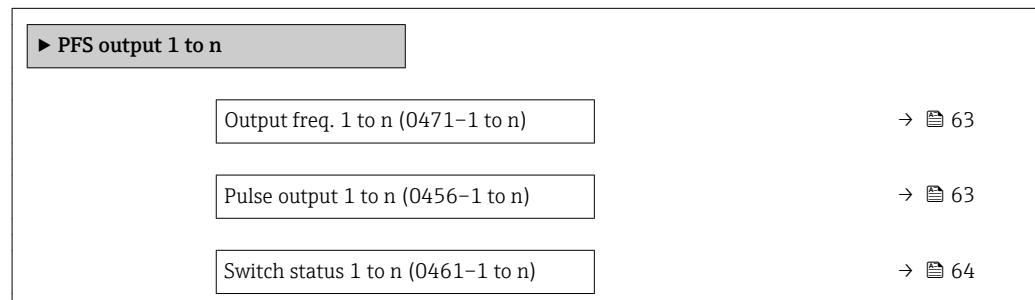

Output freq.

Navigation Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Output freq. 1 to n (0471-1 to n)
 Expert → Output → PFS output 1 to n → Output freq. 1 to n (0471-1 to n)
 Diagnostics → Measured val. → Output values → PFS output 1 to n → Output freq. 1 to n (0471-1 to n)

Prerequisite In the **Operating mode** parameter (→ [123](#)), the **Frequency** option is selected.

Description Displays the actual value of the output frequency which is currently measured.

User interface 0.0 to 12 500.0 Hz

Pulse output

Navigation Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Pulse output 1 to n (0456-1 to n)
 Expert → Output → PFS output 1 to n → Pulse output 1 to n (0456-1 to n)
 Diagnostics → Measured val. → Output values → PFS output 1 to n → Pulse output 1 to n (0456-1 to n)


Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→ [123](#)) parameter.

Description Displays the pulse frequency currently output.

User interface Positive floating-point number

Additional information**Description**

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

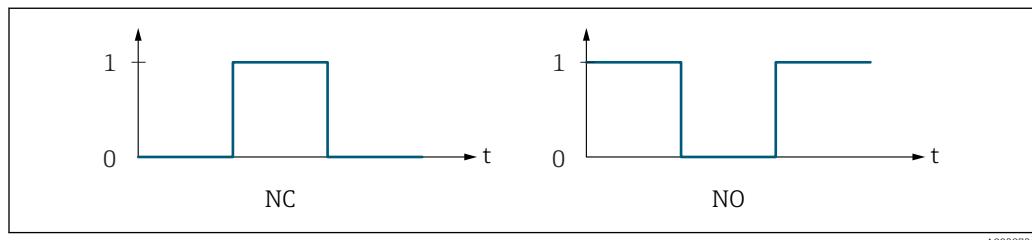

0 Non-conductive
 1 Conductive
 NC NC contact (normally closed)
 NO NO contact (normally open)

The output behavior can be reversed via the **Invert outp.sig.** parameter (→ 142) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→ 127)) can be configured.

Switch status**Navigation**

- ☒ Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Switch status 1 to n (0461-1 to n)
- ☒ Expert → Output → PFS output 1 to n → Switch status 1 to n (0461-1 to n)
- ☒ Diagnostics → Measured val. → Output values → PFS output 1 to n → Switch status 1 to n (0461-1 to n)

Prerequisite

The **Switch** option is selected in the **Operating mode** parameter (→ 123).

Description

Displays the current switch status of the status output.

User interface


- Open
- Closed

Additional information*User interface*

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

*"Relay output 1 to n" submenu**Navigation*

Diagram: Expert → Sensor → Measured val. → Output values → Relay output 1 to n

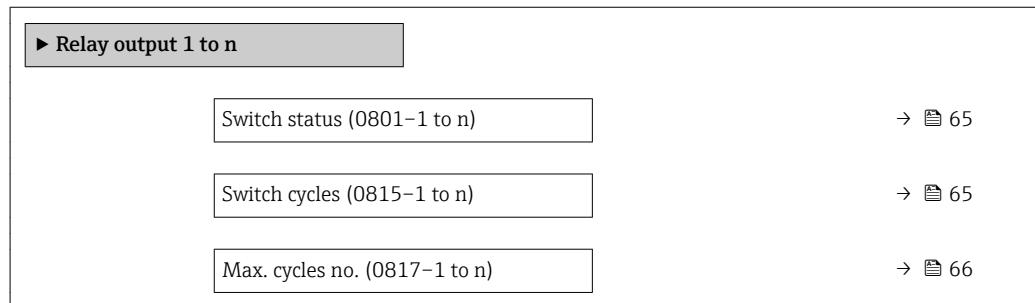**Switch status****Navigation**

- Diagram: Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch status (0801-1 to n)
- Diagram: Expert → Output → Relay output 1 to n → Switch status (0801-1 to n)
- Diagram: Diagnostics → Measured val. → Output values → Relay output 1 to n → Switch status (0801-1 to n)

Description

Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information*User interface*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

Switch cycles**Navigation**

- Diagram: Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch cycles (0815-1 to n)
- Diagram: Diagnostics → Measured val. → Output values → Relay output 1 to n → Switch cycles (0815-1 to n)

Description

Displays all the switch cycles performed.

User interface

Positive integer

Max. cycles no.**Navigation**

- ④ Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Max. cycles no. (0817-1 to n)
- ④ Diagnostics → Measured val. → Output values → Relay output 1 to n → Max. cycles no. (0817-1 to n)

Description

Displays the maximum number of guaranteed switch cycles.

User interface

Positive integer

3.2.2 "System units" submenu

Navigation

④ ④ Expert → Sensor → System units

► System units	
Mass flow unit (0554)	→ ④ 66
Mass unit (0574)	→ ④ 67
Volume flow unit (0553)	→ ④ 68
Volume unit (0563)	→ ④ 69
Cor.volflow unit (0558)	→ ④ 69
Corr. vol. unit (0575)	→ ④ 70
Density unit (0555)	→ ④ 71
Ref. dens. unit (0556)	→ ④ 71
Temperature unit (0557)	→ ④ 72
Pressure unit (0564)	→ ④ 73
Date/time format (2812)	→ ④ 73

Mass flow unit**Navigation**

④ ④ Expert → Sensor → System units → Mass flow unit (0554)

Description

Use this function to select the unit for the mass flow.

Selection	<i>SI units</i>	<i>US units</i>
■ g/s	■ oz/s	
■ g/min	■ oz/min	
■ g/h	■ oz/h	
■ g/d	■ oz/d	
■ kg/s	■ lb/s	
■ kg/min	■ lb/min	
■ kg/h	■ lb/h	
■ kg/d	■ lb/d	
■ t/s	■ STon/s	
■ t/min	■ STon/min	
■ t/h	■ STon/h	
■ t/d	■ STon/d	

Factory setting	Country-specific: ■ kg/h (DN > 150 (6)": t/h) ■ lb/min
-----------------	--

Additional information	<i>Result</i> The selected unit applies for: ■ Target mass flow parameter (→ 56) ■ Carrier mass fl. parameter (→ 56) ■ Mass flow parameter (→ 52)
------------------------	--

Selection

 For an explanation of the abbreviated units: → 334

Mass unit

Navigation	 Expert → Sensor → System units → Mass unit (0574)
------------	---

Description	Use this function to select the unit for the mass.
-------------	--

Selection	<i>SI units</i>	<i>US units</i>
■ g	■ oz	
■ kg	■ lb	
■ t	■ STon	

Factory setting	Country-specific: ■ kg (DN > 150 (6)": t) ■ lb
-----------------	--

Additional information	<i>Selection</i>  For an explanation of the abbreviated units: → 334
------------------------	--

Volume flow unit**Navigation**

Expert → Sensor → System units → Volume flow unit (0553)

Description

Use this function to select the unit for the volume flow.

Selection

- | <i>SI units</i> | <i>US units</i> | <i>Imperial units</i> |
|------------------------|------------------------|-----------------------|
| ■ cm ³ /s | ■ af/s | ■ gal/s (imp) |
| ■ cm ³ /min | ■ af/min | ■ gal/min (imp) |
| ■ cm ³ /h | ■ af/h | ■ gal/h (imp) |
| ■ cm ³ /d | ■ af/d | ■ gal/d (imp) |
| ■ dm ³ /s | ■ ft ³ /s | ■ Mgal/s (imp) |
| ■ dm ³ /min | ■ ft ³ /min | ■ Mgal/min (imp) |
| ■ dm ³ /h | ■ ft ³ /h | ■ Mgal/h (imp) |
| ■ dm ³ /d | ■ ft ³ /d | ■ Mgal/d (imp) |
| ■ m ³ /s | ■ fl oz/s (us) | ■ bbl/s (imp;beer) |
| ■ m ³ /min | ■ fl oz/min (us) | ■ bbl/min (imp;beer) |
| ■ m ³ /h | ■ fl oz/h (us) | ■ bbl/h (imp;beer) |
| ■ m ³ /d | ■ fl oz/d (us) | ■ bbl/d (imp;beer) |
| ■ ml/s | ■ gal/s (us) | ■ bbl/s (imp;oil) |
| ■ ml/min | ■ gal/min (us) | ■ bbl/min (imp;oil) |
| ■ ml/h | ■ gal/h (us) | ■ bbl/h (imp;oil) |
| ■ ml/d | ■ gal/d (us) | ■ bbl/d (imp;oil) |
| ■ l/s | ■ kgal/s (us) | |
| ■ l/min | ■ kgal/min (us) | |
| ■ l/h | ■ kgal/h (us) | |
| ■ l/d | ■ kgal/d (us) | |
| ■ hl/s | ■ Mgal/s (us) | |
| ■ hl/min | ■ Mgal/min (us) | |
| ■ hl/h | ■ Mgal/h (us) | |
| ■ hl/d | ■ Mgal/d (us) | |
| ■ Ml/s | ■ bbl/s (us;liq.) | |
| ■ Ml/min | ■ bbl/min (us;liq.) | |
| ■ Ml/h | ■ bbl/h (us;liq.) | |
| ■ Ml/d | ■ bbl/d (us;liq.) | |
| | ■ bbl/s (us;beer) | |
| | ■ bbl/min (us;beer) | |
| | ■ bbl/h (us;beer) | |
| | ■ bbl/d (us;beer) | |
| | ■ bbl/s (us;oil) | |
| | ■ bbl/min (us;oil) | |
| | ■ bbl/h (us;oil) | |
| | ■ bbl/d (us;oil) | |
| | ■ bbl/s (us;tank) | |
| | ■ bbl/min (us;tank) | |
| | ■ bbl/h (us;tank) | |
| | ■ bbl/d (us;tank) | |

Factory setting

- Country-specific:
- l/h (DN > 150 (6"): m³/h)
 - gal/min (us)

Additional information*Result*

The selected unit applies for:
Volume flow parameter (→  52)

Selection

 For an explanation of the abbreviated units: →  334

Volume unit**Navigation**

 Expert → Sensor → System units → Volume unit (0563)

Description

Use this function to select the unit for the volume.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Factory setting

Country-specific:

- l (DN > 150 (6"): m³)
- gal (us)

Additional information*Selection*

 For an explanation of the abbreviated units: →  334

Cor.volflow unit**Navigation**

  Expert → Sensor → System units → Cor.volflow unit (0558)

Description

Use this function to select the unit for the corrected volume flow.

Selection

- | <i>SI units</i> | <i>US units</i> |
|------------------------|-------------------------|
| ■ NI/s | ■ Sft ³ /s |
| ■ NI/min | ■ Sft ³ /min |
| ■ NI/h | ■ Sft ³ /h |
| ■ NI/d | ■ Sft ³ /d |
| ■ Nm ³ /s | ■ Sgal/s (us) |
| ■ Nm ³ /min | ■ Sgal/min (us) |
| ■ Nm ³ /h | ■ Sgal/h (us) |
| ■ Nm ³ /d | ■ Sgal/d (us) |
| ■ Sm ³ /s | ■ Sbbl/s (us;liq.) |
| ■ Sm ³ /min | ■ Sbbl/min (us;liq.) |
| ■ Sm ³ /h | ■ Sbbl/h (us;liq.) |
| ■ Sm ³ /d | ■ Sbbl/d (us;liq.) |

- | <i>Imperial units</i> |
|-----------------------|
| ■ Sgal/s (imp) |
| ■ Sgal/min (imp) |
| ■ Sgal/h (imp) |
| ■ Sgal/d (imp) |

Factory setting

- Country-specific:
- NI/h (DN > 150 (6"): Nm³/h)
 - Sft³/min

Additional information*Result*

The selected unit applies for:
Correct.vol.flow parameter (→  52)

Selection

 For an explanation of the abbreviated units: →  334

Corr. vol. unit**Navigation**

 Expert → Sensor → System units → Corr. vol. unit (0575)

Description

Use this function to select the unit for the corrected volume.

Selection

- | <i>SI units</i> | <i>US units</i> |
|-------------------|--------------------|
| ■ NI | ■ Sft ³ |
| ■ Nm ³ | ■ Sgal (us) |
| ■ Sm ³ | ■ Sbbl (us;liq.) |

- | <i>Imperial units</i> |
|-----------------------|
| Sgal (imp) |

Factory setting

- Country-specific:
- NI (DN > 150 (6"): Nm³)
 - Sft³

Additional information*Selection*

 For an explanation of the abbreviated units: →  334

Density unit**Navigation**

Expert → Sensor → System units → Density unit (0555)

Description

Use this function to select the unit for the density.

Selection*SI units*

- g/cm³
- g/m³
- kg/dm³
- kg/l
- kg/m³
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

Imperial units

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Factory setting

Country-specific:

- kg/l
- lb/ft³

Additional information*Result*

The selected unit applies for:

- **Density setpt 1** parameter
- **Density setpt 2** parameter
- **Density** parameter (→ 53)

Selection

- SD = specific density

The specific density is the ratio of the medium density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the medium density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

For an explanation of the abbreviated units: → 334

Ref. dens. unit**Navigation**

Expert → Sensor → System units → Ref. dens. unit (0556)

Description

Use this function to select the unit for the reference density.

Selection*SI units*

- kg/Nm³
- kg/NI
- g/Scm³
- kg/Sm³

US units

lb/Sft³

Factory setting	Country-dependent ■ kg/Nl ■ lb/Sft ³
------------------------	---

Additional information	<i>Result</i> The selected unit applies for: ■ Ext. ref.density parameter (→ 88) ■ Fix ref.density parameter (→ 88) ■ Ref.density parameter (→ 53)
-------------------------------	--

Selection

 For an explanation of the abbreviated units: → [334](#)

Temperature unit

Navigation	 Expert → Sensor → System units → Temperature unit (0557)
-------------------	--

Description	Use this function to select the unit for the temperature.
--------------------	---

Selection	<i>SI units</i> ■ °C ■ K	<i>US units</i> ■ °F ■ °R
------------------	--------------------------------	---------------------------------

Factory setting	Country-specific: ■ °C ■ °F
------------------------	-----------------------------------

Additional information	<i>Result</i> The selected unit applies for: ■ Maximum value parameter (→ 300) ■ Minimum value parameter (→ 300) ■ Maximum value parameter (→ 301) ■ Minimum value parameter (→ 301) ■ Maximum value parameter (→ 302) ■ Minimum value parameter (→ 302) ■ External temp. parameter (→ 86) ■ Ref. temperature parameter (6222) ■ Temperature parameter (→ 53) ■ Ref. temperature parameter (→ 89)
-------------------------------	---

Selection

 For an explanation of the abbreviated units: → [334](#)

Pressure unit**Navigation**

Expert → Sensor → System units → Pressure unit (0564)

Description

Use this function to select the unit for the pipe pressure.

Selection*SI units*

- Pa a
- kPa a
- MPa a
- bar
- Pa g
- kPa g
- MPa g
- bar g

US units

- psi a
- psi g

Factory setting

Country-specific:

- bar a
- psi a

Additional information*Result*

The unit is taken from:

- **Pressure value** parameter (→ 85)
- **External press.** parameter (→ 85)
- **Pressure value** parameter (→ 54)

Selection

For an explanation of the abbreviated units: → 334

Date/time format**Navigation**

Expert → Sensor → System units → Date/time format (2812)

Description

Use this function to select the desired time format for calibration history.

Selection

- dd.mm.yy hh:mm
- dd.mm.yy am/pm
- mm/dd/yy hh:mm
- mm/dd/yy am/pm

Factory setting

dd.mm.yy hh:mm

Additional information*Selection*

For an explanation of the abbreviated units: → 334

3.2.3 "Process param." submenu

Navigation

 Expert → Sensor → Process param.

▶ Process param.	
Flow damping (1802)	→  74
Density damping (1803)	→  75
Temp. damping (1822)	→  75
Flow override (1839)	→  76
▶ Low flow cut off	→  76
▶ Partial pipe det	→  79

Flow damping



Navigation

 Expert → Sensor → Process param. → Flow damping (1802)

Description

Use this function to enter a time constant for flow damping (PT1 element). Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

User entry

0 to 100.0 s

Factory setting

0 s

Additional information

Description

 The damping is performed by a PT1 element²⁾.

User entry

- Value = 0: no damping
- Value > 0: damping is increased

 Damping is switched off if **0** is entered (factory setting).

Result

 The damping affects the following variables of the device:

- Outputs
- Low flow cut off →  76
- Totalizers →  275

2) Proportional behavior with first-order lag

Density damping**Navigation**

Expert → Sensor → Process param. → Density damping (1803)

Description

Use this function to enter a time constant for the damping (PT1 element) of the density measured value.

User entry 0 to 999.9 s

Factory setting 0 s

Additional information *Description*

The damping is performed by a PT1 element³⁾.

User entry

- Value = 0: no damping
- Value > 0: damping is increased

Damping is switched off if **0** is entered (factory setting).

Temp. damping**Navigation**

Expert → Sensor → Process param. → Temp. damping (1822)

Description

Use this function to enter a time constant for the damping (PT1 element) of the temperature measured value.

User entry 0 to 999.9 s

Factory setting 0 s

Additional information *Description*

The damping is performed by a PT1 element⁴⁾.

User entry

- Value = 0: no damping
- Value > 0: damping is increased

Damping is switched off if **0** is entered (factory setting).

3) Proportional behavior with first-order lag

4) Proportional behavior with first-order lag

Flow override**Navigation**

Expert → Sensor → Process param. → Flow override (1839)

Description

Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

Selection

- Off
- On

Factory setting

Off

Additional information*Description***Flow override is active**

- The diagnostic message diagnostic message **△C453 Flow override** is displayed.
- Output values
 - Temperature: continues to be output
 - Totalizers 1-3: stop being totalized

The **Flow override** option can also be activated in the **Status input** submenu: **Assign stat.inp.** parameter (→ 105).

"Low flow cut off" submenu**Navigation**

Expert → Sensor → Process param. → Low flow cut off

▶ Low flow cut off	
Assign variable (1837)	→ 76
On value (1805)	→ 77
Off value (1804)	→ 77
Pres. shock sup. (1806)	→ 78

Assign variable**Navigation**

Expert → Sensor → Process param. → Low flow cut off → Assign variable (1837)

Description

Use this function to select the process variable for low flow cutoff detection.

Selection

- Off
- Mass flow
- Volume flow
- Correct.vol.flow

Factory setting Mass flow

On value



Navigation Expert → Sensor → Process param. → Low flow cut off → On value (1805)

Prerequisite A process variable is selected in the **Assign variable** parameter (→ [76](#)).

Description Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 → [77](#).

User entry Positive floating-point number

Factory setting Depends on country and nominal diameter → [329](#)

Additional information *Dependency*

The unit depends on the process variable selected in the **Assign variable** parameter (→ [76](#)).

Off value



Navigation Expert → Sensor → Process param. → Low flow cut off → Off value (1804)


Prerequisite A process variable is selected in the **Assign variable** parameter (→ [76](#)).

Description Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → [77](#).

User entry 0 to 100.0 %

Factory setting 50 %

Additional information *Example*

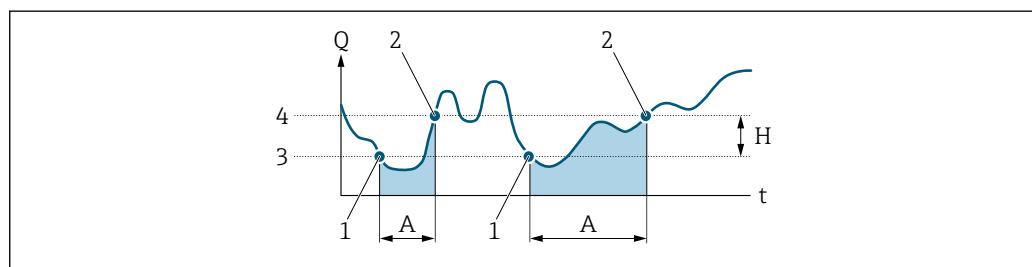

A0012887

- Q Flow
- t Time
- H Hysteresis
- A Low flow cut off active
- 1 Low flow cut off is activated
- 2 Low flow cut off is deactivated
- 3 On value entered
- 4 Off value entered

Pres. shock sup.

Navigation Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup. (1806)

Prerequisite A process variable is selected in the **Assign variable** parameter (→ 76).

Description Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

User entry 0 to 100 s

Factory setting 0 s

Additional information *Description*

Pressure shock suppression is enabled


- Prerequisite:
 - Flow rate < on-value of low flow cut off
or
 - Changing the flow direction
- Output values
 - Flow displayed: 0
 - Totalizer: the totalizers are pegged at the last correct value

Pressure shock suppression is disabled

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

Example

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

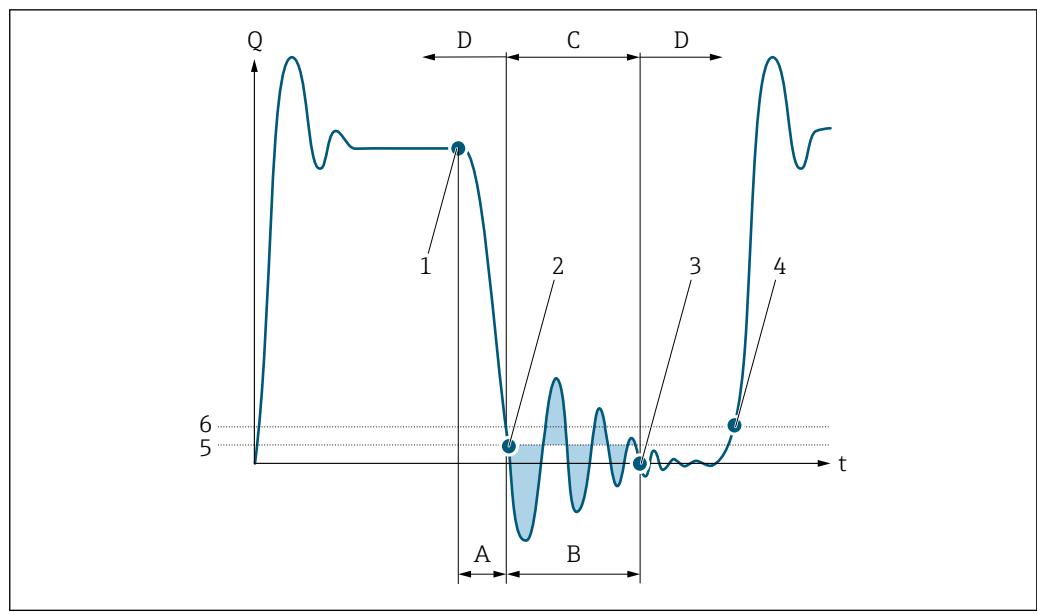

- Q Flow
 t Time
 A Drip
 B Pressure shock
 C Pressure shock suppression active as specified by the time entered
 D Pressure shock suppression inactive
 1 Valve closes
 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
 3 The time entered has elapsed: pressure shock suppression is deactivated
 4 The actual flow value is now displayed and output
 5 On-value for low flow cut off
 6 Off-value for low flow cut off

"Partial pipe det" submenu

Navigation

Expert → Sensor → Process param. → Partial pipe det

▶ Partial pipe det	
Assign variable (1860)	→ 80
Low value (1861)	→ 80
High value (1858)	→ 80
Response time (1859)	→ 81
Max. damping (6040)	→ 81

Assign variable**Navigation**

Expert → Sensor → Process param. → Partial pipe det → Assign variable (1860)

Description

Use this function to select a process variable to detect empty or partially filled measuring tubes.

For gas measurement: Deactivate monitoring due to low gas density.

Selection

- Off
- Density
- Ref.density

Factory setting

Off

Low value**Navigation**

Expert → Sensor → Process param. → Partial pipe det → Low value (1861)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 80).

Description

Use this function to enter a lower limit value to enable detection of empty or partially filled measuring tubes. If the measured density falls below this value, monitoring is enabled.

User entry

Signed floating-point number

Factory setting

200

Additional information

User entry

The lower limit value must be less than the upper limit value defined in the **High value** parameter (→ 80).

i The unit depends on the process variable selected in the **Assign variable** parameter (→ 80).

Limit value

i If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled**.

High value**Navigation**

Expert → Sensor → Process param. → Partial pipe det → High value (1858)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 80).

Description

Use this function to enter an upper limit value to enable detection of empty or partially filled measuring tubes. If the measured density exceeds this value, detection is enabled.

User entry

Signed floating-point number

Factory setting 6 000

Additional information *User entry*

The upper limit value must be greater than the lower limit value defined in the **Low value** parameter (→ 80).

 The unit depends on the process variable selected in the **Assign variable** parameter (→ 80).

Limit value

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled**.

Response time



Navigation  Expert → Sensor → Process param. → Partial pipe det → Response time (1859)

Prerequisite A process variable is selected in the **Assign variable** parameter (→ 80).

Description Use this function to enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message **△S862 Partly filled** to be triggered if the measuring pipe is empty or partially full.

User entry 0 to 100 s

Factory setting 1 s

Max. damping



Navigation  Expert → Sensor → Process param. → Partial pipe det → Max. damping (6040)

Description Use this function to enter a damping value to enable detection of empty or partially filled measuring tubes.

User entry Positive floating-point number

Factory setting 0

Additional information *Description*

If oscillation damping exceeds the specified value, the measuring device presumes that the pipe is partially filled and the flow signal is set to 0. The measuring device displays the

diagnostic message **△S862 Partly filled**. In the case of non-homogeneous media or air pockets, the damping of the measuring tubes increases.

User entry

- Damping is disabled if **0** is entered (factory setting).
- Damping is enabled if the value entered is greater than **0**.
- The value entered depends on application-specific influence variables, such as the medium, nominal diameter, sensor etc.


Example

- If the pipe is filled normally the value of the oscillation damping is 500.
- If the pipe is partially filled the value of the oscillation damping is > 5000.
- A practical damping value would then be 2000: enter 2000 as the value.

3.2.4 "Measurement mode" submenu

Navigation

Expert → Sensor → Measurement mode

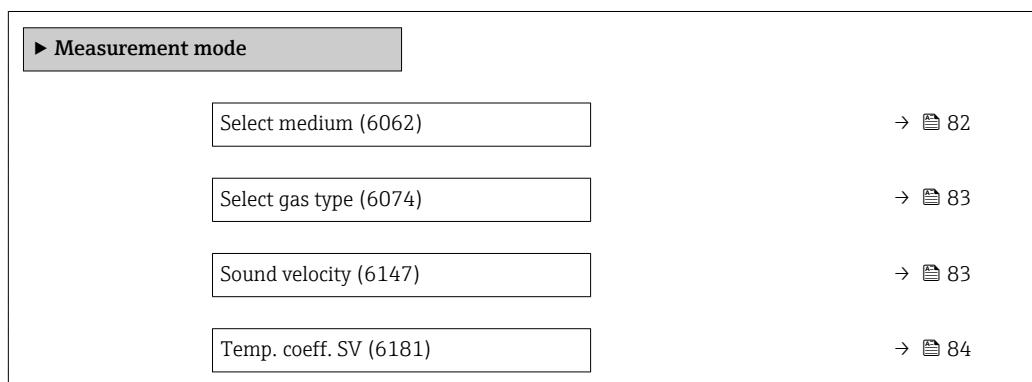

Multi-freq.activ



Navigation

Expert → Sensor → Measurement mode → Multi-freq.activ (6242)

Description

Switching the dual mode of the sensor on and off.

Selection

- No
- Yes

Factory setting

No

Select medium



Navigation

Expert → Sensor → Measurement mode → Select medium (6062)

Description

Use this function to select the type of medium.

Selection Liquid

Factory setting Liquid

Select gas type



Navigation Expert → Sensor → Measurement mode → Select gas type (6074)

Prerequisite The **Gas** option is selected in the **Select medium** parameter (→ 82).

Description Use this function to select the type of gas for the measuring application.

Selection

- Air
- Ammonia NH₃
- Argon Ar
- Sulf. hex.fl.SF₆
- Oxygen O₂
- Ozone O₃
- Nitrog. ox. NOx
- Nitrogen N₂
- Nitrous ox. N₂O
- Methane CH₄
- Hydrogen H₂
- Helium He
- Hydrog.chlor.HCl
- Hydrog.sulf. H₂S
- Ethylene C₂H₄
- Carbon diox. CO₂
- Carbon monox. CO
- Chlorine Cl₂
- Butane C₄H₁₀
- Propane C₃H₈
- Propylene C₃H₆
- Ethane C₂H₆
- Others

Factory setting Methane CH₄

Additional information *Description*

The gas type needs to be selected so that it is possible to comply with accuracy specifications in gas applications.

Sound velocity



Navigation Expert → Sensor → Measurement mode → Sound velocity (6147)

Prerequisite In the **Select gas type** parameter (→ 83), the **Others** option is selected.

Description Use this function to enter the sound velocity of the gas at 0 °C (+32 °F).

User entry 1 to 99 999.9999 m/s

Factory setting 415.0 m/s

Temp. coeff. SV



Navigation Expert → Sensor → Measurement mode → Temp. coeff. SV (6181)

Prerequisite The **Others** option is selected in the **Select gas type** parameter (→ [83](#)).

Description Use this function to enter a temperature coefficient for the sound velocity of the gas.

User entry Positive floating-point number

Factory setting 0 (m/s)/K

3.2.5 "External comp." submenu

Navigation Expert → Sensor → External comp.

► External comp.	
Pressure compen. (6130)	→ 84
Pressure value (6059)	→ 85
External press. (6209)	→ 85
Temperature mode (6184)	→ 86
External temp. (6080)	→ 86

Pressure compen.



Navigation Expert → Sensor → External comp. → Pressure compen. (6130)

Description Use this function to select the type of pressure compensation.

Selection	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value ■ Current input 1*
Factory setting	Off
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Fixed value A fixed pressure value is used for compensation: Pressure value parameter (→ 85) ■ External value The pressure value read in via FOUNDATION Fieldbus is used for compensation. ■ Current input 1 The pressure value read in via the current input is used for compensation. <p> For more information, see the "Cyclic data transmission" section of the Operating Instructions</p>

Pressure value



Navigation	 Expert → Sensor → External comp. → Pressure value (6059)
Prerequisite	The Fixed value option or the Current input 1...n option is selected in the Pressure compen. parameter (→ 84).
Description	Use this function to enter a value for the process pressure that is used for pressure correction.
User entry	Positive floating-point number
Factory setting	0 bar
Additional information	<p><i>User entry</i></p> <p> The unit is taken from the Pressure unit parameter (→ 73)</p>

External press.

Navigation	 Expert → Sensor → External comp. → External press. (6209)
Prerequisite	The Fixed value option or the Current input 1...n option is selected in the Pressure compen. parameter (→ 84).
Description	Use this function to enter an external pressure value.
User interface	Positive floating-point number
Factory setting	0 bar

* Visibility depends on order options or device settings

Additional information*User entry*

The unit is taken from the **Pressure unit** parameter (→ 73)

Temperature mode**Navigation**

Expert → Sensor → External comp. → Temperature mode (6184)

Description

Use this function to select the temperature mode.

Selection

- Internal value
- External value
- Current input 1 *

Factory setting

Internal value

Additional information*Description*

Use this function to select the type of temperature compensation.

Selection

All the options available for selection are used for measured value compensation.

- Internal value
The temperature value measured internally (temperature sensor of the measuring sensor) is used for compensation.
- External value
The temperature value read in via FOUNDATION Filedbus is used for compensation.
- **Current input 1** optionVisibility depends on order options or device settings
The temperature value read in via the current input is used for compensation.



For more information, see the "Cyclic data transmission" section of the Operating Instructions

External temp.**Navigation**

Expert → Sensor → External comp. → External temp. (6080)

Prerequisite

The **External value** option or the **Current input 1...n** option is selected in the **Temperature mode** parameter (→ 86).

Description

Use this function to enter the external temperature.

User interface

-273.15 to 99 999 °C

Factory setting

Country-specific:

- 0 °C
- +32 °F

* Visibility depends on order options or device settings


Additional information*Description*

The unit is taken from the **Temperature unit** parameter (→ 72)

3.2.6 "Calculated value" submenu

Navigation


Expert → Sensor → Calculated value

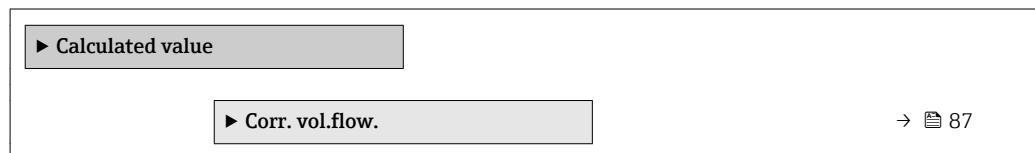

"Corr. vol.flow." submenu

Navigation

Expert → Sensor → Calculated value → Corr. vol.flow.

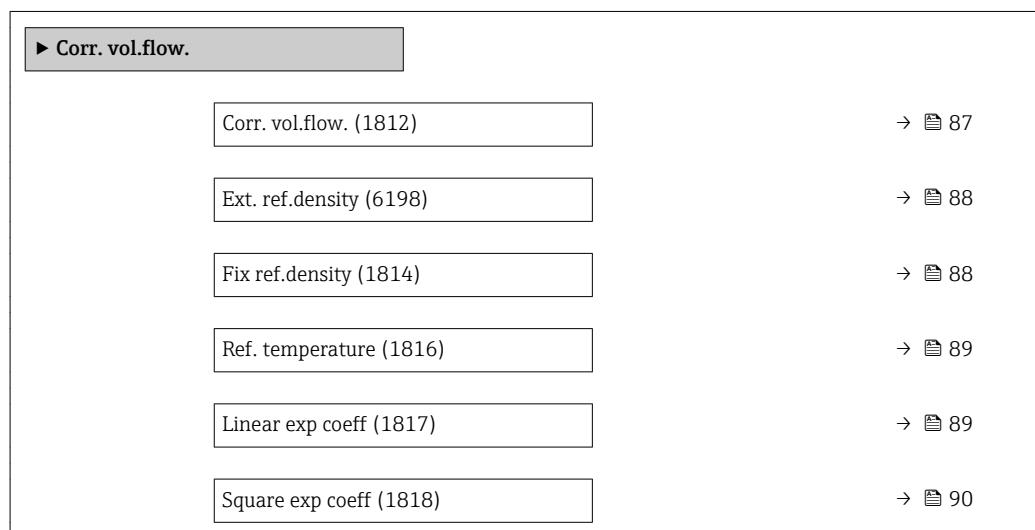

Corr. vol.flow.

**Navigation**

Expert → Sensor → Calculated value → Corr. vol.flow. → Corr. vol.flow. (1812)

Description

Use this function to select the reference density for calculating the corrected volume flow.

Selection

- Fix ref.density
- Calc ref density
- Ref. dens API 53
- Ext. ref.density *
- Current input 1 *

* Visibility depends on order options or device settings

Factory setting	Calc ref density
Additional information	<p><i>Selection</i></p> <p>The Ref. dens API 53 option is suitable only for applications involving LPG⁵⁾, where the flow rate is measured on the basis of the corrected volume flow.</p> <p>Selecting this option means that the reference density is used, taking into account the values in table 53 E of API MPMS section 11.2. Temperature measurement (measured internally or read into the device from an external source → 84 → 84) and density measurement take place during operation while the medium is flowing. The mass flow is divided by the reference density to give the corrected volume flow and is issued as an output signal.</p>

Ext. ref.density

Navigation	  Expert → Sensor → Calculated value → Corr. vol.flow. → Ext. ref.density (6198)
Description	Displays the reference density which is read in externally, e.g. via the current input.
User interface	Floating point number with sign
Additional information	<p><i>Dependency</i></p> <p> The unit is taken from the Ref. dens. unit parameter (→ 71)</p>

Fix ref.density

Navigation	  Expert → Sensor → Calculated value → Corr. vol.flow. → Fix ref.density (1814)
Prerequisite	The Fix ref.density option is selected in the Corr. vol.flow. parameter (→ 87) parameter.
Description	Use this function to enter a fixed value for the reference density.
User entry	Positive floating-point number
Factory setting	1 kg/Nl
Additional information	<p><i>Dependency</i></p> <p> The unit is taken from the Ref. dens. unit parameter (→ 71)</p>

5) liquefied petroleum gas

Ref. temperature 

Navigation  Expert → Sensor → Calculated value → Corr. vol.flow. → Ref. temperature (1816)

Prerequisite The **Calc ref density** option is selected in the **Corr. vol.flow.** parameter (→  87) parameter.

Description Use this function to enter a reference temperature for calculating the reference density.

User entry -273.15 to 99 999 °C

Factory setting Country-specific:

- +20 °C
- +68 °F

Additional information *Dependency*

 The unit is taken from the **Temperature unit** parameter (→  72)

Reference density calculation

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

- ρ_N : reference density
- ρ : fluid density currently measured
- t : fluid temperature currently measured
- t_N : reference temperature at which the reference density is calculated (e.g. 20 °C)
- Δt : $t - t_N$
- α : linear expansion coefficient of the fluid, unit = [1/K]; K = Kelvin
- β : square expansion coefficient of the fluid, unit = [1/K²]

Linear exp coeff 

Navigation  Expert → Sensor → Calculated value → Corr. vol.flow. → Linear exp coeff (1817)

Prerequisite The **Calc ref density** option is selected in the **Corr. vol.flow.** parameter (→  87) parameter.

Description Use this function to enter a linear, fluid-specific expansion coefficient for calculating the reference density.

User entry Signed floating-point number

Factory setting 0.0

Square exp coeff**Navigation**

Expert → Sensor → Calculated value → Corr. vol.flow. → Square exp coeff (1818)

Prerequisite

The **Calc ref density** option is selected in the **Corr. vol.flow.** parameter (→ [87](#)) parameter.

Description

For fluid with a non-linear expansion pattern: use this function to enter a quadratic, fluid-specific expansion coefficient for calculating the reference density.

User entry

Signed floating-point number

Factory setting

0.0

3.2.7 "Sensor adjustment" submenu*Navigation*

Expert → Sensor → Sensor adjustm.

► Sensor adjustm.	
Install. direct. (1809)	→ 90
Inst. angle roll (6282)	→ 91
Inst.angle pitch (6236)	→ 91
► Zero point adj.	→ 92
► Variable adjust	→ 93

Install. direct.**Navigation**

Expert → Sensor → Sensor adjustm. → Install. direct. (1809)

Description

Use this function to change the sign of the medium flow direction.

Selection

- In arrow direct.
- Against arrow

Factory setting

In arrow direct.

Additional information*Description*

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

Inst. angle roll

Navigation Expert → Sensor → Sensor adjustm. → Inst. angle roll (6282)

Prerequisite Available only with Promass Q.

Description Use this function to enter the roll installation angle in degrees.

User entry -180 to 180 °

Factory setting 0 °

Additional information **FIGURE: ROLL ANGLE**

Roll angle

- The roll angle is the angle β from the vertical **V** to align the central axis **Z** of the transmitter.
- The roll angle can be between -180 to +180 °.

Inst.angle pitch

Navigation Expert → Sensor → Sensor adjustm. → Inst.angle pitch (6236)

Prerequisite Available only with Promass Q.

Description Use this function to enter the installation angle pitch in degrees.

User entry -180 to 180 °

Factory setting 0 °

Additional information **FIGURE: PITCH ANGLE**

Pitch angle


- The pitch angle is the angle α from the horizontal **H** to align the central axis **Z** of the measuring device.
- The pitch angle can be between -90 to +90 °.

"Zero point adj." submenu

- It is generally not necessary to perform zero point adjustment.
- However, this function may be needed in some applications with low flow and strict accuracy requirements.
- A zero point adjustment cannot increase repeatability.
- The following conditions should be met to perform a zero point adjustment successfully without the adjustment finishing in an error:
 - The real flow must be **0**.
 - The pressure must be at least 15 psi g.
- The adjustment takes a maximum of 60 s. The more stable the conditions, the faster the adjustment is completed.
- This function can also be used to check the health of the measuring device.
A healthy measuring device has a maximum zero point deviation of ± 100 compared to the factory setting of the measuring device (calibration report).

Navigation

Expert → Sensor → Sensor adjustm. → Zero point adj.

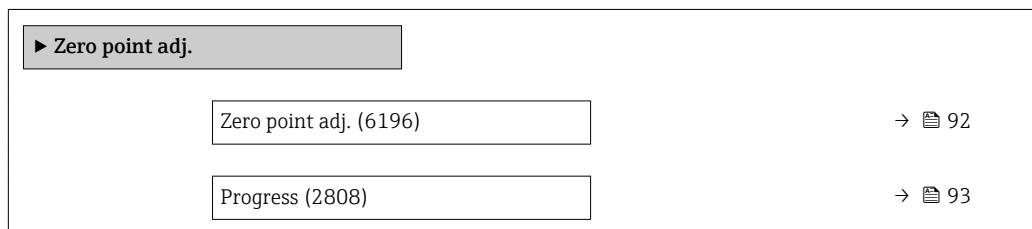**Zero point adj.****Navigation**

- Expert → Sensor → Sensor adjustm. → Zero point adj. → Zero point adj. (6196)
- Expert → Sensor → Sensor adjustm. → Zero point adj. → Zero point adj. (6196)

Description

Use this function to select the start of the zero point adjustment.



Observe conditions → 92.

Selection

- Cancel
- Busy
- Zero adjust fail
- Start

Factory setting

Cancel

Additional information**Description**

- Cancel
If zero point adjustment has failed, select this option to cancel zero point adjustment.
- Busy
Is displayed during zero point adjustment.
- Zero adjust fail
Is displayed if zero point adjustment has failed.
- Start
Select this option to start zero point adjustment.

Progress

Navigation	Expert → Sensor → Sensor adjustm. → Zero point adj. → Progress (2808)
Description	The progress of the process is indicated.
User interface	0 to 100 %

"Variable adjust" submenu

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust

Variable adjust	
Mass flow offset (1831)	→ 93
Mass flow factor (1832)	→ 94
Vol. flow offset (1841)	→ 94
Vol. flow factor (1846)	→ 94
Density offset (1848)	→ 95
Density factor (1849)	→ 95
Corr. vol offset (1866)	→ 95
Corr. vol factor (1867)	→ 96
Ref.dens. offset (1868)	→ 96
Ref.dens. factor (1869)	→ 96
Temp. offset (1870)	→ 97
Temp. factor (1871)	→ 97

Mass flow offset

Navigation	Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset (1831)
Description	Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

User entry Signed floating-point number

Factory setting 0 kg/s

Additional information *Description*

 Corrected value = (factor × value) + offset

Mass flow factor



Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor (1832)

Description Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

 Corrected value = (factor × value) + offset

Vol. flow offset



Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset (1841)

Description Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.

User entry Signed floating-point number

Factory setting 0 m³/s

Additional information *Description*

 Corrected value = (factor × value) + offset

Vol. flow factor



Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor (1846)

Description Use this function to enter a quantity factor (without time) for the volume flow. This multiplication factor is applied over the volume flow range.

User entry Positive floating-point number

Factory setting 1**Additional information** *Description*

Corrected value = (factor × value) + offset

Density offset**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Density offset (1848)**Description** Use this function to enter the zero point shift for the density trim. The density unit on which the shift is based is kg/m³.**User entry** Signed floating-point number**Factory setting** 0 kg/m³**Additional information** *Description*

Corrected value = (factor × value) + offset

Density factor**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Density factor (1849)**Description** Use this function to enter a quantity factor for the density. This multiplication factor is applied over the density range.**User entry** Positive floating-point number**Factory setting** 1**Additional information** *Description*

Corrected value = (factor × value) + offset

Corr. vol offset**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset (1866)**Description** Use this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm³/s.**User entry** Signed floating-point number**Factory setting** 0 Nm³/s

Additional information*Description*

Corrected value = (factor × value) + offset

Corr. vol factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor (1867)

Description

Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

Ref.dens. offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. offset (1868)

Description

Use this parameter to enter the zero point shift for the reference density trim. The reference density unit on which the shift is based is 1 kg/Nm³.

User entry

Signed floating-point number

Factory setting

0 kg/Nm³

Additional information*Description*

Corrected value = (factor × value) + offset

Ref.dens. factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. factor (1869)

Description

Use this function to enter a quantity factor (without time) for the reference density. This multiplication factor is applied over the reference density range.

User entry

Positive floating-point number

Factory setting

1

Additional information	Description
	 Corrected value = (factor × value) + offset

Temp. offset

Navigation	 Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset (1870)
Description	Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is K.
User entry	Signed floating-point number
Factory setting	0 K
Additional information	Description
	 Corrected value = (factor × value) + offset

Temp. factor

Navigation	 Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor (1871)
Description	Use this function to enter a quantity factor for the temperature. In each case, this factor refers to the temperature in K.
User entry	Positive floating-point number
Factory setting	1
Additional information	Description
	 Corrected value = (factor × value) + offset

3.2.8 "Calibration" submenu**Navigation** Expert → Sensor → Calibration

► Calibration	
Cal. factor (6025)	→  98
Zero point (6195)	→  98

Nominal diameter (2807)	→ 98
C0 to 5 (6022)	→ 99

Cal. factor

Navigation Expert → Sensor → Calibration → Cal. factor (6025)

Description Displays the current calibration factor for the sensor.

User interface Signed floating-point number

Factory setting Depends on nominal diameter and calibration.

Zero point



Navigation Expert → Sensor → Calibration → Zero point (6195)

Description Use this function to enter the zero point correction value for the sensor.

User entry Signed floating-point number

Factory setting Depends on nominal diameter and calibration.

Nominal diameter

Navigation Expert → Sensor → Calibration → Nominal diameter (2807)

Description Displays the nominal diameter of the sensor.

User interface DNxx / x"

Factory setting Depends on the size of the sensor

Additional information *Description*

The value is also specified on the sensor nameplate.

C0 to 5

Navigation	Expert → Sensor → Calibration → C0 to 5 (6022)
Description	Displays the current density coefficients C0 to 5 of the sensor.
User interface	Signed floating-point number
Factory setting	0

3.3 "I/O configuration" submenu

Navigation Expert → I/O config.

► I/O config.											
<table border="0"> <tr> <td style="border: 1px solid black; padding: 5px;">I/O 1 to n terminals (3902–1 to n)</td> <td style="vertical-align: bottom; padding-right: 20px;">→ 99</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px;">I/O 1 to n info (3906–1 to n)</td> <td style="vertical-align: bottom; padding-right: 20px;">→ 99</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px;">I/O 1 to n type (3901–1 to n)</td> <td style="vertical-align: bottom; padding-right: 20px;">→ 100</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px;">Apply I/O config (3907)</td> <td style="vertical-align: bottom; padding-right: 20px;">→ 100</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px;">Conversion code (2762)</td> <td style="vertical-align: bottom; padding-right: 20px;">→ 101</td> </tr> </table>		I/O 1 to n terminals (3902–1 to n)	→ 99	I/O 1 to n info (3906–1 to n)	→ 99	I/O 1 to n type (3901–1 to n)	→ 100	Apply I/O config (3907)	→ 100	Conversion code (2762)	→ 101
I/O 1 to n terminals (3902–1 to n)	→ 99										
I/O 1 to n info (3906–1 to n)	→ 99										
I/O 1 to n type (3901–1 to n)	→ 100										
Apply I/O config (3907)	→ 100										
Conversion code (2762)	→ 101										

I/O terminals

Navigation	Expert → I/O config. → I/O 1 to n terminals (3902–1 to n)
Description	Displays the terminal numbers used by the I/O module.
User interface	<ul style="list-style-type: none"> ■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2)

I/O info

Navigation	Expert → I/O config. → I/O 1 to n info (3906–1 to n)
Description	Displays information about the plugged in I/O module.

User interface

- Not plugged
- Invalid
- Not configurable
- Configurable
- Fieldbus

Additional information

"Not plugged" option

The I/O module is not plugged in.

"Invalid" option

The I/O module is not plugged correctly.

"Not configurable" option

The I/O module is not configurable.

"Configurable" option

The I/O module is configurable.

"Fieldbus" option

The I/O module is configured for the fieldbus.

I/O type**Navigation**

Expert → I/O config. → I/O 1 to n type (3901–1 to n)

Prerequisite

For the following order code:

"Output; input 2", option **D** "Configurable I/O initial setting off"

Description

Use this function to select the I/O module type for the configuration of the I/O module.

Selection

- Off
- Curr.output *
- Current input *
- Status input *
- PFS output

Factory setting

Off

Apply I/O config**Navigation**

Expert → I/O config. → Apply I/O config (3907)

Description

Use this function to activate the newly configured I/O module type.

Selection

- No
- Yes

* Visibility depends on order options or device settings

Factory setting No

Conversion code



Navigation Expert → I/O config. → Conversion code (2762)

Description Use this function to enter the ordered activation code to activate the I/O configuration change.

User entry Positive integer

Factory setting 0

Additional information *Description*

The I/O configuration is changed in the **I/O type** parameter (→ 100).

3.4 "Input" submenu

Navigation Expert → Input

► Input

► Current input 1 to n

→ 101

► Status input 1 to n

→ 104

3.4.1 "Current input 1 to n" submenu

Navigation Expert → Input → Current input 1 to n

► Current input 1 to n

Terminal no. (1611–1 to n)

→ 102

Signal mode (1610–1 to n)

→ 102

Current span (1605–1 to n)

→ 102

0/4 mA value (1606–1 to n)

→ 103

20 mA value (1607–1 to n)

→ 103

Failure mode (1601-1 to n)	→  103
Failure value (1602-1 to n)	→  104

Terminal no.

Navigation  Expert → Input → Current input 1 to n → Terminal no. (1611-1 to n)

Description Displays the terminal numbers used by the current input module.

User interface

- Not used
- 24-25 (I/O 2)

Additional information "Not used" option
The current input module does not use any terminal numbers.

Signal mode 

Navigation  Expert → Input → Current input 1 to n → Signal mode (1610-1 to n)

Prerequisite The measuring device is **not** approved for use in the hazardous area with type of protection Ex-i.

Description Use this function to select the signal mode for the current input.

Selection

- Passive
- Active

Factory setting Active

Current span 

Navigation  Expert → Input → Current input 1 to n → Current span (1605-1 to n)

Description Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

Selection

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- 0...20 mA

Factory setting Country-specific:

- 4...20 mA NAMUR
- 4...20 mA US

Additional information*Examples*Sample values for the current range: **Current span** parameter (→ 109)**0/4 mA value****Navigation**

Expert → Input → Current input 1 to n → 0/4 mA value (1606–1 to n)

Description

Use this function to enter a value for the 4 mA current.

User entry

Signed floating-point number

Factory setting

0

Additional information*Current input behavior*

The current input behaves differently depending on the settings configured in the following parameters:

- Current span (→ 102)
- Failure mode (→ 103)

Configuration examplesPay attention to the configuration examples for **4 mA value** parameter (→ 110).**20 mA value****Navigation**

Expert → Input → Current input 1 to n → 20 mA value (1607–1 to n)

Description

Use this function to enter a value for the 20 mA current.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information*Configuration examples*Pay attention to the configuration examples for **4 mA value** parameter (→ 110).**Failure mode****Navigation**

Expert → Input → Current input 1 to n → Failure mode (1601–1 to n)

DescriptionUse this function to select the input behavior when measuring a current outside the configured **Current span** parameter (→ 102).

Selection	<ul style="list-style-type: none"> ▪ Alarm ▪ Last valid value ▪ Defined value
Factory setting	Alarm
Additional information	<p><i>Options</i></p> <ul style="list-style-type: none"> ▪ Alarm An error message is set. ▪ Last valid value The last valid measured value is used. ▪ Defined value A user-defined measured value is used (Failure value parameter (→ 104)).

Failure value

Navigation	Expert → Input → Current input 1 to n → Failure value (1602–1 to n)
Prerequisite	In the Failure mode parameter (→ 103), the Defined value option is selected.
Description	Use this function to enter the value that the device uses if it does not receive an input signal from the external device, or if the input signal is invalid.
User entry	Signed floating-point number
Factory setting	0

3.4.2 "Status input 1 to n" submenu

Navigation Expert → Input → Status input 1 to n

Status input 1 to n	
Terminal no. (1358–1 to n)	→ 105
Assign stat.inp. (1352–1 to n)	→ 105
Val.stat.inp. (1353–1 to n)	→ 105
Active level (1351–1 to n)	→ 106
Response time (1354–1 to n)	→ 106

Terminal no.

Navigation	 Expert → Input → Status input 1 to n → Terminal no. (1358–1 to n)
Description	Displays the terminal numbers used by the status input module.
User interface	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2)
Additional information	<p><i>"Not used" option</i></p> <p>The status input module does not use any terminal numbers.</p>

Assign stat.inp.

Navigation	 Expert → Input → Status input 1 to n → Assign stat.inp. (1352–1 to n)
Description	Use this function to select the function for the status input.
Selection	<ul style="list-style-type: none"> ■ Off ■ Reset totaliz. 1 ■ Reset totaliz. 2 ■ Reset totaliz. 3 ■ Reset all tot. ■ Flow override
Factory setting	Off
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off The status input is switched off. ■ Reset totaliz. 1...3 The individual totalizers are reset. ■ Reset all tot. All totalizers are reset. ■ Flow override The Flow override (→  76) is activated. <p> Note on the Flow override (→  76):</p> <ul style="list-style-type: none"> ■ The Flow override (→  76) is enabled as long as the level is at the status input (continuous signal). ■ All other assignments react to a change in level (pulse) at the status input.

Val.stat.inp.

Navigation	 Expert → Input → Status input 1 to n → Val.stat.inp. (1353–1 to n)
Description	Displays the current input signal level.

User interface

- High
- Low

Active level**Navigation**

④ Expert → Input → Status input 1 to n → Active level (1351–1 to n)

Description

Use this function to determine the input signal level at which the assigned function is activated.

Selection

- High
- Low

Factory setting

High

Response time**Navigation**

④ Expert → Input → Status input 1 to n → Response time (1354–1 to n)

Description

Use this function to enter the minimum time period for which the input signal level must be present before the selected function is activated.

User entry

5 to 200 ms


Factory setting

50 ms

3.5 "Output" submenu

Navigation

④ ④ Expert → Output

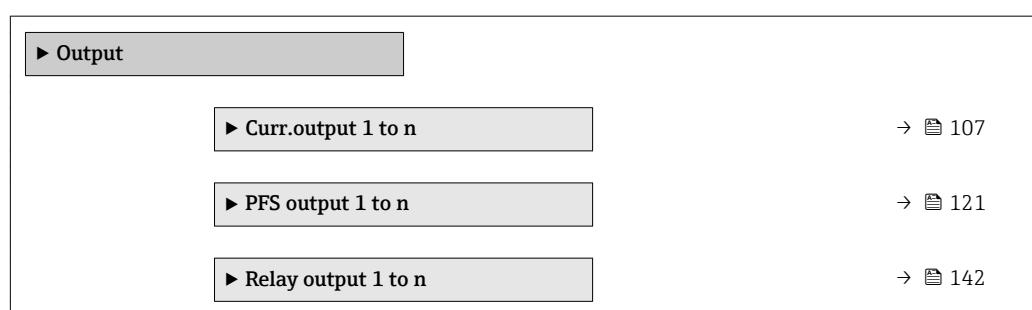

3.5.1 "Current output 1 to n" submenu

Navigation

Expert → Output → Curr.output 1 to n

► Curr.output 1 to n	
Terminal no. (0379-1 to n)	→ 107
Signal mode (0377-1 to n)	→ 108
Assign curr. 1 to n (0359-1 to n)	→ 108
Current span (0353-1 to n)	→ 109
Fixed current (0365-1 to n)	→ 110
0/4 mA value (0367-1 to n)	→ 110
20 mA value (0372-1 to n)	→ 112
Measuring mode (0351-1 to n)	→ 113
Damping out. 1 to n (0363-1 to n)	→ 117
Response time (0378-1 to n)	→ 118
Failure mode (0364-1 to n)	→ 119
Failure current (0352-1 to n)	→ 120
Output curr. 1 to n (0361-1 to n)	→ 120
Measur. curr. 1 to n (0366-1 to n)	→ 121

Terminal no.

Navigation

Expert → Output → Curr.output 1 to n → Terminal no. (0379-1 to n)

Description

Displays the terminal numbers used by the current output module.

User interface

- Not used
- 24-25 (I/O 2)

Additional information

"Not used" option

The current output module does not use any terminal numbers.

Signal mode

Navigation Expert → Output → Curr.output 1 to n → Signal mode (0377–1 to n)

Description Use this function to select the signal mode for the current output.

Selection

- Passive
- Active

Factory setting Active

Assign curr.

Navigation Expert → Output → Curr.output 1 to n → Assign curr. 1 to n (0359–1 to n)

Description Use this function to select a process variable for the current output.

Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: Value 1 display parameter (→ 18)

Selection

- Off
- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow ^{*}
- Carrier mass fl. ^{*}
- Density
- Ref.density
- Concentration ^{*}
- Dynam. viscosity ^{*}
- Kinematic visc.
- TempCompDynVisc ^{*}
- TempCompKinVisc ^{*}
- Temperature
- Carr. pipe temp. ^{*}
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 ^{*}
- Osc. ampl. 0 ^{*}
- Osc. ampl. 1 ^{*}
- Freq. fluct. 0 ^{*}
- Freq. fluct. 1 ^{*}
- Osc. damping 0
- Osc. damping 1 ^{*}
- Osc.damp.fluct 0
- Osc.damp.fluct 1 ^{*}
- Signal asymmetry
- Exc. current 0
- Exc. current 1 ^{*}
- HBSI ^{*}

* Visibility depends on order options or device settings

Factory setting	Mass flow
------------------------	-----------

Current span

Navigation Expert → Output → Curr.output 1 to n → Current span (0353-1 to n)

Description Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

- Selection**
- 4...20 mA NAMUR
 - 4...20 mA US
 - 4...20 mA
 - 0...20 mA
 - Fixed current

Factory setting Country-specific:

- 4...20 mA NAMUR
- 4...20 mA US


- Additional information** *Description*
- In the event of a device alarm, the current output adopts the value specified in the **Failure mode** parameter (→ 119).
■ If the measured value is outside the measuring range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.
■ The measuring range is specified via the **0/4 mA value** parameter (→ 110) and **20 mA value** parameter (→ 112).

"Fixed current" option

The current value is set via the **Fixed current** parameter (→ 110).

Example

Shows the relationship between the current span for the output of the process variable and the lower and upper alarm levels:

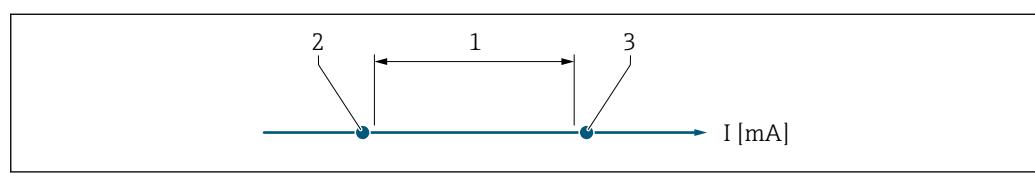

- 1 Current span for process value
2 Lower level for signal on alarm
3 Upper level for signal on alarm

Selection

Options	1	2	3
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US	3.9 to 20.8 mA US	< 3.6 mA	> 21.95 mA

Options	1	2	3
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
0...20 mA	0 to 20.5 mA	< 0 mA	> 21.95 mA

 If the flow exceeds or falls below the upper or lower signal on alarm level, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

Fixed current



Navigation	 Expert → Output → Curr.output 1 to n → Fixed current (0365–1 to n)
Prerequisite	The Fixed current option is selected in the Current span parameter (→ 109).
Description	Use this function to enter a constant current value for the current output.
User entry	0 to 22.5 mA
Factory setting	22.5 mA

0/4 mA value



Navigation	 Expert → Output → Curr.output 1 to n → 0/4 mA value (0367–1 to n)
Prerequisite	One of the following options is selected in the Current span parameter (→ 109): <ul style="list-style-type: none"> ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA
Description	Use this function to enter a value for the 0/4 mA current.
User entry	Signed floating-point number
Factory setting	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
Additional information	<i>Description</i> Positive and negative values are permitted depending on the process variable assigned in the Assign curr. parameter (→ 108). In addition, the value can be greater than or

smaller than the value assigned for the 20 mA current in the **20 mA value** parameter (→ 112).

Dependency

i The unit depends on the process variable selected in the **Assign curr.** parameter (→ 108).

Current output behavior

The current output behaves differently depending on the settings configured in the following parameters:

- Current span (→ 109)
- Failure mode (→ 119)


Configuration examples

Some examples of parameter settings and their effect on the current output are given in the following section.

Configuration example A

Measuring mode with **Forward flow** option

- **0/4 mA value** parameter (→ 110) = not equal to zero flow (e.g. -250 m³/h)
- **20 mA value** parameter (→ 112) = not equal to zero flow (e.g. +750 m³/h)
- Calculated current value = 8 mA at zero flow

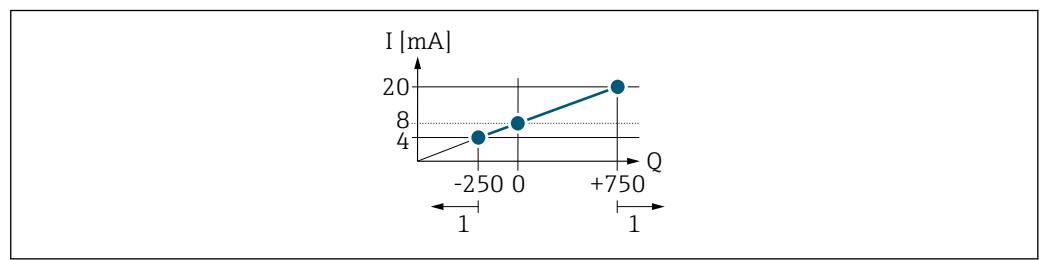


Q Flow
 I Current
 1 Measuring range is exceeded or undershot

The operational range of the measuring device is defined by the values entered for the **0/4 mA value** parameter (→ 110) and **20 mA value** parameter (→ 112). If the effective flow exceeds or falls below this operational range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

Configuration example B

Measuring mode with **Forward/Reverse** option

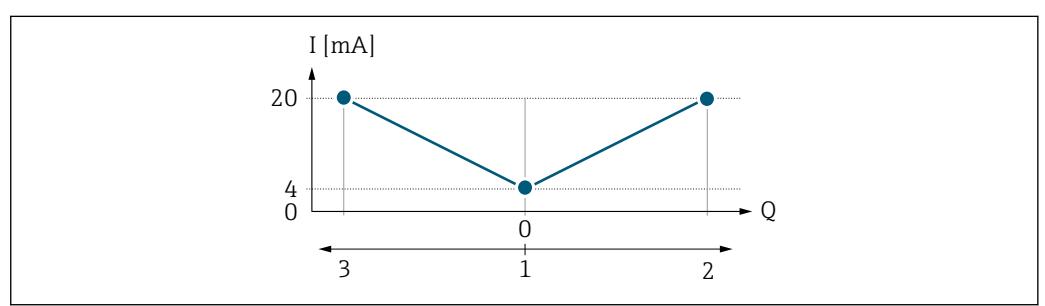

I Current
 Q Flow
 1 Value assigned to the 0/4 mA current
 2 Forward flow
 3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 110) and **20 mA value** parameter (→ 112) must have the same sign. The value for the **20 mA value** parameter (→ 112) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 112) (e.g. forward flow).

Configuration example C

Measuring mode with **Rev. flow comp.** option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s → 113.

20 mA value



Navigation

Expert → Output → Curr.output 1 to n → 20 mA value (0372-1 to n)

Prerequisite

One of the following options is selected in the **Current span** parameter (→ 109):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

Description

Use this function to enter a value for the 20 mA current.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter → 328

Additional information

Description

Positive and negative values are permitted depending on the process variable assigned in the **Assign curr.** parameter (→ 108). In addition, the value can be greater than or smaller than the value assigned for the 0/4 mA current in the **0/4 mA value** parameter (→ 110).

Dependency

The unit depends on the process variable selected in the **Assign curr.** parameter (→ 108).

Example

- Value assigned to 0/4 mA = -250 m³/h
- Value assigned to 20 mA = +750 m³/h
- Calculated current value = 8 mA (at zero flow)

If the **Forward/Reverse** option is selected in the **Measuring mode** parameter (→ 113), different signs cannot be entered for the values of the **0/4 mA value** parameter (→ 110) and **20 mA value** parameter (→ 112). The diagnostic message **△S441 Curr.output 1 to n** is displayed.

Configuration examples

Observe the configuration examples for the **0/4 mA value** parameter (→ 110).

Measuring mode

Navigation Expert → Output → Curr.output 1 to n → Measuring mode (0351-1 to n)

Prerequisite In the **Assign curr.** parameter (→ 108), one of the following options is selected:

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Osc. ampl. 0 *
- Osc. ampl. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *
- HBSI *

Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: Value 1 display parameter (→ 18)

In the **Current span** parameter (→ 109), one of the following options is selected:

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

Description Use this function to select the measuring mode for the current output.

Selection

- Forward flow
- Forward/Reverse
- Rev. flow comp.

Factory setting Forward flow

* Visibility depends on order options or device settings

Additional information**Description**


i The process variable that is assigned to the current output via the **Assign curr.** parameter (→ 108) is displayed below the parameter.

"Forward flow" option

The current output signal is proportional to the process variable assigned. The measuring range is defined by the values that are assigned to the 0/4 mA and 20 mA current value.

The flow components outside the scaled measuring range are taken into account for signal output as follows:

- Both values are defined such that they are not equal to zero flow e.g.:
 - 0/4 mA current value = -5 m³/h
 - 20 mA current value = 10 m³/h
- If the effective flow exceeds or falls below this measuring range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

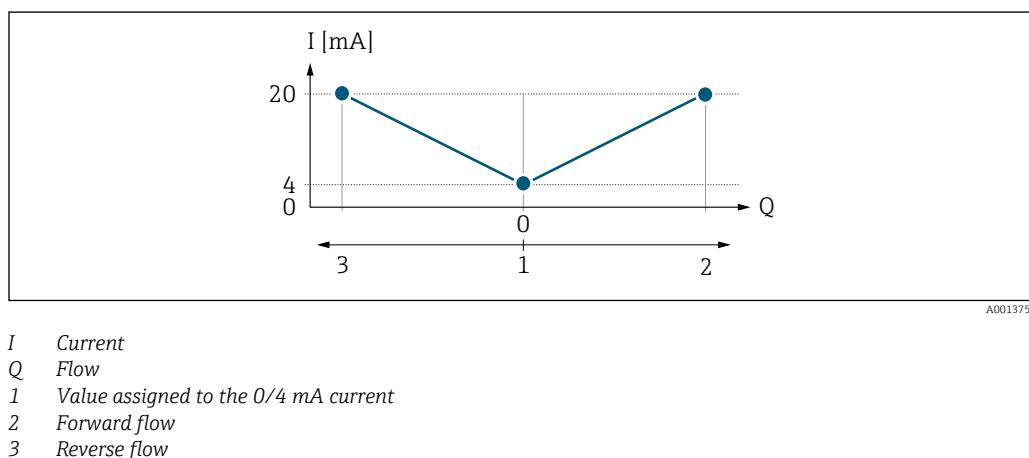"Forward/Reverse" option

- The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 110) and **20 mA value** parameter (→ 112) must have the same sign.
- The value for the **20 mA value** parameter (→ 112) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 112) (e.g. forward flow).

"Rev. flow comp." option

The **Rev. flow comp.** option is primarily used to compensate for abrupt reverse flow which can occur in connection with positive displacement pumps as a result of wear or high viscosity. The reverse flows are recorded in a buffer and balanced against forward flow the next time flow is in the forward direction.


If buffering cannot be processed within approx. 60 s, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

Flow values can aggregate in the buffer in the event of prolonged and unwanted fluid reverse flow. However, these flows are not taken into consideration by the current output configuration, i.e. the reverse flow is not compensated.

If this option is set, the measuring device does not attenuate the flow signal. The flow signal is not attenuated.

*Examples of how the current output behaves***Example 1**


Defined measuring range: lower range value and upper range value with the **same** sign

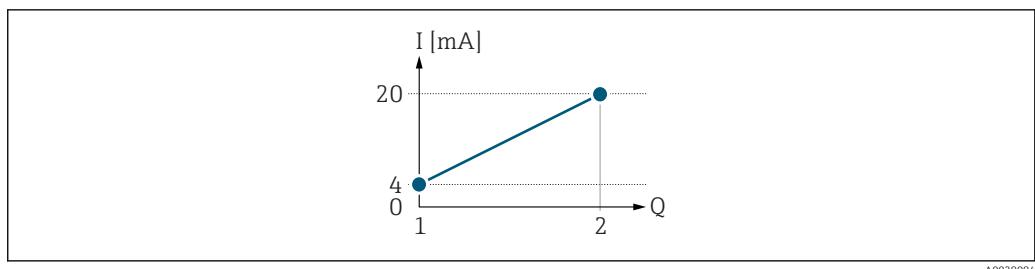**Fig 2 Measuring range***I Current**Q Flow*


1 Lower range value (value assigned to 0/4 mA current)

2 Upper range value (value assigned to 20 mA current)


With the following flow response:

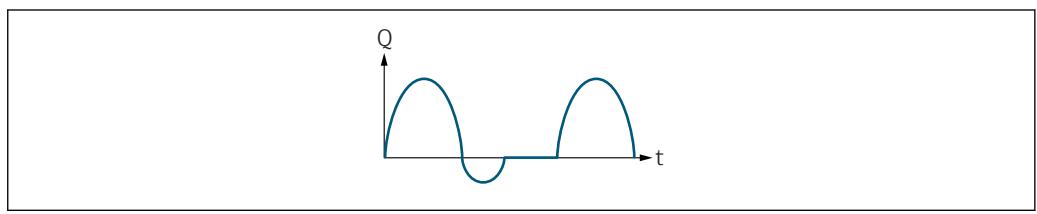**Fig 3 Flow response***Q Flow**t Time*With **Forward flow** option


The current output signal is proportional to the process variable assigned. The flow components outside the scaled measuring range are not taken into account for signal output:.

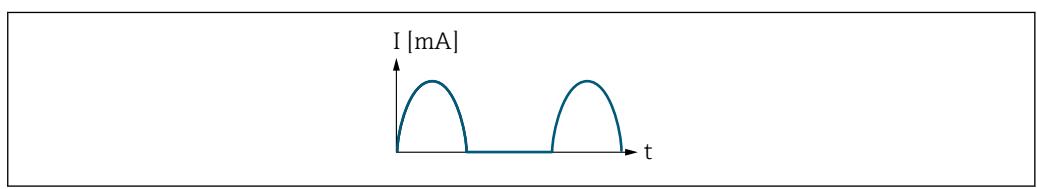*I Current**t Time*With **Forward/Reverse** option

The current output signal is independent of the direction of flow.

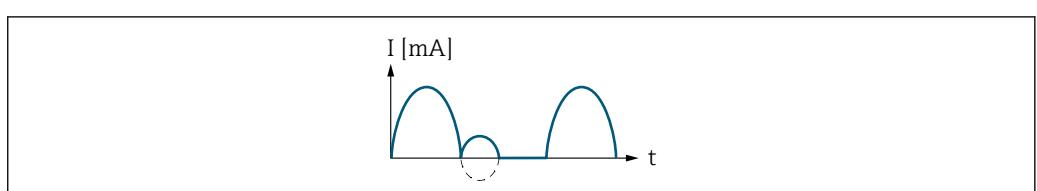*I Current**t Time*With **Rev. flow comp.** option


Flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

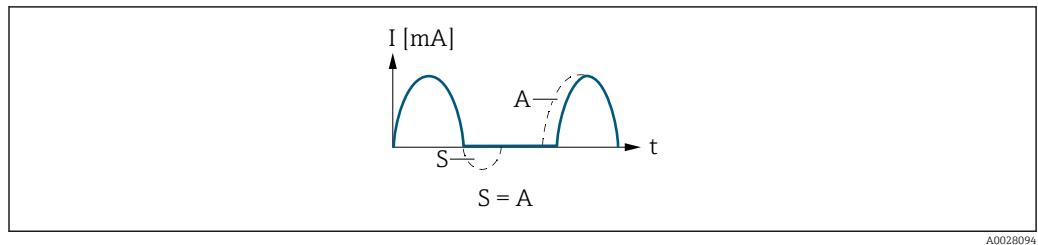

I Current
 t Time
 S Flow components saved
 A Balancing of saved flow components


Example 2

Defined measuring range: lower range value and upper range value with **different signs**

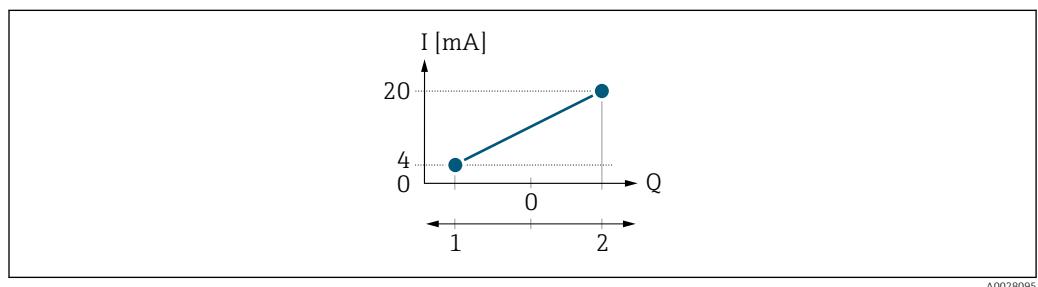

I Current
 Q Flow
 1 Lower range value (value assigned to 0/4 mA current)
 2 Upper range value (value assigned to 20 mA current)


With flow a (\rightarrow) outside, b ($- -$) inside the measuring range

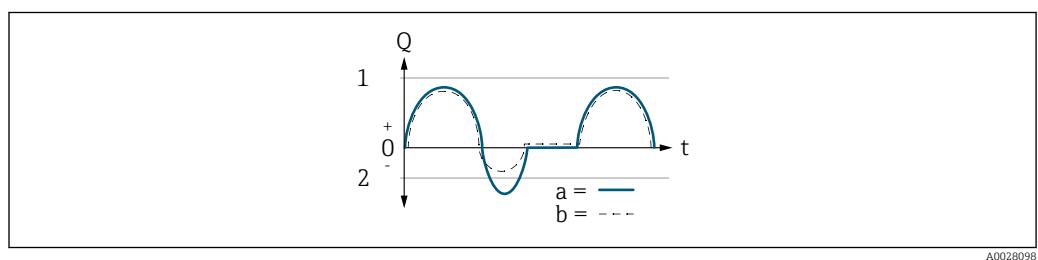

Q Flow
 t Time
 1 Lower range value (value assigned to 0/4 mA current)
 2 Upper range value (value assigned to 20 mA current)

With **Forward flow** option

- a (\rightarrow): The flow components outside the scaled measuring range cannot be taken into account for signal output.
The diagnostic message **△S441 Curr.output 1 to n** is displayed.
- b ($- -$): The current output signal is proportional to the process variable assigned.

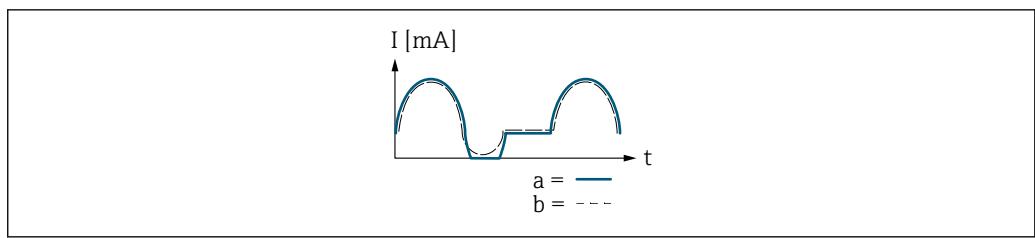


I Current
t Time

With Forward/Reverse option

This option is not possible in this case as the values for the **0/4 mA value** parameter (\rightarrow 110) and **20 mA value** parameter (\rightarrow 112) have different signs.

With Rev. flow comp. option

Flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

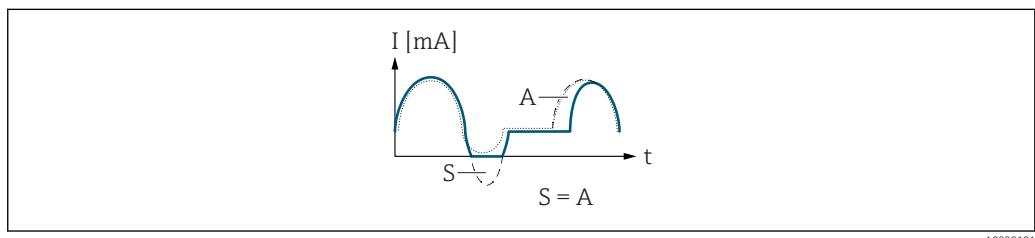

I Current
t Time
S Flow components saved
A Balancing of saved flow components

Damping out.



Navigation

Expert \rightarrow Output \rightarrow Curr.output 1 to n \rightarrow Damping out. 1 to n (0363-1 to n)

Prerequisite

A process variable is selected in the **Assign curr.** parameter (\rightarrow 108) and one of the following options is selected in the **Current span** parameter (\rightarrow 109):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

Description

Use this function to enter a time constant for the reaction time of the current output signal to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

1.0 s

Additional information*User entry*

Use this function to enter a time constant (PT1 element⁶⁾) for current output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.

 Damping is switched off if **0** is entered (factory setting).

Response time**Navigation**

 Expert → Output → Curr.output 1 to n → Response time (0378-1 to n)

Prerequisite

One of the following options is selected in the **Assign curr.** parameter (→  108):

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Osc. ampl. 0 *
- Osc. ampl. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *
- HBSI *

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: Value 1 display parameter (→  18)

One of the following options is selected in the **Current span** parameter (→  109):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

6) proportional transmission behavior with first order delay

* Visibility depends on order options or device settings

Description	Displays the response time. This specifies how quickly the current output reaches the measured value change of 63 % of 100 % of the measured value change.
User interface	Positive floating-point number
Additional information	<p><i>Description</i></p> <p> The response time is made up of the time specified for the following dampings:</p> <ul style="list-style-type: none">▪ Current output damping → 117 and▪ Depending on the measured variable assigned to the output.<ul style="list-style-type: none">- Flow damping or- Density damping or- Temperature damping

Failure mode	
Navigation	 Expert → Output → Curr.output 1 to n → Failure mode (0364-1 to n)
Prerequisite	A process variable is selected in the Assign curr. parameter (→ 108) and one of the following options is selected in the Current span parameter (→ 109): <ul style="list-style-type: none">▪ 4...20 mA NAMUR▪ 4...20 mA US▪ 4...20 mA▪ 0...20 mA
Description	Use this function to select the value of the current output in the event of a device alarm.
Selection	<ul style="list-style-type: none">▪ Min.▪ Max.▪ Last valid value▪ Actual value▪ Defined value
Factory setting	Max.

Additional information**Description**

 This setting does not affect the failsafe mode of other outputs and totalizers. This is specified in separate parameters.

"Min." option

The current output adopts the value of the lower level for signal on alarm.

 The signal on alarm level is defined via the **Current span** parameter (→ 109).

"Max." option

The current output adopts the value of the upper level for signal on alarm.

 The signal on alarm level is defined via the **Current span** parameter (→ 109).

"Last valid value" option

The current output adopts the last measured value that was valid before the device alarm occurred.

"Actual value" option

The current output adopts the measured value on the basis of the current flow measurement; the device alarm is ignored.

"Defined value" option

The current output adopts a defined measured value.

 The measured value is defined via the **Failure current** parameter (→ 120).

Failure current**Navigation**

 Expert → Output → Curr.output 1 to n → Failure current (0352-1 to n)

Prerequisites

The **Defined value** option is selected in the **Failure mode** parameter (→ 119).

Description

Use this function to enter a fixed value that the current output adopts in the event of a device alarm.

User entry

0 to 22.5 mA

Factory setting

22.5 mA

Output curr.**Navigation**

 Expert → Output → Curr.output 1 to n → Output curr. 1 to n (0361-1 to n)

Description

Displays the current value currently calculated for the current output.

User interface

3.59 to 22.5 mA

Measur. curr.

Navigation	Expert → Output → Curr.output 1 to n → Measur. curr. 1 to n (0366–1 to n)
Description	Use this function to display the actual measured value of the output current.
User interface	0 to 30 mA

3.5.2 "Pulse/frequency/switch output 1 to n" submenu*Navigation*

Expert → Output → PFS output 1 to n

► PFS output 1 to n	
Terminal no. (0492–1 to n)	→ 122
Signal mode (0490–1 to n)	→ 123
Operating mode (0469–1 to n)	→ 123
Assign pulse 1 to n (0460–1 to n)	→ 125
Value per pulse (0455–1 to n)	→ 125
Pulse width (0452–1 to n)	→ 126
Measuring mode (0457–1 to n)	→ 126
Failure mode (0480–1 to n)	→ 127
Pulse output 1 to n (0456–1 to n)	→ 128
Assign freq. (0478–1 to n)	→ 128
Min. freq. value (0453–1 to n)	→ 129
Max. freq. value (0454–1 to n)	→ 130
Val. at min.freq (0476–1 to n)	→ 130
Val. at max.freq (0475–1 to n)	→ 130
Measuring mode (0479–1 to n)	→ 131
Damping out. 1 to n (0477–1 to n)	→ 132

Response time (0491-1 to n)	→ 133
Failure mode (0451-1 to n)	→ 134
Failure freq. (0474-1 to n)	→ 135
Output freq. 1 to n (0471-1 to n)	→ 135
Switch out funct (0481-1 to n)	→ 135
Assign diag. beh (0482-1 to n)	→ 136
Assign limit (0483-1 to n)	→ 137
Switch-on value (0466-1 to n)	→ 138
Switch-off value (0464-1 to n)	→ 139
Assign dir.check (0484-1 to n)	→ 139
Assign status (0485-1 to n)	→ 140
Switch-on delay (0467-1 to n)	→ 140
Switch-off delay (0465-1 to n)	→ 140
Failure mode (0486-1 to n)	→ 141
Switch status 1 to n (0461-1 to n)	→ 141
Invert outp.sig. (0470-1 to n)	→ 142

Terminal no.

Navigation	Expert → Output → PFS output 1 to n → Terminal no. (0492-1 to n)
Description	Displays the terminal numbers used by the pulse/frequency/switch output module.
User interface	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2)
Additional information	<p><i>"Not used" option</i></p> <p>The pulse/frequency/switch output module does not use any terminal numbers.</p>

Signal mode

Navigation Expert → Output → PFS output 1 to n → Signal mode (0490–1 to n)

Description Use this function to select the signal mode for the pulse/frequency/switch output.

Selection

- Passive
- Active

Factory setting Passive

Operating mode

Navigation Expert → Output → PFS output 1 to n → Operating mode (0469–1 to n)

Description Use this function to select the operating mode of the output as a pulse, frequency or switch output.

Selection

- Pulse
- Frequency
- Switch

Factory setting Pulse


Additional information "Pulse" option

Quantity-dependent pulse with configurable pulse width

- Whenever a specific mass, volume, corrected volume, target mass or carrier mass is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width).
- The pulses are never shorter than the set duration.

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Pulse width 0.05 ms
- Pulse rate 1000 Impuls/s

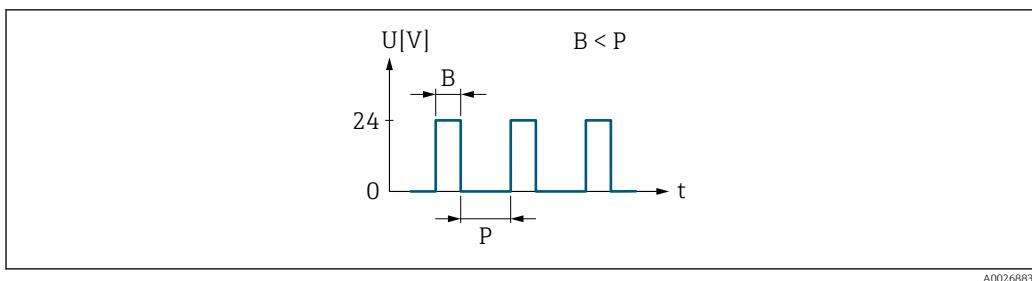

■ 5 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Frequency" option

Flow-proportional frequency output with 1:1 on/off ratio

An output frequency is output that is proportional to the value of a process variable, such as mass flow, volume flow, corrected volume flow, target mass flow, carrier mass flow, density, reference density, concentration, dynamic viscosity, kinematic viscosity, temperature-compensated dynamic viscosity, temperature-compensated kinematic viscosity, temperature, carrier tube temperature, electronic temperature, vibration frequency, frequency fluctuation, oscillation amplitude, oscillation damping, oscillation damping fluctuation, signal asymmetry or excitation current.

Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1000 g/s
- Output frequency approx. 1000 Hz

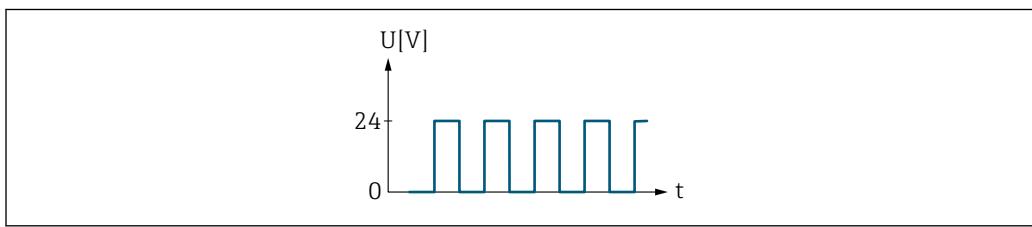


■ 6 Flow-proportional frequency output

"Switch" option

Contact for displaying a condition (e.g. alarm or warning if a limit value is reached)

Example


Alarm response without alarm

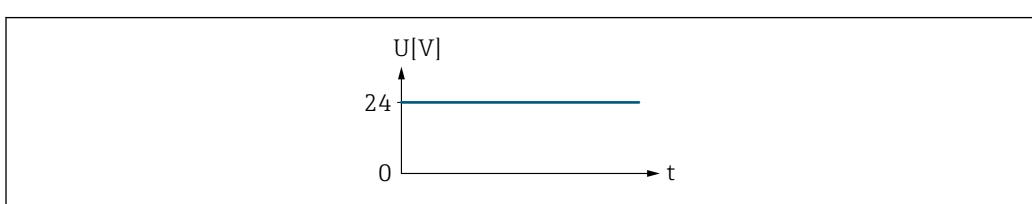

■ 7 No alarm, high level

Example

Alarm response in case of alarm

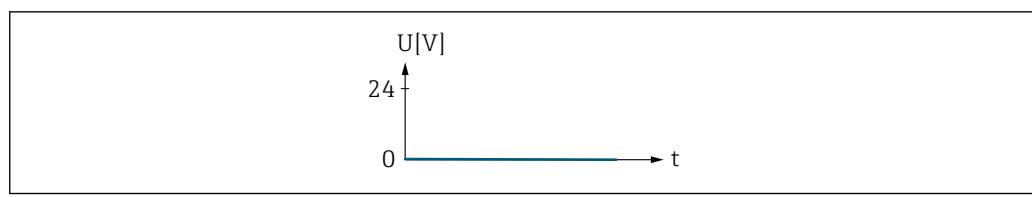

A0026885

8 Alarm, low level

Assign pulse

Navigation Expert → Output → PFS output 1 to n → Assign pulse 1 to n (0460–1 to n)

Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→ 123) parameter.

Description Use this function to select the process variable for the pulse output.

Selection

- Off
- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *

Factory setting Off

Value per pulse

Navigation Expert → Output → PFS output 1 to n → Value per pulse (0455–1 to n)

Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→ 123) and a process variable is selected in the **Assign pulse** parameter (→ 125).

Description Use this function to enter the value for the measured value that a pulse is equivalent to.

User entry Signed floating-point number

Factory setting Depends on country and nominal diameter → 329

Additional information *User entry*

Weighting of the pulse output with a quantity.

The lower the pulse value, the

- better the resolution.
- the higher the frequency of the pulse response.

* Visibility depends on order options or device settings

Pulse width**Navigation**

Expert → Output → PFS output 1 to n → Pulse width (0452-1 to n)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 123) and a process variable is selected in the **Assign pulse** parameter (→ 125).

Description

Use this function to enter the duration of the output pulse.

User entry


0.05 to 2 000 ms

Factory setting

100 ms

Additional information*Description*

- Define how long a pulse is (duration).
- The maximum pulse rate is defined by $f_{\max} = 1 / (2 \times \text{pulse width})$.
- The interval between two pulses lasts at least as long as the set pulse width.
- The maximum flow is defined by $Q_{\max} = f_{\max} \times \text{pulse value}$.
- If the flow exceeds these limit values, the measuring device displays the diagnostic message **△S443 Pulse output 1 to n**.

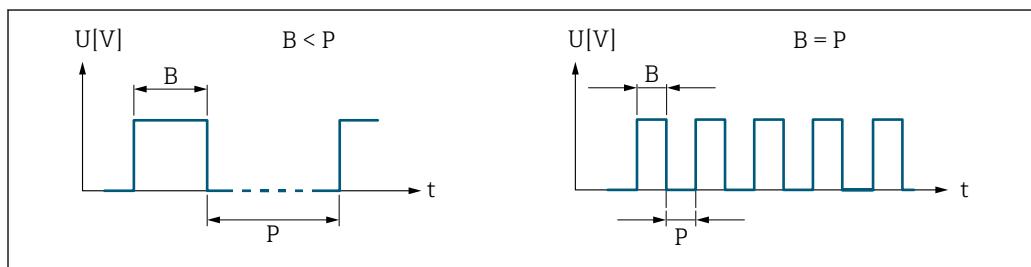

B Pulse width entered
P Pauses between the individual pulses

Example

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{\max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{\max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

Measuring mode**Navigation**

Expert → Output → PFS output 1 to n → Measuring mode (0457-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 123), the **Pulse** option is selected, and one of the following options is selected in the **Assign pulse** parameter (→ 125):

- Mass flow
- Volume flow
- Correct.vol.flow *
- Target mass flow *
- Carrier mass fl. *

* Visibility depends on order options or device settings

Description	Use this function to select the measuring mode for the pulse output.
Selection	<ul style="list-style-type: none"> ▪ Forward flow ▪ Forward/Reverse ▪ Reverse flow ▪ Rev. flow comp.
Factory setting	Forward flow
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Forward flow Positive flow is output, negative flow is not output. ▪ Forward/Reverse Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow. ▪ Reverse flow Negative flow is output, positive flow is not output. ▪ Rev. flow comp. The flow components outside the span are buffered, balanced and output after a maximum delay of 60 s. <p> For a detailed description of the options available, see the Measuring mode parameter (→ 113)</p> <p><i>Examples</i></p> <p> For a detailed description of the configuration examples, see the Measuring mode parameter (→ 113)</p>

Failure mode	
Navigation	 Expert → Output → PFS output 1 to n → Failure mode (0480-1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 123) and a process variable is selected in the Assign pulse parameter (→ 125).
Description	Use this function to select the failure mode of the pulse output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ No pulses
Factory setting	No pulses
Additional information	<p><i>Description</i></p> <p>The dictates of safety render it advisable to ensure that the pulse output shows a predefined behavior in the event of a device alarm.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Actual value In the event of a device alarm, the pulse output continues on the basis of the current flow measurement. The fault is ignored. ▪ No pulses In the event of a device alarm, the pulse output is "switched off".

NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The **Actual value** option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Pulse output

Navigation  Expert → Output → PFS output 1 to n → Pulse output 1 to n (0456–1 to n)


Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→  123) parameter.

Description Displays the pulse frequency currently output.

User interface Positive floating-point number

Additional information *Description*

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

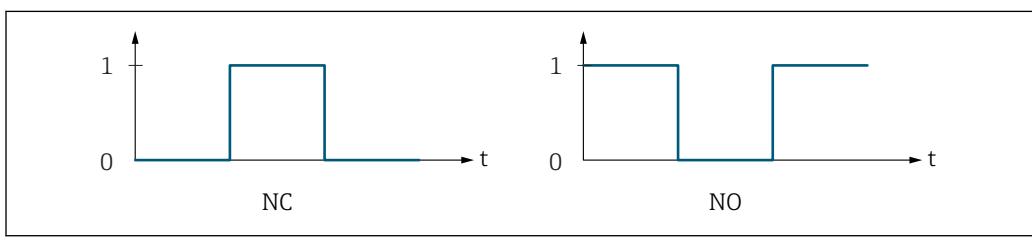

0 Non-conductive
1 Conductive
NC NC contact (normally closed)
NO NO contact (normally open)

The output behavior can be reversed via the **Invert outp.sig.** parameter (→  142) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→  127)) can be configured.

Assign freq.



Navigation  Expert → Output → PFS output 1 to n → Assign freq. (0478–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→  123) parameter.

Description Use this function to select the process variable for the frequency output.

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry: Value 1 display** parameter (→  18)

Selection	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Correct.vol.flow ■ Target mass flow [*] ■ Carrier mass fl. ■ Density ■ Ref.density ■ Concentration [*] ■ Dynam. viscosity [*] ■ Kinematic visc. ■ TempCompDynVisc [*] ■ TempCompKinVisc ■ Temperature ■ Carr. pipe temp. [*] ■ Electronic temp. ■ Osc. freq. 0 ■ Osc. freq. 1 [*] ■ Osc. ampl. 0 [*] ■ Osc. ampl. 1 [*] ■ Freq. fluct. 0 ■ Freq. fluct. 1 [*] ■ Osc. damping 0 ■ Osc. damping 1 [*] ■ Osc.damp.fluct 0 ■ Osc.damp.fluct 1 [*] ■ Signal asymmetry ■ Exc. current 0 ■ Exc. current 1 [*] ■ HBSI
Factory setting	Off

Min. freq. value

Navigation Expert → Output → PFS output 1 to n → Min. freq. value (0453-1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 123) and a process variable is selected in the **Assign freq.** parameter (→ 128).

Description Use this function to enter the start value frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 0.0 Hz

* Visibility depends on order options or device settings

Max. freq. value

Navigation Expert → Output → PFS output 1 to n → Max. freq. value (0454–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 123) and a process variable is selected in the **Assign freq.** parameter (→ 128).

Description Use this function to enter the end value frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 10 000.0 Hz

Val. at min.freq

Navigation Expert → Output → PFS output 1 to n → Val. at min.freq (0476–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 123) and a process variable is selected in the **Assign freq.** parameter (→ 128).

Description Use this function to enter the measured value for the start value frequency.

User entry Signed floating-point number

Factory setting Depends on country and nominal diameter

Additional information *Dependency*

The entry depends on the process variable selected in the **Assign freq.** parameter (→ 128).

Val. at max.freq

Navigation Expert → Output → PFS output 1 to n → Val. at max.freq (0475–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 123) and a process variable is selected in the **Assign freq.** parameter (→ 128).

Description Use this function to enter the measured value for the end value frequency.

User entry Signed floating-point number

Factory setting Depends on country and nominal diameter

Additional information*Description*

Use this function to enter the maximum measured value at the maximum frequency. The selected process variable is output as a proportional frequency.

Dependency

 The entry depends on the process variable selected in the **Assign freq.** parameter (→ 128).

Measuring mode**Navigation**

Expert → Output → PFS output 1 to n → Measuring mode (0479-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 123), the **Frequency** option is selected, and one of the following options is selected in the **Assign freq.** parameter (→ 128):

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Osc. ampl. 0 *
- Osc. ampl. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: Value 1 display parameter (→ 18)

Description

Use this function to select the measuring mode for the frequency output.

Selection

- Forward flow
- Forward/Reverse
- Rev. flow comp.

* Visibility depends on order options or device settings

Factory setting Forward flow

Additional information *Selection*

 For a detailed description of the options available, see the **Measuring mode** parameter (→ 113)

Examples

 For a detailed description of the configuration examples, see the **Measuring mode** parameter (→ 113)

Damping out.



Navigation  Expert → Output → PFS output 1 to n → Damping out. 1 to n (0477–1 to n)

Prerequisite

In the **Operating mode** parameter (→ 123), the **Frequency** option is selected, and one of the following options is selected in the **Assign freq.** parameter (→ 128):

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl.*
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp.*
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Osc. ampl. 0 *
- Osc. ampl. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: **Value 1 display** parameter (→ 18)

Description

Use this function to enter a time constant for the reaction time of the output signal to fluctuations in the measured value.

User entry

0 to 999.9 s

* Visibility depends on order options or device settings

Factory setting 0.0 s

Additional information *User entry*

Use this function to enter a time constant (PT1 element⁷⁾) for frequency output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.

 Damping is switched off if 0 is entered (factory setting).

The frequency output is subject to separate damping that is independent of all preceding time constants.

Response time

Navigation  Expert → Output → PFS output 1 to n → Response time (0491–1 to n)

Prerequisite

In the **Operating mode** parameter (→ 123), the **Frequency** option is selected, and one of the following options is selected in the **Assign freq.** parameter (→ 128):

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *
- Density
- Ref.density *
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Osc. ampl. 0 *
- Osc. ampl. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: **Value 1 display** parameter (→ 18)

⁷⁾ proportional transmission behavior with first order delay

* Visibility depends on order options or device settings

Description	Displays the response time. This specifies how quickly the pulse/frequency/switch output reaches the measured value change of 63 % of 100 % of the measured value change.
User interface	Positive floating-point number
Additional information	<i>Description</i> i The response time is made up of the time specified for the following dampings: <ul style="list-style-type: none">▪ Damping of pulse/frequency/switch output → 117 and▪ Depending on the measured variable assigned to the output.<ul style="list-style-type: none">- Flow damping or- Density damping or- Temperature damping

Failure mode

Navigation	Expert → Output → PFS output 1 to n → Failure mode (0451–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 123) and a process variable is selected in the Assign freq. parameter (→ 128).
Description	Use this function to select the failure mode of the frequency output in the event of a device alarm.
Selection	<ul style="list-style-type: none">▪ Actual value▪ Defined value▪ 0 Hz
Factory setting	0 Hz
Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ Actual value<ul style="list-style-type: none">In the event of a device alarm, the frequency output continues on the basis of the current flow measurement. The device alarm is ignored.▪ Defined value<ul style="list-style-type: none">In the event of a device alarm, the frequency output continues on the basis of a predefined value. The Failure freq. (→ 135) replaces the current measured value, making it possible to bypass the device alarm. The actual measurement is switched off for the duration of the device alarm.▪ 0 Hz<ul style="list-style-type: none">In the event of a device alarm, the frequency output is "switched off". <p>NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.</p>

Failure freq.

Navigation	Expert → Output → PFS output 1 to n → Failure freq. (0474–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 123) and a process variable is selected in the Assign freq. parameter (→ 128).
Description	Use this function to enter the value for the frequency output in the event of a device alarm in order to bypass the alarm.
User entry	0.0 to 12 500.0 Hz
Factory setting	0.0 Hz

Output freq.

Navigation	Expert → Output → PFS output 1 to n → Output freq. 1 to n (0471–1 to n)
Prerequisite	In the Operating mode parameter (→ 123), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Switch out funct

Navigation	Expert → Output → PFS output 1 to n → Switch out funct (0481–1 to n)
Prerequisite	The Switch option is selected in the Operating mode parameter (→ 123).
Description	Use this function to select a function for the switch output.
Selection	<ul style="list-style-type: none">■ Off■ On■ Diag. behavior■ Limit■ Fl. direct.check■ Status
Factory setting	Off

Additional information*Selection*

- Off
The switch output is permanently switched off (open, non-conductive).
- On
The switch output is permanently switched on (closed, conductive).
- Diag. behavior
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Fl. direct.check
Indicates the flow direction (forward or reverse flow).
- Status
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign diag. beh**Navigation**

Expert → Output → PFS output 1 to n → Assign diag. beh (0482-1 to n)

Prerequisite

- In the **Operating mode** parameter (→ 123), the **Switch** option is selected.
- In the **Switch out funct** parameter (→ 135), the **Diag. behavior** option is selected.

Description

Use this function to select the diagnostic event category that is displayed for the switch output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting

Alarm

Additional information*Description*

If no diagnostic event is pending, the switch output is closed and conductive.

Selection

- Alarm
The switch output signals only diagnostic events in the alarm category.
- Alarm or warning
The switch output signals diagnostic events in the alarm and warning category.
- Warning
The switch output signals only diagnostic events in the warning category.

Assign limit

Navigation Expert → Output → PFS output 1 to n → Assign limit (0483–1 to n)

Prerequisite The **Switch** option is selected in the **Operating mode** parameter (→ 123) parameter.
The **Limit** option is selected in the **Switch out funct** parameter (→ 135) parameter.

Description Use this function to select a process variable for the limit function.


- Selection**
- Mass flow
 - Volume flow
 - Correct.vol.flow
 - Target mass flow *
 - Carrier mass fl.*
 - Density
 - Ref.density
 - Dynam. viscosity *
 - Concentration *
 - Kinematic visc. *
 - TempCompDynVisc *
 - TempCompKinVisc
 - Temperature
 - Totalizer 1
 - Totalizer 2
 - Totalizer 3
 - Oscil. damping

Factory setting Mass flow

Additional information *Description*

Behavior of status output when Switch-on value > Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

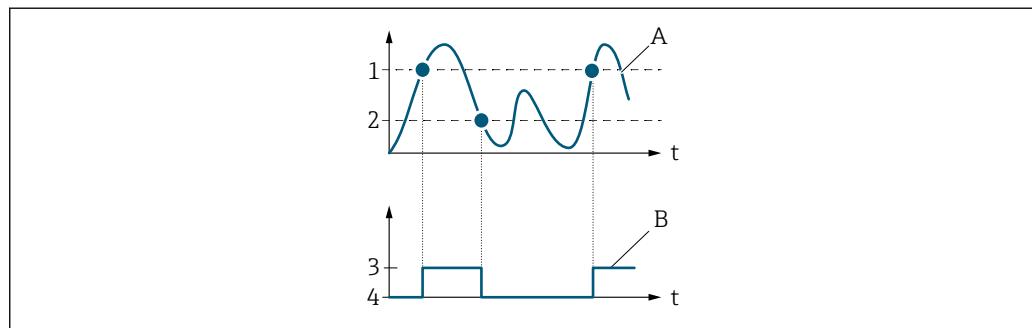


A0026891

- | | |
|---|------------------|
| 1 | Switch-on value |
| 2 | Switch-off value |
| 3 | Conductive |
| 4 | Non-conductive |
| A | Process variable |
| B | Status output |

* Visibility depends on order options or device settings

Behavior of status output when Switch-on value < Switch-off value:

- Process variable < Switch-on value: transistor is conductive
- Process variable > Switch-off value: transistor is non-conductive

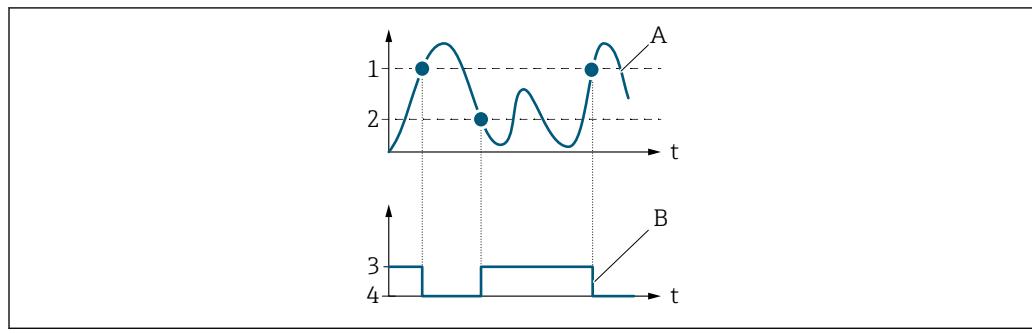


A0026892

- | | |
|---|------------------|
| 1 | Switch-off value |
| 2 | Switch-on value |
| 3 | Conductive |
| 4 | Non-conductive |
| A | Process variable |
| B | Status output |

Behavior of status output when Switch-on value = Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

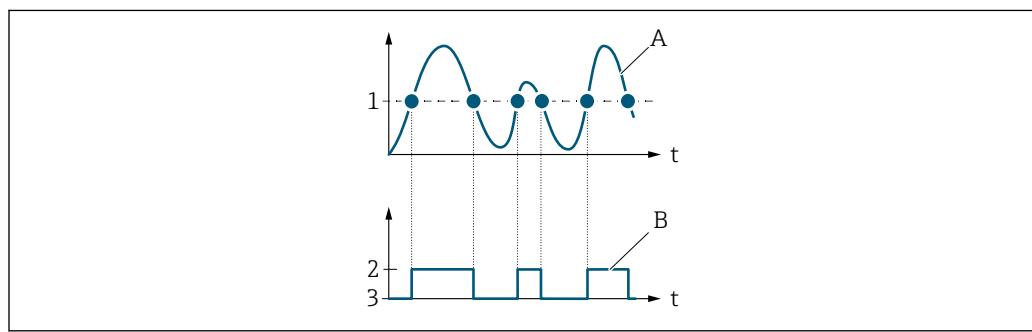

A0026893

- | | |
|---|------------------------------------|
| 1 | Switch-on value = Switch-off value |
| 2 | Conductive |
| 3 | Non-conductive |
| A | Process variable |
| B | Status output |

Switch-on value



Navigation

Expert → Output → PFS output 1 to n → Switch-on value (0466-1 to n)

Prerequisite

- In the **Operating mode** parameter (→ 123), the **Switch** option is selected.
- In the **Switch out funct** parameter (→ 135), the **Limit** option is selected.

Description

Use this function to enter the measured value for the switch-on point.

User entry

Signed floating-point number

Factory setting	Country-specific: ■ 0 kg/h ■ 0 lb/min
Additional information	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).</p> <p> When using a hysteresis: Switch-on value > Switch-off value.</p> <p><i>Dependency</i></p> <p> The unit depends on the process variable selected in the Assign limit parameter (→ 137).</p>

Switch-off value



Navigation	 Expert → Output → PFS output 1 to n → Switch-off value (0464-1 to n)
Prerequisite	<ul style="list-style-type: none"> ■ In the Operating mode parameter (→ 123), the Switch option is selected. ■ In the Switch out funct parameter (→ 135), the Limit option is selected.
Description	Use this function to enter the measured value for the switch-off point.
User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 kg/h ■ 0 lb/min
Additional information	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).</p> <p> When using a hysteresis: Switch-on value > Switch-off value.</p> <p><i>Dependency</i></p> <p> The unit depends on the process variable selected in the Assign limit parameter (→ 137).</p>

Assign dir.check



Navigation	 Expert → Output → PFS output 1 to n → Assign dir.check (0484-1 to n)
Prerequisite	<ul style="list-style-type: none"> ■ The Switch option is selected in the Operating mode parameter (→ 123). ■ The Fl. direct.check option is selected in the Switch out funct parameter (→ 135).
Description	Use this function to select a process variable for monitoring the flow direction.

Selection	<ul style="list-style-type: none">▪ Off▪ Volume flow▪ Mass flow▪ Correct.vol.flow
Factory setting	Mass flow

Assign status

Navigation	 Expert → Output → PFS output 1 to n → Assign status (0485-1 to n)
Prerequisite	<ul style="list-style-type: none">▪ The Switch option is selected in the Operating mode parameter (→ 123).▪ The Status option is selected in the Switch out funct parameter (→ 135).
Description	Use this function to select a device status for the switch output.
Selection	<ul style="list-style-type: none">▪ Partial pipe det▪ Low flow cut off▪ Digital outp. 6
Factory setting	Partial pipe det
Additional information	<i>Options</i> If empty pipe detection or low flow cut off are enabled, the output is conductive. Otherwise, the switch output is non-conductive.

Switch-on delay

Navigation	 Expert → Output → PFS output 1 to n → Switch-on delay (0467-1 to n)
Prerequisite	<ul style="list-style-type: none">▪ The Switch option is selected in the Operating mode parameter (→ 123).▪ The Limit option is selected in the Switch out funct parameter (→ 135).
Description	Use this function to enter a delay time for switching on the switch output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Switch-off delay

Navigation	 Expert → Output → PFS output 1 to n → Switch-off delay (0465-1 to n)
Prerequisite	<ul style="list-style-type: none">▪ The Switch option is selected in the Operating mode parameter (→ 123).▪ The Limit option is selected in the Switch out funct parameter (→ 135).

Description	Use this function to enter a delay time for switching off the switch output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode

Navigation	Expert → Output → PFS output 1 to n → Failure mode (0486–1 to n)
Description	Use this function to select a failsafe mode for the switch output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Actual status ■ Open ■ Closed
Factory setting	Open
Additional information	<p><i>Options</i></p> <ul style="list-style-type: none"> ■ Actual status In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the switch output. The Actual status option behaves in the same way as the current input value. ■ Open In the event of a device alarm, the switch output's transistor is set to non-conductive. ■ Closed In the event of a device alarm, the switch output's transistor is set to conductive.

Switch status

Navigation	Expert → Output → PFS output 1 to n → Switch status 1 to n (0461–1 to n)
Prerequisite	The Switch option is selected in the Operating mode parameter (→ 123).
Description	Displays the current switch status of the status output.
User interface	<ul style="list-style-type: none"> ■ Open ■ Closed
Additional information	<p><i>User interface</i></p> <ul style="list-style-type: none"> ■ Open The switch output is not conductive. ■ Closed The switch output is conductive.

Invert outp.sig.**Navigation**

Expert → Output → PFS output 1 to n → Invert outp.sig. (0470–1 to n)

Description

Use this function to select whether to invert the output signal.

Selection

- No
- Yes


Factory setting

No


Additional information

Selection

No option (passive - negative)

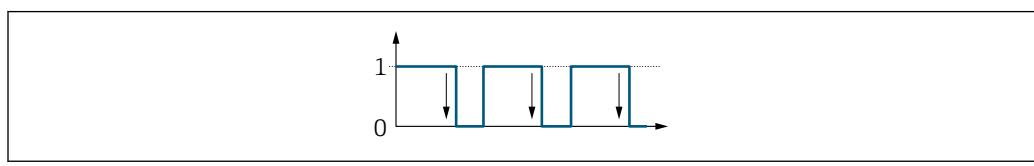

Yes option (passive - positive)

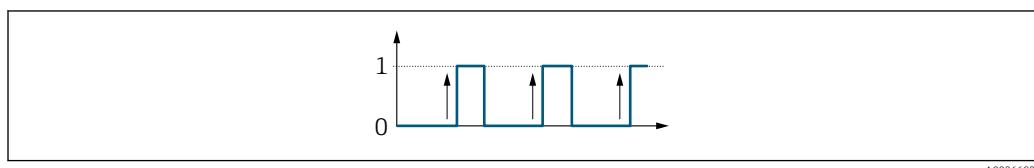

3.5.3 "Relay output 1 to n" submenu

Navigation

Expert → Output → Relay output 1 to n

► Relay output 1 to n	
Terminal no.	→ 143
Relay outp.func.	→ 143
Assign dir.check	→ 144
Assign limit	→ 144
Assign diag. beh	→ 145
Assign status	→ 145
Switch-off value	→ 146

Switch-off delay	→ 146
Switch-on value	→ 146
Switch-on delay	→ 147
Failure mode	→ 147
Switch status	→ 148
Powerless relay	→ 148

Terminal no.

Navigation	Expert → Output → Relay output 1 to n → Terminal no. (0812-1 to n)
Description	Displays the terminal numbers used by the relay output module.
User interface	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2)
Additional information	<p>"Not used" option</p> <p>The relay output module does not use any terminal numbers.</p>

Relay outp.func.

Navigation	Expert → Output → Relay output 1 to n → Relay outp.func. (0804-1 to n)
Description	Use this function to select an output function for the relay output.
Selection	<ul style="list-style-type: none"> ■ Closed ■ Open ■ Diag. behavior ■ Limit ■ Fl. direct.check ■ Digital Output
Factory setting	Closed
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Closed The relay output is permanently switched on (closed, conductive). ■ Open The relay output is permanently switched off (open, non-conductive). ■ Diag. behavior Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.

- Limit
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Fl. direct.check
Indicates the flow direction (forward or reverse flow).
- Digital Output
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign dir.check



Navigation Expert → Output → Relay output 1 to n → Assign dir.check (0808-1 to n)

Prerequisite In the **Relay outp.func.** parameter (→ 143), the **Fl. direct.check** option is selected.

Description Use this function to select a process variable for monitoring the flow direction.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

Factory setting

Mass flow

Assign limit



Navigation Expert → Output → Relay output 1 to n → Assign limit (0807-1 to n)

Prerequisite The **Limit** option is selected in the **Relay outp.func.** parameter (→ 143) parameter.

Description Use this function to select a process variable for the limit value function.

Selection

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *
- Density
- Ref.density
- Dynam. viscosity *
- Concentration *
- Kinematic visc. *
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Totalizer 1

* Visibility depends on order options or device settings

- Totalizer 2
- Totalizer 3
- Oscil. damping

Factory setting Mass flow

Assign diag. beh



Navigation Expert → Output → Relay output 1 to n → Assign diag. beh (0806–1 to n)

Prerequisite In the **Relay outp.func.** parameter (→ 143), the **Diag. behavior** option is selected.

Description Use this function to select the category of the diagnostic events that are displayed for the relay output.

- Selection**
- Alarm
 - Alarm or warning
 - Warning

Factory setting Alarm

Additional information *Description*

If no diagnostic event is pending, the relay output is closed and conductive.

Selection

- Alarm
The relay output signals only diagnostic events in the alarm category.
- Alarm or warning
The relay output signals diagnostic events in the alarm and warning category.
- Warning
The relay output signals only diagnostic events in the warning category.

Assign status



Navigation Expert → Output → Relay output 1 to n → Assign status (0805–1 to n)

Prerequisite In the **Relay outp.func.** parameter (→ 143), the **Digital Output** option is selected.

Description Use this function to select the device status for the relay output.

- Selection**
- Partial pipe det
 - Low flow cut off
 - Digital outp. 6

Factory setting Partial pipe det

Switch-off value



Navigation Expert → Output → Relay output 1 to n → Switch-off value (0809–1 to n)

Prerequisite In the **Relay outp.func.** parameter (→ 143), the **Limit** option is selected.

Description Use this function to enter the measured value for the switch-off point.

User entry Signed floating-point number

Factory setting Country-specific:

- 0 kg/h
- 0 lb/min

Additional information *Description*

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit is dependent on the process variable selected in the **Assign limit** parameter (→ 144).

Switch-off delay



Navigation Expert → Output → Relay output 1 to n → Switch-off delay (0813–1 to n)

Prerequisite In the **Relay outp.func.** parameter (→ 143), the **Limit** option is selected.

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-on value



Navigation Expert → Output → Relay output 1 to n → Switch-on value (0810–1 to n)

Prerequisite In the **Relay outp.func.** parameter (→ 143), the **Limit** option is selected.

Description Use this function to enter the measured value for the switch-on point.

User entry Signed floating-point number

Factory setting	Country-specific: ■ 0 kg/h ■ 0 lb/min
Additional information	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).</p> <p> When using a hysteresis: Switch-on value > Switch-off value.</p> <p><i>Dependency</i></p> <p> The unit is dependent on the process variable selected in the Assign limit parameter (→ 144).</p>

Switch-on delay



Navigation	 Expert → Output → Relay output 1 to n → Switch-on delay (0814-1 to n)
Prerequisite	In the Relay outp.func. parameter (→ 143), the Limit option is selected.
Description	Use this function to enter a delay time for switching on the switch output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode



Navigation	 Expert → Output → Relay output 1 to n → Failure mode (0811-1 to n)
Description	Use this function to select the failure mode of the relay output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Actual status ■ Open ■ Closed
Factory setting	Open
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Actual status <p>In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the relay output. The Actual status option behaves in the same way as the current input value.</p> ■ Open <p>In the event of a device alarm, the relay output's transistor is set to non-conductive.</p> ■ Closed <p>In the event of a device alarm, the relay output's transistor is set to conductive.</p>

Switch status

Navigation	 Expert → Output → Relay output 1 to n → Switch status (0801–1 to n)
Description	Displays the current status of the relay output.
User interface	<ul style="list-style-type: none">▪ Open▪ Closed
Additional information	<i>User interface</i> <ul style="list-style-type: none">▪ Open The relay output is not conductive.▪ Closed The relay output is conductive.

Powerless relay



Navigation	 Expert → Output → Relay output 1 to n → Powerless relay (0816–1 to n)
Description	Use this function to select the quiescent state for the relay output.
Selection	<ul style="list-style-type: none">▪ Open▪ Closed
Factory setting	Open
Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ Open The relay output is not conductive.▪ Closed The relay output is conductive.

3.6 "Communication" submenu

Navigation  Expert → Communication

 Communication	
Device address (11061)	→  149
 Resource block	→  149
 WLAN settings	→  170
 Web server	→  176

Device address

Navigation  Expert → Communication → Device address (11061)

Description Displays the device address.

User interface 1 to 255

3.6.1 "Resource block" submenu

Navigation

  Expert → Communication → Resource block

 Resource block	
Block tag (10702)	→  149
Target mode (10728)	→  151
Actual mode (10725)	→  152
Manufacturer Id (10721)	→  155
Device type (10711)	→  155
Device revision (10710)	→  156
DD Revision (10709)	→  156
Restart (10800)	→  157
Write Lock (10747)	→  164
ITK Version (10794)	→  170

Block tag

Navigation   Expert → Communication → Resource block → Block tag (10702)

Description Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.

User entry Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static Revision

Navigation  Expert → Communication → Resource block → Static Revision (10735)

Description Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).

User interface 0 to FFFF

Additional information *Description*

 Static parameters are parameters that are not changed by the process.

Tag Description

Navigation  Expert → Communication → Resource block → Tag Description (10736)

Description Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.

User entry Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Strategy

Navigation  Expert → Communication → Resource block → Strategy (10734)

Description Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.

User entry 0 to FFFF

Factory setting 0

Alert Key

Navigation  Expert → Communication → Resource block → Alert Key (10696)

Description Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.

User entry 0 to 0xFF

Factory setting 1

Target mode**Navigation**
 Expert → Communication → Resource block → Target mode (10728)
Description

Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Factory setting

OOS

Additional information*Options*

- ROut

In the **ROut** operating mode, the set point (SP) for the function block is controlled by the field bus host system, which runs over an interface, via the RIn parameter. The set point (SP) is used as an output signal after internal calculations. The output value and the status of the function block is communicated to the field bus host system as feedback via the ROut parameter. The set point can be initiated or retained for the value of the process variables.

- RCas

In the **RCas** operating mode (external cascade mode), the set point (SP) for the function block is controlled by the field bus host system, which runs over an interface, via the RCas-In parameter. The set point (SP) is used as an output signal after internal calculations. The output value and status of the function block is communicated to the field bus host system as feedback via the RCas-Out parameter.

- Cas

In the **Cas** (cascade mode) operating mode, the function block receives a discrete signal via the function block input, which is provided by the Cas-In parameter of an upstream function block. This signal controls the set point (SP) of the function block and is used as an output signal after internal calculations. The output is used to communicate the output value and status to the upstream function block.

- Auto

The **Auto** operating mode is the normal operating mode of the function block. The set point (SP) is specified locally in the function block and is used as an output signal after internal calculations. This set point can be specified by the user via an interface.

- Man

In the **Man** operating mode, the output value can be specified directly in the function block. This is specified by the user via an interface. There is no internal calculation. The algorithm is initiated in such a way that there is no interruption when the operating mode is changed. The set point can be retained or initiated for the value of the process variables or for the set point of the previous operating mode if the system is switched back to it.

- LO

The **LO** operating mode is used in control and output blocks that support a track input parameter. The manufacturer can also provide a local lock switch on the device to enable the **LO** operating mode. Tracking must be supported in the group of control parameters and is initiated by a discrete track-in parameter.

In local bridge mode, the output value of the function block is set in order to track the value of the track-input parameter. The algorithm is initiated in such a way that there is no interruption when the operating mode switches from **LO** back to the previous operating mode. The set point can be initiated or retained for the value of the process variables.

- IMan

In the **IMan** operating mode, the output value of the function block is performed as a reaction to the status of the back-calculation-input parameter. When this status indicates that there is no signal for the final output element, the control blocks ensure that there is a smooth transition. The back-calculation-input parameter is supported by all control and output blocks. The set point can be initiated or retained for the value of the process variables.

- OOS

In the **OOS** operating mode, implementation of the function block is blocked. Either the last valid value or, in the case of an output block, the last valid set point is retained as the output value. This operating mode is used during configuration of the device.

Actual mode

Navigation

  Expert → Communication → Resource block → Actual mode (10725)

Description

Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode that the function block is currently operating in. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→  151).

User interface

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Additional information

User interface

 Detailed description of the options displayed: **Target mode** parameter (→  151)

Permitted mode

Navigation

 Expert → Communication → Resource block → Permitted mode (10727)

Description

Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→  151) for the function block. The operating modes that are supported vary depending on the type and function of the block.

Selection	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man■ LO■ IMan■ OOS
Factory setting	<ul style="list-style-type: none">■ Auto■ OOS
Additional information	<i>Options</i>  Detailed description of the options available for selection: Target mode parameter (→ 151)

Normal mode

Navigation	 Expert → Communication → Resource block → Normal mode (10726)
Description	Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.
Selection	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man■ LO■ IMan■ OOS
Additional information	<i>Options</i>  Detailed description of the options available for selection: Target mode parameter (→ 151)

Block Error

Navigation	 Expert → Communication → Resource block → Block Error (10703)
Description	Displays the short text for the Block Error that has occurred in the function block.
User interface	<ul style="list-style-type: none">■ Other■ BlockConfigurat■ LinkConfigurat■ SimulationActive■ LocalOverride■ DeviceFaultState■ DeviceMainten

- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Resource State

Navigation	 Expert → Communication → Resource block → Resource State (10730)
Description	Displays the Resource State: Displays the current operating mode of the resource block.
User interface	<ul style="list-style-type: none">■ Uninitialized■ StartRestart■ Initialization■ Online Linking■ Online■ Standby■ Failure
Additional information	<p><i>User interface</i></p> <ul style="list-style-type: none">■ Uninitialized The resource block is in an invalid operating mode.■ StartRestart The resource block is in the start-up or restore phase. The necessary memory and hardware tests are carried out for the current operation. If these tests are successful, the resource block switches to the Initialization operating mode. If these tests are not successful, the resource block switches to the Failure operating mode.■ Initialization The resource block is in this operating mode if the block successfully passes the hardware tests from the StartRestart or Failure status. In this operating mode, all alarms of the function block that are not displayed are automatically confirmed and acknowledged. When system management is operational, the implementation of the block can be planned and the resource block switches to the Online Linking operating mode.■ Online Linking The resource block is in this operating mode when the block switches from the Initialization or Online operating mode. The configured connections between the function blocks are not yet established. When all configured connections have been established, the resource block switches to the Online operating mode.

■ Online

Normal operating mode, the resource block is in the Auto operating mode. The configured connections between the function blocks have been established. If one of the connections could not be established, the resource block switches back to the Online Linking operating mode.

■ Standby

The Resource Block is in the **OOS** option operating mode. It is not possible to implement the remaining blocks. The operating mode of the transducer block is not necessarily affected by this. Switching the resource block to the Auto mode causes the resource block to switch back to the StartRestart operating mode.

■ Failure

The resource block is in the fault state. It switches to this operating mode if a memory or hardware fault that would hinder current operation has been detected in the block. The fault can affect the block or the entire device. When this operating mode is active, blocks with an output function are also in the fault state. The hardware test is carried out again. If the error does not reoccur, the resource block switches back to the Initialization operating mode.

DD Resource

Navigation   Expert → Communication → Resource block → DD Resource (10708)

Description Displays the DD Resource: Indicates the reference source for the device description (DD).

User interface Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Additional information *User interface*

 Zero: No device description is stored on the device.

Manufacturer Id

Navigation   Expert → Communication → Resource block → Manufacturer Id (10721)

Description Manufacturer Id display: is used by the interface to assign the right DD file for the resource.

User interface Endress+Hauser

Device type

Navigation   Expert → Communication → Resource block → Device type (10711)

Description Displays the device type with which the measuring device is registered with Fieldbus Foundation.

User interface Promass 300/500

Device revision

Navigation  Expert → Communication → Resource block → Device revision (10710)

Description Use this function to view the device revision with which the measuring device is registered with Fieldbus Foundation.

User interface 1

DD Revision

Navigation  Expert → Communication → Resource block → DD Revision (10709)

Description Displays the revision number of the device description (DD).

User interface 1

Additional information *Description*

 This display can be used to ensure that the right system files (DD = device description) are used for integration into the host system. The system files can be downloaded free of charge online at: www.endress.com.

Grant

Navigation  Expert → Communication → Resource block → Grant (10718)

Description Option for releasing certain access authorizations of the field bus host system on the device.

Selection

- Program
- Tune
- Alarm
- Local
- Operate
- Service
- Diagnostic

Deny

Navigation  Expert → Communication → Resource block → Deny (10717)

Description Option for restricting certain access authorizations of the field bus host system on the device.

Selection	<ul style="list-style-type: none">■ Program Denied■ Tune Denied■ Alarm Denied■ Local■ Operate Denied
------------------	--

Hard Types

Navigation	  Expert → Communication → Resource block → Hard Types (10719)
Description	Displays the input signal type for the Analog input block.
User interface	<ul style="list-style-type: none">■ Scalar Input■ Scalar Output■ Discrete Input■ Discrete Output

Restart

Navigation	  Expert → Communication → Resource block → Restart (10800)
Description	Use this function to select a manual restart or a manual device reset.
Selection	<ul style="list-style-type: none">■ Uninitialized■ Run■ Resource■ Defaults■ Processor■ To delivery set.
Factory setting	Uninitialized

Service reset

Navigation	  Expert → Communication → Resource block → Service reset (10749)
Description	Extended selection for a manual restart or a manual device reset.
Selection	<ul style="list-style-type: none">■ Uninitialized■ DeliverySett+MIB■ ENP restart
Factory setting	Uninitialized

Additional information*Selection*

- Uninitialized
Factory setting
- DeliverySett+MIB
Reset the device to the as-delivered state. Important communication settings are reset to the factory default settings here.
- ENP restart
Reset the parameters for the electronic name plate (ENP).

Features

Navigation Expert → Communication → Resource block → Features (10713)**Description**

Displays the additional options that are supported by the measuring device.

User interface

- Reports
- Faultstate
- Soft W Lock
- Hard W Lock
- Chng Bypass Auto
- MVCReporDistrsup
- Multibit AlmSupp
- InterParamWrChk

Feature Select

Navigation Expert → Communication → Resource block → Feature Select (10714)**Description**

Use this function to select additional options that are supported by the measuring device.

Selection

- Reports
- Faultstate
- Soft W Lock
- Hard W Lock
- Chng Bypass Auto
- MVCReporDistrsup
- Multibit AlmSupp
- InterParamWrChk

Cycle Type

Navigation Expert → Communication → Resource block → Cycle Type (10707)**Description**

Displays the implementation methods for the block that are supported by the measuring device.

User interface	<ul style="list-style-type: none">■ Scheduled■ Block Execution
-----------------------	---

Cycle Selection

Navigation	 Expert → Communication → Resource block → Cycle Selection (10706)
-------------------	---

Description	Use this function to select the implementation method for the block that is used by the field bus host system. This implementation method is selected by the field bus host system.
--------------------	---

Selection	<ul style="list-style-type: none">■ Scheduled■ Block Execution
------------------	---

Mimumum Cyc.Time

Navigation	 Expert → Communication → Resource block → Mimumum Cyc.Time (10724)
-------------------	--

Description	Displays the implementation time of all function blocks that are available in the measuring device.
--------------------	---

User interface	Positive integer
-----------------------	------------------

Memory Size

Navigation	 Expert → Communication → Resource block → Memory Size (10723)
-------------------	---

Description	Displays the available configuration memory in kilobytes.
--------------------	---

User interface	0 to 65 535 Kbytes
-----------------------	--------------------

Nonvolat CycTime

Navigation	 Expert → Communication → Resource block → Nonvolat CycTime (10729)
-------------------	--

Description	Displays the time interval during which the dynamic device parameters are stored in the non-volatile memory.
--------------------	--

User interface	Positive integer
-----------------------	------------------

Free Space

Navigation  Expert → Communication → Resource block → Free Space (10715)

Description Displays the free system memory volume available for implementing further function blocks as a percentage.

User interface 0.000000 to 100.000 %

Free Time

Navigation  Expert → Communication → Resource block → Free Time (10716)

Description Displays the free system time available for implementing further function blocks as a percentage.

User interface 0.000000 to 100.000 %

Clear Fault Stat

Navigation  Expert → Communication → Resource block → Clear Fault Stat (10704)

Description Use this function to select the fault state for the Discrete outputs (→  266) block.

Selection

- Uninitialized
- Off
- Clear

Factory setting Uninitialized

Additional information *Options*

 The fault state can be disabled with **Clear** option.

Confirm Time

Navigation  Expert → Communication → Resource block → Confirm Time (10705)

Description Use this function to enter a time interval for confirming the event report. If the measuring device does not receive a confirmation within this interval, the event report is sent to the field bus host system again.

User entry Positive integer

Factory setting 0 1/32 ms

Fault State

Navigation	 Expert → Communication → Resource block → Fault State (10712)
Description	Displays the current status of the fault state for the Discrete outputs (→  266) block.
User interface	<ul style="list-style-type: none">■ Uninitialized■ Clear■ Active
Additional information	<p><i>User interface</i></p> <ul style="list-style-type: none">■ Uninitialized The fault state is disabled.■ Active The fault state is enabled.

Limit Notify

Navigation	 Expert → Communication → Resource block → Limit Notify (10720)
Description	Use this function to enter the maximum number of event reports that may be pending at the same time without confirmation.
User entry	0 to 255
Factory setting	0

Max Notify

Navigation	 Expert → Communication → Resource block → Max Notify (10722)
Description	Displays the maximum number of event reports that are supported by the measuring device and may be pending at the same time without confirmation.
User interface	0 to 255

Set Fault State

Navigation	 Expert → Communication → Resource block → Set Fault State (10731)
Description	Option for manually enabling or disabling the fault state for the Discrete outputs (→  266) function block.

Selection	<ul style="list-style-type: none">■ OFF■ SET
Factory setting	OFF
Additional information	<i>Options</i> <ul style="list-style-type: none">■ OFF The fault state is disabled.■ SET The fault state is enabled.

Shed Remote Casc

Navigation	 Expert → Communication → Resource block → Shed Remote Casc (10732)
Description	Use this function to enter the time interval after which the computer stops writing to function blocks with RCas points.
User entry	Positive integer
Factory setting	0 1/32 ms

Shed Remote Out

Navigation	 Expert → Communication → Resource block → Shed Remote Out (10733)
Description	Use this function to enter the time interval after which the computer stops writing to function blocks with ROut points.
User entry	Positive integer
Factory setting	0 1/32 ms

Unacknowledged

Navigation	 Expert → Communication → Resource block → Unacknowledged (10740)
Description	Option for manually acknowledging an update of the static block parameter.
Selection	<ul style="list-style-type: none">■ Uninitialized■ Acknowledged■ Unacknowledged
Factory setting	Uninitialized

Additional information*Description*

- If a new diagnostic event occurs, the measuring device sets **Unacknowledged** option.
- If the diagnostic event has been acknowledged, the user can set **Acknowledged** option.

Update State

Navigation

□ Expert → Communication → Resource block → Update State (10741)

Description

Displays the status of an update of the static block parameter. The status indicates whether the update was communicated or not.

User interface

- Uninitialized
- Reported
- Not Reported

Time Stamp

Navigation

□ Expert → Communication → Resource block → Time Stamp (10739)

Description

Displays the time stamp indicating when the analysis of the block was started and when a status change of an update to the static block parameter that has not yet been communicated was identified. The time stamp is retained until the update confirmation is received.

User interface

Days (d), hours (h), minutes (m), seconds (s)

Static revision

Navigation

□ Expert → Communication → Resource block → Static revision (10738)

Description

Displays the Static revision: Each instance of a static block parameter being accessed with write and report access due to an update is counted (event counter).

User interface

0 to 65 535

Relative Index

Navigation

□ Expert → Communication → Resource block → Relative Index (10737)

Description

Displays the relative index of the static block parameter that triggered the alarm (OD index minus field bus start index).

User interface	0 to 65 535
----------------	-------------

Write Lock

Navigation	 Expert → Communication → Resource block → Write Lock (10747)
Description	Option for enabling and disabling the hardware write protection.
Selection	<ul style="list-style-type: none">▪ Not Locked▪ Locked
Factory setting	Not Locked
Additional information	<p><i>Description</i></p> <p>Option for enabling and disabling write access to the measuring device via the FOUNDATION Fieldbus (acyclic data transmission, e.g. via the "FieldCare" operating program).</p> <p> For detailed information on hardware write protection, see the "Write protection via write protection switch" section of the Operating Instructions.</p> <p><i>Options</i></p> <ul style="list-style-type: none">▪ Not Locked Device data can be changed via the FOUNDATION Fieldbus interface.▪ Locked Device data cannot be changed via the FOUNDATION Fieldbus interface.

Unacknowledged

Navigation	 Expert → Communication → Resource block → Unacknowledged (10700)
Description	Option for manually acknowledging a block alarm.
Selection	<ul style="list-style-type: none">▪ Uninitialized▪ Acknowledged▪ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p> ▪ If a new alarm occurs, the measuring device sets Unacknowledged option. ▪ If the alarm has been acknowledged, the user can set Acknowledged option.</p>

Alarm State

Navigation  Expert → Communication → Resource block → Alarm State (10697)**Description** Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.**User interface**

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

Time Stamp

Navigation  Expert → Communication → Resource block → Time Stamp (10699)**Description** Displays the time stamp indicating when the analysis of the block was started and when a status change of the block alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.**User interface** Days (d), hours (h), minutes (m), seconds (s)

Subcode

Navigation  Expert → Communication → Resource block → Subcode (10698)**Description** Displays the specific cause of the block alarm.**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Value

Navigation	 Expert → Communication → Resource block → Value (10701)
Description	Displays the value of the affected parameter at the time at which the block alarm was detected.
User interface	0 to 255

Current

Navigation	 Expert → Communication → Resource block → Current (10692)
Description	Use this function to view the current status of the process alarms.
User interface	<ul style="list-style-type: none">■ Discrete Alarm■ Block Alarm■ Fail Alarm■ Off Spec Alarm■ Maint. Alarm■ Check Alarm

Unacknowledged

Navigation	 Expert → Communication → Resource block → Unacknowledged (10694)
Description	Displays an unacknowledged process alarm.
User interface	<ul style="list-style-type: none">■ Disc Alm Unack■ Block Alm Unack■ Fail Alm Unack■ Off SpecAlmUnack■ Maint Alm Unack■ Check Alm Unack

Unreported

Navigation	 Expert → Communication → Resource block → Unreported (10695)
Description	Displays a process alarm that has not been communicated.
User interface	<ul style="list-style-type: none">■ Disc Alm Unrep■ Block Alm Unrep■ Fail Alm Unrep

- Off SpecAlmUnrep
- Maint Alm Unrep
- Check Alm Unrep

Disabled

Navigation  Expert → Communication → Resource block → Disabled (10693)

Description Option for disabling a process alarm category.

Selection

- Disc Alm Disabl
- Block Alm Disabl
- Fail Alm Disabl
- OffSpecAlmDisabl
- Maint Alm Disabl
- Check Alm Disab.

Ack. Option

Navigation  Expert → Communication → Resource block → Ack. Option (10691)

Description Option for automatic acknowledgment of process alarms in a specific category.

Selection

- Disc Alm Aut Ack
- Blk Alm Auto Ack
- Fail Alm Aut Ack
- OffSpecAlmAutAck
- Maint Alm AutAck
- Check Alm AutAck

Additional information *Description*

Use this function to determine whether an alarm must be acknowledged via the field bus host system.

 If the process alarm option has not been enabled in this parameter, this process alarm must only be acknowledged in **Unacknowledged** parameter (→  164).
Current parameter (→  166) indicates the current status of all process alarms.

Write Priority

Navigation  Expert → Communication → Resource block → Write Priority (10748)

Description Use this function to enter the priority for the write protection alarm.

User entry 0 to 15

Factory setting 0

Additional information*Description*

If write protection is disabled on the FOUNDATION Fieldbus I/O board, the alarm priority entered here is checked before the status change is transferred to the field bus host system. The alarm priority determines the behavior in the event of an active write protection alarm.



The alarm is triggered when the write protection is disabled.

Unacknowledged

Navigation

Expert → Communication → Resource block → Unacknowledged (10745)

Description

Option for manually acknowledging a write protection alarm.

Selection

- Uninitialized
- Acknowledged
- Unacknowledged

Factory setting

Uninitialized

Additional information*Description*

- If a new alarm occurs, the measuring device sets **Unacknowledged** option.
- If the alarm has been acknowledged, the user can set **Acknowledged** option.

Alarm State

Navigation

Expert → Communication → Resource block → Alarm State (10742)

Description

Displays the status of the write protection alarm. The status indicates whether the write protection alarm is active and whether it has already been communicated to the field bus host system.

User interface

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

Time Stamp

Navigation

Expert → Communication → Resource block → Time Stamp (10744)

Description

Displays the time stamp indicating when the analysis of the block was started and when the status change of a write protection alarm that has not yet been communicated was identified. The time stamp is retained until the alarm confirmation is received.

User interface	Days (d), hours (h), minutes (m), seconds (s)
----------------	---

Subcode

Navigation	 Expert → Communication → Resource block → Subcode (10743)
------------	---

Description	Displays the specific cause of the write protection alarm, which is to be communicated to the field bus host system.
-------------	--

User interface	<ul style="list-style-type: none">■ Other■ BlockConfigurat■ LinkConfigurat■ SimulationActive■ LocalOverride■ DeviceFaultState■ DeviceMainten■ SensorFailure■ OutputFailure■ MemoryFailure■ LostStaticData■ LostNVData■ ReadbackCheck■ MaintenanceNeed■ PowerUp■ OutOfService
----------------	---

Discrete Value

Navigation	 Expert → Communication → Resource block → Discrete Value (10746)
------------	--

Description	Displays the discrete value of the affected parameter at the time at which the write protection alarm was detected.
-------------	---

User interface	<ul style="list-style-type: none">■ State 0■ State 1■ State 2■ State 3■ State 4■ State 5■ State 6■ State 7■ State 8■ State 9■ State 10■ State 11■ State 12■ State 13■ State 14■ State 15■ State 16
----------------	--

ITK Version**Navigation**  Expert → Communication → Resource block → ITK Version (10794)**Description**

Displays the revision status of the Interoperability Test Kits (ITK).

User interface

6

3.6.2 "WLAN settings" submenu*Navigation*  Expert → Communication → WLAN settings

 WLAN settings	
WLAN (2702)	→  171
WLAN mode (2717)	→  171
SSID name (2714)	→  171
Network security (2705)	→  172
Sec. identific. (2718)	→  172
User name (2715)	→  172
WLAN password (2716)	→  172
WLAN IP address (2711)	→  173
WLAN MAC address (2703)	→  173
WLAN subnet mask (2709)	→  173
WLAN MAC address (2703)	→  173
WLAN passphrase (2706)	→  174
Assign SSID name (2708)	→  174
SSID name (2707)	→  174
WLAN channel (2704)	→  175
Select antenna (2713)	→  175

Connection state (2722)	→ 175
Rec.sig.strength (2721)	→ 175
WLAN IP address (2711)	→ 173
Gateway IP addr. (2719)	→ 176
IP address DNS (2720)	→ 176

WLAN

Navigation Expert → Communication → WLAN settings → WLAN (2702)

Description Use this function to enable and disable the WLAN connection.

Selection

- Disable
- Enable

Factory setting Enable

WLAN mode

Navigation Expert → Communication → WLAN settings → WLAN mode (2717)

Description Use this function to select the WLAN mode.

Selection

- Access point
- WLAN Client

Factory setting Access point

SSID name

Navigation Expert → Communication → WLAN settings → SSID name (2714)

Prerequisite The client is activated.

Description Use this function to enter the user-defined SSID name (max. 32 characters).

User entry –

Factory setting –

Security type**Navigation**

- Expert → Communication → WLAN settings → Security type (2705)
Expert → Communication → WLAN settings → Network security (2705)

Description

Use this function to select the type of security for the WLAN interface.

Selection

- Unsecured
- WPA2-PSK

Factory setting

WPA2-PSK

Additional information*Selection*

- Unsecured
Access the WLAN connection without identification.
- WPA2-PSK
Access the WLAN connection with a network key.

Sec. identific.**Navigation**

- Expert → Communication → WLAN settings → Sec. identific. (2718)

Description

Use this function to select the security settings (download via the menu: Data Management > Security > Download WLAN).

User interface

- Root certificate
- Device certific.
- Dev. private key

User name**Navigation**

- Expert → Communication → WLAN settings → User name (2715)

Description

Use this function to enter the user name.

User entry

–

Factory setting

–

WLAN password**Navigation**

- Expert → Communication → WLAN settings → WLAN password (2716)

Description

Use this function to enter the WLAN password.

User entry –**Factory setting** –**WLAN IP address****Navigation** Expert → Communication → WLAN settings → WLAN IP address (2711)**Description** Use this function to enter the IP address of the measuring device's WLAN connection.**User entry** 4 octet: 0 to 255 (in the particular octet)**Factory setting** 192.168.1.212**WLAN MAC address****Navigation** Expert → Communication → WLAN settings → WLAN MAC address (2703)**Description** Displays the MAC⁸⁾ address of the measuring device.**User interface** Unique 12-digit character string comprising letters and numbers**Factory setting** Each measuring device is given an individual address.**Additional information** *Example*

For the display format

00:07:05:10:01:5F

WLAN subnet mask**Navigation** Expert → Communication → WLAN settings → WLAN subnet mask (2709)**Description** Use this function to enter the subnet mask.**User entry** 4 octet: 0 to 255 (in the particular octet)**Factory setting** 255.255.255.0

8) Media Access Control

WLAN passphrase

Navigation	Expert → Communication → WLAN settings → WLAN passphrase (2706)
Prerequisite	The WPA2-PSK option is selected in the Security type parameter (→ 172).
Description	Use this function to enter the network key.
User entry	8 to 32-digit character string comprising numbers, letters and special characters
Factory setting	Serial number of the measuring device (e.g. L100A802000)

Assign SSID name

Navigation	Expert → Communication → WLAN settings → Assign SSID name (2708)
Description	Use this function to select which name is used for the SSID ⁹⁾ .
Selection	<ul style="list-style-type: none">■ Device tag■ User-defined
Factory setting	User-defined
Additional information	<i>Selection</i> <ul style="list-style-type: none">■ Device tag The device tag name is used as the SSID.■ User-defined A user-defined name is used as the SSID.

SSID name

Navigation	Expert → Communication → WLAN settings → SSID name (2707)
Prerequisite	<ul style="list-style-type: none">■ The User-defined option is selected in the Assign SSID name parameter (→ 174).■ The Access point option is selected in the WLAN mode parameter (→ 171).
Description	Use this function to enter a user-defined SSID name.
User entry	Max. 32-digit character string comprising numbers, letters and special characters
Factory setting	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_300_A802000)

9) Service Set Identifier

WLAN channel

Navigation Expert → Communication → WLAN settings → WLAN channel (2704)

Description Use this function to enter the WLAN channel.

User entry 1 to 11

Factory setting 6

Additional information *Description*



- It is only necessary to enter a WLAN channel if multiple WLAN devices are in use.
- If just one measuring device is in use, it is recommended to keep the factory setting.

Select antenna

Navigation Expert → Communication → WLAN settings → Select antenna (2713)

Description Use this function to select whether the external or internal antenna is used for reception.

Selection

- External antenna
- Internal antenna

Factory setting Internal antenna

Connection state

Navigation Expert → Communication → WLAN settings → Connection state (2722)

Description The connection status is displayed.

User interface

- Connected
- Not connected

Factory setting Not connected

Rec.sig.strength

Navigation Expert → Communication → WLAN settings → Rec.sig.strength (2721)

Description Displays the signal strength received.

User interface

- Low
- Medium
- High

Factory setting High

Gateway IP addr.

Navigation Expert → Communication → WLAN settings → Gateway IP addr. (2719)

Description Use this function to enter the IP address of the gateway.

Factory setting 192.168.1.212

IP address DNS

Navigation Expert → Communication → WLAN settings → IP address DNS (2720)


Expert → Communication → WLAN settings → IP address DNS (2720)

Description Use this function to enter the IP address of the domain name server.

Factory setting 192.168.1.212

3.6.3 "Web server" submenu

Navigation Expert → Communication → Web server

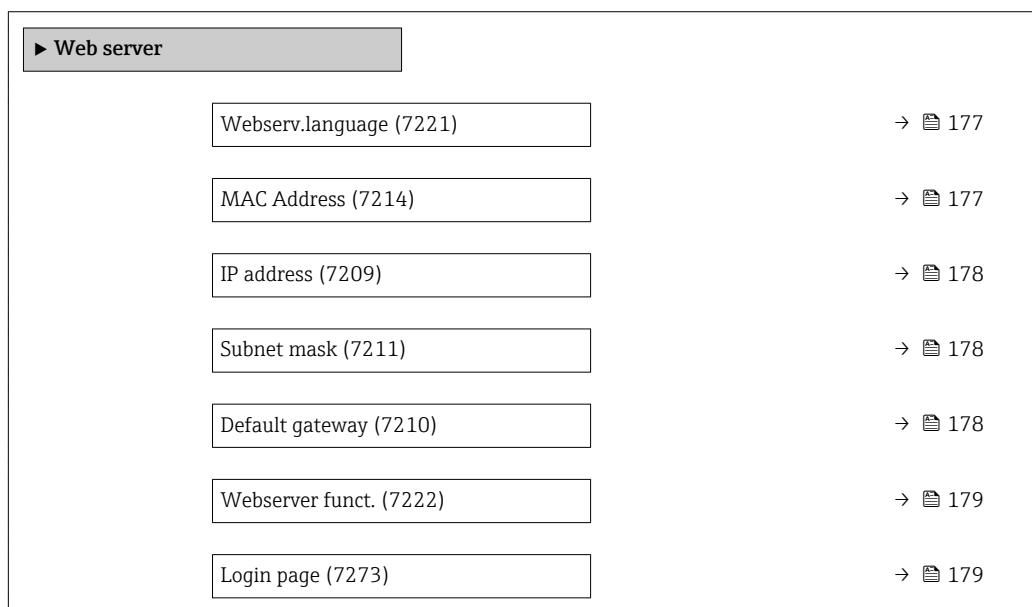

Webserv.language

Navigation	 Expert → Communication → Web server → Webserv.language (7221)
Description	Use this function to select the Web server language setting.
Selection	<ul style="list-style-type: none"> ■ English * ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык(Ru) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ Bahasa Indonesia * ■ tiếng Việt (Viet) * ■ čeština (Czech) *
Factory setting	English

MAC Address

Navigation	 Expert → Communication → Web server → MAC Address (7214)
Description	Displays the MAC ¹⁰⁾ address of the measuring device.
User interface	Unique 12-digit character string comprising letters and numbers
Factory setting	Each measuring device is given an individual address.
Additional information	<p><i>Example</i></p> <p>For the display format 00:07:05:10:01:5F</p>

* Visibility depends on order options or device settings

10) Media Access Control

DHCP client**Navigation**

Expert → Communication → Configuration → DHCP client (7212)

Setup → Communication → DHCP client (7212)

Description

Use this function to activate and deactivate the DHCP client functionality.

Selection

- Off
- On

Factory setting

Off

Additional information**Result**

If the DHCP client functionality of the Web server is activated, the IP address (→ 178), Subnet mask (→ 178) and Default gateway (→ 178) are set automatically.

Identification is via the MAC address of the measuring device.

IP address**Navigation**

Expert → Communication → Web server → IP address (7209)

Description

Displays the IP address of the Web server of the measuring device.

User interface

4 octet: 0 to 255 (in the particular octet)

Factory setting

192.168.1.212

Subnet mask**Navigation**

Expert → Communication → Web server → Subnet mask (7211)

Description

Displays the subnet mask.

User interface

4 octet: 0 to 255 (in the particular octet)

Factory setting

255.255.255.0

Default gateway**Navigation**

Expert → Communication → Web server → Default gateway (7210)

Description

Displays the default gateway.

User interface 4 octet: 0 to 255 (in the particular octet)

Factory setting 0.0.0.0

Webserver funct.



Navigation Expert → Communication → Web server → Webserver funct. (7222)

Description Use this function to switch the Web server on and off.

Selection

- Off
- HTML Off
- On

Factory setting On

Additional information *Description*



Once disabled, the Webserver funct. can only be re-enabled via or the operating tool FieldCare.

Options

Option	Description
Off	<ul style="list-style-type: none"> ▪ The web server is completely disabled. ▪ Port 80 is locked.
On	<ul style="list-style-type: none"> ▪ The complete functionality of the web server is available. ▪ JavaScript is used. ▪ The password is transferred in an encrypted state. ▪ Any change to the password is also transferred in an encrypted state.

Login page



Navigation Expert → Communication → Web server → Login page (7273)

Description Use this function to select the format of the login page.

Selection



- Without header
- With header

Factory setting With header

3.7 "Analog inputs" submenu

In the analog input function block (AI function block), the process variables from the transducer block are prepared in terms of control for the subsequent automation functions

(e.g. scaling, limit value processing). The automation function is defined by interconnecting the outputs.

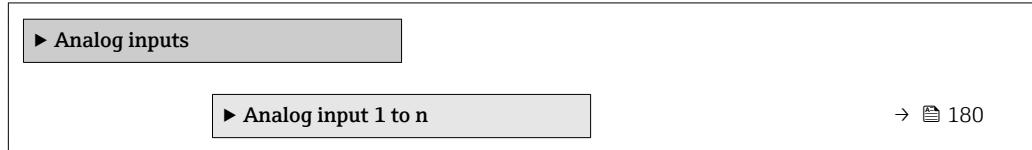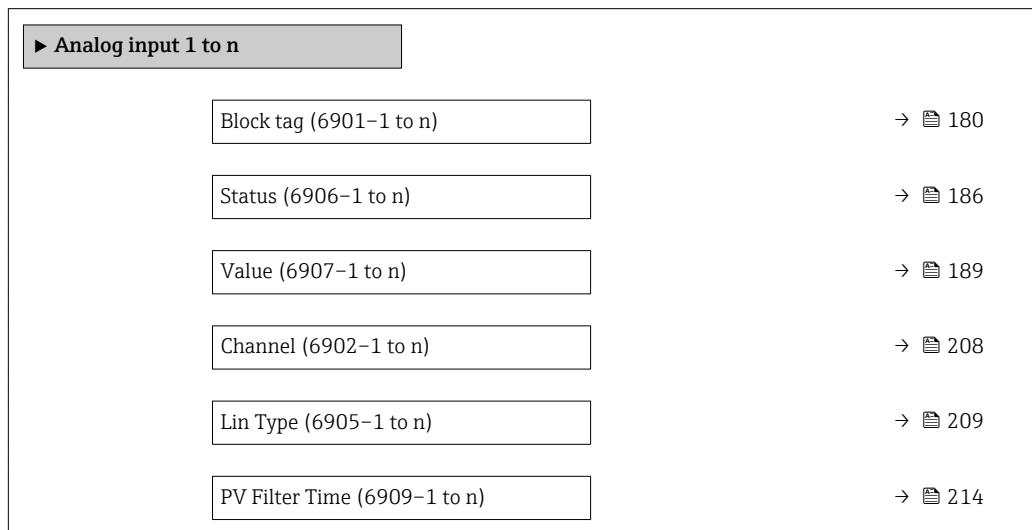Navigation
  Expert → Analog inputs
**3.7.1 "Analog input 1 to n" submenu****Navigation**
  Expert → Analog inputs → Analog input 1 to n


Block tag**Navigation**
  Expert → Analog inputs → Analog input 1 to n → Block tag (6901-1 to n)
Description

Use this function to enter the Block tag: specify a "label" for identifying the function block.

User entry

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static Revision**Navigation**
  Expert → Analog inputs → Analog input 1 to n → Static Revision (6973-1 to n)
Description

Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).

User interface

0 to FFFF

Additional information*Description*

Static parameters are parameters that are not changed by the process.

Tag Description

Navigation	Expert → Analog inputs → Analog input 1 to n → Tag Description (6974–1 to n)
Description	Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.
User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Strategy

Navigation	Expert → Analog inputs → Analog input 1 to n → Strategy (6972–1 to n)
Description	Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.
User entry	0 to FFFF
Factory setting	0

Alert Key

Navigation	Expert → Analog inputs → Analog input 1 to n → Alert Key (6916–1 to n)
Description	Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.
User entry	0 to 0xFF
Factory setting	1

Target mode

Navigation	Expert → Analog inputs → Analog input 1 to n → Target mode (6960–1 to n)
Description	Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.

Selection	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man■ LO■ IMan■ OOS
Factory setting	OOS
Additional information	<i>Options</i>  Detailed description of the options available for selection: Target mode parameter (→  151)

Actual mode

Navigation	 Expert → Analog inputs → Analog input 1 to n → Actual mode (6957–1 to n)
Description	Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode in which the function block is currently operating. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→  181).
User interface	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man■ LO■ IMan■ OOS
Additional information	<i>User interface</i>  Detailed description of the options displayed: Target mode parameter (→  151)

Permitted mode

Navigation	 Expert → Analog inputs → Analog input 1 to n → Permitted mode (6959–1 to n)
Description	Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→  181) for the function block. The operating modes that are supported vary depending on the type and function of the block.
Selection	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man

	<ul style="list-style-type: none"> ■ LO ■ IMan ■ OOS
Factory setting	<ul style="list-style-type: none"> ■ Auto ■ OOS
Additional information	<i>Options</i>  Detailed description of the options available for selection: Target mode parameter (→  151)

Normal mode

Navigation	 Expert → Analog inputs → Analog input 1 to n → Normal mode (6958–1 to n)
Description	Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.
Selection	<ul style="list-style-type: none"> ■ ROut ■ RCas ■ Cas ■ Auto ■ Man ■ LO ■ IMan ■ OOS
Factory setting	Auto
Additional information	<i>Options</i>  Detailed description of the options available for selection: Target mode parameter (→  151)

Block Error

Navigation	 Expert → Analog inputs → Analog input 1 to n → Block Error (6922–1 to n)
Description	Displays the short text for the Block Error that has occurred in the function block.
User interface	<ul style="list-style-type: none"> ■ Other ■ BlockConfigurat ■ LinkConfigurat ■ SimulationActive ■ LocalOverride ■ DeviceFaultState ■ DeviceMainten ■ SensorFailure ■ OutputFailure ■ MemoryFailure

- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Status

Navigation

 Expert → Analog inputs → Analog input 1 to n → Status (6964-1 to n)

Description

Displays the status of the input value (PV).

User interface

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)

- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)

- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Value (6965–1 to n)
Description	Displays the input value (PV).
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  198)

Status

Navigation	  Expert → Analog inputs → Analog input 1 to n → Status (6906–1 to n)
Description	Displays the status of the output value (OUT).
User interface	<ul style="list-style-type: none">■ Bad (0x00)■ Bad (0x01)■ Bad (0x02)■ Bad (0x03)■ Bad (0x04)■ Bad (0x05)■ Bad (0x06)■ Bad (0x07)■ Bad (0x08)

- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)

- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Value (6907–1 to n)
Description	Input for the output value (OUT).
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  198)

Simulate Status

Navigation	 Expert → Analog inputs → Analog input 1 to n → Simulate Status (6967–1 to n)
Description	Use this function to select the status that is used for the transducer block simulation.
Selection	<ul style="list-style-type: none">■ Bad (0x00)■ Bad (0x01)■ Bad (0x02)■ Bad (0x03)■ Bad (0x04)■ Bad (0x05)■ Bad (0x06)■ Bad (0x07)■ Bad (0x08)■ Bad (0x09)■ Bad (0x0A)■ Bad (0x0B)■ Bad (0x0C)■ Bad (0x0D)■ Bad (0x0E)■ Bad (0x0F)■ Bad (0x10)■ Bad (0x11)■ Bad (0x12)■ Bad (0x13)■ Bad (0x14)■ Bad (0x15)■ Bad (0x16)■ Bad (0x17)■ Bad (0x18)■ Bad (0x19)■ Bad (0x1A)■ Bad (0x1B)■ Bad (0x1C)■ Bad (0x1D)■ Bad (0x1E)■ Bad (0x1F)■ Uncertain (0x40)

- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)

- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0=DB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Factory setting Bad (0x00)

Simulate Value

Navigation	Diagram: Expert → Analog inputs → Analog input 1 to n → Simulate Value (6968–1 to n)
Description	Use this function to enter the value that is used for the transducer block simulation.
User entry	Signed floating-point number
Factory setting	0 %
Additional information	<p><i>Dependency</i></p>  The unit is taken from the: Units index parameter (→ 195)

Transducer Stat

Navigation	 Expert → Analog inputs → Analog input 1 to n → Transducer Stat (6969–1 to n)
Description	Displays the current status of the transducer block.
User interface	<ul style="list-style-type: none">■ Bad (0x00)■ Bad (0x01)■ Bad (0x02)■ Bad (0x03)■ Bad (0x04)■ Bad (0x05)■ Bad (0x06)■ Bad (0x07)■ Bad (0x08)■ Bad (0x09)■ Bad (0x0A)■ Bad (0x0B)■ Bad (0x0C)■ Bad (0x0D)■ Bad (0x0E)■ Bad (0x0F)■ Bad (0x10)■ Bad (0x11)■ Bad (0x12)■ Bad (0x13)■ Bad (0x14)■ Bad (0x15)■ Bad (0x16)■ Bad (0x17)■ Bad (0x18)■ Bad (0x19)■ Bad (0x1A)■ Bad (0x1B)■ Bad (0x1C)■ Bad (0x1D)■ Bad (0x1E)■ Bad (0x1F)■ Uncertain (0x40)■ Uncertain (0x41)■ Uncertain (0x42)■ Uncertain (0x43)■ Uncertain (0x44)■ Uncertain (0x45)■ Uncertain (0x46)■ Uncertain (0x47)■ Uncertain (0x48)■ Uncertain (0x49)■ Uncertain (0x4A)■ Uncertain (0x4B)■ Uncertain (0x4C)■ Uncertain (0x4D)■ Uncertain (0x4E)■ Uncertain (0x4F)■ Uncertain (0x50)■ Uncertain (0x51)■ Uncertain (0x52)■ Uncertain (0x53)

- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)

- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Transducer Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Transducer Value (6970-1 to n)
Description	Displays the current value of the transducer block.
User interface	Signed floating-point number
Factory setting	0 %
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  195)

Sim. En/Disable

Navigation	 Expert → Analog inputs → Analog input 1 to n → Sim. En/Disable (6966-1 to n)
Description	Use this function to enable or disable the function block simulation.
Selection	<ul style="list-style-type: none">■ Uninitialized■ Disabled■ Active
Factory setting	Uninitialized

EU at 100%

Navigation	 Expert → Analog inputs → Analog input 1 to n → EU at 100% (6982-1 to n)
Description	Use this function to enter the upper limit value of the output value measuring range.
User entry	Signed floating-point number

Factory setting 0 %

Additional information *Dependency*



The unit is taken from the: **Units index** parameter (→ 195)

EU at 0%

Navigation ☐ Expert → Analog inputs → Analog input 1 to n → EU at 0% (6981-1 to n)

Description Use this function to enter the lower limit value of the output value measuring range.

User entry Signed floating-point number

Factory setting 0 %

Additional information *Dependency*



The unit is taken from the: **Units index** parameter (→ 195)

Units index

Navigation ☐ Expert → Analog inputs → Analog input 1 to n → Units index (6983-1 to n)

Description Use this function to select the unit for the output value.

Selection

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ g/s	■ oz/s	■ gal/s (imp)
■ g/min	■ oz/min	■ gal/min (imp)
■ g/h	■ oz/h	■ gal/h (imp)
■ g/d	■ oz/d	■ gal/d (imp)
■ kg/s	■ lb/s	■ Mgal/s (imp)
■ kg/min	■ lb/min	■ Mgal/min (imp)
■ kg/h	■ lb/h	■ Mgal/h (imp)
■ kg/d	■ lb/d	■ Mgal/d (imp)
■ t/s	■ STon/s	■ bbl/s (imp;oil)
■ t/min	■ STon/min	■ bbl/min (imp;oil)
■ t/h	■ STon/h	■ bbl/h (imp;oil)
■ t/d	■ STon/d	■ bbl/d (imp;oil)
■ l/s	■ af/s	■ bbl/s (imp;beer)
■ l/min	■ af/min	■ bbl/min (imp;beer)
■ l/d	■ af/h	■ bbl/h (imp;beer)
■ l/h	■ af/d	■ bbl/d (imp;beer)
■ m ³ /s	■ ft ³ /s	■ Sgal/s (imp)
■ m ³ /min	■ ft ³ /min	■ Sgal/min (imp)
■ m ³ /h	■ ft ³ /h	■ Sgal/h (imp)
■ m ³ /d	■ ft ³ /d	■ Sgal/d (imp)
■ cm ³ /s	■ fl oz/s (us)	■ lb/gal (imp)
■ cm ³ /min	■ fl oz/min (us)	■ lb/bbl (imp;oil)
■ cm ³ /h	■ fl oz/h (us)	■ Mgal (imp)
■ cm ³ /d	■ fl oz/d (us)	■ bbl (imp;beer)
■ dm ³ /s	■ gal/s (us)	■ Sgal (imp)
■ dm ³ /min	■ gal/min (us)	■ bbl (imp;oil)
■ dm ³ /h	■ gal/h (us)	■ gal (imp)
■ dm ³ /d	■ gal/d (us)	
■ ml/s	■ Mgal/s (us)	
■ ml/min	■ Mgal/min (us)	
■ ml/h	■ Mgal/h (us)	
■ ml/d	■ Mgal/d (us)	
■ NI/s	■ bbl/s (us;oil)	
■ NI/d	■ bbl/min (us;oil)	
■ NI/h	■ bbl/h (us;oil)	
■ NI/min	■ bbl/d (us;oil)	
■ Nm ³ /s	■ bbl/s (us;liq.)	
■ Nm ³ /min	■ bbl/min (us;liq.)	
■ Nm ³ /h	■ bbl/h (us;liq.)	
■ Nm ³ /d	■ bbl/d (us;liq.)	
■ Sm ³ /s	■ bbl/s (us;beer)	
■ Sm ³ /min	■ bbl/min (us;beer)	
■ Sm ³ /h	■ bbl/h (us;beer)	
■ Sm ³ /d	■ bbl/d (us;beer)	
■ MSft ³ /d	■ bbl/s (us;tank)	
■ kg/l	■ bbl/min (us;tank)	
■ kg/m ³	■ bbl/h (us;tank)	
■ kg/dm ³	■ bbl/d (us;tank)	
■ g/cm ³	■ kgal/s (us)	
■ g/m ³	■ kgal/min (us)	
■ SD4°C	■ kgal/h (us)	
■ SD15°C	■ kgal/d (us)	
■ SD20°C	■ Sft ³ /s	
■ SG4°C	■ Sft ³ /min	
■ SG20°C	■ Sft ³ /h	
■ SG15°C	■ Sft ³ /d	
■ kg/Nl	■ Sgal/s (us)	
■ g/Scm ³	■ Sgal/min (us)	

- kg/Sm³
- kg/Nm³
- K
- °C
- %
- g
- Nl
- Nm³
- Sl
- Sm³
- ml
- kg
- l
- t
- m³
- dm³
- cm³
- mA
- Sgal/d (us)
- Sgal/h (us)
- Sbbl/s (us;liq.)
- Sbbl/min (us;liq.)
- Sbbl/h (us;liq.)
- Sbbl/d (us;liq.)
- MSft³/D
- lb/ft³
- lb/gal (us)
- lb/bbl (us;tank)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/Sft³
- °F
- °R
- oz
- af
- fl oz (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;tank)
- Sgal (us)
- Sbbl (us;liq.)
- Sft³
- kgal (us)
- lb
- ft³
- gal (us)
- bbl (us;beer)
- STon

Factory setting %

Additional information *Result*

The selected unit applies for:

- **Simulate Value** parameter (→ 191)
- **Transducer Value** parameter (→ 194)
- **EU at 0%** parameter (→ 195)
- **EU at 100%** parameter (→ 194)

Decimal

Navigation	█ Expert → Analog inputs → Analog input 1 to n → Decimal (6980–1 to n)
Description	Use this function to enter the number of decimal places for the output value.
User entry	-128 to 127
Factory setting	0

EU at 100%

Navigation  Expert → Analog inputs → Analog input 1 to n → EU at 100% (6963–1 to n)

Description Use this function to enter the upper limit value of the input value measuring range from the transducer block (input value).

User entry Signed floating-point number

Factory setting 0

Additional information *Dependency*

 The unit is taken from the: **Units index** parameter (→ [198](#))

EU at 0%

Navigation  Expert → Analog inputs → Analog input 1 to n → EU at 0% (6962–1 to n)

Description Function for entering the lower limit value of the input value measuring range from the transducer block (input value).

User entry Signed floating-point number

Factory setting 0

Additional information *Dependency*

 The unit is taken from the: **Units index** parameter (→ [198](#))

Units index

Navigation  Expert → Analog inputs → Analog input 1 to n → Units index (6908–1 to n)

Description Use this function to select the unit for the input value from the transducer block (input value).

Selection	SI units	US units	Imperial units
■ K	■ mils	■ lbf/in	
■ m	■ °F	■ gal (imp)	
■ m ³	■ °R	■ Btu	
■ Pa s	■ ft	■ LTon	
■ m ² /s	■ in	■ datherm	
■ P	■ bbl (us;liq.)	■ Btu/h	
■ cP	■ Sft ³	■ Btu/day	
■ St	■ in/min	■ Btu/min	
■ cSt	■ oz	■ Btu/s	
■ Wbm	■ STon	■ LTon/d	
■ Ns/m	■ lb/d	■ LTon/h	
■ 1/Jm ³	■ lb/h	■ LTon/min	
■ e/Vm ³	■ lb/min	■ LTon/s	
■ m ³ /C	■ lb/s	■ gal/d (imp)	
■ (1/32 millisecond)/min	■ STon/d	■ gal/h (imp)	
■ °C	■ STon/h	■ gal/min (imp)	
■ '	■ STon/min	■ gal/s (imp)	
■ "	■ STon/s	■ lb/gal (imp)	
■ rad	■ mile	■ Mgal/min (imp)	
■ °	■ yd	■ Mgal/h (imp)	
■ gon	■ ft ²	■ Mgal/d (imp)	
■ µm	■ in ²	■ kgal/d (imp)	
■ mm	■ mile ²	■ kgal/h (imp)	
■ cm ³	■ yd ²	■ kgal/min (imp)	
■ dm ³	■ ft ³	■ kgal/s (imp)	
■ hl	■ gal (us)	■ µgal/d (imp)	
■ l	■ quart	■ µgal/h (imp)	
■ ml	■ pint	■ µgal/min (imp)	
■ s	■ yd ³	■ µgal/s (imp)	
■ min	■ mile ³	■ mgal/d (imp)	
■ d	■ in ³	■ mgal/h (imp)	
■ h	■ bushel	■ mgal/min (imp)	
■ ks	■ bbl (us;oil)	■ mgal/s (imp)	
■ µs	■ ft/s	■ Mgal/s (imp)	
■ ms	■ ft/h	■ µbbl/d (us;oil)	
■ m/h	■ lb	■ µbbl/h (us;oil)	
■ m/s	■ ft/min	■ µbbl/min (us;oil)	
■ mm/s	■ in/h	■ µbbl/s (us;oil)	
■ Hz	■ in/s	■ kImpGal	
■ g	■ yd/h	■ Btu/lb	
■ kg	■ yd/min	■ oz/ft	
■ GWh	■ yd/s		
■ J	■ lb/in ³		
■ kWh	■ lb/gal (us)		
■ MWh	■ STon/yd ³		
■ kcal	■ psi		
■ Mcal	■ psi a		
■ kW	■ psi g		
■ MW	■ ftlbf		
■ W	■ hp		
■ MJ/h	■ lb/ft ³		
■ mV	■ MPH		
■ Ohm	■ ft ³ /d		
■ pF	■ ft ³ /h		
■ V	■ ft ³ /min		
■ Ml Mega	■ ft ³ /s		
■ mbar a	■ Sft ³ /h		
■ bar	■ Sft ³ /min		

- dB
- kPa a
- kPa g
- MPa a
- MPa g
- Pa a
- Pa g
- g/d
- g/h
- g/min
- g/s
- kg/d
- kg/h
- kg/min
- kg/s
- cm
- km
- nm
- pm
- a
- ha
- cm²
- dm²
- km²
- m²
- mm²
- mm³
- cl
- t
- kg/m³
- kg/dm³
- g/cm³
- g/m³
- kg/l
- kgf/cm²
- GJ
- kJ
- MJ
- km/h
- kt
- m/s²
- GHz
- kHz
- MHz
- 1/min
- 1/s
- THz
- rad/s
- 1/s²
- Mg
- mg
- g/l
- g/ml
- Mg/m³
- t/m³
- mg/m
- tex
- kg/m
- kgm/s
- gal/d (us)
- gal/h (us)
- gal/min (us)
- gal/s (us)
- Mgal/d (us)
- bbl/d (us;oil)
- bbl/h (us;oil)
- bbl/min (us;oil)
- bbl/s (us;oil)
- Mgal/h (us)
- Mgal/min (us)
- Mgal/s (us)
- Mgal (us)
- af
- af/d
- af/h
- af/min
- af/s
- bbl/d (us;beer)
- bbl/h (us;beer)
- bbl/min (us;beer)
- bbl/s (us;beer)
- kgal/d (us)
- kgal/h (us)
- kgal/min (us)
- kgal/s (us)
- µgal/d (us)
- µgal/h (us)
- µgal/min (us)
- µgal/s (us)
- mgal/d (us)
- mgal/h (us)
- mgal/min (us)
- mgal/s (us)
- Mbbl/d (us;oil)
- Mbbl/h (us;oil)
- Mbbl/min (us;oil)
- Mbbl/s (us;oil)
- mbbl/d (us;oil)
- mbbl/h (us;oil)
- mbbl/min (us;oil)
- mbbl/s (us;oil)
- kft³/d
- kft³/h
- kft³/min
- kft³/s
- mft³/d
- mft³/h
- mft³/min
- mft³/s
- kbbl(US Beer)/d
- kbbl(US Beer)/h
- kbbl(US Beer)/min
- ubbl(US Beer)/min
- ubbl(US Beer)/s
- mbbl(US Beer)/d
- mbbl(US Beer)/h
- mbbl(US Beer)/min
- mbbl(US Beer)/s

- kgm²
- kgm²/s
- kNm
- MNm
- mNm
- Nm
- kN
- MN
- μ N
- mN
- N
- mN/m
- N/m
- atm
- GPa
- hPa
- kPa
- MPa
- μ Pa
- mPa
- Pa
- torr
- gf/cm²
- cal
- EJ
- mJ
- PJ
- TJ
- TWh
- Wh
- GW
- μ W
- mW
- nW
- pW
- TW
- Mcal/h
- kcal/d
- kcal/h
- kcal/min
- kcal/s
- Mcal/d
- Mcal/min
- Mcal/s
- kJ/d
- kJ/h
- kJ/min
- kJ/s
- A
- mA
- kA
- μ A
- nA
- pA
- C
- kC
- MC
- μ C
- nC
- kgal (us)
- ac-in/d
- ac-in/h
- ac-in/m
- ac-in/s
- Mft³/d
- ac-in
- Mft³
- inH2Oa
- inH2Og
- inH2O a(4°C)
- inH2Og(4°C)
- inH2O a(68°F)
- inH2Og(68°F)
- ftH2Oa
- ftH2Og
- ftH2O a(4°C)
- ftH2Og(4°C)
- ftH2O a(68°F)
- ftH2Og(68°F)
- inHga
- inHgg
- inHg a(0°C)
- inHgg(0°C)
- klb(US)/d
- klb(US)/h
- klb(US)/min
- klb(US)/s
- MSft³/D
- mils/yr
- ft/s²
- MLB/H
- lbf-in/deg

- pC
- Ah
- W/mK
- m2K/W
- W/m²K
- J/K
- kJ/K
- J/(kgK)
- kJ/(kgK)
- J/kg
- kJ/kg
- MJ/kg
- C/cm³
- C/m³
- C/mm³
- kC/m³
- μC/m³
- mC/m³
- C/cm²
- C/m²
- C/mm²
- kC/m²
- μC/m²
- mC/m²
- kV/m
- MV/m
- μV/m
- mV/m
- V/cm
- V/m
- kV
- MV
- μV
- F
- μF
- mF
- nF
- F/m
- A/cm²
- kA/m²
- MA/m²
- A/cm
- A/m
- kA/m
- μT
- mT
- nT
- T
- mWb
- Wb
- kWb/m
- Wb/m
- H
- μH
- mH
- nH
- pH
- H/m
- μH/m

- nH/m
- Am²
- GOhm
- kOhm
- MOhm
- μ Ohm
- mOhm
- kS
- μ S
- μ S/cm
- mS
- S
- t/d
- t/h
- t/min
- t/s
- %
- m³/d
- m³/h
- m³/min
- m³/s
- GOhmm
- kOhmm
- MOhmm
- μ Ohmm
- mOhmm
- nOhmm
- Ohmcmm
- Ohmm
- kS/m
- MS/m
- μ S/mm
- mS/cm
- S/m
- sr
- l/d
- l/h
- l/min
- l/s
- Ml/d
- kW/m²
- W/(sr·m²)
- cd
- cd/m²
- lm
- lm/m²
- lm/W
- lmh
- lms
- lx
- lxs
- μ W/m²
- mW/m²
- pW/m²
- Pas/m³
- Pas/m
- ppm
- MJ/d
- MJ/min

- MJ/s
- cm³/d
- cm³/h
- cm³/min
- cm³/s
- Nm³
- Nm³/d
- Nm³/h
- Nm³/min
- Nm³/s
- Sm³
- Sm³/d
- Sm³/h
- Sm³/min
- Sm³/s
- NI
- NI/d
- NI/h
- NI/min
- NI/s
- Sl
- ml/min
- B
- ppb
- ppth
- Balling
- km³/d
- km³/h
- km³/min
- km³/s
- Mm³/d
- Mm³/h
- Mm³/min
- Mm³/s
- µm³/d
- µm³/h
- µm³/min
- µm³/s
- mm³/d
- mm³/h
- mm³/min
- mm³/s
- kl/d
- kl/h
- kl/min
- kl
- Sl/d
- Sl/h
- Sl/min
- Sl/s
- kL/s
- Ml/h
- Ml/min
- Mm³/d
- Mm³
- GPa a
- GPa g
- mPa a
- mPa g

- μPa a
- μPa g
- hPa a
- hPa g
- gf/cm² a
- gf/cm² g
- kgf/cm² a
- kgf/cm² g
- mBarg
- μbar
- Gy
- kcal/kg
- mGy
- mSv
- rad
- rem
- Sv
- Bq
- kBq
- MBq
- cnt/s
- MSft³/d
- SCCM
- dm
- mm/yr
- g/m
- $\mu\text{g}/\text{m}^3$
- $\mu\text{g}/\text{l}$
- mg/m³
- kmol
- μmol
- mmol
- mol
- mol/dm³
- mol/m³
- mol/l
- cm³/mol
- dm³/mol
- m³/mol
- g/mol
- kg/mol
- l/mol
- mmol/kg
- mol/kg
- mg/l
- $\mu\text{S}/\text{m}$
- mS/m
- nS/cm
- S/cm
- kOhmcm
- MOhmcm
- l/m³
- L/m
- $\mu\text{L}/\text{L}$
- ml/m³
- ml/l
- %Sat
- % sol/vol
- % sol/mass

- %vol
- WT-%
- J/mol
- kJ/mol
- J/(molK)
- Bq/kg
- kBq/kg
- MBq/kg
- mV/K
- V/K
- J/g
- mV/pH
- pH
- pH/°C
- mV/%
- %/s
- %/V
- nA/ppm
- 1/32 ms
- 1/H
- /cm
- 1/K
- 1/m
- 1/mm
- A/hPa
- A/Pa
- Nm²/A
- Pa/A
- pA/hPa
- C/kg
- mC/kg
- dyne-cm/deg
- newton-m/deg
- bar a
- bar g

Custom-specific units
PV/Sec

Factory setting

K

Additional information

Result

The selected unit applies for:

- **Value** parameter (→ [186](#))
- **Value** parameter (→ [189](#))
- **EU at 100%** parameter (→ [194](#))
- **EU at 0%** parameter (→ [195](#))
- **Low Cutoff** parameter (→ [211](#))
- **High High Limit** parameter (→ [219](#))
- **Float Value** parameter (→ [223](#))
- **High Limit** parameter (→ [220](#))
- **Float Value** parameter (→ [225](#))
- **Low Limit** parameter (→ [221](#))
- **Float Value** parameter (→ [226](#))
- **Low Low Limit** parameter (→ [221](#))
- **Float Value** parameter (→ [228](#))

Decimal

Navigation  Expert → Analog inputs → Analog input 1 to n → Decimal (6961–1 to n)

Description Use this function to select the number of decimal places for the input value from the transducer block (input value).

User entry -128 to 127

Factory setting 0

Grant

Navigation  Expert → Analog inputs → Analog input 1 to n → Grant (6926–1 to n)

Description Option for releasing certain access authorizations of the field bus host system on the device.

Selection

- Program
- Tune
- Alarm
- Local
- Operate
- Service
- Diagnostic

Deny

Navigation  Expert → Analog inputs → Analog input 1 to n → Deny (6925–1 to n)

Description Option for restricting certain access authorizations of the field bus host system on the device.

Selection

- Program Denied
- Tune Denied
- Alarm Denied
- Local
- Operate Denied

I/O Options

Navigation  Expert → Analog inputs → Analog input 1 to n → I/O Options (6941–1 to n)

Description Option for activating the low flow cut off.

Selection Low Cutoff

Additional information*Description*

The limit value for the low flow cut off is defined in **Low Cutoff** parameter
(→ 211).

Channel**Navigation**

Expert → Analog inputs → Analog input 1 to n → Channel (6902–1 to n)

Description

Use this function to select the input value that should be processed in the Analog Input function block.

Selection

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl. *
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. ampl. 0
- Freq. fluct. 0
- Osc. damping 0
- Osc.damp.fluct 0
- Signal asymmetry
- Exc. current 0
- HBSI *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Current input 1 *
- Uninitialized

Factory setting

Uninitialized

Status Options**Navigation**

Expert → Analog inputs → Analog input 1 to n → Status Options (6971–1 to n)

Prerequisite

The measuring device must be in the OOS operating mode so that the parameter can be edited.

* Visibility depends on order options or device settings

Description	Use this function to select an option for the status of the output value that is supported by the analog input block.
Selection	<ul style="list-style-type: none"> ■ Propag Fault Fwd ■ Uncertain if Lim ■ Bad if Limited ■ Uncertain if Man
Additional information	<p><i>Options</i></p> <ul style="list-style-type: none"> ■ Propag Fault Fwd If the measuring device has the status Bad DeviceFailure or Bad SensorFailure, the device continues to measure and no alarm is triggered. The use of this substatus in the output value (OUT) is defined by Propag Fault Fwd option. With the aid of this option, the user/operator can specify whether the alarm generation (sending an alarm) is triggered by the block or is forwarded downstream. ■ Uncertain if Lim If the measured or calculated value reaches a limit value, Uncertain if Lim option is used for the output status. ■ Bad if Limited If the measured value exceeds or falls below an upper or lower limit value, Bad if Limited option is used as the output status. ■ Uncertain if Man If the Actual mode of the function block is in the Man option operating mode, Uncertain if Man option is used as the output status.

Lin Type

Navigation	 Expert → Analog inputs → Analog input 1 to n → Lin Type (6905-1 to n)
Description	Use this function to select the type of linearization of the input value or simulation value.
Selection	<ul style="list-style-type: none"> ■ Uninitialized ■ Direct ■ Indirect ■ Indirect Sq Root
Factory setting	Uninitialized
Additional information	<p><i>"Uninitialized" option</i> The function block does not switch to Auto operating mode.</p> <p><i>"Direct" option</i> The measured value from the transducer block (input value) bypasses the linearization function and is routed unchanged through the analog input function block ($X_d_Scale = Out_Scale$). This is selected if the input value already has the required physical units.</p> <p>PV = Input value</p>

The units in Units index (\rightarrow 195) (Xd_Scale) and Units index (\rightarrow 198) (Out_Scale) must be the same. Otherwise, the function block will remain in the OOS operating mode and the BlockConfigurat block error is displayed in Block Error (\rightarrow 183).

"Indirect" option

The measured value from the transducer block (input value) is linearly rescaled via the Xd_Scale input scaling to the required Out_Scale output range.

$$PV = \frac{X}{100} \cdot (Y - Z) - Z$$

A0024820

PV Primary value

X Value (\rightarrow 214) (Field_Val)

Y EU at 100% (\rightarrow 198) (Out_Scale)

Z EU at 0% (\rightarrow 198) (Out_Scale)

"Indirect Sq Root" option

The measured value from the transducer block (input value) is rescaled via the Xd_Scale parameter group and recalculated using a root function. It is then rescaled again to the required output range via the Out_Scale parameter group.

$$PV = \sqrt{\frac{X}{100}} \cdot (Y - Z) - Z$$

A0024847

PV Primary value

X Value (\rightarrow 214) (Field_Val)

Y EU at 100% (\rightarrow 198) (Out_Scale)

Z EU at 0% (\rightarrow 198) (Out_Scale)


Example

- System unit in transducer block: kg/h
- Sensor measuring range: 0 to 30 kg/h
- Output range for the automation system: 0 to 100 %

The analog input function block must be configured as follows:

1. In the **Channel** parameter (\rightarrow 208), select the **Mass flow** option.
2. In the **Lin Type** parameter (\rightarrow 209), select the **Indirect** option.
 - ↳ The "Volume Flow" process variable of the transducer block "Flow" is linearly rescaled in the AI block to the required Out_Scale output range via the Xd_Scale input scaling.
3. In the Xd_Scale parameter group:
 - ↳ **EU at 0%** parameter (\rightarrow 195), enter the value 0.
 - In **EU at 100%** parameter (\rightarrow 194), enter the value 30.
 - In the **Units index** parameter (\rightarrow 195), select the **kg/h** option.
4. In the Out_Scale parameter group:
 - ↳ **EU at 0%** parameter (\rightarrow 198), enter the value 0.
 - In **EU at 100%** parameter (\rightarrow 198), enter the value 100.
 - In the **Units index** parameter (\rightarrow 198), select the **%** option.

The result is that an input value of 15 kg/h, for example, outputs a value of 50 % via the **Value** parameter (\rightarrow 189).

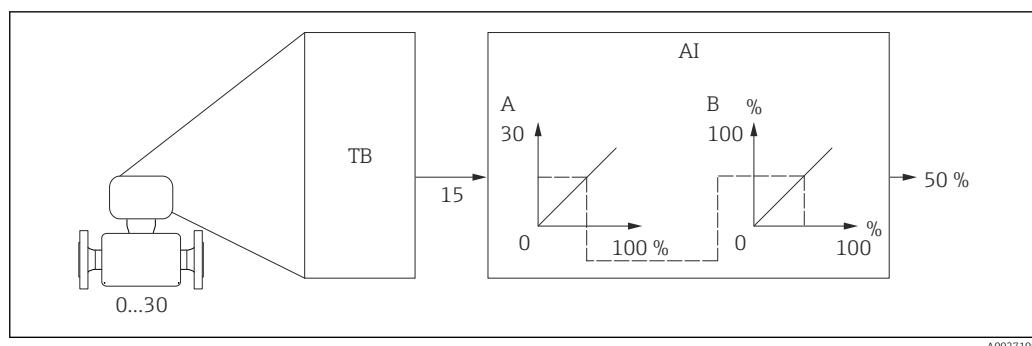

9 Engineering unit in kg/h

Low Cutoff

Navigation

Expert → Analog inputs → Analog input 1 to n → Low Cutoff (6956–1 to n)

Description

Use this function to enter a limit value for low flow cut off.

User entry

Positive floating-point number

Factory setting

0

Additional information

Description

If the converted input value (PV) falls below this limit value, then it is set to zero.

The low flow cut off is enabled via **I/O Options** parameter (→ 207).

Dependency

The unit is taken from the: **Units index** parameter (→ 198)

Status

Navigation

Expert → Analog inputs → Analog input 1 to n → Status (6923–1 to n)

Description

Displays the status of the unprocessed measured value from the device, which reflects the status of the transducer before signal transmission.

User interface

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)

- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)

- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Value (6924–1 to n)
Description	Displays the unprocessed measured value from the device as a % of the primary value (PV).
User interface	Signed floating-point number

PV Filter Time

Navigation	  Expert → Analog inputs → Analog input 1 to n → PV Filter Time (6909–1 to n)
Description	Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).
User entry	Positive floating-point number
Factory setting	0 s
Additional information	<i>Factory setting</i>  If the value 0 s is entered, filtering will not be performed.

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6978–1 to n)
Description	Option for manually acknowledging an update of the static block parameter.
Selection	<ul style="list-style-type: none">▪ Uninitialized▪ Acknowledged▪ Unacknowledged
Factory setting	Uninitialized
Additional information	<i>Description</i>  <ul style="list-style-type: none">▪ If a new diagnostic event occurs, the measuring device sets Unacknowledged option.▪ If the diagnostic event has been acknowledged, the user can set Acknowledged option.

Update State

Navigation	 Expert → Analog inputs → Analog input 1 to n → Update State (6979–1 to n)
Description	Displays the status of an update of the static block parameter. The status indicates whether the update was communicated or not.
User interface	<ul style="list-style-type: none">■ Uninitialized■ Reported■ Not Reported

Time Stamp

Navigation	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6977–1 to n)
Description	Displays the time stamp indicating when the analysis of the block was started and when a status change of an update to the static block parameter that has not yet been communicated was identified. The time stamp is retained until the update confirmation is received.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Static revision

Navigation	 Expert → Analog inputs → Analog input 1 to n → Static revision (6976–1 to n)
Description	Displays the Static revision: Each instance of a static block parameter being accessed with write and communicate access due to an update is counted (event counter).
User interface	0 to 65 535

Relative Index

Navigation	 Expert → Analog inputs → Analog input 1 to n → Relative Index (6975–1 to n)
Description	Displays the relative index of the static block parameter that triggered the alarm (OD index minus field bus start index).
User interface	0 to 65 535

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6920-1 to n)
Description	Description for manually acknowledging a block alarm.
Selection	<ul style="list-style-type: none">■ Uninitialized■ Acknowledged■ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p>If Blk Alm Auto Ack option is not enabled in Ack. Option parameter (→  218), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets Unacknowledged option. ■ If the alarm has been acknowledged, the user can set Acknowledged option.</p>

Alarm State

Navigation	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6917-1 to n)
Description	Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.
User interface	<ul style="list-style-type: none">■ Uninitialized■ Clear-Reported■ ClearNotReported■ Active-Reported■ ActiveNotRep

Time Stamp

Navigation	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6919-1 to n)
Description	Displays the time stamp indicating when the analysis of the block was started and when a status change of the block alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Subcode

Navigation	 Expert → Analog inputs → Analog input 1 to n → Subcode (6918-1 to n)
Description	Displays the specific cause of the block alarm.
User interface	<ul style="list-style-type: none">■ Other■ BlockConfigurat■ LinkConfigurat■ SimulationActive■ LocalOverride■ DeviceFaultState■ DeviceMainten■ SensorFailure■ OutputFailure■ MemoryFailure■ LostStaticData■ LostNVData■ ReadbackCheck■ MaintenanceNeed■ PowerUp■ OutOfService

Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Value (6921-1 to n)
Description	Displays the value of the affected parameter at the time at which the block alarm was detected.
User interface	0 to 255

Current

Navigation	 Expert → Analog inputs → Analog input 1 to n → Current (6912-1 to n)
Description	Use this function to view the current status of the process alarms.
User interface	<ul style="list-style-type: none">■ HiHi Alarm■ Hi Alarm■ LoLo Alarm■ Lo Alarm■ Block Alarm

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6914–1 to n)
Description	Displays an unacknowledged process alarm.
User interface	<ul style="list-style-type: none">▪ HiHi Alarm Unack▪ Hi Alm Unack▪ LoLo Alm Unack▪ Lo Alm Unack▪ Block Alm Unack

Unreported

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unreported (6915–1 to n)
Description	Displays a process alarm that has not been communicated.
User interface	<ul style="list-style-type: none">▪ HiHi Alm Unrep▪ Hi Alm Unrep▪ LoLo Alm Unrep▪ Lo Alm Unrep▪ Block Alm Unrep

Disabled

Navigation	 Expert → Analog inputs → Analog input 1 to n → Disabled (6913–1 to n)
Description	Option for disabling a process alarm category.
Selection	<ul style="list-style-type: none">▪ HiHi Alm Disabl▪ Hi Alm Disabled▪ LoLo Alm Disabl▪ Lo Alm Disabled▪ Block Alm Disabl

Ack. Option

Navigation	 Expert → Analog inputs → Analog input 1 to n → Ack. Option (6910–1 to n)
Description	Option for automatic acknowledgment of process alarms in a specific category.
Selection	<ul style="list-style-type: none">▪ HiHi Alm Aut Ack▪ Hi Alm Auto Ack▪ LoLo Alm Aut Ack▪ Lo Alm Auto Ack

- Blk Alm Auto Ack
- Fail Alm Aut Ack
- OffSpecAlmAutAck
- Maint Alm AutAck
- Check Alm AutAck

Additional information*Description*

Use this function to determine whether an alarm must be acknowledged via the field bus host system.

 If the process alarm option has not been enabled in this parameter, this process alarm must only be acknowledged in **Unacknowledged** parameter (→ 218). **Current** parameter (→ 217) indicates the current status of all process alarms.

Alarm Hysteresis

Navigation	 Expert → Analog inputs → Analog input 1 to n → Alarm Hysteresis (6911–1 to n)
Description	Use this function to enter the hysteresis value for the upper and lower warning or alarm limit values.
User entry	0.000000 to 50.0000 %
Factory setting	0 %

Hi Hi Priority

Navigation	 Expert → Analog inputs → Analog input 1 to n → Hi Hi Priority (6938–1 to n)
Description	Use this function to enter the priority for the upper alarm limit, which determines the behavior in the event of an active limit value violation.
User entry	0 to 15
Factory setting	0

High High Limit

Navigation	 Expert → Analog inputs → Analog input 1 to n → High High Limit (6937–1 to n)
Description	Use this function to enter the value for the upper alarm limit.
User entry	Signed floating-point number
Factory setting	0

Additional information*Dependency*

The unit is taken from the: **Units index** parameter (→ [198](#))

High Priority

Navigation

Expert → Analog inputs → Analog input 1 to n → High Priority (6940–1 to n)

Description

Use this function to enter the priority for the upper early warning limit, which determines the behavior in the event of an active limit value violation.

User entry

0 to 15

Factory setting

0

High Limit

Navigation

Expert → Analog inputs → Analog input 1 to n → High Limit (6939–1 to n)

Description

Use this function to enter the value for the upper early warning limit.

User entry

Signed floating-point number

Factory setting

0

Additional information*Dependency*

The unit is taken from the: **Units index** parameter (→ [198](#))

Low Priority

Navigation

Expert → Analog inputs → Analog input 1 to n → Low Priority (6955–1 to n)

Description

Use this function to enter the priority for the lower early warning limit, which determines the behavior in the event of an active limit value violation.

User entry

0 to 15

Factory setting

0

Low Limit

Navigation	 Expert → Analog inputs → Analog input 1 to n → Low Limit (6947–1 to n)
Description	Use this function to enter the value for the lower early warning limit.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  198)

Low Low Priority

Navigation	 Expert → Analog inputs → Analog input 1 to n → Low Low Priority (6954–1 to n)
Description	Use this function to enter the priority for the lower alarm limit, which determines the behavior in the event of an active limit value violation.
User entry	0 to 15
Factory setting	0

Low Low Limit

Navigation	 Expert → Analog inputs → Analog input 1 to n → Low Low Limit (6953–1 to n)
Description	Use this function to enter the value for the lower alarm limit.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  198)

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6935–1 to n)
Description	Option for manually acknowledging a process alarm that has exceeded the upper alarm limit (High High Limit (→  219)).

Selection	<ul style="list-style-type: none">■ Uninitialized■ Acknowledged■ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p>If HiHi Alm Aut Ack option is not enabled in Ack. Option parameter (→ 218), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets Unacknowledged option. ■ If the alarm has been acknowledged, the user can set Acknowledged option.</p>

Alarm State

Navigation	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6932-1 to n)
Description	Displays the status of the process alarm for the upper alarm limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.
User interface	<ul style="list-style-type: none">■ Uninitialized■ Clear-Reported■ ClearNotReported■ Active-Reported■ ActiveNotRep

Time Stamp

Navigation	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6934-1 to n)
Description	Displays the time stamp of the process alarm for the upper alarm limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Subcode

Navigation	 Expert → Analog inputs → Analog input 1 to n → Subcode (6933-1 to n)
Description	Displays the specific cause of the process alarm for the upper alarm limit.
User interface	<ul style="list-style-type: none">■ Other■ BlockConfigurat■ LinkConfigurat

- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Float Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Float Value (6936–1 to n)
Description	Displays the value of the affected parameter at the time at which the process alarm for the upper alarm limit was triggered.
User interface	Signed floating-point number
Additional information	<p><i>Dependency</i></p>  The unit is taken from the: Units index parameter (→  198)

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6930–1 to n)
Description	Option for manually acknowledging a process alarm that has exceeded the upper early warning limit (High Limit) (→  220).
Selection	<ul style="list-style-type: none"> ■ Uninitialized ■ Acknowledged ■ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p>If Hi Alm Auto Ack option is not enabled in Ack. Option parameter (→  218), the process alarm must be manually acknowledged in this parameter.</p>  ■ If a new alarm occurs, the measuring device sets Unacknowledged option. ■ If the alarm has been acknowledged, the user can set Acknowledged option.

Alarm State

Navigation  Expert → Analog inputs → Analog input 1 to n → Alarm State (6927–1 to n)

Description Displays the status of the process alarm for the upper early warning limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.

User interface

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

Time Stamp

Navigation  Expert → Analog inputs → Analog input 1 to n → Time Stamp (6929–1 to n)

Description Displays the time stamp of the process alarm for the upper early warning limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

User interface

Days (d), hours (h), minutes (m), seconds (s)

Subcode

Navigation  Expert → Analog inputs → Analog input 1 to n → Subcode (6928–1 to n)

Description Displays the specific cause of the process alarm for the upper early warning limit.

User interface

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Float Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Float Value (6931–1 to n)
Description	Displays the value of the affected parameter at the time at which the process alarm for the upper early warning limit was triggered.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  198)

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6945–1 to n)
Description	Option for manually acknowledging a process alarm that has exceeded the lower early warning limit (Low Limit (→  221)).
Selection	<ul style="list-style-type: none">▪ Uninitialized▪ Acknowledged▪ Unacknowledged
Factory setting	Uninitialized
Additional information	<i>Description</i> If Lo Alm Auto Ack option is not enabled in Ack. Option parameter (→  218), the process alarm must be manually acknowledged in this parameter.  <ul style="list-style-type: none">▪ If a new alarm occurs, the measuring device sets Unacknowledged option.▪ If the alarm has been acknowledged, the user can set Acknowledged option.

Alarm State

Navigation	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6942–1 to n)
Description	Displays the status of the process alarm for the lower early warning limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.
User interface	<ul style="list-style-type: none">▪ Uninitialized▪ Clear-Reported▪ ClearNotReported▪ Active-Reported▪ ActiveNotRep

Time Stamp

Navigation  Expert → Analog inputs → Analog input 1 to n → Time Stamp (6944–1 to n)

Description Displays the time stamp of the process alarm for the lower early warning limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

User interface Days (d), hours (h), minutes (m), seconds (s)

Subcode

Navigation  Expert → Analog inputs → Analog input 1 to n → Subcode (6943–1 to n)

Description Displays the specific cause of the process alarm for the lower early warning limit.

User interface

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Float Value

Navigation  Expert → Analog inputs → Analog input 1 to n → Float Value (6946–1 to n)

Description Displays the value of the affected parameter at the time at which the process alarm for the lower early warning limit was triggered.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the: **Units index** parameter (→  198)

Unacknowledged

Navigation	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6951–1 to n)
Description	Option for manually acknowledging a process alarm that has exceeded the lower alarm limit (Low Low Limit (→ 221)).
Selection	<ul style="list-style-type: none"> ■ Uninitialized ■ Acknowledged ■ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p>If LoLo Alm Aut Ack option is not enabled in Ack. Option parameter (→ 218), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets Unacknowledged option. ■ If the alarm has been acknowledged, the user can set Acknowledged option.</p>

Alarm State

Navigation	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6948–1 to n)
Description	Displays the status of the process alarm for the lower alarm limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.
User interface	<ul style="list-style-type: none"> ■ Uninitialized ■ Clear-Reported ■ ClearNotReported ■ Active-Reported ■ ActiveNotRep

Time Stamp

Navigation	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6950–1 to n)
Description	Displays the time stamp of the process alarm for the lower alarm limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Subcode


Navigation	 Expert → Analog inputs → Analog input 1 to n → Subcode (6949–1 to n)
Description	Displays the specific cause of the process alarm for the lower alarm limit.
User interface	<ul style="list-style-type: none">▪ Other▪ BlockConfigurat▪ LinkConfigurat▪ SimulationActive▪ LocalOverride▪ DeviceFaultState▪ DeviceMainten▪ SensorFailure▪ OutputFailure▪ MemoryFailure▪ LostStaticData▪ LostNVData▪ ReadbackCheck▪ MaintenanceNeed▪ PowerUp▪ OutOfService

Float Value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Float Value (6952–1 to n)
Description	Displays the value of the affected parameter at the time at which the process alarm for the lower alarm limit was triggered.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the: Units index parameter (→  198)

3.8 "Discrete inputs" submenu

Navigation   Expert → Discrete inputs

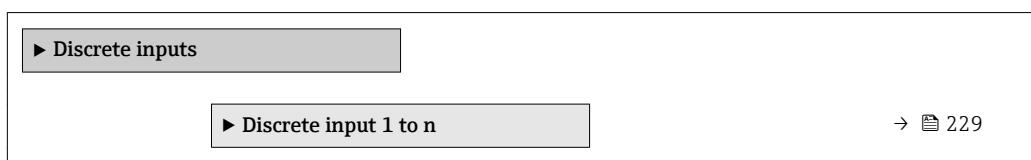

3.8.1 "Discrete input 1 to n" submenu

Navigation

Expert → Discrete inputs → Discrete input 1 to n

► Discrete input 1 to n	
Block tag (6851–1 to n)	→ 229
Status (6853–1 to n)	→ 235
Value (6854–1 to n)	→ 238
Channel (6852–1 to n)	→ 246
PV Filter Time (6855–1 to n)	→ 247

Block tag

Navigation

Expert → Discrete inputs → Discrete input 1 to n → Block tag (6851–1 to n)

Description

Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.

User entry

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static Revision

Navigation

Expert → Discrete inputs → Discrete input 1 to n → Static Revision (6884–1 to n)

Description

Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).

User interface

0 to FFFF

Additional information

Description

 Static parameters are parameters that are not changed by the process.

Tag Description

Navigation

Expert → Discrete inputs → Discrete input 1 to n → Tag Description (6885–1 to n)

Description

Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.

User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).
------------	---

Strategy

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Strategy (6883–1 to n)
------------	---

Description	Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.
-------------	--

User entry	0 to FFFF
------------	-----------

Factory setting	0
-----------------	---

Alert Key

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Alert Key (6846–1 to n)
------------	--

Description	Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.
-------------	---

User entry	0 to 0xFF
------------	-----------

Factory setting	1
-----------------	---

Target mode

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Target mode (6873–1 to n)
------------	--

Description	Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.
-------------	---

Selection	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man■ LO■ IMan■ OOS
-----------	--

Factory setting	OOS
-----------------	-----

Additional information	<i>Options</i>
------------------------	----------------

 Detailed description of the options available for selection: **Target mode** parameter
(→  151)

Actual mode

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Actual mode (6870-1 to n)
Description	Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode in which the function block is currently operating. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→  230).
User interface	<ul style="list-style-type: none">▪ ROut▪ RCas▪ Cas▪ Auto▪ Man▪ LO▪ IMan▪ OOS
Additional information	<i>User interface</i>  Detailed description of the options available for selection: Target mode parameter (→  151)

Permitted mode

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Permitted mode (6872-1 to n)
Description	Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→  230) for the function block. The operating modes that are supported vary depending on the type and function of the block.
Selection	<ul style="list-style-type: none">▪ ROut▪ RCas▪ Cas▪ Auto▪ Man▪ LO▪ IMan▪ OOS
Factory setting	<ul style="list-style-type: none">▪ Auto▪ OOS
Additional information	<i>Options</i>  Detailed description of the options available for selection: Target mode parameter (→  151)

Normal mode

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Normal mode (6871–1 to n)

Description Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Additional information

Options

 Detailed description of the options available for selection: **Target mode** parameter
(→  151)

Block Error

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Block Error (6857–1 to n)

Description Displays the short text for the Block Error that has occurred in the function block.

User interface

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Status

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Status (6875–1 to n)

Description Displays the status of the discrete input value (PV).

User interface

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)

- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)

- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Value

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Value (6876–1 to n)
Description	Displays the discrete process variable that is used for the block implementation.
User interface	<ul style="list-style-type: none"> ■ Low flow or PFS Stat.=Not active ■ Low flow or PFS Stat.=Active or Verif. stat.=Check not done ■ Verification status=failed ■ Verification status=busy ■ Verification status=ready ■ Verificaton overall result=failed ■ Status=Check not done/Result=failed ■ Status=failed/Result=failed ■ Status=busy/Result=failed ■ Status=ready/Result=failed ■ Verificaton overall result=passed ■ Status=Check not done/Result=passed ■ Status=failed/Result=passed ■ Status=busy/Result=passed ■ Status=ready/Result=passed ■ Verificaton overall result=Check not done ■ Status=Check not done/Result=Check not done ■ Status=failed/Result=Check not done ■ Status=busy/Result=Check not done ■ Status=ready/Result=Check not done

Status

Navigation	  Expert → Discrete inputs → Discrete input 1 to n → Status (6853–1 to n)
Description	Displays the status of the discrete output value.
User interface	<ul style="list-style-type: none"> ■ Bad (0x00) ■ Bad (0x01) ■ Bad (0x02) ■ Bad (0x03) ■ Bad (0x04) ■ Bad (0x05) ■ Bad (0x06) ■ Bad (0x07) ■ Bad (0x08) ■ Bad (0x09) ■ Bad (0x0A)

- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)

- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Value

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Value (6854–1 to n)

Description Use this function to select the discrete output value.

Selection

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- State 15
- Verificaton overall result=failed
- Status=Check not done/Result=failed
- Status=failed/Result=failed
- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done
- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

Factory setting Low flow or PFS Stat.=Not active

Simulate Status

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Simulate Status (6878–1 to n)

Description Use this function to select the status that is used for the transducer block simulation.

Selection

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)

- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)

- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Factory setting

Bad (0x00)

Simulate Value

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Simulate Value (6879–1 to n)
Description	Use this function to select the simulation value that is used for the transducer block simulation.
Selection	<ul style="list-style-type: none"> ■ Low flow or PFS Stat.=Not active ■ Low flow or PFS Stat.=Active or Verif. stat.=Check not done ■ Verification status=failed ■ Verification status=busy ■ Verification status=ready ■ Verificaton overall result=failed ■ Status=Check not done/Result=failed ■ Status=failed/Result=failed ■ Status=busy/Result=failed ■ Status=ready/Result=failed ■ Verificaton overall result=passed ■ Status=Check not done/Result=passed ■ Status=failed/Result=passed ■ Status=busy/Result=passed ■ Status=ready/Result=passed ■ Verificaton overall result=Check not done ■ Status=Check not done/Result=Check not done ■ Status=failed/Result=Check not done ■ Status=busy/Result=Check not done ■ Status=ready/Result=Check not done
Factory setting	Low flow or PFS Stat.=Not active

Transducer Stat

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Transducer Stat (6880–1 to n)
Description	Displays the current status of the transducer block.
User interface	<ul style="list-style-type: none"> ■ Bad (0x00) ■ Bad (0x01) ■ Bad (0x02) ■ Bad (0x03) ■ Bad (0x04) ■ Bad (0x05) ■ Bad (0x06) ■ Bad (0x07) ■ Bad (0x08) ■ Bad (0x09) ■ Bad (0x0A) ■ Bad (0x0B) ■ Bad (0x0C) ■ Bad (0x0D) ■ Bad (0x0E) ■ Bad (0x0F) ■ Bad (0x10)

- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)

- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Transducer Value

Navigation

█ Expert → Discrete inputs → Discrete input 1 to n → Transducer Value (6881-1 to n)

Description

Displays the current value of the transducer block.

User interface

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- Verificaton overall result=failed
- Status=Check not done/Result=failed
- Status=failed/Result=failed
- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done
- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

Factory setting

Low flow or PFS Stat.=Not active

Sim. En/Disable**Navigation**

- Expert → Discrete inputs → Discrete input 1 to n → Sim. En/Disable (6877-1 to n)

Description

Use this function to enable or disable the function block simulation.

Selection

- Uninitialized
- Disabled
- Active

Factory setting

Uninitialized

Transducer State**Navigation**

- Expert → Discrete inputs → Discrete input 1 to n → Transducer State (6891-1 to n)

DescriptionUse this function to enter the transducer state: this is required by FieldValD (**Status** parameter (→ □ 247), **Value** parameter (→ □ 249)) to display the actual on/off status of the hardware.**User entry**

0 to 65 535

Factory setting

0

Output State

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Output State (6874–1 to n)
Description	Use this function to enter the output state: This is required for scaling the discrete input value (PV).
User entry	0 to 65 535
Factory setting	0

Deny

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Deny (6867–1 to n)
Description	Option for restricting certain access authorizations of the field bus host system on the device.
Selection	<ul style="list-style-type: none">■ Program Denied■ Tune Denied■ Alarm Denied■ Local■ Operate Denied

Grant

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Grant (6868–1 to n)
Description	Option for releasing certain access authorizations of the field bus host system on the device.
Selection	<ul style="list-style-type: none">■ Program■ Tune■ Alarm■ Local■ Operate■ Service■ Diagnostic

I/O Options

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → I/O Options (6869–1 to n)
Description	Option for activating the inversion of the signal.
Selection	Invert

Additional information*Description*

This selection determines whether the discrete input is inverted before it is stored as a process variable. Normally a discrete value of 0 is regarded as a logical value of 0 and a discrete value that is not equal to 0 is regarded as a logical value of 1. If inversion is enabled, this correlation is reversed. A field device input value that is not equal to 0 results in a discrete output value of 0 and an input value of 0 results in a discrete output value of 1.

Status Options**Navigation**

 Expert → Discrete inputs → Discrete input 1 to n → Status Options (6882-1 to n)

Prerequisite

The measuring device must be in the OOS operating mode so that the parameter can be edited.

Description

For selecting an option for the status of the output value that is supported by the Discrete input block.

Selection

- Propag Fault Fwd
- Uncertain if Man

Additional information*Options*

- Propag Fault Fwd
If the measuring device indicates the status **Bad DeviceFailure** or **Bad SensorFailure**, the device continues to measure and no alarm is triggered. The use of this substatus in the output value (OUT) is defined by **Propag Fault Fwd** option. With the aid of this option, the user/operator can specify whether the alarm generation (sending an alarm) is triggered by the block or is forwarded downstream.
- Uncertain if Man
If the Actual mode of the function block is in the **Man** option operating mode, **Uncertain if Man** option is used as the output status.

Channel**Navigation**

  Expert → Discrete inputs → Discrete input 1 to n → Channel (6852-1 to n)

Description

Use this function to select the input value that should be processed in the discrete input function block.

Selection

- Uninitialized
- Empty pipe det.
- Low flow cut off
- Switch out.stat.
- Verific. status

Factory setting

Empty pipe det.

PV Filter Time

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → PV Filter Time (6855-1 to n)
Description	Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).
User entry	Positive floating-point number
Factory setting	0 s
Additional information	<i>Factory setting</i>  If the value 0 s is entered, filtering will not be performed.

Status

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Status (6865-1 to n)
Description	Displays the status of the discrete input value from a measuring device in the field.
User interface	<ul style="list-style-type: none">■ Bad (0x00)■ Bad (0x01)■ Bad (0x02)■ Bad (0x03)■ Bad (0x04)■ Bad (0x05)■ Bad (0x06)■ Bad (0x07)■ Bad (0x08)■ Bad (0x09)■ Bad (0x0A)■ Bad (0x0B)■ Bad (0x0C)■ Bad (0x0D)■ Bad (0x0E)■ Bad (0x0F)■ Bad (0x10)■ Bad (0x11)■ Bad (0x12)■ Bad (0x13)■ Bad (0x14)■ Bad (0x15)■ Bad (0x16)■ Bad (0x17)■ Bad (0x18)■ Bad (0x19)■ Bad (0x1A)■ Bad (0x1B)■ Bad (0x1C)■ Bad (0x1D)■ Bad (0x1E)■ Bad (0x1F)

- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)

- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

Factory setting Bad (0x00)

Additional information *Description*

An output parameter can be linked to an input parameter from another function block. Both the input parameter and the output parameter have a field value and status. The status of the input parameter is taken from the linked output parameter.

Value

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Value (6866-1 to n)

Description Displays the discrete input value from a measuring device in the field.

User interface

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- Verificaton overall result=failed
- Status=Check not done/Result=failed

- Status=failed/Result=failed
- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done
- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

Factory setting Low flow or PFS Stat.=Not active

Unacknowledged

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6889-1 to n)
Description	Option for manually acknowledging an update of the static block parameter.
Selection	<ul style="list-style-type: none">▪ Uninitialized▪ Acknowledged▪ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p> ▪ If a new diagnostic event occurs, the measuring device sets Unacknowledged option. ▪ If the diagnostic event has been acknowledged, the user can set Acknowledged option.</p>

Update State

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Update State (6890-1 to n)
Description	Displays the status of an update of the static block parameter. The status indicates whether the update was communicated or not.
User interface	<ul style="list-style-type: none">▪ Uninitialized▪ Reported▪ Not Reported

Time Stamp

Navigation	☒ Expert → Discrete inputs → Discrete input 1 to n → Time Stamp (6888-1 to n)
Description	Displays the time stamp indicating when the analysis of the block was started and when a status change of an update to the static block parameter that has not yet been communicated was identified. The time stamp is retained until the update confirmation is received.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Static revision

Navigation	☒ Expert → Discrete inputs → Discrete input 1 to n → Static revision (6887-1 to n)
Description	Displays the Static revision: Each instance of a static block parameter being accessed with write and communicate access due to an update is counted (event counter).
User interface	0 to 65 535

Relative Index

Navigation	☒ Expert → Discrete inputs → Discrete input 1 to n → Relative Index (6886-1 to n)
Description	Displays the relative index of the static block parameter that triggered the alarm (OD index minus field bus start index).
User interface	0 to 65 535

Ack. Option

Navigation	☒ Expert → Discrete inputs → Discrete input 1 to n → Ack. Option (6841-1 to n)
Description	Option for automatic acknowledgment of process alarms in a specific category.
Selection	<ul style="list-style-type: none"> ■ Disc Alm Aut Ack ■ Blk Alm Auto Ack ■ Fail Alm Aut Ack ■ OffSpecAlmAutAck ■ Maint Alm AutAck ■ Check Alm AutAck

Additional information**Description**

Use this function to determine whether an alarm must be acknowledged via the field bus host system.



If the process alarm option has not been enabled in this parameter, this process alarm must only be acknowledged in **Unacknowledged** parameter (→ 218).

Current parameter (→ 217) indicates the current status of all process alarms.

Current**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to n → Current (6842-1 to n)

Description

Use this function to view the current status of the process alarms.

User interface

- Discrete Alarm
- Block Alarm
- Fail Alarm
- Off Spec Alarm
- Maint. Alarm
- Check Alarm

Disabled**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to n → Disabled (6843-1 to n)

Description

Option for disabling a process alarm category.

Selection

- Disc Alm Disabl
- Block Alm Disabl
- Fail Alm Disabl
- OffSpecAlmDisabl
- Maint Alm Disabl
- Check Alm Disab.

Unacknowledged**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6844-1 to n)

Description

Displays an unacknowledged process alarm.

User interface

- Disc Alm Unack
- Block Alm Unack
- Fail Alm Unack
- Off SpecAlmUnack
- Maint Alm Unack
- Check Alm Unack

Unreported

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Unreported (6845-1 to n)
Description	Displays a process alarm that has not been communicated.
User interface	<ul style="list-style-type: none">■ Disc Alm Unrep■ Block Alm Unrep■ Fail Alm Unrep■ Off SpecAlmUnrep■ Maint Alm Unrep■ Check Alm Unrep

Alarm State

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Alarm State (6847-1 to n)
Description	Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.
User interface	<ul style="list-style-type: none">■ Uninitialized■ Clear-Reported■ ClearNotReported■ Active-Reported■ ActiveNotRep

Subcode

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Subcode (6848-1 to n)
Description	Displays the specific cause of the block alarm.
User interface	<ul style="list-style-type: none">■ Other■ BlockConfigurat■ LinkConfigurat■ SimulationActive■ LocalOverride■ DeviceFaultState■ DeviceMainten■ SensorFailure■ OutputFailure■ MemoryFailure■ LostStaticData■ LostNVData■ ReadbackCheck■ MaintenanceNeed■ PowerUp■ OutOfService

Time Stamp

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Time Stamp (6849–1 to n)

Description Displays the time stamp indicating when the analysis of the block was started and when a status change of the block alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

User interface Days (d), hours (h), minutes (m), seconds (s)

Unacknowledged

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6850–1 to n)

Description Option for manually acknowledging a block alarm.

Selection

- Uninitialized
- Acknowledged
- Unacknowledged

Factory setting Uninitialized

Additional information *Description*

If **Blk Alm Auto Ack** option is not enabled in **Ack. Option** parameter (→  251), the process alarm must be manually acknowledged in this parameter.

-  ▪ If a new alarm occurs, the measuring device sets **Unacknowledged** option.
▪ If the alarm has been acknowledged, the user can set **Acknowledged** option.

Value

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Value (6856–1 to n)

Description Displays the value of the affected parameter at the time at which the block alarm was detected.

User interface 0 to 255

Alarm State

Navigation  Expert → Discrete inputs → Discrete input 1 to n → Alarm State (6858–1 to n)

Description Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.

User interface	<ul style="list-style-type: none"> ■ Uninitialized ■ Clear-Reported ■ ClearNotReported ■ Active-Reported ■ ActiveNotRep
-----------------------	--

Subcode

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Subcode (6859–1 to n)
-------------------	--

Description	Displays the specific cause of the discrete alarm.
--------------------	--

User interface	<ul style="list-style-type: none"> ■ Other ■ BlockConfigurat ■ LinkConfigurat ■ SimulationActive ■ LocalOverride ■ DeviceFaultState ■ DeviceMainten ■ SensorFailure ■ OutputFailure ■ MemoryFailure ■ LostStaticData ■ LostNVData ■ ReadbackCheck ■ MaintenanceNeed ■ PowerUp ■ OutOfService
-----------------------	--

Time Stamp

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Time Stamp (6860–1 to n)
-------------------	---

Description	Displays the time stamp indicating when the analysis of the function block was started and when a status change of the discrete alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
--------------------	--

User interface	Days (d), hours (h), minutes (m), seconds (s)
-----------------------	---

Unacknowledged

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6861–1 to n)
-------------------	---

Description	Option for manually acknowledging a discrete alarm.
--------------------	---

Selection	<ul style="list-style-type: none">■ Uninitialized■ Acknowledged■ Unacknowledged
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p>If Disc Alm Aut Ack option is not enabled in Ack. Option parameter (→ 251), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets Unacknowledged option. ■ If the alarm has been acknowledged, the user can set Acknowledged option.</p>

Discrete Value

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Discrete Value (6862–1 to n)
Description	Displays the value of the associated parameter at the time at which the alarm was detected.
User interface	<ul style="list-style-type: none">■ State 0■ State 1■ State 2■ State 3■ State 4■ State 5■ State 6■ State 7■ State 8■ State 9■ State 10■ State 11■ State 12■ State 13■ State 14■ State 15■ State 16

Discrete Limit

Navigation	 Expert → Discrete inputs → Discrete input 1 to n → Discrete Limit (6863–1 to n)
Description	Use this to enter the status of the discrete input value that triggers an alarm.
User entry	0 to 255
Factory setting	0

Discrete Prio

Navigation	Expert → Discrete inputs → Discrete input 1 to n → Discrete Prio (6864–1 to n)
Description	Use this to enter the priority of a discrete alarm.
User entry	0 to 15
Factory setting	0

3.9 "Analog outputs" submenu

Navigation Expert → Analog outputs

► Analog outputs

► Multiple AO

→ 257

3.9.1 "Multiple AO" submenu

Navigation Expert → Analog outputs → Multiple AO

► Multiple AO	
Block tag (11351)	→ 258
Status Options (11363)	→ 261
Fault State Time (11354)	→ 262
FaultState Val 1 (11355)	→ 263
FaultState Val 2 (11356)	→ 263
FaultState Val 3 (11357)	→ 263
FaultState Val 4 (11358)	→ 264
FaultState Val 5 (11359)	→ 264
FaultState Val 6 (11360)	→ 264
FaultState Val 7 (11361)	→ 265

FaultState Val 8 (11362)	→ 265
FaultStateStatus (11353)	→ 265

Block tag

Navigation Expert → Analog outputs → Multiple AO → Block tag (11351)

Description Use this function to enter the Block tag: specify a "label" for identifying the function block.

User entry Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

Static Revision

Navigation Expert → Analog outputs → Multiple AO → Static Revision (11371)

Description Displays the Static Revision: every write access to a static block parameter is counted (event counter).

User interface 0 to FFFF

Additional information *Description*

Static parameters are parameters that are not changed by the process.

Tag Description

Navigation Expert → Analog outputs → Multiple AO → Tag Description (11372)

Description Use this function to enter the Tag Description: define a user-specific text for the detailed description of the function block.

User entry Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

Strategy

Navigation Expert → Analog outputs → Multiple AO → Strategy (11370)

Description Use this function to enter the Strategy: makes it possible to group blocks by entering identical numbers.

User entry 0 to FFFF

Factory setting	0
------------------------	---

Alert Key

Navigation	 Expert → Analog outputs → Multiple AO → Alert Key (11365)
Description	Use this function to enter the Alert Key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
User entry	0 to 0xFF
Factory setting	1

Target mode

Navigation	 Expert → Analog outputs → Multiple AO → Target mode (11369)
Description	Use this function to select the Target mode: the selection specifies which operating mode is used for this block. This mode is generally set by a control application.
Selection	<ul style="list-style-type: none">■ ROut■ RCas■ Cas■ Auto■ Man■ LO■ IMan■ OOS
Factory setting	OOS
Additional information	<i>Selection</i>  Detailed description of the options available for selection: Target mode parameter (→  151)

Actual mode

Navigation	 Expert → Analog outputs → Multiple AO → Actual mode (11366)
Description	Displays the Actual mode: under certain conditions a block may not work in the operating mode to be used. In this case, the Actual mode represents the valid mode in which the block is currently operating. A comparison of the Actual mode with the Target mode indicates whether the Target mode (→  259) could be reached.
User interface	<ul style="list-style-type: none">■ ROut■ RCas■ Cas

- Auto
- Man
- LO
- IMan
- OOS

Additional information*Selection*

Detailed description of the options available for selection: **Target mode** parameter
(→ 151)

Permitted mode

Navigation

Expert → Analog outputs → Multiple AO → Permitted mode (11368)

Description

Use this function to select the Permitted mode: the selection defines which operating modes are available for the function block in the Target mode (→ 259). The operating modes that are supported vary depending on the type and function of the block.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Factory setting

- Auto
- OOS

Additional information*Selection*

Detailed description of the options available for selection: **Target mode** parameter
(→ 151)

Normal mode

Navigation

Expert → Analog outputs → Multiple AO → Normal mode (11367)

Description

Use this function to select the Normal mode: this mode is provided to enable the user to select the Normal mode among the operating modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Factory setting Auto

Additional information Selection



Detailed description of the options available for selection: **Target mode** parameter
(→ 151)

Block Error

Navigation ☐ Expert → Analog outputs → Multiple AO → Block Error (11364)

Description Displays the short text for the Block Error that occurred in the function block.

User interface

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Channel

Navigation ☐ ☐ Expert → Analog outputs → Multiple AO → Channel (11352)

Description Use this function to select the assignment or connection between the Analog Output function block and the Transducer Block.

Selection

- Uninitialized
- Channel_0

Factory setting Channel_0

Status Options

Navigation ☐ ☐ Expert → Analog outputs → Multiple AO → Status Options (11363)

Description Option for determining the fault state of the function block.

Selection

- Fstate to val 1
- Fstate to val 2
- Fstate to val 3
- Fstate to val 4
- Fstate to val 5
- Fstate to val 6
- Fstate to val 7
- Fstate to val 8
- Fstate restart 1
- Fstate restart 2
- Fstate restart 3
- Fstate restart 4
- Fstate restart 5
- Fstate restart 6
- Fstate restart 7
- Fstate restart 8

Additional information*Description*

This behavior is activated if an error condition of the set point that applies is present for longer than defined in the **Fault State Time** parameter (→ 262) or if the **Set Fault State** parameter (→ 161) is activated in the Resource block.

The fault state is defined via the following parameters:

- Fault State Time (→ 262)
- FaultState Val 1 to n

Selection

- Fstate to val 1...8

The value predefined in the **FaultState Val 1 to n** parameter is used instead of the analog set point. The fault state is enabled if there is an error condition.

- Fstate restart 1...8

The value predefined in the **FaultState Val 1 to n** parameter is used if the device is restarted. The non-volatile value is used otherwise. The fault state is not enabled and only the predefined value is used.

Fault State Time**Navigation**

Expert → Analog outputs → Multiple AO → Fault State Time (11354)

Description

Use this function to enter a time range during which an error condition (of the currently valid set point) must be met without interruption before an error message is generated.

User entry

Positive floating-point number

Factory setting

0 s

FaultState Val 1

Navigation	 Expert → Analog outputs → Multiple AO → FaultState Val 1 (11355)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 1 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 1 option is not selected in the Status Options parameter (→  261).

FaultState Val 2

Navigation	 Expert → Analog outputs → Multiple AO → FaultState Val 2 (11356)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 2 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 2 option is not selected in the Status Options parameter (→  261).

FaultState Val 3

Navigation	 Expert → Analog outputs → Multiple AO → FaultState Val 3 (11357)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 3 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 3 option is not selected in the Status Options parameter (→  261).

FaultState Val 4

Navigation	  Expert → Analog outputs → Multiple AO → FaultState Val 4 (11358)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 4 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 4 option is not selected in the Status Options parameter (→  261).

FaultState Val 5

Navigation	  Expert → Analog outputs → Multiple AO → FaultState Val 5 (11359)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 5 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 5 option is not selected in the Status Options parameter (→  261).

FaultState Val 6

Navigation	  Expert → Analog outputs → Multiple AO → FaultState Val 6 (11360)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 6 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 6 option is not selected in the Status Options parameter (→  261).

FaultState Val 7

Navigation	 Expert → Analog outputs → Multiple AO → FaultState Val 7 (11361)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 7 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 7 option is not selected in the Status Options parameter (→  261).

FaultState Val 8

Navigation	 Expert → Analog outputs → Multiple AO → FaultState Val 8 (11362)
Description	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 8 is present.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i>  This value is ignored if the Fstate to val 8 option is not selected in the Status Options parameter (→  261).

FaultStateStatus


Navigation	 Expert → Analog outputs → Multiple AO → FaultStateStatus (11353)
Description	Displays the values for which the fault state is enabled.
User interface	<ul style="list-style-type: none">▪ Val 1 in FState▪ Val 2 in FState▪ Val 3 in FState▪ Val 4 in FState▪ Val 5 in FState▪ Val 6 in FState▪ Val 7 in FState▪ Val 8 in FState

3.10 "Discrete outputs" submenu

The Discrete outputs function block (DO, discrete output) processes a discrete set point received from an upstream function block or a higher-level process control system that enables various device functions (e.g. zero point adjustment or reset of the totalizer) to be triggered in the downstream transducer block.

Navigation


Expert → Discrete outputs

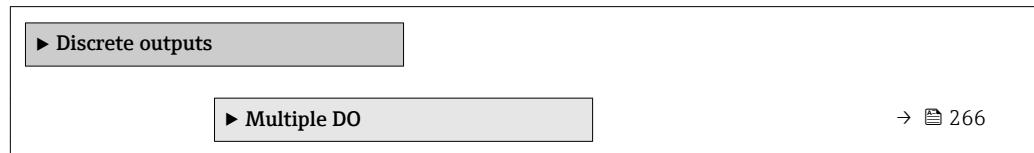

3.10.1 "Multiple DO" submenu

Navigation

Expert → Discrete outputs → Multiple DO

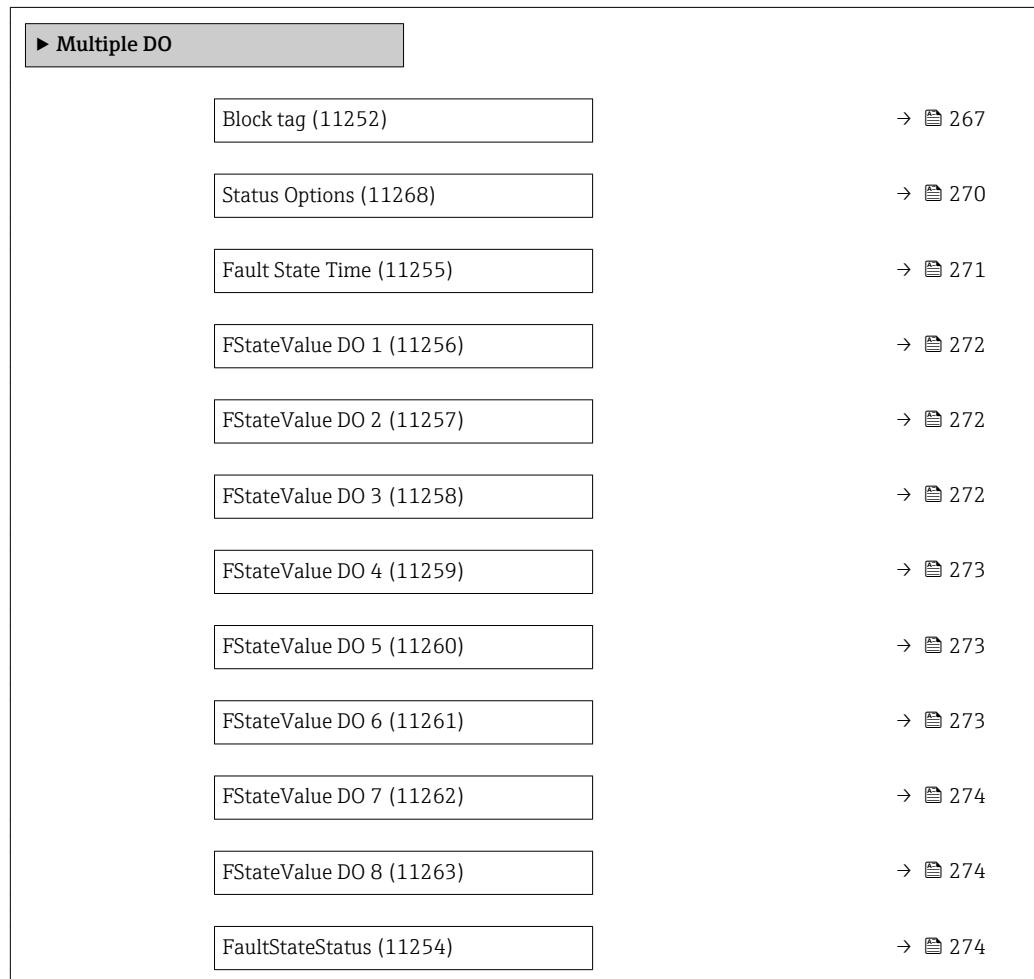

Block tag

Navigation	 Expert → Discrete outputs → Multiple DO → Block tag (11252)
Description	Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.
User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static Revision

Navigation	 Expert → Discrete outputs → Multiple DO → Static Revision (11270)
Description	Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).
User interface	0 to FFFF
Additional information	<i>Description</i>  Static parameters are parameters that are not changed by the process.

Tag Description

Navigation	 Expert → Discrete outputs → Multiple DO → Tag Description (11271)
Description	Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.
User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Strategy

Navigation	 Expert → Discrete outputs → Multiple DO → Strategy (11269)
Description	Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.
User entry	0 to FFFF
Factory setting	0

Alert Key

Navigation  Expert → Discrete outputs → Multiple DO → Alert Key (11251)

Description Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.

User entry 0 to 0xFF

Factory setting 1

Target mode

Navigation  Expert → Discrete outputs → Multiple DO → Target mode (11267)

Description Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Factory setting OOS

Additional information *Options*

 Detailed description of the options available for selection: **Target mode** parameter
(→  151)

Actual mode

Navigation  Expert → Discrete outputs → Multiple DO → Actual mode (11264)

Description Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode that the function block is currently operating in. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→  268).

User interface

- ROut
- RCas
- Cas
- Auto
- Man

- LO
- IMan
- OOS

Additional information*User interface*

Detailed description of the options available for selection: **Target mode** parameter
(→ 151)

Permitted mode**Navigation**

Expert → Discrete outputs → Multiple DO → Permitted mode (11266)

Description

Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→ 268) for the function block. The operating modes that are supported vary depending on the type and function of the block.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Factory setting

- Auto
- OOS

Additional information*Options*

Detailed description of the options available for selection: **Target mode** parameter
(→ 151)

Normal mode**Navigation**

Expert → Discrete outputs → Multiple DO → Normal mode (11265)

Description

Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

Selection

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

Factory setting

Auto

Additional information*Options*

Detailed description of the options available for selection: **Target mode** parameter
(→ 151)

Block Error**Navigation**

Expert → Discrete outputs → Multiple DO → Block Error (11272)

Description

Displays the short text for the Block Error that has occurred in the function block.

User interface

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

Channel**Navigation**

Expert → Discrete outputs → Multiple DO → Channel (11253)

Description

Option for the assignment or connection between the discrete output function block and the transducer block.

Selection

- Uninitialized
- Channel_D0

Factory setting

Channel_D0

Status Options**Navigation**

Expert → Discrete outputs → Multiple DO → Status Options (11268)

Description

Option for determining the fault state of the function block.

Selection	<ul style="list-style-type: none"> ■ Fstate to val 1 ■ Fstate to val 2 ■ Fstate to val 3 ■ Fstate to val 4 ■ Fstate to val 5 ■ Fstate to val 6 ■ Fstate to val 7 ■ Fstate to val 8 ■ Fstate restart 1 ■ Fstate restart 2 ■ Fstate restart 3 ■ Fstate restart 4 ■ Fstate restart 5 ■ Fstate restart 6 ■ Fstate restart 7 ■ Fstate restart 8
Additional information	<p><i>Description</i></p> <p>This behavior is enabled if an error condition of the valid set point persists for longer than the time specified in Fault State Time parameter (→ 271) or if Set Fault State parameter (→ 161) is enabled in Resource block.</p> <p>The fault state is defined via the following parameters:</p> <ul style="list-style-type: none"> ■ Fault State Time (→ 271) ■ FStateValue DO 1 to n <p><i>Options</i></p> <ul style="list-style-type: none"> ■ Fstate to val 1...8 The value predefined in FStateValue DO 1 to n parameter is used in place of the discrete set point. The fault state is enabled if there is an error condition. ■ Fstate restart 1...8 The value predefined in FStateValue DO 1 to n parameter is used if the device is restarted. The non-volatile value is used otherwise. The fault state is not enabled and only the predefined value is used.
Fault State Time	

Navigation	 Expert → Discrete outputs → Multiple DO → Fault State Time (11255)
Description	Use this function to enter a time range during which an error condition (of the currently valid set point) must be met without interruption before an error message is generated.
User entry	Positive floating-point number
Factory setting	0 s

FStateValue DO 1

Navigation   Expert → Discrete outputs → Multiple DO → FStateValue DO 1 (11256)

Description Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 1 is present.

User entry 0 to 255

Factory setting 0

Additional information *Description*

 If **Fstate to val 1** option is not selected in **Status Options** parameter (→  270), this value is ignored.

FStateValue DO 2

Navigation   Expert → Discrete outputs → Multiple DO → FStateValue DO 2 (11257)

Description Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 2 is present.

User entry 0 to 255

Factory setting 0

Additional information *Description*

 If **Fstate to val 2** option is not selected in **Status Options** parameter (→  270), this value is ignored.

FStateValue DO 3

Navigation   Expert → Discrete outputs → Multiple DO → FStateValue DO 3 (11258)

Description Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 3 is present.

User entry 0 to 255

Factory setting 0

Additional information *Description*

 If **Fstate to val 3** option is not selected in **Status Options** parameter (→  270), this value is ignored.

FStateValue DO 4

Navigation	 Expert → Discrete outputs → Multiple DO → FStateValue DO 4 (11259)
Description	Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 4 is present.
User entry	0 to 255
Factory setting	0
Additional information	<i>Description</i>  If Fstate to val 4 option is not selected in Status Options parameter (→ 270), this value is ignored.

FStateValue DO 5

Navigation	 Expert → Discrete outputs → Multiple DO → FStateValue DO 5 (11260)
Description	Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 5 is present.
User entry	0 to 255
Factory setting	0
Additional information	<i>Description</i>  If Fstate to val 5 option is not selected in Status Options parameter (→ 270), this value is ignored.

FStateValue DO 6

Navigation	 Expert → Discrete outputs → Multiple DO → FStateValue DO 6 (11261)
Description	Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 6 is present.
User entry	0 to 255
Factory setting	0
Additional information	<i>Description</i>  If Fstate to val 6 option is not selected in Status Options parameter (→ 270), this value is ignored.

FStateValue DO 7

Navigation  Expert → Discrete outputs → Multiple DO → FStateValue DO 7 (11262)

Description Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 7 is present.

User entry 0 to 255

Factory setting 0

Additional information *Description*

 If **Fstate to val 7** option is not selected in **Status Options** parameter (→  270), this value is ignored.

FStateValue DO 8

Navigation  Expert → Discrete outputs → Multiple DO → FStateValue DO 8 (11263)

Description Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 8 is present.

User entry 0 to 255

Factory setting 0

Additional information *Description*

 If **Fstate to val 8** option is not selected in **Status Options** parameter (→  270), this value is ignored.

FaultStateStatus

Navigation  Expert → Discrete outputs → Multiple DO → FaultStateStatus (11254)

Description Displays the values for which the fault state is enabled.


User interface

- Val 1 in FState
- Val 2 in FState
- Val 3 in FState
- Val 4 in FState
- Val 5 in FState
- Val 6 in FState
- Val 7 in FState
- Val 8 in FState

3.11 "Application" submenu

Navigation

Expert → Application

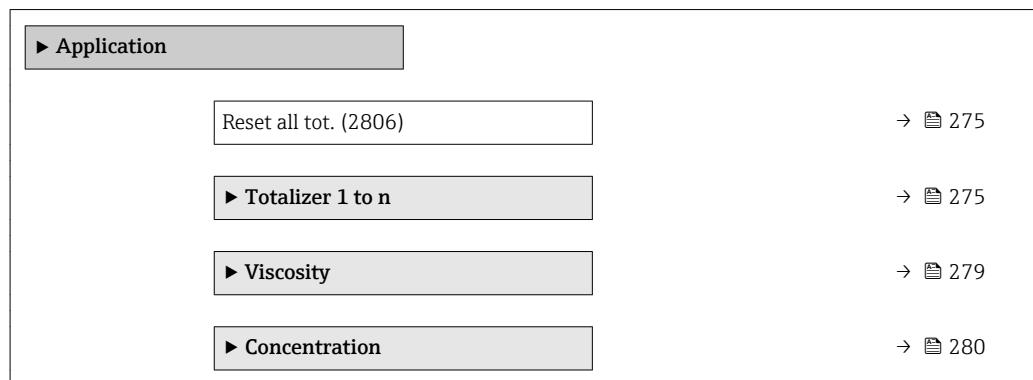

Reset all tot.

Navigation

Expert → Application → Reset all tot. (2806)

Description

Use this function to reset all totalizers to the value **0** and restart the totaling process. This deletes all the flow values previously totalized.

Selection

- Cancel
- Reset + totalize

Factory setting

Cancel

Additional information


Selection

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

3.11.1 "Totalizer 1 to n" submenu

Navigation

Expert → Application → Totalizer 1 to n

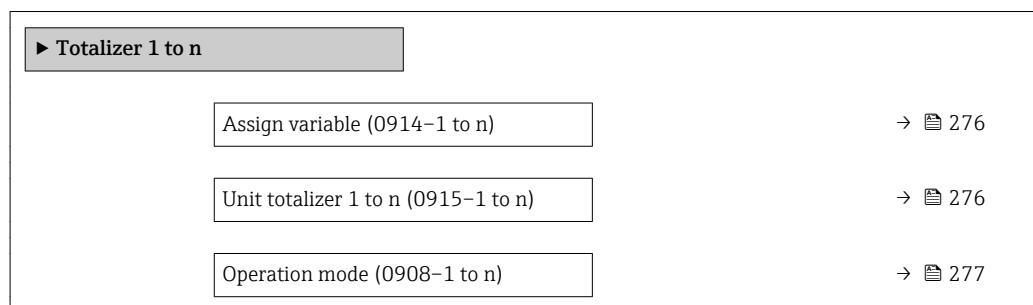

Control Tot. 1 to n (0912–1 to n)	→ 278
Preset value 1 to n (0913–1 to n)	→ 278
Failure mode (0901–1 to n)	→ 279

Assign variable**Navigation**

Expert → Application → Totalizer 1 to n → Assign variable (0914–1 to n)

Description

Use this function to select a process variable for the Totalizer 1 to n.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Target mass flow ^{*}
- Carrier mass fl. ^{*}

Factory setting

Mass flow

Additional information*Description*

If the option selected is changed, the device resets the totalizer to 0.

Selection

If the **Off** option is selected, only **Assign variable** parameter (→ 276) is still displayed in the **Totalizer 1 to n** submenu. All other parameters in the submenu are hidden.

Unit totalizer 1 to n**Navigation**

Expert → Application → Totalizer 1 to n → Unit totalizer 1 to n (0915–1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 276) of the **Totalizer 1 to n** submenu.

Description

Use this function to select the process variable unit for the Totalizer 1 to n (→ 275).

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

or

* Visibility depends on order options or device settings

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ cm ³	■ af	■ gal (imp)
■ dm ³	■ ft ³	■ Mgal (imp)
■ m ³	■ fl oz (us)	■ bbl (imp;beer)
■ ml	■ gal (us)	■ bbl (imp;oil)
■ l	■ kgal (us)	
■ hl	■ Mgal (us)	
■ Ml Mega	■ bbl (us;liq.)	
	■ bbl (us;beer)	
	■ bbl (us;oil)	
	■ bbl (us;tank)	

or

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ Nl	■ Sft ³	Sgal (imp)
■ Nm ³	■ Sgal (us)	
■ Sl	■ Sbbl (us;liq.)	
■ Sm ³		

Factory setting

Country-specific:

- kg
- lb

Additional information*Description*

 The unit is selected separately for each totalizer. It is independent of the selection made in the **System units** submenu (→ 66).

Selection

The selection is dependent on the process variable selected in the **Assign variable** parameter (→ 276).

Operation mode**Navigation**

 Expert → Application → Totalizer 1 to n → Operation mode (0908-1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 276) of the **Totalizer 1 to n** submenu.

Description

Use this function to select how the totalizer summates the flow.

Selection

- Net flow total
- Forward total
- Reverse total

Factory setting

Net flow total

Additional information*Selection*

- Net flow total
Flow values in the forward and reverse flow direction are totalized and balanced against one another. Net flow is registered in the flow direction.
- Forward total
Only the flow in the forward flow direction is totalized.
- Reverse total
Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

Control Tot. 1 to n**Navigation**

 Expert → Application → Totalizer 1 to n → Control Tot. 1 to n (0912–1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 276) of the **Totalizer 1 to n** submenu.

Description

Use this function to select the control of totalizer value 1-3.

Selection

- Totalize
- Reset + hold
- Preset + hold
- Reset + totalize
- Preset+totalize
- Hold

Factory setting

Totalize

Additional information*Selection*

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset+totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

Preset value 1 to n**Navigation**

 Expert → Application → Totalizer 1 to n → Preset value 1 to n (0913–1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 276) of the **Totalizer 1 to n** submenu.

Description

Use this function to enter a start value for the Totalizer 1 to n.

User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 kg ■ 0 lb
Additional information	<p><i>User entry</i></p> <p> The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 276).</p> <p><i>Example</i></p> <p>This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.</p>

Failure mode

Navigation	 Expert → Application → Totalizer 1 to n → Failure mode (0901-1 to n)
Prerequisite	A process variable is selected in the Assign variable parameter (→ 276) of the Totalizer 1 to n submenu.
Description	Use this function to select how a totalizer behaves in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value
Factory setting	Stop
Additional information	<p><i>Description</i></p> <p> This setting does not affect the failsafe mode of other totalizers and the outputs. This is specified in separate parameters.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Stop The totalizer is stopped in the event of a device alarm. ■ Actual value The totalizer continues to count based on the actual measured value; the device alarm is ignored. ■ Last valid value The totalizer continues to count based on the last valid measured value before the device alarm occurred.

3.11.2 "Viscosity" submenu

 Only available for Promass I.

 For detailed information on the parameter descriptions for the **Viscosity** application package, refer to the Special Documentation for the device → 7

Navigation Expert → Application → Viscosity Viscosity

3.11.3 "Concentration" submenu

 For detailed information on the parameter descriptions for the **Concentration** application package, refer to the Special Documentation for the device →  7*Navigation* Expert → Application → Concentration Concentration

3.12 "Diagnostics" submenu

Navigation Expert → Diagnostics Diagnostics

Actual diagnos. (0691)	→  281
Prev.diagnostics (0690)	→  282
Time fr. restart (0653)	→  282
Operating time (0652)	→  283
 Diagnostic list	→  283
 Event logbook	→  287
 Device info	→  289
 Mainboard module	
 Sens. electronic	→  295
 I/O module 1	→  296
 I/O module 2	→  297
 I/O module 3	→  296
 I/O module 4	→  296
 Display module	→  298
 Min/max val.	→  299

▶ Data logging	→ 309
▶ Heartbeat	→ 318
▶ Simulation	→ 318

Actual diagnos.

Navigation

Expert → Diagnostics → Actual diagnos. (0691)

Prerequisite

A diagnostic event has occurred.

Description

Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

- Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu (→ 283).
- Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

Example

For the display format:
☒F271 Main electronics

Timestamp

Navigation

Expert → Diagnostics → Timestamp

Description

Displays the operating time when the current diagnostic message occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

- The diagnostic message can be viewed via the **Actual diagnos.** parameter (→ 281).

Example

For the display format:
24d12h13m00s

Prev.diagnostics

Navigation	  Expert → Diagnostics → Prev.diagnostics (0690)
Prerequisite	Two diagnostic events have already occurred.
Description	Displays the diagnostic message that occurred before the current message.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key. <i>Example</i> For the display format:  F271 Main electronics

Timestamp

Navigation	 Expert → Diagnostics → Timestamp
Description	Displays the operating time when the last diagnostic message before the current message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Prev.diagnostics parameter (→  282). <i>Example</i> For the display format: 24d12h13m00s

Time fr. restart

Navigation	  Expert → Diagnostics → Time fr. restart (0653)
Description	Use this function to display the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Operating time

Navigation

Expert → Diagnostics → Operating time (0652)

Description

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information


User interface

The maximum number of days is 9999, which is equivalent to 27 years.

3.12.1 "Diagnostic list" submenu

Navigation

Expert → Diagnostics → Diagnostic list

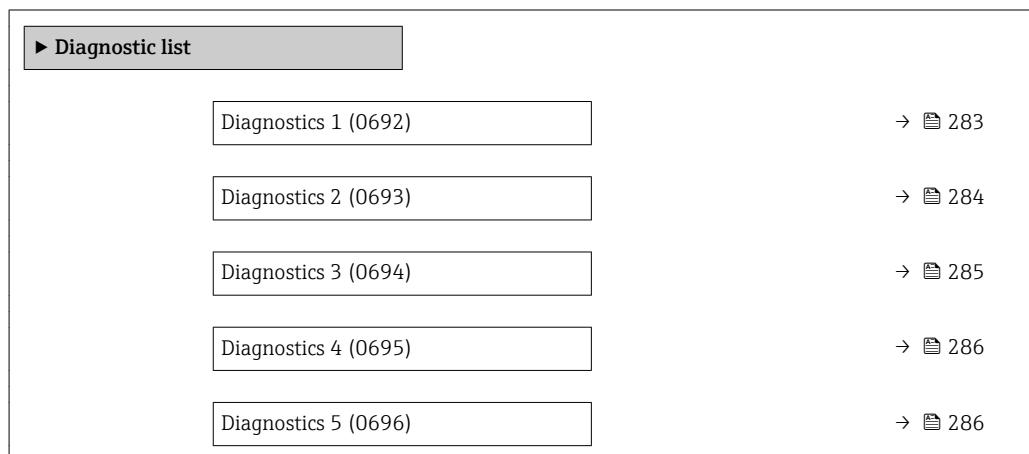

Diagnostics 1

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 1 (0692)

Description

Displays the current diagnostics message with the highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information

Display

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

Examples

For the display format:

- F271 Main electronics
- F276 I/O module

Timestamp

Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 1 parameter (→  283). <i>Example</i> For the display format: 24d12h13m00s

Diagnostics 2

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 2 (0693)
Description	Displays the current diagnostics message with the second-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key. <i>Examples</i> For the display format: <ul style="list-style-type: none">▪  F271 Main electronics▪  F276 I/O module

Timestamp

Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the second-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 2** parameter (→ 284).

Example

For the display format:

24d12h13m00s

Diagnostics 3

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 3 (0694)

Description

Displays the current diagnostics message with the third-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

Examples

For the display format:

- F271 Main electronics
- F276 I/O module

Timestamp

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the third-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 3** parameter (→ 285).

Example

For the display format:

24d12h13m00s

Diagnostics 4

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 4 (0695)
Description	Displays the current diagnostics message with the fourth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Examples</i> For the display format: <ul style="list-style-type: none">▪  F271 Main electronics▪  F276 I/O module

Timestamp

Navigation	  Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the fourth-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 4 parameter (→  286).
	<i>Example</i> For the display format: 24d12h13m00s

Diagnostics 5

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 5 (0696)
Description	Displays the current diagnostics message with the fifth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

Examples

For the display format:

-  F271 Main electronics
-  F276 I/O module

Timestamp**Navigation**

 Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the fifth-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

 The diagnostic message can be viewed via the **Diagnostics 5** parameter (→  286).


Example

For the display format:

24d12h13m00s

3.12.2 "Event logbook" submenu**Navigation**

 Expert → Diagnostics → Event logbook

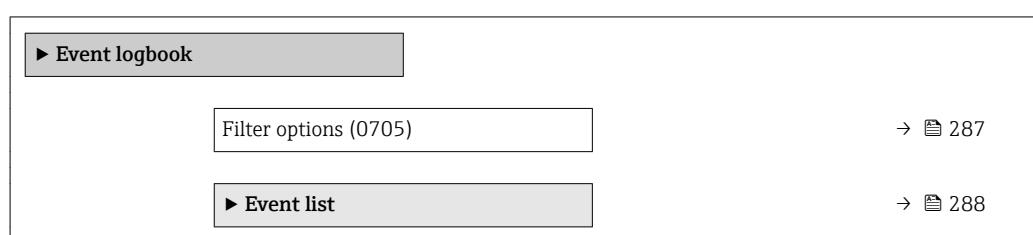**Filter options****Navigation**

 Expert → Diagnostics → Event logbook → Filter options (0705)

Description

Use this function to select the category whose event messages are displayed in the event list of the local display.

Selection	<ul style="list-style-type: none"> ■ All ■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ Information (I)
Factory setting	All
Additional information	<p><i>Description</i></p> <p>i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:</p> <ul style="list-style-type: none"> ■ F = Failure ■ C = Function Check ■ S = Out of Specification ■ M = Maintenance Required

Filter options		
Navigation	 Expert → Diagnostics → Event logbook → Filter options	
Description	Use this function to select the category whose event messages are displayed in the event list of the operating tool.	
Selection	<ul style="list-style-type: none"> ■ All ■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ Information (I) 	
Factory setting	All	
Additional information	<p><i>Description</i></p> <p>i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:</p> <ul style="list-style-type: none"> ■ F = Failure ■ C = Function Check ■ S = Out of Specification ■ M = Maintenance Required 	

"Event list" submenu

- i** The **Event list** submenu is only displayed if operating via the local display.
 If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.
 If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

Navigation
 Expert → Diagnostics → Event logbook → Event list

 Event list

Event list

→  289**Event list****Navigation**
 Expert → Diagnostics → Event logbook → Event list
Description

Displays the history of event messages of the category selected in the **Filter options** parameter (→  287).

User interface

- For a "Category I" event message

Information event, short message, symbol for event recording and operating time when error occurred

- For a "Category F, C, S, M" event message (status signal)

Diagnostics code, short message, symbol for event recording and operating time when error occurred

Additional information*Description*

A maximum of 20 event messages are displayed in chronological order.

If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The following symbols indicate whether an event has occurred or has ended:

- : Occurrence of the event
- : End of the event

Examples

For the display format:

- I1091 Configuration modified
 24d12h13m00s
-  F271 Main electronics
 01d04h12min30s

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.12.3 "Device information" submenu*Navigation*
 Expert → Diagnostics → Device info

 Device info

Device tag (10799)

→  290

Serial number (10798)	→ 291
Device name (0020)	→ 291
Device revision (10710)	→ 291
Device type (10711)	→ 291
DD Revision (10709)	→ 292
Firmware version (10792)	→ 292
Hardware rev. (10793)	→ 292
ITK Version (10794)	→ 292
Order code (10795)	→ 293
Ext. order cd. 1 (10796)	→ 293
Ext. order cd. 2 (10797)	→ 293
ENP version (10791)	→ 294


Device tag

Navigation

Expert → Diagnostics → Device info → Device tag (10799)

Description

Use this function to enter a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header:

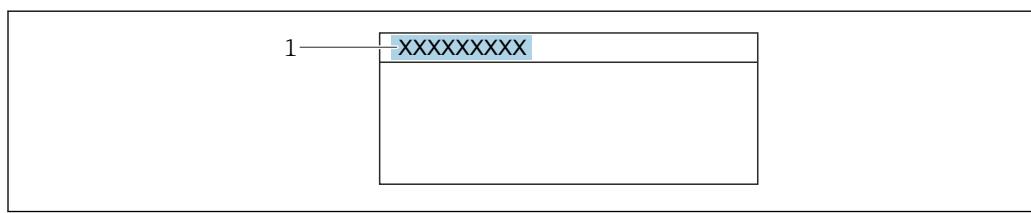

A0029422

User entry

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Promass300/500

Additional information

User entry

The number of characters displayed depends on the characters used.

Serial number

Navigation Expert → Diagnostics → Device info → Serial number (10798)**Description**

Displays the serial number of the measuring device. It can also be found on the nameplate of the sensor and transmitter.

 **Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

User interface

Max. 11-digit character string comprising letters and numbers.

Additional information

Factory setting

 This information varies depending on the device. Only an example is given here.

Device name

Navigation Expert → Diagnostics → Device info → Device name (0020)**Description**

Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface

Promass 300/500

Device type

Navigation Expert → Diagnostics → Device info → Device type (10711)**Description**

Use this function to view the device type with which the measuring device is registered with FOUNDATION Fieldbus.

User interface

Promass 300/500

Device revision

Navigation Expert → Diagnostics → Device info → Device revision (10710)**Description**

Use this function to view the device revision with which the measuring device is registered with FOUNDATION Fieldbus.

User interface

0 to 255

Factory setting

1

DD Revision

Navigation  Expert → Diagnostics → Device info → DD Revision (10709)

Description Displays the revision number of the device description (DD).

User interface 1

Additional information *Description*



This display can be used to ensure that the right system files (DD = device description) are used for integration into the host system. The system files can be downloaded free of charge online at: www.endress.com.

Firmware version

Navigation  Expert → Diagnostics → Device info → Firmware version (10792)

Description Displays the device firmware version installed.

User interface Character string with the following format:
xx.yy.zz

Hardware rev.

Navigation  Expert → Diagnostics → Device info → Hardware rev. (10793)

Description Displays the Hardware rev..

User interface Character string in the format xx.yy.zz

ITK Version

Navigation  Expert → Diagnostics → Device info → ITK Version (10794)

Description Displays the revision status of the Interoperability Test Kits (ITK).

User interface 6

Order code

Navigation Expert → Diagnostics → Device info → Order code (10795)**Description**

Use this function to enter the device order code.

 The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

User entry

Character string composed of letters, numbers and certain punctuation marks

Additional information*Description*

The order code is generated from the extended order code, which defines all the device features of the product structure. In contrast, the device features cannot be read directly from the order code.

 **Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Ext. order cd. 1

Navigation Expert → Diagnostics → Device info → Ext. order cd. 1 (10796)**Description**

Use this function to enter the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 2 parameters.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User entry

Character string

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Ext. order cd. 2

Navigation Expert → Diagnostics → Device info → Ext. order cd. 2 (10797)**Description**

Use this function to enter the second part of the extended order code.

 Deletion of the ordered customer-specific parameter set that was preconfigured before delivery. This parameter set cannot be reset. It can only be restored to the factory setting.

User entry

Character string

Additional information For additional information, see **Ext. order cd. 1** parameter


ENP version

Navigation   Expert → Diagnostics → Device info → ENP version (10791)

Description Displays the version of the electronic nameplate. This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

User interface Character string in the format xx.yy.zz

3.12.4 "Mainboard module" submenu

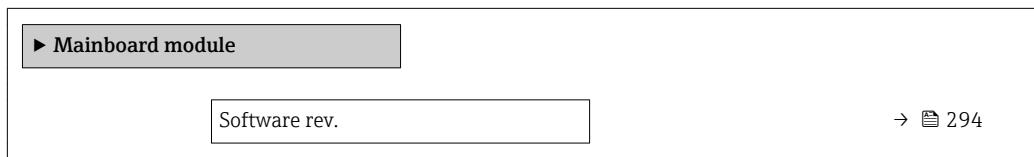

Software rev.

Navigation   Expert → Diagnostics → Mainboard module → Software rev. (0072)

  Expert → Diagnostics → Display module → Software rev. (0072)

  Expert → Diagnostics → Sens. electronic → Software rev. (0072)

 Expert → Diagnostics → I/O module 1 → Software rev. (0072)

 Expert → Diagnostics → I/O module 2 → Software rev. (0072)

 Expert → Diagnostics → I/O module 3 → Software rev. (0072)

 Expert → Diagnostics → I/O module 4 → Software rev. (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. softw.


Navigation	█ █ Expert → Diagnostics → Mainboard module → Build no. softw. (0079)
	█ █ Expert → Diagnostics → Display module → Build no. softw. (0079)
	█ █ Expert → Diagnostics → Sens. electronic → Build no. softw. (0079)
	█ Expert → Diagnostics → I/O module 1 → Build no. softw. (0079)
	█ Expert → Diagnostics → I/O module 2 → Build no. softw. (0079)
	█ Expert → Diagnostics → I/O module 3 → Build no. softw. (0079)
	█ Expert → Diagnostics → I/O module 4 → Build no. softw. (0079)
Description	Displays the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	█ █ Expert → Diagnostics → Mainboard module → Bootloader rev. (0073)
	█ █ Expert → Diagnostics → Display module → Bootloader rev. (0073)
	█ █ Expert → Diagnostics → Sens. electronic → Bootloader rev. (0073)
	█ Expert → Diagnostics → I/O module 1 → Bootloader rev. (0073)
	█ Expert → Diagnostics → I/O module 2 → Bootloader rev. (0073)
	█ Expert → Diagnostics → I/O module 3 → Bootloader rev. (0073)
	█ Expert → Diagnostics → I/O module 4 → Bootloader rev. (0073)
Description	Displays the bootloader revision of the software.
User interface	Positive integer

3.12.5 "Sens. electronic" submenu*Navigation*

█ █ Expert → Diagnostics → Sens. electronic

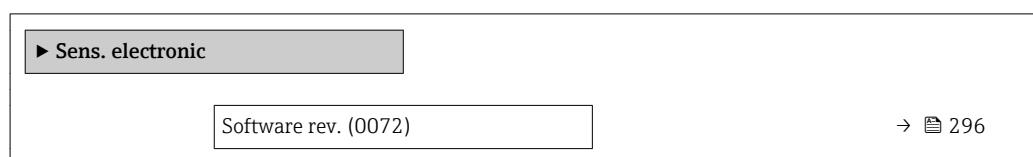

Software rev.

Navigation   Expert → Diagnostics → Sens. electronic → Software rev. (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. softw.

Navigation   Expert → Diagnostics → Sens. electronic → Build no. softw. (0079)

Description Displays the software build number of the module.

User interface Positive integer

Bootloader rev.


Navigation   Expert → Diagnostics → Sens. electronic → Bootloader rev. (0073)

Description Displays the bootloader revision of the software.

User interface Positive integer

3.12.6 "I/O module 1" submenu

Navigation   Expert → Diagnostics → I/O module 1

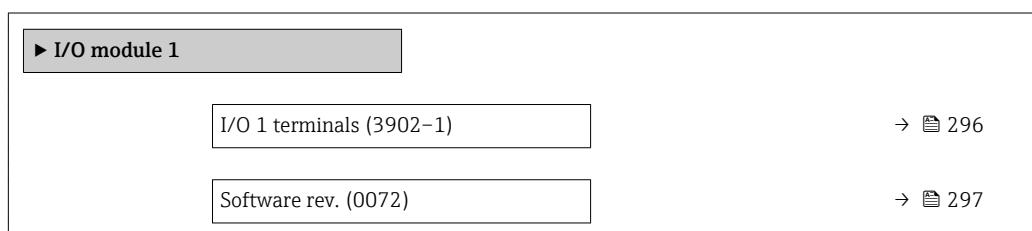

I/O 1 terminals

Navigation   Expert → Diagnostics → I/O module 1 → I/O 1 terminals (3902-1)

Description Displays the terminal numbers used by the I/O module.

User interface	<ul style="list-style-type: none">■ Not used■ 26-27 (I/O 1)■ 24-25 (I/O 2)
-----------------------	--

Software rev.


Navigation  Expert → Diagnostics → I/O module 1 → Software rev. (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

3.12.7 "I/O module 2" submenu

Navigation   Expert → Diagnostics → I/O module 2

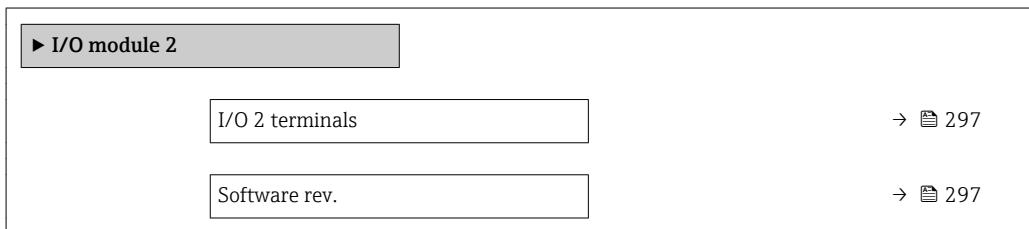

I/O 1 terminals

Navigation   Expert → Diagnostics → I/O module 1 → I/O 1 terminals (3902-1)

Description Displays the terminal numbers used by the I/O module.

User interface

<ul style="list-style-type: none">■ Not used■ 26-27 (I/O 1)■ 24-25 (I/O 2)
--

Software rev.

Navigation  Expert → Diagnostics → I/O module 2 → Software rev. (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. softw.

Navigation  Expert → Diagnostics → I/O module 2 → Build no. softw. (0079)

Description Displays the software build number of the module.

User interface Positive integer

Bootloader rev.


Navigation  Expert → Diagnostics → I/O module 2 → Bootloader rev. (0073)

Description Displays the bootloader revision of the software.

User interface Positive integer

3.12.8 "Display module" submenu

Navigation   Expert → Diagnostics → Display module

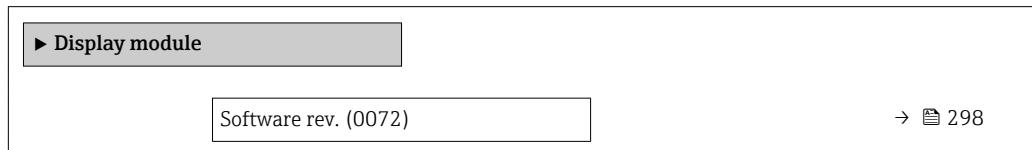

Software rev.

Navigation   Expert → Diagnostics → Display module → Software rev. (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. softw.

Navigation   Expert → Diagnostics → Display module → Build no. softw. (0079)

Description Displays the software build number of the module.

User interface Positive integer

Bootloader rev.

Navigation   Expert → Diagnostics → Display module → Bootloader rev. (0073)

Description Displays the bootloader revision of the software.

User interface Positive integer

3.12.9 "Min/max val." submenu

Navigation   Expert → Diagnostics → Min/max val.

 Min/max val.	
Reset min/max (6151)	→  299
 Electronic temp.	→  300
 Medium temp.	→  301
 Carr. pipe temp.	→  302
 Oscil. frequency	→  303
 Tors.oscil.freq.	→  304
 Oscil. amplitude	→  305
 Tor. osc. amp.	→  305
 Oscil. damping	→  306
 Tors.oscil.damp.	→  307
 Signal asymmetry	→  308
 Tors.sig.asymm.	→  308

Reset min/max

Navigation   Expert → Diagnostics → Min/max val. → Reset min/max (6151)


Description Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

Selection

- Cancel
- Oscil. amplitude*
- Osc. ampl. 1*
- Oscil. damping
- Tors.oscil.damp.*
- Oscil. frequency*
- Tors.oscil.freq.
- Signal asymmetry*
- Tors.sig.asymm.

Factory setting

Cancel

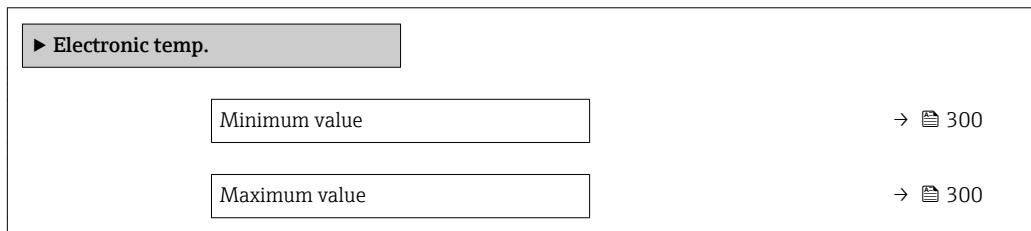"Electronic temp." submenu**Navigation**
 Expert → Diagnostics → Min/max val. → Electronic temp.


Maximum value

Navigation
 Expert → Diagnostics → Min/max val. → Electronic temp. → Maximum value (6051)
Description

Displays the highest previously measured temperature value of the main electronics module.

User interface

Signed floating-point number

Additional information*Dependency*

 The unit is taken from the **Temperature unit** parameter (→ [72](#))

Minimum value

Navigation
 Expert → Diagnostics → Min/max val. → Electronic temp. → Minimum value (6052)
Description

Displays the lowest previously measured temperature value of the main electronics module.

* Visibility depends on order options or device settings

User interface Signed floating-point number


Additional information *Dependency*

 The unit is taken from the **Temperature unit** parameter (→ 72)

"Medium temp." submenu

Navigation

Expert → Diagnostics → Min/max val. → Medium temp.

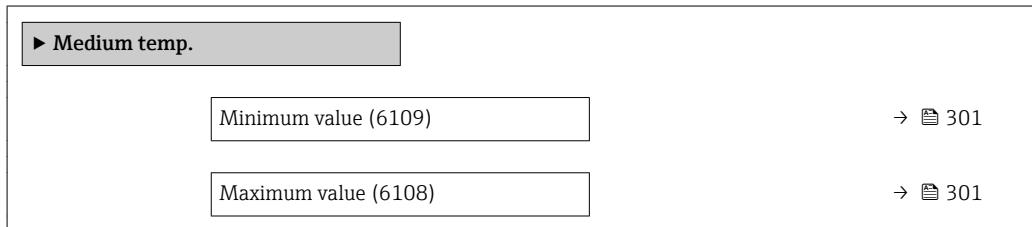

Minimum value

Navigation Expert → Diagnostics → Min/max val. → Medium temp. → Minimum value (6109)

Description Displays the lowest previously measured medium temperature value.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Temperature unit** parameter (→ 72)

Maximum value


Navigation Expert → Diagnostics → Min/max val. → Medium temp. → Maximum value (6108)

Description Displays the highest previously measured medium temperature value.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Temperature unit** parameter (→ 72)

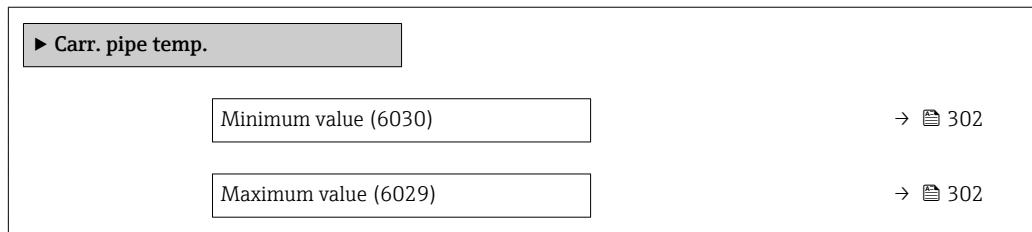"Carr. pipe temp." submenu**Navigation** Expert → Diagnostics → Min/max val. → Carr. pipe temp.

Minimum value

Navigation Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Minimum value (6030)**Prerequisite** Only available for:

- Promass A
- Promass F
- Promass H
- Promass I
- Promass O
- Promass P
- Promass Q
- Promass S
- Promass X

For the following order code
"Application package", option **EB** "Heartbeat Verification + Monitoring"

Description

Displays the lowest previously measured temperature value of the carrier pipe.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Temperature unit** parameter (→ [302](#))

Maximum value

Navigation Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Maximum value (6029)**Prerequisite** Only available for:

- Promass A
- Promass F
- Promass H
- Promass I
- Promass O
- Promass P
- Promass Q
- Promass S
- Promass X

For the following order code
"Application package", option **EB** "Heartbeat Verification + Monitoring"

Description Displays the highest previously measured temperature value of the carrier pipe.

User interface Signed floating-point number


Additional information *Dependency*

 The unit is taken from the **Temperature unit** parameter (→ 72)

"Oscil. frequency" submenu

Navigation

Expert → Diagnostics → Min/max val. → Oscil. frequency

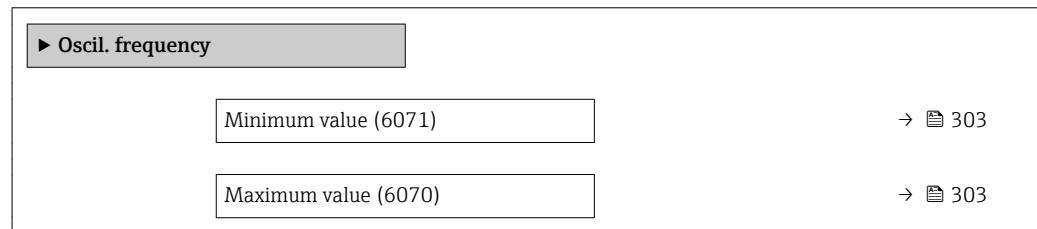

Minimum value

Navigation Expert → Diagnostics → Min/max val. → Oscil. frequency → Minimum value (6071)

Description Displays the lowest previously measured oscillation frequency.


User interface Signed floating-point number

Maximum value

Navigation Expert → Diagnostics → Min/max val. → Oscil. frequency → Maximum value (6070)

Description Displays the highest previously measured oscillation frequency.

User interface Signed floating-point number

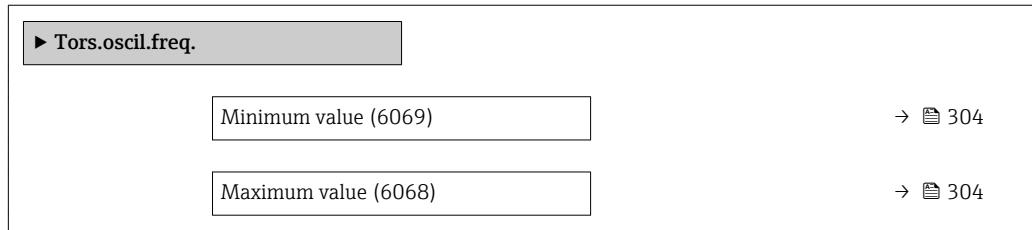"Tors.oscil.freq." submenu**Navigation** Expert → Diagnostics → Min/max val. → Tors.oscil.freq.

Minimum value**Navigation** Expert → Diagnostics → Min/max val. → Tors.oscil.freq. → Minimum value (6069)**Prerequisite** Only available for Promass I.

For the following order code:
"Application package", option **EB** "Heartbeat Verification + Monitoring"

Description

Displays the lowest previously measured torsion oscillation frequency.

User interface

Signed floating-point number

Maximum value**Navigation** Expert → Diagnostics → Min/max val. → Tors.oscil.freq. → Maximum value (6068)**Prerequisite** Only available for Promass I.

For the following order code:
"Application package", option **EB** "Heartbeat Verification + Monitoring"

Description


Displays the highest previously measured torsion oscillation frequency.

User interface

Signed floating-point number

"Oscil. amplitude" submenu**Navigation**

Expert → Diagnostics → Min/max val. → Oscil. amplitude

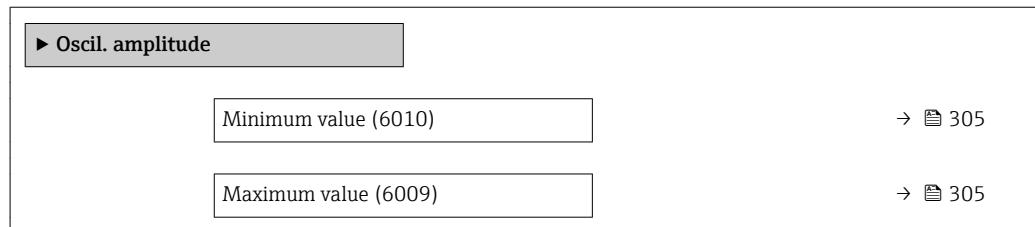

Minimum value

Navigation

Expert → Diagnostics → Min/max val. → Oscil. amplitude → Minimum value (6010)

Description

Displays the lowest previously measured oscillation amplitude.

User interface

Signed floating-point number

Maximum value

Navigation

Expert → Diagnostics → Min/max val. → Oscil. amplitude → Maximum value (6009)

Description


Displays the highest previously measured oscillation amplitude.

User interface

Signed floating-point number

"Tor. osc. amp." submenu**Navigation**

Expert → Diagnostics → Min/max val. → Tor. osc. amp.

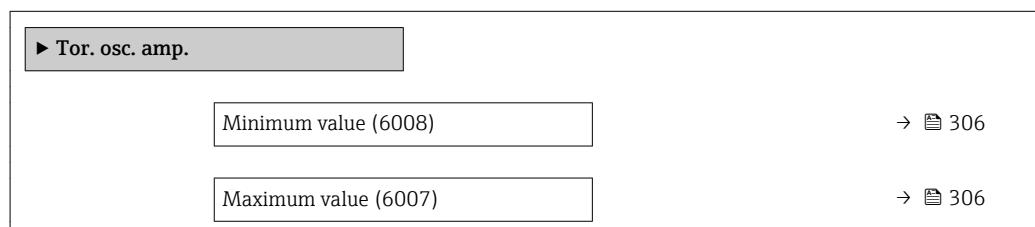

Minimum value


Navigation	  Expert → Diagnostics → Min/max val. → Tor. osc. amp. → Minimum value (6008)
Prerequisite	 Only available for Promass I. For the following order code: "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the lowest previously measured torsion oscillation amplitude.
User interface	Signed floating-point number

Maximum value

Navigation	  Expert → Diagnostics → Min/max val. → Tor. osc. amp. → Maximum value (6007)
Prerequisite	 Only available for Promass I. For the following order code: "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the highest previously measured torsion oscillation amplitude.
User interface	Signed floating-point number

"Oscil. damping" submenu

Navigation   Expert → Diagnostics → Min/max val. → Oscil. damping

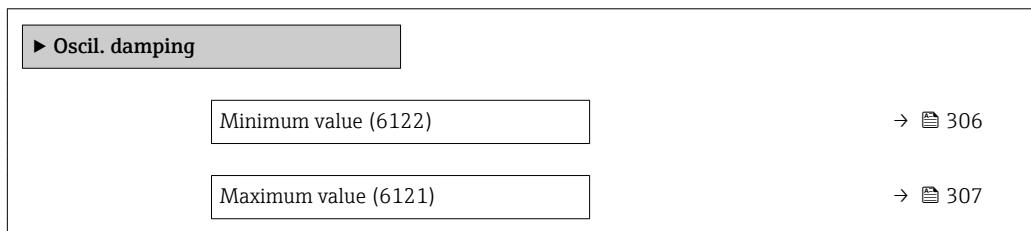

Minimum value


Navigation	  Expert → Diagnostics → Min/max val. → Oscil. damping → Minimum value (6122)
Description	Displays the lowest previously measured oscillation damping.
User interface	Signed floating-point number

Maximum value

Navigation	  Expert → Diagnostics → Min/max val. → Oscil. damping → Maximum value (6121)
Description	Displays the highest previously measured oscillation damping.
User interface	Signed floating-point number

"Tors.oscil.damp." submenu

Navigation   Expert → Diagnostics → Min/max val. → Tors.oscil.damp.

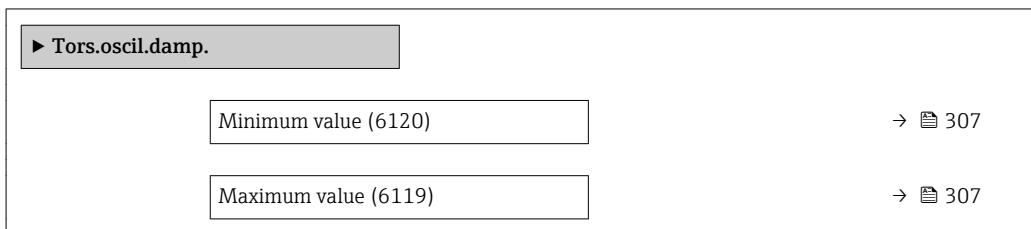

Minimum value


Navigation	  Expert → Diagnostics → Min/max val. → Tors.oscil.damp. → Minimum value (6120)
Prerequisite	 Only available for Promass I. For the following order code: "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the lowest previously measured torsion oscillation damping.
User interface	Signed floating-point number

Maximum value

Navigation	  Expert → Diagnostics → Min/max val. → Tors.oscil.damp. → Maximum value (6119)
Prerequisite	 Only available for Promass I. For the following order code: "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the highest previously measured torsion oscillation damping.

User interface

Signed floating-point number

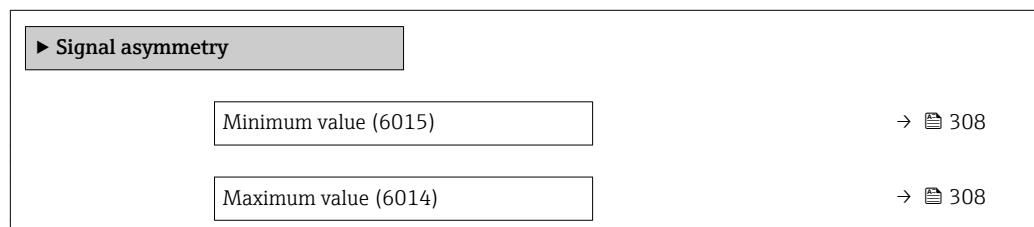"Signal asymmetry" submenu*Navigation* Expert → Diagnostics → Min/max val. → Signal asymmetry

Minimum value**Navigation** Expert → Diagnostics → Min/max val. → Signal asymmetry → Minimum value (6015)**Description**

Displays the lowest previously measured signal asymmetry.

User interface


Signed floating-point number

Maximum value**Navigation** Expert → Diagnostics → Min/max val. → Signal asymmetry → Maximum value (6014)**Description**

Displays the highest previously measured signal asymmetry.

User interface

Signed floating-point number

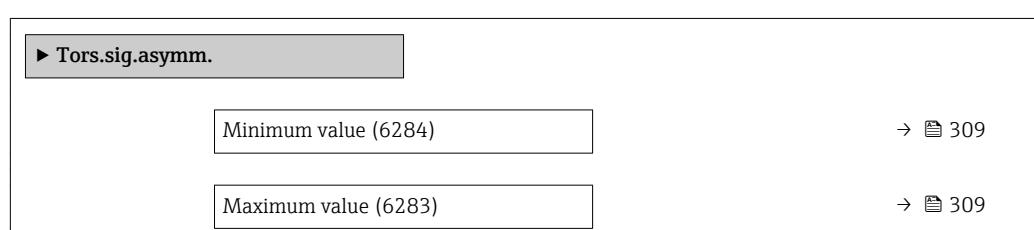"Torsion signal asymmetry" submenu*Navigation* Expert → Diagnostics → Min/max val. → Tors.sig.asymm.

Minimum value

Navigation	Expert → Diagnostics → Min/max val. → Tors.sig.asymm. → Minimum value (6284)
Prerequisite	 Only available for Promass I.
	For the following order code: "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the lowest previously measured torsion signal asymmetry.

Maximum value

Navigation	Expert → Diagnostics → Min/max val. → Tors.sig.asymm. → Maximum value (6283)
Prerequisite	 Only available for Promass I.
	For the following order code: "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the highest previously measured torsion signal asymmetry.

3.12.10 "Data logging" submenu*Navigation*

Expert → Diagnostics → Data logging

 Data logging	
Assign chan. 1	→  310
Assign chan. 2	→  311
Assign chan. 3	→  312
Assign chan. 4	→  312
Logging interval	→  312
Clear logging	→  313
Data logging	→  313

Logging delay	→ 314
Data log.control	→ 314
Data log. status	→ 315
Logging duration	→ 315
► Displ.channel 1	→ 315
► Displ.channel 2	→ 317
► Displ.channel 3	→ 317
► Displ.channel 4	→ 318

Assign chan. 1



Navigation

Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **SW option overv.** parameter (→ 49).

Description

Use this function to select a process variable for the data logging channel.

Selection

- Off
- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl.*
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Temperature
- Carr. pipe temp. *
- Electronic temp.
- Osc. freq. 0
- Osc. freq. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Oscil. amplitude *
- Osc. ampl. 1 *

* Visibility depends on order options or device settings

- Osc. damping 0 *
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *
- Curr.output 1
- Curr.output 2 *
- Curr.output 3 *
- HBSI

Factory setting Off

Additional information *Description*

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The log contents are cleared if the option selected is changed.

Selection

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: Assign freq. parameter (→  128)

Assign chan. 2



Navigation  Expert → Diagnostics → Data logging → Assign chan. 2 (0852)

Prerequisite The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  49).

Description Options for the assignment of a process variable to the data logging channel.

Selection Picklist, see **Assign channel 1** parameter (→  310)

Factory setting Off

* Visibility depends on order options or device settings

Assign chan. 3**Navigation**

Expert → Diagnostics → Data logging → Assign chan. 3 (0853)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **SW option overv.** parameter (→ 49).

Description

Options for the assignment of a process variable to the data logging channel.

Selection

Picklist, see **Assign channel 1** parameter (→ 310)

Factory setting

Off

Assign chan. 4**Navigation**

Expert → Diagnostics → Data logging → Assign chan. 4 (0854)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **SW option overv.** parameter (→ 49).

Description

Options for the assignment of a process variable to the data logging channel.

Selection

Picklist, see **Assign channel 1** parameter (→ 310)

Factory setting

Off

Logging interval**Navigation**

Expert → Diagnostics → Data logging → Logging interval (0856)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **SW option overv.** parameter (→ 49).

Description

Use this function to enter the logging interval T_{log} for data logging.

User entry

0.1 to 999.0 s

Factory setting

1.0 s

Additional information*Description*

This defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{\log} :

- If 1 logging channel is used: $T_{\log} = 1000 \times t_{\log}$
- If 2 logging channels are used: $T_{\log} = 500 \times t_{\log}$
- If 3 logging channels are used: $T_{\log} = 333 \times t_{\log}$
- If 4 logging channels are used: $T_{\log} = 250 \times t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).

 The log contents are cleared if the length of the logging interval is changed.

Example

If 1 logging channel is used:

- $T_{\log} = 1000 \times 1 \text{ s} = 1000 \text{ s} \approx 15 \text{ min}$
- $T_{\log} = 1000 \times 10 \text{ s} = 10000 \text{ s} \approx 3 \text{ h}$
- $T_{\log} = 1000 \times 80 \text{ s} = 80000 \text{ s} \approx 1 \text{ d}$
- $T_{\log} = 1000 \times 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging**Navigation**

  Expert → Diagnostics → Data logging → Clear logging (0855)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  49).

Description

Use this function to clear the entire logging data.

Selection

- Cancel
- Clear data

Factory setting

Cancel

Additional information*Selection*

- Cancel
The data is not cleared. All the data is retained.
- Clear data
The logging data is cleared. The logging process starts from the beginning.

Data logging**Navigation**

  Expert → Diagnostics → Data logging → Data logging (0860)

Description

Use this function to select the data logging method.

Selection

- Overwriting
- Not overwriting

Factory setting	Overwriting
Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ Overwriting The device memory applies the FIFO principle.▪ Not overwriting Data logging is canceled if the measured value memory is full (single shot).

Logging delay



Navigation	Expert → Diagnostics → Data logging → Logging delay (0859)
Prerequisite	In the Data logging parameter (→ 313), the Not overwriting option is selected.
Description	Use this function to enter the time delay for measured value logging.
User entry	0 to 999 h
Factory setting	0 h
Additional information	<i>Description</i> <p>Once measured value logging has been started with the Data log.control parameter (→ 314), the device does not save any data for the duration of the time delay entered.</p>

Data log.control



Navigation	Expert → Diagnostics → Data logging → Data log.control (0857)
Prerequisite	In the Data logging parameter (→ 313), the Not overwriting option is selected.
Description	Use this function to start and stop measured value logging.
Selection	<ul style="list-style-type: none">▪ None▪ Delete + start▪ Stop
Factory setting	None
Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ None Initial measured value logging status.▪ Delete + start All the measured values recorded for all the channels are deleted and measured value logging starts again.▪ Stop Measured value logging is stopped.

Data log. status

Navigation	 Expert → Diagnostics → Data logging → Data log. status (0858)
Prerequisite	In the Data logging parameter (→ 313), the Not overwriting option is selected.
Description	Displays the measured value logging status.
User interface	<ul style="list-style-type: none"> ■ Done ■ Delay active ■ Active ■ Stopped
Factory setting	Done
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Done Measured value logging has been performed and completed successfully. ■ Delay active Measured value logging has been started but the logging interval has not yet elapsed. ■ Active The logging interval has elapsed and measured value logging is active. ■ Stopped Measured value logging is stopped.

Logging duration

Navigation	 Expert → Diagnostics → Data logging → Logging duration (0861)
Prerequisite	In the Data logging parameter (→ 313), the Not overwriting option is selected.
Description	Displays the total logging duration.
User interface	Positive floating-point number
Factory setting	0 s

"Displ.channel 1" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 1



Display channel 1

Navigation

 Expert → Diagnostics → Data logging → Displ.channel 1

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  49).

One of the following options is selected in the **Assign chan. 1** parameter (→  310):

- Mass flow
- Volume flow
- Correct.vol.flow
- Target mass flow *
- Carrier mass fl.
- Density
- Ref.density
- Concentration *
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Carr. pipe temp.
- Electronic temp.
- Curr.output 1
- Osc. freq. 0
- Osc. freq. 1 *
- Freq. fluct. 0
- Freq. fluct. 1 *
- Oscil. amplitude *
- Osc. ampl. 1 *
- Osc. damping 0
- Osc. damping 1 *
- Osc.damp.fluct 0
- Osc.damp.fluct 1 *
- Signal asymmetry
- Exc. current 0
- Exc. current 1 *

Description


Displays the measured value trend for the logging channel in the form of a chart.

Additional information

Prerequisite

 Detailed description of the options **Oscil. frequency**, **Oscil. amplitude**, **Oscil. damping** and **Signal asymmetry**: **Assign freq.** parameter (→  128)

Description

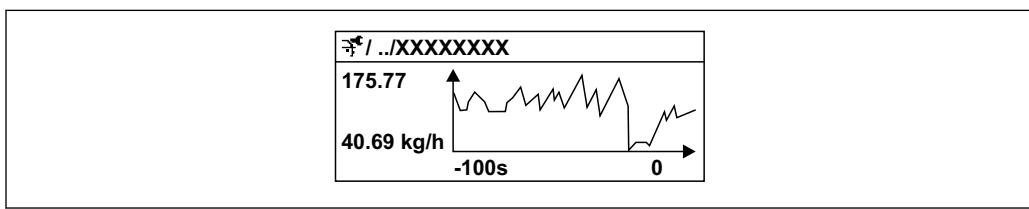

 10 Chart of a measured value trend

* Visibility depends on order options or device settings

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

"Displ.channel 2" submenu

Navigation



Expert → Diagnostics → Data logging → Displ.channel 2



Display channel 2

Navigation



Expert → Diagnostics → Data logging → Displ.channel 2

Prerequisite

A process variable is defined in the **Assign chan. 2** parameter.

Description

See the **Display channel 1** parameter → 316

"Displ.channel 3" submenu

Navigation



Expert → Diagnostics → Data logging → Displ.channel 3



Display channel 3

Navigation



Expert → Diagnostics → Data logging → Displ.channel 3

Prerequisite

A process variable is defined in the **Assign chan. 3** parameter.

Description


See the **Display channel 1** parameter → 316

"Displ.channel 4" submenu

Navigation



Expert → Diagnostics → Data logging → Displ.channel 4

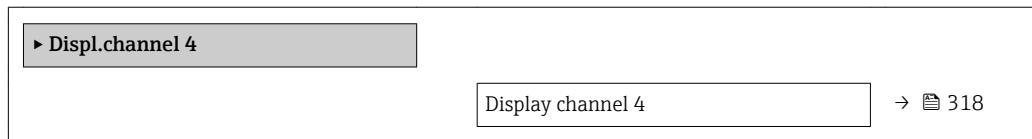

Display channel 4

Navigation



Expert → Diagnostics → Data logging → Displ.channel 4

Prerequisite

A process variable is defined in the **Assign chan. 4** parameter.

Description

See the **Display channel 1** parameter →  316

3.12.11 "Heartbeat" submenu




For detailed information on the parameter descriptions for the **Heartbeat Verification+Monitoring** application package, refer to the Special Documentation for the device →  7

Navigation



Expert → Diagnostics → Heartbeat

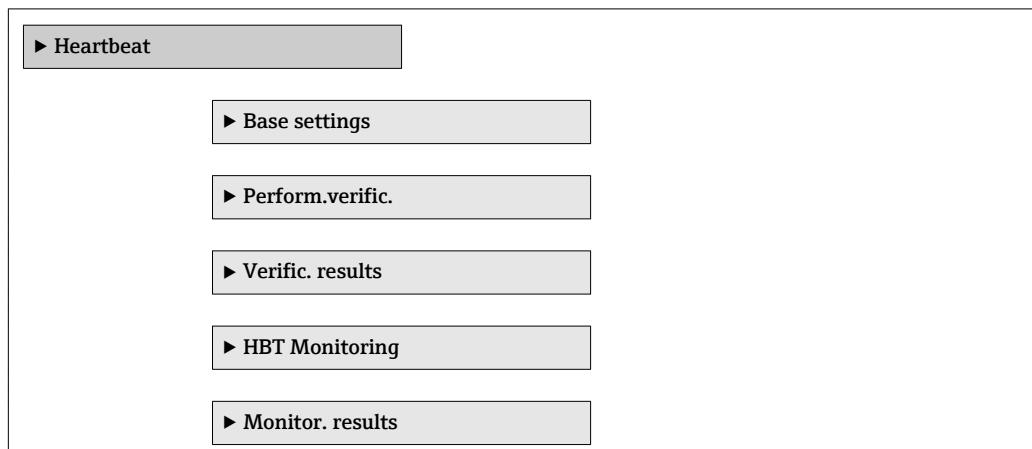


3.12.12 "Simulation" submenu

Navigation



Expert → Diagnostics → Simulation

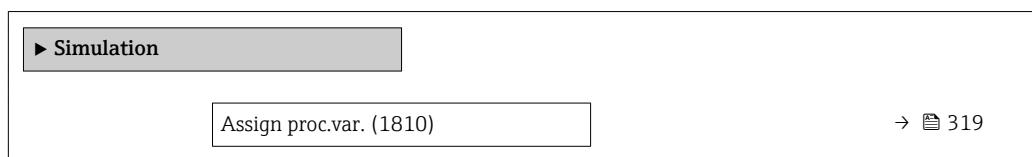

Proc. var. value (1811)	→ 320
Status inp. sim. (1355)	→ 320
Signal level (1356)	→ 321
Curr.inp 1 to n sim. (1608-1 to n)	→ 321
Value curr.inp 1 to n (1609-1 to n)	→ 322
Curr.out. 1 to n sim. (0354-1 to n)	→ 322
Value curr.out 1 to n (0355-1 to n)	→ 322
FreqOutputSim 1 to n (0472-1 to n)	→ 323
Freq value 1 to n (0473-1 to n)	→ 323
Puls.outp.sim. 1 to n (0458-1 to n)	→ 324
Pulse value 1 to n (0459-1 to n)	→ 324
Switch sim. 1 to n (0462-1 to n)	→ 324
Switch status 1 to n (0463-1 to n)	→ 325
Relay out. 1 to n sim (0802-1 to n)	→ 325
Switch status 1 to n (0803-1 to n)	→ 326
Dev. alarm sim. (0654)	→ 326
Event category (0738)	→ 327
Diag. event sim. (0737)	→ 327

Assign proc.var.**Navigation**

Expert → Diagnostics → Simulation → Assign proc.var. (1810)

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Mass flow
- Volume flow
- Correct.vol.flow

- Density
- Ref.density
- Temperature
- Dynam. viscosity *
- Kinematic visc.
- TempCompDynVisc *
- TempCompKinVisc *
- Concentration *
- Target mass flow *
- Carrier mass fl.

Factory setting Off

Additional information *Description*

 The simulation value of the process variable selected is defined in the **Proc. var. value** parameter (→ 320).

Proc. var. value



Navigation  Expert → Diagnostics → Simulation → Proc. var. value (1811)

Prerequisite A process variable is selected in the **Assign proc.var.** parameter (→ 319).

Description Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

User entry Depends on the process variable selected

Factory setting 0

Additional information *User entry*

 The unit of the displayed measured value is taken from the **System units** submenu (→ 66).

Status inp. sim.



Navigation  Expert → Diagnostics → Simulation → Status inp. sim. (1355)

Description Use this function to switch simulation of the status input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting Off

* Visibility depends on order options or device settings

Additional information*Description*

The desired simulation value is defined in the **Signal level** parameter (→ 321).

Selection

■ Off

Simulation for the status input is switched off. The device is in normal measuring mode or another process variable is being simulated.

■ On

Simulation for the status input is active.

Signal level**Navigation**

Expert → Diagnostics → Simulation → Signal level (1356)

Prerequisite

In the **Status inp. sim.** parameter (→ 320), the **On** option is selected.

Description

Use this function to select the signal level for the simulation of the status input. In this way, users can verify the correct configuration of the status input and the correct function of upstream feed-in units.

Selection

- High
- Low

Curr.inp sim.**Navigation**

Expert → Diagnostics → Simulation → Curr.inp 1 to n sim. (1608–1 to n)

Description

Option for switching simulation of the current input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.



The desired simulation value is defined in the **Value curr.inp 1 to n** parameter.

Selection

- Off
- On

Factory setting

Off

Additional information*Selection*

■ Off

Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

■ On

Current simulation is active.

Value curr.inp**Navigation**

Expert → Diagnostics → Simulation → Value curr.inp 1 to n (1609–1 to n)

Prerequisite

In the **Curr.inp 1 to n sim.** parameter, the **On** option is selected.

Description

Use this function to enter the current value for the simulation. In this way, users can verify the correct configuration of the current input and the correct function of upstream feed-in units.

User entry

0 to 22.5 mA

Curr.out. sim.**Navigation**

Expert → Diagnostics → Simulation → Curr.out. 1 to n sim. (0354–1 to n)

Description

Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information**Description**

The desired simulation value is defined in the **Value curr.out 1 to n** parameter.

Selection

- Off
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Current simulation is active.

Value curr.out**Navigation**

Expert → Diagnostics → Simulation → Value curr.out 1 to n (0355–1 to n)

Prerequisite

In the **Curr.out. 1 to n sim.** parameter, the **On** option is selected.

Description

Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.

User entry

3.59 to 22.5 mA

Additional information*Dependency*

The input range is dependent on the option selected in the **Current span** parameter (→  109).

FreqOutputSim**Navigation**

 Expert → Diagnostics → Simulation → FreqOutputSim 1 to n (0472–1 to n)

Prerequisite

In the **Operating mode** parameter (→  123), the **Frequency** option is selected.

Description

Use this function to switch simulation of the frequency output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

 The desired simulation value is defined in the **Freq value 1 to n** parameter.

Selection

- Off

Frequency simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Frequency simulation is active.

Freq value**Navigation**

 Expert → Diagnostics → Simulation → Freq value 1 to n (0473–1 to n)

Prerequisite

In the **FreqOutputSim 1 to n** parameter, the **On** option is selected.

Description

Use this function to enter a frequency value for the simulation. In this way, users can verify the correct adjustment of the frequency output and the correct function of downstream switching units.

User entry

0.0 to 12 500.0 Hz

Puls.outp.sim.**Navigation**

Expert → Diagnostics → Simulation → Puls.outp.sim. 1 to n (0458–1 to n)

Prerequisite

In the **Operating mode** parameter (→ 123), the **Pulse** option is selected.

Description

Use this function to switch simulation of the pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Fixed value
- Down-count. val.

Factory setting

Off

Additional information*Description*

The desired simulation value is defined in the **Pulse value 1 to n** parameter.

Selection

- Off
Pulse simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- Fixed value
Pulses are continuously output with the pulse width specified in the **Pulse width** parameter (→ 126).
- Down-count. val.
The pulses specified in the **Pulse value** parameter (→ 324) are output.

Pulse value**Navigation**

Expert → Diagnostics → Simulation → Pulse value 1 to n (0459–1 to n)

Prerequisite

In the **Puls.outp.sim. 1 to n** parameter, the **Down-count. val.** option is selected.

Description

Use this function to enter a pulse value for the simulation. In this way, users can verify the correct adjustment of the pulse output and the correct function of downstream switching units.

User entry

0 to 65 535

Switch sim.**Navigation**

Expert → Diagnostics → Simulation → Switch sim. 1 to n (0462–1 to n)

Prerequisite

In the **Operating mode** parameter (→ 123), the **Switch** option is selected.

Description	Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Factory setting	Off
Additional information	<p><i>Description</i></p>  The desired simulation value is defined in the Switch status 1 to n parameter.
	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ▪ On Switch simulation is active.

Switch status		
Navigation	 Expert → Diagnostics → Simulation → Switch status 1 to n (0463-1 to n)	
Description	Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.	
Selection	<ul style="list-style-type: none"> ▪ Open ▪ Closed 	
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Open Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ▪ Closed Switch simulation is active. 	

Relay out. 1 to n sim		
Navigation	 Expert → Diagnostics → Simulation → Relay out. 1 to n sim (0802-1 to n)	
Description	Use this function to switch simulation of the relay output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.	
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On 	
Factory setting	Off	

Additional information*Description*

The desired simulation value is defined in the **Switch status 1 to n** parameter.

Selection

- Off

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Relay simulation is active.

Switch status 1 to n**Navigation**

Expert → Diagnostics → Simulation → Switch status 1 to n (0803–1 to n)

Prerequisite

The **On** option is selected in the **Switch sim. 1 to n** parameter parameter.

Description

Use this function to select a relay value for the simulation. In this way, users can verify the correct adjustment of the relay output and the correct function of downstream switching units.

Selection

- Open
- Closed

Additional information*Selection*

- Open

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Closed

Relay simulation is active.

Dev. alarm sim.**Navigation**

Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)

Description

Use this function to switch the device alarm on and off.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Event category

Navigation	Expert → Diagnostics → Simulation → Event category (0738)
Description	Use this function to select the category of the diagnostic events that are displayed for the simulation in the Diag. event sim. parameter (→ 327).
Selection	<ul style="list-style-type: none">■ Sensor■ Electronics■ Configuration■ Process
Factory setting	Process

Diag. event sim.

Navigation	Expert → Diagnostics → Simulation → Diag. event sim. (0737)
Description	Use this function to select a diagnostic event for the simulation process that is activated.
Selection	<ul style="list-style-type: none">■ Off■ Diagnostic event picklist (depends on the category selected)
Factory setting	Off
Additional information	<i>Description</i> For the simulation, you can choose from the diagnostic events of the category selected in the Event category parameter (→ 327).

4 Country-specific factory settings

4.1 SI units

i Not valid for USA and Canada.

4.1.1 System units

Mass	kg
Mass flow	kg/h
Volume	l
Volume flow	l/h
Corrected volume	Nl
Corrected volume flow	Nl/h
Density	kg/l
Reference density	kg/Nl
Temperature	°C
Pressure	bar a

4.1.2 Full scale values

i The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [mm]	[kg/h]
1	4
2	20
4	90
8	400
15	1300
15 FB	3600
25	3600
25 FB	9000
40	9000
40 FB	14000
50	14000
50 FB	36000
80	36000
100	60000
150	130 t/h
250	360 t/h
350	650 t/h

4.1.3 Output current span

Current output 1 to n	4 to 20 mA NAMUR
-----------------------	------------------

4.1.4 Pulse value

Nominal diameter [mm]	[kg/p]
1	0.001
2	0.01
4	0.01
8	0.1
15	0.1
15 FB	1
25	1
25 FB	1
40	1
40 FB	10
50	10
50 FB	10
80	10
100	10
150	100
250	100
350	100

4.1.5 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	On-value for liquid [kg/h]
1	0.08
2	0.4
4	1.8
8	8
15	26
15 FB	72
25	72
25 FB	180
40	180
40 FB	300
50	300
50 FB	720
80	720
100	1200

Nominal diameter [mm]	On-value for liquid [kg/h]
150	2.6 t/h
250	7.2 t/h
350	13 t/h

Nominal diameter [mm]	Switch-on value for gas [kg/h]
1	0.02
2	0.1
4	0.45
8	2
15	6.5
15 FB	18
25	18
25 FB	45
40	45
40 FB	75
50	75
50 FB	180
80	180
100	300
150	650
250	1.8 t/h
350	3.25 t/h

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Mass	lb
Mass flow	lb/min
Volume	gal (us)
Volume flow	gal/min (us)
Corrected volume	Sft ³
Corrected volume flow	Sft ³ /min
Density	lb/ft ³
Reference density	lb/Sft ³
Temperature	°F
Pressure	psi a

4.2.2 Full scale values



The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [in]	[lb/min]
$\frac{1}{24}$	0.15
$\frac{1}{12}$	0.75
$\frac{1}{8}$	3.3
$\frac{3}{8}$	15
$\frac{1}{2}$	50
$\frac{1}{2}$ FB	130
1	130
1 FB	330
$1\frac{1}{2}$	330
$1\frac{1}{2}$ FB	550
2	550
2 FB	1300
3	1300
4	2200
6	4800
10	13000
14	23500

4.2.3 Output current span

Current output 1 to n	4 to 20 mA US
-----------------------	---------------

4.2.4 Pulse value

Nominal diameter [in]	[lb/p]
$\frac{1}{24}$	0.002
$\frac{1}{12}$	0.02
$\frac{1}{8}$	0.02
$\frac{3}{8}$	0.2
$\frac{1}{2}$	0.2
$\frac{1}{2}$ FB	2
1	2
1 FB	2
$1\frac{1}{2}$	2
$1\frac{1}{2}$ FB	20
2	20
2 FB	20
3	20

Nominal diameter [in]	[lb/p]
4	20
6	200
10	200
14	200

4.2.5 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	On-value for liquid [lb/min]
1/24	0.003
1/12	0.015
1/8	0.066
3/8	0.3
1/2	1
1/2 FB	2.6
1	2.6
1 FB	6.6
1½	6.6
1½ FB	11
2	11
2 FB	26
3	26
4	44
6	95
10	260
14	470

Nominal diameter [in]	Switch-on value for gas [lb/min]
1/24	0.001
1/12	0.004
1/8	0.016
3/8	0.075
1/2	0.25
1/2 FB	0.65
1	0.65
1 FB	1.65
1½	1.65
1½ FB	2.75
2	2.75
2 FB	6.5

Nominal diameter [in]	Switch-on value for gas [lb/min]
3	6.5
4	11
6	23.75
10	65
14	117.5

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Pressure	Pa a, kPa a, MPa a	Pascal, kilopascal, megapascal (absolute)
	bar	Bar
	Pa g, kPa g, MPa g	Pascal, kilopascal, megapascal (relative/gauge)
	bar g	Bar (relative/gauge)
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Ref.density	kg/Nm ³ , kg/Nl, g/Scm ³ , kg/Sm ³	Kilogram, gram/standard volume unit
Corrected volume	Nl, Nm ³ , Sm ³	Normal liter, normal cubic meter, standard cubic meter
Correct.vol.flow	Nl/s, Nl/min, Nl/h, Nl/d	Normal liter/time unit
	Nm ³ /s, Nm ³ /min, Nm ³ /h, Nm ³ /d	Normal cubic meter/time unit
	Sm ³ /s, Sm ³ /min, Sm ³ /h, Sm ³ /d	Standard cubic meter/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Volume flow	cm ³ /s, cm ³ /min, cm ³ /h, cm ³ /d	Cubic centimeter/time unit
	dm ³ /s, dm ³ /min, dm ³ /h, dm ³ /d	Cubic decimeter/time unit
	m ³ /s, m ³ /min, m ³ /h, m ³ /d	Cubic meter/time unit
	ml/s, ml/min, ml/h, ml/d	Milliliter/time unit
	l/s, l/min, l/h, l/d	Liter/time unit
	hl/s, hl/min, hl/h, hl/d	Hectoliter/time unit
	Ml/s, Ml/min, Ml/h, Ml/d	Megaliter/time unit
Time	s, m, h, d, y	Second, minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit

Process variable	Units	Explanation
Pressure	psi a	Pounds per square inch (absolute)
	psi g	Pounds per square inch (gauge)
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Ref.density	lb/Sft ³	Weight unit/standard volume unit
Corrected volume	Sft ³ , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Correct.vol.flow	Sft ³ /s, Sft ³ /min, Sft ³ /h, Sft ³ /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Correct.vol.flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

- 0/4 mA value (Parameter) 103, 110
- 0% bargraph value 1 (Parameter) 19
- 0% bargraph value 3 (Parameter) 22
- 2.4 GHz WLAN channel (Parameter) 175
- 20 mA value (Parameter) 103, 112
- 100% bargraph value 1 (Parameter) 20
- 100% bargraph value 3 (Parameter) 22

A

- Access status (Parameter) 13
- Acknowledge Option (Parameter) 167, 218, 251
- Activate SW option (Parameter) 48
- Active level (Parameter) 106
- Actual diagnostics (Parameter) 281
- Actual mode (Parameter) 152, 182, 231, 259, 268
- Administration (Submenu) 45
- Alarm delay (Parameter) 31
- Alarm Hysteresis (Parameter) 219
- Alarm State (Parameter) 165, 168, 216, 222, 224, 225, 227, 253, 254
- Alert Key (Parameter) 150, 181, 230, 259, 268
- Analog input 1 to n (Submenu) 180
- Analog inputs (Submenu) 179
- Analog outputs (Submenu) 257
- Application (Submenu) 275
- Apply I/O configuration (Parameter) 100
- Assign behavior of diagnostic no. 046 (Parameter) 33
- Assign behavior of diagnostic no. 140 (Parameter) 34
- Assign behavior of diagnostic no. 144 (Parameter) 34
- Assign behavior of diagnostic no. 374 (Parameter) 35
- Assign behavior of diagnostic no. 441 (Parameter) 35
- Assign behavior of diagnostic no. 442 (Parameter) 35
- Assign behavior of diagnostic no. 443 (Parameter) 36
- Assign behavior of diagnostic no. 444 (Parameter) 36
- Assign behavior of diagnostic no. 830 (Parameter) 36
- Assign behavior of diagnostic no. 831 (Parameter) 37
- Assign behavior of diagnostic no. 832 (Parameter) 37
- Assign behavior of diagnostic no. 833 (Parameter) 38
- Assign behavior of diagnostic no. 834 (Parameter) 38
- Assign behavior of diagnostic no. 835 (Parameter) 38
- Assign behavior of diagnostic no. 862 (Parameter) 39
- Assign behavior of diagnostic no. 912 (Parameter) 39
- Assign behavior of diagnostic no. 913 (Parameter) 39
- Assign behavior of diagnostic no. 944 (Parameter) 40
- Assign behavior of diagnostic no. 948 (Parameter) 40
- Assign channel 1 (Parameter) 310
- Assign channel 2 (Parameter) 311
- Assign channel 3 (Parameter) 312
- Assign channel 4 (Parameter) 312
- Assign current output 1 to n (Parameter) 108
- Assign diagnostic behavior (Parameter) 136, 145
- Assign flow direction check (Parameter) 139, 144
- Assign frequency output (Parameter) 128
- Assign limit (Parameter) 137, 144
- Assign process variable (Parameter) 76, 80, 276

- Assign pulse output 1 to n (Parameter) 125
- Assign simulation process variable (Parameter) 319
- Assign SSID name (Parameter) 174
- Assign status (Parameter) 140, 145
- Assign status input (Parameter) 105
- Assign status of diagnostic number 046 (Parameter) 40
- Assign status of diagnostic number 140 (Parameter) 41
- Assign status of diagnostic number 144 (Parameter) 41
- Assign status of diagnostic number 374 (Parameter) 41
- Assign status of diagnostic number 830 (Parameter) 42
- Assign status of diagnostic number 831 (Parameter) 42
- Assign status of diagnostic number 832 (Parameter) 42
- Assign status of diagnostic number 833 (Parameter) 43
- Assign status of diagnostic number 834 (Parameter) 43
- Assign status of diagnostic number 835 (Parameter) 43
- Assign status of diagnostic number 862 (Parameter) 44
- Assign status of diagnostic number 912 (Parameter) 44
- Assign status of diagnostic number 913 (Parameter) 44
- Assign status of diagnostic number 944 (Parameter) 45
- Assign status of diagnostic number 948 (Parameter) 45

B

- Backlight (Parameter) 27
- Backup state (Parameter) 29
- Block Error (Parameter) 153, 183, 232, 261, 270
- Block tag (Parameter) 149, 180, 229, 258, 267
- Bootloader revision (Parameter) 296, 298, 299
- Build no. software (Parameter) 296, 298

C

- C0 to 5 (Parameter) 99
- Calculated values (Submenu) 87
- Calibration (Submenu) 97
- Calibration factor (Parameter) 98
- Carrier corrected volume flow (Parameter) 57
- Carrier mass flow (Parameter) 56
- Carrier pipe temperature (Submenu) 302
- Carrier volume flow (Parameter) 58
- Channel (Parameter) 208, 246, 261, 270
- Clear Fault State (Parameter) 160
- Clear logging data (Parameter) 313
- Communication (Submenu) 148
- Comparison result (Parameter) 29
- Concentration (Parameter) 55
- Concentration (Submenu) 280
- Configuration backup (Submenu) 27
- Configuration management (Parameter) 28
- Confirm access code (Parameter) 47
- Confirm Time (Parameter) 160
- Connection state (Parameter) 175
- Contrast display (Parameter) 27
- Control Totalizer 1 to n (Parameter) 278
- Conversion code (Parameter) 101
- Corrected volume flow (Parameter) 52
- Corrected volume flow calculation (Parameter) 87
- Corrected volume flow calculation (Submenu) 87

Corrected volume flow factor (Parameter)	96
Corrected volume flow offset (Parameter)	95
Corrected volume flow unit (Parameter)	69
Corrected volume unit (Parameter)	70
Current (Parameter)	166, 217, 252
Current input 1 to n (Submenu)	60, 101
Current input 1 to n simulation (Parameter)	321
Current output 1 to n (Submenu)	107
Current output 1 to n simulation (Parameter)	322
Current span (Parameter)	102, 109
Cycle Selection (Parameter)	159
Cycle Type (Parameter)	158

D

Damping output 1 to n (Parameter)	117, 132
Data logging (Parameter)	313
Data logging (Submenu)	309
Data logging control (Parameter)	314
Data logging status (Parameter)	315
Date/time format (Parameter)	73
DD Resource (Parameter)	155
DD Revision (Parameter)	156, 292
Decimal (Parameter)	197, 207
Decimal places 1 (Parameter)	20
Decimal places 2 (Parameter)	21
Decimal places 3 (Parameter)	23
Decimal places 4 (Parameter)	24
Default gateway (Parameter)	178
Define access code (Parameter)	46
Define access code (Wizard)	46
Density (Parameter)	53
Density damping (Parameter)	75
Density factor (Parameter)	95
Density offset (Parameter)	95
Density unit (Parameter)	71
Deny (Parameter)	156, 207, 245
Device address (Parameter)	149
Device alarm simulation (Parameter)	326
Device information (Submenu)	289
Device name (Parameter)	291
Device reset (Parameter)	48
Device revision (Parameter)	156, 291
Device tag (Parameter)	290
Device type (Parameter)	155, 291
Diagnostic behavior (Submenu)	31
Diagnostic event category (Parameter)	327
Diagnostic event simulation (Parameter)	327
Diagnostic handling (Submenu)	30
Diagnostic list (Submenu)	283
Diagnostics (Submenu)	280
Diagnostics 1 (Parameter)	283
Diagnostics 2 (Parameter)	284
Diagnostics 3 (Parameter)	285
Diagnostics 4 (Parameter)	286
Diagnostics 5 (Parameter)	286
Direct access	
0/4 mA value	
Current input 1 to n (1606-1 to n)	103
Current output 1 to n (0367-1 to n)	110

0% bargraph value 1 (0123)	19
0% bargraph value 3 (0124)	22
2.4 GHz WLAN channel (2704)	175
20 mA value	
Current input 1 to n (1607-1 to n)	103
Current output 1 to n (0372-1 to n)	112
100% bargraph value 1 (0125)	20
100% bargraph value 3 (0126)	22
Access status (0005)	13
Acknowledge Option	
Analog input 1 to n (6910-1 to n)	218
Discrete input 1 to n (6841-1 to n)	251
Acknowledge Option (10691)	167
Activate SW option (0029)	48
Active level	
Status input 1 to n (1351-1 to n)	106
Actual diagnostics (0691)	281
Actual mode	
Analog input 1 to n (6957-1 to n)	182
Discrete input 1 to n (6870-1 to n)	231
Actual mode (10725)	152
Actual mode (11264)	268
Actual mode (11366)	259
Alarm delay (0651)	31
Alarm Hysteresis	
Analog input 1 to n (6911-1 to n)	219
Alarm State	
Analog input 1 to n (6917-1 to n)	216
Analog input 1 to n (6927-1 to n)	224
Analog input 1 to n (6932-1 to n)	222
Analog input 1 to n (6942-1 to n)	225
Analog input 1 to n (6948-1 to n)	227
Discrete input 1 to n (6847-1 to n)	253
Discrete input 1 to n (6858-1 to n)	254
Alarm State (10697)	165
Alarm State (10742)	168
Alert Key	
Analog input 1 to n (6916-1 to n)	181
Discrete input 1 to n (6846-1 to n)	230
Alert Key (10696)	150
Alert Key (11251)	268
Alert Key (11365)	259
Apply I/O configuration (3907)	100
Assign behavior of diagnostic no. 046 (0709) . . .	33
Assign behavior of diagnostic no. 140 (0708) . . .	34
Assign behavior of diagnostic no. 144 (0731) . . .	34
Assign behavior of diagnostic no. 374 (0710) . . .	35
Assign behavior of diagnostic no. 441 (0657) . . .	35
Assign behavior of diagnostic no. 442 (0658) . . .	35
Assign behavior of diagnostic no. 443 (0659) . . .	36
Assign behavior of diagnostic no. 444 (0740) . . .	36
Assign behavior of diagnostic no. 830 (0800) . . .	36
Assign behavior of diagnostic no. 831 (0641) . . .	37
Assign behavior of diagnostic no. 832 (0681) . . .	37
Assign behavior of diagnostic no. 833 (0682) . . .	38
Assign behavior of diagnostic no. 834 (0700) . . .	38
Assign behavior of diagnostic no. 835 (0702) . . .	38
Assign behavior of diagnostic no. 862 (0679) . . .	39
Assign behavior of diagnostic no. 912 (0703) . . .	39

Assign behavior of diagnostic no. 913 (0712)	39
Assign behavior of diagnostic no. 944 (0732)	40
Assign behavior of diagnostic no. 948 (0744)	40
Assign channel 1 (0851)	310
Assign channel 2 (0852)	311
Assign channel 3 (0853)	312
Assign channel 4 (0854)	312
Assign current output 1 to n (0359-1 to n)	108
Assign diagnostic behavior	
Pulse/frequency/switch output 1 to n (0482-1 to n)	136
Relay output 1 to n (0806-1 to n)	145
Assign flow direction check	
Pulse/frequency/switch output 1 to n (0484-1 to n)	139
Relay output 1 to n (0808-1 to n)	144
Assign frequency output	
Pulse/frequency/switch output 1 to n (0478-1 to n)	128
Assign limit	
Pulse/frequency/switch output 1 to n (0483-1 to n)	137
Relay output 1 to n (0807-1 to n)	144
Assign process variable	
Totalizer 1 to n (0914-1 to n)	276
Assign process variable (1837)	76
Assign process variable (1860)	80
Assign pulse output 1 to n (0460-1 to n)	125
Assign simulation process variable (1810)	319
Assign SSID name (2708)	174
Assign status	
Pulse/frequency/switch output 1 to n (0485-1 to n)	140
Relay output 1 to n (0805-1 to n)	145
Assign status input	
Status input 1 to n (1352-1 to n)	105
Assign status of diagnostic number 046 (11042)	40
Assign status of diagnostic number 140 (11041)	41
Assign status of diagnostic number 144 (11016)	41
Assign status of diagnostic number 374 (11000)	41
Assign status of diagnostic number 830 (11006)	42
Assign status of diagnostic number 831 (11007)	42
Assign status of diagnostic number 832 (11002)	42
Assign status of diagnostic number 833 (11003)	43
Assign status of diagnostic number 834 (11004)	43
Assign status of diagnostic number 835 (11005)	43
Assign status of diagnostic number 862 (11008)	44
Assign status of diagnostic number 912 (11009)	44
Assign status of diagnostic number 913 (11010)	44
Assign status of diagnostic number 944 (11014)	45
Assign status of diagnostic number 948 (11011)	45
Backlight (0111)	27
Backup state (2759)	29
Block Error	
Analog input 1 to n (6922-1 to n)	183
Discrete input 1 to n (6857-1 to n)	232
Block Error (10703)	153
Block Error (11272)	270
Block Error (11364)	261
Block tag	
Analog input 1 to n (6901-1 to n)	180
Discrete input 1 to n (6851-1 to n)	229
Block tag (10702)	149
Block tag (11252)	267
Block tag (11351)	258
Bootloader revision	
I/O module 1 (0073)	298
I/O module 2 (0073)	298
I/O module 3 (0073)	298
I/O module 4 (0073)	298
Bootloader revision (0073)	296, 299
Build no. software	
I/O module 1 (0079)	298
I/O module 2 (0079)	298
I/O module 3 (0079)	298
I/O module 4 (0079)	298
Build no. software (0079)	296, 298
C0 to 5 (6022)	99
Calibration factor (6025)	98
Carrier corrected volume flow (1894)	57
Carrier mass flow (1865)	56
Carrier volume flow (1896)	58
Channel	
Analog input 1 to n (6902-1 to n)	208
Discrete input 1 to n (6852-1 to n)	246
Channel (11253)	270
Channel (11352)	261
Clear Fault State (10704)	160
Clear logging data (0855)	313
Comparison result (2760)	29
Concentration (1887)	55
Configuration management (2758)	28
Confirm Time (10705)	160
Connection state (2722)	175
Contrast display (0105)	27
Control Totalizer 1 to n (0912-1 to n)	278
Conversion code (2762)	101
Corrected volume flow (1851)	52
Corrected volume flow calculation (1812)	87
Corrected volume flow factor (1867)	96
Corrected volume flow offset (1866)	95
Corrected volume flow unit (0558)	69
Corrected volume unit (0575)	70
Current	
Analog input 1 to n (6912-1 to n)	217
Discrete input 1 to n (6842-1 to n)	252
Current (10692)	166
Current input 1 to n simulation (1608-1 to n)	321
Current output 1 to n simulation (0354-1 to n)	322
Current span	
Current input 1 to n (1605-1 to n)	102
Current output 1 to n (0353-1 to n)	109
Cycle Selection (10706)	159
Cycle Type (10707)	158
Damping output 1 to n (0363-1 to n)	117
Damping output 1 to n (0477-1 to n)	132
Data logging (0860)	313
Data logging control (0857)	314

Data logging status (0858)	315	Analog input 1 to n (6982–1 to n)	194																																
Date/time format (2812)	73	Extended order code 1 (10796)	293																																
DD Resource (10708)	155	Extended order code 2 (10797)	293																																
DD Revision (10709)	156, 292	External pressure (6209)	85																																
Decimal		External reference density (6198)	88																																
Analog input 1 to n (6961–1 to n)	207	External temperature (6080)	86																																
Analog input 1 to n (6980–1 to n)	197	Failure current																																	
Decimal places 1 (0095)	20	Current output 1 to n (0352–1 to n)	120																																
Decimal places 2 (0117)	21	Failure frequency																																	
Decimal places 3 (0118)	23	Pulse/frequency/switch output 1 to n (0474–1 to n)	135																																
Decimal places 4 (0119)	24	Failure mode																																	
Default gateway (7210)	178	Current input 1 to n (1601–1 to n)	103																																
Density (1850)	53	Current output 1 to n (0364–1 to n)	119																																
Density damping (1803)	75	Pulse/frequency/switch output 1 to n (0451–1 to n)	134																																
Density factor (1849)	95	Pulse/frequency/switch output 1 to n (0480–1 to n)	127																																
Density offset (1848)	95	Pulse/frequency/switch output 1 to n (0486–1 to n)	141																																
Density unit (0555)	71	Relay output 1 to n (0811–1 to n)	147																																
Deny		Totalizer 1 to n (0901–1 to n)	279																																
Analog input 1 to n (6925–1 to n)	207	Failure value																																	
Discrete input 1 to n (6867–1 to n)	245	Current input 1 to n (1602–1 to n)	104																																
Deny (10717)	156	Fault State (10712)	161																																
Device address (11061)	149	Fault State Status (11254)	274																																
Device alarm simulation (0654)	326	Fault State Status (11353)	265																																
Device name (0020)	291	Fault State Time (11255)	271																																
Device reset (0000)	48	Fault State Time (11354)	262																																
Device revision (10710)	156, 291	Fault State Val 1 (11355)	263																																
Device tag (10799)	290	Fault State Val 2 (11356)	263																																
Device type (10711)	155, 291	Fault State Val 3 (11357)	263																																
Diagnostic event category (0738)	327	Fault State Val 4 (11358)	264																																
Diagnostic event simulation (0737)	327	Fault State Val 5 (11359)	264																																
Diagnostics 1 (0692)	283	Fault State Val 6 (11360)	264																																
Diagnostics 2 (0693)	284	Fault State Val 7 (11361)	265																																
Diagnostics 3 (0694)	285	Fault State Val 8 (11362)	265																																
Diagnostics 4 (0695)	286	Fault State Value Discrete 1 (11256)	272																																
Diagnostics 5 (0696)	286	Fault State Value Discrete 2 (11257)	272																																
Direct access (0106)	11	Fault State Value Discrete 3 (11258)	272																																
Disabled		Fault State Value Discrete 4 (11259)	273																																
Analog input 1 to n (6913–1 to n)	218	Fault State Value Discrete 5 (11260)	273																																
Discrete input 1 to n (6843–1 to n)	252	Fault State Value Discrete 6 (11261)	273																																
Disabled (10693)	167	Fault State Value Discrete 7 (11262)	274																																
Discrete Limit		Fault State Value Discrete 8 (11263)	274																																
Discrete input 1 to n (6863–1 to n)	256	Feature Selection (10714)	158																																
Discrete Priority		Features (10713)	158																																
Discrete input 1 to n (6864–1 to n)	257	Filter options	288																																
Discrete Value		Filter options (0705)	287																																
Discrete input 1 to n (6862–1 to n)	256	Firmware version (10792)	292																																
Discrete Value (10746)	169	Fixed current																																	
Display damping (0094)	25	Current output 1 to n (0365–1 to n)	110																																
Display interval (0096)	24	Display language (0104)	15	Fixed reference density (1814)	88	Dynamic viscosity (1854)	54	Float Value		ENP version (10791)	294	Analog input 1 to n (6931–1 to n)	225	Enter access code (0003)	13	Analog input 1 to n (6936–1 to n)	223	Entire logging duration (0861)	315	Analog input 1 to n (6946–1 to n)	226	EU at 0%		Analog input 1 to n (6952–1 to n)	228	Analog input 1 to n (6962–1 to n)	198	Flow damping (1802)	74	Analog input 1 to n (6981–1 to n)	195	EU at 100%		Analog input 1 to n (6963–1 to n)	198
Display language (0104)	15	Fixed reference density (1814)	88																																
Dynamic viscosity (1854)	54	Float Value																																	
ENP version (10791)	294	Analog input 1 to n (6931–1 to n)	225																																
Enter access code (0003)	13	Analog input 1 to n (6936–1 to n)	223																																
Entire logging duration (0861)	315	Analog input 1 to n (6946–1 to n)	226																																
EU at 0%		Analog input 1 to n (6952–1 to n)	228																																
Analog input 1 to n (6962–1 to n)	198	Flow damping (1802)	74	Analog input 1 to n (6981–1 to n)	195	EU at 100%		Analog input 1 to n (6963–1 to n)	198																										
Flow damping (1802)	74																																		
Analog input 1 to n (6981–1 to n)	195																																		
EU at 100%																																			
Analog input 1 to n (6963–1 to n)	198																																		

Flow override (1839)	76
Format display (0098)	15
Free Space (10715)	160
Free Time (10716)	160
Frequency output simulation 1 to n (0472-1 to n)	323
Frequency value 1 to n (0473-1 to n)	323
Gateway IP address (2719)	176
Grant	
Analog input 1 to n (6926-1 to n)	207
Discrete input 1 to n (6868-1 to n)	245
Grant (10718)	156
Hard Types (10719)	157
Hardware revision (10793)	292
Header (0097)	25
Header text (0112)	26
High High Limit	
Analog input 1 to n (6937-1 to n)	219
High High Priority	
Analog input 1 to n (6938-1 to n)	219
High Limit	
Analog input 1 to n (6939-1 to n)	220
High Priority	
Analog input 1 to n (6940-1 to n)	220
High value partial filled pipe detection (1858)	80
I/O module 1 terminal numbers (3902-1)	296, 297
I/O module 1 to n information (3906-1 to n)	99
I/O module 1 to n terminal numbers (3902-1 to n)	99
I/O module 1 to n type (3901-1 to n)	100
I/O Options	
Analog input 1 to n (6941-1 to n)	207
Discrete input 1 to n (6869-1 to n)	245
Input signal level (1356)	321
Installation angle pitch (6236)	91
Installation angle roll (6282)	91
Installation direction (1809)	90
Invert output signal	
Pulse/frequency/switch output 1 to n (0470-1 to n)	142
IP address (7209)	178
IP address domain name server (2720)	176
ITK Version (10794)	170, 292
Kinematic viscosity (1857)	54
Last backup (2757)	28
Limit Notify (10720)	161
Linear expansion coefficient (1817)	89
Linearization Type	
Analog input 1 to n (6905-1 to n)	209
Locking status (0004)	12
Logging delay (0859)	314
Logging interval (0856)	312
Login page (7273)	179
Low Cutoff	
Analog input 1 to n (6956-1 to n)	211
Low Limit	
Analog input 1 to n (6947-1 to n)	221
Low Low Limit	
Analog input 1 to n (6953-1 to n)	221
Low Low Priority	
Analog input 1 to n (6954-1 to n)	221
Low Priority	
Analog input 1 to n (6955-1 to n)	220
Low value partial filled pipe detection (1861)	80
MAC address (7214)	177
Manufacturer Id (10721)	155
Mass flow (1838)	52
Mass flow factor (1832)	94
Mass flow offset (1831)	93
Mass flow unit (0554)	66
Mass unit (0574)	67
Max Notify (10722)	161
Maximum damping partial filled pipe det. (6040)	81
Maximum frequency value	
Pulse/frequency/switch output 1 to n (0454-1 to n)	130
Maximum value (6009)	305, 306
Maximum value (6014)	308
Maximum value (6029)	302
Maximum value (6051)	300
Maximum value (6068)	304
Maximum value (6070)	303
Maximum value (6108)	301
Maximum value (6119)	307
Maximum value (6121)	307
Maximum value (6283)	309
Measured current 1 to n (0366-1 to n)	121
Measured current 1 to n (1604-1 to n)	61
Measured values 1 to n (1603-1 to n)	61
Measuring mode	
Current output 1 to n (0351-1 to n)	113
Pulse/frequency/switch output 1 to n (0457-1 to n)	126
Pulse/frequency/switch output 1 to n (0479-1 to n)	131
Measuring value at maximum frequency	
Pulse/frequency/switch output 1 to n (0475-1 to n)	130
Measuring value at minimum frequency	
Pulse/frequency/switch output 1 to n (0476-1 to n)	130
Memory Size (10723)	159
Minimum frequency value	
Pulse/frequency/switch output 1 to n (0453-1 to n)	129
Minimum value (6008)	306
Minimum value (6010)	305
Minimum value (6015)	308
Minimum value (6030)	302
Minimum value (6052)	300
Minimum value (6069)	304
Minimum value (6071)	303
Minimum value (6109)	301
Minimum value (6120)	307
Minimum value (6122)	306
Minimum value (6284)	309
Minumum Cycle Time (10724)	159
Multi-frequency activation (6242)	82

Network security (2705)	172	Relay output function	
Nominal diameter (2807)	98	Relay output 1 to n (0804-1 to n)	143
Nonvolatile Cycle Time (10729)	159	Reset access code (0024)	47
Normal mode		Reset all totalizers (2806)	275
Analog input 1 to n (6958-1 to n)	183	Reset min/max values (6151)	299
Discrete input 1 to n (6871-1 to n)	232	Resource State (10730)	154
Normal mode (10726)	153	Response time	
Normal mode (11265)	269	Current output 1 to n (0378-1 to n)	118
Normal mode (11367)	260	Pulse/frequency/switch output 1 to n (0491-1 to n)	133
Off value low flow cutoff (1804)	77	Response time part. filled pipe detect. (1859)	81
On value low flow cutoff (1805)	77	Response time status input	
Operating mode		Status input 1 to n (1354-1 to n)	106
Pulse/frequency/switch output 1 to n (0469-1 to n)	123	Restart (10800)	157
Operating time (0652)	28, 47, 283	Security identification (2718)	172
Operating time from restart (0653)	282	Security type (2705)	172
Order code (10795)	293	Select antenna (2713)	175
Output current 1 to n (0361-1 to n)	120	Select gas type (6074)	83
Output frequency 1 to n (0471-1 to n)	135	Select medium (6062)	82
Output State		Separator (0101)	26
Discrete input 1 to n (6874-1 to n)	245	Serial number (10798)	291
Permitted mode		Service reset (10749)	157
Analog input 1 to n (6959-1 to n)	182	Set Fault State (10731)	161
Discrete input 1 to n (6872-1 to n)	231	Shed Remote Cascade (10732)	162
Permitted mode (10727)	152	Shed Remote Out (10733)	162
Permitted mode (11266)	269	Signal mode	
Permitted mode (11368)	260	Current input 1 to n (1610-1 to n)	102
Powerless relay status		Current output 1 to n (0377-1 to n)	108
Relay output 1 to n (0816-1 to n)	148	Pulse/frequency/switch output 1 to n (0490-1 to n)	123
Preset value 1 to n (0913-1 to n)	278	Simulate En/Disable	
Pressure compensation (6130)	84	Analog input 1 to n (6966-1 to n)	194
Pressure shock suppression (1806)	78	Discrete input 1 to n (6877-1 to n)	244
Pressure unit (0564)	73	Simulate Status	
Pressure value (6059)	85	Analog input 1 to n (6967-1 to n)	189
Pressure value (6129)	54	Discrete input 1 to n (6878-1 to n)	238
Previous diagnostics (0690)	282	Simulate Value	
Process Value Filter Time		Analog input 1 to n (6968-1 to n)	191
Analog input 1 to n (6909-1 to n)	214	Discrete input 1 to n (6879-1 to n)	241
Discrete input 1 to n (6855-1 to n)	247	Software option overview (0015)	49
Process variable value (1811)	320	Software revision	
Progress (2808)	93	I/O module 1 (0072)	297
Pulse output 1 to n (0456-1 to n)	128	I/O module 2 (0072)	297
Pulse output simulation 1 to n (0458-1 to n)	324	I/O module 3 (0072)	297
Pulse value 1 to n (0459-1 to n)	324	I/O module 4 (0072)	297
Pulse width		Software revision (0072)	296, 298
Pulse/frequency/switch output 1 to n (0452-1 to n)	126	Square expansion coefficient (1818)	90
Received signal strength (2721)	175	SSID name (2707)	174
Reference density (1852)	53	SSID name (2714)	171
Reference density factor (1869)	96	Static revision	
Reference density offset (1868)	96	Analog input 1 to n (6976-1 to n)	215
Reference density unit (0556)	71	Discrete input 1 to n (6887-1 to n)	251
Reference sound velocity (6147)	83	Static Revision	
Reference temperature (1816)	89	Analog input 1 to n (6973-1 to n)	180
Relative Index		Discrete input 1 to n (6884-1 to n)	229
Analog input 1 to n (6975-1 to n)	215	Static Revision (10735)	150
Discrete input 1 to n (6886-1 to n)	251	Static revision (10738)	163
Relative Index (10737)	163	Static Revision (11270)	267
Relay output 1 to n simulation (0802-1 to n)	325	Static Revision (11371)	258

Status	
Analog input 1 to n (6906-1 to n)	186
Analog input 1 to n (6923-1 to n)	211
Analog input 1 to n (6964-1 to n)	184
Discrete input 1 to n (6853-1 to n)	235
Discrete input 1 to n (6865-1 to n)	247
Discrete input 1 to n (6875-1 to n)	232
Status input simulation (1355)	320
Status Options	
Analog input 1 to n (6971-1 to n)	208
Discrete input 1 to n (6882-1 to n)	246
Status Options (11268)	270
Status Options (11363)	261
Strategy	
Analog input 1 to n (6972-1 to n)	181
Discrete input 1 to n (6883-1 to n)	230
Strategy (10734)	150
Strategy (11269)	267
Strategy (11370)	258
Subcode	
Analog input 1 to n (6918-1 to n)	217
Analog input 1 to n (6928-1 to n)	224
Analog input 1 to n (6933-1 to n)	222
Analog input 1 to n (6943-1 to n)	226
Analog input 1 to n (6949-1 to n)	228
Discrete input 1 to n (6848-1 to n)	253
Discrete input 1 to n (6859-1 to n)	255
Subcode (10698)	165
Subcode (10743)	169
Subnet mask (7211)	178
Switch output function	
Pulse/frequency/switch output 1 to n (0481-1 to n)	135
Switch output simulation 1 to n (0462-1 to n) . .	324
Switch status	
Relay output 1 to n (0801-1 to n)	148
Switch status 1 to n (0461-1 to n)	141
Switch status 1 to n (0463-1 to n)	325
Switch status 1 to n (0803-1 to n)	326
Switch-off delay	
Pulse/frequency/switch output 1 to n (0465-1 to n)	140
Relay output 1 to n (0813-1 to n)	146
Switch-off value	
Pulse/frequency/switch output 1 to n (0464-1 to n)	139
Relay output 1 to n (0809-1 to n)	146
Switch-on delay	
Pulse/frequency/switch output 1 to n (0467-1 to n)	140
Relay output 1 to n (0814-1 to n)	147
Switch-on value	
Pulse/frequency/switch output 1 to n (0466-1 to n)	138
Relay output 1 to n (0810-1 to n)	146
Tag Description	
Analog input 1 to n (6974-1 to n)	181
Discrete input 1 to n (6885-1 to n)	229
Tag Description (10736)	150
Tag Description (11271)	267
Tag Description (11372)	258
Target corrected volume flow (1893)	57
Target mass flow (1864)	56
Target mode	
Analog input 1 to n (6960-1 to n)	181
Discrete input 1 to n (6873-1 to n)	230
Target mode (10728)	151
Target mode (11267)	268
Target mode (11369)	259
Target volume flow (1895)	58
Temp. compensated dynamic viscosity (1872) . .	55
Temp. compensated kinematic viscosity (1863) .	55
Temperature (1853)	53
Temperature coefficient sound velocity (6181) .	84
Temperature damping (1822)	75
Temperature factor (1871)	97
Temperature mode (6184)	86
Temperature offset (1870)	97
Temperature unit (0557)	72
Terminal number	
Current input 1 to n (1611-1 to n)	102
Current output 1 to n (0379-1 to n)	107
Pulse/frequency/switch output 1 to n (0492-1 to n)	122
Relay output 1 to n (0812-1 to n)	143
Status input 1 to n (1358-1 to n)	105
Time Stamp	
Analog input 1 to n (6919-1 to n)	216
Analog input 1 to n (6929-1 to n)	224
Analog input 1 to n (6934-1 to n)	222
Analog input 1 to n (6944-1 to n)	226
Analog input 1 to n (6950-1 to n)	227
Analog input 1 to n (6977-1 to n)	215
Discrete input 1 to n (6849-1 to n)	254
Discrete input 1 to n (6860-1 to n)	255
Discrete input 1 to n (6888-1 to n)	251
Time Stamp (10699)	165
Time Stamp (10739)	163
Time Stamp (10744)	168
Timestamp	281, 282, 284, 285, 286, 287
Totalizer operation mode	
Totalizer 1 to n (0908-1 to n)	277
Totalizer overflow 1 to n (0910-1 to n)	59
Totalizer value 1 to n (0911-1 to n)	59
Transducer State	
Discrete input 1 to n (6891-1 to n)	244
Transducer Status	
Analog input 1 to n (6969-1 to n)	192
Discrete input 1 to n (6880-1 to n)	241
Transducer Value	
Analog input 1 to n (6970-1 to n)	194
Discrete input 1 to n (6881-1 to n)	243
Unacknowledged	
Analog input 1 to n (6914-1 to n)	218
Analog input 1 to n (6920-1 to n)	216
Analog input 1 to n (6930-1 to n)	223
Analog input 1 to n (6935-1 to n)	221
Analog input 1 to n (6945-1 to n)	225

Analog input 1 to n (6951–1 to n)	227	Write Lock (10747)	164
Analog input 1 to n (6978–1 to n)	214	Write Priority (10748)	167
Discrete input 1 to n (6844–1 to n)	252	Zero point (6195)	98
Discrete input 1 to n (6850–1 to n)	254	Zero point adjustment control (6196)	92
Discrete input 1 to n (6861–1 to n)	255	Direct access (Parameter)	11
Discrete input 1 to n (6889–1 to n)	250	Disabled (Parameter)	167, 218, 252
Unacknowledged (10694)	166	Discrete input 1 to n (Submenu)	229
Unacknowledged (10700)	164	Discrete inputs (Submenu)	228
Unacknowledged (10740)	162	Discrete Limit (Parameter)	256
Unacknowledged (10745)	168	Discrete outputs (Submenu)	266
Unit totalizer 1 to n (0915–1 to n)	276	Discrete Priority (Parameter)	257
Units index		Discrete Value (Parameter)	169, 256
Analog input 1 to n (6908–1 to n)	198	Display (Submenu)	14
Analog input 1 to n (6983–1 to n)	195	Display channel 1 (Submenu)	315
Unreported		Display channel 2 (Submenu)	317
Analog input 1 to n (6915–1 to n)	218	Display channel 3 (Submenu)	317
Discrete input 1 to n (6845–1 to n)	253	Display channel 4 (Submenu)	318
Unreported (10695)	166	Display damping (Parameter)	25
Update State		Display interval (Parameter)	24
Analog input 1 to n (6979–1 to n)	215	Display language (Parameter)	15
Discrete input 1 to n (6890–1 to n)	250	Display module (Submenu)	298
Update State (10741)	163	Document	
User name (2715)	172	Explanation of the structure of a parameter	
Value		description	6
Analog input 1 to n (6907–1 to n)	189	Function	4
Analog input 1 to n (6921–1 to n)	217	Structure	4
Analog input 1 to n (6924–1 to n)	214	Symbols used	6
Analog input 1 to n (6965–1 to n)	186	Target group	4
Discrete input 1 to n (6854–1 to n)	238	Using the document	4
Discrete input 1 to n (6856–1 to n)	254	Document function	4
Discrete input 1 to n (6866–1 to n)	249	Dynamic viscosity (Parameter)	54
Discrete input 1 to n (6876–1 to n)	235		
Value (10701)	166	E	
Value 1 display (0107)	18	Electronic temperature (Submenu)	300
Value 2 display (0108)	20	ENP version (Parameter)	294
Value 3 display (0110)	21	Enter access code (Parameter)	13
Value 4 display (0109)	23	Entire logging duration (Parameter)	315
Value current input 1 to n (1609–1 to n)	322	EU at 0% (Parameter)	195, 198
Value current output 1 to n (0355–1 to n)	322	EU at 100% (Parameter)	194, 198
Value per pulse		Event list (Submenu)	288
Pulse/frequency/switch output 1 to n (0455–1 to n)	125	Event logbook (Submenu)	287
Value status input		Extended order code 1 (Parameter)	293
Status input 1 to n (1353–1 to n)	105	Extended order code 2 (Parameter)	293
Value status input 1 to n (1353–1 to n)	61	External compensation (Submenu)	84
Volume flow (1847)	52	External pressure (Parameter)	85
Volume flow factor (1846)	94	External reference density (Parameter)	88
Volume flow offset (1841)	94	External temperature (Parameter)	86
Volume flow unit (0553)	68		
Volume unit (0563)	69	F	
Web server functionality (7222)	179	Factory settings	328
Web server language (7221)	177	SI units	328
WLAN (2702)	171	US units	330
WLAN IP address (2711)	173	Failure current (Parameter)	120
WLAN MAC address (2703)	173	Failure frequency (Parameter)	135
WLAN mode (2717)	171	Failure mode (Parameter)	103, 119, 127, 134, 141, 147, 279
WLAN passphrase (2706)	174	Failure value (Parameter)	104
WLAN password (2716)	172	Fault State (Parameter)	161
WLAN subnet mask (2709)	173	Fault State Status (Parameter)	265, 274

Fault State Time (Parameter)	262, 271	Input (Submenu)	101
Fault State Val 1 (Parameter)	263	Input signal level (Parameter)	321
Fault State Val 2 (Parameter)	263	Input values (Submenu)	60
Fault State Val 3 (Parameter)	263	Installation angle pitch (Parameter)	91
Fault State Val 4 (Parameter)	264	Installation angle roll (Parameter)	91
Fault State Val 5 (Parameter)	264	Installation direction (Parameter)	90
Fault State Val 6 (Parameter)	264	Invert output signal (Parameter)	142
Fault State Val 7 (Parameter)	265	IP address (Parameter)	178
Fault State Val 8 (Parameter)	265	IP address domain name server (Parameter)	176
Fault State Value Discrete 1 (Parameter)	272	ITK Version (Parameter)	170, 292
Fault State Value Discrete 2 (Parameter)	272		
Fault State Value Discrete 3 (Parameter)	272		
Fault State Value Discrete 4 (Parameter)	273		
Fault State Value Discrete 5 (Parameter)	273		
Fault State Value Discrete 6 (Parameter)	273		
Fault State Value Discrete 7 (Parameter)	274		
Fault State Value Discrete 8 (Parameter)	274		
Feature Selection (Parameter)	158		
Features (Parameter)	158	Last backup (Parameter)	28
Filter options (Parameter)	287, 288	Limit Notify (Parameter)	161
Firmware version (Parameter)	292	Linear expansion coefficient (Parameter)	89
Fixed current (Parameter)	110	Linearization Type (Parameter)	209
Fixed reference density (Parameter)	88	Locking status (Parameter)	12
Float Value (Parameter)	223, 225, 226, 228	Logging delay (Parameter)	314
Flow damping (Parameter)	74	Logging interval (Parameter)	312
Flow override (Parameter)	76	Login page (Parameter)	179
Format display (Parameter)	15	Low Cutoff (Parameter)	211
Free Space (Parameter)	160	Low flow cut off (Submenu)	76
Free Time (Parameter)	160	Low Limit (Parameter)	221
Frequency output simulation 1 to n (Parameter)	323	Low Low Limit (Parameter)	221
Frequency value 1 to n (Parameter)	323	Low Low Priority (Parameter)	221
Function		Low Priority (Parameter)	220
see Parameter		Low value partial filled pipe detection (Parameter)	80
G			
Gateway IP address (Parameter)	176		
Grant (Parameter)	156, 207, 245		
H			
Hard Types (Parameter)	157	M	
Hardware revision (Parameter)	292	MAC address (Parameter)	177
Header (Parameter)	25	Manufacturer Id (Parameter)	155
Header text (Parameter)	26	Mass flow (Parameter)	52
Heartbeat (Submenu)	318	Mass flow factor (Parameter)	94
High High Limit (Parameter)	219	Mass flow offset (Parameter)	93
High High Priority (Parameter)	219	Mass flow unit (Parameter)	66
High Limit (Parameter)	220	Mass unit (Parameter)	67
High Priority (Parameter)	220	Max Notify (Parameter)	161
High value partial filled pipe detection (Parameter)	80	Maximum damping partial filled pipe det. (Parameter)	81
I		Maximum frequency value (Parameter)	130
I/O configuration (Submenu)	99	Maximum value (Parameter)	300, 301, 302, 303, 304, 305, 306, 307, 308, 309
I/O module 1 (Submenu)	296	Measured current 1 to n (Parameter)	61, 121
I/O module 1 terminal numbers (Parameter)	296, 297	Measured values (Submenu)	51
I/O module 1 to n information (Parameter)	99	Measured values 1 to n (Parameter)	61
I/O module 1 to n terminal numbers (Parameter)	99	Measurement mode (Submenu)	82
I/O module 1 to n type (Parameter)	100	Measuring mode (Parameter)	113, 126, 131
I/O module 2 (Submenu)	297	Measuring value at maximum frequency (Parameter)	130
I/O Options (Parameter)	207, 245	Measuring value at minimum frequency (Parameter)	130
		Medium temperature (Submenu)	301
		Memory Size (Parameter)	159
		Min/max values (Submenu)	299
		Minimum frequency value (Parameter)	129

Minimum value (Parameter)	300, 301, 302, 303, 304, 305, 306, 307, 308, 309
Minumum Cycle Time (Parameter)	159
Multi-frequency activation (Parameter)	82
Multiple analog output (Submenu)	257
Multiple discrete output (Submenu)	266

N

Network security (Parameter)	172
Nominal diameter (Parameter)	98
Nonvolatile Cycle Time (Parameter)	159
Normal mode (Parameter)	153, 183, 232, 260, 269

O

Off value low flow cutoff (Parameter)	77
On value low flow cutoff (Parameter)	77
Operating mode (Parameter)	123
Operating time (Parameter)	28, 47, 283
Operating time from restart (Parameter)	282
Order code (Parameter)	293
Oscillation amplitude (Submenu)	305
Oscillation damping (Submenu)	306
Oscillation frequency (Submenu)	303
Output (Submenu)	106
Output current 1 to n (Parameter)	120
Output frequency 1 to n (Parameter)	135
Output State (Parameter)	245
Output values (Submenu)	62

P

Parameter	
Structure of a parameter description	6
Partially filled pipe detection (Submenu)	79
Permitted mode (Parameter)	152, 182, 231, 260, 269
Powerless relay status (Parameter)	148
Preset value 1 to n (Parameter)	278
Pressure compensation (Parameter)	84
Pressure shock suppression (Parameter)	78
Pressure unit (Parameter)	73
Pressure value (Parameter)	54, 85
Previous diagnostics (Parameter)	282
Process parameters (Submenu)	74
Process Value Filter Time (Parameter)	214, 247
Process variable adjustment (Submenu)	93
Process variable value (Parameter)	320
Process variables (Submenu)	51
Progress (Parameter)	93
Pulse output 1 to n (Parameter)	128
Pulse output simulation 1 to n (Parameter)	324
Pulse value 1 to n (Parameter)	324
Pulse width (Parameter)	126
Pulse/frequency/switch output 1 to n (Submenu)	63, 121

R

Received signal strength (Parameter)	175
Reference density (Parameter)	53
Reference density factor (Parameter)	96
Reference density offset (Parameter)	96
Reference density unit (Parameter)	71

Reference sound velocity (Parameter)	83
Reference temperature (Parameter)	89
Relative Index (Parameter)	163, 215, 251
Relay output 1 to n (Submenu)	65, 142
Relay output 1 to n simulation (Parameter)	325
Relay output function (Parameter)	143
Reset access code (Parameter)	47
Reset access code (Submenu)	47
Reset all totalizers (Parameter)	275
Reset min/max values (Parameter)	299
Resource block (Submenu)	149
Resource State (Parameter)	154
Response time (Parameter)	118, 133
Response time part. filled pipe detect. (Parameter)	81
Response time status input (Parameter)	106
Restart (Parameter)	157

S

Security identification (Parameter)	172
Security type (Parameter)	172
Select antenna (Parameter)	175
Select gas type (Parameter)	83
Select medium (Parameter)	82
Sensor (Submenu)	50
Sensor adjustment (Submenu)	90
Sensor electronic module (ISEM) (Submenu)	295
Separator (Parameter)	26
Serial number (Parameter)	291
Service reset (Parameter)	157
Set Fault State (Parameter)	161
Shed Remote Cascade (Parameter)	162
Shed Remote Out (Parameter)	162
Signal asymmetry (Submenu)	308
Signal mode (Parameter)	102, 108, 123
Simulate En/Disable (Parameter)	194, 244
Simulate Status (Parameter)	189, 238
Simulate Value (Parameter)	191, 241
Simulation (Submenu)	318
Software option overview (Parameter)	49
Software revision (Parameter)	296, 297, 298
Square expansion coefficient (Parameter)	90
SSID name (Parameter)	171, 174
Static revision (Parameter)	163, 215, 251
Static Revision (Parameter)	150, 180, 229, 258, 267
Status (Parameter)	184, 186, 211, 232, 235, 247
Status input 1 to n (Submenu)	104
Status input simulation (Parameter)	320
Status Options (Parameter)	208, 246, 261, 270
Strategy (Parameter)	150, 181, 230, 258, 267
Subcode (Parameter)	165, 169, 217, 222, 224, 226, 228, 253, 255
Submenu	
Administration	45
Analog input 1 to n	180
Analog inputs	179
Analog outputs	257
Application	275
Calculated values	87
Calibration	97

Carrier pipe temperature	302	System units	66
Communication	148	Torsion oscillation amplitude	305
Concentration	280	Torsion oscillation damping	307
Configuration backup	27	Torsion oscillation frequency	304
Corrected volume flow calculation	87	Torsion signal asymmetry	308
Current input 1 to n	60, 101	Totalizer	59
Current output 1 to n	107	Totalizer 1 to n	275
Data logging	309	Value current output 1 to n	62
Device information	289	Value status input 1 to n	61
Diagnostic behavior	31	Viscosity	279
Diagnostic handling	30	Web server	176
Diagnostic list	283	WLAN settings	170
Diagnostics	280	Zero point adjustment	92
Discrete input 1 to n	229	Subnet mask (Parameter)	178
Discrete inputs	228	Switch output function (Parameter)	135
Discrete outputs	266	Switch output simulation 1 to n (Parameter)	324
Display	14	Switch status (Parameter)	148
Display channel 1	315	Switch status 1 to n (Parameter)	141, 325, 326
Display channel 2	317	Switch-off delay (Parameter)	140, 146
Display channel 3	317	Switch-off value (Parameter)	139, 146
Display channel 4	318	Switch-on delay (Parameter)	140, 147
Display module	298	Switch-on value (Parameter)	138, 146
Electronic temperature	300	System (Submenu)	13
Event list	288	System units (Submenu)	66
Event logbook	287		
External compensation	84		
Heartbeat	318		
I/O configuration	99		
I/O module 1	296		
I/O module 2	297		
Input	101		
Input values	60		
Low flow cut off	76		
Measured values	51		
Measurement mode	82		
Medium temperature	301		
Min/max values	299		
Multiple analog output	257		
Multiple discrete output	266		
Oscillation amplitude	305		
Oscillation damping	306		
Oscillation frequency	303		
Output	106		
Output values	62		
Partially filled pipe detection	79		
Process parameters	74		
Process variable adjustment	93		
Process variables	51		
Pulse/frequency/switch output 1 to n	63, 121		
Relay output 1 to n	65, 142		
Reset access code	47		
Resource block	149		
Sensor	50		
Sensor adjustment	90		
Sensor electronic module (ISEM)	295		
Signal asymmetry	308		
Simulation	318		
Status input 1 to n	104		
System	13		

T

Tag Description (Parameter)	150, 181, 229, 258, 267
Target corrected volume flow (Parameter)	57
Target group	4
Target mass flow (Parameter)	56
Target mode (Parameter)	151, 181, 230, 259, 268
Target volume flow (Parameter)	58
Temp. compensated dynamic viscosity (Parameter)	55
Temp. compensated kinematic viscosity (Parameter)	55
Temperature (Parameter)	53
Temperature coefficient sound velocity (Parameter)	84
Temperature damping (Parameter)	75
Temperature factor (Parameter)	97
Temperature mode (Parameter)	86
Temperature offset (Parameter)	97
Temperature unit (Parameter)	72
Terminal number (Parameter)	102, 105, 107, 122, 143
Time Stamp (Parameter)	163, 165, 168, 215, 216, 222, 224, 226, 227, 251, 254, 255
Timestamp (Parameter)	281, 282, 284, 285, 286, 287
Torsion oscillation amplitude (Submenu)	305
Torsion oscillation damping (Submenu)	307
Torsion oscillation frequency (Submenu)	304
Torsion signal asymmetry (Submenu)	308
Totalizer (Submenu)	59
Totalizer 1 to n (Submenu)	275
Totalizer operation mode (Parameter)	277
Totalizer overflow 1 to n (Parameter)	59
Totalizer value 1 to n (Parameter)	59
Transducer State (Parameter)	244
Transducer Status (Parameter)	192, 241
Transducer Value (Parameter)	194, 243

U

Unacknowledged (Parameter)	162, 164, 166, 168, 214, 216, 218, 221, 223, 225, 227, 250, 252, 254, 255
Unit totalizer 1 to n (Parameter)	276
Units index (Parameter)	195, 198
Unreported (Parameter)	166, 218, 253
Update State (Parameter)	163, 215, 250
User name (Parameter)	172

V

Value (Parameter)	166, 186, 189, 214, 217, 235, 238, 249, 254
Value 1 display (Parameter)	18
Value 2 display (Parameter)	20
Value 3 display (Parameter)	21
Value 4 display (Parameter)	23
Value current input 1 to n (Parameter)	322
Value current output 1 to n (Parameter)	322
Value current output 1 to n (Submenu)	62
Value per pulse (Parameter)	125
Value status input (Parameter)	61, 105
Value status input 1 to n (Submenu)	61
Viscosity (Submenu)	279
Volume flow (Parameter)	52
Volume flow factor (Parameter)	94
Volume flow offset (Parameter)	94
Volume flow unit (Parameter)	68
Volume unit (Parameter)	69

W

Web server (Submenu)	176
Web server functionality (Parameter)	179
Web server language (Parameter)	177
Wizard	
Define access code	46
WLAN (Parameter)	171
WLAN IP address (Parameter)	173
WLAN MAC address (Parameter)	173
WLAN mode (Parameter)	171
WLAN passphrase (Parameter)	174
WLAN password (Parameter)	172
WLAN settings (Submenu)	170
WLAN subnet mask (Parameter)	173
Write Lock (Parameter)	164
Write Priority (Parameter)	167

Z

Zero point (Parameter)	98
Zero point adjustment (Submenu)	92
Zero point adjustment control (Parameter)	92

www.addresses.endress.com
