
Valid as of version 01.02 (device version)

# Operating Instructions **Temperature Transmitter**

Dual-input temperature transmitter with HART® protocol







# Table of contents

1	Important document information 4	
1.1 1.2 1.3 1.4	Function of document and how to use 4 Symbols 4 Tool symbols	
2	Basic safety instructions 7	
2.1 2.2 2.3	Requirements for the personnel	
3	Incoming acceptance and product	
	identification 8	
3.1 3.2 3.3 3.4 3.5	Incoming acceptance8Nameplate8Scope of delivery9Certificates and approvals9Transport and storage10	
4	Installation	
4.1 4.2 4.3	Installation conditions11Installation11Post-installation check16	
5	Electrical connection	
5.1 5.2 5.3 5.4 5.5 5.6	Connection conditions17Quick wiring guide17Connecting the sensor cables18Connecting the transmitter19Special connection instructions20Post-connection check21	
6	Operating options	
6.1 6.2	Overview of operation options	
6.3	Measured value display and operating	
6.4	elements	
7	Integrating transmitter using	
	HART® protocol 28	
7.1	HART device variables and measured values 28	
7.2 7.3	Device variables and measured values 28 Supported HART® commands 29	
8	Commissioning 31	
8.1 8.2	Post-installation check	

8.3	Enabling configuration	31
9	Maintenance	31
10	Accessories	32
11.1 11.2 11.3 11.4 11.5 11.6	Diagnostics and troubleshooting	33 33 35 38 39 39
12	compatibility	39 <b>40</b>
14	i Cumicai data	
12.1 12.2 12.3 12.4 12.5 12.6 12.7 12.8	Input	40 41 42 43 50 51 54 55
12.2 12.3 12.4 12.5 12.6 12.7	Input	40 41 42 43 50 51 54 55
12.2 12.3 12.4 12.5 12.6 12.7 12.8	Input Output Power supply Performance characteristics Environment Mechanical construction Certificates and approvals Documentation  Operating menu and parameter	40 41 42 43 50 51 54

# 1 Important document information

#### 1.1 Function of document and how to use

#### 1.1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

#### 1.1.2 Safety instructions

When using in hazardous areas, compliance with national regulations is mandatory. Separate Ex-specific documentation is provided for measuring systems that are used in hazardous areas. This documentation is an integral part of these Operating Instructions. The installation specifications, connection data and safety instructions it contains must be strictly observed! Make sure that you use the right Ex-specific documentation for the right device with approval for use in hazardous areas!

# 1.2 Symbols

#### 1.2.1 Safety symbols

Symbol	Meaning
DANGER A0011189-EN	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
A0011191-EN	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE A0011192-EN	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

#### 1.2.2 Electrical symbols

Symbol	Meaning
A0011197	Direct current A terminal to which DC voltage is applied or through which direct current flows.
A0011198	Alternating current A terminal to which alternating voltage (sine-wave) is applied or through which alternating current flows.
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
A0011199	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
A0011201	<b>Equipotential connection</b> A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

# 1.2.3 Symbols and notation for certain types of information

Symbol	Meaning
A0011182	Allowed Indicates procedures, processes or actions that are allowed.
A0011183	Preferred Indicates procedures, processes or actions that are preferred.
A0011184	<b>Forbidden</b> Indicates procedures, processes or actions that are forbidden.
A0011193	Tip Indicates additional information.
A0011194	Reference to documentation Refers to the corresponding device documentation.
A0011195	Reference to page Refers to the corresponding page number.
A0011196	Reference to graphic Refers to the corresponding graphic number and page number.
1., 2., 3.	Series of steps
V	Result of a sequence of actions

# 1.2.4 Symbols and notation in graphics

Symbol	Meaning
1,2,3	Item numbers
A, B, C,	Views
A-A, B-B, C-C,	Sections
A0011187	Hazardous area Indicates a hazardous area.
A0011188	Safe area (non-hazardous area) Indicates the non-hazardous area.

# 1.3 Tool symbols

Symbol	Meaning
0 A0011220	Flat blade screwdriver
<b>1</b>	Crosstip screwdriver
A0011219	Allen key
A0011221	Open-ended wrench
A0011222	Torx screwdriver
A0013442	

# 1.4 Registered trademarks

HART®

Registered trademark of the HART® FieldComm Group

# 2 Basic safety instructions

# 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ► Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ► Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ► Following the instructions in these Operating Instructions

#### 2.2 Designated use

The device is a universal and user-configurable temperature transmitter with either one or two sensor inputs for for a resistance thermometer (RTD), thermocouples (TC), resistance and voltage transmitters. The head transmitter version of the device is intended for mounting in a terminal head (flat face) as per DIN EN 50446. It is also possible to mount the device on a DIN rail using the optional DIN rail clip. The device is also optionally available in a version suitable for DIN rail mounting as per IEC 60715 (TH35).

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

The manufacturer is not liable for damage caused by improper or non-designated use.

# 2.3 Operational safety

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

#### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.q. explosion protection or safety equipment):

- ▶ Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

#### Electromagnetic compatibility

The measuring system complies with the general safety requirements as per EN 61010-1, the EMC requirements as per the IEC/EN 61326 series and the NAMUR recommendations NE 21.


#### NOTICE

► The device must only be powered by a power unit that operates using an energy-limited electric circuit according to UL/EN/IEC 61010-1, chapter 9.4 and requirements of table 18.


# 3 Incoming acceptance and product identification

#### 3.1 Incoming acceptance

- 1. Unpack the temperature transmitter carefully. Is the packaging or content damaged?
  - Damaged components may not be installed as the manufacturer can otherwise not guarantee compliance with the original safety requirements or the material resistance, and can therefore not be held responsible for any resulting damage.
- 2. Is the delivery complete or is anything missing? Check the scope of delivery against your order.

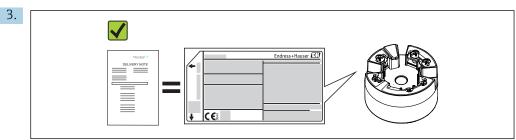

Does the nameplate match the ordering information on the delivery note?

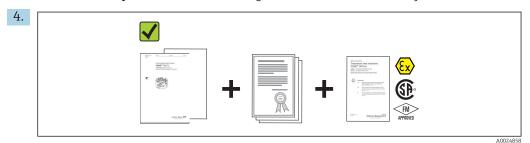


Are the technical documentation and all other necessary documents provided? If applicable: are the Safety Instructions (e.g. XA) for hazardous areas provided?

# 3.2 Nameplate


#### The right device?

Compare and check the data on the nameplate of the device against the requirements of the measuring point:

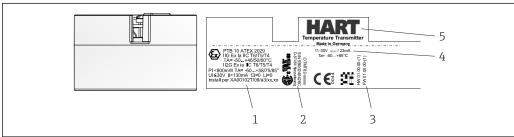

A001615

- 1 Nameplate of the head transmitter (example)
- 1 Approval in hazardous areas with technical data
- 2 Order code and serial number as well as approval logos
- 3 Firmware version and device revision
- 4 Power supply and current consumption
- 5 Product name and HART logo

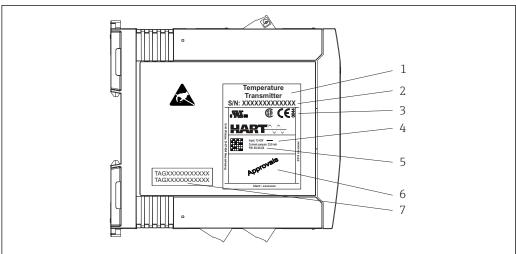

A0025896

■ 2 Nameplate of DIN rail transmitter (example)

- 1 Product designation
- 2 Serial number
- 3 Approval logos
- 4 Power supply and current consumption
- 5 Firmware version
- 6 Approval in hazardous areas
- 7 2 lines for the TAG name

#### 3.2.1 Name and address of manufacturer

Name of manufacturer:	Endress+Hauser Wetzer GmbH + Co. KG
Address of manufacturer:	Obere Wank 1, D-87484 Nesselwang or www.endress.com

# 3.3 Scope of delivery

The scope of delivery of the device comprises:

- Temperature transmitter
- Mounting material (head transmitter)
- Operating Instructions
- Additional documentation for devices which are suitable for use in the hazardous area (ATEX, FM, CSA).

# 3.4 Certificates and approvals

The device left the factory in a safe operating condition. The device complies with the requirements of the standards EN 61 010-1 "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use" and with the EMC requirements as per the IEC/EN 61326 series.

#### 3.4.1 CE/EAC mark, Declaration of Conformity

The device meets the legal requirements of the EU/EEU guidelines. The manufacturer confirms that the device is compliant with the relevant guidelines by applying the CE/EAC mark.

#### 3.4.2 HART® protocol certification

The temperature transmitter is registered by the HART $^{\circ}$  FieldComm Group. The device meets the requirements of the HART $^{\circ}$  Communication Protocol Specifications, Revision 7 (HCF 7.6).


#### 3.4.3 Functional safety

The two device versions (head transmitter/DIN rail device) are optionally available for use in safety systems as per IEC 61508.

- SIL 2: Hardware version
- SIL 3: Software version

# 3.5 Transport and storage

Carefully remove all the packaging material and protective covers that are part of the transported package.



When storing (and transporting) the device, pack it so that it is reliably protected against impact. The original packaging offers the best protection.

#### Storage temperature

- Head transmitter: -50 to +100 °C (-58 to +212 °F) Option: -52 to +85 °C (-62 to +185 °F), Product Configurator, order code for "Test, Certificate, Declaration", option "JN"
- DIN rail device: -40 to +100 °C (-40 to +212 °F)

#### 4 Installation

#### 4.1 Installation conditions

#### 4.1.1 Dimensions

The dimensions of the device are provided in the "Technical data" section  $\rightarrow \triangleq 40$ .

#### 4.1.2 Mounting location

- Head transmitter:
  - In the terminal head, flat face, as per DIN EN 50446, direct mounting on insert with cable entry (middle hole 7 mm)
  - In the field housing, separated from the process
- DIN rail transmitter:

Designed for mounting on DIN rail (IEC 60715 TH35).

It is also possible to mount the head transmitter on a DIN rail as per IEC 60715 using the DIN rail clip as accessory.

When using in hazardous areas, the limit values of the certificates and approvals must be observed (see Ex Safety Instructions).

#### 4.2 Installation


A Phillips head screwdriver is required to mount the head transmitter.

#### NOTICE

Do not overtighten the mounting screws as this could damage the head transmitter.

► Maximum torque = 1 Nm (¾ pound-feet).

## 4.2.1 Mounting the head transmitter

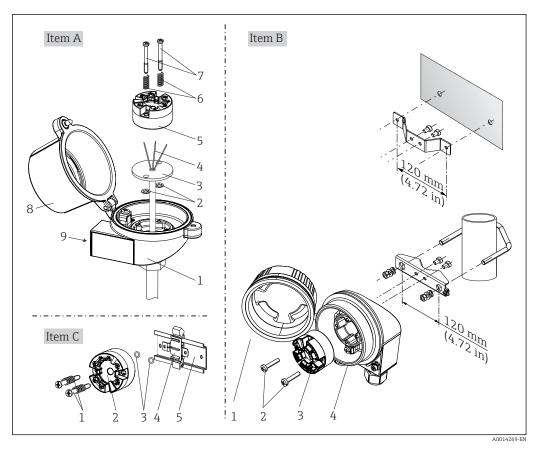


■ 3 Head transmitter mounting (three versions)

Item A	Mounting in a terminal head (terminal head flat face as per DIN 43729)
1	Terminal head
2	Circlips
3	Insert
4	Connection wires
5	Head transmitter
6	Mounting springs
7	Mounting screws
8	Terminal head cover
9	Cable entry

Procedure for mounting in a terminal head, pos. A:

- 1. Open the terminal head cover (8) on the terminal head.
- 2. Guide the connection wires (4) of the insert (3) through the center hole in the head transmitter (5).
- 3. Fit the mounting springs (6) on the mounting screws (7).
- 4. Guide the mounting screws (7) through the side boreholes of the head transmitter and the insert (3). Then fix both mounting screws with the snap rings (2).
- 5. Then tighten the head transmitter (5) along with the insert (3) in the terminal head.
- 6. After wiring  $\rightarrow \equiv 17$ , close the terminal head cover (8) tightly again.

Item B	Mounting in a field housing
1	Field housing cover
2	Mounting screws with springs
3	Head transmitter
5	Field housing

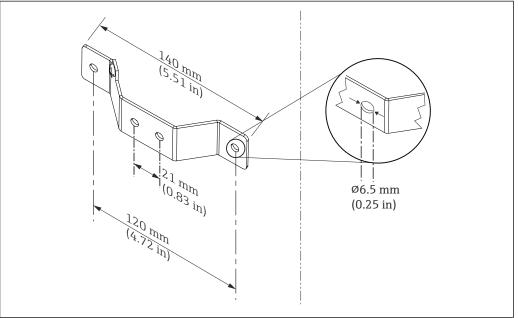

A0024604

 $\blacksquare$  4 Dimensions of angle bracket for wall mount (complete wall mounting set available as accessory)

Procedure for mounting in a field housing, pos. B:


- 1. Open the cover (1) of the field housing (4).
- 2. Guide the mounting screws (2) through the lateral bores in the head transmitter (3).
- 3. Screw the head transmitter to the field housing.
- 4. After wiring, close the field housing cover  $(1) \rightarrow \square$  17again.

Item C	Mounting on DIN rail (DIN rail as per IEC 60715)
1	Mounting screws with springs
2	Head transmitter
3	Circlips
4	DIN rail clip
5	DIN rail

Procedure for mounting on a DIN rail, pos. C:

- 1. Press the DIN rail clip (4) onto the DIN rail (5) until it engages with a click.
- 2. Fit the mounting springs on the mounting screws (1) and guide the screws through the side boreholes of the head transmitter (2). Then fix both mounting screws with the snap rings (3).
- 3. Screw the head transmitter (2) onto the DIN rail clip (4).

#### Mounting typical of North America

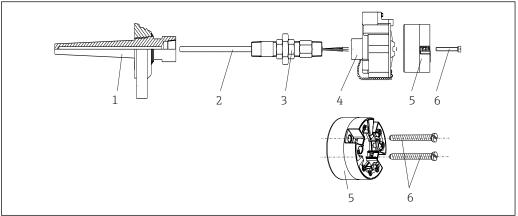

A0008520

- 5 Head transmitter mounting
- 1 Thermowell
- 2 Insert
- 3 Adapter, coupling
- 4 Terminal head
- 5 Head transmitter
- 6 Mounting screws

Thermometer design with thermocouples or RTD sensors and head transmitter:


- 1. Fit the thermowell (1) on the process pipe or the container wall. Secure the thermowell according to the instructions before the process pressure is applied.
- 2. Fit the necessary neck tube nipples and adapter (3) on the thermowell.
- 3. Make sure sealing rings are installed if such rings are needed for harsh environmental conditions or special regulations.
- 4. Guide the mounting screws (6) through the lateral bores of the head transmitter (5).
- 5. Position the head transmitter (5) in the terminal head (4) in such a way that the bus cable (terminals 1 and 2) point to the cable entry.
- 6. Using a screwdriver, screw down the head transmitter (5) in the terminal head (4).
- 7. Guide the connection wires of the insert (3) through the lower cable entry of the terminal head (4) and through the middle hole in the head transmitter (5). Wire the connection wires up to the transmitter  $\rightarrow \implies 17$ .
- 8. Screw the terminal head (4), with the integrated and wired head transmitter, onto the ready-mounted nipple and adapter (3).

#### NOTICE

The terminal head cover must be secured properly to meet the requirements for explosion protection.

▶ After wiring, securely screw the terminal head cover back on.

#### Mounting the display on the head transmitter

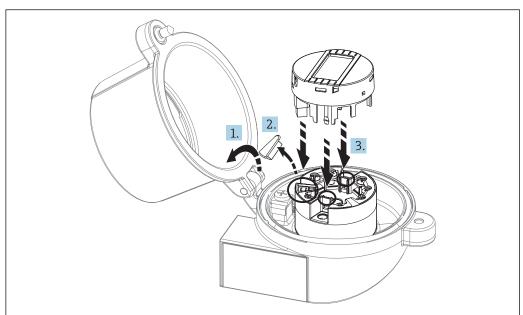

A000985

- 6 Mounting the display
- 1. Loosen the screw on the terminal head cover. Flip back the terminal head cover.
- 2. Remove the cover of the display connection area.
- 3. Fit the display module onto the mounted and wired head transmitter. The fastening pins must click securely into place on the head transmitter. After mounting, securely tighten the terminal head cover.
- The display can be used only with the appropriate terminal heads cover with viewing window (e.g. TA30 from Endress+Hauser).


#### 4.2.2 Mounting the DIN rail transmitter

#### NOTICE

#### Wrong orientation

Measurement deviates from the maximum accuracy rating when a thermocouple is connected and the internal reference junction is used.

► Mount the device vertically and ensure it is oriented correctly (sensor connection at bottom / power supply at top)!

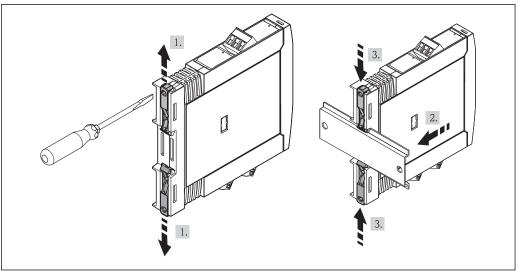

A001782

- 7 Mounting the DIN rail transmitter
- 1. Slide the upper DIN rail clip upwards and the lower clip downwards until they click into place.
- 2. Fit the device on the DIN rail from the front.
- 3. Slide the two DIN rail clips back together until they click into place.

# 4.3 Post-installation check

After installing the device, always run the following final checks:

Device condition and specifications	Notes
Is the device undamaged (visual inspection)?	-
Do the ambient conditions match the device specification (e.g. ambient temperature, measuring range, etc.)?	See Technical data' section→ 🗎 40

#### 5 Electrical connection

#### **A** CAUTION

- ► Switch off the power supply before installing or connecting the device. Not conforming with this can lead to the destruction of electronic components.
- ▶ Do not occupy the display connection. An incorrect connection can destroy the electronics.

#### 5.1 Connection conditions


A Phillips head screwdriver is required to wire the head transmitter with screw terminals. Use a flat blade screwdriver for the DIN rail housing version with screw terminals. The push-in terminal version can be wired without any tools.

Proceed as follows to wire a mounted head transmitter:


- 1. Open the cable gland and the housing cover on the terminal head or the field housing.
- 2. Feed the cables through the opening in the cable gland.
- 4. Tighten the cable gland again and close the housing cover.

In order to avoid connection errors always follow the instructions in the post-connection check section before commissioning!

# 5.2 Quick wiring quide

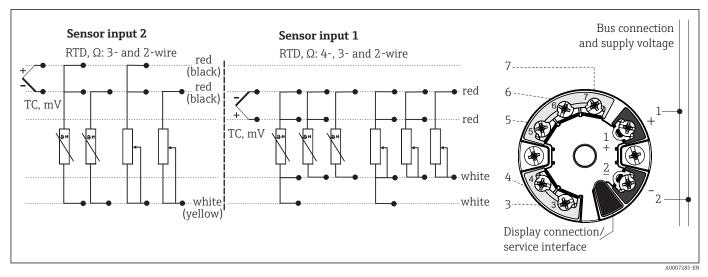

■ 8 Terminal assignment of head transmitter

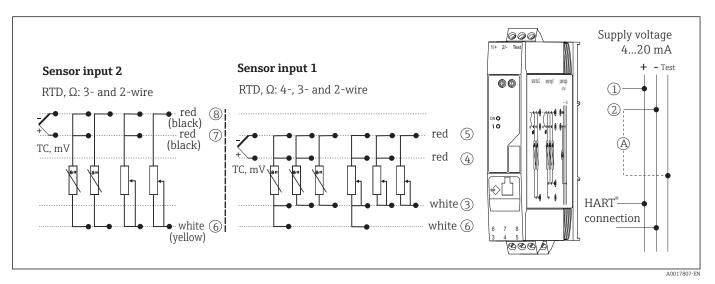

- $\blacksquare$  9 Terminal assignment of the DIN rail device
- A To check the output current, an ammeter (DC measurement) can be connected between the "Test" and "." terminals.

A minimum load of 250  $\Omega$  is required in the signal circuit in order to operate the HART<sup>®</sup> transmitter via the HART<sup>®</sup> protocol (terminals 1 and 2).

#### NOTICE

► ▲ ESD - electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

# 5.3 Connecting the sensor cables

Terminal assignment of the sensor connections.

#### NOTICE


When connecting 2 sensors ensure that there is no galvanic connection between the sensors (e.g. caused by sensor elements that are not isolated from the thermowell). The resulting equalizing currents distort the measurements considerably.

► The sensors must remain galvanically isolated from one another by connecting each sensor separately to a transmitter. The transmitter provides sufficient galvanic isolation (> 2 kV AC) between the input and output.

The following connection combinations are possible when both sensor inputs are assigned:

	Sensor input 1				
		RTD or resistance transmitter, 2-wire	RTD or resistance transmitter, 3-wire	RTD or resistance transmitter, 4-wire	Thermocouple (TC), voltage transmitter
	RTD or resistance transmitter, 2-wire	V	V	-	V
Sensor input 2	RTD or resistance transmitter, 3-wire	V	V	-	V
	RTD or resistance transmitter, 4-wire	-	-	-	-
	Thermocouple (TC), voltage transmitter	V	V	V	V

#### 5.3.1 Connecting to push-in terminals

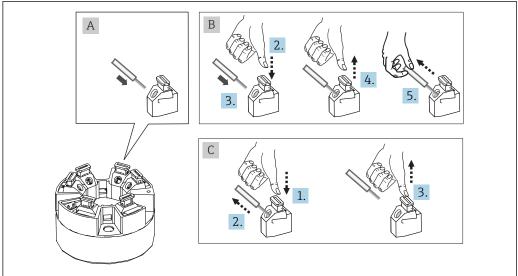

A0039468

 $lacktriangledown 10^{\circ}$  Push-in terminal connection, using the example of a head transmitter

#### Fig. A, solid wire:

- 1. Strip wire end. Min. stripping length 10 mm (0.39 in).
- 2. Insert the wire end into the terminal.
- 3. Pull the wire gently to ensure it is connected correctly. Repeat from step 1 if necessary.

#### Fig. B, fine-strand wire without ferrule:

- 1. Strip wire end. Min. stripping length 10 mm (0.39 in).
- 2. Press down on the lever opener.
- 3. Insert the wire end into the terminal.
- 4. Release lever opener.
- 5. Pull the wire gently to ensure it is connected correctly. Repeat from step 1 if necessary.

#### Fig. C, releasing the connection:


- 1. Press down on the lever opener.
- 2. Remove the wire from the terminal.
- 3. Release lever opener.

# 5.4 Connecting the transmitter

#### Cable specification

- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended for HART® communication. Observe grounding concept of the plant.
- In the case of the DIN rail version, a shielded cable must be used if the sensor cable length exceeds 30 m (98.4 ft). The use of shielded sensor cables is generally recommended.

Please also observe the general procedure on  $\rightarrow$   $\square$  17.

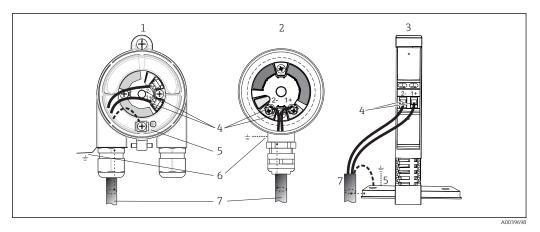


 $\blacksquare 11$  Connecting the signal cables and power supply

- 1 Head transmitter installed in field housing
- 2 Head transmitter installed in terminal head
- 3 DIN rail transmitter mounted on DIN rail
- 4 Terminals for HART® protocol and power supply
- 5 Internal ground connection
- 6 External ground connection
- 7 Shielded signal cable (recommended for HART® protocol)
- The terminals for signal cable connection (1+ and 2-) are protected against reverse polarity.
  - Conductor cross-section:
    - Max. 2.5 mm<sup>2</sup> for screw terminals
    - Max. 1.5 mm² for push-in terminals. Min. stripping length of cable 10 mm (0.39 in).

# 5.5 Special connection instructions

#### Shielding and grounding

The specifications of the  $HART^{\circ}$  FieldComm Group must be observed when installing a  $HART^{\circ}$  transmitter.

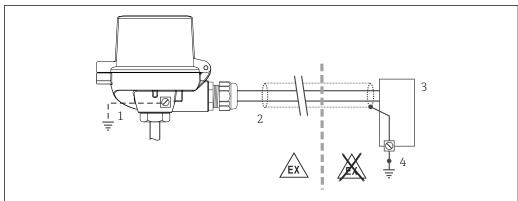

A001446


- $\blacksquare$  12 Shielding and grounding the signal cable at one end with HART $^{\circ}$  communication
- 1 Optional grounding of the field device, isolated from cable shielding
- 2 Grounding of the cable shield at one end
- 3 Supply unit
- 4 Grounding point for HART® communication cable shield

# 5.6 Post-connection check

Device condition and specifications	Notes
Is the device or cable undamaged (visual check)?	
Electrical connection	Notes
Does the supply voltage match the information on the nameplate?	<ul> <li>Head transmitter: U = 11 to 42 V<sub>DC</sub></li> <li>DIN rail transmitter: U = 12 to 42 V<sub>DC</sub></li> <li>SIL mode: U = 11 to 32 V<sub>DC</sub> for the head transmitter or U = 12 to 32 V<sub>DC</sub> for the DIN rail transmitter</li> <li>Other values apply in the hazardous area, see the corresponding Ex Safety Instructions (XA).</li> </ul>
Are the mounted cables relieved of tension?	
Are the power supply and signal cables connected correctly?	→ 🖺 17
Are all the screw terminals well tightened and have the connections of the push-in terminals been checked?	
Are all the cable entries installed, tightened and sealed?	
Are all housing covers installed and firmly tightened?	

# **6** Operating options

# 6.1 Overview of operation options

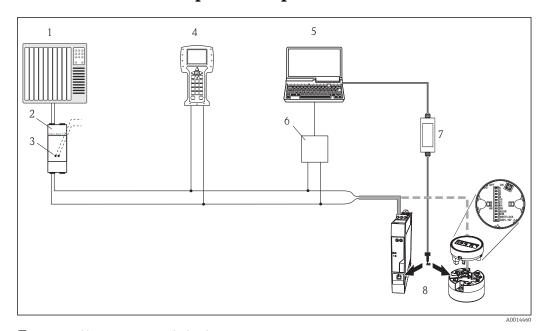


■ 13 Possible ways to operate the head transmitter

- 1 PLC (programmable logic controller)
- 2 Transmitter power supply unit (with integrated communication resistor)
- 3 Connection for HART® modems
- 4 Field Communicator 375, 475
- 5 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 HART® modem, e.g. FXA19x, RS232 or USB connection (from Endress+Hauser)
- 7 Interface adapter FXA291 or TXU10 (from Endress+Hauser ) for connecting to the CDI (Common Data Interface)
- 8 Temperature transmitter as head transmitter or DIN rail device, local operation via DIP switches on rear of optional display possible only for head transmitter
- For the head transmitter, display and operating elements are available locally only if the head transmitter was ordered with a display unit!

# 6.2 Structure and function of the operating menu

#### 6.2.1 Structure of the operating menu

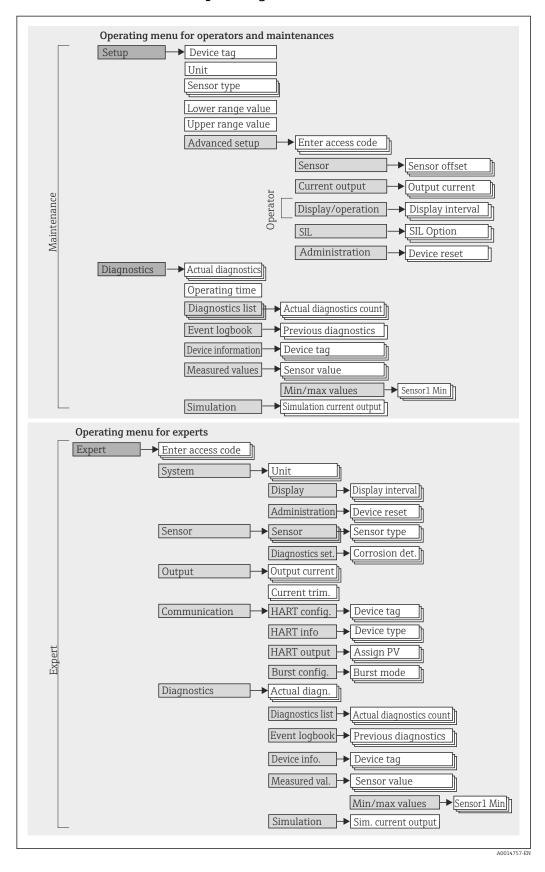

#### Submenus and user roles


Certain parts of the menu are assigned to certain user roles. Each user role corresponds to typical tasks within the lifecycle of the device.

User role	Typical tasks	Menu	Content/meaning
Maintenance Operator	Commissioning: Configuration of the measurement. Configuration of data processing (scaling, linearization, etc.). Configuration of the analog measured value output. Tasks during operation: Configuration of the display. Reading measured values.	"Setup"	Contains all parameters for commissioning:  Setup parameters Once values have been set for these parameters, the measurement should generally be completely configured.  "Extended Setup" submenu Contains additional submenus and parameters: For more accurate configuration of the measurement (adaptation to special measuring conditions).  For converting the measured value (scaling, linearization).  For scaling the output signal. Required in ongoing operation: configuration of the measured value display (displayed values, display format, etc.).
	Fault elimination:  Diagnosing and eliminating process errors.  Interpretation of device error messages and correcting associated errors.	"Diagnostics"	Contains all parameters for detecting and analyzing errors:  Diagnostic list Contains up to 3 currently pending error messages.  Event logbook Contains the last 5 error messages (no longer pending).  "Device information" submenu Contains information for identifying the device.  "Measured values" submenu Contains all current measured values.  "Simulation" submenu Is used to simulate measured values or output values.  "Device reset" submenu
Expert	Tasks that require detailed knowledge of the function of the device:  Commissioning measurements under difficult conditions.  Optimal adaptation of the measurement to difficult conditions.  Detailed configuration of the communication interface.  Error diagnostics in difficult cases.	"Expert"	Contains all parameters of the device (including those that are already in one of the other menus). The structure of this menu is based on the function blocks of the device:  "System" submenu Contains all higher-order device parameters that do not pertain either to measurement or the measured value communication.  "Sensor" submenu Contains all parameters for configuring the measurement.  "Output" submenu Contains all parameters for configuring the analog current output.  "Communication" submenu Contains all parameters for configuring the digital communication interface.  "Diagnostics" submenu Contains all parameters for detecting and analyzing errors.

# 6.3 Measured value display and operating elements

# 6.3.1 Display elements

Head transmitter

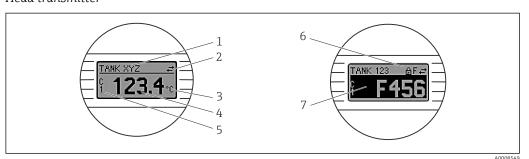

■ 14 Optional LC display for head transmitter

Item no.	Function	Description
1	Displays the TAG	TAG, 32 characters long.
2	'Communication' symbol	The communication symbol appears when read and write-accessing via the fieldbus protocol.
3	Unit display	Unit display for the measured value displayed.
4	measured value display	Displays the current measured value.
5	Value/channel display S1, S2, DT, PV, I, %	e.g. S1 for a measured value from channel 1 or DT for the device temperature
6	'Configuration locked' symbol	The 'configuration locked' symbol appears when configuration is locked via the hardware.
7	Status signals	
	Symbols	Meaning
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid. The display alternates between the error message and "" (no valid measured value present), see "Diagnostics events" section.
	С	"Service mode" The device is in service mode (e.g. during a simulation).
	s	"Out of specification" The device is being operated outside its technical specifications (e.g. during warm-up or cleaning processes).
	М	"Maintenance required" Maintenance is required. The measured value is still valid.
		The display alternates between the measured value and the status message.

#### DIN rail transmitter

The DIN rail transmitter version does not have an interface to the LC display and therefore does not have a local display either.

Two LEDs on the front indicate the device status.

Туре	Function and characteristic
Status LED (red)	When the device is operating without errors, the device status is displayed. This function can no longer be guaranteed in the event of an error.
	<ul> <li>LED off: without diagnostic message</li> <li>LED is lit: diagnostics display, category F</li> <li>LED flashing: diagnostics display of categories C, S or M</li> </ul>
Power LED (green) 'ON'	When the device is operating without errors, the operating status is displayed. This function can no longer be guaranteed in the event of an error.
	<ul> <li>LED off: Power failure or insufficient supply voltage</li> <li>LED is lit: Supply voltage is OK (either via CDI or via supply voltage, terminals 1+, 2-)</li> </ul>


#### 6.3.2 Local operation

You can make hardware settings for the fieldbus interface using miniature switches (DIP switches) on the rear of the optional display.

The user has the option of ordering the display with the head transmitter, or as an accessory for subsequent mounting.

#### NOTICE

► ▲ESD - electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

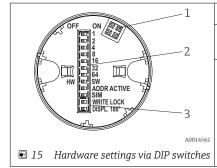

- 1: Connection to head transmitter
- 2: DIP switches (1 64, SW/HW, ADDR and SIM = simulation mode) no function for this head transmitter
- 3: DIP switch (WRITE LOCK = write protection; DISPL. 180° = switch, turn the display monitor 180°)

Procedure for setting the DIP switch:

- 1. Open the cover of the terminal head or field housing.
- 2. Remove the attached display from the head transmitter.
- 3. Configure the DIP switch on the rear of the display accordingly. In general: switch to ON = function enabled, switch to OFF = function disabled.
- 4. Fit the display onto the head transmitter in the correct position. The head transmitter accepts the settings within one second.
- 5. Secure the cover back onto the terminal head or field housing.

#### Switching write protection on/off

Write protection is switched on and off via a DIP switch on the rear of the optional attachable display. When write protection is active, parameters cannot be modified. A lock symbol on the display indicates that write protection is on. Write protection prevents any write access to the parameters. Write protection remains active even when the display is removed. To disable the write protection, the device must be restarted with the display

attached and the DIP switch deactivated (WRITE LOCK = OFF). Alternatively, the display can be removed and reattached during operation to disable write protection.

#### Turning the display

The display can be rotated  $180^{\circ}$  using the "DISPL.  $180^{\circ}$ " DIP switch. The setting is retained when the display is removed.

# 6.4 Access to the operating menu via the operating tool

#### 6.4.1 FieldCare

#### Function range

FDT/DTM-based plant asset management tool from Endress+Hauser. Access takes place via the HART® protocol or CDI (Common Data Interface).

#### Source for device description files

#### 6.4.2 AMS Device Manager

#### **Function range**

Program from Emerson Process Management for operating and configuring measuring devices via the  ${\rm HART}^{\rm e}$  protocol.

#### Source for device description files

#### 6.4.3 SIMATIC PDM

#### **Function** range

Program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via the HART  $^{\circ}$  protocol.

#### Source for device description files

#### 6.4.4 Field Communicator 375/475

#### **Function** range

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via the HART  $^{\circ}$  protocol.

#### Source for device description files

# 7 Integrating transmitter using HART® protocol

Version data for the device

Firmware version	01.02.zz	<ul> <li>On the title page of the Operating Instructions</li> <li>On the nameplate</li> <li>Firmware version parameter         Diagnosis → Instrument info → Firmware version     </li> </ul>
Manufacturer ID	0x11	Manufacturer ID parameter Diagnosis → Instrument info → Manufacturer ID
Device type ID	0x11CC	<b>Device type</b> parameter Diagnosis → Instrument info → Device type
HART protocol revision	7	
Device revision	3	<ul> <li>On the transmitter nameplate</li> <li>Device revision parameter</li> <li>Diagnosis → Instrument info → Device revision</li> </ul>

The suitable device driver software (DD/DTM) for the individual operating tools can be acquired from a variety of sources:

- www.endress.com --> Downloads --> Search field: device driver --> Type: Device type manager (DTM) --> Product root, e.g. TMTxy
- www.endress.com --> Products: individual product page, e.g. TMTxy --> Documents/ Manuals/Software: Electronic Data Description (EDD) or Device Type Manager (DTM).

Endress+Hauser supports all common operating tools from a variety of manufacturers (e.g. Emerson Process Management, ABB, Siemens, Yokogawa, Honeywell and many others). The Endress+Hauser FieldCare and DeviceCare operating tools are also available for download (www. endress.com --> Downloads --> Search field: Software --> Application software) or on the optical data storage medium (DVD).

#### 7.1 HART device variables and measured values

The following measured values are assigned to the device variables at the factory:

Device variables for temperature measurement

Device variable	Measured value
Primary device variable (PV)	Sensor 1
Secondary device variable (SV)	Device temperature
Tertiary device variable (TV)	Sensor 1
Quaternary device variable (QV)	Sensor 1

It is possible to change the assignment of device variables to process variables in the menu **Expert**  $\rightarrow$  **Communication**  $\rightarrow$  **HART output**.

#### 7.2 Device variables and measured values

The following measured values are assigned to the individual device variables:

Device variable code	Measured value
0	Sensor 1
1	Sensor 2
2	Device temperature

Device variable code	Measured value
3	Average of sensor 1 and sensor 2
4	Difference between sensor 1 and sensor 2
5	Sensor 1 (backup sensor 2)
6	Sensor 1 with switchover to sensor 2 if a limit value is exceeded
7	Average of sensor 1 and sensor 2 with backup

The device variables can be queried from a HART® master using HART® command 9 or 33.

# 7.3 Supported HART® commands

The HART® protocol enables the transfer of measuring data and device data between the HART® master and the field device for configuration and diagnostics purposes. HART® masters such as the handheld terminal or PC-based operating programs (e.g. FieldCare) need device description files (DD, DTM) which are used to access all the information in a HART® device. This information is transmitted exclusively via "commands".

There are three different types of command

• Universal commands:

All HART® devices support and use universal commands. These are associated with the following functionalities for example:

- Recognition of HART® devices
- Reading digital measured values
- Common practice commands:

Common practice commands offer functions which are supported and can be executed by many but not all field devices.

Device-specific commands:

These commands allow access to device-specific functions which are not HART® standard. Such commands access individual field device information, among other things.

Command No.	Designation	
Universal command	Universal commands	
0, Cmd0	Read unique identifier	
1, Cmd001	Read primary variable	
2, Cmd002	Read loop current and percent of range	
3, Cmd003	Read dynamic variables and loop current	
6, Cmd006	Write polling address	
7, Cmd007	Read loop configuration	
8, Cmd008	Read dynamic variable classifications	
9, Cmd009	Read device variables with status	
11, Cmd011	Read unique identifier associated with TAG	
12, Cmd012	Read message	
13, Cmd013	Read TAG, descriptor, date	
14, Cmd014	Read primary variable transducer information	
15, Cmd015	Read device information	
16, Cmd016	Read final assembly number	
17, Cmd017	Write message	

Command No.	Designation
18, Cmd018	Write TAG, descriptor, date
19, Cmd019	Write final assembly number
20, Cmd020	Read long TAG (32-byte TAG)
21, Cmd021	Read unique identifier associated with long TAG
22, Cmd022	Write long TAG (32-byte TAG)
38, Cmd038	Reset configuration changed flag
48, Cmd048	Read additional device status
Common practice co	mmands
33, Cmd033	Read device variables
34, Cmd034	Write primary variable damping value
35, Cmd035	Write primary variable range values
36, Cmd036	Set primary variable upper range value
37, Cmd037	Set primary variable lower range value
40, Cmd040	Enter/Exit fixed current mode
42, Cmd042	Perform device reset
44, Cmd044	Write primary variable units
45, Cmd045	Trim loop current zero
46, Cmd046	Trim loop current gain
50, Cmd050	Read dynamic variable assignments
51, Cmd051	Write dynamic variable assignments
54, Cmd054	Read device variable information
59, Cmd059	Write number of response preambles
103, Cmd103	Write burst period
104, Cmd104	Write burst trigger
105, Cmd105	Read burst mode configuration
107, Cmd107	Write burst device variables
108, Cmd108	Write burst mode command number
109, Cmd109	Burst mode control

# 8 Commissioning

#### 8.1 Post-installation check

Before commissioning the measuring point make sure that all final checks have been carried out:

- Checklist "Post-mounting check",
- Checklist "Post-connection check",  $\rightarrow \triangleq 21$

#### 8.2 Switching on the transmitter

Once the final checks have been successfully completed, it is time to switch on the supply voltage. The transmitter performs a number of internal test functions after power-up. As this procedure progresses, the following sequence of messages appears on the display:

Step	Display				
1	"Display" text and firmware version of the display				
2	Device name with firmware and hardware versions				
3	Information on the sensor configuration (sensor element and type of connection)				
4	Set measuring range				
5a	Current measured value or				
5b	Current status message				
	If the switch-on procedure is not successful, the relevant diagnostics event, depending on the cause, is displayed. A detailed list of diagnostic events and the corresponding troubleshooting instructions can be found in the "Diagnostics and troubleshooting" section .				


The device is operational after approx. 30 seconds, and the plug-in display after approx. 33 seconds in normal operating mode! Normal measuring mode commences as soon as the switch-on procedure is completed. Measured values and status values appear on the display.

# 8.3 Enabling configuration

If the device is locked and the parameter settings cannot be changed, it must first be enabled via the hardware or software lock. The device is write-protected if the lock symbol appears in the header of the measured value display.

To unlock the device

- either switch the write protection switch on the back of the display to the "OFF" position (hardware write protection), or
- deactivate the software write protection via the operating tool. See the description for the 'Define device write protection' parameter. → ≅ 80

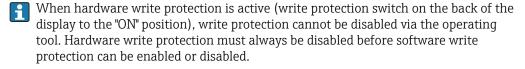

#### 9 Maintenance

No special maintenance work is required for the device.

#### Cleaning

A clean, dry cloth can be used to clean the device.

#### 10 Accessories

Various accessories, which can be ordered separately from your supplier, are available for the device. Detailed information on the order code in question can be obtained from your service organization. When ordering accessories, please specify the serial number of the device!

The following accessories are contained in the scope of delivery:

- Operating Instructions
- Supplementary documentation for use in hazardous areas
- Mounting material for head transmitter

#### Accessory

Display, pluggable

Field housing for head transmitter, aluminum, IP 66, dimensions B x H x T:  $100 \times 100 \times 60 \text{ mm}$  (3.94" x 3.94" x 2.36")

DIN rail clip according to IEC 60715 for head transmitter mounting

Standard - DIN mounting set (2 screws + springs, 4 securing disks and 1 display connector cover)

US - M4 mounting screws (2 screws M4 and 1 display connector cover)

#### Diagnostics and troubleshooting 11

#### **Troubleshooting** 11.1

Always start troubleshooting with the checklists below if faults occur after start up or during operation. This takes you directly (via various queries) to the cause of the problem and the appropriate remedial measures.



Due to its design, the device cannot be repaired. However, it is possible to send the device in for examination. See the information in the "Return" section.

#### General errors

Problem	Possible cause	Remedy	
Device is not responding.	Supply voltage does not match that specified on the nameplate.	Apply correct voltage.	
	Connecting cables are not in contact with the terminals.	Check the contacting of the cables and correct if necessary.	
Output current < 3.6 mA	ent < 3.6 mA Signal line is not wired correctly. Check wiring.		
	Electronics unit is defective.	Replace the device.	
HART communication is not working.	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 $\Omega$ ) correctly.	
	HART modem is not properly connected.	Connect HART modem correctly.	
	HART modem is not set to "HART".	Set HART modem selector switch to "HART".	
The status LED on the DIN rail device is lit or flashing (red).	Diagnostics events as per NAMUR NE107.	Check diagnostics events:  LED is lit: diagnostics display, category F  LED flashing: diagnostics display of categories C, S or M	
The power LED on the DIN rail device is not lit (green).	Power failure or insufficient supply voltage.	Check the supply voltage and check if wiring is correct.	

#### Check display (optional in conjunction with head transmitter)

Problem Possible cause		Remedy	
No display visible	No supply voltage	<ul> <li>Check the supply voltage at the head transmitter, terminals + and</li> <li>Ensure that the display module holders are correctly seated and that the display module is properly connected to the head transmitter.         →</li></ul>	
	The display module is defective.	Replace the module.	
	The electronics of the head transmitter are defective.	Replace the head transmitter.	

#### Application errors without status messages for RTD sensor connection

Problem	Possible cause	Remedy	
M 1 1	Incorrect sensor orientation.	Install the sensor correctly.	
Measured value is incorrect/inaccurate	Heat conducted by sensor.	Observe the face-to-face length of the sensor.	


Problem	Possible cause	Remedy	
	Device programming is incorrect (number of wires).	Change the <b>Connection type</b> device function.	
	Device programming is incorrect (scaling).	Change scaling.	
	Incorrect RTD configured.	Change the <b>Sensor type</b> device function.	
	Sensor connection.	Check that the sensor is connected correctly.	
	The cable resistance of the sensor (two-wire) was not compensated.	Compensate the cable resistance.	
	Offset incorrectly set.	Check offset.	
	Faulty sensor.	Check the sensor.	
	RTD connected incorrectly.	Connect the connecting cables correctly (terminal diagram).	
Failure current (≤ 3.6 mA or ≥ 21 mA)	Incorrect device programming (e.g. number of wires).	Change the <b>Connection type</b> device function.	
	Incorrect programming.	Incorrect sensor type set in the <b>Sensor type</b> device function. Set the correct sensor type.	

# Application errors without status messages for TC sensor connection

Problem	Possible cause	Remedy	
	Incorrect sensor orientation.	Install the sensor correctly.	
	Heat conducted by sensor.	Observe the face-to-face length of the sensor.	
	Device programming is incorrect (scaling).	Change scaling.	
Measured value is incorrect/inaccurate	Incorrect thermocouple type (TC) configured.	Change the <b>Sensor type</b> device function	
	Incorrect comparison measuring point set.	Set the correct comparison measuring point.	
	Interference via the thermocouple wire welded in the thermowell (interference voltage coupling).	Use a sensor where the thermocouple wire is not welded.	
	Offset incorrectly set.	Check offset.	
	Faulty sensor.	Check the sensor.	
Failure current (≤ 3.6 mA or	Sensor is connected incorrectly.	Connect the connecting cables correctly (terminal diagram).	
≥ 21 mA)	Incorrect programming.	Incorrect sensor type set in the <b>Sensor type</b> device function. Set the correct sensor type.	

# 11.2 Diagnostics events

# 11.2.1 Displaying diagnostics events

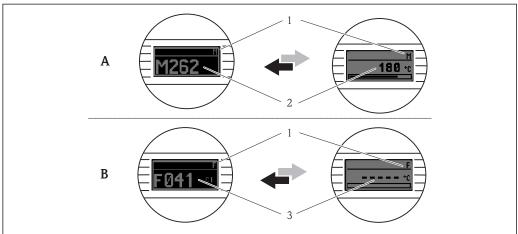

40014927

- A Display in the event of a warning
- B Display in the event of an alarm
- 1 Status signal in the header
- The display alternates between the primary measured value and the status indicated by the appropriate letter (M, C or S) plus the defined error number.
- 3 The display alternates between "- - -" (no valid measured value) and the status indicated by the appropriate letter (F) plus the defined error number.

#### Status signals


Symbol	Event category	Meaning
F	Operating error	An operating error has occurred. The measured value is no longer valid.
С	Service mode	The device is in service mode (e.g. during a simulation).
S	Out of specification	The device is being operated outside its technical specifications (e.g. during warm-up or cleaning processes).
М	Maintenance required	Maintenance is required. The measured value is still valid.

#### Diagnostic behavior

Alarm	Measurement is interrupted. The signal outputs assume the defined alarm condition. A diagnostic message is generated (status signal F).
Warning	The device continues to measure. A diagnostic message is generated (status signals M, C or S).

#### Diagnostics event and event text

The fault can be identified by means of the diagnostics event. The event text helps you by providing information about the fault.

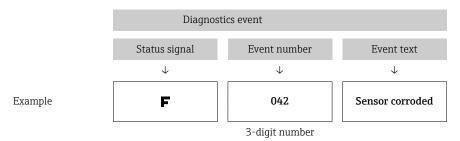

#### 11.2.2 Overview of diagnostics events

Each diagnostics event is assigned a certain event level at the factory. The user can change this assignment for certain diagnostics events.

The relevant sensor input for these diagnostics events can be identified by the **Actual diag. channel** parameter or on the optional attachable display.

Diagnostic number	Short text	Corrective measure	Status signal from the factory  Can be changed	Diagnostic behavior from the factory
		Diagnostics for the sensor		
001	Device malfunction	Reboot device.     Check electrical connection of Sensor.     Check/replace Sensor.     Replace electronics.	F	Alarm
006	Redundancy active	Check electrical wiring.     Replace sensor.     Check connection type.	М	Warning
041	Sensor broken	Check electrical wiring.     Replace sensor.     Check connection type.	F	Alarm
042	Sensor corroded	Check electrical wiring of sensor.     Replace sensor.	M	Warning 1)
			F	
043	Short circuit	Check electronic wiring.     Replace sensor.	F	Alarm
044	Sensor drift	Check sensors.     Check process temperatures.	M	Warning
			F, S	
045	Working area	Check ambient temperature.     Check external reference measuring point.	F	Alarm

Diagnostic number	Short text	Corrective measure	Status signal from the factory	Diagnostic behavior		
number			Can be changed to	from the factory		
062	Sensor connection	<ol> <li>Check electrical connection of sensor.</li> <li>Replace sensor.</li> <li>Check sensor configuration.</li> <li>Contact service.</li> </ol>	F	Alarm		
101	Sensor value too low	<ol> <li>Check process temperatures.</li> <li>Inspect sensor.</li> <li>Check sensor type.</li> </ol>	S F	Warning		
102	Sensor value too high	Check process temperatures.     Inspect sensor.     Check sensor type.	S F	Warning		
104	Backup active	Check electrical wiring of sensor 1.     Replace sensor 1.     Check connection type.	М	Warning		
105	Calibration interval	Execute calibration and reset calibration interval.     Switch off calibration counter.	M F	Warning		
106	Backup not available	Check electrical wiring of sensor 2.     Replace sensor 2.     Check connection type.	M	Warning		
	Diagnostics for the electronics					
201	Device malfunction	Replace electronics.	F	Alarm		
221	Reference measurement	Replace electronics.	F	Alarm		
241	Software	Restart device.     Perform device reset.     Replace device.	F	Alarm		
242	Software inkompatibel	Contact service.	F	Alarm		
261	Electronic modules	Replace electronics.	F	Alarm		
262	Module connection short circuit	Ensure that display module is correctly seated on the head transmitter.     Test the display module using other suitable head transmitters.     Display module defective? Replace module.	M	Warning		
282	Electronic memory	Replace device.	F	Alarm		
283	Memory content	Replace electronics.	F	Alarm		
301	Supply voltage	I. Increase supply voltage.     Check connection wires for corrosion.	F	Alarm		
	I	agnostics for the configuration				
401	Factory reset	Please wait until the reset procedure is complete.	С	Warning		
402	Initialization	Please wait until the start-up procedure is complete.	С	Warning		
410	Data transfer	Check HART communication.	F	Alarm		
411	Up-/download	Please wait until the up-/download is complete.	F, M or C <sup>2)</sup>	-		
431	Factory calibration 3)	Replace electronics.	F	Alarm		

Diagnostic number	Short text	Corrective measure  Can be changed to		Diagnostic behavior from the factory		
435	Linearization	Check configuration of sensor parameters.     Check configuration of special sensor linearizion.     Contact service.     Replace electronics.	F	Alarm		
437	Configuration	Check configuration of sensor parameters.     Check configuration of special sensor linearizion.     Check configuration of transmitter settings.     Contact service.	F	Alarm		
438	Dataset	Repeat a new parameterization.	F	Alarm		
451	Data processing	Please wait until data processing is complete.	С	Warning		
483	Simulation input					
485	Measured value simulation	Deactivate simulation.	С	Warning		
491	Simulation current output					
501	CDI connection	Unplug CDI-connector.	С	Warning		
525	HART communication	Check communication path (Hardware).     Check HART- master.     Check if power is sufficent.     Check HART communication settings.     Contact service organisation.	F	Alarm		
	Diagnostics for the process					
803	Current loop	Check wiring.     Replace electronics.	F	Alarm		
842	Process limit value	Check scaling of analog output.	М	Warning		
			F, S			
925	Device temperature	Observe ambient temperature in	S	Warning		
		accordance with specification.				

- 1) Diagnostic behavior can be changed in: "Alarm" or "Warning"
- 2) Status signal depends on used communication system and cannot be changed.
- In the case of this diagnostics event, the device always issues a "low" alarm status (output current  $\leq 3.6$ mA).

#### **Spare parts** 11.3

Always quote the serial number of the device when ordering spare parts!

Туре
Standard - DIN securing set (2 screws and springs, 4 shaft lock-down rings, 1 plug for the display interface)
US - M4 securing set (2 screws and 1 plug for the display interface)
Connecting cable for service interface, 40 cm

# 11.4 Return

For later reuse or to return the device to the service organization of your supplier, the device must be packed in such a way as to protect it from impact and damage. The original packaging material offers the best protection here. When sending the unit in to be checked, please enclose a note with a description of the error and the application.

# 11.5 Disposal

The device contains electronic components and must therefore be disposed of as electronic waste. Please pay particular attention to the national disposal regulations in your country.

# 11.6 Software history and overview of compatibility

## Revision history

The firmware version (FW) on the nameplate and in the Operating Instructions indicates the device release: XX.YY.ZZ (example 01.02.01).

XX Change to main version. No longer compatible. The device and

Operating Instructions change.

YY Change to functions and operation. Compatible. The Operating

Instructions change.

ZZ Fixes and internal changes. No changes to the Operating Instructions.

Date	Firmware Version	Modifications
01/11	1.00.zz	Original firmware
02/14	1.01.zz	Functional safety mode (SIL3)
02/17	01.01.zz	Changes in configuration parameter for Functional safety (SIL3)
06/19	01.02.zz	Changes in device behavior for Functional safety (SIL3)

# 12 Technical data

# **12.1** Input

Measured variable Temperature (temperature-linear transmission behavior), resistance and voltage.

Measuring range It is possible to connect two sensors that are independent of one another <sup>1)</sup>. The measuring inputs are not galvanically isolated from each other.

Resistance thermometer (RTD) as per standard	Description	α	Measuring range limits	Min. span
IEC 60751:2008	Pt100 (1) Pt200 (2) Pt500 (3) Pt1000 (4)	0.003851	-200 to +850 °C (-328 to +1562 °F) -200 to +850 °C (-328 to +1562 °F) -200 to +500 °C (-328 to +932 °F) -200 to +250 °C (-328 to +482 °F)	10 K (18 °F)
JIS C1604:1984	Pt100 (5)	0.003916	-200 to +510 °C (-328 to +950 °F)	10 K (18 °F)
DIN 43760 IPTS-68	Ni100 (6) Ni120 (7)	0.006180	-60 to +250 °C (-76 to +482 °F) -60 to +250 °C (-76 to +482 °F)	10 K (18 °F)
GOST 6651-94	Pt50 (8) Pt100 (9)	0.003910	-185 to +1100 °C (-301 to +2012 °F) -200 to +850 °C (-328 to +1562 °F)	10 K (18 °F)
OIML R84: 2003,	Cu50 (10) Cu100 (11)	0.004280	-180 to +200 °C (-292 to +392 °F) -180 to +200 °C (-292 to +392 °F)	10 K (18 °F)
GOST 6651-2009	Ni100 (12) Ni120 (13)	0.006170	-60 to +180 °C (-76 to +356 °F) -60 to +180 °C (-76 to +356 °F)	10 K (18 °F)
OIML R84: 2003, GOST 6651-94	Cu50 (14)	0.004260	-50 to +200 °C (−58 to +392 °F)	10 K (18 °F)
-	Pt100 (Callendar van Dusen) Nickel polynomial Copper polynomial	-	The measuring range limits are specified by entering the limit values that depend on the coefficients A to C and RO.	10 K (18 °F)
	<ul> <li>Type of connection: 2-wire, 3-wire or 4-wire connection, sensor current: ≤0.3 mA</li> <li>With 2-wire circuit, compensation of wire resistance possible (0 to 30 Ω)</li> <li>With 3-wire and 4-wire connection, sensor wire resistance up to max. 50 Ω per wire</li> </ul>			
Resistance transmitter	Resistance $\Omega$		$10$ to $400\Omega$ $10$ to $2000\Omega$	10 Ω 10 Ω

Thermocouples as per standard	Description	Measuring range limits		Min. span
IEC 60584, Part 1	Type A (W5Re-W20Re) (30) Type B (PtRh30-PtRh6) (31) Type E (NiCr-CuNi) (34) Type J (Fe-CuNi) (35) Type K (NiCr-Ni) (36) Type N (NiCrSi-NiSi) (37) Type R (PtRh13-Pt) (38) Type S (PtRh10-Pt) (39) Type T (Cu-CuNi) (40)	0 to +2 500 °C (+32 to +4532 °F) +40 to +1820 °C (+104 to +3308 °F) -270 to +1000 °C (-454 to +1832 °F) -210 to +1200 °C (-346 to +2192 °F) -270 to +1372 °C (-454 to +2501 °F) -270 to +1300 °C (-454 to +2372 °F) -50 to +1768 °C (-58 to +3214 °F) -50 to +1768 °C (-58 to +3214 °F) -260 to +400 °C (-436 to +752 °F)	Recommended temperature range: 0 to +2500 °C (+32 to +4532 °F) +500 to +1820 °C (+932 to +3308 °F) -150 to +1000 °C (-238 to +1832 °F) -150 to +1200 °C (-238 to +2192 °F) -150 to +1200 °C (-238 to +2192 °F) -150 to +1300 °C (-238 to +2372 °F) +50 to +1768 °C (+122 to +3214 °F) +50 to +1768 °C (+122 to +3214 °F) -150 to +400 °C (-238 to +752 °F)	50 K (90 °F) 50 K (90 °F)
IEC 60584, Part 1; ASTM E988-96	Type C (W5Re-W26Re) (32)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)

<sup>1)</sup> In the case of 2-channel measurement the same measuring unit must be configured for the two channels (e.g. both °C or F or K). Independent 2-channel measurement of a resistance transmitter (Ohm) and voltage transmitter (mV) is not possible.

Thermocouples as per standard	Description	Measuring range limits		Min. span
ASTM E988-96	Type D (W3Re-W25Re) (33)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
DIN 43710	Type L (Fe-CuNi) (41) Type U (Cu-CuNi) (42)	-200 to +900 °C (-328 to +1652 °F) -200 to +600 °C (-328 to +1112 °F)	-150 to +900 °C (-238 to +1652 °F) -150 to +600 °C (-238 to +1112 °F)	50 K (90 °F)
GOST R8.8585-2001	Type L (NiCr-CuNi) (43)	-200 to +800 °C (-328 to +1472 °F)	-200 to +800 °C (+328 to +1472 °F)	50 K (90 °F)
	<ul> <li>Internal cold junction (Pt100)</li> <li>External cold junction: configurable value -40 to +85 °C (-40 to +185 °F)</li> <li>Maximum sensor wire resistance 10 kΩ (If the sensor wire resistance is greater than 10 kΩ, an error message is output in accordance with NAMUR NE89.)</li> </ul>			s output in
Voltage transmitter (mV)	Millivolt transmitter (mV)	-20 to 100 mV		5 mV

# Type of input

The following connection combinations are possible when both sensor inputs are assigned:

	Sensor input 1				
		RTD or resistance transmitter, 2-wire	RTD or resistance transmitter, 3-wire	RTD or resistance transmitter, 4-wire	Thermocouple (TC), voltage transmitter
	RTD or resistance transmitter, 2-wire	V	V	-	V
Sensor input 2	RTD or resistance transmitter, 3-wire	abla	abla	-	abla
	RTD or resistance transmitter, 4-wire	-	-	-	-
	Thermocouple (TC), voltage transmitter	$\checkmark$		<b>Z</b>	V

# 12.2 Output

# Output signal

Analog output	4 to 20 mA, 20 to 4 mA (can be inverted)
Signal encoding	FSK ±0.5 mA via current signal
Data transmission rate	1200 baud
Galvanic isolation	U = 2 kV AC for 1 minute (input/output)


# Failure information

# Failure information as per NAMUR NE43:

Failure information is created if the measuring information is missing or not valid. A complete list of all the errors occurring in the measuring system is created.

Underranging	Linear decrease from 4.0 to 3.8 mA
Overranging	Linear increase from 20.0 to 20.5 mA
Failure e.g. sensor failure; sensor short-circuit	$\leq$ 3.6 mA ("low") or $\geq$ 21 mA ("high"), can be selected The "high" alarm setting can be set between 21.5 mA and 23 mA, thus providing the flexibility needed to meet the requirements of various control systems.

Load

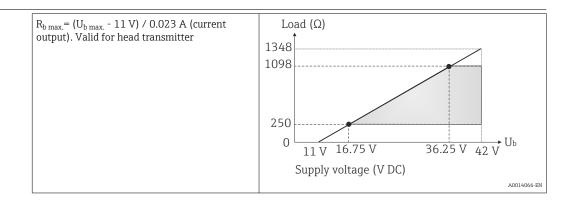

Linearization/transmission behavior

Temperature-linear, resistance-linear, voltage-linear

Mains filter

50/60 Hz

Filter

1st order digital filter: 0 to 120 s

Protocol-specific data

HART® version	7
Device address in multi-drop mode	Software setting addresses 0 to 63
Device description files (DD)	Information and files can be obtained from your supplier or at: www.hartcomm.org
Load (communication resistor)	min. $250~\Omega$

Write protection for device parameters

- Hardware: Write protection for head transmitter on optional display using DIP switch
- ullet Software: Write protection using password

Switch-on delay

- Until the start of HART® communication, approx. 10 s $^{2)}$ , while switch-on delay =  $I_a$   $\leq 3.8 \text{ mA}$
- Until the first valid measured value signal is present at the current output, approx. 28 s, while switch-on delay =  $I_a \le 3.8$  mA

# 12.3 Power supply

Supply voltage

Values for non-hazardous areas, protected against polarity reversal:

- Head transmitter
  - $11 \text{ V} \leq \text{Vcc} \leq 42 \text{ V}$  (standard)
  - 11 V ≤ Vcc ≤ 32 V (SIL mode)
  - I: ≤ 23 mA
- DIN rail device
  - $12 \text{ V} \leq \text{Vcc} \leq 42 \text{ V} \text{ (standard)}$
  - 12 V ≤ Vcc ≤ 32 V (SIL mode)
  - I: ≤ 23 mA

Values for hazardous areas, see Ex documentation.

<sup>2)</sup> Does not apply for the SIL mode

## Current consumption

- 3.6 to 23 mA
- Minimum current consumption 3.5 mA, Multidrop mode 4 mA (not possible in the SIL
- Current limit ≤ 23 mA

#### **Terminals**

Choice of screw or push-in terminals for sensor and supply cables:

Terminal version	Cable version	Cable cross-section
Screw terminals	Rigid or flexible	≤ 2.5 mm² (14 AWG)
Push-in terminals (cable version,	Rigid or flexible	0.2 to 1.5 mm <sup>2</sup> (24 to 16 AWG)
stripping length = min. 10 mm (0.39 in)	Flexible with wire end ferrules with/without plastic ferrule	0.25 to 1.5 mm <sup>2</sup> (24 to 16 AWG)

#### 12.4 Performance characteristics

## Response time

The measured value update depends on the type of sensor and connection method and moves within the following ranges:

Resistance thermometer (RTD)	0.9 to 1.5 s (depends on the connection method 2/3/4-wire)
Thermocouples (TC)	1.1 s
Reference temperature	1.1 s



When recording step responses, it must be taken into account that the times for the measurement of the second channel and the internal reference measuring point are added to the specified times where applicable.

# Reference operating conditions

- Calibration temperature: +25 °C ±3 K (77 °F ±5.4 °F)
- Supply voltage: 24 V DC
- 4-wire circuit for resistance adjustment

#### Maximum measured error

In accordance with DIN EN 60770 and the reference conditions specified above. The measured error data correspond to  $\pm 2~\sigma$  (Gaussian distribution). The data include nonlinearities and repeatability.

## *Typical*

Standard	Standard Description Measuring range		Typical measured error (±)	
Resistance thermometer (RTD	)) as per standard	Digital value <sup>1)</sup>	Value at current output	
IEC 60751:2008	Pt100 (1)		0.08 °C (0.14 °F)	0.1 °C (0.18 °F)
IEC 60751:2008	Pt1000 (4)	0 to +200 °C (32 to +392 °F)	0.08 K (0.14 °F)	0.1 °C (0.18 °F)
GOST 6651-94	Pt100 (9)		0.07 °C (0.13 °F)	0.09 ℃ (0.16 ℉)
Thermocouples (TC) as per sta	andard	Digital value	Value at current output	
IEC 60584, Part 1	Type K (NiCr-Ni) (36)		0.31 °C (0.56 °F)	0.39 °C (0.7 °F)
IEC 60584, Part 1	Type S (PtRh10-Pt) (39)	0 to +800 °C (32 to +1472 °F)	0.97 °C (1.75 °F)	1.0 °C (1.8 °F)
GOST R8.8585-2001	Type L (NiCr-CuNi) (43)		2.18 °C (3.92 °F)	2.2 °C (3.96 °F)

<sup>1)</sup> Measured value transmitted via HART®.

# Measured error for resistance thermometers (RTD) and resistance transmitters

Standard	Description	Measuring range	Measured error (±)		
			Di	igital <sup>1)</sup>	D/A <sup>2)</sup>
			Maximum <sup>3)</sup>	Based on measured value 4)	D/A
	Pt100 (1)	−200 to +850 °C	≤ 0.12 °C (0.21 °F)	ME = ± (0.06 °C (0.11 °F) + 0.006% * (MV - LRV))	
IEC 60751:2008	Pt200 (2)	(−328 to +1562 °F)	≤ 0.28 °C (0.50 °F)	ME = ± (0.12 °C (0.22 °F) + 0.015% * (MV - LRV))	
IEC 00731.2000	Pt500 (3)	−200 to +510 °C (−328 to +950 °F)	≤ 0.15 °C (0.27 °F)	ME = ± (0.05 °C (0.09 °F) + 0.014% * (MV - LRV))	
	Pt1000 (4)	-200 to +250 °C (-328 to +482 °F)	< 0.09°C (0.16°E)	ME = ± (0.03 °C (0.05 °F) + 0.013% * (MV - LRV))	
JIS C1604:1984	≤ 0.09 °C (0.16 °F)  IS C1604:1984 Pt100 (5) −200 to +510 °C (−328 to +950 °F)		$ME = \pm (0.05 ^{\circ}C  (0.09 ^{\circ}F) + 0.006\% ^{*}  (MV - LRV))$		
GOST 6651-94	Pt50 (8)	−185 to +1100 °C (−301 to +2012 °F)	≤ 0.21 °C (0.38 °F)	ME = ± (0.10 °C (0.18 °F) + 0.008% * (MV - LRV))	
0031 0031 74	Pt100 (9)	−200 to +850 °C (−328 to +1562 °F)	≤ 0.11 °C (0.2 °F)	ME = ± (0.05 °C (0.09 °F) + 0.006% * (MV - LRV))	0.03 % (≘ 4.8 µA)
DIN 43760 IPTS-68	Ni100 (6)	60 to +250 °C (-76 to +482 °F)	≤ 0.05 °C (0.09 °F)	$ME = \pm (0.05 ^{\circ}\text{C} (0.09 ^{\circ}\text{F}) -$	
DIN 43700 IF 13-00	Ni120 (7)	-00 to 1230 C (-70 to 1402 f)	≤ 0.00 € (0.09 F)	0.006% * (MV - LRV))	
	Cu50 (10)	−180 to +200 °C (−292 to +392 °F)	≤ 0.12 °C (0.22 °F)	ME = ± (0.10 °C (0.18 °F) + 0.006% * (MV - LRV))	
OIML R84: 2003 /	Cu100 (11)	−180 to +200 °C (−292 to +392 °F)	≤ 0.06 °C (0.11 °F)	$ME = \pm (0.05  ^{\circ}C  (0.09  ^{\circ}F) + 0.003\%  ^{\star}  (MV - LRV))$	
GOST 6651-2009	Ni100 (12)	-60 to +180 °C (−76 to +356 °F)	≤ 0.06 °C (0.11 °F)	ME = ± (0.06 °C (0.11 °F) - 0.006% * (MV - LRV))	
	Ni120 (13)	00 t0 +160 C (-70 t0 +330 F)	≤ 0.05 °C (0.09 °F)	ME = ± (0.05 °C (0.09 °F) - 0.006% * (MV - LRV))	
OIML R84: 2003, GOST 6651-94	Cu50 (14)	-50 to +200 °C (−58 to +392 °F)	≤ 0.11 °C (0.2 °F)	ME = ± (0.10 °C (0.18 °F) + 0.004% * (MV - LRV))	
Resistance transmitter	Resistance Ω	10 to 400 Ω	33 mΩ	$ME = \pm 21 \text{ m}\Omega + 0.003\% * \text{MV}$	0.03 % (≘
		10 to 2 000 Ω	310 mΩ	$ME = \pm 90 \text{ m}\Omega + 0.011\% * \text{MV}$	4.8 μΑ)

- 1)
- $\label{thm:measured} \mbox{Measured value transmitted via HART} \mbox{\^{\it B}}.$  Percentages based on the configured span of the analog output signal. 2) 3)
- Maximum measured error for the specified measuring range
- Deviations from maximum measured error due to rounding is possible.

# Measured error for thermocouples (TC) and voltage transmitters

Standard	Description	Measuring range	Measured error (±)		
			Digital <sup>1)</sup>		D/A <sup>2)</sup>
			Maximum <sup>3)</sup>	Based on measured value 4)	DIA
IEC 60584-1	Type A (30)	0 to +2 500 °C (+32 to +4 532 °F)	≤ 1.33 °C (2.39 °F)	ME = ± (0.8 °C (1.52 °F) + 0.021% * (MV - LRV))	
IEC 00304-1	Туре В (31)	+500 to +1820 ℃ (+932 to +3308 ℉)	≤ 1.43 °C (2.57 °F)	$ME = \pm (1.43 ^{\circ}\text{C} (2.57 ^{\circ}\text{F}) - 0.06\% ^{*} (MV - LRV))$	0.03 % (≘
IEC 60584-1 / ASTM E988-96	Туре С (32)	0 to +2 000 °C (+32 to +3 632 °F)	≤ 0.66 °C (1.19 °F)	ME = ± (0.55 °C (0.99 °F) + 0.0055% * (MV - LRV))	4.8 μA)
ASTM E988-96	Type D (33)	0 t0 12 000 C (132 t0 +3 032 F)	≤ 0.75 °C (1.35 °F)	$ME = \pm (0.85 ^{\circ}\text{C} (1.53 ^{\circ}\text{F}) - 0.008\% ^{*} (MV - LRV))$	

Standard	Description	Measuring range	Measured error (±)		
	Туре Е (34)	−150 to +1000 °C (−238 to +1832 °F)	≤ 0.22 °C (0.4 °F)	ME = ± (0.22 °C (0.40 °F) - 0.006% * (MV - LRV))	
	Type J (35)	−150 to +1200 °C	≤ 0.27 °C (0.49 °F)	ME = ± (0.27 °C (0.49 °F) - 0.005% * (MV - LRV))	
	Туре К (36)	(−238 to +2 192 °F)	≤ 0.35 °C (0.63 °F)	ME = ± (0.35 °C (0.63 °F) - 0.005% * (MV - LRV))	
IEC 60584-1	Type N (37)	−150 to +1300 °C (−238 to +2372 °F)	≤ 0.48 °C (0.86 °F)	ME = ± (0.48 °C (0.86 °F) - 0.014% * (MV - LRV))	
	Type R (38)	+50 to +1768 °C (+122 to +3214 °F)	≤ 1.12 °C (2.02 °F)	ME = ± (1.12 °C (2.02 °F) - 0.03% * (MV - LRV))	
	Type S (39)		≤ 1.15 °C (2.07 °F)	$ME = \pm (1.15 ^{\circ}C (2.07 ^{\circ}F) - 0.022\% ^{*} (MV - LRV))$	
	Туре Т (40)	−150 to +400 °C (−238 to +752 °F)	≤ 0.35 °C (0.63 °F)	$ME = \pm (0.35 ^{\circ}\text{C} (0.63 ^{\circ}\text{F}) - 0.04\% ^{*} (MV - LRV))$	
DIN 43710	Type L (41)	−150 to +900 °C (−238 to +1652 °F)	≤ 0.29 °C (0.52 °F)	ME = ± (0.29 °C (0.52 °F) - 0.009% * (MV - LRV))	
DIN 43710	Type U (42)	−150 to +600 °C (−238 to +1112 °F)	≤ 0.33 °C (0.59 °F)	ME = ± (0.33 °C (0.59 °F) - 0.028% * (MV - LRV))	
GOST R8.8585-2001	Type L (43)	−200 to +800 °C (−328 to +1472 °F)	≤ 2.20 °C (3.96 °F)	ME = ± (2.2 °C (3.96 °F) - 0.015% * (MV - LRV))	
Voltage transmitter (mV)		-20 to +100 mV	10.7 μV	ME = $\pm$ (7.7 $\mu$ V + 0.0025% * (MV - LRV))	4.8 µA

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal.
- 3) Maximum measured error for the specified measuring range.
- 4) Deviations from maximum measured error due to rounding is possible.

MV = Measured Value

LRV = Lower Range Value of relevant sensor

Total measured error of transmitter at current output =  $\sqrt{\text{(Measured error digital}^2 + \text{Measured error D/A}^2)}$ 

Sample calculation with Pt100, measuring range 0 to +200  $^{\circ}$ C (+32 to +392  $^{\circ}$ F), ambient temperature +25  $^{\circ}$ C (+77  $^{\circ}$ F), supply voltage 24 V:

Measured error digital = $0.06 ^{\circ}\text{C} + 0.006\% ^{\circ}\text{x}  (200 ^{\circ}\text{C} - (-200 ^{\circ}\text{C}))$ :	0.084°C (0.151°F)
Measured error D/A = 0.03 % x 200 °C (360 °F)	0.06 °C (0.108 °F)
Measured error digital value (HART):	0.084 °C (0.151 °F)
<b>Measured error analog value (current output):</b> $\sqrt{\text{(Measured error digital}^2 + Measured error D/A^2)}$	0.103 °C (0.185 °F)

Sample calculation with Pt100, measuring range 0 to +200  $^{\circ}$ C (+32 to +392  $^{\circ}$ F), ambient temperature +35  $^{\circ}$ C (+95  $^{\circ}$ F), supply voltage 30 V:

Measured error digital = $0.06 ^{\circ}\text{C} + 0.006\% ^{\circ}\text{x}  (200 ^{\circ}\text{C} - (-200 ^{\circ}\text{C}))$ :	0.084 °C (0.151 °F)
Measured error D/A = 0.03 % x 200 °C (360 °F)	0.06 °C (0.108 °F)
Influence of ambient temperature (digital) = (35 - 25) x (0.002% x 200 °C - (-200 °C)), min. 0.005 °C	0.08 °C (0.144 °F)
Influence of ambient temperature (D/A) = (35 - 25) x (0.001% x 200 °C)	0.02 °C (0.036 °F)

Influence of supply voltage (digital) = (30 - 24) x (0.002% x 200 °C - (-200 °C)), min. 0.005 °C	0.048°C (0.086°F)
Influence of supply voltage (D/A) = $(30 - 24) \times (0.001\% \times 200 ^{\circ}\text{C})$	0.012 °C (0.022 °F)
Measured error digital value (HART): $\sqrt{\text{(Measured error digital)}^2 + \text{Influence of ambient temperature (digital)}^2 + \text{Influence of supply voltage (digital)}^2}$	0.126 °C (0.227 °F)
Measured error analog value (current output): $\sqrt{(\text{Measured error analog value (current output):}} + \text{Measured error D/A}^2 + \text{Influence of ambient temperature (digital)}^2 + \text{Influence of ambient temperature (D/A)}^2 + \text{Influence of supply voltage (D/A)}^2$	0.141 °C (0.254 °F)

The measured error data correspond to  $\pm 2~\sigma$  (Gaussian distribution).

MV = Measured Value

LRV = Lower Range Value of relevant sensor

Physical input measuring range of sensors				
10 to 400 Ω Cu50, Cu100, polynomial RTD, Pt50, Pt100, Ni100, Ni120				
10 to 2 000 Ω Pt200, Pt500, Pt1000				
-20 to 100 mV Thermocouples type: A, B, C, D, E, J, K, L, N, R, S, T, U				



Other measured errors apply in SIL mode.

## Sensor adjustment

#### Sensor transmitter matching

RTD sensors are one of the most linear temperature measuring elements. Nevertheless, the output must be linearized. To significantly improve temperature measurement accuracy, the device allows the use of two methods:

■ Callendar-Van-Dusen coefficients (Pt100 resistance thermometer)
The Callendar-Van-Dusen equation is described as:  $R_T = R_0[1+AT+BT^2+C(T-100)T^3]$ 

The coefficients A, B and C are used to match the sensor (platinum) and transmitter in order to improve the accuracy of the measuring system. The coefficients for a standard sensor are specified in IEC 751. If no standard sensor is available or if greater accuracy is required, the coefficients for each sensor can be determined specifically with the aid of sensor calibration.

■ Linearization for copper/nickel resistance thermometers (RTD) The polynomial equation for copper/nickel is as follows:  $R_T = R_0(1+AT+BT^2)$ 

The coefficients A and B are used for the linearization of nickel or copper resistance thermometers (RTD). The exact values of the coefficients derive from the calibration data and are specific to each sensor. The sensor-specific coefficients are then sent to the transmitter.

Sensor transmitter matching using one of the methods explained above significantly improves the temperature measurement accuracy of the entire system. This is because the transmitter uses the specific data pertaining to the connected sensor to calculate the measured temperature, instead of using the standardized sensor curve data.

# 1-point adjustment (offset)

Shifts the sensor value

# 2-point adjustment (sensor trimming)

Correction (slope and offset) of the measured sensor value at transmitter input

Current output adjustment Correction of 4 or 20 mA current output value (not possible in SIL mode)

Operating influences

The measured error data correspond to  $\pm 2~\sigma$  (Gaussian distribution).

Influence of ambient temperature and supply voltage on operation for resistance thermometers (RTD) and resistance transmitters

Description	Standard	Influe	Ambient temperature: ence (±) per 1 °C (1.8 °F) chang	je		Supply voltage: Influence (±) per V change			
		Digital <sup>1)</sup>		D/A <sup>2)</sup>		Digital	D/A		
		Maximum	Based on measured value		Maximum	Based on measured value			
Pt100 (1)		≤ 0.02 °C (0.036 °F)	0.002% * (MV -LRV), at least 0.005 °C (0.009 °F)		≤ 0.02 °C (0.036 °F)	0.002% * (MV -LRV), at least 0.005 °C (0.009 °F)			
Pt200 (2)	IEC	≤ 0.026 °C (0.047 °F)	-		≤ 0.026 °C (0.047 °F)	-			
Pt500 (3)	60751:2008	≤ 0.014 °C (0.025 °F)	0.002% * (MV -LRV), at least 0.009 °C (0.016 °F)		≤ 0.014 °C (0.025 °F)	0.002% * (MV -LRV), at least 0.009 °C (0.016 °F)			
Pt1000 (4)		≤ 0.01 °C	0.002% * (MV -LRV), at least 0.004 °C (0.007 °F)		≤ 0.01 °C	0.002% * (MV -LRV), at least 0.004 °C (0.007 °F)			
Pt100 (5)	JIS C1604:1984	(0.018°F)	0.002% * (MV -LRV), at least 0.005 °C (0.009 °F)		(0.018°F)	0.002% * (MV -LRV), at least 0.005 °C (0.009 °F)			
Pt50 (8)	COCT ((51.0)	≤ 0.03 °C (0.054 °F)	0.002% * (MV -LRV), at least 0.01 °C (0.018 °F)		≤ 0.03 °C (0.054 °F)	0.002% * (MV -LRV), at least 0.01 °C (0.018 °F)			
Pt100 (9)	- GOST 6651-94	≤ 0.02 °C (0.036 °F)	0.002% * (MV -LRV), at least 0.005 °C (0.009 °F)	0.001 %	≤ 0.02 °C (0.036 °F)	0.002% * (MV -LRV), at least 0.005 °C (0.009 °F)	0.001 %		
Ni100 (6)	DIN 43760	DIN 43760	≤ 0.005 °C	≤ 0.005 °C	-		≤ 0.005 °C	-	
Ni120 (7)	IPTS-68	(0.009°F)	-		(0.009°F)	-			
Cu50 (10)		≤ 0.008 °C	-		4.0.000 °C	-	1 !		
Cu100 (11)	OIML R84: 2003 / GOST	≤ 0.008 C (0.014 °F)	0.002% * (MV -LRV), at least 0.004 °C (0.007 °F)		≤ 0.008 °C (0.014 °F)	0.002% * (MV -LRV), at least 0.004 °C (0.007 °F)			
Ni100 (12)	6651-2009	≤ 0.004 °C	-		≤ 0.004 °C	-			
Ni120 (13)		(0.007 °F)	-		(0.007 °F)	-			
Cu50 (14)	OIML R84: 2003 / GOST 6651-94	≤ 0.008 °C (0.014 °F)	-		≤ 0.008 °C (0.014 °F)	-			
Resistance trans	smitter (Ω)								
10 to 400 Ω		≤ 6 mΩ	0.0015% * (MV -LRV), at least 1.5 mΩ	0.001.0	≤ 6 mΩ	0.0015% * (MV -LRV), at least 1.5 mΩ	0.001.5		
10 to 2 000 Ω		≤ 30 mΩ	0.0015% * (MV -LRV), at least 15 mΩ	0.001 %	≤ 30 mΩ	0.0015% * (MV -LRV), at least 15 mΩ	0.001 %		

<sup>1)</sup> Measured value transmitted via HART®.

<sup>2)</sup> Percentages based on the configured span of the analog output signal

Influence of ambient temperature and supply voltage on operation for thermocouples (TC) and voltage transmitters

Type A (30)  IEC 60584-1  Type B (31)  Type C (32)  IEC 60584-1 / ASTM E988-96  Type D (33)  ASTM E988-96	Digital <sup>1)</sup> Maximum  ≤ 0.14 °C (0.25 °F)  ≤ 0.06 °C (0.11 °F)  ≤ 0.09 °C	Based on measured value  0.0055% * (MV -LRV), at least 0.03 °C (0.054 °F)	D/A <sup>2)</sup>	Maximum ≤ 0.14 °C (0.25 °F)	Digital  Based on measured value  0.0055% * (MV -LRV).	D/A
Type B (31)  Type C (32)  IEC 60584-1  ASTM E988-96	≤ 0.14 °C (0.25 °F) ≤ 0.06 °C (0.11 °F) ≤ 0.09 °C	0.0055% * (MV -LRV),		≤ 0.14 °C		
Type B (31)  Type C (32)  IEC 60584-1  ASTM E988-96	(0.25 °F) ≤ 0.06 °C (0.11 °F) ≤ 0.09 °C				0.0055% * /M/X/_I D\/\	1
Type B (31)  Type C (32)  IEC 60584-1 / ASTM E988-96	(0.11 °F) ≤ 0.09 °C	-		(0.4)	at least $0.03$ °C $(0.054$ °F)	
1ype C (32) ASTM E988-96				≤ 0.06 °C (0.11 °F)	-	
Type D (33) ASTM E988-96	(0.16 °F)	0.0045% * (MV -LRV), at least 0.03 °C (0.054 °F)		≤ 0.09 °C (0.16 °F)	0.0045% * (MV -LRV), at least 0.03 °C (0.054 °F)	
-,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	≤ 0.08 °C (0.14 °F)	0.004% * (MV -LRV), at least 0.035 °C (0.063 °F)		≤ 0.08 °C (0.14 °F)	0.004% * (MV -LRV), at least 0.035 °C (0.063 °F)	
Type E (34)	≤ 0.03 °C (0.05 °F)	0.003% * (MV -LRV), at least 0.016 °C (0.029 °F)		≤ 0.03 °C (0.05 °F)	0.003% * (MV -LRV), at least 0.016 °C (0.029 °F)	
Type J (35)	≤ 0.02 °C (0.04 °F)	0.0028% * (MV -LRV), at least 0.02 °C (0.036 °F)		≤ 0.02 °C (0.04 °F)	0.0028% * (MV -LRV), at least 0.02 °C (0.036 °F)	
Туре К (36)	≤ 0.04 °C	0.003% * (MV -LRV), at least 0.013 °C (0.023 °F)	0.001 %	≤ 0.04 °C	0.003% * (MV -LRV), at least 0.013 °C (0.023 °F)	0.001 %
Type N (37) IEC 60584-1	(0.07 °F)	0.0028% * (MV -LRV), at least 0.020 °C (0.036 °F)	- 0.001 %	(0.07 °F)	0.0028% * (MV -LRV), at least 0.020 °C (0.036 °F)	0.001 %
Type R (38)	≤ 0.06 °C (0.11 °F)	0.0035% * (MV -LRV), at least 0.047 °C (0.085 °F)		≤ 0.06 °C (0.11 °F)	0.0035% * (MV -LRV), at least 0.047 °C (0.085 °F)	
Type S (39)	≤ 0.05 °C (0.09 °F)	-		≤ 0.05 °C (0.09 °F)	-	
Туре Т (40)	≤ 0.01 °C (0.02 °F)	-		≤ 0.01 °C (0.02 °F)	-	
Type L (41) DIN 43710	≤ 0.02 °C (0.04 °F)	-		≤ 0.02 °C (0.04 °F)	-	
Type U (42)	≤ 0.01 °C (0.02 °F)	-		≤ 0.01 °C (0.02 °F)	-	
Type L (43) GOST R8.8585-2001	≤ 0.01 °C (0.02 °F)	-		≤ 0.01 °C (0.02 °F)	-	
Voltage transmitter (mV)						
-20 to 100 mV -	≤ 3 µV	_	0.001 %	≤ 3 µV		0.001 %

<sup>1)</sup> Measured value transmitted via HART®.

MV = Measured Value

LRV = Lower Range Value of relevant sensor

Total measured error of transmitter at current output =  $\sqrt{(Measured\ error\ digital^2 + Measured\ error\ D/A^2)}$ 

Long-term drift, resistance thermometers (RTD) and resistance transmitters

Description	Standard	Long-term drift (±) 1)			
		after 1 year	after 5 years		
		Based on measured value			
Pt100 (1)	IEC 60751:2008	≤ 0.016% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.025% * (MV - LRV) or 0.05 °C (0.09 °F)	≤ 0.028% * (MV - LRV) or 0.06 °C (0.10 °F)	
Pt200 (2)		0.25 °C (0.44 °F)	0.41 °C (0.73 °F)	0.50 °C (0.91 °F)	

<sup>2)</sup> Percentages based on the configured span of the analog output signal

Description	Standard	Long-term drift (±) 1)		
Pt500 (3)		<pre>     &lt; 0.018% * (MV - LRV) or     0.08 °C (0.14 °F) </pre>	≤ 0.03% * (MV - LRV) or 0.14 °C (0.25 °F)	≤ 0.036% * (MV - LRV) or 0.17 °C (0.31 °F)
Pt1000 (4)		≤ 0.0185% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.031% * (MV - LRV) or 0.07 °C (0.12 °F)	≤ 0.038% * (MV - LRV) or 0.08 °C (0.14 °F)
Pt100 (5)	JIS C1604:1984	≤ 0.015% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.024% * (MV - LRV) or 0.07 °C (0.12 °F)	≤ 0.027% * (MV - LRV) or 0.08 °C (0.14 °F)
Pt50 (8)	- GOST 6651-94	≤ 0.017% * (MV - LRV) or 0.07 °C (0.13 °F)	≤ 0.027% * (MV - LRV) or 0.12 °C (0.22 °F)	≤ 0.03% * (MV - LRV) or 0.14 °C (0.25 °F)
Pt100 (9)	- GOS1 6051-94	≤ 0.016% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.025% * (MV - LRV) or 0.07 °C (0.12 °F)	≤ 0.028% * (MV - LRV) or 0.07 °C (0.13 °F)
Ni100 (6)	DIN (2760 IDTC 60	0.04 °C (0.06 °F)	0.05 °C (0.10 °T)	0.06°0 (0.11°E)
Ni120 (7)	DIN 43760 IPTS-68	0.04 °C (0.06 °F)	0.05 °C (0.10 °F)	0.06 °C (0.11 °F)
Cu50 (10)		0.06 ℃ (0.10 °F)	0.09 °C (0.16 °F)	0.11 °C (0.20 °F)
Cu100 (11)	OIML R84: 2003 /	≤ 0.015% * (MV - LRV) or 0.04 °C (0.06 °F)	≤ 0.024% * (MV - LRV) or 0.06 °C (0.10 °F)	≤ 0.027% * (MV - LRV) or 0.06 °C (0.11 °F)
Ni100 (12)	GOST 6651-2009	0.03 °C (0.06 °F)	0.05 °C (0.09 °F)	0.06 °C (0.10 °F)
Ni120 (13)	1	0.03 °C (0.06 °F)	0.05 °C (0.09 °F)	0.06 °C (0.10 °F)
Cu50 (14)	OIML R84: 2003 / GOST 6651-94	0.06 °C (0.10 °F)	0.09 °C (0.16 °F)	0.10 °C (0.18 °F)
Resistance transmitte	er			
10 to 400 Ω		$\leq$ 0.0122% * (MV - LRV) or 12 m $\Omega$	$\leq$ 0.02% * (MV - LRV) or 20 m $\Omega$	$\leq$ 0.022% * (MV - LRV) or 22 m $\Omega$
10 to 2 000 Ω		$\leq 0.015\%$ * (MV - LRV) or 144 m $\Omega$	$\leq 0.024\%$ * (MV - LRV) or 240 $m\Omega$	≤ 0.03% * (MV - LRV) or 295 mΩ

# 1) Whichever is greater

# Long-term drift, thermocouples (TC) and voltage transmitters

Description	Standard	Long-term drift (±) 1)		
		after 1 year	after 3 years	after 5 years
		Based on measured value		
Type A (30)	IEC 60584-1	≤ 0.048% * (MV - LRV) or 0.46 °C (0.83 °F)	≤ 0.072% * (MV - LRV) or 0.69 °C (1.24 °F)	<pre> &lt; 0.1% * (MV - LRV) or 0.94 °C (1.69 °F)</pre>
Type B (31)		1.08 °C (1.94 °F)	1.63 °C (2.93 °F)	2.23 °C (4.01 °F)
Type C (32)	IEC 60584-1 / ASTM E988-96	≤ 0.038% * (MV - LRV) or 0.41 °C (0.74 °F)	≤ 0.057% * (MV - LRV) or 0.62 °C (1.12 °F)	≤ 0.078% * (MV - LRV) or 0.85 °C (1.53 °F)
Type D (33)	ASTM E988-96	≤ 0.035% * (MV - LRV) or 0.57 °C (1.03 °F)	≤ 0.052% * (MV - LRV) or 0.86 °C (1.55 °F)	≤ 0.071% * (MV - LRV) or 1.17 °C (2.11 °F)
Type E (34)		≤ 0.024% * (MV - LRV) or 0.15 °C (0.27 °F)	≤ 0.037% * (MV - LRV) or 0.23 °C (0.41 °F)	≤ 0.05% * (MV - LRV) or 0.31 °C (0.56 °F)
Type J (35)		≤ 0.025% * (MV - LRV) or 0.17 °C (0.31 °F)	≤ 0.037% * (MV - LRV) or 0.25 °C (0.45 °F)	≤ 0.051% * (MV - LRV) or 0.34 °C (0.61 °F)
Туре К (36)	IEC 60584-1	≤ 0.027% * (MV - LRV) or 0.23 °C (0.41 °F)	≤ 0.041% * (MV - LRV) or 0.35 °C (0.63 °F)	≤ 0.056% * (MV - LRV) or 0.48 °C (0.86 °F)
Type N (37)		0.36 °C (0.65 °F)	0.55 ℃ (0.99 °F)	0.75 °C (1.35 °F)
Type R (38)		0.83 °C (1.49 °F)	1.26 °C (2.27 °F)	1.72 °C (3.10 °F)
Type S (39)		0.84 °C (1.51 °F)	1.27 °C (2.29 °F)	1.73 °C (3.11 °F)
Type T (40)		0.25 °C (0.45 °F)	0.37 °C (0.67 °F)	0.51 °C (0.92 °F)

Description	Standard	Long-term drift (±) 1)		
Type L (41)	DIN 43710	0.20 °C (0.36 °F)	0.31 °C (0.56 °F)	0.42 °C (0.76 °F)
Type U (42)	DIN 45710	0.24 °C (0.43 °F)	0.37 °C (0.67 °F)	0.50 °C (0.90 °F)
Type L (43)	GOST R8.8585-2001	0.22 °C (0.40 °F)	0.33 ℃ (0.59 °F)	0.45 °C (0.81 °F)
Voltage transmitter (r	Voltage transmitter (mV)			
-20 to 100 mV		≤ 0.027% * (MV - LRV) or 5.5 µV	≤ 0.041% * (MV - LRV) or 8.2 μV	≤ 0.056% * (MV - LRV) or 11.2 μV

#### 1) Whichever is greater

# Long-term drift analog output

Long term drift $D/A^{1)}$ (±)			
after 1 year	after 3 years	after 5 years	
0.021%	0.029%	0.031%	

1) Percentages based on the configured span of the analog output signal.

# Influence of reference junction

Pt100 DIN IEC 60751 Cl. B (internal cold junction with thermocouples TC)

# 12.5 Environment

# Ambient temperature range

- -40 to +85 °C (-40 to +185 °F), for hazardous areas see Ex documentation
- -50 to +85 °C (-58 to +185 °F), for hazardous areas see Ex documentation , Product Configurator order code for "Test, certificate, declaration", option "JM" <sup>3)</sup>
- -52 to +85 °C (-62 to +185 °F), for hazardous areas see Ex documentation, Product Configurator order code for "Test, certificate, declaration", option "JN" <sup>3)</sup>
- SIL mode: -40 to +70 °C (-40 to +158 °F)

# Storage temperature

- Head transmitter: -50 to +100 °C (-58 to +212 °F)
- Option: -52 to 85 °C (-62 to 185 °F), Product Configurator order code for "Test, certificate, declaration", option "JN"  $^{4)}$
- DIN rail device: -40 to +100 °C (-40 to +212 °F)

#### Altitude

Up to 4000 m (4374.5 yards) above mean sea level as per IEC 61010-1, CAN/CSA C22.2 No. 61010-1

# Humidity

- Condensation:
  - Head transmitter permitted
  - DIN rail transmitter not permitted
- Max. rel. humidity: 95% as per IEC 60068-2-30

# Climate class

- Head transmitter: climate class C1 as per EN 60654-1
- DIN rail device: climate class B2 as per EN 60654-1

<sup>3)</sup> If the temperature is below  $-40\,^{\circ}\text{C}$  ( $-40\,^{\circ}\text{F}$ ), increased failure rates are likely.

<sup>4)</sup> If the temperature is below -50 °C (-58 °F), increased failure rates are likely.

# Degree of protection

- Head transmitter with screw terminals: IP 00, with spring terminals: IP 30. In installed state, depends on the terminal head or field housing used.
- When installing in field housing TA30A, TA30D or TA30H: IP 66/68 (NEMA Type 4x encl.)
- DIN rail device: IP 20

# Shock and vibration resistance

Vibration resistance as per DNVGL-CG-0339: 2015 and DIN EN 60068-2-27

- Head transmitter: 2 to 100 Hz at 4g (increased vibration stress)
- DIN rail device: 2 to 100 Hz at 0.7g (general vibration stress)

Shock resistance as per KTA 3505 (section 5.8.4 Shock test)

# Electromagnetic compatibility (EMC)

# **CE** compliance

Electromagnetic compatibility in accordance with all the relevant requirements of the IEC/EN 61326 series and NAMUR Recommendation EMC (NE21). For details, refer to the Declaration of Conformity. All tests were passed both with and without ongoing digital  $HART^{\circ}$ -communication.

Maximum measured error <1% of measuring range.

Interference immunity as per IEC/EN 61326 series, industrial requirements

Interference emission as per IEC/EN 61326 series, Class B equipment

# Measuring category

Measuring category II as per IEC 61010-1. The measuring category is provided for measuring on power circuits that are directly connected electrically with the low-voltage network.

# Degree of contamination


Pollution degree 2 as per IEC 61010-1.

# 12.6 Mechanical construction

#### Design, dimensions


Dimensions in mm (in)

Head transmitter

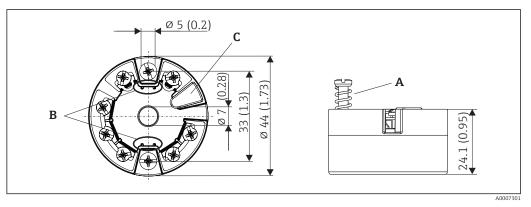


■ 16 Version with screw terminals

- A Spring travel  $L \ge 5$  mm (not for US M4 securing screws)
- B Mounting elements for attachable measured value display TID10
- C Service interface for connecting measured value display or configuration tool

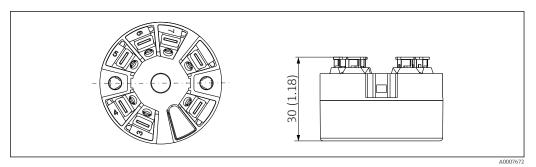

Version with push-in terminals. Dimensions are identical to the version with screw terminals, apart from housing height.


## DIN rail device

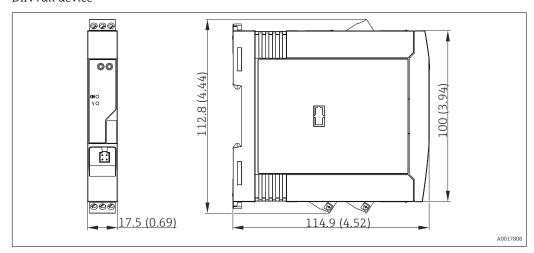



# Field housing


All field housings have an internal geometry in accordance with DIN EN 50446, form B (flat face). Cable glands in the diagrams: M20x1.5


Maximum ambient temperatures for cable glands			
Туре	Temperature range		
Polyamide cable gland ½" NPT, M20x1.5 (non-Ex)	-40 to +100 °C (-40 to 212 °F)		
Polyamide cable gland M20x1.5 (for dust ignition-proof area)	−20 to +95 °C (−4 to 203 °F)		
Brass cable gland ½" NPT, M20x1.5 (for dust ignition-proof area)	-20 to +130 °C (−4 to +266 °F)		

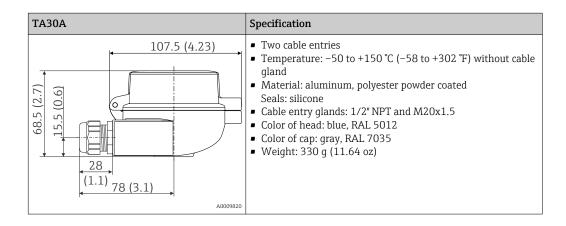

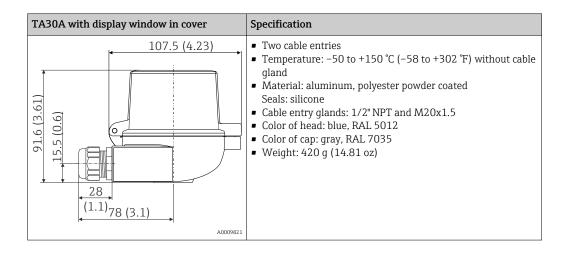

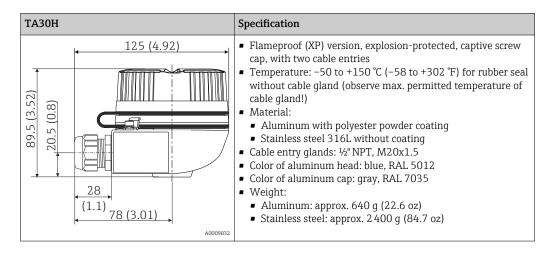

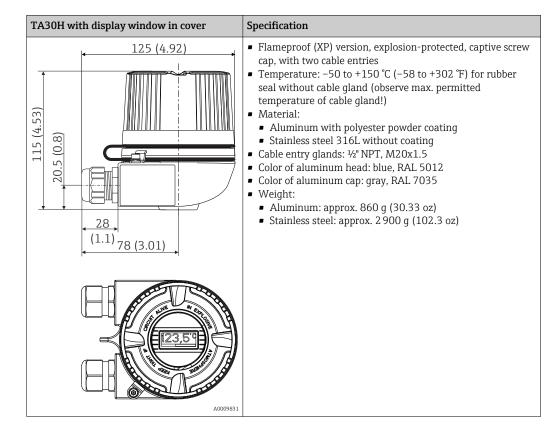

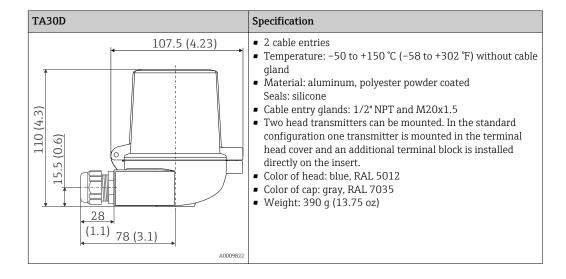

Weight

- Head transmitter: approx. 40 to 50 q (1.4 to 1.8 oz)
- Field housing: see specifications
- DIN rail device: approx. 100 g (3.53 oz)

Materials

All the materials used are RoHS-compliant.

- Housing: polycarbonate (PC)
- Terminals:
  - Screw terminals: nickel-plated brass and gold-plated contacts
  - Push-in terminals: tin-plated brass, contact springs 1.4310, 301 (AISI)
- Potting compound:
  - Head transmitter: QSIL 553 ■ DIN rail housing: Silgel612EH

Field housing: see specifications

#### 12.7 Certificates and approvals

CE mark	The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EC directives. The manufacturer confirms successful testing of the product by affixing to it the CE-mark.
EAC mark	The product meets the legal requirements of the EEU guidelines. The manufacturer confirms the successful testing of the product by affixing the EAC mark.
Ex approval	Information about currently available Ex versions (ATEX, FM, CSA, etc.) can be supplied by your E+H Sales Center on request. All explosion protection data are given in separate documentation which is available upon request.
CSA C/US	The device complies with the requirements of "CLASS 2252 05 - Process Control Equipment" and "CLASS 2252 85 - Process Control Equipment - Certified to US Standards".
Functional safety	SIL 2/3 (hardware/software) certified to:

- IEC 61508-1:2010 (Management)
- IEC 61508-2:2010 (Hardware)
- IEC 61508-3:2010 (Software)

HART® certification	The temperature transmitter is registered by the HART $^{\circ}$ Communication Foundation. The device meets the requirements of the HART $^{\circ}$ Communication Protocol Specifications, Revision 7.
Marine approvals	For the type approval certificates (DNVGL, etc.) currently available, please contact your Sales Center for information. All data relating to shipbuilding can be found in separate type approval certificates which can be requested as needed.
Examination certificate	In compliance with WELMEC 8.8, only in SIL mode: "Guide on the General and Administrative Aspects of the Voluntary System of Modular Evaluation of Measuring Instruments."
Other standards and guidelines	<ul> <li>IEC 60529:         Degrees of protection provided by enclosures (IP code)     </li> <li>IEC/EN 61010-1:         Safety requirements for electrical equipment for measurement, control and laboratory use     </li> <li>IEC/EN 61326 series:         Electromagnetic compatibility (EMC requirements)     </li> </ul>

# 12.8 Documentation

ATEX supplementary documentation: ATEX II 1G Ex ia IIC

#### Operating menu and parameter description 13

The following tables list all the parameters in the "Setup", "Diagnostics" and "Expert" operating menus. The page reference indicates where a description of the parameter can be found in the manual.

Depending on the parameter configuration, not all submenus and parameters are available in every device. Information on this can be found in the parameter description under "Prerequisite". The parameter groups for the Expert setup contain all the parameters of the "Setup" and "Diagnostics" operating menus, as well as other parameters that are solely reserved for experts.

This symbol [a] indicates how to navigate to the parameter using operating tools (e.g. FieldCare).

Configuration in the SIL mode differs from the standard mode and is described in the Functional Safety Manual.

Device tag	→ 🗎 63
Unit	→ 🖺 63
Sensor type 1	→ 🖺 63
Connection type 1	→ 🖺 64
2-wire compensation 1	→ 🖺 64
Reference junction 1	→ 🖺 64
RJ preset value 1	→ 🖺 65
Sensor type 2	→ 🖺 63
Connection type 2	→ 🖺 64
2-wire compensation 2	→ 🖺 64
Reference junction 2	→ 🖺 64
RJ preset value 2	→ 🖺 65
Assign current output (PV)	→ 🖺 65
Lower range value	→ 🖺 66
Upper range value	→ 🖺 66
	Unit  Sensor type 1  Connection type 1  2-wire compensation 1  Reference junction 1  RJ preset value 1  Sensor type 2  Connection type 2  2-wire compensation 2  Reference junction 2  Reference junction 2  Assign current output (PV)  Lower range value

Setup →	Extended setup→	Enter access code	→ 🖺 67
		Access status tooling	→ 🖺 68
		Locking status	→ 🖺 68
		Device temperature alarm	→ 🖺 69

Setup →	Extended setup $\rightarrow$	Sensor →	Sensor offset 1	→ 🖺 69
			Sensor offset 2	→ 🖺 69
			Corrosion detection	→ 🖺 69
			Drift/difference mode	→ 🖺 70
			Drift/difference alarm category	→ 🖺 70
			Drift/difference alarm delay	→ 🖺 71
			Drift/difference set point	→ 🖺 71
			Sensor switch set point	→ 🖺 71

Setup →	Extended setup→	Current output →	Output current	→ 🖺 72
			Measuring mode	→ 🖺 72
			Out of range category	→ 🖺 73
			Failure mode	→ 🖺 73
			Failure current	→ 🖺 73
			Current trimming 4 mA	→ 🖺 74
			Current trimming 20 mA	→ 🖺 74
Cotum )	Entereded action >	Display )	Diaplassintowal	→ 🖺 74
Setup →	Extended setup→	Display →	Display interval	→ 1 74 → 1 75
			Format display	
			Value 1 display	→ 🗎 75
			Decimal places 1	→ 🗎 76
			Value 2 display	→ 🖺 76
			Decimal places 2	→ 🗎 77
			Value 3 display	→ 🗎 77
			Decimal places 3	→ 🗎 78
Setup →	Extended setup→	SIL →	SIL option	→ 🖺 78
	•		Operational state	→ 🖺 78
			SIL checksum	→ 🖺 79
			Timestamp SIL configuration	→ 🖺 79
			Force safe state	→ 🖺 80
				\ <b>P</b> 00
Setup →	Extended setup→	Administration $\rightarrow$	Device reset  Define device write protection code	→ 🖺 80 → 🖺 80
Diagnosis →	Actual diagnostics			→ 🖺 82
	Remedy information			
	Previous diagnostics 1			→ 🖺 82
	Operating time			→ 🖺 82
Diagnosis →	Diagnostic list→	Actual diagnostics coun	<u> </u>	→ 🖺 83
		Actual diagnostics n 1)		→ 🖺 82
		Actual diag channel		→ 🖺 83
n = number	of sensor inputs (1 and 2)			
Diagnosis →	Event logbook →	Previous diagnostics n <sup>1)</sup>		→ 🖺 84
		Previous diag channel n		→ 🖺 84

Diagnosis →	Device information →	Device tag		→ 🖺 63
		Serial number		→ 🖺 85
		Firmware version		→ 🖺 85
		Device name		→ 🖺 85
		Order code		→ 🖺 85
		Extended order code		→ 🖺 107
		Extended order code 2		→ 🖺 107
		Extended order code 3		→ 🖺 107
		ENP version		→ 🖺 103
		Device revision		→ 🖺 100
		Manufacturer ID		→ 🖺 108
		Manufacturer		→ 🖺 108
		Hardware revision		→ 🖺 108
		Configuration counter		→ 🖺 87
Diagnosis →	Measured values →	Sensor 1 value		→ 🖺 87
		Sensor 1 raw value		→ 🖺 87
		Sensor 2 value		→ 🖺 87
		Sensor 2 raw value		→ 🖺 87
		Device temperature		→ 🖺 88
Diagnosis →	Measured values →	Min/max values →	Sensor n 1) min value	→ 🖺 88
			Sensor n max value	→ 🖺 88
			Reset sensor min/max values	
			Device temperature min.	→ 🖺 88
			Device temperature max.	→ 🖺 89
			Reset device temperature min/max	
) n = number	of sensor inputs (1 and 2)			
Diagnosis →	Simulation →	Simulation current outpu	t	→ 🖺 89
		Value current output		→ 🖺 89
Expert →	Enter access code			→ 🗎 67
	Access status tooling			→ 🖺 68
	Locking status			→ 🖺 68
		Unit		→ 🖺 63
Errnant \		1 17111		→ 🗎 63
Expert →	System →			
Expert →	System →	Damping		→ 🖺 91
Expert →	System →	Damping Alarm delay		→ 🖺 91
Expert →	System →	Damping		

Expert →	System →	Display →	Display interval	→ 🖺 74
			Format display	→ 🖺 75
			Value 1 display	→ 🖺 75
			Decimal places 1	→ 🖺 76
			Value 2 display  Decimal places 2	→ 🖺 76
				→ 🖺 77
			Value 3 display	→ 🖺 77
			Decimal places 3	→ 🖺 78

Expert →	System →	Administration $\rightarrow$	Device reset	→ 🖺 80
			Define device write protection code	→ 🖺 80

Expert →	Sensor →	Sensor n 1)→	Sensor type n	→ 🖺 63
			Connection type n	→ 🖺 64
			2-wire compensation n	→ 🖺 64
			Reference junction n	→ 🖺 64
			RJ preset value	→ 🖺 65
			Sensor offset n	→ 🖺 69
			Sensor n lower limit	→ 🖺 92
			Sensor n upper limit	→ 🖺 92
			Sensor n serial number	→ 🖺 92

# 1) n = number of sensor inputs (1 and 2)

Expert →	Sensor →	Sensor n ¹)→	Sensor trimming→	Sensor trimming	→ 🖺 93
				Sensor trimming lower value	→ 🖺 93
				Sensor trimming upper value	→ 🖺 94
				Sensor trimming min span	→ 🖺 94

# 1) n = number of sensor inputs (1 and 2)

Expert →	Sensor →	Sensor n ¹)→	Linearization→	Sensor n lower limit	→ 🖺 92
				Sensor n upper limit	→ 🖺 92
				Call./v. Dusen coeff. R0, A, B, C	→ 🖺 95
				Polynomial coeff. RO, A, B	→ 🖺 96

# 1) n = number of sensor inputs (1 and 2)

Expert →	Sensor →	Diagnostic settings →	Corrosion detection	→ 🖺 69
			Drift/difference mode	→ 🖺 70
			Drift/difference alarm category	→ 🖺 70
			Drift/difference alarm delay	→ 🖺 71
			Drift/difference set point	→ 🖺 71

→ 🖺 103

			Sensor switch set point	→ 🗎 71
			Calibration counter start	→ 🖺 96
			Calibration alarm category	→ 🖺 97
			Calibration counter start value	→ 🖺 97
			Count value	→ 🗎 97
Expert →	Output →	Output current		→ 🖺 72
		Measuring mode		→ 🖺 98
		Lower range value		→ 🖺 66
		Upper range value		→ 🖺 66
		Out of range category		→ 🖺 73
		Failure mode		→ 🖺 73
		Failure current		→ 🖺 73
		Current trimming 4 mA		→ 🖺 74
		Current trimming 20 mA		→ 🖺 74
Expert →	Communication →	HART configuration →	Device tag	→ 🖺 98
_		-	HART short tag	→ 🗎 98
			HART address	→ 🗎 98
			No. of preambles	→ 🖺 99
			Configuration changed	→ 🖺 99
			Reset configuration changed flag	→ 🖺 99
Expert →	Communication →	HART info→	Device type	→ 🖺 99
•			Device revision	→ 🖺 100
			Device ID	→ 🖺 100
			Manufacturer ID	→ 🖺 100
			HART revision	→ 🖺 100
			HART descriptor	→ 🖺 100
			HART message	→ 🖺 101
			Hardware revision	→ 🖺 108
			Software revision	→ 🖺 101
			HART date code	→ 🖺 101
Expert →	Communication →	HART output→	Assign current output (PV)	
Expert /	Communication /	In act output /	PV	→ 🖺 102
			Assign SV	→ <b>1</b> 02
			SV	→ <b>1</b> 02
			Assign TV	→ 🖺 102
			TV	→ 🖺 103
			Assign QV	→ 🖺 103
			1 1001911 Q V	/ 🗏 103

QV

Expert →	$Communication \rightarrow$	Burst configuration $\rightarrow$	Burst mode	→ 🖺 104
			Burst command	→ 🗎 104
			Burst variables 0-3	→ 🖺 104
			Burst trigger mode	→ 🖺 105
			Burst trigger level	→ 🖺 106
			Burst min period	→ 🖺 106
			Burst max period	→ 🗎 106
Expert →	Diagnosis →	Actual diagnostics		→ 🖺 82
—- <b>F</b>	<del>g</del>	Remedy information		
		Previous diagnostics 1		→ 🖺 82
		Operating time		→ 🖺 82
Expert → Diagnosis →	Diagnosis →	Diagnostic list→	Actual diagnostics count	→ 🖺 83
			Actual diagnostics	→ 🖺 82
			Actual diag channel	→ 🖺 83
Expert →	Diagnosis →	Event logbook →	Previous diagnostics n 1)	→ 🖺 84
			Previous diag channel	→ 🖺 84
1) n = numbe	er of sensor inputs (1 and 2)			
Expert →				
Experc 7 Diagnosis	Diagnosis →	Device information →	Device tag	→ 🖺 63
-	Diagnosis →	Device information $\rightarrow$	Device tag Serial number	<ul><li>→ <b>(a)</b> 63</li><li>→ <b>(b)</b> 85</li></ul>
-	Diagnosis →	Device information $\rightarrow$		
-	Diagnosis →	Device information →	Serial number	→ 🖺 85
-	Diagnosis →	Device information →	Serial number Firmware version	→ 🖺 85 → 🖺 85
-	Diagnosis →	Device information →	Serial number Firmware version Device name	<ul> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 85</li> </ul>
-	Diagnosis →	Device information →	Serial number Firmware version Device name Order code	→ 🖺 85  → 🖺 85  → 🖺 85  → 🖺 85
	Diagnosis →	Device information →	Serial number Firmware version Device name Order code Extended order code	<ul> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 107</li> </ul>
	Diagnosis →	Device information →	Serial number Firmware version Device name Order code Extended order code Extended order code 2	→ 🖺 85  → 🖺 85  → 🖺 85  → 🖺 85  → 🖺 107  → 🖺 107
	Diagnosis →	Device information →	Serial number Firmware version Device name Order code Extended order code Extended order code 2 Extended order code 3	→ 🖺 85  → 🖺 85  → 🖺 85  → 🖺 85  → 🖺 107  → 🖺 107  → 🖺 107
	Diagnosis →	Device information →	Serial number Firmware version Device name Order code Extended order code Extended order code 2 Extended order code 3 ENP version	<ul> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 85</li> <li>→ ■ 107</li> <li>→ ■ 107</li> <li>→ ■ 107</li> <li>→ ■ 107</li> </ul>
	Diagnosis →	Device information →	Serial number Firmware version Device name Order code Extended order code 2 Extended order code 3 ENP version Device revision	→ 🖺 85  → 🖺 85  → 🖺 85  → 🖺 85  → 🖺 107  → 🖺 107  → 🖺 107  → 🖺 107  → 🖺 107
	Diagnosis →	Device information →	Serial number Firmware version Device name Order code Extended order code 2 Extended order code 3 ENP version Device revision Manufacturer ID	→ 🖺 85  → 🖺 85  → 🖺 85  → 🖺 85  → 🖺 107  → 🖺 107  → 🖺 107  → 🖺 100  → 🖺 108

Expert →	Diagnosis →	Measured values →	Value sensor n 1)	→ 🖺 87
			Sensor n raw value	→ 🖺 108
			Device temperature	→ 🖺 88

<sup>1)</sup> n = number of sensor inputs (1 and 2)

Expert →	Diagnosis →	Measured values →	Min/max values →	Sensor n 1) min value	→ 🖺 88
				Sensor n max value	→ 🖺 88
				Reset sensor min/max values	
				Device temperature min.	→ 🖺 88
				Device temperature max.	→ 🖺 89
				Reset device temperature min/max	

# 1) n = number of sensor inputs (1 and 2)

Expert →	Diagnosis →	Simulation →	Simulation current output	→ 🖺 89
			Value current output	→ 🖺 89

#### "Setup" menu 13.1

This menu contains all the parameters that are needed to configure the basic settings of the device. The transmitter can be put into operation with this limited parameter set.



Device tag		
Navigation	Setup → Device tag Diagnostics → Device information → Device tag Expert → Diagnostics → Device information → Device tag	
Description	Use this function to enter a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header of the plug-in display.	
User entry	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /)	
Factory setting	-none-	
Unit		
Navigation	Setup → Unit Expert → System → Unit	
Description	Use this function to select the engineering unit for all the measured values.	
Options	<ul> <li>C</li> <li>F</li> <li>K</li> <li>R</li> <li>Ohm</li> <li>mV</li> </ul>	
Factory setting	$^{\circ}\mathrm{C}$	
Sensor type n		
Navigation	Setup → Sensor type n Expert → Sensor → Sensor type n	
Description	Use this function to select the sensor type for the sensor input in question.  Sensor type 1: settings for sensor input 1 Sensor type 2: settings for sensor input 2	
	Please observe the terminal assignment when connecting → ■ 8, ■ 17 the	

options must also be observed.

individual sensors. In the case of 2-channel operation, the possible connection

**Options** A list of all the possible sensor types is provided in the "Technical data" section.  $\rightarrow \triangleq 40$ 

Factory setting Sensor type 1: Pt100 IEC751

Sensor type 2: No sensor

Connection type n

**Navigation**  $\square$  Setup  $\rightarrow$  Connection type n

Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $n \rightarrow$  Connection type n

**Prerequisite** An RTD sensor must be specified as the sensor type.

**Description** Use this function to select the connection type for the sensor.

**Options** • Sensor 1 (connection type 1): 2-wire, 3-wire, 4-wire

• Sensor 2 (connection type 2): 2-wire, 3-wire

**Factory setting** ■ Sensor 1 (connection type 1): 4-wire

■ Sensor 2 (connection type 2): 2-wire

2-wire compensation n

**Navigation** Setup  $\rightarrow$  2-wire compensation n

Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $n \rightarrow 2$ -wire compensation n

**Prerequisite** An RTD sensor with a **2-wire** connection type must be specified as the sensor type.

**Description** Use this function to specify the resistance value for two-wire compensation in RTDs.

**User entry** 0 to 30 Ohm

Factory setting 0

Reference junction n

**Navigation**  $\square$  Setup  $\rightarrow$  Reference junction n

Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $n \rightarrow$  Reference junction n

**Prerequisite** A thermocouple (TC) sensor must be selected as the sensor type.

## Description

Use this function to select reference junction measurement for temperature compensation of thermocouples (TC).



- If **Preset value** is selected, the compensation value is specified via the **RJ preset value** parameter.
- Temperature measured must be configured for channel 2 if **Measured value** sensor **2** is selected

## **Options**

- No compensation: no temperature compensation is used.
- Internal measurement: the internal reference junction temperature is used.
- Preset value: a fixed preset value is used.
- Measured value sensor 2: the measured value of sensor 2 is used.



It is not possible to selected the **Measured value sensor 2** option for the **Reference junction 2** parameter.

## **Factory setting**

Internal measurement

# RJ preset value n

Navigation

Setup  $\rightarrow$  RJ preset value

Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor n  $\rightarrow$ RJ preset value

Prerequisite

The **Preset value** parameter must be set if the **Reference junction n** option is selected.

Description

Use this function to define the fixed preset value for temperature compensation.

User entry

-50 to +85 ℃

**Factory setting** 

0.00

## Assign current output (PV)

Navigation



Setup → Assign current output (PV)

Expert  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Assign current output (PV)

Description

Use this function to assign a measured variable to the primary HART® value (PV).

#### **Options**

- Sensor 1 (measured value)
- Sensor 2 (measured value)
- Device temperature
- Average of the two measured values: 0.5 x (SV1+SV2)
- Difference between sensor 1 and sensor 2: SV1-SV2
- Sensor 1 (backup sensor 2): If sensor 1 fails, the value of sensor 2 automatically becomes the primary HART® value (PV): sensor 1 (OR sensor 2)
- Sensor switching: If the value exceeds the configured threshold value T for sensor 1, the measured value of sensor 2 becomes the primary HART® value (PV). The system switches back to sensor 1 if the measured value of sensor 1 is at least 2 K below T: sensor 1 (sensor 2, if sensor 1 > T)
- Average: 0.5 x (SV1+SV2) with backup (measured value of sensor 1 or sensor 2 in the event of a sensor error in the other sensor)
- The threshold value can be configured using the **Sensor switch set point** parameter. With temperature-dependent switching, it is possible to combine 2 sensors that offer advantages in different temperature ranges.

## **Factory setting**

Sensor 1

-					
Lov	TOT	ran	MΑ	772	1110
LUV	v CI	ıan	uc	v a	ıuc

**Navigation** 

Setup → Lower range valueExpert → Output → Lower range value

Description

Use this function to assign a measured value to the current value 4 mA.

i

The limit value that can be set depends on the sensor type used in the **Sensor type** parameter and the measured variable assigned in the **Assign current output (PV)** parameter.

User entry

Depends on the sensor type and the setting for "Assign current output (PV)".

**Factory setting** 

0

## Upper range value

**Navigation** 

Setup → Upper range value
Expert → Output → Upper range value

Description

Use this function to assign a measured value to the current value 20 mA.

The limit value that can be set depends on the sensor type used in the **Sensor type** parameter and the measured variable assigned in the **Assign current output (PV)** parameter.

User entry

Depends on the sensor type and the setting for "Assign current output (PV)".

Factory setting

100

# 13.1.1 "Extended Setup" submenu


#### **Corrosion monitoring**


Sensor connection cable corrosion can lead to false measured value readings. Therefore the unit offers the possibility of recognizing any corrosion before a measured value is affected. Corrosion monitoring is only possible for RTDs with a 4-wire connection and thermocouples.

#### Drift/difference mode

If two sensors are connected and the measured values differ by a specified value, a status signal is generated as a diagnostic event. The drift/difference monitoring function can be used to verify the correctness of the measured values and for mutual monitoring of the connected sensors. Drift/difference monitoring is enabled with the **Drift/difference mode** parameter. A distinction is made between two specific modes. If the **In band** option is selected (ISV1-SV2I < drift/difference set point), a status message is issued if the value drops below the set point, or if the value exceeds the set point if the **Out band (drift)** option is selected (ISV1-SV2I > drift/difference set point).

Procedure for configuring the drift/difference mode

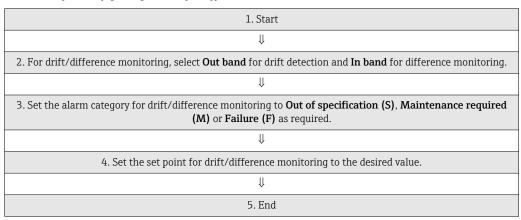

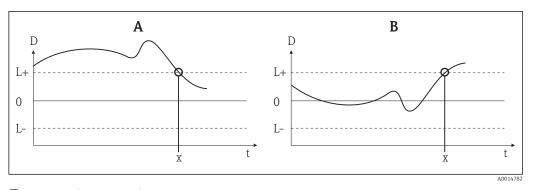

■ 18 Drift/difference mode

A Value under range

B Value over range

D Drift

L+, Upper (+) or lower (-) set point

L-

t Tim

x Diagnostics event, status signal is generated

Enter access code

## **Navigation**

Setup → Advanced setup → Enter access code Expert → Enter access code

## Description

Use this function to enable the service parameters via the operating tool. If an incorrect access code is entered, the user retains his current access authorization.



If a value is entered that is not to equal to the access code, the parameter is automatically set to  $\bf 0$ . The service parameters should only be modified by the service organization.

#### Additional information

Software device write protection is also switched on and off with this parameter.

Software device write protection in conjunction with download from an operating tool with offline capabilities

- Download, the device does not have a defined write protection code:
   The download is performed as normal.
- Download, defined write protection code, device is not locked.
  - The **Enter access code** parameter (offline) contains the correct write protection code: the download is carried out, and the device is not locked following the download. The write protection code in the **Enter access code** parameter is set to **0**.
  - The **Enter access code** parameter (offline) does not contain the correct write protection code: the download is carried out, and the device is locked following the download. The write protection code in the **Enter access code** parameter is reset to **0**.
- Download, defined write protection code, device is locked.
  - The **Enter access code** parameter (offline) contains the correct write protection code: the download is carried out, and the device is locked following the download. The write protection code in the **Enter access code** parameter is reset to **0**.
  - The **Enter access code** parameter (offline) does not contain the correct write protection code: the download is not carried out. No values are changed in the device. The value of the **Enter access code** parameter (offline) also remains unchanged.

**User entry** 0 to 9 999

0

Factory setting

### Access status tooling

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Access status tooling Expert  $\rightarrow$  Access status tooling

**Description** Use this function to show access authorization to the parameters.

**Additional information** If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter .

Factory setting Operator

# Locking status

#### 68

**Description** Use this function to view the device locking status. The DIP switch for hardware locking is

fitted on the display module. When write protection is activated, write access to the

parameters is disabled.

# Device temperature alarm

**Navigation**  $\Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Device temperature alarm

**Description** Use this function to select the category (status signal) as to how the device reacts when

the electronics temperature of the transmitter exceeds or falls below the limit value <

 $-40 \,^{\circ}\text{C} \, (-40 \,^{\circ}\text{F}) \, \text{or} > +85 \,^{\circ}\text{C} \, (+185 \,^{\circ}\text{F}).$ 

**Options** ■ Off

Out of specification (S)

■ Failure (F)

**Factory setting** Out of specification (S)

"Sensor" submenu

# Sensor offset n

n = Stands for the number of sensor inputs (1 and 2)

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor  $\rightarrow$  Sensor offset n Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor offset n

**Description** Use this function to set the zero point correction (offset) of the sensor measured value.

The value indicated is added to the measured value.

**User entry** -10.0...+10.0

Factory setting 0.0

### Corrosion detection

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor  $\rightarrow$  Corrosion detection Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Corrosion detection

## Description

Use this function to select the category (status signal) which is displayed when corrosion is detected in the sensor connection cables.



Only possible for RTD sensors with 4-wire connection and thermocouples (TC).

**Options** 

- Maintenance required (M)
- Failure (F)

Factory setting

Maintenance required (M)

#### Drift/difference mode

# Navigation

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor  $\rightarrow$  Drift/difference mode Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Drift/difference mode

#### Description

Use this function to choose whether the device reacts to the drift/difference limit value being exceeded or undershot.



Can only be selected for 2-channel operation.

#### Additional information

- If the **Out band (drift)** option is selected, a status signal is displayed if the absolute value for the differential value exceeds the drift/difference set point
- If the **In band** option is selected, a status signal is displayed if the absolute value for the differential value drops below the drift/difference set point.

#### **Options**

- Off
- Out band (drift)
- In band

#### **Factory setting**

Off

# Drift/difference alarm category

Navigation

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor  $\rightarrow$  Drift/difference alarm category Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Drift/difference alarm category

**Prerequisite** 

The **Drift/difference mode** parameter must be activated with the **Out band (drift)** or **In band** option.

Description

Use this function to select the category (status signal) as to how the device reacts when a drift/difference is detected between sensor 1 and sensor 2.

**Options** 

- Out of specification (S)
- Maintenance required (M)
- Failure (F)

### **Factory setting**

Maintenance required (M)

# Drift/difference alarm delay

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor  $\rightarrow$  Drift/difference alarm delay

Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Drift/difference alarm delay

**Prerequisite** The Drift/difference mode parameter must be activated with the Out band (drift) or In

**band** option.  $\rightarrow \blacksquare 70$ 

Description Alarm delay for drift detection monitoring.

Useful for example in the event of different thermal mass ratings for the sensors in

conjunction with a high temperature gradient in the process.

0 to 255 s User entry

**Factory setting** 0 s

# Drift/difference set point

**Navigation** Setup → Advanced setup → Sensor → Drift/difference set point 

Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Drift/difference set point

**Prerequisite** The **Drift/difference mode** parameter must be activated with the **Out band (drift)** or **In** 

band option.

Description Use this function to configure the maximum permissible measured value deviation

between sensor 1 and sensor 2 which results in drift/difference detection.

**Options** 0.1 to 999.0 K (0.18 to 1798.2 °F)

999.0 **Factory setting** 

# Sensor switch set point

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor  $\rightarrow$  Sensor switch set point

Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Sensor switch set point

Description Use this function to set the threshold value for sensor switching.

Additional information The threshold value is relevant if the sensor switching function is assigned to a HART®

variable (PV, SV, TV, QV).

**Options** Depends on the sensor types selected.

**Factory setting** 850°C

# "Current output" submenu

# Adjustment of the analog output (4 and 20 mA current trimming)

Current trimming is used to compensate the analog output (D/A conversion). Here, the output current of the transmitter must be adapted so that it suits the value expected at the higher-order system.

# **NOTICE**

Current trimming does not affect the digital HART® value. This can cause the measured value shown on the plug-in display to differ from the value displayed in the higher-order system.

► The digital measured values can be adapted with the sensor trimming parameter in the menu Expert → Sensor → Sensor trimming.

#### Procedure

1. Start				
<b>1</b>				
2. Install an accurate amperemeter (more accurate then the transmitter) in the current loop.				
<b>1</b>				
3. Switch on current output simulation and set the simulation value to 4 mA.				
<b>1</b>				
4. Measure the loop current with the amperemeter and make a note of the value.				
5. Set the simulation value to 20 mA.				
₩				
6. Measure the loop current with the amperemeter and make a note of the value.				
. ↓				
7. Enter the current values determined as adjustment values in the <b>Current trimming 4 mA / 20 mA</b> parameters				
↓				
8. End				

Output current		
Navigation	Setup → Advanced setup → Current output → Output current Expert → Output → Output current	
Description	Use this function to view the calculated output current in mA.	
Measuring mode		
Navigation	Setup → Advanced setup → Current output → Measuring mode Expert → Output → Measuring mode	
Description	Enables the inversion of the output signal.	

Additional information • Standard

The output current increases with increasing temperatures

inverted

The output current decreases with increasing temperatures

**Options** • Standard

■ inverted

Factory setting Standard

Out of range category

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Current output  $\rightarrow$  Out of range category

Expert → Output → Out of range category

**Description** Use this function to select the category (status signal) as to how the device reacts when

the value is outside the set measuring range.

**Options** ■ Out of specification (S)

Maintenance required (M)

■ Failure (F)

**Factory setting** Maintenance required (M)

Failure mode

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Current output  $\rightarrow$  Failure mode

Expert  $\rightarrow$  Output  $\rightarrow$  Failure mode

**Description** Use this function to select the signal on alarm level of the current output in the event of an

error.

**Additional information** If **Max.** is selected, the signal on alarm level is specified using the **Failure current** 

parameter.

**Options** • Min.

Max.

Factory setting Max.

Failure current

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Current output  $\rightarrow$  Failure current

Expert  $\rightarrow$  Output  $\rightarrow$  Failure current

**Prerequisite** The **Max.** option is enabled in the **Failure mode** parameter.

**Description** Use this function to set the value the current output adopts in an alarm condition.

**User entry** 21.5 to 23.0 mA

Factory setting 22.5

# Current trimming 4 mA

Expert → Output → Current trimming 4 mA

**Description** Use this function to set the correction value for the current output at the start of the

measuring range at 4 mA.

**User entry** 3.85 to 4.15 mA

Factory setting 4 mA

#### Current trimming 20 mA

Expert → Output → Current trimming 20 mA

**Description** Use this function to set the correction value for the current output at the end of the

measuring range at 20 mA.

**User entry** 19.850 to 20.15 mA

Factory setting 20.000 mA

# "Display" submenu

The settings for displaying the measured value on the optional plug-in display (only for head transmitter) are made in the "Display" menu.

These settings do not have any effect on the output values of the transmitter. They are only used to configure how information is shown on the display.

#### Display interval

#### Description

Use this function to set the length of time the measured values are displayed if the values alternate on the display. The display only alternates between values if more than one measured value is defined.



- The Value 1 display Value 3 display parameters are used to specify what measured values are shown on the display → 🗎 75.
- The display format of the displayed measured values is specified using the **Format display** parameter.

**User input** 4 to 20 s

**Factory settings** 4 s

### Format display

Navigation

Setup → Advanced setup → Display → Format display
Expert → System → Display → Format display

Description

Use this function to select how the measured value is shown on the local display. The display format **Measured value** or **Measured value with bar graph** can be configured.

**Options:** 


- Value only
- Value + Bargraph

**Factory settings** 

Value only


Additional information

Value only

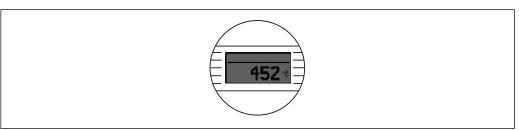

A0014564

Value + Bargraph

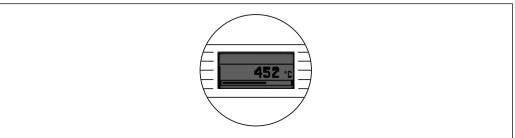

A001456

#### Value 1 display

**Navigation** 

Setup → Advanced setup → Display → Value 1 display
Expert → System → Display → Value 1 display

Description

Use this function to select one of the measured values to be shown on the local display.

i

**Options:** 

- Process value
- Sensor 1
- Sensor 2
- Output current
- Percent of range
- Device temperature

**Factory settings** 

Process value

## Decimal places 1

Navigation

Setup → Advanced setup → Display → Decimal places 1 Expert → System → Display → Decimal places 1

Prerequisite

Description

Use this function to select the number of decimal places displayed for the display value. This setting does not affect the accuracy of the device for measuring or calculating the value.

i

If **Automatic** is selected, the maximum possible number of decimal places is always shown on the display.

**Options:** 

- X
- X.X
- X.XX
- X.XXX
- X.XXXX
- Automatic

**Factory settings** 

Automatic

# Value 2 display

Navigation

Setup → Advanced setup → Display → Value 2 display
Expert → System → Display → Value 2 display

Description

Use this function to select one of the measured values to be shown on the local display.

The **Format display** parameter is used to specify how the measured values are displayed.

**Options:** 

- Off
- Process value
- Sensor 1
- Sensor 2
- Output current
- Percent of range
- Device temperature

**Factory settings** 

Off

#### Decimal places 2

**Navigation** 



Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Decimal places 2 Expert  $\rightarrow$  System  $\rightarrow$  Display  $\rightarrow$  Decimal places 2

**Prerequisite** 

A measured value is specified in the **Value 2 display** parameter.

Description

Use this function to select the number of decimal places displayed for the display value. This setting does not affect the accuracy of the device for measuring or calculating the value.



If **Automatic** is selected, the maximum possible number of decimal places is always shown on the display.

**Options:** 

- X
- X.X
- X.XX
- x.xxxx.xxxx
- Automatic

**Factory settings** 

Automatic

#### Value 3 display

Navigation



Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Value 3 display Expert  $\rightarrow$  System  $\rightarrow$  Display  $\rightarrow$  Value 3 display

Description

Use this function to select one of the measured values to be shown on the local display.

The **Format display** parameter is used to specify how the measured values are displayed.

Options:

- lacksquare Off
- Process value
- Sensor 1
- Sensor 2
- Output current
- Percent of range
- Device temperature

#### **Factory settings**

Off

# Decimal places 3

#### Navigation

Setup → Advanced setup → Display → Decimal places 3
Expert → System → Display → Decimal places 3

#### **Prerequisite**

A measured value is specified in the **Value 3 display** parameter.

#### Description

Use this function to select the number of decimal places displayed for the display value. This setting does not affect the accuracy of the device for measuring or calculating the value.



If **Automatic** is selected, the maximum possible number of decimal places is always shown on the display.

#### **Options:**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX
- Automatic

#### **Factory settings**

Automatic

#### "SIL" submenu



This menu only appears if the device was ordered with the 'SIL mode' option. The **SIL option** parameter indicates whether the device can be operated in the SIL mode. To enable the SIL mode for the device, menu-guided operation for **Enable SIL** must be performed.

#### SIL option

#### **Navigation**

#### Description

Indicates whether the device has been ordered with SIL certification. SIL certificate of the device



The SIL option is required to operate the device in the SIL mode.

#### **Options**

■ No

Yes

# Factory setting

No

#### Operational state

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  SIL  $\rightarrow$  Operational state

**Description** Displays the device operational state in the SIL mode.

**Display** ■ Checking SIL option

- Startup normal mode
- Self diagnostic
- Normal mode
- Download active
- SIL mode active
- Safe para start
- Safe param running
- Save parameter values
- Parameter check
- Reboot pending
- Reset checksum
- Safe state Active
- Download verification
- Upload active
- Safe state Passive
- Temporary safe state

**Factory setting** Checking SIL option

#### SIL checksum

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  SIL  $\rightarrow$  SIL checksum

**Description** Use this function to display the SIL checksum entered.

The **SIL** checksum displayed can be used to check the device configuration. If 2 devices have identical configurations, the SIL checksum is also identical. This can make for easy device replacement because if the checksum is the same, the device configuration is guaranteed to be identical too.

#### Timestamp SIL configuration

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  SIL  $\rightarrow$  Timestamp SIL configuration

**Description**Use this function to enter the date and time when the SIL parameterization has been completed and the SIL checksum has been calculated.

The date and time must be entered manually. This information is not generated automatically by the device.

**User entry** DD.MM.YYYY hh:mm

**Factory setting** 0

Force safe state

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  SIL  $\rightarrow$  Force safe state

**Prerequisite** The **Operational state** parameter displays **SIL mode active**.

**Description** This parameter is used to test error detection and the safe state of the device.

Options • On

Off

Factory setting Off

"Administration" submenu

#### Device reset

Expert  $\rightarrow$  System  $\rightarrow$  Device reset

**Description** Use this function to reset the device configuration - either entirely or in part - to a defined

state.

Options • Not active

No action is executed and the user exits the parameter.

■ To factory defaults

All the parameters are reset to the factory setting.

■ To delivery settings

All the parameters are reset to the order configuration. The order configuration can differ from the factory setting if customer-specific parameter values were defined when the device was ordered.

Restart device

The device is restarted but the device configuration remains unchanged.

**Factory setting** Not active

#### Define device write protection code

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define device write protection code Expert  $\rightarrow$  System  $\rightarrow$  Define device write protection code

**Description** Sets a write protection code for the device.

If the code is programmed into the device firmware it is saved in the device and the operating tool displays the value  ${\bf 0}$  so that the defined write protection code is not openly displayed for viewing.

**User entry** 0 to 9 999

#### **Factory setting**

0



If the device is delivered with this factory setting the device write protection is not active.

#### Additional information

- Activating device write protection: To do so, enter a value in the Enter access code parameter that does not correspond to the write protection code defined here.
- Deactivating device write protection: If device write protection is activated, enter the defined write protection code in the Enter access code parameter.
- Once the device has been reset to the factory setting or the order configuration, the defined write protection code is no longer valid. The code adopts the factory setting (= 0).
- Hardware write protection (DIP switches) is active:
  - Hardware write protection has priority over the software write protection described here.
  - No value can be entered in the Enter access code parameter. The parameter is a read only parameter.
  - Device write protection via software can only be defined and activated if hardware write protection via the DIP switches is disabled.
- If the write protection code has been forgotten, it can be deleted or overwritten by the service organization.

# 13.2 "Diagnostics" menu

All the information that describes the device, the device status and the process conditions can be found in this group.

## **Actual diagnostics**

**Navigation** □ Diagnostics → Actual diagnostics

Expert → Diagnostics → Actual diagnostics

**Description** Use this function to display the current diagnostics message. If two or more messages

occur simultaneously, the message with the highest priority is shown on the display.

**Display** Symbol for event behavior and diagnostic event.

**Additional information** Example for display format:

F261-Electronics modules

## Previous diagnostics 1

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Previous diagnostics 1

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Previous diagnostics 1

**Description** Use this function to display the last diagnostics message with the highest priority.

**Display** Symbol for event behavior and diagnostic event.

**Additional information** Example for display format:

F261-Electronics modules

#### Operating time

**Navigation** □ Diagnostics → Operating time

Expert → Diagnostics → Operating time

**Description** Use this function to display the length of time the device has been in operation.

**Display** Hours (h)

# 13.2.1 "Diagnose list" submenu

Up to 3 diagnostic messages currently pending are displayed in this submenu. If more than 3 messages are pending, the messages with the highest priority are shown on the display. Information on diagnostics measures in the device and an overview of all the diagnostics messages  $\rightarrow \blacksquare$  33.

## Actual diagnostics count

**Navigation** 

Diagnostics → Diagnostic list → Actual diagnostics count

Expert → Diagnostics → Diagnostic list → Actual diagnostics count

**Description** Use this function to display the number of diagnosis messages currently pending in the

device.

# **Current diagnostics**

**Navigation** 

□ Diagnostics → Diagnostic list → Actual diagnostics
 Expert → Diagnostics → Diagnostic list → Actual diagnostics

**Description** Use this function to display the current diagnostics messages with the highest priority to

the third-highest priority.

**Display** Symbol for event behavior and diagnostic event.

**Additional information** Example for display format:

F261-Electronics modules

## Actual diag channel

Navigation

□ Diagnostics → Diagnostic list → Actual diag channel
 Expert → Diagnostics → Diagnostic list → Actual diag channel

Description

Use this function to display the sensor input to which the diagnostics message refers.

Display

• Sensor 1

■ Sensor 2

# 13.2.2 "Event logbook" submenu

## Previous diagnostics n

n = Number of diagnostics messages (n = 1 to 5)

**Navigation** Diagnostics  $\rightarrow$  Diagnostic list  $\rightarrow$  Previous diagnostics n

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Diagnostic list  $\rightarrow$  Previous diagnostics n

**Description** Use this function to display the diagnostics messages that occurred in the past. The last 5

messages are listed in chronological order.

**Display** Symbol for event behavior and diagnostic event.

**Additional information** Example for display format:

F261-Electronics modules

#### Previous diag n channel

**Navigation** □ Diagnostics → Diagnostic list → Previous diag channel

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Diagnostic list  $\rightarrow$  Previous diag channel

**Description** Use this function to display the possible sensor input to which the diagnostics message

refers.

Display •----

■ Sensor 1

■ Sensor 2

# 13.2.3 "Device information" submenu

# Device tag

**Navigation**  $\square$  Setup  $\rightarrow$  Device tag

Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Device tag

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Device tag

Description

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

**Factory setting** 32 x '?'

Serial number					
Navigation	directly from the order code.  Uses of the order code  To order an identical spare device.				
Description					
Display	Max. 11-digit character string comprising letters and numbers				
Firmware version					
Navigation	_ •				
Description	Displays the installed device firmware version.				
Display	Max. 6-digit character string in the format xx.yy.zz				
Device name					
Navigation	<del>-</del> *				
Description	Displays the device name. It can also be found on the nameplate.				
Order code					
Navigation	_ *				
Description	nameplate. The order code is generated from the extended order code, which defines all the device features of the product structure. In contrast, the device features cannot be read				

# Extended order code 1-3

#### Navigation

Diagnostics → Device information → Extended order code 1-3
Expert → Diagnostics → Device information → Extended order code 1-3

#### Description

Displays the first, second and/or third part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates the version of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate.



## Uses of the extended order code

- To order an identical spare device.
- To check the ordered device features using the delivery note.

ENP version					
Navigation	□ Diagnostics → Device information → ENP version Expert → Diagnostics → Device information → ENP version				
Description	Disp	lays the version of the electronic nameplate.			
Display	6-digit number in the format xx.yy.zz				
Device revision					
Navigation		Diagnostics $\rightarrow$ Device info $\rightarrow$ Device revision Expert $\rightarrow$ Diagnostics $\rightarrow$ Device information $\rightarrow$ Device revision Expert $\rightarrow$ Communication $\rightarrow$ HART info $\rightarrow$ Device revision			
Description	Use this function to view the device revision with which the device is registered with the HART FieldComm Group. It is needed to assign the appropriate device description file (D to the device.				
Display	2-dig	git hexadecimal number			
Manufacturer ID→ 🗎 100					
Navigation		Diagnostics $\rightarrow$ Device information $\rightarrow$ Manufacturer ID Expert $\rightarrow$ Communication $\rightarrow$ HART info $\rightarrow$ Manufacturer ID			

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Manufacturer ID

#### Manufacturer

**Navigation** 

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Manufacturer

Description

Displays the manufacturer name.

#### Hardware revision

**Navigation** 

 $\Box$  Diagnostics → Device information → Hardware revision

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Hardware revision Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  Hardware revision

Description

Displays the hardware revision of the device.

#### **Configuration counter**

#### **Navigation**

□ Diagnostics → Device info. → Configuration counter
 Expert → Diagnostics → Device info. → Configuration counter

#### Description

Use this function to display the counter reading for changes to device parameters.

Static parameters, whose values change during optimization or configuration, cause this parameter to increment by 1. This support parameter version management. If several parameters change, e.g. as a result of loading parameters from FieldCare etc. to the device, the counter can show a higher value. The counter cannot be reset and is also not reset to the default value when the device is reset. If the counter overflows, (16 bit), it starts again at 1.

## 13.2.4 "Measured values" submenu

#### Sensor n value

ho n = Stands for the number of sensor inputs (1 and 2)

#### **Navigation**

Diagnostics → Measured values → Sensor n value
Expert → Diagnostics → Measured values → Sensor n value

#### Description

Use this function to display the current measured value at the sensor input.

#### Sensor n raw value

n =Stands for the number of sensor inputs (1 and 2)

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Sensor n value

Expert → Diagnostics → Measured values → Sensor n value

Description Displays the non-linearized mV/Ohm value at the specific sensor input.

#### **Device temperature**

**Navigation** Diagnostics → Measured values → Device temperature Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Device temperature

Description Use this function to display the current electronics temperature.

"Min/max values" submenu

#### Sensor n min value

n = Stands for the number of sensor inputs (1 and 2)

Navigation

Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Sensor n min value Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Sensor n min value

Description

Use this function to display the minimum temperature measured in the past at sensor input 1 or 2 (peakhold indicator).

#### Sensor n max value

n = Stands for the number of sensor inputs (1 and 2)

Navigation

Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Sensor n max value Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Sensor n max. value

Description Use this function to display the maximum temperature measured in the past at sensor

input 1 or 2 (peakhold indicator).

#### Device temperature min.

# Navigation

Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Device temperature min. Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Device temperature min.

**Description** Use this function to display the minimum electronics temperature measured in the past

(peakhold indicator).

Device temperature max.

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Device temperature max.

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Min/max values  $\rightarrow$  Device temperature

max.

**Description** Use this function to display the maximum electronics temperature measured in the past

(peakhold indicator).

13.2.5 "Simulation" submenu

Current output simulation

**Navigation** □ Diagnostics → Simulation → Current output simulation

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Current output simulation

**Description** Use this function to switch simulation of the current output on and off. The display

alternates between the measured value and a diagnostics message of the "function check"

category (C) while simulation is in progress.

**Display** Measured value display ↔ C491 (current output simulation)

Options • Off

On

**Factory setting** Off

**Additional information** The simulation value is defined in the **Value current output** parameter.

Value current output

**Navigation** Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Value current output

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Value current output

Additional information The Current output simulation parameter must be set to On.

**Description** Use this function to set a current value for the simulation. In this way, users can verify the

correct adjustment of the current output and the correct function of downstream switching

units.

**User entry** 3.59 to 23.0 mA

Factory setting

3.58 mA

**Factory setting** 

50 Hz

#### "Expert" menu 13.3



The parameter groups for the Expert setup contain all the parameters of the "Setup" and "Diagnostics" operating menus, as well as other parameters that are solely reserved for experts. Descriptions of the additional parameters can be found in this section. All the fundamental parameter settings for transmitter commissioning and diagnostic evaluation are described in the "Setup menu"→ 🖺 63 and "Diagnostics menu"  $\rightarrow$   $\blacksquare$  82 sections.

#### 13.3.1 "System" submenu

Damping				
Navigation	Expert → System → Damping			
Description	Use this function to set the time constant for current output damping.			
User entry	0 to 120 s			
Factory setting	0.00 s			
Additional information	The current output reacts with an exponential delay to fluctuations in the measured value. The time constant of this delay is specified by this parameter. If a low time constant is entered, the current output follows the measured value quickly. On the other hand, if a high time constant is entered, the current output reaction is delayed.			
Alarm delay				
Navigation	Expert → System → Alarm delay			
Description	Use this function to set the delay time during which a diagnostics signal is suppressed before it is output.			
User entry	0 to 5 s			
Factory setting	2 s			
Mains filter				
Navigation	$\square$ Expert $\rightarrow$ System $\rightarrow$ Mains filter			
Description	Use this function to select the mains filter for A/D conversion.			
Options 50 Hz 60 Hz				

# Device temperature alarm $\rightarrow \triangleq 69$ **Navigation** Expert $\rightarrow$ System $\rightarrow$ Device temperature alarm "Display" submenu → 🗎 74 "Administration" submenu → 🖺 80 13.3.2 "Sensor" submenu "Sensor 1/2" submenu $\square$ n = Stands for the number of sensor inputs (1 and 2) Sensor n lower limit Expert $\rightarrow$ Sensor $\rightarrow$ Sensor $n \rightarrow$ Sensor n lower limit Navigation Description Displays the minimum physical full scale value. Sensor n upper limit Expert $\rightarrow$ Sensor $\rightarrow$ Sensor $n \rightarrow$ Sensor $n \downarrow$ upper limit Navigation Description Displays the maximum physical full scale value. Sensor serial number **Navigation** Expert $\rightarrow$ Sensor $\rightarrow$ Sensor n $\rightarrow$ Serial no. sensor Description Use this function to enter the serial number of the connected sensor. **User entry** String with up to 12 characters consisting of numbers and/or text **Factory setting** "" (no text)

"Sensor trimming" submenu

## Sensor error adjustment (sensor trimming)

Sensor trimming is used to adapt the actual sensor signal to the linearization of the selected sensor type stored in the transmitter. Compared to sensor transmitter matching, sensor trimming only takes place at the start and end value and does not achieve the same level of accuracy.



Sensor trimming does not adapt the measuring range. It is used to adapt the sensor signal to the linearization stored in the transmitter.

#### Procedure

1. Start
<b>U</b>
2. Set the <b>Sensor trimming</b> parameter to the <b>Customer-specific</b> setting.
<b>U</b>
3. Using a water/oil bath, bring the sensor connected to the transmitter to a known and stable temperature. A temperature which is close to the set start of the measuring range is recommended.
<b>U</b>
4. Enter the reference temperature for the value at the start of the measuring range for the <b>Sensor trimming lower value</b> parameter. Based on the difference between the specified reference temperature and the temperature actually measured at the input, the transmitter internally calculates a correction factor which is now used to linearize the input signal.
Ų
5. Using a water/oil bath, bring the sensor connected to the transmitter to a known and stable temperature close to the set end of the measuring range.
↓
6. Enter the reference temperature for the value at the end of the measuring range for the <b>Sensor trimming upper value</b> parameter.
Ų
7. End

# Sensor trimming

**Navigation** 

Description

Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor trimming  $\rightarrow$  Sensor trimming

Use this function to select the linearization method to be used for the connected sensor.

The original linearization can be restored by resetting this parameter to the **Factory** setting option.

**Options** 

- Factory setting
- Customer-specific

**Factory setting** 

Factory setting

#### Sensor trimming lower value

Navigation

 $\mathsf{Expert} \to \mathsf{Sensor} \to \mathsf{Sensor} \; \mathsf{n} \to \mathsf{Sensor} \; \mathsf{trimming} \to \mathsf{Sensor} \; \mathsf{trimming} \; \mathsf{lower} \; \mathsf{value}$ 

**Prerequisite** The **Customer-specific** option is enabled in the **Sensor trimming** parameter  $\rightarrow = 93$ .

**Description** Lower point for linear characteristic calibration (this affects offset and slope).

**User entry** Depends on the selected sensor type and the assignment of the current output (PV).

**Factory setting** −200 °C

## Sensor trimming upper value

**Navigation**  $\square$  Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor trimming  $\rightarrow$  Sensor trimming upper value

**Prerequisite** The **Customer-specific** option is enabled in the **Sensor trimming** parameter.

**Description** Upper point for linear characteristic calibration (this affects offset and slope).

**User entry** Depends on the selected sensor type and the assignment of the current output (PV).

**Factory setting** 850  $^{\circ}$ C

### Sensor trimming min span

**Navigation**  $\square$  Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor trimming  $\rightarrow$  Sensor trimming min span

**Prerequisite** The **Customer-specific** option is enabled in the **Sensor trimming** parameter.

**Description** Use this function to view the minimum possible span between the sensor trimming upper and lower value.

"Linearization" submenu

Procedure for configuring a linearization using Callendar/Van Dusen coefficients from a calibration certificate.

1. Start
<b>1</b>
2. <b>Assign current output (PV)</b> = set sensor 1 (measured value)
↓
3. Select unit (°C).
↓
4. Select the sensor type (linearization type) "RTD platinum (Callendar/Van Dusen)".
₩
5. Select connection mode e.g. 3-wire.
↓
6. Set the lower and upper sensor limits.
<b>1</b>

7. Enter the four coefficients A, B, C and RO.
Ų
8. If special linearization is also used for a second sensor, repeat steps 2 to 6.
Ų
9. End

#### Sensor n lower limit

**Navigation** Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $\rightarrow$  Linearization  $\rightarrow$  Sensor  $\rightarrow$  lower limit

**Prerequisite** The RTD platinum, RTD poly nickel or RTD copper polynomial option is enabled in the

**Sensor type** parameter.

**Description** Use this function to set the lower calculation limit for special sensor linearization.

**User entry** Depends on the sensor type selected.

**Factory setting** −200 °C

#### Sensor n upper limit

**Navigation** Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $\rightarrow$  Linearization  $\rightarrow$  Sensor  $\rightarrow$  upper limit

**Prerequisite** The RTD platinum, RTD poly nickel or RTD copper polynomial option is enabled in the

**Sensor type** parameter.

**Description** Use this function to set the upper calculation limit for special sensor linearization.

**User entry** Depends on the sensor type selected.

**Factory setting** 850 °C

#### Call./v. Dusen coeff. RO

**Navigation** Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor n  $\rightarrow$  Linearization  $\rightarrow$  Call./v. Dusen coeff. R0

**Prerequisite** The RTD platinum (Callendar/Van Duse) option is enabled in the **Sensor type** parameter.

**Description** Use this function to set the RO Value only for linearization with the Callendar/Van Dusen

polynomial.

**User entry** 40.000 to 1050.000

Factory setting 100.000 Ohm

#### Call./v. Dusen coeff. A, B and C

**Navigation** Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $n \rightarrow$  Linearization  $\rightarrow$  Call./v. Dusen coeff. A, B, C

**Prerequisite** The RTD platinum (Callendar/Van Duse) option is enabled in the **Sensor type** parameter.

**Description** Use this function to set the coefficients for sensor linearization based on the

Callendar/Van Dusen method.

**Factory setting** ■ A: 3.910000e-003

B: -5.780000e-007C: -4.180000e-012

# Polynomial coeff. RO

**Navigation**  $\square$  Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $n \rightarrow$  Linearization  $\rightarrow$  Polynomial coeff. R0

**Prerequisite** The RTD poly nickel or RTD copper polynomial option is enabled in the **Sensor type** 

parameter.

**Description** Use this function to set the RO Value only for linearization of nickel/copper sensors.

**User entry** 40.000 to 1050.000 Ohm

Factory setting 100.00 Ohm

#### Polynomial coeff. A, B

**Navigation** Expert  $\rightarrow$  Sensor  $\rightarrow$  Sensor  $n \rightarrow$  Linearization  $\rightarrow$  Polynomial coeff. A, B

**Prerequisite** The RTD poly nickel or RTD copper polynomial option is enabled in the **Sensor type** 

parameter.

**Description** Use this function to set the coefficients for sensor linearization of copper/nickel resistance

thermometers.

**Factory setting** Polynomial coeff. A = 5.49630e-003

Polynomial coeff. B = 6.75560e-006

"Diagnostic settings" submenu

#### **Calibration counter start**

**Navigation**  $\square$  Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Calibration counter start

**Description** Option to control the calibration counter.

The countdown duration (in days) is specified with the **Calibration counter start value** parameter.

■ The status signal issued when the limit value is reached is defined with the **Calibration alarm category** parameter.

**Options** ■ **Off:** Stops the calibration counter

• On: Starts the calibration counter

• Reset + run: Resets to the set start value and starts the calibration counter

**Factory setting** Off

## Calibration alarm category

**Navigation**  $\square$  Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Calibration alarm category

**Description** Use this function to select the category (status signal) as to how the device reacts when

the set calibration countdown expires.

**Options** ■ Maintenance required (M)

■ Failure (F)

**Factory setting** Maintenance required (M)

# Calibration counter start value

**Navigation** Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Calibration counter start value

**Description** Use this function to set the start value for the calibration counter.

**User entry** 0 to 365 d (days)

Factory setting 365

#### Count value

**Navigation**  $\square$  Expert  $\rightarrow$  Sensor  $\rightarrow$  Diagnostic settings  $\rightarrow$  Count value

**Description** Use this function to view the time remaining until the next calibration.

Calibration countdown only runs when the device is active. Example: If the calibration counter is set to 365 days on January 1, 2011 and no electricity is supplied to the device for 100 days, the alarm for the calibration appears on April 10, 2012.

# 13.3.3 "Output" submenu

Measuring mode				
Navigation				
Description	Enables the inversion of the output signal.			
Additional information	<ul> <li>Standard         The output current increases with increasing temperatures         inverted         The output current decreases with increasing temperatures     </li> </ul>			
Options	■ Standard ■ inverted			
Factory setting	Standard			
	13.3.4 "Communication" submenu			
	"HART configuration" submenu			
Device tag → 🖺 84				
Navigation	<ul> <li>□ Diagnostics → Device information → Device tag</li> <li>Expert → Communication → HART configuration → Device tag</li> </ul>			
HART short tag				
Navigation				
Description	Use this function to define a short tag for the measuring point.			
User entry	Up to 8 alphanumeric characters (letters, numbers and special characters)			
Factory setting	SHORTTAG			
HART address				
Navigation				
Description	Use this function to define the HART address of the device.			

**User entry** 0 ... 63

**Factory setting** 0

**Additional information** The measured value can only be transmitted via the current value is the address is set to

"O". The current is fixed at 4.0 mA for all other addresses (Multidrop mode).

No. of preambles

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART configuration  $\rightarrow$  No. of preambles

**Description** Use this function to define the number of preambles in the HART telegram

**User entry** 2 ... 20

**Factory setting** 5

Configuration changed

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART configuration  $\rightarrow$  Configuration changed

**Description** Indicates whether the configuration of the device has been changed by a master (primary

or secondary).

Reset configuration changed flag

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART configuration  $\rightarrow$  Reset configuration changed flag

**Description** The **Configuration changed** information is reset by a master (primary or secondary).

"HART info" submenu

Device type

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  Device type

**Description** Use this function to view the device type with which the device is registered with the HART

FieldComm Group. The device type is specified by the manufacturer. It is needed to assign

the appropriate device description file (DD) to the device.

Factory setting 0x11CC or TMT82 (depends on the configuration tool)

Device revision						
Navigation	Expert $\rightarrow$ Communication $\rightarrow$ HART info $\rightarrow$ Device revision					
Description	Use this function to view the device revision with which the device is registered with the HART® FieldComm Group. It is needed to assign the appropriate device description file (DD) to the device.					
Factory setting	3					
Device ID						
Navigation						
Description	A unique HART identifier is saved in the device ID and used by the control systems to identify the device. The device ID is also transmitted in command 0. The device ID is determined unambiguously from the serial number of the device.					
Display	ID generated for specific serial number					
Manufacturer ID						
Navigation	<ul> <li>Expert → Communication → HART info → Manufacturer ID</li> <li>Expert → Diagnostics → Device information → Manufacturer ID</li> </ul>					
Description	Expert $\rightarrow$ Diagnostics $\rightarrow$ Device information $\rightarrow$ Manufacturer ID Use this function to view the manufacturer ID under which the device is registered with the HART FieldComm Group.					
Factory setting	0x11 (hexadecimal) or 17 (decimal)					
HART revision						
Navigation						
Description	Use this function to display the HART revision of the device.					
HART descriptor						
Navigation						

**Description** Use this function to define a description for the measuring point.

**User entry** Up to 16 alphanumeric characters (letters, numbers and special characters)

**Factory setting** 16 x spaces

HART message

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  HART message

**Description** Use this function to define a HART message which is sent via the HART protocol when

requested by the master.

**User entry** Up to 32 alphanumeric characters (letters, numbers and special characters)

**Factory setting** 32 x spaces

Hardware revision

**Navigation**  $\square$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Hardware revision

Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  Hardware revision

**Description** Displays the hardware revision of the device.

Software revision

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  Software revision

**Description** Displays the software revision of the device.

HART date code

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  HART date code

**Description** Use this function to define date information for individual use.

**User entry** Date in the format year-month-day (YYYY-MM-DD)

Factory setting 2010-01-01

#### "HART output" submenu

# Assign current output (PV) **Navigation** $\square$ Expert $\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Assign current output (PV) Description Use this function to assign a measured variable to the primary HART value (PV). **Options** Sensor 1 (measured value) Sensor 2 (measured value) ■ Device temperature Average of the two measured values: 0.5 x (SV1+SV2) ■ Difference between sensor 1 and sensor 2: SV1-SV2 ■ Sensor 1 (backup sensor 2): If sensor 1 fails, the value of sensor 2 automatically becomes the primary HART® value (PV): sensor 1 (OR sensor 2) • Sensor switching: If the value exceeds the configured threshold value T for sensor 1, the measured value of sensor 2 becomes the primary HART® value (PV). The system switches back to sensor 1 if the measured value of sensor 1 is at least 2 K below T: sensor 1 (sensor 2, if sensor 1 > T) • Average: 0.5 x (SV1+SV2) with backup (measured value of sensor 1 or sensor 2 in the event of a sensor error in the other sensor) The threshold value can be set with the **Sensor switching limit value** parameter. With temperature-dependent switching, it is possible to combine 2 sensors that offer advantages in different temperature ranges. **Factory setting** Sensor 1 PV Navigation $\square$ Expert → Communication → HART output → PV Use this function to display the primary HART value Description Assign SV Navigation Expert → Communication → HART output → Assign SV Description Use this function to assign a measured variable to the secondary HART value (SV). See **Assign current output (PV)** parameter, $\rightarrow \triangleq 102$ **Options Factory setting** Device temperature SV

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  SV

**Description** Use this function to display the secondary HART value

Assign TV

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Assign TV

**Description** Use this function to assign a measured variable to the tertiary HART value (TV).

**Options** See **Assign current output (PV)** parameter,  $\rightarrow \triangleq 102$ 

**Factory setting** Sensor 1

TV

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  TV

**Description** Use this function to display the tertiary HART value

Assign QV

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Assign QV

**Description** Use this function to assign a measured variable to the quaternary (fourth) HART value

(QV).

**Options** See **Assign current output (PV)** parameter,  $\rightarrow \triangleq 102$ 

**Factory setting** Sensor 1

QV

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  QV

**Description** Use this function to display the quaternary HART value

"Burst configuration" submenu

Pup to 3 burst modes can be configured.

**Burst mode** 

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  Burst configuration  $\rightarrow$  Burst mode

**Description** Activation of the HART burst mode for burst message X. Message 1 has the highest

priority, message 2 the second-highest priority, etc.

User entry ■ Of

The device only sends data to the bus at the request of a HART master

On

The device regularly sends data to the bus without being requested to do so.

**Factory setting** 

Off

#### **Burst command**

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  Burst configuration  $\rightarrow$  Burst command

**Prerequisite:** This parameter can only be selected if the **Burst mode** option is enabled.

**Description** Use this function to select the command whose answer is sent to the HART master in the

activated burst mode.

**User entry** ■ Command 1

Read out the primary variable

■ Command 2

Read out the current and the main measured value as a percentage

Command 3

Read out the dynamic HART variables and the current

■ Command 9

Read out the dynamic HART variables including the related status

■ Command 33

Read out the dynamic HART variables including the related unit

■ Command 48

Read additional device status

**Factory setting** Command 2

**Additional information** Commands 1, 2, 3, 9 and 48 are universal HART commands.

Command 33 is a "Common-Practice" HART command.

More details on this are provided in the HART specifications.

#### Burst variable n

n = Number of burst variables (0 to 3)

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  Burst configuration  $\rightarrow$  Burst variable n

104

Prerequisite:

This parameter can only be selected if the **Burst mode** option is enabled.

Description

Use this function to assign a measured variable to slots 0 to 3.



This assignment is **only** relevant for the burst mode. The measured variables are assigned to the 4 HART variables (PV, SV, TV, QV) in the **HART output** menu  $\rightarrow \square$  102.

#### User entry

- Sensor 1 (measured value)
- Sensor 2 (measured value)
- Device temperature
- Average of the two measured values: 0.5 x (SV1+SV2)
- Difference between sensor 1 and sensor 2: SV1-SV2
- Sensor 1 (backup sensor 2): If sensor 1 fails, the value of sensor 2 automatically becomes the primary HART® value (PV): sensor 1 (OR sensor 2)
- Sensor switching: If the value exceeds the configured threshold value T for sensor 1, the measured value of sensor 2 becomes the primary HART® value (PV). The system switches back to sensor 1 if the measured value of sensor 1 is at least 2 K below T: sensor 1 (sensor 2, if sensor 1 > T)
- The threshold value can be set with the **Sensor switching limit value** parameter. With temperature-dependent switching, it is possible to combine 2 sensors that offer advantages in different temperature ranges.

Average:  $0.5 \times (SV1+SV2)$  with backup (measured value of sensor 1 or sensor 2 in the event of a sensor error in the other sensor)

#### Factory setting

- Burst variable slot 0: sensor 1
- Burst variable slot 1: device temperature
- Burst variable slot 2: sensor 1
- Burst variable slot 3: sensor 1

#### Burst trigger mode

Navigation

Expert → Communication → Burst configuration → Burst trigger mode

Prerequisite:

This parameter can only be selected if the **Burst mode** option is enabled.

Description

Use this function to select the event that triggers burst message  $\boldsymbol{X}$ .



■ Continuous:

The message is triggered in a time-controlled manner, at least observing the time interval defined in the **Min. update period** parameter.

■ Window:

The message is triggered if the specified measured value has changed by the value defined in the **Burst trigger level** X parameter.

Rising

The message is triggered if the specified measured value exceeds the value in the **Burst trigger level** X parameter.

• Falling:

The message is triggered if the specified measured value falls below the value in the **Burst trigger level** X parameter.

On change:

The message is triggered if a measured value of the message changes.

**User entry** ■ Continuous

Window

Rising

Falling

Continuous

On change

Burst trigger level

**Factory setting** 

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  Burst configuration  $\rightarrow$  Burst trigger level

**Prerequisite:** This parameter can only be selected if the **Burst mode** option is enabled.

**Description** Use this function to enter the value which, together with the trigger mode, determines the

time of burst message 1. This value determines the time of the message.

**User entry**  $-1.0e^{+20}$  to  $+1.0e^{+20}$ 

Factory setting -10.000

Min. update period

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  Burst configuration  $\rightarrow$  Min. update period

**Prerequisite:** This parameter can only be selected if the **Burst mode** option is enabled.

**Description** Use this function to enter the minimum time span between two burst commands of burst

message  $\boldsymbol{X}$ . The value is entered in the milliseconds unit.

**User entry** 500 to [value entered for the maximum time span in the **Max. update period**] parameter

as integers

Factory setting 1000

Max. update period

**Navigation**  $\square$  Expert  $\rightarrow$  Communication  $\rightarrow$  Burst configuration  $\rightarrow$  Max. update period

**Prerequisite:** This parameter can only be selected if the **Burst mode** option is enabled.

**Description** Use this function to enter the maximum time span between two burst commands of burst

message X. The value is entered in the milliseconds unit.

**User entry** [Value entered for the minimum time span in the **Min. update period**] parameter to

3600000 as integers

#### **Factory setting**

2000

## 13.3.5 "Diagnostics" submenu

### "Diagnose list" submenu

Detailed description  $\rightarrow$   $\blacksquare$  82

#### "Event logbook" submenu

Detailed description → 🖺 84

#### "Device information" submenu

#### Extended order code 1-3

#### Navigation

Diagnostics → Device information → Extended order code 1-3
Expert → Diagnostics → Device information → Extended order code 1-3

#### Description

Displays the first, second and/or third part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates the version of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate.



## Uses of the extended order code

- To order an identical spare device.
- To check the ordered device features using the delivery note.

#### ENP version

**Navigation** 

 $\texttt{Expert} \rightarrow \texttt{Diagnostics} \rightarrow \texttt{Device information} \rightarrow \texttt{ENP version}$ 

**Description** Displays the version of the electronic nameplate.

**Display** 6-digit number in the format xx.yy.zz

#### Device revision

Navigation

☐ Diagnostics  $\rightarrow$  Device info  $\rightarrow$  Device revision

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Device revision Expert  $\rightarrow$  Communication  $\rightarrow$  HART info  $\rightarrow$  Device revision

#### Description

Use this function to view the device revision with which the device is registered with the HART FieldComm Group. It is needed to assign the appropriate device description file (DD) to the device.

Display	2-digit hexadecimal number
Manufacturer ID→ 🖺 100	
Manufacturer ID→ □ 100  Navigation  □ Diagnostics → Device information → Manufacturer ID Expert → Communication → HART info → Manufacturer ID Expert → Diagnostics → Device information → Manufacturer ID  Manufacturer  Navigation  □ Diagnostics → Device information → Manufacturer Expert → Diagnostics → Device information → Manufacturer Expert → Diagnostics → Device information → Manufacturer Description  Displays the manufacturer name.  Navigation  □ Diagnostics → Device information → Hardware revision Expert → Diagnostics → Device information → Hardware revision Expert → Communication → HART info → Hardware revision Displays the hardware revision of the device.  "Measured values" submenu  Sensor n raw value  □ n = Stands for the number of sensor inputs (1 and 2)  Navigation  □ Expert → Diagnostics → Measured values → Sensor n raw value	
Manufacturer	
Navigation	
Description	Displays the manufacturer name.
Hardware revision	
Navigation	Expert $\rightarrow$ Diagnostics $\rightarrow$ Device information $\rightarrow$ Hardware revision
Description	Displays the hardware revision of the device.
	"Measured values" submenu
Sensor n raw value	
	n = Stands for the number of sensor inputs (1 and 2)
Navigation	$\  \  \  \  \  \  \  \  \  \  \  \  \  $
Description	Displays the non-linearized mV/Ohm value at the specific sensor input.
	"Min/max values" submenu
	Detailed description $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
	"Simulation" submenu
	Detailed description $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

# Index

<b>09</b> 2-wire compensation (parameter) 64	Device revision       86, 100, 107         Device tag (parameter)       63, 84, 98
	Device temperature
A	Device temperature alarm (parameter) 69, 92
Access status tooling (parameter)	Device temperature max
Actual diag channel	Device temperature min
Actual diagnostics	Device type
Actual diagnostics (parameter)	Diagnose list (submenu)
Actual diagnostics count	Diagnostics (menu)
Administration (submenu)	Diagnostics (menu)
Advanced setup (submenu) 67 Alarm delay (parameter)	Diagnostics events
Assign current output (PV) (parameter) 65, 102	Diagnostics events  Diagnostic behavior
Assign QV (parameter)	Overview
Assign SV (parameter)	Status signals
Assign TV (parameter)	Display (menu)
Tissign IV (parameter)	Display (submenu)
В	Display interval (parameter)
Burst command (parameter) 104	Drift/difference alarm category (parameter)
Burst configuration (submenu) 103	Drift/difference alarm delay
Burst mode (parameter)	Drift/difference mode (parameter)
Burst trigger level (parameter) 106	Drift/difference set point (parameter) 71
Burst trigger mode (parameter) 105	-
Burst variables (parameter)	E
	ENP version
C	Enter access code (parameter) 67
Cable specification	Event logbook (submenu)
Calibration alarm category (parameter)	Expert (Menu)
Calibration counter start (parameter)	Extended order code 85, 107
Calibration counter start value (parameter)	F
Call./v. Dusen coeff. A, B and C (parameter) 96	•
Call./v. Dusen coeff. R0 (parameter)	Failure current (parameter)
Communication (submenu)	FieldCare
Comparison point (parameter)	Function range
Configuration changed (parameter)	Firmware version
Configuration counter	Force safe state (parameter)
Connection combinations	Format display (parameter)
Connection type (parameter) 64	remacasping (parameter)
Corrosion detection (parameter)	H
Count value	Hardware revision 87, 101, 108
Current output (submenu)	HART address (parameter) 98
Current output simulation (parameter) 89	HART configuration (submenu) 98
Current trimming 4 mA (parameter) 74	HART date code (parameter)
Current trimming 20 mA (parameter)	HART descriptor (parameter) 100
_	HART info (submenu)
D	HART message (parameter)
Damping (parameter)	HART output (submenu)
Decimal places 1 (parameter)	HART revision
Decimal places 2 (parameter)	HART short tag (parameter)
Decimal places 3 (parameter)	HART® protocol  Device variables
Define device write protection code (parameter) 80 Designated use	Version data for the device
Designated use	v etsivit uata tot tile device
Device info (submenu)	L
Device name	Linearization (submenu)
Device reset (parameter)	Locking status
Device reset (parameter)	J

Lower range value (parameter) 66	Sensor trimming (parameter)
M	Sensor trimming (submenu)
Mains filter (parameter)	Sensor trimming nower value (parameter)
Manufacturer	Sensor trimming upper value (parameter)
Manufacturer ID (parameter) 86, 100, 108	Sensor type (parameter)
Max. update period (parameter) 106	Sensor upper limit
Measured values (submenu) 87, 108	Sensor upper limit (parameter)
Measuring mode (parameter)	Sensor value
Min. update period (parameter) 106	Serial no. sensor (parameter)
Min/max values (submenu)	Serial number
Mounting location	Setup (menu)
DIN rail (DIN rail clip)	SIL (submenu)
Field housing	SIL checksum (parameter)
Terminal head, flat face as per DIN 43729 11	SIL option (parameter)
NT.	Simulation (submenu)
N	Software revision
Nameplate	Solid wire
No. of preambles (parameter)	Structure of the operating menu 23
0	SV
Operating time	System (submenu)
Operation options	Т
Local operation	<del>-</del>
Operating tool	Terminal assignment
Overview	Troubleshooting
Operational state (parameter)	Application error with RTD sensor connection 33
Order code	Application error with TC sensor connection 34
Other standards and guidelines	Checking the display
Out of range category (parameter)	General errors
Output (submenu)	TV
Output current	
n	U
P	Unit (parameter)
Polynomial coeff. A, B (parameter)	Upper range value (parameter) 66
Polynomial coeff. R0 (parameter)	17
Previous diagnostics 84	V
Previous diagnostics	Value 1 display (parameter)
PV	Value 2 display (parameter)
102	Value 3 display (parameter)
Q	value current output (parameter)
QV	W
	Wire without wire end ferrule
R	
Reset configuration changed flag (parameter) 99	
Returning devices	
RJ preset value (parameter) 65	
S	
Sensor (submenu)	
Sensor 1/2 (submenu)	
Sensor lower limit	
Sensor lower limit (parameter)	
Sensor max. value	
Sensor min value	
Sensor n raw value	
Sensor offset (parameter) 69	
Sensor raw value	
Sensor switch set point (parameter)	