
Valid as of version 01.05.zz (Device firmware)

Operating Instructions **Tankside Monitor NRF81**

Tank Gauging





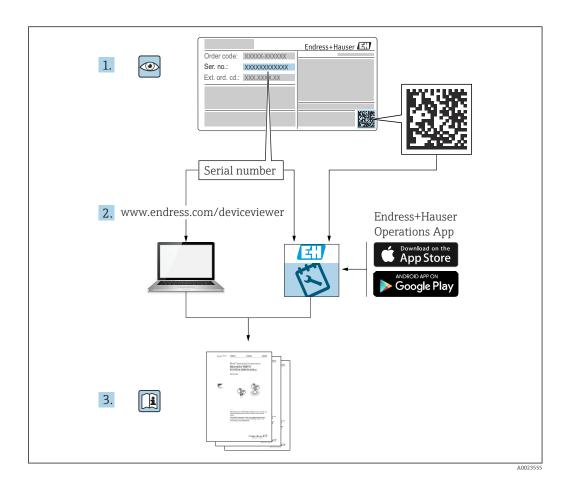

Tankside Monitor NRF81 Table of contents

Table of contents

1	About this document 4	9.2
1.1	Document function 4	9.3 <i>A</i> 9.4 S
1.2	Symbols 4	9.4 3 9.5 P
1.3	Documentation 6	7.5
1.4	Registered trademarks 6	10 0
2	Basic safety instructions 7	10.1 R
2.1	Requirements for the personnel 7	10.2 R
2.2	Intended use 7	1.1
2.3	Workplace safety	11 I
2.4	Operational safety 8	11.1
2.5	Product safety 8	11.2 D
3	Product description 9	11.3 D 11.4 C
3.1	Product design	11.5 D
J.1	Floudet design	11.6 R
4	Incoming acceptance and product	11.7 D
•		11.0 Г
	identification 10	12 N
4.1	Incoming acceptance	
4.2 4.3	Product identification	12.1 N 12.2 E
4.)	Storage and transport	12.2
5	Installation	13 F
5.1	Installation conditions	13.1
5.2	Post-installation check	13.2 S
		13.3 E
6	Electrical connection 15	13.4 R 13.5 D
6.1	Terminal assignment	15.5 L
6.2	Connecting requirements	14 A
6.3	Ensuring the degree of protection 37	
6.4	Post-connection check 37	14.1 D
7	On analylity 20	14.2 C
7	Operability	14.4 S
7.1 7.2	Overview of the operation options	
	menu	15 (
7.3	Access to the operating menu via the local or remote display and operating module 40	15.1 C
7.4	Access to the operating menu via the service	15.2
,,,	interface and FieldCare 51	15.4 "I
7.5	Access to the operating menu via Tankvision	
	Tank Scanner NXA820 and FieldCare 51	Index .
8	System integration 54	
8.1	Overview of the Device Description files	
0.1	(DTM)	
	,, ,	
9	Commissioning 55	
9.1	Initial settings	
	J	

9.2 9.3 9.4 9.5	Configuring the tank gauging application 57 Advanced settings 81 Simulation 81 Protecting settings from unauthorized access . 81
10	Operation 82
10.1 10.2	Reading off the device locking status 82 Reading off measured values 82
11	Diagnostics and troubleshooting 83
11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8	General trouble shooting
12	Maintenance
12.1 12.2	Maintenance tasks96Endress+Hauser services96
13	Repair 97
13.1 13.2 13.3 13.4 13.5	General information on repairs97Spare parts98Endress+Hauser services98Return98Disposal98
14	Accessories
14.1 14.2 14.3 14.4	Device-specific accessories99Communication-specific accessories100Service-specific accessories100System components101
15	Operating menu
15.1 15.2 15.3 15.4	Overview of the operating menu 102 "Operation" menu 110 "Setup" menu 119 "Diagnostics" menu 238
Inde	x 247

About this document Tankside Monitor NRF81

1 About this document

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

⚠ DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols



Alternating current



Direct current and alternating current

Direct current



Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Tool symbols



Phillips head screwdriver

Tankside Monitor NRF81 About this document



Flat blade screwdriver



Torx screwdriver

06

Allen key



Open-ended wrench

1.2.4 Symbols for certain types of information and graphics

Permitted

Procedures, processes or actions that are permitted

✓ ✓ Preferred

Procedures, processes or actions that are preferred

K Forbidden

Procedures, processes or actions that are forbidden



Indicates additional information



Reference to documentation



Reference to graphic



Notice or individual step to be observed

1., 2., 3.

Series of steps



Result of a step



Visual inspection



Operation via operating tool



Write-protected parameter

1, 2, 3, ...

Item numbers

A, B, C, ...

Views

$\triangle \rightarrow \square$ Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

Temperature resistance of the connection cables

Specifies the minimum value of the temperature resistance of the connection cables

About this document Tankside Monitor NRF81

1.3 Documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website (www.endress.com/downloads):



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate

1.3.1 Technical Information (TI)

Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

1.3.2 Brief Operating Instructions (KA)

Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.5 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.



The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

1.3.6 Installation instructions (EA)

Installation Instruction are used to replace a faulty unit with a functioning unit of the same type.

1.4 Registered trademarks

Modbus[®]

Registered trademark of SCHNEIDER AUTOMATION, INC.

Tankside Monitor NRF81 Basic safety instructions

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and measured materials

The device described in these Operating Instructions is a monitoring unit for use with the Endress+Hauser Micropilot M and Micropilot S-series radars and other HART compatible devices. Mounted at the tank side, it provides indication of measured data, allows configuration and supplies intrinsically safe (i.s.) or explosion proof (XP) power to the connected sensors on the tank. Various industry standard digital gauging communication protocols support integration into open architecture tank gauging and inventory systems.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential.
- ► Protect the measuring device permanently against corrosion from environmental influences.
- ▶ Observe the limit values in the "Technical Information".

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

For work on and with the device:

Wear the required personal protective equipment according to federal/national regulations.

Basic safety instructions Tankside Monitor NRF81

2.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories from the manufacturer.

Hazardous area

To eliminate danger to persons or the facility when the device is used in the hazardous area (e.g. explosion protection):

- ► Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

NOTICE

Loss of degree of protection by opening of the device in humid environments

▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

2.5.1 **CE** mark


The measuring system meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

Tankside Monitor NRF81 Product description

3 Product description

3.1 Product design

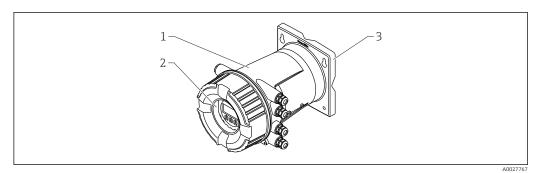

■ 1 Design of Tankside Monitor NRF81

- l Housing
- 2 Display and operating module (can be operated without opening the cover)
- 3 Mounting plate for wall or pipe mounting

4 Incoming acceptance and product identification

4.1 Incoming acceptance

Upon receipt of the goods check the following:


- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) enclosed?
- If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate
- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
 - *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate

4.2.1 Nameplate

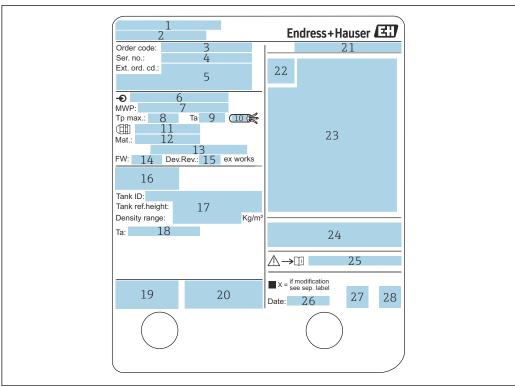

A0027791

■ 2 Nameplate

- 1 Manufacturer address
- 2 Device name
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Supply voltage
- 7 Maximum process pressure
- 8 Maximum process temperature
- 9 Permitted ambient temperature (T_a)
- 10 Temperature resistance of cable
- 11 Thread for cable entry
- 12 Material in contact with process
- 13 Not used
- 14 Firmware version
- 15 Device revision
- 16 Metrology certification numbers
- 17 Customized parametrization data
- 18 Ambient temperature range
- 19 CE mark / C-tick mark
- 20 Additional information on the device version
- 21 Ingress protection
- 22 Certificate symbol
- 23 Data concerning the Ex approval
- 24 General certificate of approval
- 25 Associated Safety Instructions (XA)
- 26 Manufacturing date
- 27 RoHS mark
- 28 QR code for the Endress+Hauser Operations App

4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany

Place of manufacture: See nameplate.

4.3 Storage and transport

4.3.1 Storage conditions

- Storage temperature: -50 to +80 °C (-58 to +176 °F)
- Store the device in its original packaging.

4.3.2 Transport

A CAUTION

Risk of injury


- ► Transport the measuring device to the measuring point in its original packaging.
- ► Take into account the mass center of the device in order to avoid unintended tilting.
- ► Comply with the safety instructions, transport conditions for devices over 18 kg (39.6 lb) (IEC 61010).

Tankside Monitor NRF81 Installation

5 Installation

5.1 Installation conditions

5.1.1 Wall mounting

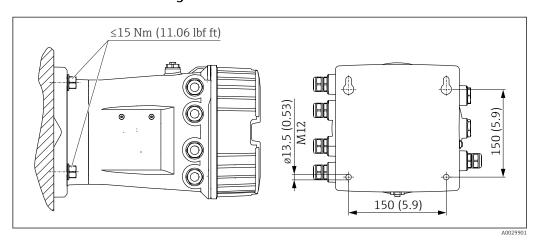


■ 3 Wall mounting of the Tankside Monitor

5.1.2 Pipe mounting

Ordering feature 620 "Accessory enclosed"


PVMounting kit, pipe, DN32-50 (1-1/4" - 2")

PW Mounting kit, pipe, DN80 (3")

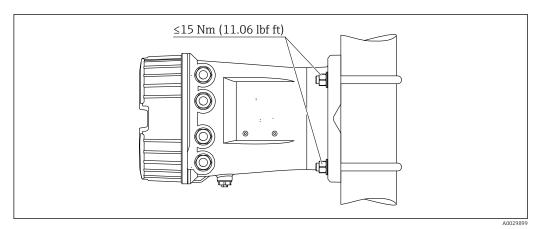

 \blacksquare 4 Mounting of the Tankside Monitor at a vertical pipe

Installation Tankside Monitor NRF81

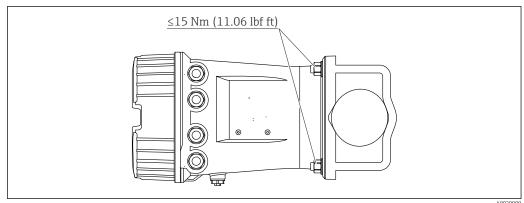

 \blacksquare 5 Mounting of the Tankside Monitor at a horizontal pipe


A00295

5.2 Post-installation check

О	Is the device undamaged (visual inspection)?					
	Does the device conform to the measuring point specifications?					
	For example: • Process temperature					
0	Process remperature Process pressure (refer to the chapter on "Material load curves" of the "Technical Information"					
	document)					
	Ambient temperature range Measuring range					
0	Are the measuring point identification and labeling correct (visual inspection)?					
	The the measuring point destination and labeling correct (violat inspection).					
0	Is the device adequately protected from precipitation and direct sunlight?					

Electrical connection 6

6.1 Terminal assignment

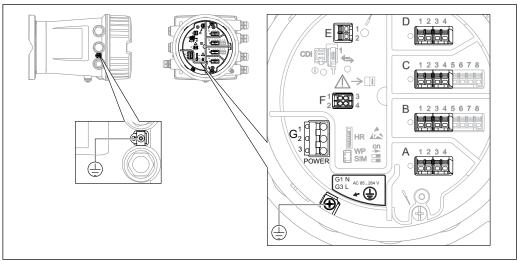

₽ 6 Terminal compartment (typical example) and ground terminals

Terminal area A/B/C/D (slots for I/O modules)

Module: Up to four I/O modules, depending on the order code

- Modules with four terminals can be in any of these slots.
- Modules with eight terminals can be in slot B or C.
- The exact assignment of the modules to the slots is dependent on the device version → 🗎 18.

Terminal area E

Module: HART Ex i/IS interface

- E1: H+
- E2: H-

Terminal area F

Remote display

- F1: V_{CC} (connect to terminal 81 of the remote display)
- F2: Signal B (connect to terminal 84 of the remote display)
- F3: Signal A (connect to terminal 83 of the remote display)
- F4: Gnd (connect to terminal 82 of the remote display)

Terminal area G (for High voltage AC power supply and Low voltage AC power supply)

- G1: N
- G2: not connected
- G3: L

Terminal area G (for Low voltage DC power supply)

- G1: L-
- G2: not connected
- G3: L+


Terminal area: Protective ground

Module: Protective ground connection (M4 screw)




🖪 7 💮 Terminal area: Protective ground

6.1.1 Power supply

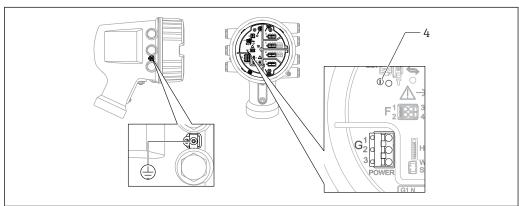

A00334

- G1 N
- G2 not connected
- G3 L
- 4 Green LED: indicates power supply

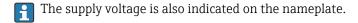

Supply voltage

High voltage AC power supply:

Operational value:

 $100 \text{ to } 240 \text{ V}_{AC} (-15 \% + 10 \%) = 85 \text{ to } 264 \text{ V}_{AC}$, 50/60 Hz

Low voltage AC power supply:

Operational value:

65 V_{AC} (- 20 % + 15 %) = 52 to 75 V_{AC} , 50/60 Hz

Low voltage DC power supply:

Operational value:

24 to 55 V_{DC} (- 20 % + 15 %) = 19 to 64 V_{DC}

Power consumption

Maximum power varies depending on the configuration of the modules. The value shows maximum apparent power, select the applicable cables accordingly. The actual consumed effective power is 12 W.

High voltage AC power supply:

28.8 VA


Low voltage AC power supply:

21.6 VA

Low voltage DC power supply:

13.4 W


6.1.2 Remote display and operating module DKX001

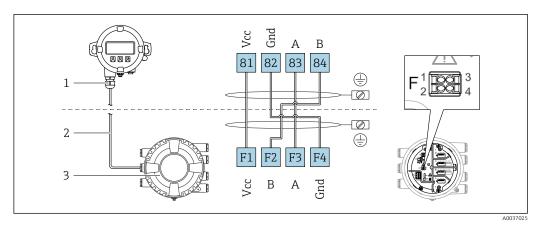

■ 8 Connection of the remote display and operating module DKX001 to the Tank Gauging device (NMR8x, NMS8x or NRF8x)

- 1 Remote display and operating module
- 2 Connecting cable
- 3 Tank Gauging device (NMR8x, NMS8x or NRF8x)
- The remote display and operating module DKX001 is available as an accessory. For details refer to SD01763D.
- The measured value is indicated on the DKX001 and on the local display and operating module simultaneously.
 - The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

6.1.3 HART Ex i/IS interface

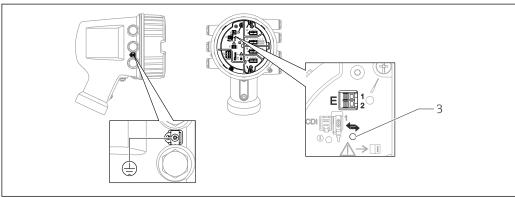

A0033414

- E1 H+
- E2 H-
- 3 Orange LED: indicates data communication


This interface always operates as the main HART master for connected HART slave transmitters. The Analog I/O modules, on the other hand, can be configured as a HART master or slave $\rightarrow \stackrel{\triangle}{=} 30 \rightarrow \stackrel{\triangle}{=} 32$.

6.1.4 Slots for I/O modules

The terminal compartment contains four slots (A, B, C and D) for I/O modules. Depending on the device version (ordering features 040, 050 and 060) these slots contain different I/O modules. The table below shows which module is located in which slot for a specific device version.

i

The slot assignment for the device is also indicated on a label attached to the back cover of the display module.

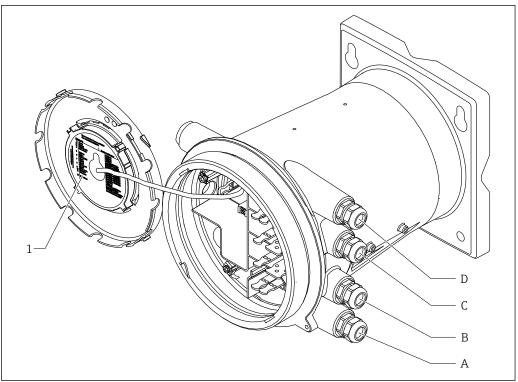


A003006

- 1 Label showing (among other things) the modules in the slots A to D.
- A Cable entry for slot A
- B Cable entry for slot B
- C Cable entry for slot C
- D Cable entry for slot D

List of abbreviations used in table "Primary Output" (040) = "Modbus" (A1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- M Modbus
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "Modbus" (A1)

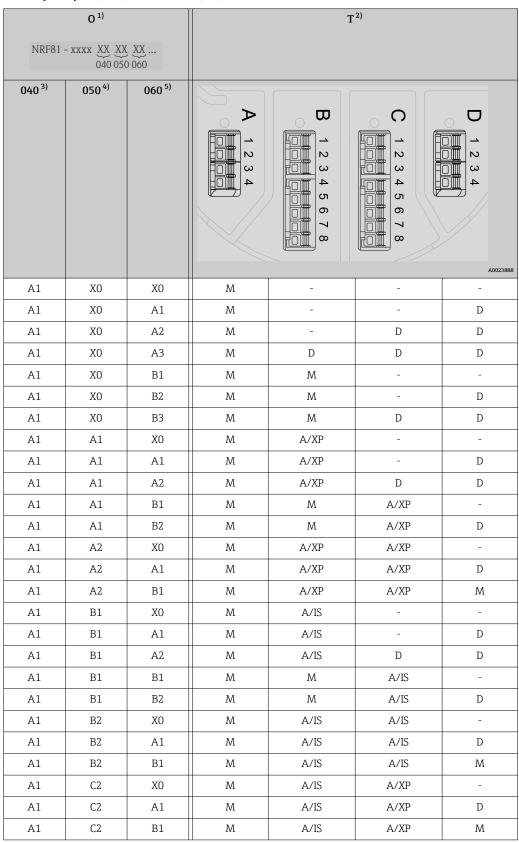


- Ordering feature 1)
- 2) Terminal area
- 3) Primary Output
- 4)
- Secondary IO Analog Secondary IO Digital Ex d/XP

List of abbreviations used in table "Primary Output" (040) = "V1" (B1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- D Digital
- A/XP Analog Ex d/XPA/IS Analog Ex i/IS

"Primary Output" (040) = "V1" (B1)

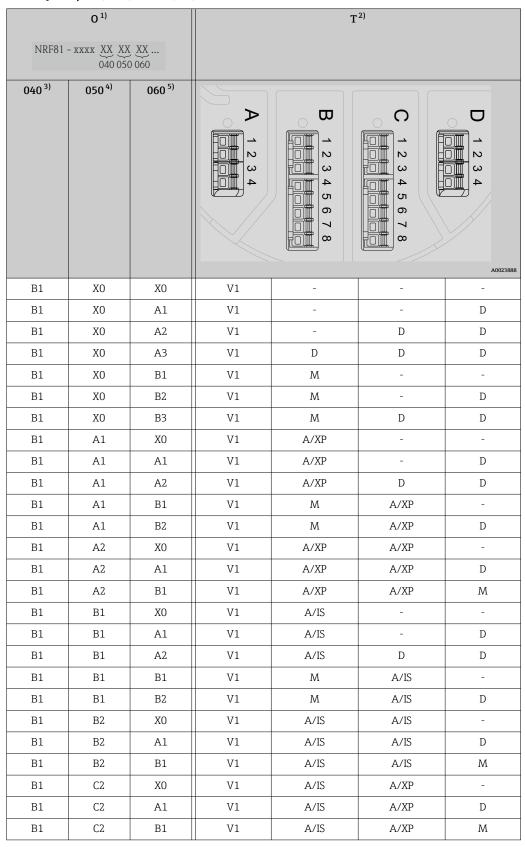


- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

List of abbreviations used in table "Primary Output" (040) = "WM550" (C1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- WM550 Whessoe WM550
- D Digital
- M Modbus
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "WM550" (C1)

0 1)			T ²⁾			
NRF81 - xxxx XX XX XX 040 050 060						
040 3)	050 ⁴⁾	060 ⁵⁾	A 1234	B 12345678	C 1 2 3 4 5 6 7 8	1 2 3 4 A0023888
C1	X0	X0	WM550	-	-	-
C1	X0	A1	WM550	-	-	D
C1	X0	A2	WM550	-	D	D
C1	X0	A3	WM550	D	D	D
C1	X0	B1	WM550	M	-	-
C1	X0	B2	WM550	M	-	D
C1	X0	В3	WM550	M	D	D
C1	X0	E1	WM550	WM550	-	-
C1	X0	E2	WM550	WM550	-	D
C1	X0	E3	WM550	WM550	D	D
C1	A1	X0	WM550	A/XP	-	-
C1	A1	A1	WM550	A/XP	-	D
C1	A1	A2	WM550	A/XP	D	D
C1	A1	B1	WM550	M	A/XP	-
C1	A1	B2	WM550	M	A/XP	D
C1	A1	E1	WM550	WM550	A/XP	-
C1	A1	E2	WM550	WM550	A/XP	D
C1	A2	X0	WM550	A/XP	A/XP	-
C1	A2	A1	WM550	A/XP	A/XP	D
C1	A2	B1	WM550	A/XP	A/XP	М
C1	A2	E1	WM550	A/XP	A/XP	WM550
C1	B1	X0	WM550	A/IS	-	-
C1	B1	A1	WM550	A/IS	-	D
C1	B1	A2	WM550	A/IS	D	D
C1	B1	B1	WM550	M	A/IS	-
C1	B1	B2	WM550	M	A/IS	D
C1	B1	E1	WM550	WM550	A/IS	-
C1	B1	E2	WM550	WM550	A/IS	D
C1	B2	X0	WM550	A/IS	A/IS	-
C1	B2	A1	WM550	A/IS	A/IS	D

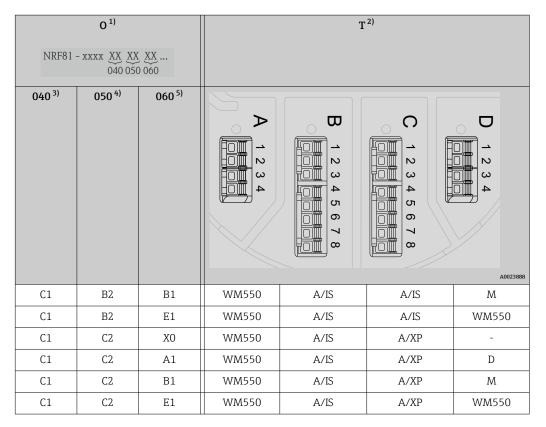


- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

List of abbreviations used in table "Primary Output" (040) = "4-20mA HART Ex d" (E1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- M Modbus
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex d" (E1)

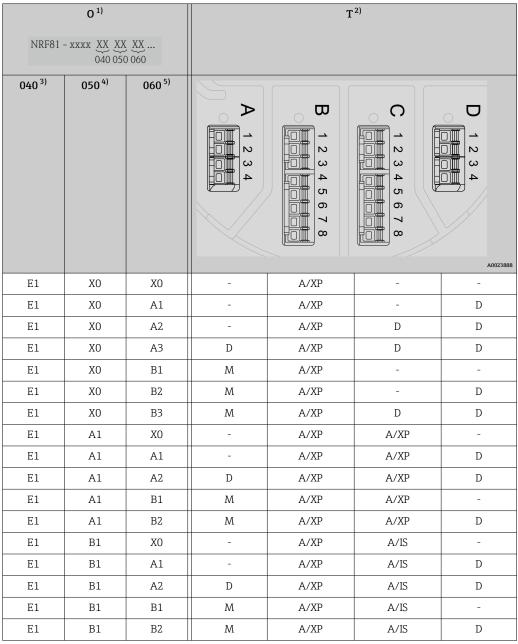


- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

List of abbreviations used in table "Primary Output" (040) = "4-20mA HART Ex i" (H1)


- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- M Modbus
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex i" (H1)

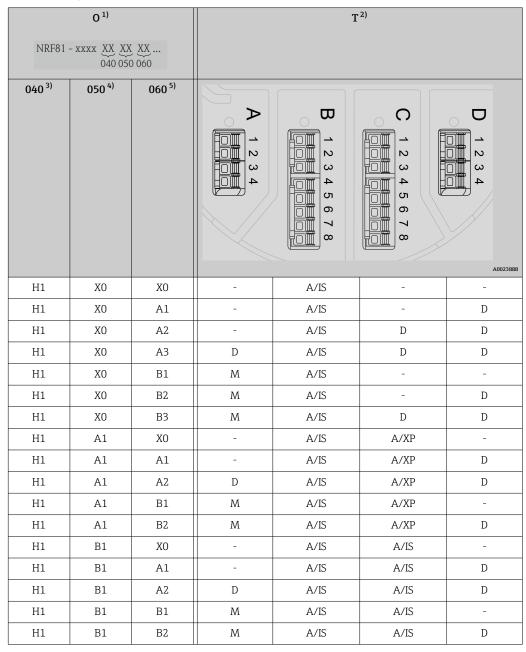

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

6.1.5 Terminals of the "Modbus" module, "V1" module or "WM550" module

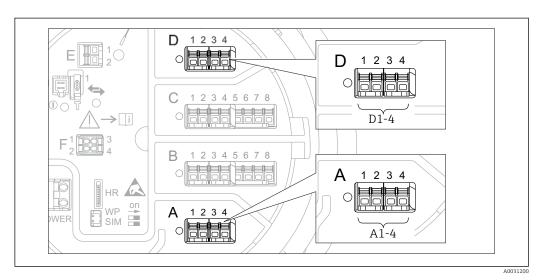

■ 9 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

Depending on the device version, the "Modbus" and/or "V1" or "WM550" module may be in different slots of the terminal compartment. In the operating menu the "Modbus" and "V1" or "WM550" interfaces are designated by the respective slot and the terminals within this slot: A1-4, B1-4, C1-4, D1-4.

Terminals of the "Modbus" module

Designation of the module in the operating menu: **Modbus X1-4**; (X = A, B, C or D)

- X1¹⁾
 - Terminal name: S
 - Description: Cable shielding connected via a capacitor to EARTH
- X2. 1)
 - Terminal name: 0V
 - Description: Common reference
- X3 ¹⁾
 - Terminal name: B-
 - Description: Non-inverting signal line
- X4¹⁾
 - Terminal name: A+
 - Description: Inverting signal line


¹⁾ Here, "X" stands for one of the slots "A", "B", "C", or "D".

Terminals of the "V1" and "WM550" module

Designation of the module in the operating menu: V1 X1-4 or WM550 X1-4; (X = A, B, C or D)

- X1²⁾
 - Terminal name: S
 - Description: Cable shielding connected via a capacitor to EARTH
- X2 ¹⁾
 - Terminal name: -
 - Description: not connected
- X3 ¹⁾
 - Terminal name: B-
 - Description: Protocol loop signal -
- X4 1)
 - Terminal name: A+
 - Description: Protocol loop signal +

6.1.6 Terminals of the "Analog I/O" module (Ex d /XP or Ex i/IS)

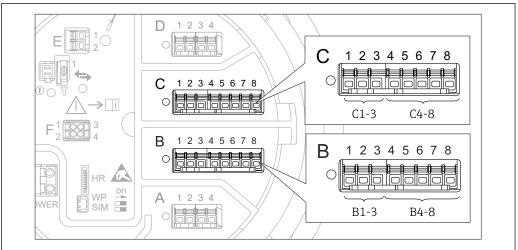

A003116

Terminal: B1-3

Function: Analog input or output (configurable)

- Passive usage: → 🖺 30
- Active usage: \rightarrow **1** 32
- Designation in the operating menu: Analog I/O B1-3 (→
 ☐ 136)

Terminal: C1-3

Function: Analog input or output (configurable)

- Passive usage: → 🖺 30
- Active usage: → 🖺 32
- Designation in the operating menu: Analog I/O C1-3 (→
 ☐ 136)

Terminal: B4-8

Function: Analog input

- RTD: → 🖺 33
- FMR5xx: → 🖺 34
- Designation in the operating menu: Analog IP B4-8 (\rightarrow 🗎 130)

²⁾ Here, "X" stands for one of the slots "A", "B", "C", or "D".

Terminal: C4-8

Function: Analog input

■ RTD: → 🗎 33 ■ FMR5xx: → 🖺 34


 Designation in the operating menu: Analog IP C4-8 (→

130)

6.1.7 Connection of the "Analog I/O" module for passive usage

- i
- In the passive usage the supply voltage for the communication line must be supplied by an external source.
- The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.


"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

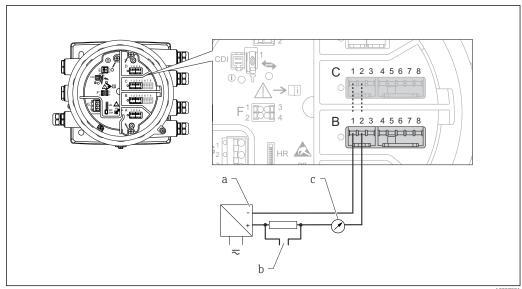

■ 10 Passive usage of the Analog I/O module in the output mode

- a Power supply
- b HART signal output
- c Analog signal evaluation

"Operating mode" = "4..20mA input" or "HART master+4..20mA input"

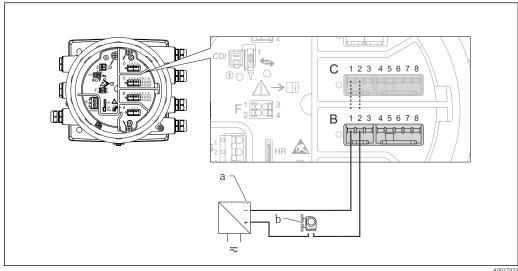

■ 11 Passive usage of the Analog I/O module in the input mode

a Power supply


b External device with 4...20mA and/or HART signal output

30 Endress+Hauser

A002793

A002793

"Operating mode" = "HART master"

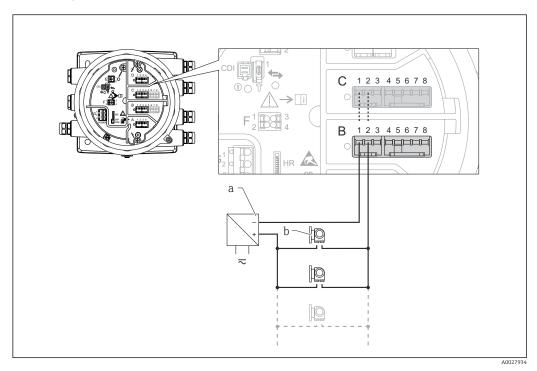

■ 12 Passive usage of the Analog I/O module in the HART master mode


a Power supply

b Up to 6 external devices with HART signal output

6.1.8 Connection of the "Analog I/O" module for active usage


- In the active usage the supply voltage for the communication line is supplied by the device itself. There is no need of an external power supply.
 - The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
 - Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
 - Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

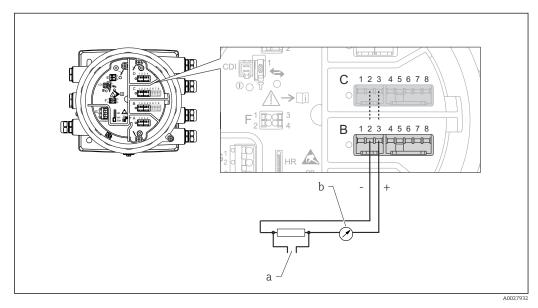

- \blacksquare 13 Active usage of the Analog I/O module in the output mode
- a HART signal output
- b Analog signal evaluation


"Operating mode" = "4..20mA input" or "HART master+4..20mA input"

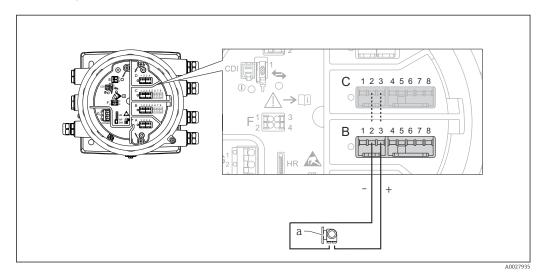

 \blacksquare 14 Active usage of the Analog I/O module in the input mode

a External device with 4...20mA and/or HART signal output

"Operating mode" = "HART master"

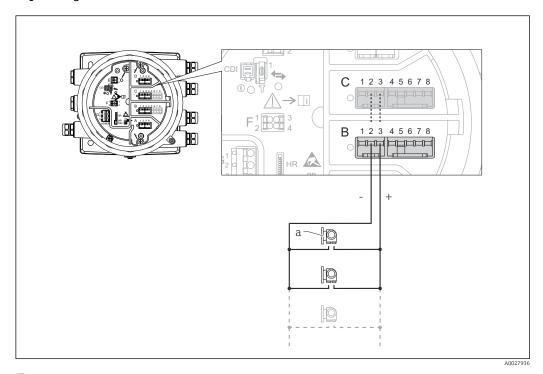


 \blacksquare 15 Active usage of the Analog I/O module in the HART master mode

a Up to 6 external devices with HART signal output

The maximum current consumption for the connected HART devices is 24 mA (i.e. 4 mA per device if 6 devices are connected).

6.1.9 Connection of a RTD

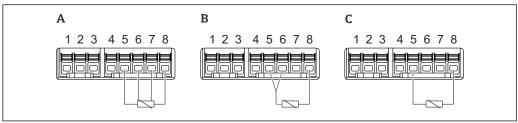


A002637

A 4-wire RTD connection

B 3-wire RTD connection

C 2-wire RTD connection

6.1.10 Connection of a Micropilot S FMR5xx

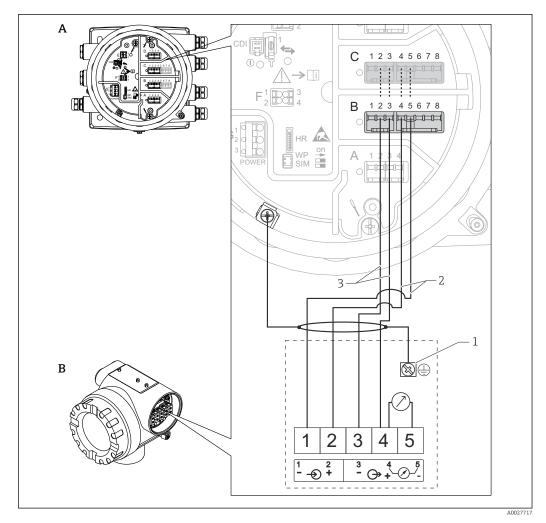


ightharpoonup 16 Connection of a Micropilot S FMR5xx to the Analog input module of a Tankside Monitor NRF81

- A Tankside Monitor NRF81
- B Micropilot S FMR5xx
- 1 Grounding
- 2 Power supply (from NRF81 to FMR5xx)
- 3 4-20mA/HART signal (from FMR5xx to NRF81)

If connected in this way, the Micropilot S FMR5xx gets its supply voltage from the Tankside Monitor NRF81.

6.1.11 Terminals of the "Digital I/O" module

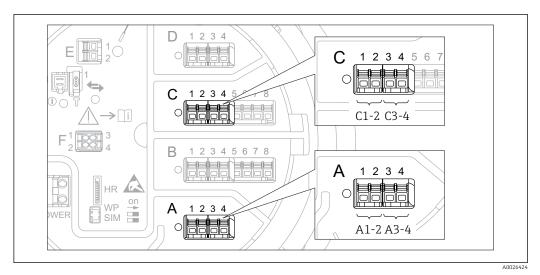

■ 17 Designation of the digital inputs or outputs (examples)

- Each Digital IO Module provides two digital inputs or outputs.
- In the operating menu each input or output is designated by the respective slot and two terminals within this slot. A1-2, for example, denotes terminals 1 and 2 of slot A. The same is valid for slots B, C and D if they contain a Digital IO module.
- For each of these pairs of terminals, one of the following operating modes can be selected in the operating menu:
 - Disable
 - Passive Output
 - Passive Input
 - Active Input

6.2 Connecting requirements

6.2.1 Cable specification

Terminals

Wire cross section 0.2 to 2.5 mm² (24 to 13 AWG)

Use for terminals with function: Signal and power supply

- Spring terminals (NRF81-xx1...)
- Screw terminals (NRF81-xx2...)

Wire cross section max. 2.5 mm² (13 AWG)

Use for terminals with function: Ground terminal in the terminal compartment

Wire cross section max. 4 mm² (11 AWG)

Use for terminals with function: Ground terminal at the housing

Power supply line

Standard device cable is sufficient for the power line.

HART communication line

- Standard device cable is sufficient if only the analog signal is used.
- Shielded cable is recommended if using the HART protocol. Observe the grounding concept of the plant.

Modbus communication line

- Observe the cable conditions from the TIA-485-A, Telecommunications Industry Association.
- Additional conditions: Use shielded cable.

V1 communication line

- 2-wire twisted pair, screened or unscreened cable
- Resistance in one cable: $\leq 120 \Omega$
- Capacitance between lines: ≤ 0.3 µF

WM550 communication line


- 2-wire twisted pair, unscreened cable
- Cross section minimum 0.5 mm² (20 AWG)
- Maximum total cable resistance: $\leq 250 \Omega$
- Cable with low capacitance

Tankside Monitor NRF81 Electrical connection

6.3 Ensuring the degree of protection

To guarantee the specified degree of protection, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
- 2. Tighten all housing screws and screw covers.
- 3. Firmly tighten the cable glands.
- 4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

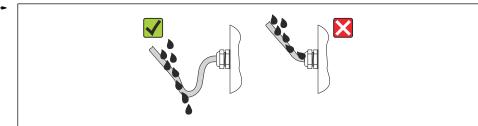

A0013960

5. Insert blind plugs appropriate for the safety rating of the device (e.g. Ex d/XP).

6.4 Post-connection check

0	Are cables or the device undamaged (visual inspection)?
0	Do the cables comply with the requirements?
0	Do the cables have adequate strain relief?
0	Are all cable glands installed, firmly tightened and correctly sealed?
О	Does the supply voltage match the specifications on the transmitter nameplate?
0	Is the terminal assignment correct → 🗎 15?
0	If required: Is the protective earth connected correctly ?
0	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
0	Are all housing covers installed and firmly tightened?
О	Is the securing clamp tightened correctly?

Operability Tankside Monitor NRF81

7 Operability

7.1 Overview of the operation options

- The display and operating module at the device or the remote display and operating module DKX001 ($\rightarrow \cong 40$).
- FieldCare connected through the service interface in the terminal compartment of the device ($\rightarrow \implies 51$).
- FieldCare connected through Tankvision Tank Scanner NXA820 (remote operation; $\rightarrow \stackrel{\triangle}{=} 51$).
- FieldCare connected through Commubox FXA195 (→ 🖺 100) to a HART interface of the device.

7.2 Structure and function of the operating menu

Menu	Submenu / parameter	Meaning
Operation	Level	Shows the measured and calculated level values.
	Temperature	Shows the measured and calculated temperature values.
	Density	Shows the measured and calculated density values.
	Pressure	Shows the measured and calculated pressure values.
	GP values	Shows the general purpose values.
Setup	Parameters 1 to N	Standard commissioning parameters
	Advanced setup	Contains further parameters and submenus: • to adapt the device to special measuring conditions. • to process the measured value. • to configure the signal output.
Diagnostics	Diagnostic parameters	 Indicates: The latest diagnostic messages and their timestamps. The operating time (overall time and time since last restart). The time according to the real-time clock.
	Diagnostic list	Contains up to 5 currently active error messages.
	Device information	Contains information needed to identify the device.
	Simulation	Used to simulate measured values or output values.
Expert ¹⁾ Contains all parameters of the device (including those which are already contained in one of the	System	Contains all general device parameters which do not affect the measurement or the communication interface.
other menus). This menu is organized according to the function blocks of the device. The parameter of the Expert menu are described in:	Input/output	Contains submenus to configure the analog and discrete I/O modules and connected HART devices.
GP01083G (NRF81)	Communication	Contains all parameters needed to configure the digital communication interface.
	Application	Contains submenus to configure the tank gauging application the tank calculations the alarms.
	Tank values	Shows measured and calculated tank values
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

¹⁾ On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.

Operability Tankside Monitor NRF81

7.3 Access to the operating menu via the local or remote display and operating module




- The measured value is indicated on the DKX001 and on the local display and operating module simulataneously.
- The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

7.3.1 Display and operating elements

The device has an illuminated **liquid crystal display (LCD)** that shows measured and calculated values as well as the device status in the standard view. Other views are used to navigate through the operating menu and to set parameter values.

The device is operated by **three optical keys**, namely "-", "+" and "E". They are actuated when the appropriate field on the protective glass of the front is **lightly** touched with the finger ("touch control").

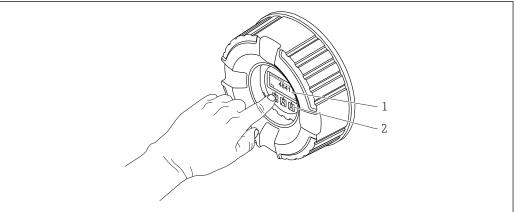


A002834

■ 18 Display and operating elements

- 1 Liquid crystal display (LCD)
- 2 Optical keys; can be operated through the cover glass. If used without the cover glass, lightly place your finger in front of the optical sensor for activation. Do not press hard.

7.3.2 Standard view (measured value display)

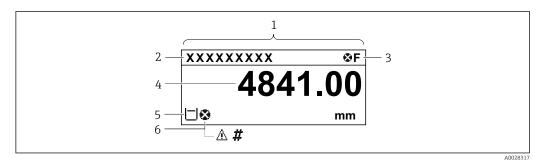

■ 19 Typical appearance of the standard view (measured value display)

- 1 Display module
- 2 Device tag
- 3 Status area
- 4 Display area for measured values
- 5 Display area for measured value and status symbols
- 6 Measured value status symbol

Status symbols

Symbol	Meaning
A0013956	"Failure" A device error is present. The measured value is no longer valid.
C	"Function check" The device is in service mode (e.g. during a simulation).
S A0013958	 "Out of specification" The device is operated: Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.

Measured value status symbols

Symbol	Meaning
A0012102	Status "Alarm" The measurment is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
A0012103	Status "Warning" The device continues measuring. A diagnostic message is generated.
<i></i>	Calibration to regulatory standards disturbed
A0031169	Is displayed in the following situations: ■ The write protection switch is OFF. → 🖺 49 ■ The write protection switch is ON but the level value can currently not be guaranteed.

Locking state symbols


Symbol	Meaning
A0011978	Display parameter Marks display-only parameters which cannot be edited.
A0011979	 Device locked ■ In front of a parameter name: The device is locked via software and/or hardware. ■ In the header of the measured value screen: The device is locked via hardware.

Operability Tankside Monitor NRF81

Meaning of the keys in the standard view

Key	Meaning
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	 Enter key ■ Pressing the key briefly opens the operating menu. ■ Pressing the key for 2 s opens the context menu: ■ Level (visible if the keylock is inactive): Shows the measured levels. ■ Keylock on (visible if the keylock is inactive): Activates the keylock. ■ Keylock off (visible if the keylock is active): Deactivates the keylock.

7.3.3 Navigation view

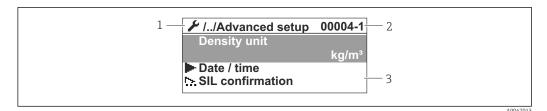

■ 20 Navigation view

- 1 Current submenu or wizard
- 2 Quick access code
- 3 Display area for navigation

Navigation symbols

Symbol	Meaning
A0011975	Operation Is displayed: in the main menu next to the selection Operation in the header, if you are in the Operation menu.
A0011974	Setup Is displayed: ■ in the main menu next to the selection Setup ■ in the header, if you are in the Setup menu
A0011976	Expert Is displayed: in the main menu next to the selection Expert in the header, if you are in the Expert menu
Q A0011977	Diagnostics Is displayed: ■ in the main menu next to the selection Diagnostics ■ in the header, if you are in the Diagnostics menu
A0013967	Submenu
A0013968	Wizard
A0013963	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked.

Operability Tankside Monitor NRF81

Meaning of the keys in the navigation view

Key		Meaning
	A0028324	Minus key Moves the selection bar upwards in a picklist.
	A0028325	Plus key Moves the selection bar downwards in a picklist.
	A0028326	 Enter key Pressing the key briefly opens the selected menu, submenu or parameter. For parameters: Pressing the key for 2 s opens the help text for the function of the parameter (if present).
	A0028327	 Escape key combination (press keys simultaneously) Pressing the keys briefly Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the keys for 2 s returns you to the measured value display ("standard view").


7.3.4 Wizard view



■ 21 Wizard view on the display module


- 1 Current wizard
- 2 Display area for navigation

Wizard navigation symbols

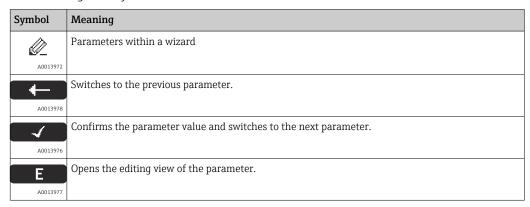

In the wizard view the meaning of the keys is indicated by the navigation symbol directly above the respective key (softkey functionality).

7.3.5 Numeric editor

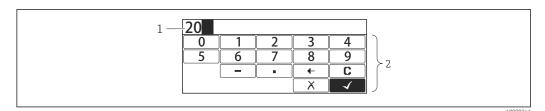

 \blacksquare 22 Numeric editor on the display module

- 1 Display area of the entered value
- 2 Input mask


Symbol	Meaning
0	Selection of numbers from 0 to 9.
9	
A0013998	
	Inserts decimal separator at the input position.
A0016619	
_	Inserts minus sign at the input position.
A0016620	
4	Confirms selection.
A0013985	
+	Moves the input position one position to the left.
A0016621	
X	Exits the input without applying the changes.
A0013986	
С	Clears all entered characters.
A0014040	

Meaning of the keys in the numeric editor

Key		Meaning
	©E A0028324	Minus key In the input mask, moves the selection bar to the left (backwards).
9-	A0028325	Plus key In the input mask, moves the selection bar to the right (forwards).
		■ Pressing the key briefly adds the selected number to the current decimal place or carries out the selected action. ■ Pressing the key for 2 s confirms the edited parameter value.
	A0028327	Escape key combination (press keys simultaneously) Closes the text or numeric editor without applying changes.

Operability Tankside Monitor NRF81

7.3.6 Text editor

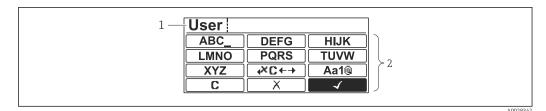

 \blacksquare 23 Text editor on the display module

- 1 Display area of the entered text
- 2 Input mask

Text editor symbols

Symbol	Meaning
ABC_	Selection of letters from A to Z
XYZ A0013997	
Aa1 @	Toggle Between upper-case and lower-case letters For entering numbers For entering special characters
A0013985	Confirms selection.
4× C ←→ A0013987	Switches to the selection of the correction tools.
X A0013986	Exits the input without applying the changes.
A0014040	Clears all entered characters.

Correction symbols under $\nearrow c \leftrightarrow$

A0013989	Clears all entered characters.
A0013991	Moves the input position one position to the right.
A0013990	Moves the input position one position to the left.
**	Deletes one character immediately to the left of the input position.
A0013988	

Meaning of the keys in the text editor

Key	Meaning
—————————————————————————————————————	Minus key In the input mask, moves the selection bar to the left (backwards).
	Plus key In the input mask, moves the selection bar to the right (forwards).
	 Enter key Pressing the key briefly Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
(a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	Escape key combination (press keys simultaneously) Closes the text or numeric editor without applying changes.

7.3.7 Keypad lock

Automatic keypad lock

Operation via the local display is automatically locked:

- after a start-up or restart of the device.
- if the device has not been operated via the display for > 1 minute.
- When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

Disabling the keypad lock

- 1. The keylock is enabled.
 - Press E for at least 2 seconds.
 - ► A context menu appears.
- 2. Select **Keylock off** from the context menu.
 - The keylock is disabled.

Manual activation of the keypad lock

After commissioning of the device the keypad lock can be activated manually.

- 1. The device is in the measured value display.
 - Press E for at least 2 seconds.
 - ► A context menu appears.
- 2. Select **Keylock on** from the context menu.
 - The keylock is enabled.

Operability Tankside Monitor NRF81

7.3.8 Access code and user roles

Meaning of the access code

An access code can be defined in order to distinguish between the following user roles:

User role	Definition
Maintenance	 Knows the access code. Has write access to all parameters (except service parameters).
Operator	Doesn't know the access code.Has write access to only a few parameters.

- The description of parameters states which role is needed at least for read and write access to each parameter.
 - The current user role is indicated by the **Access status display** parameter.
 - If the access code is "0000", every user is in the **Maintenance** role. This is the default setting on delivery of the device.

Defining an access code

- Navigate to: Setup → Advanced setup → Administration → Define access code
 Define access code
- 2. Enter the intended access code (max. 4 digits).
- 3. Repeat the same code in the **Confirm access code** parameter.
 - The user is in the **Operator** role. The a-symbol appears in front of all write-protected parameters.

Switching to the "Maintenance" role

If the n-symbol appears on the local display in front of a parameter, the parameter is write-protected because the user is in the **Operator** role. To switch to the **Maintenance** role, proceed as follows:

- 1. Press E.
 - ► The input prompt for the access code appears.
- 2. Enter the access code.
 - The user is in the **Maintenance** role. The a-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.


Switching back to the "Operator" role automatically

The user automatically switches back to the **Operator** role:


- if no key is pressed for 10 minutes in the navigation and editing mode.
- 60 s after going back from the navigation and editing mode to the standard view (measured value display).

7.3.9 Write protection switch

The operating menu can be locked by a hardware switch in the connection compartment. In this locking state W&M related parameters are read only.

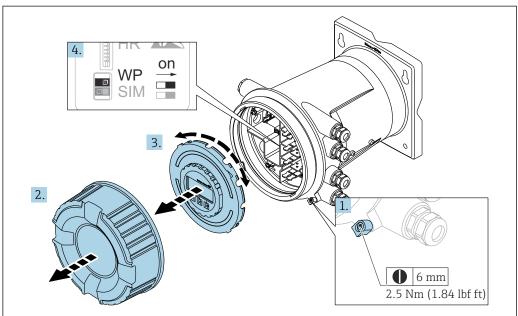


- A0020264
- The display module can be attached to the edge of the electronics compartment. This makes it easier to access the lock switch.
- 1. Loosen the securing clamp.
- 2. Unscrew the housing cover.
- 3. Pull out the display module with a gentle rotation movement.
- 4. Using a flat blade screwdriver or a similar tool, set the write protection switch **(WP)** into the desired position. **ON:** operating menu is locked; **OFF:** operating menu is unlocked.
- 5. Put the display module onto the connection compartment, screw the cover closed and tighten the securing clamp.
- To avoid acces to the write protection switch, the cover of the connection compartment can be secured by a lead seal.

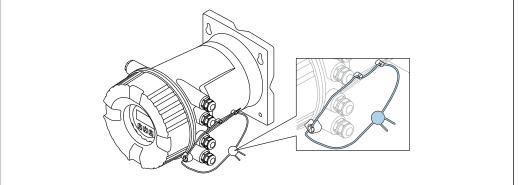


A0033364

😭 For LNE approval, bolts at built in flange additionally must be secured by a lead seal.

Operability Tankside Monitor NRF81

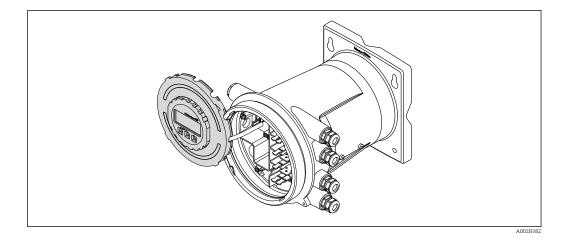


Indication of the locking state

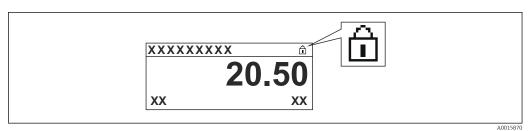

 $\label{protection} \textit{Write protection symbol in the header of the display}$

- 🗈 appears in the header of the display.

7.4 Access to the operating menu via the service interface and FieldCare

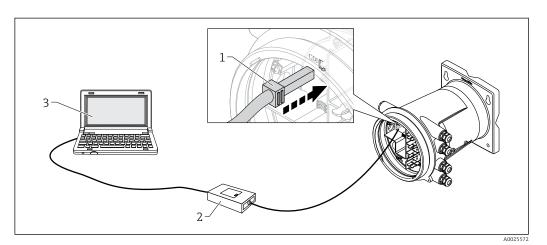

25 Operation via service interface

- Service interface (CDI = Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool and "CDI Communication FXA291" COM DTM


🚹 The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset = Restart device. This ensures correct operation of the device after the restore.

7.5 Access to the operating menu via Tankvision Tank Scanner NXA820 and FieldCare

7.5.1 Wiring scheme

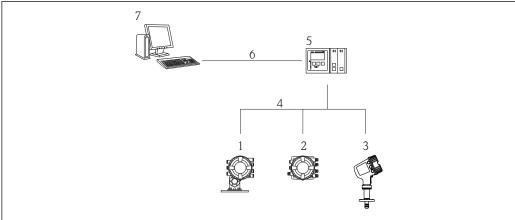

A0025621

■ 26 Connection of Tank Gauging devices to FieldCare via the Tankvision Tank Scanner NXA820


- l Proservo NMS8x
- 2 Tankside Monitor NRF81
- 3 Micropilot NMR8x
- 4 Field protocol (e.g. Modbus, V1)
- 5 Tankvision Tank Scanner NXA820
- 6 Etherne
- 7 Computer with FieldCare installed

Operability Tankside Monitor NRF81

7.5.2 Establishing the connection between FieldCare and the device


- 1. Make sure the **HART CommDTM NXA** is installed and update the DTM catalogue if required.
- 2. Create a new project in FieldCare.

3.

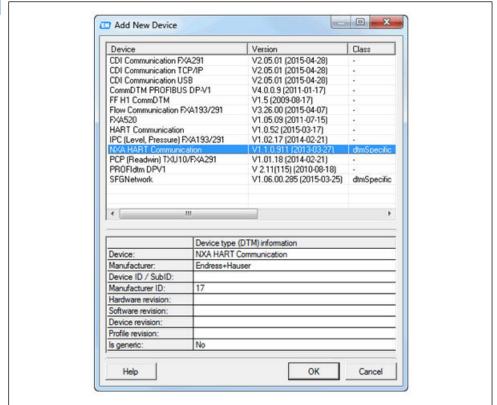


Add a new device: NXA HART Communication

4.

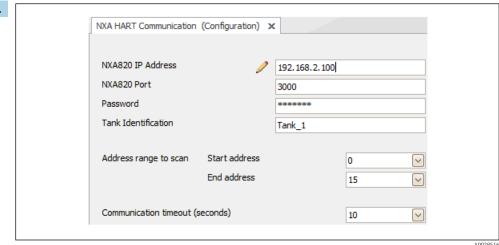


Open the configuration of the DTM and enter the required data (IP address of the NXA820; "Password" = "hart"; "Tank identification" only with NXA V1.05 or higher)

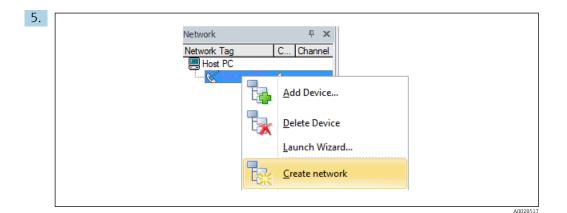

Select **Create network** from the context menu.

► The device is detected and the DTM is assigned.

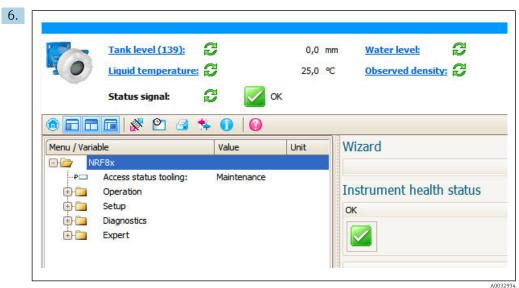

► The device can be configured.

The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset = Restart device. This ensures correct operation of the device after the restore.

System integration Tankside Monitor NRF81

8 System integration

8.1 Overview of the Device Description files (DTM)

To integrate the device via HART into FieldCare, a Device Description file (DTM) according to the following specification is required:

Manufacturer ID	0x11
Device type (NRF8x)	0x112F
HART specification	7.0
DD files	For information and files see: www.endress.com

Tankside Monitor NRF81 Commissioning

9 Commissioning

9.1 Initial settings

9.1.1 Setting the display language

Setting the display language via the display module

- - ► The **Language** parameter appears.
- 2. Open the **Language** parameter and select the display language.

Setting the display language via an operating tool (e.g. FieldCare)

- 1. Navigate to: Setup → Advanced setup → Display → Language
- 2. Select the display language.
- This setting only affects the language on the display module. To set the language in the operating tool use the language setting functionality of FieldCare or DeviceCare, respectively.

9.1.2 Setting the real-time clock


Setting the real-time clock via the display module

- 1. Navigate to: Setup → Advanced setup → Date / time → Set date
- 2. Use the following parameters to set the the real-time clock to the current date and time: Year, Month, Day, Hour, Minutes.


Setting the real-time clock via an operating tool (e.g. FieldCare)

1. Navigate to: Setup \rightarrow Advanced setup \rightarrow Date / time




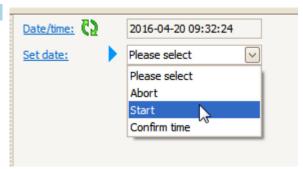

Go to the **Set date** parameter and select the **Start** option.

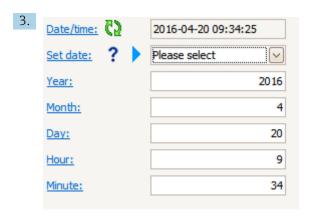

Use the following parameters to set the date and time: Year, Month, Day, Hour, Minutes.

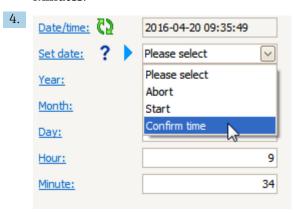

Go to the **Set date** parameter and select the **Confirm time** option.

► The real-time clock is set to the current date and time.


Tankside Monitor NRF81 Commissioning

9.2 Configuring the tank gauging application

Configuration of the inputs:	Description
HART inputs	→ 🖺 58
NMT532/539/81 connected via HART	→ 🖺 61
4-20mA inputs	→ 🖺 63
RTD input	→ 🖺 64
Digital inputs	→ 🖺 66
Configuration of the data processing in the device:	Description
Linking input values to tank variables	→ 🖺 67
Tank calculation: Direct Level Measurement	→ 🖺 68
Tank calculation: Hybrid Tank Measurement System (HTMS)	→ 🖺 69
Tank calculation: Hydrostatic Tank Gauging (HTG)	→ 🖺 70
Tank calculation: Correction of the Hydrostatic Tank Deformation (HyTD)	→ 🗎 73
Tank calculation: Thermal Tank Shell Correction (CTSh)	→ 🖺 74
Alarms (limit evaluation)	→ 🖺 75
Configuration of the signal output:	Description
4-20mA output	→ 🖺 76
HART slave + 4-20mA output	→ 🖺 77
Modbus	→ 🖺 78
V1	→ 🖺 79
Digital outputs	→ 🖺 80
WM550	→ 🖺 79

9.2.1 Configuration of the HART inputs

Connecting and addressing HART devices

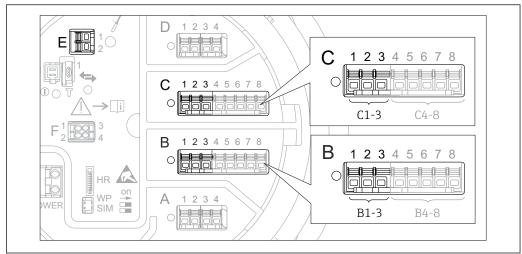

A00329

- 27 Possible terminals for HART loops

- E HART Ex is output (available in all device versions)
- HART devices must be configured and given a unique HART address in the range from 1 to 15 via their own user interface before they are connected to the Tankside Monitor NRF81³⁾. Make sure they are connected as defined by the terminal assignment →

 28. Devices with an address larger than 15 are not recognized by the Tankside Monitor.

Slot B or C: Setting the operating mode of the Analog I/O module

This section is not relevant for the HART Ex is output (Slot E). This output always functions as a HART master for the connected HART slaves.

If HART devices are connected to an Analog I/O module (slot B or C in the terminal compartment), this module must be configured as follows:

- 1. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog I/O X1-3
- 2. Go to the **Operating mode** parameter ($\rightarrow \triangleq 136$).
- 3. If only one HART device is connected to this loop:

 Select the **HART master+4..20mA input** option. In this case the 4-20mA signal can be used in addition to the HART signal. For the configuration of the 4-20mA input:

 →

 63.
- 4. If up to 6 HART devices are connected to this loop: Select the **HART master** option.

Configuring the power supply for a connected Micropilot S FMR5xx

This section is only relevant if a Micropilot S FMR5xx is connected to the Tankside Monitor.

3) The current software does not support HART devices with adress 0 (zero).

Tankside Monitor NRF81 Commissioning

The Tankside Monitor can provide the supply voltage for a connected Micropilot S FMR5xx. To configure this functionality, proceed as follows:

- 1. Make sure the FMR5xx is connected to the Analog I/O module as defined by the terminal assignment $\rightarrow \stackrel{\triangle}{=} 34$.
- 2. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog IP X4-8
- 3. Go to the **Operating mode** parameter (→ 🖺 130) and select the **Gauge power supply** option.

.

Defining the type of measured value

- This setting can be skipped for a connected Prothermo NMT5xx and NMT8x or Micropilot FMR5xx as for these devices the type of measured value is automatically recognized by the Tankside Monitor.
- The measured values can only be used in the system if the unit of the assigned HART variable fits the type of measured value. The HART variable assigned to Output temperature, for example, has to be in °C or °F.
 - A HART variable with unit "%" can not be used for **Output level**. Instead, the HART variable must be in mm, m, ft or in.

The type of measured value must be specified for each HART variable (PV, SV, TV and QV). To do so, proceed as follows:

- Navigate to: Setup → Advanced setup → Input/output → HART devices
 There is a submenu for each connected HART device.
- 2. For each device go to the corresponding submenu.
- 3. If the device measures a pressure:
 - Go to the **Output pressure** parameter ($\rightarrow \boxminus 126$) and specify which of the four HART variables contains the measured pressure. Only a HART variable with a pressure unit may be selected.
- 4. If the device measures a density:
- 5. If the device measures a temperature:
 - Go to the **Output temperature** parameter ($\rightarrow \boxminus 127$) and specify which of the four HART variables contains the measured temperature. Only a HART variable with a temperature unit may be selected.
- 6. If the device measures the vapor temperature:
 - Go to the **Output vapor temperature** parameter ($\rightarrow \boxminus 128$) and specify which of the four HART variables contains the measured vapor temperature. Only a HART variable with a temperature unit may be selected.
- 7. If the device measures a level:
 - Go to the **Output level** parameter ($\Rightarrow riangleq 128$) and specify which of the four HART variables contains the measured level. Only a HART variable with a level unit (not "%") may be selected.

Disconnecting HART devices

When a HART device is disconnected from the device, it must also be logically removed as follows:

1. Navigate to Setup → Advanced setup → Input/output → HART devices → Forget device → Forget device

- 2. Select the HART device to be removed.
- This procedure is also necessary if a defective device is exchanged.


Tankside Monitor NRF81 Commissioning

9.2.2 Configuration of a connected Prothermo temperature transmitter

If a Prothermo NMT532, NMT539 or NMT8x temperature transmitter is connected via HART, it can be configured as follows:

- 1. Navigate to: Expert \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s) \rightarrow NMT device config; here, **HART Device(s)** is the name of the connected Prothermo.
- 2. Go to the **Configure device?** parameter and select **Yes**.



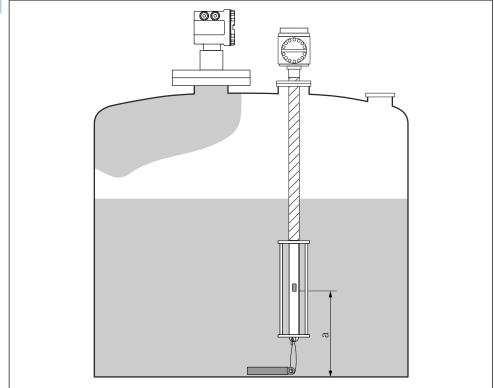


A0030099

■ 28 Prothermo NMT53x: Position of the bottom temperature element

a Distance from bottom temperature element to zero reference (tank bottom or datum plate).

To configure a **Prothermo NMT53x**: Go to the **Bottom point** parameter and enter the position of the bottom temperature element (see picture above).

The value entered into the **Bottom point** parameter in the Tank Gauging device is handed over to the **Bottom point** parameter in the connected Prothermo NMT53x.

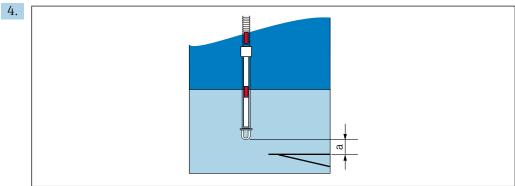

Δ004711

■ 29 Prothermo NMT8x: Distance between the physical end of the probe and the zero level value

a Distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).


To configure a **Prothermo NMT8x**: Go to the **Bottom point** parameter and enter the distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

- The value entered into the **Bottom point** parameter in the Tank Gauging device is handed over to the **End of probe to zero distance** parameter in the connected Prothermo NMT8x.
- To check the temperatures measured by the individual elements, go to the following submenu: Operation \rightarrow Temperature \rightarrow NMT element values \rightarrow Element temperature

There is a ${\bf Element\ temperature\ X}$ parameter for each element of the Prothermo.

Tankside Monitor NRF81 Commissioning


9.2.3 Configuration of the 4-20mA inputs

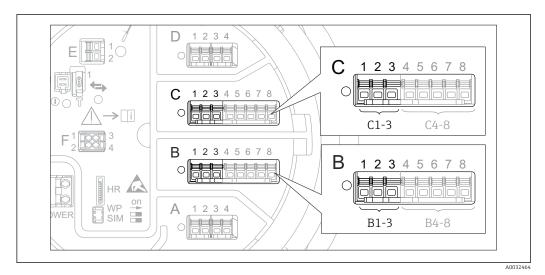

 \blacksquare 30 Possible locations of the Analog I/O modules, which can be used as a 4-20mA input. The order code of the device determines which of these modules is actually present \Rightarrow \blacksquare 18.

For each Analog I/O module to which a 4-20mA device is connected, proceed as follows:

- 2. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog I/O X1-3
- 3. Go to the **Operating mode** parameter ($\rightarrow \triangleq 136$) and select **4..20mA input** or **HART master+4..20mA input**.
- 4. Go to the **Process variable** parameter ($\rightarrow \triangleq 142$) and specify which process variable is transmitted by the connected device.
- 5. Go to the **Analog input 0% value** parameter ($\rightarrow \implies 142$) and define which value of the process variable corresponds to an input current of 4 mA (see diagram below).
- 6. Go to the **Analog input 100% value** parameter (→ 🖺 142) and define which value of the process variable corresponds to an input current of 20 mA (see diagram below).
- 7. Go to the **Process value** parameter ($\Rightarrow \triangleq 143$) and check whether the indicated value matches the actual value of the process variable.

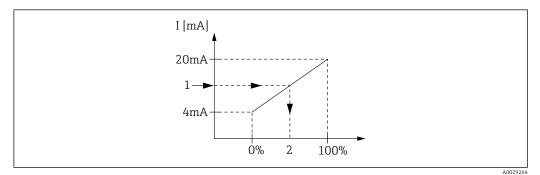


 \blacksquare 31 Scaling of the 4-20mA input to the process variable

- 1 Input value in mA
- 2 Process value

The **Analog I/O** submenu contains additional parameters for a more detailed configuration of the Analog Input. For a description refer to : $\rightarrow \implies 136$


9.2.4 Configuration of a connected RTD

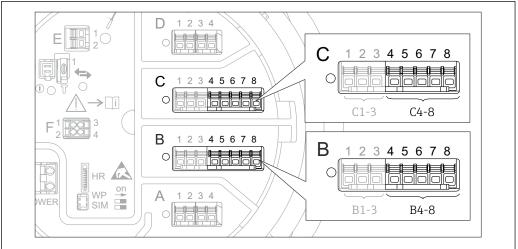

VUU3346

- 32 Possible locations of the Analog I/O modules, to which an RTD can be connected. The order code of the device determines which of these modules is actually present →

 □ 18.
- 1. Make sure the RTD is connected as defined by the terminal assignment $\rightarrow \equiv 33$.
- 2. Navigate to the submenu of the respective Analog I/O module: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP X4-8.
- 3. Go to the **RTD type** parameter ($\rightarrow \implies 130$) and specify the type of the connected RTD.

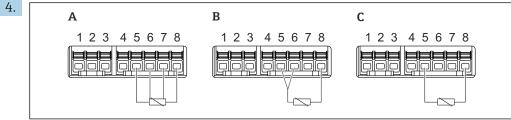


A002637

- 33 RTD connection types
- A 4 wire RTD connection
- B 3 wire RTD connection
- C 2 wire RTD connection

Go to the **RTD connection type** parameter ($\rightarrow \blacksquare 131$) and specify the type of connection of the RTD (2-, 3- or 4-wire).

- 5. Go to the **Input value** parameter ($\Rightarrow \triangleq 133$) and check whether the indicated temperature matches the actual temperature.
- 6. Go to the **Minimum probe temperature** parameter (→ 🖺 133) and specify the minimum approved temperature of the connected RTD.
- 7. Go to the **Maximum probe temperature** parameter ($\Rightarrow \triangleq 134$) and specify the maximum approved temperature of the connected RTD.

Tankside Monitor NRF81 Commissioning

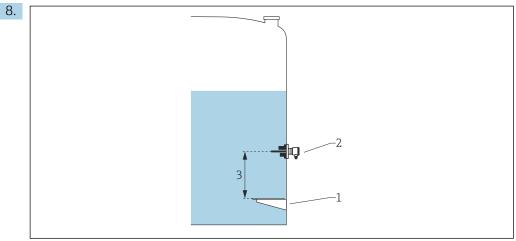

- 1 Datum plate
- 2 RTD
- Probe position ($\rightarrow \implies 134$)

Go to the **Probe position** parameter and enter the mounting position of the RTD (measured from the datum plate).


This parameter, in conjunction with the measured level, determines whether the measured temperature refers to the product or to the gas phase.

Offset for resistance and/or temperature



An offset for the resistance or the temperature can be defined in the following submenu: Expert \rightarrow Input/output \rightarrow Analog IP X4-8.


- Ohms offset is added to the measured resistance before the calculation of the temperature.
- **Temperature offset after conversion** is added to the measured temperature.

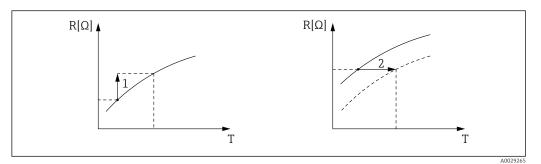

Ohms offset

Temperature offset after conversion

9.2.5 Configuration of the digital inputs

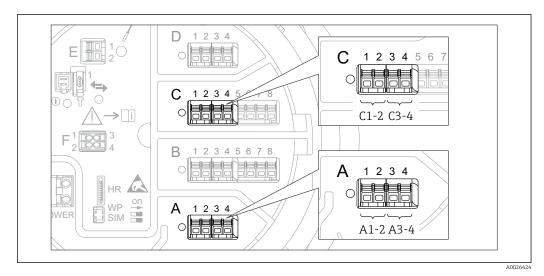


Possible locations of the Digital I/O modules (examples); the order code defines the number and location of digial input modules $\rightarrow \triangleq 18$.

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode** and **Contact type**.

The "Operating mode" parameter

Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Operating mode

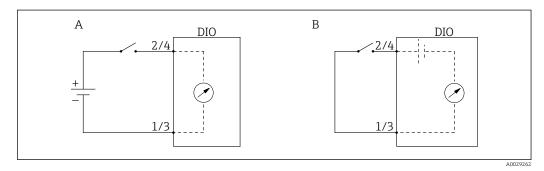

- A "Operating mode" = "Input passive"
- B "Operating mode" = "Input active"

Meaning of the options

■ Input passive

The DIO module measures the voltage provided by an external source. Depending on the status of the external switch, this voltage is 0 at the input (switch open) or exceeds a certain limit voltage (switch closed). These two states represent the digital signal.

Input active

The DIO module provides a voltage and uses it to detect whether the external switch is open or closed.

The "Contact type" parameter

Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Contact type

Tankside Monitor NRF81 Commissioning

> This parameter determines how the state of the external switch is mapped to the internal states of the DIO module:

State of the external switch	Internal state of the DIO module		
	Contact type = Normally open	Contact type = Normally closed	
Open	Inactive	Active	
Closed	Active	Inactive	
Behavior in special situaions:			
During start-up	Unknown	Unknown	
Fault in measurement	Error	Error	



- The internal state of the Digital Input can be transferred to a Digital Output or can be used to control the measurement.
 - The **Digital Xx-x** submenu contains additional parameters for a more detailed

9.2.6 Linking input values to tank variables


Measured values must be linked to tank variables before they can be used in the Tank Gauging application. This is done by defining the source of each tank variable in the following parameters:

Tank variable	Parameter defining the source of this variable
Product level	 Setup → Level source Setup → Advanced setup → Application → Tank configuration → Level → Level source
Bottom water level	
Average or spot temperature of the product	 Setup → Liquid temp source Setup → Advanced setup → Application → Tank configuration → Temperature → Liquid temp source
Temperature of the air surrounding the tank	Setup → Advanced setup → Application → Tank configuration → Temperature → Air temperature source
Temperature of the vapor above the product	$\mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Tank configuration} \rightarrow \mbox{Temperature} \rightarrow \mbox{Vapor temp source}$
Density of the product	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Density \rightarrow Observed density source
Bottom pressure (P1)	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 (bottom) source
Middle pressure (P2)	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P2 (middle) source
Top pressure (P3)	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 (top) source

Depending on the application not all these parameters will be relevant in a given situation.

9.2.7 Tank calculation: Direct level measurement

If no tank calculation is configured, level and temperature are measured directly.

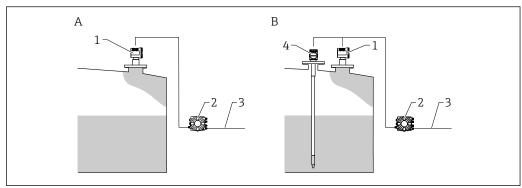

A002927


- *A Direct level measurement (without temperature)*
- B Direct level and temperature measurement
- 1 Level transmitter (typically FMR540 or FMR51)
- 2 Tankside Monitor
- 3 To inventory management system
- 4 Temperature transmitter
- 1. Navigate to: "Setup → Level source" and specify from which device the level is obtained.
- If a temperature transmitter is connected:
 Navigate to: "Setup → Liquid temp source" and specify from which device the temperature is obtained.

Tankside Monitor NRF81 Commissioning

9.2.8 Tank calculation: Hybrid tank measurement system (HTMS)

HTMS uses level and pressure measurements to calculate the density of the medium.

In non-atmospheric (i.e. pressurized) tanks it is recommended to use the **HTMS**P1+P3 mode. Two pressure sensors are required in this case. In atmospheric (i.e. unpressurized) tanks the **HTMS** P1 with only one pressure sensor is sufficient.

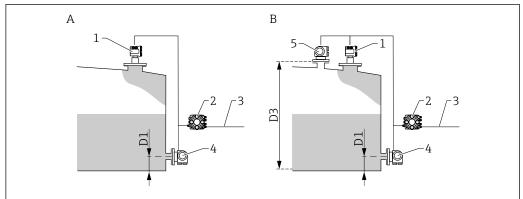


A0029275

- A The "HTMS P1" measurement mode
- B The "HTMS P1+P3" measurement mode
- D1 P1 position
- D3 P3 position
- 1 Level transmitter (e.g. typically FMR540 or FMR51)
- 2 Tankside Monitor
- 3 To inventory management system
- 4 Pressure sensor (bottom)
- 5 Pressure sensor (top)
- 1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Level
- 3. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure
- 4. Go to **P1 (bottom) source** ($\rightarrow \triangleq 181$) and specify from which device the bottom pressure (P1) is obtained.
- 5. If a top pressure transmitter (P3) is connected:
 Go to P3 (top) source (→ 185) and specify from which device the top pressure (P3) is obtained.
- 6. Navigate to: Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS
- 7. Go to **HTMS mode** ($\rightarrow \triangleq 210$) and specify the HTMS mode.
- 8. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Density
- 9. Go to **Observed density source** (→ 🗎 **179**) and select **HTMS**.
- 10. Use the other parameters of the **HTMS** submenu to configure the calculation. For a detailed description: $\rightarrow \stackrel{\triangle}{=} 208$

9.2.9 Tank calculation: Hydrostatic tank gauging (HTG)

Hydrostatic Tank Gauging (HTG) is a method to calculate the level and the density of the product inside a tank using pressure measurements only. The pressure is measured at different heights of the tank using one, two or three pressure sensors. With these data the density or the level of the product (or both) can be calculated.

Overview of the HTG parameters

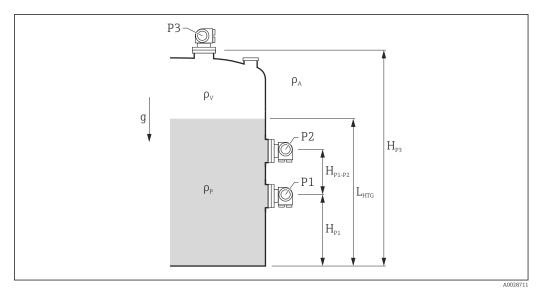

■ 35 HTG parameters

Parameter Navigation path P1 (Bottom pressure) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 (bottom) H_{P1} (Position of P1 sensor) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 position P2 (Middle pressure) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P2 (middle) H_{P1-P2} (Distance between P1 and P2 sensors) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1-2 distance P3 (Top pressure) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 (top) H_{P3} (Position of P3 sensor) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 position ρ_P (Density of the product $^{1)}$) ■ Read-only: Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Density value • Writable: Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Manual density Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Density \rightarrow Vapor density ρ_V (Vapor density) ρ_A (Ambient air temperature) Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Density \rightarrow Air density g (Local gravity) Expert \rightarrow Application \rightarrow Tank Calculation \rightarrow Local gravity L_{HTG} (Calculated level) $\mathsf{Setup} \to \mathsf{Advanced} \ \mathsf{setup} \to \mathsf{Application} \to \mathsf{Tank} \ \mathsf{calculation} \to \mathsf{HTG} \to \mathsf{Tank} \ \mathsf{level}$

¹⁾ Depending on the **HTG mode** parameter this is a writable or a read-only parameter.

Tankside Monitor NRF81 Commissioning

Selecting the HTG mode

1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG

2. Go to the **HTG mode** parameter ($\Rightarrow \triangleq 205$) and select the mode according to the following table.

HTG mode	Measured variables	Required additional parameters	Calculated variables
P1 only	P1	 ρ_P g H_{P1} 	L _{HTG}
P1 + P3	■ P1 ■ P3	 ρ_P ρ_V ρ_A g H_{P1} H_{P3} 	L _{HTG} (more precise calculation for pressurized tanks)
P1 + P2	■ P1 ■ P2	 ρ_A g H_{P1} H_{P1-P2} 	 ρ_P L_{HTG}
P1 + P2 + P3	• P1 • P2 • P3	 ρ_V ρ_A g H_{P1} H_{P1-P2} H_{P3} 	 ρ_P L_{HTG} (more precise calculation for pressurized tanks)

Assigning the P1 (bottom) pressure sensor

- Navigate to : Setup → Advanced setup → Application → Tank configuration
 Pressure
- 2. Go to the **P1 (bottom) source** parameter ($\rightarrow \implies 181$) and select the device from which the bottom pressure is obtained.
- 3. Go to the **P1 (bottom)** parameter ($\rightarrow \boxminus 116$) and check whether the indicated pressure matches the actual pressure at the P1 position. If necessary, the indicated pressure can be corrected by the **P1 offset** parameter.
- 4. Go to the **P1 position** parameter ($\rightarrow \implies 182$) and enter the distance from the datum plate to the P1 sensor.
- 5. Go to the **P1 abs / rel** parameter (→ 🖺 182) and specify whether the P1 sensor measures an absolute or a relative pressure.

Assigning the P2 (middle) pressure sensor

- This procedure is only required for the following HTG modes:
 - P1 + P2
 - P1 + P2 + P3
- 1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure
- 2. Go to the **P2 (middle) source** parameter ($\Rightarrow \implies 183$) and select the device from which the middle pressure is obtained.
- 3. Go to the **P2** (middle) parameter ($\rightarrow \triangleq 116$) and check whether the indicated pressure matches the actual pressure at the P2 position. If necessary, the indicated pressure can be corrected by the **P2** offset parameter ($\rightarrow \triangleq 184$).
- 4. Go to the **P1-2 distance** parameter ($\rightarrow \implies 184$) and enter the distance between the P1 and P2 sensors.
- 5. Go to the **P2 abs / rel** parameter (→ 🖺 184) and specify whether the P2 sensor measures an absolute or a relative pressure.

Assigning the P3 (top) sensor

- This procedure is only required for the following HTG mode:
 - P1 + P3
 - P1 + P2 + P3
- 1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure
- 2. Go to the **P3 (top) source** parameter ($\rightarrow \triangleq 185$) and select the device from which the top pressure is obtained.
- 3. Go to the **P3 (top)** parameter ($\Rightarrow \implies 116$) and check whether the indicated pressure matches the actual pressure at the P3 position. If necessary, the indicated pressure can be corrected by the **P3 offset** parameter ($\Rightarrow \implies 186$).
- 4. Go to the **P3 position** parameter ($\rightarrow \implies 186$) and enter the distance from the datum plate to the P3 sensor.
- 5. Go to the **P3 abs / rel** parameter (→ 🗎 186) and specify whether the P3 sensor measures an absolute or a relative pressure.

Selecting HTG as the level source

- 1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Level
- 2. Go to the **Operation mode** parameter and select **HTG**.

Supplementary specifications


- If the ambient pressure deviates considerably from 1 bar (14.5 psi):
 Navigate to Setup → Advanced setup → Application → Tank configuration → Pressure
- 2. Go to the **Ambient pressure** parameter ($\rightarrow \implies 187$) and specify the ambient pressure.
- The **HTG** submenu contains additional parameters for a more detailed configuration of the HTG calculation. For details: →

 □ 198

Tankside Monitor NRF81 Commissioning

9.2.10 Tank calculation: Hydrostatic Tank Deformation (HyTD)

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels divided over the full range of the tank.

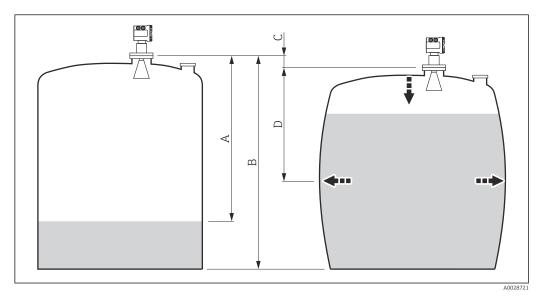

■ 36 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (tank nearly empty)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (tank filled)
- This mode should not be used in conjunction with HTG as with HTG the level is not measured relative to the gauge reference height.
- The Correction of the Hydrostatic Tank Deformation is configured in the **HyTD** submenu (→ 🗎 190)

Commissioning Tankside Monitor NRF81

9.2.11 Tank calculation: Thermal tank shell correction (CTSh)


CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

- This correction is recommended for the following situations:
 - if the operating temperature deviates consided erably from the temperature during calibration ($\Delta T > 10 \,^{\circ}\text{C} \, (18 \,^{\circ}\text{F})$)
 - for extremely high tanks
 - for refrigerated, cryogenic or heated applications
- As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
- This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

Tankside Monitor NRF81 Commissioning

9.2.12 Configuration of the alarms (limit evaluation)

A limit evaluation can be configured for up to 4 tank variables. The limit evaluation issues an alarm if the value exceeds an upper limit or falls below a lower limit, respectively. The limit values can be defined by the user.

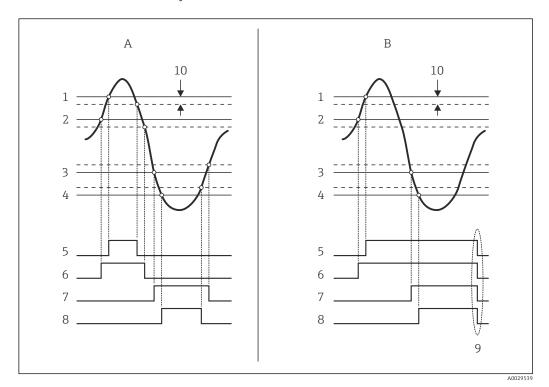

■ 37 Principle of the limit evaluation

- A Alarm mode = On
- *B* Alarm mode = Latching
- 1 HH alarm value
- 2 H alarm value
- 3 L alarm value
- 4 LL alarm value
- 5 HH alarm
- 6 Halarm
- 7 L alarm
- 8 LL alarm
- 9 "Clear alarm" = "Yes" or power off-on
- 10 Hysteresis


The limit evaluation is configured in the **Alarm 1 to 4** submenus.

Navigation path: Setup \rightarrow Advanced setup \rightarrow Alarm \rightarrow Alarm 1 to 4

- For **Alarm mode** = **Latching** all alarms remain active until the user selects **Clear** alarm = **Yes** or the power is switched off and on.
- Make sure to also configure the parameter "Hysteresis" parameter accordingly, depending on tank variable and unit used.

Tankside Monitor NRF81 Commissioning


Configuration of the 4-20mA output 9.2.13

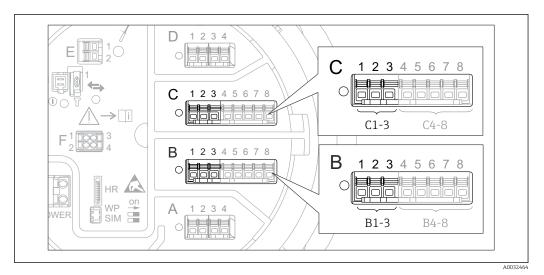

₩ 38 Possible locations of the Analog I/O modules, which can be used as a 4-20mA output. The order code of the device determines which of these modules is actually present $\rightarrow \blacksquare 18$.

Each Analog I/O module of the device can be configured as a 4...20mA analog output. To do so, proceed as follows:

- 1. Navigate to: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O X1-3.
- 2. Go to the **Operating mode** parameter and select **4..20mA output** or **HART slave** +4..20mA output 4).
- 3. Go to the **Analog input source** parameter and select the tank variable which is to be transmitted via the 4...20mA output.
- 4. Go to the **0** % value parameter and enter the value of the selected tank variable which will be mapped to 4 mA.
- 5. Go to the **100 % value** parameter and enter the value of the selected tank variable which will be mapped to 20 mA.

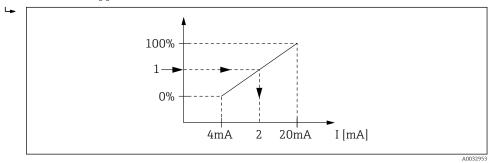

₹ 39 Scaling of the tank variable to the output current

- Tank variable
- Output current
- After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined errror value.
- The **Analog I/O** submenu contains more parameters which can be used for a more detailed configuration of the analog output. For a description see $\rightarrow \implies 136$

4) "HART slave +4..20mA output" means that the Analog I/O module serves as a HART slave which cyclically sends up to four HART variables to a HART master. For the configuration of the HART output: → 🗎 77

Tankside Monitor NRF81 Commissioning

9.2.14 Configuration of the HART slave + 4-20mA output

If **Operating mode** = **HART slave +4..20mA output** has been selected for an Analog I/O module, it serves as a HART slave which sends up to four HART variables to a HART

The 4-20 mA signal can be used in this case, too. For its configuration: $\rightarrow \triangleq 76$

Standard case: PV = 4-20mA signal


By default, the Primary Variable (PV) is identical to the tank variable transmitted by the 4-20mA output. To define the other HART variables and to configure the HART output in more detail, proceed as follows:

- 1. Navigate to: Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output → Configuration
- 2. Go to the **System polling address** parameter and set the HART slave address of the device.
- 3. Use the following parameters to assign tank variables to the second to fourth HART variable: Assign SV, Assign TV, Assign QV.
 - ► The four HART variables are transmitted to a connected HART Master.

Special case: PV ≠ 4-20mA signal

In exceptional cases it might be required that the Primary Variable (PV) transmits a different tank variable than the 4-20mA output. This is configured as follows.

- 1. Navigate to: Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output → Configuration
- 2. Go to the **PV source** parameter and select **Custom**.
 - └─ The following additional parameters appear in the submenu: Assign PV, 0 % value. 100 % value and PV mA selector.
- 3. Go to the **Assign PV** parameter and select the tank variable to be transmitted as the Primary Variable (PV).
- 4. Use the **0** % value and **100** % value parameters to define a range for the PV. The **Percent of range** parameter indicates the percentage for the actual value of the PV. It is included in the cyclical output to the HART master.

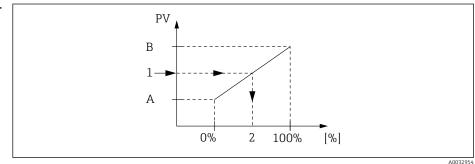

■ 40 Scaling of the tank variable to the percentage


- 0 % value Α
- 100 % value В
- Primary variable (PV) 1
- Percent of range
- 5. Use the **PV mA selector** parameter to define whether the output current of an Analog I/O module is to be included in the cyclical HART output.

Commissioning Tankside Monitor NRF81

After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined errror value.

The **PV mA selector** parameter does not influence the output current at the terminals of the Analog I/O module. It only defines whether the value of this current is part of the HART output or not.

9.2.15 Configuration of the Modbus output

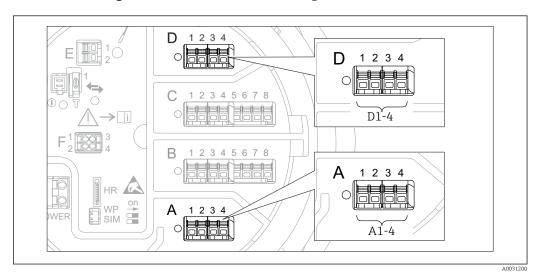

 \blacksquare 41 Possible locations of the Modbus modules (examples); depending on the device version these modules may also be in slot B or C \Rightarrow \blacksquare 18.


The Tankside Monitor NRF81 acts as a Modbus slave. Measured or calculated tank values are stored in registers which can be requested by a Modbus master.

The following submenu is used to configure the communication between the device and the Modbus master:

Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 \rightarrow Configuration (\rightarrow $\stackrel{\triangle}{=}$ 152)

Tankside Monitor NRF81 Commissioning

9.2.16 Configuration of the V1 output

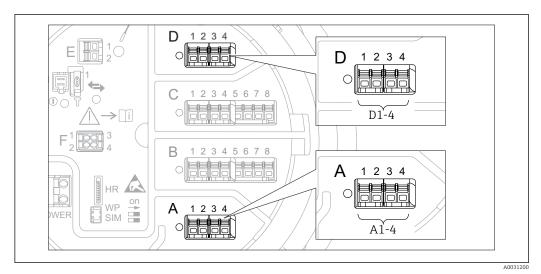


 \blacksquare 42 Possible locations of the V1 modules (examples); depending on the device version these modules may also be in slot B or C \Rightarrow \boxminus 18.

The following submenus are used to configure the V1 communication between the device and the control system:

- Setup → Advanced setup → Communication → V1 X1-4 → Configuration → 🖺 155
- Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow V1 input selector \rightarrow 🗎 158

9.2.17 Configuration of the WM550 output

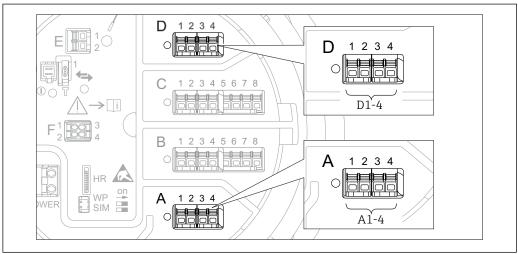

A0031200


■ 43 Possible locations of the WM550 modules (examples); depending on the device version these modules may also be in slot B or $C \rightarrow \square$ 18.

The following submenus are used to configure the WM550 communication between the device and the control system:


- Setup menu → Advanced setup submenu → Communication submenu → WM550 X1-4 → Configuration submenu → 🖺 151
- Setup menu → Advanced setup submenu → Communication submenu → WM550 X1-4 → WM550 input selector submenu → 🖺 160

Commissioning Tankside Monitor NRF81

9.2.18 Configuration of the digital outputs

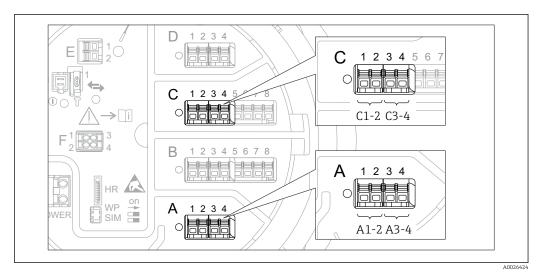

 \blacksquare 44 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of Digital I/O modules \Rightarrow \blacksquare 18.

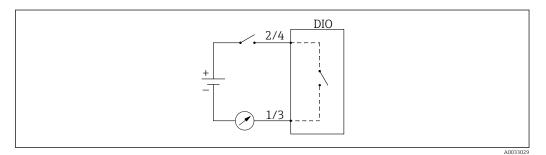

 \blacksquare 45 Usage of the Digital I/O module as a digital output

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode, Digital input source** and **Contact type**.

A digital output can be used to

- output the state of an alarm (if an alarm has been configured $\rightarrow \triangleq 75$)

To configure a digital output, proceed as follows:

- 1. Navigate to Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x, where Xx-x designates the digital I/O module to be configured.
- 2. Go to the **Operating mode** parameter and select the **Output passive** option.
- 3. Go to the **Digital input source** parameter and select the alarm or digital input to be transmitted.
- 4. Go to the **Contact type** parameter and select how the internal state of the alarm or digital input is to be mapped to the digital output (see table below).

Tankside Monitor NRF81 Commissioning

State of the alarm	Switching state of the digital output		
 Internal state of the digital input 	Contact type = Normally open	Contact type = Normally closed	
Inactive	Open	Closed	
Active	Closed	Open	



- For SIL applications, **Contact type** is automatically set to **Normally closed** by the device when starting the SIL confirmation procedure.
- In case of a power supply failure, the switching state is always "open", irrespectiv of the selected option.
- The Digital Xx-x submenu contains additional parameters for a more detailed configuration of the Digital Input. For a description refer to → ☐ 146.

9.3 Advanced settings

For a more detailed configuration of the signal inputs, the tank calculations and the signal outputs refer to the **Advanced setup** submenu $(\rightarrow \boxminus 122)$.

9.4 Simulation

To check the correct configuration of the device and of the control system, it is possible to simulate different situations (measured values, diagnostic messages etc.). See the **Simulation** submenu ($\Rightarrow \implies 245$) for details.

9.5 Protecting settings from unauthorized access

There are two possibilities to protect the settings from unauthorized access:

- By the protection switch (→ 월 49)
 This locks the access to W&M-related parameters by any user interface (display and operating module, FieldCare, other configuration tools).

Operation Tankside Monitor NRF81


10 Operation

10.1 Reading off the device locking status

Depending on the locking state of the device some operations may be locked. The current locking status is indicated at: Setup \rightarrow Advanced setup \rightarrow Locking status. The following table summarizes the different locking statuses:

Locking status	Meaning	Unlocking procedure
Hardware locked	The device is locked by the write-protection switch in the terminal compartment.	→ 🖺 49
SIL locked	The device is in SIL-locked mode.	Detailed information on this topic see SIL Safety manual
CT active - all parameters	The custody transfer mode is active.	→ 🖺 49
WHG locked	The device is in WHG-locked mode.	Detailed information on this topic see SIL Safety manual
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed again.	Wait for completion of the device-internal processing.

A locking is indicated by the write protection symbol in the header of the display:

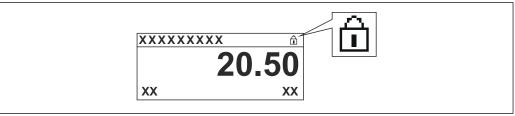

A0015870

10.2 Reading off measured values

Tank values can be read off in the following submenus:

- Operation → Level
- Operation → Temperature
- Operation → Density
- Operation → Pressure

11 Diagnostics and troubleshooting

11.1 General trouble shooting


11.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
	Display contrast too low.	Set Setup → Advanced setup → Display → Contrast display to a value ≥ 60 %.
"Communication error" is	Electromagnetic interference	Check grounding of the device.
indicated on the display when starting the device or connecting the display	Broken display cable or display plug.	Exchange display.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer (e.g. FieldCare) and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

11.2 Diagnostic information on local display

11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

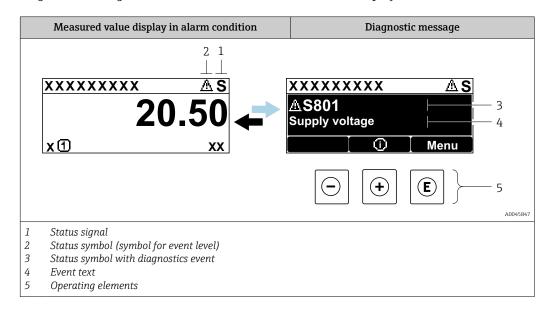

Status signals


A0013956	"Failure" A device error is present. The measured value is no longer valid.
C	"Function check" The device is in service mode (e.g. during a simulation or a warning).
S	 "Out of specification" The device is operated: Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.

Status symbol (symbol for event level)

A0013961	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
<u>A0013962</u>	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

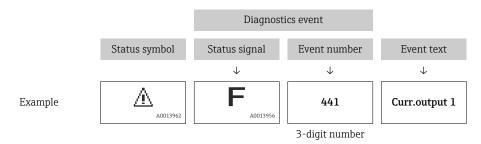


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu $(\rightarrow \ \ \ \ \ \ \ \ \ \)$

Operating elements

Operating function	Operating functions in menu, submenu		
A0013970	Plus key Opens the message about the remedial measures.		
A0013952	Enter key Opens the operating menu.		

11.2.2 Calling up remedial measures

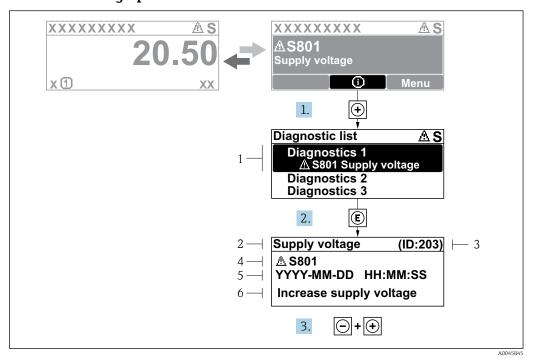

■ 46 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

A diagnostic message appears in the standard view (measured value display).

- 1. Press ± (i) symbol).
 - ► The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with \pm or \Box and press \Box .
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press \Box + \pm simultaneously.
 - ► The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or in the **Previous diagnostics**.

- 1. Press E.
 - └─ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press \Box + \pm simultaneously.
 - ► The message for the remedial measures closes.

86

11.3 Diagnostic information in FieldCare

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

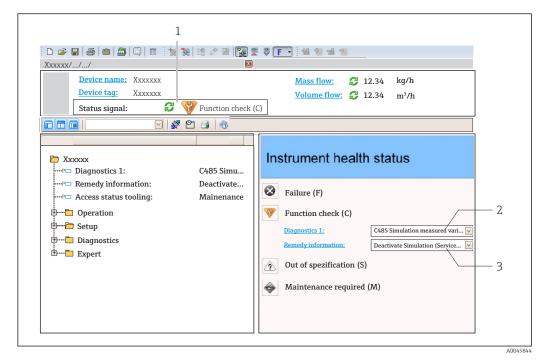

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with Service ID

Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostic list** submenu.

11.3.1 Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
A0017271	Failure A device error has occurred. The measured value is no longer valid.
A0017278	Function check The device is in service mode (e.g. during a simulation or a warning).
A0017277	Out of specification The device is operated outside its technical specification limits (e.g. outside the process temperature range)
A0017276	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

11.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
 Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ► A tool tip with remedy information for the diagnostic event appears.

11.4 Overview of the diagnostic messages

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of s	sensor			
102	Sensor incompatible error	Restart device Contact service	F	Alarm
150	Detector error	Restart device Check electrical connections of detector Replace detector unit	F	Alarm
151	Sensor electronic failure	Replace sensor electronic module	F	Alarm
Diagnostic of e	electronic			
242	Software incompatible	Check software Flash or change main electronic module	F	Alarm
252	Modules incompatible	Check if correct electronic modul is plugged Replace electronic module	F	Alarm
261	Electronic modules	Restart device Check electronic modules Change I/O module or main electronics	F	Alarm
262	Module connection	Check module connections Change electronic modules	F	Alarm
270	Main electronics failure	Replace main electronics	F	Alarm
271	Main electronics failure	Restart device Change main electronic module	F	Alarm
272	Main electronics failure	Restart device	F	Alarm
272	Main electronics failure	Restart device Contact service	F	Alarm
273	Main electronics failure	Emergency operation via display Change main electronics	F	Alarm
275	I/O module failure	Restart device Change I/O module	F	Alarm
276	I/O module faulty	Restart device Change I/O module	F	Alarm
282	Data storage	Restart device Contact service	F	Alarm
283	Memory content	Transfer data or reset device Contact service	F	Alarm
284	Detector SW update in progress	Firmware update active, please wait!	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	М	Warning
333	System recovery required	HW change detected System configuration recovery required Go to menu on device and perform recovery	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
334	System recovery failure	HW changed, system recovery failure. Return to factory	F	Alarm
381	Displacer distance invalid	 Calibrate sensor Restart device Replace sensor electronics 	F	Alarm
382	Sensor communication	Check connection of sensor electronics Restart device Replace sensor electronics	F	Alarm
Diagnostic of	configuration		J.	'
400	AIO simulation output	Deactivate simulation AIO output	С	Warning
401	DIO simulation output	Deactivate simulation DIO output	С	Warning
403	Calibration AIO	Restart device Change I/O module	F	Alarm
404	Calibration AIP	Restart device Change I/O module	F	Alarm
405	COMM timeout DIO 1 to 8	Check wiring Change I/O module	F	Alarm
406	IOM offline	Check wiring Change I/O module	F	Alarm
407	COMM timeout AIO 1 to 2	Check wiring Change I/O module	F	Alarm
408	Invalid range AIO 1 to 2	Check device configuration. Check wiring.	С	Warning
409	RTD temp out of range 1 to 2	Check electronic modules Change I/O or main electronic module	С	Warning
410	Data transfer	Check connection Retry data transfer	F	Alarm
411	Hart device 1 to 15 has malfunction	Check HART device Change HART device	F	Alarm 1)
412	Processing download	Download active, please wait	С	Warning
413	NMT 1 to 15: element is open or short	Check NMT wiring connection Replace NMT	С	Warning
415	Hart device 1 to 15 offline	Check HART device Change HART device	С	Warning
416	Warning occurred for HART device 1 to 15	Check connected HART device	M	Warning
434	Real time clock defective	Replace main electronics	С	Warning
436	Date/time incorrect	Check date and time settings.	М	Warning
437	Configuration incompatible	Restart device Contact service	F	Alarm
438	Dataset	Check data set file Check device configuration Up- and download new configuration	M	Warning
441	AIO 1 to 2 current output alarm	Check process Check current output settings	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
442	AIO 1 to 2 current output warning	Check process Check current output settings	С	Warning
443	AIO 1 to 2 Input not HART compatible	Change PV source or AIO input source.	С	Warning
484	Failure mode simulation	Deactivate simulation	С	Alarm
495	Diagnostic event simulation	Deactivate simulation	С	Warning
500	AIO C1-3 source no longer valid	Change input source	С	Warning
501	Level source no longer valid	Change input source	С	Warning
502	GP1 source no longer valid	Change input source	С	Warning
503	GP2 source no longer valid	Change input source	С	Warning
504	GP3 source no longer valid	Change input source	С	Warning
505	GP4 source no longer valid	Change input source	С	Warning
506	Water level source no longer valid	Change input source	С	Warning
507	Liquid temp source no longer valid	Change input source	С	Warning
508	Vapor temperatur source no longer valid	Change input source	С	Warning
509	Air temperature source no longer valid	Change input source	С	Warning
510	P1 source no longer valid	Change input source	С	Warning
511	P2 source no longer valid	Change input source	С	Warning
512	P3 source no longer valid	Change input source	С	Warning
513	Upper density source no longer valid	Change input source	С	Warning
514	Middle density source no longer valid	Change input source	С	Warning
515	Lower density source no longer valid	Change input source	С	Warning
516	Gauge command source no longer valid	Change input source	С	Warning
517	Gauge status source no longer valid	Change input source	С	Warning
518	Average density source no longer valid	Change input source	С	Warning
519	Upper interface source no longer valid	Change input source	С	Warning
520	Lower interface source no longer valid	Change input source	С	Warning
521	Bottom level source no longer valid	Change input source	С	Warning
522	Displacer position source not valid	Change input source	С	Warning
523	Distance source no longer valid	Change input source	С	Warning
524	Balance flag source no longer valid	Change input source	С	Warning

S25 One time crit source no longer valid	Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
longer valid 527 AIO B.1–3 source no longer valid 528 CTSh 1. Check device configuration. 2. Check wirting. 529 HTG 1. Check device configuration. 2. Check wirting. 530 HTMS 1. Check device configuration. 2. Check wirting. 531 HyTD correction value 1. Check device configuration. 2. Check wirting. 532 HART output: PV source not valid 2. Check wirting. 533 HART output: PV source not valid 4. Check device configuration. 2. Check wirting. 534 HART output: PV source not valid 4. Chenge input source C. Warning valid 4. Warning valid 4. Warning valid 4. Warning valid 4. Warning valid 5. Warning 5. Warnin	525		Change input source	С	Warning
valid 528 CTSh 1. Check device configuration. 2. Check wiring. 529 HTG 1. Check device configuration. 2. Check wiring. 530 HTMS 1. Check device configuration. 2. Check wiring. 531 HyTD correction value 1. Check device configuration. 2. Check wiring. 532 HART output: PV source not valid 533 HART output: SV source not valid 534 HART output: SV source not valid 535 HART output: QV source not valid 536 HART output: TV source not valid 537 HART output: TV source not valid 538 HART output: TV source not valid 539 LART output: TV source not valid 530 Display: source no longer valid 531 Change input source C Warning 532 Warning 533 Change input source C Warning 534 Change input source C Warning 535 Change input source C Warning 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid 540 V1 1-4 SP source invalid 541 Modbus 1-4 alarm source invalid 542 V1 1-4 alarm source invalid 543 Modbus 1-4 analog source invalid 544 V1 1-4 analog source invalid 545 Modbus 1-4 user value source invalid 546 Modbus 1-4 discrete value source invalid 547 V1 1-4 user value source invalid 548 V1 1-4 discrete value source invalid 549 Modbus 1-4 percent source invalid Set valid percentage input C Warning 550 V1 1-4 percent source invalid 551 Set valid percentage input C Warning C Warning	526		Change input source	С	Warning
2. Check wiring. 1. Check device configuration. 2. Check wiring. 530 HTMS 1. Check device configuration. 2. Check wiring. 531 HyTD correction value 1. Check device configuration. 2. Check wiring. 532 HART output: PV source not valid 533 HART output: SV source not valid 534 HART output: SV source not valid 535 HART output: TV source not valid 536 Display: source not valid 537 Trend: source no longer valid 538 HART output: PV mA source 539 Change input source C Warning 530 Change input source C Warning 531 Check wiring. C Warning 532 Warning 533 Check wiring. C Warning 534 Warning 535 Warning 536 Display: source not longer valid 537 Crend: source no longer valid 538 Change input source C Warning 539 Modbus 1-4 SP source invalid 540 V1 1-4 SP source invalid 541 Modbus 1-4 alarm source invalid 542 V1 1-4 alarm source Set valid alarm input selector 543 Modbus 1-4 analog source invalid 544 V1 1-4 analog source invalid 545 Modbus 1-4 user value source invalid 546 Modbus 1-4 user value source invalid 547 V1 1-4 user value source invalid Set valid user value input selector 548 V1 1-4 discrete value selector Set valid user value input selector 549 Modbus 1-4 percent source invalid Set valid percentage input C Warning C Warning C Warning C Warning C Warning C Warning	527	_	Change input source	С	Warning
2. Check wiring. 2. Check device configuration. 2. Check wiring. 3. Check wiring. 4. Change input source 4. Change input source 5. Change input source 6. Change i	528	CTSh		С	Warning
2. Check wiring. 531 HyTD correction value 1. Check device configuration. 2. Check wiring. C Warning 532 HART output: PV source not valid 533 HART output: SV source not valid 534 HART output: QV source not valid 535 HART output: TV source not valid 536 HART output: TV source not valid 537 HART output: TV source not valid 538 HART output: TV source not valid 539 Lisplay: source no longer valid 530 Display: source no longer valid 531 Trend: source no longer valid 532 HART output: PV mA source C Warning 533 HART output: TV source not valid 534 Change input source C Warning 535 Warning 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid 540 V1 1-4 SP source invalid 541 Modbus 1-4 slarm source invalid 542 V1 1-4 alarm source invalid 543 Modbus 1-4 analog source invalid 544 V1 1-4 analog source invalid 545 Modbus 1-4 analog source invalid 546 Modbus 1-4 user value source invalid 547 V1 1-4 user value source invalid 548 V1 1-4 user value source invalid 549 Modbus 1-4 percent source Set valid user discrete input selector 540 V1 1-4 user value source invalid 541 Modbus 1-4 percent source Set valid user discrete input selector 548 V1 1-4 user value source invalid 549 Modbus 1-4 percent source invalid 540 V1 1-4 user value source invalid 541 Warning Set valid user discrete input selector Set valid user discrete input selector Set valid user discrete input selector Warning C Warning Set valid user discrete input selector Warning 549 Modbus 1-4 percent source invalid Set valid percentage input C Warning Set valid percentage input Set valid percentage input Set valid percentage input Set valid percentage input C Warning	529	HTG		С	Warning
2. Check wiring. 532 HART output: PV source not valid 533 HART output: SV source not valid 534 HART output: QV source not valid 535 HART output: TV source not valid 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source 539 Modbus 1-4 SP source invalid 530 V1 1-4 alarm source 540 V1 1-4 analog source invalid 541 Modbus 1-4 analog source invalid 542 V1 1-4 analog source invalid 543 Modbus 1-4 user value source invalid 544 W1 1-4 user value 545 Modbus 1-4 discrete value source invalid 546 Modbus 1-4 discrete value source invalid 547 V1 1-4 user value source 548 V1 1-4 discrete value source invalid set valid user value input selector 549 Modbus 1-4 percent source 540 Warning 541 Modbus 1-6 user value source invalid 542 V1 1-4 analog source invalid 543 Modbus 1-6 user value selector 544 Warning 545 Modbus 1-6 user value selector 546 Modbus 1-7 user value source invalid set valid user value input selector 547 V1 1-4 user value source invalid set valid user value input selector 548 V1 1-6 user value source invalid selector 549 Modbus 1-7 user value source invalid selector 549 Modbus 1-9 user value source invalid selector 540 Warning 541 Modbus 1-6 user value source invalid selector 540 Warning 541 Modbus 1-7 user value source invalid selector 542 Warning 543 Modbus 1-8 user value source invalid selector 544 W1 1-6 user value source invalid selector 545 Warning 546 Warning 547 W1 1-6 user value source Set valid user discrete input selector 548 Warning 549 Modbus 1-9 user value source invalid selector 549 Modbus 1-9 user value source invalid selector 549 Modbus 1-9 user value source invalid selector 550 W1 1-6 user value source invalid Set valid percentage input 550 Warning	530	HTMS	1	С	Warning
valid 533 HART output: SV source not valid 534 HART output: QV source not valid 535 HART output: TV source not valid 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid 540 V1 1-4 salarm source 540 V1 1-4 analog source invalid 541 Modbus 1-4 analog source invalid 542 V1 1-4 analog source invalid 544 V1 1-4 analog source invalid 545 Modbus 1-4 user value source source invalid 546 Modbus 1-4 discrete value source invalid 547 V1 1-4 discrete value source invalid selector 548 V1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source invalid selector 549 Modbus 1-4 percent source invalid selector 549 Modbus 1-4 percent source invalid selector 540 V1 1-4 discrete value source invalid selector 541 Modbus 1-5 discrete value source invalid selector 542 V1 1-4 analog source invalid selector 544 V1 1-4 analog source invalid selector 545 Modbus 1-6 discrete value source invalid selector 546 Modbus 1-7 discrete value source invalid selector 547 V1 1-4 discrete value source invalid selector 548 V1 1-4 discrete value source invalid selector 549 Modbus 1-6 percent source invalid selector 549 Modbus 1-7 percent source invalid selector 540 V1 1-6 percent source invalid selector 541 Modbus 1-6 percent source invalid selector 542 V1 1-6 percent source invalid selector 543 Modbus 1-7 percent source invalid selector 544 V1 1-6 percent source invalid selector 545 Modbus 1-7 percent source invalid selector 546 Modbus 1-8 percent source invalid percentage input C Warning selector	531	HyTD correction value		С	Warning
valid 534 HART output: QV source not valid 535 HART output: TV source not valid 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid 540 V1 1-4 SP source invalid 541 Modbus 1-4 alarm source invalid 542 V1 1-4 analog source invalid 543 Modbus 1-4 analog source invalid 544 V1 1-4 analog source invalid 545 Modbus 1-4 user value source invalid 546 Modbus 1-4 discrete value source invalid selector 547 V1 1-4 discrete value source invalid selector 548 W1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source invalid selector 540 Set valid user value input selector 541 C Warning 542 Warning 543 Modbus 1-5 discrete value selector 544 V1 1-4 analog source invalid 545 Modbus 1-4 user value selector 546 Modbus 1-4 discrete value selector 547 V1 1-4 user value source invalid selector 548 W1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source invalid selector 540 Warning 541 Modbus 1-4 discrete value selector 542 Warning 543 Modbus 1-4 user value source invalid selector 544 Warning 545 Warning 546 Modbus 1-4 discrete value selector 547 W1 1-4 user value source invalid selector 548 W1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source invalid Set valid user discrete input selector 540 Warning 541 Marting 542 Warning 543 Modbus 1-4 discrete value source invalid selector 544 Warning 545 Warning 546 Warning 547 W1 1-4 user value source invalid selector 548 Warning 549 Modbus 1-4 percent source invalid Set valid percentage input 540 Warning 541 Warning 542 Warning 543 Warning 544 Warning 545 Warning 546 Warning	532	_	Change input source	С	Warning
valid 535 HART output: TV source not valid 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source	533	_	Change input source	С	Warning
valid 536 Display: source no longer valid 537 Trend: source no longer valid 538 HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid 540 V1 1-4 SP source invalid 541 Modbus 1-4 alarm source invalid 542 V1 1-4 alarm source invalid 543 Modbus 1-4 analog source invalid 544 V1 1-4 analog source invalid 545 Modbus 1-4 user value source invalid Set valid user value input selector 546 Modbus 1-4 discrete value source invalid user value input selector 547 V1 1-4 user value source invalid user value input selector 548 V1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source invalid set valid user discrete input selector 549 Modbus 1-4 percent source invalid selector 540 Warning 541 Set valid user value input selector 542 V1 1-4 user value source invalid selector 543 Set valid user value input selector 544 V1 1-4 user value source invalid user value input selector 545 Set valid user discrete input selector 546 Modbus 1-4 discrete value 547 V1 1-4 user value source 548 V1 1-4 discrete value source 549 Modbus 1-4 percent source invalid Set valid percentage input selector 549 Modbus 1-4 percent source invalid Set valid percentage input current source invalid selector 540 Warning 541 Warning 542 Warning 543 Warning 544 Warning 545 Warning 546 Warning 547 Warning 548 Warning 548 Warning 549 Modbus 1-4 percent source invalid Set valid percentage input current selector 549 Warning 540 Warning 540 Warning 540 Warning 541 Warning 542 Warning 543 Warning 544 Warning 545 Warning 546 Warning 547 Warning 548 Warning 549 Warning 549 Warning 540 Warning 540 Warning 540 Warning	534	_	Change input source	С	Warning
valid 537 Trend: source no longer valid Change input source C Warning 538 HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid Set valid SP input selector C Warning 540 V1 1-4 SP source invalid Set valid SP input selector C Warning 541 Modbus 1-4 alarm source invalid Set valid alarm input selector C Warning 542 V1 1-4 alarm source invalid Set valid alarm input selector C Warning 543 Modbus 1-4 analog source Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input selector 546 Modbus 1-4 discrete value source invalid Set valid user discrete input selector 547 V1 1-4 user value source Set valid user value input selector 548 V1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source Set valid user discrete input selector Set valid user discrete input Selector Set valid user discrete input C Warning Selector Set valid user value input C Warning Selector Set valid user value input C Warning Selector Set valid user value input Selector Set valid user value input C Warning Selector Set valid user discrete input C Warning Selector Set valid user discrete input Selector Varning Selector Set valid percentage input C Warning Selector Set valid percentage input Selector	535	1	Change input source	С	Warning
HART output: PV mA source not valid 539 Modbus 1-4 SP source invalid Set valid SP input selector C Warning 540 V1 1-4 SP source invalid Set valid SP input selector C Warning 541 Modbus 1-4 alarm source Set valid alarm input selector C Warning 542 V1 1-4 alarm source invalid Set valid alarm input selector C Warning 543 Modbus 1-4 analog source Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input Selector C Warning 546 Modbus 1-4 discrete value Set valid user discrete input Selector C Warning 547 V1 1-4 user value Set valid user value input Selector C Warning 548 V1 1-4 discrete value Set valid user value input Selector C Warning 549 Modbus 1-4 percent source Set valid user discrete input Selector C Warning Select	536		Change input source	С	Warning
not valid 539 Modbus 1-4 SP source invalid Set valid SP input selector C Warning 540 V1 1-4 SP source invalid Set valid SP input selector C Warning 541 Modbus 1-4 alarm source Set valid alarm input selector C Warning 542 V1 1-4 alarm source invalid Set valid alarm input selector C Warning 543 Modbus 1-4 analog source Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input Selector C Warning 546 Modbus 1-4 discrete value Set valid user discrete input Selector 547 V1 1-4 user value source Set valid user value input Selector 548 V1 1-4 discrete value source Set valid user value input Selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 540 Warning 550 V1 1-4 percent source invalid Set valid percentage input C Warning	537	Trend: source no longer valid	Change input source	С	Warning
540 V1 1-4 SP source invalid Set valid SP input selector C Warning 541 Modbus 1-4 alarm source invalid Set valid alarm input selector C Warning 542 V1 1-4 alarm source invalid Set valid alarm input selector C Warning 543 Modbus 1-4 analog source Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input source invalid Set valid user value input source invalid Set valid user discrete input Selector 546 Modbus 1-4 discrete value Set valid user discrete input Selector 547 V1 1-4 user value source Set valid user value input Selector 548 V1 1-4 discrete value source Set valid user discrete input Selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 549 Modbus 1-4 percent source Set valid percentage input Selector 550 V1 1-4 percent source invalid Set valid percentage input C Warning	538		Change input source	С	Warning
Modbus 1-4 alarm source invalid Set valid alarm input selector C Warning 542 V1 1-4 alarm source invalid Set valid alarm input selector C Warning 543 Modbus 1-4 analog source Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input source invalid Set valid user value input source invalid Set valid user discrete input C Warning 546 Modbus 1-4 discrete value Set valid user value input selector 547 V1 1-4 user value source Set valid user value input selector 548 V1 1-4 discrete value source Set valid user value input Selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 540 Warning Set valid user discrete input C Warning Selector 541 V1 1-4 discrete value source Set valid user discrete input Selector 542 Warning Selector 543 Modbus 1-4 percent source Set valid percentage input C Warning Selector 544 Warning Selector 545 Warning Set valid percentage input C Warning Selector	539	Modbus 1-4 SP source invalid	Set valid SP input selector	С	Warning
invalid 542 V1 1-4 alarm source invalid Set valid alarm input selector C Warning 543 Modbus 1-4 analog source invalid Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input selector 546 Modbus 1-4 discrete value Set valid user discrete input source invalid Set valid user value input selector 547 V1 1-4 user value source Set valid user value input selector 548 V1 1-4 discrete value source Set valid user value input selector 549 Modbus 1-4 percent source Set valid user discrete input C Warning 549 Modbus 1-4 percent source Set valid user discrete input selector 540 Warning 541 V1 1-4 discrete value source Set valid user discrete input Selector 542 V1 1-4 discrete value source Set valid user discrete input Selector 543 Warning 544 V1 1-4 discrete value source Set valid user discrete input Selector 545 Warning 546 Warning 547 V1 1-4 percent source Set valid percentage input Selector 548 V1 1-4 percent source invalid Set valid percentage input C Warning	540	V1 1-4 SP source invalid	Set valid SP input selector	С	Warning
Modbus 1-4 analog source invalid Set valid analog input selector C Warning 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input selector 546 Modbus 1-4 discrete value Set valid user discrete input source invalid Selector 547 V1 1-4 user value source Set valid user value input selector 548 V1 1-4 discrete value source invalid Set valid user discrete input Selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 550 V1 1-4 percent source invalid Set valid percentage input C Warning 550 V1 1-4 percent source invalid Set valid percentage input C Warning	541		Set valid alarm input selector	С	Warning
invalid 544 V1 1-4 analog source invalid Set valid analog input selector C Warning 545 Modbus 1-4 user value Set valid user value input selector 546 Modbus 1-4 discrete value Set valid user discrete input source invalid 547 V1 1-4 user value source Set valid user value input selector 548 V1 1-4 discrete value source invalid Set valid user discrete input selector 549 Modbus 1-4 percent source Set valid user discrete input Selector 549 Modbus 1-4 percent source Set valid user discrete input selector 550 V1 1-4 percent source invalid Set valid percentage input C Warning 550 V1 1-4 percent source invalid Set valid percentage input C Warning	542	V1 1-4 alarm source invalid	Set valid alarm input selector	С	Warning
545 Modbus 1-4 user value selector 546 Modbus 1-4 discrete value selector 547 V1 1-4 user value source invalid 548 V1 1-4 discrete value source invalid 549 Modbus 1-4 percent source selector 540 V1 1-4 percent source invalid 541 Set valid user discrete input selector Set valid user value input selector Set valid user value input selector Set valid user discrete input selector Set valid user discrete input selector C Warning C Warning C Warning C Warning C Warning	543		Set valid analog input selector	С	Warning
source invalid selector 546 Modbus 1-4 discrete value selector 547 V1 1-4 user value source invalid selector 548 V1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source selector 549 Warning C Warning 550 V1 1-4 percent source invalid Set valid percentage input selector 550 V1 1-4 percent source invalid Set valid percentage input C Warning	544	V1 1-4 analog source invalid	Set valid analog input selector	С	Warning
source invalid selector 547 V1 1-4 user value source invalid Set valid user value input selector 548 V1 1-4 discrete value source invalid Set valid user discrete input selector 549 Modbus 1-4 percent source invalid Set valid percentage input selector 550 V1 1-4 percent source invalid Set valid percentage input C Warning	545		_ =	С	Warning
invalid selector 548 V1 1-4 discrete value source invalid selector 549 Modbus 1-4 percent source invalid selector 550 V1 1-4 percent source invalid Set valid percentage input selector C Warning C Warning	546		_	С	Warning
invalid selector 549 Modbus 1-4 percent source invalid Set valid percentage input selector 550 V1 1-4 percent source invalid Set valid percentage input C Warning	547		_	С	Warning
invalid selector Source invalid Set valid percentage input C Warning	548		_	С	Warning
	549			С	Warning
	550	V1 1-4 percent source invalid	1 2 1	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
560	Calibration mandatory	 Carry out weight calibration Carry out reference calibration Carry out drum calibration 	С	Alarm
564	DIO B1-2 source no longer valid	Change input source	С	Warning
565	DIO B3-4 source not valid	Change input source	С	Warning
566	DIO C1-2 source no longer valid	Change input source	С	Warning
567	DIO C3-4 source no longer valid	Change input source	С	Warning
568	DIO D1-2 source no longer valid	Change input source	С	Warning
569	DIO D3-4 source no longer valid	Change input source	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
586	Record map	Recording of mapping please wait	С	Warning
598	DIO A1-2 source no longer valid	Change input source	С	Warning
599	DIO A3-4 source no longer valid	Change input source	С	Warning
Diagnostic of p	process			
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check device configuration.	F	Alarm
803	Current loop 1 to 2	2. Check wiring.	М	Warning
803	Current loop		С	Warning
825	System temperature	Check ambient temperature	S	Warning
825	System temperature	2. Check process temperature	F	Alarm
826	Sensor temperature	Check ambient temperature	S	Warning
826	Sensor temperature	2. Check process temperature	F	Alarm
844	Process value out of specification	Check process value Check application	S	Warning 1)
844	Process value out of specification	3. Check sensor	S	Warning
903	Current loop 1 to 2	Check device configuration. Check wiring.	F	Alarm
904	Digital output 1 to 8	Check device configuration. Check wiring.	F	Alarm
941	Echo lost	Check process value Check application Check sensor	S	Warning
942	In safety distance	Check level Check safety distance Reset self holding	S	Warning
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostics	Maintain your diagnostic event	M	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
961	Alarm 1 to 4 HighHigh	Check alarm source Check configuration settings	С	Warning
962	Alarm 1 to 4 High	Check alarm source Check configuration settings	С	Warning
963	Alarm 1 to 4 Low	Check alarm source Check configuration settings	С	Warning
964	Alarm 1 to 4 LowLow	Check alarm source Check configuration settings	С	Warning
965	Alarm 1 to 4 HighHigh	Check alarm source Check configuration settings	F	Alarm
966	Alarm 1 to 4 High	Check alarm source Check configuration settings	F	Alarm
967	Alarm 1 to 4 Low	Check alarm source Check configuration settings	F	Alarm
968	Alarm 1 to 4 LowLow	Check alarm source Check configuration settings	F	Alarm
970	Overtension	Check displacer and process conditions Release overtension	С	Alarm
971	Undertension	Check displacer and process.	С	Alarm

¹⁾ Diagnostic behavior can be changed.

The parameters No.941, 942, and 943 are only used for NMR8x and NRF81.

11.5 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

Calling up and closing the remedial measures

- 1. Press E.
 - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press \Box + \pm simultaneously.
 - → The message about the remedial measures closes.

11.6 Reset measuring device

To reset the device to a defined state use the **Device reset** parameter ($\rightarrow \triangleq 236$).

11.7 Device information

Information on the device (order code, hardware and software version of the individual modules etc.) can be found in the **Device information** submenu ($\rightarrow \stackrel{\triangle}{=} 242$).

11.8 Firmware history

Date	Software	Modifications	Documentation (NRF81)		
	version		Operating Instructions	Description of Parameters	Technical Information
04.2016	01.00.zz	Original software	BA01465G/00/EN/01.16	GP01083G/00/EN/01.16	TI01251G/00/EN/01.16
12.2016	01.02.zz	Bugfixes and improvements	BA01465G/00/EN/02.17	GP01083G/00/EN/02.17	TI01251G/00/EN/02.17
07.2018	01.03.zz	Software update	BA01465G/00/EN/04.18		TI01251G/00/EN/03.18
05.2020	01.04.zz	Software update	BA01465G/00/EN/05.20		TI01251G/00/EN/04.20
08.2021	01.05.zz	Software update	BA01465G/00/EN/06.21		

Maintenance Tankside Monitor NRF81

12 Maintenance

12.1 Maintenance tasks


No special maintenance work is required.

12.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

12.2 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

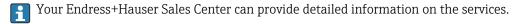

Tankside Monitor NRF81 Repair

13 Repair

13.1 General information on repairs

13.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

13.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

13.1.3 Replacement of a device or electronic module

After a complete device or the electronic mainboard has been replaced, the parameters can be downloaded into the instrument again via FieldCare.

Condition: The configuration of the old device has been saved to the computer via FieldCare.



The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the Save/Restore function of FieldCare, the device must be restarted by the following setting:

Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset = Restart device. This ensures correct operation of the device after the restore.

Repair Tankside Monitor NRF81

13.2 Spare parts


Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the W@M Device Viewer (www.endress.com/deviceviewer):
 All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

13.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

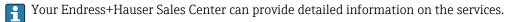

13.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- 1. Refer to the website for more information: http://www.endress.com/support/return-material
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

13.5 Disposal




If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

Tankside Monitor NRF81 Accessories

14 Accessories

14.1 Device-specific accessories

14.1.1 Weather protection cover

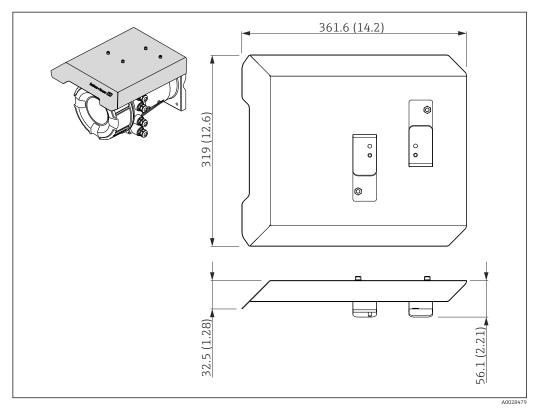

47 Weather protection cover; dimensions: mm (in)

Materials


- Protection cover and mounting brackets Material 316L (1.4404)
- Screws and washers Material A4
- The weather protection cover can be ordered together with the device: Ordering feature 620 "Accessory Enclosed", option PA "Weather Protection Cover")
 - It can also be ordered as an accessory:
 Order code: 71292751 (for NMR8x and NRF8x)

Tankside Monitor NRF81 Accessories

14.2 Communication-specific accessories

WirelessHART adapter SWA70

- Is used for the wireless connection of field devices
- The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks

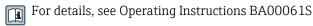

Gauge Emulator, Modbus to BPM

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Enraf BPM
- 1 measuring device per Gauge Emulator
- \blacksquare Separate power supply: 100 to 240 V_{AC} , 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

Gauge Emulator, Modbus to TRL/2

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Saab TRL/2
- 1 measuring device per Gauge Emulator
- \bullet Separate power supply: 100 to 240 V_{AC} , 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

14.3 Service-specific accessories

Commubox FXA195 HART

For intrinsically safe HART communication with FieldCare via the USB interface



For details, see "Technical Information" TI00404F

Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop Order number: 51516983



For details, see "Technical Information" TI00405C

DeviceCare SFE100

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices DeviceCare is available for download at www.software-products.endress.com. You need to register in the Endress+Hauser software portal to download the application.



Technical Information TI01134S

FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.



Technical Information TI00028S

Tankside Monitor NRF81 Accessories

14.4 **System components**

RIA15

Compact process display unit with very low voltage drop for universal use to display 4 to 20 mA/HART signals



Technical Information TI01043K

Tankvision Tank Scanner NXA820 / Tankvision Data Concentrator NXA821 / **Tankvision Host Link NXA822**

 $Inventory\ Management\ System\ with\ completely\ integrated\ software\ for\ operation\ via$ standard web browser



Technical Information TI00419G

Operating menu Tankside Monitor NRF81

15 Operating menu

 \blacksquare : Navigation path for operating module at the device

■ : Navigation path for operating tool (e.g. FieldCare)

• 🗈 : Parameter can be locked via software locking

15.1 Overview of the operating menu


■ This section lists the parameters of the following menus:

■ Operation (\rightarrow 🖺 110)

■ Setup (→ 🖺 119)

■ Diagnostics (→ 🖺 238)

- For the **Expert** menu refer to the "Description of Device Parameters" (GP) of the respective device.
- Depending on the device version and parametrization some parameters will not be available in a given situation. For details refer to the "Prerequisite" category in the description of the respective parameter.
- The representation essentially corresponds to the menu in an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

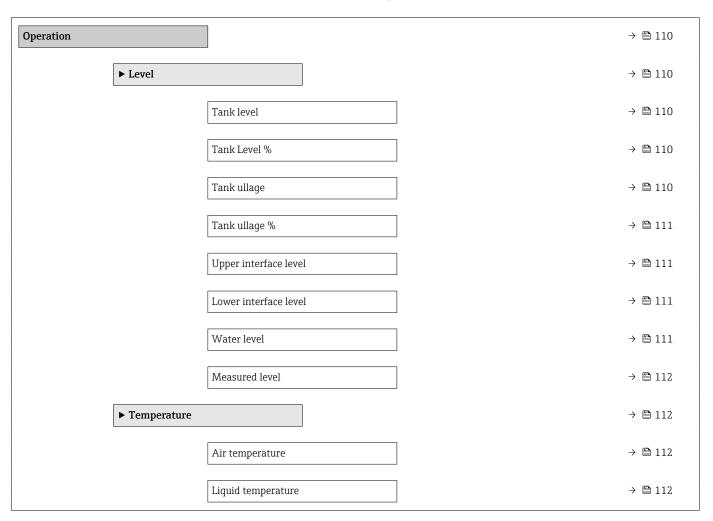

Tankside Monitor NRF81 Operating menu

Vapor temperature	e	→ 🖺 112
► NMT element v	values	→ 🗎 113
	▶ Element temperature	→ 🖺 113
	Element temperature 1 to 24	→ 🖺 113
	► Element position	→ 🖺 113
	Element position 1 to 24	→ 🗎 113
► Density		→ 🖺 114
Observed density		→ 🗎 114
Vapor density		→ 🖺 114
Air density		→ 🖺 114
Measured upper de	ensity	→ 🖺 115
Measured middle	density	→ 🖺 115
Measured lower de	ensity	→ 🖺 115
► Pressure		→ 🖺 116
P1 (bottom)		→ 🖺 116
P2 (middle)		→ 🗎 116
P3 (top)		→ 🖺 116
► GP values		→ 🖺 117
GP 1 to 4 name		→ 🖺 117
GP Value 1		→ 🗎 117
GP Value 2		→ 🖺 117
GP Value 3		→ 🖺 117
GP Value 4		→ 🖺 118
⊁ Setup		→ 🖺 119
Device tag		→ 🗎 119

Operating menu Tankside Monitor NRF81

Units preset	→ 🗎 119
Tank reference height	→ 🖺 120
Tank level	→ 🖺 110
Level source	→ 🖺 120
Liquid temp source	→ 🖺 121
► Advanced setup	→ 🖺 122
Locking status	→ 🖺 122
User role	→ 🖺 122
Enter access code	→ 🖺 122
▶ Input/output	→ 🖺 123
► HART	devices → 🖺 123
	Number of devices → 🖺 123
	► HART Device(s) → 🗎 124
	► Forget device → 🖺 129
► Analo	g IP → 🖺 130
	Operating mode → 🖺 130
	Thermocouple type → 🖺 131
	RTD type → 🖺 130
	RTD connection type → 🖺 131
	Process value → 🖺 132
	Process variable → 🖺 132
	0 % value → 🖺 132
	100 % value → 🖺 133
	Input value → 🖺 133
	Minimum probe temperature $\rightarrow \stackrel{ riangle}{\Rightarrow} 133$

Tankside Monitor NRF81 Operating menu

Maximu	m probe temperature	→ 🖺 134
Probe po	osition	→ 🖺 134
Damping	g factor	→ 🖺 135
Gauge co	urrent	→ 🖺 135
• Analog I/O		→ 🗎 136
Operatir	ng mode	→ 🗎 136
Current	span	→ 🗎 137
Fixed cu	rrent	→ 🖺 138
Analog i	input source	→ 🖺 138
Failure r	node	→ 🖺 139
Error va		→ 🗎 140
Input va		→ 🗎 140
0 % valu		→ 🖺 140
100 % v	alue	→ 🖺 141
Input va	lue %	→ 🖺 141
Output v	values	→ 🖺 141
Process	variable	→ 🖺 142
Analog i	input 0% value	→ 🖺 142
Analog i	input 100% value	→ 🖺 142
Error ev	ent type	→ 🖺 143
Process	value	→ 🖺 143
Input va	lue in mA	→ 🖺 143
		→ 🗎 144
Damping		→ 🗎 144
Danipini	9 140-101	, <u> </u>

Operating menu Tankside Monitor NRF81

		Used for SIL/WHG	→ 🖺 144
		Expected SIL/WHG chain	→ 🖺 145
	▶ Digital Xx-x		→ 🖺 146
		Operating mode	→ 🖺 146
		Digital input source	→ 🖺 147
		Input value	→ 🖺 148
		Contact type	→ 🖺 148
		Output simulation	→ 🖺 148
		Output values	→ 🖺 149
		Readback value	→ 🖺 149
		Used for SIL/WHG	→ 🖺 150
		Expected SIL/WHG chain	→ 🖺 150
		Expected SiL/ Who chain	l
► Communication			→ 🖺 151
	► Communication	interface 1 to 2	
		Communication interface protocol	
		► Configuration	→ 🖺 152
		► Configuration	→ 🖺 155
		► Configuration	→ 🖺 159
		▶ V1 input selector	→ 🖺 158
		► WM550 input selector	→ 🖺 160
	► HART output	·	→ 🖺 162
	· IIIIII output	► Configuration	→ 🖺 162
		► Configuration	
		► Information	→ 🖺 170

Tankside Monitor NRF81 Operating menu

► Application			→ 🖺 172
	► Tank configurat	cion	→ 🖺 172
		► Level	→ 🖺 172
		► Temperature	→ 🖺 175
		▶ Density	→ 🖺 179
		▶ Pressure	→ 🖺 181
	► Tank calculation	n	→ 🖺 188
		► HyTD	→ 🖺 190
		► CTSh	→ 🖺 195
		▶ HTG	→ 🖺 205
		► HTMS	→ 🖺 210
	► Alarm		→ 🖺 213
		► Alarm 1 to 4	→ 🖺 213
► Display			→ 🖺 222
	Language		→ 🖺 222
	Format display		→ 🖺 222
	Value 1 to 4 display	<i>I</i>	→ 🖺 223
	Decimal places 1 to	4	→ 🖺 224
	Separator		→ 🖺 225
	Number format		→ 🖺 225
	Header		→ 🖺 226
	Header text		→ 🖺 226
	Display interval		→ 🖺 226
	Display damping		→ 🖺 227
			

Operating menu Tankside Monitor NRF81

		Backlight	→ 🖺 227
		Contrast display	→ 🖺 227
	► System units		→ 🖺 229
		Units preset	→ 🖺 119
		Distance unit	→ 🖺 229
		Pressure unit	→ 🖺 230
		Temperature unit	→ 🖺 230
		Density unit	→ 🖺 230
	► Date / time		→ 🖺 232
		Date/time	→ 🖺 232
		Set date	→ 🖺 232
		Year	→ 🖺 232
		Month	→ 🖺 233
		Day	→ 🖺 233
		Hour	→ 🖺 233
		Minute	→ 🖺 234
	► SIL confirmatio	n	→ 🗎 235
	► Deactivate SIL/	WHG	→ 🖺 235
	► Administration		→ 🖺 236
		Define access code	→ 🖺 236
		Device reset	→ 🖺 236
억 Diagnostics			→ 🖺 238
Actual diagnostics			→ 🖺 238
Timestamp			→ 🖺 238
Previous diagnostic	s		→ 🖺 238
L			

Timestamp		→ 🖺 239
Operating time from	m restart	→ 🖺 239
Operating time		→ 🖺 239
Date/time		→ 🖺 232
▶ Diagnostic list		→ 🖺 241
	Diagnostics 1 to 5	→ 🖺 241
	Timestamp 1 to 5	→ 🖺 241
► Device information	tion	→ 🖺 242
	Device tag	→ 🖺 242
	Serial number	→ 🖺 242
	Firmware version	→ 🖺 242
	Firmware CRC	→ 🖺 243
	Weight and measures configuration CRC	→ 🖺 243
	Device name	→ 🖺 243
	Order code	→ 🖺 243
	Extended order code 1 to 3	→ 🖺 244
▶ Simulation		→ 🖺 245
	Device alarm simulation	→ 🖺 245
	Diagnostic event simulation	→ 🖺 245
	Current output 1 simulation	→ 🖺 245
	Simulation value	→ 🖺 246

15.2 "Operation" menu

The **Operation** menu $(\rightarrow \implies 110)$ shows the most important measured values.

15.2.1 "Level" submenu

Navigation $\blacksquare \Box$ Operation \rightarrow Level

Tank level

Description Shows the distance from the zero position (tank bottom or datum plate) to the product

surface.

Additional information

Read access	Operator
Write access	-

Tank Level %

Description Shows the level as a percentage of the full measuring range.

Additional information

Read access	Operator
Write access	-

Tank ullage

Navigation $\blacksquare \Box$ Operation \rightarrow Level \rightarrow Tank ullage

Description Shows the remaining empty space in the tank.

Additional information

Read access	Operator
Write access	-

Tank ullage %

Navigation $\blacksquare \Box$ Operation \rightarrow Level \rightarrow Tank ullage %

Description Shows the remaining empty space in percentage related to parameter tank reference

height.

Additional information

Read access	Operator
Write access	-

Upper interface level

Navigation $\blacksquare \Box$ Operation \rightarrow Level \rightarrow Upper I/F level

Description Shows measured interface level from zero position (tank bottom or datum plate). Value is

updated when device generates a valid Interface measurement.

Additional information

Read access	Maintenance
Write access	-

Lower interface level

Description Shows measured interface level from zero position (tank bottom or datum plate). Value is

updated when device generates a valid interface measurement.

Additional information

Read access	Maintenance
Write access	-

Water level

Navigation $\blacksquare \square$ Operation \rightarrow Level \rightarrow Water level

Description Shows the bottom water level.

Additional information

Read access	Operator
Write access	-

Measured level

Navigation \square Operation \rightarrow Level \rightarrow Measured level

Description Shows the measured level without any correction from the tank calculations.

Additional information

Read access	Operator
Write access	-

15.2.2 "Temperature" submenu

Navigation \Box Operation \rightarrow Temperature

Air temperature

Navigation \bigcirc Operation \rightarrow Temperature \rightarrow Air temp.

Description Shows the air temperature.

Additional information

Read access	Operator
Write access	-

Liquid temperature

Description Shows the average or spot temperature of the measured liquid.

Additional information

Read access	Operator
Write access	-

Vapor temperature

Navigation $\blacksquare \Box$ Operation \rightarrow Temperature \rightarrow Vapor temp.

Description Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

"NMT element values" submenu

This submenu is only visible if a Prothermo NMT is connected.

Navigation \square Operation \rightarrow Temperature \rightarrow NMT elem. values

"Element temperature" submenu

Element temperature 1 to 24

Navigation

Description

Shows the temperature of an element in the NMT.

Additional information

Read access	Operator
Write access	-

"Element position" submenu

Element position 1 to 24

Navigation

Description

Shows the position of the selected element in the NMT.

Additional information

Read access	Operator
Write access	-

15.2.3 "Density" submenu

Navigation $\blacksquare \Box$ Operation \rightarrow Density

Observed density

Description Calculated density of the product.

Additional information

Read access	Operator
Write access	-

This value is calculated from different measured variables depending on the selected calculation method.

Vapor density

Description Defines the density of the gas phase in the tank.

User entry $0.0 \text{ to } 500.0 \text{ kg/m}^3$

Factory setting 1.2 kg/m^3

Additional information

Read access	Operator
Write access	Maintenance

Air density

Description Defines the density of the air surrounding the tank.

User entry $0.0 \text{ to } 500.0 \text{ kg/m}^3$

Factory setting 1.2 kg/m^3

Additional information

Read access	Operator
Write access	Maintenance

Measured upper density

Navigation $\blacksquare \Box$ Operation \rightarrow Density \rightarrow Meas upper dens.

Description Shows the density of the upper phase.

Additional information

Read access	Operator
Write access	-

Measured middle density

Description Density of the middle phase.

Additional information

Read access	Operator
Write access	-

Measured lower density

Description Density of the lower phase.

Additional information

Read access	Maintenance
Write access	-

15.2.4 "Pressure" submenu

Navigation \blacksquare Operation \rightarrow Pressure

P1 (bottom)

Description Shows the pressure at the tank bottom.

Additional information

 Read access
 Operator

 Write access

P2 (middle)

Description Shows the pressure (P2) at the middle transmitter.

Additional information

Read access Operator
Write access -

P3 (top)

Description Shows the pressure (P3) at the top transmitter.

Additional information

Read access	Operator
Write access	-

15.2.5 "GP values" submenu

Navigation $\blacksquare \square$ Operation \rightarrow GP values

GP 1 to 4 name

Description Defines the label associated with the respective GP value.

User entry Character string comprising numbers, letters and special characters (#15)

Factory setting GP Value 1

Additional information Read access

Read access	Operator
Write access	Maintenance

GP Value 1

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 2

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 3

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 4

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

15.3 "Setup" menu

Device tag

Navigation \blacksquare Setup \rightarrow Device tag

Description Enter a unique name for the measuring point to identify the device quickly within the

plant.

User entry Character string comprising numbers, letters and special characters (#32)

Factory setting NRF8x

Additional information

Read access	Operator
Write access	Maintenance

Units preset

Navigation $\blacksquare \square$ Setup \rightarrow Units preset

Description Defines a set of units for length, pressure and temperature.

Selection ■ mm, bar, °C

■ m, bar, °C ■ mm, PSI, °C

• ft, PSI, °F

■ ft-in-16, PSI, °F ■ ft-in-8, PSI, °F

Customer value

Factory setting mm, bar, °C

Additional information

Read access	Operator
Write access	Maintenance

If the **Customer value** option is selected, the units are defined in the following parameters. In any other case these are read-only parameters used to indicate the respective unit:

- Distance unit (→ 🗎 229)
- Pressure unit (\rightarrow 🖺 230)
- Temperature unit (→ 🖺 230)

Tank reference height

Navigation

Description

Defines the distance from the dipping reference point to the zero position (tank bottom or

datum plate).

User entry

0 to 10000.00 mm

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Tank level

Navigation

Setup → Tank level

Description

Shows the distance from the zero position (tank bottom or datum plate) to the product

surface.

Additional information

Read access	Operator
Write access	-

Level source

Navigation

Description

Defines the source of the level value.

Selection

- No input value
- HART device 1 ... 15 level
- Level SR *
- Level ^{*}
- Displacer position *
- AIO B1-3 value *
- AIO C1-3 value *
- AIP B4-8 value *
- AIP C4-8 value

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

^{*} Visibility depends on order options or device settings

Liquid temp source

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Liq temp source

Description Defines source from which the liquid temperature is obtained.

Selection • Manual value

■ HART device 1 ... 15 temperature

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

15.3.1 "Advanced setup" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup

т .	1 .	
I.O	ckina	status

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Locking status

Description Indicates the type of locking.

'Hardware locked' (HW)

The device is locked by the 'WP' switch on the main electronics module. To unlock, set the

switch into the OFF position.

'WHG locked' (SW)

Unlock the device by entering the appropriate access code in 'Enter access code'.

'SIL locked' (SW)

Unlock the device by entering the appropriate access code in Enter access code'.

Temporarily locked (SW)

The device is temporarily locked by processes in the device (e.g. data upload/download, reset). The device will automatically be unlocked after completion of these processes.

Additional information

Read access	Operator
Write access	-

User role

Navigation

Description

Shows the access authorization to the parameters via the operating tool.

Additional information

Read access	Operator
Write access	-

Enter access code

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Ent. access code

Description Enter access code to disable write protection of parameters.

Additional information

Read access	Operator
Write access	Operator

"Input/output" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output

"HART devices" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices

Number of devices

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow Number devices

Description Shows the number of devices on the HART bus.

Additional information

Read access	Operator
Write access	-

"HART Device(s)" submenu

There is a **HART Device(s)** submenu for each HART slave device found on the HART loop.

Navigation

Setup → Advanced setup → Input/output → HART devices \rightarrow HART Device(s)

Device name

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Device name

Description Shows the name of the transmitter.

Additional information

 Read access
 Operator

 Write access

Polling address

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Polling address

Description Shows the polling address of the transmitter.

Additional information

Read access	Operator
Write access	-

Device tag

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Device tag

Description Shows the device tag of the transmitter.

Additional information

Read access	Operator
Write access	-

Operating mode

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Operating mode

Prerequisite Not available if the HART device is a Prothermo NMT.

Description Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled

from the connected HART Device.

Selection ■ PV only

PV,SV,TV & QV
 Level ⁵⁾

■ Measured level 5)

Factory setting PV,SV,TV & QV

Additional information

Read access	Operator
Write access	Maintenance

Communication status

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Comm. status

Description Shows the operating status of the transmitter.

User interface ■ Operating normally

■ Device offline

Additional information

Read access	Operator
Write access	-

#blank# (HART PV - designation dependent on device)

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

 \rightarrow #blank#

Description Shows the first HART variable (PV).

Additional information

Read access	Operator
Write access	-

⁵⁾ only visible if the connected device is a Micropilot

#blank# (HART SV - designation dependent on device)

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

 \rightarrow #blank#

Prerequisite For HART devices other than NMT: Operating mode (→ 🗎 125) = PV,SV,TV & QV

Description Shows the second HART variable (SV).

Additional information

Read access	Operator
Write access	-

#blank# (HART TV - designation dependent on device)

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ #blank#

Prerequisite For HART devices other than NMT: Operating mode (→ 🗎 125) = PV,SV,TV & QV

Description Shows the third HART variable (TV).

Additional information

Read access	Operator
Write access	-

#blank# (HART QV - designation dependent on device)

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ #blank#

Prerequisite For HART devices other than NMT: Operating mode (→ 🗎 125) = PV,SV,TV & QV

Description Shows the fourth HART variable (QV).

Additional information

Read access	Operator
Write access	-

Output pressure

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

 \rightarrow Output pressure

Prerequisite Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In

these cases the measured variables are allocated automatically.

Description Defines which HART variable is the pressure.

Selection ■ No value

Primary variable (PV)
 Secondary variable (SV)
 Tertiary variable (TV)
 Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

Output density

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Output density

Prerequisite Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In

these cases the measured variables are allocated automatically.

Description Defines which HART variable is the density.

Selection ■ No value

Primary variable (PV)
 Secondary variable (SV)
 Tertiary variable (TV)
 Quaternary variable (QV)

Factory setting No value

Additional information

Output temperature

Read access	Operator
Write access	Maintenance

→ Output temp.

Prerequisite Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In

these cases the measured variables are allocated automatically.

Description Defines which HART variable is the temperature.

Selection ■ No value

Primary variable (PV)Secondary variable (SV)Tertiary variable (TV)

Quaternary variable (QV)

Factory setting

No value

Additional information

Read access	Operator
Write access	Maintenance

Output vapor temperature

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Output vapor tmp

Prerequisite Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In

these cases the measured variables are allocated automatically.

Description Defines which HART variable is the vapor temperature.

Selection • No value

Primary variable (PV)
Secondary variable (SV)
Tertiary variable (TV)
Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

Output level

a

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)

→ Output level

Prerequisite Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In

these cases the measured variables are allocated automatically.

Description Defines which HART variable is the level.

Selection ■ No value

Primary variable (PV)
 Secondary variable (SV)
 Tertiary variable (TV)

Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

"Forget device" wizard

Read access Maintenance

This submenu is only visible if **Number of devices** ($\rightarrow \blacksquare 123$) ≥ 1 .

Navigation → Forget device

Forget device

Navigation

 $\mathsf{Setup} \to \mathsf{Advanced} \ \mathsf{setup} \to \mathsf{Input/output} \to \mathsf{HART} \ \mathsf{devices} \to \mathsf{Forget} \ \mathsf{device} \to \mathsf{Forget}$ device

Description

With this function an offline device can be deleted from the device list.

Selection

- HART Device 1
- HART Device 2
- HART Device 3
- HART Device 4
- HART Device 5
- HART Device 6
- HART Device 7
- HART Device 8
- HART Device 9
- HART Device 10
- HART Device 11
- HART Device 12
- HART Device 13
- HART Device 14 *
- HART Device 15 *
- None

None

Factory setting


Additional information

Read access	Operator
Write access	Maintenance

Visibility depends on order options or device settings

"Analog IP" submenu

There is a **Analog IP** submenu for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to $\rightarrow \blacksquare$ 136.

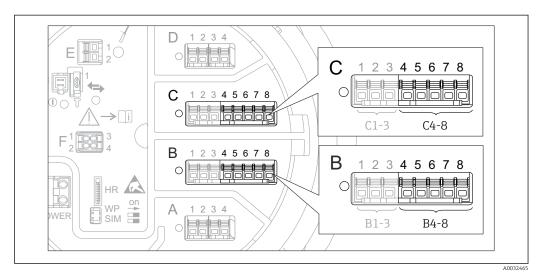

■ 48 Terminals for the "Analog IP" submenu ("B4-8" or "C4-8", respectively)

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP

 Operating mode
 Image: Comparison of the analog input of the analog input.

 Navigation
 Defines the operating mode of the analog input.

 Selection
 ■ Disabled

 ■ RTD temperature input
 ■ Gauge power supply

 Factory setting
 Disabled

Additional information Read access Operator
Write access Maintenance

RTD type

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow RTD type

Prerequisite Operating mode ($\rightarrow \triangleq 130$) = RTD temperature input

Description Defines the type of the connected RTD.

Selection

■ Cu50 (w=1.428, GOST)

■ Cu53 (w=1.426, GOST)

■ Cu90; 0°C (w=1.4274, GOST)

■ Cu100; 25°C (w=1.4274, GOST)

■ Cu100; 0°C(w=1.4274, GOST)

■ Pt46 (w=1.391, GOST)

■ Pt50 (w=1.391, GOST)

Pt100(385) (a=0.00385, IEC751)

■ Pt100(389) (a=0.00389, Canadian)

■ Pt100(391) (a=0.003916, JIS1604)

■ Pt100 (w=1.391, GOST)

■ Pt500(385) (a=0.00385, IEC751)

■ Pt1000(385) (a=0.00385, IEC751)

■ Ni100(617) (a=0.00617, DIN43760)

■ Ni120(672) (a=0.00672, DIN43760)

■ Ni1000(617) (a=0.00617, DIN43760)

Factory setting

Pt100(385) (a=0.00385, IEC751)

Additional information

Read access	Operator
Write access	Maintenance

Thermocouple type

A

Navigation

Description

Defines the type of the connected thermocouple.

Selection

- N type
- B type
- C type
- D type
- J type
- K type
- L type
- L GOST type
- R type
- S type
- T type
- U type

Factory setting

N type

RTD connection type

Navigation

 \blacksquare Setup → Advanced setup → Input/output → Analog IP → RTD connect type

Prerequisite

Operating mode ($\rightarrow \equiv 130$) = RTD temperature input

Description

Defines the connection type of the RTD.

Selection • 4 wire RTD connection

■ 2 wire RTD connection

■ 3 wire RTD connection

Factory setting

4 wire RTD connection

Additional information

Read access	Operator
Write access	Maintenance

Process value

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Process value

Prerequisite Operating mode (→ 🖺 130) ≠ Disabled

Description Shows the measured value received via the analog input.

Additional information

Read access	Operator
Write access	-

Process variable

Navigation $\blacksquare \$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Process variable

Prerequisite Operating mode (→ 🖺 130) ≠ RTD temperature input

Description Determines type of measured value.

Selection • Level linearized

TemperaturePressureDensity

Factory setting Level linearized

Additional information

Read access	Operator
Write access	Maintenance

0 % value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow 0 % value

Prerequisite Operating mode (→ 🖺 130) = 4..20mA input

132

Description Defines the value represented by a current of 4mA.

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

100 % value

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow 100 % value

Prerequisite Operating mode ($\rightarrow \triangleq 130$) = 4..20mA input

Description Defines the value represented by a current of 20mA.

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Input value

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Input value

Prerequisite Operating mode ($\rightarrow \equiv 130$) \neq Disabled

Description Shows the value received via the analog input.

Additional information

Read access	Operator
Write access	-

Minimum probe temperature

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Min. probe temp

Prerequisite Operating mode ($\rightarrow \triangleq 130$) = RTD temperature input

Description Minimum approved temperature of the connected probe.

If the temperature falls below this value, the W&M status will be 'invalid'.

User entry −213 to 927 °C

Factory setting -100 °C

Additional information

Read access	Operator
Write access	Maintenance

Maximum probe temperature

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Max. probe temp

Prerequisite Operating mode (→ 🖺 130) = RTD temperature input

Description Maximum approved temperature of the connected probe.

If the temperature rises above this value, the W&M status will be 'invalid'.

User entry −213 to 927 °C

Factory setting 250 °C

Additional information

Read access	Operator
Write access	Maintenance

Probe position

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Probe position

Prerequisite Operating mode ($\rightarrow \equiv 130$) = RTD temperature input

Description Position of the temperature probe, measured from zero position (tank bottom or datum

plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of

the temperature value will be 'invalid'.

User entry -5 000 to 30 000 mm

Factory setting 5 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Damping factor

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Damping factor

Prerequisite Operating mode (→ 🗎 130) ≠ Disabled

Description Defines the damping constant (in seconds).

User entry 0 to 999.9 s

Factory setting 0 s

Additional information

Read access	Operator
Write access	Maintenance

Gauge current

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow Gauge current

Prerequisite Operating mode (→ 🖺 130) = Gauge power supply


Description Shows the current on the power supply line for the connected device.

Additional information

Read access	Operator
Write access	-

"Analog I/O" submenu

There is a **Analog I/O** submenu for each Analog I/O module of the device. This submenu refers to terminals 1 to 3 of this module (an analog input or output). For terminals 4 to 8 (always an analog input) refer to $\rightarrow \blacksquare$ 130.

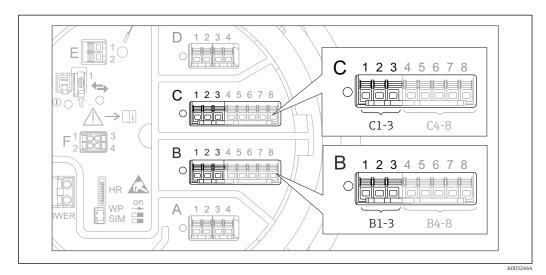

■ 49 Terminals for the "Analog I/O" submenu ("B1-3" or "C1-3", respectively)

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O

Operating mode

Navigation

Description

Defines the operating mode of the analog I/O module.

Selection

- Disabled
- 4..20mA input
- HART master+4..20mA input
- HART master
- 4..20mA output
- HART slave +4..20mA output

Factory setting

Disabled

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Operating mode (→ 🗎 136)	Direction of signal	Type of signal
Disabled	-	-
420mA input	Input from 1 external device	Analog (420mA)
HART master+420mA input	Input from 1 external device	Analog (420mA)HART
HART master	Input from up to 6 external devices	HART

Operating mode (→ 🗎 136)	ng mode (→ 🖺 136) Direction of signal	
420mA output	Output to higher-level unit	Analog (420mA)
HART slave +420mA output	Output to higher-level unit	Analog (420mA)HART

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode	Terminals	s of the I/	'O module
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+



In the active mode the following conditions must be met:

- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

Current span	

Navigation

Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Current span

Prerequisite

Operating mode parameter (→ 🖺 136) ≠ **Disabled** option or **HART master** option

Description

Defines the current range for the measured value transmission.

Selection

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- Fixed value

Factory setting

4...20 mA NE (3.8...20.5 mA)

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA (4 20.5 mA)	4 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
420 mA NE (3.820.5 mA)	3.8 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA

Visibility depends on order options or device settings

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA US (3.920.8 mA)	3.9 to 20.8 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.0 mA
Fixed current	Constant current, defined in the Fixed current parameter ($\rightarrow \implies 138$).				

In the case of an error, the output current assumes the value defined in the **Failure** mode parameter ($\rightarrow \triangleq 139$).

 Fixed current

 Navigation
 Setup → Advanced setup → Input/output → Analog I/O → Fixed current

 Prerequisite
 Current span (→ 🖹 137) = Fixed current

 Description
 Defines the fixed output current.

 User entry
 4 to 22.5 mA

 Factory setting
 4 mA

 Additional information
 Read access

 Operator

Write access	Maintenance

Analog input source

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Analog source

Prerequisite ■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

■ Current span ($\rightarrow \triangleq 137$) ≠ Fixed current

Description Defines the process variable transmitted via the AIO.

Selection ■ None

- Tank level
- Tank level %
- Tank ullage
- Tank ullage %
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature

138

- Air temperature
- Observed density value
- Average profile density ⁶⁾
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value ⁶⁾
- AIO B1-3 value mA ⁶⁾
- AIO C1-3 value ⁶⁾
- AIO C1-3 value mA ⁶⁾
- AIP B4-8 value 6)
- AIP C4-8 value 6)
- Element temperature 1 ... 24 ⁶⁾
- HART device 1...15 PV ⁶⁾
- HART device 1 ... 15 PV mA ⁶⁾
- HART device 1 ... 15 PV % 6)
- HART device 1 ... 15 SV ⁶⁾
- HART device 1 ... 15 TV ⁶⁾
- HART device 1 ... 15 QV ⁶⁾

Factory setting

Tank level

Additional information

Read access	Operator
Write access	Maintenance

Failure mode

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Failure mode

Prerequisite Operating mode (→ 🖺 136) = 4..20mA output or HART slave +4..20mA output

Description Defines the output behavior in case of an error.

Selection ■ Min.

Max.

■ Last valid value

Actual value

■ Defined value

Factory setting Max.

Additional information

Read access	Operator
Write access	Maintenance

⁶⁾ Visibility depends on order options or device settings

Error value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Error value

Prerequisite Failure mode (→ 🖺 139) = Defined value

Description Defines the output value in case of an error.

User entry 3.4 to 22.6 mA

Factory setting 22 mA

Additional information

Read access	Operator
Write access	Maintenance

Input value

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Input value

Prerequisite ■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

■ Current span (→ 🗎 137) ≠ Fixed current

Description Shows the input value of the analog I/O module.

Additional information

Read access	Operator
Write access	-

0 % value

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow 0 % value

Prerequisite ■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

Description Value corresponding to an output current of 0% (4mA).

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

100 % value

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow 100 % value

Prerequisite ■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

■ Current span (→ 🗎 137) ≠ Fixed current

Description Value corresponding to an output current of 100% (20mA).

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

Input value %

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Input value %

Prerequisite ■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

■ Current span (→ 🗎 137) ≠ Fixed current

Description Shows the output value as a percentage of the complete 4...20mA range.

Additional information

Read access	Operator
Write access	-

Output value

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Output value

Prerequisite Operating mode (→ 🖺 136) = 4..20mA output or HART slave +4..20mA output

Description Shows the output value in mA.

Additional information

Read access	Operator
Write access	-

Process variable

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Process variable

Prerequisite Operating mode (→ 🗎 136) = 4..20mA input or HART master+4..20mA input

Description Defines the type of measuring variable.

Selection • Level linearized

TemperaturePressure

Density

Factory setting Level linearized

Additional information

Read access	Operator
Write access	Maintenance

Analog input 0% value

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow AI 0% value

Prerequisite Operating mode (→ 🗎 136) = 4..20mA input or HART master+4..20mA input

Description Value corresponding to an input current of 0% (4mA).

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Analog input 100% value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow AI 100% value

Prerequisite Operating mode (→ 🗎 136) = 4..20mA input or HART master+4..20mA input

Description Value corresponding to an input current of 100% (20mA).

User entry Signed floating-point number

Factory setting 0 mm

142

Additional information

Read access	Operator
Write access	Maintenance

Error event type

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Error event type

Prerequisite Operating mode (→ 🗎 136) ≠ Disabled or HART master

Description Defines the type of event message (alarm/warning) in case of an error or output out of

range in the analog I/O module.

Selection • None

WarningAlarm

Factory setting Warning

Additional information

Read access	Operator
Write access	Maintenance

Process value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Process value

Prerequisite Operating mode (→ 🖺 136) = 4..20mA input or HART master+4..20mA input

Description Shows the input value scaled to customer units.

Additional information

Read access	Operator
Write access	-

Input value in mA

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Input val. in mA

Prerequisite Operating mode (→ 🗎 136) = 4..20mA input or HART master+4..20mA input

Description Shows the input value in mA.

Additional information

Read access	Operator
Write access	-

Input value percent

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Input value [%]

Prerequisite Operating mode (→ 🗎 136) = 4..20mA input or HART master+4..20mA input

Description Shows the input value as a percentage of the complete 4...20mA current range.

Additional information

Read access	Operator
Write access	-

Damping factor

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Damping factor

Prerequisite Operating mode (→ 🖺 136) ≠ Disabled or HART master

Description Defines the damping constant (in seconds).

User entry 0 to 999.9 s

Factory setting 0 s

Additional information

Read access	Operator
Write access	Maintenance

Used for SIL/WHG

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Used for SIL/WHG

Prerequisite ■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

■ The device has a SIL approval.

Description Determines whether the discrete I/O module is in SIL/WHG mode.

Selection • Enabled • Disabled

Factory setting Disabled

Additional information

Read access Operator
Write access Maintenance

Expected SIL/WHG chain

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow SIL/WHG chain

■ Operating mode (→ 🗎 136) = 4..20mA output or HART slave +4..20mA output

■ The device has a SIL approval.

Additional information


Prerequisite

Read access	Operator
Write access	-

"Digital Xx-x" submenu



- In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. A1-2, for example, denotes terminals 1 and 2 of slot A. The same is valid for slots B, C and D if they contain a Digital IO module.
- In this document, Xx-x designates any of these submenus. The structure of all these submenus is the same.

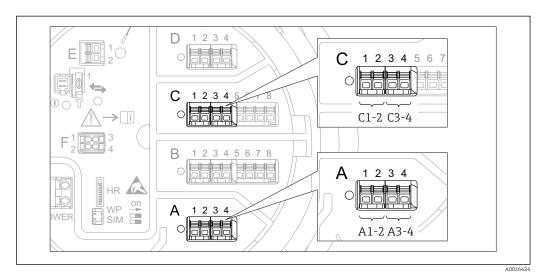

■ 50 Designation of the digital inputs or outputs (examples)

Navigation

Description Defines the operating mode of the discrete I/O module.


Selection • Disabled

Output passiveInput passive

■ Input active

Factory setting Disabled

Additional information

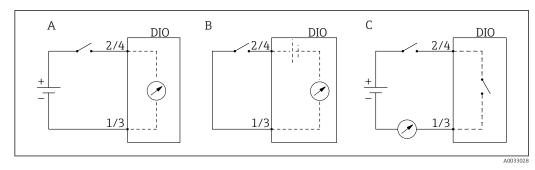

 \blacksquare 51 Operating modes of the Digital I/O module

- A Input passive
- B Input active
- C Output passive

Digital input source

Navigation

Setup → Advanced setup → Input/output → Digital Xx-x → Digital source

Prerequisite

Operating mode ($\rightarrow \triangleq 146$) = Output passive

Description

Defines which device state is indicated by the digital output.

Selection

- None
- Alarm x any
- Alarm x High
- Alarm x HighHigh
- Alarm x High or HighHigh
- Alarm x Low
- Alarm x LowLow
- Alarm x Low or LowLow
- Digital Xx-x
- Primary Modbus x
- Secondary Modbus x

Factory setting

None

Additional information

Meaning of the options

 Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow

The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the **Alarm 1 to 4** submenus.

■ Digital Xx-x⁷⁾

The digital signal present at the digital input $\mathbf{X}\mathbf{x}-\mathbf{x}$ is passed through to the digital output.

■ Modbus A1-4 Discrete x

Modbus B1-4 Discrete x

Modbus C1-4 Discrete x

Modbus D1-4 Discrete x

The digital value written by the Modbus Master device to the **Modbus discrete** x parameter $^{8)}$ is passed to the digital output. For details refer to Special Documentation SD02066G.

⁷⁾ Only present if "Operating mode (> 🖺 146)" = "Input passive" or "Input active" for the respective Digital I/O module.

⁸⁾ Expert \rightarrow Communication \rightarrow Modbus $Xx-x \rightarrow$ Modbus discrete x

Input value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Input value

Prerequisite Operating mode (→ 🖺 146) = "Input passive" option or "Input active" option

Description Shows the digital input value.

Additional information

Read access	Operator
Write access	-

Contact type

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital $Xx-x \rightarrow$ Contact type

Prerequisite Operating mode (→ 🖺 146) ≠ Disabled

Description Determines the switching behavior of the input or output.

Selection ■ Normally open ■ Normally closed

Factory setting Normally open

Output simulation

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Output sim

Prerequisite Operating mode (→ 🗎 146) = Output passive

Description Sets the output to a specific simulated value.

Selection • Disable

Simulating activeSimulating inactive

Fault 1Fault 2


Factory setting Disable

Additional information

Read access	Operator
Write access	Maintenance

The digital output consists of two relays connected in series:

148

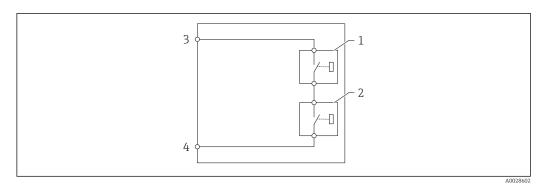

■ 52 The two relays of a digital output

1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open

The **Fault 1** and **Fault 2** options can be used to check the correct switching behavior of the two relays.

Output value

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Output values

Prerequisite Operating mode ($\rightarrow = 146$) = Output passive

Description Shows the digital output value.

Additional information

Read access	Operator
Write access	-

Readback value

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Readback value

Prerequisite Operating mode (→ 🗎 146) = Output passive

Description Shows the value read back from the output.

Additional information

Read access	Operator
Write access	-

Used for SIL/WHG

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Used for SIL/WHG

Prerequisite ■ Operating mode (→ 🗎 146) = Output passive

■ The device has a SIL certificate.

Description Determines whether the discrete I/O module is in SIL/WHG mode.

Selection • Enabled • Disabled

Factory setting Disabled

Additional information

Read access	Operator
Write access	Maintenance

Expected SIL/WHG chain

Navigation Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital C3-4 \rightarrow SIL/WHG chain


Prerequisite Operating mode (→ 🗎 146) = Output passive

Additional information

Read access	Service
Write access	-

"Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "X1-4" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

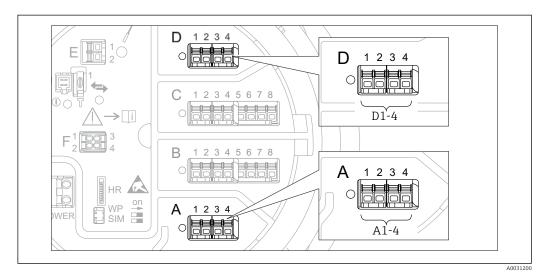

■ 53 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Communication

"Modbus X1-4", "V1 X1-4" and "WM550 X1-4" submenu

This submenu is only present for devices with **MODBUS** and/or **V1** and/or **"WM550" option** communication interface. There is one submenu of this type for each communication interface.

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4

Navigation В Setup → Advanced setup → Communication → WM550 X1-4

Communication interface protocol

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 / V1 X1-4 / WM550 X1-4 \rightarrow Commu I/F protoc

Description Shows the type of communication protocol.

John Silows the type of communication protocol

Additional information Read access Operator
Write access -

"Configuration" submenu

This submenu is only present for devices with a **MODBUS** communication interface.

Navigation

Setup → Advanced setup → Communication → Modbus X1-4
No. 1

→ Configuration

Baudrate

Navigation

Prerequisite

Communication interface protocol (→ 🖺 151) = MODBUS

Description

Defines the baud rate of the communication.

Selection

- 600 BAUD1200 BAUD
- 2400 BAUD
- 2400 DAUL
- 4800 BAUD
- 9600 BAUD *

■ 19200 BAUD ^{*}

Factory setting

9600 BAUD

Additional information

Read access	Operator
Write access	Maintenance

Parity

Navigation

Prerequisite

Communication interface protocol (→ 🗎 151) = MODBUS

Description

Defines the parity of the Modbus communication.

Selection

- Odd
- Even
- None / 1 stop bitNone / 2 stop bits

Factory setting

None / 1 stop bit

Additional information

Read access	Operator
Write access	Maintenance

^{*} Visibility depends on order options or device settings

Modbus address

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 \rightarrow Configuration

→ Device ID

Prerequisite Communication interface protocol (→ 🗎 151) = MODBUS

Description Defines the Modbus address of the device.

User entry 1 to 247

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Float swap mode

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 \rightarrow Configuration

→ Float swap mode

Prerequisite Communication interface protocol (→ 🗎 151) = MODBUS

Description Sets the format of how the floating point value is transferred on Modbus.

Selection ■ Normal 3-2-1-0

Swap 0-1-2-3WW Swap 1-0-3-2

Factory setting Swap 0-1-2-3

Additional information

Read access	Operator
Write access	Maintenance

Bus termination 🛅

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 \rightarrow Configuration \rightarrow Bus

termination

Prerequisite Communication interface protocol (→ 🖺 151) = MODBUS

Description Activates or deactivates the bus termination at the device. Should only be activated on the

last device in a loop.

Selection ■ Off

■ On

Factory setting

Off

Additional information

Read access	Operator
Write access	Maintenance

"Configuration" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation

→ Configuration

Communication interface protocol variant

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow Configuration \rightarrow Protocol

variant

Description Determines which variant of the V1 protocol is used.

User interface ■ None

V1 '

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

V1 address

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow Configuration \rightarrow V1

address

Prerequisite Communication interface protocol variant ($\rightarrow \triangleq 155$) = V1

Description Identifier of the device for the V1 communication.

User entry 0 to 99

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Visibility depends on order options or device settings

V1 address

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow Configuration \rightarrow V1

address

Prerequisite Communication interface protocol variant (→ 🗎 155)

Description Identifier of the previous device for V1 communication.

User entry 0 to 255

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Level mapping

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow Configuration \rightarrow Level mapping

Prerequisite Communication interface protocol (→ 🗎 151) = V1

Description Determines the transmittable range of levels.

+ve

Additional information

Factory setting

Read access	Operator
Write access	Maintenance

In V1, the level is always represented by a number in the range from 0 to 999 999. This number corresponds to a level as follows:

"Level mapping" = "+ve"

Number	Corresponding level
0	0.0 mm
999 999	99 999.9 mm

"Level mapping" = "+ve & -ve"

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm

Number	Corresponding level
500 001	-0.1 mm
999 999	-49 999.9 mm

Line impedance

impedance

Prerequisite Communication interface protocol (→ 🗎 151) = V1

Description Adjusts the impedance of the communication line.

User entry 0 to 15

Factory setting 15

Additional information

Read access	Operator
Write access	Maintenance



The line impedance affects the voltage difference between a logical $\bf 0$ and a logical $\bf 1$ on the message of the device to the bus. The default setting is suitable for most applications.

"V1 input selector" submenu

This submenu is only present for devices with a V1 communication interface.

Navigation

Setup → Advanced setup → Communication → V1 X1-4 → V1

input select.

Alarm 1 input source

Navigation

Setup → Advanced setup → Communication → V1 X1-4 → V1 input select. → Alarm1 input src

Description

Determines which discrete value will be transmitted as V1 alarm 1 status.

Selection

- None
- Alarm 1-4 any
- Alarm 1-4 HighHigh
- Alarm 1-4 High or HighHigh
- Alarm 1-4 High
- Alarm 1-4 Low
- Alarm 1-4 Low or LowLow
- Alarm 1-4 LowLow

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

Alarm 2 input source

Navigation

Setup → Advanced setup → Communication → V1 X1-4 → V1 input select. → Alarm2 input src

Description

Determines which discrete value will be transmitted as V1 alarm 2 status.

Selection

- None
- Alarm 1-4 any
- Alarm 1-4 HighHigh
- Alarm 1-4 High or HighHigh
- Alarm 1-4 High
- Alarm 1-4 Low
- Alarm 1-4 Low or LowLow
- Alarm 1-4 LowLow

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

Value percent selector

% select

Description Selects which value shall be transmitted as a 0..100% value in the V1 Z0/Z1 message.

Selection • None

Tank level %
Tank ullage %
AIO B1-3 value % *
AIO C1-3 value % *

Factory setting None

Additional information

Navigation

Read access	Operator
Write access	Maintenance

"Configuration" submenu

This submenu is only present for devices with a **"WM550" option** communication interface.

Navigation

Setup → Advanced setup → Communication → WM550 X1-4→ Configuration

Baudrate

→ Baudrate

Prerequisite Communication interface protocol (→ 🗎 151) = "WM550" option

Description Defines the baud rate of the WM550 communication.

Selection ■ 600 BAUD

1200 BAUD2400 BAUD4800 BAUD

Factory setting 2400 BAUD

Additional information

Read access	Operator
Write access	Maintenance

Visibility depends on order options or device settings

WM550 address

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow Configuration

→ WM550 address

Description Describes the WM550 address of the device.

User entry 0 to 63

Factory setting 1

Software ID

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow Configuration

→ Software ID

Prerequisite Communication interface protocol (→ 🗎 151) = "WM550" option

Description Defines content for WM550 Task 32.

Detailed information on content for WM550 Task 32, Special Documentation SD02567G.

User entry 0 to 9 999

Factory setting 2 000

"WM550 input selector" submenu

This submenu is only present for devices with a "WM550" option communication

interface.

Navigation В Setup → Advanced setup → Communication → WM550 X1-4

 \rightarrow WM550 inp select

Discrete 1 selector

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow WM550 inp select

→ Discrete 1select

Description Determines the input source which is transferred as Alarm bit [n] value in the

corresponding WM550 tasks.

Selection • None

■ Balance flag optionVisibility depends on order options or device settings

■ Alarm 1...4 any

■ Alarm 1...4 HighHigh

160

- Alarm 1...4 High or HighHighAlarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

"HART output" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output

"Configuration" submenu

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output

 \rightarrow Configuration

System polling address

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

→ Polling address

Description Device address for HART communication.

User entry 0 to 63

Factory setting 15

Additional information

Read access	Operator
Write access	Maintenance

No. of preambles

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow No.

of preambles

Description Defines the number of preambles in the HART telegram.

User entry 5 to 20

Factory setting 5

Additional information

Read access	Operator
Write access	Maintenance

PV source

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow PV

source

Description Decides, if the PV configuration is according to an analog output (HART slave) or

customized (in case of HART tunneling only).

162

Selection ■ AIO B1-3 *

■ AIO C1-3

Custom

Factory setting

Custom

Additional information

Read access	Maintenance
Write access	Maintenance

Assign PV

Navigation $\blacksquare \ \$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow Assign PV

Prerequisite PV source (→ 🗎 162) = Custom

Description Assign a measured variable to the primary dynamic variable (PV).

Additional information:

The assigned measured variable is also used by the current output.

Selection • None

■ Tank level

■ Tank ullage

Measured level

Distance

Displacer position

Water level

■ Upper interface level

Lower interface level

■ Bottom level

■ Tank reference height

 \blacksquare Liquid temperature

Vapor temperature

Air temperature

Observed density value

Average profile density

Upper density

Middle density

Lower density

■ P1 (bottom)

■ P2 (middle)

■ P3 (top)

- F5 (top)

■ GP 1 value

■ GP 2 value

■ GP 3 value

■ GP 4 value

Factory setting Tank level

Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank** level option.

0 % value

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow 0 %

value

Prerequisite PV source = Custom

Description 0% value of the primary variable (PV).

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

100 % value

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow 100

% value

Prerequisite PV source = Custom

Description 100% value of the primary variable (PV).

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

PV mA selector

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow PV

mA selector

Prerequisite PV source = Custom

Description Assigns a current to the primary HART variable (PV).

Selection ■ None

AIO B1-3 value mA*AIO C1-3 value mA*

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Primary variable (PV)

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

→ Primary var (PV)

Description Shows the value of the primary HART variable (PV).

Additional information

Read access	Operator
Write access	-

Percent of range

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

→ Percent of range

Description Shows the value of the primary variable (PV) as a percentage of the defined 0% to 100%

range.

Additional information

Read access	Operator
Write access	-

Assign SV 🗈

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

→ Assign SV

Description Assign a measured variable to the second dynamic variable (SV).

Selection • None

■ Tank level

■ Tank ullage

Visibility depends on order options or device settings

- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Liquid temperature

Additional information

Read access	Operator
Write access	Maintenance

 $oldsymbol{\dot{1}}$

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Secondary variable (SV)

Navigation

Setup → Advanced setup → Communication → HART output → Configuration → Second.var(SV)

Prerequisite

Assign SV (→ 🗎 165) ≠ None

Description

Shows the value of the secondary HART variable (SV).

Additional information

Read access	Operator
Write access	-

Assign TV

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

→ Assign TV

Description Assign a measured variable to the tertiary dynamic variable (TV).

Selection • None

- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting Water level

Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Tertiary variable (TV)

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

→ Tertiary var(TV)

Prerequisite Assign TV ($\Rightarrow \triangleq 167$) \neq None

Description Shows the value of the third HART variable (TV).

Additional information

Read access	Operator
Write access	-

Assign QV

Navigation

Setup → Advanced setup → Communication → HART output → Configuration → Assign QV

Description

Assign a measured variable to the quaternary dynamic variable (QV).

Selection

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Observed density value

Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank** level option.

Quaternary variable (QV)

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

 \rightarrow Quaterna.var(QV)

Prerequisite Assign QV (→ 🖺 168) ≠ None

Description Shows the value of the fourth HART variable (QV).

Additional information

Read access	Operator
Write access	-

"Information" submenu

 $\textit{Navigation} \hspace{1cm} \hline \blacksquare \hspace{1cm} \textbf{Setup} \rightarrow \textbf{Advanced setup} \rightarrow \textbf{Communication} \rightarrow \textbf{HART output}$

→ Information

HART short tag

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Information \rightarrow HART

short tag

Description Defines the short tag for the measuring point.

Maximum length: 8 characters

Allowed characters: A-Z, 0-9, certain special characters

User entry Character string comprising numbers, letters and special characters (#8)

Factory setting NRF8x

Additional information

Read access	Operator
Write access	Maintenance

Device tag

 $\textbf{Navigation} \hspace{1cm} \hline \blacksquare \hspace{1cm} \textbf{Setup} \rightarrow \textbf{Advanced setup} \rightarrow \textbf{Communication} \rightarrow \textbf{HART output} \rightarrow \textbf{Information} \rightarrow \textbf{Device}$

tag

Description Enter a unique name for the measuring point to identify the device quickly within the

plant.

User entry Character string comprising numbers, letters and special characters (#32)

Factory setting NRF8x

Additional information

Read access	Operator
Write access	Maintenance

HART descriptor

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Information \rightarrow HART

descriptor

Description Enter description for the measuring point

User entry Character string comprising numbers, letters and special characters (#16)

Factory setting

NRF8x

Additional information

Read access	Operator
Write access	Maintenance

HART message

message

Description Use this function to define a HART message which is sent via the HART protocol when

requested by the master.

Maximum length: 32 characters

Allowed characters: A-Z, 0-9, certain special characters

User entry Character string comprising numbers, letters and special characters (#32)

Factory setting NRF8x

Additional information

Read access	Operator
Write access	Maintenance

HART date code

Navigation Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Information \rightarrow HART

date code

Description Enter date of the last configuration change. Use this format yyyy-mm-dd

User entry Character string comprising numbers, letters and special characters (#10)

Factory setting 2009-07-20

Additional information

Read access	Operator
Write access	Maintenance

"Application" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application

"Tank configuration" submenu

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config

"Level" submenu

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level

Level source

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Level source

Description Defines the source of the level value.

Selection • No input value

■ HART device 1 ... 15 level

- Level SR
- Level
- Displacer position *
- AIO B1-3 value *
- AIO C1-3 value *
- AIP B4-8 value ²
- AIP C4-8 value

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Operation mode 🗈

 $\textbf{Description} \hspace{1.5cm} \textbf{Selection of normal or HTG mode for level measurement}. \hspace{0.1cm} \textbf{In the HTG mode, the level is} \\$

calculated using a pressure device.

Selection ■ Normal

HTG

Factory setting Normal

^{*} Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

Tank reference height

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Tank ref height

Description Defines the distance from the dipping reference point to the zero position (tank bottom or

datum plate).

User entry 0 to 10 000.00 mm

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Tank level

Navigation \square Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Tank level

Description Shows the distance from the zero position (tank bottom or datum plate) to the product

surface.

Additional information

Read access	Operator
Write access	-

Water level source

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Water level src

Description Defines the source of the bottom water level.

Selection • Manual value

■ Bottom level

■ HART device 1 ... 15 level

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual water level

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Man. water level

Prerequisite Water level source (→ 🗎 173) = Manual value

Description Defines the manual value of the bottom water level.

User entry -2 000 to 5 000 mm

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Water level

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Water level

Description Shows the bottom water level.

Additional information

Read access	Operator
Write access	-

"Temperature" submenu

Read access Maintenance

→ Temperature

Liquid temp source

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Liq temp

source

Description Defines source from which the liquid temperature is obtained.

Selection • Manual value

■ HART device 1 ... 15 temperature

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual liquid temperature

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Man.

liquid temp

Prerequisite Liquid temp source (→ 🖺 121) = Manual value

Description Defines the manual value of the liquid temperature.

User entry −50 to 300 °C

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Liquid temperature

temp.

Description Shows the average or spot temperature of the measured liquid.

Additional information

Read access	Operator
Write access	-

Air temperature source

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Air temp.

source

Description Defines source from which the air temperature is obtained.

Selection ■ Manual value

■ HART device 1 ... 15 temperature

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual air temperature

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Manual air

temp.

Prerequisite Air temperature source (→ 🖺 176) = Manual value

Description Defines the manual value of the air temperature.

User entry $-50 \text{ to } 300 \,^{\circ}\text{C}$

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Air temperature

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Air temp.

Description Shows the air temperature.

Additional information

Read access	Operator
Write access	-

Vapor temp source

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Vapor

temp src

Description Defines the source from which the vapor temperature is obtained.

Selection • Manual value

■ HART device 1 ... 15 vapor temp

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual vapor temperature

 $\begin{tabular}{lll} \textbf{Navigation} & & & & & & \\ \hline \blacksquare & & & \\ \textbf{Setup} \rightarrow \textbf{Advanced setup} \rightarrow \textbf{Application} \rightarrow \textbf{Tank config} \rightarrow \textbf{Temperature} \rightarrow \textbf{Man}. \\ \hline \end{tabular}$

vapor temp.

Prerequisite Vapor temp source (→ 🖺 177) = Manual value

Description Defines the manual value of the vapor temperature.

User entry $-50 \text{ to } 300 \,^{\circ}\text{C}$

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Vapor temperature

Navigation

 $\blacksquare \blacksquare \quad \mathsf{Setup} \to \mathsf{Advanced} \; \mathsf{setup} \to \mathsf{Application} \to \mathsf{Tank} \; \mathsf{config} \to \mathsf{Temperature} \to \mathsf{Vapor}$

temp.

Description Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

"Density" submenu

Navigation $\blacksquare \square$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config

→ Density

Observed density source

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Density \rightarrow Density source

Description Determines how the density is obtained.

Selection ■ HTG *

■ HTMS *

Average profile density *

Upper densityMiddle densityLower density

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Observed density

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Density \rightarrow Observed

density

Description Shows the measured or calculated density.

Additional information

Read access	Operator
Write access	-

Air density

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Density \rightarrow Air density

Description Defines the density of the air surrounding the tank.

User entry $0.0 \text{ to } 500.0 \text{ kg/m}^3$

Factory setting 1.2 kg/m^3

^{*} Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

Vapor density 🗈

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Density \rightarrow Vapor density

Description Defines the density of the gas phase in the tank.

User entry $0.0 \text{ to } 500.0 \text{ kg/m}^3$

Factory setting 1.2 kg/m^3

Additional information

Read access	Operator
Write access	Maintenance

"Pressure" submenu

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config

→ Pressure

P1 (bottom) source

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 (bot) source

Description Defines the source of the bottom pressure (P1).

Selection • Manual value

■ HART device 1 ... 15 pressure

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

P1 (bottom)

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 (bottom)

Description Shows the pressure at the tank bottom.

Additional information

Read access	Operator
Write access	-

P1 (bottom) manual pressure

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 (bot)

manual

Prerequisite P1 (bottom) source (→ 🗎 181) = Manual value

Description Defines the manual value of the bottom pressure (P1).

User entry -25 to 25 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1 position

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 position

Description Defines the position of the bottom pressure transmitter (P1), measured from zero position

(tank bottom or datum plate).

User entry -10 000 to 100 000 mm

Factory setting 5 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P1 offset

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 offset

Description Offset for the bottom pressure (P1).

The offset is added to the measured pressure prior to any tank calculation.

User entry −25 to 25 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1 absolute / gauge

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 absolut/

gauge

Description Defines whether the connected pressure transmitter measures an absolute or a gauge

pressure.

Selection • Absolute

Gauge

Factory setting Gauge

Additional information

Read access	Operator
Write access	Maintenance

P2 (middle) source

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P2 (mid)

source

Description Defines the source of the middle pressure (P2).

Selection • Manual value

■ HART device 1 ... 15 pressure

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

P2 (middle)

Description Shows the pressure (P2) at the middle transmitter.

Additional information

Read access	Operator
Write access	-

P2 (middle) manual pressure

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P2 (mid)

manual

Prerequisite P2 (middle) source (→ 🖺 183) = Manual value

Description Defines the manual value of the middle pressure (P2).

User entry -25 to 25 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P2 offset

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P2 offset

Description Defines the offset for the middle pressure (P2).

The offset is added to the measured pressure prior to any tank calculation.

User entry -25 to 2.5 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1-2 distance

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1-2 distance

Description Defines the distance between the bottom and the middle pressure transmitter.

User entry 0 to 100 000 mm

Factory setting 2 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P2 absolute / gauge

gauge

Description Defines whether the connected pressure transmitter measures an absolute or a gauge

pressure.

Selection • Absolute

Gauge

Factory setting Gauge

Additional information

Read access	Operator
Write access	Maintenance

P3 (top) source

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 (top) source

Description Defines the source of the top pressure (P3).

Selection • Manual value

■ HART device 1 ... 15 pressure

AIO B1-3 valueAIO C1-3 valueAIP B4-8 valueAIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

P3 (top)

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 (top)

Description Shows the pressure (P3) at the top transmitter.

Additional information

Read access	Operator
Write access	-

P3 (top) manual pressure

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 (top)

manual

Prerequisite P3 (top) source ($\Rightarrow \triangleq 185$) = Manual value

Description Defines the manual value of the top pressure (P3).

User entry -2.5 to 2.5 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P3 position

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 position

Description Defines the position of the top pressure transmitter (P3), measured from zero position

(tank bottom or datum plate).

User entry 0 to 100 000 mm

Factory setting 20000 mm

Additional information

Read access	Operator
Write access	Maintenance

P3 offset

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 offset

Description Offset for the top pressure (P3).

The offset is added to the measured pressure prior to any tank calculation.

User entry -2.5 to 2.5 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P3 absolute / gauge

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 absolut/

gauge

Description Defines whether the connected pressure transmitter measures an absolute or a gauge

pressure.

Selection • Absolute

Gauge

Factory setting Gauge

Additional information

Read access	Operator
Write access	Maintenance

Ambient pressure

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow Ambient

pressure

Description Defines the manual value of the ambient pressure.

User entry 0 to 2.5 bar

Factory setting 1 bar

Additional information

Read access	Operator
Write access	Maintenance


"Tank calculation" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation

"HyTD" submenu

Overview

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

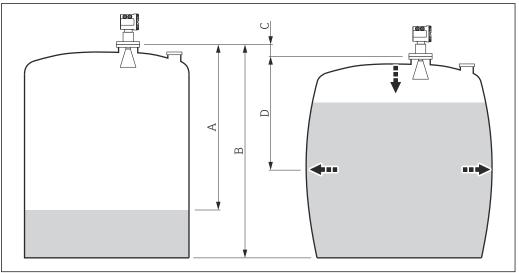


A00287

- 54 Correction of the hydrostatic tank deformation (HyTD)
- A "Distance" (level below $L_0 \rightarrow$ "HyTD correction value" = 0)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (level above $L_0 \rightarrow$ "HyTD correction value" > 0)
- This mode should not be used in conjunction with HTG as with HTG the level is not measured relative to the gauge reference height.

Linear approximation of the HyTD correction

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

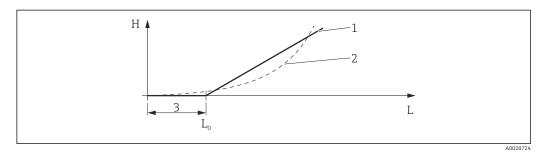

35 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor (→ \(\Bar{\text{\te}\text{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\text{\text{\text{\texi}\text{\text{\texi}\text{\text{\texi}\text{\texi{\text{\texi{\texi{\texi\texi{\texi}\texit{\texit{\texi{\tex{
- 2 Real correction
- 3 Starting level ($\rightarrow \equiv 190$)
- L Measured level ($\rightarrow \square$ 112)
- *H* HyTD correction value (\rightarrow 🖺 190)

Calculation of the HyTD correction

$$L \leq L_{0} \qquad \Rightarrow \qquad C_{HyTD} = 0$$

$$L > L_{0} \qquad \Rightarrow \qquad C_{HyTD} = - (L - L_{0}) \times D$$

A0028715

L	Measured level
L_0	Starting level
c _{HyTD}	HyTD correction value
D	Deformation factor

Description of parameters

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation

 \rightarrow HyTD

HyTD correction value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HyTD \rightarrow HyTD corr.

value

Description Shows the correction value from the Hydrostatic Tank Deformation.

Additional information

Read access	Operator
Write access	-

HyTD mode

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HyTD \rightarrow HyTD mode

Description Activates or deactivates the calculation of the Hydrostatic Tank Deformation.

Selection ■ No ■ Yes

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Starting level

 $\textbf{Navigation} \hspace{1cm} \hline \blacksquare \hspace{1cm} \\ \textbf{Setup} \rightarrow \textbf{Advanced setup} \rightarrow \textbf{Application} \rightarrow \textbf{Tank calculation} \rightarrow \textbf{HyTD} \rightarrow \textbf{Starting level} \\ \hline$

Description Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value

are not corrected.

User entry 0 to 5 000 mm

Factory setting 500 mm

Additional information

Read access	Operator
Write access	Maintenance

Deformation factor

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HyTD \rightarrow Deform factor

Description Defines the deformation factor for the HyTD (change of device position per change of

level).

User entry -1.0 to 1.0 %

Factory setting 0.2%

Additional information

Read access	Operator
Write access	Maintenance


"CTSh" submenu

Overview

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

- This correction is recommended for the following situations:
 - if the operating temperature deviates considederably from the temperature during calibration ($\Delta T > 10 \,^{\circ}\text{C} \, (18 \,^{\circ}\text{F})$)
 - for extremely high tanks
 - for refrigerated, cryogenic or heated applications
- As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
- This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

CTSh: Calculation of the wall temperature

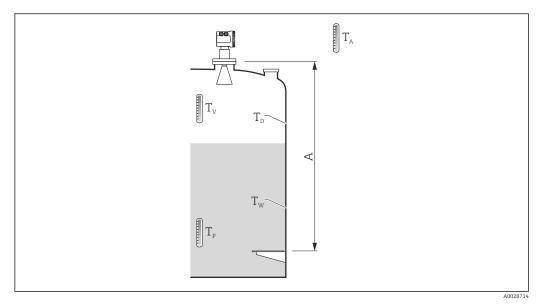

■ 56 Parameters for the CTSh calculation

A Gauge Reference Height (GRH)


T _W	Temperature of the wetted part of the tank shell	
T _D	Temperature of the dry part of the tank shell	
T _P	Product temperature	
T _V	Vapor temperature (in the tank)	
T _A	Ambient temperature (atmosphere surrounding the tank)	

CTSh: Calculation of the wall temperature

Depending on the parameters Covered tank ($\rightarrow \boxminus 195$) and Stilling well ($\rightarrow \boxminus 196$), the temperatures T_W of the wetted and T_D of the dry part of the tank wall are calculated as follows:

Covered tank (→ 🖺 195)	Stilling well (→ 🗎 196)	T _W	T_{D}
Covered	Yes 1)	T_{P}	T _V
Covered	No	(7/8) T _P + (1/8) T _A	$(1/2) T_V + (1/2) T_A$
Onen ton	Yes	T _P	T _A
Open top	No	(7/8) T _P + (1/8) T _A	T _A

1) This option is also valid for insulated tanks without a stilling welll. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

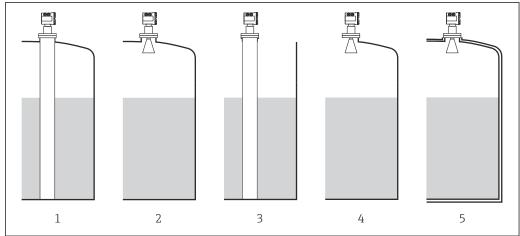

- 1 Covered tank (\rightarrow 🖺 195) = Covered; Stilling well (\rightarrow 🖺 196) = Yes
- 2 Covered tank (\rightarrow 🗎 195) = Covered; Stilling well (\rightarrow 🖺 196) = No
- 3
- Covered tank ($\gamma \equiv 195$) = Open top; Stilling well ($\gamma \equiv 196$) = Yes Covered tank ($\gamma \equiv 195$) = Open top; Stilling well ($\gamma \equiv 196$) = No Insulated tank: Covered tank ($\gamma \equiv 195$) = Open top; Stilling well ($\gamma \equiv 196$) = Yes

CTSh: Calculation of the correction

$$C_{CTSh} = \alpha (H - L)(T_D - T_{cal}) + \alpha L (T_W - T_{cal})$$

Н	Gauge Reference Height	
L	Measured level	
T _D	Temperature of the dry part of the tank shell (calculated from T_P , T_V and T_A)	
T _W	Temperature of the wetted part of the tank shell (calculated from T_P,T_V and $T_A)$	
T _{cal}	Temperature at which the measurement has been calibrated	
α	Linear expansion coefficient	
C _{CTSh}	CTSh correction value	

Description of parameters

 $\textit{Navigation} \hspace{1cm} \hline{\blacksquare} \hspace{1cm} \texttt{Setup} \rightarrow \texttt{Advanced setup} \rightarrow \texttt{Application} \rightarrow \texttt{Tank calculation}$

 \rightarrow CTSh

CTSh correction value

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow CTSh corr

value

Description Shows the CTSh correction value.

Additional information

Read access	Operator
Write access	-

CTSh mode

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow CTSh mode

Description Activates or deactivates the CTSh.

Selection • No

Yes

With wire *Only wire *

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Covered tank

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Covered tank

Description Determines whether the tank is covered.

Selection ■ Open top

Covered

Factory setting Open top

Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

i

The **Covered** option is only valid for fixed tank roofs. For a floating roof select **Open top**.

Stilling well

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Stilling well

Description Determines whether the device is mounted on a stilling well.

Selection ■ No

Yes

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Calibration temperature

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Calibration

temp

Description Specify temperature at which the measurement has been calibrated.

User entry $-50 \text{ to } 250 \,^{\circ}\text{C}$

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Linear expansion coefficient

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Linear exp

coeff

Description Defines the linear expansion coefficient of the tank shell material.

User entry 0 to 100 ppm

Factory setting 15 ppm

Additional information

Read access	Operator
Write access	Maintenance

Wire expansion coefficient

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Wire exp

coeff

Description Defines the expansion coefficient of the wire material of the drum. Value is programmed

in factory.

User entry 0 to 100 ppm

Factory setting 15 ppm

"HTG" submenu

Overview


Hydrostatic Tank Gauging (HTG) is a method to calculate the level and the density of the product inside a tank using pressure measurements only. The pressure is measured at different heights of the tank using one, two or three pressure sensors. With these data either the density or the level of the product (or both) can be calculated.

HTG modes

Four HTG modes can be selected in the **HTG mode** parameter ($\rightarrow \boxminus 205$). They determine which variables are measured and which are calculated. Depending on the selected mode a number of additional parameters are required for the calculation.

HTG mode (→ 🖺 205)	Measured variables	Required additional parameters	Calculated variables
P1 only	P1	ρ_PgH_{P1}	L _{HTG}
P1 + P3	■ P1 ■ P3	 ρ_P ρ_V ρ_A g H_{P1} H_{P3} 	L _{HTG} (more precise calculation for pressurized tanks)
P1 + P2	■ P1 ■ P2	 ΦA g H_{P1} H_{P1-P2} 	ρ_PL_{HTG}
P1 + P2 + P3	• P1 • P2 • P3	 ρ_V ρ_A g H_{P1} H_{P1-P2} H_{P3} 	 ρ_P L_{HTG} (more precise calculation for pressurized tanks)

HTG parameters

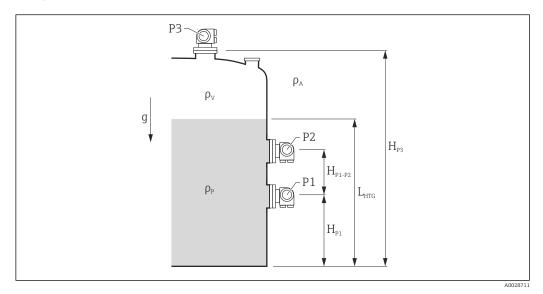

■ 57 HTG parameters

Parameter	Navigation path	
P1 (Bottom pressure)	$Setup \to Advanced \ setup \to Tank \ configuration \to Pressure \to P1 \ (bottom)$	
H _{P1} (Position of P1 transmitter)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 position	
P2 (Middle pressure)	Setup → Advanced setup → Tank configuration → Pressure → P2 (middle)	
H _{P1-P2} (Distance between P1 and P2 transmitters)	Setup → Advanced setup → Tank configuration → Pressure → P1-2 distance	
P3 (Top pressure)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 (top)	
H _{P3} (Position of P3 transmitter)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 position	
ρ_P (Density of the product $^{1)}$)	 Read-only: Setup → Advanced setup → Calculation → HTG → Density value Writable: Setup → Advanced setup → Calculation → HTG → Manual upper density 	
ρ_V (Vapor density)	Expert \rightarrow Application \rightarrow Tank configuration \rightarrow Density \rightarrow Vapor density	
ρ _A (Ambient air temperature)	$Setup \to Advanced \ setup \to Tank \ configuration \to Density \to Air \ density$	
g (Local gravity)	Expert \rightarrow Application \rightarrow Tank Calculation \rightarrow Local gravity	
L _{HTG} (Calculated level)	$Setup \to Advanced \ setup \to Calculation \to HTG \to Tank \ level$	

1) Depending on the **HTG mode** parameter ($\rightarrow \stackrel{\text{\tiny le}}{=} 205$) this is a writable or a read-only parameter.

HTG evaluation: dependence on measured level

To calculate the level or density by HTG with the required accuracy, P1 and P2 have to be covered by a certain product level. To avoid a measurement with an insufficient accuracy, the calculation will stop before the level reaches the position of the pressure sensor.

Two parameters are defined for this purpose:

Minimum level


This parameter defines the position below which no level is accepted. If the calculation leads to **Tank level** < **Minimum level**, the value of **Minimum level** will be displayed instead of the calculated value.

Safety distance

This parameter defines the minimum amount of product which must be present above the pressure sensor P1 or P2 for the level or density calculation to take place.

- i
- The device always uses the bigger of these two values as the switch-over point for the level calculation.
- If HTG mode (→ 🗎 205) is set to P1 only or P1 + P3, the density is not calculated and the Manual upper density parameter is used instead.

Case 1: H_{P1} < Minimum level < H_{P2}

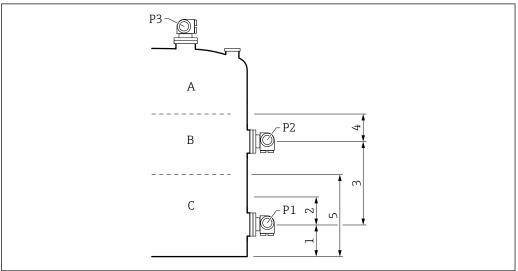


A002871

- 1 P1 position ($\rightarrow \square$ 182)
- 2 Safety distance (→ 🖺 207)
- *3 P1-2 distance* (→ 🖺 184)
- 4 Safety distance (→ 🖺 207)
- 5 Minimum level (→ 🖺 206)

Level L is in area	Calculation method for ρ_P	Calculation method for L
A	calculated from pressure	calculated from pressure
В	ρ_P held	calculated from pressure
С	ρ_P held	L = Minimum level


Case 2: Minimum level $< H_{P1}$

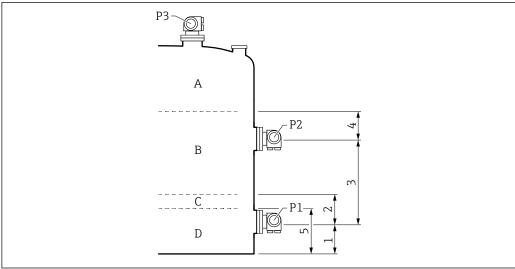

- P1 position (\rightarrow 🖺 182) Safety distance (\rightarrow 🖺 207) P1-2 distance (\rightarrow 🖺 184) Safety distance (\rightarrow 🖺 207)
- 2 3 4 5 Minimum level (→ 🖺 206)

Level L is in area	Calculation method for ρ_P	Calculation method for L
A	calculated from pressure	calculated from pressure
В	ρ_P held	calculated from pressure
C/D	ρ_P held	L = Minimum level

Case 3: Minimum level > H_{P2}

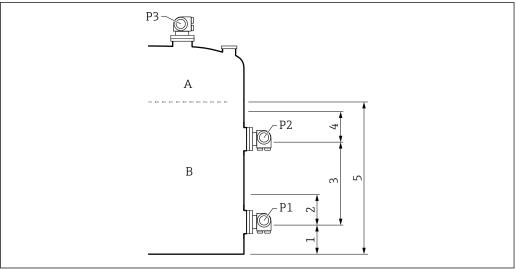

- 1
- 2
- 3
- P1 position (\rightarrow 🖺 182) Safety distance (\rightarrow 🖺 207) P1-2 distance (\rightarrow 🖺 184) Safety distance (\rightarrow 🖺 207)
- Minimum level (→ 🖺 206)

Level L is in area	Calculation method for ρ_{P}	Calculation method for L	
A	calculated from pressure	calculated from pressure	
В	ρ_P held	L = Minimum level	


HTG evaluation: dependence on measured pressure

If the level of the product approaches the the P1 or P2 pressure sensor, the measured pressure becomes very small and the measurement might be too inaccurate for the Tank Gauging application. To solve this problem, a minimum pressure P_{min} is defined in the **Minimum pressure** parameter ($\rightarrow \cong 206$). If the pressure measured by the sensor P1 or P2, respectively, the software stops calculating the density and either holds the last calculated value (for the density) or returns the HTMinLevel (for HTGLevel).

- ullet If P2 is smaller than P_{min} , the software stops calculating the density and uses the last density value.
- If P1 is smaller than P_{min} , the software stops calculating the level and uses the value of **Minimum level (\rightarrow \cong 206)**, instead.

Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level**), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

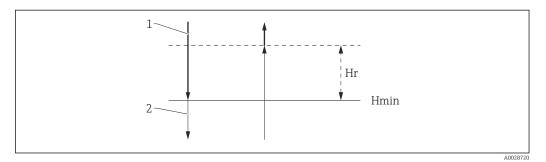

■ 58 HTG hysteresis

1 Value calculated

2 Value held/manual

 H_{min} Minimum level

 H_r Hysteresis (\rightarrow $\stackrel{\triangle}{=}$ 207)

Description of parameters

 $\textit{Navigation} \hspace{1cm} \hline{\blacksquare} \hspace{1cm} \textbf{Setup} \rightarrow \textbf{Advanced setup} \rightarrow \textbf{Application} \rightarrow \textbf{Tank calculation}$

 \rightarrow HTG

Density value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Density value

Description Shows the density calculated by HTG.

Additional information

Read access	Operator
Write access	-

Tank level

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Tank level

Description Shows the level calculated by HTG.

User interface Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	-

HTG mode

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow HTG mode

Description Defines the HTG mode.

Selection ■ P1 only

P1 + P3P1 + P2P1 + P2 + P3

Factory setting P1 only

Additional information

Read access	Operator
Write access	Maintenance

Manual density

Navigation

 $\blacksquare \ \ \, \exists \quad \mathsf{Setup} \to \mathsf{Advanced} \ \mathsf{setup} \to \mathsf{Application} \to \mathsf{Tank} \ \mathsf{calculation} \to \mathsf{HTG} \to \mathsf{Manual}$

density

Description

Defines the manual density.

User entry

0 to 3000 kg/m^3

Factory setting

 800 kg/m^3

Additional information

Read access	Maintenance
Write access	Maintenance

Minimum level

Navigation

Description

Defines the minimum level below which no HTG calculation will take place.

User entry

0 to 20000 mm

Factory setting

7000 mm

Additional information

Read access	Operator	
Write access	Maintenance	

Minimum pressure

Navigation

 \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Min. pressure

Description

Defines the minimum pressure below which no HTG calculation takes place.

User entry

0 to 100 bar

Factory setting

0.1 bar

Additional information

Read access	Operator
Write access	Maintenance

Safety distance

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Safety distance

Description Defines the minimum level which must be present above the bottom and middle pressure

sensor before their signal is used for the calculation.

User entry 0 to 10 000 mm

Factory setting 2 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Hysteresis

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTG \rightarrow Hysteresis

Description Defines the hysteresis for the HTG calculation. Prevents constant switching if the level is

near the switch-over point.

User entry 0 to 2 000 mm

Factory setting 50 mm

Additional information


Read access	Operator
Write access	Maintenance

"HTMS" submenu

Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

HTMS parameters

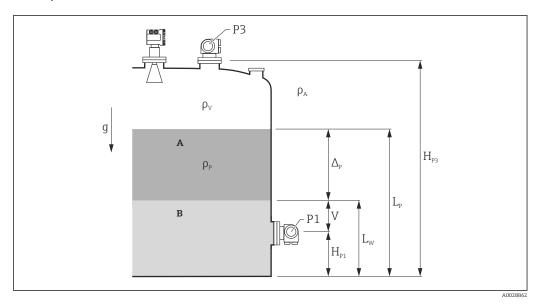

■ 59 HTMS parameters

A Product

B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 (bottom)
H _{P1} (Position of P1 transmitter)	$Setup \to Advanced \ setup \to Tank \ configuration \to Pressure \to P1 \ position$
P3 (Top pressure)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 (top)
H _{P3} (Position of P3 transmitter)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 position
ρ_P (Density of the product $^{1)}$)	 Measured value: Setup → Advanced setup → Calculation → HTMS → Density value User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density
ρ_V (Vapor density)	$Expert \to Application \to Tank \ configuration \to Density \to Vapor \ density$
ρ _A (Ambient air temperature)	$Setup \to Advanced \ setup \to Tank \ configuration \to Density \to Air \ density$
g (Local gravity)	Expert → Application → Tank Calculation → Local gravity
L _p (Level of the product)	Operation → Tank level
L _W (Bottom water level)	Operation → Water level
$V = L_W - H_{P1}$	
$\Delta_{P} = L_{P} - L_{W} = L_{P} - V - H_{P1}$	

1) Depending on the situation this parameter is measured or a user-defined value is used.

HTMS modes

Two HTMS modes can be selected in the **HTMS mode** parameter ($\rightarrow \boxminus 210$). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.

The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ 🖺 210)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	■ P ₁ ■ L _p	■ g ■ H _{p1} ■ L _W (optional)	РΡ
HTMS P1+P3	• P ₁ • P ₃ • L _p	 ρ_V ρ_A g H_{P1} H_{P3} L_W (optional) 	P _P (more precise calculation for pressurized tanks)

Minimum level

The density of the product can only be calculated if the product has a minimum thickness:

$$\Delta_{\rm p} \geq \Delta_{\rm p,\,min}$$

A002886

This is equivalent to the following condition for the product level:

$$L_P - V \geq \Delta_{P, \min} + H_{P1} = L_{\min}$$

A0028863


 L_{min} is defined in the **Minimum level** parameter ($\rightarrow \triangleq 211$). As can be seen from the formula it always must be bigger than H_{P1} .

If L_P - V falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter) will be used.

Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level** ($\rightarrow \implies 211$)), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

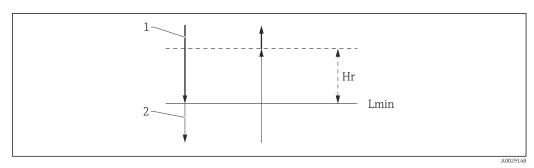

■ 60 HTMS hysteresis

- 1 Value calculated
- 2 Value held/manual

 L_{min} Minimum level (\rightarrow $\stackrel{\triangle}{=}$ 211)

 H_r Hysteresis ($\Rightarrow \square 212$)

Description of parameters

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS

HTMS mode

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow HTMS mode

Description Defines the HTMS mode. Depending on the mode one or two pressure transmitters are

used.

Selection HTMS P1

■ HTMS P1+P3

Factory setting HTMS P1

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

■ HTMS P1

Only a bottom pressure transmitter (P1) is used.

■ HTMS P1+P3

A bottom (P1) and top (P3) pressure transmitter are used. This option should be selected for pressurized tanks.

Manual density

Navigation $\blacksquare \ \$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Manual density

Description Defines the manual density.

User entry $0 \text{ to } 3000 \text{ kg/m}^3$

Factory setting 800 kg/m³

Additional information

Read access	Maintenance
Write access	Maintenance

Density value

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Density value

Description Shows the calculated product density.

Additional information

Read access	Operator
Write access	-

Minimum level

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Min. level

Description Defines the minimum product level for a HTMS calculation.

If Lp - V falls below the limit defined in this parameter, the density retains its last value or

the manual value is used instead.

User entry 0 to 20 000 mm

Factory setting 7 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Minimum pressure

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Min.

pressure

Description Defines the minimum pressure for a HTMS calculation.

If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

User entry 0 to 100 bar

Factory setting 0.1 bar

A 1 10.0		
Additional	Intorm	ation

Read access	Operator
Write access	Maintenance

Safety distance

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Safety

distance

Description Defines the minimum level which must be present above the bottom pressure sensor

before its signal is used for the calculation.

User entry 0 to 10 000 mm

Factory setting 2 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Hysteresis 🙃

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Hysteresis

Description Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is

near the switch-over point.

User entry 0 to 2 000 mm

Factory setting 50 mm

Additional information

Read access	Operator
Write access	Maintenance

Water density

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Water

density

Description Density of the water in the tank.

User entry Signed floating-point number

Factory setting 1000 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

"Alarm" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm

"Alarm" submenu

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm



Alarm hysteresis \rightarrow \cong 221

Damping factor \rightarrow \cong 221

Alarm mode

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm mode

Description Defines the alarm mode of the selected alarm.

Selection ■ Off

■ On

Latching

Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Off


No alarms are generated.

■ On

An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).

Latching

All alarms remain active until the user selects **Clear alarm** (\rightarrow \cong **220)** = **Yes** or the power is switched off and on.

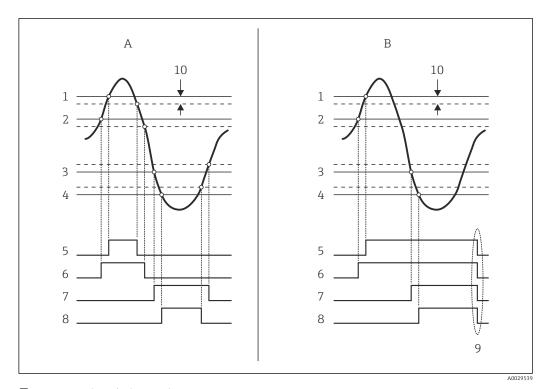

■ 61 Principle of the limit evaluation

A Alarm mode ($\Rightarrow \triangleq 214$) = On

B Alarm mode (\rightarrow $\stackrel{\cdot}{\implies}$ 214) = Latching

1 HH alarm value ($\rightarrow = 217$)

2 H alarm value ($\rightarrow \square$ 217)

3 Lalarm value ($\rightarrow = 218$)

4 LL alarm value (→ 🖺 218)

5 HH alarm (→ 🖺 218)

6 H alarm (→ 🖺 219)

7 $L \text{ alarm } (\rightarrow \blacksquare 219)$

8 LL alarm (→ 🖺 219)

9 "Clear alarm ($\rightarrow \triangleq 220$)" = "Yes" or power off-on

10 Hysteresis (→ 🖺 221)

Error value 🗈

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Error value

Prerequisite Alarm mode (\rightarrow \cong 214) \neq Off

Description Defines the alarm to be issued if the input value is invalid.

Selection ■ No alarm

■ HH+H alarm

■ H alarm

■ L alarm

■ LL+L alarm

All alarms

Factory setting All alarms

Additional information Read access Operator
Write access Maintenance

Alarm value source

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm source

Prerequisite Alarm mode ($\rightarrow \stackrel{\triangle}{=} 214$) \neq Off

Description Determines the process variable to be monitored.

Selection ■ Tank level

- Liquid temperature
- Vapor temperature
- Water level
- P1 (bottom)
- P2 (middle)
- P3 (top)
- Observed density value
- Volume
- Flow velocity
- Volume flow
- Vapor density
- Middle density
- Upper density
- Correction
- Tank level %
- GP 1...4 value
- Measured level
- P3 position
- Tank reference height
- Local gravity
- P1 position
- Manual density
- Tank ullage
- Average profile density
- Lower density
- Upper interface level
- Lower interface level
- Bottom level
- Displacer position
- HART device 1...15 PV
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV
- HART device 1...15 PV mA
- HART device 1...15 PV %
- Element temperature 1...24
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- None

Factory setting None

Additional information Read access Operator Write access Maintenance

Alarm value

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm value

Prerequisite Alarm mode (\rightarrow \cong 214) \neq Off

Description Shows the current value of the process variable being monitored.

User interface Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	-

HH alarm value

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow HH alarm value

Prerequisite Alarm mode (→ 🗎 214) ≠ Off

Description Defines the high-high(HH) limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

H alarm value

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow H alarm value

Prerequisite Alarm mode (→ 🗎 214) ≠ Off

Description Defines the high(H) limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

L alarm value

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Lalarm value

Prerequisite Alarm mode ($\Rightarrow \triangleq 214$) $\neq Off$

Description Defines the low limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

LL alarm value

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow LL alarm value

Prerequisite Alarm mode ($\Rightarrow \triangleq 214$) $\neq Off$

Description Defines the low-low(LL) limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

HH alarm

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow HH alarm

Prerequisite Alarm mode (→ 🗎 214) ≠ Off

Description Shows whether an HH alarm is currently active.

Additional information

Read access	Operator
Write access	-

H alarm

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow H alarm

Prerequisite Alarm mode ($\Rightarrow \triangleq 214$) $\neq Off$

Description Shows whether an H alarm is currently active.

Additional information

Read access	Operator
Write access	-

HH+H alarm

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow HH+H alarm

Prerequisite Alarm mode ($\Rightarrow \triangleq 214$) $\neq Off$

Description Shows whether an HH or H alarm is currently active.

Additional information

Read access	Operator
Write access	-

L alarm

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow L alarm

Prerequisite Alarm mode ($\Rightarrow \triangleq 214$) $\neq Off$

Description Shows whether an L alarm is currently active.

Additional information

Read access	Operator
Write access	-

LL alarm

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow LL alarm

Prerequisite Alarm mode ($\rightarrow \triangleq 214$) $\neq Off$

Description Shows whether an LL alarm is currently active.

Additional information

Read access	Operator
Write access	-

LL+L alarm

Navigation Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow LL+L alarm

Prerequisite Alarm mode ($\rightarrow \triangleq 214$) \neq Off

Description Shows whether an LL or L alarm is currently active.

Additional information

Read access	Operator
Write access	-

Any error

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow Any error

Prerequisite Alarm mode ($\Rightarrow \triangleq 214$) $\neq Off$

Description Show whether any alarm is currently active.

User interface ■ Unknown

InactiveActiveError

Factory setting

Unknown

Additional information

Read access	Operator
Write access	-

Clear alarm

Prerequisite Alarm mode (→ 🗎 214) = Latching

Description Deletes an alarm which is still active although the alarm condition is no longer present.

Selection • No

Yes

Factory setting No

220

Additional information

Read access	Operator
Write access	Maintenance

Alarm hysteresis

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm hysteresis

Prerequisite Alarm mode (→ 🖺 214) ≠ Off

Description Defines the hysteresis for the limit values. The hystersis prevents constant changes of the

alarm state if the level is near one of the limit values.

User entry Signed floating-point number

Factory setting 0.001

Additional information

Read access	Maintenance
Write access	Maintenance

Damping factor

Description Defines the damping constant (in seconds).

User entry 0 to 999.9 s

Factory setting 0 s

Additional information

Read access	Operator
Write access	Maintenance

"Display" submenu

This menu is only visible if the device has a local display.

Navigation

Language

Navigation

Prerequisite The device has a local display.

Description Set display language.

Selection ■ English

Deutsch

■ русский язык (Russian) ■ 日本語 (Japanese)

Factory setting English

Additional information

Read access	Operator
Write access	Operator

Format display

Navigation

Prerequisite The device has a local display.

Description Select how measured values are shown on the display.

Selection ■ 1 value, max. size ■ 1 bargraph + 1 value

2 values ■ 1 value large + 2 values


4 values

Factory setting 1 value, max. size


Additional information

4841.000


"Format display" = "1 value, max. size"

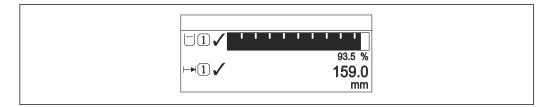


■ 63 "Format display" = "1 bargraph + 1 value"

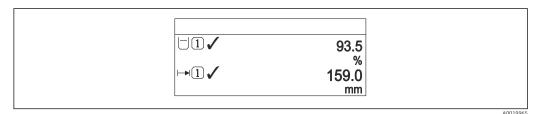

■ 64 "Format display" = "2 values"

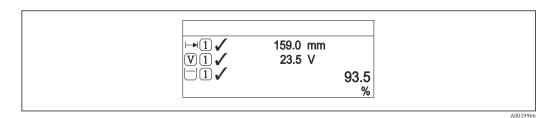

■ 65 "Format display" = "1 value large + 2 values"

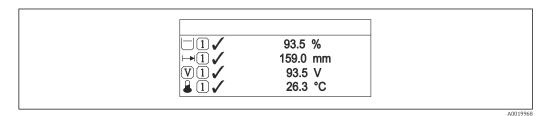

■ 66 "Format display" = "4 values"

Read access	Operator
Write access	Operator

- The Value 1 to 4 display (→ 🖺 223) parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter ($\rightarrow \cong 226$).

Value 1 to 4 display

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Value 1 display

Prerequisite The device has a local display.

Description

Select the measured value that is shown on the local display.

Selection

- None 9)
- Tank level
- Measured level
- Level linearized
- Tank level %
- Water level ⁹⁾
- Liquid temperature ⁹⁾
- Vapor temperature ⁹⁾
- Air temperature ⁹⁾
- Tank ullage
- Tank ullage %
- Observed density value ⁹⁾
- P1 (bottom) 9)
- P2 (middle) 9)
- P3 (top) ⁹⁾
- GP 1 value 9)
- GP 2 value 9)
- GP 3 value ⁹⁾
- GP 4 value 9)
- Gauge command 9)
- Gauge status 9)
- AIO B1-3 value 9)
- AIO B1-3 value mA 9)
- AIO B1-3 value % 9)
- AIO C1-3 value 9)
- AIO C1-3 value mA 9)
- AIO C1-3 value % 9)
- AIP B4-8 value ⁹⁾
- AIP B4-8 value mA 9)
- AIP B4-8 value % 9)
- AIP C4-8 value 9)
- AIP C4-8 value mA 9) ■ AIP C4-8 value % 9)

Factory setting

Depending on device version

Additional information

Read access	Operator
Write access	Maintenance

Decimal places 1 to 4

Navigation

Prerequisite

The device has a local display.

Description

This selection does not affect the measurement and calculation accuracy of the device.

not available for the Value 1 display parameter

Selection

■ X

X.XX.XX

X.XXX

X.XXXX

Factory setting

X.X

Additional information

1

The setting does not affect the measuring or computational accuracy of the device.

Read access	Operator
Write access	Maintenance

Separator

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Separator

Prerequisite The device has a local display.

Description Select decimal separator for displaying numerical values.

Selection •

■ ,

Factory setting

Additional information

Read access	Operator
Write access	Maintenance

Number format

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Number format

Prerequisite The device has a local display.

Description Choose number format for the display.

Selection ■ Decimal ■ ft-in-1/16"

Factory setting Decimal

Additional information

Read access	Operator
Write access	Maintenance

The ft-in-1/16" option is only valid for distance values.

Header 🗈

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Header

Prerequisite The device has a local display.

Description Select header contents on local display.

Selection ■ Device tag

Free text

Factory setting Device tag

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Device tag

The header contents is defined in the **Device tag** parameter ($\rightarrow \implies 119$).

■ Free text

The header contents is defined in the **Header text** parameter ($\rightarrow \triangleq 226$).

Header text

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Header text

Prerequisite Header (→ 🖺 226) = Free text

Description Enter display header text.

User entry Character string comprising numbers, letters and special characters (#11)

Factory setting TG-Platform

Additional information

Read access	Operator
Write access	Maintenance

Display interval

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Display interval

Description Set time measured values are shown on display if display alternates between values.

User entry 1 to 10 s

Factory setting 5 s

Additional information

i

This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Read access	Operator
Write access	Operator

Display damping

Navigation Setup \rightarrow Advanced setup \rightarrow Display damping

Prerequisite The device has a local display.

Description Set display reaction time to fluctuations in the measured value.

User entry 0.0 to 999.9 s

Factory setting 0.0 s

Additional information

Read access	Operator
Write access	Maintenance

Backlight

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Backlight

Prerequisite The device has a local display.

Description Switch the local display backlight on and off.

Selection ■ Disable

■ Enable

Factory setting Enable

Additional information

Read access	Operator
Write access	Operator

Contrast display

Navigation Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Contrast display

Prerequisite The device has a local display.

Description Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).

User entry 20 to 80 %

Factory setting 30 %

Additional information

Read access	Operator
Write access	Operator

"System units" submenu

Navigation $\blacksquare \blacksquare$ Setup \rightarrow Advanced setup \rightarrow System units

Units preset

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow System units \rightarrow Units preset

Description Defines a set of units for length, pressure and temperature.

Selection • mm, bar, °C

■ m, bar, °C

mm, PSI, °Cft, PSI, °F

• ft-in-16, PSI, °F

ft-in-8, PSI, °FCustomer value

Factory setting mm, bar, °C

Additional information

Read access	Operator
Write access	Maintenance

If the **Customer value** option is selected, the units are defined in the following parameters. In any other case these are read-only parameters used to indicate the respective unit:

■ Distance unit (→ 🖺 229)

• Pressure unit (\rightarrow \cong 230)

■ Temperature unit (→ 🗎 230)

Distance unit

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow System units \rightarrow Distance unit

Description Select distance unit.

Selection

SI units

m

ft

mm

in

• cm • ft-in-16 • ft-in-8

Factory setting mm

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→ 🖺 119) = Customer value)

Pressure unit

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow System units \rightarrow Pressure unit

Description Select process pressure unit.

SelectionSI unitsUS unitsOther units■ barpsi■ inH2O

Factory setting bar

Additional information Read access Operator

Read access	Operator
Write access	Maintenance (if Units preset (→ 🖺 119) = Customer value)

Temperature unit

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow System units \rightarrow Temperature unit

Description Select temperature unit.

• K • R

Factory setting °C

Additional information Read access Ope

kg/m³

 Read access
 Operator

 Write access
 Maintenance (if Units preset (→ 🗎 119) = Customer value)

Density unit

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow System units \rightarrow Density unit

Description Select density unit.

SelectionSI unitsUS unitsOther units• g/cm^3 • lb/ft^3 • $^{\circ}API$ • g/ml• lb/gal (us)• SGU

g/l
 kg/l
 kg/dm³
 lb/in³
 STon/yd³

■ kg/m³

Factory setting

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→ 🖺 119) = Customer value)

"Date / time" submenu

Navigation

Date/time

Navigation

Description Displays the device internal real time clock.

Additional information

Read access	Operator
Write access	-

Set date

Navigation Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Set date

Description Controls the setting of the real-time clock.

Selection ■ Please select

- Abort
- Start
- Confirm time

Factory setting

Please select

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Please select

Prompts the user to select an action.

Abort

Discards the entered date and time.

Start

Starts the setting of the real time clock.

Confirm time

Sets the real-time clock to the entered date and time.

Year

Navigation Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Year

Set date (→ 🖺 232) = Start Prerequisite

Description Enter the current year.

User entry 2 016 to 2 079

Factory setting 2 016

Additional information

Read access	Operator
Write access	Maintenance

Month

Navigation \square Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Month

Prerequisite Set date (→ 🗎 232) = Start

Description Enter the current month.

User entry 1 to 12

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Day 🗈

Navigation \square Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Day

Prerequisite Set date (→ 🖺 232) = Start

Description Enter the current day.

User entry 1 to 31

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Hour 🗈

Navigation \square Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Hour

Prerequisite Set date ($\Rightarrow \triangleq 232$) = Start

Description Enter the current hour.

User entry 0 to 23

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

Minute

 $\textbf{Navigation} \hspace{1cm} \blacksquare \hspace{1cm} \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Date} \ / \ \text{time} \rightarrow \text{Minute}$

Prerequisite Set date (→ 🗎 232) = Start

Description Enter the current minute.

User entry 0 to 59

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

"SIL confirmation" wizard



■ The **SIL confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently **not** in the SIL- or WHG-locked state.

■ The **SIL confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

Navigation

"Deactivate SIL/WHG" wizard



- The **Deactivate SIL/WHG** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently in the SIL- or WHG-locked state.
- The **Deactivate SIL/WHG** wizard is required to undo the locking of the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Deactiv. SIL/WHG

"Administration" submenu

Navigation \square Setup \rightarrow Advanced setup \rightarrow Administration

Define access code

Navigation \square Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Def. access code

Description Define release code for write access to parameters.

User entry 0 to 9 999

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

- If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
- The write protection affects all parameters marked with the $\widehat{\mathbb{A}}$ symbol in this document.
- Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter $(\rightarrow \boxminus 122)$.

Device reset

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset

Description Reset the device configuration - either entirely or in part - to a defined state.

Selection • Cancel

To factory defaults

Restart device

Factory setting Cancel

Additional information Meaning of the options

Cancel

No action

To factory defaults

All parameters are reset to the order-code specific factory setting.

Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Read access	Operator
Write access	Maintenance

15.4 "Diagnostics" menu

Navigation

Diagnostics

Actual diagnostics

Navigation

 \square Diagnostics \rightarrow Actual diagnos.

Description

Shows the current occured diagnostic event along with its diagnostic information.

Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text
- If several messages are active at the same time, the messages with the highest priority is displayed.
- Information on what is causing the message, and remedy measures, can be viewed via the ① symbol on the display.

Timestamp

Navigation

□ □ Diagnostics → Timestamp

Description

Displays the timestamp for the currently active diagnostic message.

Additional information

Read access	Operator
Write access	-

Previous diagnostics

Navigation

□ □ Diagnostics → Prev.diagnostics

Description

Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.

Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

If several messages are active at the same time, the messages with the highest priority is displayed.

Information on what is causing the message, and remedy measures, can be viewed via the (i) symbol on the display.

Timestamp

Description Shows the timestamp of the previous diagnostic message.

Additional information

Read access	Operator
Write access	-

Operating time from restart

Navigation $\blacksquare \Box$ Diagnostics \rightarrow Time fr. restart

Description Shows the time the device has been in operation since the last device restart.

Additional information

Read access	Operator
Write access	-

Operating time

Navigation \blacksquare Diagnostics \rightarrow Operating time

Description Indicates how long the device has been in operation.

Additional information

Read access	Operator
Write access	-

Date/time

Navigation \square Diagnostics \rightarrow Date/time

Description Displays the device internal real time clock.

Additional information

Read access	Operator
Write access	-

15.4.1 "Diagnostic list" submenu

Navigation \Box Diagnostics \rightarrow Diagnostic list

Diagnostics 1 to 5

Navigation Diagnostics \rightarrow Diagnostic list \rightarrow Diagnostics 1 to 5

Description Display the current diagnostics messages with the highest to fifth-highest priority.

Additional information The display consists of:

Symbol for event behaviorCode for diagnostic behaviorOperating time of occurrence

■ Event text

Timestamp 1 to 5

Navigation Diagnostics \rightarrow Diagnostic list \rightarrow Timestamp 1 to 5

Description Timestamp of the diagnostic message.

15.4.2 "Device information" submenu

Navigation \blacksquare Diagnostics \rightarrow Device info

Device tag

Navigation \square Diagnostics \rightarrow Device info \rightarrow Device tag

Description Shows the device tag.

User interface Character string comprising numbers, letters and special characters (#32)

Factory setting - none -

Additional information

Read access	Operator
Write access	-

Serial number

Navigation $\blacksquare \Box$ Diagnostics \rightarrow Device info \rightarrow Serial number

Description The serial number is a unique alphanumerical code identifying the device.

It is printed on the nameplate.

In combination with the Operations app it allows to access all device related

documentation.

Additional information

Read access	Operator
Write access	-

Firmware version

Navigation \blacksquare Diagnostics \rightarrow Device info \rightarrow Firmware version

Description Displays the device firmware version installed.

Additional information

Read access	Operator
Write access	-

Firmware CRC

Navigation $\blacksquare \blacksquare$ Diagnostics \rightarrow Device info \rightarrow Firmware CRC

Description Result of the cyclic redundancy check of the firmware.

Additional information

Read access	Operator
Write access	-

Weight and measures configuration CRC

Navigation $\blacksquare \Box$ Diagnostics \rightarrow Device info \rightarrow W&M config CRC

Description Result of the cyclic redundancy check of the weights and measure relevant parameters.

Additional information

Read access	Operator
Write access	-

Device name

Navigation \blacksquare Diagnostics \rightarrow Device info \rightarrow Device name

Description Use this function to display the device name. It can also be found on the nameplate.

Additional information

Read access	Operator
Write access	-

Order code

Navigation \Box Diagnostics \rightarrow Device info \rightarrow Order code

Description Shows the device order code.

Additional information

Read access	Operator
Write access	Service

Extended order code 1 to 3

Navigation $\blacksquare \Box$ Diagnostics \rightarrow Device info \rightarrow Ext. order cd. 1

Description Display the three parts of the extended order code.

User interface Character string comprising numbers, letters and special characters (#20)

Additional information

Read access	Operator
Write access	Service

The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

15.4.3 "Simulation" submenu

Read access Maintenance

Device alarm simulation

Navigation $\blacksquare \Box$ Diagnostics \rightarrow Simulation \rightarrow Dev. alarm sim.

Description Switch the device alarm on and off.

Selection ■ Off

■ On

Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

Diagnostic event simulation

Navigation \blacksquare Diagnostics \rightarrow Simulation \rightarrow Diag. event sim.

Description Select a diagnostic event to simulate this event.

Selection The diagnostic events of the device

Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

i

To terminate the simulation, select **Off**.

Current output N simulation

Navigation \blacksquare Diagnostics \rightarrow Simulation \rightarrow Curr.outp N sim.

Prerequisite ■ The device has an Anlog I/O module.

■ Operating mode (→ 🖺 136) = 4..20mA output or HART slave +4..20mA output

Description Switches the simulation of the current on or off.

Selection ■ Off

■ On

Off

Factory setting

Additional information

Read access	Operator
Write access	Maintenance

Simulation value

Navigation \blacksquare Diagnostics \rightarrow Simulation \rightarrow Simulation value

Prerequisite Current output simulation (→ 🖺 245) = On

Description Defines the current to be simulated.

User entry 3.4 to 23 mA

Factory setting The current at the time the simulation was started.

Additional information

Read access	Operator
Write access	Maintenance

Tankside Monitor NRF81 Index

Index

Symbols	CTSh (Submenu)	
#blank# (Parameter)	CTSh correction value (Parameter)	
	CTSh mode (Parameter) 19	
0 9	Current output N simulation (Parameter) 24	
0 % value (Parameter)	Current span (Parameter) 1	.37
100 % value (Parameter) 133, 141, 164	D	
A	-	ว 1
	Damping factor (Parameter)	
Accessories Communication specific	Date/time (Parameter)	
Service specific	Day (Parameter)	
Actual diagnostics (Parameter)	DD	
Administration (Submenu)	Deactivate SIL/WHG (Wizard)	
Advanced setup (Submenu)	Decimal places 1 (Parameter)	
Air density (Parameter)	Define access code (Parameter)	
Air temperature (Parameter)	Deformation factor (Parameter)	
Air temperature source (Parameter)	Density (Submenu)	
Alarm (Submenu)	Density unit (Parameter)	
Alarm 1 input source (Parameter)	Density value (Parameter) 205, 2	
Alarm 2 input source (Parameter)	Device alarm simulation (Parameter) 24	
Alarm hysteresis (Parameter)	Device Descriptions	54
Alarm mode (Parameter)	Device ID (Parameter)	
Alarm value (Parameter)	Device information (Submenu) 24	42
Alarm value source (Parameter)	Device name (Parameter)	
Ambient pressure (Parameter)	Device replacement	
Analog I/O (Submenu)	Device reset (Parameter)	
Analog input 0% value (Parameter) 142	Device tag (Parameter)	
Analog input 100% value (Parameter)	Diagnostic event simulation (Parameter) 24	
Analog input source (Parameter)	Diagnostic events	84
Analog IP (Submenu)	Diagnostic information	07
Any error (Parameter)	FieldCare	
Application	Diagnostic list	
Application (Submenu)	Diagnostic list (Submenu)	
Assign PV (Parameter) 163 Assign QV (Parameter) 168	Diagnostics	04
Assign SV (Parameter)	Symbols	84
Assign TV (Parameter)	Diagnostics (Menu)	
rissign iv (i urumeter)	Diagnostics 1 to 5 (Parameter)	41
В	Diagnostics event	
Backlight (Parameter)	Digital input source (Parameter)	
Baudrate (Parameter)	Digital Xx-x (Submenu)	
Bus termination (Parameter)	DIP switch	
	see Write protection switch	
C	Discrete 1 selector (Parameter)	60
Calibration temperature (Parameter) 196	Display (Submenu)	
Cleaning	Display damping (Parameter) 22	
Exterior cleaning	Display interval (Parameter)	
Clear alarm (Parameter)	Disposal	
Communication (Submend)	Distance unit (Parameter)	29
Communication interface protocol variant	Document	,
(Parameter)	Function	
Communication status (Parameter)	Document function	4
Configuration (Submenu)	E	
Contact type (Parameter)	Element position (Submenu)	13
Contrast display (Parameter)	Element position 1 to 24 (Parameter)	
Covered tank (Parameter)		

Index Tankside Monitor NRF81

Element temperature (Submenu)	HyTD mode (Parameter) 190
Element temperature 1 to 24 (Parameter)	I
Endress+Hauser services	-
Maintenance	Information (Submenu)
Repair	Input value (Parameter)
Enter access code (Parameter)	Input value % (Parameter)
Error event type (Parameter)	Input value in mA (Parameter)
Error value (Parameter) 140, 215	Input value percent (Parameter)
Event level	Input/output (Submenu)
Explanation	Intended use
Symbols	L
Event text	L alarm (Parameter)
Expected SIL/WHG chain (Parameter) 145, 150	L alarm value (Parameter)
Extended order code 1 (Parameter)	Language (Parameter)
Exterior cleaning	Level (Submenu)
F	Level mapping (Parameter)
	Level source (Parameter)
Failure mode (Parameter)	Line impedance (Parameter)
Firmware version (Parameter)	Linear expansion coefficient (Parameter)
Fixed current (Parameter)	Liquid temp source (Parameter)
Float swap mode (Parameter)	Liquid temperature (Parameter)
Forget device (Parameter)	LL alarm (Parameter)
Forget device (Wizard)	LL alarm value (Parameter)
Format display (Parameter)	LL+L alarm (Parameter)
Tormat display (1 arameter)	Local display
G	see Diagnostics message
Gauge current (Parameter)	see In alarm condition
GP 1 name (Parameter)	Locking status (Parameter)
GP Value 1 (Parameter)	Lower interface level (Parameter)
GP Value 2 (Parameter)	,
GP Value 3 (Parameter)	M
GP Value 4 (Parameter)	Maintenance
GP values (Submenu)	Manual air temperature (Parameter) 176
	Manual density (Parameter) 206, 210
H	Manual liquid temperature (Parameter) 175
H alarm (Parameter)	Manual vapor temperature (Parameter) 177
H alarm value (Parameter) 217	Manual water level (Parameter)
Hardware write protection 49	Maximum probe temperature (Parameter) 134
HART date code (Parameter)	Measured level (Parameter)
HART descriptor (Parameter)	Measured lower density (Parameter) 115
HART Device(s) (Submenu)	Measured materials
HART devices (Submenu)	Measured middle density (Parameter) 115
HART message (Parameter)	Measured upper density (Parameter) 115
HART output (Submenu)	Menu
HART short tag (Parameter)	Diagnostics
Header (Parameter)	Operation
Header text (Parameter)	Setup
HH alarm (Parameter)	Minimum level (Parameter) 206, 211
HH alarm value (Parameter)	Minimum pressure (Parameter) 206, 211
HH+H alarm (Parameter)	Minimum probe temperature (Parameter) 133
Hour (Parameter)	Minute (Parameter)
HTG (Submenu)	Month (Parameter)
HTG mode (Parameter)	N
HTMS (Submenu)	
HTMS mode (Parameter)	NMT element values (Submenu)
Hysteresis (Parameter)	No. of preambles (Parameter)
HyTD (Submenu)	Number of dovices (Parameter)
HyTD correction value (Parameter) 190	Number of devices (Parameter)

Tankside Monitor NRF81 Index

0	Recalibration
Observed density (Parameter)	Remedial measures
Observed density source (Parameter) 179	Calling up
Operating elements	Closing
Diagnostics message	Repair concept
Operating mode (Parameter) 125, 130, 136, 146	Replacing a device
Operating time (Parameter)	Requirements for personnel
Operating time from restart (Parameter) 239	Return
Operation (Menu)	RTD connection type (Parameter)
Operation mode (Parameter)	RTD type (Parameter)
Operational safety	S
Order code (Parameter)	Safety distance (Parameter) 207, 212
Output density (Parameter)	Safety instructions
Output level (Parameter)	Basic
Output pressure (Parameter)	Safety Instructions (XA) 6
Output simulation (Parameter)	Secondary variable (SV) (Parameter)
Output temperature (Parameter)	Separator (Parameter)
Output value (Parameter)	Serial number (Parameter)
Output values (Parameter)	Set date (Parameter)
Output vapor temperature (Parameter)	Setup (Menu)
P	SIL confirmation (Wizard)
P1 (bottom) (Parameter)	Simulation (Submenu)
P1 (bottom) manual pressure (Parameter)	Simulation value (Parameter) 246
P1 (bottom) source (Parameter)	Software ID (Parameter)
P1 absolute / gauge (Parameter)	Starting level (Parameter)
P1 offset (Parameter)	Status signals
P1 position (Parameter)	Stilling well (Parameter)
P1-2 distance (Parameter)	Submenu
P2 (middle) (Parameter)	Administration
P2 (middle) manual pressure (Parameter) 183	Advanced setup
P2 (middle) source (Parameter)	Alarm
P2 absolute / gauge (Parameter)	Analog I/O
P2 offset (Parameter)	Analog IP
P3 (top) (Parameter)	Application
P3 (top) manual pressure (Parameter) 185	Communication
P3 (top) source (Parameter)	Configuration 152, 155, 159, 162
P3 absolute / gauge (Parameter) 186	CTSh
P3 offset (Parameter)	Date / time
P3 position (Parameter)	Density
Parity (Parameter)	Device information
Percent of range (Parameter)	Diagnostic list
Polling address (Parameter)	Digital Xx-x
Pressure (Submenu)	Display
Pressure unit (Parameter)	Element position
Previous diagnostics (Parameter)	Element temperature
Primary variable (PV) (Parameter)	HART Device(s)
Probe position (Parameter)	HART devices
Process value (Parameter)	HART output
Process variable (Parameter)	HTG
Product safety	HTMS
PV mA selector (Parameter)	HyTD
PV source (Parameter)	Information
Q	Input/output
Quaternary variable (QV) (Parameter) 169	Level
2	NMT element values
R	Pressure
Readback value (Parameter)	Simulation

Index Tankside Monitor NRF81

System units Tank calculation Tank configuration Temperature V1 input selector WM550 input selector System components System polling address (Parameter) System units (Submenu)	188 172 175 158 160 101
Tank calculation (Submenu)	110 173 110 111 175 230 167 131 239 241
UUnits preset (Parameter)119,Upper interface level (Parameter)Used for SIL/WHG (Parameter)144,User role (Parameter)	111 150
V V1 address (Parameter)	158 223 159 180 177
Water density (Parameter)	212 174 173
Wire expansion coefficient (Parameter)	
Wizard Deactivate SIL/WHG	129 235 160 160 . 7
Via write protection switch	

Y											
Year (Parameter)	 										232



www.addresses.endress.com