

Description of Device Parameters

Proline Promass 10

Coriolis flowmeter
HART

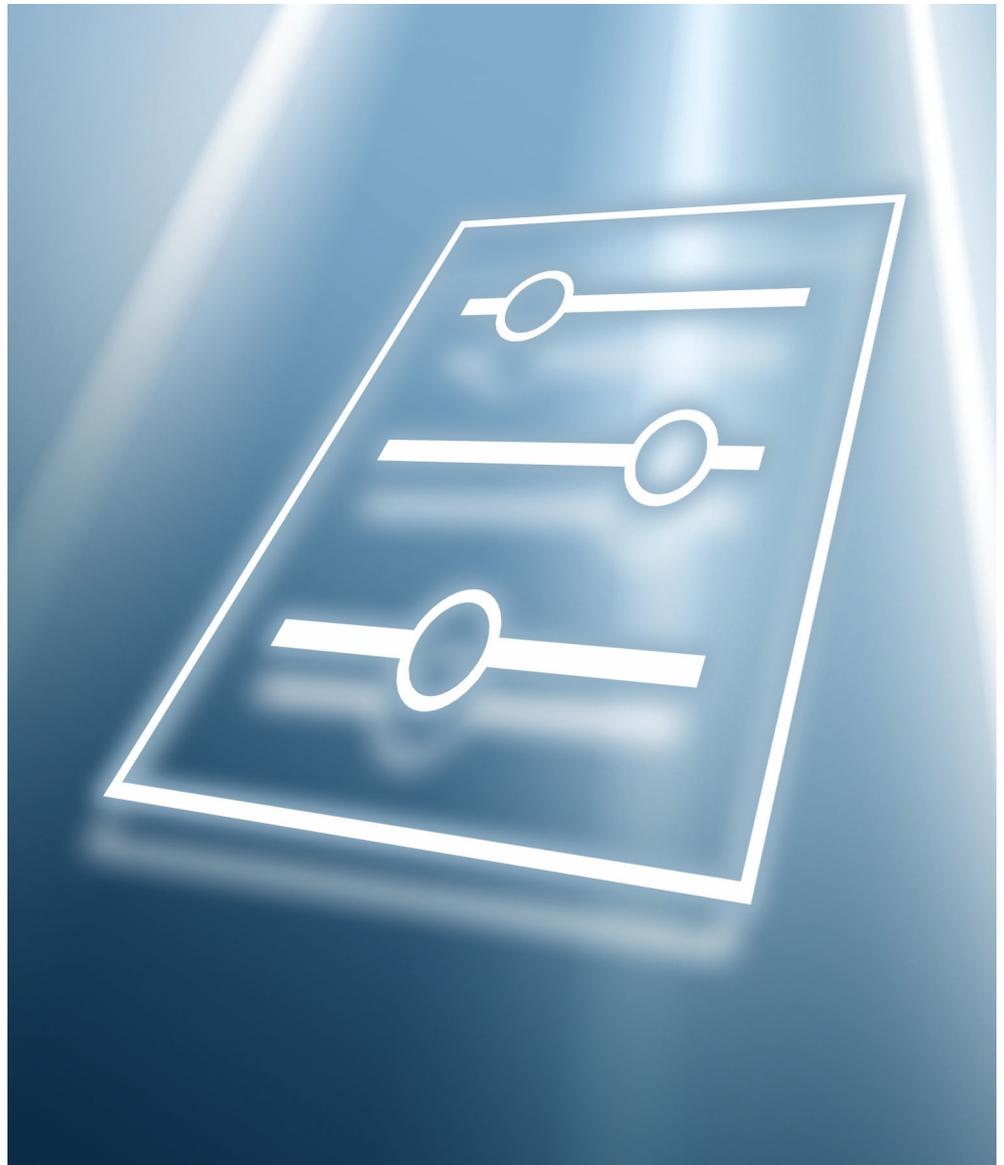


Table of contents

1	About this document	4		
1.1	Document function	4		
1.2	Target group	4		
1.3	Using this document	4		
1.3.1	Symbols	4		
1.3.2	Information on the document structure	4		
1.3.3	Structure of a parameter description ..	5		
1.4	Associated documentation	5		
2	"Guidance" menu	6		
2.1	"Commissioning" wizard	6		
2.1.1	Device identification	9		
2.1.2	Medium	10		
2.1.3	System units	12		
2.1.4	Totalizer 1 to n	17		
2.1.5	Process parameters	20		
2.1.6	Measurement conditions	20		
2.1.7	Current output	24		
2.1.8	Pulse/frequency/switch output	29		
2.1.9	Display	40		
2.1.10	Date/time	43		
3	"Diagnostics" menu	45		
3.1	"Actual diagnostics" submenu	46		
3.2	"Diagnostic list" submenu	48		
3.3	"Simulation" submenu	51		
3.4	"Heartbeat Technology" submenu	56		
3.5	"Diagnostic settings" submenu	57		
3.5.1	"Properties" submenu	57		
3.5.2	"Diagnostic configuration" submenu ..	57		
4	"Application" menu	76		
4.1	"Measured values" submenu	76		
4.1.1	"Totalizer" submenu	78		
4.2	"System units" submenu	80		
4.3	"Totalizers" submenu	86		
4.3.1	"Totalizer handling" submenu	86		
4.3.2	"Totalizer 1 to n" submenu	86		
4.4	"Sensor" submenu	91		
4.4.1	"Process parameters" submenu	91		
4.4.2	"Low flow cut off" submenu	93		
4.4.3	"Partially filled pipe detection" submenu	94		
4.4.4	"Medium settings" submenu	96		
4.4.5	"Two phase flow" submenu	97		
4.4.6	"External compensation" submenu ..	100		
4.4.7	"Corrected volume flow calculation" submenu	100		
4.4.8	"Sensor adjustment" submenu	103		
4.4.9	"Calibration" submenu	108		
4.5	"Current output" submenu	110		
4.6	"Pulse/frequency/switch output 1" submenu .	121		
4.7	"Communication" submenu	139		
4.7.1	"HART configuration" submenu	139		
4.7.2	"Information" submenu	140		
4.7.3	"Output" submenu	142		
5	"System" menu	147		
5.1	"Device management" submenu	148		
5.2	"User management" submenu	150		
5.2.1	"Define access code" wizard	152		
5.3	"Connectivity" submenu	153		
5.3.1	"Bluetooth configuration" submenu ..	153		
5.4	"Date / Time" submenu	154		
5.5	"Information" submenu	156		
5.5.1	"Device" submenu	156		
5.5.2	"Sensor electronic module (ISEM)" submenu	159		
5.5.3	"Display module" submenu	159		
5.6	"Display" submenu	161		
5.7	"Software configuration" submenu	165		
	Index	166		

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menus.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases

1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Symbols

Types of information

-  Preferred procedures, processes or actions
-  Permitted procedures, processes or actions
-  Forbidden procedures, processes or actions
-  Additional information
-  Reference to documentation
-  Reference to page
-  Reference to graphic

1.3.2 Information on the document structure

The parameters of all the operating menus and the commissioning wizard are described in this document.

- **Guidance** menu with the **Commissioning** wizard (→  6), which guides the user automatically through all the device parameters that are required for commissioning
- **Application** menu (→  76)
- **Diagnostics** menu (→  45)
- **System** menu (→  147)

1.3.3 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter = 
Navigation	 Navigation path to the parameter via the operating tool  The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Selection	List of the individual options for the parameter <ul style="list-style-type: none"> ■ Option 1 ■ Option 2
User entry	Input range for the parameter
User interface	Display value/data for the parameter
Additional information	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> ■ On individual options ■ On display values/data ■ On the input range ■ On the parameter function

1.4 Associated documentation

Technical Information	Overview of the device with the most important technical data.
Operating Instructions	All the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal as well as the technical data and dimensions.
Sensor Brief Operating Instructions	Incoming acceptance, transport, storage and mounting of the device.
Transmitter Brief Operating Instructions	Electrical connection and commissioning of the device.
Description of Parameters	Detailed explanation of the menus and parameters.
Safety Instructions	Documents for the use of the device in hazardous areas.
Special Documentation	Documents with more detailed information on specific topics.
Installation Instructions	Installation of spare parts and accessories.


The related documentation is available online:

W@M Device Viewer	On the www.endress.com/deviceviewer website, enter the serial number of the device: nameplate
Endress+Hauser Operations App	<ul style="list-style-type: none"> ▶ Scan the Data Matrix code: nameplate ▶ Enter the serial number of the device: nameplate

2 "Guidance" menu

Main functions for use – from fast and safe commissioning to guided support during operation.


Navigation  Guidance

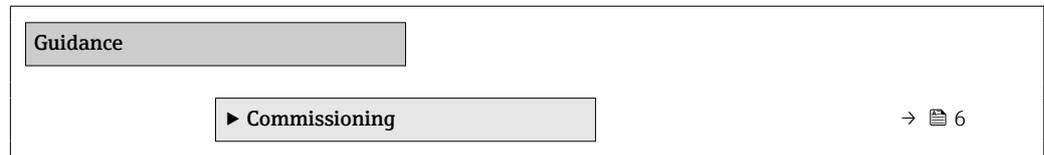

2.1 "Commissioning" wizard

Complete this wizard to commission the device. NOTE: If you exit the wizard beforehand, the changes you made will be saved. For this reason, the device may be in an undefined state! In this case, reset the device to the default settings.

Navigation  Guidance → Commissioning

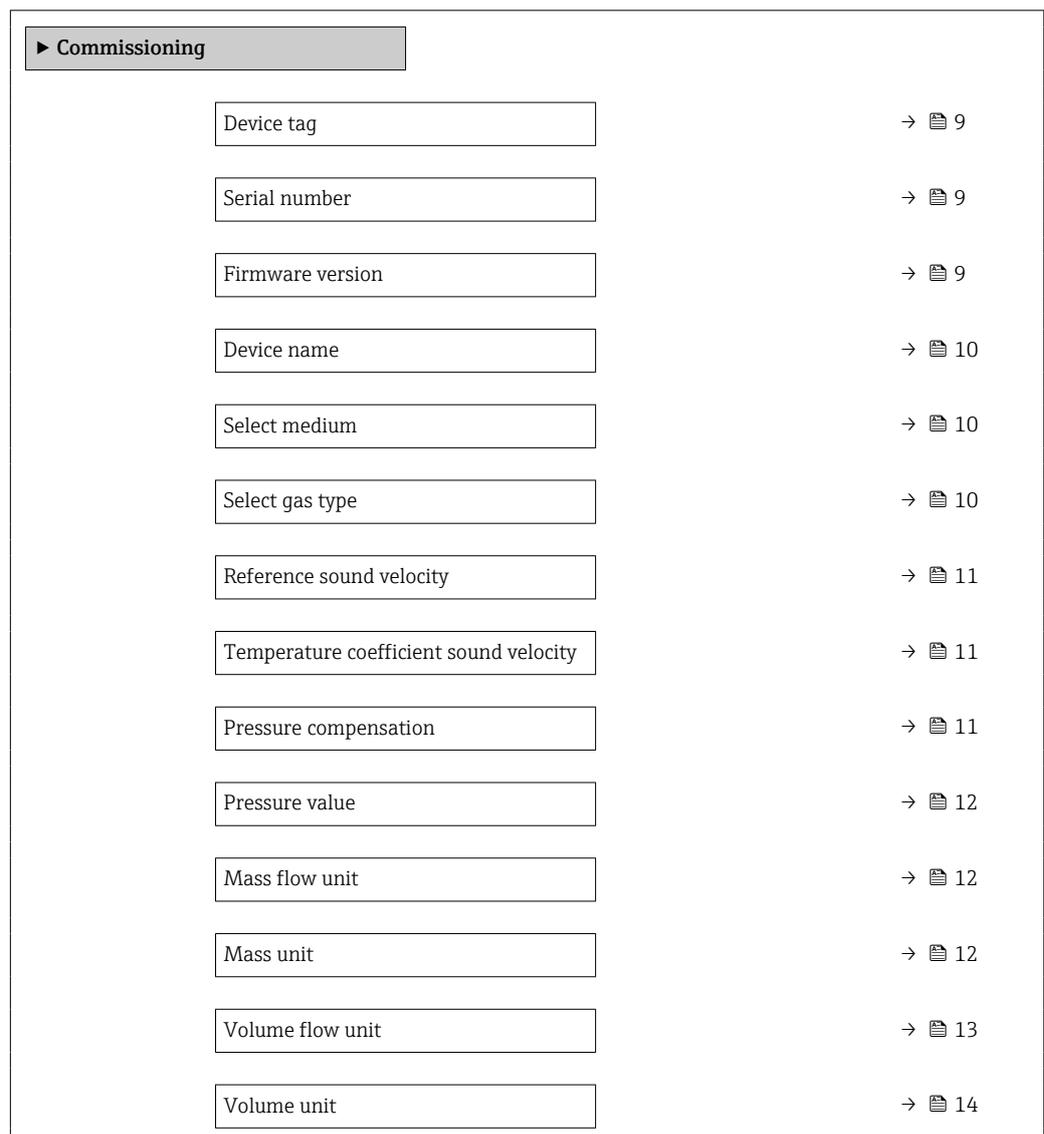

Corrected volume flow unit	→ 15
Corrected volume unit	→ 15
Density unit	→ 16
Reference density unit	→ 16
Temperature unit	→ 16
Pressure unit	→ 17
Assign process variable	→ 17
Unit totalizer 1 to n	→ 17
Totalizer operation mode	→ 19
Failure mode	→ 19
Flow damping time	→ 20
Low flow cut off	→ 21
On value low flow cutoff	→ 22
Off value low flow cutoff	→ 22
Pressure shock suppression	→ 20
Partially filled pipe detection	→ 23
Low value partial filled pipe detection	→ 23
High value partial filled pipe detection	→ 23
Process variable current output	→ 24
Current range output	→ 24
Lower range value output	→ 25
Upper range value output	→ 27
Damping current output	→ 27
Fixed current	→ 27
Failure behavior current output	→ 28

Failure current	→ 28
Operating mode	→ 29
Assign frequency output	→ 31
Minimum frequency value	→ 31
Measuring value at minimum frequency	→ 32
Maximum frequency value	→ 32
Measuring value at maximum frequency	→ 33
Failure mode	→ 33
Failure frequency	→ 33
Assign pulse output 1	→ 34
Pulse width	→ 34
Value per pulse	→ 35
Switch output function	→ 35
Assign diagnostic behavior	→ 36
Assign limit	→ 37
Switch-on value	→ 38
Switch-off value	→ 39
Switch-on delay	→ 39
Switch-off delay	→ 39
Assign status	→ 39
Failure mode	→ 40
Value 1 display	→ 40
Value 2 display	→ 41
Value 3 display	→ 41

Value 4 display	→  42
Display damping	→  42
Time format	→  43
Time zone	→  43
Set date/time	→  44

2.1.1 Device identification

Navigation   Guidance → Commissioning

Device tag	
Navigation	  Guidance → Commissioning → Device tag
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.
User entry	Character string comprising numbers, letters and special characters (32)
Serial number	
Navigation	  Guidance → Commissioning → Serial number
Description	Displays the serial number of the measuring device. The serial number can be used to identify the measuring device and to retrieve further information on the measuring device, such as the related documentation, via the Device Viewer or Operations app. Additional information: The serial number can also be found on the nameplate of the sensor and transmitter.
User interface	Character string comprising numbers, letters and special characters
Firmware version	
Navigation	  Guidance → Commissioning → Firmware version
Description	Displays the device firmware version installed.
User interface	Character string comprising numbers, letters and special characters

Device name	
Navigation	 Guidance → Commissioning → Device name
Description	Displays the name of the transmitter. Additional information: The name can also be found on the transmitter's nameplate.
User interface	Character string comprising numbers, letters and special characters

2.1.2 Medium

Navigation  Guidance → Commissioning

Select medium 	
Navigation	 Guidance → Commissioning → Select medium
Description	Select the medium type.
Selection	<ul style="list-style-type: none"> ▪ Liquid ▪ Gas

Select gas type 	
Navigation	 Guidance → Commissioning → Select gas type
Prerequisite	In the Select medium parameter in the Medium settings submenu, the Gas option is selected.
Description	Select the type of gas. Additional information: To achieve accurate measurements, it is necessary to specify the gas.
Selection	<ul style="list-style-type: none"> ▪ Air ▪ Ammonia NH3 ▪ Argon Ar ▪ Sulfur hexafluoride SF6 ▪ Oxygen O2 ▪ Ozone O3 ▪ Nitrogen oxide NOx ▪ Nitrogen N2 ▪ Nitrous oxide N2O ▪ Methane CH4 ▪ Hydrogen H2

- Helium He
- Hydrogen chloride HCl
- Hydrogen sulfide H₂S
- Ethylene C₂H₄
- Carbon dioxide CO₂
- Carbon monoxide CO
- Chlorine Cl₂
- Butane C₄H₁₀
- Propane C₃H₈
- Propylene C₃H₆
- Ethane C₂H₆
- Others

Reference sound velocity

Navigation	  Guidance → Commissioning → Sound velocity
Prerequisite	In the Select gas type parameter in the Medium settings submenu, the Others option is selected.
Description	Enter sound velocity of the gas at 0 °C (32 °F).
User entry	1 to 99 999.9999 m/s

Temperature coefficient sound velocity

Navigation	  Guidance → Commissioning → Temp. coeff. SV
Prerequisite	In the Select gas type parameter in the Medium settings submenu, the Others option is selected.
Description	Enter the temperature coefficient for the gas sound velocity.
User entry	Positive floating-point number

Pressure compensation

Navigation	  Guidance → Commissioning → Pressure compen.
Description	Select the pressure compensation type.
Selection	<ul style="list-style-type: none"> ■ Off ■ Fixed value

Pressure value



Navigation

Guidance → Commissioning → Pressure value

Prerequisite

In the **Pressure compensation** parameter in the **External compensation** submenu, the **Fixed value** option is selected.

Description

Enter fixed value for the pressure compensation.

Additional information:

The applicable unit of measure is specified in the "System units" submenu.

User entry

Positive floating-point number

2.1.3 System units

Navigation

Guidance → Commissioning

Mass flow unit



Navigation

Guidance → Commissioning → Mass flow unit

Description

Select mass flow unit.

Selection

SI units

- g/s
- g/min
- g/h
- g/d
- kg/s
- kg/min
- kg/h
- kg/d
- t/s
- t/min
- t/h
- t/d

US units

- oz/s
- oz/min
- oz/h
- oz/d
- lb/s
- lb/min
- lb/h
- lb/d
- STon/s
- STon/min
- STon/h
- STon/d

Mass unit



Navigation

Guidance → Commissioning → Mass unit

Description

Select mass unit.

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

Volume flow unit**Navigation**

  Guidance → Commissioning → Volume flow unit

Description

Select volume flow unit.

Selection*SI units*

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units

- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- MMft³/s
- MMft³/min
- MMft³/h
- Mft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)

Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Volume unit**Navigation**

Guidance → Commissioning → Volume unit

Description

Select volume unit.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	<ul style="list-style-type: none"> ■ cm³ ■ dm³ ■ m³ ■ ml ■ l ■ hl ■ Ml Mega 	<ul style="list-style-type: none"> ■ af ■ ft³ ■ Mft³ ■ fl oz (us) ■ gal (us) ■ kgal (us) ■ Mgal (us) ■ bbl (us;oil) ■ bbl (us;liq.) ■ bbl (us;beer) ■ bbl (us;tank) 	<ul style="list-style-type: none"> ■ gal (imp) ■ Mgal (imp) ■ bbl (imp;beer) ■ bbl (imp;oil)

Corrected volume flow unit


Navigation Guidance → Commissioning → Cor.volflow unit

Description Select corrected volume flow unit.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	<ul style="list-style-type: none"> ■ Nl/s ■ Nl/min ■ Nl/h ■ Nl/d ■ Nhl/s ■ Nhl/min ■ Nhl/h ■ Nhl/d ■ Nm³/s ■ Nm³/min ■ Nm³/h ■ Nm³/d ■ Sl/s ■ Sl/min ■ Sl/h ■ Sl/d ■ Sm³/s ■ Sm³/min ■ Sm³/h ■ Sm³/d 	<ul style="list-style-type: none"> ■ Sft³/s ■ Sft³/min ■ Sft³/h ■ Sft³/d ■ Sgal/s (us) ■ Sgal/min (us) ■ Sgal/h (us) ■ Sgal/d (us) ■ Sbbbl/s (us;liq.) ■ Sbbbl/min (us;liq.) ■ Sbbbl/h (us;liq.) ■ Sbbbl/d (us;liq.) ■ MMSft³/s ■ MMSft³/min ■ MMSft³/h ■ MMSft³/d ■ Sbbbl/s (us;oil) ■ Sbbbl/min (us;oil) ■ Sbbbl/h (us;oil) ■ Sbbbl/d (us;oil) 	<ul style="list-style-type: none"> ■ Sgal/s (imp) ■ Sgal/min (imp) ■ Sgal/h (imp) ■ Sgal/d (imp)

Corrected volume unit


Navigation Guidance → Commissioning → Corr. vol. unit

Description Select corrected volume unit.

Selection

SI units

- NI
- Nhl
- Nm³
- Sl
- Sm³

US units

- Sft³
- MMSft³
- Sgal (us)
- Sbbbl (us;liq.)
- Sbbbl (us;oil)

Imperial units

- Sgal (imp)

Density unit



Navigation

Guidance → Commissioning → Density unit

Description

Select density unit.

Selection

SI units

- g/cm³
- g/m³
- g/ml
- kg/l
- kg/dm³
- kg/m³

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

Imperial units

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Reference density unit



Navigation

Guidance → Commissioning → Ref. dens. unit

Description

Select reference density unit.

Selection

SI units

- kg/Nm³
- kg/NI
- g/Scm³
- kg/Sm³
- RD15°C
- RD20°C

US units

- lb/Sft³
- RD60°F

Temperature unit



Navigation

Guidance → Commissioning → Temperature unit

Description

Select temperature unit.

Selection

SI units

- °C
- K

US units

- °F
- °R

Pressure unit


Navigation Guidance → Commissioning → Pressure unit

Description Select pressure unit.

Selection

<i>SI units</i>	<i>US units</i>
▪ MPa a	▪ psi a
▪ MPa g	▪ psi g
▪ kPa a	
▪ kPa g	
▪ Pa a	
▪ Pa g	
▪ bar	
▪ bar g	

2.1.4 Totalizer 1 to n

Navigation Guidance → Commissioning

Assign process variable


Navigation Guidance → Commissioning → Assign variable

Description Select process variable for totalizer.
 Additional information:
 If the option selected is changed, the device resets the totalizer to "0".

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow

Unit totalizer 1 to n


Navigation Guidance → Commissioning → Unit totalizer 1 to n

Prerequisite A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description Select process variable totalizer unit.

Selection

SI units

- g^{*}
- kg^{*}
- t^{*}

US units

- oz^{*}
- lb^{*}
- STon^{*}

* Visibility depends on order options or device settings

or

SI units

- cm³^{*}
- dm³^{*}
- m³^{*}
- ml^{*}
- l^{*}
- hl^{*}
- Ml Mega^{*}

US units

- af^{*}
- ft³^{*}
- Mft³^{*}
- fl oz (us)^{*}
- gal (us)^{*}
- kgal (us)^{*}
- Mgal (us)^{*}
- bbl (us;liq.)^{*}
- bbl (us;beer)^{*}
- bbl (us;oil)^{*}
- bbl (us;tank)^{*}

Imperial units

- gal (imp)^{*}
- Mgal (imp)^{*}
- bbl (imp;beer)^{*}
- bbl (imp;oil)^{*}

* Visibility depends on order options or device settings

or

SI units

- Nl^{*}
- Nhl^{*}
- Nm³^{*}
- Sl^{*}
- Sm³^{*}

US units

- Sft³^{*}
- MMSft³^{*}
- Sgal (us)^{*}
- Sbbbl (us;liq.)^{*}
- Sbbbl (us;oil)^{*}

Imperial units

- Sgal (imp)^{*}

* Visibility depends on order options or device settings

or

Other units

- None^{*}

* Visibility depends on order options or device settings

Additional information

Description

The unit is selected separately for each totalizer. The unit is independent of the option selected in the **System units** submenu (→ 80).

Selection

The selection is dependent on the process variable selected in the **Assign process variable** parameter (→ 17).

Totalizer operation mode 	
Navigation	  Guidance → Commissioning → Operation mode
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Select totalizer calculation mode.
Selection	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Net flow total option The flow values in the forward and reverse flow directions are totalized and netted against each other. Net flow is recorded in the flow direction. ■ Forward flow total option Only the flow in the forward flow direction is totalized. ■ Reverse flow total option Only the flow in the reverse flow direction is totalized (= reverse flow quantity).
Failure mode 	
Navigation	  Guidance → Commissioning → Failure mode
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Specify how the totalizer should behave in the event of a device alarm. Additional information: The failsafe mode that applies to any other totalizers or outputs is specified separately in other parameters and is not impacted by this setting.
Selection	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Stop option The totalizer is stopped in the event of a device alarm. ■ Actual value option The totalizer continues to totalize based on the current value measured; the device alarm is ignored. ■ Last valid value option The totalizer continues to totalize based on the last valid value measured before the device alarm occurred.

2.1.5 Process parameters

Navigation  Guidance → Commissioning

Flow damping time

Navigation  Guidance → Commissioning → FlowDampingTime

Description Enter time constant for flow damping (PT1 element).
 - Value = 0: No damping
 - Value > 0: Damping increases
 Additional information:
 Damping is implemented by means of a proportional transmission behavior with first order delay (PT1 element).

User entry 0 to 99.9 s

2.1.6 Measurement conditions

Pressure shock suppression

Navigation  Guidance → Commissioning

Pressure shock suppression

Navigation  Guidance → Commissioning → Pres. shock sup.

Description Enter time frame for signal suppression (= pressure shock suppression active), for example to prevent the device from registering flow movements in the pipe when a valve is closed.

Additional information:

Pressure shock suppression is activated when the flow rate drops below the on value for low flow cutoff. Output values when pressure shock suppression is active:

- Flow: 0

- Totalizer: Last valid value

Pressure shock suppression is deactivated when:


- The time frame specified has elapsed and

- Flow exceeds the off value for low flow cutoff

User entry 0 to 100 s

Additional information *Example*

When a valve is closed, momentarily strong fluid movements may occur in the pipeline, which are registered by the device. These totalized flow values lead to a false totalizer status, particularly during batching processes.

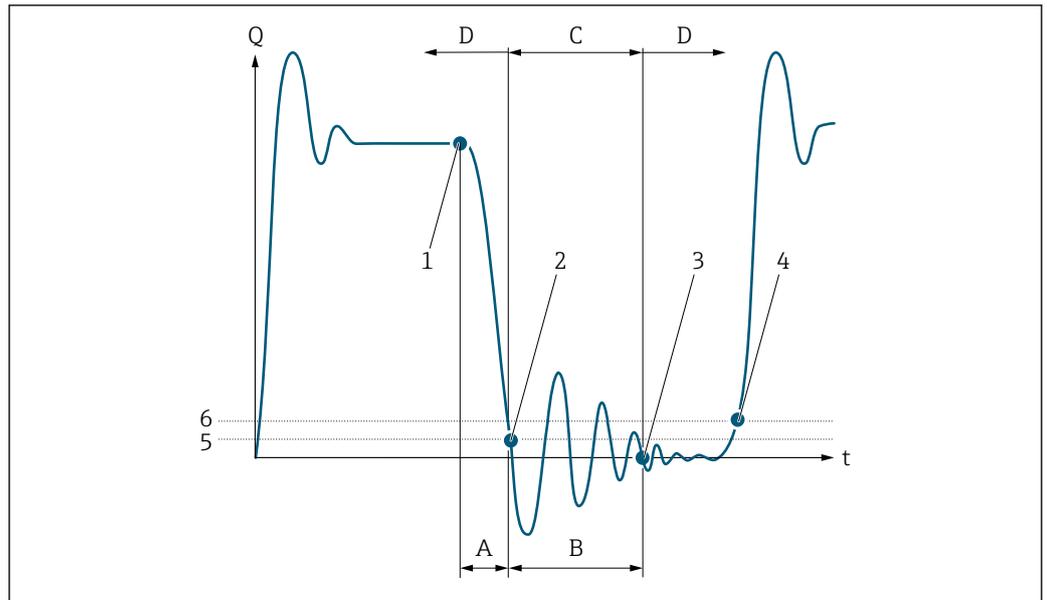

A0012888

- Q Flow
- t Time
- A After run
- B Pressure shock
- C Pressure shock suppression active as specified by the time entered
- D Pressure shock suppression inactive
- 1 Valve closes
- 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
- 3 The time entered has elapsed: pressure shock suppression is deactivated
- 4 The actual flow value is now displayed and output
- 5 On-value for low flow cut off
- 6 Off-value for low flow cut off

Low flow cut off

Navigation  Guidance → Commissioning

Low flow cut off




Navigation  Guidance → Commissioning → Low flow cut off

Description Select process variable for low flow cut off to activate low flow cut off.

- Selection
- Off
 - Mass flow
 - Volume flow
 - Corrected volume flow

Additional information Description

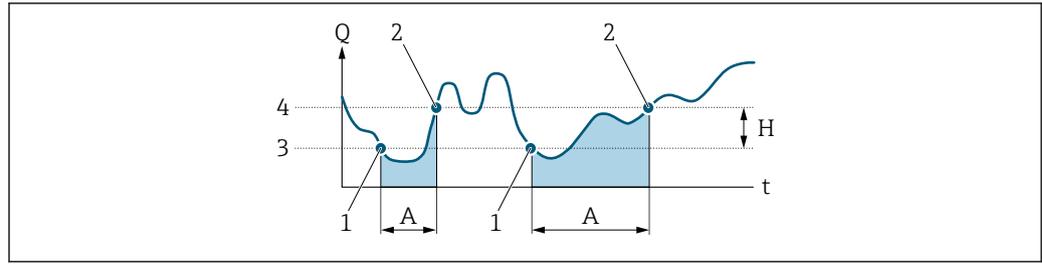

A0012887

- Q* Flow
- t* Time
- H* Hysteresis
- A* Low flow cut off active
- 1* Low flow cut off is activated
- 2* Low flow cut off is deactivated
- 3* On-value entered
- 4* Off-value entered

On value low flow cutoff



Navigation Guidance → Commissioning → On value

Description Enter on value to switch on low flow cut off.
 Value = 0: No low flow cut off
 Value > 0: Low flow cut off is activated

User entry Positive floating-point number

Off value low flow cutoff



Navigation Guidance → Commissioning → Off value

Description Enter off value to switch off low flow cut off. The off value is entered as a positive hysteresis with respect to the on value.

User entry 0 to 100.0 %

Partially filled pipe detection

Navigation   Guidance → Commissioning

Partially filled pipe detection

Navigation	  Guidance → Commissioning → Partial pipe det
Description	Select process variable for detection of an empty or partially filled pipe. NOTE Due to low density, deactivate partially filled pipe detection for a gas!
Selection	<ul style="list-style-type: none"> ■ Off ■ Density ■ Calculated reference density

Low value partial filled pipe detection

Navigation	  Guidance → Commissioning → Low value
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Empty pipe detection submenu.
Description	Enter the lower limit value for the selected process variable. If the measured value drops below the limit value, diagnostic message "862 Partly filled pipe" is generated. Additional information: - This setting applies only if the "Density unit" parameter is not set to °API. - The lower limit value must be lower than the upper limit value ("High value partial filled pipe detection" parameter).
User entry	Signed floating-point number

High value partial filled pipe detection

Navigation	  Guidance → Commissioning → High value
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Empty pipe detection submenu.
Description	Enter the upper limit value for the selected process variable. If the measured value exceeds the limit value, diagnostic message "862 Partly filled pipe" is generated. Additional information: This setting applies only if the "Density unit" parameter is set to °API.

User entry Signed floating-point number

2.1.7 Current output

Navigation  Guidance → Commissioning

Process variable current output

Navigation  Guidance → Commissioning → Proc.var. outp

Description Select process variable for current output

Selection

- Off *
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Index inhomogeneous medium
- Exciter current 0
- Oscillation frequency 0
- Oscillation amplitude 0 *
- Frequency fluctuation 0 *
- Oscillation damping 0
- Oscillation damping fluctuation 0 *
- Signal asymmetry
- HBSI *
- Electronics temperature

Current range output

Navigation  Guidance → Commissioning → Curr.range out

Description Select the current range for the measured value output and the upper and lower fault condition signal level.

Additional information:

- The measured value range is specified in the "Lower range value output" parameter and the "Upper range value output" parameter.
- If the measured value lies outside the scaled measured value range, diagnostic message "441 Current output faulty" is generated.
- In the event of a device alarm, the current output adopts the behavior specified in the "Failure behavior current output" parameter.

* Visibility depends on order options or device settings

- Selection**
- 4...20 mA NE (3.8...20.5 mA)
 - 4...20 mA US (3.9...20.8 mA)
 - 4...20 mA (4... 20.5 mA)
 - Fixed value


Additional information

Selection

- **4...20 mA NE (3.8...20.5 mA)** option
Select this option to set the current range in accordance with NAMUR recommendation NE43.
- **Fixed value** option
Select this option to set the current output to a current value instead of a range.

The current value is defined in the **Fixed current** parameter (→  27).

The graphic shows the relationship between the current range for the output of the process value and the lower and upper alarm levels:

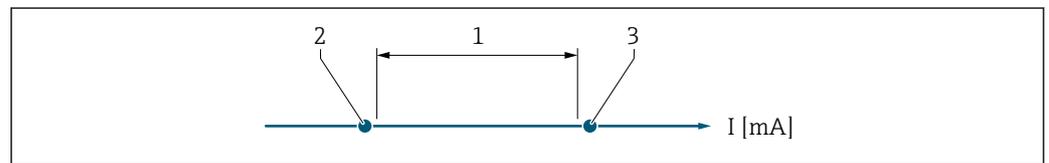

A0034351

- 1 Current range for process value
- 2 Lower level for signal on alarm
- 3 Upper level for signal on alarm

Selection (current range for process value)	Lower level for signal on alarm	Upper level for signal on alarm
4...20 mA NE (3.8...20.5 mA)	< 3.6 mA	> 21.5 mA
4...20 mA US (3.9...20.8 mA)		
4...20 mA (4... 20.5 mA)		

Lower range value output



Navigation

  Guidance → Commissioning → Low.range outp

Prerequisite

In the **Current range output** parameter, one of the following options is selected:

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)

Description

Enter lower range value for the measured value range.

Additional information:

- Depending on the setting selected for the "Measuring mode current output" parameter, the value specified for this parameter and the "Upper range value output" parameter must have the same algebraic sign or not.
- As a rule, the lower range value is scaled to be lower than the upper range value. As a result, the behavior of the current output is proportional to the process variable assigned. If the lower range value is scaled to be higher than the upper range value, then the behavior of the current output will be inversely proportional to the process variable assigned.

User entry


Signed floating-point number

Additional information

Examples of the behavior, depending on the option selected in the **Measuring mode current output** parameter (→  111).

Example: Measuring mode with "Forward flow" option

- **Lower range value output** parameter (→  25) = not equal to zero flow (e.g. -250 m³/h)
- **Upper range value output** parameter (→  27) = not equal to zero flow (e.g. +750 m³/h)
- Calculated current value = 8 mA at zero flow

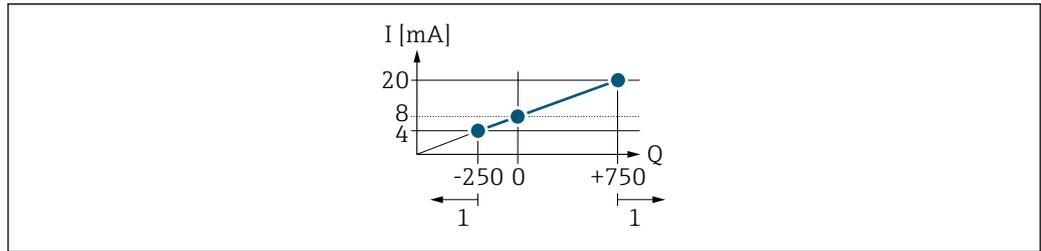


A0013757

- Q Flow
 I Current
 1 Measuring range is exceeded or undershot

The linear operational range of the measuring device is defined by the values entered for the **Lower range value output** parameter (→  25) and **Upper range value output** parameter (→  27), and by the selected current range.

Example: Measuring mode with the "Forward/Reverse flow" option

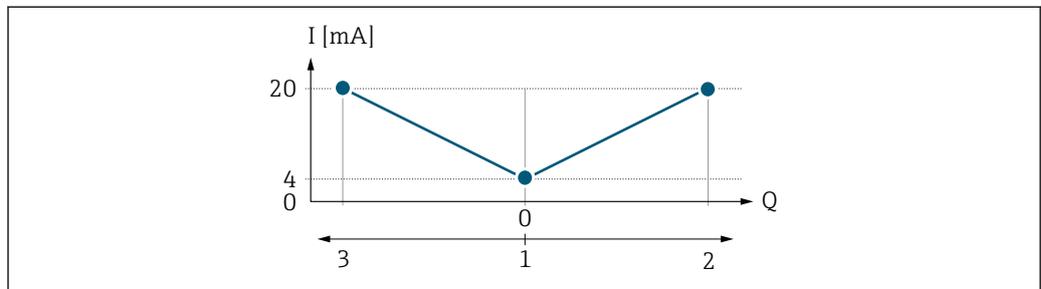

A0013758

- Q Flow
 I Current
 1 Value assigned to 0/4 mA current
 2 Forward flow
 3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **Lower range value output** parameter (→  25) and **Upper range value output** parameter (→  27) must have the same algebraic sign.

The value for the **Upper range value output** parameter (→  27) (e.g. reverse flow) corresponds to the mirrored value for the **Upper range value output** parameter (→  27) (e.g. forward flow).

Example: Measuring mode with the "Reverse flow compensation" option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s.

Upper range value output


Navigation	Guidance → Commissioning → Upp.range outp
Prerequisite	In the Current range output parameter, one of the following options is selected: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA)
Description	Enter upper range value for the measured value range.
User entry	Signed floating-point number
Additional information	Examples of the behavior, depending on the option selected in the Measuring mode current output parameter: Lower range value output parameter (→ 25):

Damping current output


Navigation	Guidance → Commissioning → Damp.curr.outp
Prerequisite	A process variable is selected in the Process variable current output parameter and one of the following options is selected in the Current range output parameter: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA)
Description	Enter time constant (PT1 element) to set the reaction time of the output signal to fluctuations in the measured value caused by process conditions. Additional information: <ul style="list-style-type: none"> - The smaller the time constant the faster the output reacts to fluctuations in the measured value. - If the time constant is 0, damping is deactivated.
User entry	0.0 to 999.9 s

Fixed current



Navigation	Guidance → Commissioning → Fixed current
Prerequisite	In the Current range output parameter in the Current output 1 submenu, the Fixed value option is selected.
Description	Enter the value for the "Fixed value" option.
User entry	3.59 to 21.5 mA

Failure behavior current output 	
Navigation	  Guidance → Commissioning → Fail.behav.out
Prerequisite	A process variable is selected in the Process variable current output parameter and one of the following options is selected in the Current range output parameter: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA)
Description	Specify how the output should behave in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Min. ■ Max. ■ Last valid value ■ Actual value ■ Fixed value
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Min. option The current output outputs the lower fault condition signal level for the specified current range. Additional information: The current range is specified in the "Current range output " parameter. ■ Max. option The current output outputs the upper fault condition signal level for the specified current range. Additional information: The current range is specified in the "Current range output " parameter. ■ Last valid value option The current output outputs the last valid value measured before the device alarm occurred. ■ Actual value option The current output outputs the flow value currently measured. The device alarm is ignored. ■ Fixed value option The current output outputs the value specified. Additional information: The value is specified in the "Failure current " parameter.
Failure current 	
Navigation	  Guidance → Commissioning → Fail. current
Prerequisite	In the Failure behavior current output parameter in the Current output 1 submenu, the Fixed value option is selected.
Description	Enter the value for the "Fixed value" option in the "Failure behavior current output " parameter.
User entry	3.59 to 21.5 mA

2.1.8 Pulse/frequency/switch output

Navigation  Guidance → Commissioning

Operating mode 	
Navigation	 Guidance → Commissioning → Operating mode
Description	Select the operating mode for the output.
Selection	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Pulse option Quantitatively proportional pulse with pulse width to be configured. Whenever the pulse value for the specified process variable has been reached, a pulse is emitted, the duration of which is set within the "Pulse width" parameter. Additional information: The process variable for the pulse output is specified in the "Assign pulse output" parameter. ■ Frequency option The output frequency is proportional to the value for the process variable assigned, with a pulse-to-interval ratio of 1:1. Additional information: The process variable for the frequency output is specified in the "Assign frequency output" parameter. ■ Switch option Indicates when the state of the device changes, e.g. when a specified limit value is reached or an alarm or warning is triggered. Additional information: <ul style="list-style-type: none"> - The switch output can be in one of two states: either it is conductive or it is non-conductive. - When the function assigned to the switch output is triggered, the switch output will depending on the output configuration either be continuously conductive or continuously non-conductive. - The switch output is used to display diagnostic information at the system level, e.g. by connecting a lamp that lights up when the function assigned is triggered. <p><i>"Pulse" option</i></p> <p>Example</p> <ul style="list-style-type: none"> ■ Flow rate approx. 100 g/s ■ Pulse value 0.1 g ■ Pulse width 0.05 ms ■ Pulse rate 1 000 pulse/s

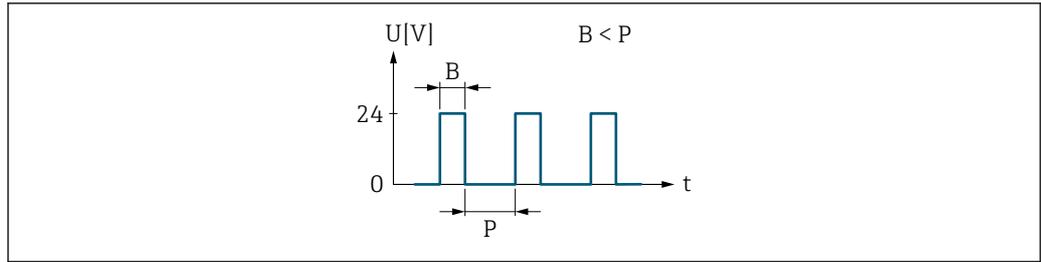

A0026883

1 Quantity-proportional pulse (pulse value) with pulse width to be configured

- B Pulse width entered
- P Pauses between the individual pulses


"Frequency" option

Example

- Flow rate Q approx. 100 g/s
- Min. frequency (f_{min}) 0 Hz
- Max. frequency (f_{max}) 1000 Hz
- Flow rate at min. frequency (Q_{min}) 0 g/s
- Flow rate at max. frequency (Q_{max}) 1000 g/s
- Output frequency (f_{out}) approx. 100 Hz

$$f_{out} = f_{min} + Q \times [(f_{max} - f_{min}) / (Q_{max} - Q_{min})] =$$

$$0 \text{ Hz} + 100 \text{ g/s} \times [(1000 \text{ Hz} - 0 \text{ Hz}) / (1000 \text{ g/s} - 0 \text{ g/s})] = \mathbf{100 \text{ Hz}}$$

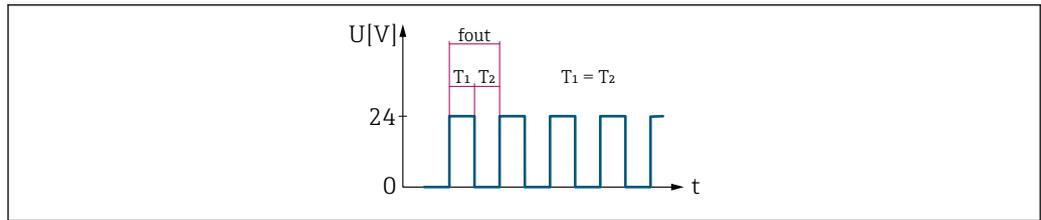


A0026886

2 Flow-proportional frequency output

"Switch" option

Example

Alarm response without alarm

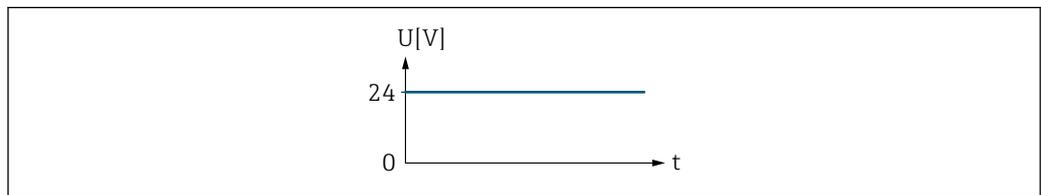


A0026884

3 No alarm, high level

Example

Alarm response in case of alarm

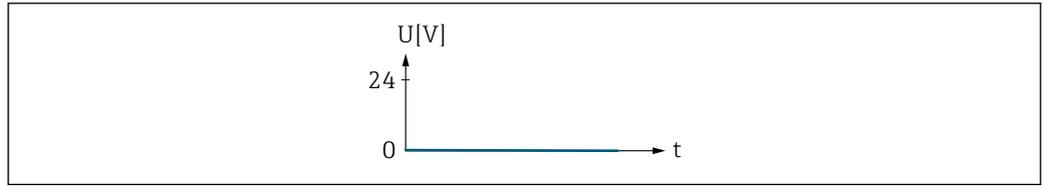

A0026885

4 Alarm, low level

Frequency output

Navigation Guidance → Commissioning

Assign frequency output

Navigation	Guidance → Commissioning → Assign freq.
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	Select process variable for frequency output.
Selection	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Temperature ■ Density * ■ Index inhomogeneous medium ■ Exciter current 0 ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry ■ HBSI * ■ Electronics temperature

Minimum frequency value

Navigation	Guidance → Commissioning → Min. freq. value
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.

* Visibility depends on order options or device settings

Description	Enter the minimum frequency for the frequency range. Additional information: The lower range value for the measured value range is specified in the "Measuring value at minimum frequency" parameter.
User entry	0.0 to 10 000.0 Hz

Measuring value at minimum frequency


Navigation	Guidance → Commissioning → Val. at min.freq
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	Enter lower range value for the measured value range. Additional information: - Depending on the setting selected for the "Measuring mode" parameter, the value specified for this parameter and the "Measuring value at maximum frequency" parameter must have the same algebraic sign or not. - As a rule, the lower range value is scaled to be lower than the upper range value. As a result, the behavior of the frequency output is proportional to the process variable assigned. If the lower range value is scaled to be higher than the upper range value, then the behavior of the frequency output will be inversely proportional to the process variable assigned.
User entry	Signed floating-point number

Maximum frequency value


Navigation	Guidance → Commissioning → Max. freq. value
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	Enter the maximum frequency for the measured value output. Additional information: The upper range value for the measured value range that corresponds to the maximum frequency is specified in the "Measuring value at maximum frequency" parameter.
User entry	0.0 to 10 000.0 Hz

Measuring value at maximum frequency


Navigation	Guidance → Commissioning → Val. at max.freq
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	Enter upper range value for the measured value range.
User entry	Signed floating-point number

Failure mode


Navigation	Guidance → Commissioning → Failure mode
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	Specify how the output should behave in the event of a device alarm. Additional information: For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ Defined value ▪ 0 Hz
Additional information	<i>Selection</i> <ul style="list-style-type: none"> ▪ Actual value option The frequency output outputs the flow value currently measured. ▪ Defined value option The frequency output outputs the value specified. Additional information: The value is specified in the "Failure frequency" parameter. ▪ 0 Hz option In the event of a device alarm, the frequency output outputs 0 Hz.

Failure frequency


Navigation	Guidance → Commissioning → Failure freq.
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	Enter the value for the "Defined value" option in the "Failure mode" parameter.
User entry	0.0 to 12 500.0 Hz

Pulse output

Navigation  Guidance → Commissioning

Assign pulse output 1 **Navigation**

 Guidance → Commissioning → Assign pulse 1

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description

Select process variable for pulse output.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow

Pulse width **Navigation**

 Guidance → Commissioning → Pulse width

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description

Specify the duration of the output pulse.

Additional information:

The maximum pulse rate is defined by $f_{max} = 1 / (2 \times \text{pulse width})$. The interval between two pulses (P) is at least as long as the specified pulse width (B).

The maximum flow is defined by $Q_{max} = f_{max} \times \text{pulse value}$. If the flow exceeds these limit values, the measuring device displays the diagnostic message "443 Pulse output faulty".


Example:

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

User entry

0.05 to 2 000 ms

Additional information *Description*

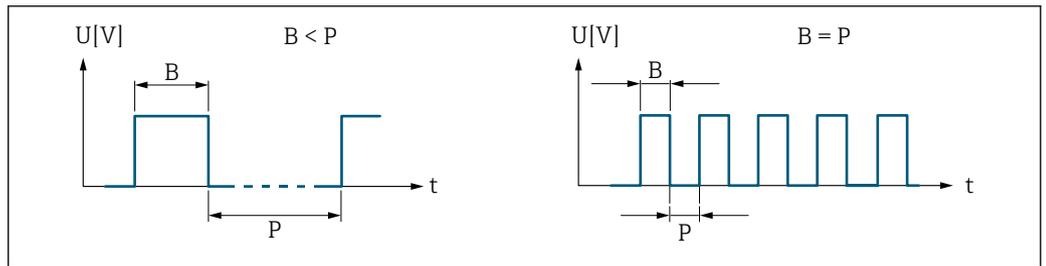

B Pulse width entered
P Pauses between the individual pulses

A0026882

Value per pulse



Navigation Guidance → Commissioning → Value per pulse

Prerequisite In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description Enter the measured value to which a pulse corresponds.
 Additional information:
 Weighting of the pulse output with a quantity.
 The lower the pulse value, the
 – better the resolution.
 – higher the frequency of the pulse response.

User entry Signed floating-point number

Switch output

Navigation Guidance → Commissioning

Switch output function



Navigation Guidance → Commissioning → Switch out funct

Prerequisite In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description Assign a function to the switch output.
 Additional information:
 - The state of the switch output (on or off) when the assigned function is triggered can be inverted in the "Invert output signal" parameter
 - The "Invert output signal" parameter is not available for all devices.

Selection	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Status
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The switch output is permanently switched off (open, non-conductive). ■ On option The switch output is permanently switched on (closed, conductive). ■ Diagnostic behavior option The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category. ■ Limit option The switch output is switched on (closed, conductive), if a limit value specified for the process variable is reached. ■ Flow direction check option The switch output is switched on (closed, conductive), when the flow direction changes (forward or reverse flow). ■ Status option The switch output is switched on (closed, conductive) to indicate the device status for the selected detection method, e.g. partially filled pipe detection or low flow cut off.

Assign diagnostic behavior

Navigation	  Guidance → Commissioning → Assign diag. beh
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.
Description	The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.
Selection	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Alarm option The switch output is only switched on for diagnostic events of the "Alarm" category. ■ Alarm or warning option The switch output is switched on for diagnostic events of the "Alarm" or "Warning" category. ■ Warning option The switch output is only switched on for diagnostic events of the "Warning" category.

Assign limit
**Navigation**

Guidance → Commissioning → Assign limit

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description

Select the process variable to monitor in case the specified limit value is exceeded. If a limit value for the selected process variable is exceeded, the output is switched on.

Selection


- Off
- Mass flow
- Volume flow
- Density*
- Corrected volume flow
- Temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Oscillation damping

Additional information

Switch-on point > switch-off point

Behavior of the status output if switch-on point > switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

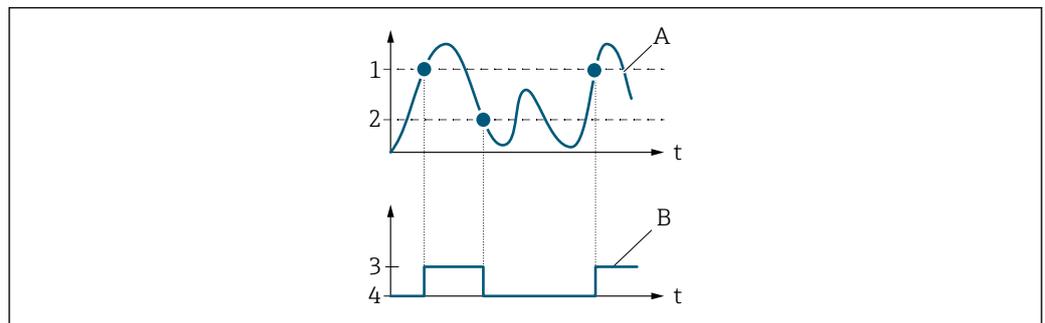

A0026891


- 1 Switch-on point
- 2 Switch-off point
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point < switch-off point

Behavior of the status output if switch-on point < switch-off point:

- Process variable < switch-on point: transistor is conductive
- Process variable > switch-off point: transistor is not conductive

* Visibility depends on order options or device settings

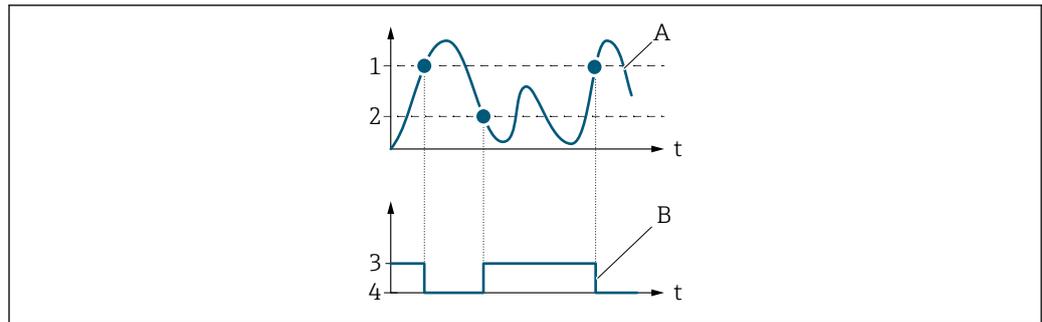


A0026892

- 1 Switch-on point
- 2 Switch-off point
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point = switch-off point

Behavior of the status output if switch-on point = switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

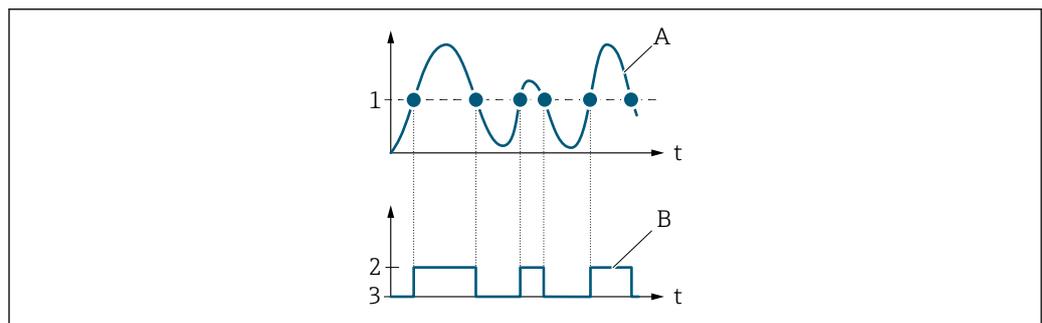

A0026893

- 1 Switch-on point = switch-off point
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value



Navigation

Guidance → Commissioning → Switch-on value

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description

Enter limit value for the switch-on point (process variable > switch-on value = closed, conductive).

Additional information:

To use a hysteresis: Switch-on point > Switch-off point.

User entry

Signed floating-point number

Switch-off value		
Navigation	  Guidance → Commissioning → Switch-off value	
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.	
Description	Enter limit value for the switch-off point (process variable < switch-off value = open, non-conductive). Additional information: To use a hysteresis: Switch-on point > Switch-off point.	
User entry	Signed floating-point number	

Switch-on delay		
Navigation	  Guidance → Commissioning → Switch-on delay	
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.	
Description	Enter delay before the switch output is switched on.	
User entry	0.0 to 100.0 s	

Switch-off delay		
Navigation	  Guidance → Commissioning → Switch-off delay	
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.	
Description	Enter delay before the switch output is switched off.	
User entry	0.0 to 100.0 s	

Assign status		
Navigation	  Guidance → Commissioning → Assign status	
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.	

Description Select the device status to display for the switch output.
 Additional information:
 If the switch on point for the selected detection method is reached, the output is conductive. Otherwise, the switch output is non-conductive.

Selection

- Partially filled pipe detection
- Low flow cut off

Failure mode

Navigation   Guidance → Commissioning → Failure mode

Prerequisite In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description Specify how the output should behave in the event of a device alarm.
 Additional information:
 For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.

Selection

- Actual status
- Open
- Closed

Additional information *Selection*

- **Actual status** option
 In the event of a device alarm, the issue is ignored and the switch output adopts the behavior currently specified for the "Switch output function" parameter.
- **Open** option
 In the event of a device alarm, the switch output's transistor is set to "non-conductive".

2.1.9 Display

Navigation   Guidance → Commissioning

Value 1 display

Navigation   Guidance → Commissioning → Value 1 display

Description Select the measured value that is displayed first on the local display.
 Additional information:
 The applicable unit of measure is specified in the "System units" submenu.

- Selection**
- Mass flow
 - Volume flow
 - Corrected volume flow
 - Temperature
 - Density *
 - Totalizer 1
 - Totalizer 2
 - Totalizer 3
 - Index inhomogeneous medium
 - Electronics temperature

Value 2 display

Navigation   Guidance → Commissioning → Value 2 display

Description Select the measured value that is shown second on the local display.
 Additional information:
 The applicable unit of measure is specified in the "System units" submenu.

- Selection**
- None
 - Mass flow
 - Volume flow
 - Corrected volume flow
 - Temperature
 - Density *
 - Totalizer 1
 - Totalizer 2
 - Totalizer 3
 - Index inhomogeneous medium
 - Electronics temperature

Value 3 display

Navigation   Guidance → Commissioning → Value 3 display

Description Select the measured value that is shown third on the local display.
 Additional information:
 The applicable unit of measure is specified in the "System units" submenu.

- Selection**
- None
 - Mass flow
 - Volume flow
 - Corrected volume flow
 - Temperature
 - Density *
 - Totalizer 1
 - Totalizer 2

* Visibility depends on order options or device settings

- Totalizer 3
- Index inhomogeneous medium
- Electronics temperature

Value 4 display
**Navigation**

Guidance → Commissioning → Value 4 display

Description

Select the measured value that is shown fourth on the local display.

Additional information:

The applicable unit of measure is specified in the "System units" submenu.

Selection

- None
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density^{*}
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Index inhomogeneous medium
- Electronics temperature

Display damping
**Navigation**

Guidance → Commissioning → Display damping

Description

Enter time constant (PT1 element) to set reaction time of the display to fluctuations in the measured value.

Additional information:

- The smaller the time constant the faster the display reacts to fluctuations in the measured value.

- If the time constant is set to 0, damping is deactivated.

User entry

0.0 to 999.9 s

* Visibility depends on order options or device settings

2.1.10 Date/time

Navigation   Guidance → Commissioning

Time format

Navigation   Guidance → Commissioning → Time format

Description Select time format.

Selection

- 24 h
- 12 h AM/PM

Time zone

Navigation   Guidance → Commissioning → Time zone

Description Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+14:00

Set date/time**Navigation**

Guidance → Commissioning → Set date/time

Description

Set the date and local time. Every time the date or time is changed, a logbook entry is created.

User entry

Date and time

3 "Diagnostics" menu

Troubleshooting and preventive maintenance – settings for device behavior during process and device events as well as assistance and measures for diagnostic purposes.

Navigation  Diagnostics

Diagnostics	
▶ Active diagnostics	→  46
▶ Diagnostic list	→  48
▶ Simulation	→  51
▶ Heartbeat Technology	→  56
▶ Diagnostic settings	→  57

3.1 "Actual diagnostics" submenu

Navigation  Diagnostics → Active diagnos.

▶ Active diagnostics		
Actual diagnostics	→	 46
Timestamp	→	 46
Previous diagnostics	→	 46
Timestamp	→	 47
Operating time from restart	→	 47
Operating time	→	 47

Actual diagnostics

Navigation  Diagnostics → Active diagnos. → Actual diagnos.

Prerequisite A diagnostic event has occurred.

Description Displays the currently active diagnostic message.
If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed.

User interface Positive integer

Timestamp

Navigation  Diagnostics → Active diagnos. → Timestamp

Description Displays the timestamp for the currently active diagnostic message.

User interface Days (d), hours (h), minutes (m), seconds (s)

Previous diagnostics

Navigation  Diagnostics → Active diagnos. → Prev.diagnostics

Prerequisite At least two diagnostic events have already occurred.

Description Displays the diagnostic message for the last diagnostic event that has ended.

User interface Positive integer

Timestamp

Navigation   Diagnostics → Active diagnos. → Timestamp

Description Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.

User interface Days (d), hours (h), minutes (m), seconds (s)

Operating time from restart

Navigation   Diagnostics → Active diagnos. → Time fr. restart

Description Indicates how long the device has been in operation since the last time the device was restarted.

User interface Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation   Diagnostics → Active diagnos. → Operating time

Description Indicates how long the device has been in operation.

User interface Days (d), hours (h), minutes (m), seconds (s)

3.2 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

▶ Diagnostic list		
Diagnostics 1	→	 48
Timestamp	→	 48
Diagnostics 2	→	 49
Timestamp	→	 49
Diagnostics 3	→	 49
Timestamp	→	 49
Diagnostics 4	→	 49
Timestamp	→	 50
Diagnostics 5	→	 50
Timestamp	→	 50

Diagnostics 1

Navigation  Diagnostics → Diagnostic list → Diagnostics 1

Description Displays the currently active diagnostic message with the highest priority.

User interface Positive integer

Timestamp

Navigation  Diagnostics → Diagnostic list → Timestamp

Description Displays the timestamp for the diagnostic message with the highest priority.

User interface Days (d), hours (h), minutes (m), seconds (s)

Diagnostics 2

Navigation	 Diagnostics → Diagnostic list → Diagnostics 2
Description	Displays the currently active diagnostic message with the second highest priority.
User interface	Positive integer

Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the second highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Diagnostics 3

Navigation	 Diagnostics → Diagnostic list → Diagnostics 3
Description	Displays the currently active diagnostic message with the third highest priority.
User interface	Positive integer

Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the third highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Diagnostics 4

Navigation	 Diagnostics → Diagnostic list → Diagnostics 4
Description	Displays the currently active diagnostic message with the fourth highest priority.
User interface	Positive integer

Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the fourth highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Diagnostics 5

Navigation	 Diagnostics → Diagnostic list → Diagnostics 5
Description	Displays the currently active diagnostic message with the fifth-highest priority.
User interface	Positive integer

Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the fifth highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)

3.3 "Simulation" submenu

Navigation  Diagnostics → Simulation

► Simulation	
Assign simulation process variable	→  51
Process variable value	→  52
Current output 1 simulation	→  52
Current output value	→  52
Frequency output 1 simulation	→  53
Frequency output 1 value	→  53
Pulse output simulation 1	→  53
Pulse value 1	→  54
Switch output simulation 1	→  54
Switch state 1	→  54
Device alarm simulation	→  55
Diagnostic event category	→  55
Diagnostic event simulation	→  55

Assign simulation process variable

Navigation  Diagnostics → Simulation → Assign proc.var.

Description Select a process variable for the simulation, thereby activating it.

- Selection**
- Off
 - Mass flow
 - Volume flow
 - Corrected volume flow
 - Density^{*}
 - Temperature

* Visibility depends on order options or device settings

Additional information	<i>Description</i> The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.
<hr/>	
Process variable value	
<hr/>	
Navigation	  Diagnostics → Simulation → Proc. var. value
Description	Enter the simulation value for the selected process variable. Processing of measured values downstream as well as the signal output follow this value. In this way, it is possible to verify whether the measuring device has been configured correctly. Additional information: The applicable unit of measure is specified in the "System units" submenu.
User entry	Signed floating-point number
<hr/>	
Current output 1 simulation	
<hr/>	
Navigation	  Diagnostics → Simulation → Curr.outp 1 sim.
Description	Switch simulation of the current output on or off. Additional information: When simulation is on, the current output signal is set to the value specified in the "Current output value" parameter.
Selection	<ul style="list-style-type: none"> ■ Off ■ On
Additional information	<i>Description</i> The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.
<hr/>	
Current output value	
<hr/>	
Navigation	  Diagnostics → Simulation → Curr.outp val.
Description	Enter the current value for the simulation. In this manner, it is possible to verify the current output is configured correctly and downstream processing units are functioning properly. Additional information: The valid input range is determined by the "Current range output" parameter.
User entry	3.59 to 21.5 mA

Frequency output 1 simulation


Navigation	Diagnostics → Simulation → Freq.outp 1 sim.
Description	Switch simulation of the frequency output on or off.
Selection	<ul style="list-style-type: none"> ■ Off ■ On
Additional information	<p><i>Description</i></p> <p>The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.</p>

Frequency output 1 value


Navigation	Diagnostics → Simulation → Freq.outp 1 val.
Description	Enter the frequency value for the simulation. In this manner, it is possible to verify the frequency output is configured correctly and downstream processing units are functioning properly.
User entry	0.0 to 12 500.0 Hz

Pulse output simulation 1


Navigation	Diagnostics → Simulation → Puls.outp.sim. 1
Description	Switch simulation of the pulse output on or off.
Selection	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ Down-counting value
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option Simulation of the pulse output is switched off. The device is in standard operation mode or another process variable is being simulated. ■ Fixed value option Pulses are emitted continuously with the pulse width specified in the "Pulse width" parameter. ■ Down-counting value option The number of pulses specified in the "Pulse value " parameter are emitted. <p><i>Description</i></p> <p>The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.</p>

Pulse value 1 	
Navigation	  Diagnostics → Simulation → Pulse value 1
Description	Enter the number of pulses to simulate the pulse output. In this manner, it is possible to verify the pulse output is configured correctly and downstream processing units are functioning properly.
User entry	0 to 65 535
Switch output simulation 1 	
Navigation	  Diagnostics → Simulation → Switch sim. 1
Description	Switch simulation of the switch output on or off. Additional information: When simulation is on, the switch output is set to the state specified in the "Switch state " parameter.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Additional information	<p><i>Description</i></p> <p>The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.</p>
Switch state 1 	
Navigation	  Diagnostics → Simulation → Switch state 1
Description	Select a switch state. In this manner, it is possible to verify the switch output is configured correctly and downstream processing units are functioning properly.
Selection	<ul style="list-style-type: none"> ▪ Open ▪ Closed
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Open option The switch output is not conductive. ▪ Closed option The switch output is conductive.

Device alarm simulation



Navigation  Diagnostics → Simulation → Dev. alarm sim.

Description Switch the device alarm simulation on or off.
While simulation is in progress, the display alternates between the measured value and a diagnostic message of the Function Check (C) category.

Selection

- Off
- On

Diagnostic event category



Navigation  Diagnostics → Simulation → Event category

Description Select the category of diagnostic events that should be available for selection in the "Diagnostic event simulation" parameter.

Selection

- Sensor
- Electronics
- Configuration
- Process

Diagnostic event simulation



Navigation  Diagnostics → Simulation → Diag. event sim.

Description Select the diagnostic event to simulate.

Selection Off


3.4 "Heartbeat Technology" submenu

The **Heartbeat Technology** submenu (→  56) is only available with the optional "Heartbeat Verification + Monitoring" application package.

- Order code for: Application package
- Option: EB "Heartbeat Verification + Monitoring"

 Detailed information and all descriptions of the device parameters of the application package are available in the "Heartbeat Verification + Monitoring" Special Documentation

Navigation   Diagnostics → HBT

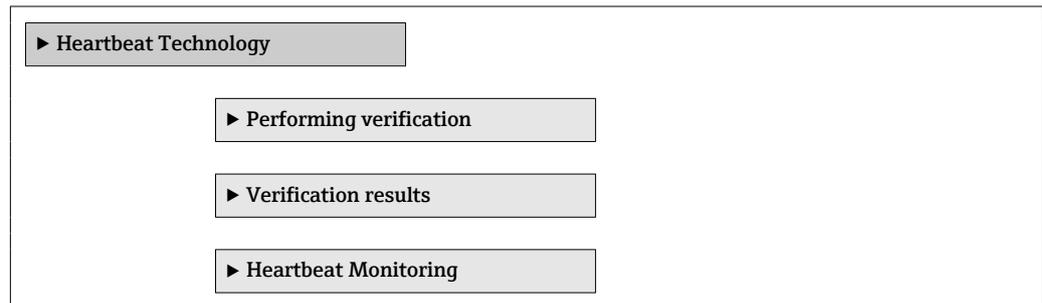

3.5 "Diagnostic settings" submenu

Navigation  Diagnostics → Diag. settings

- ▶ Diagnostic settings
- ▶ Properties →  57
- ▶ Diagnostic configuration →  57

3.5.1 "Properties" submenu

Navigation  Diagnostics → Diag. settings → Properties

- ▶ Properties
- Alarm delay →  57

Alarm delay

Navigation  Diagnostics → Diag. settings → Properties → Alarm delay

Description Enter a duration for the alarm delay. When a diagnostic event of the "Alarm" category occurs, the diagnostic message is not generated until the delay has elapsed.

User entry 0 to 60 s

3.5.2 "Diagnostic configuration" submenu

Navigation  Diagnostics → Diag. settings → Diag. config.

- ▶ Diagnostic configuration
- ▶ Sensor →  58
- ▶ Electronics →  60
- ▶ Configuration →  63
- ▶ Process →  66

"Sensor" submenu

Navigation  Diagnostics → Diag. settings → Diag. config. → Sensor

▶ Sensor	
Assign behavior of diagnostic no. 046	→  58
Event category 046	→  59
Assign behavior of diagnostic no. 140	→  59
Event category 140	→  59
Assign behavior of diagnostic no. 144	→  60
Event category 144	→  60

Assign behavior of diagnostic no. 046



Navigation

 Diagnostics → Diag. settings → Diag. config. → Sensor → Diagnostic no. 046

Description

Select behavior for diagnostic event "046 Sensor limit exceeded".

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Additional information

Selection

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 046


Navigation	Diagnostics → Diag. settings → Diag. config. → Sensor → Event category 046
Description	Select event category (status signal) for diagnostic event "046 Sensor build-up detected".
Selection	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ No effect (N)

Assign behavior of diagnostic no. 140


Navigation	Diagnostics → Diag. settings → Diag. config. → Sensor → Diagnostic no. 140
Description	Select behavior for diagnostic event "140 Sensor signal asymmetrical".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 140


Navigation	Diagnostics → Diag. settings → Diag. config. → Sensor → Event category 140
Description	Select category for diagnostic message.
Selection	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ No effect (N)

Assign behavior of diagnostic no. 144



Navigation Diagnostics → Diag. settings → Diag. config. → Sensor → Diagnostic no. 144

Description Select diagnostic behavior for the selected diagnostic number.

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

Additional information *Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 144



Navigation Diagnostics → Diag. settings → Diag. config. → Sensor → Event category 144

Description Select category for diagnostic message.

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

"Electronics" submenu

Navigation Diagnostics → Diag. settings → Diag. config. → Electronics

▶ **Electronics**

Assign behavior of diagnostic no. 230	→ 61
Event category 230	→ 61

Assign behavior of diagnostic no. 231	→ 61
Event category 231	→ 62
Assign behavior of diagnostic no. 302	→ 62
Event category 302	→ 62
Assign behavior of diagnostic no. 374	→ 62
Event category 374	→ 63

Assign behavior of diagnostic no. 230



- Navigation** Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 230
- Description** Select behavior for diagnostic event "230 Date/time incorrect".
- Selection**
- Alarm
 - Warning
 - Logbook entry only

Event category 230



- Navigation** Diagnostics → Diag. settings → Diag. config. → Electronics → Event category 230
- Description** Select event category (status signal) for diagnostic event "230 Date/time incorrect".
- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

Assign behavior of diagnostic no. 231



- Navigation** Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 231
- Description** Select behavior for diagnostic event "231 Date/time not available".
- Selection**
- Alarm
 - Warning
 - Logbook entry only

Event category 231



Navigation	Diagnostics → Diag. settings → Diag. config. → Electronics → Event category 231
Description	Select event category (status signal) for diagnostic event "231 Date/time not available".
Selection	<ul style="list-style-type: none">■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ No effect (N)

Assign behavior of diagnostic no. 302



Navigation	Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 302
Description	Select behavior for diagnostic event "302 Device verification active".
Selection	<ul style="list-style-type: none">■ Off■ Warning■ Logbook entry only

Event category 302



Navigation	Diagnostics → Diag. settings → Diag. config. → Electronics → Event category 302
Description	Select event category (status signal) for diagnostic event "302 Device verification active".
Selection	<ul style="list-style-type: none">■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ No effect (N)

Assign behavior of diagnostic no. 374



Navigation	Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 374
Description	Select behavior for diagnostic event "374 Sensor electronics (ISEM) faulty".
Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only

Additional information

Selection

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 374



Navigation

Diagnostics → Diag. settings → Diag. config. → Electronics → Event category 374

Description

Select event category (status signal) for diagnostic event "374 Sensor electronics (ISEM) faulty".

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

"Configuration" submenu

Navigation

Diagnostics → Diag. settings → Diag. config. → Configuration

► **Configuration**

Assign behavior of diagnostic no. 441	→ 64
Event category 441	→ 64
Assign behavior of diagnostic no. 442	→ 64
Event category 442	→ 65
Assign behavior of diagnostic no. 443	→ 65
Event category 443	→ 66

Assign behavior of diagnostic no. 441


Navigation Diagnostics → Diag. settings → Diag. config. → Configuration → Diagnostic no. 441

Description Select behavior for diagnostic event "441 Current output faulty".

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

Additional information *Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 441


Navigation Diagnostics → Diag. settings → Diag. config. → Configuration → Event category 441

Description Select event category (status signal) for diagnostic event "441 Current output faulty".

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

Assign behavior of diagnostic no. 442


Navigation Diagnostics → Diag. settings → Diag. config. → Configuration → Diagnostic no. 442

Description Select behavior for diagnostic event "442 Frequency output faulty".

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.
-------------------------------	---

Event category 442


Navigation	Diagnostics → Diag. settings → Diag. config. → Configuration → Event category 442
Description	Select event category (status signal) for diagnostic event "442 Frequency output faulty".
Selection	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ No effect (N)

Assign behavior of diagnostic no. 443


Navigation	Diagnostics → Diag. settings → Diag. config. → Configuration → Diagnostic no. 443
Description	Select behavior for diagnostic event "443 Pulse output faulty".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 443



Navigation

Diagnostics → Diag. settings → Diag. config. → Configuration → Event category 443

Description

Select event category (status signal) for diagnostic event "443 Pulse output faulty".

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

"Process" submenu

Navigation

Diagnostics → Diag. settings → Diag. config. → Process

▶ **Process**

Assign behavior of diagnostic no. 832	→ 67
Event category 832	→ 67
Assign behavior of diagnostic no. 833	→ 68
Event category 833	→ 68
Assign behavior of diagnostic no. 834	→ 68
Event category 834	→ 69
Assign behavior of diagnostic no. 835	→ 69
Event category 835	→ 70
Assign behavior of diagnostic no. 842	→ 70
Event category 842	→ 71
Assign behavior of diagnostic no. 862	→ 71
Event category 862	→ 72
Assign behavior of diagnostic no. 912	→ 72
Event category 912	→ 72
Assign behavior of diagnostic no. 913	→ 73

Event category 913	→ 📄 73
Assign behavior of diagnostic no. 944	→ 📄 73
Event category 944	→ 📄 74
Assign behavior of diagnostic no. 948	→ 📄 74
Event category 948	→ 📄 75

Assign behavior of diagnostic no. 832



Navigation Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 832

Description Select behavior for diagnostic event "832 Electronics temperature too high".

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

Additional information *Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 832



Navigation Diagnostics → Diag. settings → Diag. config. → Process → Event category 832

Description Select event category (status signal) for diagnostic event "832 Electronics temperature too high".

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

Assign behavior of diagnostic no. 833


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 833
Description	Select behavior for diagnostic event "833 Electronics temperature too low".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 833


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Event category 833
Description	Select event category (status signal) for diagnostic event "833 Electronics temperature too low".
Selection	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ No effect (N)

Assign behavior of diagnostic no. 834


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 834
Description	Select event category (status signal) for diagnostic event "834 Process temperature too high".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only

Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.
-------------------------------	---

Event category 834


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Event category 834
Description	Select event category (status signal) for diagnostic event "834 Process temperature too high".
Selection	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ No effect (N)

Assign behavior of diagnostic no. 835


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 835
Description	Select behavior for diagnostic event "835 Process temperature too low".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only

Additional information*Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 835**Navigation**

Diagnostics → Diag. settings → Diag. config. → Process → Event category 835

Description

Select event category (status signal) for diagnostic event "835 Process temperature too low".

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Assign behavior of diagnostic no. 842**Navigation**

Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 842

Description

Select behavior for diagnostic event "842 Process value above limit".

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.
-------------------------------	---

Event category 842


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Event category 842
Description	Select event category (status signal) for diagnostic event "842 Process value above limit".
Selection	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ No effect (N)

Assign behavior of diagnostic no. 862


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 862
Description	Select behavior for diagnostic event "862 Partly filled pipe".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 862


Navigation	  Diagnostics → Diag. settings → Diag. config. → Process → Event category 862
Description	Select event category (status signal) for diagnostic event "862 Partly filled pipe".
Selection	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ No effect (N)

Assign behavior of diagnostic no. 912


Navigation	  Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 912
Description	Select behavior for diagnostic event "912 Medium inhomogeneous".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 912


Navigation	  Diagnostics → Diag. settings → Diag. config. → Process → Event category 912
Description	Select event category (status signal) for diagnostic event "912 Medium inhomogeneous".
Selection	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ No effect (N)

Assign behavior of diagnostic no. 913


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 913
Description	Select behavior for diagnostic event "913 Medium unsuitable".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 913


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Event category 913
Description	Select event category (status signal) for diagnostic event "913 Medium unsuitable".
Selection	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ No effect (N)

Assign behavior of diagnostic no. 944


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 944
Description	Select behavior for diagnostic event "944 Monitoring failed".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only

Additional information*Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 944**Navigation**

Diagnostics → Diag. settings → Diag. config. → Process → Event category 944

Description

Select event category (status signal) for diagnostic event "944 Monitoring failed".

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Assign behavior of diagnostic no. 948**Navigation**

Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 948

Description

Select behavior for diagnostic event "948 Oscillation damping too high".

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Additional information*Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Event category 948

**Navigation**

Diagnostics → Diag. settings → Diag. config. → Process → Event category 948

Description

Select event category (status signal) for diagnostic event "948 Oscillation damping too high".

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

4 "Application" menu

Targeted optimization to the application – comprehensive device settings from sensor technology to system integration for optimum application adaptation.

Navigation  Application

Application	
▶ Measured values	→  76
▶ System units	→  80
▶ Totalizers	→  86
▶ Sensor	→  91
▶ Current output 1	→  110
▶ Pulse/frequency/switch output 1	→  121
▶ Communication	→  139

4.1 "Measured values" submenu

Navigation  Application → Measured values

▶ Measured values	
Mass flow	→  77
Volume flow	→  77
Corrected volume flow	→  77
Density	→  77
Temperature	→  78
▶ Totalizer	→  78

Mass flow

Navigation	 Application → Measured values → Mass flow
Description	Displays the mass flow currently measured. Additional information: The applicable unit of measure is specified in the "System units" submenu.
User interface	Signed floating-point number

Volume flow

Navigation	 Application → Measured values → Volume flow
Description	Displays the volume flow currently measured. Additional information: The applicable unit of measure is specified in the "System units" submenu.
User interface	Signed floating-point number

Corrected volume flow

Navigation	 Application → Measured values → Correct.vol.flow
Description	Displays the currently calculated volume flow compensated for the reference density. Additional information: - The reference density can be calculated or fixed. - The applicable unit of measure is specified in the "System units" submenu.
User interface	Signed floating-point number

Density


Navigation	 Application → Measured values → Density
Description	Displays the density currently measured. Additional information: The applicable unit of measure is specified in the "System units" submenu.
User interface	Positive floating-point number

Temperature

Navigation	☰☰ Application → Measured values → Temperature
Description	Displays the medium temperature currently measured. Additional information: The applicable unit of measure is specified in the "System units" submenu.
User interface	Positive floating-point number

4.1.1 "Totalizer" submenu

Navigation ☰☰ Application → Measured values → Totalizer

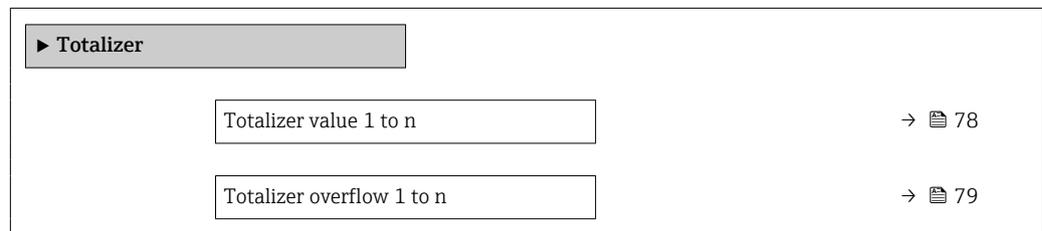

Totalizer value 1 to n ☰

Navigation	☰☰ Application → Measured values → Totalizer → Totalizer val. 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Displays the current totalizer counter. Additional information: Since the operating tool cannot display figures with more than 7 digits, the current counter above this range equals the sum of the totalizer counter plus the overflow displayed for the "Totalizer overflow" parameter. Example for how to calculate the current totalizer counter when the value exceeds the 7 digit display range limit of the operating tool: - Value of "Totalizer value" parameter: 1,968,457 m ³ - Value of "Totalizer overflow" parameter: 1 × 10 ⁷ m ³ = 10,000,000 m ³ - Current totalizer reading: 11,968,457 m ³ In the event of an error, the totalizer behaves as specified in the "Failure mode" parameter.
User interface	Signed floating-point number

Totalizer overflow 1 to n

**Navigation**

Application → Measured values → Totalizer → Tot. overflow 1 to n

Prerequisite

A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description

Displays the current totalizer overflow.

Additional information:

If the current totalizer counter exceeds the operating tool's maximum numerical display range of 7 digits, the amount above this range is expressed as an overflow. The current totalizer counter therefore equals the sum of the overflow and the totalizer value displayed in the "Totalizer value" parameter.

Example of how to calculate the current totalizer counter when the value exceeds the 7 digit display limit of the operating tool:

- Value of "Totalizer value" parameter: 1,968,457 m³
- Value of "Totalizer overflow" parameter: $1 \times 10^7 \text{ m}^3 = 10,000,000 \text{ m}^3$
- Current totalizer reading: 11,968,457 m³

User interface

-32 000.0 to 32 000.0

4.2 "System units" submenu

Navigation  Application → System units

▶ System units	
Mass flow unit	→  80
Mass unit	→  81
Volume flow unit	→  81
Volume unit	→  82
Corrected volume flow unit	→  83
Corrected volume unit	→  83
Density unit	→  84
Reference density unit	→  84
Temperature unit	→  84
Pressure unit	→  85

Mass flow unit

Navigation  Application → System units → Mass flow unit

Description Select mass flow unit.

Selection	<i>SI units</i>	<i>US units</i>
	▪ g/s	▪ oz/s
	▪ g/min	▪ oz/min
	▪ g/h	▪ oz/h
	▪ g/d	▪ oz/d
	▪ kg/s	▪ lb/s
	▪ kg/min	▪ lb/min
	▪ kg/h	▪ lb/h
	▪ kg/d	▪ lb/d
	▪ t/s	▪ STon/s
	▪ t/min	▪ STon/min
	▪ t/h	▪ STon/h
	▪ t/d	▪ STon/d

Mass unit

**Navigation**

Application → System units → Mass unit

Description

Select mass unit.

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

Volume flow unit

**Navigation**

Application → System units → Volume flow unit

Description

Select volume flow unit.

Selection*SI units*

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units

- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- MMft³/s
- MMft³/min
- MMft³/h
- Mft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)

Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Volume unit**Navigation**

Application → System units → Volume unit

Description

Select volume unit.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ cm³ ■ dm³ ■ m³ ■ ml ■ l ■ hl ■ Ml Mega 	<i>US units</i> <ul style="list-style-type: none"> ■ af ■ ft³ ■ Mft³ ■ fl oz (us) ■ gal (us) ■ kgal (us) ■ Mgal (us) ■ bbl (us;oil) ■ bbl (us;liq.) ■ bbl (us;beer) ■ bbl (us;tank) 	<i>Imperial units</i> <ul style="list-style-type: none"> ■ gal (imp) ■ Mgal (imp) ■ bbl (imp;beer) ■ bbl (imp;oil)
------------------	---	--	--

Corrected volume flow unit



Navigation Application → System units → Cor.volflow unit

Description Select corrected volume flow unit.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ Nl/s ■ Nl/min ■ Nl/h ■ Nl/d ■ Nhl/s ■ Nhl/min ■ Nhl/h ■ Nhl/d ■ Nm³/s ■ Nm³/min ■ Nm³/h ■ Nm³/d ■ Sl/s ■ Sl/min ■ Sl/h ■ Sl/d ■ Sm³/s ■ Sm³/min ■ Sm³/h ■ Sm³/d 	<i>US units</i> <ul style="list-style-type: none"> ■ Sft³/s ■ Sft³/min ■ Sft³/h ■ Sft³/d ■ Sgal/s (us) ■ Sgal/min (us) ■ Sgal/h (us) ■ Sgal/d (us) ■ Sbbbl/s (us;liq.) ■ Sbbbl/min (us;liq.) ■ Sbbbl/h (us;liq.) ■ Sbbbl/d (us;liq.) ■ MMSft³/s ■ MMSft³/min ■ MMSft³/h ■ MMSft³/d ■ Sbbbl/s (us;oil) ■ Sbbbl/min (us;oil) ■ Sbbbl/h (us;oil) ■ Sbbbl/d (us;oil) 	<i>Imperial units</i> <ul style="list-style-type: none"> ■ Sgal/s (imp) ■ Sgal/min (imp) ■ Sgal/h (imp) ■ Sgal/d (imp)
------------------	--	--	--

Corrected volume unit



Navigation Application → System units → Corr. vol. unit

Description Select corrected volume unit.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	<ul style="list-style-type: none"> ■ NI ■ Nhl ■ Nm³ ■ Sl ■ Sm³ 	<ul style="list-style-type: none"> ■ Sft³ ■ MMSft³ ■ Sgal (us) ■ Sbbbl (us;liq.) ■ Sbbbl (us;oil) 	Sgal (imp)

Density unit 

Navigation   Application → System units → Density unit

Description Select density unit.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	<ul style="list-style-type: none"> ■ g/cm³ ■ g/m³ ■ g/ml ■ kg/l ■ kg/dm³ ■ kg/m³ 	<ul style="list-style-type: none"> ■ lb/ft³ ■ lb/gal (us) ■ lb/bbl (us;liq.) ■ lb/bbl (us;beer) ■ lb/bbl (us;oil) ■ lb/bbl (us;tank) 	<ul style="list-style-type: none"> ■ lb/gal (imp) ■ lb/bbl (imp;beer) ■ lb/bbl (imp;oil)

Reference density unit 

Navigation   Application → System units → Ref. dens. unit

Description Select reference density unit.

Selection	<i>SI units</i>	<i>US units</i>
	<ul style="list-style-type: none"> ■ kg/Nm³ ■ kg/NI ■ g/Scm³ ■ kg/Sm³ ■ RD15°C ■ RD20°C 	<ul style="list-style-type: none"> ■ lb/Sft³ ■ RD60°F

Temperature unit 

Navigation   Application → System units → Temperature unit

Description Select temperature unit.

Selection	<i>SI units</i>	<i>US units</i>
	<ul style="list-style-type: none"> ■ °C ■ K 	<ul style="list-style-type: none"> ■ °F ■ °R

Pressure unit

**Navigation**

Application → System units → Pressure unit

Description

Select pressure unit.

Selection*SI units*

- MPa a
- MPa g
- kPa a
- kPa g
- Pa a
- Pa g
- bar
- bar g

US units

- psi a
- psi g

4.3 "Totalizers" submenu

Navigation  Application → Totalizers

▶ Totalizers		
▶ Totalizer handling		→  86
▶ Totalizer 1 to n		→  86

4.3.1 "Totalizer handling" submenu

Navigation  Application → Totalizers → Totalizer

▶ Totalizer handling		
Reset all totalizers		→  86

Reset all totalizers

Navigation  Application → Totalizers → Totalizer → Reset all tot.

Description Reset all totalizers to "0" and restart the totaling process. All flow quantities thus far totalized are thereby deleted.

- Selection**
- Cancel
 - Reset + totalize

4.3.2 "Totalizer 1 to n" submenu

Navigation  Application → Totalizers → Totalizer 1 to n

▶ Totalizer 1 to n		
Assign process variable		→  87
Unit totalizer 1 to n		→  87
Totalizer operation mode		→  88
Control Totalizer 1 to n		→  89

Preset value 1 to n	→ 89
Failure mode	→ 90

Assign process variable



Navigation

Application → Totalizers → Totalizer 1 to n → Assign variable

Description

Select process variable for totalizer.

Additional information:

If the option selected is changed, the device resets the totalizer to "0".

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow

Unit totalizer 1 to n



Navigation

Application → Totalizers → Totalizer 1 to n → Unit totalizer 1 to n

Prerequisite

A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description

Select process variable totalizer unit.

Selection

SI units

- g^{*}
- kg^{*}
- t^{*}

US units

- oz^{*}
- lb^{*}
- STon^{*}

* Visibility depends on order options or device settings

or

- SI units*
- cm³*
 - dm³*
 - m³*
 - ml*
 - l*
 - hl*
 - Ml Mega*

- US units*
- af*
 - ft³*
 - Mft³*
 - fl oz (us)*
 - gal (us)*
 - kgal (us)*
 - Mgal (us)*
 - bbl (us;liq.)*
 - bbl (us;beer)*
 - bbl (us;oil)*
 - bbl (us;tank)*

- Imperial units*
- gal (imp)*
 - Mgal (imp)*
 - bbl (imp;beer)*
 - bbl (imp;oil)*

* Visibility depends on order options or device settings

or

- SI units*
- NI*
 - Nhl*
 - Nm³*
 - Sl*
 - Sm³*

- US units*
- Sft³*
 - MMSft³*
 - Sgal (us)*
 - Sbbbl (us;liq.)*
 - Sbbbl (us;oil)*

- Imperial units*
- Sgal (imp)*

* Visibility depends on order options or device settings

or

- Other units*
- None*

* Visibility depends on order options or device settings

Additional information

Description

The unit is selected separately for each totalizer. The unit is independent of the option selected in the **System units** submenu (→  80).

Selection

The selection is dependent on the process variable selected in the **Assign process variable** parameter (→  17).

Totalizer operation mode



Navigation

  Application → Totalizers → Totalizer 1 to n → Operation mode

Prerequisite

A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description

Select totalizer calculation mode.

Selection	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Net flow total option The flow values in the forward and reverse flow directions are totalized and netted against each other. Net flow is recorded in the flow direction. ■ Forward flow total option Only the flow in the forward flow direction is totalized. ■ Reverse flow total option Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

Control Totalizer 1 to n

Navigation	  Application → Totalizers → Totalizer 1 to n → Control Tot. 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Operate the totalizer.
Selection	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold ■ Reset + totalize ■ Hold
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Totalize option The totalizer is started or continues running. ■ Reset + hold option The totaling process is stopped and the totalizer is reset to "0". ■ Preset + hold option The totaling process is stopped and the totalizer is set to the start value specified in the "Preset value" parameter. ■ Reset + totalize option The totalizer is reset to "0" and the totaling process is restarted. ■ Hold option Totalizing is stopped.

Preset value 1 to n

Navigation	  Application → Totalizers → Totalizer 1 to n → Preset value 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Specify start value for totalizer.

User entry Signed floating-point number

Additional information *Description*

The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→  17).

Example

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

Failure mode

Navigation   Application → Totalizers → Totalizer 1 to n → Failure mode

Prerequisite A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description Specify how the totalizer should behave in the event of a device alarm.
 Additional information:
 The failsafe mode that applies to any other totalizers or outputs is specified separately in other parameters and is not impacted by this setting.

Selection

- Stop
- Actual value
- Last valid value

Additional information *Selection*

- **Stop** option
The totalizer is stopped in the event of a device alarm.
- **Actual value** option
The totalizer continues to totalize based on the current value measured; the device alarm is ignored.
- **Last valid value** option
The totalizer continues to totalize based on the last valid value measured before the device alarm occurred.

4.4 "Sensor" submenu

Navigation  Application → Sensor

▶ Sensor		
▶ Process parameters		→  91
▶ Low flow cut off		→  93
▶ Partially filled pipe detection		→  94
▶ Medium settings		→  96
▶ Two phase flow		→  97
▶ External compensation		→  100
▶ Corrected volume flow calculation		→  100
▶ Sensor adjustment		→  103
▶ Calibration		→  108

4.4.1 "Process parameters" submenu

Navigation  Application → Sensor → Process param.

▶ Process parameters		
Flow damping time		→  92
Flow override		→  92
Density damping		→  92
Temperature damping		→  93

Flow damping time

**Navigation** Application → Sensor → Process param. → FlowDampingTime**Description**

Enter time constant for flow damping (PT1 element).

- Value = 0: No damping
- Value > 0: Damping increases

Additional information:

Damping is implemented by means of a proportional transmission behavior with first order delay (PT1 element).

User entry0 to 99.9 s

Flow override

**Navigation** Application → Sensor → Process param. → Flow override**Description**

Stops the measuring process. Can be used for example when cleaning the pipeline.

Selection

- Off
- On

Additional information*Selection***"On" option**

Activates flow override. The diagnostic message "453 Flow override active" is generated.

Additional information:

Output values:

- Temperature: Measurement continues
 - Totalizers 1 to 3: No longer totalize
-

Density damping

**Navigation** Application → Sensor → Process param. → Density damping**Description**

Enter time constant for damping (PT1 element) of the measured value for density:

- Value = 0: No damping
- Value > 0: Damping increases

Additional information:

Damping is implemented by means of a proportional transmission behavior with first order delay (PT1 element).

User entry

0 to 999.9 s

Temperature damping



Navigation	Application → Sensor → Process param. → Temp. damping
Description	Enter time constant for temperature damping (PT1 element). - Value = 0: No damping - Value > 0: Damping increases Additional information: Damping is implemented by means of a proportional transmission behavior with first order delay (PT1 element).
User entry	0 to 999.9 s

4.4.2 "Low flow cut off" submenu

Navigation Application → Sensor → Low flow cut off


▶ **Low flow cut off**

Low flow cut off	→ 93
On value low flow cutoff	→ 94
Off value low flow cutoff	→ 94

Low flow cut off



Navigation	Application → Sensor → Low flow cut off → Low flow cut off
Description	Select process variable for low flow cut off to activate low flow cut off.
Selection	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow
Additional information	Description

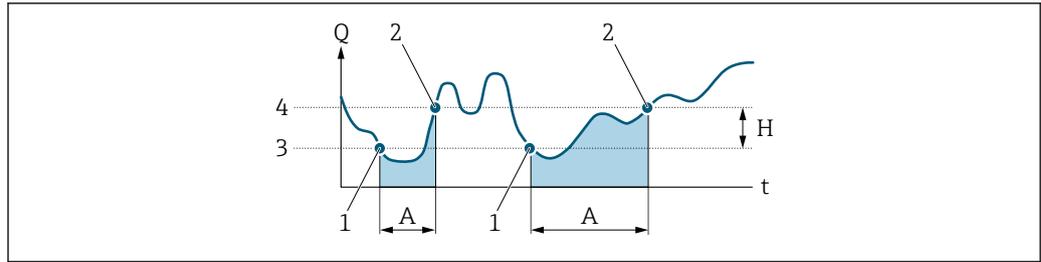

A0012887

- Q* Flow
- t* Time
- H* Hysteresis
- A* Low flow cut off active
- 1* Low flow cut off is activated
- 2* Low flow cut off is deactivated
- 3* On-value entered
- 4* Off-value entered

On value low flow cutoff



Navigation

Application → Sensor → Low flow cut off → On value

Description

Enter on value to switch on low flow cut off.
 Value = 0: No low flow cut off
 Value > 0: Low flow cut off is activated

User entry

Positive floating-point number

Off value low flow cutoff



Navigation

Application → Sensor → Low flow cut off → Off value

Description


Enter off value to switch off low flow cut off. The off value is entered as a positive hysteresis with respect to the on value.

User entry

0 to 100.0 %

4.4.3 "Partially filled pipe detection" submenu

Navigation Application → Sensor → Partial pipe det

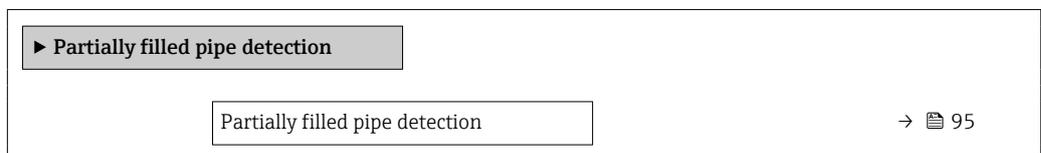

Low value partial filled pipe detection	→ 95
High value partial filled pipe detection	→ 95

Partially filled pipe detection

Navigation	  Application → Sensor → Partial pipe det → Partial pipe det
Description	Select process variable for detection of an empty or partially filled pipe. NOTE Due to low density, deactivate partially filled pipe detection for a gas!
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Density ▪ Calculated reference density

Low value partial filled pipe detection

Navigation	  Application → Sensor → Partial pipe det → Low value
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Empty pipe detection submenu.
Description	Enter the lower limit value for the selected process variable. If the measured value drops below the limit value, diagnostic message "862 Partly filled pipe" is generated. Additional information: - This setting applies only if the "Density unit" parameter is not set to °API. - The lower limit value must be lower than the upper limit value ("High value partial filled pipe detection" parameter).
User entry	Signed floating-point number

High value partial filled pipe detection

Navigation	  Application → Sensor → Partial pipe det → High value
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Empty pipe detection submenu.
Description	Enter the upper limit value for the selected process variable. If the measured value exceeds the limit value, diagnostic message "862 Partly filled pipe" is generated. Additional information: This setting applies only if the "Density unit" parameter is set to °API.

User entry Signed floating-point number

4.4.4 "Medium settings" submenu

Navigation  Application → Sensor → Medium settings

▶ **Medium settings**

Select medium	→  96
Select gas type	→  96
Reference sound velocity	→  97
Temperature coefficient sound velocity	→  97

Select medium

Navigation  Application → Sensor → Medium settings → Select medium

Description Select the medium type.

- Selection
- Liquid
 - Gas

Select gas type

Navigation  Application → Sensor → Medium settings → Select gas type

Prerequisite In the **Select medium** parameter in the **Medium settings** submenu, the **Gas** option is selected.

Description Select the type of gas.
 Additional information:
 To achieve accurate measurements, it is necessary to specify the gas.

- Selection
- Air
 - Ammonia NH3
 - Argon Ar
 - Sulfur hexafluoride SF6
 - Oxygen O2
 - Ozone O3
 - Nitrogen oxide NOx
 - Nitrogen N2

- Nitrous oxide N2O
- Methane CH4
- Hydrogen H2
- Helium He
- Hydrogen chloride HCl
- Hydrogen sulfide H2S
- Ethylene C2H4
- Carbon dioxide CO2
- Carbon monoxide CO
- Chlorine Cl2
- Butane C4H10
- Propane C3H8
- Propylene C3H6
- Ethane C2H6
- Others

Reference sound velocity



Navigation

Application → Sensor → Medium settings → Sound velocity

Prerequisite

In the **Select gas type** parameter in the **Medium settings** submenu, the **Others** option is selected.

Description

Enter sound velocity of the gas at 0 °C (32 °F).

User entry

1 to 99 999.9999 m/s

Temperature coefficient sound velocity



Navigation

Application → Sensor → Medium settings → Temp. coeff. SV

Prerequisite

In the **Select gas type** parameter in the **Medium settings** submenu, the **Others** option is selected.

Description

Enter the temperature coefficient for the gas sound velocity.


User entry

Positive floating-point number

4.4.5 "Two phase flow" submenu

Navigation

Application → Sensor → Two phase flow

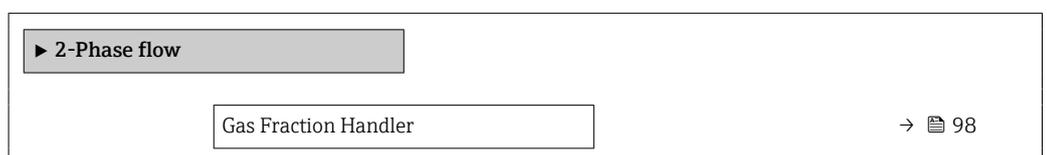

Index inhomogeneous medium	→ 99
Cut off inhomogeneous wet gas	→ 99
Cut off inhomogeneous liquid	→ 99

Gas Fraction Handler

Navigation

  Application → Sensor → Two phase flow → Gas Frac Handler

Description

Activate the Gas Fraction Handler to improve measurement stability and repeatability of a two phase medium.

The Gas Fraction Handler continuously tests for the presence of disturbances in single phase flow, i.e. for gas bubbles in liquids or for droplets in gas.

In the presence of the second phase, when flow and density become increasingly unstable, the Gas Fraction Handler improves measurement stability with respect to the severity of the disturbances, with no effect under the condition of a single-phase flow.

The Gas Fraction Handler stabilizes the output values and enables better readability for operators and interpretation by the process control system. The level of smoothing is adjusted according to the severity of disturbances introduced by the second phase.

Additional information:

The Gas Fraction Handler applies cumulatively to any fixed damping constants applied to flow and density set elsewhere in the device.

Selection

- Off
- Moderate
- Powerful

Additional information

Selection

- **Off** option
Deactivates the Gas Fraction Handler. When a second phase is present, large fluctuations of flow and density will occur.
- **Moderate** option
Use for applications with low level or intermittent levels of second phase.
- **Powerful** option
Use for applications with very significant levels of second phase.

Index inhomogeneous medium

Navigation	 Application → Sensor → Two phase flow → Index inh.medium
Description	<p>Indicates the severity of the second phase.</p> <p>For applications with entrained gas for example, the index describes the relative amount of entrained gas in the liquid. If there is no entrained gas in the liquid, the value is 0, and for very high levels of gas volume (associated with severe slug flow, for example), the value exceeds 10.</p> <p>Additional information:</p> <ul style="list-style-type: none"> - The index increases with an increase in the second phase, such as gas volume in a liquid, but scaling is not linear (i.e. no 1:1 correlation of index to gas volume fraction), and with increased flow speed, which results in greater homogeneity, the index value decreases - The index will not saturate with excessive second phase. - The diagnostic is repeatable under the same conditions, and thus can be used to better understand process conditions and the relative severity of the second phase. - This index can also be used to determine the relative level of solids in a liquid or the relative level of a liquid phase in a wet gas.
User interface	Signed floating-point number

Cut off inhomogeneous wet gas



Navigation	 Application → Sensor → Two phase flow → Cut off inh. gas
Description	Enter cut off value for inhomogeneous wet gas applications. Below this value the "Index inhomogeneous medium" is set to 0.
User entry	Positive floating-point number

Cut off inhomogeneous liquid



Navigation	 Application → Sensor → Two phase flow → Cut off liquid
Description	<p>Enter cut off value for inhomogeneous liquid applications. Below this value the "Index inhomogeneous medium" is set to 0.</p> <p>Additional information:</p> <p>This parameter is used for entrained gas in liquid applications or solids in liquid applications.</p>
User entry	Positive floating-point number

4.4.6 "External compensation" submenu

Navigation  Application → Sensor → External comp.

▶ External compensation	
Pressure compensation	→  100
Pressure value	→  100

Pressure compensation

Navigation  Application → Sensor → External comp. → Pressure compen.

Description Select the pressure compensation type.

- Selection
- Off
 - Fixed value

Pressure value

Navigation  Application → Sensor → External comp. → Pressure value

Prerequisite In the **Pressure compensation** parameter in the **External compensation** submenu, the **Fixed value** option is selected.

Description Enter fixed value for the pressure compensation.
Additional information:
The applicable unit of measure is specified in the "System units" submenu.

User entry Positive floating-point number

4.4.7 "Corrected volume flow calculation" submenu

Navigation  Application → Sensor → Corr. vol.flow.

▶ Corrected volume flow calculation	
Select reference density	→  101
Fixed reference density	→  101

Reference temperature	→  101
Linear expansion coefficient	→  102
Square expansion coefficient	→  102

Select reference density

Navigation	  Application → Sensor → Corr. vol.flow. → Select ref. dens
Description	Select the reference density to use to calculate the corrected volume flow.
Selection	<ul style="list-style-type: none"> ■ Fixed reference density ■ Calculated reference density

Fixed reference density

Navigation	  Application → Sensor → Corr. vol.flow. → Fix ref.density
Prerequisite	In the Select reference density parameter (→  101), the Fixed reference density option is selected.
Description	Enter a fixed value for the reference density.
User entry	Positive floating-point number

Reference temperature

Navigation	  Application → Sensor → Corr. vol.flow. → Ref. temperature
Prerequisite	In the Select reference density parameter (→  101), the Calculated reference density option is selected.
Description	Enter a reference temperature to calculate the reference density.
User entry	-273.15 to 99 999 °C

Additional information *Calculation of the reference density*

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

 ρ_N Reference density ρ Medium density currently measured t Medium temperature currently measured t_N Reference temperature at which the reference density is calculated (e.g. 20 °C) Δt $t - t_N$ α Linear expansion coefficient of the medium, unit = [1/K]; K = Kelvin β Square expansion coefficient of the medium, unit = [1/K²]**Linear expansion coefficient****Navigation**

Application → Sensor → Corr. vol.flow. → Linear exp coeff

PrerequisiteIn the **Select reference density** parameter (→ 101), the **Calculated reference density** option is selected.**Description**

Enter a linear, medium-specific expansion coefficient to calculate the reference density.

Additional information:

For a medium with a non-linear expansion pattern, use the "Square expansion coefficient" parameter instead.

User entry

Signed floating-point number

Square expansion coefficient**Navigation**

Application → Sensor → Corr. vol.flow. → Square exp coeff

PrerequisiteIn the **Select reference density** parameter (→ 101), the **Calculated reference density** option is selected.**Description**

Enter a quadratic, medium-specific expansion coefficient to calculate the reference density.

Additional information:

For a medium with a linear expansion pattern, use the "Linear expansion coefficient" parameter instead.

User entry0 to 1 1/K²

4.4.8 "Sensor adjustment" submenu

Navigation  Application → Sensor → Sensor adjustm.

▶ Sensor adjustment		
Installation direction		→  103
▶ Zero point adjustment		→  103
▶ Process variable adjustment		→  104

Installation direction

Navigation  Application → Sensor → Sensor adjustm. → Install. direct.

Description Select sign of flow direction

- Selection**
- Forward flow
 - Reverse flow

"Zero point adjustment" submenu

Navigation  Application → Sensor → Sensor adjustm. → Zero point adj.

▶ Zero point adjustment		
Zero point adjustment control		→  103
Zero point adjustment status		→  104
Progress		→  104

Zero point adjustment control

Navigation  Application → Sensor → Sensor adjustm. → Zero point adj. → Zero point adj.

Description Start or cancel a zero point adjustment.
 Additional information:
 The following conditions must be met to perform a zero point adjustment successfully:

- The actual flow rate must be 0.
- The pressure must be at least 1.034 bar.

- Selection**
- Cancel
 - Start

Zero point adjustment status

Navigation  Application → Sensor → Sensor adjustm. → Zero point adj. → Zero pt adj.stat

Description Displays the status of the zero point adjustment.

- User interface**
- Busy
 - Zero point adjust failure
 - Ok

Progress

Navigation  Application → Sensor → Sensor adjustm. → Zero point adj. → Progress

Description Shows the progress of the process.

User interface 0 to 100 %

"Process variable adjustment" submenu

Navigation  Application → Sensor → Sensor adjustm. → Variable adjust

▶ **Process variable adjustment**

Mass flow offset	→  105
Mass flow factor	→  105
Volume flow offset	→  105
Volume flow factor	→  106
Density offset	→  106
Density factor	→  106
Corrected volume flow offset	→  106
Corrected volume flow factor	→  107

Temperature offset	→ 107
Temperature factor	→ 107

Mass flow offset



Navigation	Application → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset
Description	Enter the offset by which to shift the zero point for mass flow. Additional information: The applicable unit of measure is kg/s.
User entry	Signed floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

Mass flow factor



Navigation	Application → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor
Description	Enter the multiplication factor to apply to the mass flow value.
User entry	Positive floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

Volume flow offset



Navigation	Application → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset
Description	Enter the offset by which to shift the zero point for volume flow. Additional information: The applicable unit of measure is m ³ /s.
User entry	Signed floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

Volume flow factor



Navigation Application → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor

Description Enter the multiplication factor to apply to the volume flow.

User entry Positive floating-point number

Additional information *Description*
Corrected value = (factor × value) + offset

Density offset



Navigation Application → Sensor → Sensor adjustm. → Variable adjust → Density offset

Description Enter the offset by which to shift the zero point for density.
Additional information:
The applicable unit of measure is kg/m³.

User entry Signed floating-point number

Additional information *Description*
Corrected value = (factor × value) + offset

Density factor



Navigation Application → Sensor → Sensor adjustm. → Variable adjust → Density factor

Description Enter the multiplication factor to apply to the density value.

User entry Positive floating-point number

Additional information *Description*
Corrected value = (factor × value) + offset

Corrected volume flow offset



Navigation Application → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset

Description Enter the offset by which to shift the zero point for the corrected volume flow.
Additional information:
The applicable unit of measure is Nm³/s.

User entry	Signed floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

Corrected volume flow factor


Navigation	Application → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor
Description	Enter the multiplication factor to apply to the corrected volume flow value.
User entry	Positive floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

Temperature offset


Navigation	Application → Sensor → Sensor adjustm. → Variable adjust → Temp. offset
Description	Enter the offset by which to shift the zero point for temperature. Additional information: The applicable unit of measure is K.
User entry	Signed floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

Temperature factor


Navigation	Application → Sensor → Sensor adjustm. → Variable adjust → Temp. factor
Description	Enter the multiplication factor to apply to the temperature value.
User entry	Positive floating-point number
Additional information	<i>Description</i> Corrected value = (factor × value) + offset

4.4.9 "Calibration" submenu

Navigation  Application → Sensor → Calibration

▶ Calibration	
Nominal diameter	→  108
Calibration factor	→  108
Zero point	→  108

Nominal diameter

Navigation	 Application → Sensor → Calibration → Nominal diameter
Description	Shows the nominal diameter of the sensor.
User interface	Character string comprising numbers, letters and special characters

Calibration factor

Navigation	 Application → Sensor → Calibration → Cal. factor
Description	Displays the current calibration factor for the flow rate measuring sensor. Additional information: The factory setting for the calibration factor can be found on the sensor's nameplate.
User interface	Signed floating-point number

Zero point

Navigation	 Application → Sensor → Calibration → Zero point
Description	Displays the zero point correction value for the sensor. NOTE Users logged on in the Service role have write access!
User entry	Signed floating-point number

CO to 5

Navigation Application → Sensor → Calibration → CO to 5**Description**

Displays the current coefficients for density.

User interface

Signed floating-point number

4.5 "Current output" submenu

Navigation  Application → Curr.output 1

▶ Current output 1	
Process variable current output	→  110
Measuring mode current output	→  111
Current range output	→  115
Fixed current	→  116
Lower range value output	→  116
Upper range value output	→  118
Damping current output	→  118
Failure behavior current output	→  119
Failure current	→  119
Output current 1	→  120

Process variable current output

Navigation   Application → Curr.output 1 → Proc.var. outp

Description Select process variable for current output

- Selection
- Off *
 - Mass flow
 - Volume flow
 - Corrected volume flow
 - Temperature
 - Density *
 - Index inhomogeneous medium
 - Exciter current 0
 - Oscillation frequency 0
 - Oscillation amplitude 0 *
 - Frequency fluctuation 0 *
 - Oscillation damping 0
 - Oscillation damping fluctuation 0 *

* Visibility depends on order options or device settings

- Signal asymmetry
- HBSI *
- Electronics temperature

Measuring mode current output



Navigation	  Application → Curr.output 1 → Meas.mode outp
Prerequisite	A process variable is selected in the Process variable current output parameter (→  24).
Description	Select the measuring mode for the output.
Selection	<ul style="list-style-type: none">▪ Forward flow▪ Forward/Reverse flow *▪ Reverse flow compensation

* Visibility depends on order options or device settings

Additional information

Selection

- **Forward flow** option

The current output signal is proportional to the measured value for the process variable assigned.

Additional information:

- The lower limit value ("Lower range value output " parameter) and the upper limit value ("Upper range value output " parameter) of the measured value range do not have to have the same algebraic sign, i.e. the lower limit value can be negative and the upper limit value positive.
- If the measured value lies outside the scaled measured value range, diagnostic message "441 Current output faulty" is generated.

- **Forward/Reverse flow** option

The current output outputs the absolute value for the assigned process variable (reflection across the lower limit value of the measured value range).

Additional information:

- The lower limit value ("Lower range value output " parameter) and the upper limit value ("Upper range value output " parameter) of the measured value range must have the same algebraic sign.
- If the absolute value exceeds the upper limit value of the measured value range, diagnostic message "441 Current output faulty" is generated.
- This setting is generally only used for flow-related process variables.

- **Reverse flow compensation** option


The current output signal is proportional to the measured value for the process variable assigned.

Additional information:

- The lower limit value ("Lower range value output " parameter) and the upper limit value ("Upper range value output " parameter) of the measured value range do not have to have the same algebraic sign, i.e. the lower limit value can be negative and the upper limit value positive.
- Reverse flow (a measured value below the lower limit value of the measured value range) is stored in a buffer and processed after a maximum delay of 60 s with the next forward flow.
- When the flow exceeds the maximum value or the reverse flow stored in the buffer cannot be processed within approx. 60 s, diagnostic message "441 Current output faulty" is generated.
- This option is used e.g. to compensate intermittent reverse flow, which may occur in connection with positive displacement pumps as a result of wear and tear or high viscosity.
- There is no flow damping with this setting.

1. Examples of the behavior of the current output

Defined measuring range: lower range value and upper range value with the **same** algebraic sign.

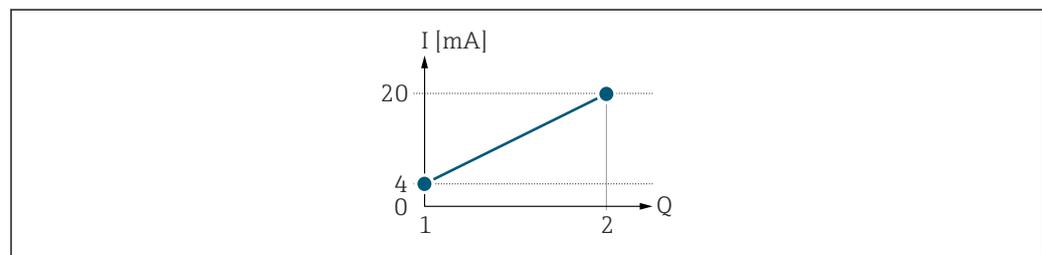

A0028084


I Current

Q Flow

1 Lower range value (value assigned to 0/4 mA current)

2 Upper range value (value assigned to 20 mA current)

With the following flow response:

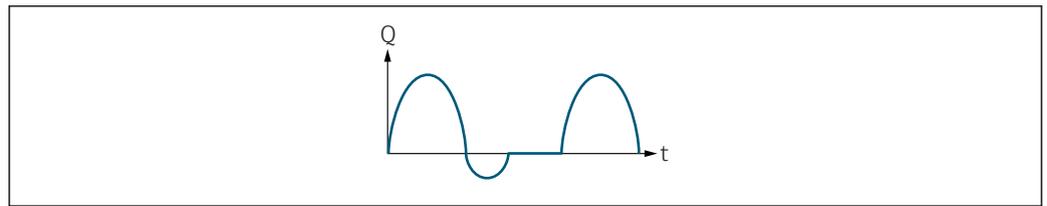


A0028091

Q Flow
 t Time

With the **Forward flow** option

The current output signal is proportional to the process variable assigned. The flow components outside the scaled measuring range are not taken into account for signal output..

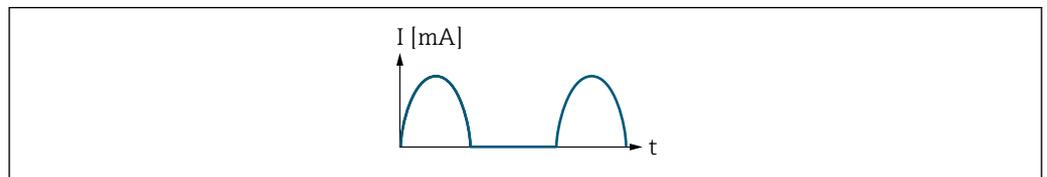


A0028092

I Current
 t Time

With the **Forward/Reverse flow** option

The current output signal is independent of the direction of flow.

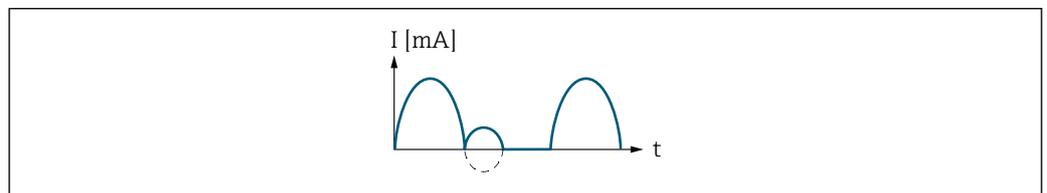


A0028093

I Current
 t Time

With the **Reverse flow compensation** option

Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s.

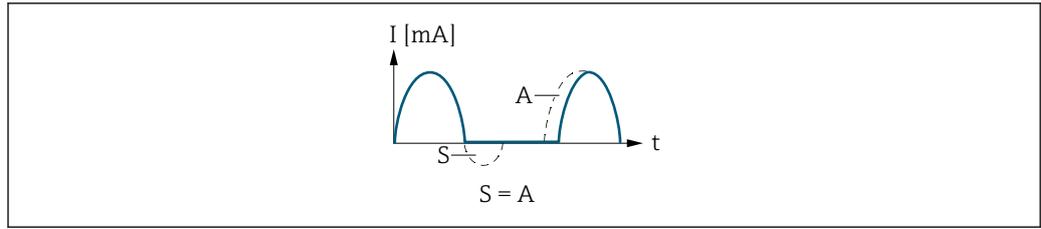


A0028094

- I* Current
- t* Time
- S* Flow components saved
- A* Balancing of saved flow components

2. Examples of the behavior of the current output


Defined measuring range: lower range value and upper range value with **different** algebraic signs.

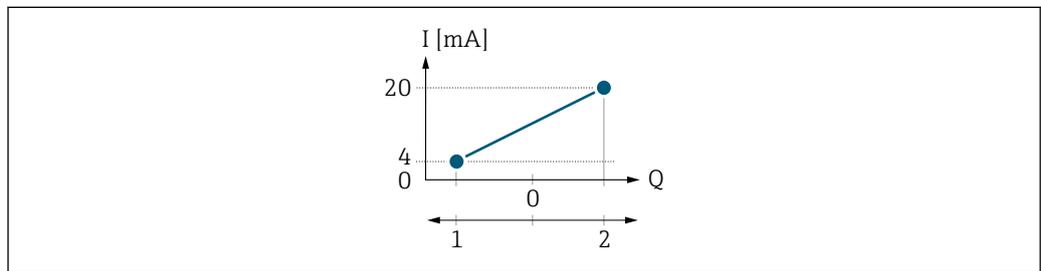

A0028095

- I* Current
- Q* Flow
- 1* Lower range value (value assigned to 0/4 mA current)
- 2* Upper range value (value assigned to 20 mA current)

With flow a (–) outside, b (– –) inside the measuring range:

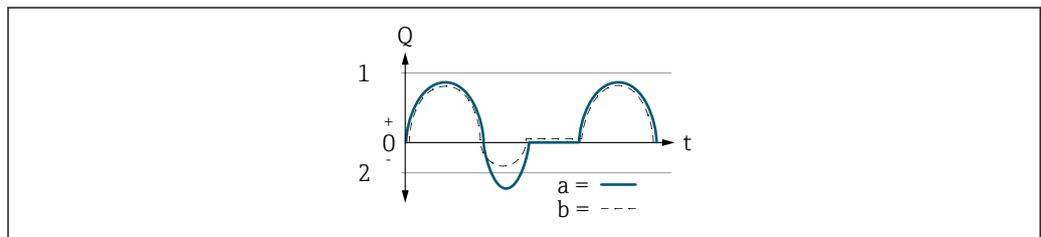


A0028098

- Q* Flow
- t* Time
- a* Lower range value (value assigned to 0/4 mA current)
- b* Upper range value (value assigned to 20 mA current)

With the **Forward flow** option

- a (–): The flow components outside the scaled measuring range cannot be taken into account for signal output. The diagnostic message Δ S441 Current output 1 to n diagnostic message is displayed.
- b (– –): The current output signal is proportional to the process variable assigned.

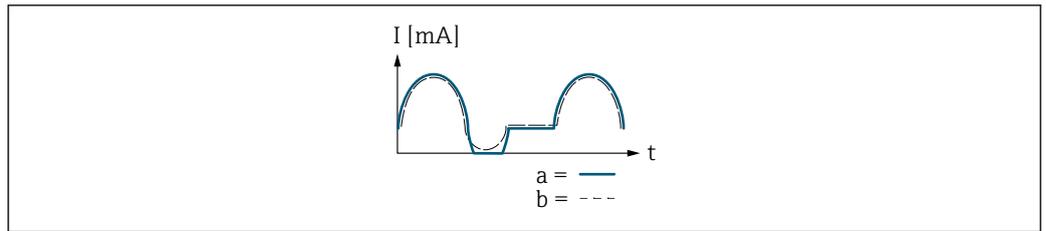

A0028100


I Current
t Time

With the **Forward/Reverse flow** option

This option cannot be selected here since the values for the **20 mA value** parameter (→ 27) and **20 mA value** parameter (→ 27) have different algebraic signs.

With the **Reverse flow compensation** option

Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s.

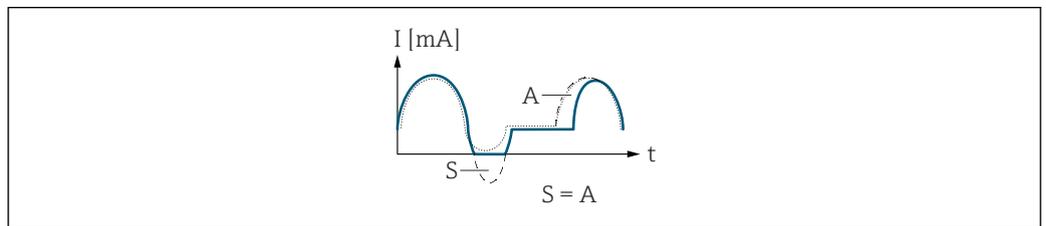

A0028101

I Current
t Time
S Flow components saved
A Balancing of saved flow components

Current range output



Navigation

Application → Curr.output 1 → Curr.range out

Description

Select the current range for the measured value output and the upper and lower fault condition signal level.

Additional information:

- The measured value range is specified in the "Lower range value output " parameter and the "Upper range value output " parameter.
- If the measured value lies outside the scaled measured value range, diagnostic message "441 Current output faulty" is generated.
- In the event of a device alarm, the current output adopts the behavior specified in the "Failure behavior current output " parameter.

Selection

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- Fixed value


Additional information

Selection

- **4...20 mA NE (3.8...20.5 mA)** option
Select this option to set the current range in accordance with NAMUR recommendation NE43.
- **Fixed value** option
Select this option to set the current output to a current value instead of a range.

The current value is defined in the **Fixed current** parameter (→  27).

The graphic shows the relationship between the current range for the output of the process value and the lower and upper alarm levels:

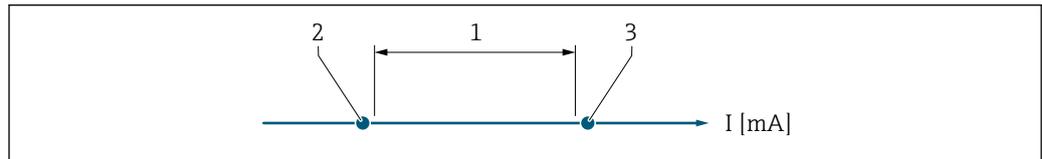

A0034351

- 1 Current range for process value
- 2 Lower level for signal on alarm
- 3 Upper level for signal on alarm

Selection (current range for process value)	Lower level for signal on alarm	Upper level for signal on alarm
4...20 mA NE (3.8...20.5 mA)	< 3.6 mA	> 21.5 mA
4...20 mA US (3.9...20.8 mA)		
4...20 mA (4... 20.5 mA)		

Fixed current



Navigation

  Application → Curr.output 1 → Fixed current

Prerequisite

In the **Current range output** parameter in the **Current output 1** submenu, the **Fixed value** option is selected.

Description

Enter the value for the "Fixed value" option.

User entry

3.59 to 21.5 mA

Lower range value output



Navigation

  Application → Curr.output 1 → Low.range outp

Prerequisite

In the **Current range output** parameter, one of the following options is selected:

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)

Description

Enter lower range value for the measured value range.

Additional information:

- Depending on the setting selected for the "Measuring mode current output " parameter, the value specified for this parameter and the "Upper range value output " parameter must have the same algebraic sign or not.
- As a rule, the lower range value is scaled to be lower than the upper range value. As a result, the behavior of the current output is proportional to the process variable assigned. If the lower range value is scaled to be higher than the upper range value, then the behavior of the current output will be inversely proportional to the process variable assigned.

User entry


Signed floating-point number

Additional information

Examples of the behavior, depending on the option selected in the **Measuring mode current output** parameter (→  111).

Example: Measuring mode with "Forward flow" option

- **Lower range value output** parameter (→  25) = not equal to zero flow (e.g. -250 m³/h)
- **Upper range value output** parameter (→  27) = not equal to zero flow (e.g. +750 m³/h)
- Calculated current value = 8 mA at zero flow

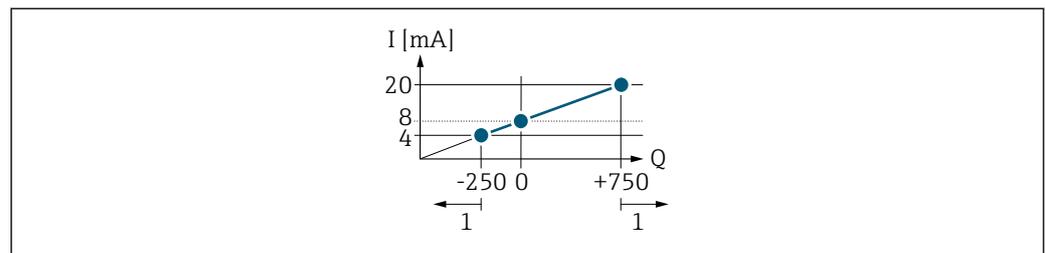


A0013757

- Q Flow
- I Current
- 1 Measuring range is exceeded or undershot

The linear operational range of the measuring device is defined by the values entered for the **Lower range value output** parameter (→  25) and **Upper range value output** parameter (→  27), and by the selected current range.

Example: Measuring mode with the "Forward/Reverse flow" option

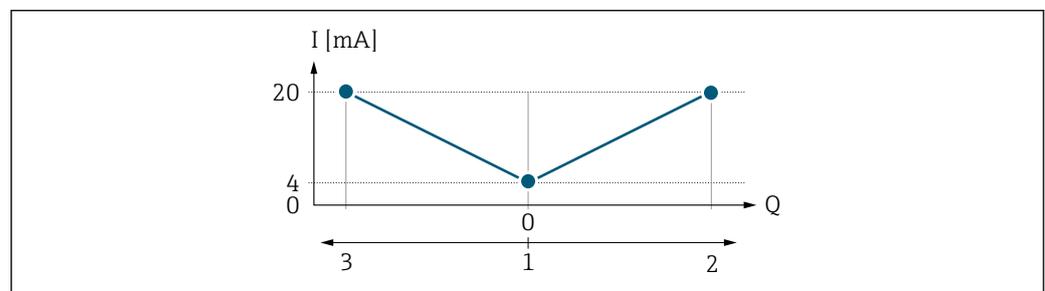

A0013758

- Q Flow
- I Current
- 1 Value assigned to 0/4 mA current
- 2 Forward flow
- 3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **Lower range value output** parameter (→  25) and **Upper range value output** parameter (→  27) must have the same algebraic sign.

The value for the **Upper range value output** parameter (→  27) (e.g. reverse flow) corresponds to the mirrored value for the **Upper range value output** parameter (→  27) (e.g. forward flow).

Example: Measuring mode with the "Reverse flow compensation" option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s.

Upper range value output

Navigation

  Application → Curr.output 1 → Upp.range outp

Prerequisite

In the **Current range output** parameter, one of the following options is selected:

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)

Description

Enter upper range value for the measured value range.

User entry

Signed floating-point number

Additional information

 Examples of the behavior, depending on the option selected in the **Measuring mode current output** parameter: **Lower range value output** parameter (→  25):

Damping current output

Navigation

  Application → Curr.output 1 → Damp.curr.outp

Prerequisite

A process variable is selected in the **Process variable current output** parameter and one of the following options is selected in the **Current range output** parameter:

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)

Description

Enter time constant (PT1 element) to set the reaction time of the output signal to fluctuations in the measured value caused by process conditions.

Additional information:

- The smaller the time constant the faster the output reacts to fluctuations in the measured value.
- If the time constant is 0, damping is deactivated.

User entry

0.0 to 999.9 s

Failure behavior current output


Navigation	Application → Curr.output 1 → Fail.behav.out
Prerequisite	A process variable is selected in the Process variable current output parameter and one of the following options is selected in the Current range output parameter: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA)
Description	Specify how the output should behave in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Min. ■ Max. ■ Last valid value ■ Actual value ■ Fixed value
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Min. option The current output outputs the lower fault condition signal level for the specified current range. Additional information: The current range is specified in the "Current range output " parameter. ■ Max. option The current output outputs the upper fault condition signal level for the specified current range. Additional information: The current range is specified in the "Current range output " parameter. ■ Last valid value option The current output outputs the last valid value measured before the device alarm occurred. ■ Actual value option The current output outputs the flow value currently measured. The device alarm is ignored. ■ Fixed value option The current output outputs the value specified. Additional information: The value is specified in the "Failure current " parameter.

Failure current


Navigation	Application → Curr.output 1 → Fail. current
Prerequisite	In the Failure behavior current output parameter in the Current output 1 submenu, the Fixed value option is selected.
Description	Enter the value for the "Fixed value" option in the "Failure behavior current output " parameter.
User entry	3.59 to 21.5 mA

Output current

Navigation	 Application → Curr.output 1 → Output curr. 1
Description	Displays the current value currently calculated.
User interface	3.59 to 21.5 mA

4.6 "Pulse/frequency/switch output 1" submenu

Configuring the pulse/frequency/switch output

Navigation  Application → PFS output 1

► Pulse/frequency/switch output 1	
Operating mode	→  122
Assign pulse output 1	→  124
Measuring mode	→  125
Value per pulse	→  125
Pulse width	→  126
Failure mode	→  126
Pulse output 1	→  127
Assign frequency output	→  128
Measuring mode	→  128
Minimum frequency value	→  129
Maximum frequency value	→  130
Measuring value at minimum frequency	→  130
Measuring value at maximum frequency	→  130
Damping output 1	→  131
Failure mode	→  131
Failure frequency	→  131
Output frequency 1	→  132
Switch output function	→  132
Assign diagnostic behavior	→  133
Assign limit	→  133

Switch-on value	→  135
Switch-off value	→  135
Switch-on delay	→  136
Switch-off delay	→  136
Assign flow direction check	→  136
Assign status	→  136
Failure mode	→  137
Invert output signal	→  137
Switch state 1	→  138

Operating mode

Navigation

  Application → PFS output 1 → Operating mode

Description

Select the operating mode for the output.

Selection

- Pulse
- Frequency
- Switch

Additional information

Selection

■ **Pulse option**

Quantitatively proportional pulse with pulse width to be configured. Whenever the pulse value for the specified process variable has been reached, a pulse is emitted, the duration of which is set within the "Pulse width" parameter.

Additional information:

The process variable for the pulse output is specified in the "Assign pulse output" parameter.

■ **Frequency option**

The output frequency is proportional to the value for the process variable assigned, with a pulse-to-interval ratio of 1:1.

Additional information:

The process variable for the frequency output is specified in the "Assign frequency output" parameter.

■ **Switch option**

Indicates when the state of the device changes, e.g. when a specified limit value is reached or an alarm or warning is triggered.

Additional information:

- The switch output can be in one of two states: either it is conductive or it is non-conductive.


- When the function assigned to the switch output is triggered, the switch output will depending on the output configuration either be continuously conductive or continuously non-conductive.

- The switch output is used to display diagnostic information at the system level, e.g. by connecting a lamp that lights up when the function assigned is triggered.

"Pulse" option

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Pulse width 0.05 ms
- Pulse rate 1 000 pulse/s

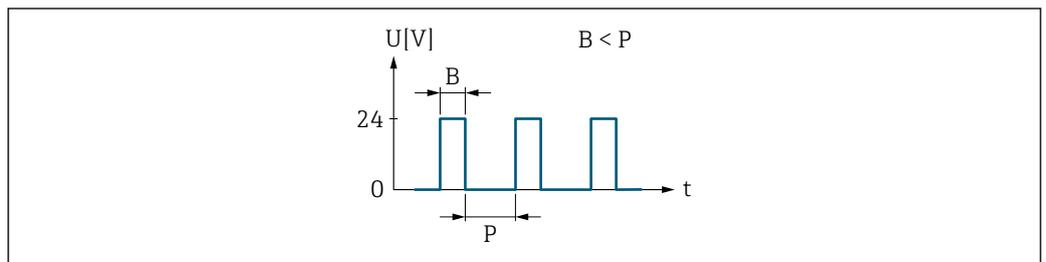

A0026883

5 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Frequency" option

Example

- Flow rate Q approx. 100 g/s
- Min. frequency (f_{min}) 0 Hz
- Max. frequency (f_{max}) 1000 Hz
- Flow rate at min. frequency (Q_{min}) 0 g/s
- Flow rate at max. frequency (Q_{max}) 1000 g/s
- Output frequency (f_{out}) approx. 100 Hz

$$f_{out} = f_{min} + Q \times [(f_{max} - f_{min}) / (Q_{max} - Q_{min})] =$$

$$0 \text{ Hz} + 100 \text{ g/s} \times [(1000 \text{ Hz} - 0 \text{ Hz}) / (1000 \text{ g/s} - 0 \text{ g/s})] = \mathbf{100 \text{ Hz}}$$

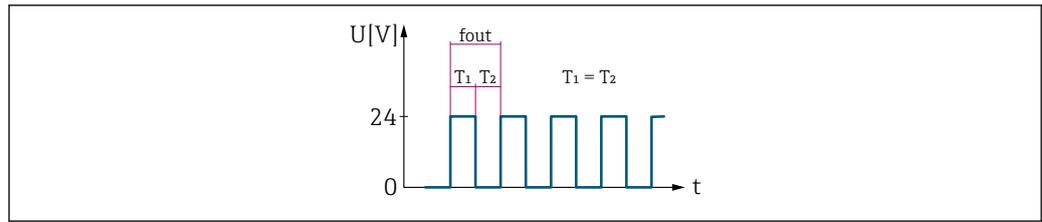

A0026886

6 Flow-proportional frequency output

"Switch" option

Example

Alarm response without alarm




A0026884

7 No alarm, high level

Example

Alarm response in case of alarm

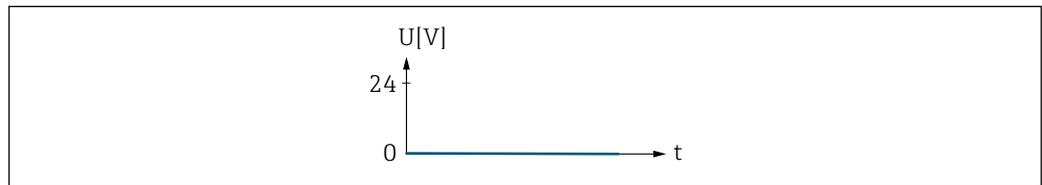

A0026885

8 Alarm, low level

Assign pulse output 1



Navigation

Application → PFS output 1 → Assign pulse 1

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description

Select process variable for pulse output.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow

Measuring mode 	
Navigation	  Application → PFS output 1 → Measuring mode
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Pulse option is selected.
Description	Select measuring mode for pulse output.
Selection	<ul style="list-style-type: none"> ■ Forward flow ■ Forward/Reverse flow ■ Reverse flow ■ Reverse flow compensation
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Forward flow option Positive flow is output, negative flow not output. ■ Forward/Reverse flow option Both positive and negative flow are output (absolute value), whereby no distinction is made between positive and negative flow. ■ Reverse flow option Negative flow is output, positive flow is not output. ■ Reverse flow compensation option Positive flow is output. Negative flow quantities are buffered, processed, and output after a maximum delay of 60 s. Additional information: This option is used e.g. to compensate intermittent negative flow, which may occur in connection with positive displacement pumps as a result of wear and tear or high viscosity.
Value per pulse 	
Navigation	  Application → PFS output 1 → Value per pulse
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Pulse option is selected.
Description	<p>Enter the measured value to which a pulse corresponds.</p> <p>Additional information: Weighting of the pulse output with a quantity. The lower the pulse value, the</p> <ul style="list-style-type: none"> – better the resolution. – higher the frequency of the pulse response.
User entry	Signed floating-point number

Pulse width



Navigation

Application → PFS output 1 → Pulse width

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description

Specify the duration of the output pulse.

Additional information:

The maximum pulse rate is defined by $f_{max} = 1 / (2 \times \text{pulse width})$. The interval between two pulses (P) is at least as long as the specified pulse width (B).

The maximum flow is defined by $Q_{max} = f_{max} \times \text{pulse value}$. If the flow exceeds these limit values, the measuring device displays the diagnostic message "443 Pulse output faulty".

Example:


- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

User entry

0.05 to 2 000 ms

Additional information

Description

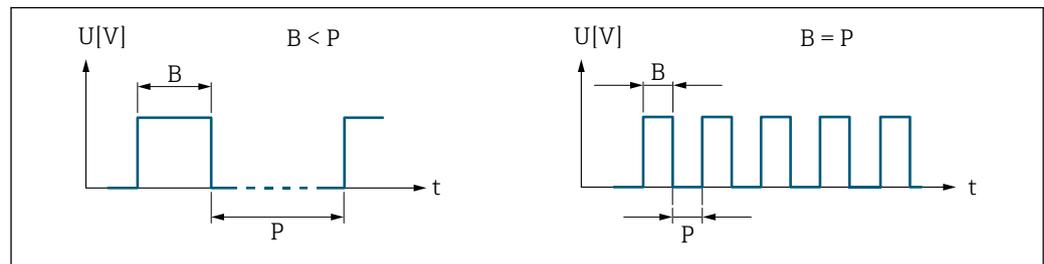

A0026882

- B* Pulse width entered
- P* Pauses between the individual pulses

Failure mode



Navigation

Application → PFS output 1 → Failure mode

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description

Specify how the output should behave in the event of a device alarm.

Additional information:

For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.

Selection

- Actual value
- No pulses

Additional information*Selection*

- **Actual value** option

In the event of a device alarm, the pulse output continues based on the current flow measurement. The issue is ignored.

Additional information:

A device alarm indicates a serious malfunction of the measuring device that may impact the measurement quality to the point that accuracy can no longer be ensured. This option is only recommended if the necessary safeguards are in place to ensure that no alarm condition can impact the measurement quality.

- **No pulses** option

In the event of a device alarm, no pulses are emitted.

Pulse output 1**Navigation**

☰☰ Application → PFS output 1 → Pulse output 1

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Pulse** option is selected.

Description

Displays the pulse frequency currently output.

Additional information:


- The output behavior can be inverted in the "Invert output signal" parameter, i.e. in this case the transistor will be non-conductive for the duration of a pulse.
- The "Invert output signal" parameter is not available for all devices.

User interface

Positive floating-point number

Additional information*Description*

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

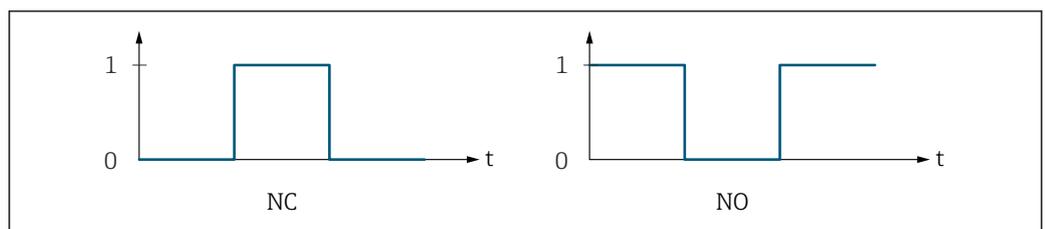

A0028726

- 0 Non-conductive
- 1 Conductive
- NC Normally closed
- NO Normally open



The behavior of the output in the event of a device alarm can be configured: **Failure mode** parameter (→ ☰ 126)

Assign frequency output
**Navigation**

Application → PFS output 1 → Assign freq.

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.

Description

Select process variable for frequency output.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Index inhomogeneous medium
- Exciter current 0
- Oscillation frequency 0
- Oscillation amplitude 0 *
- Frequency fluctuation 0 *
- Oscillation damping 0
- Oscillation damping fluctuation 0 *
- Signal asymmetry
- HBSI *
- Electronics temperature

Measuring mode
**Navigation**

Application → PFS output 1 → Measuring mode

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.

Description

Select measuring mode for frequency output.

Selection

- Forward flow
- Forward/Reverse flow
- Reverse flow compensation

* Visibility depends on order options or device settings

Additional information*Selection*

- **Forward flow** option

The output signal is proportional to the measured value for the process variable assigned.

Additional information:

- The lower limit value ("Measuring value at minimum frequency" parameter) and the upper limit value ("Measuring value at maximum frequency" parameter) of the measured value range do not have to have the same algebraic sign, i.e. the lower limit value can be negative and the upper limit value positive.
- If the measured value lies outside the scaled measured value range, diagnostic message "442 Frequency output faulty" is generated.

- **Forward/Reverse flow** option

The output outputs the absolute value for the assigned process variable (reflection across the lower limit value of the measured value range).

Additional information:

- The lower limit value ("Measuring value at minimum frequency" parameter) and the upper limit value ("Measuring value at maximum frequency" parameter) of the measured value range must have the same algebraic sign.
- If the absolute value exceeds the upper limit value of the measured value range, diagnostic message "442 Frequency output faulty" is generated.
- This setting is generally used for flow-related process variables.

- **Reverse flow compensation** option

The output signal is proportional to the measured value for the process variable assigned.

Additional information:

- The lower limit value ("Measuring value at minimum frequency" parameter) and the upper limit value ("Measuring value at maximum frequency" parameter) of the measured value range do not have to have the same algebraic sign, i.e. the lower limit value can be negative and the upper limit value positive.
- Reverse flow (a measured value below the lower limit value of the measured value range) is stored in a buffer and processed after a maximum delay of 60 s with the next forward flow.
- When the flow exceeds the maximum value or the reverse flow stored in the buffer cannot be processed within approx. 60 s, diagnostic message "442 Frequency output faulty" is generated.
- This option is used e.g. to compensate intermittent reverse flow, which may occur in connection with positive displacement pumps as a result of wear and tear or high viscosity.
- There is no flow damping with this setting.

Minimum frequency value**Navigation**

Application → PFS output 1 → Min. freq. value

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.

Description

Enter the minimum frequency for the frequency range.

Additional information:

The lower range value for the measured value range is specified in the "Measuring value at minimum frequency" parameter.

User entry

0.0 to 10 000.0 Hz

Maximum frequency value

**Navigation**

Application → PFS output 1 → Max. freq. value

PrerequisiteIn the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.**Description**

Enter the maximum frequency for the measured value output.

Additional information:

The upper range value for the measured value range that corresponds to the maximum frequency is specified in the "Measuring value at maximum frequency" parameter.

User entry

0.0 to 10 000.0 Hz

Measuring value at minimum frequency

**Navigation**

Application → PFS output 1 → Val. at min.freq

PrerequisiteIn the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.**Description**

Enter lower range value for the measured value range.

Additional information:

- Depending on the setting selected for the "Measuring mode" parameter, the value specified for this parameter and the "Measuring value at maximum frequency" parameter must have the same algebraic sign or not.

- As a rule, the lower range value is scaled to be lower than the upper range value. As a result, the behavior of the frequency output is proportional to the process variable assigned. If the lower range value is scaled to be higher than the upper range value, then the behavior of the frequency output will be inversely proportional to the process variable assigned.

User entry

Signed floating-point number

Measuring value at maximum frequency

**Navigation**

Application → PFS output 1 → Val. at max.freq

PrerequisiteIn the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.**Description**

Enter upper range value for the measured value range.

User entry

Signed floating-point number

Damping output 1 	
Navigation	  Application → PFS output 1 → Damping out. 1
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	<p>Enter time constant (PT1 element) to set the reaction time of the output signal to fluctuations in the measured value caused by process conditions.</p> <p>Additional information:</p> <ul style="list-style-type: none"> - The smaller the time constant the faster the output reacts to fluctuations in the measured value. - If the time constant is 0, damping is deactivated.
User entry	0 to 999.9 s
Failure mode 	
Navigation	  Application → PFS output 1 → Failure mode
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.
Description	<p>Specify how the output should behave in the event of a device alarm.</p> <p>Additional information:</p> <p>For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.</p>
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ Defined value ▪ 0 Hz
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Actual value option The frequency output outputs the flow value currently measured. ▪ Defined value option The frequency output outputs the value specified. Additional information: The value is specified in the "Failure frequency" parameter. ▪ 0 Hz option In the event of a device alarm, the frequency output outputs 0 Hz.
Failure frequency 	
Navigation	  Application → PFS output 1 → Failure freq.
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Frequency option is selected.

Description Enter the value for the "Defined value" option in the "Failure mode" parameter.

User entry 0.0 to 12 500.0 Hz

Output frequency 1

Navigation  Application → PFS output 1 → Output freq. 1

Prerequisite In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.

Description Displays the pulse frequency currently output.

User interface 0.0 to 12 500.0 Hz

Switch output function

Navigation  Application → PFS output 1 → Switch out funct

Prerequisite In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description Assign a function to the switch output.
 Additional information:
 - The state of the switch output (on or off) when the assigned function is triggered can be inverted in the "Invert output signal" parameter
 - The "Invert output signal" parameter is not available for all devices.

Selection

- Off
- On
- Diagnostic behavior
- Limit
- Flow direction check
- Status

Additional information *Selection*

- **Off** option
The switch output is permanently switched off (open, non-conductive).
- **On** option
The switch output is permanently switched on (closed, conductive).
- **Diagnostic behavior** option
The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.

- **Limit** option
The switch output is switched on (closed, conductive), if a limit value specified for the process variable is reached.
- **Flow direction check** option
The switch output is switched on (closed, conductive), when the flow direction changes (forward or reverse flow).
- **Status** option
The switch output is switched on (closed, conductive) to indicate the device status for the selected detection method, e.g. partially filled pipe detection or low flow cut off.

Assign diagnostic behavior

Navigation	  Application → PFS output 1 → Assign diag. beh
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.
Description	The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.
Selection	<ul style="list-style-type: none"> ▪ Alarm ▪ Alarm or warning ▪ Warning
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Alarm option The switch output is only switched on for diagnostic events of the "Alarm" category. ▪ Alarm or warning option The switch output is switched on for diagnostic events of the "Alarm" or "Warning" category. ▪ Warning option The switch output is only switched on for diagnostic events of the "Warning" category.

Assign limit

Navigation	  Application → PFS output 1 → Assign limit
Prerequisite	In the Operating mode parameter in the Pulse/frequency/switch output 1 submenu, the Switch option is selected.
Description	Select the process variable to monitor in case the specified limit value is exceeded. If a limit value for the selected process variable is exceeded, the output is switched on.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Mass flow ▪ Volume flow ▪ Density * ▪ Corrected volume flow

* Visibility depends on order options or device settings


- Temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Oscillation damping

Additional information

Switch-on point > switch-off point

Behavior of the status output if switch-on point > switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

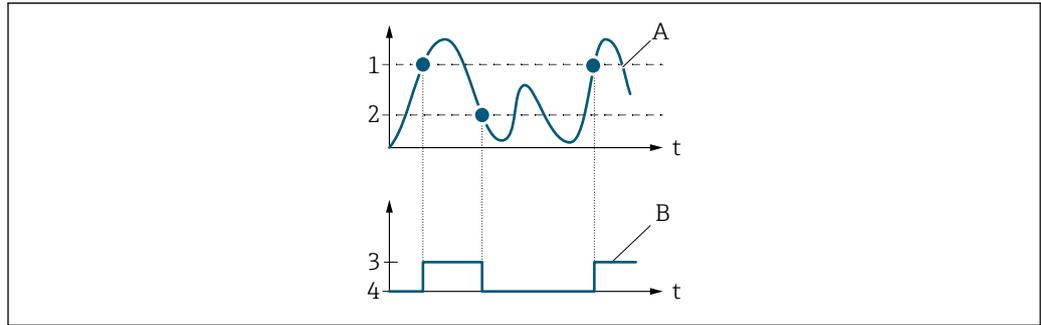


A0026891

- 1 Switch-on point
- 2 Switch-off point
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point < switch-off point

Behavior of the status output if switch-on point < switch-off point:

- Process variable < switch-on point: transistor is conductive
- Process variable > switch-off point: transistor is not conductive

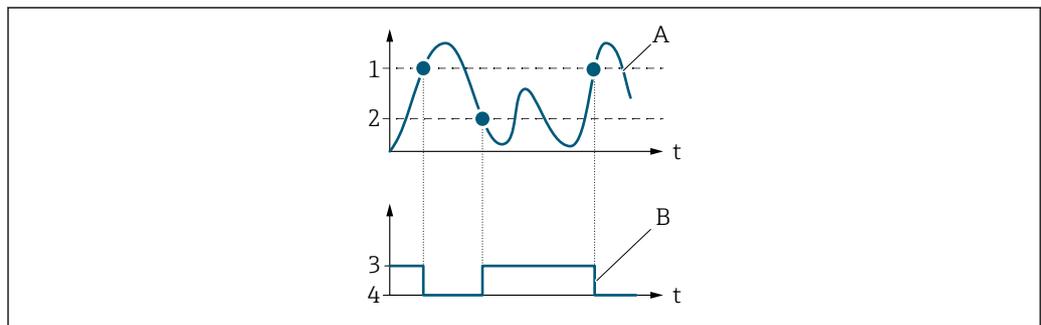


A0026892

- 1 Switch-on point
- 2 Switch-off point
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point = switch-off point

Behavior of the status output if switch-on point = switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

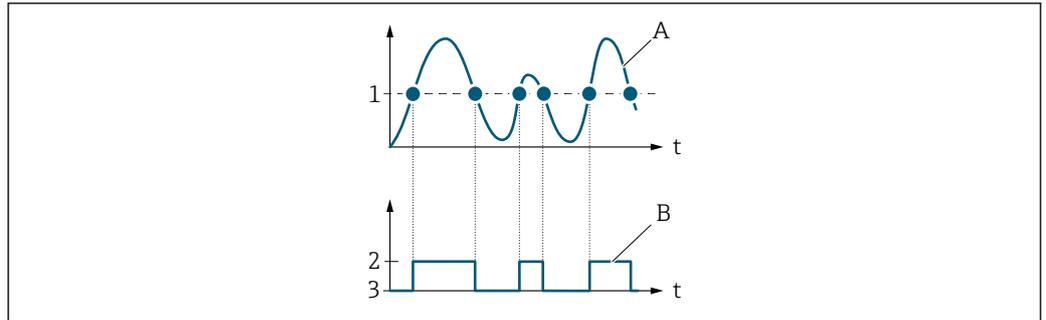

A0026893

- 1 Switch-on point = switch-off point
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value



Navigation

Application → PFS output 1 → Switch-on value

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description

Enter limit value for the switch-on point (process variable > switch-on value = closed, conductive).

Additional information:

To use a hysteresis: Switch-on point > Switch-off point.

User entry

Signed floating-point number

Switch-off value



Navigation

Application → PFS output 1 → Switch-off value

Prerequisite

In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description

Enter limit value for the switch-off point (process variable < switch-off value = open, non-conductive).

Additional information:

To use a hysteresis: Switch-on point > Switch-off point.

User entry

Signed floating-point number

Switch-on delay

**Navigation**

Application → PFS output 1 → Switch-on delay

PrerequisiteIn the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.**Description**

Enter delay before the switch output is switched on.

User entry0.0 to 100.0 s

Switch-off delay

**Navigation**

Application → PFS output 1 → Switch-off delay

PrerequisiteIn the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.**Description**

Enter delay before the switch output is switched off.

User entry0.0 to 100.0 s

Assign flow direction check

**Navigation**

Application → PFS output 1 → Assign dir.check

PrerequisiteIn the **Switch output function** parameter in the **Pulse/frequency/switch output 1** submenu, the **Frequency** option is selected.**Description**

Select process variable for flow direction monitoring.

Selection

- Off
 - Volume flow
 - Mass flow
 - Corrected volume flow
-

Assign status

**Navigation**

Application → PFS output 1 → Assign status

PrerequisiteIn the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description Select the device status to display for the switch output.
 Additional information:
 If the switch on point for the selected detection method is reached, the output is conductive. Otherwise, the switch output is non-conductive.

Selection

- Partially filled pipe detection
- Low flow cut off

Failure mode

Navigation   Application → PFS output 1 → Failure mode

Prerequisite In the **Operating mode** parameter in the **Pulse/frequency/switch output 1** submenu, the **Switch** option is selected.

Description Specify how the output should behave in the event of a device alarm.
 Additional information:
 For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.

Selection

- Actual status
- Open
- Closed

Additional information *Selection*

- **Actual status** option
 In the event of a device alarm, the issue is ignored and the switch output adopts the behavior currently specified for the "Switch output function" parameter.
- **Open** option
 In the event of a device alarm, the switch output's transistor is set to "non-conductive".

Invert output signal


Navigation   Application → PFS output 1 → Invert outp.sig.

Description Indicate whether to invert the output signal (Yes/No).
 Additional information:
 - If the output signal is inverted, the output behavior is the reverse of its configuration.
 - This setting does not apply to the frequency output.

Selection


- No
- Yes

Additional information *Selection: no (passive - negative)*

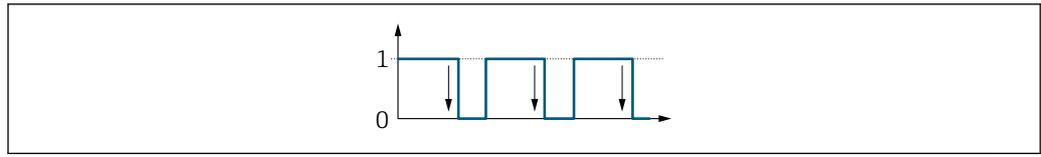

A0026693

Selection: yes (passive - positive)

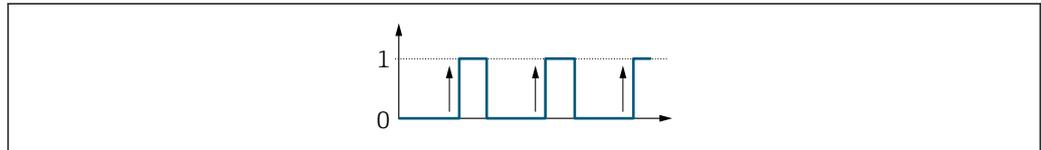

A0026692

Switch state 1

Navigation  Application → PFS output 1 → Switch state 1

Description Indicates the current switch output status.

User interface

- Open
- Closed

Additional information *User interface*

- **Open** option
The switch output is not conductive.
- **Closed** option
The switch output is conductive.

4.7 "Communication" submenu

Navigation  Application → Communication

▶ Communication	
▶ HART configuration	→  139
▶ Information	→  140
▶ Output	→  142

4.7.1 "HART configuration" submenu

Navigation  Application → Communication → HART config.

▶ HART configuration	
HART short tag	→  139
Device tag	→  139
HART address	→  140

HART short tag

Navigation  Application → Communication → HART config. → HART short tag

Description Enter a brief description for the measuring point.

User entry Character string comprising numbers, letters and special characters (8)

Device tag

Navigation  Application → Communication → HART config. → Device tag

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

User entry Character string comprising numbers, letters and special characters (32)

HART address



Navigation	Application → Communication → HART config. → HART address
Description	Enter the address to exchange data via the HART protocol.
User entry	0 to 63

4.7.2 "Information" submenu

Navigation Application → Communication → Information

▶ **Information**

Device revision	→ 140
Device ID	→ 141
Device type	→ 141
Manufacturer ID	→ 141
HART revision	→ 141
HART descriptor	→ 141
HART message	→ 142
Hardware revision	→ 142
Software revision	→ 142
HART date code	→ 142

Device revision

Navigation	Application → Communication → Information → Device revision
Description	Displays device revision.
User interface	0 to 255

Device ID



Navigation Application → Communication → Information → Device ID

Description Displays the device ID to identify the measuring device.

User interface Positive integer

Device type

Navigation Application → Communication → Information → Device type

Description Displays the device type registered with the HART Communication Foundation.

User interface 0 to 65 535

Manufacturer ID

Navigation Application → Communication → Information → Manufacturer ID

Description Displays the manufacturer ID registered with the HART Communication Foundation.

User interface 0 to 65 535

HART revision

Navigation Application → Communication → Information → HART revision

Description Displays the HART protocol revision of the measuring device.

User interface 5 to 7

HART descriptor



Navigation Application → Communication → Information → HART descriptor

Description Enter description for the measuring point

User entry Character string comprising numbers, letters and special characters (16)

HART message



Navigation Application → Communication → Information → HART message

Description Enter HART message to be sent via HART protocol when requested by the master.

User entry Character string comprising numbers, letters and special characters (32)

Hardware revision

Navigation Application → Communication → Information → Hardware rev.

Description Displays the hardware revision of the measuring device.

User interface 0 to 255

Software revision

Navigation Application → Communication → Information → Software rev.

Description Displays software revision of the measuring device.

User interface 0 to 255

HART date code




Navigation Application → Communication → Information → HART date code

Description Enter date for individual use.

User entry Character string comprising numbers, letters and special characters (10)

4.7.3 "Output" submenu

Navigation Application → Communication → Output

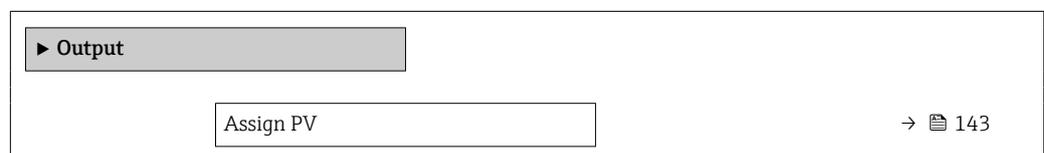

Primary variable (PV)	→ 143
Assign SV	→ 144
Secondary variable (SV)	→ 144
Assign TV	→ 144
Tertiary variable (TV)	→ 145
Assign QV	→ 145
Quaternary variable (QV)	→ 146

Assign PV



Navigation

Application → Communication → Output → Assign PV

Description

Assign a measured variable to the primary dynamic variable (PV).

Additional information:

The assigned measured variable is also used by the current output.

Selection

- Off *
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Index inhomogeneous medium
- Exciter current 0
- Oscillation frequency 0
- Oscillation amplitude 0 *
- Frequency fluctuation 0 *
- Oscillation damping 0
- Oscillation damping fluctuation 0 *
- Signal asymmetry
- HBSI *
- Electronics temperature

Primary variable (PV)

Navigation

Application → Communication → Output → Primary var (PV)

Description

Displays the value currently measured for the primary dynamic variable.

* Visibility depends on order options or device settings

User interface Signed floating-point number

Assign SV

Navigation   Application → Communication → Output → Assign SV

Description Assign a measured variable to the second dynamic variable (SV).

Selection

- Mass flow
- Volume flow
- Corrected volume flow
- Density *
- Index inhomogeneous medium
- Exciter current 0
- Oscillation frequency 0
- Oscillation amplitude 0 *
- Frequency fluctuation 0 *
- Oscillation damping 0
- Oscillation damping fluctuation 0 *
- Signal asymmetry
- HBSI *
- Temperature
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3

Secondary variable (SV)

Navigation   Application → Communication → Output → Second.var(SV)

Description Displays the value currently measured for the secondary dynamic variable.

User interface Signed floating-point number

Assign TV

Navigation   Application → Communication → Output → Assign TV

Description Assign a measured variable to the tertiary dynamic variable (TV).

Selection

- Mass flow
- Volume flow
- Corrected volume flow
- Density *

* Visibility depends on order options or device settings

- Index inhomogeneous medium
- Exciter current 0
- Oscillation frequency 0
- Oscillation amplitude 0 *
- Frequency fluctuation 0 *
- Oscillation damping 0
- Oscillation damping fluctuation 0 *
- Signal asymmetry
- HBSI *
- Temperature
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3

Tertiary variable (TV)

Navigation	 Application → Communication → Output → Tertiary var(TV)
Description	Displays the value currently measured for the tertiary dynamic variable.
User interface	Signed floating-point number

Assign QV



Navigation	 Application → Communication → Output → Assign QV
Description	Assign a measured variable to the quaternary dynamic variable (QV).
Selection	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density * ■ Index inhomogeneous medium ■ Exciter current 0 ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry ■ HBSI * ■ Temperature ■ Electronics temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3

* Visibility depends on order options or device settings

Quaternary variable (QV)

Navigation	 Application → Communication → Output → Quaterna.var(QV)
Description	Displays the value currently measured for the quaternary dynamic variable.
User interface	Signed floating-point number

5 "System" menu

Overall device management and security settings – management of system settings and adaption to operational requirements.

Navigation  System

System	
▶ Device management	→  148
▶ User management	→  150
▶ Connectivity	→  153
▶ Date/time	→  154
▶ Information	→  156
▶ Display	→  161
▶ Software configuration	→  165

5.1 "Device management" submenu

Navigation  System → Device manag.

▶ Device management	
Device tag	→  148
Locking status	→  148
Configuration counter	→  149
Device reset	→  149

Device tag

Navigation  System → Device manag. → Device tag

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

User entry Character string comprising numbers, letters and special characters (32)

Locking status

Navigation  System → Device manag. → Locking status

Description Indicates the write protection with the highest priority that is currently active.

User interface

- Hardware locked
- Temporarily locked

Additional information *User interface*

- **Hardware locked** option
The DIP switch for the hardware lock is enabled. As a result write access to the parameters is locked.
- **Temporarily locked** option
Due to internal procedures that are currently in progress (e.g. data upload/download, reset, etc.), write access to the parameters is temporarily locked. The parameters can be modified again, once the internal procedures are complete.

Configuration counter

Navigation	 System → Device manag. → Config. counter
Description	<p>Displays the counter for changes to the device parameters.</p> <p>Additional information:</p> <ul style="list-style-type: none"> - If the value for a static parameter is changed when optimizing or configuring the parameter, the counter is incremented by 1. This is to enable tracking different parameter versions. - When multiple parameters are changed simultaneously, e.g. when loading parameters into the device from an external source such as FieldCare, the counter may display a higher value. The counter cannot be reset, nor is it reset to a default value on performing a device reset. - Once the counter has reached the value 65535, it restarts at 0.
User interface	0 to 65 535

Device reset



Navigation	 System → Device manag. → Device reset
Description	Reset the device configuration - either entirely or in part - to a defined state.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ To delivery settings ■ Restart device ■ Restore S-DAT backup * ■ Create T-DAT backup ■ Restore T-DAT backup *
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ To delivery settings option Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting. ■ Restart device option The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged. ■ Restore S-DAT backup option Restore the data that is saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT. ■ Create T-DAT backup option Create T-DAT backup.

* Visibility depends on order options or device settings

5.2 "User management" submenu

Navigation  System → User manag.

▶ User management		
User role		→  150
Enter access code		→  151
Reset Maintenance code		→  151
▶ Define Maintenance code		→  152

User role

Navigation  System → User manag. → User role

Description Displays the role the user is currently logged on in. The role determines the user's access rights for the parameters.

Additional information:

- Until a Maintenance code has been set in the "Define Maintenance code" parameter, all users are automatically logged on in the Maintenance role. Once the Maintenance code has been set, all users are automatically logged on in the Operator role.
- The access rights can be changed via the "Enter access code" parameter.

User interface

- Operator
- Maintenance
- Service
- Production
- Development

Additional information *User interface*

- **Operator** option
Provides only read access to parameters.
- **Maintenance** option
Provides read and write access to parameters.
Additional information:
For some parameters, the user must be logged on in the Service role to obtain write access.
- **Service** option
Provides read and write access to Service parameters.

Enter access code

Navigation	 System → User manag. → Ent. access code
Description	For users logged on in the Operator role, enter the Maintenance code to change the access status to Maintenance and disable write protection of parameters. For users logged on in the Maintenance role, enter the Service code to change the access status to Service and enable read and write access to Service parameters.
User entry	0 to 9999

Reset Maintenance code

Navigation	 System → User manag. → Reset Maint code
Description	Enter the code provided by Endress+Hauser Technical Support to reset the Maintenance code.
User entry	Character string comprising numbers, letters and special characters (32)

5.2.1 "Define access code" wizard

Complete this wizard to specify an access code for the Maintenance role.

Navigation  System → User manag. → Def. access code

► Define Maintenance code	
Define Maintenance code	→  152
Confirm Maintenance code	→  152

Define Maintenance code

Navigation  System → User manag. → Def. Maint. code → Def. Maint. code

Description Specify an access code that is required to obtain the access rights for the Maintenance role.

User entry 0 to 9 999

Confirm Maintenance code

Navigation  System → User manag. → Def. Maint. code → Conf. Maint code

Description Confirm the access code entered for the Maintenance role.

User entry 0 to 9 999

5.3 "Connectivity" submenu

Navigation   System → Connectivity

▶ Connectivity

▶ Bluetooth configuration

→  153

5.3.1 "Bluetooth configuration" submenu

Navigation   System → Connectivity → Bluetooth conf.

▶ Bluetooth configuration

Bluetooth

→  153

Communication established

→  153

Bluetooth

Navigation   System → Connectivity → Bluetooth conf. → Bluetooth

Description Enable or disable Bluetooth.

- Selection**
- Enable
 - Disable
 - Not available *

Communication established

Navigation   System → Connectivity → Bluetooth conf. → Communi. establ.

- User interface**
- No
 - Yes

* Visibility depends on order options or device settings

5.4 "Date / Time" submenu

Navigation   System → Date / Time

▶ **Date/time**

Set date/time	→  154
Time format	→  154
Time zone	→  154

Set date/time

Navigation  System → Date/time → Set date/time

Description Set the date and local time. Every time the date or time is changed, a logbook entry is created.

User entry Date and time

Time format

Navigation   System → Date/time → Time format

Description Select time format.

Selection

- 24 h
- 12 h AM/PM

Time zone

Navigation   System → Date/time → Time zone

Description Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+14:00

5.5 "Information" submenu

Navigation  System → Information

▶ Information	
▶ Device	→  156
▶ Sensor electronic module (ISEM)	→  159
▶ Display module	→  159

5.5.1 "Device" submenu

Navigation  System → Information → Device

▶ Device	
Device name	→  156
Device tag	→  157
Serial number	→  157
Order code	→  157
Firmware version	→  157
Extended order code 1	→  158
Extended order code 2	→  158
Extended order code 3	→  158
ENP version	→  158
Manufacturer	→  159

Device name

Navigation

 System → Information → Device → Device name

Description

Displays the name of the transmitter.

Additional information:

The name can also be found on the transmitter's nameplate.

User interface Character string comprising numbers, letters and special characters

Device tag

Navigation  System → Information → Device → Device tag

Description Displays the name for the measuring point.

User interface Character string comprising numbers, letters and special characters

Serial number

Navigation  System → Information → Device → Serial number

Description Displays the serial number of the measuring device. The serial number can be used to identify the measuring device and to retrieve further information on the measuring device, such as the related documentation, via the Device Viewer or Operations app.

Additional information:

The serial number can also be found on the nameplate of the sensor and transmitter.

User interface Character string comprising numbers, letters and special characters

Order code



Navigation  System → Information → Device → Order code

Description Displays the device order code.

Additional information:

The order code can be used for instance to order a replacement or spare device or to verify that the device features specified on the order form match the shipping note.

User interface Character string comprising numbers, letters and special characters

Firmware version

Navigation  System → Information → Device → Firmware version

Description Displays the device firmware version installed.

User interface Character string comprising numbers, letters and special characters

Extended order code 1 

Navigation  System → Information → Device → Ext. order cd. 1

Description Displays the first, second and/or third part of the extended order code. Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.

Additional information:
The extended order code can also be found on the nameplate.

User interface Character string comprising numbers, letters and special characters

Extended order code 2 

Navigation  System → Information → Device → Ext. order cd. 2

Description Displays the first, second and/or third part of the extended order code. Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.

Additional information:
The extended order code can also be found on the nameplate.

User interface Character string comprising numbers, letters and special characters

Extended order code 3 

Navigation  System → Information → Device → Ext. order cd. 3

Description Displays the first, second and/or third part of the extended order code. Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.

Additional information:
The extended order code can also be found on the nameplate.

User interface Character string comprising numbers, letters and special characters

ENP version

Navigation  System → Information → Device → ENP version

Description Displays the version of the electronic nameplate (ENP).

User interface Character string comprising numbers, letters and special characters

Manufacturer


Navigation  System → Information → Device → Manufacturer

Description Displays the manufacturer.

User interface Character string comprising numbers, letters and special characters

5.5.2 "Sensor electronic module (ISEM)" submenu

Navigation  System → Information → Sens. electronic

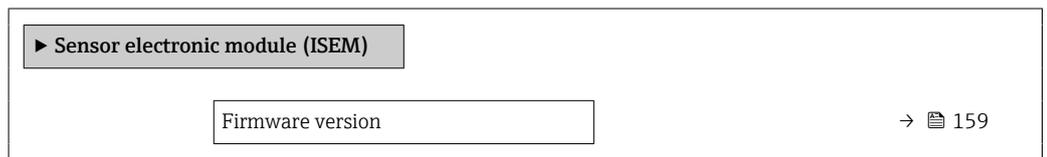

Firmware version


Navigation  System → Information → Sens. electronic → Firmware version

Description Displays the firmware version of the module.

User interface Positive integer

5.5.3 "Display module" submenu

Navigation  System → Information → Display module

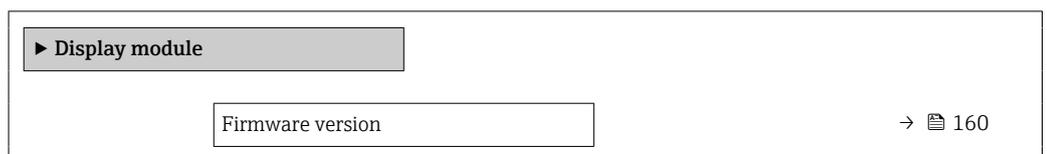

Firmware version

Navigation

 System → Information → Display module → Firmware version

Description

Displays the firmware version of the module.

User interface

Positive integer

5.6 "Display" submenu

Navigation   System → Display

▶ Display		
Language	→	 161
Value 1 display	→	 162
Value 2 display	→	 162
Value 3 display	→	 163
Value 4 display	→	 163
Display damping	→	 164
Rotation display	→	 164
Brightness	→	 164
Color scheme	→	 164

Language

Navigation   System → Display → Language

Description Set display language.

- Selection
- English
 - Deutsch
 - Français
 - Español
 - Italiano
 - Nederlands
 - Portuguesa
 - Polski
 - русский язык (Russian)
 - Svenska
 - Türkçe
 - 中文 (Chinese)
 - 日本語 (Japanese)
 - 한국어 (Korean)
 - العربية (Arabic) *
 - Bahasa Indonesia

* Visibility depends on order options or device settings

- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese)
- čeština (Czech)

Value 1 display
**Navigation**

System → Display → Value 1 display

Description

Select the measured value that is displayed first on the local display.

Additional information:

The applicable unit of measure is specified in the "System units" submenu.

Selection

- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Index inhomogeneous medium
- Electronics temperature

Value 2 display
**Navigation**

System → Display → Value 2 display

Description

Select the measured value that is shown second on the local display.

Additional information:

The applicable unit of measure is specified in the "System units" submenu.

Selection

- None
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Index inhomogeneous medium
- Electronics temperature

* Visibility depends on order options or device settings

Value 3 display

**Navigation** System → Display → Value 3 display**Description**

Select the measured value that is shown third on the local display.

Additional information:

The applicable unit of measure is specified in the "System units" submenu.

Selection

- None
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Index inhomogeneous medium
- Electronics temperature

Value 4 display

**Navigation** System → Display → Value 4 display**Description**

Select the measured value that is shown fourth on the local display.

Additional information:

The applicable unit of measure is specified in the "System units" submenu.

Selection

- None
- Mass flow
- Volume flow
- Corrected volume flow
- Temperature
- Density *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Index inhomogeneous medium
- Electronics temperature

* Visibility depends on order options or device settings

Display damping

**Navigation**  System → Display → Display damping**Description**

Enter time constant (PT1 element) to set reaction time of the display to fluctuations in the measured value.

Additional information:

- The smaller the time constant the faster the display reacts to fluctuations in the measured value.
- If the time constant is set to 0, damping is deactivated.

User entry

0.0 to 999.9 s

Rotation display

**Navigation**  System → Display → Rotation display**Description**

Select rotation angle of the display text to optimize local display readability.

Selection

- Auto
- 0 degree
- 90 degree
- 180 degree
- 270 degree

Brightness

Navigation  System → Display → Brightness**Description**

Adjust brightness.

User entry

0 to 100 %

Color scheme

**Navigation**  System → Display → Color scheme**Description**


Select preferred color scheme.

Selection

- Light
- Dark

5.7 "Software configuration" submenu

Navigation  System → Software config.

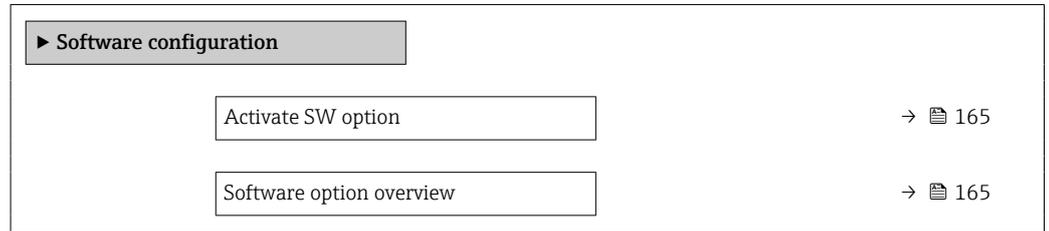

Activate SW option

Navigation  System → Software config. → Activate SW opt.

Description Enter application package code or code of the functionality ordered separately to activate it.

Additional information:

- If a measuring device was ordered with an add-on software option, the activation code is programmed into the measuring device ex factory.
- After entering the activation code: Check whether the new software option is displayed in the "Software option overview" parameter and therefore active.

NOTE

If an an invalid code is entered the software options that have already been activated are invalidated!

Before entering a new activation code: Create a record of the existing activation code.

User entry Positive integer

Software option overview

Navigation  System → Software config. → SW option overv.

Description Displays all software options included in the order ex factory or ordered at a later date that have been enabled via the operating interface.

Additional information:

If a new software option is not displayed after entering the activation code, the code entered was inaccurate or invalid. In this case, contact the appropriate Endress+Hauser sales organization to activate the software option.

User interface

- Density
- Heartbeat Verification
- Heartbeat Monitoring

Index

A

Activate SW option (Parameter)	165
Active diagnostics (Submenu)	46
Actual diagnostics (Parameter)	46
Alarm delay (Parameter)	57
Application (Menu)	76
Assign behavior of diagnostic no. 046 (Parameter)	58
Assign behavior of diagnostic no. 140 (Parameter)	59
Assign behavior of diagnostic no. 144 (Parameter)	60
Assign behavior of diagnostic no. 230 (Parameter)	61
Assign behavior of diagnostic no. 231 (Parameter)	61
Assign behavior of diagnostic no. 302 (Parameter)	62
Assign behavior of diagnostic no. 374 (Parameter)	62
Assign behavior of diagnostic no. 441 (Parameter)	64
Assign behavior of diagnostic no. 442 (Parameter)	64
Assign behavior of diagnostic no. 443 (Parameter)	65
Assign behavior of diagnostic no. 832 (Parameter)	67
Assign behavior of diagnostic no. 833 (Parameter)	68
Assign behavior of diagnostic no. 834 (Parameter)	68
Assign behavior of diagnostic no. 835 (Parameter)	69
Assign behavior of diagnostic no. 842 (Parameter)	70
Assign behavior of diagnostic no. 862 (Parameter)	71
Assign behavior of diagnostic no. 912 (Parameter)	72
Assign behavior of diagnostic no. 913 (Parameter)	73
Assign behavior of diagnostic no. 944 (Parameter)	73
Assign behavior of diagnostic no. 948 (Parameter)	74
Assign diagnostic behavior (Parameter)	36, 133
Assign flow direction check (Parameter)	136
Assign frequency output (Parameter)	31, 128
Assign limit (Parameter)	37, 133
Assign process variable (Parameter)	17, 87
Assign pulse output 1 (Parameter)	34, 124
Assign PV (Parameter)	143
Assign QV (Parameter)	145
Assign simulation process variable (Parameter)	51
Assign status (Parameter)	39, 136
Assign SV (Parameter)	144
Assign TV (Parameter)	144

B

Bluetooth (Parameter)	153
Bluetooth configuration (Submenu)	153
Brightness (Parameter)	164

C

C0 to 5 (Parameter)	109
Calibration (Submenu)	108
Calibration factor (Parameter)	108
Color scheme (Parameter)	164
Commissioning (Wizard) . . . 6, 9, 10, 12, 17, 20, 21, 23, 24, 29, 31, 34, 35, 40, 43	
Communication (Submenu)	139
Communication established (Parameter)	153
Configuration (Submenu)	63
Configuration counter (Parameter)	149
Connectivity (Submenu)	153

Control Totalizer 1 to n (Parameter)	89
Corrected volume flow (Parameter)	77
Corrected volume flow calculation (Submenu)	100
Corrected volume flow factor (Parameter)	107
Corrected volume flow offset (Parameter)	106
Corrected volume flow unit (Parameter)	15, 83
Corrected volume unit (Parameter)	15, 83
Current output 1 (Submenu)	110
Current output 1 simulation (Parameter)	52
Current output value (Parameter)	52
Current range output (Parameter)	24, 115
Cut off inhomogeneous liquid (Parameter)	99
Cut off inhomogeneous wet gas (Parameter)	99

D

Damping current output (Parameter)	27, 118
Damping output 1 (Parameter)	131
Date / Time (Submenu)	154
Define access code (Wizard)	152
Density (Parameter)	77
Density damping (Parameter)	92
Density factor (Parameter)	106
Density offset (Parameter)	106
Density unit (Parameter)	16, 84
Device (Submenu)	156
Device alarm simulation (Parameter)	55
Device ID (Parameter)	141
Device management (Submenu)	148
Device name (Parameter)	10, 156
Device reset (Parameter)	149
Device revision (Parameter)	140
Device tag (Parameter)	9, 139, 148, 157
Device type (Parameter)	141
Diagnostic configuration (Submenu)	57
Diagnostic event category (Parameter)	55
Diagnostic event simulation (Parameter)	55
Diagnostic list (Submenu)	48
Diagnostic settings (Submenu)	57
Diagnostics (Menu)	45
Diagnostics 1 (Parameter)	48
Diagnostics 2 (Parameter)	49
Diagnostics 3 (Parameter)	49
Diagnostics 4 (Parameter)	49
Diagnostics 5 (Parameter)	50
Display (Submenu)	161
Display damping (Parameter)	42, 164
Display module (Submenu)	159
Document Target group	4

E

Electronics (Submenu)	60
ENP version (Parameter)	158
Enter access code (Parameter)	151
Event category 046 (Parameter)	59
Event category 140 (Parameter)	59

Event category 144 (Parameter)	60
Event category 230 (Parameter)	61
Event category 231 (Parameter)	62
Event category 302 (Parameter)	62
Event category 374 (Parameter)	63
Event category 441 (Parameter)	64
Event category 442 (Parameter)	65
Event category 443 (Parameter)	66
Event category 832 (Parameter)	67
Event category 833 (Parameter)	68
Event category 834 (Parameter)	69
Event category 835 (Parameter)	70
Event category 842 (Parameter)	71
Event category 862 (Parameter)	72
Event category 912 (Parameter)	72
Event category 913 (Parameter)	73
Event category 944 (Parameter)	74
Event category 948 (Parameter)	75
Extended order code 1 (Parameter)	158
Extended order code 2 (Parameter)	158
Extended order code 3 (Parameter)	158
External compensation (Submenu)	100
F	
Failure behavior current output (Parameter)	28, 119
Failure current (Parameter)	28, 119
Failure frequency (Parameter)	33, 131
Failure mode (Parameter) 19, 33, 40, 90, 126, 131, 137	
Firmware version (Parameter)	9, 157, 159, 160
Fixed current (Parameter)	27, 116
Fixed reference density (Parameter)	101
Flow damping time (Parameter)	20, 92
Flow override (Parameter)	92
Frequency output 1 simulation (Parameter)	53
Frequency output 1 value (Parameter)	53
G	
Gas Fraction Handler (Parameter)	98
Guidance (Menu)	6
H	
Hardware revision (Parameter)	142
HART address (Parameter)	140
HART configuration (Submenu)	139
HART date code (Parameter)	142
HART descriptor (Parameter)	141
HART message (Parameter)	142
HART revision (Parameter)	141
HART short tag (Parameter)	139
Heartbeat Technology (Submenu)	56
High value partial filled pipe detection (Parameter)	
.	23, 95
I	
Index inhomogeneous medium (Parameter)	99
Information (Submenu)	140, 156
Installation direction (Parameter)	103
Invert output signal (Parameter)	137

L	
Language (Parameter)	161
Linear expansion coefficient (Parameter)	102
Locking status (Parameter)	148
Low flow cut off (Parameter)	21, 93
Low flow cut off (Submenu)	93
Low value partial filled pipe detection (Parameter)	
.	23, 95
Lower range value output (Parameter)	25, 116
M	
Manufacturer (Parameter)	159
Manufacturer ID (Parameter)	141
Mass flow (Parameter)	77
Mass flow factor (Parameter)	105
Mass flow offset (Parameter)	105
Mass flow unit (Parameter)	12, 80
Mass unit (Parameter)	12, 81
Maximum frequency value (Parameter)	32, 130
Measured values (Submenu)	76
Measuring mode (Parameter)	125, 128
Measuring mode current output (Parameter)	111
Measuring value at maximum frequency (Parameter)	
.	33, 130
Measuring value at minimum frequency (Parameter)	
.	32, 130
Medium settings (Submenu)	96
Menu	
Application	76
Diagnostics	45
Guidance	6
System	147
Minimum frequency value (Parameter)	31, 129
N	
Nominal diameter (Parameter)	108
O	
Off value low flow cutoff (Parameter)	22, 94
On value low flow cutoff (Parameter)	22, 94
Operating mode (Parameter)	29, 122
Operating time (Parameter)	47
Operating time from restart (Parameter)	47
Order code (Parameter)	157
Output (Submenu)	142
Output current 1 (Parameter)	120
Output frequency 1 (Parameter)	132
P	
Partially filled pipe detection (Parameter)	23, 95
Partially filled pipe detection (Submenu)	94
Preset value 1 to n (Parameter)	89
Pressure compensation (Parameter)	11, 100
Pressure shock suppression (Parameter)	20
Pressure unit (Parameter)	17, 85
Pressure value (Parameter)	12, 100
Previous diagnostics (Parameter)	46
Primary variable (PV) (Parameter)	143
Process (Submenu)	66

Process parameters (Submenu) 91
 Process variable adjustment (Submenu) 104
 Process variable current output (Parameter) 24, 110
 Process variable value (Parameter) 52
 Progress (Parameter) 104
 Properties (Submenu) 57
 Pulse output 1 (Parameter) 127
 Pulse output simulation 1 (Parameter) 53
 Pulse value 1 (Parameter) 54
 Pulse width (Parameter) 34, 126
 Pulse/frequency/switch output 1 (Submenu) 121

Q

Quaternary variable (QV) (Parameter) 146

R

Reference density unit (Parameter) 16, 84
 Reference sound velocity (Parameter) 11, 97
 Reference temperature (Parameter) 101
 Reset all totalizers (Parameter) 86
 Reset Maintenance code (Parameter) 151
 Rotation display (Parameter) 164

S

Secondary variable (SV) (Parameter) 144
 Select gas type (Parameter) 10, 96
 Select medium (Parameter) 10, 96
 Select reference density (Parameter) 101
 Sensor (Submenu) 58, 91
 Sensor adjustment (Submenu) 103
 Sensor electronic module (ISEM) (Submenu) 159
 Serial number (Parameter) 9, 157
 Set date/time (Parameter) 44
 Simulation (Submenu) 51
 Software configuration (Submenu) 165
 Software option overview (Parameter) 165
 Software revision (Parameter) 142
 Square expansion coefficient (Parameter) 102

Submenu

Active diagnostics 46
 Bluetooth configuration 153
 Calibration 108
 Communication 139
 Configuration 63
 Connectivity 153
 Corrected volume flow calculation 100
 Current output 1 110
 Date / Time 154
 Device 156
 Device management 148
 Diagnostic configuration 57
 Diagnostic list 48
 Diagnostic settings 57
 Display 161
 Display module 159
 Electronics 60
 External compensation 100
 HART configuration 139
 Heartbeat Technology 56

Information 140, 156
 Low flow cut off 93
 Measured values 76
 Medium settings 96
 Output 142
 Partially filled pipe detection 94
 Process 66
 Process parameters 91
 Process variable adjustment 104
 Properties 57
 Pulse/frequency/switch output 1 121
 Sensor 58, 91
 Sensor adjustment 103
 Sensor electronic module (ISEM) 159
 Simulation 51
 Software configuration 165
 System units 80
 Totalizer 78
 Totalizer 1 to n 86
 Totalizer handling 86
 Totalizers 86
 Two phase flow 97
 User management 150
 Zero point adjustment 103
 Switch output function (Parameter) 35, 132
 Switch output simulation 1 (Parameter) 54
 Switch state 1 (Parameter) 54, 138
 Switch-off delay (Parameter) 39, 136
 Switch-off value (Parameter) 39, 135
 Switch-on delay (Parameter) 39, 136
 Switch-on value (Parameter) 38, 135
 System (Menu) 147
 System units (Submenu) 80

T

Target group 4
 Temperature (Parameter) 78
 Temperature coefficient sound velocity (Parameter)
 11, 97
 Temperature damping (Parameter) 93
 Temperature factor (Parameter) 107
 Temperature offset (Parameter) 107
 Temperature unit (Parameter) 16, 84
 Tertiary variable (TV) (Parameter) 145
 Time format (Parameter) 43
 Time zone (Parameter) 43
 Timestamp (Parameter) 46, 47, 48, 49, 50
 Totalizer (Submenu) 78
 Totalizer 1 to n (Submenu) 86
 Totalizer handling (Submenu) 86
 Totalizer operation mode (Parameter) 19, 88
 Totalizer overflow 1 to n (Parameter) 79
 Totalizer value 1 to n (Parameter) 78
 Totalizers (Submenu) 86
 Two phase flow (Submenu) 97

U

Unit totalizer 1 to n (Parameter) 17, 87
 Upper range value output (Parameter) 27, 118

User management (Submenu)	150
User role (Parameter)	150

V

Value 1 display (Parameter)	40, 162
Value 2 display (Parameter)	41, 162
Value 3 display (Parameter)	41, 163
Value 4 display (Parameter)	42, 163
Value per pulse (Parameter)	35, 125
Volume flow (Parameter)	77
Volume flow factor (Parameter)	106
Volume flow offset (Parameter)	105
Volume flow unit (Parameter)	13, 81
Volume unit (Parameter)	14, 82

W

Wizard	
Commissioning	
6, 9, 10, 12, 17, 20, 21, 23, 24, 29, 31, 34, 35,	
40,	43
Define access code	152

Z

Zero point (Parameter)	108
Zero point adjustment (Submenu)	103
Zero point adjustment control (Parameter)	103
Zero point adjustment status (Parameter)	104



71575143

www.addresses.endress.com
