

Description of Device Parameters

Proline Promag 500

Electromagnetic flowmeter
PROFINET with Ethernet-APL

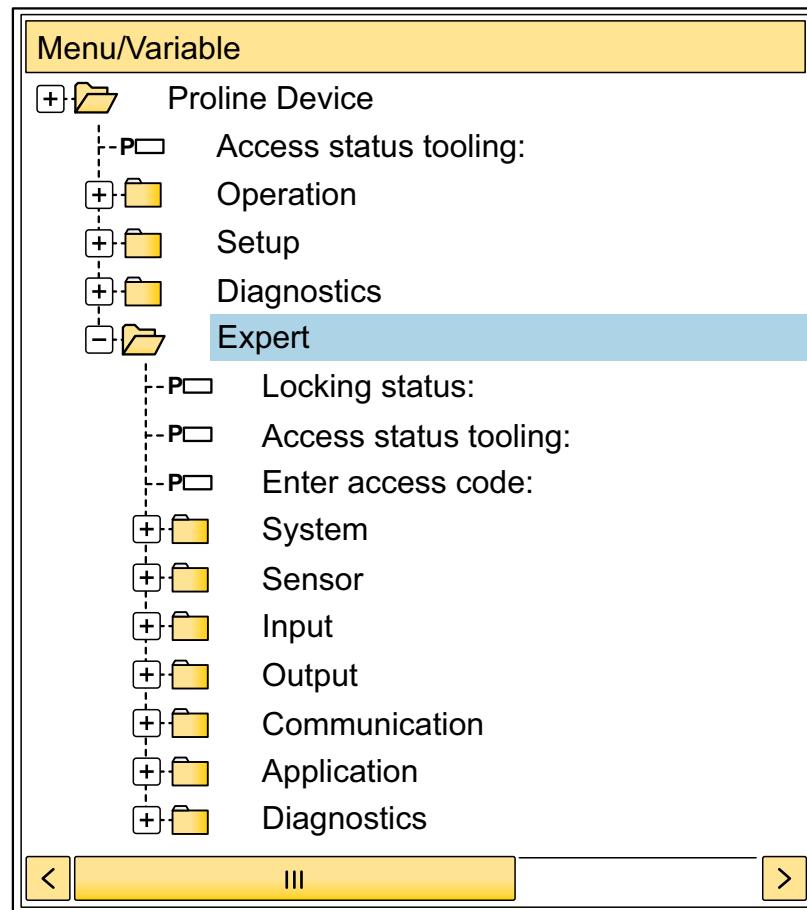


Table of contents

1 About this document	4		
1.1 Document function	4	3.9 "Application" submenu	172
1.2 Target group	4	3.9.1 "Totalizer 1 to n" submenu	173
1.3 Using this document	4	3.10 "Diagnostics" submenu	177
1.3.1 Information on the document structure	4	3.10.1 "Diagnostic list" submenu	179
1.3.2 Structure of a parameter description ..	6	3.10.2 "Event logbook" submenu	181
1.4 Symbols used	6	3.10.3 "Device information" submenu	183
1.4.1 Symbols for certain types of information	6	3.10.4 "Main electronic module + I/O module 1" submenu	187
1.4.2 Symbols in graphics	7	3.10.5 "Sensor electronic module (ISEM)" submenu	188
1.5 Documentation	7	3.10.6 "I/O module 2" submenu	189
1.5.1 Standard documentation	7	3.10.7 "I/O module 3" submenu	190
1.5.2 Supplementary device-dependent documentation	7	3.10.8 "I/O module 4" submenu	191
2 Overview of the Expert operating menu	8	3.10.9 "Display module" submenu	193
3 Description of device parameters ..	11	3.10.10 "Data logging" submenu	194
3.1 "System" submenu	16	3.10.11 "Min/max values" submenu	202
3.1.1 "Display" submenu	16	3.10.12 "Heartbeat Technology" submenu	206
3.1.2 "Configuration backup" submenu	35	3.10.13 "Simulation" submenu	219
3.1.3 "Diagnostic handling" submenu	38		
3.1.4 "Administration" submenu	47		
3.2 "Sensor" submenu	52		
3.2.1 "Measured values" submenu	53		
3.2.2 "System units" submenu	62		
3.2.3 "Process parameters" submenu	69		
3.2.4 "External compensation" submenu	86		
3.2.5 "Sensor adjustment" submenu	88		
3.2.6 "Calibration" submenu	95		
3.2.7 "Build-up index adjustment" wizard	96		
3.3 "I/O configuration" submenu	98		
3.4 "Input" submenu	100		
3.4.1 "Current input 1 to n" submenu	100		
3.4.2 "Status input 1 to n" submenu	104		
3.5 "Output" submenu	106		
3.5.1 "Current output 1 to n" submenu	106		
3.5.2 "Pulse/frequency/switch output 1 to n" submenu	119		
3.5.3 "Relay output 1 to n" submenu	139		
3.6 "Communication" submenu	145		
3.6.1 "Physical block" submenu	145		
3.6.2 "Application relation" submenu	151		
3.6.3 "WLAN settings" wizard	153		
3.6.4 "APL port" submenu	160		
3.6.5 "Service interface" submenu	161		
3.6.6 "Web server" submenu	163		
3.7 "Analog inputs" submenu	165		
3.7.1 "Analog inputs" submenu	165		
3.8 "Analog outputs" submenu	168		
3.8.1 "Temperature" submenu	168		
4 Country-specific factory settings ..	229		
4.1 SI units	229		
4.1.1 System units	229		
4.1.2 Full scale values	229		
4.1.3 Output current span	230		
4.1.4 Pulse value	230		
4.1.5 Switch-on point low flow cut off	231		
4.2 US units	232		
4.2.1 System units	232		
4.2.2 Full scale values	233		
4.2.3 Output current span	234		
4.2.4 Pulse value	234		
4.2.5 Switch-on point low flow cut off	235		
5 Explanation of abbreviated units ..	237		
5.1 SI units	237		
5.2 US units	237		
5.3 Imperial units	238		
Index	239		

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menu.


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the **Expert** menu (→ 8), which is displayed when the "**Maintenance**" user role is enabled.

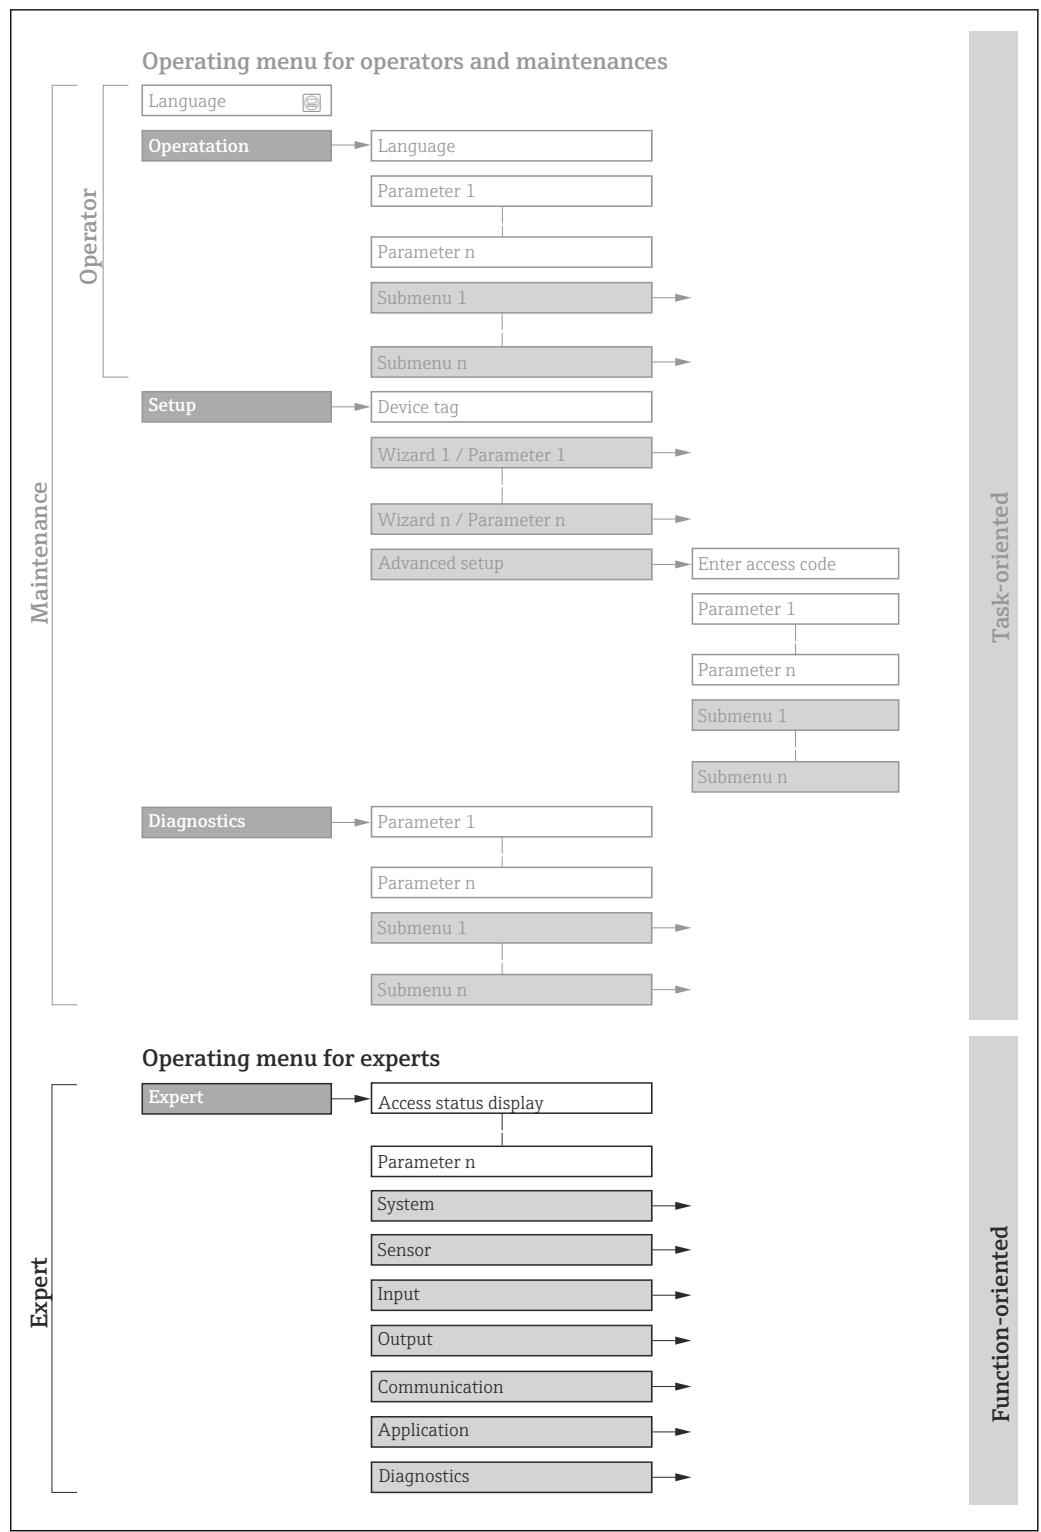

1 Sample graphic for the schematic layout of the operating menu



Additional information regarding:

- The arrangement of the parameters according to the menu structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu with a brief description: Operating Instructions → 7
- Operating concept of the operating menus: Operating Instructions → 7

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name

Write-protected parameter = 

Navigation



Navigation path to the parameter via the local display (direct access code) or web browser
Navigation path to the parameter via the operating tool
The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.

Prerequisite

The parameter is only available under these specific conditions

Description

Description of the parameter function

Selection

List of the individual options for the parameter

- Option 1
- Option 2

User entry

Parameter entry range

User interface

Display value/data of the parameter

Factory setting

Default setting ex works

Additional information

Additional explanations (e.g. in examples):

- On individual options
- On display values/data
- On the input range
- On the factory setting
- On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display <small>A0028662</small>
	Operation via operating tool <small>A0028663</small>
	Write-protected parameter <small>A0028665</small>

1.4.2 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections

1.5 Documentation

1.5.1 Standard documentation

Operating Instructions

Measuring device	Documentation code
Promag H 500	BA02103D
Promag P 500	BA02102D
Promag W 500	BA02101D

1.5.2 Supplementary device-dependent documentation

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD02760D

Contents	Documentation code
Heartbeat Technology	SD02730D
Web server	SD02760D

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

Navigation  Expert

Expert	
Direct access (0106)	→  14
Locking status (0004)	→  14
User role (0005)	→  15
Enter access code (0003)	→  16
System	→  16
► Display	→  16
► Configuration backup	→  35
► Diagnostic handling	→  38
► Administration	→  47
Sensor	→  52
► Measured values	→  53
► System units	→  62
► Process parameters	→  69
► External compensation	→  86
► Sensor adjustment	→  88
► Calibration	→  95
► Build-up index adjustment	→  96
I/O configuration	→  98
I/O module 1 to n terminal numbers (3902-1 to n)	→  98
I/O module 1 to n information (3906-1 to n)	→  99

I/O module 1 to n type (3901-1 to n)	→ 99
Apply I/O configuration (3907)	→ 100
I/O alteration code (2762)	→ 100
► Input	→ 100
► Current input 1 to n	→ 100
► Status input 1 to n	→ 104
► Output	→ 106
► Current output 1 to n	→ 106
► Pulse/frequency/switch output 1 to n	→ 119
► Relay output 1 to n	→ 139
► Communication	→ 145
► Physical block	→ 145
► Application relation	→ 151
► WLAN settings	→ 153
► APL port	→ 160
► Service interface	→ 161
► Web server	→ 163
► Analog inputs	→ 165
► Analog input 1 to n	→ 165
► Analog outputs	→ 168
► Temperature	→ 168

► Application	→ 172
Reset all totalizers (2806)	→ 172
► Totalizer 1 to n	→ 173
► Diagnostics	→ 177
Actual diagnostics (0691)	→ 177
Previous diagnostics (0690)	→ 178
Operating time from restart (0653)	→ 178
Operating time (0652)	→ 179
► Diagnostic list	→ 179
► Event logbook	→ 181
► Device information	→ 183
► Main electronic module + I/O module 1	→ 187
► Sensor electronic module (ISEM)	→ 188
► I/O module 2	→ 189
► I/O module 3	→ 190
► I/O module 4	→ 191
► Display module	→ 193
► Data logging	→ 194
► Min/max values	→ 202
► Heartbeat Technology	→ 206
► Simulation	→ 219

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

⚡ Expert	
Direct access (0106)	→ 14
Locking status (0004)	→ 14
User role (0005)	→ 15
Enter access code (0003)	→ 16
▶ System	→ 16
▶ Display	→ 16
▶ Configuration backup	→ 35
▶ Diagnostic handling	→ 38
▶ Administration	→ 47
▶ Sensor	→ 52
▶ Measured values	→ 53
▶ System units	→ 62
▶ Process parameters	→ 69
▶ External compensation	→ 86
▶ Sensor adjustment	→ 88
▶ Calibration	→ 95
▶ Build-up index adjustment	→ 96
▶ I/O configuration	→ 98
I/O module 1 to n terminal numbers (3902-1 to n)	→ 98
I/O module 1 to n information (3906-1 to n)	→ 99

I/O module 1 to n type (3901-1 to n)	→ 99
Apply I/O configuration (3907)	→ 100
I/O alteration code (2762)	→ 100
▶ Input	→ 100
▶ Current input 1 to n	→ 100
▶ Status input 1 to n	→ 104
▶ Output	→ 106
▶ Current output 1 to n	→ 106
▶ Pulse/frequency/switch output 1 to n	→ 119
▶ Relay output 1 to n	→ 139
▶ Communication	→ 145
▶ Physical block	→ 145
▶ Application relation	→ 151
▶ WLAN settings	→ 153
▶ APL port	→ 160
▶ Service interface	→ 161
▶ Web server	→ 163
▶ Analog inputs	→ 165
▶ Analog input 1 to n	→ 165
▶ Analog outputs	→ 168
▶ Temperature	→ 168

▶ Application	→ 172
Reset all totalizers (2806)	→ 172
▶ Totalizer 1 to n	→ 173
▶ Diagnostics	→ 177
Actual diagnostics (0691)	→ 177
Previous diagnostics (0690)	→ 178
Operating time from restart (0653)	→ 178
Operating time (0652)	→ 179
▶ Diagnostic list	→ 179
▶ Event logbook	→ 181
▶ Device information	→ 183
▶ Main electronic module + I/O module 1	→ 187
▶ Sensor electronic module (ISEM)	→ 188
▶ I/O module 2	→ 189
▶ I/O module 3	→ 190
▶ I/O module 4	→ 191
▶ Display module	→ 193
▶ Data logging	→ 194
▶ Min/max values	→ 202
▶ Heartbeat Technology	→ 206
▶ Simulation	→ 219

Direct access



Navigation

Expert → Direct access (0106)

Description

Use this function to enter the access code to enable direct access to the desired parameter via the local display. A parameter number is assigned to each parameter for this purpose.


User entry

0 to 65 535

Additional information

User entry

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

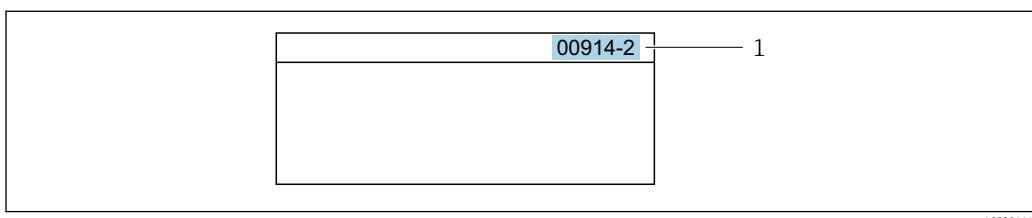

A0029414

1 *Direct access code*

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Enter **"914"** instead of **"00914"**
- If no channel number is entered, channel 1 is opened automatically.
Example: Enter **00914** → **Assign process variable** parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.
Example: Enter **00914-2** → **Assign process variable** parameter

Locking status

Navigation

Expert → Locking status (0004)

Description

Displays the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information*User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.



Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device → [7](#)

Selection

Options	Description
None	The access authorization displayed in the Access status parameter (→ 15) applies. Only appears on local display.
Hardware locked (priority 1)	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

User role**Navigation**

Expert → User role (0005)

Description

Displays the access authorization to the parameters via the local display, Web browser or operating tool.

User interface

- Maintenance
- Service

Factory setting

Maintenance

Additional information*Description*

Access authorization can be modified via the **Enter access code** parameter (→ [16](#)).

If additional write protection is active, this restricts the current access authorization even further.

User interface

Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device → [7](#)

Enter access code**Navigation** Expert → Ent. access code (0003)**Description**

Use this function to enter the user-specific release code to remove parameter write protection.

User entry

Max. 16-digit character string comprising numbers, letters and special characters

3.1 "System" submenu

Navigation Expert → System

▶ System	
▶ Display	→  16
▶ Configuration backup	→  35
▶ Diagnostic handling	→  38
▶ Administration	→  47

3.1.1 "Display" submenu

Navigation Setup → Advanced setup → Display*Navigation* Expert → System → Display

▶ Display	
Format display (0098)	→  18
Value 1 display (0107)	→  20
0% bargraph value 1 (0123)	→  21
100% bargraph value 1 (0125)	→  21
Decimal places 1 (0095)	→  22
Value 2 display (0108)	→  22
Decimal places 2 (0117)	→  23

Value 3 display (0110)	→ 23
0% bargraph value 3 (0124)	→ 24
100% bargraph value 3 (0126)	→ 24
Decimal places 3 (0118)	→ 25
Value 4 display (0109)	→ 25
Decimal places 4 (0119)	→ 26
Display language (0104)	→ 17
Display interval (0096)	→ 32
Display damping (0094)	→ 33
Header (0097)	→ 33
Header text (0112)	→ 34
Separator (0101)	→ 34
Backlight (0111)	→ 35

Display language

Navigation

Expert → System → Display → Display language (0104)

Setup → Advanced setup → Display → Display language (0104)

Prerequisite

A local display is provided.

Description

Use this function to select the configured language on the local display.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)

- 한국어 (Korean)
- tiếng Việt (Vietnamese)
- čeština (Czech)

Factory setting	English (alternatively, the ordered language is preset in the device)
-----------------	---

Format display

Navigation	  Expert → System → Display → Format display (0098)
	  Setup → Advanced setup → Display → Format display (0098)

Prerequisite	A local display is provided.
--------------	------------------------------

Description	Use this function to select how the measured value is shown on the local display.
-------------	---

Selection	<ul style="list-style-type: none">▪ 1 value, max. size▪ 1 bargraph + 1 value▪ 2 values▪ 1 value large + 2 values▪ 4 values
-----------	--

Factory setting	1 value, max. size
-----------------	--------------------

Additional information	<i>Description</i> The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 8) can be configured. This setting only applies to normal operation.
------------------------	---


-  ■ The **Value 1 display** parameter (→ 20)...**Value 8 display** parameter (→ 31) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter (→ 32).

Possible measured values shown on the local display:


"1 value, max. size" option




"1 bargraph + 1 value" option

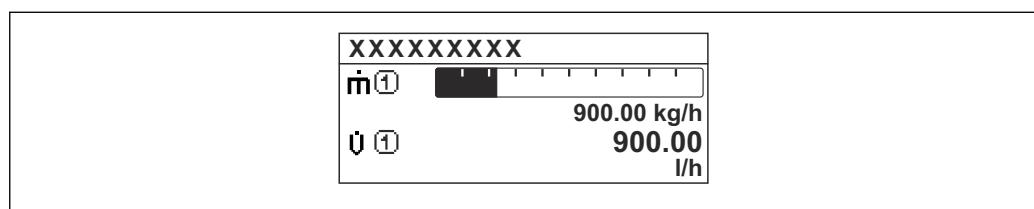


"2 values" option

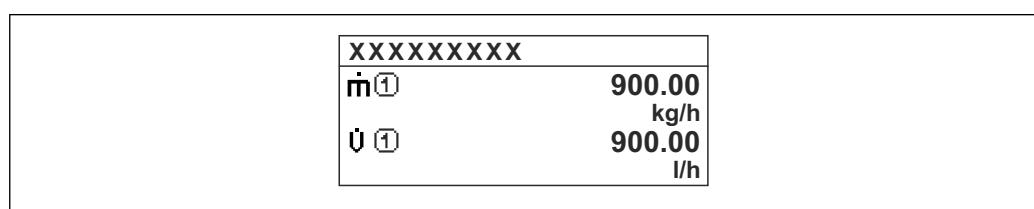

"1 value large + 2 values" option

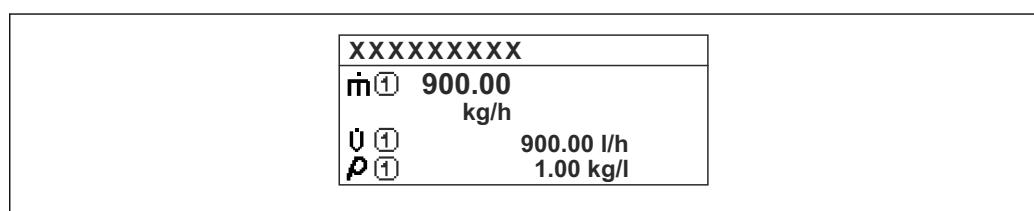

"4 values" option

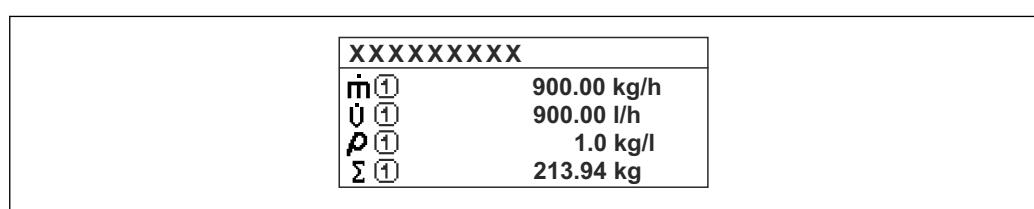

Value 1 display**Navigation**

- Expert → System → Display → Value 1 display (0107)
- Setup → Advanced setup → Display → Value 1 display (0107)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity *
- Conductivity *
- Corrected conductivity *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Current output 1 *
- Current output 2 *
- Current output 3 *
- Current output 4 *
- Temperature *
- Electronics temperature
- HBSI *
- Noise *
- Coil current shot time *
- Reference electrode potential against PE *
- Build-up index *
- Test point 1
- Test point 2
- Test point 3

Factory setting

Volume flow

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ 18) is used to specify how many measured values are displayed simultaneously and how.

Dependency

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

* Visibility depends on order options or device settings

0% bargraph value 1



Navigation	Expert → System → Display → 0% bargraph 1 (0123)
	Setup → Advanced setup → Display → 0% bargraph 1 (0123)
Prerequisite	A local display is provided.
Description	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
Additional information	<i>Description</i> The Format display parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i> The unit of the displayed measured value is taken from the System units submenu (→ 62).

100% bargraph value 1



Navigation	Expert → System → Display → 100% bargraph 1 (0125)
	Setup → Advanced setup → Display → 100% bargraph 1 (0125)
Prerequisite	A local display is provided.
Description	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter → 229
Additional information	<i>Description</i> The Format display parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i> The unit of the displayed measured value is taken from the System units submenu (→ 62).

Decimal places 1



Navigation

- ◀ ▶ Expert → System → Display → Decimal places 1 (0095)
- ◀ ▶ Setup → Advanced setup → Display → Decimal places 1 (0095)

Prerequisite

A measured value is specified in the **Value 1 display** parameter (→ 20).

Description

Use this function to select the number of decimal places for measured value 1.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information

Description

This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 2 display



Navigation

- ◀ ▶ Expert → System → Display → Value 2 display (0108)
- ◀ ▶ Setup → Advanced setup → Display → Value 2 display (0108)

Prerequisite

A local display is provided.

Description

Use this function to select a measured value that is shown on the local display.

Selection

For the picklist, see the **Value 1 display** parameter (→ 20)

Factory setting

None

Additional information

Description

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ 18) is used to specify how many measured values are displayed simultaneously and how.

Dependency

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

Decimal places 2

Navigation Expert → System → Display → Decimal places 2 (0117)

Setup → Advanced setup → Display → Decimal places 2 (0117)

Prerequisite A measured value is specified in the **Value 2 display** parameter (→ [22](#)).

Description Use this function to select the number of decimal places for measured value 2.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting X.XX

Additional information *Description*

This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 3 display

Navigation Expert → System → Display → Value 3 display (0110)

Setup → Advanced setup → Display → Value 3 display (0110)

Prerequisite A local display is provided.

Description Use this function to select a measured value that is shown on the local display.

Selection For the picklist, see the **Value 1 display** parameter (→ [20](#))

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ [18](#)) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [62](#)).

0% bargraph value 3



Navigation

Expert → System → Display → 0% bargraph 3 (0124)

Setup → Advanced setup → Display → 0% bargraph 3 (0124)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 23).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 l/h
- 0 gal/min (us)

Additional information

Description

The **Format display** parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

100% bargraph value 3



Navigation

Expert → System → Display → 100% bargraph 3 (0126)

Setup → Advanced setup → Display → 100% bargraph 3 (0126)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 23).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

0

Additional information

Description

The **Format display** parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

Decimal places 3

Navigation Expert → System → Display → Decimal places 3 (0118)

Setup → Advanced setup → Display → Decimal places 3 (0118)

Prerequisite A measured value is specified in the **Value 3 display** parameter (→ [23](#)).

Description Use this function to select the number of decimal places for measured value 3.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting X.XX

Additional information *Description*

This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 4 display

Navigation Expert → System → Display → Value 4 display (0109)

Setup → Advanced setup → Display → Value 4 display (0109)

Prerequisite A local display is provided.

Description Use this function to select a measured value that is shown on the local display.

Selection For the picklist, see the **Value 1 display** parameter (→ [20](#))

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ [18](#)) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [62](#)).

Decimal places 4



Navigation

- Expert → System → Display → Decimal places 4 (0119)
- Setup → Advanced setup → Display → Decimal places 4 (0119)

Prerequisite

A measured value is specified in the **Value 4 display** parameter (→ [25](#)).

Description

Use this function to select the number of decimal places for measured value 4.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information

Description

This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 5 display



Navigation

- Expert → System → Display → Value 5 display (0145)
- Setup → Advanced setup → Display → Value 5 display (0145)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

For the picklist, see the **Value 1 display** parameter (→ [20](#))

Factory setting

None

Additional information

Description

If several measured values are displayed at once, the measured value selected here will be the fifth value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ [18](#)) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [62](#)).

0% bargraph value 5



Navigation

Expert → System → Display → 0% bargraph 5 (0153)

Setup → Advanced setup → Display → 0% bargraph 5 (0153)

Prerequisite

An option was selected in the **Value 5 display** parameter (→ 26).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 5.

User entry

Signed floating-point number

Factory setting

Depends on country:

- 0 l/h
- 0 gal/min (us)

Additional information

Description

The **Format display** parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

100% bargraph value 5



Navigation

Expert → System → Display → 100% bargraph 5 (0155)

Setup → Advanced setup → Display → 100% bargraph 5 (0155)

Prerequisite

An option was selected in the **Value 5 display** parameter (→ 26).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 5.

User entry

Signed floating-point number

Factory setting

0

Additional information

Description

The **Format display** parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

Decimal places 5



Navigation

- ◀ □ Expert → System → Display → Decimal places 5 (0149)
- ◀ □ Setup → Advanced setup → Display → Decimal places 5 (0149)

Prerequisite

A measured value is specified in the **Value 5 display** parameter (→ 26).

Description

Use this function to select the number of decimal places for measured value 5.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX
- X.XXXXX
- X.XXXXXX

Factory setting

X.XX

Additional information

Description

- This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 6 display



Navigation

- ◀ □ Expert → System → Display → Value 6 display (0146)
- ◀ □ Setup → Advanced setup → Display → Value 6 display (0146)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

For the picklist, see the **Value 1 display** parameter (→ 20)

Factory setting

None

Additional information

Description

If several measured values are displayed at once, the measured value selected here will be the sixth value to be displayed. The value is only displayed during normal operation.

- The **Format display** parameter (→ 18) is used to specify how many measured values are displayed simultaneously and how.

Selection

- The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

Decimal places 6



Navigation Expert → System → Display → Decimal places 6 (0150)

Setup → Advanced setup → Display → Decimal places 6 (0150)

Prerequisite A measured value is specified in the **Value 6 display** parameter (→ [28](#)).

Description Use this function to select the number of decimal places for measured value 6.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX
- X.XXXXX
- X.XXXXXX

Factory setting X.XX

Additional information *Description*

This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 7 display



Navigation Expert → System → Display → Value 7 display (0147)

Setup → Advanced setup → Display → Value 7 display (0147)

Prerequisite A local display is provided.

Description Use this function to select one of the measured values shown on the local display.

Selection For the picklist, see the **Value 1 display** parameter (→ [20](#))

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the seventh value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ [18](#)) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [62](#)).

0% bargraph value 7



Navigation

Expert → System → Display → 0% bargraph 7 (0154)

Setup → Advanced setup → Display → 0% bargraph 7 (0154)

Prerequisite

An option was selected in the **Value 7 display** parameter (→ 29).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 7.

User entry

Signed floating-point number

Factory setting

Depends on country:

- 0 l/h
- 0 gal/min (us)

Additional information

Description

The **Format display** parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

100% bargraph value 7



Navigation

Expert → System → Display → 100% bargraph 7 (0156)

Setup → Advanced setup → Display → 100% bargraph 7 (0156)

Prerequisite

An option was selected in the **Value 7 display** parameter (→ 29).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 7.

User entry

Signed floating-point number

Factory setting

0

Additional information

Description

The **Format display** parameter (→ 18) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

Decimal places 7

Navigation Expert → System → Display → Decimal places 7 (0151)

Setup → Advanced setup → Display → Decimal places 7 (0151)

Prerequisite A measured value is specified in the **Value 7 display** parameter (→ [29](#)).

Description Use this function to select the number of decimal places for measured value 7.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX
- X.XXXXX
- X.XXXXXX

Factory setting X.XX

Additional information *Description*

This setting does not affect the accuracy of the device for measuring or calculating the value.

Value 8 display

Navigation Expert → System → Display → Value 8 display (0148)

Setup → Advanced setup → Display → Value 8 display (0148)

Prerequisite A local display is provided.

Description Use this function to select a measured value that is shown on the local display.

Selection For the picklist, see the **Value 1 display** parameter (→ [20](#))

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the eighth value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ [18](#)) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [62](#)).

Decimal places 8



Navigation

- ◀ □ Expert → System → Display → Decimal places 8 (0152)
- ◀ □ Setup → Advanced setup → Display → Decimal places 8 (0152)

Prerequisite

A measured value is specified in the **Value 8 display** parameter (→ 31).

Description

Use this function to select the number of decimal places for measured value 8.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX
- X.XXXXX
- X.XXXXXX

Factory setting

X.XX

Additional information

Description

- This setting does not affect the accuracy of the device for measuring or calculating the value.

Display interval

Navigation

- ◀ □ Expert → System → Display → Display interval (0096)
- ◀ □ Setup → Advanced setup → Display → Display interval (0096)

Prerequisite

A local display is provided.

Description

Use this function to enter the length of time the measured values are displayed if the values alternate on the display.

User entry

1 to 10 s

Factory setting

5 s

Additional information

Description

This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.

-
- The **Value 1 display** parameter (→ 20)...**Value 8 display** parameter (→ 31) are used to specify which measured values are shown on the local display.
 - The display format for the measured values displayed is defined in the **Format display** parameter (→ 18).

Display damping



Navigation

Expert → System → Display → Display damping (0094)

Setup → Advanced setup → Display → Display damping (0094)

Prerequisite

A local display is provided.

Description

Use this function to enter a time constant for the reaction time of the local display to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

0.0 s

Additional information

User entry

Use this function to enter a time constant (PT1 element¹⁾) for display damping:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.

Damping is switched off if **0** is entered (factory setting).

Header



Navigation

Expert → System → Display → Header (0097)

Setup → Advanced setup → Display → Header (0097)

Prerequisite

A local display is provided.

Description

Use this function to select the contents of the header of the local display.

Selection

- Device tag
- Free text

Factory setting


Device tag

Additional information

Description

The header text only appears during normal operation.

1) proportional transmission behavior with first order delay

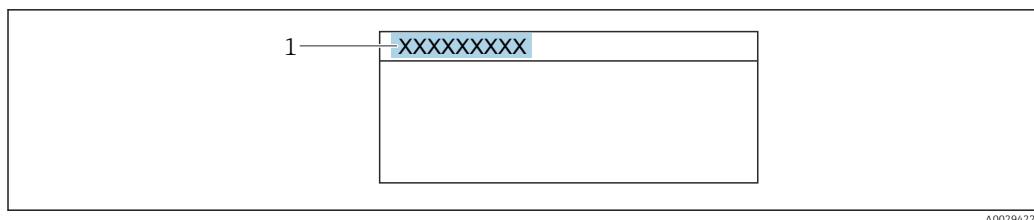

A0029422

1 Position of the header text on the display

Selection

Free text

Is defined in the **Header text** parameter (→ [34](#)).

Header text



Navigation

Expert → System → Display → Header text (0112)

Setup → Advanced setup → Display → Header text (0112)

Prerequisite

The **Free text** option is selected in the **Header** parameter (→ [33](#)).

Description

Use this function to enter a customer-specific text for the header of the local display.

User entry


Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Additional information

Description

The header text only appears during normal operation.

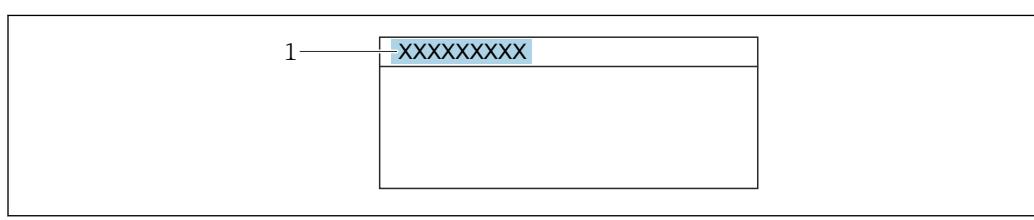

A0029422

1 Position of the header text on the display

User entry

The number of characters displayed depends on the characters used.

Separator



Navigation

Expert → System → Display → Separator (0101)

Setup → Advanced setup → Display → Separator (0101)

Prerequisite

A local display is provided.

Description Use this function to select the decimal separator.

Selection

- . (point)
- , (comma)

Factory setting . (point)

Contrast display

Navigation  Expert → System → Display → Contrast display (0105)

Prerequisite A local display is provided.

Description Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

User entry 20 to 80 %

Factory setting Depends on the display

Backlight

Navigation  Expert → System → Display → Backlight (0111)

 Setup → Advanced setup → Display → Backlight (0111)

Prerequisite One of the following conditions is met:

- Order code for "Display; operation", option F "4-line, illum.; touch control"
- Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"

Description Use this function to switch the backlight of the local display on and off.

Selection

- Disable
- Enable

Factory setting Enable

3.1.2 "Configuration backup" submenu

Navigation

 Expert → System → Config. backup

 Configuration backup

Operating time (0652)

→  36

Last backup (2757)	→ 36
Configuration management (2758)	→ 36
Backup state (2759)	→ 37
Comparison result (2760)	→ 37

Operating time

Navigation Expert → System → Config. backup → Operating time (0652)

Description Use this function to display the length of time the device has been in operation.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

Last backup

Navigation Expert → System → Config. backup → Last backup (2757)

Description Displays the time since a backup copy of the data was last saved to the device memory.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Configuration management



Navigation Expert → System → Config. backup → Config. managem. (2758)

Description Use this function to select an action to save the data to the device memory.

Selection

- Cancel
- Execute backup
- Restore *
- Compare *
- Clear backup data

Factory setting

Cancel

* Visibility depends on order options or device settings

Additional information*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device. The following message appears on local display: Backup active, please wait!
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. The following message appears on local display: Restore active! Do not interrupt power supply!
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. The following message appears on local display: Comparing files The result can be viewed in Comparison result parameter.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device. The following message appears on local display: Deleting file

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

Backup state**Navigation**
 Expert → System → Config. backup → Backup state (2759)
Description

Displays the status of the data backup process.

User interface

- None
- Backup in progress
- Restoring in progress
- Delete in progress
- Compare in progress
- Restoring failed
- Backup failed

Factory setting

None

Comparison result**Navigation**
 Expert → System → Config. backup → Compar. result (2760)
Description

Displays the last result of the comparison of the data records in the device memory and in the HistoROM.

User interface

- Settings identical
- Settings not identical
- No backup available

- Backup settings corrupt
- Check not done
- Dataset incompatible

Factory setting Check not done

Additional information *Description*

i The comparison is started via the **Compare** option in the **Configuration management** parameter (→ 36).

Selection

Options	Description
Settings identical	The current device configuration of the HistoROM is identical to the backup copy in the device memory. If the transmitter configuration of another device has been transmitted to the device via HistoROM in the Configuration management parameter, the current device configuration of the HistoROM is only partially identical to the backup copy in the device memory: The settings for the transmitter are not identical.
Settings not identical	The current device configuration of the HistoROM is not identical to the backup copy in the device memory.
No backup available	There is no backup copy of the device configuration of the HistoROM in the device memory.
Backup settings corrupt	The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the device memory.
Check not done	The device configuration of the HistoROM has not yet been compared to the backup copy in the device memory.
Dataset incompatible	The backup copy in the device memory is not compatible with the device.


HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.1.3 "Diagnostic handling" submenu

Navigation

Expert → System → Diagn. handling

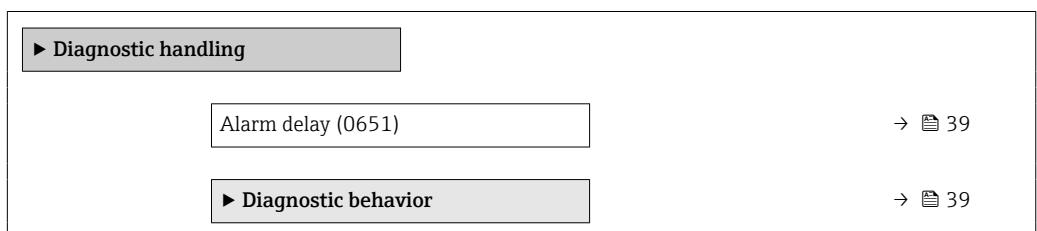

Alarm delay**Navigation**

Expert → System → Diagn. handling → Alarm delay (0651)

Description

Use this function to enter the time interval until the device generates a diagnostic message.



The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting

0 s

Additional information*Effect*

This setting affects the following diagnostic messages:

- 170 coil resistance
- 832 Electronics temperature too high
- 833 Electronics temperature too low
- 834 Process temperature too high
- 835 Process temperature too low

"Diagnostic behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu (→ 39).



For a list of all the diagnostic events, see the Operating Instructions for the device
→ 7

Navigation

Expert → System → Diagn. handling → Diagn. behavior

► Diagnostic behavior

Assign behavior of diagnostic no. 043
(0650)

→ 40

Assign behavior of diagnostic no. 143
(0646)

→ 41

Assign behavior of diagnostic no. 302
(0739)

→ 41

Assign behavior of diagnostic no. 376
(0645)

→ 41

Assign behavior of diagnostic no. 377
(0777)

→ 42

Assign behavior of diagnostic no. 441
(0657)

→ 42

Assign behavior of diagnostic no. 442 (0658)	→ 42
Assign behavior of diagnostic no. 443 (0659)	→ 43
Assign behavior of diagnostic no. 444 (0740)	→ 43
Assign behavior of diagnostic no. 531 (0741)	→ 44
Assign behavior of diagnostic no. 832 (0681)	→ 44
Assign behavior of diagnostic no. 833 (0682)	→ 44
Assign behavior of diagnostic no. 834 (0700)	→ 45
Assign behavior of diagnostic no. 835 (0702)	→ 45
Assign behavior of diagnostic no. 842 (0638)	→ 45
Assign behavior of diagnostic no. 961 (0736)	→ 46
Assign behavior of diagnostic no. 962 (0745)	→ 46
Assign behavior of diagnostic no. 937 (0743)	→ 46
Assign behavior of diagnostic no. 938 (0642)	→ 47

Assign behavior of diagnostic no. 043 (Sensor short circuit)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 043 (0650)

Description

Use this function to change the diagnostic behavior of the **043 Sensor short circuit** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available:

Assign behavior of diagnostic no. 143 (HBSI limit exceeded)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 143 (0646)

Description Change behavior of diagnostic event with diagnostic number 143 'HBSI limit exceeded'.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available:

Assign behavior of diagnostic no. 302 (Device verification active)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 302 (0739)

Description Use this function to change the diagnostic behavior of the **302 Device verification active** diagnostic message.

Selection

- Off
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available:

Assign behavior of diagnostic no. 376 (Sensor electronics (ISEM) faulty)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 376 (0645)

Description Use this function to change the diagnostic behavior of the **376 Sensor electronics (ISEM) faulty** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available:

Assign behavior of diagnostic no. 377 (Sensor electronics (ISEM) faulty)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 377 (0777)

Description Use this function to change the diagnostic behavior of the **377 Sensor electronics (ISEM) faulty** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available:

Assign behavior of diagnostic no. 441 (Current output 1 to n)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 441 (0657)

Description Use this function to change the diagnostic behavior of the **441 Current output 1 to n** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available:

Assign behavior of diagnostic no. 442 (Frequency output 1 to n)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 442 (0658)

Prerequisite The measuring device has a pulse/frequency/switch output.

Description Use this function to change the diagnostic behavior of the **442 Frequency output 1 to n** diagnostic message.

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 For a detailed description of the options available:
-------------------------------	--

Assign behavior of diagnostic no. 443 (Pulse output 1 to n)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 443 (0659)
-------------------	---

Prerequisite	The measuring device has a pulse/frequency/switch output.
---------------------	---

Description	Use this function to change the diagnostic behavior of the 443 Pulse output 1 to n diagnostic message.
--------------------	---

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 For a detailed description of the options available:
-------------------------------	--

Assign behavior of diagnostic no. 444 (Current input 1 to n)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 444 (0740)
-------------------	---

Prerequisite	The device has one current input.
---------------------	-----------------------------------

Description	Use this function to change the diagnostic behavior of the 444 Current input 1 to n diagnostic message.
--------------------	--

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 For a detailed description of the options available:
-------------------------------	--

Assign behavior of diagnostic no. 531 (Empty pipe detection)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 531 (0741)

Description

Use this function to change the diagnostic behavior of the **531 Empty pipe detection** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available:

Assign behavior of diagnostic no. 832 (Electronics temperature too high)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832 (0681)

Description

Use this function to change the diagnostic behavior of the **832 Electronics temperature too high** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Logbook entry only

Additional information

For a detailed description of the options available:

Assign behavior of diagnostic no. 833 (Electronics temperature too low)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833 (0682)

Description

Use this function to change the diagnostic behavior of the **833 Electronics temperature too low** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Logbook entry only

Additional information

For a detailed description of the options available:

Assign behavior of diagnostic no. 834 (Process temperature too high)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834 (0700)
Description	Use this function to change the diagnostic behavior of the 834 Process temperature too high diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available:

Assign behavior of diagnostic no. 835 (Process temperature too low)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835 (0702)
Description	Use this function to change the diagnostic behavior of the 835 Process temperature too low diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available:

Assign behavior of diagnostic no. 842 (Process limit)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 842 (0638)
Description	Use this function to change the diagnostic behavior of the 842 Process limit diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Off
Additional information	For a detailed description of the options available:

Assign behavior of diagnostic no. 961 (Electrode potential out of specification)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 961 (0736)

Description

Use this function to change the diagnostic behavior of the **861 Process fluid** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Alarm

Additional information

For a detailed description of the options available:

Assign behavior of diagnostic no. 962 (Pipe empty)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 962 (0745)

Description

Use this function to change the diagnostic behavior of the **862 Pipe empty** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available:

Assign behavior of diagnostic no. 937 (EMC interference)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 937 (0743)

Description

Use this function to change the diagnostic behavior of the **937 EMC interference** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available:

Assign behavior of diagnostic no. 938 (EMC interference)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 938 (0642)

Description

Use this function to change the diagnostic behavior of the **938 EMC interference** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Alarm

Additional information

For a detailed description of the options available:

3.1.4 "Administration" submenu*Navigation*

Expert → System → Administration

► Administration	
► Define access code	→ 47
► Reset access code	→ 49
Device reset	→ 50
Transmitter identifier	→ 50
Activate SW option	→ 50
Software option overview	→ 51

"Define access code" wizard

The **Define access code** wizard (→ 47) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Define access code** parameter can be found directly in the **Administration** submenu. There is no **Confirm access code** parameter if the device is operated via the operating tool.

Navigation

Expert → System → Administration → Def. access code

► Define access code	
----------------------	--

Define access code	→ 48
Confirm access code	→ 48

Define access code



Navigation

Expert → System → Administration → Def. access code → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the device configuration against any inadvertent modifications via the local display, Web browser, FieldCare or DeviceCare (via CDI-RJ45 service interface).

User entry

Max. 16-digit character string comprising numbers, letters and special characters

Additional information

Description

The write protection affects all parameters in the document marked with the symbol. On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→ 16).

If you lose the access code, please contact your Endress+Hauser sales organization.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Confirm access code



Navigation


Expert → System → Administration → Def. access code → Confirm code

Description

Enter the defined release code a second time to confirm the release code.

User entry

Max. 16-digit character string comprising numbers, letters and special characters

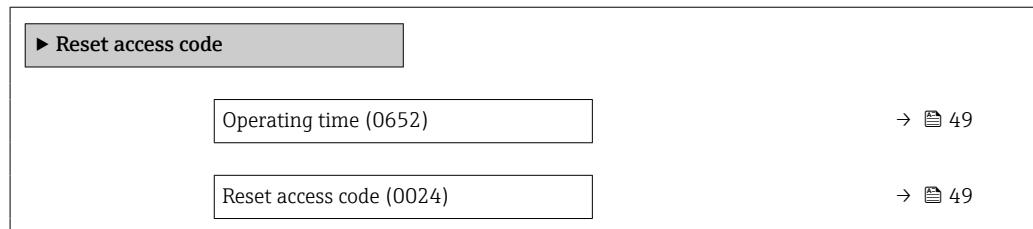"Reset access code" submenu**Navigation** Expert → System → Administration → Reset acc. code

Operating time**Navigation** Expert → System → Administration → Reset acc. code → Operating time (0652)**Description**

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

Reset access code**Navigation** Expert → System → Administration → Reset acc. code → Reset acc. code (0024)**Description**

Use this function to enter a reset code to reset the user-specific access codes to the factory setting .

User entry

Character string comprising numbers, letters and special characters

Factory setting

0x00

Additional information*Description* For a reset code, contact your Endress+Hauser service organization.*User entry*

The reset code can only be entered via:

- Web browser
- DeviceCare, FieldCare (via CDI RJ45 interface)
- Fieldbus

Additional parameters in the "Administration" submenu

Device reset



Navigation	Expert → System → Administration → Device reset (0000)
Description	Reset the device configuration - either entirely or in part - to a defined state.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ To delivery settings ■ Restart device ■ Restore S-DAT backup *
Factory setting	Cancel
Additional information	<i>Options</i>

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Transmitter identifier



Navigation	Expert → System → Administration → Transm. identif. (2765)
Description	Select transmitter identifier.
User interface	<ul style="list-style-type: none"> ■ Unknown ■ 500 ■ 300
Factory setting	Unknown

Activate SW option



Navigation	Expert → System → Administration → Activate SW opt. (0029)
Description	Use this function to enter an activation code to enable an additional, ordered software option.

* Visibility depends on order options or device settings

User entry	Max. 10-digit string consisting of numbers.
Factory setting	Depends on the software option ordered
Additional information	<p><i>Description</i></p> <p>If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.</p> <p><i>User entry</i></p> <p> To activate a software option subsequently, please contact your Endress+Hauser sales organization.</p> <p>NOTE!</p> <p>The activation code is linked to the serial number of the measuring device and varies according to the device and software option.</p> <p>If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.</p> <ul style="list-style-type: none"> ▶ Before you enter a new activation code, make a note of the current activation code . ▶ Enter the new activation code provided by Endress+Hauser when the new software option was ordered. ▶ Once the activation code has been entered, check if the new software option is displayed in the Software option overview parameter (→ 51). ↳ The new software option is active if it is displayed. ↳ If the new software option is not displayed or all software options have been deleted, the code entered was either incorrect or invalid. ▶ If the code entered is incorrect or invalid, enter the old activation code . ▶ Have your Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again. <p><i>Example for a software option</i></p> <p>Order code for "Application package", option EA "Extended HistoROM"</p> <p> The software options currently enabled are displayed in the Software option overview parameter (→ 51).</p> <p><i>Web browser</i></p> <p> Once a software option has been activated, the page must be loaded again in the Web browser.</p>

Software option overview

Navigation	  Expert → System → Administration → SW option overv. (0015)
Description	Displays all the software options that are enabled in the device.

User interface	<ul style="list-style-type: none"> ▪ Extended HistoROM * ▪ Electrode cleaning circuit * ▪ Build-up index ▪ Heartbeat Monitoring * ▪ Heartbeat Verification
Additional information	<i>Description</i>
	Displays all the options that are available if ordered by the customer.
	<i>"Extended HistoROM" option</i>
	Order code for "Application package", option EA "Extended HistoROM"
	<i>"Electrode cleaning circuit" option</i>
	Order code for "Application package", option EC "ECC electrode cleaning"
	<i>"Heartbeat Verification" option and "Heartbeat Monitoring" option</i>
	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

3.2 "Sensor" submenu

Navigation

Expert → Sensor


▶ Sensor	
▶ Measured values	→ 53
▶ System units	→ 62
▶ Process parameters	→ 69
▶ External compensation	→ 86
▶ Sensor adjustment	→ 88
▶ Calibration	→ 95
▶ Build-up index adjustment	→ 96

* Visibility depends on order options or device settings

3.2.1 "Measured values" submenu

Navigation


Expert → Sensor → Measured val.

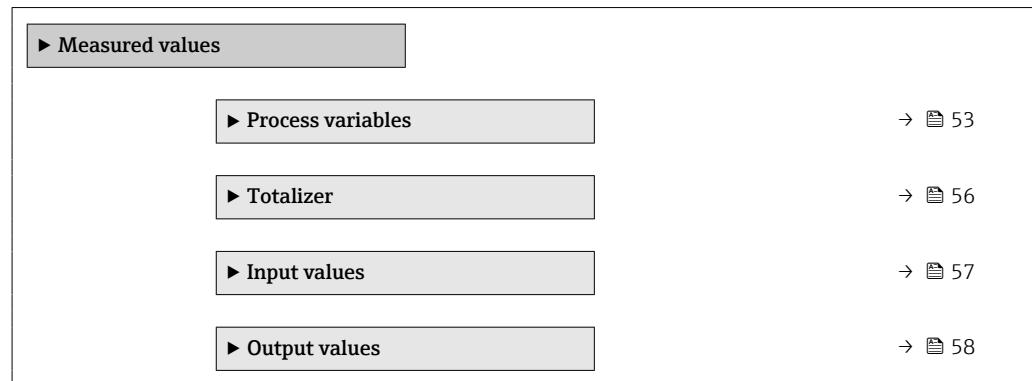

"Process variables" submenu

Navigation

Expert → Sensor → Measured val. → Process variab.

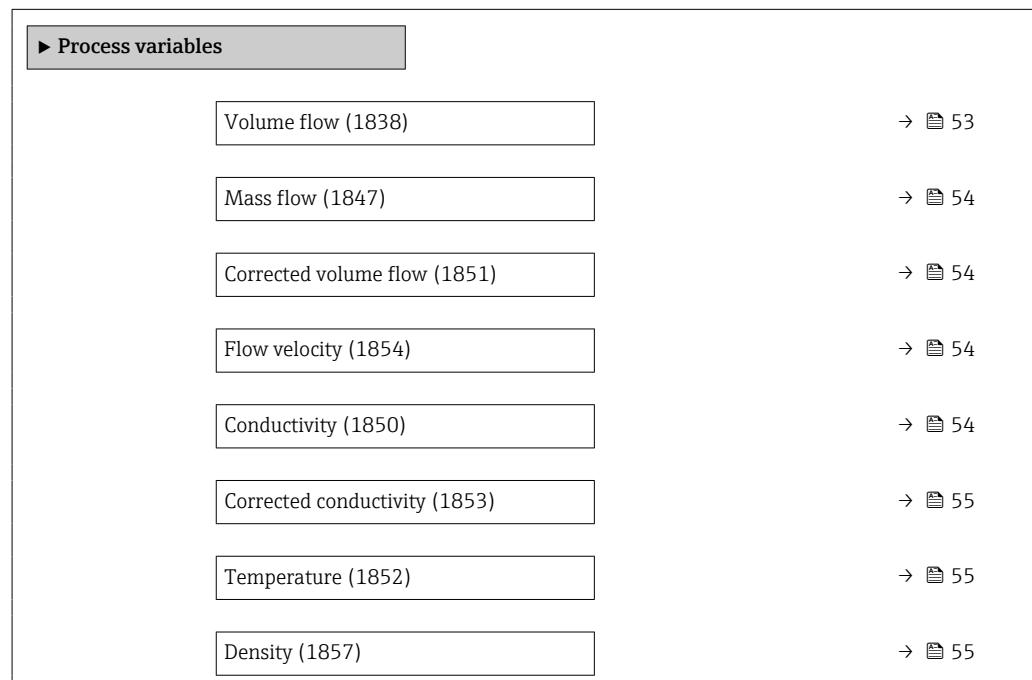

Volume flow

Navigation

Expert → Sensor → Measured val. → Process variab. → Volume flow (1838)

Description

Displays the volume flow that is currently measured.

User interface

Signed floating-point number

Additional information

Mass flow

Navigation  Expert → Sensor → Measured val. → Process variab. → Mass flow (1847)

Description Displays the mass flow that is currently calculated.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Mass flow unit** parameter (→  66)

Corrected volume flow

Navigation  Expert → Sensor → Measured val. → Process variab. → CorrecVolumeFlow (1851)

Description Displays the corrected volume flow that is currently measured.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Corrected volume flow unit** parameter (→  67)

Flow velocity

Navigation  Expert → Sensor → Measured val. → Process variab. → Flow velocity (1854)

Description Displays the flow velocity that is currently calculated.

User interface Signed floating-point number

Conductivity

Navigation  Expert → Sensor → Measured val. → Process variab. → Conductivity (1850)

Description Displays the conductivity that is currently measured.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Conductivity unit** parameter (→  64)

Corrected conductivity

Navigation	  Expert → Sensor → Measured val. → Process variab. → CorrConductivity (1853)
Prerequisite	One of the following conditions is met: <ul style="list-style-type: none">■ Order code for "Sensor option", option CI "Medium temperature measurement" or■ The temperature is read into the flowmeter from an external device.
Description	Displays the conductivity that is currently corrected.
User interface	Positive floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Conductivity unit parameter (→  64)

Temperature


Navigation	  Expert → Sensor → Measured val. → Process variab. → Temperature (1852)
Prerequisite	One of the following conditions is met: <ul style="list-style-type: none">■ Order code for "Sensor option", option CI "Medium temperature measurement" or■ The temperature is read into the flowmeter from an external device.
Description	Displays the temperature that is currently calculated.
User interface	Positive floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)

Density

Navigation	  Expert → Sensor → Measured val. → Process variab. → Density (1857)
Description	Displays the current fixed density or density read in from an external device.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Density unit parameter (→  67)

"Totalizer" submenu**Navigation**

Expert → Sensor → Measured val. → Totalizer

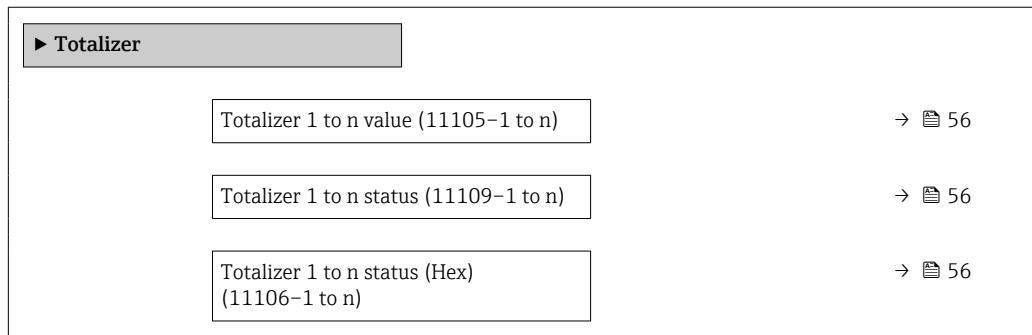**Totalizer 1 to n value****Navigation**

Expert → Sensor → Measured val. → Totalizer → Tot. 1 to n value (11105-1 to n)

Description

Shows the totalizer value reported to the controller for further processing.

User interface

Signed floating-point number

Factory setting

0 1

Totalizer 1 to n status**Navigation**

Expert → Sensor → Measured val. → Totalizer → Tot. 1 to n status (11109-1 to n)

Description

Shows the status of the totalizer value reported to the controller for further processing ('Good', 'Uncertain', 'Bad').

User interface

- Good
- Uncertain
- Bad

Factory setting

Good

Totalizer 1 to n status (Hex)**Navigation**

Expert → Sensor → Measured val. → Totalizer → Status 1 to n (Hex) (11106-1 to n)

Description

Shows the status of the totalizer value reported to the controller for further processing (Hex).


User interface

0 to 255

Factory setting 128


"Input values" submenu

Navigation Expert → Sensor → Measured val. → Input values

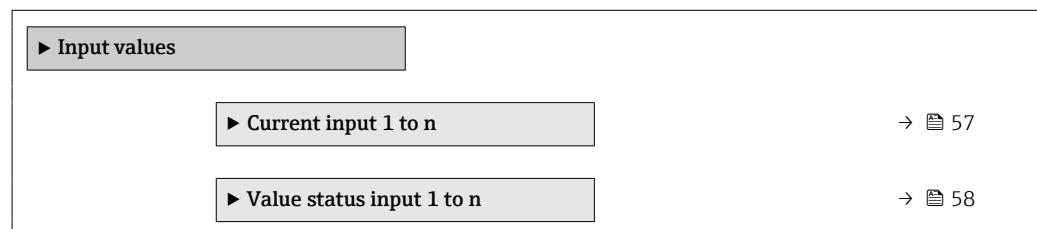

"Current input 1 to n" submenu

Navigation Expert → Sensor → Measured val. → Input values → Current input 1 to n

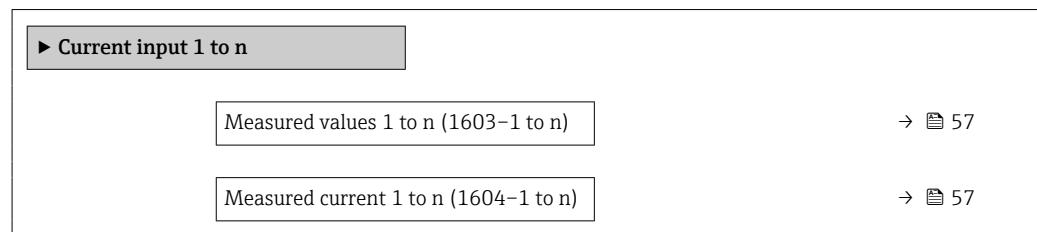

Measured values 1 to n

Navigation Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measured val. 1 to n (1603-1 to n)

Description Displays the current input value.

User interface Signed floating-point number

Measured current 1 to n


Navigation Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measur. curr. 1 to n (1604-1 to n)

Description Displays the current value of the current input.

User interface 0 to 22.5 mA

*"Value status input 1 to n" submenu**Navigation*

Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n

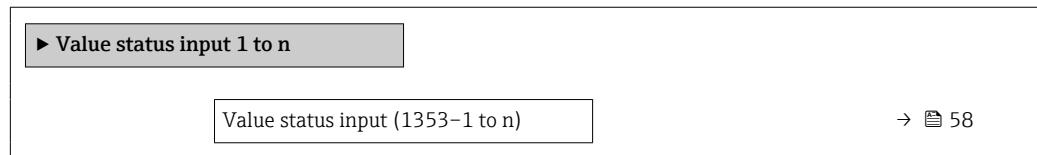**Value status input****Navigation**

Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n
→ Val.stat.inp. (1353-1 to n)

Description


Displays the current input signal level.

User interface


- High
- Low

*"Output values" submenu**Navigation*

Expert → Sensor → Measured val. → Output values

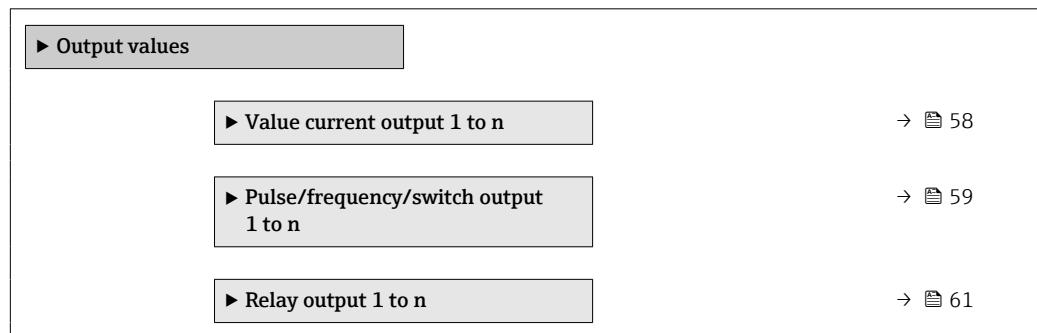*"Value current output 1 to n" submenu**Navigation*

Expert → Sensor → Measured val. → Output values → Val. curr.outp 1 to n

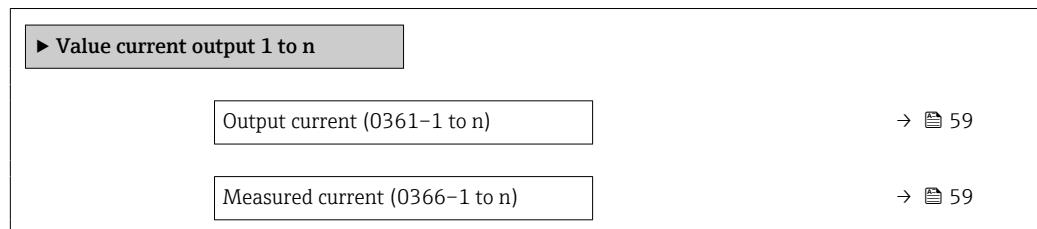

Output current

Navigation	Diagram: Expert → Sensor → Measured val. → Output values → Val. curr.outp 1 to n → Output curr. (0361-1 to n)
Description	Displays the current value currently calculated for the current output.
User interface	0 to 22.5 mA

Measured current

Navigation	Diagram: Expert → Sensor → Measured val. → Output values → Val. curr.outp 1 to n → Measur. curr. (0366-1 to n)
Description	Displays the actual measured value of the output current.
User interface	0 to 30 mA

"Pulse/frequency/switch output 1 to n" submenu

Navigation Diagram: Expert → Sensor → Measured val. → Output values → PFS output 1 to n

Pulse/frequency/switch output 1 to n	
Output frequency (0471-1 to n)	→ 59
Pulse output 1 to n (0456-1 to n)	→ 60
Switch state (0461-1 to n)	→ 60

Output frequency

Navigation	Diagram: Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Output freq. (0471-1 to n)
Prerequisite	In the Operating mode parameter (→ 121), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Pulse output 1 to n

Navigation

 Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Pulse output 1 to n (0456-1 to n)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ [121](#)) parameter.

Description

Displays the pulse frequency currently output.


User interface

Positive floating-point number

Additional information

Description

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

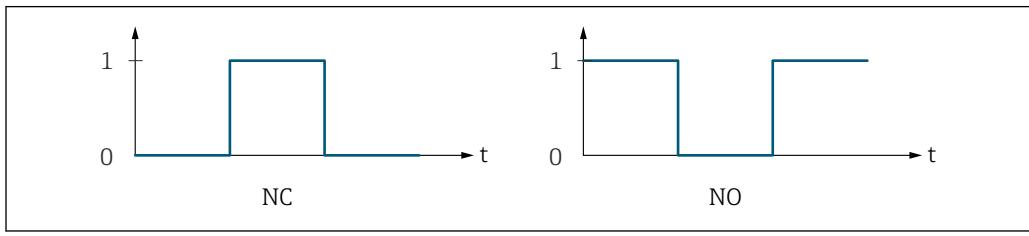

0 Non-conductive
 1 Conductive
 NC NC contact (normally closed)
 NO NO contact (normally open)

The output behavior can be reversed via the **Invert output signal** parameter (→ [138](#)) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→ [125](#))) can be configured.

Switch state

Navigation

 Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Switch state (0461-1 to n)

Prerequisite

The **Switch** option is selected in the **Operating mode** parameter (→ [121](#)).

Description

Displays the current switch status of the status output.

User interface


- Open
- Closed

Additional information*User interface*

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

*"Relay output 1 to n" submenu**Navigation*

 Expert → Sensor → Measured val. → Output values → Relay output 1 to n

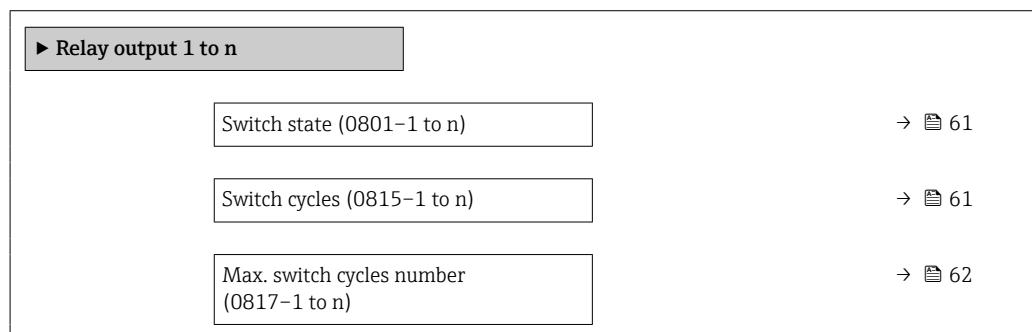

Switch state**Navigation**

 Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch state (0801-1 to n)

Description

Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information*User interface*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

Switch cycles**Navigation**

 Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch cycles (0815-1 to n)

Description

Displays all the switch cycles performed.

User interface

Positive integer

Max. switch cycles number

Navigation	Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Max. cycles no. (0817–1 to n)
Description	Displays the maximum number of guaranteed switch cycles.
User interface	Positive integer

3.2.2 "System units" submenu

Navigation Expert → Sensor → System units

► System units
Volume flow unit (0553) → 62
Volume unit (0563) → 64
Conductivity unit (0582) → 64
Temperature unit (0557) → 65
Mass flow unit (0554) → 66
Mass unit (0574) → 66
Density unit (0555) → 67
Corrected volume flow unit (0558) → 67
Corrected volume unit (0575) → 68
Date/time format (2812) → 69

Volume flow unit

Navigation Expert → Sensor → System units → Volume flow unit (0553)

Description Use this function to select the unit for the volume flow.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ cm ³ /s	■ af/s	■ gal/s (imp)	
■ cm ³ /min	■ af/min	■ gal/min (imp)	
■ cm ³ /h	■ af/h	■ gal/h (imp)	
■ cm ³ /d	■ af/d	■ gal/d (imp)	
■ dm ³ /s	■ ft ³ /s	■ Mgal/s (imp)	
■ dm ³ /min	■ ft ³ /min	■ Mgal/min (imp)	
■ dm ³ /h	■ ft ³ /h	■ Mgal/h (imp)	
■ dm ³ /d	■ ft ³ /d	■ Mgal/d (imp)	
■ m ³ /s	■ kft ³ /s	■ bbl/s (imp;beer)	
■ m ³ /min	■ kft ³ /min	■ bbl/min (imp;beer)	
■ m ³ /h	■ kft ³ /h	■ bbl/h (imp;beer)	
■ m ³ /d	■ kft ³ /d	■ bbl/d (imp;beer)	
■ ml/s	■ MMft ³ /s	■ bbl/s (imp;oil)	
■ ml/min	■ MMft ³ /min	■ bbl/min (imp;oil)	
■ ml/h	■ MMft ³ /h	■ bbl/h (imp;oil)	
■ ml/d	■ Mft ³ /d	■ bbl/d (imp;oil)	
■ l/s	■ fl oz/s (us)		
■ l/min	■ fl oz/min (us)		
■ l/h	■ fl oz/h (us)		
■ l/d	■ fl oz/d (us)		
■ hl/s	■ gal/s (us)		
■ hl/min	■ gal/min (us)		
■ hl/h	■ gal/h (us)		
■ hl/d	■ gal/d (us)		
■ Ml/s	■ Mgal/s (us)		
■ Ml/min	■ Mgal/min (us)		
■ Ml/h	■ Mgal/h (us)		
■ Ml/d	■ Mgal/d (us)		
	■ bbl/s (us;liq.)		
	■ bbl/min (us;liq.)		
	■ bbl/h (us;liq.)		
	■ bbl/d (us;liq.)		
	■ bbl/s (us;beer)		
	■ bbl/min (us;beer)		
	■ bbl/h (us;beer)		
	■ bbl/d (us;beer)		
	■ bbl/s (us;oil)		
	■ bbl/min (us;oil)		
	■ bbl/h (us;oil)		
	■ bbl/d (us;oil)		
	■ bbl/s (us;tank)		
	■ bbl/min (us;tank)		
	■ bbl/h (us;tank)		
	■ bbl/d (us;tank)		
	■ kgal/s (us)		
	■ kgal/min (us)		
	■ kgal/h (us)		
	■ kgal/d (us)		
Factory setting	Depends on country: ■ l/h ■ gal/min (us)		

Additional information*Effect*

The selected unit applies for:

Volume flow parameter (→  53)

Selection

 For an explanation of the abbreviated units: →  237

Volume unit**Navigation**

  Expert → Sensor → System units → Volume unit (0563)

Description

Use this function to select the unit for the volume.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- Mft³
- Mft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Factory setting

Country-specific:

- m³
- gal (us)

Additional information*Selection*

 For an explanation of the abbreviated units: →  237

Conductivity unit**Navigation**

  Expert → Sensor → System units → Conductiv. unit (0582)

Prerequisite

The **On** option is selected in the **Conductivity measurement** parameter (→  73) parameter.

Description

Use this function to select the unit for the conductivity.

Selection	<i>SI units</i>
	▪ nS/cm
	▪ μ S/cm
	▪ μ S/m
	▪ μ S/mm
	▪ mS/m
	▪ mS/cm
	▪ S/cm
	▪ S/m
	▪ kS/m
	▪ MS/m
Factory setting	μ S/cm
Additional information	<p><i>Effect</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> ▪ Conductivity parameter (→ 54) ▪ Corrected conductivity parameter (→ 55) <p><i>Selection</i></p>  For an explanation of the abbreviated units: → 237

Temperature unit

Navigation	 Expert → Sensor → System units → Temperature unit (0557)						
Description	Use this function to select the unit for the temperature.						
Selection	<table border="0"> <tr> <td><i>SI units</i></td> <td><i>US units</i></td> </tr> <tr> <td>▪ °C</td> <td>▪ °F</td> </tr> <tr> <td>▪ K</td> <td>▪ °R</td> </tr> </table>	<i>SI units</i>	<i>US units</i>	▪ °C	▪ °F	▪ K	▪ °R
<i>SI units</i>	<i>US units</i>						
▪ °C	▪ °F						
▪ K	▪ °R						
Factory setting	<p>Country-specific:</p> <ul style="list-style-type: none"> ▪ °C ▪ °F 						
Additional information	<p><i>Effect</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> ▪ Temperature parameter (→ 55) ▪ Maximum value parameter (→ 203) ▪ Minimum value parameter (→ 203) ▪ External temperature parameter (→ 87) ▪ Maximum value parameter (→ 206) ▪ Minimum value parameter (→ 206) <p><i>Selection</i></p>  For an explanation of the abbreviated units: → 237						

Mass flow unit**Navigation**

Expert → Sensor → System units → Mass flow unit (0554)

Description

Use this function to select the unit for the mass flow.

Selection*SI units*

- g/s
- g/min
- g/h
- g/d
- kg/s
- kg/min
- kg/h
- kg/d
- t/s
- t/min
- t/h
- t/d

US units

- oz/s
- oz/min
- oz/h
- oz/d
- lb/s
- lb/min
- lb/h
- lb/d
- STon/s
- STon/min
- STon/h
- STon/d

Factory setting

Country-specific:

- kg/h
- lb/min

Additional information*Effect*

The selected unit applies for:

Mass flow parameter (→ 54)

Selection

For an explanation of the abbreviated units: → 237

Mass unit**Navigation**

Expert → Sensor → System units → Mass unit (0574)

Description

Use this function to select the unit for the mass.

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

Factory setting

Country-specific:

- kg
- lb

Additional information*Selection*

For an explanation of the abbreviated units: → 237

Density unit**Navigation**

Expert → Sensor → System units → Density unit (0555)

Description

Use this function to select the unit for the density.

Selection*SI units*

- g/cm³
- g/m³
- kg/l
- kg/dm³
- kg/m³
- SG4°C
- SG15°C
- SG20°C

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

Imperial units

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Factory setting

Country-specific:

- kg/l
- lb/ft³

Additional information*Effect*

The selected unit applies for:

- **External density** parameter (→ 87)
- **Fixed density** parameter (→ 86)

Selection

- SD = specific density

The specific density is the ratio of the medium density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the medium density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).



For an explanation of the abbreviated units: → 237

Corrected volume flow unit**Navigation**

Expert → Sensor → System units → Cor.volflow unit (0558)

Description

Use this function to select the unit for the corrected volume flow.

Selection

- NI/s
- NI/min
- NI/h
- NI/d
- Nhl/s
- Nhl/min
- Nhl/h
- Nhl/d
- Nm³/s
- Nm³/min
- Nm³/h
- Nm³/d
- Sl/s
- Sl/min
- Sl/h
- Sl/d
- Sm³/s
- Sm³/min
- Sm³/h
- Sm³/d

- Sft³/s
- Sft³/min
- Sft³/h
- Sft³/d
- MSft³/s
- MSft³/min
- MSft³/h
- MSft³/D
- MMSft³/s
- MMSft³/min
- MMSft³/h
- MMSft³/d
- Sgal/s (us)
- Sgal/min (us)
- Sgal/h (us)
- Sgal/d (us)
- Sgal/s (us;liq.)
- Sgal/min (us;liq.)
- Sgal/h (us;liq.)
- Sgal/d (us;liq.)
- Sbbl/s (us;oil)
- Sbbl/min (us;oil)
- Sbbl/h (us;oil)
- Sbbl/d (us;oil)

- Sgal/s (imp)
- Sgal/min (imp)
- Sgal/h (imp)
- Sgal/d (imp)

Factory setting

Country-specific:

- NI/h
- Sft³/h

Additional information*Result*

The selected unit applies for:

Corrected volume flow parameter (→  54)*Selection*
 For an explanation of the abbreviated units: →  237
Corrected volume unit**Navigation**
  Expert → Sensor → System units → Corr. vol. unit (0575)
Description

Use this function to select the unit for the corrected volume.

Selection

- NI
- Nhl
- Nm³
- Sl
- Sm³

- Sft³
- MSft³
- MMSft³
- Sgal (us)
- Sbbl (us;liq.)
- Sbbl (us;oil)

- Sgal (imp)

Factory setting Country-specific:
 ■ Nm³
 ■ Sft³

Additional information *Selection*



For an explanation of the abbreviated units: → [237](#)

Date/time format



Navigation Expert → Sensor → System units → Date/time format (2812)

Description Use this function to select the desired time format for calibration history.

Selection
 ■ dd.mm.yy hh:mm
 ■ dd.mm.yy hh:mm am/pm
 ■ mm/dd/yy hh:mm
 ■ mm/dd/yy hh:mm am/pm

Factory setting dd.mm.yy hh:mm

Additional information *Selection*



For an explanation of the abbreviated units: → [237](#)

3.2.3 "Process parameters" submenu

Navigation

Expert → Sensor → Process param.

▶ Process parameters	
Filter options (6710)	→ 70
Flow damping (6661)	→ 72
Flow override (1839)	→ 72
Conductivity measurement (6514)	→ 73
Conductivity damping (1803)	→ 73
Conductivity temperature coefficient (1891)	→ 74
Temperature damping (1886)	→ 74

Corrected volume flow reference density (1885)	→ 74
▶ Low flow cut off	→ 75
▶ Empty pipe detection	→ 77
▶ Electrode cleaning cycle	→ 80
▶ Build-up index	→ 82
▶ HBSI	→ 85

Filter options



Navigation

Expert → Sensor → Process param. → Filter options (6710)

Description

Use this function to select a filter option.

Selection

- Adaptive
- Adaptive CIP on
- Dynamic
- Dynamic CIP on
- Binomial
- Binomial CIP on

Factory setting

Binomial

Additional information

Description

The user can choose from a range of filter combinations which can optimize the measurement result depending on the application. Each change in the filter setting affects

the output signal of the measuring device. The response time of the output signal increases as the filter depth increases.

Selection

■ **Adaptive**

- Strong flow damping with a short output signal response time.
- Some time is needed before a stable output signal can be generated.
- Not suitable for pulsating flow as the average flow can be different here.

■ **Dynamic**

- Average flow damping with a delayed output signal response time.
- The average flow is displayed correctly over a measuring interval determined over a long period.

■ **Binomial**

- Weak flow damping with a short output signal response time.
- The average flow is displayed correctly over a measuring interval determined over a long period.

■ **CIP**

- This filter makes the **Adaptive**, **Dynamic** and **Binomial** filter options additionally available.
- If the CIP filter has detected a change in the medium (abrupt increase in the noise level, e.g. quickly changing medium conductivity values during CIP cleaning), flow damping is greatly increased and the raw value (before flow damping) is limited by the mean value (delimiter). This eliminates extremely high measured errors (up to several 100 m/s).
- If the CIP filter is enabled, the response time of the entire measuring system increases and the output signal is delayed accordingly.

Examples

Possible applications for the filters

Application	Adaptive	Adaptive CIP	Dynamic	Dynamic CIP	Binomial	Binomial CIP
Pulsating flow (flow is negative intermittently)	---	---	++	--	++	--
Flow changes frequently (flow is dynamic)	-	--	++	-	++	-
Clear signal, fast control loop (< 1 s)	--	--	+ ¹⁾		++	-
Poor signal, slow control loop (response time of a few seconds)	++	-	--	---	---	---
Permanently bad signal	++	--	-	---	-	---
Short and severe signal distortion after a while		++		++		++
Replacement of a Promag 50/53: system damping Promag 100 = 0.5 * system damping Promag 50/53					+++	+++
Replacement of a Promag 10: system damping Promag 100 = system damping Promag 10 + 2			+++			
For a stable flow signal (no other requirements)	+++					

1) Value of flow damping < 6

Flow damping



Navigation

Expert → Sensor → Process param. → Flow damping (6661)

Description

Use this function to enter a value for flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

User entry

0 to 15

Factory setting

4

Additional information

Input range 0 to 15

- Value = 0: no damping
- Value = 1: minor damping
- Value = 15: strong damping

i ▪ The damping depends on the measuring period and the filter type selected.
▪ An increase or decrease in the damping depends on the application.

Effect

i The damping affects the following variables of the device:

- Outputs → 106
- Low flow cut off → 75
- Totalizers

Flow override



Navigation

Expert → Sensor → Process param. → Flow override (1839)

Description

Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

Selection

- Off
- On

Factory setting

Off

Additional information

Description

Flow override is active

- The **453 Flow override** diagnostic message is output.
- Output values
 - Temperature: continues to be output
 - Totalizer 1...3: stop being totalized

i The **Flow override** option can also be activated in the **Status input** submenu: **Assign status input** parameter (→ 104).

Conductivity measurement

Navigation Expert → Sensor → Process param. → Conduct. measur. (6514)

Prerequisite The **On** option is selected in the **Conductivity measurement** parameter (→ 73) parameter.

Description Use this function to enable and disable conductivity measurement.

Selection

- Off
- On

Factory setting Off

Additional information *Description*

For conductivity measurement to work, the medium must have a minimum conductivity of 5 µS/cm.

Conductivity damping

Navigation Expert → Sensor → Process param. → Conduct. damping (1803)

Prerequisite The **On** option is selected in the **Conductivity measurement** parameter (→ 73).

Description Use this function to enter a time constant for conductivity damping (PT1 element).

User entry 0 to 999.9 s

Factory setting 0 s

Additional information *Description*

The damping is performed by a PT1 element²⁾.

User entry

- Value = 0: no damping
- Value > 0: damping is increased

Damping is switched off if 0 is entered (factory setting).

2) Proportional behavior with first-order lag

Conductivity temperature coefficient**Navigation**

Expert → Sensor → Process param. → Cond. temp.coeff (1891)

Prerequisite

One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement"
or
- The temperature is read into the flowmeter from an external device.

Description

Use this function to enter the temperature coefficient for the conductivity.

User entry

Signed floating-point number

Factory setting

2.1 %/K

Temperature damping**Navigation**

Expert → Sensor → Process param. → Temp. damping (1886)

Prerequisite

One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement"
or
- The temperature is read into the flowmeter from an external device.

Description

Use this function to enter the time constant for temperature damping.

User entry

0 to 999.9 s

Factory setting

0 s

Corrected volume flow reference density**Navigation**

Expert → Sensor → Process param. → CVolFlowRefDens (1885)

Description

Use this function to enter a fixed value for the reference density.

User entry

Positive floating-point number

Factory setting

Country-specific:

- 1 kg/l
- 1 lb/ft³

Additional information*Dependency* The unit is taken from the **Density unit** parameter (→ 67)

"Low flow cut off" submenu**Navigation**

Diagram: Expert → Sensor → Process param. → Low flow cut off

► Low flow cut off	
Assign process variable (1837)	→ 75
On value low flow cutoff (1805)	→ 75
Off value low flow cutoff (1804)	→ 76
Pressure shock suppression (1806)	→ 76

Assign process variable**Navigation**

Diagram: Expert → Sensor → Process param. → Low flow cut off → Assign variable (1837)

Description

Use this function to select the process variable for low flow cutoff detection.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow

Factory setting

Volume flow

On value low flow cutoff**Navigation**

Diagram: Expert → Sensor → Process param. → Low flow cut off → On value (1805)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 75).

Description

Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 → 76.

User entry

Positive floating-point number

Factory setting

Depends on country and nominal diameter → 231

Additional information

Dependency

The unit depends on the process variable selected in the **Assign process variable** parameter (→ 75).

Off value low flow cutoff**Navigation**

Expert → Sensor → Process param. → Low flow cut off → Off value (1804)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 75).

Description

Use this function to enter a switch-off value for low flow cut off. The switch-off value is entered as a positive hysteresis from the switch-on value → 75.

User entry


0 to 100.0 %

Factory setting

50 %

Additional information

Example

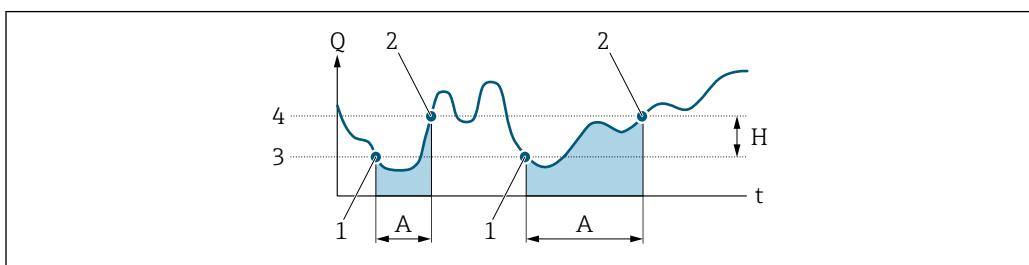

A0012887

- Q Flow
- t Time
- H Hysteresis
- A Low flow cut off active
- 1 Low flow cut off is activated
- 2 Low flow cut off is deactivated
- 3 On value entered
- 4 Off value entered

Pressure shock suppression**Navigation**

Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup. (1806)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 75).

Description

Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

User entry

0 to 100 s

Factory setting

0 s

Additional information

Description

Pressure shock suppression is enabled


- Prerequisite:
Flow rate < on-value of low flow cut off
- Output values
 - Flow displayed: 0
 - Totalizer: the totalizers are pegged at the last correct value

Pressure shock suppression is disabled

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the off value for low flow cut off, the device starts processing and displaying the current flow value again.

Example

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

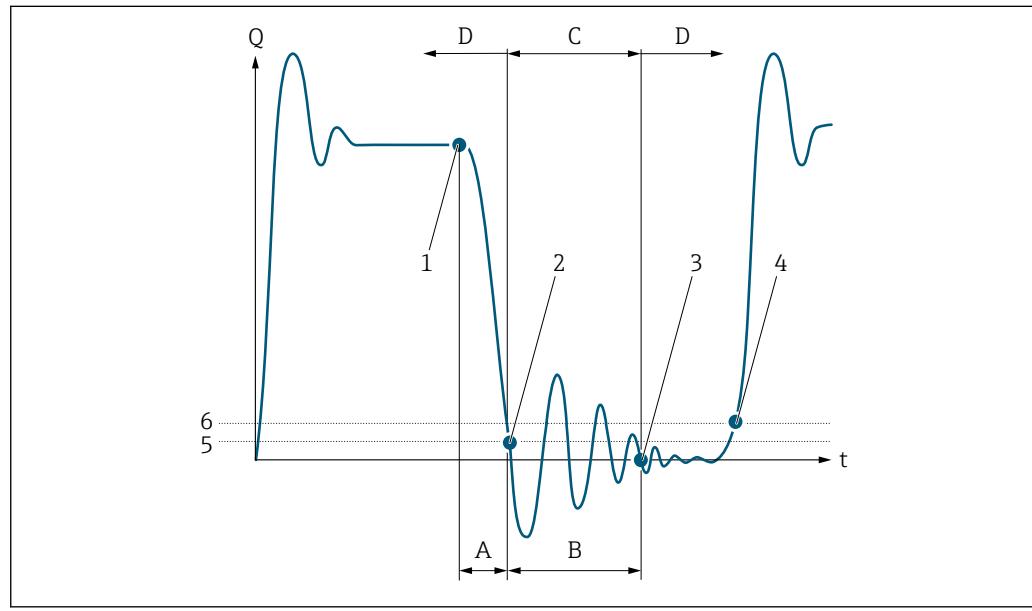


A0012888

- Q Flow
 t Time
 A After run
 B Pressure shock
 C Pressure shock suppression active according to the time entered
 D Pressure shock suppression inactive
 1 Valve closes
 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
 3 The time entered has elapsed: pressure shock suppression is deactivated
 4 The current flow value is processed and displayed again
 5 On value for low flow cut off
 6 Off value for low flow cut off

"Empty pipe detection" submenu

Navigation

Expert → Sensor → Process param. → Empty pipe det.

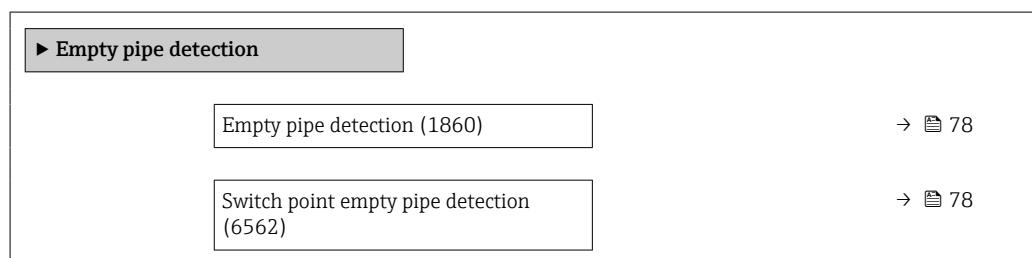

Response time empty pipe detection (1859)	→ 78
New adjustment (6560)	→ 79
Progress (6571)	→ 79
Empty pipe adjust value (6527)	→ 79
Full pipe adjust value (6548)	→ 80
Measured value EPD (6559)	→ 80

Empty pipe detection



Navigation	Expert → Sensor → Process param. → Empty pipe det. → Empty pipe det. (1860)
Description	Use this function to switch empty pipe detection on and off.
Selection	<ul style="list-style-type: none">▪ Off▪ On
Factory setting	Off

Switch point empty pipe detection



Navigation	Expert → Sensor → Process param. → Empty pipe det. → Switch point EPD (6562)
Prerequisite	The On option is selected in the Empty pipe detection parameter (→ 78).
Description	Use this function to enter the percentage threshold value of the resistance in relation to the adjustment values.
User entry	0 to 100 %
Factory setting	50 %

Response time empty pipe detection



Navigation	Expert → Sensor → Process param. → Empty pipe det. → Response time (1859)
Prerequisite	A process variable is selected in the Assign process variable parameter (→ 78).

Description Use this function to enter the minimum time (hold time) the signal must be present before diagnostic message S962 "Empty pipe" is triggered in the event of a partially filled or empty measuring pipe.

User entry 0 to 100 s

Factory setting 1 s

New adjustment



Navigation Expert → Sensor → Process param. → Empty pipe det. → New adjustment (6560)

Prerequisite The **On** option is selected in the **Empty pipe detection** parameter (→ 78).

Description For selecting whether to perform an empty pipe or full pipe adjustment.

Selection

- Cancel
- Empty pipe adjust
- Full pipe adjust

Factory setting Cancel

Progress

Navigation Expert → Sensor → Process param. → Empty pipe det. → Progress (6571)

Prerequisite The **On** option is selected in the **Empty pipe detection** parameter (→ 78).

Description Use this function to view the progress.

User interface

- Ok
- Busy
- Not ok

Empty pipe adjust value



Navigation Expert → Sensor → Process param. → Empty pipe det. → Empty pipe value (6527)

Prerequisite

- In the **Empty pipe detection** parameter (→ 78), the **On** option is selected.
- Adjustment value > full pipe value.

Description Use this function to display the adjustment value when the measuring pipe is empty.

User interface Positive floating-point number

Factory setting 1 000 000 Ohm

Full pipe adjust value

Navigation Expert → Sensor → Process param. → Empty pipe det. → Full pipe value (6548)

Prerequisite

- In the **Empty pipe detection** parameter (→ 78), the **On** option is selected.
- Adjustment value < empty pipe value.

Description Use this function to display the adjustment value when the measuring pipe is full.

User interface Positive floating-point number

Factory setting 1 000 Ohm

Measured value EPD

Navigation Expert → Sensor → Process param. → Empty pipe det. → Meas. value EPD (6559)

Prerequisite In the **Empty pipe detection** parameter (→ 78), the **On** option is selected.

Description Displays the current measured value.

User interface Positive floating-point number

"Electrode cleaning circuit" submenu

Navigation Expert → Sensor → Process param. → ECC

Electrode cleaning cycle	
Electrode cleaning cycle (6528)	→ 81
ECC duration (6555)	→ 81
ECC recovery time (6556)	→ 81
ECC interval (6557)	→ 82
ECC polarity (6631)	→ 82

Electrode cleaning cycle

Navigation Expert → Sensor → Process param. → Elec. clean cycl → Elec. clean cycl (6528)

Prerequisite For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description Use this function to enable and disable cyclic electrode cleaning.

Selection

- Off
- On

Factory setting On

Additional information Conductive deposits on the electrodes and on the walls of the measuring tube (e.g. magnetite) can falsify measurement values. The Electrode Cleaning Circuitry (ECC) was developed to prevent such conductive deposits developing in the vicinity of the electrodes. ECC functions as described above for all available electrode materials except tantalum. If tantalum is used as the electrode material, the ECC protects the electrode surface only against oxidation.

ECC duration

Navigation Expert → Sensor → Process param. → Elec. clean cycl → ECC duration (6555)

Prerequisite For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description Use this function to enter the duration of electrode cleaning in seconds.

User entry 0.01 to 30 s

Factory setting 2 s

ECC recovery time

Navigation Expert → Sensor → Process param. → Elec. clean cycl → ECC recov. time (6556)

Prerequisite For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description Use this function to enter the recovery time after electrode cleaning to prevent signal output interference. The current output values are frozen in the meanwhile.

User entry 1 to 600 s

Factory setting 60 s

ECC interval**Navigation**

Expert → Sensor → Process param. → Elec. clean cycl → ECC interval (6557)

Prerequisite

For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description

Use this function to enter the pause duration until the next electrode cleaning.

User entry

0.5 to 168 h

Factory setting

0.5 h

ECC polarity**Navigation**

Expert → Sensor → Process param. → Elec. clean cycl → ECC polarity (6631)

Prerequisite

For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description

Displays the polarity of the electrode cleaning circuit.

User interface

- Positive
- Negative

Factory setting

Depends on the electrode material:

- Tantalum: **Negative** option
- Platinum, Alloy C22, stainless steel: **Positive** option

"Coating detection" submenu

Build-up detection is only available:

- In conjunction with the Promag W sensor
- In the compact device version (transmitter and sensor form a mechanical unit)
- For detailed information on build-up detection: see the Special Documentation for the **Heartbeat Verification + Monitoring** application package

Navigation

Expert → Sensor → Process param. → Build-up detect.

► Build-up index	
Build-up index operating mode	→ 83
Build-up index damping	→ 83
Build-up index	→ 83

Build-up limit	→ 84
Build-up limit hysteresis	→ 84

Build-up index operating mode

Navigation	Expert → Sensor → Process param. → Build-up index → BuildUpIndexMode (6734)
Description	Select mode of operation for build-up index.
Selection	<ul style="list-style-type: none"> ■ Off ■ Slow ■ Standard ■ Fast
Factory setting	Off

Build-up index damping

Navigation	Expert → Sensor → Process param. → Build-up index → BuildUpIndexDamp (6840)
Description	Enter damping value for build-up index. Damping value: <ul style="list-style-type: none"> ■ 0 = minimum damping ■ 15 = maximum damping The damping value should only be increased if the measured value is unstable.
User entry	0 to 15
Factory setting	0

Build-up index

Navigation	Expert → Sensor → Process param. → Build-up index → Build-up index (12111)
Description	Shows current build-up index value.
User interface	0.0 to 100.0 %
Factory setting	0.0 %
Additional information	The formation of build-up is output as a percentage in the Build-up index value (→ 83) parameter. The higher the percentage, the thicker the build-up.

Build-up index value (→ 83) = 0%

- No build-up present
- Measuring tube as-delivered state (initial value)
- Measuring tube was cleaned thoroughly after formation of build-up

Build-up index value (→ 83) = 100%

- Value for the maximum measurable build-up thickness
- The thickness of the build-up at 100% varies depending on the process
- A value of 100% should not be equated with a blocked measuring tube

The percentage indicated in the Build-up index value (→ 83) parameter does not provide direct information about the absolute thickness or the composition of the build-up. Therefore, to make optimum use of the build-up detection function, it is necessary to first compare the formation of build-up in the process, as known from experience, with the associated Build-up index value (→ 83). The aim is to determine the Build-up index value (→ 83) at the time the cleaning is usually performed.

On the basis of the Build-up index value (→ 83) during cleaning, it is possible to make a valid assessment of the condition inside the measuring tube and to plan the cleaning using the build-up limit and build-up detection hysteresis parameters.

In addition, conclusions about possible effects on neighboring processes can be drawn from the Build-up index value (→ 83).

Build-up limit

Navigation  Expert → Sensor → Process param. → Build-up index → Build-up limit (6466)

Description Enter limit value for the build-up index.

User entry 0 to 100 %

Factory setting 50 %

Build-up limit hysteresis

Navigation  Expert → Sensor → Process param. → Build-up index → BuildUpLimitHyst (6467)

Description Enter hysteresis for build-up limit value.


If the value for build-up detection hysteresis is higher than the Build-up limit (→ 84), the "Build-up detected" diagnostic information is not reset until the measuring tube has been cleaned and a restart has been performed.

User entry 0 to 100 %

Factory setting 20 %

"HBSI" submenu**Navigation**

Expert → Sensor → Process param. → HBSI

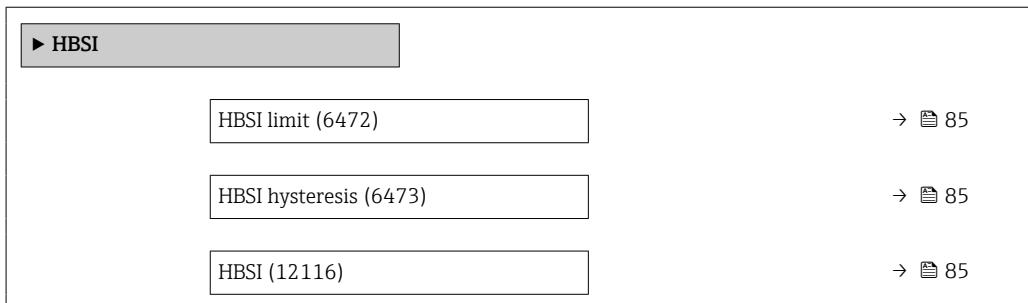**HBSI limit****Navigation**

Expert → Sensor → Process param. → HBSI → HBSI limit (6472)

Description

Enter HBSI limit value.

User entry

0 to 100 %

Factory setting

4 %

HBSI hysteresis**Navigation**

Expert → Sensor → Process param. → HBSI → HBSI hysteresis (6473)

Description

Enter hysteresis for HBSI limit value.

User entry

0 to 100 %

Factory setting

1 %

HBSI**Navigation**

Expert → Sensor → Process param. → HBSI → HBSI (12116)

Description

Displays the relative change of the entire sensor, with all its electrical, mechanical and electromechanical components incorporated in the sensor housing (including the measuring tube, electrodynamic pick-ups, excitation system, cables etc.), in % of the reference value.

User interface

-100.0 to 100.0 %

3.2.4 "External compensation" submenu

Navigation

Expert → Sensor → External comp.

► External compensation	
Density source (6615)	→ 86
Fixed density (6623)	→ 86
External density (6630)	→ 87
Temperature source (6712)	→ 87
External temperature (6673)	→ 87

Density source



Navigation

Expert → Sensor → External comp. → Density source (6615)

Description

Use this function to select the density source.

Selection

- Fixed density
- External density
- Current input 1 *
- Current input 2 *
- Current input 3 *
- Calculated value

Factory setting

Fixed density

Fixed density



Navigation

Expert → Sensor → External comp. → Fixed density (6623)

Prerequisite

The **Fixed density** option is selected in the **Density source** parameter (→ 86).

Description

Use this function to enter a fixed value for the density.

User entry

Positive floating-point number

Factory setting

Depends on country:

- 1 000 kg/m³
- 62 lb/ft³

* Visibility depends on order options or device settings

Additional information*Dependency*

The unit is taken from the **Density unit** parameter (→ 67)

External density**Navigation**

Expert → Sensor → External comp. → External density (6630)

Prerequisite

The **External density** option is selected in the **Density source** parameter (→ 86).

Description

Shows the density read from the external device.

User entry

Positive floating-point number

Factory setting

0 kg/l

Additional information*Dependency*

The unit is taken from the **Density unit** parameter (→ 67)

Temperature source**Navigation**

Expert → Sensor → External comp. → Temp. source (6712)

Description

Use this function to select the temperature source.

Selection

- Internal temperature sensor *
- Off
- External value
- Current input 1 *
- Current input 2 *
- Current input 3 *

Factory setting

Off

External temperature**Navigation**

Expert → Sensor → External comp. → External temp. (6673)

Prerequisite

The **External value** option is selected in the **Temperature source** parameter (→ 87).

Description

Shows the external process temperature read in from the external device.

User entry

Floating point number with sign

* Visibility depends on order options or device settings

Factory setting -273.15 °C


Additional information *Dependency*

 The unit is taken from the **Temperature unit** parameter (→ 65)

3.2.5 "Sensor adjustment" submenu

Navigation

 Expert → Sensor → Sensor adjustm.

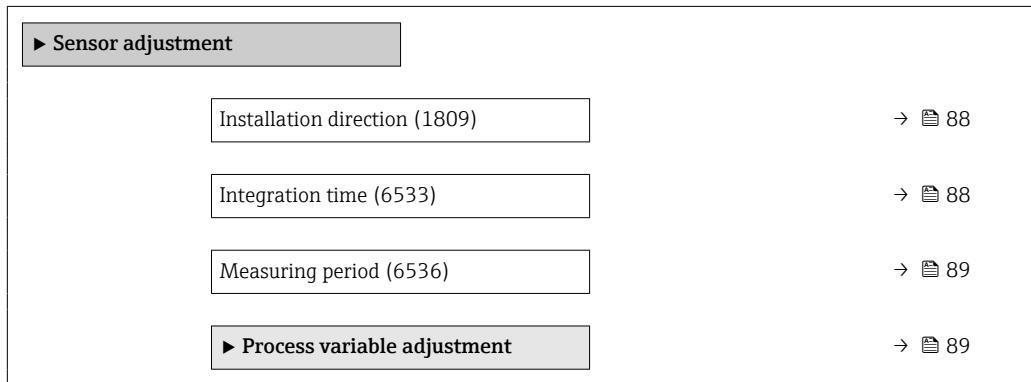

Installation direction



Navigation

 Expert → Sensor → Sensor adjustm. → Install. direct. (1809)

Description

Use this function to change the sign of the medium flow direction.

Selection

- Forward flow
- Reverse flow

Factory setting

Forward flow

Additional information

Description

 Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

Integration time



Navigation

 Expert → Sensor → Sensor adjustm. → Integration time (6533)

Description

Use this function to display the duration of the integration time.

User interface

1 to 65 ms

Factory setting Depends on country and nominal diameter

Measuring period



Navigation Expert → Sensor → Sensor adjustm. → Measuring period (6536)

Description Use this function to display the time of a full measuring period.

User interface 0 to 1 000 ms

Factory setting Depends on country and nominal diameter

"Process variable adjustment" submenu

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust

► Process variable adjustment

Volume flow offset (1831)	→ 90
Volume flow factor (1832)	→ 90
Mass flow offset (1841)	→ 90
Mass flow factor (1846)	→ 91
Conductivity offset (1848)	→ 91
Conductivity factor (1849)	→ 91
Corrected volume flow offset (1866)	→ 92
Corrected volume flow factor (1867)	→ 92
Temperature offset (1868)	→ 92
Temperature factor (1869)	→ 93
Corrected conductivity offset (1870)	→ 93
Corrected conductivity factor (1871)	→ 94

Flow velocity offset (1879)	→ 94
Flow velocity factor (1880)	→ 94

Volume flow offset



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset (1831)

Description Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.

User entry Signed floating-point number

Factory setting 0 m³/s

Additional information *Description*

Corrected value = (factor × value) + offset

Volume flow factor



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor (1832)

Description Enter quantity factor for the volume flow value.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Mass flow offset



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset (1841)

Description Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

User entry Signed floating-point number

Factory setting 0 kg/s

Additional information*Description*

Corrected value = (factor × value) + offset

**Mass flow factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor (1846)

Description

Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

**Conductivity offset****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Conduct. offset (1848)

Prerequisite

The **On** option is selected in the **Conductivity measurement** parameter (→ 73).

Description

Use this function to enter the zero point shift for the conductivity trim. The conductivity unit on which the shift is based is S/m.

User entry

Signed floating-point number

Factory setting

0 S/m

Additional information*Description*

Corrected value = (factor × value) + offset

**Conductivity factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Conduct. factor (1849)

Prerequisite

The **On** option is selected in the **Conductivity measurement** parameter (→ 73).

Description

Use this function to enter a quantity factor for the conductivity. This multiplication factor is applied over the conductivity range.

User entry

Positive floating-point number

Factory setting 1

Additional information *Description*

 Corrected value = (factor × value) + offset

Corrected volume flow offset



Navigation  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset (1866)

Description Use this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm³/s.

User entry Signed floating-point number

Factory setting 0 Nm³/s

Additional information *Description*

 Corrected value = (factor × value) + offset

Corrected volume flow factor



Navigation  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor (1867)

Description Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

 Corrected value = (factor × value) + offset

Temperature offset



Navigation  Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset (1868)

Prerequisite One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement"
or
- The temperature is read into the flowmeter from an external device.

Description	Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is 1 K.
User entry	Signed floating-point number
Factory setting	0 K
Additional information	<p><i>Description</i></p>  Corrected value = (factor × value) + offset

Temperature factor



Navigation	 Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor (1869)
Prerequisite	One of the following conditions is met: <ul style="list-style-type: none"> ■ Order code for "Sensor option", option CI "Medium temperature measurement" or ■ The temperature is read into the flowmeter from an external device.
Description	Use this function to enter a quantity factor (without time) for the temperature. This multiplication factor is applied over the temperature range.
User entry	Positive floating-point number
Factory setting	1
Additional information	<p><i>Description</i></p>  Corrected value = (factor × value) + offset

Corrected conductivity offset



Navigation	 Expert → Sensor → Sensor adjustm. → Variable adjust → Corr.cond.offset (1870)
Prerequisite	The On option is selected in the Conductivity measurement parameter (→ 73).
Description	Use this function to enter the zero point shift to trim the corrected conductivity. The conductivity unit on which the shift is based is $\mu\text{S}/\text{cm}$.
User entry	Signed floating-point number
Factory setting	0 S/m
Additional information	<p><i>Description</i></p>  Corrected value = (factor × value) + offset

Corrected conductivity factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Corr.cond.factor (1871)

Prerequisite

The **On** option is selected in the **Conductivity measurement** parameter (→ 73).

Description

Use this function to enter a quantity factor for the corrected conductivity. In each case, this factor refers to the conductivity in $\mu\text{S}/\text{cm}$.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor \times value) + offset

Flow velocity offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Flow vel. offset (1879)

Description

Use this function to enter the zero point shift for the flow velocity trim. The flow velocity unit on which the shift is based is m/s.

User entry

Signed floating-point number

Factory setting

0 m/s

Additional information*Description*

Corrected value = (factor \times value) + offset

Flow velocity factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Flow vel. factor (1880)

Description

Use this function to enter a quantity factor (without time) for the flow velocity. This multiplication factor is applied over the flow velocity range.

User entry

Positive floating-point number

Factory setting

1


Additional information*Description*

Corrected value = (factor \times value) + offset

3.2.6 "Calibration" submenu

Navigation

Expert → Sensor → Calibration

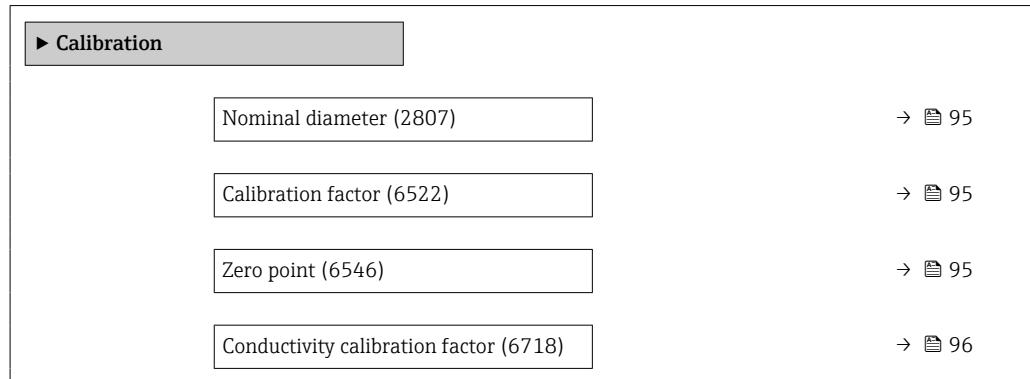

Nominal diameter

Navigation

Expert → Sensor → Calibration → Nominal diameter (2807)

Description

Displays the nominal diameter of the sensor.

User interface

DNxx / x"

Factory setting

Depends on the size of the sensor

Additional information

Description

The value is also specified on the sensor nameplate.

Calibration factor

Navigation

Expert → Sensor → Calibration → Cal. factor (6522)

Description

Displays the current calibration factor for the sensor.

User interface

Positive floating-point number

Factory setting

Depends on nominal diameter and calibration.

Zero point



Navigation

Expert → Sensor → Calibration → Zero point (6546)

Description

This function shows the zero point correction value for the sensor.

User interface	Signed floating-point number
Factory setting	Depends on nominal diameter and calibration

Conductivity calibration factor



Navigation	Expert → Sensor → Calibration → Cond. cal. fact. (6718)
Prerequisite	In the Conductivity measurement parameter (→ 73), the On option is selected.
Description	Displays the calibration factor for the conductivity measurement.
User interface	0.01 to 10 000

3.2.7 "Build-up index adjustment" wizard

Complete this wizard to adjust the reference values of the build-up index for each electrode (E1 and E2) and activate the build-up index for build-up measurement.

Navigation Expert → Sensor → BuildUpIndAdjust

► Build-up index adjustment

Prerequisites	→ 96
Progress (2808)	→ 97
Build-up index reference value E 1 (6475)	→ 97
Signal to noise ratio (6469)	→ 97
Build-up index reference value E 2 (6474)	→ 97
Signal to noise ratio (6469)	→ 97
Build-up index operating mode (6734)	→ 98

Prerequisites

Navigation	Expert → Sensor → BuildUpIndAdjust → Prerequisites
Description	The following conditions must be met before performing a build-up index adjustment.

User interface	<ul style="list-style-type: none">■ The sensor is free of build-up■ The measuring tube is completely filled
-----------------------	--

Progress

Navigation	 Expert → Sensor → BuildUpIndAdjust → Progress (2808)
-------------------	--

Description	The progress of the process is indicated.
--------------------	---

User interface	0 to 100 %
-----------------------	------------

Build-up index reference value E 1

Navigation	 Expert → Sensor → BuildUpIndAdjust → BuildUpIndRefE 1 (6475)
-------------------	--

Description	Shows the reference value 'Build-up free sensor' measured for electrode E1.
--------------------	---

User interface	0 to 1
-----------------------	--------

Signal to noise ratio

Navigation	  Expert → Sensor → BuildUpIndAdjust → SNR (6469)
-------------------	---

Description	Shows the signal to noise ratio during the measurement. A value between 1.0 - 2.0 is sufficient to excellent.
--------------------	---

User interface	Signed floating-point number
-----------------------	------------------------------

Build-up index reference value E 2

Navigation	 Expert → Sensor → BuildUpIndAdjust → BuildUpIndRefE 2 (6474)
-------------------	--

Description	Shows the reference value 'Build-up free sensor' measured for electrode E2.
--------------------	---

User interface	0 to 1
-----------------------	--------

Build-up index operating mode**Navigation**

Expert → Sensor → BuildUpIndAdjust → BuildUpIndexMode (6734)

Description


Select mode of operation for build-up index.

Selection

- Off
- Slow
- Standard
- Fast

3.3 "I/O configuration" submenu*Navigation*

Expert → I/O config.

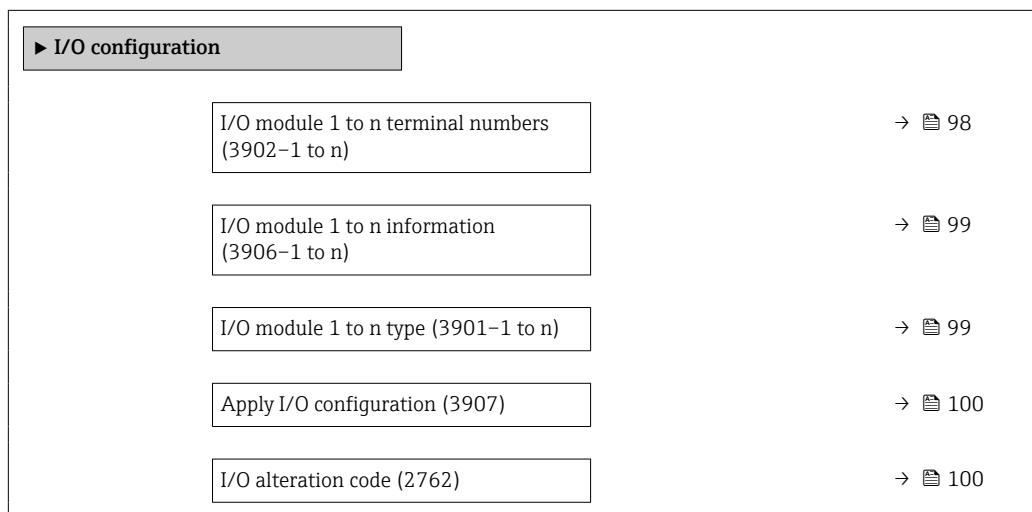**I/O module 1 to n terminal numbers****Navigation**

Expert → I/O config. → I/O 1 to n terminals (3902-1 to n)

Description

Displays the terminal numbers used by the I/O module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4)

I/O module 1 to n information

Navigation  Expert → I/O config. → I/O 1 to n info (3906-1 to n)

Description Displays information about the plugged in I/O module.

- User interface**
- Not plugged
 - Invalid
 - Not configurable
 - Configurable
 - PROFINET

Additional information *"Not plugged" option*

The I/O module is not plugged in.

"Invalid" option

The I/O module is not plugged correctly.

"Not configurable" option

The I/O module is not configurable.

"Configurable" option

The I/O module is configurable.

The I/O module is configured for .

I/O module 1 to n type

Navigation  Expert → I/O config. → I/O 1 to n type (3901-1 to n)

Prerequisite For the following order code:
"Output; input 2", option **D** "Configurable I/O initial setting off"

Description Use this function to select the I/O module type for the configuration of the I/O module.

- Selection**
- Off
 - Current output *
 - Current input *
 - Status input *
 - Pulse/frequency/switch output *
 - Double pulse output *
 - Relay output

Factory setting Off

* Visibility depends on order options or device settings

Apply I/O configuration

Navigation Expert → I/O config. → Apply I/O config (3907)

Description Use this function to activate the newly configured I/O module type.

Selection

- No
- Yes

Factory setting No

I/O alteration code

Navigation Expert → I/O config. → I/O alterat.code (2762)

Description Use this function to enter the ordered activation code to activate the I/O configuration change.

User entry Positive integer


Factory setting 0

Additional information *Description*

The I/O configuration is changed in the **I/O module type** parameter (→ 99).


3.4 "Input" submenu

Navigation Expert → Input

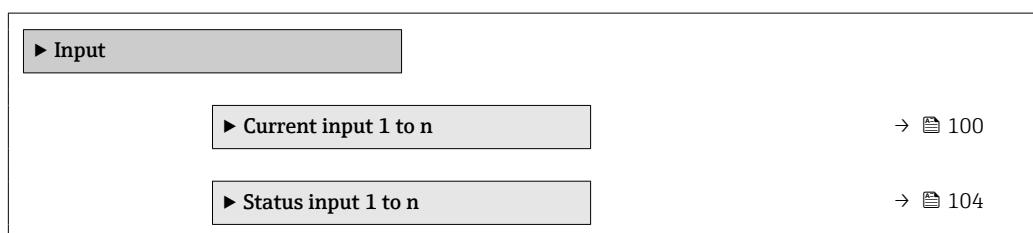

3.4.1 "Current input 1 to n" submenu

Navigation Expert → Input → Current input 1 to n

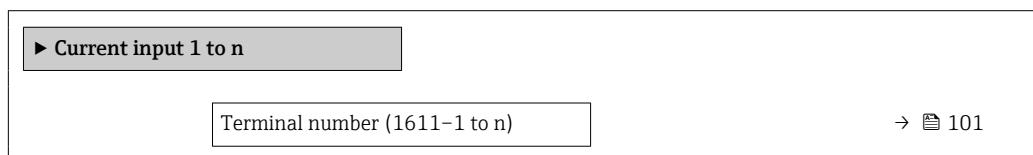

Signal mode (1610-1 to n)	→ 101
Current span (1605-1 to n)	→ 102
0/4 mA value (1606-1 to n)	→ 102
20 mA value (1607-1 to n)	→ 102
Failure mode (1601-1 to n)	→ 103
Failure value (1602-1 to n)	→ 103

Terminal number

Navigation Expert → Input → Current input 1 to n → Terminal no. (1611-1 to n)

Description Displays the terminal numbers used by the current input module.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4) *

Additional information "Not used" option
The current input module does not use any terminal numbers.

Signal mode



Navigation Expert → Input → Current input 1 to n → Signal mode (1610-1 to n)

Prerequisite The measuring device is **not** approved for use in the hazardous area with type of protection Ex-i.

Description Use this function to select the signal mode for the current input.

Selection

- Passive
- Active *

Factory setting Active

* Visibility depends on order options or device settings

Current span**Navigation**

Expert → Input → Current input 1 to n → Current span (1605–1 to n)

Description

Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

Selection

- 4...20 mA (4... 20.5 mA)
- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 0...20 mA (0... 20.5 mA)

Factory setting

Country-specific:

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)

Additional information*Examples*

Sample values for the current range: **Current span** parameter (→ 108)

0/4 mA value**Navigation**

Expert → Input → Current input 1 to n → 0/4 mA value (1606–1 to n)

Description

Use this function to enter a value for the 4 mA current.

User entry

Signed floating-point number

Factory setting

0

Additional information*Current input behavior*

The current input behaves differently depending on the settings configured in the following parameters:

- Current span (→ 102)
- Failure mode (→ 103)

Configuration examples

Pay attention to the configuration examples for **4 mA value** parameter (→ 109).

20 mA value**Navigation**

Expert → Input → Current input 1 to n → 20 mA value (1607–1 to n)

Description

Use this function to enter a value for the 20 mA current.

User entry

Signed floating-point number

Factory setting Depends on country and nominal diameter

Additional information *Configuration examples*



Pay attention to the configuration examples for **4 mA value** parameter (→ 109).

Failure mode



Navigation Expert → Input → Current input 1 to n → Failure mode (1601–1 to n)

Description Use this function to select the input behavior when measuring a current outside the configured **Current span** parameter (→ 102).

Selection

- Alarm
- Last valid value
- Defined value

Factory setting Alarm

Additional information *Options*

- Alarm
An error message is set.
- Last valid value
The last valid measured value is used.
- Defined value
A user-defined measured value is used (**Failure value** parameter (→ 103)).

Failure value



Navigation Expert → Input → Current input 1 to n → Failure value (1602–1 to n)

Prerequisite In the **Failure mode** parameter (→ 103), the **Defined value** option is selected.

Description Use this function to enter the value that the device uses if it does not receive an input signal from the external device, or if the input signal is invalid.


User entry Signed floating-point number

Factory setting 0

3.4.2 "Status input 1 to n" submenu

Navigation

Expert → Input → Status input 1 to n

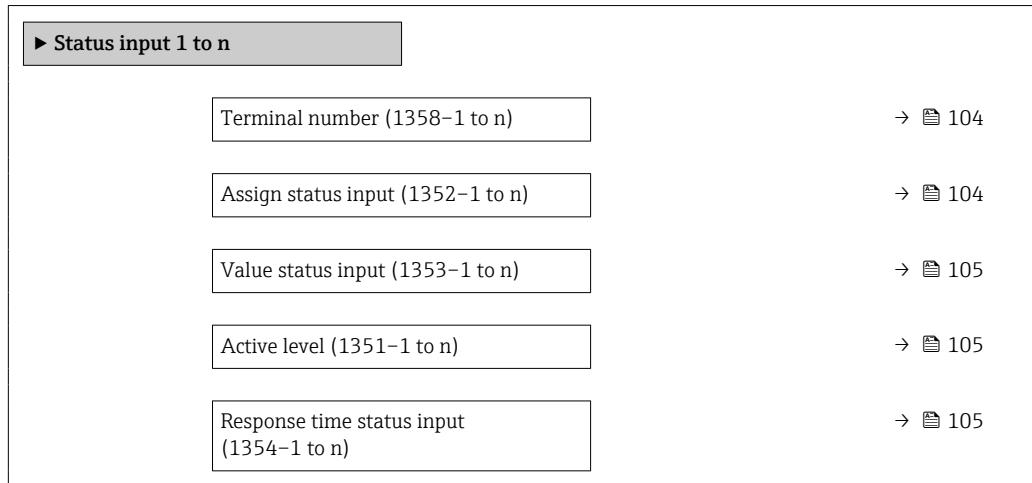

Terminal number

Navigation

Expert → Input → Status input 1 to n → Terminal no. (1358-1 to n)

Description

Displays the terminal numbers used by the status input module.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4) *

Additional information

"Not used" option

The status input module does not use any terminal numbers.

Assign status input



Navigation

Expert → Input → Status input 1 to n → Assign stat.inp. (1352-1 to n)

Description

Use this function to select the function for the status input.

Selection

- Off
- Reset totalizer 1
- Reset totalizer 2
- Reset totalizer 3
- Reset all totalizers
- Flow override
- Zero adjustment

* Visibility depends on order options or device settings

Factory setting Off

Additional information Selection

- Off
The status input is switched off.
- Reset totalizer 1...3
The individual totalizers are reset.
- Reset all totalizers
All totalizers are reset.
- Flow override
The Flow override (→ 72) is activated.



Note on the Flow override (→ 72):

- The Flow override (→ 72) is enabled as long as the level is at the status input (continuous signal).
- All other assignments react to a change in level (pulse) at the status input.

Value status input

Navigation Expert → Input → Status input 1 to n → Val.stat.inp. (1353-1 to n)

Description Displays the current input signal level.

User interface

- High
- Low

Active level



Navigation Expert → Input → Status input 1 to n → Active level (1351-1 to n)

Description Use this function to determine the input signal level at which the assigned function is activated.

Selection

- High
- Low

Factory setting High

Response time status input



Navigation Expert → Input → Status input 1 to n → Response time (1354-1 to n)

Description Use this function to enter the minimum time period for which the input signal level must be present before the selected function is activated.


User entry 5 to 200 ms

Factory setting 50 ms

3.5 "Output" submenu

Navigation


Expert → Output

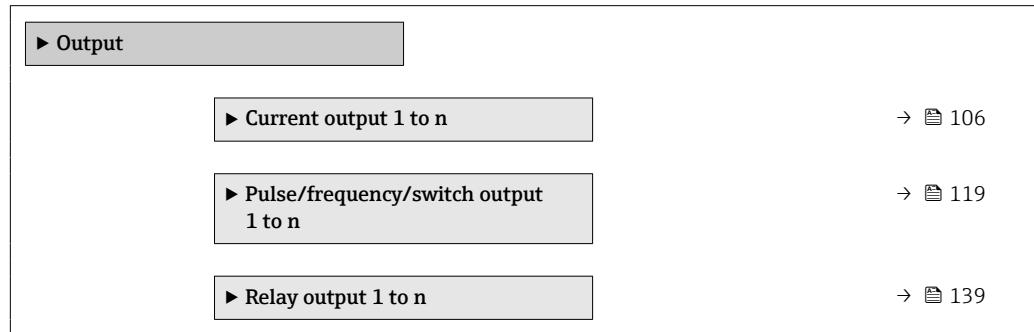

3.5.1 "Current output 1 to n" submenu

Navigation

Expert → Output → Curr.output 1 to n

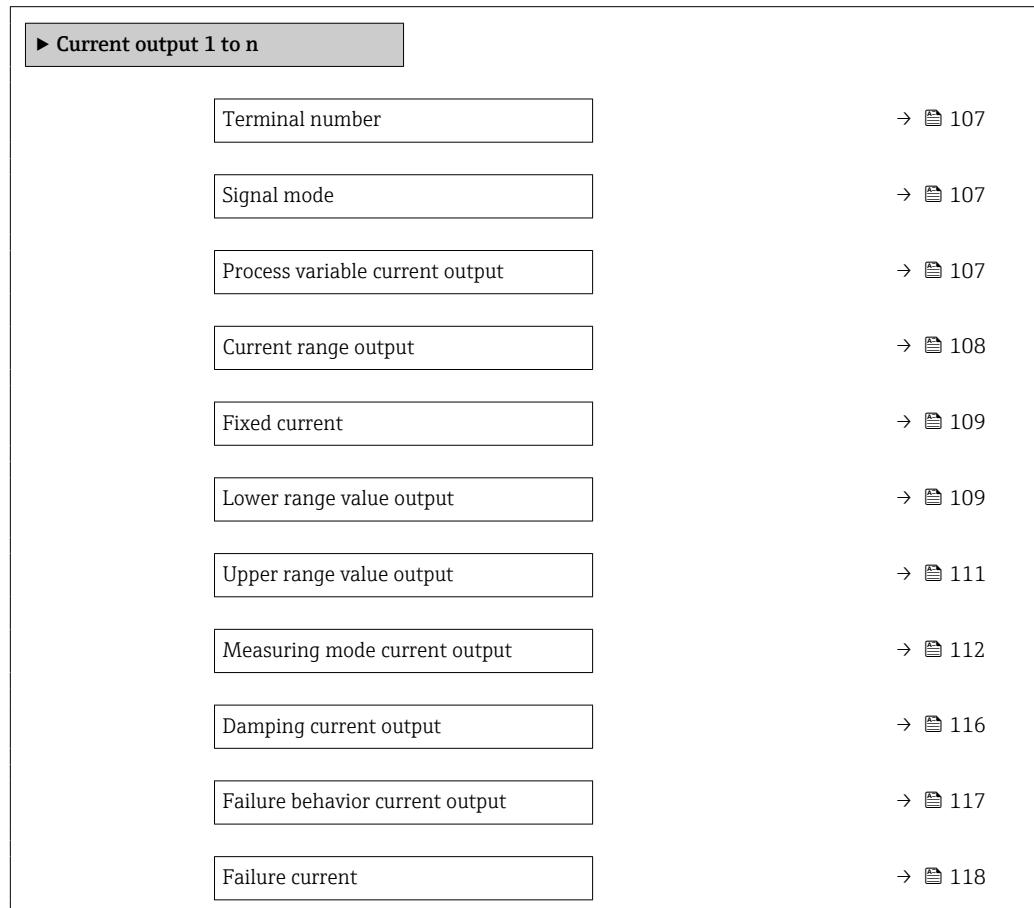

Output current	→  118
Measured current	→  119

Terminal number

Navigation	  Expert → Output → Curr.output 1 to n → Terminal no. (0379–1 to n)
Description	Displays the terminal numbers used by the current output module.
User interface	<ul style="list-style-type: none"> ■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) *
Additional information	<p><i>"Not used" option</i></p> <p>The current output module does not use any terminal numbers.</p>

Signal mode



Navigation	  Expert → Output → Curr.output 1 to n → Signal mode (0377–1 to n)
Description	Use this function to select the signal mode for the current output.
Selection	<ul style="list-style-type: none"> ■ Active * ■ Passive *
Factory setting	Active

Process variable current output



Navigation	  Expert → Output → Curr.output 1 to n → Proc.var. outp (0359–1 to n)
Description	Use this function to select a process variable for the current output.
Selection	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Flow velocity ■ Conductivity

* Visibility depends on order options or device settings

- Corrected conductivity *
- Temperature *
- Electronics temperature
- Noise *
- Coil current shot time *
- Reference electrode potential against PE *
- HBSI *
- Build-up index *
- Test point 1
- Test point 2
- Test point 3

Factory setting Volume flow

Current range output



Navigation Expert → Output → Curr.output 1 to n → Curr.range out (0353–1 to n)

Description Select current range for process value output and upper/lower level for alarm signal.

- Selection**
- 4...20 mA NE (3.8...20.5 mA)
 - 4...20 mA US (3.9...20.8 mA)
 - 4...20 mA (4... 20.5 mA)
 - 0...20 mA (0... 20.5 mA)
 - Fixed value

Factory setting Depends on country:

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)

Additional information *Description*

■ In the event of a device alarm, the current output adopts the value specified in the **Failure mode** parameter (→ [117](#)).

- If the measured value is outside the measuring range, the **△S441 Current output 1 to n** diagnostic message is displayed.
- The measuring range is specified via the **Lower range value output** parameter (→ [109](#)) and **Upper range value output** parameter (→ [111](#)).


"Fixed current" option

The current value is set via the **Fixed current** parameter (→ [109](#)).

Example

Shows the relationship between the current range for the output of the process value and the two signal on alarm levels:

* Visibility depends on order options or device settings

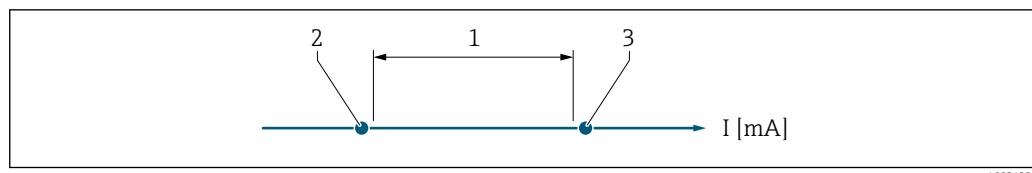

- 1 Current range for process value
 2 Lower level for signal on alarm
 3 Upper level for signal on alarm

Selection

Selection	1	2	3
4...20 mA NE (3.8...20.5 mA)	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US (3.9...20.8 mA)	3.9 to 20.8 mA US	< 3.6 mA	> 21.95 mA
4...20 mA (4... 20.5 mA)	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
0...20 mA (0... 20.5 mA)	0 to 20.5 mA	0 mA	> 21.95 mA

If the flow exceeds or falls below the upper or lower signal on alarm level, the **△S441 Current output 1 to n** diagnostic message is displayed.

Fixed current



Navigation

Expert → Output → Curr.output 1 to n → Fixed current (0365–1 to n)

Prerequisite

The **Fixed current** option is selected in the **Current span** parameter (→ 108).

Description

Use this function to enter a constant current value for the current output.

User entry

0 to 22.5 mA

Factory setting

22.5 mA

Lower range value output



Navigation

Expert → Output → Curr.output 1 to n → Low.range outp (0367–1 to n)

Prerequisite

One of the following options is selected in the **Current span** parameter (→ 108):

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to enter a value for the start of measuring range.

User entry

Signed floating-point number

Factory setting

Depends on country:

- 0 l/h
- 0 gal/min (us)

Additional information*Description*

Positive and negative values are permitted depending on the process variable assigned in the **Assign current output** parameter (→ 107). In addition, the value can be greater than or smaller than the value assigned for the 20 mA current in the **Upper range value output** parameter (→ 111).

Dependency

i The unit depends on the process variable selected in the **Assign current output** parameter (→ 107).

Current output behavior

The current output behaves differently depending on the settings configured in the following parameters:

- Current span (→ 108)
- Failure mode (→ 117)


Configuration examples

Some examples of parameter settings and their effect on the current output are given in the following section.

Configuration example A

Measurement mode with **Forward flow** option

- **Lower range value output** parameter (→ 109) = not equal to zero flow (e.g. -250 m³/h)
- **Upper range value output** parameter (→ 111) = not equal to zero flow (e.g. +750 m³/h)
- Calculated current value = 8 mA at zero flow

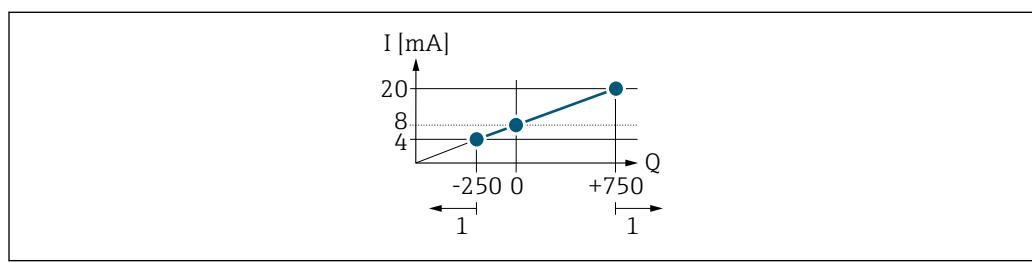


Q Flow
 I Current
 1 Measuring range is exceeded or undershot

The operational range of the measuring device is defined by the values entered for the **Lower range value output** parameter (→ 109) and **Upper range value output** parameter (→ 111). If the effective flow exceeds or falls below this operational range, the **△S441 Current output 1 to n** diagnostic message is output.

Configuration example B

Measurement mode with **Forward/Reverse flow** option

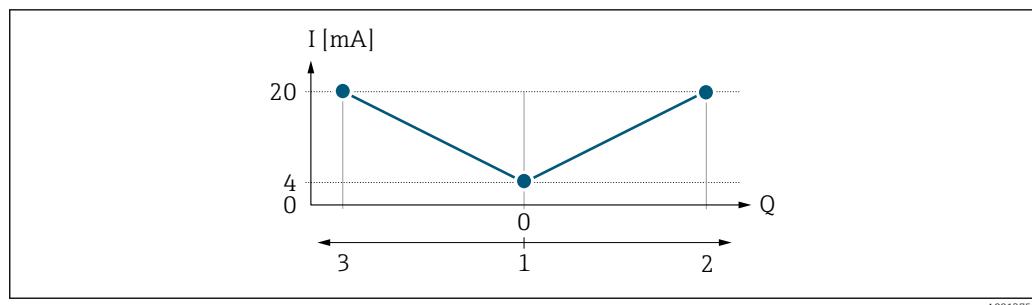

- I Current
 Q Flow
 1 Start of measuring range output (0/4 mA)
 2 Forward flow
 3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **Lower range value output** parameter (\rightarrow 109) and **Upper range value output** parameter (\rightarrow 111) must have the same algebraic sign. The value for the **Upper range value output** parameter (\rightarrow 111) (e.g. reverse flow) corresponds to the mirrored value for the **Upper range value output** parameter (\rightarrow 111) (e.g. forward flow).

Configuration example C

Measurement mode with **Reverse flow compensation** option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s \rightarrow 112.

Upper range value output



Navigation

Expert \rightarrow Output \rightarrow Curr.output 1 to n \rightarrow Upp.range outp (0372-1 to n)

Prerequisite

One of the following options is selected in the **Current span** parameter (\rightarrow 108):

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to enter a value for the end of measuring range.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter \rightarrow 229

Additional information

Description

Positive and negative values are permitted depending on the process variable assigned in the **Assign current output** parameter (\rightarrow 107). In addition, the value can be greater

than or smaller than the value assigned for the 0/4 mA current in the **Lower range value output** parameter (→ 109).

Dependency

i The unit depends on the process variable selected in the **Assign current output** parameter (→ 107).

Example

- Value assigned to 0/4 mA = -250 m³/h
- Value assigned to 20 mA = +750 m³/h
- Calculated current value = 8 mA (at zero flow)

If the **Forward/Reverse flow** option is selected in the **Measuring mode** parameter (→ 112), different algebraic signs cannot be entered for the values for the **Lower range value output** parameter (→ 109) and **Upper range value output** parameter (→ 111). The **△S441 Current output 1 to n** diagnostic message is displayed.

Configuration examples

i Pay attention to the configuration examples for the **Lower range value output** parameter (→ 109).

Measuring mode current output



Navigation

Expert → Output → Curr.output 1 to n → Meas.mode outp (0351-1 to n)

Prerequisite

One of the following options is selected in the **Assign current output** parameter (→ 107):

- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity
- Conductivity *
- Corrected conductivity *
- Temperature *
- Electronics temperature

One of the following options is selected in the **Current span** parameter (→ 108):

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to select the measuring mode for the current output.

Selection

- Forward flow
- Forward/Reverse flow *
- Reverse flow compensation

Factory setting

Forward flow

* Visibility depends on order options or device settings

Additional information*Description*


 The process variable that is assigned to the current output via the **Assign current output** parameter (→ 107) is displayed below the parameter.

"Forward flow" option

The current output signal is proportional to the process variable assigned. The measuring range is defined by the values that are assigned to the **Lower range value output** parameter (→ 109) and the **Upper range value output** parameter (→ 111).

The flow components outside the scaled measuring range are taken into account for signal output as follows:

- Both values are defined such that they are not equal to zero flow e.g.:
 - start of measuring range = $-5 \text{ m}^3/\text{h}$
 - end of measuring range = $10 \text{ m}^3/\text{h}$
- If the effective flow exceeds or falls below this measuring range, the **△S441 Current output 1 to n** diagnostic message is output.

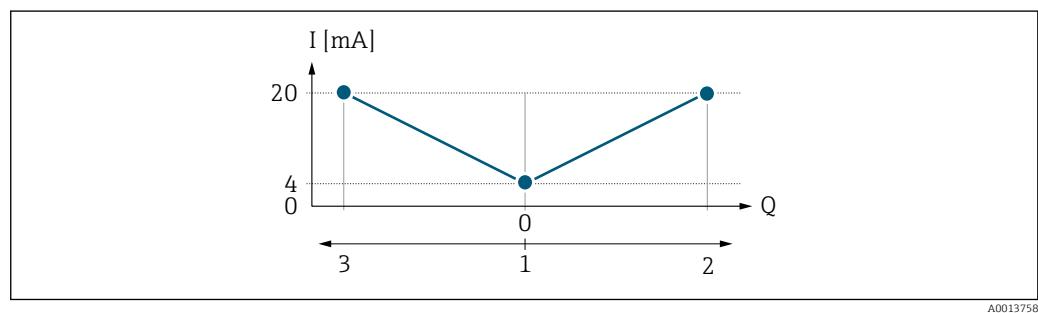"Forward/Reverse flow" option

I	Current
Q	Flow
1	Start of measuring range output (0/4 mA)
2	Forward flow
3	Reverse flow

- The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **Lower range value output** parameter (→ 109) and **Upper range value output** parameter (→ 111) must have the same algebraic sign.
- The value for the **Upper range value output** parameter (→ 111) (e.g. reverse flow) corresponds to the mirrored value for the **Upper range value output** parameter (→ 111) (e.g. forward flow).

"Reverse flow compensation" option

The **Reverse flow compensation** option is primarily used to compensate for intermittent backflow that can arise with displacement pumps due to wear or high-viscosity medium. The reverse flow is recorded in a buffer memory and offset against the next forward flow.


If buffering cannot be processed within approx. 60 s, the **△S441 Current output 1 to n** diagnostic message is displayed.

In the event of prolonged and undesired reverse flow, flow values can accumulate in the buffer memory. Due to the configuration of the current output, these values are not factored in, however, i.e. there is no compensation for the reverse flow.

If this option is set, the measuring device does not smoothen the flow signal. The flow signal is not attenuated.

*Examples of how the current output behaves***Example 1**

Defined measuring range: lower range value and upper range value with the **same** sign

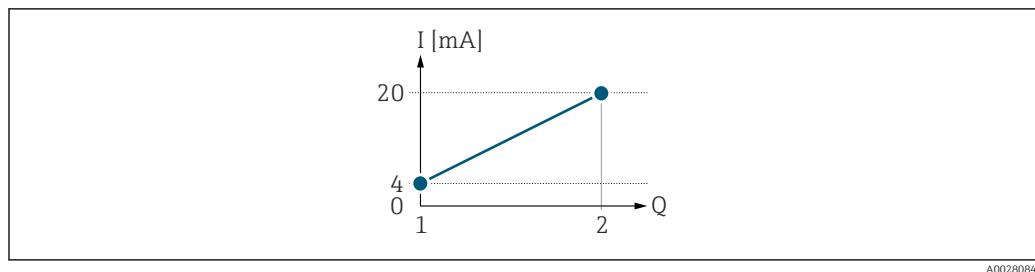

2 Measuring range


I Current

Q Flow

1 Lower range value (Start of measuring range output)

2 Upper range value (end of measuring range output)

With the following flow response:

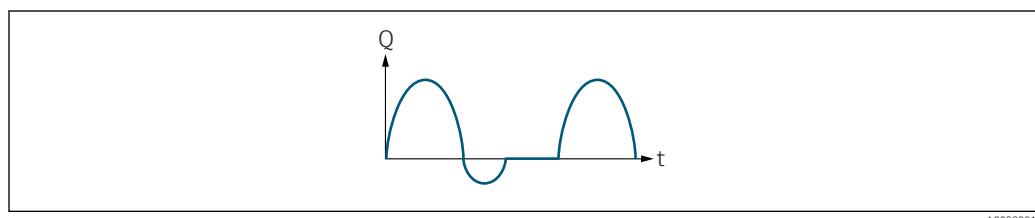


3 Flow response

Q Flow

t Time

With **Forward** flow option

The current output signal is proportional to the process variable assigned. The flow components outside the scaled measuring range are not taken into account for signal output.:

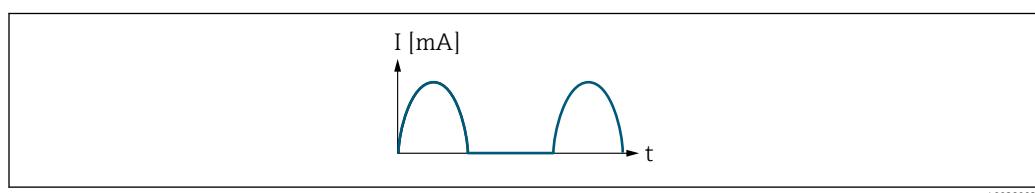


I Current

t Time

With **Forward/Reverse** flow option

The current output signal is independent of the direction of flow.

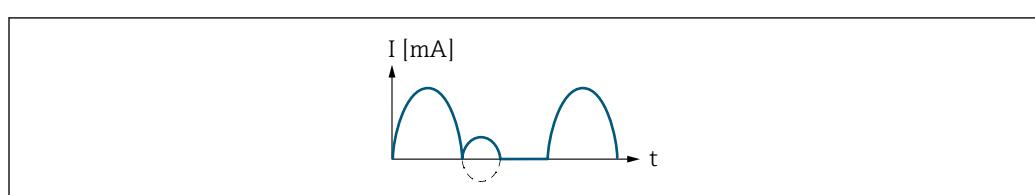


I Current

t Time

With Reverse flow compensation option


Flow components outside the measuring span are buffered, balanced and output after a maximum delay of 60 s.

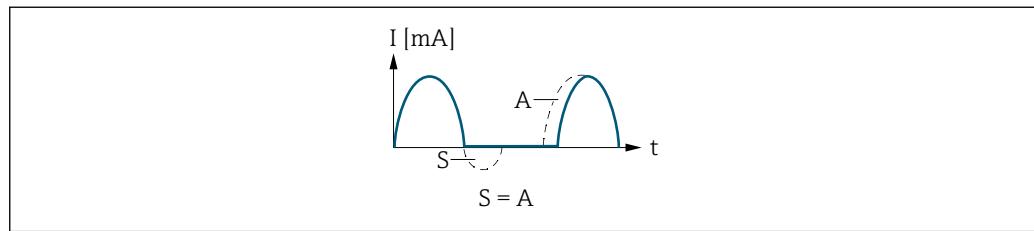

I Current
 t Time
 S Flow components saved
 A Balancing of saved flow components


Example 2

Defined measuring range: lower range value and upper range value with **different signs**

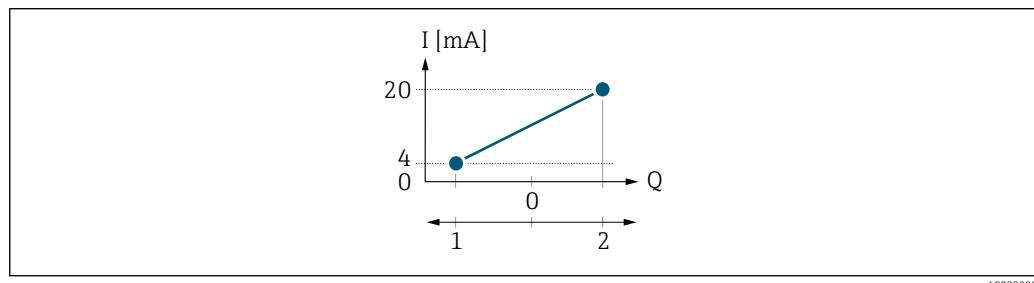

4 Measuring range
 I Current
 Q Flow
1 Lower range value (Start of measuring range output)
2 Upper range value (end of measuring range output)


With flow a (–) outside, b (---) inside the measuring range

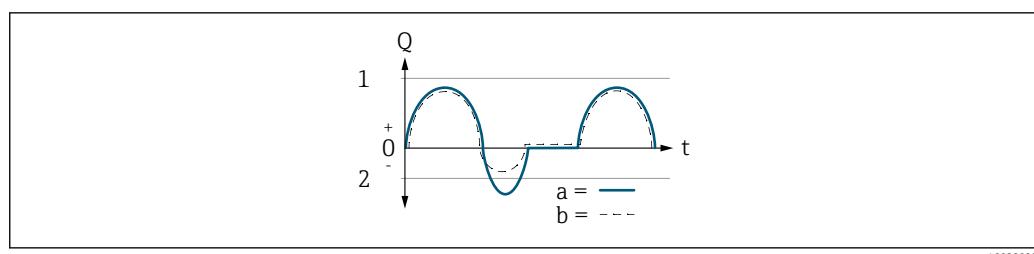

Q Flow
 t Time
1 Lower range value (Start of measuring range output)
2 Upper range value (end of measuring range output)

With Forward flow option

- a (–): The flow components outside the scaled measuring range cannot be taken into account for signal output.
The **△S441 Current output 1 to n** diagnostic message is output.
- b (---): The current output signal is proportional to the process variable assigned.

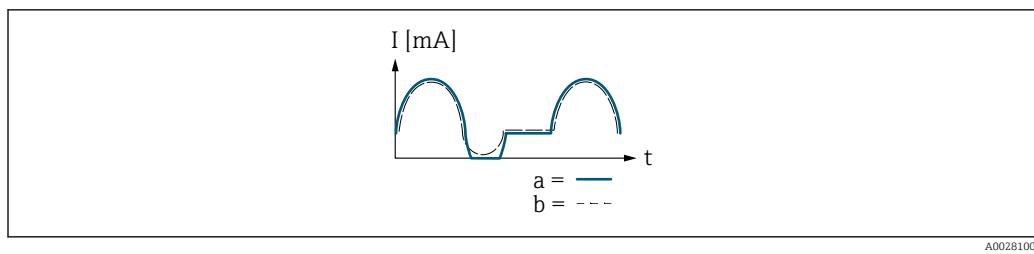

I Current
 t Time


A0028100

With Forward/Reverse flow option

This option cannot be selected here since the values for the **Lower range value output** parameter (\rightarrow 109) and **Upper range value output** parameter (\rightarrow 111) have different algebraic signs.

With Reverse flow compensation option

Flow components outside the measuring span are buffered, balanced and output after a maximum delay of 60 s.

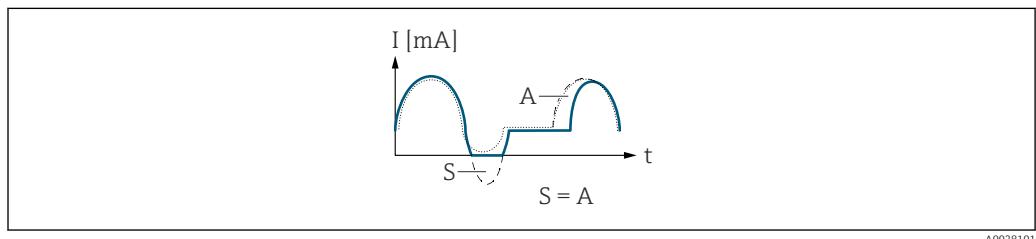

I Current
 t Time
 S Flow components saved
 A Balancing of saved flow components

A0028101

Damping current output



Navigation

Expert → Output → Curr.output 1 to n → Damp.curr.outp (0363-1 to n)

Prerequisite

A process variable is selected in the **Assign current output** parameter (\rightarrow 107) and one of the following options is selected in the **Current span** parameter (\rightarrow 108):

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to enter a time constant for the reaction time of the current output signal to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

1.0 s

Additional information*User entry*

Use this function to enter a time constant (PT1 element³⁾) for current output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.



Damping is switched off if **0** is entered (factory setting).

Failure behavior current output**Navigation**

Diagram: Expert → Output → Curr.output 1 to n → Fail.behav.out (0364–1 to n)

Prerequisite

A process variable is selected in the **Assign current output** parameter (→ 107) and one of the following options is selected in the **Current span** parameter (→ 108):

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to select the value of the current output in the event of a device alarm.

Selection

- Min.
- Max.
- Last valid value
- Actual value
- Fixed value

Factory setting

Max.

3) proportional transmission behavior with first order delay

Additional information**Description**

 This setting does not affect the failsafe mode of other outputs and totalizers. This is specified in separate parameters.

"Min." option

The current output adopts the value of the lower level for signal on alarm.

 The signal on alarm level is defined via the **Current span** parameter (→  108).

"Max." option

The current output adopts the value of the upper level for signal on alarm.

 The signal on alarm level is defined via the **Current span** parameter (→  108).

"Last valid value" option

The current output adopts the last measured value that was valid before the device alarm occurred.

"Actual value" option

The current output adopts the measured value on the basis of the current flow measurement; the device alarm is ignored.

"Defined value" option

The current output adopts a defined measured value.

 The measured value is defined via the **Failure current** parameter (→  118).

Failure current**Navigation**

  Expert → Output → Curr.output 1 to n → Fail. current (0352-1 to n)

Prerequisite

The **Defined value** option is selected in the **Failure mode** parameter (→  117).

Description

Use this function to enter a fixed value that the current output adopts in the event of a device alarm.

User entry

0 to 22.5 mA

Factory setting

22.5 mA

Output current**Navigation**

  Expert → Output → Curr.output 1 to n → Output curr. (0361-1 to n)

Description

Displays the current value currently calculated for the current output.

User interface

3.59 to 22.5 mA

Measured current

Navigation   Expert → Output → Curr.output 1 to n → Measur. curr. (0366–1 to n)

Description Displays the actual measured value of the output current.

User interface 0 to 30 mA

3.5.2 "Pulse/frequency/switch output 1 to n" submenu

Navigation

  Expert → Output → PFS output 1 to n

 Pulse/frequency/switch output 1 to n	
Terminal number (0492–1 to n)	→  120
Signal mode (0490–1 to n)	→  121
Operating mode (0469–1 to n)	→  121
Assign pulse output (0460–1 to n)	→  123
Pulse scaling (0455–1 to n)	→  123
Pulse width (0452–1 to n)	→  124
Measuring mode (0457–1 to n)	→  124
Failure mode (0480–1 to n)	→  125
Pulse output 1 to n (0456–1 to n)	→  126
Assign frequency output (0478–1 to n)	→  126
Minimum frequency value (0453–1 to n)	→  127
Maximum frequency value (0454–1 to n)	→  127
Measuring value at minimum frequency (0476–1 to n)	→  128
Measuring value at maximum frequency (0475–1 to n)	→  128

Measuring mode (0479-1 to n)	→ 128
Damping output (0477-1 to n)	→ 129
Response time (0491-1 to n)	→ 130
Failure mode (0451-1 to n)	→ 130
Failure frequency (0474-1 to n)	→ 131
Output frequency (0471-1 to n)	→ 131
Switch output function (0481-1 to n)	→ 132
Assign diagnostic behavior (0482-1 to n)	→ 132
Assign limit (0483-1 to n)	→ 133
Switch-on value (0466-1 to n)	→ 135
Switch-off value (0464-1 to n)	→ 135
Assign flow direction check (0484-1 to n)	→ 136
Assign status (0485-1 to n)	→ 136
Switch-on delay (0467-1 to n)	→ 136
Switch-off delay (0465-1 to n)	→ 137
Failure mode (0486-1 to n)	→ 137
Switch state (0461-1 to n)	→ 138
Invert output signal (0470-1 to n)	→ 138

Terminal number

Navigation

Expert → Output → PFS output 1 to n → Terminal no. (0492-1 to n)

Description


Displays the terminal numbers used by the pulse/frequency/switch output module.

User interface	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) *
Additional information	<p><i>"Not used"</i> option</p> <p>The pulse/frequency/switch output module does not use any terminal numbers.</p>

Signal mode	
Navigation	  Expert → Output → PFS output 1 to n → Signal mode (0490-1 to n)
Description	Use this function to select the signal mode for the pulse/frequency/switch output.
Selection	<ul style="list-style-type: none"> ■ Passive * ■ Active * ■ Passive NE
Factory setting	Passive

Operating mode	
Navigation	  Expert → Output → PFS output 1 to n → Operating mode (0469-1 to n)
Description	Use this function to select the operating mode of the output as a pulse, frequency or switch output.
Selection	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch
Factory setting	Pulse
Additional information	<p><i>"Pulse"</i> option</p> <p>Quantity-dependent pulse with configurable pulse width</p> <ul style="list-style-type: none"> ■ Whenever a specific mass, volume or corrected volume is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width). ■ The pulses are never shorter than the set duration. <p>Example</p> <ul style="list-style-type: none"> ■ Flow rate approx. 100 g/s ■ Pulse value 0.1 g ■ Pulse width 0.05 ms ■ Pulse rate 1 000 Impuls/s

* Visibility depends on order options or device settings

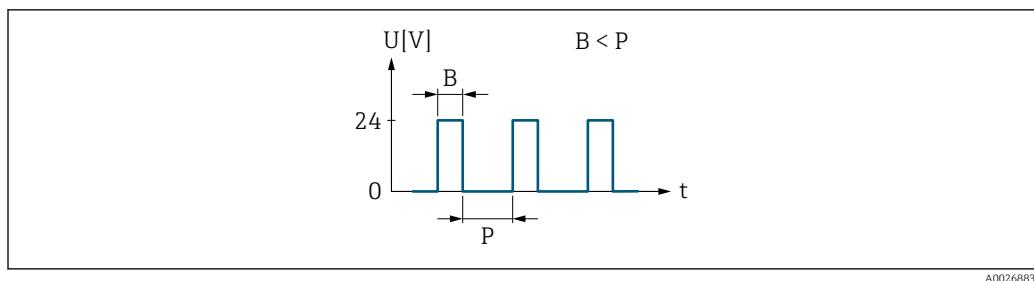

■ 5 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Frequency" option

Flow-proportional frequency output with on/off ratio of 1:1

An output frequency is output that is proportional to the value of a process variable, such as volume flow, mass flow, corrected volume flow, flow velocity, conductivity, corrected conductivity, temperature or electronics temperature.

Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1000 g/s
- Output frequency approx. 1000 Hz

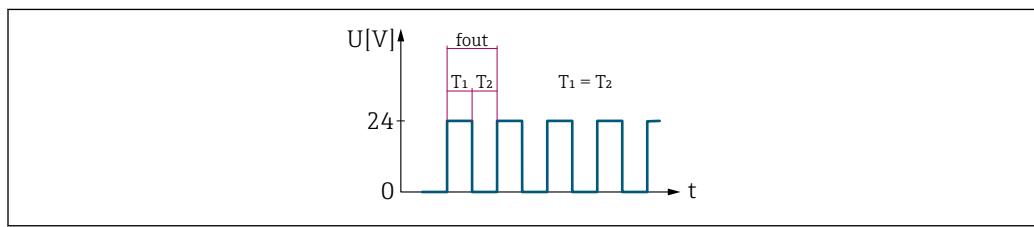


■ 6 Flow-proportional frequency output

"Switch" option

Contact for displaying a condition (e.g. alarm or warning if a limit value is reached)

Example


Alarm response without alarm

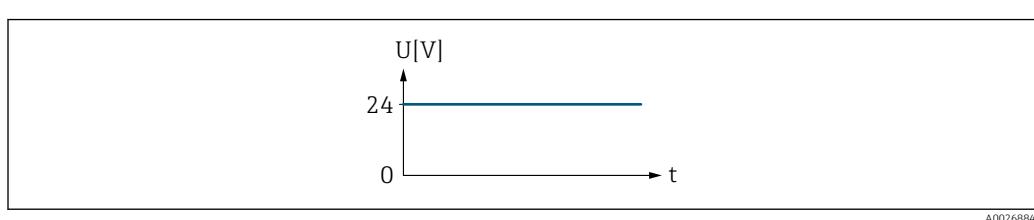

■ 7 No alarm, high level

Example

Alarm response in case of alarm

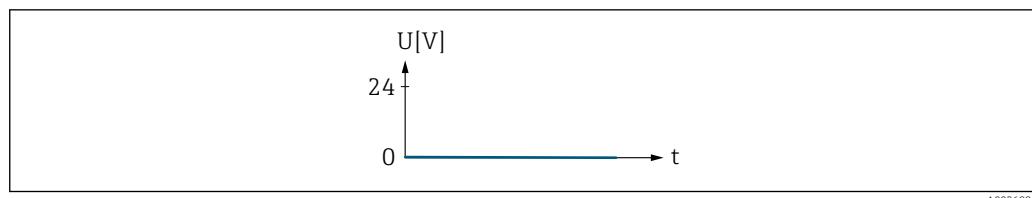

8 *Alarm, low level*

Assign pulse output



Navigation Expert → Output → PFS output 1 to n → Assign pulse (0460–1 to n)

Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→ 121).

Description Use this function to select the process variable for the pulse output.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow

Factory setting Off

Pulse scaling



Navigation Expert → Output → PFS output 1 to n → Pulse scaling (0455–1 to n)

Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→ 121) and a process variable is selected in the **Assign pulse output** parameter (→ 123).

Description Use this function to enter the value for the measured value that a pulse is equivalent to.

User entry Positive floating point number

Factory setting Depends on country and nominal diameter → 230

Additional information *User entry*

Weighting of the pulse output with a quantity.

The lower the pulse value, the

- better the resolution.
- the higher the frequency of the pulse response.

Pulse width**Navigation**

Expert → Output → PFS output 1 to n → Pulse width (0452-1 to n)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 121) and a process variable is selected in the **Assign pulse output** parameter (→ 123).

Description

Use this function to enter the duration of the output pulse.

User entry


0.05 to 2 000 ms

Factory setting

100 ms

Additional information*Description*

- Define how long a pulse is (duration).
- The maximum pulse rate is defined by $f_{\max} = 1 / (2 \times \text{pulse width})$.
- The interval between two pulses lasts at least as long as the set pulse width.
- The maximum flow is defined by $Q_{\max} = f_{\max} \times \text{pulse value}$.
- If the flow exceeds these limit values, the measuring device displays the **443 Pulse output 1 to n** diagnostic message.

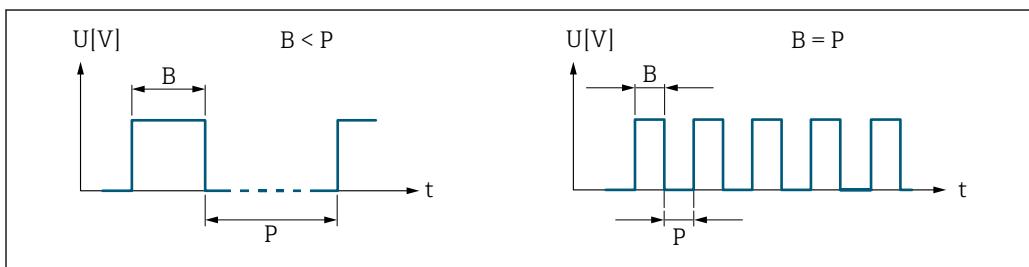

A0026882

B Pulse width entered
P Pauses between the individual pulses

Example

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{\max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{\max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

Measuring mode**Navigation**

Expert → Output → PFS output 1 to n → Measuring mode (0457-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 121), the **Pulse** option is selected, and one of the following options is selected in the **Assign pulse output** parameter (→ 123):

- Mass flow
- Volume flow
- Corrected volume flow

Description

Use this function to select the measuring mode for the pulse output.

Selection	<ul style="list-style-type: none"> ▪ Forward flow ▪ Forward/Reverse flow ▪ Reverse flow ▪ Reverse flow compensation
Factory setting	Forward flow
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Forward flow Positive flow is output, negative flow is not output. ▪ Forward/Reverse flow Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow. ▪ Reverse flow Negative flow is output, positive flow is not output. ▪ Reverse flow compensation The flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s. <p> For a detailed description of the options available, see the Measuring mode parameter (→ 112)</p> <p><i>Examples</i></p> <p> For a detailed description of the configuration examples, see the Measuring mode parameter (→ 112)</p>

Failure mode

Navigation	 Expert → Output → PFS output 1 to n → Failure mode (0480-1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 121) and a process variable is selected in the Assign pulse output parameter (→ 123).
Description	Use this function to select the failure mode of the pulse output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ No pulses
Factory setting	No pulses
Additional information	<p><i>Description</i></p> <p>The dictates of safety render it advisable to ensure that the pulse output shows a predefined behavior in the event of a device alarm.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Actual value In the event of a device alarm, the pulse output continues on the basis of the current flow measurement. The fault is ignored. ▪ No pulses In the event of a device alarm, the pulse output is "switched off". <p>NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The</p>

Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Pulse output 1 to n

Navigation Expert → Output → PFS output 1 to n → Pulse output 1 to n (0456–1 to n)


Prerequisite The **Pulse** option is selected in the **Operating mode** parameter (→ 121) parameter.

Description Displays the pulse frequency currently output.

User interface Positive floating-point number

Additional information *Description*

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

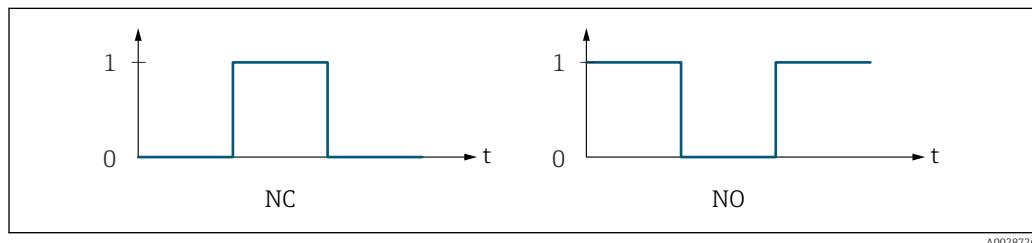

0 Non-conductive
 1 Conductive
 NC NC contact (normally closed)
 NO NO contact (normally open)

The output behavior can be reversed via the **Invert output signal** parameter (→ 138) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→ 125)) can be configured.

Assign frequency output



Navigation Expert → Output → PFS output 1 to n → Assign freq. (0478–1 to n)

Prerequisite In the **Operating mode** parameter (→ 121), the **Frequency** option is selected.

Description Use this function to select the process variable for the frequency output.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity

- Conductivity *
- Corrected conductivity *
- Temperature *
- Electronics temperature *
- Noise *
- Coil current shot time *
- Reference electrode potential against PE *
- HBSI *
- Build-up index *
- Test point 1
- Test point 2
- Test point 3

Factory setting Off

Minimum frequency value



Navigation Expert → Output → PFS output 1 to n → Min. freq. value (0453-1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 121) and a process variable is selected in the **Assign frequency output** parameter (→ 126).

Description Use this function to enter the minimum frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 0.0 Hz

Maximum frequency value



Navigation Expert → Output → PFS output 1 to n → Max. freq. value (0454-1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 121) and a process variable is selected in the **Assign frequency output** parameter (→ 126).

Description Use this function to enter the end value frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 10 000.0 Hz

* Visibility depends on order options or device settings

Measuring value at minimum frequency



Navigation

Expert → Output → PFS output 1 to n → Val. at min.freq (0476-1 to n)

Prerequisite

The **Frequency** option is selected in the **Operating mode** parameter (→ 121) and a process variable is selected in the **Assign frequency output** parameter (→ 126).

Description

Use this function to enter the measured value for the start value frequency.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information

Dependency

The entry depends on the process variable selected in the **Assign frequency output** parameter (→ 126).

Measuring value at maximum frequency



Navigation

Expert → Output → PFS output 1 to n → Val. at max.freq (0475-1 to n)

Prerequisite

The **Frequency** option is selected in the **Operating mode** parameter (→ 121) and a process variable is selected in the **Assign frequency output** parameter (→ 126).

Description

Use this function to enter the measured value for the end value frequency.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information

Description

Use this function to enter the maximum measured value at the maximum frequency. The selected process variable is output as a proportional frequency.

Dependency

The entry depends on the process variable selected in the **Assign frequency output** parameter (→ 126).

Measuring mode



Navigation

Expert → Output → PFS output 1 to n → Measuring mode (0479-1 to n)

Prerequisite

One of the following options is selected in the **Assign current output** parameter (→ 107):

- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity

- Conductivity *
- Corrected conductivity *
- Temperature *
- Electronics temperature

Description Use this function to select the measuring mode for the frequency output.

Selection

- Forward flow
- Forward/Reverse flow
- Reverse flow compensation

Factory setting Forward flow

Additional information *Selection*

 For a detailed description of the options available, see the **Measuring mode** parameter (→ 112)

Examples

 For a detailed description of the configuration examples, see the **Measuring mode** parameter (→ 112)

Damping output



Navigation  Expert → Output → PFS output 1 to n → Damping out. (0477-1 to n)

Prerequisite One of the following options is selected in the **Assign current output** parameter (→ 107):

- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity
- Conductivity *
- Corrected conductivity *
- Temperature *
- Electronics temperature

Description Use this function to enter a time constant for the reaction time of the output signal to fluctuations in the measured value.

User entry 0 to 999.9 s

Factory setting 0.0 s

* Visibility depends on order options or device settings

Additional information*User entry*

Use this function to enter a time constant (PT1 element⁴⁾) for frequency output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.

 Damping is switched off if **0** is entered (factory setting).

The frequency output is subject to separate damping that is independent of all preceding time constants.

Response time**Navigation**

 Expert → Output → PFS output 1 to n → Response time (0491–1 to n)

Prerequisite

One of the following options is selected in the **Assign current output** parameter (→ [107](#)):

- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity
- Conductivity *
- Corrected conductivity *
- Temperature *
- Electronics temperature

Description

Displays the response time. This specifies how quickly the pulse/frequency/switch output reaches the measured value change of 63 % of 100 % of the measured value change.

User interface

Positive floating-point number

Additional information*Description*

 The response time is made up of the time specified for the following dampings:

- Damping of pulse/frequency/switch output → [116](#) and
- Depending on the measured variable assigned to the output.
Flow damping

Failure mode**Navigation**

 Expert → Output → PFS output 1 to n → Failure mode (0451–1 to n)

Prerequisite

The **Frequency** option is selected in the **Operating mode** parameter (→ [121](#)) and a process variable is selected in the **Assign frequency output** parameter (→ [126](#)).

⁴⁾ proportional transmission behavior with first order delay

* Visibility depends on order options or device settings

Description	Use this function to select the failure mode of the frequency output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ Defined value ▪ 0 Hz
Factory setting	0 Hz
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Actual value In the event of a device alarm, the frequency output continues on the basis of the current flow measurement. The device alarm is ignored. ▪ Defined value In the event of a device alarm, the frequency output continues on the basis of a predefined value. The Failure frequency (→ 131) replaces the current measured value, making it possible to bypass the device alarm. The actual measurement is switched off for the duration of the device alarm. ▪ 0 Hz In the event of a device alarm, the frequency output is "switched off". <p>NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.</p>

Failure frequency



Navigation	Expert → Output → PFS output 1 to n → Failure freq. (0474-1 to n)
Prerequisite	In the Operating mode parameter (→ 121), the Frequency option is selected, in the Assign frequency output parameter (→ 126) a process variable is selected, and in the Failure mode parameter (→ 130), the Defined value option is selected.
Description	Use this function to enter the value for the frequency output in the event of a device alarm in order to bypass the alarm.
User entry	0.0 to 12 500.0 Hz
Factory setting	0.0 Hz

Output frequency

Navigation	Expert → Output → PFS output 1 to n → Output freq. (0471-1 to n)
Prerequisite	In the Operating mode parameter (→ 121), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Switch output function



Navigation Expert → Output → PFS output 1 to n → Switch out funct (0481-1 to n)

Prerequisite The **Switch** option is selected in the **Operating mode** parameter (→ [121](#)).

Description Use this function to select a function for the switch output.

Selection

- Off
- On
- Diagnostic behavior
- Limit
- Flow direction check
- Status

Factory setting Off

Additional information *Selection*

- Off
The switch output is permanently switched off (open, non-conductive).
- On
The switch output is permanently switched on (closed, conductive).
- Diagnostic behavior
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Flow direction check
Indicates the flow direction (forward or reverse flow).
- Status
Displays the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign diagnostic behavior



Navigation Expert → Output → PFS output 1 to n → Assign diag. beh (0482-1 to n)

Prerequisite

- In the **Operating mode** parameter (→ [121](#)), the **Switch** option is selected.
- In the **Switch output function** parameter (→ [132](#)), the **Diagnostic behavior** option is selected.

Description Use this function to select the diagnostic event category that is displayed for the switch output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting Alarm

Additional information*Description*

If no diagnostic event is pending, the switch output is closed and conductive.

Selection

- Alarm
The switch output signals only diagnostic events in the alarm category.
- Alarm or warning
The switch output signals diagnostic events in the alarm and warning category.
- Warning
The switch output signals only diagnostic events in the warning category.

Assign limit**Navigation**

Expert → Output → PFS output 1 to n → Assign limit (0483-1 to n)

Prerequisite

- In the **Operating mode** parameter (→ 121), the **Switch** option is selected.
- In the **Switch output function** parameter (→ 132), the **Limit** option is selected.

Description

Use this function to select a process variable for the limit function.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity*
- Conductivity*
- Corrected conductivity*
- Temperature*
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3

Factory setting


Volume flow

Additional information*Description*

Behavior of status output when Switch-on value > Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

* Visibility depends on order options or device settings

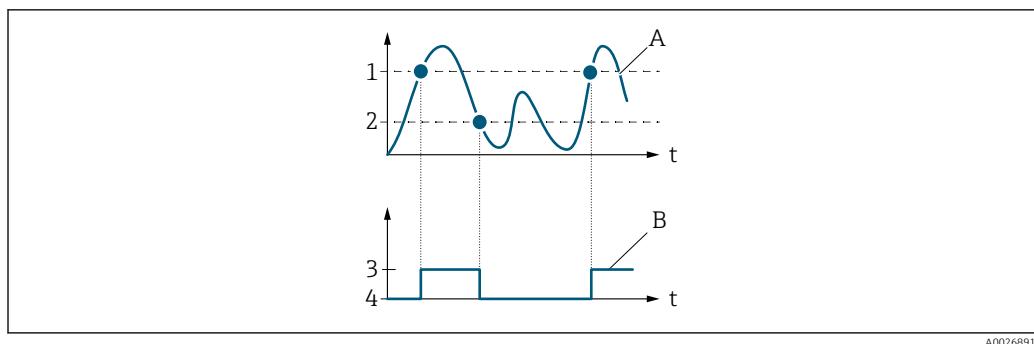


A0026891

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value < Switch-off value:

- Process variable < Switch-on value: transistor is non-conductive
- Process variable > Switch-off value: transistor is conductive

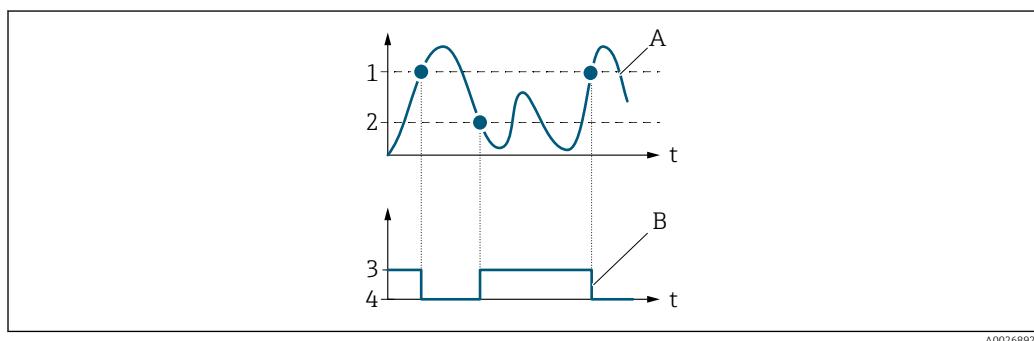


A0026892

- 1 Switch-off value
- 2 Switch-on value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value = Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

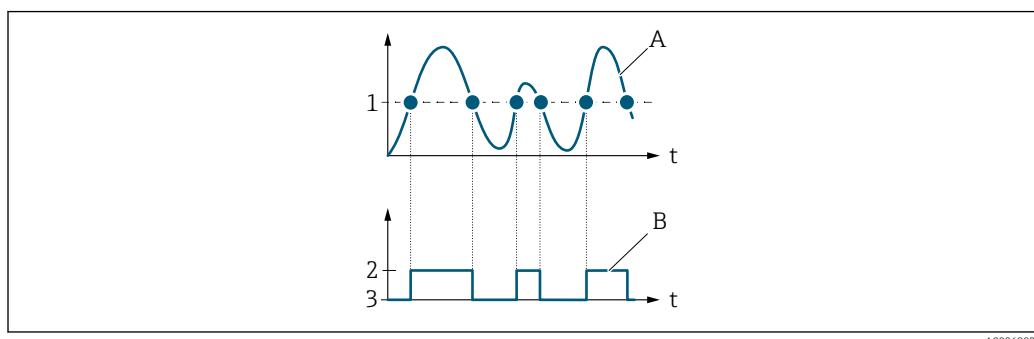

A0026893

- 1 Switch-on value = Switch-off value
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value

Navigation Expert → Output → PFS output 1 to n → Switch-on value (0466–1 to n)

Prerequisite ■ The **Switch** option is selected in the **Operating mode** parameter (→ 121).
■ The **Limit** option is selected in the **Switch output function** parameter (→ 132).

Description Use this function to enter the measured value for the switch-on point.

User entry Signed floating-point number

Factory setting Country-specific:
■ 0 l/h
■ 0 gal/min (us)

Additional information *Description*

Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit depends on the process variable selected in the **Assign limit** parameter (→ 133).

Switch-off value

Navigation Expert → Output → PFS output 1 to n → Switch-off value (0464–1 to n)

Prerequisite ■ The **Switch** option is selected in the **Operating mode** parameter (→ 121).
■ The **Limit** option is selected in the **Switch output function** parameter (→ 132).

Description Use this function to enter the measured value for the switch-off point.

User entry Signed floating-point number

Factory setting Country-specific:
■ 0 l/h
■ 0 gal/min (us)

Additional information *Description*

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit depends on the process variable selected in the **Assign limit** parameter (→ 133).

Assign flow direction check**Navigation**

Expert → Output → PFS output 1 to n → Assign dir.check (0484-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [121](#)).
- The **Flow direction check** option is selected in the **Switch output function** parameter (→ [132](#)).

Description

Use this function to select a process variable for monitoring the flow direction.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow

Factory setting

Volume flow

Assign status**Navigation**

Expert → Output → PFS output 1 to n → Assign status (0485-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [121](#)).
- The **Status** option is selected in the **Switch output function** parameter (→ [132](#)).

Description

Use this function to select a device status for the switch output.

Selection

- Empty pipe detection
- Low flow cut off
- Binary output *
- Binary output *
- Binary output *
- Build-up index *
- HBSI limit exceeded *

Factory setting

Empty pipe detection

Additional information*Selection*

If empty pipe detection or low flow cut off are active, the output is conductive. Otherwise, the switch output is non-conductive.

Switch-on delay**Navigation**

Expert → Output → PFS output 1 to n → Switch-on delay (0467-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [121](#)).
- The **Limit** option is selected in the **Switch output function** parameter (→ [132](#)).

* Visibility depends on order options or device settings

Description	Use this function to enter a delay time for switching on the switch output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Switch-off delay

Navigation Expert → Output → PFS output 1 to n → Switch-off delay (0465–1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 121).
- The **Limit** option is selected in the **Switch output function** parameter (→ 132).

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Failure mode

Navigation Expert → Output → PFS output 1 to n → Failure mode (0486–1 to n)

Description Use this function to select a failsafe mode for the switch output in the event of a device alarm.

Selection

- Actual status
- Open
- Closed

Factory setting Open

Additional information *Options*

- Actual status
In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the switch output. The **Actual status** option behaves in the same way as the current input value.
- Open
In the event of a device alarm, the switch output's transistor is set to **non-conductive**.
- Closed
In the event of a device alarm, the switch output's transistor is set to **conductive**.

Switch state

Navigation

  Expert → Output → PFS output 1 to n → Switch state (0461–1 to n)

Prerequisite

The **Switch** option is selected in the **Operating mode** parameter (→ [121](#)).

Description

Displays the current switch status of the status output.

User interface

- Open
- Closed

Additional information

User interface

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

Invert output signal



Navigation

  Expert → Output → PFS output 1 to n → Invert outp.sig. (0470–1 to n)

Description

Use this function to select whether to invert the output signal.

Selection

- No
- Yes


Factory setting

No

Additional information


Selection

No option (passive - negative)

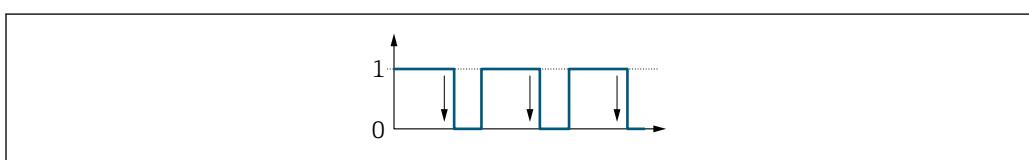

A0026693

Yes option (passive - positive)

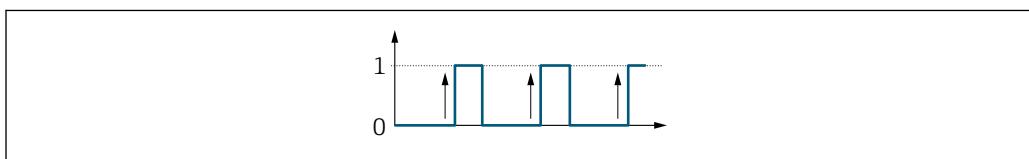

A0026692

3.5.3 "Relay output 1 to n" submenu

Navigation

Expert → Output → Relay output 1 to n

► Relay output 1 to n	
Terminal number (0812-1 to n)	→ 139
Relay output function (0804-1 to n)	→ 140
Assign flow direction check (0808-1 to n)	→ 140
Assign limit (0807-1 to n)	→ 141
Assign diagnostic behavior (0806-1 to n)	→ 141
Assign status (0805-1 to n)	→ 142
Switch-off value (0809-1 to n)	→ 142
Switch-off delay (0813-1 to n)	→ 143
Switch-on value (0810-1 to n)	→ 143
Switch-on delay (0814-1 to n)	→ 143
Failure mode (0811-1 to n)	→ 144
Switch state (0801-1 to n)	→ 144
Powerless relay status (0816-1 to n)	→ 144

Terminal number

Navigation

Expert → Output → Relay output 1 to n → Terminal no. (0812-1 to n)

Description

Displays the terminal numbers used by the relay output module.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4)

Additional information

"Not used" option

The relay output module does not use any terminal numbers.

Relay output function



Navigation Expert → Output → Relay output 1 to n → Relay outp.func. (0804–1 to n)

Description Use this function to select an output function for the relay output.

Selection

- Closed
- Open
- Diagnostic behavior
- Limit
- Flow direction check
- Status

Factory setting Closed

Additional information *Selection*

- Closed
The relay output is permanently switched on (closed, conductive).
- Open
The relay output is permanently switched off (open, non-conductive).
- Diagnostic behavior
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Flow direction check
Indicates the flow direction (forward or reverse flow).
- Digital Output
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign flow direction check



Navigation Expert → Output → Relay output 1 to n → Assign dir.check (0808–1 to n)

Prerequisite The **Flow direction check** option is selected in the **Relay output function** parameter (→ 140).

Description Use this function to select a process variable for monitoring the flow direction.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow

Factory setting Volume flow

Assign limit

Navigation Expert → Output → Relay output 1 to n → Assign limit (0807–1 to n)

Prerequisite The **Limit** option is selected in the **Relay output function** parameter (→ 140).

Description Use this function to select a process variable for the limit value function.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity*
- Conductivity*
- Corrected conductivity*
- Temperature*
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3

Factory setting Volume flow

Assign diagnostic behavior

Navigation Expert → Output → Relay output 1 to n → Assign diag. beh (0806–1 to n)

Prerequisite In the **Relay output function** parameter (→ 140), the **Diagnostic behavior** option is selected.

Description Use this function to select the category of the diagnostic events that are displayed for the relay output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting Alarm

Additional information *Description*

If no diagnostic event is pending, the relay output is closed and conductive.

Selection

- Alarm
The relay output signals only diagnostic events in the alarm category.
- Alarm or warning
The relay output signals diagnostic events in the alarm and warning category.
- Warning
The relay output signals only diagnostic events in the warning category.

* Visibility depends on order options or device settings

Assign status**Navigation**

Expert → Output → Relay output 1 to n → Assign status (0805–1 to n)

Prerequisite

In the **Relay output function** parameter (→ 140), the **Digital Output** option is selected.

Description

Use this function to select the device status for the relay output.

Selection

- Empty pipe detection
- Low flow cut off
- Binary output *
- Binary output *
- Binary output *
- HBSI limit exceeded *

Factory setting

Empty pipe detection

Switch-off value**Navigation**

Expert → Output → Relay output 1 to n → Switch-off value (0809–1 to n)

Prerequisite

In the **Relay output function** parameter (→ 140), the **Limit** option is selected.

Description

Use this function to enter the measured value for the switch-off point.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 l/h
- 0 gal(us)/min

Additional information**Description**

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit is dependent on the process variable selected in the **Assign limit** parameter (→ 141).

* Visibility depends on order options or device settings

Switch-off delay

Navigation Expert → Output → Relay output 1 to n → Switch-off delay (0813-1 to n)

Prerequisite In the **Relay output function** parameter (→ 140), the **Limit** option is selected.

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-on value

Navigation Expert → Output → Relay output 1 to n → Switch-on value (0810-1 to n)

Prerequisite The **Limit** option is selected in the **Relay output function** parameter (→ 140).

Description Use this function to enter the measured value for the switch-on point.

User entry Signed floating-point number

Factory setting Country-specific:

- 0 l/h
- 0 gal(us)/min

Additional information *Description*

Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit is dependent on the process variable selected in the **Assign limit** parameter (→ 141).

Switch-on delay

Navigation Expert → Output → Relay output 1 to n → Switch-on delay (0814-1 to n)

Prerequisite In the **Relay output function** parameter (→ 140), the **Limit** option is selected.

Description Use this function to enter a delay time for switching on the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Failure mode**Navigation**

Expert → Output → Relay output 1 to n → Failure mode (0811–1 to n)

Description

Use this function to select the failure mode of the relay output in the event of a device alarm.

Selection

- Actual status
- Open
- Closed

Factory setting

Open

Additional information*Selection*

- Actual status
In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the relay output. The **Actual status** option behaves in the same way as the current input value.
- Open
In the event of a device alarm, the relay output's transistor is set to **non-conductive**.
- Closed
In the event of a device alarm, the relay output's transistor is set to **conductive**.

Switch state**Navigation**

Expert → Output → Relay output 1 to n → Switch state (0801–1 to n)

Description

Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information*User interface*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

Powerless relay status**Navigation**

Expert → Output → Relay output 1 to n → Powerless relay (0816–1 to n)

Description

Use this function to select the quiescent state for the relay output.

Selection

- Open
- Closed

Factory setting

Open

Additional information*Selection*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

3.6 "Communication" submenu

Navigation

Expert → Communication

► Communication	
► Physical block	→ 145
► Application relation	→ 151
► WLAN settings	→ 153
► Web server	→ 163

3.6.1 "Physical block" submenu

Navigation

Expert → Communication → Physical block

► Physical block	
PROFINET device name (2071)	→ 146
Device tag (4301)	→ 147
Descriptor (4311)	→ 147
Device location (4308)	→ 147
IPv4 address (4316)	→ 147
IPv4 default gateway (4318)	→ 148
IPv4 subnet mask (4317)	→ 148
Installation date (4312)	→ 148
Serial number (4307)	→ 148
Firmware version (4304)	→ 149

Hardware version (4303)	→ 149
Last change (4315)	→ 149
Manufacturer (4305)	→ 149
Device type (4306)	→ 150
Profile (4310)	→ 150
Profile revision (4319)	→ 150
Startup settings (4313)	→ 150
Alarm delay (4314)	→ 151
Configuration counter (4309)	→ 151
Target mode (4302)	→ 151

PROFINET device name

Navigation

Expert → Communication → Physical block → PROFINET DevName (2071)

Description

Displays a unique name for the measuring point so it can be identified quickly within the plant.

User entry

Max. 240 characters such as lower-case letters or numbers

Factory setting

eh-promag500-xxxxx

Additional information*Description*

The device tag corresponds to the device name ("Name Of Station" of PROFINET specification). The device name can be adjusted via DIP switch or the automation system.

Factory setting

Structure of the device tag:

eh-promag500-xxxxx

- eh: Endress+Hauser
- promag: Instrument family
- 500: Transmitter
- xxxx: Serial number of the device

Device tag

Navigation  Expert → Communication → Physical block → Device tag (4301)

Description Enter a name for the measuring point to identify the measuring device in the plant.

User entry Character string comprising numbers, letters and special characters (32)

Factory setting

Descriptor

Navigation  Expert → Communication → Physical block → Descriptor (4311)

Description Enter a description for the measuring point.

User entry Character string comprising numbers, letters and special characters (54)

Factory setting

Device location

Navigation  Expert → Communication → Physical block → Device location (4308)

Description Enter the location of the measuring point.

User entry Character string comprising numbers, letters and special characters (22)

Factory setting

IPv4 address

Navigation  Expert → Communication → Physical block → IPv4 address (4316)

Description Shows the APL port IP address of the measuring device.

User interface Character string comprising numbers, letters and special characters

Factory setting 000.000.000.000

IPv4 default gateway

Navigation	  Expert → Communication → Physical block → IPv4 gateway (4318)
Description	Shows the IP address of the default gateway for the APL port of the measuring device.
User interface	Character string comprising numbers, letters and special characters
Factory setting	000.000.000.000

IPv4 subnet mask

Navigation	  Expert → Communication → Physical block → IPv4 subnet mask (4317)
Description	Shows the subnet mask for the APL port of the measuring device.
User interface	Character string comprising numbers, letters and special characters
Factory setting	000.000.000.000

Installation date

Navigation	  Expert → Communication → Physical block → InstallationDate (4312)
Description	Enter date, e. g. date when the device was installed or commissioned.
User entry	Character string comprising numbers, letters and special characters (16)
Factory setting	

Serial number

Navigation	  Expert → Communication → Physical block → Serial number (4307)
Description	Shows the serial number of the measuring device.
User interface	Character string comprising numbers, letters and special characters
Factory setting	

Firmware version

Navigation	 Expert → Communication → Physical block → Firmware version (4304)
Description	Shows the device firmware version installed.
User interface	Character string comprising numbers, letters and special characters
Factory setting	00.00.00

Hardware version

Navigation	 Expert → Communication → Physical block → Hardware version (4303)
Description	Shows the hardware version of the measuring device.
User interface	Character string comprising numbers, letters and special characters
Factory setting	00.00.00

Last change

Navigation	 Expert → Communication → Physical block → Last change (4315)
Description	Enter the date when static parameters (e.g. configuration parameters) were last changed.
User entry	Character string comprising numbers, letters and special characters (16)
Factory setting	

Manufacturer

Navigation	 Expert → Communication → Physical block → Manufacturer (4305)
Description	Shows the manufacturer of the measuring device.
User interface	0 to 65 535
Factory setting	17

Device type

Navigation   Expert → Communication → Physical block → Device type (4306)

Description Shows the device type assigned by the manufacturer to the measuring device.

User interface Character string comprising numbers, letters and special characters

Factory setting Promag 300 500

Profile

Navigation   Expert → Communication → Physical block → Profile (4310)

Description Shows the profile ID of the PA profile.

User interface 0 to 65 535

Factory setting 38656

Profile revision

Navigation   Expert → Communication → Physical block → Profile revision (4319)

User interface 0 to 65 535

Factory setting 1026

Startup settings

Navigation   Expert → Communication → Physical block → Startup settings (4313)

Description Indicates which configuration settings (factory settings unless otherwise specified by the controller) are applied on startup.

Selection

- None applied
- Only units applied
- All applied

Factory setting None applied

Alarm delay

Navigation  Expert → Communication → Physical block → Alarm delay (4314)

Description Enter a delay to suppress momentarily pending diagnostic messages.

User entry 0 to 60

Factory setting 0

Configuration counter

Navigation  Expert → Communication → Physical block → Config. counter (4309)

Description Shows the number of changes made to static parameters (e.g. configuration parameters).

User interface 0 to 65 535

Factory setting 0

Target mode

Navigation  Expert → Communication → Physical block → Target mode (4302)

Description Select the target mode. The selected mode applies to all output function blocks.

Selection

- Automatic
- Out of service

Factory setting Automatic

3.6.2 "Application relation" submenu

Navigation  Expert → Communication → Application relat.

 Application relation	
AR state (2088)	→  152
MAC address IO controller (2093)	→  152
MAC address backup IO controller (2095)	→  152

IP address IO controller (2094)	→ 152
IP address backup IO controller (2096)	→ 153

AR state

Navigation  Expert → Communication → Applicat. relat. → AR state (2088)

Description Displays whether an active AR (Application Relation) connection has been established.

User interface

- Active
- Not active
- Redundancy 1AR active
- Redundancy 2AR active

Factory setting Not active

MAC address IO controller

Navigation  Expert → Communication → Applicat. relat. → MAC IO contr. (2093)

Description Shows the MAC address of the only or of the primary IO controller.

User interface Character string comprising numbers, letters and special characters

Factory setting 0x00

MAC address backup IO controller

Navigation  Expert → Communication → Applicat. relat. → MAC backup IO c. (2095)

Description Shows the MAC address of the backup IO controller.

User interface Character string comprising numbers, letters and special characters

Factory setting 0x00

IP address IO controller

Navigation  Expert → Communication → Applicat. relat. → IP IO controller (2094)

Description Shows the IP address of the only or of the primary IO controller.

User interface Character string comprising numbers, letters and special characters

Factory setting 0x00

IP address backup IO controller

Navigation  Expert → Communication → Applicat. relat. → IP backup IO c. (2096)

Description Shows the IP address of the backup IO controller.

User interface Character string comprising numbers, letters and special characters

Factory setting 0x00

3.6.3 "WLAN settings" wizard

Navigation  Expert → Communication → WLAN settings

 WLAN settings	
WLAN (2702)	→  154
WLAN mode (2717)	→  154
SSID name (2714)	→  155
Network security (2705)	→  155
Security identification (2718)	→  156
User name (2715)	→  156
WLAN password (2716)	→  156
WLAN IP address (2711)	→  156
WLAN MAC address (2703)	→  157
WLAN subnet mask (2709)	→  157
WLAN MAC address (2703)	→  157
WLAN passphrase (2706)	→  157
WLAN MAC address (2703)	→  157

Assign SSID name (2708)	→ 158
SSID name (2707)	→ 158
2.4 GHz WLAN channel (2704)	→ 158
Select antenna (2713)	→ 159
Connection state (2722)	→ 159
Received signal strength (2721)	→ 159
WLAN IP address (2711)	→ 156
Gateway IP address (2719)	→ 159
IP address domain name server (2720)	→ 160

WLAN



Navigation

Expert → Communication → WLAN settings → WLAN (2702)

Description

Use this function to enable and disable the WLAN connection.

Selection

- Disable
- Enable

Factory setting

Enable

WLAN mode



Navigation

Expert → Communication → WLAN settings → WLAN mode (2717)

Description

Use this function to select the WLAN mode.

Selection

- WLAN access point
- WLAN Client

Factory setting

WLAN access point

SSID name

Navigation Expert → Communication → WLAN settings → SSID name (2714)

Prerequisite The client is activated.

Description Use this function to enter the user-defined SSID name (max. 32 characters) of the WLAN network.

User entry –

Factory setting –

Network security

Navigation Expert → Communication → WLAN settings → Network security (2705)

Description Use this function to select the type of security for the WLAN interface.

Selection

- Unsecured
- WPA2-PSK
- EAP-PEAP with MSCHAPv2 *
- EAP-PEAP MSCHAPv2 no server authentic. *
- EAP-TLS *

Factory setting WPA2-PSK

Additional information *Selection*

- Unsecured
Access the WLAN connection without identification.
- WPA2-PSK
Access the WLAN connection with a network key.
- EAP-PEAP with MSCHAPv2
Access the WLAN connection with a password-based authentication protocol.
- EAP-PEAP MSCHAPv2 no server authentic.
Access the WLAN connection with a password-based protocol without server authentication.
- EAP-TLS
Access the WLAN connection with a certificate-based, two-way authentication of the client and network.

* Visibility depends on order options or device settings

Security identification

Navigation	  Expert → Communication → WLAN settings → Sec. identific. (2718)
Description	Use this function to select the security settings (download via the menu: Data Management > Security > Download WLAN).
User interface	<ul style="list-style-type: none">▪ Trusted issuer certificate▪ Device certificate▪ Device private key

User name



Navigation	  Expert → Communication → WLAN settings → User name (2715)
Description	Use this function to enter the username of the WLAN network.
User entry	–
Factory setting	–

WLAN password



Navigation	  Expert → Communication → WLAN settings → WLAN password (2716)
Description	Use this function to enter the WLAN password for the WLAN network.
User entry	–
Factory setting	–

WLAN IP address



Navigation	  Expert → Communication → WLAN settings → WLAN IP address (2711)
Description	Use this function to enter the IP address of the measuring device's WLAN connection.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	192.168.1.212

WLAN MAC address

Navigation	 Expert → Communication → WLAN settings → WLAN MAC address (2703)
Description	Displays the MAC ⁵⁾ address of the measuring device.
User interface	Unique 12-digit character string comprising letters and numbers
Factory setting	Each measuring device is given an individual address.
Additional information	<i>Example</i> For the display format 00:07:05:10:01:5F

WLAN subnet mask



Navigation	 Expert → Communication → WLAN settings → WLAN subnet mask (2709)
Description	Use this function to enter the subnet mask.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	255.255.255.0

WLAN passphrase



Navigation	 Expert → Communication → WLAN settings → WLAN passphrase (2706)
Prerequisite	The WPA2-PSK option is selected in the Security type parameter (→  155).
Description	Use this function to enter the network key.
User entry	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)
Factory setting	Serial number of the measuring device (e.g. L100A802000)

5) Media Access Control

Assign SSID name

Navigation Expert → Communication → WLAN settings → Assign SSID name (2708)

Description Use this function to select which name is used for the SSID⁶⁾.

Selection

- Device tag
- User-defined

Factory setting User-defined

Additional information *Selection*

- Device tag
The device tag name is used as the SSID.
- User-defined
A user-defined name is used as the SSID.

SSID name

Navigation Expert → Communication → WLAN settings → SSID name (2707)

Prerequisite

- The **User-defined** option is selected in the **Assign SSID name** parameter (→ 158).
- The **WLAN access point** option is selected in the **WLAN mode** parameter (→ 154).

Description Use this function to enter a user-defined SSID name.

User entry Max. 32-digit character string comprising numbers, letters and special characters

Factory setting EH_device designation_last 7 digits of the serial number (e.g.
EH_Promag_500_A802000)

2.4 GHz WLAN channel

Navigation Expert → Communication → WLAN settings → WLAN channel (2704)

Description Use this function to enter the 2.4 GHz WLAN channel.

User entry 1 to 11

Factory setting 6

Additional information *Description*

- It is only necessary to enter a 2.4 GHz WLAN channel if multiple WLAN devices are in use.
- If just one measuring device is in use, it is recommended to keep the factory setting.

Select antenna

Navigation Expert → Communication → WLAN settings → Select antenna (2713)

Description Use this function to select whether the external or internal antenna is used for reception.

Selection

- External antenna
- Internal antenna

Factory setting Internal antenna

Connection state

Navigation Expert → Communication → WLAN settings → Connection state (2722)

Description The connection status is displayed.

User interface

- Connected
- Not connected

Factory setting Not connected

Received signal strength

Navigation Expert → Communication → WLAN settings → Rec.sig.strength (2721)

Description Displays the signal strength received.

User interface

- Low
- Medium
- High

Factory setting High

Gateway IP address

Navigation Expert → Communication → WLAN settings → Gateway IP addr. (2719)

Description Use this function to enter the IP address of the gateway.

User interface Character string comprising numbers, letters and special characters


Factory setting 192.168.1.212

IP address domain name server

Navigation	  Expert → Communication → WLAN settings → IP address DNS (2720)
Description	Use this function to enter the IP address of the domain name server.
User interface	Character string comprising numbers, letters and special characters
Factory setting	192.168.1.212

3.6.4 "APL port" submenu

Navigation   Setup → Communication → APL port

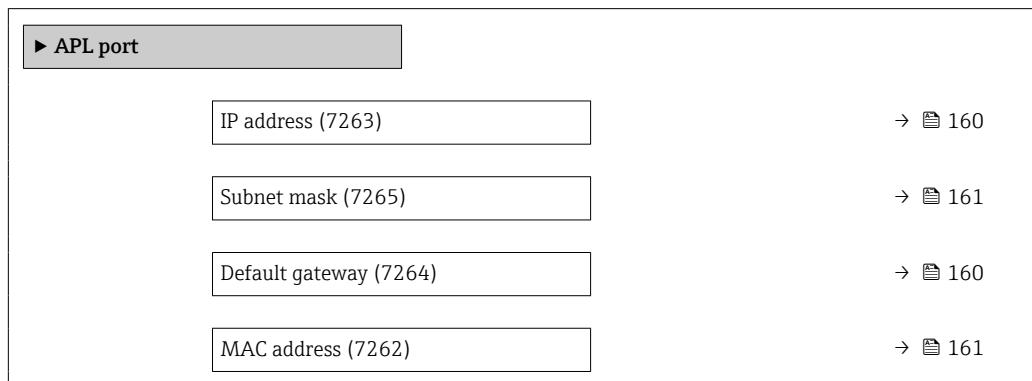

IP address 

Navigation	  Setup → Communication → APL port → IP address (7263)
Description	Enter the IP address of the measuring device.
User entry	Character string comprising numbers, letters and special characters (15)
Factory setting	0.0.0.0

Default gateway 

Navigation	  Setup → Communication → APL port → Default gateway (7264)
Description	Enter IP address for the default gateway of the measuring device.
User entry	Character string comprising numbers, letters and special characters (15)

Factory setting 0.0.0.0

Subnet mask

Navigation Setup → Communication → APL port → Subnet mask (7265)

Description Enter subnet mask of the measuring device.

User entry Character string comprising numbers, letters and special characters (15)

Factory setting 255.255.255.0

MAC address

Navigation Setup → Communication → APL port → MAC Address (7262)

Description Shows the MAC address of the measuring device.

User interface Character string comprising numbers, letters and special characters

Factory setting

3.6.5 "Service interface" submenu

Navigation Setup → Communication → ServiceInterface

Service interface	
IP address (7209)	→ 162
Subnet mask (7211)	→ 162
Default gateway (7210)	→ 162
MAC address (7214)	→ 162

IP address**Navigation**

Setup → Communication → ServiceInterface → IP address (7209)

Description

Display or enter the IP address of the Web server integrated in the measuring device.

User entry

4 octet: 0 to 255 (in the particular octet)

Factory setting

192.168.1.212

Subnet mask**Navigation**

Setup → Communication → ServiceInterface → Subnet mask (7211)

Description

Display or enter the subnet mask.

User entry

4 octet: 0 to 255 (in the particular octet)

Factory setting

255.255.255.0

Default gateway**Navigation**

Setup → Communication → ServiceInterface → Default gateway (7210)

Description

Display or enter the Default gateway (→ 162).

User entry

4 octet: 0 to 255 (in the particular octet)

Factory setting

0.0.0.0

MAC address**Navigation**

Setup → Communication → ServiceInterface → MAC Address (7214)

DescriptionDisplays the MAC⁷⁾ address of the measuring device.**User interface**

Unique 12-digit character string comprising letters and numbers


Factory setting

Each measuring device is given an individual address.

7) Media Access Control

Additional information*Example*

For the display format
00:07:05:10:01:5F

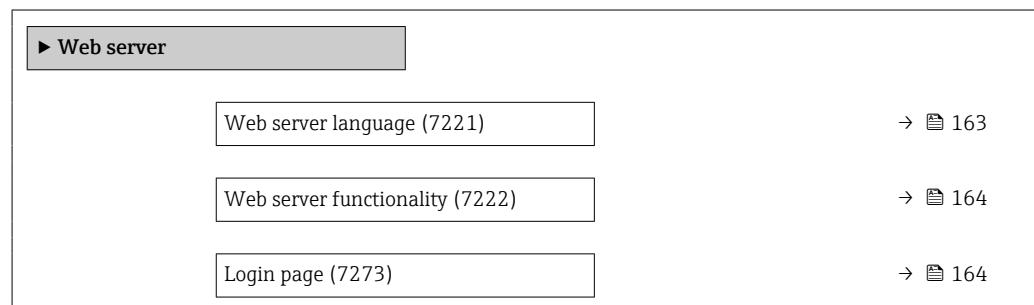3.6.6 "Web server" submenu*Navigation*
 Expert → Communication → Web server
**Web server language****Navigation**
 Expert → Communication → Web server → Webserv.language (7221)
Description

Set web server language.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- العربية (Arabic) *
- Bahasa Indonesia *
- ภาษาไทย (Thai)
- tiếng Việt (Vietnamese)
- čeština (Czech)

Factory setting

English

* Visibility depends on order options or device settings

Web server functionality**Navigation**

Expert → Communication → Web server → Webserver funct. (7222)

Description

Use this function to switch the Web server on and off.

Selection

- Off
- HTML Off
- On

Factory setting

On

Additional information*Description*

Once disabled, the Web server functionality can only be enabled again via the local display, the FieldCare operating tool or the DeviceCare operating tool.

Selection

Option	Description
Off	<ul style="list-style-type: none">▪ The Web server is completely disabled.▪ Port 80 is locked.
HTML Off	The HTML version of the Web server is not available.
On	<ul style="list-style-type: none">▪ The complete Web server functionality is available.▪ JavaScript is used.▪ The password is transferred in an encrypted state.▪ Any change to the password is also transferred in an encrypted state.

Login page**Navigation**

Expert → Communication → Web server → Login page (7273)

Description

Use this function to select the format of the login page.

Selection

- Without header
- With header

Factory setting

With header

3.7 "Analog inputs" submenu

Navigation

Expert → Analog inputs

3.7.1 "Analog inputs" submenu

Navigation

Expert → Analog inputs → Volume flow

► Analog input 1 to n	
Assign process variable (11074-1 to n)	→ 165
Process value (11071-1 to n)	→ 166
Process variable unit (11072-1 to n)	→ 166
Damping (11073-1 to n)	→ 167
Process value status (11076-1 to n)	→ 167
Process value status (Hex) (11075-1 to n)	→ 167
Simulation (11080-1 to n)	→ 167
Simulation value (11078-1 to n)	→ 168
Simulated status (11079-1 to n)	→ 168

Assign process variable

Navigation

Expert → Analog inputs → Analog input 1 to n → Assign variable (11074-1 to n)

Expert → Analog inputs → Volume flow → Assign variable (11074)

Description

Select a process variable.

User interface

- Mass flow
- Volume flow
- Temperature
- Electronics temperature
- Noise *
- Coil current shot time *
- Reference electrode potential against PE *
- HBSI *

* Visibility depends on order options or device settings

- Build-up index **
- Current input 1
- Current input 2
- Current input 3
- Flow velocity *
- Conductivity *
- Corrected conductivity *
- Corrected volume flow

Factory setting Volume flow

Process value

Navigation	 Expert → Analog inputs → Analog input 1 to n → Process value (11071-1 to n)  Expert → Analog inputs → Volume flow → Process value (11071)
Description	Shows the process value reported to the controller for further processing.
User interface	Signed floating-point number
Factory setting	0 l/h

Process variable unit

Navigation	 Expert → Analog inputs → Analog input 1 to n → ProcVariableUnit (11072-1 to n)  Expert → Analog inputs → Volume flow → ProcVariableUnit (11072)
Description	Shows the unit of the process variable.
User interface	0 to 65 535
Factory setting	1 997

** The build-up index is only available in conjunction with Heartbeat Technology. If Heartbeat Technology was ordered together with the measuring device, the option will already be enabled, and no further action is required. If Heartbeat Technology was ordered at a later date, you must first activate the option under 'Activate SW option' by entering the activation key you received. To purchase Heartbeat Technology, contact your local sales and service center. In addition to Heartbeat Technology, conductivity measurement must be enabled on the device. To do this, go to the 'Conductivity measurement' parameter on the 'Process parameters' menu and select the 'On' option.

* Visibility depends on order options or device settings

Damping

Navigation	Expert → Analog inputs → Analog input 1 to n → Damping (11073–1 to n) Expert → Analog inputs → Volume flow → Damping (11073)
Description	Enter time constant for input damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.
User entry	Positive floating-point number
Factory setting	1.0 s

Process value status

Navigation	Expert → Analog inputs → Analog input 1 to n → Proc.ValueStatus (11076–1 to n) Expert → Analog inputs → Volume flow → Proc.ValueStatus (11076)
Description	Shows the status of the process value reported to the controller for further processing ('Good', 'Uncertain', 'Bad').
User interface	<ul style="list-style-type: none"> ■ Good ■ Uncertain ■ Bad
Factory setting	Good

Process value status (Hex)

Navigation	Expert → Analog inputs → Volume flow → ProcValStatusHex (11075) Expert → Analog inputs → Analog input 1 to n → ProcValStatusHex (11075–1 to n)
Description	Shows the status of the process value reported to the controller for further processing (Hex).
User interface	0 to 255
Factory setting	128

Simulation

Navigation	Expert → Analog inputs → Analog input 1 to n → Simulation (11080–1 to n) Expert → Analog inputs → Volume flow → Simulation (11080)
Description	Switch simulation of the analog input on or off (Off = 0, On > 0).

User entry 0 to 255

Factory setting 0

Simulation value


Navigation	█ Expert → Analog inputs → Volume flow → Simulation value (11078) █ Expert → Analog inputs → Analog input 1 to n → Simulation value (11078–1 to n)
Description	Enter the simulation value for the selected process variable.
User entry	Signed floating-point number
Factory setting	0 l/h

Simulated status

Navigation	█ Expert → Analog inputs → Volume flow → Simulated status (11079) █ Expert → Analog inputs → Analog input 1 to n → Simulated status (11079–1 to n)
Description	Specify the status of the simulated process value (Hex).
User entry	0 to 255
Factory setting	60


3.8 "Analog outputs" submenu

Navigation █ █ Expert → Analog outputs

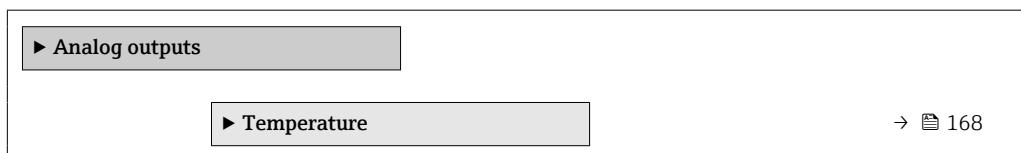

3.8.1 "Temperature" submenu

Navigation █ █ Expert → Analog outputs → Temperature

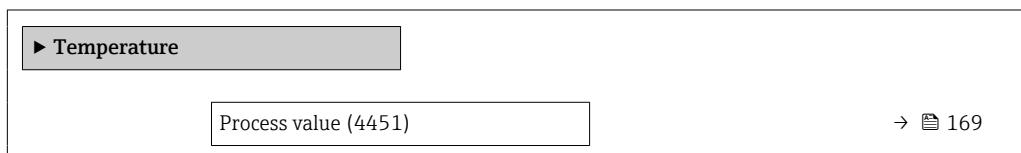

Process value status (Hex) (4452)	→ 169
Process value status (4458)	→ 170
Process variable unit (4456)	→ 170
Failure behavior delay (4453)	→ 171
Failure behavior (4454)	→ 171
Fixed value (4455)	→ 171
AO block output value (4457)	→ 171
AO block output value status (Hex) (4460)	→ 172
AO block output value status (4461)	→ 172

Process value

Navigation  Expert → Analog outputs → Temperature → Process value (4451)

Description Shows the process value reported by the controller for further processing.

User entry Signed floating-point number

Factory setting 0 °C

Process value status (Hex)

Navigation  Expert → Analog outputs → Temperature → ProcValStatusHex (4452)

Description Shows the status of the process value reported by the controller (Hex).

User entry 0 to 255

Factory setting 128

Process value status

Navigation  Expert → Analog outputs → Temperature → Proc.ValueStatus (4458)

Description Shows the status of the process value reported by the controller ('Good', 'Uncertain', 'Bad').

User interface

- Good
- Uncertain
- Bad

Factory setting Good

Process variable unit

Navigation  Expert → Analog outputs → Temperature → ProcVariableUnit (4456)

Description Shows the unit of the process variable.

Selection

<i>SI units</i> ■ g/cm ³ * ■ g/m ³ * ■ g/ml* ■ kg/l* ■ kg/dm ³ * ■ kg/m ³ * ■ SD4°C* ■ SD15°C* ■ SD20°C* ■ SG4°C* ■ SG15°C* ■ SG20°C*

Other units
°API*

US units
 ■ SG60°F*
 ■ lb/ft³*
 ■ lb/gal (us)*
 ■ lb/bbl (us;liq.)*
 ■ lb/bbl (us;beer)*
 ■ lb/bbl (us;oil)*
 ■ lb/bbl (us;tank)*

Imperial units
 ■ lb/gal (imp)*
 ■ lb/bbl (imp;beer)*
 ■ lb/bbl (imp;oil)*

* Visibility depends on order options or device settings

or

SI units
 ■ °C*
 ■ K

US units
 ■ °F*
 ■ °R*

* Visibility depends on order options or device settings

Factory setting °C

Failure behavior delay

Navigation	  Expert → Analog outputs → Temperature → FailBehavDelay (4453)
Description	Enter a delay until in the event of a failure (value with status 'Bad') the failure behavior specified applies.
User entry	Positive floating-point number
Factory setting	0 s

Failure behavior

Navigation	  Expert → Analog outputs → Temperature → Failure behavior (4454)
Description	Select failure behavior in the event of a failure (value with status 'Bad').
Selection	<ul style="list-style-type: none">■ Fixed value■ Last valid value■ Actual value
Factory setting	Actual value

Fixed value

Navigation	  Expert → Analog outputs → Temperature → Fixed value (4455)
Description	Enter value to report in the event of a failure (value with status 'Bad').
User entry	Signed floating-point number
Factory setting	0 °C

AO block output value

Navigation	  Expert → Analog outputs → Temperature → AOBlockOutValue (4457)
Description	Shows the external process value reported to the measuring device for further processing.
User entry	Signed floating-point number
Factory setting	0 °C

AO block output value status (Hex)


Navigation	  Expert → Analog outputs → Temperature → OutValStatusHex (4460)
Description	Shows the status of the external process value reported to the measuring device for further processing (Hex).
User entry	0 to 255
Factory setting	128

AO block output value status

Navigation	  Expert → Analog outputs → Temperature → OutValueStatus (4461)
Description	Shows the status of the external process value reported to the measuring device for further processing ('Good', 'Uncertain', 'Bad').
User interface	<ul style="list-style-type: none">▪ Good▪ Uncertain▪ Bad
Factory setting	Good

3.9 "Application" submenu

Navigation   Expert → Application

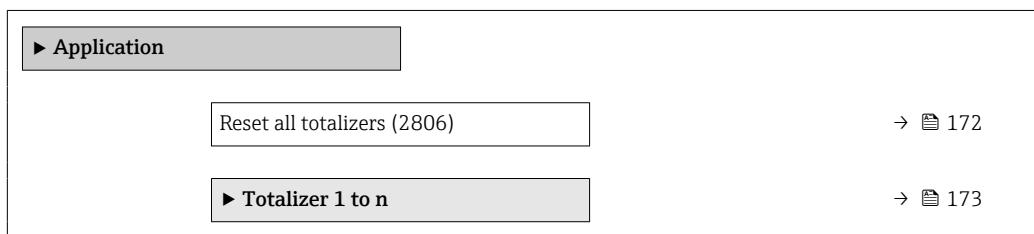

Reset all totalizers

Navigation	  Expert → Application → Reset all tot. (2806)
Description	Use this function to reset all totalizers to the value 0 and restart the totaling process. This deletes all the flow values previously totalized.
Selection	<ul style="list-style-type: none">▪ Cancel▪ Reset + totalize

Factory setting Cancel

Additional information Selection

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

3.9.1 "Totalizer 1 to n" submenu

Navigation

Diagram Expert → Application → Totalizer 1 to n

```

graph TD
    A[▶ Totalizer 1 to n] --> B[Assign process variable 1 to n  
(11104-1 to n)]
    A --> C[Process variable unit 1 to n  
(11107-1 to n)]
    A --> D[Totalizer 1 to n control (11101-1 to n)]
    A --> E[Preset value 1 to n (11108-1 to n)]
    A --> F[Totalizer 1 to n operation mode  
(11102-1 to n)]
    A --> G[Totalizer 1 to n failure behavior  
(11103-1 to n)]
    A --> H[Totalizer 1 to n value (11105-1 to n)]
    A --> I[Totalizer 1 to n status (11109-1 to n)]
    A --> J[Totalizer 1 to n status (Hex)  
(11106-1 to n)]
  
```

The diagram shows a hierarchical menu structure. At the top level is a box labeled '▶ Totalizer 1 to n'. Below it are nine sub-options, each in its own box: 'Assign process variable 1 to n (11104-1 to n)', 'Process variable unit 1 to n (11107-1 to n)', 'Totalizer 1 to n control (11101-1 to n)', 'Preset value 1 to n (11108-1 to n)', 'Totalizer 1 to n operation mode (11102-1 to n)', 'Totalizer 1 to n failure behavior (11103-1 to n)', 'Totalizer 1 to n value (11105-1 to n)', 'Totalizer 1 to n status (11109-1 to n)', and 'Totalizer 1 to n status (Hex) (11106-1 to n)'. To the right of each sub-option box is a reference number: 173, 174, 175, 175, 175, 175, 176, 176, and 176 respectively.

Assign process variable 1 to n



Navigation

Diagram Expert → Application → Totalizer 1 to n → AssignVariab. 1 to n (11104-1 to n)

Description

Select process variable for totalizer.

Selection

- Volume flow
- Mass flow
- Corrected volume flow

Factory setting

Volume flow

Process variable unit 1 to n**Navigation**
 Expert → Application → Totalizer 1 to n → VariableUnit 1 to n (11107-1 to n)
Description

Select the unit for the process variable of the totalizer.

Selection*SI units*

- g *
- kg *
- t

US units

- oz *
- lb *
- STon *

* Visibility depends on order options or device settings

or

SI units

- cm³ *
- dm³ *
- m³ *
- ml *
- l *
- hl *
- Ml Mega *

US units

- af *
- ft³ *
- Mft³ *
- Mft³ *
- fl oz (us) *
- gal (us) *
- kgal (us) *
- Mgal (us) *
- bbl (us;liq.) *
- bbl (us;beer) *
- bbl (us;oil) *
- bbl (us;tank) *

Imperial units

- gal (imp) *
- Mgal (imp) *
- bbl (imp;beer) *
- bbl (imp;oil)

* Visibility depends on order options or device settings

or

SI units

- NI *
- Nhl *
- Nm³ *
- Sl *
- Sm³ *

US units

- Sft³ *
- MSft³ *
- MMSft³ *
- Sgal (us) *
- Sbbl (us;liq.) *
- Sbbl (us;oil) *

Imperial units

- Sgal (imp) *

* Visibility depends on order options or device settings

Factory setting

1

Totalizer 1 to n control

Navigation	  Expert → Application → Totalizer 1 to n → Tot. 1 to n control (11101–1 to n)
Description	Operate the totalizer.
Selection	<ul style="list-style-type: none"> ▪ Reset + hold ▪ Preset + hold ▪ Hold ▪ Totalize
Factory setting	Totalize

Preset value 1 to n

Navigation	  Expert → Application → Totalizer 1 to n → Preset value 1 to n (11108–1 to n)
Description	Specify start value for totalizer.
User entry	Signed floating-point number
Factory setting	0.1

Totalizer 1 to n operation mode



Navigation	  Expert → Application → Totalizer 1 to n → Operat. mode 1 to n (11102–1 to n)
Description	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.
Selection	<ul style="list-style-type: none"> ▪ Net ▪ Forward ▪ Reverse
Factory setting	Forward

Totalizer 1 to n failure behavior



Navigation	  Expert → Application → Totalizer 1 to n → FailureBehav. 1 to n (11103–1 to n)
Description	Select totalizer behavior in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ▪ Hold ▪ Continue ▪ Last valid value + continue

Factory setting Continue

Totalizer 1 to n value

Navigation	 Expert → Application → Totalizer 1 to n → Tot. 1 to n value (11105–1 to n)
Description	Shows the totalizer value reported to the controller for further processing.
User interface	Signed floating-point number
Factory setting	0.1

Totalizer 1 to n status

Navigation	 Expert → Application → Totalizer 1 to n → Tot. 1 to n status (11109–1 to n)
Description	Shows the status of the totalizer value reported to the controller for further processing ('Good', 'Uncertain', 'Bad').
User interface	<ul style="list-style-type: none">▪ Good▪ Uncertain▪ Bad
Factory setting	Good

Totalizer 1 to n status (Hex)

Navigation	 Expert → Application → Totalizer 1 to n → Status 1 to n (Hex) (11106–1 to n)
Description	Shows the status of the totalizer value reported to the controller for further processing (Hex).
User interface	0 to 255
Factory setting	128

3.10 "Diagnostics" submenu

Navigation

Expert → Diagnostics

▶ Diagnostics	
Actual diagnostics (0691)	→ 177
Previous diagnostics (0690)	→ 178
Operating time from restart (0653)	→ 178
Operating time (0652)	→ 179
▶ Diagnostic list	→ 179
▶ Event logbook	→ 181
▶ Device information	→ 183
▶ Main electronic module + I/O module 1	→ 187
▶ Sensor electronic module (ISEM)	→ 188
▶ I/O module 2	→ 189
▶ I/O module 3	→ 190
▶ I/O module 4	→ 191
▶ Display module	→ 193
▶ Data logging	→ 194
▶ Min/max values	→ 202
▶ Heartbeat Technology	→ 206
▶ Simulation	→ 219

Actual diagnostics

Navigation

Expert → Diagnostics → Actual diagnos. (0691)

Prerequisite

A diagnostic event has occurred.

Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Additional pending diagnostic messages can be viewed in the Diagnostic list submenu (→ 179).  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Example</i> For the display format:  F271 Main electronic failure

Previous diagnostics

Navigation	  Expert → Diagnostics → Prev.diagnostics (0690)
Prerequisite	Two diagnostic events have already occurred.
Description	Displays the diagnostic message that occurred before the current message.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Example</i> For the display format:  F271 Main electronic failure

Operating time from restart

Navigation	  Expert → Diagnostics → Time fr. restart (0653)
Description	Use this function to display the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Operating time

Navigation

Expert → Diagnostics → Operating time (0652)

Description

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

User interface

The maximum number of days is 9999, which is equivalent to 27 years.

3.10.1 "Diagnostic list" submenu

Navigation

Expert → Diagnostics → Diagnostic list

► Diagnostic list	
Diagnostics 1 (0692)	→ 179
Diagnostics 2 (0693)	→ 180
Diagnostics 3 (0694)	→ 180
Diagnostics 4 (0695)	→ 180
Diagnostics 5 (0696)	→ 181

Diagnostics 1

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 1 (0692)

Description

Displays the current diagnostics message with the highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information

Display

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

Examples

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

Diagnostics 2

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 2 (0693)
Description	Displays the current diagnostics message with the second-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Examples</i> For the display format: <ul style="list-style-type: none">▪  F271 Main electronic failure▪  F276 I/O module failure

Diagnostics 3

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 3 (0694)
Description	Displays the current diagnostics message with the third-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Examples</i> For the display format: <ul style="list-style-type: none">▪  F271 Main electronic failure▪  F276 I/O module failure

Diagnostics 4

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 4 (0695)
Description	Displays the current diagnostics message with the fourth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

Examples

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

Diagnostics 5**Navigation**

 Expert → Diagnostics → Diagnostic list → Diagnostics 5 (0696)

Description

Displays the current diagnostics message with the fifth-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

Examples

For the display format:


-  F271 Main electronic failure
-  F276 I/O module failure

3.10.2 "Event logbook" submenu**Viewing event messages**

Event messages are displayed in chronological order. The event history includes both diagnostic events and information events. The symbol in front of the timestamp indicates whether the event has started or ended.

Navigation

 Expert → Diagnostics → Event logbook

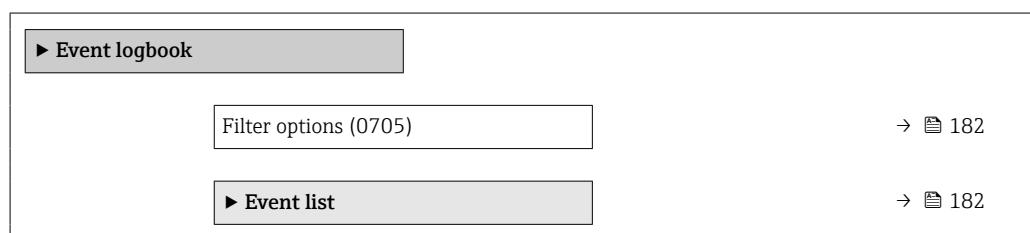

Filter options**Navigation**

Expert → Diagnostics → Event logbook → Filter options (0705)

Description

Use this function to select the category whose event messages are displayed in the event list of the local display.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
- F = Failure
 - C = Function Check
 - S = Out of Specification
 - M = Maintenance Required

"Event list" submenu


The **Event list** submenu is only displayed if operating via the local display.

If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.

If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

Navigation

Expert → Diagnostics → Event logbook → Event list

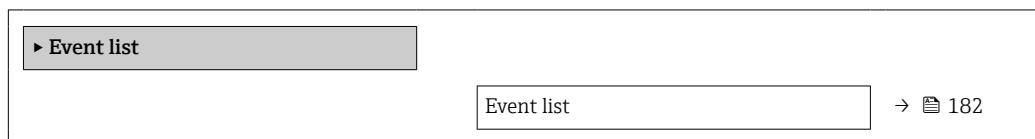**Event list****Navigation**

Expert → Diagnostics → Event logbook → Event list

Description

Displays the history of event messages of the category selected in the **Filter options** parameter (→ 182).

User interface

- For a "Category I" event message
Information event, short message, symbol for event recording and operating time when error occurred
- For a "Category F, C, S, M" event message (status signal)
Diagnostics code, short message, symbol for event recording and operating time when error occurred

Additional information*Description*

A maximum of 20 event messages are displayed in chronological order.

If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The following symbols indicate whether an event has occurred or has ended:

- ⊖: Occurrence of the event
- ⊕: End of the event

Examples

For the display format:

- I1091 Configuration modified
⊖ 24d12h13m00s
- ⊗F271 Main electronic failure
⊖ 01d04h12min30s

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.10.3 "Device information" submenu

Navigation

► Device information	
Device tag (0011)	→ 184
Serial number (0009)	→ 184
Firmware version (0010)	→ 185
Device name (0020)	→ 185
Order code (0008)	→ 185
Extended order code 1 (0023)	→ 186
Extended order code 2 (0021)	→ 186
Extended order code 3 (0022)	→ 186

Configuration counter (2751)	→ 186
ENP version (0012)	→ 187

Device tag


Navigation Expert → Diagnostics → Device info → Device tag (0011)

Description Displays a unique name for the measuring point so it can be identified quickly within the plant. It is displayed in the header.

User interface Character string comprising numbers, letters and special characters

Factory setting Promag

Additional information *User interface*

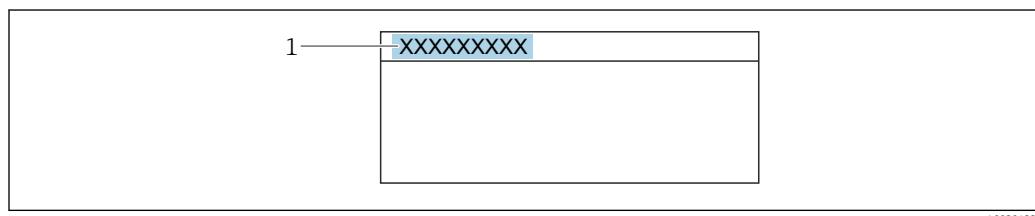

A0029422

1 Position of the header text on the display

The number of characters displayed depends on the characters used.

Serial number

Navigation Expert → Diagnostics → Device info → Serial number (0009)

Description Displays the serial number of the measuring device.

The number can be found on the nameplate of the sensor and transmitter.

User interface Max. 11-digit character string comprising letters and numbers.

Additional information *Description*

Uses of the serial number

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer:
www.endress.com/deviceviewer

Firmware version

Navigation	 Expert → Diagnostics → Device info → Firmware version (0010)
Description	Displays the device firmware version installed.
User interface	Character string in the format xx.yy.zz
Additional information	<i>Display</i>  The Firmware version is also located: <ul style="list-style-type: none">▪ On the title page of the Operating instructions▪ On the transmitter nameplate

Device name

Navigation	 Expert → Diagnostics → Device info → Device name (0020)
Description	Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.
User interface	Promag 300/500

Order code



Navigation	 Expert → Diagnostics → Device info → Order code (0008)
Description	Displays the device order code.
User interface	Character string composed of letters, numbers and certain punctuation marks (e.g. /).
Additional information	<i>Description</i>  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field. The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.  Uses of the order code <ul style="list-style-type: none">▪ To order an identical spare device.▪ To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Extended order code 1**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 1 (0023)

Description

Displays the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

User interface

Character string

Additional information**Description**

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Extended order code 2**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 2 (0021)

Description

Displays the second part of the extended order code.

User interface

Character string

Additional information

For additional information, see **Extended order code 1** parameter (→ 186)

Extended order code 3**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 3 (0022)

Description

Displays the third part of the extended order code.

User interface

Character string

Additional information

For additional information, see **Extended order code 1** parameter (→ 186)

Configuration counter**Navigation**

Expert → Diagnostics → Device info → Config. counter (2751)

Description

Displays the number of parameter modifications for the device. When the user changes a parameter setting, this counter is incremented.

User interface


0 to 65 535

ENP version

Navigation	 Expert → Diagnostics → Device info → ENP version (0012)
Description	Displays the version of the electronic nameplate.
User interface	Character string
Factory setting	2.02.00
Additional information	<p><i>Description</i></p> <p>This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.</p>

3.10.4 "Main electronic module + I/O module 1" submenu

Navigation  Expert → Diagnostics 1 → Main elec.+I/O1

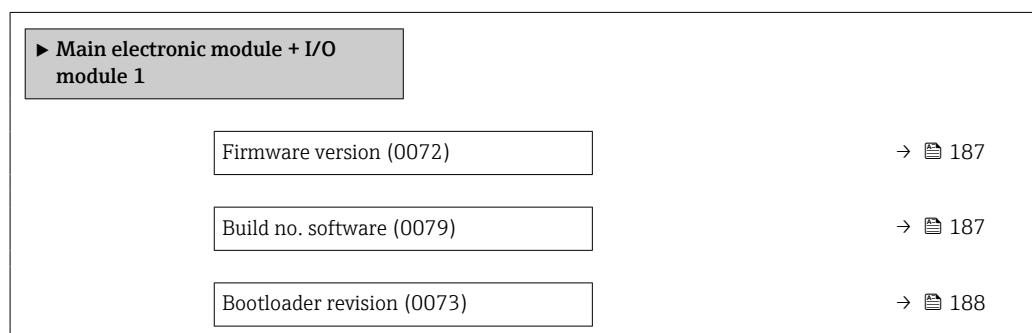

Firmware version

Navigation	 Expert → Diagnostics → Main elec.+I/O1 → Firmware version (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. software

Navigation	 Expert → Diagnostics → Main elec.+I/O1 → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader revision


Navigation   Expert → Diagnostics → Main elec.+I/O1 → Bootloader rev. (0073)

Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.10.5 "Sensor electronic module (ISEM)" submenu

Navigation   Expert → Diagnostics → Sens. electronic

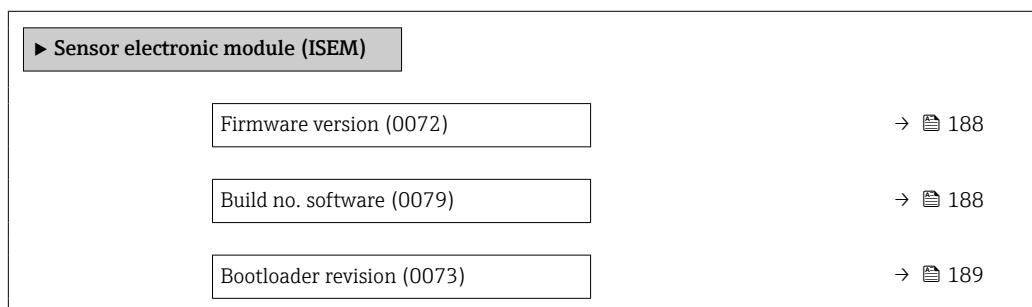

Firmware version

Navigation   Expert → Diagnostics → Sens. electronic → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation   Expert → Diagnostics → Sens. electronic → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision

Navigation  Expert → Diagnostics → Sens. electronic → Bootloader rev. (0073)


Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.10.6 "I/O module 2" submenu

Navigation

 Expert → Diagnostics → I/O module 2

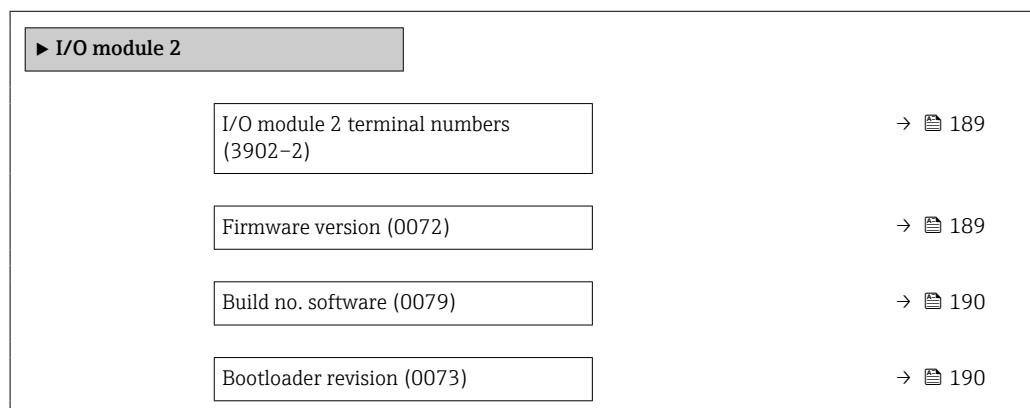

I/O module 2 terminal numbers

Navigation  Expert → Diagnostics → I/O module 2 → I/O 2 terminals (3902-2)

Description Displays the terminal numbers used by the I/O module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4)

Firmware version

Navigation  Expert → Diagnostics → I/O module 2 → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation   Expert → Diagnostics → I/O module 2 → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision


Navigation   Expert → Diagnostics → I/O module 2 → Bootloader rev. (0073)

Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.10.7 "I/O module 3" submenu

Navigation   Expert → Diagnostics → I/O module 3

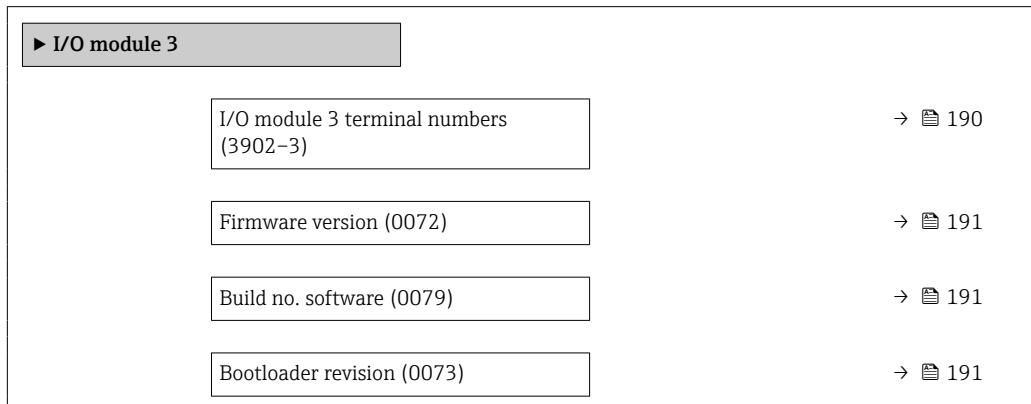

I/O module 3 terminal numbers

Navigation   Expert → Diagnostics → I/O module 3 → I/O 3 terminals (3902-3)

Description Displays the terminal numbers used by the I/O module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4)

Firmware version

Navigation   Expert → Diagnostics → I/O module 3 → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation   Expert → Diagnostics → I/O module 3 → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision

Navigation   Expert → Diagnostics → I/O module 3 → Bootloader rev. (0073)


Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.10.8 "I/O module 4" submenu

Navigation

  Expert → Diagnostics → I/O module 4

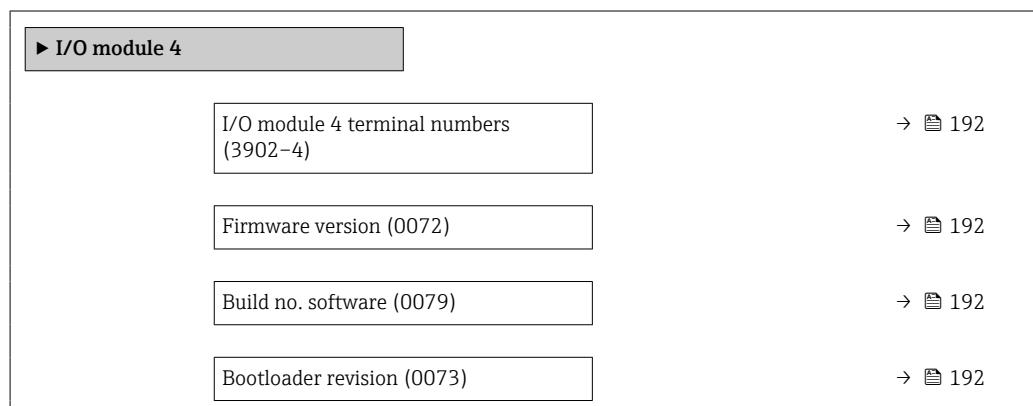

I/O module 4 terminal numbers

Navigation  Expert → Diagnostics → I/O module 4 → I/O 4 terminals (3902-4)

Description Displays the terminal numbers used by the I/O module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)
- 20-21 (I/O 4)

Firmware version

Navigation  Expert → Diagnostics → I/O module 4 → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation  Expert → Diagnostics → I/O module 4 → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision

Navigation  Expert → Diagnostics → I/O module 4 → Bootloader rev. (0073)


Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.10.9 "Display module" submenu

Navigation

Expert → Diagnostics → Display module

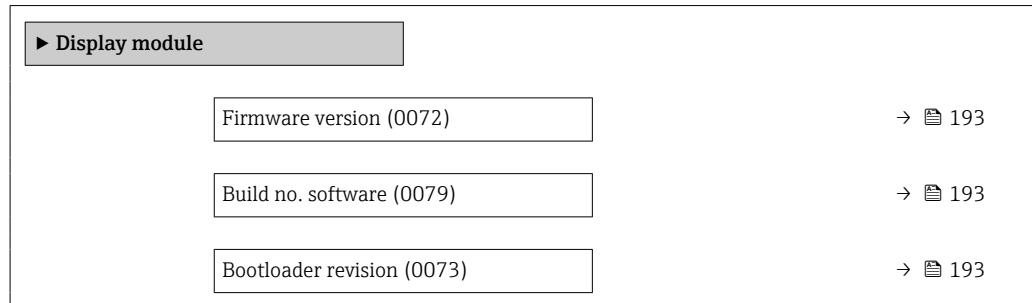

Firmware version

Navigation

Expert → Diagnostics → Display module → Firmware version (0072)

Description

Use this function to display the software revision of the module.

User interface

Positive integer

Build no. software

Navigation

Expert → Diagnostics → Display module → Build no. softw. (0079)

Description

Use this function to display the software build number of the module.

User interface

Positive integer

Bootloader revision

Navigation

Expert → Diagnostics → Display module → Bootloader rev. (0073)

Description

Use this function to display the bootloader revision of the software.

User interface

Positive integer

3.10.10 "Data logging" submenu

Navigation

 Expert → Diagnostics → Data logging

► Data logging	
Assign channel 1 (0851)	→  194
Assign channel 2 (0852)	→  195
Assign channel 3 (0853)	→  196
Assign channel 4 (0854)	→  196
Logging interval (0856)	→  196
Clear logging data (0855)	→  197
Data logging (0860)	→  197
Logging delay (0859)	→  198
Data logging control (0857)	→  198
Data logging status (0858)	→  199
Entire logging duration (0861)	→  199
► Display channel 1	→  199
► Display channel 2	→  200
► Display channel 3	→  201
► Display channel 4	→  201

Assign channel 1



Navigation

 Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  51).

Description

Use this function to select a process variable for the data logging channel.

Selection	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Flow velocity* ■ Conductivity* ■ Corrected conductivity* ■ Temperature* ■ Electronics temperature* ■ Current output 1* ■ Current output 2* ■ Current output 3* ■ Current output 4* ■ Noise* ■ Coil current shot time* ■ Reference electrode potential against PE* ■ HBSI* ■ Build-up index* ■ Test point 1 ■ Test point 2 ■ Test point 3
Factory setting	Off
Additional information	<p><i>Description</i></p> <p>A total of 1000 measured values can be logged. This means:</p> <ul style="list-style-type: none"> ■ 1000 data points if 1 logging channel is used ■ 500 data points if 2 logging channels are used ■ 333 data points if 3 logging channels are used ■ 250 data points if 4 logging channels are used <p>Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).</p> <p> The log contents are cleared if the option selected is changed.</p>

Assign channel 2



Navigation	 Expert → Diagnostics → Data logging → Assign chan. 2 (0852)
Prerequisite	The Extended HistoROM application package is available.
	 The software options currently enabled are displayed in the Software option overview parameter (→  51).
Description	Use this function to select a process variable for the data logging channel.
Selection	For the picklist, see the Assign channel 1 parameter (→  194)
Factory setting	Off

* Visibility depends on order options or device settings

Assign channel 3



Navigation

Expert → Diagnostics → Data logging → Assign chan. 3 (0853)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **Software option overview** parameter (→ [51](#)).

Description

Use this function to select a process variable for the data logging channel.

Selection

For the picklist, see the **Assign channel 1** parameter (→ [194](#))

Factory setting

Off

Assign channel 4



Navigation

Expert → Diagnostics → Data logging → Assign chan. 4 (0854)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **Software option overview** parameter (→ [51](#)).

Description

Use this function to select a process variable for the data logging channel.

Selection

For the picklist, see the **Assign channel 1** parameter (→ [194](#))

Factory setting

Off

Logging interval



Navigation

Expert → Diagnostics → Data logging → Logging interval (0856)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **Software option overview** parameter (→ [51](#)).

Description

Use this function to enter the logging interval T_{log} for data logging.

User entry

0.1 to 3 600.0 s

Factory setting

1.0 s

Additional information*Description*

This defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{\log} :

- If 1 logging channel is used: $T_{\log} = 1000 \times t_{\log}$
- If 2 logging channels are used: $T_{\log} = 500 \times t_{\log}$
- If 3 logging channels are used: $T_{\log} = 333 \times t_{\log}$
- If 4 logging channels are used: $T_{\log} = 250 \times t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).

 The log contents are cleared if the length of the logging interval is changed.

Example

If 1 logging channel is used:

- $T_{\log} = 1000 \times 1 \text{ s} = 1000 \text{ s} \approx 15 \text{ min}$
- $T_{\log} = 1000 \times 10 \text{ s} = 10000 \text{ s} \approx 3 \text{ h}$
- $T_{\log} = 1000 \times 80 \text{ s} = 80000 \text{ s} \approx 1 \text{ d}$
- $T_{\log} = 1000 \times 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data**Navigation**

 Expert → Diagnostics → Data logging → Clear logging (0855)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  51).

Description

Use this function to clear the entire logging data.

Selection

- Cancel
- Clear data

Factory setting

Cancel

Additional information*Selection*

- Cancel
The data is not cleared. All the data is retained.
- Clear data
The logging data is cleared. The logging process starts from the beginning.

Data logging**Navigation**

 Expert → Diagnostics → Data logging → Data logging (0860)

Description

Use this function to select the data logging method.

Selection

- Overwriting
- Not overwriting

Factory setting	Overwriting
Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ Overwriting The device memory applies the FIFO principle.▪ Not overwriting Data logging is canceled if the measured value memory is full (single shot).

Logging delay



Navigation	Expert → Diagnostics → Data logging → Logging delay (0859)
Prerequisite	In the Data logging parameter (→ 197), the Not overwriting option is selected.
Description	Use this function to enter the time delay for measured value logging.
User entry	0 to 999 h
Factory setting	0 h
Additional information	<i>Description</i> <p>Once data logging has been started with the Data logging control parameter (→ 198), the device does not save any data for the duration of the delay time entered.</p>

Data logging control



Navigation	Expert → Diagnostics → Data logging → Data log.control (0857)
Prerequisite	In the Data logging parameter (→ 197), the Not overwriting option is selected.
Description	Use this function to start and stop measured value logging.
Selection	<ul style="list-style-type: none">▪ None▪ Delete + start▪ Stop
Factory setting	None
Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ None Initial measured value logging status.▪ Delete + start All the measured values recorded for all the channels are deleted and measured value logging starts again.▪ Stop Measured value logging is stopped.

Data logging status

Navigation	 Expert → Diagnostics → Data logging → Data log. status (0858)
Prerequisite	In the Data logging parameter (→ 197), the Not overwriting option is selected.
Description	Displays the measured value logging status.
User interface	<ul style="list-style-type: none"> ■ Done ■ Delay active ■ Active ■ Stopped
Factory setting	Done
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Done Measured value logging has been performed and completed successfully. ■ Delay active Measured value logging has been started but the logging interval has not yet elapsed. ■ Active The logging interval has elapsed and measured value logging is active. ■ Stopped Measured value logging is stopped.

Entire logging duration

Navigation	 Expert → Diagnostics → Data logging → Logging duration (0861)
Prerequisite	In the Data logging parameter (→ 197), the Not overwriting option is selected.
Description	Displays the total logging duration.
User interface	Positive floating-point number
Factory setting	0 s

"Display channel 1" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 1



Display channel 1

Navigation

 Expert → Diagnostics → Data logging → Displ.channel 1

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  51).

One of the following options is selected in the **Assign channel 1** parameter (→  194):


- Conductivity *
- Corrected conductivity *
- Temperature *

Description

Displays the measured value trend for the logging channel in the form of a chart.

Additional information

Description

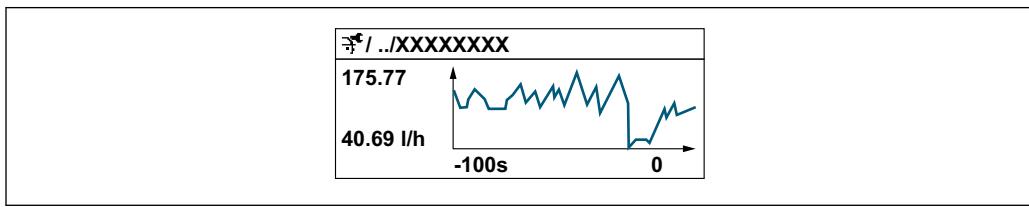


 9 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

"Display channel 2" submenu

Navigation

 Expert → Diagnostics → Data logging → Displ.channel 2

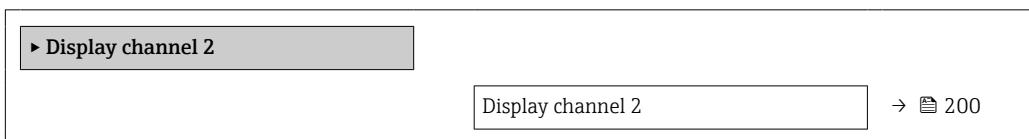

Display channel 2

Navigation

 Expert → Diagnostics → Data logging → Displ.channel 2

Prerequisite

A process variable is specified in the **Assign channel 2** parameter.


* Visibility depends on order options or device settings

Description

See the **Display channel 1** parameter → 200

"Display channel 3" submenu

Navigation Expert → Diagnostics → Data logging → Displ.channel 3

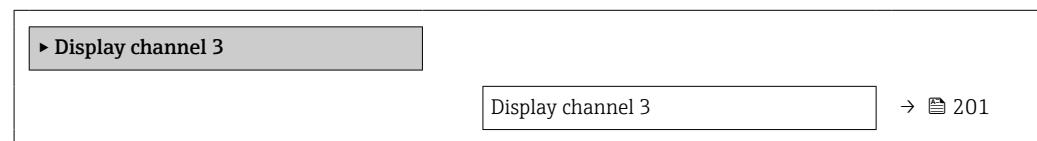

Display channel 3

Navigation Expert → Diagnostics → Data logging → Displ.channel 3

Prerequisite A process variable is specified in the **Assign channel 3** parameter.

Description See the **Display channel 1** parameter → 200

"Display channel 4" submenu

Navigation Expert → Diagnostics → Data logging → Displ.channel 4



Display channel 4

Navigation Expert → Diagnostics → Data logging → Displ.channel 4


Prerequisite A process variable is specified in the **Assign channel 4** parameter.

Description See the **Display channel 1** parameter → 200

3.10.11 "Min/max values" submenu

Navigation

Expert → Diagnostics → Min/max val.

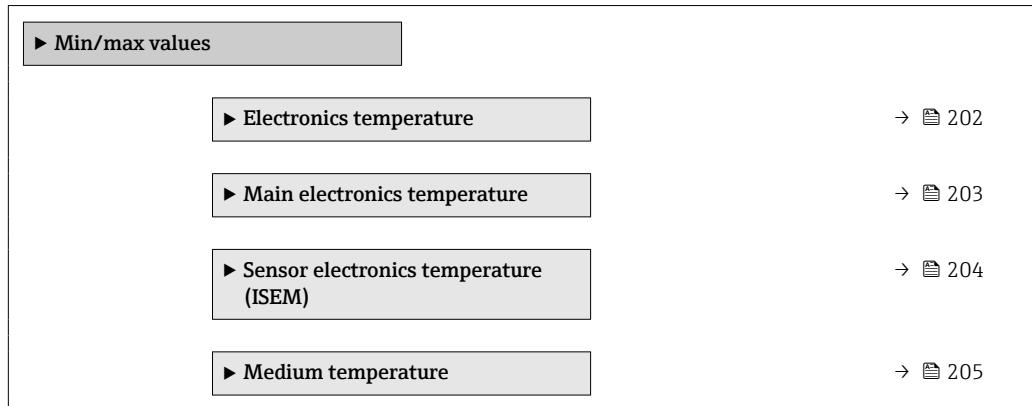

Reset min/max values



Navigation

Expert → Diagnostics → Min/max val. → Reset min/max (6541)

Description

Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

Selection

- Cancel
- Terminal voltage
- IO module temperature


Factory setting

Cancel

"Main electronics temperature" submenu

Navigation

Expert → Diagnostics → Min/max val. → Main elect.temp.

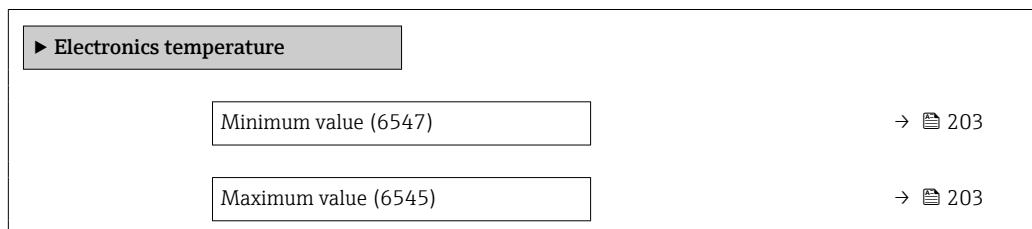

Minimum value


Navigation	  Expert → Diagnostics → Min/max val. → Electronics temp → Minimum value (6547)
Description	Displays the lowest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)

Maximum value

Navigation	  Expert → Diagnostics → Min/max val. → Electronics temp → Maximum value (6545)
Description	Displays the highest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)

"Main electronics temperature" submenu

Navigation   Expert → Diagnostics → Min/max val. → Main elect.temp.

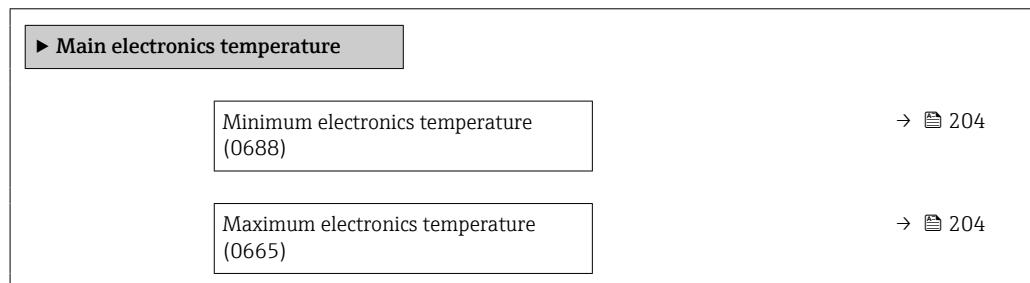

Minimum electronics temperature

Navigation

Expert → Diagnostics → Min/max val. → Main elect.temp. → Min.electr.temp. (0688)

Description

Displays the lowest previously measured temperature value of the electronics module in the transmitter.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Temperature unit** parameter (→ [65](#))

Maximum electronics temperature

Navigation

Expert → Diagnostics → Min/max val. → Main elect.temp. → Max.electr.temp. (0665)

Description

Displays the highest previously measured temperature value of the electronics module in the transmitter.

User interface

Signed floating-point number

Additional information


Dependency

 The unit is taken from the **Temperature unit** parameter (→ [65](#))

"Sensor electronics temperature (ISEM)" submenu

Navigation

Expert → Diagnostics → Min/max val. → Sensor elec.temp

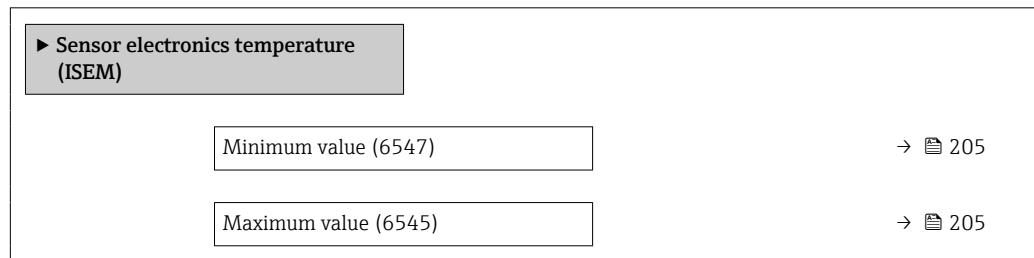

Minimum value

Navigation	  Expert → Diagnostics → Min/max val. → Sensor elec.temp → Minimum value (6547)
Description	Displays the lowest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)

Maximum value

Navigation	  Expert → Diagnostics → Min/max val. → Sensor elec.temp → Maximum value (6545)
Description	Displays the highest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)

"Temperature" submenu

Navigation   Expert → Diagnostics → Min/max val. → Temperature

 **Medium temperature**

Minimum value (6681)

 206

Maximum value (6680)

 206

Minimum value

Navigation	  Expert → Diagnostics → Min/max val. → Medium temp. → Minimum value (6681)
Prerequisite	One of the following conditions is met: <ul style="list-style-type: none">▪ Order code for "Sensor option", option CI "Medium temperature measurement" or▪ The temperature is read into the flowmeter from an external device.
Description	Displays the lowest previously measured medium temperature value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)


Maximum value

Navigation	  Expert → Diagnostics → Min/max val. → Medium temp. → Maximum value (6680)
Prerequisite	One of the following conditions is met: <ul style="list-style-type: none">▪ Order code for "Sensor option", option CI "Medium temperature measurement" or▪ The temperature is read into the flowmeter from an external device.
Description	Displays the highest previously measured medium temperature value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  65)

3.10.12 "Heartbeat Technology" submenu

 For detailed information on the parameter descriptions for the **Heartbeat Verification+Monitoring**: Special Documentation for the device → 

Navigation   Expert → Diagnostics → Heartbeat Techn.

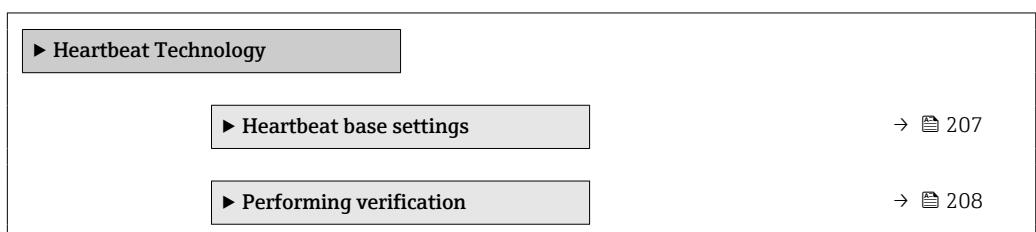

► Verification results	→ 213
► Monitoring results	→ 217

"Heartbeat base settings" submenu**Navigation**

Expert → Diagnostics → Heartbeat Techn. → Base settings

► Heartbeat base settings	
Plant operator (2754)	→ 207
Location (2755)	→ 207
Partially filled pipe (6465)	→ 207

Plant operator**Navigation**

Expert → Diagnostics → Heartbeat Techn. → Base settings → Plant operator (2754)

Description

Use this function to enter the plant operator.

User entry

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Location**Navigation**

Expert → Diagnostics → Heartbeat Techn. → Base settings → Location (2755)

Description

Use this function to enter the location.

User entry

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Partially filled pipe**Navigation**

Expert → Diagnostics → Heartbeat Techn. → Base settings → Part.filled pipe (6465)

Description

Indicate, if the measuring tube is partially filled during the verification process in order to avoid evaluating the EPD electrode cable.

Selection

- No
- Yes

Factory setting	No
-----------------	----

"Performing verification" wizard

Navigation

Expert → Diagnostics → Heartbeat Techn. → Perform.verifyc.



The screenshot shows a list of configuration items for the "Performing verification" wizard:

- Year (2846) → 208
- Month (2845) → 209
- Day (2842) → 209
- Hour (2843) → 209
- AM/PM (2813) → 210
- Minute (2844) → 210
- Verification mode (12105) → 210
- External device information (12101) → 211
- Start verification (12127) → 211
- Progress (2808) → 212
- Measured values (12102) → 212
- Output values (12103) → 212
- Status (12153) → 213
- Verification result (12149) → 213

Year



Navigation

Expert → Diagnostics → Heartbeat Techn. → Perform.verifyc. → Year (2846)

Prerequisite

 Can be edited if Heartbeat Verification is not active.

Description

Use this function to enter the year of recalibration.

User entry 9 to 99

Factory setting 10

Month



Navigation Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Month (2845)

Prerequisite Can be edited if Heartbeat Verification is not active.

Description Use this function to select the month of recalibration.

Selection

- January
- February
- March
- April
- May
- June
- July
- August
- September
- October
- November
- December

Factory setting January

Day



Navigation Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Day (2842)

Prerequisite Can be edited if Heartbeat Verification is not active.

Description Use this function to enter the day of the month of recalibration.

User entry 1 to 31 d

Factory setting 1 d

Hour



Navigation Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Hour (2843)

Prerequisite Can be edited if Heartbeat Verification is not active.

Description Use this function to enter the hour of recalibration.

User entry 0 to 23 h

Factory setting 12 h

AM/PM



Navigation Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → AM/PM (2813)

Prerequisite Can be edited if Heartbeat Verification is not active.

The **dd.mm.yy hh:mm am/pm** option or the **mm/dd/yy hh:mm am/pm** option is selected in the **Date/time format** parameter (2812) (→ 69).

Description Use this function to select the time entry in the morning (**AM** option) or afternoon (**PM** option) in the case of 12-hour notation.

Selection

- AM
- PM

Factory setting AM

Minute



Navigation Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Minute (2844)

Prerequisite Can be edited if Heartbeat Verification is not active.

Description Use this function to enter the minutes of recalibration.

User entry 0 to 59 min

Factory setting 0 min

Verification mode



Navigation Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Verificat. mode (12105)

Prerequisite Can be edited if verification status is not active.

Description Select verification mode.

Standard verification: Verification is performed automatically by the device and without manual checking of external measured variables.

Extended verification: Similar to internal verification but with the entry of external measured variables (see also "Measured values" parameter).

- Selection**
- Standard verification
 - Extended verification

- Factory setting** Standard verification

External device information



- Navigation** Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Ext. device info (12101)

- Prerequisite** With the following conditions:
- The **Extended verification** option is selected in the **Verification mode** parameter (→ 210).
 - Can be edited if the verification status is not active.

- Description** Record measuring equipment for extended verification.

- User entry** Free text entry

- Factory setting** –

Start verification



- Navigation** Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Start verificat. (12127)

- Description** Start the verification.

To carry out a complete verification, select the selection parameters individually. Once the external measured values have been recorded, verification is started using the **Start** option.

- Selection**
- Cancel
 - Output 1 low value *
 - Output 1 high value *
 - Output 2 low value *
 - Output 2 high value *
 - Output 3 low value *
 - Output 3 high value *
 - Output 4 low value *
 - Output 4 high value *
 - Frequency output 1 *
 - Pulse output 1 *
 - Frequency output 2 *
 - Pulse output 2 *

* Visibility depends on order options or device settings

- Frequency output 3 *
- Double pulse output *
- Start

Factory setting

Cancel

Progress

Navigation   Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Progress (2808)

Description

The progress of the process is indicated.

User interface

0 to 100 %

Measured values

Navigation   Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Measured val. (12102)

Prerequisite

One of the following options is selected in the **Start verification** parameter (→ 211):

- Output 1 low value
- Output 1 high value
- Output 2 low value
- Output 2 high value
- Frequency output 1
- Pulse output 1

Description

Use this function to enter the measured values (actual values) for the external measured variables:

- Current output: Output current in [mA]
- Pulse/frequency output: Output frequency in [Hz]
- Double pulse output: Output frequency in [Hz]

User entry

Signed floating-point number

Factory setting

0

Output values

Navigation   Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Output values (12103)

Description

Displays the simulated output values (target values) for the external measured variables:

* Visibility depends on order options or device settings

- Current output: Output current in [mA].
- Pulse/frequency output: Output frequency in [Hz].

User interface Signed floating-point number

Factory setting -

Status

Navigation	  Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Status (12153)
Description	Displays the current status of the verification.
User interface	<ul style="list-style-type: none"> ■ Done ■ Busy ■ Failed ■ Not done

Verification result

Navigation	  Expert → Diagnostics → Heartbeat Techn. → Perform.verific. → Verific. result (12149)
Description	<p>Displays the overall result of the verification.</p> <p> Detailed description of results classification:</p>
User interface	<ul style="list-style-type: none"> ■ Not supported ■ Passed ■ Not done ■ Failed
Factory setting	Not done

"Verification results" submenu

Navigation   Expert → Diagnostics → Heartbeat Techn. → Verific. results

▶ Verification results

Date/time (manually entered) (12142)

→  214

Verification ID (12141)

→  214

Operating time (12126)	→ 214
Verification result (12149)	→ 215
Sensor (12152)	→ 215
Sensor electronic module (ISEM) (12151)	→ 216
I/O module (12145)	→ 216
System status (12109)	→ 217

Date/time (manually entered)

Navigation	Expert → Diagnostics → Heartbeat Techn. → Verific. results → Date/time (12142)
Prerequisite	The verification has been performed.
Description	Date and time.
User interface	dd.mmmm.yyyy; hh:mm
Factory setting	1 January 2010; 12:00

Verification ID

Navigation	Expert → Diagnostics → Heartbeat Techn. → Verific. results → Verification ID (12141)
Prerequisite	The verification has been performed.
Description	Displays consecutive numbering of the verification results in the measuring device.
User interface	0 to 65 535
Factory setting	0

Operating time

Navigation	Expert → Diagnostics → Heartbeat Techn. → Verific. results → Operating time (12126)
Prerequisite	The verification has been performed.

Description	Indicates how long the device has been in operation up to the verification.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Factory setting	-

Verification result

Navigation	  Expert → Diagnostics → Heartbeat Techn. → Verific. results → Verific. result (12149)
Description	Displays the overall result of the verification.  Detailed description of results classification:
User interface	<ul style="list-style-type: none">■ Not supported■ Passed■ Not done■ Failed
Factory setting	Not done

Sensor

Navigation	  Expert → Diagnostics → Heartbeat Techn. → Verific. results → Sensor (12152)
Prerequisite	The Failed option is shown in the Overall result parameter (→ 213).
Description	Displays the result for the sensor.  Detailed description of results classification:
User interface	<ul style="list-style-type: none">■ Not supported■ Passed■ Not done■ Failed
Factory setting	Not done

HBSI

Navigation	  Expert → Diagnostics → Heartbeat → Verific. results → HBSI (12167)
Prerequisite	In the Overall result parameter (→ 213), the Failed option was displayed.

Description Displays the relative change in the sensor with all the sensor components.

 Detailed description of results classification:

User interface

- Failed
- Passed
- Not done

Factory setting Not done

Sensor electronic module (ISEM)

Navigation   Expert → Diagnostics → Heartbeat Techn. → Verific. results → Sens. electronic (12151)

Prerequisite The **Failed** option is shown in the **Overall result** parameter (→  213).

Description Displays the result for the sensor electronics module (ISEM).

 Detailed description of results classification:

User interface

- Not supported
- Passed
- Not done
- Failed

Factory setting Not done

I/O module

Navigation   Expert → Diagnostics → Heartbeat Techn. → Verific. results → I/O module (12145)

Prerequisite The **Failed** option is shown in the **Overall result** parameter (→  213).

Description Displays the result for I/O module monitoring of the I/O module.

- For current output: Accuracy of the current
- For pulse output: Accuracy of the pulses
- For frequency output: Accuracy of the frequency
- Current input: Accuracy of the current
- Double pulse output: Accuracy of the pulses
- Relay output: Number of switching cycles

 **Heartbeat Verification** does not check the digital inputs and outputs and does not output any result for them.

 Detailed description of results classification:

User interface	<ul style="list-style-type: none"> ■ Not supported ■ Passed ■ Not done ■ Not plugged ■ Failed
----------------	--

Factory setting	Not done
-----------------	----------

System status

Navigation	  Expert → Diagnostics → Heartbeat Techn. → Verific. results → System status (12109)
------------	--

Prerequisite The **Failed** option is shown in the **Overall result** parameter (→ 213).

Description Displays the system condition. Tests the measuring device for active errors.

 Detailed description of results classification:

User interface	<ul style="list-style-type: none"> ■ Not supported ■ Passed ■ Not done ■ Failed
----------------	---

Factory setting	Not done
-----------------	----------

"Monitoring results" submenu

Navigation   Expert → Diagnostics → Heartbeat Techn. → Monitor. results

 Monitoring results	
Noise (12158)	→ 218
Coil current shot time (12150)	→ 218
Reference electrode potential against PE (12155)	→ 218
Build-up index (12111)	→ 218
HBSI (12116)	→ 219

Noise

Navigation   Expert → Diagnostics → Heartbeat Techn. → Monitor. results → Noise (12158)

Description Indicates the degree to which the differential signal from both measuring electrodes is dispersed.

User interface 0 to $3.0 \cdot 10^{38}$ µV

Coil current shot time

Navigation   Expert → Diagnostics → Heartbeat Techn. → Monitor. results → CoilCurrShotTime (12150)

Description Indicates the rise time of the coil current for the buildup of the magnetic field.

User interface 2 to 500 ms

Reference electrode potential against PE

Navigation   Expert → Diagnostics → Heartbeat Techn. → Monitor. results → RefElectrPotPE (12155)

Description Displays the voltage of the reference electrode in relation to the potential of the measuring tube.

User interface -30 to +30 V

Build-up index

Navigation   Expert → Diagnostics → Heartbeat Techn. → Monitor. results → Build-up index (12111)

Description Shows current build-up index value.

User interface 0.0 to 100.0 %

Factory setting 0.0 %

Additional information The formation of build-up is output as a percentage in the Build-up index value (→  83) parameter. The higher the percentage, the thicker the build-up.

Build-up index value (→  83) = 0%

- No build-up present
- Measuring tube as-delivered state (initial value)
- Measuring tube was cleaned thoroughly after formation of build-up

Build-up index value (→ 83) = 100%

- Value for the maximum measurable build-up thickness
- The thickness of the build-up at 100% varies depending on the process
- A value of 100% should not be equated with a blocked measuring tube

The percentage indicated in the Build-up index value (→ 83) parameter does not provide direct information about the absolute thickness or the composition of the build-up. Therefore, to make optimum use of the build-up detection function, it is necessary to first compare the formation of build-up in the process, as known from experience, with the associated Build-up index value (→ 83). The aim is to determine the Build-up index value (→ 83) at the time the cleaning is usually performed.

On the basis of the Build-up index value (→ 83) during cleaning, it is possible to make a valid assessment of the condition inside the measuring tube and to plan the cleaning using the build-up limit and build-up detection hysteresis parameters.

In addition, conclusions about possible effects on neighboring processes can be drawn from the Build-up index value (→ 83).

HBSI

Navigation

  Expert → Diagnostics → Heartbeat Techn. → Monitor. results → HBSI (12116)

Description

Displays the relative change of the entire sensor, with all its electrical, mechanical and electromechanical components incorporated in the sensor housing (including the measuring tube, electrodynamic pick-ups, excitation system, cables etc.), in % of the reference value.

User interface

-100.0 to 100.0 %

3.10.13 "Simulation" submenu

Navigation

  Expert → Diagnostics → Simulation

▶ Simulation	
Assign simulation process variable (1810)	→ 220
Process variable value (1811)	→ 221
Current input 1 to n simulation (1608-1 to n)	→ 221
Value current input 1 to n (1609-1 to n)	→ 222
Status input 1 to n simulation (1355-1 to n)	→ 222

Input signal level 1 to n (1356-1 to n)	→ 223
Current output 1 to n simulation (0354-1 to n)	→ 223
Current output value (0355)	→ 223
Frequency output 1 to n simulation (0472-1 to n)	→ 224
Frequency output 1 to n value (0473-1 to n)	→ 224
Pulse output simulation 1 to n (0458-1 to n)	→ 225
Pulse value 1 to n (0459-1 to n)	→ 225
Switch output simulation 1 to n (0462-1 to n)	→ 225
Switch state 1 to n (0463-1 to n)	→ 226
Relay output 1 to n simulation (0802-1 to n)	→ 226
Switch state 1 to n (0803-1 to n)	→ 227
Device alarm simulation (0654)	→ 227
Diagnostic event category (0738)	→ 228
Diagnostic event simulation (0737)	→ 228

Assign simulation process variable



Navigation

Expert → Diagnostics → Simulation → Assign proc.var. (1810)

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity

- Conductivity *
- Corrected conductivity *
- Temperature

Factory setting Off

Additional information *Description*

-  The simulation value of the process variable selected is defined in the **Process variable value** parameter (→ 221).

Process variable value



Navigation  Expert → Diagnostics → Simulation → Proc. var. value (1811)

Prerequisite A process variable is selected in the **Assign simulation process variable** parameter (→ 220).

Description Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

User entry Depends on the process variable selected

Factory setting 0

Additional information *User entry*

-  The unit of the displayed measured value is taken from the **System units** submenu (→ 62).

Current input 1 to n simulation



Navigation  Expert → Diagnostics → Simulation → Curr.inp 1 to n sim. (1608-1 to n)

Description Option for switching simulation of the current input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

-  The desired simulation value is defined in the **Value current input 1 to n** parameter.

Selection

- Off
- On

Factory setting Off

* Visibility depends on order options or device settings

Additional information*Selection*

- Off
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Current simulation is active.

Value current input 1 to n**Navigation** Expert → Diagnostics → Simulation → Value curr.inp 1 to n (1609–1 to n)**Prerequisite**

In the **Current input 1 to n simulation** parameter, the **On** option is selected.

Description

Use this function to enter the current value for the simulation. In this way, users can verify the correct configuration of the current input and the correct function of upstream feed-in units.

User entry

0 to 22.5 mA

Status input 1 to n simulation**Navigation** Expert → Diagnostics → Simulation → Status inp 1 to n sim (1355–1 to n)**Description**

Use this function to switch simulation of the status input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

 The desired simulation value is defined in the **Input signal level** parameter (→  223).

Selection

- Off
Simulation for the status input is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Simulation for the status input is active.

Input signal level 1 to n

Navigation	Expert → Diagnostics → Simulation → Signal level 1 to n (1356-1 to n)
Prerequisite	In the Status input simulation parameter (→ 222), the On option is selected.
Description	Use this function to select the signal level for the simulation of the status input. In this way, users can verify the correct configuration of the status input and the correct function of upstream feed-in units.
Selection	<ul style="list-style-type: none"> ▪ High ▪ Low

Current output 1 to n simulation

Navigation	Expert → Diagnostics → Simulation → Curr.outp 1 to n sim. (0354-1 to n)
Description	Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Factory setting	Off
Additional information	<p><i>Description</i></p> <p> The desired simulation value is defined in the Value current output 1 to n parameter.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ▪ On Current simulation is active.

Current output value

Navigation	Expert → Diagnostics → Simulation → Curr.outp val. (0355) Expert → Diagnostics → Simulation → Value curr.out 1 to n (0355-1 to n)
Prerequisite	In the Current output 1 to n simulation parameter, the On option is selected.
Description	Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.

User entry 3.59 to 22.5 mA

Additional information *Dependency*

The input range is dependent on the option selected in the **Current span** parameter (→ 108).

Frequency output 1 to n simulation



Navigation Expert → Diagnostics → Simulation → Freq.outp 1 to n sim. (0472–1 to n)

Prerequisite In the **Operating mode** parameter (→ 121), the **Frequency** option is selected.

Description Use this function to switch simulation of the frequency output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting Off

Additional information *Description*

The desired simulation value is defined in the **Frequency value 1 to n** parameter.

Selection

- Off
Frequency simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Frequency simulation is active.

Frequency output 1 to n value



Navigation Expert → Diagnostics → Simulation → Freq.outp 1 to n val. (0473–1 to n)

Prerequisite In the **Frequency simulation 1 to n** parameter, the **On** option is selected.

Description Use this function to enter a frequency value for the simulation. In this way, users can verify the correct adjustment of the frequency output and the correct function of downstream switching units.

User entry 0.0 to 12 500.0 Hz

Pulse output simulation 1 to n**Navigation**

Expert → Diagnostics → Simulation → Puls.outp.sim. 1 to n (0458-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 121), the **Pulse** option is selected.

Description

Use this function to switch simulation of the pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Fixed value
- Down-counting value

Factory setting Off

Additional information*Description*

The desired simulation value is defined in the **Pulse value 1 to n** parameter.

Selection

- Off
Pulse simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- Fixed value
Pulses are continuously output with the pulse width specified in the **Pulse width** parameter (→ 124).
- Down-counting value
The pulses specified in the **Pulse value** parameter (→ 225) are output.

Pulse value 1 to n**Navigation**

Expert → Diagnostics → Simulation → Pulse value 1 to n (0459-1 to n)

Prerequisite

In the **Pulse output simulation 1 to n** parameter, the **Down-counting value** option is selected.

Description

Use this function to enter a pulse value for the simulation. In this way, users can verify the correct adjustment of the pulse output and the correct function of downstream switching units.

User entry

0 to 65 535

Switch output simulation 1 to n**Navigation**

Expert → Diagnostics → Simulation → Switch sim. 1 to n (0462-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 121), the **Switch** option is selected.

Description	Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	<ul style="list-style-type: none">▪ Off▪ On
Factory setting	Off
Additional information	<p><i>Description</i></p> <p> The desired simulation value is defined in the Switch state 1 to n parameter.</p> <p><i>Selection</i></p> <ul style="list-style-type: none">▪ Off Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.▪ On Switch simulation is active.

Switch state 1 to n



Navigation

 Expert → Diagnostics → Simulation → Switch state 1 to n (0463-1 to n)

Description

Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.

Selection

- Open
- Closed

Additional information

Selection

- Open
Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- Closed
Switch simulation is active.

Relay output 1 to n simulation



Navigation

 Expert → Diagnostics → Simulation → Relay out. 1 to n sim (0802-1 to n)

Description

Use this function to switch simulation of the relay output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The desired simulation value is defined in the **Switch state 1 to n** parameter.

Selection

- Off

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Relay simulation is active.

Switch state 1 to n**Navigation**

Expert → Diagnostics → Simulation → Switch state 1 to n (0803–1 to n)

Prerequisite

The **On** option is selected in the **Switch output simulation 1 to n** parameter parameter.

Description

Use this function to select a relay value for the simulation. In this way, users can verify the correct adjustment of the relay output and the correct function of downstream switching units.

Selection

- Open
- Closed

Additional information*Selection*

- Open

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Closed

Relay simulation is active.

Device alarm simulation**Navigation**

Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)

Description

Use this function to switch the device alarm on and off.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Diagnostic event category

Navigation Expert → Diagnostics → Simulation → Event category (0738)

Description Use this function to select the category of the diagnostic events that are displayed for the simulation in the **Diagnostic event simulation** parameter (→ 228).

Selection

- Sensor
- Electronics
- Configuration
- Process

Factory setting Process

Diagnostic event simulation

Navigation Expert → Diagnostics → Simulation → Diag. event sim. (0737)

Description Use this function to select a diagnostic event for the simulation process that is activated.

Selection

- Off
- Diagnostic event picklist (depends on the category selected)

Factory setting Off

Additional information *Description*

For the simulation, you can choose from the diagnostic events of the category selected in the **Diagnostic event category** parameter (→ 228).

4 Country-specific factory settings

4.1 SI units

 Not valid for USA and Canada.

4.1.1 System units

Process variable	Unit
Volume flow	l/h
Volume	m ³
Conductivity	µS/cm
Temperature	°C
Mass flow	kg/h
Mass	kg
Density	kg/l
Corrected volume flow	Nl/h
Corrected volume	Nm ³

4.1.2 Full scale values

 The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [mm]	(v ~ 2.5 m/s) [dm ³ /min]
2	0.5
4	2
8	8
15	25
25	75
32	125
40	200
50	300
65	500
80	750
100	1200
125	1850

Nominal diameter [mm]	(v ~ 2.5 m/s) [m ³ /h]
150	150
200	300
250	500
300	750

Nominal diameter [mm]	(v ~ 2.5 m/s) [m ³ /h]
350	1000
400	1200
450	1500
500	2000
600	2500
700	3500
750	4000
800	4500
900	6000
1000	7000
1200	10000
1400	14000
1600	18000
1800	23000
2000	28500
2200	34000
2400	40000
2600	48000
2800	55500
3000	63500

4.1.3 Output current span

Output	Current range
Current output 1...n	4 to 20 mA NAMUR

4.1.4 Pulse value

Nominal diameter [mm]	(~ 2 pulse/s at v ~ 2.5 m/s) [dm ³]
2	0.005
4	0.025
8	0.1
15	0.2
25	0.5
32	1
40	1.5
50	2.5
65	5
80	5
100	10
125	15

Nominal diameter [mm]	(~ 2 pulse/s at v ~ 2.5 m/s) [m ³]
150	0.03
200	0.05
250	0.05
300	0.1
350	0.1
400	0.15
450	0.25
500	0.25
600	0.3
700	0.5
750	0.5
800	0.75
900	0.75
1000	1
1200	1.5
1400	2
1600	2.5
1800	3
2000	3.5
2200	4.5
2400	5.5
2600	7
2800	8
3000	9

4.1.5 Switch-on point low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	(v ~ 0.04 m/s) [dm ³ /min]
2	0.01
4	0.05
8	0.1
15	0.5
25	1
32	2
40	3
50	5
65	8
80	12
100	20
125	30

Nominal diameter [mm]	($v \sim 0.04 \text{ m/s}$) [m^3/h]
150	2.5
200	5
250	7.5
300	10
350	15
400	20
450	25
500	30
600	40
700	50
750	60
800	75
900	100
1000	125
1200	150
1400	225
1600	300
1800	350
2000	450
2200	540
2400	650
2600	775
2800	875
3000	1025

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Process variable	Unit
Volume flow	gal/min (us)
Volume	gal (us)
Temperature	°F
Mass flow	lb/min
Mass	lb
Density	lb/ft ³
Corrected volume flow	Sft ³ /h
Corrected volume	Sft ³

4.2.2 Full scale values



The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [in]	(v ~ 2.5 m/s) [gal/min]
1/12	0.1
1/8	0.5
3/8	2
1/2	6
1	18
1½	50
2	75
3	200
4	300
5	450
6	600
8	1200
10	1500
12	2400
14	3600
15	4800
16	4800
18	6000
20	7500
24	10500
28	13500
30	16500
32	19500
36	24000
40	30000
42	33000
48	42000

Nominal diameter [in]	(v ~ 2.5 m/s) [Mgal/d]
54	75
60	95
66	120
72	140
78	175
84	190
90	220
96	265

Nominal diameter [in]	($v \sim 2.5$ m/s) [Mgal/d]
102	300
108	340
114	375
120	415

4.2.3 Output current span

Output	Current range
Current output 1...n	4 to 20 mA US

4.2.4 Pulse value

Nominal diameter [in]	(~ 2 pulse/s at $v \sim 2.5$ m/s) [gal]
1/12	0.001
1/8	0.005
3/8	0.02
1/2	0.1
1	0.2
1½	0.5
2	0.5
3	2
4	2
5	5
6	5
8	10
10	15
12	25
14	30
15	50
16	50
18	50
20	75
24	100
28	125
30	150
32	200
36	225
40	250
42	250
48	400

Nominal diameter [in]	(~ 2 pulse/s at v ~ 2.5 m/s) [Mgal]
54	0.0005
60	0.0005
66	0.0008
72	0.0008
78	0.001
84	0.0011
90	0.0013
96	0.0015
102	0.0017
108	0.0020
114	0.0022
120	0.0024

4.2.5 Switch-on point low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	(v ~ 0.04 m/s) [gal/min]
1/12	0.002
1/8	0.008
3/8	0.025
1/2	0.15
1	0.25
1½	0.75
2	1.25
3	2.5
4	4
5	7
6	12
8	15
10	30
12	45
14	60
15	60
16	60
18	90
20	120
24	180
28	210
30	270
32	300
36	360

Nominal diameter [in]	(v ~ 0.04 m/s) [gal/min]
40	480
42	600
48	600

Nominal diameter [in]	(v ~ 0.04 m/s) [Mgal/d]
54	1.3
60	1.3
66	2.2
72	2.6
78	3.0
84	3.2
90	3.6
96	4.0
102	5.0
108	5.0
114	6.0
120	7.0

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Conductivity	µS/mm	Microsiemens/length unit
	nS/cm, µS/cm, mS/cm, S/cm	Nano-, Micro-, Milli-, Siemens/length unit
	µS/m, mS/m, S/m, kS/m, MS/m	Micro-, Milli-, Siemens, Kilo-, Megasiemens/length unit
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Temperature	°C , K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Time	s, m, h, d, y	Second, minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Corrected volume	Sft ³ , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Corrected volume flow	Sft ³ /s, Sft ³ /min, Sft ³ /h, Sft ³ /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot

Process variable	Units	Explanation
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Corrected volume flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

0/4 mA value (Parameter)	102
0% bargraph value 1 (Parameter)	21
0% bargraph value 3 (Parameter)	24
0% bargraph value 5 (Parameter)	27
0% bargraph value 7 (Parameter)	30
2.4 GHz WLAN channel (Parameter)	158
20 mA value (Parameter)	102
100% bargraph value 1 (Parameter)	21
100% bargraph value 3 (Parameter)	24
100% bargraph value 5 (Parameter)	27
100% bargraph value 7 (Parameter)	30

A

Activate SW option (Parameter)	50
Active level (Parameter)	105
Actual diagnostics (Parameter)	177
Administration (Submenu)	47
Alarm delay (Parameter)	39, 151
AM/PM (Parameter)	210
Analog inputs (Submenu)	165
Analog outputs (Submenu)	168
APL port (Submenu)	160
Application (Submenu)	172
Application relation (Submenu)	151
Apply I/O configuration (Parameter)	100
AR state (Parameter)	152
Assign behavior of diagnostic no. 043 (Parameter)	40
Assign behavior of diagnostic no. 143 (Parameter)	41
Assign behavior of diagnostic no. 302 (Parameter)	41
Assign behavior of diagnostic no. 376 (Parameter)	41
Assign behavior of diagnostic no. 377 (Parameter)	42
Assign behavior of diagnostic no. 441 (Parameter)	42
Assign behavior of diagnostic no. 442 (Parameter)	42
Assign behavior of diagnostic no. 443 (Parameter)	43
Assign behavior of diagnostic no. 444 (Parameter)	43
Assign behavior of diagnostic no. 531 (Parameter)	44
Assign behavior of diagnostic no. 832 (Parameter)	44
Assign behavior of diagnostic no. 833 (Parameter)	44
Assign behavior of diagnostic no. 834 (Parameter)	45
Assign behavior of diagnostic no. 835 (Parameter)	45
Assign behavior of diagnostic no. 842 (Parameter)	45
Assign behavior of diagnostic no. 937 (Parameter)	46
Assign behavior of diagnostic no. 938 (Parameter)	47
Assign behavior of diagnostic no. 961 (Parameter)	46
Assign behavior of diagnostic no. 962 (Parameter)	46
Assign channel 1 (Parameter)	194
Assign channel 2 (Parameter)	195
Assign channel 3 (Parameter)	196
Assign channel 4 (Parameter)	196
Assign diagnostic behavior (Parameter)	132, 141
Assign flow direction check (Parameter)	136, 140
Assign frequency output (Parameter)	126
Assign limit (Parameter)	133, 141
Assign process variable (Parameter)	75, 165
Assign process variable 1 to n (Parameter)	173

Assign pulse output (Parameter)	123
Assign simulation process variable (Parameter)	220
Assign SSID name (Parameter)	158
Assign status (Parameter)	136, 142
Assign status input (Parameter)	104

B

Backlight (Parameter)	35
Backup state (Parameter)	37
Bootloader revision (Parameter)	188, 189, 190, 191, 192, 193
Build no. software (Parameter)	187, 188, 190, 191, 192, 193
Build-up detection (Submenu)	82
Build-up index (Parameter)	218
Build-up index adjustment (Wizard)	96
Build-up index operating mode (Parameter)	98
Build-up index reference value E 1 (Parameter)	97
Build-up index reference value E 2 (Parameter)	97

C

Calibration (Submenu)	95
Calibration factor (Parameter)	95
Clear logging data (Parameter)	197
Coil current shot time (Parameter)	218
Communication (Submenu)	145
Comparison result (Parameter)	37
Conductivity (Parameter)	54
Conductivity calibration factor (Parameter)	96
Conductivity damping (Parameter)	73
Conductivity factor (Parameter)	91
Conductivity measurement (Parameter)	73
Conductivity offset (Parameter)	91
Conductivity temperature coefficient (Parameter)	74
Conductivity unit (Parameter)	64
Configuration backup (Submenu)	35
Configuration counter (Parameter)	151, 186
Configuration management (Parameter)	36
Confirm access code (Parameter)	48
Connection state (Parameter)	159
Contrast display (Parameter)	35
Corrected conductivity (Parameter)	55
Corrected conductivity factor (Parameter)	94
Corrected conductivity offset (Parameter)	93
Corrected volume flow (Parameter)	54
Corrected volume flow factor (Parameter)	92
Corrected volume flow offset (Parameter)	92
Corrected volume flow reference density (Parameter)	74
Corrected volume flow unit (Parameter)	67
Corrected volume unit (Parameter)	68
Current input 1 to n (Submenu)	57, 100
Current input 1 to n simulation (Parameter)	221
Current output 1 to n (Submenu)	106
Current output 1 to n simulation (Parameter)	223
Current output value (Parameter)	223
Current range output (Parameter)	108

Current span (Parameter)	102
D	
Damping (Parameter)	167
Damping current output (Parameter)	116
Damping output (Parameter)	129
Data logging (Parameter)	197
Data logging (Submenu)	194
Data logging control (Parameter)	198
Data logging status (Parameter)	199
Date/time (manually entered) (Parameter)	214
Date/time format (Parameter)	69
Day (Parameter)	209
Decimal places 1 (Parameter)	22
Decimal places 2 (Parameter)	23
Decimal places 3 (Parameter)	25
Decimal places 4 (Parameter)	26
Decimal places 5 (Parameter)	28
Decimal places 6 (Parameter)	29
Decimal places 7 (Parameter)	31
Decimal places 8 (Parameter)	32
Default gateway (Parameter)	160, 162
Define access code (Parameter)	48
Define access code (Wizard)	47
Density (Parameter)	55
Density source (Parameter)	86
Density unit (Parameter)	67
Descriptor (Parameter)	147
Device alarm simulation (Parameter)	227
Device information (Submenu)	183
Device location (Parameter)	147
Device name (Parameter)	185
Device reset (Parameter)	50
Device tag (Parameter)	147, 184
Device type (Parameter)	150
Diagnostic behavior (Submenu)	39
Diagnostic event category (Parameter)	228
Diagnostic event simulation (Parameter)	228
Diagnostic handling (Submenu)	38
Diagnostic list (Submenu)	179
Diagnostics (Submenu)	177
Diagnostics 1 (Parameter)	179
Diagnostics 2 (Parameter)	180
Diagnostics 3 (Parameter)	180
Diagnostics 4 (Parameter)	180
Diagnostics 5 (Parameter)	181
Direct access	
0/4 mA value	
Current input 1 to n (1606–1 to n)	102
0% bargraph value 1 (0123)	21
0% bargraph value 3 (0124)	24
0% bargraph value 5 (0153)	27
0% bargraph value 7 (0154)	30
2.4 GHz WLAN channel (2704)	158
20 mA value	
Current input 1 to n (1607–1 to n)	102
100% bargraph value 1 (0125)	21
100% bargraph value 3 (0126)	24
100% bargraph value 5 (0155)	27

100% bargraph value 7 (0156)	30
Activate SW option (0029)	50
Active level	
Status input 1 to n (1351–1 to n)	105
Actual diagnostics (0691)	177
Alarm delay (0651)	39
Alarm delay (4314)	151
AM/PM (2813)	210
Apply I/O configuration (3907)	100
AR state (2088)	152
Assign behavior of diagnostic no. 043 (0650)	40
Assign behavior of diagnostic no. 143 (0646)	41
Assign behavior of diagnostic no. 302 (0739)	41
Assign behavior of diagnostic no. 376 (0645)	41
Assign behavior of diagnostic no. 377 (0777)	42
Assign behavior of diagnostic no. 441 (0657)	42
Assign behavior of diagnostic no. 442 (0658)	42
Assign behavior of diagnostic no. 443 (0659)	43
Assign behavior of diagnostic no. 444 (0740)	43
Assign behavior of diagnostic no. 531 (0741)	44
Assign behavior of diagnostic no. 832 (0681)	44
Assign behavior of diagnostic no. 833 (0682)	44
Assign behavior of diagnostic no. 834 (0700)	45
Assign behavior of diagnostic no. 835 (0702)	45
Assign behavior of diagnostic no. 842 (0638)	45
Assign behavior of diagnostic no. 937 (0743)	46
Assign behavior of diagnostic no. 938 (0642)	47
Assign behavior of diagnostic no. 961 (0736)	46
Assign behavior of diagnostic no. 962 (0745)	46
Assign channel 1 (0851)	194
Assign channel 2 (0852)	195
Assign channel 3 (0853)	196
Assign channel 4 (0854)	196
Assign diagnostic behavior	
Pulse/frequency/switch output 1 to n (0482–1 to n)	132
Relay output 1 to n (0806–1 to n)	141
Assign flow direction check	
Pulse/frequency/switch output 1 to n (0484–1 to n)	136
Relay output 1 to n (0808–1 to n)	140
Assign frequency output	
Pulse/frequency/switch output 1 to n (0478–1 to n)	126
Assign limit	
Pulse/frequency/switch output 1 to n (0483–1 to n)	133
Relay output 1 to n (0807–1 to n)	141
Assign process variable (1837)	
.	75
Assign process variable (11074)	
.	165
Assign process variable 1 to n (11104–1 to n)	
.	173
Assign pulse output	
Pulse/frequency/switch output 1 to n (0460–1 to n)	123
Assign simulation process variable (1810)	
.	220
Assign SSID name (2708)	
.	158
Assign status	
Pulse/frequency/switch output 1 to n (0485–1 to n)	136

Relay output 1 to n (0805–1 to n)	142
Assign status input	
Status input 1 to n (1352–1 to n)	104
Backlight (0111)	35
Backup state (2759)	37
Bootloader revision	
I/O module 2 (0073)	190, 191, 192
I/O module 3 (0073)	190, 191, 192
I/O module 4 (0073)	190, 191, 192
Bootloader revision (0073)	188, 189, 193
Build no. software	
I/O module 2 (0079)	190, 191, 192
I/O module 3 (0079)	190, 191, 192
I/O module 4 (0079)	190, 191, 192
Build no. software (0079)	187, 188, 193
Build-up index (12111)	218
Build-up index operating mode (6734)	98
Build-up index reference value E 1 (6475)	97
Build-up index reference value E 2 (6474)	97
Calibration factor (6522)	95
Clear logging data (0855)	197
Coil current shot time (12150)	218
Comparison result (2760)	37
Conductivity (1850)	54
Conductivity calibration factor (6718)	96
Conductivity damping (1803)	73
Conductivity factor (1849)	91
Conductivity measurement (6514)	73
Conductivity offset (1848)	91
Conductivity temperature coefficient (1891)	74
Conductivity unit (0582)	64
Configuration counter (2751)	186
Configuration counter (4309)	151
Configuration management (2758)	36
Connection state (2722)	159
Contrast display (0105)	35
Corrected conductivity (1853)	55
Corrected conductivity factor (1871)	94
Corrected conductivity offset (1870)	93
Corrected volume flow (1851)	54
Corrected volume flow factor (1867)	92
Corrected volume flow offset (1866)	92
Corrected volume flow reference density (1885)	74
Corrected volume flow unit (0558)	67
Corrected volume unit (0575)	68
Current input 1 to n simulation (1608–1 to n)	221
Current output 1 to n simulation (0354–1 to n)	223
Current output value (0355)	223
Current range output	
Current output 1 to n (0353–1 to n)	108
Current span	
Current input 1 to n (1605–1 to n)	102
Damping (11073)	167
Damping current output	
Current output 1 to n (0363–1 to n)	116
Damping output	
Pulse/frequency/switch output 1 to n (0477–1 to n)	129
Data logging (0860)	197
Data logging control (0857)	198
Data logging status (0858)	199
Date/time (manually entered) (12142)	214
Date/time format (2812)	69
Day (2842)	209
Decimal places 1 (0095)	22
Decimal places 2 (0117)	23
Decimal places 3 (0118)	25
Decimal places 4 (0119)	26
Decimal places 5 (0149)	28
Decimal places 6 (0150)	29
Decimal places 7 (0151)	31
Decimal places 8 (0152)	32
Default gateway (7210)	162
Default gateway (7264)	160
Density (1857)	55
Density source (6615)	86
Density unit (0555)	67
Descriptor (4311)	147
Device alarm simulation (0654)	227
Device location (4308)	147
Device name (0020)	185
Device reset (0000)	50
Device tag (0011)	184
Device tag (4301)	147
Device type (4306)	150
Diagnostic event category (0738)	228
Diagnostic event simulation (0737)	228
Diagnostics 1 (0692)	179
Diagnostics 2 (0693)	180
Diagnostics 3 (0694)	180
Diagnostics 4 (0695)	180
Diagnostics 5 (0696)	181
Direct access (0106)	14
Display damping (0094)	33
Display interval (0096)	32
Display language (0104)	17
Empty pipe adjust value (6527)	79
Empty pipe detection (1860)	78
ENP version (0012)	187
Enter access code (0003)	16
Entire logging duration (0861)	199
Extended order code 1 (0023)	186
Extended order code 2 (0021)	186
Extended order code 3 (0022)	186
External density (6630)	87
External device information (12101)	211
External temperature (6673)	87
Failure behavior current output	
Current output 1 to n (0364–1 to n)	117
Failure current	
Current output 1 to n (0352–1 to n)	118
Failure frequency	
Pulse/frequency/switch output 1 to n (0474–1 to n)	131
Failure mode	
Current input 1 to n (1601–1 to n)	103
Pulse/frequency/switch output 1 to n (0451–1 to n)	130

Pulse/frequency/switch output 1 to n (0480–1 to n)	125	IP address domain name server (2720)	160																																																																																																																														
Pulse/frequency/switch output 1 to n (0486–1 to n)	137	IP address IO controller (2094)	152																																																																																																																														
Relay output 1 to n (0811–1 to n)	144	IPv4 address (4316)	147																																																																																																																														
Failure value		IPv4 default gateway (4318)	148																																																																																																																														
Current input 1 to n (1602–1 to n)	103	IPv4 subnet mask (4317)	148																																																																																																																														
Filter options (0705)	182	Last backup (2757)	36																																																																																																																														
Filter options (6710)	70	Last change (4315)	149																																																																																																																														
Firmware version		Location (2755)	207																																																																																																																														
I/O module 2 (0072)	189, 191, 192	Locking status (0004)	14																																																																																																																														
I/O module 3 (0072)	189, 191, 192	Logging delay (0859)	198																																																																																																																														
I/O module 4 (0072)	189, 191, 192	Logging interval (0856)	196																																																																																																																														
Firmware version (0010)	185	Login page (7273)	164																																																																																																																														
Firmware version (0072)	187, 188, 193	Lower range value output																																																																																																																															
Firmware version (4304)	149	Current output 1 to n (0367–1 to n)	109	Fixed current		MAC address (7214)	162	Flow damping (6661)	72	Flow override (1839)	72	Flow velocity (1854)	54	Flow velocity factor (1880)	94	Flow velocity offset (1879)	94	Format display (0098)	18	Frequency output 1 to n simulation (0472–1 to n)	224	Frequency output 1 to n value (0473–1 to n)	224	Full pipe adjust value (6548)	80	Gateway IP address (2719)	159	Hardware version (4303)	149	HBSI (12116)	85, 219	HBSI hysteresis (6473)	85	HBSI limit (6472)	85	Header (0097)	33	Header text (0112)	34	Hour (2843)	209	I/O alteration code (2762)	100	I/O module (12145)	216	I/O module 1 to n information (3906–1 to n)	99	I/O module 1 to n terminal numbers (3902–1 to n)	98	I/O module 1 to n type (3901–1 to n)	99	I/O module 2 terminal numbers (3902–2)	189, 190, 192	I/O module 3 terminal numbers (3902–3)	189, 190, 192	I/O module 4 terminal numbers (3902–4)	189, 190, 192	Input signal level 1 to n (1356–1 to n)	223	Installation date (4312)	148	Installation direction (1809)	88	Integration time (6533)	88	Invert output signal		Pulse/frequency/switch output 1 to n (0454–1 to n)	127	Pulse/frequency/switch output 1 to n (0470–1 to n)	138	IP address (7209)	162	IP address (7263)	160	IP address backup IO controller (2096)	153	Measuring mode		Maximum electronics temperature (0665)	204	Current output 1 to n (0366–1 to n)	119	Value current output 1 to n (0366–1 to n)	59	Measured current		Measured current 1 to n (1604–1 to n)	57	Current output 1 to n (0366–1 to n)	119	Measured value EPD (6559)	80	Measured values (12102)	212	Measured values 1 to n (1603–1 to n)	57	Measuring mode		Pulse/frequency/switch output 1 to n (0457–1 to n)	124	Pulse/frequency/switch output 1 to n (0479–1 to n)	128	Measuring mode current output		Pulse/frequency/switch output 1 to n (0475–1 to n)	128	Current output 1 to n (0351–1 to n)	112	Measuring period (6536)	89	Measuring value at maximum frequency		Pulse/frequency/switch output 1 to n (0476–1 to n)	128	Pulse/frequency/switch output 1 to n (0453–1 to n)	127	Measuring value at minimum frequency		Minimum electronics temperature (0688)	204	Pulse/frequency/switch output 1 to n (0453–1 to n)	127	Minimum value (6547)	205	Minute (2844)	210	Month (2845)	209
Current output 1 to n (0367–1 to n)	109																																																																																																																																
Fixed current		MAC address (7214)	162	Flow damping (6661)	72	Flow override (1839)	72	Flow velocity (1854)	54	Flow velocity factor (1880)	94	Flow velocity offset (1879)	94	Format display (0098)	18	Frequency output 1 to n simulation (0472–1 to n)	224	Frequency output 1 to n value (0473–1 to n)	224	Full pipe adjust value (6548)	80	Gateway IP address (2719)	159	Hardware version (4303)	149	HBSI (12116)	85, 219	HBSI hysteresis (6473)	85	HBSI limit (6472)	85	Header (0097)	33	Header text (0112)	34	Hour (2843)	209	I/O alteration code (2762)	100	I/O module (12145)	216	I/O module 1 to n information (3906–1 to n)	99	I/O module 1 to n terminal numbers (3902–1 to n)	98	I/O module 1 to n type (3901–1 to n)	99	I/O module 2 terminal numbers (3902–2)	189, 190, 192	I/O module 3 terminal numbers (3902–3)	189, 190, 192	I/O module 4 terminal numbers (3902–4)	189, 190, 192	Input signal level 1 to n (1356–1 to n)	223	Installation date (4312)	148	Installation direction (1809)	88	Integration time (6533)	88	Invert output signal		Pulse/frequency/switch output 1 to n (0454–1 to n)	127	Pulse/frequency/switch output 1 to n (0470–1 to n)	138	IP address (7209)	162	IP address (7263)	160	IP address backup IO controller (2096)	153	Measuring mode		Maximum electronics temperature (0665)	204	Current output 1 to n (0366–1 to n)	119	Value current output 1 to n (0366–1 to n)	59	Measured current		Measured current 1 to n (1604–1 to n)	57	Current output 1 to n (0366–1 to n)	119	Measured value EPD (6559)	80	Measured values (12102)	212	Measured values 1 to n (1603–1 to n)	57	Measuring mode		Pulse/frequency/switch output 1 to n (0457–1 to n)	124	Pulse/frequency/switch output 1 to n (0479–1 to n)	128	Measuring mode current output		Pulse/frequency/switch output 1 to n (0475–1 to n)	128	Current output 1 to n (0351–1 to n)	112	Measuring period (6536)	89	Measuring value at maximum frequency		Pulse/frequency/switch output 1 to n (0476–1 to n)	128	Pulse/frequency/switch output 1 to n (0453–1 to n)	127	Measuring value at minimum frequency		Minimum electronics temperature (0688)	204	Pulse/frequency/switch output 1 to n (0453–1 to n)	127	Minimum value (6547)	205	Minute (2844)	210	Month (2845)	209				
MAC address (7214)	162																																																																																																																																
Flow damping (6661)	72																																																																																																																																
Flow override (1839)	72																																																																																																																																
Flow velocity (1854)	54																																																																																																																																
Flow velocity factor (1880)	94																																																																																																																																
Flow velocity offset (1879)	94																																																																																																																																
Format display (0098)	18																																																																																																																																
Frequency output 1 to n simulation (0472–1 to n)	224																																																																																																																																
Frequency output 1 to n value (0473–1 to n)	224																																																																																																																																
Full pipe adjust value (6548)	80																																																																																																																																
Gateway IP address (2719)	159																																																																																																																																
Hardware version (4303)	149																																																																																																																																
HBSI (12116)	85, 219																																																																																																																																
HBSI hysteresis (6473)	85																																																																																																																																
HBSI limit (6472)	85																																																																																																																																
Header (0097)	33																																																																																																																																
Header text (0112)	34																																																																																																																																
Hour (2843)	209																																																																																																																																
I/O alteration code (2762)	100																																																																																																																																
I/O module (12145)	216																																																																																																																																
I/O module 1 to n information (3906–1 to n)	99																																																																																																																																
I/O module 1 to n terminal numbers (3902–1 to n)	98																																																																																																																																
I/O module 1 to n type (3901–1 to n)	99																																																																																																																																
I/O module 2 terminal numbers (3902–2)	189, 190, 192																																																																																																																																
I/O module 3 terminal numbers (3902–3)	189, 190, 192																																																																																																																																
I/O module 4 terminal numbers (3902–4)	189, 190, 192																																																																																																																																
Input signal level 1 to n (1356–1 to n)	223																																																																																																																																
Installation date (4312)	148																																																																																																																																
Installation direction (1809)	88																																																																																																																																
Integration time (6533)	88																																																																																																																																
Invert output signal		Pulse/frequency/switch output 1 to n (0454–1 to n)	127																																																																																																																														
Pulse/frequency/switch output 1 to n (0470–1 to n)	138																																																																																																																																
IP address (7209)	162																																																																																																																																
IP address (7263)	160																																																																																																																																
IP address backup IO controller (2096)	153																																																																																																																																
Measuring mode		Maximum electronics temperature (0665)	204																																																																																																																														
Current output 1 to n (0366–1 to n)	119																																																																																																																																
Value current output 1 to n (0366–1 to n)	59																																																																																																																																
Measured current		Measured current 1 to n (1604–1 to n)	57																																																																																																																														
Current output 1 to n (0366–1 to n)	119																																																																																																																																
Measured value EPD (6559)	80																																																																																																																																
Measured values (12102)	212																																																																																																																																
Measured values 1 to n (1603–1 to n)	57																																																																																																																																
Measuring mode		Pulse/frequency/switch output 1 to n (0457–1 to n)	124																																																																																																																														
Pulse/frequency/switch output 1 to n (0479–1 to n)	128																																																																																																																																
Measuring mode current output		Pulse/frequency/switch output 1 to n (0475–1 to n)	128																																																																																																																														
Current output 1 to n (0351–1 to n)	112																																																																																																																																
Measuring period (6536)	89																																																																																																																																
Measuring value at maximum frequency		Pulse/frequency/switch output 1 to n (0476–1 to n)	128																																																																																																																														
Pulse/frequency/switch output 1 to n (0453–1 to n)	127																																																																																																																																
Measuring value at minimum frequency		Minimum electronics temperature (0688)	204																																																																																																																														
Pulse/frequency/switch output 1 to n (0453–1 to n)	127																																																																																																																																
Minimum value (6547)	205																																																																																																																																
Minute (2844)	210																																																																																																																																
Month (2845)	209																																																																																																																																

Network security (2705)	155
New adjustment (6560)	79
Noise (12158)	218
Nominal diameter (2807)	95
Off value low flow cutoff (1804)	76
On value low flow cutoff (1805)	75
Operating mode	
Pulse/frequency/switch output 1 to n (0469–1 to n)	121
Operating time (0652)	36, 49, 179
Operating time (12126)	214
Operating time from restart (0653)	178
Order code (0008)	185
Output current	
Current output 1 to n (0361–1 to n)	118
Value current output 1 to n (0361–1 to n)	59
Output frequency	
Pulse/frequency/switch output 1 to n (0471–1 to n)	59, 131
Output values (12103)	212
Partially filled pipe (6465)	207
Plant operator (2754)	207
Powerless relay status	
Relay output 1 to n (0816–1 to n)	144
Preset value 1 to n (11108–1 to n)	175
Pressure shock suppression (1806)	76
Previous diagnostics (0690)	178
Process value (11071)	166
Process value status (11076)	167
Process value status (Hex) (11075)	167
Process variable current output	
Current output 1 to n (0359–1 to n)	107
Process variable unit (11072)	166
Process variable unit 1 to n (11107–1 to n)	174
Process variable value (1811)	221
Profile (4310)	150
Profile revision (4319)	150
PROFINET device name (2071)	146
Progress (2808)	97, 212
Progress (6571)	79
Pulse output 1 to n (0456–1 to n)	60, 126
Pulse output simulation 1 to n (0458–1 to n)	225
Pulse scaling	
Pulse/frequency/switch output 1 to n (0455–1 to n)	123
Pulse value 1 to n (0459–1 to n)	225
Pulse width	
Pulse/frequency/switch output 1 to n (0452–1 to n)	124
Received signal strength (2721)	159
Reference electrode potential against PE (12155)	218
Relay output 1 to n simulation (0802–1 to n)	226
Relay output function	
Relay output 1 to n (0804–1 to n)	140
Reset access code (0024)	49
Reset all totalizers (2806)	172
Reset min/max values (6541)	202
Response time	
Pulse/frequency/switch output 1 to n (0491–1 to n)	130
Response time empty pipe detection (1859)	78
Response time status input	
Status input 1 to n (1354–1 to n)	105
Security identification (2718)	156
Select antenna (2713)	159
Sensor (12152)	215
Sensor electronic module (ISEM) (12151)	216
Separator (0101)	34
Serial number (0009)	184
Serial number (4307)	148
Signal mode	
Current input 1 to n (1610–1 to n)	101
Current output 1 to n (0377–1 to n)	107
Pulse/frequency/switch output 1 to n (0490–1 to n)	121
Signal to noise ratio (6469)	97
Simulated status (11079)	168
Simulation (11080)	167
Simulation value (11078)	168
Software option overview (0015)	51
SSID name (2707)	158
SSID name (2714)	155
Start verification (12127)	211
Startup settings (4313)	150
Status (12153)	213
Status input 1 to n simulation (1355–1 to n)	222
Subnet mask (7211)	162
Subnet mask (7265)	161
Switch cycles	
Relay output 1 to n (0815–1 to n)	61
Switch output function	
Pulse/frequency/switch output 1 to n (0481–1 to n)	132
Switch output simulation 1 to n (0462–1 to n)	225
Switch point empty pipe detection (6562)	78
Switch state	
Pulse/frequency/switch output 1 to n (0461–1 to n)	60, 138
Relay output 1 to n (0801–1 to n)	61, 144
Switch state 1 to n (0463–1 to n)	226
Switch state 1 to n (0803–1 to n)	227
Switch-off delay	
Pulse/frequency/switch output 1 to n (0465–1 to n)	137
Relay output 1 to n (0813–1 to n)	143
Switch-off value	
Pulse/frequency/switch output 1 to n (0464–1 to n)	135
Relay output 1 to n (0809–1 to n)	142
Switch-on delay	
Pulse/frequency/switch output 1 to n (0467–1 to n)	136
Relay output 1 to n (0814–1 to n)	143
Switch-on value	
Pulse/frequency/switch output 1 to n (0466–1 to n)	135

Relay output 1 to n (0810–1 to n)	143
System status (12109)	217
Target mode (4302)	151
Temperature (1852)	55
Temperature damping (1886)	74
Temperature factor (1869)	93
Temperature offset (1868)	92
Temperature source (6712)	87
Temperature unit (0557)	65
Terminal number	
Current input 1 to n (1611–1 to n)	101
Current output 1 to n (0379–1 to n)	107
Pulse/frequency/switch output 1 to n (0492–1 to n)	120
Relay output 1 to n (0812–1 to n)	139
Status input 1 to n (1358–1 to n)	104
Totalizer 1 to n control (11101–1 to n)	175
Totalizer 1 to n failure behavior (11103–1 to n) . .	175
Totalizer 1 to n operation mode (11102–1 to n) .	175
Totalizer 1 to n status (11109–1 to n)	56, 176
Totalizer 1 to n status (Hex) (11106–1 to n) .	56, 176
Totalizer 1 to n value (11105–1 to n)	56, 176
Transmitter identifier (2765)	50
Upper range value output	
Current output 1 to n (0372–1 to n)	111
User name (2715)	156
User role (0005)	15
Value 1 display (0107)	20
Value 2 display (0108)	22
Value 3 display (0110)	23
Value 4 display (0109)	25
Value 5 display (0145)	26
Value 6 display (0146)	28
Value 7 display (0147)	29
Value 8 display (0148)	31
Value current input 1 to n (1609–1 to n)	222
Value current output 1 to n (0355–1 to n)	223
Value status input	
Status input 1 to n (1353–1 to n)	105
Value status input 1 to n (1353–1 to n)	58
Verification ID (12141)	214
Verification mode (12105)	210
Verification result (12149)	213, 215
Volume flow (1838)	53
Volume flow factor (1832)	90
Volume flow offset (1831)	90
Volume flow unit (0553)	62
Volume unit (0563)	64
Web server functionality (7222)	164
Web server language (7221)	163
WLAN (2702)	154
WLAN IP address (2711)	156
WLAN MAC address (2703)	157
WLAN mode (2717)	154
WLAN passphrase (2706)	157
WLAN password (2716)	156
WLAN subnet mask (2709)	157
Year (2846)	208
Zero point (6546)	95
Direct access (Parameter)	14
Display (Submenu)	16
Display channel 1 (Submenu)	199
Display channel 2 (Submenu)	200
Display channel 3 (Submenu)	201
Display channel 4 (Submenu)	201
Display damping (Parameter)	33
Display interval (Parameter)	32
Display language (Parameter)	17
Display module (Submenu)	193
Document	
Explanation of the structure of a parameter	
description	6
Function	4
Structure	4
Symbols used	6
Target group	4
Using the document	4
Document function	4
E	
Electrode cleaning circuit (Submenu)	80
Empty pipe adjust value (Parameter)	79
Empty pipe detection (Parameter)	78
Empty pipe detection (Submenu)	77
ENP version (Parameter)	187
Enter access code (Parameter)	16
Entire logging duration (Parameter)	199
Event list (Submenu)	182
Event logbook (Submenu)	181
Expert (Menu)	8
Extended order code 1 (Parameter)	186
Extended order code 2 (Parameter)	186
Extended order code 3 (Parameter)	186
External compensation (Submenu)	86
External density (Parameter)	87
External device information (Parameter)	211
External temperature (Parameter)	87
F	
Factory settings	229
SI units	229
US units	232
Failure behavior current output (Parameter)	117
Failure current (Parameter)	118
Failure frequency (Parameter)	131
Failure mode (Parameter)	103, 125, 130, 137, 144
Failure value (Parameter)	103
Filter options (Parameter)	70, 182
Firmware version (Parameter)	
.	149, 185, 187, 188, 189, 191, 192, 193
Fixed current (Parameter)	109
Fixed density (Parameter)	86
Flow damping (Parameter)	72
Flow override (Parameter)	72
Flow velocity (Parameter)	54
Flow velocity factor (Parameter)	94
Flow velocity offset (Parameter)	94
Format display (Parameter)	18

Frequency output 1 to n simulation (Parameter)	224
Frequency output 1 to n value (Parameter)	224
Full pipe adjust value (Parameter)	80
Function	
see Parameter	
G	
Gateway IP address (Parameter)	159
H	
Hardware version (Parameter)	149
HBSI (Parameter)	85, 219
HBSI (Submenu)	85
HBSI hysteresis (Parameter)	85
HBSI limit (Parameter)	85
Header (Parameter)	33
Header text (Parameter)	34
Heartbeat base settings (Submenu)	207
Heartbeat Technology (Submenu)	206
Hour (Parameter)	209
I	
I/O alteration code (Parameter)	100
I/O configuration (Submenu)	98
I/O module (Parameter)	216
I/O module 1 to n information (Parameter)	99
I/O module 1 to n terminal numbers (Parameter)	98
I/O module 1 to n type (Parameter)	99
I/O module 2 (Submenu)	189
I/O module 2 terminal numbers (Parameter)	
.	189, 190, 192
I/O module 3 (Submenu)	190
I/O module 3 terminal numbers (Parameter)	
.	189, 190, 192
I/O module 4 (Submenu)	191
I/O module 4 terminal numbers (Parameter)	
.	189, 190, 192
Input (Submenu)	100
Input signal level 1 to n (Parameter)	223
Input values (Submenu)	57
Installation date (Parameter)	148
Installation direction (Parameter)	88
Integration time (Parameter)	88
Invert output signal (Parameter)	138
IP address (Parameter)	160, 162
IP address backup IO controller (Parameter)	153
IP address domain name server (Parameter)	160
IP address IO controller (Parameter)	152
IPv4 address (Parameter)	147
IPv4 default gateway (Parameter)	148
IPv4 subnet mask (Parameter)	148
L	
Last backup (Parameter)	36
Last change (Parameter)	149
Location (Parameter)	207
Locking status (Parameter)	14
Logging delay (Parameter)	198
Logging interval (Parameter)	196
Login page (Parameter)	164
Low flow cut off (Submenu)	75
Lower range value output (Parameter)	109
M	
MAC address (Parameter)	161, 162
MAC address backup IO controller (Parameter)	152
MAC address IO controller (Parameter)	152
Main electronic module + I/O module 1 (Submenu) . .	187
Main electronics temperature (Submenu)	202, 203
Manufacturer (Parameter)	149
Mass flow (Parameter)	54
Mass flow factor (Parameter)	91
Mass flow offset (Parameter)	90
Mass flow unit (Parameter)	66
Mass unit (Parameter)	66
Max. switch cycles number (Parameter)	62
Maximum electronics temperature (Parameter)	204
Maximum frequency value (Parameter)	127
Maximum value (Parameter)	205
Measured current (Parameter)	59, 119
Measured current 1 to n (Parameter)	57
Measured value EPD (Parameter)	80
Measured values (Parameter)	212
Measured values (Submenu)	53
Measured values 1 to n (Parameter)	57
Measuring mode (Parameter)	124, 128
Measuring mode current output (Parameter)	112
Measuring period (Parameter)	89
Measuring value at maximum frequency (Parameter)	
.	128
Measuring value at minimum frequency (Parameter)	
.	128
Menu	
Expert	8
Min/max values (Submenu)	202
Minimum electronics temperature (Parameter)	204
Minimum frequency value (Parameter)	127
Minimum value (Parameter)	205
Minute (Parameter)	210
Monitoring results (Submenu)	217
Month (Parameter)	209
N	
Network security (Parameter)	155
New adjustment (Parameter)	79
Noise (Parameter)	218
Nominal diameter (Parameter)	95
O	
Off value low flow cutoff (Parameter)	76
On value low flow cutoff (Parameter)	75
Operating mode (Parameter)	121
Operating time (Parameter)	36, 49, 179, 214
Operating time from restart (Parameter)	178
Order code (Parameter)	185
Output (Submenu)	106
Output current (Parameter)	59, 118
Output frequency (Parameter)	59, 131
Output values (Parameter)	212

Output values (Submenu)	58
P	
Parameter	
Structure of a parameter description	6
Partially filled pipe (Parameter)	207
Performing verification (Submenu)	208
Physical block (Submenu)	145
Plant operator (Parameter)	207
Powerless relay status (Parameter)	144
Prerequisites (Parameter)	96
Preset value 1 to n (Parameter)	175
Pressure shock suppression (Parameter)	76
Previous diagnostics (Parameter)	178
Process parameters (Submenu)	69
Process value (Parameter)	166
Process value status (Hex) (Parameter)	167
Process value status (Parameter)	167
Process variable adjustment (Submenu)	89
Process variable current output (Parameter)	107
Process variable unit (Parameter)	166
Process variable unit 1 to n (Parameter)	174
Process variable value (Parameter)	221
Process variables (Submenu)	53
Profile (Parameter)	150
Profile revision (Parameter)	150
PROFINET device name (Parameter)	146
Progress (Parameter)	79, 97, 212
Pulse output 1 to n (Parameter)	60, 126
Pulse output simulation 1 to n (Parameter)	225
Pulse scaling (Parameter)	123
Pulse value 1 to n (Parameter)	225
Pulse width (Parameter)	124
Pulse/frequency/switch output 1 to n (Submenu)	59, 119
R	
Received signal strength (Parameter)	159
Reference electrode potential against PE (Parameter)	218
Relay output 1 to n (Submenu)	61, 139
Relay output 1 to n simulation (Parameter)	226
Relay output function (Parameter)	140
Reset access code (Parameter)	49
Reset access code (Submenu)	49
Reset all totalizers (Parameter)	172
Reset min/max values (Parameter)	202
Response time (Parameter)	130
Response time empty pipe detection (Parameter)	78
Response time status input (Parameter)	105
S	
Security identification (Parameter)	156
Select antenna (Parameter)	159
Sensor (Parameter)	215
Sensor (Submenu)	52
Sensor adjustment (Submenu)	88
Sensor electronic module (ISEM) (Parameter)	216
Sensor electronic module (ISEM) (Submenu)	188

Sensor electronics temperature (ISEM) (Submenu)	204
Separator (Parameter)	34
Serial number (Parameter)	148, 184
Service interface (Submenu)	161
Signal mode (Parameter)	101, 107, 121
Signal to noise ratio (Parameter)	97
Simulated status (Parameter)	168
Simulation (Parameter)	167
Simulation (Submenu)	219
Simulation value (Parameter)	168
Software option overview (Parameter)	51
SSID name (Parameter)	155, 158
Start verification (Parameter)	211
Startup settings (Parameter)	150
Status (Parameter)	213
Status input 1 to n (Submenu)	104
Status input 1 to n simulation (Parameter)	222
Submenu	
Administration	47
Analog inputs	165
Analog outputs	168
API port	160
Application	172
Application relation	151
Build-up detection	82
Calibration	95
Communication	145
Configuration backup	35
Current input 1 to n	57, 100
Current output 1 to n	106
Data logging	194
Device information	183
Diagnostic behavior	39
Diagnostic handling	38
Diagnostic list	179
Diagnostics	177
Display	16
Display channel 1	199
Display channel 2	200
Display channel 3	201
Display channel 4	201
Display module	193
Electrode cleaning circuit	80
Empty pipe detection	77
Event list	182
Event logbook	181
External compensation	86
HBSI	85
Heartbeat base settings	207
Heartbeat Technology	206
I/O configuration	98
I/O module 2	189
I/O module 3	190
I/O module 4	191
Input	100
Input values	57
Low flow cut off	75
Main electronic module + I/O module 1	187
Main electronics temperature	202, 203

Measured values	53	Totalizer 1 to n failure behavior (Parameter)	175	
Min/max values	202	Totalizer 1 to n operation mode (Parameter)	175	
Monitoring results	217	Totalizer 1 to n status (Hex) (Parameter)	56, 176	
Output	106	Totalizer 1 to n status (Parameter)	56, 176	
Output values	58	Totalizer 1 to n value (Parameter)	56, 176	
Performing verification	208	Transmitter identifier (Parameter)	50	
Physical block	145			
Process parameters	69			
Process variable adjustment	89			
Process variables	53			
Pulse/frequency/switch output 1 to n	59, 119			
Relay output 1 to n	61, 139			
Reset access code	49			
Sensor	52			
Sensor adjustment	88			
Sensor electronic module (ISEM)	188			
Sensor electronics temperature (ISEM)	204			
Service interface	161			
Simulation	219			
Status input 1 to n	104			
System	16			
System units	62			
Temperature	168, 205			
Totalizer	56			
Totalizer 1 to n	173			
Value current output 1 to n	58			
Value status input 1 to n	58			
Verification results	213			
Volume flow	165			
Web server	163			
Subnet mask (Parameter)	161, 162			
Switch cycles (Parameter)	61			
Switch output function (Parameter)	132			
Switch output simulation 1 to n (Parameter)	225			
Switch point empty pipe detection (Parameter)	78			
Switch state (Parameter)	60, 61, 138, 144			
Switch state 1 to n (Parameter)	226, 227			
Switch-off delay (Parameter)	137, 143			
Switch-off value (Parameter)	135, 142			
Switch-on delay (Parameter)	136, 143			
Switch-on value (Parameter)	135, 143			
System (_submenu)	16			
System status (Parameter)	217			
System units (_submenu)	62			
T				
Target group	4			
Target mode (Parameter)	151			
Temperature (Parameter)	55			
Temperature (_submenu)	168, 205			
Temperature damping (Parameter)	74			
Temperature factor (Parameter)	93			
Temperature offset (Parameter)	92			
Temperature source (Parameter)	87			
Temperature unit (Parameter)	65			
Terminal number (Parameter)	101, 104, 107, 120, 139			
Totalizer (_submenu)	56			
Totalizer 1 to n (_submenu)	173			
Totalizer 1 to n control (Parameter)	175			
U				
Upper range value output (Parameter)	111			
User name (Parameter)	156			
User role (Parameter)	15			
V				
Value 1 display (Parameter)	20			
Value 2 display (Parameter)	22			
Value 3 display (Parameter)	23			
Value 4 display (Parameter)	25			
Value 5 display (Parameter)	26			
Value 6 display (Parameter)	28			
Value 7 display (Parameter)	29			
Value 8 display (Parameter)	31			
Value current input 1 to n (Parameter)	222			
Value current output 1 to n (Parameter)	223			
Value current output 1 to n (_submenu)	58			
Value status input (Parameter)	58, 105			
Value status input 1 to n (_submenu)	58			
Verification ID (Parameter)	214			
Verification mode (Parameter)	210			
Verification result (Parameter)	213, 215			
Verification results (_submenu)	213			
Volume flow (Parameter)	53			
Volume flow (_submenu)	165			
Volume flow factor (Parameter)	90			
Volume flow offset (Parameter)	90			
Volume flow unit (Parameter)	62			
Volume unit (Parameter)	64			
W				
Web server (_submenu)	163			
Web server functionality (Parameter)	164			
Web server language (Parameter)	163			
Wizard				
Build-up index adjustment	96			
Define access code	47			
WLAN settings	153			
WLAN (Parameter)	154			
WLAN IP address (Parameter)	156			
WLAN MAC address (Parameter)	157			
WLAN mode (Parameter)	154			
WLAN passphrase (Parameter)	157			
WLAN password (Parameter)	156			
WLAN settings (Wizard)	153			
WLAN subnet mask (Parameter)	157			
Y				
Year (Parameter)	208			
Z				
Zero point (Parameter)	95			



71595377

www.addresses.endress.com
