BA01453G/00/EN/08.23-00 71632738 2023-11-01 Valid as of version 01.07.zz (Device firmware)

Operating Instructions Micropilot NMR84

Tank Gauging





- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

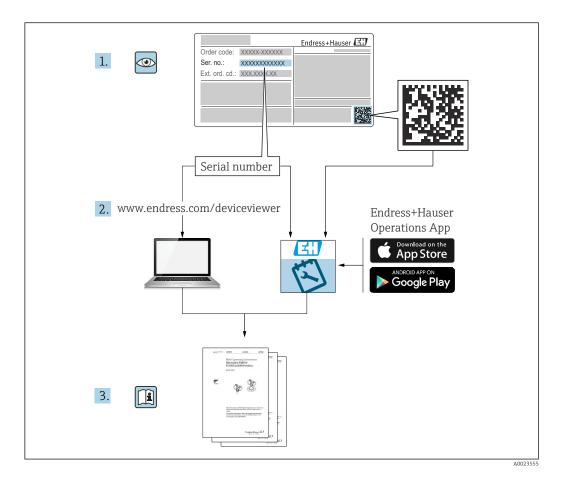


Table of contents

1	About this document
1.1	Document function
1.2	Symbols
1.3	Documentation
1.4	Registered trademarks 8
2	Basic safety instructions
2.1	Requirements for the personnel
2.2	Intended use
2.3	Workplace safety 10
2.4	Operational safety 10
2.5	Product safety 10
3	Product description 11
3.1	Product design 11
4	Incoming acceptance and product
	identification 12
4.1	Incoming acceptance 12
4.2	Product identification
4.3	Storage and transport 14
5	Installation 15
5.1	Installation conditions 15
5.2	Post-installation check 16
6	Electrical connection 17
6.1	Terminal assignment 17
6.2	Connecting requirements
6.3	Ensuring the degree of protection 39
6.4	Post-connection check
7	Operability 40
7.1	Overview of the operation options 40
7.2	Structure and function of the operating
	menu 41
7.3	Access to the operating menu via the local or remote display and operating module 42
7.4	Access to the operating menu via the service
	interface and FieldCare
7.5	Access to the operating menu via Tankvision
	Tank Scanner NXA820 and FieldCare
8	System integration 56
8.1	Overview of the Device Description files
	(DTM) 56
9	Commissioning 57
9.1	Terms related to tank measurement 57
~	

9.2 9.3 9.4 9.5 9.6 9.7	Initial settings57Configuring the measuring device60Configuring the tank gauging application62Advanced settings87Simulation87Protecting settings from unauthorized access87
10	Operation
10.1 10.2	Reading off the device locking status88Reading off measured values88
11	Diagnostics and troubleshooting 89
11.1	General trouble shooting
11.2	Diagnostic information on local display 90
11.3	Diagnostic information in FieldCare 93
11.4	Overview of the diagnostic messages 95
11.5	Diagnostic list
11.6	Reset measuring device
11.7	Device information
11.8	Firmware history
12	Maintenance 102
12.1	Maintenance tasks 102
12.1	Endress+Hauser services 102
13	Repair 103
13.1	General information on repairs 103
13.2	Spare parts
13.3	Endress+Hauser services
13.4	Return
13.5	Disposal 104
14	Accessories 105
14.1	Device-specific accessories 105
14.2	Communication-specific accessories 106
14.3	Service-specific accessories 106
14.4	System components 107
15	Operating menu 108
15.1	Overview of the operating menu 108
15.2	"Operation" menu 117
15.3	"Setup" menu
15.4	"Diagnostics" menu
Index	x 271

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

ACAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

\sim

Alternating current

\sim

Direct current and alternating current

_ _ _

Direct current

÷

Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Tool symbols

● ✓
Phillips head screwdriver

• Flat blade screwdriver

O € Torx screwdriver

🔾 🥼 Allen key

Ø Open-ended wrench

1.2.4 Symbols for certain types of information and graphics

Permitted Procedures, processes or actions that are permitted Preferred

Procedures, processes or actions that are preferred

Forbidden Procedures, processes or actions that are forbidden

Tip Indicates additional information

Reference to documentation

Reference to graphic

►

Notice or individual step to be observed

1., 2., 3.

Series of steps

Result of a step

Visual inspection

Operation via operating tool

Write-protected parameter

1, 2, 3, ... Item numbers

A, B, C, ... Views

 $\mathbf{\Lambda} \rightarrow \mathbf{I}$ Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

Temperature resistance of the connection cables

Specifies the minimum value of the temperature resistance of the connection cables

1.3 Documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website (www.endress.com/downloads):

- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
 - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

1.3.1 Technical Information (TI)

Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

1.3.2 Brief Operating Instructions (KA)

Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.5 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

1.3.6 Installation instructions (EA)

Installation Instruction are used to replace a faulty unit with a functioning unit of the same type.

1.4 Registered trademarks

Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contact-less level measurement of liquids. The device must be installed in metallic stilling wells. Operation is completely harmless to humans and animals.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential.
- Protect the measuring device permanently against corrosion from environmental influences.
- Observe the limit values in the "Technical Information".

The manufacturer is not liable for damage caused by improper or non-designated use.

Residual risk

During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

• For high process temperatures: Install protection against contact in order to prevent burns.

2.3 Workplace safety

For work on and with the device:

• Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury!

- Operate the device only if it is in proper technical condition, free from errors and faults.
- ► The operator is responsible for interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to the repair of an electrical device.
- Use only original spare parts and accessories from the manufacturer.

Hazardous area

To eliminate danger to persons or the facility when the device is used in the hazardous area (e.g. explosion protection):

- Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets the general safety standards and legal requirements.

NOTICE

Loss of degree of protection by opening of the device in humid environments

If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU directives. These are listed in the corresponding EU Declaration of Conformity together with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the CE mark.


2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the EAC mark.

3 Product description

3.1 Product design

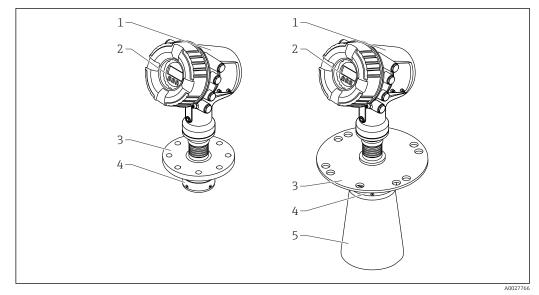

I Design of Micropilot NMR84

- 1 Electronics housing
- 2 Display and operating module (can be operated without opening the cover)
- 3 Process connection (flange)
- 4 Planar antenna
- 5 Antenna extension (for antennas ≥ 200 mm (8 in))

4 Incoming acceptance and product identification

4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) enclosed?

1 If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Enter the serial number from the nameplate in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device and an overview of the Technical Documentation supplied with the device are displayed.
- Enter the serial number on the nameplate into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information about the device and the technical documentation pertaining to the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

4.2.1 Nameplate

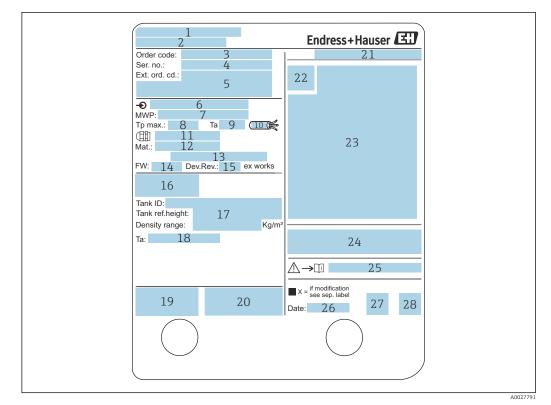

☑ 2 Nameplate

- 1 Manufacturer address
- 2 Device name
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Supply voltage
- 7 Maximum process pressure
- 8 Maximum process temperature
- 9 Permitted ambient temperature (T_a)
- 10 Temperature resistance of cable
- 11 Thread for cable entry
- 12 Material in contact with process
- 13 Not used
- 14 Firmware version
- 15 Device revision
- 16 Metrology certification numbers
- 17 Customized parametrization data
- 18 Ambient temperature range
- 19 CE mark / C-tick mark
- 20 Additional information on the device version
- 21 Ingress protection
- 22 Certificate symbol
- 23 Data concerning the Ex approval
- 24 General certificate of approval
- 25 Associated Safety Instructions (XA)
- 26 Manufacturing date
- 27 China RoHS mark
- 28 QR code for the Endress+Hauser Operations App

4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Place of manufacture: See nameplate.

4.3 Storage and transport

4.3.1 Storage conditions

- Storage temperature: -50 to +80 °C (-58 to +176 °F)
- Store the device in its original packaging.

4.3.2 Transport

ACAUTION

Housing or antenna may be damaged or break away.

Risk of injury


- Transport the measuring device to the measuring point in its original packaging or at the process connection.
- Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- Comply with the safety instructions, transport conditions for devices over 18 kg (39.6 lb) (IEC 61010).

5 Installation

5.1 Installation conditions

5.1.1 Conditions for the stilling well

- Metal (no enamel coating)
- Constant diameter (no rectangular stilling wells)
- Weld seam as smooth as possible
- For best radar propagation behavior it is recommended to have holes instead of slots. If slots can not be avoided, they should be as thin and short as possible.
- Maximum gap between antenna/horn and wall of the stilling well: 5 mm (0.2 in).
- At any transition (e.g. when using a ball valve or mending pipe segments) gaps must not exceed 1 mm (0.04 in).
- The stilling well must be smooth on the inside. Average roughness \leq 6.3 µm (0.248 µin)
- Length and number of the holes do not affect the measurement. The hole diameter (deburred) can be 1/7 of the well diameter, but should not exceed 30 mm (1.2 in).
- An increase of the pipe diameter is possible if the minimum lengths according to the following figure and table are taken into account:

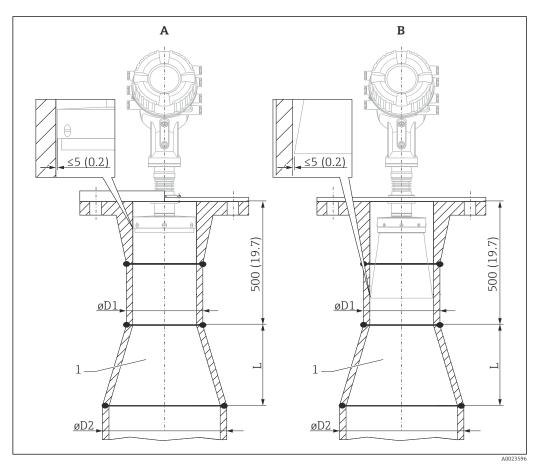

☑ 3 Installation of NMR84 in stilling wells with a larger diameter

- A Antenna ≤150 mm (6 in) (without horn extension)
- B Antenna \geq 200 mm (8 in) (with horn extension)
- 1 Extension from ØD1 to ØD2

D1 ¹⁾	D2	L
100 mm (4 in)	150 mm (6 in)	300 mm (12 in)
150 mm (6 in)	200 mm (8 in)	300 mm (12 in)
200 mm (8 in)	250 mm (10 in)	300 mm (12 in)
250 mm (10 in)	300 mm (12 in)	450 mm (18 in)


1) = antenna size

5.2 Post-installation check

О	Is the device undamaged (visual inspection)?
О	 Does the device conform to the measuring point specifications? For example: Process temperature Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document) Ambient temperature range Measuring range
О	Are the measuring point identification and labeling correct (visual inspection)?
0	Is the device adequately protected from precipitation and direct sunlight?

6 Electrical connection

6.1 Terminal assignment

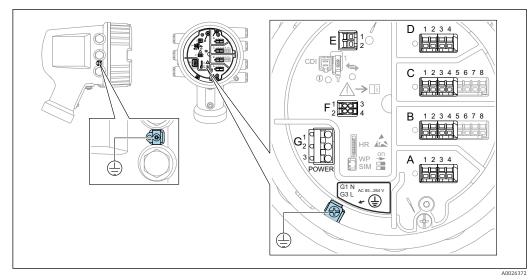

4 Terminal compartment (typical example) and ground terminals

Housing thread

The threads of the electronics and connection compartment can be coated with an anti-friction coating.

The following applies for all housing materials:

Do not lubricate the housing threads.

Terminal area A/B/C/D (slots for I/O modules)

Module: Up to four I/O modules, depending on the order code

- Modules with four terminals can be in any of these slots.
- Modules with eight terminals can be in slot B or C.

The exact assignment of the modules to the slots is dependent on the device version $\rightarrow \cong 20$.

Terminal area E

Module: HART Ex i/IS interface

- E1: H+
- E2:H-

Terminal area F

Remote display

- F1: V_{CC} (connect to terminal 81 of the remote display)
- F2: Signal B (connect to terminal 84 of the remote display)
- F3: Signal A (connect to terminal 83 of the remote display)
- F4: Gnd (connect to terminal 82 of the remote display)

Terminal area G (for High voltage AC power supply and Low voltage AC power supply)

- G1: N
- G2: not connected
- G3: L

Terminal area G (for Low voltage DC power supply)

- G1: L-
- G2: not connected
- G3: L+


Terminal area: Protective ground

Module: Protective ground connection (M4 screw)



☑ 5 Terminal area: Protective ground

6.1.1 Power supply

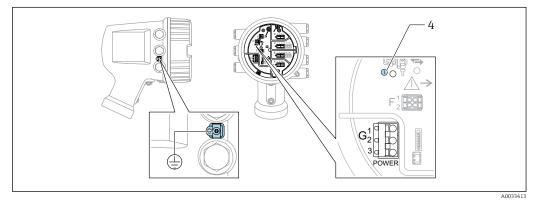

G1 N

G2 not connected

G3 L

•

4 Green LED: indicates power supply

The supply voltage is also indicated on the nameplate.

Supply voltage

High voltage AC power supply:

Operational value: 100 to 240 V_{AC} (- 15 % + 10 %) = 85 to 264 V_{AC} , 50/60 Hz

Low voltage AC power supply:

Operational value: 65 V_{AC} (- 20 % + 15 %) = 52 to 75 V_{AC} , 50/60 Hz

Low voltage DC power supply: Operational value:

24 to 55 V_{DC} (- 20 % + 15 %) = 19 to 64 V_{DC}


Power consumption

Maximum power varies depending on the configuration of the modules. The value shows maximum apparent power, select the applicable cables accordingly. The actual consumed effective power is 12 W.

High voltage AC power supply: 28.8 VA

Low voltage AC power supply: 21.6 VA


Low voltage DC power supply: $13.4\ \mathrm{W}$

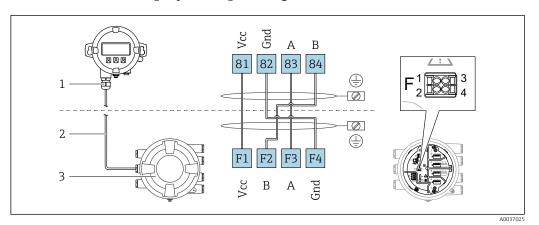

6.1.2 Remote display and operating module DKX001


- 6 Connection of the remote display and operating module DKX001 to the Tank Gauging device (NMR8x, NMS8x or NRF8x)
- 1 Remote display and operating module
- 2 Connecting cable
- 3 Tank Gauging device (NMR8x, NMS8x or NRF8x)

The remote display and operating module DKX001 is available as an accessory. For details refer to SD01763D.

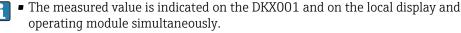

• The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

6.1.3 HART Ex i/IS interface

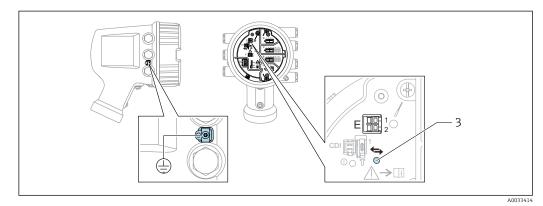

E1 H+

E2 H-


3 Orange LED: indicates data communication

This interface always operates as the main HART master for connected HART slave transmitters. The Analog I/O modules, on the other hand, can be configured as a HART master or slave $\rightarrow \square 33 \rightarrow \square 35$.

6.1.4 Slots for I/O modules

The terminal compartment contains four slots (A, B, C and D) for I/O modules. Depending on the device version (ordering features 040, 050 and 060) these slots contain different I/O modules. The table below shows which module is located in which slot for a specific device version.

The slot assignment for the device is also indicated on a label attached to the back cover of the display module.

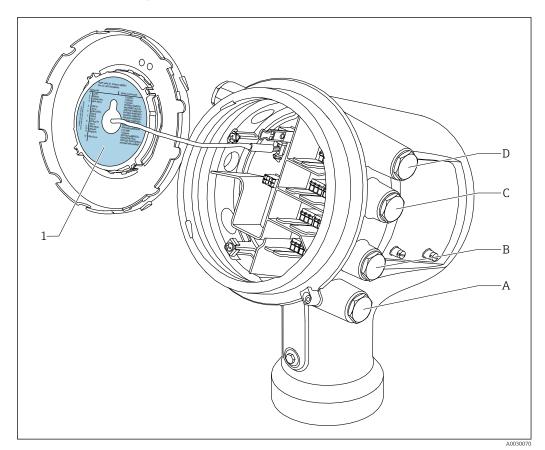

- 1 Label showing (among other things) the modules in the slots A to D.
- A Cable entry for slot A
- *B* Cable entry for slot *B*
- *C Cable entry for slot C*
- D Cable entry for slot D

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- M Modbus
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "Modbus" (A1)

-	0 ¹⁾) – <i>Wioubus</i>	T ²⁾			
NMx8x	- xxxx XX XX 040 05	X XX 50 060				
040 3)	050 ⁴⁾	060 ⁵⁾	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	1 2 3 4 A0023888
A1	X0	XO	М	-	-	-
A1	XO	A1	М	-	-	D
A1	XO	A2	М	-	D	D
A1	XO	A3	М	D	D	D
A1	XO	B1	М	М	-	-
A1	XO	B2	М	М	-	D
A1	XO	B3	М	М	D	D
A1	XO	C1	М	V1	-	-
A1	XO	C2	М	V1	-	D
A1	XO	С3	М	V1	D	D
A1	X0	E1	М	W	-	-
A1	XO	E2	М	W	-	D
A1	XO	E3	М	W	D	D
A1	A1	XO	М	A/XP	-	-
A1	A1	A1	М	A/XP	-	D
A1	A1	A2	М	A/XP	D	D
A1	A1	B1	М	М	A/XP	-
A1	A1	B2	М	М	A/XP	D
A1	A1	C1	М	V1	A/XP	-
A1	A1	C2	М	V1	A/XP	D
A1	A1	E1	М	W	A/XP	-
A1	A1	E2	М	W	A/XP	D
A1	A2	XO	М	A/XP	A/XP	-
A1	A2	A1	М	A/XP	A/XP	D
A1	A2	B1	М	A/XP	A/XP	М
A1	A2	C1	М	A/XP	A/XP	V1
A1	A2	E1	М	A/XP	A/XP	W
A1	B1	XO	М	A/IS	-	-
A1	B1	A1	М	A/IS	-	D
A1	B1	A2	М	A/IS	D	D

	0 1)			1	2)	
NMx8x - xxxx XX XX XX 040 050 060						
040 ³⁾	050 ⁴⁾	060 5)	A 1234	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
A1	B1	B1	М	М	A/IS	-
A1	B1	B2	М	М	A/IS	D
A1	B1	C1	М	V1	A/IS	-
A1	B1	C2	М	V1	A/IS	D
A1	B1	E1	М	W	A/IS	-
A1	B1	E2	М	W	A/IS	D
A1	B2	XO	М	A/IS	A/IS	-
A1	B2	A1	М	A/IS	A/IS	D
A1	B2	B1	М	A/IS	A/IS	М
A1	B2	C1	М	A/IS	A/IS	V1
A1	B2	E1	М	A/IS	A/IS	W
A1	C2	XO	М	A/IS	A/XP	-
A1	C2	A1	М	A/IS	A/XP	D
A1	C2	B1	М	A/IS	A/XP	М
A1	C2	C1	М	A/IS	A/XP	V1
A1	C2	E1	М	A/IS	A/XP	W

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "V1" (B1)

	0 ¹⁾) = "V1" (B1				
01			T ²⁾			
NMx8x - xxxx XX XX XX 040 050 060						
040 ³⁾	050 ⁴⁾	060 ⁵⁾	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	D 1 2 3 4
B1	XO	XO	V1	-	-	-
B1	XO	A1	V1	-	-	D
B1	XO	A2	V1	-	D	D
B1	X0	A3	V1	D	D	D
B1	XO	B1	V1	М	-	-
B1	X0	B2	V1	М	-	D
B1	XO	B3	V1	М	D	D
B1	XO	C1	V1	V1	-	-
B1	XO	C2	V1	V1	-	D
B1	XO	С3	V1	V1	D	D
B1	XO	E1	V1	W	-	-
B1	XO	E2	V1	W	-	D
B1	X0	E3	V1	W	D	D
B1	A1	XO	V1	A/XP	-	-
B1	A1	A1	V1	A/XP	-	D
B1	A1	A2	V1	A/XP	D	D
B1	A1	B1	V1	М	A/XP	-
B1	A1	B2	V1	М	A/XP	D
B1	A1	C1	V1	V1	A/XP	-
B1	A1	C2	V1	V1	A/XP	D
B1	A1	E1	V1	W	A/XP	-
B1	A1	E2	V1	W	A/XP	D
B1	A2	X0	V1	A/XP	A/XP	-
B1	A2	A1	V1	A/XP	A/XP	D
B1	A2	B1	V1	A/XP	A/XP	М
B1	A2	C1	V1	A/XP	A/XP	V1
B1	A2	E1	V1	A/XP	A/XP	W
B1	B1	X0	V1	A/IS	-	-
B1	B1	A1	V1	A/IS	-	D
B1	B1	A2	V1	A/IS	D	D

	0 ¹⁾			T	2)	
NMx8x - xxxx XX XX XX 040 050 060						
040 ³⁾	050 ⁴⁾	060 5)	A 1234	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	D 1 2 3 4
B1	B1	B1	V1	М	A/IS	-
B1	B1	B2	V1	М	A/IS	D
B1	B1	C1	V1	V1	A/IS	-
B1	B1	C2	V1	V1	A/IS	D
B1	B1	E1	V1	W	A/IS	-
B1	B1	E2	V1	W	A/IS	D
B1	B2	XO	V1	A/IS	A/IS	-
B1	B2	A1	V1	A/IS	A/IS	D
B1	B2	B1	V1	A/IS	A/IS	М
B1	B2	C1	V1	A/IS	A/IS	V1
B1	B2	E1	V1	A/IS	A/IS	W
B1	C2	XO	V1	A/IS	A/XP	-
B1	C2	A1	V1	A/IS	A/XP	D
B1	C2	B1	V1	A/IS	A/XP	М
B1	C2	C1	V1	A/IS	A/XP	V1
B1	C2	E1	V1	A/IS	A/XP	W

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "WM550" (C1)

	0 ¹⁾) - 00101550	T ²⁾			
NIM TO T	- VVVV VV VV	X XX				
INIVIXOX	- xxxx XX XX 040 05	0 060				
040 3)	050 ⁴⁾	060 ⁵⁾	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	D 1 2 3 4
61		NO.	TAZ	-	_	A0023888
C1	XO	XO	W			-
C1	XO	A1	W	-	- D	D
C1	XO	A2	W W	- 	D	D
C1	XO	A3		D	D	D
C1	XO	B1	W	M	-	-
C1	XO	B2	W	M	-	D
C1	XO	B3	W	M	D	D
C1	XO	C1	W	V1	-	-
C1	X0	C2	W	V1	-	D
C1	X0	C3	W	V1	D	D
C1	X0	E1	W	W	-	-
C1	X0	E2	W	W	-	D
C1	X0	E3	W	W	D	D
C1	A1	XO	W	A/XP	-	-
C1	A1	A1	W	A/XP	-	D
C1	A1	A2	W	A/XP	D	D
C1	A1	B1	W	М	A/XP	-
C1	A1	B2	W	М	A/XP	D
C1	A1	C1	W	V1	A/XP	-
C1	A1	C2	W	V1	A/XP	D
C1	A1	E1	W	W	A/XP	-
C1	A1	E2	W	W	A/XP	D
C1	A2	XO	W	A/XP	A/XP	-
C1	A2	A1	W	A/XP	A/XP	D
C1	A2	B1	W	A/XP	A/XP	М
C1	A2	C1	W	A/XP	A/XP	V1
C1	A2	E1	W	A/XP	A/XP	W
C1	B1	XO	W	A/IS	-	-
C1	B1	A1	W	A/IS	-	D
C1	B1	A2	W	A/IS	D	D

0 ¹⁾			T ²⁾			
NMx8x - xxxx XX XX XX 040 050 060						
040 ³⁾	050 ⁴⁾	060 5)	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
C1	B1	B1	W	М	A/IS	-
C1	B1	B2	W	М	A/IS	D
C1	B1	C1	W	V1	A/IS	-
C1	B1	C2	W	V1	A/IS	D
C1	B1	E1	W	W	A/IS	-
C1	B1	E2	W	W	A/IS	D
C1	B2	XO	W	A/IS	A/IS	-
C1	B2	A1	W	A/IS	A/IS	D
C1	B2	B1	W	A/IS	A/IS	М
C1	B2	C1	W	A/IS	A/IS	V1
C1	B2	E1	W	A/IS	A/IS	W
C1	C2	XO	W	A/IS	A/XP	-
C1	C2	A1	W	A/IS	A/XP	D
C1	C2	B1	W	A/IS	A/XP	М
C1	C2	C1	W	A/IS	A/XP	V1
C1	C2	E1	W	A/IS	A/XP	W

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex d" (E1)

0 ¹⁾				Т	- 2)	
	- xxxx XX XX 040 05					
040 ³⁾	050 ⁴⁾	060 ⁵⁾	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	1 2 3 4 1 2 3 4
E1	XO	XO	-	A/XP	-	-
E1	XO	A1	-	A/XP	-	D
E1	XO	A2	-	A/XP	D	D
E1	XO	A3	D	A/XP	D	D
E1	XO	B1	М	A/XP	-	-
E1	XO	B2	М	A/XP	-	D
E1	XO	B3	М	A/XP	D	D
E1	A1	XO	-	A/XP	A/XP	-
E1	A1	A1	-	A/XP	A/XP	D
E1	A1	A2	D	A/XP	A/XP	D
E1	A1	B1	М	A/XP	A/XP	-
E1	A1	B2	М	A/XP	A/XP	D
E1	B1	XO	-	A/XP	A/IS	-
E1	B1	A1	-	A/XP	A/IS	D
E1	B1	A2	D	A/XP	A/IS	D
E1	B1	B1	М	A/XP	A/IS	-
E1	B1	B2	М	A/XP	A/IS	D

Ordering feature 1)

2) Terminal area

3) Primary Output

4)

Secondary IO Analog Secondary IO Digital Ex d/XP 5)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550

- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex i" (H1)

0 1)			T ²⁾			
NMx8x - xxxx XX XX XX 040 050 060						
040 ³⁾	050 ⁴⁾	060 ⁵⁾	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
H1	XO	XO	-	A/IS	-	-
H1	XO	A1	-	A/IS	-	D
H1	XO	A2	-	A/IS	D	D
H1	X0	A3	D	A/IS	D	D
H1	XO	B1	М	A/IS	-	-
H1	XO	B2	М	A/IS	-	D
H1	XO	B3	М	A/IS	D	D
H1	A1	XO	-	A/IS	A/XP	-
H1	A1	A1	-	A/IS	A/XP	D
H1	A1	A2	D	A/IS	A/XP	D
H1	A1	B1	М	A/IS	A/XP	-
H1	A1	B2	М	A/IS	A/XP	D
H1	B1	X0	-	A/IS	A/IS	-
H1	B1	A1	-	A/IS	A/IS	D
H1	B1	A2	D	A/IS	A/IS	D
H1	B1	B1	М	A/IS	A/IS	-
H1	B1	B2	М	A/IS	A/IS	D

1) Ordering feature

Terminal area 2)


Primary Output 3)

4)

Secondary IO Analog Secondary IO Digital Ex d/XP 5)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1

- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

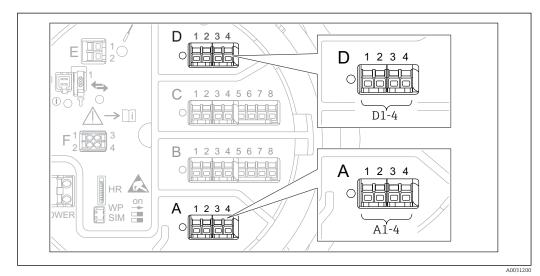

6.1.5 Terminals of the "Modbus" module, "V1" module or "WM550" module

■ 7 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

Depending on the device version, the "Modbus" and/or "V1" or "WM550" module may be in different slots of the terminal compartment. In the operating menu the "Modbus" and "V1" or "WM550" interfaces are designated by the respective slot and the terminals within this slot: **A1-4**, **B1-4**, **C1-4**, **D1-4**.

Terminals of the "Modbus" module

Designation of the module in the operating menu: **Modbus X1-4**; (X = A, B, C or D) • $X1^{(1)}$

- Terminal name: S
- Description: Cable shielding connected via a capacitor to EARTH
- X2 ¹⁾
 - Terminal name: 0V
 - Description: Common reference
- X3 ¹⁾
 - Terminal name: B-
 - Description: Non-inverting signal line
- X4 ¹⁾
 - Terminal name: A+
 - Description: Inverting signal line


¹⁾ Here, "X" stands for one of the slots "A", "B", "C", or "D".

Terminals of the "V1" and "WM550" module

Designation of the module in the operating menu: **V1 X1-4** or **WM550 X1-4**; (X = A, B, C or D)

- X1²⁾
 - Terminal name: S
 - Description: Cable shielding connected via a capacitor to EARTH
- X2 ¹⁾
 - Terminal name: -
 - Description: not connected
- X3 ¹⁾
 - Terminal name: B-
 - Description: Protocol loop signal -
- X4 ¹⁾
 - Terminal name: A+
 - Description: Protocol loop signal +

6.1.6 Terminals of the "Analog I/O" module (Ex d /XP or Ex i/IS)

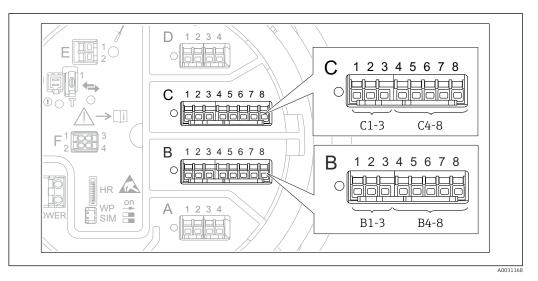

Terminal: B1-3

Function: Analog input or output (configurable)

- Passive usage: $\rightarrow \square 33$
- Active usage: $\rightarrow \square 35$
- Designation in the operating menu: Analog I/O B1-3 ($\rightarrow \square$ 149)

Terminal: C1-3

Function: Analog input or output (configurable)

- Passive usage: $\rightarrow \cong 33$
- Active usage: $\rightarrow \square 35$
- Designation in the operating menu: Analog I/O C1-3 ($\rightarrow \square$ 149)

Terminal: B4-8

- Function: Analog input
- RTD: → 🗎 36
- Designation in the operating menu: Analog IP B4-8 ($\rightarrow \triangleq 143$)

²⁾ Here, "X" stands for one of the slots "A", "B", "C", or "D".

Terminal: C4-8


Function: Analog input

- RTD: → 🖺 36
- Designation in the operating menu: Analog IP C4-8 ($\rightarrow \cong 143$)

6.1.7 Connection of the "Analog I/O" module for passive usage

- In the passive usage the supply voltage for the communication line must be supplied by an external source.
 - The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
 - Screened cable must be used for the 4...20mA signal line.


"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

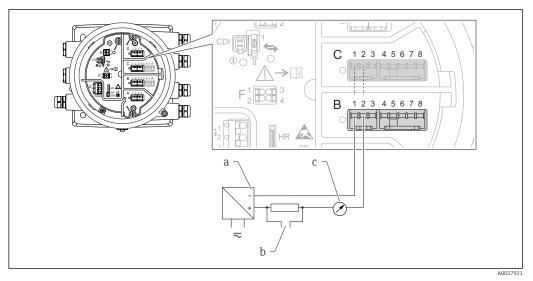

8 Passive usage of the Analog I/O module in the output mode

- a Power supply
- b HART signal output
- c Analog signal evaluation


"Operating mode" = "4..20mA input" or "HART master+4..20mA input"

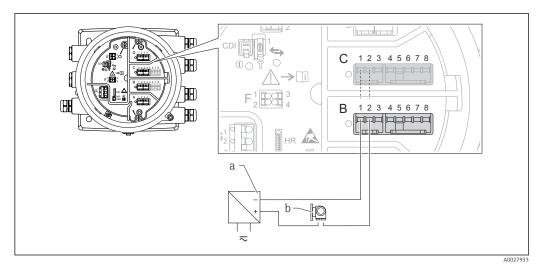


Passive usage of the Analog I/O module in the input mode

a Power supply

b External device with 4...20mA and/or HART signal output

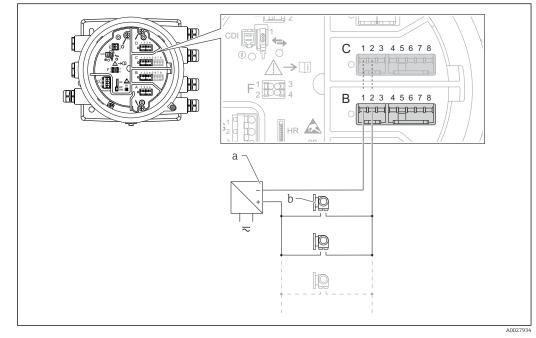

"Operating mode" = "HART master"

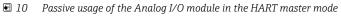


- a Power supply
- *b* Up to 6 external devices with HART signal output

6.1.8 Connection of the "Analog I/O" module for active usage

In the active usage the supply voltage for the communication line is supplied by the device itself. There is no need of an external power supply.


- The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
- Screened cable must be used for the 4...20mA signal line.
- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
 - Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
 - Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

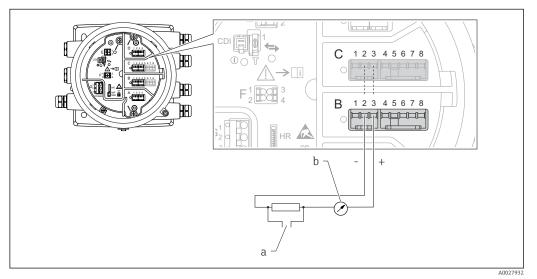


- 🖻 11 Active usage of the Analog I/O module in the output mode
- a HART signal output
- b Analog signal evaluation

"Operating mode" = "4..20mA input" or "HART master+4..20mA input"

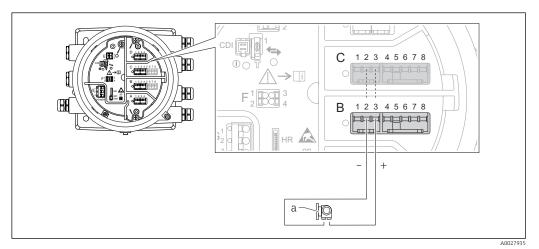

■ 12 Active usage of the Analog I/O module in the input mode

a External device with 4...20mA and/or HART signal output

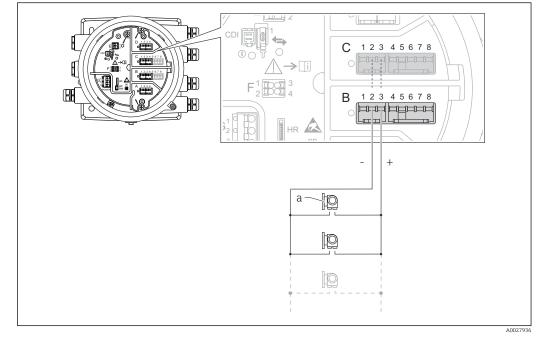


"Operating mode" = "HART master"

■ 13 Active usage of the Analog I/O module in the HART master mode

a Up to 6 external devices with HART signal output

The maximum current consumption for the connected HART devices is 24 mA (i.e. 4 mA per device if 6 devices are connected).

6.1.9 Connection of a RTD

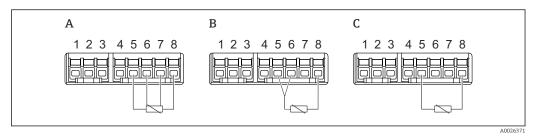


A 4-wire RTD connection

B 3-wire RTD connection

C 2-wire RTD connection

ľ

Screened cable must be used for the connection of the RTD.

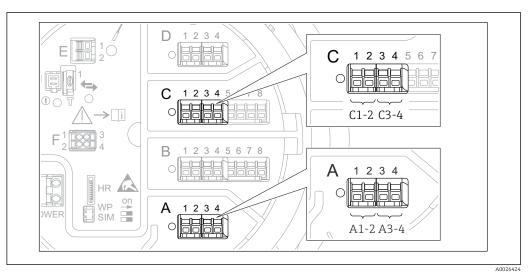

6.1.10 Terminals of the "Digital I/O" module

14 Designation of the digital inputs or outputs (examples)

- Each Digital IO Module provides two digital inputs or outputs.
- In the operating menu each input or output is designated by the respective slot and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
- For each of these pairs of terminals, one of the following operating modes can be selected in the operating menu:
- Disable
- Passive Output
- Passive Input
- Active Input

6.2 Connecting requirements

6.2.1 Cable specification

Terminals

Wire cross section 0.2 to 2.5 mm² (24 to 13 AWG)

Use for terminals with function: Signal and power supply

- Spring terminals (NMx8x-xx1...)
- Screw terminals (NMx8x-xx2...)

Wire cross section max. 2.5 mm² (13 AWG) Use for terminals with function: Ground terminal in the terminal compartment

Wire cross section max. 4 mm² (11 AWG) Use for terminals with function: Ground terminal at the housing

Power supply line

Standard device cable is sufficient for the power line.

Analog signal lines

Screened cable must be used for:

- the 4 to 20 mA signal lines.
- the RTD connection.

Digital I/O signal lines

- Shielded cable is recommended if using the relays.
- Observe the grounding concept of the plant.

HART communication line

Shielded cable is recommended if using the HART protocol. Observe the grounding concept of the plant.

Modbus communication line

- Observe the cable conditions from the TIA-485-A, Telecommunications Industry Association.
- Additional conditions: Use shielded cable.

V1 communication line

- 2-wire twisted pair, screened or unscreened cable
- Resistance in one cable: $\leq 120 \Omega$
- Capacitance between lines: $\leq 0.3~\mu F$

WM550 communication line

- 2-wire twisted pair, unscreened cable
- Cross section minimum 0.5 mm² (20 AWG)
- Maximum total cable resistance: $\leq 250 \Omega$
- Cable with low capacitance


6.3 Ensuring the degree of protection

To guarantee the specified degree of protection, carry out the following steps after the electrical connection:

- **1.** Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
- 2. Tighten all housing screws and screw covers.
- 3. Firmly tighten the cable glands.

╘

4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

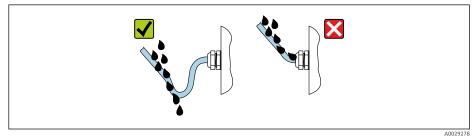

5. Insert blind plugs appropriate for the safety rating of the device (e.g. Ex d/XP).

6.4 Post-connection check

0	Are cables or the device undamaged (visual inspection)?
0	Do the cables comply with the requirements?
0	Do the cables have adequate strain relief?
0	Are all cable glands installed, firmly tightened and correctly sealed?
0	Does the supply voltage match the specifications on the transmitter nameplate?
0	Is the terminal assignment correct $\rightarrow \square 17?$
0	If required: Is the protective earth connected correctly ?
o	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
0	Are all housing covers installed and firmly tightened?
0	Is the securing clamp tightened correctly?

7 Operability

7.1 Overview of the operation options

The device is operated via an operating menu ($\rightarrow \square 41$). This menu can be accessed by the following interfaces:

- FieldCare connected through the service interface in the terminal compartment of the device ($\rightarrow \cong 53$).
- FieldCare connected through Tankvision Tank Scanner NXA820 (remote operation; $\rightarrow \cong 53$).
- FieldCare connected through Commubox FXA195 ($\rightarrow \square$ 106) to a HART interface of the device.

7.2 Structure and function of the operating menu

Menu	Submenu / parameter	Meaning
Operation	Level	Shows the measured and calculated level values.
	Temperature	Shows the measured and calculated temperature values.
	Density	Shows the measured and calculated density values.
	Pressure	Shows the measured and calculated pressure values.
	GP values	Shows the general purpose values.
Setup	Parameters 1 to N	Standard commissioning parameters
	Advanced setup	 Contains further parameters and submenus: to adapt the device to special measuring conditions. to process the measured value. to configure the signal output.
Diagnostics	Diagnostic parameters	Indicates:The latest diagnostic messages and their timestamps.The operating time (overall time and time since last restart).The time according to the real-time clock.
	Diagnostic list	Contains up to 5 currently active error messages.
	Device information	Contains information needed to identify the device.
	Simulation	Used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ¹⁾ Contains all parameters of the device (including those which are already contained in one of the	System	Contains all general device parameters which do not affect the measurement or the communication interface.
other menus). This menu is organized according to the function blocks of the device.	Sensor	Contains all parameters needed to configure the measurement.
The parameter of the Expert menu are described in: GP01071G (NMR84)	Input/output	Contains submenus to configure the analog and discrete I/O modules and connected HART devices.
	Communication	Contains all parameters needed to configure the digital communication interface.
	Application	Contains submenus to configure • the tank gauging application • the tank calculations • the alarms.
	Tank values	Shows measured and calculated tank values
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

1) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


7.3 Access to the operating menu via the local or remote display and operating module

- Operating via the remote display and operating module DKX001 (→
 19) or the local display and operating module at the device are equivalent.
 - The measured value is indicated on the DKX001 and on the local display and operating module simultaneously.
 - The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

7.3.1 Display and operating elements


The device has an illuminated **liquid crystal display (LCD)** that shows measured and calculated values as well as the device status in the standard view. Other views are used to navigate through the operating menu and to set parameter values.

The device is operated by **three optical keys**, namely "-", "+" and "E". They are actuated when the appropriate field on the protective glass of the front is **lightly** touched with the finger ("touch control").

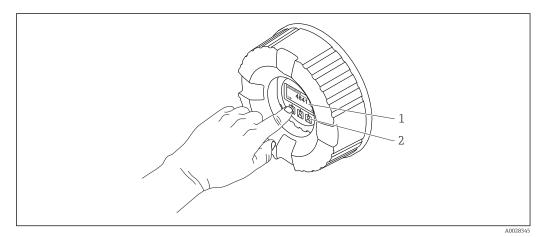

I5 Display and operating elements

- 1 Liquid crystal display (LCD)
- 2 Optical keys; can be operated through the cover glass. If used without the cover glass, lightly place your finger in front of the optical sensor for activation. Do not press hard.

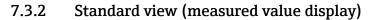



■ 16 Typical appearance of the standard view (measured value display)

- 1 Display module
- 2 Device tag
- 3 Status area
- 4 Display area for measured values
- 5 Display area for measured value and status symbols
- 6 Measured value status symbol

Status symbols

Symbol	Meaning		
A0013956	"Failure" A device error is present. The measured value is no longer valid.		
C	"Function check" The device is in service mode (e.g. during a simulation).		
S A0013958	 "Out of specification" The device is operated: Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span) 		
M A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.		

Measured value symbols

Symbol 1	Symbol 2	Measured value
A0028148		Tank levelMeasured levelTank level %
A0028149		Water level
T		Liquid temperature
A0028528		
Т	V	Vapor temperature
A0028528	A0027990	
Т	A	Air temperature
A0028528	A0027991	
A0027993		Tank ullageTank ullage %
ρ		Observed density value
A0028150		

Symbol 1	Symbol 2	Measured value
p	(1)	P1 (bottom)
A0028151	A0028141	
p	(2)	P2 (middle)
A0028151	A0028142	
p	(3)	P3 (top)
A0028151	A0028146	
G	(1)	GP 1 value
A0027992	A0028141	This is used for an external device.
G	(2)	GP 2 value
A0027992	A0028142	This is used for an external device.
G	(3)	GP 3 value
A0027992	A0028146	This is used for an external device.
G	(4)	GP 4 value
A0027992	A0028147	This is used for an external device.

Measured value status symbols

Symbol	Meaning
A0012102	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
A0012103	Status "Warning" The device continues measuring. A diagnostic message is generated.
A0031169	 Calibration to regulatory standards disturbed Is displayed in the following situations: The write protection switch is OFF. → 51 The write protection switch is ON but the level value can currently not be guaranteed.


Locking state symbols

Sy	mbol	Meaning	
C	A0011978	Display parameter Marks display-only parameters which cannot be edited.	
Device locked		Device locked	
	A0011979	In front of a parameter name: The device is locked via software and/or hardware.In the header of the measured value screen: The device is locked via hardware.	

Meaning of the keys in the standard view

Кеу	Meaning
A0028326	 Enter key Pressing the key briefly opens the operating menu. Pressing the key for 2 s opens the context menu: Level (visible if the keylock is inactive): Shows the measured levels. Keylock on (visible if the keylock is inactive): Activates the keylock. Keylock off (visible if the keylock is active): Deactivates the keylock.

7.3.3 Navigation view

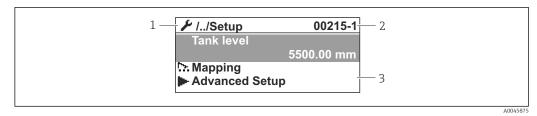

I7 Navigation view

- Current submenu or wizard 1
- 2 3 Quick access code
- Display area for navigation


Navigation symbols

Symbol	Meaning
A0011975	 Operation Is displayed: in the main menu next to the selection Operation in the header, if you are in the Operation menu.
A0011974	 Setup Is displayed: in the main menu next to the selection Setup in the header, if you are in the Setup menu
A0011976	 Expert Is displayed: in the main menu next to the selection Expert in the header, if you are in the Expert menu
V.	 Diagnostics Is displayed: in the main menu next to the selection Diagnostics in the header, if you are in the Diagnostics menu
A0013967	Submenu
A0013968	Wizard
A0013963	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked.

Meaning of the keys in the navigation view

Ке	у	Meaning
	A0028324	Minus key Moves the selection bar upwards in a picklist.
	A002832	Plus key Moves the selection bar downwards in a picklist.
	A0028324	 Enter key Pressing the key briefly opens the selected menu, submenu or parameter. For parameters: Pressing the key for 2 s opens the help text for the function of the parameter (if present).
	A0028327	 Escape key combination (press keys simultaneously) Pressing the keys briefly Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the keys for 2 s returns you to the measured value display ("standard view").

7.3.4 Wizard view

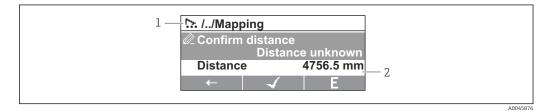

Wizard view on the display module


- 1 Current wizard
- 2 Display area for navigation

Wizard navigation symbols

Symbol	Meaning	
Ø	Parameters within a wizard	
A0013972		
_ ←	Switches to the previous parameter.	
A0013978		
\checkmark	Confirms the parameter value and switches to the next parameter.	
A0013976		
E	Opens the editing view of the parameter.	
A0013977		

In the wizard view the meaning of the keys is indicated by the navigation symbol directly above the respective key (softkey functionality).

7.3.5 Numeric editor

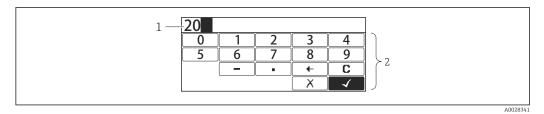

In Numeric editor on the display module


- 1 Display area of the entered value
- 2 Input mask

Symbol	Meaning
	Selection of numbers from 0 to 9.
A0013998	
	Inserts decimal separator at the input position.
A0016619	
	Inserts minus sign at the input position.
A0016620	
	Confirms selection.
A0013985	
	Moves the input position one position to the left.
A0016621	
	Exits the input without applying the changes.
A0013986	
С	Clears all entered characters.
A0014040	
	·

Meaning of the keys in the numeric editor

Кеу		Meaning
	A0028324	Minus key In the input mask, moves the selection bar to the left (backwards).
	A0028325	Plus key In the input mask, moves the selection bar to the right (forwards).
	A0028326	 Enter key Pressing the key briefly adds the selected number to the current decimal place or carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
	A0028327	Escape key combination (press keys simultaneously) Closes the text or numeric editor without applying changes.

7.3.6 Text editor

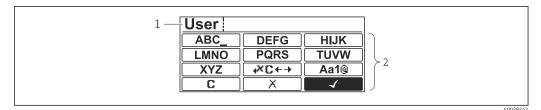

🖻 20 Text editor on the display module

Display area of the entered text Input mask 1

2

Text editor symbols

Symbol	Meaning
ABC_ XYZ	Selection of letters from A to Z
A0013997	
Aa1@	Toggle Between upper-case and lower-case letters For entering numbers For entering special characters
A0013985	Confirms selection.
	Switches to the selection of the correction tools.
X A0013986	Exits the input without applying the changes.
A0014040	Clears all entered characters.

Correction symbols under ₩C+→

C	Clears all entered characters.
A0013989	
Ð	Moves the input position one position to the right.
A0013991	
ŧ	Moves the input position one position to the left.
A0013990	
×.	Deletes one character immediately to the left of the input position.
A0013988	

Meaning of the keys in the text editor

Кеу	Meaning
▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲	Minus key In the input mask, moves the selection bar to the left (backwards).
	Plus key In the input mask, moves the selection bar to the right (forwards).
	 Enter key Pressing the key briefly Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
▲ ▲ ⊕ ⊕ ⊕ €	Escape key combination (press keys simultaneously) Closes the text or numeric editor without applying changes.

7.3.7 Keypad lock

Automatic keypad lock

Operation via the local display is automatically locked:

after a start-up or restart of the device.

• if the device has not been operated via the display for > 1 minute.

When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

Disabling the keypad lock

1. The keylock is enabled.

Press E for at least 2 seconds.

└ A context menu appears.

2. Select **Keylock off** from the context menu.

└ The keylock is disabled.

Manual activation of the keypad lock

After commissioning of the device the keypad lock can be activated manually.

1. The device is in the measured value display.

Press E for at least 2 seconds.

└ A context menu appears.

2. Select **Keylock on** from the context menu.

 \leftarrow The keylock is enabled.

7.3.8 Access code and user roles

Meaning of the access code

An access code can be defined in order to distinguish between the following user roles:

User role	Definition	
Maintenance	 e Knows the access code. Has write access to all parameters (except service parameters). 	
Operator	Doesn't know the access code.Has write access to only a few parameters.	

- The description of parameters states which role is needed at least for read and write access to each parameter.
 - The current user role is indicated by the Access status display.
 - If the access code is **"0000"**, every user is in the **Maintenance** role. This is the default setting on delivery of the device.

Defining an access code

- **1.** Navigate to: Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code \rightarrow Define access code
- 2. Enter the intended access code (max. 4 digits).
- **3.** Repeat the same code in the Confirm access code.
 - └ The user is in the **Operator** role. The [∩]_B-symbol appears in front of all writeprotected parameters.

Switching to the "Maintenance" role

If the *g*-symbol appears on the local display in front of a parameter, the parameter is write-protected because the user is in the **Operator** role. To switch to the **Maintenance** role, proceed as follows:

- 1. Press E.
 - └ The input prompt for the access code appears.
- 2. Enter the access code.
 - → The user is in the **Maintenance** role. The B-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.


Switching back to the "Operator" role automatically

The user automatically switches back to the **Operator** role:

- if no key is pressed for 10 minutes in the navigation and editing mode.
- 60 s after going back from the navigation and editing mode to the standard view (measured value display).

7.3.9 Write protection switch


The operating menu can be locked by a hardware switch in the connection compartment. In this locking state W&M related parameters are read only.

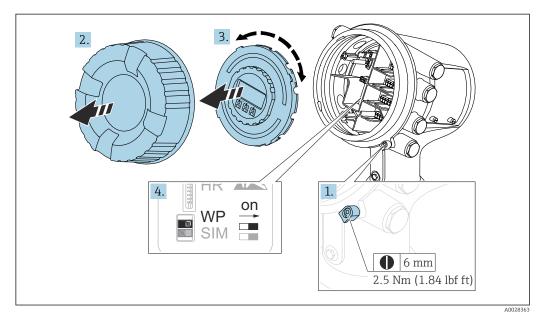


The display module can be attached to the edge of the electronics compartment. This makes it easier to access the lock switch.

- 1. Loosen the securing clamp.
- 2. Unscrew the housing cover.
- 3. Pull out the display module with a gentle rotation movement.
- 4. Using a flat blade screwdriver or a similar tool, set the write protection switch **(WP)** into the desired position. **ON:** operating menu is locked; **OFF:** operating menu is unlocked.
- 5. Put the display module onto the connection compartment, screw the cover closed and tighten the securing clamp.




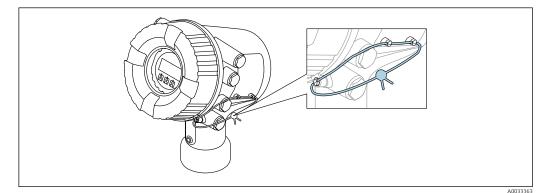

■ 21 Sealing of the cover of the connection compartment

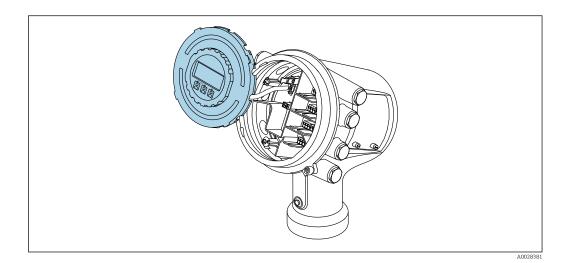


Indication of the locking state

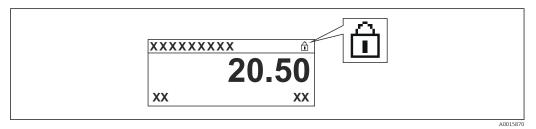

☑ 22 Write protection symbol in the header of the display

7.4 Access to the operating menu via the service interface and FieldCare

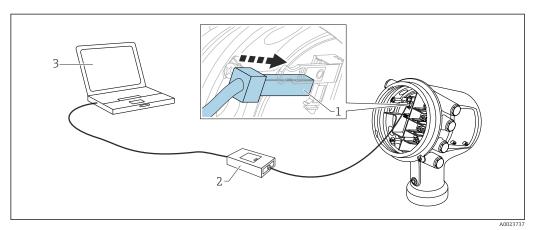

- ☑ 23 Operation via service interface
- *1* Service interface (CDI = Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool and "CDI Communication FXA291" COM DTM


The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset = Restart device. This ensures correct operation of the device after the restore.

7.5 Access to the operating menu via Tankvision Tank Scanner NXA820 and FieldCare

7.5.1 Wiring scheme

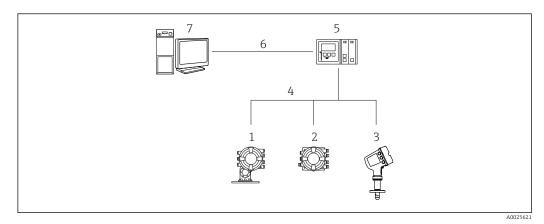

24 Connection of Tank Gauging devices to FieldCare via the Tankvision Tank Scanner NXA820

- 1 Proservo NMS8x
- 2 Tankside Monitor NRF81
- 3 Micropilot NMR8x
- 4 Field protocol (e.g. Modbus, V1)
- 5 Tankvision Tank Scanner NXA820
- 6 Ethernet
- 7 Computer with FieldCare installed

Make sure the H required.	ART CommDT	M NXA i	s installed and upda	ate the DTM cata	logi
Create a new pro	ject in FieldCa	e.			
-	5				
(Add New Device				
	Device		Version	Class	
	CDI Communication PA CDI Communication 10 CDI Communication 10 CommDTM PROFIBUS FF H1 CommDTM Flow Communication F PAA520 HART Communication IPC (Level, Pressure) F INCA HART Communic PCP (Readwin) TXU10 PROFIdtm DPV1 SFGNetwork	P/IP 68 5 DP-V1 KA193/291 XA193/291 alion	V2.05.01 (2015-04-28) V2.05.01 (2015-04-28) V2.05.01 (2015-04-28) V4.0.0.9 (2011-01-17) V1.5 (2009-08-17) V3.26.00 (2015-04-07) V1.05.09 (2011-07-15) V1.052 (2015-03-17) V1.052 (2015-03-17) V1.02.17 (2014-02-21) V1.01.18 (2014-02-21) V1.01.18 (2014-02-21) V1.01.18 (2014-02-21) V2.11(115) (2010-08-18) V1.06.00.285 (2015-03-25)	dtmSpecific	
		10.00			
	Device:		(DTM) information Communication		
	Manufacturer:	Endress+Ha			
	Device ID / SubID:	0.000			
	Manufacturer ID:	17			
	Hardware revision:				
	Software revision:				
	Device revision:				
	Profile revision:				
	Is generic:	No			
	Help		ОК	Cancel	


Establishing the connection between FieldCare and the device 7.5.2

Add a new device: NXA HART Communication

NXA HART Communication	(Configuration) ×	:	
NXA820 IP Address	1	192.168.2.10	0
NXA820 Port	-	3000	
Password		******	
Tank Identification		Tank_1	
Address range to scan	Start address		0 🗸
	End address		15 🗸
Communication timeout (seconds)		10 🗸
	NXA820 IP Address NXA820 Port Password Tank Identification Address range to scan	NXA820 IP Address NXA820 Port Password Tank Identification Address range to scan Start address	NXA820 Port 3000 Password ******* Tank Identification Tank_1 Address range to scan Start address End address

Open the configuration of the DTM and enter the required data (IP address of the NXA820; "Password" = "hart"; "Tank identification" only with NXA V1.05 or higher)

A00'

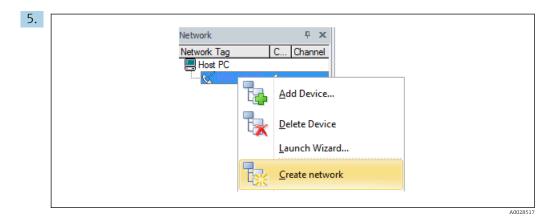

Select **Create network** from the context menu.

← The device is detected and the DTM is assigned.

Tank level (139): C) Distance (120): C) Status signal: C)	494,8		Liquid temperature: 🖏 Water level: 🖏
🖲 🗖 🗖 🚺 🔗 💌 😫 😫	🖄 🛃 💠 🚺 Value	Unit	Wizard
Image: Minimized problem Minimized problem Image: Problem Access status tooling: Image: Problem Operation Image: Problem Setup Image: Problem Setup Image: Problem Diagnostics Image: Problem Expert	Maintenance		Instrument health status

└ The device can be configured.

The "Save/Restore" function

i

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset = Restart device. This ensures correct operation of the device after the restore.

8 System integration


8.1 Overview of the Device Description files (DTM)

To integrate the device via HART into FieldCare, a Device Description file (DTM) according to the following specification is required:

Manufacturer ID	0x11
Device type (NMR8x)	0x112E
HART specification 7.0	
DD files	For information and files see: www.endress.com

9 Commissioning

9.1 Terms related to tank measurement

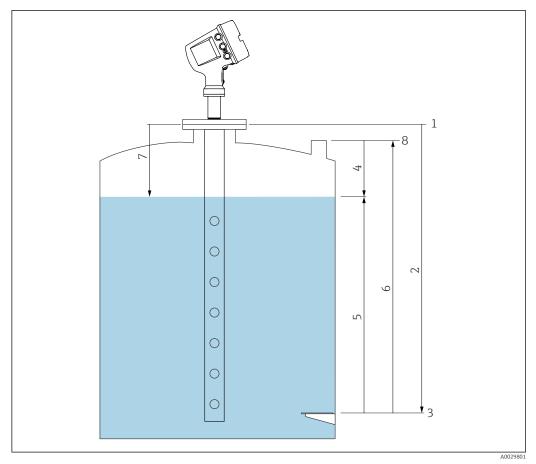

■ 25 Terms related to radar tank measurement

- 1 Gauge reference height
- 2 Empty
- 3 Datum plate
- 4 Tank ullage
- 5 Tank level
- 6 Tank reference height
- 7 Distance
- 8 Dipping reference

9.2 Initial settings

9.2.1 Setting the display language

Setting the display language via the display module

- **1.** While in the standard view (→ 🗎 43), press "E". If required, select **Keylock off** from the context menu and press "E" again.
 - └ The Language appears.
- 2. Open the Language and select the display language.

Setting the display language via an operating tool (e.g. FieldCare)

1. Navigate to: Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Language

2. Select the display language.

This setting only affects the language on the display module. To set the language in the operating tool use the language setting functionality of FieldCare or DeviceCare, respectively.

9.2.2 Setting the real-time clock

Setting the real-time clock via the display module

- **1.** Navigate to: Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Set date
- 2. Use the following parameters to set the real-time clock to the current date and time: Year, Month, Day, Hour, Minutes.

Setting the real-time clock via an operating tool (e.g. FieldCare)

1	Navigate to: Setur) →	Advanced setup \rightarrow Date	e / time
2	1			
	Date/time: 🕻		2016-04-20 09:32:24]
	Set date:		Please select 🗸	
			Please select	
			Abort	
			Start 📐	
			Confirm time	

Go to the Set date and select the Start.

Date/time: 🚺		2016-04-20 09:34:25
Set date: ?		Please select
Year:		2016
Month:		4
Day:		20
Hour:		9
Minute:		34
	Set date: ? Year: Month: Day: Hour:	Set date: ? > Year: Month: Day: Hour:

Use the following parameters to set the date and time: **Year**, **Month**, **Day**, **Hour**, **Minutes**.

4.	Date/time: 🚺	2016-04-20 09:35:49
	Set date: ?	Please select
	Year:	Please select Abort
	Month:	Start
	Day:	Confirm time
	Hour:	9
	Minute:	34

Go to the Set date and select the Confirm time.

└ The real-time clock is set to the current date and time.

9.3 Configuring the measuring device

9.3.1 Configuration of the level measurement

The first parameters of the **Setup** menu are used to configure the measurement. A short description is given in the following sections. For a more detailed description refer to the parameter description in the appendix $\rightarrow \square$ 128.

Basic settings

Navigation path: Setup

Parameter	Meaning	Description
Setup \rightarrow Device tag	Define a name to identify the measuring point within the plant.	→ 🖺 128
Setup → Units preset	Select a set of units for length, pressure and temperature.	→ 🖺 128
Setup → Tube diameter	Enter the diameter of the stilling well.	→ 🖺 234
Setup → Empty	Enter the distance from the lower edge of the device flange to the datum plate.	→ 🖺 129
Setup \rightarrow Tank level	Shows the measured level. Check whether the indicated value matches the actual level.	→ 🖺 118
Setup → Set level	Can be used to correct a constant shift of the measured level. If the indicated level does not match the actual level: Enter the actual level into this parameter. An offset for the measured level is then automatically defined.	→ 🗎 130

The Set level can only be used to compensate for a constant level error. To eliminate errors resulting from interference echos, use the interference echo suppression (map).

Interference echo suppression (map) in an operating tool (e.g. FieldCare/DeviceCare) Navigation path: Setup

Parameter	Meaning	Description
Setup \rightarrow Distance	Shows the measured distance from the lower edge of the device flange to the product surface. Check whether this value is correct.	→ 🗎 133
Setup → Confirm distance	Specify whether the measured distance matches the actual distance. The selection determines up to which distance an interference echo suppression is recorded.	→ 🗎 130
Present mapping	Shows up to which distance a mapping has already been recorded.	
Setup → Mapping end point	Only visible for Confirm distance = Manual map . Determines up to which distance the new mapping will be recorded. Depending on the selection in Confirm distance a suitable value is preset in this parameter. Usually, there is no need to change this value.	
Setup → Record map	Only visible for Confirm distance = Manual map Select Record map . This starts the recording of the new map.	→ 🖺 132

Interference echo suppression on the local display

Navigation path: Setup \rightarrow Mapping

For the meaning of the parameters in this wizard see the table above.

Dip table


The dip table is used to correct the level readings using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions such as a mechanical offset and the tank or stilling well design.

The dip table is managed in the **Dip-table** submenu $\rightarrow \bigoplus 219$.

9.4 Configuring the tank gauging application

Configuration of the inputs:	Description
HART inputs	→ 🗎 63
NMT532/539/81 connected via HART	→ 🗎 65
4-20mA inputs	→ 🗎 67
RTD input	→ 🗎 68
Digital inputs	→ 🗎 70
Configuration of the data processing in the device:	Description
Linking input values to tank variables	→ 🗎 71
Tank calculation: Direct Level Measurement	→ 🗎 72
Tank calculation: Hybrid Tank Measurement System (HTMS)	→ 🗎 73
Tank calculation: Correction of the Hydrostatic Tank Deformation (HyTD)	→ 🗎 74
Tank calculation: Thermal Tank Shell Correction (CTSh)	→ 🗎 75
Alarms (limit evaluation)	→ 🗎 81
Configuration of the signal output:	Description
4-20mA output	→ 🗎 82
HART slave + 4-20mA output	→ 🖺 83
Modbus	→ 🖺 84
V1	→ 🗎 85
Digital outputs	→ 🗎 86
WM550	→ 🗎 85

9.4.1 Configuration of the HART inputs

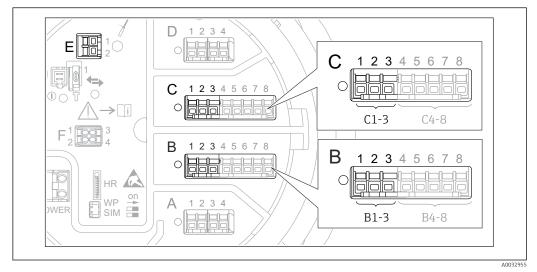

Connecting and addressing HART devices

■ 26 Possible terminals for HART loops

- *B* Analog I/O module in slot *B* (availability depending on device version $\rightarrow \triangleq 20$)
- C Analog I/O module in slot C (availability depending on device version $\rightarrow \cong 20$)
- *E* HART Ex is output (available in all device versions)

Slot B or C: Setting the operating mode of the Analog I/O module

This section is not relevant for the HART Ex is output (Slot E). This output always functions as a HART master for the connected HART slaves.

If HART devices are connected to an Analog I/O module (slot B or C in the terminal compartment), this module must be configured as follows:

- **1.** Navigate to the submenu of the respective Analog I/O module: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O X1-3
- **2.** Go to the Operating mode ($\rightarrow \square 149$).

3. If only one HART device is connected to this loop:

Select the HART master+4..20mA input. In this case the 4-20mA signal can be used in addition to the HART signal. For the configuration of the 4-20mA input: $\rightarrow \square 67$.

4. If up to 6 HART devices are connected to this loop: Select the HART master.

³⁾ The current software does not support HART devices with address 0 (zero).

Defining the type of measured value

This setting can be skipped for a connected Prothermo NMT53x and NMT8x as the type of measured value is automatically recognized by the Micropilot NMR8x in this case.

- The measured values can only be used in the system if the unit of the assigned HART variable fits the type of measured value. The HART variable assigned to **Output temperature**, for example, has to be in °C or °F.
 - A HART variable with unit "%" cannot be used for **Output level**. Instead, the HART variable must be in mm, m, ft or in.

The type of measured value must be specified for each HART variable (PV, SV, TV and QV). To do so, proceed as follows:

- **1.** Navigate to: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices
 - ← There is a submenu for each connected HART device.
- 2. For each device go to the corresponding submenu.
- 3. If the device measures a pressure:

Go to the Output pressure ($\rightarrow \implies$ 139) and specify which of the four HART variables contains the measured pressure. Only a HART variable with a pressure unit may be selected.

4. If the device measures a density:

Go to the Output density ($\rightarrow \square$ 139) and specify which of the four HART variables contains the measured density. Only a HART variable with a density unit may be selected.

5. If the device measures a temperature:

Go to the Output temperature ($\rightarrow \square$ 140) and specify which of the four HART variables contains the measured temperature. Only a HART variable with a temperature unit may be selected.

6. If the device measures the vapor temperature:
 Go to the Output vapor temperature (→
 ¹ 140) and specify which of the four HART variables contains the measured vapor temperature. Only a HART variable with a

temperature unit may be selected.

7. If the device measures a level:

Go to the Output level ($\rightarrow \cong 141$) and specify which of the four HART variables contains the measured level. Only a HART variable with a level unit (not "%") may be selected.

Disconnecting HART devices

When a HART device is disconnected from the device, it must also be logically removed as follows:


- **1.** Navigate to Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow Forget device
- 2. Select the HART device to be removed.

This procedure is also necessary if a defective device is exchanged.

9.4.2 Configuration of a connected Prothermo temperature transmitter

If a Prothermo NMT532, NMT539 or NMT8x temperature transmitter is connected via HART, it can be configured as follows:

- 1. Navigate to: Expert → Input/output → HART devices → HART Device(s) → NMT device config; here, **HART Device(s)** is the name of the connected Prothermo.
- 2. Go to the Configure device? and select **Yes**.

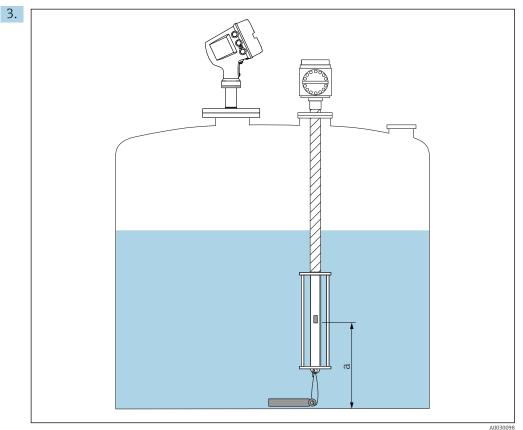



27 Prothermo NMT53x: Position of the bottom temperature element

a Distance from bottom temperature element to zero reference (tank bottom or datum plate).

To configure a **Prothermo NMT53x**: Go to the Bottom point and enter the position of the bottom temperature element (see picture above).

└ The value entered into the Bottom point in the Tank Gauging device is handed over to the Bottom point in the connected Prothermo NMT53x.

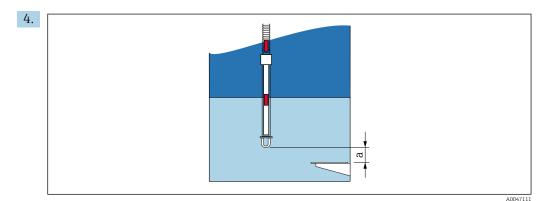

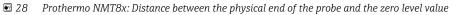


a Distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

To configure a **Prothermo NMT8x**: Go to the Bottom point and enter the distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

→ The value entered into the Bottom point in the Tank Gauging device is handed over to the End of probe to zero distance in the connected Prothermo NMT8x.

To check the temperatures measured by the individual elements, go to the following submenu: Operation \rightarrow Temperature \rightarrow NMT element values \rightarrow Element temperature

There is a Element temperature X for each element of the Prothermo.

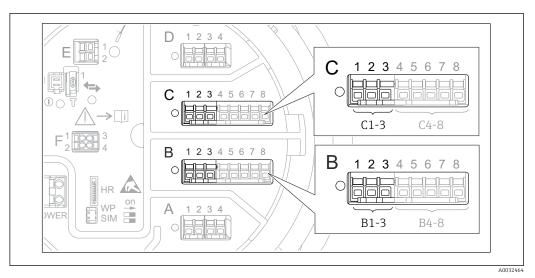


9.4.3 Configuration of the 4-20mA inputs

■ 29 Possible locations of the Analog I/O modules, which can be used as a 4-20mA input. The order code of the device determines which of these modules is actually present $\rightarrow \cong 20$.

For each Analog I/O module to which a 4-20mA device is connected, proceed as follows:


- 1. Make sure the 4-20mA devices are connected as defined by the terminal assignment → \cong 31.
- 2. Navigate to the submenu of the respective Analog I/O module: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O X1-3
- 3. Go to the Operating mode ($\rightarrow \cong$ 149) and select **4..20mA input** or **HART master +4..20mA input**.
- 4. Go to the Process value ($\rightarrow \triangleq 156$) and specify which process variable is transmitted by the connected device.
- **5.** Go to the Analog input 0% value ($\rightarrow \cong 155$) and define which value of the process variable corresponds to an input current of 4 mA (see diagram below).
- **6.** Go to the Analog input 100% value ($\rightarrow \square$ 155) and define which value of the process variable corresponds to an input current of 20 mA (see diagram below).
- **7.** Go to the Process value ($\rightarrow \triangleq 156$) and check whether the indicated value matches the actual value of the process variable.

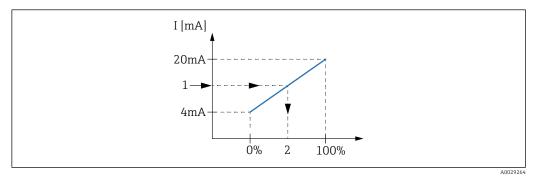

- 30 Scaling of the 4-20mA input to the process variable
- 1 Input value in mA
- 2 Process value




The **Analog I/O** submenu contains additional parameters for a more detailed configuration of the Analog Input. For a description refer to : $\rightarrow \implies 149$

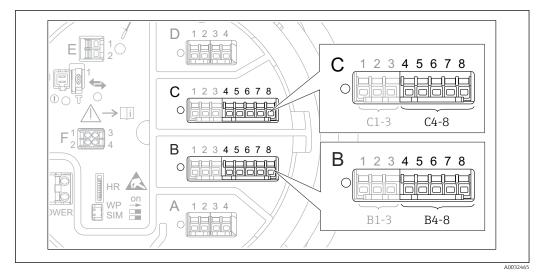

9.4.4 Configuration of a connected RTD


- 31 Possible locations of the Analog I/O modules, to which an RTD can be connected. The order code of the device determines which of these modules is actually present $\rightarrow \cong 20$.
- **1.** Make sure the RTD is connected as defined by the terminal assignment $\rightarrow \square$ 36.
- **2.** Navigate to the submenu of the respective Analog I/O module: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP X4-8.
- 3. Go to the RTD type ($\rightarrow \square$ 143) and specify the type of the connected RTD.

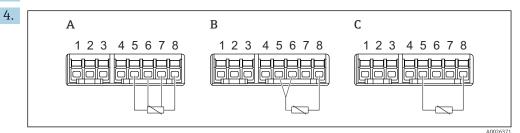

- 32 RTD connection types
- A 4 wire RTD connection
- *B* 3 wire RTD connection
- C 2 wire RTD connection

Go to the RTD connection type ($\rightarrow \square$ 144) and specify the type of connection of the RTD (2-, 3- or 4-wire).

- 5. Go to the Input value ($\rightarrow \square$ 146) and check whether the indicated temperature matches the actual temperature.
- 6. Go to the Minimum probe temperature ($\rightarrow \square$ 146) and specify the minimum approved temperature of the connected RTD.
- **7.** Go to the Maximum probe temperature ($\rightarrow \triangleq 147$) and specify the maximum approved temperature of the connected RTD.

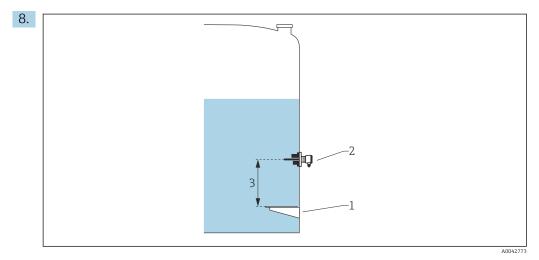

- 1 Datum plate
- 2 RTD
- 3 Probe position ($\rightarrow \square 147$)


Go to the Probe position ($\rightarrow \square$ 147) and enter the mounting position of the RTD (measured from the datum plate).

└ This parameter, in conjunction with the measured level, determines whether the measured temperature refers to the product or to the gas phase.

Offset for resistance and/or temperature


An offset for the resistance or the temperature can be defined in the following submenu: Expert \rightarrow Input/output \rightarrow Analog IP X4-8.

- **Ohms offset** is added to the measured resistance before the calculation of the temperature.
- **Temperature offset after conversion** is added to the measured temperature.

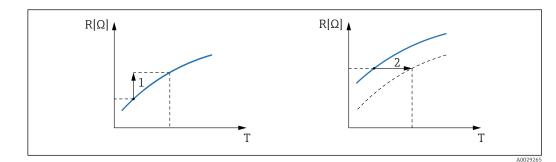

1 Ohms offset

2 Temperature offset after conversion

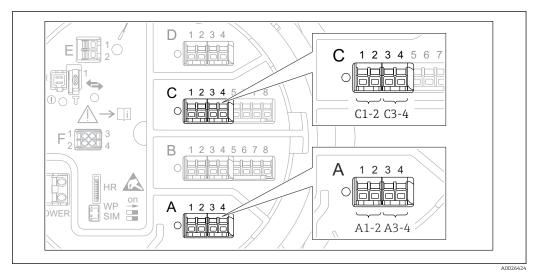


9.4.5 Configuration of the digital inputs

■ 33 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of digital input modules \rightarrow \cong 20.

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode** and **Contact type**.

The Operating mode

Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Operating mode

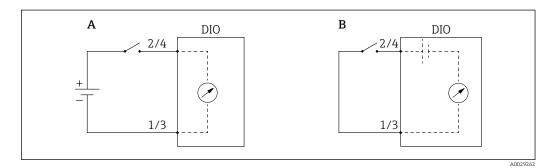

A "Operating mode" = "Input passive"

B "Operating mode" = "Input active"

Meaning of the options

Input passive

The DIO module measures the voltage provided by an external source. Depending on the status of the external switch, this voltage is 0 at the input (switch open) or exceeds a certain limit voltage (switch closed). These two states represent the digital signal.

Input active

The DIO module provides a voltage and uses it to detect whether the external switch is open or closed.

The Contact type

Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Contact type

This parameter determines how the state of the external switch is mapped to the internal states of the DIO module:

State of the external switch	Internal state of the DIO module			
	Contact type = Normally open	Contact type = Normally closed		
Open	Inactive	Active		
Closed	Active	Inactive		
Behavior in special situations:				
During start-up	Unknown	Unknown		
Fault in measurement	Error	Error		

- The internal state of the Digital Input can be transferred to a Digital Output or can be used to control the measurement.


9.4.6 Linking input values to tank variables

Measured values must be linked to tank variables before they can be used in the Tank Gauging application. This is done by defining the source of each tank variable in the following parameters:

Tank variable	Parameter defining the source of this variable	
Bottom water level	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Level \rightarrow Water level source	
Average or spot temperature of the product	 Setup → Liquid temp source Setup → Advanced setup → Application → Tank configuration → Temperature → Liquid temp source 	
Temperature of the air surrounding the tank	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Temperature \rightarrow Air temperature source	
Temperature of the vapor above the product	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Temperature \rightarrow Vapor temp source	
Density of the product	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Density \rightarrow Observed density source	
Bottom pressure (P1)	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 (bottom) source	
Top pressure (P3)	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 (top) source	




Depending on the application not all these parameters will be relevant in a given situation.

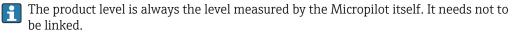

9.4.7 Tank calculation: Direct level measurement

If no tank calculation is configured, level and temperature are measured directly.

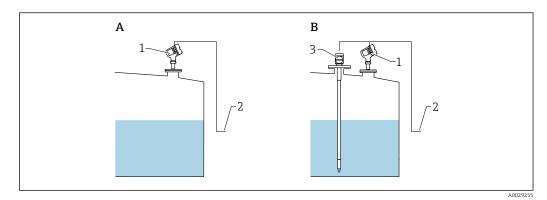


- *A* Direct level measurement (without temperature)
- *B* Direct level and temperature measurement
- 1 Level transmitter
- 2 To inventory management system
- 3 Temperature transmitter
- If a temperature transmitter is connected: Navigate to: "Setup → Liquid temp source" and specify from which device the temperature is obtained.

9.4.8 Tank calculation: Hybrid tank measurement system (HTMS)

HTMS uses level and pressure measurements to calculate the density of the medium.

In non-atmospheric (i.e. pressurized) tanks it is recommended to use the **HTMS P1+P3** mode. Two pressure sensors are required in this case. In atmospheric (i.e. unpressurized) tanks the **HTMS P1** with only one pressure sensor is sufficient.

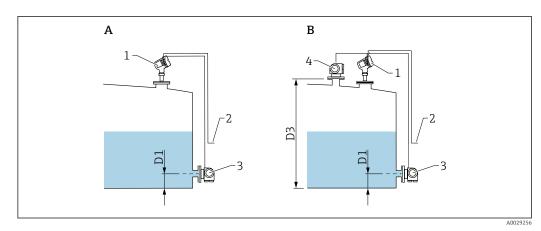

- A "'HTMS mode" parameter" = "'HTMS P1" option"
- B "'HTMS mode" parameter" = "'HTMS P1+P3" option"
- D1 P1 position
- D3 P3 position
- 1 Micropilot
- 2 To inventory management system
- *3 Pressure sensor (bottom)*
- 4 Pressure sensor (top)

1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Pressure


- 2. Go to **P1 (bottom) source (→** 🗎 **195)** and specify from which device the bottom pressure (P1) is obtained.
- 3. If a top pressure transmitter (P3) is connected:

Go to P3 (top) source ($\rightarrow \square$ 197) and specify from which device the top pressure (P3) is obtained.

- 4. Navigate to: Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HTMS
- 5. Go to **HTMS mode** ($\rightarrow \square 215$) and specify the HTMS mode.
- 6. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank configuration \rightarrow Density
- 7. Go to **Observed density source** ($\rightarrow \triangleq 193$) and select **HTMS**.
- 8. Use the other parameters of the HTMS to configure the calculation. For a detailed description: → 🖹 213

9.4.9 Tank calculation: Hydrostatic Tank Deformation (HyTD)

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels divided over the full range of the tank.

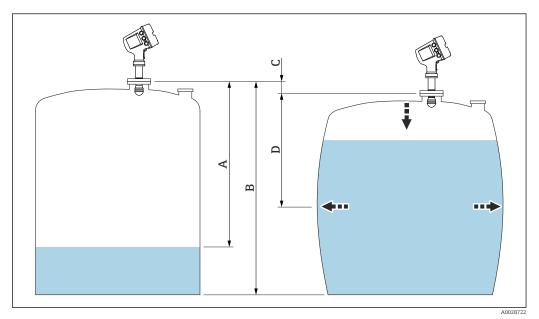

■ 34 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (tank nearly empty)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (tank filled)

The Correction of the Hydrostatic Tank Deformation is configured in the HyTD $(\rightarrow \cong 202)$

9.4.10 Tank calculation: Thermal tank shell correction (CTSh)

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

This correction is recommended for the following situations:


- if the operating temperature deviates considerably from the temperature during calibration (ΔT > 10 °C (18 °F))
- for extremely high tanks
- for refrigerated, cryogenic or heated applications

As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.

This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

9.4.11 Tank calculation: Gas phase correction for liquefied gases (CLG)

The gas phase in pressurized tanks has a direct impact on the distance determination for time-of-flight sensors. This feature corrects the influences of the vapor phase based on its pressure, temperature and composition.

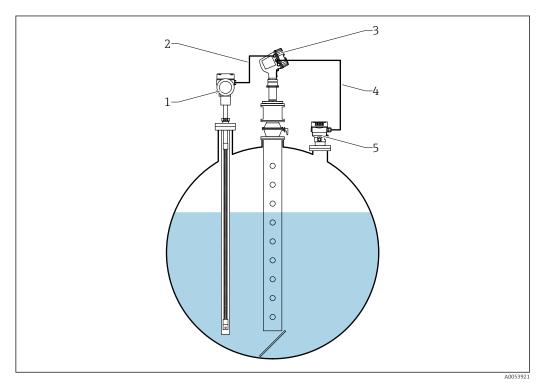

1 Prothermo temperature measurement device, equipped with thermowell or protective pipe

- 2 HART connection
- 3 Radar level gauge Micropilot NMR84
- 4 HART connection
- 5 Digital pressure transmitter

The gas phase correction for liquefied gases (CLG) is configured in the **CLG** submenu submenu.

Navigation path: Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CLG

2. CLG mode: Mix of four gases CLG to tank level: No Gas 1: Hydrogen H2 Pentane C5H12 Gas 2: Gas 3: Isobutylene C4H8 Gas 4: Nitrogen N2 Gas 1 ratio: 90 Gas 2 ratio: 6 2 Gas 3 ratio: Gas 4 ratio: 2 CLG correction value: -0.1 mm CLG corrected level: 🔁 17741.9 mm

Configuration of the gas phase correction for liquefied gases (CLG)

1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CLG

Go to the **CLG mode** parameter. Count the number of gases that make up the gas mix and select the appropriate option.

- 3. Go to the **Gas 1** parameter and select one of the gases in the gas mix from the list.
- 4. If the gas in the tank is not in the list, select **Custom** option.
- 5. If the **Custom** option has been selected, go to the **Gas 1 refractive index** parameter and enter the refractive index of this gas.
- 6. Repeat the above steps for up to 4 gases.
- 7. If there is more than 1 gas in the tank, go to the **Gas 1 ratio** parameter and enter the share of gas 1. The share is entered in percent (i. e. mixture of 2 gases with 25 and 75 percent) or in amounts (i. e. mixture of 2 gases with 1 amount and 3 amounts), no unit required.
- 8. Repeat this step for up to 4 gases.
- 9. Go to the **CLG to tank level** parameter and activate or deactivate the tank level correction by CLG.

SIL- or WHG-Mode sets the **CLG to tank level** parameter to **No** option to deactivate the tank level correction by CLG.

The **CLG** correction value parameter shows the CLG correction value, and the **CLG** corrected level parameter shows the level with CLG correction only.

9.4.12 Configuration of the level reference check (LRC) function

For tanks where a manual dipping cannot be performed the level gauge can be verified by means of the LRC function.




This reference check is recommended for liquefied gas applications.

There are different options for this function:

- LRC with reference level
- LRC with point reference
- LRC with reference switch

LRC with reference level

The radar device compares it's own level reading with the level reading of another level gauge (e.g. Proservo NMS8x). Based on a configurable deviation value (**Allowed difference** parameter), a continuous check is performed.

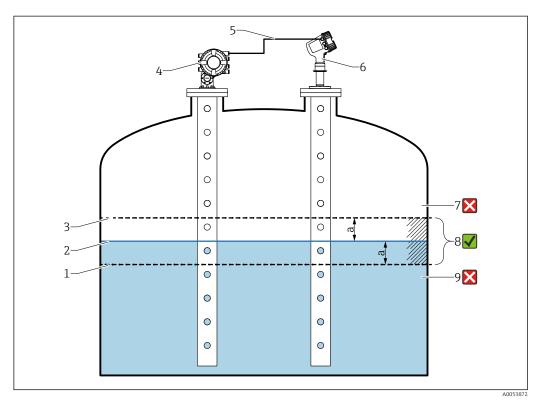

35 Application example with Proservo NMS8x

- 1 Lower limit of deviation value "a" as configured in radar level gauge
- 2 Reference value: Measured level as provided by level gauge Proservo NMS8x
- 3 Upper limit of deviation
- 4 Proservo NMS8x provides the reference value
- 5 Level gauges are interconnected via HART interface
- 6 Radar level gauge with configured deviation value "a" for "Allowed difference" parameter
- 7 The measured level is greater than reference value plus deviation value "a": Level value is not verified
- 8 The measured level is within or equal to the limits defined by the deviation value "a": Level value is verified
- 9 The measured level is less than reference value minus deviation value "a": Level value is not verified

Properties

- Frequency: The reference check is performed continuously every 60 seconds.
- Tolerance: Via the **Check fail threshold** parameter, a configurable number of failures is allowed before the status switches to failed.
- Connection: The level reference device is connected via an optional HART I/O board.

Configuration of LRC with reference level

1. Navigate to Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2

2.	LRC Mode:		Compare with level device 🛛 🖂]
	Allowed difference:		10.0	mm
	Check fail threshold:		3	
	Reference level source:	►	No input value	
	Reference level: 🥂 🧭		0.0	mm
	Check level: 🧭		0.0	mm
	Check status:		not executed 🖂	
	Check timestamp: 💋			


Go to the LRC Mode parameter and select the Compare with level device option.

- **3.** Go to the **Allowed difference** parameter and specify the value for the allowed difference between the tank level and the reference.
- **4.** Go to the **Check fail threshold** parameter and set the tolerated amount of failures before an alarm is triggered. As the reference check is performed continuously every 60 seconds, this resembles the number of minutes until an alarm is triggered.
- 5. Go to the **Reference level source** parameter and define the source for the reference level.

LRC with point reference

Mechanical parts in the tank can be used as reference points to perform a reference measurement. The reference distance can be saved to the device. Based on a configurable deviation value (**Allowed difference** parameter), a manual check can be started.

A closed cut off ball valve or a fixed reference ring at the end of a stilling well are examples for suitable reference measurement installations.

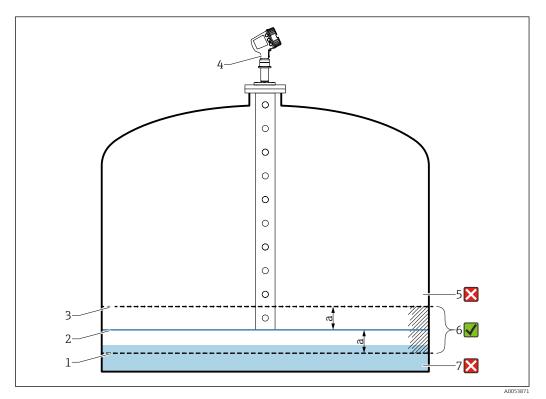

36 Application example with fixed reference point at the end of the stilling well

1 Lower limit of deviation value "a" as configured in radar level gauge

- 2 Reference value: Distance from radar level gauge to object fixed to stilling well
- *3* Upper limit of deviation
- 4 Radar level gauge with configured deviation value "a" for "Allowed difference" parameter
- 5 The measured level is greater than reference value plus deviation value "a": Level value is not verified
- 6 The measured level is within or equal to the limits defined by the deviation value "a": Level value is verified
- 7 The measured level is less than reference value minus deviation value "a": Level value is not verified

Configuration of LRC with point reference

Allo	<u>I Mode:</u> wwed difference:		Measure reference point	
Rel			10.0	mm
	erence point level:		17740.0	mm
Sta	rt reference measurement:		No	
Chi	eck level:	Ð	0.0	mm
Chi	eck status:	C	not executed 🖂	
Chi	eck timestamp:	C		


Go to the **LRC Mode** parameter and select the **Measure reference point** option.

2

- **3.** Go to the **Allowed difference** parameter and specify the value for the allowed difference between the tank level and the reference.
- 4. Go to the **Reference point level** parameter and define the position of the reference point as level.
- 5. Go to the **Start reference measurement** parameter and set **Yes** option to start the measurement of the reference point and execute the check.

LRC with reference switch

A level switch (e.g. Liquiphant FTLx) can be mounted within the tank. The check can be performed continuously, each time the level switch is activated or deactivated. The measured level should remain within a configurable deviation.

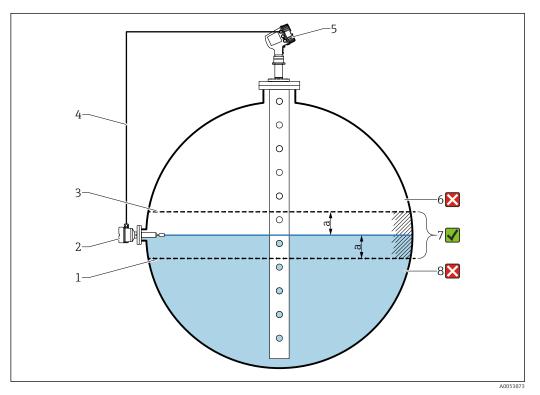

■ 37 Application example with level switch

1

Lower limit of deviation value "a" as configured in radar level gauge

- 2 Reference value: The switching point of an installed level switch represents the reference value for verification
 3 Upper limit of deviation
- 4 Level switch and level gauge are interconnected via a digital I/O board
- 5 Radar level gauge with configured deviation value "a" for "Allowed difference" parameter
- 6 The measured level is greater than reference value plus deviation value "a": Level value is not verified
- 7 The measured level is within or equal to the limits defined by the deviation value "a": Level value is verified
- 8 The measured level is less than reference value minus deviation value "a": Level value is not verified

Properties

- Modes: The device can be set to monitor the switching point while filling or draining the tank.
- Connection: The level switch is connected via a digital I/O board.

Configuration of LRC with reference switch

1. Navigate to Diagnostics \rightarrow LRC \rightarrow LRC 1 to


LRC Mode:		Compare with level switch	
Allowed difference:		10.0	mm
Reference switch source:	•	None	
Reference switch mode:		Inactive -> Active	
Reference switch level:		17740.0	mm
Reference switch state: 💋		Unknown	
Check level:		0.0	mm
Check status:		not executed 🖂	
Check timestamp:			

Go to the **LRC Mode** parameter and select the **Compare with level switch** option.

- **3.** Go to the **Allowed difference** parameter and specify the value for the allowed difference between the tank level and the reference.
- 4. Go to the **Reference switch source** parameter and select the source for the reference switch.
- 5. Go to the Reference switch mode parameter. Select the Active -> Inactive option to define the switch direction for the reference check to be executed when the switch status changes from Active to Inactive. Or select the Inactive -> Active option to define the switch direction for the reference check to be executed when the switch status changes from Inactive to Active.
- 6. Go to the **Reference switch level** parameter and enter the position of the reference switch by entering a value with a unit of length. This parameter depends on the choice made for the **Distance unit** parameter.
 - └ This defines the position of the reference switch as level.

9.4.13 Configuration of the alarms (limit evaluation)

A limit evaluation can be configured for up to 4 tank variables. The limit evaluation issues an alarm if the value exceeds an upper limit or falls below a lower limit, respectively. The limit values can be defined by the user.

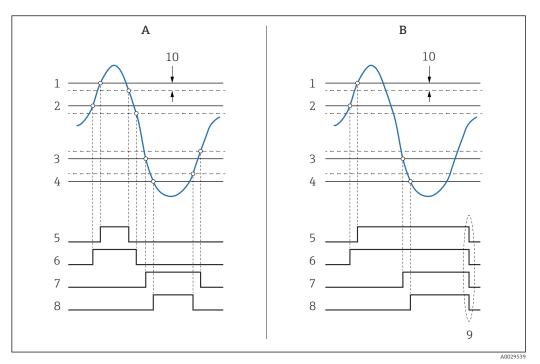

🗷 38 Principle of the limit evaluation


- A Alarm mode = On
- B Alarm mode = Latching
- 1 HH alarm value
- 2 H alarm value
- 3 L alarm value
- 4 LL alarm value
- 5 HH alarm
- 6 H alarm
- 7 L alarm
- 8 LL alarm
- 9 "Clear alarm" = "Yes" or power off-on
- 10 Hysteresis


The limit evaluation is configured in the **Alarm 1 to 4** submenus.

Navigation path: Setup \rightarrow Advanced setup \rightarrow Alarm \rightarrow Alarm 1 to 4




For **Alarm mode** = **Latching** all alarms remain active until the user selects **Clear alarm** = **Yes** or the power is switched off and on.

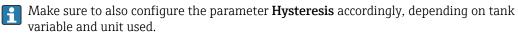

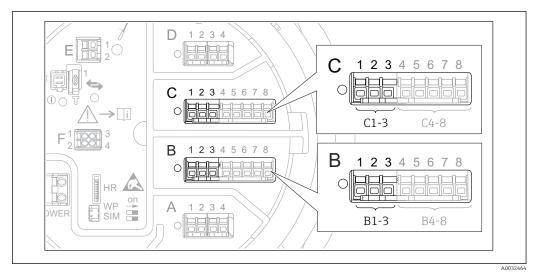

9.4.14 Configuration of the 4-20mA output

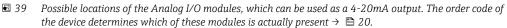

Each Analog I/O module of the device can be configured as a 4...20mA analog output. To do so, proceed as follows:

- **1.** Navigate to: Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/O X1-3.
- Go to the Operating mode and select 4..20mA output or HART slave +4..20mA output ⁴⁾.
- **3.** Go to the Analog input source and select the tank variable which is to be transmitted via the 4...20mA output.
- 4. Go to the 0 % value and enter the value of the selected tank variable which will be mapped to 4 mA.
- 5. Go to the 100 % value and enter the value of the selected tank variable which will be mapped to 20 mA.

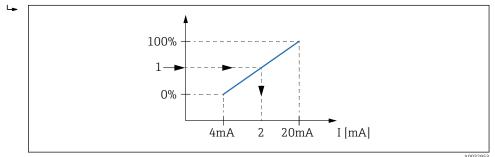


Image: Scaling of the tank variable to the output current

1 Tank variable

-

2 Output current

After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined error value.

The Analog I/O contains more parameters which can be used for a more detailed configuration of the analog output. For a description see $\rightarrow \triangleq 149$

^{4) &}quot;HART slave +4..20mA output " means that the Analog I/O module serves as a HART slave which cyclically sends up to four HART variables to a HART master. For the configuration of the HART output: → 🗎 83

9.4.15 Configuration of the HART slave + 4 to 20 mA output

If **Operating mode** = **HART slave +4..20mA output** has been selected for an Analog I/O module, it serves as a HART slave which sends up to four HART variables to a HART master.

The 4 to 20 mA signal can be used in this case, too. For its configuration: $\rightarrow \square 82$

Standard case: PV = 4 to 20 mA signal


By default, the Primary Variable (PV) is identical to the tank variable transmitted by the 4-20mA output. To define the other HART variables and to configure the HART output in more detail, proceed as follows:

- **1.** Navigate to: Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration
- 2. Go to the System polling address and set the HART slave address of the device.
- **3.** Use the following parameters to assign tank variables to the second to fourth HART variable: **Assign SV**, **Assign TV**, **Assign QV**.
 - └ The four HART variables are transmitted to a connected HART Master.

Special case: PV ≠ 4 to 20 mA signal

In exceptional cases it might be required that the Primary Variable (PV) transmits a different tank variable than the 4-20mA output. This is configured as follows.


- **1.** Navigate to: Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration
- 2. Go to the PV source and select **Custom**.
 - └→ The following additional parameters appear in the submenu: Assign PV, 0 % value, 100 % value and PV mA selector.
- **3.** Go to the Assign PV and select the tank variable to be transmitted as the Primary Variable (PV).
- 4. Use the **0 % value** and **100 % value** parameters to define a range for the PV. The Percent of range indicates the percentage for the actual value of the PV. It is included in the cyclical output to the HART master.

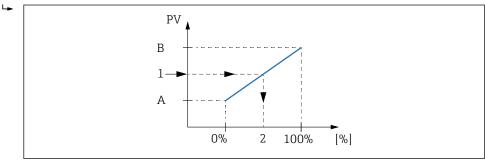

■ 41 Scaling of the tank variable to the percentage


- A 0 % value
- B 100 % value
- 1 Primary variable (PV)
- 2 Percent of range

5. Use the PV mA selector to define whether the output current of an Analog I/O module is to be included in the cyclical HART output.

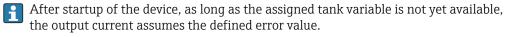

The PV mA selector does not influence the output current at the terminals of the Analog I/O module. It only defines whether the value of this current is part of the HART output or not.

9.4.16 Configuration of the Modbus output

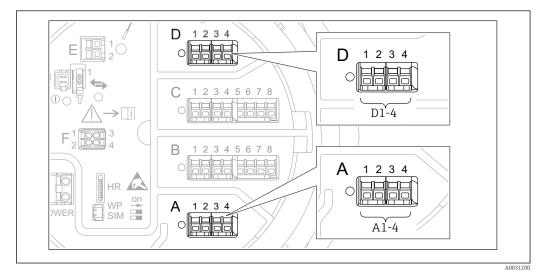


■ 42 Possible locations of the Modbus modules (examples); depending on the device version these modules may also be in slot B or $C \rightarrow \cong 20$.

The Micropilot NMR8x acts as a Modbus slave. Measured or calculated tank values are stored in registers which can be requested by a Modbus master.

The following submenu is used to configure the communication between the device and the Modbus master:

Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 \rightarrow Configuration ($\rightarrow \square$ 165)

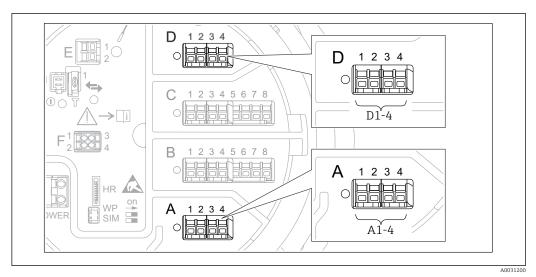


9.4.17 Configuration of the V1 output

■ 43 Possible locations of the V1 modules (examples); depending on the device version these modules may also be in slot B or $C \rightarrow \cong 20$.

The following submenus are used to configure the V1 communication between the device and the control system:

- Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow Configuration \rightarrow 🖺 168
- Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow V1 input selector \rightarrow 🗎 171


9.4.18 Configuration of the WM550 output

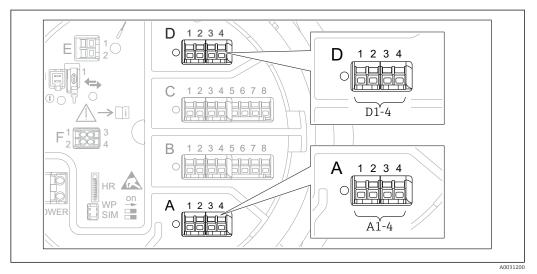

■ 44 Possible locations of the WM550 modules (examples); depending on the device version these modules may also be in slot B or $C \rightarrow \cong 20$.


The following submenus are used to configure the WM550 communication between the device and the control system:

- Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow Configuration \rightarrow 🖺 164
- Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow WM550 input selector $\rightarrow \cong 173$

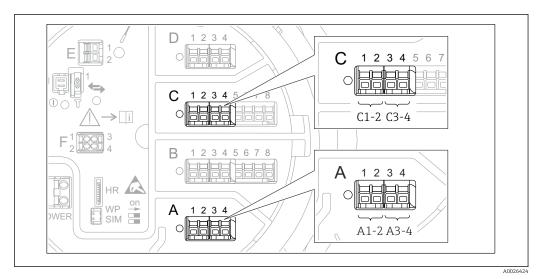

9.4.19 Configuration of the digital outputs

E 45 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of Digital I/O modules →
^B 20.

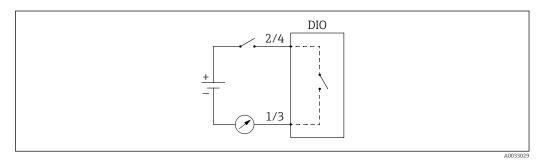

🖻 46 Usage of the Digital I/O module as a digital output

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode, Digital input source** and **Contact type**.

A digital output can be used to

- output the state of an alarm (if an alarm has been configured $\rightarrow \cong 81$)
- transmit the status of a digital input (if a digital input has been configured $\rightarrow \implies 70$)

To configure a digital output, proceed as follows:

- **1.** Navigate to Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x, where Xx-x designates the digital I/O module to be configured.
- 2. Go to the Operating mode and select the Output passive.
- 3. Go to the Digital input source and select the alarm or digital input to be transmitted.
- 4. Go to the Contact type and select how the internal state of the alarm or digital input is to be mapped to the digital output (see table below).

State of the alarm	Switching state of the digital output			
 Internal state of the digital input 	Contact type = Normally open	Contact type = Normally closed		
Inactive	Open	Closed		
Active	Closed	Open		

- For SIL applications, **Contact type** is automatically set to **Normally closed** by the device when starting the SIL confirmation procedure.
 - In case of a power supply failure, the switching state is always "open", irrespective of the selected option.

9.5 Advanced settings

For a more detailed configuration of the signal inputs, the tank calculations and the signal outputs refer to the Advanced setup ($\rightarrow \square 134$).

9.6 Simulation

To check the correct configuration of the device and of the control system, it is possible to simulate different situations (measured values, diagnostic messages etc.). See the Simulation ($\rightarrow \cong 260$) for details.

9.7 Protecting settings from unauthorized access

There are two possibilities to protect the settings from unauthorized access:

- By an access code ($\rightarrow \square 50$)
 - This locks the access via the display and operating module.
- By the protection switch (→
 ¹⇒ 51)
 This locks the access to W&M-related parameters by any user interface (display and
 operating module, FieldCare, other configuration tools).


10 Operation

10.1 Reading off the device locking status

Depending on the locking state of the device some operations may be locked. The current locking status is indicated at: Setup \rightarrow Advanced setup \rightarrow Locking status. The following table summarizes the different locking statuses:

Locking status	Meaning	Unlocking procedure
Hardware locked	The device is locked by the write-protection switch in the terminal compartment.	→ 🗎 51
SIL locked	The device is in SIL-locked mode.	Detailed information on this topic see SIL Safety manual
CT active - all parameters	The custody transfer mode is active.	→ 🗎 51
WHG locked	The device is in WHG-locked mode.	Detailed information on this topic see SIL Safety manual
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/ download, reset). Once the internal processing has been completed, the parameters can be changed again.	Wait for completion of the device-internal processing.

A locking is indicated by the write protection symbol in the header of the display:

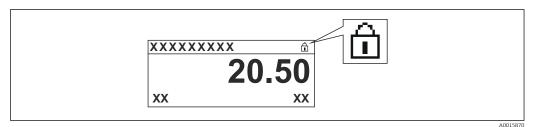

10.2 Reading off measured values

Tank values can be read off in the following submenus:

- Operation \rightarrow Level
- Operation \rightarrow Temperature
- Operation \rightarrow Density
- Operation \rightarrow Pressure

11 Diagnostics and troubleshooting

11.1 General trouble shooting


11.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
	Display contrast too low.	Set Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Contrast display to a value \geq 60 %.
"Communication error" is	Electromagnetic interference	Check grounding of the device.
indicated on the display when starting the device or connecting the display	Broken display cable or display plug.	Exchange display.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer (e.g. FieldCare) and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

11.2 Diagnostic information on local display

11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

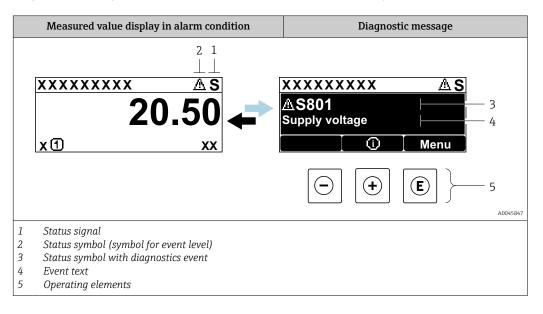

Status signals


A0013956	"Failure" A device error is present. The measured value is no longer valid.
C	"Function check" The device is in service mode (e.g. during a simulation or a warning).
S A0013958	 "Out of specification" The device is operated: Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
M	"Maintenance required" Maintenance is required. The measured value is still valid.

Status symbol (symbol for event level)

_	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
<u>A0013962</u>	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostics event and event text


The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

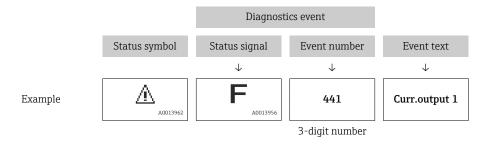


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu ($\rightarrow \cong 256$).

Operating elements

Operating functions in menu, submenu					
(+)	Plus key				
A0013970	Opens the message about the remedial measures.				
(E)	Enter key				
A0013952	Opens the operating menu.				

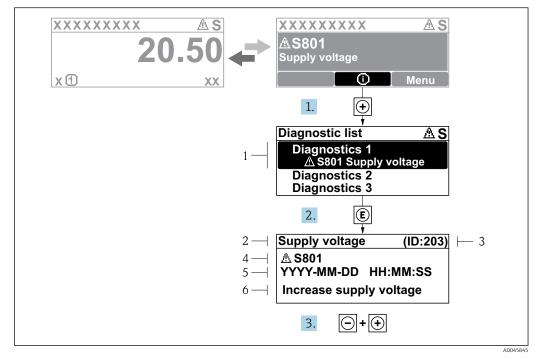

11.2.2 Calling up remedial measures

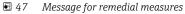

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence6 Remedial measures

A diagnostic message appears in the standard view (measured value display).


- 1. Press
 ⊕ (④ symbol).
 - ← The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with \pm or \Box and press \mathbb{E} .
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press \Box + \pm simultaneously.
 - └ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or in the **Previous diagnostics**.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press = + \pm simultaneously.
 - ← The message for the remedial measures closes.

11.3 Diagnostic information in FieldCare

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

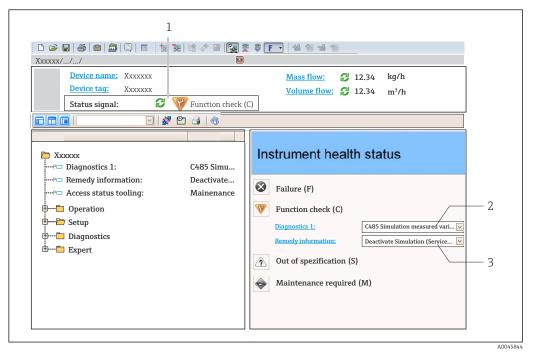

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with Service ID

Furthermore, diagnostic events that have occurred can be viewed in the Diagnostic list.

11.3.1 Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
A0017271	Failure A device error has occurred. The measured value is no longer valid.
A0017278	Function check The device is in service mode (e.g. during a simulation or a warning).
A0017277	Out of specification The device is operated outside its technical specification limits (e.g. outside the process temperature range)
A0017276	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

11.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

- 2. On the right in the working area, mouse over the parameter.
 - ← A tool tip with remedy information for the diagnostic event appears.

11.4	Overview of the diagnostic mes	ssages
------	--------------------------------	--------

Diagnostic number			Status signal [from the factory]	Diagnostic behavior [from the factory]	
Diagnostic of :	sensor				
102	Sensor incompatible error	 Restart device Contact service 	F	Alarm	
150	Detector error	 Restart device Check electrical connections of detector Replace detector unit 	F	Alarm	
151	Sensor electronic failure	Replace sensor electronic module	F	Alarm	
Diagnostic of	electronic		1		
242	Software incompatible	 Check software Flash or change main electronic module 	F	Alarm	
252	Modules incompatible	 Check if correct electronic module is plugged Replace electronic module 	F	Alarm	
261	Electronic modules	 Restart device Check electronic modules Change I/O module or main electronics 	F	Alarm	
262	Module connection	 Check module connections Replace electronic modules 	F	Alarm	
270	Main electronics failure	Replace main electronics	F	Alarm	
271	Main electronics failure	 Restart device Change main electronic module 	F	Alarm	
272	Main electronics failure	Restart device	F	Alarm	
272	Main electronics failure	 Restart device Contact service 	F	Alarm	
273	Main electronics failure	 Emergency operation via display Change main electronics 	F	Alarm	
275	I/O module failure	 Restart device Change I/O module 	F	Alarm	
276	I/O module faulty	 Restart device Change I/O module 	F	Alarm	
282	Data storage	 Restart device Contact service 	F	Alarm	
283	Memory content	 Transfer data or reset device Contact service 	F	Alarm	
284	Detector SW update in progress	Firmware update active, please wait!	F	Alarm	
311	Electronics failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning	
333 System recovery required		HW change detected System configuration recovery required Go to menu on device and perform recovery	F	Alarm	

Diagnostic number			Status signal [from the factory]	Diagnostic behavior [from the factory]	
334	System recovery failure	HW changed, system recovery failure. Return to factory	F	Alarm	
381	Displacer distance invalid	 Calibrate sensor Restart device Replace sensor electronics 	F	Alarm	
382	Sensor communication	 Check connection of sensor electronics Restart device Replace sensor electronics 	F	Alarm	
Diagnostic of o	configuration		1	1	
400	AIO simulation output	Deactivate simulation AIO output	С	Warning	
401	DIO simulation output	Deactivate simulation DIO output	С	Warning	
403	Calibration AIO	1. Restart device 2. Change I/O module	F	Alarm	
404	Calibration AIP	 Restart device Change I/O module 	F	Alarm	
405	COMM timeout DIO 1 to 8	 Check wiring Change I/O module 	F	Alarm	
406	IOM offline	 Check wiring Change I/O module 	F	Alarm	
407	COMM timeout AIO 1 to 2	 Check wiring Change I/O module 	F	Alarm	
408	Invalid range AIO 1 to 2	 Check device configuration. Check wiring. 	С	Warning	
409	RTD temp out of range 1 to 2	 Check electronic modules Change I/O or main electronic module 	С	Warning	
410	Data transfer	 Retry data transfer Check connection 	F	Alarm	
411	Hart device 1 to 15 has malfunction	 Check HART device Change HART device 	F	Alarm ¹⁾	
412	Processing download	Download active, please wait	С	Warning	
413	NMT 1 to 15: element is open or short	 Check NMT wiring connection Replace NMT 	С	Warning	
415	Hart device 1 to 15 offline	 Check HART device Change HART device 	С	Warning	
416	Warning occurred for HART device 1 to 15	Check connected HART device	М	Warning	
434	Real time clock defective	Replace main electronics	С	Warning	
436	Date/time incorrect	Check date and time settings.	М	Warning	
437	Configuration incompatible	 Restart device Contact service 	F	Alarm	
438	Dataset	 Check dataset file Check device configuration Up- and download new configuration 	М	Warning	
441	AIO 1 to 2 current output alarm	 Check process Check current output settings 	F	Alarm	
441 AIO 1 to 2 current output 1. Check process					

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
442	AIO 1 to 2 current output warning	 Check process Check current output settings 	С	Warning
443	AIO 1 to 2 Input not HART compatible	Change PV source or AIO input source.	С	Warning
484	Failure mode simulation	Deactivate simulation	С	Alarm
495	Diagnostic event simulation	Deactivate simulation	С	Warning
500	AIO C1-3 source no longer valid	Change input source	С	Warning
501	Level source no longer valid	Change input source	С	Warning
502	GP1 source no longer valid	Change input source	С	Warning
503	GP2 source no longer valid	Change input source	С	Warning
504	GP3 source no longer valid	Change input source	С	Warning
505	GP4 source no longer valid	Change input source	С	Warning
506	Water level source no longer valid	Change input source	С	Warning
507	Liquid temp source no longer valid	Change input source	С	Warning
508	Vapor temperatur source no longer valid	Change input source	С	Warning
509	Air temperature source no longer valid	Change input source	С	Warning
510	P1 source no longer valid	Change input source	С	Warning
511	P2 source no longer valid	Change input source	С	Warning
512	P3 source no longer valid	Change input source	С	Warning
513	Upper density source no longer valid	Change input source	С	Warning
514	Middle density source no longer valid	Change input source	С	Warning
515	Lower density source no longer valid	Change input source	С	Warning
516	Gauge command source no longer valid	Change input source	С	Warning
517	Gauge status source no longer valid	Change input source	С	Warning
518	Average density source no longer valid	Change input source	С	Warning
519	Upper interface source no longer valid	Change input source	С	Warning
520	Lower interface source no longer valid	Change input source	С	Warning
521	Bottom level source no longer valid	Change input source	С	Warning
522	Displacer position source not valid	Change input source	С	Warning
523	Distance source no longer valid	Change input source	С	Warning
524	Balance flag source no longer valid	Change input source	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]	
525	One time cmd source no longer valid	Change input source	С	Warning	
526	Alarm 1 to 4 source no longer valid	Change input source	С	Warning	
527	AIO B1-3 source no longer valid	Change input source	С	Warning	
528	CTSh	 Check device configuration. Check wiring. 	С	Warning	
529	HTG	 Check device configuration. Check wiring. 	С	Warning	
530	HTMS	 Check device configuration. Check wiring. 	С	Warning	
531	HyTD correction value	 Check device configuration. Check wiring. 	С	Warning	
532	HART output: PV source not valid	Change input source	С	Warning	
533	HART output: SV source not valid	Change input source	С	Warning	
534	HART output: QV source not valid	Change input source	С	Warning	
535	HART output: TV source not valid	Change input source	С	Warning	
536	Display: source no longer valid	Change input source	С	Warning	
537	Trend: source no longer valid	Change input source	С	Warning	
538	HART output: PV mA source not valid	Change input source	С	Warning	
539	Modbus 1-4 SP source invalid	Set valid SP input selector	С	Warning	
540	V1 1-4 SP source invalid	Set valid SP input selector	С	Warning	
541	Modbus 1-4 alarm source invalid	Set valid alarm input selector	С	Warning	
542	V1 1-4 alarm source invalid	Set valid alarm input selector	С	Warning	
543	Modbus 1-4 analog source invalid	Set valid analog input selector	С	Warning	
544	V1 1-4 analog source invalid	Set valid analog input selector	С	Warning	
545	Modbus 1-4 user value source invalid	Set valid user value input selector	С	Warning	
546	Modbus 1-4 discrete value source invalid	Set valid user discrete input selector	С	Warning	
547	V1 1-4 user value source invalid	Set valid user value input selector	С	Warning	
548	V1 1-4 discrete value source invalid	Set valid user discrete input selector	С	Warning	
549	Modbus 1-4 percent source invalid	Set valid percentage input selector	С	Warning	
550	V1 1-4 percent source invalid	Set valid percentage input selector	С	Warning	

Diagnostic Short text number		Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
560	Calibration mandatory	 Carry out weight calibration Carry out reference calibration Carry out drum calibration 	С	Alarm
564	DIO B1-2 source no longer valid	Change input source	С	Warning
565	DIO B3-4 source not valid	Change input source	С	Warning
566	DIO C1-2 source no longer valid	Change input source	С	Warning
567	DIO C3-4 source no longer valid	Change input source	С	Warning
568	DIO D1-2 source no longer valid	Change input source	С	Warning
569	DIO D3-4 source no longer valid	Change input source	С	Warning
571	CLG	1. Check device configuration.	С	Alarm
571	CLG	2. Check wiring.	С	Warning
572	LRC 1 to 2 not possible	 Check device configuration. Check wiring. 	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
586	Record map	Recording of mapping please wait	С	Warning
598	DIO A1-2 source no longer valid	Change input source	С	Warning
599	DIO A3-4 source no longer valid	Change input source	С	Warning
iagnostic of j	process		1	
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check device configuration.	F	Alarm
803	Current loop 1 to 2	2. Check wiring.	М	Warning
803	Current loop	_	С	Warning
825	System temperature	1. Check ambient temperature	S	Warning
825	System temperature	2. Check process temperature	F	Alarm
826	Sensor temperature	1. Check ambient temperature	S	Warning
826	Sensor temperature	2. Check process temperature	F	Alarm
844	Process value out of specification	 Check process value Check application 	S	Warning ¹⁾
844	Process value out of specification	- 3. Check sensor	S	Warning
901	Level held	Normal state while Dip Freeze is turned on, otherwise check configuration	S	Warning
903	Current loop 1 to 2	 Check device configuration. Check wiring. 	F	Alarm
904	Digital output 1 to 8	 Check device configuration. Check wiring. 	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
941	Echo lost	 Check process value Check application Check sensor 	S	Warning
942	In safety distance	 Check level Check safety distance Reset self holding 	S	Warning
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostics	Maintain your diagnostic event	М	Warning
961	Alarm 1 to 4 HighHigh	 Check alarm source Check configuration settings 	С	Warning
962	Alarm 1 to 4 High	 Check alarm source Check configuration settings 	С	Warning
963	Alarm 1 to 4 Low	 Check alarm source Check configuration settings 	С	Warning
964	Alarm 1 to 4 LowLow	 Check alarm source Check configuration settings 	С	Warning
965	Alarm 1 to 4 HighHigh	 Check alarm source Check configuration settings 	F	Alarm
966	Alarm 1 to 4 High	 Check alarm source Check configuration settings 	F	Alarm
967	Alarm 1 to 4 Low	 Check alarm source Check configuration settings 	F	Alarm
968	Alarm 1 to 4 LowLow	 Check alarm source Check configuration settings 	F	Alarm
970	Overtension	 Check displacer and process conditions Release overtension 	С	Alarm
971	Undertension	Check displacer and process.	С	Alarm
974	LRC 1 to 2 failed	 Check process value Check application Check sensor 	С	Warning

1) Diagnostic behavior can be changed.



The parameters No.941, 942, and 943 are only used for NMR8x and NRF81.

11.5 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

Diagnostics \rightarrow Diagnostic list

Calling up and closing the remedial measures

1. Press E.

└ The message for the remedial measures for the selected diagnostic event opens.

2. Press - + + simultaneously.

└ The message about the remedial measures closes.

11.6 Reset measuring device

To reset the device to a defined state use the Device reset ($\rightarrow \square 251$).

11.7 Device information

Information on the device (order code, hardware and software version of the individual modules etc.) can be found in the Device information ($\rightarrow \triangleq 257$).

11.8 Firmware history

Date	Software		Documentation (NMR84)			
	version		Operating Instructions	Description of Parameters	Technical Information	
04.2016	01.00.zz	Original software	BA01453G/00/EN/01.16	GP01071G/00/EN/01.16	TI01253G/00/EN/01.16	
12.2016	01.02.zz	Bugfixes and improvements	BA01453G/00/EN/02.17	GP01071G/00/EN/02.17	TI01253G/00/EN/02.17	
07.2018	01.03.zz	Software update	BA01453G/00/EN/04.18		TI01253G/00/EN/03.18	
05.2020	01.04.zz	Software update	BA01453G/00/EN/05.20		TI01253G/00/EN/004.20	
08.2021	01.05.zz	Software update	BA01453G/00/EN/06.21	GP01071G/00/EN/ 04.22-00	TI01253G/00/EN/005.21	
08.2022	01.06.zz	Software update	BA01453G/00/EN/ 07.22-00		TI01253G/00/EN/006.22-00	
10.2023	01.07.zz	Software update	BA01453G/00/EN/ 08.23-00		TI01253G/00/EN/007.23-00	

12 Maintenance

12.1 Maintenance tasks

No special maintenance work is required.

12.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

12.2 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

13 Repair

13.1 General information on repairs

13.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

13.1.2 Repairs to Ex-approved devices

WARNING

Incorrect repair can compromise electrical safety! Explosion hazard!

- ► Only specialist personnel or the manufacturer's service team may carry out repairs on Ex-certified devices in accordance with national regulations.
- Relevant standards and national regulations on hazardous areas, safety instructions and certificates must be observed.
- Only use original spare parts from the manufacturer.
- Please note the device designation on the nameplate. Only identical parts may be used as replacements.
- Carry out repairs according to the instructions.
- Only the manufacturer's service team is permitted to modify a certified device and convert it to another certified version.

13.1.3 Replacement of a device or electronic module

After a complete device or the electronic mainboard has been replaced, the parameters can be downloaded into the instrument again via FieldCare.

Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.



The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset = Restart device. This ensures correct operation of the device after the restore.

13.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

13.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

13.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- Refer to the web page for information: http://www.endress.com/support/return-material
 Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

13.5 Disposal


X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14 Accessories

Device-specific accessories 14.1

14.1.1 Weather protection cover

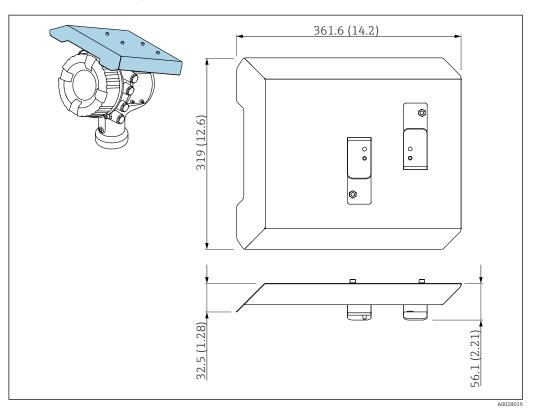

🛃 48 Weather protection cover; dimensions: mm (in)

Materials

- Protection cover and mounting brackets Material 316L (1.4404)
- Screws and washers Material

A4

- The weather protection cover can be ordered together with the device: -
 - Ordering feature 620 "Accessory Enclosed", option PA "Weather Protection Cover") • It can also be ordered as an accessory:
 - Order code: 71292751 (for NMR8x and NRF8x)

14.2 **Communication-specific accessories**

WirelessHART adapter SWA70

- Is used for the wireless connection of field devices
- The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks

For details, see Operating Instructions BA00061S

Gauge Emulator, Modbus to BPM

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Enraf BPM
- 1 measuring device per Gauge Emulator
- \bullet Separate power supply: 100 to 240 V_{AC} , 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

Gauge Emulator, Modbus to TRL/2

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Saab TRL/2
- 1 measuring device per Gauge Emulator
- Separate power supply: 100 to 240 V_{AC}, 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

14.3Service-specific accessories

Commubox FXA195 HART

For intrinsically safe HART communication with FieldCare via the USB interface

For details, see "Technical Information" TI00404F

Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop Order number: 51516983



For details, see "Technical Information" TI00405C

DeviceCare SFE100

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices DeviceCare is available for download at www.software-products.endress.com. You need to register in the Endress+Hauser software portal to download the application.

Technical Information TI01134S **I**

FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.



Technical Information TI00028S

System components 14.4

RIA15

Compact process display unit with very low voltage drop for universal use to display 4 to 20 mA/HART signals

Technical Information TI01043K

Tankvision Tank Scanner NXA820 / Tankvision Data Concentrator NXA821 / **Tankvision Host Link NXA822**

Inventory Management System with completely integrated software for operation via standard web browser



Technical Information TI00419G

15 Operating menu

- 🛐 🛛 🗐 : Navigation path for operating module at the device
 - 📄 : Navigation path for operating tool (e.g. FieldCare)
 - Parameter can be locked via software locking

15.1 Overview of the operating menu

- This section lists the parameters of the following menus:
 - Operation ($\rightarrow \square 117$)
 - Setup (→ 🗎 128)
 - Diagnostics ($\rightarrow \triangleq 253$)
 - For the **Expert** menu refer to the "Description of Device Parameters" (GP) of the respective device.
 - Depending on the device version and parametrization some parameters will not be available in a given situation. For details refer to the "Prerequisite" category in the description of the respective parameter.
 - The representation essentially corresponds to the menu in an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

Navigation	o e	Operating tool
------------	-----	----------------

Operation]		→ 🖺 117
	► Level			→ 🖺 118
		Dip Freeze]	→ 🖺 118
		Tank level]	→ 🗎 118
		Tank Level %]	→ 🖺 119
		Tank ullage]	→ 🖺 119
		Tank ullage %]	→ 🖺 119
		Upper interface level]	→ 🖺 119
		Lower interface level]	→ 🖺 120
		Water level]	→ 🖺 120
		Measured level]	→ 🖺 120
		Distance]	→ 🖺 120
	► Temperature			→ 🖺 121
		Air temperature]	→ 🖺 121
		Liquid temperature]	→ 🗎 121

	,	Vapor temperature]	→ 🗎 121
		NMT element va	alues]	→ 🗎 121
			► Element temper	ature	→ 🗎 122
				Element temperature 1 to 24	→ 🗎 122
			► Element position	n	→ 🗎 122
				Element position 1 to 24	→ 🗎 122
	► Density]		→ 🗎 123
		Observed density			→ 🗎 123
	[Observed density te	mperature]	→ 🗎 123
		Vapor density]	→ 🗎 123
		Air density]	→ 🗎 124
		Measured upper de	neity]	→ 🗎 124
]	
		Measured middle de	ensity		→ 🗎 124
	į	Measured lower der	nsity		→ 🖺 124
	► Pressure]		→ 🗎 125
]	P1 (bottom)]	→ 🗎 125
	1	P3 (top)]	→ 🗎 125
	► GP values]		→ 🖺 126
		GP 1 to 4 name]	→ 🖺 126
		GP Value 1]	→ 🖺 126
		GP Value 2]	→ 🗎 126
		GP Value 3]	→ 🖺 126
		GP Value 4]	→ 🗎 127
🖌 Setup					→ 🗎 128
	Device tag]		→ 🗎 128

Units preset]		→ 🗎 128
Tube diameter]		→ 🗎 129
Empty]		→ 🖺 129
Tank reference heig	ght]		→ 🗎 129
Tank level]		→ 🗎 118
Set level]		→ 🗎 130
Confirm distance]		→ 🗎 130
Present mapping]		→ 🗎 132
Mapping end point]		→ 🗎 132
Record map]		→ 🗎 132
Distance]		→ 🗎 133
Liquid temp source]		→ 🗎 133
► Advanced setup	1]		→ 🗎 134
	Locking status]	→ 🗎 134
	User role]	→ 🖺 134
	Enter access code]	→ 🗎 134
	► Input/output]	→ 🖺 135
		► HART devices		→ 🗎 135
			Number of devices	→ 🗎 135
			► HART Device(s)) → 🗎 136
			► Forget device	→ 🗎 142
		► Analog IP		→ 🗎 143
			Operating mode) → 🗎 143
			Thermocouple type) → 🗎 144
			RTD type) → 🗎 143

	RTD connection type	$] \rightarrow$	₿ 144
	Process value	$] \rightarrow$	₿ 145
	Process variable	$] \rightarrow$	🖺 145
	0 % value	$] \rightarrow$	🗎 145
	100 % value	$] \rightarrow$	₿ 146
	Input value	$] \rightarrow$	₿ 146
	Minimum probe temperature	$] \rightarrow$	146
	Maximum probe temperature	$] \rightarrow$	147
	Probe position	$] \rightarrow$	147
	Damping factor	$] \rightarrow$	148
	Gauge current	$] \rightarrow$	148
► Analog I/O		\rightarrow	149
	Operating mode	$] \rightarrow$	149
	Current span	$] \rightarrow$	₿ 150
	Fixed current	$] \rightarrow$	₿ 151
	Analog input source	$] \rightarrow$	₿ 151
	Failure mode	$] \rightarrow$	₿ 152
	Error value	$] \rightarrow$	153
	Input value	$] \rightarrow$	153
	0 % value	$] \rightarrow$	153
	100 % value	$] \rightarrow$	154
	Input value %	$] \rightarrow$	154
	Output values) →	₿ 154
	Process variable) →	₿ 155
	Analog input 0% value	$] \rightarrow$	155

	Analog input 100% value	→ 🗎 155
	Error event type	→ 🗎 156
	Process value	→ 🗎 156
	Input value in mA	→ 🗎 156
	Input value percent	→ 🗎 157
	Damping factor	→ 🗎 157
	Used for SIL/WHG	→ 🗎 157
	Expected SIL/WHG chain	→ 🗎 158
► Digital Xx-x		→ 🗎 159
	Operating mode	→ 🗎 159
	Digital input source	→ 🗎 160
	Input value	→ 🗎 161
	Contact type	→ 🗎 161
	Output simulation	→ 🗎 161
	Output values	→ 🗎 162
	Readback value	→ 🗎 162
	Used for SIL/WHG	→ 🗎 163
	Expected SIL/WHG chain	→ 🗎 163
► Communication]	→ 🗎 164
► Communication	interface 1 to 2	
	Communication interface protocol	
	► Configuration	→ 🗎 165
	► Configuration	→ 🗎 168
	► Configuration	→ 🗎 172

		► V1 input selector	→ 🗎 171
		► WM550 input selector	→ 🖺 173
	► HART output		→ 🗎 175
		► Configuration	→ 🗎 175
		► Information	→ 🗎 183
► Application			→ 🖺 185
	► Tank configurati	ion	→ 🗎 185
		► Level	→ 🗎 185
		► Temperature	→ 🖺 189
		► Density	→ 🗎 193
		▶ Pressure	→ 🗎 195
	► Tank calculation		→ 🗎 200
			, 200
		► HyTD	→ 🗎 202
		► CTSh	→ 🗎 207
		► CLG	→ 🗎 210
		► HTMS	→ 🖺 215
		► Dip-table	→ 🗎 222
	► Alarm		→ 🗎 223
		► Alarm 1 to 4	→ 🗎 223
► Safety settings			→ 🗎 232
	Output echo lost		→ 🖺 232
	Delay time echo lost		→ 🗎 232
	Safety distance		→ 🗎 232
]	
 Sensor config]	→ 🖺 234
	Tube diameter		→ 🗎 234

	► Information	→ 🗎 234
	Signal quality	→ 🗎 234
	Absolute echo amplitude	→ 🗎 234
	Relative echo amplitude	→ 🗎 235
	Distance	→ 🗎 133
	► Echo tracking	→ 🗎 236
	Evaluation mode	→ 🗎 236
	History reset	→ 🗎 236
► Display		→ 🗎 237
	Language	→ 🗎 237
	Format display	→ 🗎 237
	Value 1 to 4 display	→ 🗎 238
	Decimal places 1 to 4	→ 🗎 239
	Separator	→ 🗎 240
	Number format	→ 🗎 240
	Header	→ 🖺 241
	Header text	→ 🖺 241
	Display interval	→ 🖺 241
	Display damping	→ 🗎 242
	Backlight	→ 🗎 242
	Contrast display	→ 🗎 242
► System u	units	→ 🖹 244
	Units preset	→ 🗎 128
	Distance unit	→ 🖹 244
	Pressure unit	→ 🗎 245

		Temperature unit	→ 🗎 245
		Density unit	→ 🗎 245
[► Date / time		→ 🖺 247
		Date/time	→ 🗎 247
		Set date	→ 🗎 247
		Year	→ 🗎 247
		Month	→ 🖺 248
		Day	→ 🗎 248
		Hour	→ 🖺 248
		Minute	→ 🖺 249
[► SIL confirmation	L .	→ 🖺 250
[► Deactivate SIL/W	VHG	→ 🗎 250
[► Administration		→ 🗎 251
		Define access code	→ 🗎 251
		Device reset	→ 🖺 251
얺, Diagnostics			→ 🖺 253
Actual diagnostics			→ 🗎 253
Timestamp			→ 🗎 253
Previous diagnostics			→ 🖺 253
Timestamp]	→ 🖺 254
Operating time from	restart]	→ 🖺 254
Operating time]	→ 🖺 254
Date/time]	→ 🗎 247

► Diagnostic list			→ 🗎 256
	Diagnostics 1 to 5		→ 🖺 256
	Timestamp 1 to 5		→ 🗎 256
► Device informa	tion		→ 🖺 257
	Device tag		→ 🖺 257
	Serial number		→ 🖺 257
	Firmware version		→ 🗎 257
	Firmware CRC		→ 🗎 258
	Weight and measures configuration CRC		→ 🗎 258
	Device name		→ 🗎 258
	Order code		→ 🗎 258
	Extended order code 1 to 3		→ 🖺 259
► Simulation			→ 🖺 260
	Device alarm simulation		→ 🗎 260
	Diagnostic event simulation		→ 🗎 260
	Simulation distance on		→ 🗎 260
	Simulation distance		→ 🖺 261
	Current output 1 simulation		→ 🖺 261
	Simulation value		→ 🖺 261
► Device check			→ 🗎 263
	Start device check		→ 🗎 263
	Result device check		→ 🗎 263
		-	

	Level signal		→ 🗎 263
	Near distance		→ 🗎 264
► LRC]	→ 🗎 265
	► LRC 1 to 2		→ 🗎 265
		LRC Mode	→ 🗎 265
		Allowed difference	→ 🗎 265
		Check fail threshold	→ 🗎 266
		Reference level source	→ 🗎 266
		Reference switch source	→ 🗎 267
		Reference switch mode	→ 🗎 267
		Reference level	→ 🗎 267
		Reference switch level	→ 🗎 268
		Reference point level	→ 🗎 268
		Reference switch state	→ 🗎 268
		Start reference measurement	→ 🗎 269
		Check level	→ 🗎 269
		Check status	→ 🗎 269
		Check timestamp	→ 🗎 270

15.2 "Operation" menu

The **Operation** menu ($\rightarrow \implies$ 117) shows the most important measured values.

	Navigation 🛛 🗐 🖾 Operation
Offset standby distance	
Navigation	
Description	Defines the distance from the current position where the displacer waits for the liquid level to rise during offset standby gauge command.
User entry	0 to 999 999.9 mm
Factory setting	500 mm
Additional information	

15.2.1 "Level" submenu

Navigation

 \blacksquare □ Operation → Level

Dip Freeze		Â
Navigation		
Description	If activated the level values are frozen and a warning is shown.	
Selection	OffOn	
Factory setting	Off	
Additional information	This function can be used when performing a manual dipping in the same stilling or nozzle where the radar device is mounted.	well

Tank level		
Navigation	$ \blacksquare \Box \text{Operation} \rightarrow \text{Level} \rightarrow \text{Tank} $	level
Description	Shows the distance from the zero position (tank bottom or datum plate) to the product surface.	
Additional information	Read access Operator	
	Write access	-

Tank Level %			
Navigation			
Description	Shows the level as a percentage of the full measuring range.		
Additional information	Read access Operator		
	Write access	-	

Tank ullage			
Navigation		ullage	
Description	Shows the remaining empty space in the tank.		
Additional information	Read access Operator		
	Write access	-	

Tank ullage %			
Navigation			
Description	Shows the remaining empty space in percentage related to parameter tank reference height.		
Additional information	Read access	Operator	
	Write access	-	
Upper interface level			
Navigation			

DescriptionShows measured interface level from zero position (tank bottom or datum plate). Value is
updated when device generates a valid Interface measurement.

Additional information	Read access	Maintenance
	Write access	-

Lower interface level		
Navigation		r I/F level
-	Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.	
Additional information	Read access Maintenance	
	Write access	-

Water level			
Navigation			
Description	Shows the bottom water level.		
Additional information	Read access Operator		
	Write access	-	

Measured level			
Navigation		Measured level	
Description	Shows the measured level without any correction from the tank calculations.		
Additional information	Read access Operator		
	Write access	-	

Distance			
Navigation			
Description	Distance from lower edge of device flange to product surface.		
Additional information	Read access Operator		
	Write access	-	

"Temperature" submenu 15.2.2

Navigation □ □ Operation → Temperature

Air temperature			
Navigation			
Description	Shows the air temperature.		
Additional information	Read access Operator		
	Write access	-	
Liquid temperature			
Navigation	Image: Boost of the second state of the s		
Description	Shows the average or spot temperature of the measured liquid.		
Additional information	Read access	Operator	
	Write access -		
Vapor temperature			
Navigation	$ \blacksquare \Box \text{Operation} \rightarrow \text{Temperature} \rightarrow \text{Vapor temp.} $		

Description Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

"NMT element values" submenu



This submenu is only visible if a Prothermo NMT is connected.

	Navigation		Operat	ion \rightarrow Temperature \rightarrow NMT elem. values
	"Element temperature" submenu			
	Navigation		Operat temp.	ion \rightarrow Temperature \rightarrow NMT elem. values \rightarrow Element
Element temperature 1 to 2	.4			
Navigation	□ Operation → 1 to 24	• Temp	erature	→ NMT elem. values → Element temp. → Element temp
Description	Shows the tempera	ature of	f an eler	nent in the NMT.
Additional information	Read access			Operator
	Write access			-
	"Element position" submenu Navigation			
Element position 1 to 24				
Navigation	□ Operation \rightarrow Temperature \rightarrow NMT elem. values \rightarrow Element position \rightarrow Element pos. 1 to 24			
Description	Shows the position of the selected element in the NMT.			
Additional information	Read access			Operator
	Write access			-

15.2.3 "Density" submenu

Navigation \square Operation \rightarrow Density

Observed density				
Navigation		ity \rightarrow Observed density		
Description	Calculated density of the	Calculated density of the product.		
Additional information	Read access	Read access Operator		
	Write access	Write access -		

This value is calculated from different measured variables depending on the selected calculation method.

Observed density temperature

Navigation	
Description	Corresponding temperature of measured density. Can be used for reference density calculation.
User interface	Signed floating-point number
Factory setting	0°C

Vapor density		E	
Navigation	$ \blacksquare \square \text{Operation} \rightarrow \text{Density} \rightarrow \text{Va} $	apor density	
Description	Defines the density of the gas ph	ase in the tank.	
User entry	0.0 to 500.0 kg/m ³		
Factory setting	1.2 kg/m³		
Additional information	Read access	Operator	
	Write access	Maintenance	

Air density		Ē
Navigation	Image: Boost of the second state of the s	r density
Description	Defines the density of the air sur	rounding the tank.
User entry	0.0 to 500.0 kg/m ³	
Factory setting	1.2 kg/m³	
Additional information	Read access	Operator
	Write access	Maintenance

Measured upper density		
Navigation	■ □ Operation \rightarrow Density \rightarrow Me	eas upper dens.
Description	Shows the density of the upper phase.	
Additional information	Read access	Operator
	Write access	-

Measured middle density		
Navigation		eas middle dens
Description	Density of the middle phase.	
Additional information	Read access	Operator
	Write access	-

Measured lower density		
Navigation		eas lower dens.
Description	Density of the lower phase.	
Additional information	Read access	Maintenance
	Write access	-

15.2.4 "Pressure" submenu

Navigation \square Operation \rightarrow Pressure

P1 (bottom)			
Navigation		e → P1 (bottom)	
Description	Shows the pressure at the t	Shows the pressure at the tank bottom.	
Additional information	Read access Operator		
	Write access	-	
P3 (top)			
Navigation	Image: Boost of the second secon	e → P3 (top)	
Description	Shows the pressure (P3) at the top transmitter.		
Additional information	Read access	Operator	
	Write access	-	

15.2.5 "GP values" submenu

Navigation	Navig	ation
------------	-------	-------

 $\ \Box \ \ \Box \ \ Operation \rightarrow GP \ values$

GP 1 to 4 name		Ē
Navigation		BP 1 name
Description	Defines the label associated with	the respective GP value.
User entry	Character string comprising num	pers, letters and special characters (15)
Factory setting	GP Value 1	
Additional information	Read access	Operator
	Write access	Maintenance

GP Value 1		
Navigation		GP Value 1
Description	Displays the value that will be us	ed as general purpose value.
Additional information	Read access	Operator
	Write access	-

GP Value 2

Navigation	□ □	
Description	Displays the value that will be used as general purpose value.	
Additional information	Read access	Operator
	Write access	-

GP Value 3	
Navigation	
Description	Displays the value that will be used as general purpose value.

Additional information	Read access	Operator
	Write access	-

GP Value 4			
Navigation	$ \blacksquare \square \text{Operation} \rightarrow \text{GP values} \rightarrow 0 $	GP Value 4	
Description	Displays the value that will be used as general purpose value.		
Additional information	Read access	Operator	
	Write access	-	

15.3 "Setup" menu

Navigation

🗐 🗏 Setup

Device tag			
Navigation	Image: Setup → Device tag		
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.		
User entry	Character string comprising num	bers, letters and special characters (32)	
Factory setting	NMR8x		
Additional information	Read access	Operator	
	Write access	Maintenance	

Units preset			Ê
Navigation	■ \square Setup \rightarrow Units pres	set	
Description	Defines a set of units for	length, pressure and temperature.	
Selection	 mm, bar, °C m, bar, °C mm, PSI, °C ft, PSI, °F ft-in-16, PSI, °F ft-in-8, PSI, °F Customer value 		
Factory setting	mm, bar, °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

If the **Customer value** option is selected, the units are defined in the following parameters. In any other case these are read-only parameters used to indicate the respective unit:

- Distance unit ($\rightarrow \cong 244$)
- Pressure unit ($\rightarrow \square 245$)
- Temperature unit ($\rightarrow \cong 245$)

		A
Image: Barbon Setup → Tube dia	ameter	
Enter diameter of stillin	ng well.	
Positive floating-point r	number	
150 mm		
Read access	Operator	
Write access	Maintenance	
	e point to zero position (tank bottom or datum plate).	
Dependent on the device version		
Read access	Operator	
_	Positive floating-point is 150 mm Read access Write access Write access Write access Write access 0 to 10 000 000 mm	Read access Operator Write access Maintenance

• The dip table values are not affected by a change of the **Empty** parameter ($\rightarrow \square 129$).

Tank reference height	
Navigation	
Description	Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).
User entry	0 to 10 000 000 mm
Factory setting	Dependent on the device version

Additional information	Read access	Operator
	Write access	Maintenance

Tank level		
Navigation		
Description	Shows the distance from the zero position (tank bottom or datum plate) to the product surface.	
Additional information	Read access	Operator
	Write access	-

Set level		Ê
Navigation		
Description	If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.	
User entry	0 to 10 000 000 mm	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

The device adjusts the **Empty** parameter ($\rightarrow \square$ 129) according to the entered value, such that the measured level will match the actual level.

- After the change of the **Empty** parameter (→ ≅ 129), the **Table mode** parameter (→ ≅ 222) is automatically set to **Disable**.
 - If **Empty** has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
 - The dip table values are not affected by a change of the **Empty** parameter.

Confirm distance		
Navigation	Setup \rightarrow Confirm distance	

Description

Specify, whether the measured distance matches the real distance. Depending on the selection the device automatically sets the range of mapping.

Selection

- Distance ok
- Distance unknown
- Distance too small *
- Distance too big^{*}
- Tank empty
- Manual map
- Factory map

Factory setting

Distance unknown

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Distance ok

To be selected if the measured distance matches the actual distance. The device performs a mapping.

Distance unknown

To be selected if the actual distance is unknown. No mapping will be recorded in this case.

Distance too small⁵⁾

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter ($\rightarrow \implies 130$). The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **"Distance ok" option**.

Distance too big⁵

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter ($\rightarrow \bowtie 130$). The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **"Distance ok" option**.

Tank empty

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Empty** parameter ($\rightarrow \implies 129$).

Manual map

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter ($\rightarrow \square$ 132). In this case it is not necessary to confirm the distance.

Factory map

To be selected if the present mapping curve (if one exists) is to be deleted. The factory map is used, instead.

When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.

If the teaching procedure with the **Distance too small** or **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

^{*} Visibility depends on order options or device settings

⁵⁾ Only available for "Evaluation mode (→ 🖺 236)" = "Short time history"

Operating	menu
-----------	------

Present mapping				
Navigation		Setup \rightarrow Present mapping		
Description	Present end of mapping.			
Additional information	Read access Operator			
	Write	access	-	

Mapping end point			
Navigation	□ Setup \rightarrow Map. end point		
Prerequisite	Confirm distance (> 🗎 130) = Manual map		
Description	Defines up to which distance the new mapping has to be recorded. Remark: Make sure the level signal is not covered by the mapping.		
User entry	100 to 999 999.9 mm		
Factory setting	100 mm		
Additional information	Read access Operator		
	Write access	Maintenance	

Record map			ß
Navigation		⁰	
Prerequisite	Confirm distance (> 🗎 130) = Manual map		
Description	Controls the recording of t	he map.	
Selection	 No Record map Overlay map Factory map Delete partial map 		
Factory setting	No		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of the options

No

- The map is not recorded.
- Record map

The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing \mathbf{V} .

- **Recalculate map** Used internally by the software. Initiates a new calculation of the map from the new data points.
- Overlay map

The new mapping curve is generated by overlaying the old and the current envelope curves.

Factory map

The factory map stored in the ROM of the device is used.

- Delete partial map The mapping curve is deleted up to Mapping end point (→
 ^(→) 132).
- Stop overlay

Stops the overlaying of the map.

Distance			
Narization	A Cotum > Distance		
Navigation			
Description	Distance from lower edge of device	e flange to product surface.	
Additional information	Read access	Operator	
	Write access	-	

Liquid temp source		8	
Navigation	$ \blacksquare \Box \text{Setup} \rightarrow \text{Liq temp source} $		
Description	Defines source from which the liquid temperature is obtained.		
Selection	 Manual value HART device 1 15 temperature AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value 		
Factory setting	Manual value		
Additional information	Read access	Operator	
	Write access	Maintenance	

15.3.1 "Advanced setup" submenu

Navigation

Locking status	
Navigation	■ \square Setup \rightarrow Advanced setup \rightarrow Locking status
Description	Indicates the type of locking.
	"Hardware locked" (HW) The device is locked by the "WP" switch on the main electronics module. To unlock, set the switch into the OFF position.
	"WHG locked" (SW) Unlock the device by entering the appropriate access code in "Enter access code".
	"SIL locked" (SW) Unlock the device by entering the appropriate access code in "Enter access code".
	"Temporarily locked" (SW) The device is temporarily locked by processes in the device (e.g. data upload/download, reset). The device will automatically be unlocked after completion of these processes.
Additional information	Read access Operator

Additional information	Read access	Operator
	Write access	-


User role				
Navigation		Setup \rightarrow Advanced setup \neg	→ User role	
Description	Shov	Shows the access authorization to the parameters via the operating tool		
Additional information	Read	Read access Operator		
	Writ	e access	-	

Enter access code			
Navigation	Image: Betup → Advanced setup →	Ent. access code	
Description	Enter access code to disable write protection of parameters.		
Additional information	Read access Operator		
	Write access	Operator	

	"Input/output" submenu			
	Navigation		Setup \rightarrow Advanced setup \rightarrow Input/output	
	"HART devices" submenu			
	Navigation		Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices	
Number of devices				
Navigation	Image: Betup → Adv	vanced se	etup \rightarrow Input/output \rightarrow HART devices \rightarrow Number devices	
Description	Shows the number of devices on the HART bus.			
Additional information	Read access		Operator	
	Write access		-	

"HART Device(s)" submenu

Write access

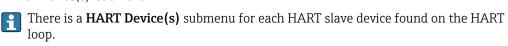

Navigation $\ensuremath{\textcircled{\sc line 1.5ex}}$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices
 \rightarrow HART Device(s)

Device name				
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Device name			
Description	Shows the name of the transmitter.			
Additional information	Read access	Operator		
	Write access	-		
Polling address				
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Polling address			
Description	Shows the polling address of the transmitter.			
Additional information	Read access	Operator		
	Write access	-		
Device tag				
Navigation	Input/output → HART devices → HART Device(s) → Device tag			
Description	Shows the device tag of the transmitter.			
Additional information	Read access	Operator		

_

Operating mode		<u>A</u>		
Navigation	Image: Setup → Advanced solution → Operating mode	setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)		
Prerequisite	Not available if the HART	Not available if the HART device is a Prothermo NMT.		
Description	Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled from the connected HART Device.			
Selection	 PV only PV,SV,TV & QV Level⁶⁾ Measured level⁶⁾ 			
Factory setting	PV,SV,TV & QV			
Additional information	Read access	Operator		
	Write access	Maintenance		

Communication status			
Navigation	\blacksquare Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Comm. status		
Description	Shows the operating status of th	Shows the operating status of the transmitter.	
User interface	 Operating normally Device offline		
Additional information	Read access	Operator	
	Write access	-	

Status signal	
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Status signal
Description	Indicates the current device status in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.
User interface	 OK Failure (F) Function check (C) Out of specification (S)

⁶⁾ only visible if the connected device is a Micropilot

- Maintenance required (M)

- No effect (N)
- ----

Factory setting

#blank# (HART PV - designation dependent on device)

Navigation $\ensuremath{\boxtimes}\xspace \square$ Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s) \rightarrow #blank#

Description Shows the first HART variable (PV).

Additional information	Read access	Operator
	Write access	-

#blank# (HART SV - designation dependent on device)

NavigationSetup \rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)
 \rightarrow #blank#PrerequisiteFor HART devices other than NMT: Operating mode ($\rightarrow \boxdot 137$) = PV,SV,TV & QVDescriptionShows the second HART variable (SV).Additional informationRead access
Write access

#blank# (HART TV - designation dependent on device)			
	r		
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#		
Prerequisite	For HART devices other than NMT: Operating mode (→ □ 137) = PV,SV,TV & QV		
Description	Shows the third HART variable (TV).		
Additional information	Read access	Operator	
	Write access	-	

#blank# (HART QV - designation dependent on device)				
Navigation	8 2	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#		
Prerequisite	For H	For HART devices other than NMT: Operating mode (→ 🗎 137) = PV,SV,TV & QV		
Description	Show	Shows the fourth HART variable (QV).		
Additional information	Read	access	Operator	
	Write	access	-	

Output pressure		٨	
Navigation	 Image: Setup → Advanced s → Output pressure 	setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)	
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.		
Description	Defines which HART variable is the pressure.		
Selection	 No value Primary variable (PV) Secondary variable (SV) Tertiary variable (TV) Quaternary variable (QV))	
Factory setting	No value		
Additional information	Read access	Operator	
	Write access	Maintenance	

Output density	<u> </u>
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output density
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.
Description	Defines which HART variable is the density.
Selection	 No value Primary variable (PV) Secondary variable (SV) Tertiary variable (TV) Quaternary variable (QV)

Factory setting	No value		
Additional information	Read access	Operator	
	Write access	Maintenance	
Output temperature		ß	
Navigation	Setup → Advanced → Output temp.	setup \rightarrow Input/output \rightarrow HART devices \rightarrow HART Device(s)	
Prerequisite		ot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In variables are allocated automatically.	
Description	Defines which HART varia	able is the temperature.	
Selection	 No value Primary variable (PV) Secondary variable (SV) Tertiary variable (TV) Quaternary variable (Q) 		
Factory setting	No value		
Additional information	Read access	Operator	
	Write access	Maintenance	

Output vapor temperature			
Navigation	 B ⊆ Setup → Advanced setup - → Output vapor tmp 	→ Input/output → HART devices → HART Device(s)	
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.		
Description	Defines which HART variable is the vapor temperature.		
Selection	 No value Primary variable (PV) Secondary variable (SV) Tertiary variable (TV) Quaternary variable (QV) 		
Factory setting	No value		
Additional information	Read access	Operator	
	Write access	Maintenance	

Output level		Ê
Navigation	Image: Setup → Advanced setup - → Output level	→ Input/output → HART devices → HART Device(s)
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	
Description	Defines which HART variable is the level.	
Selection	 No value Primary variable (PV) Secondary variable (SV) Tertiary variable (TV) Quaternary variable (QV) 	
Factory setting	No value	
Additional information	Read access	Operator
	Write access	Maintenance

"Forget device" wizard

	Read access	Maintenance
	1 This submenu is only visible	e if Number of devices ($\rightarrow \square 135$) ≥ 1 .
		\rightarrow Advanced setup \rightarrow Input/output \rightarrow HART devices get device
Forget device		<u>8</u>
Navigation	Setup → Advanced setup - device	→ Input/output → HART devices → Forget device → Forget
Description	With this function an offline dev	rice can be deleted from the device list.
Selection	 HART Device 1 HART Device 2 HART Device 3 HART Device 4 HART Device 4 HART Device 6 HART Device 6 HART Device 7 HART Device 8 HART Device 9 HART Device 10 HART Device 11 HART Device 11 HART Device 12 HART Device 13 HART Device 14 HART Device 15 None 	
Factory setting	None	
Additional information	Read access	Operator


Maintenance

Write access

^{*} Visibility depends on order options or device settings

"Analog IP" submenu

There is a **Analog IP** submenu for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to → 🗎 149.

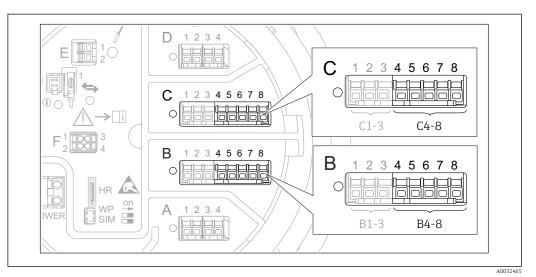

■ 49 Terminals for the "Analog IP" submenu ("B4-8" or "C4-8", respectively)

Navigation \square Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP

Operating mode			
Navigation	Image: Boost Setup → Advanced setup →	→ Input/output → Analog IP → Operating mode	
Description	Defines the operating mode of the analog input.		
Selection	DisabledRTD temperature inputGauge power supply		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

RTD type		Ê
Navigation	Setup → Advanced setup → Input/output → Analog IP → RTD type	
Prerequisite	Operating mode (→ 🗎 143) = RTD temperature input	
Description	Defines the type of the connected RTD.	

Selection	 Cu50 (w=1.428, GOST) Cu53 (w=1.426, GOST) Cu90; 0°C (w=1.4274, GOST) Cu100; 25°C (w=1.4274, GOST) Cu100; 0°C(w=1.4274, GOST) Pt46 (w=1.391, GOST) Pt50 (w=1.391, GOST) Pt100(385) (a=0.00385, IEC75) Pt100(391) (a=0.00385, IEC75) Pt100 (w=1.391, GOST) Pt500(385) (a=0.00385, IEC75) Pt1000(385) (a=0.00385, IEC75) Pt1000(385) (a=0.00385, IEC75) Pt1000(385) (a=0.00385, IEC75) Ni100(617) (a=0.00617, DIN4) Ni120(617) (a=0.00617, DIN4) 	51) dian) 604) 51) 751) 3760) 3760)
Factory setting	Pt100(385) (a=0.00385, IEC751)
Additional information	Read access	Operator
	Write access	Maintenance

Thermocouple type		Ê
Navigation	Image: Book Setup → Advanced setup → Input/output → Analog IP → Thermocouple typ	
Description	Defines the type of the connected thermocouple.	
Selection	 N type B type C type D type J type K type L type L GOST type R type S type T type U type 	
Factory setting	N type	

RTD connection type		
Navigation	Input/output → Analog IP → RTD connect type Input/output → Analog IP → RTD connect type	
Prerequisite	Operating mode (→ 🗎 143) = RTD temperature input	
Description	Defines the connection type of the RTD.	

	4 wire RTD connection2 wire RTD connection3 wire RTD connection	
Factory setting	4 wire RTD connection	
Additional information	Read access	Operator
	Write access	Maintenance

Process value		
Navigation		→ Input/output → Analog IP → Process value
Prerequisite	Operating mode ($\rightarrow \triangleq 143$) \neq Disabled	
Description	Shows the measured value received via the analog input.	
Additional information	Read access Operator	
	Write access	-

Process variable		l	
Navigation	Image: Barbon Setup → Advanced setup	ightarrow Input/output $ ightarrow$ Analog IP $ ightarrow$ Process variable	
Prerequisite	Operating mode (> 🗎 143) 🕫	Operating mode (→ 🗎 143) ≠ RTD temperature input	
Description	Determines type of measured v	Determines type of measured value.	
Selection	 Level linearized Temperature Pressure Density 		
Factory setting	Level linearized		
Additional information	Read access	Operator	
	Write access	Maintenance	

0 % value		A
Navigation	Import Setup → Advanced setup → Input/output → Analog IP → 0 % value	
Prerequisite	Operating mode (→ 🗎 143) = 420mA input	

Description	Defines the value represented by a current of 4mA.	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access Operator	
	Write access Maintenance	

100 % value			ß	
Navigation	Image: Setup → Advanced setup	\rightarrow Input/output \rightarrow Analog IP \rightarrow 100 % value		
Prerequisite	Operating mode (> 🗎 143) =	Operating mode (→ 🗎 143) = 420mA input		
Description	Defines the value represented b	y a current of 20mA.		
User entry	Signed floating-point number			
Factory setting	0 mm			
Additional information	Read access	Operator		

Read access	Operator
Write access	Maintenance

Input value		
Navigation	Image: Bearing and the setup Image: Bearing and the setup	\rightarrow Input/output \rightarrow Analog IP \rightarrow Input value
Prerequisite	Operating mode ($\rightarrow \triangleq 143$) = Disabled	
Description	Shows the value received via the analog input.	
Additional information	Read access Operator	
	Write access	-

Minimum probe temperatu	re	
Navigation	■ Setup → Advanced setup → Input/output → Analog IP → Min. probe temp	
Prerequisite	Operating mode ($\Rightarrow \square 143$) = RTD temperature input	
Description	Minimum approved temperature of the connected probe. If the temperature falls below this value, the W&M status will be "invalid".	

User entry	−213 to 927 °C	
Factory setting	-100 ℃	
Additional information	Read access	Operator
	Write access	Maintenance

Maximum probe temperatu	ıre		ß
Navigation	Setup → Advanced setup → Input/output → Analog IP → Max. probe temp		
Prerequisite	Operating mode (→ 🗎 143) = F	Operating mode (→ 🗎 143) = RTD temperature input	
Description	Maximum approved temperature of the connected probe. If the temperature rises above this value, the W&M status will be "invalid".		
User entry	−213 to 927 °C		
Factory setting	250 °C		
Additional information	Read access Operator		
	Write access	Maintenance	

Probe position		8
Navigation	Image: Setup → Advanced setup -	\rightarrow Input/output \rightarrow Analog IP \rightarrow Probe position
Prerequisite	Operating mode (→ 🗎 143) = RTD temperature input	
Description	Position of the temperature probe, measured from zero position (tank bottom or datum plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of the temperature value will be "invalid".	
User entry	-5 000 to 30 000 mm	
Factory setting	5 000 mm	
Additional information	Read access Operator	
	Write access	Maintenance

A


Damping factor		

Navigation	Setup → Advanced setup → Input/output → Analog IP → Damping factor			
Prerequisite	Operating mode ($\rightarrow \triangleq 143$) \neq Disabled			
Description	Defines the damping constant (in seconds).			
User entry	0 to 999.9 s			
Factory setting	0 s			
Additional information	Read access Operator			
	Write access	Maintenance		

Gauge current					
Navigation	$ \blacksquare \blacksquare \text{Setup} \rightarrow \text{Advanced setup} \cdot $	→ Input/output → Analog IP → Gauge current			
Prerequisite	Operating mode (→ 🗎 143) = Gauge power supply				
Description	Shows the current on the power supply line for the connected device.				
Additional information	Read access Operator				
	Write access	-			

"Analog I/O" submenu

There is a **Analog I/O** submenu for each Analog I/O module of the device. This submenu refers to terminals 1 to 3 of this module (an analog input or output). For terminals 4 to 8 (always an analog input) refer to → 🗎 143.

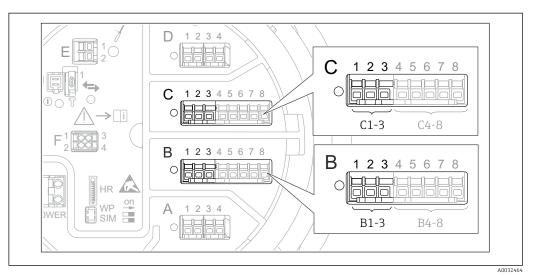

☑ 50 Terminals for the "Analog I/O" submenu ("B1-3" or "C1-3", respectively)

Navigation	8 2	Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog I/C)

Operating mode			
Navigation	■ Setup \rightarrow Advanced setup	→ Input/output → Analog I/O → Operating mode	
Description	Defines the operating mode of t	ne analog I/O module.	
Selection	 Disabled 420mA input HART master+420mA input HART master 420mA output HART slave +420mA output 		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of the options

Operating mode ($\rightarrow \square$ 149)	Direction of signal	Type of signal
Disabled	-	-
420mA input	Input from 1 external device	Analog (420mA)
HART master+420mA input	Input from 1 external device	Analog (420mA)HART
HART master	Input from up to 6 external devices	HART

Operating mode (→ 🗎 149)	Direction of signal	Type of signal
420mA output	Output to higher-level unit	Analog (420mA)
HART slave +420mA output	Output to higher-level unit	Analog (420mA)HART

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode Terminals of the I/O modu		'O module	
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+

In the active mode the following conditions must be met:

- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

Current span			
Navigation		→ Input/output → Analog I/O → Current span	
Prerequisite	Operating mode parameter (\rightarrow	■ 149) ≠ Disabled option or HART master option	
Description	Defines the current range for the	e measured value transmission.	
Selection	 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 420 mA (420.5 mA) Fixed value * 		
Factory setting	420 mA NE (3.820.5 mA)		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of the options

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA (420.5 mA)	4 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
420 mA NE (3.820.5 mA)	3.8 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA

^{*} Visibility depends on order options or device settings

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA US (3.920.8 mA)	3.9 to 20.8 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.0 mA
Fixed current	Constant current, defined in the Fixed current parameter ($\rightarrow \square 151$).				

In the case of an error, the output current assumes the value defined in the Failure mode parameter ($\Rightarrow \triangleq 152$).

Fixed current			
Navigation	\blacksquare ■ Setup → Advanced setup →	→ Input/output → Analog I/O → Fixed current	
Prerequisite	Current span (→ 🗎 150) = Fixe	ed current	
Description	Defines the fixed output current.		
User entry	4 to 22.5 mA		
Factory setting	4 mA		
Additional information	Read access	Operator	
	Write access	Maintenance	

Analog input source		Ê
Navigation	Image: Setup → Advanced setup → Input/output → Analog I/O → Analog source	
Prerequisite	 Operating mode (→ ¹ 149) = 420mA output or HART slave +420mA output Current span (→ ¹ 150) ≠ Fixed current 	
Description	Defines the process variable transmitted via the AIO.	
Selection	 None Tank level Tank level % Tank ullage Tank ullage % Measured level Distance Displacer position Water level Upper interface level Lower interface level Bottom level Tank reference height Liquid temperature 	

Vapor temperature

 Air temperature 	
-------------------------------------	--

- Observed density value
 Average profile density⁷⁾
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value ⁷⁾
- AIO B1-3 value mA⁷⁾
- AIO C1-3 value⁷⁾
- AIO C1-3 value mA⁷⁾
- AIP B4-8 value ⁷⁾
- AIP C4-8 value⁷⁾
- Element temperature 1 ... 24⁷⁾
- HART device 1...15 PV⁷
- HART device 1 ... 15 PV mA⁷⁾
- HART device 1 ... 15 PV %⁷
- HART device 1 ... 15 SV⁷
- HART device 1 ... 15 TV⁷⁾
- HART device 1 ... 15 QV⁷⁾

Tank level

1

Additional information	Read access	Operator
	Write access	Maintenance

Failure mode			Ê
Navigation	Image: Below a setup → Advanced setup →	→ Input/output → Analog I/O → Failure mode	
Prerequisite	Operating mode (→ 🗎 149) = 4	a20mA output or HART slave +420mA output	
Description	Defines the output behavior in ca	se of an error.	
Selection	 Min. Max. Last valid value Actual value Defined value 		
Factory setting	Max.		
Additional information	Read access	Operator	

Maintenance

Write access

⁷⁾ Visibility depends on order options or device settings

Error value			Ê	
Navigation	Image: Barbon Setup → Advance	ed setup \rightarrow Input/output \rightarrow Analog I/O \rightarrow Error value		
Prerequisite	Failure mode (> 🗎 1	Failure mode (→ 🗎 152) = Defined value		
Description	Defines the output valu	Defines the output value in case of an error.		
User entry	3.4 to 22.6 mA	3.4 to 22.6 mA		
Factory setting	22 mA			
Additional information	Read access Operator			
	Write access	Maintenance		

Navigation	Image: Betup → Advanced setup →	→ Input/output → Analog I/O → Input value	
Prerequisite	 Operating mode (→ 149) = 420mA output or HART slave +420mA output Current span (→ 150) ≠ Fixed current 		
Description	Shows the input value of the anal	log I/O module.	
Additional information	Read access	Operator	
	Write access	-	

0 % value			Ê
Navigation	Image: Setup → Advanced setup	→ Input/output → Analog I/O → 0 % value	
Prerequisite	■ Operating mode (→ 🗎 149) ■ Current span (→ 🗎 150) ≠ F	= 420mA output or HART slave +420mA output ixed current	
Description	Value corresponding to an outpu	t current of 0% (4mA).	
User entry	Signed floating-point number		
Factory setting	0 Unitless		
Additional information	Read access	Operator	
	Write access	Maintenance	

100 % value			
Navigation		→ Input/output → Analog I/O → 100 % value	
Prerequisite	 Operating mode (→ ^{(→}) 149) Current span (→ ^{(→}) 150) ≠ Fi 	= 420mA output or HART slave +420mA output xed current	
Description	Value corresponding to an outpu	t current of 100% (20mA).	
User entry	Signed floating-point number		
Factory setting	0 Unitless		
Additional information	Read access	Operator	
	Write access	Maintenance	

Input value %			
Navigation	□ $□$ Setup → Advanced setup →	• Input/output \rightarrow Analog I/O \rightarrow Input value %	
Prerequisite	■ Operating mode ($\rightarrow \cong 149$) = 420mA output or HART slave +420mA output ■ Current span ($\rightarrow \cong 150$) ≠ Fixed current		
Description	Shows the output value as a perce	entage of the complete 420mA range.	
Additional information	Read access Operator		
	Write access	-	

Output value			
Navigation		→ Input/output → Analog I/O → Output value	
Prerequisite	Operating mode (→ 🗎 149) = 420mA output or HART slave +420mA output		
Description	Shows the output value in mA.		
Additional information	Read access Operator		
	Write access	-	

A

ß

Process variable

Navigation		→ Input/output → Analog I/O → Process variable	
Prerequisite	Operating mode (→ 🗎 149) = 420mA input or HART master+420mA input		
Description	Defines the type of measuring variable.		
Selection	Level linearizedTemperaturePressureDensity		
Factory setting	Level linearized		
Additional information	Read access	Operator	
	Write access	Maintenance	

Analog input 0% value	
-----------------------	--

Navigation		Input/output → Analog I/O → AI 0% value
Prerequisite	Operating mode ($\rightarrow \square 149$) = 4	20mA input or HART master+420mA input
Description	Value corresponding to an input current of 0% (4mA).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Analog input 100% value		
Navigation	Setup → Advanced setup → Input/output → Analog I/O → AI 100% value	
Prerequisite	Operating mode ($\Rightarrow \triangleq 149$) = 420mA input or HART master+420mA input	
Description	Value corresponding to an input current of 100% (20mA).	
User entry	Signed floating-point number	
Factory setting	0 mm	

Additional information	Read access	Operator
	Write access	Maintenance

Error event type		Â
Navigation	$ \blacksquare \Box \text{Setup} \rightarrow \text{Advanced setup} $	\rightarrow Input/output \rightarrow Analog I/O \rightarrow Error event type
Prerequisite	Operating mode ($\rightarrow \square 149$) ≠	Disabled or HART master
Description	Defines the type of event messa range in the analog I/O module.	ge (alarm/warning) in case of an error or output out of
Selection	NoneWarningAlarm	
Factory setting	Warning	
Additional information	Read access	Operator
	Write access	Maintenance

Process value		
Navigation		→ Input/output → Analog I/O → Process value
Prerequisite	Operating mode (→ 🗎 149) = 420mA input or HART master+420mA input	
Description	Shows the input value scaled to customer units.	
Additional information	Read access Operator	
	Write access	-

Input value in mA		
Navigation		→ Input/output → Analog I/O → Input val. in mA
Prerequisite	Operating mode (→ 🗎 149) = 420mA input or HART master+420mA input	
Description	Shows the input value in mA.	
Additional information	Read access Operator	
	Write access	-

Input value percent		
Navigation	■ \square Setup → Advanced setup	→ Input/output → Analog I/O → Input value [%]
Prerequisite	Operating mode (→ 🗎 149) = 420mA input or HART master+420mA input	
Description	Shows the input value as a percentage of the complete 420mA current range.	
Additional information	Read access Operator	
	Write access	-

Damping factor			
Navigation	Image: Bearing → Advanced setup -	→ Input/output → Analog I/O → Damping factor	
Prerequisite	Operating mode ($\rightarrow \triangleq$ 149) \neq Disabled or HART master		
Description	Defines the damping constant (in	ı seconds).	
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	


Used for SIL/WHG			
Navigation	Image: Setup → Advanced set	up → Input/output → Analog I/O → Used for SIL/WHG	
Prerequisite		 Operating mode (→ ¹ 149) = 420mA output or HART slave +420mA output The device has a SIL approval. 	
Description	Determines whether the disc	Determines whether the discrete I/O module is in SIL/WHG mode.	
Selection	EnabledDisabled		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

Expected SIL/WHG chain		
Navigation	Image: Setup → Advanced setup →	Input/output \rightarrow Analog I/O \rightarrow SIL/WHG chain
Prerequisite	 Operating mode (→	
Additional information	Read access	Operator
	Write access	-

"Digital Xx-x" submenu

• In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. A1-2, for example, denotes terminals 1 and 2 of slot A. The same is valid for slots B, C and D if they contain a Digital IO module.

• In this document, Xx-x designates any of these submenus. The structure of all these submenus is the same.

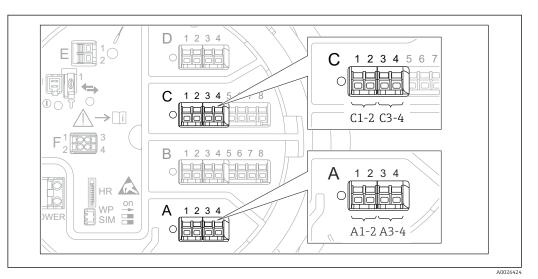


🛃 51 Designation of the digital inputs or outputs (examples)

Navigation \square Setup → Advanced setup → Input/output → Digital Xx-x

Operating mode		
Navigation	Image: Boundary Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode Image: Boundary Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode	
Description	Defines the operating mode of the discrete I/O module.	
Selection	 Disabled Output passive Input passive Input active 	
Factory setting	Disabled	

Additional information

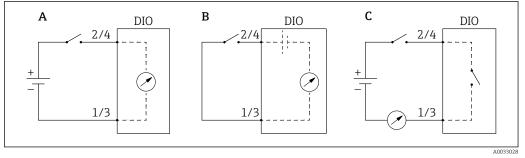

- ☑ 52 Operating modes of the Digital I/O module
- A Input passive
- B Input active
- C Output passive

Digital input source

Â

Navigation	Setup → Advanced setup → Input/output → Digital Xx-x → Digital source
Prerequisite	Operating mode (→ 🗎 159) = Output passive
Description	Defines which device state is indicated by the digital output.
Selection	 None Alarm x any Alarm x High Alarm x HighHigh Alarm x High or HighHigh Alarm x Low Alarm x LowLow Alarm x Low or LowLow Digital Xx-x Primary Modbus x Secondary Modbus x
Factory setting	None
Additional information	 Meaning of the options Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the Alarm 1 to 4 submenus. Digital Xx-x⁸⁾ The digital signal present at the digital input Xx-x is passed through to the digital output. Modbus A1-4 Discrete x Modbus B1-4 Discrete x Modbus D1-4 Discrete x The digital value written by the Modbus Master device to the Modbus discrete x parameter⁹⁾ is passed to the digital output. For details refer to Special Documentation SD02066G.

⁸⁾ Only present if "Operating mode ($\Rightarrow extsf{B}$ 159)" = "Input passive" or "Input active" for the respective Digital I/O module.


⁹⁾ Expert \rightarrow Communication \rightarrow Modbus Xx-x \rightarrow Modbus discrete x

Input value			
Navigation		\rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Input value	
Prerequisite	Operating mode (→ 🗎 159) = "Input passive" option or "Input active" option		
Description	Shows the digital input value.		
Additional information	Read access	Operator	
	Write access	-	

Contact type		Ê
Navigation	□ Setup → Advanced setup → Input/output → Digital Xx-x → Contact type	
Prerequisite	Operating mode (→ 🗎 159) ≠ Disabled	
Description	Determines the switching behavior of the input or output.	
Selection	Normally openNormally closed	
Factory setting	Normally open	
Output simulation		
x		

Navigation			
Prerequisite	Operating mode (> 🗎 159) = Output passive		
Description	Sets the output to a specific simulated value.		
Selection	 Disable Simulating active Simulating inactive Fault 1 Fault 2 		
Factory setting	Disable		
Additional information	Read access	Operator	
	Write access	Maintenance	

The digital output consists of two relays connected in series:

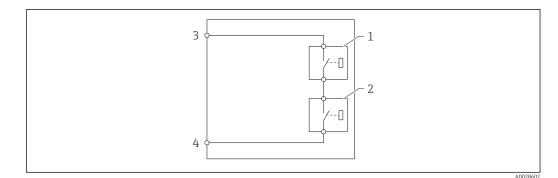



1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open

The **Fault 1** and **Fault 2** options can be used to check the correct switching behavior of the two relays.

Output value				
Navigation		setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Output values		
Prerequisite	Operating mode (> 🗎 1	Operating mode (→ 🗎 159) = Output passive		
Description	Shows the digital output value.			
Additional information	Read access Operator			
	Write access	-		

Readback value	
Navigation	$\textcircled{B} \square \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Input/output} \rightarrow \text{Digital Xx-x} \rightarrow \text{Readback value}$
Prerequisite	Operating mode (→ 🗎 159) = Output passive
Description	Shows the value read back from the output.


Additional information	Read access	Operator
	Write access	-

Used for SIL/WHG			
Navigation	■ \square Setup \rightarrow Advanced setup	\rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Used for SIL/WHG	
Prerequisite	 Operating mode (→ [™] 159) The device has a SIL certificate 		
Description	Determines whether the discrete	e I/O module is in SIL/WHG mode.	
Selection	EnabledDisabled		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

Expected SIL/WHG chain			
Navigation	Image: Boost Setup → Advanced setup -	→ Input/output → Digital C3-4 → SIL/WHG chain	
Prerequisite	Operating mode (→ 🗎 159) = Output passive		
Additional information	Read access	Service	
	Write access	-	

"Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "**X1-4**" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

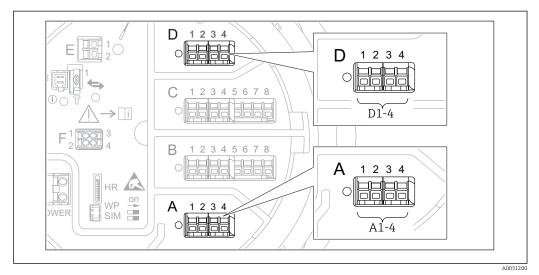

■ 54 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

Navigation $\square \square$ Setup \rightarrow Advanced setup \rightarrow Communication

"Modbus X1-4", "V1 X1-4" and "WM550 X1-4" submenu

This submenu is only present for devices with **MODBUS** and/or **V1** and/or **"WM550" option** communication interface. There is one submenu of this type for each communication interface.

Navigation	8 2	Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4
Navigation	8 8	Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4
Navigation	8 2	Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4

Communication interface protocol				
Navigation	Image: Setup → Advanced X1-4 → Commu I/F	setup \rightarrow Communication \rightarrow Modbus X1-4 / V1 X1-4 / WM550 Protoc		
Description	Shows the type of communication protocol.			
Additional information	Read access Operator			
	Write access	-		

	<i>"Configuration" submenu</i> This submenu is only present for devices with a MODBUS communication interface.		
	Navigation $\ensuremath{\textcircled{\scale}}$ Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow Modbus X1-4 \rightarrow Configuration		
Baudrate			ß
Navigation	Image: BaudrateImage: Baudrate	ced setup \rightarrow Communication \rightarrow M	lodbus X1-4 → Configuration
Prerequisite	Communication interface protocol ($\Rightarrow \triangleq 164$) = MODBUS		
Description	Defines the baud rate of the communication.		
Selection	 600 BAUD 1200 BAUD 2400 BAUD 4800 BAUD 9600 BAUD * 19200 BAUD * 		
Factory setting	9600 BAUD		
Additional information	Read access Operator		
	Write access	Maintenance	

Navigation	Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Parity	
Prerequisite	Communication interface protocol ($\rightarrow \cong 164$) = MODBUS	
Description	Defines the parity of the Modbus communication.	
Selection	 Odd Even None / 1 stop bit None / 2 stop bits 	
Factory setting	None / 1 stop bit	
Additional information	Read access	Operator
	Write access	Maintenance

^{*} Visibility depends on order options or device settings

Parity

A

£

Modbus address	
Navigation	Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Device ID
Prerequisite	Communication interface protocol ($\rightarrow \cong 164$) = MODBUS

•		
Description	Defines the Modbus address of the device.	
User entry	1 to 247	
Factory setting	1	
Additional information	Read access	Operator
	Write access	Maintenance

Float swap mode			Â
Navigation	Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Float swap mode		
Prerequisite	Communication interface prot	Communication interface protocol ($\rightarrow \triangleq 164$) = MODBUS	
Description	Sets the format of how the floating point value is transferred on Modbus.		
Selection	 Normal 3-2-1-0 Swap 0-1-2-3 WW Swap 1-0-3-2 WW Swap 2-3-0-1 		
Factory setting	Swap 0-1-2-3		
Additional information	Read access	Operator	
	Write access	Maintenance	

Bus termination	8
Navigation	\blacksquare Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Bus termination
Prerequisite	Communication interface protocol ($\rightarrow \triangleq 164$) = MODBUS
Description	Activates or deactivates the bus termination at the device. Should only be activated on the last device in a loop.
Selection	OffOn

Off

Additional information

Read access	Operator
Write access	Maintenance

"Configuration" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation

Setup → Advanced setup → Communication → V1 X1-4
→ Configuration

Communication interface	Communication interface protocol variant		
Navigation			
Description	Determines which variant of the V1 protocol is used.		
User interface	 None V1 * 		
Factory setting	None		
Additional information	Read access	Operator	
	Write access	Maintenance	

V1 address			Â
Navigation	Setup → Advanced setup → address	→ Communication → V1 X1-4 → Configuration → V1	
Prerequisite	Communication interface protocol variant ($\rightarrow \triangleq 168$) = V1		
Description	Identifier of the device for the V1 communication.		
User entry	0 to 99		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

^{*} Visibility depends on order options or device settings

V1 address			
Navigation	Setup → Advanced setup - address	→ Communication → V1 X1-4 → Configuration → V1	
Prerequisite	Communication interface protocol variant ($ ightarrow extsf{B}$ 168)		
Description	Identifier of the previous device for V1 communication.		
User entry	0 to 255		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Level mapping		ß
Navigation	Image: Setup → Advanced setup - mapping	→ Communication → V1 X1-4 → Configuration → Level
Prerequisite	Communication interface proto	ocol (→ 🗎 164) = V1
Description	Determines the transmittable range of levels.	
Selection	■ +ve ■ +ve & -ve	
Factory setting	+ve	
Additional information	Read access	Operator
	Write access	Maintenance

In V1, the level is always represented by a number in the range from 0 to 999 999. This number corresponds to a level as follows:

"Level mapping" = "+ve"

Number	Corresponding level
0	0.0 mm
999 999	99 999.9 mm

"Level mapping" = "+ve & -ve"

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm

Number	Corresponding level	
500001	-0.1 mm	
999999	-49 999.9 mm	

Line impedance			£	
Navigation	Image: Setup → Advanced setup impedance	\rightarrow Communication \rightarrow V1 X1-4 \rightarrow Configuration \rightarrow Line		
Prerequisite	Communication interface prot	Communication interface protocol ($\Rightarrow \triangleq 164$) = V1		
Description	Adjusts the impedance of the communication line.			
User entry	0 to 15			
Factory setting	15			
Additional information	Read access	Operator		
	Write access	Maintenance		

The line impedance affects the voltage difference between a logical 0 and a logical 1 on the message of the device to the bus. The default setting is suitable for most applications.

"V1 input selector" submenu

This submenu is only present for devices with a $\boldsymbol{V1}$ communication interface.

Navigation	8 8	Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow V1 X1-4 \rightarrow V1
		input select.

Alarm 1 input source		ඕ
Navigation	Image: Setup → Advanced setup → Advanced setup → Imput src	→ Communication → V1 X1-4 → V1 input select. → Alarm1
Description	Determines which discrete value	will be transmitted as V1 alarm 1 status.
Selection	 None Alarm 1-4 any Alarm 1-4 HighHigh Alarm 1-4 High or HighHigh Alarm 1-4 High Alarm 1-4 Low Alarm 1-4 Low or LowLow Alarm 1-4 LowLow 	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Alarm 2 input source		Ŕ
Navigation	Image: Setup → Advanced setup + Advanced setup + input src	→ Communication → V1 X1-4 → V1 input select. → Alarm2
Description	Determines which discrete value	will be transmitted as V1 alarm 2 status.
Selection	 None Alarm 1-4 any Alarm 1-4 HighHigh Alarm 1-4 High or HighHigh Alarm 1-4 High Alarm 1-4 Low Alarm 1-4 Low or LowLow Alarm 1-4 LowLow 	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Value percent selector		<u> </u>	
Navigation	Setup → Advanced setup → Communication → V1 X1-4 → V1 input select. → Value % select		
Description	Selects which value shall be transmitted as a 0100% value in the V1 Z0/Z1 message.		
Selection	 None Tank level % Tank ullage % AIO B1-3 value % * AIO C1-3 value % * 		
Factory setting	None		
Additional information	Read access	Operator	
	Write access	Maintenance	
	"Configuration" subment This submenu is only pr interface. Navigation	resent for devices with a "WM550" option communication	
Baudrate	This submenu is only p interface.	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration	
Baudrate	This submenu is only p interface.	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration	
	This submenu is only printerface.	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration	
Navigation	This submenu is only printerface. Navigation ■ Setup → Advance → Baudrate	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration	
Navigation Prerequisite	This submenu is only printerface. Navigation $\textcircled{\}$	resent for devices with a "WM550" option communication Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow Configuration	
Baudrate Navigation Prerequisite Description Selection	This submenu is only printerface. Navigation $\textcircled{\}$	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration Face protocol (→ 🖺 164) = "WM550" option	
Navigation Prerequisite Description Selection	This submenu is only printerface. Navigation Setup → Advance → Baudrate Communication interf Defines the baud rate o 600 BAUD 1200 BAUD 2400 BAUD	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration Face protocol (→ 🖺 164) = "WM550" option	
Navigation Prerequisite Description	This submenu is only printerface. Navigation Setup → Advance → Baudrate Communication interf Defines the baud rate of 600 BAUD 1200 BAUD 2400 BAUD 2400 BAUD 4800 BAUD	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration Face protocol (→ 🖺 164) = "WM550" option	

^{*} Visibility depends on order options or device settings

WM550 address	
Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → Configuration → WM550 address
Description	Describes the WM550 address of the device.
User entry	0 to 63
Factory setting	1
Software ID	۵
Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → Configuration → Software ID
Prerequisite	Communication interface protocol ($\rightarrow \cong 164$) = "WM550" option
Description	Defines content for WM550 Task 32. Detailed information on content for WM550 Task 32, Special Documentation SD02567G.
User entry	0 to 9 999
Factory setting	2 000
	"WM550 input selector" submenu
	This submenu is only present for devices with a "WM550" option communication interface.
	NavigationImage: Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow WM550 X1-4 \rightarrow WM550 inp select

Discrete 1 selector	
Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → WM550 inp select → Discrete 1select
Description	Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.
Selection	 None Balance flag optionVisibility depends on order options or device settings Alarm 14 any Alarm 14 HighHigh

- Alarm 1...4 High or HighHighAlarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

None

Additional information

Read access	Operator
Write access	Maintenance

"HART output" su	bmenu	
Navigation	8 8	Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output
"Configuration" of	. h	
"Configuration" su	IDmenu	
Navigation	88	Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration

System polling address			Ê
Navigation	 B ■ Setup → Advanced setup → → Polling address 	\rightarrow Communication \rightarrow HART output \rightarrow Configuration	
Description	Device address for HART commu	Device address for HART communication.	
User entry	0 to 63		
Factory setting	15		
Additional information	Read access Operator		
	Write access	Maintenance	

No. of preambles		8		
Navigation	Image: Setup → Advanced setup of preambles	\rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow No.		
Description	Defines the number of preamble	Defines the number of preambles in the HART telegram.		
User entry	5 to 20			
Factory setting	5			
Additional information	Read access	Operator		
	Write access	Maintenance		

PV source	
Navigation	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$
Description	Decides, if the PV configuration is according to an analog output (HART slave) or customized (in case of HART tunneling only).

•	AIO B1-3 [*] AIO C1-3 [*] Custom	
Factory setting C	Custom	
Additional information	Read access	Maintenance
V	Write access	Maintenance

Assign PV		
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign PV	
Prerequisite	PV source ($\rightarrow \triangleq 175$) = Custom	
Description	Assign a measured variable to the primary dynamic variable (PV). Additional information: The assigned measured variable is also used by the current output.	
Selection	 None Tank level Tank ullage Measured level Distance Displacer position Water level Upper interface level Lower interface level Bottom level Tank reference height Liquid temperature Vapor temperature Air temperature Observed density value Average profile density Upper density Middle density Lower density P1 (bottom) P2 (middle) P3 (top) GP 1 value GP 2 value GP 4 value 	
T (1)		

Tank level

^{*} Visibility depends on order options or device settings

Additional information

[Read access	Operator
	Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

0 % value		8
Navigation	Image: Setup → Advanced setup - value	→ Communication → HART output → Configuration → 0 %
Prerequisite	PV source = Custom	
Description	0% value of the primary variable (PV).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

100 % value		Ŕ
Navigation	Image: Setup → Advanced setup - % value	→ Communication → HART output → Configuration → 100
Prerequisite	PV source = Custom	
Description	100% value of the primary variable (PV).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

PV mA selector	٨
Navigation	$\label{eq:setup} \blacksquare \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Prerequisite	PV source = Custom

Description	Assigns a current to the primary HART variable (PV).	
	 None AIO B1-3 value mA * AIO C1-3 value mA * 	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Primary variable (PV) Navigation Image: Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow Primary var (PV)

Description Shows the current measured value of the primary dynamic variable (PV)

Additional information	Read access	Operator
	Write access	-

Percent of range		
Navigation	 Image Setup → Advanced setup → Communication → HART output → Configuration → Percent of range 	
Description	Shows the value of the primary variable (PV) as a percentage of the defined 0% to 100% range.	
Additional information Read access Operator		Operator
	Write access	-

Assign SV		
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign SV	
Description	Assign a measured variable to the second dynamic variable (SV).	
Selection	NoneTank levelTank ullage	

Visibility depends on order options or device settings

- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Liquid temperature

Additional information

 Read access
 Operator

 Write access
 Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Secondary variable (SV)		
Navigation	\blacksquare Setup → Advanced setup → Communication → HART output → Configuration → Second.var(SV)	
Prerequisite	Assign SV (→ 🗎 178) ≠ None	
Description	Shows the current measured value of the secondary dynamic variable (SV)	
Additional information	Read access Operator	
	Write access	-


Assign TV			6
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign TV		
Description	Assign a measured variable to the tertiary dynamic variable (TV).		
Selection	 None Tank level Tank ullage Measured level Distance Displacer position Water level Upper interface level Lower interface level Bottom level Tank reference height Liquid temperature Vapor temperature Air temperature Observed density value Average profile density Upper density Middle density P1 (bottom) P2 (middle) P3 (top) GP 1 value GP 2 value GP 4 value 		
Factory setting Additional information	Water level		
	Read access	Operator	
	Write access	Maintenance	

Tertiary variable (TV)		
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Tertiary var(TV)	
Prerequisite	Assign TV (→ 🗎 180) ≠ None	
Description	Shows the current measured value of the tertiary (third) dynamic variable (TV)	

Additional information	Read access	Operator
	Write access	-
Assign QV		
Navigation	Setup → Advance → Assign QV	ed setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration
Description	Assign a measured varia	able to the quaternary dynamic variable (QV).
Selection	 None Tank level Tank ullage Measured level Distance Displacer position Water level Upper interface level Lower interface level Bottom level Tank reference height Liquid temperature Vapor temperature Air temperature Observed density valu Average profile density Middle density Lower density P1 (bottom) P2 (middle) P3 (top) GP 1 value GP 2 value GP 4 value 	e
Factory setting	Observed density value	

Additional information

Read access	Operator
Write access	Maintenance

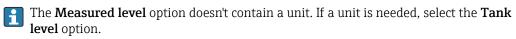

Quaternary variable (QV)			
Navigation	Image: Betup → Advanced → Quaterna.var(QV	setup → Communication → HART output → Configuration ')	
Prerequisite	Assign QV (→ 🗎 181) ≠ None		
Description	Shows the current measured value of the quaternary (fourth) dynamic variable (QV)		
Additional information	Read access Operator		
	Write access	-	

"Information" submenu

Navigation

 $\label{eq:setup} \fbox{\ } \mathsf{Setup} \to \mathsf{Advanced \ setup} \to \mathsf{Communication} \to \mathsf{HART} \ \mathsf{output} \\ \to \mathsf{Information}$

HART short tag		Â	
Navigation	Image: Setup → Advanced setup - short tag	→ Communication → HART output → Information → HART	
Description	Defines the short tag for the measuring point.		
	Maximum length: 8 characters Allowed characters: A-Z, 0-9, cer	tain special characters	
User entry	Character string comprising numbers, letters and special characters (8)		
Factory setting	NMR8x		
Additional information	Read access	Operator	
	Write access	Maintenance	

Device tag		ඕ
Navigation	Image Setup → Advanced setup - tag	→ Communication → HART output → Information → Device
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.	
User entry	Character string comprising num	bers, letters and special characters (32)
Factory setting	NMR8x	
Additional information	Read access	Operator
	Write access	Maintenance

HART descriptor	
Navigation	Image: Setup → Advanced setup → Communication → HART output → Information → HART descriptor
Description	Enter description for the measuring point
User entry	Character string comprising numbers, letters and special characters (16)

Factory setting	NMR8x	
Additional information	Read access	Operator
	Write access	Maintenance
HAPT mossage		<u> </u>
HART message		
Navigation	Setup → Advanced setup - message	→ Communication → HART output → Information → HART
Description	Use this function to define a HA requested by the master.	RT message which is sent via the HART protocol when
	Maximum length: 32 characters Allowed characters: A-Z, 0-9, ce	rtain special characters
User entry	Character string comprising numbers, letters and special characters (32)	
Factory setting	NMR8x	
Additional information	Read access	Operator
	Write access	Maintenance

HART date code		<u>ଛ</u>
Navigation	Image: Setup → Advanced setup date code	\rightarrow Communication \rightarrow HART output \rightarrow Information \rightarrow HART
Description	Enter date of the last configura	tion change. Use this format yyyy-mm-dd
User entry	Character string comprising nu	mbers, letters and special characters (10)
Factory setting	2009-07-20	
Additional information	Read access	Operator
	Write access	Maintenance

"Application" submenu

Navigation	8 8	Setup \rightarrow Advanced setup \rightarrow Application	
, our ig dictori		betup i naturicea betup i ipprication	

"Tank configuration	" subm	enu
Navigation	8 2	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config
"Level" submenu		
Navigation	0 2	Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level

Empty			Ê
Navigation		setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Empty	
Description	Distance from reference p	oint to zero position (tank bottom or datum plate).	
User entry	0 to 10 000 000 mm		
Factory setting	Dependent on the device	version	
Additional information	Read access	Operator	
	Write access	Maintenance	

- After changing the **Empty** parameter ($\rightarrow \cong 129$), the **Table mode** parameter
 - (→ 222) is automatically set to Disable.
 If Empty (→ 129) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
 - The dip table values are not affected by a change of the **Empty** parameter (→
 ^{(→}) 129).

Tank reference height	8
Navigation	
Description	Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).
User entry	0 to 10 000 000 mm
Factory setting	Dependent on the device version

Additional information	Read access	Operator
	Write access	Maintenance
Tank level		
Navigation		Application \rightarrow Tank config \rightarrow Level \rightarrow Tank level
-	Shows the distance from the zero position (tank bottom or datum plate) to the product surface.	
Additional information	Read access	Operator

Write access	-

Set level		Ŕ
Navigation	□ Setup \rightarrow Advanced setu	ap → Application → Tank config → Level → Set level
Description	If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.	
User entry	0 to 10 000 000 mm	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

The device adjusts the **Empty** parameter ($\rightarrow \square$ 129) according to the entered value, such that the measured level will match the actual level.

- After the change of the **Empty** parameter (→ ≅ 129), the **Table mode** parameter (→ ≅ 222) is automatically set to **Disable**.
 - If **Empty** has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
 - The dip table values are not affected by a change of the **Empty** parameter.

Water level source		
Navigation	□ □ Setup → Advanced setup → Application → Tank config → Level → Water level src	ı •
Description	Defines the source of the bottom water level.	
Selection	 Manual value Bottom level HART device 1 15 level 	

	 AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value 	
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

Manual water level			
Navigation	Image: Setup → Advanced setup	Image: Setup → Advanced setup → Application → Tank config → Level → Man. water level	
Prerequisite	Water level source (> 🗎 186) = Manual value		
Description	Defines the manual value of the bottom water level.		
User entry	-2 000 to 5 000 mm		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Water level		
Navigation	Image: Bootstand Setup → Advanced set	tup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Water level
Description	Shows the bottom water level.	
Additional information	Read access	Operator
	Write access	-

Blocking distance		
Navigation	$ \blacksquare \square Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Level \rightarrow Blocking dist. $	
Description	No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.	
User entry	Positive floating-point number	
Factory setting	800 mm	

Additional information

Read access	Operator
Write access	Maintenance

	"Temperature" submenu	
	Read access	Maintenance
		etup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config Temperature
Liquid temp source		<u>Â</u>
Navigation	Image: Setup → Advanced set source	up \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Liq temp
Description	Defines source from which the liquid temperature is obtained.	
Selection	 Manual value HART device 1 15 temperature AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value 	
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

Manual liquid temperature	e	Ê
Navigation	Setup → Advanced setup → Application → Tank config → Temperature → Man. liquid temp	
Prerequisite	Liquid temp source (beta 🗎 133) = Manual value	
Description	Defines the manual value of the liquid temperature.	
User entry	–50 to 300 °C	
Factory setting	25 °C	

Additional information	Read access	Operator
	Write access	Maintenance

Liquid temperature			
Navigation	Setup → Advanced setup → Application → Tank config → Temperature → Liquid temp.		
Description	Shows the average or spot temperature of the measured liquid.		
Additional information	Read access	Operator	
	Write access	-	
Air temperature source		۵	
Navigation	Image: Setup → Advance source	ed setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Air temp.	
Description	Defines source from wh	nich the air temperature is obtained.	
Selection	 Manual value HART device 1 15 t AIO B1-3 value AIO C1-3 value 	temperature	
	 AIP B4-8 value AIP C4-8 value 		
Factory setting	 AIP B4-8 value 		
Factory setting Additional information	AIP B4-8 valueAIP C4-8 value	Operator	

Manual air temperature		Ŕ
Navigation	Image: Setup → Advation temp.	nced setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Manual air
Prerequisite	Air temperature so	urce (→ 🗎 190) = Manual value
Description	Defines the manual	value of the air temperature.
User entry	–50 to 300 °C	
Factory setting	25 °C	
Additional information	Read access	Operator
	Write access	Maintenance

Air temperature		
Navigation	Setup → Advanced setup →	Application \rightarrow Tank config \rightarrow Temperature \rightarrow Air temp.
Description	Shows the air temperature.	
Additional information	Read access	Operator
	Write access	-

Vapor temp source		බ
Navigation	Image: Setup → Advance temp src	d setup \rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Vapor
Description	Defines the source from	which the vapor temperature is obtained.
Selection	 Manual value HART device 1 15 value AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value 	apor temp
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

Manual vapor temperature			
Navigation	Image: Setup → Advanced setup - vapor temp.	\rightarrow Application \rightarrow Tank config \rightarrow Temperature \rightarrow Man.	
Prerequisite	Vapor temp source ($\Rightarrow \square 191$)	= Manual value	
Description	Defines the manual value of the	vapor temperature.	
User entry	−50 to 300 °C		
Factory setting	25 °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

Vapor temperature			
Navigation	8 2	Setup \rightarrow Advanced setup \rightarrow temp.	Application \rightarrow Tank config \rightarrow Temperature \rightarrow Vapor
Description	Show	s the measured vapor tempe	erature.
Additional information	Read	access	Operator
	Write	access	-

"Density" submenu

Navigation

Observed density source		ඕ
Navigation	Image: Boots and the setup → Advanced setup →	Application \rightarrow Tank config \rightarrow Density \rightarrow Density source
Description	Determines how the density is ob	tained.
Selection	 HTG * HTMS * Average profile density * Upper density Middle density Lower density 	
Factory setting	Dependent on the device version	
Additional information	Read access	Operator
	Write access	Maintenance

Observed density			
Navigation	Image: Betup → Advanced density	l setup → Application → Tank config → Density → Observed	
Description	Shows the measured or calculated density.		
Additional information	Read access	Operator	
	Write access	-	
Air density			A
Navigation	Setup → Advanced setup → Application → Tank config → Density → Air density		
Description	Defines the density of the air surrounding the tank.		
User entry	0.0 to 500.0 kg/m ³		

Factory setting 1.2 kg/m³

^{*} Visibility depends on order options or device settings

Additional information	Read access	Operator
	Write access	Maintenance
Vapor density		٦
Navigation	$ \blacksquare \blacksquare \text{Setup} \rightarrow \text{Advanced setup} \rightarrow $	Application \rightarrow Tank config \rightarrow Density \rightarrow Vapor density
Description	Defines the density of the gas pha	ase in the tank.
User entry	0.0 to 500.0 kg/m ³	
Factory setting	1.2 kg/m ³	
Additional information	Read access	Operator
	Write access	Maintenance

"Pressure" submenu

Navigation

P1 (bottom) source		8
Navigation Description	Image: Below Provide the setup → Advanced setup → Defines the source of the bottom	Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 (bot) source pressure (P1).
Selection	 Manual value HART device 1 15 pressure AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value 	
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

P1 (bottom)			
Navigation		\rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 (bottom)	
Description	Shows the pressure at the tank bottom.		
Additional information	Read access	Operator	
	Write access	-	

P1 (bottom) manual pres	ssure	
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P1 (bot) manual	
Prerequisite	P1 (bottom) source (→ 🗎 195) = Manual value	
Description	Defines the manual value of the bottom pressure (P1).	
User entry	-1.01325 to 25 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P1 position		<u>à</u>
Navigation	■ \square Setup \rightarrow Advanced setup \rightarrow	Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 position
Description	Defines the position of the bottom pressure transmitter (P1), measured from zero position (tank bottom or datum plate).	
User entry	-10000 to 100000 mm	
Factory setting	5000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

P1 offset			
Navigation	Image: Boost Setup → Advanced setup -	\rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P1 offset	
Description	Offset for the bottom pressure (P1). The offset is added to the measured pressure prior to any tank calculation.		
User entry	-25 to 25 bar		
Factory setting	0 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

P1 absolute / gauge		A
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P1 absolut/ gauge	/
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	AbsoluteGauge	
Factory setting	Gauge	

Additional information	Read access	Operator
	Write access	Maintenance

P3 (top) source		Â
Navigation	Image: Barbon Setup → Advanced setup -	\rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 (top) source
Description	Defines the source of the top pre	ssure (P3).
Selection	 Manual value HART device 1 15 pressure AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value 	
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

P3 (top)		
Navigation		\rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 (top)
Description	Shows the pressure (P3) at the top transmitter.	
Additional information	Read access	Operator
	Write access	-

P3 (top) manual pressure		
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P3 (top) manual	
Prerequisite	P3 (top) source (→ 🗎 197) = Manual value	
Description	Defines the manual value of the top pressure (P3).	
User entry	-1.01325 to 25 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P3 position		8
Navigation	Image: Below a setup → Advanced setup →	\rightarrow Application \rightarrow Tank config \rightarrow Pressure \rightarrow P3 position
Description	Defines the position of the top pressure transmitter (P3), measured from zero position (tank bottom or datum plate).	
User entry	0 to 100 000 mm	
Factory setting	20000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

P3 offset			
Navigation	Image: Bootstand Setup → Advanced setup	→ Application → Tank config → Pressure → P3 offset	
Description	Offset for the top pressure (P3). The offset is added to the measured pressure prior to any tank calculation.		
User entry	-25 to 25 bar		
Factory setting	0 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

P3 absolute / gauge		
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P3 absolut/ gauge	/
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	AbsoluteGauge	
Factory setting	Gauge	

Read access Operator		
Write access	Maintenance	
Setup → Advanced setup → Application → Tank config → Pressure → Ambient pressure		
Defines the manual value of the ambient pressure.		
0 to 2.5 bar		
1 bar		
Read access	Ongrator	
	Write access Write access Setup \rightarrow Advanced setup \rightarrow pressure Defines the manual value of the a 0 to 2.5 bar	Write access Maintenance Image: Setup → Advanced setup → Application → Tank config → Pressure → Ambient pressure Defines the manual value of the ambient pressure. 0 to 2.5 bar 1 bar Read access Operator


"Tank calculation" submenu

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation

"HyTD" submenu

Overview

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

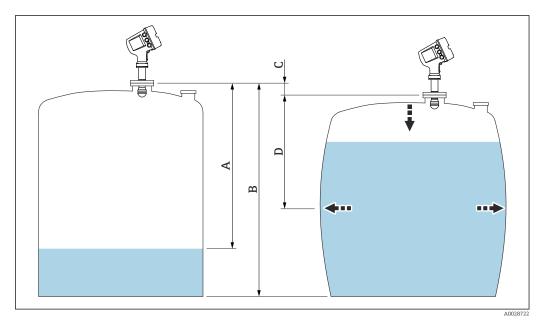


☑ 55 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (level below $L_0 \rightarrow$ "HyTD correction value" = 0)
- *B* Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (level above $L_0 \rightarrow$ "HyTD correction value" > 0)

Linear approximation of the HyTD correction

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

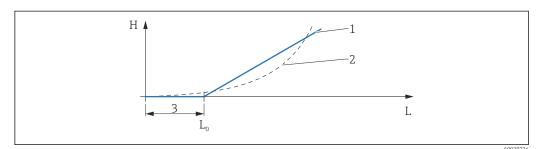

■ 56 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor ($\rightarrow \square 203$)"
- 2 Real correction
- 3 Starting level ($\rightarrow \square 202$)
- L Measured level ($\rightarrow \square 120$)
- *H* HyTD correction value ($\rightarrow \square 202$)

Calculation of the HyTD correction

L	$\leq L_0 \implies$	$C_{HyTD} = 0$
L	$> \Gamma^0 \implies$	$C_{HyTD} = - (L - L_0) \times D$

L	Measured level
L ₀	Starting level
c _{HyTD}	HyTD correction value
D	Deformation factor

A0028715

Description of parameters

Navigation $\ensuremath{\boxtimes}\xspace \square$ Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow HyTD

HyTD correction value		
Navigation	Image: Betup → Advanced value	setup \rightarrow Application \rightarrow Tank calculation \rightarrow HyTD \rightarrow HyTD corr.
Description	Shows the correction value from the Hydrostatic Tank Deformation.	
Additional information	Read access Operator	
	Write access	-

HyTD mode		8
Navigation	Image: Bearing and Bearing	→ Application → Tank calculation → HyTD → HyTD mode
Description	Activates or deactivates the calo	rulation of the Hydrostatic Tank Deformation.
Selection	NoYes	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Starting level		8
Navigation	\blacksquare ■ Setup → Advanced setup	\rightarrow Application \rightarrow Tank calculation \rightarrow HyTD \rightarrow Starting level
Description	Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value are not corrected.	
User entry	0 to 5 000 mm	
Factory setting	500 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Deformation factor		Â
Navigation	Image: Barbon Setup → Advanced setup →	\rightarrow Application \rightarrow Tank calculation \rightarrow HyTD \rightarrow Deform factor
Description	Defines the deformation factor for the HyTD (change of device position per change of level).	
User entry	-1.0 to 1.0 %	
Factory setting	0.2 %	
Additional information	Read access	Operator
	Write access	Maintenance

"CTSh" submenu


Overview

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

This correction is recommended for the following situations:

- if the operating temperature deviates considerably from the temperature during calibration ($\Delta T > 10 \degree C (18 \degree F)$)
- for extremely high tanks
- for refrigerated, cryogenic or heated applications
- As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
- This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

CTSh: Calculation of the wall temperature

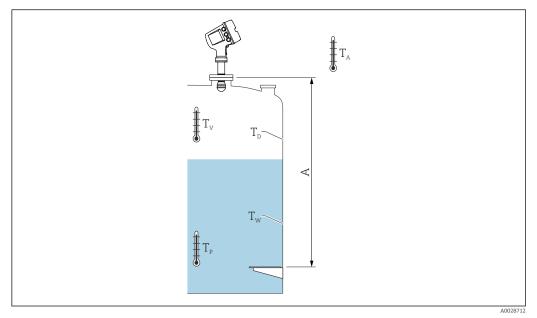

■ 57 Parameters for the CTSh calculation

A Gauge Reference Height (GRH)


T _w	Temperature of the wetted part of the tank shell
T _D	Temperature of the dry part of the tank shell
T _P	Product temperature
T _V	Vapor temperature (in the tank)
T _A	Ambient temperature (atmosphere surrounding the tank)

CTSh: Calculation of the wall temperature

Depending on the parameters **Covered tank** ($\rightarrow \cong 207$) and **Stilling well** ($\rightarrow \cong 208$), the temperatures T_W of the wetted and T_D of the dry part of the tank wall are calculated as follows:

Covered tank ($\rightarrow \square$ 207)	Stilling well (→ 🗎 208)	T _W	T _D
Covered	Yes ¹⁾	T _P	T _V
Covereu	No	(7/8) T _P + (1/8) T _A	(1/2) T _V + (1/2) T _A
Open top	Yes	T _P	T _A
Open top	No	(7/8) T _P + (1/8) T _A	T _A

1) This option is also valid for insulated tanks without a stilling welll. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

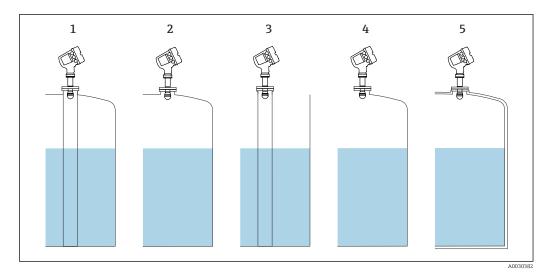

- 1 Covered tank ($\rightarrow \square 207$) = Covered; Stilling well ($\rightarrow \square 208$) = Yes
- 2
- Covered tank ($\Rightarrow \cong 207$) = Covered, Stilling well ($\Rightarrow \cong 208$) = 1es Covered tank ($\Rightarrow \cong 207$) = Covered; Stilling well ($\Rightarrow \cong 208$) = No Covered tank ($\Rightarrow \cong 207$) = Open top; Stilling well ($\Rightarrow \cong 208$) = Yes Covered tank ($\Rightarrow \cong 207$) = Open top; Stilling well ($\Rightarrow \cong 208$) = No 3
- 4
- Insulated tank: Covered tank ($\Rightarrow \square 207$) = Open top; Stilling well ($\Rightarrow \square 208$) = Yes 5

CTSh: Calculation of the correction

$$C_{\text{CTSh}} = \alpha (H - L) (T_{\text{D}} - T_{\text{cal}}) + \alpha L (T_{\text{W}} - T_{\text{cal}})$$

Н	Gauge Reference Height
L	Measured level
T _D	Temperature of the dry part of the tank shell (calculated from $T_{\rm P},T_{\rm V}$ and $T_{\rm A})$
T _w	Temperature of the wetted part of the tank shell (calculated from $T_{\rm P},T_{\rm V}$ and $T_{\rm A})$
T _{cal}	Temperature at which the measurement has been calibrated
α	Linear expansion coefficient
c _{CTSh}	CTSh correction value

Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Application} \rightarrow \mbox{Tank calculation} \\ \rightarrow \mbox{CTSh} \end{array}$

CTSh correction value			
Navigation	8 2	$\label{eq:setup} \blacksquare \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Description	Shows the CTSh correction value.		
Additional information	Read	access	Operator
	Write	access	-

CTSh mode		8
Navigation		up \rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow CTSh mode
Description	Activates or deactivates the C	TSh.
Selection	 No Yes With wire * Only wire * 	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Covered tank	
Navigation	□ Setup → Advanced setup → Application → Tank calculation → CTSh → Covered tank
Description	Determines whether the tank is covered.
Selection	Open topCovered
Factory setting	Open top

^{*} Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

The **Covered** option is only valid for fixed tank roofs. For a floating roof select **Open top**.

Stilling well		8
Navigation	Image: Bearing and the setup of the set	\rightarrow Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Stilling well
Description	Determines whether the device i	s mounted on a stilling well.
Selection	NoYes	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Calibration temperature				
Navigation	8 2	Setup → Advanced setup → temp	Application \rightarrow Tank calculation \rightarrow CTSh \rightarrow Calibration	
Description	Specify temperature at which the measurement has been calibrated.			
User entry	−50 to 250 °C			
Factory setting	25 ℃			
Additional information	Read	access	Operator	
	Write	access	Maintenance	

Linear expansion coefficier	nt	
Navigation	\blacksquare ■ Setup → Advanced setup → Application → Tank calculation → CTSh → Linear exp coeff)
Description	Defines the linear expansion coefficient of the tank shell material.	
User entry	0 to 100 ppm	
Factory setting	15 ppm	


Additional information	Read access	Operator
	Write access	Maintenance

Wire expansion coefficient	
Navigation	Setup → Advanced setup → Application → Tank calculation → CTSh → Wire exp coeff
Description	Defines the expansion coefficient of the wire material of the drum. Value is programmed in factory.
User entry	0 to 100 ppm
Factory setting	15 ppm

"CLG" submenu

Overview

The gas phase in pressurized tanks has a direct impact on the distance determination for time-of-flight sensors. This feature corrects the influences of the vapor phase based on its pressure, temperature and composition.

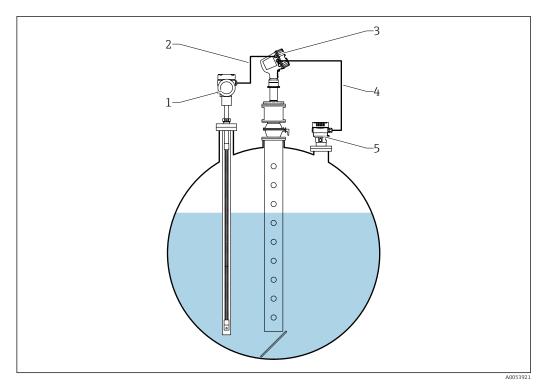

1 Prothermo temperature measurement device, equipped with thermowell or protective pipe

- 2 HART connection
- 3 Radar level gauge Micropilot NMR84
- 4 HART connection
- 5 Digital pressure transmitter

The gas phase correction for liquefied gases (CLG) is configured in the **CLG** submenu ($\rightarrow \square$ 210) submenu.

Navigation path: Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CLG

Description of parameters

Configuration of the gas phase correction for liquefied gases (CLG) $\rightarrow \square 76$

Navigation

 $\fbox{Setup} \rightarrow \mathsf{Advanced \ setup} \rightarrow \mathsf{Application} \rightarrow \mathsf{Tank \ calculation} \\ \rightarrow \mathsf{CLG}$

CLG mode			£
Navigation	\blacksquare = Setup → Advanced s	setup \rightarrow Application \rightarrow Tank calculation \rightarrow CLG \rightarrow CLG mode	
Description	Activates or deactivates CL	G for a mixture of up to four gases.	
Selection	 Off Pure gas * Mix of two gases * Mix of three gases * Mix of four gases * 		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

CLG to tank level		8	
Navigation	🗐 😑 Setup → Advan	ced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CLG \rightarrow CLG to level	
Description		Activates or deactivates the tank level correction by CLG. Additional information: SIL- or WHG-Mode sets this parameter to "No".	
Selection	NoYes		
Factory setting	No		
Additional information	Read access	Operator	
	Write access	Maintenance	

Visibility depends on order options or device settings

Gas 1 to 4			æ
Navigation		\rightarrow Application \rightarrow Tank calculation \rightarrow CLG \rightarrow Gas 1 to 4	
Selection	 Chloroethylene C2H3Cl Ethylene C2H4 Ethane C2H6 Propadiene C3H4 Propylene C3H6 Propane C3H8 Isobutane C4H10 Butane C4H10 Butylene C4H8 Isobutylene C4H8 Pentane C5H12 Methane CH4 Hydrogen H2 Nitrogen N2 Ammonia NH3 Air Custom 		
Factory setting	Air		
Additional information	Read access	Operator	
	Write access	Maintenance	

Gas 1 to 4 refractive index		ති
Navigation	Image: Boost Setup → Advanced setup -	\rightarrow Application \rightarrow Tank calculation \rightarrow CLG \rightarrow Gas 1 to 4 RI
Description	Gas refractive index at 0°C and 1bar with up to 6 decimal places.	
User interface	1.0 to 2.0	
Factory setting	1.000288	
Additional information	Read access	Operator
	Write access	Service

Gas 1 to 4 ratio	ß
Navigation	□ Setup → Advanced setup → Application → Tank calculation → CLG → Gas 1 to 4 ratio
Description	Defines the ratio of this gas in the mixture. Given as unitless integer value.
User entry	1 to 100

Factory setting 1 Additional information Read access Operator Write access Maintenance CLG correction value Verte access

Navigation	$\textcircled{B} \square \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Tank calculation} \rightarrow \text{CLG} \rightarrow \text{CLG correction}$		
Description	Shows the CLG correction value.		
User interface	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	-	

C	corrected level	


Navigation	$\textcircled{B} \boxminus Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow CLG \rightarrow CLG corr. level$		
Description	Shows the level with CLG correction only.		
User interface	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	-	

"HTMS" submenu

Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

HTMS parameters

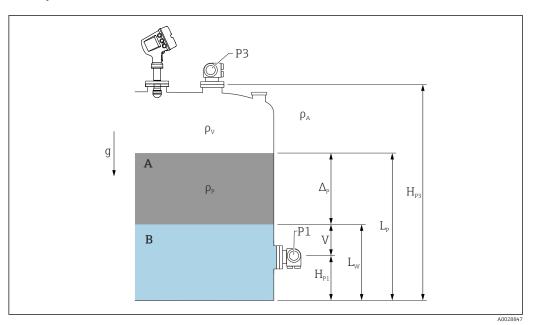

☑ 58 HTMS parameters

- A Product
- B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 (bottom)
H _{P1} (Position of P1 transmitter)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P1 position
P3 (Top pressure)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 (top)
H _{P3} (Position of P3 transmitter)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Pressure \rightarrow P3 position
ρ_P (Density of the product $^{1)})$	 Measured value: Setup → Advanced setup → Calculation → HTMS → Density value User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density
ρ_V (Vapor density)	Expert \rightarrow Application \rightarrow Tank configuration \rightarrow Density \rightarrow Vapor density
ρ_A (Ambient air temperature)	Setup \rightarrow Advanced setup \rightarrow Tank configuration \rightarrow Density \rightarrow Air density
g (Local gravity)	Expert \rightarrow Application \rightarrow Tank Calculation \rightarrow Local gravity
L _p (Level of the product)	Operation \rightarrow Tank level
L _W (Bottom water level)	Operation \rightarrow Water level
$V = L_W - H_{P1}$	
$\Delta_{\rm P} = L_{\rm P} - L_{\rm W} = L_{\rm P} - \rm V - H_{\rm P1}$	

1) Depending on the situation this parameter is measured or a user-defined value is used.

HTMS modes

Two HTMS modes can be selected in the **HTMS mode** parameter ($\rightarrow \boxminus 215$). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.



The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ ≌ 215)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	• P ₁ • L _P	• g • H _{P1} • L _W (optional)	ρ _Ρ
HTMS P1+P3	 P₁ P₃ L_P 	• ρ_V • ρ_A • g • H_{P1} • H_{P3} • L_W (optional)	ρ _P (more precise calculation for pressurized tanks)

Minimum level

The density of the product can only be calculated if the product has a minimum thickness :

```
\Delta_{\rm P} \geq \Delta_{\rm P, min}
```

This is equivalent to the following condition for the product level:

$$L_P - V \ge \Delta_{P,\min} + H_{P1} = L_{\min}$$


 L_{min} is defined in the **Minimum level** parameter ($\rightarrow \square 216$). As can be seen from the formula it always must be bigger than H_{P1} .

If L_P - V falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter) will be used.

Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level** $(\rightarrow \boxdot 216)$), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

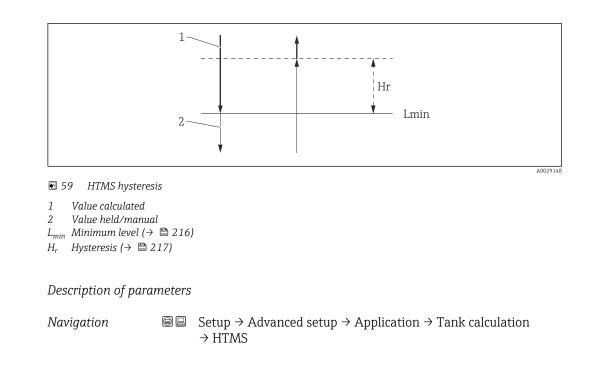

HTMS mode		ß
Navigation		p → Application → Tank calculation → HTMS → HTMS mode
Description	Defines the HTMS mode. Depending on the mode one or two pressure transmitters are used.	
Selection	HTMS P1HTMS P1+P3	
Factory setting	HTMS P1	
Additional information	Read access	Operator
	Write access	Maintenance
	Meaning of the options • HTMS P1 Only a bottom pressure tran • HTMS P1+P3 A bottom (P1) and top (P3) for pressurized tanks.	smitter (P1) is used. pressure transmitter are used. This option should be selected

Manual density		£
Navigation	Image: Setup → Advanced setup → Application → Tank calculation → HTMS → Manual density	
Description	Defines the manual density.	

 $\label{eq:Userentry} \textbf{User entry} \qquad 0 \text{ to } 3\,000 \text{ kg/m}^3$

Factory setting 800 kg/m³

Additional information	Read access	Maintenance
	Write access	Maintenance

Density value			
Navigation	$\textcircled{B} \square \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Tank calculation} \rightarrow \text{HTMS} \rightarrow \text{Density value}$		
Description	Shows the calculated product density.		
Additional information	Read access	Operator	
	Write access	-	

Minimum level		۵
Navigation	Image: Barbon Setup → Advanced setup	\rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Min. level
Description	Defines the minimum product level for a HTMS calculation.	
	If Lp - V falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.	
User entry	0 to 20 000 mm	
Factory setting	7 000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Minimum pressure		
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Minimum pressure	1
Description	Defines the minimum pressure for a HTMS calculation. If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.	
User entry	0 to 100 bar	
Factory setting	0.1 bar	

Additional information	Read access	Operator
	Write access	Maintenance

Safety distance			
Navigation	$ \blacksquare \blacksquare Setup \rightarrow Advanced setup distance $	\rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Safety	
Description	Defines the minimum level which must be present above the bottom pressure sensor before its signal is used for the calculation.		
User entry	0 to 10000 mm		
Factory setting	2 000 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Hysteresis		8
Navigation	Image: Border Border Setup → Advanced setup →	\rightarrow Application \rightarrow Tank calculation \rightarrow HTMS \rightarrow Hysteresis
Description	Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is near the switch-over point.	
User entry	0 to 2 000 mm	
Factory setting	50 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Water density		
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Water density	
Description	Density of the water in the tank.	
User entry	Signed floating-point number	
Factory setting	1000 kg/m ³	

Additional information

Read access	Operator
Write access	Maintenance

"Dip-table" submenu

Dip table

The dip table is used to correct the level readings using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions such as a mechanical offset and the tank or stilling well design. Depending on national regulations, national inspectors will dip the tank at one to three levels during a calibration run and check the level readings.

Only one value pair must be entered into the dip table to correct the measurement offset. If a second value pair is entered into the dip table, the device accepts the corrected measured values identically for both value pairs. All other measured values are determined by linear extrapolation.

If more than two value pairs are entered, the system carries out a linear interpolation between adjacent value pairs. Outside these value pairs, extrapolation is also linear.



Before a table is entered, delete any existing table values by selecting **Table settings** ($\rightarrow \cong 222$) = "Clear table" option.

- The offset should **not** be determined and entered within the close range of the antenna or immediately in the range of the tank bottom, because within these ranges interferences of the radar signal may occur.

• After changing the **Empty** parameter ($\rightarrow \cong 129$), the **Table mode** parameter ($\rightarrow \cong 222$) is automatically set to **Disable**.

- If Empty (→
 [™] 129) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
- The dip table values are not affected by a change of the **Empty** parameter (→
 ^{(→}) 129).

Semiautomatic creation of a dip table

In order not to mix up measurement values corrected by the dip table with uncorrected measurement values, it is recommended to enter new data pairs semiautomatically into the table. This means: the uncorrected level is measured by the device and the user only enters the corresponding dip value.

The first dip value should be entered immediately after the basic calibration. Further dip points should be entered only after a level change of at least 2 m (6.6 ft) and a deviation between the uncorrected measurement value and the hand dip value of at least 4 mm (0.16 in).

If this procedure can not be followed, then **no** value pair should be entered into the dip table after basic calibration. Measurement data and hand dip values should be collected over the full measurement range and be evaluated with regard to a good linear fit. Only then characteristic value pairs should be entered into the dip table using the "manual mode" (see below).

Manual creation of a dip table

Before creating a dip table manually, measured levels and dip values should be collected over the full measurement range and be evaluated with regard to a linear fit. Only then characteristic value pairs from this fit should be entered into the dip table using the manual mode. In the manual mode both, the measured level (without correction) and the corresponding dip value are entered by the user.



If further linearisation is needed, further hand dip values should be entered using only the "semi-automatic" mode (see above).

The table editor on the local display

1. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow Dip-table \rightarrow Table mode and select the **Disable** option.

2. Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Calculation \rightarrow Dip-table \rightarrow Edit table

╘╼			
	للر	//Edit table	13953-1
	N	Dip Table De.	Dip Table Di.
	1	10.0	10.1
	2	5.0	4.2
	3	1.0	1.0
		↑ J	E

■ 60 The dip table editor on the local display

- N Number of the line
- De. Device level
- Di. Dip level

╘╼

╘╺

3. Use the " \uparrow " and " \downarrow " keys to move to the line you want to edit.

۲	//Edit table		13964-1
Ν	Dip Table De	. I	Dip Table Di.
3	1.0)	1.0
4	0.0)	0.0
5	0.0)	0.0
			E

4. Press "E" to open the line.

5. Use " \rightarrow " to select the cell you want to edit.

¥	//Edit table	;	13964-
Ν	Dip Table D	e. D	ip Table Di
3	1.	.0	1.0
4	0	.0	0.0
5	0	.0	0.0
	†	\rightarrow	E

6. Press "E" to open the cell.

7. Enter the required number $\rightarrow \triangleq 47$.

- 8. Continue until all required table points have been entered.
- 9. Press "-" and "+" simultaneously to quit the table editor.
- 10. Navigate to Setup → Advanced setup → Application → Tank calculation → Dip-table
 → Table settings and select the **Sort table** option.
 - ← The table points are arranged in an ascending order.
- **11.** Navigate to Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank calculation \rightarrow Dip-table \rightarrow Table modeand select the **Enable** option.
 - └ The new dip table is active.

A0045874


The table editor in FieldCare

In the FieldCare table editor the dip table can only be entered manually. Even if the semiautomatic method has been selected in the Table settings parameter (→ ≅ 222), the complete table will be written from the editor to the device in the manual mode.

Tank level (139): 2 2 Distance (120): Q	20399,6200 mm -98,6500 mm	Liquid temper	ature: () C	-273,15 °C 0,0000 mm	Observed density: 🔇 P1 (bottom): 🛛 🞜	800,0000 -1,00
		$\sqrt{-1}$				
(a)	🖂 🕺 🖂	🔄 🕑 🌛	🎋 🕕 🕼			
Menu / Variable		able Settings:	Manual			

1 Table icon; calls up the table editor.

Open the table editor by clicking on the table icon. → The graphical table editor appears:

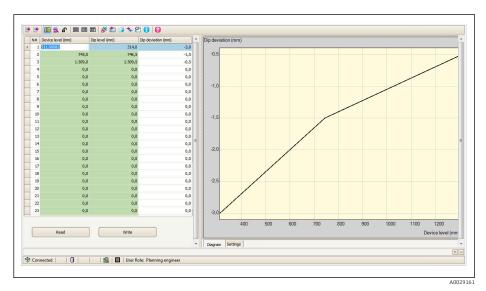

- 2. If the device already contains a dip table: Click "Read" to load it into the editor.
- **3.** Enter or change table values in the table on the right. A graphical representation of the table is shown in the diagram on the right.
- 4. Click "Write" to write the table back to the device.

Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} \mbox{ Setup } \rightarrow \mbox{ Advanced setup } \rightarrow \mbox{ Application } \rightarrow \mbox{ Tank calculation } \\ \mbox{ } \rightarrow \mbox{ Dip-table } \end{array}$

Table settings		Ê
Navigation	Image: Setup → Advanced settings	l setup → Application → Tank calculation → Dip-table → Table
Description	Defines the dip-table ope	eration to be performed.
Selection	 Manual Semiautomatic Clear table Sort table 	
Factory setting	Manual	
Additional information	Read access	Operator
	Write access	Maintenance
	Meaning of the options Manual 	

Table mode		
Navigation	Image: Setup → Advanced setup → Application → Tank calculation → Dip-table → Table mode	
Description	Enables or disables the dip-table.	
Selection	DisableEnable	
Factory setting	Disable	

Additional information

Read access	Operator
Write access	Maintenance

"Alarm" submenu

Navigation 🛛

 $\blacksquare \blacksquare \quad \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Alarm}$

"Alarm" submenu

Navigation

 $\label{eq:setup} \fbox{ Setup} \rightarrow \texttt{Advanced setup} \rightarrow \texttt{Application} \rightarrow \texttt{Alarm} \rightarrow \texttt{Alarm}$

► Alarm		
	Alarm mode	→ 🖺 224
	Error value	→ 🖺 225
	Alarm value source	→ 🖺 226
	Alarm value	→ 🖺 227
	HH alarm value	→ 🖺 227
	H alarm value	→ 🖺 227
	L alarm value	→ 🖺 228
	LL alarm value	→ 🖺 228
	HH alarm	→ 🖺 228
	H alarm	→ 🖺 229
	HH+H alarm	→ 🖺 229
	L alarm	→ 🖺 229
	LL alarm	→ 🖺 229
	LL+L alarm	→ 🖺 230
	Any error	→ 🖺 230
	Clear alarm	→ 🖺 230

Alarm hysteresis	→ 🗎 231
Damping factor	→ 🗎 231

Alarm mode			
Navigation	Image: Betup → Advance	red setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow Alarm mode	
Description	Defines the alarm mode of the selected alarm.		
Selection	 Off On Latching		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of the options

Off


No alarms are generated.

• On

An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).

Latching

All alarms remain active until the user selects **Clear alarm** ($\Rightarrow \triangleq 230$) = **Yes** or the power is switched off and on.

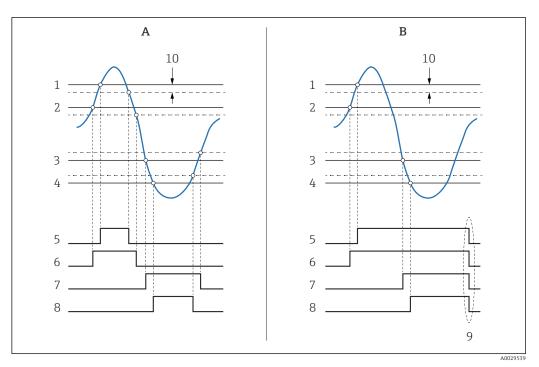

61 Principle of the limit evaluation

- Alarm mode ($\rightarrow \square 224$) = On Α
- В Alarm mode ($\rightarrow \implies 224$) = Latching
- 1 HH alarm value ($\rightarrow \square 227$)
- 2 H alarm value ($\rightarrow \square 227$)
- 3 L alarm value ($\rightarrow \square 228$)
- LL alarm value ($\rightarrow \square 228$) 4 5
- HH alarm (→ 🖺 228)
- $Halarm (\rightarrow \textcircled{229})$ L alarm (\otherwise (a) (6 7
- 8 LL alarm ($\rightarrow \square 229$)
- "Clear alarm (→ 🖺 230)" = "Yes" or power off-on 9
- 10 Hysteresis ($\rightarrow \square 231$)

Error	value
-------	-------

Navigation	Setup → Advanced setup → Application → Alarm → Alarm → Error value		
Prerequisite	Alarm mode ($\Rightarrow \cong 224$) \neq Off		
Description	Defines the alarm to be issued if the input value is invalid.		
Selection	 No alarm HH+H alarm H alarm L alarm LL+L alarm All alarms 		
Factory setting	All alarms		
Additional information	Read access	Operator	
	Write access	Maintenance	

Â

Alarm value source		
Navigation	Image: Setup → Advanced setup → Application → Alarm → Alarm → Alarm source	
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off	
_		
Description	Determines the process variable to be monitored.	
Selection	 Tank level 	
	 Liquid temperature 	
	 Vapor temperature 	
	 Water level 	
	 P1 (bottom) 	
	 P2 (middle) 	
	■ P3 (top)	
	 Observed density value 	
	 Observed density value Volume 	
	 Flow velocity 	
	 Volume flow 	
	 Vapor density 	
	 Middle density 	
	 Upper density 	
	 Correction 	
	Tank level %	
	■ GP 14 value	
	Measured level	
	P3 position	
	 Tank reference height 	
	 Local gravity 	
	 P1 position 	
	 Manual density 	
	5	
	 Tank ullage 	
	 Average profile density 	
	 Lower density 	
	 Upper interface level 	
	 Lower interface level 	
	 Bottom level 	
	 Displacer position 	
	HART device 115 PV	
	 HART device 115 SV 	
	 HART device 115 TV 	
	 HART device 115 QV 	
	 HART device 115 PV mA 	
	 HART device 115 PV % 	
	 Element temperature 124 	
	 AIO B1-3 value 	
	 AIO C1-3 value 	
	 AIP B4-8 value 	
	 AIP C4-8 value 	
	 None 	
.		
Factory setting	None	

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

Alarm value

Navigation		
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off	
Description	Shows the current value of the process variable being monitored.	
User interface	Signed floating-point number	
Factory setting	0 None	
Additional information	Read access Operator	
	Write access -	

HH alarm value			Ê
Navigation	Image: Setup → Advanced setup →	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow HH alarm value	
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off		
Description	Defines the high-high(HH) limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access Operator		
	Write access	Maintenance	

H alarm value			
Navigation	Image: Barbon Setup → Advanced setup →	Application \rightarrow Alarm \rightarrow Alarm \rightarrow H alarm value	
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off		
Description	Defines the high(H) limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	

L alarm value			
Navigation	■ \square Setup → Advanced setup →	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow L alarm value	
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off		
Description	Defines the low limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	

LL alarm value			
Navigation	Image: Barbon Barbon Setup → Advanced setup -	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow LL alarm value	
Prerequisite	Alarm mode (→ 🗎 224) ≠ Off		
Description	Defines the low-low(LL) limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access Operator		
	Write access	Maintenance	

HH alarm		
Navigation	Image: Below Boundary Setup → Advanced setup -	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow HH alarm
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off	
Description	Shows whether an HH alarm is currently active.	
Additional information	Read access Operator	
	Write access	-

Halarm		
Navigation		\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow H alarm
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off	
Description	Shows whether an H alarm is currently active.	
Additional information	Read access Operator	
	Write access	-

HH+H alarm			
Navigation	□ Setup → Advanced setup → Application → Alarm → Alarm → HH+H alarm		
Prerequisite	Alarm mode (→ 🗎 224) ≠ Off	Alarm mode ($\Rightarrow \cong 224$) \neq Off	
Description	Shows whether an HH or H alarm is currently active.		
Additional information	Read access	Operator	
	Write access	-	

L alarm			
Navigation	■ \square Setup \rightarrow Advanced setup	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow L alarm	
Prerequisite	Alarm mode ($\Rightarrow \triangleq 224$) \neq Off	Alarm mode ($\rightarrow \equiv 224$) $\neq $ Off	
Description	Shows whether an L alarm is currently active.		
Additional information	Read access Operator		
	Write access	-	

LL alarm	
Navigation	$\textcircled{B} \square \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Alarm} \rightarrow \text{Alarm} \rightarrow \text{LL alarm}$
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off
Description	Shows whether an LL alarm is currently active.

Additional information	Read access	Operator
	Write access	-

LL+L alarmNavigationSetup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow LL+L alarmPrerequisiteAlarm mode ($\rightarrow \boxdot 224$) \neq OffDescriptionShows whether an LL or L alarm is currently active.Additional informationRead access
Write access

Any error		
Navigation	Image: Barbon Setup → Advanced setup -	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow Any error
Prerequisite	Alarm mode ($\rightarrow \cong 224$) \neq Off	
Description	Show whether any alarm is currently active.	
User interface	 Unknown Inactive Active Error 	
Factory setting	Unknown	
Additional information	Read access	Operator
	Write access	-

Clear alarm	ඕ
Navigation	$ \blacksquare \Box \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Alarm} \rightarrow \text{Alarm} \rightarrow \text{Clear alarm} $
Prerequisite	Alarm mode ($\rightarrow \cong 224$) = Latching
Description	Deletes an alarm which is still active although the alarm condition is no longer present.
Selection	NoYes
Factory setting	No

Additional information	Read access	Operator	
	Write access	Maintenance	
		·	
Alarm hysteresis			
Navigation	$\textcircled{\begin{tabular}{lllllllllllllllllllllllllllllllllll$		
Prerequisite	Alarm mode ($\rightarrow \square 224$) $\neq Off$		
Description	Defines the hysteresis for the limit values. The hystersis prevents constant changes of the alarm state if the level is near one of the limit values.		
User entry	Signed floating-point number		
Factory setting	0.001		
Additional information	Read access	Maintenance	

Damping factor			A
Navigation	Image: Boost of the setup	\rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow Damping factor	
Description	Defines the damping constant (in seconds).		
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

Maintenance

Write access

"Safety settings" submenu

Navigation

Image: Setup → Advanced setup → Safety settings

Output echo lost			
Navigation	Image: Bearing → Advan	ced setup \rightarrow Safety settings \rightarrow Output echo lost	
Description	Defines the output behavior in case of a lost echo.		
Additional information	Read access	Operator	
	Write access	Service	
	Meaning of the optio	ons	

- Last valid value The last value before the occurence of the echo is kept.
- Alarm
 - The device generates an alarm.

Delay time echo lost			A
Navigation	Image: Bearing of the setup of the setu	→ Safety settings → Delay echo lost	
Description	Time between the echo loss and	Time between the echo loss and the reaction defined for the output.	
User entry	0 to 99999.9 s		
Factory setting	60.0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

Safety distance	۵
Navigation	Image: Boundary Setup → Advanced setup → Safety settings → Safety distance
Description	Defines the safety distance (measured from the reference point). A warning is issued if the level rises into the safety distance.
User entry	Signed floating-point number
Factory setting	0 mm

Additional information

Read access	Operator
Write access	Maintenance

"Sensor config" submenu

Navigation

Image: Setup → Advanced setup → Sensor config

Tube diameter			Â
Navigation	Image: Betup → Advanced setup	p → Sensor config → Tube diameter	
Description	Enter diameter of stilling well		
User entry	Positive floating-point numbe	r	
Factory setting	150 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Navigation B Setup \rightarrow Advanced setup \rightarrow Sensor config \rightarrow Information \rightarrow Signal quality

Description Shows the quality of the evaluated level signal.

"Information" submenu

Additional information	Read access	Operator
	Write access	-

Absolute echo amplitude	

Navigation	\blacksquare ■ Setup → Advanced setup → Sensor config → Information → Abs. echo ampl.	
Description	Shows the absolute amplitude of	the evaluated level signal.
Additional information	Read access	Operator
	Write access	-

Image: Betup → Advanced setup →	Sensor config \rightarrow Information \rightarrow Relat.echo ampl.
Shows the relative amplitude (i.e. the distance to the evaluation curve) of the evaluated level signal.	
Read access	Operator
Write access	-
	Shows the relative amplitude (i.e level signal.

Distance		
Navigation	Image: Betup → Advanced setup →	Sensor config \rightarrow Information \rightarrow Distance
Description	Distance from lower edge of device flange to product surface.	
Additional information	Read access	Operator
	Write access	-

"Echo tracking" submenu

Navigation \blacksquare Setup \rightarrow Advanced setup \rightarrow Sensor config \rightarrow Echo tracking

Evaluation mode			£
Navigation	Image: Bearing and Setup → Advance	red setup \rightarrow Sensor config \rightarrow Echo tracking \rightarrow Evaluation mode	
Description	Defines the evaluation	mode for the echo tracking.	
Selection	Short time historyHistory off		
Factory setting	Short time history		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of the options

Short time history

In addition to the static algorithms a dynamic echo trace is continuously generated and evaluated.

• **History off** The envelope curve is evaluated only statically.

History reset			Ê
Navigation	Image: Barbon Setup → Advanced setup -	→ Sensor config → Echo tracking → History reset	
Description	Resets the history of the echo tra	acking.	
Selection	Reset doneRestart echo trackingDelete history		
Factory setting	Reset done		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of options:

- Reset done
 - Does not initiate an action but is only a display option. It is displayed as soon as the reset operation has been accomplished.
- Delete history The echo tracking and tank trace are reset.

"Display" submenu


This menu is only visible if the device has a local display.


Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow Display


Language		
Navigation	Image: Barbon Setup → Advanced setup →	→ Display → Language
Prerequisite	The device has a local display.	
Description	Set display language.	
Selection	 English Deutsch русский язык (Russian) 日本語 (Japanese) Español 中文 (Chinese) 	
Factory setting	English	
Additional information	Read access	Operator
	Write access	Operator

Format display			
Navigation	Image: Setup → Advanced setup → Display → Format display		
Prerequisite	The device has a local display.		
Description	Select how measured values are shown on the display.		
Selection	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 		
Factory setting	1 value, max. size		
Additional information	4841.000 □1√ mm		


🖻 62 "Format display" = "1 value, max. size"

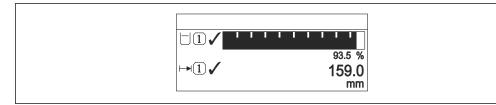

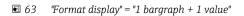


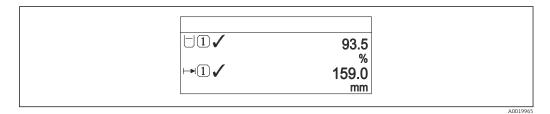

■ 64 "Format display" = "2 values"

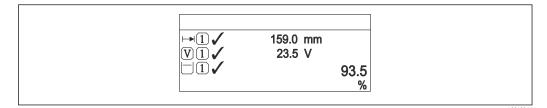

65 "Format display" = "1 value large + 2 values"

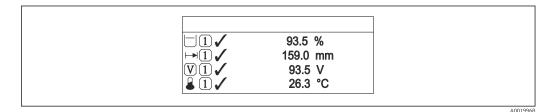

66 "Format display" = "4 values"

Read access	Operator
Write access	Operator

- The Value 1 to 4 display (→
 ^(⇒) 238) parameters specify which measured values are shown on the display and in which order.

Value 1 to 4 display		
Navigation	Image: Setup → Advanced setup → Display → Value 1 display	

Prerequisite

The device has a local display.

Description

Select the measured value that is shown on the local display.

Selection

- None ¹⁰⁾
- Tank level
- Measured level
- Level linearized
- Tank level %
- Water level ¹⁰⁾
- Liquid temperature ¹⁰
- Vapor temperature ¹⁰⁾
- Air temperature ¹⁰⁾
- Tank ullage
- Tank ullage %
- Observed density value ¹⁰⁾
- P1 (bottom) ¹⁰⁾
- P2 (middle) ¹⁰⁾
- P3 (top) ¹⁰⁾
- GP 1 value ¹⁰⁾
- GP 2 value ¹⁰⁾
- GP 3 value ¹⁰⁾
- GP 4 value ¹⁰⁾
- Gauge command ¹⁰⁾
- Gauge status ¹⁰⁾
- AIO B1-3 value ¹⁰⁾
- AIO B1-3 value mA¹⁰⁾
- AIO B1-3 value % ¹⁰⁾
- AIO C1-3 value ¹⁰⁾
- AIO C1-3 value mA¹⁰⁾
- AIO C1-3 value %¹⁰⁾
- AIP B4-8 value ¹⁰⁾
- AIP B4-8 value mA¹⁰⁾
- AIP B4-8 value % ¹⁰⁾
- AIP C4-8 value ¹⁰⁾
- AIP C4-8 value mA¹⁰⁾
- AIP C4-8 value % ¹⁰⁾

Factory setting

Depending on device version

Additional information	Read access	Operator
	Write access	Maintenance

Decimal places 1 to 4		æ
Navigation	■ ■ Setup → Advanced setup → Display → Decimal places 1	
Prerequisite	The device has a local display.	
Description	This selection does not affect the measurement and calculation accuracy of the device.	

¹⁰⁾ not available for the Value 1 display parameter

Selection

X
X.X
X.XX
X.XXX
X.XXX

X.X

Factory setting

Additional information

The setting does not affect the measuring or computational accuracy of the device.

Read access	Operator
Write access	Maintenance

Separator		Â
Navigation	Image: Bearing and the setup ■ Setup → Advanced setup	\rightarrow Display \rightarrow Separator
Prerequisite	The device has a local display.	
Description	Select decimal separator for disp	olaying numerical values.
Selection	•. •,	
Factory setting		
Additional information	Read access	Operator
	Write access	Maintenance

Number format		[£
Navigation	Image: Setup → Advanced	setup \rightarrow Display \rightarrow Number format	
Prerequisite	The device has a local disp	olay.	
Description	Choose number format for the display.		
Selection	Decimalft-in-1/16"		
Factory setting	Decimal		
Additional information	Read access	Operator	
	Write access	Maintenance	

The **ft-in-1/16**" option is only valid for distance values.

Header				A
Navigation	Image: Barbon Setup → Advance	Image: Setup → Advanced setup → Display → Header		
Prerequisite	The device has a local di	isplay.		
Description	Select header contents o	on local disp	olay.	
Selection	Device tagFree text			
Factory setting	Device tag	Device tag		
Additional information	Read access	0	perator	
	Write access	N	flaintenance	
	 Meaning of the options Device tag The header contents is defined in the Device tag parameter (→ ■ 128). Free text The header contents is defined in the Header text parameter (→ ■ 241). 			

Header text				
Navigation	Image: Setup → Advanced =	setup → I	Display → Header text	
Prerequisite	Header (→ 🗎 241) = Fre	Header (→ 🗎 241) = Free text		
Description	Enter display header text.			
User entry	Character string comprising numbers, letters and special characters (11)			
Factory setting	TG-Platform			
Additional information	Read access	C	Pperator	
	Write access	Ν	Naintenance	

Display interval	
Navigation	$ \blacksquare \square Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Display interval $
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Factory setting	5 s

Additional information

This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Read access	Operator
Write access	Operator

Display damping		8	
Navigation	Image: Bearing → Advanced setup -	\rightarrow Display \rightarrow Display damping	
Prerequisite	The device has a local display.		
Description	Set display reaction time to fluctuations in the measured value.		
User entry	0.0 to 999.9 s		
Factory setting	0.0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

Backlight		
Navigation	■ \square Setup → Advanced setup –	\rightarrow Display \rightarrow Backlight
Prerequisite	The device has a local display.	
Description	Switch the local display backlight	on and off.
Selection	DisableEnable	
Factory setting	Enable	
Additional information	Read access	Operator
	Write access	Operator

Contrast display	
Navigation	$ \blacksquare \Box Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Contrast display $
Prerequisite	The device has a local display.
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

User entry	20 to 80 %	
Factory setting	30 %	
Additional information	Read access	Operator
	Write access	Operator

"System units" submenu

Navigation

Write access

 \blacksquare □ Setup → Advanced setup → System units

Units preset				
Navigation	Image: Barbon Setup → Advanced	l setup →	System units → Units preset	
Description	Defines a set of units for	length, p	pressure and temperature.	
Selection	 mm, bar, °C m, bar, °C mm, PSI, °C ft, PSI, °F ft-in-16, PSI, °F ft-in-8, PSI, °F Customer value 			
Factory setting	mm, bar, °C			
Additional information	Read access		Operator	
	Write access		Maintenance	
	 Temperature unit (→ [
Distance unit				
Navigation	Image: Bearing of the second seco	l setup →	System units → Distance unit	
Description	Select distance unit.			
Selection	SI units		units	
	■ m	■ f		
	■ mm	■ i)		
	• cm		t-in-16 t-in-8	
Factory setting	mm			
Additional information	Read access		Operator	
	neau alless		Operator	

Maintenance (if Units preset ($\rightarrow \square$ 128) = Customer value)

Navigation	Image: Barbon Barbo	anced setup \rightarrow System units \rightarrow	Pressure unit	
Selection	SI units • bar • Pa • kPa • MPa • mbar a	US units psi	Other units • inH2O • inH2O (68°F) • ftH2O (68°F) • mmH2O • mmHg	
Factory setting	bar			
Additional information	Read access	Operator		
	Write access	Maintenance (if Un	its preset (→ 🗎 128) = Customer value)	
Temperature unit				
Temperature unit Navigation	Image: Barbon Setup → Adva	anced setup → System units →	Temperature unit	
	Image: Setup → Advance Select temperature		Temperature unit	
Navigation	_		Temperature unit	
Navigation Description	Select temperature s SI units • °C	unit. <i>US units</i> ● °F	Temperature unit	
Navigation Description Selection	Select temperature of <i>SI units</i> • °C • K	unit. <i>US units</i> ● °F	Temperature unit	

Density unit					
Navigation	Image: Boundary				
Description	Select density unit.				
Selection	SI units • g/cm ³ • g/ml • g/l • kg/l • kg/dm ³ • kg/m ³	US units lb/ft³ lb/gal (us) lb/in³ STon/yd³ 	Other units • °API • SGU		
Factory setting	kg/m³				

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→ 🗎 128) = Customer value)

"Date / time" submenu

Navigation 🛛 🗐 🛛

 $\blacksquare \blacksquare \quad \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Date / time}$

Date/time		
Navigation	■ \square Setup → Advanced setup -	\rightarrow Date / time \rightarrow Date/time
Description	Displays the device internal real	time clock.
Additional information	Read access	Operator
	Write access	-

Set date			Â
Navigation		red setup \rightarrow Date / time \rightarrow Set date	
Description	Controls the setting of	the real-time clock.	
Selection	 Please select Abort Start Confirm time 		
Factory setting	Please select		
Additional information	Read access	Operator	
	Write access	Maintenance	
	Meaning of the option Please select Prompts the user to a Abort Discards the entered Start Starts the setting of Confirm time Sets the real-time clo	select an action. date and time.	

Year			
Navigation		Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Year	
Prerequisite	Set d	ate (→ 🗎 247) = Start	

Description	Enter the current year.	
User entry	2016 to 2079	
Factory setting	2016	
Additional information	Read access	Operator
	Write access	Maintenance

Month			
Navigation		up → Date / time → Month	
Prerequisite	Set date (→ 🗎 247) = Start		
Description	Enter the current month.		
User entry	1 to 12		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Day			Â
Navigation		etup \rightarrow Date / time \rightarrow Day	
Prerequisite	Set date (→ 🗎 247) = Start		
Description	Enter the current day.		
User entry	1 to 31		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Hour			
Navigation		Setup \rightarrow Advanced setup \rightarrow Date / time \rightarrow Hour	
Prerequisite	Set date (→ 🗎 247) = Start		

Description	Enter the current hour.	
User entry	0 to 23	
Factory setting	0	
Additional information	Read access	Operator
	Write access	Maintenance

Minute		8
Navigation	□ Setup \rightarrow Advanced setup	\rightarrow Date / time \rightarrow Minute
Prerequisite	Set date (→ 🗎 247) = Start	
Description	Enter the current minute.	
User entry	0 to 59	
Factory setting	0	
Additional information	Read access	Operator
	Write access	Maintenance

"SIL confirmation" wizard

- The **SIL confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently **not** in the SIL- or WHG-locked state.
 - The **SIL confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

Navigation $\blacksquare \Box$ Setup \rightarrow Advanced setup \rightarrow SIL confirmation

"Deactivate SIL/WHG" wizard

- The **Deactivate SIL/WHG** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently in the SIL- or WHG-locked state.
 - The **Deactivate SIL/WHG** wizard is required to undo the locking of the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

Navigation

Setup → Advanced setup → Deactiv. SIL/WHG

"Administration" submenu

Navigation \square Setup \rightarrow Advanced setup \rightarrow Administration

Define access code		ه
Navigation	□ Setup \rightarrow Advar	aced setup \rightarrow Administration \rightarrow Def. access code
Description	Define release code for write access to parameters.	
User entry	0 to 9999	
Factory setting	0	
Additional information	Read access	Operator
	Write access	Maintenance
	are not write-pro modified. The us	ting is not changed or 0 is defined as the access code, the parameters otected and the configuration data of the device can then always be er is logged on in the <i>Maintenance</i> role. tion affects all parameters marked with the 🗃 symbol in this

Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter $(\rightarrow \square 134)$.

Device reset		
Navigation		
Description	Reset the device configuration - either entirely or in part - to a defined state	
Selection	CancelTo factory defaultsRestart device	
Factory setting	Cancel	
Additional information	 Meaning of the options Cancel No action To factory defaults All parameters are reset to the order-code specific factory setting. Restart device The restart resets every parameter which is stored in the volatile memory (RAM) to factory setting (e.g. measured value data). The device configuration remains unchard 	

Read access	Operator
Write access	Maintenance

15.4 "Diagnostics" menu

Navigation

■ □ Diagnostics

Actual diagnostics Navigation 8 2 Diagnostics \rightarrow Actual diagnos. Description Displays the currently active diagnostic message. If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed. Additional information Read access Operator Write access The display consists of: Symbol for event behavior Code for diagnostic behavior Operating time of occurrence Event text If several messages are active at the same time, the messages with the highest priority is displayed. Information on what is causing the message, and remedy measures, can be viewed via 1 the ④ symbol on the display.

Timestamp		
Navigation	Image Diagnostics → Timestamp	
Description	Displays the timestamp for the currently active diagnostic message.	
Additional information	Read access	Operator
	Write access	-

Previous diagnostics		
Navigation	Image: Barbon Diagnostics → Prev.diagnostics	stics
Description	Displays the diagnostic message for the last diagnostic event that has ended.	
Additional information	Read access Operator	
	Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

If several messages are active at the same time, the messages with the highest priority is displayed.

Information on what is causing the message, and remedy measures, can be viewed via the (j) symbol on the display.

Timestamp		
Navigation	Image: Diagnostics → Timestamp	
Description	Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.	
Additional information	Read access Operator	
	Write access	-

Operating time from restart			
Navigation	Image: Bar Diagnostics → Time fr. restart		
Description	Indicates how long the device has been in operation since the last time the device was restarted.		
Additional information	Read access	Operator	

Navigation	□ □ Diagnostics → Operating time	
Description	Indicates how long the device has been in operation.	
Additional information	Read access Operator	
	Write access	-

Operating time

Date/time		
Navigation	B □ Diagnostics → Date/time	
Description	Displays the device internal real time clock.	
Additional information	Read access	Operator
	Write access	-

"Diagnostic list" submenu 15.4.1

Navigation □ □ Diagnostics \rightarrow Diagnostic list

Diagnostics 1 to 5	
Navigation	B □ Diagnostics → Diagnostic list → Diagnostics 1 to 5
Description	Displays the currently active diagnostic message with the highest priority.
Additional information	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text
Timestamp 1 to 5	

Navigation B □ Diagnostics → Diagnostic list → Timestamp 1 to 5

Description

```
Timestamp of the diagnostic message.
```

15.4.2 "Device information" submenu

Navigation \square Diagnostics \rightarrow Device info

Device tag				
Navigation	B □ Diagnostics → Devia	■ Diagnostics \rightarrow Device info \rightarrow Device tag		
Description	Shows the device tag.	Shows the device tag.		
User interface	Character string comprising numbers, letters and special characters			
Factory setting	- none -			
Additional information	Read access		Operator	
	Write access		-	

Serial number		
Navigation	■ Diagnostics \rightarrow Device info	\rightarrow Serial number
Description	The serial number is a unique alphanumerical code identifying the device. It is printed on the nameplate. In combination with the Operations app it allows to access all device related documentation.	
Additional information Read access Operator		Operator
	Write access	-

Firmware version			
Navigation	■ Diagnostics \rightarrow Device info \rightarrow Firmware version		
Description	Displays the device firmware version installed.		
Additional information	Read access	Operator	
	Write access	-	

Operating	menu
-----------	------

Firmware CRC		
Navigation	Image: Big Diagnostics → Device info -	→ Firmware CRC
Description	Result of the cyclic redundancy check of the firmware.	
Additional information	Read access Operator	
	Write access	-

Weight and measures configuration CRC

Navigation		
Description	Result of the cyclic redundancy check of the weights and measure relevant parameters.	
Additional information	Read access Operator	
	Write access	-

Device name

Navigation □ □ Diagnostics → Device info → Device name

Description Use this function to display the device name. It can also be found on the nameplate.

Additional information	Read access	Operator
	Write access	-

Order code		Â	
Navigation	Image Diagnostics → Device info	\rightarrow Order code	
Description	Shows the device order code.		
Additional information	Read access Operator]
	Write access	Service	

Extended order code 1 to 3			
Navigation	\blacksquare □ Diagnostics → Device info	\rightarrow Ext. order cd. 1	
Description	Display the three parts of the extended order code.		
User interface	Character string comprising numbers, letters and special characters		
Additional information	Read access Operator		
	Write access	Service	

The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

15.4.3 "Simulation" submenu

Read access	Maintenance

Navigation		Dia
------------	--	-----

8 8	Diagnostics → Simulation	
-----	--------------------------	--

Device alarm simulation		Â
Navigation	Image: Diagnostics → Simulation	n → Dev. alarm sim.
Description	Switch the device alarm on and off.	
Selection	OffOn	
Factory setting	Off	
Additional information	Read access	Operator
	Write access	Maintenance

Diagnostic event simulation		Ê	
Navigation			
Description	Select a diagnostic event to simulate this event.		
Selection	The diagnostic events of the device		
Factory setting	Off		
Additional information	Read access Operator		
	Write access	Maintenance	

To terminate the simulation, select **Off**.

Simulation distance on		Ê
Navigation		
Description	Switches the distance simulation on or off.	
Selection	OffOn	

Factory setting

Off

Additional information

 Read access
 Operator

 Write access
 Maintenance

Simulation distance		ß	
Navigation	Image: Diagnostics → Simulation	\rightarrow Sim distance	
Prerequisite	Simulation distance on (\Rightarrow 🗎 2	Simulation distance on ($\rightarrow \cong 260$) = On	
Description	Defines the distance value to be simulated.		
User entry	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access Operator		
	Write access	Maintenance	

Current output N simulation	on		Ê
Navigation	Image Diagnostics → Simulation	→ Curr.outp N sim.	
Prerequisite	 The device has an Anlog I/O module. Operating mode (→ ^B 149) = 420mA output or HART slave +420mA output 		
Description	Switches the simulation of the current on or off.		
Selection	OffOn		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

Simulation value		
Navigation	$ \blacksquare \Box $ Diagnostics \rightarrow Simulation \rightarrow Simulation value	
Prerequisite	Current output simulation ($\rightarrow \square 261$) = On	
Description	Defines the current to be simulated.	

User entry3.4 to 23 mAFactory settingThe current at the time the simulation was started.Additional informationRead access

Read access	Operator
Write access	Maintenance

15.4.4 "Device check" submenu

Navigation \square Diagnostics \rightarrow Device check

Start device check			
Navigation	$ \blacksquare \square Diagnostics \rightarrow Device ch $	eck \rightarrow Start dev. check	
Description	Starts the device check.	tarts the device check.	
Selection	NoYes		
Factory setting	No		
Additional information	Read access	Operator	
	Write access	Maintenance	

Result device check		
Navigation	Image: Barbon Diagnostics → D	evice check \rightarrow Result dev.check
Description	Shows the overall resu	lt of the device check.
Additional information	Read access	Operator
	Write access	-
Lovel signal		ion that detects and reports any interference by unfavorable Here, the amplitudes of measured signals are monitored, which refer hear range.
Level signal		
Navigation	Image: Barbon Diagnostics → D	evice check \rightarrow Level signal

Shows the result of the device check for the level signal.

Operator

Only visible after a device check.

Read access

Write access

Prerequisite

Description

Additional information

Near distance			
Navigation	Image: Barbon Barbo	e check \rightarrow Near distance	
Prerequisite	Only visible after a device c	Only visible after a device check	
Description	Shows the result of the device check for the near distance area.		
Additional information	Read access Operator		
	Write access	-	

15.4.5 "LRC 1 to 2" submenu

Configuration of the level reference check (LRC) function $\rightarrow \cong 76$

Navigation \square Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2

LRC Mode				Ê
Navigation		LRC 1	to 2 \rightarrow LRC Mode	
Description	Activates or deactivates one	e of the	e level reference check (LRC) modes.	
Selection	 Off Compare with level device Compare with level switch Measure reference point[*] 	1		
Factory setting	Off			
Additional information	Read access		Operator	
	Write access		Maintenance	
Additional information	The option of the Measure r	referer	nce point is not available for NMS8x.	
Allowed difference				Ê
Navigation	■ Diagnostics \rightarrow LRC \rightarrow	LRC 1	to 2 \rightarrow Allowed diff.	
Description	Defines the allowed difference between the tank level and the reference.			
User entry	1 to 1000 mm			
Factory setting	10 mm			
Additional information	Read access		Operator	
	Write access		Maintenance	

^{*} Visibility depends on order options or device settings

Check fail threshold			æ
Navigation	$\square \square Diagnostics \rightarrow LRC \rightarrow LRC$	1 to 2 \rightarrow Fail threshold	
Description	Defines how many minutes the comparison has to fail before the check is failed. Note: Only for mode "Compare with level device".		
User entry	1 to 60		
Factory setting	3		
Additional information	Read access	Operator	
	Write access	Maintenance	

Reference level source		٦
Navigation	$\square \square Diagnostics \rightarrow LRC \rightarrow LRC$	1 to 2 \rightarrow Reference source
Description	Defines the source for the refere	nce level. Note: Only for mode "Compare with level device".
Selection	 No input value HART device 1 level * HART device 2 level * HART device 3 level * HART device 4 level * HART device 5 level * HART device 6 level * HART device 8 level * HART device 9 level * HART device 10 level * HART device 11 level * HART device 13 level * HART device 14 level * HART device 14 level * 	
Factory setting	No input value	
Additional information	Read access	Operator
	Write access	Maintenance

^{*} Visibility depends on order options or device settings

Reference switch source			A
Navigation	$\textcircled{B} \Box \text{ Diagnostics} \rightarrow \text{LRC} \rightarrow \text{LRC}$	C 1 to 2 \rightarrow Reference source	
Description	Defines the source for the reference switch. Note: Only for mode "Compare with level switch".		
Selection	 None Digital A1-2 Digital A3-4 Digital B1-2 Digital B3-4 Digital C1-2 Digital C3-4 Digital D1-2 Digital D3-4 		
Factory setting	None		
Additional information	Read access	Operator	
	Write access	Maintenance	

Reference switch mode			Ê
Navigation	$\square \square Diagnostics \rightarrow LRC \rightarrow LRC$	1 to 2 \rightarrow Ref. switch mode	
Description	Defines the switch direction for w mode "Compare with level switch	vhich the reference check is executed. Note: Only for ".	
Selection	Active -> InactiveInactive -> Active		
Factory setting	Active -> Inactive		
Additional information	Read access	Operator	
	Write access	Maintenance	

Reference level	
Navigation	□ □ Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2 \rightarrow Reference level
Description	Shows the current reference level. Note: Only for mode "Compare with level device".
User interface	Signed floating-point number
Factory setting	0 mm

Additional information	Read access	Operator
	Write access	-

Reference switch level	l (
Navigation	■ Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2 \rightarrow Reference level	
Description	Defines the position of the reference switch as level. Note: Only for mode "Compare with level switch".	
User entry	0 to 10 000.00 mm	
Factory setting	0 mm	
Additional information	Read access Operator	
	Write access	Maintenance

Reference point level			A
Navigation	Image Diagnostics → LRC → LRC 1 to 2 → Ref. point level		
Description	Defines the position of the reference point as level. Note: Only for mode "Measure reference point".		
User entry	0 to 10 000.00 mm		
Factory setting	0 mm		
Additional information	Read access Operator		
	Write access	Maintenance	

Reference switch stat	te
Navigation	□ □ Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2 \rightarrow Ref.switch state
Description	Shows the current state of the reference switch (e.g. "active"). Note: Only for mode "Compare with level switch".
User interface	 Unknown Inactive Active Error
Factory setting	Unknown

Additional information	Read access	Operator
	Write access	-

Start reference measurement		Â	
Navigation	$ \blacksquare \Box Diagnostics \rightarrow LRC \rightarrow LRC $	1 to 2 \rightarrow Start ref. meas.	
Description	Starts the measurement of the reference point and executes the check. Note: Only for mode "Measure reference point".		
Selection	NoYes		
Factory setting	No		
Additional information	Read access Operator		
	Write access	Maintenance	

Check level		
Navigation	□ Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2 \rightarrow Check level	
Description	Shows the tank level at which the reference check has been executed.	
User interface	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access Operator	
	Write access	Development

Check status	
Navigation	□ □ Diagnostics \rightarrow LRC \rightarrow LRC 1 to 2 \rightarrow Check status
Description	Shows the status of the reference check execution (e.g. "passed").
User interface	 not executed Passed Failed Not possible
Factory setting	not executed

Additional information	Read access	Operator
	Write access	Development

Check timestamp		
Navigation		
Description	Shows the timestamp at which the reference check has been executed.	
User interface	Character string comprising numbers, letters and special characters	
Factory setting		
Additional information	Read access Operator	
	Write access	-

Index

Symbols #blank# (Pa

#blank# (Parameter) 138, 139
09
0 % value (Parameter) 145, 153, 177
4-20mA inputs
4-20mA output
100 % value (Parameter) 146, 154, 177

Δ

A
Absolute echo amplitude (Parameter) 234
Access code
Access to the operating menu
Accessories
Communication specific
Service specific
Actual diagnostics (Parameter) 253
Administration (Submenu) 251
Advanced settings
Advanced setup (Submenu)
Air density (Parameter)
Air temperature (Parameter)
Air temperature source (Parameter)
Alarm (Submenu)
Alarm 1 input source (Parameter)
Alarm 2 input source (Parameter)
Alarm hysteresis (Parameter)
Alarm mode (Parameter)
Alarm value (Parameter) 227
Alarm value source (Parameter) 226
Alarms (limit evaluation) 81
Allowed difference (Parameter)
Ambient pressure (Parameter)
Analog I/O (Submenu) 149
Analog I/O module 63
Analog input 0% value (Parameter) 155
Analog input 100% value (Parameter) 155
Analog input source (Parameter)
Analog IP (Submenu) 143
Any error (Parameter) 230
Application
Residual risk
Application (Submenu)
Assign PV (Parameter) 176
Assign QV (Parameter) 181
Assign SV (Parameter) 178
Assign TV (Parameter) 180

В

Backlight (Parameter) 242	
Baudrate (Parameter) 165, 172	
Blocking distance (Parameter) 187	
Bus termination (Parameter)	

С

Calibration temperature (Parameter)	208
Check fail threshold (Parameter)	266

Check level (Parameter)	269
Check status (Parameter)	
Check timestamp (Parameter)	270
Cleaning	
Exterior cleaning	102
Clear alarm (Parameter)	230
CLG (Submenu)	210
CLG corrected level (Parameter)	212
CLG correction value (Parameter)	212
CLG mode (Parameter)	210
CLG to tank level (Parameter)	210
Commissioning	. 57
Communication (Submenu)	164
Communication interface protocol (Parameter)	164
Communication interface protocol variant	
· · · · ·	168
Communication status (Parameter)	137
Configuration (Submenu) 165, 168, 172,	
	130
	161
Contrast display (Parameter)	
Covered tank (Parameter)	
CTSh (Submenu)	
CTSh correction value (Parameter)	
CTSh mode (Parameter)	
Current output N simulation (Parameter)	
Current span (Parameter)	150

D

2	
Damping factor (Parameter) 148, 157,	231
Date / time (Submenu)	247
Date/time (Parameter) 247,	255
Day (Parameter)	
DD	
Deactivate SIL/WHG (Wizard)	250
Decimal places 1 (Parameter)	
Define access code (Parameter)	251
Defining the type of measured value	
Deformation factor (Parameter)	
Delay time echo lost (Parameter)	
Density (Submenu)	
Density unit (Parameter)	
Density value (Parameter)	
Device alarm simulation (Parameter)	
Device check (Submenu)	
Device Descriptions	
Device ID (Parameter)	
	257
Device name (Parameter) 136,	258
	103
Device reset (Parameter)	251
Device tag (Parameter)	257
Diagnostic event simulation (Parameter)	
Diagnostic events	
Diagnostic information	
FieldCare	. 93

Diagnostic list101Diagnostic list (Submenu)256Diagnostic message90Diagnostic messages95
Diagnostics
Diagnostics (Menu)
Diagnostics 1 to 5 (Parameter)
Diagnostics event
Digital inputs
Digital outputs
Digital Xx-x (Submenu)
Dip Freeze (Parameter) 118
DIP switch
see Write protection switch
Dip-table (Submenu)
Disconnecting HART devices
Display
Display (Submenu)
Display damping (Parameter)
Display interval (Parameter)
Display language
Disposal
Distance (Parameter)
Distance unit (Parameter)
Function
Document function
E
Echo suppression (map)
Echo tracking (Submenu)
Element position (Submenu) 122 Element position 1 to 24 (Parameter) 122
Flement temperature (Submenu)

Firmware CRC (Parameter)	258
Firmware history	101
Firmware version (Parameter)	257
Fixed current (Parameter)	
Float swap mode (Parameter)	166
Forget device (Parameter)	142
Forget device (Wizard)	
Format display (Parameter)	

G

-	
Gas 1 to 4 (Parameter)	211
Gas 1 to 4 ratio (Parameter)	211
Gas 1 to 4 refractive index (Parameter) 2	211
Gas phase correction	75
Gauge current (Parameter) 1	48
GP 1 name (Parameter)	126
GP Value 1 (Parameter)	126
GP Value 2 (Parameter)	26
GP Value 3 (Parameter)	126
GP Value 4 (Parameter)	L27
GP values (Submenu)	26

Η

H alarm (Parameter)	29
H alarm value (Parameter) 2	27
Hardware write protection	
HART date code (Parameter)	
HART descriptor (Parameter)	.83
	.36
	.35
HART inputs	63
HART message (Parameter)	.84
HART output (Submenu) 1	.75
HART short tag (Parameter)	.83
HART slave + 4-20mA output	83
	241
	241
HH alarm (Parameter)	28
	227
	29
	36
	248
(=======, =======================	215
	215
	217
	202
J ()	202
HyTD mode (Parameter) 2	202

Ι

К

IX		
Keypad lock	 	

T.	
-	0
L alarm (Parameter)	
L alarm value (Parameter)	
Language (Parameter)	
Level (Submenu)	
Level mapping (Parameter)	9
Level measurement	0
Level signal (Parameter) 26	3
Line impedance (Parameter) 17	
Linear expansion coefficient (Parameter) 20	8
Linking input values	1
Liquid temp source (Parameter)	9
Liquid temperature (Parameter)	0
LL alarm (Parameter)	
LL alarm value (Parameter) 22	
LL+L alarm (Parameter) 23	
Local display	
see Diagnostics message	
see In alarm condition	
Locking state symbols	4
Locking status (Parameter)	4
Lower interface level (Parameter)	0
LRC 1 to 2 (Submenu) 26	5
LRC Mode (Parameter) 26	

Μ

Maintenance
Manual air temperature (Parameter)
Manual density (Parameter) 215
Manual liquid temperature (Parameter)
Manual vapor temperature (Parameter)
Manual water level (Parameter)
Mapping end point (Parameter)
Maximum probe temperature (Parameter) 147
Meaning of the keys
Measured level (Parameter)
Measured lower density (Parameter)
Measured materials
Measured middle density (Parameter) 124
Measured upper density (Parameter)
Measured value status symbols
Menu
Diagnostics
Operation
Setup
Messages
Minimum level (Parameter)
Minimum pressure (Parameter) 216
Minimum probe temperature (Parameter) 146
Minute (Parameter) 249
Modbus output
Month (Parameter) 248
N

Nameplat	13
Navigation symbols	45

0

Observed density (Parameter)123, 193Observed density source (Parameter)193Observed density temperature (Parameter)123Offset standby distance (Parameter)118
Operability
Operating elements
Diagnostics message
Operating menu
Service interface and FieldCare
Tankvision Tank Scanner NXA820 and FieldCare . 53
Operating mode (Parameter) 137, 143, 149, 159
Operating time (Parameter)
Operating time from restart (Parameter) 254
Operation (Menu)
Operational safety
Order code (Parameter)
Output density (Parameter)
Output echo lost (Parameter)
Output level (Parameter)
Output pressure (Parameter)
Output simulation (Parameter)
Output temperature (Parameter) 140
Output value (Parameter)
Output values (Parameter)
Output vapor temperature (Parameter) 140

Ρ

-		
P1 (bottom) (Parameter)	125,	195
P1 (bottom) manual pressure (Parameter)		195
P1 (bottom) source (Parameter)		195
P1 absolute / gauge (Parameter)		196
P1 offset (Parameter)		196
P1 position (Parameter)		196
P3 (top) (Parameter)	125,	197
P3 (top) manual pressure (Parameter)		197
P3 (top) source (Parameter)		197
P3 absolute / gauge (Parameter)		198
P3 offset (Parameter)		198
P3 position (Parameter)		198
Parity (Parameter)		165
Percent of range (Parameter)		178
Polling address (Parameter)		136
Present mapping (Parameter)		132
Pressure (Submenu)		
Pressure unit (Parameter)		245
Previous diagnostics (Parameter)		
Primary variable (PV) (Parameter)		178
Probe position (Parameter)		
Process value (Parameter)		
Process variable (Parameter)	145,	155

Product safety	10
Protecting settings	87
Prothermo temperature	65
PV mA selector (Parameter) 1	77
PV source (Parameter) 1	75

Q

Quaternary variable (QV)	(Parameter)	. 182
--------------------------	-------------	-------

R

Readback value (Parameter)	162
Real-time clock	. 58
Recalibration	102
Record map (Parameter)	132
	267
Reference level source (Parameter)	266
Reference point level (Parameter)	268
Reference switch level (Parameter)	268
Reference switch mode (Parameter)	267
Reference switch source (Parameter)	267
Reference switch state (Parameter)	268
Relative echo amplitude (Parameter)	235
Remedial measures	
Calling up	92
Closing	. 92
Remedy information	94
Repair concept	103
Replacing a device	103
Requirements for personnel	9
Result device check (Parameter)	263
Return	104
RTD	68
RTD connection type (Parameter)	144
RTD type (Parameter)	143

S

Safety distance (Parameter)
Safety instructions
Basic
Safety Instructions (XA)
Safety settings (Submenu) 232
Secondary variable (SV) (Parameter) 179
Sensor config (Submenu) 234
Separator (Parameter)
Serial number (Parameter) 257
Set date (Parameter) 247
Set level (Parameter)
Setup (Menu)
Signal quality (Parameter)
SIL confirmation (Wizard) 250
Simulation
Simulation (Submenu) 260
Simulation distance (Parameter) 261
Simulation distance on (Parameter)
Simulation value (Parameter)
Slot B or C
Software ID (Parameter) 173
Standard view
Measured value display

Start device check (Parameter)				263
Start reference measurement (Parame				
Starting level (Parameter)				202
Status signal (Parameter)				137
Status signals				
Stilling well (Parameter)				208
Storage				
Submenu				• • •
Administration				251
Advanced setup				134
-				223
Alarm				149
Analog I/O				149
Analog IP				145
Application				
CLG				210
Communication				164
Configuration				
CTSh				207
Date / time				247
Density				
Device check				263
Device information				257
Diagnostic list				256
Digital Xx-x				159
Dip-table				222
Display				237
Echo tracking				236
Element position				122
Element temperature				122
GP values				126
HART Device(s)				136
HART devices				135
HART output				175
HTMS				215
НуТО				202
Information				234
Input/output				135
Level				185
LRC 1 to 2				265
NMT element values				121
Pressure				195
Safety settings				232
Sensor config				234
Simulation				
System units				244
Tank calculation				
Tank configuration				
Temperature				
V1 input selector				171
WM550 input selector				173
System components				
System polling address (Parameter)				
System units (Submenu)				
	• • • •	• • • •	• • •	
Т				

Table mode (Parameter)	222
Table settings (Parameter)	222
Tank calculation	
Direct level measurement	72

Hybrid tank measurement system (HTMS) 73
Hydrostatic Tank Deformation (HyTD) 74
Thermal tank shell correction (CTSh) 75
Tank calculation (Submenu)200
Tank configuration (Submenu)185
Tank gauging application
Tank level (Parameter)
Tank Level % (Parameter)
Tank reference height (Parameter) 129, 185
Tank ullage (Parameter) 119
Tank ullage % (Parameter) 119
Temperature (Submenu)
Temperature unit (Parameter)
Terms related to tank measurement
Tertiary variable (TV) (Parameter)
Text editor
Thermocouple type (Parameter) 144
Timestamp (Parameter)
Timestamp 1 to 5 (Parameter)
Transport
Trouble shooting
Tube diameter (Parameter) 129, 234

U

Units preset (Parameter)	4
Upper interface level (Parameter)	9
Used for SIL/WHG (Parameter)	53
User role (Parameter) 13	34
User roles	0

V

V1 address (Parameter) 168, 169
V1 input selector (Submenu)
V1 output
Value 1 display (Parameter) 238
Value percent selector (Parameter) 172
Vapor density (Parameter)
Vapor temp source (Parameter) 191
Vapor temperature (Parameter)

W

Water density (Parameter)217Water level (Parameter)120, 187Water level source (Parameter)186Weight and measures configuration CRC (Parameter)
Wire expansion coefficient (Parameter) 209
Wiring scheme
Wizard
Deactivate SIL/WHG
Forget device
SIL confirmation
Wizard navigation symbols
Wizard view
WM550 address (Parameter)
WM550 input selector (Submenu)
WM550 output
Workplace safety 10

Write protection	
Via write protection switch	51
Write protection switch	51
V	

Y

/- >																								
Year (Parameter)			•	•	•	•	•	•	•	•	•	•	•	•	 •	•	•	•	•	•	•	•	247	



www.addresses.endress.com

