71633428 2024-01-31 Valid as of version 01.02.zz (Device firmware)

BA01837D/06/EN/03.24-00

Operating Instructions **Proline Prosonic Flow G 500**

Ultrasonic time-of-flight flowmeter Modbus RS485







- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	About this document	6
1.1 1.2 1.3 1.4	Symbols1.2.1Safety symbols1.2.2Electrical symbols1.2.3Communication-specific symbols1.2.4Tool symbols1.2.5Symbols for certain types of information1.2.6Symbols in graphicsDocumentation	66667778888
2	Safety Instructions	9
2.1 2.2 2.3 2.4 2.5 2.6 2.7	Intended use 1 Workplace safety 1 Operational safety 1 Product safety 1 IT security 1 IDevice-specific IT security 1 2.7.1 Protecting access via hardware write protection 1 2.7.2 Protecting access via a password 1 2.7.3 Access via web server 1 2.7.4 Access via service interface (CDI-	9 9 0 0 1 1 1 2 .3
3	Product description 1	4
3.1	5	4
4	Incoming acceptance and product	F
4.1 4.2	Product identification14.2.1Transmitter nameplate14.2.2Sensor nameplate1	5 .5 .6 .7
5 5.1 5.2	Transporting the product15.2.1Measuring devices without lifting lugs15.2.2Measuring devices with lifting lugs2	.9 .9 .9
5.3	1 5	0

6	Mounting	21
6.1	Mounting requirements	
0.1	6.1.1 Mounting position	21
	6.1.2 Environmental and process	21
	requirements	23
	6.1.3 Special mounting instructions	24
6.2	Mounting the measuring device	25
0.2	6.2.1 Required tools	25
	6.2.2 Preparing the measuring device	26
	6.2.3 Mounting the measuring device	26
	6.2.4 Mounting the transmitter housing:	20
	Proline 500 – digital	26
6.3	Post-mounting check	28
0.2		20
7	Electrical connection	29
7.1	Electrical safety	29
7.2	Connecting requirements	29
	7.2.1 Required tools	29
	7.2.2 Requirements for connection cable	29
	7.2.3 Terminal assignment	34
	7.2.4 Shielding and grounding	34
	7.2.5 Preparing the measuring device	34
7.3	Connecting the measuring device: Proline	
	500 – digital	36
	7.3.1 Connecting the connecting cable	36
	7.3.2 Connecting the signal cable and the	
	supply voltage cable	39
7.4	Potential equalization	40
	7.4.1 Requirements	40
7.5	Special connection instructions	41
	7.5.1 Connection examples	41
7.6	Hardware settings	44
	7.6.1 Setting the device address	44
	7.6.2 Activating the terminating resistor	45
7.7	Ensuring the degree of protection	46
7.8	Post-connection check	47
8	Operation options	48
8.1		48
8.2	Overview of operation options Structure and function of the operating	40
0.2	1 5	49
	8.2.1 Structure of the operating menu	49 49
0.2	8.2.2 Operating philosophy	50
8.3	Access to operating menu via local display	51
	8.3.1 Operational display	51 54
	8.3.2 Navigation view	
	8.3.3 Editing view8.3.4 Operating elements	56 58
	8.3.5 Opening the context menu	58
	8.3.6 Navigating and selecting from list	58 60
	8.3.7 Calling the parameter directly	60 60
	8.3.8 Calling up help text	61
	8.3.9 Changing the parameters	61
	c changing the parameters	υı

	8.3.10	User roles and related access	
		authorization	62
	8.3.11	Disabling write protection via access	
		code	62
	8.3.12	Enabling and disabling the keypad	
		lock	63
8.4	Access	to operating menu via web browser	63
	8.4.1	Function range	63
	8.4.2	Requirements	64
	8.4.3	Connecting the device	65
	8.4.4	Logging on	67
	8.4.5	User interface	68
	8.4.6	Disabling the Web server	69
	8.4.7	Logging out	69
8.5	Access	to the operating menu via the	
	operati	ng tool	70
	8.5.1	Connecting the operating tool	70
	8.5.2	FieldCare	73
	8.5.3	DeviceCare	74
9	Suctor	m integration	75
	5	5	
9.1		ew of device description files	
	9.1.1	Current version data for the device	75
	9.1.2	Operating tools	75
9.2	Modbu	s RS485 information	75
	9.2.1	Function codes	75
	9.2.2	Register information	76
	9.2.3	Response time	77
	9.2.4	Data types	77
			77
	9.2.5 9.2.6	Byte transmission sequence	
	9.2.5		77
10	9.2.5 9.2.6	Byte transmission sequence Modbus data map	77 78
10	9.2.5 9.2.6 Comm	Byte transmission sequence Modbus data map	77 78 80
10.1	9.2.5 9.2.6 Comm Post-m	Byte transmission sequence Modbus data map nissioning ounting and post-connection check	77 78 80 80
	9.2.5 9.2.6 Comm Post-m Switchi	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device	77 78 80 80 80
10.1	9.2.5 9.2.6 Comm Post-m Switchi	Byte transmission sequence Modbus data map nissioning ounting and post-connection check	77 78 80 80 80
10.1 10.2	9.2.5 9.2.6 Comm Post-m Switchi Setting	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device	77 78 80 80 80 80
10.1 10.2 10.3	9.2.5 9.2.6 Comm Post-m Switchi Setting	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language	77 78 80 80 80 80
10.1 10.2 10.3	9.2.5 9.2.6 Comm Post-m Switchi Setting Configu	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device	77 78 80 80 80 80 80
10.1 10.2 10.3	9.2.5 9.2.6 Comm Post-m Switchi Setting Configu 10.4.1	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name	77 78 80 80 80 80 80 80 82
10.1 10.2 10.3	9.2.5 9.2.6 Comm Post-m Switchi Setting Configu 10.4.1 10.4.2	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication	77 78 80 80 80 80 80 80 82
10.1 10.2 10.3	9.2.5 9.2.6 Comm Post-m Switchi Setting Configu 10.4.1 10.4.2	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface	77 78 80 80 80 80 80 82 82
10.1 10.2 10.3	9.2.5 9.2.6 Comm Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration	77 78 80 80 80 80 80 82 82 82 82
10.1 10.2 10.3	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input	77 78 80 80 80 80 80 80 82 82 82 82 82 84 85 86
10.1 10.2 10.3	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6	Byte transmission sequence Modbus data map	77 78 80 80 80 80 82 82 82 82 84 85 86 87
10.1 10.2 10.3	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input Configuring the status input Configuring the current output	77 78 80 80 80 80 80 80 82 82 82 82 82 84 85 86
10.1 10.2 10.3	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the status input Configuring the status input Configuring the current output Configuring the pulse/frequency/	77 78 80 80 80 80 80 80 82 82 82 82 82 84 85 86 87 88
10.1 10.2 10.3	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the status input Configuring the status input Configuring the current output Configuring the pulse/frequency/ switch output	777 78 80 80 80 80 80 80 80 80 80 80 82 82 82 82 84 85 86 87 88 91
10.1 10.2 10.3	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input Configuring the status input Configuring the status input Configuring the pulse/frequency/ switch output Configuring the relay output	777 78 80 80 80 80 80 80 80 80 80 80 80 80 82 82 82 84 85 86 87 88 91 97
10.1 10.2 10.3	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input Configuring the status input Configuring the status input Configuring the pulse/frequency/ switch output Configuring the relay output Configuring the double pulse output	77 78 80 80 80 80 80 80 80 80 80 80 82 82 82 84 85 86 87 88 91 97 99
10.1 10.2 10.3	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.11	Byte transmission sequence Modbus data map	77 78 80 80 80 80 82 82 82 82 82 84 85 86 87 88 91 97 99 100
10.1 10.2 10.3	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.12	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device the operating language uring the measuring device Defining the tag name Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input Configuring the status input Configuring the current output Configuring the current output Configuring the pulse/frequency/ switch output Configuring the relay output Configuring the local display 2 Configuring the low flow cut off	77 78 80 80 80 80 80 82 82 82 82 82 84 85 86 87 88 91 97 99 100 102
10.1 10.2 10.3 10.4	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.12 10.4.12	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ng on the measuring device the operating language uring the measuring device Defining the tag name Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input Configuring the status input Configuring the status input Configuring the current output Configuring the relay output Configuring the relay output Configuring the local display Configuring the low flow cut off Gas analysis configuration	77 78 80 80 80 80 80 80 80 80 82 82 82 82 84 85 86 87 88 91 97 99 100 102 103
10.1 10.2 10.3	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.12 10.4.12 10.4.12 10.4.12	Byte transmission sequence Modbus data map nissioning ounting and post-connection check ing on the measuring device the operating language uring the measuring device Defining the tag name Setting the system units Configuring the communication interface Displaying the I/O configuration Configuring the current input Configuring the status input Configuring the status input Configuring the current output Configuring the relay output Configuring the relay output Configuring the relay output Configuring the local display 2 Configuring the low flow cut off 3 Gas analysis configuration	77 78 80 80 80 80 80 82 82 82 82 82 84 85 86 87 88 91 97 99 100 102
10.1 10.2 10.3 10.4	9.2.5 9.2.6 Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.12 10.4.12	Byte transmission sequence Modbus data map	77 78 80 80 80 80 80 80 80 80 82 82 82 84 85 86 87 88 91 97 99 100 102 103 105
10.1 10.2 10.3 10.4	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12	Byte transmission sequence Modbus data map	777 78 80 80 80 80 80 80 80 82 82 82 84 85 86 87 88 91 97 99 100 102 103 105
10.1 10.2 10.3 10.4	9.2.5 9.2.6 Comm Post-m Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.5.1	Byte transmission sequence Modbus data map	77 78 80 80 80 80 80 80 80 80 80 80 80 80 80
10.1 10.2 10.3 10.4	9.2.5 9.2.6 Comm Switchi Setting Configu 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12 10.4.12	Byte transmission sequence Modbus data map	777 78 80 80 80 80 80 80 80 82 82 82 84 85 86 87 88 91 97 99 100 102 103 105

	10.5.4 Carrying out additional display	
	configurations	108
	10.5.5 WLAN configuration	111
	10.5.6 Configuration management	113
	10.5.7 Using parameters for device	
	administration	114
10.6	Simulation	116
10.7	Protecting settings from unauthorized access	118
	10.7.1 Write protection via access code	118
	10.7.2 Write protection via write protection	
	switch	120
11	Operation	122
	1	122
11.1	Reading off the device locking status	
11.2	Adjusting the operating language	122
11.3	Configuring the display	122
11.4	Reading off measured values	122
	11.4.1 Process variables	123
	11.4.2 System values	125
	11.4.3 "Input values" submenu	126
	11.4.4 Output values	127
	11.4.5 "Totalizer" submenu	129
11.5	Adapting the measuring device to the process	
	conditions	130
11.6	Performing a totalizer reset	130
	11.6.1 Function scope of "Control Totalizer"	
	parameter	131
	11.6.2 Function range of "Reset all	
	totalizers" parameter	131
11.7	Displaying the measured value history	132
12	Diagnosis and troubleshooting	135
12.1	General troubleshooting	135
12.2	Diagnostic information via LEDs	137
12.2	12.2.1 Transmitter	137
	12.2.1 Sensor connection housing	138
12.3	Diagnostic information on local display	139
12.7	12.3.1 Diagnostic message	139
	12.3.1 Diagnostic message 12.3.2 Calling up remedial measures	141
12.4	Diagnostic information in the web browser .	141
12.4	5	141
		141 142
10 E	51 5	142
12.5	Diagnostic information in FieldCare or	1 /. ว
	DeviceCare	142
	12.5.1 Diagnostic options	142
10 (12.5.2 Calling up remedy information	143
12.6	Diagnostic information via communication	1//
	interface	144
	12.6.1 Reading out diagnostic information	144
	12.6.2 Configuring error response mode	144
12.7	Adapting the diagnostic information	144
	12.7.1 Adapting the diagnostic behavior	144
12.8	Overview of diagnostic information	145
12.9	Pending diagnostic events	150
12.10	Diagnostics list	151
12.11		
	Event logbook	151
	Event logbook 12.11.1 Reading out the event logbook 12.11.2 Filtering the event logbook	151 151 152

12.12	12.11.3 Overview of information events Resetting the measuring device 12.12.1 Function range of "Device reset"	152 154
	parameter	154
12.13	Device information	154
	Firmware history	156
13	Maintenance	157
13.1	Maintenance tasks	157
	13.1.1 Exterior cleaning	157
13.2	Measuring and test equipment	157
13.3	Endress+Hauser services	157
14	Repair	158
14.1	General notes	158
	14.1.1 Repair and conversion concept	158
	14.1.2 Notes for repair and conversion	158
14.2	Spare parts	158
14.3	Endress+Hauser services	158
14.4	Return	158
14.5	Disposal	159
	14.5.1 Removing the measuring device	159
	14.5.2 Disposing of the measuring device	159
15	Accessories	160
15.1	Device-specific accessories	160
	15.1.1 For the transmitter	160
15.2	Communication-specific accessories	161
15.3	Service-specific accessories	162
15.4	System components	162
16	Technical data	163
16.1	Application	163
16.2	Function and system design	163
16.3	Input	164
16.4	Output	167
16.5	Power supply	173
16.6	Performance characteristics	174
16.7	Mounting	177
16.8	Environment	177
16.9	Process	178
16.10	Mechanical construction	180
	Display and user interface	184
	Certificates and approvals	187
	Application packages	189
	Accessories	
		191
20122	Supplemental documentation	191 191

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
\sim	Alternating current
\sim	Direct current and alternating current
<u>+</u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:Interior ground terminal: potential equalization is connected to the supply network.Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Communication-specific symbols

Symbol	Meaning
((i•	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	LED Light emitting diode is off.

Symbol	Meaning
-X-	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

1.2.4 Tool symbols

Symbol	Meaning
	Torx screwdriver
•	Phillips head screwdriver
Ń	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
×	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
Ĩ	Reference to documentation
	Reference to page
	Reference to graphic
►	Notice or individual step to be observed
1., 2., 3	Series of steps
L >	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
\bigotimes	Safe area (non-hazardous area)
≈ →	Flow direction

1.3 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

1.3.1 Document function

The following documentation may be available depending on the version ordered:

Document type	Purpose and content of the document	
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.	
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.	
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.	
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.	
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are an integral part of the Operating Instructions. Information on the Safety Instructions (XA) relevant to the device is	
Supplementary device-dependent	provided on the nameplate.Always comply strictly with the instructions in the relevant	
documentation (SD/FY)	supplementary documentation. The supplementary documentation is an integral part of the device documentation.	

1.4 Registered trademarks

Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

2 Safety Instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and media

The measuring device described in this manual is intended only for the flow measurement of gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in explosive atmospheres, in hygienic applications or where there is a high risk of pressures, are labeled accordingly on the nameplate.

To ensure that the measuring device is in proper condition during the operation period:

- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Refer to the nameplate to check whether the ordered metering system can be operated for the intended application in areas requiring specific approvals (e.g. explosion protection, pressure equipment safety).
- Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ► Keep within the specified pressure and temperature range.
- Keep within the specified ambient temperature range.
- Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ► Verify the compatibility of the process fluid with the sensor material.
- Ensure the resistance of all fluid-wetted materials in the process.
- Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

ACAUTION

Risk of hot or cold burns! The use of media and electronics with high or low temperatures can produce hot or cold surfaces on the device.

- Mount suitable touch protection.
- ► Use suitable protective equipment.

WARNING

Danger from medium escaping!

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

• Take precautions to prevent injury and material damage if the rupture disk is actuated.

2.3 Workplace safety

When working on and with the device:

• Wear the required personal protective equipment as per national regulations.

2.4 Operational safety

Damage to the device!

- Operate the device in proper technical condition and fail-safe condition only.
- ► The operator is responsible for the interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to the repair of an electrical device.
- ► Use only original spare parts and accessories.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device..

2.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater inoperation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \textcircled{B} 11$	Not enabled	On an individual basis following risk assessment
Access code (also applies to web server login or FieldCare connection) $\rightarrow \square 12$	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (Password) → 🗎 12	Serial number	Assign an individual WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server $\rightarrow \square 12$	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface→ 🗎 13	-	On an individual basis following risk assessment

2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered $\rightarrow \square$ 120.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

User-specific access code

Protect write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.

- WLAN passphrase The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode

When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ($\rightarrow \square$ 118).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ($\rightarrow \square 71$), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter ($\rightarrow \equiv 112$).

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for safety reasons.
- Follow the general rules for generating a secure password when defining and managing the access code and network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, for example, see "Write protection via access code" →

 ¹
 118.

2.7.3 Access via web server

 $\rightarrow \bigoplus$ 63With the integrated web server, the device can be operated and configured via a web browser. The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The web server is enabled when the device is delivered. The web server can be disabled via the **Web server functionality** parameter if necessary (e.g., after commissioning).

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see: "Description of device parameters" document .

2.7.4 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

3 Product description

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

3.1 Product design

3.1.1 Proline 500 – digital


Signal transmission: digital

Order code for "Integrated ISEM electronics", option A "Sensor"

For use in applications not required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the sensor, the device is ideal: For simple transmitter replacement.

- A standard cable can be used as the connecting cable.
- Not sensitive to external EMC interference.

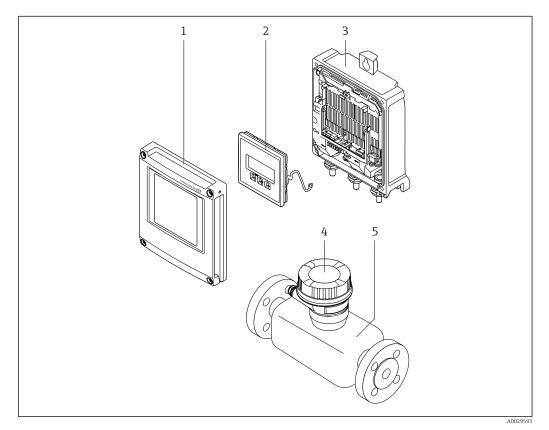


■ 1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Sensor connection housing with integrated ISEM electronics: connecting cable connection
- 5 Sensor

4 Incoming acceptance and product identification

4.1 Incoming acceptance

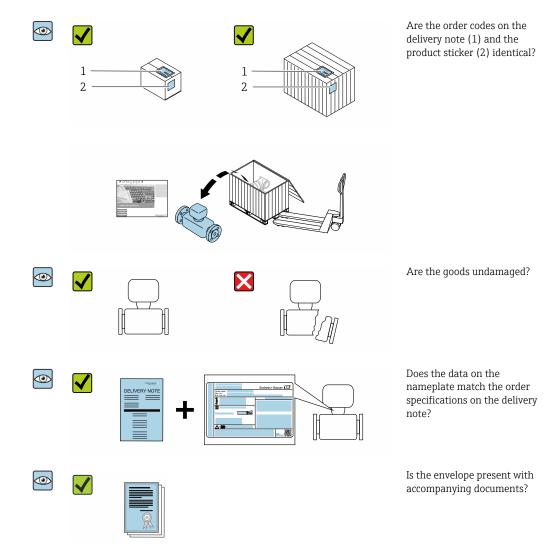

4.2 Product identification

The following options are available for identification of the device:


- Nameplate
- Order code with details of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations app* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations app*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" and "Supplementary devicedependent documentation" sections
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations app*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

4.2.1 Transmitter nameplate


Proline 500 – digital

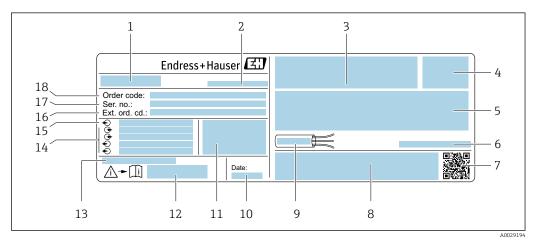

• 2 Example of a transmitter nameplate

- 1 Name of the transmitter
- 2 Manufacturer address/certificate holder
- 3 Space for approvals: use in hazardous areas
- 4 Degree of protection
- 5 Electrical connection data: available inputs and outputs
- 6 Permitted ambient temperature (T_a)
- 7 2-D matrix code
- 8 Space for approvals and certificates: e.g. CE mark, RCM tick
- 9 Permitted temperature range for cable
- 10 Date of manufacture: year-month
- 11 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 12 Document number of safety-related supplementary documentation
- 13 Space for additional information in the case of special products
- 14 Available inputs and outputs, supply voltage
- 15 Electrical connection data: supply voltage
- 16 Extended order code (ext. ord. cd.)
- 17 Serial number (Ser. no.)
- 18 Order code

4.2.2 Sensor nameplate

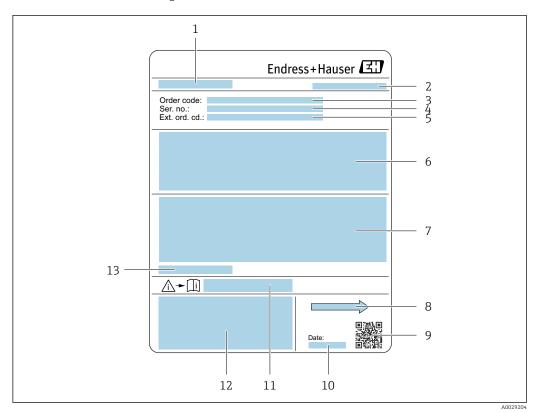

■ 3 Example of sensor nameplate

- 1 Name of sensor
- 2 Manufacturer address/certificate holder
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring pipe and flanges; sensor-specific data
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 2D-Matrixcode
- 10 Date of manufacture: year-month
- 11 Document number of safety-related supplementary documentation $\rightarrow \square$ 191
- 12 CE mark, RCM-Tick mark
- 13 Permitted ambient temperature (T_a)



The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. Please consult the documentation for the measuring device to discover the type of potential danger and measures to avoid it.
Ĩ	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal that must be connected to the ground prior to establishing any other connections.

4.2.3 Symbols on the device

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight. Avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ► Do not store outdoors.

Storage temperature $\rightarrow \square 177$

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

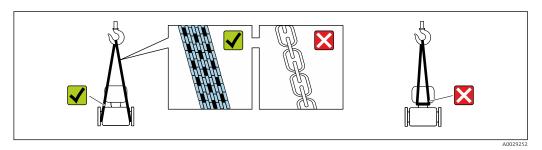

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- Secure the measuring device against slipping or turning.
- Observe the weight specified on the packaging (stick-on label).

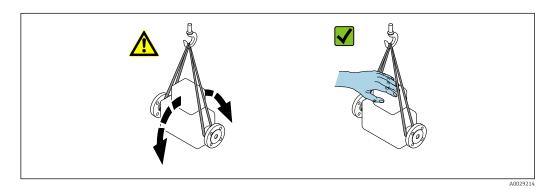

Endress+Hauser

5.2.2 Measuring devices with lifting lugs

Special transportation instructions for devices with lifting lugs

- Only use the lifting lugs fitted on the device or flanges to transport the device.
- The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Outer packaging of device
- Stretch wrap made of polymer in accordance with EU Directive 2002/95/EC (RoHS) Packaging
 - Wood crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62/EC, recyclability confirmed by Resy symbol
- Transport material and fastening fixtures
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material Paper pads

6 Mounting

6.1 Mounting requirements

6.1.1 Mounting position

Mounting location

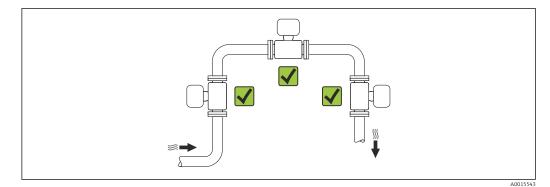

Orientation


The direction of the arrow on the sensor helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Install the measuring device in a parallel plane free of external mechanical stress.
 The internal diameter of the pipe must match the internal diameter of the sensor: see the "Technical Information" device document, "Design and dimensions" section



Orientation			Compact version
A	Vertical orientation	A0015545	
В	Horizontal orientation, transmitter head up ¹⁾	۲	
С	Horizontal orientation, transmitter head down ¹⁾	A0015590	
D	Horizontal orientation, transmitter head at side	A0015592	×


1) The horizontal alignment of the transducers may only deviate by a maximum of $\pm 5^{\circ}$, particularly if a liquid is present in the medium (wet gas).

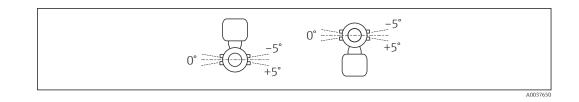


Inlet and outlet runs


If possible, install the sensors upstream of assemblies such as valves, T-pieces, elbows, and pumps. If this is not possible, the specified measurement accuracy of the measuring device is achieved by observing the specified minimum inlet and outlet runs with optimum sensor configuration.

Single-path version: DN 25 (1")

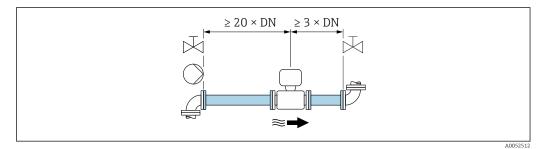


If a single-path version: Minimum inlet and outlet runs with various flow obstructions. For order code for "Flow calibration", option A "1 %".

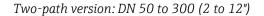

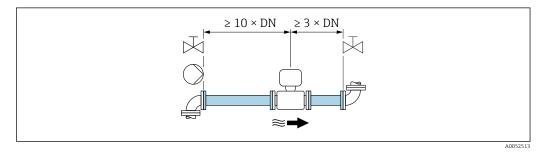

5 Two-path version: minimum inlet and outlet runs with various flow obstructions For order code for "Flow calibration", option A "1 %" ".

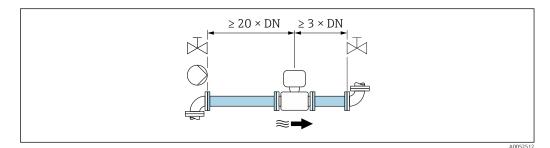

Dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

6.1.2 Environmental and process requirements

Ambient temperature range

Measuring device	 Standard:-40 to +60 °C (-40 to +140 °F) Optional order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)
Readability of the local display	-20 to $+60$ °C (-4 to $+140$ °F) The readability of the display may be impaired at temperatures outside the temperature range.

► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.

Medium pressure range

Min. medium pressure: 0.7 bar (10.2 psi) absolute

The maximum permitted medium pressure is defined by the pressure/temperature curves (see the "Technical Information" document) and the pressure specifications of the integrated pressure measuring cell (optional; order code for "Measuring tube; transducer; sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated").

WARNING

The maximum pressure for the measuring device depends on the lowest-rated element with regard to pressure.

- Note specifications regarding the pressure range of the pressure measuring cell.
- The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PS". The abbreviation "PS" corresponds to the MWP (maximum working pressure) of the pressure measuring cell.
- ► The MWP for the pressure measuring cell depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection must be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration.
- ► The MWP may be applied at the device for an unlimited period. The MWP is indicated on the nameplate. This value refers to a reference temperature of +20 °C (+68 °F) and may be applied to the pressure measuring cell for an unlimited time.
- The OPL (over pressure limit = sensor overload limit) for the measuring device depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection has to be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration.
- The test pressure corresponds to the over pressure limit of the pressure measuring cell and may be applied only temporarily to ensure that the measurement is within the specifications and no permanent damage occurs.

Pressure measuring cell	Maximum sensor measuring range		MWP	OPL
	Lower (LRL)	Upper (URL)		
	[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]
2 bar (30 psi)	0 (0)	+2 (+30)	6.7 (100.5)	10 (150)
4 bar (60 psi)	0 (0)	+4 (+60)	10.7 (160.5)	16 (240)
10 bar (150 psi)	0 (0)	+10 (+150)	25 (375)	40 (600)
40 bar (600 psi)	0 (0)	+40 (+600)	100 (1500)	160 (2400)
100 bar (1500 psi)	0 (0)	+100 (+1500)	100 (1500)	160 (2400)

Thermal insulation

For optimum measurement performance, make sure that no heat transfer (heat loss or heat supply) can take place at the sensor. This can be ensured by installing thermal insulation. The formation of condensation in the measuring device can also be limited in this way.


Thermal insulation is particularly recommended in situations in which the difference between the process temperature and ambient temperature is large. This difference leads to an error during temperature measurement that is caused by heat conduction (known as the "heat conduction error").

WARNING

Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

The thermal insulation should never cover the transmitter housing and the pressure measuring cell.

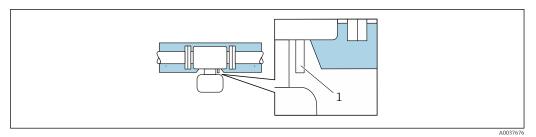

☑ 7 Thermal insulation with free extended neck and pressure measuring cell


1 Pressure measuring cell

6.1.3 Special mounting instructions

Rupture disk


Process-related information: \rightarrow 🖺 179.

The position of the rupture disk is indicated on a sticker applied over it. If the rupture disk is triggered, the sticker is destroyed. The disk can therefore be visually monitored.

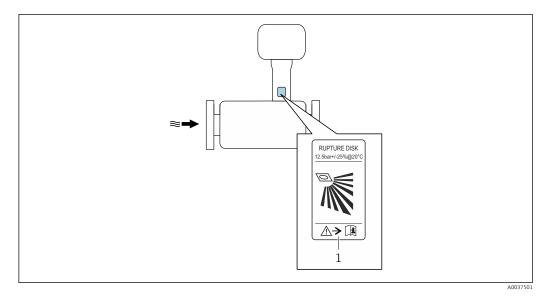

1 Rupture disk label

Weather protection cover

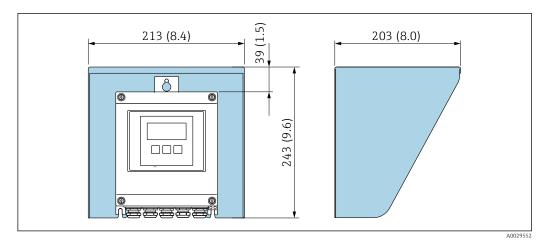

■ 8 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

For mounting on a post: Proline 500 – digital transmitter

- Open-ended wrench AF 10
- Torx screwdriver TX 25

For wall mounting: Drill with drill bit Ø 6.0 mm

For sensor

For flanges and other process connections: use a suitable mounting tool

6.2.2 Preparing the measuring device


- 1. Remove all remaining transport packaging.
- 2. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

WARNING

Danger due to improper process sealing!

- Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- Ensure that the seals are clean and undamaged.
- ► Secure the seals correctly.
- **1.** Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

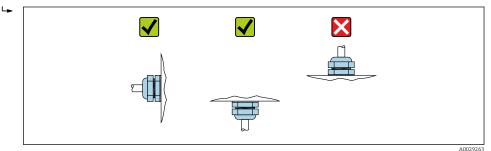

6.2.4 Mounting the transmitter housing: Proline 500 – digital

ACAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature $\rightarrow \triangleq 23$.
- If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

ACAUTION

Excessive force can damage the housing!

• Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

Pipe mounting

Required tools:


- Open-ended wrench AF 10
- Torx screwdriver TX 25

WARNING

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.


▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

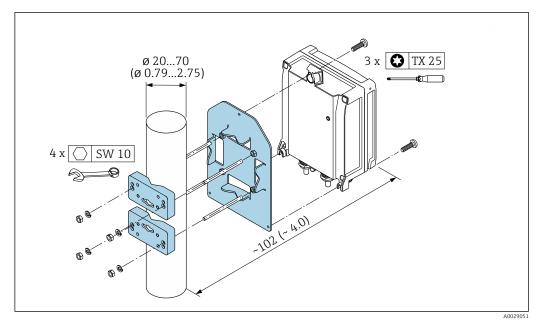

🕑 9 Engineering unit mm (in)

Wall mounting

Required tools: Drill with drill bit Ø 6.0 mm

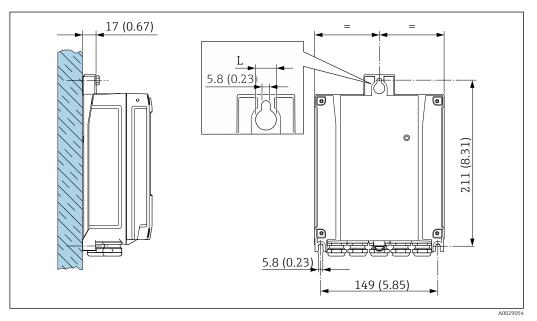

■ 10 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum, coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

1. Drill the holes.

2. Insert wall plugs into the drilled holes.

- **3.** Screw in the fixing screws slightly.
- 4. Fit the transmitter housing over the fixing screws and mount in place.

5. Tighten the fixing screws.

6.3 Post-mounting check

Is the measuring device undamaged (visual inspection)?	
 Does the measuring device correspond to the measuring point specifications? For example: Process temperature → ■ 178 Pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document on the CD-ROM provided) Ambient temperature Measuring range 	
 Has the correct orientation for the sensor been selected → □ 21? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids) 	
Does the arrow on the sensor match the actual direction of flow of the medium through the piping $\rightarrow \cong 21$?	
Is the tag name and labeling correct (visual inspection)?	
Is the device sufficiently protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	

Electrical connection

WARNING

7

Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ► In addition to the device fuse, include an overcurrent protection unit with max. 10 A in the plant installation.

7.1 Electrical safety

In accordance with applicable national regulations.

7.2 Connecting requirements

7.2.1 Required tools

- For cable entries: use appropriate tool
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: flat blade screwdriver \leq 3 mm (0.12 in)

7.2.2 Requirements for connection cable

The connecting cables provided by the customer must fulfill the following requirements.

Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm² (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2 $\boldsymbol{\Omega}.$

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

Signal cable

Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A	
Characteristic impedance	135 to 165 Ω at a measuring frequency of 3 to 20 MHz	
Cable capacitance	< 30 pF/m	
Wire cross-section	> 0.34 mm ² (22 AWG)	

Cable type	Twisted pairs	
Loop resistance	<110 Ω/km	
Signal damping	Max. 9 dB over the entire length of the cable cross-section	
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.	

Current output 0/4 to 20 mA

Standard installation cable is sufficient

Pulse / frequency / switch output

Standard installation cable is sufficient

Double pulse output

Standard installation cable is sufficient

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA Standard installation cable is sufficient


Status input Standard installation cable is sufficient

Cable diameter

- Cable glands supplied: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

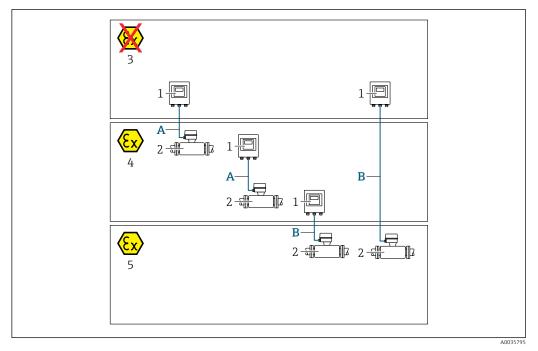

- 1 Proline 500 digital transmitter
- 2 Prosonic Flow sensor
- 3 Non-hazardous area
- 4 Hazardous area: Zone 2; Class I, Division 2
- 5 Hazardous area: Zone 1; Class I, Division 1
- A Standard cable to transmitter 500 digital →
 ⁽¹⁾ 31
 Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2/sensor
 installed in the hazardous area: Zone 2; Class I, Division 2
 B Standard cable to transmitter 500 - digital →
 ⁽²⁾ 32
- Transmitter installed in the hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 1; Class I, Division 1

A: Connecting cable between sensor and transmitter: Proline 500 – digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores; uninsulated stranded CU wires; with common shield	
Shielding	Tin-plated copper braid, optical cover \geq 85 %	
Loop resistance	Power supply line (+, –): maximum 10 Ω	
Cable length	Maximum 300 m (900 ft), see the following table.	
Device plug, side 1	M12 socket, 5-pin, A-coded.	
Device plug, side 2	M12 plug, 5-pin, A-coded.	

Cross-section	Cable length [max.]
0.34 mm ² (AWG 22)	80 m (240 ft)
0.50 mm ² (AWG 20)	120 m (360 ft)
0.75 mm ² (AWG 18)	180 m (540 ft)
1.00 mm ² (AWG 17)	240 m (720 ft)
1.50 mm ² (AWG 15)	300 m (900 ft)

Optionally available connecting cable

Flame resistance	As per DIN EN 60332-1-2	
Oil-resistance	According to DIN EN 60811-2-1	
Shielding	Tin-plated copper braid, optical cover \geq 85 %	

B: Connecting cable between sensor and transmitter: Proline 500 - digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield				
Shielding	Tin-plated copper braid, optical cover \geq 85 %				
Capacitance C	Maximum 760 nF IIC, maximum 4.2 µF IIB				
Inductance L	Maximum 26 µH IIC, maximum 104 µH IIB				
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu H/\Omega$ IIC, maximum 35.6 $\mu H/\Omega$ IIB (e.g. according to IEC 60079-25)				
Loop resistance	Power supply line (+, -): maximum 5 Ω				
Cable length	Maximum 150 m (450 ft), see the following table.				

Cross-section	Cable length [max.]	Termination			
2 x 2 x 0.50 mm ² (AWG 20)	50 m (150 ft)	2 x 2 x 0.50 mm ² (AWG 20)			
(AW020)		BN WT YE GN - - A B GY			
		 +, - = 0.5 mm² A, B = 0.5 mm² 			
3 x 2 x 0.50 mm ² (AWG 20)	100 m (300 ft)	3 x 2 x 0.50 mm ² (AWG 20)			
		BN WT GY PK YE GN + - A B GY			
		GY ■ +, - = 1.0 mm ² ■ A, B = 0.5 mm ²			
4 x 2 x 0.50 mm ² (AWG 20)	150 m (450 ft)	4 x 2 x 0.50 mm ² (AWG 20)			
(AWG 20)		BN WT GY PK RD BU + - - - A B GY YE GN			
		 +, - = 1.5 mm² A, B = 0.5 mm² 			

Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1				
Standard cable	$2 \times 2 \times 0.5 \text{ mm}^2$ (AWG 20) PVC cable ¹⁾ with common shield (2 pairs, pair-stranded)				
Flame resistance	According to DIN EN 60332-1-2				
Oil-resistance	According to DIN EN 60811-2-1				
Shielding	Tin-plated copper braid, optical cover \geq 85 %				
Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)				
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)				

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

7.2.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)		
		Device-specific terminal assignment: adhesive label in terminal cover.									

Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable: Proline 500 – digital $\rightarrow \triangleq 36$

7.2.4 Shielding and grounding

Shielding and grounding concept

- 1. Maintain electromagnetic compatibility (EMC).
- 2. Take explosion protection into consideration.
- 3. Pay attention to the protection of persons.
- 4. Comply with national installation regulations and guidelines.
- 5. Observe cable specifications .
- 6. Keep the stripped and twisted lengths of cable shield to the ground terminal as short as possible.
- 7. Shield cables fully.

Grounding of the cable shield

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- Insulate the shield that is not connected.

To comply with EMC requirements:

- 1. Ensure the cable shield is grounded to the potential matching line at multiple points.
- 2. Connect every local ground terminal to the potential matching line.

7.2.5 Preparing the measuring device

Carry out the steps in the following order:

- 1. Mount the sensor and transmitter.
- 2. Sensor connection housing: Connect connecting cable.
- 3. Transmitter: Connect connecting cable.

4. Transmitter: Connect signal cable and cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.
- If the measuring device is supplied with cable glands:
 Observe requirements for connecting cables →
 ⁽²⁾ 29.

7.3 Connecting the measuring device: Proline 500 – digital

NOTICE

An incorrect connection compromises electrical safety!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.3.1 Connecting the connecting cable

WARNING

Risk of damaging electronic components!

- Connect the sensor and transmitter to the same potential equalization.
- Only connect the sensor to a transmitter with the same serial number.

Connecting cable terminal assignment

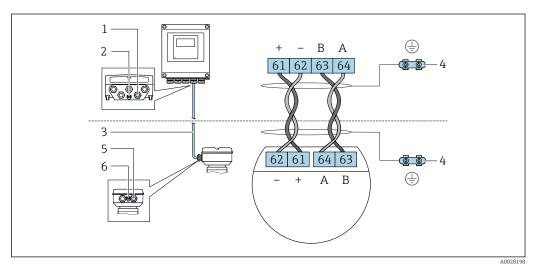

- 1 Cable entry for cable on transmitter housing
- 2 Protective earth (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; in the version with a device plug, grounding is ensured through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- 6 Protective earth (PE)

Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Sensor connection housing":

- Option **A** "Aluminum, coated" \rightarrow 37
- Option **L** "Cast, stainless" \rightarrow \cong 37


Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals $\rightarrow \cong 38$.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":

- Option A "Aluminum coated"
- Option L "Cast, stainless"

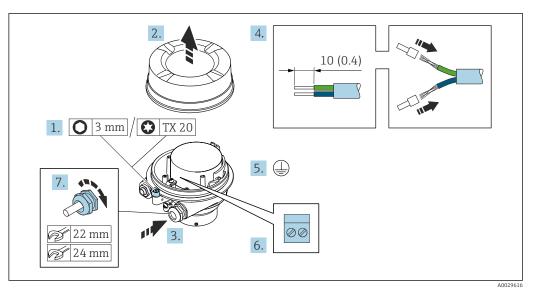


- 1. Loosen the securing clamp of the housing cover.
- 2. Unscrew the housing cover.
- **3.** Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the connecting cable terminal assignment.
- 7. Firmly tighten the cable glands.
 - └ This concludes the process for connecting the connecting cable.

WARNING

Housing degree of protection voided due to insufficient sealing of the housing.


- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
- 8. Screw on the housing cover.
- 9. Tighten the securing clamp of the housing cover.

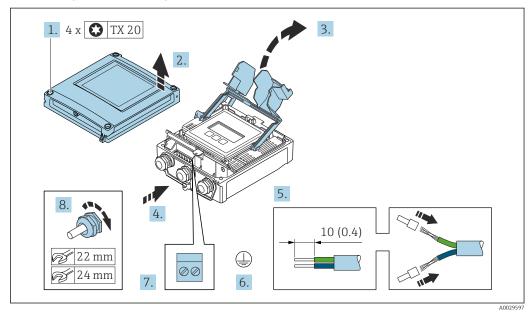


Connecting the connecting cable to the transmitter

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. Fold open the terminal cover.
- 4. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 6. Connect the protective ground.
- **7.** Connect the cable according to the terminal assignment for the connecting cable $\rightarrow \cong 36$.
- 8. Firmly tighten the cable glands.
 - └ The process for connecting the connecting cable is now complete.
- 9. Close the housing cover.
- **10.** Tighten the securing screw of the housing cover.
- **11.** After connecting the connecting cable: Connect the signal cable and the supply voltage cable $\rightarrow \cong$ 39.

7.3.2 Connecting the signal cable and the supply voltage cable

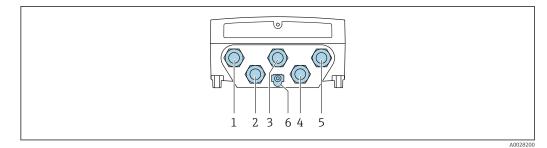

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- *3 Terminal connection for signal transmission, input/output*
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output; optional: connection for external WLAN antenna
- 6 Protective earth (PE)

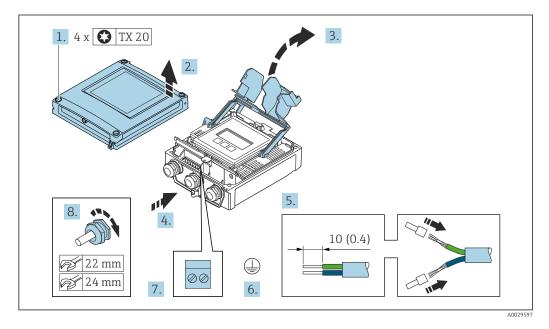

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. Fold open the terminal cover.
- **4.** Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 6. Connect the protective ground.
- 7. Connect the cable according to the terminal assignment.
 - Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 Supply voltage terminal assignment: Adhesive label in the terminal cover or →
 ⇒ 34.
- 8. Firmly tighten the cable glands.
 - └ This concludes the cable connection process.
- 9. Close the terminal cover.
- **10.** Close the housing cover.

WARNING

Housing degree of protection may be voided due to insufficient sealing of the housing.

► Screw in the screw without using any lubricant.

WARNING

Excessive tightening torque applied to the fixing screws!


Risk of damaging the plastic transmitter.

► Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

11. Tighten the 4 fixing screws on the housing cover.

Removing a cable

To remove a cable from the terminal:

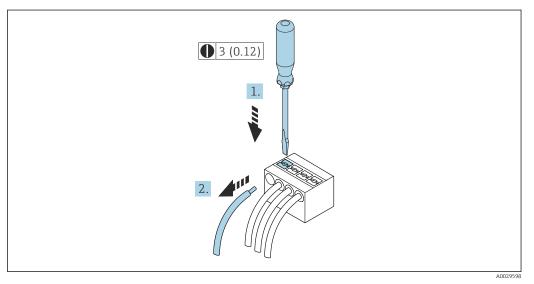

🖻 11 Engineering unit mm (in)

1. Use a flat-blade screwdriver to press down on the slot between the two terminal holes.

2. Remove the cable end from the terminal.

7.4 Potential equalization

7.4.1 Requirements


For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Medium, Connect the sensor and transmitter to the same electric potential ¹⁾
- Use a ground cable with a minimum cross-section of 6 mm² (10 AWG) and a cable lug for potential equalization connections

7.5 Special connection instructions


7.5.1 Connection examples

Modbus RS485

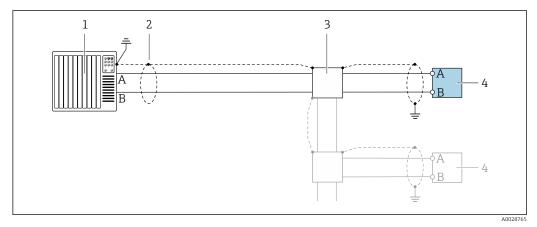


- 12 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2
- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter

Current output 4-20 mA

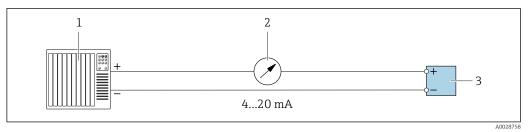

■ 13 Connection example for 4-20 mA current output (active)


- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

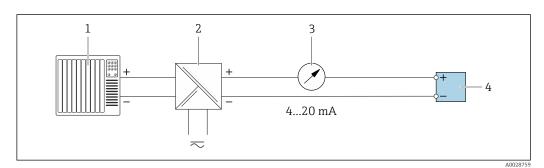

■ 14 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


Pulse/frequency output

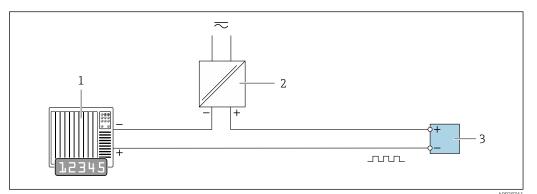


15 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC with 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \cong 167$


Switch output

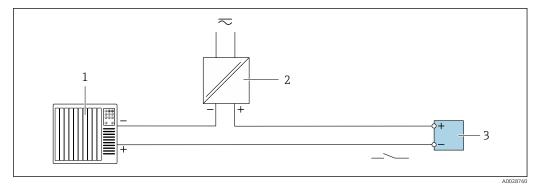

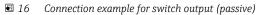


- 1 Automation system with switch input (e.g. PLC with a 10 k Ω pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \triangleq 167$

Double pulse output

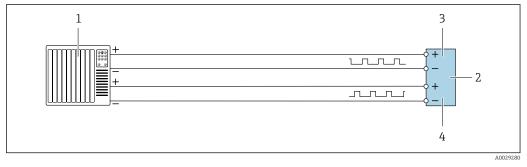

■ 17 Connection example for double pulse output (active)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: observe input values $\rightarrow \implies 169$
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

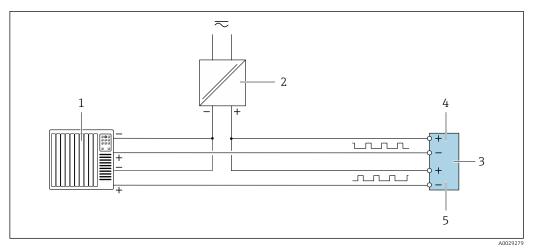


🛃 18 Connection example for double pulse output (passive)

Automation system with double pulse input (e.g. PLC with a 10 k $\!\Omega$ pull-up or pull-down resistor) 1

- Power supply 2
- 3 Transmitter: observe input values $\rightarrow \implies 169$
- 4 5 Double pulse output
- Double pulse output (slave), phase-shifted


Relay output

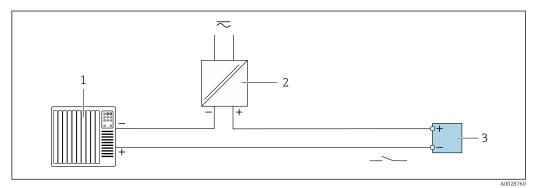

🖻 19 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \implies 169$


Current input

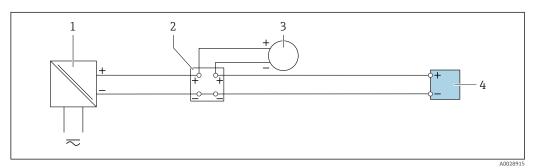

፼ 20 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

Status input

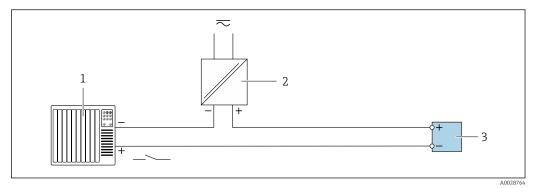

■ 21 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter


7.6 Hardware settings

7.6.1 Setting the device address

The device address must always be configured for a Modbus slave. The valid device addresses are in the range from 1 to 247. Each address may only be assigned once in a Modbus RS485 network. If an address is not configured correctly, the measuring device is not recognized by the Modbus master. All measuring devices are delivered from the factory with the device address 247 and with the "software addressing" address mode.

Proline 500 – digital transmitter

Hardware addressing

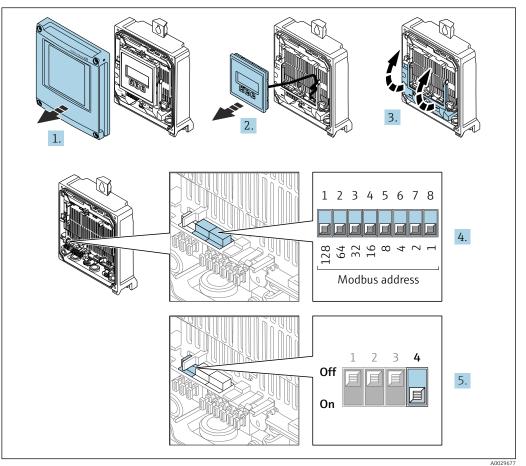


- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.
- 4. Set the desired device address using the DIP switches.
- **5.** To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.
 - ← The change of device address takes effect after 10 seconds.

Software addressing

- To switch addressing from hardware addressing to software addressing: set the DIP switch to Off.
 - └→ The device address configured in the **Device address** parameter takes effect after 10 seconds.

7.6.2 Activating the terminating resistor

To avoid incorrect communication transmission caused by impedance mismatch, terminate the Modbus RS485 cable correctly at the start and end of the bus segment.

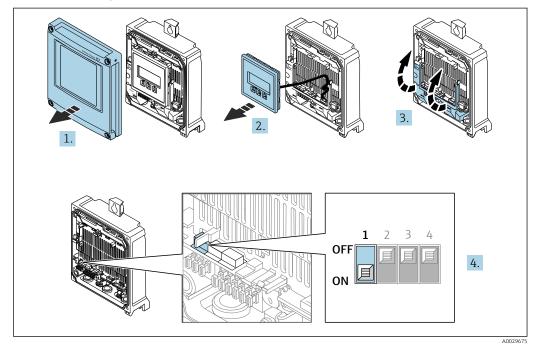

Proline 500 – digital transmitter


- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.
- 4. Switch DIP switch no. 3 to **On**.

7.7 Ensuring the degree of protection

The measuring device fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To guarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- To ensure that moisture does not enter the cable entry: Route the cable so that it loops down before the cable entry ("water trap").

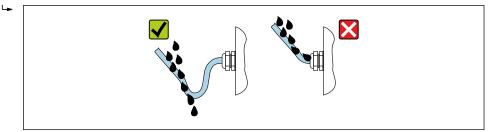

6. The cable glands supplied do not ensure housing protection when not in use. They must therefore be replaced by dummy plus corresponding to the housing protection.

7.8 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Is the protective earthing established correctly?	
Do the cables used comply with the requirements ?	
Are the mounted cables relieved of tension?	
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" → 🗎 46?	
Is the terminal assignment correct ?	
Are dummy plugs inserted in unused cable entries and have transportation plugs been replaced with dummy plugs?	

8 Operation options


8.1 Overview of operation options

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Mobile handheld terminal with SmartBlue App
- 4 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device $\rightarrow \square$ 191

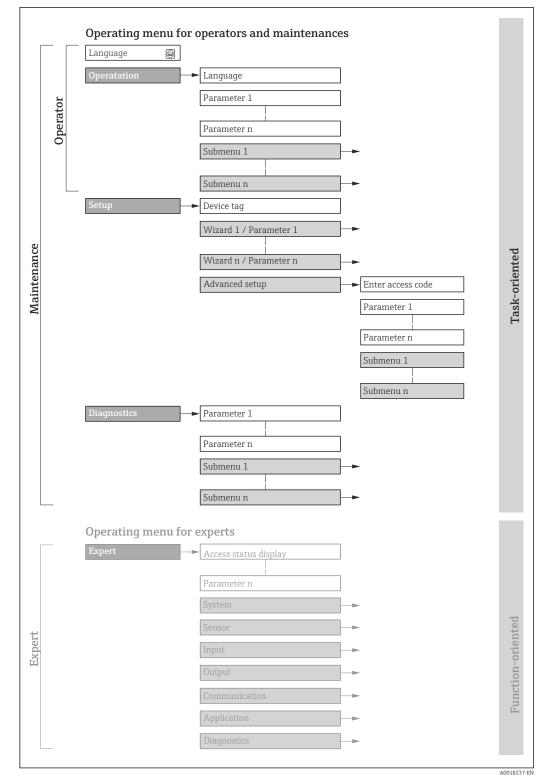

■ 22 Schematic structure of the operating menu


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (e.g. operator, maintenance etc.). Each user role contains typical tasks within the device life cycle.

Menu/pa	arameter	User role and tasks	Content/meaning
Language	Task- oriented	Role "Operator", "Maintenance" Tasks during operation: • Configuration of the operational	Defining the operating languageDefining the Web server operating languageResetting and controlling totalizers
Operation		display • Reading measured values	Configuring the operational display (e.g. display format, display contrast)Resetting and controlling totalizers
Setup		 "Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface 	 Wizards for fast commissioning: Configuration of the system units Displaying the I/O configuration Configuring the measuring point Configuration of the inputs Configuration of the outputs Configuration of the operational display Configuration of the low flow cut off Configuration of gas analysis
			 Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configuration of WLAN settings Administration (define access code, reset measuring device)
Diagnostics		 "Maintenance" role Troubleshooting: Diagnostics and elimination of process and device errors Measured value simulation 	 Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device Measured values Contains all current measured values. Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values Heartbeat Technology The functionality of the device is checked on demand and the verification results are documented. Simulation Used to simulate measured values or output values.
Expert	Function- oriented	 Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	 Contains all of the device parameters and allows direct access to these by means of an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-level device parameters that do not affect measurement or measured value communication Sensor Configuration of the measurement Input Configuration of the status input Output Configuration of the analog current outputs as well as the pulse/frequency and switch output Communication Configuration of the digital communication interface and the web server Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to operating menu via local display

8.3.1 Operational display

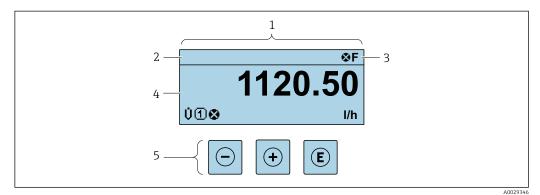

- 1 Operational display
- 2 Device tag $\rightarrow \square 82$
- 3 Status area
- 4 Display range for measured values (up to 4 lines)
- 5 Operating elements $\rightarrow \square 58$


Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 139
 - F: Failure
 - **C**: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior $\rightarrow \square 140$
 - 🛛 🐼: Alarm
 - <u>M</u>: Warning
- 🛱: Locking (the device is locked via the hardware)
- •: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

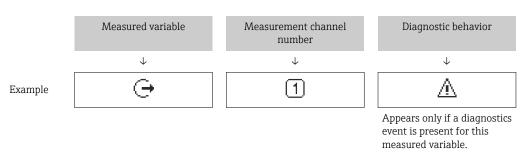

Measured variables

Symbol	Meaning
Ü	Volume flowCorrected volume flow
'n	Mass flow

C	Sound velocity
р	Pressure
Р	Energy flow
む	Flow velocity
4	Temperature
М	Wobbe index
σ	Methane fraction
М	Molar mass
ρ	DensityReference density
η	Dynamic viscosity
Н	Calorific value
SNR	Signal to noise ratio
1/4	Acceptance rate
A	Asymmetry
Т	Turbulence
∎∎	Signal strength

The number and display format of the measured variables can be configured via the Format display parameter ($\Rightarrow \cong 101$).

Totalizer

Symbol	Meaning
Σ	Totalizer The measurement channel number indicates which of the three totalizers is displayed.

Output

Symbol	Meaning
Ģ	Output Image: Description of the state

Input

Symbol	Meaning
Ð	Status input


Measurement channel numbers

Symbol	Meaning
14	Measurement channel 1 to 4 The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1 to 3).

Diagnostic behavior

Symbol	Meaning
8	 Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
Δ	Warning • Measurement is resumed. • The signal outputs and totalizers are not affected. • A diagnostic message is generated.

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.

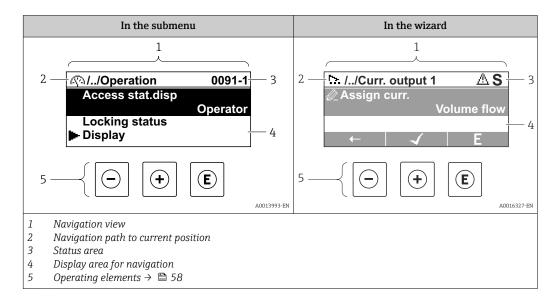


8.3.2 Navigation view

Navigation path

The navigation path to the current position is displayed at the top left in the navigation view and consists of the following elements:

- The display symbol for the menu/submenu (▶) or the wizard (▷).
- An omission symbol (/ ../) for operating menu levels in between.
- Name of the current submenu, wizard or parameter

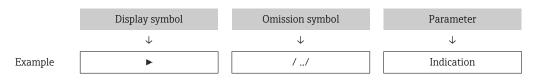

For more information about the icons in the menu, refer to the "Display area" section $\rightarrow \blacksquare 54$

Status area

The following appears in the status area of the navigation view in the top right corner: In the submenu

- The direct access code to the parameter (e.g., 0022-1) • If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal
 - For information on the diagnostic behavior and status signal \rightarrow 🖺 139
 - For information on the function and entry of the direct access code $\rightarrow \cong 60$

Display area

Menus

Symbol	Meaning
Ø	 Operation Is displayed: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu

ىر	 Setup Is displayed: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
પ્	 Diagnosis Is displayed: In the menu next to the "Diagnostics" selection At the left in the navigation path in the Diagnostics menu
-} *	Expert Is displayed: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
►	Submenu
₩.	Wizards
<i>©</i>	Parameters within a wizard Image: No display symbol exists for parameters in submenus.

Locking procedure


Symbol	Meaning
ô	Parameter lockedWhen displayed in front of a parameter name, indicates that the parameter is locked.By a user-specific access codeBy the hardware write protection switch

Wizards

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

8.3.3 Editing view


Numeric editor

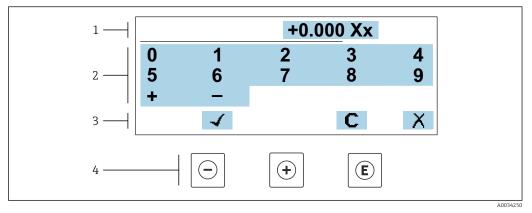

☑ 23 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

Text editor

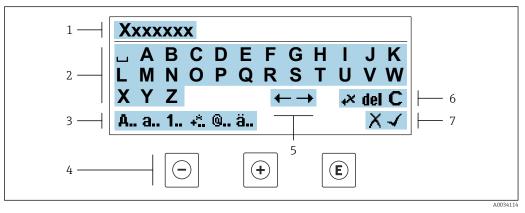

■ 24 For entering text in parameters (e.g. device tag)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

Using the operating elements in the editing view

Operating key	Meaning
\bigcirc	Minus key Move the entry position to the left.
+	Plus key Move the entry position to the right.

Operating key	Meaning
E	Enter keyPressing the key briefly confirms your selection.Pressing the key for 2 s confirms your entry.
-++	Escape key combination (press keys simultaneously) Close the editing view without accepting a change.

Input screens

Symbol	Meaning
A	Upper case
а	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + - * / ^{2 3} $\frac{1}{4}$ $\frac{1}{2}$ $\frac{3}{4}$ () [] < > { }
@	Punctuation marks and special characters: '" `^. , ; : ? ! % μ ° \in \$ £ ¥ § @ # / \ I ~ & _
ä	Umlauts and accents

Controlling data entries

Symbol	Meaning
←→	Move entry position
X	Reject entry
4	Confirm entry
ו	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
С	Clear all the characters entered

Immenu. submenu Minus key Immenu. submenu Moves the selection bar upwards in a picklist Imwards Goes to previous parameter In the text and numeric editor Moves the entry position to the left. Plus key In menu, submenu Moves the selection bar downwards in a picklist In wizards Goes to the next parameter In the text and numeric editor Moves the entry position to the right. Enter key In the operational display Pressing the key briefly: • Opens the selected menu, submenu on parameter. • Starts the wizard. • If help text is open, closes the help text of the parameter. • If help text is open, closes the help text of the parameter. • If help text is open, closes the help text of the parameter. • Pressing the key of 2 is a parameter: If present, opens the elptify: • Pressing the key briefly confirms your selection. • Pressing the key briefly confirms your selecton. • Pressing the key briefly confirms your selecton. • Pressing the key briefly confirms your selecton. • Pressing the key briefly:	Operating key	Meaning
Image: Second Secon		Minus key
Goes to previous parameter In the text and numeric editor Move the entry position to the left. Plus key In menu, submenu Moves the selection bar downwards in a picklist In wizards Goes to the next parameter In the text and numeric editor Move the entry position to the right. Enter key In the operational display Pressing the key briefly: • Opens the selected menu, submenu or parameter. • Starts the wizard. • If help text is open, closes the help text of the parameter. • Starts the wizard. • If help text is open, closes the help text of the parameter. In wizards Opens the selection and solutor Opens the selected menu, submenu or parameter. If help text is open, closes the help text of the parameter. In wizards Opens the selection prevision to the parameter and confirms the parameter value. In the text and numeric editor • Pressing the key briefly: • Escape key combination (press keys simultaneously) In menu, submenu • Pressing the key for 2 s returns you to the operational display ("home position").	\bigcirc	
Image: Second Secon		in the data de
 In menu, submenu Moves the selection bar downwards in a picklist In wizards Goes to the next parameter In the text and numeric editor Move the entry position to the right. Enter key In the operational display Pressing the key briefly opens the operating menu. In menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s in a parameter: If present, opens the help text for the function of the parameter. In wizards Opens the editing view of the parameter and confirms the parameter value In the text and numeric editor Pressing the key briefly: Pressing the key briefly confirms your selection. Pressing the key briefly: Escape key combination (press keys simultaneously) In menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). In wizards Exits the wizard and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). In wizards Exits the wizard and takes you to the next higher level In the text and numeric editor Exits the Editing view without applying the changes. Winus/Enter key combination (press and hold down the keys simultaneously) If keypad lock is active: Pressing the key for 3 s opens the context menu including the option for activating the Pressing the key for		
Image: Solution of the second sec		Plus key
Goes to the next parameter In the text and numeric editor Move the entry position to the right. Enter key In the operational display Pressing the key briefly opens the operating menu. In menu, submenu Pressing the key briefly: • Opens the selected menu, submenu or parameter. • Starts the wizard. • If help text is open, closes the help text of the parameter. If present, opens the help text for the function of the parameter. In vizards Opens the editing view of the parameter and confirms the parameter value In the text and numeric editor • Pressing the key briefly confirms your selection. • Pressing the key for 2 s confirms your entry. Escape key combination (press keys simultaneously) In menu, submenu • Pressing the key briefly: • Exits the current menu level and takes you to the next higher level. • If help text is open, closes the help text of the parameter. • Pressing the key for 2 s returns you to the operational display ("home position"). In menu, submenu • Pressing the key for 2 s returns you to the operational display ("home position"). In the text and numeric editor Exits the wizard and takes you to the ne		
Move the entry position to the right. Enter key In the operational display Pressing the key briefly opens the operating menu. In menu, submenu • Pressing the key briefly: • Opens the selected menu, submenu or parameter. • Starts the wizard. • If help text is open, closes the help text of the parameter. • Pressing the key for 2 s in a parameter: If present, opens the help text for the function of the parameter. In wizards Opens the editing view of the parameter and confirms the parameter value In the text and numeric editor • Pressing the key briefly confirms your selection. • Pressing the key briefly: • Escape key combination (press keys simultaneously) In menu, submenu • Pressing the key briefly: • Escape key complication (press keys simultaneously) In menu, submenu • Pressing the key briefly: • Estis the current menu level and takes you to the next higher level. • If help text is open, closes the help text of the parameter. • Pressing the key for 2 s returns you to the operational display ('home position'). In wizards Exits the wizard and takes you to the next higher level In t		
 In the operational display Pressing the key briefly opens the operating menu. In menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard.		
 Pressing the key briefly opens the operating menu. In menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s in a parameter:		Enter key
 Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s in a parameter:		
Opens the editing view of the parameter and confirms the parameter value In the text and numeric editor • Pressing the key briefly confirms your selection. • Pressing the key for 2 s confirms your entry. Escape key combination (press keys simultaneously) In menu, submenu • Pressing the key briefly: • Exits the current menu level and takes you to the next higher level. • If help text is open, closes the help text of the parameter. • Pressing the key for 2 s returns you to the operational display ("home position"). In wizards Exits the wizard and takes you to the next higher level In the text and numeric editor Exits the Editing view without applying the changes. Minus/Enter key combination (press and hold down the keys simultaneously) • If keypad lock is active: Pressing the key for 3 s deactivates the keypad lock. • If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the	E	 Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s in a parameter:
 Pressing the key briefly confirms your selection. Pressing the key for 2 s confirms your entry. Escape key combination (press keys simultaneously) In menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). In wizards Exits the wizard and takes you to the next higher level In the text and numeric editor Exits the Editing view without applying the changes. If keypad lock is active:		
 In menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). In wizards Exits the wizard and takes you to the next higher level In the text and numeric editor Exits the Editing view without applying the changes. Minus/Enter key combination (press and hold down the keys simultaneously) If keypad lock is active: Pressing the key for 3 s deactivates the keypad lock. If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the 		 Pressing the key briefly confirms your selection.
 Pressing the key briefly: Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). In wizards Exits the wizard and takes you to the next higher level In the text and numeric editor Exits the Editing view without applying the changes. Minus/Enter key combination (press and hold down the keys simultaneously) If keypad lock is active: Pressing the key for 3 s deactivates the keypad lock. If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the 		Escape key combination (press keys simultaneously)
Exits the wizard and takes you to the next higher level In the text and numeric editor Exits the Editing view without applying the changes. Minus/Enter key combination (press and hold down the keys simultaneously) • If keypad lock is active: Pressing the key for 3 s deactivates the keypad lock. • If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the	⊝+⊕	 Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter.
Exits the Editing view without applying the changes. Minus/Enter key combination (press and hold down the keys simultaneously) If keypad lock is active: Pressing the key for 3 s deactivates the keypad lock. If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the		
 If keypad lock is active: Pressing the key for 3 s deactivates the keypad lock. If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the 		
Pressing the key for 3 s deactivates the keypad lock. If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the		Minus/Enter key combination (press and hold down the keys simultaneously)
	- + E	Pressing the key for 3 s deactivates the keypad lock.If keypad lock is not active: Pressing the key for 3 s opens the context menu including the option for activating the

8.3.4 Operating elements

8.3.5 Opening the context menu

Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

A0034608-EN

Calling up and closing the context menu

The user is in the operational display.

- **1.** Press the \Box and \blacksquare keys for longer than 3 seconds.
 - └ The context menu opens.

XXXXXXXXX		
	Setup	
	Conf.backup	
	Simulation	
	Keylock on	

2. Press - + + simultaneously.

└ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.

2. Press \pm to navigate to the desired menu.

3. Press 🗉 to confirm the selection.


└ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\rightarrow \cong 54$

Example: Setting the number of displayed measured values to "2 values"

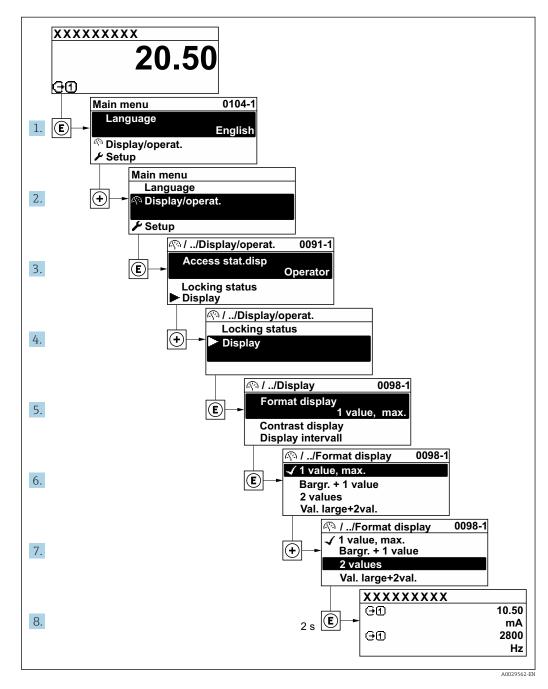


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

Expert \rightarrow Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

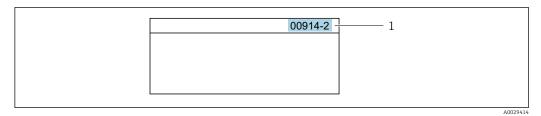

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter **"914"** instead of **"00914"**
- If no channel number is entered, channel 1 is opened automatically.
- Example: Enter $00914 \rightarrow Assign \ process \ variable$ parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.

Example: Enter 00914-2 \rightarrow Assign process variable parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press E for 2 s.

← The help text for the selected parameter opens.

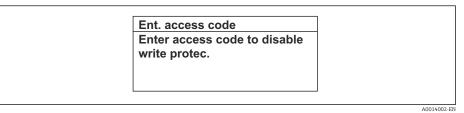

- 25 Example: Help text for parameter "Enter access code"
- 2. Press + + simultaneously.
 - └ The help text is closed.

8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.Text editor: Enter text in a parameter, e.g. tag name.
- A message is displayed if the value entered is outside the permitted value range.

Ent. access code
nvalid or out of range inpu
value
/lin:0
Max:9999

For a description of the editing view - consisting of the text editor and numeric editor - with symbols → 🗎 56, for a description of the operating elements → 🗎 58

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access $\rightarrow \cong 118$.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
 - └ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ ¹⁾

Access authorization to parameters: "Maintenance" user role

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	_ 1)

1) Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection as they do not affect the measurement: write protection via access code $\rightarrow \implies 118$

The user role with which the user is currently logged on is indicated by the Access status parameter. Navigation path: Operation \rightarrow Access status

8.3.11 Disabling write protection via access code

If the \mathbb{B} -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation $\rightarrow \mathbb{B}$ 118.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ($\rightarrow \square 106$) via the respective access option.

1. After you press , the input prompt for the access code appears.

2. Enter the access code.

➡ The B -symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.

Press the \Box and \blacksquare keys for 3 seconds.

└ A context menu appears.

- 2. In the context menu select the **Keylock on** option.
 - └ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

Switching off the keypad lock

8.4 Access to operating menu via web browser

8.4.1 Function range

With the integrated web server, the device can be operated and configured via a web browser service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

For additional information on the web server, see the Special Documentation for the device. $\rightarrow \cong 191$

8.4.2 Requirements

Computer hardware

Hardware	Interface		
	CDI-RJ45	WLAN	
Interface	The computer must have a RJ45 interface. ¹⁾	The operating unit must have a WLAN interface.	
Connection	Standard Ethernet cable	Connection via Wireless LAN.	
Screen	Recommended size: ≥12" (depends on the screen resolution)		

1) Recommended cable: CAT5e, CAT6 or CAT7, with shielded plug (e.g. YAMAICHI product; part no. Y-ConProfixPlug63/Prod. ID: 82-006660)

Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	 Microsoft Windows 8 or higher. Mobile operating systems: iOS Android Microsoft Windows XP and Window 	ws 7 is supported.
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari 	

Computer settings

Settings	Interface	
	CDI-RJ45	WLAN
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (e.g. for adjusting the IP address, subnet mask etc.).	
Proxy server settings of the web browser	The web browser setting <i>Use a proxy server for your LAN</i> must be disabled .	
JavaScript	JavaScript must be enabled.	JavaScript must be enabled.
	If JavaScript cannot be enabled: Enter http://192.168.1.212/servlet/ basic.html in the address bar of the web browser. A fully functional but simplified version of the operating menu structure starts in the web browser.	The WLAN display requires JavaScript support.
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) under Internet options in the web browser.	
Network connections	Only use the active network connections to the measuring device.	
	Switch off all other network connections such as WLAN for example.	Switch off all other network connections.

136 In the event of connection problems: $\rightarrow \cong 136$

Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface	
Measuring device	The measuring device has an RJ45 interface.	
Web server	Web server must be enabled; factory setting: ON	
	For information on enabling the Web server $\rightarrow \square 69$	

Measuring device: via WLAN interface

Device	WLAN interface
Measuring device	The measuring device has a WLAN antenna: • Transmitter with integrated WLAN antenna • Transmitter with external WLAN antenna
Web server	 Web server and WLAN must be enabled; factory setting: ON i For information on enabling the Web server → 69

8.4.3 Connecting the device

Via service interface (CDI-RJ45)

Preparing the measuring device

Proline 500 – digital

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- **3.** The location of the connection socket depends on the measuring device and the communication protocol.

Connect the computer to the RJ45 plug via the standard Ethernet cable .

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

- 1. Switch on the measuring device.
- **2.** Connect the computer to the RJ45 plug via the standard Ethernet cable $\rightarrow \triangleq$ 70.
- 3. If a 2nd network card is not used, close all the applications on the notebook.
 - ← Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- 5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

Note the following to avoid a network conflict:

- ► Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH_Prosonic Flow_500_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:

Serial number of the measuring device ex-works (e.g. L100A802000).

- └ The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Terminating the WLAN connection


 After configuring the device: Terminate the WLAN connection between the mobile terminal and measuring device.

Starting the web browser

1. Start the web browser on the computer.

2. Enter the IP address of the web server in the address line of the web browser: 192.168.1.212

└ The login page appears.

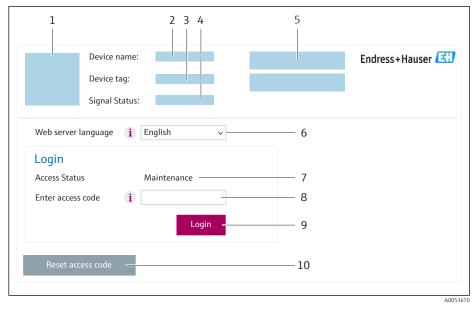

- 1 Picture of device
- 2 Device name
- 3 Device tag4 Status sign
- 4 Status signal
 5 Current measured valu
- 5 Current measured values6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ($\rightarrow \square 115$)

If a login page does not appear, or if the page is incomplete $\rightarrow \square 136$

8.4.4 Logging on

1. Select the preferred operating language for the Web browser.


2. Enter the user-specific access code.

3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

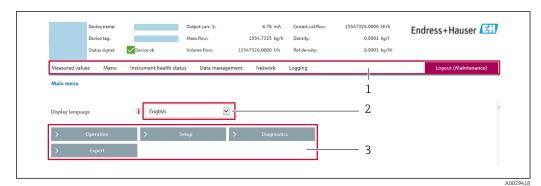

- 1 Function row
- 2 Local display language
- 3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal $\rightarrow \implies 142$
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the device
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the local display Detailed information on the operating menu structure: Description of Device Parameters
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	 Data exchange between computer and measuring device: Device configuration: Load settings from the device (XML format, save configuration) Save settings to the device (XML format, restore configuration) Logbook - Export Event logbook (.csv file) Documents - Export documents: Export backup data record (.csv file, create documentation of the measuring point configuration) Verification report (PDF file, only available with the "Heartbeat Verification" application package)
Network	 Configuration and checking of all the parameters required for establishing the connection to the measuring device: Network settings (e.g. IP address, MAC address) Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

The menus, the associated submenus and parameters can be selected in the navigation area.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the Web server functionality parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	OffHTML OffOn	On

Function scope of the "Web server functionality" parameter

Option	Description
Off	The Web server is completely disabled.Port 80 is locked.
On	 The complete Web server functionality is available. JavaScript is used. The password is transferred in an encrypted state. Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:


- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

Before logging out, perform a data backup via the **Data management** function -(upload configuration from device) if necessary.



- 1. Select the **Logout** entry in the function row.
 - └ The home page with the Login box appears.

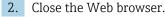

3. If no longer needed:

Reset the modified properties of the Internet protocol (TCP/IP) $\rightarrow \textcircled{B}$ 65.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus RS485 output.

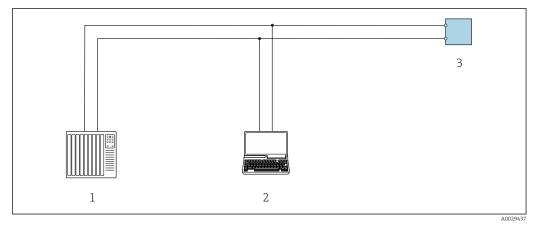

■ 26 Options for remote operation via Modbus RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

Service interface

Via service interface (CDI-RJ45)


A point-to-point connection can be established to configure the device on site. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area:

Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.

Proline 500 – digital transmitter

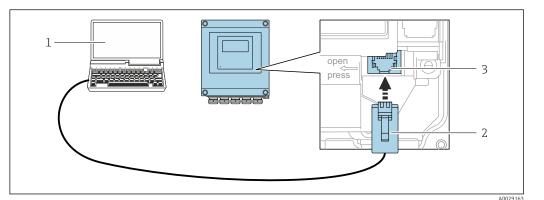


■ 27 Connection via service interface (CDI-RJ45)

- 1 Computer with web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) to access the integrated web server or with an operating tool "FieldCare", "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated web server

Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

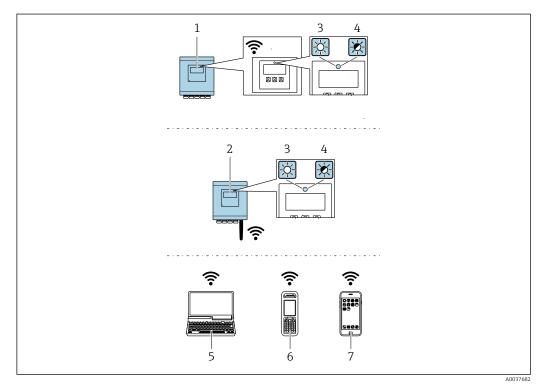

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	 Internal antenna External antenna (optional) In the event of poor transmission/reception conditions at the place of installation. Only 1 antenna is active at any one time!
Range	 Internal antenna: typically 10 m (32 ft) External antenna: typically 50 m (164 ft)
Materials (external antenna)	 Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass Adapter: Stainless steel and nickel-plated brass Cable: Polyethylene Plug: Nickel-plated brass Angle bracket: Stainless steel

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

► Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

Note the following to avoid a network conflict:

- ► Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH_Prosonic Flow_500_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:
 - Serial number of the measuring device ex-works (e.g. L100A802000).
 - ➡ The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
 - The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Terminating the WLAN connection

 After configuring the device: Terminate the WLAN connection between the mobile terminal and measuring device.

8.5.2 FieldCare

Function range

FDT-based (Field Device Technology) plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.


Access is via:

- CDI-RJ45 service interface \rightarrow \cong 70
- WLAN interface \rightarrow \cong 71


Typical functions:

- Transmitter parameter configuration
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

Operating Instructions BA00027S
 Operating Instructions BA00059S

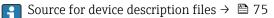

Establishing a connection

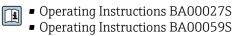

3 4 5 6 7 2 10 - 10 Xxxxxx/.../.../ Device name Xxxxxxx kg/h Mass flow: 2 12.34 Device tag: Xxxxxx Volume flow: *C* 12.34 1 m³/h 🔇 🔽 Good Status: 🖸 📝 ピ 🎯 D Xxxxxx kg/h 🔽 Mass flow unit: --P Access status tooling Maintenance m³/h 🔽 Volume flow unit: 🖶 🗂 Operation 🖶 🗁 🛱 -P Device tag Xxxxxx ---P System units kg/h 9 8 Volume flow unit m³/h 🗄 … 🛅 Select medium <u>⊫</u> ... ⊟ •--. ⊞…. ☐ Advanced setup · Diagnostics --- Expert Ė٩.

User interface

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal $\rightarrow \square 142$

11

10

- 6 Display area for current measured values
- 7 Editing toolbar with additional functions such as save/load, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Work area
- 10 Action area
- 11 Status area

8.5.3 DeviceCare

Function range

Tool for connecting and configuring Endress+Hauser field devices.

🎎 | 🔲 | User Role: Planning engin

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

Innovation brochure IN01047S

Source for device description files $\rightarrow \square 75$

A0021051-EN

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware Version	01.02.zz	 On the title page of the manual On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	01.2024	

For an overview of the various firmware versions for the device $\rightarrow \cong 156$

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via service interface (CDI) or Modbus interface	Sources for obtaining device descriptions
FieldCare	 www.endress.com → Downloads area USB stick (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	 www.endress.com → Downloads area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)

9.2 Modbus RS485 information

9.2.1 Function codes

Function codes are used to define which read or write action is carried out via the Modbus protocol. The measuring device supports the following function codes:

Code	Name	Description	Application
03	Read holding register	Master reads one or more Modbus registers from the device. A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes	Read device parameters with read and write access Example: Read volume flow
		The measuring device does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.	
04	Read input register	Master reads one or more Modbus registers from the device. A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes The measuring device does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.	Read device parameters with read access Example: Read totalizer value
06	Write single registers	Master writes a new value to one Modbus register of the measuring device. Use function code 16 to write multiple registers with just 1 telegram.	Write only 1 device parameter Example: reset totalizer
08	Diagnostics	 Master checks the communication connection to the measuring device. The following "Diagnostics codes" are supported: Sub-function 00 = Return query data (loopback test) Sub-function 02 = Return diagnostics register 	
16	Write multiple registers	 Master writes a new value to multiple Modbus registers of the device. A maximum of 120 consecutive registers can be written with 1 telegram. If the required device parameters are not available as a group, yet must nevertheless be addressed with a single telegram, use Modbus data map →	Write multiple device parameters
23	Read/Write multiple registers	Master reads and writes a maximum of 118 Modbus registers of the measuring device simultaneously with 1 telegram. Write access is executed before read access.	Write and read multiple device parameters Example: • Read mass flow • Reset totalizer



Broadcast messages are only allowed with function codes 06, 16 and 23.

9.2.2 Register information

For an overview of device parameters and their corresponding Modbus register information, refer to the "Modbus RS485 register information" section in the "Description of device parameters" documentation $\rightarrow \cong 191$.

9.2.3 Response time

Response time of the measuring device to the request telegram of the Modbus master: typically 3 to 5 ms

9.2.4 Data types

The measuring device supports the following data types:

FLOAT (floating po Data length = 4 byt	int number IEEE 754) es (2 registers)		
Byte 3 Byte 2 Byte 1 Byte 0			
SEEEEEE EMMMMMMM MMMMMMMMMMMMMMMMMMMMMM			
S = sign, E = exponent, M = mantissa			

INTEGER Data length = 2 bytes (1 register)	
Byte 1	Byte 0
Most significant byte (MSB)	Least significant byte (LSB)

STRING

Data length = depends on the device parameter, e.g. presentation of a device parameter with a data length = 18 bytes (9 registers)

Byte 17	Byte 16	 Byte 1	Byte 0
Most significant byte (MSB)			Least significant byte (LSB)

9.2.5 Byte transmission sequence

Byte addressing, i.e. the transmission sequence of the bytes, is not specified in the Modbus specification. For this reason, it is important to coordinate or match the addressing method between the master and slave during commissioning. This can be configured in the measuring device using the **Byte order** parameter.

The bytes are transmitted depending on the selection in the **Byte order** parameter:

FLOAT				
	Sequence	Sequence		
Options	1.	2.	3.	4.
1-0-3-2*	Byte 1	Byte 0	Byte 3	Byte 2
	(MMMMMMMM)	(MMMMMMMM)	(SEEEEEEE)	(EMMMMMMM)
0 - 1 - 2 - 3	Byte 0	Byte 1	Byte 2	Byte 3
	(MMMMMMMM)	(MMMMMMMM)	(EMMMMMMM)	(SEEEEEEE)
2 - 3 - 0 - 1	Byte 2	Byte 3	Byte 0	Byte 1
	(EMMMMMMM)	(SEEEEEEE)	(MMMMMMM)	(MMMMMMM)
3 - 2 - 1 - 0	Byte 3	Byte 2	Byte 1	Byte 0
	(SEEEEEEE)	(EMMMMMMM)	(MMMMMMMM)	(MMMMMMMM)
* = factory setting, S = sign, E = exponent, M = mantissa				

* = factory setting, S = sign, E = exponent, M = mantissa

INTEGER		
	Sequence	
Options	1.	2.

1 - 0 -3-2*	Byte 1	Byte 0
3-2- 1 - 0	(MSB)	(LSB)
0 - 1 - 2 - 3	Byte 0	Byte 1
2 - 3 - 0 - 1	(LSB)	(MSB)
* = factory setting MSB = mos	st significant byte ISB = least signi	icant byte

* = factory setting, MSB = most significant byte, LSB = least significant byte

STRING Presentation taking the example of a device parameter with a data length of 18 bytes.					
	Sequence				
Options	1.	2.		17.	18.
1 - 0 -3-2* 3-2- 1 - 0	Byte 17 (MSB)	Byte 16		Byte 1	Byte 0 (LSB)
0 - 1 - 2 - 3 2 - 3 - 0 - 1	Byte 16	Byte 17 (MSB)		Byte 0 (LSB)	Byte 1
* = factory setting, MSB = most significant byte, LSB = least significant byte					

9.2.6 Modbus data map

Function of the Modbus data map

The device offers a special memory area, the Modbus data map (for a maximum of 16 device parameters), to allow users to call up multiple device parameters via Modbus RS485 and not only individual device parameters or a group of consecutive device parameters.

Grouping of device parameters is flexible and the Modbus master can read or write to the entire data block simultaneously with a single request telegram.

Structure of the Modbus data map

The Modbus data map consists of two data sets:

- Scan list: Configuration area
 - The device parameters to be grouped are defined in a list by entering their Modbus RS485 register addresses in the list.
- Data area

The measuring device reads out the register addresses entered in the scan list cyclically and writes the associated device data (values) to the data area.

For an overview of device parameters and their corresponding Modbus register information, refer to the "Modbus RS485 register information" section in the "Description of device parameters" documentation $\rightarrow \square$ 191.

Scan list configuration

For configuration, the Modbus RS485 register addresses of the device parameters to be grouped must be entered in the scan list. Please note the following basic requirements of the scan list:

Max. entries	16 device parameters
Supported device parameters	Only parameters with the following characteristics are supported:Access type: read or write accessData type: float or integer

Configuration of the scan list via FieldCare or DeviceCare

Carried out using the operating menu of the measuring device: Expert \rightarrow Communication \rightarrow Modbus data map \rightarrow Scan list register 0 to 15

Scan list	
No.	Configuration register
0	Scan list register 0
15	Scan list register 15

Configuration of the scan list via Modbus RS485

Carried out using register addresses 5001 - 5016

Scan list	Scan list				
No.	Modbus RS485 register	Data type	Configuration register		
0	5001	Integer	Scan list register 0		
		Integer			
15	5016	Integer	Scan list register 15		

Reading out data via Modbus RS485

The Modbus master accesses the data area of the Modbus data map to read out the current values of the device parameters defined in the scan list.

Master access to data area	Via register addresses 5051-5081
----------------------------	----------------------------------

Data area					
Device parameter value	Modbus RS485	Modbus RS485 register		Access**	
	Start register	End register (Float only)			
Value of scan list register 0	5051	5052	Integer/float	Read/write	
Value of scan list register 1	5053	5054	Integer/float	Read/write	
Value of scan list register					
Value of scan list register 15	5081	5082	Integer/float	Read/write	
* Data type depends on the device parameters entered in the scan list					

* Data type depends on the device parameters entered in the scan list.

****** Data access depends on the device parameters entered in the scan list. If the device parameter entered supports read and write access, the parameter can also be accessed via the data area.

10 Commissioning

10.1 Post-mounting and post-connection check

Before commissioning the device:

- Make sure that the post-installation and post-connection checks have been performed successfully.
- Checklist for "Post-mounting" check \rightarrow \cong 28
- Checklist for "Post-connection check" $\rightarrow \cong 47$


10.2 Switching on the measuring device

- Switch on the device upon successful completion of the post-mounting and postconnection check.
 - ← After a successful startup, the local display switches automatically from the startup display to the operational display.

If nothing appears on the local display or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" $\rightarrow \cong 135$.

10.3 Setting the operating language


Factory setting: English or ordered local language

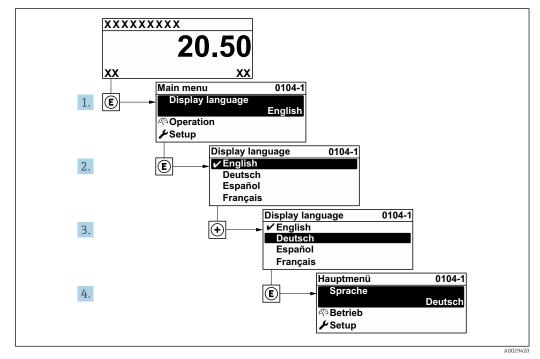

E 28 Taking the example of the local display

10.4 Configuring the measuring device

The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.

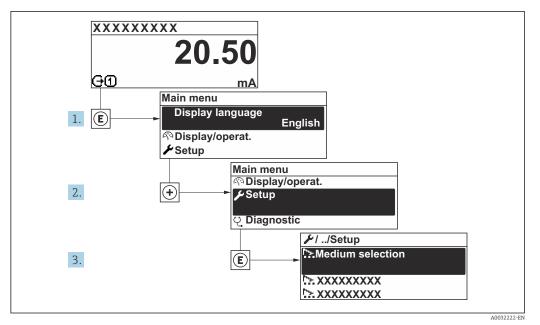


29 Navigation to "Setup" menu using the example of the local display

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

Navigation


"Setup" menu

🖌 Setup		
► System units	$] \rightarrow$	₿ 82
► Communication] →	₿ 84
► I/O configuration] →	🖹 85
► Status input 1 to n] →	87
► Current input 1 to n) →	86
► Current output 1 to n] →	88
Pulse/frequency/switch output 1 to n] →	₿ 91
► Relay output 1 to n] →	🗎 97
► Double pulse output] →	🗎 99
► Display] →	₿ 100

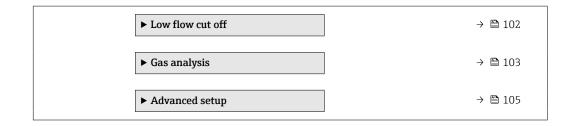

10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

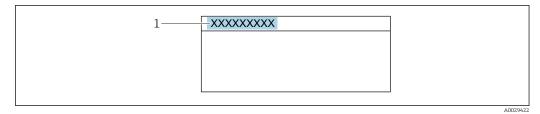

■ 30 Header of the operational display with tag name

1 Tag name

Enter the tag name in the "FieldCare" operating tool \rightarrow 🗎 74

Navigation

"Setup" menu \rightarrow Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag

10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Navigation

"Setup" menu → System units

► System units	
Volume flow unit	→ 🗎 83
Volume unit	→ 🗎 83
Corrected volume flow unit	→ 🗎 83
Corrected volume unit	→ 🗎 83

Mass flow unit	}
Mass unit	→ 🗎 83
Velocity unit	→ 🗎 83
Temperature unit	→ 🗎 84
Pressure unit	→ 🗎 84
Density unit	→ 🖹 84
Energy unit) → 🗎 84
Calorific value unit) → 🗎 84
Energy flow unit) → 🗎 84
Energy now unit	7 🗏 04

Parameter	Description	Selection	Factory setting
Volume flow unit	Select volume flow unit. <i>Effect</i> The selected unit applies to: Output Low flow cut off Simulation process variable	Unit choose list	Depends on country: • m³/h • ft³/h
Volume unit	Select volume unit.	Unit choose list	Depends on country: • m ³ • ft ³
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: • Nm ³ /h • Sft ³ /h
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: • Nm ³ • Sft ³
Mass flow unit	Select mass flow unit. Result The selected unit applies to: Output Low flow cut off Simulation process variable	Unit choose list	Depends on country: • kg/h • lb/h
Mass unit	Select mass unit.	Unit choose list	Country-specific: • kg • lb
Velocity unit	Select velocity unit. <i>Effect</i> The selected unit applies for: • Flow velocity • Sound velocity • Maximum value • Minimum value	Unit choose list	Country-specific: • m/s • ft/s

Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. <i>Effect</i> The selected unit applies for: • Temperature • Maximum value • Minimum value	Unit choose list	Country-specific: • °C • °F
Pressure unit	Select process pressure unit. <i>Effect</i> The selected unit applies to: Process pressure parameter (5640)	Unit choose list	Depends on country: • bar • psi
Density unit	Select density unit. <i>Effect</i> The selected unit applies for: • Output • Simulation process variable	Unit choose list	Country-specific: • kg/m ³ • lb/ft ³
Energy unit	Select energy unit.	Unit choose list	Country-specific: • kWh • Btu
Calorific value unit	Select calorific value unit. <i>Result</i> The selected unit applies for: • Calorific value • Wobbe index	Unit choose list	Country-specific: • kWh/Nm ³ • Btu/Sft ³
Energy flow unit	Select energy flow unit.	Unit choose list	Country-specific: • kW • Btu/h

10.4.3 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation

"Setup" menu \rightarrow Communication

► Communication	
Bus address	→ 🗎 85
Baudrate	→ 🗎 85
Data transfer mode	→ 🗎 85
Parity	→ 🗎 85
Byte order	→ 🗎 85
Failure mode	→ 🗎 85

Parameter	Description	User entry / Selection	Factory setting
Bus address	Enter device address.	1 to 247	247
Baudrate	Define data transfer speed.	 1200 BAUD 2400 BAUD 4800 BAUD 9600 BAUD 19200 BAUD 38400 BAUD 57600 BAUD 115200 BAUD 230400 BAUD 	19200 BAUD
Data transfer mode	Select data transfer mode.	ASCIIRTU	RTU
Parity	Select parity bits.	 Picklist ASCII option: 0 = Even option 1 = Odd option Picklist RTU option: 0 = Even option 1 = Odd option 2 = None / 1 stop bit option 3 = None / 2 stop bits option 	Even
Byte order	Select byte transmission sequence.	 0-1-2-3 3-2-1-0 1-0-3-2 2-3-0-1 	1-0-3-2
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication. NaN ¹⁾	NaN valueLast valid value	NaN value

1) Not a Number

10.4.4 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu \rightarrow I/O configuration

► I/O configuration	
I/O module 1 to n terminal numbers) → 🗎 86
I/O module 1 to n information) → 🗎 86
I/O module 1 to n type) → 🗎 86
Apply I/O configuration] → 🗎 86
I/O alteration code) → 🗎 86

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	 Not used 26-27 (I/O 1) 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
I/O module 1 to n information	Shows information of the plugged I/O module.	 Not plugged Invalid Not configurable Configurable MODBUS 	-
I/O module 1 to n type	Shows the I/O module type.	 Off Current output * Current input * Status input * Pulse/frequency/switch output * 	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	NoYes	No
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0

* Visibility depends on order options or device settings

10.4.5 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu \rightarrow Current input

► Current input 1 to n	
Terminal number] → 🗎 87
Signal mode] → 🗎 87
0/4 mA value] → 🖺 87
20 mA value] → 🗎 87
Current span] → 🗎 87
Failure mode] → 🗎 87
Failure value] → 🖺 87

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	PassiveActive	Active
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA (420.5 mA) 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 020 mA (020.5 mA) 	Country-specific: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA)
Failure mode	-	Define input behavior in alarm condition.	AlarmLast valid valueDefined value	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

10.4.6 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu \rightarrow Status input 1 to n

► Status input 1 to n	
Assign status input) → 🗎 88
Terminal number) → 🗎 88
Active level) → 🗎 88
Terminal number) → 🗎 88
Response time status input) → 🗎 88
Terminal number] → 🖺 88

Parameter	Description	Selection / User interface / User entry	Factory setting
Assign status input	Select function for the status input.	 Off Reset totalizer 1 Reset totalizer 2 Reset totalizer 3 Reset all totalizers Flow override 	Off
Terminal number	Shows the terminal numbers used by the status input module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Active level	Define input signal level at which the assigned function is triggered.	HighLow	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

10.4.7 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu \rightarrow Current output

► Current output 1 to n	
Terminal number] → 🗎 89
Signal mode] → 🗎 89
Process variable current output) → 🖺 89
Current range output] → 🗎 89
Lower range value output] → 🖺 89
Upper range value output] → 🖺 89
Fixed current] → 🖺 89
Damping current output) → 🗎 90
Failure behavior current output] → 🗎 90
Failure current] → 🗎 90

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Signal mode	-	Select the signal mode for the current output.	PassiveActive	Active
Process variable current output	-	Select the process variable for the current output.	 Off * Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction * Molar mass* Density Dynamic viscosity* Calorific value* Wobbe index* Energy flow Signal strength Signal to noise ratio* Acceptance rate* Turbulence* Flow asymmetry* Electronics temperature 	Volume flow
Current range output	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 420 mA (420.5 mA) 020 mA (020.5 mA) Fixed value 	Depends on country: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA)
Lower range value output	In Current span parameter (→ ≧ 89), one of the following options is selected: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (420.5 mA) • 020 mA (020.5 mA)	Enter lower range value for the measured value range.	Signed floating-point number	Depends on country: • m ³ /h • ft ³ /h
Upper range value output	In Current span parameter (→ ■ 89), one of the following options is selected: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (420.5 mA) • 020 mA (020.5 mA)	Enter upper range value for the measured value range.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The Fixed current option is selected in the Current span parameter ($\rightarrow \square 89$).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Damping current output	A process variable is selected in the Assign current output parameter (→ B 89) and one of the following options is selected in the Current span parameter (→ B 89): • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (420.5 mA) • 020 mA (020.5 mA)	Enter time constant for output damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.	0.0 to 999.9 s	1.0 s
Failure behavior current output	A process variable is selected in the Assign current output parameter (→ 🗎 89) and one of the following options is selected in the Current span parameter (→ 🗎 89): • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (420.5 mA) • 020 mA (020.5 mA)	Select output behavior in the event of a device alarm.	 Min. Max. Last valid value Actual value Fixed value 	Max.
Failure current	The Defined value option is selected in the Failure mode parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

* Visibility depends on order options or device settings

10.4.8 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Pulse/frequency/switch output

Pulse/frequency/switch output 1 to n	
Operating mode	→ 🗎 91

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse

Configuring the pulse output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode	→ 🗎 92
Terminal number	→ 🗎 92
Signal mode) → 🗎 92
Assign pulse output	→ 🗎 92
Pulse scaling	→ 🗎 92
Pulse width	→ 🗎 92
Failure mode	→ 🗎 92
Invert output signal) → 🗎 92

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Signal mode	-	Select the signal mode for the PFS output.	 Passive Active * Passive NE 	Passive
Assign pulse output	The Pulse option is selected in Operating mode parameter.	Select process variable for pulse output.	 Off Volume flow Corrected volume flow Mass flow Energy flow 	Off
Pulse scaling	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 91$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxdot 92$).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 91$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxdot 92$).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 91$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxdot 92$).	Select output behavior in the event of a device alarm.	Actual valueNo pulses	No pulses
Invert output signal	-	Invert the output signal.	NoYes	No

Visibility depends on order options or device settings

Configuring the frequency output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

Pulse/frequency/switch output 1 to n	
Operating mode) → 🗎 93
Terminal number) → 🗎 93
Signal mode) → 🗎 93

Assign	frequency output	-	→ 🗎 93
Minim	um frequency value	-	→ 🗎 94
Maxim	um frequency value	-	→ 🗎 94
Measur frequer	ring value at minimum Icy	-	→ 🖺 94
Measu frequer	ring value at maximum Icy	-	→ 🗎 94
Failure	mode	-	→ 🗎 94
Failure	frequency	-	→ 🖺 94
Inverto	putput signal	-	→ 🗎 94

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Signal mode	-	Select the signal mode for the PFS output.	 Passive Active * Passive NE 	Passive
Assign frequency output	The Frequency option is selected in Operating mode parameter (→ 🗎 91).	Select process variable for frequency output.	 Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction* Molar mass* Density Dynamic viscosity* Calorific value* Wobbe index* Energy flow Signal strength* Signal strength* Signal to noise ratio* Acceptance rate* Turbulence* Flow asymmetry* Electronics temperature 	Off

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Minimum frequency value	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 91$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 93$).	Enter minimum frequency.	0.0 to 10000.0 Hz	0.0 Hz
Maximum frequency value	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 91$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 93$).	Enter maximum frequency.	0.0 to 10000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 91$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 93$).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \implies 91$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \implies 93$).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The Frequency option is selected in the Operating mode parameter ($\rightarrow \implies 91$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \implies 93$).	Select output behavior in the event of a device alarm.	Actual valueDefined value0 Hz	0 Hz
Failure frequency	In the Operating mode parameter ($\rightarrow \bigcirc 91$), the Frequency option is selected, in the Assign frequency output parameter ($\rightarrow \bigcirc 93$) a process variable is selected, and in the Failure mode parameter, the Defined value option is selected.	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	NoYes	No

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode) → 🗎 95
Terminal number) → 🗎 95
Signal mode) → 🗎 95
Switch output function) → 🗎 96
Assign diagnostic behavior	→ 🗎 96
Assign limit) → 🗎 96
Assign flow direction check) → 🗎 96
Assign status) → 🗎 96
Switch-on value	→ 🗎 96
Switch-off value) → 🗎 97
Switch-on delay) → 🗎 97
Switch-off delay) → 🗎 97
Failure mode) → 🗎 97
Invert output signal) → 🗎 97

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Signal mode	-	Select the signal mode for the PFS output.	 Passive Active * Passive NE 	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	 Off On Diagnostic behavior Limit Flow direction check Status 	Off
Assign diagnostic behavior	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Diagnostic behavior option is selected. 	The output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.	 Alarm Alarm or warning Warning	Alarm
Assign limit	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Select the variable to monitor in case the specified limit value is exceeded. If a limit value is exceeded, the output is switched on (conductive).	 Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction* Molar mass* Density Dynamic viscosity* Calorific value* Wobbe index* Energy flow Signal strength* Signal to noise ratio* Acceptance rate* Turbulence* Flow asymmetry* Electronics temperature Totalizer 1 Totalizer 3 	Volume flow
Assign flow direction check	 The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	 Off Volume flow Corrected volume flow Mass flow Flow velocity Energy flow 	Volume flow
Assign status	 The Switch option is selected in the Operating mode parameter. The Status option is selected in the Switch output function parameter. 	Select the device function for which to report the status. If the function is triggered, the output is closed and conductive (standard configuration).	 Off Low flow cut off Product identification * 	Low flow cut off
Switch-on value	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter limit value for switch-on point (process variable > switch-on value = closed, conductive).	Signed floating-point number	Depends on country

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off value	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter limit value for switch-off point (process variable < switch-off value = open, nonconductive).	Signed floating-point number	Depends on country
Switch-on delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter a delay before the output is switched on.	0.0 to 100.0 s	0.0 s
Switch-off delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter a delay before the output is switched off.	0.0 to 100.0 s	0.0 s
Failure mode	-	Select output behavior in the event of a device alarm.	Actual statusOpenClosed	Open
Invert output signal	-	Invert the output signal.	NoYes	No

* Visibility depends on order options or device settings

10.4.9 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu \rightarrow Relay output 1 to n

► Relay output 1 to n	
Terminal number	→ 🗎 98
Relay output function	→ 🗎 98
Assign flow direction check	→ 🗎 98
Assign limit	→ 🗎 98
Assign diagnostic behavior	→ 🗎 99
Assign status	→ 🗎 99
Switch-off value	→ 🗎 99
Switch-off delay	→ 🗎 99

Switch-on value	→ 🗎 99
Switch-on delay	→ 🗎 99
Failure mode	→ 🗎 99
Switch state	→ 🗎 99
Powerless relay status	→ 🗎 99

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the relay output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Relay output function	-	Select the function for the relay output.	 Closed Open Diagnostic behavior Limit Flow direction check Status 	Closed
Assign flow direction check	The Flow direction check option is selected in the Relay output function parameter.	Select process variable for flow direction monitoring.	 Off Volume flow Corrected volume flow Mass flow Flow velocity Energy flow 	Volume flow
Assign limit	The Limit option is selected in the Relay output function parameter.	Select the variable to monitor in case the specified limit value is exceeded. If a limit value is exceeded, the output is switched on (conductive).	 Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction* Molar mass* Density Dynamic viscosity* Calorific value* Wobbe index* Energy flow Signal strength* Signal strength* Signal to noise ratio* Acceptance rate* Turbulence* Flow asymmetry* Electronics temperature Totalizer 1 Totalizer 3 	Volume flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	The output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.	 Alarm Alarm or warning Warning	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select the device function for which to display the status. If the switch on point is reached, the output is switched on (closed, conductive).	 Off Low flow cut off Product identification * 	Off
Switch-off value	The Limit option is selected in the Relay output function parameter.	Enter limit value for switch-off point (process variable < switch-off value = open, nonconductive).	Signed floating-point number	0 m ³ /h
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Enter a delay before the output is switched off.	0.0 to 100.0 s	0.0 s
Switch-on value	The Limit option is selected in the Relay output function parameter.	Enter measured value for the switch-on point.	Signed floating-point number	0 m ³ /h
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Enter a delay before the output is switched on.	0.0 to 100.0 s	0.0 s
Failure mode	-	Select output behavior in the event of a device alarm.	Actual statusOpenClosed	Open
Switch state	-	Indicates the current switch state of the output.	OpenClosed	-
Powerless relay status	-	Select quiescent state for relay.	 Open Closed	Open

* Visibility depends on order options or device settings

10.4.10 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

Navigation

"Setup" menu \rightarrow Double pulse output

► Double pulse output	
Signal mode	→ 🗎 100
Master terminal number	→ 🗎 100
Assign pulse output	→ 🗎 100
Measuring mode	→ 🗎 100
Value per pulse	→ 🗎 100

Pulse width) → 🗎 100
Failure mode] → 🗎 100
Invert output signal] → 🗎 100

Parameter	Description	Selection / User interface / User entry	Factory setting
Signal mode	Select the signal mode for the double pulse output.	PassiveActive*Passive NE	Passive
Master terminal number	Shows the terminal numbers used by the master of the double pulse output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Assign pulse output	Select process variable for pulse output.	 Off Volume flow Corrected volume flow Mass flow Energy flow 	Off
Measuring mode	Select measuring mode for pulse output.	 Forward flow Forward/Reverse flow Reverse flow Reverse flow compensation 	Forward flow
Value per pulse	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	Define time width of the output pulse.	0.5 to 2 000 ms	0.5 ms
Failure mode	Select output behavior in the event of a device alarm.	Actual valueNo pulses	No pulses
Invert output signal	Invert the output signal.	• No • Yes	No

* Visibility depends on order options or device settings

10.4.11 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu → Display

► Display	
Format display] → 🗎 101
Value 1 display] → 🗎 101
0% bargraph value 1] → 🗎 101
100% bargraph value 1] → 🗎 101

Value 2 display	→ 🗎 101
	A 102
Value 3 display	→ 🗎 102
Of hengeneth value 2	→ 🗎 102
0% bargraph value 3	/ 🖬 102
100% bargraph value 3	→ 🗎 102
	/ 8 102
Value 4 display	→ 🗎 102
	/ 🖬 102

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Mass flow Flow velocity Sound velocity Volume flow Corrected volume flow Density Dynamic viscosity* Calorific value* Wobbe index Energy flow Signal strength* Signal to noise ratio* Acceptance rate* Turbulence Flow asymmetry* Electronics temperature* Pressure* Methane fraction* Molar mass* Totalizer 1 Totalizer 3 Current output 1 Current output 3* Current output 4* 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 1	A local display is provided.	Enter 100 % value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100 % value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None

* Visibility depends on order options or device settings

10.4.12 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Structure of the wizard

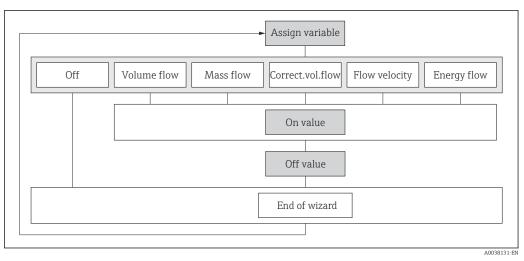

🖻 31 "Low flow cutoff" wizard in the "Setup" menu

Navigation

"Setup" menu \rightarrow Low flow cut off

► Low flow cut off	
Assign process variable (1837)] → 🗎 103
On value low flow cutoff (1805)) → 🗎 103
Off value low flow cutoff (1804)) → 🗎 103

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	 Off Volume flow Corrected volume flow Mass flow Flow velocity Energy flow 	Off
On value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \cong$ 103).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \blacksquare$ 103).	Enter off value for low flow cut off.	0 to 100.0 %	50 %

10.4.13 Gas analysis configuration

The **"Gas analysis" wizard** guides the user systematically through all the parameters that have to be set for configuring the gas analysis.

Navigation

"Setup" menu → Gas analysis

► Gas analysis	
Select gas type	→ 🗎 104
Pressure mode	→ 🗎 104
Pressure	→ 🗎 104
Temperature mode	→ 🗎 104
Medium temperature	→ 🗎 104

Reference density]	→ 🗎 104
Calorific value		→ 🗎 104


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select gas type	-	Select measured gas type.	 Single gas * Gas mixture * Coal gas/biogas * Natural gas - standardized calculation * Natural gas - using sound velocity * User-specific gas 	User-specific gas
Pressure compensation	-	Select pressure compensation type.	 Fixed value External value * Internal measured value * Current input 1 * Current input 2 * Current input 3 * 	Fixed value
Fixed value	The Fixed value option is selected in Pressure compensation parameter.	Enter a fixed value for the process pressure. The pressure is 0 bar(g) = 1.01325 bar under standard conditions.	0 to 250 bar	5 bar
Temperature compensation	The Calculated value option is selected in the Density source parameter.	Select temperature mode for temperature compensation.	 Fixed value Internal measured value* External value* Current input 1* Current input 2* Current input 3* 	Fixed value
Fixed value	The Fixed value option is selected in Temperature compensation parameter.	Enter a fixed value for the process temperature.	−50 to 550 °C	20 °C
Reference density	-	Enter fixed value for reference density.	0.01 to 100 kg/m ³	1 kg/m³
Calorific value	-	Enter gross calorific value to calculate the energy flow.	0 to 1000 MJ/Nm ³	40 MJ/Nm ³

* Visibility depends on order options or device settings

10.5 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

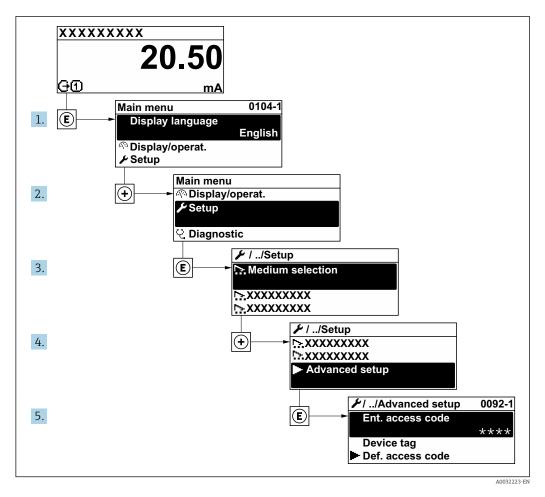


The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

Navigation

"Setup" menu \rightarrow Advanced setup

► Advanced setup	1		
Enter access code		\rightarrow	₿ 106
► Sensor adjustm	ent	→	₿ 106
► Totalizer 1 to n		\rightarrow	₿ 106
► Display		\rightarrow	108

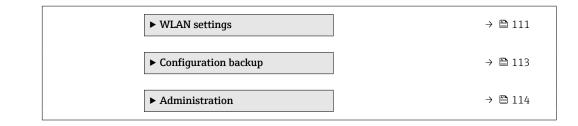

10.5.1 Using the parameter to enter the access code

Navigation

"Setup" menu → Advanced setup

Parameter overview with brief description

Parameter	Description	User entry
Enter access code	1 1	Max. 16-digit character string comprising numbers, letters and special characters

10.5.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment

► Sensor adjustme	ent		
	Installation direction]	→ 🗎 106

Parameter overview with brief description


Parameter	Description	Selection	Factory setting
Installation direction	Select sign of flow direction.	Forward flowReverse flow	Forward flow

10.5.3 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

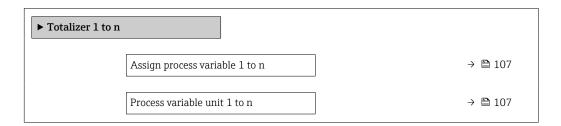

Totaliz	zer 1 to n operation mode]	→ 🗎 107
Totali	zer 1 to n failure behavior		→ 🗎 107

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable 1 to n	-	Select process variable for totalizer.	 Off Volume flow Corrected volume flow Mass flow Energy flow 	Volume flow
Process variable unit 1 to n	A process variable is selected in the Assign process variable parameter ($\rightarrow \implies 107$) of the Totalizer 1 to n submenu.	Select the unit for the process variable of the totalizer.	Unit choose list	Depends on country: • m ³ • ft ³
Totalizer 1 to n operation mode	A process variable is selected in the Assign process variable parameter ($\rightarrow \bigoplus 107$) of the Totalizer 1 to n submenu.	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.	NetForwardReverse	Net
Totalizer 1 to n failure behavior	A process variable is selected in the Assign process variable parameter ($\rightarrow \cong 107$) of the Totalizer 1 to n submenu.	Select totalizer behavior in the event of a device alarm.	 Hold Continue Last valid value + continue 	Hold

10.5.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display			
	Format display]	→ 🗎 109
	Value 1 display]	→ 🗎 109
	0% bargraph value 1]	→ 🗎 109
	100% bargraph value 1]	→ 🗎 109
	Decimal places 1		→ 🗎 109
	Value 2 display]	→ 🗎 109
	Decimal places 2]	→ 🗎 109
	Value 3 display]	→ 🗎 109
	0% bargraph value 3]	→ 🗎 110
	100% bargraph value 3]	→ 🗎 110
	Decimal places 3]	→ 🗎 110
	Value 4 display		→ 🗎 110
	Decimal places 4		→ 🗎 110
	Display language		→ 🗎 110
	Display interval		→ 🗎 110
	Display damping]	→ 🗎 110
	Header]	→ 🗎 110
	Header text]	→ 🗎 110
	Separator		→ 🖺 111
	Backlight]	→ 🗎 111

Parameter	Prerequisite	Description	Selection / User entry	Factory setting	
Format display	nat display A local display is provided. Select how measured values are shown on the display.		 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size	
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Mass flow Flow velocity Sound velocity Volume flow Corrected volume flow Density Dynamic viscosity* Calorific value* Wobbe index* Energy flow Signal strength* Signal to noise ratio* Acceptance rate* Turbulence* Flow asymmetry* Electronics temperature Pressure* Methane fraction* Molar mass* Totalizer 1 Totalizer 3 Current output 1* Current output 3* Current output 4* 	Volume flow	
0% bargraph value 1	A local display is provided.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific	
100% bargraph value 1	A local display is provided.	Enter 100 % value for bar graph display.	alue for bar Signed floating-point number		
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.			
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None	
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	x.xx	
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None	

Parameter	Prerequisite	Prerequisite Description		Factory setting	
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0 % value for bar graph display. Signed floating-point number		Country-specific	
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100 % value for bar graph display. Signed floating-point number		0	
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value. * x * x.x * x.x * x.xx * x.xx * x.xxx * x.xxx * x.xxx * x.xxx		X.XX	
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter $(\rightarrow \cong 101)$	None	
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	Select the number of decimal • x		
Display language	A local display is provided.	Set display language. Set display language. English Deutsch Français Español Italiano Nederlands Portuguesa Polski Pycckий язык (Russian) Svenska Türkçe 中文 (Chinese) 日本語 (Japanese) 한국어 (Korean) tiếng Việt (Vietnamese) čeština (Czech)		English (alternatively, the ordered language is preset in the device)	
Display interval	A local display is provided.	Set time measured values are 1 to 10 s shown on display if display alternates between values.		5 s	
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.		0.0 s	
Header	A local display is provided.	Select header contents on local display.• Device tag • Free text		Device tag	
Header text	The Free text option is selected in the Header parameter.	selected in the Header such as letters,			

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	. (point), (comma)	. (point)
Backlight	One of the following conditions is met: • Order code for "Display; operation", option F "4-line, illum.; touch control" • Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"	Switch the local display backlight on and off.	DisableEnable	Enable

* Visibility depends on order options or device settings

10.5.5 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow WLAN settings

► WLAN settings		
	WLAN	→ 🗎 112
	WLAN mode	→ 🗎 112
	SSID name	→ 🖺 112
	Network security	→ 🗎 112
	Security identification	→ 🗎 112
	User name	→ 🗎 112
	WLAN password	→ 🗎 112
	WLAN IP address	→ 🗎 112
	WLAN MAC address	→ 🗎 112
	WLAN passphrase	→ 🖺 112
	Assign SSID name	→ 🖺 112
	SSID name	→ 🗎 112
	Connection state	→ 🗎 112
	Received signal strength	→ 🗎 112

Parameter	Parameter Prerequisite Description		Selection / User entry / User interface	Factory setting
WLAN	-	Switch WLAN on and off.	DisableEnable	Enable
WLAN mode	-	Select WLAN mode.	WLAN access pointWLAN Client	WLAN access point
SSID name	The client is activated.	Enter the user-defined SSID name (max. 32 characters).	-	-
Network security	-	Select the security type of the WLAN network.	 Unsecured WPA2-PSK EAP-PEAP with MSCHAPv2* EAP-PEAP MSCHAPv2 no server authentic.* EAP-TLS* 	WPA2-PSK
Security identification	-	Select security settings and download these settings via menu Data management > Security > WLAN.	Trusted issuer certificateDevice certificateDevice private key	-
User name	-	Enter user name.	-	-
WLAN password	-	Enter WLAN password.	-	-
WLAN IP address	-	Enter IP address of the WLAN interface of the device.4 octet: 0 to 255 (in the particular octet)		192.168.1.212
WLAN MAC address	-	Enter MAC address of the WLAN interface of the device. Unique 12-digit character string comprising letters and numbers		Each measuring device is given an individual address.
WLAN passphrase	The WPA2-PSK option is selected in the Security type parameter.	Enter the network key (8 to 32 characters). The network key supplied with the device should be changed during commissioning for security reasons. Enter the network key (8 to 32 character string comprising numbers letters and special characters (without spaces)		Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user- defined name.	Device tagUser-defined	User-defined
SSID name	 The User-defined option is selected in the Assign SSID name parameter. The WLAN access point option is selected in the WLAN mode parameter. 	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another. Max. 32-digit character string comprising numbers, letters and special characters		EH_device designation_last 7 digits of the serial number (e.g. EH_Prosonic_Flow_5 00_A802000)
Connection state	-	Displays the connection status. Connected Not connected		Not connected
Received signal strength	-	Shows the received signal strength.	LowMediumHigh	High

* Visibility depends on order options or device settings

10.5.6 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration. The device configuration is managed via the **Configuration management** parameter.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Configuration backup

► Configuration backup	
Operating time	→ 🗎 113
Last backup	→ 🗎 113
Configuration management	→ 🗎 113
Backup state	→ ■ 113
Comparison result	→ 🗎 113

Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	-
Configuration management	Select action for managing the device data in the HistoROM backup.	 Cancel Execute backup Restore * Compare * Clear backup data 	Cancel
Backup state	Shows the current status of data saving or restoring.	 None Backup in progress Restoring in progress Delete in progress Compare in progress Restoring failed Backup failed 	None
Comparison result	Comparison of current device data with HistoROM backup.	 Settings identical Settings not identical No backup available Backup settings corrupt Check not done Dataset incompatible 	Check not done

* Visibility depends on order options or device settings

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

Function scope of the "Configuration management" parameter

HistoROM backup

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.5.7 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

► Administration	
► Define access code] → 🗎 114
► Reset access code) → 🗎 115
Device reset) → 🗎 115

Using the parameter to define the access code

Complete this wizard to specify an access code for the Maintenance role.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

► Define access code	
Define access code) → 🗎 115
Confirm access code	→ 🗎 115

Parameter	Description	User entry
Define access code	Specify an access code that is required to obtain the access rights for the Maintenance role.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the access code entered for the Maintenance role.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Reset access code

► Reset access code		
Operating time]	→ 🗎 115
Reset access code]	→ 🗎 115

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	 Enter the code provided by Endress+Hauser Technical Support to reset the Maintenance code. For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: Web browser DeviceCare, FieldCare (via CDI-RJ45 service interface) Fieldbus 	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device

Navigation

 $"Setup" menu \rightarrow Advanced setup \rightarrow Administration$

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To delivery settings Restart device Restore S-DAT backup[*] 	Cancel

* Visibility depends on order options or device settings

10.6 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

Navigation

"Diagnostics" menu \rightarrow Simulation

► Simulation		
	Assign simulation process variable	→ 🖺 117
	Process variable value	→ 🗎 117
	Current input 1 to n simulation	→ 🗎 118
	Value current input 1 to n	→ 🗎 118
	Status input 1 to n simulation	→ 🗎 118
	Input signal level 1 to n	→ 🗎 118
	Current output 1 to n simulation	→ 🗎 117
	Current output value	→ 🗎 117
	Frequency output 1 to n simulation	→ 🗎 117
	Frequency output 1 to n value	→ 🗎 117
	Pulse output simulation 1 to n	→ 🗎 117
	Pulse value 1 to n	→ 🗎 117
	Switch output simulation 1 to n	→ 🗎 117
	Switch state 1 to n	→ 🗎 117
	Relay output 1 to n simulation	→ 🗎 117
	Switch state 1 to n	→ 🗎 118
	Pulse output simulation	→ 🗎 118
	Pulse value	→ 🗎 118
	Device alarm simulation	→ 🗎 118

→ 🖺 118

→ 🖺 118

Parameter overview with brief description

Diagnostic event category

Diagnostic event simulation

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	 Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction* Molar mass* Density Dynamic viscosity* Calorific value* Wobbe index* Energy flow 	Off
Process variable value	A process variable is selected in the Assign simulation process variable parameter $(\rightarrow \cong 117)$.	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Current output 1 to n simulation	-	Switch the simulation of the current output on and off.	OffOn	Off
Current output value	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output 1 to n simulation	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	OffOn	Off
Frequency output 1 to n value	In the Frequency simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the Operating mode parameter, the Pulse option is selected.	 Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter (→ ^(→) 92) defines the pulse width of the pulses output. 	 Off Fixed value Down-counting value 	Off
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65535	0
Switch output simulation 1 to n	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	OffOn	Off
Switch state 1 to n	-	Select the status of the status output for the simulation.	 Open Closed	Open
Relay output 1 to n simulation	-	Switch simulation of the relay output on and off.	OffOn	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Switch state 1 to n	The On option is selected in the Switch output simulation 1 to n parameter parameter.	Select status of the relay output for the simulation.	 Open Closed	Open
Pulse output simulation	_	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	 Off Fixed value Down-counting value 	Off
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	-	Switch the device alarm on and off.	OffOn	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	 Off Diagnostic event picklist (depends on the category selected) 	Off
Current input 1 to n simulation	-	Switch simulation of the current input on and off.	OffOn	Off
Value current input 1 to n	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Status input 1 to n simulation	-	Switch simulation of the status input on and off.	OffOn	Off
Input signal level 1 to n	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	HighLow	High

* Visibility depends on order options or device settings

10.7 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code →
 ⁽¹⁾
 ⁽
- Protect access to local operation via key locking $\rightarrow \triangleq 63$
- Protect access to measuring device via write protection switch \rightarrow 🗎 120

10.7.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via the local display

- 1. Navigate to the **Define access code** parameter ($\Rightarrow \triangleq 115$).
- 2. Maximum of 16-digit character string comprising numbers, letters and special characters as the access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ($\rightarrow \implies 115$) to confirm.
 - \blacktriangleright The 🖻 symbol appears in front of all write-protected parameters.
- **P** Disabling parameter write protection via access code $\rightarrow \square 62$.
 - If the access code is lost: Resetting the access code $\rightarrow \square$ 120.
 - The user role with which the user is currently logged in is displayed in **Access status** parameter.
 - Navigation path: Operation → Access status
 - User roles and their access rights $\rightarrow \triangleq 62$
- The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view.
- The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

	Parameters for configuring the local display	Parameters for configuring the totalizer
	\downarrow	↓
Language	Format display	Control Totalizer
	Contrast display	Preset value
	Display interval	Reset all totalizers

Defining the access code via the web browser

- 1. Navigate to the **Define access code** parameter ($\Rightarrow \square 115$).
- 2. Define a 16-digit (max.) numeric code as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter ($\rightarrow \square$ 115) to confirm.
 - └ The web browser switches to the login page.
- - If the access code is lost: Resetting the access code \rightarrow \Rightarrow 120.
 - The **Access status** parameter shows which user role the user is currently logged in with.
 - Navigation path: Operation → Access status
 - User roles and their access rights $\rightarrow \triangleq 62$

If no action is performed for 10 minutes, the web browser automatically returns to the login page.

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

You can only obtain a reset code from your local Endress+Hauser service organization. The code must be calculated explicitly for every device.

- 1. Note down the serial number of the device.
- 2. Read off the **Operating time** parameter.
- 3. Contact the local Endress+Hauser service organization and tell them the serial number and the operating time.
 - └ Get the calculated reset code.
- **4.** Enter the reset code in the **Reset access code** parameter ($\rightarrow \implies 115$).
 - → The access code has been reset to the factory setting **0000**. It can be redefined \rightarrow 🗎 119.

For IT security reasons, the calculated reset code is only valid for 96 hours from the specified operating time and for the specific serial number. If you cannot return to the device within 96 hours, you should either increase the operating time you read out by a few days or switch off the device.

10.7.2 Write protection via write protection switch


Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display" parameter**.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via MODBUS RS485 protocol

Proline 500 – digital

Enabling/disabling write protection

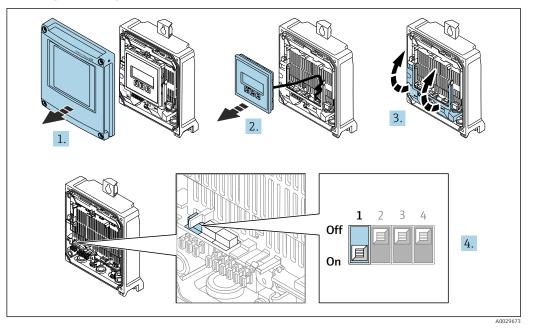

1. Open the housing cover.


2. Remove the display module.

3. Fold open the terminal cover.

4. Enable or disable write protection:

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection/to the **OFF** position (factory setting) disables hardware write protection.

In the Locking status parameter, the Hardware locked option is displayed
 → ■ 122. When hardware write protection is active, the
 symbol appears in the header of the measured value display and in the navigation view in front of the parameters.

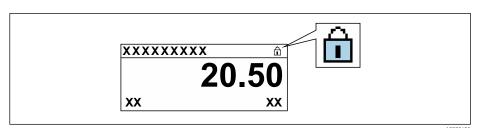

- 5. Insert the display module.
- 6. Close the housing cover.

7. **A**WARNING

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

► Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

Tighten the securing screws.

11 Operation

11.1 Reading off the device locking status

Device active write protection: Locking status parameter

Operation \rightarrow Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access authorization displayed in the Access status parameter applies $\rightarrow \textcircled{B}$ 62. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow \textcircled{B}$ 120.
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

1 Detailed information:

- To configure the operating language $\rightarrow \cong 80$
- For information on the operating languages supported by the measuring device $\rightarrow~\textcircled{}184$

11.3 Configuring the display

Detailed information:

- On the basic settings for the local display $\rightarrow \implies 100$
- On the advanced settings for the local display $\rightarrow \cong 108$

11.4 Reading off measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values

► Measured values	
► Process variables	→ 🗎 123
► System values	→ 🗎 125
► Totalizer	→ 🗎 129
► Input values	→ 🗎 126
► Output values	→ 🗎 127

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Process variables

► Process variables	
Volume flow] → 🗎 123
Mass flow] → 🗎 123
Sound velocity] → 🗎 124
Pressure] → 🗎 124
Energy flow	→ 🗎 124
Flow velocity	→ 🗎 124
Temperature	→ 🗎 124
Wobbe index	→ 🗎 124
Corrected volume flow	→ 🗎 124
Methane fraction] → 🗎 124
Molar mass] → 🗎 125
Density] → 🗎 125
Dynamic viscosity	→ 🗎 125
Calorific value	→ 🗎 125

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Volume flow	-	Displays the volume flow that is currently measured.	Signed floating-point number
		Dependency The unit is taken from: Volume flow unit parameter (→ 🗎 83)	
Mass flow	-	Displays the mass flow that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Mass flow unit parameter ($\rightarrow \square 83$).	

Parameter	Prerequisite	Description	User interface
Sound velocity	-	Displays the sound velocity that is currently measured. <i>Dependency</i> The unit is taken from the Velocity unit parameter.	Signed floating-point number
Pressure	For the following order code: "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated" The software options currently enabled are displayed in the Software option overview parameter.	Displays the pressure that is currently measured. <i>Dependency</i> The unit is taken from: Pressure unit parameter	Signed floating-point number
Energy flow	-	Displays the energy flow that is currently calculated. Dependency The unit is taken from: Energy flow unit parameter ($\rightarrow \cong 84$)	Signed floating-point number
Flow velocity	-	Displays the flow velocity that is currently measured. <i>Dependency</i> The unit is taken from: Velocity unit parameter	Signed floating-point number
Temperature	 For the following order codes: "Measuring tube; Transducer; Sensor version", option AB "316L; Titanium Gr. 2; temperature measurement integrated" "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated" 	Displays the temperature that is currently measured. <i>Dependency</i> The unit is taken from: Temperature unit parameter	Signed floating-point number
	The software options currently enabled are displayed in the Software option overview parameter.		
Wobbe index	For the following order code: "Application package", option EF "Advanced gas analysis" The software options currently enabled are displayed in the Software option overview parameter.	Displays the Wobbe index that is currently calculated. <i>Dependency</i> The unit is taken from: Calorific value unit parameter (→ 🗎 84)	Signed floating-point number
Corrected volume flow	_	Displays the corrected volume flow that is currently measured. Dependency The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number
Methane fraction	For the following order code: "Application package", option EF "Advanced gas analysis" The software options currently enabled are displayed in the Software option overview parameter.	Shows the methane fraction of the dry gas currently calculated.	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Molar mass	For the following order code: "Application package", option EF "Advanced gas analysis"	Displays the molar mass in g/mol that is currently calculated.	Signed floating-point number
	The software options currently enabled are displayed in the Software option overview parameter.		
Density	-	Displays the density that is currently calculated.	Signed floating-point number
		<i>Dependency</i> The unit is taken from: Density unit parameter	
Dynamic viscosity	For the following order code: "Application package", option EF "Advanced gas analysis" The software options currently enabled are displayed in the Software option overview parameter.	Displays the dynamic viscosity that is currently calculated. <i>Dependency</i> The unit is taken from the Dynamic viscosity unit parameter.	Signed floating-point number
Calorific value	For the following order code: "Application package", option EF "Advanced gas analysis" The software options currently enabled are displayed in the Software option overview parameter.	Displays the calorific value that is currently calculated. <i>Dependency</i> The unit is taken from the Calorific value unit parameter.	Signed floating-point number

11.4.2 System values

The **System values** submenu contains all the parameters needed to display the current measured values for every system value.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow System values

► System values	
Signal strength	→ 🗎 126
Acceptance rate) → 🗎 126
Signal to noise ratio) → 🗎 126
Turbulence) → 🗎 126


Parameter	Description	User interface
Signal strength	Displays the current signal strength (0 to 100 dB). Assessment of the signal strength: • < 10 dB: bad • > 90 dB: very good	Signed floating-point number
Acceptance rate	Displays the ratio of the number of ultrasonic signals accepted for flow calculation and the total number of ultrasonic signals emitted.	0 to 100 %
Signal to noise ratio	Displays the current signal to noise ratio (0 to 100 dB). Assessment of the signal-to-noise ratio: • < 20 dB: bad • > 50 dB: very good	Signed floating-point number
Turbulence	Displays the current turbulence.	Signed floating-point number

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values

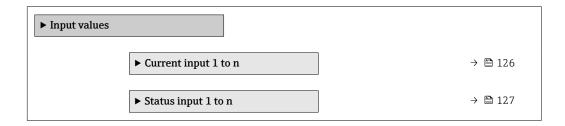

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Current input 1 to n

► Current input 1 to n			
Measured values 1 to n] → 🗎 126		
Measured current 1 to n) → 🗎 126		

Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value. <i>Dependency</i> The unit is taken from the Pressure unit parameter	Signed floating-point number
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Status input 1 to n

► Status input 1 to n		
Value status input		→ 🗎 127

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	HighLow

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values

► Output values	
► Current output 1 to n	→ 🗎 127
Pulse/frequency/switch output 1 to n	→ 🗎 128
► Relay output 1 to n	→ 🗎 128
► Double pulse output	→ 🗎 129

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Value current output 1 to n

► Current output 1 to n	
Output current	→ 🗎 128
Measured current	→ <a> 128

Parameter	Description	User interface
Output current	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Pulse/frequency/switch output 1 to n

Pulse/frequency/switch output 1 to n	
Output frequency	→ 🗎 128
Pulse output	→ 🗎 128
Switch state	→ 🗎 128

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output	The Pulse option is selected in the Operating mode parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch state	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	 Open Closed

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Relay output 1 to n

► Relay output 1 to n			
Switch state] → 🗎 129		
Switch cycles) → 🗎 129		
Max. switch cycles number) → 🗎 129		

Parameter	Description	User interface
Switch state	Indicates the current switch state of the output.	OpenClosed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Double pulse output

► Double pulse output		
Pulse output		→ 🗎 129

Parameter overview with brief description

Parameter Description		User interface
Pulse output	Shows the currently output pulse frequency.	Positive floating-point number

11.4.5 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer

► Totalize	er	
	Totalizer 1 to n value	→ 🗎 130
	Totalizer 1 to n overflow	→ 🗎 130

Parameter	Prerequisite	Description	User interface
Totalizer 1 to n value	 One of the following options is selected in the Assign process variable parameter (→ 🗎 107) of the Totalizer 1 to n submenu: Volume flow Corrected volume flow Mass flow Energy flow 	Displays the current totalizer counter value.	Signed floating-point number
Totalizer 1 to n overflow	One of the following options is selected in the Assign process variable parameter (→ 🗎 107) of the Totalizer 1 to n submenu: • Volume flow • Corrected volume flow • Mass flow • Energy flow	Displays the current totalizer overflow.	Integer with sign

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Advanced settings using the Advanced setup submenu ($\rightarrow \implies 105$)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu \rightarrow Totalizer handling

► Totalizer handling	
Control Totalizer 1 to n	→ 🗎 131
Preset value 1 to n	→ 🗎 131
Totalizer value 1 to n	→ 🗎 131
Reset all totalizers) → 🗎 131

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Control Totalizer 1 to n	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 107) of the Totalizer 1 to n submenu.	Control totalizer value.	 Totalize Reset + hold Preset + hold Reset + totalize Preset + totalize Hold 	Totalize
Preset value 1 to n	A process variable is selected in the Assign process variable parameter (→ 🗎 107) of the Totalizer 1 to n submenu.	 Specify start value for totalizer. Dependency The unit of the selected process variable is defined in the Unit totalizer parameter (→	Signed floating-point number	Depends on country: • 0 m ³ • 0 ft ³
Totalizer value	One of the following options is selected in the Assign process variable parameter (→) 107) of the Totalizer 1 to n submenu: Volume flow • Volume flow Corrected volume flow • Mass flow Energy flow	Displays the current totalizer counter value.	Signed floating-point number	-
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	Cancel

11.6.1 Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold ¹⁾	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize ¹⁾	The totalizer is set to the defined start value in the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

1) Visible depending on the order options or device settings

11.6.2 Function range of "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the previously aggregated flow values.

11.7 Displaying the measured value history


The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

Pata logging is also available via:

- Plant Asset Management Tool FieldCare $\rightarrow \square$ 73.
- Web browser

Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Measured value trend for each logging channel displayed in the form of a chart

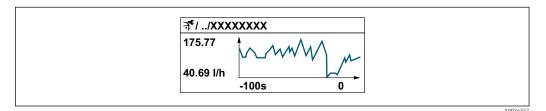

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu \rightarrow Data logging

► Data logging			
Assign channel 1]	→ 🖺 133
Assign channel 2]	→ 🖺 133
Assign channel 3]	→ 🗎 133
Assign channel 4]	→ 🗎 133
Logging interval]	→ 🗎 134
Clear logging data]	→ 🖺 134
Data logging			→ 🖺 134
Logging delay]	→ 🖺 134
Data logging contro	1]	→ 🗎 134

→ 🖺 134

→ 🗎 134

Parameter overview with brief description

Data logging status

Entire logging duration

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	 Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction* Molar mass* Density Current output 2* Current output 3* Current output 4* Dynamic viscosity* Calorific value* Wobbe index* Energy flow Signal strength* Signal to noise ratio* Acceptance rate* Turbulence* Flow asymmetry* Electronics temperature Current output 1 	Off
Assign channel 2	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter $(\rightarrow \square 133)$	Off
Assign channel 3	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→	Off
Assign channel 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter $(\rightarrow \square 133)$	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	CancelClear data	Cancel
Data logging	-	Select the type of data logging.	OverwritingNot overwriting	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	NoneDelete + startStop	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	DoneDelay activeActiveStopped	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

* Visibility depends on order options or device settings

12 Diagnosis and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Remedial action
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display dark and no output signals	Supply voltage does not match the voltage specified on the nameplate.	Apply the correct supply voltage $\rightarrow \square$ 39.
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.
Local display dark and no output signals	No contact between connecting cables and terminals.	Ensure electrical contact between the cable and the terminal.
Local display dark and no output signals	 Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly. 	Check terminals.
Local display dark and no output signals	 I/O electronics module is defective. Main electronics module is defective.	Order spare part $\rightarrow \square$ 158.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display cannot be read, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part $\rightarrow \square$ 158.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 🗎 145
Text on local display appears in a language that cannot be understood.	The selected operating language cannot be understood.	 Press □ +
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → [™] 158.

For output signals

Error	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part $\rightarrow \square$ 158.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parameter configuration error	Check and adjust parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	 Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Fault	Possible causes	Remedial action
Write access to parameters is not possible.	Hardware write protection is enabled.	Set the write protection switch on the main electronics module to the OFF position $\rightarrow \cong 120$.
Write access to parameters is not possible.	Current user role has limited access authorization.	 Check user role → Enter correct customer-specific access code → 62.
Connection via Modbus RS485 is not possible.	Modbus RS485 bus cable is connected incorrectly.	Check the terminal assignment $\rightarrow \square 34$.
Connection via Modbus RS485 is not possible.	Modbus RS485 cable is incorrectly terminated.	Check the terminating resistor $\rightarrow \square$ 45.
Connection via Modbus RS485 is not possible.	Settings for the communication interface are incorrect.	Check the Modbus RS485 configuration $\rightarrow \cong 84$.
Unable to connect to the web server.	Web server is disabled.	Using the "FieldCare" or "DeviceCare" operating tool, check whether the web server of the measuring device is enabled, and enable it if necessary → 🗎 69.
	The Ethernet interface on the PC is incorrectly configured.	 Check the properties of the Internet protocol (TCP/IP) →
Unable to connect to the web server.	The IP address on the PC is incorrectly configured.	Check the IP address: $192.168.1.212 \rightarrow \textcircled{6} 65$
Unable to connect to the web server.	WLAN access data are incorrect.	 Check WLAN network status. Log on to the device again using WLAN access data. Check that WLAN is enabled on the measuring device and operating unit → 65.
	WLAN communication is disabled.	-
Unable to connect to web server, FieldCare or DeviceCare.	WLAN network is not available.	 Check if WLAN reception is present: LED on display module is lit blue. Check if WLAN connection is enabled: LED on display module flashes blue. Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	 Operating unit outside reception range: Check network status on operating unit. To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	 Check network settings. Temporarily enable only the WLAN as an interface.
Web browser frozen and operation no longer possible	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	 Check cable connection and power supply. Refresh the web browser and restart if necessary.
Display of web browser content is difficult to read or incomplete.	Web browser version used is not optimal.	 Use correct web browser version →
	Unsuitable view settings.	Change the font size/display ratio of the web browser.
Incomplete or no display of content in the web browser	 JavaScript is not enabled. JavaScript cannot be enabled.	 Enable JavaScript. Enter http://XXX.XXX.X.XX/servlet/ basic.html as the IP address.


Fault	Possible causes	Remedial action
Operation with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.
Flashing the firmware with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000 or TFTP ports) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.

12.2 Diagnostic information via LEDs

12.2.1 Transmitter

Proline 500 – digital

Different LEDs in the transmitter provide information on the device status.

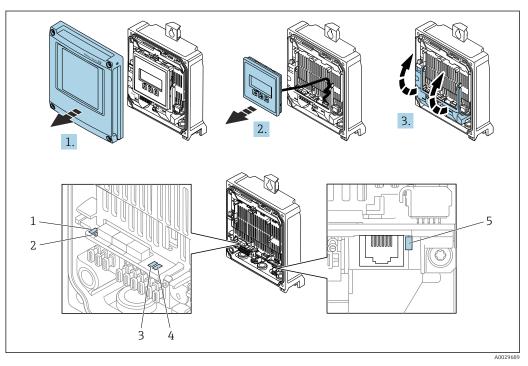

- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active
- 1. Open the housing cover.
- 2. Remove the display module.
- **3.** Fold open the terminal cover.


LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is OK.
2	Device status (normal	Off	Firmware error
	operation)	Green	Device status is OK.

LED		Color	Meaning
		Flashing green	Device is not configured.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red/green	The device restarts.
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Not used	-	-
4	Communication	Off	Communication not active.
		White	Communication active.
5	Service interface (CDI)	Off	Not connected or no connection established.
		Yellow	Connected and connection established.
		Flashing yellow	Service interface active.

12.2.2 Sensor connection housing

Proline 500 – digital

Various light emitting diodes (LED) on the ISEM electronics unit (intelligent sensor electronics module) in the sensor connection housing provide information about the device status.

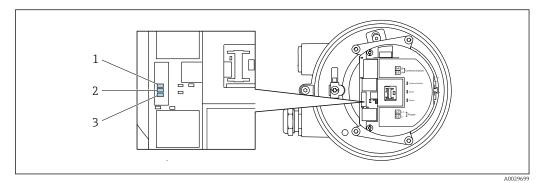


- 1 Communication
- 2 Device status
- 3 Supply voltage

LED		Color	Meaning
1	Communication	White	Communication active.
2	Device status (normal	Red	Error
	operation)	Flashing red	Warning
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Supply voltage	Green	Supply voltage is ok.
		Off	Supply voltage is off or too low.

12.3 Diagnostic information on local display

12.3.1 **Diagnostic message**

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

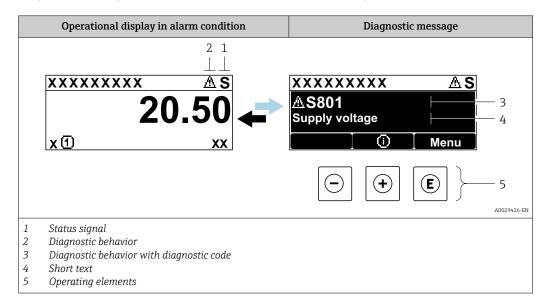

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

- Via parameter $\rightarrow \square 150$
- Via submenus $\rightarrow \square 151$

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).



The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
С	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
М	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
*	 Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
	 Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.


Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

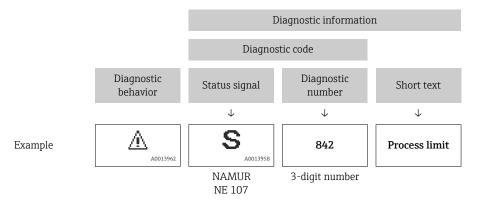

Operating elements

Operating key	Meaning
+	Plus key In menu, submenu Opens the message about the remedial measures.
E	Enter key In menu, submenu Opens the operating menu.

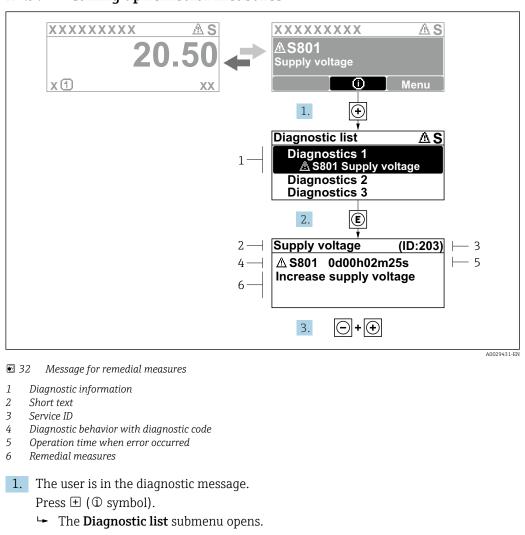

12.3.2 Calling up remedial measures

- **2.** Select the desired diagnostic event with \pm or \Box and press \mathbb{E} .
 - └ The message about the remedial measures opens.
- 3. Press = + \pm simultaneously.
 - └ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press + + simultaneously.
 - └ The message for the remedial measures closes.

12.4 Diagnostic information in the web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

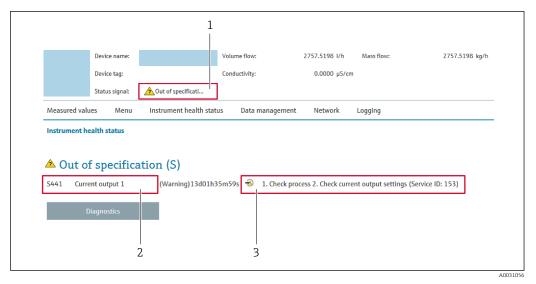

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter $\rightarrow \triangleq 150$
- Via submenu →
 [™]
 [™]
 151

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
\otimes	Failure A device error has occurred. The measured value is no longer valid.
V	Function check The device is in service mode (e.g. during a simulation).
<u>?</u>	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
$\widehat{\boldsymbol{\boldsymbol{\boldsymbol{\otimes}}}}$	Maintenance required Maintenance is required. The measured value remains valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare or DeviceCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

D 📽 🖬 🚳 📾 🖾 🔍 🖩 🇯 🗽 🖄 🖉	* * [] * * F• : 4 1 1
Device name: XXXXXXX Device tag: XXXXXXX Status signal: I Fund T T I I I I I I I I I I I I I I I I I I	Mass flow: 2 12.34 kg/h Volume flow: 2 12.34 m ³ /h
XXXXXX XXXXXX Diagnostics 1: C48:	B5 Simu
1	inenance Sealure (F) Image: Sealure (F) Function check (C) Diagnostics 1: C485 Simulation measured vari (V) Remedy information: Deactivate Simulation (Service (V)) Out of spezification (S) Out of spezification (S)
	Maintenance required (M)


- 1 Status area with status signal $\rightarrow \square$ 139
- 2 Diagnostic information $\rightarrow \square 140$
- 3 Remedial measures with service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter $\rightarrow \triangleq 150$
- Via submenu → 🗎 151

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

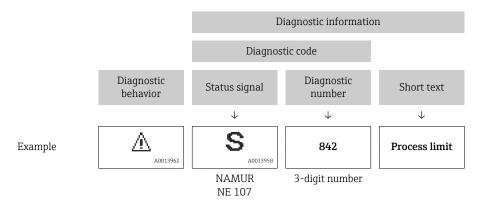

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu

Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ← A tool tip with remedy information for the diagnostic event appears.

12.6 Diagnostic information via communication interface

12.6.1 Reading out diagnostic information

Diagnostic information can be read out via Modbus RS485 register addresses.

- Via register address 6821 (data type = string): diagnosis code, e.g. F270
- Via register address 6859 (data type = integer): diagnosis number, e.g. 270

For an overview of diagnostic events with diagnosis number and diagnosis code $\rightarrow \cong 145$

12.6.2 Configuring error response mode

The error response mode for Modbus RS485 communication can be configured in the **Communication** submenu using 2 parameters.

Navigation path

 $\mathsf{Setup} \to \mathsf{Communication}$

Parameter overview with brief description

Parameters	Description	Selection	Factory setting
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication. The effect of this parameter depends on the option selected in the Assign diagnostic behavior parameter.	 NaN value Last valid value NaN = not a number 	NaN value

12.7 Adapting the diagnostic information

12.7.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	The device stops measurement. The measured value output via Modbus RS485 and the totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The measured value output via Modbus RS485 and the totalizers are not affected. A diagnostic message is generated.

Options	Description
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the Event logbook submenu (Event list submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.


12.8 Overview of diagnostic information

The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information $\rightarrow \bigoplus 144$

R Not all the diagnostics information is available for the device.

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	sensor			
019	Device initialization active	Device initialization in progress, please wait	S	Warning ¹⁾
022	Temperature sensor defective	Replace sensor electronic module (ISEM)	F	Alarm
082	Data storage inconsistent	Check module connections	F	Alarm
083	Memory content inconsistent	 Restart device Restore S-DAT data Replace S-DAT 	F	Alarm
104	Sensor signal path 1 to n	 Check process conditions Clean or replace transducers Replace sensor electronic module (ISEM) 	F	Alarm
105	Downstream transducer path 1 to n defective	 Check connection to the downstream transducer Replace downstream transducer 	F	Alarm
106	Upstream transducer path 1 defective	 Check connection to the upstream transducer Replace upstream transducer 	F	Alarm
124	Relative signal strength	 Check process conditions Clean or replace transducers Replace sensor electronic module (ISEM) 	М	Warning ¹⁾
125	Relative sound velocity	 Check process conditions Clean or replace transducers Replace sensor electronic module (ISEM) 	М	Warning ¹⁾
160	Signal path switched off	Contact service	М	Warning ¹⁾
170	Pressure cell connection defective	 Check plug connections Replace pressure cell 	F	Alarm
171	Ambient temperature too low	Increase ambient temperature	S	Warning
172	Ambient temperature too high	Reduce ambient temperature	S	Warning
173	Pressure cell range exceeded	 Check process conditions Adapt process pressure 	S	Warning

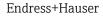

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
174	Pressure cell electronics defective	Replace pressure cell	F	Alarm
175	Pressure cell deactivated	Enable pressure cell	М	Warning
Diagnostic of	electronic			
201	Electronics faulty	 Restart device Replace electronics 	F	Alarm
242	Firmware incompatible	 Check firmware version Flash or replace electronic module 	F	Alarm
252	Module incompatible	 Check electronic modules Check if correct modules are available (e.g. NEx, Ex) Replace electronic modules 	F	Alarm
262	Module connection interrupted	 Check or replace connection cable between sensor electronic module (ISEM) and main electronics Check or replace ISEM or main electronics 	F	Alarm
270	Main electronics defective	 Restart device Replace main electronic module 	F	Alarm
271	Main electronics faulty	 Restart device Replace main electronic module 	F	Alarm
272	Main electronics faulty	Restart device	F	Alarm
273	Main electronics defective	 Pay attention to display emergency operation Replace main electronics 	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	1. Restart device 2. Change I/O module	F	Alarm
281	Electronic initialization active	Firmware update active, please wait!	F	Alarm
283	Memory content inconsistent	Restart device	F	Alarm
302	Device verification active	Device verification active, please wait.	С	Warning ¹⁾
303	I/O 1 to n configuration changed	 Apply I/O module configuration (parameter "Apply I/O configuration") Afterwards reload device description and check wiring 	М	Warning
311	Sensor electronics (ISEM) faulty	Maintenance required! Do not reset device	М	Warning
330	Flash file invalid	 Update firmware of device Restart device 	М	Warning
331	Firmware update failed	 Update firmware of device Restart device 	F	Warning
332	Writing in HistoROM backup failed	 Replace user interface board Ex d/XP: replace transmitter 	F	Alarm
361	I/O module 1 to n faulty	 Restart device Check electronic modules Change I/O module or main electronics 	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
372	Sensor electronics (ISEM) faulty	 Restart device Check if failure recurs Replace sensor electronic module (ISEM) 	F	Alarm
373	Sensor electronics (ISEM) faulty	Transfer data or reset device	F	Alarm
375	I/O- 1 to n communication failed	 Restart device Check if failure recurs Replace module rack inclusive electronic modules 	F	Alarm
378	Supply voltage ISEM faulty	 If available: Check connection cable between sensor and transmitter Replace main electronic module Replace sensor electronic module (ISEM) 	F	Alarm
382	Data storage	1. Insert T-DAT 2. Replace T-DAT	F	Alarm
383	Memory content	Reset device	F	Alarm
384	Transmitter circuit	 Restart device Check if failure recurs Replace sensor electronic module (ISEM) 	F	Alarm
385	Amplifier circuit	 Restart device Check if failure recurs Replace sensor electronic module (ISEM) 	F	Alarm
386	Time of flight	 Restart device Check if failure recurs Replace sensor electronic module (ISEM) 	F	Alarm
387	HistoROM data faulty	Contact service organization	F	Alarm
agnostic of	configuration			
410	Data transfer failed	 Retry data transfer Check connection 	F	Alarm
412	Processing download	Download active, please wait	С	Warning
431	Trim 1 to n required	Carry out trim	М	Warning
437	Configuration incompatible	 Update firmware Execute factory reset 	F	Alarm
438	Dataset different	 Check dataset file Check device parameterization Download new device parameterization 	Μ	Warning
441	Current output 1 to n saturated	 Check current output settings Check process 	S	Warning ¹⁾
442	Frequency output 1 to n saturated	 Check frequency output settings Check process 	S	Warning ¹⁾
443	Pulse output 1 to n saturated	 Check pulse output settings Check process 	S	Warning ¹⁾
444	Current input 1 to n saturated	 Check current input settings Check connected device Check process 	S	Warning ¹⁾
452	Calculation error detected	 Check device configuration Check process conditions 	S	Warning ¹⁾

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
453	Flow override active	Deactivate flow override	С	Warning
484	Failure mode simulation active	Deactivate simulation	С	Alarm
485	Process variable simulation active	Deactivate simulation	С	Warning
486	Current input 1 to n simulation active	Deactivate simulation	С	Warning
491	Current output 1 to n simulation active	Deactivate simulation	С	Warning
492	Frequency output 1 to n simulation active	Deactivate simulation frequency output	С	Warning
493	Pulse output simulation active	Deactivate simulation pulse output	С	Warning
494	Switch output 1 to n simulation active	Deactivate simulation switch output	С	Warning
495	Diagnostic event simulation active	Deactivate simulation	С	Warning
496	Status input 1 to n simulation active	Deactivate simulation status input	С	Warning
502	CT activation/ deactivation failed	Follow the sequence of the custody transfer activation/deactivation: First authorized user login, then set the DIP switch on the main electonic module	С	Warning
520	I/O 1 to n hardware configuration invalid	 Check I/O hardware configuration Replace wrong I/O module Plug the module of double pulse output on correct slot 	F	Alarm
537	Configuration	 Check IP addresses in network Change IP address 	F	Warning
538	Flow computer configuration incorrect	Check input value (pressure, temperature)	S	Warning
539	Flow computer configuration incorrect	 Check input value (pressure, temperature) Check allowed values of the medium properties 	S	Alarm
540	Custody transfer mode failed	 Power off device and toggle DIP switch Deactivate custody transfer mode Reactivate custody transfer mode Check electronic components 	F	Alarm
541	Flow computer configuration incorrect	Check entered reference value using the document Operating Instructions	S	Warning
543	Double pulse output	 Check process Check pulse output settings 	S	Warning ¹⁾
593	Double pulse output 1 simulation	Deactivate simulation pulse output	С	Warning
594	Relay output 1 to n simulation active	Deactivate simulation switch output	С	Warning
599	Custody transfer logbook full	 Deactivate custody transfer mode Clear custody transfer logbook (all 30 entries) Activate custody transfer mode 	F	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	process		1	1
803	Loop current 1 faulty	 Check wiring Change I/O module 	F	Alarm
832	Electronics temperature too high	Reduce ambient temperature	S	Warning ¹⁾
833	Electronics temperature too low	Increase ambient temperature	S	Warning ¹⁾
834	Process temperature too high	Reduce process temperature	S	Warning ¹⁾
835	Process temperature too low	Increase process temperature	S	Warning ¹⁾
836	Process pressure above limit	Reduce process pressure	S	Alarm
837	Process pressure below limit	Increase process pressure	S	Warning ¹⁾
841	Flow velocity too high	Reduce flow rate	S	Warning ¹⁾
842	Process value below limit	Low flow cut off active! Check low flow cut off configuration	S	Warning ¹⁾
870	Measuring inaccuracy increased	 Check process Increase flow volume 	F	Alarm ¹⁾
881	Signal to noise ratio too low	 Check process conditions Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on) Replace sensor electronic module (ISEM) 	F	Alarm
882	Input signal faulty	 Check input signal parameterization Check external device Check process conditions 	F	Alarm
930	Sound velocity too high	 Check process conditions Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on) Replace sensor electronic module (ISEM) 	S	Warning ¹⁾
931	Sound velocity too low	 Check process conditions Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on) Replace sensor electronic module (ISEM) 	S	Warning ¹⁾
941	API/ASTM temperature out of specificat.	 Check process temperature with selected API/ASTM commodity group Check API/ASTM-related parameters 	S	Warning ¹⁾
942	API/ASTM density out of specification	 Check process density with selected API/ASTM commodity group Check API/ASTM-related parameters 	S	Warning ¹⁾
943	API pressure out of specification	 Check process pressure with selected API commodity group Check API related parameters 	S	Warning ¹⁾

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
953	Asymmetry noise signal too high path 1 to n	 Check process conditions Clean or replace transducers Replace sensor electronic module (ISEM) 	Μ	Alarm
954	Sound velocity deviation too high	 Check medium configuration Check process conditions Clean or replace transducers 	S	Warning ¹⁾

1) Diagnostic behavior can be changed.

12.9 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \implies 141$
- Via web browser $\rightarrow \triangleq 142$

Via "FieldCare" operating tool →

 [™]
 143

• Via "DeviceCare" operating tool $\rightarrow \implies 143$

Other pending diagnostic events can be displayed in the Diagnostic list submenu $\rightarrow \cong 151$

Navigation

"Diagnostics" menu

억 Diagnostics	
Actual diagnostics] → 🗎 150
Previous diagnostics] → 🗎 150
Operating time from restart) → 🗎 151
Operating time] → 🗎 151

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.


Parameter	Prerequisite	Description	User interface
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.10 Diagnostics list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

 $\text{Diagnostics} \rightarrow \text{Diagnostic list}$

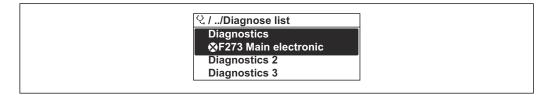

■ 33 Using the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \implies 141$
- Via web browser $\rightarrow \square 142$
- Via "FieldCare" operating tool $\rightarrow \square$ 143


12.11 Event logbook

12.11.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu \rightarrow **Event logbook** submenu \rightarrow Events list

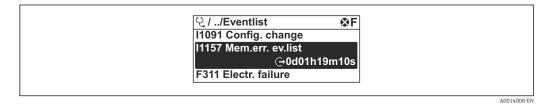

■ 34 Using the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the Extended HistoROM application package (order option) is enabled in the device, the event list can contain up to 100 entries.
- The event history includes entries for:

• Diagnostic events $\rightarrow \square 145$

• Information events $\rightarrow \square 152$

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostics event
 - ①: Occurrence of the event
 - \bigcirc : End of the event
- Information event

 \odot : Occurrence of the event

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \square 141$
- Via web browser →
 ¹ 142
- Via "FieldCare" operating tool →
 ¹
 ¹⁴³
- Via "DeviceCare" operating tool $\rightarrow \implies 143$

For filtering the displayed event messages $\rightarrow \square 152$

12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
11000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1137	Electronics changed
I1151	History reset
I1155	Reset electronics temperature
I1156	Memory error trend
I1157	Memory error event list
I1256	Display: access status changed
I1264	Safety sequence aborted
I1278	I/O module restarted
I1327	Zero point adjust failed signal path
I1335	Firmware changed

Info number	Info name
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1457	Measurement error verification failed
I1459	I/O module verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1517	Custody transfer active
I1518	Custody transfer inactive
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off
I1618	I/O module 2 replaced
I1619	I/O module 3 replaced
I1621	I/O module 4 replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server: login successful
I1628	Display: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1632	Display: login failed
I1633	CDI: login failed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1639	Max. switch cycles number reached
I1643	Custody transfer logbook cleared
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1651	Custody transfer parameter changed
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

12.12 Resetting the measuring device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ($\rightarrow \triangleq 115$).

12.12.1 Function range of "Device reset" parameter

Options Description			
Cancel	No action is executed and the user exits the parameter.		
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting		
Restart device The restart resets every parameter with data stored in volatile memory the factory setting (e.g. measured value data). The device configuration unchanged.			
Restore S-DAT backup	Restores the data that is saved on the S-DAT. Additional information: This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed. This option is displayed only in an alarm condition.		

12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

► Device information	
Device tag) → 🗎 155
Serial number) → 🗎 155
Firmware version) → 🗎 155
Device name) → 🗎 155
Order code) → 🗎 155
Extended order code 1) → 🗎 155
Extended order code 2) → 🗎 155
Extended order code 3) → 🗎 155
ENP version] → 🗎 155

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Prosonic Flow
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Prosonic Flow 500	-
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.		-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.		-
Extended order code 2	order code 2 Shows the 2nd part of the extended order code. Character string Image: The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. Character string		-
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

Parameter overview with brief description

12.14 Firmware history

Release date	Firmware Version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
01.2024	01.02.zz	Option 73	Update	Operating instructions	BA01837D/06/EN/02.24
08.2019	01.00.zz	Option 76	Original firmware	Operating instructions	BA01837D/06/EN/01.19

- It is possible to flash the firmware to the current version or the previous version using the service interface.
- For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
 - Specify the following details:
 - Product root: e.g. 9G5B
 The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.2 Measuring and test equipment

Endress+Hauser offers a variety of measuring and testing equipment, such as Netilion or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: \rightarrow 🗎 162

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and conversion of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document all repairs and conversions and enter the details in Netilion Analytics.

14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the Serial number parameter (→
 ^(⇒) 155) in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the web page for information:

http://www.endress.com/support/return-material

- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

14.5 Disposal

X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions!

 Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive media.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

 Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description	
Transmitter Proline 500 – digital	Transmitter for replacement or storage. Use the order code to define the follow: specifications: Approvals Output Input Display/operation Housing Software Proline 500 - digital transmitter: Order number: 9X5BXX-******A Proline 500 - digital transmitter: Installation Instructions EA01264D	
External WLAN antenna	 External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area". The external WLAN antenna is not suitable for use in hygienic applications. Additional information regarding the WLAN interface → 71. Order number: 71351317 Installation Instructions EA01238D 	
Pipe mounting set	Pipe mounting set for transmitter. Proline 500 – digital transmitter Order number: 71346427 Installation Instructions EA01195D	
Weather protection cover Transmitter Proline 500 – digital	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. Proline 500 - digital transmitter Order number: 71343504 Installation Instructions EA01191D	

Display guard Proline 500 – digital	Is used to protect the display against impact or scoring, for example from sand in desert areas.		
	1 Order number: 71228792		
	Installation Instructions EA01093D		
Connecting cable Proline 500 – digital	The connecting cable can be ordered directly with the measuring device (order co for "Cable, sensor connection) or as an accessory (order number DK9012).		
Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection" • Option B: 20 m (65 ft) • Option E: User-configurable up to max. 50 m		
	 Option F: User-configurable up to max. 165 ft 		
	Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1 000 ft)		

15.2 Communication-specific accessories

Accessories	Description
Fieldgate FXA42	Transmission of the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices
	 Technical Information TI01297S Operating Instructions BA01778S Product page: www.endress.com/fxa42
Field Xpert SMT50	The Field Xpert SMT50 table PC for device configuration enables mobile plant asset management. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	 Technical Information TI01555S Operating Instructions BA02053S Product page: www.endress.com/smt50
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	 Technical Information TI01342S Operating Instructions BA01709S Product page: www.endress.com/smt70
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.
	 Technical Information TI01418S Operating Instructions BA01923S Product page: www.endress.com/smt77

Accessories	Description		
Applicator	 Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. 		
	Applicator is available:Via the Internet: https://portal.endress.com/webapp/applicatorAs a downloadable DVD for local PC installation.		
Netilion	IloT Ecosystem: Unlock knowledgeWith the Netilion lloT Ecosystem, Endress+Hauser enables you to optimizeyour plant performance by digitizing workflows, creating knowledge andestablishing new levels of collaboration.Building decades of expertise in process automation, Endress+Hauser providesthe process industry with an lloT Ecosystem that allows data-driven insights.These insights can be applied to optimize processes resulting in increasedplant up-time, efficiency, reliability – and ultimately, a more profitable plant.www.netilion.endress.com		
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.		
DeviceCare	Tool to connect and configure Endress+Hauser field devices.		

15.3 Service-specific accessories

15.4 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.

16 Technical data

16.1 Application

The measuring device is intended only for the flow measurement of gases.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Proline Prosonic Flow uses a measurement method based on the transit time difference.
Measuring system	The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.
	Information on the structure of the device $ ightarrow extsf{B}$ 14

Measured variable	Direct measured variables			
	 Flow velocity Sound velocity Process temperature (optional): based on Pt1000 Class A platinum resistor Pressure (optional): based on pressure measuring cell for measuring absolute pressure 			
	Calculated measured variables			
	 Volume flow Corrected volume flow (corrected/standard volume flow) Mass flow Energy flow Density 			
	Optionally calculated measured variables			
	Order code for "Application package", option EF "Advanced gas analysis" • Wobbe index • Methane fraction • Molar mass • Dynamic viscosity • Calorific value			
	f Optionally calculated measured variables depend on the gas type.			
Measuring range	 With the specified measurement accuracy: v = 0.3 to 40 m/s (0.98 to 131.2 ft/s) With reduced measurement accuracy: v = 0.3 to 60 m/s (0.98 to 196.8 ft/s) 			

16.3 Input

Flow characteristic values in SI units

			Factory settings		
Nominal diameter		Recommended flow	Full scale value current output	Pulse value	Low flow cut off (v ~ 0.1 m/s)
[mm]	[in]	[m³/h]	[m³/h]	[m³/pulse]	[m³/h]
25	1	0.50 to 67	50	0.007	0.17
50	2	2.05 to 274	210	0.03	0.68
80	3	4.60 to 614	460	0.06	1.5
100	4	8 to 1064	800	0.1	2.7
150	6	18.1 to 2 414	1800	0.3	6.0
200	8	32 to 4235	3200	0.4	11
250	10	50 to 6662	5000	0.7	17
300	12	71 to 9426	7 100	1.0	24

			Factory settings			
Nominal diameter		Recommended flow	Full scale value current output	Pulse value	Low flow cut off (v ~ 0.1 m/s)	
[in]	[mm]	[ft³/hr]	[ft³/hr]	[ft³/pulse]	[ft³/hr]	
1	25	17.7 to 2 358	1800	0.2	5.9	
2	50	73 to 9668	7 300	1	24	
3	80	163 to 21694	16000	2	54	
4	100	282 to 37579	28000	4	94	
6	150	639 to 85253	64000	9	213	
8	200	1 122 to 149 544	110 000	16	374	
10	250	1764 to 235259	180000	25	588	
12	300	2 497 to 332 890	250000	35	832	

Flow characteristic values in US units

Recommended measuring range

🎦 Flow limit → 🖺 179

Operable flow range 133:1External measured values Input signal To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow for gases, the use of the integrated pressure and temperature measurement function is recommended: Temperature measurement to increase measurement accuracy (order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; integrated temperature measurement") Temperature and pressure measurement to increase measurement accuracy (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; integrated pressure + temperature measurement") The measuring device provides optional interface that enable the transmission of externally measured variables (temperature, pressure, gas composition (gas composition can only be transmitted via Modbus)) to the measuring device: Analog inputs 4-20 mA Digital inputs (via HART input or Modbus) Pressure values can be transmitted as absolute or gauge pressure. For gauge pressure, the atmospheric pressure must be specified by the customer. Various pressure and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section $\rightarrow \square 162$ Current input The measured values are written from the automation system to the measuring device via the current input $\rightarrow \square 166$. Digital communication

The measured values are written by the automation system via Modbus RS485.

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	 4 to 20 mA (active) 0/4 to 20 mA (passive)
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	< 30 V (passive)
Open-circuit voltage	< 28.8 V (active)
Possible input variables	PressureTemperature

Status input

Maximum input values	 DC -3 to 30 V If status input is active (ON): R_i >3 kΩ
Response time	Configurable: 5 to 200 ms
Input signal level	 Low signal: DC -3 to +5 V High signal: DC 12 to 30 V
Assignable functions	 Off Reset the individual totalizers separately Reset all totalizers Flow override

16.4 Output

Output signal

Modbus RS485

Physical interf	face	RS485 in accordance with EIA/TIA-485 standard
Terminating r	esistor	Integrated, can be activated via DIP switches

Current output 4 to 20 mA

Signal mode	Can be set to: • Active • Passive
Current range	Can be set to: • 4 to 20 mA NAMUR • 4 to 20 mA US • 4 to 20 mA • 0 to 20 mA (only if the signal mode is active) • Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	 Volume flow Corrected volume flow Mass flow Energy flow Sound velocity Flow velocity Electronics temperature Methane fraction ¹⁾ Molar mass ¹⁾ Density Dynamic viscosity ¹⁾ Calorific value ¹⁾ Wobbe index ¹⁾ Pressure ²⁾ Temperature ³⁾

1) Only for the order code for "Application package", option EF "Advanced gas analysis" and corresponding configuration

2) Only for the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

3) Only for the order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to: • Active • Passive
Maximum input values	DC 30 V, 250 mA (passive)

	DC 30 0 M (active)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	 Volume flow Corrected volume flow Mass flow Energy flow
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to 10000 Hz(f $_{max}$ = 12500 Hz)
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	 Volume flow Corrected volume flow Mass flow Energy flow Sound velocity Flow velocity Electronics temperature Methane fraction ¹⁾ Molar mass ¹⁾ Density Dynamic viscosity ¹⁾ Calorific value ¹⁾ Wobbe index ¹⁾ Pressure ²⁾ Temperature ³⁾
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s

Number of switching cycles	Unlimited
Assignable functions	 Disable On Diagnostic behavior Limit Volume flow Corrected volume flow Mass flow Energy flow Flow velocity Electronics temperature Sound velocity Methane fraction ¹) Molar mass ¹) Density Dynamic viscosity ¹) Calorific value ¹) Wobbe index ¹) Pressure ²) Temperature ³) Totalizer 1-3 Flow direction monitoring Status Low flow cut off

- 1) Only for the order code for "Application package", option EF "Advanced gas analysis" and corresponding configuration
- 2) Only for the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; pressure + temperature measurement integrated"
- 3) Only for the order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

Double pulse output

Function	Double pulse
Version	Open collector Can be set to: • Active • Passive • Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: \leq DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	 Volume flow Corrected volume flow Mass flow Energy flow

Relay output

Function	Switch output
Version	Relay output, galvanically isolated

Switching behavior	Can be set to: • NO (normally open), factory setting • NC (normally closed)
Maximum switching capacity (passive)	 DC 30 V, 0.1 A AC 30 V, 0.5 A
Assignable functions	 Disable On Diagnostic behavior Limit Volume flow Corrected volume flow Mass flow Energy flow Flow velocity Electronics temperature Sound velocity Methane fraction ¹⁾ Molar mass ¹⁾ Density Dynamic viscosity ¹⁾ Calorific value ¹⁾ Wobbe index ¹⁾ Pressure ²⁾ Temperature ³⁾ Totalizer 1-3 Flow direction monitoring Status Low flow cut off

1) Only for the order code for "Application package", option EF "Advanced gas analysis" and corresponding configuration

- Only for the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; pressure + temperature measurement integrated"
- 3) Only for the order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

User-configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

Signal on alarm Depending on the interface, failure information is displayed as follows:

Modbus RS485

Failure mode	Choose from:
	NaN value instead of current valueLast valid value

Current output 0/4 to 20 mA

4 to 20 mA

Failure mode	 Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Definable value between: 3.59 to 22.5 mA Actual value Last valid value 	
--------------	--	--

0 to 20 mA

Failure modeChoose from:• Maximum alarm: 22 mA• Definable value between: 0 to 20.5 mA	
---	--

Pulse/frequency/switch output

Pulse output				
Fault mode	Choose from: • Actual value • No pulses			
Frequency output				
Fault mode	Choose from: • Actual value • 0 Hz • Definable value between: 2 to 12 500 Hz			
Switch output				
Fault mode	Choose from: • Current status • Open • Closed			

Relay output

Failure mode	Choose from:
	 Current status
	 Open
	 Closed

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red lighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: Modbus RS485
- Via service interface
 - CDI-RJ45 service interface
 - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes			
	 The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred Diagnostic information via light emitting diodes → 137 			

Galvanic isolation

The outputs are galvanically isolated:

- from the power supply
- from one another
- from the potential equalization (PE) terminal

protocol-specific data	Protocol	Modbus Applications Protocol Specification V1.1		
	Response times	 Direct data access: typically 25 to 50 ms Auto-scan buffer (data range): typically 3 to 5 ms 		
	Device type	Slave		
	Slave address range	1 to 247		
	Broadcast address range	0		
	Function codes	 03: Read holding register 04: Read input register 06: Write single registers 08: Diagnostics 16: Write multiple registers 23: Read/write multiple registers 		
	Broadcast messages	Supported by the following function codes: 06: Write single registers 16: Write multiple registers 23: Read/write multiple registers 		
	Supported baud rate	 1 200 BAUD 2 400 BAUD 4 800 BAUD 9 600 BAUD 19 200 BAUD 38 400 BAUD 57 600 BAUD 115 200 BAUD 		

Data transmission mode	ASCIIRTU	
Data access	Each device parameter can be accessed via Modbus RS485.	
System integration	 Information regarding system integration → Modbus RS485 information Function codes Register information Response time Modbus data map 	

16.5 Power supply

Terminal assignment	→ 🗎 34				
Supply voltage	Order code "Power supply"	Terminal volta	ge	Frequency range	
		DC 24 V	±20%	-	
	Option I	AC 100 to 240	V -15+10%	50/60 Hz	
	T				
Power consumption	Transmitter Max. 10 W (active po	wer)			
	switch-on current				
Current consumption	Transmitter				
	 Max. 400 mA (24 V) Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz) 				
Power supply failure	 Totalizers stop at the last value measured. Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT). Error messages (incl. total operated hours) are stored. 				
Overcurrent protection element	 The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own. The circuit breaker must be easy to reach and labeled accordingly. Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A. 				
Electrical connection	→ 🗎 36				
Potential equalization	→ 🗎 40				
Terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm^2 (24 to 12 AWG).				

Cable entries	 Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) Thread for cable entry: NPT ½" G ½" M20 		
Cable specification	→ 🖺 29		
Overvoltage protection	Mains voltage fluctuations	→ 🗎 173	
	Overvoltage category	Overvoltage category II	
	Short-term, temporary overvoltage	Between cable and ground up to 1200 V, for max. 5 s	
	Long-term, temporary overvoltage	Between cable and ground up to 500 V	
Reference operating conditions	 Maximum permissible error according Calibration gas: dry air Accuracy information is based on accre ISO 17025. 		
Maximum measurement error	o.r. = of reading; o.f.s. = of full scale value Volume flow	e; abs. = absolute; T = medium temperature	
	Standard Order code for "Flow calibration", option A "1%"	 ±1.0 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ±2.0 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s) 	

The measuring device may be operated for flow velocities

Optional

1

traceable to ISO/IEC 17025"


Order code for "Flow calibration", option D "0.50%,

40 to 60 m/s (131.2 to 196.8 ft/s), but larger measurement errors may then occur.

• ±0.5 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s)

• ±1.0 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

The specification applies to Reynolds numbers $Re \ge 10\,000$. Larger measurement errors may occur for Reynolds numbers $Re < 10\,000$.

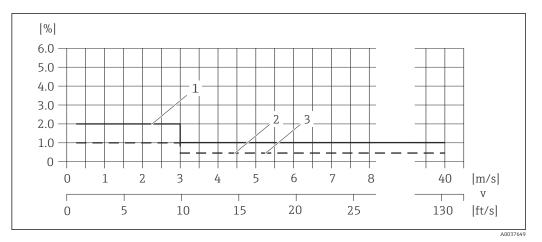

35 Maximum measurement error (volume flow) in % of reading

1 Standard (order code for "Flow calibration", option A "1%")

2 Optional (order code for "Flow calibration", option C "0.50%")

3 Optional (order code for "Flow calibration", option D "0.50%, traceable to ISO/IEC 17025"

Corrected volume flow

Standard Order code for "Flow calibration", option A "1%"	 ±1.2 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ±2.1 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)
Optional Order code for "Flow calibration", option C "0.50%"	 ±0.8 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ±1.2 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)
Optional Order code for "Flow calibration", option D "0.50%, traceable to ISO/IEC 17025"	 ±0.8 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ±1.2 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

The specification for corrected volume flow applies to the integrated temperature and pressure measurement (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; integrated pressure + temperature measurement"), when the pressure measuring cell is operated in the optimum pressure measurement range.




The measuring device may be operated for flow velocities 40 to 60 m/s (131.2 to 196.8 ft/s), but larger measurement errors may then occur.



The specification applies to Reynolds numbers $\text{Re} \ge 10000$. Larger measurement errors may occur for Reynolds numbers Re < 10000.

Temperature

Optional (order code for "Measuring tube; Transducer; Sensor version", option AB "316L; Titanium Gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; integrated pressure + temperature measurement") +0.35 °C + 0.002 · T °C (+0.63 °E + 0.0011 · (T = 32) °E)

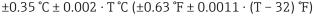

The additional measurement error caused by heat conduction is not taken into consideration here. The error caused by heat conduction can be reduced by using thermal insulation $\rightarrow \cong 24$.

Pressure

Optional (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; integrated pressure + temperature measurement")

The specific measurement errors refer to the position of the measurement in the measuring pipe and do not correspond to the pressure in the pipe connection line upstream or downstream from the measuring device.

Order code for "Pressure component"	Nominal value absolute [bar (psi)]	Pressure ranges and measurement errors		
		Pressure range, absolute [bar (psi)]	Measurement error, absolute	
Option B "Pressure measuring cell 2bar/29psi abs"	2 bar (30 psi)	$\begin{array}{l} 0.01 \ (0.1) \leq p \leq 0.4 \ (5.8) \\ 0.4 \ (5.8) \leq p \leq 2 \ (29) \end{array}$	±0.5 % of 0.4 bar (5.8 psi) ±0.5 % o.r.	
Option C "Pressure measuring cell 4bar/58psi abs"	4 bar (60 psi)	$\begin{array}{l} 0.01 \; (0.1) \leq p \leq 0.8 \; (11.6) \\ 0.8 \; (11.6) \leq p \leq 4 \; (58) \end{array}$	±0.5 % of 0.8 bar (11.6 psi) ±0.5 % o.r.	
Option D "Pressure measuring cell 10bar/145psi abs"	10 bar (150 psi)	$\begin{array}{l} 0.01 \ (0.1) \leq p \leq 2 \ (29) \\ 2 \ (29) \leq p \leq 10 \ (145) \end{array}$	±0.5 % of 2 bar (29 psi) ±0.5 % o.r.	
Option E "Pressure measuring cell 40bar/580psi abs"	40 bar (600 psi)	$0.01 (0.1) \le p \le 8 (116)$ 8 (116) $\le p \le 40 (580)$	±0.5 % of 8 bar (116 psi) ±0.5 % o.r.	
Option F "Pressure measuring cell 100bar/1450psi abs"	100 bar (1500 psi)	$\begin{array}{l} 0.01 \; (0.1) \leq p \leq 20 \; (290) \\ 20 \; (290) \leq p \leq 100 \; (1450) \end{array}$	±0.5 % of 20 bar (290 psi) ±0.5 % o.r.	

Sound velocity

±0.2 % o.r.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μΑ	
----------	-------	--

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50 ppm o.r. (over the entire ambient temperature range)

Repeatability

o.r. = of reading

Volume flow

- ±0.2 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s)
- ±0.4 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

Corrected volume flow

- ±0.25 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s)
- ±0.45 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

Temperature

±0.175 °C ± 0.001 · T °C (±0.315 °F ± 0.00055 · (T – 32) °F)

Pressure

Optional (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; integrated pressure + temperature measurement")

Order code for "Pressure component"	Nominal value absolute [bar (psi)]	Pressure ranges and measurement errors		
		Pressure range, absolute [bar (psi)]	Measurement error, absolute	
Option B "Pressure measuring cell 2bar/29psi abs"	2 bar (30 psi)	$\begin{array}{l} 0.01 \; (0.1) \leq p \leq 0.4 \; (5.8) \\ 0.4 \; (5.8) \leq p \leq 2 \; (29) \end{array}$	±0.1 % of 0.4 bar (5.8 psi) ±0.1 % o.r.	
Option C "Pressure measuring cell 4bar/58psi abs"	4 bar (60 psi)	$\begin{array}{l} 0.01 \; (0.1) \leq p \leq 0.8 \; (11.6) \\ 0.8 \; (11.6) \leq p \leq 4 \; (58) \end{array}$	±0.1 % of 0.8 bar (11.6 psi) ±0.1 % o.r.	
Option D "Pressure measuring cell 10bar/145psi abs"	10 bar (150 psi)	$\begin{array}{c} 0.01 \; (0.1) \leq p \leq 2 \; (29) \\ 2 \; (29) \leq p \leq 10 \; (145) \end{array}$	±0.1 % of 2 bar (29 psi) ±0.1 % o.r.	
Option E "Pressure measuring cell 40bar/580psi abs"	40 bar (600 psi)	$\begin{array}{l} 0.01 \; (0.1) \leq p \leq 8 \; (116) \\ 8 \; (116) \leq p \leq 40 \; (580) \end{array}$	±0.1 % of 8 bar (116 psi) ±0.1 % o.r.	
Option F "Pressure measuring cell 100bar/1450psi abs"	100 bar (1500 psi)	$\begin{array}{l} 0.01 \ (0.1) \leq p \leq 20 \ (290) \\ 20 \ (290) \leq p \leq 100 \ (1450) \end{array}$	±0.1 % of 20 bar (290 psi) ±0.1 % o.r.	

Sound velocity

±0.04 % o.r.

Influence of ambient temperature	Current output			
	Temperature coefficient	Max. 1 µA/°C		
	Pulse/frequency output			
	Temperature coefficient	No additional effect. Included in accuracy.		
	16.7 Mounting			
Mounting requirements	→ 🗎 21			

16.8 Environment


Ambient temperature range	→ ■ 23 Temperature tables		
	Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.		
	For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.		
Storage temperature	All components except display modules: −40 to +80 °C (−40 to +176 °F), preferably at +20 °C (+68 °F)		
	Display modules		

-40 to +80 °C (-40 to +176 °F)

Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.			
Operating height	 According to EN 61010-1 ≤ 2 000 m (6562 ft) > 2 000 m (6562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series) 			
Degree of protection	Transmitter			
	 IP66/67, Type 4X enclosure, suitable for pollution degree 4 When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2 Display module: IP20, Type 1 enclosure, suitable for pollution degree 2 			
	Sensor			
	 IP66/67, Type 4X enclosure, suitable for pollution degree 4 When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2 			
	Optional			
	External WLAN antenna			
	IP67			
Shock and vibration	Vibration sinusoidal, in accordance with IEC 60068-2-6			
resistance	 2 to 8.4 Hz, 7.5 mm peak 8.4 to 2 000 Hz, 2 g peak 			
	Vibration broad-band random, according to IEC 60068-2-64			
	 10 to 200 Hz, 0.01 g²/Hz 200 to 2 000 Hz, 0.003 g²/Hz Total: 2.70 g rms 			
	Shock half-sine, according to IEC 60068-2-27			
	6 ms 50 g			
	Rough handling shocks according to IEC 60068-2-31			
Electromagnetic	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)			
compatibility (EMC)	Details are provided in the Declaration of Conformity.			
	This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.			
	16.9 Process			
Medium temperature range	 Sensor Without integrated pressure measuring cell: -50 to +150 °C (-58 to +302 °F) With integrated pressure measuring cell: -50 to +100 °C (-58 to +212 °F) 			


Medium pressure range	Min. medium pressure: 0.7 bar (10.2 psi) absolute The maximum permitted medium pressure is defined by the pressure/temperature curves (see the "Technical Information" document) and the pressure specifications of the integrated pressure measuring cell (optional; order code for "Measuring tube; transducer; sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated").				
	 WARNING The maximum pressure for the measuring device depends on the lowest-rated element with regard to pressure. Note specifications regarding the pressure range of the pressure measuring cell. The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PS". The abbreviation "PS" corresponds to the MWP (maximum working pressure) of the pressure measuring cell. The MWP for the pressure measuring cell depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection must be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration. The MWP may be applied at the device for an unlimited period. The MWP is indicated on the nameplate. This value refers to a reference temperature of +20 °C (+68 °F) and may be applied to the pressure measuring cell for an unlimited time. The OPL (over pressure limit = sensor overload limit) for the measuring device depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection has to be taken into consideration in addition to the pressure measuring cell. Also take the process connection has to be taken into consideration in addition to the pressure measuring cell. Also take the process connection has to be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration. The test pressure corresponds to the over pressure limit of the pressure measuring cell and may be applied only temporarily to ensure that the measurement is within the specifications and no permanent damage occurs. 				
				MWP	OPL
	Pressure measuring cell	Lower (LRL)	Upper (URL)		OFL
		[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]
	2 bar (30 psi)	0 (0)	+2 (+30)	6.7 (100.5)	10 (150)
	4 bar (60 psi)	0 (0)	+4 (+60)	10.7 (160.5)	16 (240)
	10 bar (150 psi)	0 (0)	+10 (+150)	25 (375)	40 (600)
	40 bar (600 psi)	0 (0)	+40 (+600)	100 (1500)	160 (2 400)
	100 bar (1500 psi)	0 (0)	+100 (+1500)	100 (1500)	160 (2400)
Pressure-temperature ratings	For an overview of the pressure-temperature ratings for the process connections, see the Technical Information				
Rupture disk	The neck of the measuring device is always fitted with a rupture disk with a triggering pressure of 10 to 15 bar (145 to 217.5 psi). The rupture disk is used for leak detection and for the controlled release of pressure in the neck of the measuring device. The measuring device with an installed rupture disk meets the dual seal requirements of ANSI/ ISA-12.27.01.				
Flow limit	The diameter of the pipe a	and the flow rate o	letermine the nomi	nal diameter o	f the sensor.
	For an overview of the full scale values for the measuring range, see the "Measuring range" section $\rightarrow \square 164$				

• The minimum recommended full scale value is approx. 1/20 of the maximum full scale value. • In most applications, 10 to 50 % of the maximum full scale value can be considered ideal. Pressure loss No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter. Thermal insulation For optimum measurement performance, make sure that no heat transfer (heat loss or heat supply) can take place at the sensor. This can be ensured by installing thermal insulation. The formation of condensation in the measuring device can also be limited in this way. Thermal insulation is particularly recommended in situations in which the difference between the process temperature and ambient temperature is large. This difference leads to an error during temperature measurement that is caused by heat conduction (known as the "heat conduction error"). **WARNING** Electronics overheating on account of thermal insulation! ► Recommended orientation: horizontal orientation, sensor connection housing pointing downwards. ▶ Do not insulate the sensor connection housing. • Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F) ▶ Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat. The thermal insulation should never cover the transmitter housing and the pressure measuring cell.

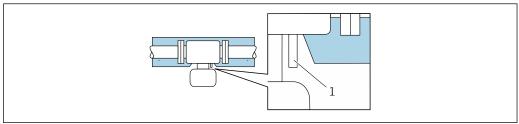

I *36 Thermal insulation with free extended neck and pressure measuring cell*

16.10 Mechanical construction

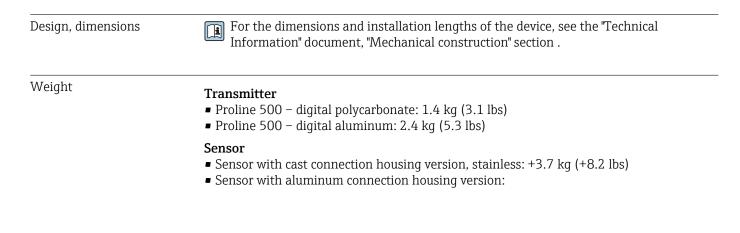

¹ Pressure measuring cell

Weight in SI units

Nominal diameter		EN (DIN) [kg] Pressure rating			
[mm]	[in]	PN 16	PN 40	PN 63	PN 100
25	1	10	10	12	12
50	2	15	15	19	21
80	3	21	21	25	29
100	4	23	26	32	39
150	6	35	42	62	76
200	8	51	71	98	128
250	10	77	114	143	206
300	12	107	161	201	297

Nominal d	liameter	ASME [kg]			
			Pressur	e rating	
[mm]	[in]	Class 150 RF Sch.40	Class 300 RF Sch.40	Class 300 RF Sch.80	Class 600 RF Sch.80
25	1	9	10	10	11
50	2	14	16	16	18
80	3	21	24	24	28
100	4	27	35	35	49
150	6	39	55	56	89
200	8	66	91	93	136
250	10	93	133	133	222
300	12	142	193	198	278

Weight in US units

Nominal d	liameter	ASME [lbs]			
			Pressur	e rating	
[mm]	[in]	Class 150 RF Sch.40	Class 300 RF Sch.40	Class 300 RF Sch.80	Class 600 RF Sch.80
25	1	20	22	22	24
50	2	31	35	35	40
80	3	46	53	53	62
100	4	60	77	77	108
150	6	86	121	123	196
200	8	146	201	205	300
250	10	205	293	293	490
300	12	313	426	437	613

Materials

 If the order code for "Additional approval", option LR "NACE MR0175 / ISO 15156 (wetted parts), declaration" or LS "NACE MR0103 / ISO 17945 (wetted parts), declaration" was ordered, all the metal materials used meet the NACE MR0175 and NACE MR0103 standards.

• The seal material is tested in accordance with NACE TM0187 and NORSOK M710-B.

A DANGER

The ultrasonic transducer may not be leak-tight!

Toxic and/or explosive gases may escape!

- The material of the seal is not suitable for applications in pure steam.
- ► The material of the seal must not be exposed to a pressure increase at low process temperatures below -40 °C (-40 °F).

Transmitter housing

Housing of Proline 500 - digital transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Window material

Order code for "Transmitter housing":


- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic

Sensor connection housing

Order code for "Sensor connection housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

Cable entries/cable glands

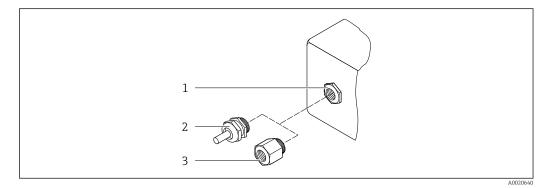

37 Possible cable entries/cable glands

1 Female thread M20 × 1.5

2 Cable gland M20 × 1.5

3 Adapter for cable entry with female thread G ¹/₂" or NPT ¹/₂"

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
 Adapter for cable entry with female thread G ¹/₂" Adapter for cable entry with female thread NPT ¹/₂" 	Nickel-plated brass
 Only available for certain device versions: Order code for "Transmitter housing": Option A "Aluminum, coated" Option D "Polycarbonate" Order code for "Sensor connection housing": Proline 500 - digital: Option A "Aluminum coated" Option A "Aluminum coated" Option L "Cast, stainless" 	

Connecting cables

UV rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Connecting cable for sensor - Proline 500 – digital transmitter PVC cable with copper shield

Measuring pipe

Stainless steel: 1.4408/1.4409 (CF3M)

Process connections

Stainless steel: 1.4404 (316, 316L)

Available process connections →
[●] 184

Cable for transmitter neck/ultrasonic transducer

Including connections for transmitter neck and ultrasonic transducer Stainless steel: 1.4404 (316, 316L)

Ultrasonic transducer

Grade 2 titanium Sensor holder: stainless steel: 1.4404 (316, 316L)

Seal for ultrasonic transducer

FKM material group

Temperature sensor

Stainless steel: 1.4404 (316, 316L)

Seal for temperature sensor

Seal-free (self-sealing NPT thread with sealant)

Pressure measuring cell

Stainless steel: 1.4404 (316, 316L)

Seal for pressure measuring cell

Seal-free (self-sealing NPT thread with sealant)

Accessories


Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections Flanges: ■ EN 1092-1-B1 ASME B16.5 For information on the different materials used in the process connections $\rightarrow \square$ 183 16.11 Display and user interface Can be operated in the following languages: Languages Via local operation English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Vietnamese, Czech, Swedish Via web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Vietnamese, Czech, Swedish • Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese Local operation Via display module Equipment: • Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control" • Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN" Information about WLAN interface \rightarrow \square 71 -

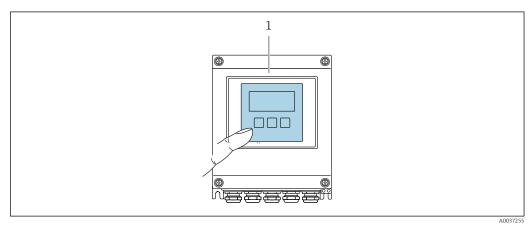

■ 38 Operation with touch control

1 Proline 500 – digital

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured

Operating elements

- External operation via touch control (3 optical keys) without opening the housing: \pm , \Box , Ξ
- Operating elements also accessible in the various zones of the hazardous area

Remote operation	→ 🗎 70		
Service interface	→ 🖺 70		

Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with web browser	CDI-RJ45 service interfaceWLAN interface	Special Documentation for device
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	 CDI-RJ45 service interface WLAN interface Fieldbus protocol 	→ ➡ 162
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	 CDI-RJ45 service interface WLAN interface Fieldbus protocol 	→ ➡ 162
Field Xpert	SMT70/77/50	 All Fieldbus protocols WLAN interface Bluetooth CDI-RJ45 service interface 	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue App	Smart phone or tablet with iOs or Android	WLAN	→ ● 162

Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com \rightarrow Download Area

Web server

With the integrated web server, the device can be operated and configured via a web browser service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

	 Supported functions Data exchange between the operating unit (such as a notebook, for example,) and measuring device: Upload the configuration from the measuring device (XML format, configuration backup). Save the configuration to the measuring device (XML format, restore configuration). Export event list (.csv file) Export parameter settings (.csv file or PDF file, document the measuring point configuration) Export the Heartbeat verification report (PDF file, only available with the Heartbeat Verification → ⁽¹⁾ 190 application package) Flash firmware version for device firmware upgrade, for example Download driver for system integration Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package ⁽²⁾ 190)
HistoROM data management	The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.
	When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	 Event logbook, e.g. diagnostic events Parameter data record backup Device firmware package 	 Measured value logging ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Indicator (minimum/maximum values) Totalizer value 	 Sensor data: e.g. nominal diameter Serial number Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface PC board in the connection compartment	Can be plugged into the user interface PC board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
- Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transmission

Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging

Manual

- If the **Extended HistoROM** application package (order option) is enabled:
- Recording of 1 to 4 channels of up to 1000 measured values (up to 250 measured values per channel)
- User configurable recording interval
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

16.12 Certificates and approvals

Current certificates and approvals for the product are available at <u>www.endress.com</u> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

CE mark	The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.
	Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
UKCA marking	The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

	Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom www.uk.endress.com			
RCM marking	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".			
Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.			
Pressure Equipment Directive	 With the marking a) PED/G1/x (x = category) or b) PESR/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or b) Schedule 2 of Statutory Instruments 2016 No. 1105. Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105. The scope of application is indicated a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105. 			
Radio approval	The measuring device has radio approval.			
	For detailed information on the radio approval, see the Special Documentation $\rightarrow \square$ 191			
Additional certification	CRN approval			
	Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.			
	Tests and certificates			
	 EN10204-3.1 material certificate, wetted parts and sensor housing (order code for "Test, certificate", option JA) Pressure test, internal process, Heartbeat Technology verification report (order code for "Test, certificate", option JB) Ambient temperature -50 °C (-58 °F) (order code for "Test, certificate", option JP) Helium leak testing, internal procedure, Heartbeat Technology verification report (order code for "Code for "Test, certificate", option JP) Helium leak testing, internal procedure, Heartbeat Technology verification report (order code for "Test, certificate", option JP) Helium leak testing, internal procedure, Heartbeat Technology verification report (order code for "Test, certificate", option KC) EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report 			

Testing of welds

Order code for "Test, certificate", option	Radiographic testing standard		Process connection
	ISO 10675-1 ZG1	ASME B31.3 NFS	
KE	х		RT
KI		х	RT
К5	х		DR
K6		Х	DR
5	testing, DR = Digital rad ions with test report	liography	

External standards and	■ EN 60529
guidelines	Degrees of protection provided by enclosure (IP code)
	■ EN 61010-1
	Safety requirements for electrical equipment for measurement, control and laboratory
	use - general requirements
	■ IEC/EN 61326-2-3
	Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC
	requirements).
	NAMUR NE 21
	Electromagnetic compatibility (EMC) of industrial process and laboratory control
	equipment
	 NAMUR NE 32 Data retention in the event of a neuror failure in field and control instruments with
	Data retention in the event of a power failure in field and control instruments with microprocessors
	 NAMUR NE 43
	Standardization of the signal level for the breakdown information of digital transmitters
	with analog output signal.
	 NAMUR NE 53
	Software of field devices and signal-processing devices with digital electronics
	• NAMUR NE 105
	Specifications for integrating fieldbus devices in engineering tools for field devices
	NAMUR NE 107
	Self-monitoring and diagnosis of field devices
	 NAMUR NE 131
	Requirements for field devices for standard applications
	• ETSI EN 300 328
	Guidelines for 2.4 GHz radio components.
	• EN 301489
	Electromagnetic compatibility and radio spectrum matters (ERM). • AGA Report No. 9
	• AGA Report No. 9 Measurement of gas by multipath ultrasonic meters.
	 ISO 17089
	Measurement of fluid flow in closed conduits – Ultrasonic meters for gas.
	Medsurement of flata flow in closed conduits – offrasonie meters for gas.
	16.13 Application packages
	Torre Thereadon bacanden

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your

	local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.
	Detailed information on the application packages: Special Documentation $\rightarrow \square 192$
Diagnostic functionality	Order code for "Application package", option EA "Extended HistoROM"
	Comprises extended functions concerning the event log and the activation of the measured value memory.
	Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
	 Data logging (line recorder): Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.
	For detailed information, see the Operating Instructions for the device.
Heartbeat Technology	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"
	 Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high total test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk evaluation.
	 Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact the measuring application has on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality.
	For detailed information, see the Special Documentation for the device.
Advanced gas analysis	Order code for "Application package", option EF "Advanced gas analysis". The application package can only be ordered in combination with the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated".
	The application package can be used to calculate the most important gas properties (molar mass, gross calorific value, Wobbe index etc.).
	 The following gas types are available: Single gas (known gas) Gas mixture (known composition) Coal gas/biogas (measurement of methane fraction)

- Natural gas standardized calculation (with internationally recognized gas models: AGA NX-19, ISO 12213-2, ISO 12213-3, AGA 5, ISO 6976)
- Natural gas use of sound velocity (sound velocity-based model for measuring a natural gas whose composition is unknown or variable)
- User-specific gas (generic gas or gas mixture without knowledge of the composition of the gas)

16.14 Accessories

Overview of accessories available for order \rightarrow 🖺 160

16.15 Supplemental documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

Standard documentation **Brief Operating Instructions**

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Prosonic Flow G	KA01374D

Brief Operating Instructions for the transmitter

Measuring device	Documentation code
Proline 500 – digital	KA01378D

Technical Information

Measuring device	Documentation code
Prosonic Flow G 500	TI01386D

Description of Device Parameters

	Documentation code		
Measuring device	HART	Modbus RS485	
Prosonic Flow G 500	GP01132D	GP01133D	

Supplementary device-

Safety Instructions

dependent documentation

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex ia	XA01850D
ATEX/IECEx Ex ec	XA01849D
cCSAus Ex ia	XA01852D

Contents	Documentation code
cCSAus Ex ec	XA01851D
cCSAus XP	XA01853D
EAC Ex ia	XA02471D
EAC Ex nA	XA02472D
JPN Ex d	XA02077D
KCs Ex d	XA03193D
INMETRO Ex ia	XA01997D
INMETRO Ex ec	XA01998D
NEPSI Ex ia	XA02045D
NEPSI Ex nA	XA02046D
UKEX Ex ia	XA02576D
UKEX Ex ec	XA02577D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Advanced gas analysis	SD02352D
Heartbeat Technology	SD02305D
Web server	SD02312D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	 Access the overview of all the available spare part sets via <i>Device Viewer</i> → ^B 158 Accessories available for order with Installation Instructions → ^B 160

Index

A

С

Cable entries
Technical data
Cable entry
Degree of protection
CE mark
Certificates
Check
Connection
Mounting
Checklist
Post-connection check
Post-mounting check
Cleaning
Exterior cleaning
Commissioning
Advanced settings
Configuring the measuring device 80
Configuring error response mode, Modbus RS485 144
Connecting the connecting cable
Proline 500 – digital transmitter
Sensor connection housing, Proline 500 - digital 36
Terminal assignment of Proline 500 - digital 36
Connecting the measuring device
Proline 500 – digital
Connecting the signal cable/supply voltage cable
Proline 500 – digital transmitter
Connection
see Electrical connection
Connection cable
Connection preparations
Connection tools

Context menu Calling up	· · · · · · · ·	58 58
D		
Date of manufacture	16	17
Declaration of Conformity		
Defining the access code		
Degree of protection		
Design		
Measuring device		
Operating menu	4	49
Device components		
Device description files		75
Device locking, status	12	22
Device name		
Sensor		
Transmitter		
Device repair		
Device revision		75 75
Device type code		
Device Viewer		
Device description file		
Diagnosis	••••	, ,
Symbols	1	39
Diagnostic behavior		
Explanation	14	40
Symbols		
Diagnostic information		
Communication interface		
Design, description		
DeviceCare		
FieldCare		
LEDs		37
Local display		39
Overview		45
Remedial measures		45
Web browser		41
Diagnostic message		
Diagnostics list		
Dimensions	••••	
see Write protection switch		
Direct access		60
Disabling write protection		
Display		
see Local display		
Display area		
For operational display		51
In the navigation view		
Display values		
For locking status		
Displaying the measured value history	1	32

Disposal 159
Document
Function
Symbols
Document function 6
Е
Editing view
Input screen
Using operating elements
Electrical connection
Computer with web browser (e.g. Microsoft Edge) 70
Degree of protection
Measuring device
Operating tool (e.g. FieldCare, DeviceCare, AMS
Device Manager, SIMATIC PDM)
Operating tools
Via Modbus RS485 protocol
Via service interface (CDI-RJ45) 70
Via WLAN interface
Web server
WLAN interface
Electromagnetic compatibility
Electronics module
Enabling write protection
Enabling/disabling the keypad lock 63
Endress+Hauser services
Maintenance
Repair
Error messages
see Diagnostic messages
Event logbook
Events list
Ex approval
Extended order code
Sensor
Transmitter
Exterior cleaning
F
Field of application

Field of application
Residual risks
FieldCare
Device description file
Establishing a connection
Function
User interface
Filtering the event logbook
Firmware
Release date
Version
Firmware history
Flow direction
Flow limit
Function codes
Functions
see Parameters

	G Galvanic isolation
	H Hardware write protection
	I Identifying the measuring device
	Influence Ambient temperature
	L Languages, operation options
•	MMain electronics module14Maintenance157Maintenance tasks157Managing the device configuration113Manufacturer ID75Materials181Maximum measurement error174Measured variables
	Calculated

Measuring and test equipment 157

Configuring80Conversion158Design14Disposal159Mounting the sensor26Preparing for electrical connection34Preparing for mounting26

see Process variables

Measuring device

Removing
Repairs
Switching on
Measuring principle 163
Measuring range
Measuring range, recommended
Measuring system
Menu
Diagnostics
Setup
Menus
For measuring device configuration 80
For specific settings
Modbus RS485
Configuring error response mode
Diagnostic information
Function codes
Modbus data map
Read access
Reading out data 79
Register addresses
Register information
Response time
Scan list
Write access
Mounting
Mounting conditions
Thermal insulation
Mounting dimensions
see Dimensions
Mounting location
Mounting preparations 26
Mounting requirements
Dimensions
Inlet and outlet runs
Mounting location
Orientation
Rupture disk
Mounting tool
N
Namonlato

ivamepiate
Sensor
Transmitter
Navigation path (navigation view) 54
Navigation view
In the submenu
In the wizard
Netilion
Numeric editor

0

0
Onsite display
Numeric editor
Operable flow range 165
Operating elements
Operating height
Operating keys
see Operating elements

Design49Menus, submenus49Submenus and user roles50Operating philosophy50Operation122Operation options48Operational display51Operational safety10Order code16, 17Orientation (vertical, horizontal)21Outlet runs22Output signal167	
P	
Packaging disposal	
Changing	
Entering values or text	
Parameter settings	
Administration (Submenu)	,
Advanced setup (Submenu) 106	
Communication (Submenu)	
Configuration backup (Submenu) 113	,
Current input)
Current input (Wizard)	
Current input 1 to n (Submenu) 126	,
Current output	
Current output (Wizard)	
Data logging (Submenu)	
Define access code (Wizard)	
Device information (Submenu) 154	
Diagnostics (Menu)	
Display (Submenu)	
Display (Wizard) 100	
Double pulse output	
Double pulse output (Submenu)	
Double pulse output (Wizard)	
Gas analysis (Wizard) 103	
I/O configuration	
I/O configuration (Submenu)	
Low flow cut off (Wizard)	
Process variables (Submenu)	
Pulse/frequency/switch output (Wizard) 91, 92, 95	
Pulse/frequency/switch output 1 to n (Submenu) 128	
Relay output	
Relay output 1 to n (Submenu)	
Relay output 1 to n (Wizard)	
Reset access code (Submenu)	
Sensor adjustment (Submenu)	
Setup (Menu)	
Simulation (Submenu))
Status input	
Status input 1 to n (Submenu)	,
Status input 1 to n (Wizard) 87	,
System units (Submenu)	
System values (Submenu)	,

Operating menu

Totalizer (Submenu)
Totalizer 1 to n (Submenu)
Totalizer handling (Submenu)
Value current output 1 to n (Submenu) 127
Web server (Submenu)
WLAN settings (Wizard) 111
Performance characteristics
Post-connection check
Post-connection check (checklist)
Post-mounting check
Post-mounting check (checklist) 28
Potential equalization
Power consumption
Power supply failure 173
Pressure Equipment Directive 188
Pressure loss
Pressure-temperature ratings 179
Process connections
Product safety
Proline 500 – digital transmitter
Connecting the signal cable/supply voltage cable 39
Protecting parameter settings

R

Radio approval 188
RCM marking 188
Read access
Reading off measured values
Reading out diagnostic information, Modbus RS485 144
Recalibration
Reference operating conditions
Registered trademarks
Remedial measures
Calling up
Closing 141
Remote operation
Repair
Notes
Repair of a device 158
Repeatability
Replacement
Device components
Requirements for personnel
Return
Rupture disk
Safety instructions
Triggering pressure 179
S
Safety
Sensor
Mounting
Serial number
Setting the operating language 80
Settings
Adapting the measuring device to the process
conditions
Administration
Advanced display configurations

Communication interface		
Current input		
Current output		. 88
Double pulse output		. 99
Gas analysis		103
I/O configuration		
Local display		
Low flow cut off		
Managing the device configuration		
Operating language		
Pulse output		
Pulse/frequency/switch output		
Relay output		
Resetting the device		
Resetting the totalizer		
Sensor adjustment		
Simulation		
Status input		
Switch output		
System units		
Tag name		
Totalizer		
Totalizer reset		
WLAN		
Shock and vibration resistance		
Signal on alarm		
Software release		
Sound velocity range		178
Spare part		158
Spare parts		158
Special connection instructions		
Standards and guidelines		189
Status area		
For operational display		. 51
In the navigation view		
Status signals	139.	142
Storage concept		
Storage conditions		
Storage temperature		
Storage temperature range		
Submenu		
Administration	114.	115
Advanced setup		
Communication		
Configuration backup		
Current input 1 to n		126
Data logging		132
Device information		154
Display		108
Double pulse output		129
Events list		151
I/O configuration		
		. 65 126
Input values		120
Measured values		
Output values		127
Overview		
Process variables		123
Pulse/frequency/switch output 1 to n		128
Relay output 1 to n		178

Reset access code
Sensor adjustment
Simulation
Status input 1 to n
System units
System values
Totalizer
Totalizer 1 to n
Totalizer handling
Value current output 1 to n
Web server
Supply voltage
Switch output
Symbols
Controlling data entries
For communication
For diagnostic behavior
For locking
For measured variable
For measurement channel number 51
For menus
For parameters
For status signal
For submenu
For wizards
In the status area of the local display 51
Input screen
Operating elements
System design
Measuring system
see Measuring device design
System integration
Т
Technical data, overview
Temperature range
Ambient temperature range
Ambient temperature range for display 184
Medium temperature
Storage temperature
Terminal assignment

Terminal assignment of connecting cable for Proline

Sensor connection housing36Terminals173Tests and certificates188Text editor56Thermal insulation24, 180

General
U
UKCA marking
Use of measuring device
Borderline cases
Incorrect use
see Intended use User roles
0.561 10165
V
Version data for the device
W
Weight
Transport (notes)
Wizard
Current input
Current output
Define access code
Display
Double pulse output99Gas analysis103
Low flow cut off
Pulse/frequency/switch output
Relay output 1 to n
Status input 1 to n
WLAN settings
WLAN settings 111
Workplace safety
Write access
Write protection
Via access code
Via write protection switch
Write protection switch

Troubleshooting

Index

500- digital

Tool

Tool tip

Totalizer

Tools

see Help text



www.addresses.endress.com

