BA01450G/00/EN/08.23-00 71632731 2023-11-01 Valid as of version 01.07.zz (Device firmware)


# Operating Instructions Micropilot NMR81

Tank Gauging





- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

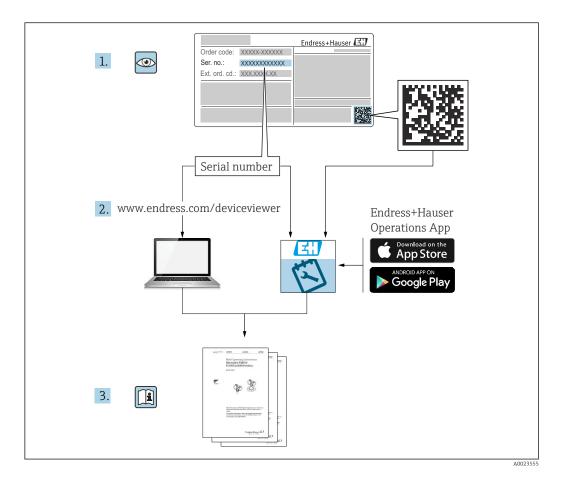

### Table of contents

1	About this document
1.1	Document function
1.2	Symbols 6
1.3	Documentation
1.4	Registered trademarks 8
2	Basic safety instructions
2.1	Requirements for the personnel
2.2	Intended use
2.3	Workplace safety 10
2.4	Operational safety 10
2.5	Product safety 10
3	Product description 11
3.1	Product design 11
4	Incoming acceptance and product
	identification 12
4.1	Incoming acceptance 12
4.2	Product identification 12
4.3	Storage and transport 14
5	Installation 15
5.1	Installation conditions 15
5.2	Post-installation check 20
6	Electrical connection 21
6.1	Terminal assignment 21
6.2	Connecting requirements 42
6.3	Ensuring the degree of protection
6.4	Post-connection check 43
7	Operability 44
7.1	Overview of the operation options 44
7.2	Structure and function of the operating
7.3	menu
	remote display and operating module 46
7.4	Access to the operating menu via the service interface and FieldCare
7.5	Access to the operating menu via Tankvision
	Tank Scanner NXA820 and FieldCare
8	System integration
8.1	Overview of the Device Description files
	(DTM) 60
9	Commissioning 61
9.1	Terms related to tank measurement 61

9.2 9.3 9.4 9.5 9.6 9.7	Initial settings61Configuring the measuring device64Configuring the tank gauging application66Advanced settings91Simulation91Protecting settings from unauthorized access91
<b>10</b> 10.1 10.2	Operation92Reading off the device locking status92Reading off measured values92
<b>11</b> 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8	Diagnostics and troubleshooting93General trouble shooting93Diagnostic information on local display94Diagnostic information in FieldCare97Overview of the diagnostic messages99Diagnostic list105Reset measuring device105Device information105Firmware history105
<b>12</b> 12.1 12.2	Maintenance106Maintenance tasks106Endress+Hauser services106
<b>13</b> 13.1 13.2 13.3 13.4 13.5	Repair107General information on repairs107Spare parts108Endress+Hauser services108Return108Disposal108
<b>14</b> 14.1	Accessories109Device-specific accessories109
14.2 14.3 14.4	Communication-specific accessories111Service-specific accessories111System components112
14.3	Service-specific accessories
14.3 14.4	Service-specific accessories

### 1 About this document

### 1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

### 1.2 Symbols

### 1.2.1 Safety symbols

### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

### A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

### **A**CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

### 1.2.2 Electrical symbols

### $\sim$

Alternating current

### $\sim$

Direct current and alternating current

### \_ \_ \_

Direct current

### ÷

Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

### Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

### 1.2.3 Tool symbols

€ Phillips head screwdriver

#### ● // Flat blade screwdriver

O ↓ Torx screwdriver

🔾 🕼 Allen key

ダ Open-ended wrench

### **1.2.4** Symbols for certain types of information and graphics

# PermittedProcedures, processes or actions that are permittedPreferred

Procedures, processes or actions that are preferred

### Forbidden

Procedures, processes or actions that are forbidden

**Tip** Indicates additional information

# Reference to documentation

Reference to graphic

►

Notice or individual step to be observed

### 1., 2., 3.

Series of steps

### Result of a step

Visual inspection

Operation via operating tool

### 

Write-protected parameter

**1, 2, 3, ...** Item numbers

**A, B, C, ...** Views

#### $\underline{\mathbf{\Lambda}} \rightarrow \mathbf{\mathbf{I}}$ Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

#### **Temperature resistance of the connection cables**

Specifies the minimum value of the temperature resistance of the connection cables

### 1.3 Documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website (www.endress.com/downloads):

- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
  - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### 1.3.1 Technical Information (TI)

### Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

### 1.3.2 Brief Operating Instructions (KA)

### Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

### 1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

### 1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

### 1.3.5 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

### 1.3.6 Installation instructions (EA)

Installation Instruction are used to replace a faulty unit with a functioning unit of the same type.

### 1.4 Registered trademarks

### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

### 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Intended use

### Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contact-less level measurement of liquids. The device must be installed in closed metallic tanks or reinforced concrete tanks, or similar enclosure structures made of comparable attenuating material. Operation is completely harmless to humans and animals.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential.
- Protect the measuring device permanently against corrosion from environmental influences.
- Observe the limit values in the "Technical Information".

The manufacturer is not liable for damage caused by improper or non-designated use.

#### **Residual risk**

During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

► For high process temperatures: Install protection against contact in order to prevent burns.

### 2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

### 2.4 Operational safety

Risk of injury!

- Operate the device only if it is in proper technical condition, free from errors and faults.
- ► The operator is responsible for interference-free operation of the device.

### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

▶ If modifications are nevertheless required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to the repair of an electrical device.
- Use only original spare parts and accessories from the manufacturer.

### Hazardous area

To eliminate danger to persons or the facility when the device is used in the hazardous area (e.g. explosion protection):

- Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

### 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets the general safety standards and legal requirements.

### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

► If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

### 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU directives. These are listed in the corresponding EU Declaration of Conformity together with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the CE mark.


### 2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the EAC mark.

#### **Product description** 3

#### Product design 3.1

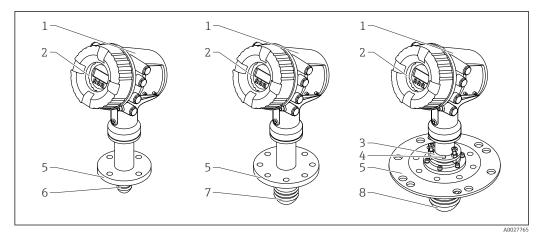

- **1** Design of Micropilot NMR81
- 1 Electronics housing
- Display and operating module (can be operated without opening the cover) Alignment device for antenna 100 mm (4 in) 2
- 3
- 4 Level tool (used to check the correct alignment of the antenna)
- 5 Process connection (flange)
- Antenna 50 mm (2 in) Antenna 80 mm (3 in) 6
- 7 8
- Antenna 100 mm (4 in)

### 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) enclosed?

If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

### 4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Enter the serial number from the nameplate in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device and an overview of the Technical Documentation supplied with the device are displayed.
- Enter the serial number on the nameplate into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information about the device and the technical documentation pertaining to the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### 4.2.1 Nameplate

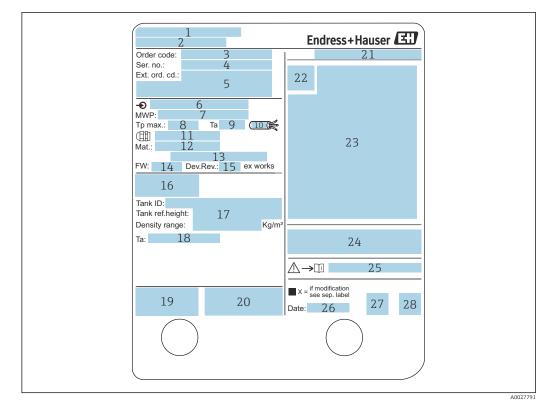

#### ☑ 2 Nameplate

- 1 Manufacturer address
- 2 Device name
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Supply voltage
- 7 Maximum process pressure
- 8 Maximum process temperature
- 9 Permitted ambient temperature  $(T_a)$
- 10 Temperature resistance of cable
- 11 Thread for cable entry
- 12 Material in contact with process
- 13 Not used
- 14 Firmware version
- 15 Device revision
- *16 Metrology certification numbers*
- 17 Customized parametrization data
- 18 Ambient temperature range
- 19 CE mark / C-tick mark
- 20 Additional information on the device version
- 21 Ingress protection
- 22 Certificate symbol
- 23 Data concerning the Ex approval
- 24 General certificate of approval
- 25 Associated Safety Instructions (XA)
- 26 Manufacturing date
- 27 China RoHS mark
- 28 QR code for the Endress+Hauser Operations App

### 4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Place of manufacture: See nameplate.

### 4.3 Storage and transport

### 4.3.1 Storage conditions

- Storage temperature: -50 to +80 °C (-58 to +176 °F)
- Store the device in its original packaging.

### 4.3.2 Transport

### **A**CAUTION

### Housing or antenna may be damaged or break away.

Risk of injury

- Transport the measuring device to the measuring point in its original packaging or at the process connection.
- Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- Comply with the safety instructions, transport conditions for devices over 18 kg (39.6 lb) (IEC 61010).

### 5 Installation

### 5.1 Installation conditions

### 5.1.1 Mounting position

### **General conditions**

- Do not install in the centre of the tank.
- Do not install above a filling stream.
- Avoid any tank installations (e.g. limit switches, temperature probes) within in the signal beam.

### Emitting angle

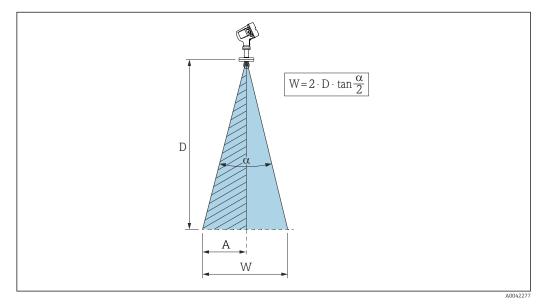


Image: Selationship between beam angle a, distance D and beam diameter W. Distance A is the minimum distance to the tank wall (or other installations). Distance A equals the half of beam diameter W

The beam angle is defined as the angle  $\alpha$  where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

#### Beam diameter **W** as a function of beam angle $\alpha$ and measuring distance **D**:

NMR81								
<b>S</b> <sup>1)</sup>	50 mm (2 in)	80 mm (3 in)	100 mm (4 in)					
α <sup>2)</sup>	7°	4°	3°					
<b>D</b> <sup>3)</sup>		<b>W</b> <sup>4)</sup>						
5 m (16 ft)	0.61 m (2 ft)	0.35 m (1.1 ft)	0.26 m (0.9 ft)					
10 m (33 ft)	1.22 m (4 ft)	0.7 m (2.3 ft)	0.52 m (1.7 ft)					
15 m (49 ft)	1.83 m (6 ft)	1.05 m (3.4 ft)	0.79 m (2.6 ft)					
20 m (66 ft)	2.44 m (8 ft)	1.4 m (4.6 ft)	1.05 m (3.4 ft)					
25 m (82 ft)	3.05 m (10 ft)	1.74 m (5.7 ft)	1.31 m (4.3 ft)					
30 m (98 ft)	3.66 m (12 ft)	2.09 m (6.9 ft)	1.57 m (5.2 ft)					

1) Antenna size

2)

Beam angle Measuring distance 3)

4) Beam diameter

### Minimum distance (A) to tank wall or other installations

NMR81								
S <sup>1)</sup>	50 mm (2 in)	80 mm (3 in)	100 mm (4 in)					
α <sup>2)</sup>	7°	4°	3°					
<b>D</b> <sup>3)</sup>		$\mathbf{A}^{4)}$						
5 m (16 ft)	0.31 m (1 ft)	0.17 m (0.6 ft)	0.13 m (0.4 ft)					
10 m (33 ft)	0.61 m (2 ft)	0.35 m (1.1 ft)	0.26 m (0.9 ft)					
15 m (49 ft)	0.92 m (3 ft)	0.52 m (1.7 ft)	0.39 m (1.3 ft)					
20 m (66 ft)	1.22 m (4 ft)	0.7 m (2.3 ft)	0.52 m (1.7 ft)					
25 m (82 ft)	1.53 m (5 ft)	0.87 m (2.9 ft)	0.65 m (2.1 ft)					
30 m (98 ft)	1.83 m (6 ft)	1.05 m (3.4 ft)	0.79 m (2.6 ft)					


1) Antenna size

2) Beam angle

3) Measuring distance

4) Minimum distance

#### Mounting nozzle 5.1.2

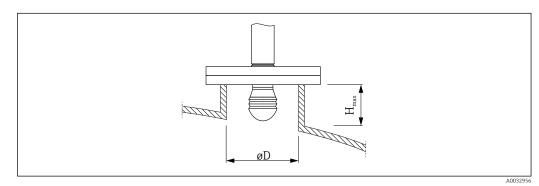

ØD Inner nozzle diameter *H<sub>max</sub> Maximum nozzle length* 

ØD <sup>1)</sup>	M (H <sub>max</sub> ) <sup>2)</sup>					
	50 mm (2 in) <sup>3)</sup>	80 mm (3 in) <sup>4)</sup>	100 mm (4 in) <sup>5)</sup>			
> 45 mm (1.77 in); ≤ 75 mm (2.95 in)	600 mm (24 in)	-	-			
> 75 mm (2.95 in); ≤ 95 mm (3.74 in)	1000 mm (40 in)	1700 mm (68 in)	-			
> 95 mm (3.74 in); ≤ 150 mm (5.91 in)	1250 mm (50 in)	2 150 mm (86 in)	2850 mm (114 in)			
> 150 mm (5.91 in)	1850 mm (74 in)	3200 mm (128 in)	4300 mm (172 in)			

1) Inner nozzle diameter

Maximum nozzle length ( $H_{max}$ ). In case of longer nozzles, a reduced measuring performance is to be 2) expected.


- Feature 100 of the product structure: Antenna AB Feature 100 of the product structure: Antenna AC 3)
- 4)

5) Feature 100 of the product structure: Antenna AD

### 5.1.3 Vertical alignment of the 50mm(2") and 80mm(3") antenna

For optimum measuring accuracy the antenna must be installed at right angles to the medium surface. An adjustable seal is available for the alignment.

### Adjustable seal

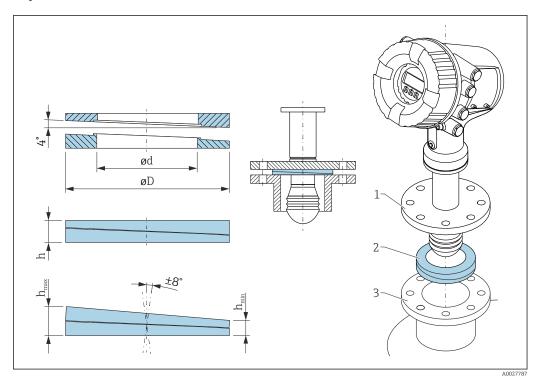

 $\blacksquare$  4 Adjustable seal used to align the device by ±8 °

P 1)		620 <sup>2)</sup>						
	PS	PT	PU					
OC 3)	71285499	71285501	71285503					
C <sup>4)</sup>	DN50 PN10-40 ASME 2" 150lbs JIS 50A 10K	DN80 PM10-40	ASME 3" 150lbs JIS 80A 10K					
L <sup>5)</sup>	100 mm (3.9 in)	100 mm (3.9 in)	100 mm (3.9 in)					
S <sup>6)</sup>	M14	M14	M14					
M <sup>7)</sup>	FKM	FKM	FKM					
P <sup>8)</sup>		-0.1 to +0.1 bar (-1.45 to +1.45 psi)						
T <sup>9)</sup>		−40 to +80 °C (−40 to +176 °F)						
ØD	105 mm (4.13 in)	142 mm (5.59 in)	133 mm (5.24 in)					
Ød	60 mm (2.36 in)	89 mm (3.5 in)	89 mm (3.5 in)					
h	16.5 mm (0.65 in)	22 mm (0.87 in)	22 mm (0.87 in)					

P <sup>1)</sup>	620 <sup>2)</sup>							
	PS	PU						
h <sub>min</sub>	9 mm (0.35 in)	14 mm (0.55 in)	14 mm (0.55 in)					
h <sub>max</sub>	24 mm (0.95 in)	30 mm (1.18 in)	30 mm (1.18 in)					

1) Property

2) Ordering feature 620 "Accessory Enclosed". With this ordering feature the adjustable seal is supplied together with the device.

3) This order code must be used if the adjustable seal is ordered separately.

4) Compatible with

5) Length of screws

6) Size of screws


7) Material

8) Process pressure

9) Process temperature

### 5.1.4 Vertical alignment of the 100mm(4") antenna

For optimum measuring accuracy the antenna must be installed at right angles to the medium surface. For this purpose the 100mm(4") antenna always has an alignment unit. A level tool indicating the correct alignment is attached to the alignment tool.

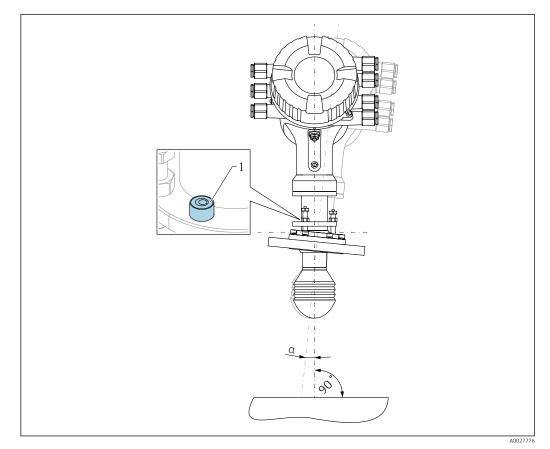

■ 5 Alignment unit of the 100mm(4") antenna


- 1 Level tool indicating the correct alignment
- a Alignment angle;  $a_{max} = 25^{\circ}$

### 5.2 Post-installation check

0	Is the device undamaged (visual inspection)?
o	<ul> <li>Does the device conform to the measuring point specifications?</li> <li>For example: <ul> <li>Process temperature</li> <li>Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)</li> <li>Ambient temperature range</li> <li>Measuring range</li> </ul> </li> </ul>
0	Are the measuring point identification and labeling correct (visual inspection)?
0	Is the device adequately protected from precipitation and direct sunlight?

### 6 Electrical connection

### 6.1 Terminal assignment

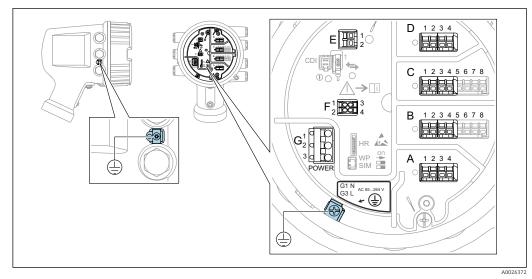

6 Terminal compartment (typical example) and ground terminals

### Housing thread

The threads of the electronics and connection compartment can be coated with an anti-friction coating.

The following applies for all housing materials:

Do not lubricate the housing threads.

#### Terminal area A/B/C/D (slots for I/O modules)

Module: Up to four I/O modules, depending on the order code

- Modules with four terminals can be in any of these slots.
- Modules with eight terminals can be in slot B or C.

The exact assignment of the modules to the slots is dependent on the device version  $\rightarrow \cong 24$ .

#### Terminal area E

Module: HART Ex i/IS interface

- E1:H+
- E2:H-

#### Terminal area F

Remote display

- F1: V<sub>CC</sub> (connect to terminal 81 of the remote display)
- F2: Signal B (connect to terminal 84 of the remote display)
- F3: Signal A (connect to terminal 83 of the remote display)
- F4: Gnd (connect to terminal 82 of the remote display)

## Terminal area G (for High voltage AC power supply and Low voltage AC power supply)

- G1: N
- G2: not connected
- G3: L

#### Terminal area G (for Low voltage DC power supply)

- G1: L-
- G2: not connected
- G3: L+


#### Terminal area: Protective ground

Module: Protective ground connection (M4 screw)



Terminal area: Protective ground

### 6.1.1 Power supply

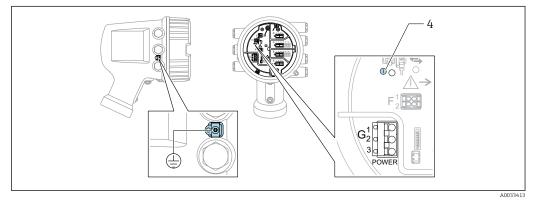

#### G1 N

G2 not connected

G3 L

•

4 Green LED: indicates power supply

The supply voltage is also indicated on the nameplate.

### Supply voltage

### High voltage AC power supply:

Operational value: 100 to 240  $V_{AC}$  (- 15 % + 10 %) = 85 to 264  $V_{AC}$  , 50/60 Hz

### Low voltage AC power supply:

Operational value: 65 V<sub>AC</sub> (- 20 % + 15 %) = 52 to 75 V<sub>AC</sub> , 50/60 Hz

#### **Low voltage DC power supply:** Operational value:

24 to 55  $V_{DC}$  (- 20 % + 15 %) = 19 to 64  $V_{DC}$ 


#### Power consumption

Maximum power varies depending on the configuration of the modules. The value shows maximum apparent power, select the applicable cables accordingly. The actual consumed effective power is 12 W.

**High voltage AC power supply:** 28.8 VA

**Low voltage AC power supply:** 21.6 VA


Low voltage DC power supply:  $13.4\ \mathrm{W}$ 

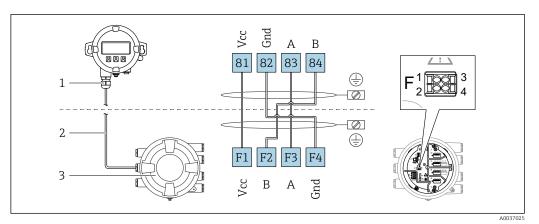

### 6.1.2 Remote display and operating module DKX001


- 8 Connection of the remote display and operating module DKX001 to the Tank Gauging device (NMR8x, NMS8x or NRF8x)
- 1 Remote display and operating module
- 2 Connecting cable
- 3 Tank Gauging device (NMR8x, NMS8x or NRF8x)

The remote display and operating module DKX001 is available as an accessory. For details refer to SD01763D.

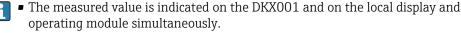

The operating menu cannot be accessed on both modules at the same time. If the
operating menu is entered in one of these modules, the other module is
automatically locked. This locking remains active until the menu is closed in the
first module (back to measured value display).

### 6.1.3 HART Ex i/IS interface

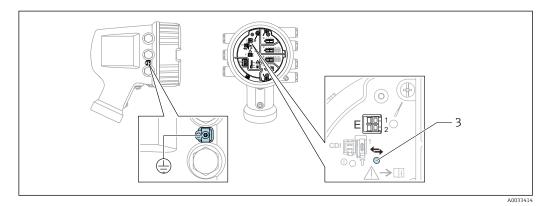

E1 H+

E2 H-


3 Orange LED: indicates data communication

This interface always operates as the main HART master for connected HART slave transmitters. The Analog I/O modules, on the other hand, can be configured as a HART master or slave  $\rightarrow \square 37 \rightarrow \square 39$ .

### 6.1.4 Slots for I/O modules

The terminal compartment contains four slots (A, B, C and D) for I/O modules. Depending on the device version (ordering features 040, 050 and 060) these slots contain different I/O modules. The table below shows which module is located in which slot for a specific device version.

The slot assignment for the device is also indicated on a label attached to the back cover of the display module.

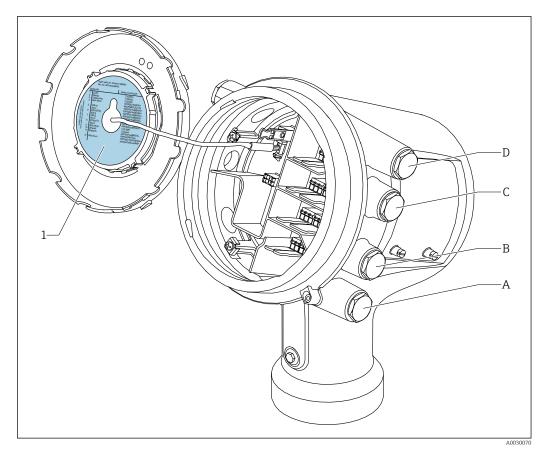

- 1 Label showing (among other things) the modules in the slots A to D.
- A Cable entry for slot A
- *B* Cable entry for slot *B*
- *C* Cable entry for slot *C*
- D Cable entry for slot D

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- M Modbus
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "Modbus" (A1)

	0 <sup>1)</sup>			$   T^{2}$				
0			1-'					
NMx8x -	$\begin{array}{c} \text{XXXX} \underbrace{\text{XX}}_{040} \underbrace{\text{XX}}_{050} \end{array}$	<u>X</u> XX 0 060						
040 3)	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8			
A1	XO	XO	М	-	-	-		
A1	XO	A1	М	-	-	D		
A1	XO	A2	М	-	D	D		
A1	XO	A3	М	D	D	D		
A1	XO	B1	М	М	-	-		
A1	XO	B2	М	М	-	D		
A1	XO	В3	М	М	D	D		
A1	XO	C1	М	V1	-	-		
A1	XO	C2	М	V1	-	D		
A1	XO	С3	М	V1	D	D		
A1	XO	E1	М	W	-	-		
A1	XO	E2	М	W	-	D		
A1	XO	E3	М	W	D	D		
A1	A1	XO	М	A/XP	-	-		
A1	A1	A1	М	A/XP	-	D		
A1	A1	A2	М	A/XP	D	D		
A1	A1	B1	М	М	A/XP	-		
A1	A1	B2	М	М	A/XP	D		
A1	A1	C1	М	V1	A/XP	-		
A1	A1	C2	М	V1	A/XP	D		
A1	A1	E1	М	W	A/XP	-		
A1	A1	E2	М	W	A/XP	D		
A1	A2	X0	М	A/XP	A/XP	-		
A1	A2	A1	М	A/XP	A/XP	D		
A1	A2	B1	М	A/XP	A/XP	М		
A1	A2	C1	М	A/XP	A/XP	V1		
A1	A2	E1	М	A/XP	A/XP	W		
A1	B1	XO	М	A/IS	-	-		
A1	B1	A1	М	A/IS	-	D		
A1	B1	A2	М	A/IS	D	D		

	0 1)			Т	2)			
NMx8x	- xxxx XX X 040 05	X XX 0 060						
040 <sup>3)</sup>	050 <sup>4)</sup>	060 5)	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8			
A1	B1	B1	М	М	A/IS	-		
A1	B1	B2	М	М	A/IS	D		
A1	B1	C1	М	V1	A/IS	-		
A1	B1	C2	М	V1	A/IS	D		
A1	B1	E1	М	W	A/IS	-		
A1	B1	E2	М	W	A/IS	D		
A1	B2	XO	М	A/IS	A/IS	-		
A1	B2	A1	М	A/IS	A/IS	D		
A1	B2	B1	М	A/IS	A/IS	М		
A1	B2	C1	М	A/IS	A/IS	V1		
A1	B2	E1	М	A/IS	A/IS	W		
A1	C2	XO	М	A/IS	A/XP	-		
A1	C2	A1	М	A/IS	A/XP	D		
A1	C2	B1	М	A/IS	A/XP	М		
A1	C2	C1	М	A/IS	A/XP	V1		
A1	C2	E1	М	A/IS	A/XP	W		

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "V1" (B1)

	0 <sup>1)</sup>	) = "V1" (B1	, 		.2)		
	01)			Т	2)		
NMx8x	- xxxx XX XX 040 05						
040 3)	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8		
B1	X0	XO	V1	-	-	-	
B1	X0	A1	V1	-	-	D	
B1	X0	A2	V1	-	D	D	
B1	XO	A3	V1	D	D	D	
B1	XO	B1	V1	М	-	-	
B1	XO	B2	V1	М	-	D	
B1	XO	B3	V1	М	D	D	
B1	X0	C1	V1	V1	-	-	
B1	XO	C2	V1	V1	-	D	
B1	XO	C3	V1	V1	D	D	
B1	X0	E1	V1	W	-	-	
B1	Х0	E2	V1	W	-	D	
B1	X0	E3	V1	W	D	D	
B1	A1	XO	V1	A/XP	-	-	
B1	A1	A1	V1	A/XP	-	D	
B1	A1	A2	V1	A/XP	D	D	
B1	A1	B1	V1	М	A/XP	-	
B1	A1	B2	V1	М	A/XP	D	
B1	A1	C1	V1	V1	A/XP	-	
B1	A1	C2	V1	V1	A/XP	D	
B1	A1	E1	V1	W	A/XP	-	
B1	A1	E2	V1	W	A/XP	D	
B1	A2	XO	V1	A/XP	A/XP	-	
B1	A2	A1	V1	A/XP	A/XP	D	
B1	A2	B1	V1	A/XP	A/XP	М	
B1	A2	C1	V1	A/XP	A/XP	V1	
B1	A2	E1	V1	A/XP	A/XP	W	
B1	B1	XO	V1	A/IS	-	-	
B1	B1	A1	V1	A/IS	-	D	
B1	B1	A2	V1	A/IS	D	D	

	0 1)			T	۲ <sup>2)</sup>	
NMx8x - xxxx XX XX XX 040 050 060						
040 3)	050 <sup>4)</sup>	060 5)	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
B1	B1	B1	V1	М	A/IS	-
B1	B1	B2	V1	М	A/IS	D
B1	B1	C1	V1	V1	A/IS	-
B1	B1	C2	V1	V1	A/IS	D
B1	B1	E1	V1	W	A/IS	-
B1	B1	E2	V1	W	A/IS	D
B1	B2	XO	V1	A/IS	A/IS	-
B1	B2	A1	V1	A/IS	A/IS	D
B1	B2	B1	V1	A/IS	A/IS	М
B1	B2	C1	V1	A/IS	A/IS	V1
B1	B2	E1	V1	A/IS	A/IS	W
B1	C2	XO	V1	A/IS	A/XP	-
B1	C2	A1	V1	A/IS	A/XP	D
B1	C2	B1	V1	A/IS	A/XP	М
B1	C2	C1	V1	A/IS	A/XP	V1
B1	C2	E1	V1	A/IS	A/XP	W

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "WM550" (C1)

0 <sup>1)</sup>			T <sup>2)</sup>				
NMx8x - vvvv XX XX XX							
NMx8x - xxxx XX XX XX 040 050 060							
040 3)	050 <sup>4)</sup>	060 5)	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	D 1 2 3 4	
61	WO	NO.	TAT			A0023888	
C1	XO	XO	W	-	-	-	
C1	XO	A1	W	-	-	D	
C1	XO	A2	W	-	D	D	
C1	X0	A3	W	D	D	D	
C1	X0	B1	W	М	-	-	
C1	X0	B2	W	М	-	D	
C1	X0	B3	W	М	D	D	
C1	X0	C1	W	V1	-	-	
C1	X0	C2	W	V1	-	D	
C1	X0	C3	W	V1	D	D	
C1	X0	E1	W	W	-	-	
C1	XO	E2	W	W	-	D	
C1	XO	E3	W	W	D	D	
C1	A1	XO	W	A/XP	-	-	
C1	A1	A1	W	A/XP	-	D	
C1	A1	A2	W	A/XP	D	D	
C1	A1	B1	W	М	A/XP	-	
C1	A1	B2	W	М	A/XP	D	
C1	A1	C1	W	V1	A/XP	-	
C1	A1	C2	W	V1	A/XP	D	
C1	A1	E1	W	W	A/XP	-	
C1	A1	E2	W	W	A/XP	D	
C1	A2	XO	W	A/XP	A/XP	-	
C1	A2	A1	W	A/XP	A/XP	D	
C1	A2	B1	W	A/XP	A/XP	М	
C1	A2	C1	W	A/XP	A/XP	V1	
C1	A2	E1	W	A/XP	A/XP	W	
C1	B1	XO	W	A/IS	-	-	
C1	B1	A1	W	A/IS	-	D	
C1	B1	A2	W	A/IS	D	D	

0 <sup>1)</sup>			T <sup>2)</sup>			
NMx8x - xxxx XX XX XX 040 050 060						
040 3)	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
C1	B1	B1	W	М	A/IS	-
C1	B1	B2	W	М	A/IS	D
C1	B1	C1	W	V1	A/IS	-
C1	B1	C2	W	V1	A/IS	D
C1	B1	E1	W	W	A/IS	-
C1	B1	E2	W	W	A/IS	D
C1	B2	XO	W	A/IS	A/IS	-
C1	B2	A1	W	A/IS	A/IS	D
C1	B2	B1	W	A/IS	A/IS	М
C1	B2	C1	W	A/IS	A/IS	V1
C1	B2	E1	W	A/IS	A/IS	W
C1	C2	XO	W	A/IS	A/XP	-
C1	C2	A1	W	A/IS	A/XP	D
C1	C2	B1	W	A/IS	A/XP	М
C1	C2	C1	W	A/IS	A/XP	V1
C1	C2	E1	W	A/IS	A/XP	W

- 1) Ordering feature
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex d" (E1)

0 <sup>1)</sup>			T <sup>2)</sup>				
NMx8x - xxxx XX XX XX 040 050 060							
040 <sup>3)</sup>	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	1 2 3 4 1 2 3 4	
E1	XO	XO	-	A/XP	-	-	
E1	XO	A1	-	A/XP	-	D	
E1	XO	A2	-	A/XP	D	D	
E1	XO	A3	D	A/XP	D	D	
E1	XO	B1	М	A/XP	-	-	
E1	XO	B2	М	A/XP	-	D	
E1	XO	B3	М	A/XP	D	D	
E1	A1	XO	-	A/XP	A/XP	-	
E1	A1	A1	-	A/XP	A/XP	D	
E1	A1	A2	D	A/XP	A/XP	D	
E1	A1	B1	М	A/XP	A/XP	-	
E1	A1	B2	М	A/XP	A/XP	D	
E1	B1	XO	-	A/XP	A/IS	-	
E1	B1	A1	-	A/XP	A/IS	D	
E1	B1	A2	D	A/XP	A/IS	D	
E1	B1	B1	М	A/XP	A/IS	-	
E1	B1	B2	М	A/XP	A/IS	D	

Ordering feature 1)

2) Terminal area

3) Primary Output

4)

Secondary IO Analog Secondary IO Digital Ex d/XP 5)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550

- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

#### "Primary Output" (040) = "4-20mA HART Ex i" (H1)

0 <sup>1)</sup>			T <sup>2)</sup>			
NMx8x - xxxx XX XX XX 040 050 060						
040 <sup>3)</sup>	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
H1	XO	XO	-	A/IS	-	-
H1	XO	A1	-	A/IS	-	D
H1	XO	A2	-	A/IS	D	D
H1	X0	A3	D	A/IS	D	D
H1	XO	B1	М	A/IS	-	-
H1	XO	B2	М	A/IS	-	D
H1	XO	B3	М	A/IS	D	D
H1	A1	XO	-	A/IS	A/XP	-
H1	A1	A1	-	A/IS	A/XP	D
H1	A1	A2	D	A/IS	A/XP	D
H1	A1	B1	М	A/IS	A/XP	-
H1	A1	B2	М	A/IS	A/XP	D
H1	B1	X0	-	A/IS	A/IS	-
H1	B1	A1	-	A/IS	A/IS	D
H1	B1	A2	D	A/IS	A/IS	D
H1	B1	B1	М	A/IS	A/IS	-
H1	B1	B2	М	A/IS	A/IS	D

1) Ordering feature

Terminal area 2)


Primary Output 3)

4)

Secondary IO Analog Secondary IO Digital Ex d/XP 5)

- 0 Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1

- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

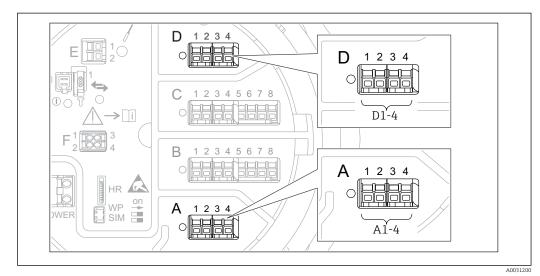

# 6.1.5 Terminals of the "Modbus" module, "V1" module or "WM550" module

9 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

Depending on the device version, the "Modbus" and/or "V1" or "WM550" module may be in different slots of the terminal compartment. In the operating menu the "Modbus" and "V1" or "WM550" interfaces are designated by the respective slot and the terminals within this slot: **A1-4**, **B1-4**, **C1-4**, **D1-4**.

#### Terminals of the "Modbus" module

Designation of the module in the operating menu: **Modbus X1-4**; (X = A, B, C or D) •  $X1^{(1)}$ 

- Terminal name: S
- Description: Cable shielding connected via a capacitor to EARTH
- X2 <sup>1)</sup>
  - Terminal name: 0V
  - Description: Common reference
- X3 <sup>1)</sup>
  - Terminal name: B-
  - Description: Non-inverting signal line
- X4 <sup>1)</sup>
  - Terminal name: A+
  - Description: Inverting signal line


<sup>1)</sup> Here, "X" stands for one of the slots "A", "B", "C", or "D".

#### Terminals of the "V1" and "WM550" module

Designation of the module in the operating menu: **V1 X1-4** or **WM550 X1-4**; (X = A, B, C or D)

- X1<sup>2)</sup>
  - Terminal name: S
  - Description: Cable shielding connected via a capacitor to EARTH
- X2 <sup>1)</sup>
  - Terminal name: -
  - Description: not connected
- X3 <sup>1)</sup>
  - Terminal name: B-
  - Description: Protocol loop signal -
- X4 <sup>1)</sup>
  - Terminal name: A+
  - Description: Protocol loop signal +

### 6.1.6 Terminals of the "Analog I/O" module (Ex d /XP or Ex i/IS)

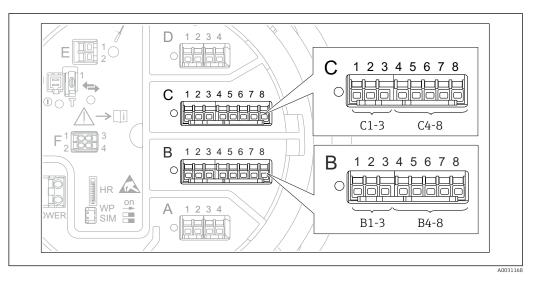

#### Terminal: B1-3

Function: Analog input or output (configurable)

- Passive usage:  $\rightarrow$  🗎 37
- Active usage:  $\rightarrow \square 39$
- Designation in the operating menu: Analog I/O B1-3 ( $\rightarrow \square$  154)

### Terminal: C1-3

Function: Analog input or output (configurable)

- Passive usage:  $\rightarrow \implies 37$
- Active usage:  $\rightarrow \square 39$
- Designation in the operating menu: Analog I/O C1-3 ( $\Rightarrow \square$  154)

#### Terminal: B4-8

- Function: Analog input
- RTD: → 🗎 40

<sup>2)</sup> Here, "X" stands for one of the slots "A", "B", "C", or "D".

#### Terminal: C4-8


Function: Analog input

- RTD: → 🖺 40
- Designation in the operating menu: Analog IP C4-8 ( $\rightarrow \cong 148$ )

#### 6.1.7 Connection of the "Analog I/O" module for passive usage

- In the passive usage the supply voltage for the communication line must be supplied by an external source.
  - The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
  - Screened cable must be used for the 4...20mA signal line.


"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

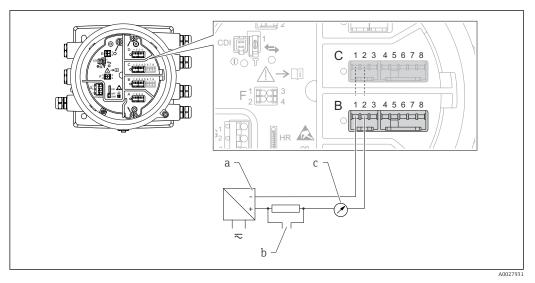

■ 10 Passive usage of the Analog I/O module in the output mode

- a Power supply
- b HART signal output
- c Analog signal evaluation


#### "Operating mode" = "4..20mA input" or "HART master+4..20mA input"

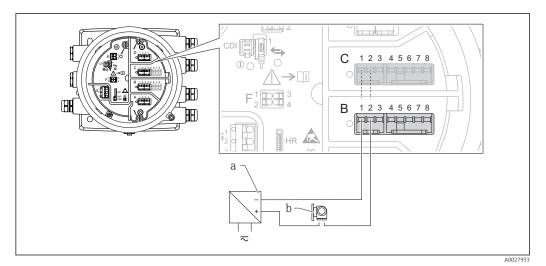

■ 11 Passive usage of the Analog I/O module in the input mode

#### a Power supply

b External device with 4...20mA and/or HART signal output

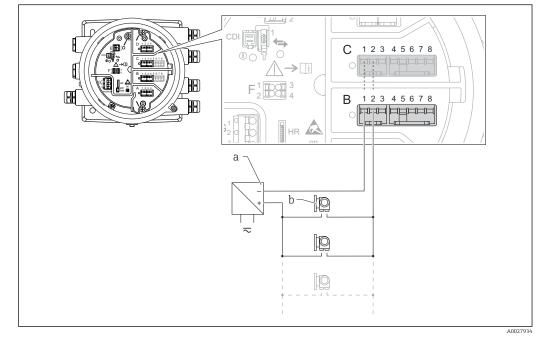

"Operating mode" = "HART master"




- a Power supply
- *b* Up to 6 external devices with HART signal output

#### 6.1.8 Connection of the "Analog I/O" module for active usage

In the active usage the supply voltage for the communication line is supplied by the device itself. There is no need of an external power supply.


- The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
- Screened cable must be used for the 4...20mA signal line.
- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
  - Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
  - Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

#### "Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

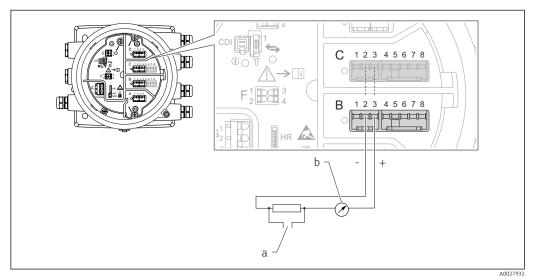


- 13 Active usage of the Analog I/O module in the output mode
- a HART signal output
- b Analog signal evaluation

#### "Operating mode" = "4..20mA input" or "HART master+4..20mA input"

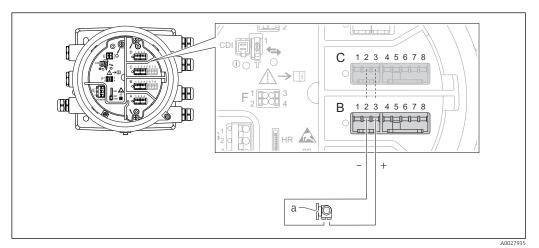

14 Active usage of the Analog I/O module in the input mode

a External device with 4...20mA and/or HART signal output

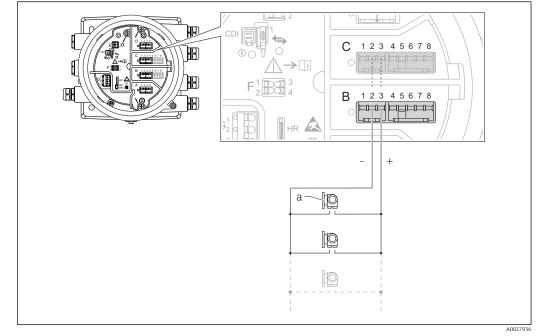


"Operating mode" = "HART master"

■ 15 Active usage of the Analog I/O module in the HART master mode

a Up to 6 external devices with HART signal output

The maximum current consumption for the connected HART devices is 24 mA (i.e. 4 mA per device if 6 devices are connected).

#### 6.1.9 Connection of a RTD

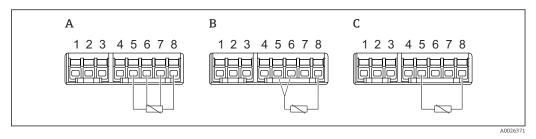


A 4-wire RTD connection

B 3-wire RTD connection

C 2-wire RTD connection

H

Screened cable must be used for the connection of the RTD.

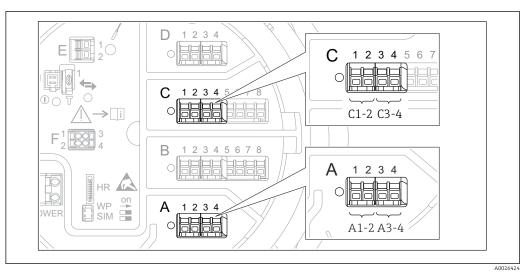

#### 6.1.10 Terminals of the "Digital I/O" module

I6 Designation of the digital inputs or outputs (examples)

- Each Digital IO Module provides two digital inputs or outputs.
- In the operating menu each input or output is designated by the respective slot and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
- For each of these pairs of terminals, one of the following operating modes can be selected in the operating menu:
- Disable
- Passive Output
- Passive Input
- Active Input

### 6.2 Connecting requirements

#### 6.2.1 Cable specification

#### Terminals

#### Wire cross section 0.2 to 2.5 mm<sup>2</sup> (24 to 13 AWG)

Use for terminals with function: Signal and power supply

- Spring terminals (NMx8x-xx1...)
- Screw terminals (NMx8x-xx2...)

#### Wire cross section max. 2.5 mm<sup>2</sup> (13 AWG) Use for terminals with function: Ground terminal in the terminal compartment

Wire cross section max. 4 mm<sup>2</sup> (11 AWG) Use for terminals with function: Ground terminal at the housing

#### Power supply line

Standard device cable is sufficient for the power line.

#### Analog signal lines

Screened cable must be used for:

- the 4 to 20 mA signal lines.
- the RTD connection.

#### Digital I/O signal lines

- Shielded cable is recommended if using the relays.
- Observe the grounding concept of the plant.

#### HART communication line

Shielded cable is recommended if using the HART protocol. Observe the grounding concept of the plant.

#### Modbus communication line

- Observe the cable conditions from the TIA-485-A, Telecommunications Industry Association.
- Additional conditions: Use shielded cable.

#### V1 communication line

- 2-wire twisted pair, screened or unscreened cable
- Resistance in one cable:  $\leq 120 \Omega$
- Capacitance between lines:  $\leq 0.3~\mu F$

#### WM550 communication line

- 2-wire twisted pair, unscreened cable
- Cross section minimum 0.5 mm<sup>2</sup> (20 AWG)
- Maximum total cable resistance:  $\leq 250 \Omega$
- Cable with low capacitance


### 6.3 Ensuring the degree of protection

To guarantee the specified degree of protection, carry out the following steps after the electrical connection:

- **1.** Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
- 2. Tighten all housing screws and screw covers.
- 3. Firmly tighten the cable glands.

╘

4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

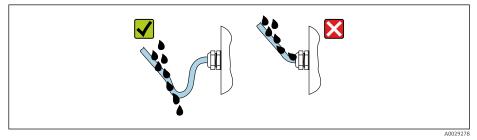

**5.** Insert blind plugs appropriate for the safety rating of the device (e.g. Ex d/XP).

### 6.4 Post-connection check

0	Are cables or the device undamaged (visual inspection)?
0	Do the cables comply with the requirements?
0	Do the cables have adequate strain relief?
0	Are all cable glands installed, firmly tightened and correctly sealed?
0	Does the supply voltage match the specifications on the transmitter nameplate?
0	Is the terminal assignment correct $\rightarrow \square 21$ ?
0	If required: Is the protective earth connected correctly ?
о	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
0	Are all housing covers installed and firmly tightened?
0	Is the securing clamp tightened correctly?

## 7 Operability

### 7.1 Overview of the operation options

The device is operated via an operating menu ( $\rightarrow \square 45$ ). This menu can be accessed by the following interfaces:

- FieldCare connected through the service interface in the terminal compartment of the device ( $\rightarrow \cong 57$ ).
- FieldCare connected through Tankvision Tank Scanner NXA820 (remote operation;  $\rightarrow \cong 57$ ).
- FieldCare connected through Commubox FXA195 (  $\Rightarrow \square$  111) to a HART interface of the device.

### 7.2 Structure and function of the operating menu

Menu	Submenu / parameter	Meaning
Operation	Level	Shows the measured and calculated level values.
	Temperature	Shows the measured and calculated temperature values.
	Density	Shows the measured and calculated density values.
	Pressure	Shows the measured and calculated pressure values.
	GP values	Shows the general purpose values.
Setup	Parameters 1 to N	Standard commissioning parameters
	Advanced setup	<ul> <li>Contains further parameters and submenus:</li> <li>to adapt the device to special measuring conditions.</li> <li>to process the measured value.</li> <li>to configure the signal output.</li> </ul>
Diagnostics	Diagnostic parameters	<ul><li>Indicates:</li><li>The latest diagnostic messages and their timestamps.</li><li>The operating time (overall time and time since last restart).</li><li>The time according to the real-time clock.</li></ul>
	Diagnostic list	Contains up to 5 currently active error messages.
	Device information	Contains information needed to identify the device.
	Simulation	Used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
<b>Expert</b> <sup>1)</sup> Contains all parameters of the device (including those which are already contained in one of the	System	Contains all general device parameters which do not affect the measurement or the communication interface.
other menus). This menu is organized according to the function blocks of the device.	Sensor	Contains all parameters needed to configure the measurement.
The parameter of the <b>Expert</b> menu are described in: GP01068G (NMR81)	Input/output	Contains submenus to configure the analog and discrete I/O modules and connected HART devices.
	Communication	Contains all parameters needed to configure the digital communication interface.
	Application	Contains submenus to configure • the tank gauging application • the tank calculations • the alarms.
	Tank values	Shows measured and calculated tank values
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

1) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


# 7.3 Access to the operating menu via the local or remote display and operating module

- Operating via the remote display and operating module DKX001 (→ 
   <sup>(→)</sup> 23) or the local display and operating module at the device are equivalent.
  - The measured value is indicated on the DKX001 and on the local display and operating module simultaneously.
  - The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

### 7.3.1 Display and operating elements


The device has an illuminated **liquid crystal display (LCD)** that shows measured and calculated values as well as the device status in the standard view. Other views are used to navigate through the operating menu and to set parameter values.

The device is operated by **three optical keys**, namely "-", "+" and "E". They are actuated when the appropriate field on the protective glass of the front is **lightly** touched with the finger ("touch control").

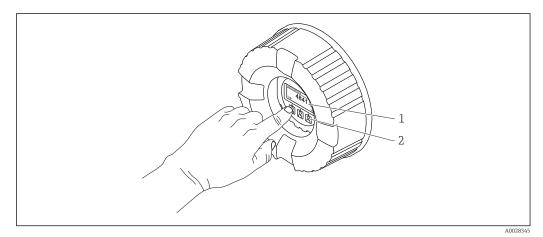

🖻 17 Display and operating elements

- 1 Liquid crystal display (LCD)
- 2 Optical keys; can be operated through the cover glass. If used without the cover glass, lightly place your finger in front of the optical sensor for activation. Do not press hard.

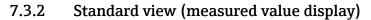



■ 18 Typical appearance of the standard view (measured value display)

- 1 Display module
- 2 Device tag
- 3 Status area
- 4 Display area for measured values
- 5 Display area for measured value and status symbols
- 6 Measured value status symbol

#### Status symbols

Symbol	Meaning	
A0013956	<b>"Failure"</b> A device error is present. The measured value is no longer valid.	
<b>C</b>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).	
<b>S</b> A0013958	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>	
M A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.	

#### Measured value symbols

Symbol 1	Symbol 2	Measured value
A0028148		<ul><li>Tank level</li><li>Measured level</li><li>Tank level %</li></ul>
A0028149		Water level
T		Liquid temperature
A0028528		
Т	V	Vapor temperature
A0028528	A0027990	
Т	A	Air temperature
A0028528	A0027991	
A0027993		<ul><li>Tank ullage</li><li>Tank ullage %</li></ul>
ρ		Observed density value
A0028150		

Symbol 1	Symbol 2	Measured value
p	(1)	P1 (bottom)
A0028151	A0028141	
p	2	P2 (middle)
A0028151	A0028142	
p	3	P3 (top)
A0028151	A0028146	
G	(1)	GP 1 value
A0027992	A0028141	This is used for an external device.
G	(2)	GP 2 value
A0027992	A0028142	This is used for an external device.
G	(3)	GP 3 value
A0027992	A0028146	This is used for an external device.
G	<b>(4</b> )	GP 4 value
A0027992	A0028147	This is used for an external device.

#### Measured value status symbols

Symbol	Meaning
A0012102	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
A0012103	<b>Status "Warning"</b> The device continues measuring. A diagnostic message is generated.
A0031169	<ul> <li>Calibration to regulatory standards disturbed</li> <li>Is displayed in the following situations:</li> <li>The write protection switch is OFF. →  55</li> <li>The write protection switch is ON but the level value can currently not be guaranteed.</li> </ul>


#### Locking state symbols

Symbol	Meaning	
A0011978	<b>Display parameter</b> Marks display-only parameters which cannot be edited.	
Δ	Device locked	
A0011979	<ul><li>In front of a parameter name: The device is locked via software and/or hardware.</li><li>In the header of the measured value screen: The device is locked via hardware.</li></ul>	

#### Meaning of the keys in the standard view

Кеу	Meaning
	<ul> <li>Enter key</li> <li>Pressing the key briefly opens the operating menu.</li> <li>Pressing the key for 2 s opens the context menu: <ul> <li>Level (visible if the keylock is inactive):</li> <li>Shows the measured levels.</li> </ul> </li> <li>Keylock on (visible if the keylock is inactive): <ul> <li>Activates the keylock.</li> </ul> </li> <li>Keylock off (visible if the keylock is active): <ul> <li>Deactivates the keylock.</li> </ul> </li> </ul>

#### 7.3.3 Navigation view

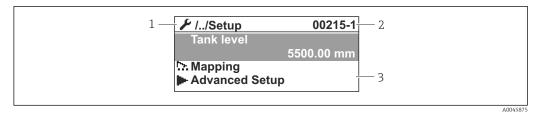

#### I9 Navigation view

- Current submenu or wizard 1
- 2 3 Quick access code
- Display area for navigation


#### Navigation symbols

Symbol	Meaning	
A0011975	<ul> <li>Operation</li> <li>Is displayed:</li> <li>in the main menu next to the selection Operation</li> <li>in the header, if you are in the Operation menu.</li> </ul>	
A0011974	<ul> <li>Setup</li> <li>Is displayed:</li> <li>in the main menu next to the selection Setup</li> <li>in the header, if you are in the Setup menu</li> </ul>	
A0011976	<ul> <li>Expert</li> <li>Is displayed:</li> <li>in the main menu next to the selection Expert</li> <li>in the header, if you are in the Expert menu</li> </ul>	
V A0011977	<ul> <li>Diagnostics Is displayed: <ul> <li>in the main menu next to the selection Diagnostics</li> <li>in the header, if you are in the Diagnostics menu</li> </ul></li></ul>	
A0013967	Submenu	
A0013968	Wizard	
A0013963	<b>Parameter locked</b> When displayed in front of a parameter name, indicates that the parameter is locked.	

Meaning of the keys in the navigation view

Ке	у	Meaning
	A0028324	<b>Minus key</b> Moves the selection bar upwards in a picklist.
	A002832	<b>Plus key</b> Moves the selection bar downwards in a picklist.
	A0028324	<ul> <li>Enter key</li> <li>Pressing the key briefly opens the selected menu, submenu or parameter.</li> <li>For parameters: Pressing the key for 2 s opens the help text for the function of the parameter (if present).</li> </ul>
	A0028327	<ul> <li>Escape key combination (press keys simultaneously)</li> <li>Pressing the keys briefly <ul> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the keys for 2 s returns you to the measured value display ("standard view").</li> </ul>

#### 7.3.4 Wizard view

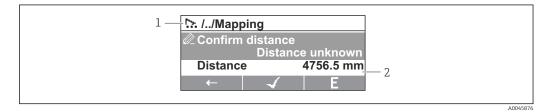

■ 20 Wizard view on the display module

1 Current wizard

i


2 Display area for navigation

#### Wizard navigation symbols

Symbol	Meaning
Ø2	Parameters within a wizard
A0013972	Switches to the previous parameter.
A0013978	switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
A0013976	
E	Opens the editing view of the parameter.
A0013977	

In the wizard view the meaning of the keys is indicated by the navigation symbol directly above the respective key (softkey functionality).

#### 7.3.5 Numeric editor

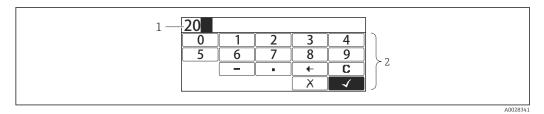

#### ■ 21 Numeric editor on the display module


- 1 Display area of the entered value
- 2 Input mask

Symbol	Meaning
	Selection of numbers from 0 to 9.
A0013998	
·	Inserts decimal separator at the input position.
A0016619	
	Inserts minus sign at the input position.
A0016620	
	Confirms selection.
A0013985	
	Moves the input position one position to the left.
A0016621	
X	Exits the input without applying the changes.
A0013986	
C	Clears all entered characters.
A0014040	

#### Meaning of the keys in the numeric editor

Кеу	Meaning
▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲	<b>Minus key</b> In the input mask, moves the selection bar to the left (backwards).
A0028325	<b>Plus key</b> In the input mask, moves the selection bar to the right (forwards).
▲ ● ↓ ● ₽ A0028326	<ul> <li>Enter key</li> <li>Pressing the key briefly adds the selected number to the current decimal place or carries out the selected action.</li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
□ □ □ □ □ □ □ □ □ □ □ 0028327	<b>Escape key combination (press keys simultaneously)</b> Closes the text or numeric editor without applying changes.

#### 7.3.6 Text editor

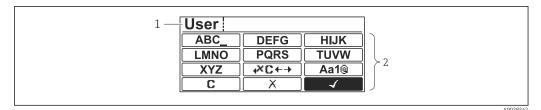

#### 🖻 22 Text editor on the display module

Display area of the entered text Input mask 1

2

#### Text editor symbols

Symbol	Meaning
ABC_  XYZ	Selection of letters from A to Z
A0013997	
<b>Aa1@</b>	Toggle <ul> <li>Between upper-case and lower-case letters</li> <li>For entering numbers</li> <li>For entering special characters</li> </ul>
A0013985	Confirms selection.
	Switches to the selection of the correction tools.
X A0013986	Exits the input without applying the changes.
A0014040	Clears all entered characters.

#### Correction symbols under ₩C+→

C	Clears all entered characters.
A0013989	
Ð	Moves the input position one position to the right.
A0013991	
ŧ	Moves the input position one position to the left.
A0013990	
×.	Deletes one character immediately to the left of the input position.
A0013988	

Meaning of the keys in the text editor

Кеу	Meaning
▲ ▲ ▲ ● ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■	<b>Minus key</b> In the input mask, moves the selection bar to the left (backwards).
	<b>Plus key</b> In the input mask, moves the selection bar to the right (forwards).
▲ ▲ ● ■ ■ ▲ ▲ ▲ ▲ Δ0028326	<ul> <li>Enter key</li> <li>Pressing the key briefly</li> <li>Opens the selected group.</li> <li>Carries out the selected action.</li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
	<b>Escape key combination (press keys simultaneously)</b> Closes the text or numeric editor without applying changes.

### 7.3.7 Keypad lock

#### Automatic keypad lock

Operation via the local display is automatically locked:

after a start-up or restart of the device.

• if the device has not been operated via the display for > 1 minute.

When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

#### Disabling the keypad lock

1. The keylock is enabled.

Press E for at least 2 seconds.

└ A context menu appears.

2. Select **Keylock off** from the context menu.

└ The keylock is disabled.

#### Manual activation of the keypad lock

After commissioning of the device the keypad lock can be activated manually.

1. The device is in the measured value display.

Press E for at least 2 seconds.

└ A context menu appears.

2. Select **Keylock on** from the context menu.

 $\leftarrow$  The keylock is enabled.

#### 7.3.8 Access code and user roles

#### Meaning of the access code

An access code can be defined in order to distinguish between the following user roles:

User role	Definition
Maintenance	<ul><li>Knows the access code.</li><li>Has write access to all parameters (except service parameters).</li></ul>
Operator	<ul><li>Doesn't know the access code.</li><li>Has write access to only a few parameters.</li></ul>

- The description of parameters states which role is needed at least for read and write access to each parameter.
  - The current user role is indicated by the Access status display.
  - If the access code is **"0000"**, every user is in the **Maintenance** role. This is the default setting on delivery of the device.

#### Defining an access code

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code  $\rightarrow$  Define access code
- 2. Enter the intended access code (max. 4 digits).
- **3.** Repeat the same code in the Confirm access code.
  - └ The user is in the **Operator** role. The <sup>∩</sup><sub>B</sub>-symbol appears in front of all writeprotected parameters.

#### Switching to the "Maintenance" role

If the *g*-symbol appears on the local display in front of a parameter, the parameter is write-protected because the user is in the **Operator** role. To switch to the **Maintenance** role, proceed as follows:

- 1. Press E.
  - └ The input prompt for the access code appears.
- 2. Enter the access code.
  - → The user is in the **Maintenance** role. The B-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.


#### Switching back to the "Operator" role automatically

The user automatically switches back to the **Operator** role:

- if no key is pressed for 10 minutes in the navigation and editing mode.
- 60 s after going back from the navigation and editing mode to the standard view (measured value display).


#### 7.3.9 Write protection switch

The operating menu can be locked by a hardware switch in the connection compartment. In this locking state W&M related parameters are read only.

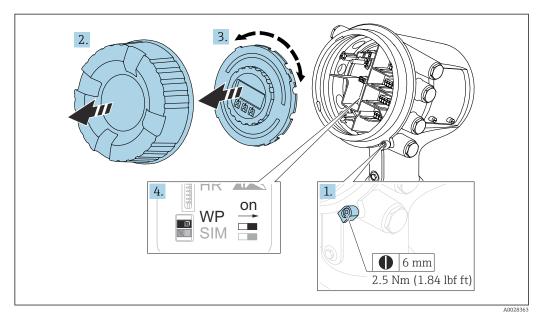


The display module can be attached to the edge of the electronics compartment. This makes it easier to access the lock switch.


- 1. Loosen the securing clamp.
- 2. Unscrew the housing cover.
- 3. Pull out the display module with a gentle rotation movement.
- 4. Using a flat blade screwdriver or a similar tool, set the write protection switch **(WP)** into the desired position. **ON:** operating menu is locked; **OFF:** operating menu is unlocked.
- 5. Put the display module onto the connection compartment, screw the cover closed and tighten the securing clamp.
- **i** -
  - To avoid access to the write protection switch, the cover of the connection compartment can be secured by a lead seal.
  - For devices with alignment unit: To avoid unauthorized changes of the antenna alignment, the alignment unit can be secured by a lead seal.

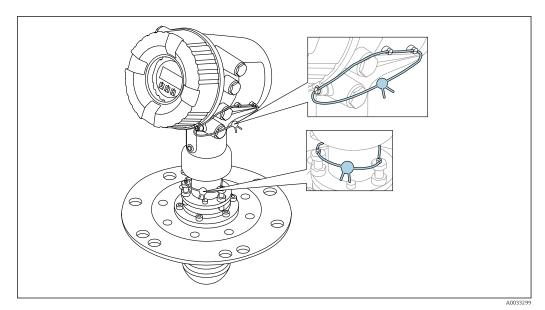

23 Sealing of the cover of the connection compartment (top) and the alignment unit (bottom)

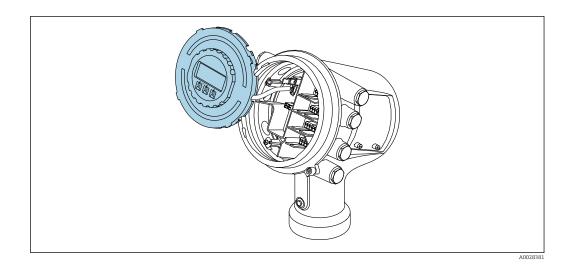

#### Indication of the locking state

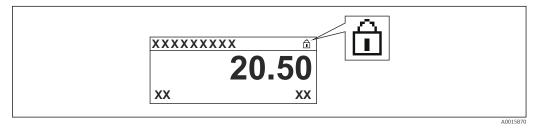


🗷 24 Write protection symbol in the header of the display

Write protection via locking switch is indicated as follows:

- Locking status (→ 🗎 139) = Hardware locked
- appears in the header of the display.

# 7.4 Access to the operating menu via the service interface and FieldCare

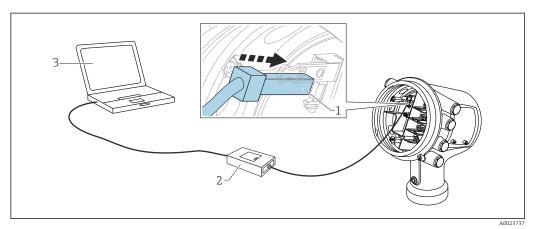

- ☑ 25 Operation via service interface
- *1* Service interface (CDI = Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool and "CDI Communication FXA291" COM DTM


#### The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset = Restart device. This ensures correct operation of the device after the restore.

### 7.5 Access to the operating menu via Tankvision Tank Scanner NXA820 and FieldCare

#### 7.5.1 Wiring scheme

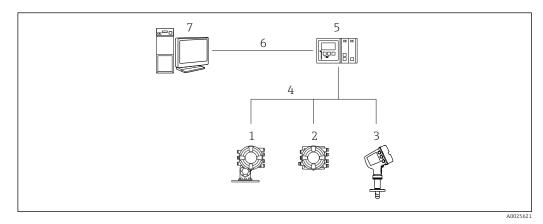

26 Connection of Tank Gauging devices to FieldCare via the Tankvision Tank Scanner NXA820

- 1 Proservo NMS8x
- 2 Tankside Monitor NRF81
- 3 Micropilot NMR8x
- 4 Field protocol (e.g. Modbus, V1)
- 5 Tankvision Tank Scanner NXA820
- 6 Ethernet
- 7 Computer with FieldCare installed

eate a new proje	ct in FieldCa	re.		
I J				
_				
	Add New Device			
	Device		Version	Class
	DI Communication FX	(A291	V2.05.01 (2015-04-28)	+
	DI Communication TO		V2.05.01 (2015-04-28)	•
	DI Communication US		V2.05.01 (2015-04-28)	
	CommDTM PROFIBUS	S DP-V1	V4.0.0.9 (2011-01-17)	•
	F H1 CommDTM low Communication F	VA193/291	V1.5 (2009-08-17) V3.26.00 (2015-04-07)	
	XA520	NA1337231	V1.05.09 (2011-07-15)	
H	ART Communication		V1.0.52 (2015-03-17)	•
	PC (Level, Pressure) F		V1.02.17 (2014-02-21)	
	XA HART Communic CP (Readwin) TXU10		V1.1.0.911 (2013-03-27) V1.01.18 (2014-02-21)	dtmSpecific
	ROFIdtm DPV1	WF/W4231	V 2.11(115) (2010-08-18)	
	FGNetwork		V1.06.00.285 (2015-03-25)	dtmSpecific
1		m		<u> </u>
		Device type	(DTM) information	
	evice:		Communication	
	lanufacturer:	Endress+Ha		
D	evice ID / SubID:			
M	lanufacturer ID:	17		
H	ardware revision:			
S	oftware revision:			
	evice revision:			
P	rofile revision:			
ls	generic:	No		

Establishing the connection between FieldCare and the device 7.5.2


.

Add a new device: NXA HART Communication

	NXA HART Communication	(Configuration) ×		
	NXA820 IP Address NXA820 Port Password	1	192.168.2.100 3000	l
			******	
	Tank Identification		Tank_1	
	Address range to scan	Start address End address		0 💙 15 💙
	Communication timeout (	seconds)		10 🗸

Open the configuration of the DTM and enter the required data (IP address of the NXA820; "Password" = "hart"; "Tank identification" only with NXA V1.05 or higher)

A00'

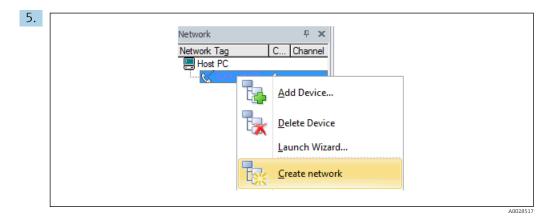

Select **Create network** from the context menu.

← The device is detected and the DTM is assigned.

Tank level (139):       C)         Distance (120):       C)         Status signal:       C)	494,8		Liquid temperature: 🖏 Water level: 🖏
🖲 🗖 🗖 🚺 🔗 💌 😫 😫	🖄 🛃 💠 🚺 Value	Unit	Wizard
Image: Minimized problem     Minimized problem       Image: Problem     Access status tooling:       Image: Problem     Operation       Image: Problem     Setup       Image: Problem     Setup       Image: Problem     Diagnostics       Image: Problem     Expert	Maintenance		Instrument health status

└ The device can be configured.

#### The "Save/Restore" function

i

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset = Restart device. This ensures correct operation of the device after the restore.

## 8 System integration


### 8.1 Overview of the Device Description files (DTM)

To integrate the device via HART into FieldCare, a Device Description file (DTM) according to the following specification is required:

Manufacturer ID	0x11
Device type (NMR8x)	0x112E
HART specification	7.0
DD files	For information and files see: www.endress.com

### 9 Commissioning

### 9.1 Terms related to tank measurement

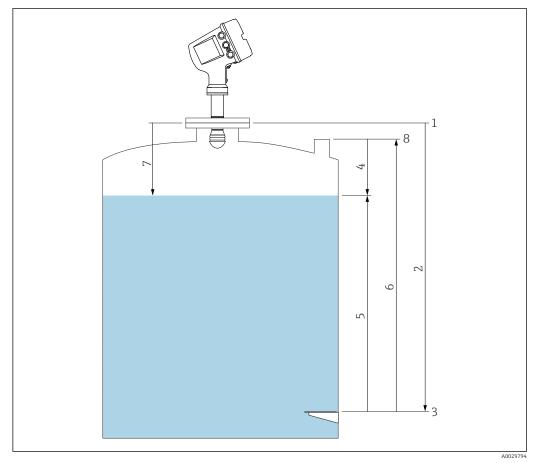

■ 27 Terms related to radar tank measurement

- 1 Gauge reference height
- 2 Empty
- 3 Datum plate
- 4 Tank ullage
   5 Tank level
- 6 Tank reference height
- 7 Distance
- 8 Dipping reference

### 9.2 Initial settings

#### 9.2.1 Setting the display language

#### Setting the display language via the display module

- 1. While in the standard view (→ 🗎 47), press "E". If required, select **Keylock off** from the context menu and press "E" again.
  - └ The Language appears.
- 2. Open the Language and select the display language.

#### Setting the display language via an operating tool (e.g. FieldCare)

**1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Language

2. Select the display language.

This setting only affects the language on the display module. To set the language in the operating tool use the language setting functionality of FieldCare or DeviceCare, respectively.

#### 9.2.2 Setting the real-time clock

#### Setting the real-time clock via the display module

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Date / time  $\rightarrow$  Set date
- 2. Use the following parameters to set the real-time clock to the current date and time: Year, Month, Day, Hour, Minutes.

#### Setting the real-time clock via an operating tool (e.g. FieldCare)

1	Navigate to: Setur	) →	Advanced setup $\rightarrow$ Date	e / time
2	1			
	Date/time: 🕻		2016-04-20 09:32:24	]
	Set date:		Please select 🗸	
			Please select	
			Abort	
			Start 📐	
			Confirm time	

Go to the Set date and select the Start.

Date/time: 🚺		2016-04-20 09:34:25
Set date: ?		Please select
Year:		2016
Month:		4
Day:		20
Hour:		9
Minute:		34
	Set date: <b>?</b> Year: Month: Day: Hour:	Set date: ? > Year: Month: Day: Hour:

Use the following parameters to set the date and time: **Year**, **Month**, **Day**, **Hour**, **Minutes**.

Set date:       ?       Please select         Year:       Please select       Abort         Month:       Start       Start         Day:       Confirm time       Start         Hour:       Hour:       Start		35:49	2016-04-20 09:	62	Date/time:	4.
Year:     Abort       Month:     Start       Day:     Confirm time	$\checkmark$		Please select	?	Set date:	
Day:					Year:	
			Start		Month:	
Hour:		6	Confirm time		Day:	
	9				Hour:	
Minute:	34				Minute:	

Go to the Set date and select the Confirm time.

└ The real-time clock is set to the current date and time.

### 9.3 Configuring the measuring device

#### 9.3.1 Configuration of the level measurement

The first parameters of the **Setup** menu are used to configure the measurement. A short description is given in the following sections. For a more detailed description refer to the parameter description in the appendix  $\rightarrow \cong 133$ .

#### Basic settings

Navigation path: Setup

Parameter	Meaning	Description
Setup → Device tag	Define a name to identify the measuring point within the plant.	→ 🖺 133
Setup → Units preset	Select a set of units for length, pressure and temperature.	→ 🖺 133
Setup → Empty	Enter the distance from the lower edge of the device flange to the datum plate.	→ 🖺 134
Setup $\rightarrow$ Tank level	Shows the measured level. Check whether the indicated value matches the actual level.	→ 🖺 123
Setup → Set level	Can be used to correct a constant shift of the measured level. If the indicated level does not match the actual level: Enter the actual level into this parameter. An offset for the measured level is then automatically defined.	→ 🗎 135

The Set level can only be used to compensate for a constant level error. To eliminate errors resulting from interference echos, use the interference echo suppression (map).

Interference echo suppression (map) in an operating tool (e.g. FieldCare/DeviceCare) Navigation path: Setup

Parameter	Meaning	Description
Setup $\rightarrow$ Distance	Shows the measured distance from the lower edge of the device flange to the product surface. Check whether this value is correct.	→ 🗎 138
Setup → Confirm distance	Specify whether the measured distance matches the actual distance. The selection determines up to which distance an interference echo suppression is recorded.	→ 🗎 135
Present mapping	Shows up to which distance a mapping has already been recorded.	
Setup → Mapping end point	Only visible for <b>Confirm distance = Manual map</b> . Determines up to which distance the new mapping will be recorded. Depending on the selection in <b>Confirm distance</b> a suitable value is preset in this parameter. Usually, there is no need to change this value.	
Setup → Record map	Only visible for <b>Confirm distance = Manual map</b> Select <b>Record map</b> . This starts the recording of the new map.	→ 🖺 137

#### Interference echo suppression on the local display

Navigation path: Setup  $\rightarrow$  Mapping



For the meaning of the parameters in this wizard see the table above.


#### Dip table

The dip table is used to correct the level readings using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions such as a mechanical offset and the tank or stilling well design. The dip table is managed in the **Dip-table** submenu  $\rightarrow \implies$  224.

## 9.4 Configuring the tank gauging application

Configuration of the inputs:	Description
HART inputs	→ 🗎 67
NMT532/539/81 connected via HART	→ 🗎 69
4-20mA inputs	→ 🗎 71
RTD input	→ 🗎 72
Digital inputs	→ 🗎 74
Configuration of the data processing in the device:	Description
Linking input values to tank variables	→ 🗎 75
Tank calculation: Direct Level Measurement	→ 🗎 76
Tank calculation: Hybrid Tank Measurement System (HTMS)	→ 🗎 77
Tank calculation: Correction of the Hydrostatic Tank Deformation (HyTD)	→ 🖹 78
Tank calculation: Thermal Tank Shell Correction (CTSh)	→ 🗎 79
Alarms (limit evaluation)	→ 🗎 85
Configuration of the signal output:	Description
4-20mA output	→ 🖺 86
HART slave + 4-20mA output	→ 🖺 87
Modbus	→ 🖺 88
V1	→ 🖺 89
Digital outputs	→ 🗎 90
WM550	→ 🖺 89

#### 9.4.1 Configuration of the HART inputs

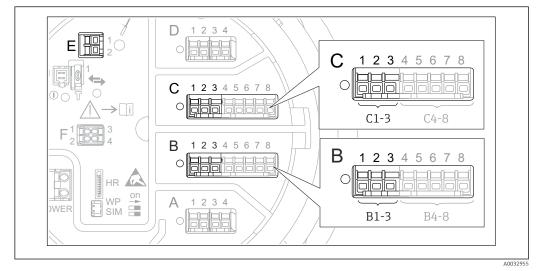

#### Connecting and addressing HART devices

■ 28 Possible terminals for HART loops

- *B* Analog I/O module in slot *B* (availability depending on device version  $\rightarrow \triangleq 24$ )
- C Analog I/O module in slot C (availability depending on device version  $\rightarrow \cong 24$ )
- *E* HART Ex is output (available in all device versions)

#### Slot B or C: Setting the operating mode of the Analog I/O module

This section is not relevant for the HART Ex is output (Slot E). This output always functions as a HART master for the connected HART slaves.

If HART devices are connected to an Analog I/O module (slot B or C in the terminal compartment), this module must be configured as follows:

- **1.** Navigate to the submenu of the respective Analog I/O module: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O X1-3
- **2.** Go to the Operating mode ( $\rightarrow \square 154$ ).

3. If only one HART device is connected to this loop:

Select the HART master+4..20mA input. In this case the 4-20mA signal can be used in addition to the HART signal. For the configuration of the 4-20mA input:  $\rightarrow \square 71$ .

4. If up to 6 HART devices are connected to this loop: Select the HART master.

<sup>3)</sup> The current software does not support HART devices with address 0 (zero).

#### Defining the type of measured value

This setting can be skipped for a connected Prothermo NMT53x and NMT8x as the type of measured value is automatically recognized by the Micropilot NMR8x in this case.

- The measured values can only be used in the system if the unit of the assigned HART variable fits the type of measured value. The HART variable assigned to **Output temperature**, for example, has to be in °C or °F.
  - A HART variable with unit "%" cannot be used for **Output level**. Instead, the HART variable must be in mm, m, ft or in.

The type of measured value must be specified for each HART variable (PV, SV, TV and QV). To do so, proceed as follows:

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  HART devices
  - ← There is a submenu for each connected HART device.
- 2. For each device go to the corresponding submenu.
- 3. If the device measures a pressure:

Go to the Output pressure ( $\rightarrow \square$  144) and specify which of the four HART variables contains the measured pressure. Only a HART variable with a pressure unit may be selected.

4. If the device measures a density:

Go to the Output density ( $\rightarrow \square$  144) and specify which of the four HART variables contains the measured density. Only a HART variable with a density unit may be selected.

5. If the device measures a temperature:

Go to the Output temperature ( $\rightarrow \square$  145) and specify which of the four HART variables contains the measured temperature. Only a HART variable with a temperature unit may be selected.

6. If the device measures the vapor temperature:

Go to the Output vapor temperature ( $\rightarrow \square$  145) and specify which of the four HART variables contains the measured vapor temperature. Only a HART variable with a temperature unit may be selected.

7. If the device measures a level:

Go to the Output level ( $\rightarrow \cong 146$ ) and specify which of the four HART variables contains the measured level. Only a HART variable with a level unit (not "%") may be selected.

#### **Disconnecting HART devices**

When a HART device is disconnected from the device, it must also be logically removed as follows:


- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  HART devices  $\rightarrow$  Forget device
- 2. Select the HART device to be removed.

This procedure is also necessary if a defective device is exchanged.

## 9.4.2 Configuration of a connected Prothermo temperature transmitter

If a Prothermo NMT532, NMT539 or NMT8x temperature transmitter is connected via HART, it can be configured as follows:

- 1. Navigate to: Expert → Input/output → HART devices → HART Device(s) → NMT device config; here, **HART Device(s)** is the name of the connected Prothermo.
- 2. Go to the Configure device? and select **Yes**.

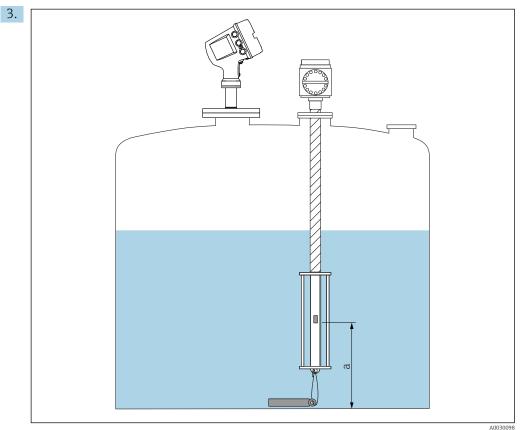



29 Prothermo NMT53x: Position of the bottom temperature element

a Distance from bottom temperature element to zero reference (tank bottom or datum plate).

To configure a **Prothermo NMT53x**: Go to the Bottom point and enter the position of the bottom temperature element (see picture above).

└ The value entered into the Bottom point in the Tank Gauging device is handed over to the Bottom point in the connected Prothermo NMT53x.

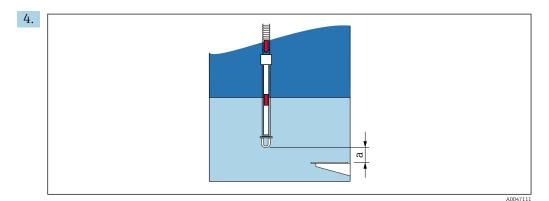

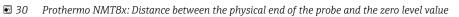


a Distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

To configure a **Prothermo NMT8x**: Go to the Bottom point and enter the distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

→ The value entered into the Bottom point in the Tank Gauging device is handed over to the End of probe to zero distance in the connected Prothermo NMT8x.

To check the temperatures measured by the individual elements, go to the following submenu: Operation  $\rightarrow$  Temperature  $\rightarrow$  NMT element values  $\rightarrow$  Element temperature

There is a Element temperature X for each element of the Prothermo.

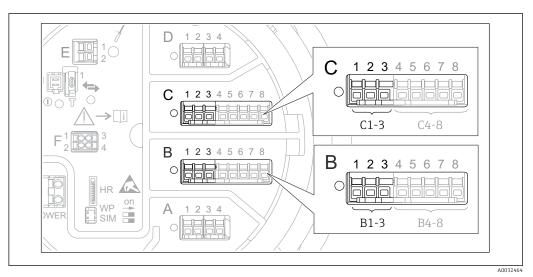


#### 9.4.3 Configuration of the 4-20mA inputs

■ 31 Possible locations of the Analog I/O modules, which can be used as a 4-20mA input. The order code of the device determines which of these modules is actually present  $\rightarrow \cong 24$ .

For each Analog I/O module to which a 4-20mA device is connected, proceed as follows:


- 1. Make sure the 4-20mA devices are connected as defined by the terminal assignment → 🗎 35.
- 2. Navigate to the submenu of the respective Analog I/O module: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O X1-3
- 3. Go to the Operating mode ( $\rightarrow \cong 154$ ) and select **4..20mA input** or **HART master +4..20mA input**.
- **4.** Go to the Process value ( $\rightarrow \triangleq 161$ ) and specify which process variable is transmitted by the connected device.
- **5.** Go to the Analog input 0% value ( $\rightarrow \cong$  160) and define which value of the process variable corresponds to an input current of 4 mA (see diagram below).
- 6. Go to the Analog input 100% value (→ 🗎 160) and define which value of the process variable corresponds to an input current of 20 mA (see diagram below).
- **7.** Go to the Process value ( $\rightarrow \triangleq 161$ ) and check whether the indicated value matches the actual value of the process variable.

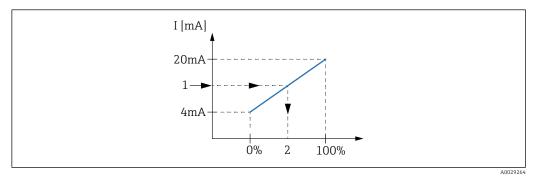

- Scaling of the 4-20mA input to the process variable
- 1 Input value in mA
- 2 Process value




The **Analog I/O** submenu contains additional parameters for a more detailed configuration of the Analog Input. For a description refer to :  $\rightarrow \implies 154$ 

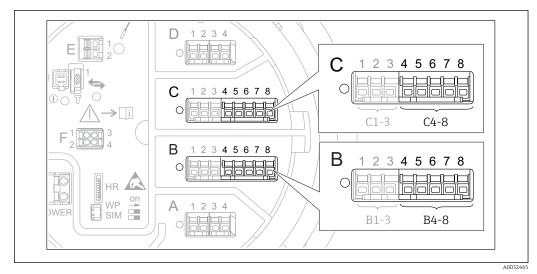

#### 9.4.4 Configuration of a connected RTD


- 33 Possible locations of the Analog I/O modules, to which an RTD can be connected. The order code of the device determines which of these modules is actually present  $\rightarrow \triangleq 24$ .
- **1.** Make sure the RTD is connected as defined by the terminal assignment  $\rightarrow \oplus 40$ .
- **2.** Navigate to the submenu of the respective Analog I/O module: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog IP X4-8.
- 3. Go to the RTD type ( $\rightarrow \square$  148) and specify the type of the connected RTD.

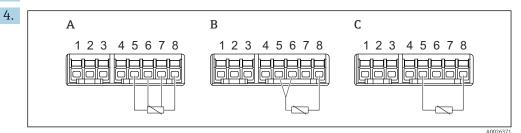

- ☑ 34 RTD connection types
- A 4 wire RTD connection
- *B* 3 wire RTD connection
- C 2 wire RTD connection

Go to the RTD connection type ( $\rightarrow \square$  149) and specify the type of connection of the RTD (2-, 3- or 4-wire).

- 5. Go to the Input value ( $\rightarrow \cong 151$ ) and check whether the indicated temperature matches the actual temperature.
- 6. Go to the Minimum probe temperature ( $\rightarrow \bigoplus 151$ ) and specify the minimum approved temperature of the connected RTD.
- **7.** Go to the Maximum probe temperature ( $\rightarrow \triangleq 152$ ) and specify the maximum approved temperature of the connected RTD.

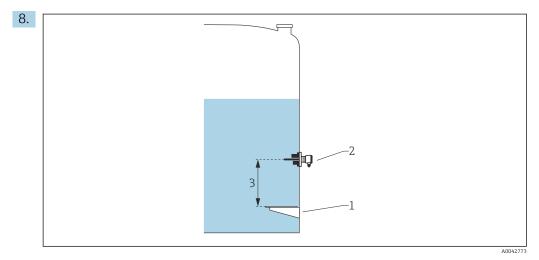

- 1 Datum plate
- 2 RTD
- 3 Probe position ( $\rightarrow \square 152$ )


Go to the Probe position ( $\rightarrow \bigoplus 152$ ) and enter the mounting position of the RTD (measured from the datum plate).

└ This parameter, in conjunction with the measured level, determines whether the measured temperature refers to the product or to the gas phase.

#### Offset for resistance and/or temperature


An offset for the resistance or the temperature can be defined in the following submenu: Expert  $\rightarrow$  Input/output  $\rightarrow$  Analog IP X4-8.

- **Ohms offset** is added to the measured resistance before the calculation of the temperature.
- **Temperature offset after conversion** is added to the measured temperature.

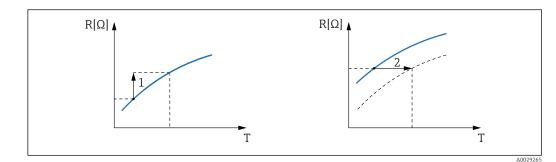

1 Ohms offset

2 Temperature offset after conversion

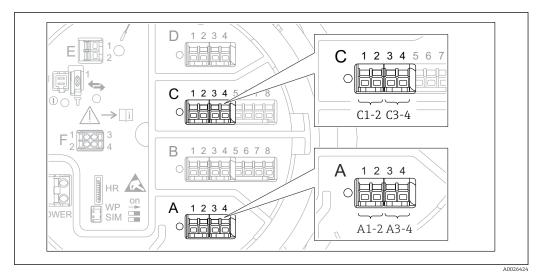


### 9.4.5 Configuration of the digital inputs

■ 35 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of digital input modules  $\rightarrow$  🗎 24.

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode** and **Contact type**.

### The Operating mode

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Digital Xx-x  $\rightarrow$  Operating mode

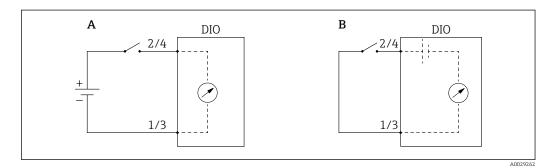

A "Operating mode" = "Input passive"

B "Operating mode" = "Input active"

#### Meaning of the options

Input passive

The DIO module measures the voltage provided by an external source. Depending on the status of the external switch, this voltage is 0 at the input (switch open) or exceeds a certain limit voltage (switch closed). These two states represent the digital signal.

Input active

The DIO module provides a voltage and uses it to detect whether the external switch is open or closed.

#### The Contact type

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Digital Xx-x  $\rightarrow$  Contact type

This parameter determines how the state of the external switch is mapped to the internal states of the DIO module:

State of the external switch	Internal state of the DIO module					
	Contact type = Normally open	Contact type = Normally closed				
Open	Inactive	Active				
Closed	Active	Inactive				
Behavior in special situations:						
During start-up	Unknown	Unknown				
Fault in measurement	Error	Error				

- The internal state of the Digital Input can be transferred to a Digital Output or can be used to control the measurement.


### 9.4.6 Linking input values to tank variables

Measured values must be linked to tank variables before they can be used in the Tank Gauging application. This is done by defining the source of each tank variable in the following parameters:

Tank variable	Parameter defining the source of this variable
Bottom water level	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Level $\rightarrow$ Water level source
Average or spot temperature of the product	<ul> <li>Setup → Liquid temp source</li> <li>Setup → Advanced setup → Application → Tank configuration</li> <li>→ Temperature → Liquid temp source</li> </ul>
Temperature of the air surrounding the tank	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Temperature $\rightarrow$ Air temperature source
Temperature of the vapor above the product	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Temperature $\rightarrow$ Vapor temp source
Density of the product	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Observed density source
Bottom pressure (P1)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 (bottom) source
Top pressure (P3)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 (top) source




Depending on the application not all these parameters will be relevant in a given situation.

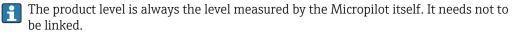

### 9.4.7 Tank calculation: Direct level measurement

If no tank calculation is configured, level and temperature are measured directly.

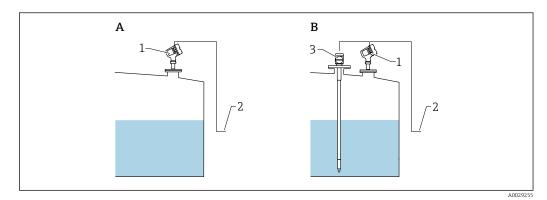


- *A* Direct level measurement (without temperature)
- *B* Direct level and temperature measurement
- 1 Level transmitter
- 2 To inventory management system
- 3 Temperature transmitter
- If a temperature transmitter is connected: Navigate to: "Setup → Liquid temp source" and specify from which device the temperature is obtained.

### 9.4.8 Tank calculation: Hybrid tank measurement system (HTMS)

HTMS uses level and pressure measurements to calculate the density of the medium.

In non-atmospheric (i.e. pressurized) tanks it is recommended to use the **HTMS P1+P3** mode. Two pressure sensors are required in this case. In atmospheric (i.e. unpressurized) tanks the **HTMS P1** with only one pressure sensor is sufficient.

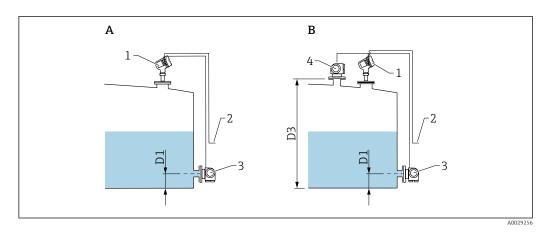

- A "'HTMS mode" parameter" = "'HTMS P1" option"
- B "'HTMS mode" parameter" = "'HTMS P1+P3" option"
- D1 P1 position
- D3 P3 position
- 1 Micropilot
- 2 To inventory management system
- *3 Pressure sensor (bottom)*
- 4 Pressure sensor (top)

**1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Pressure


- 2. Go to **P1 (bottom) source (→**  <sup>(⇒)</sup> **200)** and specify from which device the bottom pressure (P1) is obtained.
- 3. If a top pressure transmitter (P3) is connected:

Go to P3 (top) source ( $\rightarrow \cong 202$ ) and specify from which device the top pressure (P3) is obtained.

- 4. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  HTMS
- 5. Go to **HTMS mode** ( $\rightarrow \square 220$ ) and specify the HTMS mode.
- 6. Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Density
- 7. Go to **Observed density source** ( $\rightarrow \equiv 198$ ) and select **HTMS**.
- 8. Use the other parameters of the HTMS to configure the calculation. For a detailed description: → 🖹 218

### 9.4.9 Tank calculation: Hydrostatic Tank Deformation (HyTD)

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels divided over the full range of the tank.

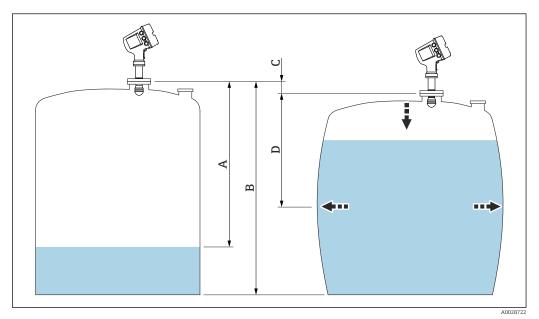

■ 36 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (tank nearly empty)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (tank filled)

The Correction of the Hydrostatic Tank Deformation is configured in the HyTD  $(\rightarrow \cong 207)$ 

### 9.4.10 Tank calculation: Thermal tank shell correction (CTSh)

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

This correction is recommended for the following situations:


- if the operating temperature deviates considerably from the temperature during calibration (ΔT > 10 °C (18 °F))
- for extremely high tanks
- for refrigerated, cryogenic or heated applications

As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.

This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

# 9.4.11 Tank calculation: Gas phase correction for liquefied gases (CLG)

The gas phase in pressurized tanks has a direct impact on the distance determination for time-of-flight sensors. This feature corrects the influences of the vapor phase based on its pressure, temperature and composition.

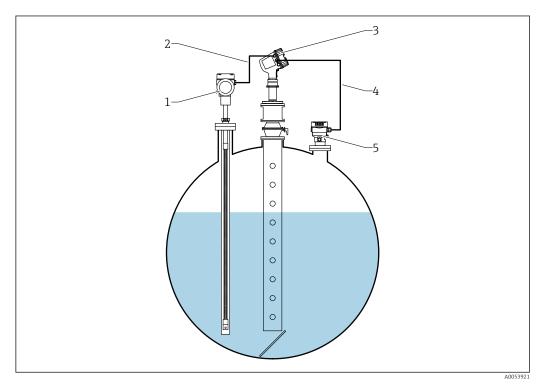

1 Prothermo temperature measurement device, equipped with thermowell or protective pipe

- 2 HART connection
- 3 Radar level gauge Micropilot NMR84
- 4 HART connection
- 5 Digital pressure transmitter

The gas phase correction for liquefied gases (CLG) is configured in the **CLG** submenu submenu.

Navigation path: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  CLG

#### 2. CLG mode: Mix of four gases CLG to tank level: No Hydrogen H2 Gas 1: Pentane C5H12 Gas 2: Gas 3: Isobutylene C4H8 Gas 4: Nitrogen N2 Gas 1 ratio: 90 Gas 2 ratio: 6 2 Gas 3 ratio: Gas 4 ratio: 2 CLG correction value: -0.1 mm CLG corrected level: 🔁 17741.9 mm

Configuration of the gas phase correction for liquefied gases (CLG)

**1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  CLG

Go to the **CLG mode** parameter. Count the number of gases that make up the gas mix and select the appropriate option.

- 3. Go to the **Gas 1** parameter and select one of the gases in the gas mix from the list.
- 4. If the gas in the tank is not in the list, select **Custom** option.
- 5. If the **Custom** option has been selected, go to the **Gas 1 refractive index** parameter and enter the refractive index of this gas.
- 6. Repeat the above steps for up to 4 gases.
- 7. If there is more than 1 gas in the tank, go to the **Gas 1 ratio** parameter and enter the share of gas 1. The share is entered in percent (i. e. mixture of 2 gases with 25 and 75 percent) or in amounts (i. e. mixture of 2 gases with 1 amount and 3 amounts), no unit required.
- 8. Repeat this step for up to 4 gases.
- 9. Go to the **CLG to tank level** parameter and activate or deactivate the tank level correction by CLG.

SIL- or WHG-Mode sets the **CLG to tank level** parameter to **No** option to deactivate the tank level correction by CLG.

The **CLG** correction value parameter shows the CLG correction value, and the **CLG** corrected level parameter shows the level with CLG correction only.

#### 9.4.12 Configuration of the level reference check (LRC) function

For tanks where a manual dipping cannot be performed the level gauge can be verified by means of the LRC function.




This reference check is recommended for liquefied gas applications.

There are different options for this function:

- LRC with reference level
- LRC with point reference
- LRC with reference switch

#### LRC with reference level

The radar device compares it's own level reading with the level reading of another level gauge (e.g. Proservo NMS8x). Based on a configurable deviation value (**Allowed difference** parameter), a continuous check is performed.

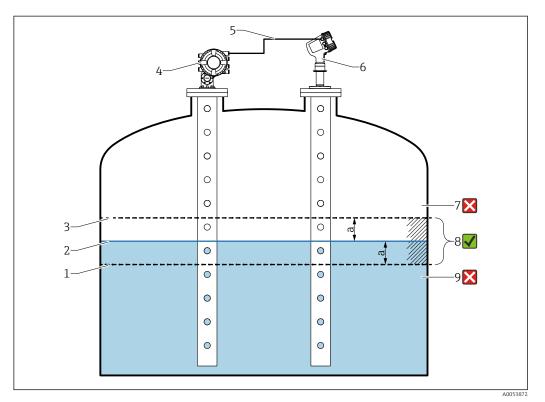

37 Application example with Proservo NMS8x

- 1 Lower limit of deviation value "a" as configured in radar level gauge
- 2 Reference value: Measured level as provided by level gauge Proservo NMS8x
- 3 Upper limit of deviation
- 4 Proservo NMS8x provides the reference value
- 5 Level gauges are interconnected via HART interface
- 6 Radar level gauge with configured deviation value "a" for "Allowed difference" parameter
- 7 The measured level is greater than reference value plus deviation value "a": Level value is not verified
- 8 The measured level is within or equal to the limits defined by the deviation value "a": Level value is verified
- 9 The measured level is less than reference value minus deviation value "a": Level value is not verified

#### Properties

- Frequency: The reference check is performed continuously every 60 seconds.
- Tolerance: Via the **Check fail threshold** parameter, a configurable number of failures is allowed before the status switches to failed.
- Connection: The level reference device is connected via an optional HART I/O board.

#### Configuration of LRC with reference level

1. Navigate to Diagnostics  $\rightarrow$  LRC  $\rightarrow$  LRC 1 to 2

LRC Mode:		Compare with level device	
Allowed difference:		10.0	mm
Check fail threshold:		3	
Reference level source:		No input value	
Reference level:	S	0.0	mm
Check level:	Ð	0.0	mm
Check status:	Ð	not executed	
Check timestamp:	đ		


Go to the LRC Mode parameter and select the Compare with level device option.

- **3.** Go to the **Allowed difference** parameter and specify the value for the allowed difference between the tank level and the reference.
- **4.** Go to the **Check fail threshold** parameter and set the tolerated amount of failures before an alarm is triggered. As the reference check is performed continuously every 60 seconds, this resembles the number of minutes until an alarm is triggered.
- 5. Go to the **Reference level source** parameter and define the source for the reference level.

#### LRC with point reference

Mechanical parts in the tank can be used as reference points to perform a reference measurement. The reference distance can be saved to the device. Based on a configurable deviation value (**Allowed difference** parameter), a manual check can be started.

A closed cut off ball valve or a fixed reference ring at the end of a stilling well are examples for suitable reference measurement installations.

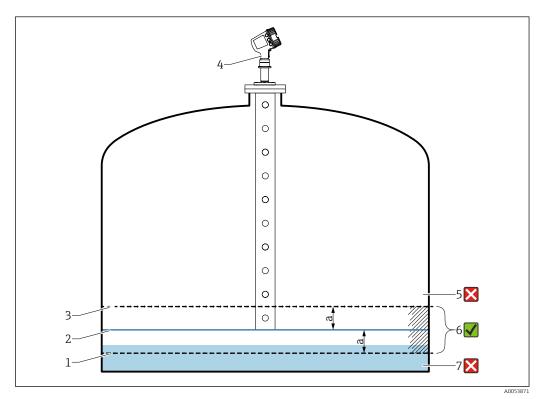

38 Application example with fixed reference point at the end of the stilling well

*1* Lower limit of deviation value "a" as configured in radar level gauge

- 2 Reference value: Distance from radar level gauge to object fixed to stilling well
- *3* Upper limit of deviation
- 4 Radar level gauge with configured deviation value "a" for "Allowed difference" parameter
- 5 The measured level is greater than reference value plus deviation value "a": Level value is not verified
- 6 The measured level is within or equal to the limits defined by the deviation value "a": Level value is verified
- 7 The measured level is less than reference value minus deviation value "a": Level value is not verified

#### Configuration of LRC with point reference

2

LRC Mode:			Measure reference point	
Allowed difference:			10.0	mm
Reference point level:			17740.0	mm
Start reference measurement:		►	No	
Check level:	C		0.0	mm
Check status:	C		not executed 🖂	
Check timestamp:	C			1


Go to the **LRC Mode** parameter and select the **Measure reference point** option.

2

- **3.** Go to the **Allowed difference** parameter and specify the value for the allowed difference between the tank level and the reference.
- 4. Go to the **Reference point level** parameter and define the position of the reference point as level.
- 5. Go to the **Start reference measurement** parameter and set **Yes** option to start the measurement of the reference point and execute the check.

#### LRC with reference switch

A level switch (e.g. Liquiphant FTLx) can be mounted within the tank. The check can be performed continuously, each time the level switch is activated or deactivated. The measured level should remain within a configurable deviation.

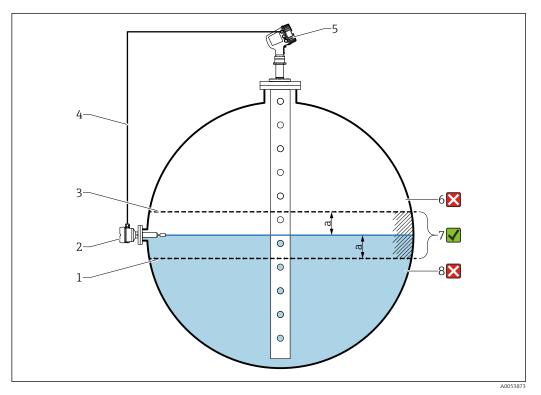

**■** 39 Application example with level switch

1

Lower limit of deviation value "a" as configured in radar level gauge

- 2 Reference value: The switching point of an installed level switch represents the reference value for verification
   3 Upper limit of deviation
- 4 Level switch and level gauge are interconnected via a digital I/O board
- 5 Radar level gauge with configured deviation value "a" for "Allowed difference" parameter
  - 6 The measured level is greater than reference value plus deviation value "a": Level value is not verified
- 7 The measured level is within or equal to the limits defined by the deviation value "a": Level value is verified
- 8 The measured level is less than reference value minus deviation value "a": Level value is not verified

#### Properties

- Modes: The device can be set to monitor the switching point while filling or draining the tank.
- Connection: The level switch is connected via a digital I/O board.

#### Configuration of LRC with reference switch

1.	Navigate to	Diagnostics	$\rightarrow$ LRC $\rightarrow$	LRC 1 to 2


LRC Mode:		Compare with level switch 🛛 🖂	
Allowed difference:		10.0	mm
Reference switch source:	•	None	
Reference switch mode:		Inactive -> Active	
Reference switch level:		17740.0	mm
Reference switch state: 🛛 😂		Unknown	
Check level:		0.0	mm
Check status:		not executed	
Check timestamp:			

Go to the **LRC Mode** parameter and select the **Compare with level switch** option.

- **3.** Go to the **Allowed difference** parameter and specify the value for the allowed difference between the tank level and the reference.
- 4. Go to the **Reference switch source** parameter and select the source for the reference switch.
- 5. Go to the Reference switch mode parameter. Select the Active -> Inactive option to define the switch direction for the reference check to be executed when the switch status changes from Active to Inactive. Or select the Inactive -> Active option to define the switch direction for the reference check to be executed when the switch status changes from Inactive to Active.
- 6. Go to the **Reference switch level** parameter and enter the position of the reference switch by entering a value with a unit of length. This parameter depends on the choice made for the **Distance unit** parameter.
  - └ This defines the position of the reference switch as level.

### 9.4.13 Configuration of the alarms (limit evaluation)

A limit evaluation can be configured for up to 4 tank variables. The limit evaluation issues an alarm if the value exceeds an upper limit or falls below a lower limit, respectively. The limit values can be defined by the user.

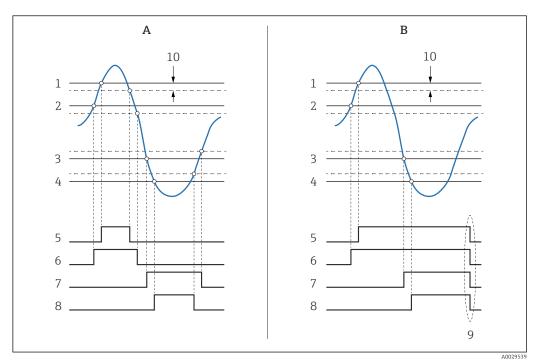

☑ 40 Principle of the limit evaluation


- A Alarm mode = On
- B Alarm mode = Latching
- 1 HH alarm value
- 2 H alarm value
- 3 L alarm value
- 4 LL alarm value
- 5 HH alarm
- 6 Halarm
- 7 L alarm
- 8 LL alarm
- 9 "Clear alarm" = "Yes" or power off-on
- 10 Hysteresis


The limit evaluation is configured in the **Alarm 1 to 4** submenus.

Navigation path: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Alarm  $\rightarrow$  Alarm 1 to 4




For **Alarm mode** = **Latching** all alarms remain active until the user selects **Clear alarm** = **Yes** or the power is switched off and on.

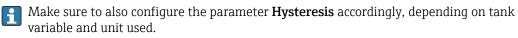

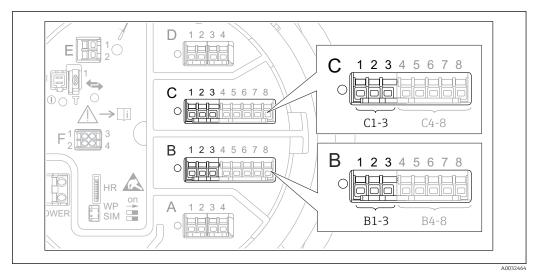

### 9.4.14 Configuration of the 4-20mA output

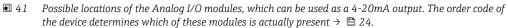

Each Analog I/O module of the device can be configured as a 4...20mA analog output. To do so, proceed as follows:

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O X1-3.
- Go to the Operating mode and select 4..20mA output or HART slave +4..20mA output <sup>4)</sup>.
- **3.** Go to the Analog input source and select the tank variable which is to be transmitted via the 4...20mA output.
- 4. Go to the 0 % value and enter the value of the selected tank variable which will be mapped to 4 mA.
- 5. Go to the 100 % value and enter the value of the selected tank variable which will be mapped to 20 mA.

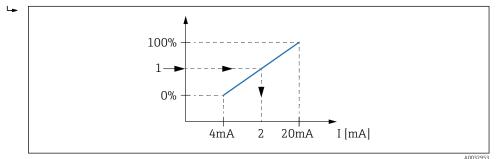


Image: Scaling of the tank variable to the output current

1 Tank variable

-

2 Output current

After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined error value.

The Analog I/O contains more parameters which can be used for a more detailed configuration of the analog output. For a description see  $\rightarrow \triangleq 154$ 

<sup>4) &</sup>quot;HART slave +4..20mA output " means that the Analog I/O module serves as a HART slave which cyclically sends up to four HART variables to a HART master. For the configuration of the HART output: → <a>Pmillion</a> 87

### 9.4.15 Configuration of the HART slave + 4 to 20 mA output

If **Operating mode** = **HART slave +4..20mA output** has been selected for an Analog I/O module, it serves as a HART slave which sends up to four HART variables to a HART master.

The 4 to 20 mA signal can be used in this case, too. For its configuration: → 🗎 86

#### Standard case: PV = 4 to 20 mA signal


By default, the Primary Variable (PV) is identical to the tank variable transmitted by the 4-20mA output. To define the other HART variables and to configure the HART output in more detail, proceed as follows:

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Configuration
- 2. Go to the System polling address and set the HART slave address of the device.
- **3.** Use the following parameters to assign tank variables to the second to fourth HART variable: **Assign SV**, **Assign TV**, **Assign QV**.
  - └ The four HART variables are transmitted to a connected HART Master.

#### Special case: PV ≠ 4 to 20 mA signal

In exceptional cases it might be required that the Primary Variable (PV) transmits a different tank variable than the 4-20mA output. This is configured as follows.


- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Configuration
- 2. Go to the PV source and select **Custom**.
  - └→ The following additional parameters appear in the submenu: Assign PV, 0 % value, 100 % value and PV mA selector.
- **3.** Go to the Assign PV and select the tank variable to be transmitted as the Primary Variable (PV).
- 4. Use the **0 % value** and **100 % value** parameters to define a range for the PV. The Percent of range indicates the percentage for the actual value of the PV. It is included in the cyclical output to the HART master.

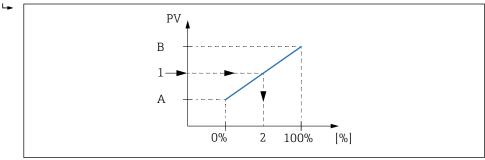

■ 43 Scaling of the tank variable to the percentage


- A 0 % value
- B 100 % value
- 1 Primary variable (PV)
- 2 Percent of range

5. Use the PV mA selector to define whether the output current of an Analog I/O module is to be included in the cyclical HART output.

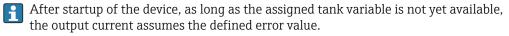

The PV mA selector does not influence the output current at the terminals of the Analog I/O module. It only defines whether the value of this current is part of the HART output or not.

### 9.4.16 Configuration of the Modbus output

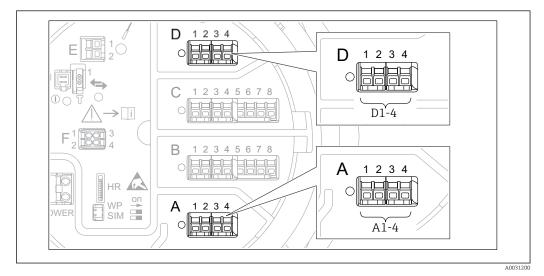


■ 44 Possible locations of the Modbus modules (examples); depending on the device version these modules may also be in slot B or  $C \rightarrow \cong 24$ .

The Micropilot NMR8x acts as a Modbus slave. Measured or calculated tank values are stored in registers which can be requested by a Modbus master.

The following submenu is used to configure the communication between the device and the Modbus master:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  Modbus X1-4  $\rightarrow$ Configuration ( $\rightarrow \square$  170)

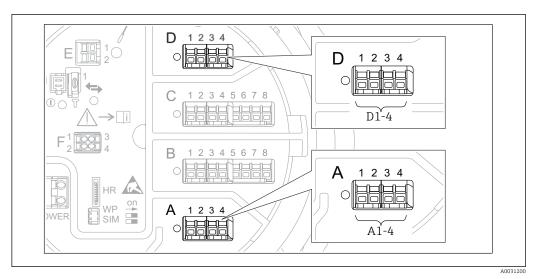


### 9.4.17 Configuration of the V1 output

■ 45 Possible locations of the V1 modules (examples); depending on the device version these modules may also be in slot B or  $C \rightarrow \cong 24$ .

The following submenus are used to configure the V1 communication between the device and the control system:

- Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  V1 X1-4  $\rightarrow$  Configuration  $\rightarrow$  🗎 173
- Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  V1 X1-4  $\rightarrow$  V1 input selector  $\rightarrow$  🗎 176


### 9.4.18 Configuration of the WM550 output

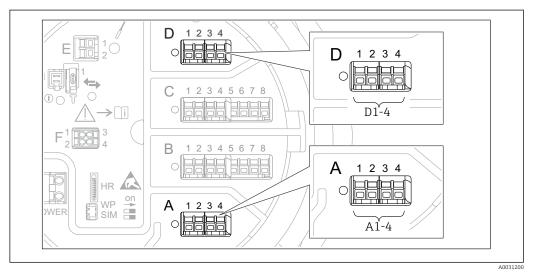

■ 46 Possible locations of the WM550 modules (examples); depending on the device version these modules may also be in slot B or  $C \rightarrow \cong 24$ .


The following submenus are used to configure the WM550 communication between the device and the control system:

- Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  WM550 X1-4  $\rightarrow$  Configuration  $\rightarrow$  🗎 169
- Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  WM550 X1-4  $\rightarrow$  WM550 input selector  $\rightarrow \cong 178$

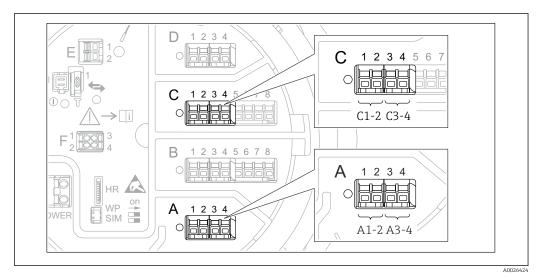

### 9.4.19 Configuration of the digital outputs

 E 47 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of Digital I/O modules → 
 \u00e9 24.

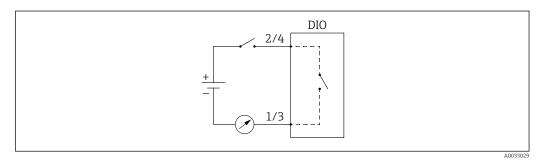

🗟 48 Usage of the Digital I/O module as a digital output

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode, Digital input source** and **Contact type**.

A digital output can be used to

- output the state of an alarm (if an alarm has been configured  $\rightarrow \cong 85$ )
- transmit the status of a digital input (if a digital input has been configured  $\rightarrow \implies 74$ )

To configure a digital output, proceed as follows:

- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Digital Xx-x, where Xx-x designates the digital I/O module to be configured.
- 2. Go to the Operating mode and select the Output passive.
- 3. Go to the Digital input source and select the alarm or digital input to be transmitted.
- 4. Go to the Contact type and select how the internal state of the alarm or digital input is to be mapped to the digital output (see table below).

State of the alarm	Switching state of the digital output				
<ul> <li>Internal state of the digital input</li> </ul>	Contact type = Normally open	Contact type = Normally closed			
Inactive	Open	Closed			
Active	Closed	Open			

- For SIL applications, **Contact type** is automatically set to **Normally closed** by the device when starting the SIL confirmation procedure.
  - In case of a power supply failure, the switching state is always "open", irrespective of the selected option.

### 9.5 Advanced settings

For a more detailed configuration of the signal inputs, the tank calculations and the signal outputs refer to the Advanced setup ( $\rightarrow \square 139$ ).

### 9.6 Simulation

To check the correct configuration of the device and of the control system, it is possible to simulate different situations (measured values, diagnostic messages etc.). See the Simulation ( $\rightarrow \cong 265$ ) for details.

# 9.7 Protecting settings from unauthorized access

There are two possibilities to protect the settings from unauthorized access:

- By an access code ( $\rightarrow \square 54$ )
  - This locks the access via the display and operating module.
- By the protection switch (→ 
   <sup>(⇒)</sup> 55)
   This locks the access to W&M-related parameters by any user interface (display and operating module, FieldCare, other configuration tools).


# 10 Operation

# 10.1 Reading off the device locking status

Depending on the locking state of the device some operations may be locked. The current locking status is indicated at: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Locking status. The following table summarizes the different locking statuses:

Locking status	Meaning	Unlocking procedure
Hardware locked	The device is locked by the write-protection switch in the terminal compartment.	→ 🗎 55
SIL locked	The device is in SIL-locked mode.	Detailed information on this topic see SIL Safety manual
CT active - all parameters	The custody transfer mode is active.	→ 🗎 55
WHG locked	The device is in WHG-locked mode.	Detailed information on this topic see SIL Safety manual
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/ download, reset). Once the internal processing has been completed, the parameters can be changed again.	Wait for completion of the device-internal processing.

A locking is indicated by the write protection symbol in the header of the display:

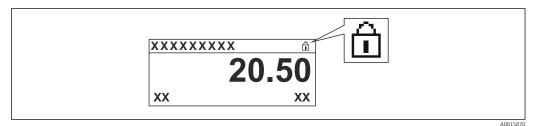

# **10.2** Reading off measured values

Tank values can be read off in the following submenus:

- Operation  $\rightarrow$  Level
- Operation  $\rightarrow$  Temperature
- Operation  $\rightarrow$  Density
- Operation  $\rightarrow$  Pressure

# 11 Diagnostics and troubleshooting

# 11.1 General trouble shooting


### 11.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
	Display contrast too low.	Set Setup $\rightarrow$ Advanced setup $\rightarrow$ Display $\rightarrow$ Contrast display to a value $\geq$ 60 %.
"Communication error" is	Electromagnetic interference	Check grounding of the device.
indicated on the display when starting the device or connecting the display	Broken display cable or display plug.	Exchange display.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer (e.g. FieldCare) and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

# 11.2 Diagnostic information on local display

### 11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

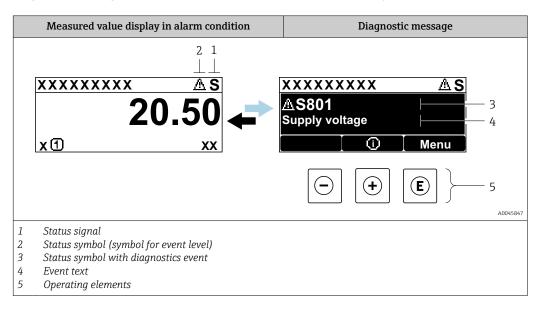

### Status signals


A0013956	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation or a warning).
<b>S</b> A0013958	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
M	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.

### Status symbol (symbol for event level)

A0013961	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
A0013962	"Warning" status The device continues to measure. A diagnostic message is generated.

#### Diagnostics event and event text


The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

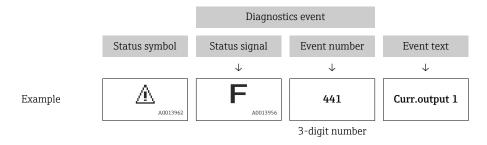


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu ( $\rightarrow \cong 261$ ).

#### **Operating elements**

Operating function	Operating functions in menu, submenu			
(+)	<b>Plus key</b>			
A0013970	Opens the message about the remedial measures.			
(E)	Enter key			
A0013952	Opens the operating menu.			

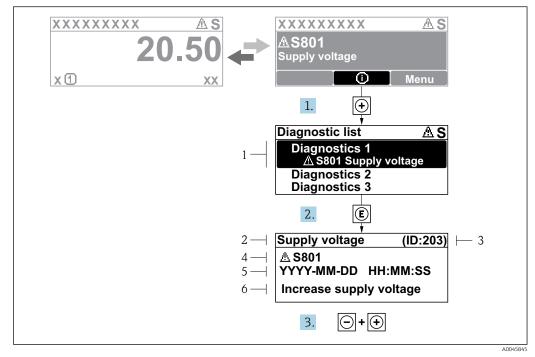

#### 11.2.2 Calling up remedial measures

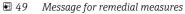

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence6 Remedial measures

A diagnostic message appears in the standard view (measured value display).

1. Press 
⊕ (④ symbol).


- ← The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\mathbb{E}$ .
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or in the **Previous diagnostics**.

- 1. Press E.
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press = +  $\pm$  simultaneously.
  - ← The message for the remedial measures closes.

# 11.3 Diagnostic information in FieldCare

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

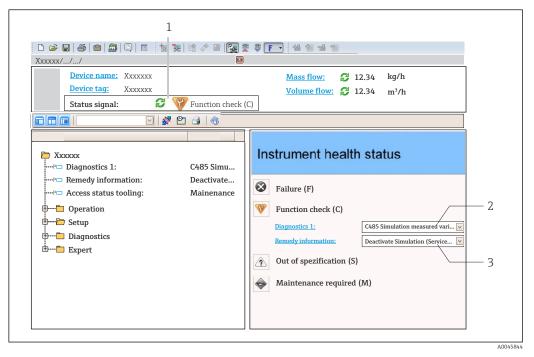

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with Service ID

Furthermore, diagnostic events that have occurred can be viewed in the Diagnostic list.

### 11.3.1 Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
A0017271	Failure A device error has occurred. The measured value is no longer valid.
A0017278	<b>Function check</b> The device is in service mode (e.g. during a simulation or a warning).
A0017277	<b>Out of specification</b> The device is operated outside its technical specification limits (e.g. outside the process temperature range)
A0017276	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

### 11.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

- 2. On the right in the working area, mouse over the parameter.
  - ← A tool tip with remedy information for the diagnostic event appears.

11.4	Overview of the diagnostic messages
------	-------------------------------------

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of :	sensor			
102	Sensor incompatible error	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
150	Detector error	<ol> <li>Restart device</li> <li>Check electrical connections of detector</li> <li>Replace detector unit</li> </ol>	F	Alarm
151	Sensor electronic failure	Replace sensor electronic module	F	Alarm
Diagnostic of	electronic		-	
242	Software incompatible	<ol> <li>Check software</li> <li>Flash or change main electronic module</li> </ol>	F	Alarm
252	Modules incompatible	<ol> <li>Check if correct electronic module is plugged</li> <li>Replace electronic module</li> </ol>	F	Alarm
261	Electronic modules	<ol> <li>Restart device</li> <li>Check electronic modules</li> <li>Change I/O module or main electronics</li> </ol>	F	Alarm
262	Module connection	<ol> <li>Check module connections</li> <li>Replace electronic modules</li> </ol>	F	Alarm
270	Main electronics failure	Replace main electronics	F	Alarm
271	Main electronics failure	<ol> <li>Restart device</li> <li>Change main electronic module</li> </ol>	F	Alarm
272	Main electronics failure	Restart device	F	Alarm
272	Main electronics failure	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
273	Main electronics failure	<ol> <li>Emergency operation via display</li> <li>Change main electronics</li> </ol>	F	Alarm
275	I/O module failure	<ol> <li>Restart device</li> <li>Change I/O module</li> </ol>	F	Alarm
276	I/O module faulty	<ol> <li>Restart device</li> <li>Change I/O module</li> </ol>	F	Alarm
282	Data storage	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
283	Memory content	<ol> <li>Transfer data or reset device</li> <li>Contact service</li> </ol>	F	Alarm
284	Detector SW update in progress	Firmware update active, please wait!	F	Alarm
311	Electronics failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
333	System recovery required	HW change detected System configuration recovery required Go to menu on device and perform recovery	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]	
334	System recovery failure	HW changed, system recovery failure. Return to factory	F	Alarm	
381	Displacer distance invalid	<ol> <li>Calibrate sensor</li> <li>Restart device</li> <li>Replace sensor electronics</li> </ol>	F	Alarm	
382	Sensor communication	<ol> <li>Check connection of sensor electronics</li> <li>Restart device</li> <li>Replace sensor electronics</li> </ol>	F	Alarm	
Diagnostic of o	configuration		1		
400	AIO simulation output	Deactivate simulation AIO output	С	Warning	
401	DIO simulation output	Deactivate simulation DIO output	С	Warning	
403	Calibration AIO	1. Restart device 2. Change I/O module	F	Alarm	
404	Calibration AIP	1. Restart device 2. Change I/O module	F	Alarm	
405	COMM timeout DIO 1 to 8	<ol> <li>Check wiring</li> <li>Change I/O module</li> </ol>	F	Alarm	
406	IOM offline	<ol> <li>Check wiring</li> <li>Change I/O module</li> </ol>	F	Alarm	
407	COMM timeout AIO 1 to 2	<ol> <li>Check wiring</li> <li>Change I/O module</li> </ol>	F	Alarm	
408	Invalid range AIO 1 to 2	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning	
409	RTD temp out of range 1 to 2	<ol> <li>Check electronic modules</li> <li>Change I/O or main electronic module</li> </ol>	С	Warning	
410	Data transfer	<ol> <li>Retry data transfer</li> <li>Check connection</li> </ol>	F	Alarm	
411	Hart device 1 to 15 has malfunction	<ol> <li>Check HART device</li> <li>Change HART device</li> </ol>	F	Alarm <sup>1)</sup>	
412	Processing download	Download active, please wait	С	Warning	
413	NMT 1 to 15: element is open or short	<ol> <li>Check NMT wiring connection</li> <li>Replace NMT</li> </ol>	С	Warning	
415	Hart device 1 to 15 offline	<ol> <li>Check HART device</li> <li>Change HART device</li> </ol>	С	Warning	
416	Warning occurred for HART device 1 to 15	Check connected HART device	М	Warning	
434	Real time clock defective	Replace main electronics	С	Warning	
436	Date/time incorrect	Check date and time settings.	М	Warning	
437	Configuration incompatible	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm	
438	Dataset	<ol> <li>Check dataset file</li> <li>Check device configuration</li> <li>Up- and download new configuration</li> </ol>	М	Warning	
441	AIO 1 to 2 current output alarm	<ol> <li>Check process</li> <li>Check current output settings</li> </ol>	F	Alarm	
	AIO 1 to 2 current output	<ol> <li>Check dataset file</li> <li>Check device configuration</li> <li>Up- and download new configuration</li> <li>Check process</li> </ol>			

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
442	AIO 1 to 2 current output warning	<ol> <li>Check process</li> <li>Check current output settings</li> </ol>	С	Warning
443	AIO 1 to 2 Input not HART compatible	Change PV source or AIO input source.	С	Warning
484	Failure mode simulation	Deactivate simulation	С	Alarm
495	Diagnostic event simulation	Deactivate simulation	С	Warning
500	AIO C1-3 source no longer valid	Change input source	С	Warning
501	Level source no longer valid	Change input source	С	Warning
502	GP1 source no longer valid	Change input source	С	Warning
503	GP2 source no longer valid	Change input source	С	Warning
504	GP3 source no longer valid	Change input source	С	Warning
505	GP4 source no longer valid	Change input source	С	Warning
506	Water level source no longer valid	Change input source	С	Warning
507	Liquid temp source no longer valid	Change input source	С	Warning
508	Vapor temperatur source no longer valid	Change input source	С	Warning
509	Air temperature source no longer valid	Change input source	С	Warning
510	P1 source no longer valid	Change input source	С	Warning
511	P2 source no longer valid	Change input source	С	Warning
512	P3 source no longer valid	Change input source	С	Warning
513	Upper density source no longer valid	Change input source	С	Warning
514	Middle density source no longer valid	Change input source	С	Warning
515	Lower density source no longer valid	Change input source	С	Warning
516	Gauge command source no longer valid	Change input source	С	Warning
517	Gauge status source no longer valid	Change input source	С	Warning
518	Average density source no longer valid	Change input source	С	Warning
519	Upper interface source no longer valid	Change input source	С	Warning
520	Lower interface source no longer valid	Change input source	С	Warning
521	Bottom level source no longer valid	Change input source	С	Warning
522	Displacer position source not valid	Change input source	С	Warning
523	Distance source no longer valid	Change input source	С	Warning
524	Balance flag source no longer valid	Change input source	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
525	One time cmd source no longer valid	Change input source	С	Warning
526	Alarm 1 to 4 source no longer valid	Change input source	С	Warning
527	AIO B1-3 source no longer valid	Change input source	С	Warning
528	CTSh	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
529	HTG	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
530	HTMS	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
531	HyTD correction value	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
532	HART output: PV source not valid	Change input source	С	Warning
533	HART output: SV source not valid	Change input source	С	Warning
534	HART output: QV source not valid	Change input source	С	Warning
535	HART output: TV source not valid	Change input source	С	Warning
536	Display: source no longer valid	Change input source	С	Warning
537	Trend: source no longer valid	Change input source	С	Warning
538	HART output: PV mA source not valid	Change input source	С	Warning
539	Modbus 1-4 SP source invalid	Set valid SP input selector	С	Warning
540	V1 1-4 SP source invalid	Set valid SP input selector	С	Warning
541	Modbus 1-4 alarm source invalid	Set valid alarm input selector	С	Warning
542	V1 1-4 alarm source invalid	Set valid alarm input selector	С	Warning
543	Modbus 1-4 analog source invalid	Set valid analog input selector	С	Warning
544	V1 1-4 analog source invalid	Set valid analog input selector	С	Warning
545	Modbus 1-4 user value source invalid	Set valid user value input selector	С	Warning
546	Modbus 1-4 discrete value source invalid	Set valid user discrete input selector	С	Warning
547	V1 1-4 user value source invalid	Set valid user value input selector	С	Warning
548	V1 1-4 discrete value source invalid	Set valid user discrete input selector	С	Warning
549	Modbus 1-4 percent source invalid	Set valid percentage input selector	С	Warning
550	V1 1-4 percent source invalid	Set valid percentage input selector	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
560	Calibration mandatory	<ol> <li>Carry out weight calibration</li> <li>Carry out reference calibration</li> <li>Carry out drum calibration</li> </ol>	С	Alarm
564	DIO B1-2 source no longer valid	Change input source	С	Warning
565	DIO B3-4 source not valid	Change input source	С	Warning
566	DIO C1-2 source no longer valid	Change input source	С	Warning
567	DIO C3-4 source no longer valid	Change input source	С	Warning
568	DIO D1-2 source no longer valid	Change input source	С	Warning
569	DIO D3-4 source no longer valid	Change input source	С	Warning
571	CLG	1. Check device configuration.	С	Alarm
571	CLG	2. Check wiring.	С	Warning
572	LRC 1 to 2 not possible	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
586	Record map	Recording of mapping please wait	С	Warning
598	DIO A1-2 source no longer valid	Change input source	С	Warning
599	DIO A3-4 source no longer valid	Change input source	С	Warning
Diagnostic of J	process			
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check device configuration.	F	Alarm
803	Current loop 1 to 2	2. Check wiring.	М	Warning
803	Current loop	_	С	Warning
825	System temperature	1. Check ambient temperature	S	Warning
825	System temperature	2. Check process temperature	F	Alarm
826	Sensor temperature	1. Check ambient temperature	S	Warning
826	Sensor temperature	2. Check process temperature	F	Alarm
844	Process value out of specification	<ol> <li>Check process value</li> <li>Check application</li> </ol>	S	Warning <sup>1)</sup>
844	Process value out of specification	- 3. Check sensor	S	Warning
901	Level held	Normal state while Dip Freeze is turned on, otherwise check configuration	S	Warning
903	Current loop 1 to 2	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	F	Alarm
904	Digital output 1 to 8	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
941	Echo lost	<ol> <li>Check process value</li> <li>Check application</li> <li>Check sensor</li> </ol>	S	Warning
942	In safety distance	<ol> <li>Check level</li> <li>Check safety distance</li> <li>Reset self holding</li> </ol>	S	Warning
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostics	Maintain your diagnostic event	М	Warning
961	Alarm 1 to 4 HighHigh	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
962	Alarm 1 to 4 High	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
963	Alarm 1 to 4 Low	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
964	Alarm 1 to 4 LowLow	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
965	Alarm 1 to 4 HighHigh	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
966	Alarm 1 to 4 High	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
967	Alarm 1 to 4 Low	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
968	Alarm 1 to 4 LowLow	1. Check alarm source     F       2. Check configuration settings		Alarm
970	Overtension	<ol> <li>Check displacer and process conditions</li> <li>Release overtension</li> </ol>	С	Alarm
971	Undertension	Check displacer and process.	С	Alarm
974	LRC 1 to 2 failed	<ol> <li>Check process value</li> <li>Check application</li> <li>Check sensor</li> </ol>	С	Warning

1) Diagnostic behavior can be changed.



The parameters No.941, 942, and 943 are only used for NMR8x and NRF81.

# 11.5 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics  $\rightarrow$  Diagnostic list

#### Calling up and closing the remedial measures

1. Press E.

└ The message for the remedial measures for the selected diagnostic event opens.

**2.** Press - + + simultaneously.

└ The message about the remedial measures closes.

# 11.6 Reset measuring device

To reset the device to a defined state use the Device reset ( $\rightarrow \square 256$ ).

# 11.7 Device information

Information on the device (order code, hardware and software version of the individual modules etc.) can be found in the Device information ( $\rightarrow \textcircled{B} 262$ ).

# 11.8 Firmware history

Date	Software	Modifications	Documentation (NMR81)			
version			Operating Instructions	Description of Parameters	Technical Information	
04.2016	01.00.zz	Original software	BA01450G/00/EN/01.16	GP01068G/00/EN/01.16	TI01252G/00/EN/01.16	
12.2016	01.02.zz	Bugfixes and improvements	BA01450G/00/EN/02.17	GP01068G/00/EN/02.17	TI01252G/00/EN/02.17	
07.2018	01.03.zz	Software update	BA01450G/00/EN/04.18		TI01252G/00/EN/03.18	
05.2020	01.04.zz	Software update	BA01450G/00/EN/05.20		TI01252G/00/EN/04.20	
08.2021	01.05.zz	Software update	BA01450G/00/EN/06.21	GP01068G/00/EN/ 04.22-00	TI01252G/00/EN/05.21	
08.2022	01.06.zz	Software update	BA01450G/00/EN/ 07.22-00		TI01252G/00/EN/06.22-00	
10.2023	01.07.zz	Software update	BA01450G/00/EN/ 08.23-00		TI01252G/00/EN/07.23-00	

# 12 Maintenance

### 12.1 Maintenance tasks

No special maintenance work is required.

### 12.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

# 12.2 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

# 13 Repair

# 13.1 General information on repairs

### 13.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

### 13.1.2 Repairs to Ex-approved devices

### **WARNING**

**Incorrect repair can compromise electrical safety!** Explosion hazard!

- ► Only specialist personnel or the manufacturer's service team may carry out repairs on Ex-certified devices in accordance with national regulations.
- Relevant standards and national regulations on hazardous areas, safety instructions and certificates must be observed.
- Only use original spare parts from the manufacturer.
- Please note the device designation on the nameplate. Only identical parts may be used as replacements.
- Carry out repairs according to the instructions.
- Only the manufacturer's service team is permitted to modify a certified device and convert it to another certified version.

### 13.1.3 Replacement of a device or electronic module

After a complete device or the electronic mainboard has been replaced, the parameters can be downloaded into the instrument again via FieldCare.

Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.



#### The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset = Restart device. This ensures correct operation of the device after the restore.

# 13.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

# 13.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

# 13.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- Refer to the web page for information: http://www.endress.com/support/return-material
   Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

# 13.5 Disposal


# X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

# 14 Accessories

# 14.1 Device-specific accessories

### 14.1.1 Weather protection cover

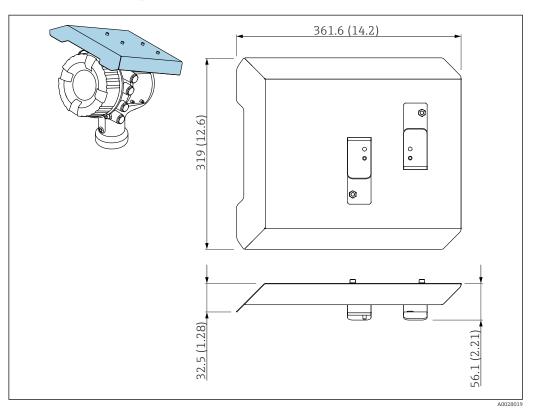


☑ 50 Weather protection cover; dimensions: mm (in)

#### Materials

- Protection cover and mounting brackets Material 316L (1.4404)
- Screws and washers
- Material

A4

- The weather protection cover can be ordered together with the device:
  - Ordering feature 620 "Accessory Enclosed", option PA "Weather Protection Cover") • It can also be ordered as an accessory:
    - Order code: 71292751 (for NMR8x and NRF8x)

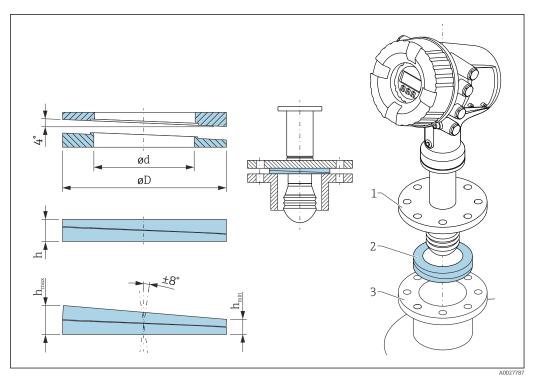

# 14.1.2 Adjustable seal

•  $\blacksquare$  51 Adjustable seal used to align the device by  $\pm 8^{\circ}$ 

P 1)	620 <sup>2)</sup>				
	PS	PT	PU		
OC 3)	71285499	71285501	71285503		
C <sup>4)</sup>	DN50 PN10-40 ASME 2" 150lbs JIS 50A 10K	DN80 PM10-40	ASME 3" 150lbs JIS 80A 10K		
L <sup>5)</sup>	100 mm (3.9 in)	100 mm (3.9 in)	100 mm (3.9 in)		
S <sup>6)</sup>	M14	M14	M14		
M <sup>7)</sup>	FKM	FKM	FKM		
P <sup>8)</sup>		-0.1 to +0.1 bar (-1.45 to +1.45 psi)			
T <sup>9)</sup>		−40 to +80 °C (−40 to +176 °F)			
ØD	105 mm (4.13 in)	142 mm (5.59 in)	133 mm (5.24 in)		
Ød	60 mm (2.36 in)	89 mm (3.5 in)	89 mm (3.5 in)		
h	16.5 mm (0.65 in)	22 mm (0.87 in)	22 mm (0.87 in)		
h <sub>min</sub>	9 mm (0.35 in)	14 mm (0.55 in)	14 mm (0.55 in)		
h <sub>max</sub>	24 mm (0.95 in)	30 mm (1.18 in)	30 mm (1.18 in)		

1) Property

2) Ordering feature 620 "Accessory Enclosed". With this ordering feature the adjustable seal is supplied together with the device.

3) This order code must be used if the adjustable seal is ordered separately.

4) Compatible with

5) Length of screws

6) Size of screws

7) Material

8) Process pressure

9) Process temperature

# 14.2 Communication-specific accessories

### WirelessHART adapter SWA70

- Is used for the wireless connection of field devices
- The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks

For details, see Operating Instructions BA00061S

### Gauge Emulator, Modbus to BPM

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Enraf BPM
- 1 measuring device per Gauge Emulator
- Separate power supply: 100 to 240  $V_{AC}$ , 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

### Gauge Emulator, Modbus to TRL/2

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Saab TRL/2
- 1 measuring device per Gauge Emulator
- Separate power supply: 100 to 240  $V_{AC}$ , 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

# 14.3 Service-specific accessories

#### **Commubox FXA195 HART**

For intrinsically safe HART communication with FieldCare via the USB interface

For details, see "Technical Information" TI00404F


#### **Commubox FXA291**

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop Order number: 51516983

For details, see "Technical Information" TI00405C

### DeviceCare SFE100

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices DeviceCare is available for download at www.software-products.endress.com. You need to register in the Endress+Hauser software portal to download the application.

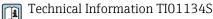

### FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.



Technical Information TI00028S

# 14.4 System components

### RIA15

Compact process display unit with very low voltage drop for universal use to display 4 to 20 mA/HART signals

Technical Information TI01043K

# Tankvision Tank Scanner NXA820 / Tankvision Data Concentrator NXA821 / Tankvision Host Link NXA822

Inventory Management System with completely integrated software for operation via standard web browser

Technical Information TI00419G

# 15 Operating menu

• 🗐 : Navigation path for operating module at the device

- 🗐 : Navigation path for operating tool (e.g. FieldCare)
- 🗟 : Parameter can be locked via software locking

# 15.1 Overview of the operating menu

• This section lists the parameters of the following menus:

- Operation (→ 🗎 122)
- Setup (→ 🗎 133)
- Diagnostics ( $\rightarrow \square 258$ )
- For the **Expert** menu refer to the "Description of Device Parameters" (GP) of the respective device.
- Depending on the device version and parametrization some parameters will not be available in a given situation. For details refer to the "Prerequisite" category in the description of the respective parameter.
- The representation essentially corresponds to the menu in an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.


Navigation	8 8	Operating tool
------------	-----	----------------


Operation		]	→ 🗎 122
	► Level		→ 🗎 123
		Dip Freeze	→ 🗎 123
		Tank level	→ 🗎 123
		Tank Level %	→ 🗎 124
		Tank ullage	→ 🗎 124
		Tank ullage %	→ 🗎 124
		Upper interface level	→ 🗎 124
		Lower interface level	→ 🗎 125
		Water level	→ 🗎 125
		Measured level	→ 🗎 125
		Distance	→ 🗎 125
	► Temperature		→ 🗎 126
		Air temperature	→ 🗎 126
		Liquid temperature	→ 🗎 126

		Vapor temperature		]	→ 🗎 126
		► NMT element va	alues	]	→ 🗎 126
			► Element temper	ature	→ 🗎 127
				Element temperature 1 to 24	→ 🗎 127
			► Element position	1	→ 🗎 127
				Element position 1 to 24	→ 🗎 127
	► Density		]		→ 🗎 128
		Observed density		]	→ 🗎 128
		Observed density te	emperature	]	→ 🗎 128
		Vapor density		]	→ 🗎 128
		Air density		]	→ 🗎 129
		Measured upper de	nsity	]	→ 🗎 129
		Measured middle d	ensity	]	→ 🗎 129
		Measured lower de	nsity	]	→ 🗎 129
	► Pressure				→ 🗎 130
		P1 (bottom)		]	→ 🗎 130
		P3 (top)		]	→ 🗎 130
	► GP values		]		→ 🗎 131
		GP 1 to 4 name		]	→ 🗎 131
		GP Value 1			→ 🗎 131
		GP Value 2			→ 🗎 131
		GP Value 3		-	→ 🗎 131
		GP Value 4		-	→ 🗎 132
🖌 Setup				-	→ 🗎 133
	Device tag		]		→ 🗎 133

Units preset		]		→ 🖺 133
Empty		]		→ 🗎 134
Tank reference heig	ht	]		→ 🗎 134
Tank level		]		→ 🗎 123
Set level				→ 🗎 135
Confirm distance				→ 🗎 135
Present mapping				→ 🗎 136
Mapping end point				→ 🗎 137
Record map		]		→ 🗎 137
Distance		]		→ 🗎 138
Liquid temp source		]		→ 🗎 138
<ul> <li>Advanced setup</li> </ul>		]		→ 🗎 139
- Auvanceu Setup			]	→ 🗎 139
	Locking status			
	User role		_	→ 🗎 139
	Enter access code			→ 🖺 139
	► Input/output		]	→ 🖺 140
		► HART devices		→ 🗎 140
			Number of devices	→ 🗎 140
			► HART Device(s)	→ 🗎 141
			► Forget device	→ 🗎 147
		► Analog IP		→ 🗎 148
			Operating mode	→ 🖺 148
			Thermocouple type	→ 🖺 149
			RTD type	→ 🖺 148
			RTD connection type	→ 🗎 149

	Process value	→ 🖺 150
	Process variable	→ 🗎 150
	0 % value	→ 🗎 150
	100 % value	→ 🗎 151
	Input value	→ 🗎 151
	Minimum probe temperature	→ 🗎 151
	Maximum probe temperature	→ 🗎 152
	Probe position	→ 🗎 152
	Damping factor	→ 🗎 153
	Gauge current	→ 🗎 153
► Analog I/O		→ 🗎 154
	Operating mode	→ 🗎 154
	Current span	→ 🗎 155
	Fixed current	→ 🗎 156
	Analog input source	→ 🗎 156
	Failure mode	→ 🗎 157
	Error value	→ 🗎 158
	Input value	→ 🗎 158
	0 % value	→ 🗎 158
	100 % value	→ 🗎 159
	Input value %	→ 🗎 159
	Output values	→ 🗎 159
	Process variable	→ 🗎 160
	Analog input 0% value	→ 🗎 160
	Analog input 100% value	→ 🗎 160

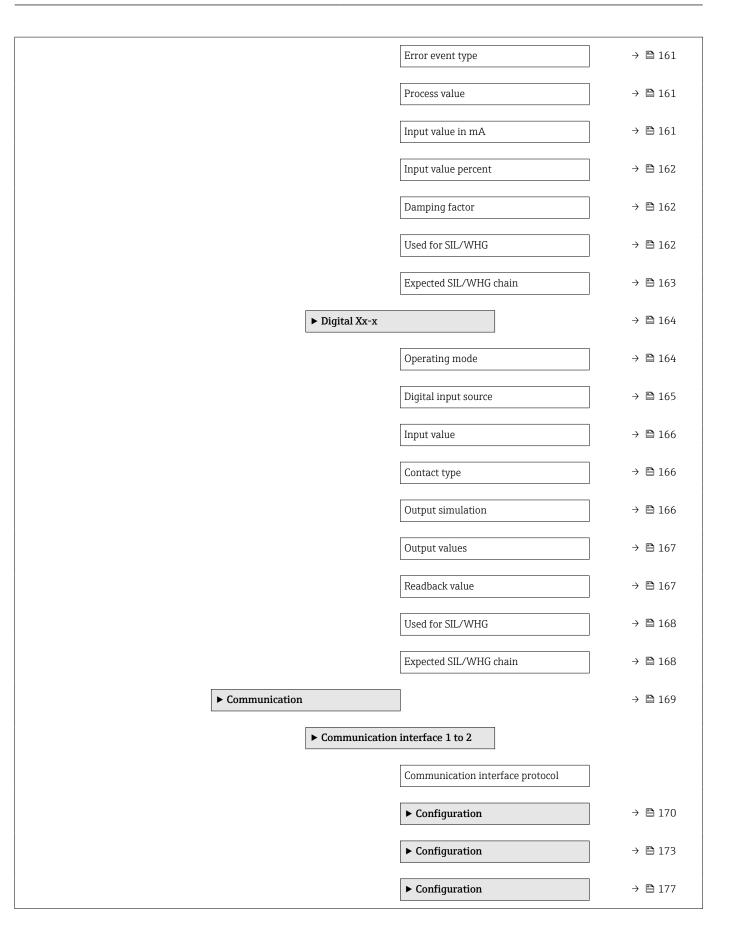

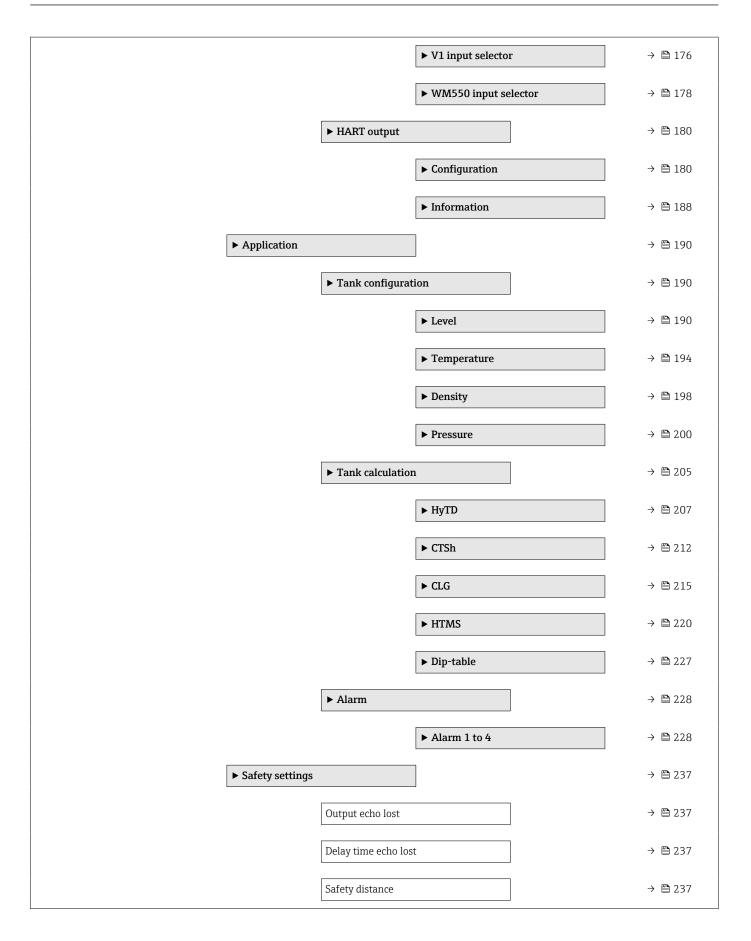

► Sensor config		]	→ 🖺 239
	► Information		→ 🗎 239
		Signal quality	→ 🖺 239
		Absolute echo amplitude	→ 🗎 239
		Relative echo amplitude	→ 🗎 239
		Distance	→ 🗎 138
	► Echo tracking		→ 🗎 241
		Evaluation mode	→ 🗎 241
		History reset	→ 🗎 241
► Display		]	→ 🗎 242
	Language		→ 🗎 242
	Format display		→ 🗎 242
	Value 1 to 4 displa	<i>y</i>	→ 🗎 243
	Decimal places 1 to	4	→ 🗎 244
	Separator		→ 🗎 245
	Number format		→ 🗎 245
	Header		→ 🗎 246
	Header text		→ 🖺 246
	Display interval		→ 🖺 246
	Display damping		→ 🗎 247
	Backlight		→ 🖺 247
	Contrast display		→ 🗎 247
► System units			→ 🗎 249
	Units preset		→ 🖺 133
	Distance unit		→ 🗎 249

		Pressure unit	→ 🖺 250
		Temperature unit	→ 🖺 250
		Density unit	→ 🗎 250
	► Date / time		→ 🗎 252
		Date/time	→ 🖺 252
		Set date	→ 🖺 252
		Year	→ 🖺 252
		Month	→ 🖺 253
		Day	→ 🗎 253
		Hour	→ 🗎 253
		Minute	→ 🗎 254
	► SIL confirmation	n	→ 🗎 255
	► Deactivate SIL/	WHG	→ 🗎 255
	► Administration		→ 🗎 256
		Define access code	→ 🗎 256
		Device reset	→ 🗎 256
♡, Diagnostics			→ 🖺 258
Actual diagnostic	5		→ 🗎 258
Timestamp			→ 🗎 258
Previous diagnost	ics		→ 🗎 258
Timestamp			→ 🖺 259
Operating time fr	om restart		→ 🖺 259
Operating time			→ 🖺 259
Date/time		]	→ 🗎 252

► Diagnostic list		→ 🖺 261
	Diagnostics 1 to 5	→ 🗎 261
	Timestamp 1 to 5	→ 🖺 261
► Device informat	tion	→ 🗎 262
	Device tag	→ 🗎 262
	Serial number	→ 🗎 262
	Firmware version	→ 🖺 262
	Firmware CRC	→ 🖺 263
	Weight and measures configuration CRC	→ 🖺 263
	Device name	→ 🖺 263
	Order code	→ 🗎 263
	Extended order code 1 to 3	→ 🗎 264
► Simulation		→ 🖺 265
	Device alarm simulation	→ 🗎 265
	Diagnostic event simulation	→ 🗎 265
	Simulation distance on	→ 🗎 265
	Simulation distance	→ 🗎 266
	Current output 1 simulation	→ 🗎 266
	Simulation value	→ 🗎 266
► Device check		→ 🗎 268
	Start device check	→ 🗎 268
	Result device check	→ 🗎 268

	Level signal		→ 🗎 268
	Near distance		→ 🗎 269
► LRC			→ 🖺 270
	► LRC 1 to 2		→ 🗎 270
		LRC Mode	→ 🗎 270
		Allowed difference	→ 🖺 270
		Check fail threshold	→ 🗎 271
		Reference level source	→ 🗎 271
		Reference switch source	→ 🗎 272
		Reference switch mode	→ 🖹 272
		Reference level	→ 🗎 272
		Reference switch level	→ 🗎 273
		Reference point level	→ 🗎 273
		Reference switch state	→ 🗎 273
		Start reference measurement	→ 🗎 274
		Check level	→ 🗎 274
		Check status	→ 🖹 274
		Check timestamp	→ 🗎 275

# 15.2 "Operation" menu

The **Operation** menu ( $\rightarrow \implies 122$ ) shows the most important measured values.

Navigation

**Operation** 

Offset standby distance	
Navigation	
Description	Defines the distance from the current position where the displacer waits for the liquid level to rise during offset standby gauge command.
User entry	0 to 999 999.9 mm
Factory setting	500 mm
Additional information	

## 15.2.1 "Level" submenu

*Navigation*  $\square$   $\square$  Operation  $\rightarrow$  Level

Dip Freeze		Â
Navigation		
Description	If activated the level values are frozen and a warning is shown.	
Selection	<ul><li>Off</li><li>On</li></ul>	
Factory setting	Off	
Additional information	This function can be used when performing a manual dipping in the same stilling or nozzle where the radar device is mounted.	well

Tank level		
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Level} \rightarrow \text{Tank} $	level
Description	Shows the distance from the zero surface.	position (tank bottom or datum plate) to the product
Additional information	Read access	Operator
	Write access	-

Operating	menu
-----------	------

Tank Level %			
Navigation			
Description	Shows the level as a percentage of the full measuring range.		
Additional information	Read access		Operator
	Write access		-
Tank ullage			
Navigation		el → Tank	ullage
Description	Shows the remaining en	Shows the remaining empty space in the tank.	
Additional information	Read access		Operator
	Write access		-
Tank ullage %			
Navigation		el → Tank	ullage %
Description	Shows the remaining empty space in percentage related to parameter tank reference height.		
Additional information	Read access		Operator
	Write access		-
Upper interface level			
Navigation			
Description	Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.		
Additional information	Read access		Maintenance
	Write access		-

Lower interface level		
Navigation	Image: Operation $\rightarrow$ Level $\rightarrow$ Lower	r I/F level
	Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.	
Additional information	Read access     Maintenance	
	Write access	-

Water level		
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Level} \rightarrow \text{Wate} $	er level
Description	Shows the bottom water level.	
Additional information	Read access	Operator
	Write access	-

Measured level			
Navigation		l → Measu	ured level
Description	Shows the measured level without any correction from the tank calculations.		
Additional information	Read access Operator		Operator
	Write access		-
Distance			
Navigation			

# **Description** Distance from lower edge of device flange to product surface.

Additional information	Read access	Operator
	Write access	-

# 15.2.2 "Temperature" submenu

Navigation

Air temperature		
Navigation		$\rightarrow$ Air temp.
Description	Shows the air temperature.	
Additional information	Read access	Operator
	Write access	-

Liquid temperature		
Navigation	$\blacksquare$ □ Operation → Temperature	re → Liquid temp.
Description	Shows the average or spot temperature of the measured liquid.	
Additional information	Read access	Operator
	Write access	-

Vapor temperature		
Navigation		$\rightarrow$ Vapor temp.
Description	Shows the measured vapor temperature.	
Additional information	Read access	Operator
	Write access	-

"NMT element values" submenu

This submenu is only visible if a Prothermo NMT is connected.

	Navigation		)perati	on $\rightarrow$ Temperature $\rightarrow$ NMT elem. values
	"Element temperature" submenu			
	Navigation		)perati emp.	on $\rightarrow$ Temperature $\rightarrow$ NMT elem. values $\rightarrow$ Element
Element temperature 1 to 2	4			
Navigation	□ Operation → 1 to 24	Tempera	ature -	→ NMT elem. values → Element temp. → Element temp
Description	Shows the temperature of an element in the NMT.			
Additional information	Iditional information       Read access       Operator         Write access       -         "Element position" submenu         Navigation       □         Operation → Temperature → NMT elem. values → Eleposition			Operator
				-
Element position 1 to 24				
Navigation	□ Operation $\rightarrow$ Temperature $\rightarrow$ NMT elem. values $\rightarrow$ Element position $\rightarrow$ Element pos 1 to 24			

**Description** Shows the position of the selected element in the NMT.

Additional information	Read access	Operator
	Write access	-

# 15.2.3 "Density" submenu

Navigation
------------

□ □ Operation → Density

Observed density		
Navigation		served density
Description	Calculated density of the product.	
Additional information	Read access Operator	
	Write access	-

This value is calculated from different measured variables depending on the selected calculation method.

Observed density temperature		
Navigation		
Description	Corresponding temperature of measured density. Can be used for reference density calculation.	
User interface	Signed floating-point number	
Factory setting	0 °C	

Vapor density			Â
Navigation		→ Vapor density	
Description	Defines the density of the ga	s phase in the tank.	
User entry	0.0 to 500.0 kg/m <sup>3</sup>		
Factory setting	1.2 kg/m <sup>3</sup>		
Additional information	Read access Operator		
	Write access	Maintenance	

Air density			£
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Density} \rightarrow \text{Air} $	r density	
Description	Defines the density of the air sur	rounding the tank.	
User entry	0.0 to 500.0 kg/m <sup>3</sup>		
Factory setting	1.2 kg/m <sup>3</sup>		
Additional information	Read access     Operator		
	Write access	Maintenance	

Measured upper density		
Navigation		eas upper dens.
Description	Shows the density of the upper phase.	
Additional information	Read access     Operator	
	Write access	-

Measured middle density			
Navigation		ensity $\rightarrow$ Meas middle dens	
Description	Density of the middle phase.		
Additional information	Read access Operator		
	Write access	-	

Measured lower density		
Navigation	Image: Boost of the second secon	as lower dens.
Description	Density of the lower phase.	
Additional information	Read access	Maintenance
	Write access	-

# 15.2.4 "Pressure" submenu

P1 (bottom)		
Navigation	$\bigcirc \Box  \text{Operation} \rightarrow \text{Pressure} \rightarrow \text{PI}$	l (bottom)
Description	Shows the pressure at the tank bottom.	
Additional information	Read access Operator	
	Write access	-

P3 (top)		
Navigation	$ \blacksquare \square  \text{Operation} \rightarrow \text{Pressure} \rightarrow \text{F} $	23 (top)
Description	Shows the pressure (P3) at the top transmitter.	
Additional information	Read access	Operator
	Write access	-

### 15.2.5 "GP values" submenu

*Navigation*  $\square \square$  Operation  $\rightarrow$  GP values

GP 1 to 4 name			Â
Navigation		GP 1 name	
Description	Defines the label associated with the respective GP value.		
User entry	Character string comprising numbers, letters and special characters (15)		
Factory setting	GP Value 1		
Additional information	Read access	Operator	
	Write access	Maintenance	

GP Value 1			
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{GP values} \rightarrow \text{GP Value 1} $		
Description	Displays the value that will be used as general purpose value.		
Additional information	Read access     Operator		
	Write access	-	

GP Value 2			
Navigation			
Description	Displays the value that will be used as general purpose value.		
Additional information	Read access Operator		
	Write access	-	

GP Value 3	
Navigation	Image: Boost of the second secon
Description	Displays the value that will be used as general purpose value.

Additional information	Read access	Operator
	Write access	-

GP Value 4			
Navigation			
Description	Displays the value that will be used as general purpose value.		
Additional information	Read access     Operator		
	Write access	-	

#### "Setup" menu 15.3

Navigation

🗟 🛛 Setup

Device tag			
Navigation	Image: Box Setup → Device tag		
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.		
User entry	Character string comprising numbers, letters and special characters (32)		
Factory setting	NMR8x		
Additional information	Read access Operator		
	Write access	Maintenance	

Units preset			
Navigation	Image: Barbon Setup → Units pr	eset	
Description	Defines a set of units fo	Defines a set of units for length, pressure and temperature.	
Selection	<ul> <li>mm, bar, °C</li> <li>m, bar, °C</li> <li>mm, PSI, °C</li> <li>ft, PSI, °F</li> <li>ft-in-16, PSI, °F</li> <li>ft-in-8, PSI, °F</li> <li>Customer value</li> </ul>		
Factory setting	mm, bar, °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

respective unit:
Distance unit (→ 
<sup>△</sup> 249)

Empty			Ê
Navigation			
Description	Distance from reference point to	Distance from reference point to zero position (tank bottom or datum plate).	
User entry	0 to 10 000 000 mm		
Factory setting	Dependent on the device version		
Additional information	Read access	Operator	
	Write access	Maintenance	

The reference point is the lower edge of the device flange.

- After changing the **Empty** parameter (→ 
   <sup>™</sup> 134), the **Table mode** parameter (→ 
   <sup>™</sup> 227) is automatically set to **Disable**.
  - If Empty (→ 
     <sup>134</sup>) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
  - The dip table values are not affected by a change of the **Empty** parameter ( $\rightarrow \cong 134$ ).

Tank reference height		<u> </u>
Navigation	Image: Betup → Tank ref height	
Description	Defines the distance from the dip datum plate).	ping reference point to the zero position (tank bottom or
User entry	0 to 10 000 000 mm	
Factory setting	Dependent on the device version	
Additional information	Read access	Operator
	Write access	Maintenance

Tank level		
Navigation		
Description	Shows the distance from the zero position (tank bottom or datum plate) to the product surface.	
Additional information	Read access	Operator
	Write access	-

Set level		8	
Navigation			
Description		If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.	
User entry	0 to 10 000 000 mm		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

The device adjusts the **Empty** parameter ( $\rightarrow \triangleq 134$ ) according to the entered value, such that the measured level will match the actual level.

- After the change of the **Empty** parameter ( $\rightarrow \triangleq 134$ ), the **Table mode** parameter ( $\rightarrow \triangleq 227$ ) is automatically set to **Disable**.
  - If **Empty** has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
  - The dip table values are not affected by a change of the **Empty** parameter.

Confirm distance			Ê
Navigation	□ Setup $\rightarrow$ Confirm distant	nce	
Description	Specify, whether the measured distance matches the real distance. Depending on the selection the device automatically sets the range of mapping.		
Selection	<ul> <li>Distance ok</li> <li>Distance unknown</li> <li>Distance too small<sup>*</sup></li> <li>Distance too big<sup>*</sup></li> <li>Tank empty</li> <li>Manual map</li> <li>Factory map</li> </ul>		
Factory setting	Distance unknown		
Additional information	Read access	Operator	
	Write access	Maintenance	

<sup>\*</sup> Visibility depends on order options or device settings

#### Meaning of the options

Distance ok

To be selected if the measured distance matches the actual distance. The device performs a mapping.

Distance unknown

To be selected if the actual distance is unknown. No mapping will be recorded in this case.

Distance too small <sup>5)</sup>

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter ( $\rightarrow \implies 135$ ). The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **"Distance ok" option**.

Distance too big<sup>5)</sup>

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter ( $\rightarrow \square$  135). The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **"Distance ok" option**.

Tank empty

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Empty** parameter ( $\rightarrow \square 134$ ).

Manual map

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter ( $\Rightarrow \square 137$ ). In this case it is not necessary to confirm the distance.

Factory map

To be selected if the present mapping curve (if one exists) is to be deleted. The factory map is used, instead.

When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.

If the teaching procedure with the **Distance too small** or **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

#### **Present mapping**

Navigation

 $\square$  Setup  $\rightarrow$  Present mapping

**Description** Present end of mapping.

Additional information

Read access	Operator
Write access	-

<sup>5)</sup> Only available for "Evaluation mode ( $\rightarrow \square 241$ )" = "Short time history"

Mapping end point				
Navigation	□ Setup $\rightarrow$ Map. end p	oint		
Prerequisite	Confirm distance ( 🗕 🗎 1	Confirm distance ( > 🗎 135) = Manual map		
DescriptionDefines up to which distance the new mapping has to be recorded.Remark: Make sure the level signal is not covered by the mapping.				
<b>User entry</b> 100 to 999 999.9 mm				
Factory setting	100 mm			
Additional information	Read access	Operator		
	Write access	Maintenance		

Record map		Â	
Navigation	□ Setup $\rightarrow$ Record map		
Prerequisite	Confirm distance ( > 🗎 135) = Manual map		
Description	Controls the recording of the map.		
Selection  • No • Record map • Overlay map • Factory map • Delete partial map			
Factory setting	No		
Additional information	Read access	Operator	

#### Meaning of the options

No

- The map is not recorded.
- Record map

Write access

The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing  $\square$ .

Maintenance

Recalculate map

Used internally by the software. Initiates a new calculation of the map from the new data points.

#### Overlay map

The new mapping curve is generated by overlaying the old and the current envelope curves.

A

Factory map

The factory map stored in the ROM of the device is used.

- Delete partial map The mapping curve is deleted up to Mapping end point (→ 
  <sup>□</sup> 137).
  Stop overlay
- Stops the overlaying of the map.

Distance		
Navigation	■ $ = $ Setup $ \rightarrow $ Distance	
<b>Description</b> Distance from lower edge of device fla		ce flange to product surface.
Additional information	Read access	Operator
	Write access	-

### Liquid temp source

Navigation			
Description	Defines source from which the liquid temperature is obtained.		
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 temperature</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>		
Factory setting	Manual value		
Additional information	Read access	Operator	
	Write access	Maintenance	

# 15.3.1 "Advanced setup" submenu

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup

Locking status				
Navigation	Image: Barbon Setup → Advanced setup -	> Locking status		
Description	Indicates the type of locking.			
	"Hardware locked" (HW) The device is locked by the "WP" s switch into the OFF position.	witch on the main electronics module. To unlock, set the		
	"WHG locked" (SW) Unlock the device by entering the appropriate access code in "Enter access code".			
	"SIL locked" (SW) Unlock the device by entering the appropriate access code in "Enter access code".			
	"Temporarily locked" (SW) The device is temporarily locked by processes in the device (e.g. data upload/download, reset). The device will automatically be unlocked after completion of these processes.			
Additional information	Read access	Operator		
	Write access	Operator -		

	Setup $\rightarrow$ Advanced setup $\rightarrow$	→ User role
Shows the access authorization to the parameters via the operating tool		
Read	access	Operator
Write access		-
	Show Read	Shows the access authorization to Read access

Enter access code				
Navigation		→ Ent. access code		
Description	Enter access code to disable write	e protection of parameters.		
Additional information	Read access	Operator		
	Write access	Operator		

	"Input/output" submenu		
	Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output
	"HART devices" subn	nenu	
	Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output $\rightarrow$ HART devices
Number of devices			
Navigation	Image: Betup → Adv	anced se	etup $\rightarrow$ Input/output $\rightarrow$ HART devices $\rightarrow$ Number devices
Description	Shows the number of devices on the HART bus.		
Additional information	Read access		Operator
	Write access		-

	There is a <b>HART Device(s)</b> submenu for each HART slave device found on the HART loop.			
	Navigation		$\rightarrow$ Advanced setup $\rightarrow$ Input/output $\rightarrow$ HART devices RT Device(s)	
Device name				
Navigation	Image: Box of the sector o	-	→ Input/output → HART devices → HART Device(s)	
Description	Shows the name of	the transmit	er.	
Additional information	Read access		Operator	
	Write access		-	
Polling address				
Navigation	Image: Setup → Adv → Polling ad		→ Input/output → HART devices → HART Device(s)	
Description	Shows the polling a	address of the	transmitter.	
Additional information	Read access		Operator	
	Write access		-	
Device tag				
Navigation	■ Setup $\rightarrow$ Adv $\rightarrow$ Device tag		→ Input/output → HART devices → HART Device(s)	

"HART Device(s)" submenu

**Description** Shows the device tag of the transmitter.

Read access	Operator
Write access	-

Additional information

Operating mode		٦	
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Operating mode		
Prerequisite	Not available if the HART device is a Prothermo NMT.		
Description	Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled from the connected HART Device.		
Selection	<ul> <li>PV only</li> <li>PV,SV,TV &amp; QV</li> <li>Level <sup>6)</sup></li> <li>Measured level <sup>6)</sup></li> </ul>		
Factory setting	PV,SV,TV & QV		
Additional information	Read access	Operator	
	Write access	Maintenance	

Communication status		
Navigation	<ul> <li>B ⊆ Setup → Advanced setu</li> <li>→ Comm. status</li> </ul>	p → Input/output → HART devices → HART Device(s)
Description	Shows the operating status of the transmitter.	
User interface	<ul><li>Operating normally</li><li>Device offline</li></ul>	
Additional information	Read access	Operator
	Write access	-

Status signal	
Navigation	<ul> <li>Getup → Advanced setup → Input/output → HART devices → HART Device(s)</li> <li>→ Status signal</li> </ul>
Description	Indicates the current device status in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.
User interface	<ul> <li>OK</li> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> </ul>

<sup>6)</sup> only visible if the connected device is a Micropilot

•	Maintenance required (M)
•	No effect (N)

---

Factory setting

#blank# ( HART PV - designation dependent on device)			
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#		
Description	Shows the first HART variable (PV).		
Additional information	Read a	ccess	Operator
	Write	access	-

#blank# (HART SV - designation dependent on device)		
Navigation	Image: Betup → Advanced setup → #blank#	→ Input/output → HART devices → HART Device(s)
Prerequisite	For HART devices other than NM	AT: Operating mode (→ 🗎 142) = PV,SV,TV & QV
Description	Shows the second HART variable (SV).	
Additional information	Read access	Operator
	Write access	-

#blank# (HART TV - designation dependent on device)			
Navigation	<b>9</b> -	Setup → Advanced setup → → #blank#	• Input/output → HART devices → HART Device(s)
Prerequisite	For HART devices other than NMT: <b>Operating mode (→ 🗎 142) = PV,SV,TV &amp; QV</b>		
Description	Shows the third HART variable (TV).		
Additional information	Read	access	Operator
	Write	access	-

## Operating menu

#blank# (HART QV - designation dependent on device)		
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#	
Prerequisite	For HART devices other than NMT: <b>Operating mode (→ 🗎 142) = PV,SV,TV &amp; QV</b>	
Description	Shows the fourth HART variable (QV).	
Additional information	Read access	Operator
	Write access	-
Output pressure		<u>َ</u>
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output pressure	
Prerequisite	Not available for Micropilot S FN these cases the measured variab	/IR5xx, Prothermo NMT53x and Prothermo NMT8x. In les are allocated automatically.

**Description** Defines which HART variable is the pressure.

Write access

Description	Defines which hard variable is th	ie pressure.
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	
Factory setting	No value	
Additional information	Read access	Operator

Maintenance

Output density	8
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output density
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.
Description	Defines which HART variable is the density.
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>

Factory setting	No value		
Additional information	Read access	Operator	
	Write access	Maintenance	
Output temperature			Â
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output temp.		
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.		L
Description	Defines which HART variable is the temperature.		
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>		

Factory setting No value

Additional information	Read access	Operator
	Write access	Maintenance

Output vapor temperature			æ
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output vapor tmp		
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.		
Description	Defines which HART variable is the vapor temperature.		
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>		
Factory setting	No value		
Additional information	Read access	Operator	
	Write access	Maintenance	

Output level		Â
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output level	
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	
Description	Defines which HART variable is the level.	
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	
Factory setting	No value	
Additional information	Read access	Operator
	Write access	Maintenance

#### "Forget device" wizard


Read access		Maintenance	
1 This subme	nu is only	visible if Number of devices ( $\rightarrow \square 140$ ) $\geq 1$ .	
Navigation	0 2	Setup → Advanced setup → Input/output → HART devices → Forget device	

Forget device		<u>A</u>
Navigation	Image: Setup → Advanced setup device	$\rightarrow$ Input/output $\rightarrow$ HART devices $\rightarrow$ Forget device $\rightarrow$ Forget
Description	With this function an offline de	vice can be deleted from the device list.
Selection	<ul> <li>HART Device 1</li> <li>HART Device 2</li> <li>HART Device 3</li> <li>HART Device 4</li> <li>HART Device 5</li> <li>HART Device 6</li> <li>HART Device 6</li> <li>HART Device 7</li> <li>HART Device 8</li> <li>HART Device 9</li> <li>HART Device 10</li> <li>HART Device 11</li> <li>HART Device 12</li> <li>HART Device 13</li> <li>HART Device 14</li> <li>HART Device 15</li> <li>None</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

<sup>\*</sup> Visibility depends on order options or device settings

#### "Analog IP" submenu

There is a **Analog IP** submenu for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to  $\rightarrow \cong 154$ .

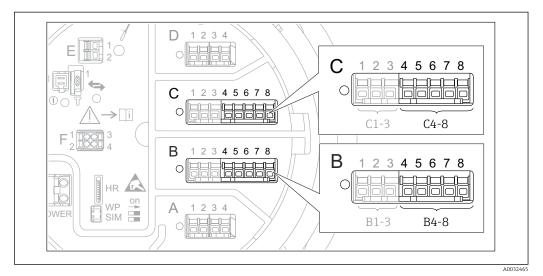

☑ 52 Terminals for the "Analog IP" submenu ("B4-8" or "C4-8", respectively)

*Navigation*  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog IP

Operating mode			A
Navigation	Image: Beta and	$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Operating mode	
Description	Defines the operating mode of t	Defines the operating mode of the analog input.	
Selection	<ul><li>Disabled</li><li>RTD temperature input</li><li>Gauge power supply</li></ul>		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

RTD type		
Navigation		
Prerequisite	Operating mode (→ 🗎 148) = RTD temperature input	
Description	Defines the type of the connected RTD.	

Selection	<ul> <li>Cu50 (w=1.428, GOST)</li> <li>Cu53 (w=1.426, GOST)</li> <li>Cu90; 0°C (w=1.4274, GOST)</li> <li>Cu100; 25°C (w=1.4274, GOST)</li> <li>Cu100; 0°C(w=1.4274, GOST)</li> <li>Pt46 (w=1.391, GOST)</li> <li>Pt50 (w=1.391, GOST)</li> <li>Pt100(385) (a=0.00385, IEC79)</li> <li>Pt100(391) (a=0.00385, IEC79)</li> <li>Pt100(385) (a=0.00385, IEC79)</li> <li>Pt500(385) (a=0.00385, IEC79)</li> <li>Pt1000(385) (a=0.00385, IEC79)</li> <li>Pt1000(385) (a=0.00617, DIN49)</li> <li>Ni1000(617) (a=0.00617, DIN49)</li> <li>Ni1000(617) (a=0.00617, DIN49)</li> <li>Ni1000(617) (a=0.00617, DIN49)</li> <li>Cu100(385) (a=0.00385, IEC751)</li> </ul>	51) dian) 604) 51) 751) 3760) 3760) 43760)
Factory setting	Pt100(385) (a=0.00385, IEC751)	
Additional information	Read access     Operator	
	Write access     Maintenance	

Thermocouple type		æ
Navigation	Input/output → Analog IP → Thermocouple typ Setup → Advanced setup → Input/output → Analog IP → Thermocouple typ	
Description	Defines the type of the connected thermocouple.	
Selection	<ul> <li>N type</li> <li>B type</li> <li>C type</li> <li>D type</li> <li>J type</li> <li>K type</li> <li>L type</li> <li>L GOST type</li> <li>R type</li> <li>S type</li> <li>T type</li> <li>U type</li> </ul>	
Factory setting	N type	

RTD connection type		ß
Navigation	$\textcircled{B} \square Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Analog IP \rightarrow RTD connect type$	
Prerequisite	Operating mode (→ 🗎 148) = RTD temperature input	
Description	Defines the connection type of the RTD.	

# Selection • 4 wire RTD connection • 2 wire RTD connection • 3 wire RTD connection Factory setting 4 wire RTD connection Additional information Read access Operator

al information	Read access	Operator
	Write access	Maintenance

Process value				
Navigation	□ □ Setup → Advanced setup → Input/output → Analog IP → Process value			
Prerequisite	Operating mode (→ 🗎 148) ≠	Operating mode ( $\rightarrow \triangleq 148$ ) $\neq$ Disabled		
Description	Shows the measured value received via the analog input.			
Additional information	Read access Operator			
	Write access	-		

Process variable			
Navigation	Image: Barbon Setup → Advanced setup	$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Process variable	
Prerequisite	Operating mode ( $\Rightarrow \triangleq 148$ ) $\neq$ RTD temperature input		
Description	Determines type of measured v	Determines type of measured value.	
Selection	<ul> <li>Level linearized</li> <li>Temperature</li> <li>Pressure</li> <li>Density</li> </ul>		
Factory setting	Level linearized		
Additional information	Read access	Operator	
	Write access	Maintenance	

0 % value		
Navigation		
Prerequisite	Operating mode (→ 🗎 148) = 420mA input	

Description	Defines the value represented by a current of 4mA.	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

100 % value			
Navigation	■ Setup → Advanced setup -	→ Input/output → Analog IP → 100 % value	
Prerequisite	Operating mode ( > 🗎 148) =	420mA input	
Description	Defines the value represented by	Defines the value represented by a current of 20mA.	
User entry	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Input value			
Navigation	$ \blacksquare \Box  \text{Setup} \rightarrow \text{Advanced setup} $	→ Input/output → Analog IP → Input value	
Prerequisite	Operating mode ( $\rightarrow \triangleq 148$ ) $\neq$ Disabled		
Description	Shows the value received via the analog input.		
Additional information	Read access Operator		
	Write access	-	

Minimum probe temperatu	re	Ê
Navigation	Image: Setup → Advanced setup → Input/output → Analog IP → Min. probe temp	
Prerequisite	Operating mode ( Ə 🗎 148) = RTD temperature input	
Description	Minimum approved temperature of the connected probe. If the temperature falls below this value, the W&M status will be "invalid".	

 User entry
 -213 to 927 °C

 Factory setting
 -100 °C

Additional information	Read access	Operator
	Write access	Maintenance

Maximum probe temperature			
Navigation	■ $ = $ Setup $ \rightarrow  $ Advanced setup $ = $	→ Input/output → Analog IP → Max. probe temp	
Prerequisite	Operating mode (→ 🗎 148) = I	Operating mode (→ 🗎 148) = RTD temperature input	
Description	Maximum approved temperature of the connected probe. If the temperature rises above this value, the W&M status will be "invalid".		
User entry	–213 to 927 °C		
Factory setting	250 °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

Probe position		ඕ
Navigation	■ $\square$ Setup → Advanced setup →	• Input/output $\rightarrow$ Analog IP $\rightarrow$ Probe position
Prerequisite	Operating mode (→ 🗎 148) = F	RTD temperature input
Description	Position of the temperature probe, measured from zero position (tank bottom or datum plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of the temperature value will be "invalid".	
User entry	-5000 to 30000 mm	
Factory setting	5000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Navigation

# **Damping factor** æ Navigation $\blacksquare$ Setup → Advanced setup → Input/output → Analog IP → Damping factor Prerequisite Operating mode ( $\rightarrow \triangleq 148$ ) $\neq$ Disabled Description Defines the damping constant (in seconds). User entry 0 to 999.9 s Factory setting 0 s Additional information Read access Operator Write access Maintenance Gauge current

# Prerequisite Operating mode ( $\rightarrow \cong 148$ ) = Gauge power supply


**Description** Shows the current on the power supply line for the connected device.

Additional information	Read access	Operator
	Write access	-

 $\blacksquare$  Setup → Advanced setup → Input/output → Analog IP → Gauge current

#### "Analog I/O" submenu

There is a **Analog I/O** submenu for each Analog I/O module of the device. This submenu refers to terminals 1 to 3 of this module (an analog input or output). For terminals 4 to 8 (always an analog input) refer to  $\rightarrow \cong$  148.

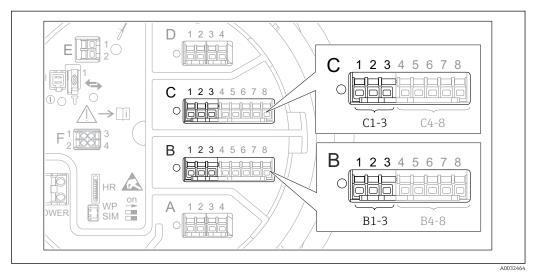

☑ 53 Terminals for the "Analog I/O" submenu ("B1-3" or "C1-3", respectively)

Navigation  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O

Operating mode			
Navigation	□ $□$ Setup → Advanced setup	→ Input/output → Analog I/O → Operating mode	
Description	Defines the operating mode of t	he analog I/O module.	
Selection	<ul> <li>Disabled</li> <li>420mA input</li> <li>HART master+420mA input</li> <li>HART master</li> <li>420mA output</li> <li>HART slave +420mA output</li> </ul>		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### Meaning of the options

Operating mode (→ 🗎 154)	Direction of signal	Type of signal
Disabled	-	-
420mA input	Input from 1 external device	Analog (420mA)
HART master+420mA input	Input from 1 external device	<ul><li>Analog (420mA)</li><li>HART</li></ul>
HART master	Input from up to 6 external devices	HART

Operating mode (→ 🗎 154)	Direction of signal	Type of signal
420mA output	Output to higher-level unit	Analog (420mA)
HART slave +420mA output	Output to higher-level unit	<ul><li>Analog (420mA)</li><li>HART</li></ul>

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode	Terminals of the I/O module		'O module
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+

In the active mode the following conditions must be met:

- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

Current span	Current	span
--------------	---------	------

Navigation Prerequisite		• Input/output → Analog I/O → Current span 154) ≠ <b>Disabled</b> option or <b>HART master</b> option
Description	Defines the current range for the	measured value transmission.
Selection	<ul> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>420 mA (420.5 mA)</li> <li>Fixed value*</li> </ul>	
Factory setting	420 mA NE (3.820.5 mA)	
Additional information	Read access	Operator

Meaning of the options

Write access

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA (420.5 mA)	4 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
420 mA NE (3.820.5 mA)	3.8 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA

Maintenance

A

<sup>\*</sup> Visibility depends on order options or device settings

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA US (3.920.8 mA)	3.9 to 20.8 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.0 mA
Fixed current	Constant current, defined in the <b>Fixed current</b> parameter ( $\rightarrow \square$ 156).				

In the case of an error, the output current assumes the value defined in the Failure mode parameter ( $\Rightarrow \cong 157$ ).

Fixed current			
Navigation	Image: Barbon Setup → Advanced setup	$\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Fixed current	
Prerequisite	Current span (→ 🗎 155) = Fix	ed current	
Description	Defines the fixed output current		
User entry	4 to 22.5 mA		
Factory setting	4 mA		
Additional information	Read access	Operator	
	Write access	Maintenance	

Analog input source		£
Navigation	Image: Setup → Advanced setup → Input/output → Analog I/O → Analog source	
Prerequisite	<ul> <li>Operating mode (→          154) = 420mA output or HART slave +420mA output     </li> <li>Current span (→          155) ≠ Fixed current     </li> </ul>	
Description	Defines the process variable transmitted via the AIO.	
Selection	<ul> <li>None</li> <li>Tank level</li> <li>Tank level %</li> <li>Tank ullage</li> <li>Tank ullage %</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> <li>Vapor temperature</li> </ul>	

- Air temperature
- Observed density value
- Average profile density <sup>7)</sup>
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value<sup>7)</sup>
- AIO B1-3 value mA<sup>7)</sup>
- AIO C1-3 value<sup>7)</sup>
- AIO C1-3 value mA<sup>7)</sup>
- AIP B4-8 value <sup>7)</sup>
- AIP C4-8 value<sup>7)</sup>
- Element temperature 1 ... 24<sup>7</sup>)
- HART device 1...15 PV<sup>7</sup>
- HART device 1 ... 15 PV mA<sup>7)</sup>
- HART device 1 ... 15 PV %<sup>7</sup>
- HART device 1 ... 15 SV<sup>7</sup>)
- HART device 1 ... 15 TV<sup>7)</sup>
- HART device 1 ... 15 QV<sup>7)</sup>

#### **Factory setting**

Tank level

Additional information	Read access	Operator
	Write access	Maintenance

Failure mode			Â
Navigation	Image: Betup → Advance	ed setup $\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Failure mode	
Prerequisite	Operating mode ( > 🗎	154) = 420mA output or HART slave +420mA output	
Description	Defines the output beha	avior in case of an error.	
Selection	<ul> <li>Min.</li> <li>Max.</li> <li>Last valid value</li> <li>Actual value</li> <li>Defined value</li> </ul>		
Factory setting	Max.		
Additional information	Read access	Operator	
	Write access	Maintenance	

<sup>7)</sup> Visibility depends on order options or device settings

Error value			æ
Navigation	Image: Boost Setup → Advanced setup	$\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Error value	
Prerequisite	Failure mode (→ 🗎 157) = De	efined value	
Description	Defines the output value in cas	e of an error.	
User entry	3.4 to 22.6 mA		
Factory setting	22 mA		
Additional information	Read access	Operator	
	Write access	Maintenance	

Input value			
Navigation	■ $\square$ Setup → Advanced setup ·	→ Input/output → Analog I/O → Input value	
Prerequisite	<ul> <li>Operating mode (→          <sup>1</sup> 154) = 420mA output or HART slave +420mA output</li> <li>Current span (→          <sup>1</sup> 155) ≠ Fixed current</li> </ul>		
Description	Shows the input value of the ana	log I/O module.	
Additional information	Read access Operator		
	Write access	-	

0 % value			æ
Navigation	■ $\square$ Setup → Advanced setup –	→ Input/output → Analog I/O → 0 % value	
Prerequisite	<ul> <li>Operating mode (→</li></ul>		
Description	Value corresponding to an output current of 0% (4mA).		
User entry	Signed floating-point number		
Factory setting	0 Unitless		
Additional information	Read access Operator		
	Write access	Maintenance	

100 % value			
Navigation	Image: Barbon Setup → Advanced setup →	Input/output $\rightarrow$ Analog I/O $\rightarrow$ 100 % value	
Prerequisite	<ul> <li>Operating mode (→          <sup>1</sup> 154) = 420mA output or HART slave +420mA output</li> <li>Current span (→          <sup>1</sup> 155) ≠ Fixed current</li> </ul>		
Description	Value corresponding to an output current of 100% (20mA).		
User entry	Signed floating-point number		
Factory setting	0 Unitless		
Additional information	Read access	Operator	
	Write access	Maintenance	

Input value %			
Navigation	$\blacksquare$ = Setup → Advanced s	setup $\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Input value %	
Prerequisite	<ul> <li>Operating mode (→</li></ul>		
Description	Shows the output value as	a percentage of the complete 420mA range.	
Additional information	Read access Operator		
	Write access	-	

Output value			
Navigation	Image: Below Boundary Setup → Advanced setup -	→ Input/output → Analog I/O → Output value	
Prerequisite	Operating mode (→ 🗎 154) = 4	Operating mode (→ 🗎 154) = 420mA output or HART slave +420mA output	
Description	Shows the output value in mA.		
Additional information	Read access	Operator	
	Write access	-	

A

ß

#### Process variable Navigation $\blacksquare$ Setup → Advanced setup → Input/output → Analog I/O → Process variable Prerequisite Operating mode (→ 🗎 154) = 4..20mA input or HART master+4..20mA input Description Defines the type of measuring variable. Selection Level linearized Temperature Pressure Density Factory setting Level linearized Additional information Read access Operator Write access Maintenance

#### Analog input 0% value

Navigation	Setup → Advanced setup → Input/output → Analog I/O → AI 0% value		
Prerequisite	Operating mode ( $\Rightarrow \square 154$ ) = 420mA input or HART master+420mA input		
Description	Value corresponding to an input current of 0% (4mA).		
User entry	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Analog input 100% value		
Navigation		
Prerequisite	Operating mode ( $\Rightarrow \square 154$ ) = 420mA input or HART master+420mA input	
Description	Value corresponding to an input current of 100% (20mA).	
User entry	Signed floating-point number	
Factory setting	0 mm	

Additional information	Read access	Operator	
	Write access	Maintenance	
	L	·	
Error event type		8	
Navigation	Setup → Advanced setup -	→ Input/output → Analog I/O → Error event type	
Prerequisite	<b>Operating mode (</b> $\rightarrow \cong$ 154) $\neq$ <b>Disabled</b> or <b>HART master</b>		
Description	Defines the type of event messages and the analog I/O module.	ge (alarm/warning) in case of an error or output out of	
Selection	<ul><li>None</li><li>Warning</li><li>Alarm</li></ul>		
Factory setting	Warning		
Additional information	Read access	Operator	
	Write access	Maintenance	

Process value		
Navigation	■ $\square$ Setup → Advanced set	etup $\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Process value
Prerequisite	Operating mode (→ 🗎 154) = 420mA input or HART master+420mA input	
Description	Shows the input value scale	d to customer units.
Additional information	Read access Operator	
	Write access	-

Input value in mA		
Navigation	Image: Betup → Advanced setup →	Input/output $\rightarrow$ Analog I/O $\rightarrow$ Input val. in mA
	On anatin a mada (	
Prerequisite	Operating mode ( $\rightarrow \equiv 154$ ) = 4	20mA input or HART master+420mA input
Description	Shows the input value in mA.	
Additional information	Read access	Operator
	Write access	-

# Input value percentNavigation $\blacksquare \blacksquare$ Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Input value [%]PrerequisiteOperating mode ( $\rightarrow \blacksquare$ 154) = 4..20mA input or HART master+4..20mA inputDescriptionShows the input value as a percentage of the complete 4...20mA current range.Additional informationRead accessOperatorWrite access-

Damping factor			
Navigation	Image: Setup → Advanced setup	→ Input/output → Analog I/O → Damping factor	
Prerequisite	Operating mode (→ 🗎 154) ≠	Disabled or HART master	
Description	Defines the damping constant (in seconds).		
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	


Used for SIL/WHG			a
Navigation	Image: Below Boundary Setup → Advanced setup →	→ Input/output → Analog I/O → Used for SIL/WHG	
Prerequisite	<ul> <li>Operating mode (→</li></ul>		
Description	Determines whether the discrete I/O module is in SIL/WHG mode.		
Selection	<ul><li>Enabled</li><li>Disabled</li></ul>		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

Expected SIL/WHG chain		
Navigation	$ \blacksquare \Box Setup \rightarrow Advanced setup \rightarrow $	Input/output $\rightarrow$ Analog I/O $\rightarrow$ SIL/WHG chain
-	<ul> <li>Operating mode (→</li></ul>	
Additional information	Read access	Operator
	Write access	-

#### "Digital Xx-x" submenu

In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. A1-2, for example, denotes terminals 1 and 2 of slot A. The same is valid for slots B, C and D if they contain a Digital IO module.

In this document, Xx-x designates any of these submenus. The structure of all these submenus is the same.

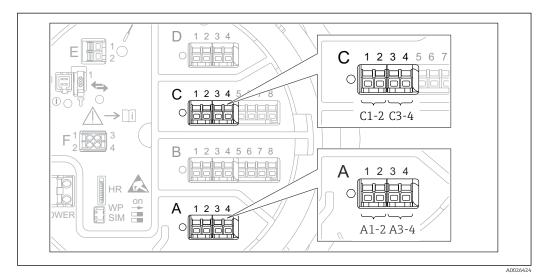


■ 54 Designation of the digital inputs or outputs (examples)

Navigation	8 2	Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output $\rightarrow$ Digital X:	х-х

Operating mode		
Navigation	Image: Boundary Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode Image: Boundary Setup → Input/output → Digital Xx-x → Operating mode	
Description	Defines the operating mode of the discrete I/O module.	
Selection	<ul> <li>Disabled</li> <li>Output passive</li> <li>Input passive</li> <li>Input active</li> </ul>	
Factory setting	Disabled	

#### Additional information

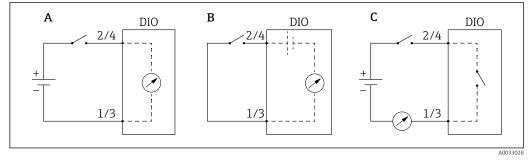

- 55 Operating modes of the Digital I/O module
- A Input passive
- B Input active
- C Output passive

Digital input source	
Navigation Prerequisite	Input/output → Digital Xx-x → Digital source          Operating mode (→        164) = Output passive
Description	Defines which device state is indicated by the digital output.
Selection	<ul> <li>None</li> <li>Alarm x any</li> <li>Alarm x High</li> <li>Alarm x HighHigh</li> <li>Alarm x High or HighHigh</li> <li>Alarm x Low</li> <li>Alarm x LowLow</li> <li>Alarm x Low or LowLow</li> <li>Digital Xx-x</li> <li>Primary Modbus x</li> <li>Secondary Modbus x</li> </ul>
Factory setting	None
Additional information	<ul> <li>Meaning of the options</li> <li>Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow</li> <li>The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the Alarm 1 to 4 submenus.</li> <li>Digital Xx-x<sup>8)</sup></li> <li>The digital signal present at the digital input Xx-x is passed through to the digital output.</li> <li>Modbus A1-4 Discrete x</li> <li>Modbus B1-4 Discrete x</li> <li>Modbus C1-4 Discrete x</li> <li>Modbus D1-4 Discrete x</li> <li>The digital value written by the Modbus Master device to the Modbus discrete x parameter <sup>9)</sup> is passed to the digital output. For details refer to Special Documentation SD02066G.</li> </ul>

<sup>8)</sup> Only present if "Operating mode ( $\rightarrow \square 164$ )" = "Input passive" or "Input active" for the respective Digital I/O module.

<sup>9)</sup> Expert  $\rightarrow$  Communication  $\rightarrow$  Modbus Xx-x  $\rightarrow$  Modbus discrete x


Input value			
Navigation	Image: Setup → Advance	ed setup $\rightarrow$ Input/output $\rightarrow$ Digital Xx-x $\rightarrow$ Input value	
Prerequisite	Operating mode ( > 🗎	Operating mode (→ 🗎 164) = "Input passive" option or "Input active" option	
Description	Shows the digital input	Shows the digital input value.	
Additional information	Read access	Operator	
	Write access	-	

Contact type		
Navigation		
Prerequisite	Operating mode ( $\rightarrow \cong 164$ ) $\neq$ Disabled	
Description	Determines the switching behavior of the input or output.	
Selection	<ul><li>Normally open</li><li>Normally closed</li></ul>	
Factory setting	Normally open	

Output simulation		
NT 1 11		

Navigation	$\textcircled{B} \boxminus Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Output sim$	
Prerequisite	Operating mode (→ 🗎 164) = Output passive	
Description	Sets the output to a specific simulated value.	
Selection	<ul> <li>Disable</li> <li>Simulating active</li> <li>Simulating inactive</li> <li>Fault 1</li> <li>Fault 2</li> </ul>	
Factory setting	Disable	
Additional information	Read access	Operator
	Write access	Maintenance

The digital output consists of two relays connected in series:

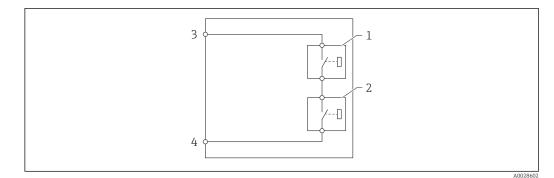

🛃 56 The two relays of a digital output

1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open



The Fault 1 and Fault 2 options can be used to check the correct switching behavior of the two relays.

Output value		
Navigation	Image: Below a setup → Advanced setup -	→ Input/output → Digital Xx-x → Output values
Prerequisite	Operating mode (→ 🗎 164) = Output passive	
Description	Shows the digital output value.	
Additional information	Read access	Operator
	Write access	-

Readback value	
Navigation	$\textcircled{B} \boxminus Setup \rightarrow Advanced setup \rightarrow Input/output \rightarrow Digital Xx-x \rightarrow Readback value$
Prerequisite	Operating mode ( $\rightarrow \square$ 164) = Output passive
Description	Shows the value read back from the output.


Additional information	Read access	Operator
	Write access	-

#### Used for SIL/WHG Ê Navigation $\blacksquare$ Setup → Advanced setup → Input/output → Digital Xx-x → Used for SIL/WHG ■ Operating mode (→ 🗎 164) = Output passive Prerequisite • The device has a SIL certificate. Description Determines whether the discrete I/O module is in SIL/WHG mode. Selection Enabled Disabled Disabled **Factory setting** Additional information Read access Operator Write access Maintenance

Expected SIL/WHG chain			
Navigation	Image: Betup → Advance	ed setup $\rightarrow$ Input/output $\rightarrow$ Digital C3-4 $\rightarrow$ SIL/WHG chain	
Prerequisite	Operating mode (→ 🗎 164) = Output passive		
Additional information	Read access	Service	
	Write access	-	

#### "Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "**X1-4**" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

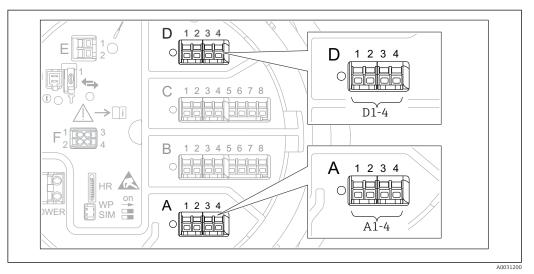

E 57 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication

"Modbus X1-4", "V1 X1-4" and "WM550 X1-4" submenu

This submenu is only present for devices with **MODBUS** and/or **V1** and/or **"WM550" option** communication interface. There is one submenu of this type for each communication interface.

Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ Modbus X1-4
Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ V1 X1-4
Navigation	8 2	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ WM550 X1-4

Communication interface protocol			
Navigation	Setup → Advanced setup → Communication → Modbus X1-4 / V1 X1-4 / WM550 X1-4 → Commu I/F protoc		
Description	Shows the type of communication protocol.		
Additional information	Read access	Operator	
	Write access	-	

"Configuration" submenu

This submenu is only present for devices with a **MODBUS** communication interface.

Navigation

 $\label{eq:setup} \fbox{ Setup } \rightarrow \texttt{Advanced setup} \rightarrow \texttt{Communication} \rightarrow \texttt{Modbus X1-4} \\ \rightarrow \texttt{Configuration}$ 

Baudrate			Ê
Navigation	In the setup → Advanced set In the set → Baudrate	tup $\rightarrow$ Communication $\rightarrow$ Modbus X1-4 $\rightarrow$ Configuration	
Prerequisite	Communication interface p	protocol (→ 🗎 169) = MODBUS	
Description	Defines the baud rate of the	communication.	
Selection	<ul> <li>600 BAUD</li> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD *</li> <li>19200 BAUD *</li> </ul>		
Factory setting	9600 BAUD		
Additional information	Read access	Operator	
	Write access	Maintenance	

Navigation	Image: Below of the setup → Advanced setup → Parity	Communication $\rightarrow$ Modbus X1-4 $\rightarrow$ Configuration
Prerequisite	Communication interface proto	col (→ 🗎 169) = MODBUS
Description	Defines the parity of the Modbus	communication.
Selection	<ul> <li>Odd</li> <li>Even</li> <li>None / 1 stop bit</li> <li>None / 2 stop bits</li> </ul>	
Factory setting	None / 1 stop bit	
Additional information	Read access	Operator
	Write access	Maintenance

Visibility depends on order options or device settings

Modbus address			
Navigation	Image: Betup → Advanced setup → Device ID	$\rightarrow$ Communication $\rightarrow$ Modbus X1-4 $\rightarrow$ Configuration	
Prerequisite	Communication interface prot	ocol (→ 🗎 169) = MODBUS	
Description	Defines the Modbus address of t	he device.	
User entry	1 to 247		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Float swap mode			
Navigation	<ul> <li>Image: Setup → Advanced setu</li> <li>→ Float swap mode</li> </ul>	p → Communication → Modbus X1-4 → Configuration	
Prerequisite	Communication interface pr	otocol ( > 🗎 169) = MODBUS	
Description	Sets the format of how the flo	ating point value is transferred on Modbus.	
Selection	<ul> <li>Normal 3-2-1-0</li> <li>Swap 0-1-2-3</li> <li>WW Swap 1-0-3-2</li> <li>WW Swap 2-3-0-1</li> </ul>		
Factory setting	Swap 0-1-2-3		
Additional information	Read access	Operator	
	Write access	Maintenance	

Bus termination	8
Navigation	$\blacksquare$ Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Bus termination
Prerequisite	Communication interface protocol ( $\rightarrow \cong 169$ ) = MODBUS
Description	Activates or deactivates the bus termination at the device. Should only be activated on the last device in a loop.
Selection	<ul><li>Off</li><li>On</li></ul>

## Factory setting

#### Off

Additional information

Read access		Operator
Write access	5	Maintenance

"Configuration" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation 🛛 🗐 🖾

Setup → Advanced setup → Communication → V1 X1-4
→ Configuration

Communication interface p	Communication interface protocol variant		
Navigation	Image: Setup → Advanced setup → Advanced setup → variant	→ Communication → V1 X1-4 → Configuration → Protocol	
Description	Determines which variant of the	V1 protocol is used.	
User interface	<ul> <li>None</li> <li>V1 *</li> </ul>		
Factory setting	None		
Additional information	Read access	Operator	
	Write access	Maintenance	

V1 address			Ê
Navigation	Image: Setup → Advanced setup - address	→ Communication → V1 X1-4 → Configuration → V1	
Prerequisite	Communication interface proto	ocol variant (→ 🗎 173) = V1	
Description	Identifier of the device for the VI	communication.	
User entry	0 to 99		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

<sup>\*</sup> Visibility depends on order options or device settings

V1 address			Â
Navigation	Image: Setup → Advanced setup - address	→ Communication → V1 X1-4 → Configuration → V1	
Prerequisite	Communication interface proto	ocol variant (→ 🗎 173)	
Description	Identifier of the previous device	for V1 communication.	
User entry	0 to 255		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Level mapping		8
Navigation	Image: Setup → Advanced setup mapping	→ Communication → V1 X1-4 → Configuration → Level
Prerequisite	Communication interface prot	ocol (→ 🗎 169) = V1
Description	Determines the transmittable ra	nge of levels.
Selection	■ +ve ■ +ve & -ve	
Factory setting	+ve	
Additional information	Read access	Operator
	Write access	Maintenance

In V1, the level is always represented by a number in the range from 0 to 999999. This number corresponds to a level as follows:

"Level mapping" = "+ve"

Number	Corresponding level
0	0.0 mm
9999999	99 999.9 mm

#### "Level mapping" = "+ve & -ve"

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm

Number	Corresponding level
500 00 1	-0.1 mm
999 999	-49 999.9 mm

Line impedance				æ
Navigation	0 2	Setup → Advanced setup → impedance	Communication $\rightarrow$ V1 X1-4 $\rightarrow$ Configuration $\rightarrow$ Line	
Prerequisite	Comm	nunication interface proto	col (→ 🗎 169) = V1	
Description	Adjus	ts the impedance of the con	nmunication line.	
User entry	0 to 1	5		
Factory setting	15			
Additional information	Read a	access	Operator	
	Write	access	Maintenance	

The line impedance affects the voltage difference between a logical 0 and a logical 1 on the message of the device to the bus. The default setting is suitable for most applications.

"V1 input selector" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation

 $\blacksquare$  Setup → Advanced setup → Communication → V1 X1-4 → V1 input select.

Alarm 1 input source		۵
Navigation	Image: Setup → Advanced se input src	tup $\rightarrow$ Communication $\rightarrow$ V1 X1-4 $\rightarrow$ V1 input select. $\rightarrow$ Alarm1
Description	Determines which discrete v	alue will be transmitted as V1 alarm 1 status.
Selection	<ul> <li>None</li> <li>Alarm 1-4 any</li> <li>Alarm 1-4 HighHigh</li> <li>Alarm 1-4 High or HighHi</li> <li>Alarm 1-4 High</li> <li>Alarm 1-4 Low</li> <li>Alarm 1-4 Low or LowLow</li> <li>Alarm 1-4 LowLow</li> </ul>	-
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Alarm 2 input source		
Navigation	Image: Setup → Advanced setup - input src	→ Communication → V1 X1-4 → V1 input select. → Alarm2
Description	Determines which discrete value	will be transmitted as V1 alarm 2 status.
Selection	<ul> <li>None</li> <li>Alarm 1-4 any</li> <li>Alarm 1-4 HighHigh</li> <li>Alarm 1-4 High or HighHigh</li> <li>Alarm 1-4 High</li> <li>Alarm 1-4 Low</li> <li>Alarm 1-4 Low or LowLow</li> <li>Alarm 1-4 LowLow</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Value percent selector		Â
Navigation	Image: Setup → Advance % select	ed setup $\rightarrow$ Communication $\rightarrow$ V1 X1-4 $\rightarrow$ V1 input select. $\rightarrow$ Value
Description	Selects which value sha	ll be transmitted as a $0100\%$ value in the V1 Z0/Z1 message.
Selection	<ul> <li>None</li> <li>Tank level %</li> <li>Tank ullage %</li> <li>AIO B1-3 value % *</li> <li>AIO C1-3 value % *</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

This submenu is interface.	s only pres	sent for devices with a <b>"WM550" option</b> communication
Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ WM550 X1-4 $\rightarrow$ Configuration

Baudrate			
Navigation	<ul> <li>B ⊆ Setup → Advanced setup -</li> <li>→ Baudrate</li> </ul>	→ Communication → WM550 X1-4 → Configuration	
Prerequisite	Communication interface proto	ocol (→ 🗎 169) = "WM550" option	
Description	Defines the baud rate of the WN	550 communication.	
Selection	<ul> <li>600 BAUD</li> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> </ul>		
Factory setting	2400 BAUD		
Additional information	Read access	Operator	
	Write access	Maintenance	

<sup>\*</sup> Visibility depends on order options or device settings

Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → Configuration → WM550 address
Description	Describes the WM550 address of the device.
User entry	0 to 63
Factory setting	1
Software ID	6
Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → Configuration → Software ID
Prerequisite	Communication interface protocol ( $\rightarrow \triangleq 169$ ) = "WM550" option
Description	Defines content for WM550 Task 32.
	Detailed information on content for WM550 Task 32, Special Documentation SD02567G.
User entry	0 to 9 999
Factory setting	2 000
	"WM550 input selector" submenu
	This submenu is only present for devices with a <b>"WM550" option</b> communication interface.
	Navigation $\Box$ Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ WM550 X1-4

Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → WM550 inp select → Discrete 1select
Description	Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.
Selection	<ul> <li>None</li> <li>Balance flag optionVisibility depends on order options or device settings</li> <li>Alarm 14 any</li> <li>Alarm 14 HighHigh</li> </ul>

A

**Discrete 1 selector** 

- Alarm 1...4 High or HighHigh Alarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

#### Factory setting

# None

#### Additional information

Read access	Operator
Write access	Maintenance

A

"HART output" submenu						
ightarrow Advanced setup $ ightarrow$ Communication $ ightarrow$ HART output						
"Configuration" submenu						
ightarrow Advanced setup $ ightarrow$ Communication $ ightarrow$ HART output nfiguration						

## System polling address

Navigation	<ul> <li>Getup → Advanced setup -</li> <li>→ Polling address</li> </ul>	→ Communication → HART output → Configuration	
Description	Device address for HART communication.		
User entry	0 to 63		
Factory setting	15		
Additional information	Read access	Operator	
	Write access	Maintenance	

No. of preambles		8	
Navigation	Setup → Advanced setup of preambles	$\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration $\rightarrow$ No.	
Description	Defines the number of preambles in the HART telegram.		
User entry	5 to 20		
Factory setting	5		
Additional information	Read access	Operator	
	Write access	Maintenance	

PV source			
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → PV source		
Description	Decides, if the PV configuration is according to an analog output (HART slave) or customized (in case of HART tunneling only).		

Selection	<ul> <li>AIO B1-3 *</li> <li>AIO C1-3 *</li> <li>Custom</li> </ul>	
Factory setting	Custom	
Additional information	Read access	Maintenance
	Write access	Maintenance

Assign PV		A
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign PV	
Prerequisite	PV source ( $\rightarrow \square$ 180) = Custom	
Description	Assign a measured variable to the primary dynamic variable (PV).	
	Additional information: The assigned measured variable is also used by the current output.	
Selection	<ul> <li>None</li> <li>Tank level</li> <li>Tank ullage</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> <li>Vapor temperature</li> <li>Air temperature</li> <li>Observed density value</li> <li>Average profile density</li> <li>Upper density</li> <li>Middle density</li> <li>Lower density</li> <li>P1 (bottom)</li> <li>P2 (middle)</li> <li>P3 (top)</li> <li>GP 1 value</li> <li>GP 2 value</li> <li>GP 4 value</li> </ul>	
Factory setting	Tank level	

Factory setting

Tank level

<sup>\*</sup> Visibility depends on order options or device settings

## Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

0 % value		8
Navigation	Image: Setup → Advanced setup - value	→ Communication → HART output → Configuration → 0 %
Prerequisite	PV source = Custom	
Description	0% value of the primary variable (PV).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access Operator	
	Write access	Maintenance

100 % value		8
Navigation	Image: Setup → Advanced setup - % value	→ Communication → HART output → Configuration → 100
Prerequisite	PV source = Custom	
Description	100% value of the primary variable (PV).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

PV mA selector		
Navigation	0 -	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration $\rightarrow$ PV mA selector

## Prerequisite

Description	Assigns a current to the primary HART variable (PV).	
Selection	<ul> <li>None</li> <li>AIO B1-3 value mA<sup>*</sup></li> <li>AIO C1-3 value mA<sup>*</sup></li> </ul>	
Factory setting	None	
Additional information	Read access Operator	
	Write access	Maintenance

Primary variable (PV)		
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Primary var (PV)	
Description	Shows the current measured value of the primary dynamic variable (PV)	
Additional information	Read access Operator	
	Write access	-

Percent of range			
Navigation	■ ■ Setup → Advanced setup → Communication → HART output → Configuration → Percent of range		
Description	Shows the value of the primary variable (PV) as a percentage of the defined 0% to 100% range.		
Additional information	Read access	Operator	
	Write access	-	
Assign SV			
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign SV		
Description	Assign a measured variable to the second dynamic variable (SV).		
Selection	<ul><li>None</li><li>Tank level</li><li>Tank ullage</li></ul>		

<sup>\*</sup> Visibility depends on order options or device settings

- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

**Factory setting** 

Liquid temperature

## Additional information

[	Read access	Operator
	Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Secondary variable (SV)		
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Second.var(SV)	
Prerequisite	Assign SV ( $\rightarrow \square$ 183) $\neq$ None	
Description	Shows the current measured value of the secondary dynamic variable (SV)	
Additional information	Read access Operator	
	Write access	-

Assign TV		
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign TV	
Description	Assign a measured variable	e to the tertiary dynamic variable (TV).
Selection	<ul> <li>None</li> <li>Tank level</li> <li>Tank ullage</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> <li>Vapor temperature</li> <li>Air temperature</li> <li>Observed density value</li> <li>Average profile density</li> <li>Upper density</li> <li>Middle density</li> <li>Lower density</li> <li>P1 (bottom)</li> <li>P2 (middle)</li> <li>P3 (top)</li> <li>GP 1 value</li> <li>GP 2 value</li> <li>GP 4 value</li> </ul>	
Factory setting	Water level	
Additional information	Read access	Operator
	Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Tertiary variable (TV)	
Navigation	$\blacksquare$ Setup → Advanced setup → Communication → HART output → Configuration → Tertiary var(TV)
Prerequisite	Assign TV ( $\rightarrow \triangleq 185$ ) $\neq$ None
Description	Shows the current measured value of the tertiary (third) dynamic variable (TV)

Additional information	Read access	Operator	
	Write access	-	
Assign QV			•
Navigation	<ul> <li>B ⊇ Setup → Advanced setup →</li> <li>Assign QV</li> </ul>	$\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration	
Description	Assign a measured variable to th	e quaternary dynamic variable (QV).	
Selection	<ul> <li>None</li> <li>Tank level</li> <li>Tank ullage</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> <li>Vapor temperature</li> <li>Air temperature</li> <li>Observed density value</li> <li>Average profile density</li> <li>Upper density</li> <li>Lower density</li> <li>P1 (bottom)</li> <li>P2 (middle)</li> <li>P3 (top)</li> <li>GP 1 value</li> <li>GP 2 value</li> <li>GP 4 value</li> </ul>		
Factory setting	Observed density value		

Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Quaternary variable (QV)			
Navigation	8 8	Setup → Advanced setup → → Quaterna.var(QV)	$\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration
Prerequisite	Assig	n QV (→ 🗎 186) ≠ None	
Description	Show	s the current measured valu	e of the quaternary (fourth) dynamic variable (QV)
Additional information	Read	access	Operator
	Write	access	-

#### "Information" submenu

Navigation

 $\label{eq:setup} \fboxspace{-1mu} \begin{array}{l} \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Communication} \rightarrow \mbox{HART output} \\ \rightarrow \mbox{Information} \end{array}$ 

HART short tag		Â
Navigation	Image: Setup → Advanced setup - short tag	→ Communication → HART output → Information → HART
Description	Defines the short tag for the mea	isuring point.
	Maximum length: 8 characters Allowed characters: A-Z, 0-9, cer	tain special characters
User entry	Character string comprising num	bers, letters and special characters (8)
Factory setting	NMR8x	
Additional information	Read access	Operator
	Write access	Maintenance

Device tag		Ŕ
Navigation	Image Setup → Advanced setup - tag	→ Communication → HART output → Information → Device
Description	Enter a unique name for the mea plant.	suring point to identify the device quickly within the
User entry	Character string comprising num	bers, letters and special characters (32)
Factory setting	NMR8x	
Additional information	Read access	Operator
	Write access	Maintenance

HART descriptor	8
Navigation	Setup → Advanced setup → Communication → HART output → Information → HART descriptor
Description	Enter description for the measuring point
User entry	Character string comprising numbers, letters and special characters (16)

Factory setting	NMR8x		
Additional information	Read access	Operator	
	Write access	Maintenance	
		<u>ක</u>	
HART message		<u> </u>	
Navigation	Image: Setup → Advanced setup message	$\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Information $\rightarrow$ HART	
Description	Use this function to define a HART message which is sent via the HART protocol when requested by the master.		
	Maximum length: 32 characters Allowed characters: A-Z, 0-9, certain special characters		
User entry	Character string comprising nur	nbers, letters and special characters (32)	
Factory setting	NMR8x		
Additional information	Read access	Operator	
	Write access	Maintenance	

HART date code		8
Navigation	Image: Setup → Advanced setup - date code	→ Communication → HART output → Information → HART
Description	Enter date of the last configurati	on change. Use this format yyyy-mm-dd
User entry	Character string comprising num	bers, letters and special characters (10)
Factory setting	2009-07-20	
Additional information	Read access	Operator
	Write access	Maintenance

#### "Application" submenu

Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application
"Tank configuration	" subm	enu
Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank config
-		
"Level" submenu		
Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level

Empty			£
Navigation	Image: Beta and	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Empty	
Description	Distance from reference point to	o zero position (tank bottom or datum plate).	
User entry	0 to 10 000 000 mm		
Factory setting	Dependent on the device version	1	
Additional information	Read access	Operator	
	Write access	Maintenance	

The reference point is the lower edge of the device flange.

- After changing the **Empty** parameter (→ 
   <sup>™</sup> 134), the **Table mode** parameter (→ 
   <sup>™</sup> 227) is automatically set to **Disable**.
  - If Empty (→ 
     <sup>(⇒)</sup> 134) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
  - The dip table values are not affected by a change of the **Empty** parameter ( $\rightarrow \cong 134$ ).

Tank reference height	
-----------------------	--

æ

Navigation	$\textcircled{B} \boxminus \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Tank config} \rightarrow \text{Level} \rightarrow \text{Tank ref height}$
Description	Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).
User entry	0 to 10 000 000 mm
Factory setting	Dependent on the device version

Additional information	Read access	Operator	
	Write access	Maintenance	
	White access		
Tank level			
Navigation	□ Setup $\rightarrow$ Advance	red setup → Application → Tank config → Level → Tank level	
Description	Shows the distance fro surface.	m the zero position (tank bottom or datum plate) to the product	
Additional information	Read access	Operator	
	Write access	-	
Set level		۵	
Navigation		ced setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Set level	
Description	If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.		
User entry	0 to 10 000 000 mm		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	
	<ul> <li>The device adjusts the Empty parameter (→  134) according to the entered value, such that the measured level will match the actual level.</li> <li>After the change of the Empty parameter (→  134), the Table mode parameter (→  227) is automatically set to Disable.</li> <li>If Empty has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.</li> <li>The dip table values are not affected by a change of the Empty parameter.</li> </ul>		
Water level source		8	
Navigation	Image: Betup → Advance	red setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Water level src	

**Description** Defines the source of the bottom water level.

Selection

- Manual valueBottom level
  - HART device 1 ... 15 level

	<ul> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>
Factory setting	Manual value
Additional information	Read access

Additional information	Read access	Operator
	Write access	Maintenance

Manual water level		Ŕ
Navigation	Image: Bearing of the setup of the setu	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Man. water level
Prerequisite	Water level source (→ 🗎 191)	= Manual value
Description	Defines the manual value of the	bottom water level.
User entry	-2000 to 5000 mm	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Water level		
Navigation		$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Water level
Description	Shows the bottom water level.	
Additional information	Read access	Operator
	Write access	-

Blocking distance		A
Navigation	$\textcircled{B} \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
Description	No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.	
User entry	Positive floating-point number	
Factory setting	800 mm	

#### Additional information

Read access	Operator
Write access	Maintenance

"Temperature" submenu

Read access			Maintenance
Navigation	9 8	-	$\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank config perature

Liquid temp source		6
Navigation	Image: Setup → Advanced setup - source	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Liq temp
Description	Defines source from which the liquid temperature is obtained.	
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 temperatu</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	ıre
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

Manual liquid temperature		
Navigation	$\textcircled{B} \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
Prerequisite	Liquid temp source ( ightarrow 138) = Manual value	
Description	Defines the manual value of the liquid temperature.	
User entry	−50 to 300 °C	
Factory setting	25 °C	
Additional information	Read access Operator	

itional information	Read access	Operator
	Write access	Maintenance

Liquid temperature			
Navigation	8	Setup $\rightarrow$ Advanced setup $\rightarrow$ temp.	Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Liquid
Description	Show	s the average or spot temper	rature of the measured liquid.
Additional information	Read	access	Operator
	Write	access	-

Air temperature source		۵	
Navigation	Setup → Advanced s source	setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Air temp.	
Description	Defines source from which the air temperature is obtained.		
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 temperature</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>		
Factory setting	Manual value		
Additional information	Read access	Operator	
	Write access	Maintenance	

Manual air temperature		8	
Navigation	Image: Setup → Advanced setup - temp.	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Manual air	
Prerequisite	Air temperature source ( $\rightarrow \cong$	195) = Manual value	
Description	Defines the manual value of the air temperature.		
User entry	–50 to 300 °C		
Factory setting	25 °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

Operating	menu
-----------	------

Air temperature				
Navigation	Image: Setup → Advanced setup → Application → Tank config → Temperature → Air temp.			
Description	Shows the air temper	Shows the air temperature.		
Additional information	Read access	Operator		
	Write access	-		
Vapor temp source				
Navigation	Setup → Advanced setup → Application → Tank config → Temperature → Vapor temp src			
Description	Defines the source from which the vapor temperature is obtained.			
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 vapor temp</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>			
Factory setting	Manual value			
Additional information	Read access	Operator		
	Write access	Maintenance		

Manual vapor temperature				Ê
Navigation	Setup → Advanced setup → Application → Tank config → Temperature → Man. vapor temp.			
Prerequisite	Vapor temp source ( > 🗎 196) = Manual value			
Description	Defines the manual value of the vapor temperature.			
User entry	–50 to 300 °C			
Factory setting	25 °C			
Additional information	Read	access	Operator	
	Write	e access	Maintenance	

Vapor temperature			
Navigation	8 2	Setup $\rightarrow$ Advanced setup $\rightarrow$ temp.	Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Vapor
Description	Show	s the measured vapor tempe	erature.
Additional information	Read	access	Operator
	Write	access	-

#### "Density" submenu

Write access

Navigation 🛛 🗐 🔲 Set

Setup → Advanced setup → Application → Tank config → Density

Observed density source		Ê
Navigation	Image: Bootstand Setup → Advanced setup →	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Density $\rightarrow$ Density source
Description	Determines how the density is ob	otained.
Selection	<ul> <li>HTG<sup>*</sup></li> <li>HTMS<sup>*</sup></li> <li>Average profile density<sup>*</sup></li> <li>Upper density</li> <li>Middle density</li> <li>Lower density</li> </ul>	
Factory setting	Dependent on the device version	
Additional information	Read access	Operator

Observed density			
Navigation	Image: Betup → Advanced se density	etup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Density $\rightarrow$ Observed	
Description	Shows the measured or calc	ulated density.	
Additional information	Read access     Operator		
	Write access	-	

Maintenance

Air density		
Navigation	$\textcircled{B} \square  \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Tank config} \rightarrow \text{Density} \rightarrow \text{Air density}$	
Description	Defines the density of the air surrounding the tank.	
User entry	0.0 to 500.0 kg/m <sup>3</sup>	
Factory setting	1.2 kg/m <sup>3</sup>	

<sup>\*</sup> Visibility depends on order options or device settings

Additional information	Read access	Operator	
	Write access	Maintenance	
Vapor density		Â	
Navigation	$\textcircled{B} \square  \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Tank config} \rightarrow \text{Density} \rightarrow \text{Vapor density}$		
Description	Defines the density of the gas phase in the tank.		
User entry	0.0 to 500.0 kg/m <sup>3</sup>		
Factory setting	1.2 kg/m <sup>3</sup>		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### "Pressure" submenu

Navigation

Setup → Advanced setup → Application → Tank config → Pressure

P1 (bottom) source		<u></u>
Navigation	Image: Setup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 (bot) source
Description	Defines the source of the botton	n pressure (P1).
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 pressure</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

P1 (bottom)		
Navigation	Image: Betup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 (bottom)
Description	Shows the pressure at the tank bottom.	
Additional information	Read access	Operator
	Write access	-

P1 (bottom) manual press	sure	
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P1 (bot) manual	
Prerequisite	P1 (bottom) source (→ 🗎 200) = Manual value	
Description	Defines the manual value of the bottom pressure (P1).	
User entry	-1.01325 to 25 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P1 position		۵
Navigation		Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 position
Description	Defines the position of the bottom pressure transmitter (P1), measured from zero position (tank bottom or datum plate).	
User entry	-10000 to 100000 mm	
Factory setting	5000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

P1 offset			æ
Navigation	Image: Boost Setup → Advanced setup -	Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 offset	
Description	Offset for the bottom pressure (P1). The offset is added to the measured pressure prior to any tank calculation.		
User entry	-25 to 25 bar		
Factory setting	0 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

P1 absolute / gauge		
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P1 absolut/ gauge	/
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	<ul><li>Absolute</li><li>Gauge</li></ul>	
Factory setting	Gauge	

Additional information	Read access	Operator
	Write access	Maintenance

#### P3 (top) source Ê Navigation $\blacksquare$ Setup → Advanced setup → Application → Tank config → Pressure → P3 (top) source Description Defines the source of the top pressure (P3). Selection Manual value • HART device 1 ... 15 pressure AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value **Factory setting** Manual value Additional information Read access Operator Write access Maintenance

P3 (top)				
Navigation	■ $\square$ Setup $\rightarrow$ Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P3 (top)		
Description	Shows the pressure (P3) at the t	Shows the pressure (P3) at the top transmitter.		
Additional information	Read access Operator			
	Write access	-		

P3 (top) manual pressure		ß
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P3 (top) manual	
Prerequisite	P3 (top) source (→ 🗎 202) = Manual value	
Description	Defines the manual value of the top pressure (P3).	
User entry	-1.01325 to 25 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P3 position			Ê
Navigation	Image: Setup → Advanced setup →	→ Application → Tank config → Pressure → P3 position	
Description	Defines the position of the top pressure transmitter (P3), measured from zero position (tank bottom or datum plate).		
User entry	0 to 100 000 mm		
Factory setting	20 000 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

P3 offset			Ê
Navigation	Image: Barbon Barbon Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P3 offset	
Description	Offset for the top pressure (P3). The offset is added to the measured pressure prior to any tank calculation.		
User entry	–25 to 25 bar		
Factory setting	0 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

P3 absolute / gauge		
Navigation	Image Setup → Advanced setup → Application → Tank config → Pressure → P3 absolut/ gauge	1
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	<ul><li>Absolute</li><li>Gauge</li></ul>	
Factory setting	Gauge	

Additional information	Read access	Operator	
	Write access	Maintenance	
Ambient pressure			
Navigation	Image: Setup → Advanced setup pressure	ightarrow Application $ ightarrow$ Tank config $ ightarrow$ Pressure $ ightarrow$ Ambient	
Description	Defines the manual value of the ambient pressure.		
User entry	0 to 2.5 bar		
Factory setting	1 bar		
Additional information	Read access Operator		
	Write access         Maintenance		

"Tank calculation" submenu


Navigation

□ Setup → Advanced setup → Application → Tank calculation

"HyTD" submenu

Overview

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

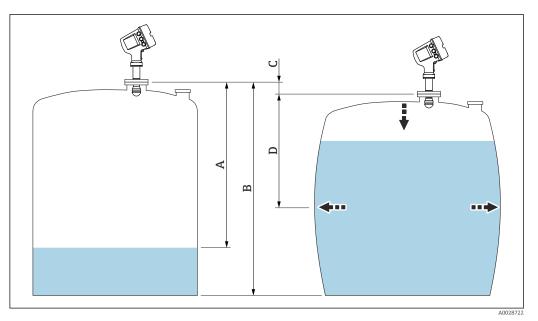


☑ 58 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (level below  $L_0 \rightarrow$  "HyTD correction value" = 0)
- *B* Gauge Reference Height (GRH)
- C HyTD correction value
- *D* "Distance" (level above  $L_0 \rightarrow$  "HyTD correction value" > 0)

A0028715

## Linear approximation of the HyTD correction

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

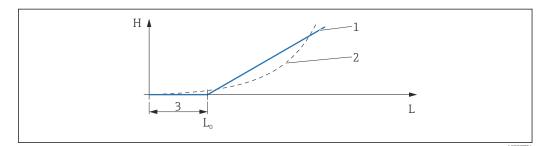

## ■ 59 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor (  $\rightarrow \square 208$ )"
- 2 Real correction
- 3 Starting level ( $\rightarrow \square 207$ )
- L Measured level ( $\rightarrow \square 125$ )
- *H* HyTD correction value ( $\rightarrow \square 207$ )

#### Calculation of the HyTD correction

$$\begin{split} L \leqslant L_{0} & \Longrightarrow & C_{\rm Hypd} = 0 \\ L > L_{0} & \Longrightarrow & C_{\rm Hypd} = - (L - L_{0}) \ge D \end{split}$$

L	Measured level	
L <sub>0</sub>	rting level	
c <sub>HyTD</sub>	HyTD correction value	
D	Deformation factor	

## Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} & \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Application} \rightarrow \mbox{Tank calculation} \\ & \rightarrow \mbox{HyTD} \end{array}$ 

HyTD correction value			
Navigation	₿₿ Set val		Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ HyTD corr.
Description	Shows the	e correction value from t	he Hydrostatic Tank Deformation.
Additional information	Read acces	ss	Operator
	Write acce	ess	-

HyTD mode		ß
Navigation	Image: Betup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ HyTD mode
Description	Activates or deactivates the calo	culation of the Hydrostatic Tank Deformation.
Selection	<ul><li>No</li><li>Yes</li></ul>	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Starting level		ß
Navigation	Image: Bearing → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ Starting level
Description	Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value are not corrected.	
User entry	0 to 5 000 mm	
Factory setting	500 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Deformation factor		8
Navigation	Image: Boots and the setupe of the setup of the setu	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ Deform factor
Description	Defines the deformation factor for the HyTD (change of device position per change of level).	
User entry	-1.0 to 1.0 %	
Factory setting	0.2 %	
Additional information	Read access	Operator
	Write access	Maintenance

#### "CTSh" submenu

Overview

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

This correction is recommended for the following situations:


• if the operating temperature deviates considerably from the temperature during calibration ( $\Delta T > 10 \degree C (18 \degree F)$ )

- for extremely high tanks
- for refrigerated, cryogenic or heated applications

As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.

This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

### CTSh: Calculation of the wall temperature

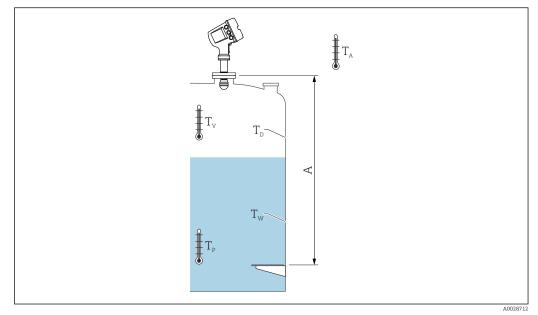

60 Parameters for the CTSh calculation

A Gauge Reference Height (GRH)


T <sub>w</sub>	Temperature of the wetted part of the tank shell	
T <sub>D</sub>	emperature of the dry part of the tank shell	
T <sub>P</sub>	Product temperature	
T <sub>V</sub>	Vapor temperature (in the tank)	
T <sub>A</sub>	Ambient temperature (atmosphere surrounding the tank)	

#### CTSh: Calculation of the wall temperature

Depending on the parameters **Covered tank** ( $\rightarrow \cong 212$ ) and **Stilling well** ( $\rightarrow \boxtimes 213$ ), the temperatures  $T_W$  of the wetted and  $T_D$  of the dry part of the tank wall are calculated as follows:

Covered tank ( $\rightarrow \square$ 212)	Stilling well (→ 🗎 213)	T <sub>W</sub>	T <sub>D</sub>
Covered	Yes <sup>1)</sup>	T <sub>P</sub>	T <sub>V</sub>
Covered	No	(7/8) T <sub>P</sub> + (1/8) T <sub>A</sub>	(1/2) T <sub>V</sub> + (1/2) T <sub>A</sub>
Open top	Yes	T <sub>P</sub>	T <sub>A</sub>
Open top	No	(7/8) T <sub>P</sub> + (1/8) T <sub>A</sub>	T <sub>A</sub>

1) This option is also valid for insulated tanks without a stilling welll. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

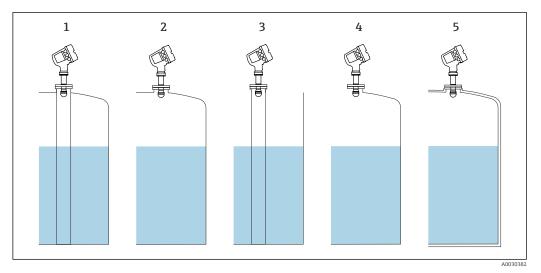

- 1 Covered tank ( $\rightarrow \square 212$ ) = Covered; Stilling well ( $\rightarrow \square 213$ ) = Yes
- Covered tank ( $\rightarrow \square 212$ ) = Covered; Stilling well ( $\rightarrow \square 213$ ) = No 2
- 3
- 4
- Covered tank ( $\rightarrow \square 212$ ) = Open top; Stilling well ( $\rightarrow \square 213$ ) = Yes Covered tank ( $\rightarrow \square 212$ ) = Open top; Stilling well ( $\rightarrow \square 213$ ) = Yes Insulated tank: Covered tank ( $\rightarrow \square 212$ ) = Open top; Stilling well ( $\rightarrow \square 213$ ) = Yes 5

CTSh: Calculation of the correction

C =	α(H·	- L) (T.	- T .) ·	+ a I.	$(T_w - T_{cal})$	)
CTSh	0 (11		- cal/	· u L	∖ w ⁺ cal	/

Н	Gauge Reference Height	
L	Measured level	
T <sub>D</sub>	Temperature of the dry part of the tank shell (calculated from $T_{\rm P},T_{\rm V}$ and $T_{\rm A})$	
T <sub>W</sub>	Temperature of the wetted part of the tank shell (calculated from $T_{\rm P},T_{\rm V}$ and $T_{\rm A})$	
T <sub>cal</sub>	Temperature at which the measurement has been calibrated	
α	Linear expansion coefficient	
C <sub>CTSh</sub>	CTSh correction value	

Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} \textcircled{\begin{subarray}{c} \begin{subarray}{c} \begi$ 

CTSh correction value				
Navigation	Image: Setup → An value	dvanced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CTSh $\rightarrow$ CTSh corr		
Description	Shows the CTSh correction value.			
Additional information	Read access	Read access Operator		
	Write access	-		


CTSh mode		Ê
Navigation	Image: Betup → Advance	ed setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CTSh $\rightarrow$ CTSh mode
Description	Activates or deactivates	s the CTSh.
Selection	<ul> <li>No</li> <li>Yes</li> <li>With wire *</li> <li>Only wire *</li> </ul>	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Covered tank	
Navigation	$ extsf{B}$ ■ Setup → Advanced setup → Application → Tank calculation → CTSh → Covered tank
Description	Determines whether the tank is covered.
Selection	<ul><li>Open top</li><li>Covered</li></ul>
Factory setting	Open top

<sup>\*</sup> Visibility depends on order options or device settings

### Additional information

Read access	Operator
Write access	Maintenance

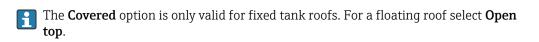

Stilling well		Â
Navigation	Image: Betup → Advanced setup →	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CTSh $\rightarrow$ Stilling well
Description	Determines whether the device is	s mounted on a stilling well.
Selection	■ No ■ Yes	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Calibration temperature			۵	8
Navigation	8 2	Setup → Advanced setup → temp	Application $\rightarrow$ Tank calculation $\rightarrow$ CTSh $\rightarrow$ Calibration	
Description	Speci	Specify temperature at which the measurement has been calibrated.		
User entry	-50 t	o 250 °C		
Factory setting	25 °C			
Additional information	Read	access	Operator	
	Write	access	Maintenance	

Linear expansion coefficier	nt	
Navigation	Setup → Advanced setup → Application → Tank calculation → CTSh → Linear exp coeff	)
Description	Defines the linear expansion coefficient of the tank shell material.	
User entry	0 to 100 ppm	
Factory setting	15 ppm	

A

# Additional information Read access Operator Write access Maintenance


#### Wire expansion coefficient

Navigation	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$	
Description	Defines the expansion coefficient of the wire material of the drum. Value is programmed in factory.	
User entry	0 to 100 ppm	
Factory setting	15 ppm	

## "CLG" submenu

Overview

The gas phase in pressurized tanks has a direct impact on the distance determination for time-of-flight sensors. This feature corrects the influences of the vapor phase based on its pressure, temperature and composition.

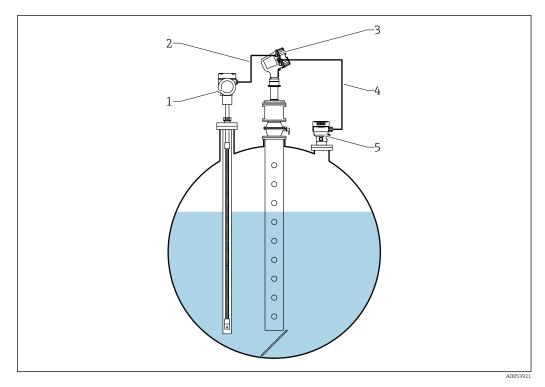


- 1 Prothermo temperature measurement device, equipped with thermowell or protective pipe
- 2 HART connection
- 3 Radar level gauge Micropilot NMR84
- 4 HART connection
- 5 Digital pressure transmitter

The gas phase correction for liquefied gases (CLG) is configured in the CLG submenu (  $\Rightarrow~\textcircled{B}$  215) submenu.

Navigation path: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  CLG

#### Description of parameters

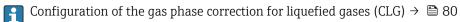

Navigation

 $\label{eq:setup} \fbox{Advanced setup} \rightarrow \texttt{Application} \rightarrow \texttt{Tank calculation} \\ \rightarrow \texttt{CLG}$ 

CLG mode			ß
Navigation		$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CLG $\rightarrow$ CLG mode	
Description	Activates or deactivates CLG for	a mixture of up to four gases.	
Selection	<ul> <li>Off</li> <li>Pure gas *</li> <li>Mix of two gases *</li> <li>Mix of three gases *</li> <li>Mix of four gases *</li> </ul>		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

CLG to tank level		ඕ
Navigation	□ Setup → Advanced	setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CLG $\rightarrow$ CLG to level
Description	Activates or deactivates th WHG-Mode sets this para	ne tank level correction by CLG. Additional information: SIL- or ameter to "No".
Selection	■ No ■ Yes	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

<sup>\*</sup> Visibility depends on order options or device settings

Gas 1 to 4			£
Navigation		$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CLG $\rightarrow$ Gas 1 to 4	
Selection	<ul> <li>Chloroethylene C2H3Cl</li> <li>Ethylene C2H4</li> <li>Ethane C2H6</li> <li>Propadiene C3H4</li> <li>Propylene C3H6</li> <li>Propane C3H8</li> <li>Isobutane C4H10</li> <li>Butane C4H10</li> <li>Butylene C4H8</li> <li>Isobutylene C4H8</li> <li>Pentane C5H12</li> <li>Methane CH4</li> <li>Hydrogen H2</li> <li>Nitrogen N2</li> <li>Ammonia NH3</li> <li>Air</li> <li>Custom</li> </ul>		
Factory setting	Air		
Additional information	Read access	Operator	
	Write access	Maintenance	

Gas 1 to 4 refractive index		Â
Navigation	$\blacksquare$ ■ Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CLG $\rightarrow$ Gas 1 to 4 RI
Description	Gas refractive index at 0°C and 11	bar with up to 6 decimal places.
User interface	1.0 to 2.0	
Factory setting	1.000288	
Additional information	Read access	Operator
	Write access	Service

Gas 1 to 4 ratio	
Navigation	□ $□$ Setup → Advanced setup → Application → Tank calculation → CLG → Gas 1 to 4 ratio
Description	Defines the ratio of this gas in the mixture. Given as unitless integer value.
User entry	1 to 100

# Factory setting

1

Additional information	Read access	Operator
	Write access	Maintenance

CLG correction value		
Navigation	Image: Setup → Advanced setup +	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CLG $\rightarrow$ CLG correction
Description	Shows the CLG correction value.	
User interface	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	-


CLG corrected level		
Navigation	Image: Barbon Setup → Advanced setup →	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CLG $\rightarrow$ CLG corr. level
Description	Shows the level with CLG correction only.	
User interface	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	-

### "HTMS" submenu

#### Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

### HTMS parameters

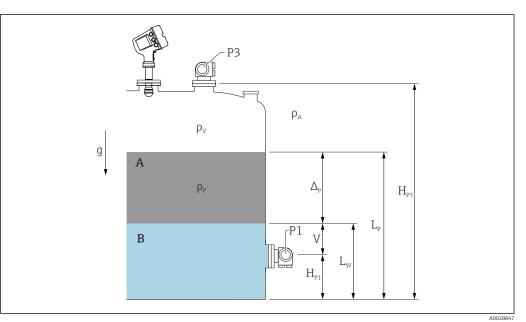

■ 61 HTMS parameters

- A Product
- B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 (bottom)
H <sub>P1</sub> (Position of P1 transmitter)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 position
P3 (Top pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 (top)
$H_{P3}$ (Position of P3 transmitter)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 position
$\rho_P$ (Density of the product $^{1)})$	<ul> <li>Measured value: Setup → Advanced setup → Calculation → HTMS → Density value</li> <li>User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density</li> </ul>
ρ <sub>v</sub> (Vapor density)	Expert $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Vapor density
$\rho_A$ (Ambient air temperature)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Air density
g (Local gravity)	Expert $\rightarrow$ Application $\rightarrow$ Tank Calculation $\rightarrow$ Local gravity
L <sub>p</sub> (Level of the product)	Operation $\rightarrow$ Tank level
L <sub>W</sub> (Bottom water level)	Operation $\rightarrow$ Water level
$V = L_W - H_{P1}$	
$\Delta_{\rm P} = L_{\rm P} - L_{\rm W} = L_{\rm P} - \rm V - H_{\rm P1}$	

1) Depending on the situation this parameter is measured or a user-defined value is used.

#### HTMS modes

Two HTMS modes can be selected in the **HTMS mode** parameter ( $\rightarrow \boxminus 220$ ). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.

The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ ≌ 220)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	<ul> <li>P<sub>1</sub></li> <li>L<sub>p</sub></li> </ul>	• g • H <sub>P1</sub> • L <sub>W</sub> (optional)	ρ <sub>Ρ</sub>
HTMS P1+P3	<ul> <li>P<sub>1</sub></li> <li>P<sub>3</sub></li> <li>L<sub>P</sub></li> </ul>	• $\rho_V$ • $\rho_A$ • $g$ • $H_{P1}$ • $H_{P3}$ • $L_W$ (optional)	ρ <sub>P</sub> (more precise calculation for pressurized tanks)

#### Minimum level

The density of the product can only be calculated if the product has a minimum thickness :

 $\Delta_{\rm P} \geq \Delta_{\rm P, min}$ 

This is equivalent to the following condition for the product level:

$$L_P - V \geq \Delta_{P,\min} + H_{P1} = L_{\min}$$


 $L_{min}$  is defined in the **Minimum level** parameter ( $\rightarrow \cong 221$ ). As can be seen from the formula it always must be bigger than  $H_{P1}$ .

If  $L_P$  - V falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter) will be used.

#### Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level** ( $\rightarrow \boxdot 221$ )), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

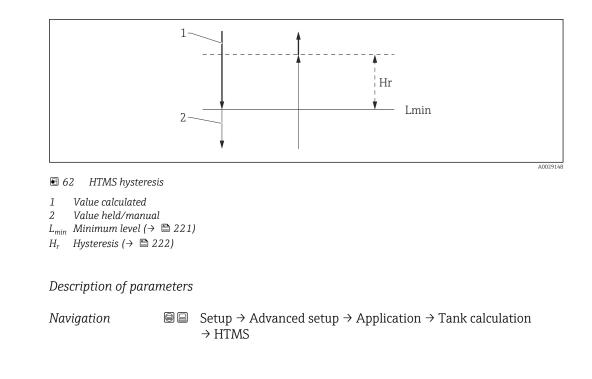

HTMS mode		
Navigation	Image: Barbon Setup → Advan	ced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ HTMS mode
Description	Defines the HTMS mo used.	de. Depending on the mode one or two pressure transmitters are
Selection	<ul><li>HTMS P1</li><li>HTMS P1+P3</li></ul>	
Factory setting	HTMS P1	
Additional information	Read access	Operator
	Write access	Maintenance
	■ HTMS P1+P3	ure transmitter (P1) is used. cop (P3) pressure transmitter are used. This option should be selected

Manual density		æ
Navigation	Image: Betup → Advanced setup → Application → Tank calculation → HTMS → Manual density	
Description	Defines the manual density.	

for pressurized tanks.

User entry	0 to $3000 \text{ kg/m}^3$		
Factory setting	800 kg/m <sup>3</sup>		
Additional information	Read access	Maintenance	
	Write access	Maintenance	
Density value			
Navigation	Image: Betup → Advance	ced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Density value	
Description	Shows the calculated product density.		
Additional information	Read access	Operator	
	Write access	-	
Minimum level		ඕ	
Navigation	Image: Betup → Advance	ced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Min. level	
Description	Defines the minimum	product level for a HTMS calculation.	
	If Lp - V falls below the limit defined in this parameter, the density retains its last va the manual value is used instead.		

User entry 0 to 20000 mm

Factory setting 7000 mm

Additional information	Read access	Operator
	Write access	Maintenance

Minimum pressure	<u> </u>
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Minimum pressure
Description	Defines the minimum pressure for a HTMS calculation.
	If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.
User entry	0 to 100 bar
Factory setting	0.1 bar

Additional information	Read access	Operator
	Write access	Maintenance

Safety distance			
Navigation	$\blacksquare$ Setup → Advanced setup → Application → Tank calculation → HTMS → Safety distance		
Description	Defines the minimum level which must be present above the bottom pressure sensor before its signal is used for the calculation.		
User entry	0 to 10 000 mm		
Factory setting	2 000 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Hysteresis		Â		
Navigation	Image: Bearing → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Hysteresis		
Description	Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is near the switch-over point.			
User entry	0 to 2 000 mm			
Factory setting	50 mm			
Additional information	Read access	Operator		
	Write access	Maintenance		

Water density		Ê
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Water density	
Description	Density of the water in the tank.	
User entry Signed floating-point number		
Factory setting	1000 kg/m <sup>3</sup>	

Read access	Operator
Write access	Maintenance

#### "Dip-table" submenu

#### Dip table

The dip table is used to correct the level readings using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions such as a mechanical offset and the tank or stilling well design. Depending on national regulations, national inspectors will dip the tank at one to three levels during a calibration run and check the level readings.

Only one value pair must be entered into the dip table to correct the measurement offset. If a second value pair is entered into the dip table, the device accepts the corrected measured values identically for both value pairs. All other measured values are determined by linear extrapolation.

If more than two value pairs are entered, the system carries out a linear interpolation between adjacent value pairs. Outside these value pairs, extrapolation is also linear.

Before a table is entered, delete any existing table values by selecting **Table settings** ( $\Rightarrow \cong 227$ ) = "Clear table" option.

- The offset should **not** be determined and entered within the close range of the antenna or immediately in the range of the tank bottom, because within these ranges interferences of the radar signal may occur.
- After changing the **Empty** parameter ( $\rightarrow \cong 134$ ), the **Table mode** parameter ( $\rightarrow \cong 227$ ) is automatically set to **Disable**.
  - If Empty (→ 
     <sup>134</sup>) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
  - The dip table values are not affected by a change of the **Empty** parameter ( $\rightarrow \triangleq 134$ ).

#### Semiautomatic creation of a dip table

In order not to mix up measurement values corrected by the dip table with uncorrected measurement values, it is recommended to enter new data pairs semiautomatically into the table. This means: the uncorrected level is measured by the device and the user only enters the corresponding dip value.

The first dip value should be entered immediately after the basic calibration. Further dip points should be entered only after a level change of at least 2 m (6.6 ft) and a deviation between the uncorrected measurement value and the hand dip value of at least 4 mm (0.16 in).

If this procedure can not be followed, then **no** value pair should be entered into the dip table after basic calibration. Measurement data and hand dip values should be collected over the full measurement range and be evaluated with regard to a good linear fit. Only then characteristic value pairs should be entered into the dip table using the "manual mode" (see below).

#### Manual creation of a dip table

Before creating a dip table manually, measured levels and dip values should be collected over the full measurement range and be evaluated with regard to a linear fit. Only then characteristic value pairs from this fit should be entered into the dip table using the manual mode. In the manual mode both, the measured level (without correction) and the corresponding dip value are entered by the user.



If further linearisation is needed, further hand dip values should be entered using only the "semi-automatic" mode (see above).

A004568

The table editor on the local display

L-

┕►

4

**1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  Dip-table  $\rightarrow$  Table mode and select the **Disable** option.

**2.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Calculation  $\rightarrow$  Dip-table  $\rightarrow$  Edit table

4	//Edit table	13953-1
N	Dip Table De	. Dip Table Di.
1	10.0	10.1
2	5.0	4.2
3	1.0	1.0
	<u> </u>	↓   E

63 The dip table editor on the local display

- N Number of the line
- De. Device level
- Di. Dip level

**3.** Use the " $\uparrow$ " and " $\downarrow$ " keys to move to the line you want to edit.

J.	//Edit tab	le	13964-1
N	Dip Table I		Dip Table Di
3	-	1.0	1.0
4		0.0	0.0
5		0.0	0.0
	1	↓	E

4. Press "E" to open the line.

5. Use " $\rightarrow$ " to select the cell you want to edit.

N         Dip Table De.         Dip Table Di.           3         1.0         1.0           4         0.0         0.0           5         0.0         0.0	¥	//Edit table		13964-1
4 0.0 0.0	Ν	Dip Table De.	C	)ip Table Di.
	3	1.0		1.0
5 0.0 0.0	4	0.0		0.0
	5	0.0		0.0

- 6. Press "E" to open the cell.
- 7. Enter the required number  $\rightarrow \cong 51$ .
- 8. Continue until all required table points have been entered.
- 9. Press "-" and "+" simultaneously to quit the table editor.
- 10. Navigate to Setup → Advanced setup → Application → Tank calculation → Dip-table
   → Table settings and select the Sort table option.
  - $\blacktriangleright$  The table points are arranged in an ascending order.
- **11.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  Dip-table  $\rightarrow$  Table modeand select the **Enable** option.
  - └ The new dip table is active.

A004587

The table editor in FieldCare


In the FieldCare table editor the dip table can only be entered manually. Even if the semiautomatic method has been selected in the **Table settings** parameter (→ 🖺 227), the complete table will be written from the editor to the device in the manual mode.

Tank level (139): 😂	20399,6200 mm	Liquid tempe	rature: 🗘	-273,15	°C <u>Observed de</u>	ensity: 🗘	800,000
Distance (120): 🜔	-98,6500 mm	Water level:	Ø	0,0000	mm <u>P1 (bottom)</u>	: <i>C</i>	-1,0
		-					
		I					
(a) 🖬 🖬 🖬 All parameters	🖂 🕺 🔽	🖹 🖻 🖪	<b>* ()</b>				
		8					
Menu / Variable	^	Table Settings:	Manual	$\checkmark$			
🖹 🦢 Advanced setup							
P Locking status:							
P Access status tooling:							
-P Enter access code:							
🕀 🛅 Input/Output							
😥 🛅 Communication							
🕀 🧰 🛛 Tank configuration							
Tank Calculation							
🕂 🤖 🛅 НуТР							
CTSh							
⊡ нтс							
Dip table							

1 Table icon; calls up the table editor.

Open the table editor by clicking on the table icon.

← The graphical table editor appears:

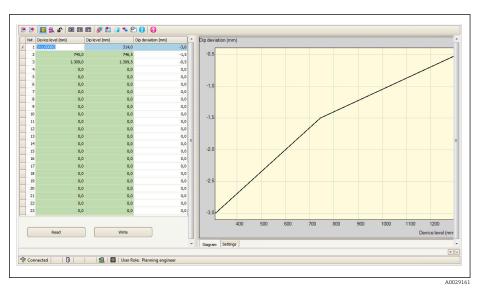

- 2. If the device already contains a dip table: Click "Read" to load it into the editor.
- **3.** Enter or change table values in the table on the right. A graphical representation of the table is shown in the diagram on the right.
- 4. Click "Write" to write the table back to the device.

# Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Application} \rightarrow \mbox{Tank calculation} \\ \rightarrow \mbox{Dip-table} \end{array}$ 

Table settings			æ
Navigation	I Setup → Advar settings	nced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ Dip-table $\rightarrow$ Table	
Description	Defines the dip-table	operation to be performed.	
Selection	<ul> <li>Manual</li> <li>Semiautomatic</li> <li>Clear table</li> <li>Sort table</li> </ul>		
Factory setting	Manual		
Additional information	Read access	Operator	
	Write access	Maintenance	
	<ul> <li>Semiautomatic The device level of e dip level must be en</li> <li>Clear table Deletes the complet</li> <li>Sort table Sorts the table poin</li> </ul>	rel and the dip level for each table point have to be entered manua each table point is measured by the device itself, the corresponding ntered manually.	g

Table mode		
Navigation		
Description	Enables or disables the dip-table.	
Selection	<ul><li>Disable</li><li>Enable</li></ul>	
Factory setting	Disable	

Read access	Operator
Write access	Maintenance

"Alarm" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Alarm

#### "Alarm" submenu

Navigation

 $\label{eq:setup} \fbox{ Setup} \rightarrow \texttt{Advanced setup} \rightarrow \texttt{Application} \rightarrow \texttt{Alarm} \rightarrow \texttt{Alarm}$ 

► Alarm	
Alarm mode	) → 🗎 229
Error value	→ 🗎 230
Alarm value source	→ 🗎 231
Alarm value	→ 🗎 232
HH alarm value	→ 🗎 232
H alarm value	→ 🗎 232
L alarm value	→ 🗎 233
LL alarm value	→ 🗎 233
HH alarm	→ 🗎 233
H alarm	) → 🗎 234
HH+H alarm	) → 🗎 234
L alarm	) → 🗎 234
LL alarm	) → 🗎 234
LL+L alarm	) → 🗎 235
Any error	) → 🗎 235
Clear alarm	) → 🗎 235

Alarm hysteresis	→ 🗎 236
Damping factor	→ 🗎 236

Alarm mode			
Navigation	Image: Setup → Advanced	setup $\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm	n mode
Description	Defines the alarm mode o	f the selected alarm.	
Selection	<ul><li> Off</li><li> On</li><li> Latching</li></ul>		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of the options

• Off


No alarms are generated.

• On

An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).

Latching

All alarms remain active until the user selects **Clear alarm** ( $\rightarrow \cong 235$ ) = **Yes** or the power is switched off and on.

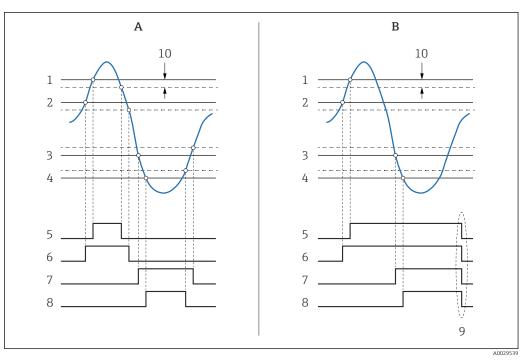

🖻 64 Principle of the limit evaluation

- Alarm mode ( $\rightarrow \square 229$ ) = On Α
- Alarm mode ( $\rightarrow \cong 229$ ) = Latching HH alarm value ( $\rightarrow \boxtimes 232$ ) В
- 1
- 2 H alarm value ( $\rightarrow \square 232$ )
- 3 L alarm value (→ 🗎 233)
- LL alarm value ( $\rightarrow \square 233$ ) 4
- HH alarm (→ 🖺 233) 5
- 6
- 7
- 8 LL alarm ( $\rightarrow \square 234$ )
- 9 "Clear alarm ( $\rightarrow \boxtimes 235$ )" = "Yes" or power off-on 10 Hysteresis ( $\rightarrow \boxtimes 236$ )

LITUI Value	Error	val	lue
-------------	-------	-----	-----

Navigation		Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Error value
Prerequisite	Alarm mode ( $\Rightarrow \square 229$ ) $\neq Off$	
Description	Defines the alarm to be issued if t	the input value is invalid.
Selection	<ul> <li>No alarm</li> <li>HH+H alarm</li> <li>H alarm</li> <li>L alarm</li> <li>LL+L alarm</li> <li>All alarms</li> </ul>	
Factory setting	All alarms	
Additional information	Read access	Operator
	Write access	Maintenance

A

Alarm value source			ß
Navigation	Image: Betup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm source	
Prerequisite	Alarm mode (→ 🗎 229) ≠ Off	-	
Description	Determines the process variable	e to be monitored.	
Selection	<ul> <li>Tank level</li> <li>Liquid temperature</li> <li>Vapor temperature</li> <li>Water level</li> <li>P1 (bottom)</li> <li>P2 (middle)</li> <li>P3 (top)</li> <li>Observed density value</li> <li>Volume</li> <li>Flow velocity</li> <li>Volume flow</li> <li>Vapor density</li> <li>Middle density</li> <li>Upper density</li> <li>Correction</li> <li>Tank level %</li> <li>GP 14 value</li> <li>Measured level</li> <li>P3 position</li> <li>Tank reference height</li> <li>Local gravity</li> <li>P1 position</li> <li>Manual density</li> <li>Upper interface level</li> <li>Lower density</li> <li>Upper interface level</li> <li>Bottom level</li> <li>Bottom level</li> <li>Bottom level</li> <li>Displacer position</li> <li>HART device 115 PV</li> <li>HART device 115 PV mA</li> <li>HART device 115 PV mA</li> <li>HART device 115 PV %</li> <li>Element temperature 124</li> <li>AIO B1-3 value</li> <li>AIP C4-8 value</li> <li>None</li> </ul>		
Factory setting	None		
Additional information	Read access	Operator	

Read access	Operator
Write access	Maintenance

Alarm value		
Navigation		Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm value
Prerequisite	Alarm mode ( $\rightarrow \square 229$ ) $\neq Off$	
Description	Shows the current value of the pr	ocess variable being monitored.
User interface	Signed floating-point number	
Factory setting	0 None	
Additional information	Read access	Operator
	Write access	-

HH alarm value			
Navigation		$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ HH alarm value	
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) $\neq$ Off		
Description	Defines the high-high(HH) limit	value.	
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	

H alarm value			Ê
Navigation		$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ H alarm value	
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) $\neq$ Off		
Description	Defines the high(H) limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	

L alarm value			ß
Navigation	Image: Bootstand Setup Advanced setup	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ L alarm value	
Prerequisite	Alarm mode (→ 🗎 229) ≠ Off		
Description	Defines the low limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	
LL alarm value			ß

Navigation		Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ LL alarm value
Prerequisite	Alarm mode ( $\rightarrow \square 229$ ) $\neq Off$	
Description	Defines the low-low(LL) limit val	ue.
User entry	Signed floating-point number	
Factory setting	0 None	
Additional information	Read access	Operator
	Write access	Maintenance

HH alarm		
Navigation	Image: Below Boundary Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ HH alarm
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) $\neq$ Off	
Description	Shows whether an HH alarm is c	urrently active.
Additional information	Read access	Operator
	Write access	-

H alarm		
Navigation	Image: Boostimes and the setup → Application → Alarm → Alarm → H alarm	
Prerequisite	Alarm mode ( $\rightarrow \triangleq 229$ ) $\neq$ Off	
Description	Shows whether an H alarm is currently active.	
Additional information	Read access	Operator
	Write access	-
HH+H alarm		
Navigation	Image: Betup → Advance	red setup $\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ HH+H alarm
Prerequisite	Alarm mode (→ 🗎 22	29) ≠ Off
Description	Shows whether an HH	or H alarm is currently active.
Additional information	Read access	Operator
	Write access	-
L alarm		
	Image: Bearing and Bearing	red setup $\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ L alarm
Navigation	Image: Setup → Advance Alarm mode (→ Image: 22)	
Navigation Prerequisite	Alarm mode (→ 🗎 22	
L alarm Navigation Prerequisite Description Additional information	Alarm mode (→ 🗎 22	29) ≠ Off

Navigation	$\textcircled{\ } \boxdot \ } \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Alarm} \rightarrow \text{Alarm} \rightarrow \text{LL alarm}$
Prerequisite	Alarm mode ( $\rightarrow \square 229$ ) $\neq Off$
Description	Shows whether an LL alarm is currently active.

Additional information	Read access	Operator
	Write access	-

LL+L alarm		
Navigation		$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ LL+L alarm
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) $\neq$ Off	
Description	Shows whether an LL or L alarm is currently active.	
Additional information	Read access Operator	
	Write access	-

Any error		
Navigation	□ Setup $\rightarrow$ Advanced setup	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Any error
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) $\neq $ Off	
Description	Show whether any alarm is curre	ently active.
User interface	<ul><li>Unknown</li><li>Inactive</li><li>Active</li><li>Error</li></ul>	
Factory setting	Unknown	
Additional information	Read access	Operator
	Write access	-

Clear alarm	Â
Navigation	□ Setup → Advanced setup → Application → Alarm → Alarm → Clear alarm
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) = Latching
Description	Deletes an alarm which is still active although the alarm condition is no longer present.
Selection	<ul><li>No</li><li>Yes</li></ul>
Factory setting	No

Additional information	Read access	Operator
	Write access	Maintenance

Alarm hysteresis		â
Navigation		$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm hysteresis
Prerequisite	Alarm mode ( $\rightarrow \cong 229$ ) $\neq$ Off	
Description	Defines the hysteresis for the limit values. The hystersis prevents constant changes of the alarm state if the level is near one of the limit values.	
User entry	Signed floating-point number	
Factory setting	0.001	
Additional information	Read access	Maintenance
	Write access	Maintenance

Damping factor			A
Navigation	Image: Bearing and the setupe of the setup of the se	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Damping factor	
Description	Defines the damping constant (in	n seconds).	
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

# "Safety settings" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings

Output echo lost			Ê
Navigation		red setup $\rightarrow$ Safety settings $\rightarrow$ Output echo los	t
Description	Defines the output beh	navior in case of a lost echo.	
Additional information	Read access	Operator	
	Write access	Service	
	Meaning of the option <ul> <li>Last valid value</li> <li>The last value before</li> </ul> Alarm The device generates	e the occurence of the echo is kept.	
Delay time echo lost			

Navigation	$\textcircled{B} \square  \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Safety settings} \rightarrow \text{Delay echo lost}$	
Description	Time between the echo loss and the reaction defined for the output.	
User entry	0 to 99999.9 s	
Factory setting	60.0 s	
Additional information	Read access	Operator
	Write access	Maintenance

Safety distance	Â
Navigation	Image: Boundary Setup → Advanced setup → Safety settings → Safety distance
Description	Defines the safety distance (measured from the reference point). A warning is issued if the level rises into the safety distance.
User entry	Signed floating-point number
Factory setting	0 mm

Read access	Operator
Write access	Maintenance

	"Sensor config" submenu		
	Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Sensor config
	"Information" subme	enu	
	Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Sensor config $\rightarrow$ Information
Signal quality			

Navigation	Setup → Advanced setup →	Sensor config $\rightarrow$ Information $\rightarrow$ Signal quality
Description	Shows the quality of the evaluate	d level signal.
Additional information	Read access	Operator
	Write access	-

Absolute echo amplitude		
Navigation	Image: Betup → Advanced setup ÷	Sensor config $\rightarrow$ Information $\rightarrow$ Abs. echo ampl.
Description	Shows the absolute amplitude of the evaluated level signal.	
Additional information	Read access Operator	
	Write access	-

Relative echo amplitude		
Navigation	■ $\square$ Setup $\rightarrow$ Advanced setup $=$	Sensor config $\rightarrow$ Information $\rightarrow$ Relat.echo ampl.
Description	Shows the relative amplitude (i.e. the distance to the evaluation curve) of the evaluated level signal.	
Additional information	Read access	Operator
	Write access	-

Distance			
Navigation	Image: Betup → Advanced setup →	Sensor config $\rightarrow$ Information $\rightarrow$ Distance	
Description	Distance from lower edge of device flange to product surface.		
Additional information	Read access	Operator	
	Write access	-	

#### "Echo tracking" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor config  $\rightarrow$  Echo tracking

Evaluation mode			(
Navigation	Image: Betup → Advance	ed setup $\rightarrow$ Sensor config $\rightarrow$ Echo tracking $\rightarrow$ Evaluation mode	
Description	Defines the evaluation r	Defines the evaluation mode for the echo tracking.	
Selection	<ul><li>Short time history</li><li>History off</li></ul>		
Factory setting	Short time history		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### Meaning of the options

Short time history

In addition to the static algorithms a dynamic echo trace is continuously generated and evaluated.

• **History off** The envelope curve is evaluated only statically.

History reset			
Navigation	$\blacksquare$ □ Setup → Advanced se	tup $\rightarrow$ Sensor config $\rightarrow$ Echo tracking $\rightarrow$ History reset	
Description	Resets the history of the ech	Resets the history of the echo tracking.	
Selection	<ul><li>Reset done</li><li>Restart echo tracking</li><li>Delete history</li></ul>		
Factory setting	Reset done		
Additional information	Read access	Operator	
	Write access	Maintenance	

Meaning of options:

Reset done
 Does not initiate an action but is only a display option. It is displayed as soon as the reset operation has been accomplished.

 Delete history The echo tracking and tank trace are reset.

# "Display" submenu


This menu is only visible if the device has a local display.

*Navigation*  $\textcircled{B} \boxminus$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display


Language		
Navigation	Image: Betup → Advanced setup →	→ Display → Language
Prerequisite	The device has a local display.	
Description	Set display language.	
Selection	<ul> <li>English</li> <li>Deutsch</li> <li>русский язык (Russian)</li> <li>日本語 (Japanese)</li> <li>Español</li> <li>中文 (Chinese)</li> </ul>	
Factory setting	English	
Additional information	Read access	Operator
	Write access	Operator


Format display	
Navigation	Image: Setup → Advanced setup → Display → Format display
Prerequisite	The device has a local display.
Description	Select how measured values are shown on the display.
Selection	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>
Factory setting	1 value, max. size
Additional information	4841.000 □1√ mm

🕑 65 "Format display" = "1 value, max. size"

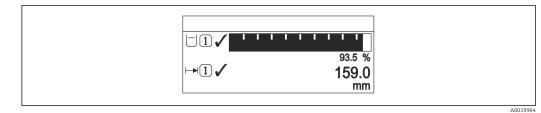


66 "Format display" = "1 bargraph + 1 value"

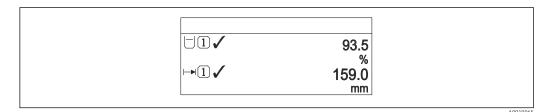

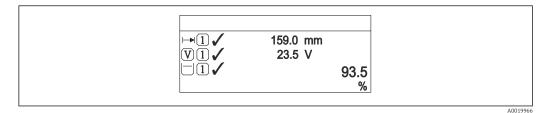

68 "Format display" = "1 value large + 2 values"

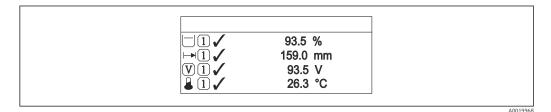

69 "Format display" = "4 values"

Read access	Operator
Write access	Operator

- The Value 1 to 4 display (→ 
   <sup>(⇒)</sup> 243) parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter ( $\Rightarrow \cong 246$ ).

Value 1 to 4 display		
Navigation	Setup → Advanced setup → Display → Value 1 display	
Prerequisite	The device has a local display.	

Description	Select the measured value that is shown on the local display.
Selection	• None $^{10)}$ • Tank level • Measured level • Level linearized • Tank level % • Water level $^{10)}$ • Liquid temperature $^{10)}$ • Vapor temperature $^{10)}$ • Air temperature $^{10)}$ • Tank ullage • Tank ullage % • Observed density value $^{10)}$ • P1 (bottom) $^{10)}$ • P2 (middle) $^{10)}$ • P2 (middle) $^{10)}$ • P3 (top) $^{10)}$ • GP 1 value $^{10)}$ • GP 2 value $^{10)}$ • GP 4 value $^{10)}$ • GP 4 value $^{10)}$ • Gauge command $^{10)}$ • Gauge status $^{10)}$ • AIO B1-3 value mA $^{10)}$ • AIO B1-3 value mA $^{10)}$ • AIO C1-3 value mA $^{10)}$ • AID B4-8 value mA $^{10)}$ • AIP B4-8 value mA $^{10)}$ • AIP B4-8 value mA $^{10)}$ • AIP C4-8 value mA $^{10)}$
Factory setting	Depending on device version

Depending on device version

Additional information	Read access	Operator
	Write access	Maintenance

Decimal places 1 to 4		A
Navigation	Setup → Advanced setup → Display → Decimal places 1	
Prerequisite	The device has a local display.	
Description	This selection does not affect the measurement and calculation accuracy of the device.	

<sup>10)</sup> not available for the Value 1 display parameter

Selection	■ X
	■ X.X
	■ X.XX
	■ X.XXX
	X.XXXX
Factory setting	X.X
Additional information	The setting does not affect the measuring or computational accuracy of the device.

Read access	Operator
Write access	Maintenance

Separator		6	<b>a</b>
Navigation	Image: Boost Setup → Advanced setup -	$\rightarrow$ Display $\rightarrow$ Separator	
Prerequisite	The device has a local display.		
Description	Select decimal separator for displaying numerical values.		
Selection	■. ■,		
Factory setting			
Additional information	Read access	Operator	
	Write access	Maintenance	

Number format		6
Navigation	Image: Setup → Advanced setup →	$\rightarrow$ Display $\rightarrow$ Number format
Prerequisite	The device has a local display.	
Description	Choose number format for the display.	
Selection	<ul><li>Decimal</li><li>ft-in-1/16"</li></ul>	
Factory setting	Decimal	
Additional information	Read access	Operator
	Write access	Maintenance

The **ft-in-1/16**" option is only valid for distance values.

Header			Â
Navigation		$p \rightarrow Display \rightarrow Header$	
Prerequisite	The device has a local display		
Description	Select header contents on local display.		
Selection	<ul><li>Device tag</li><li>Free text</li></ul>		
Factory setting	Device tag		
Additional information	Read access	Operator	
	Write access	Maintenance	

## Meaning of the options

- Device tag
  - The header contents is defined in the **Device tag** parameter ( $\rightarrow \square$  133).
- Free text The header contents is defined in the Header text parameter ( $\Rightarrow \square 246$ ).

Header text			A
Navigation		tup $\rightarrow$ Display $\rightarrow$ Header text	
Prerequisite	Header (Ə 🗎 246) = Free	text	
Description	Enter display header text.		
User entry	Character string comprising	numbers, letters and special characters (11)	
Factory setting	TG-Platform		
Additional information	Read access	Operator	
	Write access	Maintenance	

Display interval	
Navigation	Image: Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Factory setting	5 s



This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Read access	Operator
Write access	Operator

Display damping			
Navigation	Image: Boost Setup → Advanced setup →	$\rightarrow$ Display $\rightarrow$ Display damping	
Prerequisite	The device has a local display.		
Description	Set display reaction time to fluctuations in the measured value.		
User entry	0.0 to 999.9 s		
Factory setting	0.0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

Backlight		
Navigation	Image: Bearing of the setupe of the setup of the set	→ Display → Backlight
Prerequisite	The device has a local display.	
Description	Switch the local display backlight on and off.	
Selection	<ul><li>Disable</li><li>Enable</li></ul>	
Factory setting	Enable	
Additional information	Read access	Operator
	Write access	Operator

Contrast display	
Navigation	$ \blacksquare \blacksquare Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Contrast display $
Prerequisite	The device has a local display.
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

User entry	20 to 80 %	
Factory setting	30 %	
Additional information	Read access	Operator
	Write access	Operator

# "System units" submenu

*Navigation*  $\ \ \square \ \ \square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  System units

Units preset		6
Navigation	Image: Barbon Setup → Advance	ced setup $\rightarrow$ System units $\rightarrow$ Units preset
Description	Defines a set of units for length, pressure and temperature.	
Selection	<ul> <li>mm, bar, °C</li> <li>m, bar, °C</li> <li>mm, PSI, °C</li> <li>ft, PSI, °F</li> <li>ft-in-16, PSI, °F</li> <li>ft-in-8, PSI, °F</li> <li>Customer value</li> </ul>	
Factory setting	mm, bar, °C	
Additional information	Read access	Operator
	Write access	Maintenance
		250)

Â

Navigation			
Description	Select distance unit.		
Selection	• m • • • • • • • • • • • • • • • • • •	S units ft in ft-in-16 ft-in-8	
Factory setting	mm		
Additional information	Read access	Operator	
	Write access	Maintenance (if <b>Units preset (→ </b> 🗎 <b>133)</b> = <b>Customer value</b> )	

Pressure unit			
Navigation	Image: Betup → Adva	nced setup $\rightarrow$ System units $\rightarrow$	Pressure unit
Selection	SI units • bar • Pa • kPa • MPa • mbar a	US units psi	Other units • inH2O • inH2O (68°F) • ftH2O (68°F) • mmH2O • mmHg
Factory setting	bar		
Additional information	Read access	Operator	
	Write access	Maintenance (if <b>U</b>	nits preset (→ 🗎 133) = Customer value)

Temperature unit		ſ
Navigation	Image: Setup → Advance	ed setup $\rightarrow$ System units $\rightarrow$ Temperature unit
Description	Select temperature unit	
Selection	SI units ■ °C ■ K	US units ■ °F ■ °R
Factory setting	°C	
Additional information	Read access	Operator
	Write access	Maintenance (if <b>Units preset (→</b> 🗎 133) = Customer value)

Density unit				
Navigation	🗐 😑 Setup → Adv	anced setup $\rightarrow$ System units $\rightarrow$ D	ensity unit	
Description	Select density unit.			
Selection	SI units • g/cm <sup>3</sup> • g/ml • g/l • kg/l • kg/dm <sup>3</sup> • kg/m <sup>3</sup>	US units • lb/ft <sup>3</sup> • lb/gal (us) • lb/in <sup>3</sup> • STon/yd <sup>3</sup>	Other units • °API • SGU	
Factory setting	kg/m³			

Read access	Operator
Write access	Maintenance (if <b>Units preset (→</b> 🗎 <b>133) = Customer value</b> )

#### "Date / time" submenu

Navigation

 $\blacksquare \Box \quad \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Date / time}$ 

Date/time			
Navigation	Image: Bearing and the setup → Advanced setup →	Date / time $\rightarrow$ Date/time	
Description	Displays the device internal real time clock.		
Additional information	Read access	Operator	
	Write access	-	

Set date			
Navigation	□ Setup $\rightarrow$ Advanced	setup $\rightarrow$ Date / time $\rightarrow$ Set date	
Description	Controls the setting of th	Controls the setting of the real-time clock.	
Selection	<ul> <li>Please select</li> <li>Abort</li> <li>Start</li> <li>Confirm time</li> </ul>		
Factory setting	Please select		
Additional information	Read access	Operator	
	Write access	Maintenance	
	<ul> <li>Meaning of the options</li> <li>Please select <ul> <li>Prompts the user to sel</li> </ul> </li> <li>Abort <ul> <li>Discards the entered date</li> </ul> </li> <li>Start <ul> <li>Start</li> <li>Starts the setting of the</li> </ul> </li> <li>Confirm time <ul> <li>Sets the real-time clock</li> </ul> </li> </ul>	ate and time.	

Year		
Navigation	$ \qquad \qquad$	
Prerequisite	Set date (→ 🗎 252) = Start	

Description	Enter the current year.	
User entry	2016 to 2079	
Factory setting	2016	
Additional information	Read access	Operator
	Write access	Maintenance

Month		<u> </u>	
Navigation	$ \qquad \qquad$	$\rightarrow$ Date / time $\rightarrow$ Month	
Prerequisite	Set date (→ 🖺 252) = Start	Set date (→ 🗎 252) = Start	
Description	Enter the current month.		
User entry	1 to 12		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Day		8
Navigation	□ Setup $\rightarrow$ Advanced setu	$p \rightarrow Date / time \rightarrow Day$
Prerequisite	Set date (Ə 🗎 252) = Start	
Description	Enter the current day.	
User entry	1 to 31	
Factory setting	1	
Additional information	Read access	Operator
	Write access	Maintenance

Hour			
Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Date / time $\rightarrow$ Hour	
Prerequisite	Set d	ate (→ 🗎 252) = Start	

Description	Enter the current hour.	
User entry	0 to 23	
Factory setting	0	
Additional information	Read access	Operator
	Write access	Maintenance

Minute		6	
Navigation	$ \qquad \qquad$	$\rightarrow$ Date / time $\rightarrow$ Minute	
Prerequisite	Set date (Ə 🗎 252) = Start	Set date (→ 🗎 252) = Start	
Description	Enter the current minute.		
User entry	0 to 59		
Factory setting	0		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### "SIL confirmation" wizard



 The SIL confirmation wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently not in the SIL- or WHG-locked state.

• The **SIL confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  SIL confirmation

#### "Deactivate SIL/WHG" wizard

- The **Deactivate SIL/WHG** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention" ) which are currently in the SIL- or WHG-locked state.
  - The **Deactivate SIL/WHG** wizard is required to undo the locking of the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Deactiv. SIL/WHG

#### "Administration" submenu

Navigation

Define access code		Â
Navigation	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$	
Description	Define release code for write acce	ess to parameters.
User entry	0 to 9999	
Factory setting	0	
Additional information	Read access	Operator
	Write access	Maintenance
	<ul> <li>If the factory setting is not changed or 0 is defined as the access code, the parameter are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the <i>Maintenance</i> role.</li> <li>The write protection affects all parameters marked with the  symbol in this</li> </ul>	
		en defined, write-protected parameters can only be s entered in the <b>Enter access code</b> parameter
Device reset		<u> </u>

Navigation	Setup → Advanced setup → Administration → Device reset	
Description	Reset the device configuration - either entirely or in part - to a defined state	
Selection	<ul><li>Cancel</li><li>To factory defaults</li><li>Restart device</li></ul>	
Factory setting	Cancel	
Additional information	<ul> <li>Meaning of the options</li> <li>Cancel No action</li> <li>To factory defaults All parameters are reset to the order-code specific factory setting.</li> <li>Restart device The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.</li> </ul>	

Read access	Operator
Write access	Maintenance

#### 15.4 "Diagnostics" menu

Navigation

Image: Barbor Barbo

Actual diagnostics		
Navigation	Image Diagnostics → Actual diag	jnos.
Description	Displays the currently active diagnostic message. If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed.	
Additional information	ditional information Read access Operator	
	Write access	-
	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text	

If several messages are active at the same time, the messages with the highest priority is displayed.

Information on what is causing the message, and remedy measures, can be viewed via the ① symbol on the display.

### Timestamp Navigation Image: Diagnostics → Timestamp

**Description** Displays the timestamp for the currently active diagnostic message.

Additional information	Read access	Operator
	Write access	-

# Previous diagnostics Navigation Image: Diagnostics → Prev.diagnostics Description Displays the diagnostic message for the last diagnostic event that has ended. Additional information Read access Operator Write access

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

If several messages are active at the same time, the messages with the highest priority is displayed.

Information on what is causing the message, and remedy measures, can be viewed via the ① symbol on the display.

Timestamp		
Navigation	B □ Diagnostics → Timestamp	
Description	Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.	
Additional information	Read access Operator	
	Write access	-

art		
□ □ Diagnostics → Time fr. restart		
Indicates how long the device has been in operation since the last time the device was restarted.		
Read access	Operator	
Write access	-	
	<ul> <li>B □ Diagnostics → Time fr. res</li> <li>Indicates how long the device har restarted.</li> <li>Read access</li> </ul>	

Operating time			
Navigation	$\square \square Diagnostics \rightarrow Operating time$		
Description	Indicates how long the device has been in operation.		
Additional information	Read access	Operator	
	Write access	-	

Date/time		
Navigation	$\square$ □ Diagnostics → Date/time	
Description	Displays the device internal real time clock.	
Additional information	Read access	Operator
	Write access	-

#### 15.4.1 "Diagnostic list" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Diagnostic list

Diagnostics 1 to 5	
Navigation	
Description	Displays the currently active diagnostic message with the highest priority.
Additional information	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text
Timestamp 1 to 5	
<b>NY 1</b> /·	

NavigationImage: Diagnostics → Diagnostic list → Timestamp 1 to 5DescriptionTimestamp of the diagnostic message.

#### 15.4.2 "Device information" submenu

Navigation

Device tag		
Navigation	■ Diagnostics $\rightarrow$ Device info -	→ Device tag
Description	Shows the device tag.	
User interface	Character string comprising numbers, letters and special characters	
Factory setting	- none -	
Additional information	Read access	Operator
	Write access	-

Serial number			
Navigation			
Description	The serial number is a unique alphanumerical code identifying the device. It is printed on the nameplate. In combination with the Operations app it allows to access all device related documentation.		
Additional information	Read access	Operator	
	Write access	-	

Firmware version		
Navigation		
Description	Displays the device firmware version installed.	
Additional information	Read access	Operator
	Write access	-

Firmware CRC			
Navigation		■ □ Diagnostics → Device info → Firmware CRC	
Description	Result of the cyclic redundancy check of the firmware.		
Additional information	Read access	Operator	
	Write access	-	

Weight and measures configuration CRC			
Navigation			
Description	Result of the cyclic redundancy check of the weights and measure relevant parameters.		
Additional information	Read access Write access	Operator -	

Device name			
Navigation			
Description	Use this function to display the device name. It can also be found on the nameplate.		
Additional information	Read access Operator		
	Write access	-	

Order code			
Navigation			
Description	Shows the device order code.		
Additional information	Read access	Operator	
	Write access	Service	

Extended order code 1 to 3			A
Navigation	■ Diagnostics $\rightarrow$ Device info	$\rightarrow$ Ext. order cd. 1	
Description	Display the three parts of the extended order code.		
User interface	Character string comprising numbers, letters and special characters		
Additional information	Read access	Operator	
	Write access	Service	


The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

#### 15.4.3 "Simulation" submenu

Read access			Maintenance
Navigation	8 8	Diagno	ostics $\rightarrow$ Simulation

Device alarm simulation		Â
Navigation	Image: Biagnostics → Simulation	→ Dev. alarm sim.
Description	Switch the device alarm on and o	off.
Selection	■ Off ■ On	
Factory setting	Off	
Additional information	Read access	Operator
	Write access	Maintenance

Diagnostic event simulati	on	6
Navigation	Image: Barbon Barbo	n → Diagnostic event
Description	Select a diagnostic event to sim	ulate this event.
Selection	The diagnostic events of the dev	vice
Factory setting	Off	
Additional information	Read access	Operator
	Write access	Maintenance

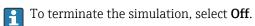

Simulation distance on		
Navigation	$\square \square Diagnostics \rightarrow Simulation \rightarrow Sim distance on$	
Description	Switches the distance simulation on or off.	
Selection	<ul><li>Off</li><li>On</li></ul>	

Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	
Simulation distance			
Navigation	$\blacksquare$ □ Diagnostics → Simulation	$n \rightarrow Sim distance$	
Prerequisite	Simulation distance on ( $\rightarrow$ 🗎	265) = On	
Description	Defines the distance value to be	e simulated.	
User entry	Signed floating-point number		

Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Current output N simulati	on		
Navigation	$ \blacksquare \blacksquare  \text{Diagnostics} \rightarrow \text{Simulation} $	$\rightarrow$ Curr.outp N sim.	
Prerequisite	<ul> <li>The device has an Anlog I/O r</li> <li>Operating mode (→          <sup>™</sup>) 154)</li> </ul>	nodule. = <b>420mA output</b> or <b>HART slave +420mA output</b>	
Description	Switches the simulation of the c	urrent on or off.	
Selection	<ul><li>Off</li><li>On</li></ul>		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

Simulation value		æ
Navigation		
Prerequisite	Current output simulation ( $\rightarrow \oplus 266$ ) = On	
Description	Defines the current to be simulated.	

## User entry 3.4 to 23 mA Factory setting The current at the time the simulation was started. Additional information Read access Operator Write access Maintenance

#### 15.4.4 "Device check" submenu

Navigation 🛛 🗐 🖾 Diagno

 $\blacksquare \Box \quad \text{Diagnostics} \rightarrow \text{Device check}$ 

Start device check		8
Navigation	Image: Barborn Bar	ck → Start dev. check
Description	Starts the device check.	
Selection	<ul><li>No</li><li>Yes</li></ul>	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Result device check			
Navigation	■ Diagnostics $\rightarrow$ D	evice check $\rightarrow$ Result dev.check	
Description	Shows the overall resul	t of the device check.	
Additional information	Read access Operator		
	Write access	-	
		on that detects and reports any interference by unfavorable lere, the amplitudes of measured signals are monitored, which refer lear range.	
Level signal			
Navigation	Image: Barbon Diagnostics → Dependence	evice check $\rightarrow$ Level signal	
Prerequisite	Only visible after a dev	ice check.	

**Description** Shows the result of the device check for the level signal.


 Additional information
 Read access
 Operator

 Write access

Near distance		le l
Navigation	■ Diagnostics $\rightarrow$ Device chee	$k \rightarrow Near distance$
Prerequisite	Only visible after a device check	
Description	Shows the result of the device ch	neck for the near distance area.
Additional information	Read access	Operator
	Write access	-

LRC Mode

æ

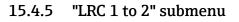

Configuration of the level reference check (LRC) function  $\rightarrow \cong 80$ 

*Navigation* B Diagnostics  $\rightarrow$  LRC  $\rightarrow$  LRC 1 to 2

Navigation	$ \blacksquare \square  \text{Diagnostics} \rightarrow \text{LRC} \rightarrow \text{LRC} $	1 to 2 $\rightarrow$ LRC Mode	
Description	Activates or deactivates one of t	he level reference check (LRC) modes.	
Selection	<ul> <li>Off</li> <li>Compare with level device</li> <li>Compare with level switch</li> <li>Measure reference point *</li> </ul>		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	
Additional information	The option of the Measure refer	ence point is not available for NMS8x.	
			6
Allowed difference			Â
Allowed difference Navigation		1 to 2 → Allowed diff.	8
	-	1 to 2 → Allowed diff. etween the tank level and the reference.	Â
Navigation	-		8
Navigation Description	Defines the allowed difference b		<u></u>
Navigation Description User entry	Defines the allowed difference b		

<sup>\*</sup> Visibility depends on order options or device settings

Check fail threshold			Â
Navigation	$\square \square Diagnostics \rightarrow LRC \rightarrow LRC$	1 to 2 $\rightarrow$ Fail threshold	
Description	Defines how many minutes the comparison has to fail before the check is failed. Note: Only for mode "Compare with level device".		
User entry	1 to 60		
Factory setting	3		
Additional information	Read access Operator		
	Write access	Maintenance	

Reference level source		ß
Navigation		1 to 2 $\rightarrow$ Reference source
Description	Defines the source for the referen	nce level. Note: Only for mode "Compare with level device".
Selection	<ul> <li>No input value</li> <li>HART device 1 level*</li> <li>HART device 2 level*</li> <li>HART device 3 level*</li> <li>HART device 4 level*</li> <li>HART device 5 level*</li> <li>HART device 6 level*</li> <li>HART device 8 level*</li> <li>HART device 9 level*</li> <li>HART device 10 level*</li> <li>HART device 11 level*</li> <li>HART device 13 level*</li> <li>HART device 14 level*</li> <li>HART device 15 level*</li> </ul>	
Factory setting	No input value	
Additional information	Read access	Operator
	Write access	Maintenance

<sup>\*</sup> Visibility depends on order options or device settings

Reference switch source	Reference switch source		A
Navigation	□ Diagnostics $\rightarrow$ LRC $\rightarrow$ LRC 1 to 2 $\rightarrow$ Reference source		
Description	Defines the source for the reference switch. Note: Only for mode "Compare with level switch".		
Selection	<ul> <li>None</li> <li>Digital A1-2</li> <li>Digital A3-4</li> <li>Digital B1-2</li> <li>Digital B3-4</li> <li>Digital C1-2</li> <li>Digital C3-4</li> <li>Digital D1-2</li> <li>Digital D3-4</li> </ul>		
Factory setting	None		
Additional information	Read access	Operator	
	Write access	Maintenance	

Reference switch mode			Ê
Navigation	$ \blacksquare \square  \text{Diagnostics} \rightarrow \text{LRC} \rightarrow \text{LRC} $	1 to 2 $\rightarrow$ Ref. switch mode	
Description	Defines the switch direction for which the reference check is executed. Note: Only for mode "Compare with level switch".		
Selection	<ul> <li>Active -&gt; Inactive</li> <li>Inactive -&gt; Active</li> </ul>		
Factory setting	Active -> Inactive		
Additional information	Read access Operator		
	Write access	Maintenance	

Reference level	
Navigation	
Description	Shows the current reference level. Note: Only for mode "Compare with level device".
User interface	Signed floating-point number
Factory setting	0 mm

Additional information	Read access	Operator
	Write access	-

Reference switch level		ß
Navigation	$ \blacksquare \blacksquare  Diagnostics \rightarrow LRC \rightarrow LRC $	1 to 2 $\rightarrow$ Reference level
Description	Defines the position of the reference switch as level. Note: Only for mode "Compare with level switch".	
User entry	0 to 10 000.00 mm	
Factory setting	0 mm	
Additional information	Read access Operator	
	Write access	Maintenance

Reference point level			Ê
Navigation	$ \blacksquare \square Diagnostics \rightarrow LRC \rightarrow LRC $	1 to 2 $\rightarrow$ Ref. point level	
Description	Defines the position of the reference point as level. Note: Only for mode "Measure reference point".		
User entry	0 to 10 000.00 mm		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Reference switch stat	te
Navigation	□ □ Diagnostics $\rightarrow$ LRC $\rightarrow$ LRC 1 to 2 $\rightarrow$ Ref.switch state
Description	Shows the current state of the reference switch (e.g. "active"). Note: Only for mode "Compare with level switch".
User interface	<ul> <li>Unknown</li> <li>Inactive</li> <li>Active</li> <li>Error</li> </ul>
Factory setting	Unknown

Additional information	Read access	Operator
	Write access	-

Start reference measurem	ent		Ê
Navigation	$ \blacksquare \Box Diagnostics \rightarrow LRC \rightarrow LRC $	1 to 2 $\rightarrow$ Start ref. meas.	
Description	Starts the measurement of the reference point and executes the check. Note: Only for mode "Measure reference point".		
Selection	<ul><li>No</li><li>Yes</li></ul>		
Factory setting	No		
Additional information	Read access	Operator	
	Write access	Maintenance	

Check level			
Navigation	□ □ Diagnostics $\rightarrow$ LRC $\rightarrow$ LRC 1 to 2 $\rightarrow$ Check level		
Description	Shows the tank level at which th	Shows the tank level at which the reference check has been executed.	
User interface	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access	Operator	
	Write access	Development	

Check status	
Navigation	□ B agnostics $\rightarrow$ LRC $\rightarrow$ LRC 1 to 2 $\rightarrow$ Check status
Description	Shows the status of the reference check execution (e.g. "passed").
User interface	<ul> <li>not executed</li> <li>Passed</li> <li>Failed</li> <li>Not possible</li> </ul>
Factory setting	not executed

Additional information	Read access	Operator
	Write access	Development

Check timestamp											
Navigation	$ \blacksquare \square  \text{Diagnostics} \rightarrow \text{LRC} \rightarrow \text{LR} $	RC 1 to 2 $\rightarrow$ Check timestamp									
Description	Shows the timestamp at which	Shows the timestamp at which the reference check has been executed.									
User interface	Character string comprising numbers, letters and special characters										
Factory setting											
Additional information	Read access Operator										
	Write access	-									

#### Index

#### Symbols

#blank# (Parameter)
09
0 % value (Parameter)
4-20mA inputs
4-20mA output
100 % value (Parameter) 151, 159, 182

#### A

А	
Absolute echo amplitude (Parameter)	239
Access code	. 54
Access to the operating menu	46
Accessories	
Communication specific	111
Service specific	111
Actual diagnostics (Parameter)	258
Administration (Submenu)	256
Advanced settings	
Advanced setup (Submenu)	139
Air density (Parameter)	
Air temperature (Parameter)	
Air temperature source (Parameter)	195
Alarm (Submenu)	228
Alarm 1 input source (Parameter)	176
Alarm 2 input source (Parameter)	176
Alarm hysteresis (Parameter)	
Alarm mode (Parameter)	229
Alarm value (Parameter)	232
Alarm value source (Parameter)	231
Alarms (limit evaluation)	. 85
Allowed difference (Parameter)	270
Ambient pressure (Parameter)	204
Analog I/O (Submenu)	154
Analog I/O module	
Analog input 0% value (Parameter)	160
Analog input 100% value (Parameter)	160
Analog input source (Parameter)	156
Analog IP (Submenu)	148
Any error (Parameter)	235
Application	9
Residual risk	. 9
Application (Submenu)	190
Assign PV (Parameter)	181
Assign QV (Parameter)	186
Assign SV (Parameter)	183
Assign TV (Parameter)	185

#### В

Backlight (Parameter)	247
Baudrate (Parameter)	177
Blocking distance (Parameter)	192
Bus termination (Parameter)	171

#### С

Calibration temperature (Parameter)	213
Check fail threshold (Parameter)	271

Check level (Parameter)	274
Check status (Parameter)	274
Check timestamp (Parameter)	275
Cleaning	
Exterior cleaning	106
Clear alarm (Parameter)	
CLG (Submenu)	
CLG corrected level (Parameter)	
CLG correction value (Parameter)	
CLG mode (Parameter)	215
CLG to tank level (Parameter)	215
Commissioning	. 61
Communication (Submenu)	
Communication interface protocol (Parameter)	169
Communication interface protocol variant	
(Parameter)	173
Communication status (Parameter)	142
Configuration (Submenu) 170, 173, 177,	180
Confirm distance (Parameter)	135
Contact type (Parameter)	166
Contrast display (Parameter)	
Covered tank (Parameter)	
CTSh (Submenu)	212
CTSh correction value (Parameter)	
CTSh mode (Parameter)	
Current output N simulation (Parameter)	
Current span (Parameter)	

#### D

Damping factor (Parameter)         153, 162, 236           Date / time (Submenu)         252           Date/time (Parameter)         252, 260
Day (Parameter)
DD
Decimal places 1 (Parameter)
Define access code (Parameter)
Defining the type of measured value
Deformation factor (Parameter)
Delay time echo lost (Parameter)
Density (Submenu)
Density unit (Parameter) 250
Density value (Parameter) 221
Device alarm simulation (Parameter)
Device check (Submenu)
Device Descriptions
Device ID (Parameter)
Device information (Submenu)
Device name (Parameter)
Device replacement
Device reset (Parameter) 256
Device tag (Parameter) 133, 141, 188, 262
Diagnostic event simulation (Parameter) 265
Diagnostic events
Diagnostic information
FieldCare

Diagnostic list	261 94 99 93 94 258 261 95 95 74 90 164
see Write protection switch	
Dip-table (Submenu)	227
Disconnecting HART devices	
Discrete 1 selector (Parameter)	
Display	46
Display (Submenu)	
Display damping (Parameter)	
Display interval (Parameter)	
Display language	
Disposal	108
Distance (Parameter)	
Distance unit (Parameter)	249
Document	
Function	6
Document function	6

#### Ε

Echo suppression (map) 64
Echo tracking (Submenu)
Element position (Submenu) 127
Element position 1 to 24 (Parameter) 127
Element temperature (Submenu)
Element temperature 1 to 24 (Parameter) 127
Empty (Parameter)
Endress+Hauser services
Maintenance
Repair
Enter access code (Parameter)
Error event type (Parameter)
Error value (Parameter)
Errors
Establishing the connection between FieldCare and
the device
Evaluation mode (Parameter) 241
Event level
Explanation
Symbols
Event text
Expected SIL/WHG chain (Parameter) 163, 168
Extended order code 1 (Parameter)
Exterior cleaning
······································

#### F

Failure mode	(Parameter)	•	•				•		•		•	•	•		157	

Firmware CRC (Parameter)	263
Firmware history	105
Firmware version (Parameter)	262
Fixed current (Parameter)	156
Float swap mode (Parameter)	171
Forget device (Parameter)	147
Forget device (Wizard)	147
Format display (Parameter)	242

#### G

9
Gas 1 to 4 (Parameter) 216
Gas 1 to 4 ratio (Parameter) 216
Gas 1 to 4 refractive index (Parameter) 216
Gas phase correction
Gauge current (Parameter) 153
GP 1 name (Parameter) 131
GP Value 1 (Parameter) 131
GP Value 2 (Parameter) 131
GP Value 3 (Parameter) 131
GP Value 4 (Parameter) 132
GP values (Submenu)

#### Η

П	
H alarm (Parameter)	34
H alarm value (Parameter) 23	32
Hardware write protection 5	55
HART date code (Parameter)	39
HART descriptor (Parameter)	38
HART Device(s) (Submenu)	ŧ1
HART devices (Submenu)	ŧ0
HART inputs	57
HART message (Parameter) 18	39
HART output (Submenu)	30
HART short tag (Parameter)	38
HART slave + 4-20mA output 8	37
Header (Parameter)	ŧб
Header text (Parameter)	ŧб
HH alarm (Parameter)	33
HH alarm value (Parameter) 23	32
HH+H alarm (Parameter) 23	34
History reset (Parameter)	ŧ1
Hour (Parameter)	53
HTMS (Submenu) 22	20
HTMS mode (Parameter)	20
Hysteresis (Parameter) 22	22
HyTD (Submenu)	)7
HyTD correction value (Parameter)	)7
HyTD mode (Parameter) 20	)7

#### I

1
Information (Submenu)
Initial settings
Input value (Parameter)
Input value % (Parameter) 159
Input value in mA (Parameter) 161
Input value percent (Parameter) 162
Input/output (Submenu) 140
Intended use
Interference echo suppression (map) 64

К			
Keypad lock	• • • •	 	53

#### L

L
Lalarm (Parameter) 234
L alarm value (Parameter)
Language (Parameter) 242
Level (Submenu)
Level mapping (Parameter)
Level measurement
Level signal (Parameter) 268
Line impedance (Parameter)
Linear expansion coefficient (Parameter)
Linking input values
Liquid temp source (Parameter)
Liquid temperature (Parameter)
LL alarm (Parameter)
LL alarm value (Parameter)
LL+L alarm (Parameter) 235
Local display
see Diagnostics message
see In alarm condition
Locking state symbols
Locking status (Parameter)
Lower interface level (Parameter)
LRC 1 to 2 (Submenu)
LRC Mode (Parameter) 270

#### М

Maintenance	106
Manual air temperature (Parameter)	195
Manual density (Parameter)	220
Manual liquid temperature (Parameter)	
Manual vapor temperature (Parameter)	196
Manual water level (Parameter)	192
Mapping end point (Parameter)	137
Maximum probe temperature (Parameter)	152
Meaning of the keys	3, 50
Measured level (Parameter)	125
Measured lower density (Parameter)	
Measured materials	
Measured middle density (Parameter)	
Measured upper density (Parameter)	129
Measured value status symbols	. 48
Menu	
Diagnostics	
Operation	
Setup	
Messages	
Minimum level (Parameter)	
Minimum pressure (Parameter)	
Minimum probe temperature (Parameter)	
Minute (Parameter)	
Modbus output	
Month (Parameter)	253
Ν	

Nameplat		13
Navigation symbols	••	49

Navigation view	49
Near distance (Parameter)	269
NMT element values (Submenu)	126
No. of preambles (Parameter)	180
Number format (Parameter)	245
Number of devices (Parameter)	140
Numeric editor	51

#### 0

#### P

P1 (bottom) (Parameter) 130, 2	00
P1 (bottom) manual pressure (Parameter) 2	00
P1 (bottom) source (Parameter) 2	00
P1 absolute / gauge (Parameter) 2	01
	01
P1 position (Parameter) 2	01
P3 (top) (Parameter) 130, 2	02
	02
P3 (top) source (Parameter) 2	02
	03
P3 offset (Parameter) 2	03
P3 position (Parameter) 2	03
( (_ (	70
Percent of range (Parameter)	.83
Polling address (Parameter)	41
Present mapping (Parameter) 1	.36
Pressure (Submenu) 130, 2	00
Pressure unit (Parameter) 2	50
Previous diagnostics (Parameter) 2	58
Primary variable (PV) (Parameter) 1	.83
Probe position (Parameter) 1	52
Process value (Parameter) 150, 1	.61
Process variable (Parameter)	.60

Product safety	10
Protecting settings	91
Prothermo temperature	69
PV mA selector (Parameter)	
PV source (Parameter)	180

#### Q

Ouaternary variable (OV)	(Parameter)	187
Qualcinary variable (QV)	(1 urumeter)	107

#### R

Readback value (Parameter)	167
Real-time clock	62
Recalibration	106
Record map (Parameter)	137
	272
Reference level source (Parameter)	271
Reference point level (Parameter)	273
	273
	272
Reference switch source (Parameter)	272
	273
Relative echo amplitude (Parameter)	239
Remedial measures	
Calling up	96
Closing	. 96
Remedy information	98
Repair concept	107
Replacing a device	107
Requirements for personnel	9
Result device check (Parameter)	268
Return	108
RTD	72
RTD connection type (Parameter)	149
RTD type (Parameter)	148

#### S

5	
Safety distance (Parameter)	. 222, 237
Safety instructions	
Basic	9
Safety Instructions (XA)	8
Safety settings (Submenu)	237
Secondary variable (SV) (Parameter)	184
Sensor config (Submenu)	239
Separator (Parameter)	245
Serial number (Parameter)	262
Set date (Parameter)	
Set level (Parameter)	
Setup (Menu)	133
Signal quality (Parameter)	
SIL confirmation (Wizard)	
Simulation	91
Simulation (Submenu)	265
Simulation distance (Parameter)	266
Simulation distance on (Parameter)	265
Simulation value (Parameter)	266
Slot B or C	67
Software ID (Parameter)	178
Standard view	
Measured value display	47

Start device check (Parameter)	268
Start reference measurement (Parameter)	
Starting level (Parameter)	
Status signal (Parameter)	142
Status signals	
Stilling well (Parameter)	
Storage	
Submenu	• • •
Administration	256
Advanced setup	139
Alarm	228
Analog I/O	
Analog IP	
Application	140
CLG	215
Communication	169
Configuration	
CTSh	212
Date / time	252
Density	
Device check	268
Device information	262
Diagnostic list	261
Digital Xx-x	164
Dip-table	227
Display	242
Echo tracking	241
Element position	127
Element temperature	127
GP values	131
HART Device(s)	141
HART devices	140
HART output	180
HTMS	220
HyTD	207
Information	, 239
Input/output	140
Level	, 190
LRC 1 to 2	270
NMT element values	126
Pressure	. 200
Safety settings	237
Sensor config	239
Simulation	265
System units	249
Tank calculation	
Tank configuration	190
Temperature	
V1 input selector	176
WM550 input selector	178
System components	
System components	180
System units (Submenu)	249
	447
т	

#### Т

-	
Table mode (Parameter)	227
Table settings (Parameter)	227
Tank calculation	
Direct level measurement	. 76

Hybrid tank measurement system (HTMS)77Hydrostatic Tank Deformation (HyTD)78Thermal tank shell correction (CTSh)79Tank calculation (Submenu)205Tank configuration (Submenu)190Tank gauging application66Tank level (Parameter)123, 134, 191Tank Level % (Parameter)124Tank reference height (Parameter)124Tank ullage (Parameter)124Tank ullage (Parameter)124Temperature (Submenu)126, 194Temperature unit (Parameter)250Terms related to tank measurement61Text editor52Thermocouple type (Parameter)149Timestamp (Parameter)261Transport14Trouble shooting93
<b>U</b> Units preset (Parameter)
V V1 address (Parameter)
W Water density (Parameter)
263Wire expansion coefficient (Parameter)214Wiring scheme57Wizard57Deactivate SIL/WHG255Forget device147SIL confirmation255Wizard navigation symbols50Wizard view50WM550 address (Parameter)178WM550 output89Workplace safety10Write protection

Write protection switch	55
Y	
Year (Parameter) 2	52



www.addresses.endress.com

