

Description of Device Parameters

Deltabar PMD50

Differential pressure measurement
HART

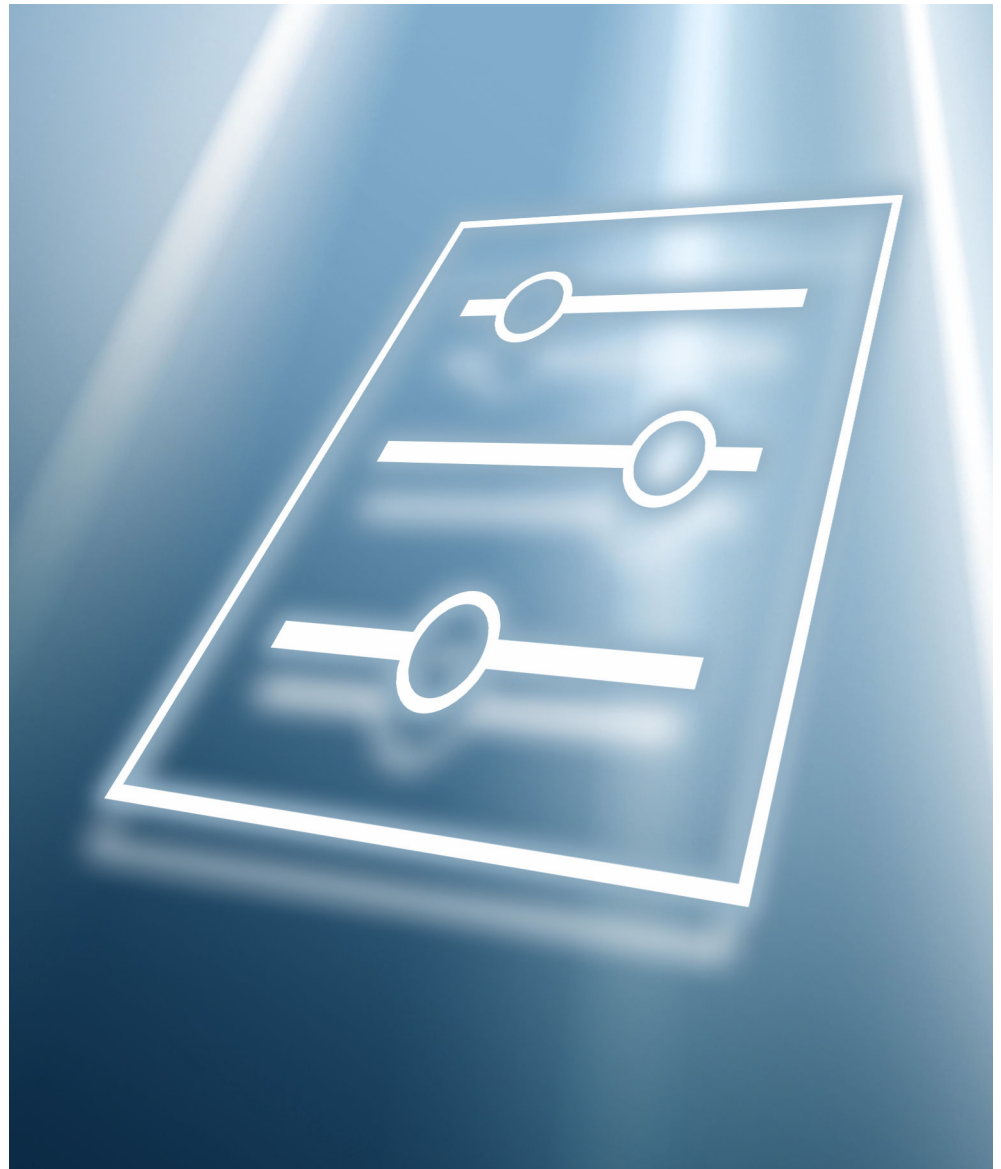


Table of contents

1	About this document	4
1.1	Document function	4
1.2	Target group	4
1.3	Using this document	4
1.4	Symbols used	5
1.5	Documentation	5
2	Overview of the operating menu	6
3	Description of device parameters ...	21
3.1	Guidance	21
3.2	"Guidance" menu	23
3.3	"Diagnostics" menu	45
3.4	"Application" menu	66
3.5	"System" menu	97
Index		111

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters. The document provides a detailed explanation of each individual parameter.

Performance of tasks that require detailed knowledge of the functioning of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases

1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

This document lists the submenus and parameters that are available when the **"Maintenance" option** user role is enabled.



For the operating concept of the operating menus, see the Operating Instructions.


1.3.2 Structure of a parameter description


The individual parts of a parameter description are described in the following section:


- Navigation: Navigation path to the parameter via the local display
- Prerequisite: The parameter is only available under these specific conditions
- Description: Description of the parameter function
- Selection: List of the individual options for the parameter
- User entry: Input range for the parameter
- User interface: Display value/data of the parameter
- Additional information:
 - On individual options
 - On display values/data
 - On the input range
 - On the factory setting
 - On the parameter function


1.4 Symbols used

1.4.1 Symbols for certain types of Information

Additional information: 

Reference to documentation: 

Operation via local display: 


Operation via operating tool: 

Write-protected parameter: 

1.5 Documentation


1.5.1 Standard documentation

Operating Instructions

 The Operating Instructions are available via the Internet: www.endress.com →
Download

1.5.2 Supplementary device-dependent documentation

Special Documentation

 The Special Documentation is available via the Internet: www.endress.com →
Download

2 Overview of the operating menu

Guidance	→ 21
► Commissioning	→ 23
► Device identification	→ 23
Device tag	→ 23
Device name	→ 23
Serial number	→ 23
Extended order code 1	→ 24
Extended order code 2	→ 24
Extended order code 3	→ 24
► Device identification	→ 25
Locking status	→ 25
► Device identification	→ 26
HART short tag	→ 26
HART date code	→ 26
HART descriptor	→ 26
HART message	→ 26
HART address	→ 27
► Measurement adjustments	→ 27
Assign PV	→ 27
Damping	→ 27
► Measurement adjustments	→ 28
Pressure unit	→ 28
Temperature unit	→ 28
► Measurement adjustments	→ 29

Pressure unit	→ 29
Scaled variable unit	→ 29
Free text	→ 30
Temperature unit	→ 30
► Measurement adjustments	→ 31
Zero adjustment	→ 31
Pressure	→ 32
► Output settings	→ 32
Output current transfer function	→ 32
► Output settings	→ 32
Scaled variable transfer function	→ 32
Low flow cut off	→ 33
► Output settings	→ 33
Lower Range Limit	→ 33
Upper Range Limit	→ 33
Minimum span	→ 34
► Output settings	→ 34
Pressure	→ 34
Scaled variable	→ 34
► Output settings	→ 34
Lower range value output	→ 34
Upper range value output	→ 35
Lower Range Limit	→ 35
Upper Range Limit	→ 35
Minimum span	→ 35

▶ Output settings	→ 36
Scaled variable transfer function	→ 36
Pressure value 1	→ 36
Scaled variable value 1	→ 36
Pressure value 2	→ 37
Scaled variable value 2	→ 37
Lower Range Limit	→ 37
Upper Range Limit	→ 37
Minimum span	→ 37
▶ Output settings	→ 38
Lower range value output	→ 38
Upper range value output	→ 38
Current range output	→ 38
Failure behavior current output	→ 39
Failure current	→ 39
Loop current mode	→ 39
Assign HART variables?	→ 39
▶ Output settings	→ 40
Process variable output current	→ 40
Current range output	→ 40
Lower range value output	→ 40
Upper range value output	→ 40
Failure behavior current output	→ 41
Failure current	→ 41

Loop current mode	→ 41
Assign HART variables?	→ 41
► Output settings	→ 42
Assign PV	→ 42
Assign SV	→ 42
Assign TV	→ 43
Assign QV	→ 44
Diagnostics	→ 45
► Active diagnostics	→ 45
Active diagnostics	→ 45
Timestamp	→ 45
Previous diagnostics	→ 46
Timestamp	→ 46
Operating time from restart	→ 46
Operating time	→ 47
► Event logbook	→ 47
Filter options	→ 47
► Minimum/maximum values	→ 48
Pressure min	→ 48
Counter limit underruns sensor Pmin	→ 48
Counter underruns of user limit Pmin	→ 48
Minimum sensor temperature	→ 49
Counter limit underruns sensor Tmin	→ 49
Counter underruns of user limit Tmin	→ 49
Minimum terminal voltage	→ 49

Minimum electronics temperature	→ 49
Reset user defined counters P and T	→ 50
Pressure max	→ 50
Counter limit overruns sensor Pmax	→ 50
Counter overruns of user limit Pmax	→ 50
Maximum sensor temperature	→ 50
Counter limit overruns sensor Tmax	→ 51
Counter overruns of user limit Tmax	→ 51
Maximum terminal voltage	→ 51
Maximum electronics temperature	→ 51
► Simulation	→ 52
Simulation	→ 52
Value pressure simulation	→ 52
Value current output	→ 52
Diagnostic event simulation	→ 52
► Diagnostic settings	→ 53
► Properties	→ 53
SSD Out of range delay time	→ 53
SSD Monitoring delay time	→ 53
500 Process alert pressure	→ 53
Low alert value	→ 54
High alert value	→ 54
501 Process alert scaled variable	→ 54
Low alert value	→ 54
High alert value	→ 55

User temperature process alert	→ 55
Low alert value	→ 55
High alert value	→ 55
806 Diagnostic behavior	→ 56
806 Diagnostic behavior	→ 56
806 Event category	→ 56
806 Event category	→ 56
806 Event delay	→ 56
► Configuration	→ 57
► Configuration	→ 57
500 Diagnostic behavior	→ 57
500 Diagnostic behavior	→ 57
500 Diagnostic behavior	→ 57
500 Diagnostic behavior	→ 57
500 Event category	→ 57
500 Event category	→ 57
500 Event category	→ 57
500 Event category	→ 57
501 Diagnostic behavior	→ 57
501 Diagnostic behavior	→ 57
501 Diagnostic behavior	→ 57
501 Diagnostic behavior	→ 57
501 Event category	→ 58
501 Event category	→ 58
501 Event category	→ 58

501 Event category	→ 58
502 Diagnostic behavior	→ 58
502 Diagnostic behavior	→ 58
502 Diagnostic behavior	→ 58
502 Diagnostic behavior	→ 58
502 Event category	→ 58
502 Event category	→ 58
502 Event category	→ 58
502 Event category	→ 58
► Process	→ 59
806 Diagnostic behavior	→ 59
806 Diagnostic behavior	→ 59
806 Diagnostic behavior	→ 59
806 Diagnostic behavior	→ 59
806 Diagnostic behavior	→ 59
806 Diagnostic behavior	→ 59
806 Event category	→ 59
806 Event category	→ 59
806 Event category	→ 59
806 Event category	→ 59
806 Event category	→ 59
806 Event category	→ 59
822 Diagnostic behavior	→ 59
822 Event category	→ 60
Sensor pressure range behavior	→ 60

	841 Event category	→ 60
	900 Event category	→ 61
	900 Event category	→ 61
	900 Event category	→ 61
	900 Event category	→ 61
	900 Diagnostic behavior	→ 61
	900 Diagnostic behavior	→ 61
	900 Diagnostic behavior	→ 61
	900 Diagnostic behavior	→ 61
	906 Diagnostic behavior	→ 61
	906 Diagnostic behavior	→ 61
	906 Diagnostic behavior	→ 61
	906 Diagnostic behavior	→ 61
	906 Event category	→ 61
	906 Event category	→ 61
	906 Event category	→ 61
	906 Event category	→ 61
Application		→ 66
► Measuring units		→ 66
Pressure unit		→ 66
Decimal places pressure		→ 66
Temperature unit		→ 66
Scaled variable unit		→ 67
Free text		→ 68
Decimal places scaled variable		→ 68
























▶ Measured values	→ 69
Pressure	→ 69
Scaled variable	→ 69
Sensor temperature	→ 69
Terminal voltage 1	→ 69
Terminal current	→ 70
Electronics temperature	→ 70
▶ Sensor	→ 70
▶ Basic settings	→ 70
Output current transfer function	→ 70
Damping	→ 71
HP/LP swap	→ 71
▶ Sensor calibration	→ 71
Zero adjustment	→ 71
Calibration offset	→ 72
Zero adjustment offset	→ 72
Sensor Trim Reset	→ 72
Lower sensor trim measured value	→ 72
Lower sensor trim	→ 73
Upper sensor trim measured value	→ 73
Upper sensor trim	→ 74
▶ Sensor limits	→ 74
Lower Range Limit	→ 74
Upper Range Limit	→ 74
Minimum span	→ 75



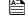
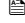
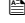
Sensor temperature lower range limit	→ 75
Sensor temperature upper range limit	→ 75
► Scaled variable	→ 75
Assign PV	→ 75
Scaled variable unit	→ 76
Free text	→ 76
Pressure	→ 77
Scaled variable transfer function	→ 77
Lower range value output	→ 77
Upper range value output	→ 77
Activate table	→ 78
Pressure value 1	→ 78
Scaled variable value 1	→ 78
Pressure value 2	→ 78
Scaled variable value 2	→ 78
Low flow cut off	→ 79
Pressure	→ 79
Scaled variable	→ 79
► Wet calibration	→ 79
Zero	→ 79
Pressure value 1	→ 79
Span	→ 80
Pressure value 2	→ 80
Zero	→ 79
Lower range value output	→ 80

Span	→ 80
Upper range value output	→ 80
► Current output	→ 82
Assign PV	→ 82
Measuring mode current output	→ 82
Current range output	→ 83
Lower range value output	→ 83
Upper range value output	→ 83
Failure behavior current output	→ 83
Failure current	→ 84
Output current	→ 84
Terminal current	→ 84
► HART output	→ 85
► Configuration	→ 85
HART address	→ 85
HART short tag	→ 85
Device tag	→ 85
No. of preambles	→ 86
Loop current mode	→ 86
► HART output	→ 86
Assign PV	→ 86
Primary variable (PV)	→ 87
Assign SV	→ 87
Secondary variable (SV)	→ 87
Assign TV	→ 88

Tertiary variable (TV)	→ 88
Assign QV	→ 88
Quaternary variable (QV)	→ 89
► Burst configuration 1	→ 89
Burst mode 1	→ 89
Burst command 1	→ 90
Burst variable 0	→ 91
Burst variable 1	→ 91
Burst variable 2	→ 91
Burst variable 3	→ 92
Burst variable 4	→ 92
Burst variable 5	→ 92
Burst variable 6	→ 92
Burst variable 7	→ 92
Burst trigger mode	→ 93
Burst trigger level	→ 93
Min. update period	→ 93
Max. update period	→ 94
► Information	→ 94
Device ID	→ 94
Device type	→ 94
Device revision	→ 95
HART short tag	→ 95
HART revision	→ 95
HART descriptor	→ 95

	HART message	→ 96
	HART date code	→ 96
System		→ 97
▶ Device management		→ 97
	Device tag	→ 97
	Locking status	→ 97
	Configuration counter	→ 98
	Reset device	→ 98
▶ User management		→ 99
	User role	→ 99
	Password	→ 99
	Enter access code	→ 99
	Status password entry	→ 100
	New password	→ 100
	Confirm new password	→ 100
	Status password entry	→ 100
	Old password	→ 100
	New password	→ 100
	Confirm new password	→ 100
	Status password entry	→ 100
	Reset password	→ 101
	Status password entry	→ 100
	Old password	→ 100
	Status password entry	→ 100
▶ Display		→ 101

Language	→  101
Format display	→  102
Value 1 display	→  102
Value 2 display	→  103
Value 3 display	→  103
Value 4 display	→  104
Contrast display	→  104
► Geolocation	→  105
Process Unit Tag	→  105
Location Description	→  105
Longitude	→  105
Latitude	→  105
Altitude	→  106
Location method	→  106
► Information	→  106
Device name	→  106
Manufacturer	→  107
Serial number	→  107
Order code	→  107
Firmware version	→  108
Hardware version	→  108
Extended order code 1	→  108
Extended order code 2	→  108

Extended order code 3	→  109
Checksum	→  109
► Software configuration	→  109
Activate SW option	→  109
Software option overview	→  110

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the operating tool.

The operating menu is dynamic and adapts the choice of parameters to the selected options.

3.1 Guidance


The Guidance main menu contains functions which enable users to perform basic tasks swiftly, e.g. commissioning.

These are primarily guided wizards and cross-subject special functions.






Navigation  Guidance

3.1.1 Overview of the operating menu






"Guidance" menu

Commissioning (→  23)







"Diagnostics" menu

- Active diagnostics (→  45)
- Event logbook (→  47)
- Minimum/maximum values (→  48)
- Simulation (→  52)
- Diagnostic settings (→  53)

"Application" menu


- Measuring units (→  66)
- Measured values (→  69)
- Sensor (→  70)
- Current output (→  82)
- HART output (→  85)

"System" menu

- Device management (→  97)
- User management (→  99)
- Display (→  101)
- Geolocation (→  105)
- Information (→  94)
- Software configuration (→  109)



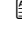
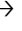










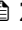
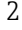




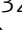





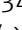



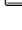











3.1.2 Commissioning

Run this wizard to put the device into operation. Enter the appropriate value in each parameter or select the appropriate option.

 If the wizard is canceled before all the necessary parameters have been configured, any settings already made are saved. For this reason, the device may then be in an undefined state!

In such situations, it is advisable to reset the device to the factory default settings.

The following parameters are configured in the Commissioning wizard:

- Device identification (→  23)
 - Device tag (→  23)
 - Device name (→  23)
 - Serial number (→  23)
 - Extended order code 1 (→  24)
 - Extended order code 2 (→  24)
 - Extended order code 3 (→  24)
 - Locking status (→  25)
 - HART short tag (→  26)
 - HART date code (→  26)
 - HART descriptor (→  26)
 - HART message (→  26)
 - HART address (→  27)
- Measurement adjustments (→  27)
 - Assign PV (→  27)
 - Damping (→  27)
 - Pressure unit (→  28)
 - Temperature unit (→  28)
 - Scaled variable unit (→  29)
 - Zero adjustment (→  31)
 - Pressure (→  32)
- Output settings (→  32)
 - Output current transfer function (→  32)
 - Lower Range Limit (→  33)
 - Upper Range Limit (→  33)
 - Minimum span (→  34)
 - Pressure (→  34)
 - Scaled variable (→  34)
 - Lower range value output (→  34)
 - Upper range value output (→  35)
 - Scaled variable transfer function (→  32)
 - Pressure value 1 (→  36)
 - Current range output (→  38)
 - Failure behavior current output (→  39)
 - Failure current (→  39)
 - Loop current mode (→  39)
 - Assign HART variables? (→  39)
 - Process variable output current (→  40)
 - Assign PV (→  27)
 - Assign SV (→  42)
 - Assign TV (→  43)
 - Assign QV (→  44)


3.2 "Guidance" menu

Navigation  Guidance


3.2.1 "Commissioning" wizard

Navigation  Guidance → Commissioning

"Device identification" wizard

Navigation  Guidance → Commissioning → Device ident.


Device tag

Navigation  Guidance → Commissioning → Device ident. → Device tag

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

User entry Character string comprising numbers, letters and special characters (32)


Device name


Navigation  Guidance → Commissioning → Device ident. → Device name

Description Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.










User interface Max. 32 characters such as letters or numbers.

Serial number

Navigation  Guidance → Commissioning → Device ident. → Serial number


Description Displays the serial number of the measuring device.
 The number can be found on the nameplate of the sensor and transmitter.

User interface Max. 11-digit character string comprising letters and numbers.


Additional information	<p><i>Description</i></p> <p> Uses of the serial number</p> <ul style="list-style-type: none"> ▪ To identify the measuring device quickly, e.g. when contacting Endress+Hauser. ▪ To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer
<hr/>	
Extended order code 1	
Navigation	 Guidance → Commissioning → Device ident. → Ext. order cd. 1
Description	The extended order code is an alphanumeric code containing all information to identify the device and its options.
User interface	Character string
Factory setting	–
Additional information	<p><i>Description</i></p> <p>The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.</p>
<hr/>	
Extended order code 2	
Navigation	 Guidance → Commissioning → Device ident. → Ext. order cd. 2
Description	<p>The extended order code is an alphanumeric code containing all information to identify the device and its options.</p> <p> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.</p>
User interface	Character string
Factory setting	–
<hr/>	
Extended order code 3	
Navigation	 Guidance → Commissioning → Device ident. → Ext. order cd. 3
Description	<p>The extended order code is an alphanumeric code containing all information to identify the device and its options.</p> <p> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.</p>
User interface	Character string

Factory setting -

"Device identification" wizard

Navigation  Guidance → Commissioning → Device ident.

Locking status


Navigation  Guidance → Commissioning → Device ident. → Locking status

Description Displays the active write protection.

- User interface**
- Hardware locked
 - Safety locked
 - Temporarily locked

Additional information *User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.


 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.


Selection


Function scope of the "Locking status" parameter


Options	Description
None	The access status displayed in the Access status display parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.



"Device identification" wizard


Navigation  Guidance → Commissioning → Device ident.


HART short tag 


Navigation	 Guidance → Commissioning → Device ident. → HART short tag
Description	Defines the short tag for the measuring point. Maximum length: 8 characters Allowed characters: A-Z, 0-9, certain special characters
User entry	Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation marks, @, %).


HART date code 








Navigation	 Guidance → Commissioning → Device ident. → HART date code
Description	Date of the last configuration change
User entry	Character string comprising numbers, letters and special characters (10)
Additional information	Date format: YYYY-MM-DD  Make sure you adhere to this format when entering the date. Otherwise errors may occur in individual HART commands.

HART descriptor 


Navigation	 Guidance → Commissioning → Device ident. → HART descriptor
Description	Description for the measuring point.
User entry	Character string comprising numbers, letters and special characters (16)


HART message 


Navigation	 Guidance → Commissioning → Device ident. → HART message
Description	A HART message which is sent via the HART protocol when requested by the master.
User entry	Character string comprising numbers, letters and special characters (32)

HART address 	
Navigation	 Guidance → Commissioning → Device ident. → HART address
Description	Define the HART address of the device.
User entry	0 to 63
Additional information	<ul style="list-style-type: none"> ■ The measured value can only be transmitted via the current value if the address is set to "0". The current is fixed at 4.0 mA for all other addresses (Multidrop mode). ■ Only addresses in the range 0 to 15 are permitted for a system according to HART 5.0. ■ All addresses in the range 0 to 63 are permitted for a system with HART 6.0 and higher.
"Measurement adjustments" wizard	
	<i>Navigation</i>  Guidance → Commissioning → Meas. adjust.
Assign PV 	
Navigation	 Guidance → Commissioning → Meas. adjust. → Assign PV
Description	Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).
Selection	<ul style="list-style-type: none"> ■ Pressure ■ Scaled variable
Damping 	
Navigation	 Guidance → Commissioning → Meas. adjust. → Damping
Description	<p>The damping is effective before the measured value is further processed, i.e., before the following processes:</p> <ul style="list-style-type: none"> - Scaling - Limit value monitoring - Forwarding to display - Forwarding to Analog Input Block <p>Note: The Analog Input Block has its own "Damping" parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.</p>
User entry	0 to 999.0 s


"Measurement adjustments" wizard

Navigation  Guidance → Commissioning → Meas. adjust.

Pressure unit 

Navigation  Guidance → Commissioning → Meas. adjust. → Pressure unit

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ MPa ■ kPa ■ Pa ■ bar ■ mbar ■ torr ■ atm ■ kgf/cm² ■ gf/cm² 	<i>US units</i> <ul style="list-style-type: none"> psi 	<i>Other units</i> <ul style="list-style-type: none"> ■ inH2O ■ inH2O (4°C) ■ mmH2O ■ mmH2O (4°C) ■ mH2O ■ mH2O (4°C) ■ ftH2O ■ inHg ■ mmHg
------------------	---	---	--

Temperature unit 

Navigation  Guidance → Commissioning → Meas. adjust. → Temperature unit

Description Use this function to select the unit for the temperature.


Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ °C ■ K 	<i>US units</i> <ul style="list-style-type: none"> °F
------------------	---	--

Factory setting Country-specific:


- °C
- °F

Additional information *Selection*

"Measurement adjustments" wizard


Navigation  Guidance → Commissioning → Meas. adjust.

Pressure unit

Navigation  Guidance → Commissioning → Meas. adjust. → Pressure unit

Selection	<i>SI units</i>	<i>US units</i>	<i>Other units</i>
	<ul style="list-style-type: none"> ■ MPa ■ kPa ■ Pa ■ bar ■ mbar ■ torr ■ atm ■ kgf/cm² ■ gf/cm² 	<ul style="list-style-type: none"> psi 	<ul style="list-style-type: none"> ■ inH₂O ■ inH₂O (4°C) ■ mmH₂O ■ mmH₂O (4°C) ■ mH₂O ■ mH₂O (4°C) ■ ftH₂O ■ inHg ■ mmHg

Scaled variable unit

Navigation  Guidance → Commissioning → Meas. adjust. → Scaled Unit

Description Use "Free text", first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection	SI units	US units	Imperial units
	<ul style="list-style-type: none"> ■ % ■ mm ■ cm ■ m ■ l ■ hl ■ m³ ■ g ■ kg ■ t ■ g/s ■ kg/s ■ kg/min ■ kg/h ■ t/min ■ t/h ■ t/d ■ m³/s ■ m³/min ■ m³/h ■ m³/d ■ l/s ■ l/min ■ l/h ■ Nm³/h ■ NI/h ■ Sm³/s ■ Sm³/min ■ Sm³/h ■ Sm³/d ■ Nm³/s ■ g/cm³ ■ kg/m³ ■ Nm³/min ■ Nm³/d 	<ul style="list-style-type: none"> ■ ft ■ in ■ ft³ ■ gal (us) ■ bbl (us;oil) ■ oz ■ lb ■ STon ■ lb/s ■ lb/min ■ lb/h ■ STon/min ■ STon/h ■ STon/d ■ ft³/s ■ ft³/min ■ ft³/h ■ ft³/d ■ gal/s (us) ■ gal/min (us) ■ gal/h (us) ■ gal/d (us) ■ bbl/s (us;oil) ■ bbl/min (us;oil) ■ bbl/h (us;oil) ■ bbl/d (us;oil) ■ Sft³/min ■ Sft³/h ■ Sft³/d 	<ul style="list-style-type: none"> ■ gal (imp) ■ gal/s (imp) ■ gal/min (imp) ■ gal/h (imp)
	<p><i>Custom-specific units</i></p> <p>Free text</p>		

Free text
**Navigation**

Guidance → Commissioning → Meas. adjust. → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Temperature unit
**Navigation**


Guidance → Commissioning → Meas. adjust. → Temperature unit

Description


Use this function to select the unit for the temperature.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ °C ■ K 	<i>US units</i> °F
Factory setting	Country-specific: <ul style="list-style-type: none"> ■ °C ■ °F 	
Additional information	<i>Selection</i>	


"Measurement adjustments" wizard

Navigation  Guidance → Commissioning → Meas. adjust.


Zero adjustment

Navigation	 Guidance → Commissioning → Meas. adjust. → Zero adjustment
Description	Due to the mounting position of the measuring instrument, a pressure shift may occur. The pressure shift can be corrected with the zero adjustment.
Selection	<ul style="list-style-type: none"> ■ No ■ Confirm

Pressure

Navigation  Guidance → Commissioning → Meas. adjust. → Pressure

"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings

Output current transfer function

Navigation  Guidance → Commissioning → Output settings → Curr. trans.func

Description


Linear
The linear pressure signal is used for the current output. The flow must be calculated in the evaluation unit.

Square root - differential pressure only
The root flow signal is used for the current output. The 'Flow (square root)' current signal is indicated on the on-site display with a root symbol.

User interface

- Linear
- Square root *

"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings

Scaled variable transfer function



Navigation  Guidance → Commissioning → Output settings → Scaled function

Description

"Linear"
The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit.

"Square root" (Deltabar)
The root flow signal is used for the output signal. The "Flow (square root)" output signal is indicated on the on-site display with a root symbol.

"Table"
The output is defined according to the scaled variable / pressure table entered.

* Visibility depends on order options or device settings

- Selection**
- Linear
 - Square root *
 - Table


Low flow cut off

Navigation  Guidance → Commissioning → Output settings → Low flow cut off


Description When activated, this function suppresses small flows which can lead to large fluctuations in the measured value.

User entry 0.0 to 50.0 %

"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings


Lower Range Limit

Navigation  Guidance → Commissioning → Output settings → LRL

Description Indicates the lower measuring limit of the sensor.

User interface Signed floating-point number

Upper Range Limit


Navigation  Guidance → Commissioning → Output settings → URL

Description Indicates the upper measuring limit of the sensor.


User interface Signed floating-point number

* Visibility depends on order options or device settings


Minimum span


Navigation	 Guidance → Commissioning → Output settings → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number

"Output settings" wizard


Navigation  Guidance → Commissioning → Output settings


Pressure




Navigation	 Guidance → Commissioning → Output settings → Pressure
User entry	Signed floating-point number

Scaled variable





Navigation	 Guidance → Commissioning → Output settings → Scaled variable
User entry	Signed floating-point number

"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings

Lower range value output



Navigation	 Guidance → Commissioning → Output settings → Low.range outp
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

Upper range value output



Navigation	Guidance → Commissioning → Output settings → Upp.range outp
Description	Depending on which variable has been selected as "Process variable output current ", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

Lower Range Limit

Navigation	Guidance → Commissioning → Output settings → LRL
Description	Indicates the lower measuring limit of the sensor.
User interface	Signed floating-point number


Upper Range Limit


Navigation	Guidance → Commissioning → Output settings → URL
Description	Indicates the upper measuring limit of the sensor.
User interface	Signed floating-point number

Minimum span

Navigation	Guidance → Commissioning → Output settings → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number

"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings

Scaled variable transfer function 

Navigation  Guidance → Commissioning → Output settings → Scaled function

Description


"Linear"
The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit.


"Square root" (Deltabar)
The root flow signal is used for the output signal. The "Flow (square root)" output signal is indicated on the on-site display with a root symbol.

"Table"
The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

Pressure value 1 

Navigation  Guidance → Commissioning → Output settings → Pressure 1


Description

Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this pressure.

User entry

Signed floating-point number

Scaled variable value 1

Navigation  Guidance → Commissioning → Output settings → Scaled 1

Description


Enter value for the first scaling point. This value is allocated to "Pressure value 1".

User interface


Signed floating-point number

* Visibility depends on order options or device settings


Pressure value 2

Navigation	 Guidance → Commissioning → Output settings → Pressure 2
Description	Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to this pressure.
User entry	Signed floating-point number


Scaled variable value 2

Navigation	 Guidance → Commissioning → Output settings → Scaled 2
Description	Enter value for the second scaling point. This value is allocated to "Pressure value 2".
User entry	Signed floating-point number


Lower Range Limit

Navigation	 Guidance → Commissioning → Output settings → LRL
Description	Indicates the lower measuring limit of the sensor.
User interface	Signed floating-point number


Upper Range Limit

Navigation	 Guidance → Commissioning → Output settings → URL
Description	Indicates the upper measuring limit of the sensor.
User interface	Signed floating-point number


Minimum span


Navigation	 Guidance → Commissioning → Output settings → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number


"Output settings" wizard


Navigation  Guidance → Commissioning → Output settings


Lower range value output 

Navigation	 Guidance → Commissioning → Output settings → Low.range outp
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

Upper range value output 

Navigation	 Guidance → Commissioning → Output settings → Upp.range outp
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

Current range output 

Navigation	 Guidance → Commissioning → Output settings → Current range
Description	<p>Defines the current range used to transmit the measured or calculated value. In brackets are indicated the "low saturation value" and the "high saturation value". If Measured value ≤ "low saturation", the output current is set to "low saturation". If Measured value ≥ "high saturation", the output current is set to "high saturation".</p> <p>Note: Currents below 3.6 mA or above 21.5 mA can be used to signal an alarm.</p>
Selection	<ul style="list-style-type: none"> ■ 4...20 mA (4...20.5 mA) ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA)

Failure behavior current output



Navigation	Guidance → Commissioning → Output settings → Failure behav.
Description	Defines which current the output assumes in the case of an error. Min: < 3.6 mA Max: >21.5 mA Note: The hardware DIP Switch for alarm current has priority over software setting.
Selection	<ul style="list-style-type: none">■ Min.■ Max.

Failure current



Navigation	Guidance → Commissioning → Output settings → Failure current
Description	Enter current output value in alarm condition
User entry	21.5 to 23 mA


Loop current mode

Navigation	Guidance → Commissioning → Output settings → Loop curr mode
Description	If Loop current mode is disabled, Multi-drop communication mode is activated. Multi-drop is a HART digital communication mode where multiple devices may share the same pair of wires for power and communications. In this mode the output current is fixed.
User interface	<ul style="list-style-type: none">■ Disable■ Enable


Assign HART variables?

Navigation	Guidance → Commissioning → Output settings → Assign HART var?
Description	Up to four HART variables can be transmitted via the HART protocol. Select "Yes" to show/assign measuring variables to these HART variables.
Selection	<ul style="list-style-type: none">■ No■ Yes


"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings


Process variable output current

Navigation	 Guidance → Commissioning → Output settings → Proc.var.curr.
Description	Determines which process variable is transmitted via the current output.
User interface	<ul style="list-style-type: none"> ■ Pressure ■ Scaled variable


Current range output

Navigation	 Guidance → Commissioning → Output settings → Current range
Description	<p>Defines the current range used to transmit the measured or calculated value. In brackets are indicated the “low saturation value” and the “high saturation value”. If Measured value ≤ “low saturation”, the output current is set to “low saturation”. If Measured value ≥ “high saturation”, the output current is set to “high saturation”.</p> <p>Note: Currents below 3.6 mA or above 21.5 mA can be used to signal an alarm.</p>
Selection	<ul style="list-style-type: none"> ■ 4...20 mA (4...20.5 mA) ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA)

Lower range value output

Navigation	 Guidance → Commissioning → Output settings → Low.range outp
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

Upper range value output

Navigation	 Guidance → Commissioning → Output settings → Upp.range outp
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry Signed floating-point number

Failure behavior current output

Navigation  Guidance → Commissioning → Output settings → Failure behav.

Description Defines which current the output assumes in the case of an error.
 Min: < 3.6 mA
 Max: >21.5 mA
 Note: The hardware DIP Switch for alarm current has priority over software setting.

Selection

- Min.
- Max.

Failure current

Navigation  Guidance → Commissioning → Output settings → Failure current

Description Enter current output value in alarm condition

User entry 21.5 to 23 mA

Loop current mode

Navigation  Guidance → Commissioning → Output settings → Loop curr mode

Description If Loop current mode is disabled, Multi-drop communication mode is activated. Multi-drop is a HART digital communication mode where multiple devices may share the same pair of wires for power and communications. In this mode the output current is fixed.

User interface

- Disable
- Enable


Assign HART variables?

Navigation  Guidance → Commissioning → Output settings → Assign HART var?


Description Up to four HART variables can be transmitted via the HART protocol. Select "Yes" to show/assign measuring variables to these HART variables.

- Selection**
- No
 - Yes

"Output settings" wizard

Navigation  Guidance → Commissioning → Output settings


Assign PV

Navigation  Guidance → Commissioning → Output settings → Assign PV

Description Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).

- Selection**
- Pressure
 - Scaled variable

Assign SV

Navigation  Guidance → Commissioning → Output settings → Assign SV


Description Use this function to select a measured variable (HART device variable) for the secondary dynamic variable (SV).

- Selection**
- Pressure
 - Scaled variable
 - Sensor temperature
 - Sensor pressure
 - Electronics temperature
 - Terminal current^{*}
 - Terminal voltage^{*}
 - Median of pressure signal^{*}
 - Noise of pressure signal^{*}
 - Signal noise detected^{*}
 - Percent of range
 - Loop current
 - Not used

* Visibility depends on order options or device settings

Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Sensor pressure option Sensor Pressure is the raw signal from sensor before damping and position adjustment. ■ Terminal current option The terminal current is the read-back current on terminal block. ■ Signal noise detected option 0 % - Signal noise is within the permissible range. 100 % - Signal noise is outside of the permissible range. ■ Loop current option The loop current is the output current set by the applied pressure.
-------------------------------	---

Assign TV

Navigation	 Guidance → Commissioning → Output settings → Assign TV
Description	Use this function to select a measured variable (HART device variable) for the tertiary (third) dynamic variable (TV).
Selection	<ul style="list-style-type: none"> ■ Pressure ■ Scaled variable ■ Sensor temperature ■ Sensor pressure ■ Electronics temperature ■ Terminal current * ■ Terminal voltage * ■ Median of pressure signal * ■ Noise of pressure signal * ■ Signal noise detected * ■ Percent of range ■ Loop current ■ Not used
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Sensor pressure option Sensor Pressure is the raw signal from sensor before damping and position adjustment. ■ Terminal current option The terminal current is the read-back current on terminal block. ■ Signal noise detected option 0 % - Signal noise is within the permissible range. 100 % - Signal noise is outside of the permissible range. ■ Loop current option The loop current is the output current set by the applied pressure.

* Visibility depends on order options or device settings

Assign QV

**Navigation**

Guidance → Commissioning → Output settings → Assign QV

Description

Use this function to select a measured variable (HART device variable) for the quaternary (fourth) dynamic variable (QV).

Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current *
- Terminal voltage *
- Median of pressure signal *
- Noise of pressure signal *
- Signal noise detected *
- Percent of range
- Loop current
- Not used

Additional information

Selection

- **Sensor pressure** option
Sensor Pressure is the raw signal from sensor before damping and position adjustment.
- **Terminal current** option
The terminal current is the read-back current on terminal block.
- **Signal noise detected** option
0 % - Signal noise is within the permissible range.
100 % - Signal noise is outside of the permissible range.
- **Loop current** option
The loop current is the output current set by the applied pressure.

* Visibility depends on order options or device settings





3.3 "Diagnostics" menu

Navigation  Diagnostics





3.3.1 "Active diagnostics" submenu

Navigation  Diagnostics → Active diagnos.






Active diagnostics

Navigation	  Diagnostics → Active diagnos. → Active diagnos.
Prerequisite	A diagnostic event has occurred.
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<p><i>User interface</i></p> <p> Additional pending diagnostic messages can be viewed in the Diagnostic list submenu.</p> <p><i>Example</i></p> <p>For the display format:  F271 Main electronic failure</p>





Timestamp

Navigation	  Diagnostics → Active diagnos. → Timestamp
Description	Displays the operating time when the current diagnostic message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<p><i>User interface</i></p> <p> The diagnostic message can be viewed via the Actual diagnostics parameter (→  45).</p> <p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>



Previous diagnostics

Navigation	  Diagnostics → Active diagnos. → Prev.diagnostics
Prerequisite	Two diagnostic events have already occurred.
Description	Displays the diagnostic message that occurred before the current message.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<p><i>User interface</i></p> <p> Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p> <p><i>Example</i></p> <p>For the display format:  F271 Main electronic failure</p>



Timestamp

Navigation	  Diagnostics → Active diagnos. → Timestamp
Description	Displays the operating time when the last diagnostic message before the current message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<p><i>User interface</i></p> <p> The diagnostic message can be viewed via the Previous diagnostics parameter (→  46).</p> <p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>

Operating time from restart

Navigation	  Diagnostics → Active diagnos. → Time fr. restart
Description	Indicates how long the device has been in operation since the last time the device was restarted.
User interface	Days (d), hours (h), minutes (m), seconds (s)



Operating time

Navigation	  Diagnostics → Active diagnos. → Operating time
Description	Indicates how long the device has been in operation.
Additional information	Maximum time: 9 999 d (≈ 27 years)


3.3.2 "Event logbook" submenu


Navigation  Diagnostics → Event logbook

Filter options

Navigation	 Diagnostics → Event logbook → Filter options
Description	Use this function to select the category whose event messages are displayed in the event list of the operating tool.
Selection	<ul style="list-style-type: none"> ■ All ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ Information (I) ■ Not categorized
Additional information	<p><i>Description</i></p> <p> The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:</p> <ul style="list-style-type: none"> ■ F = Failure ■ C = Function Check ■ S = Out of Specification ■ M = Maintenance Required

Clear event list



Navigation	 Diagnostics → Event logbook → Clear event list
Description	Use this function to process the current values in the event logbook.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ Clear data

Additional information	<i>Description</i>
	Once this function has been executed, the events list is empty and all the events are deleted.
	 The events list can be exported using an operating tool (e.g. FieldCare).



3.3.3 "Minimum/maximum values" submenu

Navigation  Diagnostics → Min/max val.



Pressure min

Navigation	  Diagnostics → Min/max val. → Pressure min
Description	Minimum or maximum value measured by device.
User interface	Signed floating-point number



Counter limit underruns sensor Pmin

Navigation	  Diagnostics → Min/max val. → Counter P < Pmin
Description	Counts how many times the value underruns the sensor specific minimum values. Sensor specific minimum values are shown in Application/Sensor menu.
User interface	0 to 65 535



Counter underruns of user limit Pmin

Navigation	  Diagnostics → Min/max val. → Counter < P user
Description	Counts how many times the value underruns the minimum values defined by the user. User defined minimum values are shown in Diagnostic/Diagnostic settings/Properties menu.
User interface	0 to 65 535



Minimum sensor temperature

Navigation	  Diagnostics → Min/max val. → Min. sensor temp
Description	Minimum or maximum value measured by device. Users cannot reset this value.
User interface	-273.15 to 9726.85 °C



Counter limit underruns sensor Tmin

Navigation	  Diagnostics → Min/max val. → Counter T < Tmin
Description	Counts how many times the value underruns/overruns the sensor specific minimum/ maximum values. Sensor specific minimum/maximum values are shown in Application/Sensor menu.
User interface	0 to 65 535



Counter underruns of user limit Tmin

Navigation	  Diagnostics → Min/max val. → Counter < T user
User interface	0 to 65 535

Minimum terminal voltage

Navigation	  Diagnostics → Min/max val. → Min.term.volt.
Description	Minimum or maximum measured terminal (supply) voltage.
User interface	0.0 to 50.0 V

Minimum electronics temperature

Navigation	  Diagnostics → Min/max val. → Min.electr.temp.
Description	Minimum or maximum measured main electronics temperature.
User interface	Signed floating-point number

Reset user defined counters P and T



Navigation	Diagnostics → Min/max val. → Reset count. P T
Selection	<ul style="list-style-type: none"> ▪ Cancel ▪ Confirm

Pressure max

Navigation	Diagnostics → Min/max val. → Pressure max
Description	Minimum or maximum value measured by device.
User interface	Signed floating-point number

Counter limit overruns sensor Pmax

Navigation	Diagnostics → Min/max val. → Counter P > Pmax
Description	Counts how many times the value overruns the sensor specific maximum values. Sensor specific maximum values are shown in Application/Sensor menu.
User interface	0 to 65 535


Counter overruns of user limit Pmax

Navigation	Diagnostics → Min/max val. → Counter > P user
Description	Counts how many times the value overruns the maximum values defined by the user. User defined maximum values are shown in Diagnostic/Diagnostic settings/Properties menu.
User interface	0 to 65 535


Maximum sensor temperature

Navigation	Diagnostics → Min/max val. → Max. sensor temp
Description	Minimum or maximum value measured by device. Users cannot reset this value.
User interface	-273.15 to 9 726.85 °C


Counter limit overruns sensor Tmax

Navigation	 Diagnostics → Min/max val. → Counter T > Tmax
Description	Counts how many times the value underruns/overruns the sensor specific minimum/maximum values. Sensor specific minimum/maximum values are shown in Application/Sensor menu.
User interface	0 to 65 535


Counter overruns of user limit Tmax

Navigation	 Diagnostics → Min/max val. → Counter > T user
User interface	0 to 65 535


Maximum terminal voltage

Navigation	 Diagnostics → Min/max val. → Max.term.voltage
Description	Minimum or maximum measured terminal (supply) voltage.
User interface	0.0 to 50.0 V

Maximum electronics temperature

Navigation	 Diagnostics → Min/max val. → Max.electr.temp.
Description	Minimum or maximum measured main electronics temperature.
User interface	Signed floating-point number

3.3.4 "Simulation" submenu

Navigation  Diagnostics → Simulation

Simulation

Navigation   Diagnostics → Simulation → Simulation

Description Simulates one or more process variables and/or events.

Warning:
Output will reflect the simulated value or event.

Selection

- Off
- Current output
- Diagnostic event simulation
- Pressure

Value pressure simulation

Navigation   Diagnostics → Simulation → Pressure

User entry Signed floating-point number

Value current output

Navigation   Diagnostics → Simulation → Current output

Description Defines the value of the simulated output current.

User entry 3.59 to 23 mA

Diagnostic event simulation

Navigation   Diagnostics → Simulation → Diagnostic event

Description Use this function to select a diagnostic event for the simulation process that is activated.

Selection

- Off
- Diagnostic event picklist (depends on the category selected)


Additional information*Description*

For the simulation, you can choose from the diagnostic events of the category selected in the **Diagnostic event category** parameter.


3.3.5 "Diagnostic settings" submenu


Navigation  Diagnostics → Diag. settings

"Properties" submenu

Navigation  Diagnostics → Diag. settings → Properties


SSD Out of range delay time




Navigation  Diagnostics → Diag. settings → Properties → SSD Delay time

User entry 0 to 604 800 s


SSD Monitoring delay time




Navigation  Diagnostics → Diag. settings → Properties → SSD Verz. Zeit

User entry 0 to 86 400 s

500 Process alert pressure



Navigation  Diagnostics → Diag. settings → Properties → 500 Pressure


Description Define whether user-defined pressure limits should be set.
If "Off" is selected, no analysis will take place and no event message will be generated.

Selection

- Off
- On

Low alert value




Navigation  Diagnostics → Diag. settings → Properties → Low alert value

Description Set range.
If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.

User entry Signed floating-point number

High alert value




Navigation  Diagnostics → Diag. settings → Properties → High alert value

Description Set range.
If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.

User entry Signed floating-point number

501 Process alert scaled variable



Navigation  Diagnostics → Diag. settings → Properties → 501 Scaled var.


Description Define whether user-defined limits should be set.
If "Off" is selected, no analysis will take place and no event message will be generated.

Selection

- Off
- On

Low alert value



Navigation  Diagnostics → Diag. settings → Properties → Low alert value

Description Set range.
If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.

User entry Signed floating-point number

High alert value



Navigation	Diagnostics → Diag. settings → Properties → High alert value
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.
User entry	Signed floating-point number

User temperature process alert



Navigation	Diagnostics → Diag. settings → Properties → UserTemp alert
Description	Define whether the user-defined sensor temperature limits should be set. If "Off" no analysis and therefore no event message will take place.
Selection	<ul style="list-style-type: none"> ■ Off ■ On

Low alert value



Navigation	Diagnostics → Diag. settings → Properties → Low alert value
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.
User entry	-50 to 150 °C

High alert value



Navigation	Diagnostics → Diag. settings → Properties → High alert value
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.
User entry	-50 to 150 °C

806 Diagnostic behavior

**Navigation**

Diagnostics → Diag. settings → Properties → 806 Diag. behav.

Description

Select event behavior

"Logbook entry only": no digital or analog transmission of the message.

"Warning": Current output unchanged. Message is output digitally (default).

If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Warning
- Logbook entry only

806 Event category

**Navigation**

Diagnostics → Diag. settings → Properties → 806Event category

Description

Select category for diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

806 Event delay

**Navigation**

Diagnostics → Diag. settings → Properties → 806 Event delay


Description

Displays how long the triggering status must be present until an event message is issued. Used to filter out short-term signal interference.

User entry

0 to 60 s

"Configuration" submenu

Navigation  Diagnostics → Diag. settings → Configuration → Configuration

500 Diagnostic behavior 

Navigation   Diagnostics → Diag. settings → Configuration → Configuration → 500 Diag. behav.

Description Select event behavior
 "Logbook entry only":
 no digital or analog transmission of the message
 "Warning": Current output unchanged. Message is output digitally (default).
 "Alarm": Current output assumes the set alarm current.
 Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection


- Off
- Alarm
- Warning
- Logbook entry only

500 Event category 

Navigation   Diagnostics → Diag. settings → Configuration → Configuration → 500Event category

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

501 Diagnostic behavior 

Navigation   Diagnostics → Diag. settings → Configuration → Configuration → 501 Diag. behav.

Description Select event behavior
 "Logbook entry only":
 no digital or analog transmission of the message
 "Warning": Current output unchanged. Message is output digitally (default).
 "Alarm": Current output assumes the set alarm current.
 Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

501 Event category

Navigation   Diagnostics → Diag. settings → Configuration → Configuration → 501Event category

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

502 Diagnostic behavior

Navigation   Diagnostics → Diag. settings → Configuration → Configuration → 502 Diag. behav.

Description

Select event behavior

"Logbook entry only":
no digital or analog transmission of the message

"Warning": Current output unchanged. Message is output digitally (default).

"Alarm": Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.


- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

502 Event category



Navigation   Diagnostics → Diag. settings → Configuration → Configuration → 502Event category


- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)



"Process" submenu

Navigation  Diagnostics → Diag. settings → Configuration → Process


806 Diagnostic behavior 

Navigation	  Diagnostics → Diag. settings → Configuration → Process → 806 Diag. behav.
Description	Select event behavior "Logbook entry only": no digital or analog transmission of the message. "Warning": Current output unchanged. Message is output digitally (default). If the permissible conditions are reached again, the warning is no longer available in the instrument.
Selection	<ul style="list-style-type: none"> ▪ Warning ▪ Logbook entry only

806 Event category 


Navigation	  Diagnostics → Diag. settings → Configuration → Process → 806Event category
Description	Select category for diagnostic message.
Selection	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ No effect (N)

822 Diagnostic behavior

Navigation	 Diagnostics → Diag. settings → Configuration → Process → 822 Diag. behav.
User interface	<ul style="list-style-type: none"> ▪ Alarm ▪ Warning ▪ Logbook entry only

822 Event category




Navigation  Diagnostics → Diag. settings → Configuration → Process → 822 Event category

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Sensor pressure range behavior



Navigation  Diagnostics → Diag. settings → Configuration → Process → P-range behavior

Description Select event behavior

"Alarm":

Current output adopts the set alarm current.

"Warning":

Current output unchanged. Message is displayed digitally (factory setting).

"Logbook entry only":

No digital or analog forwarding of the message.

"Special":

– Lower sensor limit undercut: Current output < 3.6 mA.

– Upper sensor limit exceeded: Current output 21 to 23 mA, depending on the setting.


Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning message disappears.

Selection

- Alarm
- Warning
- Logbook entry only
- Special

841 Event category




Navigation  Diagnostics → Diag. settings → Configuration → Process → 841 Event category

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

900 Event category



Navigation  Diagnostics → Diag. settings → Configuration → Process → 900Event category


Description Select category for diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

900 Diagnostic behavior



Navigation  Diagnostics → Diag. settings → Configuration → Process → 900 Diag. behav.

Description Select event behavior

"Logbook entry only": no digital or analog transmission of the message.

"Warning": Current output unchanged. Message is output digitally (default).


If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Warning
- Logbook entry only

906 Diagnostic behavior



Navigation  Diagnostics → Diag. settings → Configuration → Process → 906 Diag. behav.

Description Select event behavior

"Logbook entry only": no digital or analog transmission of the message.

"Warning": Current output unchanged. Message is output digitally (default).


If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Warning
- Logbook entry only

906 Event category




Navigation  Diagnostics → Diag. settings → Configuration → Process → 906Event category



Description Select category for diagnostic message.

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

"Process" submenu

Navigation  Diagnostics → Diag. settings → Configuration → Process

806 Diagnostic behavior 

Navigation   Diagnostics → Diag. settings → Configuration → Process → 806 Diag. behav.

Description


Select event behavior



"Logbook entry only": no digital or analog transmission of the message.

"Warning": Current output unchanged. Message is output digitally (default).

If the permissible conditions are reached again, the warning is no longer available in the instrument.

- Selection**
- Warning
 - Logbook entry only

806 Event category 


Navigation   Diagnostics → Diag. settings → Configuration → Process → 806Event category

Description

Select category for diagnostic message.

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

822 Diagnostic behavior

Navigation  Diagnostics → Diag. settings → Configuration → Process → 822 Diag. behav.

- User interface**
- Alarm
 - Warning
 - Logbook entry only

822 Event category

**Navigation**

Diagnostics → Diag. settings → Configuration → Process → 822 Event category

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Sensor pressure range behavior

**Navigation**

Diagnostics → Diag. settings → Configuration → Process → P-range behavior

Description

Select event behavior

"Alarm":

Current output adopts the set alarm current.

"Warning":

Current output unchanged. Message is displayed digitally (factory setting).

"Logbook entry only":

No digital or analog forwarding of the message.

"Special":

– Lower sensor limit undercut: Current output < 3.6 mA.

– Upper sensor limit exceeded: Current output 21 to 23 mA, depending on the setting.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning message disappears.

Selection

- Alarm
- Warning
- Logbook entry only
- Special

841 Event category

**Navigation**

Diagnostics → Diag. settings → Configuration → Process → 841 Event category

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

900 Event category



Navigation Diagnostics → Diag. settings → Configuration → Process → 900Event category

Description Select category for diagnostic message.

- Selection**
- Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - No effect (N)

900 Diagnostic behavior



Navigation Diagnostics → Diag. settings → Configuration → Process → 900 Diag. behav.

Description Select event behavior
"Logbook entry only": no digital or analog transmission of the message.
"Warning": Current output unchanged. Message is output digitally (default).
If the permissible conditions are reached again, the warning is no longer available in the instrument.

- Selection**
- Warning
 - Logbook entry only

906 Diagnostic behavior



Navigation Diagnostics → Diag. settings → Configuration → Process → 906 Diag. behav.

Description Select event behavior
"Logbook entry only": no digital or analog transmission of the message.
"Warning": Current output unchanged. Message is output digitally (default).
If the permissible conditions are reached again, the warning is no longer available in the instrument.

- Selection**
- Off
 - Warning
 - Logbook entry only

906 Event category



Navigation Diagnostics → Diag. settings → Configuration → Process → 906Event category

Description Select category for diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

3.4 "Application" menu

Navigation  Application

3.4.1 "Measuring units" submenu

Navigation  Application → Measuring units

Pressure unit

Navigation   Application → Measuring units → Pressure unit

Selection	SI units	US units	Other units
	<ul style="list-style-type: none"> ■ MPa ■ kPa ■ Pa ■ bar ■ mbar ■ torr ■ atm ■ kgf/cm² ■ gf/cm² 	<ul style="list-style-type: none"> psi 	<ul style="list-style-type: none"> ■ inH₂O ■ inH₂O (4°C) ■ mmH₂O ■ mmH₂O (4°C) ■ mH₂O ■ mH₂O (4°C) ■ ftH₂O ■ inHg ■ mmHg

Decimal places pressure

Navigation  Application → Measuring units → Decimal pressure

Description This selection does not affect the measurement and calculation accuracy of the device.

Selection

- Automatic
The decimal place is configured automatically.
Example: Unit mbar: one decimal place. Unit bar: four decimal places
- x
- x.x
- x.xx
- x.xxx
- x.xxxx

Temperature unit

Navigation   Application → Measuring units → Temperature unit

Description Use this function to select the unit for the temperature.

Selection	<i>SI units</i> <ul style="list-style-type: none">■ °C■ K	<i>US units</i> <ul style="list-style-type: none">°F
Factory setting	Country-specific: <ul style="list-style-type: none">■ °C■ °F	
Additional information	<i>Selection</i>	

Scaled variable unit

Navigation  Application → Measuring units → Scaled Unit

Description Use "Free text", first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection	SI units	US units	Imperial units
	<ul style="list-style-type: none"> ■ % ■ mm ■ cm ■ m ■ l ■ hl ■ m³ ■ g ■ kg ■ t ■ g/s ■ kg/s ■ kg/min ■ kg/h ■ t/min ■ t/h ■ t/d ■ m³/s ■ m³/min ■ m³/h ■ m³/d ■ l/s ■ l/min ■ l/h ■ Nm³/h ■ NI/h ■ Sm³/s ■ Sm³/min ■ Sm³/h ■ Sm³/d ■ Nm³/s ■ g/cm³ ■ kg/m³ ■ Nm³/min ■ Nm³/d 	<ul style="list-style-type: none"> ■ ft ■ in ■ ft³ ■ gal (us) ■ bbl (us;oil) ■ oz ■ lb ■ STon ■ lb/s ■ lb/min ■ lb/h ■ STon/min ■ STon/h ■ STon/d ■ ft³/s ■ ft³/min ■ ft³/h ■ ft³/d ■ gal/s (us) ■ gal/min (us) ■ gal/h (us) ■ gal/d (us) ■ bbl/s (us;oil) ■ bbl/min (us;oil) ■ bbl/h (us;oil) ■ bbl/d (us;oil) ■ Sft³/min ■ Sft³/h ■ Sft³/d 	<ul style="list-style-type: none"> ■ gal (imp) ■ gal/s (imp) ■ gal/min (imp) ■ gal/h (imp)
	<p><i>Custom-specific units</i></p> <p>Free text</p>		

Free text
**Navigation**

Application → Measuring units → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Decimal places scaled variable
**Navigation**

Application → Measuring units → Decimal scaled

Description



This selection does not affect the measurement and calculation accuracy of the device.

Selection	<ul style="list-style-type: none"> ■ x ■ x.X ■ x.XX ■ x.XXX ■ x.XXXX
------------------	---

3.4.2 "Measured values" submenu

Navigation  Application → Measured values



Sensor pressure

Navigation	  Application → Measured values → Sensor pressure
User interface	Signed floating-point number



Pressure

Navigation	  Application → Measured values → Pressure
-------------------	--



Scaled variable

Navigation	  Application → Measured values → Scaled variable
User interface	Signed floating-point number

Sensor temperature

Navigation	  Application → Measured values → Sensor temp.
User interface	-273.15 to 9726.85 °C

Terminal voltage 1

Navigation	  Application → Measured values → Terminal volt. 1
Description	Shows the current terminal voltage that is applied at the output

User interface 0.0 to 50.0 V

Terminal current

Navigation  Application → Measured values → Terminal curr.

Description Shows the current value of the current output which is currently measured

User interface 0 to 30 mA

Electronics temperature

Navigation  Application → Measured values → Electronics temp

Description Displays the current temperature of the main electronics.

User interface Signed floating-point number

3.4.3 "Sensor" submenu

Navigation  Application → Sensor

"Basic settings" submenu

Navigation  Application → Sensor → Basic settings

Output current transfer function

Navigation  Application → Sensor → Basic settings → Curr. trans.func

Description Linear
The linear pressure signal is used for the current output. The flow must be calculated in the evaluation unit.

Square root - differential pressure only

The root flow signal is used for the current output. The 'Flow (square root)' current signal is indicated on the on-site display with a root symbol.

- User interface**
- Linear
 - Square root *

Damping



Navigation Application → Sensor → Basic settings → Damping

Description The damping is effective before the measured value is further processed, i.e., before the following processes:

- Scaling
- Limit value monitoring
- Forwarding to display
- Forwarding to Analog Input Block

Note:

The Analog Input Block has its own “Damping” parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.

User entry 0 to 999.0 s

HP/LP swap



Navigation Application → Sensor → Basic settings → HP/LP swap

Description With this parameter the high and low pressure side of the differential pressure transmitter can be interchanged.

- Selection**
- No
 - Yes

"Sensor calibration" submenu

Navigation Application → Sensor → Sensor cal.

Zero adjustment





Navigation Application → Sensor → Sensor cal. → Zero adjustment

Description Due to the mounting position of the measuring instrument, a pressure shift may occur. The pressure shift can be corrected with the zero adjustment.

* Visibility depends on order options or device settings

- Selection**
- No
 - Confirm

Calibration offset

Navigation   Application → Sensor → Sensor cal. → Calibr offset

Prerequisite Absolute pressure sensor

Description Enter the value by which the measured value should be corrected, e.g., a position adjustment for absolute pressure sensors.

User entry Signed floating-point number

Zero adjustment offset

Navigation   Application → Sensor → Sensor cal. → Zero offset

User entry Signed floating-point number

Sensor Trim Reset

Navigation  Application → Sensor → Sensor cal. → Sen. Trim Reset

- Selection**
- No
 - Confirm

Lower sensor trim measured value

Navigation  Application → Sensor → Sensor cal. → LowerTrimMeasVal

User interface Signed floating-point number

Lower sensor trim

**Navigation**

Application → Sensor → Sensor cal. → LowerSensor trim

Description

These two parameters allow a recalibration of the sensor, i.e., if you want to fit the sensor to the measuring range. The highest accuracy is obtained when the value for the "Lower sensor trim" is as close as possible to "LRV" (lower range value) and the value for "Upper sensor trim" as close as possible to "URV" (upper range value).

There must be a known reference pressure when setting a new lower or upper sensor characteristic curve value. The more accurate the reference pressure is during recalibration, the higher the accuracy of the pressure transmitter later. A new value is assigned to the applied pressure using "Lower sensor trim" and "Upper sensor trim" parameters.

Note:

The value entered can be at maximum "Sensor pressure" +/- 10 % of the permitted maximum pressure (URL).

Proceed as follows:

- Apply reference pressure for lower range value ("LRV")
- Enter the measured reference pressure at "Lower sensor trim" and confirm
- Apply reference pressure for upper range value ("URV")
- Enter the measured reference pressure at "Upper sensor trim" and confirm
- The sensor is now calibrated

User entry

Signed floating-point number

Upper sensor trim measured value

Navigation

Application → Sensor → Sensor cal. → UpperTrimMeasVal

User interface

Signed floating-point number

Upper sensor trim
**Navigation**

Application → Sensor → Sensor cal. → UpperSensor trim

Description

These two parameters allow a recalibration of the sensor, i.e., if you want to fit the sensor to the measuring range. The highest accuracy is obtained when the value for the "Lower sensor trim" is as close as possible to "LRV" (lower range value) and the value for "Upper sensor trim" as close as possible to "URV" (upper range value).

There must be a known reference pressure when setting a new lower or upper sensor characteristic curve value. The more accurate the reference pressure is during recalibration, the higher the accuracy of the pressure transmitter later. A new value is assigned to the applied pressure using "Lower sensor trim" and "Upper sensor trim" parameters.

Note:

The value entered can be at maximum "Sensor pressure" +/- 10 % of the permitted maximum pressure (URL).

Proceed as follows:

- Apply reference pressure for lower range value ("LRV")
- Enter the measured reference pressure at "Lower sensor trim" and confirm
- Apply reference pressure for upper range value ("URV")
- Enter the measured reference pressure at "Upper sensor trim" and confirm
- The sensor is now calibrated

User entry

Signed floating-point number

"Sensor limits" submenu

Navigation Application → Sensor → Sensor limits

Lower Range Limit
Navigation

Application → Sensor → Sensor limits → LRL

Description

Indicates the lower measuring limit of the sensor.

User interface

Signed floating-point number

Upper Range Limit
Navigation

Application → Sensor → Sensor limits → URL


Description

Indicates the upper measuring limit of the sensor.


User interface

Signed floating-point number


Minimum span

Navigation	 Application → Sensor → Sensor limits → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number

Sensor temperature lower range limit

Navigation	 Application → Sensor → Sensor limits → Sens.temp.lo.lim
User interface	-273.15 to 9726.85 °C


Sensor temperature upper range limit



Navigation	 Application → Sensor → Sensor limits → Sens.temp.up.lim
User interface	-273.15 to 9726.85 °C

"Scaled variable" submenu

Navigation  Application → Sensor → Scaled variable

Assign PV



Navigation	  Application → Sensor → Scaled variable → Assign PV
Description	Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).
Selection	<ul style="list-style-type: none"> ■ Pressure ■ Scaled variable

Scaled variable unit 


Navigation   Application → Sensor → Scaled variable → Scaled Unit

Description Use "Free text", first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ %	■ ft	■ gal (imp)
■ mm	■ in	■ gal/s (imp)
■ cm	■ ft ³	■ gal/min (imp)
■ m	■ gal (us)	■ gal/h (imp)
■ l	■ bbl (us;oil)	
■ hl	■ oz	
■ m ³	■ lb	
■ g	■ STon	
■ kg	■ lb/s	
■ t	■ lb/min	
■ g/s	■ lb/h	
■ kg/s	■ STon/min	
■ kg/min	■ STon/h	
■ kg/h	■ STon/d	
■ t/min	■ ft ³ /s	
■ t/h	■ ft ³ /min	
■ t/d	■ ft ³ /h	
■ m ³ /s	■ ft ³ /d	
■ m ³ /min	■ gal/s (us)	
■ m ³ /h	■ gal/min (us)	
■ m ³ /d	■ gal/h (us)	
■ l/s	■ gal/d (us)	
■ l/min	■ bbl/s (us;oil)	
■ l/h	■ bbl/min (us;oil)	
■ Nm ³ /h	■ bbl/h (us;oil)	
■ NI/h	■ bbl/d (us;oil)	
■ Sm ³ /s	■ Sft ³ /min	
■ Sm ³ /min	■ Sft ³ /h	
■ Sm ³ /h	■ Sft ³ /d	
■ Sm ³ /d		
■ Nm ³ /s		
■ g/cm ³		
■ kg/m ³		
■ Nm ³ /min		
■ Nm ³ /d		

Custom-specific units
Free text

Free text 

Navigation   Application → Sensor → Scaled variable → Free text


User entry Character string comprising numbers, letters and special characters (32)

Pressure

Navigation  Application → Sensor → Scaled variable → Pressure

Scaled variable transfer function



Navigation  Application → Sensor → Scaled variable → Scaled function

Description "Linear"
The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit.

"Square root" (Deltabar)

The root flow signal is used for the output signal. The "Flow (square root)" output signal is indicated on the on-site display with a root symbol.

"Table"

The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

Lower range value output




Navigation  Application → Sensor → Scaled variable → Low.range outp

Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry Signed floating-point number

Upper range value output



Navigation  Application → Sensor → Scaled variable → Upp.range outp

Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry Signed floating-point number

* Visibility depends on order options or device settings

Activate table 

Navigation  Application → Sensor → Scaled variable → Activate table

Selection

- Disable
- Enable



Pressure value 1 

Navigation   Application → Sensor → Scaled variable → Pressure 1

Description Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this pressure.

User entry Signed floating-point number

Scaled variable value 1

Navigation   Application → Sensor → Scaled variable → Scaled 1

Description Enter value for the first scaling point. This value is allocated to "Pressure value 1".

User interface Signed floating-point number

Pressure value 2 

Navigation   Application → Sensor → Scaled variable → Pressure 2

Description Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to this pressure.

User entry Signed floating-point number

Scaled variable value 2 

Navigation   Application → Sensor → Scaled variable → Scaled 2

Description Enter value for the second scaling point. This value is allocated to "Pressure value 2".

User entry Signed floating-point number

Low flow cut off



Navigation Application → Sensor → Scaled variable → Low flow cut off

Description When activated, this function suppresses small flows which can lead to large fluctuations in the measured value.

User entry 0.0 to 50.0 %

Pressure



Navigation Application → Sensor → Scaled variable → Pressure

User entry Signed floating-point number

Scaled variable



Navigation Application → Sensor → Scaled variable → Scaled variable

User entry Signed floating-point number

"Wet calibration" submenu

Navigation Application → Sensor → Wet calibration

Zero



Navigation Application → Sensor → Wet calibration → Zero

Selection

- No
- Confirm

Pressure value 1



Navigation Application → Sensor → Wet calibration → Pressure 1

Description Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this pressure.


User entry Signed floating-point number


Span 

Navigation   Application → Sensor → Wet calibration → Span

Selection

- No
- Confirm

Pressure value 2 

Navigation  Application → Sensor → Wet calibration → Pressure 2

Description Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to this pressure.

User entry Signed floating-point number


Lower range value output 

Navigation  Application → Sensor → Wet calibration → Low.range outp

Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry Signed floating-point number

Upper range value output 

Navigation  Application → Sensor → Wet calibration → Upp.range outp

Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry Signed floating-point number

"Wet calibration" submenu


Navigation  Application → Sensor → Wet calibration

Zero 

Navigation   Application → Sensor → Wet calibration → Zero

Selection

- No
- Confirm

Pressure value 1 

Navigation  Application → Sensor → Wet calibration → Pressure 1

Description Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this pressure.


User entry Signed floating-point number

Span 

Navigation   Application → Sensor → Wet calibration → Span

Selection

- No
- Confirm

Pressure value 2 

Navigation  Application → Sensor → Wet calibration → Pressure 2

Description Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to this pressure.

User entry Signed floating-point number

Lower range value output



Navigation	Application → Sensor → Wet calibration → Low.range outp
Description	Depending on which variable has been selected as "Process variable output current ", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

Upper range value output



Navigation	Application → Sensor → Wet calibration → Upp.range outp
Description	Depending on which variable has been selected as "Process variable output current ", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number

3.4.4 "Current output" submenu

Navigation Application → Curr.output

Assign PV



Navigation	Application → Curr.output → Assign PV
Description	Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).
Selection	<ul style="list-style-type: none"> ■ Pressure ■ Scaled variable

Measuring mode current output



Navigation	Application → Curr.output → Output mode
Description	Select curve of current output.
Selection	<ul style="list-style-type: none"> ■ Standard ■ Inverse ■ Bi-directional

Current range output

**Navigation**

Application → Curr.output → Current range

Description

Defines the current range used to transmit the measured or calculated value. In brackets are indicated the “low saturation value” and the “high saturation value”. If Measured value \leq “low saturation”, the output current is set to “low saturation”. If Measured value \geq “high saturation”, the output current is set to “high saturation”.

Note:

Currents below 3.6 mA or above 21.5 mA can be used to signal an alarm.

Selection

- 4...20 mA (4...20.5 mA)
- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)

Lower range value output

**Navigation**

Application → Curr.output → Low.range outp

Description

Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry

Signed floating-point number

Upper range value output

**Navigation**

Application → Curr.output → Upp.range outp

Description

Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry

Signed floating-point number

Failure behavior current output

**Navigation**

Application → Curr.output → Failure behav.

Description

Defines which current the output assumes in the case of an error.

Min: < 3.6 mA

Max: >21.5 mA

Note: The hardware DIP Switch for alarm current has priority over software setting.

Selection

- Min.
- Max.

Failure current



Navigation Application → Curr.output → Failure current

Description Enter current output value in alarm condition

User entry 21.5 to 23 mA

Output current

Navigation Application → Curr.output → Output curr.

Description Shows the value currently calculated for the current output

User interface 3.59 to 23 mA

Terminal current

Navigation Application → Curr.output → Terminal curr.

Description Shows the current value of the current output which is currently measured

User interface 0 to 30 mA

4 mA trim value



Navigation Application → Curr.output → 4 mA trim value

Description Enter the trim value for the 4 mA current output.

Note:
Simulation must be active.

User entry 3 to 5 mA

20 mA trim value



Navigation Application → Curr.output → 20 mA trim value

Description Enter the trim value for the 20 mA current output.

Note:
Simulation must be active.

User entry 18 to 22 mA



3.4.5 "HART output" submenu

Navigation  Application → HART output

"Configuration" submenu

Navigation  Application → HART output → Configuration

HART address

Navigation   Application → HART output → Configuration → HART address



Description Define the HART address of the device.

User entry 0 to 63

Additional information

- The measured value can only be transmitted via the current value if the address is set to "0". The current is fixed at 4.0 mA for all other addresses (Multidrop mode).
- Only addresses in the range 0 to 15 are permitted for a system according to HART 5.0.
- All addresses in the range 0 to 63 are permitted for a system with HART 6.0 and higher.

HART short tag

Navigation   Application → HART output → Configuration → HART short tag



Description Defines the short tag for the measuring point.

Maximum length: 8 characters

Allowed characters: A-Z, 0-9, certain special characters

User entry Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation marks, @, %).



Device tag

Navigation   Application → HART output → Configuration → Device tag

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

User entry Character string comprising numbers, letters and special characters (32)



No. of preambles

Navigation   Application → HART output → Configuration → No. of preambles

Description Defines the number of preambles in the HART telegram

User entry 5 to 20

Loop current mode

Navigation   Application → HART output → Configuration → Loop curr mode

Description If Loop current mode is disabled, Multi-drop communication mode is activated. Multi-drop is a HART digital communication mode where multiple devices may share the same pair of wires for power and communications. In this mode the output current is fixed.

Selection

- Disable
- Enable

"HART output" submenu

Navigation  Application → HART output → HART output

Assign PV


Navigation   Application → HART output → HART output → Assign PV

Description Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).

Selection

- Pressure
- Scaled variable

Primary variable (PV)

Navigation  Application → HART output → HART output → Primary var (PV)

Description Shows the first HART value (PV).

Additional information

Assign SV



Navigation   Application → HART output → HART output → Assign SV

Description Use this function to select a measured variable (HART device variable) for the secondary dynamic variable (SV).


Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current *
- Terminal voltage *
- Median of pressure signal *
- Noise of pressure signal *
- Signal noise detected *
- Percent of range
- Loop current
- Not used

Additional information *Selection*

- **Sensor pressure** option
Sensor Pressure is the raw signal from sensor before damping and position adjustment.
- **Terminal current** option
The terminal current is the read-back current on terminal block.
- **Signal noise detected** option
0 % - Signal noise is within the permissible range.
100 % - Signal noise is outside of the permissible range.
- **Loop current** option
The loop current is the output current set by the applied pressure.

Secondary variable (SV)

Navigation  Application → HART output → HART output → Second.var(SV)

Description Shows the second HART value (SV).

* Visibility depends on order options or device settings

Assign TV

**Navigation**

Application → HART output → HART output → Assign TV

Description

Use this function to select a measured variable (HART device variable) for the tertiary (third) dynamic variable (TV).

Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current *
- Terminal voltage *
- Median of pressure signal *
- Noise of pressure signal *
- Signal noise detected *
- Percent of range
- Loop current
- Not used

Additional information*Selection*

- **Sensor pressure** option
Sensor Pressure is the raw signal from sensor before damping and position adjustment.
- **Terminal current** option
The terminal current is the read-back current on terminal block.
- **Signal noise detected** option
0 % - Signal noise is within the permissible range.
100 % - Signal noise is outside of the permissible range.
- **Loop current** option
The loop current is the output current set by the applied pressure.

Tertiary variable (TV)

Navigation

Application → HART output → HART output → Tertiary var(TV)

Description

Shows the third HART value (TV).

Assign QV

**Navigation**

Application → HART output → HART output → Assign QV

Description


Use this function to select a measured variable (HART device variable) for the quaternary (fourth) dynamic variable (QV).

* Visibility depends on order options or device settings

- Selection**
- Pressure
 - Scaled variable
 - Sensor temperature
 - Sensor pressure
 - Electronics temperature
 - Terminal current^{*}
 - Terminal voltage^{*}
 - Median of pressure signal^{*}
 - Noise of pressure signal^{*}
 - Signal noise detected^{*}
 - Percent of range
 - Loop current
 - Not used

- Additional information** *Selection*
- **Sensor pressure** option
Sensor Pressure is the raw signal from sensor before damping and position adjustment.
 - **Terminal current** option
The terminal current is the read-back current on terminal block.
 - **Signal noise detected** option
0 % - Signal noise is within the permissible range.
100 % - Signal noise is outside of the permissible range.
 - **Loop current** option
The loop current is the output current set by the applied pressure.

Quaternary variable (QV)


- Navigation**  Application → HART output → HART output → Quaterna.var(QV)
- Description** Shows the fourth value (QV).

"Burst configuration 1" submenu

Navigation  Application → HART output → Burst config. 1

Burst mode 1




- Navigation**  Application → HART output → Burst config. 1 → Burst mode 1
- Description** Use this function to select whether to activate the HART burst mode for burst message X.

* Visibility depends on order options or device settings

- Selection**
- Off
The measuring device transmits data only when requested by the HART master.
 - On
The measuring device transmits data regularly without being requested.

- Additional information** *Selection*
- Off
The measuring device transmits data only when requested by the HART master.
 - On
The measuring device transmits data regularly without being requested.

Burst command 1

- Navigation**  Application → HART output → Burst config. 1 → Burst command 1

Description Use this function to select the HART command that is sent to the HART master.


- Selection**
- Primary variable (PV)
 - Loop Current and Percent of Range
 - Dynamic Variables
 - Device variables with status
 - Device variables
 - Additional device status

- Additional information** *Selection*
- Command 1
Read out the primary variable.
 - Command 2
Read out the current and the main measured value as a percentage.
 - Command 3
Read out the dynamic HART variables and the current.
 - Command 9
Read out the dynamic HART variables including the related status.
 - Command 33
Read out the dynamic HART variables including the related unit.
 - Command 48
Read out the complete device diagnostics.

"Command 33" option

The HART device variables are defined via Command 107.

Commands

-  ■ Information about the defined details of the command: HART specifications
- The measured variables (HART device variables) are assigned to the dynamic variables in the **Output** submenu.

Burst variable 0



Navigation	Application → HART output → Burst config. 1 → Burst variable 0
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	<ul style="list-style-type: none"> ■ Pressure ■ Scaled variable ■ Sensor temperature ■ Sensor pressure ■ Electronics temperature ■ Measured current * ■ Terminal voltage 1 * ■ Median of pressure signal * ■ Noise of pressure signal * ■ Signal noise detected * ■ Percent of range ■ Measured current ■ Primary variable (PV) ■ Secondary variable (SV) ■ Tertiary variable (TV) ■ Quaternary variable (QV) ■ Not used
Additional information	<p><i>Selection</i></p> <p>If a burst message is not configured, the Not used option is set.</p>

Burst variable 1



Navigation	Application → HART output → Burst config. 1 → Burst variable 1
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→ 91).



Burst variable 2





Navigation	Application → HART output → Burst config. 1 → Burst variable 2
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→ 91).

* Visibility depends on order options or device settings



Burst variable 3 

Navigation	 Application → HART output → Burst config. 1 → Burst variable 3
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→  91).



Burst variable 4 

Navigation	 Application → HART output → Burst config. 1 → Burst variable 4
Description	For HART command 9: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→  91).



Burst variable 5 

Navigation	 Application → HART output → Burst config. 1 → Burst variable 5
Description	For HART command 9: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→  91).

Burst variable 6 

Navigation	 Application → HART output → Burst config. 1 → Burst variable 6
Description	For HART command 9: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→  91).

Burst variable 7 

Navigation	 Application → HART output → Burst config. 1 → Burst variable 7
Description	For HART command 9: select the HART device variable or the process variable.
Selection	Please refer to the Burst variable 0 parameter (→  91).

Burst trigger mode



Navigation	Application → HART output → Burst config. 1 → Trigger mode
Description	Use this function to select the event that triggers burst message X.
Selection	<ul style="list-style-type: none"> ■ Continuous ■ Window* ■ Rising* ■ Falling* ■ On change
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Continuous The message is sent continuously, at least at intervals corresponding to the time frame specified in the Burst min period parameter (→ 93). ■ Window The message is sent if the specified measured value has changed by the value in the Burst trigger level parameter (→ 93). ■ Rising The message is sent if the specified measured value exceeds the value in the Burst trigger level parameter (→ 93). ■ Falling The message is sent if the specified measured value drops below the value in the Burst trigger level parameter (→ 93). ■ On change The message is sent if a measured value changes in the burst message.

Burst trigger level



Navigation	Application → HART output → Burst config. 1 → Trigger level
Description	Use this function to enter the burst trigger value.
User entry	Signed floating-point number
Additional information	<p><i>Description</i></p> <p>Together with the option selected in the Burst trigger mode parameter (→ 93) the burst trigger value determines the time of burst message X.</p>

Min. update period




Navigation	Application → HART output → Burst config. 1 → Min. upd. per.
Description	Use this function to enter the minimum time span between two burst commands of burst message X.

* Visibility depends on order options or device settings

User entry Positive integer


Max. update period

Navigation  Application → HART output → Burst config. 1 → Max. upd. per.

Description Use this function to enter the maximum time span between two burst commands of burst message X.

User entry Positive integer

"Information" submenu

Navigation  Application → HART output → Information

Device ID

Navigation   Application → HART output → Information → Device ID

Description Use this function to view the device ID for identifying the measuring device in a HART network.



User interface 6-digit hexadecimal number

Additional information *Description*



In addition to the device type and manufacturer ID, the device ID is part of the unique ID. Each HART device is uniquely identified by the unique device ID.

Device type

Navigation   Application → HART output → Information → Device type

Description Displays the device type with which the measuring device is registered with the HART Communication Foundation.

User interface 2-digit hexadecimal number

Factory setting 0x54

Factory setting 0x5A

Additional information*Description*

The device type is specified by the manufacturer. It is needed to assign the appropriate device description file (DD) to the device.

Device revision**Navigation**

Application → HART output → Information → Device revision

Description

Displays the device revision with which the device is registered with the HART Communication Foundation.

User interface

2-digit hexadecimal number

Additional information*Description*

The device revision is needed to assign the appropriate device description file (DD) to the device.

HART short tag**Navigation**

Application → HART output → Information → HART short tag

Description

Defines the short tag for the measuring point.

Maximum length: 8 characters

Allowed characters: A-Z, 0-9, certain special characters

User entry

Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation marks, @, %).

HART revision**Navigation**

Application → HART output → Information → HART revision

Description

Shows the HART revision of the device.

HART descriptor**Navigation**

Application → HART output → Information → HART descriptor

Description

Description for the measuring point.

User entry

Character string comprising numbers, letters and special characters (16)

HART message

**Navigation**

Application → HART output → Information → HART message

Description

A HART message which is sent via the HART protocol when requested by the master.

User entry

Character string comprising numbers, letters and special characters (32)

HART date code

**Navigation**

Application → HART output → Information → HART date code

Description

Date of the last configuration change

User entry

Character string comprising numbers, letters and special characters (10)

Additional information

Date format: YYYY-MM-DD






Make sure you adhere to this format when entering the date. Otherwise errors may occur in individual HART commands.




3.5 "System" menu

Navigation  System

3.5.1 "Device management" submenu

Navigation  System → Device manag.

Device tag	
Navigation	  System → Device manag. → Device tag
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.
User entry	Character string comprising numbers, letters and special characters (32)


Locking status	
Navigation	  System → Device manag. → Locking status
Description	Displays the active write protection.
User interface	<ul style="list-style-type: none"> ■ Hardware locked ■ Safety locked ■ Temporarily locked
Additional information	<p><i>User interface</i></p> <p>If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.</p> <p> Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.</p>

Selection

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status display parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

Configuration counter

Navigation
 System → Device manag. → Config. counter
Description

Displays the counter for changes to the device parameters.


Additional information:

- If the value for a static parameter is changed when optimizing or configuring the parameter, the counter is incremented by 1. This is to enable tracking different parameter versions.
- When multiple parameters are changed simultaneously, e.g. when loading parameters into the device from an external source such as FieldCare, the counter may display a higher value. The counter cannot be reset, nor is it reset to a default value on performing a device reset.
- Once the counter has reached the value 65535, it restarts at 0.

User interface

0 to 65 535

Reset device


**Navigation**
 System → Device manag. → Reset device
Description

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To factory defaults *
- To delivery settings *
- Restart device

Additional information*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
To factory defaults	Every parameter is reset to its factory setting.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

* Visibility depends on order options or device settings

3.5.2 "User management" submenu

Navigation  System → User manag.

User role

Navigation   System → User manag. → User role


Description Displays the access authorization to the parameters via the operating tool.

User interface


- Operator
- Maintenance
- Expert

Additional information *Description*


 Access authorization can be modified via the **Enter access code** parameter.

 If additional write protection is active, this restricts the current access authorization even further.

User interface

 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

Password

Navigation  System → User manag. → Password

Description Enter the password for the "Maintenance" user role to get access to the functionality of this role.

User entry Character string comprising numbers, letters and special characters (16)


Enter access code

Navigation  System → User manag. → Ent. access code

Description Use this function to enter the user-specific release code to remove parameter write protection in the operating tool.


User entry 0 to 9999

Status password entry

Navigation	 System → User manag. → Status pw entry
Description	Use this function to display the status of the password verification.
User interface	<ul style="list-style-type: none"> ■ ----- ■ Wrong password ■ Password rule violated ■ Password accepted ■ Permission denied ■ Confirm PW mismatch ■ Reset password accepted ■ Invalid user role ■ Wrong sequence of entry


New password



Navigation	 System → User manag. → New password
Description	<p>Define the new "Maintenance" password.</p> <p>A new password is valid after it has been confirmed within the "Confirm new password" parameter.</p> <p>Any valid password consists of 4 to 16 characters and can contain letters and numbers.</p>
User entry	Character string comprising numbers, letters and special characters (16)


Confirm new password




Navigation	 System → User manag. → Confirm password
Description	Enter the new password again to confirm.
User entry	Character string comprising numbers, letters and special characters (16)

Old password



Navigation	 System → User manag. → Old password
Description	Enter the current password, to subsequently change the existing password.
User entry	Character string comprising numbers, letters and special characters (16)



Reset password

Navigation	 System → User manag. → Reset password
Description	Enter a code to reset the current "Maintenance" password. The code is delivered by your local support.
User entry	Character string comprising numbers, letters and special characters (16)






3.5.3 "Display" submenu

Navigation  System → Display


Language






Navigation	  System → Display → Language
Prerequisite	A local display is provided.
Description	Use this function to select the configured language on the local display.
Selection	<ul style="list-style-type: none"> ■ English ■ Deutsch ■ Français ■ Español ■ Italiano ■ Nederlands ■ Portuguesa ■ Polski ■ русский язык (Russian) ■ Svenska ■ Türkçe ■ 中文 (Chinese) ■ 日本語 (Japanese) ■ 한국어 (Korean) ■ Bahasa Indonesia ■ tiếng Việt (Vietnamese) ■ čeština (Czech)
Factory setting	English (alternatively, the ordered language is preset in the device)

Format display

Navigation	  System → Display → Format display
Prerequisite	A local display is provided.
Description	Use this function to select how the measured value is shown on the local display.
Selection	<ul style="list-style-type: none"> ▪ 1 value, max. size ▪ 1 bargraph + 1 value ▪ 2 values
Additional information	<p><i>Description</i></p> <p>The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.</p> <p> ▪ The Value 1 display parameter (→  102)...Value 8 display parameter Value 4 display parameter (→  104) are used to specify which measured values are shown on the local display and in what order.</p> <p>▪ If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the Display interval parameter.</p>

Value 1 display



Navigation	  System → Display → Value 1 display
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values shown on the local display.
Selection	<ul style="list-style-type: none"> ▪ Pressure ▪ Scaled variable ▪ Current output ▪ Sensor temperature ▪ Percent of range
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→  102) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Dependency</i></p> <p> The unit of the displayed measured value is taken from the System units submenu.</p>


Value 2 display


Navigation	System → Display → Value 2 display
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values shown on the local display.
Selection	<ul style="list-style-type: none"> ■ None ■ Pressure ■ Scaled variable ■ Current output ■ Sensor temperature ■ Percent of range
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 102) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Dependency</i></p> <p> The unit of the displayed measured value is taken from the System units submenu.</p>

Value 3 display


Navigation	System → Display → Value 3 display
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values shown on the local display.
Selection	<ul style="list-style-type: none"> ■ None ■ Pressure ■ Scaled variable ■ Current output ■ Sensor temperature ■ Percent of range
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 102) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Selection</i></p> <p> The unit of the displayed measured value is taken from the System units submenu.</p>

Value 4 display 

Navigation   System → Display → Value 4 display

Prerequisite A local display is provided.



Description Use this function to select one of the measured values shown on the local display.

Selection


- None
- Pressure
- Scaled variable
- Current output
- Sensor temperature
- Percent of range

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→  102) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu.


Contrast display





Navigation   System → Display → Contrast display

Description Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

User entry 20 to 80 %

Factory setting Depends on the display


Additional information  Set the contrast via the push-buttons:

- Weaker: Press the  and  buttons simultaneously
- Stronger: Press the  and  buttons simultaneously


3.5.4 "Geolocation" submenu

Navigation  System → Geolocation


Process Unit Tag

Navigation	 System → Geolocation → Process Unit Tag
Description	Enter the process unit in which the device is installed.
User entry	Character string comprising numbers, letters and special characters (32)


Location Description



Navigation	 System → Geolocation → Location Descr.
Description	Use this function to enter a description of the location so that the device can be located in the plant.
User entry	Character string comprising numbers, letters and special characters (32)



Longitude

Navigation	 System → Geolocation → Longitude
Description	Use this function to enter the longitude coordinates that describe the device location.
User entry	-180 to 180 °


Latitude



Navigation	 System → Geolocation → Latitude
Description	Use this function to enter the latitude coordinates that describe the device location.
User entry	-90 to 90 °

Altitude	
Navigation	 System → Geolocation → Altitude
Description	Use this function to enter the altitude data that describe the device location.
User entry	Signed floating-point number

Location method	
Navigation	 System → Geolocation → Location method
Description	Use this function to select the data format for specifying the geographic location. The codes for specifying the location are based on the US National Marine Electronics Association (NMEA) Standard NMEA 0183.
Selection	<ul style="list-style-type: none"> ▪ No fix ▪ GPS or Standard Positioning Service fix ▪ Differential GPS fix ▪ Precise positioning service (PPS) fix ▪ Real Time Kinetic (RTK) fixed solution ▪ Real Time Kinetic (RTK) float solution ▪ Estimated dead reckoning ▪ Manual input mode ▪ Simulation Mode

3.5.5 "Information" submenu


Navigation  System → Information

Device name	
Navigation	  System → Information → Device name
Description	Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.
User interface	Max. 32 characters such as letters or numbers.

Manufacturer


Navigation  System → Information → Manufacturer

User interface Character string comprising numbers, letters and special characters

Serial number 


Navigation  System → Information → Serial number

Description Displays the serial number of the measuring device.

 The number can be found on the nameplate of the sensor and transmitter.

User interface Max. 11-digit character string comprising letters and numbers.

Additional information *Description*

 **Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Order code 

Navigation  System → Information → Order code

Description Shows the device order code.

User interface Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Factory setting –



Additional information *Description*

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.


 **Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.


Firmware version


Navigation	 System → Information → Firmware version
Description	Displays the device firmware version that is installed.
User interface	Character string in the format xx.yy.zz
Additional information	<p><i>User interface</i></p> <p> The Firmware version is also located:</p> <ul style="list-style-type: none"> ▪ On the title page of the Operating instructions ▪ On the transmitter nameplate

Hardware version


Navigation	 System → Information → Hardware version
User interface	Character string comprising numbers, letters and special characters



Extended order code 1



Navigation	 System → Information → Ext. order cd. 1
Description	The extended order code is an alphanumeric code containing all information to identify the device and its options.
User interface	Character string
Factory setting	–
Additional information	<p><i>Description</i></p> <p>The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.</p>


Extended order code 2




Navigation	 System → Information → Ext. order cd. 2
Description	<p>The extended order code is an alphanumeric code containing all information to identify the device and its options.</p> <p> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.</p>
User interface	Character string

Factory setting –

Extended order code 3

Navigation  System → Information → Ext. order cd. 3

Description The extended order code is an alphanumeric code containing all information to identify the device and its options.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface Character string

Factory setting –

XML build number

Navigation   System → Information → XML build no.

User interface Positive integer

Checksum

Navigation   System → Information → Checksum

Description Checksum for Firmware version.

User interface Positive integer


3.5.6 "Software configuration" submenu

Navigation  System → Softw. config.


Activate SW option

Navigation   System → Softw. config. → Activate SW opt.

Description Use this function to enter an activation code to enable an additional, ordered software option.

User entry	Max. 10-digit string of numbers.
Factory setting	Depends on the software option ordered
Additional information	<p><i>Description</i></p> <p>If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.</p> <p><i>User entry</i></p> <p> To activate a software option subsequently, please contact your Endress+Hauser sales organization.</p> <p>NOTE!</p> <p>The activation code is linked to the serial number of the measuring device and varies according to the device and software option.</p> <p>If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.</p> <ul style="list-style-type: none"> ▶ Before you enter a new activation code, make a note of the current activation code from the parameter protocol. ▶ Enter the new activation code provided by Endress+Hauser when the new software option was ordered. ▶ If the code entered is incorrect or invalid, enter the old activation code from the parameter protocol. ▶ Have the Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again. <p><i>Example for a software option</i></p> <p>Order code for "Application package", option EA "Extended HistoROM"</p>

Software option overview

Navigation	 System → Softw. config. → SW option overv.
Description	Shows all enabled software options
User interface	<ul style="list-style-type: none"> ■ SIL ■ WHG ■ Heartbeat Verification ■ Heartbeat Monitoring

Index

0 ... 9

4 mA trim value (Parameter)	84
20 mA trim value (Parameter)	84
500 Diagnostic behavior (Parameter)	57
500 Event category (Parameter)	57
500 Process alert pressure (Parameter)	53
501 Diagnostic behavior (Parameter)	57
501 Event category (Parameter)	58
501 Process alert scaled variable (Parameter)	54
502 Diagnostic behavior (Parameter)	58
502 Event category (Parameter)	58
806 Diagnostic behavior (Parameter)	56, 59, 62
806 Event category (Parameter)	56, 59, 62
806 Event delay (Parameter)	56
822 Diagnostic behavior (Parameter)	59, 62
822 Event category (Parameter)	60, 63
841 Event category (Parameter)	60, 63
900 Diagnostic behavior (Parameter)	61, 64
900 Event category (Parameter)	61, 64
906 Diagnostic behavior (Parameter)	61, 64
906 Event category (Parameter)	61, 64

A

Activate SW option (Parameter)	109
Activate table (Parameter)	78
Active diagnostics (Parameter)	45
Active diagnostics (Submenu)	45
Altitude (Parameter)	106
Application (Menu)	66
Assign HART variables? (Parameter)	39, 41
Assign PV (Parameter)	27, 42, 75, 82, 86
Assign QV (Parameter)	44, 88
Assign SV (Parameter)	42, 87
Assign TV (Parameter)	43, 88

B

Basic settings (Submenu)	70
Burst command 1 (Parameter)	90
Burst configuration 1 (Submenu)	89
Burst mode 1 (Parameter)	89
Burst trigger level (Parameter)	93
Burst trigger mode (Parameter)	93
Burst variable 0 (Parameter)	91
Burst variable 1 (Parameter)	91
Burst variable 2 (Parameter)	91
Burst variable 3 (Parameter)	92
Burst variable 4 (Parameter)	92
Burst variable 5 (Parameter)	92
Burst variable 6 (Parameter)	92
Burst variable 7 (Parameter)	92

C

Calibration offset (Parameter)	72
Checksum (Parameter)	109
Clear event list (Parameter)	47
Commissioning (Wizard)	23

Configuration (Submenu)	57, 85
Configuration counter (Parameter)	98
Confirm new password (Parameter)	100
Contrast display (Parameter)	104
Counter limit overruns sensor Pmax (Parameter)	50
Counter limit overruns sensor Tmax (Parameter)	51
Counter limit underruns sensor Pmin (Parameter)	48
Counter limit underruns sensor Tmin (Parameter)	49
Counter overruns of user limit Pmax (Parameter)	50
Counter overruns of user limit Tmax (Parameter)	51
Counter underruns of user limit Pmin (Parameter)	48
Counter underruns of user limit Tmin (Parameter)	49
Current output (Submenu)	82
Current range output (Parameter)	38, 40, 83

D

Damping (Parameter)	27, 71
Decimal places pressure (Parameter)	66
Decimal places scaled variable (Parameter)	68
Description of device parameters	21
Device ID (Parameter)	94
Device identification (Wizard)	23, 25, 26
Device management (Submenu)	97
Device name (Parameter)	23, 106
Device revision (Parameter)	95
Device tag (Parameter)	23, 85, 97
Device type (Parameter)	94
Diagnostic event simulation (Parameter)	52
Diagnostic settings (Submenu)	53
Diagnostics (Menu)	45
Display (Submenu)	101
Document	

Explanation of the structure of a parameter	
description	4
Function	4
Structure	4
Symbols used	5
Target group	4
Using the document	4
Document function	4

E

Electronics temperature (Parameter)	70
Enter access code (Parameter)	99
Event logbook (Submenu)	47
Extended order code 1 (Parameter)	24, 108
Extended order code 2 (Parameter)	24, 108
Extended order code 3 (Parameter)	24, 109

F

Failure behavior current output (Parameter)	39, 41, 83
Failure current (Parameter)	39, 41, 84
Filter options (Parameter)	47
Firmware version (Parameter)	108
Format display (Parameter)	102
Free text (Parameter)	30, 68, 76

Function
see Parameter

G

Geolocation (Submenu) 105
Guidance (Menu) 21, 23

H

Hardware version (Parameter) 108
HART address (Parameter) 27, 85
HART date code (Parameter) 26, 96
HART descriptor (Parameter) 26, 95
HART message (Parameter) 26, 96
HART output (Submenu) 85, 86
HART revision (Parameter) 95
HART short tag (Parameter) 26, 85, 95
High alert value (Parameter) 54, 55
HP/LP swap (Parameter) 71

I

Information (Submenu) 94, 106

L

Language (Parameter) 101
Latitude (Parameter) 105
Location Description (Parameter) 105
Location method (Parameter) 106
Locking status (Parameter) 25, 97
Longitude (Parameter) 105
Loop current mode (Parameter) 39, 41, 86
Low alert value (Parameter) 54, 55
Low flow cut off (Parameter) 33, 79
Lower Range Limit (Parameter) 33, 35, 37, 74
Lower range value output (Parameter)
. 34, 38, 40, 77, 80, 82, 83
Lower sensor trim (Parameter) 73
Lower sensor trim measured value (Parameter) 72

M

Manufacturer (Parameter) 107
Max. update period (Parameter) 94
Maximum electronics temperature (Parameter) 51
Maximum sensor temperature (Parameter) 50
Maximum terminal voltage (Parameter) 51
Measured values (Submenu) 69
Measurement adjustments (Wizard) 27, 28, 29, 31
Measuring mode current output (Parameter) 82
Measuring units (Submenu) 66

Menu

Application 66
Diagnostics 45
Guidance 21, 23
System 97
Min. update period (Parameter) 93
Minimum electronics temperature (Parameter) 49
Minimum sensor temperature (Parameter) 49
Minimum span (Parameter) 34, 35, 37, 75
Minimum terminal voltage (Parameter) 49
Minimum/maximum values (Submenu) 48

N

New password (Parameter) 100
No. of preambles (Parameter) 86

O

Old password (Parameter) 100
Operating time (Parameter) 47
Operating time from restart (Parameter) 46
Order code (Parameter) 107
Output current (Parameter) 84
Output current transfer function (Parameter) 32, 70
Output settings (Wizard) 32, 33, 34, 36, 38, 40, 42

P**Parameter**

Structure of a parameter description 4
Password (Parameter) 99
Pressure (Parameter) 32, 34, 69, 77, 79
Pressure max (Parameter) 50
Pressure min (Parameter) 48
Pressure unit (Parameter) 28, 29, 66
Pressure value 1 (Parameter) 36, 78, 79, 81
Pressure value 2 (Parameter) 37, 78, 80, 81
Previous diagnostics (Parameter) 46
Primary variable (PV) (Parameter) 87
Process (Submenu) 59, 62
Process Unit Tag (Parameter) 105
Process variable output current (Parameter) 40
Properties (Submenu) 53

Q

Quaternary variable (QV) (Parameter) 89

R

Reset device (Parameter) 98
Reset password (Parameter) 101
Reset user defined counters P and T (Parameter) 50

S

Scaled variable (Parameter) 34, 69, 79
Scaled variable (Submenu) 75
Scaled variable transfer function (Parameter) 32, 36, 77
Scaled variable unit (Parameter) 29, 67, 76
Scaled variable value 1 (Parameter) 36, 78
Scaled variable value 2 (Parameter) 37, 78
Secondary variable (SV) (Parameter) 87
Sensor (Submenu) 70
Sensor calibration (Submenu) 71
Sensor limits (Submenu) 74
Sensor pressure (Parameter) 69
Sensor pressure range behavior (Parameter) 60, 63
Sensor temperature (Parameter) 69
Sensor temperature lower range limit (Parameter) 75
Sensor temperature upper range limit (Parameter) 75
Sensor Trim Reset (Parameter) 72
Serial number (Parameter) 23, 107
Simulation (Parameter) 52
Simulation (Submenu) 52
Software configuration (Submenu) 109

Software option overview (Parameter) 110
Span (Parameter) 80, 81
SSD Monitoring delay time (Parameter) 53
SSD Out of range delay time (Parameter) 53
Status password entry (Parameter) 100
Submenu
 Active diagnostics 45
 Basic settings 70
 Burst configuration 1 89
 Configuration 57, 85
 Current output 82
 Device management 97
 Diagnostic settings 53
 Display 101
 Event logbook 47
 Geolocation 105
 HART output 85, 86
 Information 94, 106
 Measured values 69
 Measuring units 66
 Minimum/maximum values 48
 Process 59, 62
 Properties 53
 Scaled variable 75
 Sensor 70
 Sensor calibration 71
 Sensor limits 74
 Simulation 52
 Software configuration 109
 User management 99
 Wet calibration 79, 81
System (Menu) 97

T
Target group 4
Temperature unit (Parameter) 28, 30, 66
Terminal current (Parameter) 70, 84
Terminal voltage 1 (Parameter) 69
Tertiary variable (TV) (Parameter) 88
Timestamp (Parameter) 45, 46

U
Upper Range Limit (Parameter) 33, 35, 37, 74
Upper range value output (Parameter)
. 35, 38, 40, 77, 80, 82, 83
Upper sensor trim (Parameter) 74
Upper sensor trim measured value (Parameter) 73
User management (Submenu) 99
User role (Parameter) 99
User temperature process alert (Parameter) 55

V
Value 1 display (Parameter) 102
Value 2 display (Parameter) 103
Value 3 display (Parameter) 103
Value 4 display (Parameter) 104
Value current output (Parameter) 52
Value pressure simulation (Parameter) 52

W

Wet calibration (Submenu) 79, 81
Wizard
 Commissioning 23
 Device identification 23, 25, 26
 Measurement adjustments 27, 28, 29, 31
 Output settings 32, 33, 34, 36, 38, 40, 42

X

XML build number (Parameter) 109

Z

Zero (Parameter) 79, 81
Zero adjustment (Parameter) 31, 71
Zero adjustment offset (Parameter) 72



71654587

www.addresses.endress.com
