

# Operating Instructions Micropilot FMR50 PROFIBUS PA


Free space radar





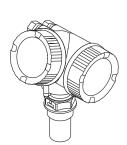

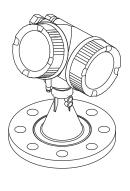

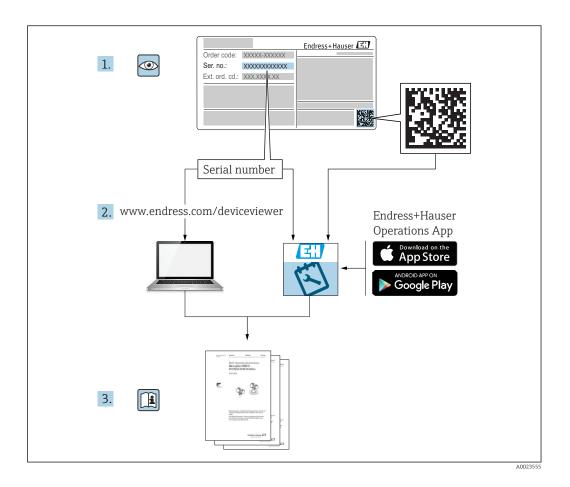

## Table of contents

1	Wichtige Hinweise zum	6.3	Installation in vessel (free space)	24
	Dokument 5		6.3.1 Horn antenna encapsulated (FMR50)	27
1.1 1.2	Document function		6.3.2 Horn antenna with slip-on flange (FMR50)	
	1.2.1       Safety symbols       5         1.2.2       Electrical symbols       5		6.3.3 Horn antenna with mounting bracket (FMR50)	
	<ul><li>1.2.3 Tool symbols 5</li><li>1.2.4 Symbols for</li></ul>		6.3.4 Measurement from the outside through plastic walls (FMR50/FMR51)	2.5
	certain types of information 6 1.2.5 Symbols in graphics 6 1.2.6 Symbols at the device 7	6.4	Installation in stilling well	
1.3 1.4	Additional documentation		well	28
1.5	Registered trademarks 9		stilling wells	
2	Basic safety instructions 10	6.5	Installation in bypass	
2.1	Requirements for the personnel 10		pipe	30
2.2 2.3	Designated use	6.6	bypass	31 32
2.4	Operational safety	6.7	Turning the transmitter housing	32
2.5	Product safety	6.8	Turning the display	33
	2.5.1 CE mark		6.8.1 Opening cover	
2.6	2.5.2 EAC conformity		6.8.2 Turning the display module 6.8.3 Closing electronics compartment	
3	Product description	6.9	cover	
3.1	Product design	7	Electrical connection	35
	3.1.2 Electronics housing 15	7.1	Connection conditions	
4	Incoming acceptance and product		7.1.2 Cable specification	37
	identification		7.1.3 Device plug connectors	
4.1	Incoming acceptance		7.1.4 Supply voltage	
4.2	Product identification	7.2	Connecting the measuring device	
	4.2.1 Nameplate		7.2.1 Opening connection compartment cover	40
5	Storage, Transport 18		7.2.2 Connecting	41
5.1 5.2	Storage conditions		7.2.3 Plug-in spring-force terminals	
6	Installation	7.3	cover	42 42
6.1	Installation conditions	8	Operation entions	44
0.1			•	
	0.1.1 Mounting position 19		( )77077710747	44
	6.1.2 Vessel installations 20 6.1.3 Reduction of interference echoes 20	8.1	Overview	
	<ul> <li>6.1.2 Vessel installations</li></ul>	8.1	8.1.1 Local operation	44
6 7	6.1.2Vessel installations206.1.3Reduction of interference echoes206.1.4Measurement in a plastic vessel216.1.5Optimization options216.1.6Beam angle22	8.1 8.2	<ul> <li>8.1.1 Local operation</li></ul>	44
6.2	6.1.2Vessel installations206.1.3Reduction of interference echoes206.1.4Measurement in a plastic vessel216.1.5Optimization options21		8.1.1 Local operation	44

	8.2.2 User roles and related access	. 14	Repairs	84
8.3	authorization		General information on repairs	84 84 84
	<ul> <li>8.3.2 Operating elements</li> <li>8.3.3 Entering numbers and text</li> <li>8.3.4 Opening the context menu</li> <li>8.3.5 Envelope curve on the display and operating module</li> </ul>	58 . 60 14.2	module	84 85
9	Integration into a PROFIBUS	15	Accessories	86
	network	62   15.3		86
9.1 9.2	Overview of the device database files (GSD) Set device address	62 62 62	15.1.1 Weather protection cover	86 86
	9.2.2 Software addressing	62	FMR56	87
10	Commissioning via wizard	64	mounting of FMR50/FMR56 15.1.5 Installation bracket for FMR50	89
11	Commissioning via operating		15.1.6 Remote display FHX50	90 91
	menu		15.1.8 Bluetooth module for HART devices	92
11.1 11.2 11.3	Installation and function check	. 65 15.4 66 15.4	B Service-specific accessories	
11.4 11.5	Recording the reference curve	68 69 <b>16</b>	Operating menu	94
11.7	11.5.1 Factory settings of the on-site	16.3		7 1
11.6	display	69 69 16.2	module)	94
11.7	Protection of the settings against unauthorized changes	16.3	B "Setup" menu	101 108 116
12	Diagnostics and troubleshooting	72	16.3.3 "Advanced setup" submenu	
12.1	General trouble shooting	. 72	16.4.1 "Diagnostic list" submenu	163 164
12.2	Diagnostic information on local display		16.4.4 "Measured values" submenu	<ul><li>165</li><li>167</li><li>169</li></ul>
12.3 12.4 12.5	Diagnostic event in the operating tool Diagnostic list	78	16.4.7 "Simulation" submenu	171 174 178
12.6	Event logbook	. 80 81 <b>Ind</b>		180 1 <b>81</b>
12.7	Firmware history	<b>I</b>		
13	Maintenance	83		
13.1 13.2	Exterior cleaning	<b>I</b>		

## 1 Wichtige Hinweise zum Dokument

## 1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

## 1.2.1 Safety symbols

Symbol	Meaning
▲ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
<b>▲</b> WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
<b>A</b> CAUTION	CAUTION!  This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

## 1.2.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
<del>-</del>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.
	The ground terminals are situated inside and outside the device:  Inner ground terminal: Connects the protectiv earth to the mains supply.  Outer ground terminal: Connects the device to the plant grounding system.

## 1.2.3 Tool symbols

Symbol	Meaning
A0013442	Torx screwdriver
A0011220	Flat blade screwdriver

Symbol	Meaning
06	Cross-head screwdriver
A0011219	
06	Allen key
A0011221	
Ø.	Hexagon wrench
A0011222	

## 1.2.4 Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
<b>✓</b> ✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation.
EA	Reference to page.
	Reference to graphic.
<b>&gt;</b>	Notice or individual step to be observed.
1., 2., 3	Series of steps.
L	Result of a step.
?	Help in the event of a problem.
	Visual inspection.

## 1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3	Item numbers
1., 2., 3	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area Indicates a hazardous area.
×	Safe area (non-hazardous area) Indicates the non-hazardous area.

#### 1.2.6 Symbols at the device

Symbol	Meaning
$\triangle \rightarrow \square$	Safety instructions Observe the safety instructions contained in the associated Operating Instructions.
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.

#### Additional documentation 1.3

Document	Purpose and content of the document			
Technical Information TI01039F (FMR50)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.			
Brief Operating Instructions KA01128F (FMR50, PROFIBUS PA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.			
Description of Device Parameters GP01018F (FMR5x, PROFIBUS PA)	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.			
Special documentation SD01087F	Functional Safety Manual The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.			
Special documentation SD01870F	Manual for Heartbeat Verification and Heartbeat Monitoring The document contains descriptions of the additional parameters and technical data which are available with the Heartbeat Verification and Heartbeat Monitoring application packages.			

- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - The W@M Device Viewer: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
  - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

## 1.4 Terms and abbreviations

Term/abbreviation	Explanation
BA	Document type "Operating Instructions"
KA	Document type "Brief Operating Instructions"
TI	Document type "Technical Information"
SD	Document type "Special Documentation"
XA	Document type "Safety Instructions"
PN	Nominal pressure
MWP	Maximum Working Pressure The MWP can also be found on the nameplate.
ToF	Time of Flight
FieldCare	Scalable software tool for device configuration and integrated plant asset management solutions
DeviceCare	Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices
DTM	Device Type Manager
DD	Device Description for HART communication protocol
$\varepsilon_{\rm r}$ (DC value)	Relative dielectric constant
Operating tool	The term "operating tool" is used in place of the following operating software:  FieldCare / DeviceCare, for operation via HART communication and PC  SmartBlue (app), for operation using an Android or iOS smartphone or tablet.
BD	Blocking Distance; no signals are analyzed within the BD.
PLC	Programmable Logic Controller
CDI	Common Data Interface
PFS	Pulse Frequence Status (Switching output)

## 1.5 Registered trademarks

#### **PROFIBUS®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

#### Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

#### Apple<sup>®</sup>

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

#### Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

## KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

#### TEFLON®

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

## TRI CLAMP®

Registered trademark of Alfa Laval Inc., Kenosha, USA

## 2 Basic safety instructions

## 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

## 2.2 Designated use

#### Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contactless level measurement of liquids, pastes and sludge. The device can also be freely mounted outside closed metal vessels (e.g. above basins, open channels or open piles) because of its operating frequency of about 26 GHz, a maximum radiated pulsed power of 5.7 mW and an average power output of 0.015 mW (for the version with advanced dynamics: maximum pulse power: 23.3 mW; average power: 0.076 mW). Operation is completely harmless to humans and animals.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ► Measured process variables: level, distance, signal strength
- ► Calculated process variables: Volume or mass in arbitrarily shaped vessels; flow through measuring weirs or flumes (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the processwetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

#### Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

► For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

#### Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80  $^{\circ}$ C (176  $^{\circ}$ F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

► For high process temperatures: Install protection against contact in order to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

► Wear the required personal protective equipment according to federal/national regulations.

## 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

#### Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with the manufacturer.

#### Repair

To ensure continued operational safety and reliability,

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

#### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

#### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

## 2.5.1 **CE mark**

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

## 2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

## 2.6 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature	Approval	Available for	Feature 020 "Power Supply; Output"				
010			A 1)	B 2)	C <sub>3)</sub>	E <sup>4)</sup> /G <sup>5)</sup>	K 6)/L 7)
BA	ATEX: II 1 G Ex ia IIC T6-T1 Ga	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
BB	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
ВС	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00680F	XA00680F	XA00680F	XA00688F	XA00680F
BG	ATEX: II 3 G Ex nA IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
ВН	ATEX: II 3 G Ex ic IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
B2	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ia IIIC Txx°C Da/Db	FMR50	XA00683F	XA00683F	XA00683F	XA00691F	-
В3	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	FMR50	XA00684F	XA00684F	XA00684F	XA00692F	XA00684F
В4	ATEX:II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00681F	XA00681F	XA00681F	XA00689F	-
СВ	CSA C/US XP Cl.I Div.1 Gr.A-D	FMR50	XA01112F	XA01112F	XA01112F	XA01114F	-
CC	CSA C/US XP Cl.I Div.1 Gr.A-D	FMR50	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div. 2, Ex ia	FMR50	XA01112F	XA01112F	XA01112F	XA01114F	-
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	FMR50	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
FA	FM IS Cl.I Div.1 Gr.A-D	FMR50	XA01116F	XA01116F	XA01116F	XA01118F	-
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	FMR50	XA01116F	XA01116F	XA01116F	XA01118F	-
FC	FM XP Cl.I Div.1 Gr.A-D	FMR50	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	FMR50	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
IA	IECEx: Ex ia IIC T6-T1 Ga	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
IB	IECEx: Ex ia IIC T6-T1 Ga/Gb	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
IC	IECEx: Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00680F	XA00680F	XA00680F	XA00688F	XA00680F
IG	IECEx: Ex nA IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
ΙΗ	IECEx: Ex ic IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
12	IECEx: Ex ia IIC T6-T1 Ga/Gb IECEx: Ex ia IIIC Txx°C Da/Db	FMR50	XA00683F	XA00683F	XA00683F	XA00691F	-
I3	IECEx: Ex d [ia] IIC T6-T1 Ga/Gb IEXEx: Ex ta IIIC Txx°C Da/Db	FMR50	XA00684F	XA00684F	XA00684F	XA00692F	XA00684F
I4	IECEx: Ex ia IIC T6-T1 Ga/Gb IECEx: Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00681F	XA00681F	XA00681F	XA00689F	-
JI	JPN Ex ia IIC T6 Ga/Gb	FMR50	XA01716F	XA01716F	-	-	-
JJ	JPN Ex [ia] IIC T6 Ga/Gb	FMR50	XA01717F	XA01717F	-	-	-

Feature	TP 37		y; Output"				
010			A 1)	B 2)	C 3)	E 4)/G 5)	K <sup>6)</sup> /L <sup>7)</sup>
KA	KC Ex ia IIC T6 Ga	FMR50	XA01045F	XA01045F	XA01045F	XA01047F	-
KB	KC Ex ia IIC T6 Ga/Gb	FMR50	XA01045F	XA01045F	XA01045F	XA01047F	-
KC	KC Ex d[ia] IIC T6	FMR50	XA01046F	XA01046F	XA01046F	XA01048F	XA01046F
MA	INMETRO: Ex ia IIC T6 Ga	FMR50	XA01286F	XA01287F	XA01288F	XA01296F	-
MC	INMETRO: Ex d[ia] IIC T6 Ga/Gb	FMR50	XA01292F	XA01292F	XA01293F	XA01298F	XA01294F
MH	INMETRO: Ex ic IIC T6 Gc	FMR50	XA01289F	XA01290F	XA01291F	XA01297F	-
NA	NEPSI Ex ia IIC T6 Ga	FMR50	XA01199F	XA01199F	XA01199F	XA01208F	-
NB	NEPSI Ex ia IIC T6 Ga/Gb	FMR50	XA01199F	XA01199F	XA01199F	XA01208F	-
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	FMR50	XA01202F	XA01202F	XA01202F	XA01211F	XA01202F
NG	NEPSI Ex nA II T6 Gc	FMR50	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
NH	NEPSI Ex ic IIC T6 Gc	FMR50	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85 90oC	FMR50	XA01205F	XA01205F	XA01205F	XA01214F	-
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T8590oC IP66	FMR50	XA01206F	XA01206F	XA01206F	XA01215F	XA01206F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	FMR50	<ul><li>XA01112F</li><li>XA01113F</li><li>XA01116F</li><li>XA01117F</li></ul>	<ul><li>XA01112F</li><li>XA01113F</li><li>XA01116F</li><li>XA01117F</li></ul>	<ul><li>XA01112F</li><li>XA01113F</li><li>XA01116F</li><li>XA01117F</li></ul>	<ul><li>XA01114F</li><li>XA01115F</li><li>XA01118F</li><li>XA01119F</li></ul>	-

- 1) 2-wire; 4-20mA HART
- 2) 2-wire; 4-20mA HART, switch output
- 3) 2-wire; 4-20mA HART, 4-20mA
- 4) 2-wire; FOUNDATION Fieldbus, switch output
- 5) 2-wire; PROFIBUS PA, switch output
- 6) 4-wire 90-253VAC; 4-20mA HART
- 7) 4-wire 10.4-48VDC; 4-20mA HART

For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table  $^{1)}$ :

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
BG	L, M or N	ATEX II 3G Ex nA [ia Ga] IIC T6-T1 Gc
ВН	L, M or N	ATEX II 3G Ex ic [ia Ga] IIC T6-T1 Gc
B3	L, M or N	ATEX II 1/2G Ex d [ia] IIC T6-T1 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IG	L, M or N	IECEx Ex nA [ia Ga] IIC T6-T1 Gc
IH	L, M or N	IECEx Ex ic [ia Ga] IIC T6-T1 Gc
I3	L, M or N	IECEx Ex d [ia] IIC T6-T1 Ga/Gb, IECEx Ex ta [ia Db] IIIC Txx°C Da/Db
МН	L, M or N	Ex ic [ia Ga] IIC T6 Gc
NG	L, M or N	NEPSI Ex nA [ia Ga] IIC T6-T1 Gc


<sup>1)</sup> The marking of certificates not mentioned in this table are not affected by the FHX50.

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
NH	L, M or N	NEPSI Ex ic [ia Ga] IIC T6-T1 Gc
N3	L, M or N	NEPSI Ex d [ia] IIC T6-T1 Ga/Gb, DIP A20/21 [ia D] TA, Txx°C IP6X

## **3** Product description

## 3.1 Product design


## 3.1.1 Micropilot FMR50

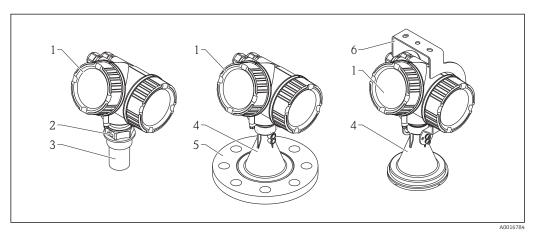

■ 1 Design of the Micropilot FMR50 (26 GHz)

- 1 Electronics housing
- 2 Process connection (Thread)
- 3 Horn antenna 40 mm (1-1/2 in), PVDF encapsulated
- 4 Horn antenna 80mm/100 mm (3in/4 in), PP cladded
- 5 Slip-on flange
- 6 Mounting bracket

## 3.1.2 Electronics housing

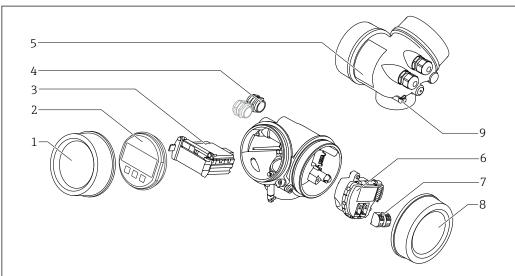

A0012422

#### **■** 2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

# 4 Incoming acceptance and product identification

## 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- Is the DVD with the operating tool present?If required (see nameplate): Are the Safety Instructions (XA) present?
- If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

## 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ( www.endress.com/deviceviewer ): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

## 4.2.1 Nameplate

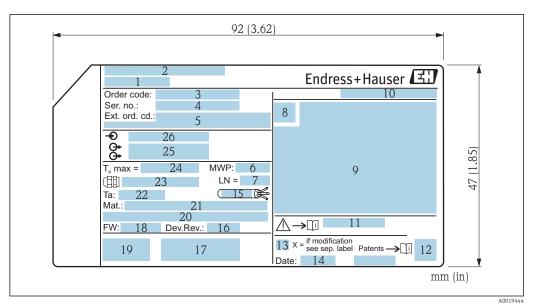

■ 3 Nameplate of the Micropilot

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (only for FMR51 with antenna extension)
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 Data Matrix Code
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of the cable
- 16 Device revision
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profil-Version; FOUNDATION Fieldbus: Device ID
- 21 Material in contact with process
- 22 Permitted ambient temperature  $(T_a)$
- 23 Size of the thread of the cable glands
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Operating voltage

Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device: Extended order code 1 to 3 parameter

## 5 Storage, Transport

## 5.1 Storage conditions


- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.

## 5.2 Transport product to the measuring point

## **NOTICE**

**Housing or antenna horn may be damaged or break away.** Risk of injury!

- ► Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna horn but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ► Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

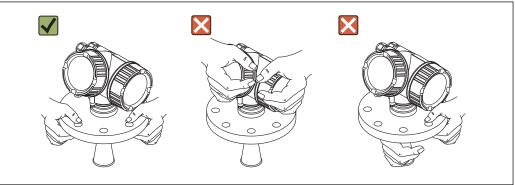


A0016875

## 6 Installation


## 6.1 Installation conditions

## 6.1.1 Mounting position

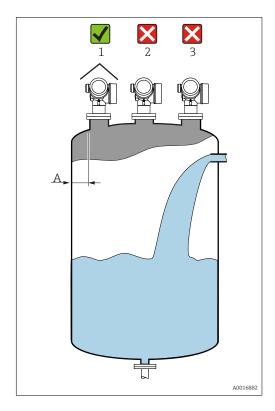


- Recommended distance **A** from wall to outer edge of nozzle: ~ 1/6 of tank diameter.
  - Nevertheless the device should not be installed closer than 15 cm (5.91 in) to the tank wall.
- Not in the center (2), as interference can cause signal loss.
- Not above the fill stream (3).
- It is recommended to us a weather protection cover (1) in order to protect the device from direct sun or rain.

## 6.1.2 Vessel installations

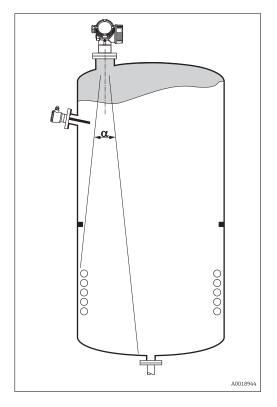


## **6.1.3** Reduction of interference echoes

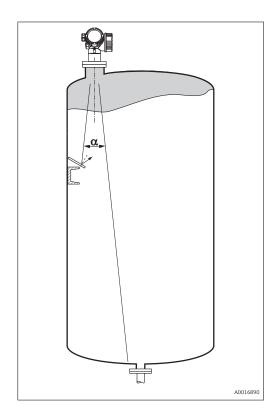

Metallic screens mounted at a slope spread the radar signal and can, therefore, reduce interference echoes.

## 6.1.4 Measurement in a plastic vessel

If the outer wall of the vessel is made of a non-conductive material (e.g. GRP), microwaves can also be reflected off interfering installations outside the vessel (e.g. metallic pipes (1), ladders (2), grates (3), ...). Therefore, there should be no such interfering installations in the signal beam. Please contact Endress+Hauser for further information.

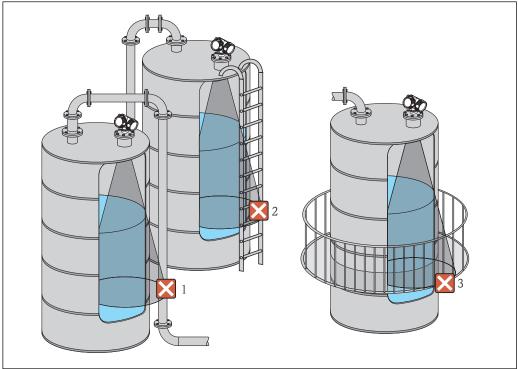

A0017123

## **6.1.5** Optimization options

Antenna size

Mapping

The measurement can be optimized by means of electronic suppression of interference

See the **Confirm distance** parameter ( $\Rightarrow \implies 113$ ) for details.

Antenna alignment


Stilling well

A stilling well can be applied to avoid interferences  $\rightarrow \triangleq 28$ .

Metallic screens mounted at a slope

They spread the radar signals and can, therefore, reduce interference echoes.

## 6.1.6 Beam angle

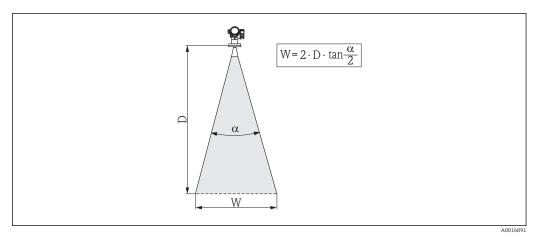

 $\blacksquare$  4 Relationship between beam angle  $\alpha$ , distance D and beamwidth diameter W


The beam angle is defined as the angle  $\alpha$  where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

Beam diameter W as a function of beam angle  $\alpha$  and measuring distance D:

FMR50				
Antenna size	40 mm (1½ in)	80 mm (3 in)	100 mm (4 in)	
Beam angle α	23°	10°	8°	
Measuring distance (D)	Beamwidth diameter W			
3 m (9.8 ft)	1.22 m (4 ft)	0.53 m (1.7 ft)	0.42 m (1.4 ft)	
6 m (20 ft)	2.44 m (8 ft)	1.05 m (3.4 ft)	0.84 m (2.8 ft)	
9 m (30 ft)	3.66 m (12 ft)	1.58 m (5.2 ft)	1.26 m (4.1 ft)	
12 m (39 ft)	4.88 m (16 ft)	2.1 m (6.9 ft)	1.68 m (5.5 ft)	
15 m (49 ft)	6.1 m (20 ft)	2.63 m (8.6 ft)	2.10 m (6.9 ft)	
20 m (66 ft)	8.14 m (27 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)	
25 m (82 ft)	10.17 m (33 ft)	4.37 m (14 ft)	3.50 m (11 ft)	
30 m (98 ft)	-	5.25 m (17 ft)	4.20 m (14 ft)	
35 m (115 ft)	-	6.12 m (20 ft)	4.89 m (16 ft)	
40 m (131 ft)	-	7.00 m (23 ft)	5.59 m (18 ft)	

## 6.2 Measuring conditions

- In case of **boiling surfaces**, **bubbling** or tendency for **foaming** use FMR53 or FMR54. Depending on its consistence, foam can either absorb microwaves or reflect them off the foam surface. Measurement is possible under certain conditions. For FMR50, FMR51 and FMR52, the additional option "Advanced dynamics" is recommended in these cases (feature 540: "Application Package", option EM).
- In case of heavy steam development or condensate, the maximum measuring range of FMR50, FMR51 and FMR52 may decrease depending on density, temperature and composition of the steam → use FMR53 or FMR54.
- For the measurement of absorbing gases such as **ammonia NH**<sub>3</sub> or some **fluorocarbons** <sup>2)</sup>, please use Levelflex or Micropilot FMR54 in a stilling well.
- The measuring range begins, where the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- In stilling well applications, the electromagnetic waves do not propagate completely outside the tube. It must be taken into account that the accuracy may be reduced in the area **C**. In order to guarantee the required accuracy in these cases, it is recommended to position the zero-point at a distance **C** above the end of the tube (see figure).
- In case of media with a low dielectric constant  $(\varepsilon_r = 1.5 \text{ to } 4)^{3)}$  the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see figure) above the tank bottom in these applications.
- In principle it is possible to measure up to the tip of the antenna with FMR51, FMR53 and FMR54. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than **A** (see figure) to the tip of the antenna.
- When using FMR54 with planar antenna, especially for media with low dielectric constants, the end of the measuring range should not be closer than A: 1 m (3.28 ft) to the flange.
- The smallest possible measuring range **B** depends on the antenna version (see figure).
- The tank height should be at least H (see table).

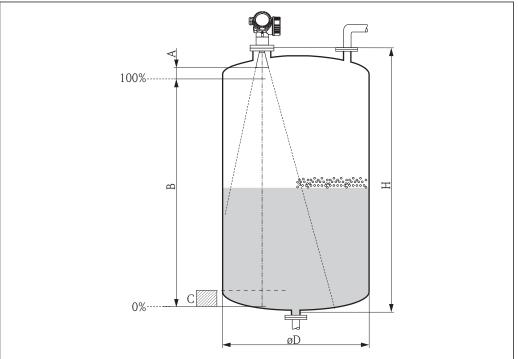

A00188

<sup>2)</sup> Affected compounds are e.g. R134a, R227, Dymel 152a.

<sup>3)</sup> Dielectric constants of important media commonly used in various industries are summarized in the DC manual (CP01076F) and in the Endress +Hauser "DC Values App" (available for Android and iOS).


Device	A [mm (in)]	B [m (ft)]	C [mm (in)]	H [m (ft)]
FMR50	150 ( 5.91)	> 0.2 (0.7)	50 to 250 (1.97 to 9.84)	> 0.3 (1.0)

## 6.3 Installation in vessel (free space)

## 6.3.1 Horn antenna encapsulated (FMR50)

#### Alignment

- Align the antenna vertically to the product surface.
- A marking at the threaded connection enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

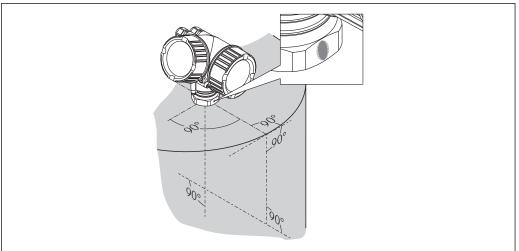


A0019434

Depending on the device version the marking may be a circle or two short parallel lines.

#### Nozzle mounting


For optimum measurement, the tip of the antenna should extend below the nozzle. This is achieved by a nozzle height up to  $H_{max} = 60 \text{ mm}$  (2.36 in).

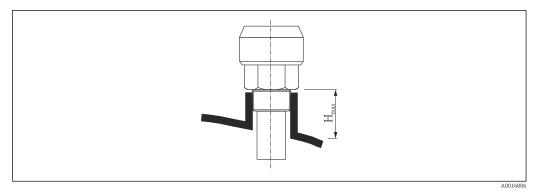

■ 5 Nozzle height for horn antenna, encapsulated (FMR50);  $H_{max}$  = 60 mm (2.36 in)

#### Conditions for longer nozzles

If the medium has good reflective properties, higher nozzles can be accepted. In this case the maximum nozzle height,  $H_{max}$ , is dependent on the nozzle diameter, D:

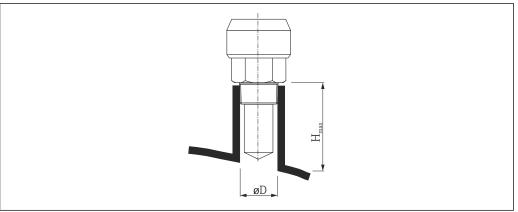

Δ002361

Nozzle diameter D	Maximum nozzle height $H_{max}$
40 mm (1.5 in)	200 mm (7.9 in)
50 mm (2 in)	250 mm (9.9 in)
80 mm (3 in)	300 mm (11.8 in)
100 mm (4 in)	400 mm (15.8 in)
150 mm (6 in)	500 mm (19.7 in)



If the antenna doesn't extend below the nozzle, observe the following:


- The nozzle end must be smooth and free of burrs. If possible its edge should be rounded.
- An interference echo suppression must be performed.
- Please contact Endress+Hauser for applications with higher nozzles than those indicated in the table.

#### Threaded connection


- Tighten with the hexagonal nut only.
- Tool: 50 mm hexagonal wrench
- Maximum permissible torque: 35 Nm (26 lbf ft)

## 6.3.2 Horn antenna with slip-on flange (FMR50)

#### Alignment

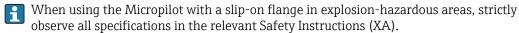


- Align the antenna vertically to the product surface.
   Optionally, a variable flange seal, which is available as an accessory, can be used for alignment (see Technical Information BA01048F, chapter "Accessories").
- A marking at the feedthrough enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

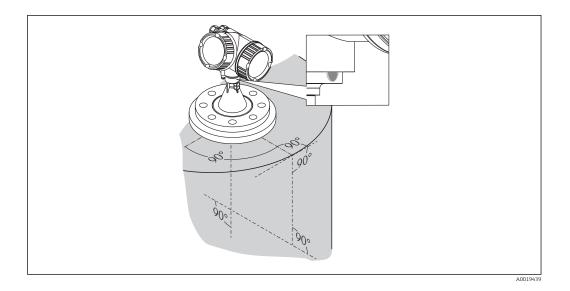

Depending on the device version the marking may be a circle or two short parallel lines.


## Nozzle mounting

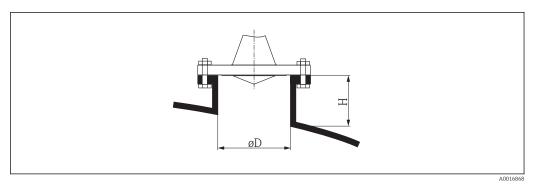

 $\blacksquare$  6 Nozzle height and diameter for horn antenna with slip-on flange

Nozzle diameter D	Maximum nozzle height $H_{max}$
80 mm (3 in)	300 mm (11.8 in)
100 mm (4 in)	400 mm (15.8 in)
150 mm (6 in)	500 mm (19.7 in)

## 6.3.3 Horn antenna with mounting bracket (FMR50)

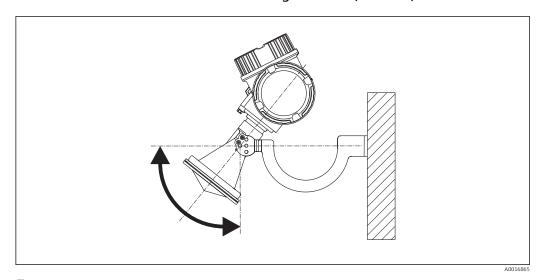

 $\blacksquare$  7 Installation of the horn antenna with mounting bracket

Align the antenna vertically to the product surface using the mounting bracket.

#### NOTICE

The mounting bracket has no conductive connection to the transmitter housing. Danger of electrostatic charge

▶ Connect the mounting bracket to the local potential equalization system.

## 6.3.4 Measurement from the outside through plastic walls (FMR50/FMR51)


- Dielectric constant of the medium:  $\varepsilon_r > 10$
- If possible, use an antenna 100 mm (4 in).
- The distance from the lower edge of the antenna to the tank ceiling should be about 100 mm (4 in).
- If possible, avoid mounting locations where condensation or build-up might occur.
- In case of outdoor mounting, the space between antenna and vessel has to be protected from the elements.
- Do not mount any potential reflectors (e.g. pipes) outside the tank in the signal beam.

#### Suitable thickness of the tank ceiling:

Penetrated material	PE	PTFE	PP	Perspex
DK / ε <sub>r</sub>	2.3	2.1	2.3	3.1
Optimum thickness 1)	3.8 mm (0.15 in)	4.0 mm (0.16 in)	3.8 mm (0.15 in)	3.3 mm (0.13 in)

Other possible values for the thickness are multiples of the values listed (e.g. for PE: 7,6 mm (0.3 in), 11,4 mm (0.45 in)

## 6.4 Installation in stilling well

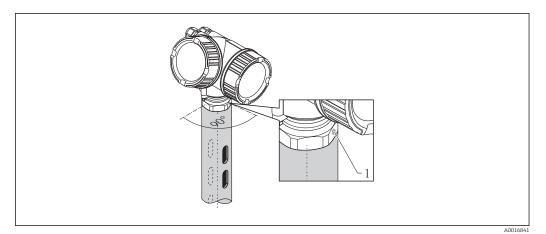

■ 8 Installation in stilling well


1 Marking for antenna alignment

- For horn antenna: Align the marking towards the slots of the stilling well.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to facilitate access to the display and the terminal compartment  $\rightarrow \blacksquare$  32.

## 6.4.1 Recommendations for the stilling well


- Metal (no enamel coating; plastic on request).
- Constant diameter.
- Diameter of stilling well not larger than antenna diameter.
- Diameter difference between horn antenna and inner diameter of the stilling well as small as possible.
- Weld seam as smooth as possible and on the same axis as the slots.
- Slots offset 180° (not 90°).
- Slot width or diameter of holes max. 1/10 of pipe diameter, de-burred. Length and number do not have any influence on the measurement.
- Select horn antenna as big as possible. For intermedaite sizes (e.g. 180 mm (7 in)) select next larger antenna and adapt it mechanically (for horn antennas)
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be left exceeding 1 mm (0.04 in).
- The stilling well must be smooth on the inside (average roughness  $R_z \leq 6.3 \ \mu m$  (248  $\mu in$ )). Use extruded or parallel welded metal pipe. An extension of the pipe is possible with welded flanges or pipe sleeves. Flange and pipe have to be properly aligned at the inside.
- Do not weld through the pipe wall. The inside of the stilling well must remain smooth. In case of unintentional welding through the pipe, the weld seam and any unevenness on the inside need to be carefully removed and smoothened. Otherwise, strong interference echoes will be generated and material build-up will be promoted.
- In the case of smaller nominal widths flanges must be welded to the pipe such that they allow for a correct orientation (marker aligned toward slots).

## 6.4.2 Examples for the construction of stilling wells

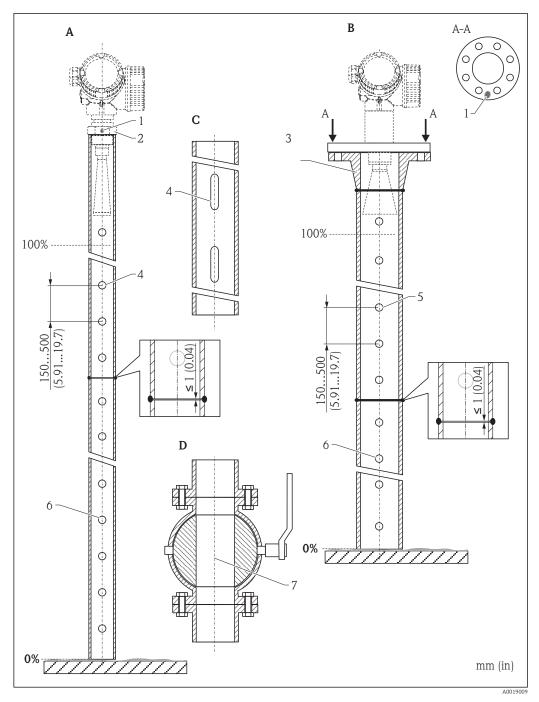

- Micropilot FMR50/FMR51: Horn 40mm(1½")
- B Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- C Stilling well with slots
- D Full bore ball valve
- 1 Marking for axial alignment
- 2 Threaded connection
- 3 e.g. welding neck flange DIN2633
- 4  $\phi$  hole max.  $1/10 \phi$  stilling well
- 5  $\phi$  hole max. 1/10  $\phi$  stilling well; single sided or drilled through
- 6 Inside of holes deburred
- 7 Diameter of opening of ball valve must always be equivalent to pipe diameter; avoid edges and constrictions.

## 6.5 Installation in bypass

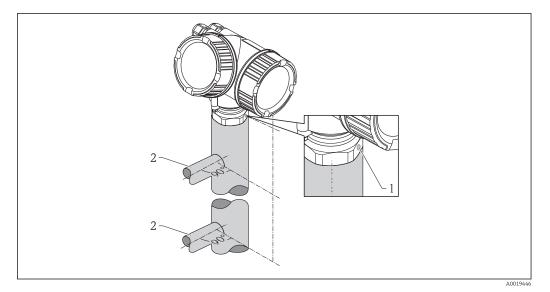


Installation in bypass

- 1 Marking for antenna alignment
- 2 Tank connectors
- Align the marker perpendicular (90°) to the tank connectors.
- Measurements can be performed through an open full bore ball valve without any problems.

## 6.5.1 Recommendations for the bypass pipe


- Metal (no plastic or enamel coating).
- Constant diameter.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 95 mm (3.5 in)) select next larger antenna and adapt it mechanically (for horn antennas).
- Diameter difference between horn antenna and inner diameter of the bypass as small as possible.
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be created exceeding 1 mm (0.04 in).
- In the area of the tank connections ( $\sim \pm 20$  cm (7.87 in)) a reduced accuracy of the measurement has to be expected.

## 6.5.2 Example for the construction of a bypass

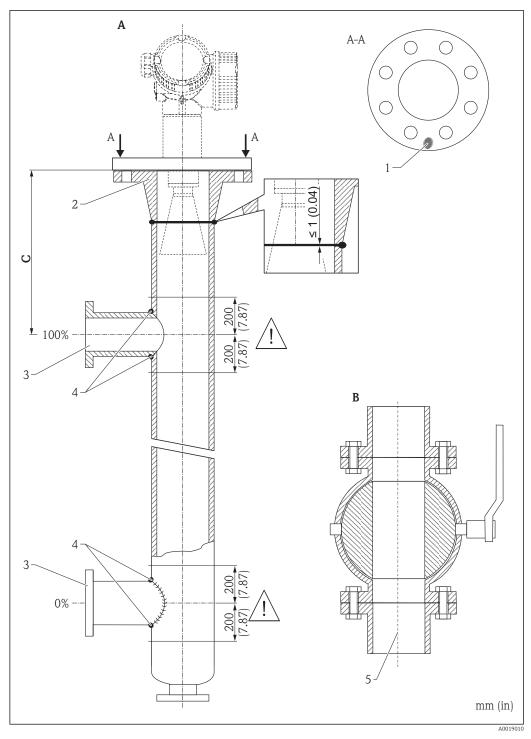

- A Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- B Full bore ball valve
- C Minimum distance to upper connection pipe: 400 mm (15,7 in)
- 1 Marking for axial alignment
- 2 e.g. welding neck flange DIN2633
- 3 Diameter of the connection pipes as small as possible
- 4 Do not weld through the pipe wall; the inside of the bypass must remain smooth.
- 5 Diameter of opening of ball valve must always be equivalent to pipe diameter. Avoid edges and constrictions.


#### Container with heat insulation 6.6

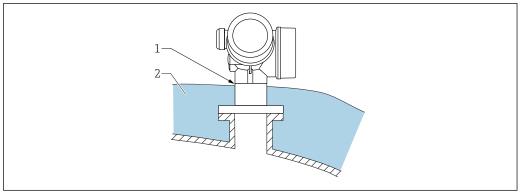

If process temperatures are high, the device should be included in the usual container insulation system (2) to prevent the electronics from heating as a result of thermal radiation or convection. The insulation should not be higher than the neck of the device (1).

#### 6.7 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

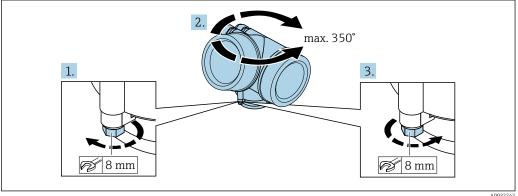

- 1. Unscrew the securing screw using an open-ended wrench.
- 2. Rotate the housing in the desired direction.
- 3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).


#### Turning the display 6.8

#### 6.8.1 Opening cover

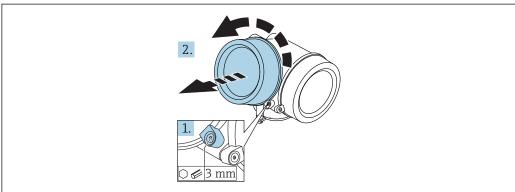


- 1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90° counterclockwise.
- 2. Unscrew cover and check lid gasket, replace if necessary.

#### 6.8.2 Turning the display module

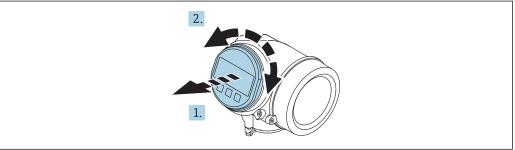

- 1. Pull out the display module with a gentle rotational movement.
- 2. Rotate the display module to the desired position: max.  $8 \times 45^{\circ}$  in each direction.
- 3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

## 6.8.3 Closing electronics compartment cover

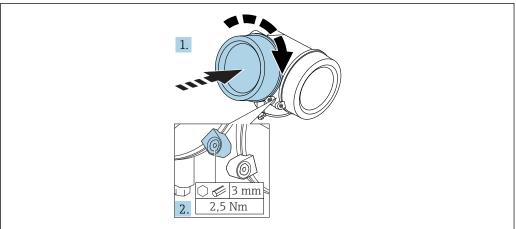

A002145

- 1. Screw back firmly electronics compartment cover.
- 2. Turning securing clamp 90  $^{\circ}$  clockwise and tighten the clamp with 2.5 Nm using the Allen key (3 mm).

## 6.9 Post-installation check


Is the device undamaged (visual inspection)?
Does the device conform to the measuring point specifications?  For example:  Process temperature  Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)  Ambient temperature range  Measuring range
Are the measuring point identification and labeling correct (visual inspection)?
Is the device adequately protected from precipitation and direct sunlight?
Are the securing screw and securing clamp tightened securely?

## 7 Electrical connection

## 7.1 Connection conditions

## 7.1.1 Terminal assignment

Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

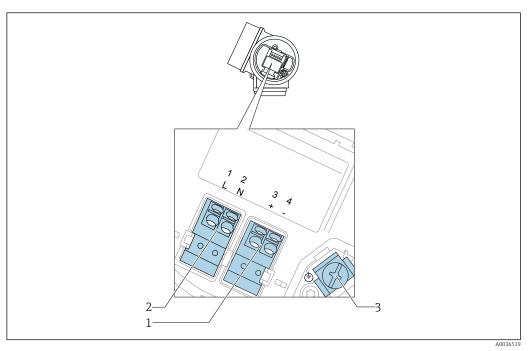

 $\blacksquare$  10 Terminal assignment 4-wire: 4-20 mA HART (90 to 253  $V_{AC}$ )


- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen

#### **A** CAUTION

#### To ensure electrical safety:

- ▶ Do not disconnect the protective connection.
- ▶ Disconnect the supply voltage before disconnecting the protective earth.
- Connect protective earth to the internal ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal.
- In order to ensure electromagnetic compatibility (EMC): Do **not** only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnector for the device (IEC/EN61010).


#### Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

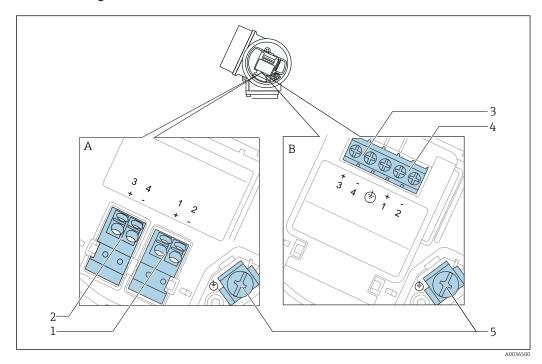

 $\blacksquare 11$  Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection
- 2 Connection switch output (Open Collector): terminals 3 and 4, without integrated overvoltage protection
- $3\qquad \textit{Connection switch output (Open Collector): terminals 3 and 4, with integrated overvoltage protection}$
- $4 \qquad \textit{Connection PROFIBUS PA/FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection}$
- 5 Terminal for cable screen


#### Block diagram PROFIBUS PA / FOUNDATION Fieldbus

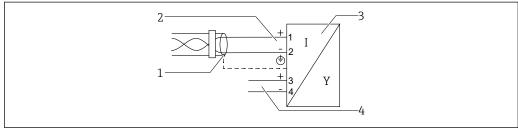

A003653

- 12 Block diagram PROFIBUS PA / FOUNDATION Fieldbus
- 1 Cable screen; observe cable specifications
- 2 Connection PROFIBUS PA / FOUNDATION Fieldbus
- 3 Measuring device
- 4 Switch output (open collector)

### Connection examples for the switch output

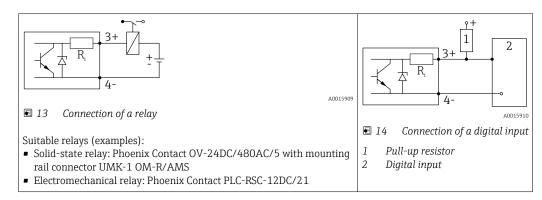

For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of  $< 1000 \Omega$ .

### 7.1.2 Cable specification

- Devices without integrated overvoltage protection
   Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- Devices with integrated overvoltage protection
   Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)
- For ambient temperature  $T_{IJ} \ge 60 \,^{\circ}\text{C}$  (140  $^{\circ}\text{F}$ ): use cable for temperature  $T_{IJ} + 20 \,^{\circ}\text{K}$ .

#### **PROFIBUS**


Use a twisted, screened two-wire cable, preferably cable type A.

For further information on the cable specifications, see Operating Instructions BA00034S "PROFIBUS DP/PA: Guidelines for planning and commissioning", PNO Guideline 2.092 "PROFIBUS PA User and Installation Guideline" and IEC 61158-2 (MBP).


#### 7.1.3 **Device plug connectors**

For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector

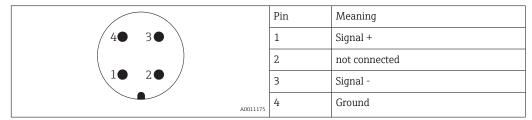

Pin assignment of the 7/8" plug connector

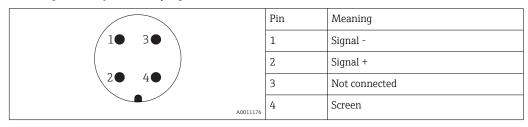

# 7.1.4 Supply voltage

#### PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; Output" 1)	"Approval" <sup>2)</sup>	Terminal voltage
E: 2-wire; FOUNDATION Fieldbus, switch output G: 2-wire; PROFIBUS PA, switch output	<ul> <li>Non-Ex</li> <li>Ex nA</li> <li>Ex nA(ia)</li> <li>Ex ic</li> <li>Ex ic(ia)</li> <li>Ex d(ia) / XP</li> <li>Ex ta / DIP</li> <li>CSA GP</li> </ul>	9 to 32 V <sup>3)</sup>
	<ul><li>Ex ia / IS</li><li>Ex ia + Ex d(ia) / IS + XP</li></ul>	9 to 30 V <sup>3)</sup>

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) Input voltages up to 35 V will not spoil the device.

Polarity sensitive	No
FISCO/FNICO compliant according to IEC 60079-27	Yes

# 7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20  $\mu$ s), an overvoltage protection module has to be installed.

### Integrated overvoltage protection module

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	$2 \times 0.5 \Omega$ max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 μs)	10 kA

## External overvoltage protection module

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

# 7.2 Connecting the measuring device

### **WARNING**


### Risk of explosion!

- ▶ Observe applicable national standards.
- ► Comply with the specifications in the Safety Instructions (XA).
- ► Use specified cable glands only.
- ► Check to ensure that the power supply matches the information on the nameplate.
- ► Switch off the power supply before connecting the device.
- ► Connect the potential matching line to the outer ground terminal before applying the power supply.

### Required tools/accessories:

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


# 7.2.1 Opening connection compartment cover

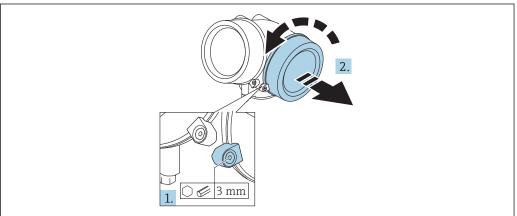

A0021490


- 1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90 ° clockwise.
- 2. Afterwards unscrew connection compartment cover and check lid gasket, replace if necessary.

# 7.2.2 Connecting

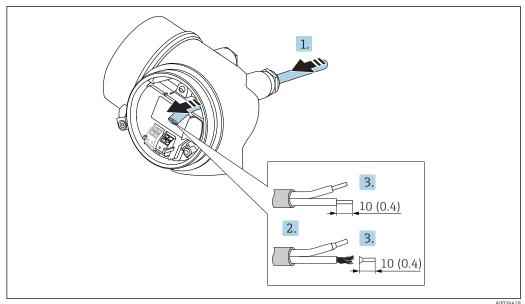

🖪 15 Dimensions: mm (in)

- 1. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 2. Remove the cable sheath.
- 3. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
- 4. Firmly tighten the cable glands.
- 5. Connect the cable in accordance with the terminal assignment.

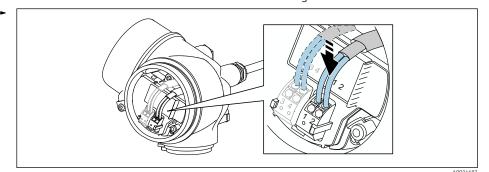


6. If using shielded cables: Connect the cable shield to the ground terminal.

### 7.2.3 Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

Endress+Hauser 41

A0030410

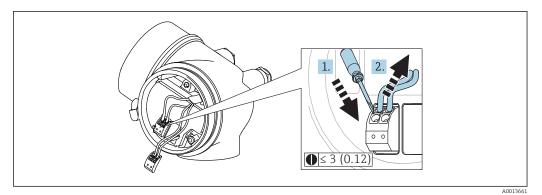


■ 16 Dimensions: mm (in)

To remove cables from the terminal:

- 1. Using a flat-blade screwdriver ≤ 3 mm, press down on the slot between the two terminal holes
- 2. while simultaneously pulling the cable end out of the terminal.

### 7.2.4 Closing connection compartment cover

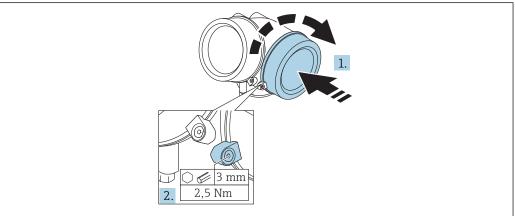

A002149

- 1. Screw back firmly connection compartment cover.
- 2. Turning securing clamp 90 ° counterclockwise and tighten the clamp with 2.5 Nm (1.84 lbf ft) again using the Allen key (3 mm).

### 7.3 Post-connection check

Is the device or cable undamaged (visual check)?
Do the cables comply with the requirements ?
Do the cables have adequate strain relief?
Are all cable glands installed, securely tightened and leak-tight?
Does the supply voltage match the specifications on the nameplate?
Is the terminal assignment correct?

If required: Has protective ground connection been established ?
If supply voltage is present, is the device ready for operation and do values appear on the display module?
Are all housing covers installed and securely tightened?
Is the securing clamp tightened correctly?


# **8** Operation options

# 8.1 Overview

# 8.1.1 Local operation

Operation with	Pushbuttons	Touch Control
Order code for "Display; Operation"	Option C "SD02"	Option E "SD03"
Display elements	A0036312 4-line display	4-line display white background lighting; switches to red in
	Format for displaying measured variables and st	event of device error tatus variables can be individually configured
	Permitted ambient temperature for the display: The readability of the display may be impaired a range.	-20 to +70 °C (-4 to +158 °F)
Operating elements	local operation with 3 push buttons (±, ⊡, 區)	external operation via touch control; 3 optical keys: ⊕, ⊡, E
	Operating elements also accessible in various ha	nzardous areas
Additional functionality	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display moton configuration.	odule can be compared to the current device
	Data transfer function The transmitter configuration can be transmitte	ed to another device using the display module.

#### 8.1.2 Operation with remote display and operating module FHX50

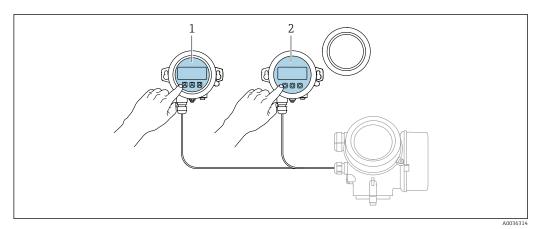


■ 17 FHX50 operating options

- Display and operating module SD03, optical keys; can be operated through the glass of the cover
- Display and operating module SD02, push buttons; cover must be removed

#### 8.1.3 Remote operation


### Via PROFIBUS PA protocol

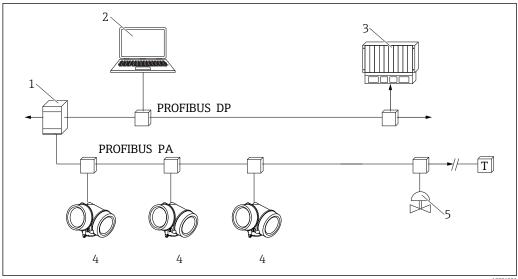

**■** 18 Options for remote operation via PROFIBUS PA protocol

- Segment coupler
- Computer with Profiboard/Proficard and operating tool (e.g. DeviceCare/FieldCare
- 3 PLC (Progrommable Logic Controller)
- Transmitter
- Additional functions (valves etc.)

### DeviceCare/FieldCare via service interface (CDI)

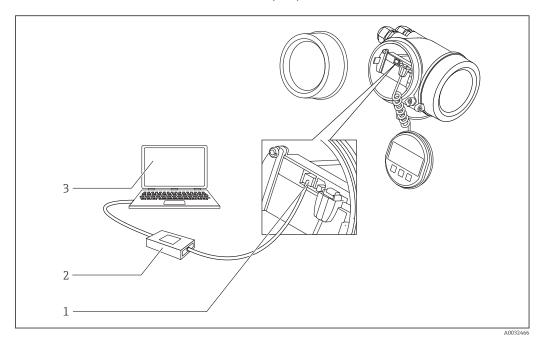

- DeviceCare/FieldCare via service interface (CDI)
- Service interface (CDI) of the instrument (= Endress+Hauser Common Data Interface) Commubox FXA291
- 3 Computer with DeviceCare/FieldCare operating tool

# 8.2 Structure and function of the operating menu

# 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the on-site display
Commissioning <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
Setup	Parameter 1  Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	Advanced setup	Contains additional submenus and parameters:  to adapt the device to special measuring conditions.  to process the measured value (scaling, linearization).  to configure the signal output.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook 3)	Contains the last 20 messages (which are no longer active).
	Device information	Contains information for identifying the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Is used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
	Heartbeat 4)	Contains all the wizards for the Heartbeat Verification and Heartbeat Monitoring application packages.
Expert <sup>5)</sup> Contains all parameters of the device (including those that are already in one of the other menus). This menu is organized	System	Contains all higher-order device parameters that do not concern the measurement or measured value communication.
according to the function blocks of the device.  The parameters of the Expert menu are	Sensor	Contains all parameters needed to configure the measurement.
described in: GP01018F (PROFIBUS PA)	Output	Contains all parameters needed to configure the switch output (PFS).

Menu	Submenu / parameter	Meaning
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup  $\rightarrow$ Advanced setup → Display"

  Only if operating via an FDT/DTM system only available with local operation
- 2)
- 3)
- 4) 5) only available if operating via DeviceCare or FieldCare
  On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.

#### 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access  $\rightarrow \triangleq 49$ .

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	~	V	V	
Maintenance	~	V	V	V

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.



The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

### 8.2.3 Data access - Security

### Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

### Define access code via local display

- Navigate to: Setup → Advanced setup → Administration → Define access code
   Define access code
- 2. Define a max. 4-digit numeric code as an access code.
- 3. Repeat the same code in **Confirm access code** parameter.
  - ► The 🗈-symbol appears in front of all write-protected parameters.

### Define access code via operating tool (e.g. FieldCare)

- 1. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code
- 2. Define a max. 4-digit numeric code as an access code.
  - **▶** Write protection is active.

#### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.



- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the 🗈-symbol.

### Disabling write protection via access code

If the  $\square$ -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display  $\rightarrow \square$  49.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

- 1. After you press E, the input prompt for the access code appears.
- 2. Enter the access code.
  - The \( \mathbb{O}\)-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

### Deactivation of the write protection via access code

#### Via local display

- Navigate to: Setup → Advanced setup → Administration → Define access code
   Define access code
- 2. Enter **0000**.
- 3. Repeat **0000** in **Confirm access code** parameter.
  - The write protection is deactivated. Parameters can be changed without entering an access code.

### Via an operating tool (e.g. FieldCare)


- 1. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code
- 2. Enter **0000**.
  - The write protection is deactivated. Parameters can be changed without entering an access code.

### Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via PROFIBUS PA protocol

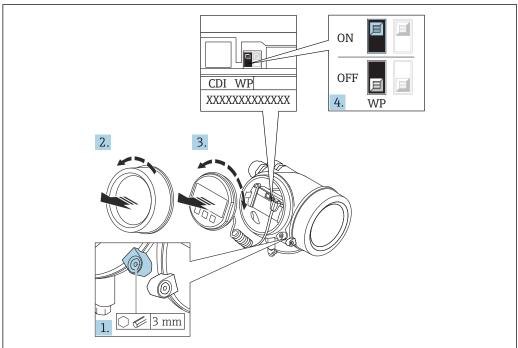


A0026157

- 1. Loosen the securing clamp.
- 2. Unscrew the electronics compartment cover.
- 3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

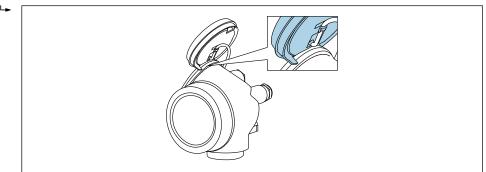

A0036086

- 4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - If the hardware write protection is enabled: The Hardware locked option is displayed in the Locking status parameter. In addition, on the local display the 
     ⑤-symbol appears in front of the parameters in the header of the operational display and in the navigation view.

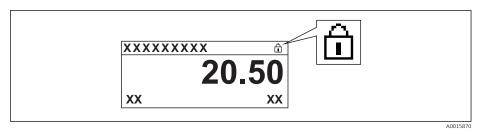

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the 🛍-symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

- 5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
- 6. Reverse the removal procedure to reassemble the transmitter.

### Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

# For the SD03 display only

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### To activate the keylock manually:

1. The device is in the measured value display.

Press E for at least 2 seconds.

- ► A context menu appears.
- 2. In the context menu select the **Keylock on** option.
  - ► The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.

Press 

for at least 2 seconds.

- ► A context menu appears.
- 2. In the context menu select the **Keylock off** option.
  - ► The keypad lock is switched off.


### Bluetooth® wireless technology

Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue app
- Only one point-to-point connection between one sensor and one smartphone or tablet is established

# 8.3 Display and operating module

# 8.3.1 Display appearance

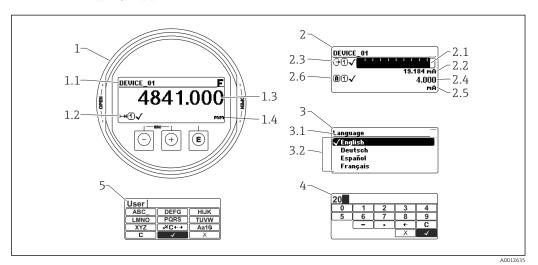

■ 20 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list;  $\square$  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

### Display symbols for the submenus

Symbol	Meaning	
A0018367	Display/operation Is displayed:  in the main menu next to the selection "Display/operation"  in the header, if you are in the "Display/operation" menu	
A0018364	Setup Is displayed:  ■ in the main menu next to the selection "Setup"  ■ in the header, if you are in the "Setup" menu	
A0018365	Expert Is displayed:  in the main menu next to the selection "Expert"  in the header, if you are in the "Expert" menu	
A0018366	Diagnostics Is displayed:  in the main menu next to the selection "Diagnostics"  in the header, if you are in the "Diagnostics" menu	

# Status signals

A0032902	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b>	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
M A0032905	"Maintenance required" Maintenance is required. The measured value is still valid.

# Display symbols for the locking state

Symbol	Meaning
A0013148	Display parameter Marks display-only parameters which can not be edited.
A0013150	<ul> <li>▶ In front of a parameter name: The device is locked via software and/or hardware.</li> <li>▶ In the header of the measured value screen: The device is locked via hardware.</li> </ul>

# Measured value symbols


Symbol	Meaning			
Measured values				
~~	Level			
A003	2892			
⊢	Distance			
A003	Current output			
A003				
(A)	Measured current			
A003	9894			
(A)	Terminal voltage			
A003				
n Aug	Temperature of the electronics or the sensor			
A003	-			
Measuring channel				
<u> </u>	Measuring channel 1			
A003	2897			
	Measuring channel 2			
A003				
Status of the measured value				
	Status "Alarm"			
A001	The measurment is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.			
$\wedge$	Status "Warning"			
A00:	The device continues measuring. A diagnostic message is generated.			

56

# 8.3.2 Operating elements

Key	Meaning
	Minus key
A0018330	For menu, submenu Moves the selection bar upwards in a picklist.
	For text and numeric editor In the input mask, moves the selection bar to the left (backwards).
	Plus key
+	For menu, submenu Moves the selection bar downwards in a picklist.
A0018329	For text and numeric editor In the input mask, moves the selection bar to the right (forwards).
	Enter key
	For measured value display  ■ Pressing the key briefly opens the operating menu.  ■ Pressing the key for 2 s opens the context menu.
E) A0018328	<ul> <li>For menu, submenu</li> <li>Pressing the key briefly         Opens the selected menu, submenu or parameter.</li> <li>Pressing the key for 2 s for parameter:         If present, opens the help text for the function of the parameter.</li> </ul>
	For text and numeric editor  Pressing the key briefly Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously)
— + <b>+</b>	For menu, submenu  ■ Pressing the key briefly  — Exits the current menu level and takes you to the next higher level.  — If help text is open, closes the help text of the parameter.  ■ Pressing the key for 2 s returns you to the measured value display ("home position").
	For text and numeric editor Closes the text or numeric editor without applying changes.
-+E A0032910	Minus/Enter key combination (press and hold down the keys simultaneously) Reduces the contrast (brighter setting).
++E A0032911	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).

# 8.3.3 Entering numbers and text

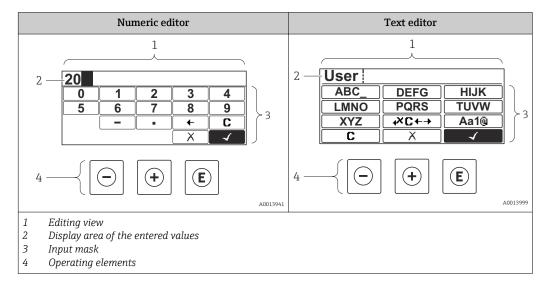

### Input mask


The following input symbols are available in the input mask of the numeric and text editor:

### Numeric editor symbols

Symbol	Meaning
0	Selection of numbers from 0 to 9.
<b>9</b> A0013998	
A0016619	Inserts decimal separator at the input position.
A0016620	Inserts minus sign at the input position.
A0013985	Confirms selection.
A0016621	Moves the input position one position to the left.
X A0013986	Exits the input without applying the changes.
A0014040	Clears all entered characters.

### Text editor symbols

Symbol	Meaning
ABCXYZ	Selection of letters from A to Z
<b>Aa1</b> @	Toggle  Between upper-case and lower-case letters  For entering numbers  For entering special characters

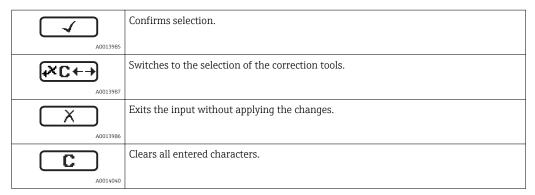

### Correction symbols under $\nearrow$

Symbol	Meaning
C	Clears all entered characters.
A0032907	
<b>-</b>	Moves the input position one position to the right.
A0018324	
4	Moves the input position one position to the left.
A0018326	
<b>*</b>	Deletes one character immediately to the left of the input position.
A0032906	

### 8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Env.curve
- Keylock on

### Opening and closing the context menu

The user is in the operational display.

- 1. Press E for 2 s.
  - └ The context menu opens.

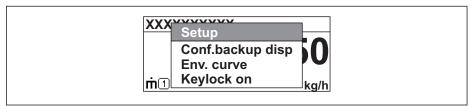

A0033110-EN

- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The context menu is closed and the operational display appears.


### Calling up the menu via the context menu

- 1. Open the context menu.
- 2. Press ± to navigate to the desired menu.
- 3. Press **E** to confirm the selection.
  - The selected menu opens.

60

# 8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

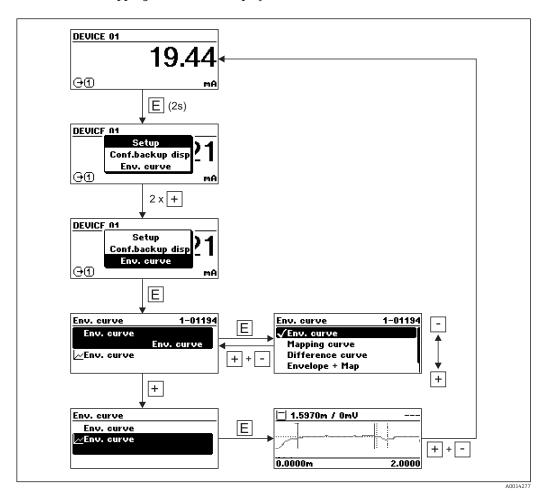


# 9 Integration into a PROFIBUS network

# 9.1 Overview of the device database files (GSD)

Manufacturer ID	17 (0x11)
Ident number	0x1559
Profile version	3.02
GSD file	Information and files under:
GSD file version	<ul><li>www.endress.com</li><li>www.profibus.org</li></ul>

### 9.2 Set device address

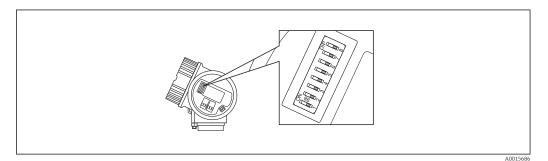


■ 21 Address switches in terminal compartment

### 9.2.1 Hardware adressing

- 1. Set switch 8 to "OFF".
- 2. Define the address with switches 1 to 7 according to the table below.

The address change becomes effective after 10 seconds. The device restarts automatically.


Switch	1	2	3	4	5	6	7
Value in position "ON"	1	2	4	8	16	32	64
Value in position "OFF"	0	0	0	0	0	0	0

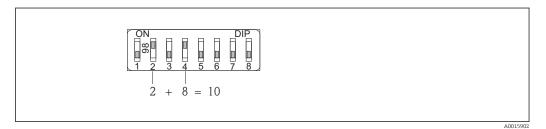

 $\blacksquare$  22 Example of hardware addressing: switch 8 is in position "OFF"; switches 1 to 7 define the address.

### 9.2.2 Software addressing

- 1. Set switch 8 to "ON".
- 2. The device restarts automatically. The address remains the same as before (factory setting: 126).
- 3. Set the required address via the operating menu: Setup  $\rightarrow$  Device address

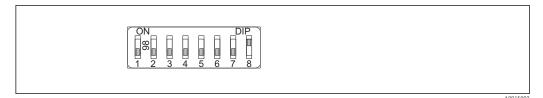


■ 23 Example of software addressing; switch 8 is in position "ON"; the address is defined in the operating menu (Setup  $\rightarrow$  Device address)

# 10 Commissioning via wizard

A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare  $^{4)}$ .

- 1. Connect the device to FieldCare or DeviceCare  $\rightarrow \triangleq 45$ .
- 2. Open the device in FieldCare or DeviceCare.
  - └ The dashboard (home page) of the device appears:

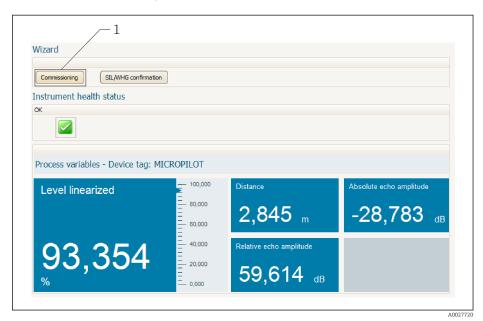

1 "Commissioning" button calls up the wizard.

- 3. Click on "Commissioning" to call up the wizard.
- 4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
- 5. Click "Next" to switch to the next page.
- 6. After finishing the last page, click "End of sequence" to close the wizard.
- If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

<sup>4)</sup> DeviceCare is available for download at www.software-products.endress.com. The download requires a registration in the Endress+Hauser software portal.

# 11 Commissioning via operating menu


### 11.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 🖺 34
- Checklist "Post-connection check" → 🖺 42


# 11.2 Setting the operating language

Factory setting: English or ordered local language

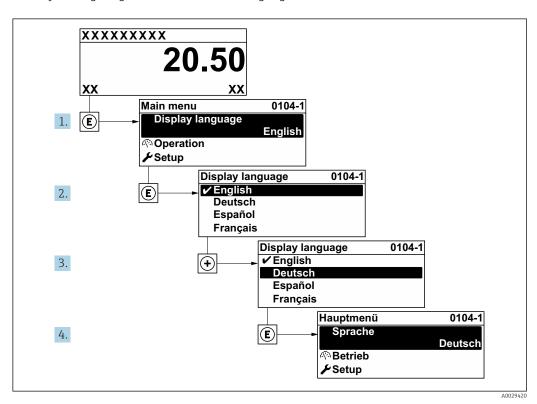

 $\blacksquare$  24 Using the example of the local display

# 11.3 Configuration of a level measurement

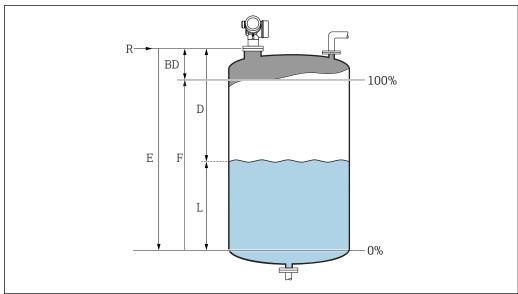

A001693

- 25 Configuration parameters for level measurements in liquids
- *R* Reference point of the measurement
- D Distance
- L Level
- E Empty calibration (= zero)
- F Full calibration (= span)
- 1. Navigate to: Setup → Device tag
  - ► Enter tag for measuring point.
- 2. Navigate to: Setup → Device address
  - ► Enter bus address of the device (only in case of software addressing).
- 3. Navigate to: Setup → Distance unit
  - ► Select distance unit.
- 4. Navigate to: Setup → Tank type
  - Select tank type.
- 5. For **Tank type** parameter = Bypass / pipe:

Navigate to: Setup → Tube diameter

- ► Enter the diameter of the stilling well or bypass.
- 6. Navigate to: Setup → Medium group
  - Specify medium group: (Water based (DC >= 4) or Others)
- 7. Navigate to: Setup → Empty calibration
  - ► Enter empty distance E (Distance from reference point R to the 0% level) 5).
- 8. Navigate to: Setup  $\rightarrow$  Full calibration
  - ► Enter full distance F (Distance from the 0% to the 100% level).
- 9. Navigate to: Setup → Level
  - └ Indicates the measrued level L.
- 10. Navigate to: Setup  $\rightarrow$  Distance
  - Indicates the measured distance from the reference point R to the level L.

<sup>5)</sup> If, for example, the measuring range covers only an upper part of the tank (E << tank height), it is mandatory to enter the acutal tank height into the "Setup  $\rightarrow$  Advanced Setup  $\rightarrow$  Level  $\rightarrow$  Tank/silo height" parameter.

- 11. Navigate to: Setup  $\rightarrow$  Signal quality
  - └ Indicates the quality of the evaluated level echo.
- 12. When operating via local display:

Navigate to: Setup → Mapping → Confirm distance

- Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
- 13. When operating via operating tool:

Navigate to: Setup → Confirm distance

- Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
- 14. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Level unit
  - ► Select level unit: %, m, mm, ft, in (Factory setting: %)
- The response time of the device is preset by the **Tank type** parameter ( $\rightarrow \implies 109$ ). More detailed settings are possible in the **Advanced setup** submenu.

# 11.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

### Navigation in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

### Meaning of the options

- No
  - No action
- Yes

The current envelope curve is saved as reference curve.

- In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.
- The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare.



■ 26 The "Load Reference Curve" function

# 11.5 Configuration of the on-site display

# 11.5.1 Factory settings of the on-site display

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

# 11.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following submenu: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display

# 11.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

### Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

### Meaning of the options

#### Cancel

No action is executed and the user exits the parameter.

#### Execute backup

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

#### Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

### Duplicate

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

### Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

### Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
- If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset → 158 will not restore the original status..

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

# 11.7 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via locking switch (hardware locking) → 🖺 50

# 12 Diagnostics and troubleshooting

# 12.1 General trouble shooting

### 12.1.1 General errors

Error	Possible cause	Remedial action		
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.		
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.		
Values on the display invisible	Contrast setting is too weak or too strong.	<ul> <li>Increase contrast by pressing ± and E simultaneously.</li> <li>Decrease contrast by pressing □ and E simultaneously.</li> </ul>		
	The plug of the display cable is not connected correctly.	Connect the plut correctly.		
	Display is defective.	Replace display.		
"Communication error" is indicated	Electromagnetic interference	Check grounding of the device.		
on the display when starting the device or connecting the display	Broken display cable or display plug.	Exchange display.		
Duplicating of the parameters from one device to another via the display doesn't work. Only the "Save" and "Abort" options are available.	Display with backup is not recognized if no data backup has been performed at the device before.	Connect display (with the backup) and restart the device.		
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.		
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.		

# 12.1.2 Parametrization errors


Error	Possible cause	Remdy		
Measured value incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul> <li>Check and adjust         Empty calibration parameter         (→ ≧ 110) if necessary.</li> <li>Check and adjust Full calibration         parameter (→ ≧ 111) if necessary.</li> <li>Check and adjust linearization if         necessary (Linearization submenu         (→ ≧ 129)).</li> </ul>		
	For measurements in bypasses / stilling well:  Wrong tank type Wrong tube diameter	<ul> <li>Select Tank type (→ ■ 109) =         Bypass / pipe.</li> <li>Enter correct diamter in Tube         diameter parameter (→ ■ 109).</li> </ul>		
	Wrong level correction	Enter correct value in <b>Level correction</b> parameter ( $\rightarrow \stackrel{\triangle}{=} 126$ ).		
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out tank mapping ( <b>Confirm distance</b> parameter (→ 🖺 113)).		

Error	Possible cause	Remdy
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	<ul> <li>Carry out tank mapping (Confirm distance parameter (→ 🖺 113)).</li> <li>If necessary, clean antenna</li> <li>If necessary, selet better mopunting position</li> </ul>
If the surface is not calm (e.g. filling, emptying, agitator running), the measured value jumps sporadically to a higher level	Signal is weakened by the rough surface - the interference echoes are sometimes stronger.	<ul> <li>Carry out tank mapping (Confirm distance parameter (→ ≦ 113)).</li> <li>Select Tank type (→ ≦ 109) = Process vessel with agitator.</li> <li>Increase integration time (Expert → Sensor → Distance → Integration time)</li> <li>Optimize orientation of the antenna</li> <li>If necessary, select a better mounting position and/or larger antenna.</li> </ul>
During filling/emptying the measxured value jumps downwards	Multiple echoes	<ul> <li>Check Tank type parameter         (→              □ 109).</li> <li>If possible, do not select central installation position.</li> <li>If appropriate, use a stilling well.</li> </ul>
Error message F941 or S941 "Echo lost"	Level echo is too weak.	Check Medium group parameter (→ ≧ 109).     If necessary, select a more detailed setting in Medium property parameter (→ ≧ 122).     Optimize alignment of antenna     If necessary, select a better installation position and/or larger antenna.
	Level echo suppressed.	Delete mapping and record it again.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the tank is empty ( <b>Confirm distance</b> parameter (→ 🖺 113)).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set <b>Tank type</b> parameter (→ 🖺 109) correctly.

## 12.2 Diagnostic information on local display

#### 12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

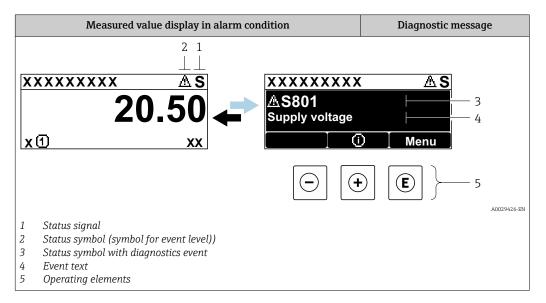

#### Status signals


A0032902	<b>"Failure (F)" option</b> A device error is present. The measured value is no longer valid.
<b>C</b>	<b>"Function check (C)" option</b> The device is in service mode (e.g. during a simulation).
<b>S</b>	<ul> <li>"Out of specification (S)" option</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
A0032905	"Maintenance required (M)" option Maintenance is required. The measured value is still valid.

#### Status symbol (symbol for event level)

8	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
Δ	"Warning" status The device continues to measure. A diagnostic message is generated.

#### Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

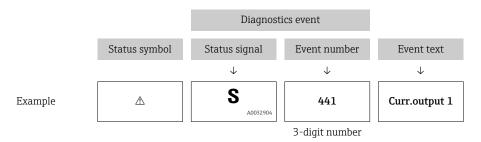

If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.




Past diagnostic messages that are no longer pending are shown as follows:

- On the local display:
- in the **Event logbook** submenu
- In FieldCare: via the "Event List /HistoROM" function.

#### **Operating elements**

Operating functions in menu, submenu	
+	Plus key Opens the message about the remedial measures.
E	Enter key Opens the operating menu.

#### 12.2.2 Calling up remedial measures

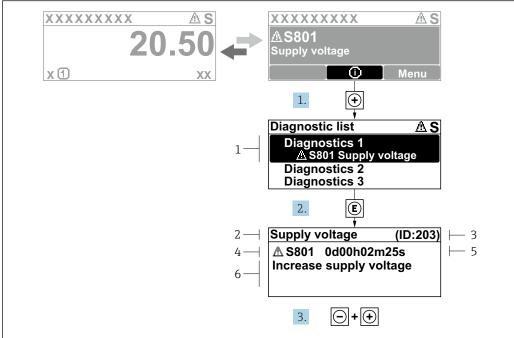

A0029431-EN

- 27 Message for remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

- 1. Press ± (①-Symbol).
  - **→ Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\blacksquare$ .
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

- 1. Press E.
  - └─ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message for the remedial measures closes.


### 12.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)


#### A: Via the operating menu

- 1. Navigate to the **Diagnostics** menu.
  - In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
- 2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

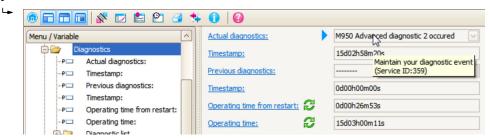


A tool tip with remedial measures for the diagnostic event appears.

#### B: Via the "Create documentation" function

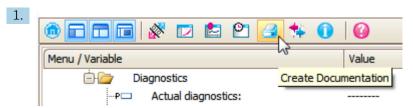


Select the "Create documentation" function.

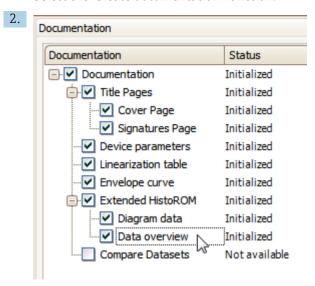

Make sure "Data overview" is marked.

- 3. Click "Save as ..." and save a PDF of the protocol.
  - └ The protocol contains the diagnostic messages and remedy information.

#### C: Via the "Eventlist / Extended HistoROM" function

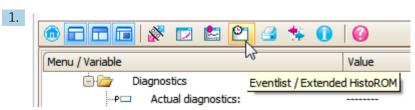

Select the "Eventlist / Extended HistoROM" function.



Select the "Load Eventlist" function.

The list of events, including remedy information, is shown in the "Data overview" window.

### 12.4 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

#### Navigation path

Diagnostics → Diagnostic list

#### Calling up and closing the remedial measures

- 1. Press E.
  - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message about the remedial measures closes.

## 12.5 Overview of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of e	electronic			1
242	Software incompatible	Check software     Flash or change main electronics module	F	Alarm
252	Modules incompatible	Check electronic modules     Change I/O or main electronic module	F	Alarm
261	Electronic modules	Restart device     Check electronic modules     Change I/O Modul or main electronics	F	Alarm
262	Module connection	Check module connections     Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	Restart device     Change main electronic module	F	Alarm
272	Main electronic failure	Restart device     Contact service	F	Alarm
273	Main electronic failure	Emergency operation via display     Change main electronics	F	Alarm
275	I/O module failure	Change I/O module	F	Alarm
276	I/O module failure	Restart device     Change I/O module	F	Alarm
282	Data storage	Restart device     Contact service	F	Alarm
283	Memory content	Transfer data or reset device     Contact service	F	Alarm
311	Electronic failure	Transfer data or reset device     Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	М	Warning
Diagnostic of o	configuration			
410	Data transfer	Check connection     Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	С	Warning
412	Processing Download	Download active, please wait	С	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	Restart device     Contact service	F	Alarm
438	Dataset	Check data set file     Check device configuration     Up- and download new configuration	М	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	С	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
485	Simulation measured value	Deactivate simulation	С	Warning
494	Switch output simulation	Deactivate simulation switch output	С	Warning
495	Simulation diagnostic event	Deactivate simulation	С	Warning
497	Simulation block output	Deactivate simulation	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
586	Record map	Recording of mapping please wait	С	Warning
Diagnostic of p	rocess			
801	Energy too low	Increase supply voltage	S	Warning
825	Operating temperature	Check ambient temperature	S	Warning
825	Operating temperature	2. Check process temperature	F	Alarm
921	Change of reference	Check reference configuration     Check pressure     Check sensor	S	Warning
941	Echo lost	Check parameter 'DC value'	F	Alarm 1)
942	In safety distance	Check level     Check safety distance     Reset self holding	S	Alarm 1)
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostic 1 to 2 occured	Maintain your diagnostic event	М	Warning 1)

<sup>1)</sup> Diagnostic behavior can be changed.

## 12.6 Event logbook

#### 12.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu  $^{6)}$ .

#### Navigation path

 ${\tt Diagnostics} \rightarrow {\tt Event\ logbook} \rightarrow {\tt Event\ list}$ 

A maximum of 100 event messages can be displayed in chronological order.

Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

80

<sup>6)</sup> This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - €: Event has occurred
  - ⊖: Event has ended
- Information event
  - €: Event has occurred

#### Calling up and closing the remedial measures

- 1. Press E
  - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message about the remedial measures closes.

#### 12.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

#### Navigation path

Diagnostics → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

#### 12.6.3 Overview of information events

Info number	Info name
I1000	(Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared

Info number	Info name	
I1256	Display: access status changed	
I1264	Safety sequence aborted	
I1335	Firmware changed	
I1397	Fieldbus: access status changed	
I1398	CDI: access status changed	
I1512	Download started	
I1513	Download finished	
I1514	Upload started	
I1515	Upload finished	

## 12.7 Firmware history

Date	Firmware	Modifications	Documentation (FMR50, PROFIBUS PA)			
	version		Operating Instructions	<b>Description of Parameters</b>	Technical Information	
04.2013	01.00.zz	Original software	BA01124F/00/EN/01.13	GP01018F/00/EN/01.13	TI01039F/00/EN/02.13	
03.2015	01.01.zz	<ul> <li>additional languages</li> <li>HistoROM functionality enhanced</li> <li>Improvements and bugfixes</li> </ul>	BA01124F/00/EN/02.14 BA01124F/00/EN/03.16 <sup>1)</sup>	GP01018F/00/EN/02.14	TI01039F/00/EN/05.14 TI01039F/00/EN/07.16 <sup>1)</sup>	

<sup>1)</sup> Contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.

The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## 13 Maintenance

The measuring device requires no special maintenance.

## 13.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the hosuing and the seals.

## 13.2 Replacing seals

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

## 14 Repairs

### 14.1 General information on repairs

#### 14.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

#### 14.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

#### 14.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

#### 14.1.4 Replacement of a device

After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:


- Via the display module
   Condition: The configuration of the old device has been saved in the display module
   → 155.
- Via FieldCare

Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

### 14.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL for the W@M Device Viewer (www.endress.com/deviceviewer):
     There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

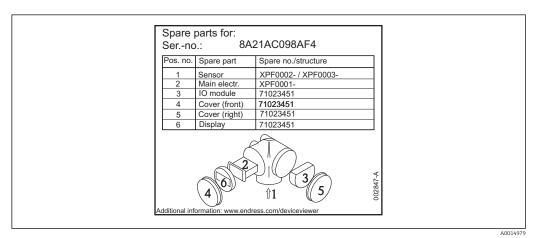

■ 28 Example for spare part nameplate in connection compartment cover

Measuring device serial number:

- Is located on the device and spare part nameplate.
- Can be read out via the "Serial number" parameter in the "Device information" submenu.

#### 14.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <a href="http://www.endress.com/support/return-material">http://www.endress.com/support/return-material</a>

## 14.4 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

## 15 Accessories

## 15.1 Device-specific accessories


### 15.1.1 Weather protection cover

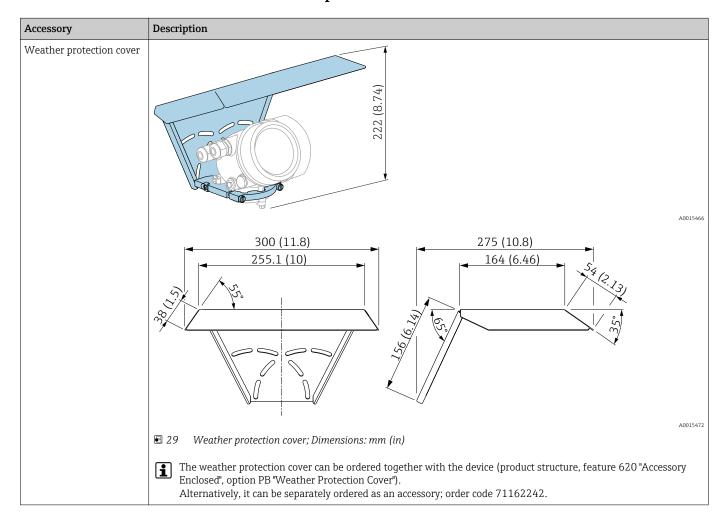

### 15.1.2 Mounting nut G1-1/2


Accessory	Description
Mounting nut G1-1/2	Drawing in preparation For FMR50 with with 40mm/1-1/2" horn antenna and G1-1/2" thread Material: PC Order code: 52014146

#### 15.1.3 Variable flange seal for FMR50/FMR56

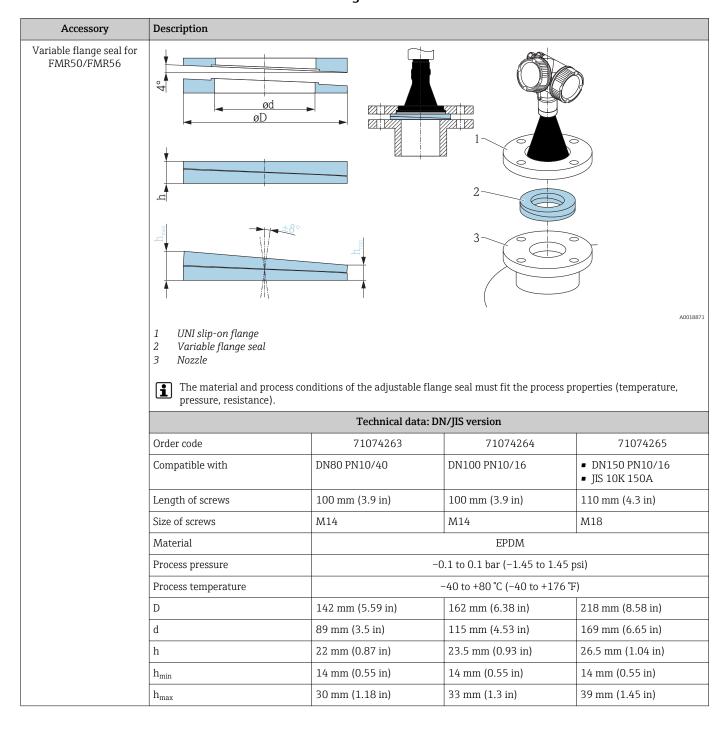


Accessory	Description				
	Technical data: ASME/JIS version				
	Order code	71249070	71249072	71249073	
	Compatible with	<ul><li>ASME 3" 150lbs</li><li>JIS 80A 10K</li></ul>	ASME 4" 150lbs	ASME 6" 150lbs	
	Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)	
	Recommended screw size	M14	M14	M18	
	Material	EPDM			
	Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)			
	Process temperature	-40 to +80 °C (-40 to +176 °F)			
	D	133 mm (5.2 in)	171 mm (6.7 in)	219 mm (8.6 in)	
	d	89 mm (3.5 in)	115 mm (4.53 in)	168 mm (6.6 in)	
	h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)	
	h <sub>min</sub>	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)	
	h <sub>max</sub>	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)	

# 15.1.4 Mounting bracket for wall or ceiling mounting of FMR50/FMR56

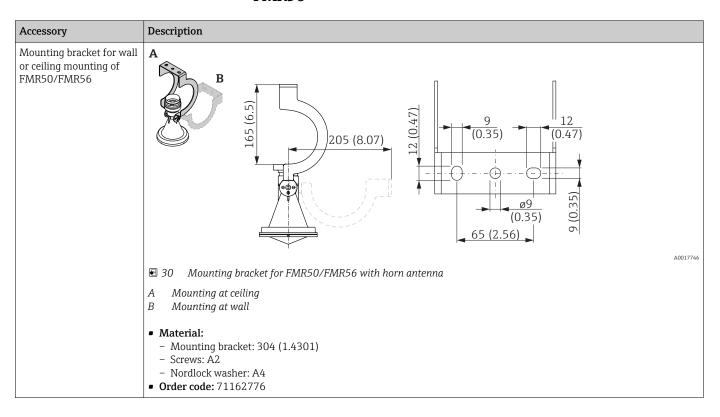


#### 15.1.5 Installation bracket for FMR50

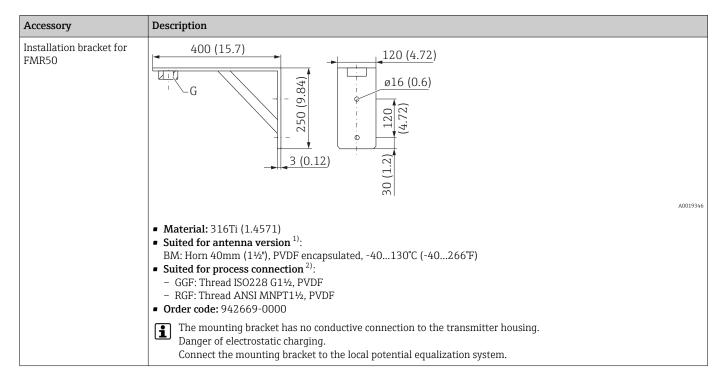

- 1) Feature 070 of the product structure
- 2) Feature 100 of the product structure

#### 15.1.6 Remote display FHX50

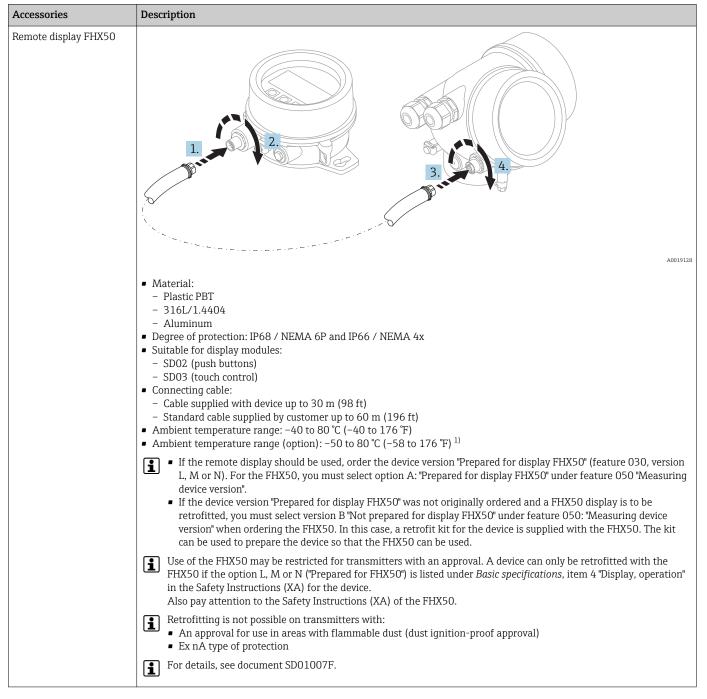

1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.

#### 15.1.7 Overvoltage protection

### Accessory Description Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel) A0021734 Technical data • Resistance per channel: 2 \* 0.5 $\Omega_{max}$ ■ Threshold DC voltage: 400 to 700 V ■ Threshold impulse voltage: < 800 V • Capacitance at 1 MHz: < 1.5 pF Nominal arrest impulse voltage (8/20 μs): 10 kA • Suited for wire cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG) Ordering with device The overvoltage protection module is preferably ordered with the device. See product structure, feature 610"Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to retrofitted with the overvoltage protection. Order code for retrofitting • For 1-channel devices (feature 020, option A) OVP10: 71128617 • For 2-channel devices (feature 020, option B, C, E or G) OVP20:71128619 Hosuing lid for retrofitting In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows: • GT18 housing: Lid 71185516 • GT19 housing: Lid 71185518 GT20 housing: Lid 71185516 Restrictions for retrofitting Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted unter Optional Specifications in the Safety Instructions (XA) pertaining to the device. For details refer to SD01090F.

### 15.1.8 Bluetooth module for HART devices

Accessory	Description
Bluetooth module	A0036493
	<ul> <li>Quick and easy commissioning via SmartBlue (app)</li> <li>No additional tools or adapters required</li> <li>Signal curve via SmartBlue (app)</li> <li>Encrypted single point-to-point data transmission (tested by Fraunhofer institue) and password protected communication via Bluetooth® wireless technology</li> <li>Range under reference conditions:         <ul> <li>10 m (33 ft)</li> </ul> </li> </ul>
	When using the Bluetooth module the minimum supply voltage increases by up to 3 V.  Ordering with device The Bluetooth module is preferably ordered with the device. See product structure, feature 610 "Accessory Mounted", option NF "Bluetooth". A separate order is only necessary in case of retrofitting.
	Order code for retrofitting Bluetooth module (BT10): 71377355
	Restrictions in case of retrofitting Depending on the approval of the transmitter, application of the Bluetooth module may be restricted. A device may only be retrofitted with a Bluetooth module if the option NF (Bluetooth) is listed in the associated Safety Instructions (XA) under Optional specifications.
	For details refer to SD02252F.

## 15.2 Communication-specific accessories

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer.  Order code: 51516983  For details refer to Technical Information TI00405C

## 15.3 Service-specific accessories


Accessory	Description
DeviceCare SFE100	Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus devices
	Technical Information TI01134S
	<ul> <li>DeviceCare is available for download at www.software-products.endress.com. The download requires a registration in the Endress+Hauser software portal.</li> <li>Alternatively, a DeviceCare DVD can be ordered with the device. Product structure: Feature 570 "Service", Option IV "Tooling DVD (DeviceCare Setup)".</li> </ul>
FieldCare SFE500	FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  Technical Information TI00028S

## 15.4 System components

Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R

## 16 Operating menu

## 16.1 Overview of the operating menu (display module)

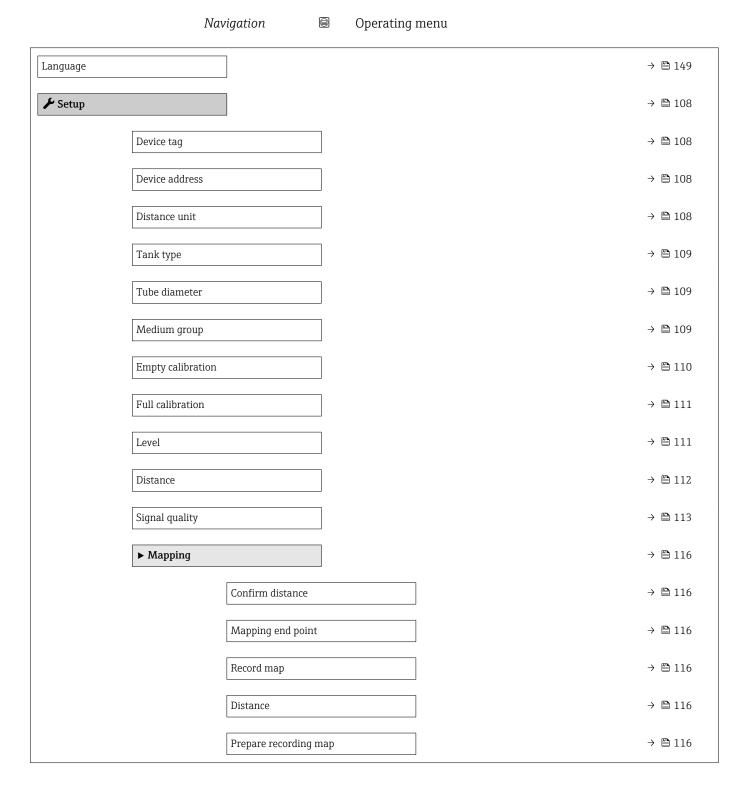

► Analog inputs
► Analog input 1 to 6
Channel
PV filter time
Fail safe type
Fail safe value
► Advanced setup
Locking status
Access status display
Enter access code
▶ Level
Medium type
Medium property
Max. filling speed liquid
Max. draining speed liquid
Advanced process conditions
Level unit
Blocking distance
Level correction
Tank/silo height
► Linearization
Linearization type
Unit after linearization
Free text
Maximum value

	Diameter	→ 🖺 134
	Intermediate height	→ 🖺 134
	Table mode	→ 🖺 135
	▶ Edit table	
	Level	→ 🖺 136
	Customer value	} } → 🗎 137
		I
	Activate table	→ 🖺 137
► Safety settings		→ 🖺 138
	Output echo lost	→ 🖺 138
	Value echo lost	→ 🗎 138
	Ramp at echo lost	→ 🖺 139
	Blocking distance	→ 🖺 125
▶ WHG confirma	tion	→ 🖺 141
► Deactivate WH	G	→ 🖺 142
	Reset write protection	→ 🗎 142
	Code incorrect	→ 🖺 142
	Code incorrect	
► Switch output		→ 🖺 143
	Switch output function	→ 🗎 143
	Assign status	→ 🖺 143
	Assign limit	→ 🖺 144
	Assign diagnostic behavior	→ 🖺 144
	Switch-on value	→ 🖺 145
	Switch-on delay	→ 🖺 146
	Switch-off value	→ 🖺 146
	Switch-off delay	→ 🖺 147
	Owned on deay	/ □ 14/

Failure mode	→ 🖺 147
Switch status	→ 🖺 147
Invert output signal	→ 🖺 147
<b>▶</b> Display	→ 🖺 149
Language	→ 🖺 149
Format display	→ 🖺 149
Value 1 to 4 display	→ 🗎 151
Decimal places 1 to 4	→ 🖺 151
Display interval	→ 🖺 151
Display damping	→ 🖺 152
Header	→ 🖺 152
Header text	→ 🖺 152
Separator	→ 🗎 153
Number format	→ 🗎 153
Decimal places menu	→ 🖺 153
Backlight	→ 🖺 154
Contrast display	→ 🖺 154
► Configuration backup display	→ 🗎 155
Operating time	→ 🗎 155
Last backup	→ 🗎 155


		Configuration management	→ 🖺 155
		Comparison result	→ 🖺 156
	► Administration		→ 🖺 158
		► Define access code	→ 🖺 160
		Define access code	→ 🖺 160
		Confirm access code	→ 🖺 160
		Device reset	→ 🖺 158
억 Diagnostics			→ 🖺 161
Actual diagnostics			→ 🗎 161
Previous diagnosti	cs		→ 🗎 161
Operating time fro	m restart		→ 🖺 162
Operating time			→ 🗎 155
► Diagnostic list			→ 🖺 163
	Diagnostics 1 to 5		→ 🖺 163
► Event logbook			→ 🖺 164
	Filter options		→ 🖺 164
	► Event list		→ 🖺 164
▶ Device informa	tion		→ 🖺 165
	Device tag		→ 🖺 165
	Serial number		→ 🖺 165
	Firmware version		→ 🖺 165
	Device name		→ 🖺 165
	Order code		→ 🖺 166
	Extended order cod	e 1 to 3	→ 🖺 166

	Status PROFIBUS Master Config	→ 🖺 166
	PROFIBUS ident number	→ 🖺 166
► Measured value	S	→ 🖺 167
	Distance	→ 🖺 112
	Level linearized	→ 🖺 133
	Terminal voltage 1	→ 🖺 168
	Switch status	→ 🖺 147
	Electronic temperature	→ 🖺 168
► Analog inputs		
	► Analog input 1 to 6	→ 🖺 169
	Channel	→ 🖺 118
	Out value	→ 🖺 169
	Out status	→ 🖺 170
	Out status HEX	→ 🖺 170
► Data logging		→ 🖺 171
	Assign channel 1 to 4	→ 🖺 171
	Logging interval	→ 🖺 171
	Clear logging data	→ 🖺 172
	▶ Display channel 1 to 4	→ 🖺 173
<b>▶</b> Simulation		→ 🖺 175
	Assign measurement variable	→ 🖺 176
	Value process variable	→ 🖺 176
	Switch output simulation	→ 🖺 176
	Switch status	→ 🖺 177
	Simulation device alarm	→ 🖺 177

Diagnostic	event category	
Simulation	diagnostic event	→ 🖺 177
Simulation	diagnostic event	→ 🖺 177
▶ Device check		→ 🖺 178
Start device	e check	→ 🖺 178
Result devi	ice check	→ 🖺 178
Last check	time	→ 🖺 178
Level signa	al	→ 🖺 179

## 16.2 Overview of the operating menu (operating tool)

Navigation © Operating menu

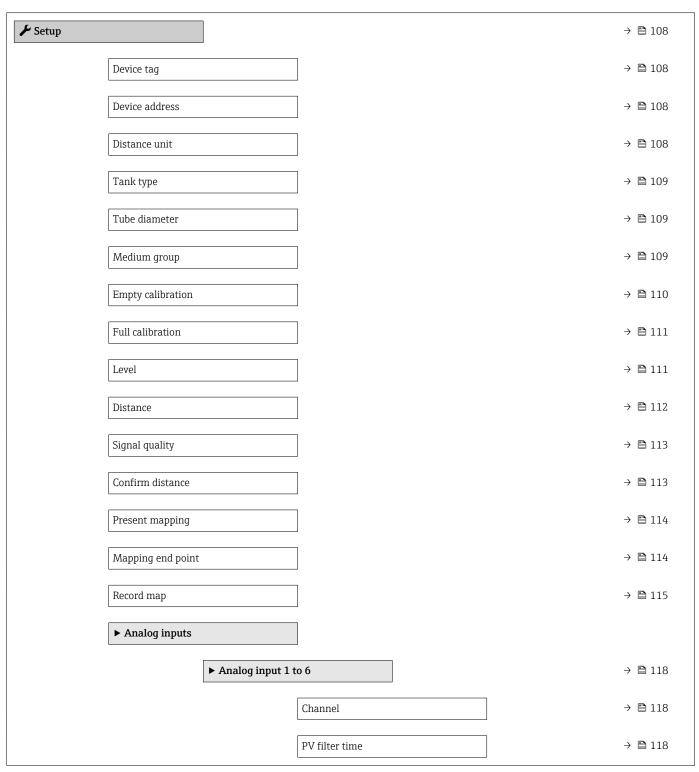

		Fail safe type	→ <b></b>	119
		Fail safe value	→ 🖺	119
► Advanced setup	p		→ 🖺	120
	Locking status		→ 🖺	120
	Access status toolii	ng	→ 🖺	120
	Enter access code		→ 🖺	121
	▶ Level		→ 🖺	122
		Medium type	→ 🖺	122
		Medium property	→ 🖺	122
		Max. filling speed liquid	→ 🖺	123
		Max. draining speed liquid	→ 🖺	123
		Advanced process conditions	→ 🖺	124
		Level unit	→ 🗎	125
		Blocking distance	→ 🗎	125
		Level correction	→ 🖺	126
		Tank/silo height	→ 🖺	126
	► Linearization		→ 🗎	129
		Linearization type	→ 🖺	13:
		Unit after linearization	→ 🖺	132
		Free text	→ 🖺	133
		Level linearized	→ 🖺	133
		Maximum value	→ 🖺	134
		Diameter	→ 🖺	134
		Intermediate height	→ 🖺	134
		Table mode	→ 🖺	135

	Table number	→ 🖺 136
	Level	→ 🖺 136
	Level	→ 🗎 137
	Customer value	→ 🗎 137
	Activate table	→ 🖺 137
► Safety settings		→ 🖺 138
	Output echo lost	→ 🖺 138
	Value echo lost	→ 🖺 138
	Ramp at echo lost	→ 🗎 139
	Blocking distance	→ 🗎 125
► WHG confirma	tion	→ 🖺 141
▶ Deactivate WH	G	→ 🖺 142
	Reset write protection	→ 🗎 142
	Code incorrect	→ 🗎 142
► Switch output		→ 🗎 143
	Switch output function	→ 🖺 143
	Assign status	→ 🖺 143
	Assign limit	→ 🖺 144
	Assign diagnostic behavior	→ 🖺 144
	Switch-on value	→ 🖺 145
	Switch-on delay	→ 🖺 146
	Switch-off value	→ 🖺 146
	Switch-off delay	→ 🖺 147
	Failure mode	→ 🗎 147
	I WHATE HIVE	/ 🗉 14/

	Switch status	→ 🖺 147
	Invert output signal	→ 🖺 147
▶ Display		→ 🖺 149
	Language	→ 🖺 149
	Format display	→ 🖺 149
	Value 1 to 4 display	→ 🖺 151
	Decimal places 1 to 4	→ 🖺 151
	Display interval	→ 🗎 151
	Display damping	→ 🖺 152
	Header	→ 🖺 152
	Header text	→ 🖺 152
	Separator	→ 🖺 153
	Number format	→ 🖺 153
	Decimal places menu	→ 🖺 153
	Backlight	→ 🗎 154
	Contrast display	→ 🖺 154
► Configurat	tion backup display	→ 🖺 155
	Operating time	→ 🖺 155
	Last backup	→ 🗎 155
	Configuration management	→ 🖺 155

		Backup state	→ 🖺 156
		Comparison result	→ 🖺 156
	► Administration		→ 🖺 158
		Define access code	→ 🖺 160
		Device reset	→ 🖺 158
্ Diagnostics			→ 🖺 161
Actual diagnostics			→ 🖺 161
Timestamp			→ 🖺 161
Previous diagnostic	S		→ 🖺 161
Timestamp			→ 🖺 162
Operating time from	n restart		→ 🖺 162
Operating time			→ 🖺 155
<b>▶</b> Diagnostic list			→ 🖺 163
	Diagnostics 1 to 5		→ 🗎 163
	Timestamp 1 to 5		→ 🖺 163
► Device informat	ion		→ 🖺 165
	Device tag		→ 🖺 165
	Serial number		→ 🖺 165
	Firmware version		→ 🖺 165
	Device name		→ 🖺 165
	Order code		→ 🖺 166
	Extended order cod	le 1 to 3	→ 🖺 166
	Status PROFIBUS M	Master Config	→ 🖺 166
	PROFIBUS ident nu		→ 🖺 166

Distance   → □ 112	► Measured v	alues	→ 🖺 167
Level linearized   > ≥ 133     Terminal voltage 1   > ≥ 168     Switch status   > ≥ 147     Electronic temperature   > ≥ 168     ► Analog inputs   ► Analog input 1 to 6   > ≥ 169     Channel   > ≥ ≥ 169     Out value   > ≥ ≥ 169     Out status   > ≥ ≥ 170     Out status HEX   > ≥ ≥ 170     ► Data logging   > ≥ ≥ 171     Logging interval   > ≥ ≥ 171     Clear logging data   > ≥ ≥ 172     ► Simulation   > ≥ ≥ 175     Assign measurement variable   > ≥ ≥ 176     Switch output simulation   > ≥ ≥ 176     Switch status   > ≥ ≥ 177     Simulation device alarm   > ≥ ≥ 178     Simulation device alarm   > ≥ ≥ 178     Simulation device alarm   > ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥ ≥			
Terminal voltage 1  Switch status  Delta 147  Electronic temperature  PAnalog input 1 to 6  Analog input 1 to 6  Channel  Out value  Out value  Out status HEX  Pata logging  Data logging  Data logging  Pata logging interval  Logging interval  Clear logging data  Patro  Assign measurement variable  Value process variable  Switch output simulation  Switch status  Patro  Simulation device alarm  Patro  Patro  Simulation device alarm  Patro  Patro  Simulation device alarm  Patro  Pat		Distance	→ 🖺 112
Switch status  P Analog inputs  P Analog input 1 to 6  Channel  Out value  Out status  Out status  D Data logging  Assign channel 1 to 4  Logging interval  Clear logging data  P Simulation  Assign measurement variable  Value process variable  Value process variable  Value process variable  Switch output simulation  Switch status  D 177  Simulation device alarm  D 177  Simulation device alarm		Level linearized	→ 🖺 133
Electronic temperature  Analog inputs  Analog input 1 to 6  Channel  Channel  Out value  Dut status  Dut status  Data logging		Terminal voltage 1	→ 🖺 168
► Analog inputs  Channel  Channel  Out value  → 월 118  Out status  → 월 170  Out status HEX  → 월 170  ► Data logging  Assign channel 1 to 4  Logging interval  Clear logging data  → 월 171  Clear logging data  → 월 175  Assign measurement variable  Value process variable  Value process variable  Switch output simulation  ⇒ 월 176  Switch output simulation  ⇒ 월 177  Simulation device alarm  → 월 177		Switch status	→ 🖺 147
▶ Analog input 1 to 6 ⇒ ₱ 169   Channel ⇒ ₱ 118   Out value ⇒ ₱ 169   Out status ⇒ ₱ 170   P Data logging ⇒ ₱ 170   ▶ Data logging ⇒ ₱ 171   Logging interval ⇒ ₱ 171   Clear logging data ⇒ ₱ 172   ▶ Simulation ⇒ ₱ 175   Assign measurement variable ⇒ ₱ 176   Value process variable ⇒ ₱ 176   Switch output simulation ⇒ ₱ 176   Switch status ⇒ ₱ 177   Simulation device alarm ⇒ ₱ 177		Electronic temperature	→ 🖺 168
Channel → □ 118  Out value → □ 169  Out status → □ 170  Out status HEX → □ 170   ▶ Data logging → □ 171  Logging interval → □ 171  Clear logging data → □ 172  ▶ Simulation → □ 175  Assign measurement variable → □ 176  Value process variable → □ 176  Switch output simulation → □ 177  Simulation device alarm → □ 177	► Analog inpu	uts	
Out value → □ 169   Out status → □ 170   Out status HEX → □ 170   ▶ Data logging → □ 171   Logging interval → □ 171   Clear logging data → □ 172   ▶ Simulation → □ 175   Assign measurement variable → □ 176   Value process variable → □ 176   Switch output simulation → □ 176   Switch status → □ 177   Simulation device alarm → □ 177		► Analog input 1 to 6	→ 🖺 169
Out status  → □ 170  Out status HEX  → □ 170  Assign channel 1 to 4  → □ 171  Logging interval  → □ 171  Clear logging data  → □ 172  ► Simulation  Assign measurement variable  Value process variable  Value process variable  Switch output simulation  ⇒ □ 176  Switch status  → □ 177  Simulation device alarm		Channel	→ 🖺 118
Out status HEX  → □ 170  Data logging  Assign channel 1 to 4  → □ 171  Logging interval  → □ 171  Clear logging data  → □ 172  ► Simulation  Assign measurement variable  Value process variable  Value process variable  Switch output simulation  ⇒ □ 176  Switch status  → □ 177  Simulation device alarm		Out value	→ 🖺 169
▶ Data logging ⇒ □ 171   Assign channel 1 to 4 ⇒ □ 171   Logging interval ⇒ □ 172   ▶ Simulation ⇒ □ 175   Assign measurement variable ⇒ □ 176   Value process variable ⇒ □ 176   Switch output simulation ⇒ □ 176   Switch status ⇒ □ 177   Simulation device alarm ⇒ □ 177		Out status	→ 🖺 170
Assign channel 1 to 4  → □ 171  Logging interval  → □ 172  ► Simulation  → □ 175  Assign measurement variable  Value process variable  → □ 176  Switch output simulation  ⇒ □ 176  Switch status  → □ 177  Simulation device alarm		Out status HEX	→ 🖺 170
Logging interval $\rightarrow \                                   $	▶ Data loggin	g	→ 🖺 171
Clear logging data  → □ 172  → Simulation  → □ 175  Assign measurement variable  → □ 176  Value process variable  ⇒ □ 176  Switch output simulation  ⇒ □ 176  Switch status  ⇒ □ 177  Simulation device alarm		Assign channel 1 to 4	→ 🖺 171
Assign measurement variable → 🖺 175   Value process variable → 🖺 176   Switch output simulation → 🖺 176   Switch status → 🖺 177   Simulation device alarm → 🖺 177		Logging interval	→ 🗎 171
Assign measurement variable $\rightarrow \  \   \   \Rightarrow \  \   176$ Value process variable $\rightarrow \  \   \Rightarrow \  \   176$ Switch output simulation $\rightarrow \  \   \Rightarrow \  \   176$ Switch status $\rightarrow \  \   \Rightarrow \  \   177$ Simulation device alarm $\rightarrow \  \   \Rightarrow \  \   177$		Clear logging data	→ 🖺 172
	<b>▶</b> Simulation		→ 🖺 175
		Assign measurement variable	→ 🖺 176
Switch status $\rightarrow \ \  \   \Rightarrow \  \   177$ Simulation device alarm $\rightarrow \  \   \   \Rightarrow \  \   177$		Value process variable	→ 🖺 176
Simulation device alarm $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $		Switch output simulation	→ 🖺 176
		Switch status	→ 🖺 177
Simulation diagnostic event $\rightarrow$ 🖺 177		Simulation device alarm	→ 🖺 177
		Simulation diagnostic event	→ 🖺 177
Simulation diagnostic event $\rightarrow$ $\stackrel{ riangle}{\Rightarrow}$ 177		Simulation diagnostic event	→ 🖺 177

► Device check		→ 🖺 178
	Start device check	→ 🖺 178
	Result device check	→ 🖺 178
	Last check time	→ 🖺 178
	Level signal	→ 🖺 179
► Heartbeat		→ 🗎 180

#### "Setup" menu 16.3



- 🗟 : Marks the navigation path to the parameter via the display and operating module.
  - : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
  - 📵 : Marks parameters which can be locked via the software locking.

Navigation

■ ■ Setup

Device tag			1
Navigation	Setup → Device	re tag	
Description	Enter tag for measu	ring point.	
User entry	Up to 32 alphanume	rical characters	
Factory setting	FMR5x		
Device address			<u> </u>
Navigation	Setup → Device	re address	
Description	<ul> <li>for Address mode = Software: Enter bus address.</li> <li>for Address mode = Hardware: Displays bus address.</li> </ul>		
User entry	0 to 126		
Factory setting	126		
Distance unit			ñ
Navigation	Setup → Distance unit		
Description	Length unit for distance calculation.		
Selection	SI units ■ mm ■ m	<i>US units</i> ■ ft ■ in	

108

**Factory setting** 

m

Tank type

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Tank type

Prerequisite Medium type (→ 🖺 122) = Liquid

**Description** Select tank type.

**Selection** ■ Bypass / pipe

• Stilling well

Workbench testOpen channel

■ Sphere

Storage vessel

Process vessel standard

Process vessel with agitator

■ Wave guide antenna

**Factory setting** Depending on the antenna

**Additional information** Depending on the antenna some of the options mentioned above may not be available or

there may be additional options.

Tube diameter

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Tube diameter

Prerequisite Tank type ( $\rightarrow \triangleq 109$ ) = Bypass / pipe

**Description** Specify diameter of bypass or stilling well.

**User entry** 0 to 9.999 m

**Factory setting** 0 m

Medium group

Prerequisite Medium type ( $\rightarrow \triangleq 122$ ) = Liquid

**Description** Select medium group.

**Selection** • Others

■ Water based (DC >= 4)

**Factory setting** Others

#### Additional information

This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter ( $\rightarrow \implies 122$ ).

The **Medium group** parameter presets the **Medium property** parameter ( $\rightarrow \implies 122$ ) as follows:

Medium group	Medium property (→ 🗎 122)
Others	Unknown
Water based (DC >= 4)	DC 4 7

- The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.
- The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Empty calibration	
-------------------	--


**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Empty calibration

**Description** Distance process connection to min. level.

**User entry** Depending on the antenna

**Factory setting** Depending on the antenna

## Additional information

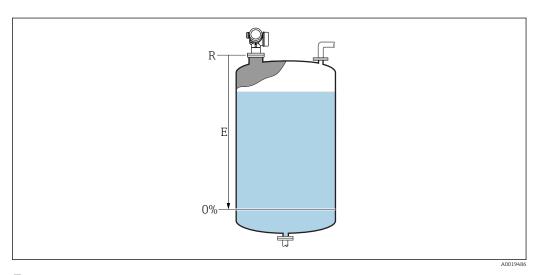

 $\blacksquare$  31 Empty calibration (E) for level measurements in liquids

The measuring range starts at the point at which the radar beam hits the tank or silo bottom. In the case of dished boiler ends or conical outlets levels below this point can not be measured.

Full calibration


**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Full calibration

**Description** Span: max. level - min level.

**User entry** Depending on the antenna

**Factory setting** Depending on the antenna

Additional information

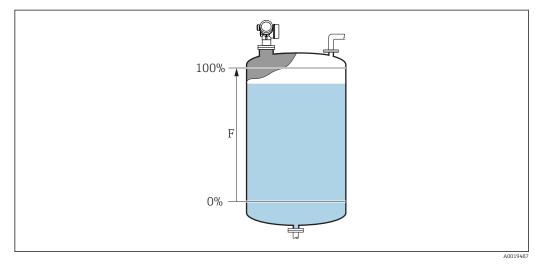


 $\blacksquare$  32 Full calibration (F) for level measurements in liquids

Level

**Description** Displays measured level L (before linearization).

## Additional information

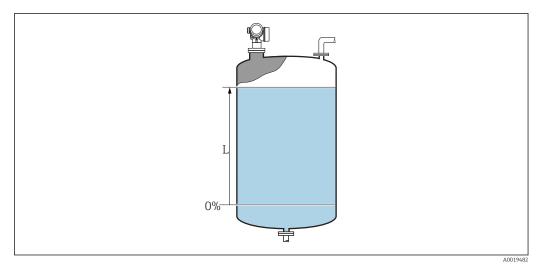

■ 33 Level in case of liquid measurements

The unit is defined in the **Level unit** parameter ( $\rightarrow \triangleq 125$ ).


#### Distance

# Navigation

# Description

Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

# Additional information

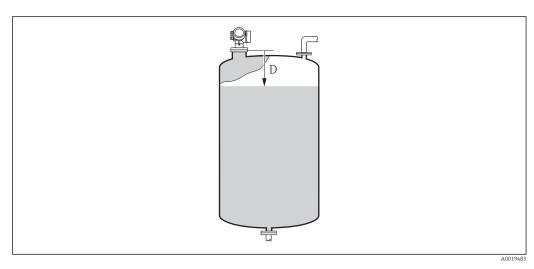

■ 34 Distance for liquid measurements

The unit is defined in the **Distance unit** parameter ( $\rightarrow \triangleq 108$ ).

## Signal quality

Navigation

Description

Displays the signal quality of the level echo.

#### Additional information

## Meaning of the display options

#### Strong

The evaluated echo exceeds the threshold by at least 10 dB.

#### Medium

The evaluated echo exceeds the threshold by at least 5 dB.

#### Weak

The evaluated echo exceeds the threshold by less than 5 dB.

## ■ No signal

The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level echo or the tank bottome echo. To differentiate between these two, the quality of the tank bottom echo echo is always displayed in brackets.



In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for Output echo lost ( $\rightarrow$  🗎 138) = Alarm.
- \$941, if another option has been selected in **Output echo lost** (→ 🗎 **138**).

Confirm distance
------------------

# **Navigation**

 $\square$  Setup  $\rightarrow$  Confirm distance

## Description

Specify, whether the measured distance matches the real distance.

Depending on the selection the device automatically sets the range of mapping.

#### Selection

- Manual map
- Distance ok
- Distance unknown
- Distance too small '
- Distance too big
- Tank empty
- Factory map

#### Factory setting

Distance unknown

#### Additional information

#### Meaning of the options

#### Manual map

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter ( $\rightarrow \boxminus 114$ ). In this case it is not necessary to confirm the distance.

# ■ Distance ok

To be selected if the measured distance matches the actual distance. The device performs a mapping.

## Distance unknown

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

<sup>\*</sup> Visibility depends on order options or device settings

#### ■ Distance too small

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

# Distance too big <sup>7)</sup>

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

# ■ Tank empty

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Tank/silo height** parameter ( $\rightarrow \boxminus 126$ ). By default, **Tank/silo height** = **Empty calibration**. Take into account that in case of conical outlets, for example, a measurement is only possible up to the point at which the radar hits the bottom of the tank or silo. If the **Tank empty** option is used, **Empty calibration** ( $\rightarrow \boxminus 110$ ) and **Tank/silo height** may not reach below this point as otherwise the empty signal is suppressed.

## Factory map

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.

- When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
- If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping		
Navigation	Setup → Present mapping	
Description	Indicates up to which distance a mapping has already been recorded.	
Mapping end point		
Navigation	Setup → Mapping end point	
Prerequisite	Confirm distance (→ 🖺 113) = Manual map or Distance too small	
Description	Specify new end of the mapping.	
User entry	0.1 to 999 999.9 m	
Factory setting	0.1 m	

<sup>7)</sup> Only available for "Expert  $\rightarrow$  Sensor  $\rightarrow$  Echo tracking  $\rightarrow$  **Evaluation mode** parameter" = "Short time history" or "Long time history"

#### Additional information

This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.



For reference purposes the **Present mapping** parameter ( $\rightarrow \boxminus 114$ ) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.

Record map		
Navigation	Setup → Record map	
Prerequisite	Confirm distance (→ 🖺 113) = Manual map or Distance too small	
Description	Start recording of the map.	
Selection	<ul> <li>No</li> <li>Record map</li> <li>Overlay map</li> <li>Factory map</li> <li>Delete partial map</li> </ul>	

# Factory setting

No

#### Additional information

# Meaning of the options

■ No

The map is not recorded.

Record map

The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing  $\square$ .

Overlay map

The new mapping curve is generated by overlaying the old and the current envelope curves.

Factory map

The factory map stored in the ROM of the device is used.

■ Delete partial map

The mapping curve is deleted up to **Mapping end point** ( $\rightarrow \square 114$ ).

# 16.3.1 "Mapping" wizard

The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→ 🖺 108).

In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation 

■ Setup → Mapping

Confirm distance		
Navigation	Setup → Mapping → Confirm distance	
Description	→ 🖺 113	
Mapping end point		Â
Navigation	Setup → Mapping → Mapping end point	
Description	→ 🖺 114	
Record map		â
Navigation	Setup → Mapping → Record map	
Description	→ 🗎 115	
Distance		
Navigation	Setup → Mapping → Distance	
Description	→ 🗎 112	
Prepare recording map		
Navigation	Setup → Mapping → Prepare recording map	
Description	Indicates the progress of the recording of the map.	

User interface

Init. recordingIn progressFinished

#### 16.3.2 "Analog input 1 to 6" submenu

There is an **Analog input** submenu for each AI block of the device. The AI block is used to configure the measured value transmission to the bus.

Only the most basic properties of the AI blocks can be configured in this submenu. For a detailed configuration of the AI blocks refer to Expert → Analog inputs → Analog input 1 to 6.

Navigation Expert  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 6

Channel		
Navigation		
Description	Standard parameter <b>CHANNEL</b> of the Analog Input Block according to the PROFIBUS Profile.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude</li> <li>Sensor debug</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> </ul>	
Factory setting	Level linearized	
Additional information	Allocates a measured value to the AI block.	

PV filter time		
Navigation		
Description	Standard parameter <b>PV_FTIME</b> of the Analog Input Block according to the PROFIBUS profile.	
User entry	Positive floating-point number	
Factory setting	0	
Additional information	This parameter defines the damping constant $\boldsymbol{\tau}$ (in seconds) for the output of the Anal Input Block.	log

Fail safe type

**Navigation**  $\blacksquare \blacksquare$  Expert  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 6  $\rightarrow$  Fail safe type

**Description** Standard parameter **FSAFE\_TYPE** of the Analog Input Block according to the PROFIBUS

profile.

**Selection** • Fail safe value

■ Fallback value

Off

Factory setting Off

Additional information Meaning of the options

This parameter specifies the output value of the Analog Input block in the event of an  $\,$ 

error.

• Fail safe value

The output value in the event of an error is defined in the  ${\bf Fail}$  safe value parameter

(→ 🖺 119).

■ Fallback value

The last output value that was valid before the error occurred is retained.

Off

The output value follows the current measured value. The status is set to BAD.

Fail safe value

**Navigation** Expert  $\rightarrow$  Analog input 1 to 6  $\rightarrow$  Fail safe value

Prerequisite Fail safe type (→ 🗎 119) = Fail safe value

**Description** Standard parameter **FSAFE VALUE** of the Analog Input Block according to the PROFIBUS

profile.

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** This parameter defines the output value of the Analog Input Block in case of an error.

# 16.3.3 "Advanced setup" submenu

Navigation  $\square$  Setup  $\rightarrow$  Advanced setup

# Locking status

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Locking status

**Description** Indicates the write protection with the highest priority that is currently active.

**User interface** ■ Hardware locked

- SIL locked
- WHG locked
- Temporarily locked

### Additional information

## Meaning and priorities of the types of write protection

■ Hardware locked (priority 1)

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.

■ SIL locked (priority 2)

The SIL mode is activated. Writing access to the relevant parameters is denied.

WHG locked (priority 3)

The WHG mode is activated. Writing access to the relevant parameters is denied.

■ Temporarily locked (priority 4)

Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.

On the display module, the  $\frac{1}{12}$ -symbol appears in front of parameters that cannot be modified since they are write-protected.

# Access status tooling

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Access status tooling

**Description** Shows the access authorization to the parameters via the operating tool.

Additional information

The access authorization can be changed via the **Enter access code** parameter  $(\rightarrow \implies 121)$ .

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ( $\rightarrow \implies 120$ ).

## Access status display

**Prerequisite** The device has a local display.

**Description** Indicates access authorization to parameters via local display.

Additional information

The access authorization can be changed via the **Enter access code** parameter  $(\rightarrow \boxminus 121)$ .

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ( $\Rightarrow \implies 120$ ).

#### Enter access code

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Enter access code

**Description** Enter access code to disable write protection of parameters.

**User entry** 0 to 9 999

Additional information

- If an incorrect access code is entered, the user retains his current access authorization.
- The write protection affects all parameters marked with the ③-symbol in this document. On the local display, the ⑤-symbol in front of a parameter indicates that the parameter is write-protected.
- If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the writeprotected parameters after another 60 s.
- Please contact your Endress+Hauser Sales Center if you lose your access code.

#### "Level" submenu

Navigation  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level

Medium type

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Medium type

**Description** Specify type of medium.

**User interface** ■ Liquid ■ Solid

**Factory setting** FMR50, FMR51, FMR52, FMR53, FMR54: **Liquid** 

**Additional information**This parameter determines the value of several other parameters

This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended **not to change** the factory setting.

Medium property

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Medium property

**Description** Specify relative dielectric constant  $\varepsilon_r$  of the medium.

Unknown

- DC 1.4 ... 1.6
- DC 1.6 ... 1.9
- DC 1.9 ... 2.5
- DC 2.5 ... 4
- DC 4 ... 7 ■ DC 7 ... 15
- DC > 15

**Factory setting** 

Selection

Dependent on **Medium type** ( $\rightarrow \triangleq 122$ ) and **Medium group** ( $\rightarrow \triangleq 109$ ).

Additional information

Dependency on "Medium type" and "Medium group"

Medium type (→ 🖺 122)	Medium group (→ 🖺 109)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 7
	Others	Unknown

- For dielectric constants (DC values) of many media commonly used in various industries refer to:
  - the Endress+Hauser DC manual (CP01076F)
  - the Endress+Hauser "DC Values App" (available for Android and iOS)

Max. filling speed liquid

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Max. filling speed liquid

Prerequisite Medium type (→ 🖺 122) = Liquid

**Description** Select expected maximum filling speed.

Selection ■ Slow < 1cm (0,4in) /min

Medium < 10cm (4in) /min</li>Standard < 1m (40in) /min</li>

Fast < 2m (80in) /min</li>Very fast > 2m (80in) /min

■ No filter / test

**Factory setting** Depending on the **Tank type** parameter ( $\Rightarrow \implies 109$ )

Additional information The

Max. draining speed liquid

Navigation

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Max. filling speed liquid	Step response time / s
Slow < 1cm (0,4in) /min	90
Medium < 10cm (4in) /min	50
Standard < 1m (40in) /min	20
Fast < 2m (80in) /min	8
Very fast > 2m (80in) /min	5
No filter / test	< 1

Max. filling speed liquid is preset by Tank type ( $\rightarrow \implies 109$ ). It can, however, be adjusted to the process in the vessel at any time. If Tank type ( $\rightarrow \implies 109$ ) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

Prerequisite Medium type (→ 🖺 122) = Liquid

**Description** Select expected maximum draining speed.

Selection ■ Slow < 1cm (0,4in) /min

Medium < 10cm (4in) /min</li>
 Standard < 1m (40in) /min</li>
 Fast < 2m (80in) /min</li>

■ Very fast > 2m (80in) /min

■ No filter / test

**Factory setting** Depending on the **Tank type** parameter ( $\rightarrow \triangleq 109$ )

Endress+Hauser 123

#### Additional information

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Max. draining speed liquid (→ 🖺 123)	Step response time / s	
Slow < 1cm (0,4in) /min	90	
Medium < 10cm (4in) /min	50	
Standard < 1m (40in) /min	20	
Fast < 2m (80in) /min	8	
Very fast > 2m (80in) /min	5	
No filter / test	< 1	

Max. draining speed liquid (→ 🗎 123) is preset by Tank type (→ 🖺 109). It can, however, be adjusted to the process in the vessel at any time. If Tank type (→ 🖺 109) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

# Advanced process conditions

A

**Navigation** 

Description

Specify additional process conditions (if required).

Selection

- Foam (>5cm/0,16ft)
- Changing DC values
- Small tanks (< 1m/3ft)

# Factory setting

None

# Additional information

"Foam (>5cm/0,16ft)" option

This option makes sure that no tank history is used which has been recorded while foam was present at the surface and thus is no reliable map of the tank property. To achieve this, the setting **Evaluation mode** = **Long time history** is deactivated.

The **Foam (>5cm/0,16ft)** option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54).

#### "Changing DC values" option

A tank history which has been recorded with **Evaluation mode** = **Long time history** is only valid for a fixed dielectric constant. The **Changing DC values** option disables the setting **Evaluation mode** = **Long time history** and thus avoids wrong measuring values in the case of a changing dielectric constant.

The **Changing DC values** option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54).

"Small tanks (< 1m/3ft)" option

This option provides a simple possibility to reduce the echo width of the sensor module. This enables an improved detection of superimposed echos - especially in the near field. Internally, all paramters related to the echo width are adjusted by this option.

The **Small tanks (< 1m/3ft)** option is only available for liquid measurements with 26 GHz HF module (FMR50, FMR51, FMR52).

Level unit

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Level unit

**Description** Select level unit.

Selection SI units US units

• %
• ft

%ftin

■ mm

Factory setting %

Additional information The level unit may differ from the distance unit defined in the **Distance unit** parameter

(→ 🖺 108):

The unit defined in the Distance unit parameter is used for the basic calibration (Empty calibration (→ □ 110) and Full calibration (→ □ 111)).

• The unit defined in the **Level unit** parameter is used to display the (unlinearized) level.

Blocking distance

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Blocking distance

**Description** Specify blocking distance BD.

**User entry** 0 to 200 m

**Factory setting** FMR50, FMR51, FMR53, FMR54: antenna length

Additional information Signals in th


Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

This behavior is only valid if the following two conditions are met:

- Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history
- Expert → Sensor → Gas phase compensation → GPC mode= On, Without correction or External correction

If one of these conditions is not met, signals in the blocking distance will always be ignored.

If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

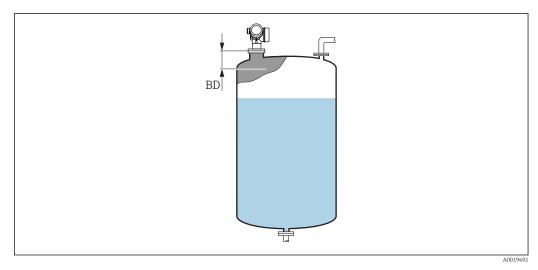

■ 35 Blocking distance (BD) for liquid measurements

Level correction

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Level correction

**Description** Specify level correction (if required).

User entry -200 000.0 to 200 000.0 %

**Factory setting** 0.0 %

**Additional information** The value specified in this parameter is added to the measured level (before linearization).

Tank/silo height

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Tank/silo height

**Description** Specify total height of the tank or silo as measured from the process connection.


**User entry** -999.9999 to 999.9999 m

Factory setting Empty calibration ( $\rightarrow \equiv 110$ )

**Additional information** If the parametrized measuring range (**Empty calibration** ( $\rightarrow \equiv 110$ )) differs significantly

from the tank or silo height, it is recommended to enter the tank or silo height. Example:

Continuous level monitoring in the upper third of a tank or silo.

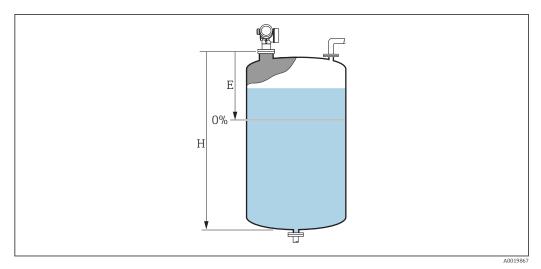


■ 36 "Tank/silo height" parameter ( $\rightarrow$  🖺 126)' for measurements in liquids

E Empty calibration ( $\rightarrow$  🖺 110)

*H* Tank/silo height ( $\Rightarrow$  🖺 126)

For tanks with conical outlet, **Tank/silo height** should not be changed as in this type of applications **Empty calibration** (→ 🗎 110) is usually **not** << the tank or silo height.


## "Linearization" submenu

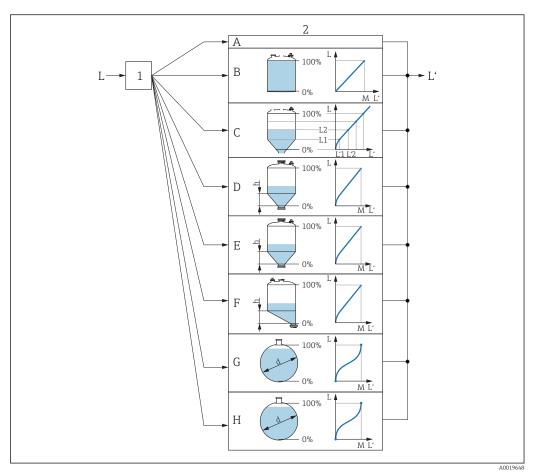

**■** 37 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.


- Selection of linearization type and unit 1
- Configuration of the linearization 2
- Α
- Linearization type ( $\rightarrow \triangleq 131$ ) = None Linearization type ( $\rightarrow \triangleq 131$ ) = Linear В
- Linearization type ( $\rightarrow \blacksquare 131$ ) = Table С
- Linearization type ( $\rightarrow \equiv 131$ ) = Pyramid bottom
- Linearization type ( $\rightarrow \equiv 131$ ) = Conical bottom Е
- F
- Linearization type ( $\rightarrow \implies 131$ ) = Angled bottom Linearization type ( $\rightarrow \implies 131$ ) = Horizontal cylinder G
- Linearization type ( $\rightarrow \equiv 131$ ) = Sphere Н
- Level before linearization (measured in distance units) L
- Level linearized ( $\rightarrow \equiv 133$ ) (corresponds to volume or weight) L'
- Μ Maximum value (→ 🖺 134)
- Diameter (→ 🖺 134) d
- *Intermediate height (→ 🖺 134)*

Structure of the submenu on the display module

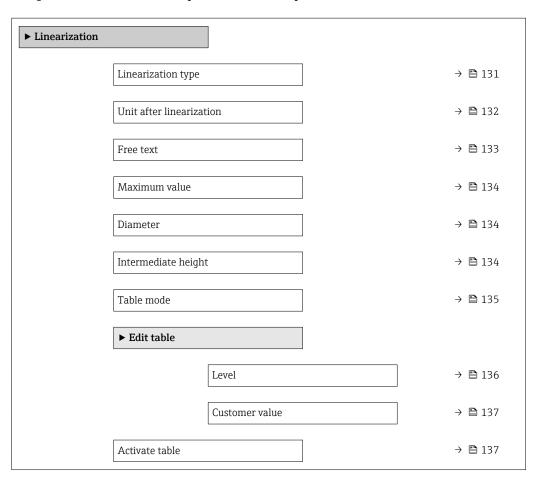

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization

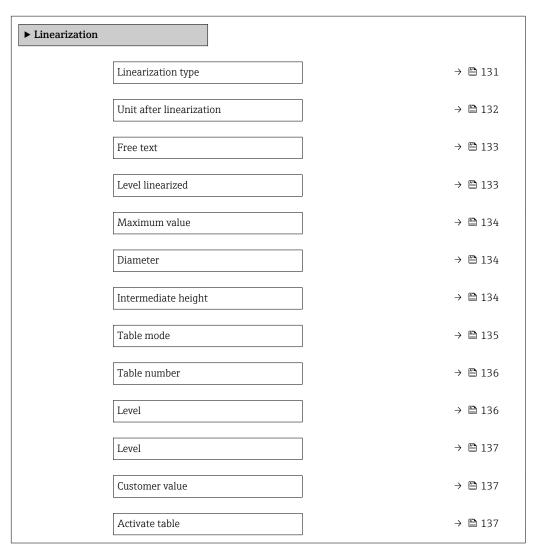

# Description of parameters

Navigation 

#### Linearization type

Navigation 

Description Select linearization type.

Selection None


Linear

- Table
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

# **Factory setting**

# None

## Additional information

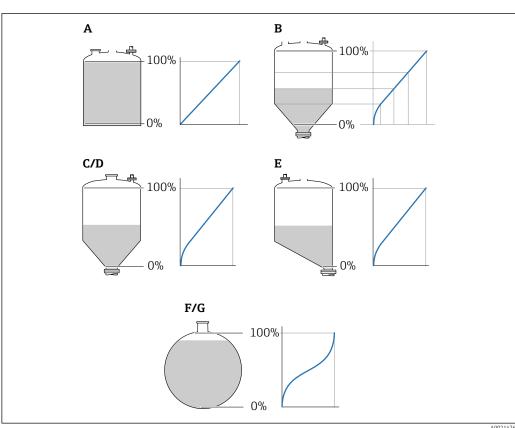

**■** 38 Linearization types

- Α None
- В Table
- С Pyramid bottom
- D Conical bottom
- Е Angled bottom
- F Sphere
- Horizontal cylinder

Endress+Hauser 131

A0021476

## Meaning of the options

#### None

The level is transmitted in the level unit without linearization.

#### Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- Unit after linearization ( $\rightarrow$   $\stackrel{\triangle}{=}$  132)
- **Maximum value** (→ 🖺 **134**): Maximum volume or weight

#### Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 132)
- Table mode (→ 🖺 135)
- For each table point: **Level** ( $\rightarrow$   $\stackrel{\triangle}{=}$  **136**)
- For each table point: **Customer value** (→ 🖺 **137**)

#### Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🖺 132)
- **Maximum value** (→ 🗎 **134**): Maximum volume or weight
- **Intermediate height (→ 134)**: The height of the pyramid

#### Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 132)
- **Maximum value** (→ 🖺 **134**): Maximum volume or weight
- **Intermediate height (→** 🗎 **134)**: The height of the conical part of the tank

### Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🖺 132)
- **Maximum value (→** 🖺 **134)**: Maximum volume or weight
- **Intermediate height (→ 134)**: Height of the angled bottom

## Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 132)
- **Maximum value** (→ 🗎 **134**): Maximum volume or weight

### Sphere

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 132)
- **Maximum value (→ 🗎 134)**: Maximum volume or weight
- Diameter (→ 🗎 134)

Unit after linearization

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Unit after linearization

Prerequisite Linearization type ( $\rightarrow \square$  131)  $\neq$  None

**Description** Select unit of the lineaized value.

Selection	SI units	US units	Imperial units
	■ STon	■ lb	impGal
	■ t	■ UsGal	

ft<sup>3</sup>

- kg cm<sup>3</sup>
- dm³
- m<sup>3</sup>

- hl
- **-** 1 **-** %
- Custom-specific units

Free text

**Factory setting** 

## Additional information

The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the Linear linearization mode. In order to define the new level unit, select the Free text option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter ( $\rightarrow \triangleq 133$ ).

Free text

**Navigation** 

Prerequisite Unit after linearization (→ 🗎 132) = Free text

Description Enter unit symbol.

User entry Up to 32 alphanumerical characters (letters, numbers, special characters)

**Factory setting** Free text

#### Level linearized

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Level linearized

Description Displays linearized level.


Additional information 

Maximum value		
Navigation		
Prerequisite	<ul> <li>Linearization type (→ 🗎 131) has one of the following values:</li> <li>Linear</li> <li>Pyramid bottom</li> <li>Conical bottom</li> </ul>	
	<ul> <li>Angled bottom</li> <li>Horizontal cylinder</li> <li>Sphere</li> </ul>	
User entry	-50 000.0 to 50 000.0 %	
Factory setting	100.0 %	
Diameter		
Navigation		
Prerequisite	<ul> <li>Linearization type (→ 🗎 131) has one of the following values:</li> <li>Horizontal cylinder</li> <li>Sphere</li> </ul>	
User entry	0 to 9 999.999 m	
Factory setting	2 m	
Additional information	The unit is defined in the <b>Distance unit</b> parameter ( $\rightarrow \implies 108$ ).	
Intermediate height		
Navigation		
Prerequisite	<ul> <li>Linearization type (→ 🖺 131) has one of the following values:</li> <li>Pyramid bottom</li> <li>Conical bottom</li> <li>Angled bottom</li> </ul>	
User entry	0 to 200 m	

Factory setting

0 m

#### Additional information

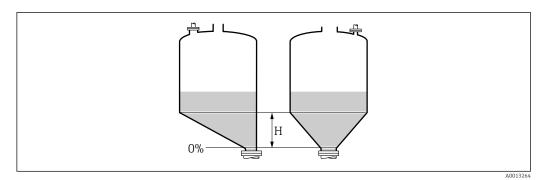

H Intermediate height

The unit is defined in the **Distance unit** parameter ( $\Rightarrow \triangleq 108$ ).

Table mode

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Table mode

Prerequisite Linearization type (→ 🗎 131) = Table

**Description** Select editing mode of the linearization table.

Selection • Manual

Semiautomatic \*Clear table

■ Sort table

Factory setting Manual

# Additional information

# Meaning of the options

#### Manual

The level and the associated linearized value are entered manually for each linearization point.

## Semiautomatic

The level is measured by the device for each linearization point. The associated linearized value is entered manually.

#### Clear table

Deletes the existing linearization table.

# Sort table

Rearranges the linerization points into an ascending order.

<sup>\*</sup> Visibility depends on order options or device settings

#### Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.
- Before entering a linearization table, the values for **Empty calibration** ( $\rightarrow \equiv 110$ ) and **Full calibration** ( $\rightarrow \equiv 111$ ) must be set correctly.

# How to enter the table

- Via FieldCare
  - The table points can be entered via the **Table number** ( $\rightarrow \triangleq 136$ ), **Level** ( $\rightarrow \triangleq 136$ ) and **Customer value** ( $\rightarrow \triangleq 137$ ) parameters. As an alternative, the graphic table editor may be used: Device Operation  $\rightarrow$  Device Functions  $\rightarrow$  Additional Functions  $\rightarrow$  Linearization (Online/Offline)
- Via local display
   Select the Edit table submenu to call up the graphic table editor. The table is displayed and can be edited line by line.
- The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter  $( \rightarrow \ \ \ )$  beforehand.

Table number		
Navigation		
Prerequisite	Linearization type (→ 🖺 131) = Table	
Description	Select table point you are going to enter or change.	
User entry	1 to 32	
Factory setting	1	
Level (Manual)		<b>1</b>
Navigation		
Prerequisite	<ul> <li>■ Linearization type (→ 🗎 131) = Table</li> <li>■ Table mode (→ 🗎 135) = Manual</li> </ul>	
Description	Enter level value of the table point (value before linearization).	
User entry	Signed floating-point number	

**Factory setting** 0 %

Level (Semiautomatic)

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Level

Prerequisite Linearization type  $(\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ )$  = Table

■ Table mode (→ 🖺 135) = Semiautomatic

**Description** Displays measured level (value before linearization). This value is transmitted to the table.

Customer value

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Customer value

Prerequisite Linearization type (→ 🖺 131) = Table

**Description** Enter linearized value for the table point.

**User entry** Signed floating-point number

**Factory setting** 0 %

Activate table

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Activate table

Prerequisite Linearization type ( $\rightarrow \triangleq 131$ ) = Table

**Description** Activate (enable) or deactivate (disable) the linearization table.

**Selection** ■ Disable

■ Enable

Factory setting Disable

Additional information Meaning of the options

Disable

The measured level is not linearized.

If **Linearization type** ( $\rightarrow$   $\rightleftharpoons$  **131)** = **Table** at the same time, the device issues error message F435.

■ Enable

The measured level is linearized according to the table.

When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

# "Safety settings" submenu

Navigation  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings

Output echo lost

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Output echo lost

**Description** Output signal in case of a lost echo.

**Selection** ■ Last valid value

Ramp at echo lostValue echo lost

Alarm

**Factory setting** Last valid value

Additional information Meaning of the options

Last valid value

The last valid value is kept in the case of a lost echo.

■ Ramp at echo lost 8)

In the case of a lost echo the output value is continously shifted towards 0% or 100%. The slope of the ramp is defined in the **Ramp at echo lost** parameter ( $\rightarrow \stackrel{\triangle}{=} 139$ ).

■ Value echo lost 8)

In the case of a lost echo the output assumes the value defined in the **Value echo lost** parameter ( $\rightarrow \triangleq 138$ ).

Alarm

In the case of a lost echo the device generates an alarm; see the Failure mode parameter

Value echo lost

**Navigation**  $\blacksquare \square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Value echo lost

Prerequisite Output echo lost (→ 🗎 138) = Value echo lost

**Description** Output value in case of a lost echo

**User entry** 0 to 200 000.0 %

**Factory setting** 0.0 %

**Additional information** Use the unit which has been defined for the measured value output:

■ without linearization: **Level unit** (→ 🖺 125)

<sup>8)</sup> Only visible if "Linearization type ( $\Rightarrow \equiv 131$ )" = "None"

Ramp at echo lost

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Ramp at echo lost


Prerequisite Output echo lost ( $\rightarrow \triangleq 138$ ) = Ramp at echo lost

Description Slope of the ramp in the case of a lost echo

User entry Signed floating-point number

**Factory setting** 0.0 %/min

#### Additional information

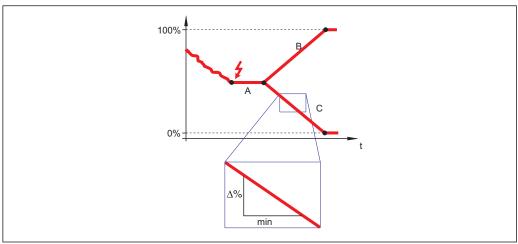

- Delay time echo lost
- Ramp at echo lost ( $\rightarrow \square$  139) (positive value)
- Ramp at echo lost ( $\Rightarrow = 139$ ) (negative value)
- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuouly increased until it reaches 100%.

Blocking distance	

Navigation Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Blocking distance

Description Specify blocking distance BD.

User entry 0 to 200 m

**Factory setting** FMR50, FMR51, FMR53, FMR54: antenna length


Additional information Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a

level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- This behavior is only valid if the following two conditions are met:
  - Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history
  - Expert → Sensor → Gas phase compensation → GPC mode= **On**, **Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

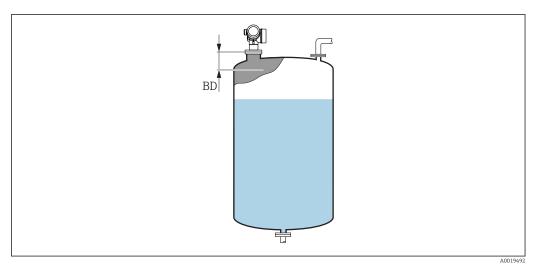

■ 39 Blocking distance (BD) for liquid measurements

## "WHG confirmation" wizard



The WHG confirmation wizard is only available for devices with WHG approval (Feature 590: "Additional Approval", option LC: "WHG overfill prevention" ) which are currently not in the WHG-locked state.

The **WHG confirmation** wizard is used to lock the device according to WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.

Navigation  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  WHG confirmation

**Factory setting** 

# "Deactivate WHG" wizard

Reenter code

Navigation  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Deactivate WHG

Reset write protection		
Navigation		
Description	Enter unlocking code.	
User entry	0 to 65 535	
Factory setting	0	
Code incorrect		
Navigation		
Description	Indicates that a wrong unlocking code has been entered. Select procedure.	
Selection	<ul><li>Reenter code</li><li>Abort sequence</li></ul>	

# "Switch output" submenu

The **Switch output** submenu ( $\rightarrow \triangleq 143$ ) is only visible for devices with switch output. <sup>9)</sup>

*Navigation*  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output

Switch output function		
Navigation		
Description	Select function for switch output.	
Selection	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Digital Output</li> </ul>	
Factory setting	Off	
Additional information	Meaning of the options ■ Off The output is always open (non-conductive)	

The output is always open (non-conductive).

On

The output is always closed (conductive).

Diagnostic behavior

The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter ( $\rightarrow \implies 144$ ) determines for which type of event the output is opened.

Limit

The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:

- Switch-on value ( $\rightarrow$   $\stackrel{\triangle}{=}$  145)
- Digital Output

The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter ( $\rightarrow \implies 143$ ).

The **Off** and **On** options can be used to simulate the switch output.

Assign status	
Navigation	
Prerequisite	Switch output function (→ 🗎 143) = Digital Output
Description	Select device status for switch output.

<sup>9)</sup> Ordering feature 020 "Power supply; Output", option B, E or G

Selection ■ Off

Digital output AD 1
Digital output AD 2
Digital output 1
Digital output 2
Digital output 3
Digital output 4

Factory setting

Off

Additional information

The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Assign limit

Prerequisite Switch output function ( $\Rightarrow \implies 143$ ) = Limit

Selection ■ Off

Level linearized

■ Distance

Terminal voltageElectronic temperatureRelative echo amplitude

Area of incoupling

**Factory setting** Off

Assign diagnostic behavior

**Navigation**  $\blacksquare \ \$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Assign diagnostic behavior

Prerequisite Switch output function (→ 🗎 143) = Diagnostic behavior

**Description** Select diagnostic behavior for switch output.

**Selection** • Alarm

Alarm or warning

Warning

Factory setting Alarm

Switch-on value

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-on value

Prerequisite Switch output function (→ 🖺 143) = Limit

**Description** Enter measured value for the switch-on point.

**User entry** Signed floating-point number


**Factory setting** 0

**Additional information** 

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

### Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

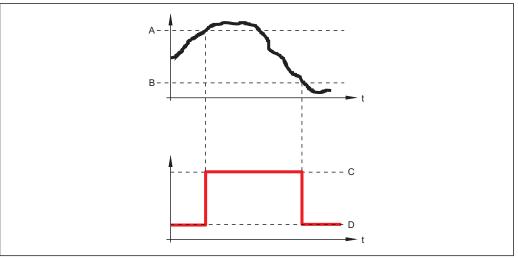


A001558

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

### Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

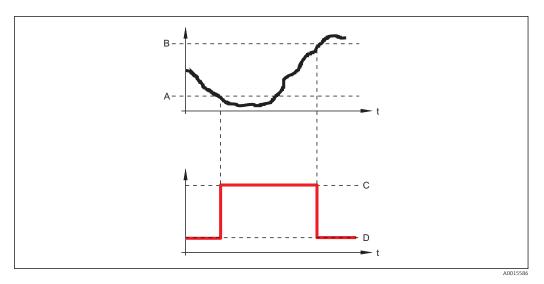

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay	
,	

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-on delay

Prerequisite ■ Switch output function (→ 🖺 143) = Limit

■ Assign limit (→ 🖺 144) ≠ Off

**Description** Define delay for the switch-on of status output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-off value

Prerequisite Switch output function (→ 🖺 143) = Limit

**Description** Enter measured value for the switch-off point.

**User entry** Signed floating-point number

Factory setting 0

**Additional information** The switching behavior depends on the relative position of the **Switch-on value** and

Switch-off value parameters; description: see the Switch-on value parameter

(→ 🖺 145).

Switch-off delay

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-off delay

Prerequisite • Switch output function ( $\rightarrow \stackrel{\triangle}{=} 143$ ) = Limit

■ Assign limit (→ 🖺 144) ≠ Off

**Description** Define delay for the switch-off of status output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

Failure mode

**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Failure mode

Prerequisite Switch output function (→ 🖺 143) = Limit or Digital Output

**Description** Define output behavior in alarm condition.

**Selection** • Actual status

OpenClosed

**Factory setting** Open

Additional information

Switch status

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch status

**Description** Shows the current switch output status.

Invert output signal

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Invert output signal

**Description** Invert the output signal.

Selection ■ No

Yes

Factory setting No

## Additional information

## Meaning of the options

No

The behavior of the switch output is as described above.

Yes

The states **Open** and **Closed** are inverted as compared to the description above.

148

## "Display" submenu

i

The **Display** submenu is only visible if a display module is connected to the device.

**Navigation** 

### Language

**Navigation** 

Description

Set display language.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- **■** русский язык (Russian) \*
- Svenska
- Türkçe
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- Bahasa Indonesia
- tiếng Việt (Vietnamese) \*
- čeština (Czech)

### **Factory setting**

The language selected in feature 500 of the product structure.

If no language has been selected: English

### Additional information

## Format display

Navigation

Description

Select how measured values are shown on the display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

## **Factory setting**


1 value, max. size

<sup>\*</sup> Visibility depends on order options or device settings


### Additional information




■ 40 "Format display" = "1 value, max. size"

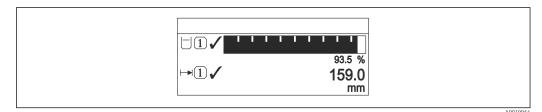


■ 41 "Format display" = "1 bargraph + 1 value"

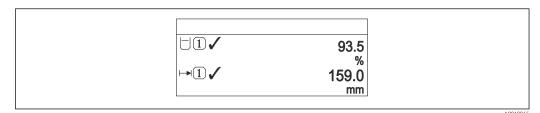

■ 42 "Format display" = "2 values"

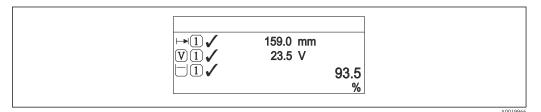

■ 43 "Format display" = "1 value large + 2 values"

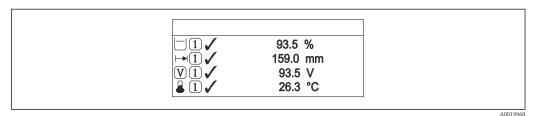

■ 44 "Format display" = "4 values"

- **The Value 1 to 4 display**  $\rightarrow$   $\stackrel{\triangle}{=}$  151 parameters specify which measured values are shown on the display and in which order.
  - If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter ( $\Rightarrow \implies 151$ ).

Value 1 to 4 display		
Navigation		
Description	Select the measured value that is shown on the local display.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> <li>Analog output 1</li> <li>Analog output 2</li> <li>Analog output 3</li> <li>Analog output 4</li> <li>Area of incoupling</li> </ul>	
Factory setting	<ul> <li>Value 1 display: Level linearized</li> <li>Value 2 display: None</li> <li>Value 3 display: None</li> </ul>	

■ Value 4 display: None

1 to 10 s

**User entry** 

Decimal places 1 to 4	
Navigation	Setup → Advanced setup → Display → Decimal places 1
Description	Select the number of decimal places for the display value.
Selection	<ul> <li>X</li> <li>X.X</li> <li>X.XX</li> <li>X.XXX</li> <li>X.XXXX</li> </ul>
Factory setting	X.XX
Additional information	The setting does not affect the measuring or computational accuracy of the device.
Display interval	
Navigation	Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.

Factory setting

5 s

**Additional information** This parameter is only relevant if the number of selected measuring values exceeds the

number of values the selected display format can display simultaneously.

Display damping

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Display damping

**Description** Set display reaction time to fluctuations in the measured value.

**User entry** 0.0 to 999.9 s

**Factory setting** 0.0 s

Header 🗈

**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Header


**Description** Select header contents on local display.

**Selection** ■ Device tag

■ Free text

**Factory setting** Device tag

## Additional information

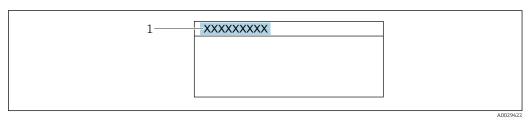

l Position of the header text on the display

*Meaning of the options* 

Device tag

Is defined in the **Device tag** parameter

• Free text

Is defined in the **Header text** parameter ( $\rightarrow \triangleq 152$ )

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Header text

Prerequisite Header ( $\rightarrow \triangleq 152$ ) = Free text

**Description** Enter display header text.

Factory setting ------

**Additional information** The number of characters which can be displayed depends on the characters used.

Separator

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Separator

**Description** Select decimal separator for displaying numerical values.

Selection • .

■ ,

Factory setting .

Number format

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Number format

**Description** Choose number format for the display.

**Selection** • Decimal

■ ft-in-1/16"

Factory setting Decimal

**Additional information** The **ft-in-1/16"** option is only valid for distance units.

Decimal places menu

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Decimal places menu

**Description** Select number of decimal places for the representation of numbers within the operating

menu.

Selection ■ x

x.x x.xx x.xxx x.xxx

Factory setting x.xxxx

### Additional information

- Is only valid for numbers in the operating menu (e.g. **Empty calibration**, **Full calibration**), but not for the measured value display. The number of decimal places for the measured value display is defined in the **Decimal places 1 to 4**  $\Rightarrow$   $\cong$  151 parameters.
- The setting does not affect the accuracy of the measurement or the calculations.

### **Backlight**

**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Backlight

**Prerequisite** The device has the SD03 local display (with optical keys).

**Description** Switch the local display backlight on and off.

**Selection** • Disable

■ Enable

Factory setting Disable

### Additional information Meaning of the options

Disable

Switches the backlight off.

■ Enable

Switches the backlight on.

Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

### Contrast display

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Contrast display

**Description** Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).

User entry 20 to 80 %

**Factory setting** Dependent on the display.

Additional information

Setting the contrast via push-buttons:

- $\blacksquare$  Darker: press the  $\boxdot$   $\boxdot$  buttons simultaneously.
- Brighter: press the 🕒 📵 buttons simultaneously.

## "Configuration backup display" submenu

i

This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configurateion can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display

0	perating	time

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display  $\rightarrow$  Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time* 

9999 d (≈ 27 years)

### Last backup

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display  $\rightarrow$  Last backup

**Description** Indicates when the last data backup was saved to the display module.

### **Configuration management**

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display  $\rightarrow$  Configuration

management

**Description** Select action for managing the device data in the display module.

**Selection** • Cancel

Execute backup

■ Restore

Duplicate

Compare

Clear backup data

Factory setting Cancel

### Additional information

### Meaning of the options

### Cancel

No action is executed and the user exits the parameter.

### Execute backup

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

#### Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

### Duplicate

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

### Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter ( $\rightarrow \implies 156$ ).

### Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
- If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state		
Navigation		
Description	Displays which backup action is currently in progress.	
Comparison result		
Navigation		
Description	Comparison between present device data and display backup.	

### Additional information

### Meaning of the display options

### Settings identical

The current device configuration of the HistoROM is identical to the backup copy in the display module.

### Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

### No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

### Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

### Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

### ■ Dataset incompatible

The data sets are incompatible and can not be compared.

- To start the comparison, set **Configuration management** ( $\rightarrow \triangleq 155$ ) = **Compare**.
- If the transmitter configuration has been duplicated from a different device by Configuration management (→ 🖺 155) = Duplicate, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be Settings not identical.

### "Administration" submenu

Navigation  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

Define access code

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code

**Description** Define release code for write access to parameters.

**User entry** 0 to 9 999

Factory setting 0

Additional information

- If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
- The write protection affects all parameters marked with the symbol in this document. On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.
- Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter  $( \Rightarrow \implies 121)$ .
- Please contact your Endress+Hauser Sales Center if you lose your access code.
- For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter ( $\Rightarrow \triangleq 160$ ).

Device reset

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset

**Description** Reset the device configuration - either entirely or in part - to a defined state.

**Selection** • Cancel

- To factory defaults
- To delivery settings
- Of customer settings
- To transducer defaults
- Restart device

Factory setting Cancel

### Additional information

### Meaning of the options

### Cancel

No action

### ■ To factory defaults

All parameters are reset to the order-code specific factory setting.

### ■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

### Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

### ■ To transducer defaults

Every measurment-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

### Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard

The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Define access code			<b>a</b>
Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Administration $\rightarrow$ Define access code $\rightarrow$ Define access code	3
Description	→ ♣	158	
Confirm access code			

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code  $\rightarrow$  Confirm access

code

**Description** Confirm the entered access code.

**User entry** 0 to 9 999

Factory setting 0

## 16.4 "Diagnostics" menu

# **Actual diagnostics Navigation** Diagnostics → Actual diagnostics Description Displays current diagnostic message. Additional information The display consists of: Symbol for event behavior Code for diagnostic behavior Operating time of occurrence Event text If several messages are active at the same time, the messages with the highest priority is displayed. Information on what is causing the message, and remedy measures, can be viewed via the (i) symbol on the display. **Timestamp Navigation** Diagnostics → Timestamp **Previous diagnostics** Diagnostics → Previous diagnostics **Navigation** Description Displays the last diagnostic message which has been active before the current message.

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

Additional information

The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the ③ symbol on the display.

<b>Timestamp</b>	
THIESTAIND	

Navigation

□ Diagnostics → Timestamp

## Operating time from restart

**Navigation** □ Diagnostics → Operating time from restart

**Description** Displays the time the device has been in operation since the last device restart.

## Operating time

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time* 

9999 d (≈ 27 years)

## 16.4.1 "Diagnostic list" submenu

Navigation  $\Box$  Diagnostics  $\rightarrow$  Diagnostic list

Diagnostics 1 to 5

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Diagnostic list  $\rightarrow$  Diagnostics 1

**Description** Display the current diagnostics messages with the highest to fifth-highest priority.

**Additional information** The display consists of:

Symbol for event behaviorCode for diagnostic behaviorOperating time of occurrence

Event text

Timestamp 1 to 5

**Navigation** □ Diagnostics → Diagnostic list → Timestamp

## 16.4.2 "Event logbook" submenu



The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Filter options	
----------------	--

### **Navigation**

Diagnostics → Event logbook → Filter options

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### **Factory setting**

All

### Additional information



- This parameter is only used for operation via the local display.
- The status signals are categorized according to NAMUR NE 107.

### "Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter ( $\rightarrow \implies 164$ ). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- ①: Event has occurred
- 🕒: Event has ended
- Information on what is causing the message, and remedy instructions, can be viewed via the ①-button.

### Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  $\square$  Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Event list

### 16.4.3 "Device information" submenu

*Navigation*  $\blacksquare \square$  Diagnostics  $\rightarrow$  Device information

Device tag

**Navigation**  $\blacksquare \square$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Device tag

**Description** Enter the name for the measuring point.

**Factory setting** FMR5x

Serial number

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Serial number

**Description** Shows the serial number of the measuring device.

Additional information

- Uses of the serial number
  - To identify the device quickly, e.g. when contacting Endress+Hauser.
  - To obtain specific information on the device using the Device Viewer: www.endress.com/deviceviewer
- The serial number is also indicated on the nameplate.

Firmware version

**Navigation** Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Firmware version

**Description** Shows the device firmware version installed.

User interface xx.yy.zz

**Additional information** For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Device name

**Description** Shows the name of the transmitter.

Order code

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  Order code

**Description** Shows the device order code.

**Additional information** The order code is generated from the extended roder code, which defines all device

features of the product structure. In contrast, the device features can not be read directly

from the order code.

Extended order code 1 to 3

**Navigation** 

**Description** Display the three parts of the extended order code.

**Additional information** The extended order code indicates the version of all the features of the product structure

and thus uniquely identifies the device.

**Status PROFIBUS Master Config** 

**Navigation** □ □ Diagnostics → Device information → Status PROFIBUS Master Config

**Description** Indicates whether the cyclic data exchange with the master is currently active.

**User interface** ■ Active

Not active

**PROFIBUS** ident number

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Device information  $\rightarrow$  PROFIBUS ident number

**Description** Indicates the ident number of the device.

**Additional information** The **Ident number selector** parameter can be used to define which ident number is used.

## 16.4.4 "Measured values" submenu

Navigation  $\Box$  Diagnostics  $\rightarrow$  Measured values


### **Distance**

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Distance

**Description** Displays the measured distance D between the reference point (lower edge of the flange or

threaded connection) and the level.

### Additional information

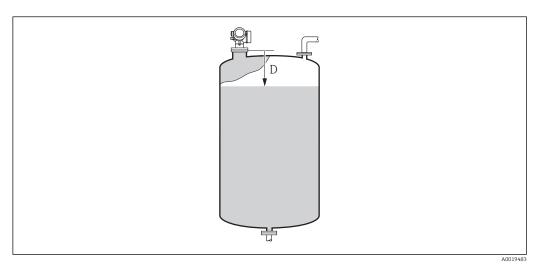

45 Distance for liquid measurements

The unit is defined in the **Distance unit** parameter ( $\rightarrow \triangleq 108$ ).

### Level linearized

**Description** Displays linearized level.

**Additional information** The unit is defined by the **Unit after linearization** parameter  $\rightarrow \triangleq 132$ .

Terminal voltage 1	
Navigation	□ Diagnostics → Measured values → Terminal voltage 1
Switch status	
Navigation	□ Diagnostics → Measured values → Switch status
Description	Shows the current switch output status.
Electronic temperature	
Navigation	□ Diagnostics → Measured values → Electronic temperature
Description	Displays the current temperature of the electronics.
Additional information	The unit is defined in the <b>Temperature unit</b> parameter.

#### 16.4.5 "Analog input 1 to 6" submenu

There is an **Analog input** submenu for each Analog Input Block of the device. Only the most important parameters of the respective block are available at this position of the operating menu. For a complete list of the block parameters refer to: Diagnostics → Analog inputs → Analog input 1 to 6

Navigation

Channel		
Navigation		
Description	Standard parameter <b>CHANNEL</b> of the Analog Input Block according to the PROFIBUS Profile.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude</li> <li>Sensor debug</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> </ul>	
Factory setting	Level linearized	
Additional information	Allocates a measured value to the AI block.	
Out value		
Navigation		
Description	Element <b>Value</b> of the standard parameter <b>OUT</b> in the Analog Input Block according to the PROFIBUS Profile.	
User entry	Signed floating-point number	
Factory setting	0	
Additional information	<ul> <li>For Mode block actual = Man:         Enter the output value of the Analog Input Block.</li> <li>Else:         Displays the output value of the Analog Input Block.</li> </ul>	

**Out status** 

**Navigation** Diagnostics  $\rightarrow$  Analog input 1 to 6  $\rightarrow$  Out status

**Description** Element **Status** of the standard parameter **OUT** in the Analog Input Block accordintg to

the PROFIBUS Profile.

**User interface** ■ Good

Uncertain

■ Bad

Additional information

Only the two quality bits are evaluated in this parameter.

**Out status HEX** 

**Navigation** Diagnostics  $\rightarrow$  Analog input 1 to 6  $\rightarrow$  Out status HEX

**Description** Element **Status** of the standard parameter **OUT** in the Analog Input Block according to the

PROFIBUS Profile.

**User entry** 0 to 255

Factory setting 128

**Additional information** The complete status byte is displayed in the form of a two-digit hexadecimal number in

this parameter.

## 16.4.6 "Data logging" submenu

### Assign channel 1 to 4

# Navigation

Selection ■ Off

■ Level linearized

■ Distance

Terminal voltage

Electronic temperature

Absolute echo amplitude

Relative echo amplitude

Area of incoupling

Analog output adv. diagnostics 1

■ Analog output adv. diagnostics 2

### **Factory setting**

Off

### Additional information

A total of 1000 measured values can be logged. This means:

• 1000 data points if 1 logging channel is used

■ 500 data points if 2 logging channels are used

• 333 data points if 3 logging channels are used

• 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

i

The logged data are deleted if a new option is selected in this parameter.

### Logging interval

Navigation

■ □ Diagnostics → Data logging → Logging interval

User entry

1.0 to 3600.0 s

**Factory setting** 

30.0 s

## Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time  $T_{log}$ :

- If 1 logging channel is used: T  $_{log}$  = 1000 · t  $_{log}$
- If 2 logging channels are used:  $T_{log} = 500 \cdot t_{log}$
- If 3 logging channels are used:  $T_{log} = 333 \cdot t_{log}$
- If 4 logging channels are used:  $T_{log} = 250 \cdot t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T  $_{log}$  always remains in the memory (ring memory principle).

The logged data are deleted if this parameter is changed.

### Example

## When using 1 logging channel

- $T_{log}$  = 1000 · 1 s = 1000 s ≈ 16.5 min  $T_{log}$  = 1000 · 10 s = 1000 s ≈ 2.75 h  $T_{log}$  = 1000 · 80 s = 80000 s ≈ 22 h  $T_{log}$  = 1000 · 3600 s = 3600000 s ≈ 41 d

Clear logging data		
Navigation	■ Diagnostics → Data logging → Clear logging data	
Selection	■ Cancel ■ Clear data	


Cancel **Factory setting** 

### "Display channel 1 to 4" submenu



The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM".

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

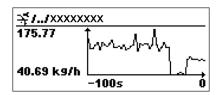

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.
- To return to the operating menu, press  $\pm$  and  $\Box$  simultaneaously.

Navigation



## 16.4.7 "Simulation" submenu


The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul> <li>Assign measurement variable (→ 🖺 176)</li> <li>Value process variable (→ 🖺 176)</li> </ul>
Specific state of the switch output	<ul> <li>Switch output simulation (→ 🖺 176)</li> <li>Switch status (→ 🖺 177)</li> </ul>
Existence of an alarm	Simulation device alarm (→ 🖺 177)

### Structure of the submenu

Navigation  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation

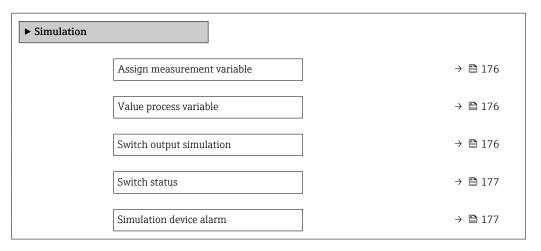

### **Description of parameters**

Navigation  $\blacksquare \square$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation

### Assign measurement variable

**Navigation**  $\blacksquare \blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Assign measurement variable

Selection ■ Off

Level

Off

Level linearized

Factory setting

Additional information

- The value of the variable to be simulated is defined in the **Value process variable** parameter ( $\rightarrow \triangleq 176$ ).
- If **Assign measurement variable** ≠ **Off**, a simulation is active. This is indicated by a diagnotic message of the *Function check (C)* category.

### Value process variable

**Navigation**  $\blacksquare \blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Value process variable

Prerequisite Assign measurement variable ( $\rightarrow \triangleq 176$ )  $\neq 0$ ff

**User entry** Signed floating-point number

Factory setting 0

Additional information

Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

### Switch output simulation

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Switch output simulation

**Description** Switch the simulation of the switch output on and off.

Selection ■ Off ■ On

**Factory setting** Off

Switch status

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Switch status

Prerequisite Switch output simulation ( $\rightarrow = 176$ ) = On

**Description** Select the status of the status output for the simulation.

Selection ■ Open

Closed

Factory setting Open

**Additional information** The switch status assumes the value defined in this parameter. This helps to check correct

operation of connected control units.

Simulation device alarm

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Simulation device alarm

**Description** Switch the device alarm on and off.

Selection ■ Off

■ On

**Factory setting** Off

**Additional information** When selecting the **On** option, the device generates an alarm. This helps to check the

correct output behavior of the device in the case of an alarm.

An active simulation is indicated by the diagnostic message  ${\bf \&C484\ Simulation\ failure}$ 

mode.

Simulation diagnostic event

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Simulation diagnostic event

**Description** Select a diagnostic event for the simulation process that is activated.

Factory setting Off

**Additional information** When operated via the local display, the selection list can be filtered according to the event

categories (**Diagnostic event category** parameter).

### 16.4.8 "Device check" submenu

Navigation  $\blacksquare \square$  Diagnostics  $\rightarrow$  Device check

Start device check

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Start device check

**Description** Start a device check.

Selection ■ No ■ Yes

Factory setting No

**Additional information** In the case of a lost echo a device check can not be performed.

Result device check

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Result device check

**Description** Displays the result of the device check.

Additional information Meaning of the display options

■ Installation ok

Measurement possible without restrictions.

Accuracy reduced

A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.

Measurement capability reduced

A measurement is currently possible. Howerver, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.

Check not done

No device check has been performed.

Last check time

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Last check time

**Description** Displays the operating time at which the last device check has been performed.

Level signal

Navigation  $\blacksquare$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Level signal

Prerequisite Device check has been performed.

Displays result of the device check for the level signal. Description

User interface ■ Check not done

> ■ Check not OK ■ Check OK

Additional information

For **Level signal** = **Check not OK**: Check the mounting position of the device and the dielectric constant of the medium.

#### 16.4.9 "Heartbeat" submenu



The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

## **Detailed description**

SD01871F

Navigation 

# Index

A	Device address (Parameter)	
Access authorization to parameters	Device check (Submenu)	
Read access	Device information (Submenu)	
Write access	Device name (Parameter)	
Access code	Device replacement	
Incorrect input	Device reset (Parameter)	
Access status display (Parameter)	Device tag (Parameter)	165
Access status tooling (Parameter) 120	Diagnostic event	
Accessories	In the operating tool	
Communication specific	Diagnostic events	
Service specific	Diagnostic list	
Activate table (Parameter)	Diagnostic list (Submenu)	
Actual diagnostics (Parameter)	Diagnostic message	74
Administration (Submenu)	Diagnostics	
Advanced process conditions (Parameter) 124	Symbols	
Advanced setup (Submenu)	Diagnostics (Menu)	
Analog input 1 to 6 (Submenu)	Diagnostics 1 (Parameter)	163
Application	Diagnostics event	
Residual risk	Diameter (Parameter)	134
Assign channel 1 to 4 (Parameter)	DIP switch	
Assign diagnostic behavior (Parameter) 144	see Write protection switch	
Assign limit (Parameter)	Display (Submenu)	
Assign measurement variable (Parameter) 176	Display and operating module FHX50	
Assign status (Parameter)	Display channel 1 to 4 (Submenu)	173
	Display damping (Parameter)	
В	Display interval (Parameter)	151
Backlight (Parameter)	Display module	
Backup state (Parameter)	Display symbols for submenus	55
Blocking distance (Parameter) 125, 139	Display symbols for the locking state	55
	Disposal	85
C	Distance (Parameter)	167
CE mark	Distance unit (Parameter)	108
Channel (Parameter)	Document	
Cleaning	Function	. 5
Clear logging data (Parameter)	Document function	. 5
Code incorrect (Parameter)	_	
Comparison result (Parameter)	E	
Configuration backup display (Submenu) 155	Electronic temperature (Parameter)	168
Configuration management (Parameter) 155	Electronics housing	
Configuration of a level measurement 66	Design	
Confirm access code (Parameter) 160	Empty calibration (Parameter)	110
Confirm distance (Parameter)	Enter access code (Parameter)	
Context menu	Envelope curve display	61
Contrast display (Parameter)	Event history	80
Customer value (Parameter)	Event level	
_	Explanation	74
D	Symbols	
Data logging (Submenu)	Event list (Submenu)	
Deactivate WHG (Wizard)	Event logbook (Submenu)	164
Decimal places 1 (Parameter)	Event text	
Decimal places menu (Parameter)	Events list	
Declaration of Conformity	Extended order code 1 (Parameter) 1	
Define access code	Exterior cleaning	83
Define access code (Parameter) 158, 160	<b>-</b>	
Define access code (Wizard) 160	F	
Designated use	Fail safe type (Parameter)	119

Fail safe value (Parameter)       119         Failure mode (Parameter)       147         FHX50       45	Medium property (Parameter)
Filter options (Parameter)	Diagnostics
Filtering the event logbook	Setup
Firmware version (Parameter)	Setup
Format display (Parameter)	N
Free text (Parameter)	Number format (Parameter)
Full calibration (Parameter)	,
	0
H	Operating elements
Hardware write protection 50	Diagnostics message
Header (Parameter)	Operating module
Header text (Parameter)	Operating time (Parameter)
Heartbeat (Submenu)	Operating time from restart (Parameter) 162
Housing	Operational safety
Design	Order code (Parameter)
Turning	Out status (Parameter)
	Out status HEX (Parameter)
	Out value (Parameter)
Input mask	Output echo lost (Parameter)
Intermediate height (Parameter)	Overvoltage protection
Invert output signal (Parameter)	General information
K	Р
Keypad lock	Prepare recording map (Parameter)
Disabling	Present mapping (Parameter)
Switching on	Previous diagnostics (Parameter)
Switching on	Product safety
L	PROFIBUS ident number (Parameter) 166
Language (Parameter)	PV filter time (Parameter)
Last backup (Parameter)	1 v Inter time (I diameter)
Last check time (Parameter)	R
Level (Parameter)	Ramp at echo lost (Parameter)
Level (Submenu)	Read access
Level correction (Parameter)	Record map (Parameter)
Level linearized (Parameter) 133, 167	Registered trademarks
Level measurement configuration 66	Remedial measures
Level signal (Parameter)	Calling up
Level unit (Parameter)	Closing
Linearization (Submenu) 129, 130, 131	Remote operation
Linearization type (Parameter)	Repair concept
Local display	Replacing a device
see Diagnostics message	Requirements for personnel
see In alarm condition	Reset write protection (Parameter)
Locking status (Parameter)	Result device check (Parameter)
Logging interval (Parameter)	Return
M	S
Maintenance	Safety instructions
Manage device configuration	Basic
Mapping (Wizard)	Safety Instructions (XA)
Mapping end point (Parameter)	Safety settings (Submenu)
Max. draining speed liquid (Parameter)	Separator (Parameter)
Max. filling speed liquid (Parameter)	Serial number (Parameter)
Maximum value (Parameter)	Service interface (CDI)
Measured materials	Setting the operating language 65
Measured value symbols	Settings
Measured values (Submenu) 167	Manage device configuration 70
Medium group (Parameter)	Operating language

182

Setup (Menu)	. 108
Signal quality (Parameter)	
Simulation (Submenu)	
Simulation device alarm (Parameter)	
Simulation diagnostic event (Parameter)	. 177
Spare parts	85
Nameplate	
Start device check (Parameter)	
Status PROFIBUS Master Config (Parameter)	
Status signals	55, 74
Submenu	
Administration	
Advanced setup	. 120
Analog input 1 to 6	8, 169
Configuration backup display	
Data logging	
Device check	
Device information	
Diagnostic list	. 163
Display	
Display channel 1 to 4	
Event list	
Event logbook	
Events list	
Heartbeat	
Level	
Measured values	
Safety settings	
Simulation	
Switch output	
Switch output (Submenu)	
Switch output function (Parameter)	
Switch output simulation (Parameter)	
Switch status (Parameter) 147, 16	. 170 8 177
Switch-off delay (Parameter)	
Switch-off value (Parameter)	
Switch-on delay (Parameter)	
Switch-on value (Parameter)	
Symbols	
For correction	58
In the text and numeric editor	58
System components	93
_	
T	
Table mode (Parameter)	
Table number (Parameter)	
Tank type (Parameter)	
Tank/silo height (Parameter)	
Terminal voltage 1 (Parameter)	
Timestamp (Parameter) 161, 16	2, 163
Transmitter	2.2
Turning the display	
Turning the display module	33
Transmitter housing	2.0
Turning	
Trouble shooting	
Turning the display	>>

Turning the display module
<b>U</b> Unit after linearization (Parameter)
V Value 1 display (Parameter)
W W@M Device Viewer
Deactivate WHG
Workplace safety
Via access code49Via write protection switch50Write protection switch50
<b>Z</b> Zubehör Gerätespezifisch



www.addresses.endress.com