


# Operating Instructions Micropilot FMR51, FMR52 FOUNDATION Fieldbus

Free space radar



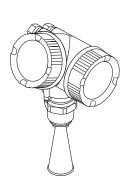

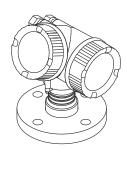

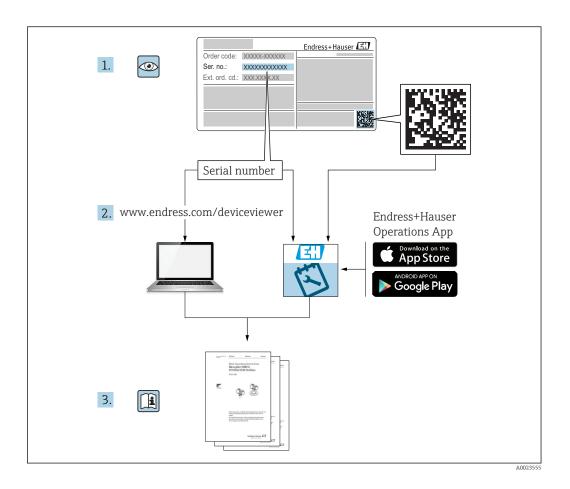

# Table of contents

1	Wichtige Hinweise zum	6.4	Installation in vessel (free space)	
	Dokument 6		6.4.1 Horn antenna (FMR51) 6.4.2 Measurement from the outside	27
1.1	Document function 6		through plastic walls (FMR50/	
1.2	Symbols 6           1.2.1 Safety symbols 6		FMR51)	29
	1.2.1 Safety symbols 6		(FMR52)	30
	1.2.3 Tool symbols 6 1.2.4 Symbols for	6.5	Installation in stilling well 6.5.1 Recommendations for the stilling	31
	certain types of information		well	31 32
1.3	Additional documentation 8	6.6	Installation in bypass	
1.4	Terms and abbreviations		6.6.1 Recommendations for the bypass	0.0
1.5	Registered trademarks		pipe	33
2	Basic safety instructions 11	6.7	bypass	34 35
2.1	Requirements for the personnel	6.8	Turning the transmitter housing	35
2.2 2.3	Designated use	6.9	Turning the display	
2.4	Operational safety		6.9.1 Opening cover	
2.5	Product safety		<ul><li>6.9.2 Turning the display module</li><li>6.9.3 Closing electronics compartment</li></ul>	)(
	2.5.1 CE mark		cover	
2.6	2.5.2 EAC conformity	6.10	Post-installation check	37
3	Product description	7	Electrical connection	38
<b>ر</b> 3.1	-	7.1	Connection conditions	
J.1	Product design		7.1.1 Terminal assignment	
	3.1.2 Micropilot FMR52 16		<ul><li>7.1.2 Cable specification</li></ul>	40
	3.1.3 Electronics housing 17		7.1.4 Supply voltage	
_			7.1.5 Overvoltage protection	42
4	Incoming acceptance and product	7.2	Connecting the measuring device	43
	identification		7.2.1 Opening connection compartment cover	43
4.1	Incoming acceptance		7.2.2 Connecting	
4.2	Product identification		7.2.3 Plug-in spring-force terminals	44
	4.2.1 Nameplate		7.2.4 Closing connection compartment	<i>/</i> . F
5	Storage, Transport	7.3	cover	45 45
5.1	Storage conditions 20			
5.2	Transport product to the measuring point 20	8	Operation options	47
_		8.1	Overview	
6	Installation 21		8.1.1 Local operation	47
6.1	Installation conditions		8.1.2 Operation with remote display and operating module FHX50	48
	6.1.1 Mounting position		8.1.3 Remote operation	48
	6.1.2 Vessel installations	8.2	Structure and function of the operating	
	6.1.4 Measurement in a plastic vessel 23		menu	50
	6.1.5 Optimization options 23		8.2.1 Structure of the operating menu	50
	6.1.6 Beam angle 24		8.2.2 User roles and related access authorization	52
6.2	Measuring conditions		8.2.3 Data access - Security	52 52
6.3	Mounting cladded flanges 26			

8.3	Display 8.3.1 8.3.2 8.3.3 8.3.4 8.3.5	and operating module	57 60 61	12.2	Scaling of the measured value in an AI Block	85 85 85 86 86
9	Integ	ration into a FOUNDATION		12.4 12.5	Language selection	87 88
	Field	ous network	65	12.6	Configuration of the on-site display	89
9.1 9.2	Integra	Description (DD)			<u>.</u> ,	89
9.3 9.4	Device	k		12.7 12.8	Configuration of the event behavior according to the FOUNDATION Fieldbus	89
	9.4.1 9.4.2	Blocks of the device software Block configuration when device is delivered			specification FF912	92
9.5	_	ment of the measured values NEL) in an AI Block			<ul><li>12.8.3 Configurable area</li></ul>	97
9.6		ables of Endress+Hauser parameters	68	12.0	to the bus	98
	9.6.1 9.6.2 9.6.3	Setup Transducer Block Advanced Setup Transducer Block	69 69 70	12.9	Protection of the settings against unauthorized changes	98
	9.6.4	Diagnostic Transducer Block	71	13	Diagnostics and troubleshooting	99
	9.6.5	Expert Configuration Transducer Block	72	13.1	3	99
	9.6.6	Expert Information Transducer			13.1.1 General errors	99
	9.6.7 9.6.8	Block	74 74	13.2	Diagnostic information on local display 1 13.2.1 Diagnostic message	101 101
	9.6.9	Block	75	13.3 13.4	5 1	103 104
9.7	Method	Block	75 76		Transducer Block (TRDDIAG)	
	11100110		, ,		Diagnostic list	
10	Comn	nissioning via wizard	77	13.7	3	106 107 107
11	Comn	nissioning via operating				108
			78	12.0		108
11.1		ation and function check		13.8	Firmware history	109
11.2		the operating language		14	Maintenance	10
11.3		uration of a level measurement	79	14.1		110
11.4 11.5	Configu	ing the reference curve	81 82	14.2		110
		display	82	15	Repairs	11
11.6		Adjustment of the on-site display uration management	82 83	15.1	General information on repairs	
11.7	Protect	ion of the settings against orized changes			± ±	l11 l11
12	Comn	aissioning (block-based			module	111
14		nissioning (block-based	0.	15.2	1	l 11 l 12
40 -	_	tion)	85	15.3		112
12.1	Functio	on check	85	15.4		112

16	Accessories	113
16.1	Device-specific accessories	113
	16.1.1 Weather protection cover	113
	16.1.2 Remote display FHX50	114
	16.1.3 Horn protection for horn antenna	115
	16.1.4 Horn protection for horn antenna	
	with variable antenna extension	116
	16.1.5 Overvoltage protection	117
	16.1.6 Gas-tight feedthrough	117
	16.1.7 Bluetooth module for HART devices	118
16.2	Communication-specific accessories	119
16.3	Service-specific accessories	119
16.4	System components	119
17	Operating menu	120
17.1	Overview of the operating menu (display	
	module)	120
17.2	Overview of the operating menu (operating	
	tool)	126
17.3	"Setup" menu	132
	17.3.1 "Mapping" wizard	139
	17.3.2 "Analog input 1 to 5" submenu	140
17 /.	17.3.3 "Advanced setup" submenu	142
17.4	"Diagnostics" menu	181 183
	17.4.1 Diagnostic list submenu	184
	17.4.2 Event logbook subment	185
	17.4.4 "Measured values" submenu	187
	17.4.5 "Analog input 1 to 5" submenu	188
	17.4.6 "Data logging" submenu	190
	17.4.7 "Simulation" submenu	193
	17.4.8 "Device check" submenu	198
	17.4.9 "Heartbeat" submenu	200
Inde	v	201
	Λ	7.11

# 1 Wichtige Hinweise zum Dokument

#### 1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

# 1.2 Symbols

#### 1.2.1 Safety symbols


Symbol	Meaning
<b>▲</b> DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
<b>A</b> WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
<b>▲</b> CAUTION	CAUTION!  This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

# 1.2.2 Electrical symbols

Symbol	Meaning			
	Direct current			
~	Alternating current			
$\overline{\sim}$	Direct current and alternating current			
Ground connection A grounded terminal which, as far as the operator is concerned, is grounded grounding system.				
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.			
	The ground terminals are situated inside and outside the device:  Inner ground terminal: Connects the protectiv earth to the mains supply.  Outer ground terminal: Connects the device to the plant grounding system.			

#### 1.2.3 Tool symbols

Symbol	Meaning
A0013442	Torx screwdriver
A0011220	Flat blade screwdriver

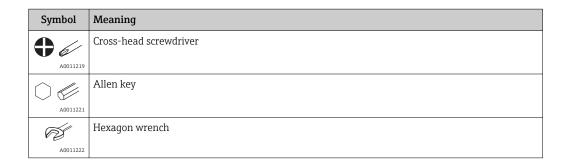

# 1.2.4 Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
<b>✓ ✓</b>	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	<b>Tip</b> Indicates additional information.
	Reference to documentation.
A=	Reference to page.
	Reference to graphic.
<b>&gt;</b>	Notice or individual step to be observed.
1., 2., 3	Series of steps.
L	Result of a step.
?	Help in the event of a problem.
	Visual inspection.

# 1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3	Item numbers
1., 2., 3	Series of steps
A, B, C, Views	
A-A, B-B, C-C,	Sections
Hazardous area Indicates a hazardous area.	
Safe area (non-hazardous area) Indicates the non-hazardous area.	

## 1.2.6 Symbols at the device

Symbol	Meaning		
△→  Safety instructions Observe the safety instructions contained in the associated Operating Instructions.			
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.		

# 1.3 Additional documentation

Document	Purpose and content of the document				
Technical Information TI01040F (FMR51, FMR52)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.				
Brief Operating Instructions KA01125F (FMR51/FMR52, FOUNDATION Fieldbus)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.				
Description of Device Parameters GP01017F (FMR5x, FOUNDATION Fieldbus)	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.				
Special documentation SD01087F	Functional Safety Manual The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.				
Special documentation SD01870F	Manual for Heartbeat Verification and Heartbeat Monitoring The document contains descriptions of the additional parameters and technical data which are available with the Heartbeat Verification and Heartbeat Monitoring application packages.				

- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - The W@M Device Viewer: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
  - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

# 1.4 Terms and abbreviations

Term/abbreviation	Explanation	
BA	Document type "Operating Instructions"	
KA	Document type "Brief Operating Instructions"	
TI	Document type "Technical Information"	
SD	Document type "Special Documentation"	
XA	Document type "Safety Instructions"	
PN	Nominal pressure	
MWP	Maximum Working Pressure The MWP can also be found on the nameplate.	
ToF	Time of Flight	
FieldCare Scalable software tool for device configuration and integrated plant asset r solutions		
DeviceCare	Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices	
DTM Device Type Manager		
DD	Device Description for HART communication protocol	
$\epsilon_{\rm r}$ (DC value)	Relative dielectric constant	
Operating tool	The term "operating tool" is used in place of the following operating software:  FieldCare / DeviceCare, for operation via HART communication and PC  SmartBlue (app), for operation using an Android or iOS smartphone or tablet.	
BD	Blocking Distance; no signals are analyzed within the BD.	
PLC	Programmable Logic Controller	
CDI Common Data Interface		
PFS	Pulse Frequence Status (Switching output)	
MBP	Manchester Bus Powered	
PDU	Protocol Data Unit	

# 1.5 Registered trademarks

#### FOUNDATION<sup>TM</sup> Fieldbus

Registered trademark of the FieldComm Group, Austin, Texas, USA

#### Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

#### Apple<sup>®</sup>

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

#### Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

#### KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

#### TFFI ON

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

#### TRI CLAMP®

Registered trademark of Alfa Laval Inc., Kenosha, USA

# 2 Basic safety instructions

## 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

## 2.2 Designated use

#### Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contactless level measurement of liquids, pastes and sludge. The device can also be freely mounted outside closed metal vessels (e.g. above basins, open channels or open piles) because of its operating frequency of about 26 GHz, a maximum radiated pulsed power of 5.7 mW and an average power output of 0.015 mW (for the version with advanced dynamics: maximum pulse power: 23.3 mW; average power: 0.076 mW). Operation is completely harmless to humans and animals.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ► Measured process variables: level, distance, signal strength
- ► Calculated process variables: Volume or mass in arbitrarily shaped vessels; flow through measuring weirs or flumes (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the processwetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

#### Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

► For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

#### Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80  $^{\circ}$ C (176  $^{\circ}$ F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

► For high process temperatures: Install protection against contact in order to prevent burns.

# 2.3 Workplace safety

For work on and with the device:

► Wear the required personal protective equipment according to federal/national regulations.

# 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

#### Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with the manufacturer.

#### Repair

To ensure continued operational safety and reliability,

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

#### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ► Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

# 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

#### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

#### 2.5.1 **CE mark**

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

## 2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

# 2.6 Safety Instructions (XA)


Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval Available		or Feature 020 "Power Supply; Output"					
			A 1)	B 2)	C 3)	E 4)/G 5)	K <sup>6)</sup> /L <sup>7)</sup>	
BA	ATEX: II 1 G Ex ia IIC T6-T1 Ga	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00677F	XA00677F	XA00677F	XA00685F	-	
BB	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00677F	XA00677F	XA00677F	XA00685F	-	
ВС	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00680F	XA00680F	XA00680F	XA00688F	XA00680F	
BD	ATEX: II 1/2/3 G Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00678F	XA00678F	XA00678F	XA00686F	XA00678F	
BG	ATEX: II 3 G Ex nA IIC T6-T1 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F	
ВН	ATEX: II 3 G Ex ic IIC T6-T1 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F	
BL	ATEX: II 1/2/3 G Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00678F	XA00678F	XA00678F	XA00686F	XA00678F	
B2	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ia IIC Txx°C Da/Db	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00683F	XA00683F	XA00683F	XA00691F	-	
В3	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00684F	XA00684F	XA00684F	XA00692F	XA00684F	
B4	ATEX:II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00681F	XA00681F	XA00681F	XA00689F	-	
CD	CSA C/US DIP Cl.II,III Div.1 Gr.E-G	FMR51	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F	
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div. 2, Ex ia	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01112F	XA01112F	XA01112F	XA01114F	-	
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F	
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01116F	XA01116F	XA01116F	XA01118F	-	
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F	
FE	FM DIP Cl.II,III Div.1 Gr.E-G	FMR51	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F	
IA	IECEx: Ex ia IIC T6-T1 Ga	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00677F	XA00677F	XA00677F	XA00685F	-	
IB	IECEx: Ex ia IIC T6-T1 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00677F	XA00677F	XA00677F	XA00685F	-	
IC	IECEx: Ex d [ia] IIC T6-T1 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00680F	XA00680F	XA00680F	XA00688F	XA00680F	
ID	IECEx: Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00678F	XA00678F	XA00678F	XA00686F	XA00678F	

Feature	Approval	Available for	Feature 020 "Power Supply; Output"				
010			A 1)	B 2)	C 3)	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
IG	IECEx: Ex nA IIC T6-T1 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
IH	IECEx: Ex ic IIC T6-T1 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
IL	IECEx: Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00678F	XA00678F	XA00678F	XA00686F	XA00678F
I2	IECEx: Ex ia IIC T6-T1 Ga/Gb IECEx: Ex ia IIIC Txx°C Da/Db	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00683F	XA00683F	XA00683F	XA00691F	-
I3	IECEx: Ex d  ia  IIC T6-T1 Ga/Gb IEXEx: Ex ta IIIC Txx°C Da/Db	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00684F	XA00684F	XA00684F	XA00692F	XA00684F
I4	IECEx: Ex ia IIC T6-T1 Ga/Gb IECEx: Ex d [ia] IIC T6-T1 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA00681F	XA00681F	XA00681F	XA00689F	-
JA	JPN Ex d ia IIC T4 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01716F	XA01716F	-	-	-
JC	JPN Ex d [ia] IIC T4 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01717F	XA01717F	-	-	-
JD	JPN Ex d [ia] IIC T1 Ga/Gb	FMR51	XA01717F	XA01717F	-	-	-
JE	JPN Ex d [ia] IIC T2 Ga/Gb	FMR51	XA01717F	XA01717F			
JF	JPN Ex d [ia] IIC T3 Ga/Gb	FMR52	XA01717F	XA01717F	-	-	-
KA	KC Ex ia IIC T6 Ga	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01045F	XA01045F	XA01045F	XA01047F	-
KB	KC Ex ia IIC T6 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01045F	XA01045F	XA01045F	XA01047F	-
KC	KC Ex d[ia] IIC T6	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01046F	XA01046F	XA01046F	XA01048F	XA01046F
MA	INMETRO: Ex ia IIC T6 Ga	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01286F	XA01287F	XA01288F	XA01296F	-
MC	INMETRO: Ex d[ia] IIC T6 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01292F	XA01292F	XA01293F	XA01298F	XA01294F
МН	INMETRO: Ex ic IIC T6 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01289F	XA01290F	XA01291F	XA01297F	-
NA	NEPSI Ex ia IIC T6 Ga	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01199F	XA01199F	XA01199F	XA01208F	-
NB	NEPSI Ex ia IIC T6 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01199F	XA01199F	XA01199F	XA01208F	-
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01202F	XA01202F	XA01202F	XA01211F	XA01202F
NG	NEPSI Ex nA II T6 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
NH	NEPSI Ex ic IIC T6 Gc	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85 90oC	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01205F	XA01205F	XA01205F	XA01214F	-

Feature	Approval	Available for	or Feature 020 "Power Supply; Output"				
010			A 1)	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T8590oC IP66	<ul><li>FMR51</li><li>FMR52</li></ul>	XA01206F	XA01206F	XA01206F	XA01215F	XA01206F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	• FMR51 • FMR52	<ul><li>XA01113F</li><li>XA01116F</li></ul>	<ul><li>XA01113F</li><li>XA01116F</li></ul>	<ul><li>XA01113F</li><li>XA01116F</li></ul>	<ul><li>XA01114F</li><li>XA01115F</li><li>XA01118F</li><li>XA01119F</li></ul>	

- 1) 2-wire; 4-20mA HART
- 2) 2-wire; 4-20mA HART, switch output
- 3) 2-wire; 4-20mA HART, 4-20mA
- 4) 2-wire; FOUNDATION Fieldbus, switch output
- 5) 2-wire; PROFIBUS PA, switch output
- 6) 4-wire 90-253VAC; 4-20mA HART
- 7) 4-wire 10.4-48VDC; 4-20mA HART

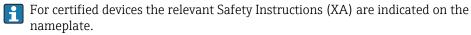

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table  $^{1}$ :


Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
BG	L, M or N	ATEX II 3G Ex nA [ia Ga] IIC T6-T1 Gc
ВН	L, M or N	ATEX II 3G Ex ic [ia Ga] IIC T6-T1 Gc
В3	L, M or N	ATEX II 1/2G Ex d [ia] IIC T6-T1 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IG	L, M or N	IECEx Ex nA [ia Ga] IIC T6-T1 Gc
IH	L, M or N	IECEx Ex ic [ia Ga] IIC T6-T1 Gc
I3	L, M or N	IECEx Ex d [ia] IIC T6-T1 Ga/Gb, IECEx Ex ta [ia Db] IIIC Txx°C Da/Db
МН	L, M or N	Ex ic [ia Ga] IIC T6 Gc
NG	L, M or N	NEPSI Ex nA [ia Ga] IIC T6-T1 Gc
NH	L, M or N	NEPSI Ex ic [ia Ga] IIC T6-T1 Gc
N3	L, M or N	NEPSI Ex d [ia] IIC T6-T1 Ga/Gb, DIP A20/21 [ia D] TA, Txx°C IP6X

<sup>1)</sup> The marking of certificates not mentioned in this table are not affected by the FHX50.

# **3** Product description

# 3.1 Product design


# 3.1.1 Micropilot FMR51

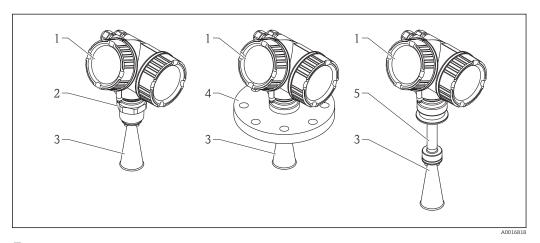

■ 1 Design of the Micropilot FMR51 (26 GHz)

- 1 Electronics housing
- 2 Process connection (Thread)
- 3 Horn antenna
- 4 Flange
- 5 Antenna extension


# 3.1.2 Micropilot FMR52

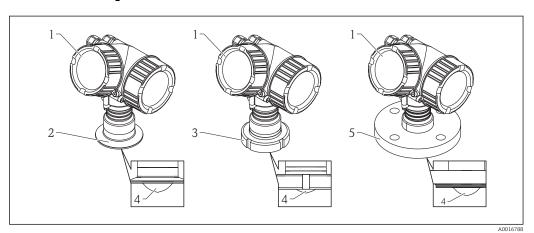

■ 2 Design of the Micropilot FMR52 (26 GHz)

- 1 Electronics housing
- 2 Tri-Clamp process connection
- 3 Dairy coupling
- 4 PTFE cladding
- 5 Flange

#### 3.1.3 Electronics housing

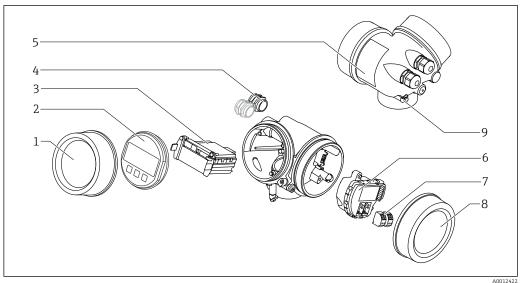

■ 3 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

# 4 Incoming acceptance and product identification

#### 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- Is the DVD with the operating tool present?
  If required (see nameplate): Are the Safety Instructions (XA) present?
- If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

#### 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ( www.endress.com/deviceviewer ): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

#### 4.2.1 Nameplate

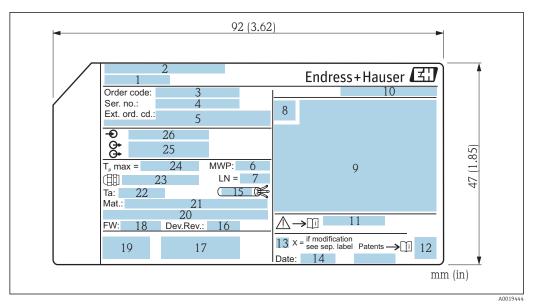

■ 4 Nameplate of the Micropilot

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (only for FMR51 with antenna extension)
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 Data Matrix Code
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of the cable
- 16 Device revision
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profil-Version; FOUNDATION Fieldbus: Device ID
- 21 Material in contact with process
- 22 Permitted ambient temperature  $(T_a)$
- 23 Size of the thread of the cable glands
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Operating voltage

Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device: **Extended order code 1 to 3** parameter

#### Storage, Transport 5

#### **Storage conditions** 5.1


- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.

#### 5.2 Transport product to the measuring point

#### NOTICE

Housing or antenna horn may be damaged or break away. Risk of injury!


- ► Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna horn but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ► Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

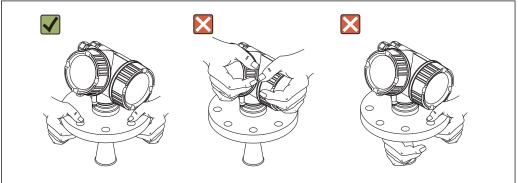

# 6 Installation


#### 6.1 Installation conditions

# 6.1.1 Mounting position

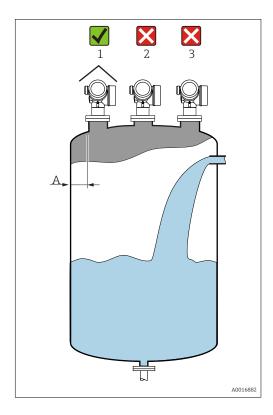


- Recommended distance **A** from wall to outer edge of nozzle: ~ 1/6 of tank diameter.
  - Nevertheless the device should not be installed closer than 15 cm (5.91 in) to the tank wall.
- Not in the center (2), as interference can cause signal loss.
- Not above the fill stream (3).
- It is recommended to us a weather protection cover (1) in order to protect the device from direct sun or rain.

#### 6.1.2 Vessel installations

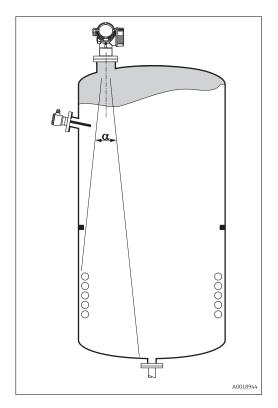


#### **6.1.3** Reduction of interference echoes

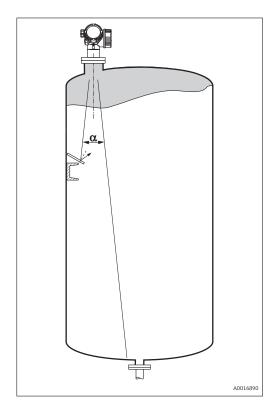

Metallic screens mounted at a slope spread the radar signal and can, therefore, reduce interference echoes.

#### 6.1.4 Measurement in a plastic vessel

If the outer wall of the vessel is made of a non-conductive material (e.g. GRP), microwaves can also be reflected off interfering installations outside the vessel (e.g. metallic pipes (1), ladders (2), grates (3), ...). Therefore, there should be no such interfering installations in the signal beam. Please contact Endress+Hauser for further information.

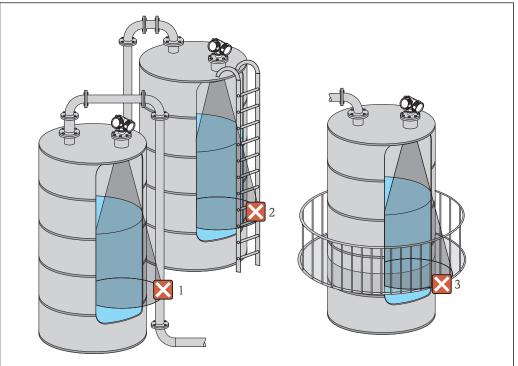

Δ0017123

#### **6.1.5** Optimization options

Antenna size

Mapping

The measurement can be optimized by means of electronic suppression of interference

See the **Confirm distance** parameter ( $\rightarrow$   $\stackrel{ riangle}{=}$  136) for details.

Antenna alignment

Take into account the marker on the flange or threaded connection.


Stilling well

A stilling well can be applied to avoid interferences  $\rightarrow \triangleq 31$ .

Metallic screens mounted at a slope

They spread the radar signals and can, therefore, reduce interference echoes.

## 6.1.6 Beam angle

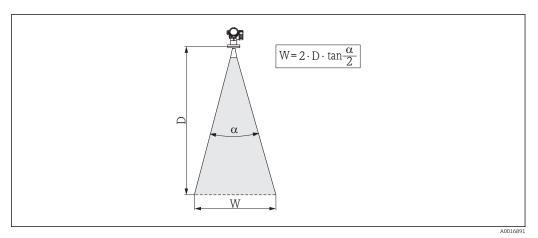

 $\blacksquare$  5 Relationship between beam angle  $\alpha$ , distance D and beamwidth diameter W

The beam angle is defined as the angle  $\alpha$  where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

Beam diameter W as a function of beam angle  $\alpha$  and measuring distance D:

FMR51					
Antenna size	40 mm (1½ in)	50 mm (2 in)	80 mm (3 in)	100 mm (4 in)	
Beam angle α	23°	18°	10°	8°	
Measuring distance (D)		Beamwidth dia	meter W		
3 m (9.8 ft)	1.22 m (4 ft)	0.95 m (3.1 ft)	0.53 m (1.7 ft)	0.42 m (1.4 ft)	
6 m (20 ft)	2.44 m (8 ft)	1.9 m (6.2 ft)	1.05 m (3.4 ft)	0.84 m (2.8 ft)	
9 m (30 ft)	3.66 m (12 ft)	2.85 m (9.4 ft)	1.58 m (5.2 ft)	1.26 m (4.1 ft)	
12 m (39 ft)	4.88 m (16 ft)	3.80 m (12 ft)	2.1 m (6.9 ft)	1.68 m (5.5 ft)	
15 m (49 ft)	6.1 m (20 ft)	4.75 m (16 ft)	2.63 m (8.6 ft)	2.10 m (6.9 ft)	
20 m (66 ft)	8.14 m (27 ft)	6.34 m (21 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)	
25 m (82 ft)	10.17 m (33 ft)	7.92 m (26 ft)	4.37 m (14 ft)	3.50 m (11 ft)	
30 m (98 ft)	-	9.50 m (31 ft)	5.25 m (17 ft)	4.20 m (14 ft)	
35 m (115 ft)	-	11.09 m (36 ft)	6.12 m (20 ft)	4.89 m (16 ft)	
40 m (131 ft)	-	12.67 m (42 ft)	7.00 m (23 ft)	5.59 m (18 ft)	
45 m (148 ft)	-	-	7.87 m (26 ft)	6.29 m (21 ft)	
60 m (197 ft)	-	-	10.50 m (34 ft)	8.39 m (28 ft)	
70 m (230 ft)	-	-	-	9.79 m (32 ft)	


FMR52					
Antenna size	50 mm (2 in)	80 mm (3 in)			
Beam angle α	18°	10°			
Measuring distance (D)	Beamwidth diam	eter W			
3 m (9.8 ft)	0.95 m (3.1 ft)	0.53 m (1.7 ft)			
6 m (20 ft)	1.9 m (6.2 ft)	1.05 m (3.4 ft)			
9 m (30 ft)	2.85 m (9.4 ft)	1.58 m (5.2 ft)			
12 m (39 ft)	3.80 m (12 ft)	2.1 m (6.9 ft)			
15 m (49 ft)	4.75 m (16 ft)	2.63 m (8.6 ft)			
20 m (66 ft)	6.34 m (21 ft)	3.50 m (11 ft)			
25 m (82 ft)	7.92 m (26 ft)	4.37 m (14 ft)			
30 m (98 ft)	9.50 m (31 ft)	5.25 m (17 ft)			
35 m (115 ft)	11.09 m (36 ft)	6.12 m (20 ft)			
40 m (131 ft)	12.67 m (42 ft)	7.00 m (23 ft)			
45 m (148 ft)	-	7.87 m (26 ft)			
60 m (197 ft)	-	10.50 m (34 ft)			

#### 6.2 Measuring conditions

- In case of **boiling surfaces**, **bubbling** or tendency for **foaming** use FMR53 or FMR54. Depending on its consistence, foam can either absorb microwaves or reflect them off the foam surface. Measurement is possible under certain conditions. For FMR50, FMR51 and FMR52, the additional option "Advanced dynamics" is recommended in these cases (feature 540: "Application Package", option EM).
- In case of heavy steam development or condensate, the maximum measuring range of FMR50, FMR51 and FMR52 may decrease depending on density, temperature and composition of the steam → use FMR53 or FMR54.
- For the measurement of absorbing gases such as **ammonia NH**<sub>3</sub> or some **fluorocarbons** <sup>2)</sup>, please use Levelflex or Micropilot FMR54 in a stilling well.
- The measuring range begins, where the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- In stilling well applications, the electromagnetic waves do not propagate completely outside the tube. It must be taken into account that the accuracy may be reduced in the area **C**. In order to guarantee the required accuracy in these cases, it is recommended to position the zero-point at a distance **C** above the end of the tube (see figure).
- In case of media with a low dielectric constant  $(\varepsilon_r = 1.5 \text{ to } 4)^{3)}$  the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see figure) above the tank bottom in these applications.
- In principle it is possible to measure up to the tip of the antenna with FMR51, FMR53 and FMR54. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than **A** (see figure) to the tip of the antenna.
- When using FMR54 with planar antenna, especially for media with low dielectric constants, the end of the measuring range should not be closer than A: 1 m (3.28 ft) to the flange.
- The smallest possible measuring range **B** depends on the antenna version (see figure).
- The tank height should be at least **H** (see table).

<sup>2)</sup> Affected compounds are e.g. R134a, R227, Dymel 152a.

<sup>3)</sup> Dielectric constants of important media commonly used in various industries are summarized in the DC manual (CP01076F) and in the Endress +Hauser "DC Values App" (available for Android and iOS).

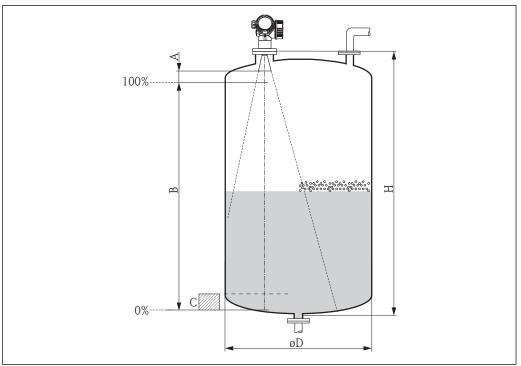

A001887

Device	A [mm (in)]	B [m (ft)]	C [mm (in)]	H [m (ft)]
FMR51	50(1.97)	> 0.2 (0.7)	50 to 250 (1.97 to 9.84)	> 0.3 (1.0)
FMR52	200(7.87)	7 0.2 (0.7)	30 (0 230 (1.97 (0 9.04)	0.5 (1.0)

# 6.3 Mounting cladded flanges

- Use flange screws according to the number of flange holes.
  - Tighten the screws with the required torque (see table).
  - Retighten the screws after 24 hours or after the first temperature cycle.
  - Depending on process pressure and process temperature check and retighten the screws at regular intervals.
- Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

Flange size	Number of screws	Recommended torque [Nm]					
		minimum	maximum				
EN	EN						
DN50/PN16	4	45	65				
DN80/PN16	8	40	55				
DN100/PN16	8	40	60				
DN150/PN16	8	75	115				
ASME							
2"/150lbs	4	40	55				
3"/150lbs	4	65	95				
4"/150lbs	8	45	70				
6"/150lbs	8	85	125				


Flange size	Number of screws	Recommended torque [Nm]				
		minimum maximum				
JIS	JIS					
10K 50A	4	40	60			
10K 80A	8	25	35			
10K 100A	8	35	55			
10K 100A	8	75	115			

# 6.4 Installation in vessel (free space)

#### 6.4.1 Horn antenna (FMR51)

#### Alignment


- Align the antenna vertically to the product surface.
   The maximum range may be reduced if the horn antenna is not vertically aligned.
- A marking at the flange (somewhere between the flange holes) or the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

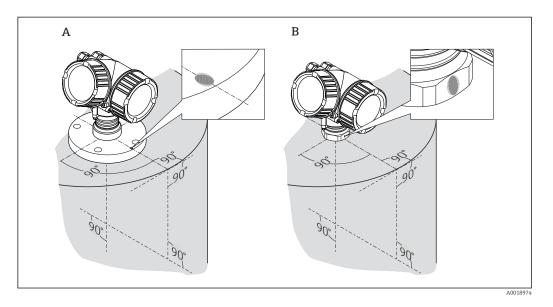

Depending on the device version the marking may be a circle or two short parallel lines.

#### Nozzle mounting

For optimum measurement, the tip of the antenna should extend below the nozzle. Depending on the antenna size this is achieved by the following maximum nozzle heights:

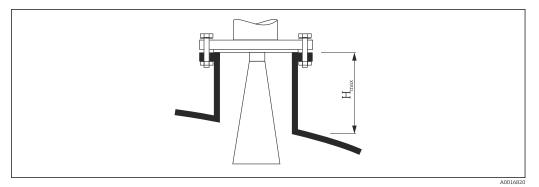


■ 6 Nozzle height for horn antenna (FMR51)

Antenna 1)	Maximum nozzle height $H_{max}$
BA: Horn 40mm/1-1/2"	86 mm (3.39 in)
BB: Horn 50mm/2"	115 mm (4.53 in)
BC: Horn 80mm/3"	211 mm (8.31 in)
BD Horn 100mm/4"	282 mm (11.1 in)

1) Feature 070 of the product structure

#### Conditions for longer nozzles

If the medium has good reflective properties, higher nozzles can be accepted. In this case the maximum nozzle height,  $H_{max}$ , is dependent on the nozzle diameter, D:

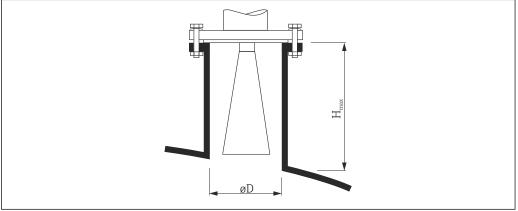

10023611

Nozzle diameter D	<b>Maximum nozzle height</b> $H_{max}$	Recommended antenna <sup>1)</sup>
40 mm (1.5 in)	100 mm (3.9 in)	BA: Horn 40mm/1-1/2"
50 mm (2 in)	150 mm (5.9 in)	BB: Horn 50mm/2"
80 mm (3 in)	250 mm (9.8 in)	BC: Horn 80mm/3"

Nozzle diameter D		Recommended antenna 1)
100 mm (4 in)	500 mm (19.7 in)	BD: Horn 100mm/4"
150 mm (6 in)	800 mm (31.5 in)	BD: Horn 100mm/4"

- 1) Feature 070 of the product structure
- If the antenna doesn't extend below the nozzle, observe the following:
  - The nozzle end must be smooth and free of burrs. If possible its edge should be rounded.
  - An interference echo suppression must be performed.
  - Please contact Endress+Hauser for applications with higher nozzles than those indicated in the table.
- For mounting in heigh nozzles the device is available in a version with an antenna extension of up to 1000 mm (39.4 in) 4)
  - The antenna extension may cause interference echoes in the near range. In this case it may occur that the maximum measurable level is reduced.

#### Threaded connection

- For devices with a threaded connection it may be necessary depending on the antenna size to unmount the horn before fastening the device and to mount it again afterwards.
- Tighten with the hexagonal nut only.
- Tool: 55 mm hexagonal wrench
- Maximum permissible torque: 60 Nm (44 lbf ft)

# 6.4.2 Measurement from the outside through plastic walls (FMR50/FMR51)

- Dielectric constant of the medium:  $\varepsilon_r > 10$
- If possible, use an antenna 100 mm (4 in).
- The distance from the lower edge of the antenna to the tank ceiling should be about 100 mm (4 in).
- If possible, avoid mounting locations where condensation or build-up might occur.
- In case of outdoor mounting, the space between antenna and vessel has to be protected from the elements.
- Do not mount any potential reflectors (e.g. pipes) outside the tank in the signal beam.

#### Suitable thickness of the tank ceiling:

Penetrated material	PE	PTFE	PP	Perspex
DK / ε <sub>r</sub>	2.3	2.1	2.3	3.1
Optimum thickness 1)	3.8 mm (0.15 in)	4.0 mm (0.16 in)	3.8 mm (0.15 in)	3.3 mm (0.13 in)


1) Other possible values for the thickness are multiples of the values listed (e.g. for PE: 7.6 mm (0.3 in), 11.4 mm (0.45 in)

<sup>4)</sup> Feature 610 "Accessory mounted" of the product structure.

#### 6.4.3 Horn antenna, flush mount (FMR52)


#### Alignment

- Align the antenna vertically to the product surface.
   The maximum range may be reduced if the horn antenna is not vertically aligned.
- A marking at the flange (somwhere between the flange holes) or the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

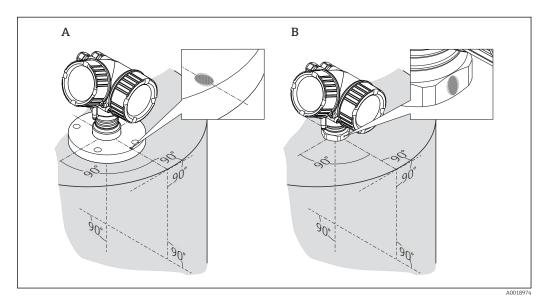

Depending on the device version the marking may be a circle or two short parallel lines.

#### Nozzle mounting

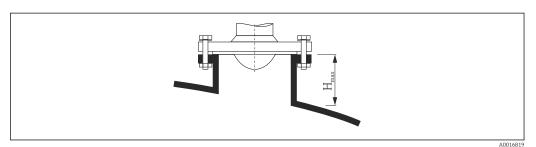

■ 7 Nozzle height for horn antenna, flush mount (FMR52)


 Antenna 1)
 Maximum nozzle height  $H_{max}$  

 BO: Horn 50mm/2"
 500 mm (19.7 in)

 BP: Horn 80mm/3"
 500 mm (19.7 in)

- 1) Feature 070 of the product structure
- Please contact Endress+Hauser for applications with higher nozzle.
- For flanges with PTFE cladding: Observe the notes on the mounting of cladded flanges  $\rightarrow \triangleq 26$ .
  - Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

# 6.5 Installation in stilling well

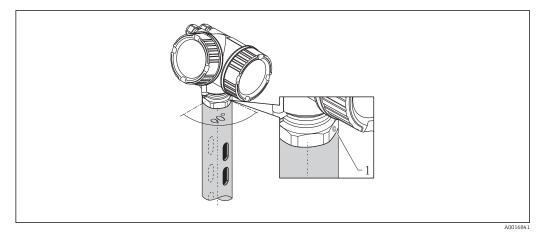

■ 8 Installation in stilling well

1 Marking for antenna alignment


- For horn antenna: Align the marking towards the slots of the stilling well.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to facilitate access to the display and the terminal compartment → 

  35.

#### 6.5.1 Recommendations for the stilling well

- Metal (no enamel coating; plastic on request).
- Constant diameter.
- Diameter of stilling well not larger than antenna diameter.
- Diameter difference between horn antenna and inner diameter of the stilling well as small as possible.
- Weld seam as smooth as possible and on the same axis as the slots.
- Slots offset 180° (not 90°).
- Slot width or diameter of holes max. 1/10 of pipe diameter, de-burred. Length and number do not have any influence on the measurement.
- Select horn antenna as big as possible. For intermedaite sizes (e.g. 180 mm (7 in)) select next larger antenna and adapt it mechanically (for horn antennas)
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be left exceeding 1 mm (0.04 in).
- The stilling well must be smooth on the inside (average roughness  $R_z \le 6.3 \ \mu m$  (248  $\mu in$ )). Use extruded or parallel welded metal pipe. An extension of the pipe is possible with welded flanges or pipe sleeves. Flange and pipe have to be properly aligned at the inside.
- Do not weld through the pipe wall. The inside of the stilling well must remain smooth. In case of unintentional welding through the pipe, the weld seam and any unevenness on the inside need to be carefully removed and smoothened. Otherwise, strong interference echoes will be generated and material build-up will be promoted.
- In the case of smaller nominal widths flanges must be welded to the pipe such that they allow for a correct orientation (marker aligned toward slots).


# 6.5.2 Examples for the construction of stilling wells

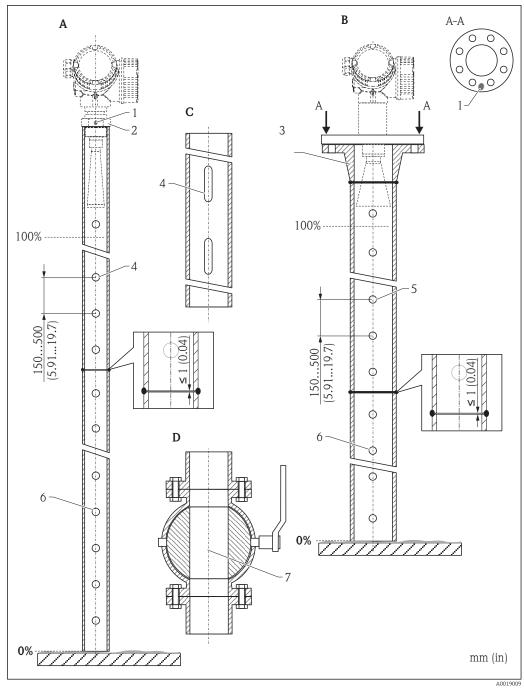

- A Micropilot FMR50/FMR51: Horn 40mm(1½")
- B Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- C Stilling well with slots
- D Full bore ball valve
- 1 Marking for axial alignment
- 2 Threaded connection
- 3 e.g. welding neck flange DIN2633
- 4  $\phi$  hole max.  $1/10 \phi$  stilling well
- Φ hole max. 1/10 Φ stilling well; single sided or drilled through
- 6 Inside of holes deburred
- 7 Diameter of opening of ball valve must always be equivalent to pipe diameter; avoid edges and constrictions.

32

# 6.6 Installation in bypass

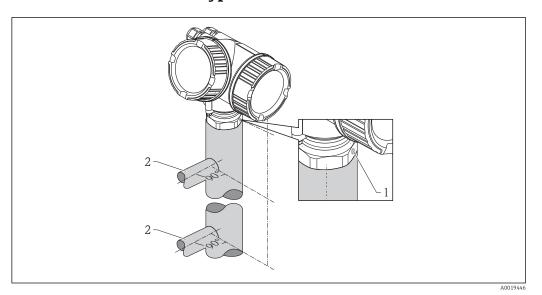


9 Installation in bypass

- 1 Marking for antenna alignment
- 2 Tank connectors
- Align the marker perpendicular (90°) to the tank connectors.
- Measurements can be performed through an open full bore ball valve without any problems.

#### 6.6.1 Recommendations for the bypass pipe


- Metal (no plastic or enamel coating).
- Constant diameter.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 95 mm (3.5 in)) select next larger antenna and adapt it mechanically (for horn antennas).
- Diameter difference between horn antenna and inner diameter of the bypass as small as possible.
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be created exceeding 1 mm (0.04 in).
- In the area of the tank connections ( $\sim \pm 20$  cm (7.87 in)) a reduced accuracy of the measurement has to be expected.

#### Example for the construction of a bypass 6.6.2

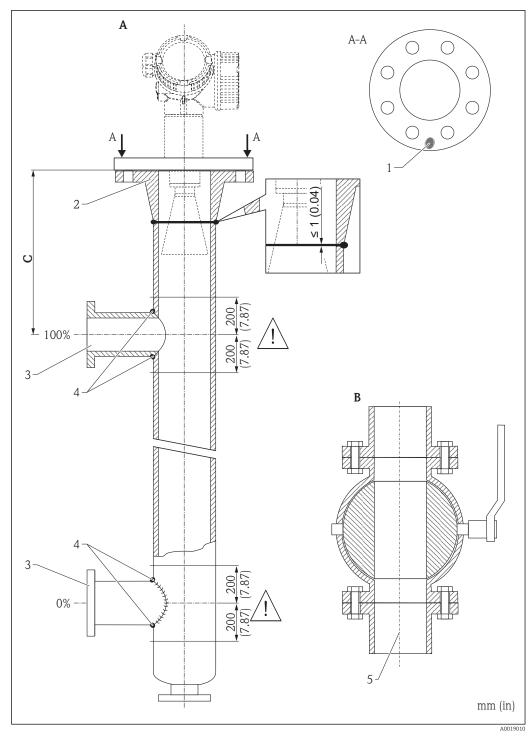

- Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3") Full bore ball valve Α
- В
- С Minimum distance to upper connection pipe: 400 mm (15,7 in)
- Marking for axial alignment
- e.g. welding neck flange DIN2633 2
- Diameter of the connection pipes as small as possible
- Do not weld through the pipe wall; the inside of the bypass must remain smooth.
- Diameter of opening of ball valve must always be equivalent to pipe diameter. Avoid edges and constrictions.


#### 6.7 Container with heat insulation

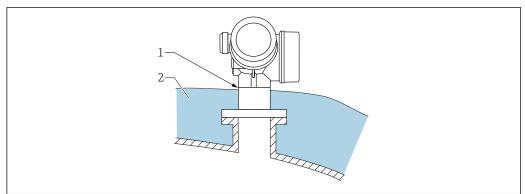

If process temperatures are high, the device should be included in the usual container insulation system (2) to prevent the electronics from heating as a result of thermal radiation or convection. The insulation should not be higher than the neck of the device (1).

#### 6.8 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

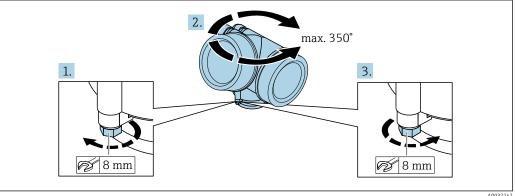


A0032242

- 1. Unscrew the securing screw using an open-ended wrench.
- 2. Rotate the housing in the desired direction.
- 3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).


#### 6.9 Turning the display

#### 6.9.1 Opening cover

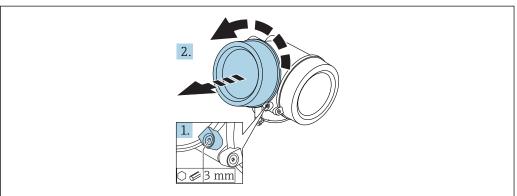


- 1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
- 2. Unscrew cover and check lid gasket, replace if necessary.

#### 6.9.2 Turning the display module

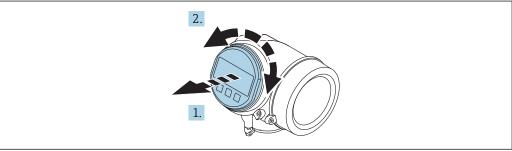

- 1. Pull out the display module with a gentle rotational movement.
- **2.** Rotate the display module to the desired position: max.  $8 \times 45^{\circ}$  in each direction.
- 3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

## 6.9.3 Closing electronics compartment cover

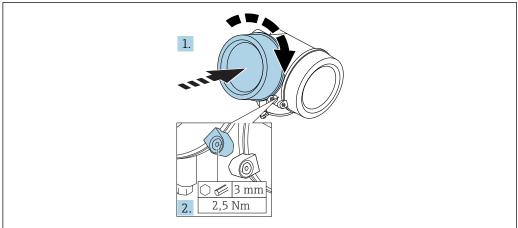

A0021451

- 1. Screw back firmly electronics compartment cover.
- 2. Turning securing clamp 90  $^{\circ}$  clockwise and tighten the clamp with 2.5 Nm using the Allen key (3 mm).

## 6.10 Post-installation check


Is the device undamaged (visual inspection)?		
Does the device conform to the measuring point specifications?  For example:  Process temperature  Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)  Ambient temperature range  Measuring range		
Are the measuring point identification and labeling correct (visual inspection)?		
Is the device adequately protected from precipitation and direct sunlight?		
Are the securing screw and securing clamp tightened securely?		

## 7 Electrical connection

#### 7.1 Connection conditions

#### 7.1.1 Terminal assignment

Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

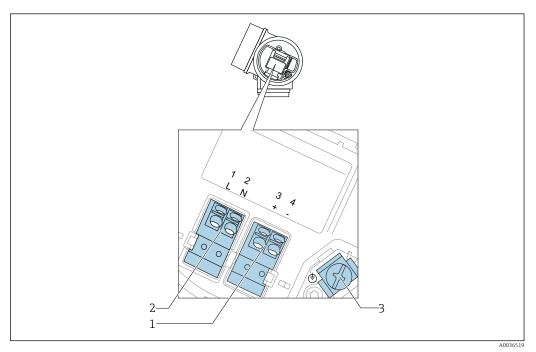

 $\blacksquare$  10 Terminal assignment 4-wire: 4-20 mA HART (90 to 253  $V_{AC}$ )


- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen

#### **A** CAUTION

### To ensure electrical safety:

- ► Do not disconnect the protective connection.
- ▶ Disconnect the supply voltage before disconnecting the protective earth.
- Connect protective earth to the internal ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal.
- In order to ensure electromagnetic compatibility (EMC): Do **not** only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnector for the device (IEC/EN61010).


#### Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

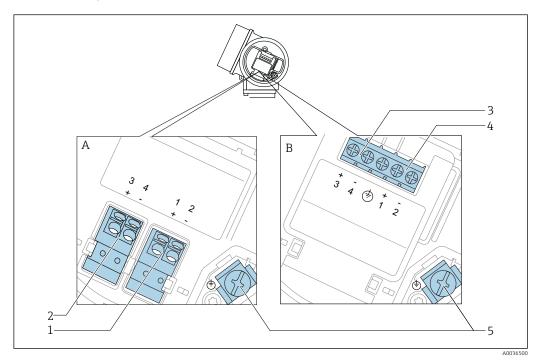

■ 11 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

- A Without integrated overvoltage protection
- *B* With integrated overvoltage protection
- 1 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection
- 2 Connection switch output (Open Collector): terminals 3 and 4, without integrated overvoltage protection
- 3 Connection switch output (Open Collector): terminals 3 and 4, with integrated overvoltage protection
- 4 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection
- 5 Terminal for cable screen

#### Block diagram PROFIBUS PA / FOUNDATION Fieldbus

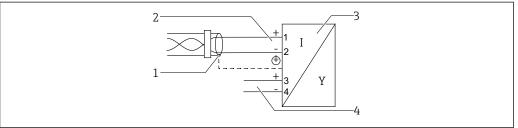


A003653

■ 12 Block diagram PROFIBUS PA / FOUNDATION Fieldbus

- 1 Cable screen; observe cable specifications
- 2 Connection PROFIBUS PA / FOUNDATION Fieldbus
- 3 Measuring device
- 4 Switch output (open collector)

#### Connection examples for the switch output

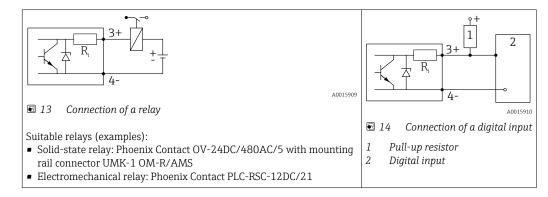

For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of  $< 1000 \Omega$ .

#### 7.1.2 Cable specification

- Devices without integrated overvoltage protection
  Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Devices with integrated overvoltage protection
   Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)
- For ambient temperature  $T_{IJ} \ge 60$  °C (140 °F): use cable for temperature  $T_{IJ} + 20$  K.

#### **FOUNDATION Fieldbus**


Endress+Hauser recommends using twisted, shielded two-wire cables.

For further information on the cable specifications, see Operating Instructions BA00013S "FOUNDATION Fieldbus Overview", FOUNDATION Fieldbus Guideline and IEC 61158-2 (MBP).


## 7.1.3 Device plug connectors

For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector

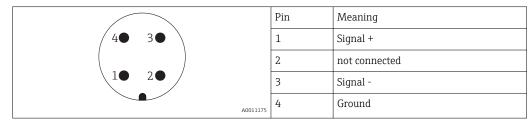

Pin assignment of the 7/8" plug connector

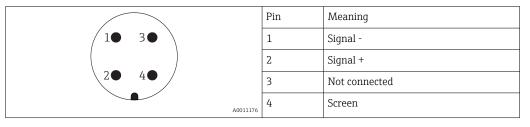

### 7.1.4 Supply voltage

#### PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; Output" 1)	"Approval" 2)	Terminal voltage
E: 2-wire; FOUNDATION Fieldbus, switch output G: 2-wire; PROFIBUS PA, switch output	<ul> <li>Non-Ex</li> <li>Ex nA</li> <li>Ex nA(ia)</li> <li>Ex ic</li> <li>Ex ic(ia)</li> <li>Ex d(ia) / XP</li> <li>Ex ta / DIP</li> <li>CSA GP</li> </ul>	9 to 32 V <sup>3)</sup>
	<ul><li>Ex ia / IS</li><li>Ex ia + Ex d(ia) / IS + XP</li></ul>	9 to 30 V <sup>3)</sup>

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) Input voltages up to 35 V will not spoil the device.

Polarity sensitive	No
FISCO/FNICO compliant according to IEC 60079-27	Yes

### 7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20  $\mu s$ ), an overvoltage protection module has to be installed.

#### Integrated overvoltage protection module

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data		
Resistance per channel	$2 \times 0.5 \Omega$ max.	
Threshold DC voltage 400 to 700 V		
Threshold impulse voltage	< 800 V	
Capacitance at 1 MHz	< 1.5 pF	
Nominal arrest impulse voltage (8/20 µs)	10 kA	

#### External overvoltage protection module

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

## 7.2 Connecting the measuring device

#### **WARNING**


#### Risk of explosion!

- ► Observe applicable national standards.
- ► Comply with the specifications in the Safety Instructions (XA).
- ► Use specified cable glands only.
- ► Check to ensure that the power supply matches the information on the nameplate.
- ► Switch off the power supply before connecting the device.
- ► Connect the potential matching line to the outer ground terminal before applying the power supply.

#### Required tools/accessories:

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


### 7.2.1 Opening connection compartment cover

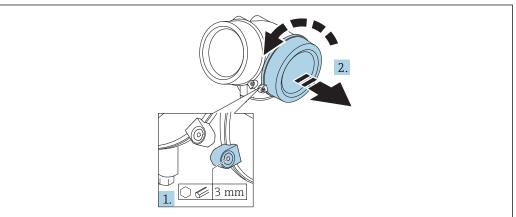

A002149


- 1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90 ° clockwise.
- 2. Afterwards unscrew connection compartment cover and check lid gasket, replace if necessary.

## 7.2.2 Connecting

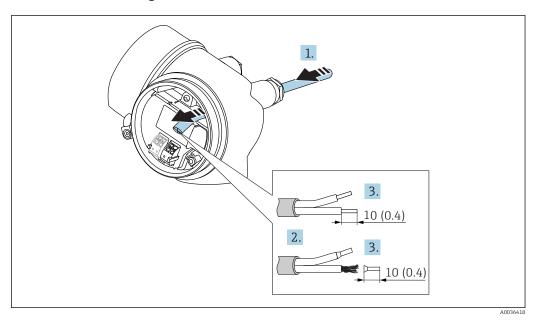

■ 15 Dimensions: mm (in)

- 1. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 2. Remove the cable sheath.
- 3. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
- 4. Firmly tighten the cable glands.
- 5. Connect the cable in accordance with the terminal assignment.

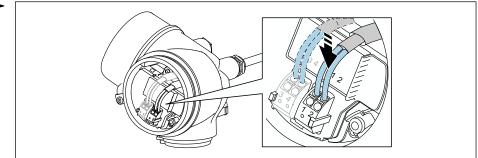


A0034682

6. If using shielded cables: Connect the cable shield to the ground terminal.

## 7.2.3 Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

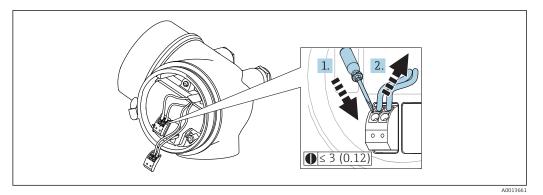


■ 16 Dimensions: mm (in)

To remove cables from the terminal:

- 1. Using a flat-blade screwdriver ≤ 3 mm, press down on the slot between the two terminal holes
- 2. while simultaneously pulling the cable end out of the terminal.

## 7.2.4 Closing connection compartment cover

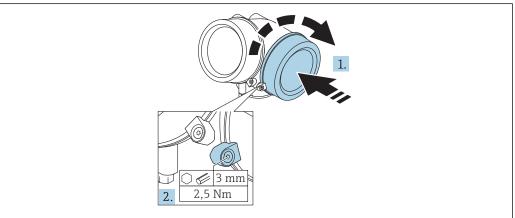

A002149

- 1. Screw back firmly connection compartment cover.
- 2. Turning securing clamp 90 ° counterclockwise and tighten the clamp with 2.5 Nm (1.84 lbf ft) again using the Allen key (3 mm).

### 7.3 Post-connection check

Is the device or cable undamaged (visual check)?	
Do the cables comply with the requirements ?	
Do the cables have adequate strain relief?	
Are all cable glands installed, securely tightened and leak-tight?	
Does the supply voltage match the specifications on the nameplate?	
Is the terminal assignment correct?	

If required: Has protective ground connection been established ?	
If supply voltage is present, is the device ready for operation and do values appear on the display module?	
Are all housing covers installed and securely tightened?	
Is the securing clamp tightened correctly?	


## **8** Operation options

## 8.1 Overview

## 8.1.1 Local operation

Operation with	Pushbuttons	Touch Control
Order code for "Display; Operation"	Option C "SD02"	Option <b>E</b> "SD03"
Display elements	A-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and st	atus variables can be individually configured
	Permitted ambient temperature for the display: The readability of the display may be impaired a range.	
Operating elements	local operation with 3 push buttons $( \boxdot, \boxdot, \sqsubseteq )$	external operation via touch control; 3 optical keys: ⊞, ⊡, 區
	Operating elements also accessible in various hazardous areas	
Additional functionality	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display moton configuration.	odule can be compared to the current device
	Data transfer function The transmitter configuration can be transmitte	d to another device using the display module.

#### Operation with remote display and operating module FHX50 8.1.2

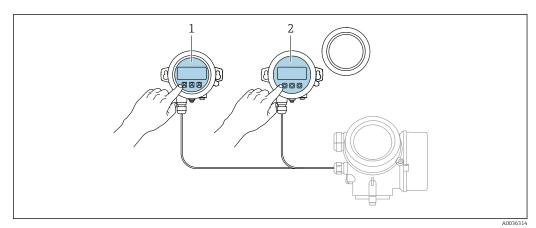


**■** 17 *FHX50* operating options

- Display and operating module SD03, optical keys; can be operated through the glass of the cover
- Display and operating module SD02, push buttons; cover must be removed

#### 8.1.3 Remote operation

#### Via FOUNDATION Fieldbus

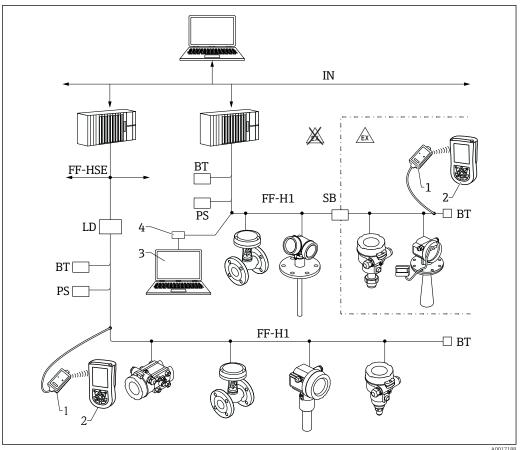


FOUNDATION Fieldbus system architecture with associated components

- FFblue Bluetooth modem 1
- 2 Field Xpert SFX350/SFX370
- 3 DeviceCare/FieldCare
- NI-FF interface card

IN	Industrial network	
FF-HSE	High Speed Ethernet	
FF-H1	OUNDATION Fieldbus-H1	
LD	Linking Device FF-HSE/FF-H1	
PS	Bus Power Supply	
SB	Safety Barrier	
BT	Bus Terminator	

### DeviceCare/FieldCare via service interface (CDI)

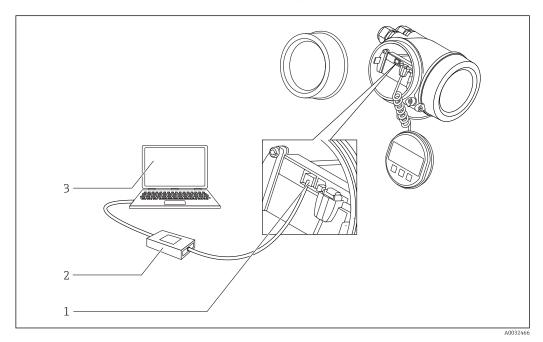

DeviceCare/FieldCare via service interface (CDI)

- Service interface (CDI) of the instrument (= Endress+Hauser Common Data Interface)
- Commubox FXA291
- 2 3  $Computer\ with\ Device Care/Field Care\ operating\ tool$

## 8.2 Structure and function of the operating menu

## 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the on-site display
Commissioning <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
Setup	Parameter 1  Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	Advanced setup	Contains additional submenus and parameters:  • to adapt the device to special measuring conditions.  • to process the measured value (scaling, linearization).  • to configure the signal output.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook 3)	Contains the last 20 messages (which are no longer active).
	Device information	Contains information for identifying the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Is used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
	Heartbeat 4)	Contains all the wizards for the Heartbeat Verification and Heartbeat Monitoring application packages.
Expert 5) Contains all parameters of the device (including those that are already in one of the other menus). This menu is organized	System	Contains all higher-order device parameters that do not concern the measurement or measured value communication.
according to the function blocks of the device.  The parameters of the Expert menu are described in: GP01017F (FOUNDATION Fieldbus)	Sensor	Contains all parameters needed to configure the measurement.
	Output	Contains all parameters needed to configure the switch output (PFS).

Menu	Submenu / parameter	Meaning
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup  $\rightarrow$ Advanced setup → Display"
- Only if operating via an FDT/DTM system only available with local operation 2)
- 3)
- 4)
- only available if operating via DeviceCare or FieldCare
  On entering the "Expert" menu, an access code is always requested. If a customer specific access code has 5) not been defined, "0000" has to be entered.

#### 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access  $\rightarrow \triangleq 52$ .

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	V	V	V	
Maintenance	V	V	V	V

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

#### 8.2.3 Data access - Security

#### Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

#### Define access code via local display

- Navigate to: Setup → Advanced setup → Administration → Define access code
   Define access code
- 2. Define a max. 4-digit numeric code as an access code.
- 3. Repeat the same code in **Confirm access code** parameter.
  - ► The 🖹-symbol appears in front of all write-protected parameters.

#### Define access code via operating tool (e.g. FieldCare)

- 1. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code
- 2. Define a max. 4-digit numeric code as an access code.
  - **▶** Write protection is active.

#### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.

- If write access is activated via access code, it can be also be deactivated only via the access code → 

  53.
  - $\blacksquare$  In the "Description of Device Parameters" documents, each write-protected parameter is identified with the  $\blacksquare$  -symbol.

#### Disabling write protection via access code

If the oxtledge-symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display  $\rightarrow \ensuremath{\,\cong\,} 52$ .

The locking of the write access via local operation can be disabled by entering the device-specific access code.

- 1. After you press E, the input prompt for the access code appears.
- 2. Enter the access code.
  - The \( \mathbb{O}\)-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

#### Deactivation of the write protection via access code

#### Via local display

- Navigate to: Setup → Advanced setup → Administration → Define access code
   Define access code
- 2. Enter **0000**.
- 3. Repeat **0000** in **Confirm access code** parameter.
  - The write protection is deactivated. Parameters can be changed without entering an access code.

#### Via an operating tool (e.g. FieldCare)


- 1. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code
- 2. Enter **0000**.
  - The write protection is deactivated. Parameters can be changed without entering an access code.

#### Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via FOUNDATION Fieldbus

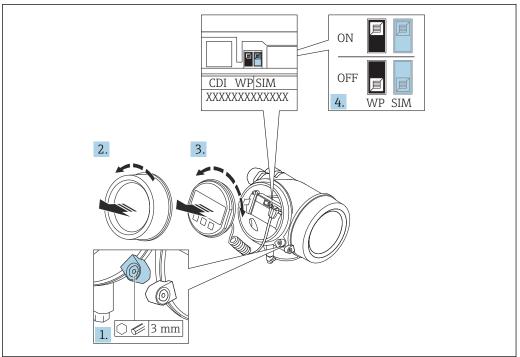


A0021474

- 1. Loosen the securing clamp.
- 2. Unscrew the electronics compartment cover.
- 3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

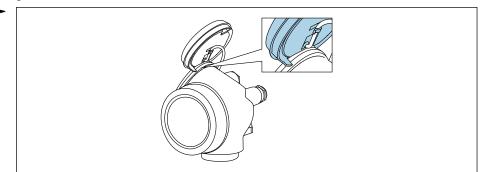

A0036086

- 4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - If the hardware write protection is enabled: The Hardware locked option is displayed in the Locking status parameter. In addition, on the local display the 
     ⑤-symbol appears in front of the parameters in the header of the operational display and in the navigation view.

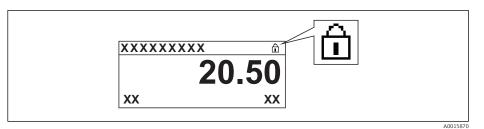

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the 🖻-symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

- 5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
- 6. Reverse the removal procedure to reassemble the transmitter.

#### Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

## For the SD03 display only

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### To activate the keylock manually:

1. The device is in the measured value display.

Press E for at least 2 seconds.

- ► A context menu appears.
- 2. In the context menu select the **Keylock on** option.
  - ► The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.

Press E for at least 2 seconds.

- A context menu appears.
- 2. In the context menu select the **Keylock off** option.
  - ► The keypad lock is switched off.


#### Bluetooth® wireless technology

## Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue app
- Only one point-to-point connection between one sensor and one smartphone or tablet is established

## 8.3 Display and operating module

## 8.3.1 Display appearance

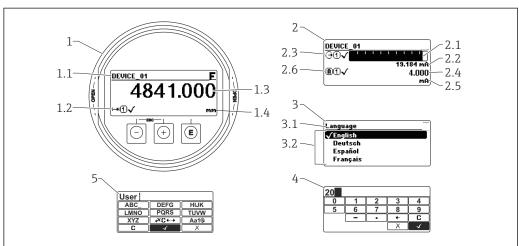

A001263

20 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list;  $\square$  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

#### Display symbols for the submenus

Symbol	Meaning		
A0018367	Display/operation Is displayed:  in the main menu next to the selection "Display/operation"  in the header, if you are in the "Display/operation" menu		
A0018364	Setup Is displayed:  in the main menu next to the selection "Setup"  in the header, if you are in the "Setup" menu		
A0018365	Expert Is displayed:  in the main menu next to the selection "Expert"  in the header, if you are in the "Expert" menu		
A0018366	Diagnostics Is displayed:  in the main menu next to the selection "Diagnostics"  in the header, if you are in the "Diagnostics" menu		

## Status signals

A0032902	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b>	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>N</b>	"Maintenance required" Maintenance is required. The measured value is still valid.

## Display symbols for the locking state

Symbol	Meaning
A0013148	<b>Display parameter</b> Marks display-only parameters which can not be edited.
A0013150	<ul> <li>Device locked</li> <li>■ In front of a parameter name: The device is locked via software and/or hardware.</li> <li>■ In the header of the measured value screen: The device is locked via hardware.</li> </ul>


## Measured value symbols

Symbol		Meaning							
Measured value	es								
[~~]		Level							
	A0032892								
⊢₩	A0032893	Distance							
( <del>)</del>		Current output							
	A0032908								
(A)		Measured current							
	A0032894								
<b>W</b>		Terminal voltage							
	A0032895								
		Temperature of the electronics or the sensor							
	A0032896								
Measuring cha	nnels								
1		Measuring channel 1							
	A0032897								
<b>(2)</b>		Measuring channel 2							
	A0032898								
Status of the m	easured	value							
8	A0018361	Status "Alarm"  The measurment is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.							
	AUU18301								
$\triangle$	A0018360	<b>Status "Warning"</b> The device continues measuring. A diagnostic message is generated.							

## 8.3.2 Operating elements

Key	Meaning						
	Minus key						
_	For menu, submenu Moves the selection bar upwards in a picklist.						
A0018330	or text and numeric editor n the input mask, moves the selection bar to the left (backwards).						
	Plus key						
+	For menu, submenu Moves the selection bar downwards in a picklist.						
A0018329	For text and numeric editor In the input mask, moves the selection bar to the right (forwards).						
	Enter key						
	For measured value display  ■ Pressing the key briefly opens the operating menu.  ■ Pressing the key for 2 s opens the context menu.						
E A0018328	For menu, submenu  ■ Pressing the key briefly Opens the selected menu, submenu or parameter.  ■ Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.						
	For text and numeric editor  ■ Pressing the key briefly  - Opens the selected group.  - Carries out the selected action.  ■ Pressing the key for 2 s confirms the edited parameter value.						
	Escape key combination (press keys simultaneously)						
— + <b>+</b> A0032909	For menu, submenu  ■ Pressing the key briefly  - Exits the current menu level and takes you to the next higher level.  - If help text is open, closes the help text of the parameter.  ■ Pressing the key for 2 s returns you to the measured value display ("home position").						
	For text and numeric editor Closes the text or numeric editor without applying changes.						
-+F	Minus/Enter key combination (press and hold down the keys simultaneously)						
A0032910	Reduces the contrast (brighter setting).						
<b>+</b> + <b>F</b>	Plus/Enter key combination (press and hold down the keys simultaneously)						
A0032911	Increases the contrast (darker setting).						


## 8.3.3 Entering numbers and text

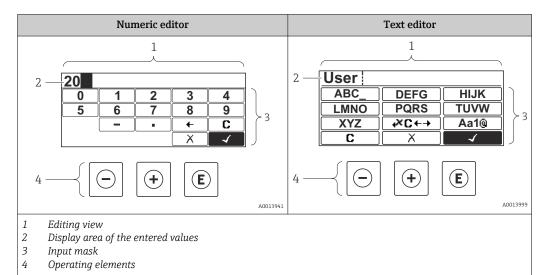

#### Input mask


The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor symbols

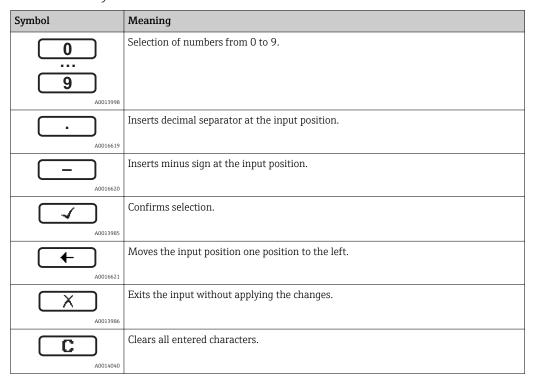

Text editor symbols

Symbol	Meaning
XYZ A0013997	Selection of letters from A to Z
<b>Aa1</b> @	Toggle  Between upper-case and lower-case letters  For entering numbers  For entering special characters

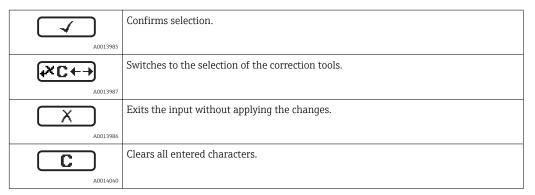

#### Correction symbols under $\nearrow$

Symbol	Meaning
C	Clears all entered characters.
A0032907	
<b>-</b>	Moves the input position one position to the right.
A0018324	
4	Moves the input position one position to the left.
A0018326	
**	Deletes one character immediately to the left of the input position.
A0032906	

### 8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Env.curve
- Keylock on

#### Opening and closing the context menu

The user is in the operational display.

- 1. Press E for 2 s.
  - ► The context menu opens.

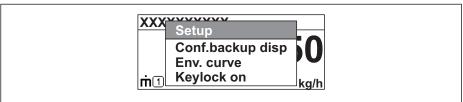

A0033110-E


- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu

- 1. Open the context menu.
- 2. Press ± to navigate to the desired menu.
- 3. Press 🗉 to confirm the selection.
  - └ The selected menu opens.

## 8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

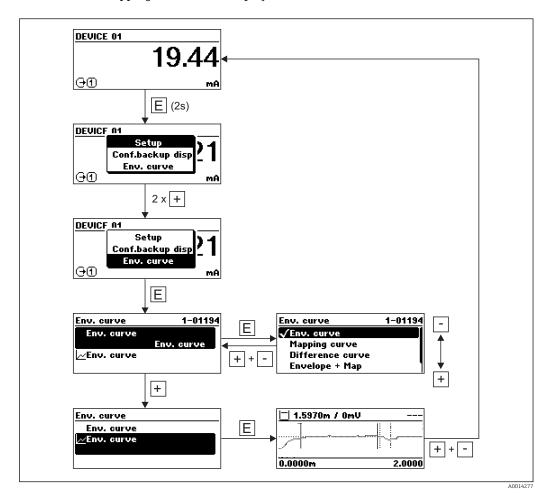

# 9 Integration into a FOUNDATION Fieldbus network

## 9.1 Device Description (DD)

You require the following to configure a device and integrate it into an FF network:

- An FF configuration program
- The Cff file (Common File Format: \*.cff)
- The device description (DD) in one of the following formats
  - Device Description format 4: \*sym, \*ffo
  - Device Description format 5: \*sy5, \*ff5

#### Information on the device-specific DD

Manufacturer ID	0x452B48
Device Type	0x1028
Device Revision	0x01
DD Revision	Information and files at:
CFF Revision	<ul><li>www.endress.com</li><li>www.fieldcommgroup.org</li></ul>

## 9.2 Integration into the FOUNDATION Fieldbus network

- For more in-depth information on integrating the device into the FF system, see the description for the configuration software used.
  - When integrating the field devices into the FF system, make sure you are using the right files. You can read out the required version by means of the Device Revision/ DEV\_REV and DD Revision/ DD\_REV parameters in the Resource Block.


The device is integrated into the FF network as follows:

- 1. Start the FF configuration program.
- 2. Download the Cff and device description files (\*.ffo, \*.sym (for format 4) \*ff5, \*sy5 (for format 5) to the system.
- 3. Configure the interface.
- 4. Configure the device for the measuring task and for the FF system.

## 9.3 Device identification and addressing

FOUNDATION Fieldbus identifies the device using its ID code (Device ID) and automatically assigns it a suitable field address. The identity code cannot be changed. The device appears in the network display once you have started the FF configuration program and integrated the device into the network. The blocks available are displayed under the device name.

If the device description has not yet been loaded, the blocks report "Unknown" or "(UNK)".

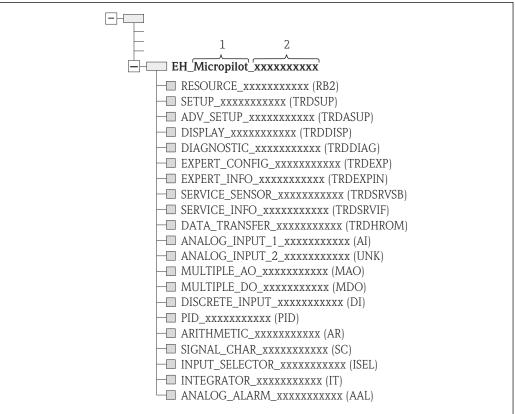

A0020711

■ 21 Typical display in a configuration program after the connection has been established

- 1 Device name
- 2 Serial number

66

### 9.4 Block model

#### 9.4.1 Blocks of the device software

The device has the following blocks:

- Resource Block (device block)
- Transducer Blocks
  - Setup Transducer Block (TRDSUP)
  - Advanced Setup Transducer Block (TRDASUP)
  - Display Transducer Block (TRDDISP)
  - Diagnostic Transducer Block (TRDDIAG)
  - Advanced Diagnostic Transducer Block (TRDADVDIAG)
  - Expert Configuration Transducer Block (TRDEXP)
  - Expert Information Transducer Block (TRDEXPIN)
  - Service Sensor Transducer Block (TRDSRVSB)
  - Service Information Transducer Block (TRDSRVIF)
  - Data Transfer Transducer Block (TRDHROM)
- Function Blocks
  - 2 AI Blocks (AI)
  - 1 Discrete Input Block (DI)
  - 1 Multiple Analog Output Block (MAO)
  - 1 Mutliple Discrete Output Block (MDO)
  - 1 PID Block (PID)
  - 1 Arithmetic Block (AR)
  - 1 Signal Characterizer Block (SC)
  - 1 Input Selector Block (ISEL)
  - 1 Integrator Block (IT)
  - 1 Analog Alarm Block (AAL)

In addition to the pre-instantiated blocks already mentioned, the following blocks can also be instantiated:


- 3 AI Blocks (AI)
- 2 Discrete Input Blocks (DI)
- 1 PID Block (PID)
- 1 Arithemetic Block (AR)
- 1 Signal Characterizer Block (SC)
- 1 Input Selector Block (ISEL)
- 1 Integrator Block (IT)
- 1 Analog Alarm Block (AAL)

Up to 20 blocks can be instantiated in the device altogether, including the blocks already instantiated. For instantiating blocks, see the appropriate Operating Instructions of the configuration program used.



The guideline provides an overview of the standard function blocks that are described in FOUNDATION Fieldbus Specifications FF 890 - 894. It is designed to help operators use the blocks implemented in the Endress+Hauser field devices.

## 9.4.2 Block configuration when device is delivered

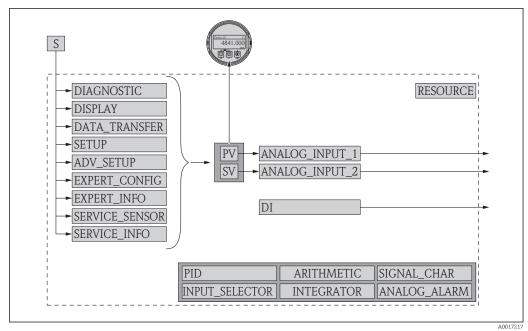

22 Block configuration when device is delivered

S Sensor

PV Primary value: Level linearized

SV Secondary value: Distance

# 9.5 Assignment of the measured values (CHANNEL) in an AI Block

The input value of an Analog Input Block is defined by the **CHANNEL** parameter.

Channel	Measured value			
0	Uninitialized			
211	Terminal voltage			
773	Analog output advance diagnostics 1			
774	nalog output advance diagnostics 2			
32786	bsolute echo amplitude			
32856	Distance			
32885	Elektronic temperature			
32949	Level linearized			
33044	Relative echo amplitude			

## 9.6 Index tables of Endress+Hauser parameters

The following tables list the manufacturer-specific device parameters for the Resource Blocks. For the FOUNDATION Fieldbus parameters, see the document BA062S "Guidline - FOUNDATION Fieldbus Function Blocks", which can be downloaded from www.endress.com.

## 9.6.1 Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
operating_mode	Operating mode	15	ENUM16	2	Static	Maintenance	OOS
distance_unit	Distance unit	16	ENUM16	2	Static	Maintenance	OOS
tank_type	Tanktyp	17	ENUM16	2	Static	Maintenance	OOS
tube_diameter	Tube diameter	18	FLOAT	4	Static	Maintenance	OOS
bin_type	Bin type	19	ENUM16	2	Static	Maintenance	OOS
solid_filling_speed_range	Max. filling speed solid	20	ENUM16	2	Static	Maintenance	OOS
solid_draining_speed_rang e	Max. draining speed solid	21	ENUM16	2	Static	Maintenance	OOS
medium_group	Medium group	22	ENUM16	2	Static	Maintenance	OOS
empty_calibration	Empty calibration	23	FLOAT	4	Static	Maintenance	OOS
full_calibration	Full calibration	24	FLOAT	4	Static	Maintenance	OOS
level_unit_ro	Level unit	25	ENUM16	2	Static	Maintenance	OOS
PrimLevOut	Primary Value	26	Standard	5	Dynamic		
output_unit_after_lineariza tion	Unit after linearization	27	ENUM16	2	Static	Maintenance	
filtered_distance	Distance	28	Standard	5	Dynamic		
signal_quality	Signalqualität	29	ENUM16	2	Dynamic		
confirm_distance	Confirm distance	30	ENUM16	2	Static	Maintenance	OOS
mapping_start_point	Mapping start point	31	FLOAT	4	Static	Maintenance	OOS
mapping_end_point	Mapping end point	32	FLOAT	4	Static	Maintenance	OOS
end_map_ampl	End map amplitude	33	FLOAT	4	Static	Maintenance	OOS
map_end_x	Present mapping	34	FLOAT	4	Dynamic		
map_end_y	Map end Y	35	FLOAT	4	Dynamic		
record_map	Record map	36	ENUM16	2	Static	Maintenance	OOS
prepare_recording_map	Prepare recording map	37	ENUM16	2	Static	Development	OOS
end_of_mapping	End of mapping	38	ENUM16	2	Static	Maintenance	OOS
empty_scale		39	FLOAT	4	Static	Maintenance	OOS
full_scale		40	FLOAT	4	Static	Maintenance	OOS
empty_distance	Tank/silo height	41	FLOAT	4	Static	Maintenance	OOS
sw_option_active_overview	Software option overview	42	BIT_ENUM32	4			
sensor_type_ro	Sensor type	43	ENUM16	2	Static	Service	OOS
medium_type	Medium type	44	ENUM16	2	Static	Service	OOS
decimal_places_menu	Decimal places menu	45	ENUM16	2	Static	Maintenance	AUTO
evaluation_mode_ro	Evaluation mode	46	ENUM16	2	Dynamic	Maintenance	OOS
access_status_tooling	Access status tooling	47	ENUM16	2	Dynamic		
locking_status	Locking status	48	BIT_ENUM16	2	Dynamic		

## 9.6.2 Advanced Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
medium_type	Medium type	15	ENUM16	2	Static	Service	OOS
medium_property	Medium property	16	ENUM16	2	Static	Maintenance	OOS

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
calculated_dc_value_ee	Calculated DC value	17	FLOAT	4	Dynamic	Production	AUTO
liquid_filling_speed_range	Max. filling speed liquid	18	ENUM16	2	Static	Maintenance	OOS
liquid_draining_speed_ran ge	Max. draining speed liquid	19	ENUM16	2	Static	Maintenance	OOS
advanced_process_conditio	Advanced process conditions	20	ENUM16	2	Static	Maintenance	OOS
level_unit	Level unit	21	ENUM16	2	Static	Maintenance	OOS
blocking_distance	Blocking distance	22	FLOAT	4	Static	Maintenance	OOS
level_correction	Level correction	23	FLOAT	4	Static	Maintenance	OOS
empry_distance	Tank/silo height	24	FLOAT	4	Static	Maintenance	OOS
linearization_type	Linearization type	25	ENUM16	2	Static	Maintenance	OOS
unit_after_linearization	Unit after linearization	26	ENUM16	2	Static	Maintenance	OOS
free_text	Free text	27	STRING		Static	Maintenance	AUTO
maximum_value	Maximum value	28	FLOAT	4	Static	Maintenance	OOS
level_linearized_ds	Level linearized	29	Standard	5	Dynamic		
diameter	Diameter	30	FLOAT	4	Static	Maintenance	OOS
intermediate_height	Intermediate height	31	FLOAT	4	Static	Maintenance	OOS
table_number	Table number	32	UINT8	1	Static	Maintenance	OOS
table_mode	Table mode	33	ENUM16	2	Static	Maintenance	OOS
activate_table	Tabelle aktivieren	34	ENUM16	2	Static	Maintenance	OOS
custom_table_sel_level	Level	67	FLOAT	4	Static	Maintenance	OOS
custom_table_sel_value	Customer value	68	FLOAT	4	Static	Maintenance	OOS
level_semiautomatic	Level	69	FLOAT	4	Dynamic		
output_echo_lost	Output echo lost	70	ENUM16	2	Static	Maintenance	OOS
value_echo_lost	Value echo lost	71	FLOAT	4	Static	Maintenance	OOS
ramp_at_echo_lost	Ramp at echo lost	72	FLOAT	4	Static	Maintenance	OOS
switch_output_function	Switch output function	73	ENUM16	2	Static	Maintenance	OOS
assign_status	Assign status	74	ENUM16	2	Static	Maintenance	OOS
assign_limit	Assign limit	75	ENUM16	2	Static	Maintenance	OOS
assign_diag_behavior	Assign diagnostic behavior	76	ENUM16	2	Static	Maintenance	OOS
switch_on_value	Switch-on value	77	FLOAT	4	Static	Maintenance	OOS
switch_on_delay	Switch-on delay	78	FLOAT	4	Static	Maintenance	OOS
switch_off_value	Switch-off value	79	FLOAT	4	Static	Maintenance	OOS
switch_off_delay	Switch-off delay	80	FLOAT	4	Static	Maintenance	OOS
switch_output_failure_mod e	Failure mode	81	ENUM16	2	Static	Maintenance	OOS
switch_status	Switch status	82	ENUM16	2	Dynamic		
invert_output_signal	Invert output signal	83	ENUM16	2	Static	Maintenance	OOS

## 9.6.3 Display Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
locking_status_display	Locking status	15	ENUM16	2	Dynamic		
access_status_display	Access status display	16	ENUM16	2	Dynamic		

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
access_code_for_display	Enter access code	17	UINT16	2	Static	Operator	AUTO
define_access_code	Freigabecode definieren	18	UINT16	2	Static	Maintenance	AUTO
language	Language	19	ENUM16	2	Static	Operator	AUTO
foramt_display	Format display	20	ENUM16	2	Static	Operator	AUTO
value_1_display	Value 1 display	21	ENUM16	2	Static	Maintenance	AUTO
decimal_places_1	Decimal places 1	22	ENUM16	2	Static	Maintenance	AUTO
value_2_display	Value 2 display	23	ENUM16	2	Static	Maintenance	AUTO
decimal_places_2	Decimal places 2	24	ENUM16	2	Static	Maintenance	AUTO
value_3_display	Value 3 display	25	ENUM16	2	Static	Maintenance	AUTO
decimal_places_3	Decimal places 3	26	ENUM16	2	Static	Maintenance	AUTO
value_4_display	Value 4 display	27	ENUM16	2	Static	Maintenance	AUTO
decimal_places_4	Decimal places 4	28	ENUM16	2	Static	Maintenance	AUTO
display_interval	Display interval	29	FLOAT	4	Static	Operator	AUTO
display_damping	Display damping	30	FLOAT	4	Static	Maintenance	AUTO
header	Header	31	ENUM16	2	Static	Maintenance	AUTO
header_text	Header text	32	STRING	12	Static	Maintenance	AUTO
display_separator	Separator	33	ENUM16	2	Static	Maintenance	AUTO
number_format	Zahlenformat	34	ENUM16	2	Static	Maintenance	AUTO
decimal_places_menu	Decimal places menu	35	ENUM16	2	Static	Maintenance	AUTO
contrast_display	Contrast display	36	FLOAT	4	Static	Operator	AUTO
backlight	Backlight	37	ENUM16	2	Static	Operator	AUTO
operating_time	Operating time	38	STRING	14	Dynamic		
last_backup	Last backup	39	STRING	14	Static	Production	AUTO
configuration_management	Configuration management	40	ENUM16	2	Static	Maintenance	AUTO
comparison_result	Comparison result	41	ENUM16	2	Static	Production	AUTO

## 9.6.4 Diagnostic Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
actual diagnostics	Actual diagnostics	15	UINT32	4	Dynamic		
present_timestamp	Timestamp	16	STRING	14	Dynamic		
previous diagnostics	Letzte Diagnose	17	UINT32	4	Dynamic		
previous_timestamp	Timestamp	18	STRING	14	Dynamic		
operating_time_from_restart	Operating time from restart	19	STRING	14	Dynamic		
operating_time	Operating time	20	STRING	14	Dynamic		
diagnostics_1	Diagnostics 1	21	UINT32	4	Dynamic		
diag_1_timestamp	Timestamp	22	STRING	14	Dynamic		
diagnostics_2	Diagnostics 2	23	UINT32	4	Dynamic		
diag_2_timestamp	Timestamp	24	STRING	14	Dynamic		
diagnostics_3	Diagnostics 3	25	UINT32	4	Dynamic		
diag_3_timestamp	Timestamp	26	STRING	14	Dynamic		
diagnostics_4	Diagnostics 4	27	UINT32	4	Dynamic		

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
diag_4_timestamp	Timestamp	28	STRING	14	Dynamic		
diagnostics_5	Diagnostics 5	29	UINT32	4 Dynamic			
diag_5_timestamp	Timestamp	30	STRING	14	Dynamic		
filter_options	Filter options	31	ENUM8	1	Static	Maintenance	AUTO
clear_event_list	Clear event list	32	ENUM16	2	Static	Service	AUTO
simulation_distance_ro	Simulation distance	33	ENUM16	2	Static	Development	AUTO
value_of_simulated_distan ce	Vaue of simulated distance	34	FLOAT	4	Static	Maintenance	AUTO
assign_sim_meas	Assign measurement variable	35	ENUM16	4	Static	Maintenance	OOS
sim_value_process_variabl e	Value process variable	36	FLOAT	4	Static	Maintenance	OOS
switch_output_simulation	Switch output simulation	37	ENUM16	2	Static	Maintenance	OOS
sim_switch_status	Switch status	38	ENUM16	2	Static	Maintenance	AUTO
simulation_device_alarm	Simulation device alarm	39	ENUM16	2	Static	Maintenance	OOS
simulation_diagnostic_eve nt	Simulation diagnostic event	40	UINT32	4	Static	Service	OOS
start_device_check	Start device check	41	ENUM16	2	Static	Maintenance	AUTO
result_device_check	Result device check	42	ENUM16	2 Static		Development	AUTO
last_check_time	Last check time	43	STRING	14	Dynamic		
level_signal	Level signal	44	ENUM16	2	Static	Development	AUTO
device_check_timestamp	Timestamp	45	UINT32	14	Static	Development	AUTO
assign_channel_1	Assign channel 1	54	ENUM16	2	Static	Maintenance	AUTO
assign_channel_2	Assign channel 2	55	ENUM16	2	Static	Maintenance	AUTO
assign_channel_3	Assign channel 3	56	ENUM16	2	Static	Maintenance	AUTO
assign_channel_4	Assign channel 4	57	ENUM16	2	Static	Maintenance	AUTO
logging_interval	Logging interval	58	FLOAT	4	Static	Maintenance	AUTO
clear_logging_data	Clear logging data	59	ENUM16	2	Static	Maintenance	AUTO
alarm_delay	Alarm delay	60	FLOAT	4	Static	Maintenance	AUTO

## 9.6.5 Expert Configuration Transducer Block

The parameters of the **Expert Configuration Transducer Block** are described in GP01017F: "Micropilot FMR5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
locking status	Locking status	15	ENUM16	2			
access_status_tooling	Access status tooling	16	ENUM16	2			
enter_access_code	Enter access code	17	UINT16	2	Static	Operator	AUTO
distance_unit_ro	Distance unit	18	ENUM16	2	Static	Maintenance	OOS
operating_mode_ro	Operating mode	19	ENUM16	2	Static	Maintenance	OOS
free_field_special	Free field special	20	ENUM16	2	Static	Maintenance	OOS
sensor_type	Sensor type	21	ENUM16	2	Static	Service	OOS
distance_offset	Distance offset	22	FLOAT	4	Static	Maintenance	OOS
level_unit_ro	Level unit	23	ENUM16	2	Static	Maintenance	OOS

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
level_limit_mode	Level limit mode	24	ENUM16	2	Static	Maintenance	OOS
level_high_limit	High limit	25	FLOAT	4	Static	Maintenance	OOS
level_low_limit	Low limit	26	FLOAT	4	Static	Maintenance	OOS
output_mode	Output mode	27	ENUM16	2	Static	Maintenance	OOS
filter_dead_time	Dead time	28	FLOAT	4	Static	Maintenance	OOS
integration_time	Integration time	29	FLOT	4	Static	Maintenance	OOS
velocity_filter	Geschwindigkeitfilter	30	ENUM16	2	Static	Service	OOS
gpc_mode	GPC mode	31	ENUM16	2	Static	Maintenance	OOS
external_pressure_selector	External pressure selector	32	ENUM16	2	Static	Maintenance	oos
gas_phase_compens_factor	Gas phase compensation factor	33	FLOAT	4	Static	Maintenance	00S
reference_distance	Reference distance	34	FLOAT	4	Static	Maintenance	00S
present_reference_distance	Present reference distance	35	FLOAT	4	Dynamic		
reference_echo_threshold	Reference echo threshold	36	FLOAT	4	Static	Maintenance	OOS
const_gpc_factor	Const. GPC factor	37	FLOAT	4	Static	Maintenance	OOS
external_pressure	External pressure	38	FLOAT	4	Static	Development	AUTO
start_self_check	Start self check	39	ENUM16	2	Static	Maintenance	AUTO
result_self_check	Result self check	40	ENUM16	2	Static	Development	AUTO
delay_time_echo_lost	Delay time echo lost	41	FLOAT	4	Static	Maintenance	OOS
safety_distance	Sicherheitsdistanz	42	FLOAT	4	Static	Maintenance	OOS
in_safety_distance	In safety distance	43	ENUM16	2	Static	Maintenance	OOS
acknowledge_alarm	Acknowledge alarm	44	ENUM16	2	Static	Maintenance	AUTO
evaluation_mode	Evaluation mode	45	ENUM16	2	Static	Maintenance	oos
history_reset	History reset	46	ENUM16	2	Static	Maintenance	oos
history_learning_control	History learning control	47	ENUM16	2	Static	Maintenance	00S
history_learning	History learning	48	ENUM16	2	Static	Maintenance	00S
level_external_input_1	Level external input 1	49	ENUM16	2	Static	Maintenance	00S
function_input_1_level	Function input 1 level	50	ENUM16	2	Static	Maintenance	oos
fixed_value_input_1	Fixed value input 1	51	FLOAT	4	Static	Maintenance	00S
binary_input_1_level_control	Binary input 1 level control	52	ENUM16	2	Static	Maintenance	00S
level_external_input_2	Level external input 2	53	ENUM16	2	Static	Maintenance	OOS
function_input_2_level	Function input 2 level	54	ENUM16	2	Static	Maintenance	OOS
fixed_value_input_2	Fixed value input 2	55	FLOAT	4	Static	Maintenance	OOS
binary_input_2_level_control	Binary input 2 level control	56	ENUM16	2	Static	Maintenance	OOS
control_measurement	Control measurement	57	ENUM16	2	Static	Maintenance	OOS
measurement_on	Measurement	58	ENUM16	2	Static	Maintenance	OOS
sensor_module	Sensor module	59	ENUM16	2	Static	Development	AUTO
sensor_module_ee	Sensor module	60	ENUM16	2	Static	Production	OOS
decimal_places_menu_ro	Decimal places menu	61	ENUM16	2	Static	Maintenance	AUTO
sw_option_active_overview	Software option active overview	62	BIT_ENUM32	4			
fieldbus_type	Feldbustyp	63	ENUM8	1			
medium_type_ro	Medium type	64	ENUM16	2	Static	Service	OOS

#### **Expert Information Transducer Block** 9.6.6

The parameters of the **Expert Information Transducer Block** are described in GP01017F: "Micropilot FMR5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
abs_echo_ampl	Absolute echo amplitude	15	Standard	5			
rel_echo_ampl	Relative echo amplitude	16	Standard	5	Dynamic		
rel_eop_ampl	Tank bottom echo amplitude	17	Standard	5	Dynamic		
noise_signal_val	Noise of signal	18	FLOAT	4	Dynamic		
electronic_temperature	Electronic temperature	19	Standard	5	Dynamic		
found_echoes	Found echoes	20	ENUM16	2	Dynamic		
temperature_unit	Temperature unit	21	ENUM16	2	Static	Maintenance	OOS
max_electr_temp	Max. electronic temperature	22	FLOAT	4	Static	Development	AUTO
application_parameter	Application parameter	23	ENUM16	2	Dynamic		
time_max_electr_temp	Time max. electronics temperature	24	STRING	14	Dynamic		
measurement_frequency	Measurement frequency	25	FLOAT	4	Dynamic		
min_electr_temp	Min. electronics temperature	26	FLOAT	4	Static	Development	AUTO
time_min_electr_temp	Time min. electronics temperaturer	27	STRING	14	Dynamic		
reset_min_max_temp	Reset min/max. Temp.	28	ENUM16	2	Static	Service	AUTO
used_calculation	Used calculation	29	ENUM16	2	Dynamic		
tank_trace_state	Status Tanktrace	30	ENUM16	2	Dynamic		
max_draining_speed	Max. draining speed	31	FLOAT	4	Static	Development	AUTO
max_filling_speed	Max. filling speed	32	FLOAT	4	Static	Entwicklung	AUTO
time_max_level	Time max. level	33	STRING	14	Dynamic		
max_level_value	Max. level value	34	FLOAT	4	Static	Development	AUTO
time_min_level	Time min. level	35	STRING	14	Dynamic		
min_level_value	Min. level	36	FLOAT	4	Static	Development	AUTO
reset_min_max	Reset min./max.	37	ENUM16	2	Static	Service	AUTO
appl_param_changed_flags	Application parameter	38	UINT16	2	Static	Production	AUTO
terminal_voltage_ds	Terminal voltage	39	Standard	5	Dynamic		
area_of_incoupling	Area of incoupling	40	Standard	5	Dynamic		
linearization_type_ro	Linearization type	41	ENUM16	2	Static	Maintenance	oos
operating_mode	Operating mode	42	ENUM16	2	Static	Maintenance	OOS
decimal_places_menu_ro	Decimal places menu	43	ENUM16	2	Static	Maintenance	AUTO
activat_sw_option	Activate SW option	44	UINT32	4	Static	Maintenance	AUTO
sw_option_active_overview	Sw option active overview	45	BIT_ENUM32	4	Dynamic		
debug_status		107	UINT8	1	Dynamic	х	AUTO

#### Service Sensor Transducer Block 9.6.7

The parameters of the **Service Sensor** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

#### 9.6.8 **Service Information Transducer Block**

The parameters of the **Service Information** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

#### 9.6.9 **Advanced Diagnostics Transducer Block**

The parameters of the **Advanced Diagnostics Transducer Block** are described in GP01017F: "Micropilot FMR5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
assign_diag_signal_ad1	Assign diagnostic signal 1	15	ENUM16	2	Static	Maintenance	OOS
link_ad1_to	Link AD1 to	16	ENUM16	2	Static	Maintenance	OOS
linking_logic_ad1	Linking logic AD1	17	ENUM16	2	Static	Maintenance	OOS
sample_time_ad1	Sample time 1	18	UINT16	2	Static	Maintenance	OOS
calc_type_ad1	Calculation type 1	19	ENUM16	2	Static	Maintenance	OOS
check_mode_ad1	Check mode 1	20	ENUM16	2	Static	Maintenance	OOS
calculation_unit_ad1	Calculation unit 1	21	ENUM16	2	Static	Operator	OOS
upper_limit_ad1	Upper limit 1	22	FLOAT	4	Static	Maintenance	OOS
lower_limit_ad1	Lower limit 1	23	FLOAT	4	Static	Maintenance	OOS
hysteresis_ad1	Hysteresis 1	24	FLOAT	4	Static	Maintenance	OOS
max_value_ad1	Maximum value 1	25	FLOAT	4	Dynamic		
min_value_ad1	Minimum value 1	26	FLOAT	4	Dynamic		
reset_min_max_ad1	Reset min./max. 1	27	ENUM16	2	Static	Maintenance	AUTO
assign_status_sig_ad1	Assign status signal to AD event 1	28	ENUM16	2	Static	Maintenance	OOS
assign_event_behaviour_ad1	Assign event behaviourn 1	29	ENUM16	2	Static	Maintenance	OOS
alarm_delay_ad1	Alarm delay	30	FLOAT	4	Static	Maintenance	OOS
assign_diag_ signal_ad2	Assign diagnostic signal 2	31	ENUM16	2	Static	Maintenance	OOS
link_ad2_to	Link AD2 to	32	ENUM16	2	Static	Maintenance	OOS
linking_logic_ad2	Linking logic AD2	33	ENUM16	2	Static	Maintenance	OOS
sample_time_ad2	Sample time 2	34	UINT16	2	Static	Maintenance	OOS
calc_type_ad2	Calculation type 2	35	ENUM16	2	Static	Maintenance	OOS
check_mode_ad2	Check mode 2	36	ENUM16	2	Static	Maintenance	OOS
calculation_unit_ad2	Calculation unit 2	37	ENUM16	2	Static	Operator	OOS
upper_limit_ad2	Upper limit 2	38	FLOAT	4	Static	Maintenance	OOS
lower_limit_ad2	Lower limit 2	39	FLOAT	4	Static	Maintenance	OOS
hysteresis_ad2	Hysteresis 2	40	FLOAT	4	Static	Maintenance	OOS
max_value_ad2	Maximum value 2	41	FLOAT	4	Dynamic		
min_value_ad2	Minimum value 2	42	FLOAT	4	Dynamic		
reset_min_max_ad2	Reset min./max. 2	43	ENUM16	2	Static	Maintenance	AUTO
assign_status_sig_ad2	Assign status signal to AD event 2	44	ENUM16	2	Static	Maintenance	OOS
assign_event_behaviour_ad2	Assign event behaviour 2	45	ENUM16	2	Static	Maintenance	OOS
alarm_delay_ad2	Alarm delay 2	46	FLOAT	4	Static	Maintenance	OOS

## 9.7 Methods

The FOUNDATION Fieldbus Specification includes the use of methods to make device operation easier. A method is a sequence of interactive steps to be carried out in the specified order so as to configure certain device functions.

The following methods are available for the device:

### Restart

This method is located in the Resource Block and directly prompts the setting of the **Device reset** parameter. This resets the device configuration to a defined state.

### ■ ENP Restart

This method is located in the Resource Block and directly prompts the setting of the parameters of the Electronic Name Plate (ENP).

### Setup

This method is located in the SETUP Transducer Block and allows to set the most important parameters in this block for device configuration (measuring units, type of tank or vessel, type of medium, empty and full calibration).

### Linearization

This method is located in the ADV\_SETUP Transducer Block and allows to manage the linearization table by which the measured value is converted into volume, mass or flow.


### Self Check

This method is located in the EXPERT\_CONFIG Transducer Block and prompts the device self check parameters.

# 10 Commissioning via wizard

A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare  $^{5)}$ .

- 1. Connect the device to FieldCare or DeviceCare  $\rightarrow \triangleq 48$ .
- 2. Open the device in FieldCare or DeviceCare.
  - └ The dashboard (home page) of the device appears:

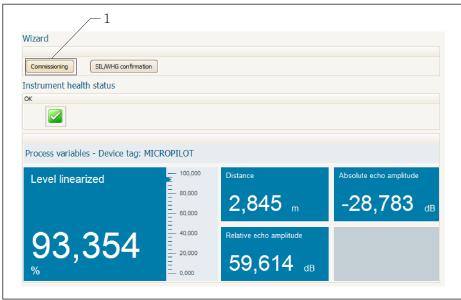

A002772

- 1 "Commissioning" button calls up the wizard.
- 3. Click on "Commissioning" to call up the wizard.
- 4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
- 5. Click "Next" to switch to the next page.
- 6. After finishing the last page, click "End of sequence" to close the wizard.
- If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

<sup>5)</sup> DeviceCare is available for download at www.software-products.endress.com. The download requires a registration in the Endress+Hauser software portal.

# 11 Commissioning via operating menu


## 11.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check"  $\rightarrow$  🖺 37
- Checklist "Post-connection check" → 🖺 45


## 11.2 Setting the operating language

Factory setting: English or ordered local language

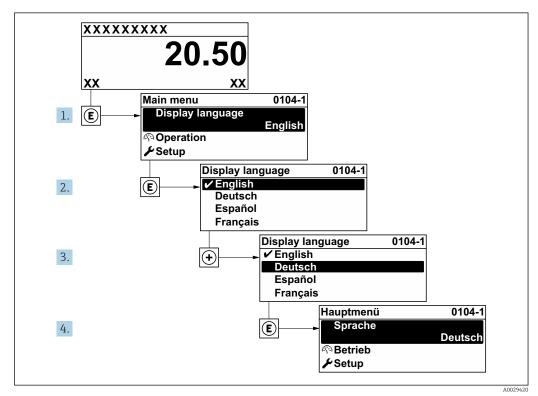

■ 23 Using the example of the local display

#### 11.3 Configuration of a level measurement

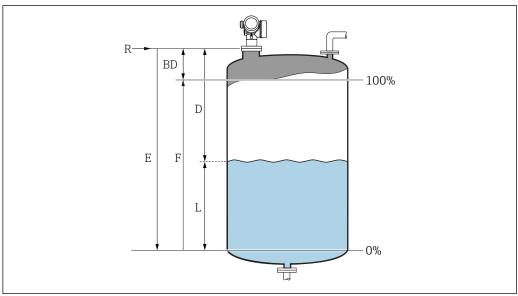

Configuration parameters for level measurements in liquids

- R Reference point of the measurement
- D Distance
- I. Level
- Empty calibration (= zero)
- Full calibration (= span)
- 1. Navigate to: Setup → Device tag
  - ► Enter device tag.
- 2. Navigate to: Setup → Distance unit
  - ► Select distance unit.
- 3. Navigate to: Setup → Tank type
  - ► Select tank type.
- 4. For **Tank type** parameter = Bypass / pipe:

Navigate to: Setup → Tube diameter

- ► Enter the diameter of the stilling well or bypass.
- 5. Navigate to: Setup → Medium group
  - Specify medium group: (Water based (DC >= 4) or Others)
- 6. Navigate to: Setup → Empty calibration
  - ► Enter empty distance E (Distance from reference point R to the 0% level) 6).
- 7. Navigate to: Setup → Full calibration
  - ► Enter full distance F (Distance from the 0% to the 100% level).
- 8. Navigate to: Setup  $\rightarrow$  Level
  - ► Indicates the measrued level L.
- 9. Navigate to: Setup → Distance
  - Indicates the measured distance from the reference point R to the level L.
- 10. Navigate to: Setup → Signal quality
  - └ Indicates the quality of the evaluated level echo.

<sup>6)</sup> If, for example, the measuring range covers only an upper part of the tank (E << tank height), it is mandatory to enter the acutal tank height into the "Setup  $\rightarrow$  Advanced Setup  $\rightarrow$  Level  $\rightarrow$  Tank/silo height" parameter.

- 11. When operating via local display:
  - Navigate to: Setup → Mapping → Confirm distance
  - Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
- 12. When operating via operating tool:
  - Navigate to: Setup → Confirm distance
  - Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
- 13. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Level unit
  - Select level unit: %, m, mm, ft, in (Factory setting: %)
- The response time of the device is preset by the **Tank type** parameter ( $\rightarrow \implies 132$ ). More detailed settings are possible in the **Advanced setup** submenu.

## 11.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

### Navigation in the menu

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Envelope diagnostics  $\rightarrow$  Save reference curve

## Meaning of the options

- No
  - No action
- Yes

The current envelope curve is saved as reference curve.

- In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.
- The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare.



■ 25 The "Load Reference Curve" function

# 11.5 Configuration of the on-site display

# 11.5.1 Factory settings of the on-site display

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

# 11.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following submenu: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display

## 11.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

### Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

### Meaning of the options

### Cancel

No action is executed and the user exits the parameter.

### Execute backup

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

### Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

### Duplicate

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

### Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

### Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
- If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset → 178 will not restore the original status..

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

# 11.7 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

# 12 Commissioning (block-based operation)

## 12.1 Function check

Carry out a post-installation and a post-connection check as per the checklist before commissioning the device:

- "Post-installation check" checklist → 🖺 37
- "Post-connection check" checklist → 🖺 45

## 12.2 Block configuration

## 12.2.1 Preparatory steps

- 1. Switch on the device.
- 2. Note the DEVICE\_ID  $\rightarrow$   $\triangleq$  65.
- 3. Open the FOUNDATION Fieldbus configuration program.
- 4. Load Cff and device description files into the host system or the configuration program. Make sure you are using the right system files.
- 5. Identify the device using the **DEVICE\_ID** (see Point 2). Assign the desired tag name to the device by means of the **Pd-tag/FF\_PD\_TAG** parameter.

## 12.2.2 Configuring the Resource Block

- 1. Open the Resource Block.
- 2. If necessary, disable the lock for device operation.
- 3. If necessary, change the block name. Factory setting: RS-xxxxxxxxxx (RB2)
- If necessary, assign a description to the block by means of the Tag Description/ TAG\_DESC parameter.
- 5. If necessary, change other parameters as per the requirements.

## 12.2.3 Configuring the Transducer Blocks

The measurement and the display module are configured using the Transducer Blocks. The general procedure is the same for all Transducer Blocks:

- 1. If necessary, change the block name.
- 2. Set the block mode to OOS by means of the **Block Mode/MODE\_BLK** parameter, **TARGET** element.
- 3. Configure the level measurement  $\rightarrow \triangleq 88$ .
- 4. Set the block mode to **Auto** by means of the **Block Mode/MODE\_BLK** parameter, **TARGET** element.
- The block mode must be set to **Auto** for the measuring device to function correctly.

## 12.2.4 Configuring the Analog Input Blocks

The device has 2 permanently instanced Analog Input Blocks that can be assigned as required to the various process variables. If required, up to 5 Analog Input Blocks can be instanced through the FOUNDATION Fieldbus configuration tool.

Default settings				
Analog Input Block CHANNEL				
AI 1	32949: Level linearized			
AI 2 32856: Distance				


- 1. If necessary, change the block name.
- Set the block mode to OOS by means of the Block Mode/MODE\_BLK parameter, TARGET element.
- 3. Use the **Channel/CHANNEL** parameter to select the process variable which should be used as the input value for the Analog Input Block.
- 4. Use the **Transducer Scale/XD\_SCALE** parameter to select the desired unit and the block input range for the process variable → 🗎 86. Make sure that the unit selected suits the process variable selected. If the process variable does not suit the unit, the **Block Error/BLOCK\_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
- 5. Use the Linearization Type/L\_TYPE parameter to select the type of linearization for the input variable (factory setting: Direct). Make sure that the settings for the Transducer Scale/XD\_SCALE and Output Scale/ OUT\_SCALE parameters are the same for the Direct linearization type. If the values and units do not match, the Block Error/BLOCK\_ERR parameter reports Block Configuration Error and the block mode cannot be set to Auto.
- 6. Enter the alarm and critical alarm messages by means of the High High Limit/ HI\_HI\_LIM, High Limit/HI\_LIM, Low Low Limit/LO\_LO\_LIM and Low Limit/ LO\_LIM parameters. The limit values entered must be within the value range specified for the Output Scale/ OUT SCALE parameter → ≅ 86.
- 7. Specify the alarm priorities by means of the **High High Priority/HI\_HI\_PRI**, **High Priority/ HI\_PRI**, **Low Low Priority/LO\_LO\_PRI** and **Low Priority/LO\_PRI** parameters. Reporting to the field host system only takes place with alarms with a priority greater than 2.
- 8. Set the block mode to **Auto** using the **Block Mode/MODE\_BLK** parameter, **TARGET** element. For this purpose, the Resource Block and the Setup Transducer Block must also be set to the **Auto** block mode.

## 12.2.5 Additional configuration

- 1. Link the function blocks and output blocks.
- 2. After specifying the active LAS, download all the data and parameters to the field device.

# 12.3 Scaling of the measured value in an AI Block

If the type of linearisation  $L\_TYPE = indirect$  has been selected in an AI block, the measured value can be scaled within the block. The input range is defined by the  $XD\_SCALE$  parameter through its  $EU\_0$  and  $EU\_100$  elements. This range is mapped linearly to the output ranged defined by the  $OUT\_SCALE$  parameter through its  $EU\_0$  and  $EU\_100$  elements.

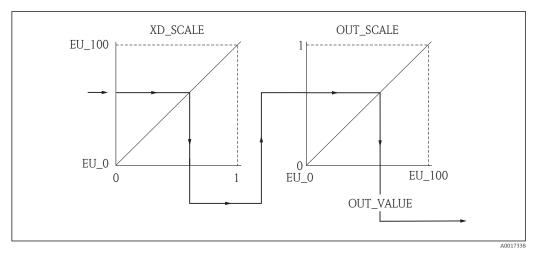

Scaling of the measured value in an AI Block

- If you have selected the **Direct** mode for the **L\_TYPE** parameter, you cannot change the values and units for **XD\_SCALE** and **OUT\_SCALE**.
  - The **L\_TYPE**, **XD\_SCALE** and **OUT\_SCALE** parameters can only be changed in the OOS block mode.


# 12.4 Language selection

Step	Block	Parameter	Action
1	DISPLAY (TRDDISP)	Language (language)	Select language <sup>1)</sup> .
1	DISPLAY (TRDDISP)	Language (language)	Select language 1).  Selection:  1268: Swedish  32805: Arabian  32824: Chinese simplified  32842: Czech  32881: Dutch  32888: English  32917: French  32920: German  32945: Italian  32946: Japanese  32948: Korean  33026: Polish
			<ul> <li>33027: Portuguese</li> <li>33062: Russian</li> <li>33083: Spanish</li> <li>33103: Thai</li> <li>33120: Vietnamese</li> <li>33155: Bahasa</li> <li>33166: Turkish</li> </ul>

<sup>1)</sup> When ordering a device the set of available languages is defined. Refer to the product structure, feature 500 "Additional Operation Language".

# 12.5 Configuration of a level measurement

The **Setup** method can also be used to configure the measurement. It is called up via the SETUP (TRDSUP) Transducer Block.

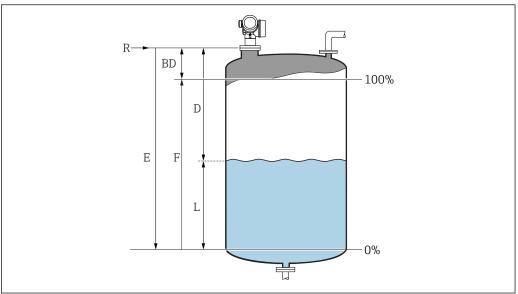

A00169

R = Reference point of the measurement E = Empty calibration (= Zero point)

D = Distance  $F = Full \ calibration \ (= span)$ 

L = Level

Step Block Parameter Action SETUP (TRDSUP) Distance unit Select distance unit. (distance\_unit) Selection: ■ 1010: m • 1013: mm ■ 1018: ft • 1019: in SETUP (TRDSUP) Tank type (tank\_type) Select tank type. Selection: ■ 1271: Process vessel with agitator • 1272: Process vessel standard ■ 1273: Storage vessel • 1274: Wave guide antenna ■ 1279: Sphere ■ 32816: Bypass / pipe • 33013: Open channel ■ 33094: Stilling well 3 SETUP (TRDSUP) Tube diameter Enter the diameter of the bypass or stilling well. (tube\_diameter) 1) SETUP (TRDSUP) Medium group Select medium group. (medium\_group) Selection: 316: water based (DC>4) ■ 256: other (DC≥ 1.9) SETUP (TRDSUP) Empty calibration Enter the distance E between the reference point (empty calibration) R and the minimum level (0%). SETUP (TRDSUP) Full calibration Enter distance F between the minimum (0%) and (full\_calibration) maximum (100%) level. SETUP (TRDSUP) Level (level) Displays the measured level L.

Step	Block	Parameter	Action
8	SETUP (TRDSUP)	Distance (filtered_dist_val)	Displays the distance D between the reference point R and the level L.
9	SETUP (TRDSUP)	Signal quality (signal_quality)	Displays the signal quality of the level echo.
10	SETUP (TRDSUP)	Confirm distance (confirm_distance)	Compare the displayed distance to the real distance in order to start the recording of the mapping curve.
			Selection:  179: Manual map  32847: Factory map  32859: Distance ok  32860: Distance too big  32861: Distance too small  32862: Distance unknown  33100: Tank empty

<sup>1)</sup> only available for "Tank type" = "Bypass/pipe"

## 12.6 Configuration of the on-site display

## 12.6.1 Factory settings of the on-site display for level measurements

Parameter	Factory setting		
Format display	1 value, max. size		
Value 1 display	Level linearized		
Value 2 display	None		
Value 3 display	None		
Value 4 display	None		

The on-site display can be adjusted in the **DISPLAY (TRDDISP)** transducer block.

# 12.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

## Navigation path in the operating menu

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Conf.backup disp  $\rightarrow$  Config. managem.

**Block operation** 

Block: **DISPLAY (TRDDISP)** 

Parameter: Configuration management (configuration management)


Functions of the parameter options

Options	Description
33097: Execute backup	A backup copy of the current device configuration in the HistoROM is saved to the display module of the device. The backup copy comprises the transmitter data of the device.
33057: Restore	The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter data of the device.

Options	Description
33838: Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
265: Compare	The device configuration saved in the display module is compared to the current device configuration of the HistoROM.
32848: Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

### **HistoROM**


A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

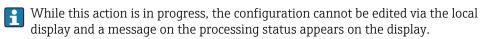

# 12.8 Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912

The device complies with the FOUNDATION Fieldbus specification FF912. This has among other things - the following consequences:

- The diagnsotic category according to NAMUR recommendation NE107 is transmitted via the fieldbus in a manufacturer-independent form:
  - F: Failure
  - C: Function check
  - S: Out of specification
  - M: Maintenance required
- The diagnostic category of pre-defined groups of events can be adjusted by the user according to the requirements of the specific application.
- Certain events can be separated from their group and can be handled individually:
  - 941: Echo lost
  - 942: In safety distance
  - 950: Advanced Diagnostic occurred
- Additional information and remedial measures are transmitted together with the event message via the fieldbus.
- The diagnostic messages according to FF912 are available in the host only if the **Multi-bit support** option has been activated in the **FEATURE\_SEL** parameter of the Resource block. For reasons of compatibility, this option is **not** activated on delivery:

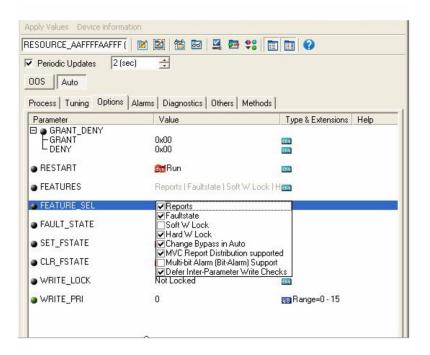

## 12.8.1 Groups of events

The diagnostic messages are classified into 16 groups according to the **source** and **severity** of the respective event. A **default diagnostic category** is allocated to each group. Each group is also represented by one bit of the allocation parameters.

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Highest severity Failure (F)	Failure (F)	Sensor	31	<ul> <li>F003: Broken probe detected</li> <li>F046: Build-up detected</li> <li>F083: Memory content</li> <li>F104: HF cable</li> <li>F105: HF cable</li> <li>F106: Sensor</li> </ul>
	Electronics	30	<ul> <li>F242: Software incompatible</li> <li>F252: Modules incompatible</li> <li>F261: Electronic modules</li> <li>F262: Module connecting</li> <li>F270: Main electronic failure</li> <li>F271: Main electronic failure</li> <li>F272: Main electronic failure</li> <li>F273: Main electronic failure</li> <li>F275: I/O-Modul failure</li> <li>F276: I/O module failure</li> <li>F282: Data storage</li> <li>F283: Memory content</li> <li>F311: Electronic Failure</li> </ul>	
		Configuration	29	<ul> <li>F410: Data transfer</li> <li>F435: Linearization</li> <li>F437: Configuration incompatible</li> <li>F482: Block in OOS</li> </ul>
		Process	28	<ul> <li>F803: Current loop 1</li> <li>F825: Current loop 1</li> <li>F936: EMC interference</li> <li>F941: Echo lost 1)</li> <li>F970: Linearization</li> </ul>

1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
High severity	Function check (C)	Sensor	27	not used in Micropilot
		Electronics	26	not used in Micropilot
		Configuration	25	<ul> <li>C411: Up-/download</li> <li>C484: Simulation failure mode</li> <li>C485: Simulation measured value</li> <li>C492: Simulation frequency output</li> <li>C493: Simulation pulse output</li> <li>C494: Switch output simulation</li> <li>C495: Simulation block output</li> <li>C585: Simulation distance</li> <li>C586: Record map</li> </ul>
		Process	24	not used in Micropilot

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Low severity	Out of specification (S)	Sensor	23	not used in Micropilot
		Electronics	22	not used in Micropilot

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
		Configuration	21	<ul><li>S442: Frequency output</li><li>S443: Pulse output</li></ul>
		Process	20	<ul> <li>S801: Energy too low</li> <li>S825: Operating temperature</li> <li>S921: Change of reference</li> <li>S942: In safety distance <sup>1)</sup></li> <li>S943: In blocking distance</li> <li>S944: Level range</li> <li>S968: Level limited</li> </ul>

1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Lowest severity	Maintenance required (M)	Sensor	19	not used in Micropilot
		Elektronics	18	<ul><li>M272: Main electronics failure</li><li>M311: Electronics failure</li></ul>
		Configuration	17	M438: Data set
		Process	16	M950: Advanced diagnostic occurred

## 12.8.2 Allocation parameters

The allocation of event categories to the event groups is controlled by the allocation parameters. They reside in the **RESOURCE (RB2)** block:

- FD FAIL MAP: for the Failure (F) event category
- FD\_CHECK\_MAP: for the Function check (C) event category
- FD\_OFFSPEC\_MAP: for the Out of specification (S) event category
- FD\_MAINT\_MAP: for the Maintenance required (M) event category

Each allocation parameter consists of 32 bits with the following meaning:

- **Bit 0:** reserved by the Fieldbus Foundation
- **Bits 1 to 15:** Configurable area; here, a number of predefined diagnostic events can be allocated irrespective of the group of events they belong to. In this case they are removed from their group and their bahavior can be configured individually. With Micropilot, the following parameters can be allocated to the configurable area:
  - 941: Echo lost
  - 942: In safety distance
  - 950: Advanced Diagnostic occurred
- **Bits 16** ... **31:** Standard area; these bits are permanently allocated to a specific group of events. If a bit is set to **1**, the respective event category is assigned to the group.

The following table represents the default setting of the allocation parameters. In the default setting there is a unique relationship between the severity of the event and its category (i.e. its allocation parameter).

### *Default setting of the allocation parameters*

		Standard area										Configurable area					
Severity of the event	Highest severity		rity	High severity			L	Low severity			Lowest severity			rity			
Source of the event 1)	S	Е	С	P	S	Е	С	Р	S	Е	С	P	S	Е	С	Р	
		•	•	•	•	•	•		•	•		•		•	•		
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15 1
FD_FAIL_MAP	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
FD_CHECK_MAP	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
FD_OFFSPEC_MAP	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0
FD_MAINT_MAP	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0


1) S: Sensor; E: Electronics; C: Configuration; P: Process

In order to change the diagnostic behavior of a group of events, proceed as follows:


- 1. Open the allocation parameter to which the group is currently allocated.
- 2. Switch the bit of the group from **1** to **0**. In the case of operation via FieldCare this is done by deactivating the respective checkbox (see the example below).
- 3. Open the allocation to which the group is to be allocated.
- 4. Switch the bit of the group from **0** to **1**. In the case of operation via FieldCare this is done by activating the respective checkbox (see the example below).

### Example

The **Highest severity / Configuration** group contains the messages **410**: **Data transfer**, **411**: **Up-/Download**, **435**: **Linearization** and **437**: **Configuration incompatible**. These messages are no longer to be classified as **Failure (F)** but as **Funcktion check (C)**.

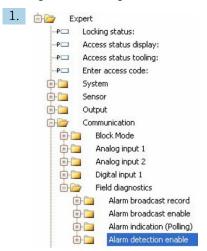

Use the FieldCare navigation window to navigate to the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.

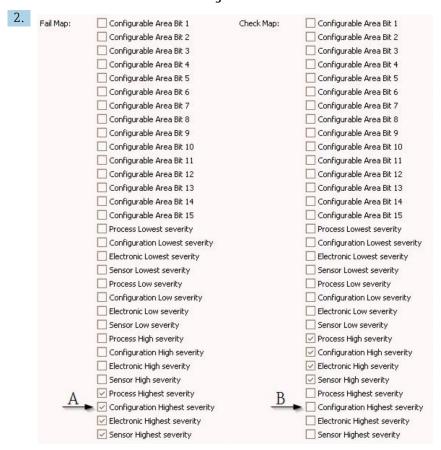

■ 27 Default state of the "Fail Map" and "Check Map" columns

Look for the **Configuration Highest Severity** group in the **Fail Map** column and deactivate the associated checkbox (A). Activate the respective checkbox in the **Check Map** column (B). Remember to confirm each change by pressing the Enter key.



■ 28 Changed state of the "Fail Map" and "Check Map" columns

- Make sure that for each group the corresponding bit is set to **1** in at least one of the allocation parameters. Otherwise no event category is transmitted with the event message. As a consequence the message will not be recognized by the control system.
- The **Alarm detection enable** screen is used to configure the detection of diagnostic events but not the transmission of event messages to the bus. The latter is configured on the **Alarm broadcast enable** screen, which is operated exactly in the same way as the **Alarm detection enable** screen. Status information is only transmitted to the bus if the Resource Block is in the **Auto** mode.

## 12.8.3 Configurable area


An event category can be individually defined for the following parameters - irrespective of the group of events they belong to by default.

- **F941**: Echo lost
- **S942:** In safety distance
- M950: Advanced Diagnostic occurred

Prior to changing the event category, the event must be allocated to one of the bits 1 to 15. This is performed by the parameters **FF912 ConfigArea\_1** to **FF912ConfigArea\_15** in the **DIAGNOSTIC (TRDDIAG)** block. Thereafter, the selected bit can be switched from **0** to **1** in the desired allocation parameter.

### Example

To change the category of error **942** "In safety distance" from **Out of specification (S)** (default), to **Function check (C)**, proceed as follows.

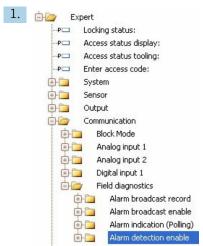

Use the FieldCare navigation window to navigate to the following screen: **Expert**  $\rightarrow$  **Communication**  $\rightarrow$  **Field diagnostics**  $\rightarrow$  **Alarm detection enable**.



By default all **Configurable Area Bits** are set to **not used**.



Select one of these bits (in the example: Configurable Area Bit 1) and select **In safety distance** from the associated drop-down menu. Confirm the selection by pressing the Enter key.




Got to the **Offspec Map** column and activate the checkbox of the respective bit (in the example: **Configurable Area Bit 1**). Confirm the selection by pressing the Enter key.

A change of the error category of **In safety distance** does not affect an error which is already present. The new category is only assigned if a new error of this type occurs after the change.

## 12.8.4 Transmission of the event meassages to the bus

## **Event priority**

Event messages are only transmitted to the bus if their priority is between 2 and 15. Events of priority 1 are indicated on the display but not transmitted to the bus. Events of priority 0 are ignored. By default, the priority is 0 for all events. The priority can be adjusted individually for each allocation parameter. This is done by the following four priority parameters:

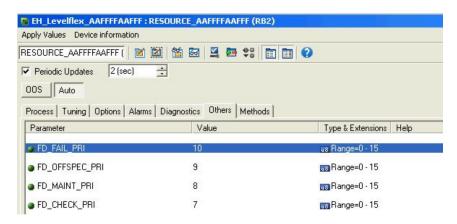

### Suppression of individual events

For individual events, the transmission to the bus can suppressed by the use of a mask. The corresponding events will be displayed but not transmitted to the bus. In FieldCare, this mask can be found at  $\mathbf{Expert} \to \mathbf{Communication} \to \mathbf{Field\ diagnostics} \to \mathbf{Alarm\ broadcast\ enable}$ . This mask functions as a negative mask, which means that, if a field is marked, the corresponding events will  $\mathbf{not}$  be transmitted to the bus.

# 12.9 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via block operation:
  - Block: DISPLAY (TRDDISP); parameter: Define access code (define\_access\_code)
  - Block: EXPERT\_CONFIG (TRDEXP); parameter: Enter access code (enter\_access\_code)

# 13 Diagnostics and troubleshooting

# 13.1 General trouble shooting

## 13.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul> <li>Increase contrast by pressing ± and E simultaneously.</li> <li>Decrease contrast by pressing □ and E simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plut correctly.
	Display is defective.	Replace display.
"Communication error" is indicated	Electromagnetic interference	Check grounding of the device.
on the display when starting the device or connecting the display	Broken display cable or display plug.	Exchange display.
Duplicating of the parameters from one device to another via the display doesn't work. Only the "Save" and "Abort" options are available.	Display with backup is not recognized if no data backup has been performed at the device before.	Connect display (with the backup) and restart the device.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

## 13.1.2 Parametrization errors

Error	Possible cause	Remdy
Measured value incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul> <li>Check and adjust         Empty calibration parameter         (→ ■ 133) if necessary.</li> <li>Check and adjust Full calibration         parameter (→ ■ 134) if necessary.</li> <li>Check and adjust linearization if         necessary (Linearization submenu         (→ ■ 151)).</li> </ul>
	For measurements in bypasses / stilling well:  Wrong tank type Wrong tube diameter	<ul> <li>Select Tank type (→ 🗎 132) =         Bypass / pipe.</li> <li>Enter correct diamter in Tube         diameter parameter (→ 🖺 133).</li> </ul>
	Wrong level correction	Enter correct value in <b>Level correction</b> parameter ( $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out tank mapping (Confirm distance parameter ( $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$


Error	Possible cause	Remdy
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	<ul> <li>Carry out tank mapping (Confirm distance parameter (→ 🖺 136)).</li> <li>If necessary, clean antenna</li> <li>If necessary, selet better mopunting position</li> </ul>
If the surface is not calm (e.g. filling, emptying, agitator running), the measured value jumps sporadically to a higher level	Signal is weakened by the rough surface - the interference echoes are sometimes stronger.	<ul> <li>Carry out tank mapping (Confirm distance parameter (→ ≦ 136)).</li> <li>Select Tank type (→ ≦ 132) = Process vessel with agitator.</li> <li>Increase integration time (Expert → Sensor → Distance → Integration time)</li> <li>Optimize orientation of the antenna</li> <li>If necessary, select a better mounting position and/or larger antenna.</li> </ul>
During filling/emptying the measxured value jumps downwards	Multiple echoes	<ul> <li>Check Tank type parameter         (→ ➡ 132).</li> <li>If possible, do not select central installation position.</li> <li>If appropriate, use a stilling well.</li> </ul>
Error message F941 or S941 "Echo lost"	Level echo is too weak.	<ul> <li>Check Medium group parameter (→ ≧ 133).</li> <li>If necessary, select a more detailed setting in Medium property parameter (→ ≧ 144).</li> <li>Optimize alignment of antenna</li> <li>If necessary, select a better installation position and/or larger antenna.</li> </ul>
	Level echo suppressed.	Delete mapping and record it again.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the tank is empty ( <b>Confirm distance</b> parameter (→ 🖺 136)).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set <b>Tank type</b> parameter (→ 🖺 132) correctly.

100

# 13.2 Diagnostic information on local display

## 13.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

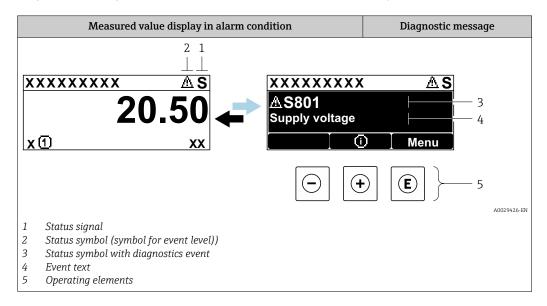

### Status signals


F A0032902	"Failure (F)" option A device error is present. The measured value is no longer valid.
<b>C</b>	"Function check (C)" option The device is in service mode (e.g. during a simulation).
<b>S</b>	<ul> <li>"Out of specification (S)" option</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b>	"Maintenance required (M)" option Maintenance is required. The measured value is still valid.

## Status symbol (symbol for event level)

8	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
$\Phi$	"Warning" status The device continues to measure. A diagnostic message is generated.

## Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

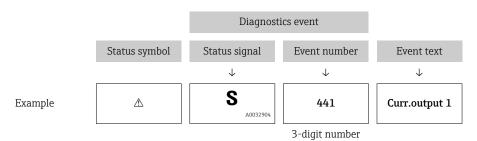

If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.


- i
- Past diagnostic messages that are no longer pending are shown as follows:
- On the local display:
- in the **Event logbook** submenu
- In FieldCare: via the "Event List /HistoROM" function.

## Operating elements

Operating functions in menu, submenu				
+	Plus key Opens the message about the remedial measures.			
E	Enter key Opens the operating menu.			

102

## 13.2.2 Calling up remedial measures

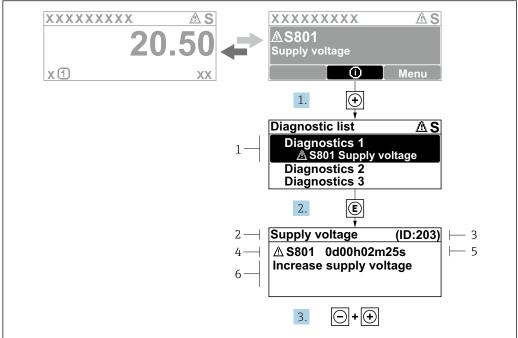

A0029431-EN

- 29 Message for remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

- 1. Press ± (①-Symbol).
  - **→ Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\blacksquare$ .
  - ► The message for the remedial measures for the selected diagnostic event opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

- 1. Press E.
  - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message for the remedial measures closes.


## 13.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)


### A: Via the operating menu

- 1. Navigate to the **Diagnostics** menu.
  - In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
- 2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

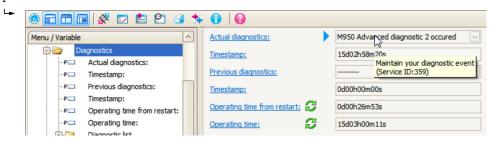


A tool tip with remedial measures for the diagnostic event appears.

### B: Via the "Create documentation" function

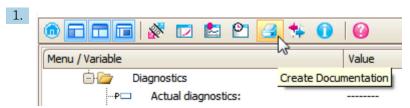


Select the "Create documentation" function.

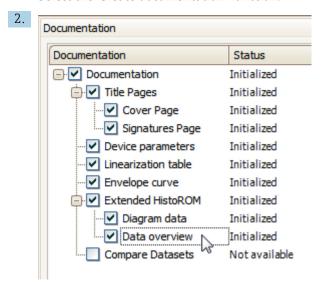

Make sure "Data overview" is marked.

- 3. Click "Save as ..." and save a PDF of the protocol.
  - └ The protocol contains the diagnostic messages and remedy information.

### C: Via the "Eventlist / Extended HistoROM" function

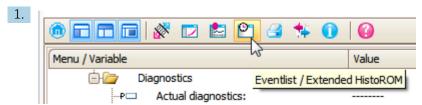

Select the "Eventlist / Extended HistoROM" function.



Select the "Load Eventlist" function.

The list of events, including remedy information, is shown in the "Data overview" window.

# 13.4 Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)

- The Actual diagnostics parameter displays the message with the highest priority. Every
  message is also output as per the FOUNDATION Fieldbus Specification by means of the
  XD\_ERROR and BLOCK\_ERROR parameters.
- A list of diagnostic messages is displayed in the Diagnostics 1 to Diagnostics 5
  parameters. If more than 5 messages are currently active, only those with the highest
  priority are displayed.
- You can view a list of alarms which are no longer active (event log) via the **Previous diagnostics** parameter.

# 13.5 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

### Calling up and closing the remedial measures

- 1. Press E.
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message about the remedial measures closes.

# 13.6 Overview of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of e	electronic			
242	Software incompatible	Check software     Flash or change main electronics module	F	Alarm
252	Modules incompatible	Check electronic modules     Change I/O or main electronic module	F	Alarm
261	Electronic modules	Restart device     Check electronic modules     Change I/O Modul or main electronics	F	Alarm
262	Module connection	Check module connections     Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	Restart device     Change main electronic module	F	Alarm
272	Main electronic failure	Restart device     Contact service	F	Alarm
273	Main electronic failure	Emergency operation via display     Change main electronics	F	Alarm
275	I/O module failure	Change I/O module	F	Alarm
276	I/O module failure	Restart device     Change I/O module	F	Alarm
282	Data storage	Restart device     Contact service	F	Alarm
283	Memory content	Transfer data or reset device     Contact service	F	Alarm
311	Electronic failure	Transfer data or reset device     Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	М	Warning
Diagnostic of c	onfiguration			
410	Data transfer	Check connection     Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	С	Warning
412	Processing Download	Download active, please wait	С	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	Restart device     Contact service	F	Alarm
438	Dataset	Check data set file     Check device configuration     Up- and download new configuration	М	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	С	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
485	Simulation measured value	Deactivate simulation	С	Warning
494	Switch output simulation	Deactivate simulation switch output	С	Warning
495	Simulation diagnostic event	Deactivate simulation	С	Warning
497	Simulation block output	Deactivate simulation	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
586	Record map	Recording of mapping please wait	С	Warning
Diagnostic of pr	rocess			
801	Energy too low	Increase supply voltage	S	Warning
825	Operating temperature	Check ambient temperature     Check process temperature	F	Alarm
921	Change of reference	Check reference configuration     Check pressure     Check sensor	S	Warning
941	Echo lost	Check parameter 'DC value'	F	Alarm 1)
942	In safety distance	Check level     Check safety distance     Reset self holding	S	Alarm 1)
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostic 1 to 2 occured	Maintain your diagnostic event	М	Warning 1)

<sup>1)</sup> Diagnostic behavior can be changed.

# 13.7 Event logbook

## 13.7.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu <sup>7)</sup>.

### Navigation path

 $Diagnostics \rightarrow Event\ logbook \rightarrow Event\ list$ 

A maximum of 100 event messages can be displayed in chronological order.

Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

<sup>7)</sup> This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - €: Event has occurred
  - ⊖: Event has ended
- Information event
  - €: Event has occurred

### Calling up and closing the remedial measures

- 1. Press E
  - The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - The message about the remedial measures closes.

## 13.7.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

## Navigation path

Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Filter options

## Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

## 13.7.3 Overview of information events


Info number	Info name
I1000	(Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared

Info number	Info name
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

# 13.8 Firmware history

Date	Firmware	Modifications	Documentation (FMR51/FMR52, FOUNDATION Fieldbus)		
	version		Operating Instructions	<b>Description of Parameters</b>	Technical Information
06.2012	01.00.zz	Original software	BA01121F/00/EN/01.13	GP01017F/00/EN/01.13	TI01040F/00/EN/03.13
05.2015	01.01.zz	<ul> <li>additional languages</li> <li>HistoROM functionality enhanced</li> <li>Improvements and bugfixes</li> </ul>	BA01121F/00/EN/02.15 BA01121F/00/EN/03.16 <sup>1)</sup>	GP01017F/00/EN/02.15	TI01040F/00/EN/05.15 TI01040F/00/EN/07.16 <sup>1)</sup>

<sup>1)</sup> Contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.

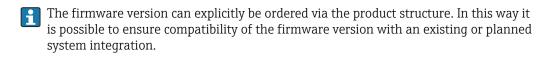

# 14 Maintenance

The measuring device requires no special maintenance.

# 14.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the hosuing and the seals.

# 14.2 Replacing seals

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

# 15 Repairs

### 15.1 General information on repairs

#### 15.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

### 15.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

#### 15.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

#### 15.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module
   Condition: The configuration of the old device has been saved in the display module
   → 175.
- Via FieldCare
   Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

# 15.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL for the W@M Device Viewer (www.endress.com/deviceviewer):
     There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

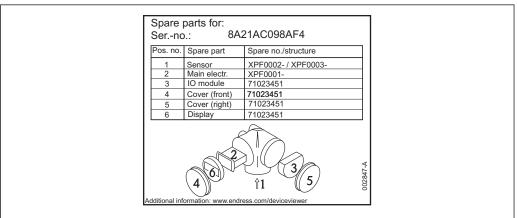

A001497

■ 30 Example for spare part nameplate in connection compartment cover

- Measuring device serial number:
  - Is located on the device and spare part nameplate.
  - Can be read out via the "Serial number" parameter in the "Device information" submenu.

#### 15.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <a href="http://www.endress.com/support/return-material">http://www.endress.com/support/return-material</a>

# 15.4 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.


# 16 Accessories

# 16.1 Device-specific accessories

# 16.1.1 Weather protection cover

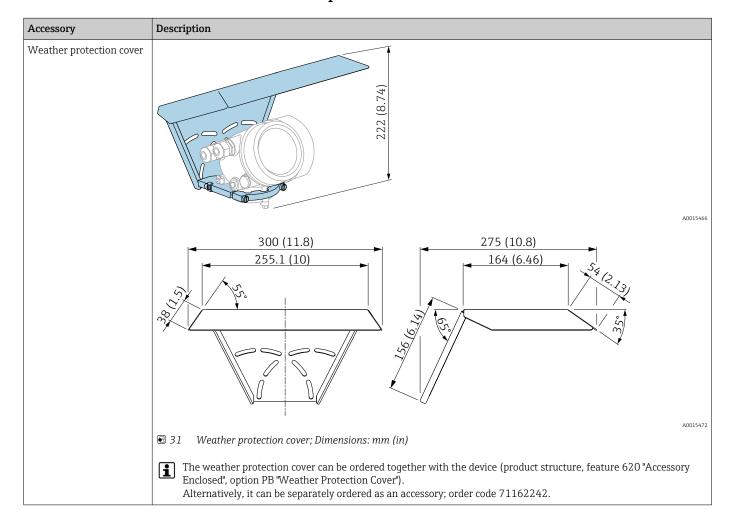

#### 16.1.2 Remote display FHX50

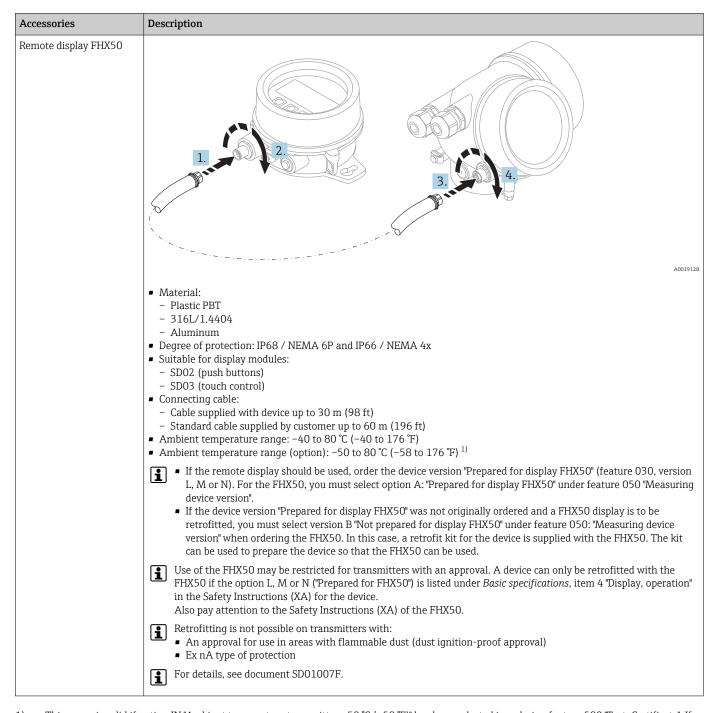

1) This range is valid if option JN "Ambient temperature transmitter  $-50\,^{\circ}$ C ( $-58\,^{\circ}$ F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below  $-40\,^{\circ}$ C ( $-40\,^{\circ}$ F), failure rates may be increased.


### 16.1.3 Horn protection for horn antenna

This section is **not** valid for the following options of ordering feature 610 "Accessory Mounted".

■ OU: ...mm antenna extension

■ OV: ... inch antenna extension

For these cases:  $\rightarrow \blacksquare 116$ 

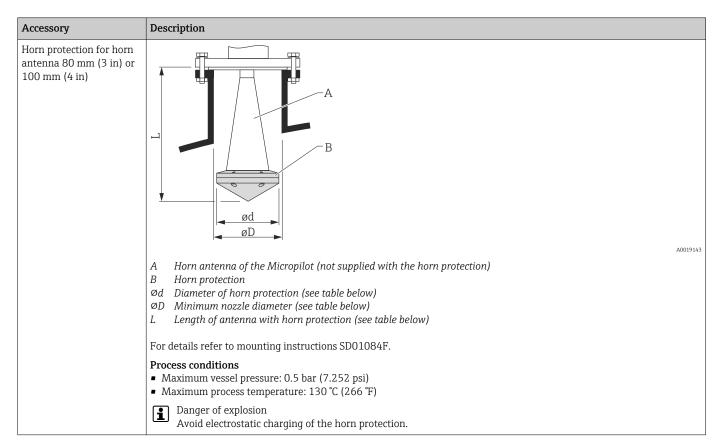

### Horn protection for FMR51


Antenna 1)	Order code horn	Dimensions antenna + horn protection		
	protection	L 2)	Ød	ØD
BC: Horn 80mm/3"	71105890	238 mm (9.4 in)	96 mm (3.78 in)	≥ DN100
BD: Horn 100mm/4"	71105889	302 mm (11.9 in)	116 mm (4.57 in)	≥ DN150

- 1) Feature 070 of the product structure
- 2) A different length is valid for antennas with variable antenna extension (ordering feature 610, option OU or OV).
  - The horn protection can also be ordered together with the device. Product structure: Feature 610 "Accessory Mounted", option OW "Horn protection, PTFE".

# 16.1.4 Horn protection for horn antenna with variable antenna extension

- This section is valid for the following options of ordering feature 610 "Accdessory Mounted".
  - OU: ...mm antenna extension
  - OV: ... inch antenna extension

For any other device version:  $\rightarrow \blacksquare 115$ 

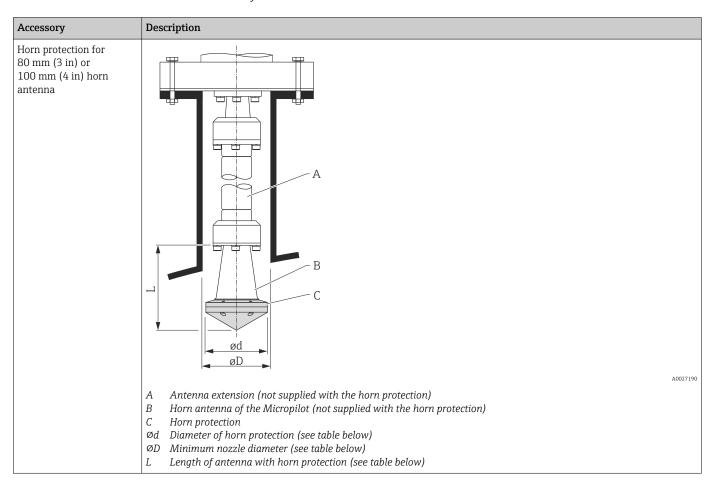

#### Horn protection for FMR51 with variable antenna extension

Antenna 1)	Order code horn protection	Dimensions antenna + horn protection		
		L	Ød	ØD
BC: Horn 80mm/3"	71105890	203 mm (8 in)	96 mm (3.78 in)	≥ DN100
BD: Horn 100mm/4"	71105889	267 mm (10.5 in)	116 mm (4.57 in)	≥ DN150

1) Feature 070 of the product structure

# 16.1.5 Overvoltage protection

Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	
	A0021734
	Technical data  Resistance per channel: 2 * 0.5 Ω <sub>max</sub> Threshold DC voltage: 400 to 700 V  Threshold impulse voltage: < 800 V  Capacitance at 1 MHz: < 1.5 pF  Nominal arrest impulse voltage (8/20 μs): 10 kA  Suited for wire cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG)
	Ordering with device The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to retrofitted with the overvoltage protection.
	Order code for retrofitting For 1-channel devices (feature 020, option A) OVP10: 71128617 For 2-channel devices (feature 020, option B, C, E or G) OVP20: 71128619
	Hosuing lid for retrofitting In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:  GT18 housing: Lid 71185516 GT20 housing: Lid 71185516
	Restrictions for retrofitting Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted unter Optional Specifications in the Safety Instructions (XA) pertaining to the device.
	For details refer to SD01090F.

# 16.1.6 Gas-tight feedthrough

Accessory	Description
Gas-tight feedthrough	Chemically inert glass feedthrough; prevents migration of gases into the electronics housing.  To be ordered with the device: product structure, feature 610 "Accessory Mounted", option NC "Gas-tight feedthrough"

# 16.1.7 Bluetooth module for HART devices

Accessory	Description
Bluetooth module	A0036493
	<ul> <li>Quick and easy commissioning via SmartBlue (app)</li> <li>No additional tools or adapters required</li> <li>Signal curve via SmartBlue (app)</li> <li>Encrypted single point-to-point data transmission (tested by Fraunhofer institue) and password protected communication via Bluetooth® wireless technology</li> <li>Range under reference conditions:         <ul> <li>10 m (33 ft)</li> </ul> </li> </ul>
	When using the Bluetooth module the minimum supply voltage increases by up to 3 V.  Ordering with device The Bluetooth module is preferably ordered with the device. See product structure, feature 610 "Accessory Mounted", option NF "Bluetooth". A separate order is only necessary in case of retrofitting.
	Order code for retrofitting Bluetooth module (BT10): 71377355
	Restrictions in case of retrofitting  Depending on the approval of the transmitter, application of the Bluetooth module may be restricted. A device may only be retrofitted with a Bluetooth module if the option NF (Bluetooth) is listed in the associated Safety Instructions (XA) under Optional specifications.
	For details refer to SD02252F.

# 16.2 Communication-specific accessories

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer.  Order code: 51516983  For details refer to Technical Information TI00405C

Accessory	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> .  For details, see Operating Instructions BA01202S

Accessory	Description
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> and the <b>Ex area</b> .  For details, see Operating Instructions BA01202S

# 16.3 Service-specific accessories


Accessory	Description
DeviceCare SFE100	Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus devices
	Technical Information TI01134S
	<ul> <li>DeviceCare is available for download at www.software-products.endress.com. The download requires a registration in the Endress+Hauser software portal.</li> <li>Alternatively, a DeviceCare DVD can be ordered with the device. Product structure: Feature 570 "Service", Option IV "Tooling DVD (DeviceCare Setup)".</li> </ul>
FieldCare SFE500	FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  Technical Information TI00028S

# 16.4 System components

Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.
	For details refer to Technical Information TI00133R and Operating Instructions BA00247R

# 17 Operating menu

# 17.1 Overview of the operating menu (display module)

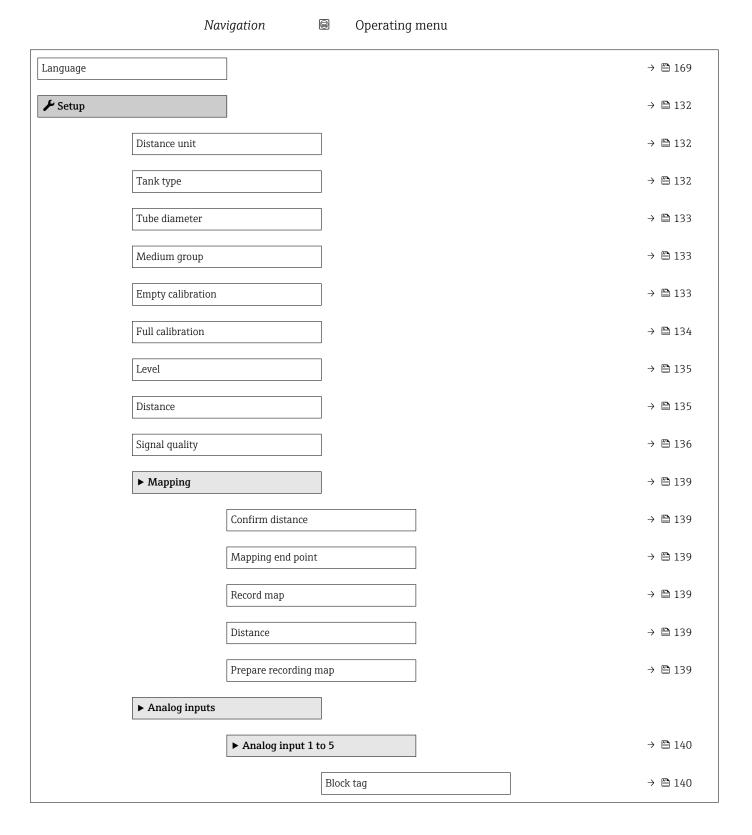

		Channel		→ 🖺 140
		Process Value Filter Time		→ 🗎 141
► Advanced setup	)			→ 🖺 142
	Locking status			→ 🖺 142
	Access status displa	ay		→ 🖺 142
	Enter access code			→ 🗎 143
	► Level			→ 🖺 144
		Medium type		→ 🖺 144
		Medium property		→ 🖺 144
		Max. filling speed liquid		→ 🖺 145
		Max. draining speed liquid		→ 🗎 145
		Advanced process conditions		→ 🖺 146
		Level unit		→ 🖺 147
		Blocking distance		→ 🖺 147
		Level correction		→ 🖺 148
		Tank/silo height		→ 🖺 148
	► Linearization		I	→ 🖺 151
		Linearization type	1	→ 🖺 153
		Unit after linearization		→ 🖺 154
		Free text		→ 🖺 155
		Maximum value		→ 🖺 156
		Diameter		→ 🖺 156
		Intermediate height		→ 🖺 156
		Table mode		→ 🖺 157

	▶ Edit table	
	P Luit table	
	Level	→ 🖺 158
	Customer value	→ 🖺 159
	Activate table	→ 🖺 159
► Safety settings		→ 🖺 160
	Output echo lost	→ 🖺 160
	Value echo lost	→ 🖺 160
	Ramp at echo lost	→ 🖺 161
	Blocking distance	→ 🖺 147
► Switch output		→ 🖺 163
	Switch output function	→ 🖺 163
	Assign status	→ 🖺 163
	Assign limit	→ 🖺 164
	Assign diagnostic behavior	→ 🗎 164
	Switch-on value	→ 🖺 165
	Switch-on delay	→ 🖺 166
	Switch-off value	→ 🖺 166
	Switch-off delay	→ 🖺 167
	Failure mode	→ 🖺 167
	Switch status	→ 🖺 167
	Invert output signal	→ 🖺 167
<b>▶</b> Display		→ 🖺 169
	Language	→ 🗎 169
	Format display	→ 🖺 169
	Value 1 to 4 display	→ 🖺 171

		Decimal places 1 to	4	→ 🗎 171
		Display interval		→ 🗎 172
		Display damping		→ 🖺 172
		Header		→ 🖺 172
		Header text		→ 🖺 173
		Separator		→ 🖺 173
		Number format		→ 🖺 173
		Decimal places men	u	→ 🖺 173
		Backlight		→ 🖺 174
		Contrast display		→ 🖺 174
	➤ Configuration ba	ackup display	]	→ 🖺 175
		Operating time		→ 🖺 175
		Last backup		→ 🖺 175
		Configuration mana	agement	→ 🖺 175
		Comparison result		→ 🖺 176
	► Administration			→ 🖺 178
		► Define access co	de	→ 🖺 180
			Define access code	→ 🖺 180
			Confirm access code	→ 🖺 180
		Device reset		→ 🗎 178
억, Diagnostics				→ 🗎 181
Actual diagnostics				→ 🖺 181
Previous diagnostics				→ 🖺 181
Operating time from 1	restart			→ 🖺 182
Operating time				→ 🖺 175

	► Diagnostic list				→ 🖺 183
		Diagnostics 1 to 5			→ 🖺 183
	► Event logbook				→ 🖺 184
		Filter options			→ 🖺 184
		► Event list			→ 🖺 184
	► Device informat	ion			→ 🖺 185
		Device tag			→ 🖺 185
		Serial number			→ 🖺 185
		Firmware version			→ 🖺 185
		Device name			→ 🖺 186
		Order code			→ 🖺 186
		Extended order code	e 1 to 3		→ 🖺 186
	► Measured value	S			→ 🖺 187
		Distance			→ 🖺 135
		Level linearized			→ 🖺 155
		Terminal voltage 1			→ 🖺 188
		Electronic temperat	ure		→ 🖺 188
	► Analog inputs				
		► Analog input 1 t	o 5		→ 🖺 188
			Block tag		→ 🖺 140
			Channel		→ 🖺 140
			Status		→ 🖺 189
			Value		→ 🖺 189
			Units index		→ 🖺 189
<u> </u>					

<b>•</b>	Data logging	→ 🖺 190
	Assign channel 1 to 4	→ 🖺 190
	Logging interval	→ 🖺 190
	Clear logging data	→ 🖺 191
	▶ Display channel 1 to 4	→ 🗎 192
•	Simulation	→ 🖺 195
	Assign measurement variable	→ 🖺 196
	Value process variable	→ 🖺 196
	Switch output simulation	→ 🖺 196
	Switch status	→ 🖺 197
	Simulation device alarm	→ 🖺 197
	Diagnostic event category	
	Simulation diagnostic event	→ 🖺 197
•	Device check	→ 🖺 198
	Start device check	→ 🖺 198
	Result device check	→ 🖺 198
	Last check time	→ 🖺 198
	Level signal	→ 🗎 199

# 17.2 Overview of the operating menu (operating tool)

<b>⊁</b> Setup		→ 🖺 132
Distance unit		→ 🖺 132
Tank type		→ 🖺 132
Tube diameter		→ 🖺 133
Medium group		→ 🖺 133
Empty calibration		→ 🖺 133
Full calibration		→ 🖺 134
Level		→ 🖺 135
Distance		→ 🖺 135
Signal quality		→ 🗎 136
Confirm distance		→ 🖺 136
Present mapping		→ 🖺 137
Mapping end point		→ 🖺 137
Record map		→ 🖺 138
► Analog inputs		
	A. 1. 1. 1. 1. 5	) <b>(5)</b> 1/0
L	Analog input 1 to 5	→ 🖺 140
	Block tag	→ 🗎 140
	Channel	→ 🖺 140
	Process Value Filter Time	→ 🗎 141
► Advanced setup		→ 🖺 142
	ocking status	→ 🖺 142
	Access status tooling	→ 🖺 142
	Enter access code	→ 🖺 143

► Level		→ 🖺 144
	Medium type	→ 🖺 144
	Medium property	→ 🖺 144
	Max. filling speed liquid	→ 🖺 145
	Max. draining speed liquid	→ 🖺 145
	Advanced process conditions	→ 🖺 146
	Level unit	→ 🖺 147
	Blocking distance	→ 🖺 147
	Level correction	→ 🖺 148
	Tank/silo height	→ 🖺 148
► Linearization		→ 🖺 151
	Linearization type	→ 🖺 153
	Unit after linearization	→ 🖺 154
	Free text	→ 🖺 155
	Level linearized	→ 🖺 155
	Maximum value	→ 🖺 156
	Diameter	→ 🗎 156
	Intermediate height	→ 🖺 156
	Table mode	→ 🗎 157
	Table number	→ 🖺 158
	Level	→ 🖺 158
	Level	→ 🖺 159
	Customer value	→ 🖺 159
	Activate table	→ 🖺 159

► Safety settings		→ 🖺 160
- Jaiety settings		, □ 100
	Output echo lost	→ 🖺 160
	Value echo lost	→ 🖺 160
	Ramp at echo lost	→ 🖺 161
	Blocking distance	→ 🖺 147
► Switch output		→ 🖺 163
	Switch output function	→ 🖺 163
	Assign status	→ 🖺 163
	Assign limit	→ 🖺 164
	Assign diagnostic behavior	→ 🖺 164
	Switch-on value	→ 🖺 165
	Switch-on delay	→ 🖺 166
	Switch-off value	→ 🖺 166
	Switch-off delay	→ 🖺 167
	Failure mode	→ 🖺 167
	Switch status	→ 🖺 167
	Invert output signal	→ 🖺 167
► Display		→ 🗎 169
	Language	→ 🖺 169
	Format display	→ 🖺 169
	Value 1 to 4 display	→ 🖺 171
	Decimal places 1 to 4	→ 🖺 171
	Display interval	→ 🖺 172
	Display damping	→ 🖺 172
	Header	→ 🖺 172

	Header text	→ 🖺 173
	Separator	→ 🖺 173
	Number format	→ 🖺 173
	Decimal places menu	→ 🖺 173
	Backlight	→ 🖺 174
	Contrast display	→ 🖺 174
► Confi	guration backup display	→ 🖺 175
	Operating time	→ 🖺 175
	Last backup	→ 🖺 175
	Configuration management	→ 🖺 175
	Backup state	→ 🖺 176
	Comparison result	→ 🖺 176
► Admi	nistration	→ 🖺 178
	Define access code	→ 🖺 180
	Device reset	→ 🖺 178
억 Diagnostics		→ 🖺 181
Actual diagnostics		→ 🖺 181
Timestamp		→ 🖺 181
Previous diagnostics		→ 🖺 181
Timestamp		→ 🖺 182
Operating time from restart		→ 🖺 182
Operating time		→ 🖺 175
► Diagnostic list		→ 🖺 183
Diagnos	tics 1 to 5	→ 🖺 183
Timesta	mp 1 to 5	→ 🖺 183

► Device information		
Device tag		
Serial number		
Firmware versi	ion	
Device name		
Order code		
Extended order	r code 1 to 3	
► Measured values		
Distance		
Level linearized	d	
Terminal volta	ge 1	
Electronic temp	perature	
► Analog inputs		
► Analog inpu	ut 1 to 5	
	Block tag	
	Channel	
	Status	
	Value	
	Units index	
▶ Data logging		
Assign channel	el 1 to 4	
Logging interva	al	
Clear logging d	data	
► Simulation		
Assign measur	rement variable	

	Value process variable		→ 🖺 196
	Switch output simulation		→ 🖺 196
	Switch status		→ 🖺 197
	Simulation device alarm		→ 🖺 197
	Simulation diagnostic event		→ 🖺 197
➤ Device check			→ 🖺 198
	Start device check		→ 🖺 198
	Result device check		→ 🖺 198
	Last check time		→ 🖺 198
	Level signal		→ 🖺 199
► Heartbeat	-	I	→ 🖺 200

#### "Setup" menu 17.3



- 📵 : Marks the navigation path to the parameter via the display and operating module.
  - : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
  - 🗈 : Marks parameters which can be locked via the software locking.

Navigation ■ ■ Setup

Distance unit			
Navigation	Setup → Dis	tance unit	
Description	Length unit for dis	tance calculation.	
Selection	SI units ■ mm ■ m	<i>US units</i> ■ ft ■ in	
Factory setting	m		
Tank type			٥
Navigation	Setup → Tan	nk type	
Prerequisite	Medium type (→	🗎 144) = Liquid	
Description	Select tank type.		

Selection ■ Bypass / pipe

Stilling well

Workbench test

Open channel

Sphere

■ Storage vessel

Process vessel standard

Process vessel with agitator

■ Wave guide antenna

**Factory setting** Depending on the antenna

Additional information Depending on the antenna some of the options mentioned above may not be available or

there may be additional options.

Tube diameter

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Tube diameter

Prerequisite Tank type ( $\rightarrow \triangleq 132$ ) = Bypass / pipe

**Description** Specify diameter of bypass or stilling well.

**User entry** 0 to 9.999 m

**Factory setting** 0 m

Medium group

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Medium group

Prerequisite Medium type ( $\Rightarrow \triangleq 144$ ) = Liquid

**Description** Select medium group.

**Selection** • Others

■ Water based (DC >= 4)

**Factory setting** Others

Additional information

This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter ( $\rightarrow \boxtimes 144$ ).

The **Medium group** parameter presets the **Medium property** parameter ( $\rightarrow \implies 144$ ) as follows:

Medium group	Medium property (→ 🖺 144)
Others	Unknown
Water based (DC >= 4)	DC 4 7

The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.

The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Empty calibration

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Empty calibration


**Description** Distance process connection to min. level.

**User entry** Depending on the antenna

#### **Factory setting**

#### Depending on the antenna

#### Additional information

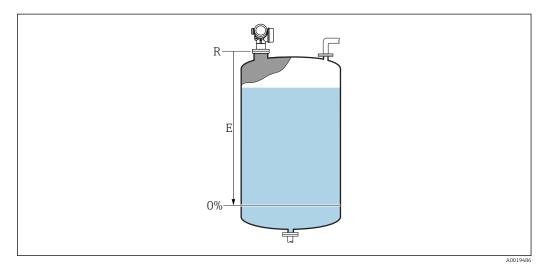

■ 32 Empty calibration (E) for level measurements in liquids

The measuring range starts at the point at which the radar beam hits the tank or silo bottom. In the case of dished boiler ends or conical outlets levels below this point can not be measured.


Full calibration

**Description** Span: max. level - min level.

**User entry** Depending on the antenna

**Factory setting** Depending on the antenna

#### Additional information

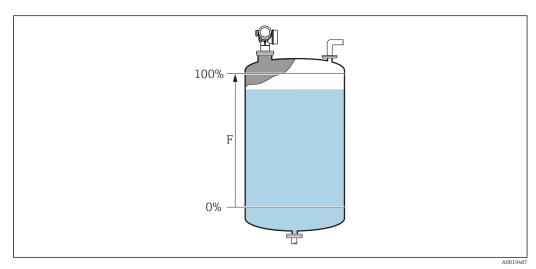

■ 33 Full calibration (F) for level measurements in liquids

#### Level


Navigation

Setup → Level

Description

Displays measured level L (before linearization).

#### Additional information

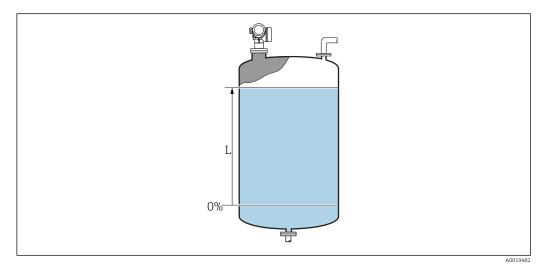

■ 34 Level in case of liquid measurements

The unit is defined in the **Level unit** parameter ( $\rightarrow \triangleq 147$ ).


#### **Distance**

Navigation

Description

Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

#### Additional information

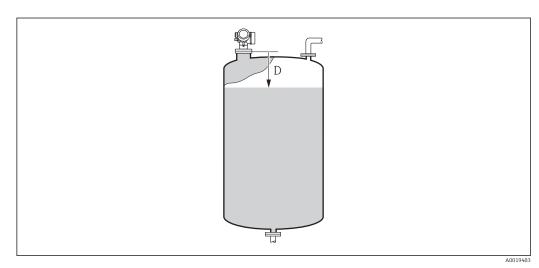

■ 35 Distance for liquid measurements

The unit is defined in the **Distance unit** parameter ( $\rightarrow \triangleq 132$ ).

#### Signal quality

#### Navigation

Setup → Signal quality

#### Description

Displays the signal quality of the level echo.

#### Additional information

#### Meaning of the display options

#### Strong

The evaluated echo exceeds the threshold by at least 10 dB.

#### Medium

The evaluated echo exceeds the threshold by at least 5 dB.

#### Weak

The evaluated echo exceeds the threshold by less than 5 dB.

#### No signal

The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level echo or the tank bottome echo. To differentiate between these two, the quality of the tank bottom echo echo is always displayed in brackets.



In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for Output echo lost ( $\rightarrow$  🗎 160) = Alarm.
- \$941, if another option has been selected in **Output echo lost** (→ **□ 160**).

#### Confirm distance

#### Navigation

#### Description

Specify, whether the measured distance matches the real distance.

Depending on the selection the device automatically sets the range of mapping.

#### Selection

- Manual map
- Distance ok
- Distance unknown
- Distance too small \*
- Distance too big
- Tank empty
- Factory map

#### Factory setting

Distance unknown

### Additional information

#### Meaning of the options

#### Manual map

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter ( $\Rightarrow \equiv 137$ ). In this case it is not necessary to confirm the distance.

#### ■ Distance ok

To be selected if the measured distance matches the actual distance. The device performs a mapping.

#### Distance unknown

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

<sup>\*</sup> Visibility depends on order options or device settings

#### ■ Distance too small

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

#### Distance too big 8)

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

#### Tank empty

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Tank/silo height** parameter ( $\rightarrow \boxminus 148$ ). By default, **Tank/silo height** = **Empty calibration**. Take into account that in case of conical outlets, for example, a measurement is only possible up to the point at which the radar hits the bottom of the tank or silo. If the **Tank empty** option is used, **Empty calibration** ( $\rightarrow \boxminus 133$ ) and **Tank/silo height** may not reach below this point as otherwise the empty signal is suppressed.

#### Factory map

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.

- When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
- If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping		
Navigation	Setup → Present mapping	
Description	Indicates up to which distance a mapping has already been recorded.	
Mapping end point		Â
Navigation	Setup → Mapping end point	
Prerequisite	Confirm distance (→ 🖺 136) = Manual map or Distance too small	
Description	Specify new end of the mapping.	
User entry	0.1 to 999 999.9 m	
Factory setting	0.1 m	

<sup>8)</sup> Only available for "Expert  $\rightarrow$  Sensor  $\rightarrow$  Echo tracking  $\rightarrow$  **Evaluation mode** parameter" = "Short time history" or "Long time history"

#### Additional information

This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.



For reference purposes the **Present mapping** parameter ( $\rightarrow \triangleq 137$ ) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.

Record map			<b>A</b>
Navigation		Setup → Record map	
Prerequisite	Confirm distance (→ 🗎 136) = Manual map or Distance too small		
Description	Start r	ecording of the map.	

Selection

- No
- Record map Overlay map Factory map ■ Delete partial map
- Factory setting No

#### Additional information

#### Meaning of the options

■ No

The map is not recorded.

Record map

The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing  $\square$ .

Overlay map

The new mapping curve is generated by overlaying the old and the current envelope curves.

Factory map

The factory map stored in the ROM of the device is used.

■ Delete partial map

The mapping curve is deleted up to **Mapping end point** ( $\rightarrow \square$  **137**).

Prepare recording map

Navigation

Description

### 17.3.1 "Mapping" wizard

The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→ ≅ 132).

In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Confirm distance		
Navigation	Setup → Mapping → Confirm distance	
Description	→ 🗎 136	
Mapping end point		<u> </u>
Navigation	Setup → Mapping → Mapping end point	
Description	→ 🖺 137	
Record map		<b>^</b>
Navigation	Setup → Mapping → Record map	
Description	→ 🖺 138	
Distance		
Navigation	Setup → Mapping → Distance	
Description	→ 🖺 135	

Endress+Hauser 139

Setup  $\rightarrow$  Mapping  $\rightarrow$  Prepare recording map

Indicates the progress of the recording of the map.

#### User interface

- Init. recording
- In progress
- Finished

### 17.3.2 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 5

Block tag	
Navigation	Setup → Analog inputs → Analog input 1 to 5 → Block tag
Description	Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.
Factory setting	
Channel	
Navigation	Setup → Analog inputs → Analog input 1 to 5 → Channel
Description	Use this function to select the input value that should be processed in the Analog Input function block.
Selection	<ul> <li>Uninitialized</li> <li>Level linearized</li> <li>Absolute echo amplitude</li> <li>Distance</li> <li>Electronic temperature</li> <li>Relative echo amplitude</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> <li>Terminal voltage</li> </ul>
Factory setting	Uninitialized

#### **Process Value Filter Time**

**Navigation** Setup  $\rightarrow$  Analog input 1 to 5  $\rightarrow$  Process Value Filter Time

**Description** Use this function to enter the filter time specification for the filtering of the unconverted

input value (PV).

**User entry** Positive floating-point number

**Factory setting** 0 s

**Additional information** Factory setting

If the value 0 s is entered, filtering will not be performed.

### 17.3.3 "Advanced setup" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup

#### Locking status

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Locking status

**Description** Indicates the write protection with the highest priority that is currently active.

**User interface** ■ Hardware locked

■ Temporarily locked

#### Additional information

#### Meaning and priorities of the types of write protection

Hardware locked (priority 1)

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.

SIL locked (priority 2)

The SIL mode is activated. Writing access to the relevant parameters is denied.

WHG locked (priority 3)

The WHG mode is activated. Writing access to the relevant parameters is denied.

■ Temporarily locked (priority 4)

Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.

On the display module, the a-symbol appears in front of parameters that cannot be modified since they are write-protected.

#### Access status tooling

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Access status tooling

**Description** Shows the access authorization to the parameters via the operating tool.

Additional information

The access authorization can be changed via the **Enter access code** parameter  $(\rightarrow \implies 143)$ .

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ( $\Rightarrow \implies 142$ ).

#### Access status display

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Access status display

**Prerequisite** The device has a local display.

#### Description

Indicates access authorization to parameters via local display.

#### Additional information

The access authorization can be changed via the **Enter access code** parameter  $(\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ )$ .

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ( $\rightarrow \cong 142$ ).

#### Enter access code

**Navigation** 

Description

Enter access code to disable write protection of parameters.

User entry

0 to 9999

#### Additional information

- If an incorrect access code is entered, the user retains his current access authorization.
- The write protection affects all parameters marked with the not symbol in this document. On the local display, the not symbol in front of a parameter indicates that the parameter is write-protected.
- If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the writeprotected parameters after another 60 s.
- Please contact your Endress+Hauser Sales Center if you lose your access code.

#### "Level" submenu

Navigation  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level

Medium type

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Medium type

**Description** Specify type of medium.

User interface • Liquid

■ Solid

Factory setting FMR50, FMR51, FMR52, FMR53, FMR54: Liquid

Additional information

This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended **not to change** the factory setting.

Medium property

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Medium property

**Description** Specify relative dielectric constant  $\varepsilon_r$  of the medium.

**Selection** • Unknown

■ DC 1.4 ... 1.6

■ DC 1.6 ... 1.9

■ DC 1.9 ... 2.5

■ DC 2.5 ... 4

■ DC 4 ... 7

■ DC 7 ... 15

■ DC > 15

Factory setting Dependent on Medium type ( $\rightarrow \triangleq 144$ ) and Medium group ( $\rightarrow \triangleq 133$ ).

**Additional information** *L* 

Dependency on "Medium type" and "Medium group"

Medium type (→ 🗎 144)	Medium group (→ 🗎 133)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 7
	Others	Unknown

For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)

Max. filling speed liquid

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Max. filling speed liquid

Prerequisite Medium type ( $\rightarrow \triangleq 144$ ) = Liquid

Description Select expected maximum filling speed.

Selection ■ Slow < 1cm (0,4in) /min

■ Medium < 10cm (4in) /min ■ Standard < 1m (40in) /min ■ Fast < 2m (80in) /min

■ Very fast > 2m (80in) /min

■ No filter / test

Depending on the **Tank type** parameter ( $\rightarrow \implies 132$ ) **Factory setting** 

Additional information The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Max. filling speed liquid	Step response time / s
Slow < 1cm (0,4in) /min	90
Medium < 10cm (4in) /min	50
Standard < 1m (40in) /min	20
Fast < 2m (80in) /min	8
Very fast > 2m (80in) /min	5
No filter / test	< 1

Max. filling speed liquid is preset by Tank type (→ 🗎 132). It can, however, be adjusted to the process in the vessel at any time. If **Tank type** ( $\rightarrow \equiv 132$ ) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

Navigation

Prerequisite 

Description Select expected maximum draining speed.

Selection ■ Slow < 1cm (0,4in) /min

Max. draining speed liquid

■ Medium < 10cm (4in) /min ■ Standard < 1m (40in) /min ■ Fast < 2m (80in) /min

■ Very fast > 2m (80in) /min

■ No filter / test

**Factory setting** Depending on the **Tank type** parameter ( $\rightarrow \triangleq 132$ )

Endress+Hauser 145

 $\blacksquare$  ■ Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Max. draining speed liquid

#### Additional information

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Max. draining speed liquid (→ 🖺 145)	Step response time / s
Slow < 1cm (0,4in) /min	90
Medium < 10cm (4in) /min	50
Standard < 1m (40in) /min	20
Fast < 2m (80in) /min	8
Very fast > 2m (80in) /min	5
No filter / test	< 1

Max. draining speed liquid (→ 🗎 145) is preset by Tank type (→ 🖺 132). It can, however, be adjusted to the process in the vessel at any time. If Tank type (→ 🖺 132) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

## Advanced process conditions

A

**Navigation** 

Description

Specify additional process conditions (if required).

Selection

- Foam (>5cm/0,16ft)
- Changing DC values
- Small tanks (< 1m/3ft)

## **Factory setting**

None

#### Additional information

"Foam (>5cm/0,16ft)" option

This option makes sure that no tank history is used which has been recorded while foam was present at the surface and thus is no reliable map of the tank property. To achieve this, the setting **Evaluation mode** = **Long time history** is deactivated.

The **Foam (>5cm/0,16ft)** option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54).

"Changing DC values" option

A tank history which has been recorded with **Evaluation mode** = **Long time history** is only valid for a fixed dielectric constant. The **Changing DC values** option disables the setting **Evaluation mode** = **Long time history** and thus avoids wrong measuring values in the case of a changing dielectric constant.

The **Changing DC values** option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54).

"Small tanks (< 1m/3ft)" option

This option provides a simple possibility to reduce the echo width of the sensor module. This enables an improved detection of superimposed echos - especially in the near field. Internally, all paramters related to the echo width are adjusted by this option.

The **Small tanks (< 1m/3ft)** option is only available for liquid measurements with 26 GHz HF module (FMR50, FMR51, FMR52).

146

Level unit

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Level unit

**Description** Select level unit.

Selection  $SI \ units$   $US \ units$   $\bullet \ \%$ 

Factory setting %

**Additional information** The level unit may differ from the distance unit defined in the **Distance unit** parameter  $(\rightarrow \implies 132)$ :

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** ( $\rightarrow \implies 133$ ) and **Full calibration** ( $\rightarrow \implies 134$ )).
- The unit defined in the **Level unit** parameter is used to display the (unlinearized) level.

Blocking distance

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Blocking distance

**Description** Specify blocking distance BD.

**User entry** 0 to 200 m

**Factory setting** • FMR50, FMR51, FMR53, FMR54: antenna length

• FMR52: antenna length + 200 mm (7.9 in)

Additional information


Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

This behavior is only valid if the following two conditions are met:

- Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history
- Expert → Sensor → Gas phase compensation → GPC mode= On, Without correction or External correction

If one of these conditions is not met, signals in the blocking distance will always be ignored.

If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

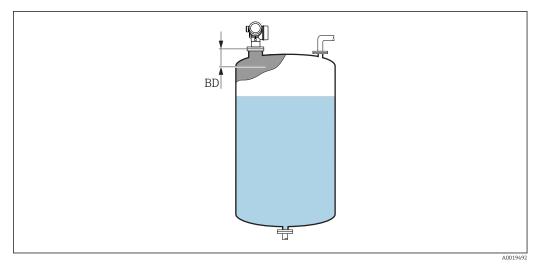

■ 36 Blocking distance (BD) for liquid measurements

Level correction ①

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Level correction

**Description** Specify level correction (if required).

User entry -200 000.0 to 200 000.0 %

**Factory setting** 0.0 %

**Additional information** The value specified in this parameter is added to the measured level (before linearization).

Tank/silo height

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Level  $\rightarrow$  Tank/silo height

**Description** Specify total height of the tank or silo as measured from the process connection.


**User entry** -999.9999 to 999.9999 m

Factory setting Empty calibration ( $\rightarrow \equiv 133$ )

**Additional information** If the parametrized measuring range (**Empty calibration** ( $\rightarrow \triangleq 133$ )) differs significantly

from the tank or silo height, it is recommended to enter the tank or silo height. Example:

Continuous level monitoring in the upper third of a tank or silo.

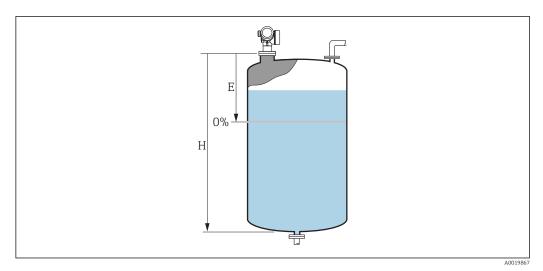


■ 37 "Tank/silo height" parameter (ightarrow 🖺 148)' for measurements in liquids

E Empty calibration ( $\rightarrow$  🖺 133)

H Tank∕silo height (→ 🖺 148)

For tanks with conical outlet, **Tank/silo height** should not be changed as in this type of applications **Empty calibration** (→ 🗎 133) is usually **not** << the tank or silo height.

#### "Linearization" submenu

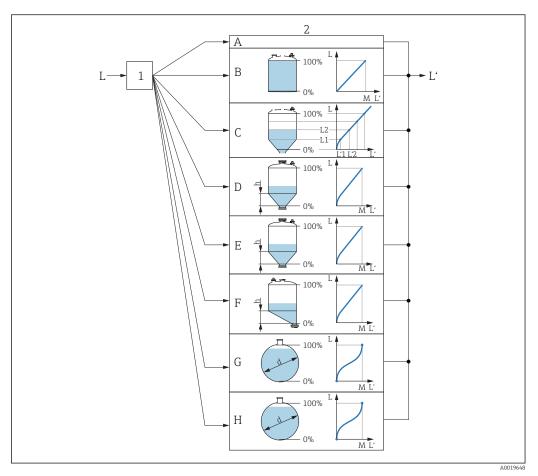


■ 38 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

- Selection of linearization type and unit 1
- Configuration of the linearization 2
- Linearization type ( $\rightarrow \triangleq 153$ ) = None Linearization type ( $\rightarrow \triangleq 153$ ) = Linear Α
- В
- Linearization type ( $\rightarrow \blacksquare 153$ ) = Table С
- *Linearization type* ( $\rightarrow \blacksquare 153$ ) = *Pyramid bottom*
- Linearization type ( $\rightarrow \equiv 153$ ) = Conical bottom Е
- F Linearization type ( $\rightarrow \equiv 153$ ) = Angled bottom
- Linearization type ( $\rightarrow \triangleq 153$ ) = Horizontal cylinder G
- *Linearization type* ( $\rightarrow \square 153$ ) = *Sphere* Н
- Level before linearization (measured in distance units) L
- Level linearized ( $\rightarrow \equiv 155$ ) (corresponds to volume or weight) L'
- Μ *Maximum value (→ 🖺 156)*
- *Diameter* (→ 🖺 156) d
- Intermediate height ( $\rightarrow \blacksquare 156$ )


150

Structure of the submenu on the display module

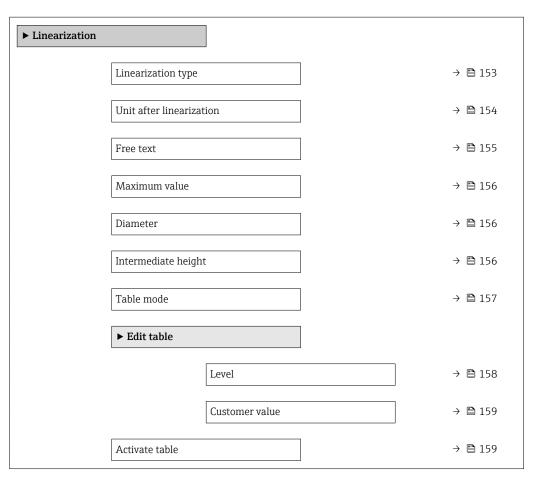

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization

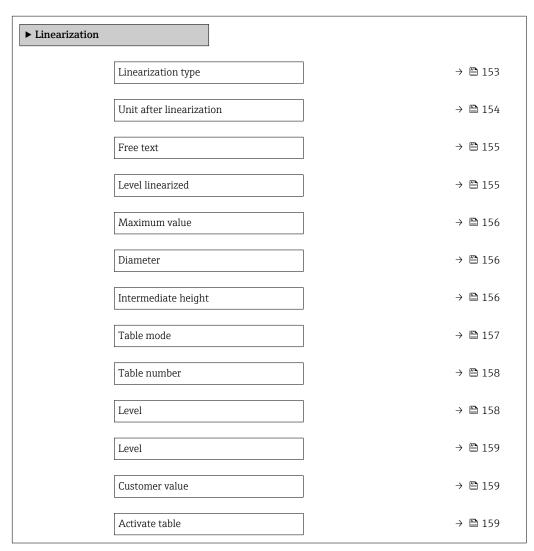

## Description of parameters

Navigation 

#### Linearization type

Navigation 

Description Select linearization type.

Selection None


Linear

- Table
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

## **Factory setting**

## None

#### Additional information

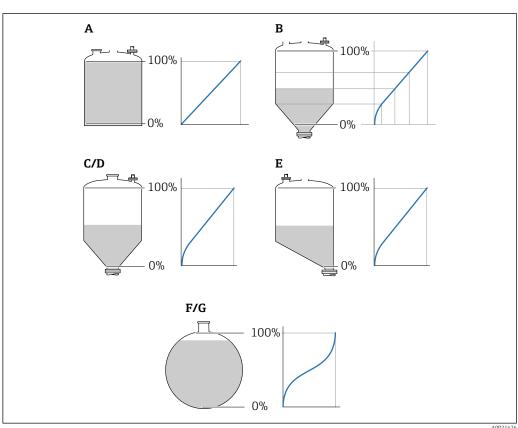

**■** 39 *Linearization types* 

- Α None
- В Table
- С Pyramid bottom
- D Conical bottom
- Е Angled bottom
- F Sphere
- Horizontal cylinder

Endress+Hauser 153

A0021476

#### Meaning of the options

#### None

The level is transmitted in the level unit without linearization.

#### Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- Unit after linearization ( $\rightarrow$   $\stackrel{\triangle}{=}$  154)

#### Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 154)
- Table mode (→ 🗎 157)
- For each table point: **Level** ( $\rightarrow$   $\stackrel{\triangle}{=}$  **158**)
- For each table point: **Customer value** (→ 🖺 **159**)

#### Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🖺 154)
- **Maximum value** (→ 🗎 **156**): Maximum volume or weight
- **Intermediate height (→ 156)**: The height of the pyramid

#### Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🖺 154)
- **Maximum value** (→ 🖺 **156**): Maximum volume or weight
- **Intermediate height (→** 🗎 **156)**: The height of the conical part of the tank

#### Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 154)
- **Maximum value (→ 🖺 156)**: Maximum volume or weight
- **Intermediate height (→ 🖺 156)**: Height of the angled bottom

## Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- **Maximum value** (→ 🖺 **156**): Maximum volume or weight
- Diameter (→ 🖺 156)

## Sphere

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 154)
- **Maximum value (→ 🗎 156)**: Maximum volume or weight
- Diameter (→ 🖺 156)

Unit after linearization

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Unit after linearization

Prerequisite Linearization type ( $\rightarrow \triangleq 153$ )  $\neq$  None

**Description** Select unit of the lineaized value.

SelectionSI unitsUS unitsImperial units■ STon■ lbimpGal

UsGal

■ ft<sup>3</sup>

- t ■ kg
- cm<sup>3</sup>
- m³
- hl
- l ■ %

Custom-specific units

Free text

Factory setting %

# **Additional information** The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter ( $\Rightarrow \implies 155$ ).

Free text

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Free text

Prerequisite Unit after linearization (→ 🖺 154) = Free text

**Description** Enter unit symbol.

**User entry** Up to 32 alphanumerical characters (letters, numbers, special characters)

**Factory setting** Free text

#### Level linearized

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Level linearized

**Description** Displays linearized level.


**Additional information** The unit is defined by the **Unit after linearization** parameter  $\rightarrow \triangleq 154$ .

Maximum value		
Navigation		
Prerequisite	<b>Linearization type (→ 🖺 153)</b> has one of the following values:	
	<ul><li>Linear</li><li>Pyramid bottom</li></ul>	
	■ Conical bottom	
	<ul><li>Angled bottom</li><li>Horizontal cylinder</li></ul>	
	■ Sphere	
User entry	-50 000.0 to 50 000.0 %	
Factory setting	100.0 %	
Diameter		Â
Navigation		
Navigation	Setup 7 Auvanted Setup 7 Linearization 7 Diameter	
Prerequisite	Linearization type (→ 🗎 153) has one of the following values:	
	<ul><li>Horizontal cylinder</li><li>Sphere</li></ul>	
User entry	0 to 9 999.999 m	
Factory setting	2 m	
Additional information	The unit is defined in the <b>Distance unit</b> parameter ( $\rightarrow \triangleq 132$ ).	
Intermediate height		
Navigation		
Prerequisite	<b>Linearization type (→ 🖺 153)</b> has one of the following values:	
	<ul><li>Pyramid bottom</li><li>Conical bottom</li></ul>	
	■ Angled bottom	
User entry	0 to 200 m	

Factory setting

0 m

#### Additional information

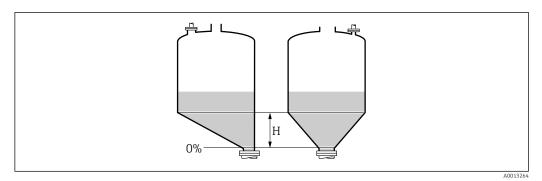

H Intermediate height

The unit is defined in the **Distance unit** parameter ( $\Rightarrow \triangleq 132$ ).

Table mode

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Table mode

Prerequisite Linearization type (→ 🗎 153) = Table

**Description** Select editing mode of the linearization table.

Selection • Manual

Semiautomatic \*Clear table

■ Sort table

Factory setting Manual

# Additional information

# Meaning of the options

#### Manual

The level and the associated linearized value are entered manually for each linearization point.

#### Semiautomatic

The level is measured by the device for each linearization point. The associated linearized value is entered manually.

#### Clear table

Deletes the existing linearization table.

# Sort table

Rearranges the linerization points into an ascending order.

<sup>\*</sup> Visibility depends on order options or device settings

#### Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.
- Before entering a linearization table, the values for **Empty calibration** ( $\rightarrow \equiv 133$ ) and **Full calibration** ( $\rightarrow \equiv 134$ ) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode**  $(\rightarrow \ \ \ )$  **157)** = **Clear table**). Then enter a new table.

## How to enter the table

■ Via FieldCare

The table points can be entered via the **Table number** ( $\rightarrow$  🖺 **158**), **Level** ( $\rightarrow$   $\rightleftharpoons$  **158**) and **Customer value** ( $\rightarrow$   $\rightleftharpoons$  **159**) parameters. As an alternative, the graphic table editor may be used: Device Operation  $\rightarrow$  Device Functions  $\rightarrow$  Additional Functions  $\rightarrow$  Linearization (Online/Offline)

- Via local display
  - Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.
- The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter  $(\rightarrow \implies 147)$  beforehand.

Table number			
Navigation			
Prerequisite	Linearization type (→ 🗎 153) = Table		
Description	Select table point you are going to enter or change.		
User entry	1 to 32		
Factory setting	1		
Level (Manual)			
Navigation			
Prerequisite	<ul> <li>Linearization type (→ 🗎 153) = Table</li> <li>Table mode (→ 🖺 157) = Manual</li> </ul>		
Description	Enter level value of the table point (value before linearization).		

Signed floating-point number

158

**User entry** 

**Factory setting** 0 %

Level (Semiautomatic)

Description

**Navigation** 

Customer value

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Level

Prerequisite • Linearization type ( $\rightarrow$  🖺 153) = Table

■ Table mode (→ 🗎 157) = Semiautomatic

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Customer value

Displays measured level (value before linearization). This value is transmitted to the table.

Prerequisite Linearization type ( $\rightarrow \equiv 153$ ) = Table

**Description** Enter linearized value for the table point.

**User entry** Signed floating-point number

**Factory setting** 0 %

Activate table

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization  $\rightarrow$  Activate table

Prerequisite Linearization type ( $\rightarrow \triangleq 153$ ) = Table

**Description** Activate (enable) or deactivate (disable) the linearization table.

**Selection** ■ Disable

■ Enable

Factory setting Disable

Additional information Meaning of the options

Disable

The measured level is not linearized.

If **Linearization type** ( $\rightarrow$  **153**) = **Table** at the same time, the device issues error message F435.

■ Enable

The measured level is linearized according to the table.

When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

## "Safety settings" submenu

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings

Output echo lost

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Output echo lost

**Description** Output signal in case of a lost echo.

**Selection** ■ Last valid value

Ramp at echo lostValue echo lost

Alarm

**Factory setting** Last valid value

Additional information Meaning of the options

Last valid value

The last valid value is kept in the case of a lost echo.

Ramp at echo lost <sup>9)</sup>

In the case of a lost echo the output value is continously shifted towards 0% or 100%. The slope of the ramp is defined in the **Ramp at echo lost** parameter ( $\rightarrow \stackrel{\triangle}{=} 161$ ).

Value echo lost 9)

In the case of a lost echo the output assumes the value defined in the **Value echo lost** parameter ( $\Rightarrow \triangleq 160$ ).

Alarm

In the case of a lost echo the device generates an alarm; see the Failure mode parameter

Value echo lost

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Value echo lost

Prerequisite Output echo lost  $( \Rightarrow \triangle 160) =$ Value echo lost

**Description** Output value in case of a lost echo

**User entry** 0 to 200 000.0 %

**Factory setting** 0.0 %

**Additional information** Use the unit which has been defined for the measured value output:

■ without linearization: **Level unit** (→ 🖺 147)

with linearization: Unit after linearization (→ 

☐ 154)

<sup>9)</sup> Only visible if "Linearization type (→ 🖺 153)" = "None"

Ramp at echo lost

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Ramp at echo lost


Prerequisite Output echo lost ( $\rightarrow \triangleq 160$ ) = Ramp at echo lost

Description Slope of the ramp in the case of a lost echo

User entry Signed floating-point number

**Factory setting** 0.0 %/min

#### Additional information

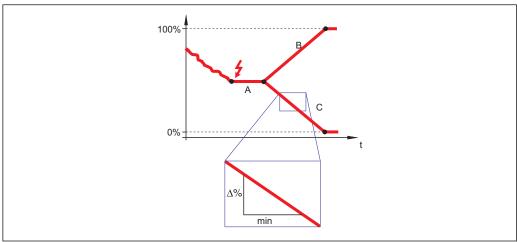

- Delay time echo lost
- Ramp at echo lost ( $\rightarrow \square 161$ ) (positive value)
- Ramp at echo lost ( $\Rightarrow = 161$ ) (negative value)
- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/ min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuouly increased until it reaches 100%.

Blocking distance	

Navigation Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety settings  $\rightarrow$  Blocking distance

Description Specify blocking distance BD.

User entry 0 to 200 m

• FMR50, FMR51, FMR53, FMR54: antenna length **Factory setting** 

• FMR52: antenna length + 200 mm (7.9 in)

Additional information


Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a

level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- This behavior is only valid if the following two conditions are met:
  - Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history
  - Expert → Sensor → Gas phase compensation → GPC mode= **On**, **Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

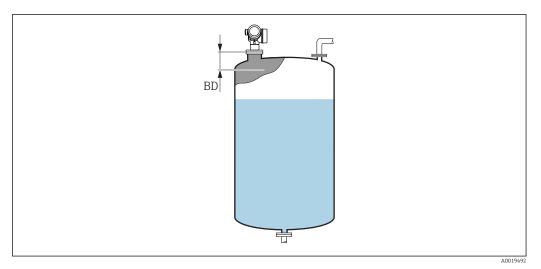

■ 40 Blocking distance (BD) for liquid measurements

## "Switch output" submenu

The **Switch output** submenu ( $\rightarrow \triangleq 163$ ) is only visible for devices with switch output.  $^{10)}$ 

*Navigation*  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output

Switch output function

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch output function

**Description** Select function for switch output.

Selection • Off

■ On

Diagnostic behavior

■ Limit

■ Digital Output

Factory setting Off

## Additional information Meaning of the options

Off

The output is always open (non-conductive).

On

The output is always closed (conductive).

Diagnostic behavior

The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter ( $\rightarrow \triangleq 164$ ) determines for which type of event the output is opened.

Limit

The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:

- Assign limit (→ 🖺 164)

- Switch-on value (→ 🖺 165)

- Switch-off value (→  $\stackrel{\triangle}{=}$  166)

Digital Output

The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter ( $\Rightarrow \triangleq 163$ ).

The **Off** and **On** options can be used to simulate the switch output.

Assign status

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Assign status

Prerequisite Switch output function (→ 🖺 163) = Digital Output

**Description** Select device status for switch output.

<sup>10)</sup> Ordering feature 020 "Power supply; Output", option B, E or G

Selection

■ Off

Off

- Digital output AD 1
- Digital output AD 2
- Digital output 1
- Digital output 2
- Digital output 3
- Digital output 4
- Digital output 5
- Digital output 6Digital output 7
- Digital output 8

Factory setting

Additional information

The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Assign limit

Prerequisite Switch output function ( $\rightarrow \equiv 163$ ) = Limit

Selection ■ Off

Level linearized

- Distance
- Terminal voltage
- Electronic temperature
- Relative echo amplitude
- Area of incoupling

Factory setting Off

Assign diagnostic behavior

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Assign diagnostic behavior

Prerequisite Switch output function (→ 🖺 163) = Diagnostic behavior

**Description** Select diagnostic behavior for switch output.

**Selection** ■ Alarm

Alarm or warning

Warning

Factory setting Alarm

164

Switch-on value 

Navigation Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-on value

Switch output function (→ 🗎 163) = Limit Prerequisite

Description Enter measured value for the switch-on point.

User entry Signed floating-point number


0 **Factory setting** 

Additional information

The switching behavior depends on the relative position of the **Switch-on value** and Switch-off value parameters:

## Switch-on value > Switch-off value


- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

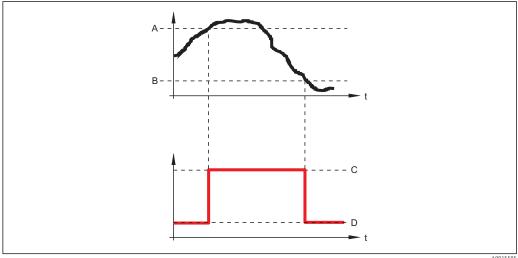

- Switch-on value
- Switch-off value
- С Output closed (conductive)
- Output opened (non-conductive)

#### Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

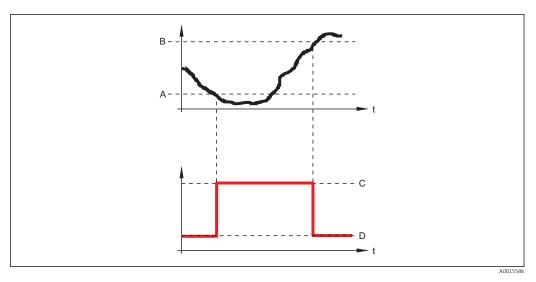

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay	
Switch on delay	

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-on delay

Prerequisite ■ Switch output function (→ 🖺 163) = Limit

■ Assign limit (→ 🗎 164) ≠ Off

**Description** Define delay for the switch-on of status output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-off value

Prerequisite Switch output function (→ 🖺 163) = Limit

**Description** Enter measured value for the switch-off point.

**User entry** Signed floating-point number

Factory setting 0

**Additional information** The switching behavior depends on the relative position of the **Switch-on value** and

**Switch-off value** parameters; description: see the **Switch-on value** parameter

(→ 🖺 165).

Switch-off delay

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch-off delay

Prerequisite • Switch output function ( $\rightarrow \stackrel{\triangle}{=} 163$ ) = Limit

■ Assign limit (→ 🖺 164) ≠ Off

**Description** Define delay for the switch-off of status output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

Failure mode

**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Failure mode

Prerequisite Switch output function (→ 🖺 163) = Limit or Digital Output

**Description** Define output behavior in alarm condition.

**Selection** • Actual status

OpenClosed

**Factory setting** Open

Additional information

Switch status

**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Switch status

**Description** Shows the current switch output status.

Invert output signal

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output  $\rightarrow$  Invert output signal

**Description** Invert the output signal.

Selection ■ No

Yes

Factory setting No

# Additional information

## Meaning of the options

No

The behavior of the switch output is as described above.

Yes

The states **Open** and **Closed** are inverted as compared to the description above.

168

# "Display" submenu

The **Display** submenu is only visible if a display module is connected to the device.

Navigation 

## Language

**Navigation** 

Description Set display language.

Selection ■ English

Deutsch

■ Français ■ Español

■ Italiano

Nederlands

Portuguesa

■ Polski

**■** русский язык (Russian) \*

Svenska

Türkçe

■ 中文 (Chinese) \*

■ 日本語 (Japanese) \*

■ 한국어 (Korean) \*
■ Bahasa Indonesia \*

tiếng Việt (Vietnamese)

čeština (Czech)

**Factory setting** The language selected in feature 500 of the product structure.

If no language has been selected: English

#### Additional information

# Format display

**Navigation** 

Description Select how measured values are shown on the display.

Selection ■ 1 value, max. size

■ 1 bargraph + 1 value

■ 2 values

■ 1 value large + 2 values

4 values


**Factory setting** 1 value, max. size

Visibility depends on order options or device settings


#### Additional information




■ 41 "Format display" = "1 value, max. size"

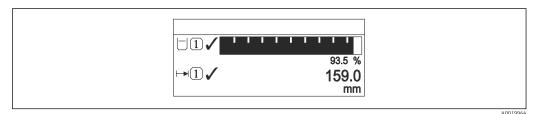


■ 42 "Format display" = "1 bargraph + 1 value"

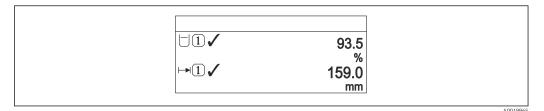

■ 43 "Format display" = "2 values"

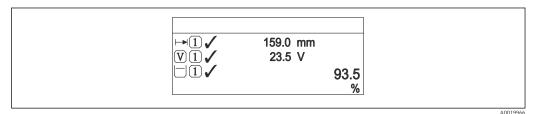

🖪 44 - "Format display" = "1 value large + 2 values"

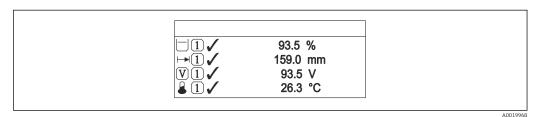

■ 45 "Format display" = "4 values"

- **The Value 1 to 4 display**  $\rightarrow$   $\stackrel{\triangle}{=}$  171 parameters specify which measured values are shown on the display and in which order.
  - If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter ( $\rightarrow \implies 172$ ).

Value 1 to 4 display		
Navigation	Setup → Advanced setup → Display → Value 1 display	
Description	Select the measured value that is shown on the local display.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> <li>Analog output 1</li> <li>Analog output 2</li> <li>Analog output 3</li> <li>Analog output 4</li> <li>Analog output 5</li> <li>Analog output 6</li> <li>Analog output 7</li> <li>Analog output 8</li> <li>Area of incoupling</li> </ul>	
Factory setting	■ Value 1 display: Level linearized	

Decimal places 1 to 4	C	

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Decimal places 1

**Description** Select the number of decimal places for the display value.

Value 2 display: NoneValue 3 display: NoneValue 4 display: None

Selection ■ x

X.XX.XXX.XXXX.XXXX

Factory setting x.xx

**Additional information** The setting does not affect the measuring or computational accuracy of the device.

#### Display interval

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Display interval

**Description** Set time measured values are shown on display if display alternates between values.

**User entry** 1 to 10 s

**Factory setting** 5 s

**Additional information** This parameter is only relevant if the number of selected measuring values exceeds the

number of values the selected display format can display simultaneously.

#### Display damping

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Display damping

**Description** Set display reaction time to fluctuations in the measured value.

**User entry** 0.0 to 999.9 s

**Factory setting** 0.0 s

# Header 🗈

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Header


**Description** Select header contents on local display.

**Selection** ■ Device tag

■ Free text

**Factory setting** Device tag

#### Additional information

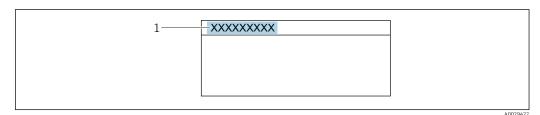

1 Position of the header text on the display

Meaning of the options

Device tag

Is defined in the **Device tag** parameter

Free text

Is defined in the **Header text** parameter ( $\rightarrow \implies 173$ )

172

Header text

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Header text

Prerequisite Header (→ 🗎 172) = Free text

**Description** Enter display header text.

Factory setting ------

**Additional information** The number of characters which can be displayed depends on the characters used.

Separator

**Navigation**  $\blacksquare \blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Separator

**Description** Select decimal separator for displaying numerical values.

Selection • .

■ ,

Factory setting .

Number format

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Number format

**Description** Choose number format for the display.

Selection • Decimal

■ ft-in-1/16"

Factory setting Decimal

**Additional information** The **ft-in-1/16"** option is only valid for distance units.

Decimal places menu

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Decimal places menu

**Description** Select number of decimal places for the representation of numbers within the operating

menu.

Selection

■ X

■ X.X

x.xxx.xxx

X.XXXX

**Factory setting** 

X.XXXX

Additional information

- Is only valid for numbers in the operating menu (e.g. **Empty calibration**, **Full calibration**), but not for the measured value display. The number of decimal places for the measured value display is defined in the **Decimal places 1 to 4** → 🖺 171 parameters.
- The setting does not affect the accuracy of the measurement or the calculations.

# **Backlight**

**Navigation**  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Backlight

**Prerequisite** The device has the SD03 local display (with optical keys).

**Description** Switch the local display backlight on and off.

Selection • Disable • Enable

**Factory setting** Disable

Additional information

Meaning of the options

Disable

Switches the backlight off.

Enable

Switches the backlight on.

i

Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

## Contrast display

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Contrast display

**Description** Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).

User entry 20 to 80 %

**Factory setting** Dependent on the display.

Additional information

Setting the contrast via push-buttons:

- Darker: press the 🔘 🖲 buttons simultaneously.
- Brighter: press the 🕦 📵 buttons simultaneously.

## "Configuration backup display" submenu

i

This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configurateion can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display

U	pei	ratır	1g 1	time

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display  $\rightarrow$  Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time* 

9999 d (≈ 27 years)

#### Last backup

**Navigation**  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display  $\rightarrow$  Last backup

**Description** Indicates when the last data backup was saved to the display module.

## **Configuration management**

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup display  $\rightarrow$  Configuration

management

**Description** Select action for managing the device data in the display module.

**Selection** • Cancel

Execute backup

■ Restore

■ Duplicate

Compare

Clear backup data

■ Display incompatible

Factory setting Cancel

#### Additional information

#### Meaning of the options

#### Cancel

No action is executed and the user exits the parameter.

## Execute backup

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

#### Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

#### Duplicate

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

#### Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter ( $\rightarrow \implies 176$ ).

#### Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
- If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state	
Navigation	
Description	Displays which backup action is currently in progress.
Comparison result	
Navigation	
Description	Comparison between present device data and display backup.

#### Additional information

## Meaning of the display options

#### Settings identical

The current device configuration of the HistoROM is identical to the backup copy in the display module.

## Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

#### ■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

## Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

#### Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

## ■ Dataset incompatible

The data sets are incompatible and can not be compared.

- To start the comparison, set **Configuration management** ( $\rightarrow \equiv 175$ ) = **Compare**.
- If the transmitter configuration has been duplicated from a different device by Configuration management (→ 🖺 175) = Duplicate, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be Settings not identical.

#### "Administration" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

Define access code

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code

**Description** Define release code for write access to parameters.

**User entry** 0 to 9999

Factory setting 0

#### Additional information

- If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
- The write protection affects all parameters marked with the symbol in this document. On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.
- Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter  $(\rightarrow \implies 143)$ .
- Please contact your Endress+Hauser Sales Center if you lose your access code.
- For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter ( $\rightarrow \triangleq 180$ ).

Device reset

**Navigation**  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset

**Selection** • Cancel

■ To fieldbus defaults

■ To factory defaults

■ To delivery settings

Of customer settings

■ To transducer defaults

Restart device

Factory setting Cancel

#### Additional information

## Meaning of the options

#### Cancel

No action

#### ■ To factory defaults

All parameters are reset to the order-code specific factory setting.

## ■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

#### Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

#### ■ To transducer defaults

Every measurment-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

#### Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard

The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Define access code			
Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Administration $\rightarrow$ Define access code $\rightarrow$ Define access code	SS
Description	→ <b>E</b>	178	
Confirm access code			

**Navigation** Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code  $\rightarrow$  Confirm access code

**Description** Confirm the entered access code.

**User entry** 0 to 9 999

Factory setting 0

## 17.4 "Diagnostics" menu

# **Actual diagnostics Navigation** Diagnostics → Actual diagnostics Description Displays current diagnostic message. Additional information The display consists of: Symbol for event behavior Code for diagnostic behavior Operating time of occurrence Event text If several messages are active at the same time, the messages with the highest priority is displayed. Information on what is causing the message, and remedy measures, can be viewed via the (i) symbol on the display. **Timestamp Navigation** Diagnostics → Timestamp **Previous diagnostics** Navigation Diagnostics → Previous diagnostics

**Additional information** The display consists of:

Description

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text
- The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the ③ symbol on the display.

Displays the last diagnostic message which has been active before the current message.

T:	Acts	

Navigation

 $\square$  Diagnostics  $\rightarrow$  Timestamp

### Operating time from restart

**Description** Displays the time the device has been in operation since the last device restart.

### Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time* 

9999 d (≈ 27 years)

## 17.4.1 "Diagnostic list" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Diagnostic list

Diagnostics 1 to 5

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Diagnostic list  $\rightarrow$  Diagnostics 1

**Description** Display the current diagnostics messages with the highest to fifth-highest priority.

**Additional information** The display consists of:

Symbol for event behaviorCode for diagnostic behaviorOperating time of occurrence

Event text

Timestamp 1 to 5

**Navigation** □ Diagnostics → Diagnostic list → Timestamp

## 17.4.2 "Event logbook" submenu



The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation

Filter options

#### Navigation

Diagnostics → Event logbook → Filter options

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

#### **Factory setting**

All

#### Additional information



- This parameter is only used for operation via the local display.
- The status signals are categorized according to NAMUR NE 107.

#### "Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter ( $\rightarrow \implies 184$ ). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- ①: Event has occurred
- 🕒: Event has ended
- Information on what is causing the message, and remedy instructions, can be viewed via the ①-button.

#### Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  $\square$  Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Event list

## 17.4.3 "Device information" submenu

*Navigation*  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Device information

Device tag		
Navigation	<ul> <li>□ Diagnostics → Device information → Device tag</li> <li>□ Diagnostics → Device information → Device tag</li> </ul>	
Description	Enter tag for measuring point.	
Factory setting	FMP5x	
Serial number		
Navigation	<ul> <li>□ Diagnostics → Device information → Serial number</li> <li>□ Diagnostics → Device information → Serial number</li> </ul>	
Additional information	Uses of the serial number ■ To identify the device quickly, e.g. when contacting Endress+Hauser. ■ To obtain specific information on the device using the Device Viewer: www.endress.com/deviceviewer  The serial number is also indicated on the nameplate.	

Firmware version	
Navigation	<ul> <li>□ Diagnostics → Device information → Firmware version</li> <li>□ Diagnostics → Device information → Firmware version</li> </ul>
User interface	xx.yy.zz
Additional information	For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name			
Navigation		Diagnostics $\rightarrow$ Device information $\rightarrow$ Device name	
Order code			
Navigation		Diagnostics $\rightarrow$ Device information $\rightarrow$ Order code	
		Diagnostics $\rightarrow$ Device information $\rightarrow$ Order code	
Additional information	The order code is generated from the extended roder code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.		
Extended order code 1 to 3			
NT			
Navigation		Diagnostics $\rightarrow$ Device information $\rightarrow$ Extended order code 1	
		Diagnostics $\rightarrow$ Device information $\rightarrow$ Extended order code 1	
Description	Display the three parts of the extended order code.		
Additional information	The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.		

### 17.4.4 "Measured values" submenu

Navigation  $\Box$  Diagnostics  $\rightarrow$  Measured values


#### **Distance**

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Distance

**Description** Displays the measured distance D between the reference point (lower edge of the flange or

threaded connection) and the level.

#### Additional information

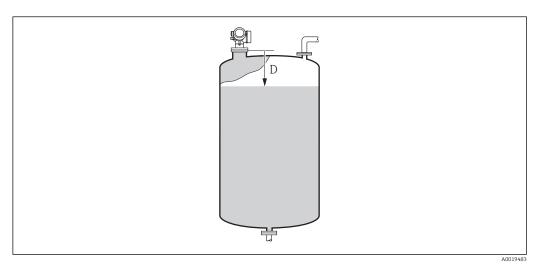

46 Distance for liquid measurements

The unit is defined in the **Distance unit** parameter ( $\rightarrow \triangleq 132$ ).

#### Level linearized

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Level linearized

**Description** Displays linearized level.

**Additional information** The unit is defined by the **Unit after linearization** parameter  $\rightarrow \triangleq 154$ .

Terminal	voltage	1
----------	---------	---

Navigation

□ Diagnostics → Measured values → Terminal voltage 1

#### Electronic temperature

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Measured values  $\rightarrow$  Electronic temperature

**Description** Displays the current temperature of the electronics.

**Additional information** The unit is defined in the **Temperature unit** parameter.

## 17.4.5 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 5

#### Block tag

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Analog input  $\Rightarrow$  Analog input 1 to  $\Rightarrow$  Block tag

**Description** Defined to be unique throughout the control system at one plant site. The tag may be

changed using the FB Tag service.

#### **Factory setting**

#### Channel

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Analog input 1 to 5  $\rightarrow$  Channel

**Description** Use this function to select the input value that should be processed in the Analog Input

function block.

**Selection** • Uninitialized

- Level linearized
- Absolute echo amplitude
- Distance
- Electronic temperature

- Relative echo amplitude
  Analog output adv. diagnostics 1
  Analog output adv. diagnostics 2
  Terminal voltage

Factory setting	Uninitialized
-----------------	---------------

Status	
Navigation	
Description	Indicates the status of the output of the AI block according to the FOUNDATION Fieldbus specification.
Value	
Navigation	
Description	Indicates the output value of the AI block.
Units index	
Navigation	
Description	Indicates the unit of the output value.

#### 17.4.6 "Data logging" submenu

 □ □ Diagnostics → Data logging Navigation

Diagnostics → Data logging → Assign channel 1 to 4

#### Assign channel 1 to 4

**Navigation** 

Selection Off

- Level linearized
- Distance

- Terminal voltage
- Electronic temperature
- Absolute echo amplitude
- Relative echo amplitude
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

#### **Factory setting**

Off

#### Additional information

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

The logged data are deleted if a new option is selected in this parameter.

#### Logging interval

#### **Navigation**

□ Diagnostics → Data logging → Logging interval

User entry

1.0 to 3600.0 s

#### **Factory setting**

30.0 s

#### Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time  $T_{log}$ :

- If 1 logging channel is used: T  $_{log}$  = 1000  $\cdot$  t  $_{log}$  If 2 logging channels are used: T  $_{log}$  = 500  $\cdot$  t  $_{log}$
- If 3 logging channels are used:  $T_{log} = 333 \cdot t_{log}$
- If 4 logging channels are used:  $T_{log} = 250 \cdot t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T  $_{log}$  always remains in the memory (ring memory principle).

The logged data are deleted if this parameter is changed.

#### Example

## When using 1 logging channel

- $T_{log}$  = 1000 · 1 s = 1000 s ≈ 16.5 min  $T_{log}$  = 1000 · 10 s = 1000 s ≈ 2.75 h  $T_{log}$  = 1000 · 80 s = 80000 s ≈ 22 h  $T_{log}$  = 1000 · 3600 s = 3600000 s ≈ 41 d

Clear logging data		
Navigation	${\tt Diagnostics} \rightarrow {\tt Data} \ {\tt logging} \rightarrow {\tt Clear} \ {\tt logging} \ {\tt data}$	

Selection Cancel ■ Clear data


**Factory setting** Cancel

#### "Display channel 1 to 4" submenu



The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM".

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

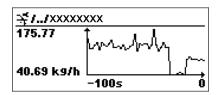

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.
- To return to the operating menu, press  $\pm$  and  $\Box$  simultaneaously.

Navigation

#### "Simulation" submenu 17.4.7

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.


Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul> <li>Assign measurement variable (→ ■ 196)</li> <li>Value process variable (→ ■ 196)</li> </ul>
Specific state of the switch output	<ul> <li>Switch output simulation (→ ■ 196)</li> <li>Switch status (→ ■ 197)</li> </ul>
Existence of an alarm	Simulation device alarm (→ 🖺 197)

#### Enable/disable simulation


The simulation of measured values can be enabled or disabled via a hardware switch (SIM switch) at the electronics. Simulating a measured value is only possible if the SIM switch is in the ON position.

The switch output can always be simulated, irrespective of the position of the SIM switch.

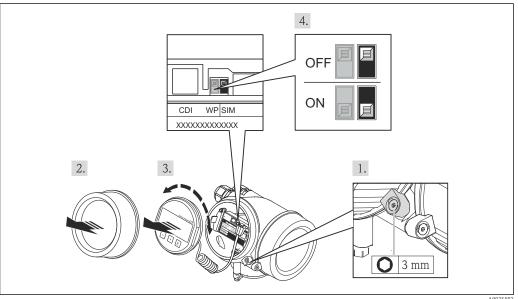

- 1. Loosen the securing clamp.
- 2. Unscrew the housing cover.

- 3. Pull out the display module with a gentle rotation movement. To make it easier to access the SIM switch, attach the display module to the edge of the electronics compartment.
  - ► Display module is attached to the edge of the electronics compartment.

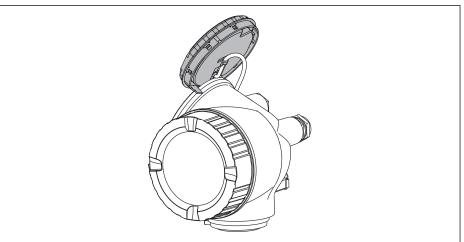


Δ0013909

- 4. SIM switch in the **ON** position: measured values can be simulated. SIM switch in the **OFF** position (factory setting): Simulation of measured values is disabled.
- 5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
- 6. Screw the electronics compartment cover closed and tighten the securing clamp.

#### Structure of the submenu

Navigation  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation

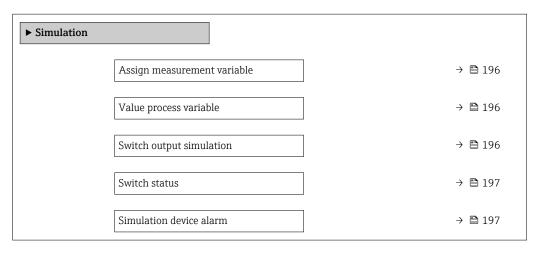

#### **Description of parameters**

Navigation  $\blacksquare \square$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation

#### Assign measurement variable

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Assign measurement variable

Selection ■ Off

Level

Level linearized

Factory setting

Off

Additional information

- The value of the variable to be simulated is defined in the **Value process variable** parameter ( $\rightarrow \triangleq 196$ ).
- If **Assign measurement variable** ≠ **Off**, a simulation is active. This is indicated by a diagnotic message of the *Function check (C)* category.

#### Value process variable

**Navigation**  $\blacksquare \blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Value process variable

Prerequisite Assign measurement variable ( $\rightarrow \triangleq 196$ )  $\neq 0$ ff

**User entry** Signed floating-point number

Factory setting 0

Additional information

Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

#### Switch output simulation

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Switch output simulation

**Description** Switch the simulation of the switch output on and off.

Selection ■ Off ■ On

**Factory setting** Off

196

Switch status

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Switch status

Prerequisite Switch output simulation ( $\Rightarrow \triangleq 196$ ) = On

**Description** Select the status of the status output for the simulation.

Selection • Open

Closed

Factory setting Open

**Additional information** The switch status assumes the value defined in this parameter. This helps to check correct

operation of connected control units.

Simulation device alarm

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Simulation device alarm

**Description** Switch the device alarm on and off.

Selection ■ Off

On

**Factory setting** Off

**Additional information** When selecting the **On** option, the device generates an alarm. This helps to check the

correct output behavior of the device in the case of an alarm.

An active simulation is indicated by the diagnostic message **⊗C484 Simulation failure** 

mode.

Simulation diagnostic event

**Navigation**  $\blacksquare$  Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Simulation diagnostic event

**Description** Select a diagnostic event for the simulation process that is activated.

**Factory setting** Off

**Additional information** When operated via the local display, the selection list can be filtered according to the event

categories (**Diagnostic event category** parameter).

#### 17.4.8 "Device check" submenu

Navigation  $\Box$  Diagnostics  $\rightarrow$  Device check

Start device check

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Start device check

**Description** Start a device check.

Selection ■ No

Yes

Factory setting No

**Additional information** In the case of a lost echo a device check can not be performed.

Result device check

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Result device check

**Description** Displays the result of the device check.

Additional information Meaning of the display options

■ Installation ok

Measurement possible without restrictions.

Accuracy reduced

A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.

Measurement capability reduced

A measurement is currently possible. Howerver, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.

Check not done

No device check has been performed.

Last check time

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Last check time

**Description** Displays the operating time at which the last device check has been performed.

### Level signal

Navigation  $\blacksquare$  Diagnostics  $\rightarrow$  Device check  $\rightarrow$  Level signal

Prerequisite Device check has been performed.

Displays result of the device check for the level signal. Description

User interface ■ Check not done

> ■ Check not OK ■ Check OK

For **Level signal** = **Check not OK**: Check the mounting position of the device and the dielectric constant of the medium. Additional information

#### 17.4.9 "Heartbeat" submenu



The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

## **Detailed description**

SD01871F

 $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Navigation

200

# Index

A	Device information (Submenu)	
Access authorization to parameters	Device name (Parameter)	
Read access	Device replacement	
Write access	Device reset (Parameter) 1	
Access code	Device tag (Parameter)	85
Incorrect input	Diagnostic event	
Access status display (Parameter)	In the operating tool	04
Access status tooling (Parameter)	Diagnostic events	
Accessories	Diagnostic list	
Communication specific	Diagnostic list (Submenu)	83
Service specific	Diagnostic message	01
Activate table (Parameter)	Diagnostics	
Actual diagnostics (Parameter)	Symbols	01
Administration (Submenu)	Diagnostics (Menu)	81
Advanced process conditions (Parameter) 146	Diagnostics 1 (Parameter)	83
Advanced setup (Submenu)	Diagnostics event	02
Analog input 1 to 5 (Submenu) 140, 188	Diameter (Parameter) 1	56
Application	DIP switch	
Residual risk	see Write protection switch	
Assign channel 1 to 4 (Parameter) 190	Disable simulation	93
Assign diagnostic behavior (Parameter) 164	Display (Submenu)	69
Assign limit (Parameter)	Display and operating module FHX50	48
Assign measurement variable (Parameter) 196	Display channel 1 to 4 (Submenu)	92
Assign status (Parameter)	Display damping (Parameter) 1	72
,	Display interval (Parameter) 1	72
В	Display module	57
Backlight (Parameter)	Display symbols for submenus	
Backup state (Parameter)	Display symbols for the locking state	58
Block tag (Parameter)	Disposal	12
Blocking distance (Parameter) 147, 161	Distance (Parameter)	87
_	Distance unit (Parameter)	32
C	Document	
CE mark	Function	6
Channel (Parameter)	Document function	6
Cleaning	_	
Clear logging data (Parameter)	E	
Comparison result (Parameter)	Electronic temperature (Parameter)	88
Configuration backup display (Submenu) 175	Electronics housing	
Configuration management (Parameter) 175	Design	
Configuration of a level measurement 79, 88	Empty calibration (Parameter)	
Confirm access code (Parameter) 180	Enable simulation	
Confirm distance (Parameter) 136, 139	Enter access code (Parameter)	
Context menu	Envelope curve display	
Contrast display (Parameter)	Event history	07
Customer value (Parameter)	Event level	
D	Explanation	
D	Symbols	
Data logging (Submenu)	Event list (Submenu)	
Decimal places 1 (Parameter)	Event logbook (Submenu)	
Decimal places menu (Parameter)	Event text	
Declaration of Conformity	Events list	
Define access code	Extended order code 1 (Parameter)	
Define access code (Parameter)	Exterior cleaning	10
Define access code (Wizard)	E	
Designated use	F	<i>-</i> -
Device check (Submenu)	Failure mode (Parameter)	0/

FHX50	Medium property (Parameter)
Firmware version (Parameter)	Diagnostics
Format display (Parameter)	Setup
Free text (Parameter)	Setup
Full calibration (Parameter)	N
	Number format (Parameter) 173
H	0
Hardware write protection	0
Header (Parameter)	Operating elements
Header text (Parameter)	Diagnostics message
Heartbeat (Submenu)	Operating findule:
HistoROM (description)	Operating time (ratameter)
Design	Operational safety
Turning	Order code (Parameter)
Turining	Output echo lost (Parameter)
I	Overvoltage protection
Input mask 61	General information 42
Intermediate height (Parameter) 156	_
Invert output signal (Parameter)	P
17	Prepare recording map (Parameter)
K	Present mapping (Parameter)
Keypad lock Disabling	Previous diagnostics (Parameter)
Switching on	Product safety
Switching on	Froduct Safety
L	R
Language (Parameter)	Ramp at echo lost (Parameter) 161
Language selection	Read access
Last backup (Parameter)	Record map (Parameter)
Last check time (Parameter)	Registered trademarks
Level (Parameter)	Remedial measures
Level (Submenu)	Calling up
Level correction (Parameter)	Closing
Level measurement configuration 79, 88	Repair concept
Level signal (Parameter)	Replacing a device
Level unit (Parameter)	Requirements for personnel
Linearization (Submenu)	Result device check (Parameter)
Linearization type (Parameter)	Return
Local display	
see Diagnostics message	S
see In alarm condition	Safety instructions
Locking status (Parameter)	Basic
Logging interval (Parameter)	Safety Instructions (XA)
M	Safety settings (Submenu)
Maintenance	Serial number (Parameter)
Manage device configuration	Service interface (CDI)
Mapping (Wizard)	Setting the operating language
Mapping end point (Parameter) 137, 139	Settings
Max. draining speed liquid (Parameter) 145	Manage device configuration 83, 89
Max. filling speed liquid (Parameter) 145	Operating language
Maximum value (Parameter)	Setup (Menu)
Measured materials	Signal quality (Parameter)
Measured value symbols	SIM switch
Measured values (Submenu)	Simulation (Submenu)
Medium group (Parameter)	Simulation device alarm (Parameter) 197

202

Simulation diagnostic event (Parameter)	
Spare parts	
Nameplate	
Start device check (Parameter)	
Status (Parameter)	189
Status signals 58,	101
Submenu	
Administration	178
Advanced setup	142
Analog input 1 to 5 140,	188
Configuration backup display	175
Data logging	190
Device check	198
Device information	185
Diagnostic list	183
Display	
Display channel 1 to 4	192
Event list	184
	184
Event logbook	104
Events list	
Heartbeat	
Level	144
Linearization	
Measured values	187
Safety settings	160
Simulation	
Switch output	163
Switch output (Submenu)	163
Switch output function (Parameter)	163
Switch output simulation (Parameter)	196
Switch status (Parameter) 167,	197
Switch-off delay (Parameter)	167
Switch-off value (Parameter)	166
Switch-on delay (Parameter)	166
Switch-on value (Parameter)	165
Symbols	100
For correction	61
In the text and numeric editor	
System components	
System components	11)
T	
Table mode (Parameter)	157
Table number (Parameter)	
Tank type (Parameter)	
Tank/silo height (Parameter)	
Terminal voltage 1 (Parameter)	
Timestamp (Parameter) 181, 182,	183
Transmitter	
Turning the display	
Turning the display module	. 36
Transmitter housing	
Turning	
Trouble shooting	. 99
Tube diameter (Parameter)	133
Turning the display	. 36
Turning the display module	
U	
Unit after linearization (Parameter)	154

Units index (Parameter)
V
Value (Parameter)
Value 1 display (Parameter) 171
Value echo lost (Parameter) 160
Value process variable (Parameter) 196
W
W@M Device Viewer
Wizard
Define access code
Mapping
Workplace safety
Write access
Write protection
Via access code
Via write protection switch
Write protection switch
Z
Zubehör
Gerätespezifisch



www.addresses.endress.com