


Operating Instructions

Proline Promass H 500

PROFIBUS PA

Coriolis flowmeter

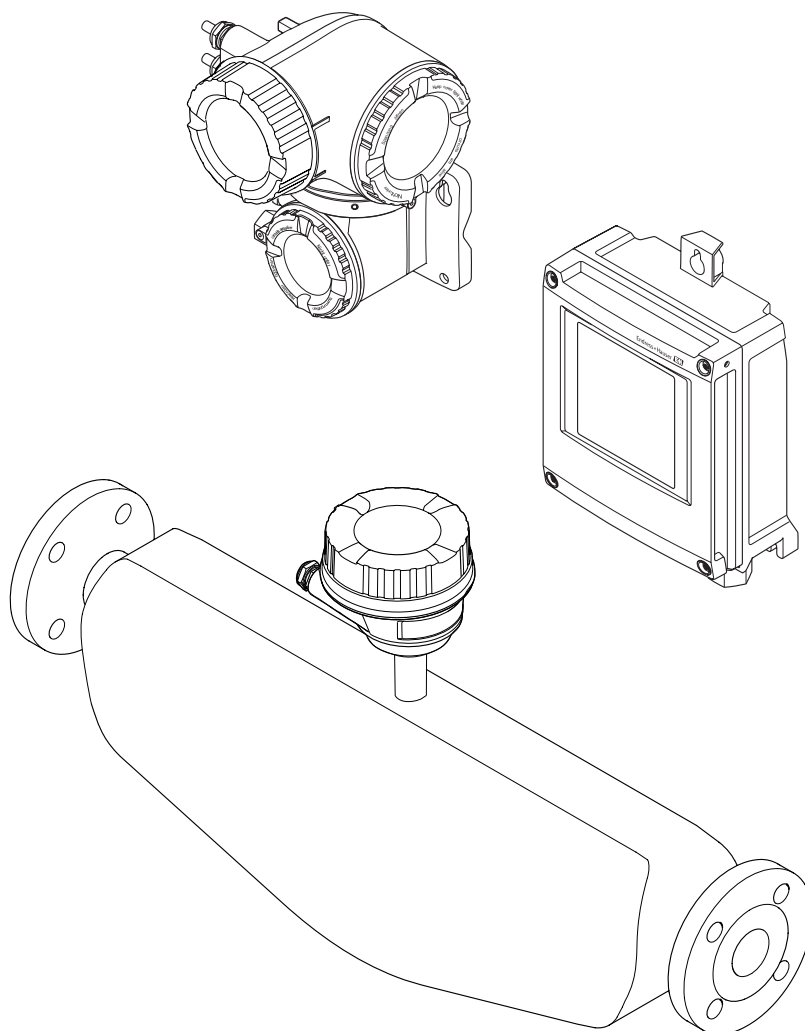

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	About this document	6	6	Installation	22
1.1	Document function	6	6.1	Installation conditions	22
1.2	Symbols used	6	6.1.1	Mounting position	22
1.2.1	Safety symbols	6	6.1.2	Requirements from environment and process	25
1.2.2	Electrical symbols	6	6.1.3	Special mounting instructions	27
1.2.3	Communication symbols	6	6.2	Mounting the measuring device	28
1.2.4	Tool symbols	7	6.2.1	Required tools	28
1.2.5	Symbols for certain types of information	7	6.2.2	Preparing the measuring device	28
1.2.6	Symbols in graphics	7	6.2.3	Mounting the measuring device	29
1.3	Documentation	8	6.2.4	Mounting the transmitter housing: Proline 500 – digital	29
1.3.1	Standard documentation	8	6.2.5	Mounting the transmitter housing: Proline 500	31
1.3.2	Supplementary device-dependent documentation	8	6.2.6	Turning the transmitter housing: Proline 500	32
1.4	Registered trademarks	8	6.2.7	Turning the display module: Proline 500	33
2	Basic safety instructions	9	6.3	Post-installation check	33
2.1	Requirements for the personnel	9	7	Electrical connection	34
2.2	Designated use	9	7.1	Connection conditions	34
2.3	Workplace safety	10	7.1.1	Required tools	34
2.4	Operational safety	10	7.1.2	Requirements for connecting cable	34
2.5	Product safety	10	7.1.3	Terminal assignment	38
2.6	IT security	11	7.1.4	Device plugs available	38
2.7	Device-specific IT security	11	7.1.5	Pin assignment of device plug	38
2.7.1	Protecting access via hardware write protection	11	7.1.6	Shielding and grounding	39
2.7.2	Protecting access via a password	11	7.1.7	Preparing the measuring device	40
2.7.3	Access via Web server	12	7.2	Connecting the measuring device: Proline 500 - digital	41
2.7.4	Access via service interface (CDI-RJ45)	13	7.2.1	Connecting the connecting cable	41
3	Product description	14	7.2.2	Connecting the signal cable and the supply voltage cable	46
3.1	Product design	14	7.3	Connecting the measuring device: Proline 500	48
3.1.1	Proline 500 – digital	14	7.3.1	Connecting the connecting cable	48
3.1.2	Proline 500	15	7.3.2	Connecting the signal cable and the supply voltage cable	52
4	Incoming acceptance and product identification	16	7.4	Ensuring potential equalization	54
4.1	Incoming acceptance	16	7.4.1	Requirements	54
4.2	Product identification	16	7.5	Special connection instructions	55
4.2.1	Transmitter nameplate	17	7.5.1	Connection examples	55
4.2.2	Sensor nameplate	19	7.6	Hardware settings	58
4.2.3	Symbols on measuring device	20	7.6.1	Setting the device address	58
5	Storage and transport	21	7.6.2	Activating the default IP address	59
5.1	Storage conditions	21	7.7	Ensuring the degree of protection	61
5.2	Transporting the product	21	7.8	Post-connection check	61
5.2.1	Measuring devices without lifting lugs	21	8	Operation options	62
5.2.2	Measuring devices with lifting lugs	22	8.1	Overview of operation options	62
5.2.3	Transporting with a fork lift	22	8.2	Structure and function of the operating menu	63
5.3	Packaging disposal	22	8.2.1	Structure of the operating menu	63

8.3	8.2.2 Operating philosophy	64	10.2	Switching on the measuring device	101
	Access to the operating menu via the local display	65	10.3	Connecting via FieldCare	101
	8.3.1 Operational display	65	10.4	Configuring the device address via software	101
	8.3.2 Navigation view	67	10.4.1 PROFIBUS network	101	
	8.3.3 Editing view	69	10.5	Setting the operating language	101
	8.3.4 Operating elements	71	10.6	Configuring the measuring device	102
	8.3.5 Opening the context menu	71	10.6.1 Defining the tag name	103	
	8.3.6 Navigating and selecting from list	73	10.6.2 Setting the system units	104	
	8.3.7 Calling the parameter directly	73	10.6.3 Selecting and setting the medium	107	
	8.3.8 Calling up help text	74	10.6.4 Configuring communication interface	108	
	8.3.9 Changing the parameters	74	10.6.5 Configuring the analog inputs	110	
	8.3.10 User roles and related access authorization	75	10.6.6 Displaying the I/O configuration	111	
	8.3.11 Disabling write protection via access code	75	10.6.7 Configuring the current input	112	
	8.3.12 Enabling and disabling the keypad lock	76	10.6.8 Configuring the status input	113	
8.4	Access to the operating menu via the Web browser	76	10.6.9 Configuring the current output	114	
	8.4.1 Function range	76	10.6.10 Configuring the pulse/frequency/switch output	117	
	8.4.2 Prerequisites	77	10.6.11 Configuring the relay output	124	
	8.4.3 Establishing a connection	78	10.6.12 Configuring the local display	126	
	8.4.4 Logging on	80	10.6.13 Configuring the low flow cut off	129	
	8.4.5 User interface	81	10.6.14 Configuring the partial filled pipe detection	130	
	8.4.6 Disabling the Web server	82	10.7	Advanced settings	131
	8.4.7 Logging out	82	10.7.1 Calculated values	132	
8.5	Access to the operating menu via the operating tool	83	10.7.2 Carrying out a sensor adjustment	133	
	8.5.1 Connecting the operating tool	83	10.7.3 Configuring the totalizer	134	
	8.5.2 FieldCare	86	10.7.4 Carrying out additional display configurations	136	
	8.5.3 DeviceCare	88	10.7.5 WLAN configuration	139	
	8.5.4 SIMATIC PDM	88	10.7.6 Configuration management	140	
			10.7.7 Using parameters for device administration	141	
9	System integration	89	10.8	Simulation	143
9.1	Overview of device description files	89	10.9	Protecting settings from unauthorized access	146
	9.1.1 Current version data for the device	89	10.9.1 Write protection via access code	146	
	9.1.2 Operating tools	89	10.9.2 Write protection via write protection switch	147	
9.2	Device master file (GSD)	89			
	9.2.1 Manufacturer-specific GSD	90	11	Operation	150
	9.2.2 Profile GSD	90	11.1	Reading the device locking status	150
9.3	Compatibility with earlier model	91	11.2	Adjusting the operating language	150
	9.3.1 Automatic identification (factory setting)	91	11.3	Configuring the display	150
	9.3.2 Manual setting	91	11.4	Reading measured values	150
	9.3.3 Replacing the measuring devices without changing the GSD file or restarting the controller	91	11.4.1 "Measured variables" submenu	151	
9.4	Using the GSD modules of the previous model	92	11.4.2 Totalizer	152	
	9.4.1 Using the CONTROL_BLOCK module in the previous model	92	11.4.3 "Input values" submenu	153	
9.5	Cyclic data transmission	94	11.4.4 Output values	154	
	9.5.1 Block model	94	11.5	Adapting the measuring device to the process conditions	156
	9.5.2 Description of the modules	94	11.6	Performing a totalizer reset	156
10	Commissioning	101	11.7	Showing data logging	157
10.1	Function check	101	12	Diagnostics and troubleshooting	161
			12.1	General troubleshooting	161

12.2	Diagnostic information via light emitting diodes	164	16	Technical data	240
12.2.1	Transmitter	164	16.1	Application	240
12.2.2	Sensor connection housing	165	16.2	Function and system design	240
12.3	Diagnostic information on local display	167	16.3	Input	241
12.3.1	Diagnostic message	167	16.4	Output	243
12.3.2	Calling up remedial measures	169	16.5	Power supply	248
12.4	Diagnostic information in the Web browser	169	16.6	Performance characteristics	249
12.4.1	Diagnostic options	169	16.7	Installation	253
12.4.2	Calling up remedy information	170	16.8	Environment	253
12.5	Diagnostic information in FieldCare or DeviceCare	170	16.9	Process	254
12.5.1	Diagnostic options	170	16.10	Mechanical construction	257
12.5.2	Calling up remedy information	171	16.11	Operability	260
12.6	Adapting the diagnostic information	172	16.12	Certificates and approvals	264
12.6.1	Adapting the diagnostic behavior	172	16.13	Application packages	266
12.7	Overview of diagnostic information	175	16.14	Accessories	267
12.7.1	Diagnostic of sensor	175	16.15	Supplementary documentation	267
12.7.2	Diagnostic of electronic	183			
12.7.3	Diagnostic of configuration	200	Index	269	
12.7.4	Diagnostic of process	214			
12.8	Pending diagnostic events	227			
12.9	Diagnostic list	227			
12.10	Event logbook	228			
12.10.1	Reading out the event logbook	228			
12.10.2	Filtering the event logbook	229			
12.10.3	Overview of information events	229			
12.11	Resetting the measuring device	230			
12.11.1	Function scope of the "Device reset" parameter	231			
12.12	Device information	231			
12.13	Firmware history	233			
13	Maintenance	234			
13.1	Maintenance tasks	234			
13.1.1	Exterior cleaning	234			
13.2	Measuring and test equipment	234			
13.3	Endress+Hauser services	234			
14	Repairs	235			
14.1	General notes	235			
14.1.1	Repair and conversion concept	235			
14.1.2	Notes for repair and conversion	235			
14.2	Spare parts	235			
14.3	Endress+Hauser services	235			
14.4	Return	235			
14.5	Disposal	236			
14.5.1	Removing the measuring device	236			
14.5.2	Disposing of the measuring device	236			
15	Accessories	237			
15.1	Device-specific accessories	237			
15.1.1	For the transmitter	237			
15.1.2	For the sensor	238			
15.2	Service-specific accessories	238			
15.3	System components	239			





1 About this document

1.1 Document function






These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used



1.2.1 Safety symbols



Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols




Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections. The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> ▪ Inner ground terminal: Connects the protective earth to the mains supply. ▪ Outer ground terminal: Connects the device to the plant grounding system.

1.2.3 Communication symbols













Symbol	Meaning
	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	LED Light emitting diode is off.

Symbol	Meaning
	LED Light emitting diode is on.
	LED Light emitting diode is flashing.



1.2.4 Tool symbols

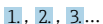

Symbol	Meaning
	Torx screwdriver
	Phillips head screwdriver
	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.
	Help in the event of a problem.
	Visual inspection.

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area

Symbol	Meaning
	Safe area (non-hazardous area)
	Flow direction

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

 Detailed list of the individual documents along with the documentation code
→  267

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device. <ul style="list-style-type: none"> ▪ Incoming acceptance and product identification ▪ Storage and transport ▪ Installation
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value). <ul style="list-style-type: none"> ▪ Product description ▪ Installation ▪ Electrical connection ▪ Operation options ▪ System integration ▪ Commissioning ▪ Diagnostic information
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use


Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation. →  8
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

NOTICE**Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks**⚠ WARNING**

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

⚠ WARNING**Danger from medium escaping!**

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

- ▶ Take precautions to prevent injury and material damage if the rupture disk is actuated.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.






2.6 IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.


2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch →  11	Not enabled.	On an individual basis following risk assessment.
Access code (also applies for Web server login or FieldCare connection) →  12	Not enabled (0000).	Assign a customized access code during commissioning.
WLAN (order option in display module)	Enabled.	On an individual basis following risk assessment.
WLAN security mode	Enabled (WPA2-PSK)	Do not change.
WLAN passphrase (password) →  12	Serial number	Assign a customized access code during commissioning.
WLAN mode	Access Point	On an individual basis following risk assessment.
Web server →  12	Enabled.	On an individual basis following risk assessment.
CDI-RJ45 service interface →  13	–	On an individual basis following risk assessment.

2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.


Hardware write protection is disabled when the device is delivered →  147.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.


- **User-specific access code**
Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- **WLAN passphrase**
The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- **Infrastructure mode**
When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.


User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code (→  146).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase: Operation as WLAN access point


A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface (→  84), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter (→  140).


Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, see the "Write protection via access code" section →  146


2.7.3 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server (→  76). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



For detailed information on device parameters, see:
The "Description of Device Parameters" document →  268.

2.7.4 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

3 Product description

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

3.1 Product design

Two versions of the transmitter are available.

3.1.1 Proline 500 – digital


Signal transmission: digital

Order code for "Integrated ISEM electronics", option **A** "Sensor"

For use in applications not required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the sensor, the device is ideal:
For simple transmitter replacement.

- A standard cable can be used as the connecting cable.
- Not sensitive to external EMC interference.

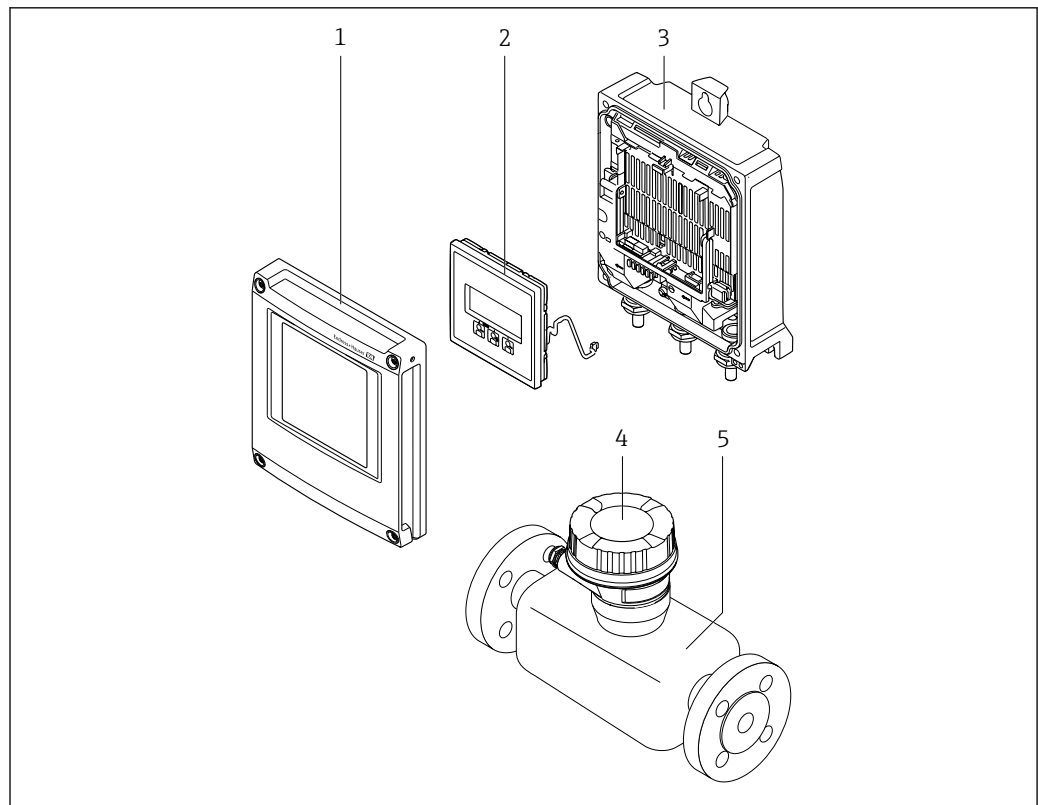

A0029593

1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Sensor connection housing with integrated ISEM electronics: connecting cable connection
- 5 Sensor

3.1.2 Proline 500


Signal transmission: analog

Order code for "Integrated ISEM electronics", option **B** "Transmitter"

For use in applications required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the transmitter, the device is ideal in the event of:

- Strong vibrations at the sensor.
- Sensor operation in underground installations.
- Permanent sensor immersion in water.

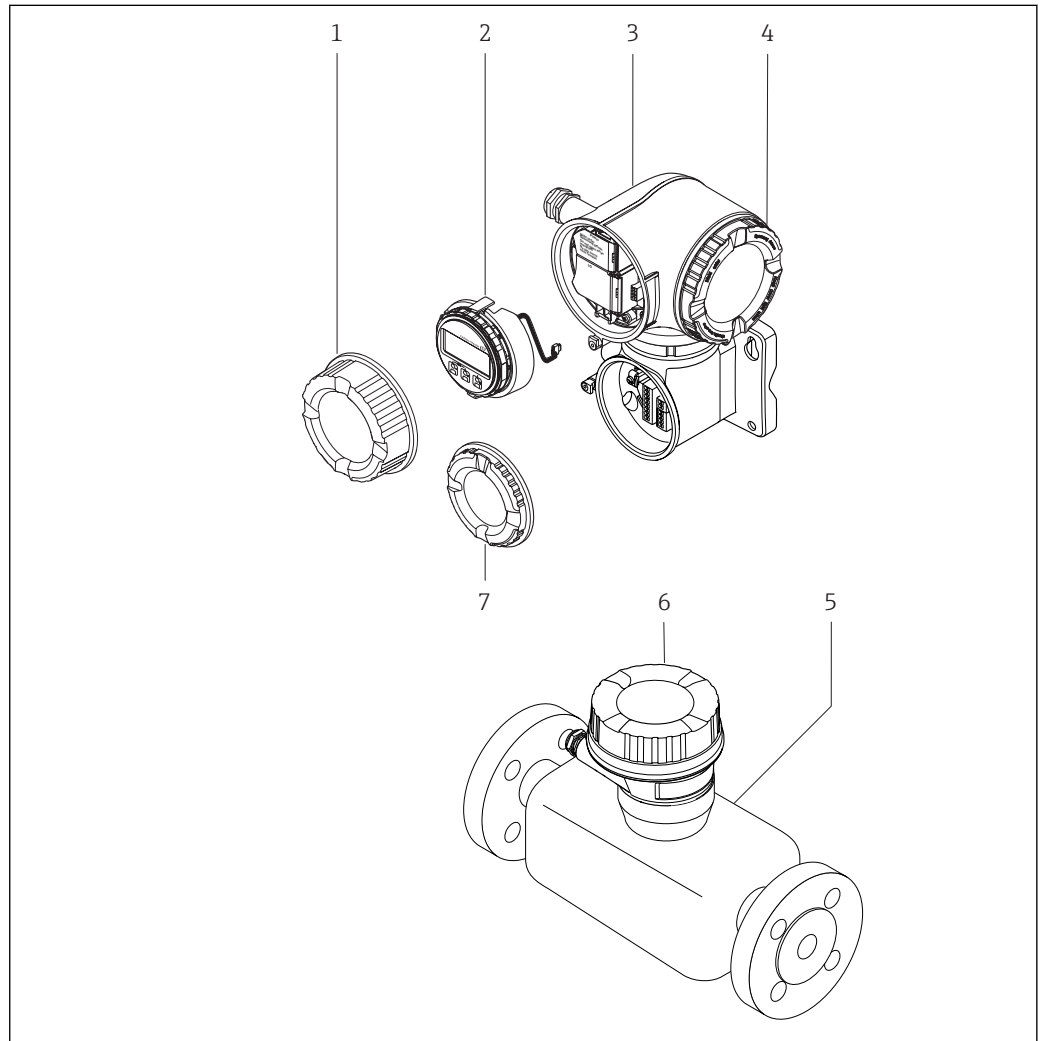





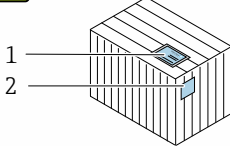
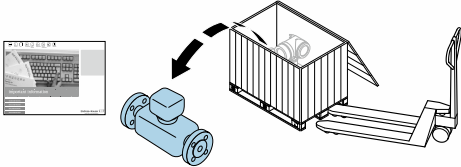




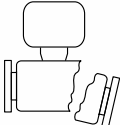






A0029589



2 Important components of a measuring device

- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing with integrated ISEM electronics
- 4 Electronics compartment cover
- 5 Sensor
- 6 Sensor connection housing: connecting cable connection
- 7 Connection compartment cover: connecting cable connection

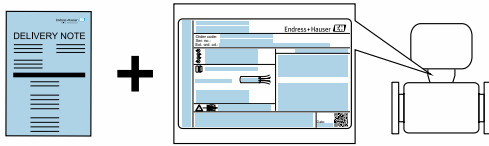4 Incoming acceptance and product identification

4.1 Incoming acceptance

 		<p>Are the order codes on the delivery note (1) and the product sticker (2) identical?</p>
		
		
 		<p>Are the goods undamaged?</p>
		
 		<p>Do the nameplate data match the ordering information on the delivery note?</p>
 		<p>Is the document folder present with accompanying documents? Is the optional CD-ROM with the Technical Documentation present?</p>

-  If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section →  17.

4.2 Product identification

The following options are available for identification of the device:


- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in the *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the device is displayed.
- Enter the serial number from nameplates in the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate using the *Endress+Hauser Operations App*: All information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" → 8 and "Supplementary device-dependent documentation" → 8 sections
- The *W@M Device Viewer*: enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate


Proline 500 – digital

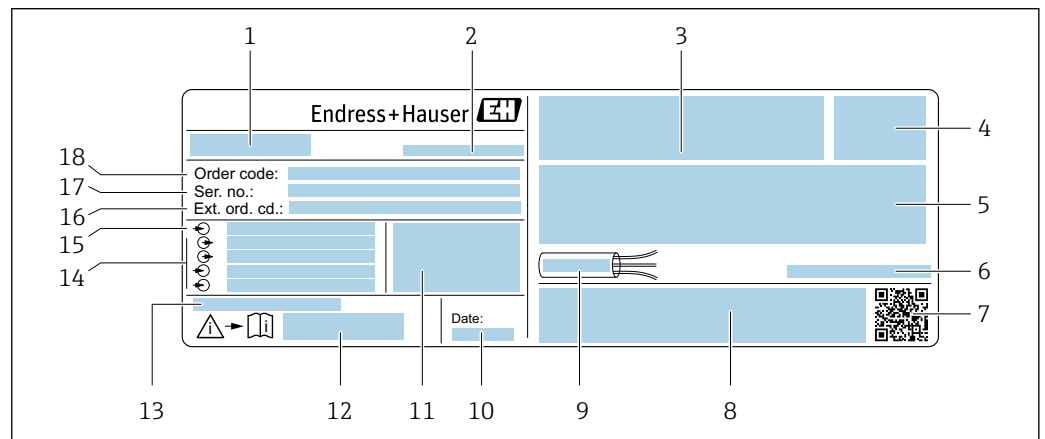


A0029194

3 Example of a transmitter nameplate

- 1 Name of the transmitter
- 2 Manufacturing location
- 3 Space for approvals: use in hazardous areas
- 4 Degree of protection
- 5 Electrical connection data: available inputs and outputs
- 6 Permitted ambient temperature (T_a)
- 7 2-D matrix code
- 8 Space for approvals and certificates: e.g. CE mark, C-Tick
- 9 Permitted temperature range for cable
- 10 Manufacturing date: year-month
- 11 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 12 Document number of safety-related supplementary documentation
- 13 Space for additional information in the case of special products
- 14 Available inputs and outputs, supply voltage
- 15 Electrical connection data: supply voltage
- 16 Extended order code (ext. ord. cd.)
- 17 Serial number (ser. no.)
- 18 Order code

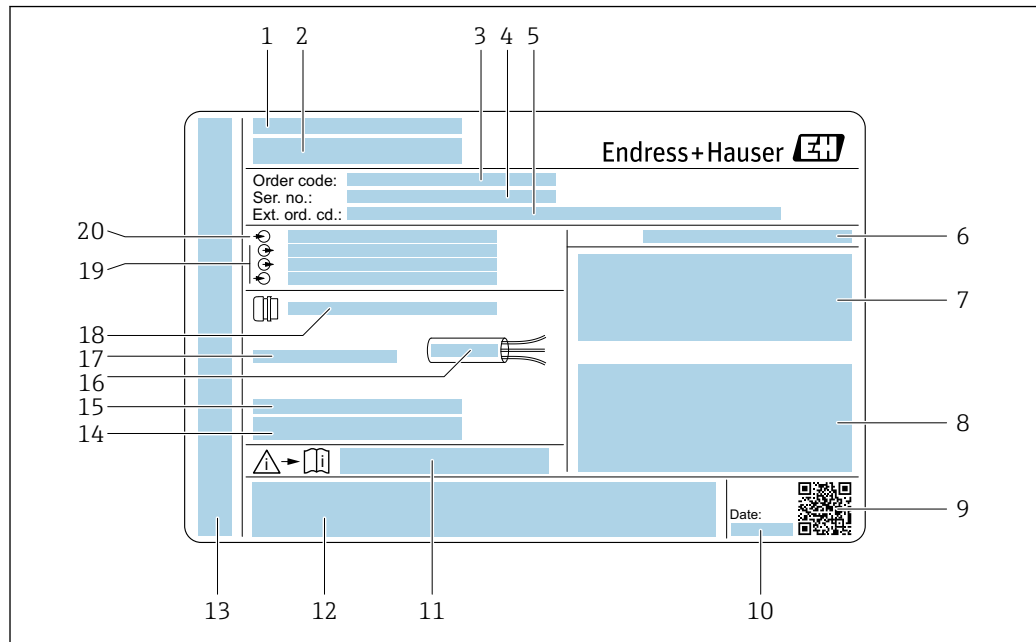
Proline 500

A0029192

 4 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

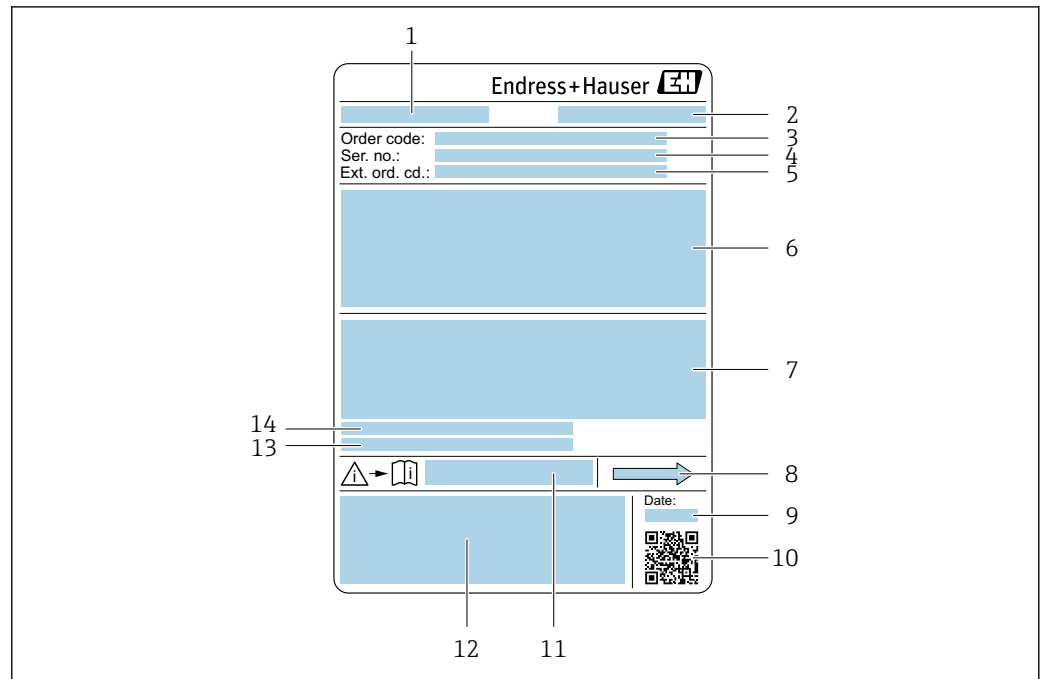

A0029199

5 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, C-Tick
- 13 Surface roughness
- 14 Permitted ambient temperature (T_a)






Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.


Storage temperature →  253

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

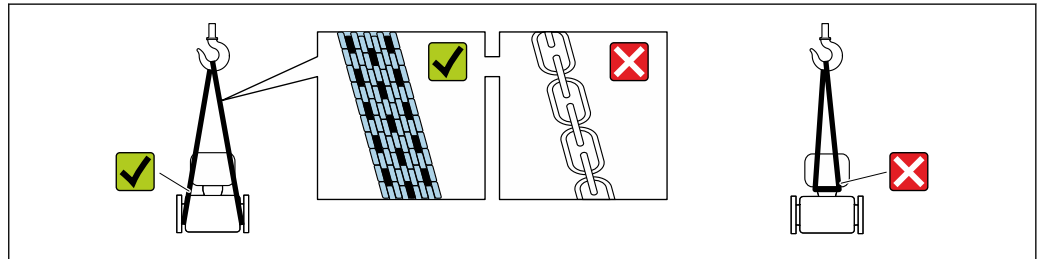

A0029252

 Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

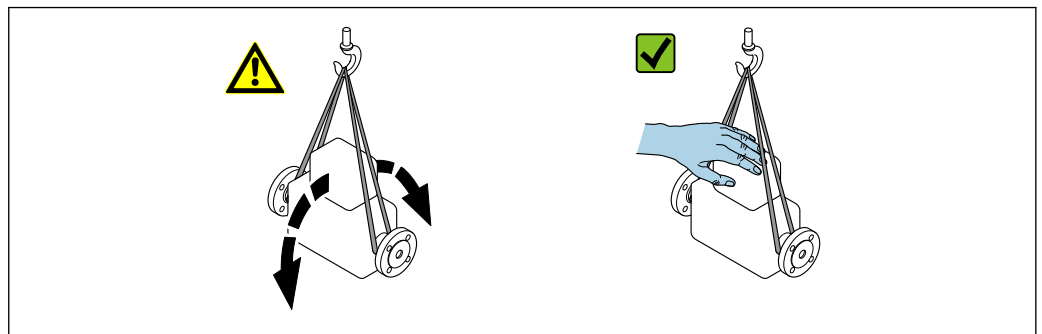

A0029214

5.2.2 Measuring devices with lifting lugs

⚠ CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:

- Outer packaging of device
 - Polymer stretch wrap that complies with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material
 - Paper pads


6 Installation

6.1 Installation conditions

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

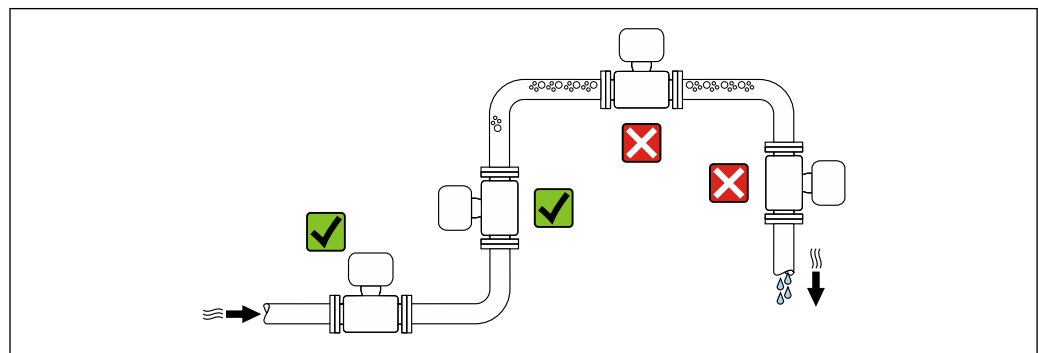


A0028772

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

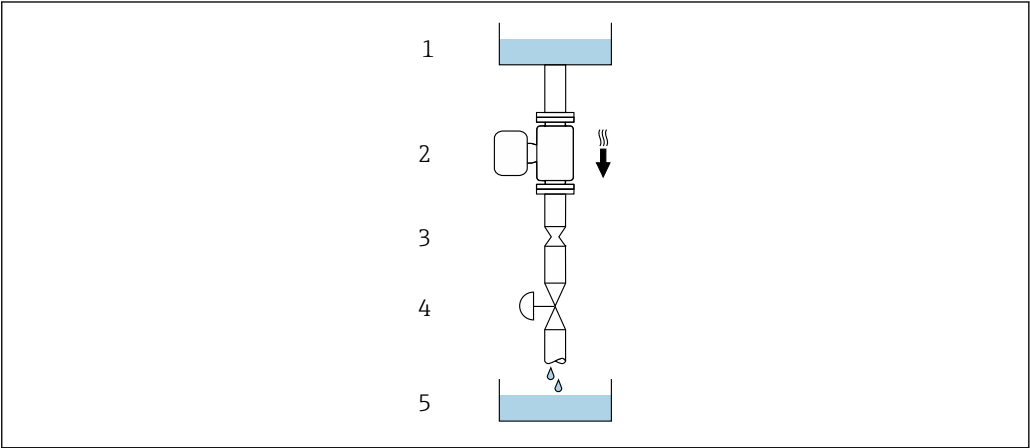

A0028773



6 Installation in a down pipe (e.g. for batching applications)



- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	$\frac{3}{8}$	6	0.24
15	$\frac{1}{2}$	10	0.40
25	1	14	0.55
40	$1\frac{1}{2}$	22	0.87
50	2	28	1.10

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation		✓✓ ¹⁾
B	Horizontal orientation, transmitter at top		✓✓ ²⁾ Exceptions: → 7, 24

Orientation			Recommendation
C	Horizontal orientation, transmitter at bottom	 <small>A0015590</small>	✓✓✓ ³⁾ Exceptions: → ☒ 7, ☒ 24
D	Horizontal orientation, transmitter at side	 <small>A0015592</small>	✓✓

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.


If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

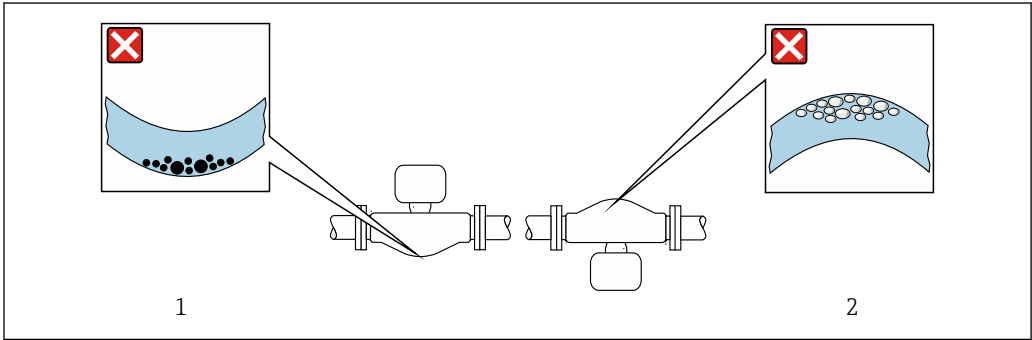

- ☒ 7 *Orientation of sensor with curved measuring tube*
- 1 *Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.*
 - 2 *Avoid this orientation for outgassing fluids: Risk of gas accumulating.*

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → ☒ 25.

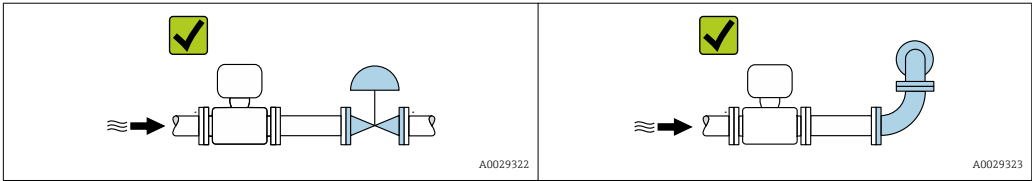

Installation dimensions

☒ For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

6.1.2 Requirements from environment and process

Ambient temperature range

Measuring device	<ul style="list-style-type: none"> ■ -40 to +60 °C (-40 to +140 °F) ■ Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)
Readability of the local display	-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

 Dependency of ambient temperature on medium temperature →  254

- ▶ If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

 You can order a weather protection cover from Endress+Hauser. →  237.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- ▶ Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

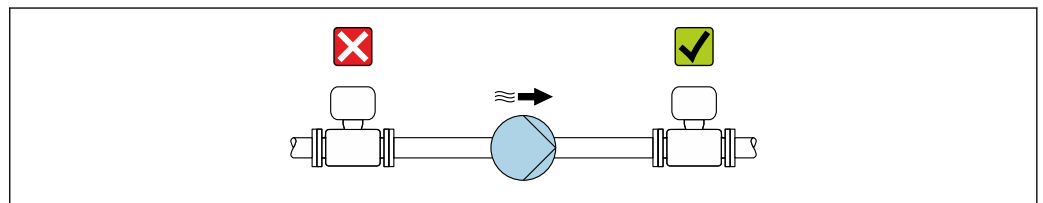

A0028777

Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation:

Version with extended neck:

Order code for "Measuring tube material", option DA or EA with an extended neck length of 105 mm (4.13 in).

NOTICE**Electronics overheating on account of thermal insulation!**

- ▶ Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- ▶ Do not insulate the sensor connection housing.
- ▶ Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- ▶ Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

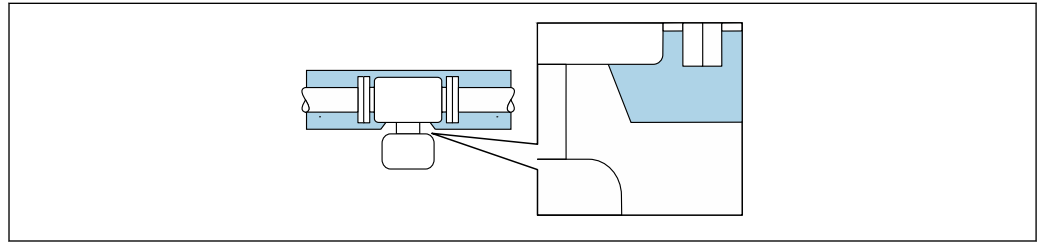

A0034391

8 Thermal insulation with extended neck free

Heating**NOTICE****Electronics can overheat due to elevated ambient temperature!**

- ▶ Observe maximum permitted ambient temperature for the transmitter .
- ▶ Depending on the fluid temperature, take the device orientation requirements into account .

NOTICE**Danger of overheating when heating**

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the transmitted neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ If using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values permitted by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the sensor housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability $\mu_r \geq 300$
- Plate thickness $d \geq 0.35 \text{ mm}$ ($d \geq 0.014 \text{ in}$)

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Drainability

The measuring tubes can be completely drained and protected against solids build-up in vertical orientation.


Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 249. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:


- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Protective cover

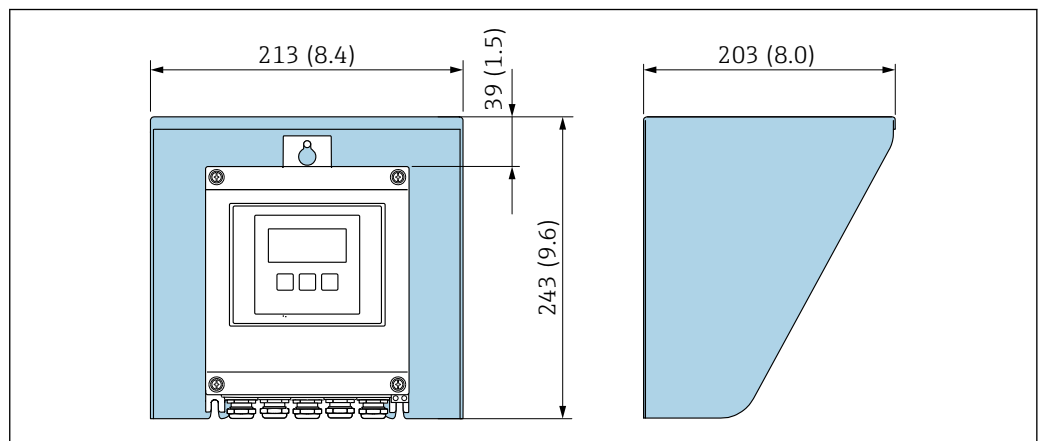

A0029552

9 Weather protection cover for Proline 500 – digital

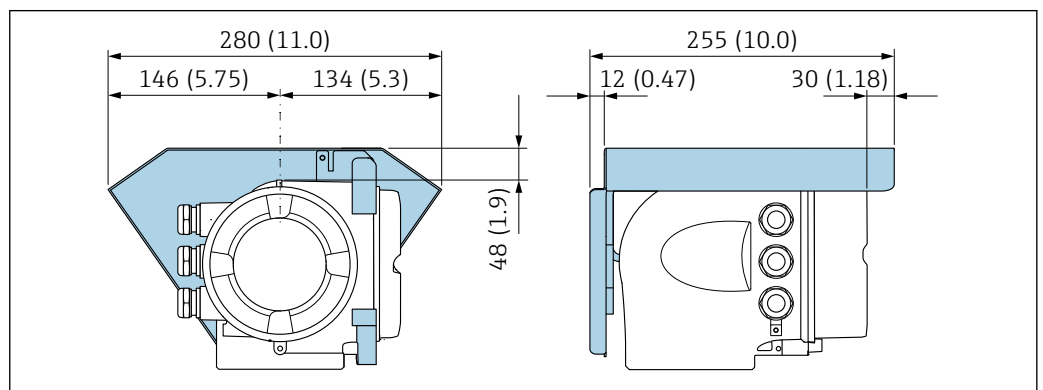

A0029553


10 Weather protection cover for Proline 500

Cover locking: Proline 500**NOTICE**

Order code for "Transmitter housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.

The cover can be locked using screws and a chain or cable provided by the customer.

- It is recommended to use stainless steel cables or chains.
- If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

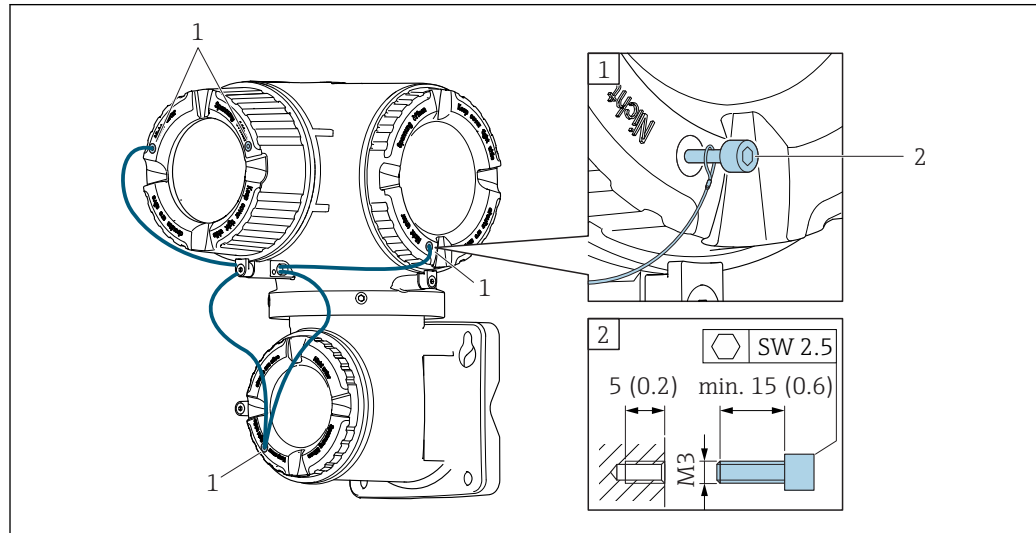

A0029799

1 Cover borehole for the securing screw

2 Securing screw to lock the cover

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

For mounting on a post:

- Proline 500 – digital transmitter
 - Open-ended wrench AF 10
 - Torx screwdriver TX 25
- Proline 500 transmitter
 - Open-ended wrench AF 13

For wall mounting:

Drill with drill bit \varnothing 6.0 mm

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device


1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
 - ▶ Ensure that the gaskets are clean and undamaged.
 - ▶ Install the gaskets correctly.
1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

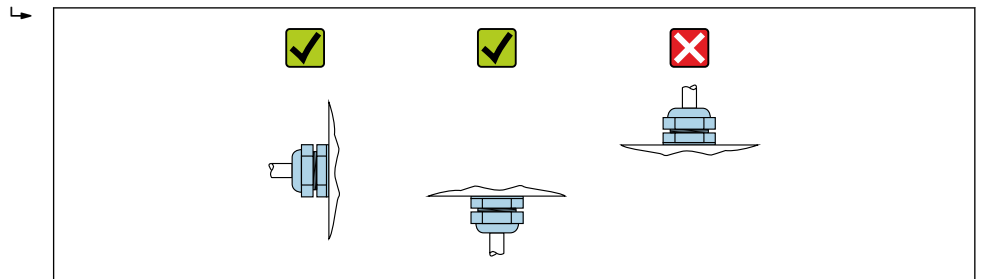

A0029263

6.2.4 Mounting the transmitter housing: Proline 500 – digital

⚠ CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

⚠ CAUTION

Excessive force can damage the housing!

- ▶ Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting


Post mounting

⚠ WARNING

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.


- ▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

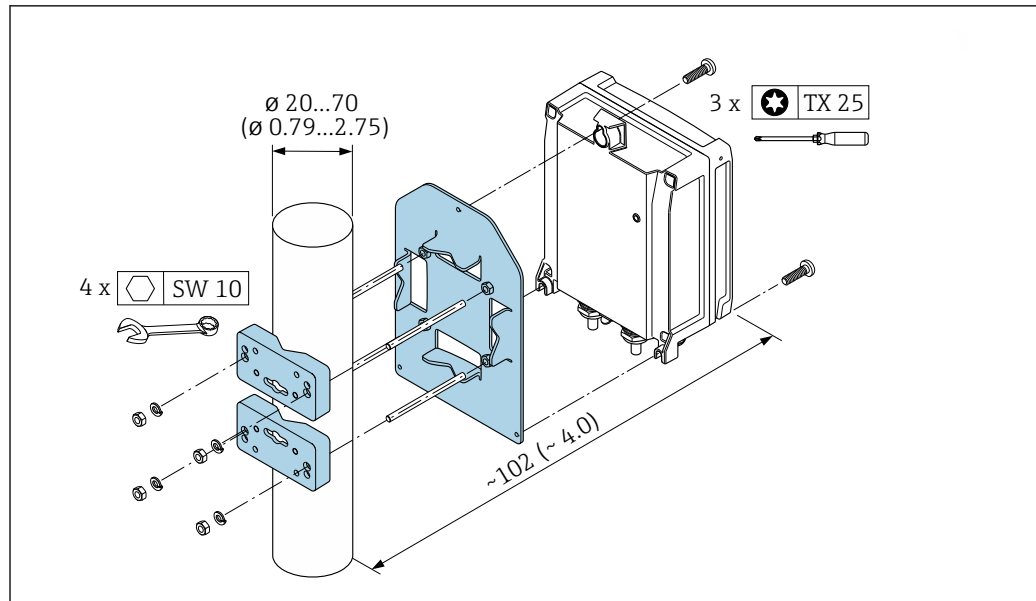

A0029051

11 Engineering unit mm (in)

Wall mounting

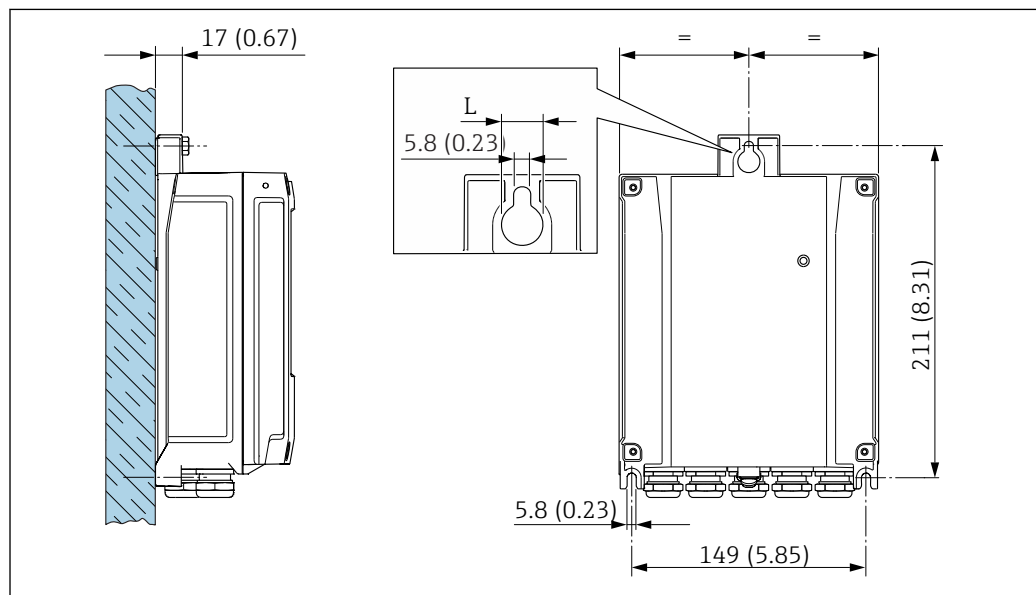

A0029054

12 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum coated: $L = 14$ mm (0.55 in)
- Option **D**, polycarbonate: $L = 13$ mm (0.51 in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws slightly at first.
4. Fit the transmitter housing over the securing screws and mount in place.
5. Tighten the securing screws.

6.2.5 Mounting the transmitter housing: Proline 500

⚠ CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

⚠ CAUTION


Excessive force can damage the housing!

- ▶ Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

Wall mounting

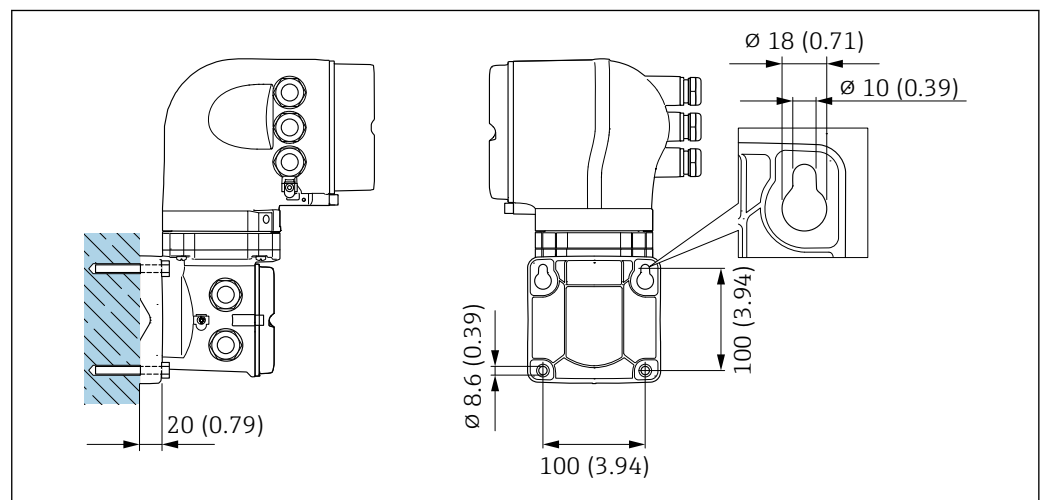

13 Engineering unit mm (in)


1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws slightly at first.
4. Fit the transmitter housing over the securing screws and mount in place.
5. Tighten the securing screws.

Post mounting**⚠ WARNING**

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.

They are unstable if they are not mounted on a secure, fixed post.

- Only mount the transmitter on a secure, fixed post on a stable surface.

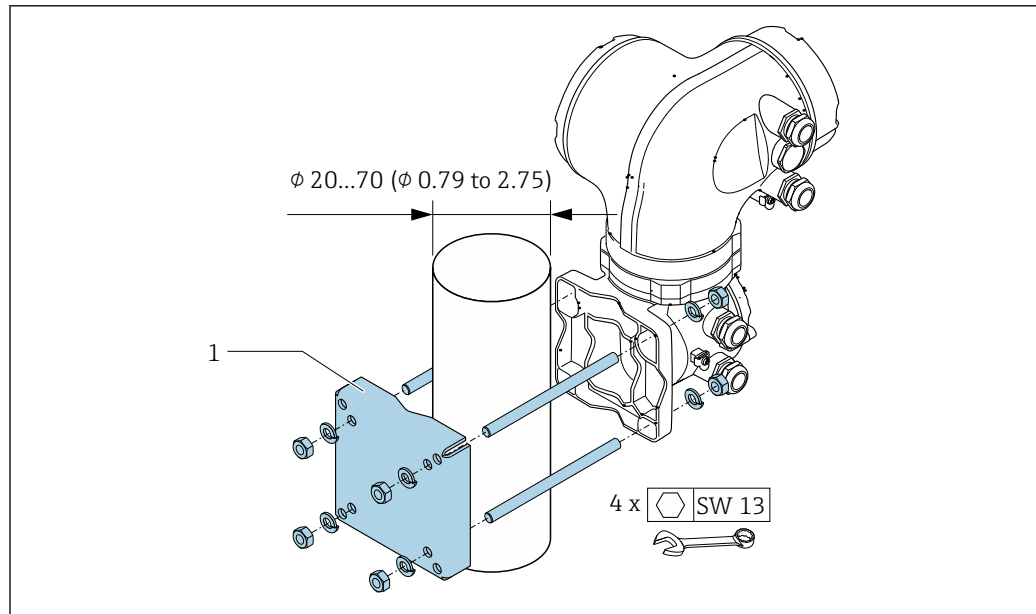


A0029057

14 Engineering unit mm (in)

6.2.6 Turning the transmitter housing: Proline 500

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

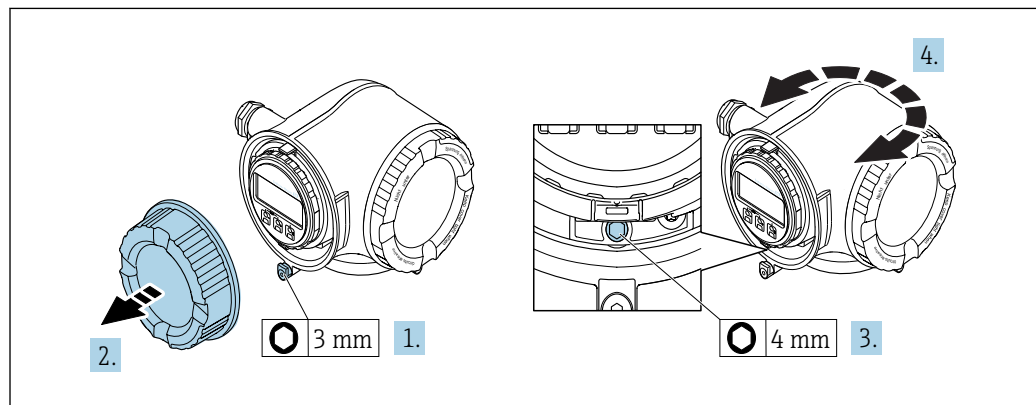


A0029993

1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Release the fixing screw.
4. Turn the housing to the desired position.
5. Firmly tighten the securing screw.
6. Screw on the connection compartment cover

7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.2.7 Turning the display module: Proline 500

The display module can be turned to optimize display readability and operability.

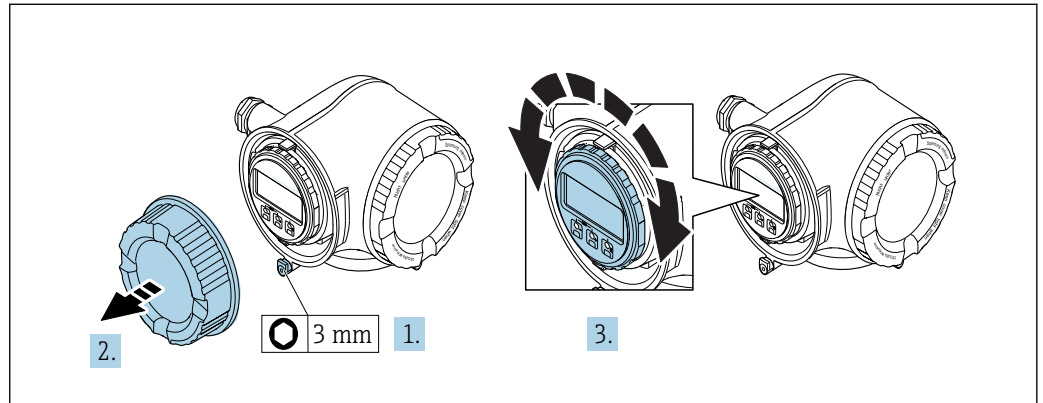

A0030035

1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Turn the display module to the desired position: max. $8 \times 45^\circ$ in each direction.
4. Screw on the connection compartment cover.
5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ▪ Process temperature → 254 ▪ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ▪ Ambient temperature ▪ Measuring range 	<input type="checkbox"/>
Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"> ▪ According to sensor type ▪ According to medium temperature ▪ According to medium properties (outgassing, with entrained solids) 	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 23?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable ≥ 2.08 mm² (14 AWG)

The grounding impedance must be less than 1 Ω .

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable

Standard installation cable is sufficient.

Signal cable

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended .



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input


Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules.
Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

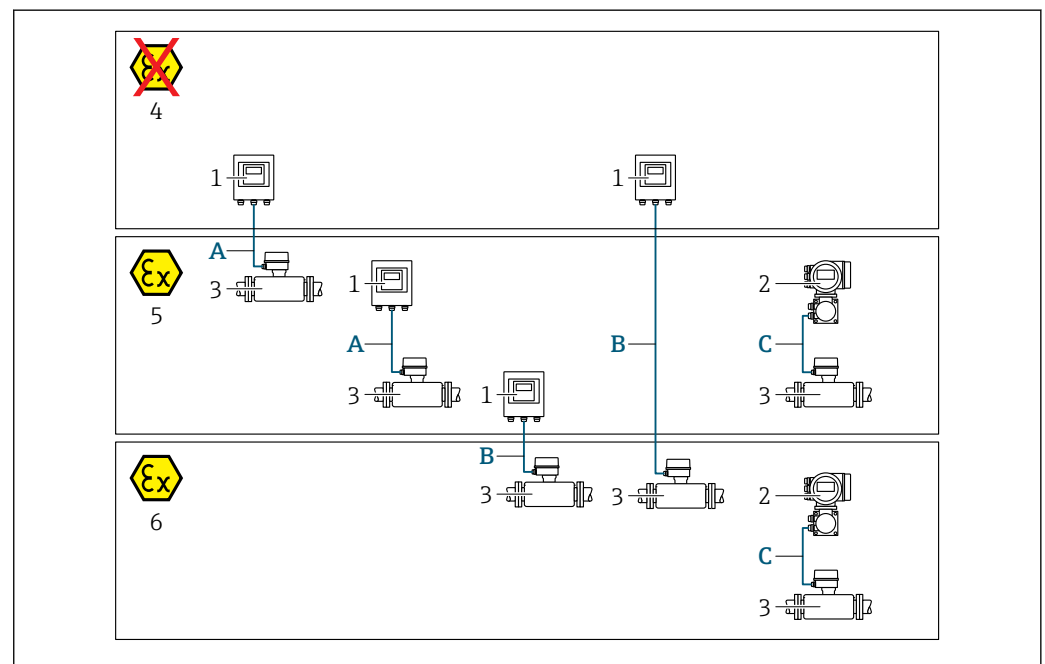

A0032476

- 1 Proline 500 digital transmitter
- 2 Proline 500 transmitter
- 3 Sensor Promass
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- A Standard cable to 500 digital transmitter → 36
Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 2; Class I, Division 2
- B Standard cable to 500 digital transmitter → 36
Transmitter installed in the hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 1; Class I, Division 1
- C Signal cable to 500 transmitter → 38
Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 oder Zone 1; Class I, Division 1

*A: Connecting cable between sensor and transmitter: Proline 500 – digital**Standard cable*

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shielding	Tin-plated copper-braid, optical cover $\geq 85\%$
Loop resistance	Power supply line (+, -): maximum $10\ \Omega$
Cable length	Maximum 300 m (1 000 ft), see the following table.

Cross-section	Cable length [max.]
0.34 mm ² (AWG 22)	80 m (270 ft)
0.50 mm ² (AWG 20)	120 m (400 ft)
0.75 mm ² (AWG 18)	180 m (600 ft)
1.00 mm ² (AWG 17)	240 m (800 ft)
1.50 mm ² (AWG 15)	300 m (1 000 ft)

Optionally available connecting cable




Design	2 × 2 × 0.34 mm ² (AWG 22) PVC cable ¹⁾ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover $\geq 85\%$
Operating temperature	When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F)
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

*B: Connecting cable between sensor and transmitter: Proline 500 - digital**Standard cable*

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shielding	Tin-plated copper-braid, optical cover $\geq 85\%$
Capacitance C	Maximum 760 nF IIC, maximum 4.2 μF IIB
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu\text{H}/\Omega$ IIC, maximum 35.6 $\mu\text{H}/\Omega$ IIB (e.g. in accordance with IEC 60079-25)
Loop resistance	Power supply line (+, -): maximum $5\ \Omega$
Cable length	Maximum 150 m (500 ft), see the following table.

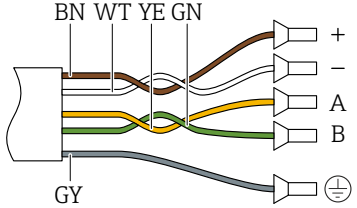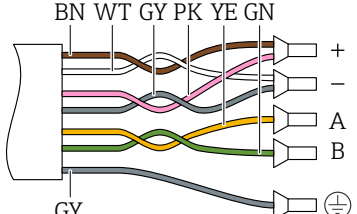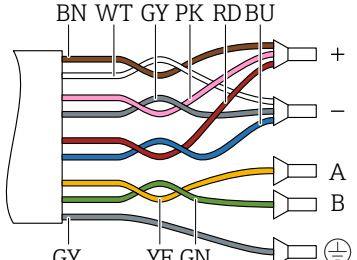Cross-section	Cable length [max.]	Termination
2 x 2 x 0.50 mm ² (AWG 20)	50 m (165 ft)	2 x 2 x 0.50 mm ² (AWG 20)  <ul style="list-style-type: none"> ■ +, - = 0.5 mm² ■ A, B = 0.5 mm²
3 x 2 x 0.50 mm ² (AWG 20)	100 m (330 ft)	3 x 2 x 0.50 mm ² (AWG 20)  <ul style="list-style-type: none"> ■ +, - = 1.0 mm² ■ A, B = 0.5 mm²
4 x 2 x 0.50 mm ² (AWG 20)	150 m (500 ft)	4 x 2 x 0.50 mm ² (AWG 20)  <ul style="list-style-type: none"> ■ +, - = 1.5 mm² ■ A, B = 0.5 mm²

Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1
Standard cable	2 x 2 x 0.5 mm ² (AWG 20) PVC cable ¹⁾ with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %
Operating temperature	When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F)
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

C: Connecting cable between sensor and transmitter: Proline 500

Standard cable	6 × 0.38 mm ² PVC cable ¹⁾ with common shield and individually shielded cores
Conductor resistance	≤50 Ω/km (0.015 Ω/ft)
Capacitance: core/shield	≤420 pF/m (128 pF/ft)
Cable length (max.)	20 m (65 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (32 ft), 20 m (65 ft)
Operating temperature	max. 105 °C (221 °F)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

7.1.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Device-specific terminal assignment: adhesive label in terminal cover.									


Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 – digital → 41
- Proline 500 → 48


7.1.4 Device plugs available

 Device plugs may not be used in hazardous areas!

Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for "Electrical connection"	Cable entry/connection	
	2	3
L, N, P, U	Connector M12 × 1	–

7.1.5 Pin assignment of device plug

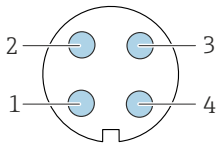	Pin	Assignment		Coding	Plug/socket
	1	+	PROFIBUS PA +	A	Plug
	2		Grounding		

	3	-	PROFIBUS PA –		
	4		Not assigned		

7.1.6 Shielding and grounding

Optimal electromagnetic compatibility (EMC) of the fieldbus system can be guaranteed only if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90 % is ideal.

1. To ensure optimal EMC protection, connect the shield to the reference ground as often as possible.
2. For reasons concerning explosion protection, it is recommended that grounding be dispensed with.

To comply with both requirements, there are basically three different types of shielding in the fieldbus system:

- Shielding at both ends
- Shielding at one end on the feed side with capacitance termination at the field device
- Shielding at one end on the feed side

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.


1. Observe national installation requirements and guidelines during installation.
2. Where there are large differences in potential between the individual grounding points, connect only one point of the shielding directly to the reference ground.
3. In systems without potential equalization, the cable shielding of fieldbus systems should be grounded on one side only, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- Insulate the shield that is not connected.

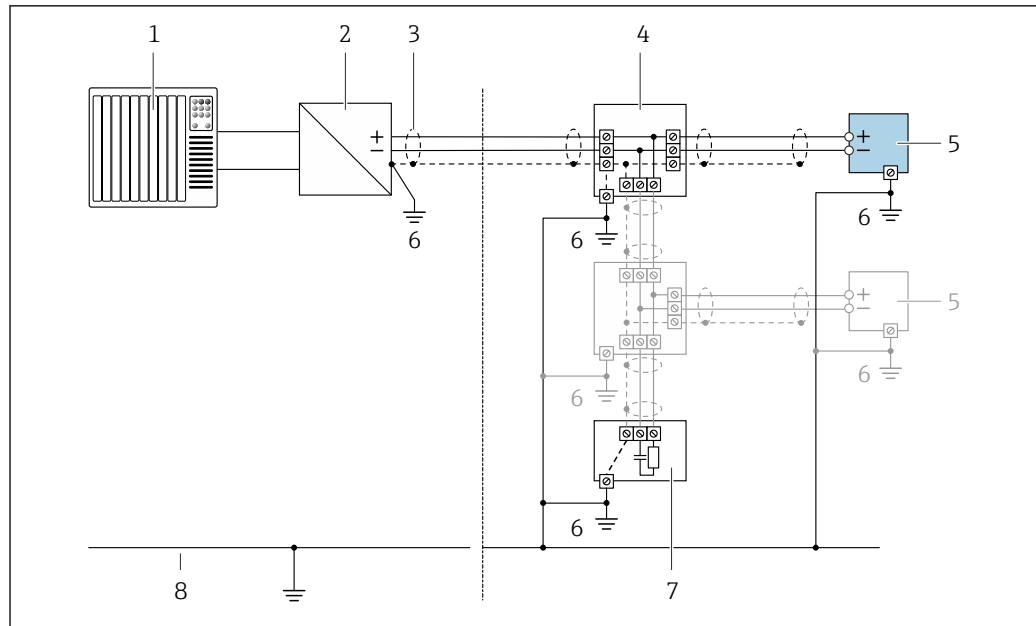

A0028768

15 Connection example for PROFIBUS PA

- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential equalization conductor

7.1.7 Preparing the measuring device

Carry out the steps in the following order:

1. Mount the sensor and transmitter.
2. Connection housing, sensor: Connect connecting cable.
3. Transmitter: Connect connecting cable.
4. Transmitter: Connect signal cable and cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:
Observe requirements for connecting cables → 34.

7.2 Connecting the measuring device: Proline 500 - digital

NOTICE

Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.2.1 Connecting the connecting cable

⚠ WARNING

Risk of damaging the electronic components!

- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- ▶ Ground the connection housing of the sensor via the external screw terminal.

Connecting cable terminal assignment

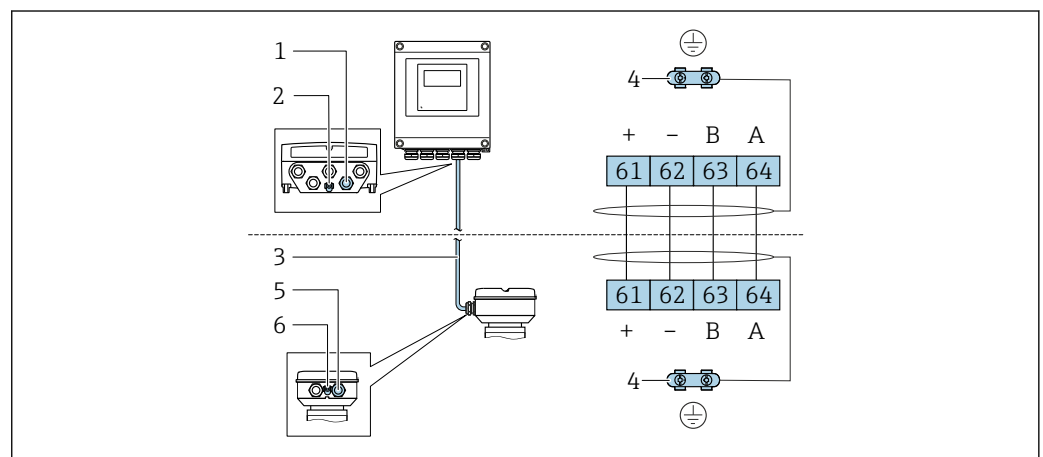

A0028198

- 1 Cable entry for cable on transmitter housing
- 2 Protective earth (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; on device plug versions grounding is through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- 6 Protective earth (PE)

Connecting the connecting cable to the sensor connection housing

- Connection via terminals with order code for "Sensor connection housing":
 - Option A "Aluminum, coated" → 42
 - Option B "Stainless" → 43
 - Option L "Cast, stainless" → 42
- Connection via connectors with order code for "Sensor connection housing":
 - Option C "Ultra-compact hygienic, stainless" → 44


Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals → 45.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":

- Option A "Aluminum coated"
- Option L "Cast, stainless"

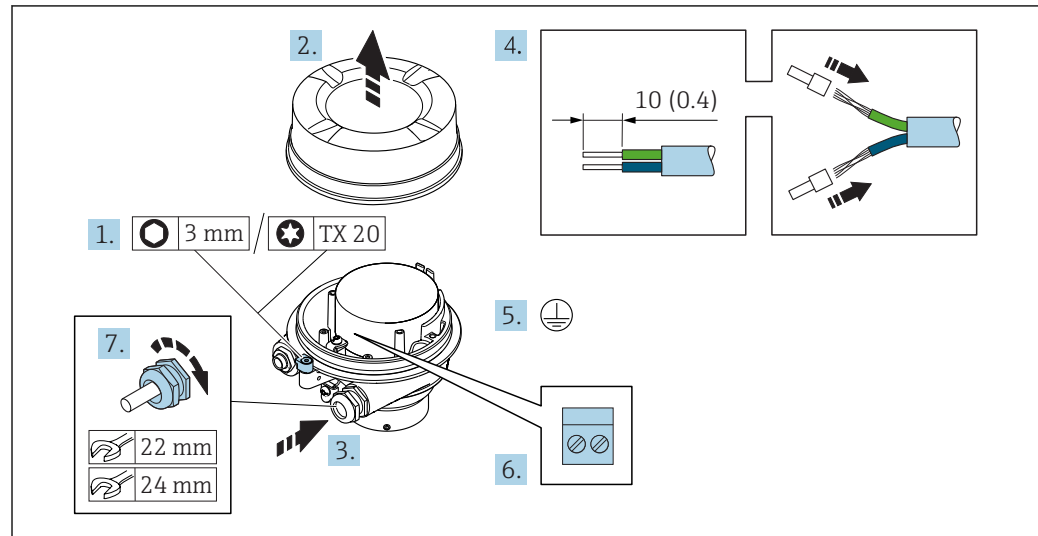

A0029616

1. Loosen the securing clamp of the housing cover.
2. Unscrew the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - ↳ This concludes the process for connecting the connecting cable.

⚠ WARNING


Housing degree of protection voided due to insufficient sealing of the housing.

- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.

8. Screw on the housing cover.
9. Tighten the securing clamp of the housing cover.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":
Option **B** "Stainless"

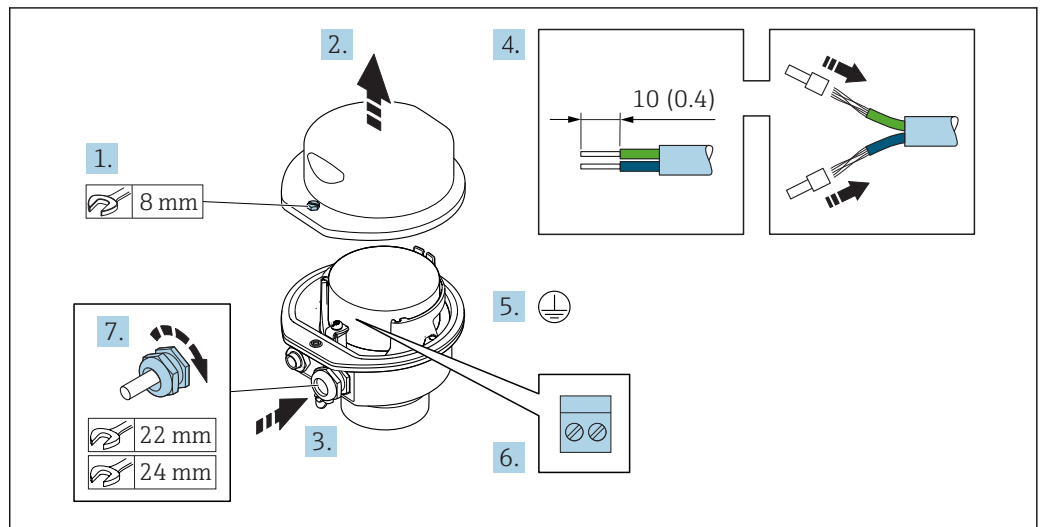


A0029613

1. Release the securing screw of the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - This concludes the process for connecting the connecting cable.
8. Close the housing cover.
9. Tighten the securing screw of the housing cover.

Connecting the sensor connection housing via the connector


For the device version with the order code for "Sensor connection housing":
Option **C** "Ultra-compact hygienic, stainless"

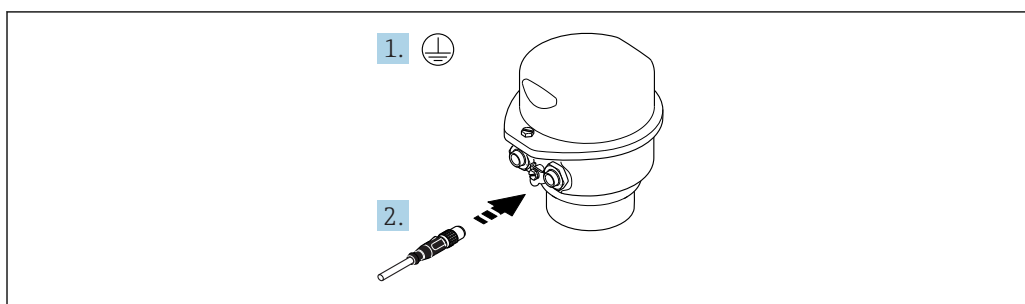

A0029615

1. Connect the protective ground.
2. Connect the connector.


Connecting the connecting cable to the transmitter

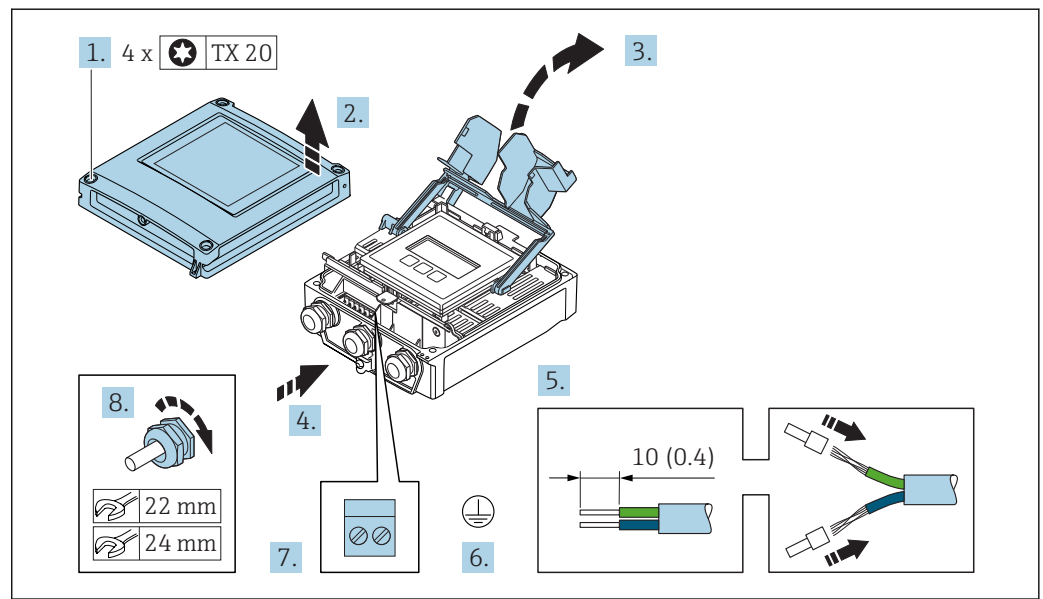

A0029597


1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
6. Connect the protective ground.
7. Connect the cable in accordance with the connecting cable terminal assignment
→ 41.
8. Firmly tighten the cable glands.
↳ This concludes the process for connecting the connecting cable.
9. Close the housing cover.
10. Tighten the securing screw of the housing cover.
11. After connecting the connecting cable:
Connect the signal cable and the supply voltage cable → 46.

7.2.2 Connecting the signal cable and the supply voltage cable

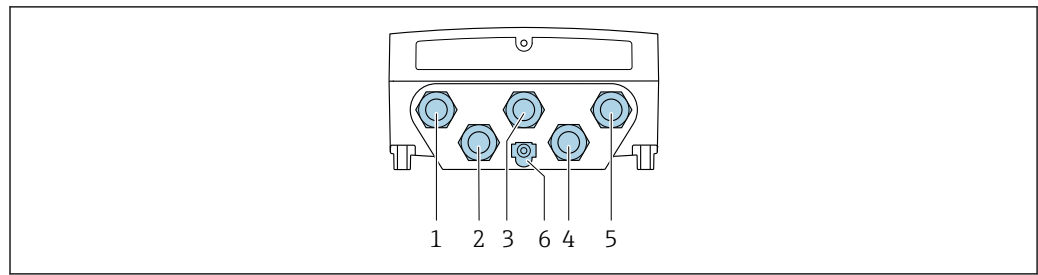

A0028200

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output; optional: connection for external WLAN antenna
- 6 Protective earth (PE)

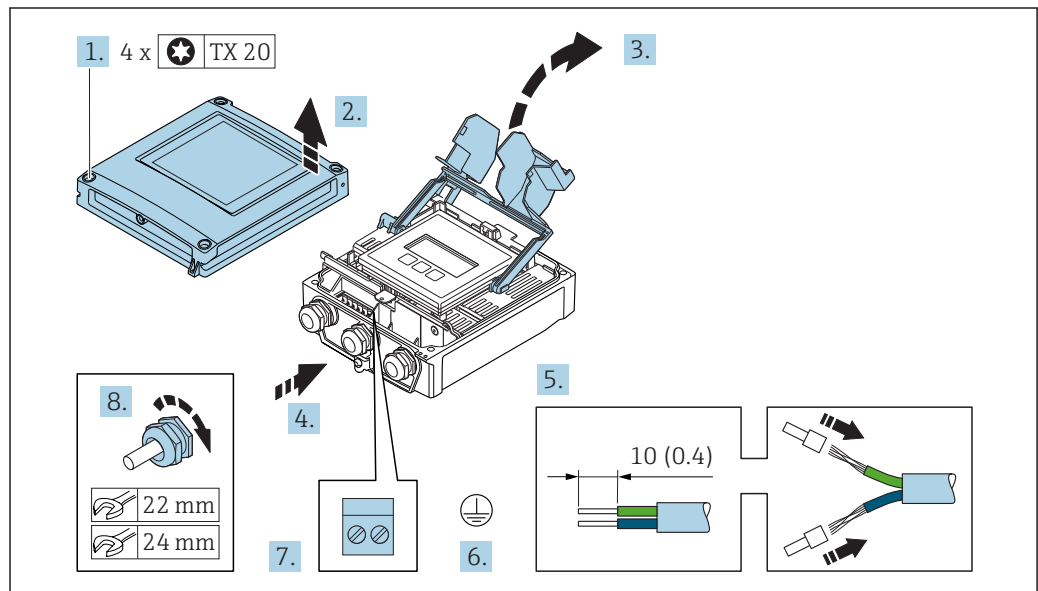

A0029597

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
6. Connect the protective ground.
7. Connect the cable in accordance with the terminal assignment .
 - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 38.
8. Firmly tighten the cable glands.
 - ↳ This concludes the cable connection process.
9. Close the terminal cover.
10. Close the housing cover.

⚠ WARNING

Housing degree of protection may be voided due to insufficient sealing of the housing.

- Screw in the screw without using any lubricant.


⚠ WARNING

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

- Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

11. Tighten the 4 fixing screws on the housing cover.

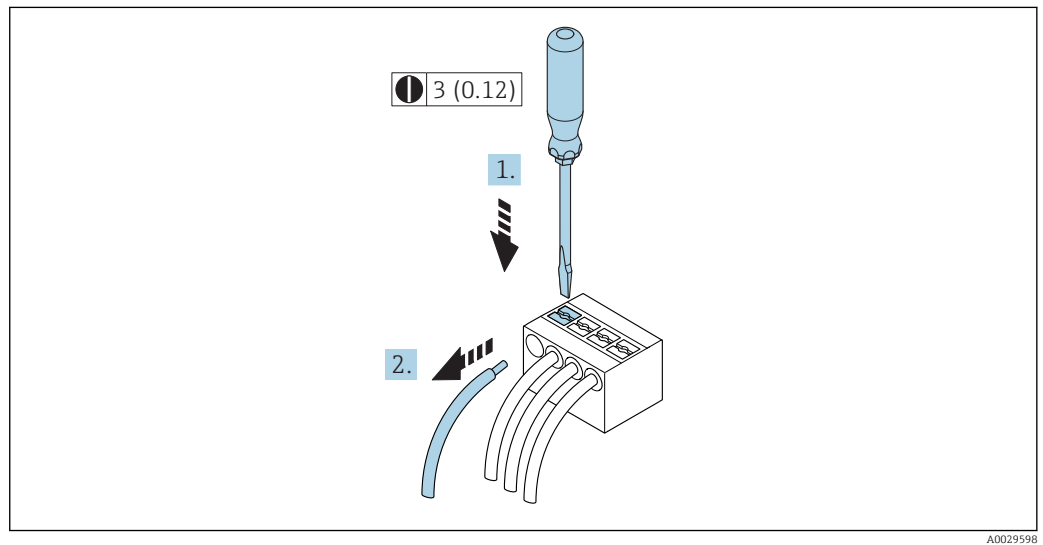Removing a cable

16 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

7.3 Connecting the measuring device: Proline 500

NOTICE

Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.3.1 Connecting the connecting cable

⚠ WARNING

Risk of damaging the electronic components!

- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- ▶ Ground the connection housing of the sensor via the external screw terminal.

Connecting cable terminal assignment

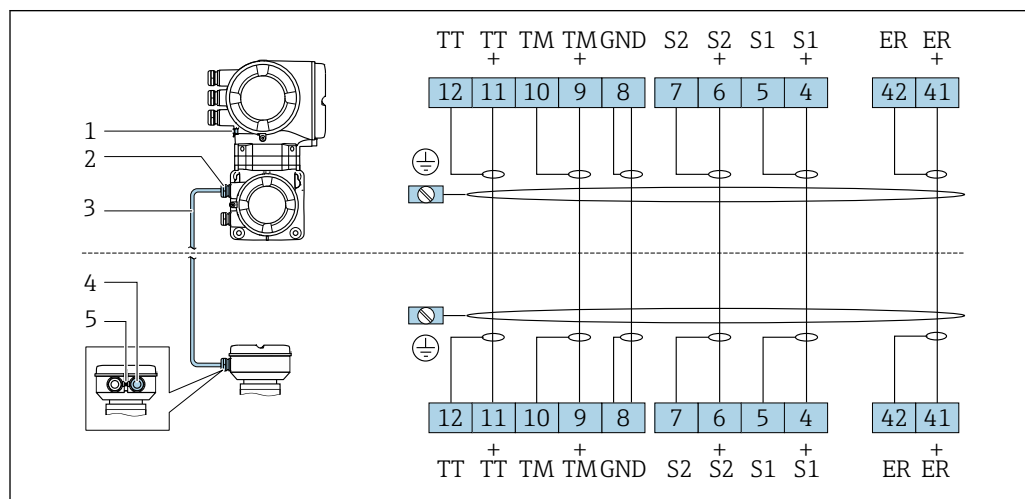

A0028197

- 1 Protective earth (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Protective earth (PE)

Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Housing":


- Option **B** "Stainless" → 50
- Option **L** "Cast, stainless" → 49

Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals → 51.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Housing":
Option L "Cast, stainless"

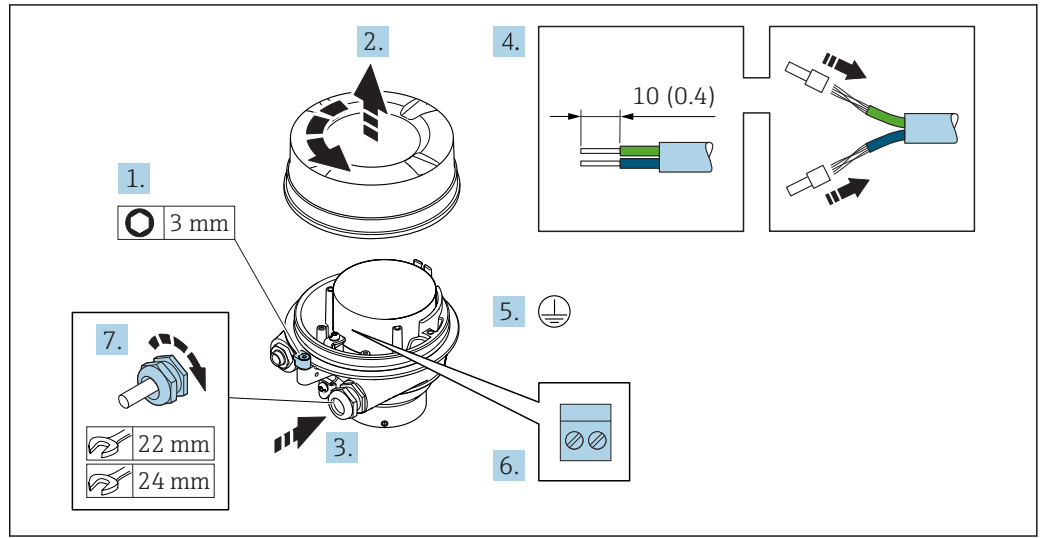

A0029612

1. Loosen the securing clamp of the housing cover.
2. Unscrew the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - This concludes the process for connecting the connecting cable.


⚠ WARNING

Housing degree of protection voided due to insufficient sealing of the housing.

- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
8. Screw on the housing cover.
 9. Tighten the securing clamp of the housing cover.

Connecting the sensor connection housing via terminals


For the device version with the order code for "Housing":
Option B "Stainless"

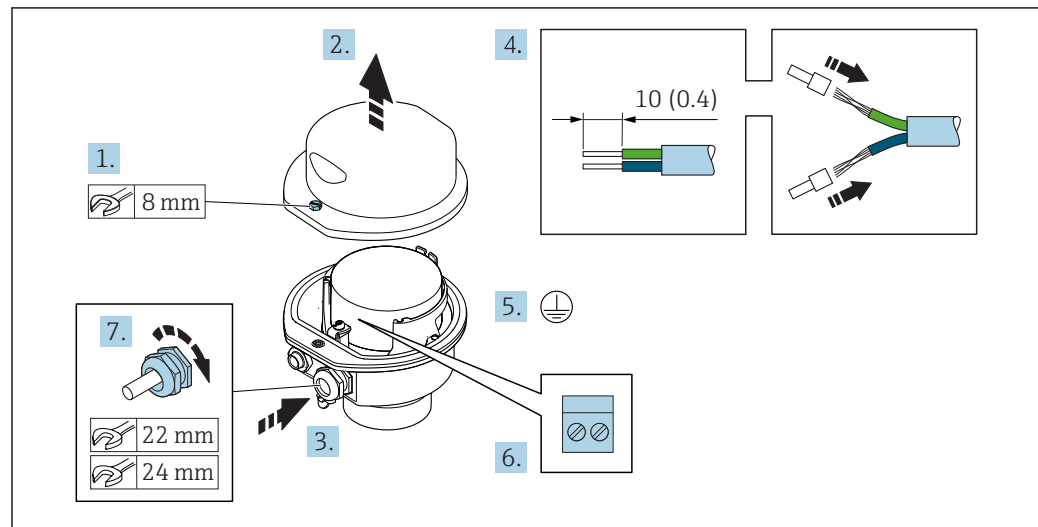

A0029613

1. Release the securing screw of the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - ➔ This concludes the process for connecting the connecting cable.
8. Close the housing cover.
9. Tighten the securing screw of the housing cover.


Connecting the connecting cable to the transmitter

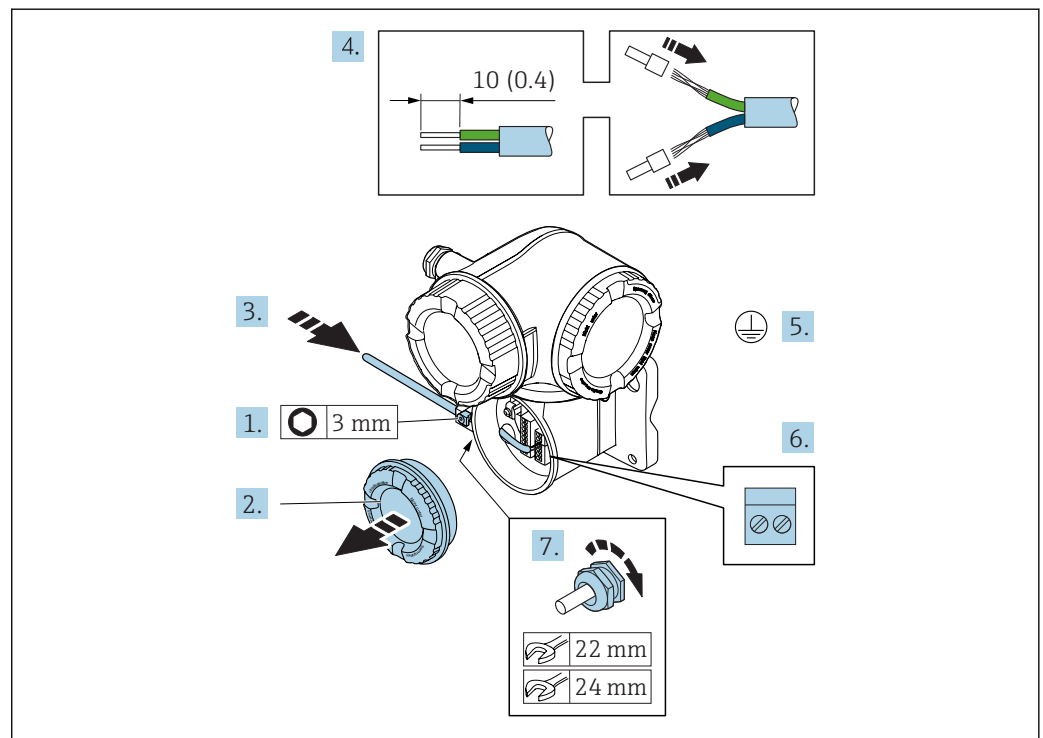

A0029592


1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment
→ 48.
7. Firmly tighten the cable glands.
↳ This concludes the process for connecting the connecting cable.
8. Screw on the connection compartment cover.
9. Tighten the securing clamp of the connection compartment cover.
10. After connecting the connecting cable: After connecting the connecting cables:
Connect the signal cable and the supply voltage cable → 52.

7.3.2 Connecting the signal cable and the supply voltage cable

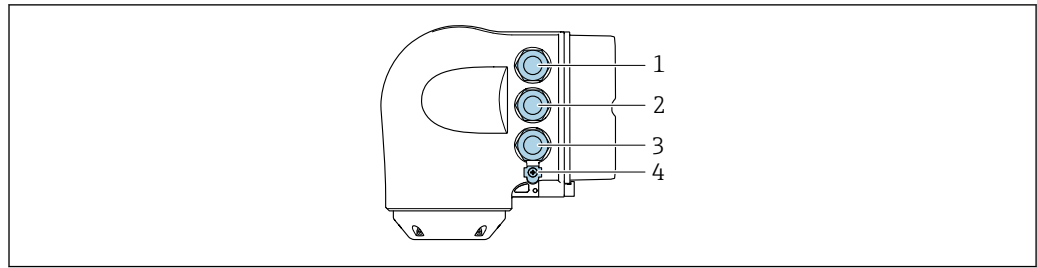


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45)
- 4 Protective earth (PE)

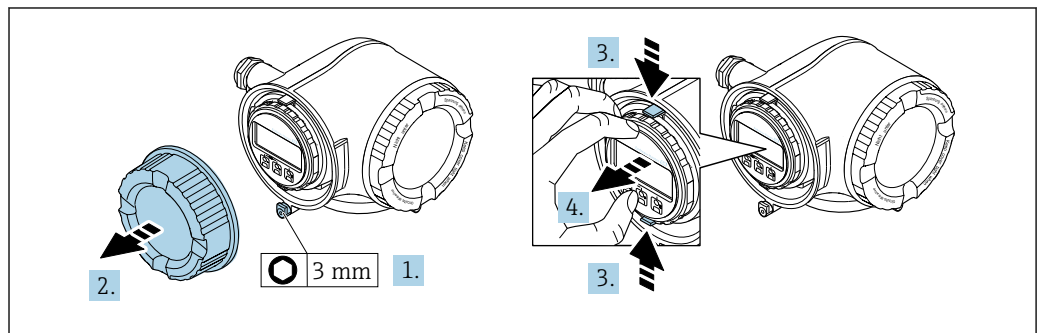


A0029813

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Squeeze the tabs of the display module holder together.
4. Remove the display module holder.

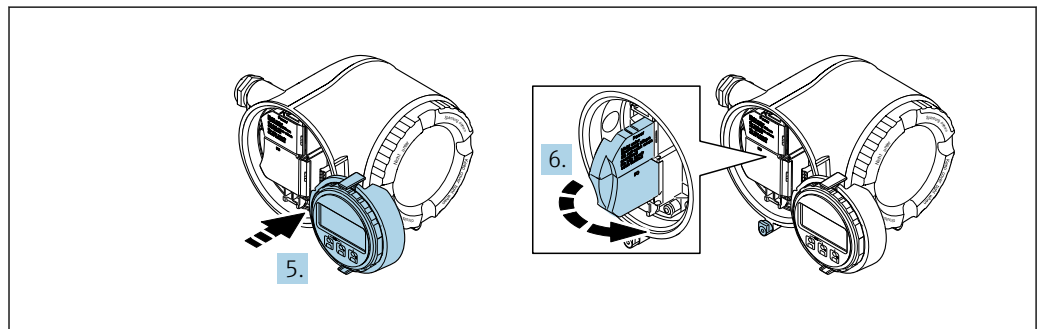


A0029814

5. Attach the holder to the edge of the electronics compartment.
6. Open the terminal cover.

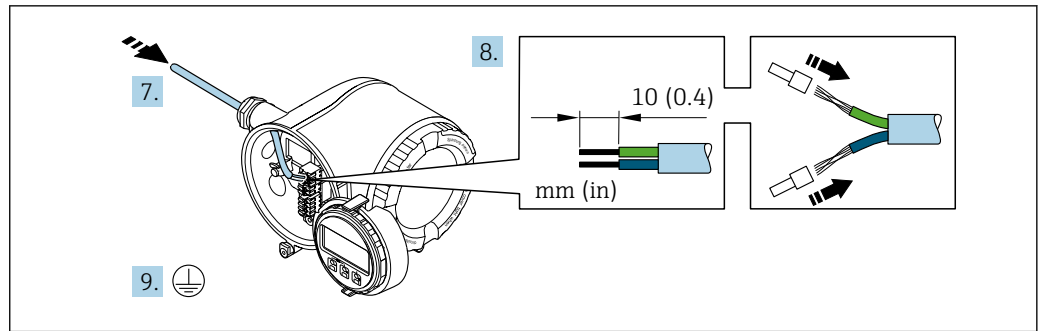

A0029815


7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
9. Connect the protective ground.

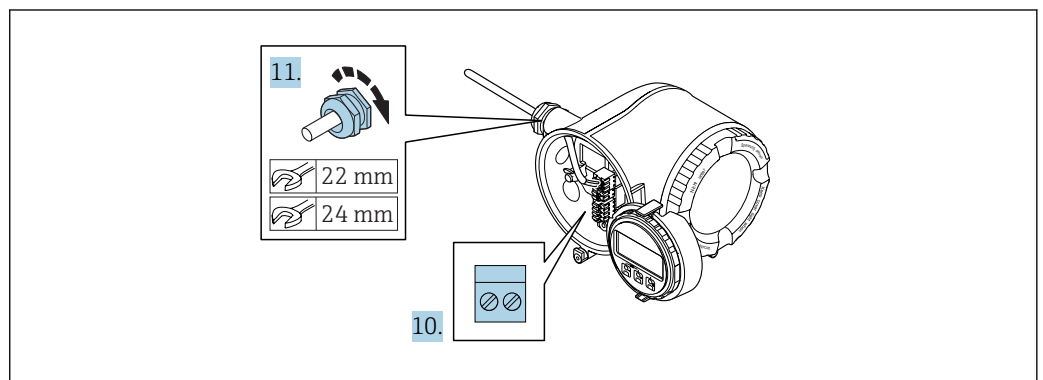

A0029816

10. Connect the cable in accordance with the terminal assignment .
 - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 38.
11. Firmly tighten the cable glands.
 - ↳ This concludes the cable connection process.
12. Close the terminal cover.
13. Fit the display module holder in the electronics compartment.
14. Screw on the connection compartment cover.
15. Secure the securing clamp of the connection compartment cover.

Removing a cable

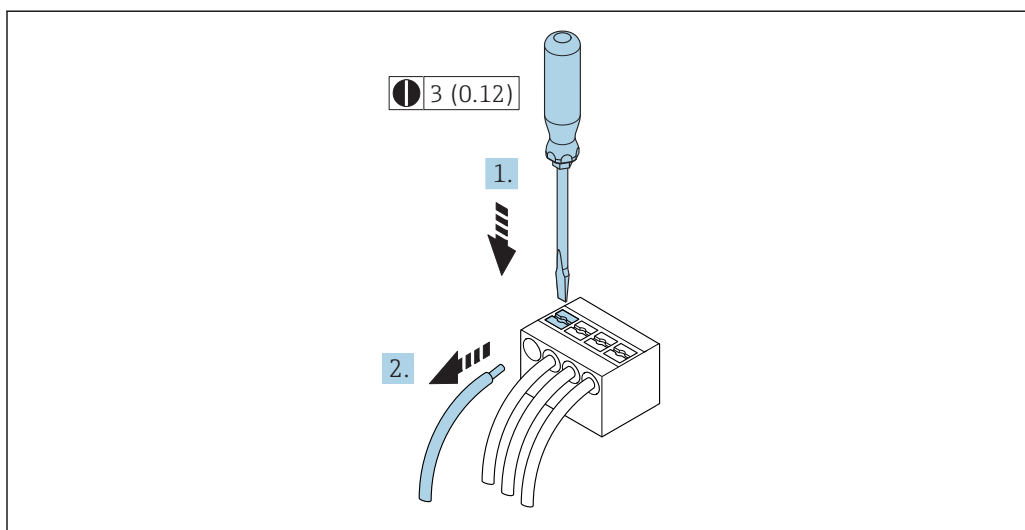

A0029598

17 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

7.4 Ensuring potential equalization


7.4.1 Requirements

No special measures for potential equalization are required.

7.5 Special connection instructions

7.5.1 Connection examples

PROFIBUS PA

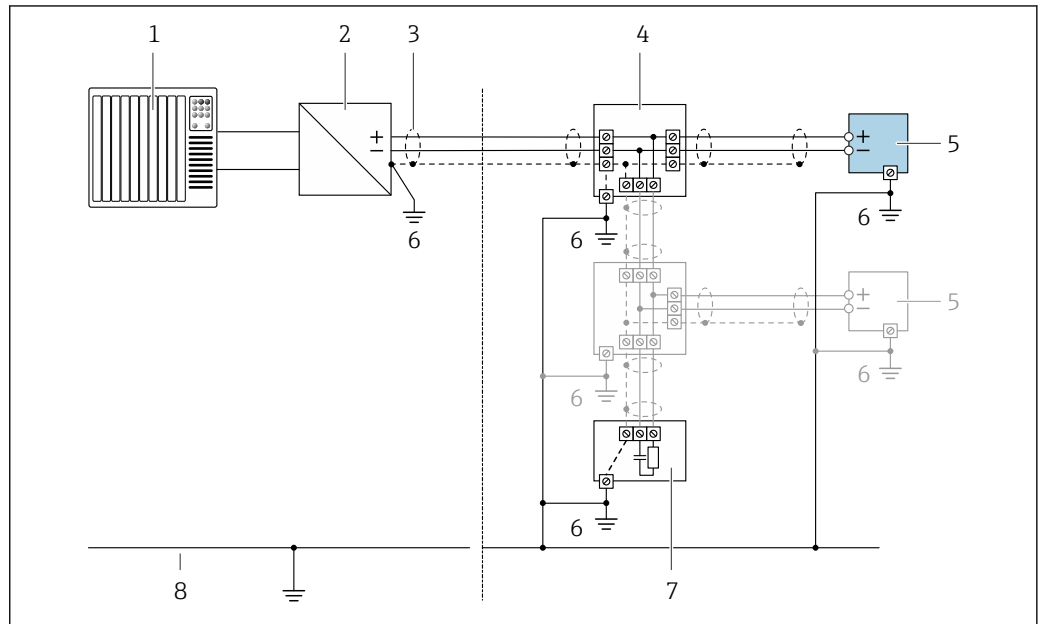


A0028768

18 Connection example for PROFIBUS PA

- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line


Current output 4-20 mA

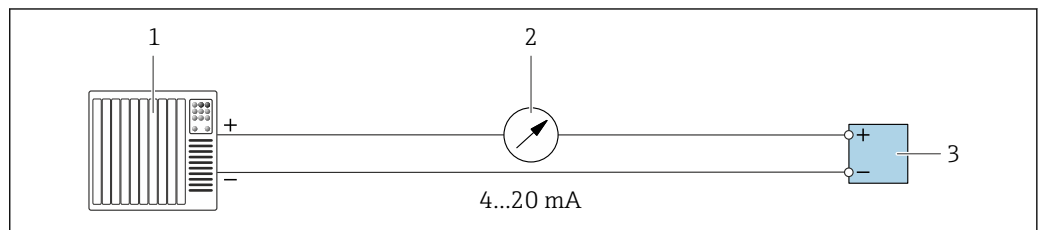

A0028758

19 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

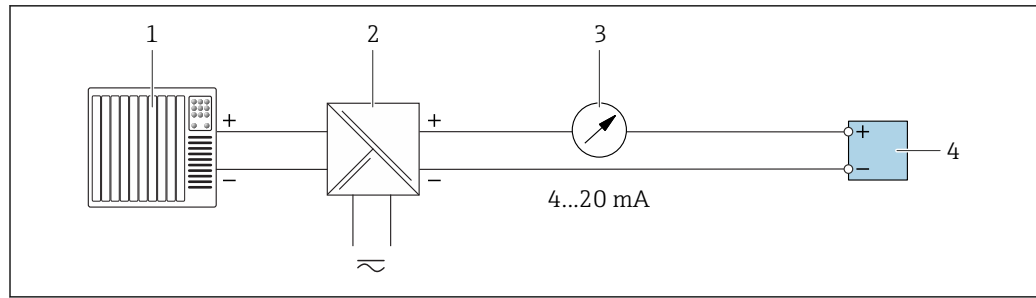


A0028759

20 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

Pulse/frequency output

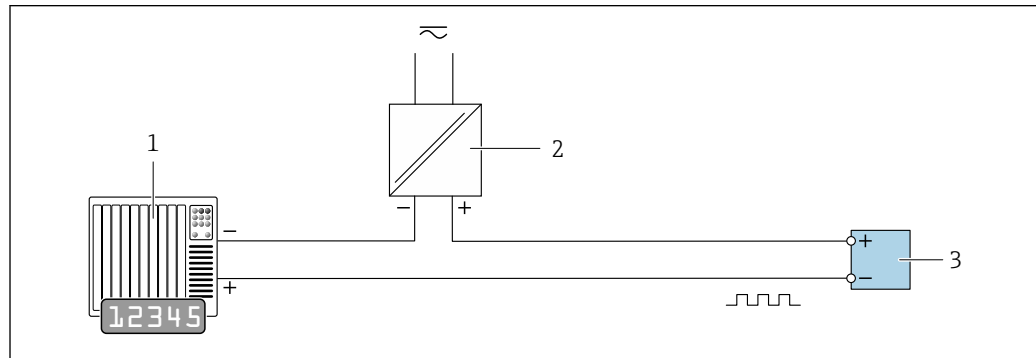


A0028761

21 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 243

Switch output

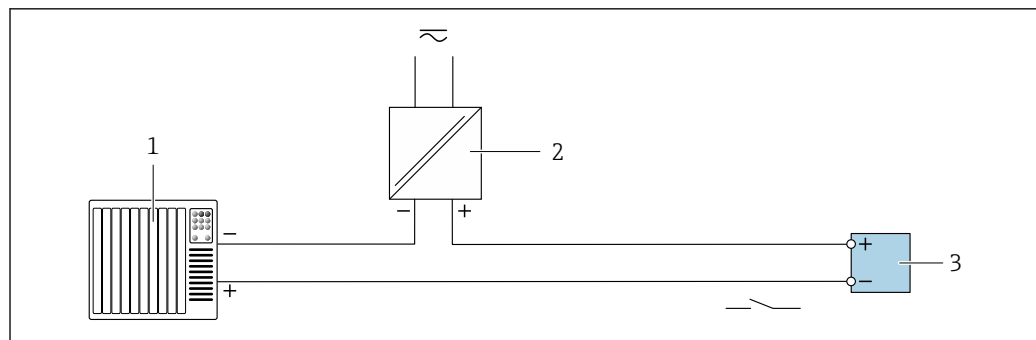


A0028760

22 Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 243

Relay output

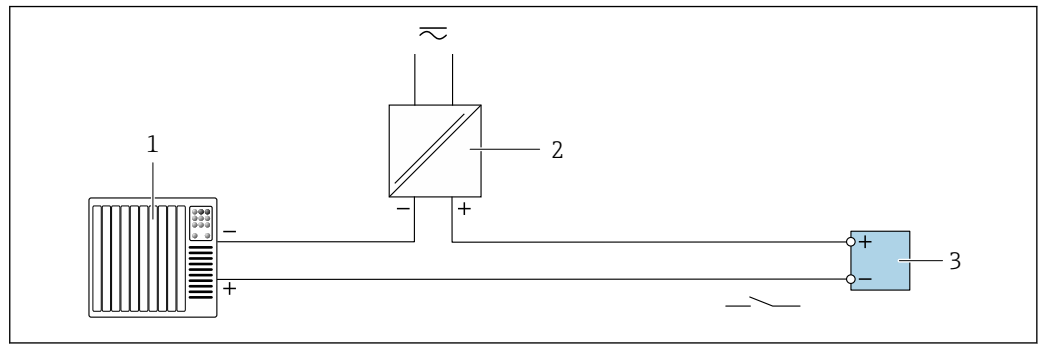


A0028760

23 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 245

Current input

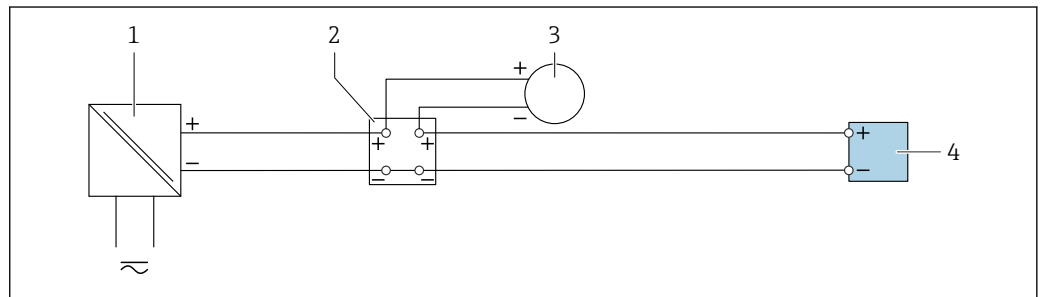


A0028915

24 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (for reading in pressure or temperature, for instance)
- 4 Transmitter

Status input

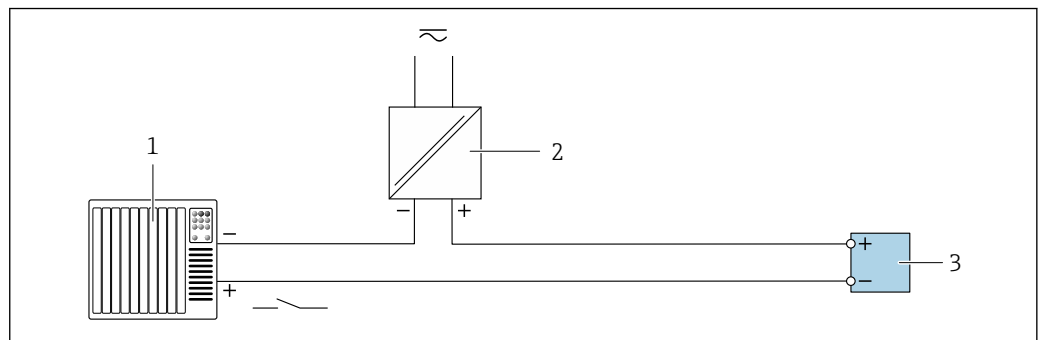

A0028764

25 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

7.6 Hardware settings

7.6.1 Setting the device address


The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

Risk of electric shock when opening the transmitter housing.

- ▶ Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

Proline 500 – digital transmitter

Hardware addressing

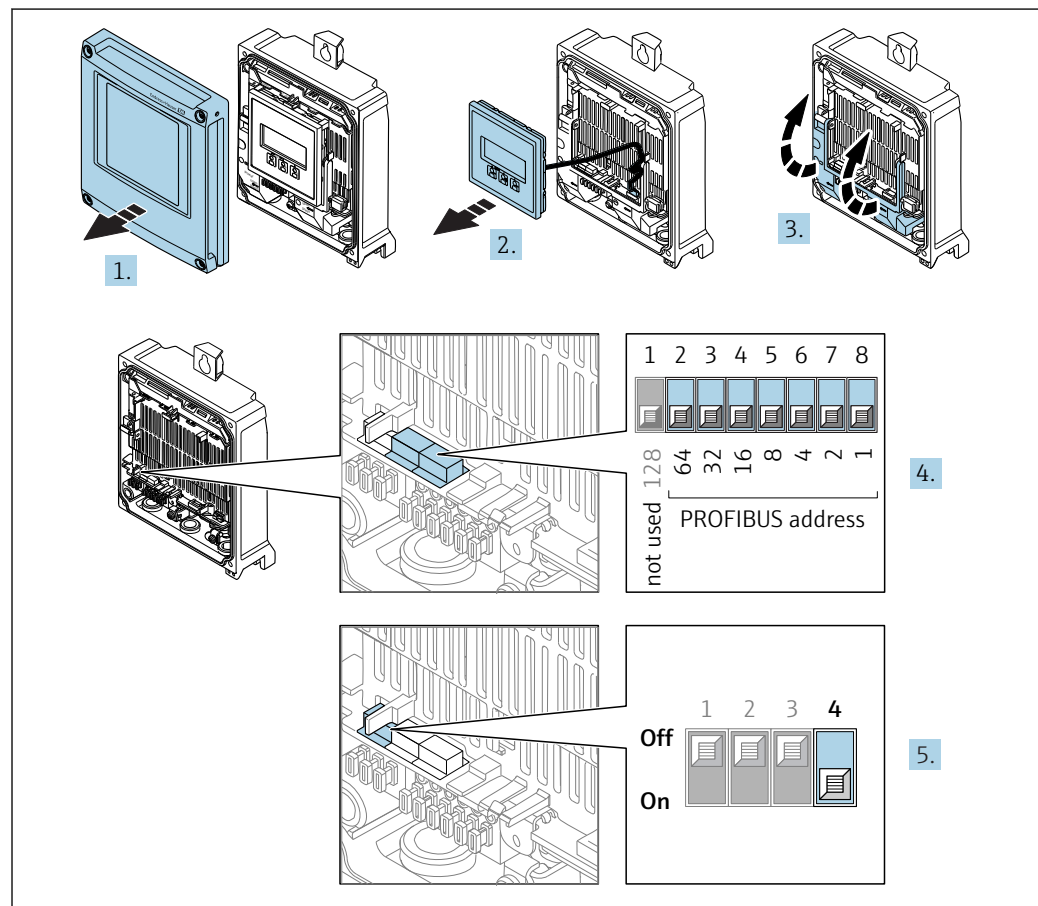

A0029679


1. Open the housing cover.
2. Remove the display module.
3. Fold open the terminal cover.
4. Set the desired device address using the DIP switches.
5. To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.
 - ↳ The change of device address takes effect after 10 seconds. The device is restarted.

Software addressing

- ▶ To switch addressing from hardware addressing to software addressing: set DIP switch No. 4 to **Off**.
 - ↳ The device address configured in the **Device address** parameter (→ 109) takes effect after 10 seconds. The device is restarted.

Proline 500 transmitter*Hardware addressing*


1.

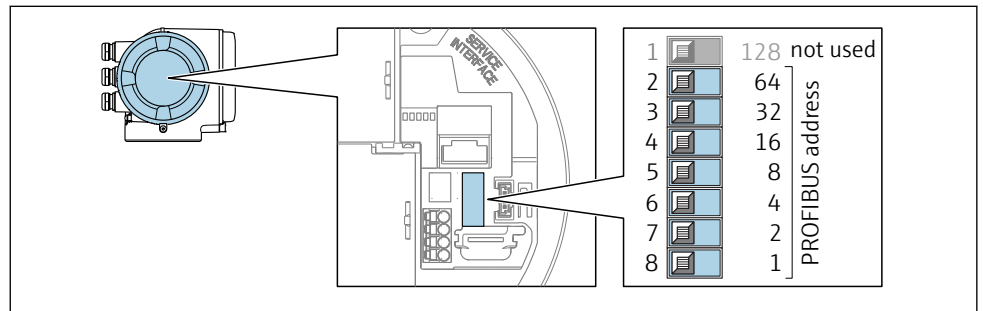

A0029637

Set the desired device address using the DIP switches in the connection compartment.

2.

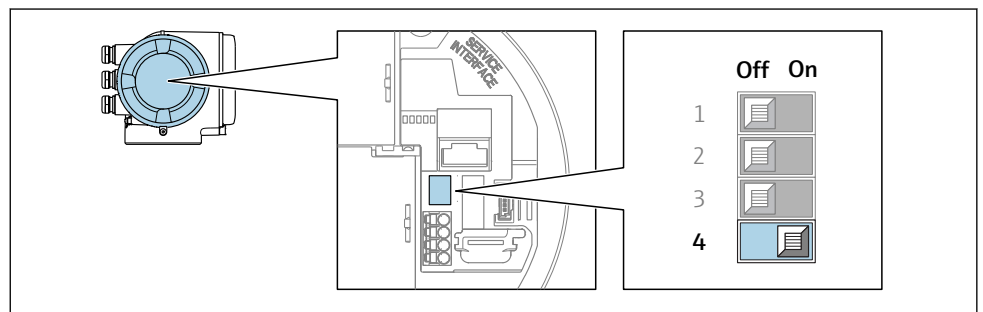

A0029633

To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.

- ↳ The change of device address takes effect after 10 seconds. The device is restarted.

Software addressing

- ▶ To switch addressing from hardware addressing to software addressing: set DIP switch No. 4 to **Off**.
 - ↳ The device address configured in the **Device address** parameter (→ 109) takes effect after 10 seconds. The device is restarted.


7.6.2 Activating the default IP address

The default IP address 192.168.1.212 can be activated by DIP switch.

Activating the default IP address by DIP switch: Proline 500 - digital

Risk of electric shock when opening the transmitter housing.

- ▶ Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

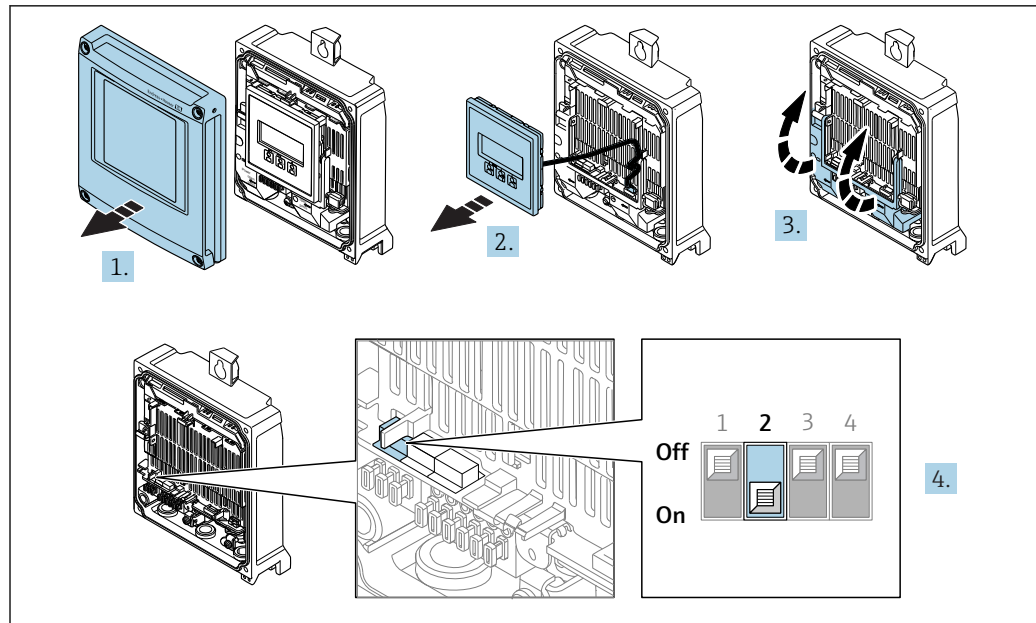


A0034500

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Set DIP switch No. 2 on the I/O electronics module from **OFF** → **ON**.
5. Reverse the removal procedure to reassemble the transmitter.
6. Reconnect the device to the power supply.
 - ↳ The default IP address is used once the device is restarted.

Activating the default IP address via the DIP switch: Proline 500

Risk of electric shock when opening the transmitter housing.

- Before opening the transmitter housing:
- Disconnect the device from the power supply.

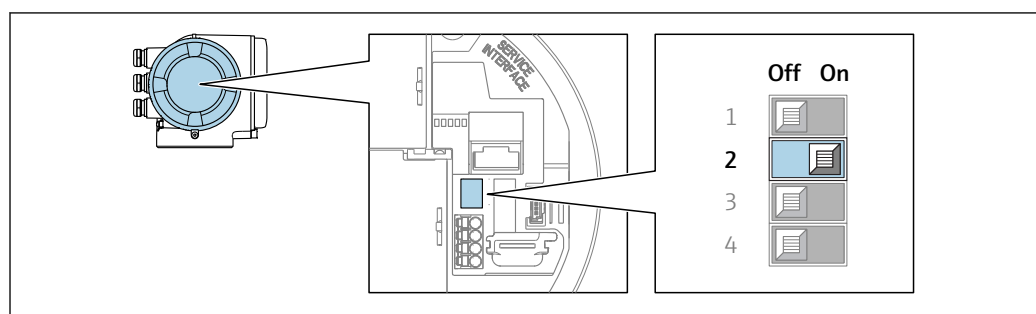

A0034499


1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary.
3. Set DIP switch No. 2 on the I/O electronics module from **OFF** → **ON**.
4. Reverse the removal procedure to reassemble the transmitter.
5. Reconnect the device to the power supply.
 - ↳ The default IP address is used once the device is restarted.

7.7 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:
Route the cable so that it loops down before the cable entry ("water trap").

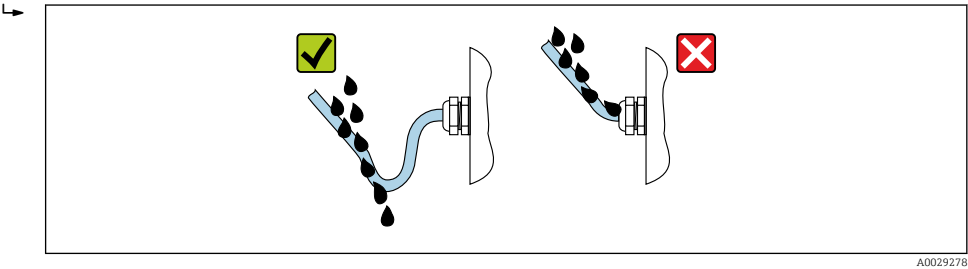

A0029278


- 6. Insert dummy plugs into unused cable entries.

7.8 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables used meet the requirements?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 61?	<input type="checkbox"/>

8 Operation options

8.1 Overview of operation options

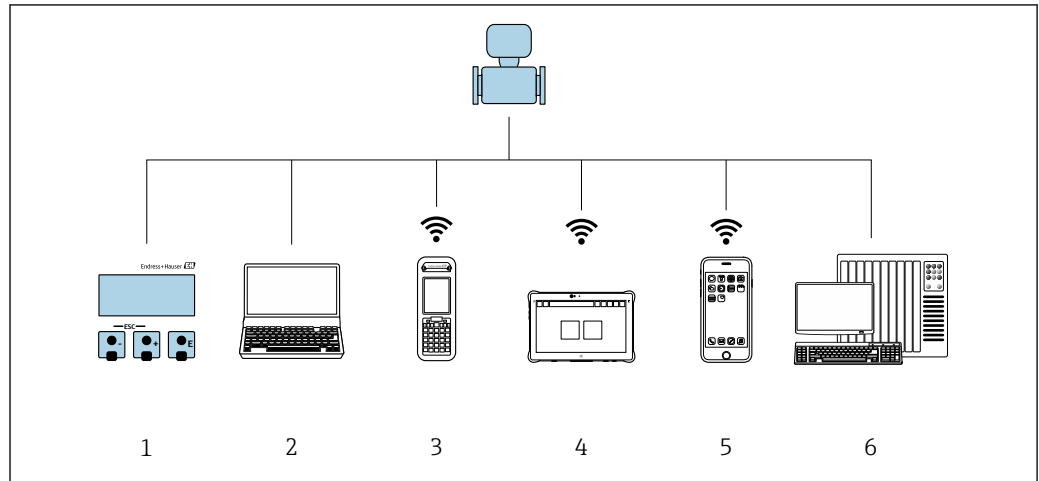


- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Xpert SMT70
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu



For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device → 268

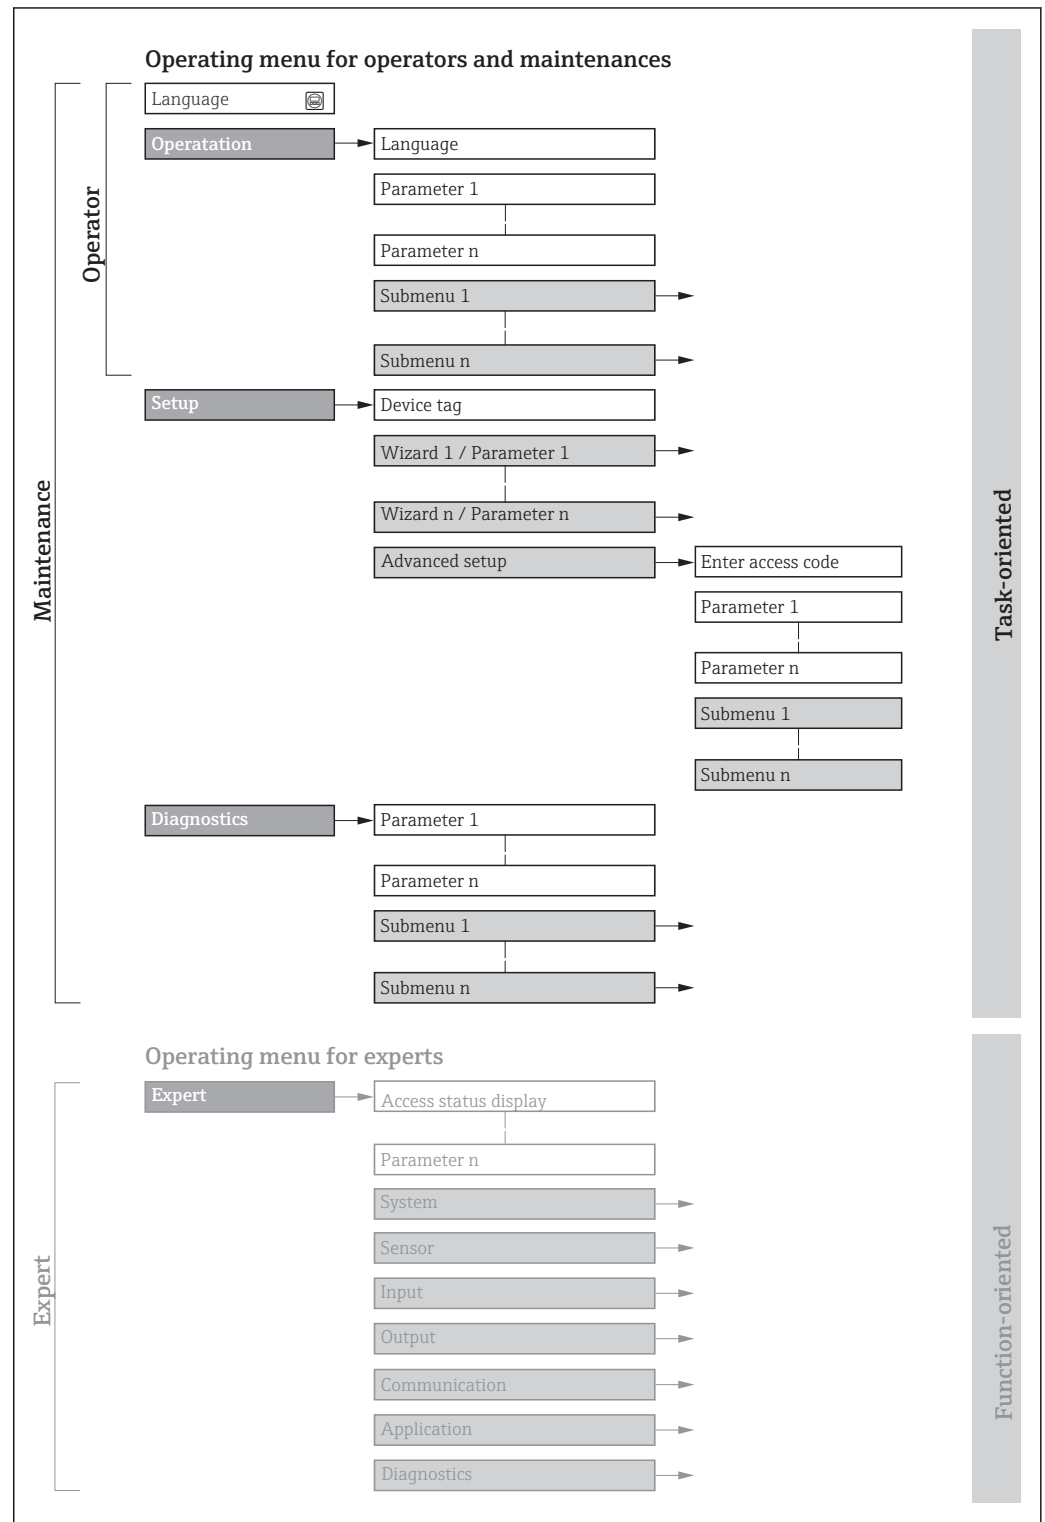

26 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> Configuring the operational display Reading measured values 	<ul style="list-style-type: none"> Defining the operating language Defining the Web server operating language Resetting and controlling totalizers
Operation			<ul style="list-style-type: none"> Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: <ul style="list-style-type: none"> Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface 	Wizards for fast commissioning: <ul style="list-style-type: none"> Set the system units Configuration of the communication interface Define the medium Display I/O/configuration Configure the inputs Configure the outputs Configuring the operational display Define the output conditioning Set the low flow cut off Configure partial and empty pipe detection Advanced setup <ul style="list-style-type: none"> For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configure the WLAN settings Administration (define access code, reset measuring device)
Diagnostics			Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Analog inputs Is used to display the analog input. Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.

Menu/parameter		User role and tasks	Content/meaning
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none">▪ Commissioning measurements under difficult conditions▪ Optimal adaptation of the measurement to difficult conditions▪ Detailed configuration of the communication interface▪ Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none">▪ System Contains all higher-order device parameters which do not concern the measurement or the communication interface.▪ Sensor Configuration of the measurement.▪ Output Configure the pulse/frequency/switch output.▪ Input Configuring the status input.▪ Output Configuring of the analog current outputs as well as the pulse/frequency and switch output.▪ Communication Configuration of the digital communication interface and the Web server.▪ Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks.▪ Application Configure the functions that go beyond the actual measurement (e.g. totalizer).▪ Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

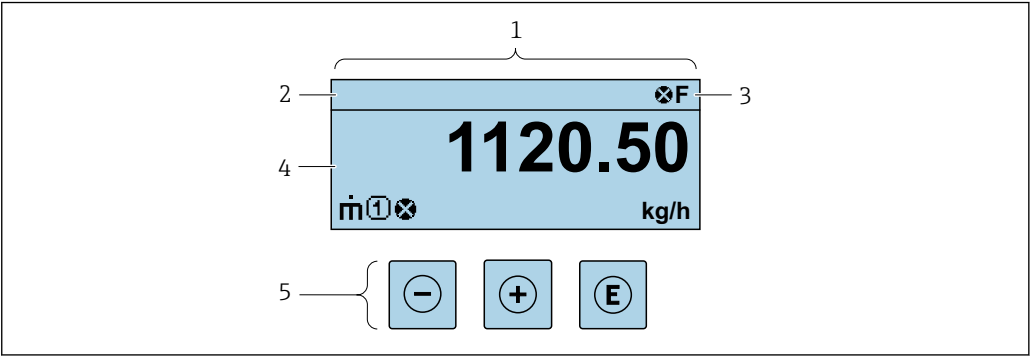





A0029348

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements → 71




Status area

The following symbols appear in the status area of the operational display at the top right:








- Status signals→ 167
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior→ 168
 - : Alarm
 - : Warning
- : Locking (the device is locked via the hardware)
- : Communication (communication via remote operation is active)

Display area



In the display area, each measured value is prefaced by certain symbol types for further description:

	Measured variable	Measurement channel number	Diagnostic behavior
	↓	↓	↓
Example			
			Appears only if a diagnostics event is present for this measured variable.

Measured values


Symbol	Meaning
	Mass flow
	<ul style="list-style-type: none">■ Volume flow■ Corrected volume flow
	<ul style="list-style-type: none">■ Density■ Reference density
	Temperature
	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.
	Status input

Measurement channel numbers


Symbol	Meaning
 ... 	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols → 168

 The number and display format of the measured values can be configured via the **Format display** parameter (→ 127).

8.3.2 Navigation view

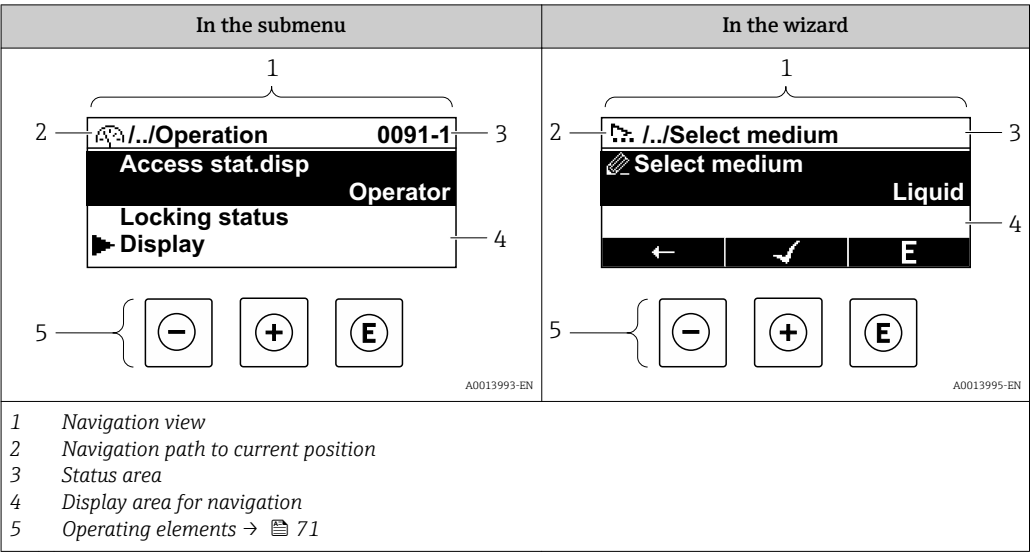

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

	<div>■ In the submenu: Display symbol for menu</div> <div>■ In the wizard: Display symbol for wizard</div>	<div>Omission symbol for operating menu levels in between</div>	<div>Name of current</div> <div>■ Submenu</div> <div>■ Wizard</div> <div>■ Parameters</div>
	↓	↓	↓
Examples	<div></div>	<div>/ .. /</div>	<div>Display</div>
	<div></div>	<div>/ .. /</div>	<div>Display</div>

For more information about the icons in the menu, refer to the "Display area" section → 68





Status area

The following appears in the status area of the navigation view in the top right corner:





- In the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
 - In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal
- For information on the diagnostic behavior and status signal → 167
■ For information on the function and entry of the direct access code → 73

Display area


Menus

Symbol	Meaning
	Operation Appears: <ul style="list-style-type: none"> In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu
	Setup Appears: <ul style="list-style-type: none"> In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
	Diagnostics Appears: <ul style="list-style-type: none"> In the menu next to the "Diagnostics" selection At the left in the navigation path in the Diagnostics menu
	Expert Appears: <ul style="list-style-type: none"> In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu




Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizard
	Parameters within a wizard  No display symbol exists for parameters in submenus.

Locking


Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none"> By a user-specific access code By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.

8.3.3 Editing view


Numeric editor

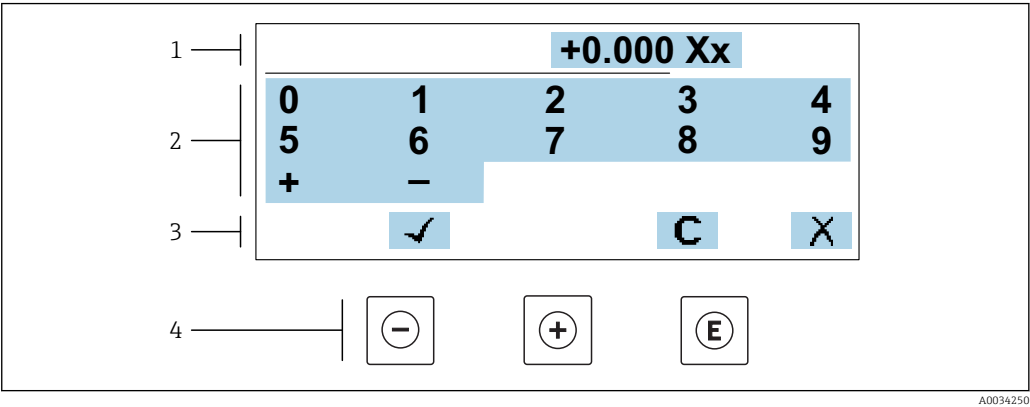

27 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

Text editor

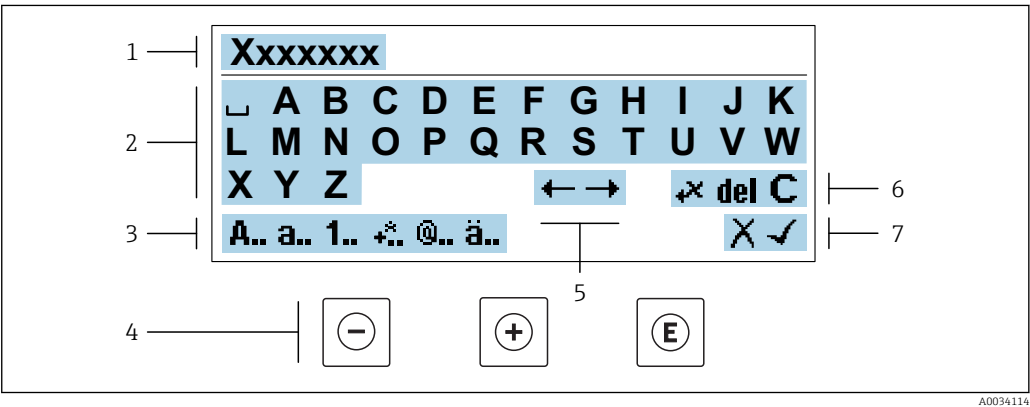



28 For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

Using the operating elements in the editing view





Operating key(s)	Meaning
	Minus key Move the entry position to the left.
	Plus key Move the entry position to the right.

Operating key(s)	Meaning
	Enter key <ul style="list-style-type: none"> Press the key briefly: confirm your selection. Press the key for 2 s: confirm the entry.
	Escape key combination (press keys simultaneously) Close the editing view without accepting the changes.






Input screens

Symbol	Meaning
A..	Upper case
a..	Lower case
1..	Numbers
+..	Punctuation marks and special characters: = + - * / ² ³ ¼ ½ ¾ () [] < > { }
@..	Punctuation marks and special characters: " ' ^ . , ; : ? ! % μ ° € \$ £ ¥ § @ # / \ ~ & _
ä..	Umlauts and accents

Controlling data entries

Symbol	Meaning
	Move entry position
	Reject entry
	Confirm entry
	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
C	Clear all the characters entered

8.3.4 Operating elements

Operating key(s)	Meaning
	<p>Minus key</p> <p><i>In a menu, submenu</i> Moves the selection bar upwards in a picklist.</p> <p><i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter.</p> <p><i>With a text and numeric editor</i> Move the entry position to the left.</p>
	<p>Plus key</p> <p><i>In a menu, submenu</i> Moves the selection bar downwards in a picklist.</p> <p><i>With a Wizard</i> Confirms the parameter value and goes to the next parameter.</p> <p><i>With a text and numeric editor</i> Move the entry position to the right.</p>
	<p>Enter key</p> <p><i>For operational display</i> Pressing the key briefly opens the operating menu.</p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> ■ Pressing the key briefly: <ul style="list-style-type: none"> – Opens the selected menu, submenu or parameter. – Starts the wizard. – If help text is open, closes the help text of the parameter. ■ Pressing the key for 2 s for parameter: <ul style="list-style-type: none"> – If present, opens the help text for the function of the parameter. <p><i>With a Wizard</i> Opens the editing view of the parameter.</p> <p><i>With a text and numeric editor</i></p> <ul style="list-style-type: none"> ■ Press the key briefly: confirm your selection. ■ Press the key for 2 s: confirm the entry.
	<p>Escape key combination (press keys simultaneously)</p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> ■ Pressing the key briefly: <ul style="list-style-type: none"> – Exits the current menu level and takes you to the next higher level. – If help text is open, closes the help text of the parameter. ■ Pressing the key for 2 s returns you to the operational display ("home position"). <p><i>With a Wizard</i> Exits the wizard and takes you to the next higher level.</p> <p><i>With a text and numeric editor</i> Close the editing view without accepting the changes.</p>
	<p>Minus/Enter key combination (press the keys simultaneously)</p> <ul style="list-style-type: none"> ■ If the keypad lock is active: <ul style="list-style-type: none"> – Press the key for 3 s: deactivate the keypad lock. ■ If the keypad lock is not active: <ul style="list-style-type: none"> – Press the key for 3 s: the context menu opens along with the option for activating the keypad lock.



8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:



- Setup
- Data backup
- Simulation

Calling up and closing the context menu



The user is in the operational display.

1. Press the  and  keys for longer than 3 seconds.
 - ↳ The context menu opens.

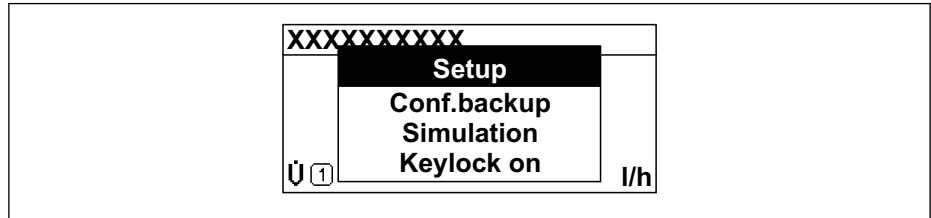

2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements
→  67

Example: Setting the number of displayed measured values to "2 values"

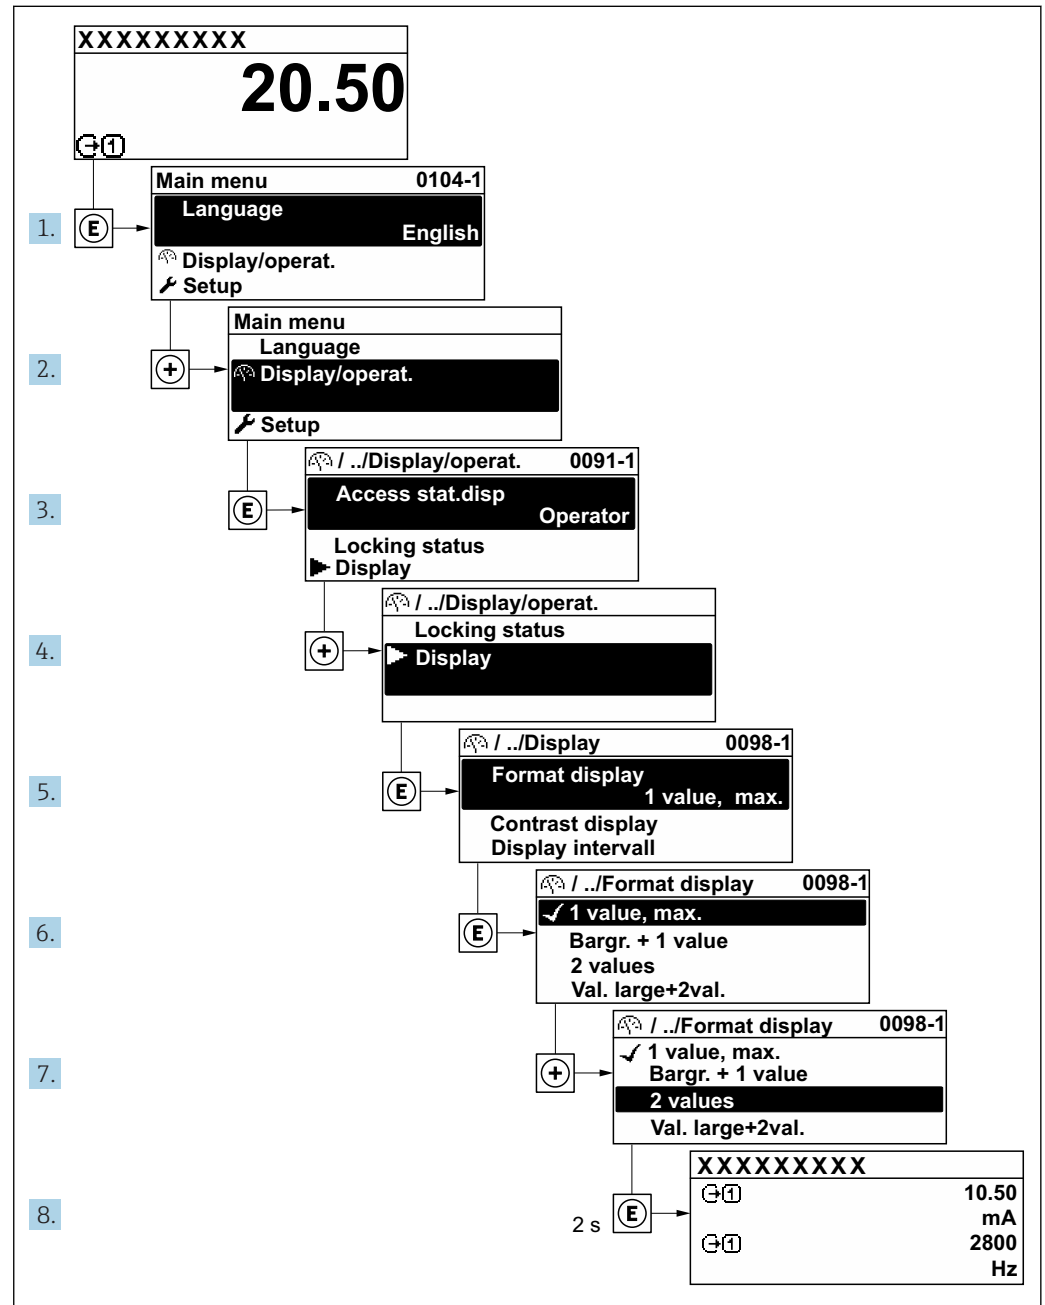

A0029562-EN


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

Expert → Direct access


The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

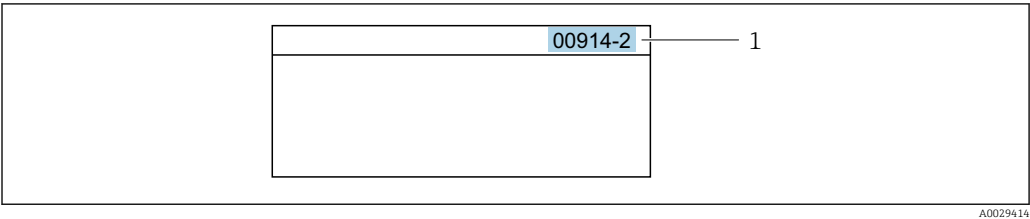

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is accessed automatically.
Example: Enter 00914 → **Assign process variable** parameter
- If a different channel is accessed: Enter the direct access code with the corresponding channel number.
Example: Enter 00914-2 → **Assign process variable** parameter


 For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press  for 2 s.
↳ The help text for the selected parameter opens.

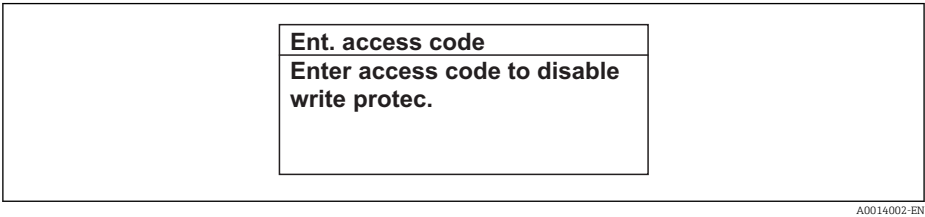

 29 Example: Help text for parameter "Enter access code"

2. Press  +  simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters




Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.


A message is displayed if the value entered is outside the permitted value range.

Ent. access code Invalid or out of range input value Min:0 Max:9999
--

A0014049-EN

 For a description of the editing view - consisting of the text editor and numeric editor - with symbols →  69, for a description of the operating elements →  71

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access →  146.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- Define the access code.
 - ↳ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role


Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	✓	✓
After an access code has been defined.	✓	✓ ¹⁾

- 1) The user only has write access after entering the access code.



Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	✓	-- ¹⁾

- 1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

 The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status


8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation →  146.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter via the respective access option.

1. After you press , the input prompt for the access code appears.

2. Enter the access code.


↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock



The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock



-  The keypad lock is switched on automatically:
- If the device has not been operated via the display for > 1 minute.
 - Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.
Press the  and  keys for 3 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.
↳ The keypad lock is switched on.

-  If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

Switching off the keypad lock



- ▶ The keypad lock is switched on.
Press the  and  keys for 3 seconds.
↳ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.


-  For additional information on the Web server, refer to the Special Documentation for the device →  268

8.4.2 Prerequisites



Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.
Screen	Recommended size: $\geq 12"$ (depends on the screen resolution)	

Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	<ul style="list-style-type: none"> ▪ Microsoft Windows 7 or higher. ▪ Mobile operating systems: <ul style="list-style-type: none"> – iOS – Android  Microsoft Windows XP is supported.	
Web browsers supported	<ul style="list-style-type: none"> ▪ Microsoft Internet Explorer 8 or higher ▪ Microsoft Edge ▪ Mozilla Firefox ▪ Google Chrome ▪ Safari 	


Computer settings

Settings	Interface	
	CDI-RJ45	WLAN
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).	
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .	
JavaScript	JavaScript must be enabled.  If JavaScript cannot be enabled: enter <code>http://192.168.1.212/basic.html</code> in the address line of the Web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.  When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options .	
Network connections	Only the active network connections to the measuring device should be used.	
	Switch off all other network connections such as WLAN.	Switch off all other network connections.




In the event of connection problems: → 162

Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	Web server must be enabled; factory setting: ON  For information on enabling the Web server → 82

Measuring device: via WLAN interface

Device	WLAN interface
Measuring device	The measuring device has a WLAN antenna: <ul style="list-style-type: none"> ▪ Transmitter with integrated WLAN antenna ▪ Transmitter with external WLAN antenna
Web server	Web server and WLAN must be enabled; factory setting: ON  For information on enabling the Web server → 82

8.4.3 Establishing a connection**Via service interface (CDI-RJ45)***Preparing the measuring device**Proline 500 – digital*

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. The location of the connection socket depends on the measuring device and the communication protocol:
Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Proline 500

1. Depending on the housing version:
Release the securing clamp or securing screw of the housing cover.
2. Depending on the housing version:
Unscrew or open the housing cover.
3. The location of the connection socket depends on the measuring device and the communication protocol:
Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

1. Switch on the measuring device.
2. Connect to the computer using a cable → 83.
3. If a 2nd network card is not used, close all the applications on the notebook.
 - ↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
4. Close any open Internet browsers.
5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

- Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.


- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).


Preparing the mobile terminal

- Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:
Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.

 The serial number can be found on the nameplate.

 To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.


Disconnecting

- After configuring the device:
Terminate the WLAN connection between the operating unit and measuring device.



Starting the Web browser

1. Start the Web browser on the computer.

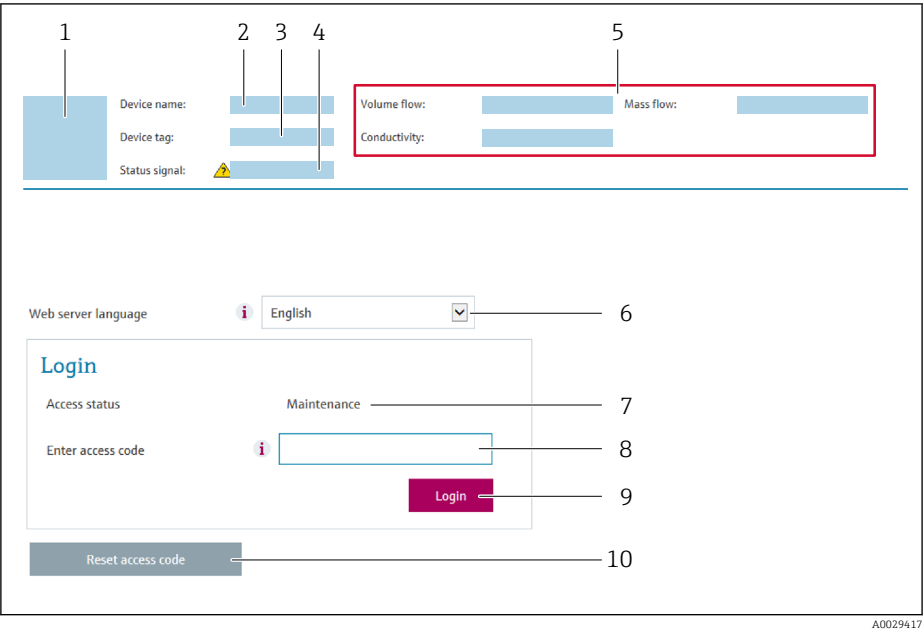2.
- Enter the IP address of the Web server in the address line of the Web browser:
192.168.1.212
- The login page appears.




- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code (→ 143)

 If a login page does not appear, or if the page is incomplete →  162


8.4.4 **Logging on**

1. Select the preferred operating language for the Web browser.
2. Enter the user-specific access code.
3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

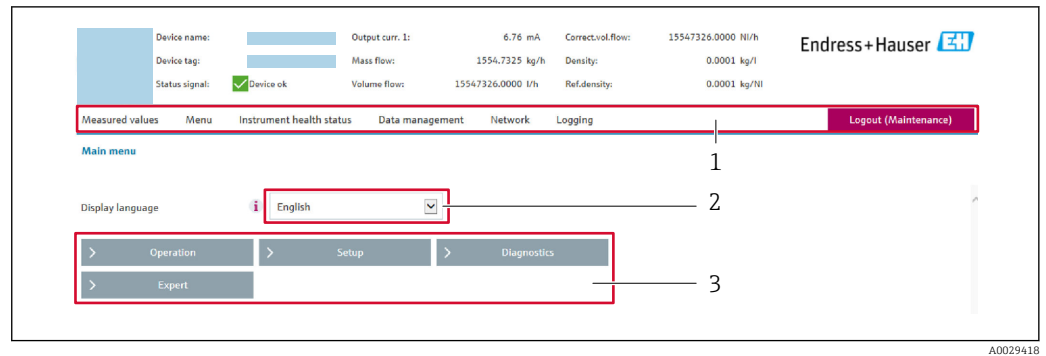

A0029418

- 1 Function row
 2 Local display language
 3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal → 170
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the measuring device
Menu	<ul style="list-style-type: none"> ■ Access to the operating menu from the measuring device ■ The structure of the operating menu is the same as for the local display For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between PC and measuring device: <ul style="list-style-type: none"> ■ Device configuration: <ul style="list-style-type: none"> – Load settings from the device (XML format, save configuration) – Save settings to the device (XML format, restore configuration) ■ Logbook - Export Event logbook (.csv file) ■ Documents - Export documents: <ul style="list-style-type: none"> – Export backup data record (.csv file, create documentation of the measuring point configuration) – Verification report (PDF file, only available with the "Heartbeat Verification" application package) ■ File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: PROFIBUS PA: GSD file ■ Firmware update - Flashing a firmware version
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: <ul style="list-style-type: none"> ■ Network settings (e.g. IP address, MAC address) ■ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul style="list-style-type: none"> ■ Off ■ HTML Off ■ On 	On

Function scope of the "Web server functionality" parameter


Option	Description
Off	<ul style="list-style-type: none"> ■ The web server is completely disabled. ■ Port 80 is locked.
HTML Off	The HTML version of the web server is not available.
On	<ul style="list-style-type: none"> ■ The complete functionality of the web server is available. ■ JavaScript is used. ■ The password is transferred in an encrypted state. ■ Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.
↳ The home page with the Login box appears.
2. Close the Web browser.

3. If no longer needed:
Reset modified properties of the Internet protocol (TCP/IP) → 78.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

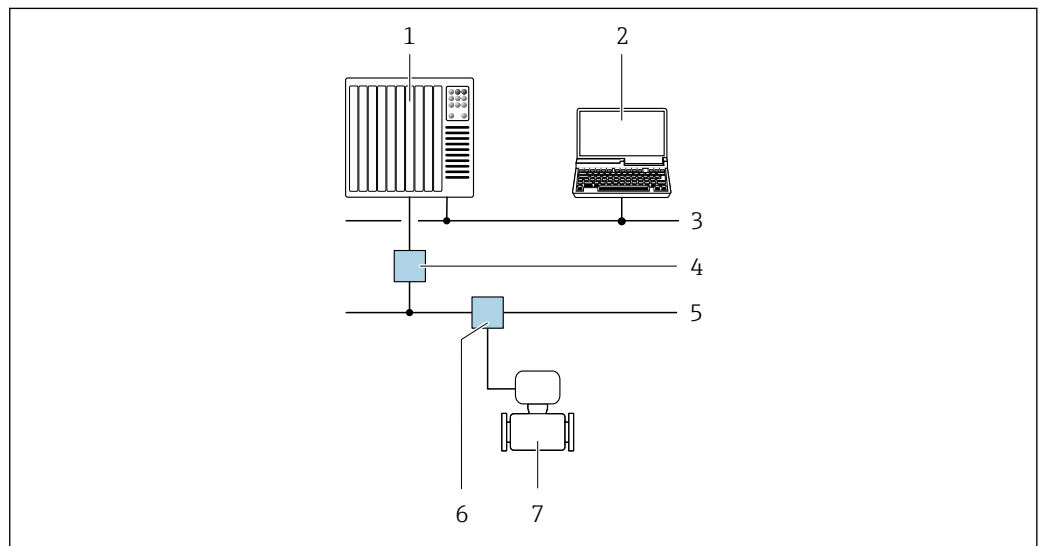

30 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

Service interface


Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.



An adapter for RJ45 and the M12 connector is optionally available:
Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"


The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

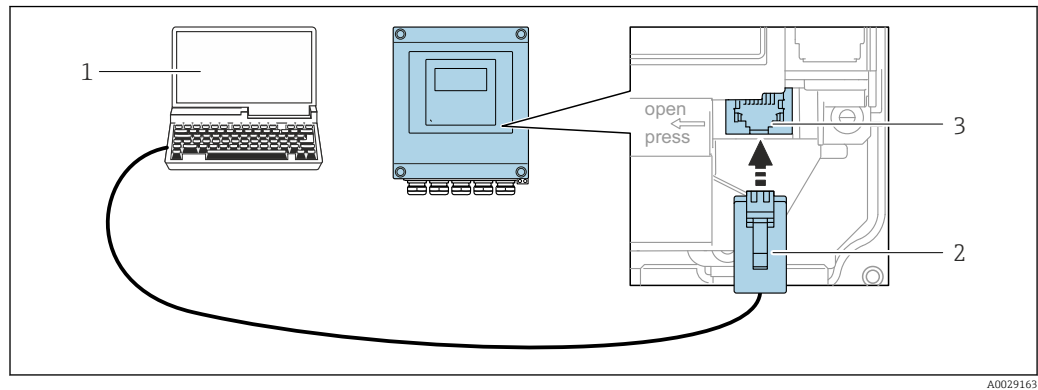Proline 500 – digital transmitter

A0029163

31 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

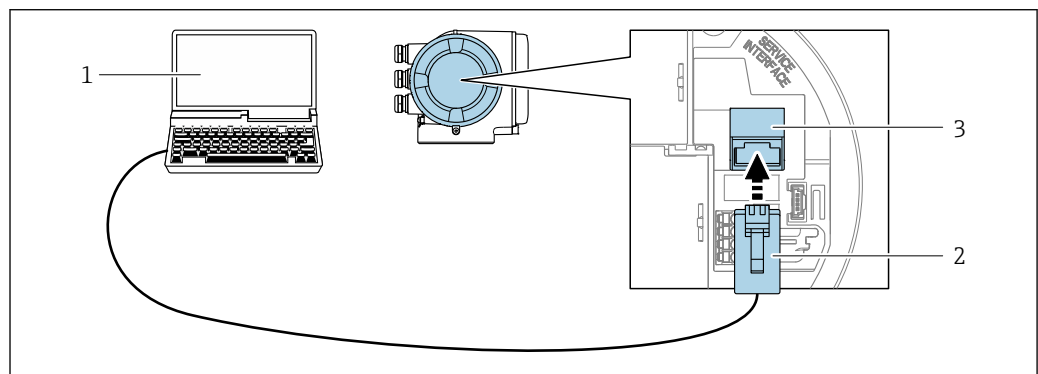Proline 500 transmitter

A0027563


32 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface


The optional WLAN interface is available on the following device version:

Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

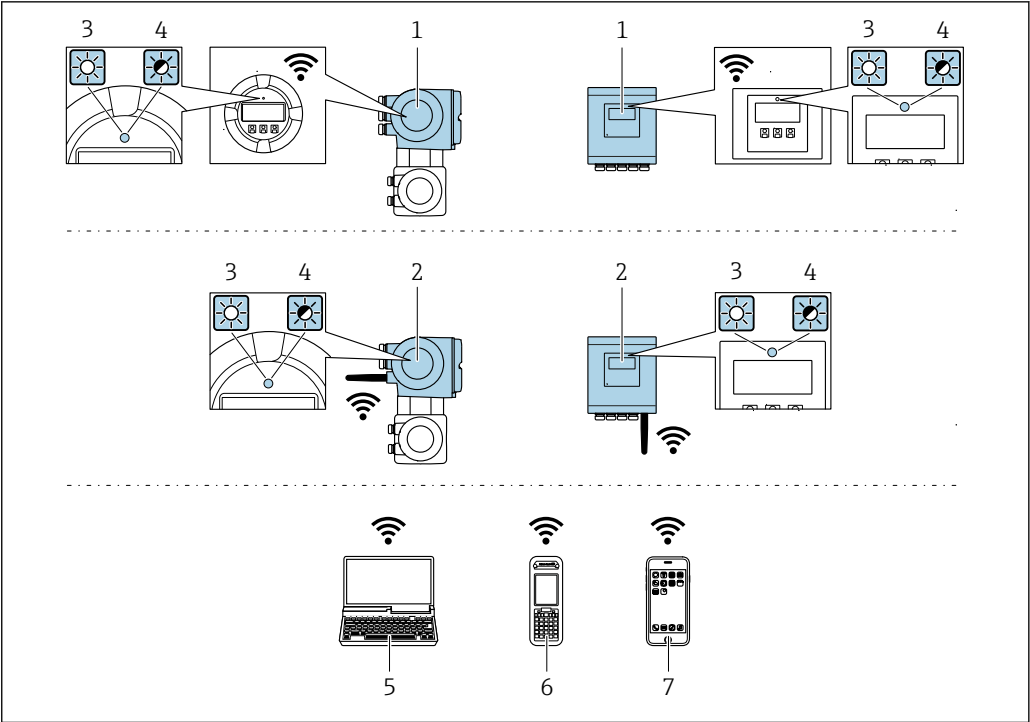

A0034569

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul style="list-style-type: none">▪ Internal antenna▪ External antenna (optional) In the event of poor transmission/reception conditions at the place of installation.  Only one antenna active in each case!
Max. range	50 m (164 ft)
Materials: External WLAN antenna	<ul style="list-style-type: none">▪ Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass▪ Adapter: Stainless steel and nickel-plated brass▪ Cable: Polyethylene▪ Connector: Nickel-plated brass▪ Angle bracket: Stainless steel

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

- Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

- ▶ Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:
Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.



To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Disconnecting

- ▶ After configuring the device:
Terminate the WLAN connection between the operating unit and measuring device.

8.5.2 FieldCare**Function scope**

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- PROFIBUS PA protocol → 83
- CDI-RJ45 service interface → 83
- WLAN interface → 84

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files

See information → 89


Establishing a connection

1. Start FieldCare and launch the project.
2. In the network: Add a device.
 - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
 - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.
6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
7. Establish the online connection to the device.



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

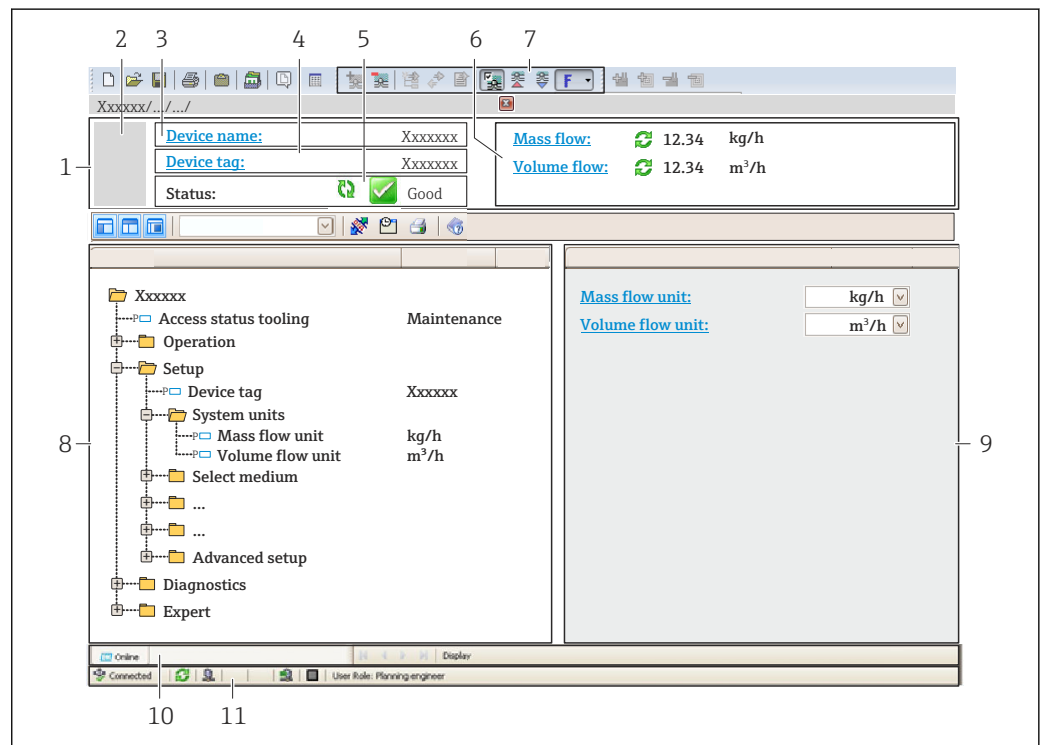

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal → 170
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



For details, see Innovation Brochure IN01047S

Source for device description files


See information →  89

8.5.4 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via PROFIBUS PA protocol.

Source for device description files

See data →  89

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	<ul style="list-style-type: none"> On the title page of the Operating instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	11.2018	---
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device type ID	0x156D	Device type Diagnostics → Device information → Device type
Profile version	3.02	---



For an overview of the different firmware versions for the device →  233

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions
FieldCare	<ul style="list-style-type: none"> www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	<ul style="list-style-type: none"> www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
SIMATIC PDM (Siemens)	www.endress.com → Download Area

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.02 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking, it is possible to use two different GSDs with Profile 3.02 and higher: the manufacturer-specific GSD and the Profile GSD.



- Before configuring, the user must decide which GSD should be used to operate the system.
- The setting can be changed via a Class 2 master.


9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS PA	0x156D	EH3x156D.gsd

Use manufacturer-specific GSD

Assignment is performed in the **Ident number selector** parameter via the **Manufacturer** option.

-  Sources of supply for the manufacturer-specific GSD:
- Export directly from the device via the integrated web server:
Data management → Documents → Export GSD file
 - Download via the Endress+Hauser website:
www.endress.com → Download-Area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels
0x9740	<ul style="list-style-type: none"> ■ 1 Analog Input ■ 1 Totalizer 	<ul style="list-style-type: none"> ■ Channel Analog Input: volume flow ■ Channel totalizer: volume flow
0x9741	<ul style="list-style-type: none"> ■ 2 Analog Input ■ 1 Totalizer 	<ul style="list-style-type: none"> ■ Channel Analog Input 1: volume flow ■ Channel Analog Input 2: mass flow ■ Channel totalizer: volume flow
0x9742	<ul style="list-style-type: none"> ■ 3 Analog Input ■ 1 Totalizer 	<ul style="list-style-type: none"> ■ Channel Analog Input 1: volume flow ■ Channel Analog Input 2: mass flow ■ Channel Analog Input 3: corrected volume flow ■ Channel totalizer: volume flow

Use profile GSD

Assignment is performed in the **Ident number selector** parameter:

- ID number 0x9740: **1 AI, 1 Totalizer (0x9740)** option
- ID number 0x9741: **2 AI, 1 Totalizer (0x9741)** option
- ID number 0x9742: **Profile** option

9.3 Compatibility with earlier model

If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.

Earlier models:

- Promass 80PROFIBUS PA
 - ID No.: 1528 (hex)
 - Extended GSD file: EH3x1528.gsd
 - Standard GSD file: EH3_1528.gsd
- Promass 83PROFIBUS PA
 - ID No.: 152A (hex)
 - Extended GSD file: EH3x152A.gsd
 - Standard GSD file: EH3_152A.gsd

9.3.1 Automatic identification (factory setting)

The Promass 500 PROFIBUS PA automatically recognizes the measuring device configured in the automation system (Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA) and makes the same input and output data and measured value status information available for cyclic data exchange.

Automatic identification is set in the **Ident number selector** parameter using the **Automatic mode** option (factory setting).

9.3.2 Manual setting

The manual setting is made in the **Ident number selector** parameter via the **Promass 80 (0x1528)** option or **Promass 83 (0x152A)** option.

Afterwards the Promass 500 PROFIBUS PA makes the same input and output data and measured value status information available for cyclic data exchange.

- If the Promass 500 PROFIBUS PA is acyclically configured via an operating program (Class 2 master), access is directly via the block structure or the parameters of the measuring device.
- If parameters have been changed in the device to be replaced (Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA) (parameter setting no longer corresponds to the original factory setting), these parameters must be changed accordingly in the new replacement Promass 500 PROFIBUS PA via an operating program (Class 2 master).

Example

The setting for low flow cut off has been changed from mass flow (factory setting) to corrected volume flow in a Promass 80 PROFIBUS PA currently in operation. This device is now replaced by a Promass 500 PROFIBUS PA.

After replacing the device, the assignment for the low flow cut off must also be changed manually in the Promass 500 PROFIBUS PA, i.e. to corrected volume flow, to ensure the measuring device behaves identically.

9.3.3 Replacing the measuring devices without changing the GSD file or restarting the controller

In the procedure described below, the device can be replaced without interrupting ongoing operation or restarting the controller. However with this procedure the measuring device is not fully integrated!

1. Replace the measuring device Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA with a Promass 500 PROFIBUS PA.

2. Set the device address: The same device address that was set for the Promass 80 or Promass 83 PROFIBUS PA must be used.
3. Connect the measuring device Promass 500 PROFIBUS PA.

If the factory setting had been changed on the replaced device (Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA), the following settings may need to be changed:

1. Configuration of the application-specific parameters.
2. Choice of process variables to be transmitted via the **Channel** parameter in the Analog Input or Totalizer function block.
3. Setting of the units for the process variables.

9.4 Using the GSD modules of the previous model

In the compatibility mode, all the modules already configured in the automation system are generally supported during cyclic data transmission. However, Promass 500 does not perform further processing for the following modules, i.e. the function is not executed:

- DISPLAY_VALUE
- BATCHING_QUANTITY
- BATCHING_FIX_COMP_QUANTITY

If the device is replaced, the Promass 500 device supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.

The diagnostic messages transmitted to the distributed control system with the GSD of the previous model may differ from the diagnostic messages of the device. The diagnostic messages of the device are critical.

9.4.1 Using the CONTROL_BLOCK module in the previous model

If the CONTROL_BLOCK module is used in the previous model, the control variables are processed further if relevant functionalities can be assigned for the Promass 500.

The functions are supported as follows depending on the previous model:

Previous model: Promass 80 PROFIBUS PA

Control variable	Function	Support
0 → 2	Positive zero return: ON	Yes
0 → 3	Positive zero return: OFF	Yes
0 → 4	Zero point adjustment: START	Yes
0 → 8	Measuring mode: UNIDIRECTIONAL	No Cause: The Profile Transducer Block Flow is no longer supported. To continue to use the functionality: Use the Totalizer operation mode parameter in the Totalizer function block.
0 → 9	Measuring mode: BIDIRECTIONAL	
0 → 24	UNIT TO BUS	No Cause: Functionality is no longer required as the unit is adopted automatically.

Previous model: Promass 83 PROFIBUS PA

Control variable	Function	Support
0 → 2	Positive zero return: ON	Yes
0 → 3	Positive zero return: OFF	Yes
0 → 4	Zero point adjustment: START	Yes
0 → 8	Measuring mode: UNIDIRECTIONAL	No Cause: The Profile Transducer Block Flow is no longer supported. To continue to use the functionality: Use the Totalizer operation mode parameter in the Totalizer function block.
0 → 9	Measuring mode: BIDIRECTIONAL	
0 → 24	UNIT TO BUS	No Cause: Functionality is no longer required as the unit is adopted automatically.
0 → 25	Advanced diagnostics – Warning mode: ON	No To continue to use the functionality: The functionalities are offered in the "Heartbeat Technology" application package.
0 → 26	Advanced diagnostics – Warning mode: OFF	
0 → 70 to 78	Additional functions: Advanced diagnostics	

9.5 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.5.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system.

Measuring device				Control system
Flow Block	Analog Input block 1 to 8	→ 95	Output value AI	→
			Output value TOTAL	→
	Totalizer block 1 to 3	→ 96	Controller SETTOT	←
			Configuration MODETOT	←
	Analog Output block 1 to 3	→ 98	Input values AO	←
	Discrete Input block 1 to 2	→ 98	Output values DI	→
	Discrete Output block 1 to 4	→ 99	Input values DO	←
				PROFIBUS PA

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
1 to 8	AI	Analog Input block 1 to 8
9	TOTAL or SETTOT_TOTAL or SETTOT_MODETOT_TOTAL	Totalizer block 1
10		Totalizer block 2
11		Totalizer block 3
12...14	AO	Analog Output block 1 to 3
15...16	DI	Discrete Input block 1 to 2
17...21	DO	Discrete Output block 1 to 5
22...23	AO	Analog Output block 4 to 5

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. If this results in gaps between the configured modules, these gaps must be assigned to the EMPTY_MODULE.

9.5.2 Description of the modules

The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS Master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Eight Analog Input blocks are available (slot 1 to 8).

Selection: input variable

Input variable
Mass flow
Volume flow
Corrected volume flow
Density
Reference density
Temperature
Electronic temperature
Oscillation frequency 0
Frequency fluctuation 0
Oscillation damping 0
Tube damping fluctuation 0
Signal asymmetry
Exciter current 0
Concentration ¹⁾
Target mass flow ¹⁾
Carrier mass flow ¹⁾
Target volume flow ¹⁾
Carrier volume flow ¹⁾
Target corrected volume flow ¹⁾
Carrier corrected volume flow ¹⁾
Carrier tube temperature ²⁾
Oscillation frequency 1 ²⁾
Oscillation amplitude 0 ²⁾
Oscillation amplitude 1 ²⁾
Frequency fluctuation 1 ²⁾
Oscillation damping 1 ²⁾
Tube damping fluctuation 1 ²⁾
Excitation current 1 ²⁾
HBSI ²⁾
Current input 1
Current input 2
Current input 3

1) Only available with the Concentration application package

2) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
AI 1	Mass flow
AI 2	Volume flow
AI 3	Corrected volume flow
AI 4	Density
AI 5	Mass flow
AI 6	Temperature
AI 7	Mass flow
AI 8	Mass flow

*Data structure**Input data of Analog Input*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

A selected totalizer value, along with the status, is cyclically transmitted to a PROFIBUS Master (Class 1) via the TOTAL module. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three Totalizer blocks are available (slot 9 to 11).

Selection: totalizer value

Input variable
Mass flow
Volume flow
Corrected volume flow
Target fluid mass flow ¹⁾
Carrier mass flow ¹⁾

1) Only available with the "Concentration" application package

Factory setting

Function block	Factory setting: TOTAL
Totalizer 1, 2 and 3	Mass flow

*Data structure**Input data of TOTAL*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 9 to 11).

Selection: control totalizer

Value SETTOT	Control totalizer
0	Totalize
1	Resetting
2	Adopt totalizer initial setting

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

Data structure

Output data of SETTOT

Byte 1
Control variable 1

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 9 to 11).

Selection: totalizer configuration

MODETOT value	Totalizer configuration
0	Balancing
1	Balance the positive flow
2	Balance the negative flow
3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

*Data structure**Output data of SETTOT and MODETOT*

Byte 1	Byte 2
Control variable 1: SETTOT	Control variable 2: MODETOT

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

AO module (Analog Output)

Transmit a compensation value from the PROFIBUS master (Class 1) to the measuring device.

A compensation value, along with the status, is cyclically transmitted from the PROFIBUS Master (Class 1) to the measuring device via the AO module. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Five Analog Output blocks are available (slot 12 to 14, 22 to 23).

Assigned compensation values

A compensation value is permanently assigned to the individual Analog Output blocks.

Function block	Compensation value
AO 1	External pressure ¹⁾
AO 2	External temperature ¹⁾
AO 3	External reference density
AO 4	–
AO 5	–

1) The compensation values must be transmitted to the device in the SI basic unit



The selection is made via: Expert → Sensor → External compensation

*Data structure**Output data of Analog Output*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS Master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 15 to 16).

Selection: device function

Device function	Factory setting: Status (meaning)
Empty pipe detection	<ul style="list-style-type: none"> ■ 0 (device function not active) ■ 1 (device function active)
Low flow cut off	
Status verification ¹⁾	<ul style="list-style-type: none"> ■ Bit 0: Verification status - Check not done ■ Bit 1: Verification status - Failed ■ Bit 2: Verification status - Busy ■ Bit 3: Verification status - Ready ■ Bit 4: Verification overall result - Failed ■ Bit 5: Verification overall result - Passed ■ Bit 6: Verification overall result - Check not done ■ Bit 7: Not used

1) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

*Data structure**Input data of Discrete Input*

Byte 1	Byte 2
Discrete	Status

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Five Discrete Output blocks are available (slot 17 to 21).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

Function block	Device function	Values: control (meaning)
DO 1	Flow override	<ul style="list-style-type: none"> ■ 0 (disable device function) ■ 1 (enable device function)
DO 2	Zero point adjustment	
DO 3	Start verification ¹⁾	
DO 4	Relay output	<ul style="list-style-type: none"> ■ 0 (non-conductive) ■ 1 (conductive)
DO 5	Concentration ²⁾	Assignment of medium type (see the following table)

1) Only available with the Heartbeat Verification application package

2) Only available with the Concentration application package

Assignment of medium type: function block DO 5	
101	Fructose in water
102	Glucose in water
104	Hydrogen peroxide in water
105	Sucrose in water
106	Invert sugar in water
107	Nitric acid
108	Phosphoric acid
109	Potassium hydroxide
100	Off
110	Sodium hydroxide
111	Ethanol in water
112	Methanol in water
113	Ammonium nitrate in water
114	Iron(III) chloride in water
115	HFCS42
116	HFCS55
117	HFCS90
118	Original wort
119	% mass / % volume
121	Coef Set No. 1
122	Coef Set No. 2
123	Coef Set No. 3
124	Hydrochloric acid
125	Sulfuric acid

Data structure

Output data of Discrete Output

Byte 1	Byte 2
Discrete	Status

EMPTY_MODULE module

This module is used to assign empty spaces arising from modules not being used in the slots .



The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular PROFIBUS slave has a variable design and consists of several individual modules. The GSD file contains a description of the individual modules along with their individual properties.

The modules are permanently assigned to the slots. When configuring the modules, it is absolutely essential to observe the sequence/arrangement of the modules. Any gaps between the configured modules must be filled with the EMPTY_MODULE.

10 Commissioning



10.1 Function check

Before commissioning the measuring device:




- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  33
- "Post-connection check" checklist →  61

10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

 If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" →  161.

10.3 Connecting via FieldCare

- For FieldCare →  83 connection
- For connecting via FieldCare →  87
- For the FieldCare →  87 user interface

10.4 Configuring the device address via software

In the "**Communication**" submenu the device address can be set.




Navigation

"Setup" menu → Communication → Device address

10.4.1 PROFIBUS network


At time of delivery, the measuring device has the following factory setting:

Device address	126
----------------	-----

-  ■ To display the current device address: **Device address** parameter →  108
- If hardware addressing is active, software addressing is blocked →  58

10.5 Setting the operating language


Factory setting: English or ordered local language

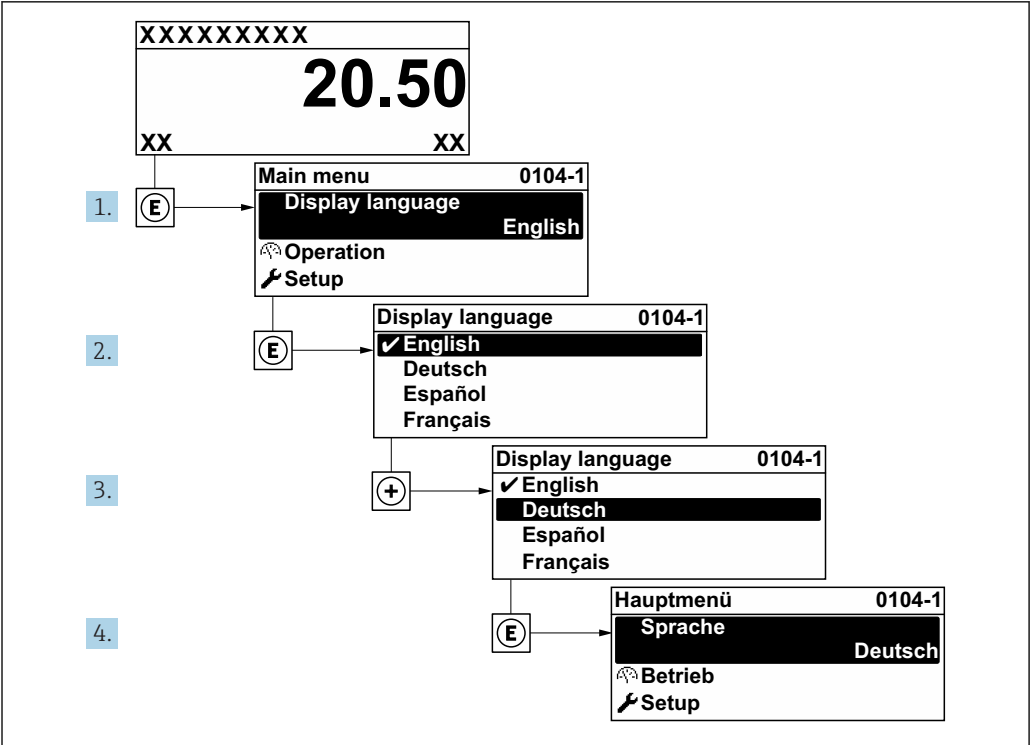

33 Taking the example of the local display

10.6 Configuring the measuring device

- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the **Setup** menu

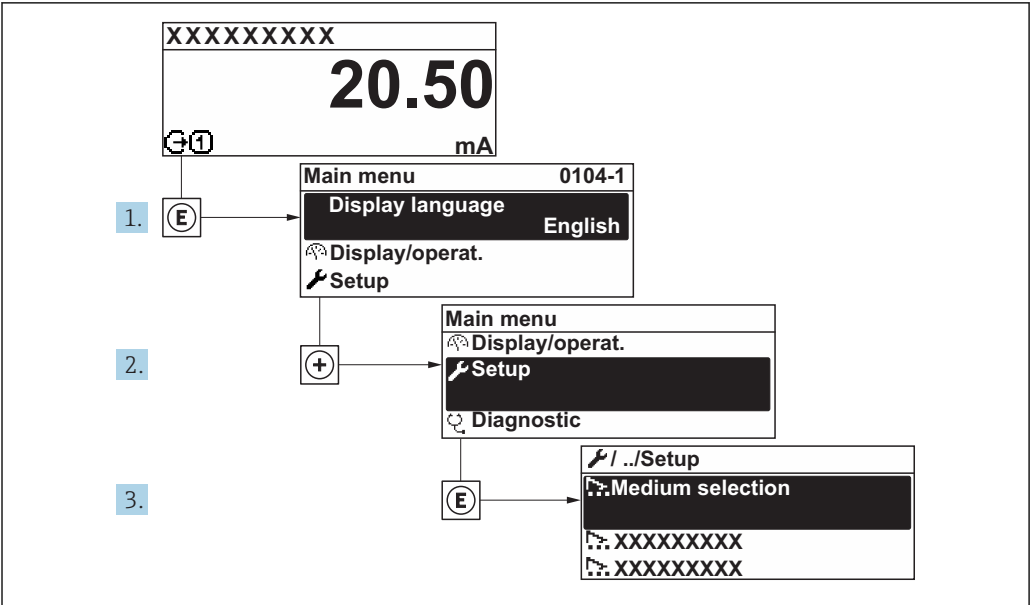

















34 Taking the example of the local display

i Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.


Navigation

"Setup" menu

 Setup		
Device tag	→ 	104
▶ System units	→ 	104
▶ Medium selection	→ 	107
▶ Communication	→ 	108
▶ Analog inputs	→ 	110
▶ I/O configuration	→ 	111
▶ Current input 1 to n	→ 	112
▶ Status input 1 to n	→ 	113
▶ Current output 1 to n	→ 	114
▶ Pulse/frequency/switch output 1 to n	→ 	117
▶ Relay output 1 to n	→ 	124
▶ Display	→ 	126
▶ Low flow cut off	→ 	129
▶ Partially filled pipe detection	→ 	130
▶ Advanced setup	→ 	131


10.6.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

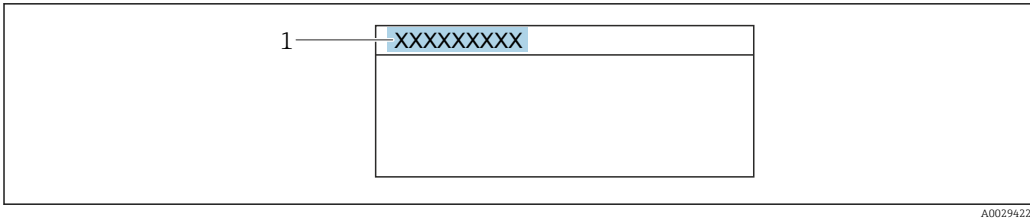

35 Header of the operational display with tag name

1 Tag name

 Enter the tag name in the "FieldCare" operating tool →  87


Navigation
"Setup" menu → Device tag

Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promass 500 PA



10.6.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.


 Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

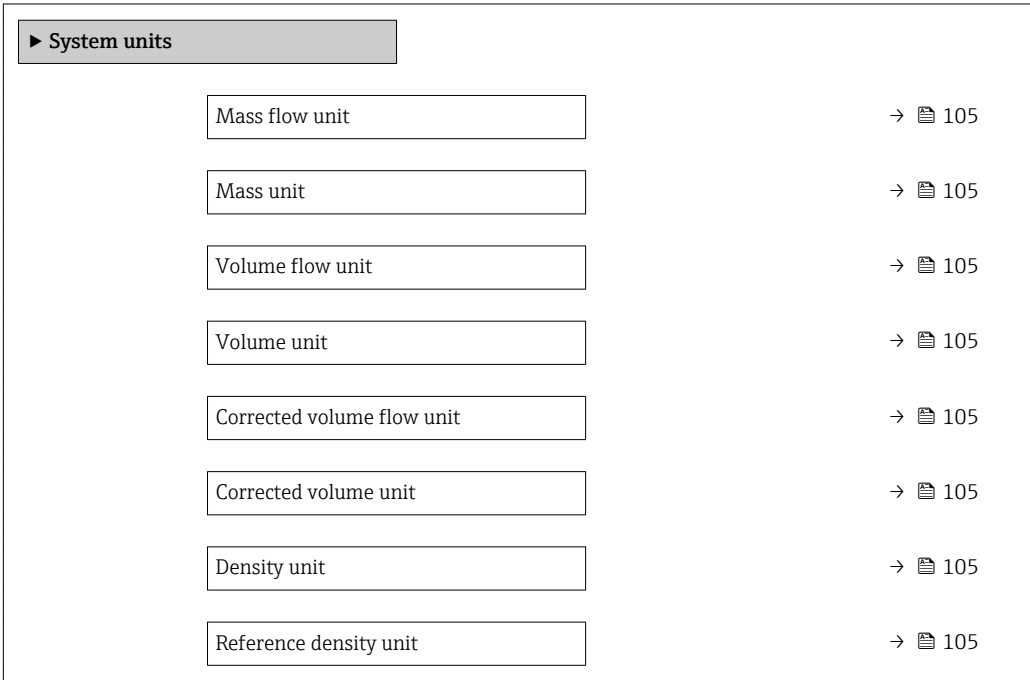Navigation
"Setup" menu → System units



Temperature unit	→  106
Pressure unit	→  106

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> l (DN > 150 (6"): m³) gal (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow parameter (→  151)	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nl/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nl Sft³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Simulation process variable Density adjustment (Expert menu) 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent <ul style="list-style-type: none"> kg/Nl lb/Sft³

Parameter	Description	Selection	Factory setting
Temperature unit	<p>Select temperature unit.</p> <p><i>Result</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> ▪ Electronic temperature parameter (6053) ▪ Maximum value parameter (6051) ▪ Minimum value parameter (6052) ▪ Maximum value parameter (6108) ▪ Minimum value parameter (6109) ▪ Carrier pipe temperature parameter (6027) ▪ Maximum value parameter (6029) ▪ Minimum value parameter (6030) ▪ Reference temperature parameter (1816) ▪ Temperature parameter 	Unit choose list	<p>Country-specific:</p> <ul style="list-style-type: none"> ▪ °C ▪ °F
Pressure unit	<p>Select process pressure unit.</p> <p><i>Result</i></p> <p>The unit is taken from:</p> <ul style="list-style-type: none"> ▪ Pressure value parameter (→ ⓘ 108) ▪ External pressure parameter (→ ⓘ 108) ▪ Pressure value 	Unit choose list	<p>Country-specific:</p> <ul style="list-style-type: none"> ▪ bar a ▪ psi a

10.6.3 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu → Select medium

► Medium selection

Select medium

→ ⓘ 108

Select gas type

→ ⓘ 108

Reference sound velocity

→ ⓘ 108

Temperature coefficient sound velocity

→ ⓘ 108

Pressure compensation

→ ⓘ 108

Pressure value

→ ⓘ 108

External pressure

→ ⓘ 108

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium	–	Select medium type.	<ul style="list-style-type: none"> ■ Liquid ■ Gas 	Liquid
Select gas type	The Gas option is selected in the Select medium parameter.	Select measured gas type.	<ul style="list-style-type: none"> ■ Air ■ Ammonia NH₃ ■ Argon Ar ■ Sulfur hexafluoride SF₆ ■ Oxygen O₂ ■ Ozone O₃ ■ Nitrogen oxide NO_x ■ Nitrogen N₂ ■ Nitrous oxide N₂O ■ Methane CH₄ ■ Hydrogen H₂ ■ Helium He ■ Hydrogen chloride HCl ■ Hydrogen sulfide H₂S ■ Ethylene C₂H₄ ■ Carbon dioxide CO₂ ■ Carbon monoxide CO ■ Chlorine Cl₂ ■ Butane C₄H₁₀ ■ Propane C₃H₈ ■ Propylene C₃H₆ ■ Ethane C₂H₆ ■ Others 	Methane CH ₄
Reference sound velocity	In the Select gas type parameter, the Others option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	415.0 m/s
Temperature coefficient sound velocity	The Others option is selected in the Select gas type parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number	0 (m/s)/K
Pressure compensation	–	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value ■ Current input 1 * ■ Current input 3 * 	Off
Pressure value	The Fixed value option or the Current input 1...n option is selected in the Pressure compensation parameter.	Enter process pressure to be used for pressure correction.	Positive floating-point number	0 bar
External pressure	The Fixed value option or the Current input 1...n option is selected in the Pressure compensation parameter.	Shows the external process pressure value.	Positive floating-point number	0 bar

* Visibility depends on order options or device settings

10.6.4 Configuring communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation
"Setup" menu → Communication

► Communication

Device address

→ 109

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126

10.6.5 Configuring the analog inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu → Analog inputs

▶ Analog inputs

▶ Analog input 1 to n

Channel

→ ⓘ 111

PV filter time

→ ⓘ 111

Fail safe type

→ ⓘ 111

Fail-safe value

→ ⓘ 111

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Channel	–	Select the process variable.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Density ■ Reference density[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Concentration[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] ■ Temperature ■ Carrier pipe temperature[*] ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0[*] ■ Oscillation damping 0[*] ■ Oscillation damping fluctuation 0[*] ■ Oscillation damping fluctuation 1[*] ■ Signal asymmetry[*] ■ Exciter current 0[*] ■ Current input 1[*] 	Mass flow
PV filter time	–	Specify the time to suppress signal peaks. During the specified time the analog input does not respond to an erratic increase in the process variable.	Positive floating-point number	0
Fail safe type	–	Select the failure mode.	<ul style="list-style-type: none"> ■ Fail-safe value ■ Fallback value ■ Off 	Off
Fail-safe value	In Fail safe type parameter, the Fail-safe value option is selected.	Specify the values to be output when an error occurs.	Signed floating-point number	0

* Visibility depends on order options or device settings

10.6.6 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation
"Setup" menu → I/O configuration

► I/O configuration

I/O module 1 to n terminal numbers

I/O module 1 to n information

I/O module 1 to n type

Apply I/O configuration

Alteration code

→ 112

→ 112

→ 112

→ 112

→ 112

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	<div><div>■ Not used</div><div>■ 26-27 (I/O 1)</div><div>■ 24-25 (I/O 2)</div></div>	–
I/O module 1 to n information	Shows information of the plugged I/O module.	<div><div>■ Not plugged</div><div>■ Invalid</div><div>■ Not configurable</div><div>■ Configurable</div><div>■ Profibus PA</div></div>	–
I/O module 1 to n type	Shows the I/O module type.	<div><div>■ Off</div><div>■ Current output *</div><div>■ Current input *</div><div>■ Status input *</div><div>■ Pulse/frequency/switch output *</div></div>	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	<div><div>■ No</div><div>■ Yes</div></div>	No
Alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0

* Visibility depends on order options or device settings

10.6.7 Configuring the current input







The "Current input" wizard guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation
"Setup" menu → Current input

► Current input 1 to n

Terminal number

→ 113

Signal mode	→  113
0/4 mA value	→  113
20 mA value	→  113
Current span	→  113
Failure mode	→  113
Failure value	→  113

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	–	Shows the terminal numbers used by the current input module.	<ul style="list-style-type: none"> Not used 24-25 (I/O 2) 	–
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	<ul style="list-style-type: none"> Passive Active * 	Active
0/4 mA value	–	Enter 4 mA value.	Signed floating-point number	0
20 mA value	–	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	–	Select current range for process value output and upper/lower level for alarm signal.	<ul style="list-style-type: none"> 4...20 mA 4...20 mA NAMUR 4...20 mA US 0...20 mA 	Country-specific: <ul style="list-style-type: none"> 4...20 mA NAMUR 4...20 mA US
Failure mode	–	Define input behavior in alarm condition.	<ul style="list-style-type: none"> Alarm Last valid value Defined value 	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0


* Visibility depends on order options or device settings

10.6.8 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu → Status input

► Status input 1 to n	
Assign status input	→  114

Terminal number	→ 114
Active level	→ 114
Terminal number	→ 114
Response time status input	→ 114
Terminal number	→ 114

Parameter overview with brief description








Parameter	Description	User interface / Selection / User entry	Factory setting
Terminal number	Shows the terminal numbers used by the status input module.	<ul style="list-style-type: none">Not used24-25 (I/O 2)	–
Assign status input	Select function for the status input.	<ul style="list-style-type: none">OffReset totalizer 1Reset totalizer 2Reset totalizer 3Reset all totalizersFlow override	Off
Active level	Define input signal level at which the assigned function is triggered.	<ul style="list-style-type: none">HighLow	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms




10.6.9 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu → Current output

► Current output 1 to n	
Terminal number	→  115
Signal mode	→  115
Assign current output 1 to n	→  115
Current span	→  115
0/4 mA value	→  116
20 mA value	→  116
Fixed current	→  116

Damping output 1 to n	→  116
Failure mode	→  116
Failure current	→  116

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	–	Shows the terminal numbers used by the current output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) 	–
Signal mode	–	Select the signal mode for the current output.	<ul style="list-style-type: none"> ■ Passive * ■ Active * 	Active
Assign current output 1 to n	–	Select process variable for current output.	<ul style="list-style-type: none"> ■ Off * ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 * ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry * ■ Exciter current 0 * ■ HBSI * ■ Pressure * 	Mass flow
Current span	–	Select current range for process value output and upper/lower level for alarm signal.	<ul style="list-style-type: none"> ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA ■ Fixed current 	Country-specific: <ul style="list-style-type: none"> ■ 4...20 mA NAMUR ■ 4...20 mA US

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
0/4 mA value	One of the following options is selected in the Current span parameter (→ 115): <ul style="list-style-type: none"> 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA 	Enter 4 mA value.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> 0 kg/h 0 lb/min
20 mA value	One of the following options is selected in the Current span parameter (→ 115): <ul style="list-style-type: none"> 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA 	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The Fixed current option is selected in the Current span parameter (→ 115).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping output 1 to n	A process variable is selected in the Assign current output parameter (→ 115) and one of the following options is selected in the Current span parameter (→ 115): <ul style="list-style-type: none"> 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA 	Set reaction time for output signal to fluctuations in the measured value.	0.0 to 999.9 s	1.0 s
Failure mode	A process variable is selected in the Assign current output parameter (→ 115) and one of the following options is selected in the Current span parameter (→ 115): <ul style="list-style-type: none"> 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA 	Define output behavior in alarm condition.	<ul style="list-style-type: none"> Min. Max. Last valid value Actual value Defined value 	Max.
Failure current	The Defined value option is selected in the Failure mode parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

* Visibility depends on order options or device settings

10.6.10 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

► Pulse/frequency/switch output
1 to n

Operating mode

→ 117

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	<div>■ Pulse</div> <div>■ Frequency</div> <div>■ Switch</div>	Pulse

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output
1 to n

Operating mode

Terminal number

Signal mode

Assign pulse output

Value per pulse

Pulse width

Failure mode

Invert output signal

→ 118

→ 118

→ 118

→ 118

→ 118

→ 118

→ 118

→ 118

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) 	–
Signal mode	–	Select the signal mode for the PFS output.	<ul style="list-style-type: none"> ■ Passive ■ Active 	Passive
Assign pulse output 1 to n	The Pulse option is selected in the Operating mode parameter parameter.	Select process variable for pulse output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] 	Off
Value per pulse	The Pulse option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign pulse output parameter (→ 118).	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	The Pulse option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign pulse output parameter (→ 118).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	The Pulse option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign pulse output parameter (→ 118).	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ No pulses 	No pulses
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

* Visibility depends on order options or device settings

Configuring the frequency output











Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n

Operating mode

→ 119

Terminal number	→  119
Signal mode	→  119
Assign frequency output	→  120
Minimum frequency value	→  120
Maximum frequency value	→  120
Measuring value at minimum frequency	→  120
Measuring value at maximum frequency	→  121
Failure mode	→  121
Failure frequency	→  121
Invert output signal	→  121

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) 	–
Signal mode	–	Select the signal mode for the PFS output.	<ul style="list-style-type: none"> ■ Passive ■ Active 	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	The Frequency option is selected in the Operating mode parameter (→ 117) parameter.	Select process variable for frequency output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 * ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry * ■ Exciter current 0 * ■ HBSI * ■ Pressure 	Off
Minimum frequency value	The Frequency option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign frequency output parameter (→ 120).	Enter minimum frequency.	0.0 to 10 000.0 Hz	0.0 Hz
Maximum frequency value	The Frequency option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign frequency output parameter (→ 120).	Enter maximum frequency.	0.0 to 10 000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The Frequency option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign frequency output parameter (→ 120).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Measuring value at maximum frequency	The Frequency option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign frequency output parameter (→ 120).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The Frequency option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign frequency output parameter (→ 120).	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ Defined value ■ 0 Hz 	0 Hz
Failure frequency	The Frequency option is selected in the Operating mode parameter (→ 117) and a process variable is selected in the Assign frequency output parameter (→ 120).	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n		
Operating mode	→	📖 122
Terminal number	→	📖 122
Signal mode	→	📖 122
Switch output function	→	📖 123
Assign diagnostic behavior	→	📖 123
Assign limit	→	📖 123
Assign flow direction check	→	📖 123
Assign status	→	📖 123
Switch-on value	→	📖 123
Switch-off value	→	📖 124
Switch-on delay	→	📖 124
Switch-off delay	→	📖 124
Failure mode	→	📖 124
Invert output signal	→	📖 124

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	▪ Pulse ▪ Frequency ▪ Switch	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	▪ Not used ▪ 24-25 (I/O 2)	–
Signal mode	–	Select the signal mode for the PFS output.	▪ Passive ▪ Active	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	<ul style="list-style-type: none"> Off On Diagnostic behavior Limit Flow direction check Status 	Off
Assign diagnostic behavior	<ul style="list-style-type: none"> In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Diagnostic behavior option is selected. 	Select diagnostic behavior for switch output.	<ul style="list-style-type: none"> Alarm Alarm or warning Warning 	Alarm
Assign limit	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Select process variable for limit function.	<ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow[*] Target mass flow[*] Carrier mass flow[*] Target volume flow[*] Carrier volume flow[*] Target corrected volume flow[*] Carrier corrected volume flow[*] Density Reference density[*] Concentration[*] Temperature Oscillation damping Pressure Totalizer 1 Totalizer 2 Totalizer 3 	Mass flow
Assign flow direction check	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	<ul style="list-style-type: none"> Off Volume flow Mass flow Corrected volume flow[*] 	Mass flow
Assign status	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Status option is selected in the Switch output function parameter. 	Select device status for switch output.	<ul style="list-style-type: none"> Partially filled pipe detection Low flow cut off Digital output 4[*] 	Partially filled pipe detection
Switch-on value	<ul style="list-style-type: none"> In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> 0 kg/h 0 lb/min

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off value	<ul style="list-style-type: none">■ In the Operating mode parameter, the Switch option is selected.■ In the Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none">■ 0 kg/h■ 0 lb/min
Switch-on delay	<ul style="list-style-type: none">■ The Switch option is selected in the Operating mode parameter.■ The Limit option is selected in the Switch output function parameter.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	<ul style="list-style-type: none">■ The Switch option is selected in the Operating mode parameter.■ The Limit option is selected in the Switch output function parameter.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	<ul style="list-style-type: none">■ Actual status■ Open■ Closed	Open
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none">■ No■ Yes	No

* Visibility depends on order options or device settings

10.6.11 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu → Relay output 1 to n

► RelaisOutput 1 to n

Switch output function

→ 125

Assign flow direction check

→ 125

Assign limit

→ 125

Assign diagnostic behavior

→ 125

Assign status

→ 125

Switch-off value

→ 125

Switch-on value

→ 125

Failure mode

→ 126

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Relay output function	–	Select the function for the relay output.	<ul style="list-style-type: none"> ■ Closed ■ Open ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Digital Output 	Closed
Terminal number	–	Shows the terminal numbers used by the relay output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) 	–
Assign flow direction check	In the Relay output function parameter, the Flow direction check option is selected.	Select process variable for flow direction monitoring.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow[*] 	Mass flow
Assign limit	The Limit option is selected in the Relay output function parameter.	Select process variable for limit function.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] ■ Density ■ Reference density[*] ■ Concentration[*] ■ Temperature ■ Oscillation damping ■ Pressure ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Mass flow
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning 	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	<ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off ■ Digital output 4[*] 	Partially filled pipe detection
Switch-off value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	<div>■ Actual status</div> <div>■ Open</div> <div>■ Closed</div>	Open

* Visibility depends on order options or device settings

10.6.12 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation

"Setup" menu → Display

► Display

Format display

→ 127

Value 1 display

→ 127

0% bargraph value 1

→ 127

100% bargraph value 1

→ 127

Value 2 display

→ 127

Value 3 display

→ 127

0% bargraph value 3

→ 128

100% bargraph value 3


→ 128

Value 4 display

→ 128

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 * ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry * ■ Exciter current 0 * ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1 * ■ Pressure 	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 127)	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 127)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→  127)	None

* Visibility depends on order options or device settings

10.6.13 Configuring the low flow cut off


The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation


"Setup" menu → Low flow cut off

▶ Low flow cut off


Assign process variable

→  129


On value low flow cutoff

→  129




Off value low flow cutoff

→  129

Pressure shock suppression

→  129

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] 	Mass flow
On value low flow cutoff	A process variable is selected in the Assign process variable parameter (→  129).	Enter on value for low flow cut off.	Positive floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the Assign process variable parameter (→  129).	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	A process variable is selected in the Assign process variable parameter (→  129).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

* Visibility depends on order options or device settings

10.6.14 Configuring the partial filled pipe detection


The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation


"Setup" menu → Partially filled pipe detection

▶ Partially filled pipe detection


Assign process variable

→  130


Low value partial filled pipe detection

→  130




High value partial filled pipe detection

→  130

Response time part. filled pipe detect.

→  130


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for partially filled pipe detection.	<ul style="list-style-type: none"> ■ Off ■ Density ■ Reference density 	Off
Low value partial filled pipe detection	A process variable is selected in the Assign process variable parameter (→  130).	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	200
High value partial filled pipe detection	A process variable is selected in the Assign process variable parameter (→  130).	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	6 000
Response time part. filled pipe detect.	A process variable is selected in the Assign process variable parameter (→  130).	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

10.7 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

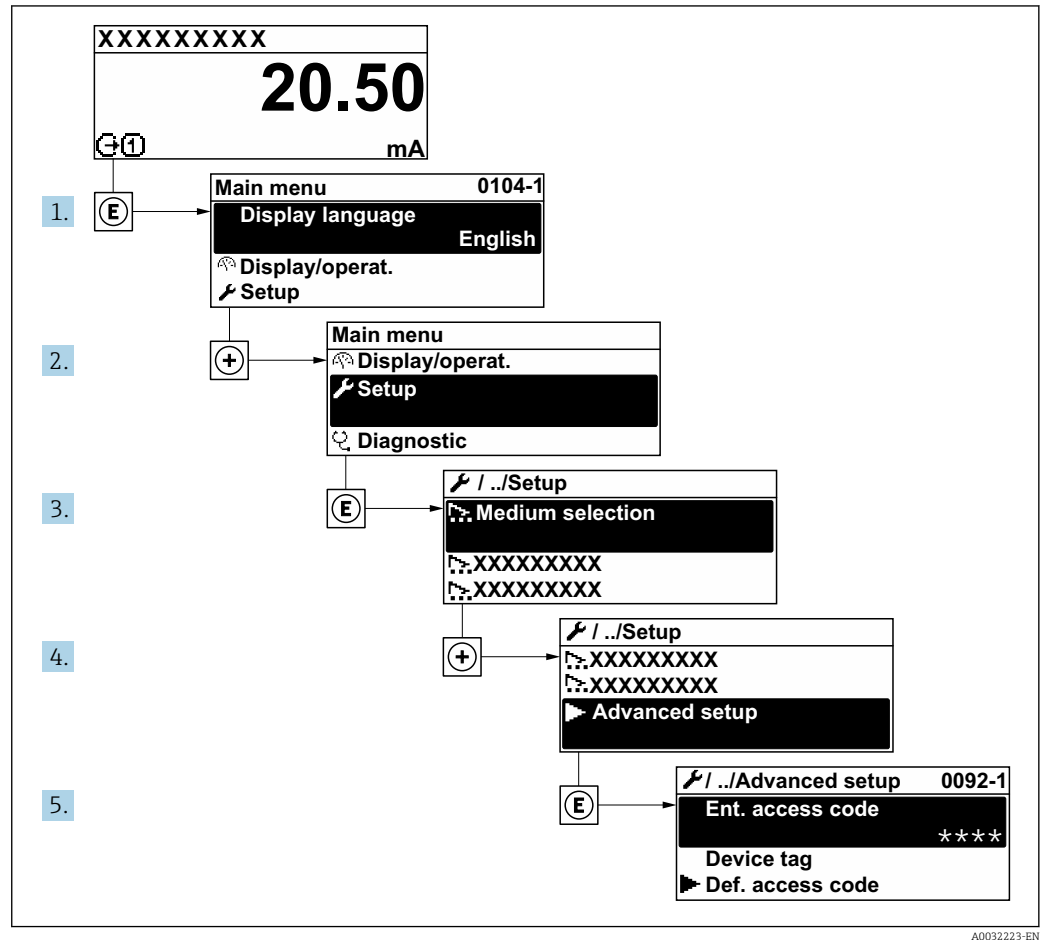


A0032223-EN



The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu → Advanced setup

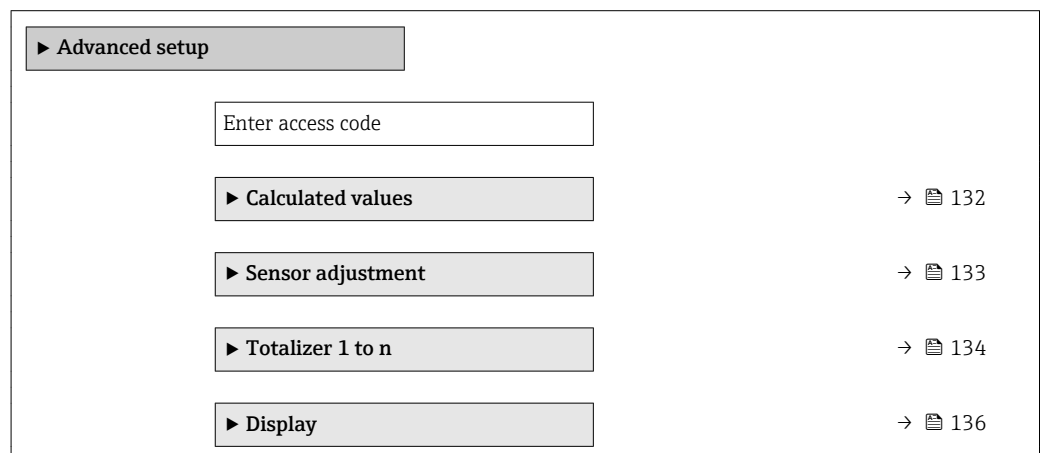







▶ WLAN settings	→ ⓘ 139
▶ Concentration	
▶ Heartbeat setup	
▶ Configuration backup	→ ⓘ 140
▶ Administration	→ ⓘ 141

10.7.1 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu → Advanced setup → Calculated values

► Calculated values	
► Corrected volume flow calculation	
Corrected volume flow calculation	→  132
External reference density	→  132
Fixed reference density	→  133
Reference temperature	→  133
Linear expansion coefficient	→  133
Square expansion coefficient	→  133

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	–	Select reference density for calculating the corrected volume flow.	<ul style="list-style-type: none">Fixed reference densityCalculated reference densityExternal reference densityCurrent input 1 *Current input 3 *	Calculated reference density
External reference density	–	Shows external reference density.	Floating point number with sign	–

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating-point number	1 kg/Nl
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99 999 °C	Country-specific: ■ +20 °C ■ +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K ²

* Visibility depends on order options or device settings

10.7.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment	
Installation direction	→ ⓘ 133
► Zero point adjustment	→ ⓘ 133

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<ul style="list-style-type: none"> ■ Flow in arrow direction ■ Flow against arrow direction 	Flow in arrow direction

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → ⓘ 249. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

► Zero point adjustment

Zero point adjustment control

→ 134

Progress

→ 134

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	<div>■ Cancel</div> <div>■ Busy[*]</div> <div>■ Zero point adjust failure[*]</div> <div>■ Start[*]</div>	Cancel
Progress	Shows the progress of the process.	0 to 100 %	–

^{*} Visibility depends on order options or device settings

10.7.3 Configuring the totalizer

In the "Totalizer 1 to n" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n

Assign process variable

→ 135

Unit totalizer

→ 135

Totalizer operation mode

→ 135

Control Totalizer 1 to n

→ 135

Failure mode

→ 135

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Assign process variable	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * 	Mass flow
Unit totalizer	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kg ■ lb
Control Totalizer 1 to n	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold 	Totalize
Totalizer operation mode	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value 	Net flow total
Failure mode	Define the totalizer behavior in the event of a device alarm.	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	Actual value

* Visibility depends on order options or device settings

10.7.4 Carrying out additional display configurations


In the **Display** submenu you can set all the parameters associated with the configuration of the local display.



Navigation

"Setup" menu → Advanced setup → Display

► Display		
Format display	→	📖 137
Value 1 display	→	📖 137
0% bargraph value 1	→	📖 137
100% bargraph value 1	→	📖 137
Decimal places 1	→	📖 137
Value 2 display	→	📖 137
Decimal places 2	→	📖 138
Value 3 display	→	📖 138
0% bargraph value 3	→	📖 138
100% bargraph value 3	→	📖 138
Decimal places 3	→	📖 138
Value 4 display	→	📖 138
Decimal places 4	→	📖 138
Display language	→	📖 138
Display interval	→	📖 138
Display damping	→	📖 138
Header	→	📖 138
Header text	→	📖 138
Separator	→	📖 139
Backlight	→	📖 139

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 * ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry * ■ Exciter current 0 * ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1 * ■ Pressure 	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→  127)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→  127)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→  127)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Display language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> ■ English ■ Deutsch ■ Français ■ Español ■ Italiano ■ Nederlands ■ Portuguesa ■ Polski ■ русский язык (Russian) ■ Svenska ■ Türkçe ■ 中文 (Chinese) ■ 日本語 (Japanese) ■ 한국어 (Korean) ■ Bahasa Indonesia ■ tiếng Việt (Vietnamese) ■ čeština (Czech) 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . (point) ■ , (comma) 	. (point)
Backlight	One of the following conditions is met: <ul style="list-style-type: none"> ■ Order code for "Display; operation", option F "4-line, illum.; touch control" ■ Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" 	Switch the local display backlight on and off.	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Enable

* Visibility depends on order options or device settings

10.7.5 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" menu → Advanced setup → WLAN Settings

▶ WLAN settings

WLAN IP address

Security type

WLAN passphrase

Assign SSID name

SSID name

Apply changes

→ ⓘ 139

→ ⓘ 139

→ ⓘ 140



→ ⓘ 140

→ ⓘ 140

→ ⓘ 140

Parameter overview with brief description

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN IP address	–	Enter IP address of the device WLAN interface.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Network security	–	Select the security type of the WLAN network.	<ul style="list-style-type: none"> ■ Unsecured ■ WPA2-PSK ■ EAP-PEAP with MSCHAPv2 * ■ EAP-PEAP MSCHAPv2 no server authentic. * ■ EAP-TLS * 	WPA2-PSK

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN passphrase	The WPA2-PSK option is selected in the Security type parameter.	Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	–	Select which name will be used for SSID: device tag or user-defined name.	<ul style="list-style-type: none">■ Device tag■ User-defined	User-defined
SSID name	<ul style="list-style-type: none">■ The User-defined option is selected in the Assign SSID name parameter parameter.■ The WLAN access point option is selected in the WLAN mode parameter parameter.	Enter the user-defined SSID name (max. 32 characters).  The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_500_A 802000)
Apply changes	–	Use changed WLAN settings.	<ul style="list-style-type: none">■ Cancel■ Ok	Cancel

* Visibility depends on order options or device settings

10.7.6 Configuration management

After commissioning, you can save the current device configuration or restore the previous device configuration.


You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation


"Setup" menu → Advanced setup → Configuration backup

► Configuration backup


Operating time

→  141


Last backup

→  141


Configuration management

→  141

Backup state

→  141

Comparison result

→  141

Parameter overview with brief description *

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	–
Configuration management	Select action for managing the device data in the HistoROM backup.	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore * ■ Compare * ■ Clear backup data 	Cancel
Backup state	Shows the current status of data saving or restoring.	<ul style="list-style-type: none"> ■ None ■ Backup in progress ■ Restoring in progress ■ Delete in progress ■ Compare in progress ■ Restoring failed ■ Backup failed 	None
Comparison result	Comparison of current device data with HistoROM backup.	<ul style="list-style-type: none"> ■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible 	Check not done

* Visibility depends on order options or device settings

Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

***HistoROM backup***

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.7.7 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu → Advanced setup → Administration

► Administration

► Define access code

→ 142

► Reset access code

→ 142

Device reset

→ 143

Using the parameter to define the access code

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

► Define access code

Define access code

→ 142

Confirm access code

→ 142

Parameter overview with brief description

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu → Advanced setup → Administration → Reset access code

► Reset access code


Operating time

→ 143

Reset access code

→ 143

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Reset access code	Reset access code to factory settings.  For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: <ul style="list-style-type: none"> Web browser DeviceCare, FieldCare (via service interface CDI-RJ45) Fieldbus 	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device**Navigation**

"Setup" menu → Advanced setup → Administration

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul style="list-style-type: none"> Cancel To delivery settings Restart device Restore S-DAT backup * 	Cancel

* Visibility depends on order options or device settings


10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).


Navigation



"Diagnostics" menu → Simulation

► Simulation	
Assign simulation process variable	→ 144
Process variable value	→ 144
Status input simulation	→ 145
Input signal level	→ 145
Current input 1 to n simulation	→ 145
Value current input 1 to n	→ 145

Current output 1 to n simulation	→  145
Value current output 1 to n	→  145
Frequency output simulation 1 to n	→  145
Frequency value 1 to n	→  145
Pulse output simulation 1 to n	→  145
Pulse value 1 to n	→  145
Switch output simulation 1 to n	→  145
Switch status 1 to n	→  145
Relay output 1 to n simulation	→  145
Switch status 1 to n	→  145
Device alarm simulation	→  145
Diagnostic event category	→  146
Diagnostic event simulation	→  146

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] ■ Density ■ Reference density[*] ■ Temperature ■ Concentration[*] 	Off
Process variable value	A process variable is selected in the Assign simulation process variable parameter (→  144).	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0




Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Status input simulation	–	Switch simulation of the status input on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Input signal level	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	<ul style="list-style-type: none"> ■ High ■ Low 	High
Current input 1 to n simulation	–	Switch simulation of the current input on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Value current input 1 to n	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Current output 1 to n simulation	–	Switch the simulation of the current output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Value current output 1 to n	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output simulation 1 to n	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Frequency value 1 to n	In the Frequency output simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the Operating mode parameter, the Pulse option is selected.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 118) defines the pulse width of the pulses output.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ Down-counting value 	Off
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to n	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Switch status 1 to n	–	Select the status of the status output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open
Relay output 1 to n simulation	–	Switch simulation of the relay output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Switch status 1 to n	The On option is selected in the Switch output simulation 1 to n parameter parameter.	Select status of the relay output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open
Pulse output simulation	–	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ Down-counting value 	Off
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process 	Process
Diagnostic event simulation	–	Select a diagnostic event to simulate this event.	<ul style="list-style-type: none"> ■ Off ■ Diagnostic event picklist (depends on the category selected) 	Off
Logging interval	–	Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	–

* Visibility depends on order options or device settings

10.9 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:




- Protect access to parameters via access code →  146
- Protect access to local operation via key locking →  76
- Protect access to measuring device via write protection switch →  147

10.9.1 Write protection via access code




The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display


1. Navigate to the **Define access code** parameter (→  142).
2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
3. Enter the access code again in the **Confirm access code** parameter (→  142) to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.



-  If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  75.
- The user role with which the user is currently logged on via the local display is indicated by the →  75 **Access status** parameter. Navigation path: Operation → Access status


Parameters which can always be modified via the local display

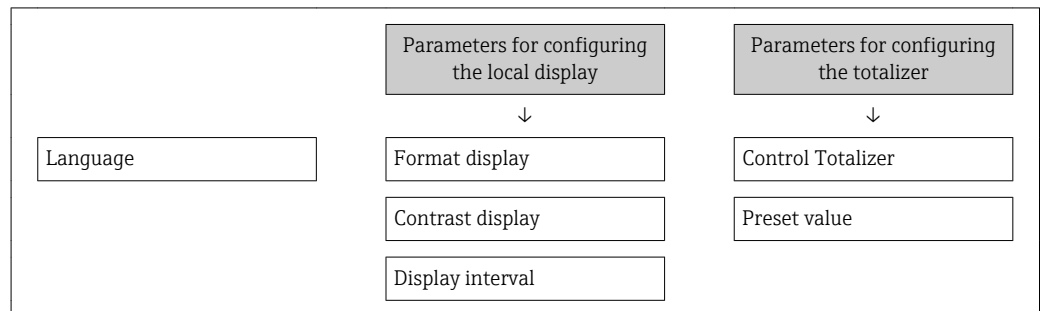

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.



Defining the access code via the Web browser

1. Navigate to the **Define access code** parameter (→  142).
2. Define a max. 16-digit numeric code as an access code.
3. Enter the access code again in the **Confirm access code** parameter (→  142) to confirm the code.
 - ↳ The Web browser switches to the login page.

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.



-  ■ If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  75.
- The user role with which the user is currently logged on via Web browser is indicated by the **Access status** parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

 For a reset code, contact your Endress+Hauser service organization.

1. Navigate to the **Reset access code** parameter (→  143).
2. Enter the reset code.
 - ↳ The access code has been reset to the factory setting **0000**. It can be redefined →  146.

10.9.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):


- Via local display
- Via PROFIBUS PA protocol

Proline 500 – digital

⚠ WARNING**Excessive tightening torque applied to the fixing screws!**


Risk of damaging the plastic transmitter.

- Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

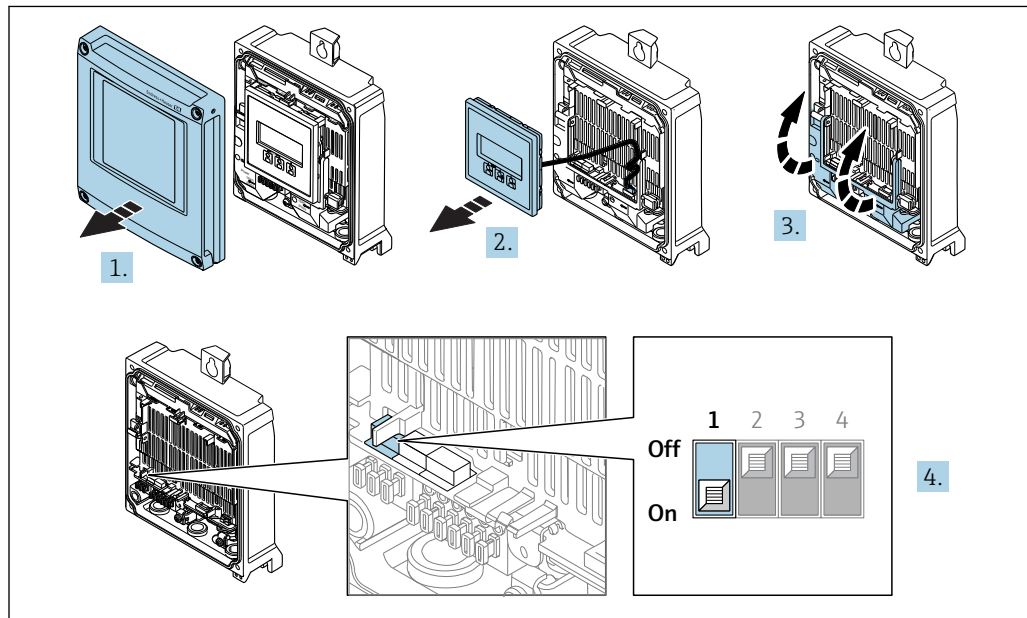


A0029673

- 1.** Open the housing cover.
- 2.** Remove the display module.
- 3.** Fold open the terminal cover.
- 4.** Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.
 - ↳ In the **Locking status** parameter the **Hardware locked** option is displayed → 150. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

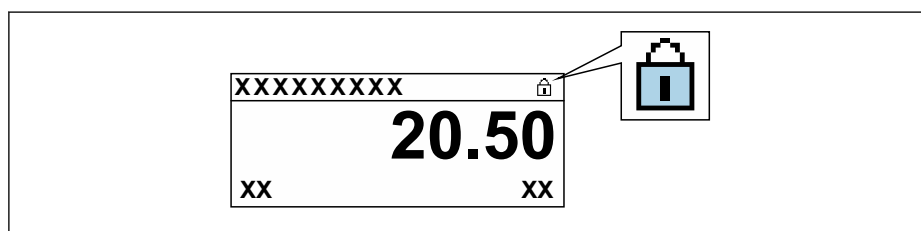

A0029425


- 5.** Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - ↳ No option is displayed in the **Locking status** parameter → 150. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

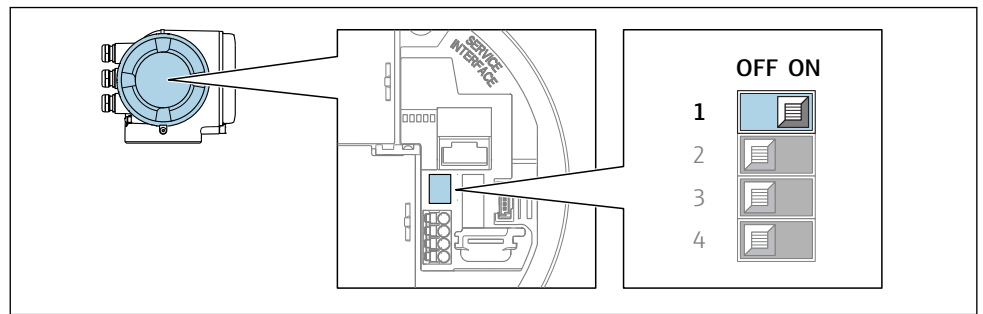Proline 500**1.**

A0029630

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

- ↳ In the **Locking status** parameter the **Hardware locked** option is displayed → 150. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

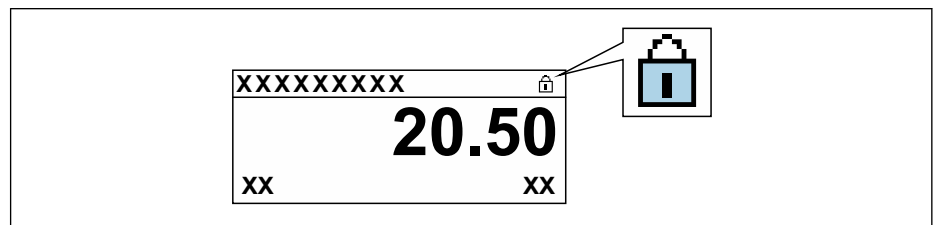

A0029425

2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

- ↳ No option is displayed in the **Locking status** parameter → 150. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

11 Operation

11.1 Reading the device locking status


Device active write protection: **Locking status** parameter

Operation → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status parameter applies → 75. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

-  Detailed information:
- To configure the operating language → 101
 - For information on the operating languages supported by the measuring device → 260

11.3 Configuring the display

- Detailed information:
- On the basic settings for the local display → 126
 - On the advanced settings for the local display → 136

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation
"Diagnostics" menu → Measured values











▶ Measured values	
▶ Measured variables	→ 151
▶ Input values	→ 153
▶ Output values	→ 154
▶ Totalizer 1 to n	→ 152

11.4.1 "Measured variables" submenu





The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.









Navigation

"Diagnostics" menu → Measured values → Measured variables

► Measured variables		
Mass flow	→ 	151
Volume flow	→ 	151
Corrected volume flow	→ 	151
Density	→ 	151
Reference density	→ 	152
Temperature	→ 	152
Pressure value	→ 	152
Concentration	→ 	152
Target mass flow	→ 	152
Carrier mass flow	→ 	152

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	–	Displays the mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  105).	Signed floating-point number
Volume flow	–	Displays the volume flow currently calculated. <i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  105).	Signed floating-point number
Corrected volume flow	–	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the Corrected volume flow unit parameter (→  105).	Signed floating-point number
Density	–	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter (→  105).	Signed floating-point number





Parameter	Prerequisite	Description	User interface
Reference density	–	Displays the reference density currently calculated. <i>Dependency</i> The unit is taken from the Reference density unit parameter (→  105).	Signed floating-point number
Temperature	–	Shows the medium temperature currently measured. <i>Dependency</i> The unit is taken from the Temperature unit parameter (→  106).	Signed floating-point number
Pressure value	–	Displays either a fixed or external pressure value. <i>Dependency</i> The unit is taken from the Pressure unit parameter (→  106).	Signed floating-point number
Concentration	For the following order code: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow currently measured for the target medium. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  105).	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow currently measured for the carrier medium. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  105).	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable	→  153
Totalizer value 1 to n	→  153
Totalizer status 1 to n	→  153
Totalizer status (Hex) 1 to n	→  153

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] 	Mass flow
Totalizer value 1 to n	In the Assign process variable parameter one of the following options is selected: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	Displays the current totalizer counter value.	Signed floating-point number	0 kg
Totalizer status 1 to n	–	Displays the current totalizer status.	<ul style="list-style-type: none"> ■ Good ■ Uncertain ■ Bad 	–
Totalizer status (Hex) 1 to n	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF	–

* Visibility depends on order options or device settings

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu → Measured values → Input values

► Input values	
► Current input 1 to n	→ 153
► Status input 1 to n	→ 154

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu → Measured values → Input values → Current input 1 to n

► Current input 1 to n

Measured values 1 to n

Measured current 1 to n

→ 154

→ 154

Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu → Measured values → Input values → Status input 1 to n

► Status input 1 to n

Value status input

→ 154

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	<div>■ High</div> <div>■ Low</div>

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

► Output values

► Current output 1 to n

→ 155

► Pulse/frequency/switch output 1 to n	→ 155
► Relay output 1 to n	→ 156

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu → Measured values → Output values → Value current output 1 to n

► Current output 1 to n	
Output current 1 to n	→ 155
Measured current 1 to n	→ 155

Parameter overview with brief description

Parameter	Description	User interface
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu → Measured values → Output values → Pulse/frequency/switch output 1 to n

► Pulse/frequency/switch output 1 to n	
Output frequency 1 to n	→ 156
Pulse output 1 to n	→ 156
Switch status 1 to n	→ 156

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency 1 to n	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output 1 to n	The Pulse option is selected in the Operating mode parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch status 1 to n	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	<div>■ Open</div> <div>■ Closed</div>

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu → Measured values → Output values → Relay output 1 to n

► Relay output 1 to n

Switch status

→ ⓘ 156

Switch cycles

→ ⓘ 156

Max. switch cycles number

→ ⓘ 156

Parameter overview with brief description

Parameter	Description	User interface
Switch status	Shows the current relay switch status.	<div>■ Open</div> <div>■ Closed</div>
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the**Setup** menu (→ ⓘ 102)
- Advanced settings using the**Advanced setup** submenu (→ ⓘ 131)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:
Control Totalizer

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to n parameter.

Navigation

"Operation" menu → Totalizer handling

► Totalizer handling	
Control Totalizer 1 to n	→ 157
Preset value 1 to n	→ 157
Reset all totalizers	→ 157

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	–	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold 	Totalize
Preset value 1 to n	In the Assign process variable parameter one of the following options is selected: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	Specify start value for totalizer.	Signed floating-point number	0 kg
Reset all totalizers	–	Reset all totalizers to 0 and start.	<ul style="list-style-type: none"> ■ Cancel ■ Reset + totalize 	Cancel

11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.




Data logging is also available via:

- Plant Asset Management Tool FieldCare → 86.
- Web browser

Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

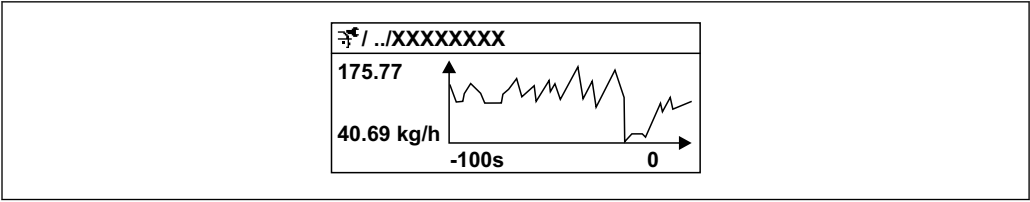

36 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

i If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

► Data logging

Assign channel 1

→ 159

Assign channel 2

→ 159

Assign channel 3

→ 159

Assign channel 4

→ 160

Logging interval

→ 160

Clear logging data

→ 160

Data logging

→ 160

Logging delay

→ 160

Data logging control

→ 160

Data logging status

→ 160

Entire logging duration

→ 160





► Display channel 1



► Display channel 2

► Display channel 3

► Display channel 4

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude * ■ Frequency fluctuation 0 * ■ Oscillation damping 0 * ■ Oscillation damping fluctuation 0 * ■ Signal asymmetry * ■ Exciter current 0 * ■ HBSI * ■ Current output 1 * ■ Current output 2 * ■ Current output 3 * ■ Current output 4 * ■ Pressure 	Off
Assign channel 2	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Assign process variable to logging channel.	Picklist, see Assign channel 1 parameter (→  159)	Off
Assign channel 3	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Assign process variable to logging channel.	Picklist, see Assign channel 1 parameter (→  159)	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 4	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Picklist, see Assign channel 1 parameter (→  159)	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	<ul style="list-style-type: none"> ■ Cancel ■ Clear data 	Cancel
Data logging	–	Select the data logging method.	<ul style="list-style-type: none"> ■ Overwriting ■ Not overwriting 	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	<ul style="list-style-type: none"> ■ None ■ Delete + start ■ Stop 	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	<ul style="list-style-type: none"> ■ Done ■ Delay active ■ Active ■ Stopped 	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating-point number	0 s

* Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 235.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display dark and no output signals	The connecting cable is not plugged in correctly.	1. Check the connection of the electrode cable and correct if necessary. 2. Check the connection of the coil current cable and correct if necessary.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> Set the display brighter by simultaneously pressing \boxplus + \boxminus. Set the display darker by simultaneously pressing \boxminus + \boxplus.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 235.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	<ol style="list-style-type: none"> Press \boxminus + \boxplus for 2 s ("home position"). Press \boxminus. Set the desired language in the Display language parameter (→ 138).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> Check the cable and the connector between the main electronics module and display module. Order spare part → 235.

For output signals

Error	Possible causes	Solution
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 235.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	1. Check and correct parameter configuration. 2. Observe limit values specified in the "Technical Data".

For access

Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the OFF position → 147.
No write access to parameters	Current user role has limited access authorization	1. Check user role → 75. 2. Enter correct customer-specific access code → 75.
No connection via PROFIBUS PA	Device plug connected incorrectly	Check the pin assignment of the connector .
No connection via PROFIBUS PA	PROFIBUS PA cable incorrectly terminated	Check terminating resistor .
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary → 82.
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 78. 2. Check the network settings with the IT manager.
Not connecting to Web server	Incorrect IP address	Check the IP address: 192.168.1.212 → 78
Not connecting to Web server	Incorrect WLAN access data	<ul style="list-style-type: none"> Check WLAN network status. Log on to the device again using WLAN access data. Verify that WLAN is enabled on the measuring device and operating device .
	WLAN communication disabled	–
Not connecting to Web server, FieldCare or DeviceCare	No WLAN network available	<ul style="list-style-type: none"> Check if WLAN reception is present: LED on display module is lit blue Check if WLAN connection is enabled: LED on display module flashes blue Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	<ul style="list-style-type: none"> Operating device is outside of reception range: Check network status on operating device. To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	<ul style="list-style-type: none"> Check network settings. Temporarily enable only the WLAN as an interface.


Error	Possible causes	Solution
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version . 2. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	<ul style="list-style-type: none"> ■ JavaScript not enabled ■ JavaScript cannot be enabled 	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/basic.html as the IP address.
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Proline 500 – digital

Different LEDs in the transmitter provide information on the device status.

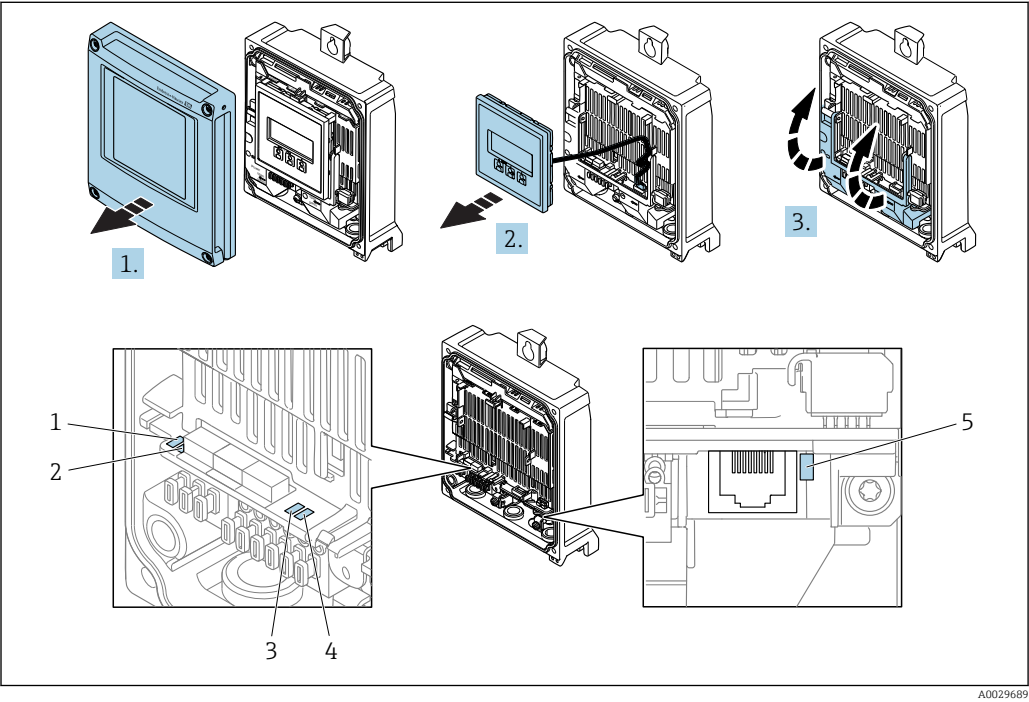

- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active, Ethernet Link/Activity


- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.

LED	Color	Meaning
1 Supply voltage	Off	Supply voltage is off or too low.
	Green	Supply voltage is ok.
2 Device status	Off	Firmware error
	Green	Device status is ok.
	Flashing green	Device is not configured.
	Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
	Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
	Flashing red/green	The device restarts.
3 Not used	–	–
4 Communication	Off	Device does not receive any Profibus data.
	White	Device receives Profibus data.

LED	Color	Meaning
5 Service interface (CDI), Ethernet Link/Activity	Off	Not connected or no connection established.
	Yellow	Connected and connection established.
	Flashing yellow	Service interface active.

Proline 500

Different LEDs in the transmitter provide information on the device status.

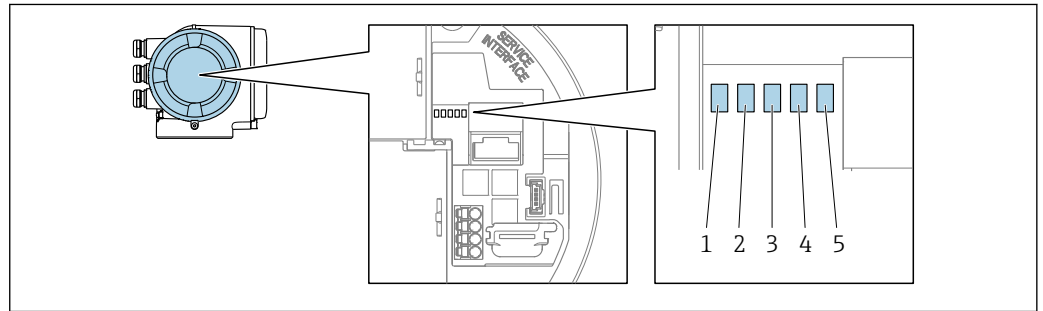

A0029629


- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active, Ethernet Link/Activity

LED	Color	Meaning
1 Supply voltage	Off	Supply voltage is off or too low.
	Green	Supply voltage is ok.
2 Device status	Off	Firmware error
	Green	Device status is ok.
	Flashing green	Device is not configured.
	Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
	Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
	Flashing red/green	The device restarts.
3 Not used	–	–
4 Communication	Off	Device does not receive any Profibus data.
	White	Device receives Profibus data.
5 Service interface (CDI), Ethernet Link/Activity	Off	Not connected or no connection established.
	Yellow	Connected and connection established.
	Flashing yellow	Service interface active.

12.2.2 Sensor connection housing

Proline 500 – digital

Various light emitting diodes (LED) on the ISEM electronics (Intelligent Sensor Electronic Module) in the sensor connection housing provide information on the device status.

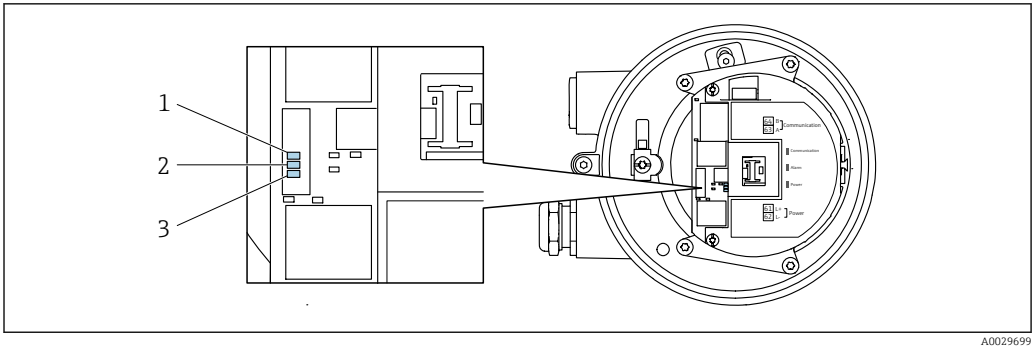


- 1 *Communication*
- 2 *Device status*
- 3 *Supply voltage*

LED	Color	Meaning
1 Communication	White	Communication active
2 Device status	Red	Error
	Flashing red	Warning
3 Supply voltage	Green	Supply voltage is ok
	Off	Supply voltage is off or too low

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

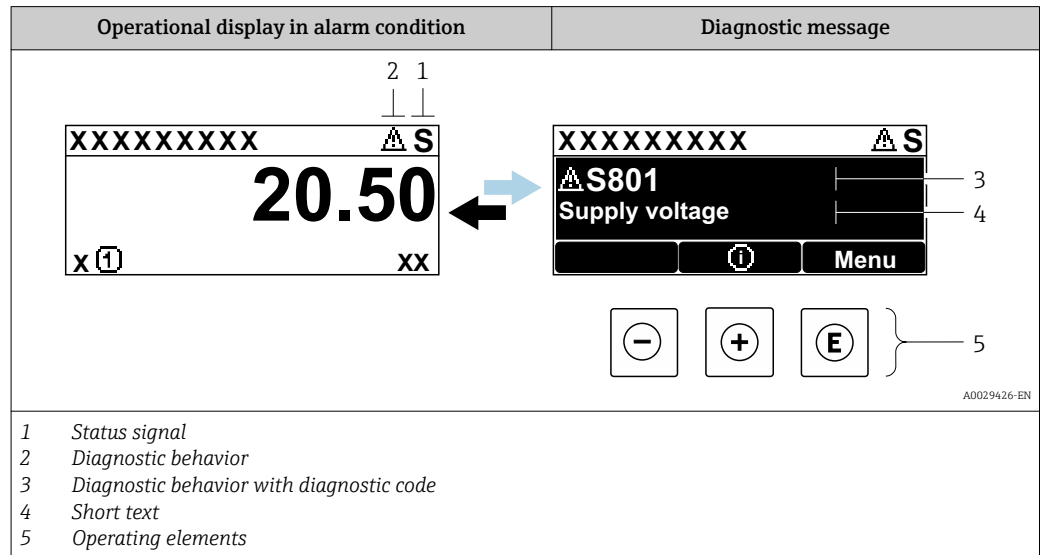

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
- Via parameter
 - Via submenus → 227



Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
C	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
M	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior


Symbol	Meaning
	Alarm <ul style="list-style-type: none">■ Measurement is interrupted.■ Signal outputs and totalizers assume the defined alarm condition.■ A diagnostic message is generated.
	Warning <p>Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.</p>

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

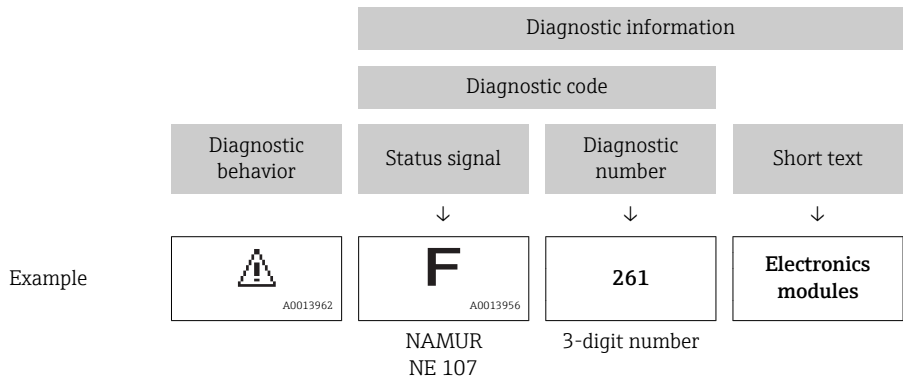

12.3.2 Calling up remedial measures

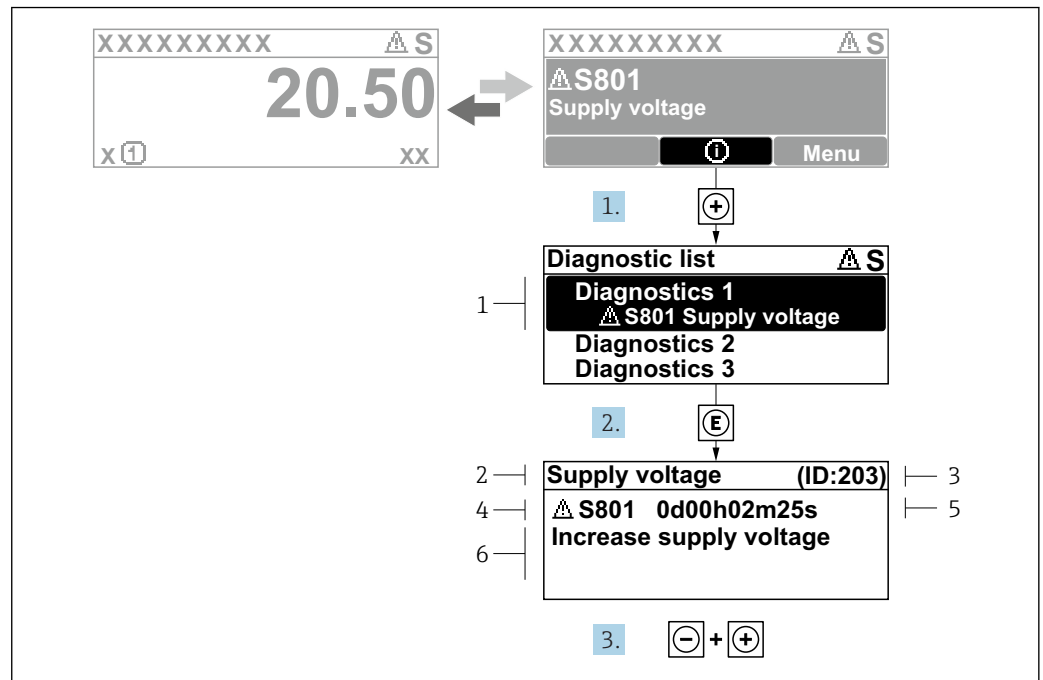

37 Message about remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

1. The user is in the diagnostic message.
Press **+** (Ⓢ symbol).
↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
↳ The message about the remedial measures opens.
3. Press **-** + **+** simultaneously.
↳ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

1. Press **E**.
↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
↳ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

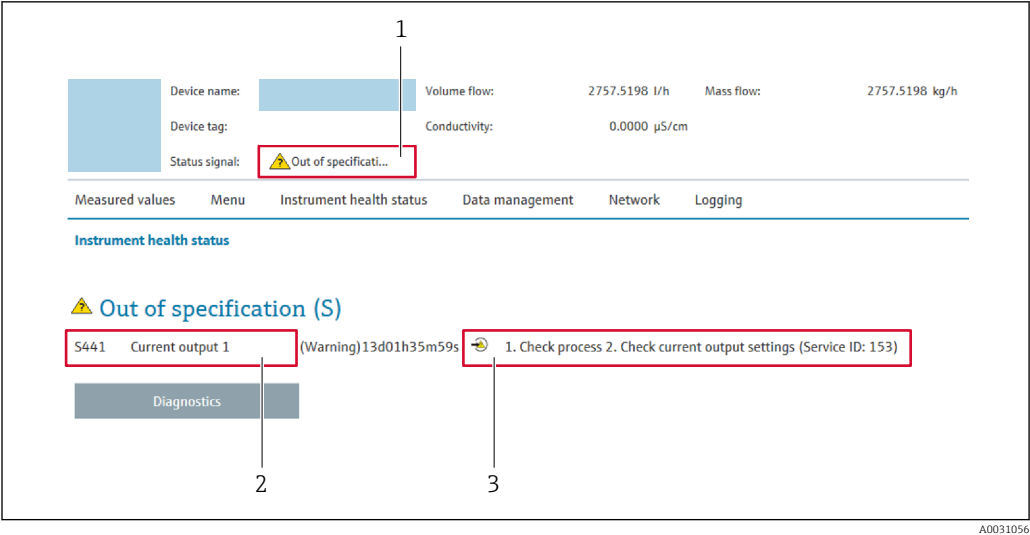

- 1 Status area with status signal
- 2 Diagnostic information → 168
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 227

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
	Failure A device error has occurred. The measured value is no longer valid.
	Function check The device is in service mode (e.g. during a simulation).
	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value is still valid.

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare or DeviceCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

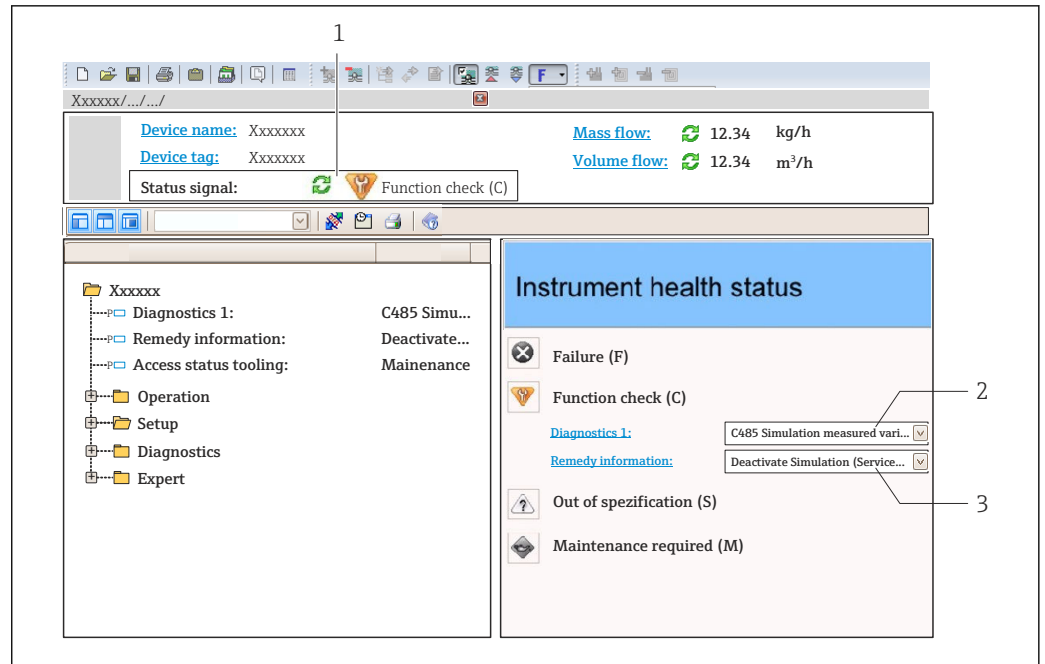

A0021799-EN


- 1 Status area with status signal → 167
- 2 Diagnostic information → 168
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 227

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

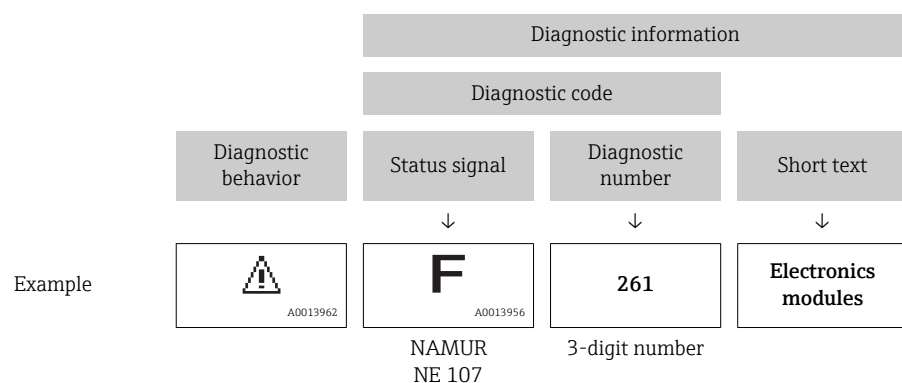

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.


12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

 Diagnostic behavior in accordance with Specification PROFIBUS PA Profile 3.02, Condensed Status.

Expert → System → Diagnostic handling → Diagnostic behavior

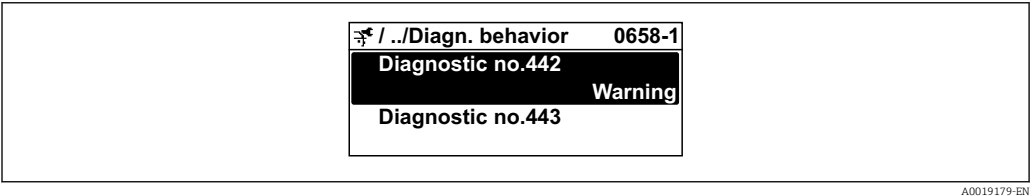

A0019179-EN


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFIBUS and the totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS PA Profile 3.02 Specification and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

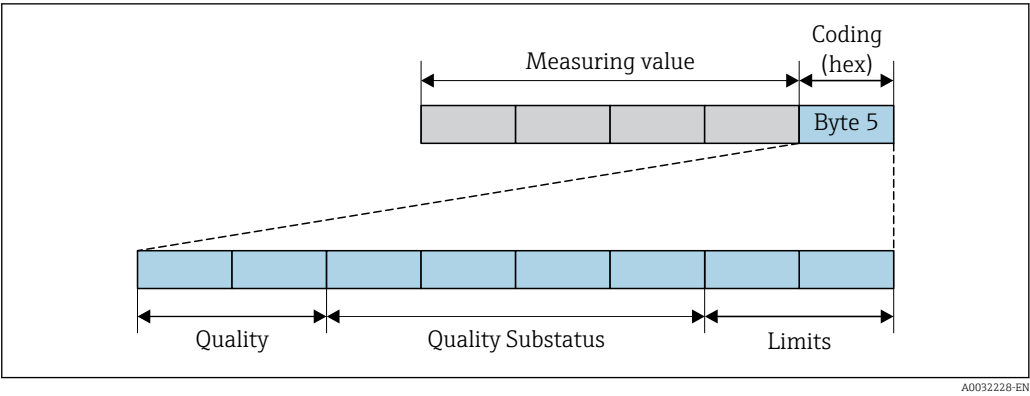

38 Structure of the coding byte

A0032228-EN

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS PA Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte .

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and on the group in which the diagnostic information is located.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
→ 173
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
→ 174
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
→ 174
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
→ 174

Depending on the group in which the diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor: diagnostic number 000 to 199

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the electronics: diagnostic number 200 to 399

Diagnostic number 200 to 301, 303 to 399

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information 302

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Function check, local override	0x24 to 0x27	C	Function check
Warning	GOOD	Function check	0xBC to 0xBF	–	–

Diagnostic information 302 (device verification active) is output during internal or external Heartbeat verification.

- Signal status: Function check
- Choice of diagnostic behavior: alarm or warning (factory setting)

When Heartbeat verification starts, data logging is interrupted, the last valid measured value is output and the totalizers are stopped.

Diagnostic information pertaining to the configuration: diagnostic number 400 to 599


Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					



Diagnostic information pertaining to the process: diagnostic number 800 to 999

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

12.7 Overview of diagnostic information

-  The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- All of the measured variables affected in the entire Promass instrument family are always listed under "Measured variables affected". The measured variables available for the device in question depend on the device version. When assigning the measured variables to the device functions, for example to the individual outputs, all of the measured variables available for the device version in question are available for selection.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  172

12.7.1 Diagnostic of sensor

Diagnostic information		Remedy instructions
No.	Short text	
022	Temperature sensor defective	<ol style="list-style-type: none"> 1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ S&W volume flow ■ Reference density ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut

Diagnostic information		Remedy instructions	
No.	Short text		
046	Sensor limit exceeded	1. Inspect sensor 2. Check process condition	
	Measured variable status [from the factory] ¹⁾		
	Quality		Good
	Quality substatus		Maintenance demanded
	Coding (hex)		0xA8 to 0xAB
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
062	Sensor connection faulty		1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
063	Exciter current faulty		1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
082	Data storage		1. Check module connections 2. Contact service
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Concentration</div><div>▪ Measured values 1</div><div>▪ Measured values 2</div><div>▪ Measured values 3</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronic temperature (ISEM)</div><div>▪ Empty pipe detection</div></div><div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Low flow cut off</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ S&W volume flow</div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div></div><div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Status</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>		

Diagnostic information			Remedy instructions	
No.	Short text			
083	Memory content		1. Restart device 2. Restore HistoROM S-DAT backup ('Device reset' parameter) 3. Replace HistoROM S-DAT	
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Concentration■ Measured values 1■ Measured values 2■ Measured values 3■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Dynamic viscosity■ Sensor electronic temperature (ISEM)■ Empty pipe detection</div><div><ul style="list-style-type: none">■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Low flow cut off■ Mass flow■ Oil mass flow■ Water mass flow■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ S&W volume flow■ Reference density■ Reference density alternative■ Corrected volume flow</div><div><ul style="list-style-type: none">■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Status■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
140	Sensor signal asymmetrical		1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
144	Measuring error too high	1. Check or change sensor 2. Check process conditions	
	Measured variable status [from the factory] ¹⁾		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7.2 Diagnostic of electronic

Diagnostic information		Remedy instructions
No.	Short text	
201	Device failure	1. Restart device 2. Contact service
	Measured variable status	
	Quality	
	Bad	
	Quality substatus	
	Maintenance alarm	
	Coding (hex)	
	0x24 to 0x27	
201	Status signal	F
	Diagnostic behavior	
	Alarm	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Measured values 1 ■ Measured values 2 ■ Measured values 3 ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection 	
	<ul style="list-style-type: none"> ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ S&W volume flow ■ Reference density ■ Reference density alternative ■ Corrected volume flow 	
	<ul style="list-style-type: none"> ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut 	

Diagnostic information			Remedy instructions
No.	Short text		
242	Software incompatible		1. Check software 2. Flash or change main electronics module
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information		Remedy instructions
No.	Short text	
252	Modules incompatible	1. Check electronic modules 2. Check if correct modules are available (e.g. NEx, Ex) 3. Replace electronic modules
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Concentration ▪ Measured values 1 ▪ Measured values 2 ▪ Measured values 3 ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection 	<ul style="list-style-type: none"> ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ S&W volume flow ▪ Reference density ▪ Reference density alternative ▪ Corrected volume flow
		<ul style="list-style-type: none"> ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut

Diagnostic information		Remedy instructions
No.	Short text	
252	Modules incompatible	1. Check if correct electronic modul is plugged 2. Replace electronic module
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
		<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values 1 ▪ Measured values 2 ▪ Measured values 3 ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow

Diagnostic information		Remedy instructions
No.	Short text	
262	Sensor electronic connection faulty	
	Measured variable status	
	Quality	Bad
	Quality substatus	Maintenance alarm
	Coding (hex)	0x24 to 0x27
	Status signal	F
	Diagnostic behavior	Alarm
	Influenced measured variables	
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
270	Main electronic failure		Change main electronic module
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Concentration</div><div>▪ Measured values 1</div><div>▪ Measured values 2</div><div>▪ Measured values 3</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronic temperature (ISEM)</div><div>▪ Empty pipe detection</div></div><div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Low flow cut off</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ S&W volume flow</div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div></div><div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Status</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>		

Diagnostic information		Remedy instructions	
No.	Short text		
271	Main electronic failure	1. Restart device 2. Change main electronic module	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
272	Main electronic failure		1. Restart device 2. Contact service
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions
No.	Short text	
273	Main electronic failure	Change electronic
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Measured values 1 ■ Measured values 2 ■ Measured values 3 ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection 	
	<ul style="list-style-type: none"> ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ S&W volume flow ■ Reference density ■ Reference density alternative ■ Corrected volume flow 	
	<ul style="list-style-type: none"> ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut 	

Diagnostic information		Remedy instructions
No.	Short text	
275	I/O module 1 to n defective	Change I/O module
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values 1 ■ Measured values 2 ■ Measured values 3 ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density 	
	<ul style="list-style-type: none"> ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 	
	<ul style="list-style-type: none"> ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow 	

Diagnostic information			Remedy instructions
No.	Short text		
276	I/O module 1 to n faulty		1. Restart device 2. Change I/O module
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Concentration■ Measured values 1■ Measured values 2■ Measured values 3■ Oscillation damping 1■ Oscillation damping 2■ Density</div><div><ul style="list-style-type: none">■ Dynamic viscosity■ Sensor electronic temperature (ISEM)■ Empty pipe detection■ Kinematic viscosity■ Low flow cut off■ Mass flow■ HBSI■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Reference density■ Corrected volume flow</div><div><ul style="list-style-type: none">■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Status■ Volume flow</div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
283	Memory content		1. Reset device 2. Contact service
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Concentration■ Measured values 1■ Measured values 2■ Measured values 3■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Dynamic viscosity■ Sensor electronic temperature (ISEM)■ Empty pipe detection</div><div><ul style="list-style-type: none">■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Low flow cut off■ Mass flow■ Oil mass flow■ Water mass flow■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ S&W volume flow■ Reference density■ Reference density alternative■ Corrected volume flow</div><div><ul style="list-style-type: none">■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Status■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

Diagnostic information		Remedy instructions	
No.	Short text		
302	Device verification active	Device verification active, please wait.	
	Measured variable status [from the factory] ¹⁾		
	Quality		Good
	Quality substatus		Function check
	Coding (hex)		0xBC to 0xBF
	Status signal		C
	Diagnostic behavior		Warning
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
303	I/O 1 to n configuration changed		1. Apply I/O module configuration (parameter 'Apply I/O configuration') 2. Afterwards reload device description and check wiring
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	M	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	–		

Diagnostic information		Remedy instructions	
No.	Short text		
311	Electronic failure	1. Do not reset device 2. Contact service	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		M
	Diagnostic behavior		Warning
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions	
No.	Short text		
332	Writing in HistoROM backup failed	Replace user interface board Ex d/XP: replace transmitter	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
361	I/O module 1 to n faulty		1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div></div><div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ HBSI</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div></div><div><div>■ Reference density</div><div>■ Corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
372	Sensor electronic (ISEM) faulty		1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM)
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions	
No.	Short text		
373	Sensor electronic (ISEM) faulty	1. Transfer data or reset device 2. Contact service	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
374	Sensor electronic (ISEM) faulty		1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM)
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Concentration■ Oscillation damping 1■ Oscillation damping 2■ Density■ Dynamic viscosity■ Sensor electronic temperature (ISEM)</div><div><ul style="list-style-type: none">■ Empty pipe detection■ Kinematic viscosity■ Low flow cut off■ Mass flow■ HBSI■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Reference density</div><div><ul style="list-style-type: none">■ Corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Status■ Volume flow</div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
375	I/O- 1 to n communication failed	
	Measured variable status	
	Quality	Bad
	Quality substatus	Maintenance alarm
	Coding (hex)	0x24 to 0x27
	Status signal	F
	Diagnostic behavior	Alarm
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Measured values 1 ■ Measured values 2 ■ Measured values 3 ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ S&W volume flow ■ Reference density ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow 	

Diagnostic information		Remedy instructions	
No.	Short text		
382	Data storage	1. Insert T-DAT 2. Replace T-DAT	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
383	Memory content		1. Restart device 2. Delete T-DAT via 'Reset device' parameter 3. Replace T-DAT
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div></div><div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div></div></div>			

Diagnostic information		Remedy instructions	
No.	Short text		
387	HistoROM backup failed	Contact service organization	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

12.7.3 Diagnostic of configuration

Diagnostic information		Remedy instructions	
No.	Short text		
330	Flash file invalid	1. Update firmware of device 2. Restart device	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		M
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div></div><div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ HBSI</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div></div><div><div>■ Reference density</div><div>■ Corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
331	Firmware update failed		1. Update firmware of device 2. Restart device
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions	
No.	Short text		
410	Data transfer	1. Check connection 2. Retry data transfer	
	Measured variable status		
	Quality		Bad
	Quality substatus		Maintenance alarm
	Coding (hex)		0x24 to 0x27
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information		Remedy instructions	
No.	Short text		
412	Processing download	Download active, please wait	
	Measured variable status		
	Quality		Uncertain
	Quality substatus		Initial value
	Coding (hex)		0x4C to 0x4F
	Status signal		C
	Diagnostic behavior		Warning
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
431	Trim 1 to n		Carry out trim
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	–		

Diagnostic information		Remedy instructions
No.	Short text	
437	Configuration incompatible	
	Measured variable status	
	Quality	Bad
	Quality substatus	Maintenance alarm
	Coding (hex)	0x24 to 0x27
	Status signal	F
	Diagnostic behavior	Alarm
	Influenced measured variables	
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions	
No.	Short text		
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	
	Measured variable status		
	Quality		Uncertain
	Quality substatus		Maintenance demanded
	Coding (hex)		0x68 to 0x6B
	Status signal		M
	Diagnostic behavior		Warning
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
441	Current output 1 to n		1. Check process 2. Check current output settings
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	–		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
442	Frequency output 1 to n		1. Check process 2. Check frequency output settings
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	–		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
443	Pulse output 1 to n		1. Check process 2. Check pulse output settings
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	–		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
444	Current input 1 to n		1. Check process 2. Check current input settings
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	■ Measured values 1 ■ Measured values 2 ■ Measured values 3		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
453	Flow override		Deactivate flow override
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
463	Analog input 1 to n selection invalid		1. Check module/channel configuration 2. Check I/O module configuration
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	■ Measured values 1 ■ Measured values 2 ■ Measured values 3		

Diagnostic information		Remedy instructions
No.	Short text	
482	FB not Auto/Cas	Set Block in AUTO mode
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
484	Failure mode simulation	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ GSV flow ■ GSV flow alternative 	

Diagnostic information			Remedy instructions
No.	Short text		
485	Measured variable simulation		Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
486	Current input 1 to n simulation		Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div>■ Measured values 1</div> <div>■ Measured values 2</div> <div>■ Measured values 3</div>		

Diagnostic information		Remedy instructions
No.	Short text	
491	Current output 1 to n simulation	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
492	Simulation frequency output 1 to n	Deactivate simulation frequency output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
493	Simulation pulse output 1 to n	Deactivate simulation pulse output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
494	Switch output simulation 1 to n	Deactivate simulation switch output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
495	Diagnostic event simulation	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
496	Status input simulation	Deactivate simulation status input
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
497	Simulation block output	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
520	I/O 1 to n hardware configuration invalid	1. Check I/O hardware configuration 2. Replace wrong I/O module 3. Plug the module of double pulse output on correct slot
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information			Remedy instructions	
No.	Short text			
528	Concentration settings faulty		1. Check concentration settings 2. Check input values e.g. pressure, temperature	
	Measured variable status			
	Quality	Bad		
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	S		
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	<div><div><div>■ Carrier mass flow</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div></div><div><div>■ Density</div><div>■ Mass flow</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div></div><div><div>■ Target volume flow</div><div>■ Volume flow</div></div></div>			

Diagnostic information		Remedy instructions
No.	Short text	
529	Concentration settings faulty	1. Check concentration settings 2. Check input values e.g. pressure, temperature
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
<ul style="list-style-type: none"> ■ Carrier mass flow ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Density ■ Mass flow ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Volume flow 		

Diagnostic information		Remedy instructions
No.	Short text	
537	Configuration	1. Check IP addresses in network 2. Change IP address
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
–		

Diagnostic information		Remedy instructions
No.	Short text	
594	Relay output simulation	Deactivate simulation switch output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
–		

12.7.4 Diagnostic of process

Diagnostic information		Remedy instructions
No.	Short text	
803	Current loop	1. Check wiring 2. Change I/O module
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
830	Sensor temperature too high	
	Measured variable status [from the factory] ¹⁾	
	Quality	Uncertain
	Quality substatus	Process related
	Coding (hex)	0x78 to 0x7B
	Status signal	S
	Diagnostic behavior	Warning
	Influenced measured variables	
<div><div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
831	Sensor temperature too low		Increase ambient temp. around the sensor housing
	Measured variable status [from the factory] ¹⁾		
	Quality	Uncertain	
	Quality substatus	Process related	
	Coding (hex)	0x78 to 0x7B	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Concentration</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronic temperature (ISEM)</div><div>▪ Empty pipe detection</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div></div><div><div>▪ Kinematic viscosity</div><div>▪ Low flow cut off</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ S&W volume flow</div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div></div><div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Status</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
832	Electronic temperature too high	Reduce ambient temperature	
	Measured variable status [from the factory] ¹⁾		
	Quality		Bad
	Quality substatus		Process related
	Coding (hex)		0x28 to 0x2B
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
833	Electronic temperature too low		Increase ambient temperature
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Process related	
	Coding (hex)	0x28 to 0x2B	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Concentration</div><div>▪ Measured values 1</div><div>▪ Measured values 2</div><div>▪ Measured values 3</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronic temperature (ISEM)</div><div>▪ Empty pipe detection</div></div><div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Low flow cut off</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ S&W volume flow</div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div></div><div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Status</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
834	Process temperature too high	Reduce process temperature	
	Measured variable status [from the factory] ¹⁾		
	Quality		Uncertain
	Quality substatus		Process related
	Coding (hex)		0x78 to 0x7B
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
835	Process temperature too low		Increase process temperature
	Measured variable status [from the factory] ¹⁾		
	Quality	Uncertain	
	Quality substatus	Process related	
	Coding (hex)	0x78 to 0x7B	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration	
	Measured variable status [from the factory] ¹⁾		
	Quality		Uncertain
	Quality substatus		Process related
	Coding (hex)		0x78 to 0x7B
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
862	Partly filled pipe		1. Check for gas in process 2. Adjust detection limits
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Process related	
	Coding (hex)	0x28 to 0x2B	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Carrier mass flow</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div></div><div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div></div><div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
882	Input signal		1. Check input configuration 2. Check external device or process conditions
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Measured values 1</div><div>■ Measured values 2</div><div>■ Measured values 3</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
910	Tubes not oscillating		1. Check electronic 2. Inspect sensor
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
912	Medium inhomogeneous		1. Check process cond. 2. Increase system pressure
	Measured variable status [from the factory] ¹⁾		
	Quality	Uncertain	
	Quality substatus	Process related	
	Coding (hex)	0x78 to 0x7B	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
913	Medium unsuitable	1. Check process conditions 2. Check electronic modules or sensor	
	Measured variable status [from the factory] ¹⁾		
	Quality		Uncertain
	Quality substatus		Process related
	Coding (hex)		0x78 to 0x7B
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Dynamic viscosity</div><div>■ Sensor electronic temperature (ISEM)</div><div>■ Empty pipe detection</div><div>■ GSV flow</div><div>■ GSV flow alternative</div></div><div><div>■ Kinematic viscosity</div><div>■ Low flow cut off</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ S&W volume flow</div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div></div><div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Status</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
941	API temperature out of specification		1. Check process temperature with selected API commodity group 2. Check API related parameters
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oil density</div><div>■ Water density</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Mass flow</div><div>■ Oil mass flow</div></div><div><div>■ Water mass flow</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ S&W volume flow</div><div>■ Reference density alternative</div></div><div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions
No.	Short text	
942	API density out of specification	1. Check process density with selected API commodity group 2. Check API related parameters
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	Mass flow	

Diagnostic information		Remedy instructions
No.	Short text	
943	API pressure out of specification	1. Check process pressure with selected API commodity group 2. Check API related parameters
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<div> <ul style="list-style-type: none"> Oil density Water density GSV flow GSV flow alternative Mass flow Oil mass flow </div> <div> <ul style="list-style-type: none"> Water mass flow NSV flow NSV flow alternative External pressure S&W volume flow Reference density alternative </div> <div> <ul style="list-style-type: none"> Corrected volume flow Oil corrected volume flow Water corrected volume flow Oil volume flow Water volume flow Water cut </div>	

Diagnostic information		Remedy instructions
No.	Short text	
944	Monitoring failed	Check process conditions for Heartbeat Monitoring
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) 	<ul style="list-style-type: none"> ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ Reference density
		<ul style="list-style-type: none"> ■ Corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow


1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.





Diagnostic information		Remedy instructions
No.	Short text	
948	Oscillation damping too high	Check process conditions
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ GSV flow ■ GSV flow alternative 	<ul style="list-style-type: none"> ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ S&W volume flow ■ Reference density ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow
		<ul style="list-style-type: none"> ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut



1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.






 To call up the measures to rectify a diagnostic event:

- Via local display →  169
- Via Web browser →  170
- Via "FieldCare" operating tool →  171
- Via "DeviceCare" operating tool →  171


 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu
→  227

Navigation

"Diagnostics" menu

 Diagnostics	
Actual diagnostics	→  227
Previous diagnostics	→  227
Operating time from restart	→  227
Operating time	→  227

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.9 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

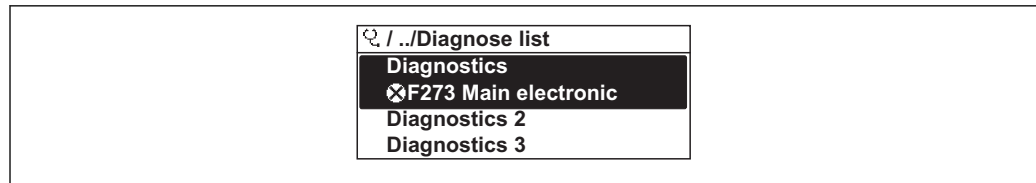

A0014006-EN

39 Taking the example of the local display

i To call up the measures to rectify a diagnostic event:

- Via local display → 169
- Via Web browser → 170
- Via "FieldCare" operating tool → 171
- Via "DeviceCare" operating tool → 171


12.10 Event logbook

12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

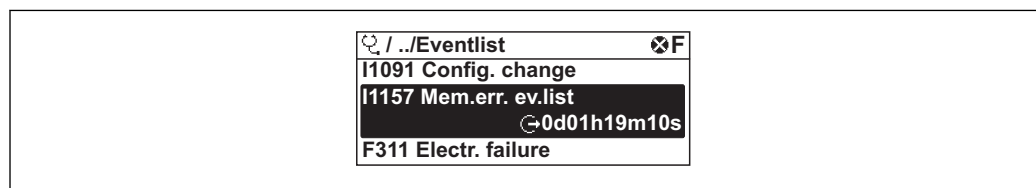

A0014008-EN

40 Taking the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Diagnostic events → 175
- Information events → 229

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ☹: Occurrence of the event
 - ☺: End of the event
- Information event
 - ☹: Occurrence of the event

i To call up the measures to rectify a diagnostic event:

- Via local display → 169
- Via Web browser → 170
- Via "FieldCare" operating tool → 171
- Via "DeviceCare" operating tool → 171

i For filtering the displayed event messages → 229

12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)


12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.


Info number	Info name
I1000	----- (Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1278	I/O module reset detected
I1335	Firmware changed
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off

Info number	Info name
I1451	Monitoring on
I1457	Measured error verification failed
I1459	I/O module verification failed
I1460	HBSI verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1618	I/O module 2 replaced
I1619	I/O module 3 replaced
I1621	I/O module 4 replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server: login successful
I1628	Display: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1632	Display: login failed
I1633	CDI: login failed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1636	Fieldbus address reset
I1639	Max. switch cycles number reached
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

12.11 Resetting the measuring device

Using the **Device reset** parameter (→  143) it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.11.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Restore S-DAT backup	Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT.  This option is displayed only in an alarm condition.

12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation
"Diagnostics" menu → Device information

► Device information

Device tag

Serial number

Firmware version

Device name

Order code

Extended order code 1


Extended order code 2


Extended order code 3


ENP version


PROFIBUS ident number


Status PROFIBUS Master Config


→  232


→  232


→  232


→  232


→  232


→  232

→  232






→  232

→  232

→  232


→  232


Parameter overview with brief description


Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promass 500 PA
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	–
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass 300/500	–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00
PROFIBUS ident number	Displays the PROFIBUS identification number.	0 to FFFF	0x156D
Status PROFIBUS Master Config	Displays the status of the PROFIBUS Master configuration.	<ul style="list-style-type: none"> ■ Active ■ Not active 	Not active

12.13 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
08.2016	01.00.zz	Option 72	Original firmware	Operating Instructions	BA01552D/06/EN/01.16
11.2018	01.01.zz	Option 68	<ul style="list-style-type: none"> ■ Concentration update ■ Local display - enhanced performance and data entry via text editor ■ Optimized keypad lock for local display ■ Web server feature update <ul style="list-style-type: none"> – Support for trend data function – Heartbeat function enhanced to include detailed results (page 3/4 of the report) – Device configuration as PDF (parameter log, similar to FDT print) ■ Network capability of Ethernet (service) interface ■ Comprehensive Heartbeat feature update ■ Local display - support for WLAN infrastructure mode ■ Implementation of reset code 	Operating Instructions	BA01552D/06/EN/02.18

 It is possible to flash the firmware to the current version or the previous version using the service interface.

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Product root: e.g. 8H5B
The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: → 237

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repairs

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.


14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→  232) in the **Device information** submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is in need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at

<http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions.

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:











- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.





15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Transmitter <ul style="list-style-type: none"> Proline 500 – digital Proline 500 	Transmitter for replacement or storage. Use the order code to define the following specifications: <ul style="list-style-type: none"> Approvals Output Input Display/operation Housing Software <div>  <ul style="list-style-type: none"> Proline 500 – digital transmitter: Order code: 8X5BXX-XXXXXXXXXA Proline 500 transmitter: Order code: 8X5BXX-XXXXXXXXXB </div> <div>  Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. Based on the serial number, the device-specific data (e.g., calibration factors) of the replacement device can be used for the new transmitter. </div> <div>  <ul style="list-style-type: none"> Proline 500 – digital transmitter: Installation Instructions EA01151 Proline 500 transmitter: Installation Instructions EA01152 </div>
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Enclosed accessories", option P8 "Wireless antenna wide area". <div>  <ul style="list-style-type: none"> The external WLAN antenna is not suitable for use in hygienic applications. Further information on the WLAN interface →  84. </div> <div>  Order number: 71351317 </div> <div>  Installation Instructions EA01238D </div>
Pipe mounting set	Pipe mounting set for transmitter. <div>  <ul style="list-style-type: none"> Proline 500 – digital transmitter Order number: 71346427 Proline 500 transmitter Order number: 71346428 </div>
Protective cover <ul style="list-style-type: none"> Proline 500 – digital Proline 500 	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. <div>  <ul style="list-style-type: none"> Proline 500 – digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505 </div> <div>  Installation Instructions EA01160 </div>



Display guard Proline 500 – digital	<p>Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.</p> <p> Order number: 71228792</p> <p> For details, see Installation Instructions EA01093</p>
Connecting cable Proline 500 – digital Sensor – Transmitter	<p>The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012).</p> <p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> ■ Option B: 20 m (65 ft) ■ Option E: User configurable up to max. 50 m ■ Option F: User configurable up to max. 165 ft <p> Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1 000 ft)</p>
Connecting cable Proline 500 Sensor – Transmitter	<p>The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012).</p> <p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> ■ Option 1: 5 m (16 ft) ■ Option 2: 10 m (32 ft) ■ Option 3: 20 m (65 ft) <p> Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)</p>

15.1.2 For the sensor





Accessories	Description
Heating jacket	<p>Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.</p> <p> If using oil as a heating medium, please consult with Endress+Hauser.</p> <p> Special Documentation SD02157D</p>

15.2 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> ■ Choice of measuring devices for industrial requirements ■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. ■ Graphic illustration of the calculation results ■ Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. <p>Applicator is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: https://portal.endress.com/webapp/applicator ■ As a downloadable DVD for local PC installation.
W@M	<p>W@M Life Cycle Management</p> <p>Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.</p> <p>W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.</p> <p>Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement</p>

Accessories	Description
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool to connect and configure Endress+Hauser field devices.</p> <p> Innovation brochure IN01047S</p>

15.3 System components

Accessories	Description
Memograph M graphic data manager	<p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI00133R ■ Operating Instructions BA00247R </p>
Cerabar M	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI00426P and TI00436P ■ Operating Instructions BA00200P and BA00382P </p>
Cerabar S	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI00383P ■ Operating Instructions BA00271P </p>
iTEMP	<p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.</p> <p> "Fields of Activity" document FA00006T</p>

16 Technical data


16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	<p>The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.</p> <p>For information on the structure of the device →  14</p>

16.3 Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	$\frac{3}{8}$	0 to 2 000	0 to 73.50
15	$\frac{1}{2}$	0 to 6 500	0 to 238.9
25	1	0 to 18 000	0 to 661.5
40	$1\frac{1}{2}$	0 to 45 000	0 to 1 654
50	2	0 to 70 000	0 to 2 573

Measuring range for gases

Measuring ranges valid only for Promass H with tantalum 2.5W.

The full scale value depends on the density and the sound velocity of the gas used and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \text{minimum} (\dot{m}_{\max(F)} \cdot \rho_G : x ; \rho_G \cdot c_G \cdot \pi/2 \cdot (d_i)^2 \cdot 3600)$$

$\dot{m}_{\max(G)}$	Maximum full scale value for gas [kg/h]
$\dot{m}_{\max(F)}$	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$
ρ_G	Gas density in [kg/m ³] at operating conditions
x	Constant dependent on nominal diameter
c_G	Sound velocity (gas) [m/s]
d_i	Measuring tube internal diameter [m]

DN		x
[mm]	[in]	[kg/m ³]
8	$\frac{3}{8}$	60
15	$\frac{1}{2}$	80
25	1	90
40	$1\frac{1}{2}$	90
50	2	90

Recommended measuring range

"Flow limit" section →  256

Operable flow range

Over 1000 : 1.



Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

External measured values


To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

 Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  239

It is recommended to read in external measured values to calculate the corrected volume flow.

Current input

The measured values are written from the automation system to the measuring device via the current input →  242.

Digital communication

The measured values are written from the automation system to the measuring device via PROFIBUS PA.

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul style="list-style-type: none"> ■ 4 to 20 mA (active) ■ 0/4 to 20 mA (passive)
Resolution	1 µA
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul style="list-style-type: none"> ■ Pressure ■ Temperature ■ Density

Status input

Maximum input values	<ul style="list-style-type: none"> ■ DC -3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Adjustable: 5 to 200 ms
Input signal level	<ul style="list-style-type: none"> ■ Low signal: DC -3 to +5 V ■ High signal: DC 12 to 30 V
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ Reset the individual totalizers separately ■ Reset all totalizers ■ Flow override



16.4 Output

Output signal


PROFIBUS PA



PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

Current output 0/4 to 20 mA


Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to: <ul style="list-style-type: none"> ■ 4 to 20 mA (active) ■ 0/4 to 20 mA (passive)  Ex-i, passive
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 µA
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation damping 0 ■ Signal asymmetry ■ Exciter current 0  The range of options increases if the measuring device has one or more application packages.

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector Can be set to: <ul style="list-style-type: none"> ■ Active ■ Passive  Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	

Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to 10 000 Hz ($f_{\max} = 12\,500$ Hz)
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation damping 0 ■ Signal asymmetry ■ Exciter current 0 <p> The range of options increases if the measuring device has one or more application packages.</p>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value <ul style="list-style-type: none"> – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer 1-3 ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> – Partially filled pipe detection – Low flow <p> The range of options increases if the measuring device has one or more application packages.</p>

Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: <ul style="list-style-type: none"> ■ NO (normally open), factory setting ■ NC (normally closed)
Maximum switching capacity (passive)	<ul style="list-style-type: none"> ■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value <ul style="list-style-type: none"> – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer 1-3 ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> – Partially filled pipe detection – Low flow <p> The range of options increases if the measuring device has one or more application packages.</p>

User configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm

Depending on the interface, failure information is displayed as follows:

PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Failure current FDE (Fault Disconnection Electronic)	0 mA

Current output 0/4 to 20 mA*4 to 20 mA*

Failure mode	Choose from: <ul style="list-style-type: none"> ■ 4 to 20 mA in accordance with NAMUR recommendation NE 43 ■ 4 to 20 mA in accordance with US ■ Min. value: 3.59 mA ■ Max. value: 22.5 mA ■ Freely definable value between: 3.59 to 22.5 mA ■ Actual value ■ Last valid value
---------------------	--

0 to 20 mA

Failure mode	Choose from: <ul style="list-style-type: none"> ■ Maximum alarm: 22 mA ■ Freely definable value between: 0 to 20.5 mA
---------------------	---

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ No pulses
Frequency output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ 0 Hz ■ Defined value (f_{\max} 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed

Relay output

Failure mode	Choose from: <ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed
---------------------	---

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Interface/protocol


- Via digital communication:
PROFIBUS PA
- Via service interface
 - CDI-RJ45 service interface
 - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web server

Plain text display	With information on cause and remedial measures
--------------------	---


Light emitting diodes (LED)

Status information	<p>Status indicated by various light emitting diodes</p> <p>The following information is displayed depending on the device version:</p> <ul style="list-style-type: none"> ■ Supply voltage active ■ Data transmission active ■ Device alarm/error has occurred <p> Diagnostic information via light emitting diodes</p>
--------------------	--

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation The outputs are galvanically isolated from one another and from earth (PE).

Protocol-specific data	Manufacturer ID	0x11
	Ident number	0x156D
	Profile version	3.02
	Device description files (GSD, DTM, DD)	<p>Information and files under:</p> <ul style="list-style-type: none"> ■ www.endress.com ■ www.profibus.org
	Supported functions	<ul style="list-style-type: none"> ■ Identification & Maintenance Simplest device identification on the part of the control system and nameplate ■ PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download ■ Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
	Configuration of the device address	<ul style="list-style-type: none"> ■ DIP switches on the I/O electronics module ■ Local display ■ Via operating tools (e.g. FieldCare)

Compatibility with earlier model	<p>If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.</p> <p>Earlier models:</p> <ul style="list-style-type: none">■ Promass 80 PROFIBUS PA<ul style="list-style-type: none">– ID No.: 1528 (hex)– Extended GSD file: EH3x1528.gsd– Standard GSD file: EH3_1528.gsd■ Promass 83 PROFIBUS PA<ul style="list-style-type: none">– ID No.: 152A (hex)– Extended GSD file: EH3x152A.gsd– Standard GSD file: EH3_152A.gsd
System integration	<p>Information regarding system integration →  94.</p> <ul style="list-style-type: none">■ Cyclic data transmission■ Block model■ Description of the modules

16.5 Power supply

Terminal assignment →  38

Device plugs available →  38

Pin assignment, device plug →  38

Supply voltage	Order code for "Power supply"	terminal voltage		Frequency range
	Option D	DC24 V	±20%	–
	Option E	AC100 to 240 V	–15...+10%	50/60 Hz
	Option I	DC24 V	±20%	–
		AC100 to 240 V	–15...+10%	50/60 Hz

Power consumption **Transmitter**
Max. 10 W (active power)


Current consumption **Transmitter**

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)



Power supply failure Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).

Electrical connection →  48

Potential equalization →  54

terminals	Spring-loaded terminals; Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm ² (24 to 12 AWG).
Cable entries	<ul style="list-style-type: none"> ■ Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) ■ Thread for cable entry: <ul style="list-style-type: none"> – NPT ½" – G ½" – M20 ■ Device plug for digital communication: M12 ■ Device plug for connecting cable: M12 <p>A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".</p>
Cable specification	→  34

16.6 Performance characteristics

Reference operating conditions	<ul style="list-style-type: none"> ■ Error limits based on ISO 11631 ■ Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi) ■ Specifications as per calibration protocol ■ Accuracy based on accredited calibration rigs that are traced to ISO 17025. <p> To obtain measured errors, use the <i>Applicator</i> sizing tool →  238</p>
Maximum measured error	o.r. = of reading; 1 g/cm ³ = 1 kg/l; T = medium temperature

Base accuracy

 Design fundamentals →  252

Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.50 % o.r. (tantalum)

Density (liquids)

Under reference operating conditions [g/cm ³]	Standard density calibration ¹⁾ [g/cm ³]	Wide-range Density specification ^{2) 3)} [g/cm ³]
±0.0005	±0.02	±0.002

1) Valid over the entire temperature and density range

2) Valid range for special density calibration: 0 to 2 g/cm³, +10 to +80 °C (+50 to +176 °F)

3) Order code for "Application package", option EE "Special density"

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	$\frac{3}{8}$	0.40	0.015
15	$\frac{1}{2}$	0.65	0.024
25	1	1.80	0.066
40	1½	9.00	0.331
50	2	14.00	0.514

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6 500	650	325	130	65	13
25	18 000	1 800	900	360	180	36
40	45 000	4 500	2 250	900	450	90
50	70 000	7 000	3 500	1 400	700	140

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
$\frac{3}{8}$	73.50	7.350	3.675	1.470	0.735	0.147
$\frac{1}{2}$	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
1½	1 654	165.4	82.70	33.08	16.54	3.308
2	2 573	257.3	128.7	51.46	25.73	5.146

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 µA
----------	-------

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

Base repeatability

 Design fundamentals →  252

Mass flow and volume flow (liquids)

±0.05 % o.r.

Mass flow (gases)

±0.25 % o.r. (tantalum)

Density (liquids)

±0.00025 g/cm³

Temperature

±0.25 °C ± 0.0025 · T °C (±0.45 °F ± 0.0015 · (T-32) °F)

Response time The response time depends on the configuration (damping).

Influence of ambient temperature

Current output

Temperature coefficient	Max. 1 µA/°C
-------------------------	--------------

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

Influence of medium temperature

Mass flow and volume flow

o.f.s. = of full scale value

When there is a difference between the temperature for zero point adjustment and the process temperature, the additional measured error of the sensor is typically ±0.0002 % o.f.s./°C (±0.0001 % o. f.s./°F).


The effect is reduced if zero point adjustment is performed at process temperature.


Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is

±0.0001 g/cm³ /°C (±0.00005 g/cm³ /°F). Field density calibration is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range (→  249) the measured error is ±0.0001 g/cm³ /°C (±0.00005 g/cm³ /°F)

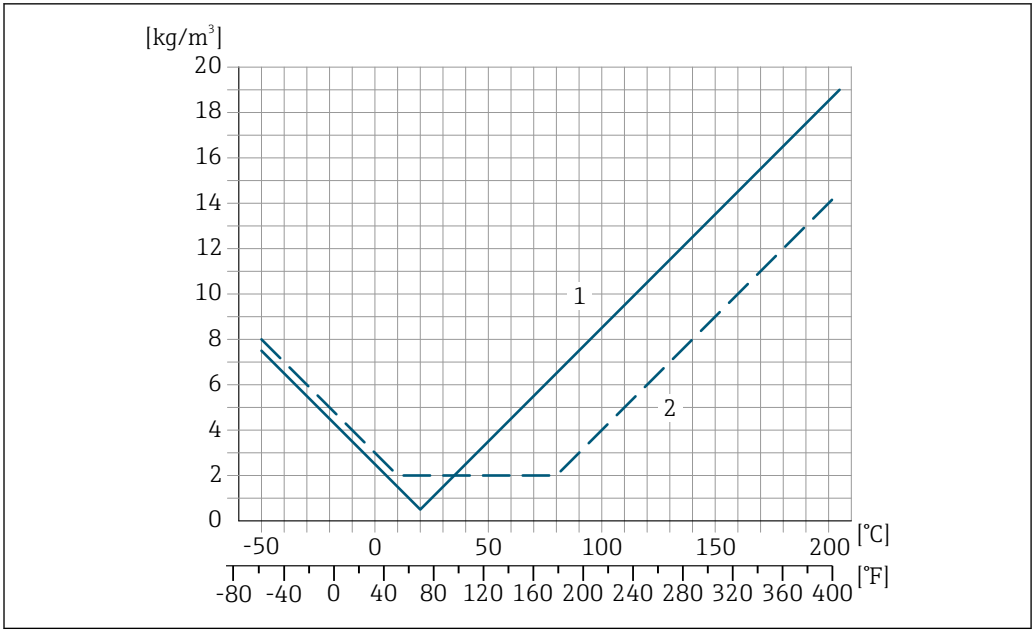


1 Field density calibration, for example at +20 °C (+68 °F)
2 Special density calibration

Temperature
 $\pm 0.005 \cdot T \text{ }^{\circ}\text{C}$ ($\pm 0.005 \cdot (T - 32) \text{ }^{\circ}\text{F}$)

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

-  It is possible to compensate for the effect by:
- Reading in the current pressure measured value via the current input.
 - Specifying a fixed value for the pressure in the device parameters.

 Operating Instructions.

DN		Promass H zirconium 702/R 60702		Promass H tantalum 2.5W	
[mm]	[in]	[% o.r./bar]	[% o.r./psi]	[% o.r./bar]	[% o.r./psi]
8	3/8	-0.017	-0.0012	-0.007	-0.0005
15	1/2	-0.021	-0.0014	-0.005	-0.0003
25	1	-0.013	-0.0009	-0.015	-0.0010
40	1 1/2	-0.018	-0.0012	-0.012	-0.0008
50	2	-0.015	-0.0010	-0.011	-0.0008

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.
MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021335</small>	$\pm \text{BaseRepeat}$ <small>A0021340</small>
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021336</small>	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021337</small>

Example for maximum measured error

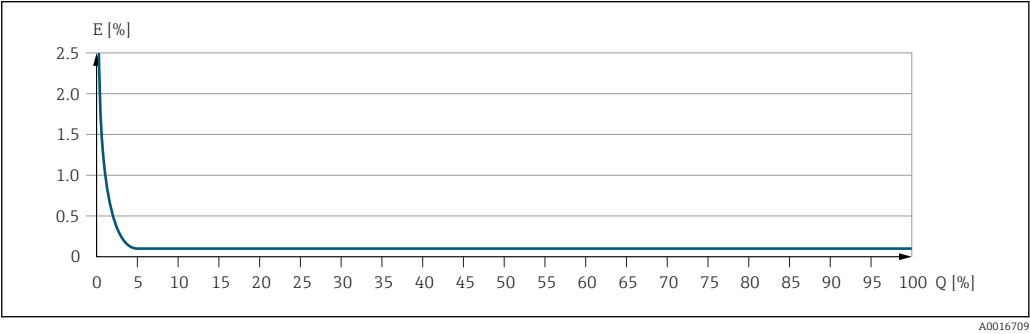


E Maximum measured error in % o.r. (example)
Q Flow rate in % of maximum full scale value

16.7 Installation

"Mounting requirements" → 22

16.8 Environment


Ambient temperature range	→ 25
Temperature tables	
Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.	
For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.	
Storage temperature	−50 to +80 °C (−58 to +176 °F)
Climate class	DIN EN 60068-2-38 (test Z/AD)
Endress+Hauser	

Degree of protection	<p>Transmitter</p> <ul style="list-style-type: none">■ As standard: IP66/67, type 4X enclosure■ When housing is open: IP20, type 1 enclosure■ Display module: IP20, type 1 enclosure <p>Sensor</p> <ul style="list-style-type: none">■ As standard: IP66/67, type 4X enclosure■ With the order code for "Sensor options", option CM: IP69 can also be ordered <p>External WLAN antenna</p> <p>IP67</p>
Vibration resistance	<ul style="list-style-type: none">■ Oscillation, sinusoidal, following IEC 60068-2-6 2 to 8.4 Hz, 3.5 mm peak■ Oscillation, broadband noise following IEC 60068-2-64<ul style="list-style-type: none">– 10 to 200 Hz, 0.003 g²/Hz– 200 to 2 000 Hz, 0.001 g²/Hz– Total: 1.54 g rms
Shock resistance	Shock, half-sine according to IEC 60068-2-27 6 ms 50 g
Shock resistance	Shock due to rough handling following IEC 60068-2-31
Mechanical load	Never use the transmitter housing as a ladder or climbing aid.
Electromagnetic compatibility (EMC)	<p>As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)</p> <p> Details are provided in the Declaration of Conformity.</p>

16.9 Process



Medium temperature range	-50 to +205 °C (-58 to +401 °F) for zirconium 702/R 60702	Order code for "Measuring tube mat., wetted surface", option DA
	-50 to +150 °C (-58 to +302 °F) for tantalum 2.5 W	Order code for "Measuring tube mat., wetted surface", option EA

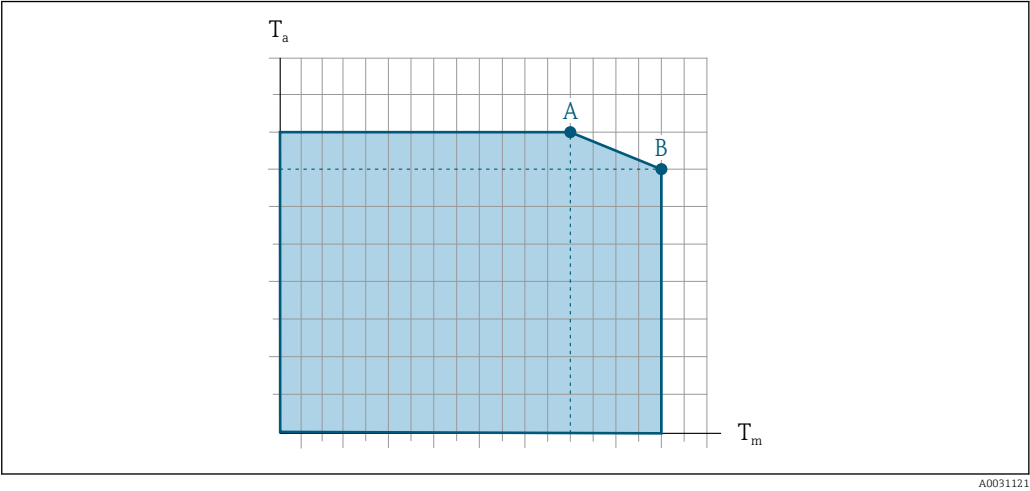Dependency of ambient temperature on medium temperature



41 Exemplary representation, values in the table below.


- T_a Ambient temperature
 T_m Medium temperature
A Maximum permitted medium temperature T_m at $T_{a\max} = 60\text{ °C}$ (140 °F); higher medium temperatures T_m require a reduced ambient temperature T_a
B Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor


 Values for devices used in the hazardous area:
Separate Ex documentation (XA) for the device →  268.

Version ¹⁾	Not insulated				Insulated			
	A		B		A		B	
	T_a	T_m	T_a	T_m	T_a	T_m	T_a	T_m
Tantalum (order code for "Measuring tube mat.", option EA)	60 °C (140 °F)	150 °C (302 °F)	–	–	60 °C (140 °F)	150 °C (302 °F)	–	–
Zirconium 702 (order code for "Measuring tube mat.", option DA)	60 °C (140 °F)	205 °C (401 °F)	–	–	60 °C (140 °F)	150 °C (302 °F)	55 °C (131 °F)	205 °C (401 °F)


1) The values apply for Promass H 500 - digital and Promass H 500.

Density 0 to 5 000 kg/m³ (0 to 312 lb/cf)

Pressure-temperature ratings  An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Sensor housing The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.
 If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

 Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge. Maximum pressure: 5 bar (72.5 psi).


Sensor housing nominal pressure rating and burst pressure

The following sensor housing nominal pressure ratings/burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum nominal pressure is determined by the purge system itself or by the device, depending on which component has the lower nominal pressure classification.


The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").


DN		Sensor housing nominal pressure (designed with a safety factor ≥ 4)		Sensor housing burst pressure	
[mm]	[in]	[bar]	[psi]	[bar]	[psi]
8	3⁄8	25	362	170	2 465
15	1⁄2	25	362	160	2 320
25	1	25	362	130	1 885
40	1½	16	232	85	1 232
50	2	16	232	85	1 232



 For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Flow limit



Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

 For an overview of the full scale values for the measuring range, see the "Measuring range" section →  241

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
 - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
 - The maximum mass flow depends on the density of the gas: formula →  241

 To calculate the flow limit, use the *Applicator* sizing tool →  238

Pressure loss

 To calculate the pressure loss, use the *Applicator* sizing tool →  238

System pressure →  25

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.

Transmitter

- Proline 500 – digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 – digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

Sensor

- Sensor with aluminum connection housing version: see the information in the following table
- Cast connection housing version, stainless: +3.7 kg (+8.2 lbs)

Weight in SI units

DN [mm]	Weight [kg]
8	10
15	11
25	17
40	34
50	67

Weight in US units

DN [in]	Weight [lbs]
3/8	22
1/2	24
1	37
1 1/2	75
2	148

Materials

Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **L** "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

Window material

Order code for "Transmitter housing":


- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option **L** "Cast, stainless": glass

Sensor connection housing

Order code for "Sensor connection housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":
 - Stainless steel 1.4301 (304)
 - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
 - Stainless steel 1.4301 (304)
 - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **L** "Cast, stainless": 1.4409 (CF3M) similar to 316L

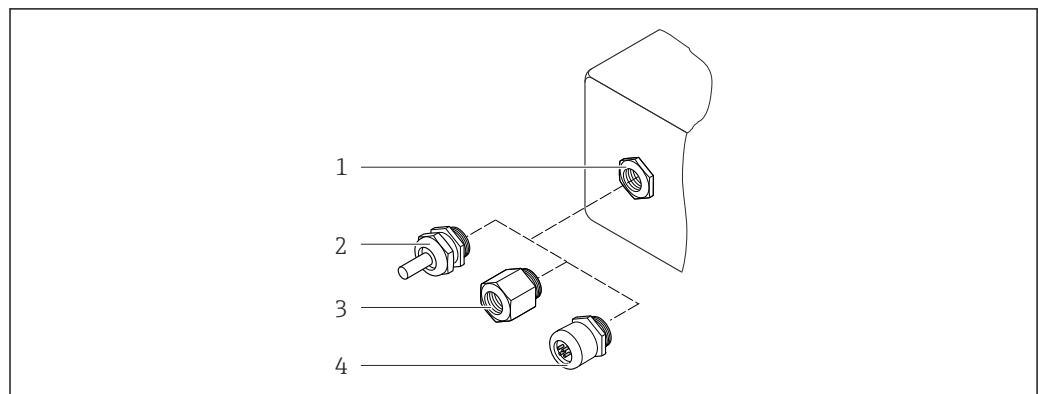


Cable entries/cable glands



A0028352

42 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"
- 4 Device plugs

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
<ul style="list-style-type: none"> Adapter for cable entry with internal thread G ½" Adapter for cable entry with internal thread NPT ½" <p> Only available for certain device versions:</p> <ul style="list-style-type: none"> Order code for "Transmitter housing": <ul style="list-style-type: none"> Option A "Aluminum, coated" Option D "Polycarbonate" Order code for "Sensor connection housing": <ul style="list-style-type: none"> Proline 500 – digital: <ul style="list-style-type: none"> Option A "Aluminum coated" Option B "Stainless" Option L "Cast, stainless" Proline 500: <ul style="list-style-type: none"> Option B "Stainless" Option L "Cast, stainless" 	Nickel-plated brass
<ul style="list-style-type: none"> Adapter for cable entry with internal thread G ½" Adapter for cable entry with internal thread NPT ½" <p> Only available for certain device versions:</p> <ul style="list-style-type: none"> Order code for "Transmitter housing": <ul style="list-style-type: none"> Option L "Cast, stainless" Order code for "Sensor connection housing": <ul style="list-style-type: none"> Option L "Cast, stainless" 	Stainless steel, 1.4404 (316L)
Adapter for device plug <p> Device plug for digital communication: Only available for certain device versions .</p>	Stainless steel, 1.4404 (316L)

Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none"> Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass


Connecting cable

Connecting cable for sensor - Proline 500 – digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

 UV rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Sensor housing



- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

- Zirconium 702/R 60702
- Tantalum 2.5W

Process connections

- Stainless steel, 1.4301 (304); wetted parts: zirconium 702, tantalum
- Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5 / according to JIS B2220

 Available process connections →  260

Seals

Welded process connections without internal seals

Accessories

Protective cover



Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections

Fixed flange connections:
– EN 1092-1 (DIN 2501) flange
– EN 1092-1 (DIN 2512N) flange
– ASME B16.5 flange
– JIS B2220 flange

 Process connection materials →  260

Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered.
Not polished

16.11 Operability

Languages

Can be operated in the following languages:

- Via local operation
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via Web browser
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

Local operation


Via display module

Equipment:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"



Information about WLAN interface → 84

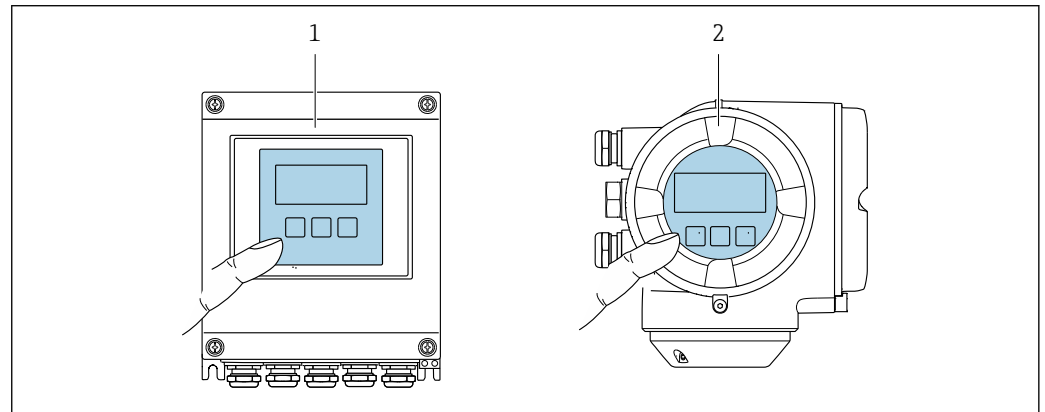

A0028232

43 Operation with touch control

1 Proline 500 – digital

2 Proline 500

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to $+60$ °C (-4 to $+140$ °F)
The readability of the display may be impaired at temperatures outside the temperature range.

Operating elements

- External operation via touch control (3 optical keys) without opening the housing: , ,
- Operating elements also accessible in the various zones of the hazardous area

Remote operation




→ 83

Service interface

→ 83

Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul style="list-style-type: none"> ■ CDI-RJ45 service interface ■ WLAN interface 	Special Documentation for device →  268
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul style="list-style-type: none"> ■ CDI-RJ45 service interface ■ WLAN interface ■ Fieldbus protocol 	→  238
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul style="list-style-type: none"> ■ CDI-RJ45 service interface ■ WLAN interface ■ Fieldbus protocol 	→  238

 Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) by Rockwell Automation → www.rockwellautomation.com
- Process Device Manager (PDM) by Siemens → www.siemens.com
- Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
- FieldMate by Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com → Downloads


Web server



Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the **Extended HistoROM** application package →  266)

 Web server special documentation →  268

**HistoROM
data management**

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	<ul style="list-style-type: none"> Event logbook such as diagnostic events for example Parameter data record backup Device firmware package Driver for system integration for exporting via Web server, e.g.: GSD for PROFIBUS PA 	<ul style="list-style-type: none"> Measured value logging ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Peakhold indicator (min/max values) Totalizer values 	<ul style="list-style-type: none"> Sensor data: nominal diameter etc. Serial number Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup**Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function
Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transfer**Manual**

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.: GSD for PROFIBUS PA

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server


Data logging

Manual



If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1 000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

16.12 Certificates and approvals

 Currently available certificates and approvals can be called up via the product configurator.

CE mark	<p>The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>
C-Tick symbol	<p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p>
Ex approval	<p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>
Pharmaceutical compatibility	<ul style="list-style-type: none">■ FDA■ USP Class VI■ TSE/BSE Certificate of Suitability
Certification PROFIBUS	<p>PROFIBUS interface</p> <p>The measuring device is certified and registered by the PNO (PROFIBUS User Organization Organization). The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none">■ Certified in accordance with PROFIBUS PA Profile 3.02■ The device can also be operated with certified devices of other manufacturers (interoperability)

Pressure Equipment Directive	<ul style="list-style-type: none"> ■ With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EU. ■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Article 4 paragraph 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU.
Radio approval	<p>The measuring device has radio approval.</p> <p> For detailed information on the radio approval, see the Special Documentation →  268</p>
Additional certification	<p>CRN approval</p> <p>Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.</p> <p>Tests and certificates</p> <ul style="list-style-type: none"> ■ Pressure test, internal procedure, inspection certificate ■ EN10204-3.1 material certificate, wetted parts and sensor housing ■ PMI test (XRF), internal procedure, wetted parts, test report ■ EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report
Other standards and guidelines	<ul style="list-style-type: none"> ■ EN 60529 Degrees of protection provided by enclosures (IP code) ■ IEC/EN 60068-2-6 Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal). ■ IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices. ■ EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements ■ IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). ■ NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment ■ NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors ■ NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal. ■ NAMUR NE 53 Software of field devices and signal-processing devices with digital electronics ■ NAMUR NE 80 The application of the pressure equipment directive to process control devices ■ NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices

- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- NAMUR NE 132
Coriolis mass meter

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages:
Special Documentation for the device → 268

Diagnostics functions

Package	Description
Extended HistoROM	<p>Comprises extended functions concerning the event log and the activation of the measured value memory.</p> <p>Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> ■ Memory capacity for up to 1000 measured values is activated. ■ 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. ■ Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	<p>Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> ■ Functional testing in the installed state without interrupting the process. ■ Traceable verification results on request, including a report. ■ Simple testing process via local operation or other operating interfaces. ■ Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. ■ Extension of calibration intervals according to operator's risk assessment. <p>Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> ■ Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. ■ Schedule servicing in time. ■ Monitor the process or product quality, e.g. gas pockets.


Concentration	Package	Description
	Concentration	Calculation and outputting of fluid concentrations The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package: <ul style="list-style-type: none"> Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.) Common or user-defined units ("Brix", "Plato", % mass, % volume, mol/l etc.) for standard applications. Concentration calculation from user-defined tables.

Special density	Package	Description
	Special density	Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system. The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

16.14 Accessories

 Overview of accessories available for order →  237

16.15 Supplementary documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- W@M Device Viewer (www.endress.com/deviceviewer): Enter the serial number from nameplate
 - Endress+Hauser Operations App: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Standard documentation **Brief Operating Instructions**

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass H	KA01283D

Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 500 – digital	KA01392D
Proline 500	KA01391D

Technical Information

Measuring device	Documentation code
Promass H 500	TI01283D

Description of Device Parameters

Measuring device	Documentation code
Promass 500	GP01061D

Device-dependent
additional documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code Measuring device
ATEX/IECEX Ex i	XA01473D
ATEX/IECEX Ex ec	XA01474D
cCSAus IS	XA01475D
cCSAus Ex i	XA01509D
cCSAus Ex nA	XA01510D
INMETRO Ex i	XA01476D
INMETRO Ex ec	XA01477D
NEPSI Ex i	XA01478D
NEPSI Ex nA	XA01479D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD01668D
Heartbeat Technology	SD01705D
Concentration measurement	SD01711D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	<ul style="list-style-type: none"> Access the overview of all the available spare part sets via <i>W@MDevice Viewer</i> → 235 Accessories available for order with Installation Instructions → 237

Index

A

About this document	6
Access authorization to parameters	
Read access	75
Write access	75
Access code	75
Incorrect input	75
Accuracy	249
Adapting the diagnostic behavior	172
Additional certification	265
Ambient temperature	
Influence	251
Analog Input module	95
Analog Output module	98
Application	240
Application packages	266
Applicator	241
Approvals	264

C

C-Tick symbol	264
Cable entries	
Technical data	249
Cable entry	
Degree of protection	61
CE mark	10, 264
Certificates	264
Certification PROFIBUS	264
Check	
Installation	33
Checklist	
Post-connection check	61
Post-installation check	33
Cleaning	
Exterior cleaning	234
Climate class	253
Commissioning	101
Advanced settings	131
Configuring the measuring device	102
Compatibility with earlier model	89
Connecting cable	34
Connecting the connecting cable	
Proline 500 – digital transmitter	45
Proline 500 terminal assignment	48
Proline 500 transmitter	51
Sensor connection housing, Proline 500	48
Sensor connection housing, Proline 500 - digital ..	41
Terminal assignment of Proline 500 - digital	41
Connecting the measuring device	
Proline 500	48
Proline 500 – digital	41
Connecting the signal cable/supply voltage cable	
Proline 500 – digital transmitter	46
Proline 500 transmitter	52
Connection	
see Electrical connection	

Connection preparations	40
Connection tools	34
Context menu	
Calling up	71
Closing	71
Explanation	71
Current consumption	248
Cyclic data transmission	94

D

Declaration of Conformity	10
Define access code	146, 147
Degree of protection	61, 254
Density	255
Design fundamentals	
Maximum measured error	252
Repeatability	252
Designated use	9
Device components	14
Device description files	89
Device documentation	
Supplementary documentation	8
Device locking, status	150
Device master file	
GSD	89
Device name	
Sensor	19
Transmitter	17
Device repair	235
Device type ID	89
DeviceCare	88
Device description file	89
Diagnostic behavior	
Explanation	168
Symbols	168
Diagnostic information	
Design, description	168, 171
DeviceCare	170
FieldCare	170
Light emitting diodes	164
Local display	167
Overview	175
Remedial measures	175
Web browser	169
Diagnostic list	227
Diagnostic message	167
Diagnostics	
Symbols	167
DIP switch	
see Write protection switch	
Direct access	73
Direct access code	67
Disabling write protection	146
Discrete Input module	98
Discrete Output module	99

Display	
see Onsite display	
Display area	
For operational display	66
In the navigation view	68
Display values	
For locking status	150
Disposal	236
Document	
Function	6
Symbols used	6
Document function	6
Down pipe	23
E	
Editing view	69
Input screen	70
Using operating elements	69, 70
Electrical connection	
Degree of protection	61
Measuring device	34
Operating tools	
Via PROFIBUS PA network	83
Via service interface (CDI-RJ45)	83
Via WLAN interface	84
Web server	83
WLAN interface	84
Electromagnetic compatibility	254
Electronics module	14
EMPTY_MODULE module	100
Enabling write protection	146
Enabling/disabling the keypad lock	76
Endress+Hauser services	
Maintenance	234
Repair	235
Environment	
Mechanical load	254
Shock resistance	254
Storage temperature	253
Vibration resistance	254
Error messages	
see Diagnostic messages	
Event list	228
Event logbook	228
Ex approval	264
Extended order code	
Sensor	19
Transmitter	17
Exterior cleaning	234
F	
FDA	264
Field of application	
Residual risks	10
FieldCare	86
Device description file	89
Establishing a connection	87
Function	86
User interface	87

Filtering the event logbook	229
Firmware	
Release date	89
Version	89
Firmware history	233
Flow direction	23, 29
Flow limit	256
Function check	101
Function scope	
SIMATIC PDM	88
Functions	
see Parameter	
G	
Galvanic isolation	247
H	
Hardware write protection	147
Help text	
Calling up	74
Closing	74
Explanation	74
HistoROM	140
I	
Identifying the measuring device	16
Incoming acceptance	16
Influence	
Ambient temperature	251
Medium pressure	252
Medium temperature	251
Inlet runs	24
Input	241
Inspection	
Received goods	16
Inspection check	
Connection	61
Installation	22
Installation conditions	
Down pipe	23
Inlet and outlet runs	24
Installation dimensions	24
Mounting location	22
Orientation	23
Sensor heating	26
System pressure	25
Thermal insulation	25
Vibrations	27
Installation dimensions	24
L	
Languages, operation options	260
Line recorder	157
Local display	261
Navigation view	67
see Diagnostic message	
see In alarm condition	
see Operational display	
Low flow cut off	247

M

Main electronics module	14
Maintenance tasks	234
Managing the device configuration	140
Manufacturer ID	89
Manufacturing date	17, 19
Materials	257
Maximum measured error	249
Measured values	
see Process variables	
Measuring and test equipment	234
Measuring device	
Configuration	102
Conversion	235
Disposal	236
Mounting the sensor	29
Preparing for electrical connection	40
Preparing for mounting	28
Removing	236
Repairs	235
Structure	14
Switch-on	101
Measuring principle	240
Measuring range	
For gases	241
For liquids	241
Measuring range, recommended	256
Measuring system	240
Mechanical load	254
Medium pressure	
Influence	252
Medium temperature	
Influence	251
Menu	
Diagnostics	227
Setup	102, 103
Menus	
For measuring device configuration	102
For specific settings	131
Module	
Analog input	95
Analog output	98
Discrete Input	98
Discrete Output	99
EMPTY_MODULE	100
Totalizer	
SETTOT_MODETOT_TOTAL	97
SETTOT_TOTAL	97
TOTAL	96
Mounting dimensions	
see Installation dimensions	
Mounting location	22
Mounting preparations	28
Mounting tools	28

N

Nameplate	
Sensor	19
Transmitter	17

Navigation path (navigation view)	67
Navigation view	
In the submenu	67
In the wizard	67
Numeric editor	69

O

Onsite display	
Numeric editor	69
Text editor	69
Operable flow range	242
Operating elements	71, 168
Operating keys	
see Operating elements	
Operating menu	
Menus, submenus	63
Structure	63
Submenus and user roles	64
Operating philosophy	64
Operation	150
Operation options	62
Operational display	65
Operational safety	10
Order code	17, 19
Orientation (vertical, horizontal)	23
Outlet runs	24
Output	243
Output signal	243

P

Packaging disposal	22
Parameter	
Changing	74
Entering values or text	74
Parameter settings	
Administration (Submenu)	143
Analog inputs (Submenu)	110
Calculated values (Submenu)	132
Communication (Submenu)	108
Configuration backup (Submenu)	140
Current input	112
Current input (Wizard)	112
Current input 1 to n (Submenu)	153
Current output	114
Current output (Wizard)	114
Data logging (Submenu)	157
Define access code (Wizard)	142
Device information (Submenu)	231
Diagnostics (Menu)	227
Display (Submenu)	136
Display (Wizard)	126
I/O configuration	111
I/O configuration (Submenu)	111
Low flow cut off (Wizard)	129
Measured variables (Submenu)	151
Partially filled pipe detection (Wizard)	130
Pulse/frequency/switch output	117
Pulse/frequency/switch output (Wizard)	117, 118, 122

Pulse/frequency/switch output 1 to n (Submenu)	155
Relay output	124
Relay output 1 to n (Submenu)	156
Relay output 1 to n (Wizard)	124
Reset access code (Submenu)	142
Select medium (Wizard)	107
Sensor adjustment (Submenu)	133
Setup (Menu)	103
Simulation (Submenu)	143
Status input	113
Status input (Submenu)	113
Status input 1 to n (Submenu)	154
System units (Submenu)	104
Totalizer 1 to n (Submenu)	134, 152
Totalizer handling (Submenu)	156
Value current output 1 to n (Submenu)	155
Web server (Submenu)	82
WLAN Settings (Submenu)	139
Zero point adjustment (Submenu)	133
Performance characteristics	249
Pharmaceutical compatibility	264
Post-connection check (checklist)	61
Post-installation check	101
Post-installation check (checklist)	33
Potential equalization	54
Power consumption	248
Power supply failure	248
Pressure Equipment Directive	265
Pressure loss	256
Pressure-temperature ratings	255
Process connections	260
Process variables	
Calculated	241
Measured	241
Product safety	10
Profile version	89
Proline 500 – digital transmitter	
Connecting the signal cable/supply voltage cable	46
Proline 500 connecting cable terminal assignment	
Sensor connection housing	48
Proline 500 transmitter	
Connecting the signal cable/supply voltage cable	52
Protecting parameter settings	146
R	
Radio approval	265
Read access	75
Reading measured values	150
Recalibration	234
Reference operating conditions	249
Registered trademarks	8
Remedial measures	
Calling up	169
Closing	169
Remote operation	261
Repair of a device	235
Repairs	235
Notes	235
Repeatability	250

Replacement	
Device components	235
Requirements for personnel	9
Response time	251
Return	235
S	
Safety	9
Sensor	
Mounting	29
Sensor heating	26
Sensor housing	255
Serial number	17, 19
Setting the operating language	101
Settings	
Adapting the measuring device to the process	
conditions	156
Administration	141
Advanced display configurations	136
Analog input	110
Communication interface	108
Current input	112
Current output	114
Device reset	230
Device tag	103
I/O configuration	111
Local display	126
Low flow	129
Managing the device configuration	140
Medium	107
Operating language	101
Partial filled pipe detection	130
Pulse output	117
Pulse/frequency/switch output	117, 118
Relay output	124
Resetting the totalizer	156
Sensor adjustment	133
Simulation	143
Status input	113
Switch output	122
System units	104
Totalizer	134
Totalizer reset	156
WLAN	139
SETTOT_MODETOT_TOTAL module	97
SETTOT_TOTAL module	97
Shock resistance	254
Showing data logging	157
Signal on alarm	245
SIMATIC PDM	88
Function	88
Spare part	235
Spare parts	235
Special connection instructions	55
Standards and guidelines	265
Status area	
For operational display	66
In the navigation view	67
Status signals	167, 170

- Storage concept 263
- Storage conditions 21
- Storage temperature 21
- Storage temperature range 253
- Structure
 - Measuring device 14
 - Operating menu 63
- Submenu
 - Administration 141, 143
 - Advanced setup 131
 - Analog inputs 110
 - Calculated values 132
 - Communication 101, 108
 - Configuration backup 140
 - Current input 1 to n 153
 - Data logging 157
 - Device information 231
 - Display 136
 - Event list 228
 - I/O configuration 111
 - Input values 153
 - Measured values 150
 - Measured variables 151
 - Output values 154
 - Overview 64
 - Process variables 132
 - Pulse/frequency/switch output 1 to n 155
 - Relay output 1 to n 156
 - Reset access code 142
 - Sensor adjustment 133
 - Simulation 143
 - Status input 113
 - Status input 1 to n 154
 - System units 104
 - Totalizer 1 to n 134, 152
 - Totalizer handling 156
 - Value current output 1 to n 155
 - Web server 82
 - WLAN Settings 139
 - Zero point adjustment 133
- Supply voltage 248
- Surface roughness 260
- Switch output 245
- Symbols
 - Controlling data entries 70
 - For communication 66
 - For diagnostic behavior 66
 - For locking 66
 - For measured variable 66
 - For measurement channel number 66
 - For menus 68
 - For parameters 68
 - For status signal 66
 - For submenu 68
 - For wizard 68
 - In the status area of the local display 66
 - Input screen 70
 - Operating elements 69
- System design
 - Measuring system 240
 - see Measuring device design
- System integration 89
- System pressure 25
- T**
 - Technical data, overview 240
 - Temperature range
 - Ambient temperature range for display 261
 - Medium temperature 254
 - Storage temperature 21
 - Terminal assignment 38
 - Terminal assignment of connecting cable for Proline 500- digital
 - Sensor connection housing 41
 - terminals 249
 - Tests and certificates 265
 - Text editor 69
 - Thermal insulation 25
 - Tool tip
 - see Help text
 - Tools
 - Electrical connection 34
 - For mounting 28
 - Transport 21
 - TOTAL module 96
 - Totalizer
 - Assign process variable 152
 - Configuration 134
 - Operation 156
 - Reset 156
 - Transmitter
 - Turning the display module 33
 - Turning the housing 32
 - Transporting the measuring device 21
 - Troubleshooting
 - General 161
 - TSE/BSE Certificate of Suitability 264
 - Turning the display module 33
 - Turning the electronics housing
 - see Turning the transmitter housing
 - Turning the transmitter housing 32
- U**
 - Use of the measuring device
 - Borderline cases 9
 - Incorrect use 9
 - see Designated use
 - User interface
 - Current diagnostic event 227
 - Previous diagnostic event 227
 - User roles 64
 - USP Class VI 264
- V**
 - Vibration resistance 254
 - Vibrations 27

W

W@M	234, 235
W@M Device Viewer	16, 235
Weight	
SI units	257
Transport (notes)	21
US units	257
Wizard	
Current input	112
Current output	114
Define access code	142
Display	126
Low flow cut off	129
Partially filled pipe detection	130
Pulse/frequency/switch output	117, 118, 122
Relay output 1 to n	124
Select medium	107
WLAN settings	139
Workplace safety	10
Write access	75
Write protection	
Via access code	146
Via write protection switch	147
Write protection switch	147

www.addresses.endress.com
