


Operating Instructions

Proline Cubemass C 100

PROFINET

Coriolis flowmeter

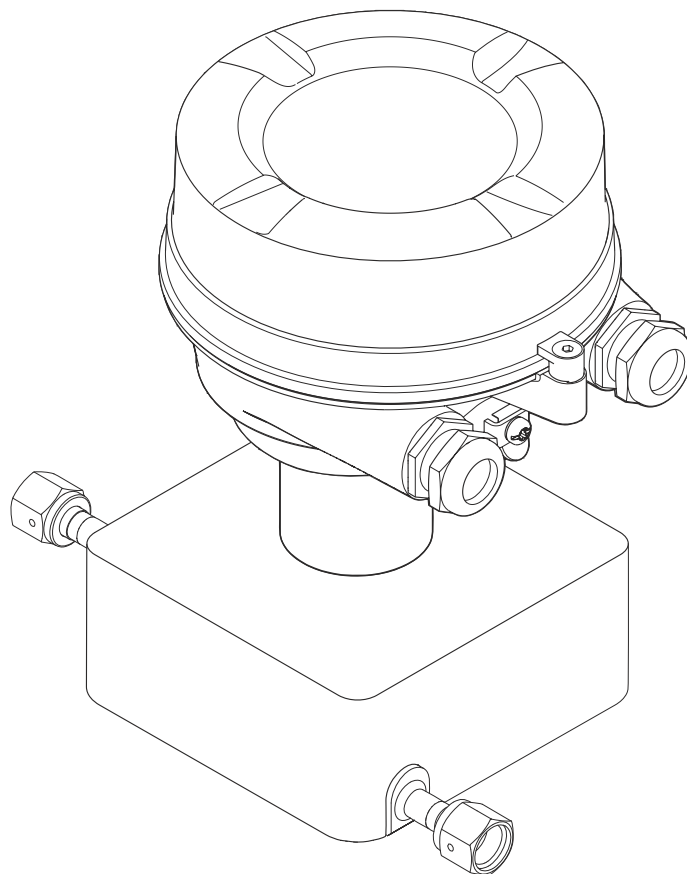

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	About this document	6	6.2	Mounting the measuring device	24
1.1	Document function	6	6.2.1	Required tools	24
1.2	Symbols	6	6.2.2	Preparing the measuring device	24
1.2.1	Safety symbols	6	6.2.3	Mounting the measuring device	24
1.2.2	Electrical symbols	6	6.2.4	Turning the display module	25
1.2.3	Tool symbols	6	6.3	Post-installation check	26
1.2.4	Symbols for certain types of information	7			
1.2.5	Symbols in graphics	7	7	Electrical connection	27
1.3	Documentation	7	7.1	Electrical safety	27
1.3.1	Standard documentation	8	7.2	Connection conditions	27
1.3.2	Supplementary device-dependent documentation	8	7.2.1	Required tools	27
1.4	Registered trademarks	8	7.2.2	Requirements for connecting cable	27
			7.2.3	Terminal assignment	28
			7.2.4	Pin assignment, device plug	29
			7.2.5	Preparing the measuring device	29
2	Safety instructions	9	7.3	Connecting the measuring device	29
2.1	Requirements for the personnel	9	7.3.1	Connecting the transmitter	30
2.2	Designated use	9	7.3.2	Ensuring potential equalization	31
2.3	Workplace safety	10	7.4	Special connection instructions	31
2.4	Operational safety	10	7.4.1	Connection examples	31
2.5	Product safety	11	7.5	Hardware settings	32
2.6	IT security	11	7.5.1	Setting the device name	32
			7.6	Ensuring the degree of protection	33
			7.7	Post-connection check	34
3	Product description	12	8	Operation options	35
3.1	Product design	12	8.1	Overview of operating options	35
3.1.1	Device version with PROFINET communication protocol	12	8.2	Structure and function of the operating menu	36
			8.2.1	Structure of the operating menu	36
4	Incoming acceptance and product identification	13	8.2.2	Operating philosophy	37
4.1	Incoming acceptance	13	8.3	Displaying the measured values via the local display (optionally available)	37
4.2	Product identification	13	8.3.1	Operational display	37
4.2.1	Transmitter nameplate	14	8.3.2	User roles and related access authorization	39
4.2.2	Sensor nameplate	15	8.4	Access to the operating menu via the Web browser	39
4.2.3	Symbols on measuring device	16	8.4.1	Function range	39
			8.4.2	Prerequisites	40
5	Storage and transport	17	8.4.3	Establishing a connection	41
5.1	Storage conditions	17	8.4.4	Logging on	42
5.2	Transporting the product	17	8.4.5	User interface	43
5.2.1	Measuring devices without lifting lugs	17	8.4.6	Disabling the Web server	44
5.2.2	Measuring devices with lifting lugs	18	8.4.7	Logging out	44
5.2.3	Transporting with a fork lift	18	8.5	Access to the operating menu via the operating tool	45
5.3	Packaging disposal	18	8.5.1	Connecting the operating tool	45
			8.5.2	FieldCare	46
6	Installation	19	8.5.3	DeviceCare	47
6.1	Installation conditions	19	9	System integration	48
6.1.1	Mounting position	19	9.1	Overview of device description files	48
6.1.2	Environmental and process requirements	21	9.1.1	Current version data for the device	48
6.1.3	Special mounting instructions	22			

9.1.2	Operating tools	48	11.5.2	Function scope of the "Reset all totalizers" parameter	85
9.2	Device master file (GSD)	49	12	Diagnostics and troubleshooting ...	86
9.2.1	File name of the device master file (GSD)	49	12.1	General troubleshooting	86
9.3	Cyclic data transmission	50	12.2	Diagnostic information via light emitting diodes	88
9.3.1	Overview of the modules	50	12.2.1	Transmitter	88
9.3.2	Description of the modules	50	12.3	Diagnostic information in the Web browser ..	89
9.3.3	Status coding	58	12.3.1	Diagnostic options	89
9.3.4	Factory setting	58	12.3.2	Calling up remedy information	90
9.3.5	Startup configuration	60	12.4	Diagnostic information in DeviceCare or FieldCare	90
10	Commissioning	61	12.4.1	Diagnostic options	90
10.1	Function check	61	12.4.2	Calling up remedy information	91
10.2	Identifying the device in the PROFINET network	61	12.5	Adapting the diagnostic information	92
10.3	Startup parameterization	61	12.5.1	Adapting the diagnostic behavior	92
10.4	Connecting via FieldCare	61	12.6	Overview of diagnostic information	94
10.5	Setting the operating language	61	12.6.1	Diagnostic of sensor	95
10.6	Configuring the measuring device	61	12.6.2	Diagnostic of electronic	98
10.6.1	Defining the tag name	62	12.6.3	Diagnostic of configuration	104
10.6.2	Setting the system units	62	12.6.4	Diagnostic of process	108
10.6.3	Displaying the communication interface	64	12.7	Pending diagnostic events	115
10.6.4	Selecting and setting the medium ...	66	12.8	Diagnostic list	116
10.6.5	Configuring the low flow cut off	68	12.9	Event logbook	116
10.6.6	Configuring the partial filled pipe detection	69	12.9.1	Reading out the event logbook	116
10.7	Advanced settings	70	12.9.2	Filtering the event logbook	117
10.7.1	Using the parameter to enter the access code	70	12.9.3	Overview of information events	117
10.7.2	Calculated values	70	12.10	Resetting the measuring device	118
10.7.3	Carrying out a sensor adjustment	72	12.10.1	Function scope of the "Device reset" parameter	118
10.7.4	Configuring the totalizer	72	12.11	Device information	119
10.7.5	Carrying out additional display configurations	74	12.12	Firmware history	120
10.7.6	Using parameters for device administration	76	13	Maintenance	121
10.8	Simulation	77	13.1	Maintenance tasks	121
10.9	Protecting settings from unauthorized access	78	13.1.1	Exterior cleaning	121
10.9.1	Write protection via access code	78	13.1.2	Interior cleaning	121
10.9.2	Write protection via write protection switch	79	13.2	Measuring and test equipment	121
10.9.3	Write protection via startup parameterization	80	13.3	Endress+Hauser services	121
11	Operation	81	14	Repair	122
11.1	Reading the device locking status	81	14.1	General notes	122
11.2	Adjusting the operating language	81	14.1.1	Repair and conversion concept	122
11.3	Reading measured values	81	14.1.2	Notes for repair and conversion	122
11.3.1	"Measured variables" submenu	81	14.2	Spare parts	122
11.3.2	"Totalizer" submenu	83	14.3	Endress+Hauser services	122
11.4	Adapting the measuring device to the process conditions	84	14.4	Return	122
11.5	Performing a totalizer reset	84	14.5	Disposal	123
11.5.1	Function scope of the "Control Totalizer" parameter	85	14.5.1	Removing the measuring device	123
			14.5.2	Disposing of the measuring device ..	123
			15	Accessories	124
			15.1	Device-specific accessories	124
			15.2	Communication-specific accessories	124
			15.3	Service-specific accessories	125

15.4 System components 125

16 Technical data 126

16.1 Application 126

16.2 Function and system design 126

16.3 Input 127

16.4 Output 128

16.5 Power supply 132

16.6 Performance characteristics 133

16.7 Installation 137

16.8 Environment 137

16.9 Process 138

16.10 Mechanical construction 140

16.11 Human interface 142

16.12 Certificates and approvals 144

16.13 Application packages 145

16.14 Accessories 146

16.15 Supplementary documentation 146

Index 148

1 About this document

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.






CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.



NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.













1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections. The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> ▪ Inner ground terminal: Connects the protective earth to the mains supply. ▪ Outer ground terminal: Connects the device to the plant grounding system.



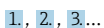

1.2.3 Tool symbols

Symbol	Meaning
	Allen key
	Open-ended wrench


1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.
	Help in the event of a problem.
	Visual inspection.



1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area
	Safe area (non-hazardous area)
	Flow direction

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

 Detailed list of the individual documents along with the documentation code
→  146

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device. <ul style="list-style-type: none"> ■ Incoming acceptance and product identification ■ Storage and transport ■ Installation
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value). <ul style="list-style-type: none"> ■ Product description ■ Installation ■ Electrical connection ■ Operation options ■ System integration ■ Commissioning ■ Diagnostic information
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFINET®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

2 Safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use


Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation →  7.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

NOTICE**Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks**⚠ WARNING**

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

⚠ WARNING**Danger of housing breaking due to measuring tube breakage!**

If a measuring tube ruptures, the pressure inside the sensor housing will rise according to the operating process pressure.

- ▶ Use a rupture disk.

⚠ WARNING**Danger from medium escaping!**

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

- ▶ Take precautions to prevent injury and material damage if the rupture disk is actuated.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

3 Product description


The device consists of a transmitter and a sensor.

The device is available as a compact version:


The transmitter and sensor form a mechanical unit.

3.1 Product design

3.1.1 Device version with PROFINET communication protocol

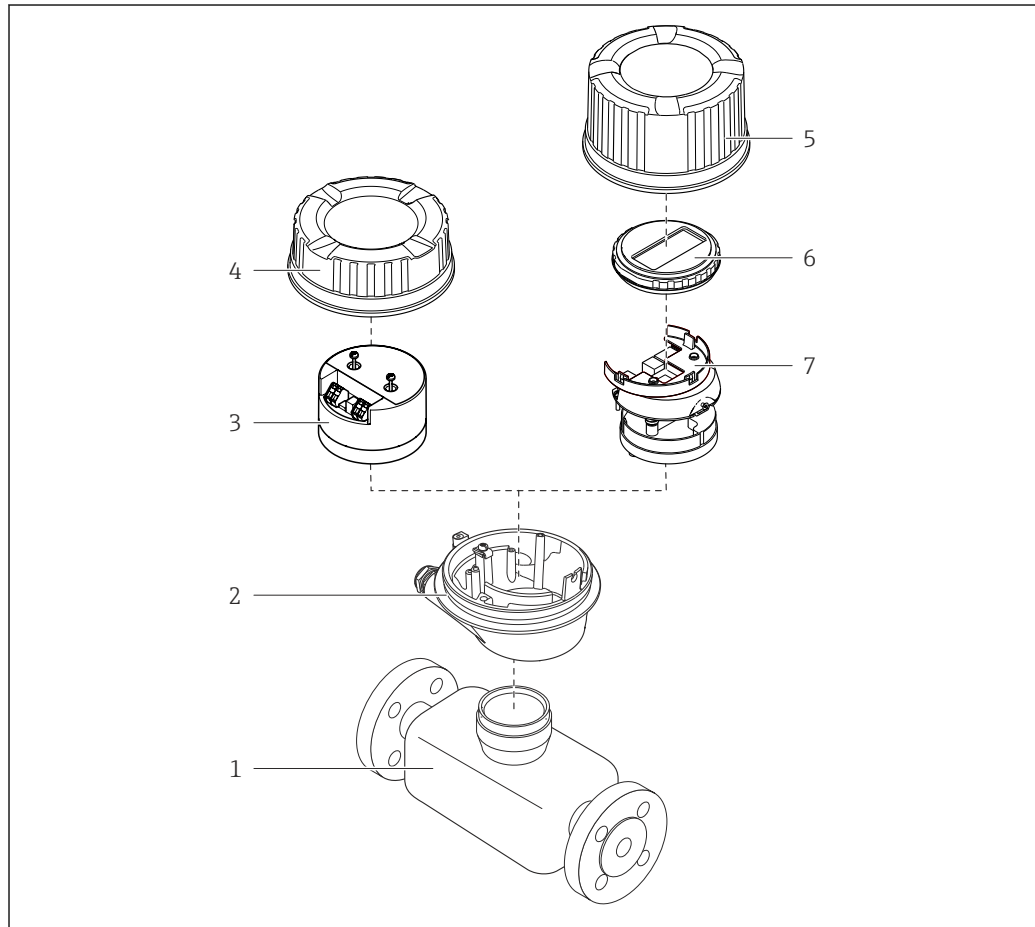



A0023153

 1 Important components of a measuring device




- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover
- 5 Transmitter housing cover (version for optional local display)
- 6 Local display (optional)
- 7 Main electronics module (with bracket for optional local display)

4 Incoming acceptance and product identification



4.1 Incoming acceptance

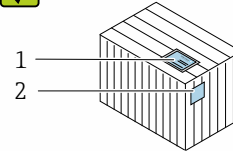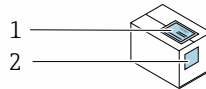

Are the order codes on the delivery note (1) and the product sticker (2) identical?

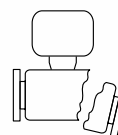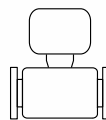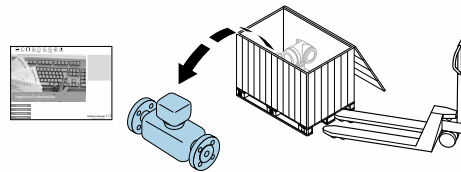

Are the goods undamaged?

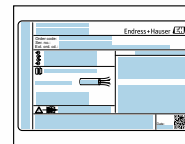

Do the nameplate data match the ordering information on the delivery note?



Is the envelope present with accompanying documents?



- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section → 14.

4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in the *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the device is displayed.
- Enter the serial number from nameplates in the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate using the *Endress+Hauser Operations App*: All information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" → 8 and "Supplementary device-dependent documentation" → 8 sections
- The *W@M Device Viewer*: enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

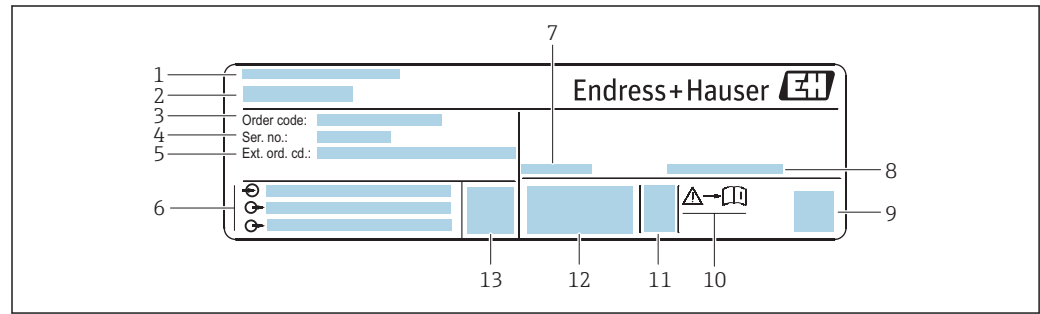


A0030222


2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature (T_a)
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation → 147
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

4.2.2 Sensor nameplate

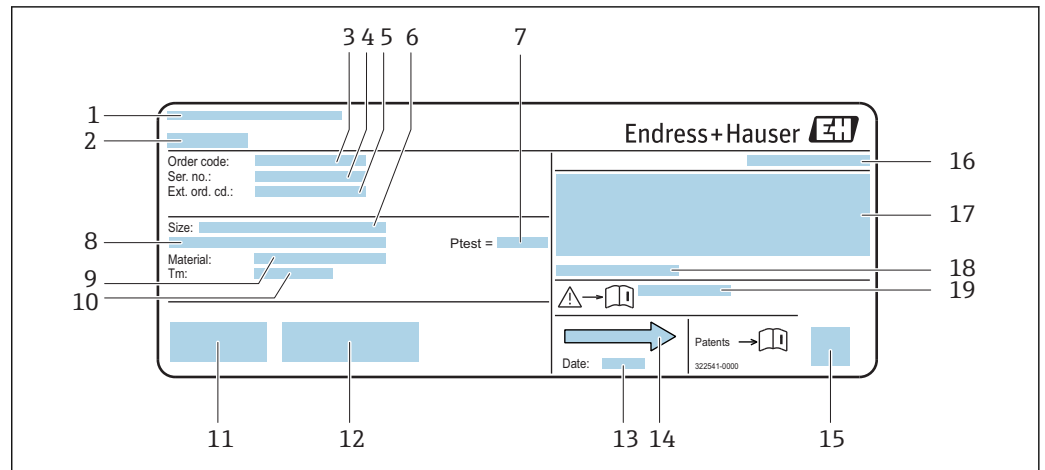

A0013907

 3 Example of a sensor nameplate

- 1 Manufacturing location
- 2 Name of the sensor
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Nominal diameter of sensor
- 7 Test pressure of the sensor
- 8 Flange nominal diameter/nominal pressure
- 9 Material of measuring tube and manifold
- 10 Medium temperature range
- 11 CE mark, C-Tick
- 12 Additional information on version: certificates, approvals
- 13 Manufacturing date: year-month
- 14 Flow direction
- 15 2-D matrix code
- 16 Degree of protection
- 17 Approval information for explosion protection and Pressure Equipment Directive
- 18 Permitted ambient temperature (T_a)
- 19 Document number of safety-related supplementary documentation




Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.


Storage temperature →  137

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

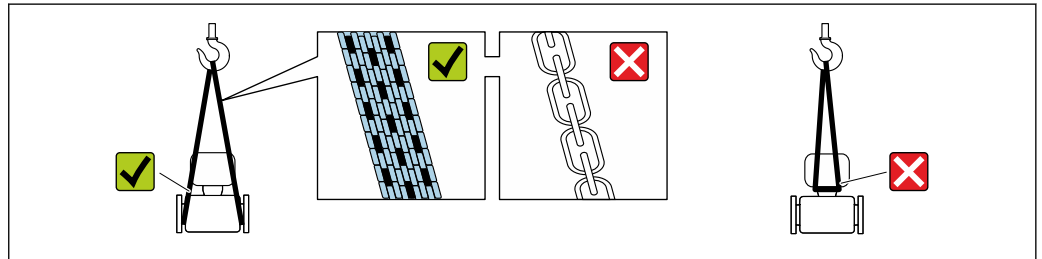

A0029252

-  Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

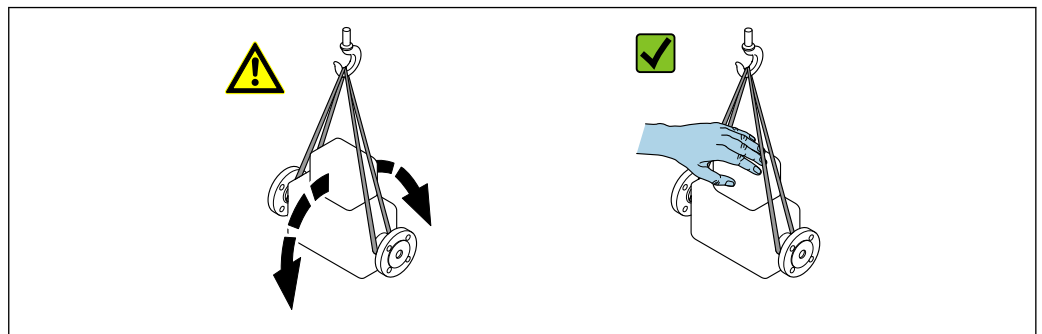

A0029214

5.2.2 Measuring devices with lifting lugs

CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:


- Outer packaging of device
 - Polymer stretch wrap that complies with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material
 - Paper pads

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

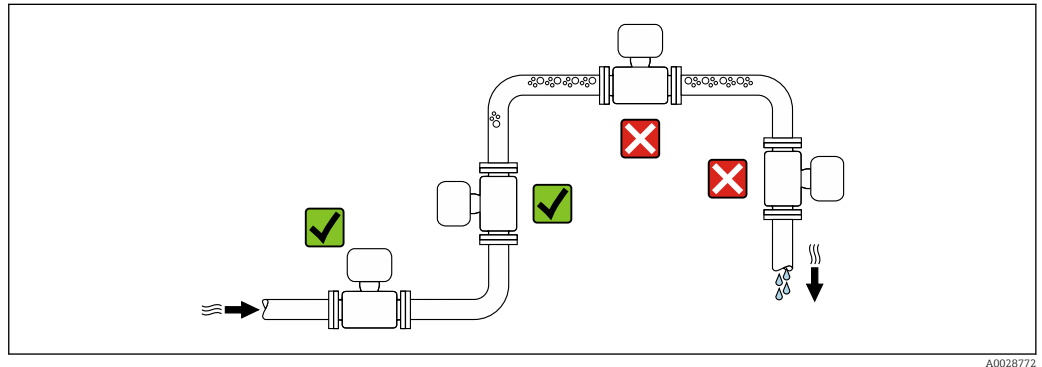


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

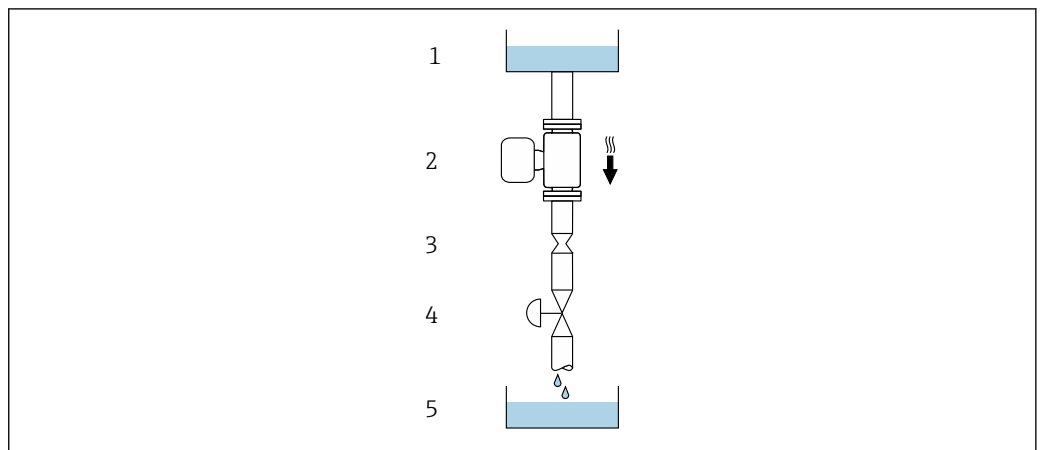





4 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
1	1/24	0.8	0.03
2	1/12	1.5	0.06
4	1/8	3.0	0.12
6	1/4	5.0	0.20

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

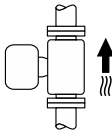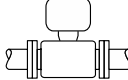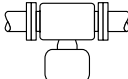Orientation			Recommendation
A	Vertical orientation	 A0015591	✓✓
B	Horizontal orientation, transmitter at top	 A0015589	✓✓ ¹⁾
C	Horizontal orientation, transmitter at bottom	 A0015590	✓✓ ²⁾
D	Horizontal orientation, transmitter at side	 A0015592	✗


- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 21.

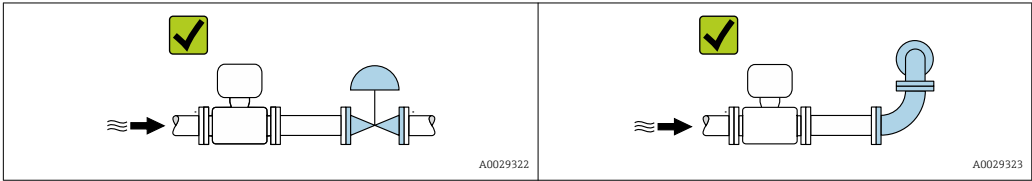

Installation dimensions

 For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

6.1.2 Environmental and process requirements

Ambient temperature range

Measuring device	<ul style="list-style-type: none"> ■ -40 to +60 °C (-40 to +140 °F) ■ Order code for "Test, certificate", option JM: -50 to +60 °C (-58 to +140 °F)
------------------	---

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

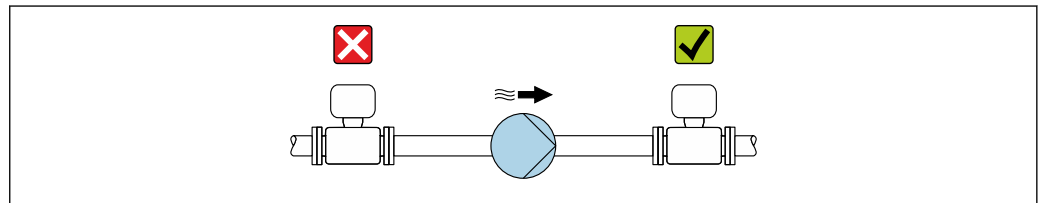

A0028777


Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

NOTICE

Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- Do not insulate the transmitter housing .
- Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

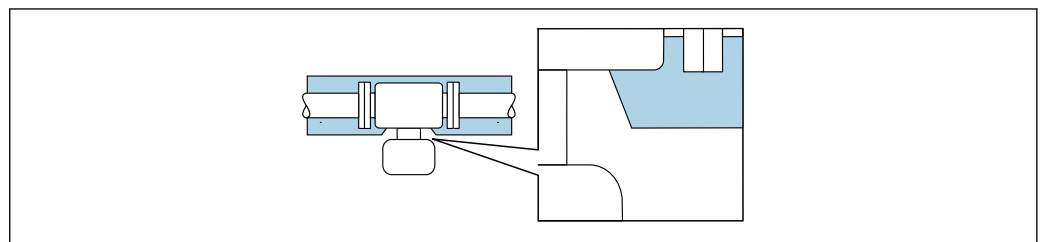

A0034391

5 Thermal insulation with extended neck free

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- ▶ Observe maximum permitted ambient temperature for the transmitter .
- ▶ Depending on the fluid temperature, take the device orientation requirements into account .

NOTICE

Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:


- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Sanitary compatibility

 When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section

Rupture disk

Information that is relevant to the process: →  139.


WARNING

Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.

- ▶ Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- ▶ Observe information on the rupture disk sticker.
- ▶ Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Do not use a heating jacket.
- ▶ Do not remove or damage the rupture disk.

The position of the rupture disk is indicated on a sticker beside it.

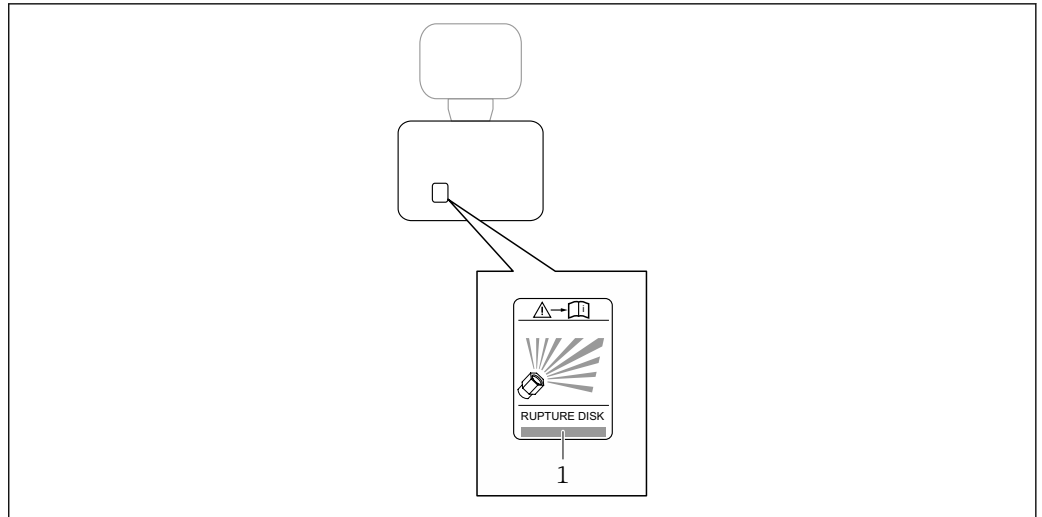

A0029940

1 Rupture disk label

Wall mounting

⚠ WARNING

Incorrect sensor mounting


Risk of injury if measuring tube breaks

- ▶ The sensor should never be installed in a pipe in a way that it is freely suspended
- ▶ Using the base plate, mount the sensor directly on the floor, wall or ceiling.
- ▶ Support the sensor on a securely mounted support base (e.g. angle bracket).

The following mounting versions are recommended for the installation.

Vertical


- Mounted directly on a wall using the base plate, or
- Device supported on an angle bracket mounted on the wall

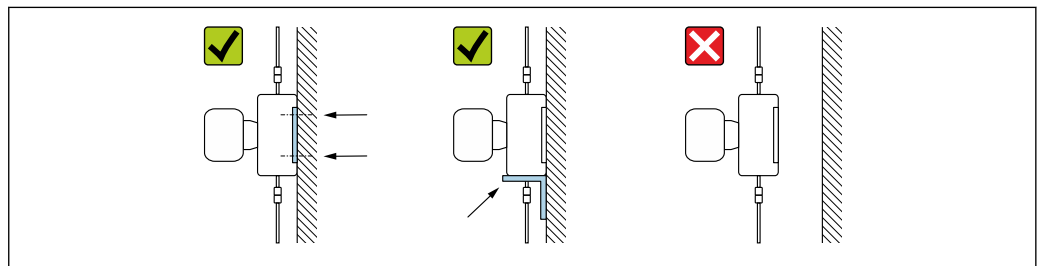

A0030286

Horizontal


Device standing on a solid support base

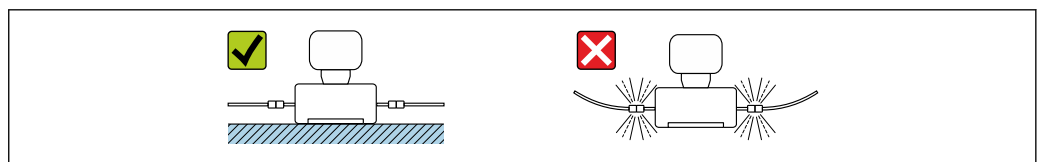

A0030287

Mounting plate

The universal mounting plate can be used to affix or place the unit on a flat surface (order code for "Accessories", option PA).

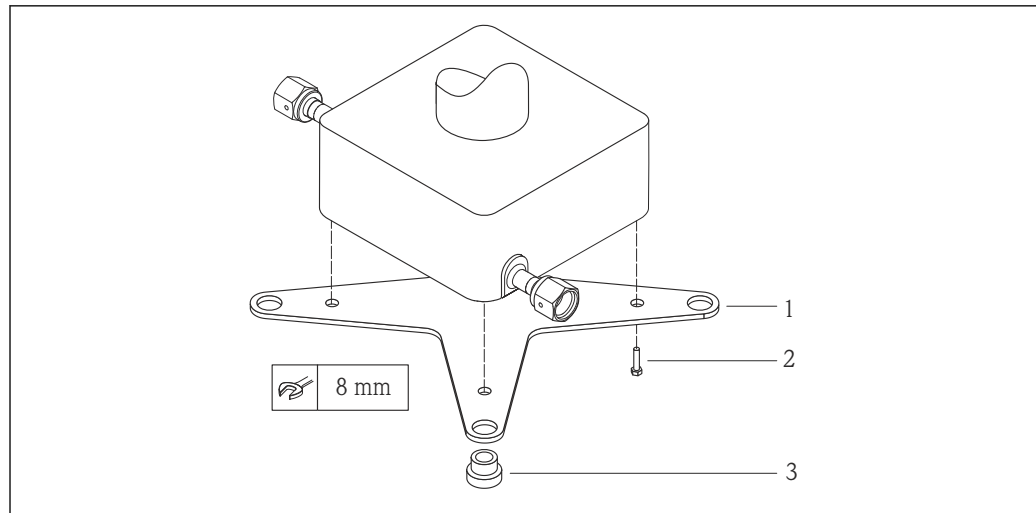


A0019768

 6 Mounting kit for Cubemass mounting plate

- 1 1 x Cubemass mounting plate
- 2 4 x screw M5 x 8
- 3 4 x grommet

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions →  133. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the measuring device

WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the seals are clean and undamaged.
- ▶ Secure the seals correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

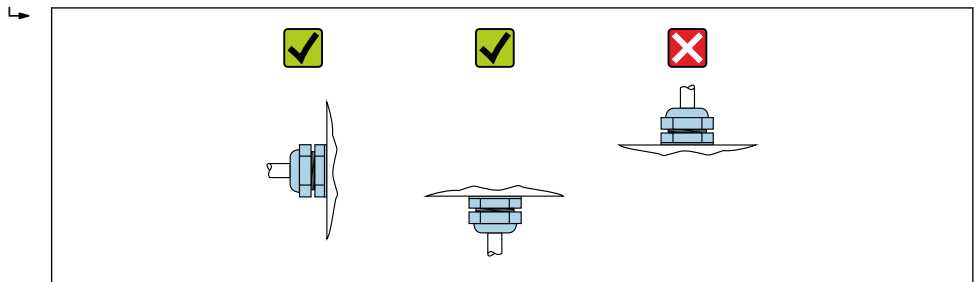


A0029263

6.2.4 Turning the display module

The local display is only available with the following device version:
Order code for "Display; Operation", option **B**: 4-line; lit, via communication


The display module can be turned to optimize display readability.

Aluminum housing version, AlSi10Mg, coated

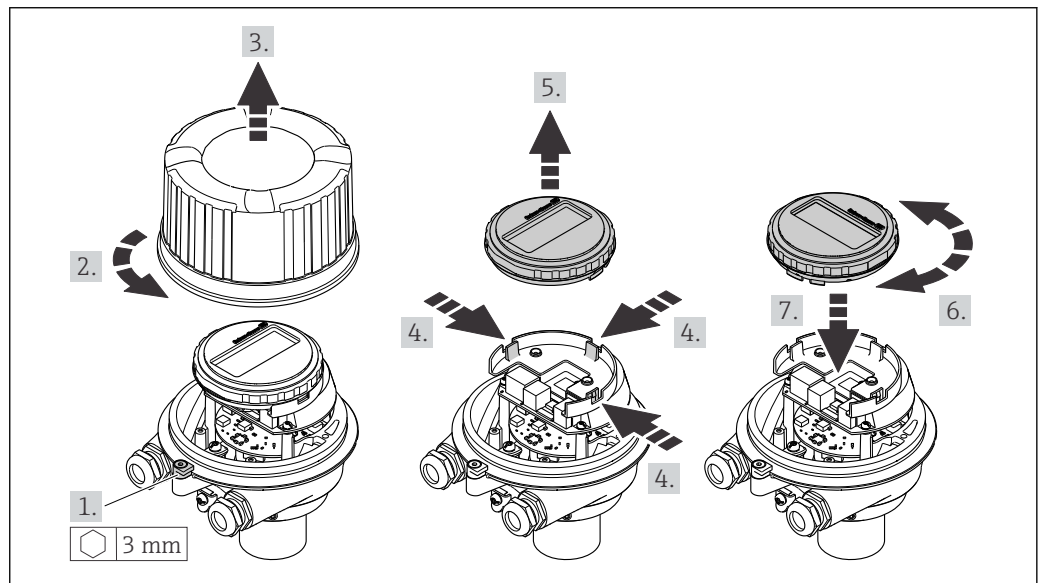



A0023192

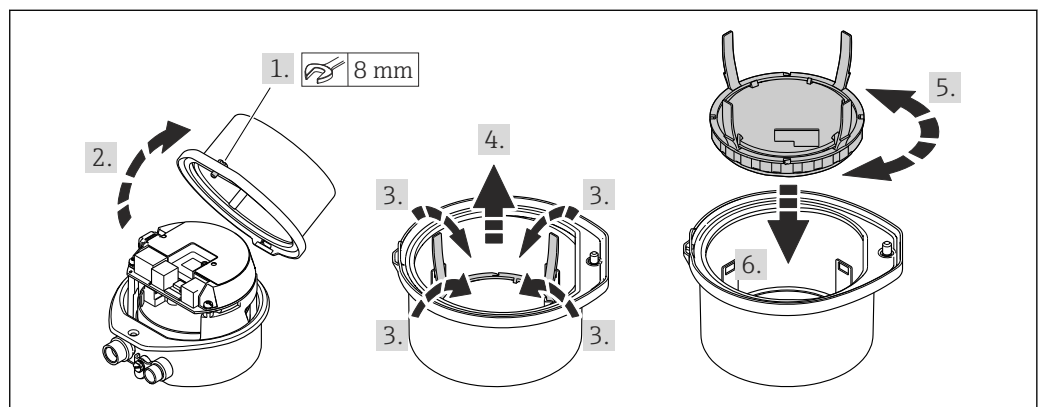Compact and ultra-compact housing version, hygienic, stainless



A0023195

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ■ Process temperature →  138 ■ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ■ Ambient temperature ■ Measuring range 	<input type="checkbox"/>
Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"> ■ According to sensor type ■ According to medium temperature ■ According to medium properties (outgassing, with entrained solids) 	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping →  20?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 16 A) should be integrated into the system installation.

7.1 Electrical safety

In accordance with applicable federal/national regulations.

7.2 Connection conditions

7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw 3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule

7.2.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

Signal cable

PROFINET

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.



For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology", Guideline for PROFINET

Cable diameter

- Cable glands supplied:
M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:
Wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

7.2.3 Terminal assignment


Transmitter

PROFINET connection version

Order code for "Output", option R

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code "Housing"	Connection methods available		Possible options for order code "Electrical connection"
	Output	Power supply	
Options A, B	Device plug connectors → 29	Terminals	<ul style="list-style-type: none">Option L: plug M12x1 + thread NPT ½"Option N: plug M12x1 + coupling M20Option P: plug M12x1 + thread G ½"Option U: plug M12x1 + thread M20
Options A, B, C	Device plug connectors → 29	Device plug connectors → 29	Option Q: 2 x plug M12x1
Order code for "Housing": <ul style="list-style-type: none">Option A: compact, coated aluminumOption B: compact, hygienic, stainlessOption C ultra-compact, hygienic, stainless			

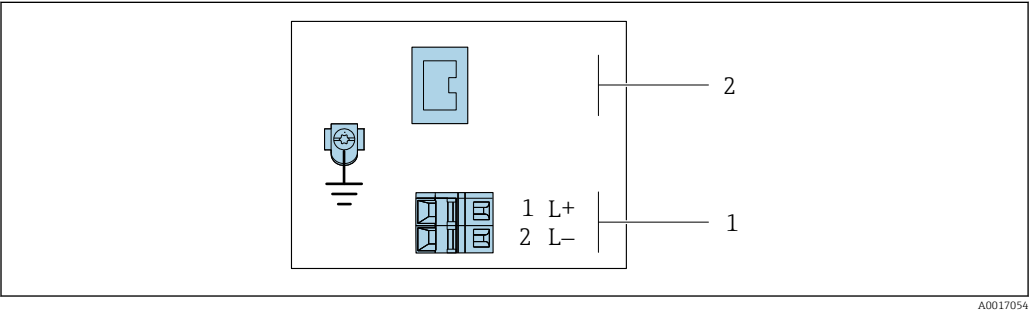


7 PROFINET terminal assignment

- 1 Power supply: DC 24 V
- 2 PROFINET


Order code "Output"	Terminal number		
	Power supply		Output
	2 (L-)	1 (L+)	Device plug M12x1
Option R	DC 24 V		PROFINET
Order code for "Output": Option R: PROFINET			

7.2.4 Pin assignment, device plug

Supply voltage

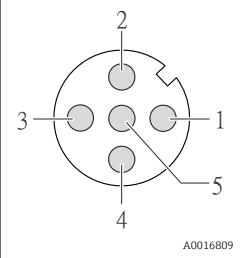	Pin	Assignment	
	1	L+	DC 24 V
	2		Not assigned
	3		Not assigned
	4	L-	DC 24 V
	5		Grounding/shielding
	Coding		Plug/socket
	A		Plug

Device plug for signal transmission (device side)

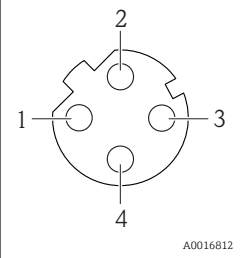	Pin	Assignment	
	1	+	TD +
	2	+	RD +
	3	-	TD -
	4	-	RD -
	Coding		Plug/socket
	D		Socket

7.2.5 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:
Observe requirements for connecting cables → 27.

7.3 Connecting the measuring device

NOTICE


Limitation of electrical safety due to incorrect connection!

- Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- Always connect the protective ground cable Ⓢ before connecting additional cables.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.
- The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

7.3.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:


- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

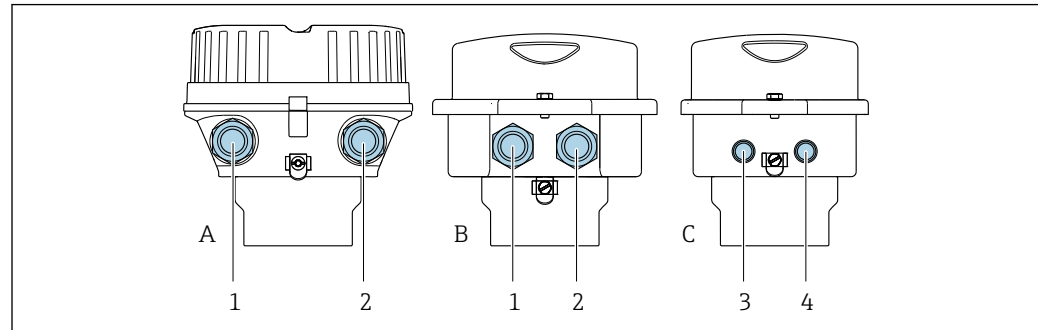

A0016924

8 Housing versions and connection versions

- | | |
|---|---|
| A | Housing version: compact, coated, aluminum |
| B | Housing version: compact, hygienic, stainless |
| 1 | Cable entry or device plug for signal transmission |
| 2 | Cable entry or device plug for supply voltage |
| C | Housing version: ultra-compact, hygienic, stainless |
| 3 | Device plug for signal transmission |
| 4 | Device plug for supply voltage |

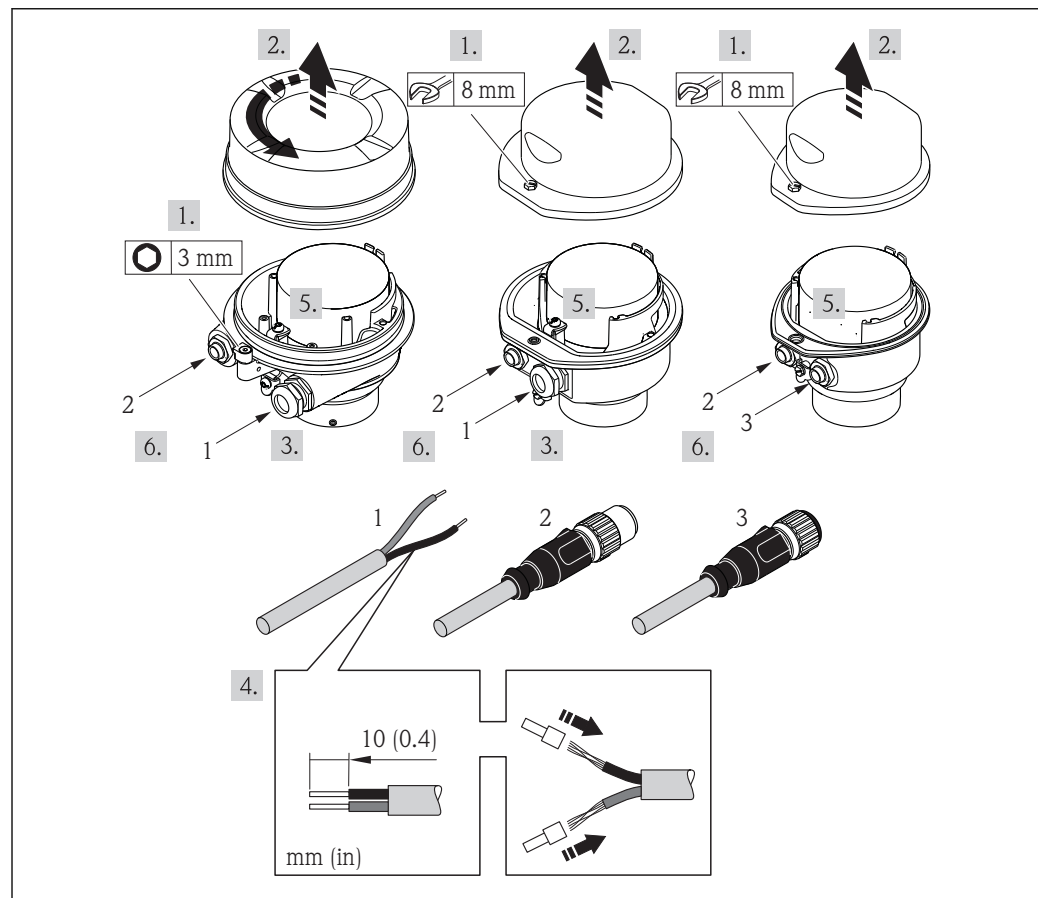

A0017844

9 Device versions with connection examples

- 1 Cable
- 2 Device plug for signal transmission
- 3 Device plug for supply voltage

For device version with device plug: follow step 6 only.

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
3. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
4. Connect the cable in accordance with the terminal assignment or the device plug pin assignment .
5. Depending on the device version, tighten the cable glands or plug in the device plug and tighten .

6. **⚠ WARNING**

Housing degree of protection may be voided due to insufficient sealing of the housing.

- Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.

7.3.2 Ensuring potential equalization

Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts




For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

7.4 Special connection instructions

7.4.1 Connection examples

PROFINET

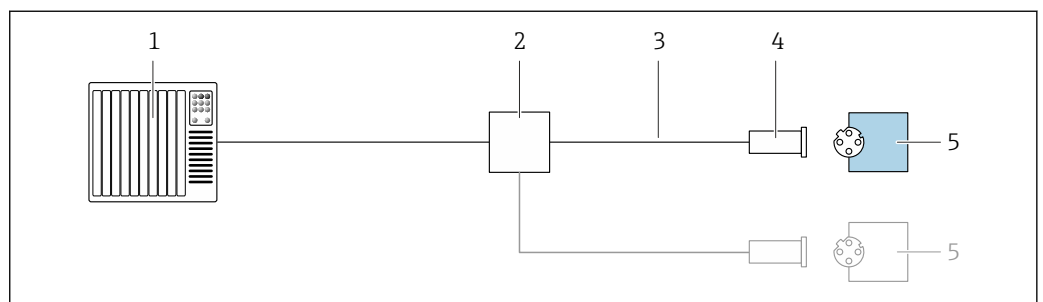

A0028767

10 Connection example for PROFINET

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

7.5 Hardware settings

7.5.1 Setting the device name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station of the PROFINET specification). The factory-assigned device name can be changed using the DIP switches or the automation system.

Example of device name (factory setting): EH-Cubemass100-XXXXX

EH	Endress+Hauser
Promass	Instrument family
100	Transmitter
XXXXX	Serial number of the device

The device name currently used is displayed in Setup → Name of station .

Setting the device name using the DIP switches

The last part of the device name can be set using DIP switches 1-8. The address range is between 1 and 254 (factory setting: serial number of the device)

Overview of the DIP switches

DIP switches	Bit	Description
1	1	Configurable part of the device name
2	2	
3	4	
4	8	
5	16	
6	32	
7	64	
8	128	
9	–	Enable hardware write protection
10	–	Default IP address: use 192.168.1.212


Example: set the device name EH-PROMASS100-065

DIP switches	ON/OFF	Bit
1	ON	1
2...6	OFF	–
7	ON	64
8	OFF	–

Setting the device name

Risk of electric shock when opening the transmitter housing.

- Disconnect the device from the power supply before opening the transmitter housing.

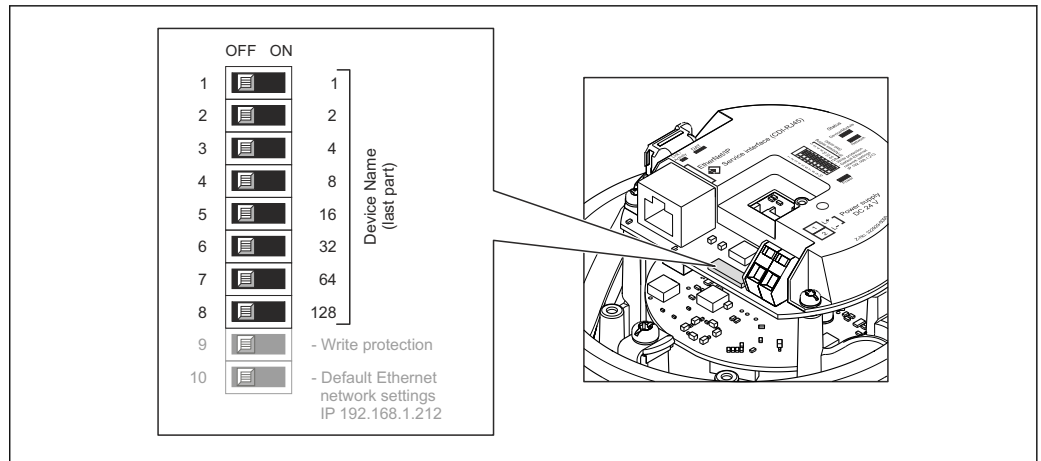

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary → 142.
3. Set the desired device name using the corresponding DIP switches on the I/O electronics module.
4. Reverse the removal procedure to reassemble the transmitter.
5. Reconnect the device to the power supply. The configured device address is used once the device is restarted.

i If the device is reset via the PROFINET interface, it is not possible to reset the device name to the factory setting. The value 0 is used instead of the device name.

Setting the device name via the automation system

DIP switches 1-8 must all be set to **OFF** (factory setting) or all be set to **ON** to be able to set the device name via the automation system.

The complete device name (name of station) can be changed individually via the automation system.

- i** The serial number used as part of the device name in the factory setting is not saved. It is not possible to reset the device name to the factory setting with the serial number. The value 0 is used instead of the serial number.
- When assigning the device name via the automation system, enter the device name in lower-case letters.


7.6 Ensuring the degree of protection

The measuring device fulfills all the requirements for degree of protection IP66/67, Type 4X enclosure.

To guarantee degree of protection IP66/67, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.
3. Tighten all housing screws and screw covers.
4. Firmly tighten the cable glands.

5.
- To ensure that moisture does not enter the cable entry:
Route the cable so that it loops down before the cable entry ("water trap").

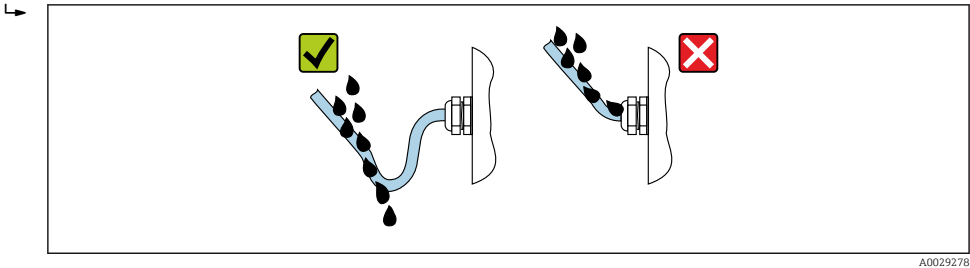


6.
- Insert dummy plugs into unused cable entries.

7.7 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables used meet the requirements → 27?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 33?	<input type="checkbox"/>
Depending on the device version: are all the device plugs firmly tightened → 30?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate → 132?	<input type="checkbox"/>
Is the terminal assignment → 28 or pin assignment of the connector → 29 correct?	<input type="checkbox"/>
If supply voltage is present, is the power LED on the electronics module of the transmitter lit green → 12?	<input type="checkbox"/>
Depending on the device version, is the securing clamp or fixing screw firmly tightened?	<input type="checkbox"/>

8 Operation options

8.1 Overview of operating options

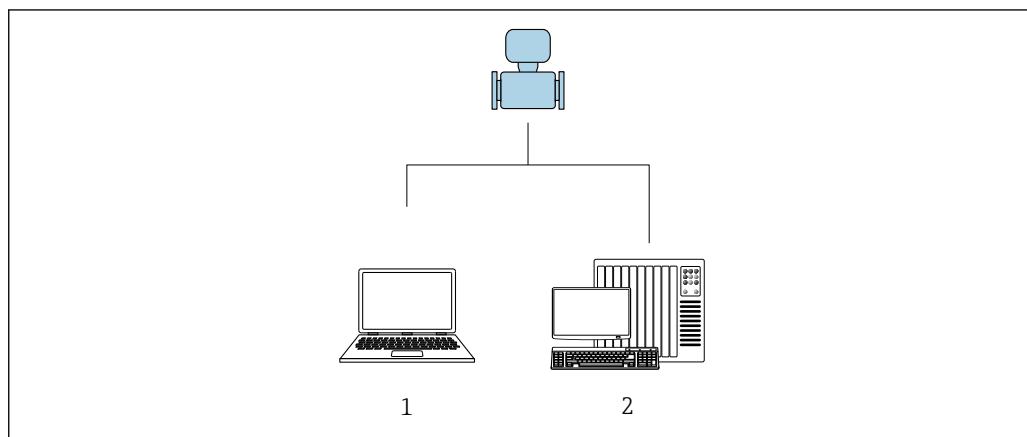




A0017760


- 1 Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- 2 Automation system, e.g. Siemens S7-300 or S7-1500 with Step7 or TIA portal and latest GSD file.

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device →  147

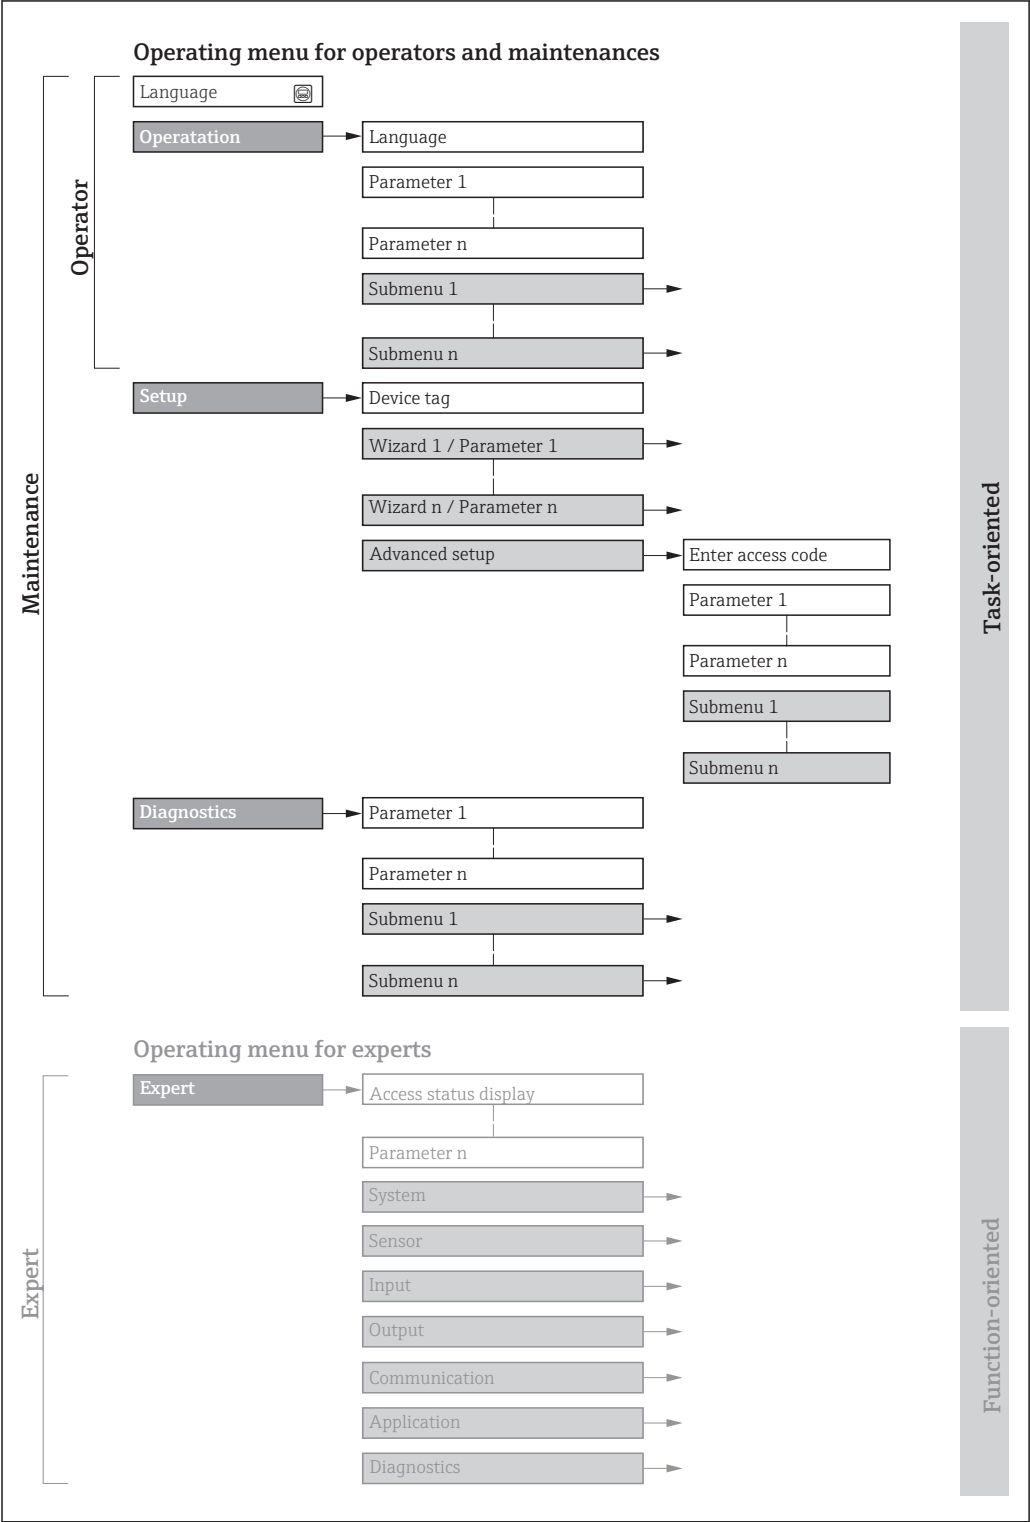

 11 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> Configuring the operational display Reading measured values 	<ul style="list-style-type: none"> Defining the operating language Defining the Web server operating language Resetting and controlling totalizers
Operation			<ul style="list-style-type: none"> Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: Configuration of the measurement	Submenus for fast commissioning: <ul style="list-style-type: none"> Setting the system units Defining the medium Configuration of the operational display Setting the low flow cut off Configuring partial and empty pipe detection Advanced setup <ul style="list-style-type: none"> For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: <ul style="list-style-type: none"> Diagnostics and elimination of process and device errors Measured value simulation 	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> Diagnostics list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Communication Configuration of the digital communication interface and the Web server. Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.


8.3 Displaying the measured values via the local display (optionally available)

8.3.1 Operational display



The local display is optionally available:

Order code for "Display; operation", option B "4-line, illuminated; via communication".

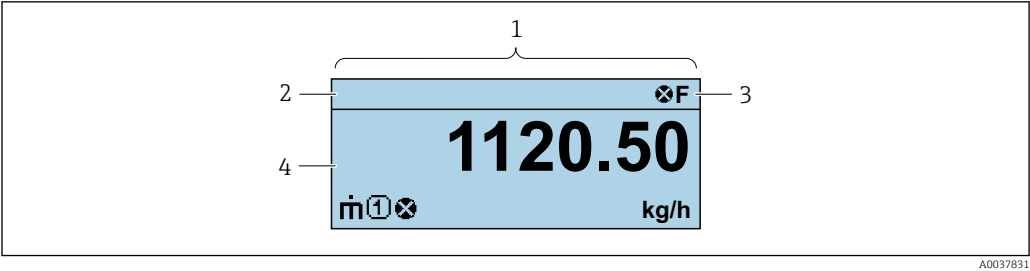

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)

Status area


The following symbols appear in the status area of the operational display at the top right:

- Status signals
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior
 - ⊗: Alarm
 - ⚠: Warning
- 🔒: Locking (the device is locked via the hardware)
- ↔: Communication (communication via remote operation is active)



Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured variables

Symbol	Meaning
\dot{m}	Mass flow
\dot{V}	<ul style="list-style-type: none">■ Volume flow■ Corrected volume flow
ρ	<ul style="list-style-type: none">■ Density■ Reference density
θ	Temperature
Σ	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers

Symbol	Meaning
 ... 	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols



The number and display format of the measured values can only be configured via the control system or Web server.

8.3.2 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration from unauthorized access .

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- Define the access code.
 - ↳ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	✓	✓
After an access code has been defined.	✓	✓ ¹⁾

- 1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	✓	-- ¹⁾

- 1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section



The user role with which the user is currently logged on is indicated by the .
Navigation path:

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) . In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.




For additional information on the Web server, refer to the Special Documentation for the device

8.4.2 Prerequisites


Computer hardware

Interface	The computer must have an RJ45 interface.
Connection	Standard Ethernet cable with RJ45 connector.
Screen	Recommended size: ≥12" (depends on the screen resolution)

Computer software



Recommended operating systems	Microsoft Windows 7 or higher.  Microsoft Windows XP is supported.
Web browsers supported	<ul style="list-style-type: none"> ▪ Microsoft Internet Explorer 8 or higher ▪ Microsoft Edge ▪ Mozilla Firefox ▪ Google Chrome ▪ Safari

Computer settings

User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .
JavaScript	JavaScript must be enabled.  If JavaScript cannot be enabled: enter <code>http://XXX.XXX.X.XXX/basic.html</code> in the address line of the Web browser, e.g. <code>http://192.168.1.212/basic.html</code> . A fully functional but simplified version of the operating menu structure starts in the Web browser.
Network connections	Only the active network connections to the measuring device should be used. Switch off all other network connections.

 In the event of connection problems: →  86

Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	Web server must be enabled; factory setting: ON  For information on enabling the Web server →  44


8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device


Configuring the Internet protocol of the computer

The IP address can be assigned to the measuring device in a variety of ways:

- **Dynamic Configuration Protocol (DCP), factory setting:**
The IP address is automatically assigned to the measuring device by the automation system (e.g. Siemens S7).
- **Hardware addressing:**
The IP address is set via DIP switches .
- **Software addressing:**
The IP address is entered via the **IP address** parameter (→  64) .
- **DIP switch for "Default IP address":**
To establish the network connection via the service interface (CDI-RJ45): the fixed IP address 192.168.1.212 is used .

The measuring device works with the Dynamic Configuration Protocol (DCP), on leaving the factory, i.e. the IP address of the measuring device is automatically assigned by the automation system (e.g. Siemens S7).

To establish a network connection via the service interface (CDI-RJ45): set the "Default IP address" DIP switch to **ON**. The measuring device then has the fixed IP address: 192.168.1.212. This address can now be used to establish the network connection.


1. Via DIP switch 2, activate the default IP address 192.168.1.212: .
2. Switch on the measuring device.
3. Connect to the computer using a cable →  143.
4. If a 2nd network card is not used, close all the applications on the notebook.
↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
5. Close any open Internet browsers.
6. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty



Starting the Web browser

1. Start the Web browser on the computer.

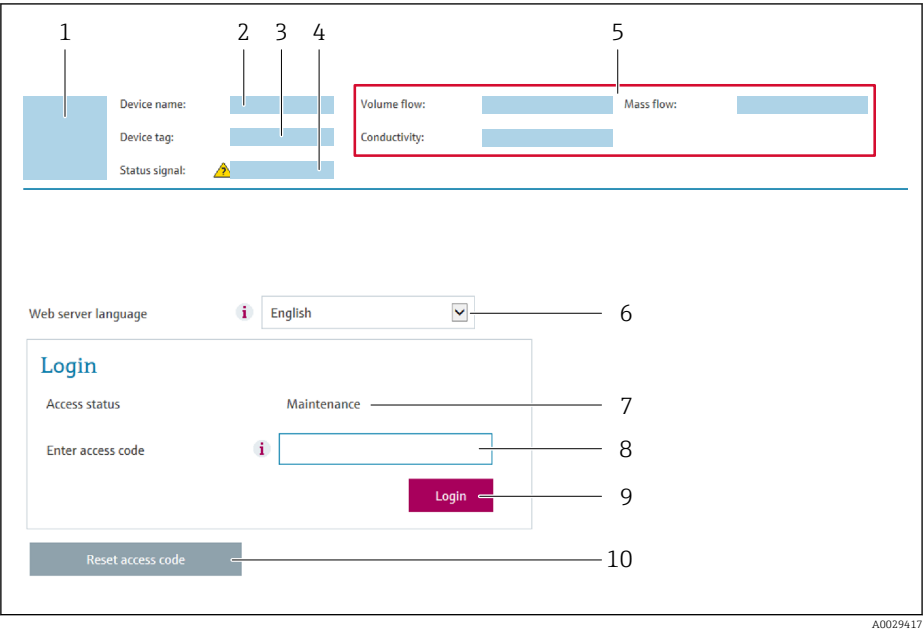2.
- Enter the IP address of the Web server in the address line of the Web browser:
192.168.1.212
- The login page appears.




- 1
- Picture of device
- 2
- Device name
- 3
- Device tag
- 4
- Status signal
- 5
- Current measured values
- 6
- Operating language
- 7
- User role
- 8
- Access code
- 9
- Login
- 10
- Reset access code

 If a login page does not appear, or if the page is incomplete →  86


8.4.4 **Logging on**

1.
- Select the preferred operating language for the Web browser.
2.
- Enter the user-specific access code.
3.
- Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

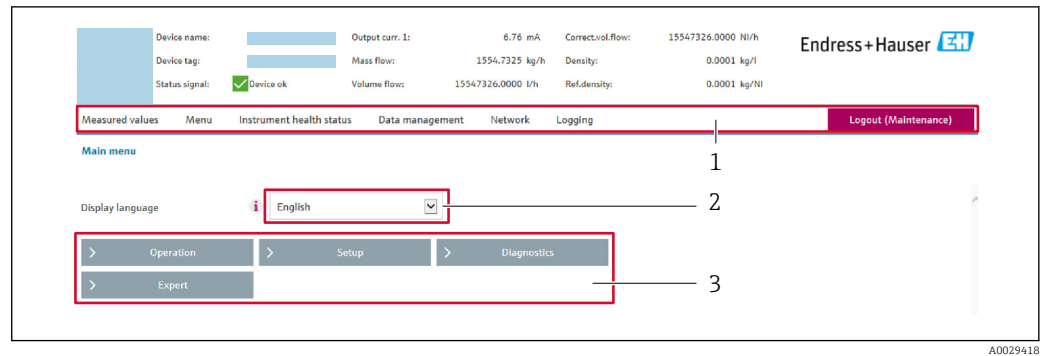

- 1 Function row
2 Local display language
3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal → 89
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the measuring device
Menu	<ul style="list-style-type: none"> ■ Access to the operating menu from the measuring device ■ The structure of the operating menu is the same as for the operating tools For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between PC and measuring device: <ul style="list-style-type: none"> ■ Device configuration: <ul style="list-style-type: none"> ■ Load settings from the device (XML format, save configuration) ■ Save settings to the device (XML format, restore configuration) ■ Logbook - Export Event logbook (.csv file) ■ Documents - Export documents: <ul style="list-style-type: none"> ■ Export backup data record (.csv file, create documentation of the measuring point configuration) ■ Verification report (PDF file, only available with the "Heartbeat Verification" application package) ■ File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: PROFINET: GSD file
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: <ul style="list-style-type: none"> ■ Network settings (e.g. IP address, MAC address) ■ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul style="list-style-type: none"> ■ Off ■ HTML Off ■ On 	On

Function scope of the "Web server functionality" parameter


Option	Description
Off	<ul style="list-style-type: none"> ■ The web server is completely disabled. ■ Port 80 is locked.
HTML Off	The HTML version of the web server is not available.
On	<ul style="list-style-type: none"> ■ The complete functionality of the web server is available. ■ JavaScript is used. ■ The password is transferred in an encrypted state. ■ Any change to the password is also transferred in an encrypted state.


Enabling the Web server


If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.
↳ The home page with the Login box appears.
2. Close the Web browser.
3. If no longer needed:
Reset modified properties of the Internet protocol (TCP/IP) →  41.

 If communication with the Web server was established via the default IP address 192.168.1.212, DIP switch No. 10 must be reset (from **ON** → **OFF**). Afterwards, the IP address of the device is active again for network communication.


8.5 Access to the operating menu via the operating tool

8.5.1 Connecting the operating tool

Via PROFINET network

This communication interface is available in device versions with PROFINET.

Star topology

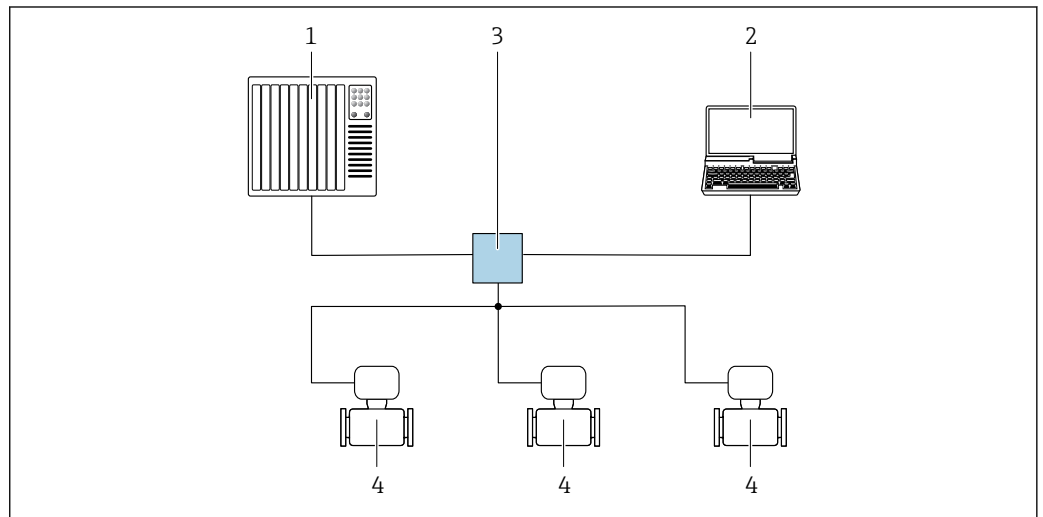


A0026545

12 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Via service interface (CDI)

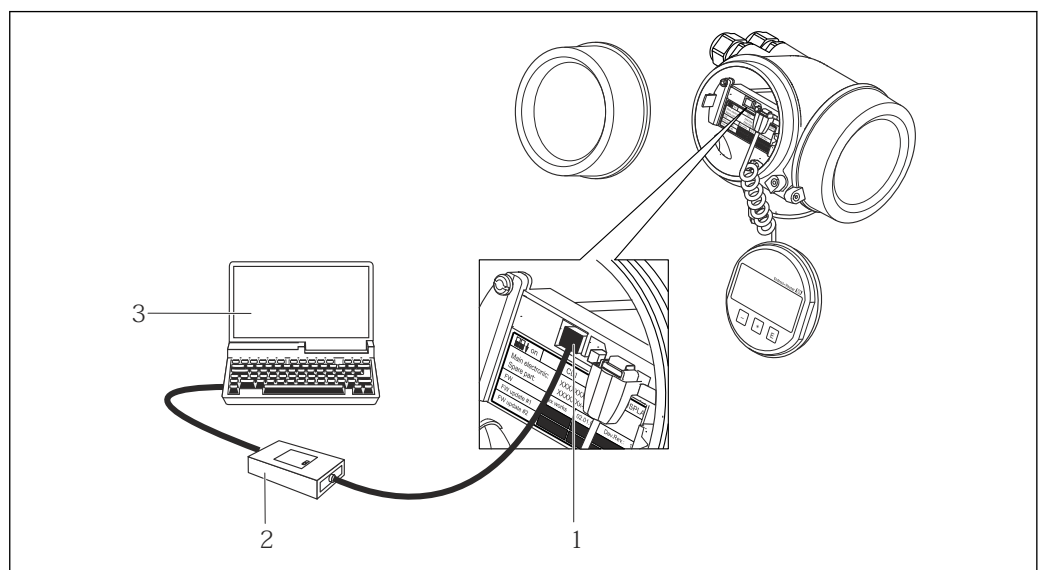


A0014019

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with FieldCare operating tool with COM DTM CDI Communication FXA291

Via service interface (CDI-RJ45)

PROFINET

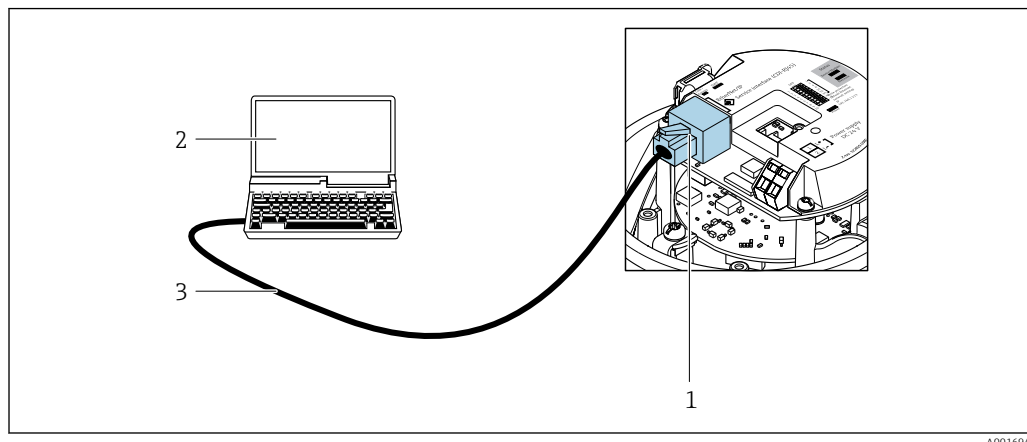

13 Connection for order code for "Output", option R: PROFINET

- 1 Service interface (CDI -RJ45) and PROFINET interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

8.5.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:
CDI-RJ45 service interface

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files

See information → 48

Establishing a connection


1. Start FieldCare and launch the project.
2. In the network: Add a device.
 - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
 - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.

6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known .
7. Establish the online connection to the device.



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

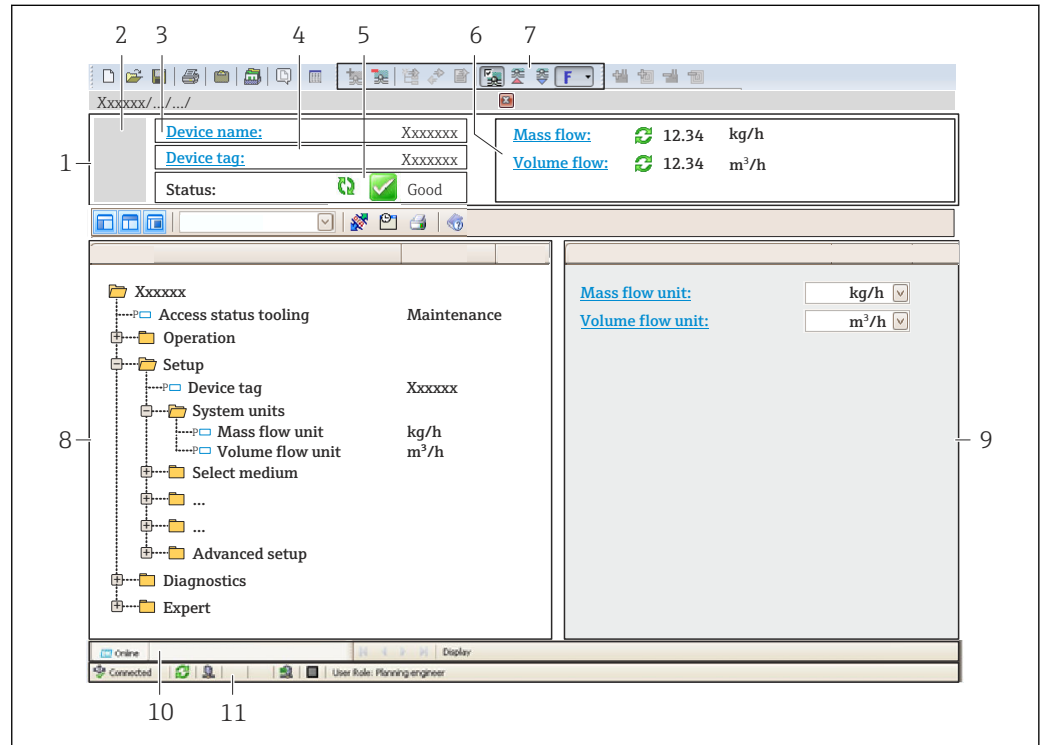

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal → 89
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



For details, see Innovation Brochure IN01047S

Source for device description files

See information → 48

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	<ul style="list-style-type: none"> ■ On the title page of the Operating Instructions ■ On the transmitter nameplate ■ Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	12.2015	–
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device ID	0x844A	Device ID Expert → Communication → PROFINET configuration → PROFINET information → Device ID
Device type ID	Promass 100	Device Type Expert → Communication → PROFINET configuration → PROFINET information → Device Type
Device Revision	1	Device revision Expert → Communication → PROFINET configuration → PROFINET information → Device revision
PROFINET version	2.3.x	–



For an overview of the different firmware versions for the device

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via Service interface (CDI)	Sources for obtaining device descriptions
FieldCare	<ul style="list-style-type: none"> ■ www.endress.com → Download Area ■ CD-ROM (contact Endress+Hauser) ■ DVD (contact Endress+Hauser)
DeviceCare	<ul style="list-style-type: none"> ■ www.endress.com → Download Area ■ CD-ROM (contact Endress+Hauser) ■ DVD (contact Endress+Hauser)

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFINET system needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

9.2.1 File name of the device master file (GSD)

Example of the name of a device master file:








GSDML-V2.3.x-EH-CUBEMASS 100-yyyymmdd.xml

GSDML	Description language
V2.3.x	Version of the PROFINET specification
EH	Endress+Hauser
CUBEMASS	Instrument family
100	Transmitter
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)
.xml	File name extension (XML file)


9.3 Cyclic data transmission

9.3.1 Overview of the modules

The following tables shows which modules are available to the measuring device for cyclic data exchange. Cyclic data exchange is performed with an automation system.

Measuring device		Direction Data flow	Control system
Module	Slot		
Analog Input module →  50	1 to 14	→	PROFINET
Digital Input module →  51	1 to 14	→	
Diagnose Input module →  52	1 to 14	→	
Analog Output module →  54	18, 19, 20	←	
Digital Output module →  55	21, 22	←	
Totalizer 1 to 3 →  53	15 to 17	← →	
Heartbeat Verification module →  57	23	← →	

9.3.2 Description of the modules

 The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, along with the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the input variable.

Selection: input variable

Slot	Input variables
1 to 14	<ul style="list-style-type: none"> ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow ▪ Target mass flow ¹⁾ ▪ Carrier mass flow ▪ Density ▪ Reference density ▪ Concentration ▪ Temperature ▪ Carrier tube temperature ²⁾ ▪ Electronic temperature ▪ Oscillation frequency ▪ Oscillation amplitude ▪ Frequency fluctuation ▪ Oscillation damping ▪ Tube damping fluctuation ▪ Signal asymmetry ▪ Exciter current

1) Only available with the Concentration application package

2) Only available with the Heartbeat Verification application package

*Data structure**Input data of Analog Input*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 58

Application-specific Input module

Transmit compensation values from the automation system to the measuring device.

The Application-specific Input module cyclically transmits compensation values, including the status, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values

The configuration is performed via: Expert → Application → Application specific calculations → Process variables

Slot	Compensation value
31	Application-specific Input module
32	Application-specific Input module

*Data structure**Input data of Application-specific Input module*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 58

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert → Application → Application specific calculations → Process variables

Fail safe type parameter

- **Fail safe value** option: The value defined in the Fail safe value parameter is used.
- **Fallback value** option: The last valid value is used.
- **Off** option: Failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Input module

Transmit digital input values from the measuring device to the automation system.

Digital input values are used by the measuring device to transmit the state of device functions to the automation system.

Digital Input modules cyclically transmit discrete input values, including the status, from the measuring device to the automation system. The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.


Selection: device function

Slot	Device function	Status (meaning)
1 to 14	Empty pipe detection	<ul style="list-style-type: none"> ■ 0 (device function not active) ■ 1 (device function active)
	Low flow cut off	

Data structure

Input data of Digital Input


Byte 1	Byte 2
Digital Input	Status ¹⁾

1) Status coding →  58


Diagnose Input module



Transmit discrete input values (diagnostic information) from the measuring device to the automation system.

Diagnostic information is used by the measuring device to transmit the device status to the automation system.

Diagnose Input modules transmit discrete input values from the measuring device to the automation system. The first two bytes contain the information regarding the diagnostic information number (→  94). The third byte provides the status.

Selection: device function

Slot	Device function	Status (meaning)
1 to 14	Last diagnostics	Diagnostic information number (→  94) and status
	Current diagnosis	

 Information about pending diagnostic information →  115.

Data structure

Input data of Diagnose Input

Byte 1	Byte 2	Byte 3	Byte 4
Diagnostic information number		Status	Value 0

Status

Coding (hex)	Status
0x00	No device error is present.
0x01	Failure (F): A device error is present. The measured value is no longer valid.

Coding (hex)	Status
0x02	Function check (C): The device is in service mode (e.g. during a simulation).
0x04	Maintenance required (M): Maintenance is required. The measured value is still valid.
0x08	Out of specification (S): The device is being operated outside its technical specification limits (e.g. process temperature range).

Totalizer module

The Totalizer module consists of the Totalizer Value, Totalizer Control and Totalizer Mode submodules.

Totalizer Value submodule

Transmit transmitter value from the device to the automation system.

Totalizer modules cyclically transmit a selected totalizer value, along with the status, from the measuring device to the automation system via the Totalizer Value submodule. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the totalizer value.

Selection: input variable

Slot	Sub-slot	Input variable
15...17	1	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ¹⁾ ■ Carrier mass flow ¹⁾

1) Only available with the Concentration application package

Data structure of input data (Totalizer Value submodule)

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 58

Totalizer Control submodule

Control the totalizer via the automation system.

Selection: control totalizer

Slot	Sub-slot	Value	Control totalizer
15...17	2	0	Totalize
		1	Reset + hold
		2	Preset + hold
		3	Reset + totalize
		4	Preset + totalize
		5	Hold

Data structure of output data (Totalizer Control submodule)

Byte 1
Control variable

Totalizer Mode submodule

Configure the totalizer via the automation system.

Selection: totalizer configuration

Slot	Sub-slot	Value	Control totalizer
15...17	3	0	Balancing
		1	Balance the positive flow
		2	Balance the negative flow

Data structure of output data (Totalizer Mode submodule)


Byte 1
Configuration variable

Analog Output module

Transmit compensation values from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, along with the status and the associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value. The unit is transmitted in the sixth and seventh byte.

Assigned compensation values

 The configuration is performed via: Expert → Sensor → External compensation

Slot	Compensation value
18	External pressure
19	External temperature
20	External reference density
29	External value for % S&W (sediment and water) ¹⁾
30	External value for % Water cut ¹⁾

1) Only available with the Petroleum application package.

Available units

Pressure		Temperature		Density		Percent	
Unit code	Unit	Unit code	Unit	Unit code	Unit	Unit code	Unit
1610	Pa a	1001	°C	32840	kg/Nm ³	1342	%
1616	kPa a	1002	°F	32841	kg/Nl		
1614	MPa a	1000	K	32842	g/Scm ₃		

Pressure		Temperature		Density		Percent	
Unit code	Unit	Unit code	Unit	Unit code	Unit	Unit code	Unit
1137	bar	1003	°R	32843	kg/Scm ₃		
1611	Pa g			32844	lb/Sft ₃		
1617	kPa g						
1615	MPa g						
32797	bar g						
1142	psi a						
1143	psi g						

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Measured value: floating point number (IEEE 754)				Status ¹⁾	Unit code	

1) Status coding → 58

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert
→ Sensor → External compensation

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Output module

Transmit digital output values from the automation system to the measuring device.

Digital output values are used by the automation system to enable and disable device functions.

Digital output values cyclically transmit discrete output values, including the status, from the automation system to the measuring device. The discrete output value is transmitted in the first byte. The second byte contains status information pertaining to the output value.

Assigned device functions

Slot	Device function	Status (meaning)
21	Flow override	<ul style="list-style-type: none"> ■ 0 (disable device function) ■ 1 (enable device function)
22	Zero point adjustment	
24 to 26	Relay output	Relay output value: <ul style="list-style-type: none"> ■ 0 ■ 1

*Data structure**Output data of Digital Output*

Byte 1	Byte 2
Digital Output	Status ^{1) 2)}

1) Status coding → 58

2) If the status is BAD, the control variable is not adopted.

Heartbeat Verification module

Receive discrete output values from the automation system and transmit discrete input values from the measuring device to the automation system.

The Heartbeat Verification module receives discrete output data from the automation system and transmits discrete input data from the measuring device to the automation system.

The discrete output value is provided by the automation system in order to start Heartbeat Verification. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

The discrete input value is used by the measuring device to transmit the status of the Heartbeat Verification device functions to the automation system. The module cyclically transmits the discrete input value, along with the status, to the automation system. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

 Only available with the Heartbeat Verification application package.

Assigned device functions

Slot	Device function	Bit	Verification status
23	Status verification (input data)	0	Verification has not been performed
		1	Verification has failed
		2	Currently performing verification
		3	Verification terminated
	Verification result (input data)	Bit	Verification result
		4	Verification has failed
		5	Verification performed successfully
		6	Verification has not been performed
		7	–
	Start verification (output data)	Verification control	
		A change in the status from 0 to 1 starts the verification	

Data structure

Output data of the Heartbeat Verification module


Byte 1
Discrete Output

Input data of the Heartbeat Verification module

Byte 1	Byte 2
Discrete Input	Status ¹⁾

1) Status coding → 58

Concentration module

 Only available with the Concentration Measurement application package.

Assigned device functions

Slot	Input variables
28	Selection of the liquid type

Data structure

Concentration output data

Byte 1
Control variable

Liquid type	Enum code
Off	0
Sucrose in water	5
Glucose in water	2
Fructose in water	1
Invert sugar in water	6
Corn syrup HFCS42	15
Corn syrup HFCS55	16
Corn syrup HFCS90	17
Original wort	18
Ethanol in water	11
Methanol in water	12
Hydrogen peroxide in water	4
Hydrochloric acid	24
Sulfuric acid	25
Nitric acid	7
Phosphoric acid	8
Sodium hydroxide	10
Potassium hydroxide	9

Liquid type	Enum code
Ammonium nitrate in water	13
Iron(III) chloride in water	14
% mass / % volume	19
User Profile Coef Set No. 1	21
User Profile Coef Set No. 2	22
User Profile Coef Set No. 3	23

9.3.3 Status coding

Status	Coding (hex)	Meaning
BAD - Maintenance alarm	0x24	A measured value is not available because a device error has occurred.
BAD - Process related	0x28	A measured value is not available because the process conditions are not within the device's technical specification limits.
BAD - Function check	0x3C	A function check is active (e.g. cleaning or calibration)
UNCERTAIN - Initial value	0x4F	A pre-defined value is output until a correct measured value is available again or until remedial measures have been carried out that change this status.
UNCERTAIN - Maintenance demanded	0x68	Signs of wear and tear have been detected on the measuring device. Short-term maintenance is needed to ensure that the measuring device remains operational. The measured value might be invalid. The use of the measured value depends on the application.
UNCERTAIN - Process related	0x78	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.
GOOD - OK	0x80	No error has been diagnosed.
GOOD - Maintenance demanded	0xA8	The measured value is valid. It is highly advisable to service the device in the near future.
GOOD - Function check	0xBC	The measured value is valid. The measuring device is performing an internal function check. The function check does not have any noticeable effect on the process.

9.3.4 Factory setting

The slots are already assigned in the automation system for initial commissioning.

Assigned slots

Slot	Factory setting
1	Mass flow
2	Volume flow
3	Corrected volume flow
4	Density
5	Reference density

Slot	Factory setting
6	Temperature
7-14	–
15	Totalizer 1
16	Totalizer 2
17	Totalizer 3

9.3.5 Startup configuration



If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used. The following configuration is taken from the automation system.

Startup configuration (NSU)	<ul style="list-style-type: none"> ■ Management: <ul style="list-style-type: none"> ■ Software revision ■ Write protection ■ Web server functionality ■ System units: <ul style="list-style-type: none"> ■ Mass flow ■ Mass ■ Volume flow ■ Volume ■ Corrected volume flow ■ Corrected volume ■ Density ■ Reference density ■ Temperature ■ Pressure ■ Concentration application package: <ul style="list-style-type: none"> ■ Coefficients A0 to A4 ■ Coefficients B1 to B3 ■ Medium type ■ Sensor adjustment ■ Process parameter: <ul style="list-style-type: none"> ■ Damping (flow, density, temperature) ■ Flow override ■ Low flow cut off: <ul style="list-style-type: none"> ■ Assign process variable ■ Switch-on/switch-off point ■ Pressure shock suppression ■ Empty pipe detection: <ul style="list-style-type: none"> ■ Assign process variable ■ Limit values ■ Response time ■ Max. damping ■ Corrected volume flow calculation: <ul style="list-style-type: none"> ■ External reference density ■ Fixed reference density ■ Reference temperature ■ Linear expansion coefficient ■ Square expansion coefficient ■ Measuring mode: <ul style="list-style-type: none"> ■ Medium ■ Reference sound velocity ■ Temperature coefficient sound velocity ■ External compensation: <ul style="list-style-type: none"> ■ Pressure compensation ■ Pressure value ■ External pressure ■ Alarm delay ■ Diagnostic settings ■ Diagnostic behavior for diverse diagnostic information ■ Petroleum application package: <ul style="list-style-type: none"> ■ Petroleum mode ■ Water density unit ■ Water reference density unit ■ Oil density unit ■ Oil sample density ■ Oil sample temperature ■ Oil sample pressure ■ Water sample density ■ Water sample temperature ■ API commodity group ■ API table selection ■ Thermal expansion coefficient
-----------------------------	--

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  26
- "Post-connection check" checklist →  34

10.2 Identifying the device in the PROFINET network



A device can be quickly identified within a plant using the PROFINET flash function. If the PROFINET flash function is activated in the automation system, the LED indicating the network status flashes and the red backlight of the onsite display is switched on.

10.3 Startup parameterization

By activating the startup parameterization function (NSU: Normal Startup Unit), the configuration of the most important measuring device parameters is taken from the automation system.

 Configurations taken from the automation system .

10.4 Connecting via FieldCare

- For FieldCare connection
- For connecting via FieldCare →  46
- For the FieldCare →  47 user interface


10.5 Setting the operating language





Factory setting: English or ordered local language

The operating language can be set in FieldCare, DeviceCare or via the Web server:
Operation → Display language

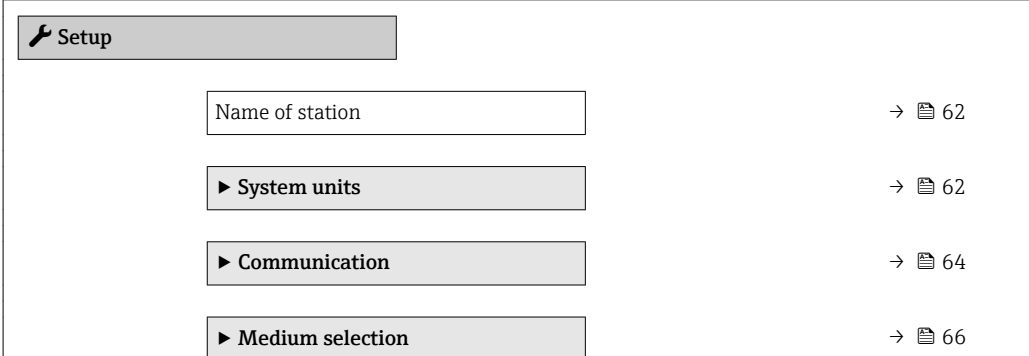10.6 Configuring the measuring device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.



Setup	
Name of station	→  62
► System units	→  62
► Communication	→  64
► Medium selection	→  66

► Low flow cut off	→ 68
► Partially filled pipe detection	→ 69
► Advanced setup	→ 70

10.6.1 Defining the tag name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station) of the PROFINET specification (data length: 255 bytes)

The device name can be changed via DIP switches or the automation system → 32.

The device name currently used is displayed in the **Name of station** parameter.

Navigation


"Setup" menu → Name of station

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Name of station	Name of the measuring point.	Max. 32 characters such as letters and numbers.	EH-PROMASS100 serial number of the device









10.6.2 Setting the system units



In the **System units** submenu the units of all the measured values can be set.

 Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.


Navigation

"Setup" menu → Advanced setup → System units

► System units	
Mass flow unit	→  63
Mass unit	→  63
Volume flow unit	→  63
Volume unit	→  63
Corrected volume flow unit	→  63
Corrected volume unit	→  63
Density unit	→  63
Reference density unit	→  63

Temperature unit	→  64
Pressure unit	→  64

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> l gal (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow parameter (→  82)	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nl/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nl Sft³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Simulation process variable Density adjustment (Expert menu) 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent <ul style="list-style-type: none"> kg/Nl lb/Sft³

Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ▪ Electronic temperature parameter (6053) ▪ Maximum value parameter (6051) ▪ Minimum value parameter (6052) ▪ External temperature parameter (6080) ▪ Maximum value parameter (6108) ▪ Minimum value parameter (6109) ▪ Carrier pipe temperature parameter (6027) ▪ Maximum value parameter (6029) ▪ Minimum value parameter (6030) ▪ Reference temperature parameter (1816) ▪ Temperature parameter 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ▪ °C ▪ °F
Pressure unit	Select process pressure unit. <i>Result</i> The unit is taken from: <ul style="list-style-type: none"> ▪ Pressure value parameter (→ ⓘ 67) ▪ External pressure parameter (→ ⓘ 67) ▪ Pressure value 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ▪ bar a ▪ psi a

10.6.3 Displaying the communication interface

The **Communication** submenu shows all the current parameter settings for selecting and configuring the communication interface.

Navigation

"Setup" menu → Communication

► Communication


MAC address → ⓘ 64

IP address → ⓘ 64

Subnet mask → ⓘ 65

Default gateway → ⓘ 65

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
MAC address	Displays the MAC address of the measuring device.  MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.
IP address	Displays the IP address of the Web server of the measuring device.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0

Parameter	Description	User interface	Factory setting
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0

10.6.4 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu → Medium selection

► Medium selection

Select medium

→ 67

Select gas type

→ 67

Reference sound velocity

→ 67

Temperature coefficient sound velocity

→ 67

Pressure compensation

→ 67

Pressure value

→ 67

External pressure

→ 67

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select medium	–	Select medium type.	<ul style="list-style-type: none"> ■ Liquid ■ Gas 	Liquid
Select gas type	The Gas option is selected in the Select medium parameter.	Select measured gas type.	<ul style="list-style-type: none"> ■ Air ■ Ammonia NH₃ ■ Argon Ar ■ Sulfur hexafluoride SF₆ ■ Oxygen O₂ ■ Ozone O₃ ■ Nitrogen oxide NO_x ■ Nitrogen N₂ ■ Nitrous oxide N₂O ■ Methane CH₄ ■ Hydrogen H₂ ■ Helium He ■ Hydrogen chloride HCl ■ Hydrogen sulfide H₂S ■ Ethylene C₂H₄ ■ Carbon dioxide CO₂ ■ Carbon monoxide CO ■ Chlorine Cl₂ ■ Butane C₄H₁₀ ■ Propane C₃H₈ ■ Propylene C₃H₆ ■ Ethane C₂H₆ ■ Others 	Methane CH ₄
Reference sound velocity	In the Select gas type parameter, the Others option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	415.0 m/s
Temperature coefficient sound velocity	The Others option is selected in the Select gas type parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number	0 (m/s)/K
Pressure compensation	–	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value 	Off
Pressure value	The Fixed value option is selected in the Pressure compensation parameter.	Enter process pressure to be used for pressure correction.	Positive floating-point number	0 bar
External pressure	The External value option is selected in the Pressure compensation parameter.	Shows the external, fixed process pressure value.	Positive floating-point number	0 bar

10.6.5 Configuring the low flow cut off

The **Low flow cut off** submenu contains the parameters that must be set in order to configure the low flow cut off.

Navigation

"Setup" menu → Low flow cut off

► Low flow cut off	
Assign process variable	→ 68
On value low flow cutoff	→ 68
Off value low flow cutoff	→ 68
Pressure shock suppression	→ 68

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none"> Off Mass flow Volume flow Corrected volume flow 	Mass flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 68): <ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow 	Enter on value for low flow cut off.	Positive floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 68): <ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow 	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→ 68): <ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow 	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

10.6.6 Configuring the partial filled pipe detection

The **Partially filled pipe detection** submenu contains parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu → Partially filled pipe detection


► Partially filled pipe detection	
Assign process variable	→ 69
Low value partial filled pipe detection	→ 69
High value partial filled pipe detection	→ 69
Response time part. filled pipe detect.	→ 69

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for partially filled pipe detection.	<ul style="list-style-type: none"> ■ Off ■ Density ■ Reference density 	Off
Low value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter (→ 69): <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	200
High value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter (→ 69): <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	6 000
Response time part. filled pipe detect.	One of the following options is selected in the Assign process variable parameter (→ 69): <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

10.7 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

 The number of submenus can vary depending on the device version, e.g. viscosity is available only with the Promass I.

Navigation

"Setup" menu → Advanced setup

▶ Advanced setup

Enter access code

→ 70

▶ Calculated values

→ 70

▶ Sensor adjustment

→ 72

▶ Totalizer 1 to n

→ 72

▶ Display

→ 74

▶ Viscosity

▶ Concentration

▶ Heartbeat setup

▶ Administration

→ 76

10.7.1 Using the parameter to enter the access code

Navigation

"Setup" menu → Advanced setup

Parameter overview with brief description

Parameter	Description	User entry
Enter access code	Enter access code to disable write protection of parameters.	0 to 9 999

10.7.2 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.


Navigation

"Setup" menu → Advanced setup → Calculated values


▶ Calculated values

▶ Corrected volume flow calculation


Corrected volume flow calculation

 →  71


External reference density

 →  71


Fixed reference density

 →  71


Reference temperature

 →  71

Linear expansion coefficient

 →  71

Square expansion coefficient

 →  71

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	–	Select reference density for calculating the corrected volume flow.	<ul style="list-style-type: none"> ■ Fixed reference density ■ Calculated reference density ■ Reference density by API table 53 ■ External reference density 	Calculated reference density
External reference density	In the Corrected volume flow calculation parameter, the External reference density option is selected.	Shows external reference density.	Floating point number with sign	–
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter.	Enter fixed value for reference density.	Positive floating-point number	1 kg/Nl
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter.	Enter reference temperature for calculating the reference density.	–273.15 to 99 999 °C	Country-specific: <ul style="list-style-type: none"> ■ +20 °C ■ +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0

10.7.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment

Installation direction

→ ⓘ 72

► Zero point adjustment

→ ⓘ 72

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<div><div>■ Flow in arrow direction</div><div>■ Flow against arrow direction</div></div>	Flow in arrow direction

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions→ ⓘ 133. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

► Zero point adjustment

Zero point adjustment control

→ ⓘ 72

Progress

→ ⓘ 72

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	<div><div>■ Cancel</div><div>■ Busy</div><div>■ Zero point adjust failure</div><div>■ Start</div></div>	Cancel
Progress	Shows the progress of the process.	0 to 100 %	–

10.7.4 Configuring the totalizer

In the **"Totalizer 1 to n"** submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n		
Assign process variable		→ 73
Unit totalizer		→ 73
Totalizer operation mode		→ 73
Failure mode		→ 73

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	Volume flow
Unit totalizer	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow[*] ■ Carrier mass flow[*] 	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kg ■ lb
Totalizer operation mode	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow[*] ■ Carrier mass flow[*] 	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow[*] ■ Carrier mass flow[*] 	Define the totalizer behavior in the event of a device alarm.	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	Actual value

* Visibility depends on order options or device settings

10.7.5 Carrying out additional display configurations


In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation


"Setup" menu → Advanced setup → Display

► Display


Format display

→  75


Value 1 display

→  75


0% bargraph value 1

→  75


100% bargraph value 1

→  75


Decimal places 1

→  75


Value 2 display

→  75


Decimal places 2

→  75


Value 3 display

→  75


0% bargraph value 3

→  76


100% bargraph value 3

→  76


Decimal places 3

→  76


Value 4 display

→  76


Decimal places 4

→  76


Display language

→  76


Display interval

→  76


Display damping

→  76


Header

→  76

Header text

→  76

Separator

→  76

Backlight

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Tube damping fluctuation 0 ■ Tube damping fluctuation 1 ■ Signal asymmetry ■ Exciter current 0 ■ None ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 75)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 75)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Display language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> ■ English ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ Bahasa Indonesia * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) * 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . (point) ■ , (comma) 	. (point)

* Visibility depends on order options or device settings

10.7.6 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu → Advanced setup → Administration

► Administration

Define access code

→ 77

Device reset

→ 77

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Define access code	Define release code for write access to parameters.	0 to 9999	0
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul style="list-style-type: none">■ Cancel■ To delivery settings■ Restart device■ Delete powerfail storage■ Delete T-DAT■ Delete factory data	Cancel

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation

► Simulation

Assign simulation process variable

→ 78

Process variable value

→ 78

Simulation device alarm

→ 78

Diagnostic event simulation

→ 78

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * 	Off
Process variable value	One of the following options is selected in the Assign simulation process variable parameter (→ 78): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * 	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Simulation device alarm	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process 	Process
Diagnostic event simulation	–	Select a diagnostic event to simulate this event.	<ul style="list-style-type: none"> ■ Off ■ Diagnostic event picklist (depends on the category selected) 	Off

* Visibility depends on order options or device settings

10.9 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:


- Write protection via access code for Web browser → 78
- Write protection via write protection switch → 79
- Write protection via startup parameterization → 61

10.9.1 Write protection via access code

With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

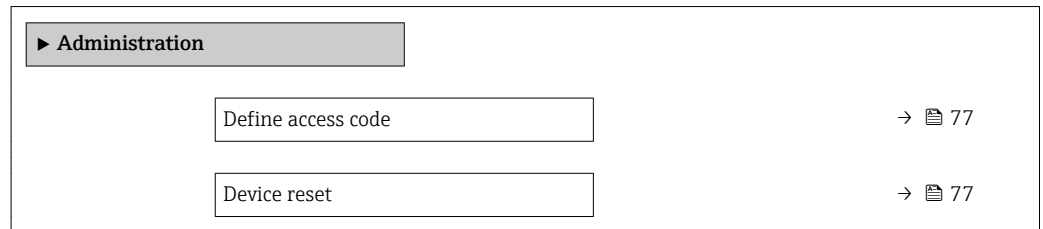**Defining the access code via the Web browser**

1. Navigate to the **Define access code** parameter.
2. Define a max. 16-digit numeric code as an access code.
3. Enter the access code again in the to confirm the code.
 - ↳ The Web browser switches to the login page.



If no action is performed for 10 minutes, the Web browser automatically returns to the login page.



- If parameter write protection is activated via an access code, it can also only be deactivated via this access code .
- The user role with which the user is currently logged on via Web browser is indicated by the **Access status tooling** parameter. Navigation path: Operation → Access status tooling

10.9.2 Write protection via write protection switch

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:


- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer

The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI-RJ45)
- Via PROFINET

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary
 - 142.

3.

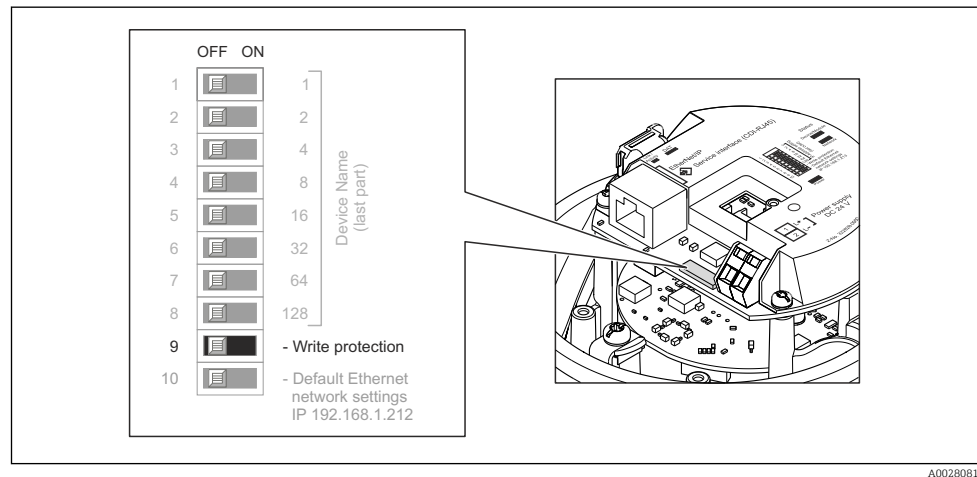

A0028081

Setting the write protection switch on the main electronics module to the **On** position enables hardware write protection. Setting the write protection switch on the main electronics module to the **Off** position (factory setting) disables hardware write protection.

- ↳ If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option ; if disabled, the **Locking status** parameter does not display any option .

4. Reverse the removal procedure to reassemble the transmitter.

10.9.3 Write protection via startup parameterization

Software write protection can be enabled via startup parameterization. If software write protection is enabled, device configuration can only be performed via the PROFINET controller. In this case, write access is **no longer** possible via:

- Acyclic PROFINET communication
- Service interface
- Web server



Startup parameterization settings .

11 Operation

11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Navigation

"Operation" menu → Locking status

Function scope of "Locking status" parameter

Options	Description
Hardware locked	The write protection switch (DIP switch) for hardware locking is activated on the I/O electronic module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language



Detailed information:

- To configure the operating language → 61
- For information on the operating languages supported by the measuring device → 144

11.3 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values

► Measured values

► Process variables

→ 81

► Totalizer

→ 83

11.3.1 "Measured variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.










Navigation

"Diagnostics" menu → Measured values → Measured variables







► Measured variables







Mass flow

→ 82

Volume flow	→  82
Corrected volume flow	→  82
Density	→  82
Reference density	→  82
Temperature	→  82
Pressure value	→  83
Concentration	→  83
Target mass flow	→  83
Carrier mass flow	→  83

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	–	Displays the mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  63).	Signed floating-point number
Volume flow	–	Displays the volume flow currently calculated. <i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  63).	Signed floating-point number
Corrected volume flow	–	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the Corrected volume flow unit parameter (→  63).	Signed floating-point number
Density	–	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter (→  63).	Signed floating-point number
Reference density	–	Displays the reference density currently calculated. <i>Dependency</i> The unit is taken from the Reference density unit parameter (→  63).	Signed floating-point number
Temperature	–	Shows the medium temperature currently measured. <i>Dependency</i> The unit is taken from the Temperature unit parameter (→  64).	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Pressure value	–	Displays either a fixed or external pressure value. <i>Dependency</i> The unit is taken from the Pressure unit parameter (→  64).	Signed floating-point number
Concentration	For the following order code: "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: ▪ Order code for "Application package", option ED "Concentration" ▪ The WT-% option or the User conc. option is selected in the Concentration unit parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the target fluid mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  63).	Signed floating-point number
Carrier mass flow	With the following conditions: ▪ Order code for "Application package", option ED "Concentration" ▪ The WT-% option or the User conc. option is selected in the Concentration unit parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the carrier fluid mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  63).	Signed floating-point number


11.3.2 "Totalizer" submenu


The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer

Totalizer value 1 to n
→  84

Totalizer overflow 1 to n
→  84

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	One of the following options is selected in the Assign process variable parameter Totalizer 1 to n submenu: <ul style="list-style-type: none">■ Volume flow■ Mass flow■ Corrected volume flow■ Target mass flow *■ Carrier mass flow *	Displays the current totalizer counter value.	Signed floating-point number
Totalizer overflow 1 to n	One of the following options is selected in the Assign process variable parameter Totalizer 1 to n submenu: <ul style="list-style-type: none">■ Volume flow■ Mass flow■ Corrected volume flow■ Target mass flow *■ Carrier mass flow *	Displays the current totalizer overflow.	Integer with sign

* Visibility depends on order options or device settings

11.4 Adapting the measuring device to the process conditions

- The following are available for this purpose:
- Basic settings using the **Setup** menu (→ 61)
 - Advanced settings using the **Advanced setup** submenu (→ 70)

11.5 Performing a totalizer reset

- The totalizers are reset in the **Operation** submenu:
- Control Totalizer
 - Reset all totalizers

Navigation
"Operation" menu → Totalizer handling

► Totalizer handling

Control Totalizer 1 to n

→ 85


Preset value 1 to n

→ 85

Reset all totalizers

→ 85

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold ■ Reset + totalize ■ Preset + totalize ■ Hold 	Totalize
Preset value 1 to n	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Specify start value for totalizer. <i>Dependency</i>  The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg ■ 0 lb
Reset all totalizers	–	Reset all totalizers to 0 and start.	<ul style="list-style-type: none"> ■ Cancel ■ Reset + totalize 	Cancel

* Visibility depends on order options or device settings

11.5.1 Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.

11.5.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage → 30.
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 122.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> Set the display brighter by simultaneously pressing + . Set the display darker by simultaneously pressing + .
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 122.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> Check the cable and the connector between the main electronics module and display module. Order spare part → 122.

For output signals

Error	Possible causes	Solution
Green power LED on the main electronics module of the transmitter is dark	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage → 30.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the OFF position → 79.
No connection via PROFINET	PROFINET bus cable connected incorrectly	Check terminal assignment → 28.
No connection via PROFINET	Device plug connected incorrectly	Check the pin assignment of the connector .

Error	Possible causes	Solution
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary → 44 .
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 41. 2. Check the network settings with the IT manager.
Not connecting to Web server	<ul style="list-style-type: none"> Incorrect IP address IP address is not known 	1. If addressing via hardware: open the transmitter and check the IP address configured (last octet). 2. Check the IP address of the measuring device with the network manager. 3. If the IP address is not known, set DIP switch no. 10 to ON, restart the device and enter the factory IP address 192.168.1.212.
	Web browser setting "Use a Proxy Server for Your LAN" is enabled	Disable the use of the proxy server in the Web browser settings of the computer. Using the example of MS Internet Explorer: 1. Under <i>Control Panel</i> open <i>Internet options</i> . 2. Select the <i>Connections</i> tab and then double-click <i>LAN settings</i> . 3. In the <i>LAN settings</i> disable the use of the proxy server and select <i>OK</i> to confirm.
	Apart from the active network connection to the measuring device, other network connections are also being used.	<ul style="list-style-type: none"> Make sure that no other network connections are established by the computer (also no WLAN) and close other programs with network access to the computer. If using a docking station for notebooks, make sure that a network connection to another network is not active.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version → 40. 2. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	<ul style="list-style-type: none"> JavaScript not enabled JavaScript cannot be enabled 	1. Enable JavaScript. 2. Enter <code>http://XXX.XXX.X.XXX/basic.html</code> as the IP address.

Error	Possible causes	Solution
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.


For system integration

Error	Possible causes	Solution
The device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

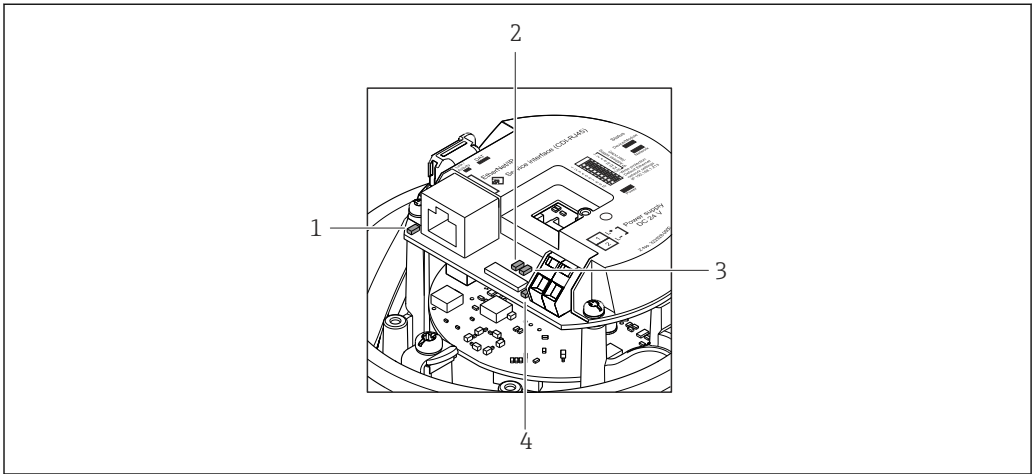

- 1 Link/Activity
- 2 Network status
- 3 Device status
- 4 Supply voltage


LED	Color	Meaning
Supply voltage	Off	Supply voltage is off or too low
	Green	Supply voltage is ok
Device status	Green	Device status is ok
	Flashing red	A device error of diagnostic behavior "Warning" has occurred
	Red	A device error of diagnostic behavior "Alarm" has occurred
Network status	Green	Device performing cyclic data exchange

LED	Color	Meaning
	Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off) The device does not have an IP address, no cyclic data exchange Flash frequency: 3 Hz
	Red	IP address is available but no connection to the automation system
	Flashing red	Cyclic connection was established but connection was dropped Flash frequency: 3 Hz
Link/Activity	Orange	Link available but no activity
	Flashing orange	Activity present

12.3 Diagnostic information in the Web browser

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

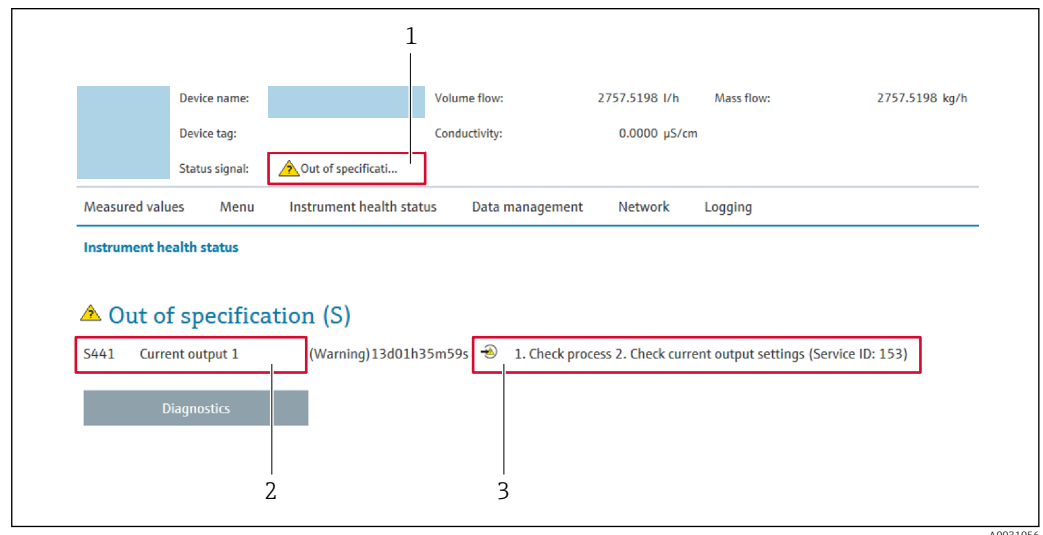

- 1 Status area with status signal
- 2 Diagnostic information → 90
- 3 Remedy information with Service ID



i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:


- Via parameter
- Via submenu → 116

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).


Symbol	Meaning
	Failure A device error has occurred. The measured value is no longer valid.
	Function check The device is in service mode (e.g. during a simulation).

Symbol	Meaning
	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value is still valid.

 The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

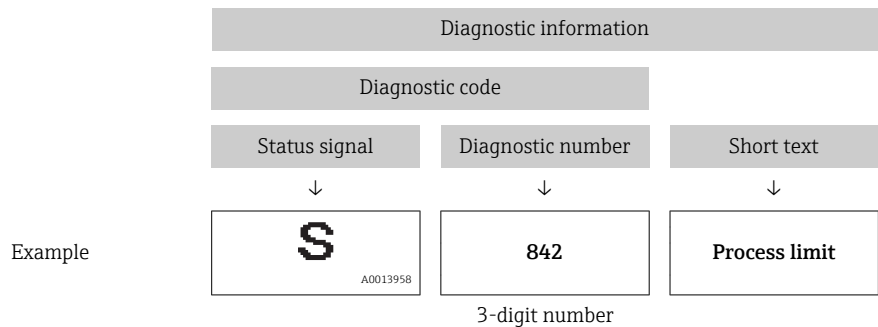


12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.4 Diagnostic information in DeviceCare or FieldCare

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

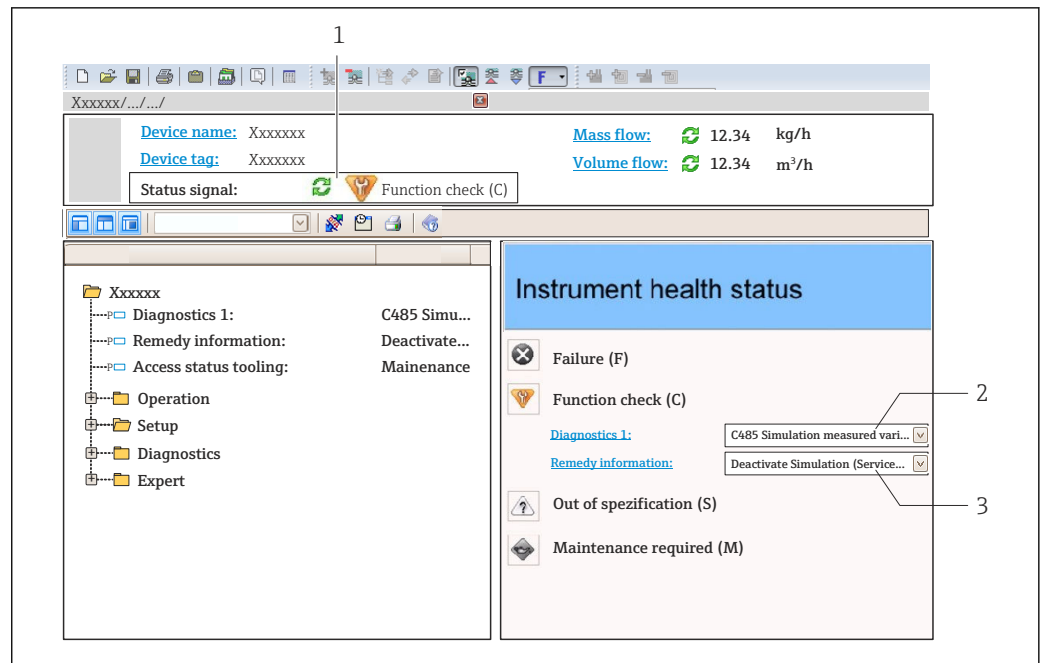

A0021799-EN


- 1 Status area with status signal
- 2 Diagnostic information → 90
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 116

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

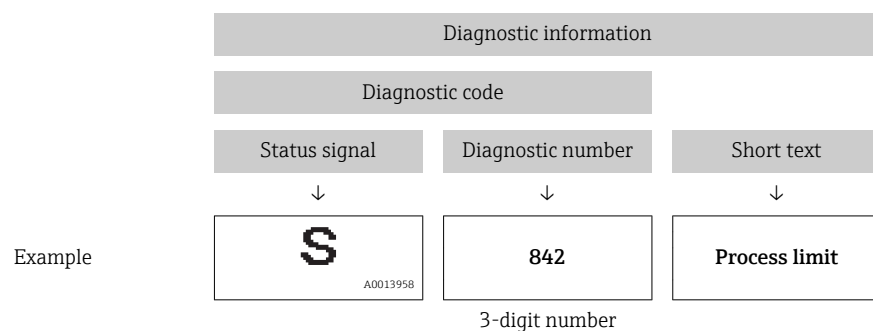

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.

12.5 Adapting the diagnostic information

12.5.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert → System → Diagnostic handling → Diagnostic behavior


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFINET and the totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFIBUS PA Profile 3.02 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

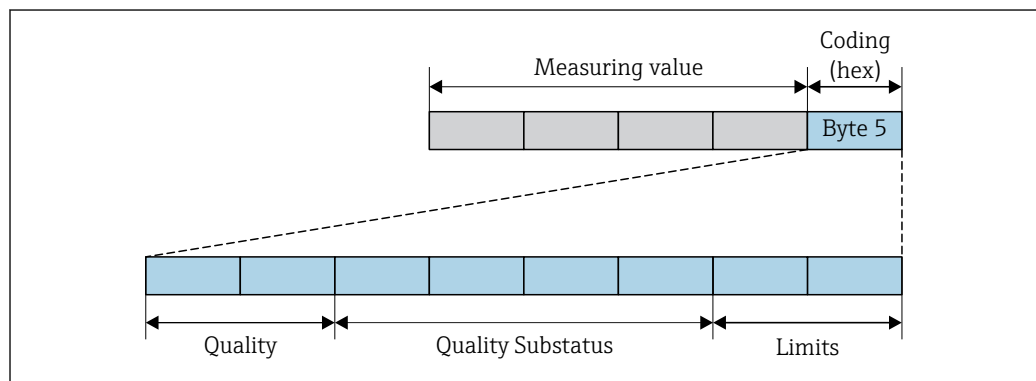

A0032228-EN

14 Structure of the status byte

The content of the status byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS PA Profile Specification 3.02 is transmitted to the the PROFINET controller via the status byte. The two bits for the limits always have the value 0.

Supported status information

Status	Coding (hex)
BAD - Maintenance alarm	0x24
BAD - Process related	0x28
BAD - Function check	0x3C
UNCERTAIN - Initial value	0x4F
UNCERTAIN - Maintenance demanded	0x68
UNCERTAIN - Process related	0x78
GOOD - OK	0x80
GOOD - Maintenance demanded	0xA8
GOOD - Function check	0xBC

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and on the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
→ 93
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
→ 93
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
→ 94
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
→ 94

Depending on the group in which the diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor: diagnostic number 000 to 199

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80	–	–
Off					

Diagnostic information pertaining to the electronics: diagnostic number 200 to 399

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning					

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Logbook entry only	GOOD	ok	0x80	–	–
Off					



Diagnostic information pertaining to the configuration: diagnostic number 400 to 599

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80	–	–
Off					

Diagnostic information pertaining to the process: diagnostic number 800 to 999

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80	–	–
Off					

12.6 Overview of diagnostic information

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  92

12.6.1 Diagnostic of sensor

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
022	Sensor temperature		1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
046	Sensor limit exceeded		1. Inspect sensor 2. Check process condition	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
062	Sensor connection		1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
082	Data storage		1. Check module connections 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
083	Memory content		1. Restart device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
140	Sensor signal		1. Check or change main electronics 2. Change sensor	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
144	Measuring error too high	1. Check or change sensor 2. Check process conditions	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
190	Special event 1	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
191	Special event 5	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
192	Special event 9		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
201	Device failure		1. Restart device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
242	Software incompatible		1. Check software 2. Flash or change main electronics module	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
252	Modules incompatible		1. Check electronic modules 2. Change electronic modules	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
262	Module connection		1. Check module connections 2. Change main electronics	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
270	Main electronic failure		Change main electronic module	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
271	Main electronic failure	1. Restart device 2. Change main electronic module	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
272	Main electronic failure	1. Restart device 2. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
273	Main electronic failure	Change electronic	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
274	Main electronic failure		Change electronic	<div><div>■</div>Mass flow</div> <div><div>■</div>Sensor integrity</div> <div><div>■</div>Corrected volume flow</div> <div><div>■</div>Volume flow</div>
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
283	Memory content		1. Reset device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
311	Electronic failure		1. Reset device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
311	Electronic failure	1. Do not reset device 2. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
382	Data storage	1. Insert DAT module 2. Change DAT module	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
383	Memory content	1. Restart device 2. Check or change DAT module 3. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
390	Special event 2	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
391	Special event 6	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
392	Special event 10	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
410	Data transfer		1. Check connection 2. Retry data transfer	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
412	Processing download		Download active, please wait	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Initial value		
	Coding (hex)	0x4C to 0x4F		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
437	Configuration incompatible		1. Restart device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
438	Dataset		1. Check data set file 2. Check device configuration 3. Up- and download new configuration	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Maintenance demanded		
	Coding (hex)	0x68 to 0x6B		
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
453	Flow override		Deactivate flow override	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
484	Simulation Failure Mode		Deactivate simulation	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	C		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
485	Simulation measured variable	Deactivate simulation	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
495	Diagnostic event simulation	Deactivate simulation	–
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
537	Configuration	1. Check IP addresses in network 2. Change IP address	–
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
590	Special event 3		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
591	Special event 7		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
592	Special event 11		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.4 Diagnostic of process

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
825	Operating temperature		1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
825	Operating temperature		1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
825	Operating temperature		1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Process related		
	Coding (hex)	0x28 to 0x2B		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
830	Sensor temperature too high		Reduce ambient temp. around the sensor housing	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
831	Sensor temperature too low		Increase ambient temp. around the sensor housing	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
832	Electronic temperature too high		Reduce ambient temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
833	Electronic temperature too low		Increase ambient temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
834	Process temperature too high		Reduce process temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
835	Process temperature too low		Increase process temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
842	Process limit		Low flow cut off active! 1. Check low flow cut off configuration	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
843	Process limit		Check process conditions	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
862	Partly filled pipe		1. Check for gas in process 2. Adjust detection limits	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
882	Input signal	1. Check input configuration 2. Check external device or process conditions	<ul style="list-style-type: none"> ■ Density ■ Mass flow ■ Reference density ■ Corrected volume flow ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
910	Tubes not oscillating	1. Check electronic 2. Inspect sensor	<ul style="list-style-type: none"> ■ Carrier mass flow ■ Concentration ■ Density ■ Mass flow ■ Sensor integrity ■ Reference density ■ Corrected volume flow ■ Target mass flow ■ Temperature ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
912	Medium inhomogeneous	1. Check process cond. 2. Increase system pressure	<ul style="list-style-type: none"> ■ Carrier mass flow ■ Concentration ■ Density ■ Dynamic viscosity ■ Kinematic viscosity ■ Mass flow ■ Sensor integrity ■ Reference density ■ Corrected volume flow ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
912	Inhomogeneous		1. Check process cond. 2. Increase system pressure	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
913	Medium unsuitable		1. Check process conditions 2. Check electronic modules or sensor	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
944	Monitoring failed		Check process conditions for Heartbeat Monitoring	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temperature
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
948	Tube damping too high		Check process conditions	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
990	Special event 4		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		


Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
991	Special event 8		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		




Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
992	Special event 12		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		



1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.






 To call up the measures to rectify a diagnostic event:

- Via Web browser →  90
- Via "FieldCare" operating tool →  91
- Via "DeviceCare" operating tool →  91


 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu
→  116

Navigation

"Diagnostics" menu

 Diagnostics		
Actual diagnostics	→	 116
Previous diagnostics	→	 116
Operating time from restart	→	 116
Operating time	→	 116

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)




12.8 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  90
- Via "FieldCare" operating tool →  91
- Via "DeviceCare" operating tool →  91

12.9 Event logbook

12.9.1 Reading out the event logbook



A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list


A maximum of 20 event messages can be displayed in chronological order.




The event history includes entries for:

- Diagnostic events →  94
- Information events →  117

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ☞: Occurrence of the event
 - ⌚: End of the event
- Information event
 - ☞: Occurrence of the event

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  90
- Via "FieldCare" operating tool →  91
- Via "DeviceCare" operating tool →  91

 For filtering the displayed event messages →  117

12.9.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)


12.9.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.


Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok

Info number	Info name
I1256	Display: access status changed
I1335	Firmware changed
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1446	Device verification active
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off
I1451	Monitoring on
I1457	Measured error verification failed
I1459	I/O module verification failed
I1460	Sensor integrity verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verif. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1627	Web server login successful
I1631	Web server access changed
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated

12.10 Resetting the measuring device

Using the **Device reset** parameter (→  77) it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.10.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	<p>Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.</p> <p> This option is not visible if no customer-specific settings have been ordered.</p>
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

12.11 Device information




The **Device information** submenu contains all parameters that display different information for device identification.



Navigation

"Diagnostics" menu → Device information

► Device information		
Device tag		→ ⓘ 119
Serial number		→ ⓘ 119
Firmware version		→ ⓘ 119
Device name		
Order code		→ ⓘ 119
Extended order code 1		→ ⓘ 119
Extended order code 2		→ ⓘ 120
Extended order code 3		→ ⓘ 120
ENP version		→ ⓘ 120


Parameter overview with brief description


Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters such as lower-case letters or numbers.	eh-cubemass100-xxxxx
Serial number	Shows the serial number of the measuring device.	A maximum of 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	–
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.		–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–


Parameter	Description	User interface	Factory setting
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

12.12 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware Changes	Documentation type	Documentation
12.2015	01.00.zz	Option 68	Original firmware	Operating Instructions	BA01425D/06/EN/01.15

 It is possible to flash the firmware to the current version using the service interface.

 For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance tasks


No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.


13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device
→  138.

13.2 Measuring and test equipment


Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  124 →  125

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→ 119) in the **Device information** submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the website for more information:
<http://www.endress.com/support/return-material>
2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

14.5 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions.

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.
2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:





- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.

15 Accessories



Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories



15.2 Communication-specific accessories

Accessories	Description
Commubox FXA291	<p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> Technical Information TI405C/07</p>
Fieldgate FXA42	<p>Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01297S ■ Operating Instructions BA01778S ■ Product page: www.endress.com/fxa42 </p>
Field Xpert SMT70	<p>The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.</p> <p>This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01342S ■ Operating Instructions BA01709S ■ Product page: www.endress.com/smt70 </p>
Field Xpert SMT77	<p>The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01418S ■ Operating Instructions BA01923S ■ Product page: www.endress.com/smt77 </p>

15.3 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. <p>Applicator is available:</p> <ul style="list-style-type: none"> Via the Internet: https://portal.endress.com/webapp/applicator As a downloadable DVD for local PC installation.
W@M	<p>W@M Life Cycle Management</p> <p>Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.</p> <p>W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.</p> <p>Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement</p>
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool to connect and configure Endress+Hauser field devices.</p> <p> Innovation brochure IN01047S</p>

15.4 System components


Accessories	Description
Memograph M graphic data manager	<p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> <ul style="list-style-type: none"> Technical Information TI00133R Operating Instructions BA00247R </p>
iTEMP	<p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.</p> <p> "Fields of Activity" document FA00006T</p>

16 Technical data

16.1 Application

The measuring device is intended only for the flow measurement of liquids and gases.
Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.
To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	<p>The device consists of a transmitter and a sensor.</p> <p>The device is available as a compact version: The transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the device →  12</p>

16.3 Input

Measured variable **Direct measured variables**

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range **Measuring ranges for liquids**

DN		Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
1	$\frac{1}{24}$	0 to 20	0 to 0.735
2	$\frac{1}{12}$	0 to 100	0 to 3.675
4	$\frac{1}{6}$	0 to 450	0 to 16.54
6	$\frac{1}{4}$	0 to 1000	0 to 36.75

Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

$\dot{m}_{\max(G)}$	Maximum full scale value for gas [kg/h]
$\dot{m}_{\max(F)}$	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$
ρ_G	Gas density in [kg/m ³] at operating conditions
x	Constant dependent on nominal diameter

DN		x
[mm]	[in]	[kg/m ³]
1	$\frac{1}{24}$	20
2	$\frac{1}{12}$	20
4	$\frac{1}{6}$	20
6	$\frac{1}{4}$	20

Recommended measuring range

"Flow limit" section →  139

Operable flow range Over 1000 : 1.



Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

 Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  125

It is recommended to read in external measured values to calculate the following measured variables:

- Mass flow
- Corrected volume flow

Digital communication

The measured values are written from the automation system to the measuring device via PROFINET.

16.4 Output

Output signal

PROFINET

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

Signal on alarm


Depending on the interface, failure information is displayed as follows.

PROFINET

Device diagnostics	According to "Application Layer protocol for decentralized periphery", Version 2.3
--------------------	--

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.

 Status signal as per NAMUR recommendation NE 107

Interface/protocol


- Via digital communication:
PROFINET
- Via service interface
CDI-RJ45 service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web browser

Plain text display	With information on cause and remedial measures
---------------------------	---

Light emitting diodes (LED)

Status information	<p>Status indicated by various light emitting diodes</p> <p>The following information is displayed depending on the device version:</p> <ul style="list-style-type: none"> ■ Supply voltage active ■ Data transmission active ■ Device alarm/error has occurred ■ PROFINET network available ■ PROFINET connection established ■ PROFINET blinking feature <p> Diagnostic information via light emitting diodes</p>
---------------------------	--



Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation The following connections are galvanically isolated from each other:

- Outputs
- Power supply

Protocol-specific data**Protocol-specific data**

Protocol	"Application layer protocol for decentral device periphery and distributed automation", version 2.3
Conformity class	B
Communication type	100 MBit/s
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x844A
Device description files (GSD, DTM)	<p>Information and files under:</p> <ul style="list-style-type: none"> ■ www.endress.com On the product page for the device: Documents/Software → Device drivers ■ www.profibus.org
Baud rates	Automatic 100 Mbit/s with full-duplex detection
Cycle times	From 8 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Supported connections	<ul style="list-style-type: none"> ■ 1 x AR (Application Relation) ■ 1 x Input CR (Communication Relation) ■ 1 x Output CR (Communication Relation) ■ 1 x Alarm CR (Communication Relation)
Configuration options for measuring device	<ul style="list-style-type: none"> ■ DIP switches on the electronics module, for device name assignment (last part) ■ Manufacturer-specific software (FieldCare, DeviceCare) ■ Web browser ■ Device master file (GSD), can be read out via the integrated Web server of the measuring device
Configuration of the device name	<ul style="list-style-type: none"> ■ DIP switches on the electronics module, for device name assignment (last part) ■ DCP protocol

Output values (from measuring device to automation system)	Analog Input module (slot 1 to 14) <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow ■ Density ■ Reference density ■ Concentration ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Frequency fluctuation ■ Oscillation damping ■ Tube damping fluctuation ■ Signal asymmetry ■ Exciter current Discrete Input module (slot 1 to 14) <ul style="list-style-type: none"> ■ Empty pipe detection ■ Low flow cut off Diagnostics Input module (slot 1 to 14) <ul style="list-style-type: none"> ■ Last diagnostics ■ Current diagnosis Totalizer 1 to 3 (slot 15 to 17) <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow Heartbeat Verification module (fixed assignment) Verification status (slot 23) <div>  The range of options increases if the measuring device has one or more application packages. </div>
Input values (from automation system to measuring device)	Analog Output module (fixed assignment) <ul style="list-style-type: none"> ■ External pressure (slot 18) ■ External temperature (slot 19) ■ External reference density (slot 20) Discrete Output module (fixed assignment) <ul style="list-style-type: none"> ■ Activate/deactivate positive zero return (slot 21) ■ Perform zero point adjustment (slot 22) Totalizer 1 to 3 (slot 15 to 17) <ul style="list-style-type: none"> ■ Totalize ■ Reset and hold ■ Preset and hold ■ Stop ■ Operating mode configuration: <ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total Heartbeat Verification module (fixed assignment) Start verification (slot 23) <div>  The range of options increases if the measuring device has one or more application packages. </div>
Supported functions	<ul style="list-style-type: none"> ■ Identification & Maintenance Simple device identification via: <ul style="list-style-type: none"> ■ Control system ■ Nameplate ■ Measured value status The process variables are communicated with a measured value status ■ Blinking feature via the local display for simple device identification and assignment

Administration of software options

Input/output value	Process variable	Category	Slot
Output value	Mass flow	Process variable	1 to 14
	Volume flow		
	Corrected volume flow		
	Density		
	Reference density		
	Temperature		
	Electronic temperature		
	Oscillation frequency		
	Frequency fluctuation		
	Oscillation damping		
	Oscillation frequency		
	Signal asymmetry		
	Exciter current		
	Empty pipe detection		
	Low flow cut off		
	Current device diagnostics		
	Previous device diagnostics		
Output value	Target mass flow	Concentration ¹⁾	1 to 14
	Carrier mass flow		
	Concentration		
Output value	Carrier pipe temperature	Heartbeat ²⁾	1 to 14
	Oscillation damping 1		
	Oscillation frequency 1		
	Oscillation amplitude 0		
	Oscillation amplitude 1		
	Frequency fluctuation 1		
	Tube damping fluctuation 1		
	Exciter current 1		
Input value	External density	Process monitoring	18
	External temperature		19
	External reference density		20
	Flow override		21
	Zero point adjustment		22
	Status verification	Heartbeat Verification ²⁾	23


1) Only available with the "Concentration" application package.

2) Only available with the "Heartbeat" application package.

Startup configuration

Startup configuration (NSU)	<p>If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used.</p> <p>The following configuration is taken from the automation system:</p> <ul style="list-style-type: none">■ Management<ul style="list-style-type: none">■ Software revision■ Write protection■ System units<ul style="list-style-type: none">■ Mass flow■ Mass■ Volume flow■ Volume■ Corrected volume flow■ Corrected volume■ Density■ Reference density■ Temperature■ Pressure■ Concentration application package<ul style="list-style-type: none">■ Coefficients A0 to A4■ Coefficients B1 to B3■ Sensor adjustment■ Process parameter<ul style="list-style-type: none">■ Damping (flow, density, temperature)■ Flow override■ Low flow cut off<ul style="list-style-type: none">■ Assign process variable■ Switch-on/switch-off point■ Pressure shock suppression■ Empty pipe detection<ul style="list-style-type: none">■ Assign process variable■ Limit values■ Response time■ Max. damping■ Corrected volume flow calculation<ul style="list-style-type: none">■ External reference density■ Fixed reference density■ Reference temperature■ Linear expansion coefficient■ Square expansion coefficient■ Measuring mode<ul style="list-style-type: none">■ Medium■ Gas type■ Reference sound velocity■ Temperature coefficient sound velocity■ External compensation<ul style="list-style-type: none">■ Pressure compensation■ Pressure value■ External pressure■ Diagnostic settings■ Diagnostic behavior for diverse diagnostic information
-----------------------------	--

16.5 Power supply

Terminal assignment	→  28
Supply voltage	The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

Power consumption

Transmitter

Order code for "Output"	Maximum Power consumption
Option R: PROFINET	3.5 W

Current consumption

Transmitter

Order code for "Output"	Maximum Current consumption	Maximum switch-on current
Option R: PROFINET	145 mA	18 A (< 0.125 ms)


Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→  29

Potential equalization

→  31


Terminals

TransmitterSpring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - M20
 - G ½"
 - NPT ½"



Cable specification

→  27


16.6 Performance characteristics

Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

 To obtain measured errors, use the *Applicator* sizing tool →  125

Maximum measured error

o.r. = of reading; 1 g/cm³ = 1 kg/l; T = medium temperature**Base accuracy**
 Design fundamentals →  136
Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.50 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration ¹⁾	Wide-range Density specification ^{2) 3)}
[g/cm ³]	[g/cm ³]	[g/cm ³]
±0.0005	±0.02	±0.002

1) Valid over the entire temperature and density range

2) Valid range for special density calibration: 0 to 2 g/cm³, +5 to +80 °C (+41 to +176 °F)

3) Order code for "Application package", option EE "Special density"

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T - 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
1	1/24	0.0008	0.00003
2	1/12	0.002	0.00007
4	1/8	0.014	0.0005
6	1/4	0.02	0.0007

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
1	20	2	1	0.4	0.2	0.04
2	100	10	5	2	1	0.2
4	450	45	22.5	9	4.5	0.9
6	1000	100	50	20	10	2

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
1/24	0.735	0.074	0.037	0.015	0.007	0.001
1/12	3.675	0.368	0.184	0.074	0.037	0.007
1/8	16.54	1.654	0.827	0.331	0.165	0.033
1/4	36.75	3.675	1.838	0.735	0.368	0.074

Accuracy of outputs

The output accuracy must be factored into the measured error if analog outputs are used, but can be ignored for fieldbus outputs (e.g. Modbus RS485, EtherNet/IP).

The outputs have the following base accuracy specifications.

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability

Design fundamentals → 136

Mass flow and volume flow (liquids)

$\pm 0.05 \text{ \% o.r.}$

Mass flow (gases)

$\pm 0.25 \text{ \% o.r.}$

Density (liquids)

$\pm 0.00025 \text{ g/cm}^3$

Temperature

$\pm 0.25 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C} (\pm 0.45 \text{ }^\circ\text{F} \pm 0.0015 \cdot (T-32) \text{ }^\circ\text{F})$

Response time

The response time depends on the configuration (damping).

Influence of medium temperature**Mass flow and volume flow**

o.f.s. = of full scale value

When there is a difference between the temperature for zero point adjustment and the process temperature, the additional measured error of the sensor is typically $\pm 0.0002 \text{ \% o.f.s./}^\circ\text{C}$ ($\pm 0.0001 \text{ \% o. f.s./}^\circ\text{F}$).


The effect is reduced if zero point adjustment is performed at process temperature.

Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is $\pm 0.00005 \text{ g/cm}^3 \text{ }^\circ\text{C}$ ($\pm 0.000025 \text{ g/cm}^3 \text{ }^\circ\text{F}$). Field density calibration is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range (→ 133) the measured error is $\pm 0.00005 \text{ g/cm}^3 \text{ }^\circ\text{C}$ ($\pm 0.000025 \text{ g/cm}^3 \text{ }^\circ\text{F}$)

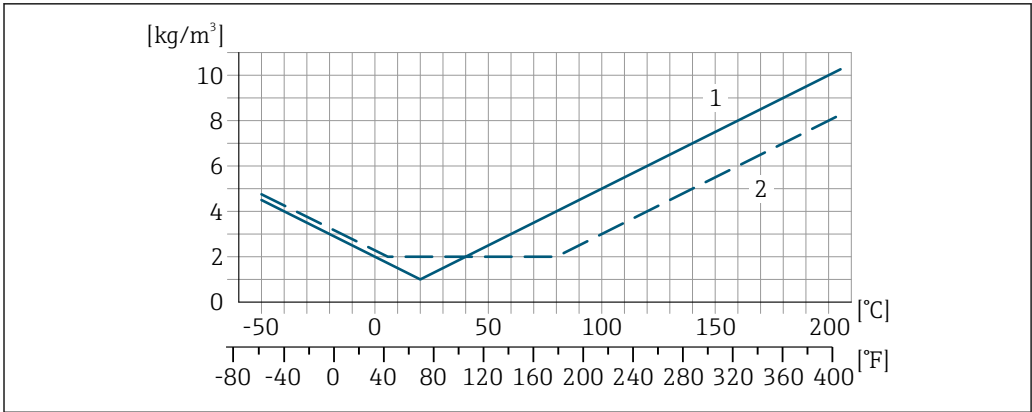

A0016617

- 1 Field density calibration, for example at +20 °C (+68 °F)
- 2 Special density calibration

Temperature
±0.005 · T °C (± 0.005 · (T – 32) °F)

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

- It is possible to compensate for the effect by:
 - Reading in the current pressure measured value via the current input.
 - Specifying a fixed value for the pressure in the device parameters.

Operating Instructions.

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
1	1/24	–0.001	–0.00007
2	1/12	0	0
4	1/8	–0.005	–0.0004
6	1/4	–0.003	–0.0002

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.
MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021335</small>	$\pm \text{BaseRepeat}$ <small>A0021340</small>
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021336</small>	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021337</small>

Example for maximum measured error

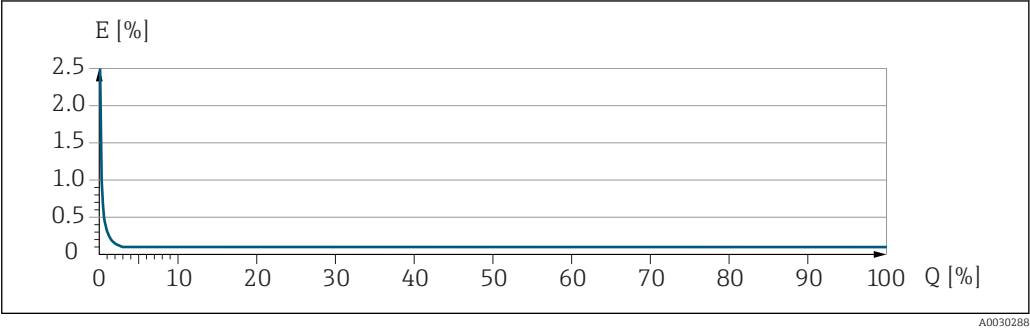

E Maximum measured error in % o.r. (example)
Q Flow rate in % of maximum full scale value

16.7 Installation

Installation conditions → 19

16.8 Environment

Ambient temperature range → 21 → 21

Temperature tables

- Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
- For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature -40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F) (standard version)
-50 to +80 °C (-58 to +176 °F) (Order code for "Test, certificate", option JM)

Climate class DIN EN 60068-2-38 (test Z/AD)


Degree of protection **Transmitter and sensor**
■ As standard: IP66/67, type 4X enclosure
■ When housing is open: IP20, type 1 enclosure
■ Display module: IP20, type 1 enclosure

Vibration resistance	<div><div></div><div><ul style="list-style-type: none">■ Oscillation, sinusoidal, following IEC 60068-2-6<ul style="list-style-type: none">■ 2 to 8.4 Hz, 3.5 mm peak■ 8.4 to 2 000 Hz, 1 g peak■ Oscillation, broadband noise following IEC 60068-2-64<ul style="list-style-type: none">■ 10 to 200 Hz, 0.003 g²/Hz■ 200 to 2 000 Hz, 0.001 g²/Hz■ Total: 1.54 g rms</div></div>
Shock resistance	Shock, half-sine according to IEC 60068-2-27 6 ms 30 g
Shock resistance	Shock due to rough handling following IEC 60068-2-31
Interior cleaning	<div><div></div><div><ul style="list-style-type: none">■ SIP cleaning■ CIP cleaning</div></div>
Electromagnetic compatibility (EMC)	<div><div></div><div><ul style="list-style-type: none">■ As per IEC/EN 61326■ Complies with emission limits for industry as per EN 55011 (Class A)</div></div> <div><div></div><div>Details are provided in the Declaration of Conformity.</div></div>

16.9 Process

Medium temperature range	−50 to +205 °C (−58 to +401 °F)
--------------------------	---------------------------------

Dependency of ambient temperature on medium temperature

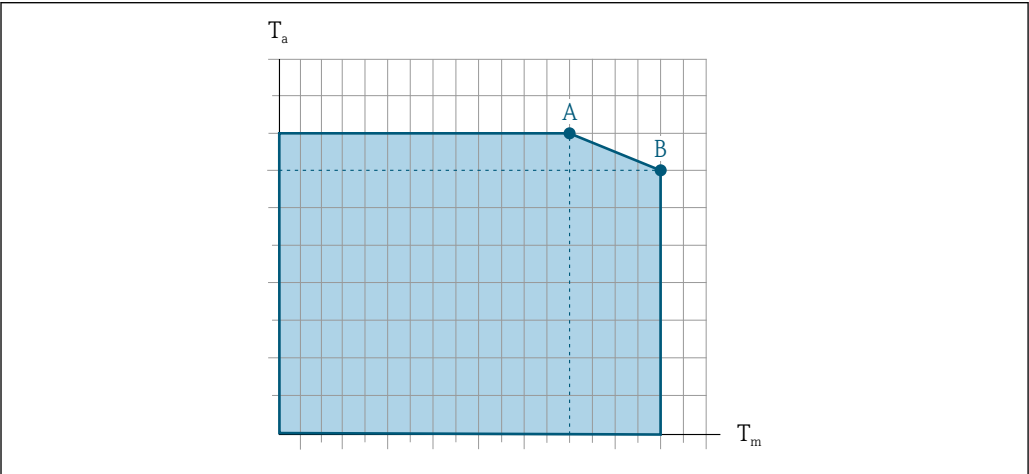

15 Exemplary representation, values in the table below.

T_a Ambient temperature range

T_m Medium temperature

A Maximum permitted medium temperature T_m at $T_{a\ max} = 60\ ^\circ\text{C}$ (140 °F); higher medium temperatures T_m require a reduced ambient temperature T_a











B Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

Values for devices used in the hazardous area:
Separate Ex documentation (XA) for the device .

Seals

For mounting sets with screwed-on connections:

- Viton: -15 to +200 °C (-5 to +392 °F)
- EPDM: -40 to +160 °C (-40 to +320 °F)
- Silicon: -60 to +200 °C (-76 to +392 °F)
- Kalrez: -20 to +275 °C (-4 to +527 °F)

Density	0 to 5 000 kg/m ³ (0 to 312 lb/cf)
Pressure-temperature ratings	 An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document
Sensor housing	The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.
Rupture disk	To guarantee the safety of the measuring device, the device version with a rupture disk with a triggering pressure of 10 to 15 bar (145 to 217.5 psi) is the standard version used. Special mounting instructions →  22.
Flow limit	<p>Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.</p> <p> For an overview of the full scale values for the measuring range, see the "Measuring range" section →  127</p> <ul style="list-style-type: none"> ■ The minimum recommended full scale value is approx. 1/20 of the maximum full scale value ■ In most applications, 20 to 50 % of the maximum full scale value can be considered ideal ■ A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s). ■ For gas measurement the following rules apply: <ul style="list-style-type: none"> ■ The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach). ■ The maximum mass flow depends on the density of the gas: formula →  127 <p> To calculate the flow limit, use the <i>Applicator</i> sizing tool →  125</p>
Pressure loss	 To calculate the pressure loss, use the <i>Applicator</i> sizing tool →  125
System pressure	→  21

16.10 Mechanical construction

Design, dimensions

 For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

All values (weight exclusive of packaging material) refer to devices with VCO couplings. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".


Weight in SI units

DN [mm]	Weight [kg]
1 to 6	3.5


Weight in US units


DN [in]	Weight [lbs]
1/24 to 1/4	8

- Materials
- Transmitter housing**

 - Order code for "Housing", option **A** "Compact, aluminum coated": Aluminum, AlSi10Mg, coated
 - Order code for "Housing", option **B** "Compact, hygienic, stainless": Hygienic version, stainless steel 1.4301 (304)
 - Order code for "Housing", option **C** "Ultra-compact, hygienic, stainless": Hygienic version, stainless steel 1.4301 (304)
 - Window material for optional local display (→  142):
 - For order code for "Housing", option **A**: glass
 - For order code for "Housing", option **B** and **C**: plastic

Cable entries/cable glands

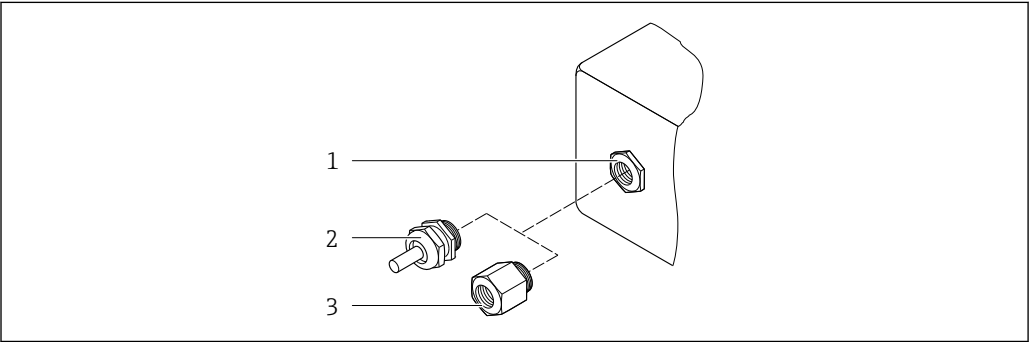

 16 Possible cable entries/cable glands

1 Female thread M20 × 1.5
2 Cable gland M20 × 1.5
3 Adapter for cable entry with female thread G 1/2" or NPT 1/2"

Order code for "Housing", option A "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Nickel-plated brass
Adapter for cable entry with female thread G ½"	
Adapter for cable entry with female thread NPT ½"	

Order code for "Housing", option B "Compact, hygienic, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with female thread G ½"	
Adapter for cable entry with female thread NPT ½"	

Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none"> Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4539 (904L)

Process connections

VCO connection:



VCO connection: stainless steel, 1.4539 (904L)

Adapter for DN 15 flange according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:

Stainless steel, 1.4539 (904L)

NPTF adapter:

Stainless steel, 1.4539 (904L)

 Available process connections →  142

Seals

Welded process connections without internal seals

Seals for mounting kit

- Viton
- EPDM
- Silicone
- Kalrez

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

Safety Barrier Promass 100

Housing: Polyamide

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2512N) flange
 - ASME B16.5 flange
 - JIS B2220 flange
- VCO connections:
 - 4-VCO-4
 - 8-VCO-4
- Adapter for VCO connections:
 - Flange EN 1092-1 (DIN 2501)
 - Flange ASME B16.5
 - Flange JIS B2220
 - NPT



Process connection materials

Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered.
Not polished

16.11 Human interface

Local display

The local display is only available with the following device order code:
Order code for "Display; operation", option **B**: 4-line; illuminated, via communication

Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

Disconnecting the local display from the main electronics module



In the case of the "Compact, aluminum coated" housing version, the local display must only be disconnected manually from the main electronics module. In the case of the "Compact, hygienic, stainless" and "Ultra-compact, hygienic, stainless" housing versions, the local display is integrated in the housing cover and is disconnected from the main electronics module when the housing cover is opened.

"Compact, aluminum coated" housing version

The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.

For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:

1. Press in the side latches of the local display.
2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so.


Once the work is completed, plug the local display back on.

Remote operation

Via PROFINET network

This communication interface is available in device versions with PROFINET.

Star topology

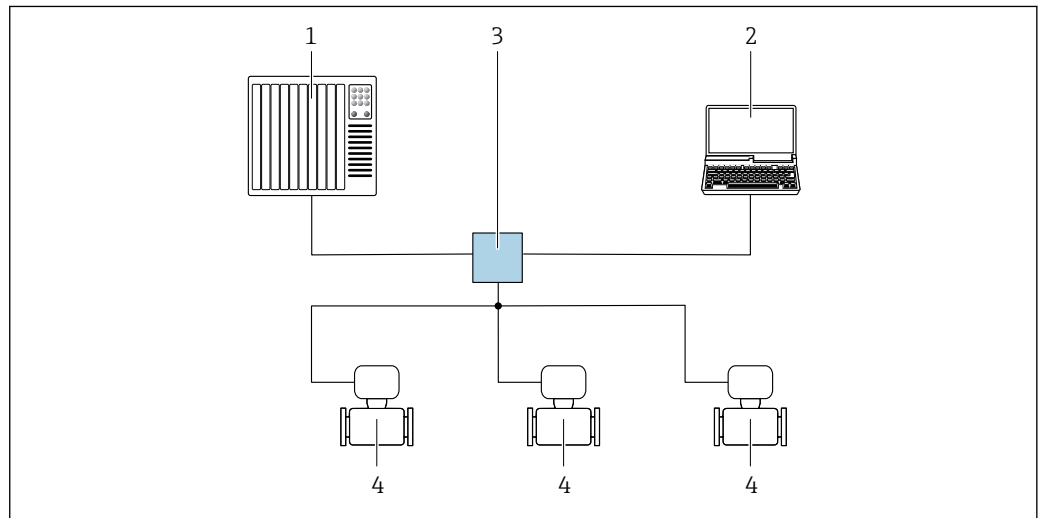

A0026545


17 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Service interface

Via service interface (CDI-RJ45)

PROFINET

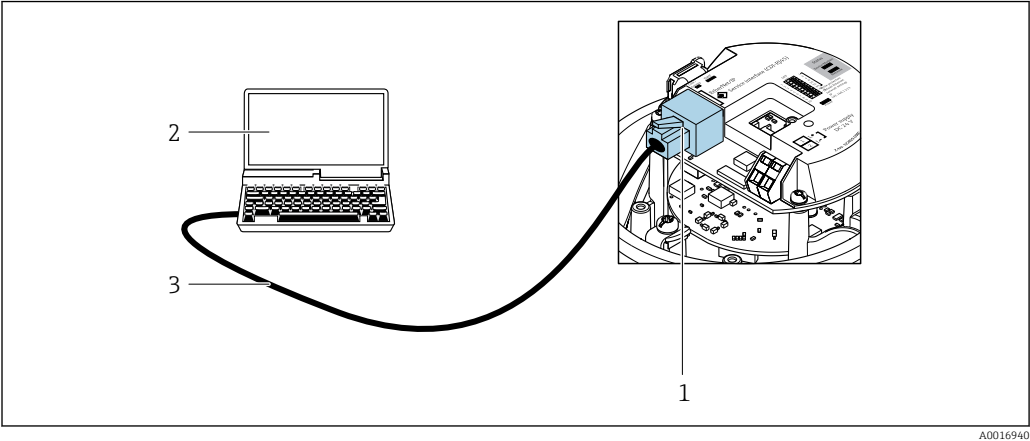


18 Connection for order code for "Output", option R: PROFINET

- 1 Service interface (CDI -RJ45) and PROFINET interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

Languages	Can be operated in the following languages: Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
-----------	---

16.12 Certificates and approvals

 Currently available certificates and approvals can be called up via the product configurator.

CE mark	The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
---------	--

Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.
-------------	--

Certification PROFINET	<p>PROFINET interface</p> <p>The measuring device is certified and registered by the PNO (PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none">■ Certified according to:<ul style="list-style-type: none">■ Test specification for PROFINET devices■ PROFINET Security Level 1 – Netload Class■ The device can also be operated with certified devices of other manufacturers (interoperability)■ The device supports PROFINET S2 system redundancy.
------------------------	---

Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- IEC/EN 60068-2-6
Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).
- IEC/EN 60068-2-31
Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.
- EN 61010-1
Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- NAMUR NE 132
Coriolis mass meter

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.



The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.




Detailed information on the application packages:
Special Documentation for the device → 147

Heartbeat Technology	Package	Description
	Heartbeat Verification +Monitoring	<p>Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk assessment. <p>Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets.
Concentration	Package	Description
	Concentration	<p>Calculation and outputting of fluid concentrations The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:</p> <ul style="list-style-type: none"> Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.) Common or user-defined units (°Brix, °Plato, % mass, % volume, mol/l etc.) for standard applications. Concentration calculation from user-defined tables. <p>The measured values are output via the digital and analog outputs of the device.</p>
Special density	Package	Description
	Special density	<p>Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.</p> <p>The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.</p>

16.14 Accessories

 Overview of accessories available for order →  124

16.15 Supplementary documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Standard documentation **Brief Operating Instructions**

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Cubemass C	KA01217D

Transmitter Brief Operating Instructions

Measuring device	Documentation code
Proline Promass 100	KA01336D

Technical Information

Measuring device	Documentation code
Cubemass C 100	TI01105D

Description of Device Parameters

Measuring device	Documentation code
Cubemass 100	GP01067D

Supplementary device-dependent documentation

Safety Instructions

Content	Documentation code
ATEX/IECEX Ex i	XA01030D
ATEX/IECEX Ex nA	XA01143D
cCSAus IS	XA01142D
INMETRO Ex i	XA01221D
INMETRO Ex nA	XA01222D
NEPSI Ex i	XA01261D
NEPSI Ex nA	XA01263D

Special Documentation

Content	Documentation code
Information on the Pressure Equipment Directive	SD00142D
Heartbeat Technology	SD01493D
Web server	SD01823D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	<ul style="list-style-type: none"> Access the overview of all the available spare part sets via <i>W@M Device Viewer</i> → 122 Accessories available for order with Installation Instructions → 124

Index

A

About this document	6
Access authorization to parameters	
Read access	39
Write access	39
Access code	39
Incorrect input	39
Accuracy	133
Adapting the diagnostic behavior	92
Application	126
Application packages	145
Applicator	127
Approvals	144

C

Cable entries	
Technical data	133
Cable entry	
Degree of protection	33
CE mark	11, 144
Certificates	144
Certification PROFINET	144
Check	
Installation	26
Checklist	
Post-connection check	34
Post-installation check	26
CIP cleaning	138
Cleaning	
Cleaning in place (CIP)	121
Exterior cleaning	121
Interior cleaning	121
Sterilization in place (SIP)	121
Climate class	137
Commissioning	61
Advanced settings	70
Configuring the measuring device	61
Connecting cable	27
Connecting the measuring device	29
Connection	
see Electrical connection	
Connection preparations	29
Connection tools	27
Current consumption	133
Cyclic data transmission	50

D

Declaration of Conformity	11
Define access code	79
Degree of protection	33, 137
Density	139
Design	
Measuring device	12
Design fundamentals	
Maximum measured error	136
Repeatability	136

Designated use	9
Device components	12
Device description files	48
Device documentation	
Supplementary documentation	8
Device locking, status	81
Device master file	
GSD	49
Device name	
Sensor	15
Transmitter	14
Device repair	122
Device Revision	48
Device type ID	48
DeviceCare	47
Device description file	48
Diagnostic information	
Design, description	90, 91
DeviceCare	90
FieldCare	90
Light emitting diodes	88
Overview	94
Remedial measures	94
Web browser	89
Diagnostic list	116
DIP switches	
see Write protection switch	
Disabling write protection	78
Display area	
For operational display	38
Display values	
For locking status	81
Disposal	123
Document	
Function	6
Symbols	6
Document function	6
Down pipe	19

E

Electrical connection	
Commubox FXA291	45
Degree of protection	33
Measuring device	27
Operating tools	
Via PROFINET network	45, 143
Via service interface (CDI-RJ45)	46, 143
Via service interface (CDI)	45
RSLogix 5000	45, 143
Web server	46, 143
Electromagnetic compatibility	138
Enabling write protection	78
Endress+Hauser services	
Maintenance	121
Repair	122

- Environment
 - Shock resistance 138
 - Storage temperature 137
 - Vibration resistance 138
- Error messages
 - see Diagnostic messages
- Event list 116
- Event logbook 116
- Ex approval 144
- Extended order code
 - Sensor 15
 - Transmitter 14
- Exterior cleaning 121
- F**
 - Field of application
 - Residual risks 10
 - FieldCare 46
 - Device description file 48
 - Establishing a connection 46
 - Function 46
 - User interface 47
 - Filtering the event logbook 117
 - Firmware
 - Release date 48
 - Version 48
 - Firmware history 120
 - Flash function 61
 - Flow direction 20, 24
 - Flow limit 139
 - Function check 61
 - Functions
 - see Parameters
- G**
 - Galvanic isolation 129
- H**
 - Hardware write protection 79
- I**
 - I/O electronics module 12, 30
 - Identifying the measuring device 13
 - Incoming acceptance 13
 - Influence
 - Medium pressure 136
 - Medium temperature 135
 - Inlet runs 20
 - Input 127
 - Inspection
 - Connection 34
 - Received goods 13
 - Installation 19
 - Installation conditions
 - Down pipe 19
 - Inlet and outlet runs 20
 - Installation dimensions 20
 - Mounting location 19
 - Orientation 20
 - Rupture disk 22
 - Sensor heating 22
 - System pressure 21
 - Thermal insulation 21
 - Vibrations 22
 - Installation dimensions 20
 - Interior cleaning 121, 138
- L**
 - Languages, operation options 144
 - Local display
 - see Operational display
 - Low flow cut off 129
- M**
 - Main electronics module 12
 - Maintenance tasks 121
 - Manufacturer ID 48
 - Manufacturing date 14, 15
 - Materials 140
 - Maximum measured error 133
 - Measured values
 - see Process variables
 - Measuring and test equipment 121
 - Measuring device
 - Configuration 61
 - Conversion 122
 - Design 12
 - Disposal 123
 - Mounting the sensor 24
 - Preparing for electrical connection 29
 - Preparing for mounting 24
 - Removing 123
 - Repairs 122
 - Measuring principle 126
 - Measuring range
 - For gases 127
 - For liquids 127
 - Measuring range, recommended 139
 - Measuring system 126
 - Medium pressure
 - Influence 136
 - Medium temperature
 - Influence 135
 - Menu
 - Diagnostics 115
 - Operation 81
 - Setup 62
 - Menus
 - For measuring device configuration 61
 - For specific settings 70
 - Mounting dimensions
 - see Installation dimensions
 - Mounting location 19
 - Mounting preparations 24
 - Mounting tools 24
- N**
 - Nameplate
 - Sensor 15

Transmitter	14
O	
Operable flow range	127
Operating menu	
Menus, submenus	36
Structure	36
Submenus and user roles	37
Operating philosophy	37
Operation	81
Operation options	35
Operational display	37
Operational safety	10
Order code	14, 15
Orientation (vertical, horizontal)	20
Outlet runs	20
Output	128
Output signal	128
P	
Packaging disposal	18
Parameter settings	
Administration (Submenu)	76
Advanced setup (Submenu)	70
Calculated values (Submenu)	70
Communication (Submenu)	64
Device information (Submenu)	119
Diagnostics (Menu)	115
Display (Submenu)	74
Low flow cut off (Wizard)	68
Measured variables (Submenu)	81
Medium selection (Submenu)	66
Partially filled pipe detection (Wizard)	69
Sensor adjustment (Submenu)	72
Setup (Menu)	62
Simulation (Submenu)	77
System units (Submenu)	62
Totalizer (Submenu)	83
Totalizer 1 to n (Submenu)	72
Totalizer handling (Submenu)	84
Web server (Submenu)	44
Zero point adjustment (Submenu)	72
Performance characteristics	133
Post-connection check (checklist)	34
Post-installation check	61
Post-installation check (checklist)	26
Potential equalization	31
Power consumption	133
Power supply failure	133
Pressure loss	139
Pressure-temperature ratings	139
Process connections	142
Process variables	
Calculated	127
Measured	127
Product safety	11
Protecting parameter settings	78

R	
Read access	39
Reading measured values	81
Recalibration	121
Reference operating conditions	133
Registered trademarks	8
Remote operation	143
Repair	122
Repair of a device	122
Repairs	
Notes	122
Repeatability	135
Replacement	
Device components	122
Requirements for personnel	9
Response time	135
Return	122
Rupture disk	
Safety instructions	22
Triggering pressure	139
S	
Safety	9
Seals	
Medium temperature range	139
Sensor	
Mounting	24
Sensor heating	22
Sensor housing	139
Serial number	14, 15
Setting the operating language	61
Settings	
Adapting the measuring device to the process	
conditions	84
Administration	76
Advanced display configurations	74
Communication interface	64
Device reset	118
Device tag	62
Low flow cut off	68
Medium	66
Operating language	61
Partial filled pipe detection	69
Resetting the totalizer	84
Sensor adjustment	72
Simulation	77
System units	62
Totalizer	72
Totalizer reset	84
Shock resistance	138
Signal on alarm	128
SIP cleaning	138
Software release	48
Software write protection	80
Spare part	122
Spare parts	122
Special connection instructions	31
Special mounting instructions	
Sanitary compatibility	22

- Standards and guidelines 145
 - Startup parameterization (NSU) 61
 - Status area
 - For operational display 38
 - Status signals 89
 - Storage conditions 17
 - Storage temperature 17
 - Storage temperature range 137
 - Structure
 - Operating menu 36
 - Submenu
 - Administration 76
 - Advanced setup 70
 - Calculated values 70
 - Communication 64
 - Device information 119
 - Display 74
 - Event list 116
 - Measured values 81
 - Measured variables 81
 - Medium selection 66
 - Overview 37
 - Process variables 70
 - Sensor adjustment 72
 - Simulation 77
 - System units 62
 - Totalizer 83
 - Totalizer 1 to n 72
 - Totalizer handling 84
 - Web server 44
 - Zero point adjustment 72
 - Supply voltage 132
 - Surface roughness 142
 - Symbols
 - For communication 38
 - For diagnostic behavior 38
 - For locking 38
 - For measured variable 38
 - For measurement channel number 38
 - For status signal 38
 - In the status area of the local display 38
 - System design
 - Measuring system 126
 - see Measuring device design
 - System integration 48
 - System pressure 21
- T**
- Technical data, overview 126
 - Temperature range
 - Medium temperature 138
 - Storage temperature 17
 - Terminal assignment 28, 30
 - Terminals 133
 - Thermal insulation 21
 - Tools
 - Electrical connection 27
 - For mounting 24
 - Transport 17
 - Totalizer
 - Configuration 72
 - Transmitter
 - Connecting the signal cables 30
 - Turning the display module 25
 - Transporting the measuring device 17
 - Troubleshooting
 - General 86
 - Turning the display module 25
- U**
- Use of the measuring device
 - Borderline cases 9
 - Incorrect use 9
 - see Designated use
 - User interface
 - Current diagnostic event 115
 - Previous diagnostic event 115
 - User roles 37
- V**
- Version data for the device 48
 - Vibration resistance 138
 - Vibrations 22
- W**
- W@M 121, 122
 - W@M Device Viewer 13, 122
 - Weight
 - SI units 140
 - Transport (notes) 17
 - US units 140
 - Wizard
 - Define access code 78
 - Low flow cut off 68
 - Partially filled pipe detection 69
 - Workplace safety 10
 - Write access 39
 - Write protection
 - Via access code 78
 - Via startup parameterization (NSU) 80
 - Via write protection switch 79
 - Write protection switch 79

www.addresses.endress.com
