
Services

BA01738D/06/EN/04.21 71506076 2021-01-01 Valid as of version 01.01.zz (Device firmware)

Operating Instructions **Proline Promass E 300**

Coriolis flowmeter PROFINET



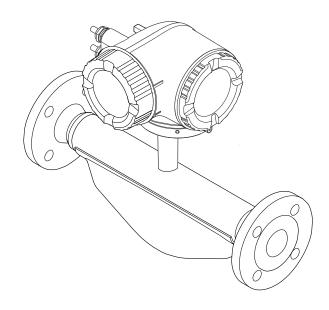



- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	About this document	6
1.1 1.2 1.3	Document functionSymbols1.2.1Safety symbols1.2.2Electrical symbols1.2.3Communication symbols1.2.4Tool symbols1.2.5Symbols for certain types of information1.2.6Symbols in graphicsDocumentation	6 6 7 7
1.9	 1.3.1 Standard documentation 1.3.2 Supplementary device-dependent documentation 	8 8
1.4	Registered trademarks	8
2	Safety instructions	10
2.1 2.2 2.3 2.4 2.5 2.6 2.7	Requirements for the personnel Designated use	10 10 11 12 12 12 12 12 13 13
	2.7.4 Access via service interface (CDI- RJ45)	14
3 3.1 4	•	15 15
Т	•	16
4.1 4.2	Incoming acceptanceProduct identification4.2.1Transmitter nameplate4.2.2Sensor nameplate	16 16 17 18 19
5 5.1 5.2	Storage conditions Transporting the product 5.2.1 Measuring devices without lifting	20 20 20 20
5.3	5.2.2 Measuring devices with lifting lugs5.2.3 Transporting with a fork lift	21 21 21 21

6	Installation	22
6.1	Installation conditions	22
	6.1.1 Mounting position	22
	6.1.2 Environmental and process	
	requirements	24
	6.1.3 Special mounting instructions	26
6.2	Mounting the measuring device	27
	6.2.1 Required tools	27
	6.2.2 Preparing the measuring device	28
	6.2.3 Mounting the measuring device	28
	6.2.4 Turning the transmitter housing	28
	6.2.5 Turning the display module	29
6.3	Post-installation check	29
7	Electrical connection	30
7.1	Connection conditions	30
	7.1.1 Required tools	30
	7.1.2 Requirements for connecting cable	30
	7.1.3 Terminal assignment	33
	7.1.4 Device plugs available	33
	7.1.5 Pin assignment of device plug	33
	7.1.6 Preparing the measuring device	33
7.2	Connecting the measuring device	34
	7.2.1 Connecting the transmitter	34
	7.2.2 Integrating the transmitter into a	
	network	38
	7.2.3 Connecting the remote display and	
	operating module DKX001	40
7.3	Ensuring potential equalization	40
	7.3.1 Requirements	40
7.4	Special connection instructions	41
	7.4.1 Connection examples	41
7.5	Hardware settings	44
	7.5.1 Setting the device name	44
	7.5.2 Activating the default IP address	46
7.6	Ensuring the degree of protection	46
7.7	Post-connection check	47
8	Operation options	48
8.1	Overview of operation options	48
8.2	Structure and function of the operating	
	menu	49
	8.2.1 Structure of the operating menu	49
	8.2.2 Operating philosophy	50
8.3	Access to the operating menu via the local	
	display	51
	8.3.1 Operational display	51
	8.3.2 Navigation view	52
	8.3.3 Editing view	54
	8.3.4 Operating elements	56
	8.3.5 Opening the context menu	56
	8.3.6 Navigating and selecting from list	58
	8.3.7 Calling the parameter directly	58
	8.3.8 Calling up help text	59

Proline Promass E 300 PROFINE	Proline	Promass	E 300	PROFI	NET
-------------------------------	---------	---------	-------	-------	-----

	8.3.9 8.3.10	Changing the parameters	59
	8.3.11	authorization	60
	8.3.12	code Enabling and disabling the keypad	60
8.4	Access t	lock	61
			61
	8.4.1	Function range	61
	8.4.2 8.4.3	Prerequisites Establishing a connection	62 63
	8.4.4	Logging on	65
	8.4.5	User interface	66
	8.4.6	Disabling the Web server	67
	8.4.7	Logging out	67
8.5		to the operating menu via the	()
	operatir 8.5.1	ng tool	68 68
	8.5.2	FieldCare	00 71
	8.5.3	DeviceCare	72
9	Systen	n integration	74
9.1	-	w of device description files	74
	9.1.1	Current version data for the device	74
	9.1.2	Operating tools	74
9.2		naster file (GSD)	75
	9.2.1	File name of the device master file	75
93	Cyclic da	(GSD)	
9.3	Cyclic da 9.3.1	ata transmission	76 76
9.3	5		76
9.3	9.3.1 9.3.2 9.3.3	ata transmission Overview of the modules Description of the modules Status coding	76 76 76 84
9.3	9.3.1 9.3.2 9.3.3 9.3.4	ata transmissionOverview of the modulesDescription of the modulesStatus codingFactory setting	76 76 76 84 85
	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5	ata transmissionOverview of the modulesDescription of the modulesStatus codingFactory settingStartup configuration	76 76 84 85 86
9.3 9.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5	ata transmissionOverview of the modulesDescription of the modulesStatus codingFactory setting	76 76 76 84 85
	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System	ata transmission Overview of the modules Description of the modules Status coding Factory setting Startup configuration redundancy S2	76 76 84 85 86
9.4 10 10.1	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function	ata transmission Overview of the modules Overview of the modules Description of the modules Description of the modules Status coding Status coding Status Factory setting Startup configuration Startup configuration Startup configuration redundancy S2 Startup configuration n check Startup	76 76 84 85 86 87
9.4 10 10.1 10.2	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin	ata transmission Overview of the modules Overview of the modules Description of the modules Description of the modules Status coding Status coding Status coding Factory setting Startup configuration Startup configuration redundancy S2 iissioning No n check No ng on the measuring device No	76 76 76 84 85 86 87 88 88 88
9.4 10 10.1 10.2 10.3	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect	ata transmission Overview of the modules Overview of the modules Description of the modules Description of the modules Status coding Status coding Status Factory setting Status Startup configuration Startup configuration redundancy S2 Status hissioning Status n check Startup device ing on the measuring device Startup device	76 76 84 85 86 87 88 88 88 88 88
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting	ata transmission Overview of the modules Description of the modules Description of the modules Status coding Status coding Factory setting Status coding Factory setting Startup configuration redundancy S2 Status iissioning Status n check Startup device ing on the measuring device Startup configuration ting via FieldCare Startup configuration	76 76 84 85 86 87 88 88 88 88 88 88 88
9.4 10 10.1 10.2 10.3	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting	ata transmission Overview of the modules Description of the modules Description of the modules Status coding Status coding Factory setting Factory setting Startup configuration Factory setting redundancy S2 Factory setting n check Factory device ng on the measuring device Factory setting language the operating language Factory setting device	76 76 84 85 86 87 88 88 88 88 88 88 88 88 88 88 88 88 88
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu	ata transmission Overview of the modules Description of the modules Description of the modules Status coding Status coding Factory setting Status coding Factory setting Startup configuration redundancy S2 Status iissioning Status n check Startup device ing on the measuring device Startup configuration ting via FieldCare Startup configuration	76 76 84 85 86 87 88 88 88 88 88 88 88
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 dissioning n check ng on the measuring device ting via FieldCare ring the measuring device pefining the tag name Setting the system units Displaying the communication	76 76 84 85 86 87 88 88 88 88 88 88 88 88 89 90 90
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 hissioning n check ng on the measuring device ting via FieldCare ring the measuring device pefining the tag name Setting the system units Displaying the communication interface	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 iissioning n check ng on the measuring device ting via FieldCare ring the measuring device Defining the tag name Setting the system units Displaying the communication interface Selecting and setting the medium	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90 92 94
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 iissioning n check ng on the measuring device ting via FieldCare ring the measuring device Defining the tag name Setting the system units Displaying the communication interface Selecting and setting the medium Displaying the I/O configuration	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90 92 94 95
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 iissioning n check ng on the measuring device ting via FieldCare ring the measuring device Defining the tag name Setting the system units Displaying the communication interface Selecting and setting the medium	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90 92 94
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 hissioning n check ng on the measuring device ting via FieldCare the operating language ring the measuring device Defining the tag name Setting the system units Displaying the communication interface Selecting and setting the medium Displaying the turrent input Configuring the status input Configuring the current output	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90 92 94 95 96
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7	ata transmission Overview of the modules Description of the modules Status coding Status coding Factory setting Startup configuration redundancy S2 iissioning n check ng on the measuring device ting via FieldCare the operating language ring the measuring device Defining the tag name Setting the system units Displaying the communication interface Selecting and setting the medium Displaying the turrent input Configuring the status input Configuring the current output	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 92 92 94 95 96 97 98
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9	ata transmission Overview of the modules Description of the modules Status coding Factory setting Factory setting Startup configuration redundancy S2 iissioning n check ng on the measuring device ting via FieldCare ring the measuring device Defining the tag name Setting the system units Displaying the communication interface Selecting and setting the medium Displaying the l/O configuration Configuring the status input Configuring the current output Configuring the pulse/frequency/ switch output 1	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90 92 94 95 96 97 98
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10	ata transmission Overview of the modules Description of the modules Status coding Status coding Status coding Factory setting Status coding redundancy S2 Status coding issioning Status coding n check Status coding n configuring the communication Status coding n configuring the status input Status coding Configuring the current output Status coding Configuring the relay output Status cod	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 92 94 95 96 97 98 02
9.4 10 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 System Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11	ata transmission Overview of the modules Description of the modules Status coding Status coding Status coding Factory setting Statup configuration redundancy S2 Status iissioning Image: Construct of the measuring device n check Image: Construct of the measuring device ng on the measuring device Image: Construct of the operating language ring the measuring device Image: Construct of the operating language ring the measuring device Image: Construct of the operating language ring the measuring device Image: Construct of the operating language Defining the tag name Image: Construct of the operating language Displaying the communication Image: Construct of the operating the current input Displaying the I/O configuration Image: Configuring the status input Configuring the current output Image: Configuring the current output Configuring the relay output Image: Configuring the relay output Configuring the local display Image: Configuring the local display	76 76 84 85 86 87 88 88 88 88 88 88 88 88 90 90 90 92 94 95 96 97 98

	10.5.13 Configuring the partial filled pipe	
10.0	detection	119
10.6	Advanced settings	120
	10.6.1 Using the parameter to enter the	121
	access code 10.6.2 Calculated values	121
	10.6.3 Carrying out a sensor adjustment	121
	10.6.4 Configuring the totalizer	123
	10.6.5 Carrying out additional display	10,
	configurations	125
	10.6.6 WLAN configuration	129
	10.6.7 Configuration management	131
	10.6.8 Using parameters for device	
	administration	133
10.7	Simulation	134
10.8	Protecting settings from unauthorized access	137
	10.8.1 Write protection via access code	138
	10.8.2 Write protection via write protection	139
	switch	122
11	Operation	141
11.1 11.2	Reading the device locking status	141 141
11.2 11.3	Adjusting the operating language	141 141
11.5	Configuring the display Reading measured values	141
11.4	11.4.1 "Measured variables" submenu	141
	11.4.2 Totalizer	143
	11.4.3 "Input values" submenu	144
	11.4.4 Output values	145
11.5	Adapting the measuring device to the process	
	conditions	147
11.6	Performing a totalizer reset	147
	11.6.1 Function scope of the "Control	
	Totalizer" parameter	148
	11.6.2 Function scope of the "Reset all	1 / 0
117	totalizers" parameter	
11.7	Showing data logging	148
12	Diagnostics and troubleshooting	152
	5	
12.1 12.2	General troubleshooting Diagnostic information via light emitting	152
12.2	diodes	154
	12.2.1 Transmitter	154
12.3	Diagnostic information on local display	156
	12.3.1 Diagnostic message	156
	12.3.2 Calling up remedial measures	158
12.4	Diagnostic information in the Web browser.	158
	12.4.1 Diagnostic options	158
	12.4.2 Calling up remedy information	159
12.5	Diagnostic information in FieldCare or	
	DeviceCare	159
	12.5.1 Diagnostic options	159
10 4	12.5.2 Calling up remedy information	160
12.6	Adapting the diagnostic information	161
12.7	12.6.1 Adapting the diagnostic behavior	161 164
12./	Overview of diagnostic information12.7.1Diagnostic of sensor	164 164
	12.7.1 Diagnostic of sensor	104
	$\mathbf{L}_{\mathbf{D}}, \mathbf{L}_{\mathbf{D}}$	T / T

	12.7.3 Diagnostic of configuration	188
	12.7.4 Diagnostic of process	201
12.8	Pending diagnostic events	215
12.9	Diagnostic list	215
12.10		215
12.10	12.10.1 Reading out the event logbook	216
	12.10.2 Filtering the event logbook	217
	12.10.3 Overview of information events	217
12.11	Resetting the measuring device	218
12,11	12.11.1 Function scope of the "Device reset"	210
	parameter	218
12.12	Device information	219
	Firmware history	221
13	Maintenance	222
13.1	Maintenance tasks	222
	13.1.1 Exterior cleaning	222
	13.1.2 Interior cleaning	222
13.2	Measuring and test equipment	222
13.3	Endress+Hauser services	222
14	Repair	223
14.1	General notes	223
	14.1.1 Repair and conversion concept	223
	14.1.2 Notes for repair and conversion	223
14.2	Spare parts	223
14.3	Endress+Hauser services	223
14.4	Return	223
14.5	Disposal	224
	14.5.1 Removing the measuring device	224
	14.5.2 Disposing of the measuring device	224
15	• •	00F
		225
15.1	Accessories	225
	Device-specific accessories	_
15.1	Device-specific accessories15.1.1For the transmitter15.1.2For the sensor	225 225 226
15.1 15.2	Device-specific accessories15.1.1For the transmitter15.1.2For the sensorCommunication-specific accessories	225 225 226 226
15.1 15.2 15.3	Device-specific accessories	225 225 226 226 227
15.1 15.2	Device-specific accessories15.1.1For the transmitter15.1.2For the sensorCommunication-specific accessories	225 225 226 226 227
15.1 15.2 15.3	Device-specific accessories	225 225 226 226 227 227
15.1 15.2 15.3 15.4 16	Device-specific accessories	225 225 226 226 227 227 227
15.1 15.2 15.3 15.4 16 16.1	Device-specific accessories	225 225 226 226 227 227 227 228 228
15.1 15.2 15.3 15.4 16 16.1 16.2	Device-specific accessories15.1.1For the transmitter15.1.2For the sensorCommunication-specific accessoriesService-specific accessoriesSystem componentsTechnical dataApplicationFunction and system design	225 225 226 226 227 227 227 228 228 228 228
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 229
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4	Device-specific accessories	225 225 226 227 227 227 227 228 228 228 228 228 229 232
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5	Device-specific accessories	225 225 226 227 227 227 227 228 228 228 228 229 232 237
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 229 232 237 238
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 228 229 232 237 238 242
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 228 229 232 237 238 242 242
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 229 232 237 238 242 242 243
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 229 232 237 238 242 242 243 242
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11	Device-specific accessories	225 225 226 227 227 227 228 228 228 229 232 237 238 242 243 242 243 245 248
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11 16.12	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 229 232 237 238 242 243 242 243 245 248 252
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11 16.12 16.13	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 229 232 237 238 242 242 242 243 245 248 245 248 252 255
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11 16.12 16.13 16.14	Device-specific accessories	225 225 226 227 227 227 228 228 228 228 228 229 232 237 238 242 243 242 243 245 248 252

1 About this document

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
\sim	Alternating current
\sim	Direct current and alternating current
<u>+</u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.
	The ground terminals are situated inside and outside the device:Inner ground terminal: Connects the protectiv earth to the mains supply.Outer ground terminal: Connects the device to the plant grounding system.

1.2.3 Communication symbols

Symbol	Meaning
((:-	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	LED Light emitting diode is off.

Symbol	Meaning
-¢-	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

1.2.4 Tool symbols

Symbol	Meaning
0 /	Flat blade screwdriver
$\bigcirc \not \sqsubseteq$	Allen key
Ŕ	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
\mathbf{X}	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
►	Notice or individual step to be observed.
1., 2., 3	Series of steps.
L.	Result of a step.
?	Help in the event of a problem.
	Visual inspection.

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
×	Safe area (non-hazardous area)
≈⇒	Flow direction

1.3 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Detailed list of the individual documents along with the documentation code $\rightarrow \cong 256$

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device.
	Incoming acceptance and product identificationStorage and transportInstallation
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value).
	 Product description Installation Electrical connection Operation options System integration Commissioning Diagnostic information
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFINET®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

2 Safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ► Follow the instructions in this manual.

2.2 Designated use

Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Keep within the specified pressure and temperature range.
- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation →
 8.
- Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ► Verify the compatibility of the process fluid with the sensor material.
- Ensure the resistance of all fluid-wetted materials in the process.
- Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

WARNING

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

► For elevated fluid temperatures, ensure protection against contact to prevent burns.

WARNING

Danger of housing breaking due to measuring tube breakage!

If a measuring tube ruptures, the pressure inside the sensor housing will rise according to the operating process pressure.

► Use a rupture disk.

WARNING

Danger from medium escaping!

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

• Take precautions to prevent injury and material damage if the rupture disk is actuated.

2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

• Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

• Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- Operate the device in proper technical condition and fail-safe condition only.
- The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to repair of an electrical device.
- Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \square 12$	Not enabled.	On an individual basis following risk assessment.
Access code (also applies for Web server login or FieldCare connection) $\rightarrow \cong 13$	Not enabled (0000).	Assign a customized access code during commissioning.
WLAN (order option in display module)	Enabled.	On an individual basis following risk assessment.
WLAN security mode	Enabled (WPA2- PSK)	Do not change.
WLAN passphrase (password) → 🗎 13	Serial number	Assign an individual WLAN passphrase during commissioning.
WLAN mode	Access Point	On an individual basis following risk assessment.
Web server→ 🗎 13	Enabled.	On an individual basis following risk assessment.
CDI-RJ45 service interface $\rightarrow \square 14$	-	On an individual basis following risk assessment.

2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered $\rightarrow \square$ 139.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
- Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
 When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ($\rightarrow \square$ 138).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ($\Rightarrow \textcircled{B} 69$), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter ($\rightarrow \square$ 131).

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, see the "Write protection via access code" section →
 ¹³⁸
 ¹³⁸

2.7.3 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server ($\rightarrow \bigoplus 61$). The connection is via the service interface (CDI-RJ45), the connection for PROFINET signal transmission (RJ45 connector) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see: The "Description of Device Parameters" document $\rightarrow \cong 257$.

2.7.4 Access via service interface (CDI-RJ45)


The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.



Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB

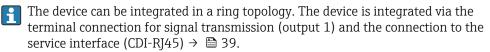


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version: The transmitter and sensor form a mechanical unit.


3.1 Product design

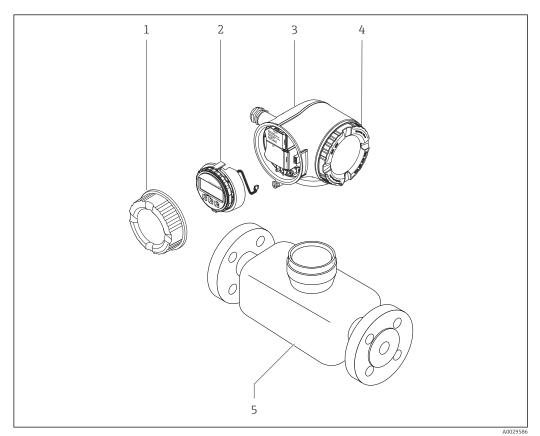

- 1 Important components of a measuring device
- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Electronics compartment cover
- 5 Sensor

4 Incoming acceptance and product identification

4.1 Incoming acceptance

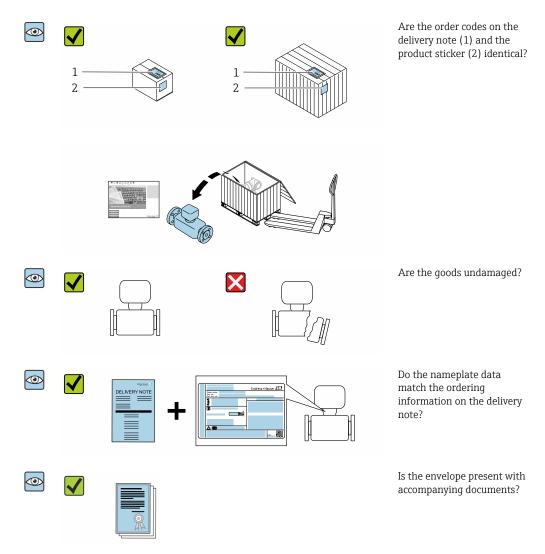

4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in the *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the device is displayed.
- Enter the serial number from nameplates in the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate using the *Endress+Hauser Operations App*: All information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" →
 B and "Supplementary device-dependent documentation" →
 B sections
- The *W*@*M Device Viewer*: enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.


4.2.1 Transmitter nameplate

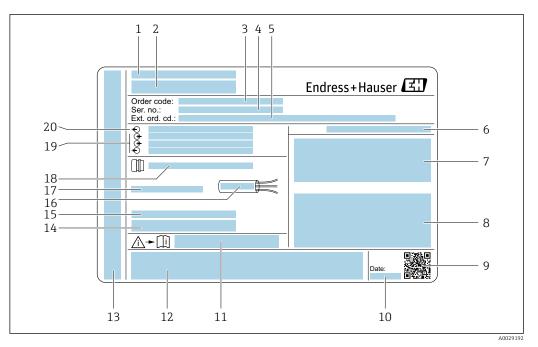

Example of a transmitter nameplate


- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
 - 15 Space for additional information in the case of special products
 - 16 Permitted temperature range for cable
 - 17 Permitted ambient temperature (T_a)
 - 18 Information on cable gland
 - *19* Available inputs and outputs, supply voltage
 - 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

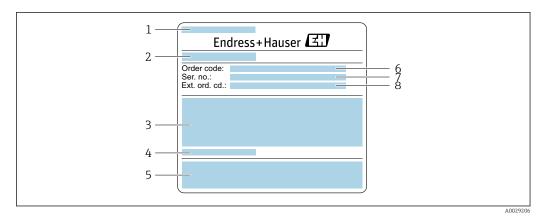

■ 3 Example of a sensor nameplate, part 1

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold
- 4 Sensor-specific information
- 5 CE mark, C-Tick
- 6 Order code
- 7 Serial number (ser. no.)
- 8 Extended order code (Ext. ord. cd.)

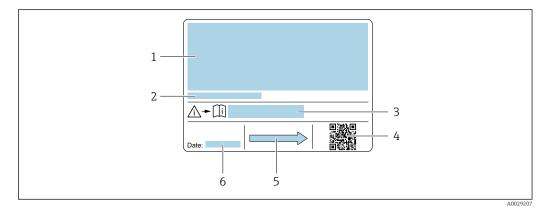

E 4 Example of a sensor nameplate, part 2

- 1 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 2 Permitted ambient temperature (T_a)
- 3 Document number of safety-related supplementary documentation
- 4 2-D matrix code
- 5 Flow direction
- 6 Manufacturing date: year-month

🛐 Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ► Do not store outdoors.

Storage temperature $\rightarrow \cong 242$

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

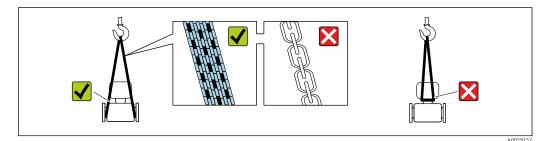

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- Secure the measuring device against slipping or turning.
- Observe the weight specified on the packaging (stick-on label).

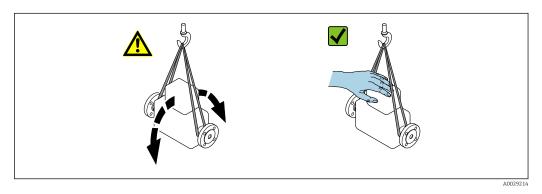

5.2.2 Measuring devices with lifting lugs

ACAUTION

Special transportation instructions for devices with lifting lugs

- Only use the lifting lugs fitted on the device or flanges to transport the device.
- The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:


- Outer packaging of device
- Polymer stretch wrap that complies with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material Paper pads

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

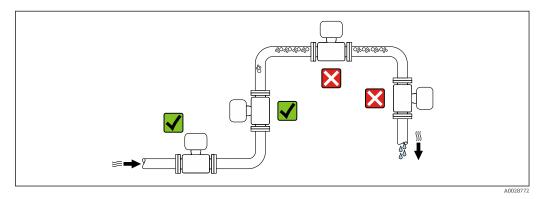


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

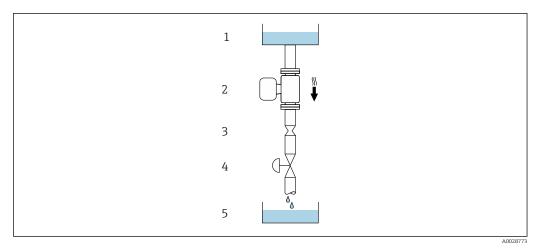

☑ 5 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction		
[mm]	[in] [mm]		[in]	
8	3⁄8	6	0.24	
15	1/2	10	0.40	
25	1	14	0.55	
40	11/2	22	0.87	
50	2	28	1.10	
80	3	50	1.97	

Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).


	Orientation		
A	Vertical orientation	A0015591	V V ¹⁾
В	Horizontal orientation, transmitter at top	A0015589	Exceptions: $\rightarrow \square 6, \square 23$
C	Horizontal orientation, transmitter at bottom	A0015590	Exceptions: $\rightarrow \textcircled{0} 6, \textcircled{2} 23$
D	Horizontal orientation, transmitter at side	A0015592	×

1) This orientation is recommended to ensure self-draining.

2) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.

3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

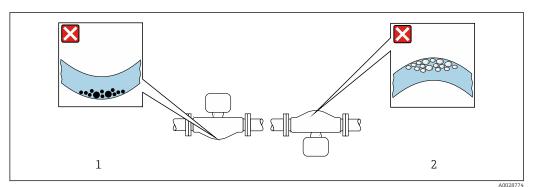


■ 6 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs

No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs $\rightarrow \cong 24$.

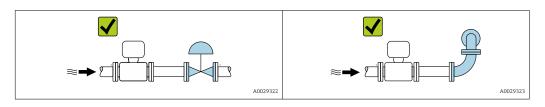

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

6.1.2 Environmental and process requirements

Ambient temperature range

Measuring device	 -40 to +60 °C (-40 to +140 °F) Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)
Readability of the local display	-20 to $+60\ ^\circ\text{C}$ (-4 to $+140\ ^\circ\text{F})$ The readability of the display may be impaired at temperatures outside the temperature range.

P Dependency of ambient temperature on medium temperature \rightarrow \cong 243

 If operating outdoors: Avoid direct sunlight, particularly in warm climatic regions.

You can order a weather protection cover from Endress+Hauser. $\rightarrow \cong 225$.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

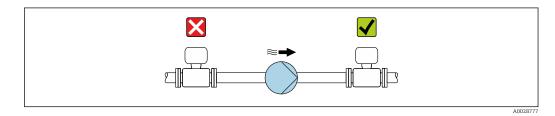


Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

NOTICE

Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- Do not insulate the transmitter housing .
- Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

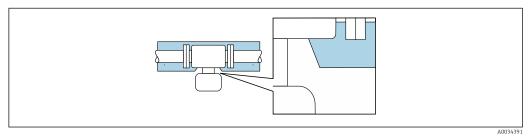

Thermal insulation with extended neck free

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter .
- Depending on the fluid temperature, take the device orientation requirements into account .

NOTICE

Danger of overheating when heating

- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- Ensure that sufficient convection takes place at the transmitter neck.
- Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Drainability

The measuring tubes can be completely drained and protected against solids build-up in vertical orientation.

Sanitary compatibility

- - In the case of measuring devices with the order code for "Housing", option B "Stainless, hygienic", to seal the connection compartment cover, screw it closed finger-tight and then tighten it by another 45° (corresponds to 15 Nm).

Rupture disk

Information that is relevant to the process: $\rightarrow \cong 245$.


WARNING

Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.

- Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- Observe information on the rupture disk sticker.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- Do not use a heating jacket.
- Do not remove or damage the rupture disk.
- After the rupture disk is actuated, do not operate the measuring device any more.

The position of the rupture disk is indicated on a sticker applied over it. If the rupture disk is triggered, the sticker is destroyed. The disk can therefore be visually monitored.

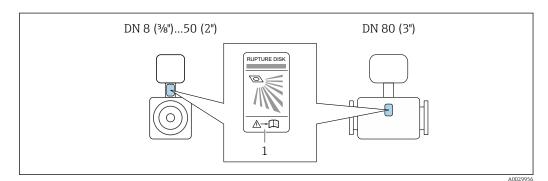

1 Rupture disk label


Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions $\rightarrow \textcircled{B}$ 238. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Protective cover

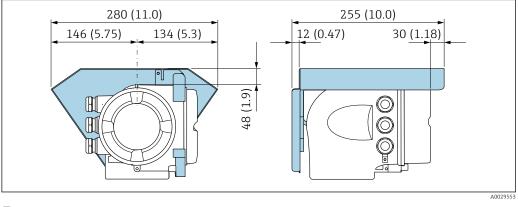

8 Engineering unit mm (in)


Cover locking

NOTICE

Order code for "Housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.

The cover can be locked using screws and a chain or cable provided by the customer.

- ▶ It is recommended to use stainless steel cables or chains.
- ► If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

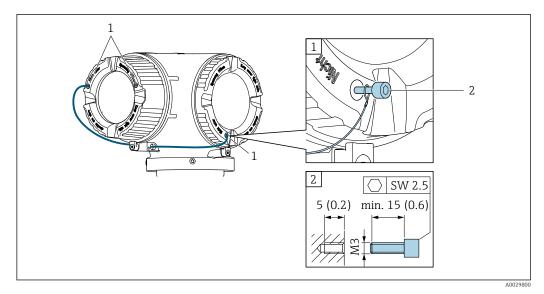

1 Cover borehole for the securing screw

2 Securing screw to lock the cover

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device


- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. If present, remove transport protection of the rupture disk.
- 4. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

WARNING


Danger due to improper process sealing!

- Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- Ensure that the seals are clean and undamaged.
- Secure the seals correctly.
- 1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

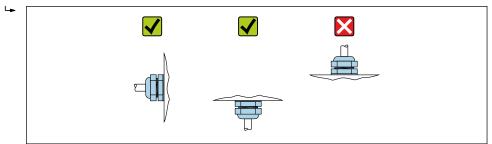

6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

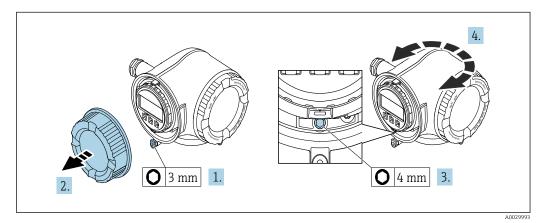


- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Release the fixing screw.
- 4. Turn the housing to the desired position.
- 5. Firmly tighten the securing screw.

6. Screw on the connection compartment cover.

7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

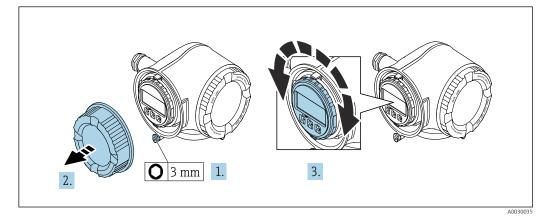

- **1.** Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- **3.** Turn the display module to the desired position: max. $8 \times 45^{\circ}$ in each direction.
- 4. Screw on the connection compartment cover.
- 5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?		
 Does the measuring device conform to the measuring point specifications? For example: Process temperature → ■ 243 Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range 		
 Has the correct orientation for the sensor been selected ? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids) 		
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping $\rightarrow \bigoplus 23$?		
Are the measuring point identification and labeling correct (visual inspection)?		
Is the device adequately protected from precipitation and direct sunlight?		
Are the securing screw and securing clamp tightened securely?		

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ► For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ► Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver $\leq 3 \text{ mm} (0.12 \text{ in})$

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable $\geq 2.08 \text{ mm}^2$ (14 AWG)

The grounding impedance must be less than 1Ω .

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable

Standard installation cable is sufficient.

Signal cable

PROFINET

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.

For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology", Guideline for PROFINET

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
 - M20 \times 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Requirements for the connecting cable – Remote display and operating module DKX001

Optionally available connecting cable

A cable is supplied depending on the order option

- Order code for measuring device: order code 030 for "Display; operation", option 0 or
- Order code for measuring device: order code 030 for "Display; operation", option M and
- Order code for DKX001: order code **040** for "Cable", option **A**, **B**, **D**, **E**

Standard cable	$2\times2\times0.34~mm^2$ (22 AWG) PVC cable with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover \ge 85 %
Capacitance: core/shield	≤200 pF/m
L/R	≤24 μH/Ω
Available cable length	5 m (15 ft)/10 m (35 ft)/20 m (65 ft)/30 m (100 ft)
Operating temperature	When mounted in a fixed position: –50 to +105 $^\circ$ C (–58 to +221 $^\circ$ F); when cable can move freely: –25 to +105 $^\circ$ C (–13 to +221 $^\circ$ F)

Standard cable - customer-specific cable

No cable is supplied, and it must be provided by the customer (up to max. 300 m (1000 ft)) for the following order option: Order code for DKX001: Order code **040** for "Cable", option **1** "None, provided by customer, max 300 m"

A standard cable can be used as the connecting cable.

Standard cable	4 cores (2 pairs); pair-stranded with common shield	
Shielding	Tin-plated copper-braid, optical cover \geq 85 %	
Capacitance: core/shield	Maximum 1000 nF for Zone 1, Class I, Division 1	
L/R	Maximum 24 $\mu H/\Omega$ for Zone 1, Class I, Division 1	
Cable length	Maximum 300 m (1000 ft), see the following table	

Cross-section	Max. cable length for use in Non-hazardous area, Ex Zone 2, Class I, Division 2 Ex Zone 1, Class I, Division 1		
0.34 mm ² (22 AWG)	80 m (270 ft)		
0.50 mm ² (20 AWG)	120 m (400 ft)		
0.75 mm ² (18 AWG)	180 m (600 ft)		
1.00 mm ² (17 AWG)	240 m (800 ft)		
1.50 mm ² (15 AWG)	300 m (1000 ft)		

7.1.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

S	Supply	voltage	Input/output 1	Input/output 2		Input/output 3	
1 (+)	2 (-)	PROFINET (RJ45 connector)	24 (+) Device-specif		22 (+) signment: adh al cover.	23 (–) esive label in

Terminal assignment of the remote display and operating module $\rightarrow \cong 40$.

7.1.4 Device plugs available

Provice plugs may not be used in hazardous areas!

Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection	
"Electrical connection"	2	3
L, N, P, U	Connector M12 × 1	-
R ^{1) 2)} , S ^{1) 2)} , T ^{1) 2)} , V ^{1) 2)}	Connector M12 × 1	Connector M12 × 1

 Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.

2) Suitable for integrating the device in a ring topology.

7.1.5 Pin assignment of device plug

2	Pin	Assignment	
	1	+	TD +
	2	+	RD +
	3	-	TD –
	4	-	RD –
	Cod	ling	Plug/socket
	I)	Socket

7.1.6 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

• Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.

- If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.
- If the measuring device is supplied with cable glands:
 Observe requirements for connecting cables →
 ⁽¹⁾ 30.


7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ► For use in potentially explosive atmospheres, observe the information in the devicespecific Ex documentation.

7.2.1 Connecting the transmitter

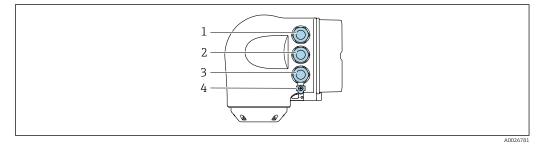


1 Terminal connection for supply voltage

- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45); optional: connection for external WLAN antenna or remote display and operating module DKX001
- 4 Protective earth (PE)

In addition to connecting the device via PROFINET and the available inputs/outputs, additional connection options are also available:


- Integrate into a network via the service interface (CDI-RJ45) $\rightarrow \cong$ 38.
- Integrate the device into a ring topology $\rightarrow \square$ 39.

Connecting the PROFINET connector

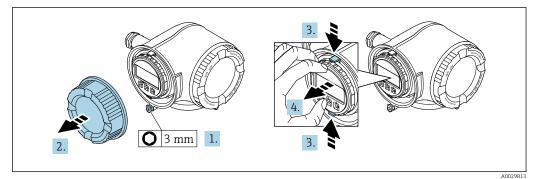


- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.


4. Remove the display module holder.

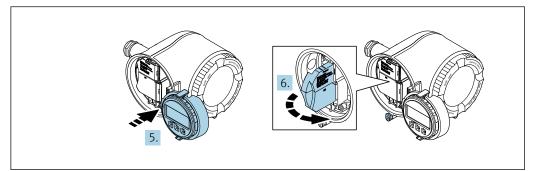


5. Attach the holder to the edge of the electronics compartment.

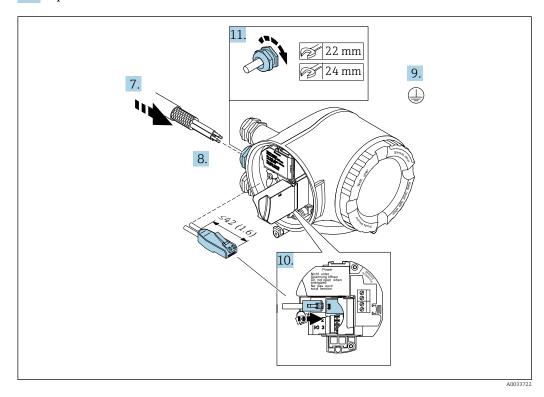


- 7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends and connect to the RJ45 connector.
- 9. Connect the protective ground.
- **10.** Plug in the RJ45 connector.
- **11.** Firmly tighten the cable glands.
 - └ This concludes the PROFINET connection process.

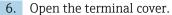

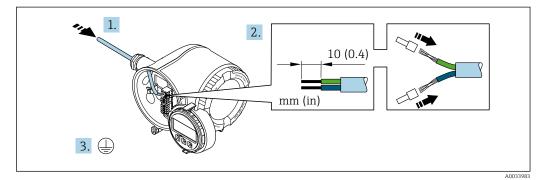

Connecting the supply voltage and additional inputs/outputs


- **1.** Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 2. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 3. Connect the protective ground.

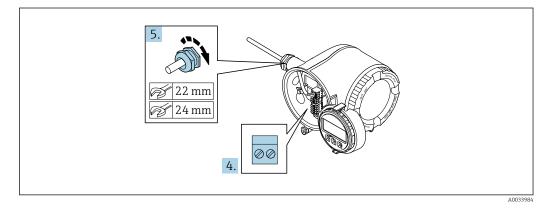

4. Connect the cable in accordance with the terminal assignment .

- Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 Supply voltage terminal assignment: Adhesive label in the terminal cover or →
 ⇒ 33.
- 5. Firmly tighten the cable glands.
 - └ This concludes the cable connection process.
- 6. Close the terminal cover.
- 7. Fit the display module holder in the electronics compartment.
- 8. Screw on the connection compartment cover.
- 9. Secure the securing clamp of the connection compartment cover.

Removing a cable

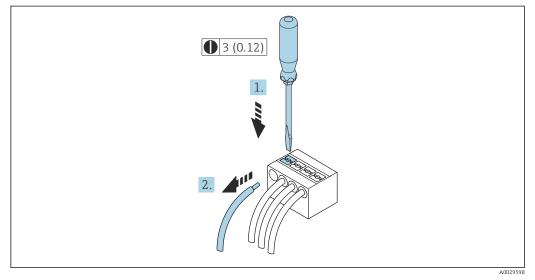

☑ 9 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes

2. while simultaneously pulling the cable end out of the terminal.

7.2.2 Integrating the transmitter into a network

This section only presents the basic options for integrating the device into a network.


For information on the procedure to follow to connect the transmitter correctly \rightarrow \cong 34.

Integrating via the service interface

The device is integrated via the connection to the service interface (CDI-RJ45).

Note the following when connecting:

- Recommended cable: CAT 5e, CAT 6 or CAT 7, with shielded connector (e.g. brand: YAMAICHI ; Part No Y-ConProfixPlug63 / Prod. ID: 82-006660)
- Maximum cable thickness: 6 mm
- Length of connector including bend protection: 42 mm
- Bending radius: 5 x cable thickness

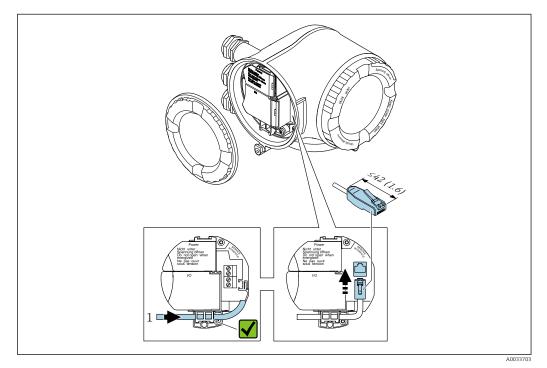

1 Service interface (CDI-RJ45)

An adapter for RJ45 and the M12 connector is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"


The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

Integrating into a ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

Note the following when connecting:

- Recommended cable: CAT5e, CAT6 or CAT7, with shielded connector (e.g. brand: YAMAICHI ; Part No Y-ConProfixPlug63 / Prod. ID: 82-006660)
- Maximum cable thickness: 6 mm
- Length of connector including bend protection: 42 mm
- Bending radius: 2.5 x cable thickness

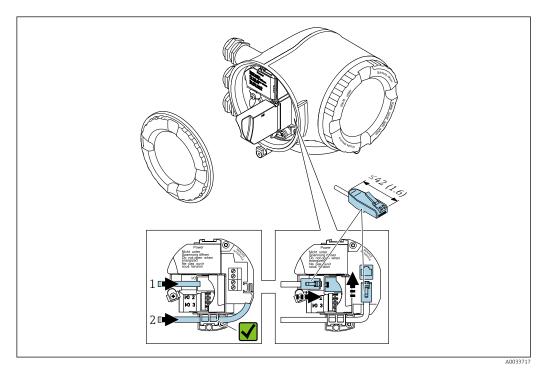

- 1 PROFINET connection
- 2 Service interface (CDI-RJ45)




An adapter for RJ45 and the M12 connector is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

7.2.3 Connecting the remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra $\rightarrow \cong 225$.

- The remote display and operating module DKX001 is only available for the following housing version: order code for "Housing": option A "Aluminum, coated"
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

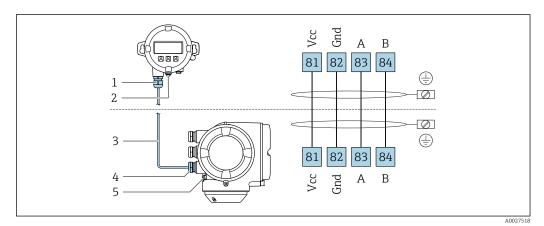

- 1 Remote display and operating module DKX001
- 2 Protective earth (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Protective earth (PE)

7.3 Ensuring potential equalization

7.3.1 Requirements


Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts

7.4 Special connection instructions

7.4.1 Connection examples


PROFINET

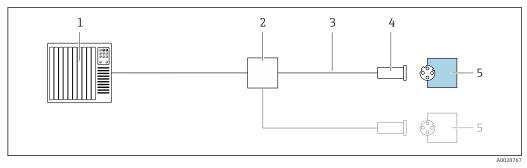

■ 10 Connection example for PROFINET


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

PROFINET: MRP (Media Redundancy Protocol)

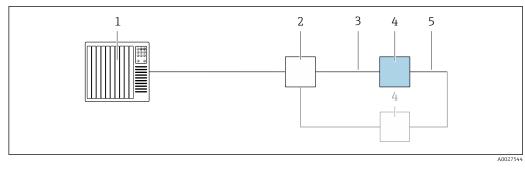

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications $\rightarrow \implies 30$
- 4 Transmitter
- 5 Connecting cable between the two transmitters


PROFINET: system redundancy S2

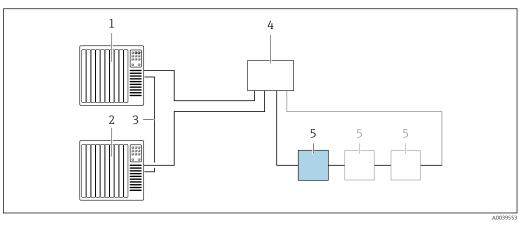

■ 11 Connection example for system redundancy S2


- 1 Control system 1 (e.g. PLC)
- 2 Synchronization of control systems
- 3 Control system 2 (e.g. PLC)
- 4 Industrial Ethernet Managed Switch
- 5 Transmitter

Current output 4-20 mA

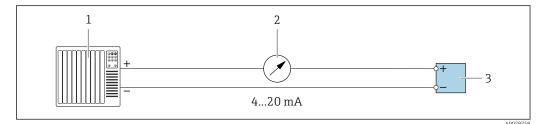

■ 12 Connection example for 4-20 mA current output (active)


- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

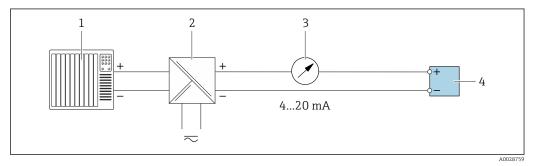

■ 13 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


Pulse/frequency output

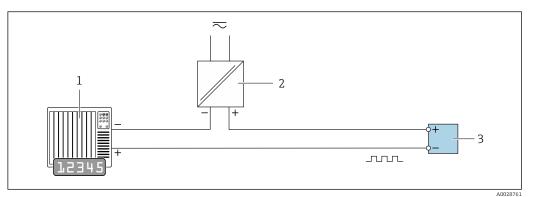

14 Connection example for pulse/frequency output (passive)


- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \square 232$

Switch output

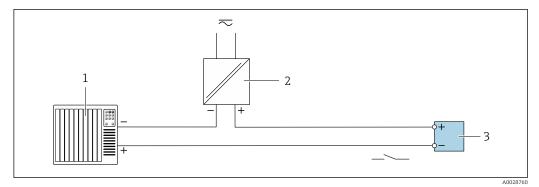


- 15 Connection example for switch output (passive)
- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \cong 232$

Relay output

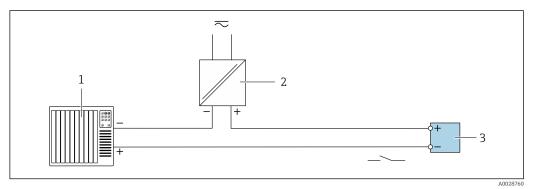

- 16 Connection example for relay output (passive)
- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \cong 234$


Current input

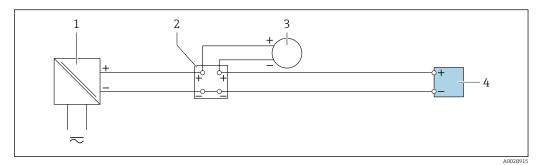

■ 17 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

Status input

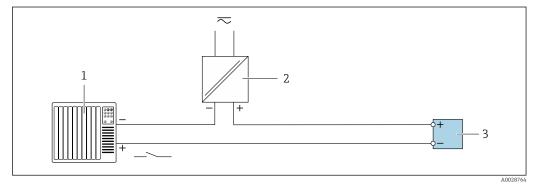

18 Connection example for status input

1 Automation system with status output (e.g. PLC)

- 2 Power supply
- 3 Transmitter

7.5 Hardware settings

7.5.1 Setting the device name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station of the PROFINET specification). The factory-assigned device name can be changed using the DIP switches or the automation system.

Example of device name (factory setting): EH-Promass300-XXXX

ЕН	Endress+Hauser	
Promass	Instrument family	
300	Transmitter	
XXXX	Serial number of the device	

The device name currently used is displayed in Setup \rightarrow Name of station is also displayed.

Setting the device name using the DIP switches

The last part of the device name can be set using DIP switches 1-8. The address range is between 1 and 254 (factory setting: serial number of the device)

Overview	of the	DIP	switches
----------	--------	-----	----------

DIP switch	Bit	Description
1	128	
2	64	
3	32	
4	16	Configurable part of the device name
5	8	Configurable part of the device name
6	4	
7	2	
8	1	

Example: Setting the device name EH-PROMASS300-065


DIP switch	ON/OFF	Bit	Device name
1	OFF	_	
2	ON	64	
37	OFF	-	
8	ON	1	
Serial number of the device:		065	EH-PROMASS300-065

Setting the device name

Risk of electric shock when opening the transmitter housing.

- Before opening the transmitter housing:
- Disconnect the device from the power supply.

The default IP address may **not** be activated $\rightarrow \cong 46$.

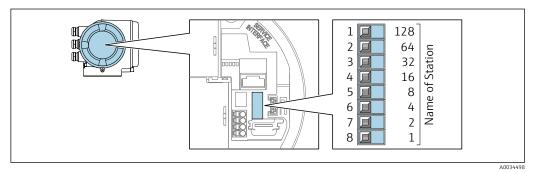

- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary .
- 3. Set the desired device name using the corresponding DIP switches on the I/O electronics module.
- 4. Reverse the removal procedure to reassemble the transmitter.

5. Reconnect the device to the power supply.

└ The configured device address is used once the device is restarted.

Setting the device name via the automation system

DIP switches 1-8 must all be set to **OFF** (factory setting) or all be set to **ON** to be able to set the device name via the automation system.

The complete device name (name of station) can be changed individually via the automation system.

- The serial number used as part of the device name in the factory setting is not saved. It is not possible to reset the device name to the factory setting with the serial number. The value "0" is used instead of the serial number.
 - When assigning the device name via the automation system: assign the device name in lower case letters.


7.5.2 Activating the default IP address

The default IP address 192.168.1.212 can be activated by DIP switch.

Activating the default IP address by DIP switch

Risk of electric shock when opening the transmitter housing.

- Before opening the transmitter housing:
- Disconnect the device from the power supply.

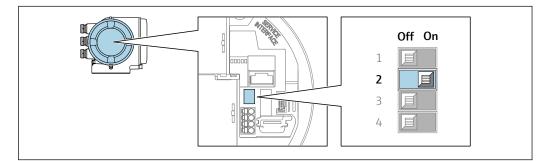

- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary .
- **3.** Set DIP switch No. 2 on the I/O electronics module from **OFF** \rightarrow **ON**.
- 4. Reverse the removal procedure to reassemble the transmitter.
- 5. Reconnect the device to the power supply.
 - └ The default IP address is used once the device is restarted.

7.6 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.


To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.

4. Firmly tighten the cable glands.

5. To ensure that moisture does not enter the cable entry:

Route the cable so that it loops down before the cable entry ("water trap").

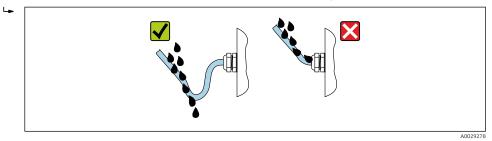


6. Insert dummy plugs into unused cable entries.

7.7 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used meet the requirements?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" $\rightarrow \textcircled{B}$ 46?	
If supply voltage is present, do values appear on the display module?	

8 Operation options

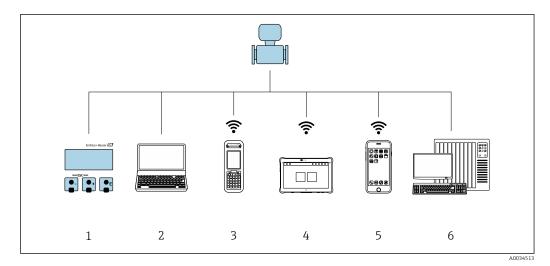

8.1 Overview of operation options

1 Local operation via display module

2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)

3 Field Xpert SFX350 or SFX370

4 Field Xpert SMT70


5 Mobile handheld terminal

6 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device $\Rightarrow \cong 257$

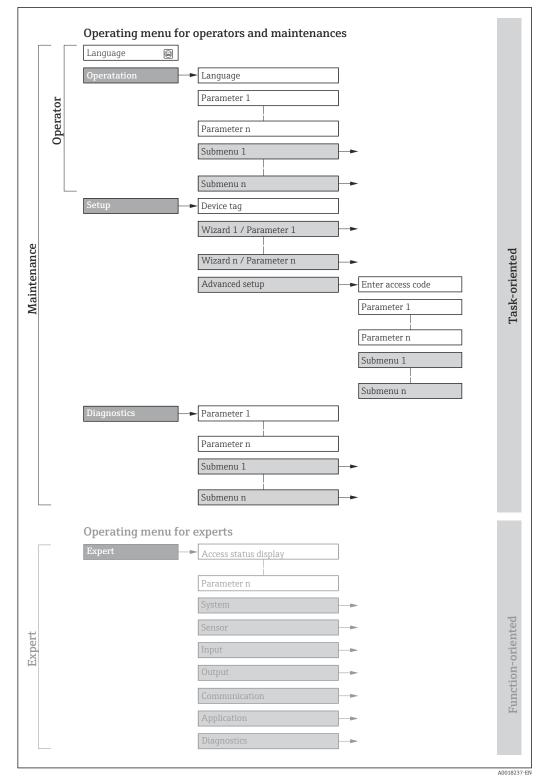

I9 Schematic structure of the operating menu


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Men	u/parameter	User role and tasks	Content/meaning	
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: Configuring the operational	 Defining the operating language Defining the Web server operating language Resetting and controlling totalizers 	
Operation		display Reading measured values	 Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers 	
Setup		 "Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface 	 Wizards for fast commissioning: Setting the system units Configuration of the communication interface Defining the medium Displaying the I/O/configuration Configuring the inputs Configuration of the operational display Setting the low flow cut off Configuring partial and empty pipe detection Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuring the WLAN settings Administration (define access code, reset measuring device) 	
Diagnostics		 "Maintenance" role Fault elimination: Diagnostics and elimination of process and device errors Measured value simulation 	 Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values. 	
Expert	function-oriented	 Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	 Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Input Configuration of the status input. Output Configuration of the analog current outputs as well as the pulse/frequency and switch output. Communication Configuration of the digital communication interface and the Web server. Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology. 	

8.3 Access to the operating menu via the local display

8.3.1 Operational display

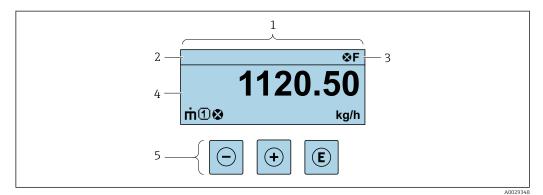

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements $\rightarrow \blacksquare 56$

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 156
 - F: Failure
 - **C**: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior $\rightarrow \cong 157$
 - 🔹 🐼: Alarm
 - <u>M</u>: Warning
- 🟦: Locking (the device is locked via the hardware)
- 🖛 : Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured values

Symbol	Meaning
m	Mass flow
Ú	Volume flowCorrected volume flow
ρ	DensityReference density
4	Temperature
Σ	Totalizer Image: The measurement channel number indicates which of the three totalizers is displayed.
Ð	Status input

Measurement channel numbers

Symbol	Meaning
14	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measure	

The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).


Diagnostic behavior

1

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols $\rightarrow \square 157$


The number and display format of the measured values can be configured via the **Format display** parameter ($\rightarrow \triangleq 115$).

8.3.2 Navigation view

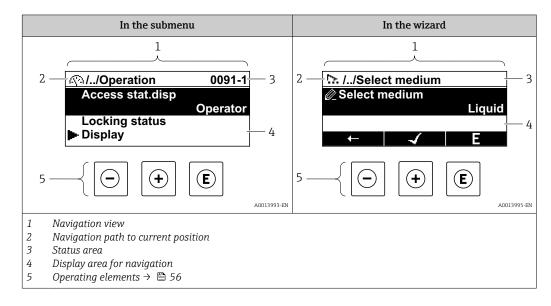

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

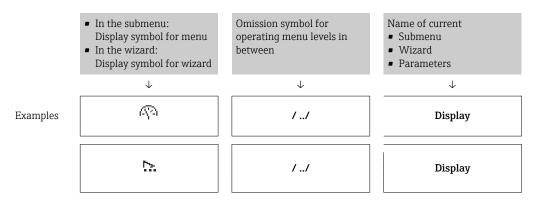

For more information about the icons in the menu, refer to the "Display area" section $\rightarrow \cong 53$

Status area

The following appears in the status area of the navigation view in the top right corner:

- In the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
- If a diagnostic event is present, the diagnostic behavior and status signal In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal

For information on the diagnostic behavior and status signal →
 156
 For information on the function and entry of the direct access code →
 58

Display area

Menus

Symbol	Meaning
(A)	Operation Appears: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu
ų	Setup Appears: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
୍	Diagnostics Appears: In the menu next to the "Diagnostics" selection At the left in the navigation path in the Diagnostics menu
÷	Expert Appears: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
∽.	Wizard
Ø	Parameters within a wizard Image: No display symbol exists for parameters in submenus.

Locking


Symbol	Meaning
Ô	 Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. By a user-specific access code By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

8.3.3 Editing view


Numeric editor

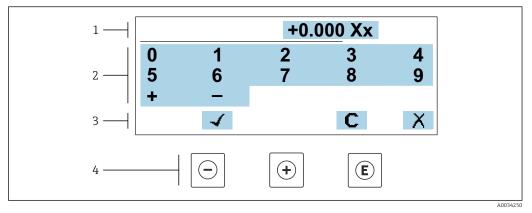

20 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- *3 Confirm, delete or reject entry*
- 4 Operating elements

Text editor

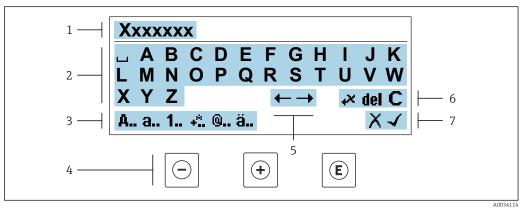

21 For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

Using the operating elements in the editing view

Operating key(s) Meaning
\bigcirc	Minus key Move the entry position to the left.
+	Plus key Move the entry position to the right.

Operating key(s)	Meaning
E	Enter keyPress the key briefly: confirm your selection.Press the key for 2 s: confirm the entry.
-++	Escape key combination (press keys simultaneously) Close the editing view without accepting the changes.

Input screens

Symbol	Meaning
A	Upper case
а	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + - * / ^{2 3} $\frac{1}{4}$ $\frac{1}{2}$ $\frac{3}{4}$ () [] < > { }
@	Punctuation marks and special characters: '" `^. , ; : ? ! % μ ° \in \$ £ ¥ § @ # / \ I ~ & _
ä	Umlauts and accents

Controlling data entries

Symbol	Meaning
←→	Move entry position
X	Reject entry
4	Confirm entry
ו	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
С	Clear all the characters entered

Operating key(s)	Meaning
	Minus key
\bigcirc	<i>In a menu, submenu</i> Moves the selection bar upwards in a picklist.
	With a Wizard Confirms the parameter value and goes to the previous parameter.
	With a text and numeric editor Move the entry position to the left.
	Plus key
	In a menu, submenu Moves the selection bar downwards in a picklist.
(+)	With a Wizard Confirms the parameter value and goes to the next parameter.
	With a text and numeric editor Move the entry position to the right.
	Enter key
Ē	For operational display Pressing the key briefly opens the operating menu.
	 In a menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.
	With a Wizard Opens the editing view of the parameter.
	With a text and numeric editorPress the key briefly: confirm your selection.Press the key for 2 s: confirm the entry.
	Escape key combination (press keys simultaneously)
- + +	 In a menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position").
	<i>With a Wizard</i> Exits the wizard and takes you to the next higher level.
	With a text and numeric editor Close the editing view without accepting the changes.
	Minus/Enter key combination (press the keys simultaneously)
- + E	 If the keypad lock is active: Press the key for 3 s: deactivate the keypad lock. If the keypad lock is not active: Press the key for 3 s: the context menu opens along with the option for activating the keypad lock.

8.3.4 **Operating elements**

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

Calling up and closing the context menu

The user is in the operational display.

- **1.** Press the \Box and \blacksquare keys for longer than 3 seconds.
 - └ The context menu opens.

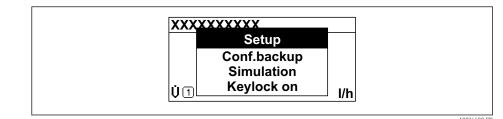

2. Press - + + simultaneously.

└ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.

2. Press \pm to navigate to the desired menu.

3. Press 🗉 to confirm the selection.


└ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\rightarrow \cong 52$

Example: Setting the number of displayed measured values to "2 values"

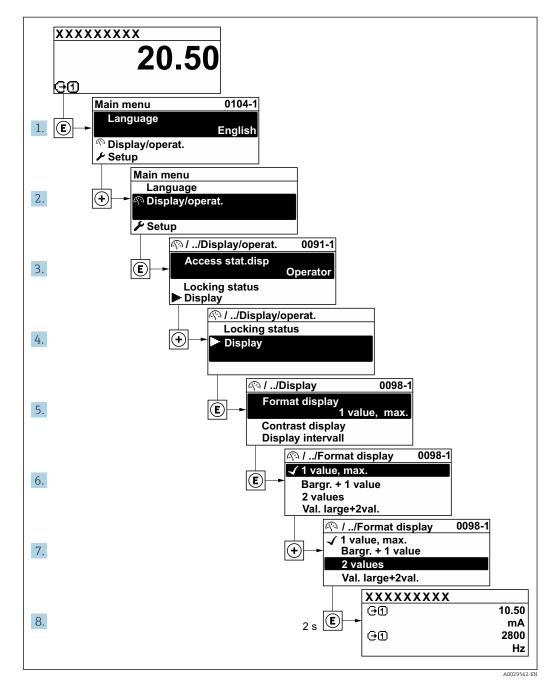


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

Expert \rightarrow Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

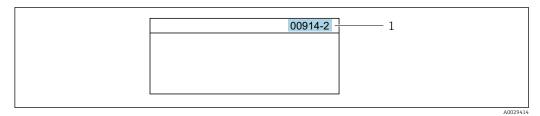

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter **"914"** instead of **"00914"**
- If no channel number is entered, channel 1 is accessed automatically.
- Example: Enter **00914** \rightarrow **Assign process variable** parameter
- If a different channel is accessed: Enter the direct access code with the corresponding channel number.

Example: Enter 00914-2 → Assign process variable parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press E for 2 s.

← The help text for the selected parameter opens.

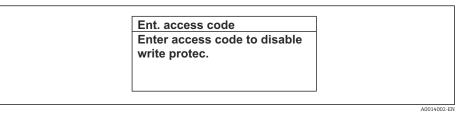

- 22 Example: Help text for parameter "Enter access code"
- **2.** Press \Box + \pm simultaneously.
 - └ The help text is closed.

8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.Text editor: Enter text in a parameter, e.g. tag name.
- A message is displayed if the value entered is outside the permitted value range.

. access code
alid or out of range ir
ue
:0
x:9999

For a description of the editing view - consisting of the text editor and numeric editor - with symbols → 🗎 54, for a description of the operating elements → 🗎 56

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access $\rightarrow \cong 138$.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
 - ← The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ ¹⁾

Access authorization to parameters: "Maintenance" user role

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	1)

 Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status

8.3.11 Disabling write protection via access code

If the B-symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation \rightarrow B 138.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ($\rightarrow \square$ 121) via the respective access option.

1. After you press E, the input prompt for the access code appears.

2. Enter the access code.

➡ The B -symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.

Press the \Box and \blacksquare keys for 3 seconds.

└ A context menu appears.

- 2. In the context menu select the **Keylock on** option.
 - └ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

Switching off the keypad lock

- - └ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

For additional information on the Web server, refer to the Special Documentation for the device $\rightarrow \cong 257$

Prerequisites 8.4.2

Computer hardware

Hardware	Interface		
	CDI-RJ45	WLAN	
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.	
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.	
Screen	Recommended size: ≥12" (depends on the screen resolution)		

Computer software

Software	Interface		
	CDI-RJ45	WLAN	
Recommended operating systems	 Microsoft Windows 7 or higher. Mobile operating systems: iOS Android Microsoft Windows XP is supported. 		
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari 		

Computer settings

Settings	Interface		
	CDI-RJ45	WLAN	
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).		
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .		
JavaScript JavaScript must be enabled. If JavaScript cannot be enabled: enter http://192.168.1.212/basic.html in the address line of browser. A fully functional but simplified version of the opera structure starts in the Web browser.			
		nplified version of the operating menu	
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options .		
Network connections	Only the active network connections to the measuring device should be used.		
	Switch off all other network connections such as WLAN.	Switch off all other network connections.	



In the event of connection problems: $\rightarrow \cong 153$

Measuring device: Via CDI-RJ45 service interface

CDI-RJ45 service interface	
The measuring device has an RJ45 interface.	
Web server must be enabled; factory setting: ON ■ For information on enabling the Web server → ■ 67	

Measuring device: via WLAN interface

Device	WLAN interface
Measuring device	The measuring device has a WLAN antenna: • Transmitter with integrated WLAN antenna • Transmitter with external WLAN antenna
Web server	 Web server and WLAN must be enabled; factory setting: ON i For information on enabling the Web server → 67

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

- Depending on the housing version: Release the securing clamp or securing screw of the housing cover.
- 2. Depending on the housing version:

Unscrew or open the housing cover.

3. The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Configuring the Internet protocol of the computer

The IP address can be assigned to the measuring device in a variety of ways:

Dynamic Configuration Protocol (DCP), factory setting:

The IP address is automatically assigned to the measuring device by the automation system (e.g. Siemens S7).

- Hardware addressing:
 - The IP address is set via DIP switches $\rightarrow \cong 44$.
- Software addressing:
 - The IP address is entered via the IP address parameter ($\rightarrow \implies$ 92) .

The measuring device works with the Dynamic Configuration Protocol (DCP), on leaving the factory, i.e. the IP address of the measuring device is automatically assigned by the automation system (e.g. Siemens S7).

To establish a network connection via the service interface (CDI-RJ45): set the "Default IP address" DIP switch to **ON**. The measuring device then has the fixed IP address: 192.168.1.212. This address can now be used to establish the network connection.

1. Via DIP switch 2, activate the default IP address 192.168.1.212: \rightarrow 46.

- 2. Switch on the measuring device.
- 3. Connect to the computer using a cable $\rightarrow \triangleq 69$.

- 4. If a 2nd network card is not used, close all the applications on the notebook.
 - ← Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 5. Close any open Internet browsers.
- 6. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213	
Subnet mask	255.255.255.0	
Default gateway	192.168.1.212 or leave cells empty	

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal:
 - Select the measuring device using the SSID (e.g. EH_Promass_300_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.

The serial number can be found on the nameplate.

To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Disconnecting


 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

Starting the Web browser

1. Start the Web browser on the computer.

2. Enter the IP address of the Web server in the address line of the Web browser: 192.168.1.212

└ The login page appears.

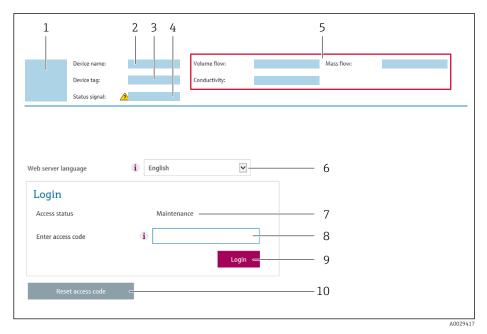

- 1 Picture of device
- 2 Device name
- 3 Device tag4 Status sign
- 4 Status signal5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ($\rightarrow \square 134$)

If a login page does not appear, or if the page is incomplete $\rightarrow \square$ 153

8.4.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer
--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

Output curr. 1: 6.76 mA Correct.vol.flow: 15547326.0000 NI/h Device name Endress+Hauser 🖽 Device tag: Mass flow: 1554.7325 kg/h Density: 0.0001 kg/l Contraction Device ok 15547326.0000 l/h 0.0001 kg/NI Status signal: Volume flow: Ref.density: Measured values Menu Instrument health status Data management Network Logging Logout (Maintenance) Main menu 1 2 i English ⊻ -Display language 3

8.4.5 User interface

- 1 Function row
- 2 Local display language
- 3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal $\rightarrow \cong 159$
- Current measured values

Function row

Functions	Meaning	
Measured values	Displays the measured values of the measuring device	
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the local display For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device 	
Device status	Displays the diagnostic messages currently pending, listed in order of priority	
Data management	 Data exchange between PC and measuring device: Device configuration: Load settings from the device (XML format, save configuration) Save settings to the device (XML format, restore configuration) Logbook - Export Event logbook (.csv file) Documents - Export documents: Export backup data record (.csv file, create documentation of the measuring point configuration) Verification report (PDF file, only available with the "Heartbeat Verification" application package) File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: PROFINET: GSD file Firmware update - Flashing a firmware version 	
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device:Network settings (e.g. IP address, MAC address)Device information (e.g. serial number, firmware version)	
Logout	End the operation and call up the login page	

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection
Web server functionality	Switch the Web server on and off.	OffHTML OffOn

Function scope of the "Web server functionality" parameter


Option	Description	
Off	The web server is completely disabled.Port 80 is locked.	
HTML Off	The HTML version of the web server is not available.	
On	 The complete functionality of the web server is available. JavaScript is used. The password is transferred in an encrypted state. Any change to the password is also transferred in an encrypted state. 	

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

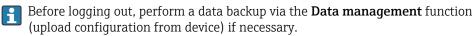

1. Select the **Logout** entry in the function row.

└ The home page with the Login box appears.

2. Close the Web browser.

3. If no longer needed:

Reset modified properties of the Internet protocol (TCP/IP) $\rightarrow \oplus$ 63.

If communication with the Web server was established via the default IP address 192.168.1.212, DIP switch No. 10 must be reset (from $ON \rightarrow OFF$). Afterwards, the IP address of the device is active again for network communication.

8.5 Access to the operating menu via the operating tool


The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via PROFINET network

This communication interface is available in device versions with PROFINET.

Star topology

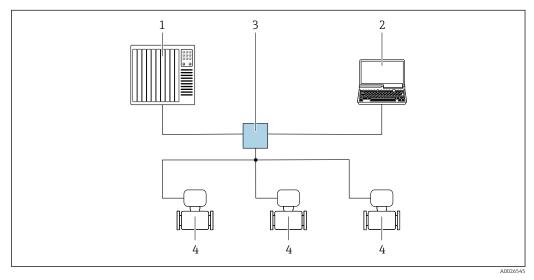


23 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- *3* Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

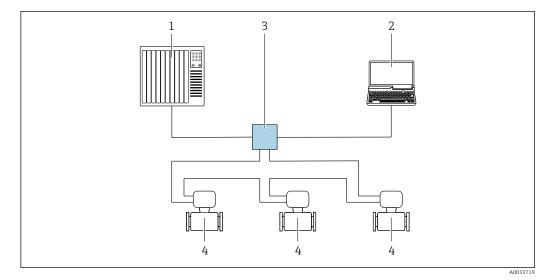

24 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Service interface


Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.



An adapter for RJ45 and the M12 connector is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

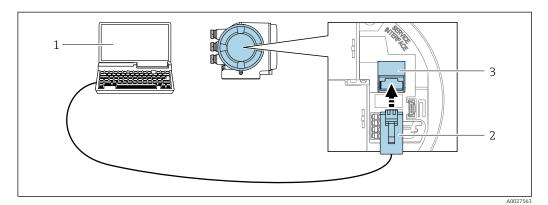


■ 25 Connection via service interface (CDI-RJ45)

- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

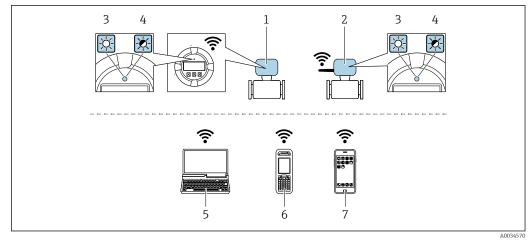

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	 Internal antenna External antenna (optional) In the event of poor transmission/reception conditions at the place of installation. Only one antenna active in each case!
Range	 Internal antenna: typically 10 m (32 ft) External antenna: typically 50 m (164 ft)
Materials (external antenna)	 Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel- plated brass Adapter: Stainless steel and nickel-plated brass Cable: Polyethylene Connector: Nickel-plated brass Angle bracket: Stainless steel

Configuring the Internet protocol of the mobile terminal

NOTICE

- If the WLAN connection is lost during the configuration, settings made may be lost.
- Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal:
 - Select the measuring device using the SSID (e.g. EH_Promass_300_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.

To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Disconnecting

 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

8.5.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- CDI-RJ45 service interface $\rightarrow \cong 69$
- WLAN interface $\rightarrow = 69$

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files

See information $\rightarrow \square 74$

Establishing a connection

1. Start FieldCare and launch the project.

2. In the network: Add a device.

← The **Add device** window opens.

- 3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
- 4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.

Select the desired device from the list and press OK to confirm.
 The CDI Communication TCP/IP (Configuration) window opens.

- 6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
- 7. Establish the online connection to the device.

For additional information, see Operating Instructions BA00027S and BA00059S

User interface

Xxxxxxx/// Image: Constraint of the second	7 ※ F · · · · · · · · · · · · · · · · · ·
8 Xxxxxx Consider the second setup Advanced setup Consider the second s	Mass flow unit: kg/h v Volume flow unit: m ³ /h v - 9
10 11	A0021051-E


- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal →
 [□] 159
 6 Display area for current measured values
- 6 Display area for current measured values 7 Edit too be with additional functions such as ague (meters quest list and
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

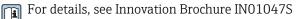

Source for device description files

See information \rightarrow B 74

9 System integration

9.1 **Overview of device description files**

9.1.1 Current version data for the device

Firmware version	01.01.zz	 On the title page of the Operating instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	07.2019	-
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device ID	0x843B	Device ID Expert → Communication → PROFINET configuration → PROFINET information → Device ID
Device type ID	Promass 300	Device Type Expert → Communication → PROFINET configuration → PROFINET information → Device Type
Device revision	2	Device revision Expert → Communication → PROFINET configuration → PROFINET information → Device revision
PROFINET version	2.3.x	-

For an overview of the different firmware versions for the device $\rightarrow \cong 221$

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via Service interface (CDI)	Sources for obtaining device descriptions
FieldCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFINET system needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

9.2.1 File name of the device master file (GSD)

Example of the name of a device master file:

GSDML-V2.3.x-EH-PROMASS 300-yyyymmdd.xml

GSDML	Description language	
V2.3.x	Version of the PROFINET specification	
EH	Endress+Hauser	
PROMASS Instrument family		
300 Transmitter		
yyyymmdd Date of issue (yyyy: year, mm: month, dd: day)		
.xml	File name extension (XML file)	

9.3 Cyclic data transmission

9.3.1 Overview of the modules

The following tables shows which modules are available to the measuring device for cyclic data exchange. Cyclic data exchange is performed with an automation system.

Measuring device		Direction	Control system	
Module	Slot	Data flow	Control System	
Analog Input module → 🗎 76	1 to 14, 24 to 26, 27	\rightarrow		
Application-specific Input module → 🗎 78	31, 32	\rightarrow		
Digital Input module → 🗎 78	1 to 14	→		
Diagnose Input module → 🗎 79	1 to 14	\rightarrow		
Analog Output module → 🗎 81	18, 19, 20, 29, 30	÷	PROFINET	
Digital Output module $\rightarrow \cong 82$	21, 22, 24 to 26	÷		
Totalizer 1 to 3 $\rightarrow \square 80$	15 to 17	← →		
Heartbeat Verification module $\rightarrow \square 83$	23	← →		
Concentration $\rightarrow \blacksquare 83$	28	← →		

9.3.2 Description of the modules

The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, along with the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the input variable.

Selection: input variable

Slot	Input variables
1 to 14	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronic temperature Oscillation frequency Frequency fluctuation Oscillation damping Tube damping fluctuation Signal asymmetry Exciter current Application-specific output 0 Application-specific output 1 Index inhomogeneous medium Index suspended bubbles
24 to 26	Current input value
1 to 14	Additional input variables with the Heartbeat Verification application package Carrier pipe temperature Oscillation damping 1 Oscillation frequency 1 Oscillation amplitude 0 Oscillation amplitude 1 Frequency fluctuation 1 Tube damping fluctuation 1 Exciter current 1 HBSI
1 to 14, 27	Additional input variables with the Concentration Measurement application package • Concentration (slot 1 to 14) • Target mass flow (slot 1 to 14) • Carrier mass flow (slot 1 to 14) • Concentration value (slot 27)
1 to 14	Additional input variables with the Petroleum application package Oil density Water density Water cut % Oil mass flow Water mass flow Oil volume flow Water volume flow Oil corrected volume flow Water corrected volume flow Replacement reference density Gross corrected volume flow, replacement Net corrected volume flow Net corrected volume flow Replacement and water volume flow

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)			Status 1)	

1) Status coding $\rightarrow \square 84$

Application-specific Input module

Transmit compensation values from the automation system to the measuring device.

The Application-specific Input module cyclically transmits compensation values, including the status, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values



The configuration is performed via: Expert \rightarrow Application \rightarrow Application specific calculations \rightarrow Process variables

Slot	Compensation value
31	Application-specific Input module
32	Application-specific Input module

Data structure

Input data of Application-specific Input module

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status 1)

1) Status coding $\rightarrow \square 84$

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert \rightarrow Application \rightarrow Application specific calculations \rightarrow Process variables

Fail safe type parameter

- Fail-safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- **Off** option: Failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Input module

Transmit digital input values from the measuring device to the automation system.

Digital input values are used by the measuring device to transmit the state of device functions to the automation system.

Digital Input modules cyclically transmit discrete input values, including the status, from the measuring device to the automation system. The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Selection: device function

Slot	Device function	Status (meaning)	
1 to 14	Empty pipe detection	 0 (device function not active) 	
	Low flow cut off	 1 (device function active) 	

Data structure

Input data of Digital Input

Byte 1	Byte 2
Digital Input	Status ¹⁾

1) Status coding $\rightarrow \square 84$

Diagnose Input module

Transmit discrete input values (diagnostic information) from the measuring device to the automation system.

Diagnostic information is used by the measuring device to transmit the device status to the automation system.

Diagnose Input modules transmit discrete input values from the measuring device to the automation system. The first two bytes contain the information regarding the diagnostic information number ($\rightarrow \square$ 164). The third byte provides the status.

Selection: device function

Slot	Device function	Status (meaning)	
1 to 14	Last diagnostics	Diagnostic information number	
	Current diagnosis	($\rightarrow \square$ 164) and status	

Information about pending diagnostic information $\rightarrow \cong 215$.

Data structure

Input data of Diagnose Input

Byte 1	Byte 2	Byte 3	Byte 4
Diagnostic information number		Status	Value 0

Status

Coding (hex)	Status
0x00	No device error is present.
0x01	Failure (F): A device error is present. The measured value is no longer valid.
0x02	Function check (C): The device is in service mode (e.g. during a simulation).
0x04	Maintenance required (M): Maintenance is required. The measured value is still valid.
0x08	Out of specification (S): The device is being operated outside its technical specification limits (e.g. process temperature range).

Totalizer module

The Totalizer module consists of the Totalizer Value, Totalizer Control and Totalizer Mode submodules.

Totalizer Value submodule

Transmit transmitter value from the device to the automation system.

Totalizer modules cyclically transmit a selected totalizer value, along with the status, from the measuring device to the automation system via the Totalizer Value submodule. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the totalizer value.

Selection: input variable

Slot	Sub-slot	Input variable
1517	1	 Mass flow Volume flow Corrected volume flow Target mass flow ¹⁾ Carrier mass flow ¹⁾

1) Only available with the Concentration application package

Data structure of input data (Totalizer Value submodule)

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754) Status ¹⁾				

1) Status coding $\rightarrow \square 84$

Totalizer Control submodule

Control the totalizer via the automation system.

Selection: control totalizer

Slot	Sub-slot	Value	Control totalizer
		0	Totalize
		1	Reset + hold
1517	2	2	Preset + hold
	Δ	3	Reset + totalize
		4	Preset + totalize
		5	Hold

Data structure of output data (Totalizer Control submodule)

Byte 1	
Control variable	

Totalizer Mode submodule

Configure the totalizer via the automation system.

Selection: totalizer configuration

Slot	Sub-slot	Value	Control totalizer
1517		0	Balancing
	3	1 Balance the positive flow	Balance the positive flow
	-	2	Balance the negative flow

Data structure of output data (Totalizer Mode submodule)

Byte 1
Configuration variable

Analog Output module

Transmit compensation values from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, along with the status and the associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value. The unit is transmitted in the sixth and seventh byte.

Assigned compensation values

The configuration is performed via: Expert \rightarrow Sensor \rightarrow External compensation

Slot	Compensation value	
18	External pressure	
19	External temperature	
20	External reference density	
29	External value for % S&W (sediment and water) ¹⁾	
30	External value for % Water cut ¹⁾	

1) Only available with the Petroleum application package.

Available units

Pres	sure	Tempe	erature	Den	sity	Per	cent
Unit code	Unit	Unit code	Unit	Unit code	Unit	Unit code	Unit
1610	Pa a	1001	°C	32840	kg/Nm ³	1342	%
1616	kPa a	1002	°F	32841	kg/Nl		
1614	MPa a	1000	К	32842	g/Scm ₃		
1137	bar	1003	°R	32843	kg/Scm₃		
1611	Pa g			32844	lb/Sft ₃		
1617	kPa g						
1615	MPa g						
32797	bar g						
1142	psi a						
1143	psi g						

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Measured value: floating point number (IEEE 754)				Status 1)	Unit	code

1) Status coding $\rightarrow \square 84$

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the fails afe mode: Expert \rightarrow Sensor \rightarrow External compensation

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Output module

Transmit digital output values from the automation system to the measuring device.

Digital output values are used by the automation system to enable and disable device functions.

Digital output values cyclically transmit discrete output values, including the status, from the automation system to the measuring device. The discrete output value is transmitted in the first byte. The second byte contains status information pertaining to the output value.

Assigned device functions

Slot	Device function	Status (meaning)	
21	Flow override	• 0 (disable device function)	
22	Zero point adjustment	• 1 (enable device function)	
24 to 26	Relay output	Relay output value: • 0 • 1	

Data structure

Output data of Digital Output

Byte 1	Byte 2
Digital Output	Status ^{1) 2)}

1) Status coding $\rightarrow \square 84$

2) If the status is BAD, the control variable is not adopted.

Heartbeat Verification module

Receive discrete output values from the automation system and transmit discrete input values from the measuring device to the automation system.

The Heartbeat Verification module receives discrete output data from the automation system and transmits discrete input data from the measuring device to the automation system.

The discrete output value is provided by the automation system in order to start Heartbeat Verification. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

The discrete input value is used by the measuring device to transmit the status of the Heartbeat Verification device functions to the automation system. The module cyclically transmits the discrete input value, along with the status, to the automation system. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

Only available with the Heartbeat Verification application package.

Assigned device functions

Slot	Device function	Bit	Verification status
		0	Verification has not been performed
	Status verification (input data)	1	Verification has failed
		2	Currently performing verification
		3	Verification terminated
		Bit	Verification result
23		4	Verification has failed
	Verification result (input data)	5	Verification performed successfully
	Start verification (output data)	6	Verification has not been performed
		7	-
		Verif	ication control
		A cha	nge in the status from 0 to 1 starts the verification

Data structure

Output data of the Heartbeat Verification module

Byte 1	
Discrete Output	

Input data of the Heartbeat Verification module

Byte 1	Byte 2	
Discrete Input	Status 1)	

1) Status coding $\rightarrow \square 84$

Concentration module



Only available with the Concentration Measurement application package.

Assigned device functions

Slot Input variables		Input variables
	28	Selection of the liquid type

Data structure

Concentration output data

Byte 1
Control variable

Liquid type	Enum code	
Off	0	
Sucrose in water	5	
Glucose in water	2	
Fructose in water	1	
Invert sugar in water	6	
Corn syrup HFCS42	15	
Corn syrup HFCS55	16	
Corn syrup HFCS90	17	
Original wort	18	
Ethanol in water	11	
Methanol in water	12	
Hydrogen peroxide in water	4	
Hydrochloric acid	24	
Sulfuric acid	25	
Nitric acid	7	
Phosphoric acid	8	
Sodium hydroxide	10	
Potassium hydroxide	9	
Ammonium nitrate in water	13	
Iron(III) chloride in water	14	
% mass / % volume	19	
User Profile Coef Set No. 1	21	
User Profile Coef Set No. 2	22	
User Profile Coef Set No. 3	23	

9.3.3 Status coding

Status	Coding (hex)	Meaning	
BAD - Maintenance alarm	0x24	A measured value is not available because a device error has occurred.	
BAD - Process related	0x28	A measured value is not available because the process conditions are not within the device's technical specification limits.	
BAD - Function check	0x3C	A function check is active (e.g. cleaning or calibration)	

Status	Coding (hex)	Meaning	
UNCERTAIN - Initial value	0x4F	 A pre-defined value is output until a correct measured value is available again or until remedial measures have been carried out that change this status. Signs of wear and tear have been detected on the measuring device. Short-term maintenance is needed to ensure that the measuring device remains operational. The measured value might be invalid. The use of the measured value depends on the application. 	
UNCERTAIN - Maintenance demanded	0x68		
UNCERTAIN - Process related	0x78	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.	
GOOD - OK	0x80	No error has been diagnosed.	
GOOD - Maintenance demanded	0xA8	The measured value is valid. It is highly advisable to service the device in the near future.	
GOOD - Function check	0xBC	The measured value is valid. The measuring device is performing an internal function check. The function check does not have any noticeable effect on the process.	

9.3.4 Factory setting

The slots are already assigned in the automation system for initial commissioning.

Assigned slots

Slot	Factory setting
1	Mass flow
2	Volume flow
3	Corrected volume flow
4	Density
5	Reference density
6	Temperature
7-14	-
15	Totalizer 1
16	Totalizer 2
17	Totalizer 3


9.3.5 Startup configuration

If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used. The following configuration is taken from the automation system.

Startup configuration	 Management:
(NSU)	 Software revision
()	 Write protection
	 Web server functionality
	 WLAN functionality
	 System units:
	 Mass flow
	 Mass
	 Volume flow
	 Volume
	 Corrected volume flow
	 Corrected volume
	 Density
	 Reference density
	 Temperature
	 Pressure
	 Concentration application package:
	 Coefficients A0 to A4
	 Coefficients B1 to B3
	Medium type
	Sensor adjustment
	 Process parameter: Demois a (flow density term entry)
	 Damping (flow, density, temperature)
	Flow overrideLow flow cut off:
	Assign process variableSwitch-on/switch-off point
	 Pressure shock suppression
	 Empty pipe detection:
	 Assign process variable
	 Limit values
	 Response time
	 Max. damping
	 Corrected volume flow calculation:
	 External reference density
	 Fixed reference density
	 Reference temperature
	 Linear expansion coefficient
	 Square expansion coefficient
	 Measuring mode:
	 Medium
	 Gas type
	 Reference sound velocity
	 Temperature coefficient sound velocity
	 External compensation:
	 Pressure compensation
	Pressure value
	External pressure
	Alarm delay
	Diagnostic settings
	Diagnostic behavior for diverse diagnostic information
	Petroleum application package:
	Petroleum mode Weten densite unit
	 Water density unit Water reference density unit
	 Water reference density unit Oil density unit
	 Oil density unit Oil comple density
	 Oil sample density Oil sample temperature
	 Oil sample temperature Oil cample pressure
	Oil sample pressureWater sample density
	 Water sample density Water sample temperature
	 API commodity group
	 API table selection


9.4 System redundancy S2

A redundant layout with two automation systems is necessary for processes that are in continuous operation. If one system fails the second system guarantees continued, uninterrupted operation. The measuring device supports S2 system redundancy and can communicate with both automation systems simultaneously.

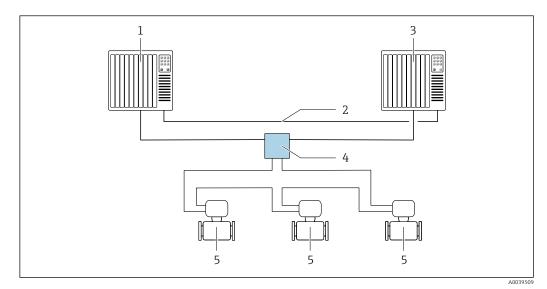


26 Example of the layout of a redundant system (S2): ring topology

- 1 Automation system 1
- 2 Synchronization of automation systems
- 3 Automation system 2
- 4 Industrial Ethernet Managed Switch
- 5 Measuring device

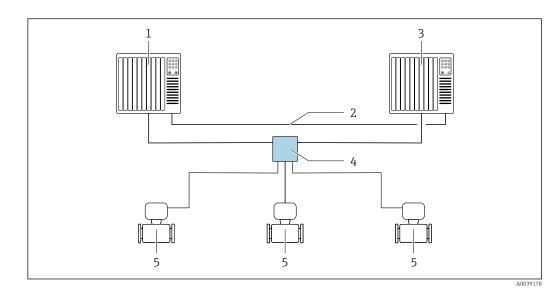

■ 27 Example of the layout of a redundant system (S2): star topology

- 1 Automation system 1
- 2 Synchronization of automation systems
- 3 Automation system 2
- 4 Industrial Ethernet Managed Switch
- 5 Measuring device

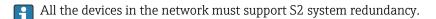

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist $\rightarrow \cong 29$
- "Post-connection check" checklist $\rightarrow \square 47$

10.2 Switching on the measuring device

- ► After a successful function check, switch on the measuring device.
 - ← After a successful startup, the local display switches automatically from the startup display to the operational display.


If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" $\rightarrow \square$ 152.

10.3 Connecting via FieldCare

- For FieldCare $\rightarrow \triangleq 69$ connection
- For connecting via FieldCare \rightarrow \square 71
- For the FieldCare $\rightarrow \square$ 72 user interface

10.4 Setting the operating language


Factory setting: English or ordered local language

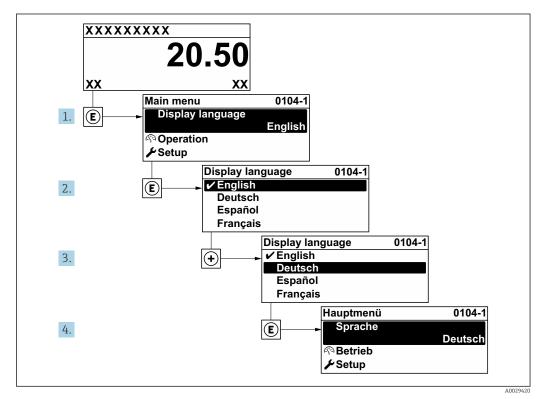

🖻 28 Taking the example of the local display

10.5 Configuring the measuring device


- The Setup menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the Setup menu

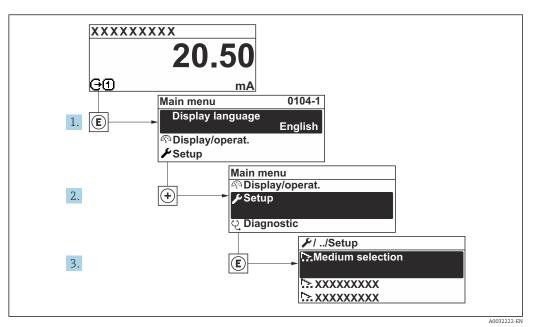

29 Taking the example of the local display

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operation Instructions. Instead a description is provided in the Special Documentation for the device (→ "Supplementary documentation" section).

✓ Setup	
Name of station	→ 🗎 90
► System units	→ 🗎 90
► Communication	→ 🗎 92
► Medium selection	→ 🗎 94
► I/O configuration	→ 🗎 95
► Current input 1 to n	→ 🗎 96
► Status input 1 to n	
► Current output 1 to n	→ 🗎 98
Pulse/frequency/switch output 1 to n	→ 🗎 102

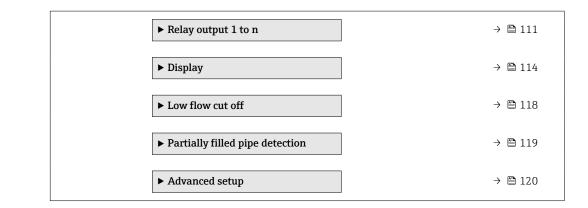

10.5.1 Defining the tag name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station) of the PROFINET specification (data length: 255 bytes)

The device name can be changed via DIP switches or the automation system .

The device name currently used is displayed in the **Name of station** parameter.

Navigation

"Setup" menu → Name of station

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Name of station	Name of the measuring point.		EH-PROMASS300 serial number of the device

10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operation Instructions. Instead a description is provided in the Special Documentation for the device (→ "Supplementary documentation" section).

Navigation

"Setup" menu → System units

► System units	
Mass flow unit) → 🗎 91
Mass unit] → 🗎 91
Volume flow unit) → 🗎 91
Volume unit) → 🗎 91
Corrected volume flow unit) → 🗎 91

Corrected volume unit	-	→ 🖺 91
Density unit	-	→ 🖺 91
Reference density unit	-	→ 🗎 91
Temperature unit	-	→ 🗎 92
Pressure unit	-	→ 🖺 92

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. Result The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific: • kg/h • lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: • kg • lb
Volume flow unit	Select volume flow unit. Result The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific: • l/h • gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: • 1 (DN > 150 (6"): m ³ option) • gal (us)
Corrected volume flow unit	Select corrected volume flow unit. Result The selected unit applies for: Corrected volume flow parameter $(\rightarrow \cong 142)$	Unit choose list	Country-specific: • Nl/h • Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: • NI • Sft ³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: • Output • Simulation process variable • Density adjustment (Expert menu)	Unit choose list	Country-specific: • kg/l • lb/ft ³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent • kg/Nl • lb/Sft ³

Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit.ResultThe selected unit applies for:• Electronic temperature parameter (6053)• Maximum value parameter (6051)• Minimum value parameter (6052)• External temperature parameter (6080)• Maximum value parameter (6108)• Minimum value parameter (6109)• Carrier pipe temperature parameter (6027)• Maximum value parameter (6029)• Minimum value parameter (6030)• Reference temperature parameter (1816)• Temperature parameter	Unit choose list	Country-specific: • °C • °F
Pressure unit	 Select process pressure unit. <i>Result</i> The unit is taken from: Pressure value parameter (→ ● 95) External pressure parameter (→ ● 95) Pressure value 	Unit choose list	Country-specific: • bar a • psi a

10.5.3 Displaying the communication interface

The **Communication** submenu shows all the current parameter settings for selecting and configuring the communication interface.

Navigation

"Setup" menu \rightarrow Communication

► Communication	
MAC address	→ 🗎 92
IP address	→ 🗎 92
Subnet mask) → 🗎 93
Default gateway) → 🗎 93

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
MAC address	Displays the MAC address of the measuring device. MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.
IP address	IP address of the Web server integrated in the measuring device.	4 octet: 0 to 255 (in the particular octet)	-
	If the DHCP client is switched off and write access is enabled, the IP address can also be entered.		

Parameter	Description	User interface / User entry	Factory setting
Subnet mask	Displays the subnet mask. If the DHCP client is switched off and write access is enabled, the Subnet mask can also be entered.	4 octet: 0 to 255 (in the particular octet)	-
Default gateway	Displays the default gateway. If the DHCP client is switched off and write access is enabled, the Default gateway can also be entered.	4 octet: 0 to 255 (in the particular octet)	-

10.5.4 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu → Select medium

► Medium selection				
Select medium	→ 🗎 95			
Select gas type	→ 🗎 95			
Reference sound velocity	→ 🗎 95			
Temperature coefficient sound velocity	→ 🗎 95			
Pressure compensation	→ 🗎 95			
Pressure value	→ 🗎 95			
External pressure	→ 🗎 95			

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium	-	Select medium type.	LiquidGas	-
Select gas type	The Gas option is selected in the Select medium parameter.	Select measured gas type.	 Air Ammonia NH3 Argon Ar Sulfur hexafluoride SF6 Oxygen O2 Ozone O3 Nitrogen oxide NOx Nitrogen N2 Nitrous oxide N2O Methane CH4 Hydrogen H2 Helium He Hydrogen chloride HCl Hydrogen sulfide H2S Ethylene C2H4 Carbon dioxide CO2 Carbon monoxide CO Chlorine Cl2 Butane C4H10 Propane C3H6 Ethane C2H6 Others 	
Reference sound velocity	In the Select gas type parameter, the Others option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99999.9999 m/ s	-
Temperature coefficient sound velocity	The Others option is selected in the Select gas type parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating- point number	0 (m/s)/K
Pressure compensation	-	Select pressure compensation type.	 Off Fixed value External value Current input 1 * Current input 2 * 	-
Pressure value	The Fixed value option or the Current input 1n option is selected in the Pressure compensation parameter.	Enter process pressure to be used for pressure correction.	Positive floating- point number	-
External pressure	The Fixed value option or the Current input 1n option is selected in the Pressure compensation parameter.	Shows the external process pressure value.	Positive floating- point number	-

Parameter overview with brief description


* Visibility depends on order options or device settings

10.5.5 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu \rightarrow I/O configuration

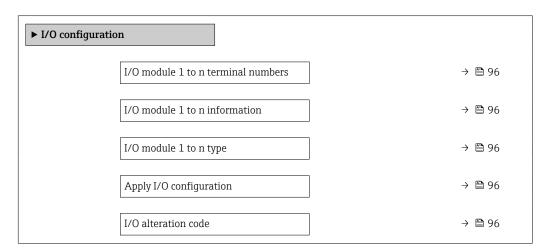

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	 Not used 26-27 (I/O 1) 24-25 (I/O 2) 22-23 (I/O 3)
I/O module 1 to n information	Shows information of the plugged I/O module.	 Not plugged Invalid Not configurable Configurable PROFINET
I/O module 1 to n type	Shows the I/O module type.	 Off Current output * Current input * Status input * Pulse/frequency/switch output * Double pulse output * Relay output *
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	NoYes
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer

* Visibility depends on order options or device settings

10.5.6 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu → Current input

► Current input 1 to n		
Terminal number		→ 🗎 97

Signal mode) → 🗎 97
0/4 mA value	→ 🗎 97
20 mA value	→ 🗎 97
Current span	→ 🗎 97
Failure mode	→ 🗎 97
Failure value) → 🗎 97

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	PassiveActive[*]	Active
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	-
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA (4 20.5 mA) 420 mA NAMUR (3.820.5 mA) 420 mA US (3.920.8 mA) 020 mA (0 20.5 mA) 	Country-specific: • 420 mA NAMUR (3.820.5 mA) • 420 mA US (3.920.8 mA)
Failure mode	-	Define input behavior in alarm condition.	AlarmLast valid valueDefined value	-
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	-

* Visibility depends on order options or device settings

10.5.7 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu → Status input

► Status input 1 to n	
Assign status input] → 🗎 98
Terminal number] → 🗎 98
Active level] → 🗎 98
Terminal number] → 🗎 98
Response time status input) → 🗎 98
Terminal number) → 🗎 98

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry
Terminal number	Shows the terminal numbers used by the status input module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3)
Assign status input	Select function for the status input.	 Off Reset totalizer 1 Reset totalizer 2 Reset totalizer 3 Reset all totalizers Flow override Zero point adjustment
Active level	Define input signal level at which the assigned function is triggered.	HighLow
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms


10.5.8 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu → Current output

► Current output 1 to n				
Terminal number) → 🗎 99			
Signal mode) → 🗎 99			
Assign current output 1 to n) → 🗎 100			

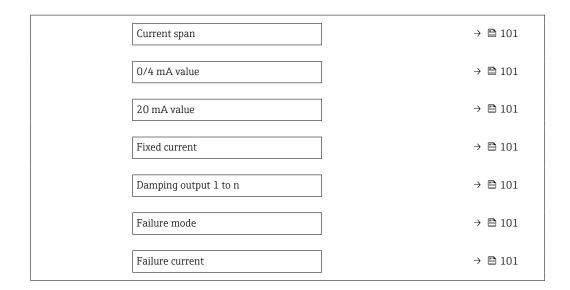

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Signal mode	-	Select the signal mode for the current output.	 Active * Passive * 	Active

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Assign current output 1 to n		Select process variable for current output.	 Off * Mass flow Volume flow Corrected volume flow * Target mass flow * Carrier mass flow * Carrier volume flow * Carrier volume flow * Carrier corrected volume flow * Density Reference density * GSV flow * alternative * SSW volume flow * NSV flow * NSV flow * NSV flow * Oil density * Water cut * Oil density * Water density * Oil corrected volume flow * Water volume flow * Water corrected volume flow * Oil corrected volume flow * Poscillation frequency 0 Oscillation damping 0* Oscillation damping 0* Oscillation damping 0* Signal asymmetry * Exciter current 0 * HBSI * Pressure * Application specific output 0 * Application specific output 0 * Application specific output 1 * Index suspended bubbles * 	

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA NAMUR (3.820.5 mA) 420 mA US (3.920.8 mA) 420 mA (4 20.5 mA) 020 mA (0 20.5 mA) Fixed current 	Country-specific: • 420 mA NAMUR (3.820.5 mA) • 420 mA US (3.920.8 mA)
0/4 mA value	In the Current span parameter (→ ■ 101), one of the following options is selected: • 420 mA NAMUR (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (4 20.5 mA) • 020 mA (0 20.5 mA)	Enter 4 mA value.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
20 mA value	One of the following options is selected in the Current span parameter (→ 🗎 101): • 420 mA NAMUR (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (4 20.5 mA) • 020 mA (0 20.5 mA)	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The Fixed current option is selected in the Current span parameter ($\rightarrow \square$ 101).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping output 1 to n	A process variable is selected in the Assign current output parameter ($\rightarrow \square$ 100) and one of the following options is selected in the Current span parameter ($\rightarrow \square$ 101): • 420 mA NAMUR (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (4 20.5 mA) • 020 mA (0 20.5 mA)	Set reaction time for output signal to fluctuations in the measured value.	0.0 to 999.9 s	-
Failure mode	A process variable is selected in the Assign current output parameter (→ □ 100) and one of the following options is selected in the Current span parameter (→ □ 101): • 420 mA NAMUR (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (4 20.5 mA) • 020 mA (0 20.5 mA)	Define output behavior in alarm condition.	 Min. Max. Last valid value Actual value Defined value 	-
Failure current	The Defined value option is selected in the Failure mode parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

* Visibility depends on order options or device settings

10.5.9 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Pulse/frequency/switch output

Pulse/frequency/ 1 to n	/switch output	
[Operating mode	→ 🗎 102

Parameter overview with brief description

Parameter	Description	Selection
Operating mode	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode) → 🗎 103
Terminal number) → 🗎 103
Signal mode) → 🗎 103
Assign pulse output) → 🗎 103
Value per pulse	→ 🗎 103
Pulse width	→ 🗎 103
Failure mode] → 🗎 104
Invert output signal] → 🗎 104

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	-
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActivePassive NAMUR	-
Assign pulse output 1 to n	The Pulse option is selected in the Operating mode parameter parameter.	Select process variable for pulse output.	 Off Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* GSV flow* GSV flow alternative* NSV flow alternative* S&W volume flow* Oil mass flow* Water mass flow* Oil volume flow* Oil corrected volume flow* Oil corrected volume flow* Water corrected volume flow* 	
Pulse scaling	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 102$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxdot 103$).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 102$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxminus 103$).	Define time width of the output pulse.	0.05 to 2 000 ms	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 102$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxdot 103$).	Define output behavior in alarm condition.	Actual valueNo pulses	-
Invert output signal	-	Invert the output signal.	NoYes	-

* Visibility depends on order options or device settings

Configuring the frequency output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode] → 🗎 105
Terminal number] → 🗎 105
Signal mode) → 🗎 105
Assign frequency output) → 🗎 106
Minimum frequency value) → 🗎 107
Maximum frequency value] → 🗎 107
Measuring value at minimum frequency	→ 🗎 107
Measuring value at maximum frequency) → 🗎 107
Failure mode] → 🗎 107
Failure frequency) → 🗎 107
Invert output signal] → 🖹 107

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	-
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActivePassive NAMUR	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	The Frequency option is selected in the Operating mode parameter (→ 🗎 102).	Select process variable for frequency output.	 Off Mass flow Volume flow Corrected volume flow Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Garrier corrected volume flow* Carrier corrected volume flow* Gav flow* GSV flow NSV flow NSV flow NSV flow NSV flow NSV flow NSV flow Water cut* Oil density* Water density* Oil corrected volume flow* Water volume flow* Oil corrected volume flow* Water corrected volume flow* Water corrected volume flow* Water corrected volume flow* Oil corrected volume flow* Oil corrected volume flow* Oil corrected volume flow* Concentration * Temperature Descillation frequency 0 Oscillation damping 0* Oscillation damping 0* Signal asymmetry* Exciter current 0* HBSI* Pressure Application specific output 1* Index inhomogeneous medium Index suspended bubbles* 	

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Minimum frequency value	The Frequency option is selected in the Operating mode parameter ($\rightarrow \boxdot 102$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \boxdot 106$).	Enter minimum frequency.	0.0 to 10000.0 Hz	-
Maximum frequency value	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 102$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 106$).	Enter maximum frequency.	0.0 to 10000.0 Hz	-
Measuring value at minimum frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 102$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 106$).	Enter measured value for minmum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 102$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 106$).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 102$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 106$).	Define output behavior in alarm condition.	 Actual value Defined value 0 Hz 	-
Failure frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \cong 102$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \cong 106$).	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	-
Invert output signal	-	Invert the output signal.	NoYes	-

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode] → 🗎 108
Terminal number] → 🗎 108
Signal mode] → 🗎 108
Switch output function] → 🗎 109
Assign diagnostic behavior) → 🗎 109
Assign limit] → 🗎 110
Assign flow direction check] → 🗎 110
Assign status] → 🗎 111
Switch-on value] → 🗎 111
Switch-off value] → 🗎 111
Switch-on delay] → 🗎 111
Switch-off delay] → 🗎 111
Failure mode	→ 🗎 111
Invert output signal] → 🗎 111

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	-
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActivePassive NAMUR	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	 Off On Diagnostic behavior Limit Flow direction check Status 	_
Assign diagnostic behavior	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Diagnostic behavior option is selected. 	Select diagnostic behavior for switch output.	 Alarm Alarm or warning Warning 	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign limit	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Select process variable for limit function.	 Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier wolume flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Density Reference density alternative* GSV flow alternative* SSV flow alternative* S&W volume flow* Water density* Water density* Water density* Oil density* Water density* Oil corrected volume flow* Oil corrected volume flow* Water cut* Oil corrected volume flow* Water corrected volume flow* Water corrected volume flow* Oil corrected volume flow* Oil corrected volume flow* Water corrected volume flow* Concentration* Temperature Totalizer 1 Totalizer 3 Oscillation damping Pressure Application specific output 0* Application specific output 1* Index inhomogeneous medium Index suspended bubbles* 	
Assign flow direction check	 The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	 Off Volume flow Mass flow Corrected volume flow * 	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign status	 The Switch option is selected in the Operating mode parameter. The Status option is selected in the Switch output function parameter. 	Select device status for switch output.	 Partially filled pipe detection Low flow cut off Profinet Slot 24 * Profinet Slot 25 * Profinet Slot 26 * 	_
Switch-on value	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off value	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-on of status output.	0.0 to 100.0 s	-
Switch-off delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-off of status output.	0.0 to 100.0 s	-
Failure mode	_	Define output behavior in alarm condition.	Actual statusOpenClosed	-
Invert output signal	-	Invert the output signal.	NoYes	-

10.5.10 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu \rightarrow Relay output 1 to n

► RelaisOutput 1 to n	
Switch output function	→ 🗎 112
Assign flow direction check	→ 🗎 112
Assign limit	→ 🗎 113
Assign diagnostic behavior	→ 🗎 113

Assign status	→ 🗎 113
Switch-off value	→ 🗎 114
Switch-on value	→ 🗎 114
Failure mode	→ 🗎 114

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Relay output function	-	Select the function for the relay output.	 Closed Open Diagnostic behavior Limit Flow direction check Digital Output 	-
Terminal number	-	Shows the terminal numbers used by the relay output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Assign flow direction check	In the Relay output function parameter, the Flow direction check option is selected.	Select process variable for flow direction monitoring.	 Off Volume flow Mass flow Corrected volume flow * 	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign limit	The Limit option is selected in the Relay output function parameter.	Select process variable for limit function.	 Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow * Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Gasv flow* GSV flow alternative* SSW flow alternative* S&W volume flow* Water cut* Oil density* Water density* Oil corrected volume flow* Concentration* Temperature Totalizer 1 Totalizer 1 Totalizer 3 Oscillation damping Pressure Application specific output 0* Application specific output 1* Index inhomogeneous medium Index suspended bubbles* 	
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	-
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	 Partially filled pipe detection Low flow cut off Profinet Slot 24* Profinet Slot 25* Profinet Slot 26* 	-

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	-
Switch-on value	The Limit option is selected in the Relay output function parameter.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	-
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	-

10.5.11 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu \rightarrow Display

► Display	
Format display	→ 🗎 115
Value 1 display	→ 🗎 116
0% bargraph value 1	→ 🗎 117
100% bargraph value 1	→ 🗎 117
Value 2 display	→ 🗎 117
Value 3 display	→ 🗎 117
0% bargraph value 3	→ 🗎 117
100% bargraph value 3	→ 🗎 117
Value 4 display	→ 🗎 117

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	-

entry	Factory setting
Value 1 display A local display is provided. Select the measured value that is shown on the local display. • Mass flow • Volume flow • Carrier to same flow • Carrier to value flow • Carrier to value flow • Carrier to value flow • Density • NSV flow • CSV flow • dicenator • SW valuere flow • Oil corrected • valuere flow • Water carrier • Oil corrected • valuere flow • Weighted • tomperature • Density • Oil corrected • valuere flow • Weighted • tomperature • Density • Oil corrected • valuere flow • Weighted • tomperature • Density • Oil corrected • valuere flow • Oil corected • valuere flow • Oil corrected • valuere flow • Oi	


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
			 Index inhomogeneous medium Application specific output 0[*] Index suspended bubbles[*] 	
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 2 display parameter $(\rightarrow \cong 117)$	-
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 2 display parameter $(\rightarrow \cong 117)$	-
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	-
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 2 display parameter $(\rightarrow \cong 117)$	-

10.5.12 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

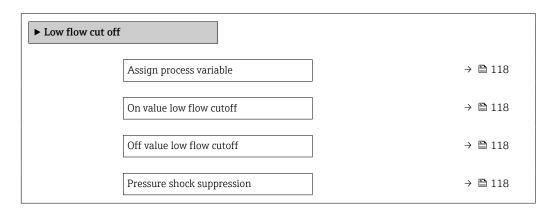

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	 Off Mass flow Volume flow Corrected volume flow * 	-
On value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 118).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 118).	Enter off value for low flow cut off.	0 to 100.0 %	-
Pressure shock suppression	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 118).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	-


* Visibility depends on order options or device settings

10.5.13 Configuring the partial filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation

"Setup" menu \rightarrow Partially filled pipe detection

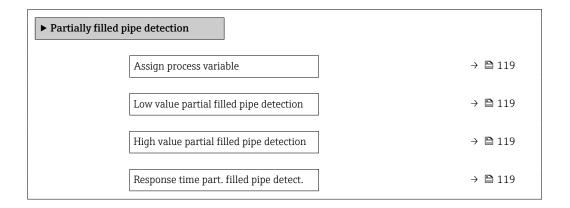


Parameter	Prerequisite	Description	Selection / User entry
Assign process variable	-	Select process variable for partially filled pipe detection.	 Off Density Reference density
Low value partial filled pipe detection	A process variable is selected in the Assign process variable parameter $(\rightarrow \cong 119).$	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number
High value partial filled pipe detection	A process variable is selected in the Assign process variable parameter $(\rightarrow \cong 119)$.	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number
Response time part. filled pipe detect.	A process variable is selected in the Assign process variable parameter $(\rightarrow \square 119).$	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s

10.6 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

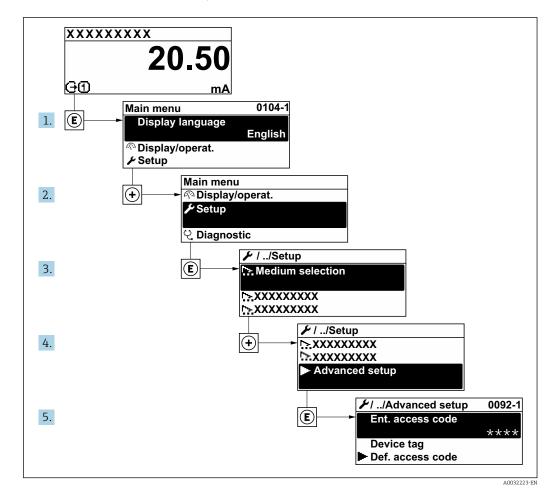


The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu → Advanced setup

► Advanced setup	
Enter access code	→ 🗎 121
► Calculated values	→ 🗎 121
► Sensor adjustment	→ 🗎 122
► Totalizer 1 to n	→ 🗎 123
► Display	→ 🗎 125

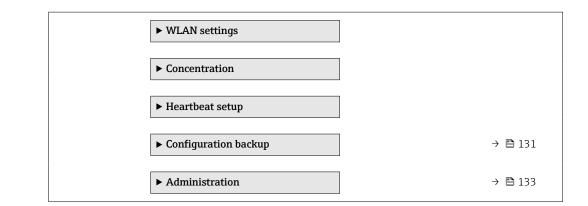

10.6.1 Using the parameter to enter the access code

Navigation

"Setup" menu \rightarrow Advanced setup

Parameter overview with brief description

Parameter	Description	User entry
Enter access code	1 1	Max. 16-digit character string comprising numbers, letters and special characters

10.6.2 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Calculated values

► Calculated values]	
► Corrected volum	ne flow calculation	
	Corrected volume flow calculation	→ 🗎 122
	External reference density	→ 🗎 122
	Fixed reference density	→ 🗎 122
	Reference temperature	→ 🗎 122
	Linear expansion coefficient	→ 🗎 122
	Square expansion coefficient	→ 🗎 122

Parameter overview wit	h brief description
------------------------	---------------------


Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	-	Select reference density for calculating the corrected volume flow.	 Fixed reference density Calculated reference density External reference density Current input 1[*] Current input 2[*] 	-
External reference density	In the Corrected volume flow calculation parameter, the External reference density option is selected.	Shows external reference density.	Floating point number with sign	-
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating- point number	-
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99 999 °C	Country-specific: • +20 °C • +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	-
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	-

10.6.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment

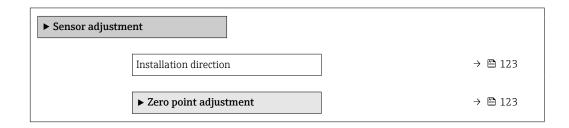

Parameter	Description	Selection	
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	Flow in arrow directionFlow against arrow direction	

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions $\rightarrow \textcircled{B}$ 238. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment \rightarrow Zero point adjustment

► Zero point adjustment	
Zero point adjustment control	→ 🗎 123
Progress	→ 🗎 123

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	CancelStart	-
Progress	Shows the progress of the process.	0 to 100 %	-

10.6.4 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable	→ 🗎 124
Unit totalizer	→ 🗎 124
Totalizer operation mode	→ 🗎 124
Failure mode	→ 🗎 124

Parameter	Description	Selection	Factory setting
Assign process variable	Select process variable for totalizer.	 Volume flow Mass flow Corrected volume flow Total mass flow Condensate mass flow Energy flow Heat flow difference 	-
Unit totalizer	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: • kg • lb
Totalizer operation mode	Select totalizer calculation mode.	 Net flow total Forward flow total Reverse flow total Last valid value 	-
Failure mode	Define the totalizer behavior in the event of a device alarm.	StopActual valueLast valid value	-

10.6.5 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display	
Format display	→ 🗎 126
Value 1 display	→ 🗎 127
0% bargraph value 1] → 🗎 128
100% bargraph value 1] → 🗎 128
Decimal places 1] → 🗎 128
Value 2 display] → 🗎 128
Decimal places 2] → 🗎 128
Value 3 display	→ 🗎 128
0% bargraph value 3	→ 🗎 128
100% bargraph value 3	→ 🗎 128
Decimal places 3	→ 🗎 128
Value 4 display	→ 🗎 128
Decimal places 4	→ 🗎 128
Display language	→ 🗎 129
Display interval	→ 🗎 129
Display damping	→ 🗎 129
Header	→ 🗎 129
Header text) → 🗎 129
Separator) → 🗎 129
Backlight) → 🗎 129

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	-

Value 1 display A local display is provided. Select the measured value that is shown on the local display. • Mass flow - Corrected value that is shown on the local display. • Other flow - Corrected value that is shown on the local display. • Other flow - Corrected value that is shown on the local display. • Other flow - Corrected value that is shown on the local display. • Other flow - Corrected value that is shown on the local display. • Other flow - Corrected value that is shown on the local display. • Other flow - Corrected value flow -		Prerequisite	Description	Selection / User entry	Factory setting
 Current output 3 * Pressure Application specific output 1 * 	Value 1 display	A local display is provided.		 Mass flow Volume flow Corrected volume flow Carrier mass flow Carrier volume flow Carrier volume flow Carrier volume flow Carrier corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Seference density Reference density Reference density GSV flow GSV flow MSV flow Maternative NSV flow NSV flow Mater density Water cut Oil density Water density Oil oulume flow Water cut Oil volume flow Water corrected volume flow Weighted density average Concentration Temperature Oscillation frequency 0 Oscillation damping 0 Oscillation damping 0 Signal asymmetry Exciter current 0 Totalizer 1 Totalizer 3 Current output 1 Current output 1 Current output 2 Current output 3 Pressure Application 	

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
			 Index inhomogeneous medium Application specific output 0[*] Index suspended bubbles[*] 	
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	 X X.X X.XX X.XXX X.XXX X.XXXX 	-
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 2 display parameter $(\rightarrow \cong 117)$	-
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	 X X.X X.XX X.XXX X.XXX X.XXXX 	-
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 2 display parameter $(\rightarrow \cong 117)$	-
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	-
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	-
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 2 display parameter $(\rightarrow \cong 117)$	-
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	-

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Display language	A local display is provided.	Set display language.	 English Deutsch Français Español Italiano Nederlands Portuguesa Polski pyccкий язык (Russian) Svenska Türkçe 中文 (Chinese) 日本語 (Japanese) 한국어 (Korean) 친국어 (Korean) 친국나 (Arabic)[*] Bahasa Indonesia ภาษาไทย (Thai)[*] tiếng Việt (Vietnamese) čeština (Czech) 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	-
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	-
Header	A local display is provided.	Select header contents on local display.	 Device tag Free text	-
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	 . (point) , (comma) 	. (point)
Backlight	One of the following conditions is met: • Order code for "Display; operation", option F "4-line, illum.; touch control" • Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" • Order code for "Display; operation", option O "Separate 4-line display, illum.; 10m/30ft cable; touch control"	Switch the local display backlight on and off.	DisableEnable	-

10.6.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation "Setup" menu \rightarrow Advanced setup \rightarrow WLAN settings

► WLAN settin	ngs	
	WLAN	→ ⇒ 130
	WLAN mode	→ ➡ 130
	SSID name	→ <a> 130
	Network security	→ 🗎 131
	Security identification	→ 🗎 131
	User name	→ 🗎 131
	WLAN password	→ 🗎 131
	WLAN IP address	→ 🗎 131
	WLAN MAC address	
	WLAN passphrase	→ 🗎 131
	WLAN MAC address	
	Assign SSID name	→ 🗎 131
	SSID name	→ 🗎 131
	Connection state	→ 🗎 131
	Received signal strength	→ 🗎 131

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
WLAN	-	Switch WLAN on and off.	DisableEnable	-
WLAN mode	-	Select WLAN mode.	WLAN access pointWLAN Client	-
SSID name	The client is activated.	Enter the user-defined SSID name (max. 32 characters).	-	-

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Network security	-	Select the security type of the WLAN network.	 Unsecured WPA2-PSK EAP-PEAP with MSCHAPv2* EAP-PEAP MSCHAPv2 no server authentic.* EAP-TLS* 	-
Security identification	-	Select security settings and download these settings via menu Data management > Security > WLAN.	Trusted issuer certificateDevice certificateDevice private key	-
User name	-	Enter user name.	-	-
WLAN password	-	Enter WLAN password.	-	-
WLAN IP address	-	Enter IP address of the WLAN interface of the device.	4 octet: 0 to 255 (in the particular octet)	-
WLAN passphrase	The WPA2-PSK option is selected in the Security type parameter.	Enter the network key (8 to 32 characters). The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user- defined name.	Device tagUser-defined	-
SSID name	 The User-defined option is selected in the Assign SSID name parameter. The WLAN access point option is selected in the WLAN mode parameter. 	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_300_A 802000)
Connection state	-	Displays the connection status.	ConnectedNot connected	-
Received signal strength	-	Shows the received signal strength.	LowMediumHigh	-


10.6.7 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation

"Setup" menu →	A dream and	actur)	Configuration	hadrun
Selup menu Z	Auvanceu	setud 7	' Comfouration	DACKUD
		r		r

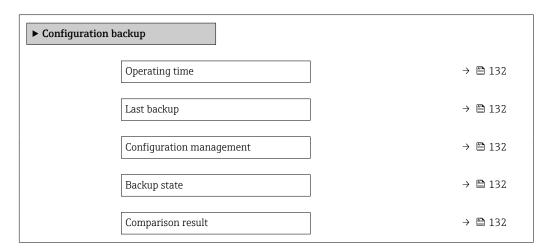

Parameter overview with brief description


Parameter	Description	User interface / Selection
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)
Configuration management	Select action for managing the device data in the HistoROM backup.	 Cancel Execute backup Restore * Compare * Clear backup data
Backup state	Shows the current status of data saving or restoring.	 None Backup in progress Restoring in progress Delete in progress Compare in progress Restoring failed Backup failed
Comparison result	Comparison of current device data with HistoROM backup.	 Settings identical Settings not identical No backup available Backup settings corrupt Check not done Dataset incompatible

* Visibility depends on order options or device settings

Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.

Options	Description
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

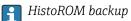

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.6.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

► Administration		
	► Define access code	→ 🖺 133
	► Reset access code	→ 🗎 134
	Device reset	→ 🗎 134

Using the parameter to define the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

► Define access code	
Define access code	→ 🗎 133
Confirm access code	→ 🗎 133

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code		Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Reset access code

► Reset access code	
Operating time] → 🗎 134
Reset access code) → 🗎 134

Parameter overview with brief description

Parameter	Description	User interface / User entry
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)
Reset access code	Reset access code to factory settings. For a reset code, contact your Endress+Hauser service organization.	Character string comprising numbers, letters and special characters
	The reset code can only be entered via:Web browserDeviceCare, FieldCare (via service interface CDI-RJ45)Fieldbus	

Using the parameter to reset the device

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

Parameter overview with brief description

Parameter	Description	Selection
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To delivery settings Restart device Restore S-DAT backup *

* Visibility depends on order options or device settings

10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu \rightarrow Simulation

► Simulation				
	Assign simulation process va	riable		→ 🗎 136

Process variable value	-	→ 🖺 136
Status input simulation 1 to n] -	→ 🖺 136
Input signal level 1 to n] -	→ 🖺 136
Current input 1 to n simulation] -	→ 🖺 136
Value current input 1 to n] -	→ 🗎 136
Current output 1 to n simulation]	→ 🖺 136
Value current output 1 to n]	→ 🖺 136
Frequency output simulation 1 to n]	→ 🖺 136
Frequency value 1 to n]	→ 🖺 136
Pulse output simulation 1 to n]	→ 🖺 137
Pulse value 1 to n]	→ 🖺 137
Switch output simulation 1 to n]	→ 🖺 137
Switch status 1 to n]	→ 🖺 137
Relay output 1 to n simulation]	→ 🖺 137
Switch status 1 to n]	→ 🖺 137
Device alarm simulation] -	→ 🖺 137
Diagnostic event category]	→ 🖺 137
Diagnostic event simulation]	→ 🖺 137

Parameter Prerequisite Description Selection / User entry / User interface Assign simulation process variable Select a process variable for the Off simulation process that is activated. Mass flow Volume flow Corrected volume flow * Target mass flow^{*} Carrier mass flow^{*} Target volume flow^{*} Carrier volume flow^{*} Target corrected volume flow Carrier corrected volume flow Density Reference density^{*} Reference density alternative GSV flow ³ GSV flow alternative * NSV flow NSV flow alternative * S&W volume flow Water cut^{*} Oil density Water density ³ Oil mass flow Water mass flow ² Oil volume flow Water volume flow * Oil corrected volume flow Water corrected volume flow . Temperature Concentration* Process variable value A process variable is selected in the Enter the simulation value for the Depends on the process Assign simulation process variable selected process variable. variable selected parameter ($\rightarrow \square 136$). • Off Status input simulation 1 to n Switch simulation of the status input on On and off. Input signal level 1 to n Select the signal level for the simulation High In the **Status input simulation** parameter, the **On** option is selected. of the status input. Low Current input 1 to n simulation Switch simulation of the current input Off on and off. • On Value current input 1 to n In the Current input 1 to n simulation Enter the current value for simulation. 0 to 22.5 mA parameter, the **On** option is selected. Switch the simulation of the current Off Current output 1 to n simulation output on and off. On Value current output 1 to n In the Current output 1 to n Enter the current value for simulation. 3.59 to 22.5 mA simulation parameter, the On option is

selected.

selected.

In the **Operating mode** parameter, the

In the **Frequency output simulation**

1 to n parameter, the On option is

Frequency option is selected.

Switch the simulation of the frequency

Enter the frequency value for the

output on and off.

simulation

Parameter overview with brief description

Off

• On

0.0 to 12 500.0 Hz

Frequency output simulation 1 to n

Frequency value 1 to n

Parameter	Prerequisite	Description	Selection / User entry / User interface
Pulse output simulation 1 to n	In the Operating mode parameter, the Pulse option is selected.	 Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter (→ ¹ 103) defines the pulse width of the pulses output. 	OffFixed valueDown-counting value
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535
Switch output simulation 1 to n	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	OffOn
Switch status 1 to n	-	Select the status of the status output for the simulation.	OpenClosed
Relay output 1 to n simulation	-	Switch simulation of the relay output on and off.	OffOn
Switch status 1 to n	The On option is selected in the Switch output simulation 1 to n parameter parameter.	Select status of the relay output for the simulation.	 Open Closed
Pulse output simulation	-	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	OffFixed valueDown-counting value
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65 535
Device alarm simulation	-	Switch the device alarm on and off.	OffOn
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	 Off Diagnostic event picklist (depends on the category selected)
Logging interval	-	Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s

10.8 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code $\rightarrow \implies 138$
- Protect access to measuring device via write protection switch \rightarrow 🗎 139
- Protect access to parameters via startup configuration $\rightarrow \square 86$

10.8.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display


- **1.** Navigate to the **Define access code** parameter ($\rightarrow \square$ 133).
- 2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter ($\rightarrow \triangleq 133$) to confirm the code.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- - - → B 60 is indicated by the **Access status** parameter. Navigation path: Operation → Access status

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

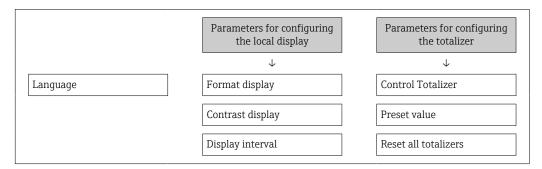

Defining the access code via the Web browser

- **1.** Navigate to the **Define access code** parameter ($\rightarrow \square$ 133).
- 2. Define a max. 16-digit numeric code as an access code.

3. Enter the access code again in the **Confirm access code** parameter ($\rightarrow \implies 133$) to confirm the code.

← The Web browser switches to the login page.

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

- - The user role with which the user is currently logged on via Web browser is indicated by the Access status parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

For a reset code, contact your Endress+Hauser service organization.

1. Navigate to the **Reset access code** parameter ($\rightarrow \square$ 134).

2. Enter the reset code.


→ The access code has been reset to the factory setting **0000**. It can be redefined $\rightarrow \triangleq 138$.

10.8.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFINET protocol

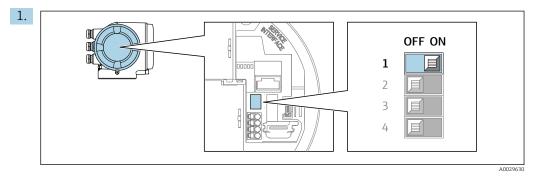

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

 In the Locking status parameter the Hardware locked option is displayed
 →
 ⁽¹⁾
 141. In addition, on the local display the
 ⁽²⁾-symbol appears in front of the parameters in the header of the operational display and in the navigation view.

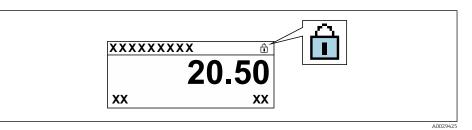

- 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

11 Operation

11.1 Reading the device locking status

Device active write protection: Locking status parameter

Operation \rightarrow Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status parameter applies $\rightarrow \square$ 60. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow \textcircled{B}$ 139.
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

P Detailed information:

- To configure the operating language $\rightarrow \cong 88$
- For information on the operating languages supported by the measuring device $\rightarrow \ \ \cong \ 248$

11.3 Configuring the display

Detailed information:

- On the basic settings for the local display \rightarrow 🗎 114
- On the advanced settings for the local display $\rightarrow \cong 125$

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu \rightarrow Measured values

► Measured values	
► Measured variables	→ 🗎 142
► Input values	→ 🗎 144
► Output values	→ 🗎 145
► Totalizer	→ 🗎 123

11.4.1 "Measured variables" submenu

The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Measured variables

► Measured variables	
Mass flow) → 🗎 142
Volume flow) → 🗎 142
Corrected volume flow] → 🗎 142
Density) → 🗎 142
Reference density	→ 🗎 143
Temperature	→ 🗎 143
Pressure value) → 🗎 143
Concentration) → 🗎 143
Target mass flow) → 🗎 143
Carrier mass flow) → 🗎 143

Parameter	Prerequisite	Description	User interface
Mass flow	-	Displays the mass flow that is currently measured.	Signed floating-point number
		Dependency The unit is taken from the Mass flow unit parameter (\rightarrow 🗎 91).	
Volume flow	-	Displays the volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter ($\rightarrow \square 91$).	
Corrected volume flow	-	Displays the corrected volume flow that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Corrected volume flow unit parameter $(\rightarrow \cong 91).$	
Density	-	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter ($\rightarrow \cong$ 91).	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Reference density	-	Displays the reference density that is currently calculated. Dependency The unit is taken from the Reference density unit parameter ($\rightarrow \cong$ 91).	Signed floating-point number
Temperature	-	Shows the medium temperature currently measured. Dependency The unit is taken from the Temperature unit parameter $(\rightarrow \square 92).$	Signed floating-point number
Pressure value	-	Displays either a fixed or external pressure value. Dependency The unit is taken from the Pressure unit parameter (→ 🗎 92).	Signed floating-point number
Concentration	For the following order code: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration that is currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" Image: The software options currently enabled are displayed in the software option overview parameter.	Displays the mass flow that is currently measured for the target medium. Dependency The unit is taken from the Mass flow unit parameter ($\Rightarrow \square 91$).	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" Image: The software options currently enabled are displayed in the software option overview parameter.	Displays the mass flow that is currently measured for the carrier medium. Dependency The unit is taken from the Mass flow unit parameter ($\Rightarrow \square 91$).	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable	→ 🗎 144
Totalizer value 1 to n	→ 🗎 144
Totalizer status 1 to n	→ 🗎 144
Totalizer status (Hex) 1 to n	→ 🗎 144


Parameter	Prerequisite	Description	Selection / User entry / User interface
Assign process variable	_	Select process variable for totalizer.	 Volume flow Mass flow Corrected volume flow Total mass flow Condensate mass flow Energy flow Heat flow difference
Totalizer value 1 to n	In the Assign process variable parameter one of the following options is selected: • Volume flow • Mass flow • Corrected volume flow • Total mass flow • Condensate mass flow • Energy flow • Heat flow difference	Displays the current totalizer counter value.	Signed floating-point number
Totalizer status 1 to n	-	Displays the current totalizer status.	GoodUncertainBad
Totalizer status (Hex) 1 to n	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values

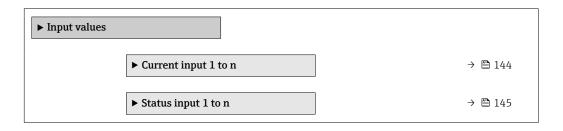

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Current input 1 to n

► Current input 1 to n			
Measured values 1 to n] → 🗎 145		
Measured current 1 to n] → 🗎 145		

Parameter overview with brief description

Parameter	Description	User interface	
Measured values 1 to n	Displays the current input value.	Signed floating-point number	
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA	

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Status input 1 to n

► Status input 1 to n		
Value status input]	→ 🗎 145

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	HighLow

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values

► Output values	
► Current output 1 to n	→ 🗎 145
Pulse/frequency/switch output 1 to n	→ 🗎 146
► Relay output 1 to n	→ 🗎 146

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Value current output 1 to n

► Current output 1 to	o n	
C	Dutput current 1 to n	→ 🖺 146
Ν	Measured current 1 to n	→ 🖺 146

Parameter overview with brief description


Parameter	Description	User interface	
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA	
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA	

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Pulse/frequency/switch output 1 to n

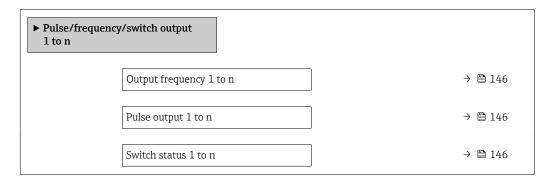

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency 1 to n	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output 1 to n	The Pulse option is selected in the Operating mode parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch status 1 to n	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	 Open Closed

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Relay output 1 to n

► Relay output 1 to n		
Switch status] → 🗎 147	
Switch cycles] → 🗎 147	
Max. switch cycles number] → 🗎 147	

Parameter overview with brief description

Parameter	Description	User interface
Switch status	Shows the current relay switch status.	 Open Closed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu ($\rightarrow \cong 89$)
- Advanced settings using the Advanced setup submenu ($\rightarrow \implies 120$)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu \rightarrow Totalizer handling

► Totalizer handling		
Control Totalizer 1 to n) → 🗎 148	
Preset value 1 to n) → 🗎 148	
Reset all totalizers] → 🗎 148	

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	A process variable is selected in the Assign process variable parameter of the Totalizer 1 to n submenu.	Control totalizer value.	 Totalize Reset + hold Preset + hold Reset + totalize Preset + totalize Hold 	-
Preset value 1 to n	A process variable is selected in the Assign process variable parameter of the Totalizer 1 to n submenu.	Specify start value for totalizer. Dependency The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter.	Signed floating-point number	Country-specific: • 0 kg • 0 lb
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	-

11.6.1 Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

11.6.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.


Pata logging is also available via:

- Plant Asset Management Tool FieldCare $\rightarrow \square$ 71.
- Web browser

Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Displays the measured value trend for each logging channel in the form of a chart

A001635

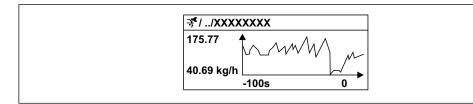

☑ 30 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu \rightarrow Data logging

► Data logging	
Assign channel 1	→ 🗎 150
Assign channel 2) → 🗎 150
Assign channel 3) → 🗎 151
Assign channel 4) → 🗎 151
Logging interval) → 🗎 151
Clear logging data) → 🗎 151
Data logging) → 🗎 151
Logging delay) → 🗎 151
Data logging control) → 🗎 151
Data logging status] → 🗎 151
Entire logging duration] → 🗎 151
► Display channel 1]
► Display channel 2]
► Display channel 3]
► Display channel 4]

Parameter	Prerequisite	Description	Selection / User entry / User interface
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	 Off Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier roulume flow Target corrected volume flow* Carrier corrected volume flow* Seference density alternative* GSV flow alternative* SSV flow alternative* NSV flow alternative* S&W volume flow* Water cut* Oil density* Water density* Oil volume flow* Oil volume flow* Oil corrected volume flow* Oil corrected volume flow* Oil corrected volume flow* Oil corrected volume flow* Concentration* Temperature Electronic temperature Oscillation frequency 0 Oscillation frequency 0 Oscillation damping 0* Oscillation damping 0* Oscillation damping 0* Signal asymmetry* Exciter current 0 HBSI* Current output 1* Current output 2* Current output 3* Current output 4* Pressure Application specific output 1* Index inhomogeneous medium Application specific output 0* Index suspended bubbles*
Assign channel 2	The Extended HistoROM application package is available. The software options currently enabled are displayed in the	Assign process variable to logging channel.	Picklist, see Assign channel 1 parameter (→

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface
Assign channel 3	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Picklist, see Assign channel 1 parameter (→ 🗎 150)
Assign channel 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Picklist, see Assign channel 1 parameter (→ 曽 150)
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	CancelClear data
Data logging	-	Select the data logging method.	 Overwriting Not overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	NoneDelete + startStop
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	DoneDelay activeActiveStopped
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating-point number

* Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 🗎 223.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing ± + E. Set the display darker by simultaneously pressing □ + E.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part $\rightarrow \square$ 223.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures $\rightarrow \square 164$
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	 Press □ + ★ for 2 s ("home position"). Press □. Set the desired language in the Display language parameter (→ □ 129).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part →

For output signals

Error	Possible causes	Solution
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🗎 223.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	 Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the OFF position $\rightarrow \square$ 139.
No write access to parameters	Current user role has limited access authorization	1. Check user role $\rightarrow \square$ 60.2. Enter correct customer-specificaccess code $\rightarrow \square$ 60.
No connection via PROFINET	PROFINET bus cable connected incorrectly	Check terminal assignment → 🗎 33.
No connection via PROFINET	Device plug connected incorrectly	Check the pin assignment of the connector .
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary→ 🗎 67.
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) $\rightarrow \bigoplus 63 \rightarrow \bigoplus 63$. 2. Check the network settings with the IT manager.
Not connecting to Web server	 Incorrect IP address IP address is not known 	 If addressing via hardware: open the transmitter and check the IP address configured (last octet). Check the IP address of the measuring device with the network manager. If the IP address is not known, set DIP switch no. 10 to ON, restart the device and enter the factory IP address 192.168.1.212.
	Web browser setting "Use a Proxy Server for Your LAN" is enabled	Disable the use of the proxy server in the Web browser settings of the computer. Using the example of MS Internet Explorer: 1. Under <i>Control Panel</i> open <i>Internet options</i> . 2. Select the <i>Connections</i> tab and then double-click <i>LAN settings</i> . 3. In the <i>LAN settings</i> disable the use of the proxy server and select <i>OK</i> to confirm.
	Apart from the active network connection to the measuring device, other network connections are also being used.	 Make sure that no other network connections are established by the computer (also no WLAN) and close other programs with network access to the computer. If using a docking station for notebooks, make sure that a network connection to another network is not active.
Not connecting to Web server	Incorrect WLAN access data	 Check WLAN network status. Log on to the device again using WLAN access data. Verify that WLAN is enabled on
		the measuring device and operating device $\rightarrow \cong 63$.

Error	Possible causes	Solution
Not connecting to Web server, FieldCare or DeviceCare	No WLAN network available	 Check if WLAN reception is present: LED on display module is lit blue Check if WLAN connection is enabled: LED on display module flashes blue Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	 Operating device is outside of reception range: Check network status on operating device. To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	 Check network settings. Temporarily enable only the WLAN as an interface.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	 Check cable connection and power supply. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	 Use the correct Web browser version →
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	JavaScript not enabledJavaScript cannot be enabled	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/ basic.html as the IP address.
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.


For system integration

Error	Possible causes	Solution
The device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

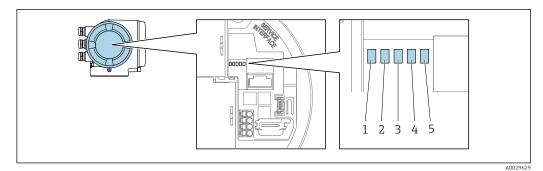


- Supply voltage Device status
- 1 2 3
- 4
- Flashing/network status Port 1 active: PROFINET Port 2 active: PROFINET and service interface (CDI) 5

LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is ok.
2	Device status (normal	Off	Firmware error.
	operation)	Green	Device status is ok.
		Flashing green	Device is not configured.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red/green	The device restarts.
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Flashing/network status	Green	Cyclic data exchange is active.
		Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off)
			Cyclic data exchange is not active, no IP address is available: Flash frequency: 3 Hz
		Red	IP address is available but there is no connection to the automation system
		Flashing red	Cyclic data exchange was active but the connection was disconnected: Flash frequency: 3 Hz
4	Port 1 active:	Off	Not connected or no connection established.
	PROFINET	White	Connected and connection established.
		Flashing white	Communication not active.
5	Port 2 active:	Off	Not connected or no connection established.
	PROFINET and service interface (CDI)	Yellow	Connected and connection established.
		Flashing yellow	Communication not active.

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

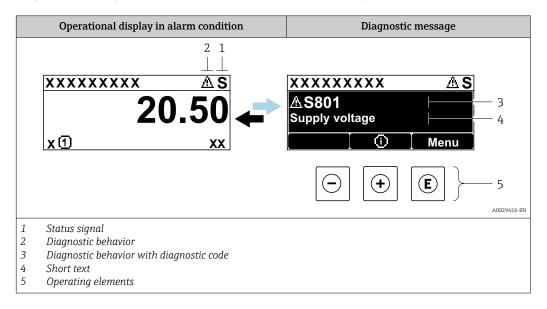

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.


Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

- Via parameter $\rightarrow \cong 215$
- Via submenus $\rightarrow \square 215$

Status signals

•

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

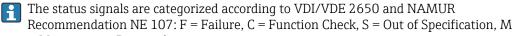

= Maintenance Required

Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
С	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
М	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior


Symbol	Meaning
8	 Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
Δ	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

Operating elements

Key	Meaning
(+)	Plus key <i>In a menu, submenu</i> Opens the message about remedy information.
E	Enter key <i>In a menu, submenu</i> Opens the operating menu.

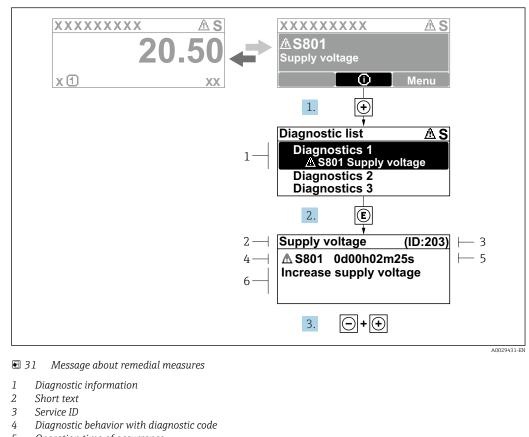

12.3.2 Calling up remedial measures

- 5 Operation time of occurrence
- 6 Remedial measures

1. The user is in the diagnostic message.

Press 🛨 (① symbol).

- └ The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with \pm or \Box and press \mathbb{E} .
 - └ The message about the remedial measures opens.
- 3. Press \Box + \pm simultaneously.
 - └ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the Diagnostic list submenu or Previous diagnostics parameter.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- **2.** Press \Box + \pm simultaneously.
 - └ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 **Diagnostic options**

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

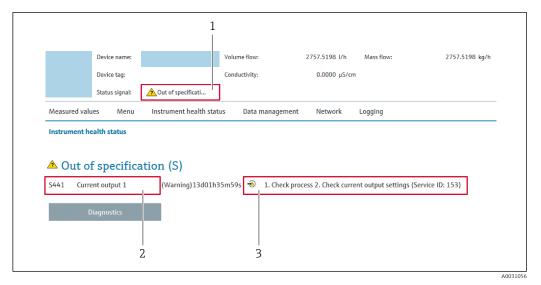

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedy information with Service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter $\rightarrow \cong 215$
- Via submenu →
 ⁽²⁾ 215

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
\otimes	Failure A device error has occurred. The measured value is no longer valid.
V	Function check The device is in service mode (e.g. during a simulation).
2	Out of specificationThe device is operated:Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare or DeviceCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

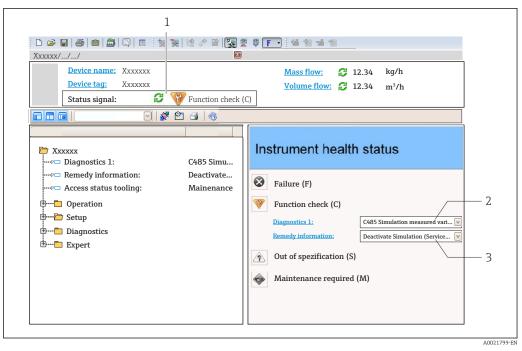

- 1 Status area with status signal $\rightarrow \square 156$
- 2 Diagnostic information $\rightarrow \square 157$
- 3 Remedy information with Service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter $\rightarrow \cong 215$
- Via submenu → 🗎 215

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

• On the home page

Remedy information is displayed in a separate field below the diagnostics information. • In the **Diagnostics** menu

Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

- 2. On the right in the working area, mouse over the parameter.
 - └ A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

 $\mathsf{Expert} \to \mathsf{System} \to \mathsf{Diagnostic} \; \mathsf{handling} \to \mathsf{Diagnostic} \; \mathsf{behavior}$


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFINET and the totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFIBUS PA Profile 3.02 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

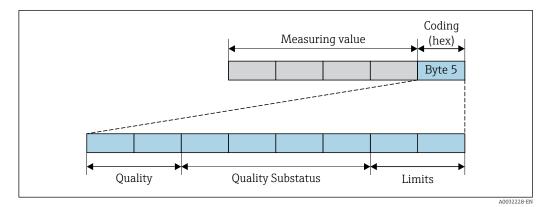

■ 32 Structure of the status byte

The content of the status byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS PA Profile Specification 3.02 is transmitted to the the PROFINET controller via the status byte. The two bits for the limits always have the value 0.

Supported status information

Status	Coding (hex)
BAD - Maintenance alarm	0x24
BAD - Process related	0x28
BAD - Function check	0x3C
UNCERTAIN - Initial value	0x4F
UNCERTAIN - Maintenance demanded	0x68
UNCERTAIN - Process related	0x78
GOOD - OK	0x80
GOOD - Maintenance demanded	0xA8
GOOD - Function check	0xBC

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and on the group in which the diagnostic information is located.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199 $\rightarrow \cong 162$
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399 $\rightarrow \ \textcircled{}$ 162
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599 \rightarrow B 163
- Diagnostic information pertaining to the process: diagnostic number 800 to 999 $\rightarrow \, \boxdot \, 163$

Depending on the group in which the diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic inf	ormation pertainir	ng to the sensor:	diagnostic number	r 000 to 199

Diagnostic behavior	N	leasured value sta	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80		
Off	GOOD	ÜK	0x00	_	_

Diagnostic information pertaining to the electronics: diagnostic number 200 to 399

Diagnostic number 200 to 301, 303 to 399

Diagnostic behavior	N	leasured value sta	atus (fixed assig	nment)	Device diagnosis
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Maintenance	0x24	F	Maintenance
Warning	DAD	alarm	0.24	(Failure)	alarm

Diagnostic behavior	M	leasured value sta	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Logbook entry only	GOOD	ok	0x80 to 0x8E	_	_
Off	0000	UK	UXOU LU UXOL		

Diagnostic information 302

Diagnostic behavior	N	leasured value sta	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Function check, local override	0x24	С	Function check
Warning	GOOD	Function check	0xBC to 0xBF	-	_

Diagnostic information 302 (device verification active) is output during internal or external Heartbeat verification.

- Signal status: Function check
- Choice of diagnostic behavior: alarm or warning (factory setting)

When Heartbeat verification starts, data logging is interrupted, the last valid measured value is output and the totalizers are stopped.

Diagnostic information	nortaining to the	configuration	· diagnostic numbe	m 400 + c = 00
	ρειταιπίπα το τπε	. communition.	. αιααποςτις παπιρε	1 400 10 399

Diagnostic behavior	М	Device diagnosis			
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only Off	GOOD	ok	0x80	-	_

Diagnostic information pertaining to the process: diagnostic number 800 to 999

Diagnostic behavior	M	leasured value sta	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80		
Off	0000	ŰK	0,000		

12.7 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
 - All of the measured variables affected in the entire Promass instrument family are always listed under "Measured variables affected". The measured variables available for the device in question depend on the device version. When assigning the measured variables to the device functions, for example to the individual outputs, all of the measured variables available for the device version in question are available for selection.

In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information $\rightarrow \square 161$

12.7.1 Diagnostic of sensor

	Diagnostic in	formation	Remedy instructions
No.	o. Short text		
022	Temperature sensor defective		1. Check or replace sensor electronic module (ISEM)
	Measured variable status		 If available: Check connection cable between sensor and transmitter Replace sensor
	Quality E	Bad	^
	Quality substatus N	Maintenance alarm	-
	Coding (hex)	0x24 to 0x27	-
	Status signal F	3	-
	Diagnostic behavior A	Alarm	-
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	 GSV flow alternat Kinematic viscosit Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogen Index suspended I HBSI NSV flow NSV flow alternat External pressure Exciter current 1 Exciter current 2 Oscillation freque S&W volume flow Reference density Reference density 	y Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 eous medium Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature ncy 1 Status Ncy 2 Volume flow Oil volume flow Water volume flow

	Diagnostic inf	formation	Remedy instructions	
No.	Short text			
046	Sensor limit exceeded		1. Inspect sensor	
	Measured variable status [from	1 the factory] ¹⁾	2. Check process condition	
	Quality G	Good		
	Quality substatus O)k		
	Coding (hex)	1x80 to 0x83		
	Status signal S			
	Diagnostic behavior W	Varning		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended by HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density and the second se	 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 bbles Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature cy 1 Status cy 2 Volume flow Oil corrected volume flow Water volume flow Water volume flow 	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions
No.	Sho	ort text	
062	Sensor connection faulty Measured variable status		1. Check or replace sensor electronic module (ISEM)
			 If available: Check connection cable between sensor and transmitter Replace sensor
	Quality E	Bad	
	Quality substatus N	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal F	7	
	Diagnostic behavior A	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	GSV flow alternation Kinematic viscosity Mass flow Oil mass flow Water mass flow Index inhomogene Index suspended b HBSI NSV flow NSV flow alternation External pressure Exciter current 1 Exciter current 1 Exciter current 2 Oscillation frequer S&W volume flow (ISEM) Reference density	Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 ous medium Frequency fluctuation 1 ubbles Frequency fluctuation 2 Target mass flow Carrier volume flow Ve Target volume flow Temp. compensated dynamic viscosity Temperature acy 1 Status Volume flow Oil volume flow Water volume flow

Diagnostic information			Remedy instructions
No.	Short text		
063	Exciter current faulty		1. Check or replace sensor electronic module (ISEM)
	Measured variable status		 If available: Check connection cable between sensor and transmitter Replace sensor
	Quality B	ad	-
	Quality substatus N	Naintenance alarm	
	Coding (hex) 0	x24 to 0x27	
	Status signal S		
	Diagnostic behavior A	larm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	 GSV flow GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Oil mass flow Water mass flow Index inhomogened Index suspended but HBSI NSV flow NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W yolume flow 	Corrected volume flow Oil corrected volume flow Water corrected volume flow Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow Oil volume flow Oil volume flow

Diagnostic information			Remedy instructions
No.	s	hort text	
082	Data storage		1. Check module connections
	Measured variable status		2. Contact service
	Quality	Bad	_
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	_
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flot Carrier corrected volume flot Carrier corrected volume flot Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target xolume flow Target xolume flow Temp. compensated dynamic viscosity Temperature Status Yolume flow Oil volume flow Water volume flow

Diagnostic information			Remedy instructions
No.	s	hort text	
083	Memory content		1. Restart device
	Measured variable status		 Restore HistoROM S-DAT backup ('Device reset' parameter) Replace HistoROM S-DAT
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variabl	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flor Carrier corrected volume flor Carrier corrected volume flor Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	5	 Corrected volume flow Oil corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow

Diagnostic information			Remedy instructions	
No.	S	hort text		
140	Sensor signal asymmetrical		1. Check or replace sensor electronic module (ISEM)	
	Measured variable status [fr	om the factory] ¹⁾	 If available: Check connection cable between sensor and transmitter Replace sensor 	
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flor Carrier corrected volume flor Carrier corrected volume flor Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 1 	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic inf	formation	Remedy instructions
No.	Short text		
144	Measurement error too high		1. Check or change sensor
	Measured variable status [from	1 the factory] ¹⁾	2. Check process conditions
	Quality G	Good	
	Quality substatus O)k	
	Coding (hex) 0	0x80 to 0x83	
	Status signal F	1	
	Diagnostic behavior A	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended by HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density a 	 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Status Yee Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 2 Volume flow Oil corrected volume flow Water volume flow Water volume flow

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7.2 Diagnostic of electronic

Diagnostic information				Remedy instructions
No.	s	bort text		
201	Device failure		1. Restart device	
	Measured variable status		2. Contact service	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F	-	
	Diagnostic behavior	Alarm	-	
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flo Carrier corrected volume flo Carrier corrected volume flo Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		ve cy 1	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

Diagnostic information		information	Remedy instructions
No.	S	hort text	
242	Software incompatible		1. Check software
	Measured variable status		2. Flash or change main electronics module
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flo Carrier corrected volume flo Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	5	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Yolume flow

	Diagnostic information		Remedy instructions		
No.	Short text				
252	Modules incompatible		1. Check electronic modules		
	Measured variable status		 Check if correct modules are available (e.g. NEx, Ex) Replace electronic modules 		
	Quality	Bad			
	Quality substatus	Maintenance alarm			
	Coding (hex)	0x24 to 0x27			
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables				
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flor Carrier corrected volume flor Carrier corrected volume flor Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	5	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 1 		

	Diagnostic	information	Remedy instructions
No.	Io. Short text		
252	Modules incompatible		1. Check if correct electronic modul is plugged
	Measured variable status		2. Replace electronic module
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 	 Density Dynamic viscosity Sensor electronic te Kinematic viscosity Mass flow Index inhomogenee Index suspended bu HBSI External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen 	 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Temp. compensated dynamic viscosity Temperature Status Volume flow

Diagnostic information			Remedy instructions
No.	s	hort text	
262	Sensor electronic connection faulty Measured variable status		1. Check or replace connection cable between sensor electronic module
			(ISEM) and main electronics 2. Check or replace ISEM or main electronics
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Carrier corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Oscillation damping 1 Oscillation damping 2 Density Oscillation frequer Oscillation frequer Oscillation frequer Oscillation frequer S&W volume flow 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow

Diagnostic information		information	Remedy instructions
No.	s	hort text	
270	Main electronic failure		Change main electronic module
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flo Carrier corrected volume flo Carrier corrected volume flo Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 1

Diagnostic information		information	Remedy instructions
No.	SI	hort text	
271	Main electronic failure Measured variable status		1. Restart device
			2. Change main electronic module
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 1

Diagnostic information			Remedy instructions	
No.	s	hort text		
272	Main electronic failure Measured variable status		1. Restart device	
			2. Contact service	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	 Oscillation amplitude 1 Sensor electronic t Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Signal asymmetry Signal asymmetry Mass flow Carrier mass flow Carrier pipe temperature Carrier corrected volume flow Index inhomogene Carrier corrected volume flow Index suspended b Concentration Measured values 1 Measured values 2 Oscillation damping 1 Oscillation damping 2 Density Oscillation frequer Oscillation frequer Water density Saw Volume flow 		ve y eous medium pubbles ve ncy 1 ncy 2	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water volume flow Water cut

Diagnostic information		information	Remedy instructions
No.	Short text		
273	Main electronic failure		Change electronic
	Measured variable status		1
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Oscillation damping 1 Oscillation frequent Oscillation frequent Oscillation frequent Oscillation frequent Oscillation frequent Water density Oscillation flow 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Nouli volume flow Oil volume flow

	Diagnostic	information		Remedy instructions
No.	Short text			
275	I/O module 1 to n defective		Change I/O module	
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F	-	
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 	 Density Dynamic viscosity Sensor electronic t Kinematic viscosity Mass flow Index inhomogene Index suspended b HBSI External pressure Exciter current 1 Exciter current 2 Oscillation frequent Oscillation frequent 	y eous medium ubbles ncy 1	 Reference density Corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Temp. compensated dynamic viscosity Temperature Status Volume flow

	Diagnostic	information		Remedy instructions
No.	5	Short text		
276	I/O module 1 to n faulty		1. Restart device	
	Measured variable status		2. Change I/O module	
	Quality	Bad		
	Quality substatus	Maintenance alarm	_	
	Coding (hex)	0x24 to 0x27	_	
	Status signal	F	_	
	Diagnostic behavior	Alarm	_	
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flot Carrier corrected volume flot Concentration Measured values 1 Measured values 2 	 Sensor electronic Kinematic viscosit Mass flow Index inhomogene Index suspended b 	temperature (ISEM) y eous medium	 Reference density Corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature
	 Measured values 3 Oscillation domning 1 	Measured values 3 Oscillation frequent		Status Volume flow

- Oscillation damping 1
- Oscillation frequency 2

Volume flow

Diagnostic information				Remedy instructions
No.	S	hort text		
283	Memory content		1. Reset device	
	Measured variable status		2. Contact service	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27	-	
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		ve cy 1	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

Diagnostic information			Remedy instructions
No.	S	hort text	
302	Device verification active		Device verification active, please wait.
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	_
	Coding (hex)	0xBC to 0xBF	
	Status signal	С	_
	Diagnostic behavior	Warning	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	 GSV flow GSV flow alterna Kinematic viscos Mass flow Oil mass flow Water mass flow Water mass flow Mass flow 	ty Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Ency 1 Volume flow Water volume flow Water volume flow

	Diagnos	stic information	Remedy instructions
No.		Short text	
303			1. Apply I/O module configuration (parameter 'Apply I/O configuration')
	Measured variable status		2. Afterwards reload device description and check wiring
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	М	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diagnostic information				Remedy instructions
No.	Short text			
311	Electronic failure		1. Do not reset device	
	Measured variable status		2. Contact service	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27	-	
	Status signal	М		
	Diagnostic behavior	Warning		
	Influenced measured variable	es		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		ve vus medium ubbles ve	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic information		Remedy instructions
No.	Short text		
332	Writing in HistoROM backup failed		Replace user interface board
	Measured variable status		Ex d/XP: replace transmitter
	Quality B	Bad	
	Quality substatus N	Maintenance alarm	
	Coding (hex) 0	0x24 to 0x27	
	Status signal F	1	
	Diagnostic behavior A	Alarm	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	 GSV flow alternativ Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended by HBSI NSV flow NSV flow alternativ External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density 	 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Status Yee Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 2 Volume flow Oil corrected volume flow Water volume flow Water volume flow

	Diagnostic information		Remedy instructions
No.	Short text		
361	I/O module 1 to n faulty		1. Restart device
	Measured variable status		 Check electronic modules Change I/O Modul or main electronics
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 	 Density Dynamic viscosity Sensor electronic t Kinematic viscosity Mass flow Index inhomogene Index suspended b HBSI External pressure Exciter current 1 Exciter current 2 Oscillation frequent 	 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Temp. compensated dynamic viscosity Temperature Status Volume flow

Diagnostic information			Remedy instructions
No.	Short text		
372	Sensor electronic (ISEM) faulty		1. Restart device
	Measured variable status		 Check if failure recurs Replace sensor electronic module (ISEM)
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions
No.	Short text		
373	Sensor electronic (ISEM) faulty		1. Transfer data or reset device
	Measured variable status		2. Contact service
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Ve Volume flow Volume flow

	Diagnostic	information	Remedy instructions
No.	. Short text		
374	Sensor electronic (ISEM) faulty	I	1. Restart device
	Measured variable status [fr	om the factory] ¹⁾	 Check if failure recurs Replace sensor electronic module (ISEM)
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variabl	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Concentration Oscillation damping 1 Oscillation damping 2 Density Dynamic viscosity 	 Sensor electronic to Kinematic viscosity Mass flow Index inhomogene Index suspended bi HBSI External pressure Exciter current 1 Exciter current 2 Oscillation frequent Oscillation frequent Reference density 	 Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Temp. compensated dynamic viscosity Temperature cy 1

	Diagnostic information		Remedy instructions	
No.	. Short text			
375	I/O- 1 to n communication failed		1. Restart device	
	Measured variable status		 Check if failure recurs Replace module rack inclusive electronic modules 	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variable	es		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Carrier corrected volume flow Index inhomogene Concentration Measured values 1 Measured values 2 NSV flow Measured values 3 Oscillation damping 1 Density Oscillation frequen Water density Oscillation frequen Oscillation frequen 		temperature (ISEM)Reference density Reference density alternativeiveCorrected volume flowyOil corrected volume flowyOil corrected volume flowwater corrected volume flowOscillation damping fluctuation 1Oscillation damping fluctuation 2eous mediumFrequency fluctuation 1pubblesFrequency fluctuation 2iveTarget mass flowiveTarget volume flowiveTarget volume flowremp. compensated dynamic viscosityTemp. compensated kinematic viscosityTemperaturency 1Status	

	Diagnos	stic information	Remedy instructions
No.		Short text	
378	Supply voltage ISEM faulty		Check supply voltage to the ISEM
	Measured variable status		1
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	-		

	Diagnostic information			Remedy instructions
No.	S	hort text		
382	Data storage Measured variable status		1. Insert T-DAT	
			2. Replace T-DAT	
	Quality	Bad		
	Quality substatus	Maintenance alarm	1	
	Coding (hex)	0x24 to 0x27	1	
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variable	es	1	
	Influenced measured variables• Oscillation amplitude 1• Sensor electronic term• Oscillation amplitude 2• GSV flow• Application specific output• GSV flow alternative• Application specific output• Kinematic viscosity• Signal asymmetry• Mass flow• Carrier mass flow• Oil mass flow• Carrier pipe temperature• Water mass flow• Target corrected volume flow• Index suspended br• Concentration• HBSI• Measured values 1• NSV flow• Measured values 2• NSV flow alternative• Measured values 3• External pressure• Oscillation damping 1• Exciter current 1• Oscillation frequen• Oscillation frequen• Oil density• Oscillation frequen• Water density• S&W volume flow		ve 7 ous medium ubbles ve cy 1	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic information		Remedy instructions
No.	Short text		
383	Memory content		1. Restart device
	Measured variable status		 Delete T-DAT via 'Reset device' parameter Replace T-DAT
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Cil mass flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Exciter currer Oil density Oscillation free Oscillation free Oscillation free 		Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 pous medium Frequency fluctuation 1 ubbles Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature

	Diagnostic information		Remedy instructions
No.	Short text		
387	HistoROM data faulty		Contact service organization
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Volume flow Volume flow Volume flow

12.7.3 Diagnostic of configuration

	Diagnostic	information	Remedy instructions
No.	Short text		
330	Flash file invalid		1. Update firmware of device
	Measured variable status		2. Restart device
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	М	
	Diagnostic behavior	Warning	
	Influenced measured variable	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 	 Density Dynamic viscosity Sensor electronic ta Kinematic viscosity Mass flow Index inhomogene Index suspended bit HBSI External pressure Exciter current 1 Exciter current 2 Oscillation frequent Oscillation frequent 	 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Temp. compensated dynamic viscosity Temperature Status Yolume flow

Diagnostic information			Remedy instructions
No.	Short text		
331	Firmware update failed		1. Update firmware of device
	Measured variable status		2. Restart device
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Warning	
	Influenced measured variab	les	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flo Carrier corrected volume flo Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	 Kinematic viscosity Mass flow Oil mass flow Water mass flow Index inhomogene 	 Corrected volume flow Oil corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target xoupensated dynamic viscosity Temperature Status Volume flow

	Diagnostic	information		Remedy instructions
No.	Short text			
410	Data transfer		1. Check connection	
	Measured variable status		2. Retry data transfer	
	Quality	Bad	1	
	Quality substatus	Maintenance alarm	-	
	Coding (hex)	0x24 to 0x27	-	
	Status signal	F	-	
	Diagnostic behavior	Alarm		
	Influenced measured variable	es	1	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		ve y cous medium ubbles ve ncy 1	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic	information			Remedy instructions
No.	Short text				
412	Processing download			Download active, plea	ise wait
	Measured variable status				
	Quality	Uncertain			
	Quality substatus	Initial value			
	Coding (hex)	0x4C to 0x4F			
	Status signal	С			
	Diagnostic behavior	Warning			
	Influenced measured variables				
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flo Carrier corrected volume flo Carrier corrected volume flo Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	ow	 Sensor electronic to GSV flow GSV flow alternative GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Index inhomogene Index suspended bit HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequent Oscillation frequent S&W volume flow Reference density 	ve cy 1	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagno	ostic information	Remedy instructions
No.		Short text	
431	Trim 1 to n		Carry out trim
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagnostic	information		Remedy instructions
No.	Short text			
437	Configuration incompatible		1. Restart device	
	Measured variable status		2. Contact service	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27	-	
	Status signal	F	-	
	Diagnostic behavior	Alarm	-	
	Influenced measured variables		1	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flor Carrier corrected volume flor Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	5	ve vous medium ubbles ve	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic	information	Remedy instructions
No.	Short text		
438	Dataset		1. Check data set file
	Measured variable status		 Check device configuration Up- and download new configuration
	Quality	Uncertain	
	Quality substatus	Maintenance demanded	
	Coding (hex)	0x68 to 0x6B	
	Status signal	М	
	Diagnostic behavior	Warning	
	Influenced measured variable	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow

	Diagno	ostic information	Remedy instructions
No.		Short text	
	1		1. Check process
			2. Check current output settings
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diagnostic information		Remedy instructions
	Short text	
Frequency output 1 to n		1. Check process
Measured variable status [from the factory] 1)		2. Check frequency output settings
Quality	Good	
Quality substatus	Ok	
Coding (hex)	0x80 to 0x83	
Status signal	S	
Diagnostic behavior	Warning	
Influenced measured variables		

	Diagno	stic information	Remedy instructions
No.		Short text	
443	Pulse output 1 to n		1. Check process
	Measured variable status [from the factory] 1)		2. Check pulse output settings
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured var	iables	
	-		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnos	stic information	Remedy instructions
No.		Short text	
444			1. Check process
			2. Check current input settings
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured var	iables	
	 Measured values 1 Measured values 2 Measured values 3 		

	Diagnostic in	formation		Remedy instructions
No.	Short text			
453	Flow override		Deactivate flow override	
	Measured variable status			
	Quality	Good		
	Quality substatus 1	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Sensor electronic temperature GSV flow 	 NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequentiation Oscillation frequentiation S&W volume flow 	ous medium ubbles ve icy 1 icy 2	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic information			Remedy instructions	
No.	Short text				
484	Failure mode simulation			Deactivate simulation	
	Measured variable status				
	Quality	Bad			
	Quality substatus	Function check			
	Coding (hex)	0x3C to 0x3F			
	Status signal	С			
	Diagnostic behavior	Alarm			
	Influenced measured variables				
	Influenced measured variables Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Vater density Sensor electronic temperature (ISEM)		 GSV flow alternativ Kinematic viscosity Mass flow Oil mass flow Water mass flow Index inhomogene Index suspended bit HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequent S&W volume flow Reference density Reference density 	ous medium ubbles ve icy 1 icy 2	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic information			Remedy instructions
No.	Sho	ort text		
485	Measured variable simulation		Deactivate simulation	
	Measured variable status			
	Quality G	Good		
	Quality substatus F	Function check		
	Coding (hex) 0	DxBC to OxBF		
	Status signal C	2		
	Diagnostic behavior W	Warning		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternati Kinematic viscosit Mass flow Oil mass flow Oil mass flow Water mass flow Index inhomogene Index suspended b HBSI NSV flow NSV flow alternat External pressure Exciter current 1 Exciter current 2 Oscillation frequei S&W volume flow (ISEM) Reference density Reference density 	y eous medium pubbles ive ncy 1 ncy 2	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic information		Remedy instructions
No.		Short text	
486	Current input 1 to n simulation		Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		·
	 Measured values 1 Measured values 2 Measured values 3 		

Diagnostic information			Remedy instructions
o.	:	Short text	
91	Current output 1 to n simulation		Deactivate simulation
Ī	Measured variable status		
ľ	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
ľ	Diagnostic behavior	Warning	
Ī	Influenced measured variables		
	-		

	Diagnostic	information	Remedy instructions
No.	Short text		
492	Simulation frequency output 1 to n		Deactivate simulation frequency output
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diag	nostic information	Remedy instructions
	Short text	
Simulation pulse output 1 to n		Deactivate simulation pulse output
Measured variable status		
Quality	Good	
Quality substatus	Ok	
Coding (hex)	0x80 to 0x83	
Status signal	С	
Diagnostic behavior	Warning	
Influenced measured variables		

	Diagnosti	c information	Remedy instructions
No.		Short text	
494	Switch output simulation 1 to n		Deactivate simulation switch output
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagno	stic information	Remedy instructions
No.		Short text	
495	Diagnostic event simulation		Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagno	ostic information	Remedy instructions
No.		Short text	
496	Status input simulation		Deactivate simulation status input
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diagnostic information			Remedy instructions
•		Short text	
נ נ	I/O 1 to n hardware configuration invalid		1. Check I/O hardware configuration
	Management require his atomic		 Replace wrong I/O module Plug the module of double pulse output on correct slot
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
Ē.	Diagnostic behavior	Alarm	

	Diagnostic	information	Remedy instructions
No.	Short text		
528	Managurad waviable status		Out of valid range of the selected calculation algorithm
			 Check concentration settings Check measured values, e.g. density or temperature
	Quality	Bad	
	Quality substatus	Function check	
	Coding (hex)	0x3C to 0x3F	
	Status signal	S	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	
	 Carrier mass flow Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Carrier volume flow 		Target volume flowVolume flow

	Diagno	stic information	Remedy instructions
No.	Short text		
529	Concentration calculation not accurate		Out of valid range of the selected calculation algorithm
	Measured variable status		 Check concentration settings Check measured values, e.g. density or temperature
	Quality	Bad	
	Quality substatus	Function check	
	Coding (hex)	0x3C to 0x3F	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	 Carrier mass flow Target corrected volume flow Carrier corrected volume flow Concentration Density Mass flow Target mass flow Carrier volume flow 		Target volume flowVolume flow

	Diagnos	tic information	Remedy instructions
No.		Short text	
537	Configuration		1. Check IP addresses in network
	Measured variable status		2. Change IP address
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Warning	
	Influenced measured variables		·
	-		

	Diagno	stic information	Remedy instructions
No.		Short text	
594	Relay output simulation		Deactivate simulation switch output
	Measured variable status		1
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

12.7.4 Diagnostic of process

	Diagnosti	c information	Remedy instructions
No.		Short text	
803			1. Check wiring
	Measured variable status		2. Change I/O module
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	-		

	Diagnostic information			Remedy instructions
No.	. Short text			
830	Sensor temperature too high		Reduce ambi	ient temp. around the sensor housing
	Measured variable status [from	1 the factory] ¹⁾		
	Quality G	Good		
	Quality substatus C)k		
	Coding (hex) 0	x80 to 0x83		
	Status signal S			
	Diagnostic behavior V	Varning		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 Index suspective HBSI NSV flow NSV flow a External pr Exciter curred Exciter curred Oscillation Oscillation S&W volum (ISEM) Reference of 	w flow ogeneous medium nded bubbles ternative essure ent 1 ent 2 requency 1 requency 2 e flow	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic inf	formation	Remedy instructions
No.	Short text		
831	Sensor temperature too low		Increase ambient temp. around the sensor housing
	Measured variable status [from	n the factory] ¹⁾	
	Quality G	Good	
	Quality substatus Ok		
	Coding (hex) 0	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior V	Warning	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended by HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density 	Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 pus medium Frequency fluctuation 1 abbles Frequency fluctuation 2 Target mass flow Carrier volume flow re Target volume flow Temp. compensated dynamic viscosity Temperature cy 1 Status cy 2 Volume flow Oil volume flow Water volume flow

	Diagnostic information		Remedy instructions
No.	Short text		
832	Electronic temperature too hig	h	Reduce ambient temperature
	Measured variable status [fr	om the factory] ¹⁾	
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variabl	es	
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flot Carrier corrected volume flot Carrier corrected volume flot Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 ous medium Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Cy 1

Diagnostic information			Remedy instructions		
No.	Short text				
833	Electronic temperature too lo	W	Increase ambient ter	mperature	
	Measured variable status [f	rom the factory] ¹⁾			
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	S			
	Diagnostic behavior	Warning			
	Influenced measured variab	les			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume fl Carrier corrected volume fl Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 	 GSV flow GSV flow alt GSV flow alt Kinematic vi Mass flow Oil mass flow Oil mass flow Water mass Index inhom 	scosity w flow nogeneous medium nded bubbles eremative ssure ent 1 ent 2 requency 1 requency 2 e flow	 Reference density alternative Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water volume flow Water volume flow 	

	Diagnostic information		Remedy instructions
No.	o. Short text		
834	Process temperature too high		Reduce process temperature
	Measured variable status [from	1 the factory] ¹⁾	
	Quality G	Good	
	Quality substatus O)k	
	Coding (hex)	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternati Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogene Index suspended b HBSI NSV flow NSV flow alternati External pressure Exciter current 1 Exciter current 2 Oscillation frequer Oscillation frequer S&W volume flow (ISEM) Reference density Reference density 	 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Water corrected volume flow Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil corrected volume flow Volume flow Volume flow Volume flow Vater volume flow

Diagnostic information		formation	Remedy instructions
No.	Short text		
835	Process temperature too low		Increase process temperature
	Measured variable status [from	1 the factory] ¹⁾	
	Quality G	Good	
	Quality substatus O)k	
	Coding (hex)	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternativ Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended bu HBSI NSV flow NSV flow alternativ External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density a 	 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 bbles Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature cy 1 Status cy 2 Volume flow Oil convertion

	Diagnostic information			Remedy instructions	
No.	o. Short text				
842	Process limit			Low flow cut off active!	
	Measured variable status [from the factory]			1. Check low flow cut of	ff configuration
	Quality	Good			
	Quality substatus	Ok		-	
	Coding (hex)	0x80 to 0x83		-	
	Status signal	S		-	
	Diagnostic behavior	Warning		-	
	Influenced measured variables				
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	v w re (ISEM)	 GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended be HBSI NSV flow NSV flow alternative Exciter current 1 Exciter current 2 Oscillation frequen S&W volume flow Reference density a 	ous medium ubbles ve cy 1 cy 2	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic	information		Remedy instructions
No.	. Short text			
862	Partly filled pipe		1. Check for gas in	
	Measured variable status [from the factory] 1)		2. Adjust detection	1 limits
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior Warning			
	Influenced measured variables			
	 Application specific output Application specific output Carrier mass flow Target corrected volume fle Carrier corrected volume fle Concentration Density Oil density Water density Dynamic viscosity GSV flow GSV flow alternative 	 Oil mass flow Water mass fl Index inhomos 	geneous medium ed bubbles native ure low sity sity alternative	 Oil corrected volume flow Water corrected volume flow Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow

Diagnostic information			Remedy instructions	
No.	Short text			
882	Input signal		1. Check input configuration	
	Measured variable status		2. Check external device or process conditions	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variabl	es		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flo Concentration Measured values 1 Measured values 2 Measured values 3 Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity 		 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Vene flow Vene flow 	

	Diagnostic information			Remedy instructions
No.	. Short text			
910	Tubes not oscillating		1. Check electronic	
	Measured variable status		2. Inspect sensor	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		
	Influenced measured variables			
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	w NSV flow NSV flow alternati External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow	eous medium ubbles ve ncy 1 ncy 2	 Corrected volume flow Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Status Volume flow Oil volume flow Water volume flow Water cut

Diagnostic information		formation	Remedy instructions
No.	Sho	rt text	
912	Medium inhomogeneous Measured variable status [from the factory] ¹⁾		1. Check process cond.
			2. Increase system pressure
	Quality G	Good	
	Quality substatus 0)k	
	Coding (hex) 0:	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature GSV flow 	 GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended by HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density 	 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 bbles Frequency fluctuation 2 Target mass flow Carrier volume flow Carrier volume flow Temp. compensated dynamic viscosity Temperature cy 1 Status cy 2 Volume flow Oil colume flow Water volume flow

Diagnostic information		nformation	Remedy instructions
No.	Short text		
913	Medium unsuitable Measured variable status [from the factory] ¹⁾		 Check process conditions Check electronic modules or sensor
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Density Oscillation damping 2 Oscillation frequent Oscillation frequent Oscillation frequent Oscillation frequent Oscillation frequent Oscillation frequent Sensor electronic temperature (ISEM) 		 Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 bbles Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature cy 1

Diagnostic information			Remedy instructions
o. Short text		Short text	
1	API temperature out of specification		 Check process temperature with selected API commodity group Check API related parameters
	Measured variable status [from the factory] 1)		
	Quality	Bad	
	Quality substatus	Maintenance alarm	-
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	 Oil density Water density GSV flow GSV flow alternative Mass flow Oil mass flow 	 Water mass flow NSV flow NSV flow alternati External pressure S&W volume flow Reference density 	Oil volume flowWater volume flow

	Diagnostic information		Remedy instructions
No.		Short text	
942	J 1		 Check process density with selected API commodity group Check API related parameters
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	Mass flow		

	Diagnostic information		Remedy instructions
No.	No. Short text		
943	API pressure out of specification		 Check process pressure with selected API commodity group Check API related parameters
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	 Oil density Water density GSV flow GSV flow alternative Mass flow Oil mass flow 	 Water mass flow NSV flow NSV flow alternati External pressure S&W volume flow Reference density and the second secon	Oil volume flowWater volume flow

	Diagnostic	information	Remedy instructions	
No.	Short text			
944	Monitoring failed		Check process conditions for Heartbeat Monitoring	
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		
	Influenced measured variabl	es		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Concentration Oscillation damping 1 Oscillation damping 2 Density Dynamic viscosity 	 Sensor electronic te Kinematic viscosity Mass flow Index inhomogenee Index suspended be HBSI External pressure Exciter current 1 Exciter current 2 Oscillation frequen Reference density 	 Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Temp. compensated dynamic viscosity Temperature cy 1 	

Diagnostic information			Remedy instructions
No.	Short text		
948	Oscillation damping too high		Check process conditions
	Measured variable status [from	the factory] ¹⁾	
	Quality G	ood	_
	Quality substatus 0	lk	
	Coding (hex) 0	x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	-
	Influenced measured variables		
	 Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Carrier corrected volume flow Concentration Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Dynamic viscosity Sensor electronic temperature 	 GSV flow alternative Kinematic viscosity Mass flow Oil mass flow Water mass flow Water mass flow Index inhomogenee Index suspended by HBSI NSV flow NSV flow alternative External pressure Exciter current 1 Exciter current 2 Oscillation frequen Oscillation frequen S&W volume flow (ISEM) Reference density a 	Y Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 eous medium Frequency fluctuation 1 oubbles Frequency fluctuation 2 Target mass flow Carrier volume flow Target volume flow Target volume flow Temp. compensated dynamic viscosity Temperature hcy 1 Status Oil volume flow Oil volume flow Water volume flow

12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

To call up the measures to rectify a diagnostic event:

- Via local display \rightarrow 158
- Via Web browser $\rightarrow \square 159$
- Via "FieldCare" operating tool →
 ■ 160
- Via "DeviceCare" operating tool $\rightarrow \square 160$

Other pending diagnostic events can be displayed in the Diagnostic list submenu $\rightarrow \cong 215$

Navigation

"Diagnostics" menu

♡, Diagnostics	
Actual diagnostics) → 🗎 215
Previous diagnostics) → 🗎 215
Operating time from restart	→ 🖹 215
Operating time) → 🗎 215

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.9 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics \rightarrow Diagnostic list

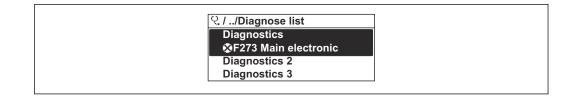

■ 33 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \square 158$
- Via Web browser $\rightarrow \square$ 159
- Via "DeviceCare" operating tool $\rightarrow \triangleq 160$


12.10 Event logbook

12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu \rightarrow **Event logbook** submenu \rightarrow Event list

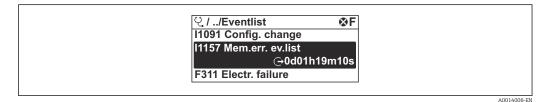

34 Taking the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Diagnostic events $\rightarrow \square 164$
- Information events $\rightarrow \cong 217$

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - $\overline{\mathfrak{O}}$: Occurrence of the event
 - 🕒: End of the event
- Information event

 \odot : Occurrence of the event

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \implies 158$
- Via Web browser $\rightarrow \square 159$
- Via "FieldCare" operating tool →

 [™]
 160
- Via "DeviceCare" operating tool \rightarrow 🗎 160

For filtering the displayed event messages $\rightarrow \cong 217$

12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name		
I1000	(Device ok)		
I1079	Sensor changed		
I1089	Power on		
I1090	Configuration reset		
I1091	Configuration changed		
I1092	HistoROM backup deleted		
I1111	Density adjust failure		
I1137	Electronic changed		
I1151	History reset		
I1155	Reset electronic temperature		
I1156	Memory error trend		
I1157	Memory error event list		
I1209	Density adjustment ok		
I1221	Zero point adjust failure		
I1222	Zero point adjustment ok		
I1256	Display: access status changed		
I1278	I/O module restarted		
I1335	Firmware changed		
I1361	Web server: login failed		
I1397	Fieldbus: access status changed		
I1398	CDI: access status changed		
I1444	Device verification passed		
I1445	Device verification failed		
I1447	Record application reference data		
I1448	Application reference data recorded		
I1449	Recording application ref. data failed		
I1450	Monitoring off		
I1451	Monitoring on		

Info number	Info name	
I1457	Measurement error verification failed	
I1459	I/O module verification failed	
I1460	HBSI verification failed	
I1461	Sensor verification failed	
I1462	Sensor electronic module verific. failed	
I1512	Download started	
I1513	Download finished	
I1514	Upload started	
I1515	Upload finished	
I1618	I/O module 2 replaced	
I1619	I/O module 3 replaced	
I1621	I/O module 4 replaced	
I1622	Calibration changed	
I1624	Reset all totalizers	
I1625	Write protection activated	
I1626	Write protection deactivated	
I1627	Web server: login successful	
I1628	Display: login successful	
I1629	CDI: login successful	
I1631	Web server access changed	
I1632	Display: login failed	
I1633	CDI: login failed	
I1634	Reset to factory settings	
I1635	Reset to delivery settings	
I1639	Max. switch cycles number reached	
I1649	Hardware write protection activated	
I1650	Hardware write protection deactivated	
I1712	New flash file received	
I1725	Sensor electronic module (ISEM) changed	
I1726	Configuration backup failed	

12.11 Resetting the measuring device

Using the **Device reset** parameter ($\rightarrow \boxminus 134$) it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.11.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.

Options	Description	
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.	
Restore S-DAT backup	Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT. This option is displayed only in an alarm condition.	

12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

► Device information	
Device tag) → 🖺 219
Serial number) → 🗎 219
Firmware version	→ 🗎 219
Device name	→ 🗎 220
Manufacturer]
Order code) → 🗎 220
Extended order code 1) → 🗎 220
Extended order code 2] → 🗎 220
Extended order code 3) → 🗎 220
ENP version] → 🗎 220

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters such as lower-case letters or numbers.	-
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-

Parameter	Description	User interface	Factory setting
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Promass 300/500	-
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	_
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	-

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
09.2019	01.01.zz	Option 67	 System redundancy S2 Gas fraction handler: smart filtering, entrainment index Application-specific Input module Upgrading of the Petroleum application package 	Operating Instructions	BA01738D/06/EN/03.19
10.2017	01.00.zz	Option 73	Original firmware	Operating Instructions	BA01738D/06/EN/01.17

12.13 Firmware history



It is possible to flash the firmware to the current version using the service interface.

For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
- Product root: e.g. 8E3B
 - The product root is the first part of the order code: see the nameplate on the device.
- Text search: Manufacturer's information
- Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device $\rightarrow \cong 243$.

13.2 Measuring and test equipment

 ${\it Endress+Hauser}$ offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \square 225 \rightarrow \square 227$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ► Document every repair and each conversion and enter them into the *W*@*M* life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

P Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the Serial number parameter (→
 ^(→) 219) in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the website for more information: http://www.endress.com/support/return-material

2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

14.5 Disposal

X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions.

- Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

 Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Proline 300 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Output Input Display/operation Housing Software Order code: 8X3BXX Installation Instructions EA01200D
Remote display and operating module DKX001	 If ordered directly with the measuring device: Order code for "Display; operation", option O "Remote display 4-line illum.; 10 m (30 ft) Cable; touch control" If ordered separately: Measuring device: order code for "Display; operation", option M "W/o, prepared for remote display" DKX001: Via the separate product structure DKX001 If ordered subsequently: DKX001: Via the separate product structure DKX001 Mounting bracket for DKX001 If ordered directly: order code for "Accessory enclosed", option RA "Mounting bracket, pipe 1/2" If ordered subsequently: order number: 71340960 Connecting cable (replacement cable) Via the separate product structure: DKX002 Further information on display and operating module: DKX001 → 249. Special Documentation: SD01763D
External WLAN antenna	 External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area". Image: The external WLAN antenna is not suitable for use in hygienic applications. Further information on the WLAN interface → B 69. Image: Order number: 71351317 Image: Installation Instructions EA01238D
Protective cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. I Order number: 71343505 I Installation Instructions EA01160D

Accessories	Description	
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.	
	If using oil as a heating medium, please consult with Endress+Hauser.	
	Heating jackets cannot be used with sensors fitted with a rupture disk.	
	 If ordered together with the measuring device: 	
	order code for "Enclosed accessories"	
	 Option RB "heating jacket, G 1/2" internal thread" 	
	 Option RC "heating jacket, G 3/4" internal thread" Option RD "Lating is shot. NIT 1 (2)" internal thread " 	
	 Option RD "Heating jacket, NPT 1/2" internal thread" Option RE "Logic closet, NRT 2 (4" internal thread") 	
	 Option RE "Heating jacket, NPT 3/4" internal thread" If ordered subsequently: 	
	Use the order code with the product root DK8003.	
	Special Documentation SD02151D	

15.1.2 For the sensor

15.2 Communication-specific accessories

Accessories	Description	
Fieldgate FXA42	Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices	
	 Technical Information TI01297S Operating Instructions BA01778S Product page: www.endress.com/fxa42 	
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.	
	 Technical Information TI01342S Operating Instructions BA01709S Product page: www.endress.com/smt70 	
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.	
	 Technical Information TI01418S Operating Instructions BA01923S Product page: www.endress.com/smt77 	

Accessories	Description	
Applicator	 Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. 	
	 Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator As a downloadable DVD for local PC installation. 	
W@M	 W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement 	
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. () Operating Instructions BA00027S and BA00059S	
DeviceCare	Tool to connect and configure Endress+Hauser field devices. Innovation brochure IN01047S	

15.3 Service-specific accessories

15.4 System components

Accessories	Description	
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.	
	 Technical Information TI00133R Operating Instructions BA00247R 	
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.	
Cerabar S	 The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value. Technical Information TI00383P Operating Instructions BA00271P 	
itemp	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature. () "Fields of Activity" document FA00006T	

16 Technical data

16.1 Application

The measuring device is intended only for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle	asuring principle	
Measuring system	The device consists of a transmitter and a sensor.		
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.		
	For information on the structure of the device $\rightarrow extsf{B} extsf{15}$		

16.3 Input

Measured variable	Direct measured variables
	Mass flowDensityTemperature
	Calculated measured variables
	Volume flowCorrected volume flowReference density

Measuring range

Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	3⁄8	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
25	1	0 to 18000	0 to 661.5
40	11/2	0 to 45 000	0 to 1654
50	2	0 to 70 000	0 to 2 573
80	3	0 to 180 000	0 to 6615

Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used and can be calculated with the formula below:

 $\dot{m}_{max(G)}$ = minimum ($\dot{m}_{max(F)} \cdot \rho_G : x$; $\rho_G \cdot c_G \cdot \pi/2 \cdot (d_i)^2 \cdot 3600$)

m _{max(G)}	Maximum full scale value for gas [kg/h]	
m _{max(F)}	Maximum full scale value for liquid [kg/h]	
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{max(G)}$ can never be greater than $\dot{m}_{max(F)}$	
ρ _G	Gas density in [kg/m ³] at operating conditions	
x	Constant dependent on nominal diameter	
CG	Sound velocity (gas) [m/s]	
d _i	Measuring tube internal diameter [m]	

DN		x
[mm]	[in]	[kg/m ³]
8	3⁄8	85
15	1/2	110
25	1	125
40	1½	125
50	2	125
80	3	155

	 Measuring range (liqu x = 125 kg/m³ (for Pr Maximum possible fulls 	N 50 y of 60.3 kg/m³ (at 20 °C and 50 bar) uid): 70000 kg/h omass E, DN 50)		
		Recommended measuring range		
	$flow limit \rightarrow a 24$	5		
Operable flow range	Over 1000 : 1.			
		eset full scale value do not override the electronics unit, with the values are registered correctly.		
Input signal	External measured val	ues		
	flow for gases, the auto the measuring device: • Operating pressure to pressure measuring d • Medium temperature	y of certain measured variables or to calculate the corrected volume mation system can continuously write different measured values to increase accuracy (Endress+Hauser recommends the use of a evice for absolute pressure, e.g. Cerabar M or Cerabar S) to increase accuracy (e.g. iTEMP) calculating the corrected volume flow for gases		
	Various pressure and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section →			
	It is recommended to re flow.	ad in external measured values to calculate the corrected volume		
	Current input			
	The measured values arthe current input $\rightarrow \square$	e written from the automation system to the measuring device via 230.		
	Digital communication			
	The measured values ar PROFINET.	e written from the automation system to the measuring device via		
	Current input 0/4 to 20	0 mA		
	Current input	0/4 to 20 mA (active/passive)		
	Current span	 4 to 20 mA (active) 0/4 to 20 mA (passive) 		
	Resolution	1 µA		
	Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)		
	Maximum input voltage	≤ 30 V (passive)		

≤ 28.8 V (active)

Pressure Temperature Density

Open-circuit voltage

Possible input variables

Status input

Maximum input values	 DC -3 to 30 V If status input is active (ON): R_i >3 kΩ 	
Response time	Configurable: 5 to 200 ms	
Input signal level	 Low signal: DC -3 to +5 V High signal: DC 12 to 30 V 	
Assignable functions	 Off Reset the individual totalizers separately Reset all totalizers Flow override 	

16.4 Output

Output signal

PROFINET

	Standards	In accordance with IEEE 802.3
--	-----------	-------------------------------

Current output 4 to 20 mA

Signal mode Current span	Can be set to: • Active • Passive Can be set to: • 4 to 20 mA NAMUR • 4 to 20 mA US • 4 to 20 mA • 0 to 20 mA • 0 to 20 mA (only if the signal mode is active) • Fixed current	
Maximum output values	22.5 mA	
Open-circuit voltage	DC 28.8 V (active)	
Maximum input voltage	DC 30 V (passive)	
Load	0 to 700 Ω	
Resolution	0.38 μΑ	
Damping	Configurable: 0 to 999.9 s	
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronics temperature Oscillation frequency 0 Oscillation damping 0 Signal asymmetry Exciter current 0 Image of options increases if the measuring device has one or more application packages. 	

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output	
Version	Open collector	
	Can be set to: • Active • Passive • Passive NAMUR Ex-i, passive	
Maximum input values	DC 30 V, 250 mA (passive)	
Open-circuit voltage	DC 28.8 V (active)	
Voltage drop	For 22.5 mA: ≤ DC 2 V	
Pulse output		
Maximum input values	DC 30 V, 250 mA (passive)	
Maximum output current	22.5 mA (active)	

Open-circuit voltage	DC 28.8 V (active)	
Pulse width	Configurable: 0.05 to 2 000 ms	
Maximum pulse rate	10 000 Impulse/s	
Pulse value	Adjustable	
Assignable measured variables	Mass flow Volume flow Corrected volume flow	
Frequency output		
Maximum input values	DC 30 V, 250 mA (passive)	
Maximum output current	22.5 mA (active)	
Open-circuit voltage	DC 28.8 V (active)	
Output frequency	Adjustable: end value frequency 2 to 10000 Hz (f $_{max}$ = 12500 Hz)	
Damping	Configurable: 0 to 999.9 s	
Pulse/pause ratio	1:1	
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronics temperature Oscillation frequency 0 Oscillation damping 0 Signal asymmetry Exciter current 0 In range of options increases if the measuring device has one or more application packages. 	
Switch output		
Maximum input values	DC 30 V, 250 mA (passive)	
Open-circuit voltage	DC 28.8 V (active)	
Switching behavior	Binary, conductive or non-conductive	
Switching delay	Configurable: 0 to 100 s	
Number of switching cycles	Unlimited	
Assignable functions	 Off On Diagnostic behavior Limit value Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1-3 Flow direction monitoring Status Partially filled pipe detection Low flow cut off The range of options increases if the measuring device has one or more application packages. 	

Relay output

Function	Switch output	
Version	Relay output, galvanically isolated	
Switching behavior	Can be set to: • NO (normally open), factory setting • NC (normally closed)	
Maximum switching capacity (passive)	 DC 30 V, 0.1 A AC 30 V, 0.5 A 	
Assignable functions	 Off On Diagnostic behavior Limit value Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1-3 Flow direction monitoring Status Partially filled pipe detection Low flow cut off The range of options increases if the measuring device has one or more application packages. 	

User-configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

Signal on alarm

Depending on the interface, failure information is displayed as follows:

PROFINET

Device diagnostics According to "Application Layer protocol for decentralized periphery", Version 2.3

Current output 0/4 to 20 mA

4 to 20 mA

Failure mode	 Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Freely definable value between: 3.59 to 22.5 mA Actual value Last valid value
	Last valid value

0 to 20 mA

Failure mode	Choose from:
	 Maximum alarm: 22 mA Freely definable value between: 0 to 20.5 mA

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: • Actual value • No pulses
Frequency output	
Failure mode	Choose from: • Actual value • 0 Hz • Defined value (f _{max} 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from: • Current status • Open • Closed

Relay output

Failure mode	Choose from: • Current status
	OpenClosed

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red backlighting indicates a device error.	

Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: PROFINET
- Via service interface
 - CDI-RJ45 service interface
 - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes	
	 The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred PROFINET network available PROFINET connection established PROFINET blinking feature 	
	Diagnostic information via light emitting diodes $\rightarrow \equiv 154$	

Low	flow	cut	off
HO 11	110.11	cut	011

The switch points for low flow cut off are user-selectable.

Galvanic isolation

Protocol-specific data

The outputs are galvanically isolated from one another and from earth (PE).

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.3	
Communication type	100 MBit/s	
Conformity class	Conformance Class B	
Netload Class	Netload Class II	
Baud rates	Automatic 100 Mbit/s with full-duplex detection	
Cycle times	From 8 ms	
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs	
Media Redundancy Protocol (MRP)	Yes	
System redundancy support	System redundancy S2 (2 AR with 1 NAP)	
Device profile	Application interface identifier 0xF600 Generic device	
Manufacturer ID	0x11	
Device type ID	0x843B	
Device description files (GSD, DTM, DD)	 Information and files under: www.endress.com On the product page for the device: Documents/Software → Device drivers www.profibus.org 	
Supported connections	 2 x AR (IO Controller AR) 1 x AR (IO-Supervisor Device AR connection allowed) 1 x Input CR (Communication Relation) 1 x Output CR (Communication Relation) 1 x Alarm CR (Communication Relation) 	
Configuration options for measuring device	 DIP switches on the electronics module, for device name assignment (last part) Manufacturer-specific software (FieldCare, DeviceCare) Web browser Device master file (GSD), can be read out via the integrated Web server of the measuring device 	
Configuration of the device name	 DIP switches on the electronics module, for device name assignment (last part) DCP protocol Process Device Manager (PDM) Integrated Web server 	

Supported functions	 Identification & Maintenance Simple device identification via: Control system Nameplate Measured value status The process variables are communicated with a measured value status Blinking feature via the onsite display for simple device identification and assignment Device operation via operating tools (e.g. FieldCare, DeviceCare, SIMATIC PDM) 	
System integration	 Information on system integration → ⁽¹⁾ 76. Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting 	

16.5 Power supply

Terminal assignment	→ 🗎 33							
Device plugs available	→ 🗎 33							
Pin assignment, device plug	→ 🖹 33							
Supply voltage	Order code for "Power supply"	T	erminal voltage	2	Frequency range			
	Option D		C 24 V	±20%	-			
	Option E	A	C 100 to 240 V	-15 to +10%	50/60 Hz			
		D	C 24 V	±20%	-			
	Option I	A	C 100 to 240 V	-15 to +10%	50/60 Hz			
	switch-on currentMax. 36 A (<5 ms) as per NAMUR Recommendation NE 21							
	switch-on current Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21							
Current consumption	Transmitter • Max. 400 mA (24 V • Max. 200 mA (110	•	Hz; 230 V, 50)/60 Hz)				
Power supply failure	 Totalizers stop at th Depending on the d the pluggable data a Error messages (income state) 	levice versio memory (H	on, the config istoROM DA	т).	ained in the device memoryor in			
Electrical connection	→ 🖹 34							
Potential equalization	→ 🖺 40							
Endress+Hauser					237			

Terminals			Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm ² (24 to 12 AWG).				
Cable entries		land: M20 × 1.5 with cable Ø 6 to 12 for cable entry: ⁄2"	2 mm (0.24 to 0.47 in)				
Cable specification	→ 🗎 30						
	16.6	Performance character	istics				
Reference operating conditions	 Error limits based on ISO 11631 Water with +15 to +45 °C (+59 to +113 °F) at2 to 6 bar (29 to 87 psi) Specifications as per calibration protocol Accuracy based on accredited calibration rigs that are traced to ISO 17025. 						
	1 To ol	otain measured errors, use the Appli	cator sizing tool $\rightarrow \square 227$				
Maximum measured error	o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature						
	Base accuracy						
	Design fundamentals $\rightarrow \cong 241$						
	Mass flow and volume flow (liquids)						
	± 0.15 % o.r. ± 0.10 % o.r. (order code for "Calibration flow", option A, B, C, for mass flow)						
	Mass flow (gases)						
	±0.50 % o.r.						
	Density (liquids)						
		Under reference conditions	Standard density calibration				
		[g/cm ³]	[g/cm³]				
		±0.0005	±0.002				
	Temperat	ure					
	•						
	±0.5 °C ±	0.005 · T ℃ (±0.9 ℉ ± 0.003 · (T – 3	52) °F)				

DN		Zero point stability				
[mm] [in]		[kg/h]	[lb/min]			
8	3⁄8	0.20	0.007			
15	1/2	0.65	0.024			

DN		Zero point stability				
[mm]	[mm] [in]		[lb/min]			
25	1	1.80	0.066			
40	11/2	4.50	0.165			
50	2	7.0	0.257			
80	3	18.0	0.6615			

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18000	1800	900	360	180	36
40	45000	4500	2 2 5 0	900	450	90
50	70000	7 000	3 500	1400	700	140
80	180000	18000	9000	3600	1800	360

US	units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
11/2	1654	165.4	82.70	33.08	16.54	3.308
2	2 5 7 3	257.3	128.7	51.46	25.73	5.146
3	6615	661.5	330.8	132.3	66.15	13.23

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy

±5 μA

Pulse/frequency output


o.r. = of reading

Accuracy	Max. ± 50 ppm o.r. (over the entire ambient temperature range)
----------	--

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

	Base repeatability ☐ Design fundamentals →				
	Mass flow and volume flow (liquids) ±0.075 % o.r. ±0.05 % o.r. (calibration option, for mass flow)				
	Mass flow (gases) ±0.35 % o.r.				
	Density (liquids) ±0.00025 g/cm ³				
	Temperature ±0.25 °C ± 0.0025 · T °C (±0.45 °F ± 0.0015 · (T−32) °F)				
Response time	The response time depends on the configuration (damping).				
Influence of ambient temperature	Current output				
-	Temperature coefficientMax. 1 µA/°C				
	Pulse/frequency output				
	Temperature coefficient No additional effect. Included in accuracy.				
Influence of medium temperature	Mass flow and volume flow o.f.s. = of full scale value				
	When there is a difference between the temperature for zero point adjustment and the process temperature, the additional measured error of the sensor is typically ± 0.0002 % o.f.s./°C (± 0.0001 % o. f.s./°F).				
	The effect is reduced if zero point adjustment is performed at process temperature.				
	Density When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is $\pm 0.0001 \text{ g/cm}^3$ /°C ($\pm 0.00005 \text{ g/cm}^3$ /°F). Field density calibration is possible.				

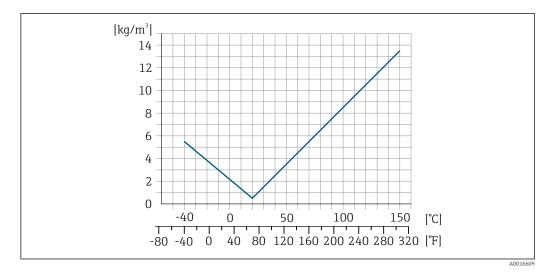

■ 35 Field density calibration, for example at +20 °C (+68 °F)


Temperature

±0.005 · T °C (± 0.005 · (T - 32) °F)

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

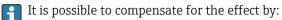

- Reading in the current pressure measured value via the current input.
- Specifying a fixed value for the pressure in the device parameters.
- Operating Instructions .

D	N	[% o.r./bar] [% o.r./psi]				
[mm]	[in]					
8	3/8	no influer	nce			
15	1∕2	no influence				
25	1	no influence				
40	1½	no influer	nce			
50	2	-0.009	-0.0006			
80	3	-0.020	-0.0014			

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability

Calculation of the maximum measured error as a function of the flow rate

Flow rate		Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$		± BaseAccu
	A0021332	1001233
< ZeroPoint BaseAccu · 100		$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
	A0021333	A0021334

¹ /₂ · ZeroPoint BaseRepeat · 100			ZeroPoint leasValue	· 100					
I I I I I I I I I I I I I I I I I I I	A0021336	1.							
ample for maximum n	neasure	d error							
E [%] 2.5 –									-
2.0									_
1.5									_
1.0									-
0.5									
								· · · •	-
0 5 10 15 20	25 30 3	5 40 45	50 55	60 65	70 7	5 80	85 9	90 95 1	00 Q [%

Calculation of the maximum repeatability as a function of the flow rate

 \pm BaseRepeat

Maximum repeatability in % o.r.

16.7 Installation


Flow rate

 $\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$

Installation conditions	→ 🗎 22		
	16.8 Environment		
Ambient temperature range	$\rightarrow \textcircled{24} 24 \rightarrow \textcircled{24}$		
	Temperature tables		
	Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.		
	For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.		
Storage temperature	−50 to +80 °C (−58 to +176 °F)		
Climate class	DIN EN 60068-2-38 (test Z/AD)		
Degree of protection	 Measuring device As standard: IP66/67, type 4X enclosure When housing is open: IP20, type 1 enclosure Display module: IP20, type 1 enclosure With the order code for "Sensor options", option CM: IP69 can also be ordered 		

	External WLAN antenna IP67				
Vibration- and shock-	Vibration sinusoidal, in accordance with IEC 60068-2-6				
resistance	 2 to 8.4 Hz, 3.5 mm peak 8.4 to 2 000 Hz, 1 g peak 				
	Vibration broad-band random, according to IEC 60068-2-64				
	 10 to 200 Hz, 0.003 g²/Hz 200 to 2 000 Hz, 0.001 g²/Hz Total: 1.54 g rms 				
	Shock half-sine, according to IEC 60068-2-27				
	6 ms 30 g				
	Rough handling shocks, according to IEC 60068-2-31				
Mechanical load	Never use the transmitter housing as a ladder or climbing aid.				
Electromagnetic	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)				
compatibility (EMC)	Details are provided in the Declaration of Conformity.				
	16.9 Process				

Medium temperature range -40 to +150 $^\circ C$ (–40 to +302 $^\circ F)$

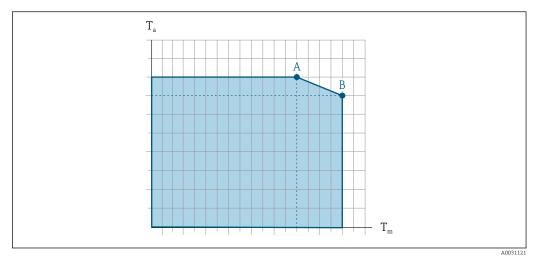

Dependency of ambient temperature on medium temperature

■ 36 Exemplary representation, values in the table below.

- T_a Ambient temperature range
- T_m Medium temperature
- A Maximum permitted medium temperature T_m at $T_{a max} = 60 \degree C$ (140 °F); higher medium temperatures T_m require a reduced ambient temperature T_a
- *B* Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

Values for devices used in the hazardous area: Separate Ex documentation (XA) for the device $\rightarrow \cong 257$.

Not insulated				Insulated			
А		в		A		В	
T _a	T _m	Ta	T _m	T _a	T _m	Ta	T _m
60 °C (140 °F)	150 ℃ (302 °F)	-	-	60 °C (140 °F)	110 ℃ (230 ℉)	55 ℃ (131 °F)	150 °C (302 °F)
Density	0 to 5	000	kg/m	³ (0 to 312 lb/cf)			
Pressure-tempera ratings					emperature rating ormation" documen		onnections is
Sensor housing	The se mecha			0	ry nitrogen gas and	l protects the elect	ronics and
					due to process cha be contained by the		rosive or abrasive
	accord burst j ruptur housir involv.	ing t press e dis ng. Tl ing h	o the ure d k. Th herefe igh g	operating process oes not provide an is prevents excessi ore, the use of a ru as pressures, and p	pressure level inside pressure. If the use adequate safety m vely high pressure pture disk is strong particularly in appli ousing burst press	er judges that the s nargin, the device c from forming insid gly recommended i ications in which th	sensor housing an be fitted with a le the sensor n applications

Burst pressure of the sensor housing

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive .

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

DN		Sensor housing burst pressure	
[mm]	[in]	[bar]	[psi]
8	3/8	250	3620
15	1/2	250	3620
25	1	250	3620
40	11/2	200	2 900
50	2	180	2610
80	3	120	1740

For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Rupture diskTo increase the level of safety, a device version with a rupture disk with a trigger pressure
of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA
"rupture disk").

The use of rupture disks cannot be combined with the separately available heating jacket.

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

- For an overview of the full scale values for the measuring range, see the "Measuring range" section $\rightarrow \cong 229$
- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
- The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
- The maximum mass flow depends on the density of the gas: formula $\rightarrow \cong 229$

Pressure loss	To calculate the pressure loss, use the <i>Applicator</i> sizing tool $\rightarrow \cong 227$			
System pressure	→ 🗎 24			

16.10 Mechanical construction

Design, dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter as per order code for "Housing", option A "Aluminum, coated".

Different values due to different transmitter versions:

- Transmitter version for the hazardous area (Order code for "Housing", option A "Aluminum, coated"; Ex d): +2 kg (+4.4 lbs)
- Transmitter version for hygienic area (Order code for "Housing", option B "Stainless, hygienic"): +0.2 kg (+0.44 lbs)

Weight in SI units

DN [mm]	Weight [kg]
8	5
15	5.5
25	7
40	11
50	16
80	32

Weight in US units

DN [in]	Weight [lbs]
3/8	11
1/2	12
1	15
1 ½	24
2	35
3	71

Materials

Transmitter housing

Order code for "Housing":

- Option **A** "Aluminum, coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless, hygienic": stainless steel, 1.4404 (316L)

Window material

Order code for "Housing":

- Option A "Aluminum, coated": glass
- Option **B** "Stainless, hygienic": polycarbonate

Seals

Order code for "Housing": Option **B** "Stainless, hygienic": EPDM and silicone

Cable entries/cable glands

Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Coupling M20 × 1.5	Non-Ex: plastic
	Z2, D2, Ex d/de: brass with plastic
Adapter for cable entry with female thread G $\frac{1}{2}$	Nickel-plated brass
Adapter for cable entry with female thread NPT ¹ / ₂ "	

Order code for "Housing", option B "Stainless, hygienic"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Plastic
Adapter for cable entry with female thread G ¹ / ₂ "	Nickel-plated brass
Adapter for cable entry with female thread NPT 1/2"	

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4539 (904L); manifold: stainless steel, 1.4404 (316L)

Process connections

- Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:
- Stainless steel, 1.4404 (F316/F316L)
- All other process connections: Stainless steel, 1.4404 (316/316L)

Available process connections→ 🗎 248

Seals

Welded process connections without internal seals

Accessories

Protective cover


Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections	 Fixed flange connections: EN 1092-1 (DIN 2501) flange EN 1092-1 (DIN 2512N) flange Namur lengths in accordance with NE 132 ASME B16.5 flange JIS B2220 flange DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch Clamp connections: Tri-Clamp (OD tubes), DIN 11866 series C Thread: DIN 11851 thread, DIN 11866 series A SMS 1145 thread ISO 2853 thread, ISO 2037 DIN 11864-1 Form A thread, DIN 11866 series A VCO connections: 8-VCO-4 12-VCO-4 				
	Process connection materials $\rightarrow \cong 247$				
Surface roughness	 All data relate to parts in contact with fluid. The following surface roughness quality can be ordered. Not polished Ra_{max} = 0.76 μm (30 μin) Ra_{max} = 0.38 μm (15 μin) 				
	16.11 Human interface				
Languages	 Can be operated in the following languages: Via local operation English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish Via Web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish Via Web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese 				
Local operation	Via display module				
	 Equipment: Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control" Order code for "Display; operation", option G "4-line, illuminated, graphic display; 				

- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"
- 1 Information about WLAN interface $\rightarrow \cong 69$

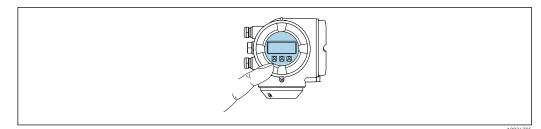

☑ 37 Operation with touch control

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- External operation via touch control (3 optical keys) without opening the housing: \boxdot , \boxdot , \boxdot
- Operating elements also accessible in the various zones of the hazardous area

Via remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra $\rightarrow \cong 225$.

- The remote display and operating module DKX001 is only available for the following housing version: order code for "Housing": option A "Aluminum, coated"
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

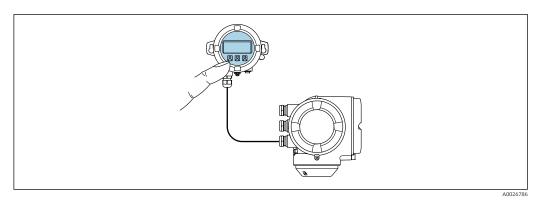

38 Operation via remote display and operating module DKX001

Display and operating elements

The display and operating elements correspond to those of the display module $\rightarrow \cong$ 248.

Housing material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

Transmitter housing	Remote display and operating module	
Order code for "Housing"	Material	Material
Option A "Aluminum, coated"	AlSi10Mg, coated	AlSi10Mg, coated

Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

Connecting cable

→ 🗎 31

Dimensions

Information on the dimensions:

"Mechanical construction" section of the "Technical Information" document.

Remote operation	→ 🗎 68
Service interface	→ 🗎 69

Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	 CDI-RJ45 service interface WLAN interface Ethernet-based fieldbus (EtherNet/IP, PROFINET) 	Special Documentation for device → 🗎 257
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	CDI-RJ45 service interfaceWLAN interfaceFieldbus protocol	→ 🗎 227
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	 CDI-RJ45 service interface WLAN interface Fieldbus protocol 	→ 🗎 227

- Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
 - Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
 - FieldMate by Yokogawa → www.yokogawa.com
 - PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com \rightarrow Downloads

Web server

	browser and via a ser the operating menu is status information or		/LAN interface. The structure of In addition to the measured values, lows the user to monitor the status			
	WLAN connection: or control + WLAN". The	A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal. <i>Supported functions</i> Data exchange between the operating unit (such as a notebook for example) and the measuring device:				
	Data exchange betwe measuring device:					
	backup)	configuration from the measuring device (XML format, configuration nfiguration to the measuring device (XML format, restore configuration) t list (.csv file)				
 Export parameter settings (.csv file or PDF file, document the measuring point configuration) Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package) 						
	 Flash firmware version for device firmware upgrade, for instance Download driver for system integration Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package → ⁽¹⁾ 255) 					
	(I) Web server speci	ial documentation $\rightarrow \cong 257$				
data management comprises bot		g device features HistoROM data management. HistoROM data management h the storage and import/export of key device and process data, making servicing far more reliable, secure and efficient.				
	as a backup in th	When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.				
	Additional informat	ion on the data storage concept				
There are diffe	rent types of data storage units in whi	ch device data are stored and used b	by the device:			
Device memory		T-DAT	S-DAT			
Available data	 Event logbook such as diagnostic events for example Parameter data record backup Device firmware package Driver for system integration for exporting via Web server, e.g: CSDML for PROEINET 	 Measured value logging ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Peakhold indicator (min/max values) Totalizer values 	 Sensor data: nominal diameter etc. Serial number Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O) 			

	GSDML for PROFINET		
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

Data backup function

Backup and subsequent restoration of a device configuration in the device memory HistoROM backup

 Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transfer

Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.: GSDML for PROFINET

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging

Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

16.12 Certificates and approvals

Currently available certificates and approvals can be called up via the product configurator.

CE mark	The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.	
	Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.	
Ex approval	The devices are certified for use in hazardous areas and the relevant safety instruct provided in the separate "Safety Instructions" (XA) document. Reference is made to document on the nameplate.	
Sanitary compatibility	 3-A approval Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval. The 3-A approval refers to the measuring device. When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device. Remote transmitters must be installed in accordance with the 3-A Standard. Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard. Each accessory can be cleaned. Disassembly may be necessary under certain circumstances. EHEDG-tested Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG. To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy Cleanable Pipe Couplings and Process Connections" (www.ehedg.org). FDA Food Contact Materials Regulation (EC) 1935/2004 	
Pharmaceutical compatibility	 FDA 21 CFR 177 USP <87> USP <88> Class VI 121 °C TSE/BSE Certificate of Suitability cGMP 	
	Devices with order code for "Test, certificate", option JG "Compliance with requirements derived from cGMP, declaration" are in accordance with cGMP requirements relating to the surfaces of wetted parts, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE-compliance.	
	A manufacturer's declaration specific to the serial number is supplied with the device.	
Certification PROFINET	PROFINET interface	
	 The measuring device is certified and registered by the PNO (PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications: Certified according to: Test specification for PROFINET devices PROFINET Security Level 2 – Netload Class The device can also be operated with certified devices of other manufacturers (interoperability) The device supports PROFINET S2 system redundancy. 	

Pressure Equipment Directive	 With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EU. Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Article 4 paragraph 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU.
Radio approval	The measuring device has radio approval.
	For detailed information regarding radio approval, see Special Documentation $\rightarrow \cong 257$
Additional certification	CRN approval
	Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.
	Tests and certificates
	 EN10204-3.1 material certificate, parts and sensor housing in contact with medium Pressure testing, internal procedure, inspection certificate PMI test (XRF), internal procedure, wetted parts, test report Compliance with requirements derived from cGMP, Declaration EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report
Other standards and guidelines	 EN 60529 Degrees of protection provided by enclosures (IP code) IEC/EN 60068-2-6 Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal). IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices. EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal. NAMUR NE 53 Software of field devices and signal-processing devices with digital electronics NAMUR NE 80 The application of the pressure equipment directive to process control devices NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices NAMUR NE 131 Requirements for field devices for standard applications

- NAMUR NE 132 Coriolis mass meter
- ETSI EN 300 328
- Guidelines for 2.4 GHz radio components.

```
• EN 301489
```

Electromagnetic compatibility and radio spectrum matters (ERM).

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Detailed information on the application packages: Special Documentation for the device $\rightarrow \cong 257$

Diagnostics functions	Package	Description
	Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
		Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
		 Data logging (line recorder): Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.

Heartbeat Technology	Package	Description
	Heartbeat Verification +Monitoring	 Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk assessment.
		 Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets.

Concentration	Package	Description
	Concentration	Calculation and outputting of fluid concentrations
		 The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package: Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.) Common or user-defined units (°Brix, °Plato, % mass, % volume, mol/l etc.) for standard applications. Concentration calculation from user-defined tables.

Petroleum	Package	Description
	Petroleum	The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package.
		 Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1" Water content, based on density measurement Weighted mean of the density and temperature

16.14 Accessories

Overview of accessories available for order $\rightarrow \cong 225$

16.15 Supplementary documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Standard documentation Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass E	KA01260D

Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 300	KA01341D

Technical Information

Measuring device	Documentation code
Promass E 300	TI01272D

Description of Device Parameters

Measuring device	Documentation code
Promass 300	GP01115D

```
Device-dependent
```

Safety instructions

additional documentation

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex d/Ex de	XA01405D
ATEX/IECEx Ex ec	XA01439D
cCSAus XP	XA01373D
cCSAus Ex d/ Ex de	XA01372D
cCSAus Ex nA	XA01507D
INMETRO Ex d/Ex de	XA01468D
INMETRO Ex ec	XA01470D
NEPSI Ex d/Ex de	XA01469D
NEPSI Ex nA	XA01471D
EAC Ex d/Ex de	XA01656D
EAC Ex nA	XA01657D
JPN Ex d	XA01778D

Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEx Ex i	XA01494D
ATEX/IECEx Ex ec	XA01498D
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD01969D
Heartbeat Technology	SD01988D
Concentration measurement	SD02005D
Petroleum	SD02099D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	 Access the overview of all the available spare part sets via W@M Device Viewer → [●] 223 Accessories available for order with Installation Instructions → [●] 225

Index

0...9

-	
3	A approval

Α

С

Technical data238Cable entryDegree of protection46CE mark12, 253Certificates252Certification PROFINET253cGMP253CheckInstallation29Checklist9Post-connection check47Post-installation check29Cleaning222Cleaning in place (CIP)222Sterilization in place (SIP)222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device30, 31Connecting the measuring device34
Degree of protection46CE mark12, 253Certificates252Certification PROFINET253cGMP253Check1Installation29Checklist9Post-connection check47Post-installation check29Cleaning212Cleaning222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
CE mark12, 253Certificates252Certification PROFINET253cGMP253Check1Installation29Checklist29Post-connection check47Post-installation check29Cleaning212Cleaning222Exterior cleaning222Interior cleaning222Sterilization in place (CIP)222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
CE mark12, 253Certificates252Certification PROFINET253cGMP253Check1Installation29Checklist29Post-connection check47Post-installation check29Cleaning212Cleaning222Exterior cleaning222Interior cleaning222Sterilization in place (CIP)222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Certificates252Certification PROFINET253cGMP253CheckInstallation29Checklist9Post-connection check47Post-installation check29Cleaning212Cleaning222Exterior cleaning222Interior cleaning222Sterilization in place (CIP)222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Certification PROFINET253cGMP253CheckInstallation29Checklist29Post-connection check47Post-installation check29Cleaning212Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device30, 31
cGMP253CheckInstallation29ChecklistPost-connection check47Post-installation check29Cleaning21Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device30, 31
Installation29ChecklistPost-connection check47Post-installation check29Cleaning29Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
ChecklistPost-connection check47Post-installation check29Cleaning212Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
ChecklistPost-connection check47Post-installation check29Cleaning212Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Post-installation check29Cleaning222Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Post-installation check29Cleaning222Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Cleaning in place (CIP)222Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Exterior cleaning222Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Interior cleaning222Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Sterilization in place (SIP)222Climate class242Commissioning88Advanced settings120Configuring the measuring device89Connecting cable30, 31
Climate class 242 Commissioning 88 Advanced settings 120 Configuring the measuring device 89 Connecting cable 30, 31
Commissioning 88 Advanced settings 120 Configuring the measuring device 89 Connecting cable 30, 31
Advanced settings
Configuring the measuring device
Connecting cable
5
5 5
Connecting the signal cables
Connecting the supply voltage cables
Connection
see Electrical connection
Connection preparations
Connection tools
Context menu
Calling up
Closing
Explanation
Current consumption
Cyclic data transmission

D	
Declaration of Conformity	12
Define access code	138
Degree of protection	242
Density	244
Design fundamentals	
5	241
	241
Designated use	10
Device components	
Device description files	
Device documentation	, 1
Supplementary documentation	8
Device locking, status	
Device master file	TTT
GSD	75
Device name	, , , ,
Sensor	. 18
Transmitter	
Device repair	
Device revision	
Device type ID	
DeviceCare	
Device description file	. 74
Diagnostic behavior	1
F	157
- ,	157
Diagnostic information	
Design, description	
DeviceCare	159
FieldCare	159
J J	154
1 5	156
	164
	164
	158
5	215
Diagnostic message	156
Diagnostics	
Symbols	156
DIP switches	
see Write protection switch	
Direct access	. 58
Direct access code	53
Disabling write protection	137
Display	
see Onsite display	
Display and operating module DKX001	249
Display area	
For operational display	. 51
In the navigation view	
Display values	_
For locking status	141
	224
Document	- *
Function	. 6
	. 0

Symbols
E
E E
Editing view
Input screen 55 Using operating elements 54, 55
EHDEG-certified
Electrical connection
Degree of protection
Measuring device
Operating tools
Via PROFINET network
Via service interface (CDI-RJ45) 69
Via WLAN interface
RSLogix 5000
Web server
WLAN interface
Electromagnetic compatibility
Electronics module
Enabling write protection
Enabling/disabling the keypad lock 61
Endress+Hauser services
Maintenance
Repair
Environment
Mechanical load
Storage temperature
Error messages
see Diagnostic messages
Event list
Event loqbook
Ex approval
Extended order code
Sensor
Transmitter
Exterior cleaning
F
FDA
Field of application
Residual risks
FieldCare
Device description file
Establishing a connection
Function

 Release date
 74

 Version
 74

Firmware history221Flow direction23, 28Flow limit245Food Contact Materials Regulation253Function check88

see Parameters
G Galvanic isolation
H Hardware write protection
Help text
Calling up
Explanation
HistoROM 131
Ι
Identifying the measuring device
Incoming acceptance
Influence 240
Ambient temperature 240 Medium pressure 241
Medium temperature
Information on the document
Inlet runs
Input
Received goods
Inspection check
Connection
Installation
Installation conditions Down pipe
Inlet and outlet runs
Installation dimensions
Mounting location
Orientation
Sensor heating
System pressure
Thermal insulation
Vibrations
Interior cleaning
L

Languages, operation options	248
Line recorder	
Local display	248
Navigation view	52
see Diagnostic message	
see In alarm condition	
see Operational display	
Low flow cut off	236

Μ

Functions

Main electronics module	15
Maintenance tasks	222
Managing the device configuration	131
Manufacturer ID	74
Manufacturing date	, 18
Materials	246

Firmware

Maximum measured error	238
Measured values	
see Process variables	
Measuring and test equipment	222
Measuring device	
Configuration	
Conversion	
Disposal	224
Mounting the sensor	
Preparing for electrical connection	
Preparing for mounting	
Removing	
Repairs	
Structure	. 15
Switch-on	
Measuring principle	228
Measuring range	
Calculation example for gas	230
For gases	229
For liquids	229
Measuring range, recommended	245
Measuring system	228
Mechanical load	243
Medium pressure	
Influence	241
Medium temperature	
Influence	240
Menu	
Diagnostics	215
Setup	
Menus	
For measuring device configuration	. 89
For specific settings	120
Mounting dimensions	
see Installation dimensions	
Mounting location	. 22
Mounting preparations	
Mounting tools	
NT.	
N	
Namenlate	

Nameplate	
Sensor	18
Transmitter	17
Navigation path (navigation view)	52
Navigation view	
In the submenu	52
In the wizard	52
Numeric editor	54
0	

Onsite display
Numeric editor
Text editor
Operable flow range
Operating elements
Operating keys
see Operating elements
Operating menu
Menus, submenus

Structure
Submenus and user roles
Operating philosophy
Operation
Operation options
Operational display
Operational safety
Order code
Orientation (vertical, horizontal) 23
Outlet runs
Output
Output signal 232
Р
Packaging disposal 21

P	
Packaging disposal	21
Parameter	
Changing	
Entering values or text	59
Parameter settings	
Administration (Submenu)	
Advanced setup (Submenu)	
Calculated values (Submenu)	
Communication (Submenu)	
Configuration backup (Submenu)	
Current input	
Current input (Wizard)	
Current input 1 to n (Submenu)	
Current output	
Current output (Wizard)	
Data logging (Submenu)	
Define access code (Wizard)	
Device information (Submenu)	
Diagnostics (Menu)	
Display (Submenu)	
Display (Wizard)	
I/O configuration	
I/O configuration (Submenu)	
Low flow cut off (Wizard)	
Measured variables (Submenu)	
J 11 ()	119
Pulse/frequency/switch output	102
Pulse/frequency/switch output (Wizard)	100
Pulse/frequency/switch output 1 to n (Submenu)	
Relay output	
Relay output 1 to n (Submenu)	
Relay output 1 to n (Wizard)	
Reset access code (Submenu)	
Select medium (Wizard)	
	~ ~ ~
Setup (Menu)	
Status input	
Status input (Submenu)	
	145
Status input 1 to n (Submenu)	
Totalizer 1 to n (Submenu)	
Totalizer handling (Submenu)	
Value current output 1 to n (Submenu)	
value current output I to it (Subinchu)	

Index

Proline	Promass	E 300	PROFINET

Web server (Submenu)	67
WLAN settings (Wizard)	
Zero point adjustment (Submenu)	
Performance characteristics	
Pharmaceutical compatibility	
Post-connection check (checklist)	47
Post-installation check	88
Post-installation check (checklist)	29
Potential equalization	40
Power consumption	237
	237
	254
	245
	244
	248
Process variables	
Calculated	229
Measured	229
Product safety	
-	137

R

Radio approval
Read access
Reading measured values
Recalibration
Reference operating conditions
Registered trademarks
Remedial measures
Calling up
Closing 158
Remote operation
Repair
Repair of a device
Repairs
Notes
Repeatability 239
Replacement
Device components
Requirements for personnel
Response time
Return
Rupture disk
Safety instructions
Triggering pressure
1
S
Safety
Sanitary compatibility 253
Sensor
Mounting
Sensor heating 25
Sensor housing 244
Serial number
Setting the operating language
Settings
Adapting the measuring device to the process

Advanced display configurations	125
Communication interface	
Current input	
Current output	
Device reset	
Device tag	
I/O configuration	
Local display	
Low flow cut off	
Managing the device configuration	
Medium	
Operating language	
Partial filled pipe detection	
Pulse output	
Pulse/frequency/switch output 102,	
Relay output	
j	147
Sensor adjustment	
Simulation	134
Status input	. 97
Switch output	108
System units	90
	123
	147
WLAN	129
Showing data logging	
Signal on alarm	
Software release	
Spare part	
Spare parts	
Special connection instructions	
Special mounting instructions	TT
Sanitary compatibility	26
Standards and guidelines	
Status area	274
	E 1
For operational display	
In the navigation view	
Status signals 156,	
Storage concept	
Storage conditions	
Storage temperature	
Storage temperature range	242
Structure	
Measuring device	
Operating menu	. 49
Submenu	
Administration	134
Advanced setup	121
Calculated values	121
Communication	92
Configuration backup	131
	144
	148
Device information	219
Display	
	216
I/O configuration	
Input values	
	141

Measured variables	14	42
Output values		¥5
Overview		50
Process variables	12	21
Pulse/frequency/switch output 1 to n	14	46
Relay output 1 to n		46
Reset access code	13	34
Sensor adjustment		22
Simulation		34
Status input	9	97
Status input 1 to n	14	¥5
System units	9	90
Totalizer 1 to n	123, 14	43
Totalizer handling	14	47
Value current output 1 to n	14	¥5
Web server		57
Zero point adjustment	12	23
Supply voltage	23	37
Surface roughness		
Switch output	23	34
Symbols		
Controlling data entries	5	55
For communication	5	51
For diagnostic behavior	5	51
For locking		51
For measured variable		51
For measurement channel number		51
For menus		53
For parameters		
For status signal		
For submenu		53
For wizard		53
In the status area of the local display \ldots .		
Input screen		
Operating elements	•••••	54
System design		
Measuring system	22	28
see Measuring device design		
System integration	7	74
System pressure		24
System redundancy S2	8	37

Т

Technical data, overview	8
Temperature range	
Ambient temperature range for display 248	8
Medium temperature	3
Storage temperature	0
Terminal assignment	3
Terminals	8
Tests and certificates	4
Text editor	4
Thermal insulation	5
Tool tip	
see Help text	
Tools	
Electrical connection	0
For mounting	7
Transport	0

Totalizer
Assign process variable
Configuration
Transmitter
Turning the display module
Turning the housing
Transporting the measuring device
Troubleshooting
General
TSE/BSE Certificate of Suitability 253
Turning the display module
Turning the electronics housing
see Turning the transmitter housing
Turning the transmitter housing

U

Use of the measuring device
Borderline cases
Incorrect use
see Designated use
User interface
Current diagnostic event
Previous diagnostic event
User roles
USP Class VI

V

Version data for the device	74
Vibration- and shock-resistance	243
Vibrations	25

W

••	
W@M	222, 223
W@M Device Viewer	16,223
Weight	
SI units	
Transport (notes)	20
US units	246
Wizard	
Current input	96
Current output	
Define access code	133
Display	114
Low flow cut off	118
Partially filled pipe detection	119
Pulse/frequency/switch output	102, 104, 108
Relay output 1 to n	111
Select medium	94
WLAN settings	129
WLAN settings	
Workplace safety	11
Write access	60
Write protection	
Via access code	138
Via write protection switch	139
Write protection switch	139



www.addresses.endress.com

