

Description of Device Parameters

Proline Prosonic Flow P 500

Ultrasonic time-of-flight flowmeter
HART

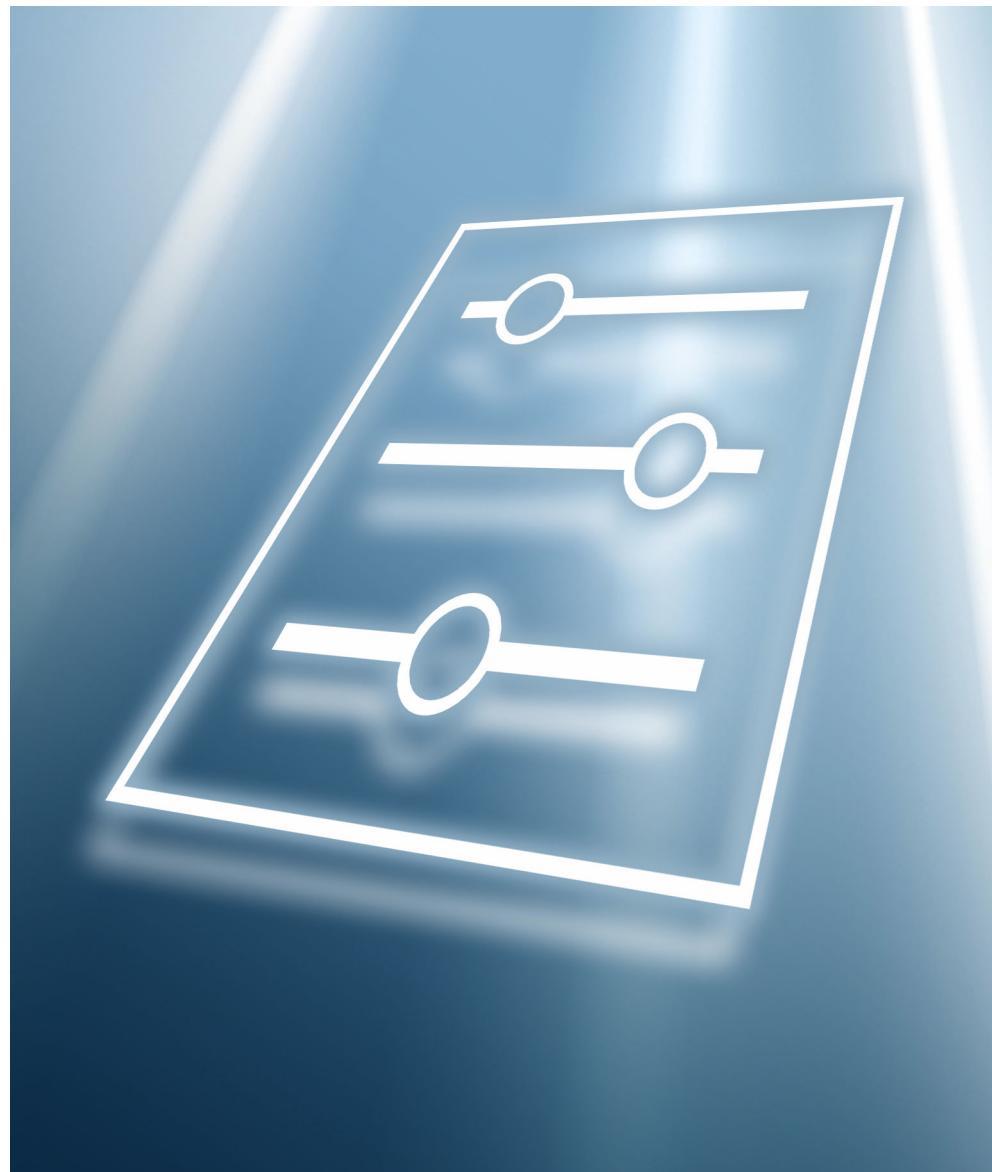


Table of contents

1	About this document	4																																																																																																																	
1.1	Document function	4	3.8.3 "Device information" submenu	186																																																																																																															
1.2	Target group	4	3.8.4 "Main electronic module + I/O module 1" submenu	190																																																																																																															
1.3	Using this document	4	3.8.5 "Sensor electronic module (ISEM)" submenu	191																																																																																																															
	1.3.1 Information on the document structure	4	3.8.6 "I/O module 2" submenu	192																																																																																																															
	1.3.2 Structure of a parameter description ..	6	3.8.7 "I/O module 3" submenu	193																																																																																																															
1.4	Symbols used	6	3.8.8 "Display module" submenu	194																																																																																																															
	1.4.1 Symbols for certain types of information	6	3.8.9 "Data logging" submenu	195																																																																																																															
	1.4.2 Symbols in graphics	7	3.8.10 "Heartbeat" submenu	203																																																																																																															
1.5	Documentation	7	3.8.11 "Simulation" submenu	204																																																																																																															
	1.5.1 Standard documentation	7																																																																																																																	
	1.5.2 Supplementary device-dependent documentation	7																																																																																																																	
2	Overview of the Expert operating menu	8																																																																																																																	
3	Description of Device Parameters ...	11																																																																																																																	
3.1	"System" submenu	13	4	Country-specific factory settings ..	215																																																																																																														
	3.1.1 "Display" submenu	14		4.1 SI units	215		3.1.2 "Configuration backup" submenu	27		4.1.1 System units	215		3.1.3 "Diagnostic handling" submenu	30		4.1.2 Output current span	215		3.1.4 "Administration" submenu	38	3.2	"Sensor" submenu	43		4.2 US units	215		3.2.1 "Measured values" submenu	44		4.2.1 System units	215		3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184
	4.1 SI units	215																																																																																																																	
	3.1.2 "Configuration backup" submenu	27		4.1.1 System units	215		3.1.3 "Diagnostic handling" submenu	30		4.1.2 Output current span	215		3.1.4 "Administration" submenu	38	3.2	"Sensor" submenu	43		4.2 US units	215		3.2.1 "Measured values" submenu	44		4.2.1 System units	215		3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184						
	4.1.1 System units	215																																																																																																																	
	3.1.3 "Diagnostic handling" submenu	30		4.1.2 Output current span	215		3.1.4 "Administration" submenu	38	3.2	"Sensor" submenu	43		4.2 US units	215		3.2.1 "Measured values" submenu	44		4.2.1 System units	215		3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184												
	4.1.2 Output current span	215																																																																																																																	
	3.1.4 "Administration" submenu	38	3.2	"Sensor" submenu	43		4.2 US units	215		3.2.1 "Measured values" submenu	44		4.2.1 System units	215		3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																		
3.2	"Sensor" submenu	43		4.2 US units	215		3.2.1 "Measured values" submenu	44		4.2.1 System units	215		3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																					
	4.2 US units	215																																																																																																																	
	3.2.1 "Measured values" submenu	44		4.2.1 System units	215		3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																											
	4.2.1 System units	215																																																																																																																	
	3.2.2 "System units" submenu	54		4.2.2 Output current span	215		3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																																	
	4.2.2 Output current span	215																																																																																																																	
	3.2.3 "Measuring point" wizard	61	3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216	3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																																							
3.3	"I/O configuration" submenu	83	5	Explanation of abbreviated units ..	216																																																																																																														
3.4	"Input" submenu	85		5.1 SI units	216		3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																																																
	5.1 SI units	216																																																																																																																	
	3.4.1 "Current input 1 to n" submenu	85		5.2 US units	216		3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																																																						
	5.2 US units	216																																																																																																																	
	3.4.2 "Status input 1 to n" submenu	88		5.3 Imperial units	217	3.5	"Output" submenu	90	Index	218		3.5.1 "Current output 1 to n" submenu	90		3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103		3.5.3 "Relay output 1 to n" submenu	122		3.5.4 "Double pulse output" submenu	129	3.6	"Communication" submenu	133		3.6.1 "HART input" submenu	134		3.6.2 "HART output" submenu	140		3.6.3 "Web server" submenu	155		3.6.4 "Diagnostic configuration" submenu ..	159		3.6.5 "WLAN settings" wizard	166	3.7	"Application" submenu	172		3.7.1 "Totalizer 1 to n" submenu	173	3.8	"Diagnostics" submenu	177		3.8.1 "Diagnostic list" submenu	180		3.8.2 "Event logbook" submenu	184																																																												
	5.3 Imperial units	217																																																																																																																	
3.5	"Output" submenu	90	Index	218																																																																																																															
	3.5.1 "Current output 1 to n" submenu	90																																																																																																																	
	3.5.2 "Pulse/frequency/switch output 1 to n" submenu	103																																																																																																																	
	3.5.3 "Relay output 1 to n" submenu	122																																																																																																																	
	3.5.4 "Double pulse output" submenu	129																																																																																																																	
3.6	"Communication" submenu	133																																																																																																																	
	3.6.1 "HART input" submenu	134																																																																																																																	
	3.6.2 "HART output" submenu	140																																																																																																																	
	3.6.3 "Web server" submenu	155																																																																																																																	
	3.6.4 "Diagnostic configuration" submenu ..	159																																																																																																																	
	3.6.5 "WLAN settings" wizard	166																																																																																																																	
3.7	"Application" submenu	172																																																																																																																	
	3.7.1 "Totalizer 1 to n" submenu	173																																																																																																																	
3.8	"Diagnostics" submenu	177																																																																																																																	
	3.8.1 "Diagnostic list" submenu	180																																																																																																																	
	3.8.2 "Event logbook" submenu	184																																																																																																																	

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the **Expert** menu (→ 8), which is displayed when the "**Maintenance**" user role is enabled.

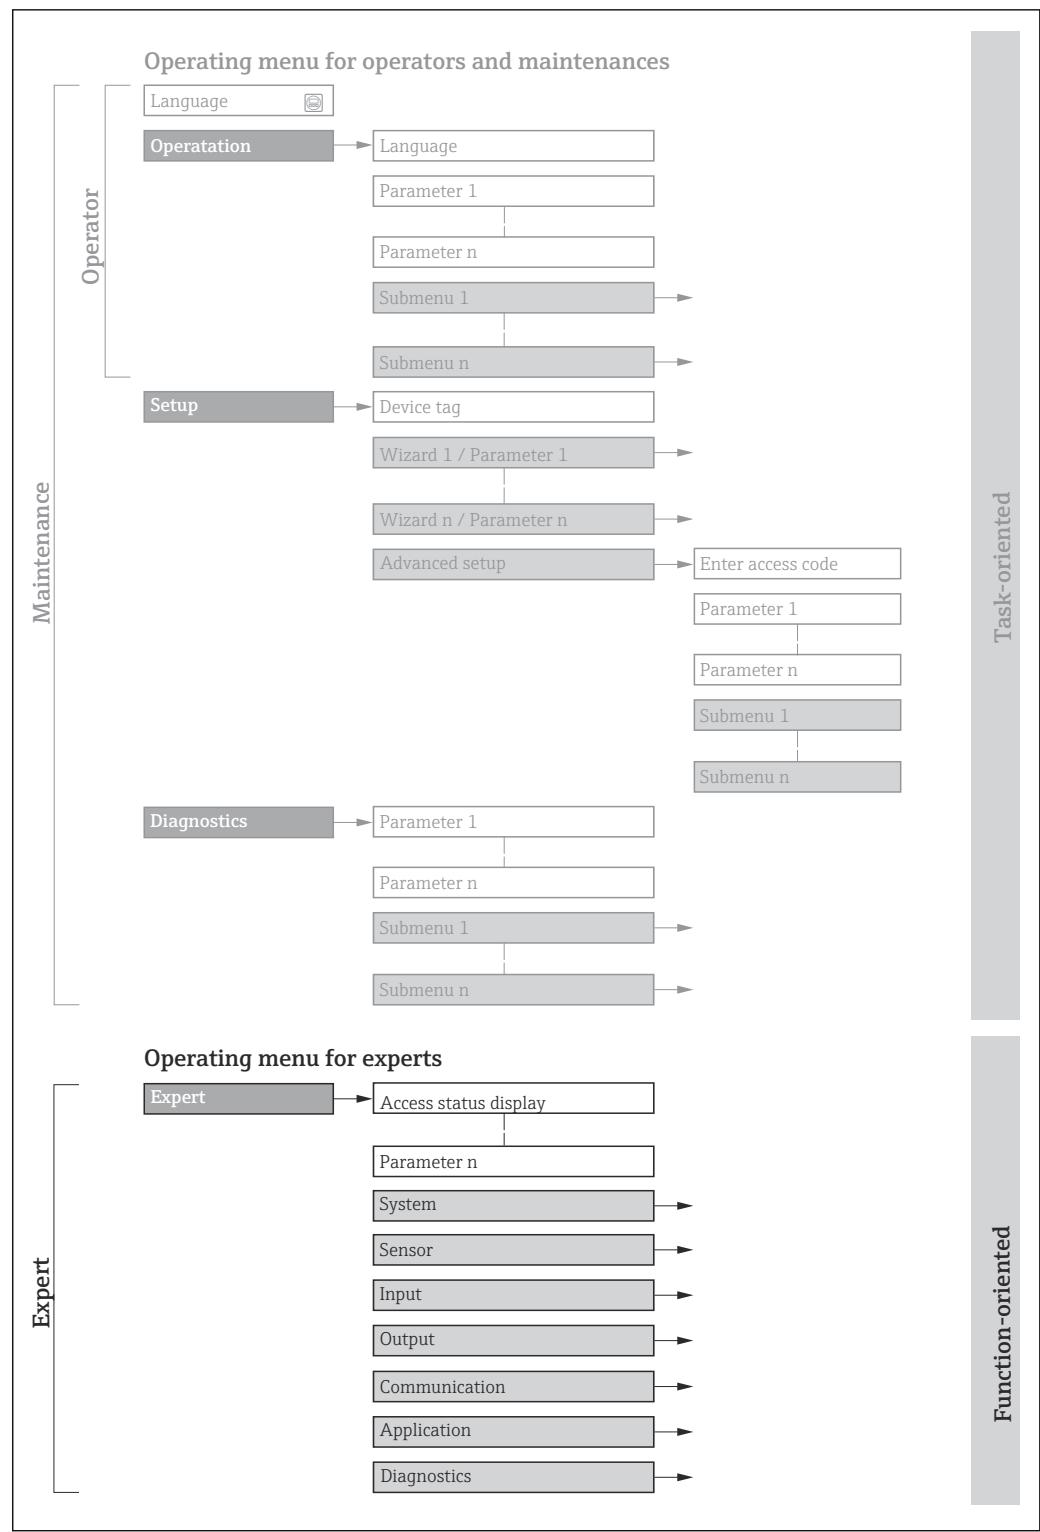

1 Sample graphic for the schematic layout of the operating menu



Additional information regarding:

- The arrangement of the parameters according to the menu structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu with a brief description: Operating Instructions → 7
- Operating concept of the operating menus: Operating Instructions → 7

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name

Write-protected parameter = 

Navigation



Navigation path to the parameter via the local display (direct access code) or web browser
Navigation path to the parameter via the operating tool
The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.

Prerequisite

The parameter is only available under these specific conditions

Description

Description of the parameter function

Selection

List of the individual options for the parameter

- Option 1
- Option 2

User entry

Input range for the parameter

User interface

Display value/data for the parameter

Factory setting

Default setting ex works

Additional information

Additional explanations (e.g. in examples):

- On individual options
- On display values/data
- On the input range
- On the factory setting
- On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

1.5 Documentation

1.5.1 Standard documentation

Operating Instructions

Measuring device	Documentation code
Prosonic Flow P 500	BA02025D

1.5.2 Supplementary device-dependent documentation

Special documentation

Contents	Documentation code
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
FlowDC	SD02660D
Heartbeat Technology	SD02593D
Web server	SD02603D

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

⚡ Expert	
Locking status (0004)	→ ↗ 12
User role (0005)	→ ↗ 13
Enter access code (0003)	→ ↗ 13
Direct access (0106)	→ ↗ 11
▶ System	→ ↗ 13
▶ Display	→ ↗ 14
▶ Configuration backup	→ ↗ 27
▶ Diagnostic handling	→ ↗ 30
▶ Administration	→ ↗ 38
▶ Sensor	→ ↗ 43
▶ Measured values	→ ↗ 44
▶ System units	→ ↗ 54
▶ Measuring point 1	→ ↗ 61
▶ Process parameters	→ ↗ 70
▶ External compensation	→ ↗ 74
▶ Sensor adjustment	→ ↗ 77
▶ Calibration	→ ↗ 81
▶ I/O configuration	→ ↗ 83
I/O module 1 to n terminal numbers (3902-1 to n)	→ ↗ 83
I/O module 1 to n information (3906-1 to n)	→ ↗ 83

I/O module 1 to n type (3901-1 to n)	→ 84
Apply I/O configuration (3907)	→ 84
I/O alteration code (2762)	→ 85
▶ Input	→ 85
▶ Current input 1 to n	→ 85
▶ Status input 1 to n	→ 88
▶ Output	→ 90
▶ Current output 1 to n	→ 90
▶ Pulse/frequency/switch output 1 to n	→ 103
▶ Relay output 1 to n	→ 122
▶ Double pulse output	→ 129
▶ Communication	→ 133
▶ HART input	→ 134
▶ HART output	→ 140
▶ Web server	→ 155
▶ Diagnostic configuration	→ 159
▶ WLAN settings	→ 166
▶ Application	→ 172
Reset all totalizers (2806)	→ 172
▶ Totalizer 1 to n	→ 173
▶ Diagnostics	→ 177
Actual diagnostics (0691)	→ 178
Previous diagnostics (0690)	→ 179
Operating time from restart (0653)	→ 179

Operating time (0652)	→ 180
► Diagnostic list	→ 180
► Event logbook	→ 184
► Device information	→ 186
► Main electronic module + I/O module 1	→ 190
► Sensor electronic module (ISEM)	→ 191
► I/O module 2	→ 192
► I/O module 3	→ 193
► Display module	→ 194
► Data logging	→ 195
► Heartbeat Technology	→ 203
► Simulation	→ 204

3 Description of Device Parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert	
Locking status (0004)	→ 12
User role (0005)	→ 13
Enter access code (0003)	→ 13
Direct access (0106)	→ 11
▶ System	→ 13
▶ Sensor	→ 43
▶ I/O configuration	→ 83
▶ Input	→ 85
▶ Output	→ 90
▶ Communication	→ 133
▶ Application	→ 172
▶ Diagnostics	→ 177

Direct access



Navigation

Expert → Direct access (0106)

Description

Use this function to enter the access code to enable direct access to the desired parameter via the local display. A parameter number is assigned to each parameter for this purpose.


User entry

0 to 65 535

Additional information

User entry

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

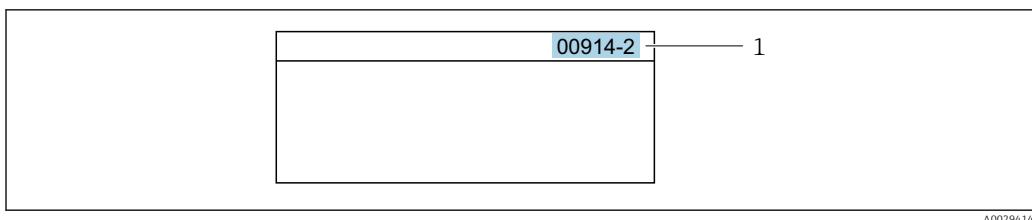

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is opened automatically.
Example: Enter 00914 → **Assign process variable** parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.
Example: Enter 00914-2 → **Assign process variable** parameter

Locking status

Navigation

 Expert → Locking status (0004)

Description

Displays the active write protection.

User interface

- Hardware locked
- SIL locked
- Temporarily locked

Additional information

User interface

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device →  7

Selection

Options	Description
None	The access status displayed in the Access status parameter (→  13) applies . Only appears on local display.
Hardware locked (priority 1)	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) .
SIL locked (priority 2)	The SIL mode is enabled. This locks write access to the parameters (e.g. via local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

User role

Navigation	  Expert → User role (0005)
Description	Displays the access authorization to the parameters via the local display, Web browser or operating tool.
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance
Factory setting	Maintenance
Additional information	<p><i>Description</i></p> <p> Access authorization can be modified via the Enter access code parameter (→ 13).</p> <p> If additional write protection is active, this restricts the current access authorization even further.</p> <p><i>User interface</i></p> <p> Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device → 7</p>

Enter access code

Navigation	  Expert → Ent. access code (0003)
Description	Use this function to enter the user-specific release code to remove parameter write protection.
User entry	Max. 16-digit character string comprising numbers, letters and special characters

3.1 "System" submenu

<i>Navigation</i>	  Expert → System
<hr/>	
▶ System	
▶ Display	→ 14
▶ Configuration backup	→ 27
▶ Diagnostic handling	→ 30
▶ Administration	→ 38

3.1.1 "Display" submenu

Navigation

Expert → System → Display

► Display	
Display language (0104)	→ 15
Format display (0098)	→ 15
Value 1 display (0107)	→ 18
0% bargraph value 1 (0123)	→ 18
100% bargraph value 1 (0125)	→ 19
Decimal places 1 (0095)	→ 19
Value 2 display (0108)	→ 20
Decimal places 2 (0117)	→ 21
Value 3 display (0110)	→ 21
0% bargraph value 3 (0124)	→ 22
100% bargraph value 3 (0126)	→ 22
Decimal places 3 (0118)	→ 22
Value 4 display (0109)	→ 23
Decimal places 4 (0119)	→ 23
Display interval (0096)	→ 24
Display damping (0094)	→ 24
Header (0097)	→ 25
Header text (0112)	→ 25
Separator (0101)	→ 26
Contrast display (0105)	→ 26
Backlight (0111)	→ 27

Display language

Navigation  Expert → System → Display → Display language (0104)

Prerequisite A local display is provided.

Description Use this function to select the configured language on the local display.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- Bahasa Indonesia
- tiếng Việt (Vietnamese)
- čeština (Czech)

Factory setting English (alternatively, the ordered language is preset in the device)

Format display

Navigation  Expert → System → Display → Format display (0098)

Prerequisite A local display is provided.

Description Use this function to select how the measured value is shown on the local display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting 1 value, max. size

Additional information*Description*

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.



- The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 23) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured via the **Display interval** parameter (→ 24).


Possible measured values shown on the local display:

"1 value, max. size" option




A0016529

"1 bargraph + 1 value" option

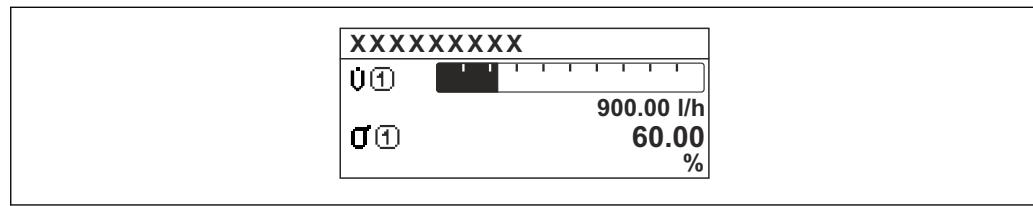

A0016530


"2 values" option

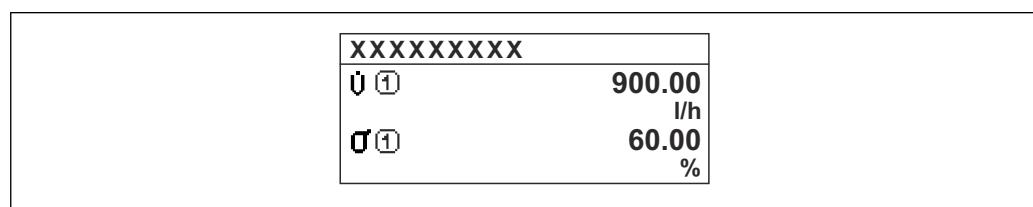

A0016531




"1 value large + 2 values" option

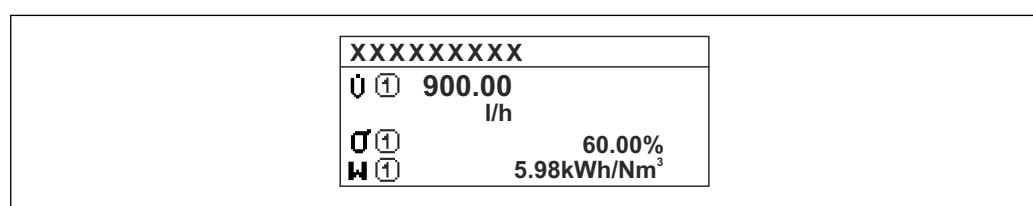

A0016532

"4 values" option

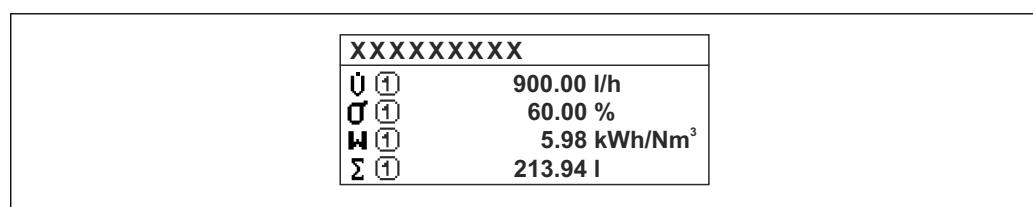

A0016533

Value 1 display

Navigation	Expert → System → Display → Value 1 display (0107)
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values shown on the local display.
Selection	<ul style="list-style-type: none">▪ Volume flow▪ Mass flow▪ Flow velocity▪ Sound velocity *▪ Signal strength *▪ Signal to noise ratio *▪ Turbulence▪ Electronics temperature▪ Acceptance rate *▪ Totalizer 1▪ Totalizer 2▪ Totalizer 3▪ Current output 1 *▪ Current output 2 *▪ Current output 3 *▪ Current output 4 *
Factory setting	Volume flow
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Dependency</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 54).</p>

0% bargraph value 1

Navigation	Expert → System → Display → 0% bargraph 1 (0123)
Prerequisite	A local display is provided.
Description	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Country-dependent

* Visibility depends on order options or device settings

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

100% bargraph value 1**Navigation**

Expert → System → Display → 100% bargraph 1 (0125)

Prerequisite

A local display is provided.

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

Decimal places 1**Navigation**

Expert → System → Display → Decimal places 1 (0095)

Prerequisite

A measured value is defined in the **Value 1 display** parameter (→ 18).

Description

Use this function to select the number of decimal places for measured value 1.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 2 display**Navigation**

Expert → System → Display → Value 2 display (0108)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Volume flow
- Mass flow
- Flow velocity
- Sound velocity *
- Turbulence *
- Signal strength *
- Signal to noise ratio *
- Acceptance rate *
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Current output 1
- Current output 2 *
- Current output 3 *
- Current output 4 *

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Dependency

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

* Visibility depends on order options or device settings

Decimal places 2

Navigation Expert → System → Display → Decimal places 2 (0117)

Prerequisite A measured value is specified in the **Value 2 display** parameter (→ [20](#)).

Description Use this function to select the number of decimal places for measured value 2.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting X.XX

Additional information *Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 3 display

Navigation Expert → System → Display → Value 3 display (0110)

Prerequisite A local display is provided.

Description Use this function to select one of the measured values shown on the local display.

Selection For the picklist, see the **Value 2 display** parameter (→ [20](#))

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ [15](#)) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [54](#)).

0% bargraph value 3



Navigation

Expert → System → Display → 0% bargraph 3 (0124)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 21).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

Country-dependent

Additional information

Description

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

100% bargraph value 3



Navigation

Expert → System → Display → 100% bargraph 3 (0126)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 21).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

0

Additional information

Description

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

Decimal places 3



Navigation

Expert → System → Display → Decimal places 3 (0118)

Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 21).

Description Use this function to select the number of decimal places for measured value 3.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting X.XX

Additional information *Description*

 This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 4 display



Navigation  Expert → System → Display → Value 4 display (0109)

Prerequisite A local display is provided.

Description Use this function to select one of the measured values shown on the local display.

Selection For the picklist, see the **Value 2 display** parameter (→  20)

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→  15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→  54).

Decimal places 4



Navigation  Expert → System → Display → Decimal places 4 (0119)

Prerequisite A measured value is specified in the **Value 4 display** parameter (→  23).

Description Use this function to select the number of decimal places for measured value 4.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Display interval

Navigation

Expert → System → Display → Display interval (0096)

Prerequisite

A local display is provided.

Description

Use this function to enter the length of time the measured values are displayed if the values alternate on the display.

User entry

1 to 10 s

Factory setting

5 s

Additional information*Description*

This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.



- The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 23) are used to specify which measured values are shown on the local display.
- The display format of the displayed measured values is specified using the **Format display** parameter (→ 15).

Display damping

**Navigation**

Expert → System → Display → Display damping (0094)

Prerequisite

A local display is provided.

Description

Use this function to enter a time constant for the reaction time of the local display to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

0.0 s

Additional information*User entry*

Use this function to enter a time constant (PT1 element¹⁾) for display damping:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.



Damping is switched off if **0** is entered (factory setting).

Header**Navigation**

Expert → System → Display → Header (0097)

Prerequisite

A local display is provided.

Description

Use this function to select the contents of the header of the local display.

Selection


- Device tag
- Free text

Factory setting

Device tag

Additional information*Description*

The header text only appears during normal operation.

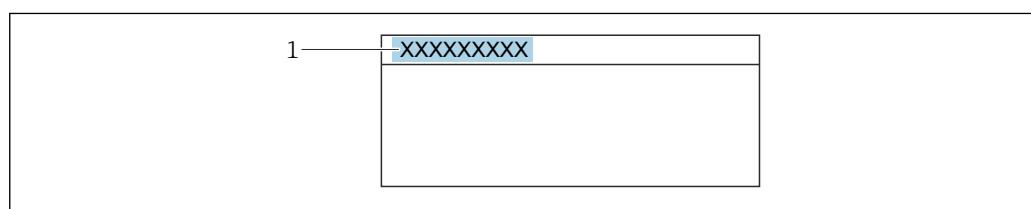

A0029422

1 Position of the header text on the display

Selection

- Device tag

Is defined in the **Device tag** parameter (→ 187).

- Free text

Is defined in the **Header text** parameter (→ 25).

Header text**Navigation**

Expert → System → Display → Header text (0112)

Prerequisite

In the **Header** parameter (→ 25), the **Free text** option is selected.

Description

Use this function to enter a customer-specific text for the header of the local display.


1) proportional transmission behavior with first order delay

User entry Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting -----

Additional information *Description*

The header text only appears during normal operation.

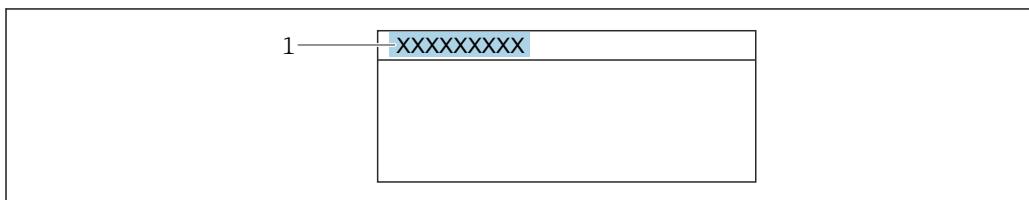

A0029422

1 Position of the header text on the display

User entry

The number of characters displayed depends on the characters used.

Separator



Navigation Expert → System → Display → Separator (0101)

Prerequisite A local display is provided.

Description Use this function to select the decimal separator.

Selection
■ . (point)
■ , (comma)

Factory setting . (point)

Contrast display

Navigation Expert → System → Display → Contrast display (0105)

Prerequisite A local display is provided.

Description Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

User entry 20 to 80 %

Factory setting Depends on the display

Backlight

Navigation

Expert → System → Display → Backlight (0111)

Prerequisite

One of the following conditions is met:

- Order code for "Display; operation", option **F** "4-line, illum.; touch control"
- Order code for "Display; operation", option **G** "4-line, illum.; touch control +WLAN"

Description

Use this function to switch the backlight of the local display on and off.

Selection

- Disable
- Enable

Factory setting

Enable

3.1.2 "Configuration backup" submenu

Navigation

Expert → System → Config. backup

Configuration backup	
	Operating time (0652) → 27
	Last backup (2757) → 28
	Configuration management (2758) → 28
	Backup state (2759) → 29
	Comparison result (2760) → 29

Operating time

Navigation

Expert → System → Config. backup → Operating time (0652)

Description

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

User interface

The maximum number of days is 9999, which is equivalent to 27 years.

Last backup**Navigation**
 Expert → System → Config. backup → Last backup (2757)
Description

Displays the time since a backup copy of the data was last saved to the device memory.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Configuration management**Navigation**
 Expert → System → Config. backup → Config. managem. (2758)
Description

Use this function to select an action to save the data to the device memory.

Selection

- Cancel
- Execute backup
- Restore *
- Compare *
- Clear backup data

Factory setting

Cancel

Additional information

Selection

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device. The following message appears on local display: Backup active, please wait!
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. The following message appears on local display: Restore active! Do not interrupt power supply!
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. The following message appears on local display: Comparing files The result can be viewed in Comparison result parameter.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device. The following message appears on local display: Deleting file

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

* Visibility depends on order options or device settings

Backup state

Navigation  Expert → System → Config. backup → Backup state (2759)

Description Displays the status of the data backup process.

User interface

- None
- Backup in progress
- Restoring in progress
- Delete in progress
- Compare in progress
- Restoring failed
- Backup failed

Factory setting None

Comparison result

Navigation  Expert → System → Config. backup → Compar. result (2760)

Description Displays the last result of the comparison of the data records in the device memory and in the HistoROM.

User interface

- Settings identical
- Settings not identical
- No backup available
- Backup settings corrupt
- Check not done
- Dataset incompatible

Factory setting Check not done

Additional information *Description*

 The comparison is started via the **Compare** option in the **Configuration management** parameter (→  28).

Selection

Options	Description
Settings identical	The current device configuration of the HistoROM is identical to the backup copy in the device memory. If the transmitter configuration of another device has been transmitted to the device via HistoROM in the Configuration management parameter, the current device configuration of the HistoROM is only partially identical to the backup copy in the device memory: The settings for the transmitter are not identical.
Settings not identical	The current device configuration of the HistoROM is not identical to the backup copy in the device memory.
No backup available	There is no backup copy of the device configuration of the HistoROM in the device memory.
Backup settings corrupt	The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the device memory.

Options	Description
Check not done	The device configuration of the HistoROM has not yet been compared to the backup copy in the device memory.
Dataset incompatible	The backup copy in the device memory is not compatible with the device.


HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.1.3 "Diagnostic handling" submenu

Navigation

Expert → System → Diagn. handling

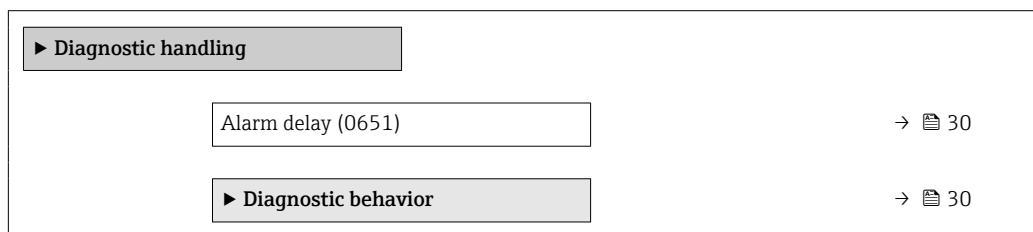

Alarm delay



Navigation

Expert → System → Diagn. handling → Alarm delay (0651)

Description

Use this function to enter the time interval until the device generates a diagnostic message.

The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting

0 s

Additional information

Result

This setting affects the following diagnostic messages:

- 832 Electronics temperature too high
- 833 Electronics temperature too low
- △S840 Sensor range
- △S870 Measuring inaccuracy increased

"Diagnostic behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu (→ 30).

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Options	Description
Alarm	The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (→ 184) (Event list submenu (→ 185)) and is not displayed in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

 For a list of all the diagnostic events, see the Operating Instructions for the device
→ 7

Navigation

  Expert → System → Diagn. handling → Diagn. behavior

► Diagnostic behavior

- Assign behavior of diagnostic no. 160 (0776)** → 32
- Assign behavior of diagnostic no. 302 (0742)** → 32
- Assign behavior of diagnostic no. 441 (0657)** → 33
- Assign behavior of diagnostic no. 442 (0658)** → 33
- Assign behavior of diagnostic no. 443 (0659)** → 33
- Assign behavior of diagnostic no. 444 (0740)** → 34
- Assign behavior of diagnostic no. 543 (0643)** → 34
- Assign behavior of diagnostic no. 832 (0675)** → 35
- Assign behavior of diagnostic no. 833 (0676)** → 35
- Assign behavior of diagnostic no. 840 (0680)** → 35
- Assign behavior of diagnostic no. 842 (0638)** → 36

Assign behavior of diagnostic no. 870 (0726)	→ 36
Assign behavior of diagnostic no. 930 (0639)	→ 37
Assign behavior of diagnostic no. 931 (0640)	→ 37

Assign behavior of diagnostic no. 160 (Signal path switched off)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 160 (0776)

Description

Use this function to change the diagnostic behavior of the **160 Signal path switched off** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 302 (Device verification active)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 302 (0742)

Description

Use this function to change the diagnostic behavior of the **302 Device verification active** diagnostic message.

Selection

- Off
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 441 (Current output 1 to n)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 441 (0657)
Description	Use this function to change the diagnostic behavior of the 441 Current output 1 to n diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	<i>Selection</i> Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 442 (Frequency output 1 to n)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 442 (0658)
Prerequisite	The measuring device has a pulse/frequency/switch output.
Description	Use this function to change the diagnostic behavior of the 442 Frequency output 1 to n diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 443 (Pulse output)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 443 (0659)
Prerequisite	The measuring device has a pulse/frequency/switch output.
Description	Use this function to change the diagnostic behavior of the 443 Pulse output diagnostic message.

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
------------------	----------------------------------------------------------------------------------------------------------------------

Factory setting	Warning
------------------------	---------

Additional information	<i>Selection</i>
	 Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 444 (Current input 1 to n)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 444 (0740)
-------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------

Prerequisite	The device has one current input.
---------------------	-----------------------------------

Description	Use this function to change the diagnostic behavior of the 444 Current input 1 to n diagnostic message.
--------------------	----------------------------------------------------------------------------------------------------------------

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
------------------	----------------------------------------------------------------------------------------------------------------------

Factory setting	Warning
------------------------	---------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

Assign behavior of diagnostic no. 543 (Double pulse output)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 543 (0643)
-------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to change the diagnostic behavior of the 543 Double pulse output diagnostic message.
--------------------	---------------------------------------------------------------------------------------------------------------

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
------------------	----------------------------------------------------------------------------------------------------------------------

Factory setting	Warning
------------------------	---------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

Assign behavior of diagnostic no. 832 (Electronics temperature too high)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832 (0675)
Description	Use this function to change the diagnostic behavior of the 832 Electronics temperature too high diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 833 (Electronics temperature too low)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833 (0676)
Description	Use this function to change the diagnostic behavior of the 833 Electronics temperature too low diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	<i>Selection</i> Detailed description of the options available for selection: → 31

Assign behavior of diagnostic no. 840 (Sensor range)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 840 (0680)
Description	Use this function to change the diagnostic behavior of the 840 Sensor range diagnostic message.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning

Additional informationDetailed description of the options available for selection: → [31](#)**Assign behavior of diagnostic no. 842 (Process limit)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 842 (0638)

DescriptionUse this function to change the diagnostic behavior of the **842 Process limit** diagnostic message.**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Off

Additional informationDetailed description of the options available for selection: → [31](#)**Assign behavior of diagnostic no. 870 (Measuring inaccuracy increased)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 870 (0726)

DescriptionUse this function to change the diagnostic behavior of the **870 Measuring inaccuracy increased** diagnostic message.**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information*Selection*Detailed description of the options available for selection: → [31](#)**Assign behavior of diagnostic no. 881 (Sensor signal path 1 to n)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 881 (0724)

DescriptionUse this function to change the diagnostic behavior of the **881 Sensor signal path 1 to n** diagnostic message.

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
------------------	----------------------------------------------------------------------------------------------------------------------

Factory setting	Warning
------------------------	---------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------

Assign behavior of diagnostic no. 930 (Process fluid)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 930 (0639)
-------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to change the diagnostic behavior of the △S930 Process fluid diagnostic message.
--------------------	-----------------------------------------------------------------------------------------------------------

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
------------------	----------------------------------------------------------------------------------------------------------------------

Factory setting	Alarm
------------------------	-------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

Assign behavior of diagnostic no. 931 (Process fluid)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 931 (0640)
-------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to change the diagnostic behavior of the △S931 Process fluid diagnostic message.
--------------------	-----------------------------------------------------------------------------------------------------------

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
------------------	----------------------------------------------------------------------------------------------------------------------

Factory setting	Alarm
------------------------	-------

Additional information	 Detailed description of the options available for selection: → 31
-------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

Assign behavior of diagnostic no. 953 (Asymmetry noise signal too high path 1 to n)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 953 (0636)

Description

Use this function to change the diagnostic behavior of the **△M953 Asymmetry noise signal too high path 1 to n** diagnostic message.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

Detailed description of the options available for selection: → [31](#)

3.1.4 "Administration" submenu**Navigation**

Expert → System → Administration

▶ Administration	
▶ Define access code	→ 38
▶ Reset access code	→ 40
Device reset (0000)	→ 41
Transmitter identifier (2765)	→ 41
Activate SW option (0029)	→ 42
Software option overview (0015)	→ 43

"Define access code" wizard

The **Define access code** wizard (→ [38](#)) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Define access code** parameter can be found directly in the **Administration** submenu. There is no **Confirm access code** parameter if the device is operated via the operating tool.

Navigation

Expert → System → Administration → Def. access code

▶ Define access code	
----------------------	--

Define access code	→  39
Confirm access code	→  39

Define access code**Navigation**

  Expert → System → Administration → Def. access code → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the device configuration against any inadvertent modifications via the local display, Web browser, FieldCare or DeviceCare (via CDI-RJ45 service interface).

User entry

Max. 16-digit character string comprising numbers, letters and special characters

Additional information*Description*

The write protection affects all parameters in the document marked with the  symbol.

On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

 Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  13).

 If you lose the access code, please contact your Endress+Hauser sales organization.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Confirm access code**Navigation**


  Expert → System → Administration → Def. access code → Confirm code

Description

Enter the defined release code a second time to confirm the release code.

User entry

Max. 16-digit character string comprising numbers, letters and special characters

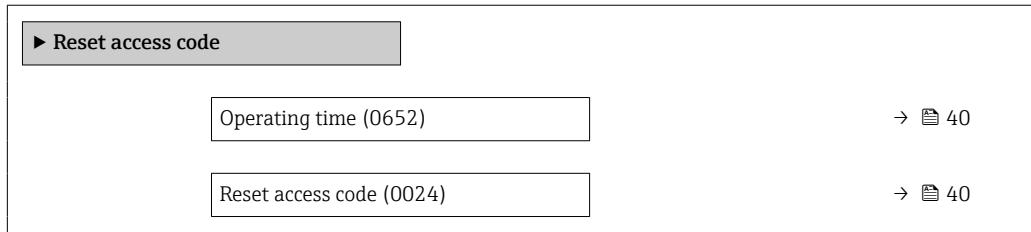"Reset access code" submenu**Navigation** Expert → System → Administration → Reset acc. code

Operating time**Navigation** Expert → System → Administration → Reset acc. code → Operating time (0652)**Description**

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

Reset access code**Navigation** Expert → System → Administration → Reset acc. code → Reset acc. code (0024)**Description**

Use this function to enter a reset code to reset the user-specific release code to the factory setting.

User entry

Character string comprising numbers, letters and special characters

Factory setting

0x00

Additional information*Description*

 For a reset code, contact your Endress+Hauser service organization.

User entry

The reset code can only be entered via:

- Web browser
- DeviceCare, FieldCare (via interface CDI RJ45)
- Fieldbus

Additional parameters in the "Administration" submenu

Device reset



Navigation Expert → System → Administration → Device reset (0000)

Description Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

- Selection**
- Cancel
 - To delivery settings
 - Restart device

Factory setting Cancel

Additional information *Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Restore S-DAT backup	Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT. This option is displayed only in an alarm condition.

Transmitter identifier



Navigation Expert → System → Administration → Transm. identif. (2765)

Description Select transmitter identifier.

- User interface**
- Unknown
 - 500
 - 300

Factory setting 500

Activate SW option**Navigation**

Expert → System → Administration → Activate SW opt. (0029)

Description

Use this function to enter an activation code to enable an additional, ordered software option.

User entry

Max. 10-digit string consisting of numbers.

Factory setting

Depends on the software option ordered

Additional information*Description*

If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.

User entry

i To activate a software option subsequently, please contact your Endress+Hauser sales organization.

NOTE!

The activation code is linked to the serial number of the measuring device and varies according to the device and software option.

If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.

- Before you enter a new activation code, make a note of the current activation code .
- Enter the new activation code provided by Endress+Hauser when the new software option was ordered.
- Once the activation code has been entered, check if the new software option is displayed in the **Software option overview** parameter (→ 43).
 - ↳ The new software option is active if it is displayed.
 - ↳ If the new software option is not displayed or all software options have been deleted, the code entered was either incorrect or invalid.
- If the code entered is incorrect or invalid, enter the old activation code .
- Have your Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.

Example for a software option

Order code for "Application package", option **EA** "Extended HistoROM"

i The software options currently enabled are displayed in the **Software option overview** parameter (→ 43).

Web browser

i Once a software option has been activated, the page must be loaded again in the Web browser.

Software option overview

Navigation	 Expert → System → Administration → SW option overv. (0015)
Description	Displays all the software options that are enabled in the device.
User interface	<ul style="list-style-type: none"> ▪ Extended HistoROM ▪ SIL ▪ Heartbeat Verification ▪ FlowDC - Flow disturbance compensation option ▪ Heartbeat Monitoring
Additional information	<p><i>Description</i></p> <p>Displays all the options that are available if ordered by the customer.</p> <p><i>"Extended HistoROM" option</i> Order code for "Application package", option EA "Extended HistoROM"</p> <p><i>"SIL" option</i> Order code for "Additional approval", option LA "SIL"</p> <p><i>"Heartbeat Verification" option and "Heartbeat Monitoring" option</i> Order code for "Application package", option EB "Heartbeat Verification + Monitoring"</p> <p><i>"Flow disturbance compensation" option</i> This option is available by default if 2 sensor pairs have been ordered.</p>

3.2 "Sensor" submenu

Navigation

 Expert → Sensor

 Sensor	
 Measured values	→  44
 System units	→  54
 Measuring point 1	→  61
 Process parameters	→  70
 External compensation	→  74
 Sensor adjustment	→  77
 Calibration	→  81

3.2.1 "Measured values" submenu

Navigation

Expert → Sensor → Measured val.

► Measured values	
► Process variables	→ 44
► System values	→ 45
► Totalizer	→ 47
► Input values	→ 49
► Output values	→ 50

"Process variables" submenu

Navigation

Expert → Sensor → Measured val. → Process variab.

► Process variables	
Volume flow (1838)	→ 44
Mass flow (1847)	→ 45
Flow velocity (1852)	→ 45
Sound velocity (1850)	→ 45

Volume flow

Navigation

Expert → Sensor → Measured val. → Process variab. → Volume flow (1838)

Description

Displays the volume flow that is currently measured.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Volume flow unit** parameter (→ 55)

Mass flow

Navigation  Expert → Sensor → Measured val. → Process variab. → Mass flow (1847)

Description Displays the mass flow that is currently calculated.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Mass flow unit** parameter (→ [57](#))

Flow velocity

Navigation  Expert → Sensor → Measured val. → Process variab. → Flow velocity (1852)

Description Displays the average flow velocity that is currently calculated.

User interface Signed floating-point number

Sound velocity

Navigation  Expert → Sensor → Measured val. → Process variab. → Sound velocity (1850)

Description Displays the sound velocity that is currently measured.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Velocity unit** parameter (→ [58](#))

"System values" submenu

Navigation  Expert → Sensor → Measured val. → System values

 **System values**

Signal strength (2914)

→ [46](#)

Signal to noise ratio (2917)

→ [46](#)

Acceptance rate (2912)	→ 46
Turbulence (2907)	→ 47

Signal strength

Navigation Expert → Sensor → Measured val. → System values → Signal strength (2914)

Description Displays the current signal strength.

User interface Signed floating-point number

Additional information *Description*

A drop in the signal strength over time can be an indicator of process changes, such as the development of deposits in the measuring pipe at the measuring point. This can only be quantified by performing a direct process comparison with different deposit layer thicknesses and associated signal strengths.

Signal to noise ratio

Navigation Expert → Sensor → Measured val. → System values → SNR (2917)

Description Displays the current signal-to-noise ratio.

User interface Signed floating-point number

Additional information *Description*

A low value or a drop in the signal to noise ratio over time is an indicator of poor signal quality.

Acceptance rate

Navigation Expert → Sensor → Measured val. → System values → Acceptance rate (2912)

Description Displays the ratio of the number of ultrasonic signals accepted for flow calculation and the total number of ultrasonic signals emitted.

Multipath measuring devices only: Displays the minimum of all acceptance rates measured.


User interface 0 to 100 %

Turbulence

Navigation	Expert → Sensor → Measured val. → System values → Turbulence (2907)
Description	Displays the current turbulence.
User interface	Signed floating-point number
Additional information	<p><i>Description</i></p> <p>A high turbulence value indicates a disturbance in the flow profile.</p>

"Totalizer" submenu

Navigation Expert → Sensor → Measured val. → Totalizer

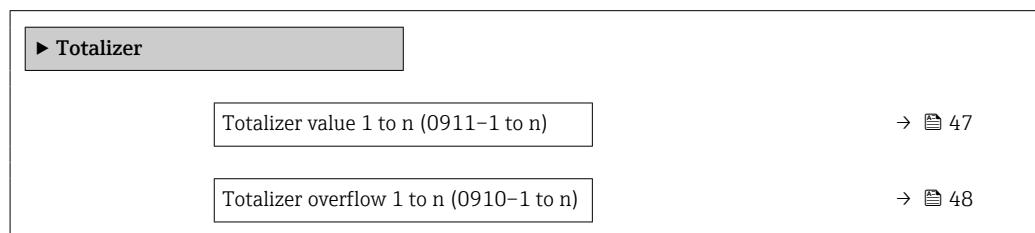

Totalizer value 1 to n

Navigation	Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to n (0911-1 to n)
Prerequisite	One of the following options is selected in the Assign process variable parameter (→ 173) of the Totalizer 1 to n submenu: ■ Volume flow ■ Mass flow
Description	Displays the current totalizer reading.
User interface	Signed floating-point number

Additional information*Description*

As it is only possible to display a maximum of 7 digits in the operating tool, the current counter value is the sum of the totalizer value and the overflow value from the **Totalizer overflow 1 to n** parameter if the display range is exceeded.

-  In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter (→ 176).

User interface

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Totalizer operation mode** parameter (→ 175).

-  The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 174).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer value 1** parameter: 1968457 m³
- Value in the **Totalizer overflow 1** parameter: $1 \cdot 10^7$ (1 overflow) = 10 000 000 m³
- Current totalizer reading: 11 968 457 m³

Totalizer overflow 1 to n**Navigation**

Expert → Sensor → Measured val. → Totalizer → Tot. overflow 1 to n (0910–1 to n)

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 173) of the **Totalizer 1 to n** submenu:

- Volume flow
- Mass flow

Description

Displays the current totalizer overflow.

User interface

Integer with sign

Additional information*Description*

If the current totalizer reading exceeds 7 digits, which is the maximum value range that can be displayed by the operating tool, the value above this range is output as an overflow. The current totalizer value is therefore the sum of the overflow value and the totalizer value from the **Totalizer value 1 to n** parameter.

User interface

-  The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 174).


Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:


- Value in the **Totalizer value 1** parameter: 1968457 m³
- Value in the **Totalizer overflow 1** parameter: $2 \cdot 10^7$ (2 overflows) = 20 000 000 [m³]
- Current totalizer reading: 21 968 457 m³

"Input values" submenu*Navigation*

Expert → Sensor → Measured val. → Input values

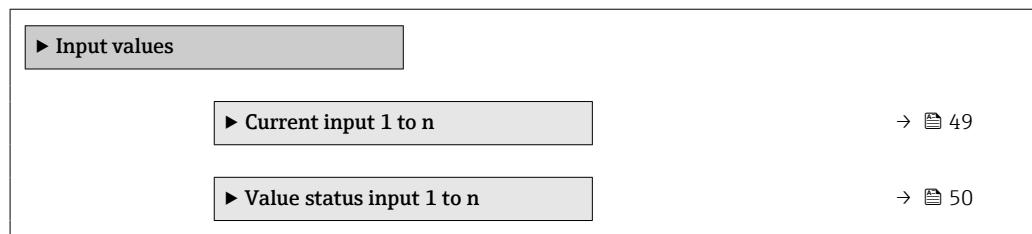**"Current input 1 to n" submenu***Navigation*

Expert → Sensor → Measured val. → Input values → Current input 1 to n

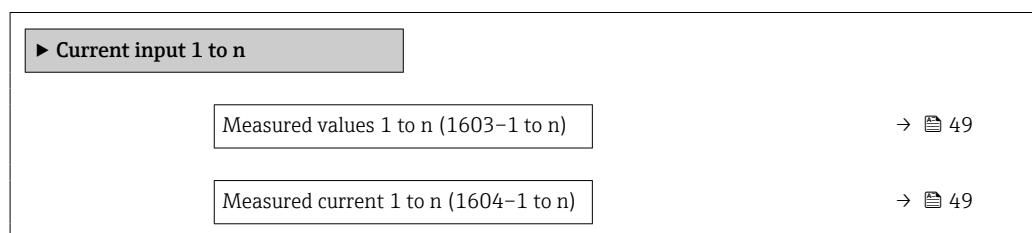

Measured values 1 to n

Navigation

 Expert → Sensor → Measured val. → Input values → Current input 1 to n
 → Measured val. 1 to n (1603-1 to n)
Description

Displays the current input value.

User interface

Signed floating-point number

Additional information*Dependency*

 The unit is taken from the **Pressure unit** parameter

Measured current 1 to n

Navigation

 Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measur.
 curr. 1 to n (1604-1 to n)
Description


Displays the current value of the current input.

User interface

0 to 22.5 mA

*"Value status input 1 to n" submenu**Navigation*

Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n

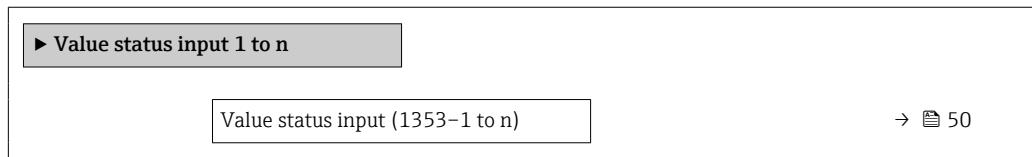**Value status input****Navigation**

Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n
→ Val.stat.inp. (1353-1 to n)

Description


Displays the current input signal level.

User interface


- High
- Low

*"Output values" submenu**Navigation*

Expert → Sensor → Measured val. → Output values

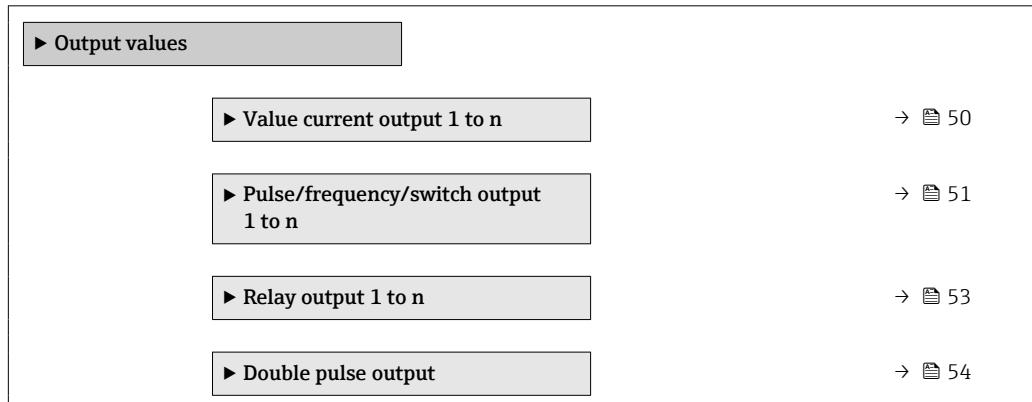*"Value current output 1 to n" submenu**Navigation*

Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n

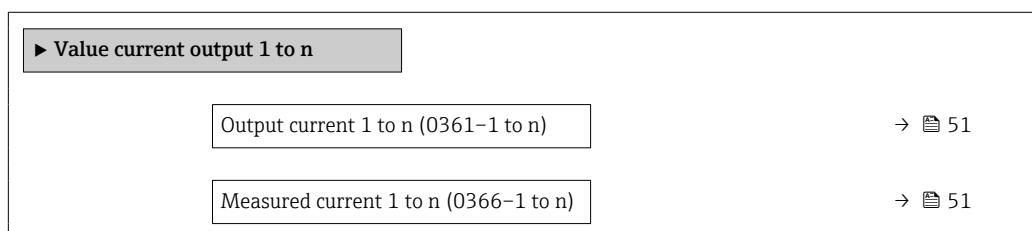

Output current 1 to n

Navigation	  Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Output curr. 1 to n (0361-1 to n)
Description	Displays the current value currently calculated for the current output.
User interface	0 to 22.5 mA

Measured current 1 to n

Navigation	  Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Measur. curr. 1 to n (0366-1 to n)
Description	Displays the actual measured value of the output current.
User interface	0 to 30 mA

"Pulse/frequency/switch output 1 to n" submenu

Navigation   Expert → Sensor → Measured val. → Output values → PFS output 1 to n

Pulse/frequency/switch output 1 to n	
Output frequency 1 to n (0471-1 to n)	→  51
Pulse output 1 to n (0456-1 to n)	→  52
Switch status 1 to n (0461-1 to n)	→  52

Output frequency 1 to n

Navigation	  Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Output freq. 1 to n (0471-1 to n)
Prerequisite	In the Operating mode parameter (→  105), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Pulse output 1 to n

Navigation

  Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Pulse output 1 to n (0456-1 to n)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→  105) parameter.

Description

Displays the pulse frequency currently output.


User interface

Positive floating-point number

Additional information

Description

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

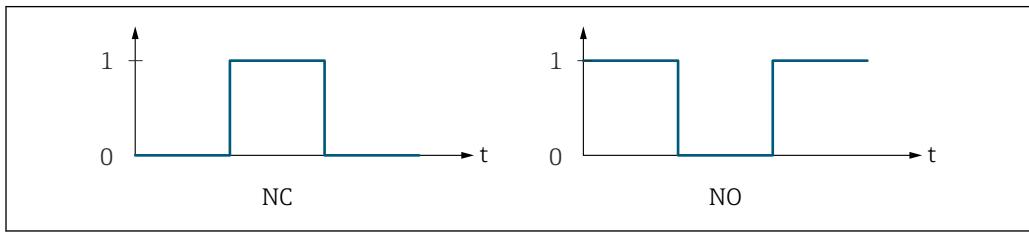

0 Non-conductive
 1 Conductive
 NC NC contact (normally closed)
 NO NO contact (normally open)

The output behavior can be reversed via the **Invert output signal** parameter (→  122) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→  109)) can be configured.

Switch status 1 to n

Navigation

  Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Switch status 1 to n (0461-1 to n)

Prerequisite

The **Switch** option is selected in the **Operating mode** parameter (→  105).

Description

Displays the current switch status of the status output.

User interface


- Open
- Closed

Additional information*User interface*

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

*"Relay output 1 to n" submenu**Navigation*

 Expert → Sensor → Measured val. → Output values → Relay output 1 to n

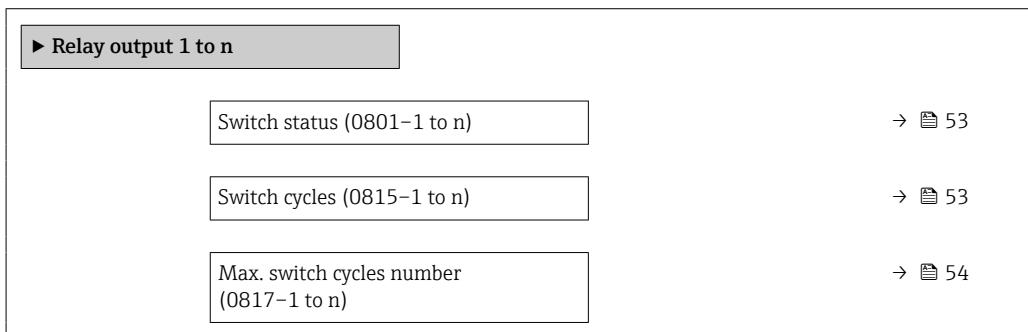

Switch status**Navigation**

 Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch status (0801-1 to n)

Description

Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information*User interface*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

Switch cycles**Navigation**

 Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch cycles (0815-1 to n)

Description

Displays all the switch cycles performed.

User interface

Positive integer

Max. switch cycles number


Navigation   Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Max. cycles no. (0817–1 to n)

Description Displays the maximum number of guaranteed switch cycles.

User interface Positive integer

"Double pulse output" submenu

Navigation   Expert → Sensor → Measured val. → Output values → Double pulse out

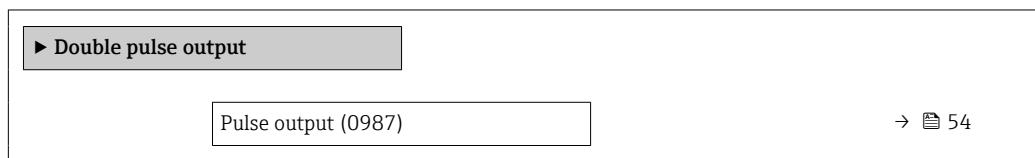

Pulse output

Navigation   Expert → Sensor → Measured val. → Output values → Double pulse out → Pulse output (0987)


Description Displays the pulse frequency of the double pulse output which is currently output.

User interface Positive floating-point number

Additional information  For a detailed description and example: **Pulse output** parameter (→  52)

3.2.2 "System units" submenu

Navigation   Expert → Sensor → System units

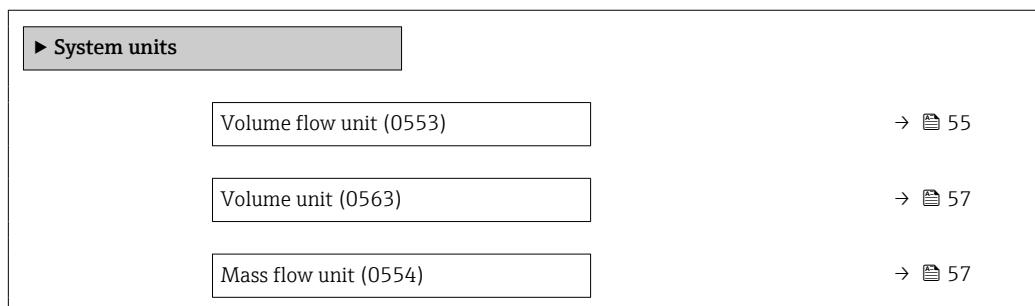

Mass unit (0574)	→ 58
Velocity unit (0566)	→ 58
Temperature unit (0557)	→ 59
Density unit (0555)	→ 59
Kinematic viscosity unit (0578)	→ 60
Length unit (0551)	→ 60
Date/time format (2812)	→ 61

Volume flow unit**Navigation**

Expert → Sensor → System units → Volume flow unit (0553)

Description

Use this function to select the unit for the volume flow.

Selection

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ cm ³ /s	■ af/s	■ gal/s (imp)
■ cm ³ /min	■ af/min	■ gal/min (imp)
■ cm ³ /h	■ af/h	■ gal/h (imp)
■ cm ³ /d	■ af/d	■ gal/d (imp)
■ dm ³ /s	■ ft ³ /s	■ Mgal/s (imp)
■ dm ³ /min	■ ft ³ /min	■ Mgal/min (imp)
■ dm ³ /h	■ ft ³ /h	■ Mgal/h (imp)
■ dm ³ /d	■ ft ³ /d	■ Mgal/d (imp)
■ m ³ /s	■ MMft ³ /s	■ bbl/s (imp;beer)
■ m ³ /min	■ MMft ³ /min	■ bbl/min (imp;beer)
■ m ³ /h	■ MMft ³ /h	■ bbl/h (imp;beer)
■ m ³ /d	■ Mft ³ /d	■ bbl/d (imp;beer)
■ ml/s	■ fl oz/s (us)	■ bbl/s (imp;oil)
■ ml/min	■ fl oz/min (us)	■ bbl/min (imp;oil)
■ ml/h	■ fl oz/h (us)	■ bbl/h (imp;oil)
■ ml/d	■ fl oz/d (us)	■ bbl/d (imp;oil)
■ l/s	■ gal/s (us)	
■ l/min	■ gal/min (us)	
■ l/h	■ gal/h (us)	
■ l/d	■ gal/d (us)	
■ hl/s	■ Mgal/s (us)	
■ hl/min	■ Mgal/min (us)	
■ hl/h	■ Mgal/h (us)	
■ hl/d	■ Mgal/d (us)	
■ Ml/s	■ bbl/s (us;liq.)	
■ Ml/min	■ bbl/min (us;liq.)	
■ Ml/h	■ bbl/h (us;liq.)	
■ Ml/d	■ bbl/d (us;liq.)	
	■ bbl/s (us;beer)	
	■ bbl/min (us;beer)	
	■ bbl/h (us;beer)	
	■ bbl/d (us;beer)	
	■ bbl/s (us;oil)	
	■ bbl/min (us;oil)	
	■ bbl/h (us;oil)	
	■ bbl/d (us;oil)	
	■ bbl/s (us;tank)	
	■ bbl/min (us;tank)	
	■ bbl/h (us;tank)	
	■ bbl/d (us;tank)	
	■ kgal/s (us)	
	■ kgal/min (us)	
	■ kgal/h (us)	
	■ kgal/d (us)	

Factory setting

Country-specific:

- m³/h
- ft³/min

Additional information*Result*

The selected unit applies for:
Volume flow parameter (→ 44)

Selection

For an explanation of the abbreviated units: → 216

Customer-specific units

The unit for the customer-specific volume is specified in the **User volume text** parameter.

Volume unit**Navigation**

Expert → Sensor → System units → Volume unit (0563)

Description

Use this function to select the unit for the volume.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- Mft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Factory setting

Country-specific:

- m³
- ft³

Additional information*Selection*

For an explanation of the abbreviated units: → 216

Mass flow unit**Navigation**

Expert → Sensor → System units → Mass flow unit (0554)

Description

Use this function to select the unit for the mass flow.

Selection	<i>SI units</i>	<i>US units</i>
	■ g/s	■ oz/s
	■ g/min	■ oz/min
	■ kg/s	■ lb/s
	■ kg/min	■ lb/min
	■ kg/h	■ lb/h
	■ kg/d	■ lb/d
	■ t/h	■ STon/h
	■ t/d	■ STon/d
Factory setting	Country-specific:	
	■ kg/h	
	■ lb/min	
Additional information	<i>Result</i>	
	The selected unit applies for:	
	Mass flow parameter	
	<i>Selection</i>	
	 For an explanation of the abbreviated units: → 216	

Mass unit		
Navigation	 Expert → Sensor → System units → Mass unit (0574)	
Description	Use this function to select the unit for the mass.	
Selection	<i>SI units</i>	<i>US units</i>
	■ g	■ oz
	■ kg	■ lb
	■ t	■ STon
Factory setting	Country-specific:	
	■ kg	
	■ lb	
Additional information	<i>Selection</i>	
	 For an explanation of the abbreviated units: → 216	

Velocity unit		
Navigation	 Expert → Sensor → System units → Velocity unit (0566)	
Description	Use this function to select the unit for the flow velocity.	
Selection	<i>SI units</i>	<i>US units</i>
	m/s	ft/s

Factory setting

Country-specific:

- m/s
- ft/s

Additional information*Result*

The selected unit applies for:

- Flow velocity (→ 45)
- Sound velocity (→ 45)

Selection For an explanation of the abbreviated units: → 216**Temperature unit****Navigation** Expert → Sensor → System units → Temperature unit (0557)**Description**

Use this function to select the unit for the temperature.

Selection*SI units*

- °C
- K

US units

- °F
- °R

Factory setting

Country-specific:

- °C
- °F

Additional information*Result*

The selected unit applies for:

- Temperature
- Electronic temperature
- External temperature
- Reference temperature

Selection For an explanation of the abbreviated units: → 216**Density unit****Navigation** Expert → Sensor → System units → Density unit (0555)**Description**

Use this function to select the unit for the density.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	▪ g/cm ³	▪ lb/ft ³	▪ lb/gal (imp)
	▪ g/m ³	▪ lb/gal (us)	▪ lb/bbl (imp;beer)
	▪ kg/l	▪ lb/bbl (us;liq.)	▪ lb/bbl (imp;oil)
	▪ kg/dm ³	▪ lb/bbl (us;beer)	
	▪ kg/m ³	▪ lb/bbl (us;oil)	
	▪ SD4°C	▪ lb/bbl (us;tank)	
	▪ SD15°C		
	▪ SD20°C		
	▪ SG4°C		
	▪ SG15°C		
	▪ SG20°C		
Factory setting	Country-specific:		
	▪ kg/dm ³		
	▪ lb/ft ³		
Additional information	<i>Selection</i>		
	 For an explanation of the abbreviated units: → 216		

Kinematic viscosity unit

Navigation  Expert → Sensor → System units → Kin. visc. unit (0578)

Description Use this function to select the unit for the kinematic viscosity.

Selection	<i>SI units</i>
	▪ cSt
	▪ m ² /s
	▪ St
Factory setting	Country-specific:
	▪ m ² /s
	▪ cSt

Length unit

Navigation  Expert → Sensor → System units → Length unit (0551)

Description Use this function to select the unit of length for the.

Selection	<i>SI units</i>	<i>US units</i>
	▪ m	▪ ft
	▪ mm	▪ in
Factory setting	Country-specific:	
	▪ mm	
	▪ in	

Additional information*Selection*

For an explanation of the abbreviated units: → [216](#)

Date/time format**Navigation**

Expert → Sensor → System units → Date/time format (2812)

Description

Use this function to select the desired time format for calibration history.

Selection

- dd.mm.yy hh:mm
- dd.mm.yy hh:mm am/pm
- mm/dd/yy hh:mm
- mm/dd/yy hh:mm am/pm

Factory setting

dd.mm.yy hh:mm

Additional information*Selection*

For an explanation of the abbreviated units: → [216](#)

3.2.3 "Measuring point" wizard

Navigation

Expert → Sensor → Meas. point 1

► Measuring point 1	
Measuring point configuration (5675-1)	→ 62
Process fluid (2926-1)	→ 63
Medium temperature (3053-1)	→ 63
Sound velocity (2929-1)	→ 63
Viscosity (2932-1)	→ 64
Pipe material (2927-1)	→ 64
Pipe sound velocity (2933-1)	→ 64
Pipe dimensions (2943-1)	→ 65
Pipe circumference (2934-1)	→ 65

Pipe outer diameter (2910-1)	→ 65
Pipe wall thickness (2916-1)	→ 66
Liner material (2928-1)	→ 66
Liner sound velocity (2936-1)	→ 66
Liner thickness (2935-1)	→ 67
Sensor type (2924-1)	→ 67
Sensor coupling (2957-1)	→ 67
Mounting type (2938-1)	→ 68
Cable length (2939-1)	→ 68
Inlet configuration (3049-1)	→ 68
Inlet diameter (3054-1)	→ 69
Transition length (3065-1)	→ 69
Inlet run (3050-1)	→ 69
Relative sensor position (2985-1)	→ 70
Result sensor type / mounting type (2946-1)	→ 70
Result sensor distance / measuring aid (2947-1)	→ 70

Measuring point configuration

Navigation

Expert → Sensor → Meas. point 1 → Meas. pt config. (5675-1)

Description

Displays the measuring point configuration. The measuring point has either 1 or 2 measuring paths depending on the sensor version.

Selection

- 1 measuring point - signal path 1
- 1 measuring point - signal path 2 *
- 1 measuring point - 2 signal paths *

Factory setting

Depending on the sensor version

* Visibility depends on order options or device settings

Process fluid

Navigation Expert → Sensor → Meas. point 1 → Process fluid (2926-1)

Description Select process fluid.

Selection

- Water
- Sea water
- Distilled water
- Ammonia NH₃
- Benzene
- Ethanol
- Glycol
- Kerosene
- Milk
- Methanol
- User-specific liquid

Factory setting Water

Medium temperature

Navigation Expert → Sensor → Meas. point 1 → Medium temp. (3053-1)

Description Enter a fixed value for process temperature.

User entry -200 to 550 °C

Factory setting 20 °C

Sound velocity

Navigation Expert → Sensor → Meas. point 1 → Sound velocity (2929-1)

Prerequisite The **User-specific liquid** option is selected in the **Process fluid** parameter (→ 63).

Description Enter sound velocity of fluid.

User entry 200 to 3 000 m/s

Factory setting 1 482.4 m/s

Viscosity**Navigation**

Expert → Sensor → Meas. point 1 → Viscosity (2932-1)

Prerequisite

The **User-specific liquid** option is selected in the **Process fluid** parameter (→ 63).

Description

Enter medium viscosity at installation temperature.

User entry

1E-10 to 0.01 m²/s

Factory setting

1E-6 m²/s

Pipe material**Navigation**

Expert → Sensor → Meas. point 1 → Pipe material (2927-1)

Description

Select pipe material.

Selection

- Carbon steel
- Ductile cast iron
- Stainless steel
- 1.4301 (UNS S30400)
- 1.4401 (UNS S31600)
- 1.4550 (UNS S34700)
- Hastelloy C
- PVC
- PE
- LDPE
- HDPE
- GRP
- PVDF
- PA
- PP
- PTFE
- Pyrex glass
- Asbestos cement
- Copper
- Unknown pipe material

Factory setting

Stainless steel

Pipe sound velocity**Navigation**

Expert → Sensor → Meas. point 1 → Pipe sound vel. (2933-1)

Prerequisite

The **Unknown pipe material** option is selected in the **Pipe material** parameter (→ 64).

Description

Enter sound velocity of pipe material.

User entry 800.0 to 3 800.0 m/s

Factory setting 3 120.0 m/s

Pipe dimensions



Navigation Expert → Sensor → Meas. point 1 → Pipe dimensions (2943–1)

Description Select if pipe dimensions are defined by diameter or circumference.

Selection
■ Diameter
■ Pipe circumference

Factory setting Diameter

Pipe circumference



Navigation Expert → Sensor → Meas. point 1 → Pipe circumfer. (2934–1)

Prerequisite The **Pipe circumference** option is selected in the **Pipe dimensions** parameter (→ 65).

Description Define the pipe circumference.

User entry 30 to 62 800 mm

Factory setting 314.159 mm

Pipe outer diameter



Navigation Expert → Sensor → Meas. point 1 → Pipe outer diam. (2910–1)

Prerequisite The **Diameter** option is selected in the **Pipe dimensions** parameter (→ 65).

Description Define the outer diameter of the pipe.

User entry 10 to 5 000 mm

Factory setting 100 mm

Pipe wall thickness

Navigation Expert → Sensor → Meas. point 1 → Wall thickness (2916–1)

Description Enter the pipe wall thickness.

User entry Positive floating point number

Factory setting 3 mm

Liner material

Navigation Expert → Sensor → Meas. point 1 → Liner material (2928–1)

Description Select liner material.

Selection

- None
- Cement
- Rubber
- Epoxy resin
- Unknown liner material

Factory setting None

Liner sound velocity

Navigation Expert → Sensor → Meas. point 1 → Liner sound vel. (2936–1)

Prerequisite The **Unknown liner material** option is selected in the **Liner material** parameter (→ 66).

Description Define the sound velocity of liner material.

User entry 800.0 to 3 800.0 m/s

Factory setting 2 400.0 m/s

Liner thickness**Navigation**

Expert → Sensor → Meas. point 1 → Liner thickness (2935-1)

Prerequisite

One of the following options is selected in the **Liner material** parameter (→ [66](#)):

- Cement
- Rubber
- Epoxy resin
- Unknown liner material

Description

Define the thickness of liner.

User entry

0 to 100 mm

Factory setting

0 mm

Sensor type**Navigation**

Expert → Sensor → Meas. point 1 → Sensor type (2924-1)

Description

Select sensor type.

Selection

- C-030-A *
- C-050-A *
- C-100-A *
- C-100-B *
- C-100-C *
- C-200-A *
- C-200-B *
- C-200-C *
- C-500-A *

Factory setting

As per order

Sensor coupling**Navigation**

Expert → Sensor → Meas. point 1 → Sensor coupling (2957-1)

Description

Select coupling medium.

Selection

- Coupling pad
- Coupling paste

Factory setting

Coupling pad

* Visibility depends on order options or device settings

Mounting type**Navigation**

Expert → Sensor → Meas. point 1 → Mounting type (2938-1)

Description

- (1) **direct** option: sensor arrangement with 1 traverse
- (2) **V-mounting** option: sensor arrangement with 2 traverses
- (3) **Z-Mounting** option: sensor arrangement with 3 traverses
- (4) **W-mounting** option: sensor arrangement with 4 traverses

Selection

- (1) direct
- (2) V-mounting
- (3) Z-Mounting
- (4) W-mounting
- Automatic

Factory setting

Automatic

Cable length**Navigation**

Expert → Sensor → Meas. point 1 → Cable length (2939-1)

Description

Enter length of sensor cables.

User entry

0 to 200 000 mm

Factory setting

As per order

Inlet configuration**Navigation**

Expert → Sensor → Meas. point 1 → Inlet config. (3049-1)

Prerequisite

The **1 measuring point - 2 signal paths** option is selected in the **Measuring point configuration** parameter (→ 62).

Description

Select inlet configuration.

Selection

- Off
- Single elbow
- Double elbow
- Double elbow 3D
- Concentric diameter change

Factory setting

Off

Inlet diameter**Navigation**

Expert → Sensor → Meas. point 1 → Inlet diameter (3054-1)

Prerequisite

- The **1 measuring point - 2 signal paths** option is selected in the **Measuring point configuration** parameter (→ [62](#)).
- The **Concentric diameter change** option is selected in the **Inlet configuration** parameter (→ [68](#)).

Description

Enter the outer diameter of the pipe before the cross-section change. For convenience, the same measuring pipe wall thickness as for the clamp-on system is applied.

User entry

1 to 10 000 mm

Factory setting

88.9 mm

Transition length**Navigation**

Expert → Sensor → Meas. point 1 → Transit. length (3065-1)

Prerequisite

- The **1 measuring point - 2 signal paths** option is selected in the **Measuring point configuration** parameter (→ [62](#)).
- The **Concentric diameter change** option is selected in the **Inlet configuration** parameter (→ [68](#)).

Description

Enter length of the concentric diameter change.

User entry

0 to 10 000 mm

Factory setting

0 mm

Inlet run**Navigation**

Expert → Sensor → Meas. point 1 → Inlet run (3050-1)

Prerequisite

The **1 measuring point - 2 signal paths** option is selected in the **Measuring point configuration** parameter (→ [62](#)).

Description

Enter length of the available straight inlet run.

User entry

0 to 50 000 mm

Factory setting

0 mm

Relative sensor position

Navigation  Expert → Sensor → Meas. point 1 → Rel. sensor pos. (2985-1)

Prerequisite The **1 measuring point - 2 signal paths** option is selected in the **Measuring point configuration** parameter (→  62).

Description Shows the correct position for the sensor.

User interface

- 90°
- 180°

Factory setting –

Result sensor type / mounting type

Navigation  Expert → Sensor → Meas. point 1 → Sensor/mounting (2946-1)

Description Shows the selected sensor type and (if applicable automatically) selected mounting type.

User interface e.g. C-100-A option / (2) V-mounting option

Result sensor distance / measuring aid

Navigation  Expert → Sensor → Meas. point 1 → Dist./meas. aid (2947-1)


Description Shows the calculated sensor distance and vernier or wire length (if applicable) required for installation.

User interface e.g. 201.3 mm / B 21

Factory setting –

3.2.4 "Process parameters" submenu

Navigation  Expert → Sensor → Process param.

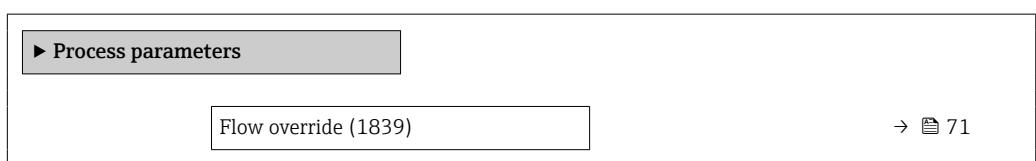

Flow damping (1802)	→ 71
▶ Low flow cut off	→ 72

Flow override



Navigation

Expert → Sensor → Process param. → Flow override (1839)

Description

Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

Selection

- Off
- On

Factory setting

Off

Additional information

Description

Flow override is active

- The **453 Flow override** diagnostic message is output.
- Output values
 - Temperature: continues to be output
 - Sound velocity: continues to be output
 - Totalizers 1-3: stop being totalized

The **Flow override** option can also be activated in the **Status input** submenu: **Assign status input** parameter (→ 89).

Flow damping



Navigation

Expert → Sensor → Process param. → Flow damping (1802)

Description

Use this function to enter a time constant for flow damping (PT1 element). Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

User entry

0 to 999.9 s

Factory setting

1 s

Additional information*Description*

i The damping is performed by a PT1 element²⁾.

User entry

- Value = 0: no damping
- Value > 0: damping is increased

i Damping is switched off if **0** is entered (factory setting).


Result

i The damping affects the following variables of the device:

- Outputs → [90](#)
- Low flow cut off → [72](#)
- Totalizers → [173](#)

"Low flow cut off" submenu*Navigation*

Expert → Sensor → Process param. → Low flow cut off

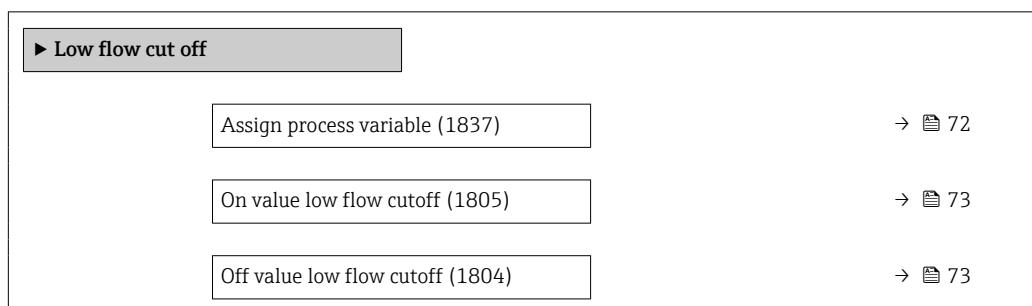**Assign process variable***Navigation*

Expert → Sensor → Process param. → Low flow cut off → Assign variable (1837)

Description

Use this function to select the process variable for low flow cutoff detection.

Selection

- Off
- Volume flow
- Mass flow
- Flow velocity

2) Proportional behavior with first-order lag

On value low flow cutoff**Navigation**

Expert → Sensor → Process param. → Low flow cut off → On value (1805)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 72).

Description

Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 → 73.

User entry

Positive floating-point number

Factory setting

Depends on country and nominal diameter

Additional information*Dependency*

The unit depends on the process variable selected in the **Assign process variable** parameter (→ 72).

Off value low flow cutoff**Navigation**

Expert → Sensor → Process param. → Low flow cut off → Off value (1804)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 72).

Description


Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → 73.

User entry

0 to 100.0 %

Factory setting

50 %

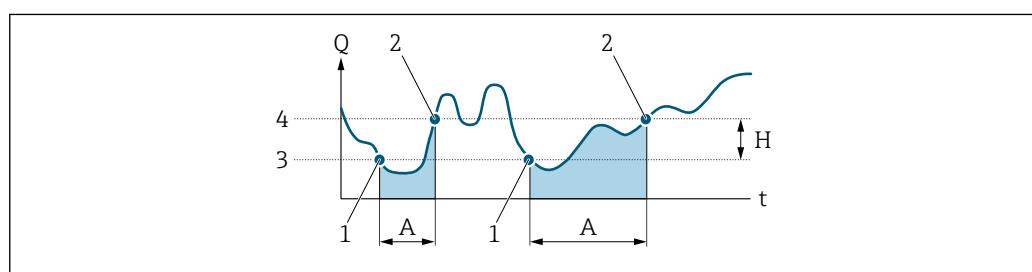Additional information*Example*

- Q Flow
- t Time
- H Hysteresis
- A Low flow cut off active
- 1 Low flow cut off is activated
- 2 Low flow cut off is deactivated
- 3 On value entered
- 4 Off value entered

3.2.5 "External compensation" submenu

Navigation

Expert → Sensor → External comp.

► External compensation	
Temperature compensation (3025)	→ 74
External temperature (3058)	→ 75
Density source (3048)	→ 75
Fixed density (3171)	→ 75
External density (3060)	→ 76
Fixed reference density (3178)	→ 76
Linear expansion coefficient (3153)	→ 76
Square expansion coefficient (3172)	→ 77
Reference temperature (3147)	→ 77

Temperature compensation



Navigation

Expert → Sensor → External comp. → Temp. compensat. (3025)

Prerequisite

The **Calculated value** option is selected in the **Density source** parameter (→ 75).

Description

Select temperature mode for temperature compensation.

Selection

- Fixed value
- External value *
- Current input 1 *
- Current input 2 *
- Current input 3 *

Factory setting

Fixed value

* Visibility depends on order options or device settings

External temperature

Navigation   Expert → Sensor → External comp. → External temp. (3058)

Prerequisite The **Calculated value** option is selected in the **Density source** parameter (→ 75) and the **Fixed value** option is selected in the **Temperature compensation** parameter (→ 74).

Description Shows the external process temperature read in from the external device.

User interface -273.15 to 99 999 °C

Factory setting 0 °C

Density source



Navigation   Expert → Sensor → External comp. → Density source (3048)

Description Select source of the density for the density compensation.

Selection

- Fixed density
- External density *
- Calculated value
- Current input 1 *
- Current input 2 *
- Current input 3 *

Factory setting Fixed density

Fixed density



Navigation   Expert → Sensor → External comp. → Fixed density (3171)

Description Enter fixed value for medium density.

User entry 0.01 to 15 000 kg/m³

Factory setting 1 000 kg/m³

* Visibility depends on order options or device settings

External density

Navigation Expert → Sensor → External comp. → External density (3060)

Description Shows the density read in from the external device.

User interface Positive floating-point number

Factory setting 0 kg/m³

Fixed reference density

Navigation Expert → Sensor → External comp. → Fix ref.density (3178)

Description Use this function to enter a fixed value for the reference density.

User entry 0.01 to 15 000 kg/m³

Factory setting 1 000 kg/m³

Additional information *To calculate the reference density*

$$\rho = \rho_N \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0044558

- ρ : density currently used to calculate the mass flow
- ρ_N : reference density
- t : temperature currently read in or fixed temperature as per setting **Temperature compensation** parameter (→ 74)
- t_N : reference temperature at which the reference density applies (e.g. 20 °C)
- Δt : $t - t_N$
- α : linear expansion coefficient of the medium, unit = [1/K]; K = Kelvin
- β : square expansion coefficient of the medium, unit = [1/K²]

Linear expansion coefficient

Navigation Expert → Sensor → External comp. → Linear exp coeff (3153)

Description Use this function to enter a linear, medium-specific expansion coefficient for calculating the density.

User entry $1.0 \cdot 10^{-6}$ to $2.0 \cdot 10^{-3}$

Factory setting $2.06 \cdot 10^{-4}$

Square expansion coefficient**Navigation**

Expert → Sensor → External comp. → Square exp coeff (3172)

Description

For media with a non-linear expansion pattern: use this function to enter a quadratic, medium-specific expansion coefficient for calculating the density.

User entry

$1.0 \cdot 10^{-8}$ to $2.0 \cdot 10^{-3}$

Factory setting

$3.8436 \cdot 10^{-6}$

Reference temperature**Navigation**

Expert → Sensor → External comp. → Ref. temperature (3147)

Description

Use this function to enter the reference temperature for which the Fixed reference density (→ [76](#)) applies.

User entry


-200 to 450 °C

Factory setting

0 °C

3.2.6 "Sensor adjustment" submenu*Navigation*

Expert → Sensor → Sensor adjustm.

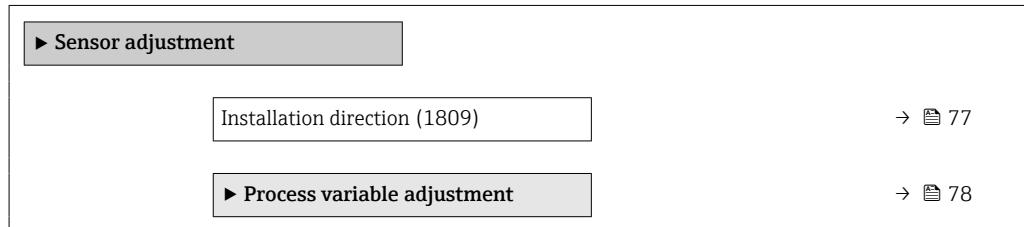**Installation direction****Navigation**

Expert → Sensor → Sensor adjustm. → Install. direct. (1809)

Description

Use this function to change the sign of the medium flow direction.

Selection

- Forward flow
- Reverse flow

Factory setting

Forward flow

Additional information*Description*

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

"Process variable adjustment" submenu*Navigation*

Expert → Sensor → Sensor adjustm. → Variable adjust

▶ Process variable adjustment	
Volume flow offset (1831)	→ 78
Volume flow factor (1832)	→ 79
Mass flow offset (1841)	→ 79
Mass flow factor (1846)	→ 79
Sound velocity offset (1848)	→ 80
Sound velocity factor (1849)	→ 80
Temperature offset (1870)	→ 80
Temperature factor (1871)	→ 81
Density offset (1877)	→ 81
Density factor (1878)	→ 81

Volume flow offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset (1831)

Description

Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.

User entry

Signed floating-point number

Factory setting

0 m³/h

Additional information*Description*

Corrected value = (factor × value) + offset

Volume flow factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor (1832)

Description Use this function to enter a quantity factor (without time) for the volume flow. This multiplication factor is applied over the volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Mass flow offset

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset (1841)

Description Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/h.

User entry Signed floating-point number

Factory setting 0 kg/h

Additional information *Description*

Corrected value = (factor × value) + offset

Mass flow factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor (1846)

Description Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Sound velocity offset

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → S. veloc. offset (1848)

Description Use this function to enter the zero point shift for the sound velocity trim. The sound velocity unit on which the shift is based is m/s.

User entry Signed floating-point number

Factory setting 0 m/s

Additional information *Description*

Corrected value = (factor × value) + offset

Sound velocity factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → S. veloc. factor (1849)

Description Use this function to enter a quantity factor (without time) for the sound velocity. This multiplication factor is applied over the sound velocity range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Temperature offset

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset (1870)

Description Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is K.

User entry Signed floating-point number

Factory setting 0 K

Additional information *Description*

Corrected value = (factor × value) + offset

Temperature factor

Navigation	Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor (1871)
Description	Use this function to enter a quantity factor for the temperature. In each case, this factor refers to the temperature in K.
User entry	Positive floating-point number
Factory setting	1
Additional information	<p><i>Description</i></p> Corrected value = (factor × value) + offset

Density offset


Navigation	Expert → Sensor → Sensor adjustm. → Variable adjust → Density offset (1877)
Description	Use this function to enter the zero point shift for the density trim.
User entry	Signed floating-point number
Factory setting	0 kg/m ³

Density factor

Navigation	Expert → Sensor → Sensor adjustm. → Variable adjust → Density factor (1878)
Description	Use this function to enter a quantity factor for the density.
User entry	Positive floating-point number
Factory setting	1

3.2.7 "Calibration" submenu*Navigation*

Expert → Sensor → Calibration

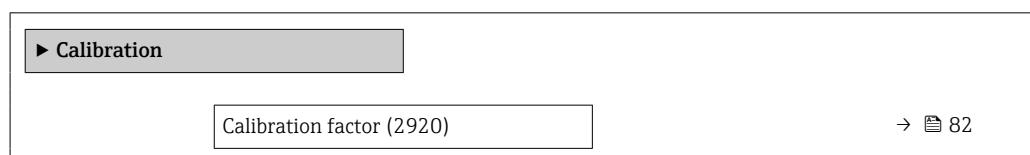

Zero point (2921)	→ 82
Nominal diameter (2807)	→ 82

Calibration factor

Navigation Expert → Sensor → Calibration → Cal. factor (2920)

Description Displays the current calibration factor for the sensor.

User interface Signed floating-point number

Factory setting 1

Zero point

Navigation Expert → Sensor → Calibration → Zero point (2921)

Description Displays the current zero point correction value for the sensor.

User interface Signed floating-point number

Factory setting 0

Nominal diameter

Navigation Expert → Sensor → Calibration → Nominal diameter (2807)

Description Displays the nominal diameter of the sensor.


User interface -----

Factory setting -----

3.3 "I/O configuration" submenu

Navigation

◀ ▶ Expert → I/O config.

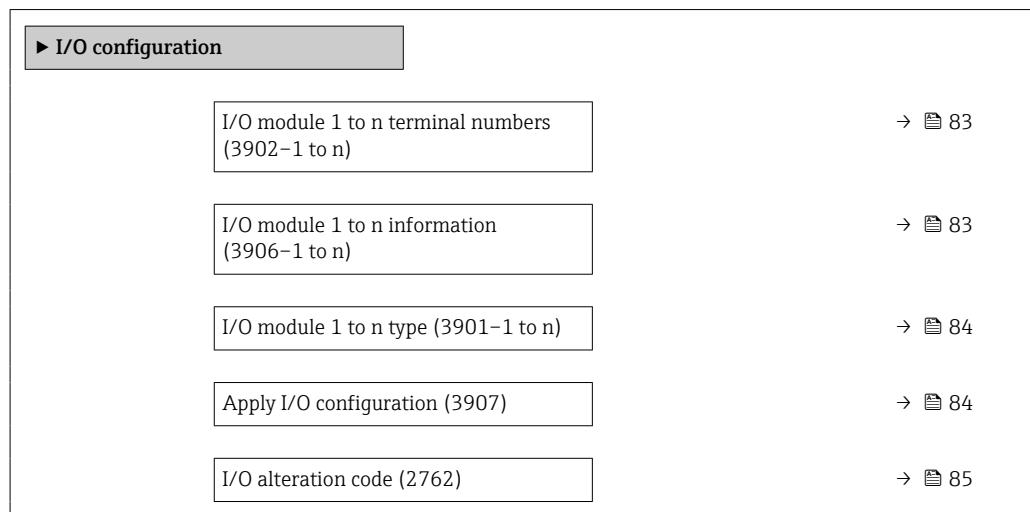

I/O module 1 to n terminal numbers

Navigation

◀ ▶ Expert → I/O config. → I/O 1 to n terminals (3902-1 to n)

Description

Displays the terminal numbers used by the I/O module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)

I/O module 1 to n information

Navigation

◀ ▶ Expert → I/O config. → I/O 1 to n info (3906-1 to n)

Description

Displays information about the plugged in I/O module.

User interface

- Not plugged
- Invalid
- Not configurable
- Configurable
- HART

Additional information	<p><i>"Not plugged"</i> option The I/O module is not plugged in.</p> <p><i>"Invalid"</i> option The I/O module is not plugged correctly.</p> <p><i>"Not configurable"</i> option The I/O module is not configurable.</p> <p><i>"Configurable"</i> option The I/O module is configurable.</p> <p><i>"Fieldbus"</i> option The I/O module is configured for HART.</p>
-------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

I/O module 1 to n type**Navigation** Expert → I/O config. → I/O 1 to n type (3901-1 to n)**Prerequisite**

For the following order code:

- "Output; input 2", option D "Configurable I/O initial setting off"
- "Output; input 3", option D "Configurable I/O initial setting off"
- "Output; input 4", option D "Configurable I/O initial setting off"

Description Use this function to select the I/O module type for the configuration of the I/O module.**Selection**

- Off
- Current output *
- Current input *
- Status input *
- Pulse/frequency/switch output *
- Double pulse output *
- Relay output *

Factory setting Off

Apply I/O configuration**Navigation** Expert → I/O config. → Apply I/O config (3907)**Description** Use this function to activate the newly configured I/O module type.**Selection**

- No
- Yes

Factory setting No

* Visibility depends on order options or device settings

I/O alteration code**Navigation**

Expert → I/O config. → I/O alterat.code (2762)

Description

Use this function to enter the ordered activation code to activate the I/O configuration change.

User entry Positive integer

Factory setting 0


Additional information

Description
The I/O configuration is changed in the **I/O module type** parameter (→ [84](#)).

3.4 "Input" submenu

Navigation


Expert → Input

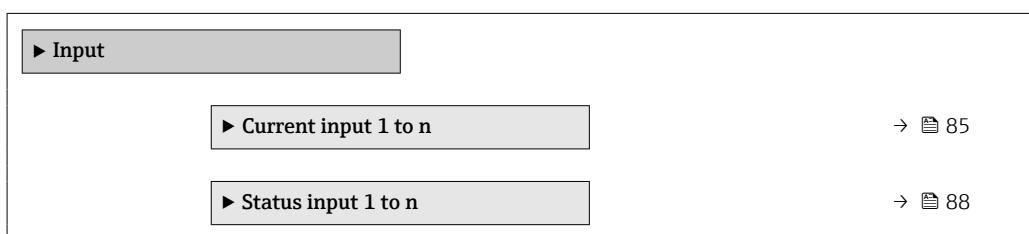

3.4.1 "Current input 1 to n" submenu

Navigation

Expert → Input → Current input 1 to n

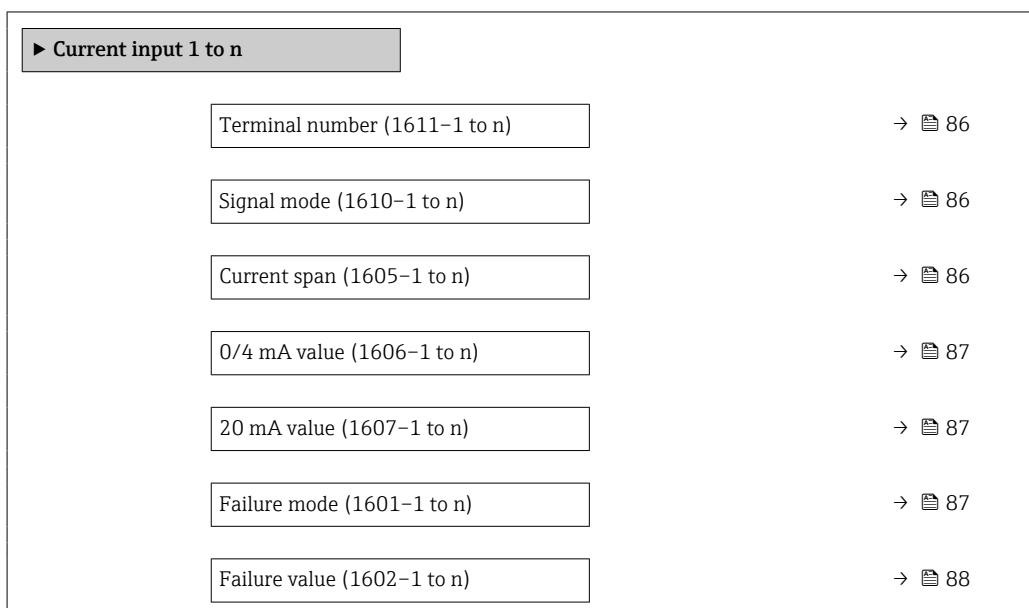

Terminal number

Navigation  Expert → Input → Current input 1 to n → Terminal no. (1611–1 to n)

Description Displays the terminal numbers used by the current input module.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information "Not used" option

The current input module does not use any terminal numbers.

Signal mode



Navigation  Expert → Input → Current input 1 to n → Signal mode (1610–1 to n)

Description Use this function to select the signal mode for the current input.

Selection

- Passive
- Active *

Factory setting Passive

Current span



Navigation  Expert → Input → Current input 1 to n → Current span (1605–1 to n)

Description Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

Selection

- 4...20 mA (4... 20.5 mA)
- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 0...20 mA (0... 20.5 mA)

Factory setting Country-specific:
■ 4...20 mA NAMUR (3.8...20.5 mA)
■ 4...20 mA US (3.9...20.8 mA)

Additional information Examples

 Sample values for the current range: **Current span** parameter (→  92)

* Visibility depends on order options or device settings

0/4 mA value**Navigation**

Expert → Input → Current input 1 to n → 0/4 mA value (1606–1 to n)

Description

Use this function to enter a value for the 4 mA current.

User entry

Signed floating-point number

Factory setting

0

Additional information*Current input behavior*

The current input behaves differently depending on the settings configured in the following parameters:

- Current span (→ [86](#))
- Failure mode (→ [87](#))

Configuration examples

Pay attention to the configuration examples for **4 mA value** parameter (→ [94](#)).

20 mA value**Navigation**

Expert → Input → Current input 1 to n → 20 mA value (1607–1 to n)

Description

Use this function to enter a value for the 20 mA current.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information*Configuration examples*

Pay attention to the configuration examples for **4 mA value** parameter (→ [94](#)).

Failure mode**Navigation**

Expert → Input → Current input 1 to n → Failure mode (1601–1 to n)

Description

Use this function to select the input behavior when measuring a current outside the configured **Current span** parameter (→ [86](#)).

Selection

- Alarm
- Last valid value
- Defined value

Factory setting

Alarm

Additional information*Options*

- Alarm
An error message is set.
- Last valid value
The last valid measured value is used.
- Defined value
A user-defined measured value is used (**Failure value** parameter (→ 88)).

Failure value**Navigation**

Expert → Input → Current input 1 to n → Failure value (1602–1 to n)

Prerequisite

In the **Failure mode** parameter (→ 87), the **Defined value** option is selected.

Description

Use this function to enter the value that the device uses if it does not receive an input signal from the external device, or if the input signal is invalid.

User entry


Signed floating-point number

Factory setting

0

3.4.2 "Status input 1 to n" submenu**Navigation**

Expert → Input → Status input 1 to n

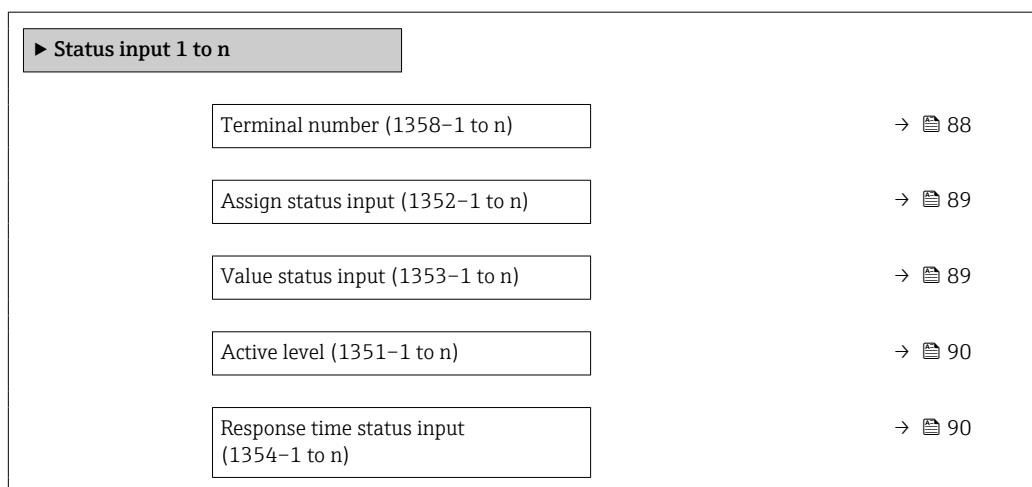**Terminal number****Navigation**

Expert → Input → Status input 1 to n → Terminal no. (1358–1 to n)

Description

Displays the terminal numbers used by the status input module.

User interface	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)
-----------------------	----------------------------------------------------------------------------------------------------------------

Additional information	<p><i>"Not used" option</i></p> <p>The status input module does not use any terminal numbers.</p>
-------------------------------	---------------------------------------------------------------------------------------------------

Assign status input



Navigation	Expert → Input → Status input 1 to n → Assign stat.inp. (1352-1 to n)
-------------------	-----------------------------------------------------------------------

Description	Use this function to select the function for the status input.
--------------------	----------------------------------------------------------------

Selection	<ul style="list-style-type: none"> ■ Off ■ Reset totalizer 1 ■ Reset totalizer 2 ■ Reset totalizer 3 ■ Reset all totalizers ■ Flow override
------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Factory setting	Off
------------------------	-----

Additional information	<i>Selection</i>
-------------------------------	------------------

- Off
The status input is switched off.
 - Reset totalizer 1...3
The individual totalizers are reset.
 - Reset all totalizers
All totalizers are reset.
 - Flow override
The Flow override (→ 71) is activated.
- Note on the Flow override (→ 71):
 - The Flow override (→ 71) is enabled as long as the level is at the status input (continuous signal).
 - All other assignments react to a change in level (pulse) at the status input.

Value status input

Navigation	Expert → Input → Status input 1 to n → Val.stat.inp. (1353-1 to n)
-------------------	--------------------------------------------------------------------

Description	Displays the current input signal level.
--------------------	------------------------------------------

User interface	<ul style="list-style-type: none"> ■ High ■ Low
-----------------------	-------------------------------------------------------------------------

Active level**Navigation**

Expert → Input → Status input 1 to n → Active level (1351–1 to n)

Description

Use this function to determine the input signal level at which the assigned function is activated.

Selection

- High
- Low

Factory setting

High

Response time status input**Navigation**

Expert → Input → Status input 1 to n → Response time (1354–1 to n)

Description

Use this function to enter the minimum time period for which the input signal level must be present before the selected function is activated.

User entry

5 to 200 ms


Factory setting

50 ms

3.5 "Output" submenu

Navigation

Expert → Output

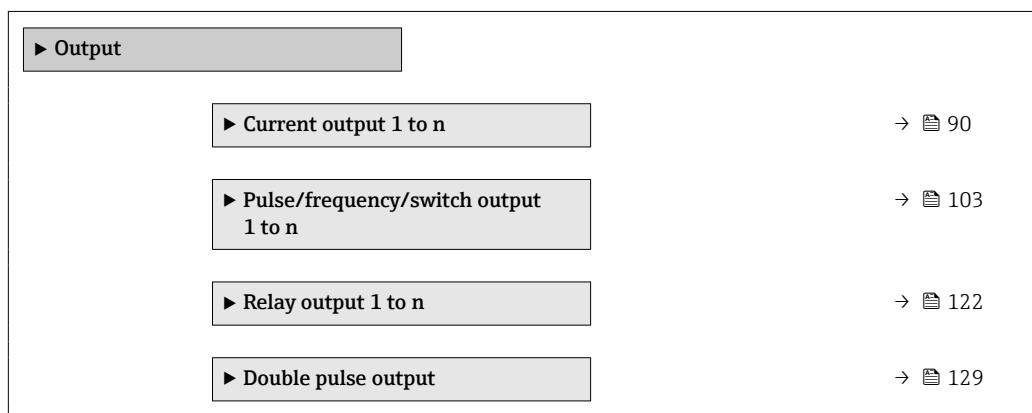

3.5.1 "Current output 1 to n" submenu

Navigation

Expert → Output → Curr.output 1 to n



Terminal number (0379-1 to n)	→ 91
Signal mode (0377-1 to n)	→ 92
Process variable current output (0359-1 to n)	→ 92
Current range output (0353-1 to n)	→ 92
Fixed current (0365-1 to n)	→ 93
Lower range value output (0367-1 to n)	→ 94
Upper range value output (0372-1 to n)	→ 96
Measuring mode current output (0351-1 to n)	→ 96
Damping current output (0363-1 to n)	→ 101
Failure behavior current output (0364-1 to n)	→ 101
Failure current (0352-1 to n)	→ 102
Output current 1 to n (0361-1 to n)	→ 102
Measured current 1 to n (0366-1 to n)	→ 103

Terminal number

Navigation Expert → Output → Curr.output 1 to n → Terminal no. (0379-1 to n)

Description Displays the terminal numbers used by the current output module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information "Not used" option

The current output module does not use any terminal numbers.

Signal mode**Navigation**

Expert → Output → Curr.output 1 to n → Signal mode (0377–1 to n)

Description

Use this function to select the signal mode for the current output.

Selection

- Active *
- Passive *

Factory setting

Active

Process variable current output**Navigation**

Expert → Output → Curr.output 1 to n → Proc.var. outp (0359–1 to n)

Description

Use this function to select a process variable for the current output.

Selection

- Off *
- Volume flow
- Mass flow
- Sound velocity
- Flow velocity
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Acceptance rate *
- Temperature *
- Density *
- Electronics temperature

Factory setting

Volume flow

Current range output**Navigation**

Expert → Output → Curr.output 1 to n → Curr.range out (0353–1 to n)

Description

Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

Selection

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)
- Fixed value

* Visibility depends on order options or device settings

Factory setting

Country-specific:

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)

Additional information*Description*


- In the event of a device alarm, the current output adopts the value specified in the **Failure mode** parameter (→ 101).
- If the measured value is outside the measuring range, the **△S441 Current output 1 to n** diagnostic message is displayed.
- The measuring range is specified via the **0/4 mA value** parameter (→ 94) and **20 mA value** parameter (→ 96).

"Fixed current" option

- This option is used for a HART Multidrop network.
- It can only be used for the 4...20 mA HART current output (current output 1).
- The current value is set via the **Fixed current** parameter (→ 93).

Example

Shows the relationship between the current span for the output of the process variable and the lower and upper alarm levels:

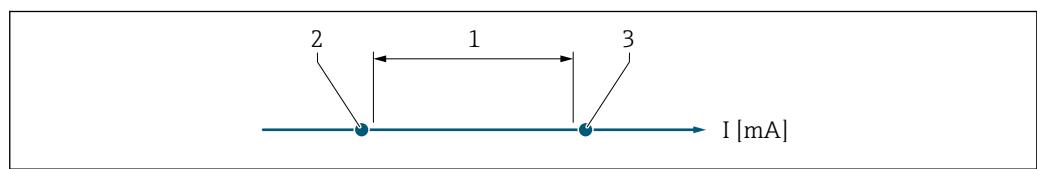

A0034351

- 1 Current span for process value
- 2 Lower level for signal on alarm
- 3 Upper level for signal on alarm

Selection

Selection	1	2	3
4...20 mA NAMUR (3.8...20.5 mA)	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US (3.9...20.8 mA)	3.9 to 20.8 mA US	< 3.6 mA	> 21.95 mA
4...20 mA (4...20.5 mA)	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
0...20 mA (0...20.5 mA)	0 to 20.5 mA	< 0 mA	> 21.95 mA

If the flow exceeds or falls below the upper or lower signal on alarm level, the **△S441 Current output 1 to n** diagnostic message is displayed.

Fixed current**Navigation**

Expert → Output → Curr.output 1 to n → Fixed current (0365–1 to n)

Prerequisite

The **Fixed current** option is selected in the **Current span** parameter (→ 92).

Description

Use this function to enter a constant current value for the current output.

User entry

0 to 22.5 mA

Factory setting 22.5 mA

Lower range value output



Navigation Expert → Output → Curr.output 1 to n → Low.range outp (0367-1 to n)

Prerequisite In the **Current span** parameter (→ 92), one of the following options is selected:

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description Use this function to enter a value for the 0/4 mA current.

User entry Signed floating-point number

Factory setting Country-specific:

- m³/h
- ft³/h

Additional information *Description*

Positive and negative values are permitted depending on the process variable assigned in the **Assign current output** parameter (→ 92). In addition, the value can be greater than or smaller than the value assigned for the 20 mA current in the **20 mA value** parameter (→ 96).

Dependency

The unit depends on the process variable selected in the **Assign current output** parameter (→ 92).

Current output behavior

The current output behaves differently depending on the settings configured in the following parameters:

- Current span (→ 92)
- Failure mode (→ 101)


Configuration examples

Some examples of parameter settings and their effect on the current output are given in the following section.

Configuration example A

Measuring mode with **Forward flow** option

- **0/4 mA value** parameter (→ 94) = not equal to zero flow (e.g. -250 m³/h)
- **20 mA value** parameter (→ 96) = not equal to zero flow (e.g. +750 m³/h)
- Calculated current value = 8 mA at zero flow

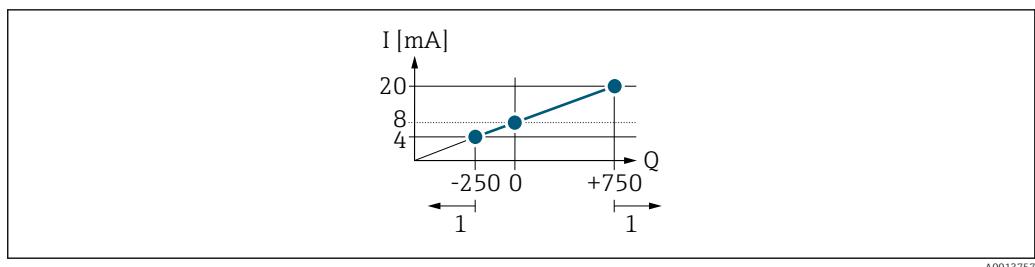
*Q* Flow*I* Current

1 Measuring range is exceeded or undershot

The operational range of the measuring device is defined by the values entered for the **0/4 mA value** parameter (→ 94) and **20 mA value** parameter (→ 96). If the effective flow exceeds or falls below this operational range, the **△S441 Current output 1 to n** diagnostic message is displayed.

Configuration example B

Measuring mode with **Forward/Reverse flow** option

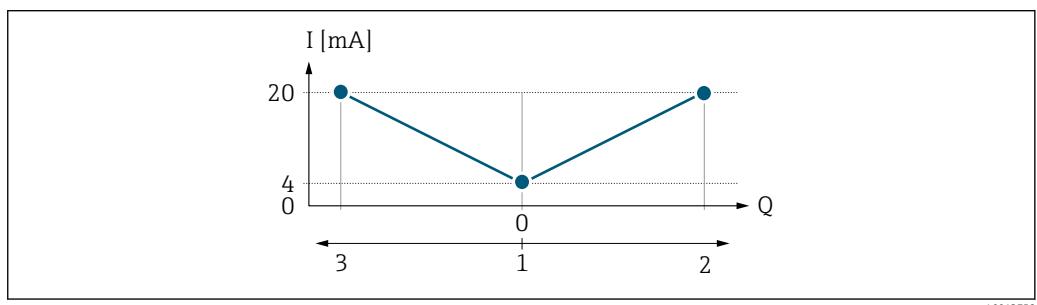*I* Current*Q* Flow

1 Value assigned to the 0/4 mA current

2 Forward flow

3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 94) and **20 mA value** parameter (→ 96) must have the same sign. The value for the **20 mA value** parameter (→ 96) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 96) (e.g. forward flow).

Configuration example C

Measuring mode with **Reverse flow compensation** option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s → 96.

Upper range value output**Navigation**

Expert → Output → Curr.output 1 to n → Upp.range outp (0372-1 to n)

Prerequisite

In the **Current span** parameter (→ [92](#)), one of the following options is selected:

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to enter a value for the 20 mA current.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information*Description*

Positive and negative values are permitted depending on the process variable assigned in the **Assign current output** parameter (→ [92](#)). In addition, the value can be greater than or smaller than the value assigned for the 0/4 mA current in the **0/4 mA value** parameter (→ [94](#)).

Dependency

The unit depends on the process variable selected in the **Assign current output** parameter (→ [92](#)).

Example

- Value assigned to 0/4 mA = -250 m³/h
- Value assigned to 20 mA = +750 m³/h
- Calculated current value = 8 mA (at zero flow)

If the **Forward/Reverse flow** option is selected in the **Measuring mode** parameter (→ [96](#)), different signs cannot be entered for the values of the **0/4 mA value** parameter (→ [94](#)) and **20 mA value** parameter (→ [96](#)). The **△S441 Current output 1 to n** diagnostic message is displayed.

Configuration examples

Observe the configuration examples for the **0/4 mA value** parameter (→ [94](#)).

Measuring mode current output**Navigation**

Expert → Output → Curr.output 1 to n → Meas.mode outp (0351-1 to n)

Prerequisite

One of the following options is selected in the **Assign current output** parameter (→ [92](#)):

- Volume flow
- Mass flow
- Sound velocity
- Flow velocity

- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Acceptance rate *
- Temperature *
- Density *
- Electronics temperature

One of the following options is selected in the **Current span** parameter (→ 92):

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to select the measuring mode for the current output.

Selection

- Forward flow
- Forward/Reverse flow *
- Reverse flow compensation

Factory setting

Forward flow

Additional information

Description

 The process variable that is assigned to the current output via the **Assign current output** parameter (→ 92) is displayed below the parameter.

"Forward flow" option


The current output signal is proportional to the process variable assigned. The measuring range is defined by the values that are assigned to the 0/4 mA and 20 mA current value.

The flow components outside the scaled measuring range are taken into account for signal output as follows:

Both values are defined such that they are not equal to zero flow e.g.:

- 0/4 mA current value = -5 m³/h
- 20 mA current value = 10 m³/h

"Forward/Reverse flow" option

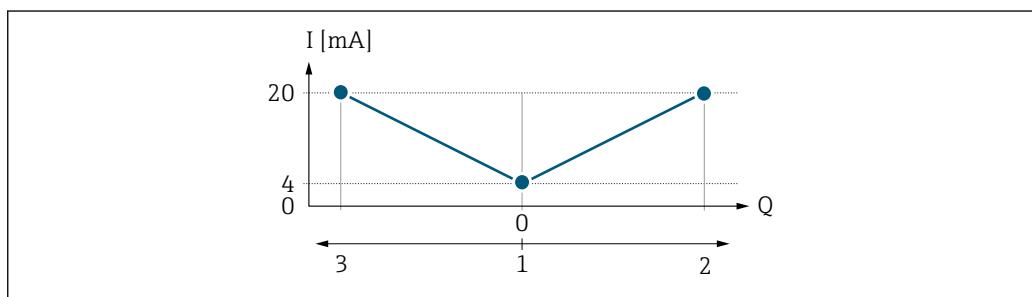

- | | |
|---|--------------------------------------|
| I | Current |
| Q | Flow |
| 1 | Value assigned to the 0/4 mA current |
| 2 | Forward flow |
| 3 | Reverse flow |

* Visibility depends on order options or device settings

- The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 94) and **20 mA value** parameter (→ 96) must have the same sign.
- The value for the **20 mA value** parameter (→ 96) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 96) (e.g. forward flow).

"Reverse flow compensation" option

The **Reverse flow compensation** option is primarily used to compensate for abrupt reverse flow that can occur with positive displacement pumps as a result of wear or high viscosity. The reverse flow is recorded in a buffer memory and offset against the next forward flow.

In the event of prolonged and undesired reverse flow, flow values can accumulate in the buffer memory. Due to the configuration of the current output, these values are not factored in, however, i.e. there is no compensation for the reverse flow.

If this option is set, the measuring device does not smoothen the flow signal. The flow signal is not attenuated.

Examples of how the current output behaves

Example 1

Defined measuring range: lower range value and upper range value with the **same** sign

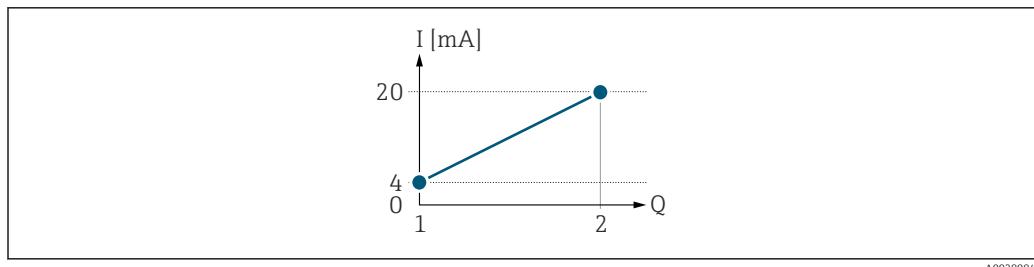


Fig. 3 Measuring range

- I Current
 Q Flow
 1 Lower range value (value assigned to 0/4 mA current)
 2 Upper range value (value assigned to 20 mA current)

With the following flow response:


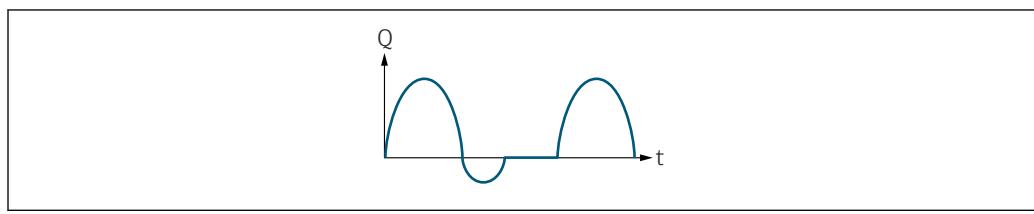


Fig. 4 Flow response

- Q Flow
 t Time

With **Forward flow** option


The current output signal is proportional to the process variable assigned. The flow components outside the scaled measuring range are not taken into account for signal output.:

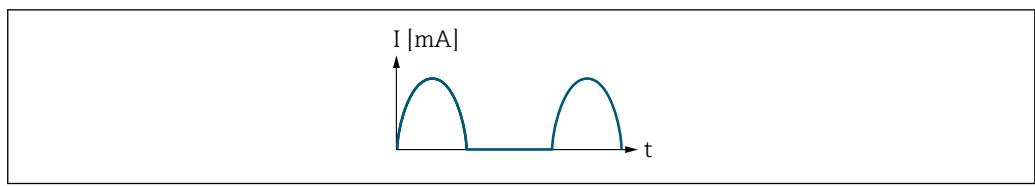

I Current
t Time

With Forward/Reverse flow option


The current output signal is independent of the direction of flow.

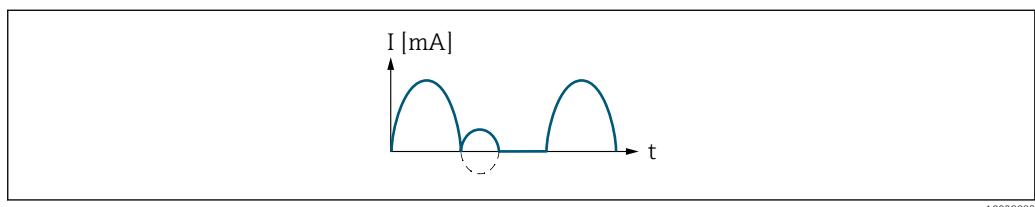

I Current
t Time

With Reverse flow compensation option


Flow components outside of the measuring range are buffered, balanced and output after a maximum delay of 60 s.

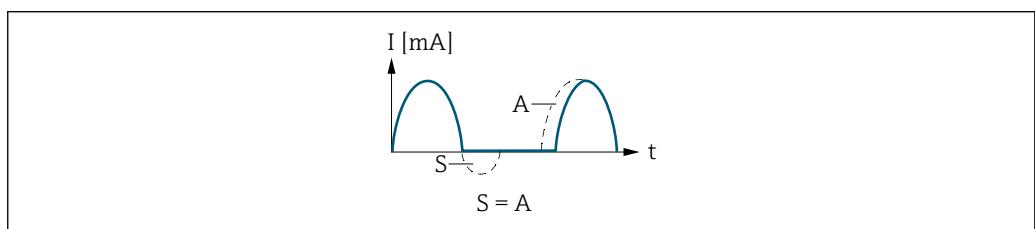

I Current
t Time
S Flow components saved
A Balancing of saved flow components

Example 2


Defined measuring range: lower range value and upper range value with **different** signs

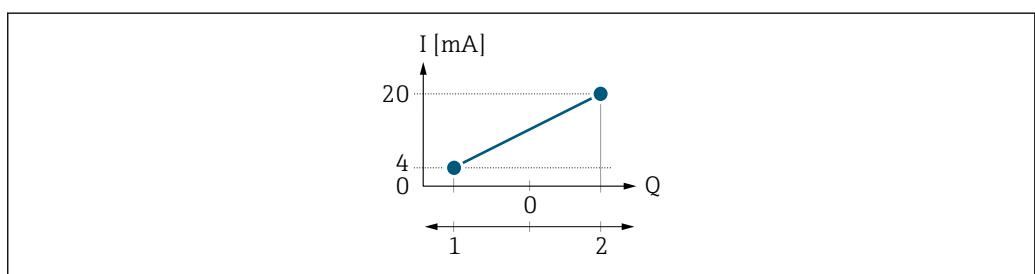

5 Measuring range

- I* Current
Q Flow
 1 Lower range value (value assigned to 0/4 mA current)
 2 Upper range value (value assigned to 20 mA current)

With flow a (—) outside, b (- -) inside the measuring range

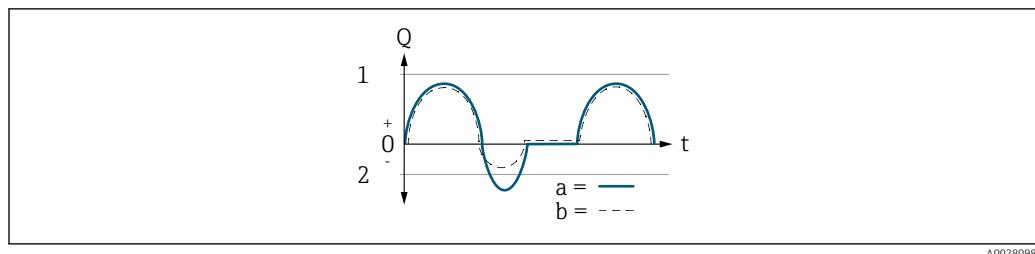

A0028098


Q Flow*t* Time

1 Lower range value (value assigned to 0/4 mA current)

2 Upper range value (value assigned to 20 mA current)

With **Forward flow** option

- a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output.
The **△S441 Current output 1 to n** diagnostic message is output.
- b (- -): The current output signal is proportional to the process variable assigned.

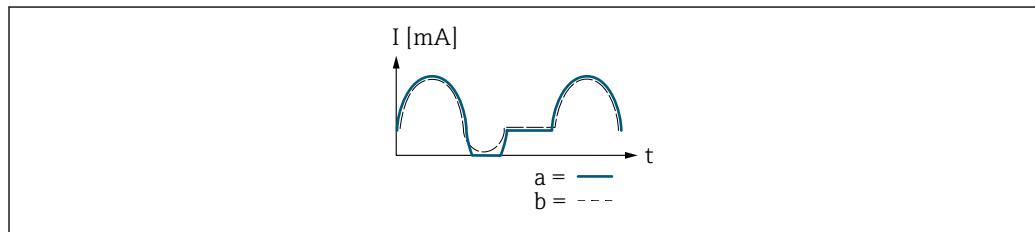


A0028100

I Current*t* TimeWith **Forward/Reverse flow** option

This option cannot be selected here since the values for the **0/4 mA value** parameter (→ 94) and **20 mA value** parameter (→ 96) have different algebraic signs.

With **Reverse flow compensation** option

Flow components outside of the measuring range are buffered, balanced and output after a maximum delay of 60 s.

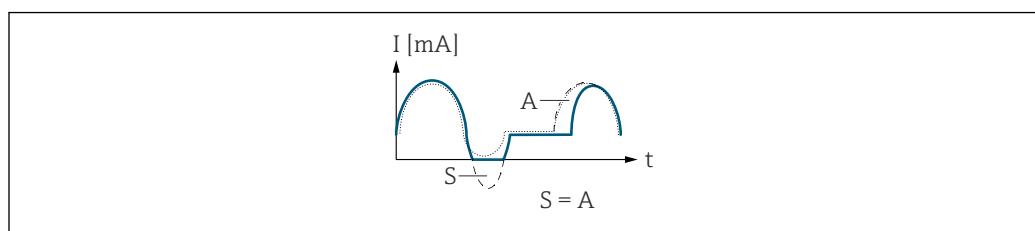

A0028101

I Current*t* Time*S* Flow components saved*A* Balancing of saved flow components

Damping current output**Navigation**

Expert → Output → Curr.output 1 to n → Damp.curr.outp (0363-1 to n)

Prerequisite

A process variable is selected in the **Assign current output** parameter (→ 92) and one of the following options is selected in the **Current span** parameter (→ 92):

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to enter a time constant for the reaction time of the current output signal to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

1.0 s

Additional information

User entry

Use this function to enter a time constant (PT1 element³⁾) for current output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.

Damping is switched off if 0 is entered (factory setting).

Failure behavior current output**Navigation**

Expert → Output → Curr.output 1 to n → Fail.behav.out (0364-1 to n)

Prerequisite

A process variable is selected in the **Assign current output** parameter (→ 92) and one of the following options is selected in the **Current span** parameter (→ 92):

- 4...20 mA NAMUR (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4... 20.5 mA)
- 0...20 mA (0... 20.5 mA)

Description

Use this function to select the value of the current output in the event of a device alarm.

Selection

- Min.
- Max.
- Last valid value
- Actual value
- Fixed value

Factory setting

Max.

3) proportional transmission behavior with first order delay

Additional information**Description**

 This setting does not affect the failsafe mode of other outputs and totalizers. This is specified in separate parameters.

"Min." option

The current output adopts the value of the lower level for signal on alarm.

 The signal on alarm level is defined via the **Current span** parameter (→  92).

"Max." option

The current output adopts the value of the upper level for signal on alarm.

 The signal on alarm level is defined via the **Current span** parameter (→  92).

"Last valid value" option

The current output adopts the last measured value that was valid before the device alarm occurred.

"Actual value" option

The current output adopts the measured value on the basis of the current flow measurement; the device alarm is ignored.

"Defined value" option

The current output adopts a defined measured value.

 The measured value is defined via the **Failure current** parameter (→  102).

Failure current**Navigation**

  Expert → Output → Curr.output 1 to n → Fail. current (0352-1 to n)

Prerequisite

The **Defined value** option is selected in the **Failure mode** parameter (→  101).

Description

Use this function to enter a fixed value that the current output adopts in the event of a device alarm.

User entry

0 to 22.5 mA

Factory setting

22.5 mA

Output current 1 to n**Navigation**

  Expert → Output → Curr.output 1 to n → Output curr. 1 to n (0361-1 to n)

Description

Displays the current value currently calculated for the current output.

User interface

3.59 to 22.5 mA

Measured current 1 to n

Navigation	Expert → Output → Curr.output 1 to n → Measur. curr. 1 to n (0366-1 to n)
Description	Displays the actual measured value of the output current.
User interface	0 to 30 mA

3.5.2 "Pulse/frequency/switch output 1 to n" submenu*Navigation*

Expert → Output → PFS output 1 to n

► Pulse/frequency/switch output 1 to n	
Terminal number (0492-1 to n)	→ 104
Signal mode (0490-1 to n)	→ 105
Operating mode (0469-1 to n)	→ 105
Assign pulse output 1 to n (0460-1 to n)	→ 107
Pulse scaling (0455-1 to n)	→ 107
Pulse width (0452-1 to n)	→ 108
Measuring mode (0457-1 to n)	→ 108
Failure mode (0480-1 to n)	→ 109
Pulse output 1 to n (0456-1 to n)	→ 110
Assign frequency output (0478-1 to n)	→ 110
Minimum frequency value (0453-1 to n)	→ 111
Maximum frequency value (0454-1 to n)	→ 111
Measuring value at minimum frequency (0476-1 to n)	→ 111
Measuring value at maximum frequency (0475-1 to n)	→ 112

Measuring mode (0479-1 to n)	→ 112
Damping output 1 to n (0477-1 to n)	→ 113
Response time (0491-1 to n)	→ 114
Failure mode (0451-1 to n)	→ 114
Failure frequency (0474-1 to n)	→ 115
Output frequency 1 to n (0471-1 to n)	→ 115
Switch output function (0481-1 to n)	→ 116
Assign diagnostic behavior (0482-1 to n)	→ 116
Assign limit (0483-1 to n)	→ 117
Switch-on value (0466-1 to n)	→ 119
Switch-off value (0464-1 to n)	→ 119
Assign flow direction check (0484-1 to n)	→ 120
Assign status (0485-1 to n)	→ 120
Switch-on delay (0467-1 to n)	→ 120
Switch-off delay (0465-1 to n)	→ 121
Failure mode (0486-1 to n)	→ 121
Switch status 1 to n (0461-1 to n)	→ 121
Invert output signal (0470-1 to n)	→ 122

Terminal number

Navigation

Expert → Output → PFS output 1 to n → Terminal no. (0492-1 to n)

Description

Displays the terminal numbers used by the pulse/frequency/switch output module.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information

"Not used" option

The pulse/frequency/switch output module does not use any terminal numbers.

Signal mode**Navigation**

Expert → Output → PFS output 1 to n → Signal mode (0490-1 to n)

Description

Use this function to select the signal mode for the pulse/frequency/switch output.

Selection

- Passive
- Active *
- Passive NAMUR

Factory setting

Passive

Operating mode**Navigation**

Expert → Output → PFS output 1 to n → Operating mode (0469-1 to n)

Description

Use this function to select the operating mode of the output as a pulse, frequency or switch output.

Selection

- Pulse
- Frequency
- Switch

Factory setting

Pulse

Additional information

"Pulse" option


Quantity-dependent pulse with configurable pulse width

- Whenever a specific volume or mass is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width).
- The pulses are never shorter than the set duration.

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Pulse width 0.05 ms
- Pulse rate 1000 Impuls/s

* Visibility depends on order options or device settings

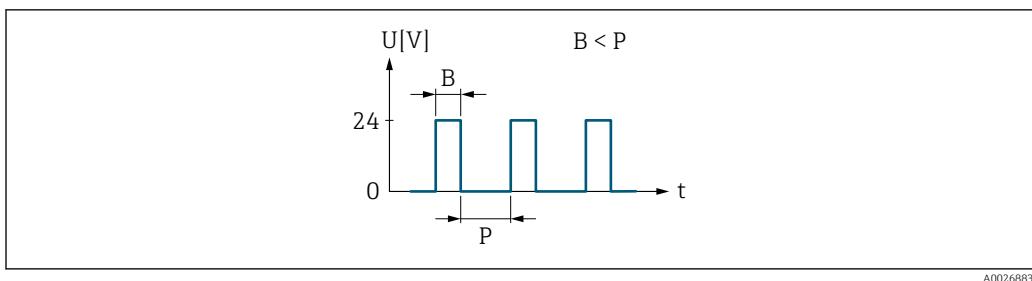

6 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Frequency" option

Flow-proportional frequency output with 1:1 on/off ratio

An output frequency is output that is proportional to the value of a process variable, such as volume flow, mass flow, temperature, sound velocity, flow velocity, acceptance rate, flow asymmetry, turbulence, signal strength or signal-to-noise ratio.

Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1000 g/s
- Output frequency approx. 1000 Hz

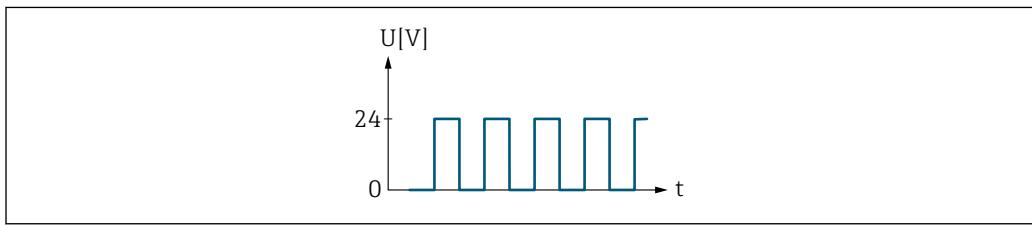


7 Flow-proportional frequency output

"Switch" option

Contact for displaying a condition (e.g. alarm or warning if a limit value is reached)

Example


Alarm response without alarm

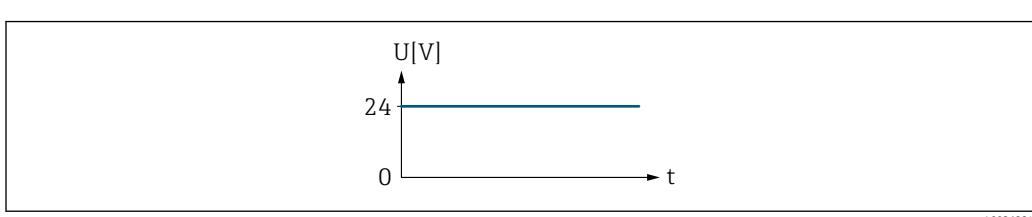

8 No alarm, high level

Example

Alarm response in case of alarm

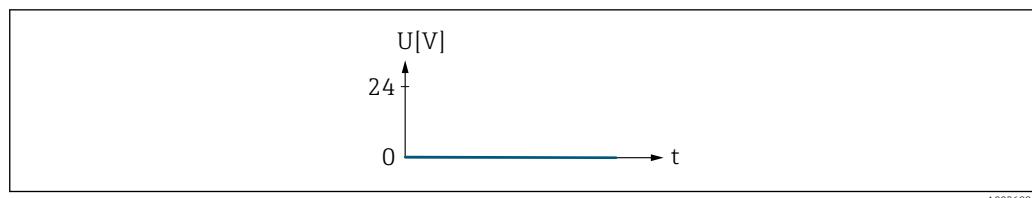

A0026885

9 Alarm, low level

Assign pulse output 1 to n

Navigation	Expert → Output → PFS output 1 to n → Assign pulse 1 to n (0460–1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 105).
Description	Use this function to select the process variable for the pulse output.
Selection	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow
Factory setting	Off

Pulse scaling

Navigation	Expert → Output → PFS output 1 to n → Pulse scaling (0455–1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 105) and a process variable is selected in the Assign pulse output parameter (→ 107).
Description	Use this function to enter the value for the measured value that a pulse is equivalent to.
User entry	Positive floating point number
Factory setting	Depends on country and nominal diameter
Additional information	<p><i>User entry</i></p> <p>Weighting of the pulse output with a quantity. The lower the pulse value, the</p> <ul style="list-style-type: none"> ■ better the resolution. ■ the higher the frequency of the pulse response.

Pulse width**Navigation**

Expert → Output → PFS output 1 to n → Pulse width (0452-1 to n)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 105) and a process variable is selected in the **Assign pulse output** parameter (→ 107).

Description

Use this function to enter the duration of the output pulse.

User entry


0.05 to 2 000 ms

Factory setting

100 ms

Additional information*Description*

- Define how long a pulse is (duration).
- The maximum pulse rate is defined by $f_{\max} = 1 / (2 \times \text{pulse width})$.
- The interval between two pulses lasts at least as long as the set pulse width.
- The maximum flow is defined by $Q_{\max} = f_{\max} \times \text{pulse value}$.
- If the flow exceeds these limit values, the measuring device displays the **443 Pulse output 1 to n** diagnostic message.

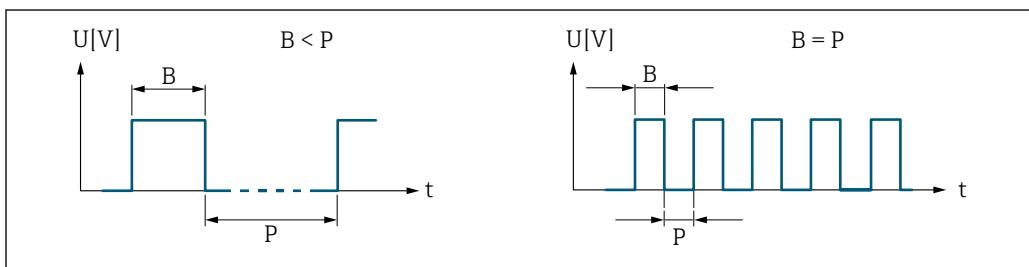

A0026882

B Pulse width entered
P Pauses between the individual pulses

Example

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{\max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{\max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

Measuring mode**Navigation**

Expert → Output → PFS output 1 to n → Measuring mode (0457-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 105), the **Pulse** option is selected, and one of the following options is selected in the **Assign pulse output** parameter (→ 107):

- Volume flow
- Mass flow

Description

Use this function to select the measuring mode for the pulse output.


Selection	<ul style="list-style-type: none"> ▪ Forward flow ▪ Forward/Reverse flow ▪ Reverse flow ▪ Reverse flow compensation
Factory setting	Forward flow
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Forward flow Positive flow is output, negative flow is not output. ▪ Forward/Reverse flow Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow. ▪ Reverse flow Negative flow is output, positive flow is not output. ▪ Reverse flow compensation The flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s. <p> For a detailed description of the options available, see the Measuring mode parameter (→ 96)</p> <p><i>Examples</i></p> <p> For a detailed description of the configuration examples, see the Measuring mode parameter (→ 96)</p>

Failure mode

Navigation	 Expert → Output → PFS output 1 to n → Failure mode (0480-1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 105) and a process variable is selected in the Assign pulse output parameter (→ 107).
Description	Use this function to select the failure mode of the pulse output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ No pulses
Factory setting	No pulses
Additional information	<p><i>Description</i></p> <p>The dictates of safety render it advisable to ensure that the pulse output shows a predefined behavior in the event of a device alarm.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Actual value In the event of a device alarm, the pulse output continues on the basis of the current flow measurement. The fault is ignored. ▪ No pulses In the event of a device alarm, the pulse output is "switched off". <p>NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The</p>

Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Pulse output 1 to n

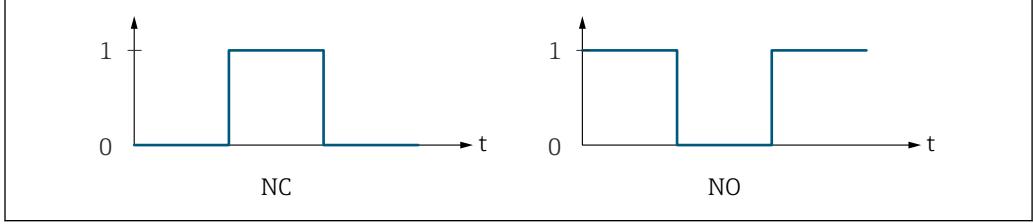Navigation	Expert → Output → PFS output 1 to n → Pulse output 1 to n (0456–1 to n)								
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 105) parameter.								
Description	Displays the pulse frequency currently output.								
User interface	Positive floating-point number								
Additional information	<p><i>Description</i></p> <ul style="list-style-type: none"> ■ The pulse output is an open collector output. ■ This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.  <p>A0028726</p> <table border="0"> <tr> <td>0</td> <td>Non-conductive</td> </tr> <tr> <td>1</td> <td>Conductive</td> </tr> <tr> <td>NC</td> <td>NC contact (normally closed)</td> </tr> <tr> <td>NO</td> <td>NO contact (normally open)</td> </tr> </table>	0	Non-conductive	1	Conductive	NC	NC contact (normally closed)	NO	NO contact (normally open)
0	Non-conductive								
1	Conductive								
NC	NC contact (normally closed)								
NO	NO contact (normally open)								
<p>The output behavior can be reversed via the Invert output signal parameter (→ 122) i.e. the transistor does not conduct for the duration of the pulse.</p> <p>In addition, the behavior of the output in the event of a device alarm (Failure mode parameter (→ 109)) can be configured.</p>									

Assign frequency output



Navigation	Expert → Output → PFS output 1 to n → Assign freq. (0478–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 105).
Description	Use this function to select the process variable for the frequency output.
Selection	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity

- Temperature *
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Acceptance rate *
- Electronics temperature
- Density *

Factory setting Off

Minimum frequency value



Navigation Expert → Output → PFS output 1 to n → Min. freq. value (0453–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 105) and a process variable is selected in the **Assign frequency output** parameter (→ 110).

Description Use this function to enter the minimum frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 0.0 Hz

Maximum frequency value



Navigation Expert → Output → PFS output 1 to n → Max. freq. value (0454–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 105) and a process variable is selected in the **Assign frequency output** parameter (→ 110).

Description Use this function to enter the end value frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 10 000.0 Hz

Measuring value at minimum frequency



Navigation Expert → Output → PFS output 1 to n → Val. at min.freq (0476–1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 105) and a process variable is selected in the **Assign frequency output** parameter (→ 110).

Description Use this function to enter the measured value for the start value frequency.

* Visibility depends on order options or device settings

User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter
Additional information	<p><i>Dependency</i></p>  The entry depends on the process variable selected in the Assign frequency output parameter (→ 110).

Measuring value at maximum frequency



Navigation	 Expert → Output → PFS output 1 to n → Val. at max.freq (0475-1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 105) and a process variable is selected in the Assign frequency output parameter (→ 110).
Description	Use this function to enter the measured value for the end value frequency.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter
Additional information	<p><i>Description</i></p> <p>Use this function to enter the maximum measured value at the maximum frequency. The selected process variable is output as a proportional frequency.</p> <p><i>Dependency</i></p>  The entry depends on the process variable selected in the Assign frequency output parameter (→ 110).

Measuring mode



Navigation	 Expert → Output → PFS output 1 to n → Measuring mode (0479-1 to n)
Prerequisite	<p>In the "Operating mode" parameter, the "Frequency" option is selected, and one of the following options is selected in the "Assign frequency output" parameter:</p> <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Sound velocity ▪ Flow velocity * ▪ Temperature * ▪ Acceptance rate * ▪ Signal strength * ▪ Signal to noise ratio * ▪ Turbulence * ▪ Electronics temperature * ▪ Density *
*	Visibility depends on order options or device settings

* Visibility depends on order options or device settings

Description	Use this function to select the measuring mode for the frequency output.
Selection	<ul style="list-style-type: none"> ▪ Forward flow ▪ Forward/Reverse flow ▪ Reverse flow compensation
Factory setting	Forward flow
Additional information	<p><i>Selection</i></p> <p> For a detailed description of the options available, see the Measuring mode parameter (→ 96)</p> <p><i>Examples</i></p> <p> For a detailed description of the configuration examples, see the Measuring mode parameter (→ 96)</p>

Damping output 1 to n



Navigation	 Expert → Output → PFS output 1 to n → Damping out. 1 to n (0477-1 to n)
Prerequisite	<i>In the "Operating mode" parameter, the "Frequency" option is selected, and one of the following options is selected in the "Assign frequency output" parameter:</i>
	<ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Sound velocity ▪ Flow velocity * ▪ Temperature * ▪ Acceptance rate * ▪ Signal strength * ▪ Signal to noise ratio * ▪ Turbulence * ▪ Electronics temperature ▪ Density *
Description	Use this function to enter a time constant for the reaction time of the output signal to fluctuations in the measured value.
User entry	0 to 999.9 s
Factory setting	0.0 s
Additional information	<p><i>User entry</i></p> <p>Use this function to enter a time constant (PT1 element ⁴⁾) for frequency output damping:</p> <ul style="list-style-type: none"> ▪ If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables. ▪ On the other hand, the current output reacts more slowly if a high time constant is entered. <p> Damping is switched off if 0 is entered (factory setting).</p>

* Visibility depends on order options or device settings

4) proportional transmission behavior with first order delay

The frequency output is subject to separate damping that is independent of all preceding time constants.

Response time

Navigation	Expert → Output → PFS output 1 to n → Response time (0491-1 to n)
Prerequisite	<i>In the "Operating mode" parameter, the "Frequency" option is selected, and one of the following options is selected in the "Assign frequency output" parameter:</i>
	<ul style="list-style-type: none">▪ Volume flow▪ Mass flow▪ Sound velocity▪ Flow velocity▪ Temperature *▪ Acceptance rate *▪ Signal strength *▪ Signal to noise ratio *▪ Turbulence▪ Electronics temperature▪ Density *
Description	Displays the response time. This specifies how quickly the pulse/frequency/switch output reaches the measured value change of 63 % of 100 % of the measured value change.
User interface	Positive floating-point number
Additional information	<i>Description</i> The response time is made up of the time specified for the following dampings: <ul style="list-style-type: none">▪ Damping of pulse/frequency/switch output → 101 and▪ Depending on the measured variable assigned to the output.<ul style="list-style-type: none">▪ Flow damping or▪ Temperature damping

Failure mode



Navigation	Expert → Output → PFS output 1 to n → Failure mode (0451-1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 105) and a process variable is selected in the Assign frequency output parameter (→ 110).
Description	Use this function to select the failure mode of the frequency output in the event of a device alarm.

* Visibility depends on order options or device settings

Selection	<ul style="list-style-type: none"> ■ Actual value ■ Defined value ■ 0 Hz
Factory setting	0 Hz
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Actual value In the event of a device alarm, the frequency output continues on the basis of the current flow measurement. The device alarm is ignored. ■ Defined value In the event of a device alarm, the frequency output continues on the basis of a predefined value. The Failure frequency (→ 115) replaces the current measured value, making it possible to bypass the device alarm. The actual measurement is switched off for the duration of the device alarm. ■ 0 Hz In the event of a device alarm, the frequency output is "switched off". <p>NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.</p>

Failure frequency



Navigation	Expert → Output → PFS output 1 to n → Failure freq. (0474-1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 105) and a process variable is selected in the Assign frequency output parameter (→ 110).
Description	Use this function to enter the value for the frequency output in the event of a device alarm in order to bypass the alarm.
User entry	0.0 to 12 500.0 Hz
Factory setting	0.0 Hz

Output frequency 1 to n

Navigation	Expert → Output → PFS output 1 to n → Output freq. 1 to n (0471-1 to n)
Prerequisite	In the Operating mode parameter (→ 105), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Switch output function



Navigation Expert → Output → PFS output 1 to n → Switch out funct (0481–1 to n)

Prerequisite The **Switch** option is selected in the **Operating mode** parameter (→ 105) parameter.

Description Use this function to select a function for the switch output.

Selection

- Off
- On
- Diagnostic behavior
- Limit
- Flow direction check
- Status

Factory setting Off

Additional information Selection

- Off
The switch output is permanently switched off (open, non-conductive).
- On
The switch output is permanently switched on (closed, conductive).
- Diagnostic behavior
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Status
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign diagnostic behavior



Navigation Expert → Output → PFS output 1 to n → Assign diag. beh (0482–1 to n)

Prerequisite

- In the **Operating mode** parameter (→ 105), the **Switch** option is selected.
- In the **Switch output function** parameter (→ 116), the **Diagnostic behavior** option is selected.

Description Use this function to select the diagnostic event category that is displayed for the switch output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting Alarm

Additional information*Description*

If no diagnostic event is pending, the switch output is closed and conductive.

Selection

- Alarm
The switch output signals only diagnostic events in the alarm category.
- Alarm or warning
The switch output signals diagnostic events in the alarm and warning category.
- Warning
The switch output signals only diagnostic events in the warning category.

Assign limit**Navigation**

Expert → Output → PFS output 1 to n → Assign limit (0483–1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 105).
- The **Limit** option is selected in the **Switch output function** parameter (→ 116).

Description

Use this function to select a process variable for the limit function.

Selection

- Off
- Volume flow
- Mass flow
- Sound velocity
- Flow velocity *
- Temperature *
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Electronics temperature *
- Acceptance rate
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Density *

Factory setting


Volume flow

Additional information*Description*

Behavior of status output when Switch-on value > Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

* Visibility depends on order options or device settings

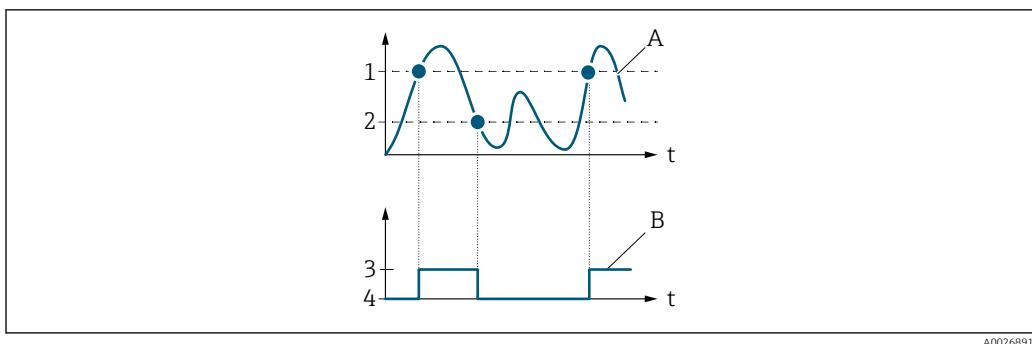


A0026891

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value < Switch-off value:

- Process variable < Switch-on value: transistor is conductive
- Process variable > Switch-off value: transistor is non-conductive

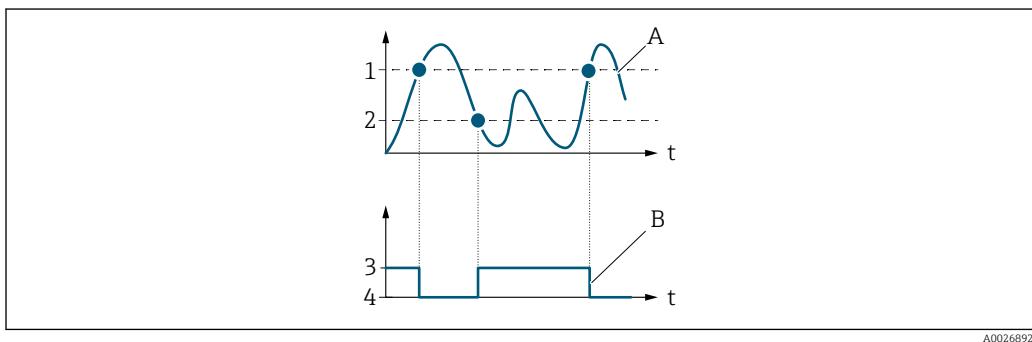


A0026892

- 1 Switch-off value
- 2 Switch-on value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value = Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

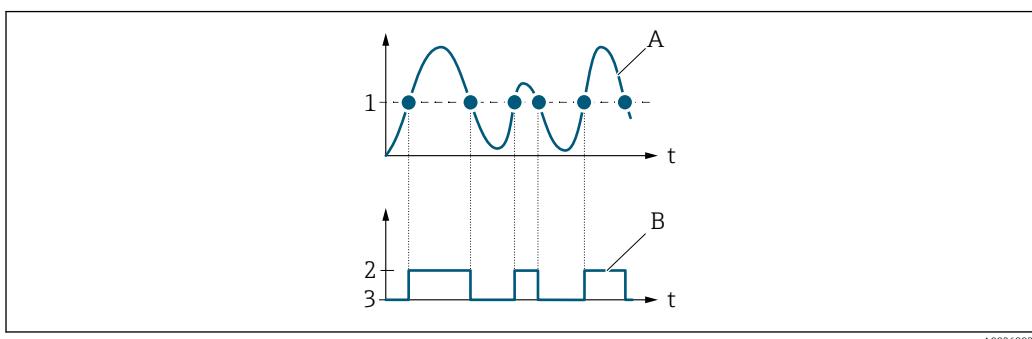

A0026893

- 1 Switch-on value = Switch-off value
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value

Navigation Expert → Output → PFS output 1 to n → Switch-on value (0466-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 105) parameter.
- The **Limit** option is selected in the **Switch output function** parameter (→ 116) parameter.

Description Use this function to enter the measured value for the switch-on point.

User entry Signed floating-point number

Factory setting Country-dependent

Additional information *Description*

Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit depends on the process variable selected in the **Assign limit** parameter (→ 117).

Switch-off value

Navigation Expert → Output → PFS output 1 to n → Switch-off value (0464-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 105).
- The **Limit** option is selected in the **Switch output function** parameter (→ 116).

Description Use this function to enter the measured value for the switch-off point.

User entry Signed floating-point number

Factory setting Country-dependent

Additional information *Description*

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit depends on the process variable selected in the **Assign limit** parameter (→ 117).

Assign flow direction check



Navigation Expert → Output → PFS output 1 to n → Assign dir.check (0484-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [105](#)).
- The **Flow direction check** option is selected in the **Switch output function** parameter (→ [116](#)).

Description Use this function to select a process variable for monitoring the flow direction.

Selection

- Off
- Volume flow
- Mass flow
- Flow velocity

Factory setting Volume flow

Assign status



Navigation Expert → Output → PFS output 1 to n → Assign status (0485-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [105](#)).
- The **Status** option is selected in the **Switch output function** parameter (→ [116](#)).

Description Use this function to select a device status for the switch output.

Selection

- Off
- Low flow cut off

Factory setting Low flow cut off

Additional information *Options*

If empty pipe detection or low flow cut off are enabled, the output is conductive. Otherwise, the switch output is non-conductive.

Switch-on delay



Navigation Expert → Output → PFS output 1 to n → Switch-on delay (0467-1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [105](#)).
- The **Limit** option is selected in the **Switch output function** parameter (→ [116](#)).

Description Use this function to enter a delay time for switching on the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-off delay

Navigation Expert → Output → PFS output 1 to n → Switch-off delay (0465–1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 105).
- The **Limit** option is selected in the **Switch output function** parameter (→ 116).

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Failure mode

Navigation Expert → Output → PFS output 1 to n → Failure mode (0486–1 to n)

Description Use this function to select a failsafe mode for the switch output in the event of a device alarm.

Selection

- Actual status
- Open
- Closed

Factory setting Open

Additional information *Options*

- Actual status
In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the switch output. The **Actual status** option behaves in the same way as the current input value.
- Open
In the event of a device alarm, the switch output's transistor is set to **non-conductive**.
- Closed
In the event of a device alarm, the switch output's transistor is set to **conductive**.

Switch status 1 to n

Navigation Expert → Output → PFS output 1 to n → Switch status 1 to n (0461–1 to n)

Prerequisite The **Switch** option is selected in the **Operating mode** parameter (→ 105).

Description Displays the current switch status of the status output.

User interface

- Open
- Closed

Additional information*User interface*

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

Invert output signal**Navigation**

Expert → Output → PFS output 1 to n → Invert outp.sig. (0470-1 to n)

Description

Use this function to select whether to invert the output signal.

Selection


- No
- Yes

Factory setting


No

Additional information*Selection*

No option (passive - negative)

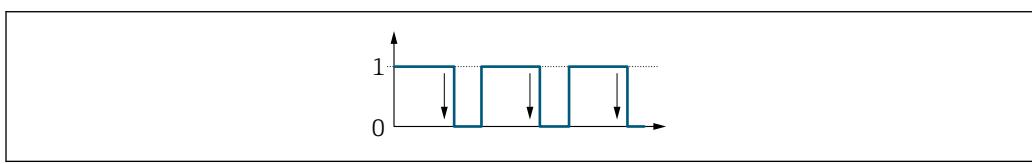

Yes option (passive - positive)

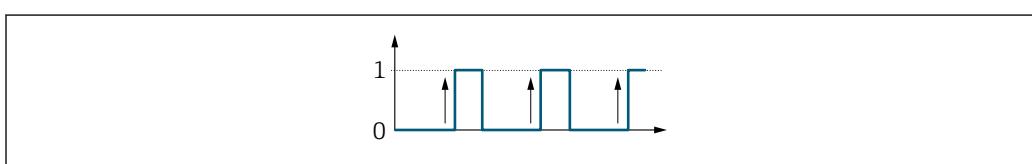

3.5.3 "Relay output 1 to n" submenu

Navigation

Expert → Output → Relay output 1 to n

► Relay output 1 to n	
Terminal number (0812-1 to n)	→ 123
Relay output function (0804-1 to n)	→ 123
Assign flow direction check (0808-1 to n)	→ 124

Assign limit (0807-1 to n)	→ 124
Assign diagnostic behavior (0806-1 to n)	→ 125
Assign status (0805-1 to n)	→ 125
Switch-off value (0809-1 to n)	→ 126
Switch-off delay (0813-1 to n)	→ 126
Switch-on value (0810-1 to n)	→ 126
Switch-on delay (0814-1 to n)	→ 127
Failure mode (0811-1 to n)	→ 127
Switch status (0801-1 to n)	→ 128
Powerless relay status (0816-1 to n)	→ 128

Terminal number**Navigation** Expert → Output → Relay output 1 to n → Terminal no. (0812-1 to n)**Description** Displays the terminal numbers used by the relay output module.**User interface**

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information "Not used" option
The relay output module does not use any terminal numbers.

Relay output function **Navigation** Expert → Output → Relay output 1 to n → Relay outp.func. (0804-1 to n)**Description** Use this function to select an output function for the relay output.**Selection**

- Closed
- Open
- Diagnostic behavior
- Limit
- Flow direction check
- Digital Output

Factory setting	Closed
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none">■ Closed The relay output is permanently switched on (closed, conductive).■ Open The relay output is permanently switched off (open, non-conductive).■ Diagnostic behavior Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.■ Limit Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.■ Flow direction check Indicates the flow direction (forward or reverse flow).■ Digital Output Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign flow direction check



Navigation Expert → Output → Relay output 1 to n → Assign dir.check (0808-1 to n)

Prerequisite The **Flow direction check** option is selected in the **Relay output function** parameter (→ 123).

Description Use this function to select a process variable for monitoring the flow direction.

Selection

- Off
- Volume flow
- Mass flow
- Flow velocity

Factory setting Volume flow

Assign limit



Navigation Expert → Output → Relay output 1 to n → Assign limit (0807-1 to n)

Prerequisite The **Limit** option is selected in the **Relay output function** parameter (→ 123).

Description Use this function to select a process variable for the limit value function.

Selection

- Off
- Volume flow
- Mass flow
- Sound velocity
- Flow velocity

- Temperature *
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Electronics temperature *
- Acceptance rate *
- Totalizer 1
- Totalizer 2
- Totalizer 3 *
- Density

Factory setting Volume flow

Assign diagnostic behavior



Navigation Expert → Output → Relay output 1 to n → Assign diag. beh (0806–1 to n)

Prerequisite In the **Relay output function** parameter (→ 123), the **Diagnostic behavior** option is selected.

Description Use this function to select the category of the diagnostic events that are displayed for the relay output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting Alarm

Additional information *Description*

If no diagnostic event is pending, the relay output is closed and conductive.

Selection

- Alarm
The relay output signals only diagnostic events in the alarm category.
- Alarm or warning
The relay output signals diagnostic events in the alarm and warning category.
- Warning
The relay output signals only diagnostic events in the warning category.

Assign status



Navigation Expert → Output → Relay output 1 to n → Assign status (0805–1 to n)

Prerequisite In the **Relay output function** parameter (→ 123), the **Digital Output** option is selected.

* Visibility depends on order options or device settings

Description Use this function to select the device status for the relay output.

Selection

- Off
- Low flow cut off

Factory setting Off

Switch-off value



Navigation Expert → Output → Relay output 1 to n → Switch-off value (0809-1 to n)

Prerequisite In the **Relay output function** parameter (→ 123), the **Limit** option is selected.

Description Use this function to enter the measured value for the switch-off point.

User entry Signed floating-point number

Factory setting 0 m³/h

Additional information *Description*

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit is dependent on the process variable selected in the **Assign limit** parameter (→ 124).

Switch-off delay



Navigation Expert → Output → Relay output 1 to n → Switch-off delay (0813-1 to n)

Prerequisite In the **Relay output function** parameter (→ 123), the **Limit** option is selected.

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-on value



Navigation Expert → Output → Relay output 1 to n → Switch-on value (0810-1 to n)

Prerequisite The **Limit** option is selected in the **Relay output function** parameter (→ 123).

Description	Use this function to enter the measured value for the switch-on point.
User entry	Signed floating-point number
Factory setting	0 m ³ /h
Additional information	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).</p> <p> When using a hysteresis: Switch-on value > Switch-off value.</p> <p><i>Dependency</i></p> <p> The unit is dependent on the process variable selected in the Assign limit parameter (→ 124).</p>

Switch-on delay



Navigation	  Expert → Output → Relay output 1 to n → Switch-on delay (0814-1 to n)
Prerequisite	In the Relay output function parameter (→ 123), the Limit option is selected.
Description	Use this function to enter a delay time for switching on the switch output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode



Navigation	  Expert → Output → Relay output 1 to n → Failure mode (0811-1 to n)
Description	Use this function to select the failure mode of the relay output in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed
Factory setting	Open

Additional information*Selection*

■ Actual status

In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the relay output. The **Actual status** option behaves in the same way as the current input value.

■ Open

In the event of a device alarm, the relay output's transistor is set to **non-conductive**.

■ Closed

In the event of a device alarm, the relay output's transistor is set to **conductive**.

Switch status

Navigation Expert → Output → Relay output 1 to n → Switch status (0801-1 to n)**Description**

Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information*User interface*

■ Open

The relay output is not conductive.

■ Closed

The relay output is conductive.

Powerless relay status

**Navigation** Expert → Output → Relay output 1 to n → Powerless relay (0816-1 to n)**Description**

Use this function to select the quiescent state for the relay output.

Selection

- Open
- Closed

Factory setting

Open

Additional information*Selection*

■ Open

The relay output is not conductive.

■ Closed

The relay output is conductive.

3.5.4 "Double pulse output" submenu

Navigation

Expert → Output → Double pulse out

► Double pulse output	
Master terminal number (0981)	→ 129
Slave terminal number (0990)	→ 130
Signal mode (0991)	→ 130
Assign pulse output 1 (0982-1)	→ 130
Value per pulse (0983)	→ 130
Pulse width (0986)	→ 131
Phase shift (0992)	→ 131
Measuring mode (0984)	→ 131
Failure mode (0985)	→ 132
Pulse output (0987)	→ 133
Invert output signal (0993)	→ 133

Master terminal number

Navigation

Expert → Output → Double pulse out → Master term. no. (0981)

Description

Displays the master terminal number for the double pulse output.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information

"Not used" option

The double pulse output does not use any terminal numbers.

Slave terminal number

Navigation   Expert → Output → Double pulse out → Slave term. no. (0990)

Description Displays the slave terminal number for the double pulse output.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information "Not used" option
The double pulse output does not use any terminal numbers.

Signal mode



Navigation   Expert → Output → Double pulse out → Signal mode (0991)

Description Use this function to select the signal mode for the double pulse output.

Selection

- Passive
- Active *
- Passive NAMUR

Factory setting Passive

Assign pulse output 1



Navigation   Expert → Output → Double pulse out → Assign pulse 1 (0982-1)

Description Use this function to select a process variable for the double pulse output.

Selection

- Off
- Volume flow
- Mass flow

Factory setting Off

Value per pulse



Navigation   Expert → Output → Double pulse out → Value per pulse (0983)

Description Use this function to enter the value for the measured value that a pulse is equivalent to.

* Visibility depends on order options or device settings

User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter
Additional information	<p><i>User entry</i></p> <p>Weighting of the pulse output with a quantity.</p> <p>The lower the pulse value, the</p> <ul style="list-style-type: none">▪ better the resolution.▪ the higher the frequency of the pulse response.

Pulse width



Navigation	Expert → Output → Double pulse out → Pulse width (0986)
Description	Use this function to enter the duration of the output pulse.
User entry	0.5 to 2 000 ms
Factory setting	0.5 ms
Additional information	For a detailed description and example: Pulse width parameter (→ 108)

Phase shift



Navigation	Expert → Output → Double pulse out → Phase shift (0992)
Description	Use this function to select the degree of phase shift.
Selection	<ul style="list-style-type: none">▪ 90°▪ 180°
Factory setting	90°
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none">▪ 90° Phase shift by a quarter period.▪ 180° Phase shift by a half period, which is equivalent to a phase reversal.

Measuring mode



Navigation	Expert → Output → Double pulse out → Measuring mode (0984)
Description	Use this function to select the measuring mode for the double pulse output.

Selection

- Forward flow
- Forward/Reverse flow
- Reverse flow
- Reverse flow compensation

Factory setting

Forward flow

Additional information*Selection*

- Forward flow
Positive flow is output, negative flow is not output.
- Forward/Reverse flow
Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow.
- Reverse flow
Negative flow is output, positive flow is not output.
- Reverse flow compensation
The flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

 For a detailed description of the options available, see the **Measuring mode** parameter (→ 96)

Examples

 For a detailed description of the configuration examples, see the **Measuring mode** parameter (→ 96)

Failure mode**Navigation**

 Expert → Output → Double pulse out → Failure mode (0985)

Description

Use this function to select the failure mode of the double pulse output in the event of a device alarm.

Selection

- Actual value
- No pulses

Factory setting

No pulses

Additional information*Description*

The dictates of safety render it advisable to ensure that the double pulse output shows a predefined behavior in the event of a device alarm.

Selection

- Actual value
In the event of a device alarm, the double pulse output continues on the basis of the current flow measurement. The fault is ignored.
- No pulses
In the event of a device alarm, the double pulse output is "switched off".

NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The **Actual value** option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Pulse output

Navigation

  Expert → Output → Double pulse out → Pulse output (0987)

Description

Displays the pulse frequency of the double pulse output which is currently output.

User interface

Positive floating-point number

Additional information

 For a detailed description and example: **Pulse output** parameter (→  52)

Invert output signal


Navigation

  Expert → Output → Double pulse out → Invert outp.sig. (0993)

Description

Use this function to select whether to invert the output signal.

Selection

- No
- Yes


Factory setting

No

Additional information


Selection

No option (passive - negative)

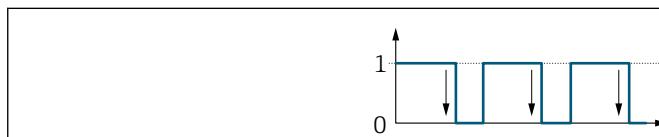

A0026693

Yes option (passive - positive)

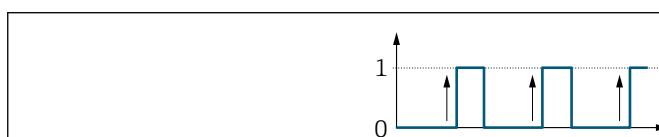


A0026692

3.6 "Communication" submenu

Navigation

  Expert → Communication

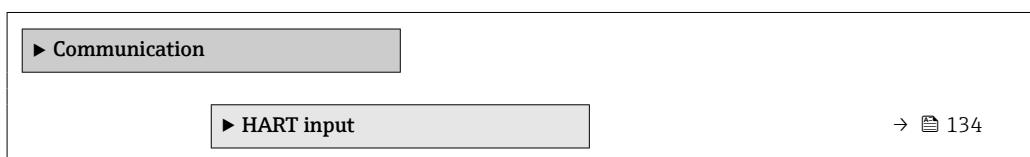

▶ HART output	→ 140
▶ Web server	→ 155
▶ Diagnostic configuration	→ 159
▶ WLAN settings	→ 166

3.6.1 "HART input" submenu

Navigation

Expert → Communication → HART input

▶ HART input	
▶ Configuration	→ 134
▶ Input	→ 139

"Configuration" submenu

Navigation

Expert → Communication → HART input → Configuration

▶ Configuration	
Capture mode (7001)	→ 135
Device ID (7007)	→ 135
Device type (7008)	→ 135
Manufacturer ID (7009)	→ 136
Burst command (7006)	→ 136
Slot number (7010)	→ 137
Timeout (7005)	→ 137
Failure mode (7011)	→ 138
Failure value (7012)	→ 138

Capture mode

Navigation Expert → Communication → HART input → Configuration → Capture mode (7001)

Description Use this function to select the capture mode via burst or master communication.

Selection

- Off
- Burst network
- Master network

Factory setting Off

Additional information "Burst network" option

The device records data transmitted via burst in the network.

An external pressure sensor must be in the burst mode.

"Master network" option

In this case, the device must be located in a HART network in which a HART master (control) queries the measured values of the up to 64 network participants. The device reacts only to the responses of a specific device in the network. Device ID, device type, manufacturer ID and the HART commands used by the master must be defined.

Device ID

Navigation Expert → Communication → HART input → Configuration → Device ID (7007)

Prerequisite The **Master network** option is selected in the **Capture mode** parameter (→ 135).

Description Use this function to enter the device ID of the HART slave device whose data are to be recorded.

User entry 6-digit value:

- Via local operation: enter as hexadecimal or decimal number
- Via operating tool: enter as decimal number

Factory setting 0

Additional information In addition to the device ID and manufacturer ID, the device type is part of the unique ID. Each HART device is uniquely identified by the unique device ID.

Device type

Navigation Expert → Communication → HART input → Configuration → Device type (7008)

Prerequisite In the **Capture mode** parameter (→ 135), the **Master network** option is selected.

Description	Use this function to enter the device type of the HART slave device whose data are to be recorded.
User entry	2-digit hexadecimal number
Factory setting	0x00
Additional information	 In addition to the device ID and manufacturer ID, the device type is part of the unique ID. Each HART device is uniquely identified by the unique device ID.

Manufacturer ID



Navigation	 Expert → Communication → HART input → Configuration → Manufacturer ID (7009)
Prerequisite	The Master network option is selected in the Capture mode parameter (→ 135).
Description	Use this function to enter the manufacturer ID of the HART slave device whose data are to be recorded.
User entry	2-digit value: <ul style="list-style-type: none">▪ Via local operation: enter as hexadecimal or decimal number▪ Via operating tool: enter as decimal number
Factory setting	0
Additional information	 In addition to the device ID and manufacturer ID, the device type is part of the unique ID. Each HART device is uniquely identified by the unique device ID.

Burst command



Navigation	 Expert → Communication → HART input → Configuration → Burst command (7006)
Prerequisite	The Burst network option or the Master network option are selected in the Capture mode parameter (→ 135).
Description	Use this function to select the burst command to be recorded.
Selection	<ul style="list-style-type: none">▪ Command 1▪ Command 3▪ Command 9▪ Command 33
Factory setting	Command 1

Additional information*Selection*

- Command 1
Use this function to capture the primary variable.
- Command 3
Use this function to capture the dynamic HART variables and the current.
- Command 9
Use this function to capture the dynamic HART variables including the associated status.
- Command 33
Use this function to capture the dynamic HART variables including the associated unit.

Slot number**Navigation**

Expert → Communication → HART input → Configuration → Slot number (7010)

Prerequisite

The **Burst network** option or the **Master network** option is selected in the **Capture mode** parameter (→ [135](#)).

Description

Use this function to enter the position of the process variable to be recorded in the burst command.

User entry

1 to 8

Factory setting

1

Additional information*User entry*

Slot	Command			
	1	3	9	33
1	PV	PV	HART variable (slot 1)	HART variable (slot 1)
2	–	SV	HART variable (slot 2)	HART variable (slot 2)
3	–	TV	HART variable (slot 3)	HART variable (slot 3)
4	–	QV	HART variable (slot 4)	HART variable (slot 4)
5	–	–	HART variable (slot 5)	–
6	–	–	HART variable (slot 6)	–
7	–	–	HART variable (slot 7)	–
8	–	–	HART variable (slot 8)	–

Timeout**Navigation**

Expert → Communication → HART input → Configuration → Timeout (7005)

Prerequisite

The **Burst network** option or the **Master network** option is selected in the **Capture mode** parameter (→ [135](#)).

Description

Use this function to enter the maximum permitted interval between two HART frames.

User entry

1 to 120 s

Factory setting 5 s

Additional information *Description*

-  If the interval is exceeded, the measuring device displays the **F882 Input signal** diagnostic message.

Failure mode



Navigation  Expert → Communication → HART input → Configuration → Failure mode (7011)

Prerequisite In the **Capture mode** parameter (→ 135), the **Burst network** option or **Master network** option is selected.

Description Use this function to select the device behavior if no data are recorded within the maximum permitted interval.

Selection

- Alarm
- Last valid value
- Defined value

Factory setting Alarm

Additional information *Options*

- Alarm
An error message is set.
- Last valid value
The last valid measured value is used.
- Defined value
A user-defined measured value is used: (**Failure value** parameter (→ 138)).

Failure value



Navigation  Expert → Communication → HART input → Configuration → Failure value (7012)

Prerequisite The following conditions are met:

- In the **Capture mode** parameter (→ 135), the **Burst network** option or **Master network** option is selected.
- In the **Failure mode** parameter (→ 138), the **Defined value** option is selected.

Description Use this function to enter the measured value to be used if no data are recorded within the maximum permitted interval.

User entry Signed floating-point number


Factory setting 0

Additional information*Dependency*

The unit is taken from the **Pressure unit** parameter

"Input" submenu*Navigation*

Expert → Communication → HART input → Input

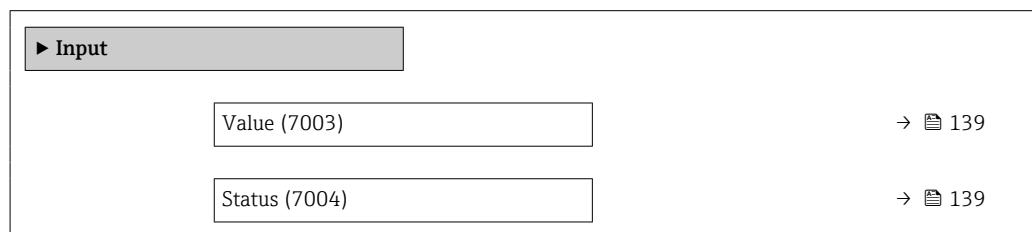**Value****Navigation**

Expert → Communication → HART input → Input → Value (7003)

Description

Displays the value of the device variable recorded by the HART input.

User interface

Signed floating-point number

Status**Navigation**

Expert → Communication → HART input → Input → Status (7004)

Description

Displays the value of the device variable recorded by the HART input in accordance with the HART specification.

User interface

- Manual/Fixed
- Good
- Poor accuracy
- Bad


Additional information*Description*

If the measuring device reads in an invalid pressure measured value, the **XF882 Input signal** diagnostic message is output

3.6.2 "HART output" submenu

Navigation


Expert → Communication → HART output

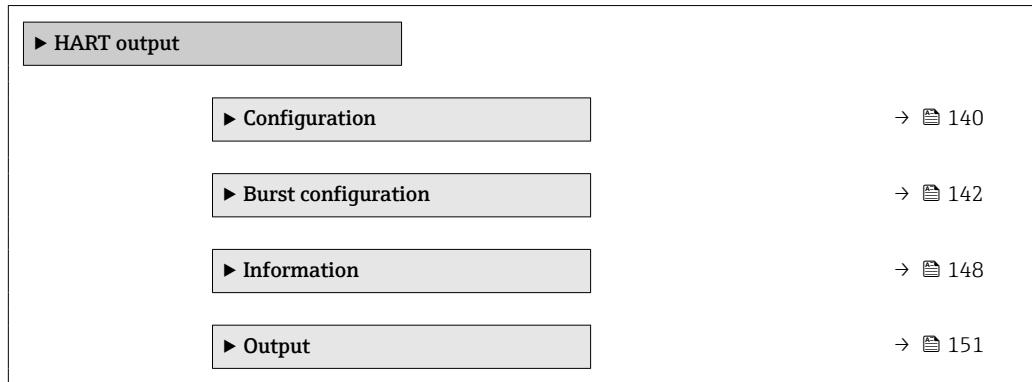

"Configuration" submenu

Navigation

Expert → Communication → HART output → Configuration

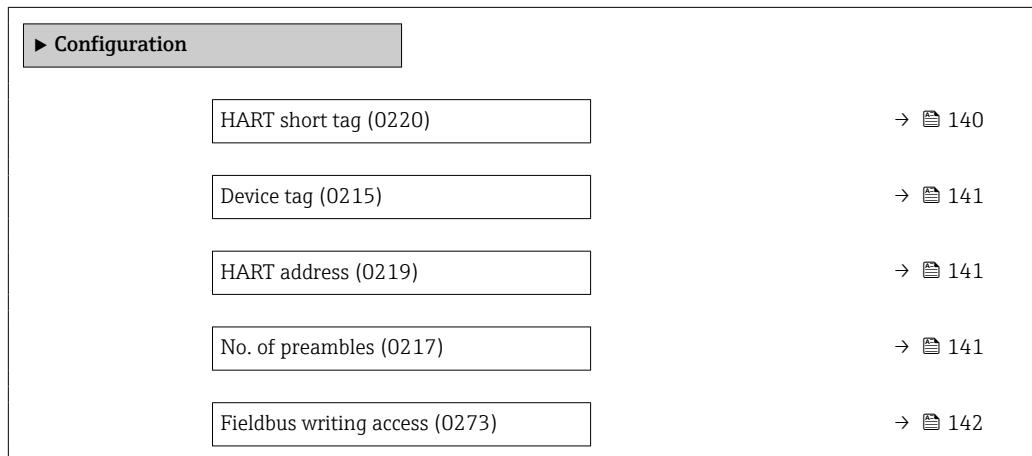

HART short tag



Navigation

Expert → Communication → HART output → Configuration → HART short tag (0220)

Description

Use this function to enter a brief description for the measuring point. This can be edited and displayed via HART protocol or using the local display.

User entry

Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation marks, @, %).

Factory setting

PROSONIC

Device tag

Navigation	Expert → Communication → HART output → Configuration → Device tag (0215)
Description	Use this function to enter the name for the measuring point.
User entry	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).
Factory setting	Prosonic Flow

HART address

Navigation	Expert → Communication → HART output → Configuration → HART address (0219)
Description	Use this function to enter the address via which the data exchange takes place via HART protocol.
User entry	0 to 63
Factory setting	0
Additional information	<i>Description</i> For addressing in a HART Multidrop network, the Fixed current option must be set in the Current span parameter (→ 92) (current output 1).

No. of preambles

Navigation	Expert → Communication → HART output → Configuration → No. of preambles (0217)
Description	Use this function to enter the number of preambles in the HART protocol.
User entry	2 to 20
Factory setting	5
Additional information	<i>User entry</i> As every modem component can "swallow" a byte, 2-byte preambles at least must be defined.

Fieldbus writing access

Navigation	Expert → Communication → HART output → Configuration → Fieldb.writ.acc. (0273)
Description	Use this function to restrict access to the measuring device via fieldbus (HART interface).
Selection	<ul style="list-style-type: none">■ Read + write■ Read only
Factory setting	Read + write
Additional information	<p><i>Description</i></p> <p>If read and/or write protection is enabled, the parameter can only be controlled and reset via local operation. Access is no longer possible via operating tools.</p> <p><i>Selection</i></p> <ul style="list-style-type: none">■ Read + write The parameters are readable and writable.■ Read only The parameters are only readable.

"Burst configuration 1 to n" submenu

Navigation Expert → Communication → HART output → Burst config.
→ Burst config. 1 to n

► **Burst configuration**

Burst mode 1 to n

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Burst mode 1 to n (2032-1 to n)
Description	Use this function to select whether to activate the HART burst mode for burst message X.
Selection	<ul style="list-style-type: none">■ Off■ On
Factory setting	Off
Additional information	<p><i>Options</i></p> <ul style="list-style-type: none">■ Off The measuring device transmits data only when requested by the HART master.■ On The measuring device transmits data regularly without being requested.

Burst command 1 to n

Navigation Expert → Communication → HART output → Burst config. → Burst config. 1 to n
→ Burst command 1 to n (2031–1 to n)

Description Use this function to select the HART command that is sent to the HART master.

- Selection**
- Command 1
 - Command 2
 - Command 3
 - Command 9
 - Command 33
 - Command 48

Factory setting Command 2

- Additional information** *Selection*
- Command 1
Read out the primary variable.
 - Command 2
Read out the current and the main measured value as a percentage.
 - Command 3
Read out the dynamic HART variables and the current.
 - Command 9
Read out the dynamic HART variables including the related status.
 - Command 33
Read out the dynamic HART variables including the related unit.
 - Command 48
Read out the complete device diagnostics.

"Command 33" option

The HART device variables are defined via Command 107.

The following measured variables (HART device variables) can be read out:

- Volume flow
- Mass flow
- Temperature *
- Totalizer 1...3
- Sound velocity
- Flow velocity
- Acceptance rate *
- Turbulence *
- Signal strength *
- Signal to noise ratio *
- Percent of range
- Measured current
- Primary variable (PV)

* Visibility depends on order options or device settings

- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Commands

- Information about the defined details of the command: HART specifications
- The measured variables (HART device variables) are assigned to the dynamic variables in the **Output** submenu (→ 90).

Burst variable 0**Navigation**

Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Burst variable 0 (2033)

Description

For HART command 9 and 33: select the HART device variable or the process variable.

Selection

- Volume flow
- Mass flow
- Flow velocity
- Sound velocity
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Acceptance rate *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Percent of range
- Measured current
- Current input 1 *
- Current input 2 *
- Current input 3 *
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)
- Not used
- Density *
- HART input
- Electronics temperature *
- Temperature

Factory setting

Volume flow

Additional information

Selection

The **Not used** option is set if a burst message is not configured.

* Visibility depends on order options or device settings

Burst variable 1

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Burst variable 1 (2034)
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	See the Burst variable 0 parameter (→ 144).
Factory setting	Not used

Burst variable 2

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Burst variable 2 (2035)
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	See the Burst variable 0 parameter (→ 144).
Factory setting	Not used

Burst variable 3

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Burst variable 3 (2036)
Description	For HART command 9 and 33: select the HART device variable or the process variable.
Selection	See the Burst variable 0 parameter (→ 144).
Factory setting	Not used

Burst variable 4

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Burst variable 4 (2037)
Description	For HART command 9: select the HART device variable or the process variable.
Selection	See the Burst variable 0 parameter (→ 144).
Factory setting	Not used

Burst variable 5

Navigation Expert → Communication → HART output → Burst config. → Burst config. 1 to n
→ Burst variable 5 (2038)

Description For HART command 9: select the HART device variable or the process variable.

Selection See the **Burst variable 0** parameter (→ 144).

Factory setting Not used

Burst variable 6

Navigation Expert → Communication → HART output → Burst config. → Burst config. 1 to n
→ Burst variable 6 (2039)

Description For HART command 9: select the HART device variable or the process variable.

Selection See the **Burst variable 0** parameter (→ 144).

Factory setting Not used

Burst variable 7

Navigation Expert → Communication → HART output → Burst config. → Burst config. 1 to n
→ Burst variable 7 (2040)

Description For HART command 9: select the HART device variable or the process variable.

Selection See the **Burst variable 0** parameter (→ 144).

Factory setting Not used

Burst trigger mode

Navigation Expert → Communication → HART output → Burst config. → Burst config. 1 to n
→ Trigger mode (2044–1 to n)

Description Use this function to select the event that triggers burst message X.

Selection

- Continuous
- Window
- Rising
- Falling
- On change

Factory setting	Continuous
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Continuous The message is sent continuously, at least at intervals corresponding to the time frame specified in the Burst min period parameter (→ 147). ■ Window The message is sent if the specified measured value has changed by the value in the Burst trigger level parameter (→ 147). ■ Rising The message is sent if the specified measured value exceeds the value in the Burst trigger level parameter (→ 147). ■ Falling The message is sent if the specified measured value drops below the value in the Burst trigger level parameter (→ 147). ■ On change The message is sent if a measured value changes in the burst message.

Burst trigger level

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Trigger level (2043–1 to n)
Description	For entering the burst trigger value.
User entry	Signed floating-point number
Additional information	<p><i>Description</i></p> <p>Together with the option selected in the Burst trigger mode parameter (→ 146) the burst trigger value determines the time of burst message X.</p>

Min. update period

Navigation	Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Min. upd. per. (2042–1 to n)
Description	Use this function to enter the minimum time span between two burst commands of burst message X.
User entry	Positive integer
Factory setting	1 000 ms

Max. update period

Navigation	 Expert → Communication → HART output → Burst config. → Burst config. 1 to n → Max. upd. per. (2041-1 to n)
Description	Use this function to enter the maximum time span between two burst commands of burst message X.
User entry	Positive integer
Factory setting	2 000 ms

"Information" submenu

Navigation  Expert → Communication → HART output → Information

 Information	
Device revision (0204)	→  148
Device ID (0221)	→  149
Device type (0209)	→  149
Manufacturer ID (0259)	→  149
HART revision (0205)	→  150
HART descriptor (0212)	→  150
HART message (0216)	→  150
Hardware revision (0206)	→  150
Software revision (0224)	→  151
HART date code (0202)	→  151

Device revision

Navigation	 Expert → Communication → HART output → Information → Device revision (0204)
Description	Displays the device revision with which the device is registered with the HART Communication Foundation.

User interface 2-digit hexadecimal number

Factory setting 0x5D

Additional information *Description*

 The device revision is needed to assign the appropriate device description file (DD) to the device.

Device ID

Navigation   Expert → Communication → HART output → Information → Device ID (0221)

Description Use this function to view the device ID for identifying the measuring device in a HART network.

User interface 6-digit hexadecimal number

Additional information *Description*

 In addition to the device type and manufacturer ID, the device ID is part of the unique ID. Each HART device is uniquely identified by the unique device ID.

Device type

Navigation   Expert → Communication → HART output → Information → Device type (0209)

Description Displays the device type with which the measuring device is registered with the HART Communication Foundation.

User interface 2-digit hexadecimal number

Factory setting 0x5D (for Prosonic Flow P 500)

Additional information *Description*

 The device type is specified by the manufacturer. It is needed to assign the appropriate device description file (DD) to the device.

Manufacturer ID

Navigation   Expert → Communication → HART output → Information → Manufacturer ID (0259)

Description Use this function to view the manufacturer ID with which the measuring device is registered with the HART Communication Foundation.

User interface 2-digit hexadecimal number

Factory setting 0x11 (for Endress+Hauser)

HART revision

Navigation   Expert → Communication → HART output → Information → HART revision (0205)

Description Use this function to display the HART protocol revision of the measuring device.

User interface 5 to 7

Factory setting 7

HART descriptor



Navigation   Expert → Communication → HART output → Information → HART descriptor (0212)

Description Use this function to enter a description for the measuring point. This can be edited and displayed via HART protocol or using the local display.

User entry Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting Pros.Flow300/500

HART message



Navigation   Expert → Communication → HART output → Information → HART message (0216)

Description Use this function to enter a HART message which is sent via the HART protocol when requested by the master.

User entry Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting Pros.Flow300/500

Hardware revision

Navigation   Expert → Communication → HART output → Information → Hardware rev. (0206)

Description Displays the hardware revision of the measuring device.

User interface 0 to 255

Factory setting 1

Software revision

Navigation	Expert → Communication → HART output → Information → Software rev. (0224)
Description	Displays the software revision of the measuring device.
User interface	0 to 255
Factory setting	2

HART date code

Navigation	Expert → Communication → HART output → Information → HART date code (0202)
Description	Use this function to enter the date information for individual use.
User entry	Date entry format: yyyy-mm-dd
Factory setting	2009-07-20
Additional information	<p><i>Example</i></p> <p>Device installation date</p>

"Output" submenu

Navigation Expert → Communication → HART output → Output

► Output	
Assign PV (0234)	→ 152
Primary variable (PV) (0201)	→ 152
Assign SV (0235)	→ 152
Secondary variable (SV) (0226)	→ 153
Assign TV (0236)	→ 153
Tertiary variable (TV) (0228)	→ 154
Assign QV (0237)	→ 154
Quaternary variable (QV) (0203)	→ 155

Assign PV**Navigation**

Expert → Communication → HART output → Output → Assign PV (0234)

Description

Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).

Selection

- Off *
- Volume flow
- Mass flow
- Sound velocity
- Flow velocity
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Acceptance rate *
- Temperature *
- Density *
- Electronics temperature

Factory setting

Volume flow

Primary variable (PV)**Navigation**

Expert → Communication → HART output → Output → Primary var (PV) (0201)

Description

Displays the current measured value of the primary dynamic variable (PV).

User interface

Signed floating-point number

Additional information

User interface

The measured value displayed depends on the process variable selected in the **Assign PV** parameter (→ 152).

Dependency

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

Assign SV**Navigation**

Expert → Communication → HART output → Output → Assign SV (0235)

Description

Use this function to select a measured variable (HART device variable) for the secondary dynamic variable (SV).

* Visibility depends on order options or device settings

Selection	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity * ■ Temperature ■ Signal strength * ■ Signal to noise ratio * ■ Turbulence * ■ Acceptance rate * ■ Electronics temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current input 1 * ■ Current input 2 * ■ Current input 3 * ■ HART input * ■ Density
Factory setting	Totalizer 1

Secondary variable (SV)

Navigation	  Expert → Communication → HART output → Output → Second.var(SV) (0226)
Description	Displays the current measured value of the secondary dynamic variable (SV).
User interface	Signed floating-point number
Additional information	<p><i>User interface</i></p> <p>The measured value displayed depends on the process variable selected in the Assign SV parameter (→  152).</p> <p><i>Dependency</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→  54).</p>

Assign TV



Navigation	  Expert → Communication → HART output → Output → Assign TV (0236)
Description	Use this function to select a measured variable (HART device variable) for the tertiary (third) dynamic variable (TV).
Selection	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity

* Visibility depends on order options or device settings

- Temperature *
- Signal strength *
- Signal to noise ratio *
- Turbulence
- Acceptance rate
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Current input 1 *
- Current input 2 *
- Current input 3 *
- HART input *
- Density *

Factory setting

Totalizer 2

Tertiary variable (TV)

Navigation

Expert → Communication → HART output → Output → Tertiary var(TV) (0228)

Description

Displays the current measured value of the tertiary dynamic variable (TV).

User interface

Signed floating-point number

Additional information

User interface

The measured value displayed depends on the process variable selected in the **Assign TV** parameter (→ 153).

Dependency

The unit of the displayed measured value is taken from the **System units** submenu (→ 54).

Assign QV



Navigation

Expert → Communication → HART output → Output → Assign QV (0237)

Description

Use this function to select a measured variable (HART device variable) for the quaternary (fourth) dynamic variable (QV).

Selection

- Volume flow
- Mass flow
- Flow velocity
- Sound velocity *
- Temperature *
- Signal strength *
- Signal to noise ratio *
- Turbulence *

* Visibility depends on order options or device settings

- Acceptance rate *
- Electronics temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Current input 1 *
- Current input 2 *
- Current input 3 *
- HART input *
- Density

Factory setting Totalizer 3

Quaternary variable (QV)

Navigation	 Expert → Communication → HART output → Output → Quaterna.var(QV) (0203)
Description	Displays the current measured value of the quaternary dynamic variable (QV).
User interface	Signed floating-point number
Additional information	<p><i>User interface</i></p> <p>The measured value displayed depends on the process variable selected in the Assign QV parameter (→  154).</p> <p><i>Dependency</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→  54).</p>

3.6.3 "Web server" submenu

Navigation  Expert → Communication → Web server

 Web server	
 Web server language (7221)	→  156
 MAC address (7214)	→  156
 DHCP client (7212)	→  157
 IP address (7209)	→  157
 Subnet mask (7211)	→  157

* Visibility depends on order options or device settings

Default gateway (7210)	→ 158
Web server functionality (7222)	→ 158
Login page (7273)	→ 158

Web server language

Navigation

Expert → Communication → Web server → Webserv.language (7221)

Description

Use this function to select the Web server language setting.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- Bahasa Indonesia
- tiếng Việt (Vietnamese)
- čeština (Czech)

Factory setting

English

MAC address

Navigation

Expert → Communication → Web server → MAC Address (7214)

Description

Displays the MAC⁵⁾ address of the measuring device.

User interface

Unique 12-digit character string comprising letters and numbers

Factory setting

Each measuring device is given an individual address.

Additional information

Example

For the display format
00:07:05:10:01:5F

5) Media Access Control

DHCP client**Navigation**

Expert → Communication → Web server → DHCP client (7212)

Description

Use this function to activate and deactivate the DHCP client functionality.

Selection

- Off
- On

Factory setting

Off

Additional information*Result*

If the DHCP client functionality of the Web server is activated, the IP address (→ 157), Subnet mask (→ 157) and Default gateway (→ 158) are set automatically.



- Identification is via the MAC address of the measuring device.
- The IP address (→ 157) in the **IP address** parameter (→ 157) is ignored as long as the **DHCP client** parameter (→ 157) is active. This is also the case, in particular, if the DHCP server cannot be reached. The IP address (→ 157) in the parameter of the same name is only used if the **DHCP client** parameter (→ 157) is inactive.

IP address**Navigation**

Expert → Communication → Web server → IP address (7209)

Description

Display or enter the IP address of the Web server integrated in the measuring device.

User entry

4 octet: 0 to 255 (in the particular octet)

Factory setting

192.168.1.212

Subnet mask**Navigation**

Expert → Communication → Web server → Subnet mask (7211)

Description

Display or enter the subnet mask.

User entry

4 octet: 0 to 255 (in the particular octet)

Factory setting

255.255.255.0

Default gateway

Navigation Expert → Communication → Web server → Default gateway (7210)

Description Display or enter the Default gateway (→ 158).

User entry 4 octet: 0 to 255 (in the particular octet)

Factory setting 0.0.0.0

Web server functionality

Navigation Expert → Communication → Web server → Webserver funct. (7222)

Description Use this function to switch the Web server on and off.

Selection

- Off
- HTML Off
- On

Factory setting On

Additional information *Description*

Once disabled, the Web server functionality can only be re-enabled via or the operating tool FieldCare.

Selection

Option	Description
Off	<ul style="list-style-type: none"> ▪ The web server is completely disabled. ▪ Port 80 is locked.
HTML Off	The HTML version of the web server is not available.
On	<ul style="list-style-type: none"> ▪ The complete functionality of the web server is available. ▪ JavaScript is used. ▪ The password is transferred in an encrypted state. ▪ Any change to the password is also transferred in an encrypted state.

Login page

Navigation Expert → Communication → Web server → Login page (7273)

Description Use this function to select the format of the login page.

Selection

- Without header
- With header

Factory setting

With header

3.6.4 "Diagnostic configuration" submenu

 For a list of all the diagnostic events, see the Operating Instructions for the device
→  7

Assign a category to the particular diagnostic event:

Category	Meaning
Failure (F)	A device error is present. The measured value is no longer valid.
Function check (C)	The device is in service mode (e.g. during a simulation).
Out of specification (S)	The device is being operated: ▪ Outside its technical specification limits (e.g. outside the process temperature range) ▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
Maintenance required (M)	Maintenance is required. The measured value is still valid.
No effect (N)	Has no effect on the condensed status ¹⁾ .

1) Condensed status according to NAMUR recommendation NE107

Navigation

  Expert → Communication → Diag. config.

► Diagnostic configuration

Event category 160 (0272)	→  160
Event category 441 (0210)	→  160
Event category 444 (0211)	→  161
Event category 442 (0230)	→  161
Event category 443 (0231)	→  162
Event category 543 (0276)	→  162
Event category 832 (0218)	→  162
Event category 833 (0225)	→  163
Event category 840 (0267)	→  163
Event category 842 (0295)	→  164
Event category 931 (0297)	→  165

Event category 930 (0296)	→ 164
Event category 870 (0250)	→ 165

Event category 160 (Signal path switched off)



Navigation

Expert → Communication → Diag. config. → Event category 160 (0272)

Description

Use this function to select a category for the **160 Signal path switched off** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting

Maintenance required (M)

Additional information

For a detailed description of the event categories available for selection: → 159

Event category 881 (Sensor signal path 1 to n)



Navigation

Expert → Communication → Diag. config. → Event category 881 (0268)

Description

Use this function to select a category for the **881 Sensor signal path 1 to n** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting

Maintenance required (M)

Additional information

For a detailed description of the event categories available for selection: → 159

Event category 441 (Current output 1 to n)



Navigation

Expert → Communication → Diag. config. → Event category 441 (0210)

Description

Use this function to select a category for the **441 Current output 1 to n** diagnostic message.

Selection	<ul style="list-style-type: none">■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ No effect (N)
Factory setting	Out of specification (S)
Additional information	 For a detailed description of the event categories available for selection: → 159

Event category 444 (Current input 1 to n)

Navigation	 Expert → Communication → Diag. config. → Event category 444 (0211)
Prerequisite	The current input is available.
Description	Use this function to select a category for the 444 Current input 1 to n diagnostic message.
Selection	<ul style="list-style-type: none">■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ No effect (N)
Factory setting	Out of specification (S)
Additional information	<i>Selection</i>  For a detailed description of the event categories available for selection: → 159

Event category 442 (Frequency output 1 to n)

Navigation	 Expert → Communication → Diag. config. → Event category 442 (0230)
Prerequisite	The pulse/frequency/switch output is available.
Description	Use this function to select a category for the 442 Frequency output 1 to n diagnostic message.
Selection	<ul style="list-style-type: none">■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ No effect (N)
Factory setting	Out of specification (S)
Additional information	 For a detailed description of the event categories available for selection: → 159

Event category 443 (Pulse output 1 to n)**Navigation**

Expert → Communication → Diag. config. → Event category 443 (0231)

Prerequisite

The pulse/frequency/switch output is available.

Description

Use this function to select a category for the **443 Pulse output 1 to n** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting

Out of specification (S)

Additional information

For a detailed description of the event categories available for selection: → [159](#)

Event category 543 (Double pulse output)**Navigation**

Expert → Communication → Diag. config. → Event category 543 (0276)

Description

Use this option to select a category for the **543 Double pulse output** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting

Out of specification (S)

Additional information

For a detailed description of the event categories available for selection: → [159](#)

Event category 832 (Electronics temperature too high)**Navigation**

Expert → Communication → Diag. config. → Event category 832 (0218)

Description

Use this function to select a category for the **832 Electronics temperature too high** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting Out of specification (S)

Additional information *Selection*



For a detailed description of the event categories available for selection: → [159](#)

Event category 833 (Electronics temperature too low)

Navigation Expert → Communication → Diag. config. → Event category 833 (0225)

Description Use this option to select a category for the **833 Electronics temperature too low** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting Out of specification (S)

Additional information *Selection*



For a detailed description of the event categories available for selection: → [159](#)

Event category 841 (Sensor range)

Navigation Expert → Communication → Diag. config. → Event category 840 (0267)

Description Use this function to select a category for the **841 Sensor range** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting Out of specification (S)

Additional information



For a detailed description of the event categories available for selection: → [159](#)

Event category 953 (Asymmetry noise signal too high path 1 to n) 

Navigation	 Expert → Communication → Diag. config. → Event category 953 (0292)
Description	Use this function to select a category for the △M953 Asymmetry noise signal too high path 1 to n diagnostic message.
Selection	<ul style="list-style-type: none">▪ Failure (F)▪ Function check (C)▪ Out of specification (S)▪ Maintenance required (M)▪ No effect (N)
Factory setting	Maintenance required (M)
Additional information	<i>Selection</i>  For a detailed description of the event categories available for selection: →  159

Event category 842 (Process limit) 

Navigation	 Expert → Communication → Diag. config. → Event category 842 (0295)
Description	Use this function to select a category for the 842 Process limit diagnostic message.
Selection	<ul style="list-style-type: none">▪ Failure (F)▪ Function check (C)▪ Out of specification (S)▪ Maintenance required (M)▪ No effect (N)
Factory setting	Out of specification (S)
Additional information	<i>Selection</i>  For a detailed description of the event categories available for selection: →  159

Event category 930 (Process fluid) 

Navigation	 Expert → Communication → Diag. config. → Event category 930 (0296)
Description	Use this function to select a category for the △S930 Process fluid diagnostic message.
Selection	<ul style="list-style-type: none">▪ Failure (F)▪ Function check (C)▪ Out of specification (S)▪ Maintenance required (M)▪ No effect (N)

Factory setting Out of specification (S)

Additional information *Selection*



For a detailed description of the event categories available for selection: → [159](#)

Event category 931 (Process fluid)



Navigation Expert → Communication → Diag. config. → Event category 931 (0297)

Description Use this function to select a category for the **△S931 Process fluid** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting Out of specification (S)

Additional information *Selection*



For a detailed description of the event categories available for selection: → [159](#)

Event category 870 (Measuring inaccuracy increased)



Navigation Expert → Communication → Diag. config. → Event category 870 (0250)

Description Use this function to select a category for the **870 Measuring inaccuracy increased** diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

Factory setting Out of specification (S)

Additional information *Selection*



For a detailed description of the event categories available for selection: → [159](#)

3.6.5 "WLAN settings" wizard

Navigation

Expert → Communication → WLAN settings

► WLAN settings	
WLAN (2702)	→ 167
WLAN mode (2717)	→ 167
SSID name (2714)	→ 167
Network security (2705)	→ 167
Security identification (2718)	→ 168
User name (2715)	→ 168
WLAN password (2716)	→ 168
WLAN IP address (2711)	→ 169
WLAN MAC address (2703)	→ 169
WLAN subnet mask (2709)	→ 169
WLAN MAC address (2703)	→ 169
WLAN passphrase (2706)	→ 169
WLAN MAC address (2703)	→ 169
Assign SSID name (2708)	→ 170
SSID name (2707)	→ 170
2.4 GHz WLAN channel (2704)	→ 170
Select antenna (2713)	→ 171
Connection state (2722)	→ 171
Received signal strength (2721)	→ 171
WLAN IP address (2711)	→ 169
Gateway IP address (2719)	→ 172
IP address domain name server (2720)	→ 172

WLAN**Navigation**

Expert → Communication → WLAN settings → WLAN (2702)

Description

Use this function to enable and disable the WLAN connection.

Selection

- Disable
- Enable

Factory setting

Enable

WLAN mode**Navigation**

Expert → Communication → WLAN settings → WLAN mode (2717)

Description

Use this function to select the WLAN mode.

Selection

- WLAN access point
- WLAN Client

Factory setting

WLAN access point

SSID name**Navigation**

Expert → Communication → WLAN settings → SSID name (2714)

Prerequisite

The client is activated.

Description

Use this function to enter the user-defined SSID name (max. 32 characters) of the WLAN network.

User entry

–

Factory setting

–

Network security**Navigation**

Expert → Communication → WLAN settings → Network security (2705)

Description

Use this function to select the type of security for the WLAN interface.

Selection	<ul style="list-style-type: none"> ■ Unsecured ■ WPA2-PSK ■ EAP-PEAP with MSCHAPv2 * ■ EAP-PEAP MSCHAPv2 no server authentic. * ■ EAP-TLS *
------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Factory setting	WPA2-PSK
------------------------	----------

Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Unsecured Access the WLAN connection without identification. ■ WPA2-PSK Access the WLAN connection with a network key.
-------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Security identification

Navigation	  Expert → Communication → WLAN settings → Sec. identific. (2718)
-------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to select the security settings (download via the menu: Data Management > Security > Download WLAN).
--------------------	------------------------------------------------------------------------------------------------------------------------

User interface	<ul style="list-style-type: none"> ■ Trusted issuer certificate ■ Device certificate ■ Device private key
-----------------------	--------------------------------------------------------------------------------------------------------------------------------------------

User name



Navigation	  Expert → Communication → WLAN settings → User name (2715)
-------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to enter the username of the WLAN network.
--------------------	--------------------------------------------------------------

User entry	–
-------------------	---

Factory setting	–
------------------------	---

WLAN password



Navigation	  Expert → Communication → WLAN settings → WLAN password (2716)
-------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to enter the WLAN password for the WLAN network.
--------------------	--------------------------------------------------------------------

User entry	–
-------------------	---

Factory setting	–
------------------------	---

* Visibility depends on order options or device settings

WLAN IP address

Navigation Expert → Communication → WLAN settings → WLAN IP address (2711)

Description Use this function to enter the IP address of the measuring device's WLAN connection.

User entry 4 octet: 0 to 255 (in the particular octet)

Factory setting 192.168.1.212

WLAN MAC address

Navigation Expert → Communication → WLAN settings → WLAN MAC address (2703)

Description Displays the MAC⁶⁾ address of the measuring device.

User interface Unique 12-digit character string comprising letters and numbers

Factory setting Each measuring device is given an individual address.

Additional information *Example*

For the display format

00:07:05:10:01:5F

WLAN subnet mask

Navigation Expert → Communication → WLAN settings → WLAN subnet mask (2709)

Description Use this function to enter the subnet mask.

User entry 4 octet: 0 to 255 (in the particular octet)

Factory setting 255.255.255.0

WLAN passphrase

Navigation Expert → Communication → WLAN settings → WLAN passphrase (2706)

Prerequisite The **WPA2-PSK** option is selected in the **Security type** parameter (→ 167).

Description Use this function to enter the network key.

6) Media Access Control

User entry	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)
Factory setting	Serial number of the measuring device (e.g. L100A802000)

Assign SSID name

Navigation	Expert → Communication → WLAN settings → Assign SSID name (2708)
Description	Use this function to select which name is used for the SSID ⁷⁾ .
Selection	<ul style="list-style-type: none">■ Device tag■ User-defined
Factory setting	User-defined
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none">■ Device tag The device tag name is used as the SSID.■ User-defined A user-defined name is used as the SSID.

SSID name

Navigation	Expert → Communication → WLAN settings → SSID name (2707)
Prerequisite	<ul style="list-style-type: none">■ The User-defined option is selected in the Assign SSID name parameter (→ 170).■ The WLAN access point option is selected in the WLAN mode parameter (→ 167).
Description	Use this function to enter a user-defined SSID name.
User entry	Max. 32-digit character string comprising numbers, letters and special characters
Factory setting	EH_device designation_last 7 digits of the serial number (e.g. EH_Prosonic_Flow_500_A802000)

2.4 GHz WLAN channel

Navigation	Expert → Communication → WLAN settings → WLAN channel (2704)
Description	Use this function to enter the 2.4 GHz WLAN channel.
User entry	1 to 11

7) Service Set Identifier

Factory setting	6
------------------------	---

Additional information	<i>Description</i>
-------------------------------	--------------------



- It is only necessary to enter a 2.4 GHz WLAN channel if multiple WLAN devices are in use.
- If just one measuring device is in use, it is recommended to keep the factory setting.

Select antenna



Navigation	Expert → Communication → WLAN settings → Select antenna (2713)
-------------------	----------------------------------------------------------------

Description	Use this function to select whether the external or internal antenna is used for reception.
--------------------	---------------------------------------------------------------------------------------------

Selection	<ul style="list-style-type: none">▪ External antenna▪ Internal antenna
------------------	-----------------------------------------------------------------------------------------------

Factory setting	Internal antenna
------------------------	------------------

Connection state

Navigation	Expert → Communication → WLAN settings → Connection state (2722)
-------------------	------------------------------------------------------------------

Description	The connection status is displayed.
--------------------	-------------------------------------

User interface	<ul style="list-style-type: none">▪ Connected▪ Not connected
-----------------------	-------------------------------------------------------------------------------------

Factory setting	Not connected
------------------------	---------------

Received signal strength

Navigation	Expert → Communication → WLAN settings → Rec.sig.strength (2721)
-------------------	------------------------------------------------------------------

Description	Displays the signal strength received.
--------------------	----------------------------------------

User interface	<ul style="list-style-type: none">▪ Low▪ Medium▪ High
-----------------------	---------------------------------------------------------------------------------------

Factory setting	High
------------------------	------

Gateway IP address


Navigation	  Expert → Communication → WLAN settings → Gateway IP addr. (2719)
Description	Use this function to enter the IP address of the gateway.
User interface	Character string comprising numbers, letters and special characters (#15)
Factory setting	192.168.1.212

IP address domain name server

Navigation	  Expert → Communication → WLAN settings → IP address DNS (2720)
Description	Use this function to enter the IP address of the domain name server.
User interface	Character string comprising numbers, letters and special characters (#15)
Factory setting	192.168.1.212

3.7 "Application" submenu

Navigation   Expert → Application

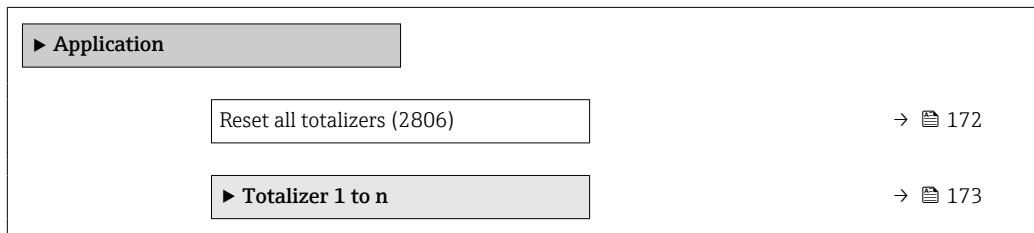

Reset all totalizers

Navigation	  Expert → Application → Reset all tot. (2806)
Description	Use this function to reset all totalizers to the value 0 and restart the totaling process. This deletes all the flow values previously totalized.
Selection	<ul style="list-style-type: none">■ Cancel■ Reset + totalize
Factory setting	Cancel

Additional information*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totaled.

3.7.1 "Totalizer 1 to n" submenu*Navigation*
 Expert → Application → Totalizer 1 to n

► **Totalizer 1 to n**

Assign process variable (0914-1 to n)	→  173
Unit totalizer 1 to n (0915-1 to n)	→  174
Totalizer operation mode (0908-1 to n)	→  175
Control Totalizer 1 to n (0912-1 to n)	→  175
Preset value 1 to n (0913-1 to n)	→  176
Failure mode (0901-1 to n)	→  176

Assign process variable**Navigation**
 Expert → Application → Totalizer 1 to n → Assign variable (0914-1 to n)
Description

Use this function to select a process variable for the Totalizer 1 to n.

Selection

- Off
- Volume flow
- Mass flow


Factory setting

Volume flow

Additional information*Description*

 If the option selected is changed, the device resets the totalizer to 0.

Selection

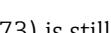If the **Off** option is selected, only **Assign process variable** parameter (→  173) is still displayed in the **Totalizer 1 to n** submenu. All other parameters in the submenu are hidden.

Unit totalizer 1 to n**Navigation**

Expert → Application → Totalizer 1 to n → Unit totalizer 1 to n (0915–1 to n)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ [173](#)) of the **Totalizer 1 to n** submenu.

Description

Use this function to select the process variable unit for the Totalizer 1 to n (→ [173](#)).

Selection

- g *
- kg *
- t
- oz *
- lb *
- STon *
- cm³ *
- dm³ *
- m³ *
- ml *
- l *
- hl *
- Ml Mega *
- af *
- ft³ *
- Mft³ *
- fl oz (us) *
- gal (us) *
- kgal (us) *
- Mgal (us) *
- bbl (us;liq.) *
- bbl (us;beer) *
- bbl (us;oil) *
- bbl (us;tank) *
- gal (imp) *
- Mgal (imp) *
- bbl (imp;beer) *
- bbl (imp;oil) *
- None

Factory setting

Country-specific:

- m³
- ft³

Additional information*Description*

The unit is selected separately for each totalizer. It is independent of the selection made in the **System units** submenu (→ [54](#)).

Selection

The selection is dependent on the process variable selected in the **Assign process variable** parameter (→ [173](#)).

* Visibility depends on order options or device settings

Totalizer operation mode

Navigation Expert → Application → Totalizer 1 to n → Operation mode (0908-1 to n)

Prerequisite A process variable is selected in the **Assign process variable** parameter (→ 173) of the **Totalizer 1 to n** submenu.

Description Use this function to select how the totalizer summates the flow.

- Selection**
- Net flow total
 - Forward flow total
 - Reverse flow total

Factory setting Net flow total

Additional information *Selection*

- Net flow total
Flow values in the forward and reverse flow direction are totalized and balanced against one another. Net flow is registered in the flow direction.
- Forward flow total
Only the flow in the forward flow direction is totalized.
- Reverse flow total
Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

Control Totalizer 1 to n

Navigation Expert → Application → Totalizer 1 to n → Control Tot. 1 to n (0912-1 to n)

Prerequisite A process variable is selected in the **Assign process variable** parameter (→ 173) of the **Totalizer 1 to n** submenu.

Description Use this function to select the control of totalizer value 1-3.

- Selection**
- Totalize
 - Reset + hold
 - Preset + hold
 - Reset + totalize
 - Preset + totalize
 - Hold

Factory setting Totalize

Additional information *Selection*

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.

Options	Description
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

Preset value 1 to n

Navigation

Expert → Application → Totalizer 1 to n → Preset value 1 to n (0913–1 to n)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 173) of the **Totalizer 1 to n** submenu.

Description

Use this function to enter a start value for the Totalizer 1 to n.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 m³
- 0 ft³

Additional information

User entry

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 174).

Example

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

Failure mode



Navigation

Expert → Application → Totalizer 1 to n → Failure mode (0901–1 to n)

Prerequisite

A process variable is selected in the **Assign process variable** parameter (→ 173) of the **Totalizer 1 to n** submenu.

Description

Use this function to select how a totalizer behaves in the event of a device alarm.

Selection

- Stop
- Actual value
- Last valid value

Factory setting

Stop

Additional information*Description*

This setting does not affect the failsafe mode of other totalizers and the outputs. This is specified in separate parameters.

Selection

■ Stop

The totalizer is stopped in the event of a device alarm.

■ Actual value

The totalizer continues to count based on the actual measured value; the device alarm is ignored.

■ Last valid value

The totalizer continues to count based on the last valid measured value before the device alarm occurred.

3.8 "Diagnostics" submenu

Navigation

Expert → Diagnostics

► Diagnostics	
Actual diagnostics (0691)	→ 178
Previous diagnostics (0690)	→ 179
Operating time from restart (0653)	→ 179
Operating time (0652)	→ 180
► Diagnostic list	→ 180
► Event logbook	→ 184
► Device information	→ 186
► Main electronic module + I/O module 1	→ 190
► Sensor electronic module (ISEM)	→ 191
► I/O module 2	→ 192
► I/O module 3	→ 193
► Display module	→ 194
► Data logging	→ 195

► Heartbeat Technology	→ 203
► Simulation	→ 204

Actual diagnostics

Navigation Expert → Diagnostics → Actual diagnos. (0691)

Prerequisite A diagnostic event has occurred.

Description Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Display*

Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu (→ 180).

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

Example

For the display format:

F271 Main electronics failure

Timestamp

Navigation Expert → Diagnostics → Timestamp

Description Displays the operating time when the current diagnostic message occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *Display*

The diagnostic message can be viewed via the **Actual diagnostics** parameter (→ 178).

Example

For the display format:

24d12h13m00s

Previous diagnostics

Navigation	  Expert → Diagnostics → Prev.diagnostics (0690)
Prerequisite	Two diagnostic events have already occurred.
Description	Displays the diagnostic message that occurred before the current message.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Example</i> For the display format:  F271 Main electronics failure

Timestamp

Navigation	 Expert → Diagnostics → Timestamp
Description	Displays the operating time when the last diagnostic message before the current message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Previous diagnostics parameter (→  179).
	<i>Example</i> For the display format: 24d12h13m00s

Operating time from restart

Navigation	  Expert → Diagnostics → Time fr. restart (0653)
Description	Use this function to display the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Operating time

Navigation   Expert → Diagnostics → Operating time (0652)

Description Use this function to display the length of time the device has been in operation.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

3.8.1 "Diagnostic list" submenu

Navigation   Expert → Diagnostics → Diagnostic list

► Diagnostic list	
Diagnostics 1 (0692)	→  180
Diagnostics 2 (0693)	→  181
Diagnostics 3 (0694)	→  182
Diagnostics 4 (0695)	→  183
Diagnostics 5 (0696)	→  183

Diagnostics 1

Navigation   Expert → Diagnostics → Diagnostic list → Diagnostics 1 (0692)

Description Displays the current diagnostics message with the highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

Examples

For the display format:

-  F271 Main electronics failure
-  F276 I/O module failure

Timestamp

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

 The diagnostic message can be viewed via the **Diagnostics 1** parameter (→ 180).

Example

For the display format:
24d12h13m00s

Diagnostics 2

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 2 (0693)

Description

Displays the current diagnostics message with the second-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the **E** key.

Examples

For the display format:
■ **X**F271 Main electronics failure
■ **X**F276 I/O module failure

Timestamp

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the second-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 2** parameter (→ 181).

Example

For the display format:
24d12h13m00s

Diagnostics 3

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 3 (0694)

Description

Displays the current diagnostics message with the third-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

Examples

For the display format:

- F271 Main electronics failure
- F276 I/O module failure

Timestamp

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the third-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 3** parameter (→ 182).

Example

For the display format:
24d12h13m00s

Diagnostics 4

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 4 (0695)
Description	Displays the current diagnostics message with the fourth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Examples</i> For the display format: <ul style="list-style-type: none">▪  F271 Main electronics failure▪  F276 I/O module failure

Timestamp

Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the fourth-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 4 parameter (→  183).
	<i>Example</i> For the display format: 24d12h13m00s

Diagnostics 5

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 5 (0696)
Description	Displays the current diagnostics message with the fifth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

i Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the **E** key.

Examples

For the display format:

- **F271** Main electronics failure
- **F276** I/O module failure

Timestamp

Navigation

█ Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the fifth-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

i The diagnostic message can be viewed via the **Diagnostics 5** parameter (→ [183](#)).

Example

For the display format:

24d12h13m00s


3.8.2 "Event logbook" submenu

Viewing event messages

Event messages are displayed in chronological order. The event history includes both diagnostic events and information events. The symbol in front of the timestamp indicates whether the event has started or ended.

Navigation

█ Expert → Diagnostics → Event logbook

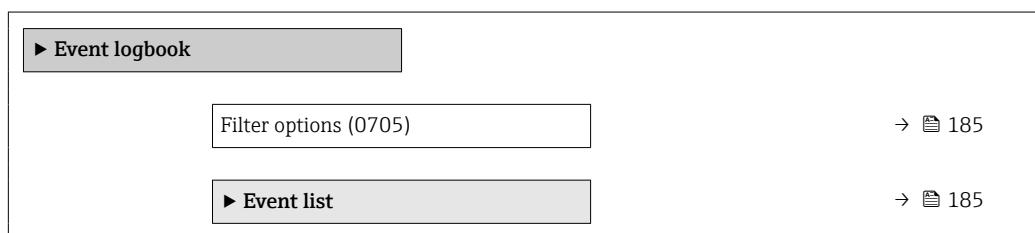

Filter options**Navigation**

Expert → Diagnostics → Event logbook → Filter options (0705)

Description

Use this function to select the category whose event messages are displayed in the event list of the local display.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting All

Additional information *Description*

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required


"Event list" submenu

The **Event list** submenu is only displayed if operating via the local display.

If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.

If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

Navigation Expert → Diagnostics → Event logbook → Event list

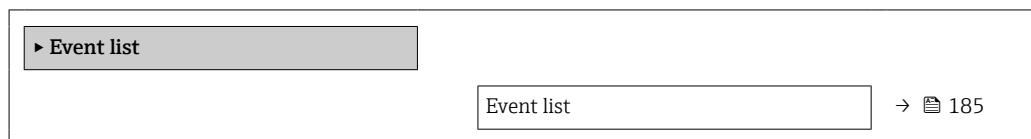**Event list****Navigation**

Expert → Diagnostics → Event logbook → Event list

Description

Displays the history of event messages of the category selected in the **Filter options** parameter (→ 185).

User interface

- For a "Category I" event message
Information event, short message, symbol for event recording and operating time when error occurred
- For a "Category F, C, S, M" event message (status signal)
Diagnostics code, short message, symbol for event recording and operating time when error occurred

Additional information*Description*

A maximum of 20 event messages are displayed in chronological order.

If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The following symbols indicate whether an event has occurred or has ended:

- ⊖: Occurrence of the event
- ⊚: End of the event

Examples

For the display format:

- I1091 Configuration modified
⊖ 24d12h13m00s
- ⊚F271 Main electronics failure
⊖ 01d04h12min30s

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.8.3 "Device information" submenu

Navigation

Expert → Diagnostics → Device info

► Device information	
Device tag (0011)	→ 187
Serial number (0009)	→ 187
Firmware version (0010)	→ 188
Device name (0020)	→ 188
Order code (0008)	→ 188
Extended order code 1 (0023)	→ 189
Extended order code 2 (0021)	→ 189
Extended order code 3 (0022)	→ 189

Configuration counter (0233)	→ 189
ENP version (0012)	→ 190

Device tag

Navigation

Expert → Diagnostics → Device info → Device tag (0011)

Description

Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

User interface


Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

Factory setting

Prosonic Flow

Additional information

User interface

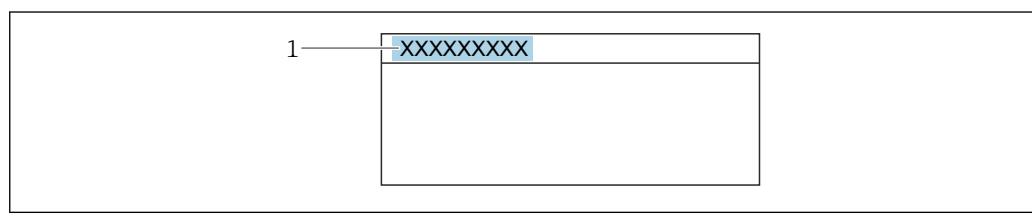

A0029422

1 Position of the header text on the display

The number of characters displayed depends on the characters used.

Serial number

Navigation

Expert → Diagnostics → Device info → Serial number (0009)

Description

Displays the serial number of the measuring device.

The number can be found on the nameplate of the sensor and transmitter.

User interface

Max. 11-digit character string comprising letters and numbers.

Additional information

Description

Uses of the serial number

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Firmware version

Navigation   Expert → Diagnostics → Device info → Firmware version (0010)

Description Displays the device firmware version installed.

User interface Character string in the format xx.yy.zz

Additional information *Display*

-  The Firmware version is also located:
- On the title page of the Operating instructions
 - On the transmitter nameplate

Device name

Navigation   Expert → Diagnostics → Device info → Device name (0020)

Description Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface Prosonic Flow 500

Order code



Navigation   Expert → Diagnostics → Device info → Order code (0008)

Description Displays the device order code.

User interface Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Additional information *Description*

-  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

 **Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Extended order code 1**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 1 (0023)

Description

Displays the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

User interface

Character string

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Extended order code 2**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 2 (0021)

Description

Displays the second part of the extended order code.

User interface

Character string

Additional informationFor additional information, see **Extended order code 1** parameter (→ 189)

Extended order code 3**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 3 (0022)

Description

Displays the third part of the extended order code.

User interface

Character string

Additional informationFor additional information, see **Extended order code 1** parameter (→ 189)

Configuration counter**Navigation**

Expert → Diagnostics → Device info → Config. counter (0233)

Description

Displays the number of parameter modifications for the device. When the user changes a parameter setting, this counter is incremented.

User interface


0 to 65 535

ENP version

Navigation	Expert → Diagnostics → Device info → ENP version (0012)
Description	Displays the version of the electronic nameplate.
User interface	Character string
Factory setting	2.02.00
Additional information	Description This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

3.8.4 "Main electronic module + I/O module 1" submenu

Navigation Expert → Diagnostics → Main elec.+I/O1

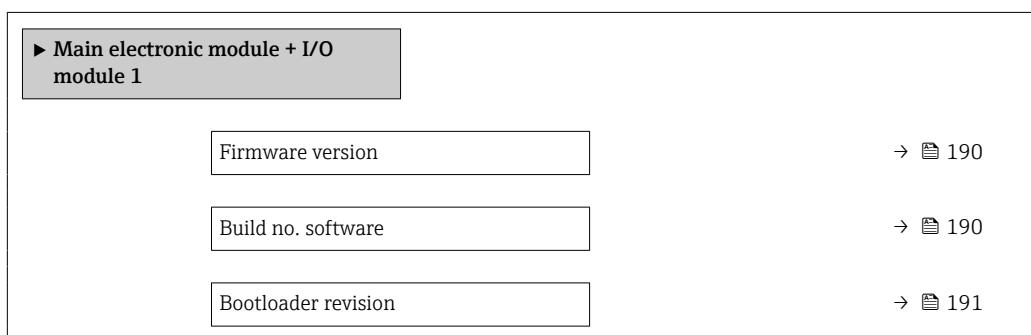**Firmware version**

Navigation Expert → Diagnostics → Main elec.+I/O1 → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation Expert → Diagnostics → Main elec.+I/O1 → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision

Navigation  Expert → Diagnostics → Main elec.+I/O1 → Bootloader rev. (0073)


Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.8.5 "Sensor electronic module (ISEM)" submenu

Navigation

 Expert → Diagnostics → Sens. electronic

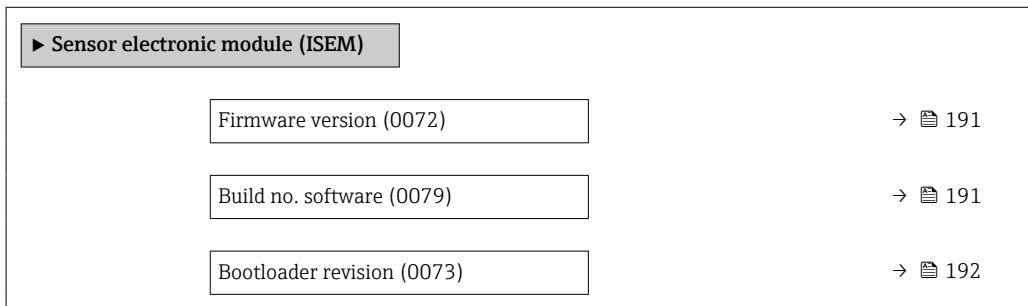

Firmware version

Navigation  Expert → Diagnostics → Sens. electronic → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation  Expert → Diagnostics → Sens. electronic → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision


Navigation  Expert → Diagnostics → Sens. electronic → Bootloader rev. (0073)

Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.8.6 "I/O module 2" submenu

Navigation  Expert → Diagnostics → I/O module 2

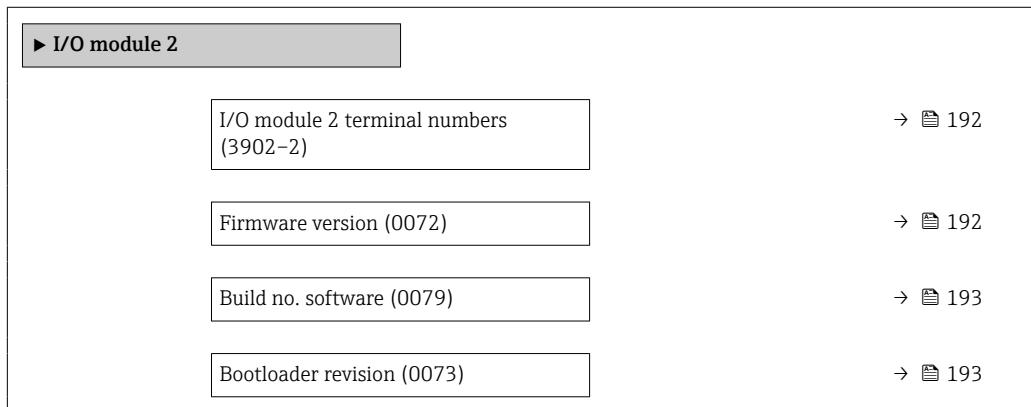

I/O module 2 terminal numbers

Navigation  Expert → Diagnostics → I/O module 2 → I/O 2 terminals (3902-2)

Description Displays the terminal numbers used by the I/O module.

User interface

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Firmware version

Navigation  Expert → Diagnostics → I/O module 2 → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software


Navigation	  Expert → Diagnostics → I/O module 2 → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader revision

Navigation	  Expert → Diagnostics → I/O module 2 → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.7 "I/O module 3" submenu

Navigation   Expert → Diagnostics → I/O module 3

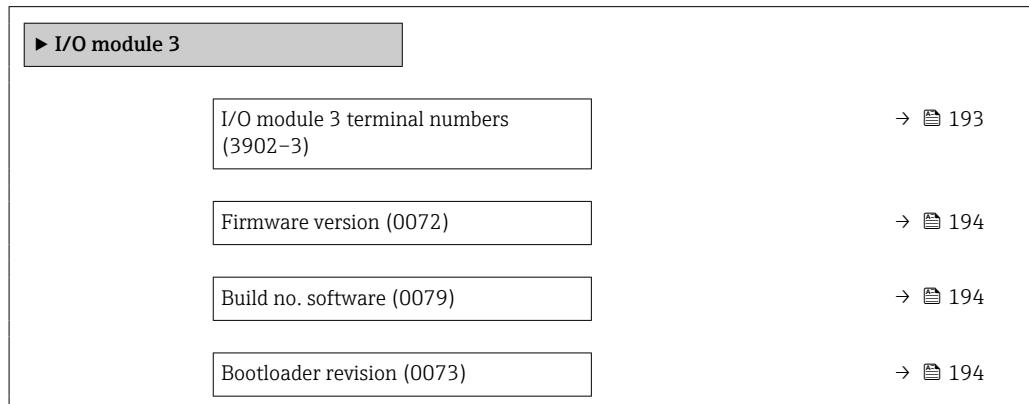**I/O module 3 terminal numbers**

Navigation	  Expert → Diagnostics → I/O module 3 → I/O 3 terminals (3902-3)
Description	Displays the terminal numbers used by the I/O module.
User interface	<ul style="list-style-type: none"> ▪ Not used ▪ 26-27 (I/O 1) ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3)

Firmware version

Navigation   Expert → Diagnostics → I/O module 3 → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation   Expert → Diagnostics → I/O module 3 → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision


Navigation   Expert → Diagnostics → I/O module 3 → Bootloader rev. (0073)

Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.8.8 "Display module" submenu

Navigation   Expert → Diagnostics → Display module

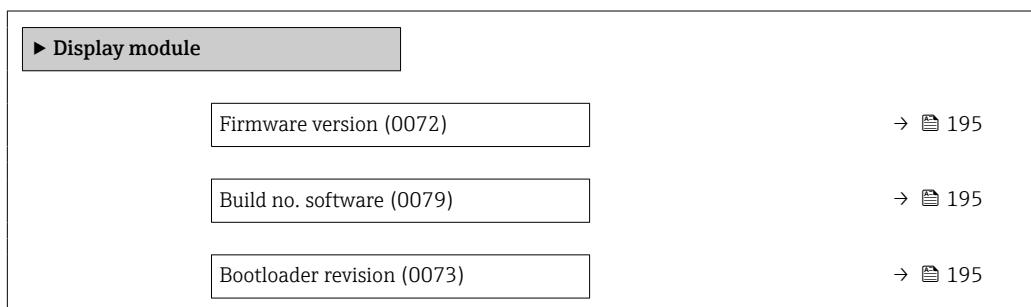

Firmware version

Navigation  Expert → Diagnostics → Display module → Firmware version (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

Build no. software

Navigation  Expert → Diagnostics → Display module → Build no. softw. (0079)

Description Use this function to display the software build number of the module.

User interface Positive integer

Bootloader revision

Navigation  Expert → Diagnostics → Display module → Bootloader rev. (0073)

Description Use this function to display the bootloader revision of the software.

User interface Positive integer

3.8.9 "Data logging" submenu

Navigation

 Expert → Diagnostics → Data logging

 Data logging	
Assign channel 1 (0851)	→  196
Assign channel 2 (0852)	→  197
Assign channel 3 (0853)	→  197
Assign channel 4 (0854)	→  198
Logging interval (0856)	→  198
Clear logging data (0855)	→  199

Data logging (0860)	→ 199
Logging delay (0859)	→ 199
Data logging control (0857)	→ 200
Data logging status (0858)	→ 200
Entire logging duration (0861)	→ 201
▶ Display channel 1	→ 201
▶ Display channel 2	→ 202
▶ Display channel 3	→ 203
▶ Display channel 4	→ 203

Assign channel 1



Navigation

Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **Software option overview** parameter (→ 43).

Description

Use this function to select a process variable for the data logging channel.

Selection

- Off
- Volume flow
- Mass flow
- Flow velocity
- Sound velocity
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Acceptance rate *
- Electronics temperature
- Temperature *
- Density *
- Current output 2 *
- Current output 3 *
- Current output 4 *
- Current output 1

Factory setting

Off

* Visibility depends on order options or device settings

Additional information*Description*

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The log contents are cleared if the option selected is changed.

Assign channel 2**Navigation**

  Expert → Diagnostics → Data logging → Assign chan. 2 (0852)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  43).

Description

Use this function to select a process variable for the data logging channel.

Selection

For the picklist, see the **Assign channel 1** parameter (→  196)

Factory setting

Off

Assign channel 3**Navigation**

  Expert → Diagnostics → Data logging → Assign chan. 3 (0853)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  43).

Description

Use this function to select a process variable for the data logging channel.

Selection

For the picklist, see the **Assign channel 1** parameter (→  196)

Factory setting

Off

Assign channel 4



Navigation

Expert → Diagnostics → Data logging → Assign chan. 4 (0854)

Prerequisite

The **Extended HistoROM** application package is available.

i The software options currently enabled are displayed in the **Software option overview** parameter (→ 43).

Description

Use this function to select a process variable for the data logging channel.

Selection

For the picklist, see the **Assign channel 1** parameter (→ 196)

Factory setting

Off

Logging interval



Navigation

Expert → Diagnostics → Data logging → Logging interval (0856)

Prerequisite

The **Extended HistoROM** application package is available.

i The software options currently enabled are displayed in the **Software option overview** parameter (→ 43).

Description

Use this function to enter the logging interval T_{log} for data logging.

User entry

0.1 to 3 600.0 s

Factory setting

1.0 s

Additional information

Description

This defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{log} :

- If 1 logging channel is used: $T_{log} = 1000 \times t_{log}$
- If 2 logging channels are used: $T_{log} = 500 \times t_{log}$
- If 3 logging channels are used: $T_{log} = 333 \times t_{log}$
- If 4 logging channels are used: $T_{log} = 250 \times t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{log} always remains in the memory (ring memory principle).

i The log contents are cleared if the length of the logging interval is changed.

Example

If 1 logging channel is used:

- $T_{log} = 1000 \times 1 \text{ s} = 1000 \text{ s} \approx 15 \text{ min}$
- $T_{log} = 1000 \times 10 \text{ s} = 10000 \text{ s} \approx 3 \text{ h}$
- $T_{log} = 1000 \times 80 \text{ s} = 80000 \text{ s} \approx 1 \text{ d}$
- $T_{log} = 1000 \times 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data**Navigation**

Expert → Diagnostics → Data logging → Clear logging (0855)

Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **Software option overview** parameter (→ 43).

Description

Use this function to clear the entire logging data.

Selection

- Cancel
- Clear data

Factory setting

Cancel

Additional information*Selection*

- Cancel
The data is not cleared. All the data is retained.
- Clear data
The logging data is cleared. The logging process starts from the beginning.

Data logging**Navigation**

Expert → Diagnostics → Data logging → Data logging (0860)

Description

Use this function to select the data logging method.

Selection

- Overwriting
- Not overwriting

Factory setting

Overwriting

Additional information*Selection*

- Overwriting
The device memory applies the FIFO principle.
- Not overwriting
Data logging is canceled if the measured value memory is full (single shot).

Logging delay**Navigation**

Expert → Diagnostics → Data logging → Logging delay (0859)

Prerequisite

In the **Data logging** parameter (→ 199), the **Not overwriting** option is selected.

Description

Use this function to enter the time delay for measured value logging.

User entry

0 to 999 h

Factory setting 0 h

Additional information *Description*

Once measured value logging has been started with the **Data logging control** parameter (→ 200), the device does not save any data for the duration of the time delay entered.

Data logging control



Navigation Expert → Diagnostics → Data logging → Data log.control (0857)

Prerequisite In the **Data logging** parameter (→ 199), the **Not overwriting** option is selected.

Description Use this function to start and stop measured value logging.

Selection

- None
- Delete + start
- Stop

Factory setting None

Additional information *Selection*

- None
Initial measured value logging status.
- Delete + start
All the measured values recorded for all the channels are deleted and measured value logging starts again.
- Stop
Measured value logging is stopped.

Data logging status

Navigation Expert → Diagnostics → Data logging → Data log. status (0858)

Prerequisite In the **Data logging** parameter (→ 199), the **Not overwriting** option is selected.

Description Displays the measured value logging status.

User interface

- Done
- Delay active
- Active
- Stopped

Factory setting Done

Additional information*Selection*

- Done
Measured value logging has been performed and completed successfully.
- Delay active
Measured value logging has been started but the logging interval has not yet elapsed.
- Active
The logging interval has elapsed and measured value logging is active.
- Stopped
Measured value logging is stopped.

Entire logging duration**Navigation**

 Expert → Diagnostics → Data logging → Logging duration (0861)

Prerequisite

In the **Data logging** parameter (→ [199](#)), the **Not overwriting** option is selected.

Description

Displays the total logging duration.

User interface

Positive floating-point number

Factory setting

0 s

"Display channel 1" submenu*Navigation*

 Expert → Diagnostics → Data logging → Displ.channel 1

**Display channel 1****Navigation**

 Expert → Diagnostics → Data logging → Displ.channel 1

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→ [43](#)).

One of the following options is selected in the **Assign channel 1** parameter (→ [196](#)):


- Volume flow
- Mass flow
- Density *
- Temperature *

* Visibility depends on order options or device settings

- Electronics temperature *
- Current output 2 *
- Current output 3 *
- Current output 4 *
- Acceptance rate *
- Signal strength *
- Signal to noise ratio *
- Turbulence *
- Current output 1
- Sound velocity
- Flow velocity

Description

Displays the measured value trend for the logging channel in the form of a chart.

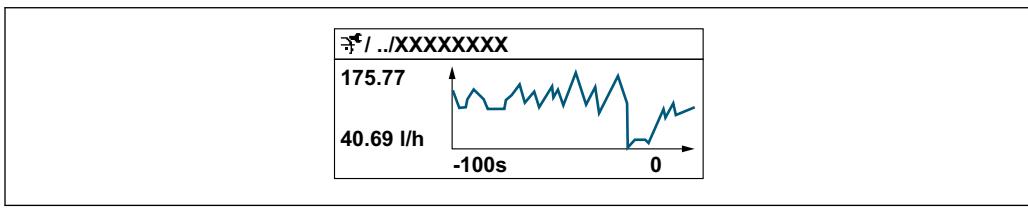Additional information*Description*

A0034352

10 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

"Display channel 2" submenu*Navigation*

Expert → Diagnostics → Data logging → Displ.channel 2

**Display channel 2****Navigation**

Expert → Diagnostics → Data logging → Displ.channel 2

Prerequisite

A process variable is defined in the **Assign channel 2** parameter.

Description

See the **Display channel 1** parameter → 201

* Visibility depends on order options or device settings

"Display channel 3" submenu

Navigation



Expert → Diagnostics → Data logging → Displ.channel 3



Display channel 3

Navigation



Expert → Diagnostics → Data logging → Displ.channel 3

Prerequisite

A process variable is defined in the **Assign channel 3** parameter.

Description

See the **Display channel 1** parameter → 201

"Display channel 4" submenu

Navigation



Expert → Diagnostics → Data logging → Displ.channel 4



Display channel 4

Navigation



Expert → Diagnostics → Data logging → Displ.channel 4

Prerequisite

A process variable is defined in the **Assign channel 4** parameter.

Description

See the **Display channel 1** parameter → 201

3.8.10 "Heartbeat" submenu



For detailed information on the parameter descriptions for the **Heartbeat Verification+Monitoring** refer to the Special Documentation for the device → 7

Navigation



Expert → Diagnostics → HBT



3.8.11 "Simulation" submenu

Navigation

Expert → Diagnostics → Simulation

▶ Simulation	
Assign simulation process variable (1810)	→ 205
Process variable value (1811)	→ 205
Current input 1 to n simulation (1608-1 to n)	→ 206
Value current input 1 to n (1609-1 to n)	→ 206
Status input simulation 1 to n (1355-1 to n)	→ 206
Input signal level 1 to n (1356-1 to n)	→ 207
Current output 1 to n simulation (0354-1 to n)	→ 207
Current output value (0355)	→ 208
Frequency output 1 to n simulation (0472-1 to n)	→ 208
Frequency output 1 to n value (0473-1 to n)	→ 209
Pulse output simulation 1 to n (0458-1 to n)	→ 209
Pulse value 1 to n (0459-1 to n)	→ 210
Switch output simulation 1 to n (0462-1 to n)	→ 210
Switch status 1 to n (0463-1 to n)	→ 211
Relay output 1 to n simulation (0802-1 to n)	→ 211
Switch status 1 to n (0803-1 to n)	→ 212
Pulse output simulation (0988)	→ 212
Pulse value (0989)	→ 213

Device alarm simulation (0654)	→ 213
Diagnostic event category (0738)	→ 214
Diagnostic event simulation (0737)	→ 214

Assign simulation process variable



Navigation

Expert → Diagnostics → Simulation → Assign proc.var. (1810)

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Volume flow
- Mass flow
- Sound velocity
- Flow velocity*
- Temperature*
- Density*

Factory setting

Off

Additional information

Description

The simulation value of the process variable selected is defined in the **Process variable value** parameter (→ [205](#)).

Process variable value



Navigation

Expert → Diagnostics → Simulation → Proc. var. value (1811)

Prerequisite

A process variable is selected in the **Assign simulation process variable** parameter (→ [205](#)).

Description

Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

User entry

Depends on the process variable selected

Factory setting

0

* Visibility depends on order options or device settings

Additional information*User entry*

 The unit of the displayed measured value is taken from the **System units** submenu (→  54).

Current input 1 to n simulation**Navigation**

  Expert → Diagnostics → Simulation → Curr.inp 1 to n sim. (1608–1 to n)

Description

Option for switching simulation of the current input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

 The desired simulation value is defined in the **Value current input 1 to n** parameter.

Selection

- Off
- On

Factory setting

Off

Additional information*Selection*

- Off
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Current simulation is active.

Value current input 1 to n**Navigation**

  Expert → Diagnostics → Simulation → Value curr.inp 1 to n (1609–1 to n)

Prerequisite

In the **Current input 1 to n simulation** parameter, the **On** option is selected.

Description

Use this function to enter the current value for the simulation. In this way, users can verify the correct configuration of the current input and the correct function of upstream feed-in units.

User entry

0 to 22.5 mA

Status input simulation 1 to n**Navigation**

  Expert → Diagnostics → Simulation → Status inp.sim 1 to n (1355–1 to n)

Description

Use this function to switch simulation of the status input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection	<ul style="list-style-type: none">▪ Off▪ On
Factory setting	Off
Additional information	<p><i>Description</i></p> <p> The desired simulation value is defined in the Input signal level parameter (→ 207).</p>
	<p><i>Selection</i></p> <ul style="list-style-type: none">▪ Off Simulation for the status input is switched off. The device is in normal measuring mode or another process variable is being simulated.▪ On Simulation for the status input is active.

Input signal level 1 to n



Navigation	 Expert → Diagnostics → Simulation → Signal level 1 to n (1356-1 to n)
Prerequisite	In the Status input simulation parameter (→ 206), the On option is selected.
Description	Use this function to select the signal level for the simulation of the status input. In this way, users can verify the correct configuration of the status input and the correct function of upstream feed-in units.
Selection	<ul style="list-style-type: none">▪ High▪ Low

Current output 1 to n simulation



Navigation	 Expert → Diagnostics → Simulation → Curr.out. 1 to n sim. (0354-1 to n)
Description	Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	<ul style="list-style-type: none">▪ Off▪ On
Factory setting	Off

Additional information	Description
	<p> The desired simulation value is defined in the Value current output 1 to n parameter.</p>
	<p><i>Selection</i></p> <ul style="list-style-type: none">▪ Off Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.▪ On Current simulation is active.

Current output value



Navigation	 Expert → Diagnostics → Simulation → Curr.outp val. (0355)
Prerequisite	In the Current output 1 to n simulation parameter, the On option is selected.
Description	Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.
User entry	3.59 to 22.5 mA
Additional information	<i>Dependency</i> The input range is dependent on the option selected in the Current span parameter (→  92).

Frequency output 1 to n simulation



Navigation	 Expert → Diagnostics → Simulation → Freq.outp 1 to n sim. (0472-1 to n)
Prerequisite	In the Operating mode parameter (→  105), the Frequency option is selected.
Description	Use this function to switch simulation of the frequency output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	<ul style="list-style-type: none">▪ Off▪ On
Factory setting	Off

Additional information*Description*

The desired simulation value is defined in the **Frequency value 1 to n** parameter.

Selection

- Off

Frequency simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Frequency simulation is active.

Frequency output 1 to n value**Navigation**

Expert → Diagnostics → Simulation → Freq.outp 1 to n val. (0473-1 to n)

Prerequisite

In the **Frequency output simulation 1 to n** parameter, the **On** option is selected.

Description

Use this function to enter a frequency value for the simulation. In this way, users can verify the correct adjustment of the frequency output and the correct function of downstream switching units.

User entry

0.0 to 12 500.0 Hz

Pulse output simulation 1 to n**Navigation**

Expert → Diagnostics → Simulation → Puls.outp.sim. 1 to n (0458-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 105), the **Pulse** option is selected.

Description

Use this function to switch simulation of the pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Fixed value
- Down-counting value

Factory setting

Off

Additional information*Description*

The desired simulation value is defined in the **Pulse value 1 to n** parameter.

Selection

- Off

Pulse simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Fixed value

Pulses are continuously output with the pulse width specified in the **Pulse width** parameter (→ 108).

- Down-counting value

The pulses specified in the **Pulse value** parameter (→ 210) are output.

Pulse value 1 to n**Navigation**

Expert → Diagnostics → Simulation → Pulse value 1 to n (0459-1 to n)

Prerequisite

In the **Pulse output simulation 1 to n** parameter, the **Down-counting value** option is selected.

Description

Use this function to enter a pulse value for the simulation. In this way, users can verify the correct adjustment of the pulse output and the correct function of downstream switching units.

User entry

0 to 65 535

Switch output simulation 1 to n**Navigation**

Expert → Diagnostics → Simulation → Switch sim. 1 to n (0462-1 to n)

Prerequisite

In the **Operating mode** parameter (→ 105), the **Switch** option is selected.

Description

Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The desired simulation value is defined in the **Switch status 1 to n** parameter.

Selection

- Off

Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Switch simulation is active.

Switch status 1 to n**Navigation**

Expert → Diagnostics → Simulation → Switch status 1 to n (0463-1 to n)

Description

Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.

Selection

- Open
- Closed

Additional information*Selection*

- Open

Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Closed

Switch simulation is active.

Relay output 1 to n simulation**Navigation**

Expert → Diagnostics → Simulation → Relay out. 1 to n sim (0802-1 to n)

Description

Use this function to switch simulation of the relay output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The desired simulation value is defined in the **Switch status 1 to n** parameter.

Selection

- Off

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Relay simulation is active.

Switch status 1 to n**Navigation**

Expert → Diagnostics → Simulation → Switch status 1 to n (0803–1 to n)

Prerequisite

The **On** option is selected in the **Switch output simulation 1 to n** parameter parameter.

Description

Use this function to select a relay value for the simulation. In this way, users can verify the correct adjustment of the relay output and the correct function of downstream switching units.

Selection

- Open
- Closed

Additional information*Selection*

- Open

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Closed

Relay simulation is active.

Pulse output simulation**Navigation**

Expert → Diagnostics → Simulation → Puls.outp.sim. (0988)

Description

Use this function to switch simulation of the double pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Fixed value
- Down-counting value

Factory setting

Off

Additional information*Description*

The desired simulation value is defined in the **Pulse value** parameter (→ 213).

Selection

- Off

Simulation of the double pulse output is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Fixed value

Pulses are continuously output with the pulse width specified in the **Pulse width** parameter (→ 131).

- Down-counting value

The pulses specified in the **Pulse value** parameter (→ 213) are output.

Pulse value**Navigation**

Expert → Diagnostics → Simulation → Pulse value (0989)

Prerequisite

In the **Pulse output simulation** parameter (→ 212), the **Down-counting value** option is selected.

Description

Use this function to enter a pulse value for simulation of the double pulse output. In this way, users can verify the correct adjustment of the double pulse output and the correct function of downstream switching units.

User entry

0 to 65 535

Device alarm simulation**Navigation**

Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)

Description

Use this function to switch the device alarm on and off.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Diagnostic event category

Navigation Expert → Diagnostics → Simulation → Event category (0738)

Description Use this function to select the category of the diagnostic events that are displayed for the simulation in the **Diagnostic event simulation** parameter (→ 214).

Selection

- Sensor
- Electronics
- Configuration
- Process

Factory setting Process

Diagnostic event simulation

Navigation Expert → Diagnostics → Simulation → Diag. event sim. (0737)

Description Use this function to select a diagnostic event for the simulation process that is activated.

Selection

- Off
- Diagnostic event picklist (depends on the category selected)

Factory setting Off

Additional information *Description*

For the simulation, you can choose from the diagnostic events of the category selected in the **Diagnostic event category** parameter (→ 214).

4 Country-specific factory settings

4.1 SI units

 Not valid for USA and Canada.

4.1.1 System units

Mass	kg
Mass flow	kg/h
Volume	m ³
Volume flow	m ³ /h
Density	kg/dm ³
Velocity	m/s
Kinematic viscosity	m ² /s
Temperature	°C
Length	mm

4.1.2 Output current span

Current output 1 to n	4 to 20 mA NAMUR
-----------------------	------------------

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Mass	lb
Mass flow	lb/min
Volume	ft ³
Volume flow	ft ³ /min
Density	lb/ft ³
Velocity	ft/s
Kinematic viscosity	cSt
Temperature	°F
Length	in

4.2.2 Output current span

Current output 1 to n	4 to 20 mA US
-----------------------	---------------

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Volume	$\text{cm}^3, \text{dm}^3, \text{m}^3$	Cubic centimeter, cubic decimeter, cubic meter
	ml, l	Milliliter, liter
Volume flow	$\text{dm}^3/\text{s}, \text{dm}^3/\text{min}, \text{dm}^3/\text{h}, \text{dm}^3/\text{d}$	Cubic decimeter/time unit
	$\text{m}^3/\text{s}, \text{m}^3/\text{min}, \text{m}^3/\text{h}, \text{m}^3/\text{d}$	Cubic meter/time unit
	l/s, l/min, l/h, l/d	Liter/time unit
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/h, t/d	Metric ton/time unit
Density	kg/l	Kilogram/liter
Velocity	m/s	Meter/time unit
Kinematic viscosity	m^2/s	Square meter/second
Temperature	$^{\circ}\text{C}, \text{K}$	Celsius, Kelvin
Length	mm	Millimeters
Time	m, h, d, y	Minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Volume	ft^3	Cubic foot
Volume flow	$\text{ft}^3/\text{s}, \text{ft}^3/\text{min}, \text{ft}^3/\text{h}, \text{ft}^3/\text{d}$	Cubic foot/time unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/h, STon/d	Standard ton/time unit
Density	lb/ ft^3	Pound/cubic foot
Velocity	ft/s	Foot/time unit
Kinematic viscosity	cSt	Centistokes
Temperature	$^{\circ}\text{F}, ^{\circ}\text{R}$	Fahrenheit, Rankine
Length	in	Inch
Time	m, h, d, y	Minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Volume	bbl (imp;beer)	Barrel (beer)
Volume flow	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
Time	m, h, d, y	Minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

- 0/4 mA value (Parameter) 87
- 0% bargraph value 1 (Parameter) 18
- 0% bargraph value 3 (Parameter) 22
- 2.4 GHz WLAN channel (Parameter) 170
- 20 mA value (Parameter) 87
- 100% bargraph value 1 (Parameter) 19
- 100% bargraph value 3 (Parameter) 22

A

- Acceptance rate (Parameter) 46
- Activate SW option (Parameter) 42
- Active level (Parameter) 90
- Actual diagnostics (Parameter) 178
- Administration (Submenu) 38
- Alarm delay (Parameter) 30
- Application (Submenu) 172
- Apply I/O configuration (Parameter) 84
- Assign behavior of diagnostic no. 160 (Parameter) 32
- Assign behavior of diagnostic no. 302 (Parameter) 32
- Assign behavior of diagnostic no. 441 (Parameter) 33
- Assign behavior of diagnostic no. 442 (Parameter) 33
- Assign behavior of diagnostic no. 443 (Parameter) 33
- Assign behavior of diagnostic no. 444 (Parameter) 34
- Assign behavior of diagnostic no. 543 (Parameter) 34
- Assign behavior of diagnostic no. 832 (Parameter) 35
- Assign behavior of diagnostic no. 833 (Parameter) 35
- Assign behavior of diagnostic no. 840 (Parameter) 35
- Assign behavior of diagnostic no. 842 (Parameter) 36
- Assign behavior of diagnostic no. 870 (Parameter) 36
- Assign behavior of diagnostic no. 881 (Parameter) 36
- Assign behavior of diagnostic no. 930 (Parameter) 37
- Assign behavior of diagnostic no. 931 (Parameter) 37
- Assign behavior of diagnostic no. 953 (Parameter) 38
- Assign channel 1 (Parameter) 196
- Assign channel 2 (Parameter) 197
- Assign channel 3 (Parameter) 197
- Assign channel 4 (Parameter) 198
- Assign diagnostic behavior (Parameter) 116, 125
- Assign flow direction check (Parameter) 120, 124
- Assign frequency output (Parameter) 110
- Assign limit (Parameter) 117, 124
- Assign process variable (Parameter) 72, 173
- Assign pulse output 1 (Parameter) 130
- Assign pulse output 1 to n (Parameter) 107
- Assign PV (Parameter) 152
- Assign QV (Parameter) 154
- Assign simulation process variable (Parameter) 205
- Assign SSID name (Parameter) 170
- Assign status (Parameter) 120, 125
- Assign status input (Parameter) 89
- Assign SV (Parameter) 152
- Assign TV (Parameter) 153

B

- Backlight (Parameter) 27

- Backup state (Parameter) 29
- Bootloader revision (Parameter) 191, 192, 193, 194, 195
- Build no. software (Parameter) 190, 191, 193, 194, 195
- Burst command (Parameter) 136
- Burst command 1 to n (Parameter) 143
- Burst configuration 1 to n (Submenu) 142
- Burst mode 1 to n (Parameter) 142
- Burst trigger level (Parameter) 147
- Burst trigger mode (Parameter) 146
- Burst variable 0 (Parameter) 144
- Burst variable 1 (Parameter) 145
- Burst variable 2 (Parameter) 145
- Burst variable 3 (Parameter) 145
- Burst variable 4 (Parameter) 145
- Burst variable 5 (Parameter) 146
- Burst variable 6 (Parameter) 146
- Burst variable 7 (Parameter) 146

C

- Cable length (Parameter) 68
- Calibration (Submenu) 81
- Calibration factor (Parameter) 82
- Capture mode (Parameter) 135
- Clear logging data (Parameter) 199
- Communication (Submenu) 133
- Comparison result (Parameter) 29
- Configuration (Submenu) 134, 140
- Configuration backup (Submenu) 27
- Configuration counter (Parameter) 189
- Configuration management (Parameter) 28
- Confirm access code (Parameter) 39
- Connection state (Parameter) 171
- Contrast display (Parameter) 26
- Control Totalizer 1 to n (Parameter) 175
- Current input 1 to n (Submenu) 49, 85
- Current input 1 to n simulation (Parameter) 206
- Current output 1 to n (Submenu) 90
- Current output 1 to n simulation (Parameter) 207
- Current output value (Parameter) 208
- Current range output (Parameter) 92
- Current span (Parameter) 86

D

- Damping current output (Parameter) 101
- Damping output 1 to n (Parameter) 113
- Data logging (Parameter) 199
- Data logging (Submenu) 195
- Data logging control (Parameter) 200
- Data logging status (Parameter) 200
- Date/time format (Parameter) 61
- Decimal places 1 (Parameter) 19
- Decimal places 2 (Parameter) 21
- Decimal places 3 (Parameter) 22
- Decimal places 4 (Parameter) 23
- Default gateway (Parameter) 158

Define access code (Parameter)	39	Assign behavior of diagnostic no. 953 (0636)	38
Define access code (Wizard)	38	Assign channel 1 (0851)	196
Density factor (Parameter)	81	Assign channel 2 (0852)	197
Density offset (Parameter)	81	Assign channel 3 (0853)	197
Density source (Parameter)	75	Assign channel 4 (0854)	198
Density unit (Parameter)	59	Assign diagnostic behavior	
Device alarm simulation (Parameter)	213	Pulse/frequency/switch output 1 to n (0482-1 to n)	116
Device ID (Parameter)	135, 149	Relay output 1 to n (0806-1 to n)	125
Device information (Submenu)	186	Assign flow direction check	
Device name (Parameter)	188	Pulse/frequency/switch output 1 to n (0484-1 to n)	120
Device reset (Parameter)	41	Relay output 1 to n (0808-1 to n)	124
Device revision (Parameter)	148	Assign frequency output	
Device tag (Parameter)	141, 187	Pulse/frequency/switch output 1 to n (0478-1 to n)	110
Device type (Parameter)	135, 149	Assign limit	
DHCP client (Parameter)	157	Pulse/frequency/switch output 1 to n (0483-1 to n)	117
Diagnostic behavior (Submenu)	30	Relay output 1 to n (0807-1 to n)	124
Diagnostic configuration (Submenu)	159	Assign process variable	
Diagnostic event category (Parameter)	214	Totalizer 1 to n (0914-1 to n)	173
Diagnostic event simulation (Parameter)	214	Assign process variable (1837)	72
Diagnostic handling (Submenu)	30	Assign pulse output 1 (0982-1)	130
Diagnostic list (Submenu)	180	Assign pulse output 1 to n (0460-1 to n)	107
Diagnostics (Submenu)	177	Assign PV (0234)	152
Diagnostics 1 (Parameter)	180	Assign QV (0237)	154
Diagnostics 2 (Parameter)	181	Assign simulation process variable (1810)	205
Diagnostics 3 (Parameter)	182	Assign SSID name (2708)	170
Diagnostics 4 (Parameter)	183	Assign status	
Diagnostics 5 (Parameter)	183	Pulse/frequency/switch output 1 to n (0485-1 to n)	120
Direct access		Relay output 1 to n (0805-1 to n)	125
0/4 mA value		Assign status input	
Current input 1 to n (1606-1 to n)	87	Status input 1 to n (1352-1 to n)	89
0% bargraph value 1 (0123)	18	Assign SV (0235)	152
0% bargraph value 3 (0124)	22	Assign TV (0236)	153
2.4 GHz WLAN channel (2704)	170	Backlight (0111)	27
20 mA value		Backup state (2759)	29
Current input 1 to n (1607-1 to n)	87	Bootloader revision	
100% bargraph value 1 (0125)	19	I/O module 2 (0073)	193, 194
100% bargraph value 3 (0126)	22	I/O module 3 (0073)	193, 194
Acceptance rate (2912)	46	I/O module 4 (0073)	193, 194
Activate SW option (0029)	42	Bootloader revision (0073)	191, 192, 195
Active level		Build no. software	
Status input 1 to n (1351-1 to n)	90	I/O module 2 (0079)	193, 194
Actual diagnostics (0691)	178	I/O module 3 (0079)	193, 194
Alarm delay (0651)	30	I/O module 4 (0079)	193, 194
Apply I/O configuration (3907)	84	Build no. software (0079)	190, 191, 195
Assign behavior of diagnostic no. 160 (0776)	32	Burst command (7006)	136
Assign behavior of diagnostic no. 302 (0742)	32	Burst command 1 to n (2031-1 to n)	143
Assign behavior of diagnostic no. 441 (0657)	33	Burst mode 1 to n (2032-1 to n)	142
Assign behavior of diagnostic no. 442 (0658)	33	Burst trigger level	
Assign behavior of diagnostic no. 443 (0659)	33	Burst configuration 1 to n (2043-1 to n)	147
Assign behavior of diagnostic no. 444 (0740)	34	Burst trigger mode	
Assign behavior of diagnostic no. 543 (0643)	34	Burst configuration 1 to n (2044-1 to n)	146
Assign behavior of diagnostic no. 832 (0675)	35	Burst variable 0	
Assign behavior of diagnostic no. 833 (0676)	35	Burst configuration 1 to n (2033)	144
Assign behavior of diagnostic no. 840 (0680)	35		
Assign behavior of diagnostic no. 842 (0638)	36		
Assign behavior of diagnostic no. 870 (0726)	36		
Assign behavior of diagnostic no. 881 (0724)	36		
Assign behavior of diagnostic no. 930 (0639)	37		
Assign behavior of diagnostic no. 931 (0640)	37		

Burst variable 1	Diagnostic event category (0738)	214
Burst configuration 1 to n (2034)	Diagnostic event simulation (0737)	214
Burst variable 2	Diagnostics 1 (0692)	180
Burst configuration 1 to n (2035)	Diagnostics 2 (0693)	181
Burst variable 3	Diagnostics 3 (0694)	182
Burst configuration 1 to n (2036)	Diagnostics 4 (0695)	183
Burst variable 4	Diagnostics 5 (0696)	183
Burst configuration 1 to n (2037)	Direct access (0106)	11
Burst variable 5	Display damping (0094)	24
Burst configuration 1 to n (2038)	Display interval (0096)	24
Burst variable 6	Display language (0104)	15
Burst configuration 1 to n (2039)	ENP version (0012)	190
Burst variable 7	Enter access code (0003)	13
Burst configuration 1 to n (2040)	Entire logging duration (0861)	201
Cable length	Event category 160 (0272)	160
Measuring point 1 (2939-1)	Event category 441 (0210)	160
Calibration factor (2920)	Event category 442 (0230)	161
Capture mode (7001)	Event category 443 (0231)	162
Clear logging data (0855)	Event category 444 (0211)	161
Comparison result (2760)	Event category 543 (0276)	162
Configuration counter (0233)	Event category 832 (0218)	162
Configuration management (2758)	Event category 833 (0225)	163
Connection state (2722)	Event category 840 (0267)	163
Contrast display (0105)	Event category 842 (0295)	164
Control Totalizer 1 to n (0912-1 to n)	Event category 870 (0250)	165
Current input 1 to n simulation (1608-1 to n)	Event category 881 (0268)	160
Current output 1 to n simulation (0354-1 to n)	Event category 930 (0296)	164
Current output value (0355)	Event category 931 (0297)	165
Current range output	Event category 953 (0292)	164
Current output 1 to n (0353-1 to n)	Extended order code 1 (0023)	189
Current span	Extended order code 2 (0021)	189
Current input 1 to n (1605-1 to n)	Extended order code 3 (0022)	189
Damping current output	External density (3060)	76
Current output 1 to n (0363-1 to n)	External temperature (3058)	75
Damping output 1 to n (0477-1 to n)	Failure behavior current output	
Data logging (0860)	Current output 1 to n (0364-1 to n)	101
Data logging control (0857)	Failure current	
Current output 1 to n (0352-1 to n)	Current output 1 to n (0352-1 to n)	102
Data logging status (0858)	Failure frequency	
Date/time format (2812)	Pulse/frequency/switch output 1 to n (0474-1 to n)	115
Decimal places 1 (0095)	Failure mode	
Current input 1 to n (1601-1 to n)	Current input 1 to n (1601-1 to n)	87
Decimal places 2 (0117)	Pulse/frequency/switch output 1 to n (0451-1 to n)	114
Current pulse/frequency/switch output 1 to n (0451-1 to n)	Pulse/frequency/switch output 1 to n (0480-1 to n)	109
Decimal places 3 (0118)	Pulse/frequency/switch output 1 to n (0486-1 to n)	121
Current pulse/frequency/switch output 1 to n (0486-1 to n)	Relay output 1 to n (0811-1 to n)	127
Decimal places 4 (0119)	Totalizer 1 to n (0901-1 to n)	176
Default gateway (7210)	Failure mode (0985)	132
Density factor (1878)	Failure mode (7011)	138
Density offset (1877)	Failure value	
Density source (3048)	Current input 1 to n (1602-1 to n)	88
Density unit (0555)	Failure value (7012)	138
Device alarm simulation (0654)	Fieldbus writing access (0273)	142
Device ID (0221)	Filter options (0705)	185
Device ID (7007)		
Device name (0020)		
Device reset (0000)		
Device revision (0204)		
Device tag (0011)		
Device tag (0215)		
Device type (0209)		
Device type (7008)		
DHCP client (7212)		

Firmware version	
I/O module 2 (0072)	192, 194
I/O module 3 (0072)	192, 194
I/O module 4 (0072)	192, 194
Firmware version (0010)	188
Firmware version (0072)	190, 191, 195
Fixed current	
Current output 1 to n (0365-1 to n)	93
Fixed density (3171)	75
Fixed reference density (3178)	76
Flow damping (1802)	71
Flow override (1839)	71
Flow velocity (1852)	45
Format display (0098)	15
Frequency output 1 to n simulation (0472-1 to n)	
.....	208
Frequency output 1 to n value (0473-1 to n)	209
Gateway IP address (2719)	172
Hardware revision (0206)	150
HART address (0219)	141
HART date code (0202)	151
HART descriptor (0212)	150
HART message (0216)	150
HART revision (0205)	150
HART short tag (0220)	140
Header (0097)	25
Header text (0112)	25
I/O alteration code (2762)	85
I/O module 1 to n information (3906-1 to n)	83
I/O module 1 to n terminal numbers (3902-1 to n)	83
I/O module 1 to n type (3901-1 to n)	84
I/O module 2 terminal numbers (3902-2)	192, 193
I/O module 3 terminal numbers (3902-3)	192, 193
I/O module 4 terminal numbers (3902-4)	192, 193
Inlet configuration	
Measuring point 1 (3049-1)	68
Inlet diameter	
Measuring point 1 (3054-1)	69
Inlet run	
Measuring point 1 (3050-1)	69
Input signal level 1 to n (1356-1 to n)	207
Installation direction (1809)	77
Invert output signal	
Pulse/frequency/switch output 1 to n (0470-1 to n)	122
Invert output signal (0993)	133
IP address (7209)	157
IP address domain name server (2720)	172
Kinematic viscosity unit (0578)	60
Last backup (2757)	28
Length unit (0551)	60
Linear expansion coefficient (3153)	76
Liner material	
Measuring point 1 (2928-1)	66
Liner sound velocity	
Measuring point 1 (2936-1)	66
Liner thickness	
Measuring point 1 (2935-1)	67
Locking status (0004)	12
Logging delay (0859)	199
Logging interval (0856)	198
Login page (7273)	158
Lower range value output	
Current output 1 to n (0367-1 to n)	94
MAC address (7214)	156
Manufacturer ID (0259)	149
Manufacturer ID (7009)	136
Mass flow (1847)	45
Mass flow factor (1846)	79
Mass flow offset (1841)	79
Mass flow unit (0554)	57
Mass unit (0574)	58
Master terminal number (0981)	129
Max. switch cycles number	
Relay output 1 to n (0817-1 to n)	54
Max. update period	
Burst configuration 1 to n (2041-1 to n)	148
Maximum frequency value	
Pulse/frequency/switch output 1 to n (0454-1 to n)	111
Measured current 1 to n (0366-1 to n)	51, 103
Measured current 1 to n (1604-1 to n)	49
Measured values 1 to n (1603-1 to n)	49
Measuring mode	
Pulse/frequency/switch output 1 to n (0457-1 to n)	108
Pulse/frequency/switch output 1 to n (0479-1 to n)	112
Measuring mode (0984)	131
Measuring mode current output	
Current output 1 to n (0351-1 to n)	96
Measuring point configuration	
Measuring point 1 (5675-1)	62
Measuring value at maximum frequency	
Pulse/frequency/switch output 1 to n (0475-1 to n)	112
Measuring value at minimum frequency	
Pulse/frequency/switch output 1 to n (0476-1 to n)	111
Medium temperature	
Measuring point 1 (3053-1)	63
Min. update period	
Burst configuration 1 to n (2042-1 to n)	147
Minimum frequency value	
Pulse/frequency/switch output 1 to n (0453-1 to n)	111
Mounting type	
Measuring point 1 (2938-1)	68
Network security (2705)	167
No. of preambles (0217)	141
Nominal diameter (2807)	82
Off value low flow cutoff (1804)	73
On value low flow cutoff (1805)	73
Operating mode	
Pulse/frequency/switch output 1 to n (0469-1 to n)	105
Operating time (0652)	27, 40, 180

Operating time from restart (0653)	179	Secondary variable (SV) (0226)	153
Order code (0008)	188	Security identification (2718)	168
Output current 1 to n (0361-1 to n)	51, 102	Select antenna (2713)	171
Output frequency 1 to n (0471-1 to n)	51, 115	Sensor coupling	
Phase shift (0992)	131	Measuring point 1 (2957-1)	67
Pipe circumference		Sensor type	
Measuring point 1 (2934-1)	65	Measuring point 1 (2924-1)	67
Pipe dimensions		Separator (0101)	26
Measuring point 1 (2943-1)	65	Serial number (0009)	187
Pipe material		Signal mode	
Measuring point 1 (2927-1)	64	Current input 1 to n (1610-1 to n)	86
Pipe outer diameter		Current output 1 to n (0377-1 to n)	92
Measuring point 1 (2910-1)	65	Pulse/frequency/switch output 1 to n (0490-1 to n)	105
Pipe sound velocity		Signal mode (0991)	130
Measuring point 1 (2933-1)	64	Signal strength (2914)	46
Pipe wall thickness		Signal to noise ratio (2917)	46
Measuring point 1 (2916-1)	66	Slave terminal number (0990)	130
Powerless relay status		Slot number (7010)	137
Relay output 1 to n (0816-1 to n)	128	Software option overview (0015)	43
Preset value 1 to n (0913-1 to n)	176	Software revision (0224)	151
Previous diagnostics (0690)	179	Sound velocity	
Primary variable (PV) (0201)	152	Measuring point 1 (2929-1)	63
Process fluid		Sound velocity (1850)	45
Measuring point 1 (2926-1)	63	Sound velocity factor (1849)	80
Process variable current output		Sound velocity offset (1848)	80
Current output 1 to n (0359-1 to n)	92	Square expansion coefficient (3172)	77
Process variable value (1811)	205	SSID name (2707)	170
Pulse output (0987)	54, 133	SSID name (2714)	167
Pulse output 1 to n (0456-1 to n)	52, 110	Status (7004)	139
Pulse output simulation (0988)	212	Status input simulation 1 to n (1355-1 to n)	206
Pulse output simulation 1 to n (0458-1 to n)	209	Subnet mask (7211)	157
Pulse scaling		Switch cycles	
Pulse/frequency/switch output 1 to n (0455-1 to n)	107	Relay output 1 to n (0815-1 to n)	53
Pulse value (0989)	213	Switch output function	
Pulse value 1 to n (0459-1 to n)	210	Pulse/frequency/switch output 1 to n (0481-1 to n)	116
Pulse width		Switch output simulation 1 to n (0462-1 to n)	210
Pulse/frequency/switch output 1 to n (0452-1 to n)	108	Switch status	
Pulse width (0986)	131	Relay output 1 to n (0801-1 to n)	53, 128
Quaternary variable (QV) (0203)	155	Switch status 1 to n (0461-1 to n)	52, 121
Received signal strength (2721)	171	Switch status 1 to n (0463-1 to n)	211
Reference temperature (3147)	77	Switch status 1 to n (0803-1 to n)	212
Relative sensor position		Switch-off delay	
Measuring point 1 (2985-1)	70	Pulse/frequency/switch output 1 to n (0465-1 to n)	121
Relay output 1 to n simulation (0802-1 to n)	211	Relay output 1 to n (0813-1 to n)	126
Relay output function		Switch-off value	
Relay output 1 to n (0804-1 to n)	123	Pulse/frequency/switch output 1 to n (0464-1 to n)	119
Reset access code (0024)	40	Relay output 1 to n (0809-1 to n)	126
Reset all totalizers (2806)	172	Switch-on delay	
Response time		Pulse/frequency/switch output 1 to n (0467-1 to n)	120
Pulse/frequency/switch output 1 to n (0491-1 to n)	114	Relay output 1 to n (0814-1 to n)	127
Response time status input		Switch-on value	
Status input 1 to n (1354-1 to n)	90	Pulse/frequency/switch output 1 to n (0466-1 to n)	119
Result sensor distance / measuring aid		Relay output 1 to n (0810-1 to n)	126
Measuring point 1 (2947-1)	70		
Result sensor type / mounting type			
Measuring point 1 (2946-1)	70		

Temperature compensation (3025)	74
Temperature factor (1871)	81
Temperature offset (1870)	80
Temperature unit (0557)	59
Terminal number	
Current input 1 to n (1611-1 to n)	86
Current output 1 to n (0379-1 to n)	91
Pulse/frequency/switch output 1 to n (0492-1 to n)	104
Relay output 1 to n (0812-1 to n)	123
Status input 1 to n (1358-1 to n)	88
Tertiary variable (TV) (0228)	154
Timeout (7005)	137
Timestamp	178, 179, 181, 182, 183, 184
Totalizer operation mode	
Totalizer 1 to n (0908-1 to n)	175
Totalizer overflow 1 to n (0910-1 to n)	48
Totalizer value 1 to n (0911-1 to n)	47
Transition length	
Measuring point 1 (3065-1)	69
Transmitter identifier (2765)	41
Turbulence (2907)	47
Unit totalizer 1 to n (0915-1 to n)	174
Upper range value output	
Current output 1 to n (0372-1 to n)	96
User name (2715)	168
User role (0005)	13
Value (7003)	139
Value 1 display (0107)	18
Value 2 display (0108)	20
Value 3 display (0110)	21
Value 4 display (0109)	23
Value current input 1 to n (1609-1 to n)	206
Value per pulse (0983)	130
Value status input	
Status input 1 to n (1353-1 to n)	89
Value status input 1 to n (1353-1 to n)	50
Velocity unit (0566)	58
Viscosity	
Measuring point 1 (2932-1)	64
Volume flow (1838)	44
Volume flow factor (1832)	79
Volume flow offset (1831)	78
Volume flow unit (0553)	55
Volume unit (0563)	57
Web server functionality (7222)	158
Web server language (7221)	156
WLAN (2702)	167
WLAN IP address (2711)	169
WLAN MAC address (2703)	169
WLAN mode (2717)	167
WLAN passphrase (2706)	169
WLAN password (2716)	168
WLAN subnet mask (2709)	169
Zero point (2921)	82
Direct access (Parameter)	11
Display (Submenu)	14
Display channel 1 (Submenu)	201
Display channel 2 (Submenu)	202
Display channel 3 (Submenu)	203
Display channel 4 (Submenu)	203
Display damping (Parameter)	24
Display interval (Parameter)	24
Display language (Parameter)	15
Display module (Submenu)	194
Document	
Explanation of the structure of a parameter description	6
Function	4
Structure	4
Symbols used	6
Target group	4
Using the document	4
Document function	4
Double pulse output (Submenu)	54, 129
E	
ENP version (Parameter)	190
Enter access code (Parameter)	13
Entire logging duration (Parameter)	201
Event category 160 (Parameter)	160
Event category 441 (Parameter)	160
Event category 442 (Parameter)	161
Event category 443 (Parameter)	162
Event category 444 (Parameter)	161
Event category 543 (Parameter)	162
Event category 832 (Parameter)	162
Event category 833 (Parameter)	163
Event category 840 (Parameter)	163
Event category 842 (Parameter)	164
Event category 870 (Parameter)	165
Event category 881 (Parameter)	160
Event category 930 (Parameter)	164
Event category 931 (Parameter)	165
Event category 953 (Parameter)	164
Event list (Submenu)	185
Event logbook (Submenu)	184
Extended order code 1 (Parameter)	189
Extended order code 2 (Parameter)	189
Extended order code 3 (Parameter)	189
External compensation (Submenu)	74
External density (Parameter)	76
External temperature (Parameter)	75
F	
Factory settings	215
SI units	215
US units	215
Failure behavior current output (Parameter)	101
Failure current (Parameter)	102
Failure frequency (Parameter)	115
Failure mode (Parameter)	
.	87, 109, 114, 121, 127, 132, 138, 176
Failure value (Parameter)	88, 138
Fieldbus writing access (Parameter)	142
Filter options (Parameter)	185
Firmware version (Parameter)	
.	188, 190, 191, 192, 194, 195

Fixed current (Parameter)	93
Fixed density (Parameter)	75
Fixed reference density (Parameter)	76
Flow damping (Parameter)	71
Flow override (Parameter)	71
Flow velocity (Parameter)	45
Format display (Parameter)	15
Frequency output 1 to n simulation (Parameter)	208
Frequency output 1 to n value (Parameter)	209
Function	
see Parameter	

G

Gateway IP address (Parameter)	172
------------------------------------------	-----

H

Hardware revision (Parameter)	150
HART address (Parameter)	141
HART date code (Parameter)	151
HART descriptor (Parameter)	150
HART input (Submenu)	134
HART message (Parameter)	150
HART output (Submenu)	140
HART revision (Parameter)	150
HART short tag (Parameter)	140
Header (Parameter)	25
Header text (Parameter)	25
Heartbeat Technology (Submenu)	203

I

I/O alteration code (Parameter)	85
I/O configuration (Submenu)	83
I/O module 1 to n information (Parameter)	83
I/O module 1 to n terminal numbers (Parameter)	83
I/O module 1 to n type (Parameter)	84
I/O module 2 (Submenu)	192
I/O module 2 terminal numbers (Parameter)	192, 193
I/O module 3 (Submenu)	193
I/O module 3 terminal numbers (Parameter)	192, 193
I/O module 4 terminal numbers (Parameter)	192, 193
Information (Submenu)	148
Inlet configuration (Parameter)	68
Inlet diameter (Parameter)	69
Inlet run (Parameter)	69
Input (Submenu)	85, 139
Input signal level 1 to n (Parameter)	207
Input values (Submenu)	49
Installation direction (Parameter)	77
Invert output signal (Parameter)	122, 133
IP address (Parameter)	157
IP address domain name server (Parameter)	172

K

Kinematic viscosity unit (Parameter)	60
------------------------------------------------	----

L

Last backup (Parameter)	28
Length unit (Parameter)	60
Linear expansion coefficient (Parameter)	76
Liner material (Parameter)	66

Liner sound velocity (Parameter)	66
Liner thickness (Parameter)	67
Locking status (Parameter)	12
Logging delay (Parameter)	199
Logging interval (Parameter)	198
Login page (Parameter)	158
Low flow cut off (Submenu)	72
Lower range value output (Parameter)	94

M

MAC address (Parameter)	156
Main electronic module + I/O module 1 (Submenu)	190
Manufacturer ID (Parameter)	136, 149
Mass flow (Parameter)	45
Mass flow factor (Parameter)	79
Mass flow offset (Parameter)	79
Mass flow unit (Parameter)	57
Mass unit (Parameter)	58
Master terminal number (Parameter)	129
Max. switch cycles number (Parameter)	54
Max. update period (Parameter)	148
Maximum frequency value (Parameter)	111
Measured current 1 to n (Parameter)	49, 51, 103
Measured values (Submenu)	44
Measured values 1 to n (Parameter)	49
Measuring mode (Parameter)	108, 112, 131
Measuring mode current output (Parameter)	96
Measuring point 1 (Submenu)	61
Measuring point configuration (Parameter)	62
Measuring value at maximum frequency (Parameter)	112

Measuring value at minimum frequency (Parameter)	111
Medium temperature (Parameter)	63
Min. update period (Parameter)	147
Minimum frequency value (Parameter)	111
Mounting type (Parameter)	68

N

Network security (Parameter)	167
No. of preambles (Parameter)	141
Nominal diameter (Parameter)	82

O

Off value low flow cutoff (Parameter)	73
On value low flow cutoff (Parameter)	73
Operating mode (Parameter)	105
Operating time (Parameter)	27, 40, 180
Operating time from restart (Parameter)	179
Order code (Parameter)	188
Output (Submenu)	90, 151
Output current 1 to n (Parameter)	51, 102
Output frequency 1 to n (Parameter)	51, 115
Output values (Submenu)	50

P

Parameter	
Structure of a parameter description	6
Phase shift (Parameter)	131
Pipe circumference (Parameter)	65

Pipe dimensions (Parameter)	65	Slave terminal number (Parameter)	130
Pipe material (Parameter)	64	Slot number (Parameter)	137
Pipe outer diameter (Parameter)	65	Software option overview (Parameter)	43
Pipe sound velocity (Parameter)	64	Software revision (Parameter)	151
Pipe wall thickness (Parameter)	66	Sound velocity (Parameter)	45, 63
Powerless relay status (Parameter)	128	Sound velocity factor (Parameter)	80
Preset value 1 to n (Parameter)	176	Sound velocity offset (Parameter)	80
Previous diagnostics (Parameter)	179	Square expansion coefficient (Parameter)	77
Primary variable (PV) (Parameter)	152	SSID name (Parameter)	167, 170
Process fluid (Parameter)	63	Status (Parameter)	139
Process parameters (Submenu)	70	Status input 1 to n (Submenu)	88
Process variable adjustment (Submenu)	78	Status input simulation 1 to n (Parameter)	206
Process variable current output (Parameter)	92	Submenu	
Process variable value (Parameter)	205	Administration	38
Process variables (Submenu)	44	Application	172
Pulse output (Parameter)	54, 133	Burst configuration 1 to n	142
Pulse output 1 to n (Parameter)	52, 110	Calibration	81
Pulse output simulation (Parameter)	212	Communication	133
Pulse output simulation 1 to n (Parameter)	209	Configuration	134, 140
Pulse scaling (Parameter)	107	Configuration backup	27
Pulse value (Parameter)	213	Current input 1 to n	49, 85
Pulse value 1 to n (Parameter)	210	Current output 1 to n	90
Pulse width (Parameter)	108, 131	Data logging	195
Pulse/frequency/switch output 1 to n (Submenu)		Device information	186
.	51, 103	Diagnostic behavior	30
Q		Diagnostic configuration	159
Quaternary variable (QV) (Parameter)	155	Diagnostic handling	30
R		Diagnostic list	180
Received signal strength (Parameter)	171	Diagnostics	177
Reference temperature (Parameter)	77	Display	14
Relative sensor position (Parameter)	70	Display channel 1	201
Relay output 1 to n (Submenu)	53, 122	Display channel 2	202
Relay output 1 to n simulation (Parameter)	211	Display channel 3	203
Relay output function (Parameter)	123	Display channel 4	203
Reset access code (Parameter)	40	Display module	194
Reset access code (Submenu)	40	Double pulse output	54, 129
Reset all totalizers (Parameter)	172	Event list	185
Response time (Parameter)	114	Event logbook	184
Response time status input (Parameter)	90	External compensation	74
Result sensor distance / measuring aid (Parameter)	70	HART input	134
Result sensor type / mounting type (Parameter)	70	HART output	140
S		Heartbeat Technology	203
Secondary variable (SV) (Parameter)	153	I/O configuration	83
Security identification (Parameter)	168	I/O module 2	192
Select antenna (Parameter)	171	I/O module 3	193
Sensor (Submenu)	43	Information	148
Sensor adjustment (Submenu)	77	Input	85, 139
Sensor coupling (Parameter)	67	Input values	49
Sensor electronic module (ISEM) (Submenu)	191	Low flow cut off	72
Sensor type (Parameter)	67	Main electronic module + I/O module 1	190
Separator (Parameter)	26	Measured values	44
Serial number (Parameter)	187	Measuring point 1	61
Signal mode (Parameter)	86, 92, 105, 130	Output	90, 151
Signal strength (Parameter)	46	Output values	50
Signal to noise ratio (Parameter)	46	Process parameters	70
Simulation (Submenu)	204	Process variable adjustment	78
		Process variables	44
		Pulse/frequency/switch output 1 to n	51, 103
		Relay output 1 to n	53, 122

Reset access code	40
Sensor	43
Sensor adjustment	77
Sensor electronic module (ISEM)	191
Simulation	204
Status input 1 to n	88
System	13
System units	54
System values	45
Totalizer	47
Totalizer 1 to n	173
Value current output 1 to n	50
Value status input 1 to n	50
Web server	155
Subnet mask (Parameter)	157
Switch cycles (Parameter)	53
Switch output function (Parameter)	116
Switch output simulation 1 to n (Parameter)	210
Switch status (Parameter)	53, 128
Switch status 1 to n (Parameter)	52, 121, 211, 212
Switch-off delay (Parameter)	121, 126
Switch-off value (Parameter)	119, 126
Switch-on delay (Parameter)	120, 127
Switch-on value (Parameter)	119, 126
System (_submenu)	13
System units (_submenu)	54
System values (_submenu)	45

T

Target group	4
Temperature compensation (Parameter)	74
Temperature factor (Parameter)	81
Temperature offset (Parameter)	80
Temperature unit (Parameter)	59
Terminal number (Parameter)	86, 88, 91, 104, 123
Tertiary variable (TV) (Parameter)	154
Timeout (Parameter)	137
Timestamp (Parameter)	178, 179, 181, 182, 183, 184
Totalizer (_submenu)	47
Totalizer 1 to n (_submenu)	173
Totalizer operation mode (Parameter)	175
Totalizer overflow 1 to n (Parameter)	48
Totalizer value 1 to n (Parameter)	47
Transition length (Parameter)	69
Transmitter identifier (Parameter)	41
Turbulence (Parameter)	47

U

Unit totalizer 1 to n (Parameter)	174
Upper range value output (Parameter)	96
User name (Parameter)	168
User role (Parameter)	13

V

Value (Parameter)	139
Value 1 display (Parameter)	18
Value 2 display (Parameter)	20
Value 3 display (Parameter)	21
Value 4 display (Parameter)	23

Value current input 1 to n (Parameter)	206
Value current output 1 to n (_submenu)	50
Value per pulse (Parameter)	130
Value status input (Parameter)	50, 89
Value status input 1 to n (_submenu)	50
Velocity unit (Parameter)	58
Viscosity (Parameter)	64
Volume flow (Parameter)	44
Volume flow factor (Parameter)	79
Volume flow offset (Parameter)	78
Volume flow unit (Parameter)	55
Volume unit (Parameter)	57

W

Web server (_submenu)	155
Web server functionality (Parameter)	158
Web server language (Parameter)	156
Wizard	
Define access code	38
WLAN settings	166
WLAN (Parameter)	167
WLAN IP address (Parameter)	169
WLAN MAC address (Parameter)	169
WLAN mode (Parameter)	167
WLAN passphrase (Parameter)	169
WLAN password (Parameter)	168
WLAN settings (Wizard)	166
WLAN subnet mask (Parameter)	169

Z

Zero point (Parameter)	82
----------------------------------	----



71508890

www.addresses.endress.com
