
BA01465G/00/EN/07.22-00 71583101 2022-09-15 Valid as of version 01.06.zz (Device firmware)

# Operating Instructions Tankside Monitor NRF81

Tank Gauging





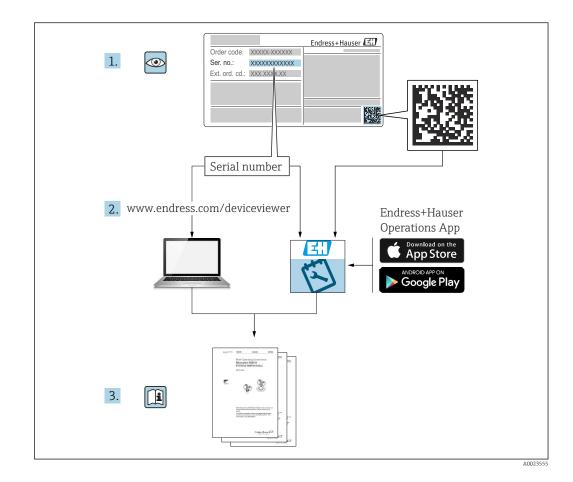

## Table of contents

1	About this document 4
1.1	Document function 4
1.2	Symbols
1.3	Documentation
1.4	Registered trademarks 6
2	Basic safety instructions 7
2.1	Requirements for the personnel 7
2.2	Intended use 7
2.3	Workplace safety 7
2.4	Operational safety 8
2.5	Product safety 8
3	Product description
3.1	Product design
4	Incoming acceptance and product
	identification 10
4.1	Incoming acceptance 10
4.2	Product identification 10
4.3	Storage and transport 12
5	Installation 13
5.1	Installation conditions 13
5.2	Post-installation check 14
6	Electrical connection 15
6.1	Terminal assignment 15
6.2	Connecting requirements 38
6.3	Ensuring the degree of protection
6.4	Post-connection check 39
7	Operability 40
7.1	Overview of the operation options 40
7.2	Structure and function of the operating menu 41
7.3	Access to the operating menu via the local or remote display and operating module 42
7.4	Access to the operating menu via the service interface and FieldCare
7.5	Access to the operating menu via Tankvision
	Tank Scanner NXA820 and FieldCare
8	System integration 56
8.1	Overview of the Device Description files (DTM)
9	Commissioning 57
9.1	Initial settings

9.2	Configuring the tank gauging application	59
9.3	Advanced settings	83
9.4	Simulation	83
9.5	Protecting settings from unauthorized access .	83
10	Operation	84
	-	_
10.1	Reading off the device locking status	84
10.2	Reading off measured values	84
11	Diagnostics and troubleshooting	85
11.1	5	85
	General trouble shooting	
11.2	Diagnostic information on local display	86
11.3	Diagnostic information in FieldCare	89
11.4	Overview of the diagnostic messages	91
11.5	Diagnostic list	97
11.6	Reset measuring device	97
11.7	Device information	97
11.8	Firmware history	97
12	Maintenance	98
12.1	Maintenance tasks	98
12.2	Endress+Hauser services	98
13	Repair	99
13.1	General information on repairs	99
13.2	1 1	100
13.3		100
13.4		100
13.5	Disposal	100
14	Accessories 1	01
14.1	Device-specific accessories	101
14.2		102
14.3		102
14.5	-	102
14.4	System components	105
15	Operating menu 1	04
15.1		104
15.2	1 5	112
15.3	1	122
15.4		241
17.4	אווסונט וווכווע	741
Inde	x	50

## 1 About this document

## 1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

#### 1.2.1 Safety symbols

#### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **A**CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

#### 1.2.2 Electrical symbols

#### $\sim$

Alternating current

## $\sim$

Direct current and alternating current

#### 

Direct current

#### ÷

Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

#### Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

## 1.2.3 Tool symbols

#### • // Flat blade screwdriver

O ∉ Torx screwdriver

🔾 🥼 Allen key

ダ Open-ended wrench

#### **1.2.4** Symbols for certain types of information and graphics

# Permitted Procedures, processes or actions that are permitted Preferred

Procedures, processes or actions that are preferred

#### **Forbidden** Procedures, processes or actions that are forbidden

**1 Tip** Indicates additional information

Reference to documentation

Reference to graphic

►

Notice or individual step to be observed

1., 2., 3.

Series of steps

Result of a step

۲

Visual inspection

Operation via operating tool

Write-protected parameter

**1, 2, 3, ...** Item numbers

**A, B, C, ...** Views

 $\underline{\mathbf{\Lambda}} \rightarrow \mathbf{\mathbf{I}}$  Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

**Temperature resistance of the connection cables** 

Specifies the minimum value of the temperature resistance of the connection cables

## 1.3 Documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website (www.endress.com/downloads):

- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
  - *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate

#### 1.3.1 Technical Information (TI)

#### Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

#### 1.3.2 Brief Operating Instructions (KA)

#### Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

#### 1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

#### 1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

#### 1.3.5 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

#### 1.3.6 Installation instructions (EA)

Installation Instruction are used to replace a faulty unit with a functioning unit of the same type.

## 1.4 Registered trademarks

#### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

## 2 Basic safety instructions

## 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

## 2.2 Intended use

#### Application and measured materials

The device described in these Operating Instructions is a monitoring unit for use with the Endress+Hauser Micropilot M and Micropilot S-series radars and other HART compatible devices. Mounted at the tank side, it provides indication of measured data, allows configuration and supplies intrinsically safe (i.s.) or explosion proof (XP) power to the connected sensors on the tank. Various industry standard digital gauging communication protocols support integration into open architecture tank gauging and inventory systems.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential.
- Protect the measuring device permanently against corrosion from environmental influences.
- Observe the limit values in the "Technical Information".

The manufacturer is not liable for damage caused by improper or non-designated use.

## 2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

## 2.4 Operational safety

#### Risk of injury!

- Operate the device only if it is in proper technical condition, free from errors and faults.
- The operator is responsible for interference-free operation of the device.

#### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

▶ If modifications are nevertheless required, consult with the manufacturer.

#### Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to the repair of an electrical device.
- Use only original spare parts and accessories from the manufacturer.

#### Hazardous area

To eliminate danger to persons or the facility when the device is used in the hazardous area (e.g. explosion protection):

- Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets the general safety standards and legal requirements.

#### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

► If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

#### 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU directives. These are listed in the corresponding EU Declaration of Conformity together with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the CE mark.


## 2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the EAC mark.

#### **Product description** 3

#### Product design 3.1

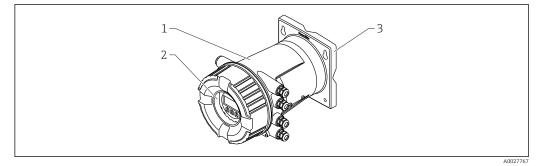

**1** Design of Tankside Monitor NRF81

1 Housing

- 2 3 Display and operating module (can be operated without opening the cover)
- Mounting plate for wall or pipe mounting

## 4 Incoming acceptance and product identification

## 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) enclosed?

If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

## 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate

#### 4.2.1 Nameplate

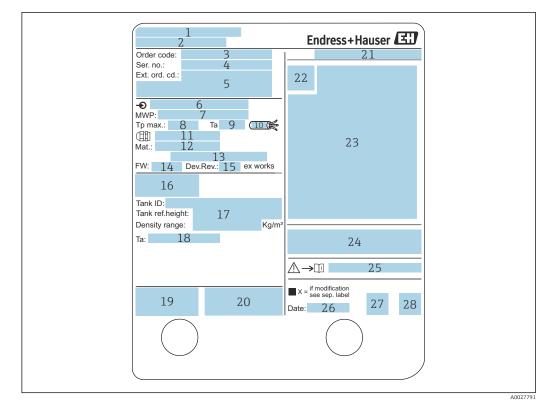

#### ☑ 2 Nameplate

- 1 Manufacturer address
- 2 Device name
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Supply voltage
- 7 Maximum process pressure
- 8 Maximum process temperature
- 9 Permitted ambient temperature  $(T_a)$
- 10 Temperature resistance of cable
- 11 Thread for cable entry
- 12 Material in contact with process
- 13 Not used
- 14 Firmware version
- 15 Device revision
- *16 Metrology certification numbers*
- 17 Customized parametrization data
- 18 Ambient temperature range
- 19 CE mark / C-tick mark
- 20 Additional information on the device version
- 21 Ingress protection
- 22 Certificate symbol
- 23 Data concerning the Ex approval
- 24 General certificate of approval
- 25 Associated Safety Instructions (XA)
- 26 Manufacturing date
- 27 RoHS mark
- 28 QR code for the Endress+Hauser Operations App

#### 4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Place of manufacture: See nameplate.

## 4.3 Storage and transport

#### 4.3.1 Storage conditions

- Storage temperature: -50 to +80 °C (-58 to +176 °F)
- Store the device in its original packaging.

#### 4.3.2 Transport

#### **A**CAUTION


#### Risk of injury

- Transport the measuring device to the measuring point in its original packaging.
- Take into account the mass center of the device in order to avoid unintended tilting.
- Comply with the safety instructions, transport conditions for devices over 18 kg (39.6 lb) (IEC 61010).

## 5 Installation

## 5.1 Installation conditions

### 5.1.1 Wall mounting

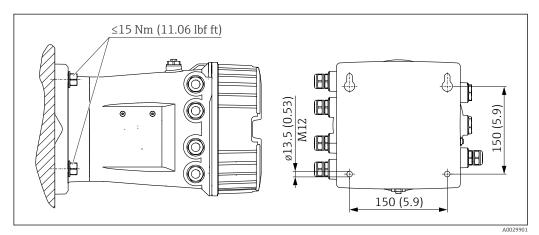

3 Wall mounting of the Tankside Monitor

#### 5.1.2 Pipe mounting

#### Ordering feature 620 "Accessory enclosed"

- PV
  - Mounting kit, pipe, DN32-50 (1-1/4" 2")
- PW
  - Mounting kit, pipe, DN80 (3")


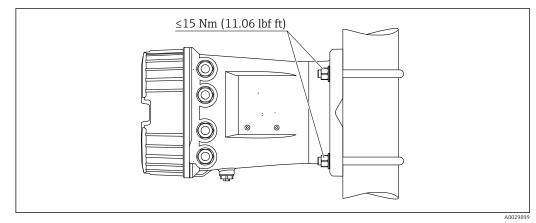


Image: Mounting of the Tankside Monitor at a vertical pipe

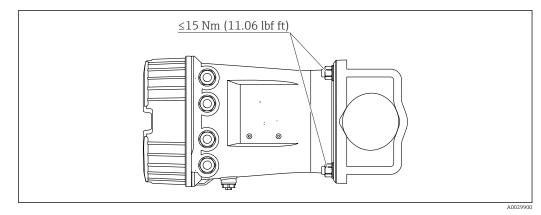


Mounting of the Tankside Monitor at a horizontal pipe

## 5.2 Post-installation check

0	Is the device undamaged (visual inspection)?
о	Does the device conform to the measuring point specifications? For example: Process temperature Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document) Ambient temperature range Measuring range
0	Are the measuring point identification and labeling correct (visual inspection)?
О	Is the device adequately protected from precipitation and direct sunlight?

## 6 Electrical connection

## 6.1 Terminal assignment

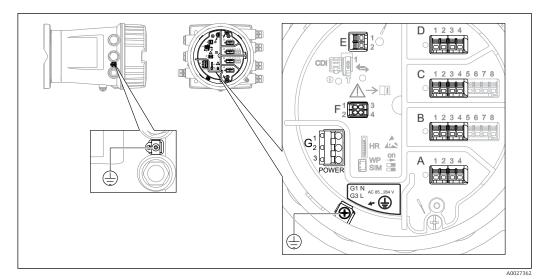

6 Terminal compartment (typical example) and ground terminals

#### Terminal area A/B/C/D (slots for I/O modules)

Module: Up to four I/O modules, depending on the order code

- Modules with four terminals can be in any of these slots.
- Modules with eight terminals can be in slot B or C.

The exact assignment of the modules to the slots is dependent on the device version  $\rightarrow \cong 18$ .

#### Terminal area E

Module: HART Ex i/IS interface

- E1: H+
- E2:H-

#### Terminal area F

Remote display

- F1: V<sub>CC</sub> (connect to terminal 81 of the remote display)
- F2: Signal B (connect to terminal 84 of the remote display)
- F3: Signal A (connect to terminal 83 of the remote display)
- F4: Gnd (connect to terminal 82 of the remote display)

## Terminal area G (for High voltage AC power supply and Low voltage AC power supply)

- G1: N
- G2: not connected
- G3: L

#### Terminal area G (for Low voltage DC power supply)

- G1: L-
- G2: not connected
- G3:L+


#### Terminal area: Protective ground

Module: Protective ground connection (M4 screw)



#### 🖻 7 Terminal area: Protective ground

#### 6.1.1 Power supply

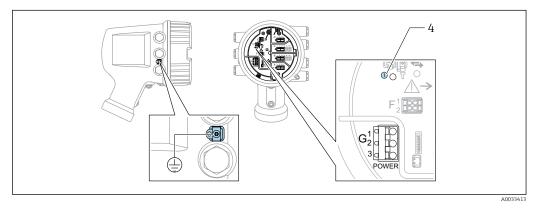

#### G1 N

G2 not connected

G3 L

4 Green LED: indicates power supply

The supply voltage is also indicated on the nameplate.

#### Supply voltage

#### High voltage AC power supply:

Operational value: 100 to 240  $V_{AC}$  (- 15 % + 10 %) = 85 to 264  $V_{AC}$  , 50/60 Hz

#### Low voltage AC power supply:

Operational value: 65 V<sub>AC</sub> (- 20 % + 15 %) = 52 to 75 V<sub>AC</sub> , 50/60 Hz

#### Low voltage DC power supply:

Operational value: 24 to 55  $V_{DC}$  (- 20 % + 15 %) = 19 to 64  $V_{DC}$ 


#### Power consumption

Maximum power varies depending on the configuration of the modules. The value shows maximum apparent power, select the applicable cables accordingly. The actual consumed effective power is 12 W.

**High voltage AC power supply:** 28.8 VA

**Low voltage AC power supply:** 21.6 VA


Low voltage DC power supply:  $13.4\ \mathrm{W}$ 

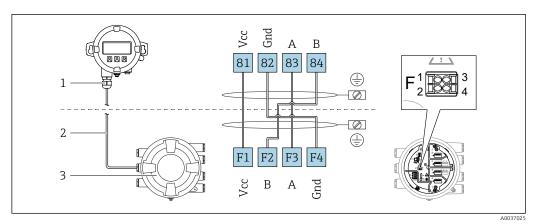

#### 6.1.2 Remote display and operating module DKX001


- 8 Connection of the remote display and operating module DKX001 to the Tank Gauging device (NMR8x, NMS8x or NRF8x)
- 1 Remote display and operating module
- 2 Connecting cable
- 3 Tank Gauging device (NMR8x, NMS8x or NRF8x)

The remote display and operating module DKX001 is available as an accessory. For details refer to SD01763D.

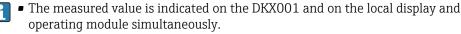

• The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

#### 6.1.3 HART Ex i/IS interface

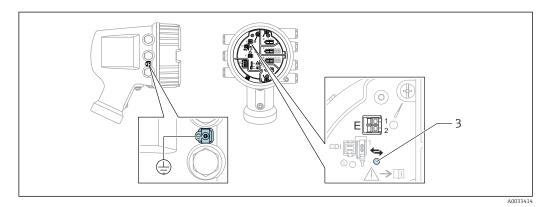

E1 H+

E2 H-


3 Orange LED: indicates data communication

This interface always operates as the main HART master for connected HART slave transmitters. The Analog I/O modules, on the other hand, can be configured as a HART master or slave  $\rightarrow \square 32 \rightarrow \square 34$ .

#### 6.1.4 Slots for I/O modules

The terminal compartment contains four slots (A, B, C and D) for I/O modules. Depending on the device version (ordering features 040, 050 and 060) these slots contain different I/O modules. The table below shows which module is located in which slot for a specific device version.

The slot assignment for the device is also indicated on a label attached to the back cover of the display module.

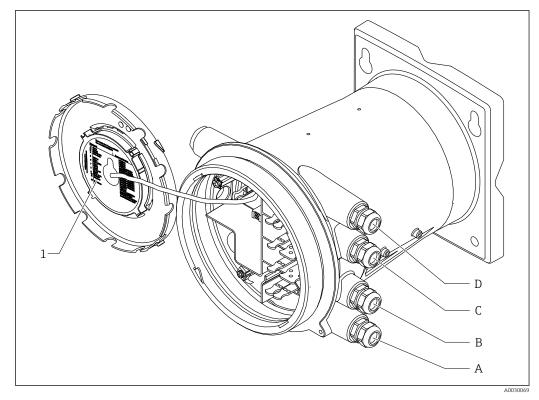

- 1 Label showing (among other things) the modules in the slots A to D.
- A Cable entry for slot A
- *B* Cable entry for slot *B*
- C Cable entry for slot C
- D Cable entry for slot D

#### List of abbreviations used in table "Primary Output" (040) = "Modbus" (A1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- M Modbus
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "Modbus" (A1)

	0 <sup>1)</sup>		T <sup>2)</sup>			
	0-/		Τ²,			
NRF81 -	- xxxx XX XX XX 040 050 060					
040 3)	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1234	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	1 2 3 4 1 2 3 4
A1	XO	XO	М	-	-	-
A1	XO	A1	М	-	-	D
A1	XO	A2	М	-	D	D
A1	XO	A3	М	D	D	D
A1	XO	B1	М	М	-	-
A1	XO	B2	М	М	-	D
A1	XO	В3	М	М	D	D
A1	XO	C1	М	V1	-	-
A1	XO	C2	М	V1	-	D
A1	XO	С3	М	V1	D	D
A1	XO	E1	М	W	-	-
A1	XO	E2	М	W	-	D
A1	XO	E3	М	W	D	D
A1	A1	XO	М	A/XP	-	-
A1	A1	A1	М	A/XP	-	D
A1	A1	A2	М	A/XP	D	D
A1	A1	B1	М	М	A/XP	-
A1	A1	B2	М	М	A/XP	D
A1	A1	C1	М	V1	A/XP	-
A1	A1	C2	М	V1	A/XP	D
A1	A1	E1	М	W	A/XP	-
A1	A1	E2	М	W	A/XP	D
A1	A2	XO	М	A/XP	A/XP	-
A1	A2	A1	М	A/XP	A/XP	D
A1	A2	B1	М	A/XP	A/XP	М
A1	A2	C1	М	A/XP	A/XP	V1
A1	A2	E1	М	A/XP	A/XP	W
A1	B1	XO	М	A/IS	-	-
A1	B1	A1	М	A/IS	-	D
A1	B1	A2	М	A/IS	D	D

0 <sup>1)</sup>			T <sup>2)</sup>			
NRF81 - xxxx XX XX XX 040 050 060						
040 3)	050 <sup>4)</sup>	060 5)	A 1234	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
A1	B1	B1	М	М	A/IS	-
A1	B1	B2	М	М	A/IS	D
A1	B1	C1	М	V1	A/IS	-
A1	B1	C2	М	V1	A/IS	D
A1	B1	E1	М	W	A/IS	-
A1	B1	E2	М	W	A/IS	D
A1	B2	XO	М	A/IS	A/IS	-
A1	B2	A1	М	A/IS	A/IS	D
A1	B2	B1	М	A/IS	A/IS	М
A1	B2	C1	М	A/IS	A/IS	V1
A1	B2	E1	М	A/IS	A/IS	W
A1	C2	XO	М	A/IS	A/XP	-
A1	C2	A1	М	A/IS	A/XP	D
A1	C2	B1	М	A/IS	A/XP	М
A1	C2	C1	М	A/IS	A/XP	V1
A1	C2	E1	М	A/IS	A/XP	W

- Ordering feature 1)
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

#### List of abbreviations used in table "Primary Output" (040) = "V1" (B1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
  A/IS Analog Ex i/IS

"Primary Output" (040) = "V1" (B1)

	0 <sup>1)</sup>	) = "V1" (B1	T <sup>2)</sup>			
	0-1		T <sup>2</sup>			
NRF81 -	- xxxx XX XX 040 050	XX 0 060				
040 <sup>3)</sup>	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
B1	X0	XO	V1	-	-	-
B1	X0	A1	V1	-	-	D
B1	X0	A2	V1	-	D	D
B1	X0	A3	V1	D	D	D
B1	X0	B1	V1	М	-	-
B1	X0	B2	V1	М	-	D
B1	X0	B3	V1	М	D	D
B1	X0	C1	V1	V1	-	-
B1	X0	C2	V1	V1	-	D
B1	X0	C3	V1	V1	D	D
B1	X0	E1	V1	W	-	-
B1	X0	E2	V1	W	-	D
B1	X0	E3	V1	W	D	D
B1	A1	XO	V1	A/XP	-	-
B1	A1	A1	V1	A/XP	-	D
B1	A1	A2	V1	A/XP	D	D
B1	A1	B1	V1	М	A/XP	-
B1	A1	B2	V1	М	A/XP	D
B1	A1	C1	V1	V1	A/XP	-
B1	A1	C2	V1	V1	A/XP	D
B1	A1	E1	V1	W	A/XP	-
B1	A1	E2	V1	W	A/XP	D
B1	A2	XO	V1	A/XP	A/XP	-
B1	A2	A1	V1	A/XP	A/XP	D
B1	A2	B1	V1	A/XP	A/XP	М
B1	A2	C1	V1	A/XP	A/XP	V1
B1	A2	E1	V1	A/XP	A/XP	W
B1	B1	XO	V1	A/IS	-	-
B1	B1	A1	V1	A/IS	-	D
B1	B1	A2	V1	A/IS	D	D

0 <sup>1)</sup>			T <sup>2)</sup>				
NRF81	- xxxx XX XX 040 050	XX 0 060					
0403)	050 <sup>4)</sup>	060 5)	A 1234	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8		
B1	B1	B1	V1	М	A/IS	-	
B1	B1	B2	V1	М	A/IS	D	
B1	B1	C1	V1	V1	A/IS	-	
B1	B1	C2	V1	V1	A/IS	D	
B1	B1	E1	V1	W	A/IS	-	
B1	B1	E2	V1	W	A/IS	D	
B1	B2	XO	V1	A/IS	A/IS	-	
B1	B2	A1	V1	A/IS	A/IS	D	
B1	B2	B1	V1	A/IS	A/IS	М	
B1	B2	C1	V1	A/IS	A/IS	V1	
B1	B2	E1	V1	A/IS	A/IS	W	
B1	C2	X0	V1	A/IS	A/XP	-	
B1	C2	A1	V1	A/IS	A/XP	D	
B1	C2	B1	V1	A/IS	A/XP	М	
B1	C2	C1	V1	A/IS	A/XP	V1	
B1	C2	E1	V1	A/IS	A/XP	W	

- Ordering feature 1)
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

#### List of abbreviations used in table "Primary Output" (040) = "V1" (B1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
  A/IS Analog Ex i/IS

"Primary Output" (040) = "WM550" (C1)

	0 <sup>1)</sup>	,	T <sup>2)</sup>				
			-				
NRF81 -	NRF81 - xxxx XX XX XX 040 050 060						
040 <sup>3)</sup>	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1234	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	- 1 2 3 4 A0023888	
C1	Х0	XO	W	-	-	-	
C1	X0	A1	W	-	-	D	
C1	XO	A2	W	-	D	D	
C1	XO	A3	W	D	D	D	
C1	X0	B1	W	М	-	-	
C1	Х0	B2	W	М	-	D	
C1	X0	B3	W	М	D	D	
C1	Х0	C1	W	V1	-	-	
C1	X0	C2	W	V1	-	D	
C1	X0	С3	W	V1	D	D	
C1	X0	E1	W	W	-	-	
C1	XO	E2	W	W	-	D	
C1	X0	E3	W	W	D	D	
C1	A1	XO	W	A/XP	-	-	
C1	A1	A1	W	A/XP	-	D	
C1	A1	A2	W	A/XP	D	D	
C1	A1	B1	W	М	A/XP	-	
C1	A1	B2	W	М	A/XP	D	
C1	A1	C1	W	V1	A/XP	-	
C1	A1	C2	W	V1	A/XP	D	
C1	A1	E1	W	W	A/XP	-	
C1	A1	E2	W	W	A/XP	D	
C1	A2	X0	W	A/XP	A/XP	-	
C1	A2	A1	W	A/XP	A/XP	D	
C1	A2	B1	W	A/XP	A/XP	М	
C1	A2	C1	W	A/XP	A/XP	V1	
C1	A2	E1	W	A/XP	A/XP	W	
C1	B1	XO	W	A/IS	-	-	
C1	B1	A1	W	A/IS	-	D	
C1	B1	A2	W	A/IS	D	D	

0 <sup>1)</sup>				Т	2)	
NRF81 - xxxx XX XX XX 040 050 060						
040 3)	050 <sup>4)</sup>	060 5)	A 1 2 3 4	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	
C1	B1	B1	W	М	A/IS	-
C1	B1	B2	W	М	A/IS	D
C1	B1	C1	W	V1	A/IS	-
C1	B1	C2	W	V1	A/IS	D
C1	B1	E1	W	W	A/IS	-
C1	B1	E2	W	W	A/IS	D
C1	B2	XO	W	A/IS	A/IS	-
C1	B2	A1	W	A/IS	A/IS	D
C1	B2	B1	W	A/IS	A/IS	М
C1	B2	C1	W	A/IS	A/IS	V1
C1	B2	E1	W	A/IS	A/IS	W
C1	C2	XO	W	A/IS	A/XP	-
C1	C2	A1	W	A/IS	A/XP	D
C1	C2	B1	W	A/IS	A/XP	М
C1	C2	C1	W	A/IS	A/XP	V1
C1	C2	E1	W	A/IS	A/XP	W

- Ordering feature 1)
- 2) Terminal area
- 3) Primary Output
- 4) Secondary IO Analog
- 5) Secondary IO Digital Ex d/XP

#### List of abbreviations used in table "Primary Output" (040) = "V1" (B1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
  A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex d" (E1)

	0 <sup>1)</sup>			T <sup>2)</sup>			
NRF81	- xxxx XX XX 040 050	XX 0 060					
040 <sup>3)</sup>	050 <sup>4)</sup>	060 5)	A 1234	B 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8	- 1 2 3 4	
E1	XO	XO	-	A/XP	-	-	
E1	XO	A1	-	A/XP	-	D	
E1	XO	A2	-	A/XP	D	D	
E1	XO	A3	D	A/XP	D	D	
E1	XO	B1	М	A/XP	-	-	
E1	XO	B2	М	A/XP	-	D	
E1	XO	B3	М	A/XP	D	D	
E1	XO	C1	V1	A/XP	-	-	
E1	XO	C2	V1	A/XP	-	D	
E1	XO	С3	V1	A/XP	D	D	
E1	A1	XO	-	A/XP	A/XP	-	
E1	A1	A1	-	A/XP	A/XP	D	
E1	A1	A2	D	A/XP	A/XP	D	
E1	A1	B1	М	A/XP	A/XP	-	
E1	A1	B2	М	A/XP	A/XP	D	
E1	A1	C1	V1	A/XP	A/XP	-	
E1	A1	C2	V1	A/XP	A/XP	D	
E1	B1	XO	-	A/XP	A/IS	-	
E1	B1	A1	-	A/XP	A/IS	D	
E1	B1	A2	D	A/XP	A/IS	D	
E1	B1	B1	М	A/XP	A/IS	-	
E1	B1	B2	М	A/XP	A/IS	D	
E1	B1	C1	V1	A/XP	A/IS	-	
E1	B1	C2	V1	A/XP	A/IS	D	

Ordering feature Terminal area 1)

2) 3) 4) 5)

Primary Output Secondary IO Analog Secondary IO Digital Ex d/XP

#### List of abbreviations used in table "Primary Output" (040) = "V1" (B1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

"Primary Output" (040) = "4-20mA HART Ex i" (H1)

	Primary Output (040) = 4-20mA HART Ext (H1)									
	0 <sup>1)</sup>		T <sup>2)</sup>							
NRF81	- xxxx XX XX 040 050	XX 0 060								
040 <sup>3)</sup>	050 <sup>4)</sup>	060 <sup>5)</sup>	A 1 2 3 4	<b>B</b> 1 2 3 4 5 6 7 8	C 1 2 3 4 5 6 7 8					
H1	XO	XO	-	A/IS	-	-				
H1	XO	A1	-	A/IS	-	D				
H1	XO	A2	-	A/IS	D	D				
H1	X0	A3	D	A/IS	D	D				
H1	X0	B1	М	A/IS	-	-				
H1	X0	B2	М	A/IS	-	D				
H1	XO	В3	М	A/IS	D	D				
H1	XO	C1	V1	A/IS	-	-				
H1	XO	C2	V1	A/IS	-	D				
H1	X0	С3	V1	A/IS	D	D				
H1	A1	XO	-	A/IS	A/XP	-				
H1	A1	A1	-	A/IS	A/XP	D				
H1	A1	A2	D	A/IS	A/XP	D				
H1	A1	B1	М	A/IS	A/XP	-				
H1	A1	B2	М	A/IS	A/XP	D				
H1	A1	C1	V1	A/IS	A/XP	-				
H1	A1	C2	V1	A/IS	A/XP	D				
H1	B1	XO	-	A/IS	A/IS	-				
H1	B1	A1	-	A/IS	A/IS	D				
H1	B1	A2	D	A/IS	A/IS	D				
H1	B1	B1	М	A/IS	A/IS	-				
H1	B1	B2	М	A/IS	A/IS	D				
H1	B1	C1	V1	A/IS	A/IS	-				
H1	B1	C2	V1	A/IS	A/IS	D				

Ordering feature Terminal area 1)


2)

2) 3) 4) 5)


Primary Output Secondary IO Analog Secondary IO Digital Ex d/XP

#### List of abbreviations used in table "Primary Output" (040) = "V1" (B1)

- O Ordering feature
- T Terminal area
- 040 Primary Output
- 050 Secondary IO Analog
- 060 Secondary IO Digital Ex d/XP
- V1 Sakura V1
- M Modbus
- W Whessoe WM550
- D Digital
- A/XP Analog Ex d/XP
- A/IS Analog Ex i/IS

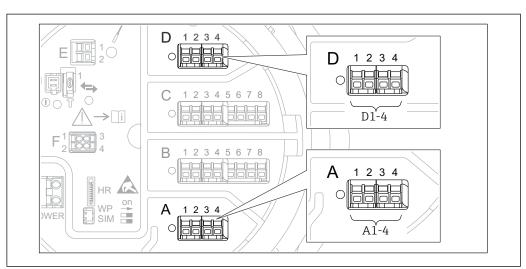

# 6.1.5 Terminals of the "Modbus" module, "V1" module or "WM550" module

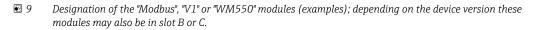

Depending on the device version, the "Modbus" and/or "V1" or "WM550" module may be in different slots of the terminal compartment. In the operating menu the "Modbus" and "V1" or "WM550" interfaces are designated by the respective slot and the terminals within this slot: **A1-4**, **B1-4**, **C1-4**, **D1-4**.

#### Terminals of the "Modbus" module

Designation of the module in the operating menu: **Modbus X1-4**; (X = A, B, C or D)


- X1<sup>1)</sup>
  - Terminal name: S
  - Description: Cable shielding connected via a capacitor to EARTH
- X2 <sup>1)</sup>
  - Terminal name: 0V
  - Description: Common reference
- X3 <sup>1)</sup>
  - Terminal name: B-
  - Description: Non-inverting signal line
- X4<sup>1)</sup>
  - Terminal name: A+
  - Description: Inverting signal line

<sup>1)</sup> Here, "X" stands for one of the slots "A", "B", "C", or "D".

#### Terminals of the "V1" and "WM550" module

Designation of the module in the operating menu: V1 X1-4 or WM550 X1-4; (X = A, B, C or D)

- X1<sup>2)</sup>
  - Terminal name: S
  - Description: Cable shielding connected via a capacitor to EARTH
- X2 <sup>1)</sup>
  - Terminal name: -
  - Description: not connected
- X3 <sup>1)</sup>
  - Terminal name: B-
  - Description: Protocol loop signal -
- X4 <sup>1)</sup>
  - Terminal name: A+
  - Description: Protocol loop signal +

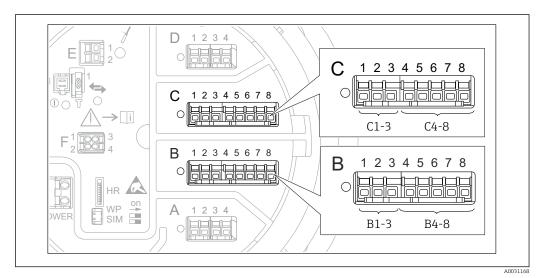

#### 6.1.6 Terminals of the "Analog I/O" module (Ex d /XP or Ex i/IS)

#### Terminal: B1-3

Function: Analog input or output (configurable)

- Passive usage:  $\rightarrow$  🗎 32
- Active usage:  $\rightarrow \square 34$
- Designation in the operating menu: Analog I/O B1-3 ( $\rightarrow \square$  139)

#### Terminal: C1-3

Function: Analog input or output (configurable)

- Passive usage:  $\rightarrow$  🗎 32
- Active usage:  $\rightarrow \square 34$

#### Terminal: B4-8

Function: Analog input

- RTD: → 🗎 35
- FMR5xx: → 🖺 36

<sup>2)</sup> Here, "X" stands for one of the slots "A", "B", "C", or "D".

#### Terminal: C4-8


Function: Analog input

- RTD: → 🖺 35
- FMR5xx: → 🗎 36
- Designation in the operating menu: Analog IP C4-8 ( $\rightarrow \cong$  133)

#### 6.1.7 Connection of the "Analog I/O" module for passive usage

- In the passive usage the supply voltage for the communication line must be supplied by an external source.
  - The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.


#### "Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

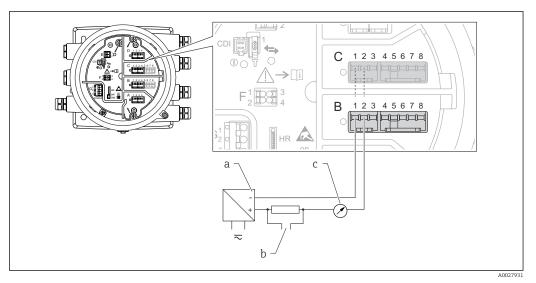

■ 10 Passive usage of the Analog I/O module in the output mode

- a Power supply
- b HART signal output
- c Analog signal evaluation


#### "Operating mode" = "4..20mA input" or "HART master+4..20mA input"

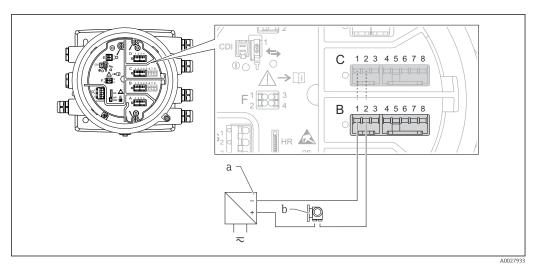

■ 11 Passive usage of the Analog I/O module in the input mode

- a Power supply
- b External device with 4...20mA and/or HART signal output

#### "Operating mode" = "HART master"

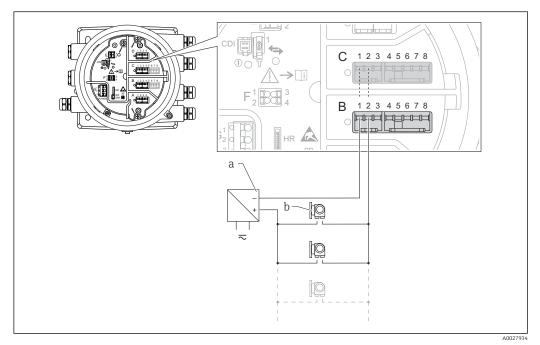

 $\blacksquare 12 \qquad \textit{Passive usage of the Analog I/O module in the HART master mode}$ 

- a Power supply
- *b* Up to 6 external devices with HART signal output


#### 6.1.8 Connection of the "Analog I/O" module for active usage

- In the active usage the supply voltage for the communication line is supplied by the device itself. There is no need of an external power supply.
  - The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.

• Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).

- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA


"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

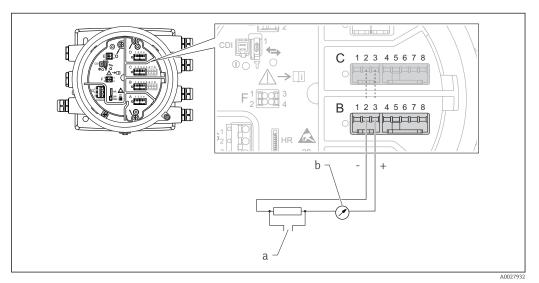

■ 13 Active usage of the Analog I/O module in the output mode


- a HART signal output
- b Analog signal evaluation

#### "Operating mode" = "4..20mA input" or "HART master+4..20mA input"

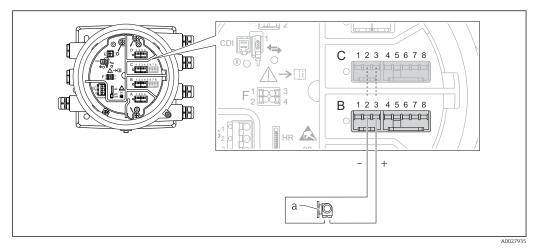

- 🖻 14 Active usage of the Analog I/O module in the input mode
- a External device with 4...20mA and/or HART signal output

#### "Operating mode" = "HART master"

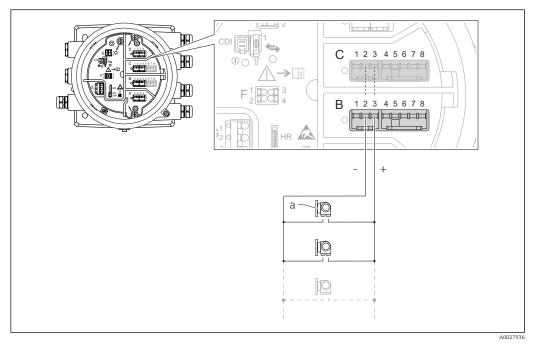


■ 15 Active usage of the Analog I/O module in the HART master mode

a Up to 6 external devices with HART signal output

The maximum current consumption for the connected HART devices is 24 mA (i.e. 4 mA per device if 6 devices are connected).


#### 6.1.9 Connection of a RTD

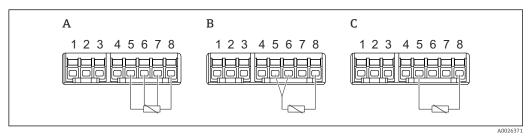

A 4-wire RTD connection

B 3-wire RTD connection

C 2-wire RTD connection

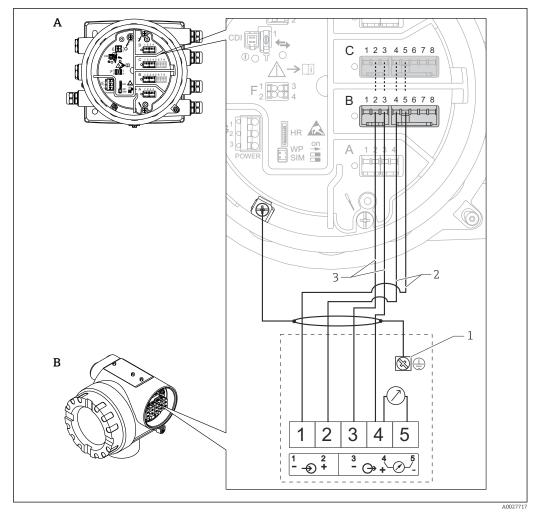

#### 6.1.10 Connection of a Micropilot S FMR5xx




- A Tankside Monitor NRF81
- B Micropilot S FMR5xx
- 1 Grounding

1

- 2 Power supply (from NRF81 to FMR5xx)
- 3 4-20mA/HART signal (from FMR5xx to NRF81)

If connected in this way, the Micropilot S FMR5xx gets its supply voltage from the Tankside Monitor NRF81.

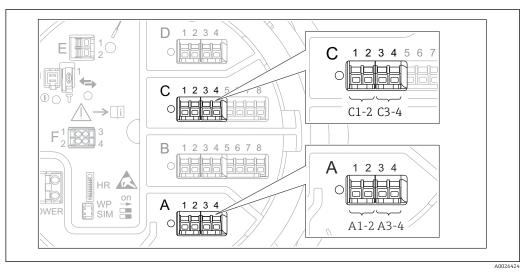

## 6.1.11 Terminals of the "Digital I/O" module

■ 17 Designation of the digital inputs or outputs (examples)

- Each Digital IO Module provides two digital inputs or outputs.
- In the operating menu each input or output is designated by the respective slot and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
- For each of these pairs of terminals, one of the following operating modes can be selected in the operating menu:
- Disable
- Passive Output
- Passive Input
- Active Input

## 6.2 Connecting requirements

## 6.2.1 Cable specification

## Terminals

### Wire cross section 0.2 to 2.5 mm<sup>2</sup> (24 to 13 AWG)

Use for terminals with function: Signal and power supply

- Spring terminals (NRF81-xx1...)
- Screw terminals (NRF81-xx2...)

#### Wire cross section max. 2.5 mm<sup>2</sup> (13 AWG) Use for terminals with function: Ground terminal in the terminal compartment

Wire cross section max. 4 mm<sup>2</sup> (11 AWG) Use for terminals with function: Ground terminal at the housing

## Power supply line

Standard device cable is sufficient for the power line.

## HART communication line

- Standard device cable is sufficient if only the analog signal is used.
- Shielded cable is recommended if using the HART protocol. Observe the grounding concept of the plant.

## Modbus communication line

- Observe the cable conditions from the TIA-485-A, Telecommunications Industry Association.
- Additional conditions: Use shielded cable.

## V1 communication line

- 2-wire twisted pair, screened or unscreened cable
- Resistance in one cable:  $\leq 120 \ \Omega$
- Capacitance between lines:  $\leq 0.3 \ \mu F$

### WM550 communication line

- 2-wire twisted pair, unscreened cable
- Cross section minimum 0.5 mm<sup>2</sup> (20 AWG)
- Maximum total cable resistance:  $\leq 250 \Omega$
- Cable with low capacitance


## 6.3 Ensuring the degree of protection

To guarantee the specified degree of protection, carry out the following steps after the electrical connection:

- **1.** Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
- 2. Tighten all housing screws and screw covers.
- 3. Firmly tighten the cable glands.

╘

4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

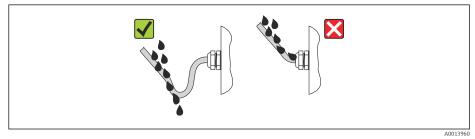

**5.** Insert blind plugs appropriate for the safety rating of the device (e.g. Ex d/XP).

## 6.4 Post-connection check

Are cables or the device undamaged (visual inspection)?
Do the cables comply with the requirements?
Do the cables have adequate strain relief?
Are all cable glands installed, firmly tightened and correctly sealed?
Does the supply voltage match the specifications on the transmitter nameplate?
Is the terminal assignment correct $\rightarrow \square$ 15?
If required: Is the protective earth connected correctly ?
If supply voltage is present: Is the device ready for operation and do values appear on the display module?
Are all housing covers installed and firmly tightened?
Is the securing clamp tightened correctly?

## 7 Operability

## 7.1 Overview of the operation options

The device is operated via an operating menu  $\rightarrow \cong$  41. This menu can be accessed by the following interfaces:

- FieldCare connected through the service interface in the terminal compartment of the device ( $\rightarrow \cong 53$ ).
- FieldCare connected through Tankvision Tank Scanner NXA820 (remote operation;  $\rightarrow \cong 53$ ).
- FieldCare connected through Commubox FXA195 (  $\Rightarrow \cong$  102) to a HART interface of the device.

# 7.2 Structure and function of the operating menu

Menu	Submenu / parameter	Meaning
Operation	Level	Shows the measured and calculated level values.
	Temperature	Shows the measured and calculated temperature values.
	Density	Shows the measured and calculated density values.
	Pressure	Shows the measured and calculated pressure values.
	GP values	Shows the general purpose values.
Setup	Parameters 1 to N	Standard commissioning parameters
	Advanced setup	<ul> <li>Contains further parameters and submenus:</li> <li>to adapt the device to special measuring conditions.</li> <li>to process the measured value.</li> <li>to configure the signal output.</li> </ul>
Diagnostics	Diagnostic parameters	<ul> <li>Indicates:</li> <li>The latest diagnostic messages and their timestamps.</li> <li>The operating time (overall time and time since last restart).</li> <li>The time according to the real-time clock.</li> </ul>
	Diagnostic list	Contains up to 5 currently active error messages.
	Device information	Contains information needed to identify the device.
	Simulation	Used to simulate measured values or output values.
<b>Expert</b> <sup>1)</sup> Contains all parameters of the device (including those which are already contained in one of the	System	Contains all general device parameters which do not affect the measurement or the communication interface.
other menus). This menu is organized according to the function blocks of the device. The parameter of the <b>Expert</b> menu are described in:	Input/output	Contains submenus to configure the analog and discrete I/O modules and connected HART devices.
GP01083G (NRF81)	Communication	Contains all parameters needed to configure the digital communication interface.
	Application	Contains submenus to configure • the tank gauging application • the tank calculations • the alarms.
	Tank values	Shows measured and calculated tank values
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

1) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


# 7.3 Access to the operating menu via the local or remote display and operating module

- Operating via the remote display and operating module DKX001 (→ 
   17) or the local display and operating module at the device are equivalent.
  - The measured value is indicated on the DKX001 and on the local display and operating module simultaneously.
  - The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

## 7.3.1 Display and operating elements

The device has an illuminated **liquid crystal display (LCD)** that shows measured and calculated values as well as the device status in the standard view. Other views are used to navigate through the operating menu and to set parameter values.


The device is operated by **three optical keys**, namely "-", "+" and "E". They are actuated when the appropriate field on the protective glass of the front is **lightly** touched with the finger ("touch control").

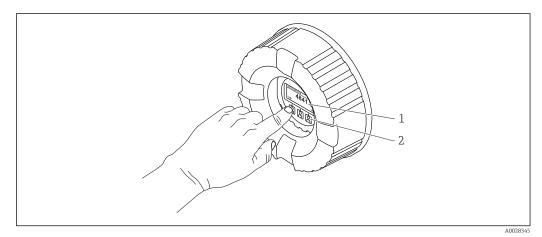

Is Display and operating elements

- 1 Liquid crystal display (LCD)
- 2 Optical keys; can be operated through the cover glass. If used without the cover glass, lightly place your finger in front of the optical sensor for activation. Do not press hard.

## 7.3.2 Standard view (measured value display)

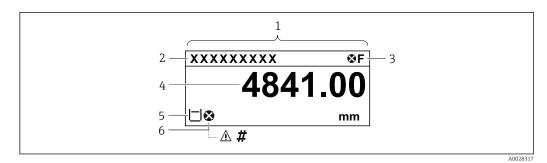

■ 19 Typical appearance of the standard view (measured value display)

- 1 Display module
- 2 Device tag
- 3 Status area
- 4 Display area for measured values
- 5 Display area for measured value and status symbols
- 6 Measured value status symbol

#### Status symbols

Symbol	Meaning
A0013956	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b> A0013959	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b> A0013958	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
A0013957	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.

## Measured value status symbols

Symbol	Meaning
A0012102	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
A0012103	<b>Status "Warning"</b> The device continues measuring. A diagnostic message is generated.
A0031169	<ul> <li>Calibration to regulatory standards disturbed</li> <li>Is displayed in the following situations:</li> <li>The write protection switch is OFF. →</li></ul>
	<ul> <li>The write protection switch is ON but the level value can currently not be guaranteed.</li> </ul>


#### Locking state symbols

Symbol	Meaning		
A0011978	<b>Display parameter</b> Marks display-only parameters which cannot be edited.		
$\Box$	Device locked		
A0011979	<ul><li>In front of a parameter name: The device is locked via software and/or hardware.</li><li>In the header of the measured value screen: The device is locked via hardware.</li></ul>		

Mogning of the kove in the standard	1210142
Meaning of the keys in the standard	. VIEW

Кеу	Meaning
• • • A0028326	<ul> <li>Enter key</li> <li>Pressing the key briefly opens the operating menu.</li> <li>Pressing the key for 2 s opens the context menu:</li> <li>Level (visible if the keylock is inactive): Shows the measured levels.</li> <li>Keylock on (visible if the keylock is inactive): Activates the keylock.</li> <li>Keylock off (visible if the keylock is active): Deactivates the keylock.</li> </ul>

## 7.3.3 Navigation view

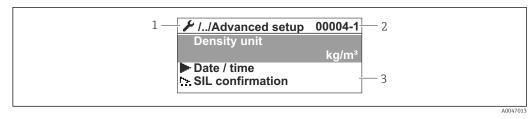

#### 20 Navigation view

- 1 Current submenu or wizard
- 2 Quick access code
- 3 Display area for navigation

## Navigation symbols

Symbol	Meaning
A0011975	<ul> <li>Operation</li> <li>Is displayed:</li> <li>in the main menu next to the selection Operation</li> <li>in the header, if you are in the Operation menu.</li> </ul>
A0011974	<ul> <li>Setup</li> <li>Is displayed:</li> <li>in the main menu next to the selection Setup</li> <li>in the header, if you are in the Setup menu</li> </ul>
A0011976	<ul> <li>Expert</li> <li>Is displayed:</li> <li>in the main menu next to the selection Expert</li> <li>in the header, if you are in the Expert menu</li> </ul>
V.	<ul> <li>Diagnostics</li> <li>Is displayed:</li> <li>in the main menu next to the selection Diagnostics</li> <li>in the header, if you are in the Diagnostics menu</li> </ul>
A0013967	Submenu
A0013968	Wizard
A0013963	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked.

Meaning of the keys in the navigation view

Кеу		Meaning
	A0028324	<b>Minus key</b> Moves the selection bar upwards in a picklist.
	DE A0028325	<b>Plus key</b> Moves the selection bar downwards in a picklist.
	A0028326	<ul> <li>Enter key</li> <li>Pressing the key briefly opens the selected menu, submenu or parameter.</li> <li>For parameters: Pressing the key for 2 s opens the help text for the function of the parameter (if present).</li> </ul>
	A0028327	<ul> <li>Escape key combination (press keys simultaneously)</li> <li>Pressing the keys briefly <ul> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the keys for 2 s returns you to the measured value display ("standard view").</li> </ul>

## 7.3.4 Wizard view



■ 21 Wizard view on the display module

1 Current wizard


2 Display area for navigation

## Wizard navigation symbols

Symbol	Meaning
Ø	Parameters within a wizard
A0013972	Curitabas to the previous personator
_ <b>←</b>	Switches to the previous parameter.
A0013978	Confirms the neuron storuglus and quitshes to the neutroproperty
_ √	Confirms the parameter value and switches to the next parameter.
A0013976	One was the adjustice view of the personator
E	Opens the editing view of the parameter.
A0013977	

In the wizard view the meaning of the keys is indicated by the navigation symbol directly above the respective key (softkey functionality).

## 7.3.5 Numeric editor

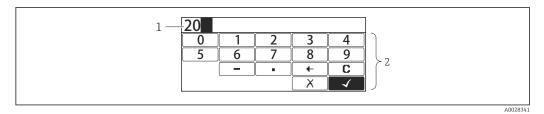

#### 🖻 22 Numeric editor on the display module


- 1 Display area of the entered value
- 2 Input mask

Symbol	Meaning
	Selection of numbers from 0 to 9.
A0013998	
· ·	Inserts decimal separator at the input position.
A0016619	
	Inserts minus sign at the input position.
A0016620	
	Confirms selection.
A0013985	
	Moves the input position one position to the left.
A0016621	
X	Exits the input without applying the changes.
A0013986	
C	Clears all entered characters.
A0014040	

## Meaning of the keys in the numeric editor

Кеу		Meaning
	A0028324	<b>Minus key</b> In the input mask, moves the selection bar to the left (backwards).
	A0028325	<b>Plus key</b> In the input mask, moves the selection bar to the right (forwards).
	A0028326	<ul> <li>Enter key</li> <li>Pressing the key briefly adds the selected number to the current decimal place or carries out the selected action.</li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
	A0028327	<b>Escape key combination (press keys simultaneously)</b> Closes the text or numeric editor without applying changes.

## 7.3.6 Text editor

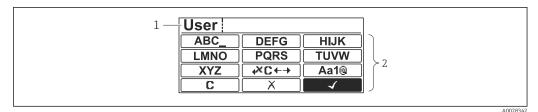

#### ■ 23 Text editor on the display module

1 Display area of the entered text

2 Input mask

### Text editor symbols

Symbol	Meaning
ABC_	Selection of letters from A to Z
A0013997	
<b>Aa1@</b>	Toggle • Between upper-case and lower-case letters • For entering numbers • For entering special characters
A0013985	Confirms selection.
	Switches to the selection of the correction tools.
A0013986	Exits the input without applying the changes.
A0014040	Clears all entered characters.

## Correction symbols under ₩C+→

LC 40013989	Clears all entered characters.
A0013991	Moves the input position one position to the right.
A0013990	Moves the input position one position to the left.
40013988	Deletes one character immediately to the left of the input position.

Meaning of the keys in the text editor

Кеу	Meaning
	<b>Minus key</b> In the input mask, moves the selection bar to the left (backwards).
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	<b>Plus key</b> In the input mask, moves the selection bar to the right (forwards).
	<ul> <li>Enter key</li> <li>Pressing the key briefly</li> <li>Opens the selected group.</li> <li>Carries out the selected action.</li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
	<b>Escape key combination (press keys simultaneously)</b> Closes the text or numeric editor without applying changes.

## 7.3.7 Keypad lock

## Automatic keypad lock

Operation via the local display is automatically locked:

after a start-up or restart of the device.

• if the device has not been operated via the display for > 1 minute.

When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

### Disabling the keypad lock

1. The keylock is enabled.

Press E for at least 2 seconds.

└ A context menu appears.

2. Select **Keylock off** from the context menu.

└ The keylock is disabled.

### Manual activation of the keypad lock

After commissioning of the device the keypad lock can be activated manually.

1. The device is in the measured value display.

Press E for at least 2 seconds.

└ A context menu appears.

2. Select **Keylock on** from the context menu.

 $\leftarrow$  The keylock is enabled.

## 7.3.8 Access code and user roles

## Meaning of the access code

An access code can be defined in order to distinguish between the following user roles:

User role	Definition	
Maintenance       • Knows the access code.         • Has write access to all parameters (except service parameters).		
Operator       • Doesn't know the access code.         • Has write access to only a few parameters.		

- The description of parameters states which role is needed at least for read and write access to each parameter.
  - The current user role is indicated by the **Access status display** parameter.
  - If the access code is **"0000"**, every user is in the **Maintenance** role. This is the default setting on delivery of the device.

### Defining an access code

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code  $\rightarrow$  Define access code
- 2. Enter the intended access code (max. 4 digits).
- 3. Repeat the same code in the **Confirm access code** parameter.
  - └ The user is in the **Operator** role. The <sup>∩</sup><sub>B</sub>-symbol appears in front of all writeprotected parameters.

### Switching to the "Maintenance" role

If the *g*-symbol appears on the local display in front of a parameter, the parameter is write-protected because the user is in the **Operator** role. To switch to the **Maintenance** role, proceed as follows:

- 1. Press E.
  - └ The input prompt for the access code appears.
- 2. Enter the access code.
  - → The user is in the **Maintenance** role. The B-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.


### Switching back to the "Operator" role automatically

The user automatically switches back to the **Operator** role:

- if no key is pressed for 10 minutes in the navigation and editing mode.
- 60 s after going back from the navigation and editing mode to the standard view (measured value display).


## 7.3.9 Write protection switch

The operating menu can be locked by a hardware switch in the connection compartment. In this locking state W&M related parameters are read only.

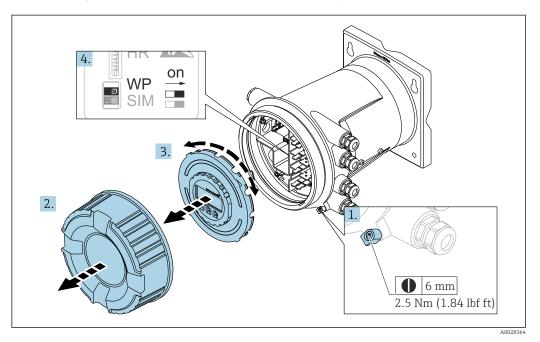


The display module can be attached to the edge of the electronics compartment. This makes it easier to access the lock switch.


- 1. Loosen the securing clamp.
- 2. Unscrew the housing cover.
- 3. Pull out the display module with a gentle rotation movement.
- 4. Using a flat blade screwdriver or a similar tool, set the write protection switch **(WP)** into the desired position. **ON:** operating menu is locked; **OFF:** operating menu is unlocked.
- **5.** Put the display module onto the connection compartment, screw the cover closed and tighten the securing clamp.
- To avoid access to the write protection switch, the cover of the connection compartment can be secured by a lead seal.

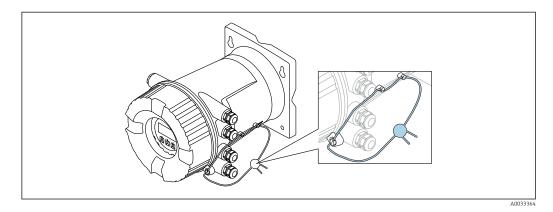

For LNE approval, bolts at built in flange additionally must be secured by a lead seal.

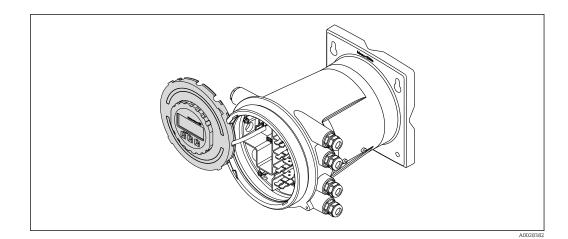

## Indication of the locking state

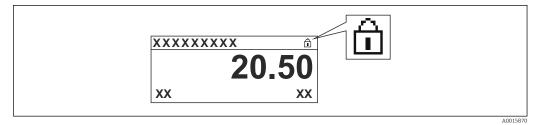


 $\blacksquare$  24 Write protection symbol in the header of the display

Write protection via locking switch is indicated as follows:

- Locking status ( $\rightarrow \triangleq 125$ ) = Hardware locked
- 🖻 appears in the header of the display.

# 7.4 Access to the operating menu via the service interface and FieldCare

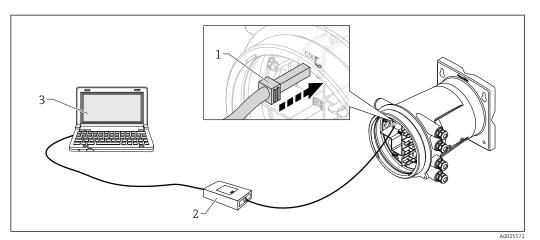

25 Operation via service interface

- *1* Service interface (CDI = Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool and "CDI Communication FXA291" COM DTM


### The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset = Restart device. This ensures correct operation of the device after the restore.

## 7.5 Access to the operating menu via Tankvision Tank Scanner NXA820 and FieldCare

## 7.5.1 Wiring scheme

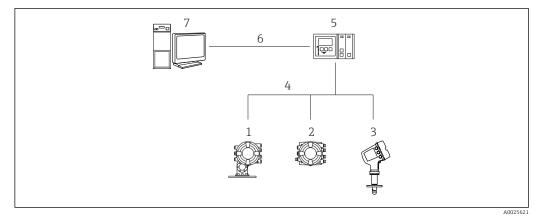

26 Connection of Tank Gauging devices to FieldCare via the Tankvision Tank Scanner NXA820

- 1 Proservo NMS8x
- 2 Tankside Monitor NRF81
- 3 Micropilot NMR8x
- 4 Field protocol (e.g. Modbus, V1)
- 5 Tankvision Tank Scanner NXA820
- 6 Ethernet
- 7 Computer with FieldCare installed

Add New Device			• ×
Device		Version	Class
CDI Communication F	XA291	V2.05.01 (2015-04-28)	
CDI Communication 1	CP/IP	V2.05.01 (2015-04-28)	•
CDI Communication U	JSB	V2.05.01 (2015-04-28)	-
CommDTM PROFIBL	JS DP-V1	V4.0.0.9 (2011-01-17)	
FF H1 CommDTM		V1.5 (2009-08-17)	•
Flow Communication	FXA193/291	V3.26.00 (2015-04-07)	43.
FXA520		V1.05.09 (2011-07-15)	
HART Communicatio		V1.0.52 (2015-03-17)	*
IPC (Level, Pressure) NXA HART Commun		V1.02.17 (2014-02-21) V1.1.0.911 (2013-03-27)	dmSpecific
PCP (Readwin) TXU		V1.01.18 (2014-02-21)	- Gimopecine
PB0Fldtm DPV1		V 2.11(115) (2010-08-18)	-
SFGNetwork		V1.06.00.285 (2015-03-25)	dtmSpecific
	m		•
	Device type	(DTM) information	
Device:		Communication	
Manufacturer:	Endress+Ha		
Device ID / SubID:			
Manufacturer ID:	17		
Hardware revision:			
Software revision:			
Device revision:			
Profile revision:			
Is generic:	No		


Establishing the connection between FieldCare and the device 7.5.2

tollod ndata tha DTM . . . . . . - :c Mak

Add a new device: NXA HART Communication

	NXA HART Communication	(Configuration) ×	:	
	NXA820 IP Address	0	192.168.2.100	p
	NXA820 Port		3000	
	Password		******	
	Tank Identification		Tank_1	
	Address range to scan	Start address		0 🗸
		End address		15 🗸
	Communication timeout (	seconds)		10 🗸

Open the configuration of the DTM and enter the required data (IP address of the NXA820; "Password" = "hart"; "Tank identification" only with NXA V1.05 or higher)

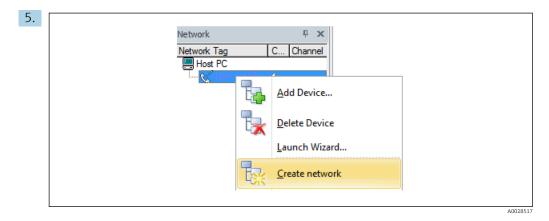

Select **Create network** from the context menu.

└ The device is detected and the DTM is assigned.

Tank level (139):           Liquid temperature:	8	0,0 25,0	mm	Water level: Observed densit	2
Status signal:	<b>8</b> 🔽 o	23,0			
Menu / Variable	Value	Unit	W	izard	
Access status tooling:     Operation     Setup     Diagnostics     Expert	Maintenance		In	strument health	n statu

└ The device can be configured.

## The "Save/Restore" function

i

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset = Restart device. This ensures correct operation of the device after the restore.

# 8 System integration

## 8.1 Overview of the Device Description files (DTM)

To integrate the device via HART into FieldCare, a Device Description file (DTM) according to the following specification is required:

Manufacturer ID	0x11
Device type (NRF8x)	0x112F
HART specification	7.0
DD files	For information and files see: www.endress.com

## 9 Commissioning

## 9.1 Initial settings

## 9.1.1 Setting the display language

## Setting the display language via the display module

- 1. While in the standard view (→ 🗎 43), press "E". If required, select **Keylock off** from the context menu and press "E" again.
  - └ The **Language** parameter appears.
- 2. Open the **Language** parameter and select the display language.

### Setting the display language via an operating tool (e.g. FieldCare)

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display  $\rightarrow$  Language
- 2. Select the display language.

This setting only affects the language on the display module. To set the language in the operating tool use the language setting functionality of FieldCare or DeviceCare, respectively.

## 9.1.2 Setting the real-time clock

### Setting the real-time clock via the display module

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Date / time  $\rightarrow$  Set date
- 2. Use the following parameters to set the real-time clock to the current date and time: Year, Month, Day, Hour, Minutes.

## Setting the real-time clock via an operating tool (e.g. FieldCare)

Navigate to: Setup → Advanced setup → Date / time
 Date/time: 2016-04-20 09:32:24
 Set date: Please select
 Please select
 Abort
 Start
 Confirm time

Go to the  ${\bf Set}\ {\bf date}\ {\bf parameter}\ {\bf and}\ {\bf select}\ {\bf the}\ {\bf Start}\ {\bf option}.$ 

3.	Date/time: 🗘	•	2016-04-20 09:34:25
	Year:		2016
	Month:		4
	Day:		20
	Hour:		9
	Minute:		34

Use the following parameters to set the date and time: Year, Month, Day, Hour, Minutes.

4.	Date/time: 🚺	2016-04-20 09:35:49	
	Set date: ?	Please select	$\checkmark$
	Year:	Please select Abort	
	Month:	Start	
	Day:	Confirm time	
	Hour:		9
	Minute:		34


Go to the **Set date** parameter and select the **Confirm time** option.

└ The real-time clock is set to the current date and time.

## 9.2 Configuring the tank gauging application

Configuration of the inputs:	Description
HART inputs	→ ➡ 60
NMT532/539/81 connected via HART	→ <a>ê</a> 63
4-20mA inputs	→ 🗎 65
RTD input	→ 🗎 66
Digital inputs	→ 🗎 68
Configuration of the data processing in the device:	Description
Linking input values to tank variables	→ ➡ 69
Tank calculation: Direct Level Measurement	→ 🗎 70
Tank calculation: Hybrid Tank Measurement System (HTMS)	→ 🗎 71
Tank calculation: Hydrostatic Tank Gauging (HTG)	→ 🗎 72
Tank calculation: Correction of the Hydrostatic Tank Deformation (HyTD)	→ 🗎 75
Tank calculation: Thermal Tank Shell Correction (CTSh)	→ ➡ 76
Alarms (limit evaluation)	→  77
Configuration of the signal output:	Description
4-20mA output	→ ➡ 78
HART slave + 4-20mA output	→ < P 79
Modbus	→ ● 80
V1	→ ● 81
Digital outputs	→ 🗎 82
WM550	→ 🖹 81

## 9.2.1 Configuration of the HART inputs

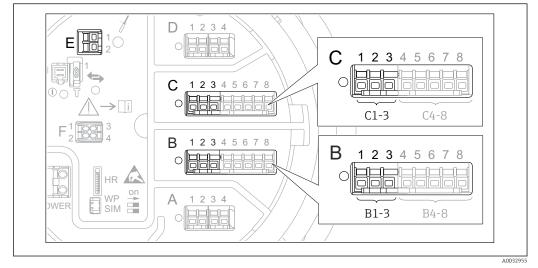

### Connecting and addressing HART devices



- *B* Analog I/O module in slot *B* (availability depending on device version  $\rightarrow \implies 18$ )
- C Analog I/O module in slot C (availability depending on device version  $\rightarrow \square 18$ )
- E HART Ex is output (available in all device versions)

HART devices must be configured and given a unique HART address in the range from 1 to 15 via their own user interface before they are connected to the Tankside Monitor NRF81<sup>3</sup>. Make sure they are connected as defined by the terminal assignment → 
30. Devices with an address larger than 15 are not recognized by the Tankside Monitor.

### Slot B or C: Setting the operating mode of the Analog I/O module

This section is not relevant for the HART Ex is output (Slot E). This output always functions as a HART master for the connected HART slaves.

If HART devices are connected to an Analog I/O module (slot B or C in the terminal compartment), this module must be configured as follows:

- **1.** Navigate to the submenu of the respective Analog I/O module: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O X1-3
- **2.** Go to the **Operating mode** parameter ( $\rightarrow \triangleq 139$ ).
- 3. If only one HART device is connected to this loop:
  - Select the **HART master+4..20mA input** option. In this case the 4-20mA signal can be used in addition to the HART signal. For the configuration of the 4-20mA input:  $\rightarrow \bigoplus 65$ .
- 4. If up to 6 HART devices are connected to this loop: Select the **HART master** option.

### Configuring the power supply for a connected Micropilot S FMR5xx

This section is only relevant if a Micropilot S FMR5xx is connected to the Tankside Monitor.

<sup>3)</sup> The current software does not support HART devices with address 0 (zero).

The Tankside Monitor can provide the supply voltage for a connected Micropilot S FMR5xx. To configure this functionality, proceed as follows:

- **1.** Make sure the FMR5xx is connected to the Analog I/O module as defined by the terminal assignment  $\rightarrow \cong$  36.
- 2. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog IP X4-8
- 3. Go to the **Operating mode** parameter (→ 
  □ 133) and select the **Gauge power supply** option.

#### Defining the type of measured value

- This setting can be skipped for a connected Prothermo NMT5xx and NMT8x or Micropilot FMR5xx as for these devices the type of measured value is automatically recognized by the Tankside Monitor.
- The measured values can only be used in the system if the unit of the assigned HART variable fits the type of measured value. The HART variable assigned to Output temperature, for example, has to be in °C or °F.
  - A HART variable with unit "%" cannot be used for **Output level**. Instead, the HART variable must be in mm, m, ft or in.

The type of measured value must be specified for each HART variable (PV, SV, TV and QV). To do so, proceed as follows:

- Navigate to: Setup → Advanced setup → Input/output → HART devices
   There is a submenu for each connected HART device.
- 2. For each device go to the corresponding submenu.
- 3. If the device measures a pressure:

Go to the **Output pressure** parameter ( $\rightarrow \implies 129$ ) and specify which of the four HART variables contains the measured pressure. Only a HART variable with a pressure unit may be selected.

4. If the device measures a density:

Go to the **Output density** parameter ( $\rightarrow \triangleq 130$ ) and specify which of the four HART variables contains the measured density. Only a HART variable with a density unit may be selected.

5. If the device measures a temperature:

Go to the **Output temperature** parameter ( $\rightarrow \triangleq 130$ ) and specify which of the four HART variables contains the measured temperature. Only a HART variable with a temperature unit may be selected.

6. If the device measures the vapor temperature:

Go to the **Output vapor temperature** parameter ( $\rightarrow \triangleq 131$ ) and specify which of the four HART variables contains the measured vapor temperature. Only a HART variable with a temperature unit may be selected.

7. If the device measures a level:

Go to the **Output level** parameter ( $\rightarrow \square$  131) and specify which of the four HART variables contains the measured level. Only a HART variable with a level unit (not "%") may be selected.

#### **Disconnecting HART devices**

When a HART device is disconnected from the device, it must also be logically removed as follows:

**1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  HART devices  $\rightarrow$  Forget device


2. Select the HART device to be removed.

This procedure is also necessary if a defective device is exchanged.

# 9.2.2 Configuration of a connected Prothermo temperature transmitter

If a Prothermo NMT532, NMT539 or NMT8x temperature transmitter is connected via HART, it can be configured as follows:

- 1. Navigate to: Expert → Input/output → HART devices → HART Device(s) → NMT device config; here, **HART Device(s)** is the name of the connected Prothermo.
- 2. Go to the **Configure device?** parameter and select **Yes**.

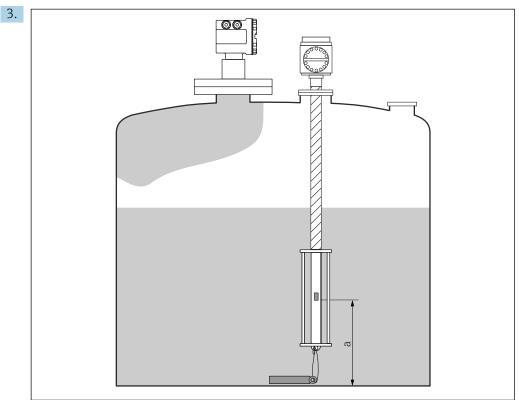


28 Prothermo NMT53x: Position of the bottom temperature element

a Distance from bottom temperature element to zero reference (tank bottom or datum plate).

To configure a **Prothermo NMT53x**: Go to the **Bottom point** parameter and enter the position of the bottom temperature element (see picture above).

The value entered into the Bottom point parameter in the Tank Gauging device is handed over to the Bottom point parameter in the connected Prothermo NMT53x.

A0030

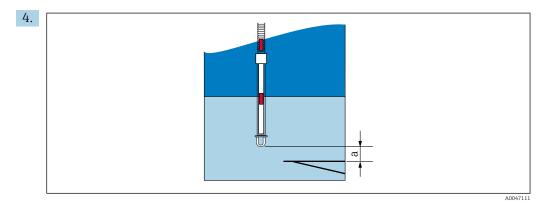


- 29 Prothermo NMT8x: Distance between the physical end of the probe and the zero level value
- a Distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

To configure a **Prothermo NMT8x**: Go to the **Bottom point** parameter and enter the distance between the physical end of the probe and the zero level value in the tank (tank bottom or datum plate).

└ The value entered into the Bottom point parameter in the Tank Gauging device is handed over to the End of probe to zero distance parameter in the connected Prothermo NMT8x.

To check the temperatures measured by the individual elements, go to the following submenu: Operation  $\rightarrow$  Temperature  $\rightarrow$  NMT element values  $\rightarrow$  Element temperature

There is a **Element temperature X** parameter for each element of the Prothermo.

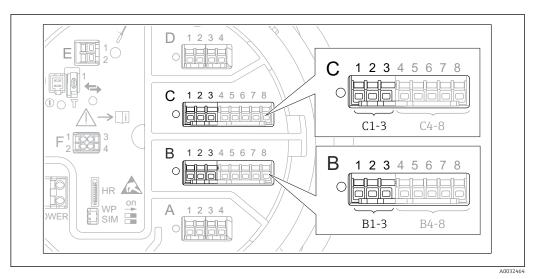


#### 9.2.3 Configuration of the 4-20mA inputs

R 30 Possible locations of the Analog I/O modules, which can be used as a 4-20mA input. The order code of the device determines which of these modules is actually present  $\rightarrow \square$  18.

For each Analog I/O module to which a 4-20mA device is connected, proceed as follows:


- 1. Make sure the 4-20mA devices are connected as defined by the terminal assignment → 🗎 30.
- **2.** Navigate to the submenu of the respective Analog I/O module: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O X1-3
- 3. Go to the **Operating mode** parameter ( $\rightarrow \square$  139) and select **4..20mA input** or HART master+4..20mA input.
- 4. Go to the **Process variable** parameter ( $\rightarrow \cong 145$ ) and specify which process variable is transmitted by the connected device.
- **5.** Go to the **Analog input 0% value** parameter ( $\rightarrow \square$  145) and define which value of the process variable corresponds to an input current of 4 mA (see diagram below).
- **6.** Go to the **Analog input 100% value** parameter ( $\rightarrow \square$  145) and define which value of the process variable corresponds to an input current of 20 mA (see diagram below).
- 7. Go to the **Process value** parameter ( $\Rightarrow \square 146$ ) and check whether the indicated value matches the actual value of the process variable.

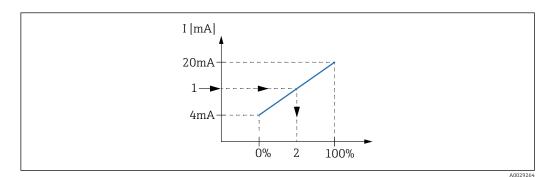

- 🛃 31 Scaling of the 4-20mA input to the process variable
- 1 Input value in mA
- 2 Process value




The Analog I/O submenu contains additional parameters for a more detailed configuration of the Analog Input. For a description refer to :  $\rightarrow \implies 139$ 

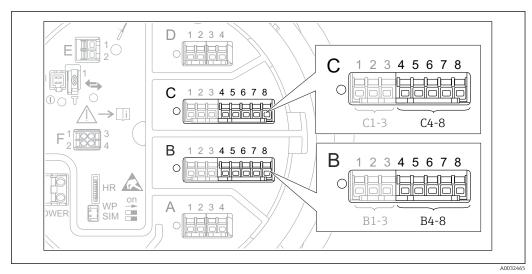

## 9.2.4 Configuration of a connected RTD

- 32 Possible locations of the Analog I/O modules, to which an RTD can be connected. The order code of the device determines which of these modules is actually present  $\rightarrow \square 18$ .
- **1.** Make sure the RTD is connected as defined by the terminal assignment  $\rightarrow \cong 35$ .
- **2.** Navigate to the submenu of the respective Analog I/O module: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog IP X4-8.
- **3.** Go to the **RTD type** parameter ( $\rightarrow \triangleq$  133) and specify the type of the connected RTD.

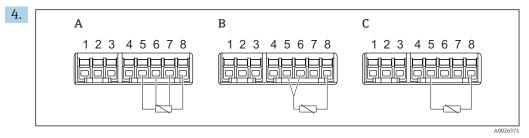


■ 33 RTD connection types

- A 4 wire RTD connection
- *B* 3 wire RTD connection
- C 2 wire RTD connection

Go to the **RTD connection type** parameter ( $\Rightarrow \square 134$ ) and specify the type of connection of the RTD (2-, 3- or 4-wire).

- **5.** Go to the **Input value** parameter ( $\rightarrow \triangleq$  136) and check whether the indicated temperature matches the actual temperature.
- 6. Go to the **Minimum probe temperature** parameter (→ 🗎 136) and specify the minimum approved temperature of the connected RTD.
- **7.** Go to the **Maximum probe temperature** parameter (→ 🗎 137) and specify the maximum approved temperature of the connected RTD.

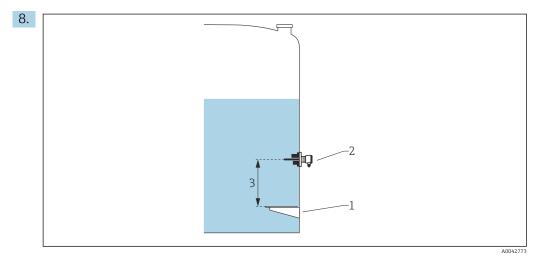

- 1 Datum plate
- 2 RTD
- 3 Probe position ( $\rightarrow \square 137$ )


Go to the **Probe position** parameter and enter the mounting position of the RTD (measured from the datum plate).

└ This parameter, in conjunction with the measured level, determines whether the measured temperature refers to the product or to the gas phase.

#### Offset for resistance and/or temperature


An offset for the resistance or the temperature can be defined in the following submenu: Expert  $\rightarrow$  Input/output  $\rightarrow$  Analog IP X4-8.

- **Ohms offset** is added to the measured resistance before the calculation of the temperature.
- **Temperature offset after conversion** is added to the measured temperature.

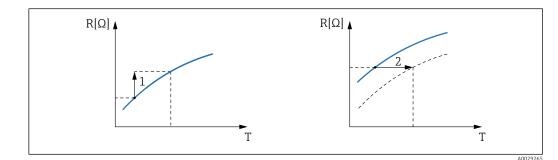

1 Ohms offset

2 Temperature offset after conversion

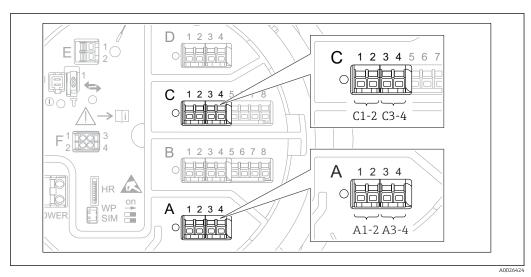


## 9.2.5 Configuration of the digital inputs

■ 34 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of digial input modules  $\rightarrow \cong 18$ .

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode** and **Contact type**.

### The "Operating mode" parameter

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Digital Xx-x  $\rightarrow$  Operating mode

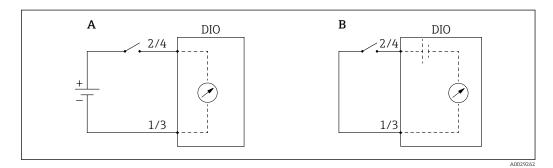

A "Operating mode" = "Input passive"

B "Operating mode" = "Input active"

#### Meaning of the options

Input passive

The DIO module measures the voltage provided by an external source. Depending on the status of the external switch, this voltage is 0 at the input (switch open) or exceeds a certain limit voltage (switch closed). These two states represent the digital signal.

Input active

The DIO module provides a voltage and uses it to detect whether the external switch is open or closed.

### The "Contact type" parameter

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Digital Xx-x  $\rightarrow$  Contact type

This parameter determines how the state of the external switch is mapped to the internal states of the DIO module:

State of the external switch	Internal state of the DIO module				
	Contact type = Normally open	Contact type = Normally closed			
Open	Inactive	Active			
Closed	Active	Inactive			
Behavior in special situations:					
During start-up	Unknown	Unknown			
Fault in measurement	Error	Error			

- The internal state of the Digital Input can be transferred to a Digital Output or can be used to control the measurement.
  - The Digital Xx-x submenu contains additional parameters for a more detailed configuration of the Digital Input. For a description refer to → 
     <sup>(1)</sup>
     <sup>(2)</sup>
     <sup>(2)</sup>

## 9.2.6 Linking input values to tank variables

Measured values must be linked to tank variables before they can be used in the Tank Gauging application. This is done by defining the source of each tank variable in the following parameters:


Tank variable	Parameter defining the source of this variable
Product level	<ul> <li>Setup → Level source</li> <li>Setup → Advanced setup → Application → Tank configuration → Level → Level source</li> </ul>
Bottom water level	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Level $\rightarrow$ Water level source
Average or spot temperature of the product	<ul> <li>Setup → Liquid temp source</li> <li>Setup → Advanced setup → Application → Tank configuration</li> <li>→ Temperature → Liquid temp source</li> </ul>
Temperature of the air surrounding the tank	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Temperature $\rightarrow$ Air temperature source
Temperature of the vapor above the product	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Temperature $\rightarrow$ Vapor temp source
Density of the product	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Observed density source
Bottom pressure (P1)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 (bottom) source
Middle pressure (P2)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P2 (middle) source
Top pressure (P3)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 (top) source



Depending on the application not all these parameters will be relevant in a given situation.

## 9.2.7 Tank calculation: Direct level measurement

If no tank calculation is configured, level and temperature are measured directly.

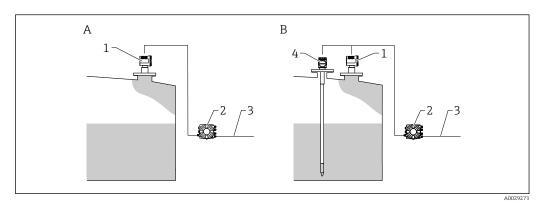


- *A* Direct level measurement (without temperature)
- *B* Direct level and temperature measurement
- 1 Level transmitter (typically FMR540 or FMR51)
- 2 Tankside Monitor
- 3 To inventory management system
- 4 Temperature transmitter
- **1.** Navigate to: "Setup  $\rightarrow$  Level source" and specify from which device the level is obtained.
- 2. If a temperature transmitter is connected:

Navigate to: "Setup  $\rightarrow$  Liquid temp source" and specify from which device the temperature is obtained.

## 9.2.8 Tank calculation: Hybrid tank measurement system (HTMS)

HTMS uses level and pressure measurements to calculate the density of the medium.

In non-atmospheric (i.e. pressurized) tanks it is recommended to use the **HTMS P1+P3** mode. Two pressure sensors are required in this case. In atmospheric (i.e. unpressurized) tanks the **HTMS P1** with only one pressure sensor is sufficient.

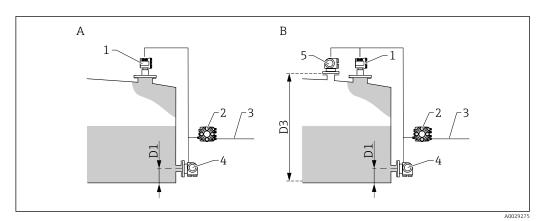

- A The "HTMS P1" measurement mode
- B The "HTMS P1+P3" measurement mode
- D1 P1 position
- D3 P3 position
- 1 Level transmitter (e.g. typically FMR540 or FMR51)
- 2 Tankside Monitor
- 3 To inventory management system
- 4 Pressure sensor (bottom)5 Pressure sensor (top)

**1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Level

2. Go to Level source ( $\rightarrow \implies 123$ ) and specify from which device the level is obtained.


**3.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Pressure

- **4.** Go to **P1 (bottom) source (→ □ 184)** and specify from which device the bottom pressure (P1) is obtained.
- 5. If a top pressure transmitter (P3) is connected:
  Go to P3 (top) source (→ 
  <sup>B</sup> 188) and specify from which device the top pressure (P3) is obtained.
- 6. Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  HTMS
- 7. Go to **HTMS mode** ( $\rightarrow \cong 213$ ) and specify the HTMS mode.
- 8. Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Density
- 9. Go to **Observed density source** ( $\rightarrow \implies 182$ ) and select **HTMS**.
- Use the other parameters of the HTMS submenu to configure the calculation. For a detailed description: → 
   <sup>(1)</sup> 211

## 9.2.9 Tank calculation: Hydrostatic tank gauging (HTG)

Hydrostatic Tank Gauging (HTG) is a method to calculate the level and the density of the product inside a tank using pressure measurements only. The pressure is measured at different heights of the tank using one, two or three pressure sensors. With these data the density or the level of the product (or both) can be calculated.

## Overview of the HTG parameters

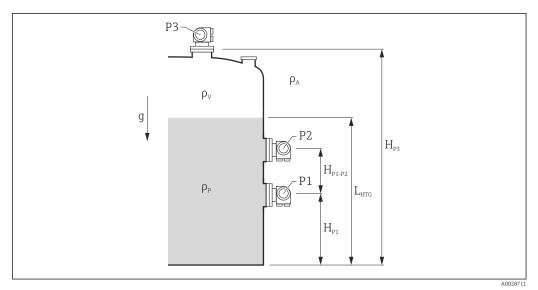

☑ 35 HTG parameters

Parameter	Navigation path
P1 (Bottom pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 (bottom)
H <sub>P1</sub> (Position of P1 sensor)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 position
P2 (Middle pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P2 (middle)
$H_{P1-P2}$ (Distance between P1 and P2 sensors)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1-2 distance
P3 (Top pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 (top)
$H_{P3}$ (Position of P3 sensor)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 position
$\rho_P$ (Density of the product $^{1)})$	<ul> <li>Read-only: Setup → Advanced setup → Application → Tank calculation → HTG → Density value</li> <li>Writable: Setup → Advanced setup → Application → Tank calculation → HTG → Manual density</li> </ul>
$\rho_V$ (Vapor density)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Vapor density
$\rho_A$ (Ambient air temperature)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Air density
g (Local gravity)	Expert $\rightarrow$ Application $\rightarrow$ Tank Calculation $\rightarrow$ Local gravity
L <sub>HTG</sub> (Calculated level)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Tank level

1) Depending on the **HTG mode** parameter this is a writable or a read-only parameter.

#### Selecting the HTG mode

- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank calculation  $\rightarrow$  HTG
- **2.** Go to the **HTG mode** parameter ( $\Rightarrow \triangleq 208$ ) and select the mode according to the following table.

HTG mode	Measured variables	Required additional parameters	Calculated variables
P1 only	P1	<ul> <li>ρ<sub>P</sub></li> <li>g</li> <li>H<sub>P1</sub></li> </ul>	L <sub>HTG</sub>
P1 + P3	• P1 • P3	• $\rho_P$ • $\rho_V$ • $\rho_A$ • $g$ • $H_{P1}$ • $H_{P3}$	L <sub>HTG</sub> (more precise calculation for pressurized tanks)
P1 + P2	• P1 • P2	<ul> <li>ρ<sub>A</sub></li> <li>g</li> <li>H<sub>P1</sub></li> <li>H<sub>P1-P2</sub></li> </ul>	<ul> <li>ρ<sub>P</sub></li> <li>L<sub>HTG</sub></li> </ul>
P1 + P2 + P3	<ul><li>P1</li><li>P2</li><li>P3</li></ul>	• $\rho_V$ • $\rho_A$ • $g$ • $H_{P1}$ • $H_{P1-P2}$ • $H_{P3}$	<ul> <li>ρ<sub>P</sub></li> <li>L<sub>HTG</sub> (more precise calculation for pressurized tanks)</li> </ul>

#### Assigning the P1 (bottom) pressure sensor

- **1.** Navigate to : Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Pressure
- **2.** Go to the **P1 (bottom) source** parameter ( $\rightarrow \square$  184) and select the device from which the bottom pressure is obtained.
- **3.** Go to the **P1 (bottom)** parameter ( $\rightarrow \square$  118) and check whether the indicated pressure matches the actual pressure at the P1 position. If necessary, the indicated pressure can be corrected by the **P1 offset** parameter.
- **4.** Go to the **P1 position** parameter ( $\rightarrow \triangleq 185$ ) and enter the distance from the datum plate to the P1 sensor.
- Go to the P1 abs / rel parameter (→ 
   <sup>(⇒)</sup> 185) and specify whether the P1 sensor measures an absolute or a relative pressure.

#### Assigning the P2 (middle) pressure sensor

This procedure is only required for the following HTG modes:

- P1 + P2
- P1 + P2 + P3
- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Pressure
- 2. Go to the **P2 (middle) source** parameter (→ 🗎 186) and select the device from which the middle pressure is obtained.
- **3.** Go to the **P2 (middle)** parameter ( $\rightarrow \cong 118$ ) and check whether the indicated pressure matches the actual pressure at the P2 position. If necessary, the indicated pressure can be corrected by the **P2 offset** parameter ( $\rightarrow \cong 187$ ).
- 4. Go to the **P1-2 distance** parameter ( $\Rightarrow \square$  187) and enter the distance between the P1 and P2 sensors.
- Go to the P2 abs / rel parameter (→ ☐ 187) and specify whether the P2 sensor measures an absolute or a relative pressure.

#### Assigning the P3 (top) sensor

- This procedure is only required for the following HTG mode:
  - P1 + P3
  - P1 + P2 + P3
- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Pressure
- **2.** Go to the **P3 (top) source** parameter ( $\rightarrow \square$  188) and select the device from which the top pressure is obtained.
- **3.** Go to the **P3 (top)** parameter ( $\rightarrow \boxdot 119$ ) and check whether the indicated pressure matches the actual pressure at the P3 position. If necessary, the indicated pressure can be corrected by the **P3 offset** parameter ( $\rightarrow \boxdot 189$ ).
- **4.** Go to the **P3 position** parameter ( $\rightarrow \triangleq$  189) and enter the distance from the datum plate to the P3 sensor.
- Go to the P3 abs / rel parameter (→ 
   <sup>(⇒)</sup> 189) and specify whether the P3 sensor measures an absolute or a relative pressure.

#### Selecting HTG as the level source


- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank configuration  $\rightarrow$  Level
- 2. Go to the **Operation mode** parameter and select **HTG**.

#### Supplementary specifications

- If the ambient pressure deviates considerably from 1 bar (14.5 psi): Navigate to Setup → Advanced setup → Application → Tank configuration → Pressure
- **2.** Go to the **Ambient pressure** parameter ( $\rightarrow \triangleq$  190) and specify the ambient pressure.
- The **HTG** submenu contains additional parameters for a more detailed configuration of the HTG calculation. For details:  $\rightarrow \cong 201$

### 9.2.10 Tank calculation: Hydrostatic Tank Deformation (HyTD)


Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels divided over the full range of the tank.

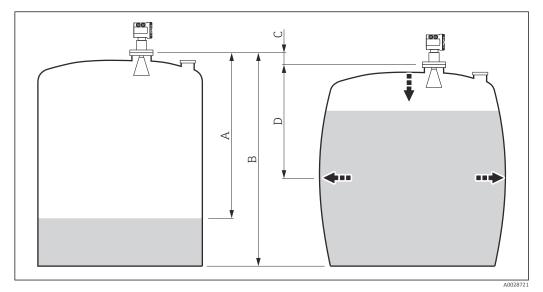

☑ 36 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (tank nearly empty)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (tank filled)

This mode should not be used in conjunction with HTG as with HTG the level is not measured relative to the gauge reference height.

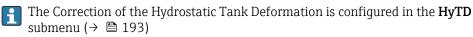



### 9.2.11 Tank calculation: Thermal tank shell correction (CTSh)

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

This correction is recommended for the following situations:


- if the operating temperature deviates considerably from the temperature during calibration (ΔT > 10 °C (18 °F))
- for extremely high tanks
- for refrigerated, cryogenic or heated applications

As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.

This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

#### 9.2.12 Configuration of the alarms (limit evaluation)

A limit evaluation can be configured for up to 4 tank variables. The limit evaluation issues an alarm if the value exceeds an upper limit or falls below a lower limit, respectively. The limit values can be defined by the user.

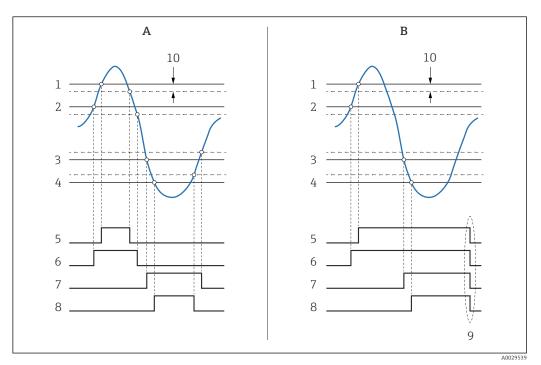

🛃 37 Principle of the limit evaluation

- Α Alarm mode = On
- В Alarm mode = Latching
- 1 HH alarm value
- H alarm value 2
- 3 L alarm value
- 4 LL alarm value
- 5 HH alarm
- 6 H alarm
- 7 L alarm
- 8 LL alarm
- 9 "Clear alarm" = "Yes" or power off-on
- 10 Hysteresis

The limit evaluation is configured in the **Alarm 1 to 4** submenus.


Navigation path: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Alarm  $\rightarrow$  Alarm 1 to 4




For Alarm mode = Latching all alarms remain active until the user selects Clear **alarm** = **Yes** or the power is switched off and on.



Make sure to also configure the parameter "Hysteresis" parameter accordingly, depending on tank variable and unit used.

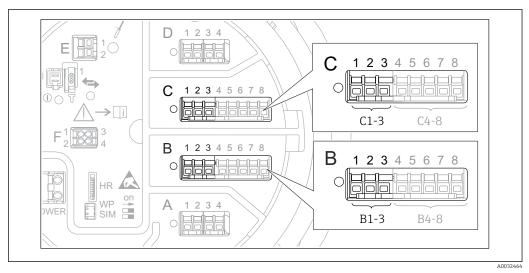


### 9.2.13 Configuration of the 4-20mA output

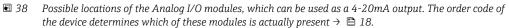

Each Analog I/O module of the device can be configured as a 4...20mA analog output. To do so, proceed as follows:

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O X1-3.
- Go to the Operating mode parameter and select 4..20mA output or HART slave +4..20mA output <sup>4)</sup>.
- **3.** Go to the **Analog input source** parameter and select the tank variable which is to be transmitted via the 4...20mA output.
- 4. Go to the **0 % value** parameter and enter the value of the selected tank variable which will be mapped to 4 mA.
- 5. Go to the **100 % value** parameter and enter the value of the selected tank variable which will be mapped to 20 mA.

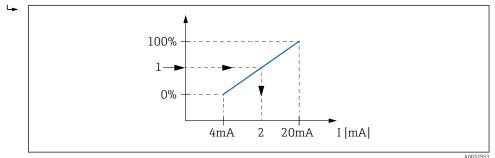

Scaling of the tank variable to the output current

1 Tank variable

2

-

Output current

After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined error value.

The **Analog I/O** submenu contains more parameters which can be used for a more detailed configuration of the analog output. For a description see  $\rightarrow \cong 139$ 

<sup>4) &</sup>quot;HART slave +4..20mA output " means that the Analog I/O module serves as a HART slave which cyclically sends up to four HART variables to a HART master. For the configuration of the HART output: → 🗎 79

### 9.2.14 Configuration of the HART slave + 4-20mA output

If **Operating mode** = **HART slave +4..20mA output** has been selected for an Analog I/O module, it serves as a HART slave which sends up to four HART variables to a HART master.

The 4-20 mA signal can be used in this case, too. For its configuration:  $\rightarrow \square 78$ 

#### Standard case: PV = 4-20mA signal


By default, the Primary Variable (PV) is identical to the tank variable transmitted by the 4-20mA output. To define the other HART variables and to configure the HART output in more detail, proceed as follows:

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Configuration
- 2. Go to the **System polling address** parameter and set the HART slave address of the device.
- **3.** Use the following parameters to assign tank variables to the second to fourth HART variable: **Assign SV**, **Assign TV**, **Assign QV**.
  - └ The four HART variables are transmitted to a connected HART Master.

#### Special case: PV ≠ 4-20mA signal

In exceptional cases it might be required that the Primary Variable (PV) transmits a different tank variable than the 4-20mA output. This is configured as follows.

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  HART output  $\rightarrow$  Configuration
- 2. Go to the **PV source** parameter and select **Custom**.
  - └ The following additional parameters appear in the submenu: Assign PV, 0 % value, 100 % value and PV mA selector.
- **3.** Go to the **Assign PV** parameter and select the tank variable to be transmitted as the Primary Variable (PV).
- 4. Use the **0** % value and **100** % value parameters to define a range for the PV. The **Percent of range** parameter indicates the percentage for the actual value of the PV. It is included in the cyclical output to the HART master.

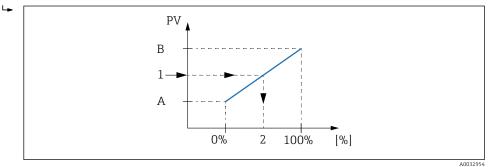


40 Scaling of the tank variable to the percentage

- A 0 % value
- B 100 % value
- 1 Primary variable (PV)
- 2 Percent of range
- 5. Use the **PV mA selector** parameter to define whether the output current of an Analog I/O module is to be included in the cyclical HART output.

After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined error value.

The **PV mA selector** parameter does not influence the output current at the terminals of the Analog I/O module. It only defines whether the value of this current is part of the HART output or not.

### 9.2.15 Configuration of the Modbus output

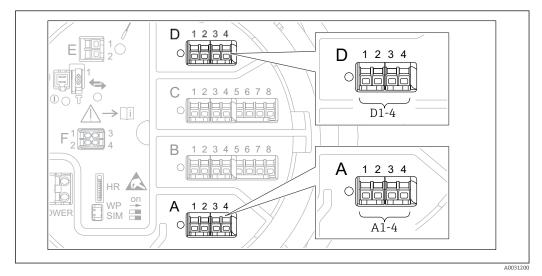


■ 41 Possible locations of the Modbus modules (examples); depending on the device version these modules may also be in slot B or  $C \rightarrow B$  18.

The Tankside Monitor NRF81 acts as a Modbus slave. Measured or calculated tank values are stored in registers which can be requested by a Modbus master.

The following submenu is used to configure the communication between the device and the Modbus master:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  Modbus X1-4  $\rightarrow$ Configuration ( $\rightarrow \square$  155)

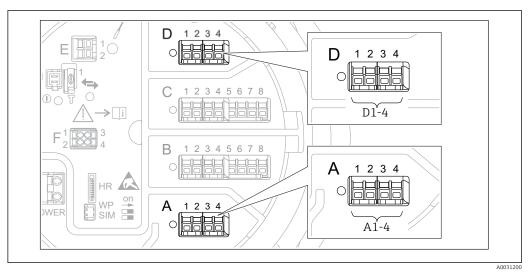


### 9.2.16 Configuration of the V1 output

■ 42 Possible locations of the V1 modules (examples); depending on the device version these modules may also be in slot B or  $C \rightarrow \cong 18$ .

The following submenus are used to configure the V1 communication between the device and the control system:

- Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  V1 X1-4  $\rightarrow$  Configuration  $\rightarrow$  🖺 158
- Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Communication  $\rightarrow$  V1 X1-4  $\rightarrow$  V1 input selector  $\rightarrow$  🗎 161


### 9.2.17 Configuration of the WM550 output

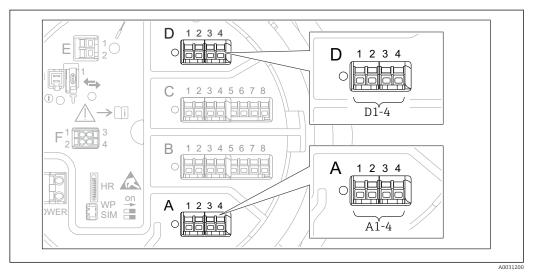


■ 43 Possible locations of the WM550 modules (examples); depending on the device version these modules may also be in slot B or  $C \rightarrow \cong 18$ .


The following submenus are used to configure the WM550 communication between the device and the control system:

- Setup menu → Advanced setup submenu → Communication submenu → WM550 X1-4
   → Configuration submenu → 
   154
- Setup menu → Advanced setup submenu → Communication submenu → WM550 X1-4
   → WM550 input selector submenu → 
   163

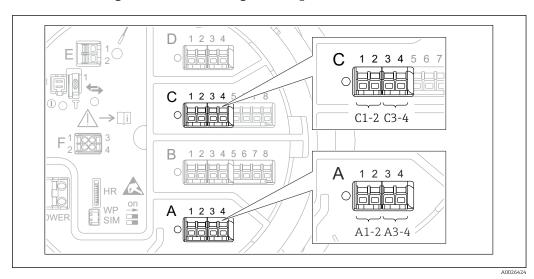

### 9.2.18 Configuration of the digital outputs

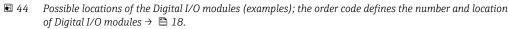

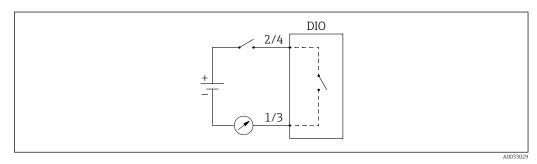

🖻 45 Usage of the Digital I/O module as a digital output

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode, Digital input source** and **Contact type**.

A digital output can be used to

- output the state of an alarm (if an alarm has been configured  $\rightarrow \square 77$ )
- transmit the status of a digital input (if a digital input has been configured  $\rightarrow \oplus 68$ )

To configure a digital output, proceed as follows:

- **1.** Navigate to Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Digital Xx-x, where Xx-x designates the digital I/O module to be configured.
- 2. Go to the **Operating mode** parameter and select the **Output passive** option.
- 3. Go to the **Digital input source** parameter and select the alarm or digital input to be transmitted.
- 4. Go to the **Contact type** parameter and select how the internal state of the alarm or digital input is to be mapped to the digital output (see table below).

State of the alarm	Switching state of the digital output		
<ul> <li>Internal state of the digital input</li> </ul>	Contact type = Normally open	Contact type = Normally closed	
Inactive	Open	Closed	
Active	Closed	Open	

- For SIL applications, **Contact type** is automatically set to **Normally closed** by the device when starting the SIL confirmation procedure.
  - In case of a power supply failure, the switching state is always "open", irrespective of the selected option.
  - The Digital Xx-x submenu contains additional parameters for a more detailed configuration of the Digital Input. For a description refer to → 
     <sup>(1)</sup>
     <sup>(2)</sup>
     <sup>(2)</sup>

### 9.3 Advanced settings

For a more detailed configuration of the signal inputs, the tank calculations and the signal outputs refer to the **Advanced setup** submenu ( $\rightarrow \cong 125$ ).

### 9.4 Simulation

To check the correct configuration of the device and of the control system, it is possible to simulate different situations (measured values, diagnostic messages etc.). See the **Simulation** submenu ( $\Rightarrow \square 248$ ) for details.

## 9.5 **Protecting settings from unauthorized access**

There are two possibilities to protect the settings from unauthorized access:

- By an access code ( $\rightarrow \square 50$ )
  - This locks the access via the display and operating module.
- By the protection switch (→ 
   <sup>1</sup>⇒ 51)
   This locks the access to W&M-related parameters by any user interface (display and operating module, FieldCare, other configuration tools).


# 10 Operation

## 10.1 Reading off the device locking status

Depending on the locking state of the device some operations may be locked. The current locking status is indicated at: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Locking status. The following table summarizes the different locking statuses:

Locking status Meaning		Unlocking procedure	
Hardware locked	Hardware locked The device is locked by the write-protection switch in the terminal compartment.		
SIL locked	The device is in SIL-locked mode.	Detailed information on this topic see SIL Safety manual	
CT active - all parameters	The custody transfer mode is active.	→ 🗎 51	
WHG locked	The device is in WHG-locked mode.	Detailed information on this topic see SIL Safety manual	
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/ download, reset). Once the internal processing has been completed, the parameters can be changed again.	Wait for completion of the device-internal processing.	

A locking is indicated by the write protection symbol in the header of the display:

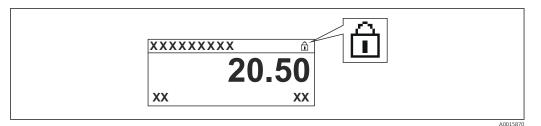

## **10.2** Reading off measured values

Tank values can be read off in the following submenus:

- Operation  $\rightarrow$  Level
- Operation → Temperature
- Operation  $\rightarrow$  Density
- Operation  $\rightarrow$  Pressure

# **11** Diagnostics and troubleshooting

# 11.1 General trouble shooting


### 11.1.1 General errors

Error	Possible cause	Remedial action	
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.	
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.	
Values on the display invisible	The plug of the display cable is not connected correctly.	Connect the plug correctly.	
	Display is defective.	Replace display.	
	Display contrast too low.	Set Setup $\rightarrow$ Advanced setup $\rightarrow$ Display $\rightarrow$ Contrast display to a value $\geq$ 60 %.	
"Communication error" is	Electromagnetic interference	Check grounding of the device.	
indicated on the display when starting the device or connecting the display	Broken display cable or display plug.	Exchange display.	
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer (e.g. FieldCare) and change it if necessary.	
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.	

## 11.2 Diagnostic information on local display

### 11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

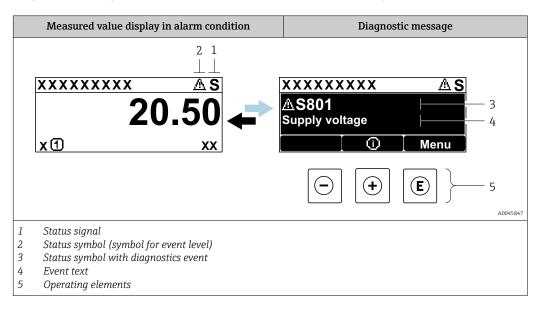

### Status signals


A0013956	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation or a warning).
<b>S</b> A0013958	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
M	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.

#### Status symbol (symbol for event level)

A0013961	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
A0013962	"Warning" status The device continues to measure. A diagnostic message is generated.

#### Diagnostics event and event text


The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

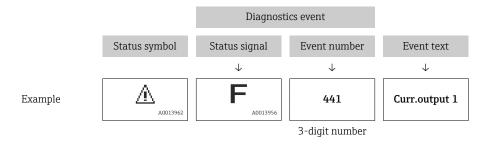


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu ( $\rightarrow \cong 244$ ).

#### **Operating elements**

Operating functions in menu, submenu			
(+)	<b>Plus key</b>		
A0013970	Opens the message about the remedial measures.		
(E)	Enter key		
A0013952	Opens the operating menu.		

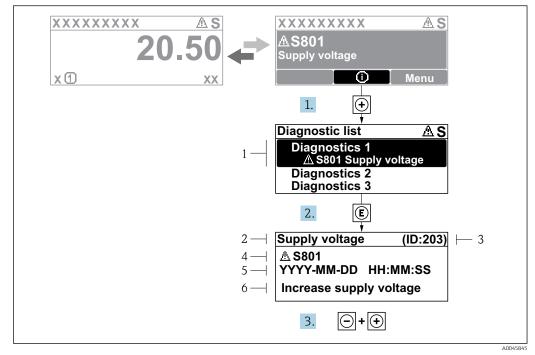

#### 11.2.2 Calling up remedial measures

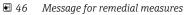

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

A diagnostic message appears in the standard view (measured value display).

1. Press 🗄 (🛈 symbol).


- ← The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\mathbb{E}$ .
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or in the **Previous diagnostics**.

- 1. Press E.
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press = +  $\pm$  simultaneously.
  - ← The message for the remedial measures closes.

### 11.3 Diagnostic information in FieldCare

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

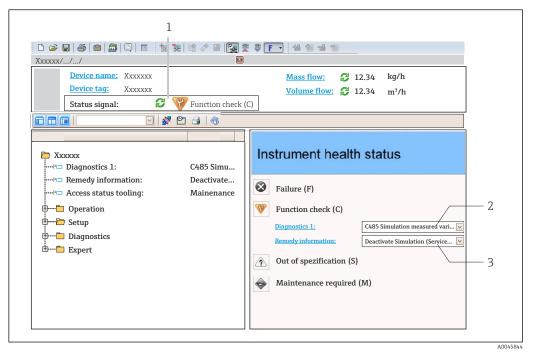

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with Service ID

Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostic list** submenu.

### 11.3.1 Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
A0017271	Failure A device error has occurred. The measured value is no longer valid.
A0017278	<b>Function check</b> The device is in service mode (e.g. during a simulation or a warning).
A0017277	Out of specification The device is operated outside its technical specification limits (e.g. outside the process temperature range)
A0017276	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

### 11.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

- 2. On the right in the working area, mouse over the parameter.
  - ← A tool tip with remedy information for the diagnostic event appears.

# 11.4 Overview of the diagnostic messages

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	sensor	- <b>!</b>		
102	Sensor incompatible error	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
150	Detector error	<ol> <li>Restart device</li> <li>Check electrical connections of detector</li> <li>Replace detector unit</li> </ol>	F	Alarm
151	Sensor electronic failure	Replace sensor electronic module	F	Alarm
Diagnostic of	electronic		1	1
242	Software incompatible	<ol> <li>Check software</li> <li>Flash or change main electronic module</li> </ol>	F	Alarm
252	Modules incompatible	<ol> <li>Check if correct electronic module is plugged</li> <li>Replace electronic module</li> </ol>	F	Alarm
261	Electronic modules	<ol> <li>Restart device</li> <li>Check electronic modules</li> <li>Change I/O module or main electronics</li> </ol>	F	Alarm
262	Module connection	<ol> <li>Check module connections</li> <li>Replace electronic modules</li> </ol>	F	Alarm
270	Main electronics failure	Replace main electronics	F	Alarm
271	Main electronics failure	<ol> <li>Restart device</li> <li>Change main electronic module</li> </ol>	F	Alarm
272	Main electronics failure	Restart device	F	Alarm
272	Main electronics failure	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
273	Main electronics failure	<ol> <li>Emergency operation via display</li> <li>Change main electronics</li> </ol>	F	Alarm
275	I/O module failure	<ol> <li>Restart device</li> <li>Change I/O module</li> </ol>	F	Alarm
276	I/O module faulty	<ol> <li>Restart device</li> <li>Change I/O module</li> </ol>	F	Alarm
282	Data storage	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
283	Memory content	<ol> <li>Transfer data or reset device</li> <li>Contact service</li> </ol>	F	Alarm
284	Detector SW update in progress	Firmware update active, please wait!	F	Alarm
311	Electronics failure	Maintenance required! 1. Do not perform reset 2. Contact service	М	Warning
333	System recovery required	HW change detected System configuration recovery required Go to menu on device and perform recovery	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
334	System recovery failure	HW changed, system recovery failure. Return to factory	F	Alarm
381	Displacer distance invalid	<ol> <li>Calibrate sensor</li> <li>Restart device</li> <li>Replace sensor electronics</li> </ol>	F	Alarm
382	Sensor communication	<ol> <li>Check connection of sensor electronics</li> <li>Restart device</li> <li>Replace sensor electronics</li> </ol>	F	Alarm
Diagnostic of o	configuration		1	
400	AIO simulation output	Deactivate simulation AIO output	С	Warning
401	DIO simulation output	Deactivate simulation DIO output	С	Warning
403	Calibration AIO	1. Restart device 2. Change I/O module	F	Alarm
404	Calibration AIP	1. Restart device 2. Change I/O module	F	Alarm
405	COMM timeout DIO 1 to 8	<ol> <li>Check wiring</li> <li>Change I/O module</li> </ol>	F	Alarm
406	IOM offline	<ol> <li>Check wiring</li> <li>Change I/O module</li> </ol>	F	Alarm
407	COMM timeout AIO 1 to 2	<ol> <li>Check wiring</li> <li>Change I/O module</li> </ol>	F	Alarm
408	Invalid range AIO 1 to 2	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
409	RTD temp out of range 1 to 2	<ol> <li>Check electronic modules</li> <li>Change I/O or main electronic module</li> </ol>	С	Warning
410	Data transfer	<ol> <li>Retry data transfer</li> <li>Check connection</li> </ol>	F	Alarm
411	Hart device 1 to 15 has malfunction	1. Check HART device 2. Change HART device	F	Alarm <sup>1)</sup>
412	Processing download	Download active, please wait	С	Warning
413	NMT 1 to 15: element is open or short	<ol> <li>Check NMT wiring connection</li> <li>Replace NMT</li> </ol>	С	Warning
415	Hart device 1 to 15 offline	1. Check HART device 2. Change HART device	С	Warning
416	Warning occurred for HART device 1 to 15	Check connected HART device	М	Warning
434	Real time clock defective	Replace main electronics	С	Warning
436	Date/time incorrect	Check date and time settings.	М	Warning
437	Configuration incompatible	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
438	Dataset	<ol> <li>Check data set file</li> <li>Check device configuration</li> <li>Up- and download new configuration</li> </ol>	M	Warning
441	AIO 1 to 2 current output alarm	<ol> <li>Check process</li> <li>Check current output settings</li> </ol>	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
442	AIO 1 to 2 current output warning	<ol> <li>Check process</li> <li>Check current output settings</li> </ol>	С	Warning
443	AIO 1 to 2 Input not HART compatible	Change PV source or AIO input source.	С	Warning
484	Failure mode simulation	Deactivate simulation	С	Alarm
495	Diagnostic event simulation	Deactivate simulation	С	Warning
500	AIO C1-3 source no longer valid	Change input source	С	Warning
501	Level source no longer valid	Change input source	С	Warning
502	GP1 source no longer valid	Change input source	С	Warning
503	GP2 source no longer valid	Change input source	С	Warning
504	GP3 source no longer valid	Change input source	С	Warning
505	GP4 source no longer valid	Change input source	С	Warning
506	Water level source no longer valid	Change input source	С	Warning
507	Liquid temp source no longer valid	Change input source	С	Warning
508	Vapor temperatur source no longer valid	Change input source	С	Warning
509	Air temperature source no longer valid	Change input source	С	Warning
510	P1 source no longer valid	Change input source	С	Warning
511	P2 source no longer valid	Change input source	С	Warning
512	P3 source no longer valid	Change input source	С	Warning
513	Upper density source no longer valid	Change input source	С	Warning
514	Middle density source no longer valid	Change input source	С	Warning
515	Lower density source no longer valid	Change input source	С	Warning
516	Gauge command source no longer valid	Change input source	С	Warning
517	Gauge status source no longer valid	Change input source	С	Warning
518	Average density source no longer valid	Change input source	С	Warning
519	Upper interface source no longer valid	Change input source	С	Warning
520	Lower interface source no longer valid	Change input source	С	Warning
521	Bottom level source no longer valid	Change input source	С	Warning
522	Displacer position source not valid	Change input source	С	Warning
523	Distance source no longer valid	Change input source	С	Warning
524	Balance flag source no longer valid	Change input source	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
525	One time cmd source no longer valid	Change input source	С	Warning
526	Alarm 1 to 4 source no longer valid	Change input source	С	Warning
527	AIO B1-3 source no longer valid	Change input source	С	Warning
528	CTSh	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
529	HTG	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
530	HTMS	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
531	HyTD correction value	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	С	Warning
532	HART output: PV source not valid	Change input source	С	Warning
533	HART output: SV source not valid	Change input source	С	Warning
534	HART output: QV source not valid	Change input source	С	Warning
535	HART output: TV source not valid	Change input source	С	Warning
536	Display: source no longer valid	Change input source	С	Warning
537	Trend: source no longer valid	Change input source	С	Warning
538	HART output: PV mA source not valid	Change input source	С	Warning
539	Modbus 1-4 SP source invalid	Set valid SP input selector	С	Warning
540	V1 1-4 SP source invalid	Set valid SP input selector	С	Warning
541	Modbus 1-4 alarm source invalid	Set valid alarm input selector	С	Warning
542	V1 1-4 alarm source invalid	Set valid alarm input selector	С	Warning
543	Modbus 1-4 analog source invalid	Set valid analog input selector	С	Warning
544	V1 1-4 analog source invalid	Set valid analog input selector	С	Warning
545	Modbus 1-4 user value source invalid	Set valid user value input selector	С	Warning
546	Modbus 1-4 discrete value source invalid	Set valid user discrete input selector	С	Warning
547	V1 1-4 user value source invalid	Set valid user value input selector	С	Warning
548	V1 1-4 discrete value source invalid	Set valid user discrete input selector	С	Warning
549	Modbus 1-4 percent source invalid	Set valid percentage input selector	С	Warning
550	V1 1-4 percent source invalid	Set valid percentage input selector	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
560	Calibration mandatory	<ol> <li>Carry out weight calibration</li> <li>Carry out reference calibration</li> <li>Carry out drum calibration</li> </ol>	С	Alarm
564	DIO B1-2 source no longer valid	Change input source	С	Warning
565	DIO B3-4 source not valid	Change input source	С	Warning
566	DIO C1-2 source no longer valid	Change input source	С	Warning
567	DIO C3-4 source no longer valid	Change input source	С	Warning
568	DIO D1-2 source no longer valid	Change input source	С	Warning
569	DIO D3-4 source no longer valid	Change input source	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
586	Record map	Recording of mapping please wait	С	Warning
598	DIO A1-2 source no longer valid	Change input source	С	Warning
599	DIO A3-4 source no longer valid	Change input source	С	Warning
Diagnostic of J	process			
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check device configuration.	F	Alarm
803	Current loop 1 to 2	2. Check wiring.	М	Warning
803	Current loop		С	Warning
825	System temperature	1. Check ambient temperature	S	Warning
825	System temperature	2. Check process temperature	F	Alarm
826	Sensor temperature	1. Check ambient temperature	S	Warning
826	Sensor temperature	2. Check process temperature	F	Alarm
844	Process value out of specification	1. Check process value 2. Check application	S	Warning <sup>1)</sup>
844	Process value out of specification	- 3. Check sensor	S	Warning
901	Level held	Normal state while Dip Freeze is turned on, otherwise check configuration	S	Warning
903	Current loop 1 to 2	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	F	Alarm
904	Digital output 1 to 8	<ol> <li>Check device configuration.</li> <li>Check wiring.</li> </ol>	F	Alarm
941	Echo lost	<ol> <li>Check process value</li> <li>Check application</li> <li>Check sensor</li> </ol>	S	Warning
942	In safety distance	<ol> <li>Check level</li> <li>Check safety distance</li> <li>Reset self holding</li> </ol>	S	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostics	Maintain your diagnostic event	М	Warning
961	Alarm 1 to 4 HighHigh	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
962	Alarm 1 to 4 High	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
963	Alarm 1 to 4 Low	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
964	Alarm 1 to 4 LowLow	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	С	Warning
965	Alarm 1 to 4 HighHigh	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
966	Alarm 1 to 4 High	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
967	Alarm 1 to 4 Low	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
968	Alarm 1 to 4 LowLow	<ol> <li>Check alarm source</li> <li>Check configuration settings</li> </ol>	F	Alarm
970	Overtension	<ol> <li>Check displacer and process conditions</li> <li>Release overtension</li> </ol>	С	Alarm
971	Undertension	Check displacer and process.	С	Alarm

1) Diagnostic behavior can be changed.



The parameters No.941, 942, and 943 are only used for NMR8x and NRF81.

## 11.5 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics  $\rightarrow$  Diagnostic list

### Calling up and closing the remedial measures

1. Press E.

└ The message for the remedial measures for the selected diagnostic event opens.

2. Press - + + simultaneously.

└ The message about the remedial measures closes.

### 11.6 Reset measuring device

To reset the device to a defined state use the **Device reset** parameter ( $\rightarrow \square 239$ ).

### 11.7 Device information

Information on the device (order code, hardware and software version of the individual modules etc.) can be found in the **Device information** submenu ( $\rightarrow \square 245$ ).

### 11.8 Firmware history

Date	Software	Modifications	Documentation (NRF81)			
version		Operating Instructions	Description of Parameters	Technical Information		
04.2016	01.00.zz	Original software	BA01465G/00/EN/01.16	GP01083G/00/EN/01.16	TI01251G/00/EN/01.16	
12.2016	01.02.zz	Bugfixes and improvements	BA01465G/00/EN/02.17	GP01083G/00/EN/02.17	TI01251G/00/EN/02.17	
07.2018	01.03.zz	Software update	BA01465G/00/EN/04.18		TI01251G/00/EN/03.18	
05.2020	01.04.zz	Software update	BA01465G/00/EN/05.20		TI01251G/00/EN/04.20	
08.2021	01.05.zz	Software update	BA01465G/00/EN/06.21	GP01083G/00/EN/ 04.22-00		
08.2022	01.06.zz	Software update	BA01465G/00/EN/ 07.22-00			

## 12 Maintenance

### 12.1 Maintenance tasks

No special maintenance work is required.

### 12.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

### 12.2 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

#### 13 Repair

#### 13.1 General information on repairs

#### 13.1.1 **Repair concept**

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

#### 13.1.2 **Repairs to Ex-approved devices**

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

#### 13.1.3 Replacement of a device or electronic module

After a complete device or the electronic mainboard has been replaced, the parameters can be downloaded into the instrument again via FieldCare.

Condition: The configuration of the old device has been saved to the computer via FieldCare.



### The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Device reset = Restart device. This ensures correct operation of the device after the restore.

### 13.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

### 13.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

### 13.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- Refer to the web page for information: http://www.endress.com/support/return-material
   Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

### 13.5 Disposal


## X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

## 14 Accessories

### 14.1 Device-specific accessories

### 14.1.1 Weather protection cover

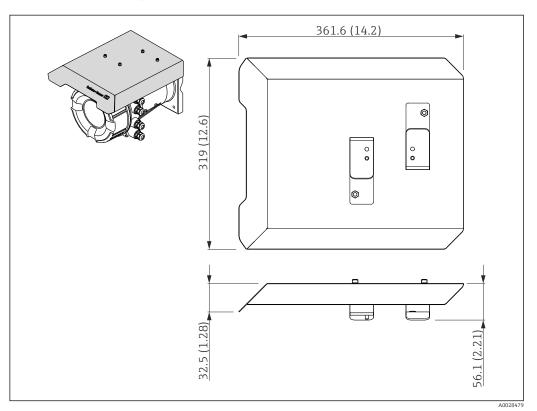

Weather protection cover; dimensions: mm (in)

#### Materials

- Protection cover and mounting brackets Material 316L (1.4404)
- Screws and washers

Material

A4

- **F** The weather protection cover can be ordered together with the device:
  - Ordering feature 620 "Accessory Enclosed", option PA "Weather Protection Cover") • It can also be ordered as an accessory:
    - Order code: 71292751 (for NMR8x and NRF8x)

#### 14.2 **Communication-specific accessories**

#### WirelessHART adapter SWA70

- Is used for the wireless connection of field devices
- The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks

For details, see Operating Instructions BA00061S

#### Gauge Emulator, Modbus to BPM

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Enraf BPM
- 1 measuring device per Gauge Emulator
- $\bullet$  Separate power supply: 100 to 240  $V_{AC}$  , 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

#### Gauge Emulator, Modbus to TRL/2

- Using the protocol converter, it is possible to integrate a field device into a host system even if the field device does not know the communication protocol of the host system. Eliminates vendor lock-in for field devices.
- Field communication protocol (field device): Modbus RS485
- Host communication protocol (host system): Saab TRL/2
- 1 measuring device per Gauge Emulator
- Separate power supply: 100 to 240 V<sub>AC</sub>, 50 to 60 Hz, 0.375 A, 15 W
- Several approvals for the hazardous area

#### 14.3Service-specific accessories

#### **Commubox FXA195 HART**

For intrinsically safe HART communication with FieldCare via the USB interface

For details, see "Technical Information" TI00404F

#### Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop Order number: 51516983



For details, see "Technical Information" TI00405C

#### DeviceCare SFE100

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices DeviceCare is available for download at www.software-products.endress.com. You need to register in the Endress+Hauser software portal to download the application.

Technical Information TI01134S **I** 

#### FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.



Technical Information TI00028S

#### 14.4 System components

### RIA15

Compact process display unit with very low voltage drop for universal use to display 4 to 20 mA/HART signals

Technical Information TI01043K

#### Tankvision Tank Scanner NXA820 / Tankvision Data Concentrator NXA821 / **Tankvision Host Link NXA822**

Inventory Management System with completely integrated software for operation via standard web browser



Technical Information TI00419G

## 15 Operating menu

- 🛐 🛛 🗐 : Navigation path for operating module at the device
  - 📄 : Navigation path for operating tool (e.g. FieldCare)
  - 🕞 : Parameter can be locked via software locking

### 15.1 Overview of the operating menu

- This section lists the parameters of the following menus:
  - Operation ( $\rightarrow \square 112$ )
  - Setup (→ 🗎 122)
  - Diagnostics ( $\rightarrow \cong 241$ )
  - For the **Expert** menu refer to the "Description of Device Parameters" (GP) of the respective device.
  - Depending on the device version and parametrization some parameters will not be available in a given situation. For details refer to the "Prerequisite" category in the description of the respective parameter.
  - The representation essentially corresponds to the menu in an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

Navigation	8 8	Operating tool
------------	-----	----------------

Operation			→ 🗎 112
	► Level		→ 🗎 112
		Dip Freeze	→ 🗎 112
		Tank level	→ 🗎 112
		Tank Level %	→ 🖺 112
		Tank ullage	→ 🗎 113
		Tank ullage %	→ 🗎 113
		Upper interface level	→ 🗎 113
		Lower interface level	→ 🗎 113
		Water level	→ 🗎 114
		Measured level	→ 🖺 114
	► Temperature		→ 🖺 114
		Air temperature	→ 🗎 114
		Liquid temperature	→ 🖺 114

	Vapor temperature			→ 🗎 115
	► NMT element va	alues		→ 🗎 115
		► Element tempera	ature	→ 🗎 115
			Element temperature 1 to 24	→ 🗎 115
		► Element position	1	→ 🗎 116
			Element position 1 to 24	→ 🗎 116
► Density		]		→ 🗎 116
	Observed density			→ 🗎 116
	Observed density te	emperature		→ 🗎 116
	Vapor density			→ 🗎 117
	Air density			→ 🗎 117
	Measured upper de	nsity		→ 🗎 117
	Measured middle de	ensity		→ 🗎 117
	Measured lower de	nsity		→ 🗎 118
► Pressure		]		→ 🗎 118
	P1 (bottom)			→ 🗎 118
	P2 (middle)			→ 🗎 118
	P3 (top)			→ 🗎 119
► GP values		]		→ 🗎 120
	GP 1 to 4 name			→ 🗎 120
	GP Value 1			→ 🗎 120
	GP Value 2			→ 🗎 120
	GP Value 3			→ 🗎 120
	GP Value 4			→ 🗎 121

<b>L</b> Castan	1			× <b>Fh</b> 100
🖌 Setup				→ 🗎 122
Device tag		]		→ 🗎 122
Units preset		]		→ 🗎 122
Tank reference hei	ght	]		→ 🗎 123
Tank level		]		→ 🗎 112
Level source		]		→ 🗎 123
Liquid temp source				→ 🗎 124
► Advanced setup	)			→ 🗎 125
	Locking status		]	→ 🗎 125
	User role		]	→ 🗎 125
	Enter access code		]	→ 🗎 125
	► Input/output		]	→ 🖺 126
		► HART devices		→ 🗎 126
			Number of devices	) → 🖺 126
			► HART Device(s)	→ 🗎 127
			► Forget device	→ 🖺 132
		► Analog IP		→ 🗎 133
			Operating mode	→ 🗎 133
			Thermocouple type	) → 🖺 134
			RTD type	→ 🖺 133
			RTD connection type	) → 🖺 134
			Process value	) → 🖺 135
			Process variable	) → 🗎 135
			0 % value	] → 🗎 135
			100 % value	) → 🗎 136

	Input value	) → 🖺 136
	Minimum probe temperature	→ 🗎 136
	Maximum probe temperature	) → 🗎 137
	Probe position	) → 🗎 137
	Damping factor	) → 🗎 138
	Gauge current	→ 🗎 138
► Analog I/C		→ 🖺 139
	Operating mode	→ 🖺 139
	Current span	→ 🗎 140
	Fixed current	→ 🗎 141
	Analog input source	→ 🗎 141
	Failure mode	→ 🗎 142
	Error value	→ 🗎 143
	Input value	→ 🗎 143
	0 % value	] → 🗎 143
	100 % value	] → 🗎 144
	Input value %	] → 🗎 144
	Output values	] → 🗎 144
	Process variable	) → 🗎 145
		→ 🗎 145
	Analog input 0% value	
	Analog input 100% value	→ 🗎 145
	Error event type	→ 🗎 146
	Process value	) → 🗎 146
	Input value in mA	→ 🗎 146
	Input value percent	) → 🗎 147

		Damping factor	) → 🗎 147
		Used for SIL/WHG	→ 🗎 147
		Expected SIL/WHG chain	→ 🗎 148
	► Digital Xx-x		→ 🗎 149
		Operating mode	→ 🗎 149
		Digital input source	→ 🗎 150
		Input value	→ 🗎 151
		Contact type	→ 🗎 151
		Output simulation	→ 🗎 151
		Output values	→ 🗎 152
		Readback value	→ 🗎 152
		Used for SIL/WHG	→ 🗎 153
		Expected SIL/WHG chain	→ 🗎 153
► Communication	1		→ 🗎 154
	► Communication	a interface 1 to 2	
		Communication interface protocol	]
		► Configuration	→ 🗎 155
		► Configuration	→ 🗎 158
		► Configuration	→ 🗎 162
		► V1 input selector	→ 🗎 161
		► WM550 input selector	→ 🗎 163
	► HART output		→ 🗎 165
		► Configuration	→ 🗎 165
		► Information	→ 🗎 173

► Application		]	→ 🗎 175
	► Tank configurat	ion	→ 🗎 175
		► Level	→ 🗎 175
		► Temperature	→ <a>Pmin 178</a>
		► Density	→ <a>Pmin 182</a>
		► Pressure	→ 🗎 184
	► Tank calculation	1	→ 🗎 191
		► HyTD	→ 🗎 193
		► CTSh	→ 🗎 198
		► HTG	→ 🗎 208
		► HTMS	→ 🗎 213
	► Alarm		→ 🗎 216
		Alarm 1 to 4	→ 🗎 216
► Display		]	→ 🗎 225
	Language		→ 🗎 225
	Format display		→ 🖺 225
	Value 1 to 4 display	7	→ 🗎 226
	Decimal places 1 to	4	→ 🗎 227
	Separator		→ 🗎 228
	Number format		→ 🗎 228
	Header		→ 🖺 229
	Header text		→ 🗎 229
	Display interval		→ 🖺 229
	Display damping		→ 🗎 230

		Backlight		→ 🖺 230
		Contrast display		→ 🗎 230
	► System units			→ 🖺 232
		Units preset	]	→ 🗎 122
				/ 🗏 122
		Distance unit		→ 🖺 232
		Pressure unit		→ 🖺 233
		Temperature unit		→ 🖺 233
		Density unit		→ 🖺 233
	► Date / time			→ 🗎 235
		Date/time		→ 🗎 235
		Set date		→ 🖺 235
			]	→ 🖺 235
		Year		7 🖬 200
		Month		→ 🖺 236
		Day		→ 🖺 236
		Hour		→ 🖺 236
		Minute		→ 🗎 237
	► SIL confirmation	L		→ 🗎 238
	► Deactivate SIL/V	VHG		→ 🗎 238
	► Administration			→ 🗎 239
		Define access code		→ 🖺 239
		Device reset		→ 🖺 239
억, Diagnostics	]			→ 🗎 241
Actual diagnostics		]		→ 🖺 241
Timestamp		]		→ 🗎 241
Previous diagnostic	S	]		→ 🗎 241

Timestamp		→ 🖺 242
Operating time from	n restart	→ 🖹 242
Operating time		→ 🗎 242
Date/time		→ 🗎 235
► Diagnostic list		→ 🗎 244
	Diagnostics 1 to 5	→ 🖺 244
	Timestamp 1 to 5	→ 🖺 244
► Device informat	ion	→ 🖺 245
	Device tag	→ 🗎 245
	Serial number	→ 🗎 245
	Firmware version	→ 🗎 245
	Firmware CRC	→ 🗎 246
	Weight and measures configuration CRC	→ 🖺 246
	Device name	→ 🗎 246
	Order code	→ 🗎 246
	Extended order code 1 to 3	→ 🗎 247
► Simulation		→ 🗎 248
	Device alarm simulation	→ 🗎 248
	Diagnostic event simulation	→ 🖺 248
	Current output 1 simulation	→ 🖺 248
	Simulation value	→ 🗎 249

# 15.2 "Operation" menu

The **Operation** menu ( $\rightarrow \implies$  112) shows the most important measured values.

*Navigation* 🗟 🖾 Operation

# 15.2.1 "Level" submenu

*Navigation*  $\square \square$  Operation  $\rightarrow$  Level

Dip Freeze	۵	8
Navigation		
Description	If activated the level values are frozen and a warning is shown.	
Selection	<ul><li>Off</li><li>On</li></ul>	
Factory setting	Off	
Additional information	This function can be used when performing a manual dipping in the same stilling we or nozzle where the radar device is mounted.	11

Tank level		
Navigation		Tank level
Description	Shows the distance from the zero position (tank bottom or datum plate) to the product surface.	
Additional information	Read access     Operator	
	Write access	-

Tank Level %		
Navigation		
Description	Shows the level as a percentage of the full measuring range.	
Additional information	Read access Operator	
	Write access	-

Tank ullage		
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Level} \rightarrow \text{Tank} $	ullage
Description	Shows the remaining empty space in the tank.	
Additional information	Read access     Operator	
	Write access	-

Tank ullage %		
Navigation	$ \blacksquare \square  \text{Operation} \rightarrow \text{Level} \rightarrow \text{Tank} $	ullage %
Description	Shows the remaining empty space in percentage related to parameter tank reference height.	
Additional information	Read access Operator	
	Write access	-

Upper interface level		
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Level} \rightarrow \text{Upp} $	er I/F level
Description	Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.	
Additional information	Read access     Maintenance	
	Write access	-

Lower interface level		
Navigation		er I/F level
Description	Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.	
Additional information	Read access     Maintenance	
	Write access	-

Water level		
Navigation	$\blacksquare$ □ Operation → Level	$\rightarrow$ Water level
Description	Shows the bottom water level.	
Additional information	Read access Operator	
	Write access	-
		· · · · ·

Measured level		
Navigation		sured level
Description	Shows the measured level without any correction from the tank calculations.	
Additional information	Read access Operator	
	Write access	-

# 15.2.2 "Temperature" submenu

*Navigation*  $\blacksquare \Box$  Operation  $\rightarrow$  Temperature

Air temperature	
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Temperature} \rightarrow \text{Air temp.} $
Description	Shows the air temperature.

Additional information	Read access	Operator
	Write access	-

Liquid temperature			
Navigation	Image: Imag		
Description	Shows the average or spot temperature of the measured liquid.		
Additional information	Read access Operator		
	Write access	-	

Vapor temperature			
Navigation	Image: Boost of the second secon	$\rightarrow$ Vapor temp.	
Description	Shows the measured vapor temp	Shows the measured vapor temperature.	
Additional information	Read access	Operator	
	Write access	-	

<b>"NMT element values" submenu</b> This submenu is only visible if a Prothermo NMT is connected.			
Navigation $\Box$ Operation $\rightarrow$ Temperature $\rightarrow$ NMT elem. values			
"Element temperat	ure" suł	omenu	
Navigation		Operation $\rightarrow$ Temperature $\rightarrow$ NMT elem. values $\rightarrow$ Element temp.	

Element temperature 1 to 24			
Navigation		Operation $\rightarrow$ Temperature 1 to 24	→ NMT elem. values → Element temp. → Element temp
Description	Shows the temperature of an element in the NMT.		
Additional information	Read access Operator		
	Write	access	-

"Element position" submenu

Navigation

Element position 1 to 24			
Navigation		Operation → Temperature 1 to 24	→ NMT elem. values → Element position → Element pos.
Description	Shows the position of the selected element in the NMT.		
Additional information	Read	access	Operator
	Write	access	-

# 15.2.3 "Density" submenu

Navigation

Observed density		
Navigation		Observed density
Description	Calculated density of the product.	
Additional information	Read access	Operator
	Write access	-

This value is calculated from different measured variables depending on the selected calculation method.

Observed density temperature		
Navigation		
Description	Corresponding temperature of measured density. Can be used for reference density calculation.	
User interface	Signed floating-point number	
Factory setting	0°C	

Vapor density		8
Navigation	Image: B □ Operation → Density → V	apor density
Description	Defines the density of the gas p	hase in the tank.
User entry	0.0 to 500.0 kg/m <sup>3</sup>	
Factory setting	1.2 kg/m <sup>3</sup>	
Additional information	Read access	Operator
	Write access	Maintenance

Air density		٦
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Density} \rightarrow \text{Air} $	r density
Description	Defines the density of the air sur	rounding the tank.
User entry	0.0 to 500.0 kg/m <sup>3</sup>	
Factory setting	1.2 kg/m³	
Additional information	Read access	Operator
	Write access	Maintenance

Measured upper density			
Navigation	$ \blacksquare \square  \text{Operation} \rightarrow \text{Density} \rightarrow \text{Methods} $	eas upper dens.	
Description	Shows the density of the upper phase.		
Additional information	Read access	Operator	
	Write access	-	

Measured middle density		
Navigation	8 2	Operation $\rightarrow$ Density $\rightarrow$ Meas middle dens

**Description** Density of the middle phase.

Additional information	Read access	Operator
	Write access	-

# Measured lower density

**Navigation** B Operation  $\rightarrow$  Density  $\rightarrow$  Meas lower dens.

Description

Density of the lower phase.

Additional information	Read access	Maintenance
	Write access	-

# 15.2.4 "Pressure" submenu

Navigation

P1 (bottom)	
Navigation	

**Description** Shows the pressure at the tank bottom.

Additional information	Read access	Operator
	Write access	-

P2 (middle)		
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{Pressure} \rightarrow P $	2 (middle)
Description	Shows the pressure (P2) at the m	hiddle transmitter.
Additional information	Read access	Operator
	Write access	-

P3 (top)		
Navigation	$\square \square  \text{Operation} \rightarrow \text{Pressure} \rightarrow \text{Pressure}$	3 (top)
Description	Shows the pressure (P3) at the to	p transmitter.
Additional information	Read access	Operator
	Write access	-

# 15.2.5 "GP values" submenu

Navigation	Navig	ation
------------	-------	-------

GP 1 to 4 name			Â
Navigation		SP 1 name	
Description	Defines the label associated with	the respective GP value.	
User entry	Character string comprising num	pers, letters and special characters (15)	
Factory setting	GP Value 1		
Additional information	Read access	Operator	
	Write access	Maintenance	

GP Value 1		
Navigation		GP Value 1
Description	Displays the value that will be use	ed as general purpose value.
Additional information	Read access	Operator
	Write access	-

# GP Value 2

Navigation		
Description	Displays the value that will be use	ed as general purpose value.
Additional information	Read access	Operator
	Write access	-

GP Value 3	
Navigation	
Description	Displays the value that will be used as general purpose value.

Additional information	Read access	Operator
	Write access	-

GP Value 4		
Navigation	$ \blacksquare \Box  \text{Operation} \rightarrow \text{GP values} \rightarrow 0 $	GP Value 4
Description	Displays the value that will be us	ed as general purpose value.
Additional information	Read access	Operator
	Write access	-

# 15.3 "Setup" menu

Navigation

🛛 🖃 🖉 Setup

Device tag			ß
Navigation	■ $\square$ Setup → Device tag		
Description	Enter a unique name for the mea plant.	suring point to identify the device quickly within the	
User entry	Character string comprising num	bers, letters and special characters (32)	
Factory setting	NRF8x		
Additional information	Read access	Operator	
	Write access	Maintenance	

Units preset			<b>a</b>
Navigation	$\blacksquare$ = Setup → Units pres	et	
Description	Defines a set of units for l	ength, pressure and temperature.	
Selection	<ul> <li>mm, bar, °C</li> <li>m, bar, °C</li> <li>mm, PSI, °C</li> <li>ft, PSI, °F</li> <li>ft-in-16, PSI, °F</li> <li>ft-in-8, PSI, °F</li> <li>Customer value</li> </ul>		
Factory setting	mm, bar, °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

If the **Customer value** option is selected, the units are defined in the following parameters. In any other case these are read-only parameters used to indicate the respective unit:

- Distance unit ( $\rightarrow \square 232$ )
- Pressure unit ( $\rightarrow \square 233$ )
- Temperature unit ( $\rightarrow \cong 233$ )

Tank reference height		ß
Navigation		
Description	Defines the distance from the dip datum plate).	pping reference point to the zero position (tank bottom or
User entry	0 to 10 000 000 mm	
Factory setting	Dependent on the device version	
Additional information	Read access	Operator
	Write access	Maintenance

Tank level		
Navigation		
Description	Shows the distance from the zero surface.	position (tank bottom or datum plate) to the product
Additional information	Read access	Operator
	Write access	-

Level source		ඕ
Navigation		
Description	Defines the source of the level va	lue.
Selection	<ul> <li>No input value</li> <li>HART device 1 15 level</li> <li>Level SR<sup>*</sup></li> <li>Level<sup>*</sup></li> <li>Displacer position<sup>*</sup></li> <li>AIO B1-3 value<sup>*</sup></li> <li>AIO C1-3 value<sup>*</sup></li> <li>AIP B4-8 value<sup>*</sup></li> <li>AIP C4-8 value<sup>*</sup></li> </ul>	
Factory setting	Dependent on the device version	
Additional information	Read access	Operator
	Write access	Maintenance

<sup>\*</sup> Visibility depends on order options or device settings

A

# Liquid temp source Navigation $\square$ Setup → Liq temp source Description Defines source from which the liquid temperature is obtained. Selection Manual value • HART device 1 ... 15 temperature AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value **Factory setting** Manual value Additional information Read access Operator

Maintenance

# 15.3.1 "Advanced setup" submenu

*Navigation*  $\square \square$  Setup  $\rightarrow$  Advanced setup

Locking status		
Navigation	Image: Setup → Advanced setup	$\rightarrow$ Locking status
Description	Indicates the type of locking.	
	'Hardware locked' (HW) The device is locked by the 'WP' switch into the OFF position.	switch on the main electronics module. To unlock, set the
	'WHG locked' (SW) Unlock the device by entering tl	he appropriate access code in 'Enter access code'.
	'SIL locked' (SW) Unlock the device by entering tl	he appropriate access code in 'Enter access code'.
		l by processes in the device (e.g. data upload/download, cally be unlocked after completion of these processes.
Additional information	Read access	Operator
	Write access	-

	Setup $\rightarrow$ Advanced setup -	→ User role
Show	vs the access authorization t	o the parameters via the operating tool
Read	access	Operator
Write	e access	-
	Shov Read	r

Enter access code		
Navigation	■ Setup → Advanced setup -	→ Ent. access code
Description	Enter access code to disable write	e protection of parameters.
Additional information	Read access	Operator
	Write access	Operator

	"Input/output" su	bmenu	u
	Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output
	"HART devices" subi	тепи	
	Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output $\rightarrow$ HART devices
Number of devices			
Navigation	$ \blacksquare \blacksquare  \text{Setup} \to \text{Adv} $	vanced	setup $\rightarrow$ Input/output $\rightarrow$ HART devices $\rightarrow$ Number devices
Description	Shows the number	of devi	rices on the HART bus.
Additional information	Read access		Operator

	loop.		
	Navigation 🛛 🗐		→ Advanced setup → Input/output → HART devices RT Device(s)
Device name			
Navigation	<ul><li>Image: Betup → Advan</li><li>→ Device name</li></ul>		→ Input/output → HART devices → HART Device(s)
Description	Shows the name of th	e transmitt	er.
Additional information	Read access		Operator
Auunonai intormation	Reau access		1
Autonal mormation	Write access		-
Polling address			
Polling address	Write access		- → Input/output → HART devices → HART Device(s)
Polling address Navigation	Write access	ess	- - > Input/output → HART devices → HART Device(s)
Polling address Navigation Description	Write access Write access Setup $\rightarrow$ Advan $\rightarrow$ Polling addre	ess	- - > Input/output → HART devices → HART Device(s)
	Write access Write access Setup $\rightarrow$ Advand $\rightarrow$ Polling address Shows the polling address	ess	<ul> <li>Input/output → HART devices → HART Device(s)</li> <li>transmitter.</li> </ul>
Polling address Navigation Description	Write access Write access Setup → Advan → Polling address Read access	ess	<ul> <li>Input/output → HART devices → HART Device(s)</li> <li>transmitter.</li> </ul>
Polling address Navigation Description	Write access Write access Setup → Advan → Polling address Read access	ess	<ul> <li>Input/output → HART devices → HART Device(s)</li> <li>transmitter.</li> </ul>

There is a **HART Device(s)** submenu for each HART slave device found on the HART

"HART Device(s)" submenu

Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Device tag	
Description	Shows the device tag of the transmitter.	
Additional information	Read access     Operator	
	Write access	-

Operating mode		ß
Navigation	<ul> <li>Image: Setup → Advanced setup</li> <li>→ Operating mode</li> </ul>	$\rightarrow$ Input/output $\rightarrow$ HART devices $\rightarrow$ HART Device(s)
Prerequisite	Not available if the HART device is a Prothermo NMT.	
Description	Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled from the connected HART Device.	
Selection	<ul> <li>PV only</li> <li>PV,SV,TV &amp; QV</li> <li>Level <sup>5)</sup></li> <li>Measured level <sup>5)</sup></li> </ul>	
Factory setting	PV,SV,TV & QV	
Additional information	Read access	Operator
	Write access	Maintenance

Communication status		
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Comm. status	
Description	Shows the operating status of the transmitter.	
User interface	<ul><li> Operating normally</li><li> Device offline</li></ul>	
Additional information	Read access Operator	
	Write access	-

# #blank# ( HART PV - designation dependent on device)

Navigation	Setup → Advanced setup → → #blank#	r r r r r	
Description	Shows the first HART variable (PV).		
Additional information	Read access	Operator	
	Write access	-	

<sup>5)</sup> only visible if the connected device is a Micropilot

#blank# (HART SV - designation dependent on device)		
Navigation	Image: Setup → Advanced setup → #blank#	→ Input/output → HART devices → HART Device(s)
Prerequisite	For HART devices other than NMT: <b>Operating mode (→ 🗎 128) = PV,SV,TV &amp; QV</b>	
Description	Shows the second HART variable (SV).	
Additional information	Read access Operator	
	Write access	-

#blank# (HART TV - designation dependent on device)			
Navigation	Image: Setup → A → #blank	Advanced setup $\rightarrow$ Input/output $\rightarrow$ HART devices $\rightarrow$ HART Device(s) s#	
Prerequisite	For HART device	For HART devices other than NMT: <b>Operating mode (→ 🗎 128) = PV,SV,TV &amp; QV</b>	
Description	Shows the third	Shows the third HART variable (TV).	
Additional information	Read access	Read access Operator	
	Write access	-	

#blank# (HART QV - designation dependent on device)		
Navigation	Setup → Advanced setup → → #blank#	→ Input/output → HART devices → HART Device(s)
Prerequisite	For HART devices other than NMT: <b>Operating mode (→ 🗎 128) = PV,SV,TV &amp; QV</b>	
Description	Shows the fourth HART variable (QV).	
Additional information	Read access     Operator	
	Write access	-

Output pressure		Ê
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output pressure	
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	

Description	Defines which HART variable is the pressure.	
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	
Factory setting	No value	
Additional information	Read access	Operator
	Write access	Maintenance

Output density		Ĺ
Navigation	<ul> <li>Image: Setup → Advanced set</li> <li>→ Output density</li> </ul>	up → Input/output → HART devices → HART Device(s)
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	
Description	Defines which HART variable is the density.	
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	
Factory setting	No value	
Additional information	Read access	Operator
	Write access	Maintenance

Output temperature		
Navigation	Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output temp.	
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	n
Description	Defines which HART variable is the temperature.	
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	

# Factory setting No value Additional information Read access Operator Write access Maintenance Output vapor temperature Image: Comparison of the section of the

Navigation	<ul> <li>B ⊆ Setup → Advanced setup ÷</li> <li>→ Output vapor tmp</li> </ul>	→ Input/output → HART devices → HART Device(s)
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	
Description	Defines which HART variable is the vapor temperature.	
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	
Factory setting	No value	
Additional information	Read access	Operator
	Write access	Maintenance

Output level		Â
Navigation	<ul> <li>Image: Setup → Advanced setu</li> <li>→ Output level</li> </ul>	p → Input/output → HART devices → HART Device(s)
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.	
Description	Defines which HART variable is the level.	
Selection	<ul> <li>No value</li> <li>Primary variable (PV)</li> <li>Secondary variable (SV)</li> <li>Tertiary variable (TV)</li> <li>Quaternary variable (QV)</li> </ul>	
Factory setting	No value	
Additional information	Read access	Operator
	Write access	Maintenance

"Forget device" wizard


	Read accessMaintenanceImage: This submenu is only visible if Number of devices ( $\rightarrow \square 126$ ) $\geq 1$ .Navigation $\square \square $ Setup $\rightarrow$ Advanced setup $\rightarrow$ Input/output $\rightarrow$ HART devices $\rightarrow$ Forget device	
Forget device		<u>8</u>
Navigation	Setup → Advanced setup → Input/output → HART devices → Forget device → Forget device	
Description	With this function an offline device can be deleted from the device list.	
Selection	<ul> <li>HART Device 1 *</li> <li>HART Device 2 *</li> <li>HART Device 3 *</li> <li>HART Device 4 *</li> <li>HART Device 5 *</li> <li>HART Device 6 *</li> <li>HART Device 7 *</li> <li>HART Device 8 *</li> <li>HART Device 10 *</li> <li>HART Device 11 *</li> <li>HART Device 12 *</li> <li>HART Device 13 *</li> <li>HART Device 15 *</li> <li>None</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator

Maintenance

<sup>\*</sup> Visibility depends on order options or device settings

### "Analog IP" submenu

There is a **Analog IP** submenu for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to → 🗎 139.

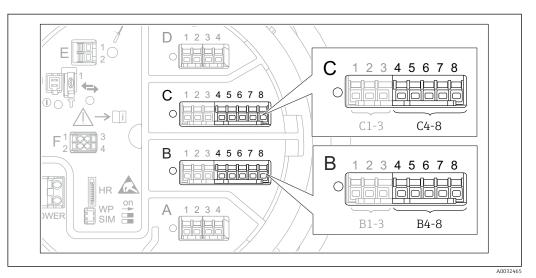

■ 48 Terminals for the "Analog IP" submenu ("B4-8" or "C4-8", respectively)

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog IP

Operating mode		l
Navigation		o → Input/output → Analog IP → Operating mode
Description	Defines the operating mode of the analog input.	
Selection	<ul><li>Disabled</li><li>RTD temperature input</li><li>Gauge power supply</li></ul>	
Factory setting	Disabled	
Additional information	Read access	Operator
	Write access	Maintenance

RTD type		A
Navigation	$\textcircled{B} \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
Prerequisite	Operating mode ( $\Rightarrow \triangleq 133$ ) = RTD temperature input	
Description	Defines the type of the connected RTD.	

Selection	<ul> <li>Cu50 (w=1.428, GOST)</li> <li>Cu53 (w=1.426, GOST)</li> <li>Cu90; 0°C (w=1.4274, GOST)</li> <li>Cu100; 25°C (w=1.4274, GOST)</li> <li>Cu100; 0°C(w=1.4274, GOST)</li> <li>Pt46 (w=1.391, GOST)</li> <li>Pt50 (w=1.391, GOST)</li> <li>Pt100(385) (a=0.00385, IEC75)</li> <li>Pt100(391) (a=0.003916, JIS10)</li> <li>Pt500(385) (a=0.00385, IEC75)</li> <li>Pt1000(385) (a=0.00385, IEC75)</li> <li>Ni100(617) (a=0.00617, DIN4)</li> <li>Ni120(672) (a=0.00617, DIN4)</li> <li>Ni1000(617) (a=0.00617, DIN4)</li> </ul>	51) dian) 604) 51) 751) 3760) 3760)
Factory setting	Pt100(385) (a=0.00385, IEC751	)
Additional information	Read access	Operator
	Write access	Maintenance

Thermocouple type		
Navigation	□ Setup → Advanced setup → Input/output → Analog IP → Thermocouple typ	
Description	Defines the type of the connected thermocouple.	
Selection	<ul> <li>N type</li> <li>B type</li> <li>C type</li> <li>D type</li> <li>J type</li> <li>K type</li> <li>L type</li> <li>L GOST type</li> <li>R type</li> <li>S type</li> <li>T type</li> <li>U type</li> </ul>	
Factory setting	N type	

RTD connection type		
Navigation	Image: Setup → Advanced setup → Input/output → Analog IP → RTD connect type	
Prerequisite	Operating mode (→ 🗎 133) = RTD temperature input	
Description	Defines the connection type of the RTD.	

	<ul><li>4 wire RTD connection</li><li>2 wire RTD connection</li><li>3 wire RTD connection</li></ul>	
Factory setting	4 wire RTD connection	
Additional information	Read access	Operator
	Write access	Maintenance

Process value			
Navigation		$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Process value	
Prerequisite	Operating mode ( $\rightarrow \equiv 133$ ) = Disabled		
Description	Shows the measured value received via the analog input.		
Additional information	Read access Operator		
	Write access	-	

Process variable			Ê
Navigation	Image: Barbon Setup → Advanced setup	$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Process variable	
Prerequisite	Operating mode (→ 🗎 133) ≠ RTD temperature input		
Description	Determines type of measured value.		
Selection	<ul> <li>Level linearized</li> <li>Temperature</li> <li>Pressure</li> <li>Density</li> </ul>		
Factory setting	Level linearized		
Additional information	Read access	Operator	
	Write access	Maintenance	

0 % value		
Navigation	Setup → Advanced setup → Input/output → Analog IP → 0 % value	
Prerequisite	Operating mode ( $\Rightarrow \square 133$ ) = 420mA input	

Description	Defines the value represented by a current of 4mA.	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access Operator	
	Write access Maintenance	

100 % value			
Navigation	Image: Barbon Setup → Advanced setup -	→ Input/output → Analog IP → 100 % value	
Prerequisite	Operating mode (→ 🗎 133) = 4	420mA input	
Description	Defines the value represented by	a current of 20mA.	
User entry	Signed floating-point number		
Factory setting	0 mm		
Additional information	Read access	Operator	

Maintenance

Input value			
Navigation		$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Input value	
Prerequisite	Operating mode ( $\rightarrow \triangleq 133$ ) $\neq$ Disabled		
Description	Shows the value received via the analog input.		
Additional information	Read access Operator		
	Write access	-	

Minimum probe temperatu	ire	a
Navigation	Setup → Advanced setup → Input/output → Analog IP → Min. probe temp	
Prerequisite	Operating mode (→ 🗎 133) = RTD temperature input	
Description	Minimum approved temperature of the connected probe. If the temperature falls below this value, the W&M status will be 'invalid'.	

User entry	−213 to 927 °C	
Factory setting	−100 °C	
Additional information	Read access	Operator
	Write access	Maintenance

Maximum probe temperat	ure		Â
Navigation	Image: Setup → Advanced setup →	$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Max. probe temp	
Prerequisite	Operating mode ( > 🗎 133) = RTD temperature input		
Description	Maximum approved temperature of the connected probe. If the temperature rises above this value, the W&M status will be 'invalid'.		
User entry	−213 to 927 °C		
Factory setting	250 °C		
Additional information	Read access Operator		
	Write access	Maintenance	

Probe position		ھ	
Navigation	■ $\square$ Setup → Advanced setup =	$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Probe position	
Prerequisite	Operating mode ( > 🗎 133) = RTD temperature input		
Description	Position of the temperature probe, measured from zero position (tank bottom or datum plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of the temperature value will be 'invalid'.		
User entry	-5000 to 30000 mm		
Factory setting	5000 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

£


# Damping factor

Navigation	□ Setup → Advanced setup → Input/output → Analog IP → Damping factor		
Prerequisite	Operating mode ( $\rightarrow \triangleq 133$ ) $\neq$ Disabled		
Description	Defines the damping constant (in seconds).		
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access Operator		
	Write access Maintenance		

Gauge current			
Navigation	$ \blacksquare \Box  \text{Setup} \rightarrow \text{Advanced setup} $	$\rightarrow$ Input/output $\rightarrow$ Analog IP $\rightarrow$ Gauge current	
Prerequisite	Operating mode ( > 🗎 133) = Gauge power supply		
Description	Shows the current on the power supply line for the connected device.		
Additional information	Read access Operator		
	Write access	-	

### "Analog I/O" submenu

There is a **Analog I/O** submenu for each Analog I/O module of the device. This submenu refers to terminals 1 to 3 of this module (an analog input or output). For terminals 4 to 8 (always an analog input) refer to → 🗎 133.

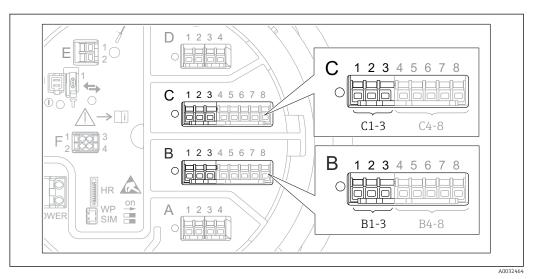

☑ 49 Terminals for the "Analog I/O" submenu ("B1-3" or "C1-3", respectively)

*Navigation*  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Input/output  $\rightarrow$  Analog I/O

Operating mode				
Navigation	Image: Barbon Setup → Advanced setup -	→ Input/output → Analog I/O → Operating mode		
Description	Defines the operating mode of th	Defines the operating mode of the analog I/O module.		
Selection	<ul> <li>Disabled</li> <li>420mA input</li> <li>HART master+420mA input</li> <li>HART master</li> <li>420mA output</li> <li>HART slave +420mA output</li> </ul>			
Factory setting	Disabled			
Additional information	Read access	Operator		
	Write access	Maintenance		

## Meaning of the options

Operating mode (→ 🗎 139)	Direction of signal	Type of signal	
Disabled	-	-	
420mA input	Input from 1 external device	Analog (420mA)	
HART master+420mA input	Input from 1 external device	<ul><li>Analog (420mA)</li><li>HART</li></ul>	
HART master	Input from up to 6 external devices	HART	

Operating mode (→ 🗎 139)	Direction of signal	Type of signal	
420mA output	Output to higher-level unit	Analog (420mA)	
HART slave +420mA output	Output to higher-level unit	<ul><li>Analog (420mA)</li><li>HART</li></ul>	

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode	Terminals of the I/O module		
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+

In the active mode the following conditions must be met:

- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

Current span			6
Navigation		p → Input/output → Analog I/O → Current span	
Prerequisite	Operating mode parameter (-	→	
Description	Defines the current range for t	he measured value transmission.	
Selection	<ul> <li>420 mA NE (3.820.5 mA</li> <li>420 mA US (3.920.8 mA</li> <li>420 mA (4 20.5 mA)</li> <li>Fixed value *</li> </ul>	•	
Factory setting	420 mA NE (3.820.5 mA)		
Additional information	Read access	Operator	
	Write access	Maintenance	

## Meaning of the options

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA (4 20.5 mA)	4 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
420 mA NE (3.820.5 mA)	3.8 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA

Visibility depends on order options or device settings

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
420 mA US (3.920.8 mA)	3.9 to 20.8 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.0 mA
Fixed current	Constant current, defined in the <b>Fixed current</b> parameter ( $\rightarrow \square 141$ ).				

In the case of an error, the output current assumes the value defined in the Failure mode parameter ( $\Rightarrow \triangleq 142$ ).

Fixed current			
Navigation	$\blacksquare$ □ Setup → Advanced setup -	→ Input/output → Analog I/O → Fixed current	
Prerequisite	Current span (→ 🗎 140) = Fixe	ed current	
Description	Defines the fixed output current.		
User entry	4 to 22.5 mA		
Factory setting	4 mA		
Additional information	Read access	Operator	
	Write access	Maintenance	

Analog input source		Ê
Navigation	Image: Setup → Advanced setup → Input/output → Analog I/O → Analog source	
Prerequisite	<ul> <li>Operating mode (→          <sup>(⇒)</sup> 139) = 420mA output or HART slave +420mA output</li> <li>Current span (→          <sup>(⇒)</sup> 140) ≠ Fixed current</li> </ul>	
Description	Defines the process variable transmitted via the AIO.	
Selection	<ul> <li>None</li> <li>Tank level</li> <li>Tank level %</li> <li>Tank ullage</li> <li>Tank ullage %</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> </ul>	

Vapor temperature

•	Air temperature	
---	-----------------	--

- Observed density value
- Average profile density<sup>6)</sup>
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value <sup>6)</sup>
- AIO B1-3 value mA<sup>6)</sup>
- AIO C1-3 value<sup>6)</sup>
- AIO C1-3 value mA<sup>6)</sup>
- AIP B4-8 value<sup>6)</sup>
- AIP C4-8 value<sup>6)</sup>
- Element temperature 1 ... 24<sup>6)</sup>
- HART device 1...15 PV<sup>6</sup>
- HART device 1 ... 15 PV mA<sup>6)</sup>
- HART device 1 ... 15 PV %<sup>6)</sup>
- HART device 1 ... 15 SV<sup>6)</sup>
- HART device 1 ... 15 TV<sup>6)</sup>
- HART device 1 ... 15 QV<sup>6</sup>

**Factory setting** 

Tank level

## 1

Additional information	Read access	Operator
	Write access	Maintenance

Failure mode			
Navigation	Image: Boundary	→ Input/output → Analog I/O → Failure mode	
Prerequisite	Operating mode (→ 🗎 139) = 4	a20mA output or HART slave +420mA output	
Description	Defines the output behavior in ca	se of an error.	
Selection	<ul> <li>Min.</li> <li>Max.</li> <li>Last valid value</li> <li>Actual value</li> <li>Defined value</li> </ul>		
Factory setting	Max.		
Additional information	Read access	Operator	

Maintenance

Visibility depends on order options or device settings 6)

Error value			Ê
Navigation	Image: Setup → Advanced	l setup $\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Error value	
Prerequisite	Failure mode (Ə 🗎 142	2) = Defined value	
Description	Defines the output value	in case of an error.	
User entry	3.4 to 22.6 mA		
Factory setting	22 mA		
Additional information	Read access	Operator	
	Write access	Maintenance	

Input value			
Navigation		→ Input/output → Analog I/O → Input value	
Prerequisite	<ul> <li>Operating mode (→</li></ul>		
Description	Shows the input value of the ana	log I/O module.	
Additional information	Read access	Operator	
	Write access	-	

0 % value			ß
Navigation	Image: Barbon Setup → Advanced setup	→ Input/output → Analog I/O → 0 % value	
Prerequisite	<ul> <li>Operating mode (→  <sup>△</sup> 139)</li> <li>Current span (→ <sup>△</sup> 140) ≠ 1</li> </ul>	= 420mA output or HART slave +420mA output Fixed current	
Description	Value corresponding to an outp	Value corresponding to an output current of 0% (4mA).	
User entry	Signed floating-point number		
Factory setting	0 Unitless		
Additional information	Read access	Operator	
	Write access	Maintenance	

100 % value			
Navigation	Image: Betup → Advanced setup →	> Input/output $\rightarrow$ Analog I/O $\rightarrow$ 100 % value	
Prerequisite	■ Operating mode (→ 🗎 139) = ■ Current span (→ 🗎 140) ≠ Fi	= 420mA output or HART slave +420mA output xed current	
Description	Value corresponding to an outpu	t current of 100% (20mA).	
User entry	Signed floating-point number		
Factory setting	0 Unitless		
Additional information	Read access	Operator	
	Write access	Maintenance	

Input value %			
Navigation	Setup → Advanced setup → Input/output → Analog I/O → Input value %		
Prerequisite	<ul> <li>Operating mode (→</li></ul>		
Description	Shows the output value as a percentage of the complete 420mA range.		
Additional information	Read access	Operator	
	Write access	-	

Output value		
Navigation	Setup → Advanced setup → Input/output → Analog I/O → Output value	
Prerequisite	Operating mode (→ 🗎 139) = 420mA output or HART slave +420mA output	
Description	Shows the output value in mA.	
Additional information	Read access	Operator
	Write access	-

A

ß

## Process variable

Navigation	■ Setup → Advanced setup $\div$	→ Input/output → Analog I/O → Process variable
Prerequisite	Operating mode (→ 🗎 139) = 420mA input or HART master+420mA input	
Description	Defines the type of measuring variable.	
Selection	<ul><li>Level linearized</li><li>Temperature</li><li>Pressure</li><li>Density</li></ul>	
Factory setting	Level linearized	
Additional information	Read access	Operator
	Write access	Maintenance

Analog input 0% value	
-----------------------	--

Navigation	Setup → Advanced setup → Input/output → Analog I/O → AI 0% value	
Prerequisite	Operating mode (→ 🖺 139) = 420mA input or HART master+420mA input	
Description	Value corresponding to an input current of 0% (4mA).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Analog input 100% value		
Navigation	Setup → Advanced setup → Input/output → Analog I/O → AI 100% value	
Prerequisite	Operating mode ( $\Rightarrow \cong 139$ ) = 420mA input or HART master+420mA input	
Description	Value corresponding to an input current of 100% (20mA).	
User entry	Signed floating-point number	
Factory setting	0 mm	

Additional information	Read access	Operator
	Write access	Maintenance

Error event type		Â
Navigation	Image: Bearing and the setup Image: Bearing and the setup	$\rightarrow$ Input/output $\rightarrow$ Analog I/O $\rightarrow$ Error event type
Prerequisite	<b>Operating mode (</b> $\rightarrow \equiv$ 139) $\neq$ <b>Disabled</b> or <b>HART master</b>	
Description	Defines the type of event message (alarm/warning) in case of an error or output out of range in the analog I/O module.	
Selection	<ul><li>None</li><li>Warning</li><li>Alarm</li></ul>	
Factory setting	Warning	
Additional information	Read access	Operator
	Write access	Maintenance

Process value		
Navigation		→ Input/output → Analog I/O → Process value
Prerequisite	Operating mode (→ 🗎 139) = 420mA input or HART master+420mA input	
Description	Shows the input value scaled to customer units.	
Additional information	Read access Operator	
	Write access	-

Input value in mA		
Navigation	■ $\square$ Setup → Advanced setup ·	→ Input/output → Analog I/O → Input val. in mA
Prerequisite	Operating mode (→ 🗎 139) = 420mA input or HART master+420mA input	
Description	Shows the input value in mA.	
Additional information	Read access	Operator
	Write access	-

Input value percent		
Navigation	Image: Setup → Advanced setup →	Input/output $\rightarrow$ Analog I/O $\rightarrow$ Input value [%]
Prerequisite	Operating mode (→ 🗎 139) = 420mA input or HART master+420mA input	
Description	Shows the input value as a percentage of the complete 420mA current range.	
Additional information	Read access	Operator
	Write access	-

Damping factor			Ê
Navigation	Image: Setup → Advanced setup	→ Input/output → Analog I/O → Damping factor	
Prerequisite	Operating mode ( $\rightarrow \square$ 139) ≠	Disabled or HART master	
Description	Defines the damping constant (in seconds).		
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

Used for SIL/WHG			Â
Navigation	Image: Barbon Setup → Advanced setup	→ Input/output → Analog I/O → Used for SIL/WHG	
Prerequisite		<ul> <li>Operating mode (→          <sup>1</sup>→ 139) = 420mA output or HART slave +420mA output</li> <li>The device has a SIL approval.</li> </ul>	
Description	Determines whether the discre	Determines whether the discrete I/O module is in SIL/WHG mode.	
Selection	<ul><li>Enabled</li><li>Disabled</li></ul>		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	


Expected SIL/WHG chain		
Navigation	Image: Setup → Advanced setup →	Input/output $\rightarrow$ Analog I/O $\rightarrow$ SIL/WHG chain
-	<ul> <li>Operating mode (→          <sup>(⇒)</sup> 139) = 420mA output or HART slave +420mA output</li> <li>The device has a SIL approval.</li> </ul>	
Additional information	Read access	Operator
	Write access	-

"Digital Xx-x" submenu



• In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. A1-2, for example, denotes terminals 1 and 2 of slot A. The same is valid for slots B, C and D if they contain a Digital IO module.

• In this document, Xx-x designates any of these submenus. The structure of all these submenus is the same.

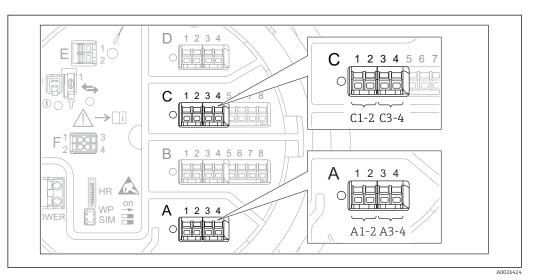


🛃 50 Designation of the digital inputs or outputs (examples)

Navigation	8 2	Setup $\rightarrow$ Advanced s	setup →	Input/	output →	Digital Xx-x

Operating mode		
Navigation	Image: Boundary Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode Image: Boundary Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode	
Description	Defines the operating mode of the discrete I/O module.	
Selection	<ul> <li>Disabled</li> <li>Output passive</li> <li>Input passive</li> <li>Input active</li> </ul>	
Factory setting	Disabled	

## Additional information

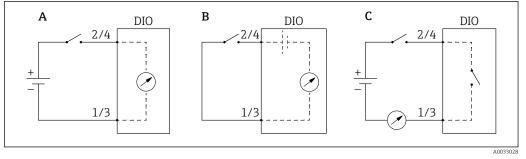

- 🖻 51 Operating modes of the Digital I/O module
- Input passive Α
- В Input active
- Output passive С

## Digital input source

æ

Navigation	$\textcircled{B} \Box  \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Input/output} \rightarrow \text{Digital Xx-x} \rightarrow \text{Digital source}$	
Prerequisite	Operating mode ( $\rightarrow \triangleq 149$ ) = Output passive	
Description	Defines which device state is indicated by the digital output.	
Selection	<ul> <li>None</li> <li>Alarm x any</li> <li>Alarm x High</li> <li>Alarm x High or HighHigh</li> <li>Alarm x Low</li> <li>Alarm x LowLow</li> <li>Alarm x Low or LowLow</li> <li>Digital Xx-x</li> <li>Primary Modbus x</li> <li>Secondary Modbus x</li> </ul>	
Factory setting	None	
Additional information	<ul> <li>Meaning of the options</li> <li>Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow</li> <li>The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the Alarm 1 to 4 submenus.</li> <li>Digital Xx-x<sup>7)</sup></li> <li>The digital signal present at the digital input Xx-x is passed through to the digital output.</li> <li>Modbus A1-4 Discrete x</li> <li>Modbus B1-4 Discrete x</li> <li>Modbus D1-4 Discrete x</li> <li>The digital value written by the Modbus Master device to the Modbus discrete x parameter<sup>8)</sup> is passed to the digital output. For details refer to Special Documentation SD02066G.</li> </ul>	

<sup>7)</sup> 8) Only present if "Operating mode (→ 🗎 149)" = "Input passive" or "Input active" for the respective Digital I/O module.


 $<sup>\</sup>mathsf{Expert} \to \mathsf{Communication} \to \mathsf{Modbus} \: \mathsf{Xx-x} \to \mathsf{Modbus} \: \mathsf{discrete} \: \mathsf{x}$ 

Input value			
Navigation		→ Input/output → Digital Xx-x → Input value	
Prerequisite	Operating mode (> 🗎 149) = "Input passive" option or "Input active" option		
Description	Shows the digital input value.		
Additional information	Read access	Operator	
	Write access	-	

Contact type		
Navigation	Imput/output → Digital Xx-x → Contact type Setup → Advanced setup → Input/output → Digital Xx-x → Contact type	
Prerequisite	Operating mode ( $\rightarrow \cong 149$ ) $\neq$ Disabled	
Description	Determines the switching behavior of the input or output.	
Selection	<ul><li>Normally open</li><li>Normally closed</li></ul>	
Factory setting	Normally open	
Output simulation		æ

Navigation			
Prerequisite	Operating mode ( > 🗎 149) = Output passive		
Description	Sets the output to a specific simulated value.		
Selection	<ul> <li>Disable</li> <li>Simulating active</li> <li>Simulating inactive</li> <li>Fault 1</li> <li>Fault 2</li> </ul>		
Factory setting	Disable		
Additional information	Read access	Operator	
	Write access	Maintenance	

The digital output consists of two relays connected in series:

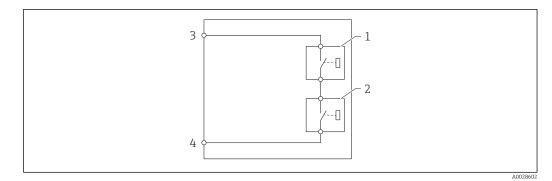



1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open

The **Fault 1** and **Fault 2** options can be used to check the correct switching behavior of the two relays.

Output value				
Navigation		etup $\rightarrow$ Input/output $\rightarrow$ Digital Xx-x $\rightarrow$ Output values		
Prerequisite	Operating mode ( $\Rightarrow$ 🗎 14	Operating mode (→ 🗎 149) = Output passive		
Description	Shows the digital output value.			
Additional information	Read access	Operator		
	Write access	-		

Readback value	
Navigation	□ Setup → Advanced setup → Input/output → Digital Xx-x → Readback value
Prerequisite	Operating mode (→ 🗎 149) = Output passive
Description	Shows the value read back from the output.


Additional information	Read access	Operator
	Write access	-

Used for SIL/WHG			
Navigation		→ Input/output → Digital Xx-x → Used for SIL/WHG	
Prerequisite	<ul> <li>Operating mode (→  □ 149) = Output passive</li> <li>The device has a SIL certificate.</li> </ul>		
Description	Determines whether the discrete	I/O module is in SIL/WHG mode.	
Selection	<ul><li>Enabled</li><li>Disabled</li></ul>		
Factory setting	Disabled		
Additional information	Read access	Operator	
	Write access	Maintenance	

Expected SIL/WHG chain			
Navigation	Setup → Advanced setup -	→ Input/output → Digital C3-4 → SIL/WHG chain	
Prerequisite	Operating mode (→ 🗎 149) = Output passive		
Additional information	Read access     Service		
	Write access	-	

#### "Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "X1-4" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

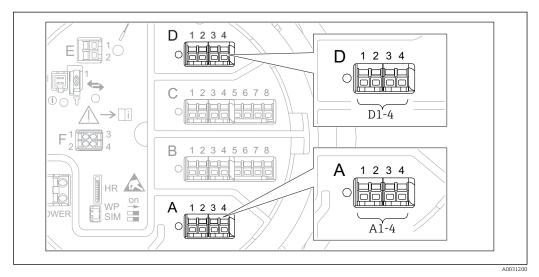

🖻 53 Designation of the "Modbus", "V1" or "WM550" modules (examples); depending on the device version these modules may also be in slot B or C.

Navigation  $\blacksquare$  □ Setup → Advanced setup → Communication

## "Modbus X1-4", "V1 X1-4" and "WM550 X1-4" submenu

This submenu is only present for devices with MODBUS and/or V1 and/or "WM550" option communication interface. There is one submenu of this type for each communication interface.

Navigation	8 2	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ Modbus X1-4
Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ V1 X1-4
Navigation	8 2	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ WM550 X1-4

Communication interface protocol			
Navigation	Image: Setup → Advanced setu X1-4 → Commu I/F pro	up → Communication → Modbus X1-4 / V1 X1-4 / WM550 otoc	
Description	Shows the type of communication protocol.		
Additional information	Read access	Operator	
	Write access	-	

	<i>"Configuration" submenu</i> This submenu is only present for devices with a <b>MODBUS</b> communication interface.		
	Navigation		
Baudrate			
Navigation	<ul> <li>B ■ Setup → Adva</li> <li>→ Baudrate</li> </ul>	anced setuj	$p \rightarrow \text{Communication} \rightarrow \text{Modbus X1-4} \rightarrow \text{Configuration}$
Prerequisite	Communication interface protocol ( $\rightarrow \cong$ 154) = MODBUS		
Description	Defines the baud rate of the communication.		
Selection	<ul> <li>600 BAUD</li> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD *</li> <li>19200 BAUD *</li> </ul>		
Factory setting	9600 BAUD		
Additional information	Read access		Operator
	Write access		Maintenance

Parity			Â
Navigation	<ul> <li>Image: Setup → Advanced set</li> <li>→ Parity</li> </ul>	tup $\rightarrow$ Communication $\rightarrow$ Modbus X1-4 $\rightarrow$ Configuration	
Prerequisite	Communication interface p	protocol (→ 🗎 154) = MODBUS	
Description	Defines the parity of the Modbus communication.		
Selection	<ul> <li>Odd</li> <li>Even</li> <li>None / 1 stop bit</li> <li>None / 2 stop bits</li> </ul>		
Factory setting	None / 1 stop bit		
Additional information	Read access	Operator	
	Write access	Maintenance	

<sup>\*</sup> Visibility depends on order options or device settings

ß

# Modbus address

Navigation	Image: Setup → Advanced setup → Device ID	$\rightarrow$ Communication $\rightarrow$ Modbus X1-4 $\rightarrow$ Configuration
Prerequisite	Communication interface protocol ( $\Rightarrow \triangleq 154$ ) = MODBUS	
Description	Defines the Modbus address of the device.	
User entry	1 to 247	
Factory setting	1	
Additional information	Read access	Operator
	Write access	Maintenance

Float swap mode			æ
Navigation	<ul> <li>Image: Setup → Advanced set</li> <li>→ Float swap mode</li> </ul>	up $\rightarrow$ Communication $\rightarrow$ Modbus X1-4 $\rightarrow$ Configuration	
Prerequisite	Communication interface p	rotocol (→ 🗎 154) = MODBUS	
Description	Sets the format of how the fl	oating point value is transferred on Modbus.	
Selection	<ul> <li>Normal 3-2-1-0</li> <li>Swap 0-1-2-3</li> <li>WW Swap 1-0-3-2</li> </ul>		
Factory setting	Swap 0-1-2-3		
Additional information	Read access	Operator	
	Write access	Maintenance	

Bus termination	8
Navigation	Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Bus termination
Prerequisite	Communication interface protocol ( $\Rightarrow \triangleq 154$ ) = MODBUS
Description	Activates or deactivates the bus termination at the device. Should only be activated on the last device in a loop.
Selection	<ul><li>Off</li><li>On</li></ul>

## Factory setting

## Off

Additional information

Read access	Operator
Write access	Maintenance

## "Configuration" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation

Setup → Advanced setup → Communication → V1 X1-4
→ Configuration

Communication interface	e protocol variant		â	
Navigation	Image: Betup → Advance variant	ed setup $\rightarrow$ Communication $\rightarrow$ V1 X1-4 $\rightarrow$ Configuration $\rightarrow$ Proto	ocol	
Description	Determines which varia	Determines which variant of the V1 protocol is used.		
User interface	<ul> <li>None</li> <li>V1 *</li> </ul>			
Factory setting	None			
Additional information	Read access	Operator		
	Write access	Maintenance		

V1 address			
Navigation	Image: Betup → Advanced setup → Advanced setup → address	→ Communication → V1 X1-4 → Configuration → V1	
Prerequisite	Communication interface proto	col variant (→ 🗎 158) = V1	
Description	Identifier of the device for the V1	communication.	
User entry	0 to 99		
Factory setting	1		
Additional information	Read access Operator		
	Write access	Maintenance	

<sup>\*</sup> Visibility depends on order options or device settings

V1 address			
Navigation	Image: Betup → Advanced setup - address	→ Communication → V1 X1-4 → Configuration → V1	
Prerequisite	Communication interface proto	ocol variant (→ 🗎 158)	
Description	Identifier of the previous device f	or V1 communication.	
User entry	0 to 255		
Factory setting	1		
Additional information	Read access Operator		
	Write access	Maintenance	

Level mapping		ß	
Navigation	Image: Setup → Advanced setup - mapping	→ Communication → V1 X1-4 → Configuration → Level	
Prerequisite	Communication interface proto	ocol (→ 🗎 154) = V1	
Description	Determines the transmittable ra	Determines the transmittable range of levels.	
Selection	■ +ve ■ +ve & -ve		
Factory setting	+ve		
Additional information	Read access Operator		
	Write access	Maintenance	

In V1, the level is always represented by a number in the range from 0 to 999999. This number corresponds to a level as follows:

"Level mapping" = "+ve"

Number	Corresponding level
0	0.0 mm
9999999	99 999.9 mm

"Level mapping" = "+ve & -ve"

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm

Number	Corresponding level
500001	-0.1 mm
999999	-49999.9 mm

Line impedance			
Navigation	Image: Setup → Advanced setup impedance	→ Communication → V1 X1-4 → Configuration → Line	
Prerequisite	Communication interface prot	cocol (→ 🗎 154) = V1	
Description	Adjusts the impedance of the co	ommunication line.	
User entry	0 to 15		
Factory setting	15		
Additional information	Read access	Operator	
	Write access	Maintenance	

The line impedance affects the voltage difference between a logical 0 and a logical 1 on the message of the device to the bus. The default setting is suitable for most applications.

"V1 input selector" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ V1 X1-4 $\rightarrow$ V1
		input select.

Alarm 1 input source		ß
Navigation	Image: Setup → Advanced setup - input src	→ Communication → V1 X1-4 → V1 input select. → Alarm1
Description	Determines which discrete value	will be transmitted as V1 alarm 1 status.
Selection	<ul> <li>Determines which discrete value will be transmitted as V1 alarm 1 status.</li> <li>None</li> <li>Alarm 1-4 any</li> <li>Alarm 1-4 HighHigh</li> <li>Alarm 1-4 High or HighHigh</li> <li>Alarm 1-4 High</li> <li>Alarm 1-4 Low</li> <li>Alarm 1-4 Low or LowLow</li> <li>Alarm 1-4 LowLow</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Alarm 2 input source		හි
Navigation	Image: Setup → Advanced setup - input src	→ Communication → V1 X1-4 → V1 input select. → Alarm2
Description	Determines which discrete value	will be transmitted as V1 alarm 2 status.
Selection	<ul> <li>None</li> <li>Alarm 1-4 any</li> <li>Alarm 1-4 HighHigh</li> <li>Alarm 1-4 High or HighHigh</li> <li>Alarm 1-4 High</li> <li>Alarm 1-4 Low</li> <li>Alarm 1-4 Low or LowLow</li> <li>Alarm 1-4 LowLow</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

Value percent selector		Ŕ
Navigation	<ul><li>Image: Setup → Advance</li><li>% select</li></ul>	ed setup $\rightarrow$ Communication $\rightarrow$ V1 X1-4 $\rightarrow$ V1 input select. $\rightarrow$ Value
Description	Selects which value sha	all be transmitted as a 0100% value in the V1 Z0/Z1 message.
Selection	<ul> <li>None</li> <li>Tank level %</li> <li>Tank ullage %</li> <li>AIO B1-3 value % *</li> <li>AIO C1-3 value % *</li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance
	"Configuration" submen This submenu is only p interface. Navigation	resent for devices with a <b>"WM550" option</b> communication
Developeda	This submenu is only p interface.	resent for devices with a <b>"WM550" option</b> communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration
Baudrate	This submenu is only p interface.	resent for devices with a <b>"WM550" option</b> communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration
	This submenu is only p interface. <i>Navigation</i>	resent for devices with a <b>"WM550" option</b> communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration
Navigation	This submenu is only p interface. Navigation	resent for devices with a <b>"WM550" option</b> communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration
Navigation Prerequisite	This submenu is only p interface. Navigation	resent for devices with a <b>"WM550" option</b> communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration
Baudrate Navigation Prerequisite Description Selection	This submenu is only p interface. Navigation	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration face protocol (→ 🗎 154) = "WM550" option
Navigation Prerequisite Description	This submenu is only p interface. Navigation Setup → Advance → Baudrate Communication inter Defines the baud rate of 600 BAUD 1200 BAUD 2400 BAUD	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration face protocol (→ 🗎 154) = "WM550" option
Navigation Prerequisite Description Selection	This submenu is only p interface. Navigation $$	resent for devices with a "WM550" option communication Setup → Advanced setup → Communication → WM550 X1-4 → Configuration ed setup → Communication → WM550 X1-4 → Configuration face protocol (→ 🗎 154) = "WM550" option

<sup>\*</sup> Visibility depends on order options or device settings

WM550 address	
Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → Configuration → WM550 address
Description	Describes the WM550 address of the device.
User entry	0 to 63
Factory setting	1
Software ID	[
Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → Configuration → Software ID
Prerequisite	Communication interface protocol ( $\Rightarrow \square 154$ ) = "WM550" option
Description	Defines content for WM550 Task 32.
	Detailed information on content for WM550 Task 32, Special Documentation SD025670
User entry	0 to 9 999
Factory setting	2 000
	"WM550 input selector" submenu
	This submenu is only present for devices with a <b>"WM550" option</b> communication interface.
	NavigationImage: Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ WM550 X1-4 $\rightarrow$ WM550 inp select
Discrete 1 selector	

Navigation	Setup → Advanced setup → Communication → WM550 X1-4 → WM550 inp select → Discrete 1select
Description	Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.
Selection	<ul> <li>None</li> <li>Balance flag optionVisibility depends on order options or device settings</li> <li>Alarm 14 any</li> <li>Alarm 14 HighHigh</li> </ul>

- Alarm 1...4 High or HighHighAlarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

## Factory setting

## None

# Additional information

Read access	Operator
Write access	Maintenance

"HART output" subm	ienu	
Navigation	8 8	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ HART output
"Configuration" subr	nenu	
Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration

System polling address			
Navigation	<ul> <li>B ⊆ Setup → Advanced setup</li> <li>→ Polling address</li> </ul>		
Description	Device address for HART communication.		
User entry	0 to 63		
Factory setting	15		
Additional information	Read access     Operator		
	Write access	Maintenance	

No. of preambles		8	
Navigation	Setup → Advanced setup of preambles	F	
Description	Defines the number of preambles in the HART telegram.		
User entry	5 to 20		
Factory setting	5		
Additional information	Read access	Operator	
	Write access	Maintenance	

PV source	۵
Navigation	$\textcircled{B} \boxminus Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow PV source$
Description	Decides, if the PV configuration is according to an analog output (HART slave) or customized (in case of HART tunneling only).

Selection	<ul> <li>AIO B1-3<sup>*</sup></li> <li>AIO C1-3<sup>*</sup></li> <li>Custom</li> </ul>	
Factory setting	Custom	
Additional information	Read access	Maintenance
	Write access	Maintenance

Assign PV		Ê
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Assign PV	
Prerequisite	PV source ( $\rightarrow \triangleq 165$ ) = Custom	
Description	Assign a measured variable to the primary dynamic variable (PV).	
	Additional information: The assigned measured variable is also used by the current output.	
Selection	<ul> <li>None</li> <li>Tank level</li> <li>Tank ullage</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> <li>Vapor temperature</li> <li>Air temperature</li> <li>Observed density value</li> <li>Average profile density</li> <li>Upper density</li> <li>Middle density</li> <li>Lower density</li> <li>P1 (bottom)</li> <li>P2 (middle)</li> <li>P3 (top)</li> <li>GP 1 value</li> <li>GP 2 value</li> <li>GP 4 value</li> </ul>	
Factory setting	Tank level	

<sup>\*</sup> Visibility depends on order options or device settings

#### Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

0 % value		ß
Navigation	Image: Setup → Advanced setup → Adva	→ Communication → HART output → Configuration → 0 %
Prerequisite	PV source = Custom	
Description	0% value of the primary variable (PV).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

100 % value		Ŕ
Navigation	Image: Setup → Advanced setup - % value	→ Communication → HART output → Configuration → 100
Prerequisite	PV source = Custom	
Description	100% value of the primary variable (PV).	
User entry	Signed floating-point number	
Factory setting	0 mm	
Additional information	Read access	Operator
	Write access	Maintenance

PV mA selector	
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → PV mA selector
Prerequisite	PV source = Custom

Description	Assigns a current to the primary HART variable (PV).	
	<ul> <li>None</li> <li>AIO B1-3 value mA<sup>*</sup></li> <li>AIO C1-3 value mA<sup>*</sup></li> </ul>	
Factory setting	None	
Additional information	Read access	Operator
	Write access	Maintenance

# Primary variable (PV)

Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Primary var (PV)	
Description	Shows the current measured value of the primary dynamic variable (PV)	
Additional information	Read access Operator	
	Write access	-

Percent of range		
Navigation	Image: Setup → Advanced set → Percent of range	tup $\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration
Description	Shows the value of the primary variable (PV) as a percentage of the defined $0\%$ to $100\%$ range.	
Additional information	Read access Operator	
	Write access	-

Assign SV		
Navigation	$\textcircled{B} \boxminus Setup \rightarrow Advanced setup \rightarrow Communication \rightarrow HART output \rightarrow Configuration \rightarrow Assign SV$	
Description	Assign a measured variable to the second dynamic variable (SV).	
Selection	<ul><li>None</li><li>Tank level</li><li>Tank ullage</li></ul>	

<sup>\*</sup> Visibility depends on order options or device settings

- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

**Factory setting** 

Liquid temperature

Additional information

 Read access
 Operator

 Write access
 Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Secondary variable (SV)			
Navigation		anced setup $\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration (SV)	
Prerequisite	Assign SV ( $\rightarrow \cong 168$ ) $\neq$ None		
Description	Shows the current measured value of the secondary dynamic variable (SV)		
Additional information	Read access     Operator		
	Write access	-	

Assign TV			8
Navigation	<ul> <li>B ⊆ Setup → Advanced setup -</li> <li>→ Assign TV</li> </ul>	$\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration	
Description	Assign a measured variable to th	e tertiary dynamic variable (TV).	
Selection Factory setting	<ul> <li>None</li> <li>Tank level</li> <li>Tank ullage</li> <li>Measured level</li> <li>Distance</li> <li>Displacer position</li> <li>Water level</li> <li>Upper interface level</li> <li>Lower interface level</li> <li>Bottom level</li> <li>Tank reference height</li> <li>Liquid temperature</li> <li>Vapor temperature</li> <li>Air temperature</li> <li>Observed density value</li> <li>Average profile density</li> <li>Upper density</li> <li>Middle density</li> <li>Lower density</li> <li>P1 (bottom)</li> <li>P2 (middle)</li> <li>P3 (top)</li> <li>GP 1 value</li> <li>GP 2 value</li> <li>GP 4 value</li> </ul>		
racioly setting	vvalel level		
Additional information	Read access	Operator	
	Write access	Maintenance	

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Tertiary variable (T	/)
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Tertiary var(TV)
Prerequisite	Assign TV (→ 🖹 170) ≠ None
Description	Shows the current measured value of the tertiary (third) dynamic variable (TV)

Additional information	Read access	Operator	
	Write access -		
Assign QV			æ
Navigation	Image: Setup → Advanced set → Assign QV	etup $\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Configuration	
Description	Assign a measured variable	to the quaternary dynamic variable (QV).	
Selection	Assign a measured variable to the quaternary dynamic variable (QV).  None Tank level Tank level Measured level Distance Displacer position Vater level Upper interface level Lower interface level Bottom level Tank reference height Liquid temperature Vapor temperature Air temperature Air temperature Observed density value Average profile density Upper density Middle density Lower density P1 (bottom) P2 (middle) P3 (top) GP 1 value GP 2 value		
Factory setting	Observed density value		

## Additional information

Read access	Operator
Write access	Maintenance



Quaternary variable (QV)			
Navigation	Setup → Advanced setup → Communication → HART output → Configuration → Quaterna.var(QV)		
Prerequisite	Assign QV ( $\rightarrow \cong 171$ ) $\neq$ None		
Description	Shows the current measured value of the quaternary (fourth) dynamic variable (QV)		
Additional information	Read access	Operator	
	Write access	-	

## "Information" submenu

Navigation

 $\label{eq:setup} \fbox{\ } \mathsf{Setup} \to \mathsf{Advanced \ setup} \to \mathsf{Communication} \to \mathsf{HART} \ \mathsf{output} \\ \to \mathsf{Information}$ 

HART short tag		8	
Navigation	Image: Setup → Advanced setup - short tag	→ Communication → HART output → Information → HART	
Description	Defines the short tag for the measuring point.		
	Maximum length: 8 characters Allowed characters: A-Z, 0-9, certain special characters		
User entry	Character string comprising numbers, letters and special characters (8)		
Factory setting	NRF8x		
Additional information	Read access	Operator	
	Write access	Maintenance	

Device tag		Ŕ
Navigation	Image Setup → Advanced setup - tag	→ Communication → HART output → Information → Device
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.	
User entry	Character string comprising numbers, letters and special characters (32)	
Factory setting	NRF8x	
Additional information	Read access	Operator
	Write access	Maintenance

HART descriptor	۵	
Navigation	Setup → Advanced setup → Communication → HART output → Information → HART descriptor	
Description	Enter description for the measuring point	
User entry	Character string comprising numbers, letters and special characters (16)	

Factory setting	NRF8x		
Additional information	Read access	Operator	
	Write access	Maintenance	
HART message			
Navigation	□ Setup → Advanced setup → Communication → HART output → Information → HART message		
Description	Use this function to define a HART message which is sent via the HART protocol when requested by the master.		
	Maximum length: 32 characters Allowed characters: A-Z, 0-9, certain special characters		
User entry	Character string comprising numbers, letters and special characters (32)		
Factory setting	NRF8x		
Additional information	Read access	Operator	
	Write access	Maintenance	

HART date code		Â	
Navigation	B Setup → Advanced setup - date code	$\rightarrow$ Communication $\rightarrow$ HART output $\rightarrow$ Information $\rightarrow$ HART	
Description	Enter date of the last configuration change. Use this format yyyy-mm-dd		
User entry	Character string comprising numbers, letters and special characters (10)		
Factory setting	2009-07-20		
Additional information	Read access	Operator	
	Write access	Maintenance	

## "Application" submenu

Navigation	8 2	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application
		The second se

"Tank configuration" submenu

Navigation  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank config

#### "Level" submenu

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank config  $\rightarrow$  Level

Level source			Ê	
Navigation		$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Level source		
Description	Defines the source of the level va	Defines the source of the level value.		
Selection	<ul> <li>No input value</li> <li>HART device 1 15 level</li> <li>Level SR*</li> <li>Level*</li> <li>Displacer position*</li> <li>AIO B1-3 value*</li> <li>AIO C1-3 value*</li> <li>AIP B4-8 value*</li> <li>AIP C4-8 value*</li> </ul>			
Factory setting	Dependent on the device version			
Additional information	Read access	Operator		
	Write access	Maintenance		

Operation mode	
Navigation	Setup → Advanced setup → Application → Tank config → Level → Operation mode
Description	Selection of normal or HTG mode for level measurement . In the HTG mode, the level is calculated using a pressure device.
Selection	<ul> <li>Normal</li> <li>HTG<sup>*</sup></li> </ul>
Factory setting	Normal

<sup>\*</sup> Visibility depends on order options or device settings

Additional information	Read access	Operator
	Write access	Maintenance

Tank reference height		<u> </u>	
Navigation	$ \blacksquare \blacksquare  Setup \rightarrow Advanced setup $	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Tank ref height	
Description	Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).		
User entry	0 to 10 000 000 mm		
Factory setting	Dependent on the device version		
Additional information	Read access Operator		
	Write access	Maintenance	

Tank level				
Navigation		Setup $\rightarrow$ Advanced setup $\neg$	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Tank level	
Description		Shows the distance from the zero position (tank bottom or datum plate) to the product surface.		
Additional information	Read	access	Operator	
	Writ	e access	-	

Water level source		ß
Navigation	$\Box$ Setup → Advanced setup → Application → Tank config → Level → Water level sre	2
Description	Defines the source of the bottom water level.	
Selection	<ul> <li>Manual value</li> <li>Bottom level</li> <li>HART device 1 15 level</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	
Factory setting	Manual value	

Additional information	Read access	Operator
	Write access	Maintenance

Manual water level		8		
Navigation	Image: Barbon Setup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Man. water level		
Prerequisite	Water level source (→ 🗎 176)	Water level source (→ 🗎 176) = Manual value		
Description	Defines the manual value of the	Defines the manual value of the bottom water level.		
User entry	-2 000 to 5 000 mm			
Factory setting	0 mm			
Additional information	Read access	Operator		
	Write access	Maintenance		

Water level			
Navigation	Image: Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Level $\rightarrow$ Water level	
Description	Shows the bottom water level.		
Additional information	Read access     Operator		
	Write access	-	

"Temperature" submenu

Read access			Maintenance
Navigation	9 8	-	→ Advanced setup → Application → Tank config perature

Liquid temp source		6		
Navigation	Image: Setup → Advanced setup - source	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Liq temp		
Description	Defines source from which the li	Defines source from which the liquid temperature is obtained.		
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 temperature</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>			
Factory setting	Manual value			
Additional information	Read access	Operator		
	Write access	Maintenance		

Manual liquid temperature	2		
Navigation	In Setup → Advanced setu liquid temp	up → Application → Tank config → Temperature → Man.	
Prerequisite	Liquid temp source (→ 🗎 124) = Manual value		
Description	Defines the manual value of t	he liquid temperature.	
User entry	−50 to 300 °C		
Factory setting	25 ℃		
Additional information	Read access	Operator	

Maintenance

Write access

Liquid temperature			
Navigation	88	Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Liquid temp.	
Description	Shows the average or spot temperature of the measured liquid.		
Additional information	Read a	access	Operator
	Write	access	-

Air temperature source		Â
Navigation	Image: Setup → Advanced s source	setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Air temp.
Description	Defines source from which	the air temperature is obtained.
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 tem</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	iperature
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

Manual air temperature		8	
Navigation	Image: Setup → Advanced setup - temp.	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Manual air	
Prerequisite	Air temperature source ( $\rightarrow \square$	179) = Manual value	
Description	Defines the manual value of the air temperature.		
User entry	−50 to 300 °C		
Factory setting	25 °C		
Additional information	Read access	Operator	
	Write access	Maintenance	

Operating	menu
-----------	------

Air temperature			
Navigation	Image: Setup → Advanced setup → Application → Tank config → Temperature → Air temp		
Description	Shows the air temperat	ıre.	
Additional information	Read access	Operator	
	Write access	-	
Vapor temp source			6
Navigation	Image: Setup → Advance temp src	d setup $\rightarrow$ Application $\rightarrow$ Tank conf	ig → Temperature → Vapor
Description	Defines the source from	which the vapor temperature is ob	tained.
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 v</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	apor temp	
Factory setting	Manual value		
,			
Additional information	Read access	Operator	

Manual vapor temperature			
Navigation			
Prerequisite	Vapor temp source (→ 🗎 180) = Manual value		
Description	Defines the manual value of the vapor temperature.		
User entry	−50 to 300 °C		
Factory setting	25 ℃		
Additional information	Read access	Operator	
	Write access	Maintenance	

Vapor temperature				
Navigation	8	Setup $\rightarrow$ Advanced setup $\rightarrow$ temp.	Application $\rightarrow$ Tank config $\rightarrow$ Temperature $\rightarrow$ Vapor	
Description	Show	Shows the measured vapor temperature.		
Additional information	Read	access	Operator	
	Write	access	-	

#### "Density" submenu

Write access

Navigation $\blacksquare \square$ Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Tank config<br/> $\rightarrow$  Density

Maintenance

Observed density source		Ê
Navigation	Image: Barbon Setup → Advanced setup →	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Density $\rightarrow$ Density source
Description	Determines how the density is ob	otained.
Selection	<ul> <li>HTG<sup>*</sup></li> <li>HTMS<sup>*</sup></li> <li>Average profile density<sup>*</sup></li> <li>Upper density</li> <li>Middle density</li> <li>Lower density</li> </ul>	
Factory setting	Dependent on the device version	
Additional information	Read access	Operator

Observed density			
Navigation	Image: Setup → Advance density	d setup $\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Density $\rightarrow$ Observed	
Description	Shows the measured or calculated density.		
Additional information	Read access	Operator	
	Write access	-	

Air density		
Navigation	$\textcircled{B} \square  \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Application} \rightarrow \text{Tank config} \rightarrow \text{Density} \rightarrow \text{Air density}$	
Description	Defines the density of the air surrounding the tank.	
User entry	0.0 to 500.0 kg/m <sup>3</sup>	
Factory setting	1.2 kg/m <sup>3</sup>	

<sup>\*</sup> Visibility depends on order options or device settings

Additional information			
Auditional information	Read access	Operator	
	Write access	Maintenance	
	L		
Vapor density			
Navigation	$ \blacksquare \blacksquare Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Tank config \rightarrow Density \rightarrow Vapor density $		
Description	Defines the density of the gas phase in the tank.		
User entry	0.0 to 500.0 kg/m <sup>3</sup>		
Factory setting	1.2 kg/m³		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### "Pressure" submenu

Navigation

Setup → Advanced setup → Application → Tank config → Pressure

P1 (bottom) source		Â
Navigation	Image: Bearing and Bearing Advanced setup	→ Application → Tank config → Pressure → P1 (bot) source
Description	Defines the source of the bottom	n pressure (P1).
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 pressure</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	
Factory setting	Manual value	
Additional information	Read access	Operator
	Write access	Maintenance

P1 (bottom)			
Navigation		$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 (bottom)	
Description	Shows the pressure at the tank bottom.		
Additional information	Read access	Operator	
	Write access	-	

P1 (bottom) manual pro	essure	
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P1 (bot) manual	
Prerequisite	P1 (bottom) source (→ 🗎 184) = Manual value	
Description	Defines the manual value of the bottom pressure (P1).	
User entry	-25 to 25 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P1 position		8
Navigation	Image: Below Bound Setup → Advanced Setup →	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 position
Description	Defines the position of the bottom pressure transmitter (P1), measured from zero position (tank bottom or datum plate).	
User entry	-10000 to 100000 mm	
Factory setting	5000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

P1 offset			ß
Navigation	□ $□$ Setup → Advanced setup →	Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1 offset	
Description	Offset for the bottom pressure (P1). The offset is added to the measured pressure prior to any tank calculation.		
User entry	-25 to 25 bar		
Factory setting	0 bar		
Additional information	Read access Operator		
	Write access	Maintenance	

P1 absolute / gauge		Ê
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P1 absolut/ gauge	,
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	<ul><li>Absolute</li><li>Gauge</li></ul>	
Factory setting	Gauge	

A

Additional information	Read access	Operator
	Write access	Maintenance

# P2 (middle) source

Navigation	Image: Setup → Advanced setup → Source	Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P2 (mid)
Description	Defines the source of the middle	pressure (P2).
Selection	<ul> <li>Manual value</li> <li>HART device 1 15 pressure</li> <li>AIO B1-3 value</li> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>	
Factory setting	Manual value	
Additional information	Read access	Operator

Write access

P2 (middle)		
Navigation		$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P2 (middle)
Description	Shows the pressure (P2) at the middle transmitter.	
Additional information	Read access	Operator
	Write access	-

Maintenance

P2 (middle) manual pressure		
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P2 (mid) manual	
Prerequisite	P2 (middle) source ( $\rightarrow \square$ 186) = Manual value	
Description	Defines the manual value of the middle pressure (P2).	
User entry	-25 to 25 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P2 offset			ß
Navigation		$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P2 offset	
Description	Defines the offset for the middle pressure (P2). The offset is added to the measured pressure prior to any tank calculation.		
User entry	–25 to 2.5 bar		
Factory setting	0 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

P1-2 distance	<u>.</u>

Navigation	Setup → Advanced setup →	Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P1-2 distance
Description	Defines the distance between the bottom and the middle pressure transmitter.	
User entry	0 to 100000 mm	
Factory setting	2 000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

P2 absolute / gauge		
Navigation	Image Setup → Advanced setup → Application → Tank config → Pressure → P2 absolut/ gauge	1
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	<ul><li>Absolute</li><li>Gauge</li></ul>	
Factory setting	Gauge	

Additional

linformation	Read access	Operator
	Write access	Maintenance

#### P3 (top) source Ê Navigation B Setup → Advanced setup → Application → Tank config → Pressure → P3 (top) source Description Defines the source of the top pressure (P3). Selection Manual value • HART device 1 ... 15 pressure AIO B1-3 value AIO C1-3 value AIP B4-8 value AIP C4-8 value **Factory setting** Manual value Additional information Read access Operator Write access Maintenance

P3 (top)		
Navigation		Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P3 (top)
Description	Shows the pressure (P3) at the top transmitter.	
Additional information	Read access	Operator
	Write access	-

P3 (top) manual pressure		
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P3 (top) manual	
Prerequisite	P3 (top) source ( $\Rightarrow \triangleq 188$ ) = Manual value	
Description	Defines the manual value of the top pressure (P3).	
User entry	-2.5 to 2.5 bar	
Factory setting	0 bar	

Additional information	Read access	Operator
	Write access	Maintenance

P3 position		ľ
Navigation	■ $\square$ Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P3 position
Description	Defines the position of the top pressure transmitter (P3), measured from zero position (tank bottom or datum plate).	
User entry	0 to 100 000 mm	
Factory setting	20 000 mm	
Additional information	Read access	Operator
	Write access	Maintenance

P3 offset			
Navigation	Image: Bootstand Setup → Advanced setup →	Application $\rightarrow$ Tank config $\rightarrow$ Pressure $\rightarrow$ P3 offset	
Description	Offset for the top pressure (P3). The offset is added to the measur	red pressure prior to any tank calculation.	
User entry	–2.5 to 2.5 bar		
Factory setting	0 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

P3 absolute / gauge		Ê
Navigation	Setup → Advanced setup → Application → Tank config → Pressure → P3 absolut/ gauge	/
Description	Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.	
Selection	<ul><li>Absolute</li><li>Gauge</li></ul>	
Factory setting	Gauge	

Additional information	Read access	Operator	
	Write access	Maintenance	
Ambient pressure			â
Navigation	Image: Setup → Advanced setup → pressure	→ Application → Tank config → Pressure → Ambient	
Description	Defines the manual value of the a	ambient pressure.	
User entry	0 to 2.5 bar		
Factory setting	1 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

"Tank calculation" submenu


Navigation

□ Setup → Advanced setup → Application → Tank calculation

"HyTD" submenu

Overview

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

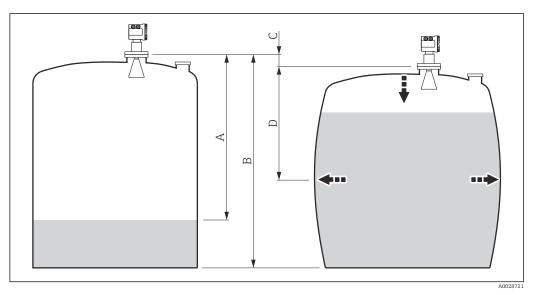


☑ 54 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (level below  $L_0 \rightarrow$  "HyTD correction value" = 0)
- B Gauge Reference Height (GRH)
- *C HyTD* correction value
- $D \qquad "Distance" (level above L_0 \rightarrow "HyTD correction value" > 0)$

This mode should not be used in conjunction with HTG as with HTG the level is not measured relative to the gauge reference height.

# Linear approximation of the HyTD correction

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

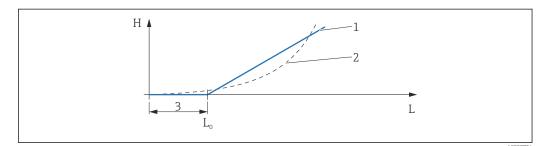

#### ■ 55 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor (  $\rightarrow \square 194$ )"
- 2 Real correction
- 3 Starting level ( $\rightarrow \blacksquare 193$ )
- *L* Measured level ( $\rightarrow \square 114$ )
- H HyTD correction value ( $\rightarrow \square 193$ )

### Calculation of the HyTD correction

$L \leqslant L_0$	=>	$C_{\rm HyTD} = 0$
$\Gamma > \Gamma^0$	=>	$C_{\rm HyTD} = - (L - L_0) \times D$

L	Measured level
L <sub>0</sub>	Starting level
c <sub>HyTD</sub>	HyTD correction value
D	Deformation factor

A0028715

# Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} & \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Application} \rightarrow \mbox{Tank calculation} \\ & \rightarrow \mbox{HyTD} \end{array}$ 

HyTD correction value			
Navigation	0 -	Setup → Advanced setup → value	Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ HyTD corr.
Description	Shows	s the correction value from t	he Hydrostatic Tank Deformation.
Additional information	Read a	access	Operator
	Write	access	-

HyTD mode		ß
Navigation		$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ HyTD mode
Description	Activates or deactivates the calc	ulation of the Hydrostatic Tank Deformation.
Selection	<ul><li>No</li><li>Yes</li></ul>	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Starting level		۵.
Navigation	Image: Below Boundary Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ Starting level
Description	Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value are not corrected.	
User entry	0 to 5 000 mm	
Factory setting	500 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Deformation factor		8	
Navigation	Image: Setup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HyTD $\rightarrow$ Deform factor	
Description	Defines the deformation factor f level).	Defines the deformation factor for the HyTD (change of device position per change of level).	
User entry	-1.0 to 1.0 %		
Factory setting	0.2 %		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### "CTSh" submenu

#### Overview

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.


This correction is recommended for the following situations:

- if the operating temperature deviates considerably from the temperature during calibration ( $\Delta T > 10 \degree C (18 \degree F)$ )
- for extremely high tanks
- for refrigerated, cryogenic or heated applications

As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.

This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

# CTSh: Calculation of the wall temperature

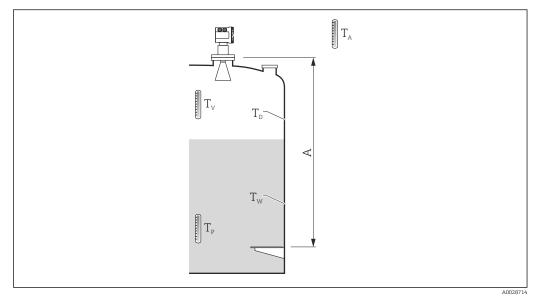

■ 56 Parameters for the CTSh calculation

A Gauge Reference Height (GRH)


T <sub>W</sub>	Temperature of the wetted part of the tank shell
T <sub>D</sub>	Temperature of the dry part of the tank shell
T <sub>P</sub>	Product temperature
T <sub>V</sub>	Vapor temperature (in the tank)
T <sub>A</sub>	Ambient temperature (atmosphere surrounding the tank)

## CTSh: Calculation of the wall temperature

Depending on the parameters **Covered tank** ( $\rightarrow \cong 198$ ) and **Stilling well** ( $\rightarrow \cong 199$ ), the temperatures  $T_W$  of the wetted and  $T_D$  of the dry part of the tank wall are calculated as follows:

Covered tank ( $\rightarrow \square$ 198)	Stilling well (→ 🗎 199)	T <sub>W</sub>	T <sub>D</sub>
Covered	Yes <sup>1)</sup>	T <sub>P</sub>	T <sub>V</sub>
Covereu	No	(7/8) T <sub>P</sub> + (1/8) T <sub>A</sub>	$(1/2) T_V + (1/2) T_A$
Open top	Yes	T <sub>P</sub>	T <sub>A</sub>
Open top	No	(7/8) T <sub>P</sub> + (1/8) T <sub>A</sub>	T <sub>A</sub>

1) This option is also valid for insulated tanks without a stilling welll. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

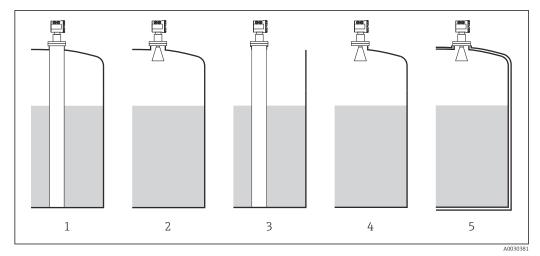

- 1 Covered tank ( $\rightarrow \square 198$ ) = Covered; Stilling well ( $\rightarrow \square 199$ ) = Yes
- 2 Covered tank ( $\rightarrow \square 198$ ) = Covered; Stilling well ( $\rightarrow \square 199$ ) = No
- 3
- 4

Covered tank ( $\rightarrow \boxtimes 196$ ) = Covered, Stilling well ( $\rightarrow \boxtimes 199$ ) = No Covered tank ( $\rightarrow \boxtimes 198$ ) = Open top; Stilling well ( $\rightarrow \boxtimes 199$ ) = Yes Covered tank ( $\rightarrow \boxtimes 198$ ) = Open top; Stilling well ( $\rightarrow \boxtimes 199$ ) = No Insulated tank: Covered tank ( $\rightarrow \boxtimes 198$ ) = Open top; Stilling well ( $\rightarrow \boxtimes 199$ ) = Yes 5

CTSh: Calculation of the correction

$C_{\text{CTSh}} = \alpha (H - L) (T_{\text{D}} - T_{\text{cal}}) + \alpha L (T_{\text{W}} - T_{\text{cal}})$
---

A002871	

Н	Gauge Reference Height
L	Measured level
T <sub>D</sub>	Temperature of the dry part of the tank shell (calculated from $T_{\text{P}}, T_{\text{V}}$ and $T_{\text{A}})$
T <sub>W</sub>	Temperature of the wetted part of the tank shell (calculated from $T_{\text{P}},T_{\text{V}}\text{and}T_{\text{A}})$
T <sub>cal</sub>	Temperature at which the measurement has been calibrated
α	Linear expansion coefficient
C <sub>CTSh</sub>	CTSh correction value

Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} & \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Application} \rightarrow \mbox{Tank calculation} \\ & \rightarrow \mbox{CTSh} \end{array}$ 

CTSh correction value				
Navigation	-	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$		
Description	Shows the CTSh correction value.			
Additional information	Read access	Read access     Operator		
	Write access		-	


CTSh mode		Ê
Navigation	Image: Barbon Setup → Advanced setup	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ CTSh $\rightarrow$ CTSh mode
Description	Activates or deactivates the CTS	h.
Selection	<ul> <li>No</li> <li>Yes</li> <li>With wire *</li> <li>Only wire *</li> </ul>	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Covered tank	ß
Navigation	□ Setup → Advanced setup → Application → Tank calculation → CTSh → Covered tank
Description	Determines whether the tank is covered.
Selection	<ul><li>Open top</li><li>Covered</li></ul>
Factory setting	Open top

<sup>\*</sup> Visibility depends on order options or device settings

#### Additional information

Read access	Operator
Write access	Maintenance

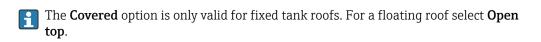

Stilling well		Â
Navigation	Image: Barbon Setup → Advanced setup →	Application $\rightarrow$ Tank calculation $\rightarrow$ CTSh $\rightarrow$ Stilling well
Description	Determines whether the device is	mounted on a stilling well.
Selection	■ No ■ Yes	
Factory setting	No	
Additional information	Read access	Operator
	Write access	Maintenance

Calibration temperature			Ē	1
Navigation	8 2	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$		
Description	Speci	Specify temperature at which the measurement has been calibrated.		
User entry	-50 t	−50 to 250 °C		
Factory setting	25 °C			
Additional information	Read access Operator			
	Write	access	Maintenance	_

Linear expansion coefficie	nt	
Navigation	■ = Setup → Advanced setup → Application → Tank calculation → CTSh → Linear exp coeff	)
Description	Defines the linear expansion coefficient of the tank shell material.	
User entry	0 to 100 ppm	
Factory setting	15 ppm	

Additional information	Read access	Operator
	Write access	Maintenance

Wire expansion coefficient	Ê	
Navigation	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$	
Description	Defines the expansion coefficient of the wire material of the drum. Value is programmed in factory.	
User entry	0 to 100 ppm	
Factory setting	15 ppm	

#### "HTG" submenu

#### Overview


Hydrostatic Tank Gauging (HTG) is a method to calculate the level and the density of the product inside a tank using pressure measurements only. The pressure is measured at different heights of the tank using one, two or three pressure sensors. With these data either the density or the level of the product (or both) can be calculated.

### HTG modes

Four HTG modes can be selected in the **HTG mode** parameter ( $\rightarrow \square 208$ ). They determine which variables are measured and which are calculated. Depending on the selected mode a number of additional parameters are required for the calculation.

HTG mode (→ 🗎 208)	Measured variables	Required additional parameters	Calculated variables
P1 only	P1	<ul> <li>ρ<sub>P</sub></li> <li>g</li> <li>H<sub>P1</sub></li> </ul>	L <sub>HTG</sub>
P1 + P3	• P1 • P3	• $\rho_P$ • $\rho_V$ • $\rho_A$ • $g$ • $H_{P1}$ • $H_{P3}$	L <sub>HTG</sub> (more precise calculation for pressurized tanks)
P1 + P2	<ul><li>P1</li><li>P2</li></ul>	<ul> <li>ρ<sub>A</sub></li> <li>g</li> <li>H<sub>P1</sub></li> <li>H<sub>P1-P2</sub></li> </ul>	<ul> <li>ρ<sub>P</sub></li> <li>L<sub>HTG</sub></li> </ul>
P1 + P2 + P3	<ul><li>P1</li><li>P2</li><li>P3</li></ul>	• $\rho_V$ • $\rho_A$ • $g$ • $H_{P1}$ • $H_{P1-P2}$ • $H_{P3}$	<ul> <li>ρ<sub>P</sub></li> <li>L<sub>HTG</sub> (more precise calculation for pressurized tanks)</li> </ul>

# HTG parameters

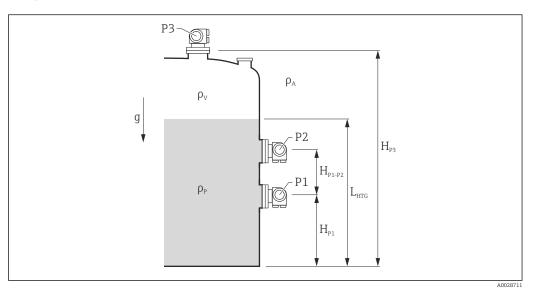

☑ 57 HTG parameters

Parameter	Navigation path
P1 (Bottom pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 (bottom)
H <sub>P1</sub> (Position of P1 transmitter)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 position
P2 (Middle pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P2 (middle)
$H_{\rm P1-P2}$ (Distance between P1 and P2 transmitters)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1-2 distance
P3 (Top pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 (top)
H <sub>P3</sub> (Position of P3 transmitter)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 position
$\rho_P$ (Density of the product $^{1)}$	<ul> <li>Read-only: Setup → Advanced setup → Calculation → HTG → Density value</li> <li>Writable: Setup → Advanced setup → Calculation → HTG → Manual upper density</li> </ul>
$\rho_V$ (Vapor density)	Expert $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Vapor density
$\rho_A$ (Ambient air temperature)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Air density
g (Local gravity)	Expert $\rightarrow$ Application $\rightarrow$ Tank Calculation $\rightarrow$ Local gravity
L <sub>HTG</sub> (Calculated level)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Calculation $\rightarrow$ HTG $\rightarrow$ Tank level

1) Depending on the **HTG mode** parameter ( $\rightarrow \square 208$ ) this is a writable or a read-only parameter.

#### HTG evaluation: dependence on measured level

To calculate the level or density by HTG with the required accuracy, P1 and P2 have to be covered by a certain product level. To avoid a measurement with an insufficient accuracy, the calculation will stop before the level reaches the position of the pressure sensor.

Two parameters are defined for this purpose:

Minimum level


This parameter defines the position below which no level is accepted. If the calculation leads to **Tank level** < **Minimum level**, the value of **Minimum level** will be displayed instead of the calculated value.

Safety distance

This parameter defines the minimum amount of product which must be present above the pressure sensor P1 or P2 for the level or density calculation to take place.

- The device always uses the bigger of these two values as the switch-over point for the level calculation.
  - If HTG mode (→ 
     <sup>(⇒)</sup> 208) is set to P1 only or P1 + P3, the density is not calculated and the Manual upper density parameter is used instead.

*Case 1:*  $H_{P1}$  < *Minimum level* <  $H_{P2}$ 

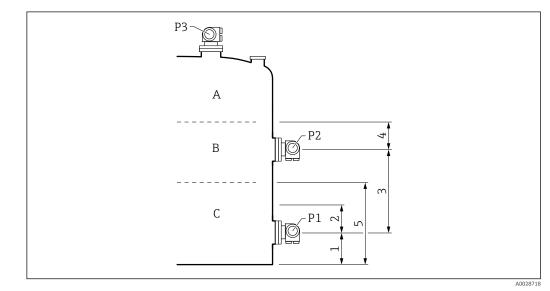

1 P1 position ( $\rightarrow \square$  185)


2 Safety distance ( $\rightarrow \square 210$ )

*3 P1-2 distance* (→ 🗎 *187*)

- 4 Safety distance ( $\rightarrow \square 210$ )
- 5 Minimum level ( $\rightarrow \square 209$ )

Level L is in area	Calculation method for $\rho_P$	Calculation method for L
А	calculated from pressure	calculated from pressure
В	$\rho_P$ held	calculated from pressure
С	$\rho_P$ held	L = Minimum level


# *Case 2: Minimum level < H\_{P1}*

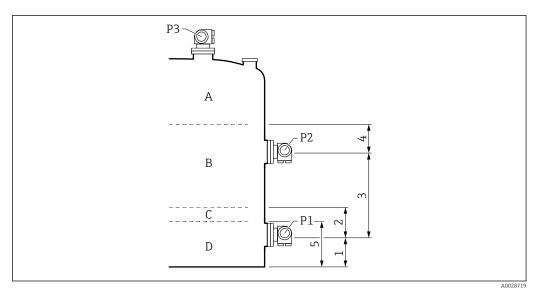

- 1
- P1 position ( $\rightarrow \square$  185) Safety distance ( $\rightarrow \square$  210) P1-2 distance ( $\rightarrow \square$  187) Safety distance ( $\rightarrow \square$  210) Minimum level ( $\rightarrow \square$  209) 2
- 3
- 4
- 5

Level L is in area	Calculation method for $\rho_P$	Calculation method for L
А	calculated from pressure	calculated from pressure
В	$\rho_P$ held	calculated from pressure
C/D	$\rho_P$ held	L = Minimum level

# *Case 3: Minimum level* > $H_{P2}$

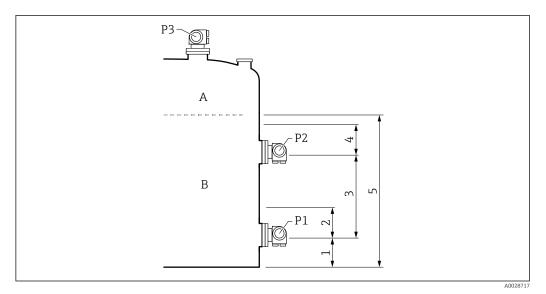

- P1 position (→ 🗎 185) Safety distance (→ 🖺 210) P1-2 distance (→ 🖺 187) Safety distance (→ 🖺 210) Minimum level (→ 🖺 209) 1 2 3 4 5

Level L is in area	Calculation method for $\rho_P$	Calculation method for L
А	calculated from pressure	calculated from pressure
В	$\rho_P$ held	L = Minimum level


### HTG evaluation: dependence on measured pressure

If the level of the product approaches the P1 or P2 pressure sensor, the measured pressure becomes very small and the measurement might be too inaccurate for the Tank Gauging application. To solve this problem, a minimum pressure  $P_{min}$  is defined in the **Minimum pressure** parameter ( $\rightarrow \textcircled{B} 209$ ). If the pressure measured by the sensor P1 or P2, respectively, the software stops calculating the density and either holds the last calculated value (for the density) or returns the HTMinLevel (for HTGLevel).

- If P2 is smaller than P<sub>min</sub>, the software stops calculating the density and uses the last density value.

# Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level**), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

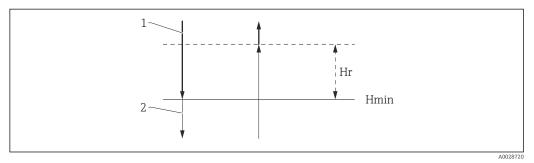

☑ 58 HTG hysteresis

- 1 Value calculated
- 2 Value held/manual
- $H_{min}$  Minimum level
- $H_r$  Hysteresis ( $\rightarrow$  🖺 210)

Description of parameters

Navigation

 $\label{eq:setup} \fboxspace{-1.5mu} \begin{array}{l} & \mbox{Setup} \rightarrow \mbox{Advanced setup} \rightarrow \mbox{Application} \rightarrow \mbox{Tank calculation} \\ & \rightarrow \mbox{HTG} \end{array}$ 

Density value			
Navigation	■ $\square$ Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Density value	
Description	Shows the density calculated by HTG.		
Additional information	Read access     Operator		
	Write access	-	

# Tank level Navigation Setup $\rightarrow$ Advanced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Tank level Description Shows the level calculated by HTG. User interface Signed floating-point number Factory setting 0 mm Additional information Read access Operator Write access

HTG mode			æ
Navigation	■ $\square$ Setup → Advanced setup –	Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ HTG mode	
Description	Defines the HTG mode.		
Selection	<ul> <li>P1 only</li> <li>P1 + P3</li> <li>P1 + P2</li> <li>P1 + P2 + P3</li> </ul>		
Factory setting	P1 only		
Additional information	Read access	Operator	
	Write access	Maintenance	

Manual density			ß
Navigation	Image: Setup → Advanced setup - density	Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Manual	
Description	Defines the manual density.	Defines the manual density.	
User entry	0 to 3 000 kg/m <sup>3</sup>		
Factory setting	800 kg/m <sup>3</sup>		
Additional information	Read access Maintenance		
	Write access	Maintenance	

Minimum level			
Navigation	Image: Boundary	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Min. level	
Description	Defines the minimum level below	which no HTG calculation will take place.	
User entry	0 to 20 000 mm		
Factory setting	7 000 mm		
Additional information	Read access     Operator		
	Write access	Maintenance	

Minimum pressure		8	
Navigation	Image: Barbon Barb	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Min. pressure	
Description	Defines the minimum pressure	Defines the minimum pressure below which no HTG calculation takes place.	
User entry	0 to 100 bar		
Factory setting	0.1 bar		
Additional information	Read access	Operator	
	Write access	Maintenance	

Safety distance		8
Navigation	Image: Below a setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Safety distance
Description	Defines the minimum level which must be present above the bottom and middle pressure sensor before their signal is used for the calculation.	
User entry	0 to 10 000 mm	
Factory setting	2 000 mm	
Additional information	Read access	Operator
	Write access	Maintenance


Hysteresis		6
Navigation		$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTG $\rightarrow$ Hysteresis
Description	Defines the hysteresis for the HTG calculation. Prevents constant switching if the level is near the switch-over point.	
User entry	0 to 2 000 mm	
Factory setting	50 mm	
Additional information	Read access	Operator
	Write access	Maintenance

## "HTMS" submenu

#### Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

#### HTMS parameters

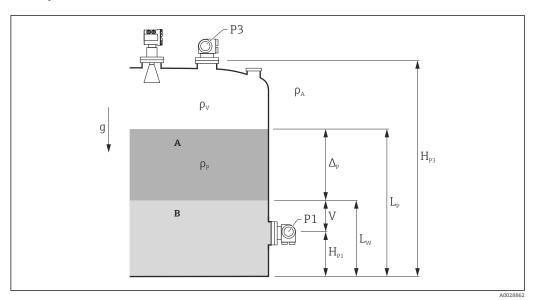

☑ 59 HTMS parameters

A Product

B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 (bottom)
H <sub>P1</sub> (Position of P1 transmitter)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P1 position
P3 (Top pressure)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 (top)
H <sub>P3</sub> (Position of P3 transmitter)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Pressure $\rightarrow$ P3 position
$\rho_P$ (Density of the product $^{1)})$	<ul> <li>Measured value: Setup → Advanced setup → Calculation → HTMS → Density value</li> <li>User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density</li> </ul>
ρ <sub>v</sub> (Vapor density)	Expert $\rightarrow$ Application $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Vapor density
$\rho_A$ (Ambient air temperature)	Setup $\rightarrow$ Advanced setup $\rightarrow$ Tank configuration $\rightarrow$ Density $\rightarrow$ Air density
g (Local gravity)	Expert $\rightarrow$ Application $\rightarrow$ Tank Calculation $\rightarrow$ Local gravity
L <sub>p</sub> (Level of the product)	Operation → Tank level
L <sub>W</sub> (Bottom water level)	Operation $\rightarrow$ Water level
$V = L_W - H_{P1}$	
$\Delta_{\rm P} = L_{\rm P} - L_{\rm W} = L_{\rm P} - \rm V - H_{\rm P1}$	

1) Depending on the situation this parameter is measured or a user-defined value is used.

## HTMS modes

Two HTMS modes can be selected in the **HTMS mode** parameter ( $\rightarrow \boxminus 213$ ). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.



The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ ≌ 213)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	• P <sub>1</sub> • L <sub>p</sub>	• g • H <sub>P1</sub> • L <sub>W</sub> (optional)	ρ <sub>Ρ</sub>
HTMS P1+P3	<ul> <li>P<sub>1</sub></li> <li>P<sub>3</sub></li> <li>L<sub>P</sub></li> </ul>	• $\rho_V$ • $\rho_A$ • $g$ • $H_{P1}$ • $H_{P3}$ • $L_W$ (optional)	ρ <sub>P</sub> (more precise calculation for pressurized tanks)

# Minimum level

The density of the product can only be calculated if the product has a minimum thickness :

```
\Delta_{\rm P} \geq \Delta_{\rm P, min}
```

This is equivalent to the following condition for the product level:

$$L_P - V \ge \Delta_{P,\min} + H_{P1} = L_{\min}$$


 $L_{min}$  is defined in the **Minimum level** parameter ( $\rightarrow \square 214$ ). As can be seen from the formula it always must be bigger than  $H_{P1}$ .

If  $L_P$  - V falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter) will be used.

## Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level**  $(\rightarrow \boxdot 214)$ ), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

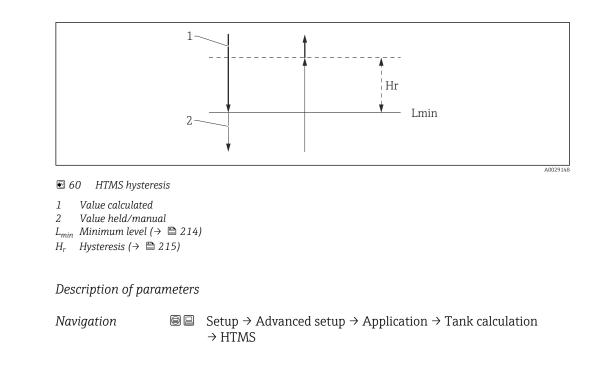

HTMS mode		
Navigation	Image: Bear of the second	nced setup $\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ HTMS mode
Description	Defines the HTMS mode. Depending on the mode one or two pressure transmitters are used.	
Selection	<ul><li>HTMS P1</li><li>HTMS P1+P3</li></ul>	
Factory setting	HTMS P1	
Additional information	Read access Operator	
	Write access	Maintenance
	<ul> <li>Meaning of the options</li> <li>HTMS P1 Only a bottom pressure transmitter (P1) is used.</li> <li>HTMS P1+P3 A bottom (P1) and top (P3) pressure transmitter are used. This option should be for pressurized tanks.</li> </ul>	

Manual density		Ê
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Manual density	
Description	Defines the manual density.	

 $\label{eq:Userentry} \textbf{User entry} \qquad 0 \text{ to } 3\,000 \text{ kg/m}^3$ 

800 kg/m<sup>3</sup>

Factory setting

Additional information	Read access	Maintenance
	Write access	Maintenance

Density value		
Navigation		$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Density value
Description	Shows the calculated product density.	
Additional information	Read access Operator	
	Write access	-

Minimum level		8	
Navigation		$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Min. level	
Description	Defines the minimum product le	Defines the minimum product level for a HTMS calculation.	
	If Lp - V falls below the limit def the manual value is used instead	ined in this parameter, the density retains its last value or l.	
User entry	0 to 20 000 mm		
Factory setting	7 000 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Minimum pressure		
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Min. pressure	
Description	Defines the minimum pressure for a HTMS calculation.	
	If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.	
User entry	0 to 100 bar	
Factory setting	0.1 bar	

Additional information	Read access	Operator
	Write access	Maintenance

Safety distance			Ê
Navigation	Image: Setup → Advanced setup distance	$\rightarrow$ Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Safety	
Description	Defines the minimum level which must be present above the bottom pressure sensor before its signal is used for the calculation.		
User entry	0 to 10 000 mm		
Factory setting	2 000 mm		
Additional information	Read access	Operator	
	Write access	Maintenance	

Hysteresis		8
Navigation	Image: Border Setup → Advanced setup →	Application $\rightarrow$ Tank calculation $\rightarrow$ HTMS $\rightarrow$ Hysteresis
Description	Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is near the switch-over point.	
User entry	0 to 2 000 mm	
Factory setting	50 mm	
Additional information	Read access	Operator
	Write access	Maintenance

Water density		
Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Water density	
Description	Density of the water in the tank.	
User entry	Signed floating-point number	
Factory setting	1000 kg/m³	

# Additional information

Read access	Operator
Write access	Maintenance

"Alarm" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Application  $\rightarrow$  Alarm

#### "Alarm" submenu

Navigation

 $\label{eq:setup} \fbox{ Setup} \rightarrow \texttt{Advanced setup} \rightarrow \texttt{Application} \rightarrow \texttt{Alarm} \rightarrow \texttt{Alarm}$ 

► Alarm				
Alarm mode	→ 🗎 217			
Error value	→ 🗎 218			
Alarm value source	→ 🗎 219			
Alarm value	→ 🗎 220			
HH alarm value	→ 🗎 220			
H alarm value	→ 🗎 220			
L alarm value	→ 🗎 221			
LL alarm value	→ 🗎 221			
HH alarm	→ 🗎 221			
H alarm	→ 🗎 222			
HH+H alarm	→ 🗎 222			
L alarm	→ 🗎 222			
LL alarm	→ 🗎 222			
LL+L alarm	→ 🗎 223			
Any error	→ 🗎 223			
Clear alarm	→ 🗎 223			

Alarm hysteresis	→ 🗎 224
Damping factor	→ 🗎 224

Alarm mode			
Navigation	■ $\square$ Setup $\rightarrow$ Advanced s	etup $\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm mode	
Description	Defines the alarm mode of	the selected alarm.	
Selection	<ul><li> Off</li><li> On</li><li> Latching</li></ul>		
Factory setting	Off		
Additional information	Read access Operator		
	Write access	Maintenance	

Meaning of the options

• Off


No alarms are generated.

• On

An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).

Latching

All alarms remain active until the user selects **Clear alarm** ( $\rightarrow \implies 223$ ) = **Yes** or the power is switched off and on.

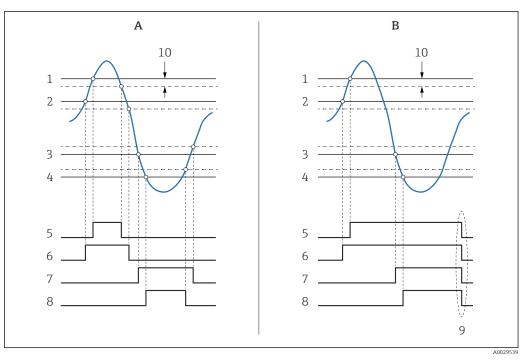

🖻 *61* Principle of the limit evaluation

- Alarm mode ( $\rightarrow \square 217$ ) = On Α
- Alarm mode ( $\rightarrow \cong 217$ ) = Latching HH alarm value ( $\rightarrow \cong 220$ ) В
- 1
- 2 H alarm value ( $\rightarrow \square 220$ )
- 3 L alarm value ( $\rightarrow \square 221$ )
- LL alarm value ( $\rightarrow \square 221$ ) 4
- HH alarm (→ 🖺 221) 5
- H alarm ( $\rightarrow \square 222$ ) L alarm ( $\rightarrow \square 222$ ) 6 7
- 8 LL alarm ( $\rightarrow \square 222$ )
- "Clear alarm ( $\rightarrow \square 223$ )" = "Yes" or power off-on 9
- 10 Hysteresis ( $\rightarrow \square 224$ )

Error	val	lue
	• •	-uc

Navigation	Setup → Advanced setup → Application → Alarm → Alarm → Error value	
Prerequisite	Alarm mode ( $\rightarrow \square 217$ ) $\neq Off$	
Description	Defines the alarm to be issued if	he input value is invalid.
Selection	<ul> <li>No alarm</li> <li>HH+H alarm</li> <li>H alarm</li> <li>L alarm</li> <li>LL+L alarm</li> <li>All alarms</li> </ul>	
Factory setting	All alarms	
Additional information	Read access	Operator
	Write access	Maintenance

ß

Alarm value source			Ê
Navigation	■ $\square$ Setup → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm source	
Prerequisite	Alarm mode (→ 🗎 217) ≠ Off		
Description	Determines the process variable	to be monitored.	
	-		
Selection	<ul> <li>Tank level</li> </ul>		
	<ul> <li>Liquid temperature</li> <li>Vapor temperature</li> </ul>		
	<ul><li>Vapor temperature</li><li>Water level</li></ul>		
	<ul><li>P1 (bottom)</li></ul>		
	<ul> <li>P2 (middle)</li> </ul>		
	<ul> <li>P3 (top)</li> </ul>		
	<ul> <li>Observed density value</li> </ul>		
	<ul> <li>Volume</li> </ul>		
	<ul><li>Flow velocity</li></ul>		
	<ul><li>Volume flow</li></ul>		
	<ul> <li>Vapor density</li> </ul>		
	<ul> <li>Middle density</li> </ul>		
	<ul> <li>Upper density</li> </ul>		
	<ul> <li>Correction</li> </ul>		
	Tank level %		
	<ul> <li>GP 14 value</li> </ul>		
	<ul> <li>Measured level</li> </ul>		
	<ul> <li>P3 position</li> </ul>		
	<ul> <li>Tank reference height</li> </ul>		
	<ul> <li>Local gravity</li> </ul>		
	<ul> <li>P1 position</li> </ul>		
	<ul> <li>Manual density</li> </ul>		
	<ul> <li>Tank ullage</li> </ul>		
	<ul> <li>Average profile density</li> </ul>		
	<ul> <li>Lower density</li> </ul>		
	<ul> <li>Upper interface level</li> </ul>		
	<ul> <li>Lower interface level</li> </ul>		
	<ul> <li>Bottom level</li> </ul>		
	<ul> <li>Displacer position</li> </ul>		
	HART device 115 PV		
	HART device 115 SV		
	HART device 115 TV		
	HART device 115 QV		
	• HART device 115 PV mA		
	HART device 115 PV %     Flow and towns 126		
	<ul> <li>Element temperature 124</li> <li>AIO P1-2 value</li> </ul>		
	<ul><li>AIO B1-3 value</li><li>AIO C1-3 value</li></ul>		
	<ul> <li>AIO C1-3 value</li> <li>AIP B4-8 value</li> </ul>		
	<ul> <li>AIP B4-8 value</li> <li>AIP C4-8 value</li> </ul>		
	<ul><li>AiP C4-6 value</li><li>None</li></ul>		
Factory setting	None		
Additional information	Read access	Operator	

#### Additional information

Read access	Operator
Write access	Maintenance

# Alarm value Navigation Image: Setup → Advanced setup → Application → Alarm → Alarm → Alarm value Prerequisite Alarm mode (→ Image: 217) ≠ Off Description Shows the current value of the process variable being monitored. User interface Signed floating-point number Factory setting 0 None Mead access Operator Write access Image: Content of Co

HH alarm value			
Navigation	Image: Barbon Setup → Advanced setup ÷	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ HH alarm value	
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off		
Description	Defines the high-high(HH) limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	

H alarm value			
Navigation		$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ H alarm value	
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off		
Description	Defines the high(H) limit value.		
User entry	Signed floating-point number		
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	

L alarm value			Ê
Navigation	Image: Betup → Advance	d setup $\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ L alarm value	
Prerequisite	Alarm mode (→ 🗎 212	7) ≠ Off	
Description	Defines the low limit va	ue.	
User entry	Signed floating-point nu	umber	
Factory setting	0 None		
Additional information	Read access	Operator	
	Write access	Maintenance	
LL alarm value			Â
Navigation	©⊟ Setup → Advance	d setup → Application → Alarm → Alarm → LL alarm value	

Prerequisite	Alarm mode ( $\rightarrow$	🗎 217) ≠ Off
Trerequisite	marin moue ( )	

Description	Defines the low-low(LL) limit value.
-------------	--------------------------------------

User entry Signed floating-point number

Factory setting 0 None

Additional information	Read access	Operator
	Write access	Maintenance

HH alarm			
Navigation	■ $\square$ Setup $\rightarrow$ Advanced setup $\exists$	Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ HH alarm	
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off		
Description	Shows whether an HH alarm is currently active.		
Additional information	Read access	Operator	
	Write access	-	

H alarm			
Navigation	Image: Boundary Advanced setup → Application → Alarm → Alarm → H alarm		
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off		
Description	Shows whether an H alarm	Shows whether an H alarm is currently active.	
Additional information	Read access	Operator	
	Write access	-	
HH+H alarm			
Navigation	■	etup $\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ HH+H alarm	
Prerequisite	Alarm mode ( $\Rightarrow \cong 217$ ) $\neq$ Off		
Description	Shows whether an HH or H alarm is currently active.		
Additional information	Read access Operator		
	Write access	-	

L alarm			
Navigation		$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ L alarm	
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off		
Description	Shows whether an L alarm is currently active.		
Additional information	Read access Operator		
	Write access	-	

LL alarm	
Navigation	$\textcircled{B} \boxminus Setup \rightarrow Advanced setup \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow LL alarm$
Prerequisite	Alarm mode ( $\Rightarrow \triangleq 217$ ) $\neq Off$
Description	Shows whether an LL alarm is currently active.

Additional information	Read access	Operator
	Write access	-

LL+L alarm		
Navigation	■ $ = $ Setup $ \rightarrow  $ Advanced setup $ = $	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ LL+L alarm
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq $ Off	
Description	Shows whether an LL or L alarm is currently active.	
Additional information	Read access Operator	
	Write access	-

Any error		
Navigation	Image: Barrier Advanced setup → Application → Alarm → Alarm → Any error	
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off	
Description	Show whether any alarm is currently active.	
User interface	<ul> <li>Unknown</li> <li>Inactive</li> <li>Active</li> <li>Error</li> </ul>	
Factory setting	Unknown	
Additional information	Read access	Operator
	Write access	-

Clear alarm	8
Navigation	Image: Below and the setup → Application → Alarm → Alarm → Clear alarm
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) = Latching
Description	Deletes an alarm which is still active although the alarm condition is no longer present.
Selection	<ul><li>No</li><li>Yes</li></ul>
Factory setting	No

Additional information	Read access	Operator
	Write access	Maintenance

Alarm hysteresis		Î	
Navigation	Image: Bearing → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Alarm hysteresis	
Prerequisite	Alarm mode ( $\rightarrow \cong 217$ ) $\neq$ Off	Alarm mode ( $\rightarrow \cong 217$ ) = Off	
Description	Defines the hysteresis for the limit values. The hystersis prevents constant changes of the alarm state if the level is near one of the limit values.		
User entry	Signed floating-point number		
Factory setting	0.001		
Additional information	Read access	Maintenance	
	Write access	Maintenance	

Damping factor			A
Navigation	Image: Bearing → Advanced setup -	$\rightarrow$ Application $\rightarrow$ Alarm $\rightarrow$ Alarm $\rightarrow$ Damping factor	
Description	Defines the damping constant (in	Defines the damping constant (in seconds).	
User entry	0 to 999.9 s		
Factory setting	0 s		
Additional information	Read access	Operator	
	Write access	Maintenance	

#### "Display" submenu


This menu is only visible if the device has a local display.


*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display


Language			
Navigation	Image: Below a setup → Advanced setup →	→ Display → Language	
Prerequisite	The device has a local display.	The device has a local display.	
Description	Set display language.		
Selection	• English • Deutsch • русский язык (Russian) • 日本語 (Japanese)		
Factory setting	English		
Additional information	Read access	Operator	
	Write access	Operator	

Format display	
Navigation	Image: Boundary Advanced setup → Display → Format display
Prerequisite	The device has a local display.
Description	Select how measured values are shown on the display.
Selection	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>
Factory setting	1 value, max. size
Additional information	4841.000 □1√ mm


🖻 62 "Format display" = "1 value, max. size"

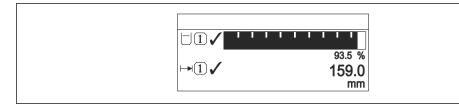


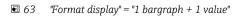

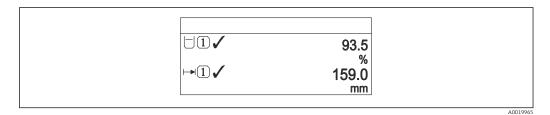

■ 64 "Format display" = "2 values"

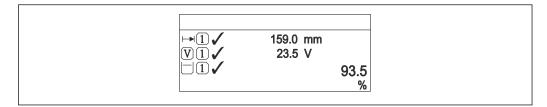

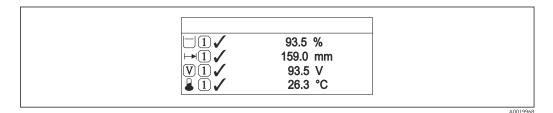

66 "Format display" = "4 values"

Read access	Operator
Write access	Operator

- The Value 1 to 4 display (→ 
   <sup>(⇒)</sup> 226) parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter ( $\rightarrow \cong 229$ ).

Value 1 to 4 display		Ê
Navigation	Setup → Advanced setup → Display → Value 1 display	

Prerequisite

The device has a local display.

Description

Select the measured value that is shown on the local display.

Selection

- None<sup>9)</sup>
- Tank level
- Measured level
- Level linearized
- Tank level %
- Water level <sup>9)</sup>
- Liquid temperature <sup>9)</sup>
- Vapor temperature <sup>9)</sup>
- Air temperature <sup>9)</sup>
- Tank ullage
- Tank ullage %
- Observed density value <sup>9)</sup>
- P1 (bottom) <sup>9)</sup>
  P2 (middle) <sup>9)</sup>
- P3 (top) <sup>9)</sup>
- GP 1 value <sup>9)</sup>
- GP 2 value <sup>9)</sup>
- GP 3 value <sup>9)</sup>
- GP 4 value <sup>9)</sup>
- Gauge command <sup>9)</sup>
- Gauge status <sup>9)</sup>
- AIO B1-3 value<sup>9)</sup>
- AIO B1-3 value mA<sup>9)</sup>
- AIO B1-3 value % <sup>9)</sup>
- AIO C1-3 value <sup>9)</sup>
- AIO C1-3 value mA<sup>9)</sup>
- AIO C1-3 value % <sup>9)</sup>
- AIP B4-8 value <sup>9)</sup>
- AIP B4-8 value mA<sup>9)</sup>
- AIP B4-8 value % <sup>9)</sup>
- AIP C4-8 value <sup>9)</sup>
- AIP C4-8 value mA<sup>9)</sup>
- AIP C4-8 value % <sup>9)</sup>

**Factory setting** 

Depending on device version

Additional information	Read access	Operator
	Write access	Maintenance

Decimal places 1 to 4		
Navigation	■ ■ Setup → Advanced setup → Display → Decimal places 1	
Prerequisite	The device has a local display.	
Description	This selection does not affect the measurement and calculation accuracy of the device.	

not available for the Value 1 display parameter 9)

Selection		

X
X.X
X.XX
X.XXX
X.XXX

X.X

#### Factory setting

Additional information

The setting does not affect the measuring or computational accuracy of the device.

Read access	Operator
Write access	Maintenance

Separator		Ê
Navigation	Image: Below a setup → Advanced setup -	$\rightarrow$ Display $\rightarrow$ Separator
Prerequisite	The device has a local display.	
Description	Select decimal separator for disp	laying numerical values.
Selection	•.	
	■ ,	
Factory setting	•	
Additional information	Read access	Operator
	Write access	Maintenance

Number format			
Navigation	Image: Barbon Setup → Advanced setup	$\rightarrow$ Display $\rightarrow$ Number format	
Prerequisite	The device has a local display.		
Description	Choose number format for the c	lisplay.	
Selection	<ul><li>Decimal</li><li>ft-in-1/16"</li></ul>		
Factory setting	Decimal		
Additional information	Read access	Operator	
	Write access	Maintenance	

The **ft-in-1/16**" option is only valid for distance values.

Header			Ê
Navigation	Image: Bearing → Advanced	etup $\rightarrow$ Display $\rightarrow$ Header	
Prerequisite	The device has a local dis	ay.	
Description	Select header contents or	ocal display.	
Selection	<ul><li>Device tag</li><li>Free text</li></ul>		
Factory setting	Device tag		
Additional information	Read access	Operator	
	Write access	Maintenance	
	<ul> <li>Free text</li> </ul>	efined in the <b>Device tag</b> parameter ( $ o$ $\square$	

Header text			
Navigation		→ Display → Header text	
Prerequisite	Header (Ə 🗎 229) = Free text		
Description	Enter display header text.		
User entry	Character string comprising nur	nbers, letters and special characters (11)	
Factory setting	TG-Platform		
Additional information	Read access	Operator	
	Write access	Maintenance	

Display interval	
Navigation	$ \blacksquare \Box Setup \rightarrow Advanced setup \rightarrow Display \rightarrow Display interval $
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Factory setting	5 s

#### Additional information

This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Read access	Operator
Write access	Operator

Display damping		8		
Navigation	Image: Below a set of the se	$\rightarrow$ Display $\rightarrow$ Display damping		
Prerequisite	The device has a local display.	The device has a local display.		
Description	Set display reaction time to fluctuations in the measured value.			
User entry	0.0 to 999.9 s			
Factory setting	0.0 s			
Additional information	Read access	Operator		
	Write access	Maintenance		

Backlight				
Navigation		$\rightarrow$ Display $\rightarrow$ Backlight		
Prerequisite	The device has a local display.	The device has a local display.		
Description	Switch the local display backlight on and off.			
Selection	<ul><li>Disable</li><li>Enable</li></ul>			
Factory setting	Enable			
Additional information	Read access	Operator		
	Write access	Operator		

Contrast display	
Navigation	$ \blacksquare \Box  \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Display} \rightarrow \text{Contrast display} $
Prerequisite	The device has a local display.
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

User entry	20 to 80 %	
Factory setting	30 %	
Additional information	Read access	Operator
	Write access	Operator

#### "System units" submenu

Navigation

			£
Navigation	Image: Imag		
Description	Defines a set of units for length, pressure and temperature.		
Selection	<ul> <li>mm, bar, °C</li> <li>m, bar, °C</li> <li>mm, PSI, °C</li> <li>ft, PSI, °F</li> <li>ft-in-16, PSI, °F</li> <li>ft-in-8, PSI, °F</li> <li>Customer value</li> </ul>		
Factory setting	mm, bar, °C		
Additional information	Read access	Operator	
	Write access	Maintenance	
	<ul> <li>Pressure unit (→</li> <li>Temperature unit</li> </ul>		
	<ul> <li>Pressure unit (→</li> <li>Temperature unit</li> </ul>	🗎 233)	
Distance unit		🗎 233)	Â
Distance unit Navigation	<ul> <li>Temperature unit</li> </ul>	🗎 233)	Â
	<ul> <li>Temperature unit</li> </ul>	E 233) t (→ ■ 233) anced setup → System units → Distance unit	Ê
Navigation	<ul> <li>Temperature unit</li> <li>Image: Setup → Adv</li> </ul>	E 233) t (→ ■ 233) anced setup → System units → Distance unit	æ
Navigation Description	<ul> <li>Temperature unit</li> <li>B B Setup → Adv</li> <li>Select distance unit</li> <li>SI units</li> <li>m</li> </ul>	$ \stackrel{}{=} 233) \\ ( \rightarrow {=} 233) \\ anced setup \rightarrow System units \rightarrow Distance unit \\ \vdots \\ \underbrace{US \ units}_{\bullet \ ft} \\ $	R
Navigation Description	<ul> <li>Temperature unit</li> <li>Setup → Adv</li> <li>Select distance unit</li> <li>SI units</li> <li>m</li> <li>mm</li> </ul>	$ \stackrel{}{=} 233) \\ t ( \rightarrow {=} 233) \\ anced setup \rightarrow System units \rightarrow Distance unit \\ . \\ . \\ US units \\ \bullet ft \\ \bullet in \\ \end{aligned}$	Â
Navigation Description	<ul> <li>Temperature unit</li> <li>B B Setup → Adv</li> <li>Select distance unit</li> <li>SI units</li> <li>m</li> </ul>	$ \stackrel{}{=} 233) \\ ( \rightarrow {=} 233) \\ anced setup \rightarrow System units \rightarrow Distance unit \\ \vdots \\ \underbrace{US \ units}_{\bullet \ ft} \\ $	æ
Navigation Description	<ul> <li>Temperature unit</li> <li>Setup → Adv</li> <li>Select distance unit</li> <li>SI units</li> <li>m</li> <li>mm</li> </ul>	(⇒ ≅ 233) t (→ ≅ 233) anced setup → System units → Distance unit	Ê

**Factory setting** 

#### Pressure unit A Navigation □ Setup → Advanced setup → System units → Pressure unit Selection SI units US units Other units bar inH2O psi ■ Pa ■ inH2O (68°F) kPa ■ ftH2O (68°F) MPa • mmH2O mbar a mmHg **Factory setting** bar Additional information Read access Operator Write access Maintenance (if Units preset (→ 🗎 122) = Customer value) A Temperature unit $\blacksquare$ ■ Setup → Advanced setup → System units → Temperature unit Navigation Description Select temperature unit. Selection SI units US units ■ °C ■ °F • K ■ °R °C **Factory setting** Additional information Read access Operator Maintenance (if Units preset (→ 🗎 122) = Customer value) Write access Ê Density unit

Image: Setup → Advanced setup → System units → Density unit		
Select density unit.		
SI units g/cm <sup>3</sup> g/ml g/l kg/l kg/dm <sup>3</sup> kg/m <sup>3</sup>	US units = lb/ft <sup>3</sup> = lb/gal (us) = lb/in <sup>3</sup> = STon/yd <sup>3</sup>	Other units • °API • SGU
	Select density unit. <i>SI units</i> • g/cm <sup>3</sup> • g/ml • g/l • kg/l • kg/dm <sup>3</sup>	Select density unit. SI units g/cm <sup>3</sup> g/ml g/l kg/l kg/dm <sup>3</sup> US units lb/ft <sup>3</sup> lb/gal (us) STon/yd <sup>3</sup>

kg/m<sup>3</sup>

#### 233

#### Additional information

Read access	Operator
Write access	Maintenance (if <b>Units preset (→</b> 🗎 122) = Customer value)

#### "Date / time" submenu

Navigation

 $\blacksquare \blacksquare \quad \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Date / time}$ 

Date/time			
Navigation	Setup → Advanced setup → Date / time → Date/time		
Description	Displays the device internal real time clock.		
Additional information	Read access Operator		
	Write access	-	

Set date				
Navigation	□ Setup $\rightarrow$ Advar	nced setup 🗦	→ Date / time → Set date	
Description	Controls the setting of the real-time clock.			
Selection	<ul> <li>Please select</li> <li>Abort</li> <li>Start</li> <li>Confirm time</li> </ul>			
Factory setting	Please select			
Additional information	Read access		Operator	
	Write access		Maintenance	
	Meaning of the option Please select Prompts the user to Abort Discards the entered Start Starts the setting of Confirm time Sets the real-time of	o select an a d date and t f the real tin	ime.	

Year			
Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Date / time $\rightarrow$ Year	
Prerequisite	Set d	ate (→ 🗎 235) = Start	

Description	Enter the current year.		
User entry	2016 to 2079		
Factory setting	2016		
Additional information	Read access	Operator	
	Write access	Maintenance	

Month		۵
Navigation	$ \qquad \qquad$	$\rightarrow$ Date / time $\rightarrow$ Month
Prerequisite	Set date ( > 🗎 235) = Start	
Description	Enter the current month.	
User entry	1 to 12	
Factory setting	1	
Additional information	Read access	Operator
	Write access	Maintenance

Day			8
Navigation	□ Setup $\rightarrow$ Advanced	setup $\rightarrow$ Date / time $\rightarrow$ Day	
Prerequisite	Set date (→ 🗎 235) = Sta	art	
Description	Enter the current day.		
User entry	1 to 31		
Factory setting	1		
Additional information	Read access	Operator	
	Write access	Maintenance	

Hour			
Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Date / time $\rightarrow$ Hour	
Prerequisite	Set d	late (→ 🗎 235) = Start	

Description	Enter the current hour.		
User entry	0 to 23		
Factory setting	0		
Additional information	Read access	Operator	
	Write access	Maintenance	

Minute		8
Navigation	□ Setup $\rightarrow$ Advanced setup	$\rightarrow$ Date / time $\rightarrow$ Minute
Prerequisite	Set date (Ə 🗎 235) = Start	
Description	Enter the current minute.	
User entry	0 to 59	
Factory setting	0	
Additional information	Read access	Operator
	Write access	Maintenance

#### "SIL confirmation" wizard

- The SIL confirmation wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently not in the SIL- or WHG-locked state.
  - The **SIL confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

*Navigation*  $\blacksquare \Box$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  SIL confirmation

#### "Deactivate SIL/WHG" wizard

- The **Deactivate SIL/WHG** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention" ) which are currently in the SIL- or WHG-locked state.
  - The **Deactivate SIL/WHG** wizard is required to undo the locking of the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

Navigation

Setup → Advanced setup → Deactiv. SIL/WHG

#### "Administration" submenu

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

Define access code			
Navigation	□ Setup → Advance	ed setup → Admir	istration $\rightarrow$ Def. access code
Description	Define release code for	write access to pa	rameters.
User entry	0 to 9999	0 to 9 999	
Factory setting	0		
Additional information	Read access	Operato	r
	Write access	Mainter	ance
	are not write-prot modified. The use	r is logged on in th	or 0 is defined as the access code, the parameters Figuration data of the device can then always be an <i>Maintenance</i> role. meters marked with the 🗃 symbol in this

Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter ( $\rightarrow \cong 125$ ).

Device reset		
Navigation		
Description	Reset the device configuration - either entirely or in part - to a defined state	
Selection	<ul><li>Cancel</li><li>To factory defaults</li><li>Restart device</li></ul>	
Factory setting	Cancel	
Additional information	<ul> <li>Meaning of the options</li> <li>Cancel <ul> <li>No action</li> </ul> </li> <li>To factory defaults <ul> <li>All parameters are reset to the order-code specific factory setting.</li> </ul> </li> <li>Restart device <ul> <li>The restart resets every parameter which is stored in the volatile memory (RAM) to factory setting (e.g. measured value data). The device configuration remains unchanged</li> </ul></li></ul>	

Read access	Operator
Write access	Maintenance

# 15.4 "Diagnostics" menu

Navigation

■ □ Diagnostics

Actual diagnostics Navigation 8 🗆 Diagnostics  $\rightarrow$  Actual diagnos. Description Displays the currently active diagnostic message. If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed. Additional information Read access Operator Write access The display consists of: Symbol for event behavior Code for diagnostic behavior Operating time of occurrence Event text If several messages are active at the same time, the messages with the highest priority is displayed. Information on what is causing the message, and remedy measures, can be viewed via 1 the ④ symbol on the display. Timestamp

r		
Navigation		
Description	Displays the timestamp for the currently active diagnostic message.	
Additional information	Read access Operator	
	Write access	-

Previous diagnostics		
Navigation	Image: Barbon Barbo	stics
Description	Displays the diagnostic message for the last diagnostic event that has ended.	
Additional information	Read access Operator	
	Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

If several messages are active at the same time, the messages with the highest priority is displayed.

Information on what is causing the message, and remedy measures, can be viewed via the (j) symbol on the display.

Timestamp		
Navigation	Image: Barbon Barbo	
Description	Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.	
Additional information	Read access Operator	
	Write access	-

Operating time from rest	art	
Navigation		start
Description	Indicates how long the device has been in operation since the last time the device was restarted.	
Additional information Read access Operator		Operator
	Write access	-

-		
Navigation	Image Diagnostics → Operating ti	ma
Navigation		ine and the second s
Description	Indicates how long the device has been in operation.	
Additional information	Read access     Operator	
	Write access	-

**Operating time** 

Date/time		
Navigation	Image Diagnostics → Date/time	
Description	Displays the device internal real time clock.	
Additional information	Read access	Operator
	Write access	-

#### 15.4.1 "Diagnostic list" submenu

*Navigation*  $\square$   $\square$  Diagnostics  $\rightarrow$  Diagnostic list

Diagnostics 1 to 5	
Navigation	■ Diagnostics $\rightarrow$ Diagnostic list $\rightarrow$ Diagnostics 1 to 5
Description	Displays the currently active diagnostic message with the highest priority.
Additional information	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text
Timestamp 1 to 5	

Navigation $\square \square$ Diagnostics  $\rightarrow$  Diagnostic list  $\rightarrow$  Timestamp 1 to 5

Description

Timestamp of the diagnostic message.

#### 15.4.2 "Device information" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Device info

Device tag			
Navigation	B □ Diagnostics → Device i	B □ Diagnostics → Device info → Device tag	
Description	Shows the device tag.	Shows the device tag.	
User interface	Character string comprising numbers, letters and special characters		
Factory setting	- none -		
Additional information	Read access	Operator	
	Write access	-	

Serial number		
Navigation	Image Diagnostics → Device info	$\rightarrow$ Serial number
Description	The serial number is a unique alphanumerical code identifying the device. It is printed on the nameplate. In combination with the Operations app it allows to access all device related documentation.	
Additional information	Read access	Operator
	Write access	-

Firmware version			
Navigation		B □ Diagnostics → Device info → Firmware version	
Description	Displays the device firmware version installed.		
Additional information	Read access	Operator	
	Write access	-	

Firmware CRC		
Navigation	Image: Boostics → Device info	→ Firmware CRC
Description	Result of the cyclic redundancy check of the firmware.	
Additional information	Read access	Operator
	Write access	-

#### Weight and measures configuration CRC

Navigation	□ Diagnostics → Device info	→ W&M config CRC
Description	Result of the cyclic redundancy check of the weights and measure relevant parameters.	
Additional information	Read access	Operator
	Write access	-

# Device name

Navigation 

Description Use this function to display the device name. It can also be found on the nameplate.

Additional information	Read access	Operator
	Write access	-

Order code		Â
Navigation	B □ Diagnostics → Device info	$\rightarrow$ Order code
Description	Shows the device order code.	
Additional information	Read access	Operator
	Write access	Service

Extended order code 1 to 3			£
Navigation		$\rightarrow$ Ext. order cd. 1	
Description	Display the three parts of the extended order code.		
User interface	Character string comprising numbers, letters and special characters		
Additional information	Read access     Operator		
	Write access	Service	

The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

#### 15.4.3 "Simulation" submenu

Read access	Maintenance

Navigation	8 8	Diagr
------------	-----	-------

88 I	Diagnostics 🗦	Simulation
------	---------------	------------

Device alarm simulation		8
Navigation	Image Diagnostics → Simulation	$\rightarrow$ Dev. alarm sim.
Description	Switch the device alarm on and off.	
Selection	<ul><li>Off</li><li>On</li></ul>	
Factory setting	Off	
Additional information	Read access	Operator
	Write access	Maintenance

Diagnostic event simulation			Ê
Navigation	B □ Diagnostics → Simulation	→ Diag. event sim.	
Description	Select a diagnostic event to simulate this event.		
Selection	The diagnostic events of the device		
Factory setting	Off		
Additional information	Read access	Operator	
	Write access	Maintenance	

To terminate the simulation, select **Off**.

Current output N siz	mulation
Navigation	$□$ $□$ Diagnostics $\rightarrow$ Simulation $\rightarrow$ Curr.outp N sim.
Prerequisite	<ul> <li>The device has an Anlog I/O module.</li> <li>Operating mode (→          <sup>139</sup>) = 420mA output or HART slave +420mA output</li> </ul>
Description	Switches the simulation of the current on or off.

Selection	<ul><li>Off</li><li>On</li></ul>	
Factory setting	Off	
Additional information	Read access	Operator
	Write access	Maintenance

#### Simulation value

ß

Navigation		→ Simulation value	
Prerequisite	Current output simulation ( $\rightarrow \cong 248$ ) = On		
Description	Defines the current to be simulated.		
User entry	3.4 to 23 mA		
Factory setting	The current at the time the simulation was started.		
Additional information	Read access	Operator	
	Write access	Maintenance	

# Index

# Symbols

#blank# (Parameter)	128, 129
09	
0 % value (Parameter)	143, 167
100 % value (Parameter) 136,	144, 167

# Α

Accessories	
Communication specific	102
Service specific	102
Actual diagnostics (Parameter)	241
Administration (Submenu)	239
Advanced setup (Submenu)	125
Air density (Parameter)	182
Air temperature (Parameter)	
Air temperature source (Parameter)	179
Alarm (Submenu)	216
Alarm 1 input source (Parameter)	161
Alarm 2 input source (Parameter)	161
Alarm hysteresis (Parameter)	224
Alarm mode (Parameter)	217
Alarm value (Parameter)	
Alarm value source (Parameter)	219
Ambient pressure (Parameter)	190
Analog I/O (Submenu)	139
Analog input 0% value (Parameter)	145
Analog input 100% value (Parameter)	145
Analog input source (Parameter)	141
Analog IP (Submenu)	133
Any error (Parameter)	223
Application	7
Application (Submenu)	175
Assign PV (Parameter)	166
Assign QV (Parameter)	171
Assign SV (Parameter)	168
Assign TV (Parameter)	170

## В

Backlight (Parameter)	230
Baudrate (Parameter) 155,	162
Bus termination (Parameter)	156

# С

Calibration temperature (Parameter) 199
Cleaning
Exterior cleaning
Clear alarm (Parameter) 223
Communication (Submenu)
Communication interface protocol (Parameter) 154
Communication interface protocol variant
(Parameter)
Communication status (Parameter)
Configuration (Submenu) 155, 158, 162, 165
Contact type (Parameter)
Contrast display (Parameter)
Covered tank (Parameter) 198

CTSh (Submenu)	198
CTSh correction value (Parameter)	198
CTSh mode (Parameter)	198
Current output N simulation (Parameter)	248
Current span (Parameter)	140

#### D

D		
Damping factor (Parameter) 138,	147,	224
Date / time (Submenu)		235
Date/time (Parameter)		243
Day (Parameter)		
DD		
Deactivate SIL/WHG (Wizard)		
Decimal places 1 (Parameter)		
Define access code (Parameter)		
Deformation factor (Parameter)		194
Density (Submenu)		
Density unit (Parameter)		
Density value (Parameter)		
Device alarm simulation (Parameter)		
Device Descriptions		
Device ID (Parameter)		
Device information (Submenu)		
Device name (Parameter)		
Device replacement		
Device reset (Parameter)		
Device tag (Parameter)		
Diagnostic event simulation (Parameter)		
Diagnostic events		86
Diagnostic information		00
FieldCare		
Diagnostic list		
Diagnostic list (Submenu)		
Diagnostic message	• • • •	. 86
Diagnostics		
Symbols		
Diagnostics (Menu)		
Diagnostics 1 to 5 (Parameter)		
Diagnostics event		
Digital input source (Parameter)		150
Digital Xx-x (Submenu)		
Dip Freeze (Parameter)		112
DIP switch		
see Write protection switch		
Discrete 1 selector (Parameter)		163
Display (Submenu)		225
Display damping (Parameter)		230
Display interval (Parameter)		229
Disposal		100
Distance unit (Parameter)		232
Document		
Function		. 4
Document function		
Ε		
Element position (Submenu)		116

Element position 1 to 24 (Parameter)
Maintenance
Repair
Enter access code (Parameter) 125
Error event type (Parameter) 146
Error value (Parameter)
Event level
Explanation
Symbols
Event text
Expected SIL/WHG chain (Parameter) 148, 153
Extended order code 1 (Parameter) 247
Exterior cleaning

# F

Failure mode (Parameter)	142
Firmware CRC (Parameter)	246
Firmware version (Parameter)	245
Fixed current (Parameter)	141
Float swap mode (Parameter)	156
Forget device (Parameter)	132
Forget device (Wizard)	132
Format display (Parameter)	225

# G

Gauge current (Parameter)	38
GP 1 name (Parameter)	20
GP Value 1 (Parameter)	20
GP Value 2 (Parameter)	20
GP Value 3 (Parameter) 12	20
GP Value 4 (Parameter)	21
GP values (Submenu) 12	20

## Η

H alarm (Parameter)	222
H alarm value (Parameter)	220
Hardware write protection	. 51
HART date code (Parameter)	174
HART descriptor (Parameter)	173
HART Device(s) (Submenu)	127
HART devices (Submenu)	126
HART message (Parameter)	174
HART output (Submenu)	165
HART short tag (Parameter)	173
Header (Parameter)	229
Header text (Parameter)	229
HH alarm (Parameter)	221
HH alarm value (Parameter)	220
HH+H alarm (Parameter)	222
Hour (Parameter)	236
HTG (Submenu)	208
HTG mode (Parameter)	208
HTMS (Submenu)	213
HTMS mode (Parameter)	213
Hysteresis (Parameter) 210,	215
HyTD (Submenu)	
-	

HyTD correction value (Parameter)	193
HyTD mode (Parameter)	193

#### I

173
151
144
146
147
126
. 7

## L

L
L alarm (Parameter)
L alarm value (Parameter)
Language (Parameter)
Level (Submenu)
Level mapping (Parameter) 159
Level source (Parameter)
Line impedance (Parameter) 160
Linear expansion coefficient (Parameter) 199
Liquid temp source (Parameter)
Liquid temperature (Parameter)
LL alarm (Parameter) 222
LL alarm value (Parameter)
LL+L alarm (Parameter) 223
Local display
see Diagnostics message
see In alarm condition
Locking status (Parameter) 125
Lower interface level (Parameter)

## М

Maintenance	. 98
Manual air temperature (Parameter)	179
Manual density (Parameter)	213
Manual liquid temperature (Parameter)	178
Manual vapor temperature (Parameter)	180
Manual water level (Parameter)	177
Maximum probe temperature (Parameter)	
Measured level (Parameter)	114
Measured lower density (Parameter)	
Measured materials	
Measured middle density (Parameter)	
Measured upper density (Parameter)	117
Menu	
Diagnostics	
1	112
F · · · · · · · · · · · · · · · · ·	122
Minimum level (Parameter) 209,	
Minimum pressure (Parameter) 209,	
F F , , , , , , , , , , ,	136
Minute (Parameter)	
Month (Parameter)	236
Ν	

NMT element values (Submenu)	115
No. of preambles (Parameter)	165
Number format (Parameter)	228
Number of devices (Parameter)	126

Index

#### 0

Observed density (Parameter) 116, 1	
Observed density source (Parameter) 1	182
Observed density temperature (Parameter) 1	116
Operating elements	
Diagnostics message	87
Operating mode (Parameter) 128, 133, 139, 1	149
Operating time (Parameter)	242
Operating time from restart (Parameter) 2	242
Operation (Menu) 1	112
Operation mode (Parameter) 1	175
Operational safety	. 8
Order code (Parameter) 2	246
Output density (Parameter) 1	130
Output level (Parameter)	131
	129
Output simulation (Parameter) 1	151
Output temperature (Parameter) 1	130
Output value (Parameter) 144, 1	152
Output values (Parameter) 1	152
Output vapor temperature (Parameter) 1	131

# Ρ

P1 (bottom) (Parameter)		184
P1 (bottom) manual pressure (Parameter)		184
P1 (bottom) source (Parameter)		184
P1 absolute / gauge (Parameter)		185
P1 offset (Parameter)		185
P1 position (Parameter)		185
P1-2 distance (Parameter)		187
P2 (middle) (Parameter)	118,	186
P2 (middle) manual pressure (Parameter)		186
P2 (middle) source (Parameter)		186
P2 absolute / gauge (Parameter)		187
P2 offset (Parameter)		187
P3 (top) (Parameter)		
P3 (top) manual pressure (Parameter)		188
P3 (top) source (Parameter)		188
P3 absolute / gauge (Parameter)		189
P3 offset (Parameter)		189
P3 position (Parameter)		189
Parity (Parameter)		155
Percent of range (Parameter)		
Polling address (Parameter)		
Pressure (Submenu)		
Pressure unit (Parameter)		
Previous diagnostics (Parameter)		
Primary variable (PV) (Parameter)		
Probe position (Parameter)		
Process value (Parameter)		
Process variable (Parameter)		
Product safety		8
PV mA selector (Parameter)		167
PV source (Parameter)	• • •	165

# Q

Quaternary variable (QV) (Parameter)	172

R
Readback value (Parameter) 152
Recalibration
Remedial measures
Calling up
Closing
Repair concept
Replacing a device
Requirements for personnel
Return
RTD connection type (Parameter)
RTD type (Parameter) 133
S
Safety distance (Parameter)
Safety instructions
Basic
Safety Instructions (XA) 6
Secondary variable (SV) (Parameter) 169
Separator (Parameter)

Safety instructions
Basic
Safety Instructions (XA)
Secondary variable (SV) (Parameter)
Separator (Parameter)
Serial number (Parameter)
Set date (Parameter) 23
Setup (Menu)
SIL confirmation (Wizard) 238
Simulation (Submenu)
Simulation value (Parameter)
Software ID (Parameter) 16
Starting level (Parameter)
Status signals
Stilling well (Parameter)
Submenu
Administration
Advanced setup
Alarm
Analog I/O
Analog IP
Application
TT
Communication 15
Communication
Configuration 155, 158, 162, 16
Configuration
Configuration       155, 158, 162, 16         CTSh       19         Date / time       23
Configuration       155, 158, 162, 164         CTSh       198         Date / time       23         Density       116, 183
Configuration       155, 158, 162, 169         CTSh       199         Date / time       239         Density       116, 189         Device information       249
Configuration       155, 158, 162, 164         CTSh       198         Date / time       234         Density       116, 184         Device information       244         Diagnostic list       244
Configuration       155, 158, 162, 164         CTSh       198         Date / time       234         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144
Configuration       155, 158, 162, 164         CTSh       198         Date / time       234         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       224
Configuration       155, 158, 162, 164         CTSh       198         Date / time       231         Density       116, 183         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       111
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         GP values       120
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         GP values       120         HART Device(s)       127
Configuration       155, 158, 162, 164         CTSh       198         Date / time       234         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       224         Element position       116         GP values       120         HART Device(s)       120
Configuration       155, 158, 162, 164         CTSh       194         Date / time       234         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         GP values       120         HART Device(s)       120         HART output       165
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       117         GP values       120         HART Device(s)       127         HART output       166         HTG       203
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       111         GP values       120         HART Device(s)       122         HART output       165         HTG       206         HTMS       215
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       117         GP values       120         HART Device(s)       122         HART output       166         HTG       206         HTMS       211         HyTD       195
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       111         GP values       120         HART Device(s)       122         HART output       166         HTG       201         HyTD       192         Information       175
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       117         GP values       126         HART Device(s)       127         HART output       166         HTG       206         HTMS       217         HyTD       199         Information       177         Input/output       126
Configuration       155, 158, 162, 164         CTSh       194         Date / time       235         Density       116, 185         Device information       244         Diagnostic list       244         Digital Xx-x       144         Display       225         Element position       116         Element temperature       111         GP values       120         HART Device(s)       122         HART output       166         HTG       201         HyTD       192         Information       175

Pressure	ŧ
Simulation	3
System units	2
Tank calculation	L
Tank configuration	;
Temperature	3
V1 input selector	L
WM550 input selector	)
System components	)
System polling address (Parameter)	
System units (Submenu)	2

#### Т

# U

Units preset (Parameter)	122, 232
Upper interface level (Parameter)	113
Used for SIL/WHG (Parameter)	147, 153
User role (Parameter)	125

## V

V1 address (Parameter)	159
V1 input selector (Submenu)	161
Value 1 display (Parameter)	226
Value percent selector (Parameter)	162
Vapor density (Parameter)	183
Vapor temp source (Parameter)	180
Vapor temperature (Parameter)	181

#### W

Water density (Parameter) 215
Water level (Parameter)
Water level source (Parameter)
Weight and measures configuration CRC (Parameter)
Wire expansion coefficient (Parameter) 200
Wizard
Deactivate SIL/WHG
Forget device
SIL confirmation
WM550 address (Parameter)
WM550 input selector (Submenu)
Workplace safety 7
Write protection
Via write protection switch
Write protection switch

# Y

Year (Parameter) .	•					•			•		•	 					•		•		•		23	35
rear (raranneter) i	•	• •	•	•	•	•	•••	•	•	•	•	• •	•	•	•	•	•	•	•	•	•	•		-



www.addresses.endress.com

