
Operating Instructions Levelflex FMP56, FMP57 PROFIBUS PA

Guided wave radar







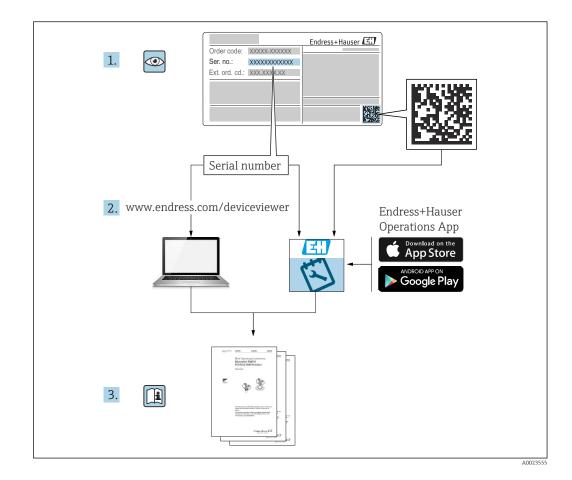

# Table of contents

1	Important docu	ment information	5
1.1 1.2	Symbols1.2.1Safety sym1.2.2Electrical s1.2.3Tool symbol1.2.4Symbols for	ument	5 5 5 5 5
1.3	Documentation 1.3.1 Technical I 1.3.2 Brief Oper 1.3.3 Safety Inst 1.3.4 Functional	n and graphics	6 7 7 7 7 7 7 7
1.5		arks	8
2	Basic safety ins	structions	9
2.1 2.2 2.3 2.4 2.5	Intended use Workplace safety . Operational safety Product safety 2.5.1 CE mark .	1 	9 9 10 10 10
3	Product descrip	otion 1	1
3.1	3.1.1 Levelflex F	MP56/FMP57 1	L1 L1 L2
4	Incoming accept	otance and product	
	identification .	1	3
4.1 4.2	Product identificati	on 1	L3 L3 L4
5	Storage, transp	ort 1	5
5.1 5.2	Transporting the p	roduct to the measuring	L5
	-		
6			6
6.1	<ul><li>6.1.1 Suitable m</li><li>6.1.2 Mounting</li><li>6.1.3 Notes on t</li></ul>	ounting position 1 under confined conditions . 1 he mechanical load of the	L6 L6 L8
	6.1.4 Informatio	n concerning the process	19
	6.1.5 Securing th	ne probe 2	23 25 27

6.2	Mounting the measuring device	31
	6.2.1 Tool list	31
	6.2.2 Shortening the probe	31
	6.2.3 Mounting the device	33
	6.2.4 Mounting the "Sensor, remote"	
	version	34
	6.2.5 Turning the transmitter housing	36
	6.2.6 Turning the display	37
6.3	Post-installation check	37
7	Electrical connection	39
7.1	Connecting requirements	39
	7.1.1 Terminal assignment	39
	7.1.2 Cable specification	41
	7.1.3 Device plug	41
	7.1.4 Supply voltage	42
	7.1.5 Overvoltage protection	42
7.2	Connecting the device	43
	7.2.1 Opening cover	43
	7.2.2 Connecting	43
	7.2.3 Plug-in spring-force terminals	44
	7.2.4 Closing the cover of the connection	
	compartment	44
7.3	Post-connection check	44
8	Operation methods	46
<b>8</b> 8.1	Operation methods	<b>46</b>
-	-	
-	Overview	46
-	Overview8.1.1Local operation8.1.2Operation with remote display and	46
-	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX50	46 46
-	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operation	46 46 47
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX50	46 46 47
8.1	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         Structure and function of the operating menu	46 46 47 47 48
8.1	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         Structure and function of the operating menu	46 46 47 47
8.1	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         Structure and function of the operating menu         8.2.1       Structure of the operating menu         8.2.2       User roles and related access	46 46 47 47 47 48 48
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization	46 46 47 47 47 48 48 48 50
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - Security	46 46 47 47 47 48 48 48 50 50
8.1	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         Structure and function of the operating menu         8.2.1       Structure of the operating menu         8.2.2       User roles and related access authorization         8.2.3       Data access - Security         Display and operating module	46 46 47 47 47 48 48 48 50 50 55
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display	46 46 47 47 47 48 48 48 50 50 55 55
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display8.3.2Operating elements	46 46 47 47 48 48 50 50 55 55 55 58
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display8.3.2Operating elements8.3.3Entering numbers and text	46 46 47 47 48 48 48 50 55 55 55 58 59
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display8.3.2Operating elements8.3.3Entering numbers and text8.3.4Opening the context menu	46 46 47 47 48 48 50 50 55 55 55 58
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display8.3.2Operating elements8.3.3Entering numbers and text8.3.4Opening the context menu8.3.5Envelope curve display on the display	46 46 47 47 47 48 48 48 50 55 55 55 55 58 59 60
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display8.3.2Operating elements8.3.3Entering numbers and text8.3.4Opening the context menu	46 46 47 47 48 48 48 50 55 55 55 58 59
8.1	Overview8.1.1Local operation8.1.2Operation with remote display and operating module FHX508.1.3Remote operation8.1.3Remote operationStructure and function of the operating menu8.2.1Structure of the operating menu8.2.2User roles and related access authorization8.2.3Data access - SecurityDisplay and operating module8.3.1Display8.3.2Operating elements8.3.3Entering numbers and text8.3.4Opening the context menu8.3.5Envelope curve display on the display and operating module	46 46 47 47 47 48 48 48 50 55 55 55 55 58 59 60
8.1 8.2 8.3	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         8.1.3       Remote operation         Structure and function of the operating menu       8.2.1         Structure of the operating menu       8.2.2         User roles and related access authorization       8.2.3         Data access - Security       Display and operating module         8.3.1       Display         8.3.2       Operating elements         8.3.3       Entering numbers and text         8.3.4       Opening the context menu         8.3.5       Envelope curve display on the display and operating module	46 46 47 47 48 48 48 50 55 55 55 55 58 59 60 62
8.1 8.2 8.3	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         8.1.3       Remote operation         Structure and function of the operating menu       8.2.1         Structure of the operating menu       8.2.2         User roles and related access authorization       8.2.3         Data access - Security       9         Display and operating module       8.3.1         Display       9         8.3.2       Operating elements         8.3.3       Entering numbers and text         8.3.4       Opening the context menu         8.3.5       Envelope curve display on the display and operating module         Integration into a PROFIBUS         network	46 46 47 47 48 48 48 50 50 55 55 58 59 60 62 <b>62</b>
8.1 8.2 8.3 <b>9</b> 9.1	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         Structure and function of the operating menu       Structure of the operating menu         8.2.1       Structure of the operating menu         8.2.2       User roles and related access authorization         8.2.3       Data access - Security         Display and operating module       8.3.1         Display and operating module       8.3.2         Operating elements       8.3.3         Entering numbers and text       8.3.4         Opening the context menu       8.3.5         Envelope curve display on the display and operating module       8.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope curve display on the display and operating module       9.3.5         Envelope cur	46 46 47 47 47 48 48 48 50 55 55 55 55 55 58 59 60 62 62 62
8.1 8.2 8.3	Overview         8.1.1       Local operation         8.1.2       Operation with remote display and operating module FHX50         8.1.3       Remote operation         8.1.3       Remote operation         Structure and function of the operating menu       8.2.1         Structure of the operating menu       8.2.2         User roles and related access authorization       8.2.3         Data access - Security       9         Display and operating module       8.3.1         Display       9         8.3.2       Operating elements         8.3.3       Entering numbers and text         8.3.4       Opening the context menu         8.3.5       Envelope curve display on the display and operating module         Integration into a PROFIBUS         network	46 46 47 47 48 48 48 50 55 55 55 55 55 58 59 60 62 62 62 62 63

9.2.2 Software addressing ..... 63

Endress+Hauser

10	Commissioning using the
	Commissioning Wizard 64
11	Commissioning via operating
	menu
11.1	Function check
11.2	Setting the operating language
11.3	Configuring level measurement
11.4 11.5	Recording the reference envelope curve68Configuring the local display69
11.9	11.5.1 Factory setting of local display for
	level measurements
11.6	Configuration management
11.7	Protecting settings from unauthorized access . 71
12	Diagnostics and troubleshooting 72
12.1	General troubleshooting
	12.1.1 General errors
12.2	12.1.2Parametrization errors73Diagnostic information on local display74
10.0	12.2.1 Diagnostic message
	12.2.2 Calling up remedial measures 76
12.3	Diagnostic event in the operating tool 77
12.4 12.5	Diagnostic list78List of diagnostic events79
12.6	Event logbook
	12.6.1 Event history 80
	12.6.2 Filtering the event logbook
12.7	12.6.2Filtering the event logbook
12.7 <b>13</b>	12.6.3 Overview of information events 81
	12.6.3 Overview of information events81Firmware history83Maintenance84
13	12.6.3 Overview of information events81Firmware history83Maintenance84
<b>13</b> 13.1	12.6.3 Overview of information events81Firmware history83Maintenance84Exterior cleaning84
<b>13</b> 13.1 13.2	12.6.3 Overview of information events81Firmware history83Maintenance84Exterior cleaning84General cleaning instructions84Repair85General information85
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> </ul>	12.6.3 Overview of information events81Firmware history83Maintenance84Exterior cleaning84General cleaning instructions84Repair85General information8514.1.1 Repair concept85
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> </ul>	12.6.3 Overview of information events81Firmware history83Maintenance84Exterior cleaning84General cleaning instructions84Repair85General information8514.1.1 Repair concept8514.1.2 Repair of Ex-certified devices85
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> </ul>	12.6.3 Overview of information events81Firmware history83Maintenance84Exterior cleaning84General cleaning instructions84Repair85General information8514.1.1 Repair concept85
<ul> <li><b>13</b></li> <li>13.1</li> <li>13.2</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> <li>14.1</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85
<ul> <li><b>13</b></li> <li>13.1</li> <li>13.2</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86         Disposal       86
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>15</li> </ul>	12.6.3 Overview of information events81Firmware history83Maintenance84Exterior cleaning84General cleaning instructions84Repair85General information8514.1.1 Repair concept8514.1.2 Repair of Ex-certified devices8514.1.3 Replacing electronics modules8514.1.4 Replacing a device85Spare parts86Disposal86Accessories87
<ul> <li><b>13</b></li> <li>13.1</li> <li>13.2</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         General information       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86         Disposal       86         Acceessories       87         Device-specific accessories       87
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>15</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         General information       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86         Disposal       86         Device-specific accessories       87
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>15</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         General information       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86         Disposal       86         Acceessories       87         15.1.1 Weather protection cover       87         15.1.2 Mounting bracket for electronics       87         15.1.2 Mounting bracket for electronics       87
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>15</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         General information       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86         Return       86         Disposal       87         Device-specific accessories       87         15.1.1 Weather protection cover       87         15.1.3 Rod extension / centering device       89
<ul> <li>13</li> <li>13.1</li> <li>13.2</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>15</li> </ul>	12.6.3 Overview of information events       81         Firmware history       83         Maintenance       84         Exterior cleaning       84         General cleaning instructions       84         Repair       85         General information       85         14.1.1 Repair concept       85         14.1.2 Repair of Ex-certified devices       85         14.1.3 Replacing electronics modules       85         14.1.4 Replacing a device       85         Spare parts       86         Disposal       86         Acceessories       87         15.1.1 Weather protection cover       87         15.1.2 Mounting bracket for electronics       87         15.1.2 Mounting bracket for electronics       87

	15.1.6 Overvoltage protection
	devices
15.2	Communication-specific accessories
15.3	Service-specific accessories
15.4	System components
16	Operating menu 94
16.1	Overview of the operating menu (display
	module) 94
16.2	Overview of the operating menu (operating
	tool) 101
16.3	"Setup" menu 107
	16.3.1 "Mapping" wizard 113
	16.3.2 "Analog input 1 to 6" submenu 114
	16.3.3 "Advanced setup" submenu 116
16.4	"Diagnostics" menu 159
	16.4.1 "Diagnostic list" submenu 161
	16.4.2 "Event logbook" submenu 162
	16.4.3 "Device information" submenu 163
	16.4.4 "Measured values" submenu 165
	16.4.5 "Analog input 1 to 6" submenu 167
	16.4.6 "Data logging" submenu 169
	16.4.7 "Simulation" submenu 172
	16.4.8 "Device check" submenu 176
	16.4.9 "Heartbeat" submenu 178

Index 17	7							1	1		!	/	1	/	1	1																											•					•								•												•		•		•	•	•					•	-	_	_						l		]													,	•		•		•	,	,	•		•		•		•	•		•		•		•		•		•	,	,	•	,	•		•		•	•		•	•		•	•		
----------	---	--	--	--	--	--	--	---	---	--	---	---	---	---	---	---	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	---	--	--	--	--	---	--	--	--	--	--	--	--	---	--	--	--	--	--	--	--	--	--	--	--	---	--	---	--	---	---	---	--	--	--	--	---	---	---	---	--	--	--	--	--	---	--	---	--	--	--	--	--	--	--	--	--	--	--	--	---	---	--	---	--	---	---	---	---	--	---	--	---	--	---	---	--	---	--	---	--	---	--	---	--	---	---	---	---	---	---	--	---	--	---	---	--	---	---	--	---	---	--	--

# 1 Important document information

## 1.1 Purpose of this document

These Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

### 1.2.1 Safety symbols

### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

### **WARNING**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

### **A** CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

## 1.2.2 Electrical symbols

## $\sim$

Alternating current

## $\sim$

Direct current and alternating current

## \_ \_ \_

Direct current

Ŧ

### Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

### Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

## 1.2.3 Tool symbols

● ✓
Phillips head screwdriver

### 0

Flat blade screwdriver

### 06

Torx screwdriver

⊖ ∉ Allen key

ණ් Open-ended wrench

## 1.2.4 Symbols for certain types of information and graphics

### Permitted

Procedures, processes or actions that are permitted

## ✓ ✓ Preferred

Procedures, processes or actions that are preferred

Forbidden Procedures, processes or actions that are forbidden

**Tip** Indicates additional information

Reference to documentation

## 

Reference to graphic

Notice or individual step to be observed

1., 2., 3. Series of steps

L► Result of a step

Visual inspection

### 

Operation via operating tool

### A

Write-protected parameter

**1, 2, 3, ...** Item numbers

**A, B, C, ...** Views

 $\underline{\Lambda} \rightarrow \underline{\square}$  Safety instructions Observe the safety instructions contained in the associated Operating Instructions

Temperature resistance of the connection cables

Specifies the minimum value of the temperature resistance of the connection cables

## 1.3 Documentation

The following types of documentation are available in the Download Area of the Endress +Hauser website (www.endress.com/downloads):

- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
  - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

## 1.3.1 Technical Information (TI)

### Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

## 1.3.2 Brief Operating Instructions (KA)

### Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

## 1.3.3 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

## 1.3.4 Functional Safety Manual (FY)

Depending on the SIL approval, the Functional Safety Manual (FY) is an integral part of the Operating Instructions and applies in addition to the Operating Instructions, Technical Information and ATEX Safety Instructions.

The different requirements that apply for the protective function are described in the Functional Safety Manual (FY).

## 1.4 Terms and abbreviations

### BA

Document type "Operating Instructions"

### KA

Document type "Brief Operating Instructions"

### ΤI

Document type "Technical Information"

### SD

Document type "Special Documentation"

### XA

Document type "Safety Instructions"

### PN

Nominal pressure

#### MWP

Maximum working pressure The MWP is indicated on the nameplate.

### ToF

Time of Flight

### ε<sub>r</sub> (Dk value)

Relative dielectric constant

## PLC

Programmable logic controller (PLC)

### CDI

Common Data Interface

### BD

Blocking Distance; no signals are analyzed within the BD.

### PLC

Programmable logic controller (PLC)

### CDI

Common Data Interface

### PFS

Pulse Frequency Status (Switch output)

## 1.5 Registered trademarks

### **PROFIBUS®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

### Bluetooth®

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

### Apple®

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

### Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

### KALREZ<sup>®</sup>, VITON<sup>®</sup>

Registered trademarks of DuPont Performance Elastomers L.L.C., Wilmington, DE USA

#### TEFLON®

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

### TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

# 2 Basic safety instructions

## 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

## 2.2 Intended use

### Application and media

The measuring device described in this manual is intended only for the level measurement of bulk solids. Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

If the limit values specified in the "Technical data" and the conditions listed in the instructions and additional documentation are observed, the measuring device may be used for the following measurements only:

- Measured process variables: level
- Calculable process variables: volume or mass in any shape of vessel (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- Use the measuring device only for media to which the process-wetted materials have an adequate level of resistance.
- Observe the limit values in the "Technical data".

### Incorrect use

The manufacturer is not liable for damage caused by improper or non-intended use.

Clarification of borderline cases:

 For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability.

### **Residual risks**

Due to heat transfer from the process as well as power loss in the electronics, the temperature of the electronics housing and the assemblies contained therein (e.g. display module, main electronics module and I/O electronics module) may rise up to 80  $^{\circ}$ C (176  $^{\circ}$ F). When in operation, the sensor may reach a temperature close to the medium temperature.

Danger of burns from contact with surfaces!

 In the event of high medium temperatures, ensure protection against contact to prevent burns.

## 2.3 Workplace safety

When working on and with the device:

• Wear the required protective equipment according to federal or national regulations.

## 2.4 Operational safety

Risk of injury!

- Operate the device only if it is in proper technical condition, free from errors and faults.
- The operator is responsible for the interference-free operation of the device.

### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

▶ If modifications are nevertheless required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to the repair of an electrical device.
- Use only original spare parts and accessories from the manufacturer.

### Hazardous area

To eliminate danger to persons or the installation when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- Check the nameplate to verify whether the ordered device can be put to its intended use in the hazardous area.
- ► Observe the specifications in the separate supplementary documentation, which is an integral part of this manual.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets the general safety standards and legal requirements.

## NOTICE

### Loss of degree of protection by opening of the device in humid environments

► If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

## 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU directives. These are listed in the corresponding EU Declaration of Conformity together with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the CE mark.

## 2.5.2 EAC conformity


The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the EAC mark.


#### **Product description** 3

#### Product design 3.1

#### 3.1.1 Levelflex FMP56/FMP57

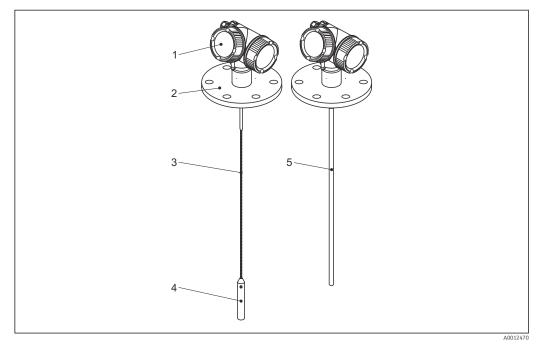

- **1** Design of the Levelflex
- 1 Electronics housing
- 2 3 Process connection (here as an example: flange)
- Rope probe End-of-probe weight 4 5
- Rod probe

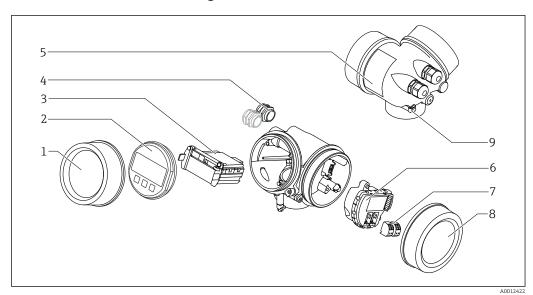

3.1.2 **Electronics housing** 

₽ 2 Design of the electronics housing

- 1 Electronics compartment cover
- Display module 2
- Main electronics module 3
- Cable glands (1 or 2, depending on instrument version) 4
- 5
- Nameplate I/O electronics module 6 7
- Terminals (pluggable spring terminals) Connection compartment cover
- 8
- 9 Grounding terminal

# 4 Incoming acceptance and product identification

## 4.1 Incoming acceptance

Check the following during incoming acceptance:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): are the Safety Instructions (XA) provided?


If one of these conditions is not met, please contact your Endress+Hauser sales office.


## 4.2 Product identification

The following options are available for the identification of the measuring device:

Nameplate specifications

- Order code with breakdown of the device features on the delivery note
- Enter the serial number from the nameplate in *W@M Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial number on the nameplate into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information about the measuring device is displayed.

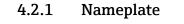

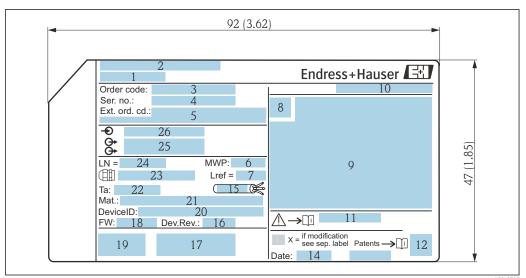

- 3 Nameplate of the Levelflex; engineering unit: mm (in)
- 1 Device name
- 2 Manufacturer address
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Gas phase compensation: reference length
- 8 Certificate symbol
- 9 Certificate- and approval-related data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 2-D matrix code (QR code)
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Permitted temperature range for cable
- 16 Device revision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication protocol): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 DeviceID
- 21 Materials in contact with process
- 22 Permitted ambient temperature (T<sub>a</sub>)
- 23 Size of the cable gland thread
- 24 Probe length
- 25 Signal outputs
- 26 Supply voltage
- Up to 33 characters of the extended order code are indicated on the nameplate. If the extended order code contains additional characters, these cannot be displayed. However, the complete extended order code can also be displayed via the device operating menu: **Extended order code 1 to 3** parameter

# 5 Storage, transport

## 5.1 Storage temperature

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use original packaging.


# 5.2 Transporting the product to the measuring point

### **WARNING**

Housing or rod may become damaged or pull off.

Danger of injury!


- Transport the measuring device to the measuring point in its original packaging or by the process connection.
- Always secure lifting equipment (slings, eyes, etc.) at the process connection and never lift the device by the electronic housing or probe. Pay attention to the center of gravity of the device so that it does not tilt or slip unintentionally.
- ► Follow the safety instructions and transport conditions for devices weighing more than 18 kg (39.6 lbs) (IEC 61010).

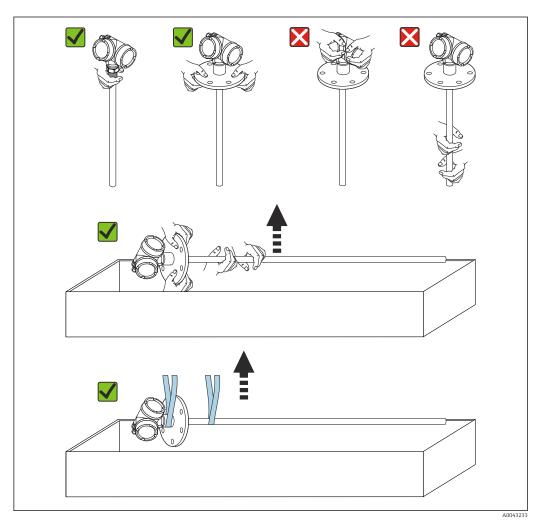

# 6 Mounting

## 6.1 Mounting requirements

## 6.1.1 Suitable mounting position

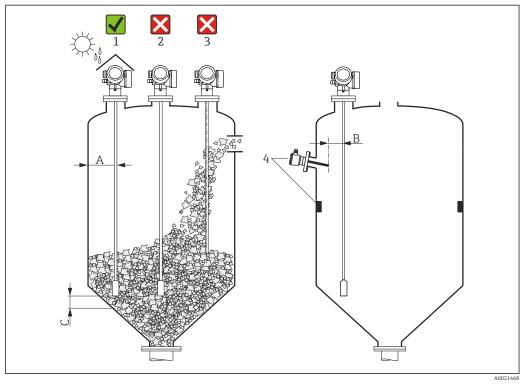

4 Installation conditions for Levelflex

### Spacing requirements when mounting

- Distance (A) between the vessel wall and rod and rope probes:
  - For smooth metallic walls: > 50 mm (2 in)
  - For plastic walls: > 300 mm (12 in) to metallic parts outside the vessel
  - For concrete walls: > 500 mm (20 in), otherwise the permitted measuring range may be reduced.
- Distance (B) between rod probes and internal fittings (3): > 300 mm (12 in)
- When using more than one Levelflex:
  - Minimum distance between the sensor axes: 100 mm (3.94 in)
- Distance (C) from the end of the probe to the bottom of the vessel:
  - Rope probe: > 150 mm (6 in)
  - Rod probe: > 10 mm (0.4 in)


### Additional conditions

- When mounting outdoors, a weather protection cover (1) can be used to protect the device against extreme weather conditions.
- In metallic vessels, preferably do not mount the probe in the center of the vessel (2), as this would lead to increased interference echoes.
   If a central mounting position cannot be avoided, it is essential to perform interference
- echo suppression (mapping) after commissioning the device.
- Do not mount the probe in the filling curtain (3).
- Avoid buckling the rope probe during installation or operation (e.g. as a result of product movement against silo wall) by selecting a suitable mounting location.
- The probe must be checked regularly for damage during operation.
- In the case of freely suspended rope probes (probe end not fixed at the bottom), the distance between the probe rope and internal fittings, which can change due to the movement of the product, must never be less than 300 mm (12 in). Occasional contact between the probe end weight and the cone of the vessel, however, does not influence the measurement provided that the dielectric constant is at least DC = 1.8.
- When the housing is mounted in a recess (e.g. in a concrete ceiling), observe a minimum distance of 100 mm (4 in) between the cover of the connection compartment/electronics compartment and the wall. Otherwise the connection compartment/electronics compartment will not be accessible after installation.

## 6.1.2 Mounting under confined conditions

### Mounting with remote probe

The device version with a remote probe is suitable for applications with restricted mounting space. In this case, the electronics housing is mounted at a separate position from the probe.

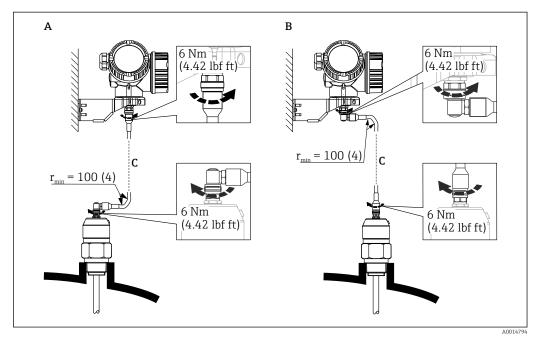

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered
- Product structure, feature 600 "Probe design":
  - Version MB "Sensor remote, 3m cable"
  - Version MC "Sensor remote, 6m cable"
  - Version MD "Sensor remote, 9m cable"
- The connecting cable is included in the delivery with these versions. Minimum bending radius: 100 mm (4 inch)
- The mounting bracket for the electronics housing is included in the delivery with these versions. Mounting options:
  - Wall mounting
  - Mounting on DN32 to DN50 (1-1/4 to 2 inch) post or pipe
- The connection cable has one straight plug and one plug angled at 90°. Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.
- The probe, electronics and connection cable are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

### 6.1.3 Notes on the mechanical load of the probe

#### Tensile load

Bulk solids exert tensile forces on rope probes which increase with:

- The probe length, i.e. the maximum cover
- The bulk density of the product
- The silo diameter and
- The diameter of the probe rope

As the tensile forces also depend greatly on the flowability of the product, a higher safety factor is necessary for highly viscous products and if there is a risk of cornice buildup. In critical cases it is better to use a 6 mm (0.24 in) rope instead of a 4 mm (0.16 in) one.


The same forces also act on the silo ceiling. The tensile forces on a fixed rope are always greater, but cannot be calculated. Observe the tensile loading capacity of the probes.


Ways to reduce the tensile forces:

- Shorten the probe.
- If the maximum tensile load is exceeded, check whether it would be possible to use a non-contact ultrasonic or level radar device.

The following diagrams show typical loads for common bulk solids as reference values. The calculation was performed for the following conditions:

- Calculation according to DIN 1055, Part 6 for the cylindrical part of the silo
- Suspended probe (probe end not fixed at the bottom)
- Free-flowing bulk solid, i.e. mass flow. A calculation for core flow is not possible. In the event of collapsing cornices, considerably higher loads can occur.
- The specification for tensile forces contains safety factor 2 (in addition to the safety factors already contained in DIN 1055), which compensates for the normal fluctuation range in pourable bulk solids.

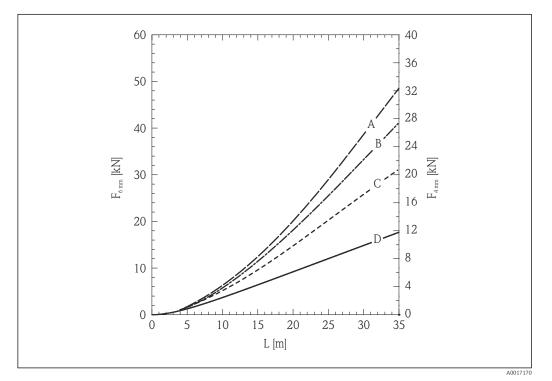

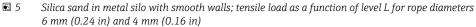

- A Silo diameter 12 m (40 ft)
- B Silo diameter 9 m (30 ft)
- C Silo diameter 6 m (20 ft)
- D Silo diameter 3 m (10 ft)



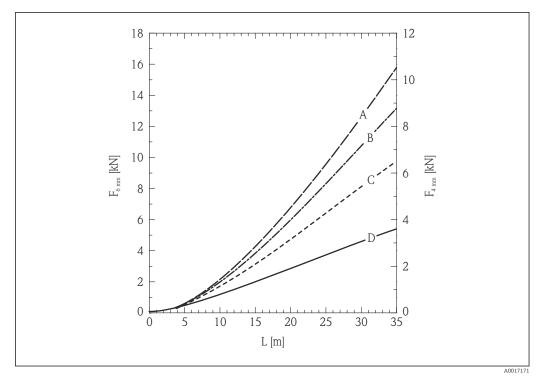


Image: Book of the second s

- A Silo diameter 12 m (40 ft)
- B Silo diameter 9 m (30 ft)
- C Silo diameter 6 m (20 ft)
- D Silo diameter 3 m (10 ft)

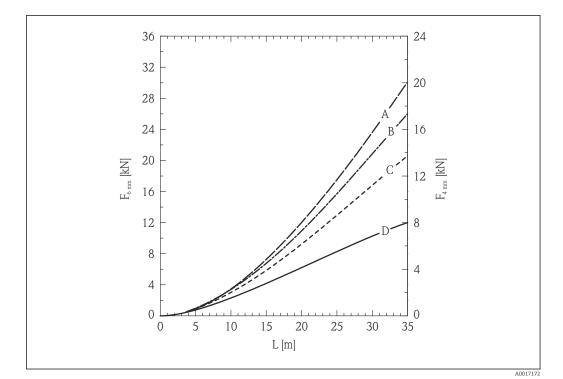

- 7 Wheat in metal silo with smooth walls; tensile load as a function of level L for rope diameters 6 mm (0.24 in) and 4 mm (0.16 in)
- A Silo diameter 12 m (40 ft)
- B Silo diameter 9 m (30 ft)
- C Silo diameter 6 m (20 ft)
- D Silo diameter 3 m (10 ft)

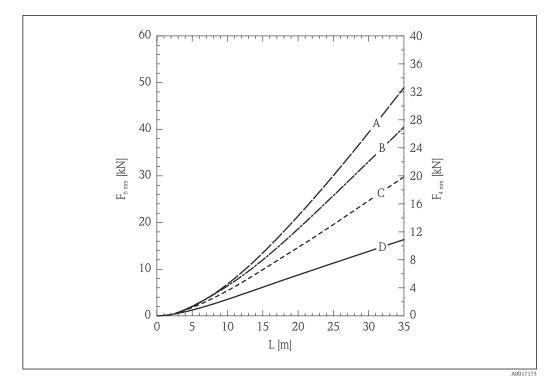

- E 8 Cement in metal silo with smooth walls; tensile load as a function of level L for rope diameters 6 mm (0.24 in) and 4 mm (0.16 in)
- A Silo diameter 12 m (40 ft)
- B Silo diameter 9 m (30 ft)
- C Silo diameter 6 m (20 ft)
- D Silo diameter 3 m (10 ft)

#### Tensile loading capacity of rope probe and breaking load (silo ceiling)

The ceiling of the silo must be designed to withstand the maximum breaking load.

#### FMP56

#### Rope 4mm (1/6") 316

- Tensile loading capacity 12 kN
- Max. breaking load 20 kN

### Rope 6mm (1/4") PA>steel

- Tensile loading capacity12 kN
- Max. breaking load 20 kN

### FMP57

#### Rope 4mm (1/6") 316

- Tensile loading capacity 12 kN
- Max. breaking load 20 kN

### Rope 6mm (1/4") 316

- Tensile loading capacity 30 kN
- Max. breaking load 42 kN

### Rope 6mm (1/4") PA>steel

- Tensile loading capacity 12 kN
- Max. breaking load 20 kN

#### Rope 8mm (1/3") PA>steel

- Tensile loading capacity 30 kN
- Max. breaking load 42 kN

## Lateral loading capacity (flexural strength) of rod probes

FMP57


**Rod 16mm (0.63") 316L** 30 Nm

## 6.

## 6.1.4 Information concerning the process connection

Probes are mounted on the process connection with threaded connections or flanges. If there is the danger with this installation that the probe end moves so much that it occasionally touches the vessel floor or cone, the probe may need to be shortened at the lower end and fixed in place.

### Threaded connection

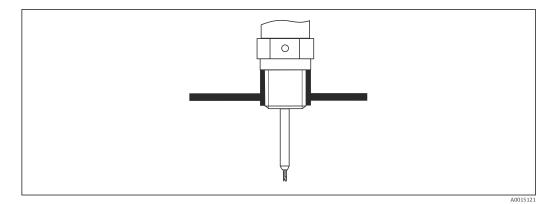

Mounting with threaded connection; flush with the vessel ceiling

### Seal


The thread and the type of seal comply with DIN 3852 Part 2, screwed plug, form A.

The following types of sealing ring can be used:

- For thread G3/4": According to DIN 7603 with dimensions 27 mm  $\times$  32 mm
- $\bullet$  For thread G1/-1/2": According to DIN 7603 with dimensions 48 mm  $\,\times\,$  55 mm

Use a sealing ring according to this standard in form A, C or D and of a material that offers appropriate resistance for the application.

### Nozzle installation

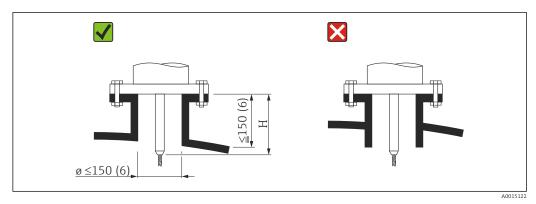

*H* Length of the centering rod or the rigid part of the rope probe

FMP56

**Rope, Ø 4 mm (0.16 in)** Length H: 120 mm (4.7 in) FMP57

**Rope, Ø 4 mm (0.16 in)** Length H: 94 mm (3.7 in)

**Rope, Ø 6 mm (0.24 in)** Length H: 135 mm (5.3 in)

- Permissible nozzle diameter:  $\leq 150 \text{ mm} (6 \text{ in})$ For larger diameters, the near-range measuring capability may be reduced. For large nozzles, see the section "Mounting in nozzles  $\geq \text{DN300}$ "
- Permissible nozzle height: ≤ 150 mm (6 in) For larger heights, the near-range measuring capability may be reduced. Larger nozzle heights are possible in special cases (on request), see section "Rod extension/centering device HMP40 for FMP57".
- The end of the nozzle should be flush with the tank ceiling in order to avoid ringing effects.

In thermally insulated vessels, the nozzle should also be insulated in order to prevent condensate formation.

### Rod extension/centering device HMP40 for FMP57


For FMP57 with rope probes, the rod extension/centering device HMP40 is available as an accessory. It must be used if the probe rope would otherwise come into contact with the lower edge of the nozzle.

This accessory consists of the extension rod, corresponding to the nozzle height, on which a centering disk is also mounted if the nozzles are narrow or when used in bulk solids. We deliver this component separately from the device. Please order a correspondingly shorter probe length.

Only use centering disks with small diameters (DN40 and DN50) if there is no significant build-up in the nozzle above the disk. The nozzle must not become clogged with product.

### Mounting in nozzles $\geq$ DN300

If installation in nozzles  $\geq$  300 mm (12 in) is unavoidable, installation must be carried out in accordance with the following diagram in order to avoid interference signals in the near range.

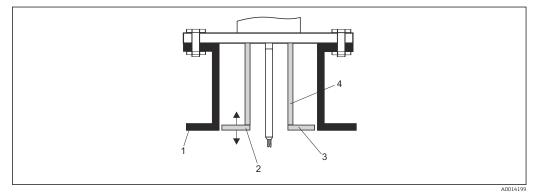


1 Lower edge of the nozzle

- 2 Approximately flush with the lower edge of the nozzle  $(\pm 50 \text{ mm})$
- 3 Plate, nozzle Ø 300 mm (12 in) = plate Ø 280 mm (11 in); nozzle Ø  $\geq$  400 mm (16 in) = plate Ø  $\geq$  350 mm (14 in)
- 4 Pipe Ø 150 to 180 mm

## 6.1.5 Securing the probe

### Securing rope probes

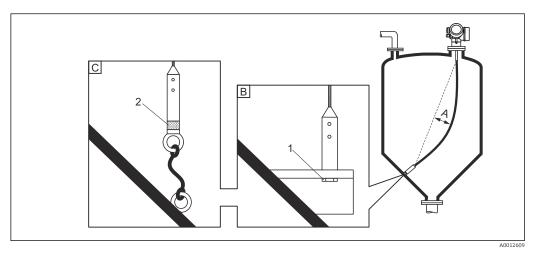


- A Rope sag:  $\geq 10 \text{ mm}/(1 \text{ m probe length}) [0.12 \text{ in}/(1 \text{ ft probe length})]$
- B Reliably grounded end of probe
- C Reliably insulated end of probe
- 1 Fastener in female thread of probe end weight
- 2 Insulated fastening kit
- The end of the rope probe must be secured (fixed down) under the following conditions:If the probe would otherwise temporarily come into contact with the vessel wall, the
  - cone, internal fittings/beams or another part of the installationIf the probe would otherwise get closer than 0.5 m (1.6 ft) to a concrete wall.
- A female thread is provided in the probe weight to secure the end of the probe:
  - Rope 4 mm (1/6"), 316: M 14
  - Rope 6 mm (1/4"), 316: M 20
  - Rope 6 mm (1/4"), PA>steel: M14
  - Rope 8mm (1/3"), PA>steel: M20
- Far higher tensile loads occur on the probe when it is secured (fixed down). Therefore, preferably use the 6 mm (1/4") rope probe.
- When fixed down, the end of the probe must be either reliably grounded or reliably insulated. Use an insulated fastening kit if it is not otherwise possible to secure the probe with a reliably insulated connection.
- If grounded fastening is used, the search for a positive probe end echo must be activated. Otherwise, automatic probe length correction is not possible. Navigation: Expert → Sensor → EOP evaluation → EOP search mode Setting: **Positive EOP** option
- To prevent an extremely high tensile load (e.g. due to thermal expansion) and the risk of the rope breaking, the rope must be slack. Required sag: ≥ 10 mm/(1 m rope length) [ 0.12 in/(1 ft rope length)].

Pay attention to the tensile loading capacity of rope probes.

### Securing rod probes

- For WHG approval: A support is required for probe lengths  $\geq$  3 m (10 ft).
- In general, rod probes must be secured in the event of horizontal flow (e.g. from an agitator) or strong vibrations.
- Only secure rod probes directly at the end of the probe.

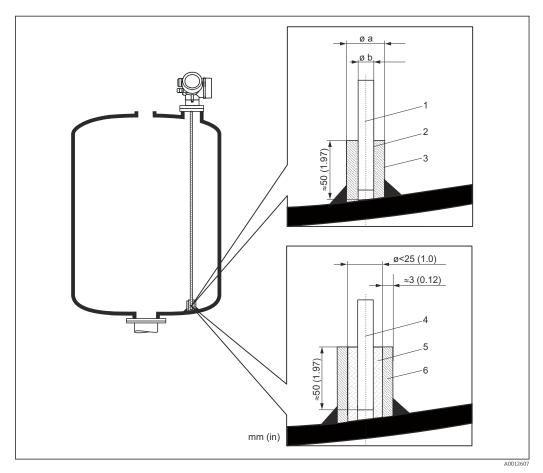

Unit of measurement mm (in)

- 1 Probe rod, uncoated
- *2* Sleeve with narrow bore to ensure electrical contact between the sleeve and the rod.
- 3 Short metal pipe, e.g. welded in place
- 4 Probe rod, coated
- 5 Plastic sleeve, e.g. PTFE, PEEK, PPS
- 6 Short metal pipe, e.g. welded in place

### NOTICE

### Poor grounding of the probe end may cause incorrect measurements.

 Use a sleeve with a narrow bore to ensure good electrical contact between the sleeve and the probe rod.

### NOTICE


#### Welding can damage the main electronics module.

► Before welding: Ground the probe rod and remove the electronics.

## 6.1.6 Special installation situations

### **Concrete silos**

Installation in a thick concrete ceiling, for example, should be flush with the lower edge. Alternatively, the probe can also be installed in a pipe that must not protrude over the lower edge of the silo ceiling. The pipe should be as short as possible. For installation suggestions, see the diagram below.

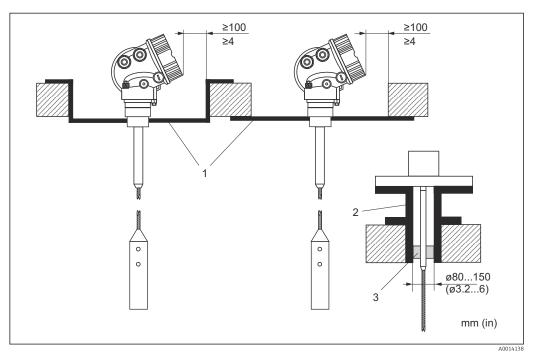


- 1 Metal plate
- 2 Metal pipe
- 3 Rod extension/centering device HMP40 (see "Accessories")

F

Installation with rod extension/centering device (accessory):


Strong dust generation can lead to build-up behind the centering disk. This can result in interference reflections. For other installation options, please contact Endress +Hauser.

### Mounting from the side

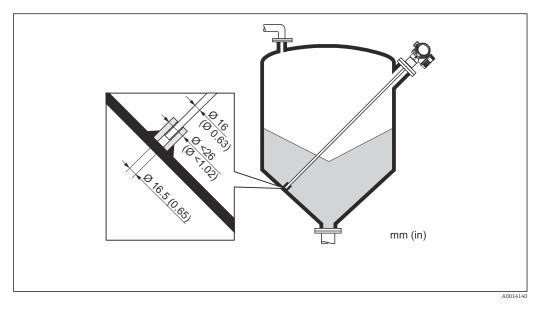

- If installation from above is not possible, the device can also be mounted from the side
- Always secure the rope probe in this case
  Support the rod and coax probe if the lateral load-bearing capacity is exceeded
- Only secure rod probes at the end of the probe

### Non-metal vessels

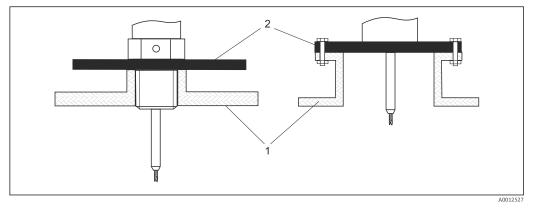

1 Non-metal vessel


2 Metal sheet or metal flange

To ensure good measurement results when mounting on non-metal vessels

- Use a device with a metal flange (minimum size DN50/2").
- Alternatively: at the process connection, mount a metal sheet with a diameter of at least 200 mm (8 in) at a right angle to the probe.


### Vessel with thermal insulation

If process temperatures are high, the device must be included in normal vessel insulation (1) in order to prevent the electronics heating up as a result of thermal radiation or convection. The insulation may not go beyond the points labeled "MAX" in the drawings.

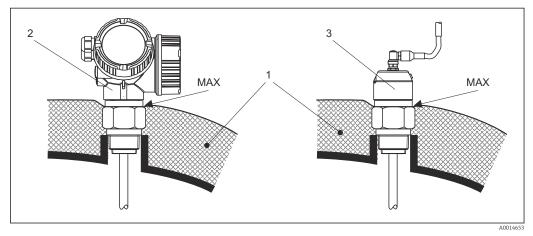

■ 10 Process connection with thread

- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

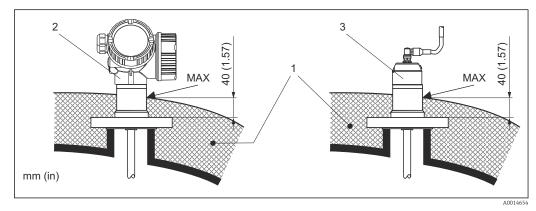


■ 11 Process connection with flange - FMP57

- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

## 6.2 Mounting the measuring device

## 6.2.1 Tool list

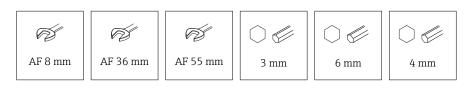

- To shorten rope probes: use a saw or bolt cutters
- To shorten rod or coax probes: use a saw
- For flanges and other process connections: use an appropriate mounting tool


## 6.2.2 Shortening the probe

### Shortening rod probes

Rod probes must be shortened if the distance to the vessel floor or outlet cone is less than 10 mm (0.4 in). To shorten, saw off the bottom end of the rod probe.

### Shortening rope probes

Rope probes must be shortened if the distance to the vessel floor or outlet cone is less than 150 mm (6 in).

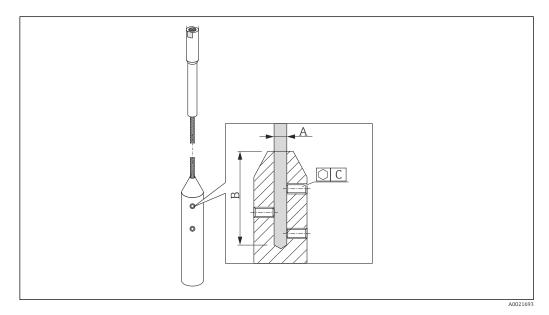

### Rope material 316

- A:
- 4 mm (0.16 in)
- B:
- 40 mm (1.6 in) • C:
  - 3 mm; 5 Nm (3.69 lbf ft)

### Rope material 316

- A:
- 6 mm (0.24 in)
- B:
- 70.5 mm (2.78 in) • C:
  - 4 mm; 15 Nm (11.06 lbf ft)
- Rope material PA > steel
- A:
- 6 mm (0.24 in)
- B: 40 mm (1.6 in)
- C:
- 3 mm; 5 Nm (3.69 lbf ft)

Rope material PA > steel

- A:
- 8 mm (0.31 in)
- B:


70.5 mm (2.78 in)

- C:
  - 4 mm; 15 Nm (11.06 lbf ft)
- 1. Using an Allen key, loosen the set screws on the rope weight. Note: The setscrews have a clamping coating in order to prevent them from becoming loose accidentally. A higher torque is therefore required to loosen the screws.
- 2. Remove the released rope from the weight.
- 3. Measure off the new rope length.
- 4. At the point to be shortened, wrap adhesive tape around the rope to prevent it from fraying.
- 5. Saw off the rope at a right angle or cut it off with a bolt cutter.
- 6. Insert the rope completely into the weight.
- 7. Screw the setscrews back into place. Due to the clamping coating of the setscrews, it is not necessary to apply a locking compound.

### Entering the new probe length

After shortening the probe:

**1.** Go to the **Probe settings** submenu and perform a probe length correction.

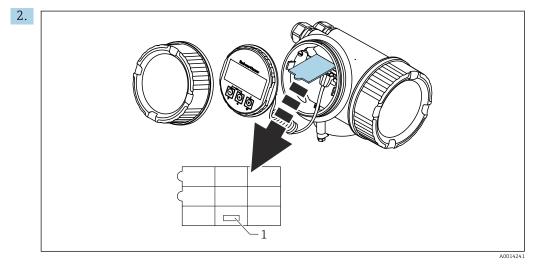


*1 Field for the new probe length* 

For documentation purposes, enter the new probe length into the quick reference guide which can be found in the electronics housing behind the display module.

## 6.2.3 Mounting the device

### Mounting devices with a threaded connection

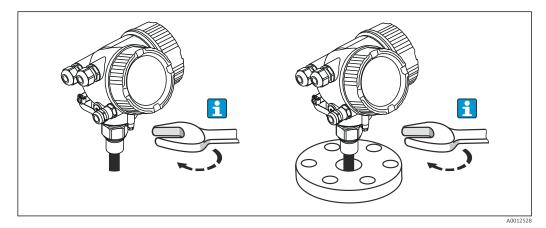

Screw the device with the threaded connection into a sleeve or flange and then secure it to the process vessel via the sleeve/flange.

- When screwing into place, turn by the hex bolt only:
  - Thread 3/4": 💉 36 mm
  - Thread 1-1/2": 💉 55 mm
  - Maximum permissible tightening torque:
    - Thread 3/4": 45 Nm
    - Thread 1-1/2": 450 Nm
  - Recommended torque when using the supplied aramid fiber seal and a process pressure of 40 bar (only FMP51, no seal is included with FMP54):
    - Thread 3/4": 25 Nm
    - Thread 1-1/2": 140 Nm
  - When installing in metal vessels, ensure there is good metal contact between the process connection and the vessel.

### Mounting devices with a flange


If a seal is used to mount the device, use uncoated metal screws to ensure good electrical contact between the process flange and the probe flange.

### Mounting rope probes

### NOTICE

Electrostatic discharge can damage the electronics.

• Ground the housing before lowering the rope probe into the vessel.

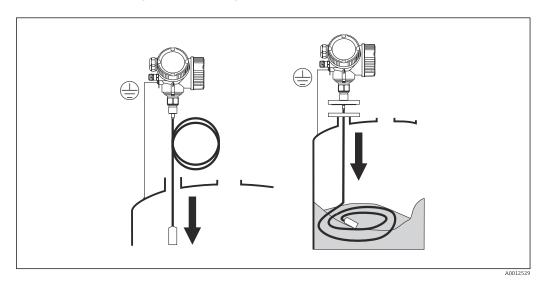

Pay attention to the following when introducing the rope probe into the vessel:

- Uncoil the rope slowly and lower it carefully into the vessel.
- Make sure the rope does not bend or buckle.
- Avoid uncontrolled swinging of the weight, as this could damage internal fittings in the vessel.

## Mounting rope probes in a partially filled silo

If a silo is retrofitted with a Levelflex, it is not always possible to empty the silo. If the vessel is at least 2/3 empty, it is possible to mount the rope probe even in a partially filled silo. In this case, if possible perform a visual inspection after mounting: the rope should not become tangled or knotted when the silo is emptied. The probe rope must hang fully extended before an accurate measurement can be performed.

### 6.2.4 Mounting the "Sensor, remote" version

This section only applies for devices with the version "Probe design" = "Sensor, remote" (feature 600, version MB/MC/MD).

The following is included in the delivery with the version "Probe design" = "Remote":

- The probe with process connection
- The electronics housing
- The mounting bracket for mounting the electronics housing on a wall or post
- The connection cable (length as ordered). The cable has one straight plug and one plug angled at 90°. Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.


## **A**CAUTION

Mechanical stress can damage the plugs of the connection cable or cause them to become loose.

- Mount the probe and the electronics housing securely before connecting the connecting cable.
- ► Lay the connecting cable in such a way that it is not exposed to mechanical stress. Minimum bending radius: 100 mm (4 in).
- ▶ When connecting the cable, connect the straight plug before you connect the angled plug. Torque for the union nuts of both plugs: 6 Nm.
- The probe, electronics and connection cable are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

In the event of strong vibrations, a locking compound, e.g. Loctite 243, can also be used on the plug-in connectors.

### Mounting the electronics housing

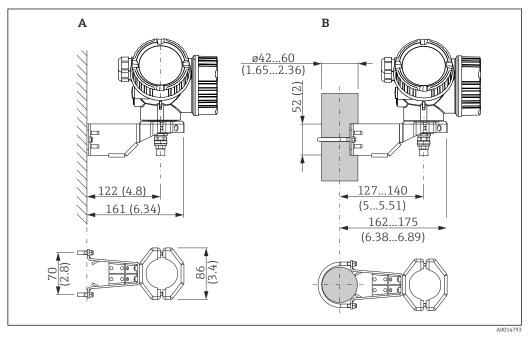


I2 Mounting the electronics housing with the mounting bracket. Unit of measurement mm (in)

- A Wall mounting
- B Post mounting

### Connecting the connecting cable




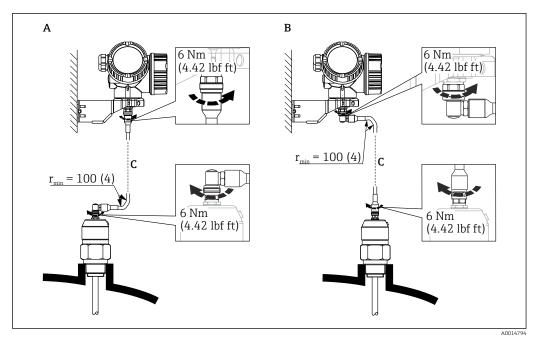

- I3 Connecting the connecting cable. The cable can be connected in the following ways:. Unit of measurement mm (in)
- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

## 6.2.5 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

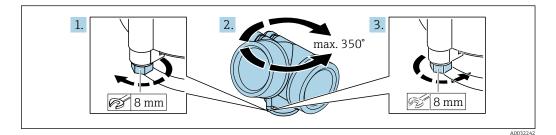

- **1.** Unscrew the securing screw using an open-ended wrench.
- 2. Rotate the housing in the desired direction.
- **3.** Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).


### 6.2.6 Turning the display

#### Opening the cover

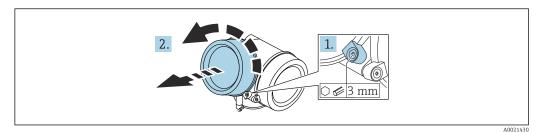


- 1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
- 2. Unscrew the electronics compartment cover and check the cover seal; replace it if necessary.


#### Turning the display module

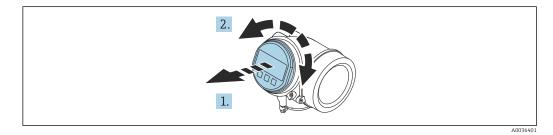

- 1. Pull out the display module with a gentle rotational movement.
- 2. Turn the display module to the desired position: Max.  $8 \times 45^{\circ}$  in each direction.
- **3.** Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

#### Closing the cover of the electronics compartment

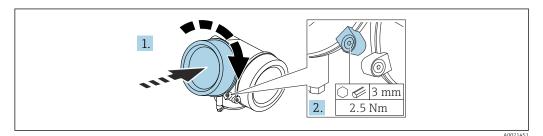

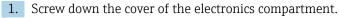

2. Turn the securing clamp 90° in the clockwise direction and, using an Allen key (3 mm), tighten the screw of the securing clamp on the electronics compartment cover with 2.5 Nm.

### 6.3 Post-installation check

□ Is the device undamaged (visual inspection)?

□ Does the device comply with the measuring point specifications?

- Process temperature
- Process pressure
- Ambient temperature range
- Measuring range

 $\Box$  Are the measuring point identification and labeling correct (visual inspection)?

- $\hfill\square$  Is the device adequately protected against precipitation and direct sunlight?
- □Is the device adequately protected against impact?

□Are all mounting and safety screws securely tightened?


 $\Box$  Is the device properly secured?

### 7 Electrical connection

### 7.1 Connecting requirements

### 7.1.1 Terminal assignment

Terminal assignment, 4-wire: 4 to 20 mA HART (90 to 253 V<sub>AC</sub>)

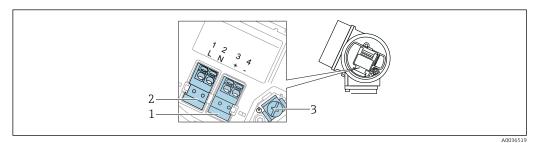


 $\blacksquare$  14 Terminal assignment, 4-wire: 4 to 20 mAHART (90 to 253  $V_{AC}$ )


- 1 Connection 4 to 20 mA HART (active): terminals 3 and 4
- 2 Connection, supply voltage: terminals 1 and 2
- 3 Terminal for cable shield

### **A**CAUTION


#### To ensure electrical safety:

- ► Do not disconnect the protective ground connection.
- Disconnect the device from the supply voltage before disconnecting the protective ground.
- Connect protective ground to the inner ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the outer ground terminal.

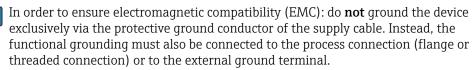

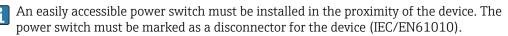


### Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

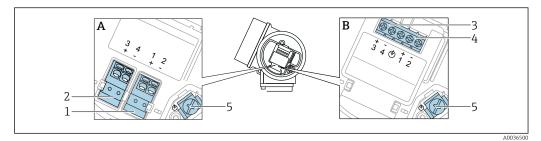

🖻 15 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

- A Without integrated overvoltage protection
- *B* With integrated overvoltage protection
- 1 Connection, PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection
- 2 Connection, switch output (open collector): terminals 3 and 4, without integrated overvoltage protection
- 3 Connection, switch output (open collector): terminals 3 and 4, with integrated overvoltage protection
- 4 Connection, PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection
- 5 Terminal for cable shield


#### Block diagram PROFIBUS PA / FOUNDATION Fieldbus

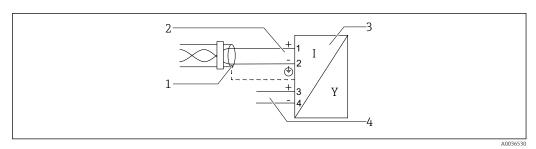


I6 Block diagram PROFIBUS PA / FOUNDATION Fieldbus

- 1 Cable screen; observe cable specification
- 2 Connection PROFIBUS PA / FOUNDATION Fieldbus
- 3 Measuring device
- 4 Switch output (open collector)

#### Connection examples for the switch output

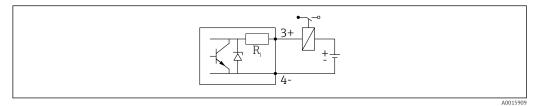

■ 17 Connection of a relay

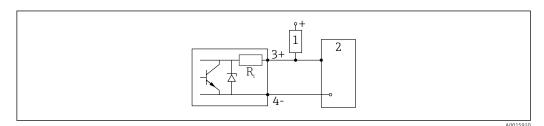

- 18 Connection to a digital input
- 1 Pull-up resistor
- 2 Digital input

For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or pull-up resistor) of  $< 1000 \Omega$ .

### 7.1.2 Cable specification

- Devices without integrated overvoltage protection
   Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- Devices with integrated overvoltage protection
   Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)
- For ambient temperature  $T_U \ge 60$  °C (140 °F): use cable for temperature  $T_U + 20$  K.


#### PROFIBUS

Use a twisted, screened two-wire cable, preferably cable type A.

For further information on the cable specifications, see Operating Instructions BA00034S "PROFIBUS DP/PA: Guidelines for planning and commissioning", PNO Guideline 2.092 "PROFIBUS PA User and Installation Guideline" and IEC 61158-2 (MBP).

### 7.1.3 Device plug

In the case of the device versions with a plug, the housing does not need to be opened to connect the signal cable.

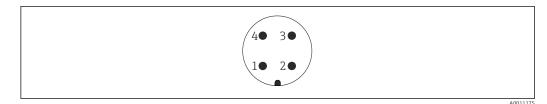

- 19 Pin assignment of M12 plug
- 1 Signal +
- 2 Not assigned
- 3 Signal -
- 4 Ground

### 7.1.4 Supply voltage

### **PROFIBUS PA, FOUNDATION Fieldbus**

"Power supply; output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage
<b>E:</b> 2-wire; FOUNDATION Fieldbus, switch output <b>G:</b> 2-wire; PROFIBUS PA, switch output	<ul> <li>Non-hazardous</li> <li>Ex nA</li> <li>Ex nA[ia]</li> <li>Ex ic</li> <li>Ex ic[ia]</li> <li>Ex d[ia] / XP</li> <li>Ex ta / DIP</li> <li>CSA GP</li> </ul>	9 to 32 V <sup>3)</sup>
	<ul> <li>Ex ia / IS</li> <li>Ex ia + Ex d[ia] / IS + XP</li> </ul>	9 to 30 V <sup>3)</sup>

1) Feature 020 in the product structure

2) Feature 010 in the product structure

3) Input voltages up to 35 V do not destroy the device.

Polarity-dependent	No
FISCO/FNICO compliant according to IEC 60079-27	Yes

### 7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse  $8/20 \ \mu$ s), an overvoltage protection module has to be installed.

### Integrated overvoltage protection module

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel $2 \times 0.5 \Omega$ max.	
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz < 1.5 pF	
Nominal arrest impulse voltage (8/20 µs) 10 kA	

### External overvoltage protection module

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

For detailed information please refer to the following documents:

- HAW562: TI01012K
- HAW569: TI01013K

### 7.2 Connecting the device

### **WARNING**


### **Explosion Hazard!**

- Observe applicable national standards.
- Comply with the specifications in the Safety Instructions (XA).
- ► Use specified cable glands only.
- Check to ensure that the power supply matches the information on the nameplate.
- Switch off the power supply before connecting the device.
- Connect the potential matching line to the outer ground terminal before applying the power supply.

### Required tools/accessories:


- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.

### 7.2.1 Opening cover

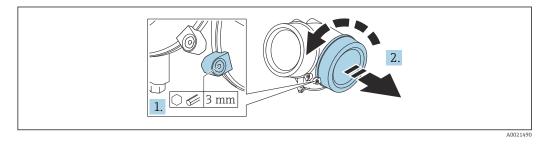

- 1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
- 2. Unscrew the connection compartment cover and check the cover seal; replace it if necessary.

### 7.2.2 Connecting

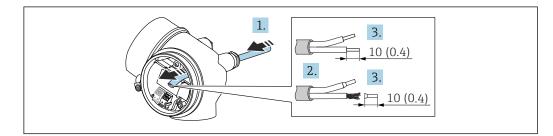


<sup>☑ 20</sup> Engineering unit: mm (in)

**1.** Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.

- 2. Remove the cable sheath.
- **3.** Strip the cable ends 10 mm (0.4 in). In the case of stranded cables, also fit wire end ferrules.
- 4. Firmly tighten the cable glands.


5. Connect the cable according to the terminal assignment.

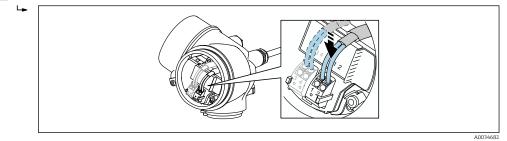

6. If using shielded cables: Connect the cable shield to the ground terminal.

### 7.2.3 Plug-in spring-force terminals

The electrical connection of device versions without an integrated overvoltage protection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

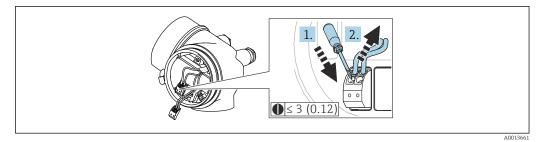


☑ 21 Engineering unit: mm (in)

To remove the cable from the terminal again:

- 1. Using a flat-blade screwdriver  $\leq$  3 mm, press down on the slot between the two terminal holes
- 2. Simultaneously pull the cable end out of the terminal.

### 7.2.4 Closing the cover of the connection compartment

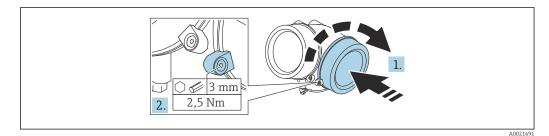

- 1. Screw down the cover of the connection compartment.
- 2. Turn the securing clamp 90 ° in the clockwise direction and, using an Allen key (3 mm), tighten the screw of the securing clamp on the connection compartment cover with 2.5 Nm.

### 7.3 Post-connection check

□ Is the device or cable undamaged (visual inspection)?

□ Do the cables used comply with the requirements?

□ Do the mounted cables have adequate strain relief?

□Are all the cable glands installed, firmly tightened and leak-tight?

Does the supply voltage match the specifications on the nameplate?

□ Is the terminal assignment correct?

□If necessary, has a protective ground connection been established?

 $\hfill\square$  If supply voltage is present, is the device ready for operation and do values appear on the display module?

□ Are all the housing covers installed and tightened?

 $\Box$  Is the securing clamp firmly tightened?


# 8 Operation methods

### 8.1 Overview

# 8.1.1 Local operation

Operation with	Pushbuttons	Touch Control
Order code for "Display; Operation"	Option <b>C</b> "SD02"	Option <b>E</b> "SD03"
Display elements	A0036312 4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and st	tatus variables can be individually configured
	Permitted ambient temperature for the display: The readability of the display may be impaired a range.	
Operating elements	local operation with 3 push buttons ( $\oplus$ , $\Box$ , $\mathbb{E}$ )	external operation via touch control; 3 optical keys: 🛨, 🖃, 🗉
	Operating elements also accessible in various hazardous areas	
Additional functionality	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitte	ed to another device using the display module.

### 8.1.2 Operation with remote display and operating module FHX50

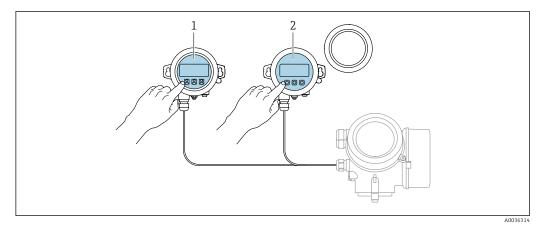


#### ■ 22 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

### 8.1.3 Remote operation


#### Via PROFIBUS PA protocol

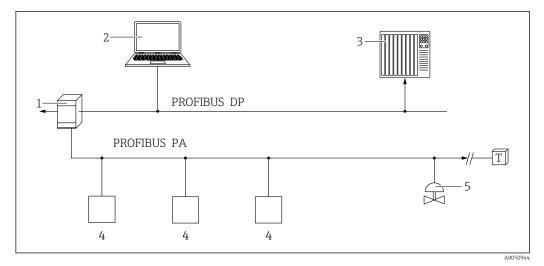

1 Segment coupler

- 2 Computer with PROFIusb and operating tool (e.g. DeviceCare/FieldCare )
- 3 PLC (programmable logic controller)
- 4 Transmitter
- 5 Additional functions (valves etc.)

### Via service interface (CDI)

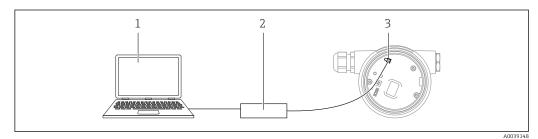

- 1 Computer with FieldCare/DeviceCare operating tool
- 2 Commubox FXA291
- 3 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)

# 8.2 Structure and function of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the local display
Commissioning <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
Setup	Parameter 1  Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	Advanced setup	<ul> <li>Contains additional submenus and parameters:</li> <li>For more customized configuration of the measurement (adaptation to special measuring conditions).</li> <li>For converting the measured value (scaling, linearization).</li> <li>For scaling the output signal.</li> </ul>
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook 3)	Contains the last 20 messages (which are no longer active).
	Device information	Contains information for identifying the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Is used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
	Heartbeat <sup>4)</sup>	Contains all the wizards for the Heartbeat Verification and Heartbeat Monitoring application packages.
<b>Expert</b> <sup>5)</sup> Contains all the parameters of the device (including those that are already contained in one of the other menus). This menu is	System	Contains all higher-level device parameters that do not pertain either to the measurement or to measured value communication.
organized according to the function blocks of the device.	Sensor	Contains all parameters needed to configure the measurement.
The parameters of the Expert menu are described in: GP01001F (PROFIBUS PA)	Output	Contains all parameters needed to configure the switch output (PFS).

### 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) If you are operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display"
- 2)
- Only if operating via an FDT/DTM system Only available if operating via the local display 3)
- 4)
- Only available if operating via DeviceCare or FieldCare When you call up the "Expert" menu, you are always asked for an access code. If a customer-specific access 5) code has not been defined, "0000" must be entered.

#### 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access (Verweisziel existiert nicht, aber @y.link.required='true').

Access authorization	to	parameters
----------------------	----	------------

User role	Read access		Write	access
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	V	V	V	
Maintenance	V	V	V	V

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

The user role with which the user is currently logged on is indicated by the Access status display parameter (for display operation) or Access status tooling parameter (for tool operation).

#### 8.2.3 **Data access - Security**

#### Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

### Define access code via local display

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code  $\rightarrow$  Define access code
- 2. Define a max. 4-digit numeric code as an access code.
- 3. Repeat the numeric code in the **Confirm access code** parameter to confirm it.
  - └ The B -symbol appears in front of all write-protected parameters.

### Define access code via operating tool (e.g. FieldCare)

- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code
- 2. Define a max. 4-digit numeric code as an access code.
  - └ Write protection is active.

#### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

- If write access is activated via an access code, it can only be deactivated again via this access code  $\rightarrow \square 51$ .
  - In the "Description of Device Parameters" documents, each write-protected parameter is identified with the 🖻-symbol.

#### Disabling write protection via access code

If the B symbol appears in front of a parameter on the local display, the parameter is write-protected by a device-specific access code and its value cannot currently be changed via the local display  $\rightarrow$  B 50.

The locking of the write access via local operation can be disabled by entering the devicespecific access code.

1. After you press E, the input prompt for the access code appears.

2. Enter the access code.

→ The 🖻-symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

#### Deactivation of the write protection via access code

#### Via local display

Navigate to: Setup → Advanced setup → Administration → Define access code

2. Enter **0000**.

- 3. Repeat **0000** in the **Confirm access code** parameter to confirm.
  - └ The write protection is deactivated. Parameters can be changed without entering an access code.

#### Via an operating tool (e.g. FieldCare)


- **1.** Navigate to: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code
- 2. Enter **0000**.
  - └ The write protection is deactivated. Parameters can be changed without entering an access code.

#### Write protection via write protection switch


Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display" parameter**.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):


- Via local display
- Via PROFIBUS PA protocol
- Via PROFIBUS DP protocol

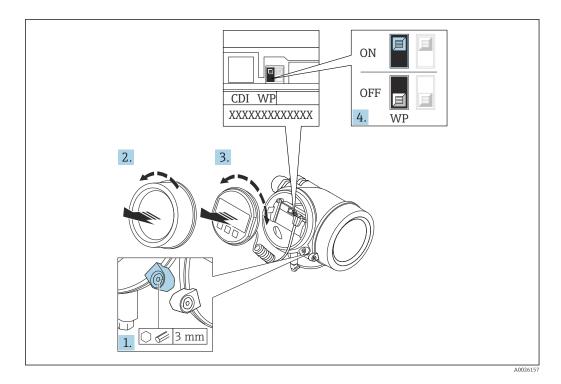

- 1. Loosen the securing clamp.
- 2. Unscrew the electronics compartment cover.
- 3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.

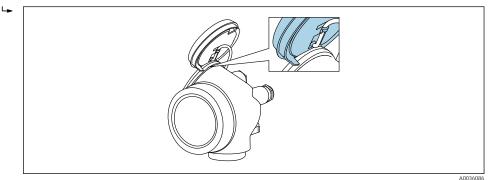

- 4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

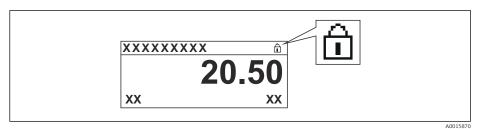

If hardware write protection is disabled, no option is displayed in the **Locking status** parameter. On the local display, the 🖻 symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

**5.** Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.

6. Reverse the removal procedure to reassemble the transmitter.

#### Enabling and disabling the keypad lock

Access to the entire operating menu via local operation can be locked via the keypad lock. When access is locked, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via a context menu.

Switching on the keypad lock

### SD03 display module only

- The keypad lock is switched on automatically:
- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### To activate the keylock manually:

1. The device is in the measured value display.

- Press E for at least 2 seconds.
- └ A context menu appears.
- 2. In the context menu select the **Keylock on** option.
  - └ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

#### Switching off the keypad lock

- 1. The keypad lock is switched on.
  - Press E for at least 2 seconds.
- 2. In the context menu select the **Keylock off** option.
  - └ The keypad lock is switched off.


#### Bluetooth<sup>®</sup> wireless technology

# Signal transmission via Bluetooth<sup>®</sup> wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*<sup>®</sup> wireless technology without the SmartBlue app
- Only one point-to-point connection between **one** sensor and **one** smartphone or tablet is established

### 8.3 Display and operating module

### 8.3.1 Display

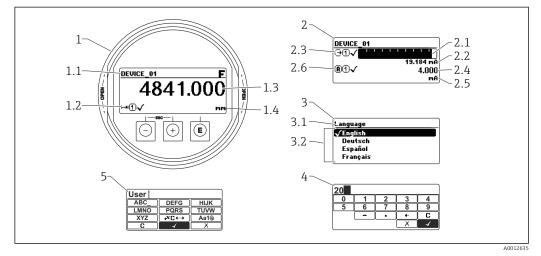

23 Display format on the display and operating module

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (bar graph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Parameter display (here: parameter with picklist)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Picklist;  $\blacksquare$  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

### Display symbols for the submenus

Symbol	Meaning
A0018367	<ul> <li>Display/operat.</li> <li>Is displayed:</li> <li>In the main menu next to the "Display/operat." selection</li> <li>In the header on the left in the "Display/operat." menu</li> </ul>
<b>J</b> A0018364	<ul><li>Setup</li><li>Is displayed:</li><li>In the main menu next to the "Setup" selection</li><li>In the header on the left in the "Setup" menu</li></ul>
A0018365	<ul><li>Expert</li><li>Is displayed:</li><li>In the main menu next to the "Expert" selection</li><li>In the header on the left in the "Expert" menu</li></ul>
<b>Č</b>	<ul> <li>Diagnostics</li> <li>Is displayed:</li> <li>In the main menu next to the "Diagnostics" selection</li> <li>In the header on the left in the "Diagnostics" menu</li> </ul>

### Status signals

Symbol	Meaning
F A0032902	<b>"Failure"</b> A device error has occurred. The measured value is no longer valid.
<b>C</b>	<b>"Function check"</b> The device is in the service mode (e.g. during a simulation).
<b>S</b> A0032904	<ul> <li>"Out of specification"</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration performed by the user (e.g. level outside the configured range)</li> </ul>
N 40032905	"Maintenance required" Maintenance is required. The measured value is still valid.

### Display symbols for locking status

Symbol	Meaning
A0013148	<b>Read-only parameter</b> The parameter shown is only for display purposes and cannot be edited.
6	Device locked
A0013150	<ul><li>In front of a parameter name: The device is locked via software and/or hardware.</li><li>In the header of the measured value screen: The device is locked via hardware.</li></ul>


### Measured value symbols

Symbol	Meaning
Measured values	
<b> ~~ </b>	Level
A0032892	
⊢►	Distance
A0032893	
G	Current output
A0032908	
A	Measured current
A0032894	
$\bigcirc$	Terminal voltage
A0032895	
	Electronics or sensor temperature
A0032896	
Measuring channels	
(1)	Measuring channel 1
A0032897	
0	Measuring channel 2
A0032898	
Status of the measured	value
	"Alarm" status
A0018361	The measurement is interrupted. The output assumes the defined alarm condition. A diagnostic message is generated.
$\wedge$	"Warning" status
A0018360	The device continues to measure. A diagnostic message is generated.

Key	Meaning		
	Minus key		
—	<i>In a menu, submenu</i> Moves the selection bar upwards in a picklist.		
A0018330	<i>In the text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).		
	Plus key		
+	<i>In a menu, submenu</i> Moves the selection bar downwards in a picklist.		
A0018329	<i>In the text and numeric editor</i> In the input mask, moves the selection bar to the right (forwards).		
	Enter key		
	<ul><li>For measured value display</li><li>Pressing the key briefly opens the operating menu.</li><li>Pressing the key for 2 s opens the context menu.</li></ul>		
E 40018328	<ul> <li>In a menu, submenu</li> <li>Pressing the key briefly: Opens the selected menu, submenu or parameter.</li> <li>Pressing the key for 2 s in a parameter: If present, opens the help text for the function of the parameter.</li> </ul>		
	<ul> <li>In the text and numeric editor</li> <li>Pressing the key briefly:</li> <li>Opens the selected group.</li> <li>Carries out the selected action.</li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>		
	Escape key combination (press keys simultaneously)		
-++ +	<ul> <li>In a menu, submenu</li> <li>Pressing the key briefly:</li> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> <li>Pressing the key for 2 s returns you to the measured value display ("home position").</li> </ul>		
	<i>In the text and numeric editor</i> Closes the text or numeric editor without applying changes.		
<b>–</b> +E	Minus/Enter key combination (press and hold down the keys simultaneously)		
A0032910	Reduces the contrast (brighter setting).		
F)+F	Plus/Enter key combination (press and hold down the keys simultaneously)		
A0032911	Increases the contrast (darker setting).		

## 8.3.2 Operating elements

### 8.3.3 Entering numbers and text

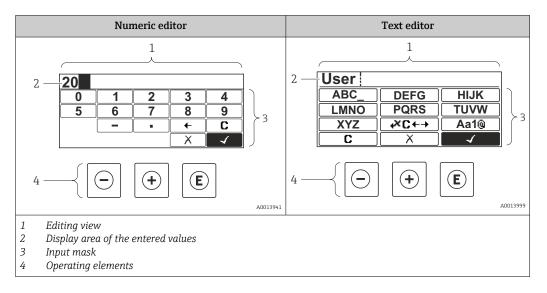

### Input mask

The following input and operating symbols are available in the input mask of the numeric and text editor:

#### Numeric editor

Symbol	Meaning	
	Selection of numbers from 0 to 9.	
A0013998		
	Inserts decimal separator at the cursor position.	
A0016619		
_	Inserts minus sign at the cursor position.	
A0016620		
	Confirms selection.	
A0013985		
←	Moves the input position one position to the left.	
A0016621		
X	Exits the input without applying the changes.	
A0013986		
С	Clears all entered characters.	
A0014040		

### Text editor

Symbol	Meaning
(ABC_)  (XYZ) A0013997	Selection of letters from A to Z

(Aa1@)	Toggle • Between upper-case and lower-case letters • For entering numbers • For entering special characters
	Confirms selection.
	Switches to the selection of the correction tools.
X 	Exits the input without applying the changes.
	Clears all entered characters.

*Text correction under* **₩C+→** 

Symbol	Meaning
C	Clears all entered characters.
A0032907	
-	Moves the input position one position to the right.
A0018324	
-	Moves the input position one position to the left.
A0018326	
Deletes one character immediately to the left of the input position.	
A0032906	

### 8.3.4 Opening the context menu

Using the context menu, the user can call up the following menus quickly and directly from the operational display:


- Setup
- Conf. backup disp.
- Envelope curve
- Keylock on

### Calling up and closing the context menu

The user is in the operational display.

1. Press E for 2 s.

└ The context menu opens.

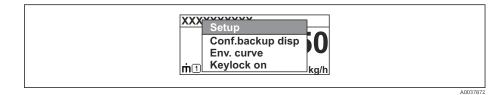

2. Press - + + simultaneously.

└ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press  $\pm$  to navigate to the desired menu.

3. Press 🗉 to confirm the selection.

└ The selected menu opens.

### 8.3.5 Envelope curve display on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be shown on the display and operating module:

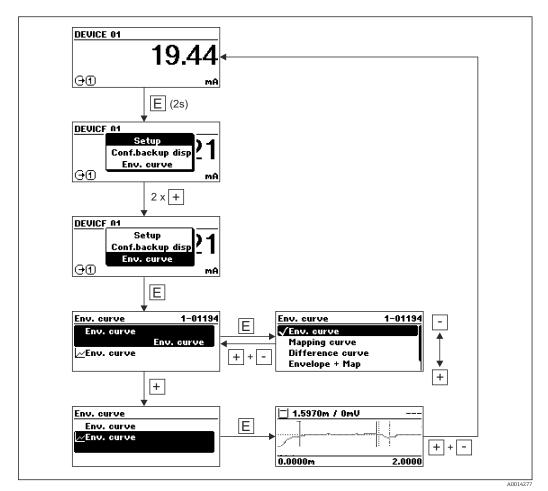


# 9 Integration into a PROFIBUS network

### 9.1 Overview of device master file (GSD)

Manufacturer ID	17 (0x11)
Ident number	0x1558
Profile version	3.02
GSD file	Information and files available at:
GSD file version	<ul><li>www.endress.com</li><li>www.profibus.org</li></ul>

### 9.2 Setting the device address

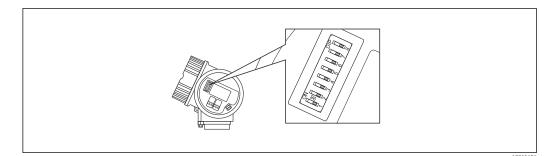

■ 24 Address switch in the connection compartment


### 9.2.1 Hardware addressing

1. Set switch 8 to the "OFF" position.

2. Using switches 1 to 7, set the address as indicated in the table below.

The change of address takes effect after 10 seconds. The device is restarted.

Switch	1	2	3	4	5	6	7
Value in "ON" position	1	2	4	8	16	32	64
Value in "OFF" position	0	0	0	0	0	0	0

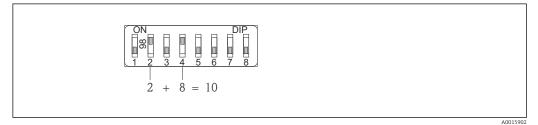


25 Example of hardware addressing; switch 8 is set to the "OFF" position; switches 1 to 7 define the address.

### 9.2.2 Software addressing

1. Set switch 8 to "ON".

- **2.** The device restarts automatically and reports the current address (factory setting: 126).
- 3. Configuring the address via the operating menu: Setup  $\rightarrow$  Device address

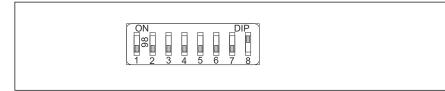

■ 26 Example of software addressing; switch 8 is set to the "ON" position; the address is defined in the operating menu (Setup  $\rightarrow$  Device address).

### 10 Commissioning using the Commissioning Wizard

A Wizard is provided in FieldCare and DeviceCare  $^{1)}$  that guides the user through the initial commissioning process.

1. Connect the device with FieldCare or DeviceCare.

2. Open the device in FieldCare or DeviceCare.

← The dashboard (homepage) of the device is displayed:

Wizard			
Commissioning SIL/WHG confirmation	1		
Instrument health status			
ОК			
Process variables - Device tag: Level	flex		
Process variables - Device tag: Level	Iflex	Level linearized	Thickness upper layer
	_		
	2000,000 	Level linearized 50,604 %	Thickness upper layer
Interface linearized	2000,000 1600,000 	50,604 "	
	2000,000 1600,000 1200,000		

- 1 "Commissioning" button calls up the wizard
- 3. Click "Commissioning" to launch the Wizard.
- 4. Enter the appropriate value in each parameter or select the appropriate option. These values are written directly to the device.
- 5. Click "Next" to go to the next page.
- 6. Once all the pages have been completed, click "Finish" to close the Wizard.
- If you cancel the Wizard before all the necessary parameters have been entered, the device may be in an undefined state. In such situations, it is advisable to reset the device to the factory default settings.

A0025866

<sup>1)</sup> DeviceCare is available for download at www.software-products.endress.com. To download the software, it is necessary to register in the Endress +Hauser software portal.


# 11 Commissioning via operating menu

### 11.1 Function check


Before commissioning your measuring point, ensure that the post-installation and postconnection checks have been performed:

### 11.2 Setting the operating language

Factory setting: English or ordered local language

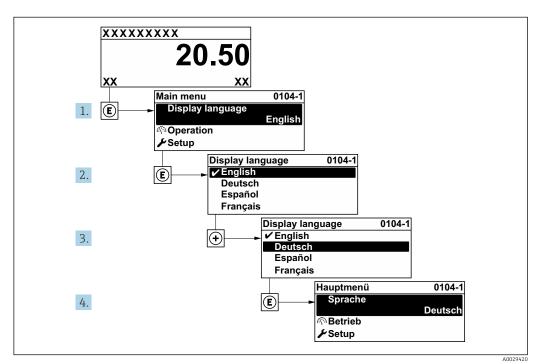

■ 27 Taking the example of the local display

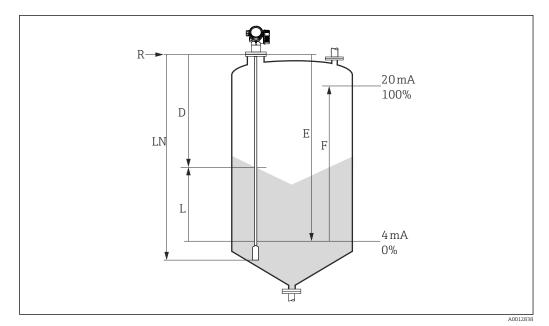

### 11.3 Configuring level measurement

28 Configuration parameters for level measurement in bulk solids

- LN Probe length
- R Reference point of measurement
- D Distance
- L Level
- *E Empty calibration (= zero point)*
- F Full calibration (= span)

If the  $\varepsilon_r$  value is lower than 7 in the case of rope probes, measurement is not possible in the area of the tensioning weight. The empty calibration *E* should not exceed *LN* - 250 mm (*LN* - 10 in) in these cases.

- 1. Navigate to: Setup  $\rightarrow$  Device tag
  - ← Enter device tag.
- 2. Navigate to: Setup  $\rightarrow$  Device address
  - Enter the bus address of the device (only for software addressing).
- 3. Navigate to: Setup  $\rightarrow$  Distance unit
  - └ Select the distance unit.
- 4. Navigate to: Setup  $\rightarrow$  Bin type
  - Select bin type.
- 5. Navigate to: Setup  $\rightarrow$  Empty calibration
  - └ Specify the empty distance E (distance from reference point R to 0% mark).
- 6. Navigate to: Setup  $\rightarrow$  Full calibration
  - ← Specify the full distance F (distance from the 0% mark to the 100% mark).
- 7. Navigate to: Setup  $\rightarrow$  Level
  - └ Displays the measured level L.
- 8. Navigate to: Setup  $\rightarrow$  Distance
  - └ Displays the distance D between the reference point R and the level L.
- 9. Navigate to: Setup  $\rightarrow$  Signal quality
  - └ Displays the signal quality of the analyzed level echo.

**10.** Operation via local display:

Navigate to: Setup  $\rightarrow$  Mapping  $\rightarrow$  Confirm distance

← Compare the distance displayed with the actual value to start recording an interference echo map (where applicable).

**11.** Operation via operating tool:

Navigate to: Setup  $\rightarrow$  Confirm distance

← Compare the distance displayed with the actual value to start recording an interference echo map (where applicable).

### 11.4 Recording the reference envelope curve

After the measurement has been configured, it is recommended to record the current envelope curve as a reference envelope curve. This can then be used later for diagnostic purposes. The **Save reference curve** parameter is used to record the envelope curve.

#### Path in the menu

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Envelope diagnostics  $\rightarrow$  Save reference curve

#### Meaning of the options

- No
  - No action
- Yes

The current envelope curve is saved as a reference curve.

This submenu is only visible for the "Service" user role in devices supplied with software version 01.00.zz.

The reference envelope curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. The "Load Reference Curve" function in FieldCare is used for this.

🖻 29 "Load Reference Curve" function

## 11.5 Configuring the local display

### 11.5.1 Factory setting of local display for level measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Level linearized	Level linearized
Value 2 display	Distance	Distance
Value 3 display	Current output 1	Current output 1
Value 4 display	None	Current output 2

### 11.5.2 Adjusting the local display

The local display can be adjusted in the following submenu: Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display

### 11.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and the options available.

### Path in the menu

 $\mathsf{Setup} \to \mathsf{Advanced} \ \mathsf{setup} \to \mathsf{Configuration} \ \mathsf{backup} \ \mathsf{display} \to \mathsf{Configuration} \ \mathsf{management}$ 

### Meaning of the options

Cancel

No action is executed and the user exits the parameter.

Execute backup

A backup copy of the current device configuration is saved from the HistoROM (integrated in the device) to the display module of the device.

Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

Duplicate

The transmitter configuration of the device is duplicated to another device using the display module. The following parameters, which characterize the individual measuring point are **not** transferred: Medium type

Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of the comparison is displayed in the **Comparison result** parameter.

Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

If an existing backup copy is restored on a device other than the original device using the **Restore** option, in some cases individual device functions may not be available. In some cases it is also not possible to restore the original state by resetting to the "as-delivered" state.

The **Duplicate** option should always be used to copy the configuration to another device.

### **11.7** Protecting settings from unauthorized access

The settings can be protected from unauthorized access in two ways:

- Locking via parameters (software locking)
- Locking via write protection switch (hardware locking)

# 12 Diagnostics and troubleshooting

## 12.1 General troubleshooting

### 12.1.1 General errors

Error	Possible cause	Solution
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul> <li>Increase contrast by pressing ± and E simultaneously.</li> <li>Decrease contrast by pressing Ξ and E simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated	Electromagnetic interference	Check grounding of the device.
on the display when starting the device or connecting the display.	Broken display cable or display plug.	Replace display.
Duplication of parameters via display from one device to another not working. Only the "Save" and "Cancel" options are available.	Display with backup is not properly detected if a data backup was not carried out on the new device previously.	Connect display (with backup) and restart device.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parameter configuration error	Check and correct the parameter configuration.


### 12.1.2 Parametrization errors

Problem	Possible cause	Remedy
Measured value is incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul> <li>Check the Empty calibration parameter (→ ≧ 108) and correct if necessary.</li> <li>Check the Full calibration parameter (→ ≧ 108) and correct if necessary.</li> <li>Check the linearization and correct if necessary (Linearization submenu (→ ≌ 124)).</li> </ul>
	If measured distance (Setup → Distance) does not match the real distance: An interference echo is present.	Carry out mapping ( <b>Confirm distance</b> parameter ( $\rightarrow \triangleq 111$ )).
No change of measured value on filling/emptying	An interference echo is present.	Carry out mapping ( <b>Confirm distance</b> parameter ( $\rightarrow \textcircled{B} 111$ )).
	Buildup at the probe.	Clean the probe.
	Error in the echo tracking.	Deactivate echo tracking (Expert → Sensor → Echo tracking → Evaluation mode = <b>History off</b> ).
Echo lost diagnostic message appears after the supply voltage is switched on.	Noise level too high during initialization phase.	Enter <b>Empty calibration</b> parameter $( \rightarrow \square 108)$ again.
Device displays a level when the tank is empty.	Incorrect probe length	<ul> <li>Perform probe length correction (Confirm probe length parameter (→</li></ul>
Wrong slope of the level over the entire measuring range	Wrong bin property selected.	Select the correct <b>Bin type</b> parameter $(\rightarrow \cong 107)$ .

## 12.2 Diagnostic information on local display

### 12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

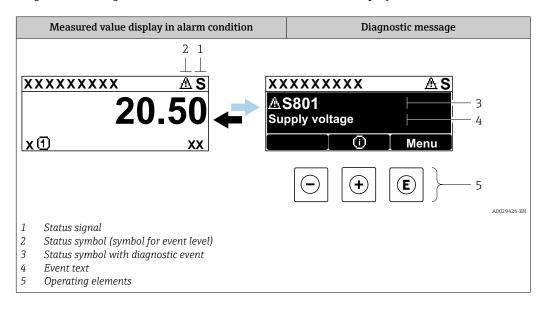

### Status signals


A0032902	<b>"Failure (F)" option</b> A device error has occurred. The measured value is no longer valid.
<b>C</b>	<b>"Function check (C)" option</b> The device is in the service mode (e.g. during a simulation).
<b>S</b> A0032904	<ul> <li>"Out of specification (S)" option</li> <li>The device is operated:</li> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration performed by the user (e.g. level outside the configured range)</li> </ul>
M	"Maintenance required (M)" option Maintenance is required. The measured value is still valid.

### Status symbol (symbol for event level)

<ul> <li>"Alarm" status</li> <li>The measurement is interrupted. The signal outputs adopt the defined alarm conditidiagnostic message is generated.</li> </ul>	
	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### Diagnostic event and event text

The fault can be identified by means of the diagnostic event. The event text helps you by providing information about the fault. In addition, the associated status symbol is displayed in front of the diagnostic event.

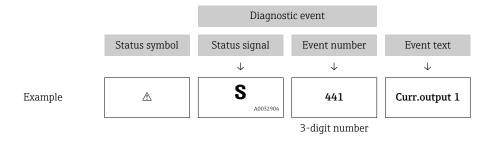


If two or more diagnostic events occur simultaneously, only the diagnostic message with the highest priority is shown. Additional queued diagnostic messages can be shown in the **Diagnostic list** submenu.

Past diagnostic messages that are no longer pending are shown as follows:


- On the local display:
  - In the **Event logbook** submenu
- In FieldCare:
  - Via the "Event List /HistoROM" function.

### **Operating elements**

Operating functions in menu, submenu		
÷	+ Plus key Opens the message about the remedial measures.	
E	Enter key Opens the operating menu.	

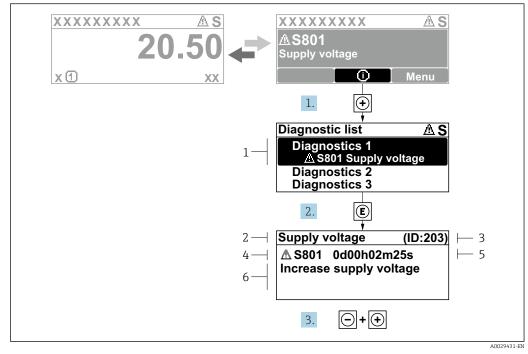

### 12.2.2 Calling up remedial measures

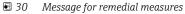

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time when error occurred
- 6 Remedial measures

The user is in the diagnostic message.

1. Press 🛨 (① symbol).

- ← The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\mathbb{E}$ .
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message about the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** or in **Previous diagnostics**.

- 1. Press E.
  - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press = +  $\pm$  simultaneously.
  - ← The message about the remedial measures closes.

## 12.3 Diagnostic event in the operating tool


If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

#### A: Via the operating menu

1. Navigate to the **Diagnostics** menu.

- └ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
- 2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

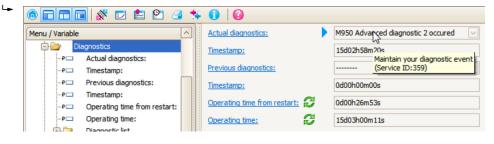


A tool tip with remedial measures for the diagnostic event appears.

#### B: Via the "Create documentation" function

1.		ቱ 🕕 🕜
	Menu / Variable	Value
	📄 🦢 Diagnostics 🛛 🖸	reate Documentation
	P□ Actual diagnostics:	


Select the "Create documentation" function.

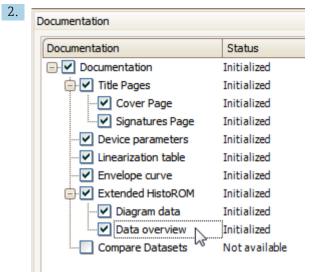

Make sure "Data overview" is marked.

- 3. Click "Save as ..." and save a PDF of the protocol.
  - └ The protocol contains the diagnostic messages and remedy information.

### C: Via the "Eventlist / Extended HistoROM" function

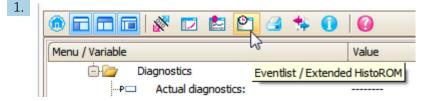

Select the "Eventlist / Extended HistoROM" function.



Select the "Load Eventlist" function.

└ The list of events, including remedy information, is shown in the "Data overview" window.

## 12.4 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

#### Navigation path

Diagnostics  $\rightarrow$  Diagnostic list

#### Calling up and closing the remedial measures

1. Press E.

└ The message for the remedial measures for the selected diagnostic event opens.

**2.** Press  $\Box$  +  $\pm$  simultaneously.

└ The message about the remedial measures closes.

# 12.5 List of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of s	ensor			
003	Broken probe detected	<ol> <li>Check map</li> <li>Check sensor</li> </ol>	F	Alarm
046	Build-up detected	Clean sensor	F	Alarm
104	HF cable	and check sealing 1. Dry HF cable connection 2. Change HF cable	F	Alarm
105	HF cable	<ol> <li>Tighten HF cable connection</li> <li>Check sensor</li> <li>Change HF cable</li> </ol>	F	Alarm
106	Sensor	<ol> <li>Check sensor</li> <li>Check HF cable</li> <li>Contact service</li> </ol>	F	Alarm
Diagnostic of e	lectronic		1	
242	Software incompatible	<ol> <li>Check software</li> <li>Flash or change main electronics module</li> </ol>	F	Alarm
252	Modules incompatible	<ol> <li>Check electronic modules</li> <li>Change I/O or main electronic module</li> </ol>	F	Alarm
261	Electronic modules	<ol> <li>Restart device</li> <li>Check electronic modules</li> <li>Change I/O Modul or main electronics</li> </ol>	F	Alarm
262	Module connection	dule connection       1. Check module connections         2. Change electronic modules		Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	<ol> <li>Restart device</li> <li>Change main electronic module</li> </ol>	F	Alarm
272	Main electronic failure	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
273	Main electronic failure	<ol> <li>Emergency operation via display</li> <li>Change main electronics</li> </ol>	F	Alarm
275	I/O module failure	Change I/O module	F	Alarm
276	I/O module failure	<ol> <li>Restart device</li> <li>Change I/O module</li> </ol>	F	Alarm
282	282 Data storage 1. Restart device 2. Contact service		F	Alarm
283	283 Memory content 1. Transfer data or 2. Contact service		F	Alarm
311	Electronic failure	1. Transfer data or reset deviceF2. Contact serviceF		Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	М	Warning
Diagnostic of c	onfiguration			
410	Data transfer	<ol> <li>Check connection</li> <li>Retry data transfer</li> </ol>	F	Alarm
412 Processing Download		Download active, please wait	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	<ol> <li>Restart device</li> <li>Contact service</li> </ol>	F	Alarm
438	Dataset	<ol> <li>Check data set file</li> <li>Check device configuration</li> <li>Up- and download new configuration</li> </ol>	М	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	С	Alarm
485	Simulation measured value	Deactivate simulation	С	Warning
494	Switch output simulation	Deactivate simulation switch output	С	Warning
495	Simulation diagnostic event	Deactivate simulation	С	Warning
497	Simulation block output	Deactivate simulation	С	Warning
585	Simulation distance	Deactivate simulation	С	Warning
Diagnostic of pr	rocess			
801	Energy too low	Increase supply voltage	S	Warning
825	Operating temperature	1. Check ambient temperature	S	Warning
825	Operating temperature	2. Check process temperature	F	Alarm
921	Change of reference	<ol> <li>Check reference configuration</li> <li>Check pressure</li> <li>Check sensor</li> </ol>	S	Warning
936	EMC interference	Check installation on EMC	F	Alarm
941	Echo lost	Check parameter 'DC value'	F	Alarm <sup>1)</sup>
942	In safety distance	<ol> <li>Check level</li> <li>Check safety distance</li> <li>Reset self holding</li> </ol>	S	Alarm <sup>1)</sup>
943	In blocking distance	Reduced accuracy Check level	S	Warning
944	Level range	Reduced accuracy Level at process connection	S	Warning
950	Advanced diagnostic 1 to 2 occured	Maintain your diagnostic event	М	Warning <sup>1)</sup>

1) Diagnostic behavior can be changed.

## 12.6 Event logbook

### 12.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu  $^{2)}$ .

<sup>2)</sup> This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

#### Navigation path

Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Event list

A maximum of 100 event messages can be displayed in chronological order.

Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - ∋: Event has occurred
  - 🕞: Event has ended
- Information event
  - $\odot$ : Event has occurred

#### Calling up and closing the remedial measures

1. Press 🗉

- ← The message for the remedial measures for the selected diagnostic event opens.
- **2.** Press  $\Box$  +  $\pm$  simultaneously.
  - ← The message about the remedial measures closes.

### 12.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

### Navigation path

Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

### 12.6.3 Overview of information events

Info number	Info name	
I1000	(Device ok)	
I1089	Power on	
I1090	Configuration reset	
I1091	Configuration changed	
I1092	Trend data deleted	
I1110	Write protection switch changed	
I1137	Electronic changed	
I1151	History reset	
I1154	Reset terminal voltage min/max	
I1155	Reset electronic temperature	
I1156	Memory error trend	
I1157	Memory error event list	

Info number	Info name	
I1185	Display backup done	
I1186	Restore via display done	
I1187	Settings downloaded with display	
I1188	Display data cleared	
I1189	Backup compared	
I1256	Display: access status changed	
I1264	Safety sequence aborted	
I1335	Firmware changed	
I1397	Fieldbus: access status changed	
I1398	CDI: access status changed	
I1512	Download started	
I1513	Download finished	
I1514	Upload started	
I1515	Upload finished	

Date	Firmware Modifications		Documentation (FMP56, FMP57, PROFIBUS)		
	version		Operating Instructions	Description of Device Parameters	Technical Information
07.2011	01.00.zz	Original software	BA01009F/00/EN/10.10	GP01001F/00/EN/10.10	TI01004F/00/EN/13.11
02.2015	01.01.zz	<ul> <li>Support of SD03</li> <li>Additional languages</li> <li>HistoROM functionality enhanced</li> <li>"Advanced Diagnostics" function block integrated</li> <li>Improvements and bugfixes</li> </ul>	BA01009F/00/EN/14.14 BA01009F/00/EN/15.16 <sup>1)</sup>	GP01001F/00/EN/13.14	TI01004F/00/EN/17.14 TI01004F/00/EN/20.16 <sup>1)</sup>

## 12.7 Firmware history

1) Contains information on the Heartbeat wizards available in the current DTM version for DeviceCare and FieldCare.

The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## 13 Maintenance

No special maintenance work is required.

## 13.1 Exterior cleaning

When cleaning the exterior, always use cleaning agents that do not corrode the surface of the housing and the seals.

## 13.2 General cleaning instructions

Dirt or buildup may form on the probe depending on the application. A thin, even layer has little impact on the measurement. Thick layers can dampen the signal and reduce the measuring range. Very uneven deposit formation or caking (e.g. due to crystallization) can result in incorrect measurements. In such cases, use a non-contact measuring principle, or regularly inspect the probe for contamination.

Cleaning with sodium hydroxide solution (e.g. in CIP procedures): if the coupling is wetted, larger measurement errors can occur than under reference operating conditions. Wetting can cause temporary incorrect measurements.

## 14 Repair

## 14.1 General information

### 14.1.1 Repair concept

Under the Endress+Hauser repair concept, devices have a modular design and repairs can be carried out by Endress+Hauser Service or by properly trained customers.

Spare parts are grouped into logical kits with the associated replacement instructions.

For more information on service and spare parts, please contact Endress+Hauser Service.

### 14.1.2 Repair of Ex-certified devices

### **WARNING**

**Incorrect repair can compromise electrical safety!** Explosion Hazard!

- Repairs to Ex-certified devices must be carried out by Endress+Hauser Service or by specialist personnel according to national regulations.
- Relevant standards and national regulations on hazardous areas, safety instructions and certificates must be observed.
- ► Use only original Endress+Hauser spare parts.
- Please note the device designation on the nameplate. Only identical parts may be used as replacements.
- Carry out repairs according to the instructions.
- Only the Endress+Hauser service team is permitted to modify a certified device and convert it to another certified version.

### 14.1.3 Replacing electronics modules

When electronics modules have been replaced the device does not need to be recalibrated as the parameters are saved in the HistoROM inside the housing. It may be necessary when replacing the main electronics to record a new interference echo suppression.

### 14.1.4 Replacing a device

Once a complete device has been replaced, the parameters can be transferred back into the device using one of the following methods:


- Using the display module Prerequisite: The configuration of the old device was saved previously to the display module.
- Via FieldCare

Prerequisite: The configuration of the old device was saved previously to the computer using FieldCare.

You can continue measuring without performing a new calibration. Only interference echo suppression may need to be carried out once again.

## 14.2 Spare parts

- Some replaceable measuring device components are identified by means of a spare part nameplate. This contains information about the spare part.
- In the connection compartment cover of the device there is a spare part nameplate which contains the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL to the W@M Device Viewer (www.endress.com/deviceviewer): All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

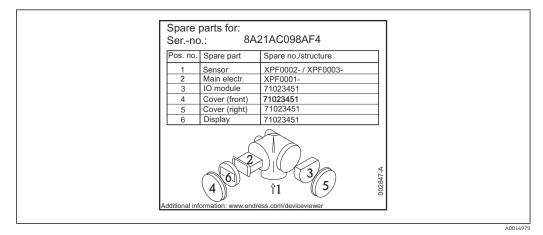

31 Example for spare part nameplate in the connection compartment cover

All Measuring device serial number:

- Located on the device and spare part nameplate.
- Can be read out via the "Serial number" parameter in the "Device information" submenu.

## 14.3 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the web page for information:

http://www.endress.com/support/return-material

- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

## 14.4 Disposal

# X


If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

# 15 Accessories


## 15.1 Device-specific accessories

### 15.1.1 Weather protection cover

The weather protection cover can be ordered together with the device via the "Accessory enclosed" product structure.

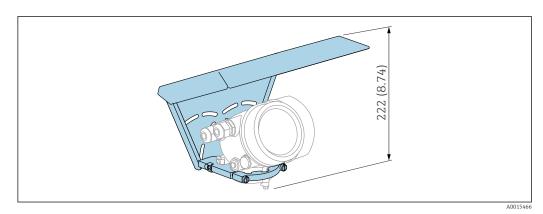


🗟 32 Height. Unit of measurement mm (in)

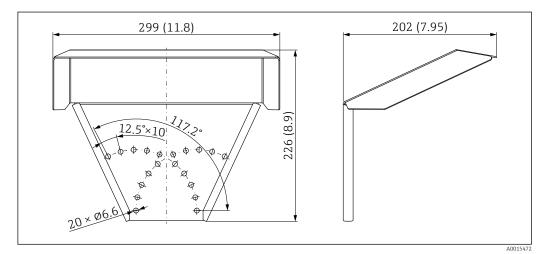

■ 33 Dimensions. Unit of measurement mm (in)

**Material** 316L

**Order number for accessories:** 71162242

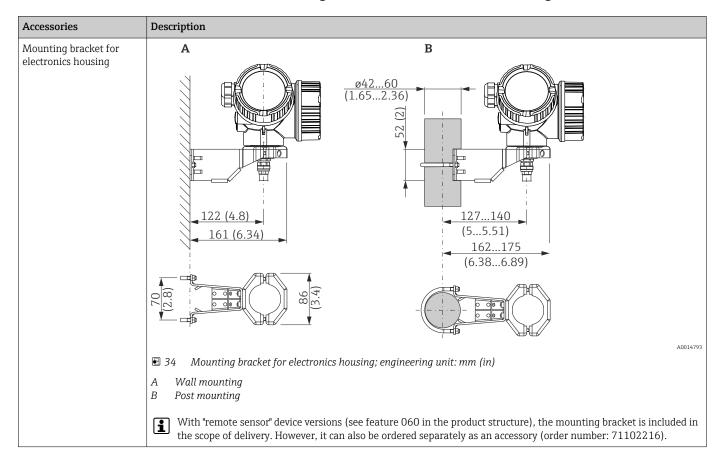

### 15.1.2 Mounting bracket for electronics housing


Accessories	Description	
Rod extension / centering device HMP40 Suitable for: FMP57 Permitted temperature at lower edge of nozzle: without centering disk: no restriction with centering disk: -40 to +150 °C (-40 to +302 °F) Additional information: SD01002F		A01355
	2 E	Extension rod Centering disk
	010	Approval:
	A	Non-hazardous area
	M	FM DIP Cl.II Div.1 Gr.E-G N.I., Zone 21,22
	P	CSA DIP Cl.II Div.1 Gr.G + coal dust N.I.
	S	FM Cl.I, II, III Div.1 Gr.A-G N.I., Zone 0,1,2,20,21,22
	U	CSA CI.I, II, III Div.1 Gr.A-G N.I., Zone 0,1,2
	1	ATEX II 1G
	2	ATEX II 1D
	020	Extension rod; height of nozzle:
	1	115mm; 150-250mm / 6-10"
	2	215mm; 250-350mm / 10-14"
	3	315mm; 350-450mm / 14-18"
	4	415mm; 450-550mm / 18-22"
	9	Special version; TSP no. to be specified
	030	Centering disk:
	A	Not selected
	В	DN40 / 1-1/2", inside-d. = 40-45mm, PPS
	С	DN50 / 2", inside-d. = 50-57mm, PPS
	D	DN80 / 3", inside-d. = 80-85mm, PPS
	E	DN80 / 3", inside-d. = 76-78mm, PPS
	G	DN100 / 4", inside-d. = 100-110mm, PPS
	Н	DN150 / 6", inside-d. = 152-164mm, PPS
	J	DN200 / 8", inside-d. = 210-215mm, PPS
	К	DN250 / 10", inside-d. = 253-269mm, PPS
	Y	Special version; TSP no. to be specified

## 15.1.3 Rod extension / centering device

Accessories	Description
Mounting kit, insulated suitable for • FMP56 • FMP57	A0013566
	1 Insulation sleeve 2 Eye bolt
	To secure rope probes so that they are reliably insulated. Maximum process temperature: $150$ °C ( $300$ °F)
	For rope probes 4 mm (¼ in) or 6 mm (1/4 in) with PA>steel : • Diameter D = 20 mm (0.8 in) • Order number: 52014249
	For rope probes 6 mm (¼ in) or 8 mm (1/3 in) with PA>steel: • Diameter D = 25 mm (1 in) • Order number: 52014250
	Due to the risk of electrostatic charge, the insulation sleeve is not suitable for use in hazardous areas! In this case, the probe must be secured so that it is reliably grounded.
	The mounting kit can also be ordered directly with the device (Levelflex product structure, feature 620 "Accessory enclosed", version PG "mounting kit, insulated, rope").

## 15.1.4 Mounting kit, insulated

## 15.1.5 Remote display FHX50

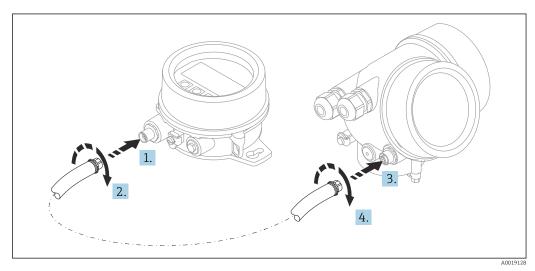

### Technical data

- Material:
  - Plastic PBT
  - 316L/1.4404
  - Aluminum
- $\bullet$  Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x
- Suitable for display modules:
  - SD02 (push buttons)
  - SD03 (touch control)
- Connecting cable:
  - Cable supplied with device up to 30 m (98 ft)
  - Standard cable supplied by customer up to 60 m (196 ft)
- Ambient temperature:-40 to 80  $^\circ C$  (-40 to 176  $^\circ F)$
- Ambient temperature (option): -50 to 80 °C (-58 to 176 °F) <sup>3)</sup>

### Ordering information

• If the remote display is to be used, the device version "Prepared for display FHX50" must be ordered.

For the FHX50, the option "Prepared for display FHX50" must be selected under "Measuring device version".

- If a measuring device has not been ordered with the version "Prepared for display FHX50" and is to be retrofitted with an FHX50, the version "Not prepared for display FHX50" must be ordered for the FHX50 under "Measuring device version". In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used.
  - Use of the FHX50 may be restricted for transmitters with an approval. A device may only be retrofitted with the FHX50 if the option "Prepared for FHX50" is listed in the associated Safety Instructions (XA) under *Basic specifications*, "Display, operation".

Also pay attention to the Safety Instructions (XA) of the FHX50.

Retrofitting is not possible on transmitters with:

- An approval for use in areas with flammable dust (dust ignition-proof approval)
- Type of protection Ex nA

For details, see the "Special Documentation" SD01007F


### 15.1.6 Overvoltage protection

The surge arrester for loop-powered devices can be ordered together with the device via the "Accessory mounted" section of the product order structure.

The surge arrester can be used for loop-powered devices.

- 1-channel devices OVP10
- 2-channel devices OVP20

<sup>3)</sup> This range applies if the option JN "Transmitter ambient temperature" -50 °C (-58 °F) was selected in feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), higher failure rates can be expected.

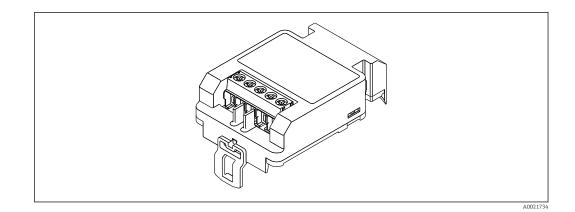

### Technical data

- Resistance per channel:  $2 \times 0.5 \Omega_{max}$
- Threshold DC voltage: 400 to 700 V
- Threshold surge voltage: < 800 V</li>
- Capacitance at 1 MHz: < 1.5 pF</li>
- Nominal leakage current (8/20 µs): 10 kA
- Suitable for conductor cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)


### If retrofitting:

- Order number for 1-channel devices (OVP10): 71128617
- Order number for 2-channel devices (OVP20): 71128619
- The use of the OVP module may be restricted depending on the transmitter approval. A device may only be retrofitted with the OVP module if the option *NA* (overvoltage protection) is listed under *Optional specifications* in the Safety Instructions (XA) associated with the device.
- In order to keep the necessary safety distances when using the surge arrester module, the housing cover also needs to be replaced when the device is retrofitted. Depending on the housing type, the suitable cover can be ordered using the following order number:
  - Housing GT18: 71185516
  - Housing GT19: 71185518
  - Housing GT20: 71185517

For details, see the "Special Documentation" SD01090F

### 15.1.7 Bluetooth module BT10 for HART devices

The Bluetooth module BT10 can be ordered together with the device via the "Accessory mounted" section of the product order structure.

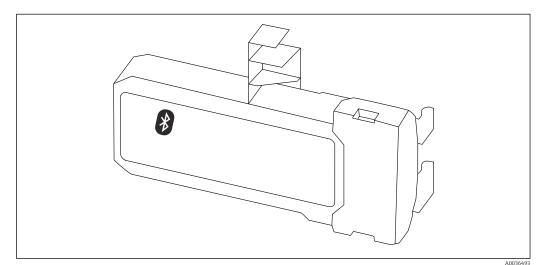

### Technical data

- Quick and easy setup with the SmartBlue app
- No additional tools or adapters needed
- Signal curve via SmartBlue (app)
- Encrypted single point-to-point data transmission (tested by Fraunhofer Institute) and password-protected communication via Bluetooth<sup>®</sup> wireless technology
- Range under reference conditions:
   > 10 m (33 ft)
- When the Bluetooth module is used, the minimum supply voltage of the device increases by up to 3 V.

#### If retrofitting:

- Order number: 71377355
- The use of the Bluetooth module may be restricted depending on the transmitter approval. A device may only be retrofitted with the Bluetooth module if the option *NF* (Bluetooth module) is listed under *Optional specifications* in the Safety Instructions (XA) associated with the device.

🚡 For details, see the "Special Documentation" SD02252F

### 15.2 Communication-specific accessories

#### Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop Order number: 51516983

For details, see "Technical Information" TI00405C

## 15.3 Service-specific accessories

### DeviceCare SFE100


Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices

Technical Information TI01134S

### FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

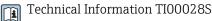

## 15.4 System components

### Memograph M graphic data manager

The Memograph M graphic data manager provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.

Technical Information TI00133R and Operating Instructions BA00247R

# 16 Operating menu

# 16.1 Overview of the operating menu (display module)

Navigation

Operating menu

Language		]			
🖌 Setup					→ 🗎 107
	Device tag				→ 🗎 107
	Device address				→ 🗎 107
	Distance unit				→ 🗎 107
	Bin type				→ 🗎 107
	Empty calibration				→ 🗎 108
	Full calibration				→ 🗎 108
	Level				→ 🗎 109
	Distance				→ 🗎 109
	Signal quality				→ 🗎 110
	► Mapping				→ 🗎 113
		Confirm distance			→ 🗎 113
		Mapping end point			→ 🗎 113
		Record map			→ 🗎 113
		Distance			→ 🗎 113
	► Analog inputs				
		► Analog input 1 to	0 6		→ 🗎 114
			Channel		→ 🗎 114
			PV filter time	]	→ 🗎 114


		Fail safe type	]	→ 🖺 115
		Fail safe value	]	→ 🖺 115
► Advanced setup		]		→ 🖺 116
	Locking status			→ 🗎 116
	Access status displa	у		→ 🗎 117
	Enter access code			→ 🗎 117
	► Level			→ 🗎 118
		Medium type	]	→ 🗎 118
		Medium property	]	→ 🗎 118
		Process property	]	→ 🗎 119
		Advanced process conditions	]	→ 🗎 120
		Level unit	]	→ 🗎 121
		Blocking distance	]	→ 🗎 121
		Level correction	]	→ 🗎 122
	► Linearization			→ 🗎 124
		Linearization type	]	→ 🗎 126
		Unit after linearization	]	→ 🗎 127
		Free text	]	→ 🗎 128
		Maximum value	]	→ 🗎 129
		Diameter	]	→ 🗎 129
		Intermediate height	]	→ 🗎 130
		Table mode	]	→ 🗎 130

	► Edit table		
		Level	
		Customer value	]
	Activate table		→ 🗎 132
► Safety settings			→ 🗎 133
	Output echo lost		→ 🗎 133
	Value echo lost		→ 🗎 133
	Ramp at echo lost		→ 🗎 134
	Blocking distance		→ 🗎 121
► WHG confirma	tion	]	→ 🗎 136
► Deactivate WH	G	-	→ 🗎 137
	Reset write protect	ion	→ 🗎 137
	Code incorrect		→ 🗎 137
► Probe settings		]	→ 🗎 138
	Probe grounded		→ 🗎 138
	► Probe length co	rrection	→ 🖺 140
		Confirm probe length	) → 🗎 140
		Present probe length	) → 🗎 140
► Switch output		]	→ 🗎 141
	Switch output func	tion	→ 🗎 141
	Assign status		→ 🗎 141
	Assign limit		→ 🗎 142
	Assign diagnostic b	vehavior	→ 🗎 142
	Switch-on value		→ 🗎 143
	Switch-on delay		→ 🗎 144

		Switch-off value		→ 🗎 144
		Switch-off delay		→ 🗎 145
		Failure mode		→ 🗎 145
		Switch status		→ 🗎 145
		Invert output signal		→ 🗎 145
[	► Display			→ 🗎 147
		Language		→ 🖺 147
		Format display		→ 🗎 147
		Value 1 to 4 display		→ 🗎 149
		Decimal places 1 to 4		→ 🗎 149
		Display interval		→ 🗎 149
		Display damping		→ 🗎 150
		Header		→ 🖺 150
		Header text		→ 🖺 150
		Separator		→ 🗎 151
		Number format		→ 🗎 151
		Decimal places menu		→ 🗎 151
		Backlight		→ 🗎 152
		Contrast display		→ 🗎 152
]	► Configuration ba		I	→ 🗎 153
l		Operating time		→ 🗎 153
		Last backup		
		Lasi Datkup		→ 🖺 153

			Configuration mana	gement	→ 🖺 153
			Comparison result		→ 🖺 154
		► Administration			→ 🖺 156
			► Define access co	de	→ 🖺 158
				Define access code	→ 🖺 158
				Confirm access code	→ 🖺 158
			Device reset		→ 🖺 156
♥ Diagnostics					→ 🖺 159
	Actual diagnostics		]		→ 🖺 159
	Previous diagnostic	S	]		→ 🖺 159
	Operating time from	n restart	]		→ 🖺 160
	Operating time		]		→ 🖺 153
	► Diagnostic list		]		→ 🖺 161
		Diagnostics 1 to 5			→ 🖺 161
	► Event logbook		]		→ 🖺 162
		Filter options			
		► Event list			→ 🖺 162
	► Device informat	ion	]		→ 🗎 163
		Device tag			→ 🗎 163
		Serial number			→ 🖺 163
		Firmware version			→ 🖺 163
		Device name			→ 🖺 163
		Order code			→ 🖺 164
		Extended order code	e 1 to 3	- 	→ 🗎 164
1					

	Status PROFIBUS N	laster Config	]	→ 🗎 164
	PROFIBUS ident nu	mber		→ 🗎 164
► Measured value	28			→ 🗎 165
	Distance		]	→ 🗎 109
	Level linearized		]	→ 🗎 129
	Terminal voltage 1			→ 🗎 166
	Switch status			→ 🗎 145
► Analog inputs				
	► Analog input 1 t	to 6	]	→ 🗎 167
		Channel		→ 🗎 114
		Out value		→ 🗎 167
		Out status		→ 🗎 168
		Out status HEX		→ 🗎 168
► Data logging				→ 🖺 169
	Assign channel 1 to	o 4	]	→ 🗎 169
	Logging interval		]	→ 🖺 169
	Clear logging data			→ 🗎 170
	► Display channel	1 to 4		→ 🗎 171
► Simulation				→ 🗎 173
	Assign measureme	nt variable		→ 🗎 174
	Value process varia	ble		→ 🗎 174
	Switch output simu	lation		→ 🗎 174
	Switch status			→ 🗎 175
	Simulation device a	larm		→ 🗎 175

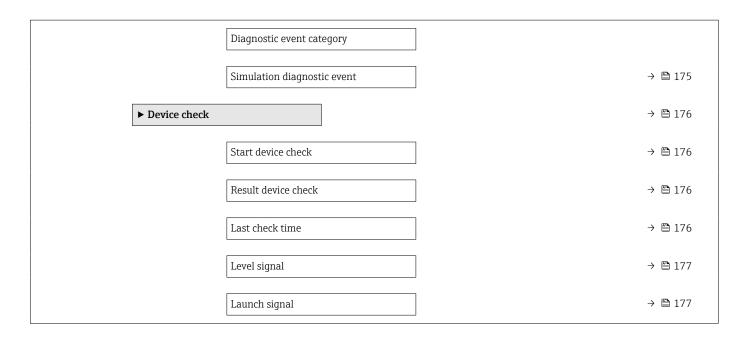

# 16.2 Overview of the operating menu (operating tool)

Navigation

Operating menu

🖌 Setup		]				→ 🗎 107
	Device tag		]			→ 🗎 107
	Device address		]			→ 🗎 107
	Distance unit		]			→ 🗎 107
	Bin type		]			→ 🗎 107
	Empty calibration		]			→ 🗎 108
	Full calibration		]			→ 🗎 108
	Level		]			→ 🗎 109
	Distance		]			→ 🗎 109
	Signal quality		]			→ 🗎 110
	Confirm distance		]			→ 🗎 111
	Present mapping		]			→ 🗎 112
	Mapping end point		]			→ 🗎 112
	Record map		]			→ 🖺 112
	► Analog inputs		]			
		► Analog input 1 t	to 6	]		→ 🗎 114
			Channel		]	→ 🗎 114
			PV filter time		]	→ 🗎 114
			Fail safe type		]	→ 🗎 115
			Fail safe value		]	→ 🗎 115
	► Advanced setup		]			→ 🗎 116
		Locking status		]		→ 🖺 116
		Access status toolin	ıg			→ 🖺 116

Entera	access code	→ 🗎 117
► Leve	el	→ 🗎 118
	Medium type	→ 🗎 118
	Medium property	→ 🗎 118
	Process property	→ 🗎 119
	Advanced process conditions	→ 🗎 120
	Level unit	→ 🗎 121
	Blocking distance	→ 🗎 121
	Level correction	→ 🗎 122
► Line	earization	→ 🗎 124
	Linearization type	→ 🗎 126
	Unit after linearization	→ 🗎 127
	Free text	→ 🗎 128
	Level linearized	→ 🗎 129
	Maximum value	→ 🗎 129
	Diameter	→ 🗎 129
	Intermediate height	→ 🖺 130
	Table mode	→ 🖺 130
	Table number	→ 🗎 131
	Level	→ 🗎 131
	Level	→ 🗎 132
	Customer value	→ 🗎 132
	Activate table	→ 🗎 132
► Safe	ety settings	→ 🗎 133
	Output echo lost	→ 🗎 133

	Value echo lost	→ 🗎 133
	Ramp at echo lost	→ 🖺 134
	Blocking distance	→ 🗎 121
► WHG confirmati	on	→ 🗎 136
► Deactivate WHG	i	→ 🗎 137
	Reset write protection	→ 🗎 137
	Code incorrect	→ 🖺 137
► Probe settings		→ 🖺 138
	Probe grounded	→ 🗎 138
	Present probe length	→ 🖺 138
	Confirm probe length	→ 🖺 139
► Switch output		→ 🖺 141
	Switch output function	→ 🗎 141
	Assign status	→ 🗎 141
	Assign limit	→ 🗎 142
	Assign diagnostic behavior	→ 🗎 142
	Switch-on value	→ 🗎 143
	Switch-on delay	→ 🗎 144
	Switch-off value	→ 🗎 144
	Switch-off delay	→ 🗎 145
	Failure mode	→ 🗎 145
	Switch status	→ 🗎 145
	Invert output signal	→ 🗎 145
► Display		→ 🗎 147
	Language	→ 🗎 147

Format display	] → 🗎 147
Value 1 to 4 display	] → 🗎 149
Decimal places 1 to 4	) → 🗎 149
Display interval	) → 🗎 149
Display damping	] → 🗎 150
Header	] → 🗎 150
Header text	) → 🗎 150
Separator	) → 🗎 151
Number format	) → 🗎 151
Decimal places menu	) → 🗎 151
Backlight	) → 🗎 152
Contrast display	) → 🗎 152
► Configuration backup display	→  153
Operating time	) → 🗎 153
Last backup	) → 🗎 153
Configuration management	) → 🗎 153
Backup state	] → 🗎 154
Comparison result	) → 🗎 154
► Administration	→ 🗎 156
Define access code	]
Device reset	] → 🗎 156
억 Diagnostics	→ <a> 159</a>
Actual diagnostics	→ 🗎 159
Timestamp	→ <a>159</a>
Previous diagnostics	→ 🗎 159

Timestamp		]			→ 🗎 160
Operating time from	m restart	]			→ 🗎 160
Operating time		]			→  153
► Diagnostic list		]			→ 🗎 161
	Diagnostics 1 to 5				→ 🗎 161
	Timestamp 1 to 5				→ 🗎 161
► Device informat	tion	]			→ 🗎 163
	Device tag				→ 🗎 163
	Serial number				→ 🗎 163
	Firmware version				→ 🗎 163
	Device name				→ 🗎 163
	Order code				→ 🗎 164
	Extended order cod	e 1 to 3			→ 🗎 164
	Status PROFIBUS M	aster Config	]		→ 🗎 164
	PROFIBUS ident nu	mber			→ 🗎 164
► Measured value	25	]			→ 🗎 165
	Distance				→ ➡ 109
	Level linearized				→ ➡ 129
	Terminal voltage 1				→ 🖺 166
	Switch status				→ 🗎 145
► Analog inputs		]			
	► Analog input 1 t	ю б			→ 🗎 167
		Channel		]	→ 🗎 114
		Out value		]	→ 🗎 167

	Out status		→ 🖺 168
	Out status HEX		→ 🖺 168
	]		→ 🖺 169
Assign channel 1 to	4		→ 🖺 169
Logging interval			→ 🖺 169
Clear logging data			→ 🖺 170
	]		→ 🖺 173
Assign measuremer	nt variable		→ 🖺 174
Value process variab	ble		→ 🖺 174
Switch output simulation         Switch status         Simulation device alarm         Simulation diagnostic event			→ 🖺 174
			→ 🖺 175
			→ 🖺 175
			→ 🗎 175
	]		→ 🗎 176
Start device check			→ 🗎 176
Result device check			→ 🖺 176
Last check time			→ 🖺 176
Level signal			→ 🗎 177
Launch signal			→ 🗎 177
	]		→ 🖺 178
	Logging interval         Clear logging data         Assign measurement         Value process varial         Switch output simulation         Switch status         Simulation device and         Simulation diagnost         Start device check         Result device check         Last check time         Level signal	Assign channel 1 to 4         Logging interval         Clear logging data         Assign measurement variable         Value process variable         Switch output simulation         Switch status         Simulation device alarm         Simulation diagnostic event         Start device check         Result device check         Last check time         Level signal	Assign channel 1 to 4   Logging interval   Clear logging data   Clear logging data   Assign measurement variable   Value process variable   Switch output simulation   Switch status   Simulation device alarm   Simulation diagnostic event   Start device check   Result device check   Last check time   Level signal



## 3 "Setup" menu

 Indicates how to navigate to the parameter using the display and operating module

- 📄 : Indicates how to navigate to the parameter using operating tools (e.g. FieldCare)
- 🗊 : Indicates parameters that can be locked via the access code.

Navigation

🛛 🖃 Setup

Device tag			Ê
Navigation	Image: Best of the sector	ice tag	
Description	Enter tag for meas	uring point.	
User entry	Up to 32 alphanum	erical characters	
Device address			
Navigation	Image: Barbon Bernard Setup → Dev	ice address	
Description	<ul> <li>for Address mode = Software: Enter bus address.</li> <li>for Address mode = Hardware: Displays bus address.</li> </ul>		
User entry	0 to 126		
Distance unit			٨
Navigation	🗟 😑 Setup → Dist	ance unit	
Description	Length unit for distance calculation.		
Selection	SI units • mm • m	US units • ft • in	
Bin type			8
Navigation	🗐 🗐 Setup → Bin	type	
Prerequisite	Medium type (→ 🗎 118) = Solid		
Description	Specify bin type.		
Endress+Hauser			107

æ

A0013180

Ê

### Selection


- ConcretePlastic wood
  - Metallic
- Aluminium
- Buffer silo (fast)
- Bin / Pile
- Crusher / belt
- Silo
- Workbench test

### Empty calibration

Navigation	8 2	Setup $\rightarrow$ Empty calibr.

- **Description** Distance process connection to min. level.
- **User entry** Depending on the probe
- **Factory setting** Depending on the probe


### Additional information

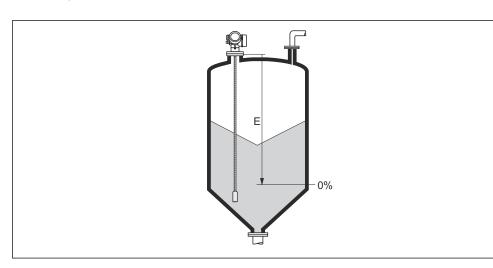

■ 36 Empty calibration (E) for level measurements in bulk solids.

Full calibration		[
Navigation	$ \blacksquare \Box  \text{Setup} \rightarrow \text{Full calibr.} $	
Description	Span: max. level - min level.	
User entry	Depending on the probe	
Factory setting	Depending on the probe	


#### Additional information

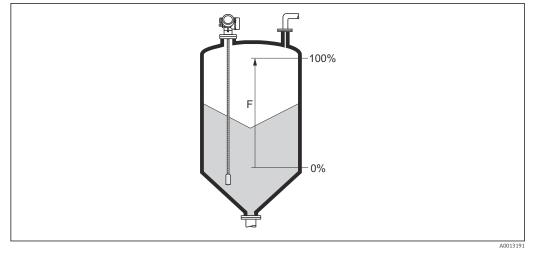


37 Full calibration (F) for level measurements in bulk solids

### Level Navigation □ □ Setup $\rightarrow$ Level Description Displays measured level L<sub>L</sub> (before linearization). Additional information L 0% A0013196 🛃 38 Level in case of bulk solid measurements The unit is defined in the **Level unit** parameter ( $\rightarrow \implies$ 121). **H** Distance Navigation $\blacksquare$ □ Setup → Distance Description Displays the measured distance D<sub>L</sub> between the reference point (lower edge of the flange or threaded connection) and the level.

#### Additional information

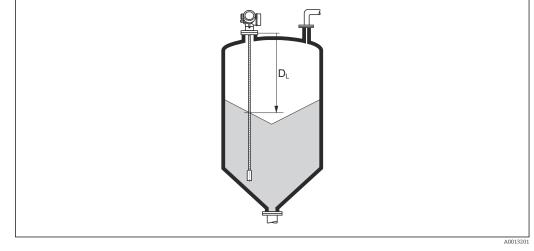

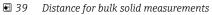

The unit is defined in the **Distance unit** parameter ( $\rightarrow \triangleq 107$ ).

#### Signal quality

Setup → Signal quality
Displays the signal quality of the evaluated echo.
<ul> <li>Meaning of the display options</li> <li>Strong <ul> <li>The evaluated echo exceeds the threshold by at least 10 mV.</li> </ul> </li> <li>Medium <ul> <li>The evaluated echo exceeds the threshold by at least 5 mV.</li> </ul> </li> <li>Weak <ul> <li>The evaluated echo exceeds the threshold by less than 5 mV.</li> </ul> </li> <li>No signal <ul> <li>The device does not find a usable echo.</li> </ul> </li> </ul>
<ul> <li>The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo<sup>4)</sup> or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.</li> <li>In case of a lost echo (Signal quality = No signal) the device generates the following error message:</li> <li>F941 for Output echo lost (→ ● 133) = Alarm</li> </ul>

- F941, for **Output echo lost** ( $\rightarrow \square$  **133**) = Alarm.
- S941, if another option has been selected in Output echo lost (→ 
   <sup>™</sup> 133).

<sup>4)</sup> Of these two echos the one with the lower quality is indicated.

Confirm distance	6
Navigation	□ Setup $\rightarrow$ Confirm distance
Description	Specify, whether the measured distance matches the real distance.
	Depending on the selection the device automatically sets the range of mapping.
Selection	<ul> <li>Manual map</li> <li>Distance ok</li> <li>Distance unknown</li> <li>Distance too small *</li> <li>Distance too big *</li> <li>Tank empty</li> <li>Delete map</li> </ul>
Additional information	<ul> <li>Meaning of the options</li> <li>Manual map To be selected if the range of mapping is to be defined manually in the Mapping end point parameter (→  112). In this case it is not necessary to confirm the distance. </li> <li>Distance ok To be selected if the measured distance matches the actual distance. The device performs a mapping. </li> <li>Distance unknown To be selected if the actual distance is unknown. A mapping can not be performed in th case. </li> <li>Distance too small To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the Confirm distance parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting Distance ok. Distance too big<sup>5</sup> To be selected if the actual distance. After this, the recording of the map can be started by selecting Distance ok. Distance and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting Distance ok. Take ampty To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range. To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range minus Map gap to LN. Factory map To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the Confirm distance parameter is displayed together with this parameter for reference purposes. If the teaching procedure with the Distance too small option or the Distance too big option is quit before the distance has been confirmed, a map is not recorded and the teaching procedure with the Distance too small option or the Distance too big option is quit before the distance has been</li></ul>

<sup>\*</sup> 

Visibility depends on order options or device settings Only available for "Expert  $\rightarrow$  Sensor  $\rightarrow$  Echo tracking  $\rightarrow$  **Evaluation mode** parameter" = "Short time history" or "Long time history" 5)

Present mapping		
Navigation	□ Setup $\rightarrow$ Present mapping	
Description	Indicates up to which distance a mapping has already been recorded.	
Mapping end point		
Navigation	Setup $\rightarrow$ Map. end point	
Prerequisite	Confirm distance (→ 🗎 111) = Manual map or Distance too small	
Description	Specify new end of the mapping.	
User entry	0 to 200 000.0 m	
Additional information	This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.	I
	For reference purposes the <b>Present mapping</b> parameter (→  112) is displayed together with this parameter. It indicates up to which distance a mapping has alrea been recorded.	ιdy

Record map	<u>í</u>
Navigation	□ Setup $\rightarrow$ Record map
Prerequisite	Confirm distance ( > 🗎 111) = Manual map or Distance too small
Description	Start recording of the map.
Selection	<ul><li>No</li><li>Record map</li><li>Delete map</li></ul>
Additional information	<ul> <li>Meaning of the options</li> <li>No <ul> <li>No</li> <li>The map is not recorded.</li> </ul> </li> <li>Record map <ul> <li>The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing ☑.</li> </ul> </li> <li>Delete map <ul> <li>The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing ☑.</li> </ul> </li> </ul>

	16.3.1 "Mapping" wizard
	The <b>Mapping</b> wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the <b>Setup</b> menu ( $\rightarrow \cong$ 107).
	In the <b>Mapping</b> wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.
	Navigation $\blacksquare$ Setup $\rightarrow$ Mapping
Confirm distance	ß
Navigation	Setup → Mapping → Confirm distance
Description	→ 🗎 111
Mapping end point	Â
Navigation	Setup $\rightarrow$ Mapping $\rightarrow$ Map. end point
Description	→ 🗎 112
Record map	ඕ
Navigation	Setup → Mapping → Record map
Description	→ 🗎 112
Distance	
Navigation	Setup → Mapping → Distance
Description	→ 🗎 109

	<i>Navigation</i> $\square$ Expert $\rightarrow$ Analog inputs $\rightarrow$ Analog input 1 to 6	
		6
Channel		Â
Navigation	Image: Barbon Structure ■ Expert → Analog inputs → Analog input 1 to 6 → Channel	
Description	Standard parameter <b>CHANNEL</b> of the Analog Input Block according to the PROFIBUS Profile.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Interface linearized *</li> <li>Interface distance *</li> <li>Thickness upper layer *</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Measured capacitance *</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude *</li> <li>Relative interface amplitude *</li> <li>Relative interface amplitude *</li> <li>Absolute EOP amplitude</li> <li>Noise of signal</li> <li>EOP shift</li> <li>Calculated DC value *</li> <li>Sensor debug</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> </ul>	
Additional information	Allocates a measured value to the AI block.	
PV filter time		æ

■ Expert  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 6  $\rightarrow$  PV filter time

Standard parameter **PV\_FTIME** of the Analog Input Block according to the PROFIBUS

#### "Analog input 1 to 6" submenu 16.3.2

There is an **Analog input** submenu for each AI block of the device. The AI block is used to configure the measured value transmission to the bus.

Only the most basic properties of the AI blocks can be configured in this submenu. For a detailed configuration of the AI blocks refer to Expert  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 6.

<u>م</u> NT. - - 1 - :-+ 1 + - (

profile.

Positive floating-point number

Navigation

Description

User entry

Visibility depends on order options or device settings

#### Additional information T

This parameter defines the damping constant  $\tau$  (in seconds) for the output of the Analog Input Block.

Fail safe type	
Navigation	Image: Boost and Constraints → Analog input 1 to 6 → Fail safe type
Description	Standard parameter <b>FSAFE_TYPE</b> of the Analog Input Block according to the PROFIBUS profile.
Selection	<ul><li>Fail safe value</li><li>Fallback value</li><li>Off</li></ul>
Additional information	<ul> <li>Meaning of the options</li> <li>This parameter specifies the output value of the Analog Input block in the event of an error.</li> <li>Fail safe value The output value in the event of an error is defined in the Fail safe value parameter (→  115). Fallback value The last output value that was valid before the error occurred is retained. Off The output value follows the current measured value. The status is set to BAD.</li></ul>

Fail safe value	۵
Navigation	Image: Barbon Barb
Prerequisite	Fail safe type (→ 🗎 115) = Fail safe value
Description	Standard parameter <b>FSAFE_VALUE</b> of the Analog Input Block according to the PROFIBUS profile.
User entry	Signed floating-point number
Additional information	This parameter defines the output value of the Analog Input Block in case of an error.

#### 16.3.3 "Advanced setup" submenu

```
Navigation \square Setup \rightarrow Advanced setup
```

Locking status	
Navigation	Image: Boostimes and the setup → Locking status $M = M + M + M + M + M + M + M + M + M + $
Description	Indicates the write protection with the highest priority that is currently active.
User interface	<ul> <li>Hardware locked</li> <li>SIL locked</li> <li>WHG locked</li> <li>Temporarily locked</li> </ul>
Additional information	<ul> <li>Meaning and priorities of the types of write protection</li> <li>Hardware locked (priority 1) <ul> <li>The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.</li> </ul> </li> <li>SIL locked (priority 2) <ul> <li>The SIL mode is activated. Writing access to the relevant parameters is denied.</li> </ul> </li> <li>WHG locked (priority 3) <ul> <li>The WHG mode is activated. Writing access to the relevant parameters is denied.</li> </ul> </li> <li>Temporarily locked (priority 4) <ul> <li>Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.</li> </ul> </li> <li>On the display module, the protected.</li> </ul>

# Access status tooling Navigation □ Setup → Advanced setup → Access stat.tool

 Navigation
 Image: Setup → Advanced setup → Access stat.tool

 Description
 Shows the access authorization to the parameters via the operating tool.

 Additional information
 Image: The access authorization can be changed via the Enter access code parameter (→ Image: 117).

 Image: Imag

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ( $\rightarrow \cong 116$ ).

Access status display	
Navigation	
Prerequisite	The device has a local display.
Description	Indicates access authorization to parameters via local display.
Additional information	The access authorization can be changed via the <b>Enter access code</b> parameter $(\rightarrow \cong 117)$ .
	If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter ( $\rightarrow \square 116$ ).

Enter access code	
Navigation	Setup $\rightarrow$ Advanced setup $\rightarrow$ Ent. access code
Description	Enter access code to disable write protection of parameters.
User entry	0 to 9 999
Additional information	<ul> <li>The customer-specific access code that was defined in the Define access code parameter (→ ) 156) must be entered for local operation.</li> <li>If an incorrect access code is entered, users retain their current access authorization.</li> <li>The write protection affects all parameters marked with the ) symbol in the document. On the local display, the ) symbol in front of a parameter indicates that the parameter is write-protected.</li> <li>If no key is pressed for 10 minutes or the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.</li> <li>Please contact your Endress+Hauser Sales Center if you lose your access code.</li> </ul>

#### "Level" submenu

Navigation

 $\blacksquare \square \quad \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Level}$ 

Medium type	ß
Navigation	Image: Setup → Advanced setup → Level → Medium type
Description	Specify type of medium.
User interface	<ul><li>Liquid</li><li>Solid</li></ul>
Factory setting	FMP56, FMP57: Solid
Additional information	This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended <b>not to change</b> the factory setting.

Medium property		Â
Navigation		
Prerequisite	EOP level evaluation ≠ Fix DC	
Description	Specify the dielectric constant $\boldsymbol{\epsilon}_r$ of the medium.	
Selection	<ul> <li>Unknown</li> <li>DC 1.4 1.6</li> <li>DC 1.6 1.9</li> <li>DC 1.9 2.5</li> <li>DC 2.5 4</li> <li>DC 4 7</li> <li>DC 7 15</li> </ul>	

■ DC > 15

Factory setting

Depends on the **Medium type (** $ightarrow extsf{B}$  **118)** and **Medium group** parameters.

#### Additional information

Dependency of "Medium type" and "Medium group"

Medium type (→ 🗎 118)	Medium group	Medium property	
Solid		Unknown	
Liquid	Water based (DC $\geq 4$ )	DC 4 7	
	Others	Unknown	

For the dielectric constants (DC values) of many media commonly used in industry, please refer to:

- Dielectric constant (DC value) Compendium CP01076F
- The Endress+Hauser "DC Values app" (available for Android and iOS)

If **EOP level evaluation** = **Fix DC**, the exact dielectric constant must be specified in the **DC value** parameter. The **Medium property** parameter therefore does not apply in this case.

76

< 1

Process property		Â		
Navigation	Image: Boosting → Advanced setup → Level → Proce	ess property		
Description	Specify typical rate of level change.			
Selection	For "Medium type" = "Liquid" Very fast > 10 m (400 in)/min Fast > 1 m (40 in)/min Standard < 1 m (40in) /min Medium < 10 cm (4in) /min Slow < 1 cm (0.4in) /min No filter / test			
	For "Medium type" = "Solid" Very fast > 100 m (333 ft) /h Fast > 10 m (33 ft) /h Standard < 10 m (33 ft) /h Medium < 1 m (3ft) /h Slow < 0.1 m (0.3ft) /h No filter / test			
Additional information	The device adjusts the signal evaluation filters a typical rate of level change defined in this parar	1 0 1 0		
	For "Operating mode" = "Level" and "Medium type"	" = "Liquid"		
	Process property	Step response time / s		
	Very fast > 10 m (400 in)/min	5		
	Fast > 1 m (40 in)/min	5		
	Standard < 1 m (40in) /min	14		
	Medium < 10 cm (4in) /min	39		

Slow < 1 cm (0.4in) /min

No filter / test

Process property	Step response time / s
Very fast > 100 m (333 ft) /h	37
Fast > 10 m (33 ft) /h	37
Standard < 10 m (33 ft) /h	74
Medium < 1 m (3ft) /h	146
Slow < 0.1 m (0.3ft) /h	290
No filter / test	< 1

#### For "Operating mode" = "Level" and "Medium type" = "Solid"

For "Operating mode" = "Interface" or "Interface with capacitance"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	23
Medium < 10 cm (4in) /min	47
Slow < 1 cm (0.4in) /min	81
No filter / test	2.2


#### Advanced process conditions

Navigation	Setup → Advanced setup → Level → Adv. conditions
Description	Specify additional process conditions (if required).
Selection	<ul> <li>None</li> <li>Oil/Water condensate</li> <li>Probe near tank bottom</li> <li>Build up</li> <li>Foam (&gt;5cm/0,16ft)</li> </ul>
Additional information	<ul> <li>Meaning of the options</li> <li>Oil/Water condensate (only Medium type = Liquid) Makes sure that in the case of two-phase media only the total level is detected (example: oil/condensate application).</li> <li>Probe near tank bottom (only for Medium type = Liquid) Improves the empty detection, especially if the probe is mounted close to the tank bottom.</li> <li>Build up Increases EOP range upper area in order to ensure a safe empty-detection even if the end-of-probe signal has shifted due to build-up. Enables a safe empty-detection even if the end-of-probe signal has shifted due to build-up.</li> <li>Foam (&gt;5cm/0,16ft) (only for Medium type = Liquid) Optimizes the signal evaluation in applications with foam formation.</li> </ul>

A

Level unit		۵
Navigation	Image: Setup → Advanced set	$tup \rightarrow Level \rightarrow Level unit$
Description	Select level unit.	
Selection	SI units • % • m • mm	US units • ft • in
Additional information	The level unit may differ from $( \rightarrow )$ 107):	om the distance unit defined in the <b>Distance unit</b> parameter
	calibration ( $ ightarrow  extsf{B}$ 108) a	stance unit parameter is used for the basic calibration (Empty nd Full calibration ( $\rightarrow \square 108$ )). evel unit parameter is used to display the (unlinearized) level.


Blocking distance	
Navigation	Setup → Advanced setup → Level → Blocking dist.
Description	Specify upper blocking distance UB.
User entry	0 to 200 m
Factory setting	<ul> <li>For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)</li> <li>For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge</li> </ul>
Additional information	Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.
	<ul> <li>This behavior is only valid if the following two conditions are met:</li> <li>Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history)</li> <li>Expert → Sensor → Gas phase compensation → GPC mode= On, Without correction or External correction</li> </ul>
	If one of these conditions is not met, signals in the blocking distance will always be ignored.
	A different behavior for signals in the blocking distance can be defined in the <b>Blocking distance evaluation mode</b> parameter.
	If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

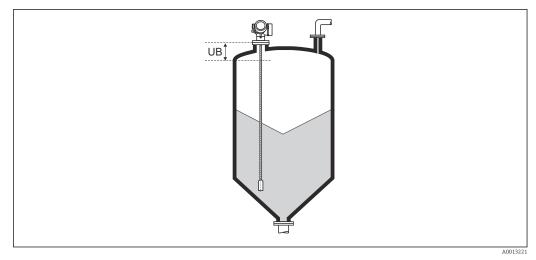

■ 40 Blocking distance (UB) for bulk solid measurements

Level correction	(	Â
Navigation	$ \blacksquare \Box Setup \rightarrow Advanced setup \rightarrow Level \rightarrow Level correction $	
Description	Specify level correction (if required).	
User entry	-200000.0 to 200000.0 %	
Additional information	The value specified in this parameter is added to the measured level (before linearization	1).

#### "Linearization" submenu

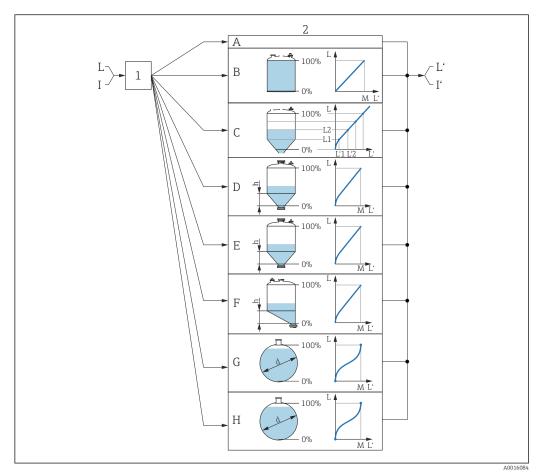

- 41 Linearization: Conversion of the level and, if applicable, interface into a volume or a weight; the conversion depends on the vessel shape
- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type ( $\rightarrow \square 126$ ) = None
- *B* Linearization type ( $\rightarrow \square 126$ ) = Linear
- C Linearization type ( $\rightarrow \square 126$ ) = Table
- *D* Linearization type ( $\rightarrow \square 126$ ) = Pyramid bottom
- *E* Linearization type ( $\rightarrow \square 126$ ) = Conical bottom
- *F* Linearization type ( $\rightarrow \square 126$ ) = Angled bottom
- *G* Linearization type ( $\rightarrow \square 126$ ) = Horizontal cylinder
- *H* Linearization type ( $\rightarrow \square 126$ ) = Sphere
- *I* For "Operating mode" = "Interface" or "Interface with capacitance": interface before linearization (measured in the level unit)
- *I'* For "Operating mode" = "Interface" or "Interface with capacitance": interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in level unit)
- L' Level linearized ( $\rightarrow \square 129$ ) (corresponds to volume or weight)
- $M \quad Maximum \ value \ ( \rightarrow \ \boxplus \ 129)$
- d Diameter ( $\rightarrow \square 129$ )
- h Intermediate height ( $\rightarrow \square 130$ )

Linearization	
	Linearization type
	Unit after linearization
	Free text
	Maximum value
	Diameter
	Intermediate height
	Table mode
	► Edit table
	Level
	Customer value
	Activate table

Structure of the submenu on the local display

*Navigation*  $\blacksquare$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization

Structure	of the	submenu	in	the	operatina	tool	le.a.	FieldCare)
01.00000.0	0, 0,00	00001100100			oper occurry		10.9.	1 101010001 0)

Navigation

Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization

► Linearizatio	n	
	Linearization type	
	Unit after linearization	
	Free text	
	Level linearized	
	Maximum value	
	Diameter	
	Intermediate height	
	Table mode	
	Table number	
	Level	
	Level	
	Customer value	
	Activate table	


Description of the parameters

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Linearization

# Linearization type Image: Setup → Advanced setup → Linearization → Lineariz. type Navigation Image: Setup → Advanced setup → Linearization → Lineariz. type Description Select linearization type. Selection • None • Linear

- Table
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

#### Additional information

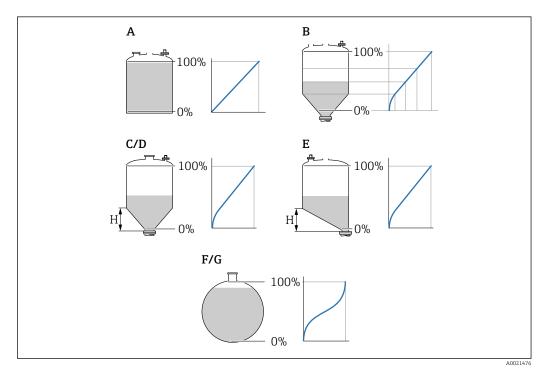

☑ 42 Linearization types

- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder

#### Meaning of the options

None

The level is output in the level unit without being converted (linearized) beforehand.

Linear

The output value (volume/weight) is proportional to the level L. This applies, for example, to vertical cylindrical tanks and silos. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \triangleq 127$ )
- Maximum value (→ 🗎 129): maximum volume or weight
- Table

The relationship between the measured level L and the output value (volume/weight) is defined by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight" respectively. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \triangleq 127$ )
- Table mode (→ 
   <sup>™</sup>
   <sup>™</sup>
   130)
- For every point in the table: Level ( $\rightarrow \square 131$ )
- For every point in the table: **Customer value (→** 🗎 132)
- Activate table ( $\rightarrow \triangleq 132$ )
- Pyramid bottom

The output value corresponds to the volume or weight in a silo with a pyramid bottom. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \square 127$ )
- Maximum value (→ 🗎 129): maximum volume or weight
- Intermediate height (→ 🗎 130): the height of the pyramid
- Conical bottom

The output value corresponds to the volume or weight in a tank with a conical bottom. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \square$  127)
- Maximum value (→ 🗎 129): maximum volume or weight
- Intermediate height (→ 
  □ 130): the height of the cone
- Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \square 127$ )
- Maximum value (→ 🗎 129): maximum volume or weight
- **Intermediate height (→** 🗎 **130)**: height of the angled bottom
- Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \square 127$ )
- Maximum value (→ 🗎 129): maximum volume or weight
- Diameter (→ 🗎 129)
- Sphere

The output value corresponds to the volume or weight in a spherical tank. The following parameters must also be specified:

- Unit after linearization ( $\rightarrow \square 127$ )
- Maximum value (→ 🗎 129): maximum volume or weight
- Diameter (→ 🗎 129)

Unit after linearization

Ê

Navigation	Setup → Advanced setup → Linearization → Unit lineariz.
Prerequisite	<b>Linearization type (</b> $\rightarrow \cong$ <b>126)</b> $\neq$ None

Description	Select the unit for the linearized value.
Selection	Selection/input (uint16) 1095 = [short Ton] 1094 = [lb] 1088 = [kg] 1092 = [Ton] 1048 = [US Gal.] 1049 = [Imp. Gal.] $1043 = [ft^3]$ $1035 = [dm^3]$ $1035 = [dm^3]$ 1036 = [l] 1038 = [l] 1041 = [hl] 1342 = [%] 1010 = [m] 1012 = [mm] 1018 = [ft] 1019 = [inch] 1351 = [J/s] 1353 = [J/h] 1353 = [J/h] 1353 = [J/h] $1354 = [m^3/s]$ $1354 = [m^3/s]$ $1356 = [ft^3/s]$ $1357 = [ft^3/min]$ $1358 = [ft^3/h]$ 1364 = [US Gal./h] 1364 = [US Gal./h] 1358 = [Imp. Gal./min] 1358 = [Imp. Gal./h] 1358 = [Imp. Gal./h] 1358 = [Imp. Gal./h] 1358 = [Imp. Gal./h] 1358 = [MI/s] 32815 = [MI/s] 32815 = [MI/min] 32815 = [MI/min] 32815 = [MI/min]
Additional information	<ul> <li>The selected unit is only used for display purposes. The measured value is not converted on the basis of the selected unit.</li> <li>Distance-to-distance linearization is also possible, i.e. a linearization from the level unit to another length unit. Select the Linear linearization mode for this purpose. To specify the new level unit, select the Free text option in the Unit after linearization parameter and enter the unit in the Free text parameter (→</li></ul>

Free text		
Navigation	Image: Boundary Setup → Advanced setup → Linearization → Free text	
Prerequisite	Unit after linearization ( $\rightarrow \cong 127$ ) = Free text	
Description	Enter unit symbol.	

#### **User entry** Up to 32 alphanumerical characters (letters, numbers, special characters)

Level linearized		
Navigation		Setup $\rightarrow$ Advanced setup $\rightarrow$ Linearization $\rightarrow$ Level linearized
Description	Disp	ays linearized level.
Additional information	i	The unit is defined by the <b>Unit after linearization</b> parameter $\rightarrow \square$ 127.

Maximum value		
Navigation		
Prerequisite	<ul> <li>Linearization type (→  Pi 126) has one of the following values:</li> <li>Linear</li> <li>Pyramid bottom</li> <li>Conical bottom</li> <li>Angled bottom</li> <li>Horizontal cylinder</li> <li>Sphere</li> </ul>	
User entry	-50 000.0 to 50 000.0 %	

Diameter		
Navigation	Image: Setup → Advanced setup → Linearization → Diameter	
Prerequisite	<ul> <li>Linearization type (→  <sup>B</sup> 126) has one of the following values:</li> <li>Horizontal cylinder</li> <li>Sphere</li> </ul>	
User entry	0 to 9 999.999 m	
Additional information	The unit is defined in the <b>Distance unit</b> parameter ( $\rightarrow \square 107$ ).	

#### Intermediate height

A

Navigation	Setup → Advanced setup → Linearization → Intermed. height
Prerequisite	<ul> <li>Linearization type (→  <sup>B</sup> 126) has one of the following values:</li> <li>Pyramid bottom</li> <li>Conical bottom</li> <li>Angled bottom</li> </ul>
User entry	0 to 200 m
Additional information	Automodiate height

H Intermediate height

The unit is defined in the **Distance unit** parameter ( $\rightarrow \square$  107).

Table mode	â
Navigation	■ $\square$ Setup $\rightarrow$ Advanced setup $\rightarrow$ Linearization $\rightarrow$ Table mode
Prerequisite	Linearization type ( > 🗎 126) = Table
Description	Select editing mode of the linearization table.
Selection	<ul> <li>Manual</li> <li>Semiautomatic<sup>*</sup></li> <li>Clear table</li> <li>Sort table</li> </ul>
Additional information	<ul> <li>Meaning of the options</li> <li>Manual The level and the associated linearized value are entered manually for each linearization point.</li> <li>Semiautomatic The level is measured by the device for each linearization point. The associated linearized value is entered manually.</li> <li>Clear table Deletes the existing linearization table.</li> <li>Sort table Rearranges the linerization points into an ascending order.</li> </ul>

<sup>\*</sup> Visibility depends on order options or device settings

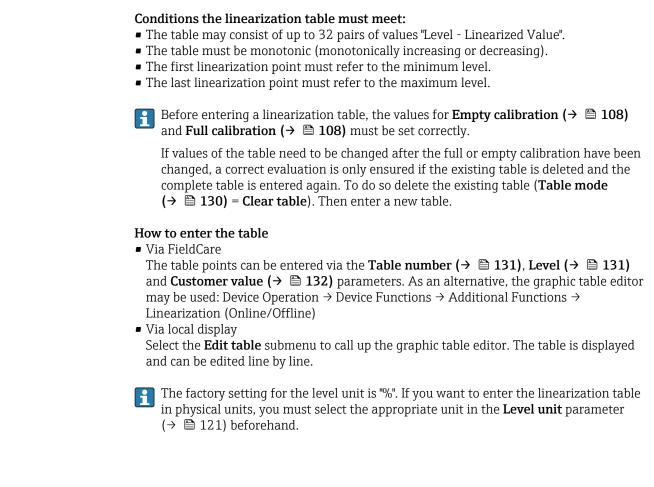


Table number		
Navigation	□ Setup $\rightarrow$ Advanced setup $\rightarrow$ Linearization $\rightarrow$ Table number	
Prerequisite	Linearization type ( $\rightarrow \square$ 126) = Table	
Description	Select table point you are going to enter or change.	
User entry	1 to 32	
Level (Manual)		
Navigation	□ Setup $\rightarrow$ Advanced setup $\rightarrow$ Linearization $\rightarrow$ Level	
Prerequisite	<ul> <li>Linearization type (→  □ 126) = Table</li> <li>Table mode (→ □ 130) = Manual</li> </ul>	

## **Description** Enter level value of the table point (value before linearization).

User entry Signed floating-point number

æ

# Level (Semiautomatic)Navigation $\Box$ Setup $\rightarrow$ Advanced setup $\rightarrow$ Linearization $\rightarrow$ LevelPrerequisite• Linearization type ( $\rightarrow \boxdot 126$ ) = Table<br/>• Table mode ( $\rightarrow \boxdot 130$ ) = SemiautomaticDescriptionDisplays measured level (value before linearization). This value is transmitted to the table.

#### **Customer value**

Navigation	□ Setup $\rightarrow$ Advanced setup $\rightarrow$ Linearization $\rightarrow$ Customer value
Prerequisite	Linearization type ( $\rightarrow \square 126$ ) = Table
Description	Enter linearized value for the table point.
User entry	Signed floating-point number

# Activate table

Navigation	Setup → Advanced setup → Linearization → Activate table
Prerequisite	Linearization type ( $\rightarrow \triangleq 126$ ) = Table
Description	Activate (enable) or deactivate (disable) the linearization table.
Selection	<ul><li>Disable</li><li>Enable</li></ul>
Additional information	<ul> <li>Meaning of the options</li> <li>Disable The measured level is not linearized. If Linearization type (→  <sup>A</sup> 126) = Table at the same time, the device issues error message F435. </li> <li>Enable The measured level is linearized according to the table.</li></ul>

When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

#### "Safety settings" submenu

Navigation □ □ Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Safety sett.

Output echo lost	
Navigation	□ Setup → Advanced setup → Safety sett. → Output echo lost
Description	Output signal in case of a lost echo.
Selection	<ul> <li>Last valid value</li> <li>Ramp at echo lost</li> <li>Value echo lost</li> <li>Alarm</li> </ul>
Additional information	<ul> <li>Meaning of the options</li> <li>Last valid value The last valid value is kept in the case of a lost echo. </li> <li>Ramp at echo lost <sup>6</sup></li> <li>In the case of a lost echo the output value is continously shifted towards 0% or 100%. The slope of the ramp is defined in the Ramp at echo lost parameter (→ 134). </li> <li>Value echo lost <sup>6</sup></li> <li>In the case of a lost echo the output assumes the value defined in the Value echo lost parameter (→ 133). </li> <li>Alarm In the case of a lost echo the device generates an alarm; see the Failure mode parameter </li> </ul>

Value echo lost		
Navigation	Image: Setup → Advanced setup → Safety sett. → Value echo lost	
Prerequisite	Output echo lost (→ 🗎 133) = Value echo lost	
Description	Output value in case of a lost echo	
User entry	0 to 200000.0 %	
Additional information	Use the unit which has been defined for the measured value output: • without linearization: Level unit ( $\rightarrow \cong 121$ ) • with linearization: Unit after linearization ( $\rightarrow \cong 127$ )	

linearization: Unit after linearization ( 27)

Only visible if "Linearization type ( $\rightarrow$  🗎 126)" = "None" 6)

A

#### Ramp at echo lost

Navigation	Setup $\rightarrow$ Advanced setu	$p \rightarrow Safe$	ty sett. $\rightarrow$	Ramp echo lost


Prerequisite Output echo lost (→ 🖹 133) = Ramp at echo lost

**Description** Slope of the ramp in the case of a lost echo

Signed floating-point number

#### Additional information

User entry

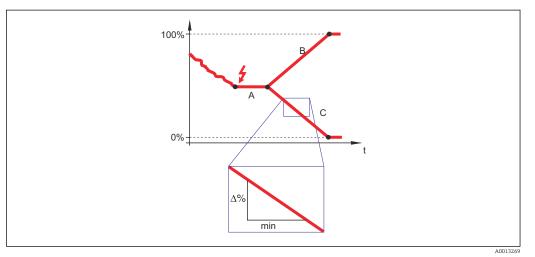

- A Delay time echo lost
- *B* Ramp at echo lost ( $\rightarrow \square 134$ ) (positive value)
- C Ramp at echo lost ( $\rightarrow \square 134$ ) (negative value)
- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/ min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuosly increased until it reaches 100%.

Blocking distance		
Navigation	Image: Setup → Advanced setup → Safety sett. → Blocking dist.	
Description	Specify upper blocking distance UB.	
User entry	0 to 200 m	
Factory setting	<ul> <li>For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)</li> <li>For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge</li> </ul>	
Additional information	Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance distance when the device was switched on and move into the blocking distance distance was switched on and move into the blocking distance distance distance was switched on and move into the blocking distance	

due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.


This behavior is only valid if the following two conditions are met:

- Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history)
- Expert → Sensor → Gas phase compensation → GPC mode= On, Without correction or External correction

If one of these conditions is not met, signals in the blocking distance will always be ignored.

A different behavior for signals in the blocking distance can be defined in the **Blocking distance evaluation mode** parameter.

If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

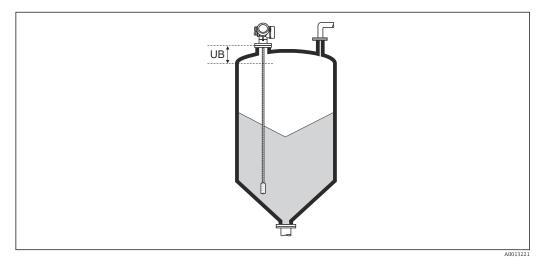

*■* 43 Blocking distance (UB) for bulk solid measurements

#### "WHG confirmation" wizard



The **WHG confirmation** wizard is only available for devices with WHG approval (Feature 590: "Additional Approval", option LC: "WHG overfill prevention") which are currently not in the WHG-locked state.

The **WHG confirmation** wizard is used to lock the device according to WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.

Navigation  $\square$  □ Setup → Advanced setup → WHG confirmation

#### "Deactivate WHG" wizard



The **Deactivate WHG** wizard ( $\rightarrow \bigoplus 137$ ) is only visible if the device is WHG-locked. For details refer to the "Functional Safety Manual" of the respective device.

 $\blacksquare \Box \quad \text{Setup} \rightarrow \text{Advanced setup} \rightarrow \text{Deactivate WHG}$ Navigation

Reset write protection		
Navigation		
Description	Enter unlocking code.	
User entry	0 to 65 535	
Code incorrect		
Navigation	□ $□$ Setup → Advanced setup → Deactivate WHG → Code incorrect	
Description	Indicates that a wrong unlocking code has been entered. Select procedure.	
Selection	<ul><li>Reenter code</li><li>Abort sequence</li></ul>	

#### "Probe settings" submenu

The **Probe settings** submenu helps to ensure that the end of probe signal within the envelope curve is correctly assigned by the evaluation algorithm. The assignment is correct if the length of probe indicated by the device matches the acutal length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium). For partially filled vessels and if the probe length is known, select **Confirm probe length** ( $\rightarrow \blacksquare 139$ ) = **Manual input** in order to enter the value manually.

- Delete the map using the **Record map** parameter (→ 
   <sup>(⇒)</sup> 112) before performing the automatic probe length correction. After the probe length correction, a new map can be recorded using the **Record map** parameter (→ 
   <sup>(⇒)</sup> 112).
- Alternative: Select Confirm probe length (→ 
   <sup>1</sup> 139) = Manual input and enter the probe length manually into the Present probe length parameter → 
   <sup>1</sup> 138.

An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter ( $\rightarrow \triangleq 138$ ).

Navigation

Setup → Advanced setup → Probe settings

Probe grounded	

Navigation	Setup → Advanced setup → Probe settings → Probe grounded
Prerequisite	Operating mode = Level
Description	Specify whether the probe is grounded.
Selection	<ul><li>No</li><li>Yes</li></ul>

Present probe length		Ê
Navigation	□ Setup $\rightarrow$ Advanced setup $\rightarrow$ Probe settings $\rightarrow$ Pres. length	
Description	<ul> <li>In most cases: Displays the length of the probe according to the currently measured end-of-probe signal.</li> <li>For Confirm probe length (→  <sup>(⇒)</sup> 139) = Manual input: Enter actual length of probe.</li> </ul>	
User entry	0 to 200 m	

If a mapping (interference echo suppression) has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. In this case there are two options:

Confirm probe length	ඕ
Navigation	□ Setup $\rightarrow$ Advanced setup $\rightarrow$ Probe settings $\rightarrow$ Confirm length
Description	Select, whether the value displayed in the <b>Present probe length</b> parameter $\rightarrow \triangleq 138$ matches the actual length of the probe. Based on this input, the device performs a probe length correction.
Selection	<ul> <li>Probe length OK</li> <li>Probe length too small</li> <li>Probe length too big</li> <li>Probe covered</li> <li>Manual input</li> <li>Probe length unknown</li> </ul>
Additional information	Meaning of the options• Probe length OK To be selected if the indicated length is correct. An adjustment is not required. The device quits the sequence.• Probe length too small To be selected if the displayed length is smaller than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is displayed in the Present probe length parameter → 🗎 138. This procedure has to be repeated until the displayed value matches the actual length of the probe.• Probe length too big To be selected if the displayed length is bigger than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the Oresent probe length parameter → 🖺 138. This procedure has to be repeated until the displayed value matches the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the displayed value matches the actual length of the probe.• Probe covered To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case. The device quits the sequence.• Manual input To be selected if the probe must be entered manually into the Present probe length parameter → 🗎 138 <sup>-7</sup> .• Probe length unknown To be selected if the acutal length of the probe is unknown. A probe length correction is impossible in this case and the device quits the sequence.

<sup>7)</sup> When operated via FieldCare, the **Manual input** option needs not to be selected explicitly. In FieldCare the length of the probe can always be edited.

	"Probe length correction" wizard	
	The <b>Probe length correction</b> wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the probe length correction are located directly in the <b>Probe settings</b> submenu ( $\rightarrow \square$ 138).	e
	<i>Navigation</i> $\ \textcircled{B} \ \textcircled{B}$ Setup $\rightarrow$ Advanced setup $\rightarrow$ Probe settings $\rightarrow$ Problem length cor	r
Confirm probe length		
Navigation	ⓐ Setup → Advanced setup → Probe settings → Prob.length corr → Confirm length	
Description	→ 🗎 139	
Present probe length		
Navigation	$ \blacksquare \Box $ Setup $\rightarrow$ Advanced setup $\rightarrow$ Probe settings $\rightarrow$ Problength corr $\rightarrow$ Preslength	
Description	→ 🗎 138	

#### "Switch output" submenu



The **Switch output** submenu ( $\rightarrow \implies 141$ ) is only visible for devices with switch

Navigation □ □ Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Switch output

Switch output function	
Navigation	Image: Boundary Setup → Advanced setup → Switch output → Switch out funct
Description	Select function for switch output.
Selection	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Digital Output</li> </ul>
Additional information	<ul> <li>Meaning of the options</li> <li>Off <ul> <li>The output is always open (non-conductive).</li> </ul> </li> <li>On <ul> <li>The output is always closed (conductive).</li> </ul> </li> <li>Diagnostic behavior <ul> <li>The output is normally closed and is only opened if a diagnostic event is present. The Assign diagnostic behavior parameter (→ <ul> <li>142) determines for which type of event the output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters: <ul> <li>Assign limit (→ <ul> <li>142)</li> <li>Switch-on value (→ <ul> <li>143)</li> <li>Switch-off value (→ <ul> <li>144)</li> </ul> </li> <li>Digital Output <ul> <li>The switching state of the output tracks the output value of a DI function block. The function block is selected in the Assign status parameter (→ <ul> <li>141).</li> </ul> </li> <li>The Off and On options can be used to simulate the switch output.</li> </ul></li></ul></li></ul></li></ul></li></ul></li></ul></li></ul>

Assign status		
Navigation		
Prerequisite	Switch output function ( $\rightarrow \square 141$ ) = Digital Output	
Description	Select device status for switch output.	

Ordering feature 020 "Power supply; Output", option B, E or G 8)

Selection	<ul> <li>Off</li> <li>Digital output AD 1</li> <li>Digital output AD 2</li> <li>Digital output 1</li> <li>Digital output 2</li> <li>Digital output 3</li> <li>Digital output 4</li> </ul>
Additional information	The <b>Digital output AD 1</b> and <b>Digital output AD 2</b> options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.
Assign limit	
Navigation	Image: Setup → Advanced setup → Switch output → Assign limit
Prerequisite	Switch output function ( $\rightarrow \triangleq 141$ ) = Limit
Selection	<ul> <li>Off</li> <li>Level linearized</li> <li>Distance</li> <li>Interface linearized *</li> <li>Interface distance *</li> <li>Thickness upper layer *</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Measured capacitance *</li> <li>Relative echo amplitude</li> <li>Relative interface amplitude *</li> <li>Absolute echo amplitude</li> </ul>

#### Absolute ecilo amplitude Absolute interface amplitude \*

#### Assign diagnostic behavior

Navigation	Image: Setup → Advanced setup → Switch output → Assign diag. beh
Prerequisite	Switch output function ( $\rightarrow \cong 141$ ) = Diagnostic behavior
Description	Select diagnostic behavior for switch output.
Selection	<ul><li>Alarm</li><li>Alarm or warning</li><li>Warning</li></ul>

ß

<sup>\*</sup> Visibility depends on order options or device settings


#### A

#### Switch-on value

Navigation	Setup → Advanced setup → Switch output → Switch-on value
Prerequisite	Switch output function ( $\rightarrow \triangleq 141$ ) = Limit
Description	Enter measured value for the switch-on point.
User entry	Signed floating-point number
Additional information	The switching behavior depends on the relative position of the <b>Switch-on value</b> and <b>Switch-off value</b> parameters:

#### Switch-on value > Switch-off value


- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

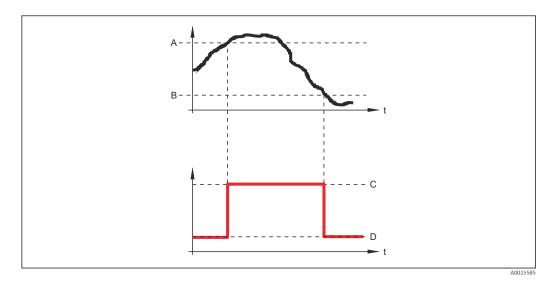

- A Switch-on value
- B Switch-off value
- *C Output closed (conductive)*
- D Output opened (non-conductive)

#### Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

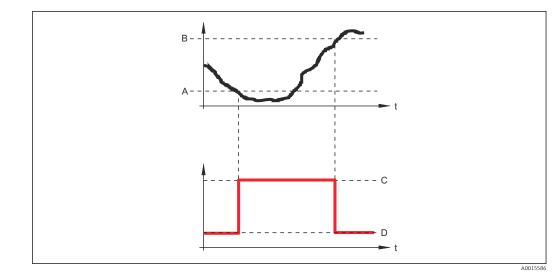

- Α
- В
- С
- Switch-on value Switch-off value Output closed (conductive) Output opened (non-conductive) D

#### Switch-on delay

Navigation	$ \blacksquare \Box Setup \rightarrow Advanced setup \rightarrow Switch output \rightarrow Switch-on delay $
Prerequisite	<ul> <li>Switch output function (→  □ 141) = Limit</li> <li>Assign limit (→ □ 142) ≠ Off</li> </ul>
Description	Define delay for the switch-on of status output.
User entry	0.0 to 100.0 s

#### Switch-off value

Navigation	$ \blacksquare \Box Setup \rightarrow Advanced setup \rightarrow Switch output \rightarrow Switch-off value $
Prerequisite	Switch output function ( $\rightarrow \square 141$ ) = Limit
Description	Enter measured value for the switch-off point.
User entry	Signed floating-point number
Additional information	The switching behavior depends on the relative position of the <b>Switch-on value</b> and <b>Switch-off value</b> parameters; description: see the <b>Switch-on value</b> parameter ( $\rightarrow \square 143$ ).

£

ß

Switch-off delay		
Navigation	Image: Setup → Advanced setup → Switch output → Switch-off delay	
Prerequisite	<ul> <li>Switch output function (→ ≅ 141) = Limit</li> <li>Assign limit (→ ≅ 142) ≠ Off</li> </ul>	
Description	Define delay for the switch-off of status output.	
User entry	0.0 to 100.0 s	
Failure mode		ß
Navigation	Image: Setup → Advanced setup → Switch output → Failure mode	
Prerequisite	Switch output function ( $\Rightarrow \square 141$ ) = Limit or Digital Output	
Description	Define output behavior in alarm condition.	
Selection	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	
Additional information		
Switch status		
Navigation		
Description	Shows the current switch output status.	
Invert output signal		
Navigation		
Description	Invert the output signal.	
Selection	<ul><li>No</li><li>Yes</li></ul>	

#### Additional information

#### Meaning of the options

- No
  - The behavior of the switch output is as described above.
- Yes
  - The states **Open** and **Closed** are inverted as compared to the description above.

#### "Display" submenu

**Display** submenu is only visible if a display module is connected to the device.

*Navigation*  $\ \ \square \ \ \square \ \ \square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Display


Language	
Navigation	Image Setup → Advanced setup → Display → Language
Description	Set display language.
Selection	<ul> <li>English</li> <li>Deutsch *</li> <li>Français *</li> <li>Fspañol *</li> <li>Italiano *</li> <li>Nederlands *</li> <li>Portuguesa *</li> <li>Polski *</li> <li>pyccĸий язык (Russian) *</li> <li>Svenska *</li> <li>Türkçe *</li> <li>中文 (Chinese) *</li> <li>目本語 (Japanese) *</li> <li>한국어 (Korean) *</li> <li>Bahasa Indonesia *</li> <li>tiếng Việt (Vietnamese) *</li> <li>čeština (Czech) *</li> </ul>
Factory setting	The language selected in feature 500 of the product structure. If no language has been selected: <b>English</b>
Additional information	n
Format display	
Navigation	Image: Setup → Advanced setup → Display → Format display
Description	Select how measured values are shown on the display.
Selection	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>

<sup>\*</sup> Visibility depends on order options or device settings


#### Additional information




💽 44 "Format display" = "1 value, max. size"

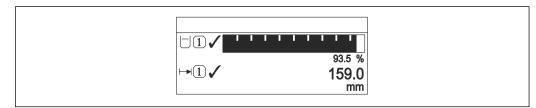


45 "Format display" = "1 bargraph + 1 value"

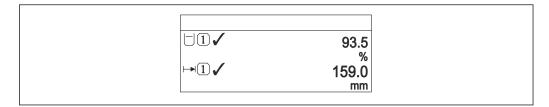

If a "Format display" = "2 values"

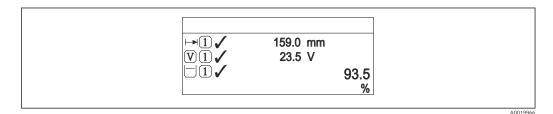

If a state of the second se

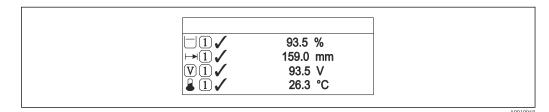

If a "Format display" = "4 values"

- The Value 1 to 4 display → 
   149 parameters specify which measured values are shown on the display and in which order.

Value 1 to 4 display		
Navigation	Setup → Advanced setup → Display → Value 1 display	
Description	Select the measured value that is shown on the local display.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Interface linearized *</li> <li>Interface distance *</li> <li>Thickness upper layer *</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Measured capacitance *</li> <li>Analog output 1</li> <li>Analog output 2</li> <li>Analog output 3</li> <li>Analog output 4</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> </ul>	
Factory setting	<ul> <li>For level measurements</li> <li>Value 1 display: Level linearized</li> <li>Value 2 display: Distance</li> <li>Value 3 display: Current output 1</li> <li>Value 4 display: None</li> </ul>	

Decimal places 1 to 4		Ê
Navigation	Image: Setup → Advanced setup → Display → Decimal places 1	
Description	Select the number of decimal places for the display value.	
Selection	<ul> <li>X</li> <li>X.X</li> <li>X.XX</li> <li>X.XXX</li> <li>X.XXXX</li> </ul>	
Additional information	The setting does not affect the measuring or computational accuracy of the device.	

Display interval	
Navigation	□ Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.

<sup>\*</sup> Visibility depends on order options or device settings

User entry	1 to 10 s	
Additional information	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.	
Display damping		
Navigation	Image: Setup → Advanced setup → Display → Display damping	
Description	Set display reaction time to fluctuations in the measured value.	
User entry	0.0 to 999.9 s	
Header		
Navigation	Image: Setup → Advanced setup → Display → Header	
Description	Select header contents on local display.	
Selection	<ul><li>Device tag</li><li>Free text</li></ul>	
Additional information	1       XXXXXXXX         1       Position of the header text on the display         1       Position of the header text on the display         Meaning of the options       Section of the Device tag parameter.         • Device tag       Is defined in the Device tag parameter.         • Free text       Is defined in the Header text parameter (→ 🖺 150).	0029422
Header text		ß

Navigation	Setup → Advanced setup → Display → Header text
Prerequisite	Header (→ 🗎 150) = Free text
Description	Enter display header text.
User entry	Character string comprising numbers, letters and special characters (12)

### **Additional information** The number of characters which can be displayed depends on the characters used.

Separator		Â
Navigation	Image: Setup → Advanced setup → Display → Separator	
Description	Select decimal separator for displaying numerical values.	
Selection	■ . ■ ,	

Number format		Â
Navigation	□ $□$ Setup → Advanced setup → Display → Number format	
Description	Choose number format for the display.	
Selection	<ul><li>Decimal</li><li>ft-in-1/16"</li></ul>	
Additional information	The <b>ft-in-1/16</b> " option is only valid for distance units.	

Decimal places menu	
Navigation	Image: Setup → Advanced setup → Display → Dec. places menu
Description	Select number of decimal places for the representation of numbers within the operating menu.
Selection	<ul> <li>X</li> <li>X.X</li> <li>X.XX</li> <li>X.XXX</li> <li>X.XXXX</li> </ul>
Additional information	<ul> <li>Is only valid for numbers in the operating menu (e.g. Empty calibration, Full calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the Decimal places 1 to 4 →               149             parameters.      </li> </ul>

• The setting does not affect the accuracy of the measurement or the calculations.

Backlight	
Navigation	
Prerequisite	The device has the SD03 local display (with optical keys).
Description	Switch the local display backlight on and off.

Selection

Additional information

Enable

Disable

## Meaning of the options

• **Disable** Switches the backlight off.

Enable

Switches the backlight on.

Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

Contrast display	
Navigation	Image: Boundary Setup → Advanced setup → Display → Contrast display
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
User entry	20 to 80 %
Factory setting	Dependent on the display.
Additional information	Setting the contrast via push-buttons: • Darker: press the 🖸 🖲 buttons simultaneously.

Brighter: press the ⊕ € buttons simultaneously.

#### "Configuration backup display" submenu



This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configurateion can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

*Navigation*  $\square$  Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Conf.backup disp

Operating time	
Navigation	
Description	Indicates how long the device has been in operation.
Additional information	Maximum time 9999 d ( ≈ 27 years)

Last backup	
Navigation	Setup → Advanced setup → Conf.backup disp → Last backup
Description	Indicates when the last data backup was saved to the display module.

Configuration man	agement	Â
Navigation		
Description	Select action for managing the device data in the display module.	
Selection	<ul> <li>Cancel</li> <li>Execute backup</li> <li>Restore</li> <li>Duplicate</li> <li>Compare</li> </ul>	

Clear backup data

#### Additional information Meaning of the options

#### Cancel

No action is executed and the user exits the parameter.

#### Execute backup

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

#### Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

#### Duplicate

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration: Medium type

Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter ( $\rightarrow \triangleq 154$ ).

#### Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state	
Navigation	□ Setup $\rightarrow$ Advanced setup $\rightarrow$ Conf.backup disp $\rightarrow$ Backup state
Description	Displays which backup action is currently in progress.
Comparison result	
Navigation	Image: Setup → Advanced setup → Conf.backup disp → Compar. result
Description	Comparison between present device data and display backup.

#### Additional information

## Meaning of the display options

#### Settings identical

The current device configuration of the HistoROM is identical to the backup copy in the display module.

Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

- No backup available There is no backup copy of the device configuration of the HistoROM in the display module.
- Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

- Check not done The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.
- Dataset incompatible

The data sets are incompatible and can not be compared.

To start the comparison, set **Configuration management** ( $\rightarrow \equiv 153$ ) = **Compare**.

If the transmitter configuration has been duplicated from a different device by **Configuration management** ( $\rightarrow \implies 153$ ) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

#### "Administration" submenu

Navigation

Define access code	Ê
Navigation	$ \qquad \qquad$
Description	Define release code for write access to parameters.
User entry	0 to 9 999
Additional information	If the factory setting is not changed or if "0" is entered, the parameters are not write- protected and the device configuration data can therefore always be modified. The user is logged on in the "Maintenance" role.
	The write protection affects all parameters marked with the 🗊 symbol in the document. On the local display, the 🕆 symbol in front of a parameter indicates that the parameter is write-protected.
	Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the <b>Enter access code</b> parameter $( \rightarrow \cong 117)$ .
	Please contact your Endress+Hauser Sales Center if you lose the access code.
	If operating via the local display: the new access code is only valid once it has been confirmed in the <b>Confirm access code</b> parameter ( $\rightarrow \triangleq 158$ ).

Device reset		
Navigation	$\square$ ■ Setup → Advanced setup → Administration → Device reset	
Description	Reset the device configuration - either entirely or in part - to a defined state.	
Selection	<ul> <li>Cancel</li> <li>To factory defaults</li> <li>To delivery settings</li> <li>Of customer settings</li> <li>To transducer defaults</li> <li>Restart device</li> </ul>	
Additional information	<ul> <li>Meaning of the options</li> <li>Cancel No action</li> <li>To factory defaults All parameters are reset to the order-code specific factory setting.</li> <li>To delivery settings All parameters are reset to the delivery setting. The delivery setting may differ from factory default if customer specific settings have been ordered. This option is only visible if customer specific settings have been ordered.</li> </ul>	m the

#### Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

To transducer defaults

Every measurment-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

	The <b>Define access code</b> wizard is only available when operating via the local display. When operating via an operating tool, the <b>Define access code</b> parameter is located directly in the <b>Administration</b> submenu. The <b>Confirm access code</b> parameter is not available for operation via operating tool.
	NavigationImage: Setup $\rightarrow$ Advanced setup $\rightarrow$ Administration $\rightarrow$ Def. access code
Define access code	۵
Navigation	$\begin{tabular}{lllllllllllllllllllllllllllllllllll$
Description	→ 🗎 156
Confirm access code	8
Navigation	ⓐ Setup → Advanced setup → Administration → Def. access code → Confirm code
Description	Confirm the entered access code.
User entry	0 to 9999

"Define access code" wizard

# 16.4 "Diagnostics" menu

Navigation

■ ■ Diagnostics

Actual diagnostics	
Navigation	
Description	Displays current diagnostic message.
Additional information	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text
	If several messages are active at the same time, the messages with the highest priority is displayed.
	Information on what is causing the message, and remedy measures, can be viewed via the ① symbol on the display.

Timestamp	
Navigation	□ Diagnostics → Timestamp
Previous diagnostics	
Navigation	
Description	Displays the last diagnostic message which has been active before the current message.
Additional information	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text
	The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the (i) symbol on the display.

Timestamp	
Navigation	□ Diagnostics → Timestamp
Operating time from restar	t
Navigation	
Description	Displays the time the device has been in operation since the last device restart.
Operating time	
Navigation	
Description	Indicates how long the device has been in operation.
Additional information	<i>Maximum time</i> 9999 d ( ≈ 27 years)

## 16.4.1 "Diagnostic list" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Diagnostic list

Diagnostics 1 to 5	
Navigation	
Description	Display the current diagnostics messages with the highest to fifth-highest priority.
Additional information	The display consists of: • Symbol for event behavior • Code for diagnostic behavior • Operating time of occurrence • Event text
Timestamp 1 to 5	
Navigation	■ □ Diagnostics $\rightarrow$ Diagnostic list $\rightarrow$ Timestamp 1 to 5

	The <b>Event logbook</b> submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".		
	Navigation $\textcircled{Diagnostics} \rightarrow \texttt{Event logbook}$		
Filter options		3	
Navigation	Diagnostics $\rightarrow$ Event logbook $\rightarrow$ Filter options		
Selection	<ul> <li>All</li> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> <li>Information (I)</li> </ul>		
Additional information	<ul> <li>This parameter is only used for operation via the local display.</li> <li>The status signals are categorized according to NAMUR NE 107.</li> </ul>		

"Event logbook" submenu

#### "Event list" submenu

16.4.2

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter ( $\rightarrow \textcircled{B}$  162). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- ∋: Event has occurred
- 🕞: Event has ended

Information on what is causing the message, and remedy instructions, can be viewed via the ①-button.

#### **Display format**

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation

Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Event list

## 16.4.3 "Device information" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Device info

Device tag	
Navigation	
Description	Enter the name for the measuring point.
User interface	Character string comprising numbers, letters and special characters
Serial number	
Navigation	Image: Boostics → Device info → Serial number $\square$
Description	Shows the serial number of the measuring device.
Additional information	<ul> <li>Uses of the serial number</li> <li>To identify the device quickly, e.g. when contacting Endress+Hauser.</li> <li>To obtain specific information on the device using the Device Viewer: www.endress.com/deviceviewer</li> </ul>
	The serial number is also indicated on the nameplate.

Firmware version	
Navigation	■ Diagnostics $\rightarrow$ Device info $\rightarrow$ Firmware version
Description	Shows the device firmware version installed.
User interface	xx.yy.zz
Additional information	For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name	
Navigation	
Description	Shows the name of the transmitter.

Order code		
Navigation	Image Diagnostics → Device info → Order code	
Description	Shows the device order code.	
User interface	Character string comprising numbers, letters and special characters	
Additional information	The order code is generated from the extended roder code, which defines all device features of the product structure. In contrast, the device features can not be read direct from the order code.	tly


Extended order code 1 to 3		
Navigation		
Description	Display the three parts of the extended order code.	
User interface	Character string comprising numbers, letters and special characters	
Additional information	The extended order code indicates the version of all the features of the product structu and thus uniquely identifies the device.	re

Status PROFIBUS Ma	ster Config
Navigation	
Description	Indicates whether the cyclic data exchange with the master is currently active.
User interface	<ul><li>Active</li><li>Not active</li></ul>

PROFIBUS ident number	
Navigation	□ □ Diagnostics → Device info → Ident number
Description	Indicates the ident number of the device.
Additional information	The <b>Ident number selector</b> parameter can be used to define which ident number is used.

## 16.4.4 "Measured values" submenu

*Navigation*  $\square$   $\square$  Diagnostics  $\rightarrow$  Measured val.

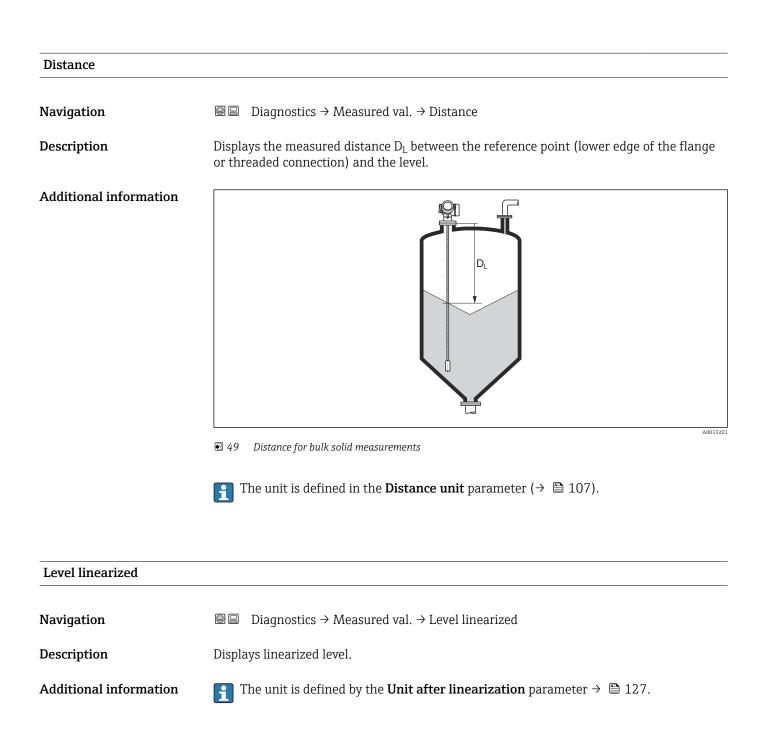

Terminal voltage 1	
Navigation	B □ Diagnostics → Measured val. → Terminal volt. 1
Switch status	
Navigation	
Description	Shows the current switch output status.



## "Analog input 1 to 6" submenu

There is an **Analog input** submenu for each Analog Input Block of the device. Only the most important parameters of the respective block are available at this position of the operating menu. For a complete list of the block parameters refer to: Diagnostics  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 6

Navigation B □ Diagnostics  $\rightarrow$  Analog inputs  $\rightarrow$  Analog input 1 to 6

Channel		A
Navigation	Bagnostics → Analog inputs → Analog input 1 to 6 → Channel	
Description	Standard parameter <b>CHANNEL</b> of the Analog Input Block according to the PROFIBUS Profile.	
Selection	<ul> <li>Level linearized</li> <li>Distance</li> <li>Interface linearized *</li> <li>Interface distance *</li> <li>Thickness upper layer *</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Measured capacitance *</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude *</li> <li>Relative interface amplitude *</li> <li>Relative interface amplitude *</li> <li>Absolute EOP amplitude</li> <li>Noise of signal</li> <li>EOP shift</li> <li>Calculated DC value *</li> <li>Sensor debug</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> </ul>	
Additional information	Allocates a measured value to the AI block.	
Out value		
Navigation		

- Description Element Value of the standard parameter OUT in the Analog Input Block according to the PROFIBUS Profile.
- User entry Signed floating-point number

<sup>\*</sup> Visibility depends on order options or device settings

## Additional information

- For Mode block actual = Man:
  - Enter the output value of the Analog Input Block.
- Else: Displays the output value of the Analog Input Block.

Out status	
Navigation	■ □ Diagnostics → Analog inputs → Analog input 1 to 6 → Out status
Description	Element <b>Status</b> of the standard parameter <b>OUT</b> in the Analog Input Block accordintg to the PROFIBUS Profile.
User interface	<ul><li>Good</li><li>Uncertain</li><li>Bad</li></ul>
Additional information	Only the two quality bits are evaluated in this parameter.

Out status HEX	
Navigation	Image B Biagnostics → Analog inputs → Analog input 1 to 6 → Out status HEX
Description	Element <b>Status</b> of the standard parameter <b>OUT</b> in the Analog Input Block according to the PROFIBUS Profile.
User entry	0 to 255
Additional information	The complete status byte is displayed in the form of a two-digit hexadecimal number in this parameter.

# 16.4.6 "Data logging" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Data logging

Assign channel 1 to 4		
Navigation	Image Diagnostics → Data logging → Assign chan. 1 to 4	
Selection	<ul> <li>Off</li> <li>Level linearized</li> <li>Distance</li> <li>Unfiltered distance</li> <li>Interface linearized *</li> <li>Interface distance *</li> <li>Unfiltered interface distance</li> <li>Thickness upper layer *</li> <li>Terminal voltage</li> <li>Electronic temperature</li> <li>Measured capacitance *</li> <li>Absolute echo amplitude</li> <li>Relative echo amplitude *</li> <li>Relative interface amplitude *</li> <li>Relative interface amplitude *</li> <li>Absolute EOP amplitude</li> <li>EOP shift</li> <li>Noise of signal</li> <li>Calculated DC value *</li> <li>Analog output adv. diagnostics 1</li> <li>Analog output adv. diagnostics 2</li> </ul>	
Additional information	A total of 1000 measured values can be logged. This means: <ul> <li>1000 data points if 1 logging channel is used</li> <li>500 data points if 2 logging channels are used</li> <li>333 data points if 3 logging channels are used</li> <li>250 data points if 4 logging channels are used</li> </ul>	log
	If the maximum number of data points is reached, the oldest data points in the data l are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measure values are always in the log (ring memory principle).	
	The logged data are deleted if a new option is selected in this parameter.	

Logging interval			
Navigation		Diagnostics $\rightarrow$ Data logging $\rightarrow$ Logging interval Diagnostics $\rightarrow$ Data logging $\rightarrow$ Logging interval	
User entry	1.0 to	9 3 600.0 s	

<sup>\*</sup> Visibility depends on order options or device settings

Additional information This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T  $_{log}$ :

- If 1 logging channel is used: T  $_{log} = 1000 \cdot t_{log}$  If 2 logging channels are used: T  $_{log} = 500 \cdot t_{log}$
- If 3 logging channels are used: T  $_{log}$  = 333  $\cdot$  t  $_{log}$
- If 4 logging channels are used:  $T_{log} = 250 \cdot t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T log always remains in the memory (ring memory principle).

The logged data are deleted if this parameter is changed. A

#### Example

#### When using 1 logging channel


- $T_{log} = 1000 \cdot 1 s = 1000 s \approx 16.5 min$
- $T_{log} = 1000 \cdot 10 \text{ s} = 1000 \text{ s} \approx 2.75 \text{ h}$
- $T_{log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data			
Navigation		Diagnostics $\rightarrow$ Data logging $\rightarrow$ Clear logging Diagnostics $\rightarrow$ Data logging $\rightarrow$ Clear logging	
Selection	■ Ca ■ Cle	ncel ear data	


#### "Display channel 1 to 4" submenu

The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM".

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

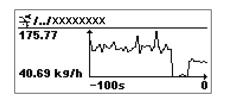

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.

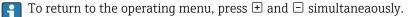

Navigation

B □ Diagnostics → Data logging → Displ.channel 1 to 4

## 16.4.7 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul> <li>Assign measurement variable (→  <sup>1</sup>/<sub>2</sub> 174)</li> <li>Value process variable (→  <sup>1</sup>/<sub>2</sub> 174)</li> </ul>
Specific state of the switch output	<ul> <li>Switch output simulation (→  <sup>B</sup> 174)</li> <li>Switch status (→ <sup>B</sup> 175)</li> </ul>
Existence of an alarm	Simulation device alarm ( $\rightarrow 175$ )
Existence of a specific diagnostic message	Simulation diagnostic event ( $\rightarrow \square$ 175)

## Structure of the submenu

Navigation

Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Simulation

► Simulation	
Assign measurement variable	) → 🗎 174
Value process variable	) → 🗎 174
Switch output simulation	] → 🗎 174
Switch status	) → 🗎 175
Simulation device alarm	→ 🗎 175
Simulation diagnostic event	) → 🗎 175

#### **Description of parameters**

Navigation 🛛 🗐 🖾 Exp

 $\blacksquare \blacksquare \quad \text{Expert} \rightarrow \text{Diagnostics} \rightarrow \text{Simulation}$ 

Assign measurement variable		
Navigation	■ Expert $\rightarrow$ Diagnostics $\rightarrow$ Simulation $\rightarrow$ Assign meas.var.	
Selection	<ul> <li>Off</li> <li>Level</li> <li>Interface *</li> <li>Level linearized</li> <li>Interface linearized</li> <li>Thickness linearized</li> </ul>	
Additional information	<ul> <li>The value of the variable to be simulated is defined in the Value process variable parameter (→  174).</li> <li>If Assign measurement variable ≠ Off, a simulation is active. This is indicated by a diagnotic message of the <i>Function check (C)</i> category.</li> </ul>	

Value process variable		Â
Navigation	Image: Barbon Simulation → Value proc. var.	
Prerequisite	Assign measurement variable (→ 🗎 174) ≠ Off	
User entry	Signed floating-point number	
Additional information	Downstream measured value processing and the signal output use this simulation value this way, users can verify whether the measuring device has been configured correctly.	

Switch output simulation	on	Â
Navigation	$\square$ Expert → Diagnostics → Simulation → Switch sim.	
Description	Switch the simulation of the switch output on and off.	
Selection	<ul><li>Off</li><li>On</li></ul>	

<sup>\*</sup> Visibility depends on order options or device settings

Â

Navigation	Image: Boostics → Simulation → Switch status
Prerequisite	Switch output simulation ( $\rightarrow \square 174$ ) = On
Description	Select the status of the status output for the simulation.
Selection	<ul><li>Open</li><li>Closed</li></ul>
Additional information	The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

Simulation device alarm		
Navigation	Expert → Diagnostics → Simulation → Sim. alarm	
Description	Switch the device alarm on and off.	
Selection	<ul><li>Off</li><li>On</li></ul>	
Additional information	When selecting the <b>On</b> option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.	
	An active simulation is indicated by the <b>C484 Simulation failure mode</b> diagnostic message.	

Simulation diagnostic event	
Navigation	Image: Boostime Simulation → Sim. diag. event
Description	Select a diagnostic event for the simulation process that is activated.
Additional information	When operated via the local display, the selection list can be filtered according to the event categories ( <b>Diagnostic event category</b> parameter).

## 16.4.8 "Device check" submenu

*Navigation*  $\square \square$  Diagnostics  $\rightarrow$  Device check

Start device check		
Navigation	Image Diagnostics → Device check → Start dev. check	
Description	Start a device check.	
Selection	<ul><li>No</li><li>Yes</li></ul>	
Additional information	In the case of a lost echo a device check can not be performed.	
Result device check		
Navigation		
Description	Displays the result of the device check.	
Additional information	<ul> <li>Meaning of the display options</li> <li>Installation ok Measurement possible without restrictions.</li> <li>Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to signal amplitudes.</li> <li>Measurement capability reduced A measurement is currently possible. Howerver, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.</li> </ul>	

 Check not done No device check has been performed.

Last check time	
Navigation	■ Diagnostics $\rightarrow$ Device check $\rightarrow$ Last check time
Description	Displays the operating time at which the last device check has been performed.
User interface	Character string comprising numbers, letters and special characters

#### Level signal

Navigation	■ Diagnostics $\rightarrow$ Device check $\rightarrow$ Level signal
Prerequisite	Device check has been performed.
Description	Displays result of the device check for the level signal.
User interface	<ul> <li>Check not done</li> <li>Check not OK</li> <li>Check OK</li> </ul>
Additional information	For <b>Level signal = Check not OK</b> : Check the mounting position of the device and the dielectric constant of the medium.

Launch signal	
Navigation	
Prerequisite	Device check has been performed.
Description	Displays result of the display check for the launch signal.
User interface	<ul><li>Check not done</li><li>Check not OK</li><li>Check OK</li></ul>
Additional information	For <b>Launch signal = Check not OK</b> : Check the mounting position of the device. In non- metallic vessels use a metal plate or a metal flange.



#### "Heartbeat" submenu

The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

**Detailed description** SD01872F

Navigation

□ □ Diagnostics → Heartbeat

# Index

# Α

71 71
Access authorization to parameters
Read access
Write access
Access code
Incorrect input
Access status display (Parameter)
Access status tooling (Parameter)
Accessories
Communication-specific
Device-specific
Service-specific
System components
Activate table (Parameter)
Actual diagnostics (Parameter)
Administration (Submenu)
Advanced process conditions (Parameter) 120
Advanced setup (Submenu)
Analog input 1 to 6 (Submenu)
Application
Assign channel 1 to 4 (Parameter)
Assign diagnostic behavior (Parameter) 142
Assign limit (Parameter)
Assign measurement variable (Parameter) 174
Assign status (Parameter)

# В

Backlight (Parameter)	52
Backup state (Parameter) 1	54
Bin type (Parameter)	07
Blocking distance (Parameter)	34

# С

# D

Data logging (Submenu)	169
Deactivate WHG (Wizard)	137
Decimal places 1 (Parameter)	149
Decimal places menu (Parameter)	151
Define access code (Parameter) 156,	158
Define access code (Wizard)	158

Define the access code
Device check (Submenu)
Device information (Submenu)
Device name (Parameter) 163
Device replacement
Device reset (Parameter) 156
Device tag (Parameter) 107, 163
Diagnostic event
In the operating tool
Diagnostic events
Diagnostic list
Diagnostic list (Submenu) 161
Diagnostic message
Diagnostics
Symbols
Diagnostics (Menu) 159
Diagnostics 1 (Parameter) 161
Diameter (Parameter) 129
DIP switch
see Write protection switch
Display (Submenu) 147
Display and operating module FHX50 47
Display channel 1 to 4 (Submenu)
Display damping (Parameter)
Display interval (Parameter)
Display module
Display symbols
Disposal
Distance (Parameter) 109, 113, 165
Distance unit (Parameter)
Document
Purpose
E

Electronics housing

Licetionies nousing
Design
Empty calibration (Parameter)
Enter access code (Parameter)
Envelope curve display
Event history
Event level
Explanation
Symbols
Event list (Submenu) 162
Event logbook (Submenu)
Event text
Events list
Extended order code 1 (Parameter)
Exterior cleaning

## F

±	
Fail safe type (Parameter)	115
Fail safe value (Parameter)	115
Failure mode (Parameter)	145
FHX50	47

Field of application

F F	
Residual risks	9
Filter options (Parameter)	2
Filtering the event logbook	1
Firmware version (Parameter)	
Flange	4
Format display (Parameter)	
Free text (Parameter)	
Full calibration (Parameter)	
Functional Safety Manual (FY)	7

## Η

Hardware write protection
Header (Parameter) 150
Header text (Parameter)
Heartbeat (Submenu) 178
Housing
Design
Turning

## I

1	
Input mask	. 59
Intended use	9
Intermediate height (Parameter)	130
Invert output signal (Parameter)	145

## К

Keypad lock	
Disabling	54
Enabling	54

# L

Language (Parameter) 147
Last backup (Parameter) 153
Last check time (Parameter)
Launch signal (Parameter)
Level (Parameter)
Level (Submenu)
Level correction (Parameter)
Level linearized (Parameter)
Level signal (Parameter)
Level unit (Parameter)
Linearization (Submenu)
Linearization type (Parameter)
Local display
see Diagnostic message
see In alarm condition
Locking status
Locking status (Parameter)
Logging interval (Parameter)

## Μ

Maintenance	4
Managing the device configuration	0
Mapping (Wizard) 11	3
Mapping end point (Parameter)	3
Maximum value (Parameter)	9
Measured value symbols	7
Measured values (Submenu) 16	5
Media	9

## N

Non-metal vessels	. 29
Number format (Parameter)	151

# 0

Operating elements
Diagnostic message
Operating module
Operating time (Parameter)
Operating time from restart (Parameter) 160
Operational safety
Order code (Parameter) 164
Out status (Parameter)
Out status HEX (Parameter)
Out value (Parameter)
Output echo lost (Parameter)
Overvoltage protection
General information

## Ρ

Present mapping (Parameter)
Present probe length (Parameter) 138, 140
Previous diagnostics (Parameter)
Probe grounded (Parameter)
Probe length correction (Wizard)
Probe settings (Submenu)
Process property (Parameter) 119
Product safety
PROFIBUS ident number (Parameter)
Purpose of this document
PV filter time (Parameter)

## R

Ramp at echo lost (Parameter)
Read access
Record map (Parameter)
Registered trademarks
Remedial measures
Calling up
Closing
Remote operation
Repair concept
Replacing a device
Requirements for personnel
Reset write protection (Parameter)
Result device check (Parameter)
Return
Rod probe
Design
Rod probes
Lateral loading capacity
Shortening

Rope probe	
Design	1
Rope probes	
Mounting	4
Shortening	1

# S

Safety instructions	
Basic	)
Safety Instructions (XA)	7
Safety settings (Submenu)	
Securing rod probes	
Securing rope probes	
Separator (Parameter)	
Serial number (Parameter) 163	
Service interface (CDI)	
Setting the operating language	
Settings	
Managing the device configuration	)
Operating language 65	
Setup (Menu)	
Signal quality (Parameter)	
Simulation (Submenu)	
Simulation device alarm (Parameter)	
Simulation diagnostic event (Parameter)	
Spare parts	
Nameplate	
Start device check (Parameter)	
Status PROFIBUS Master Config (Parameter) 164	
Status signals	
Submenu	•
Administration	5
Advanced setup	
Analog input 1 to 6	
Configuration backup display	
Data logging	
Device check	
Device information	
Diagnostic list	
Display	
Display channel 1 to 4	
Event list	
Event logbook	
Events list	
Heartbeat	
Level	
Linearization	
Measured values	
Probe settings	
Safety settings	-
Simulation	
Switch output	
Switch output (Submenu)	
Switch output (Sublicita)	
Switch output simulation (Parameter)	
Switch status (Parameter)	
Switch-off delay (Parameter)	
Switch-off value (Parameter)	
Switch-on delay (Parameter)	
	*

Switch-on value (Parameter) 143
Symbols
For correction
In the text and numeric editor
System components

## Т

Table mode (Parameter)130Table number (Parameter)131Terminal voltage 1 (Parameter)166Thermal insulation30Threaded connection33Timestamp (Parameter)159, 160Timestamp 1 to 5 (Parameter)161
Tool
Transmitter
Turning the display 37
Turning the display module
Transmitter housing
Turning
Troubleshooting
Turning the display
Turning the display module

## U

Unit after linearization (Parameter)	127
Use of the measuring device	
see Intended use	
Use of the measuring devices	
Borderline cases	9
Incorrect use	. 9

## V

Value 1 display (Parameter)	149
Value echo lost (Parameter)	133
Value process variable (Parameter)	174

## W

••
WHG confirmation (Wizard) 136
Wizard
Deactivate WHG
Define access code
Mapping
Probe length correction
WHG confirmation
Workplace safety 10
Write access
Write protection
Via access code
Via write protection switch
Write protection switch



www.addresses.endress.com

