

Description of Device Parameters

Cerabar PMC51B

Process pressure measurement
PROFINET with Ethernet-APL

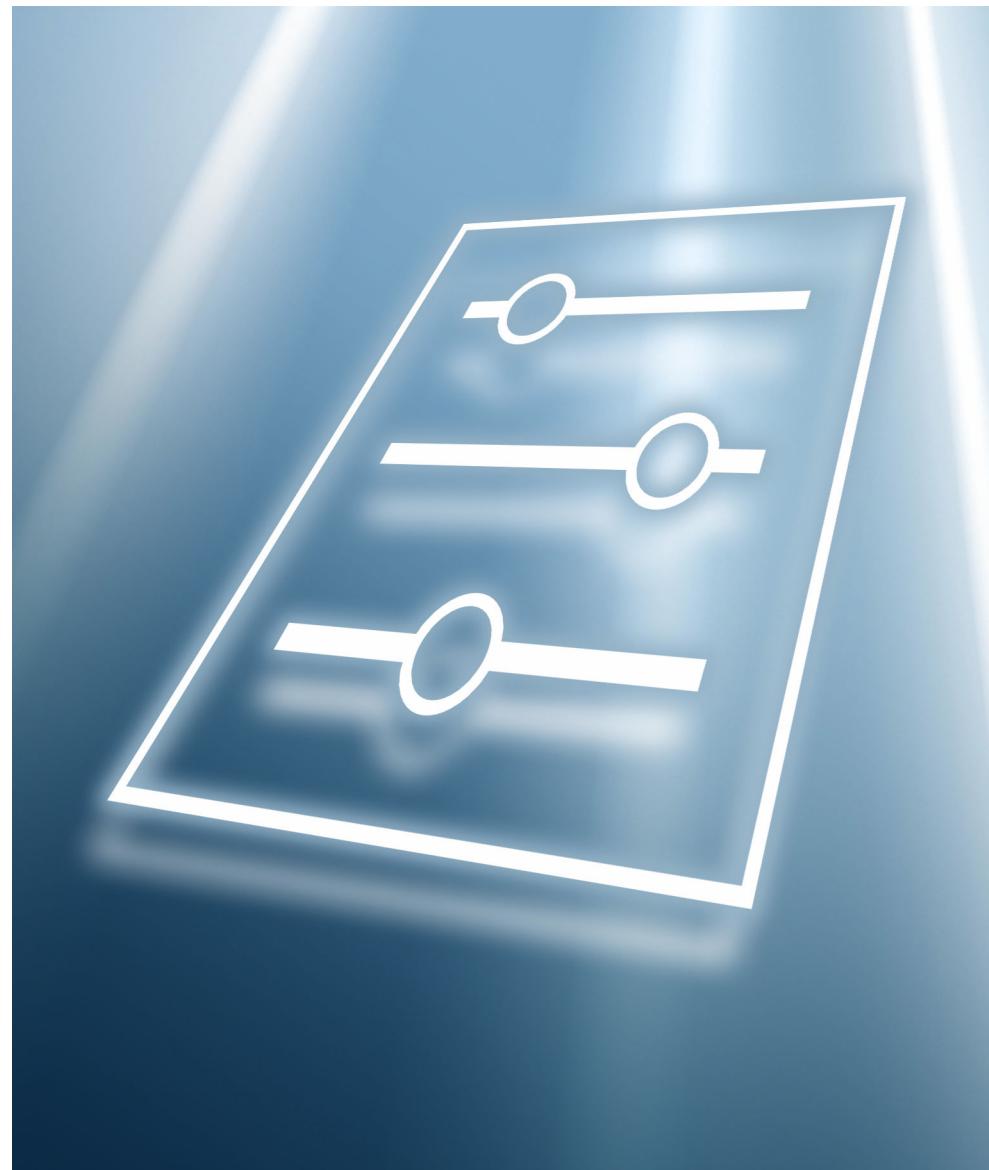


Table of contents

1	About this document	4
1.1	Document function	4
1.2	Target group	4
1.3	Using this document	4
1.4	Symbols used	5
1.5	Documentation	5
2	Overview of the operating menu	6
3	Description of device parameters ...	19
3.1	User navigation	19
3.2	"Device information" menu	22
3.3	"Guidance" menu	23
3.4	"Diagnostics" menu	38
3.5	"Application" menu	54
3.6	"System" menu	71
Index	95	

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters. The document provides a detailed explanation of each individual parameter.

Performance of tasks that require detailed knowledge of the functioning of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases

1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

This document lists the submenus and parameters that are available when the "Maintenance" option user role is enabled.

 For the operating concept of the operating menus, see the Operating Instructions.

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

- Navigation: Navigation path to the parameter via the local display
- Prerequisite: The parameter is only available under these specific conditions
- Description: Description of the parameter function
- Selection: List of the individual options for the parameter
- User entry: Input range for the parameter
- User interface: Display value/data of the parameter
- Additional information:
 - On individual options
 - On display values/data
 - On the input range
 - On the factory setting
 - On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of Information

Additional information: 

Reference to documentation: 

Operation via local display: 

Operation via operating tool: 

Write-protected parameter: 

1.5 Documentation

1.5.1 Standard documentation

Operating Instructions

 The Operating Instructions are available via the Internet: www.endress.com → Download

1.5.2 Supplementary device-dependent documentation

Special Documentation

 The Special Documentation is available via the Internet: www.endress.com → Download

2 Overview of the operating menu

Navigation

Operating tool

Device information	→ 22
Status signal	→ 22
Pressure	→ 22
Scaled variable	→ 22
Do not show this message again	→ 22
Guidance	→ 19
► Commissioning	→ 23
► Device identification	→ 23
Device tag	→ 23
Device name	→ 23
Serial number	→ 23
Extended order code 1	→ 24
Extended order code 2	→ 24
Extended order code 3	→ 24
► Device identification	→ 25
Locking status	→ 25
► Device identification	→ 26
Time zone	→ 26
Date/time	→ 27
► Device identification	→ 27
PROFINET device name	→ 27
PROFINET device name	→ 27
IP address	→ 27

Descriptor	→ 28
MAC address	→ 28
Device ID	→ 28
Manufacturer ID	→ 28
► Measurement adjustments	→ 29
Damping	→ 29
Assign scaled variable?	→ 29
► Measurement adjustments	→ 29
Pressure unit	→ 29
Temperature unit	→ 30
► Measurement adjustments	→ 30
Pressure unit	→ 30
Scaled variable unit	→ 31
Free text	→ 31
Temperature unit	→ 32
► Measurement adjustments	→ 32
Zero adjustment	→ 32
Pressure	→ 33
► Output settings	→ 33
Scaled variable transfer function	→ 33
► Output settings	→ 33
Lower Range Limit	→ 33
Upper Range Limit	→ 34
Minimum span	→ 34
► Output settings	→ 34

Pressure	→ 34
Scaled variable	→ 34
► Output settings	→ 35
Scaled variable transfer function	→ 35
Pressure value 1	→ 35
Scaled variable value 1	→ 35
Pressure value 2	→ 36
Scaled variable value 2	→ 36
Lower Range Limit	→ 36
Upper Range Limit	→ 36
Minimum span	→ 36
► Output settings	→ 37
Assign process variable	→ 37
Diagnostics	→ 38
► Active diagnostics	→ 38
Active diagnostics	→ 38
Timestamp	→ 38
Previous diagnostics	→ 39
Timestamp	→ 39

Operating time from restart	→ 39
Operating time	→ 40
► Event logbook	→ 40
Filter options	→ 40
► Minimum/maximum values	→ 41
Pressure min	→ 41
Counter limit underruns sensor Pmin	→ 41
Counter underruns of user limit Pmin	→ 41
Minimum sensor temperature	→ 41
Counter limit underruns sensor Tmin	→ 42
Counter underruns of user limit Tmin	→ 42
Minimum terminal voltage	→ 42
Minimum electronics temperature	→ 42
Reset user defined counters P and T	→ 42
Pressure max	→ 43
Counter limit overruns sensor Pmax	→ 43
Counter overruns of user limit Pmax	→ 43
Maximum sensor temperature	→ 43
Counter limit overruns sensor Tmax	→ 44
Counter overruns of user limit Tmax	→ 44
Maximum terminal voltage	→ 44
Maximum electronics temperature	→ 44
► Simulation	→ 45
Simulation	→ 45

Diagnostic event simulation	→ 45
Value pressure simulation	→ 45
► Diagnostic settings	→ 46
► Properties	→ 46
SSD Out of range delay time	→ 46
SSD Monitoring delay time	→ 46
500 Process alert pressure	→ 46
Low alert value	→ 46
High alert value	→ 47
501 Process alert scaled variable	→ 47
Low alert value	→ 47
High alert value	→ 47
User temperature process alert	→ 48
Low alert value	→ 48
High alert value	→ 48
► Configuration	→ 48
► Configuration	→ 48
436 Diagnostic behavior	→ 48
436 Event category	→ 49
500 Diagnostic behavior	→ 49
500 Event category	→ 49
500 Event category	→ 49

500 Event category	→ 49
500 Event category	→ 49
501 Diagnostic behavior	→ 50
501 Event category	→ 50
502 Diagnostic behavior	→ 50
502 Event category	→ 51
► Process	→ 51
Sensor pressure range behavior	→ 51
Sensor pressure range behavior	→ 51

841 Event category	→ 51
900 Event category	→ 52
900 Diagnostic behavior	→ 52
906 Event category	→ 53
Application	→ 54
► Measured values	→ 54
Pressure	→ 54
Scaled variable	→ 54
Sensor temperature	→ 54
Terminal voltage 1	→ 54
Electronics temperature	→ 54

► Measuring units	→ 55
Pressure unit	→ 55
Decimal places pressure	→ 55
Temperature unit	→ 55
Scaled variable unit	→ 56
Free text	→ 57
Decimal places scaled variable	→ 57
► PROFINET	→ 65
► Configuration	→ 65
PROFINET device name	→ 65
PROFINET device name	→ 65
Parameter change acknowledge mode	→ 65
Acknowledge parameter change	→ 66
Descriptor	→ 66
► Analog input	→ 66
► Analog input 1 to 7	→ 66
Process value	→ 66
Assign process variable	→ 66
Damping	→ 67
► Binary input	→ 67
► Binary input 1 to 2	→ 67
Controller input value	→ 67
► Binary output	→ 68
Set point value	→ 68
BO block output value	→ 68

Failure behavior	→ 68
Failure behavior delay	→ 68
Fixed value	→ 69
► Information	→ 69
Device ID	→ 69
PA profile version	→ 69
► Application relation	→ 69
AR state	→ 69
MAC address IO controller	→ 70
MAC address backup IO controller	→ 70
IP address IO controller	→ 70
IP address backup IO controller	→ 70
System	→ 71
► Device management	→ 71
Device tag	→ 71
Locking status	→ 71
Configuration counter	→ 72
Reset device	→ 72
► User management	→ 73
User role	→ 73
Password	→ 73
Enter access code	→ 73
Status password entry	→ 73
New password	→ 74
Confirm new password	→ 74

Status password entry	→ 73
Old password	→ 74
New password	→ 74
Confirm new password	→ 74
Status password entry	→ 73
Reset password	→ 74
Status password entry	→ 73
Old password	→ 74
Status password entry	→ 73
► Connectivity	→ 75
► Interfaces	→ 75
Display operation	→ 75
Web server functionality	→ 75
Bluetooth activation	→ 75
Service (UART-CDI)	→ 75
► Ethernet	→ 76
MAC address	→ 76
IP address	→ 76
Subnet mask	→ 76
Default gateway	→ 76
Service IP active	→ 77
Interface connection status	→ 77
Interface speed	→ 77
Duplex status	→ 77
Auto negotiation status	→ 77

Received packet number	→ 78
Sent packet number	→ 78
Number of failed received packets	→ 78
Number of failed sent packets	→ 78
Signal to noise ratio	→ 78
Number of failed received packets	→ 78
Active TCP connections	→ 79
Supported TCP connections	→ 79
TCP connection requests	→ 79
TCP connection timeouts	→ 79
Number of TCP connections closed	→ 79
Number of received TCP packets	→ 79
TCP sent packet number	→ 80
Number of TCP failed received packets	→ 80
Available UDP ports	→ 80
UDP received packet number	→ 80
UDP sent packet number	→ 80
Number of UDP failed received packets	→ 80
► Display	→ 81
Language	→ 81
Format display	→ 81
Value 1 display	→ 82
Value 2 display	→ 82
Value 3 display	→ 83

Value 4 display	→ 83
Contrast display	→ 84
► Date/time	→ 84
Date/time	→ 84
Time zone	→ 84
Enable NTP	→ 85
NTP server address	→ 86
Clock synchronized	→ 86
► Geolocation	→ 86
Location description	→ 86
Longitude	→ 86
Latitude	→ 87
Altitude	→ 87
► Information	→ 87
Device name	→ 87
Manufacturer	→ 87
Serial number	→ 88
Order code	→ 88
Firmware version	→ 88
Hardware version	→ 89
Extended order code 1	→ 89
Extended order code 2	→ 89

Extended order code 3	→ 89
Checksum	→ 90
► Software configuration	→ 90
Activate SW option	→ 90
Software option overview	→ 91
► Firmware update	→ 91
► Start update	→ 91
I have read the warning texts.	→ 92
► Device information	→ 92
Device tag	→ 92
Device name	→ 93
Package version	→ 93
► Select file	→ 93
File check status	→ 93
► Performing verification	→ 94
File validation status	→ 94
► Finish	→ 94
I have read the warning texts.	→ 94

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the operating tool.

The operating menu is dynamic and adapts the choice of parameters to the selected options.

3.1 User navigation

The Guidance main menu contains functions which enable users to perform basic tasks swiftly, e.g. commissioning.

These are primarily guided wizards and cross-subject special functions.

Navigation

  Guidance

3.1.1 Overview of the operating menu

User navigation

- Commissioning (→  23)
- Import/Export →  20
- Compare →  21

3.1.2 Commissioning

Run this wizard to put the device into operation. Enter the appropriate value in each parameter or select the appropriate option.



If the wizard is canceled before all the necessary parameters have been configured, any settings already made are saved. For this reason, the device may then be in an undefined state!

In such situations, it is advisable to reset the device to the factory default settings.

The following parameters are configured in the Commissioning wizard:

- **Device identification** (→ [23](#))
This page summarizes the most important data characterizing the device. Some of the parameters can be edited, others are displayed for information only.
 - Device tag (→ [23](#))
 - Device name (→ [23](#))
 - Serial number (→ [23](#))
 - Extended order code 1 (→ [24](#))
 - Extended order code 2 (→ [24](#))
 - Extended order code 3 (→ [24](#))
 - Locking status (→ [25](#))
 - Time zone (→ [26](#))
 - Date/time (→ [27](#))
 - PROFINET device name (→ [27](#))
 - IP address (→ [27](#))
 - Descriptor (→ [28](#))
 - MAC address (→ [28](#))
 - Device ID (→ [28](#))
 - Manufacturer ID (→ [28](#))
- **Measurement adjustments** (→ [29](#))
 - Damping (→ [29](#))
 - Assign scaled variable? (→ [29](#))
 - Pressure unit (→ [29](#))
 - Temperature unit (→ [30](#))
 - Scaled variable unit (→ [31](#))
 - Free text (→ [31](#))
 - Temperature unit (→ [30](#))
 - Temperature unit (→ [30](#))
 - Zero adjustment (→ [32](#))
 - Pressure (→ [22](#))
- **Output settings** (→ [33](#))
 - Scaled variable transfer function (→ [33](#))
 - Lower Range Limit (→ [33](#))
 - Upper Range Limit (→ [34](#))
 - Minimum span (→ [34](#))
 - Pressure (→ [34](#))
 - Scaled variable (→ [34](#))
 - Pressure value 1 (→ [35](#))
 - Scaled variable value 1 (→ [35](#))
 - Pressure value 2 (→ [36](#))
 - Scaled variable value 2 (→ [36](#))
 - Assign process variable (→ [37](#))

3.1.3 Import / Export

Save / Load

- **Save:** The device settings can be saved in a .deh file.
- **Load:** The device settings saved in a .deh file can be written to the device.

Create documentation

- Device documentation can be saved in PDF format under "Create documentation".
- This documentation contains the following general device information:
 - Information on device parameters
 - Information on linearization
 - Echo curves
 - Event list
 - Diagnostic list

3.1.4 Compare

Compare datasets

This function can be used to compare the following datasets:

- Datasets in the .deh file format from the import/export function
- Datasets with the configuration currently in the device

3.2 "Device information" menu

Navigation

Device info

Status signal

Navigation

Device info → Status signal

User interface

- OK
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- ---
- Not categorized

Pressure

Navigation

Device info → Pressure

Scaled variable

Navigation

Device info → Scaled variable

User interface

Signed floating-point number

Do not show this message again

Navigation

Device info → Don't show again

Selection

Yes

3.3 "Guidance" menu

Navigation

  Guidance

3.3.1 "Commissioning" wizard

Navigation

  Guidance → Commissioning

"Device identification" wizard

Navigation

  Guidance → Commissioning → Device ident.

Device tag

Navigation

 Guidance → Commissioning → Device ident. → Device tag

Description

Enter a name for the measuring point to identify the measuring device in the plant

User entry

Character string comprising numbers, letters and special characters (32)

Device name

Navigation

 Guidance → Commissioning → Device ident. → Device name

Description

Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface

Max. 32 characters such as letters or numbers.

Serial number

Navigation

 Guidance → Commissioning → Device ident. → Serial number

Description

Displays the serial number of the measuring device.

 The number can be found on the nameplate of the sensor and transmitter.

User interface

Max. 11-digit character string comprising letters and numbers.

Additional information*Description***Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer:
www.endress.com/deviceviewer

Extended order code 1**Navigation**

Guidance → Commissioning → Device ident. → Ext. order cd. 1

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.

User interface

Character string

Factory setting

–

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

Extended order code 2**Navigation**

Guidance → Commissioning → Device ident. → Ext. order cd. 2

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.



The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface

Character string

Factory setting

–

Extended order code 3**Navigation**

Guidance → Commissioning → Device ident. → Ext. order cd. 3

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.



The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface

Character string

Factory setting

-

"Device identification" wizard*Navigation*

Guidance → Commissioning → Device ident.

Locking status**Navigation**

Guidance → Commissioning → Device ident. → Locking status

Description

Displays the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information*User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

*Selection**Function scope of the "Locking status" parameter*

Options	Description
None	The access status displayed in the Access status display parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

"Device identification" wizard*Navigation* Guidance → Commissioning → Device ident.**Time zone****Navigation** Guidance → Commissioning → Device ident. → Time zone**Description**

Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:30
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+13:45
- UTC+14:00

Date/time

Navigation  Guidance → Commissioning → Device ident. → Date/time

Description Displays the date and time entered.

User interface Character string comprising numbers, letters and special characters

"Device identification" wizard

Navigation   Guidance → Commissioning → Device ident.

PROFINET device name

Navigation  Guidance → Commissioning → Device ident. → PROFINET DevName

Description Up to 240 characters are allowed.
The following syntax must be used:
 - 1 or more identifiers, separated with [.]
 - Identifier length is 1 to 63 characters
 - Identifier consists of [a-z 0-9] only lowercase letters and numbers allowed.

User entry Character string comprising numbers, letters and special characters (240)

PROFINET device name

Navigation  Guidance → Commissioning → Device ident. → PROFINET DevName

Description Shows the short form of the PROFINET device name for the measuring point

User interface Character string comprising numbers, letters and special characters

IP address

Navigation  Guidance → Commissioning → Device ident. → IP address

Description Enter the IP address of the measuring device

User entry Character string comprising numbers, letters and special characters (15)

Descriptor

Navigation	 Guidance → Commissioning → Device ident. → Descriptor
Description	Enter a description for the measuring point
User entry	Character string comprising numbers, letters and special characters (54)

MAC address

Navigation	 Guidance → Commissioning → Device ident. → MAC Address
Description	Shows the MAC address of the measuring device
User interface	Character string comprising numbers, letters and special characters

Device ID

Navigation	 Guidance → Commissioning → Device ident. → Device ID
User interface	0 to 65 535

Manufacturer ID

Navigation	 Guidance → Commissioning → Device ident. → Manufacturer ID
User interface	0 to 65 535

"Measurement adjustments" wizard*Navigation* Guidance → Commissioning → Meas. adjust.**Damping****Navigation** Guidance → Commissioning → Meas. adjust. → Damping**Description**

The damping is effective before the measured value is further processed, i.e., before the following processes:

- Scaling
- Limit value monitoring
- Forwarding to display
- Forwarding to Analog Input Block

Note:

The Analog Input Block has its own “Damping” parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.

User entry

0 to 999.0 s

Assign scaled variable?**Navigation** Guidance → Commissioning → Meas. adjust. → Scaled variable?**Selection**

- No
- Yes

"Measurement adjustments" wizard*Navigation* Guidance → Commissioning → Meas. adjust.**Pressure unit****Navigation** Guidance → Commissioning → Meas. adjust. → Pressure unit**Description**

Use this function to select the unit for the pipe pressure.

Selection*SI units*

- MPa
- kPa
- Pa
- bar
- mbar a
- torr
- atm
- kgf/cm²
- gf/cm²

US units

psi

Other units

- inH₂O
- inH₂O (4°C)
- mmH₂O
- mmH₂O (4°C)
- mH₂O
- mH₂O (4°C)
- ftH₂O
- inHg
- mmHg

Temperature unit**Navigation**

Guidance → Commissioning → Meas. adjust. → Temperature unit

Description

Use this function to select the unit for the temperature.

Selection*SI units*

- °C
- K

US units

°F

Factory setting

Country-specific:

- °C
- °F

Additional information*Selection***"Measurement adjustments" wizard***Navigation*

Guidance → Commissioning → Meas. adjust.

Pressure unit**Navigation**

Guidance → Commissioning → Meas. adjust. → Pressure unit

Description

Use this function to select the unit for the pipe pressure.

Selection*SI units*

- MPa
- kPa
- Pa
- bar
- mbar a
- torr
- atm
- kgf/cm²
- gf/cm²

US units

psi

Other units

- inH₂O
- inH₂O (4°C)
- mmH₂O
- mmH₂O (4°C)
- mH₂O
- mH₂O (4°C)
- ftH₂O
- inHg
- mmHg

Scaled variable unit**Navigation**

Guidance → Commissioning → Meas. adjust. → SV unit

Description

Use 'Free text', first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection*SI units*

- %
- mm
- cm
- m
- l
- hl
- m³
- g
- kg
- t
- g/s
- kg/s
- kg/min
- kg/h
- t/min
- t/h
- t/d
- m³/s
- m³/min
- m³/h
- m³/d
- l/s
- l/min
- l/h
- Nm³/h
- Nl/h
- Sm³/s
- Sm³/min
- Sm³/h
- Sm³/d
- Nm³/s
- g/cm³
- kg/m³
- Nm³/min
- Nm³/d

US units

- ft
- in
- ft³
- gal (us)
- bbl (us;oil)
- oz
- lb
- STon
- lb/s
- lb/min
- lb/h
- STon/min
- STon/h
- STon/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- Sft³/min
- Sft³/h
- Sft³/d

Imperial units

- gal (imp)
- gal/s (imp)
- gal/min (imp)
- gal/h (imp)

Custom-specific units

Free text

Free text**Navigation**

Guidance → Commissioning → Meas. adjust. → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Temperature unit

Navigation Guidance → Commissioning → Meas. adjust. → Temperature unit

Description Use this function to select the unit for the temperature.

Selection *SI units* *US units*
■ °C °F
■ K

Factory setting Country-specific:
■ °C
■ °F

Additional information *Selection*

"Measurement adjustments" wizard

Navigation Guidance → Commissioning → Meas. adjust.

Zero adjustment

Navigation Guidance → Commissioning → Meas. adjust. → Zero adjustment

Description Due to the mounting position of the measuring instrument, a pressure shift may occur.
The pressure shift can be corrected with the zero adjustment.

Selection ■ No
■ Confirm

Pressure

Navigation

 Guidance → Commissioning → Meas. adjust. → Pressure

"Output settings" wizard

Navigation

  Guidance → Commissioning → Output settings

Scaled variable transfer function



Navigation

 Guidance → Commissioning → Output settings → Scal. v. trans.

Description

'Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. Deviating from the bar graph (output signal), the digital value on the display shows continues to be the eradicated value.

'Square root'

The root flow signal is used for the output signal. The 'Flow (square root)' output signal is indicated on the on-site display with a root symbol.

'Table'

The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

"Output settings" wizard

Navigation

  Guidance → Commissioning → Output settings

Lower Range Limit

Navigation

 Guidance → Commissioning → Output settings → LRL

Description

Indicates the lower measuring limit of the sensor.

User interface

Signed floating-point number

* Visibility depends on order options or device settings

Upper Range Limit

Navigation	 Guidance → Commissioning → Output settings → URL
Description	Indicates the upper measuring limit of the sensor.
User interface	Signed floating-point number

Minimum span

Navigation	 Guidance → Commissioning → Output settings → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number

"Output settings" wizard

Navigation   Guidance → Commissioning → Output settings

Pressure

Navigation	 Guidance → Commissioning → Output settings → Pressure
User entry	Signed floating-point number

Scaled variable

Navigation	 Guidance → Commissioning → Output settings → Scaled variable
User entry	Signed floating-point number

"Output settings" wizard**Navigation**
 Guidance → Commissioning → Output settings
**Scaled variable transfer function****Navigation**
 Guidance → Commissioning → Output settings → Scal. v. trans.
Description

'Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. Deviating from the bar graph (output signal), the digital value on the display shows continues to be the eradicated value.

'Square root'

The root flow signal is used for the output signal. The 'Flow (square root)' output signal is indicated on the on-site display with a root symbol.

'Table'

The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

**Pressure value 1****Navigation**
 Guidance → Commissioning → Output settings → P. value 1
Description

Enter pressure for the first scaling point. 'Scaled variable value 1' will be allocated to this pressure.

User entry

Signed floating-point number

**Scaled variable value 1****Navigation**
 Guidance → Commissioning → Output settings → Sc. var.value 1
Description

Enter value for the first scaling point. This value is allocated to 'Pressure value 1'.

User interface

Signed floating-point number

* Visibility depends on order options or device settings

Pressure value 2

Navigation	Guidance → Commissioning → Output settings → P. value 2
Description	Enter pressure for the second scaling point. 'Scaled variable value 2' will be allocated to this pressure.
User entry	Signed floating-point number

Scaled variable value 2

Navigation	Guidance → Commissioning → Output settings → Sc. var.value 2
Description	Enter value for the second scaling point. This value is allocated to 'Pressure value 2'.
User entry	Signed floating-point number

Lower Range Limit

Navigation	Guidance → Commissioning → Output settings → LRL
Description	Indicates the lower measuring limit of the sensor.
User interface	Signed floating-point number

Upper Range Limit

Navigation	Guidance → Commissioning → Output settings → URL
Description	Indicates the upper measuring limit of the sensor.
User interface	Signed floating-point number

Minimum span

Navigation	Guidance → Commissioning → Output settings → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number

"Output settings" wizard*Navigation* Guidance → Commissioning → Output settings**Assign process variable****Navigation**

- Guidance → Commissioning → Output settings → Assign variable
- Guidance → Commissioning → Output settings → Assign variable
- Guidance → Commissioning → Output settings → Assign variable
- Guidance → Commissioning → Output settings → Assign variable
- Guidance → Commissioning → Output settings → Assign variable
- Guidance → Commissioning → Output settings → Assign variable
- Guidance → Commissioning → Output settings → Assign variable

Description

Select a process variable

User interface

- Pressure *
- Scaled variable *
- Sensor temperature *
- Sensor pressure *
- Electronics temperature *
- Median of pressure signal *
- Noise of pressure signal *

Additional information*User interface***"Sensor pressure" option**

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

* Visibility depends on order options or device settings

3.4 "Diagnostics" menu

Navigation  Diagnostics

3.4.1 "Active diagnostics" submenu

Navigation  Diagnostics → Active diagnos.

Active diagnostics

Navigation   Diagnostics → Active diagnos. → Active diagnos.

Prerequisite A diagnostic event has occurred.

Description Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *User interface*
 Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu.

Example

For the display format:
☒ F271 Main electronic failure

Timestamp

Navigation   Diagnostics → Active diagnos. → Timestamp

Description Displays the operating time when the current diagnostic message occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*
 The diagnostic message can be viewed via the **Actual diagnostics** parameter
(→  38).

Example

For the display format:
24d12h13m00s

Previous diagnostics

Navigation	 Diagnostics → Active diagnos. → Prev.diagnostics
Prerequisite	Two diagnostic events have already occurred.
Description	Displays the diagnostic message that occurred before the current message.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<p><i>User interface</i></p> <p> Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p>
	<p><i>Example</i></p> <p>For the display format: ☒F271 Main electronic failure</p>

Timestamp

Navigation	 Diagnostics → Active diagnos. → Timestamp
Description	Displays the operating time when the last diagnostic message before the current message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<p><i>User interface</i></p> <p> The diagnostic message can be viewed via the Previous diagnostics parameter (→  39).</p>
	<p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>

Operating time from restart

Navigation	 Diagnostics → Active diagnos. → Time fr. restart
Description	Indicates how long the device has been in operation since the last time the device was restarted.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation	  Diagnostics → Active diagnos. → Operating time
Description	Indicates how long the device has been in operation.
Additional information	Maximum time: 9 999 d (≈ 27 years)

3.4.2 "Event logbook" submenu

Navigation  Diagnostics → Event logbook

Filter options

Navigation	 Diagnostics → Event logbook → Filter options
Description	Use this function to select the category whose event messages are displayed in the event list of the operating tool.
Selection	<ul style="list-style-type: none">■ All■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ Information (I)■ Not categorized
Additional information	<p><i>Description</i></p> <p> The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:</p> <ul style="list-style-type: none">■ F = Failure■ C = Function Check■ S = Out of Specification■ M = Maintenance Required

3.4.3 "Minimum/maximum values" submenu

Navigation



Diagnostics → Min/max val.

Pressure min

Navigation



Diagnostics → Min/max val. → Pressure min

Description

Minimum or maximum value measured by device.

User interface

Signed floating-point number

Counter limit underruns sensor Pmin

Navigation



Diagnostics → Min/max val. → Counter P < Pmin

Description

Counts how many times the value underruns the sensor specific minimum values. Sensor specific minimum values are shown in Application/Sensor menu.

User interface

0 to 65 535

Counter underruns of user limit Pmin

Navigation



Diagnostics → Min/max val. → Counter < P user

Description

Counts how many times the value underruns the minimum values defined by the user. User defined minimum values are shown in Diagnostic/Diagnostic settings/Properties menu.

User interface

0 to 65 535

Minimum sensor temperature

Navigation



Diagnostics → Min/max val. → Min. sensor temp

Description

Minimum or maximum value measured by device.
Users cannot reset this value.

User interface

-273.15 to 9 726.85 °C

Counter limit underruns sensor Tmin

Navigation  Diagnostics → Min/max val. → Counter T < Tmin**Description** Counts how many times the value underruns/overruns the sensor specific minimum/maximum values.
Sensor specific minimum/maximum values are shown in Application/Sensor menu.**User interface** 0 to 65 535

Counter underruns of user limit Tmin

Navigation  Diagnostics → Min/max val. → Counter < T user**User interface** 0 to 65 535

Minimum terminal voltage

Navigation  Diagnostics → Min/max val. → Min.term.volt.**Description** Minimum or maximum measured terminal (supply) voltage.**User interface** 0.0 to 50.0 V

Minimum electronics temperature

Navigation  Diagnostics → Min/max val. → Min.electr.temp.**Description** Minimum or maximum measured main electronics temperature.**User interface** Signed floating-point number

Reset user defined counters P and T**Navigation**  Diagnostics → Min/max val. → Reset count. P T**Selection**

- Cancel
- Confirm

Pressure max

Navigation  Diagnostics → Min/max val. → Pressure max

Description Minimum or maximum value measured by device.

User interface Signed floating-point number

Counter limit overruns sensor Pmax

Navigation  Diagnostics → Min/max val. → Counter P > Pmax

Description Counts how many times the value overruns the sensor specific maximum values.
Sensor specific maximum values are shown in Application/Sensor menu.

User interface 0 to 65 535

Counter overruns of user limit Pmax

Navigation  Diagnostics → Min/max val. → Counter > P user

Description Counts how many times the value overruns the maximum values defined by the user.
User defined maximum values are shown in Diagnostic/Diagnostic settings/Properties menu.

User interface 0 to 65 535

Maximum sensor temperature

Navigation  Diagnostics → Min/max val. → Max. sensor temp

Description Minimum or maximum value measured by device.
Users cannot reset this value.

User interface -273.15 to 9 726.85 °C

Counter limit overruns sensor Tmax

Navigation  Diagnostics → Min/max val. → Counter T > Tmax**Description** Counts how many times the value underruns/overruns the sensor specific minimum/maximum values.
Sensor specific minimum/maximum values are shown in Application/Sensor menu.**User interface** 0 to 65 535**Counter overruns of user limit Tmax**

Navigation  Diagnostics → Min/max val. → Counter > T user**User interface** 0 to 65 535**Maximum terminal voltage**

Navigation  Diagnostics → Min/max val. → Max.term.voltage**Description** Minimum or maximum measured terminal (supply) voltage.**User interface** 0.0 to 50.0 V**Maximum electronics temperature**

Navigation  Diagnostics → Min/max val. → Max.electr.temp.**Description** Minimum or maximum measured main electronics temperature.**User interface** Signed floating-point number

3.4.4 "Simulation" submenu

Navigation



Diagnostics → Simulation

Simulation



Navigation

Diagnostics → Simulation → Simulation

Description

Simulates one or more process variables and/or events.

Warning:

Output will reflect the simulated value or event.

Selection

- Off
- Pressure
- Diagnostic event simulation

Diagnostic event simulation



Navigation

Diagnostics → Simulation → Diag. event sim.

Description

Use this function to select a diagnostic event for the simulation process that is activated.

Selection

- Off
- Diagnostic event picklist (depends on the category selected)

Additional information

Description

For the simulation, you can choose from the diagnostic events of the category selected in the **Diagnostic event category** parameter.

Value pressure simulation



Navigation

Diagnostics → Simulation → Value pressure

User entry

Signed floating-point number

3.4.5 "Diagnostic settings" submenu

Navigation



Diagnostics → Diag. settings

"Properties" submenu

Navigation



Diagnostics → Diag. settings → Properties

SSD Out of range delay time



Navigation



Diagnostics → Diag. settings → Properties → SSD Delay time

User entry

0 to 604 800 s

SSD Monitoring delay time



Navigation



Diagnostics → Diag. settings → Properties → SSD Verz. Zeit

User entry

0 to 86 400 s

500 Process alert pressure



Navigation



Diagnostics → Diag. settings → Properties → 500 Pressure

Description

Define whether user-defined pressure limits should be set.

If 'No' is selected, no analysis will take place and no event message will be generated.

Selection

- Off
- On

Low alert value



Navigation



Diagnostics → Diag. settings → Properties → Low alert value

Description

Set area.

If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

Signed floating-point number

High alert value

Navigation	Diagnostics → Diag. settings → Properties → High alert value
Description	Set area. If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.
User entry	Signed floating-point number

501 Process alert scaled variable

Navigation	Diagnostics → Diag. settings → Properties → 501 Scaled var.
Description	Define whether user-defined limits should be set. If 'No' is selected, no analysis will take place and no event message will be generated.
Selection	<ul style="list-style-type: none">■ Off■ On

Low alert value

Navigation	Diagnostics → Diag. settings → Properties → Low alert value
Description	Set area. If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.
User entry	Signed floating-point number

High alert value

Navigation	Diagnostics → Diag. settings → Properties → High alert value
Description	Set area. If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.
User entry	Signed floating-point number

User temperature process alert**Navigation**

█ Diagnostics → Diag. settings → Properties → UserTemp alert

Description

Define whether the user-defined sensor temperature limits should be set. If 'No' no analysis and therefore no event message will take place.

Selection

- Off
- On

Low alert value**Navigation**

█ Diagnostics → Diag. settings → Properties → Low alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

-50 to 150 °C

High alert value**Navigation**

█ Diagnostics → Diag. settings → Properties → High alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

-50 to 150 °C

"Configuration" submenu

Navigation █ Diagnostics → Diag. settings → Configuration → Configuration

436 Diagnostic behavior**Navigation**

█ Diagnostics → Diag. settings → Configuration → Configuration → 436 Diag. behav.

Selection

- Warning
- Logbook entry only

436 Event category

Navigation	 Diagnostics → Diag. settings → Configuration → Configuration → 436 Event category
User interface	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Not categorized

500 Diagnostic behavior

Navigation	  Diagnostics → Diag. settings → Configuration → Configuration → 500 Diag. behav.
Description	<p>Select event behavior</p> <p>'Logbook entry only': no digital or analog transmission of the message</p> <p>'Warning': Current output unchanged. Message is output digitally (default).</p> <p>'Alarm': Current output assumes the set alarm current.</p> <p>Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.</p>
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only

500 Event category

Navigation	  Diagnostics → Diag. settings → Configuration → Configuration → 500Event category
User interface	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Not categorized

501 Diagnostic behavior



Navigation

Diagnostics → Diag. settings → Configuration → Configuration → 501 Diag. behav.

Description

Select event behavior

'Logbook entry only':
no digital or analog transmission of the message

'Warning': Current output unchanged. Message is output digitally (default).

'Alarm': Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

501 Event category

Navigation

Diagnostics → Diag. settings → Configuration → Configuration → 501Event category

User interface

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Not categorized

502 Diagnostic behavior



Navigation

Diagnostics → Diag. settings → Configuration → Configuration → 502 Diag. behav.

Description

Select event behavior

'Logbook entry only':
no digital or analog transmission of the message

'Warning': Current output unchanged. Message is output digitally (default).

'Alarm': Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

502 Event category

Navigation	Diagnostics → Diag. settings → Configuration → Configuration → 502Event category
User interface	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ Not categorized

"Process" submenu

Navigation Diagnostics → Diag. settings → Configuration → Process

Sensor pressure range behavior



Navigation	Diagnostics → Diag. settings → Configuration → Process → P-range behavior
Description	Alarm and warning messages appear on the display. If the permissible conditions are reached again, the warning message disappears. Select event behavior: 'Alarm': The signal outputs assume the specified alarm condition. A diagnostic message is generated. 'Warning': The signal outputs assume the specified warning condition. A diagnostic message is generated. 'Logbook entry only': No digital or analog forwarding of the message. A diagnostic message is written in the logbook.
Selection	<ul style="list-style-type: none"> ■ Alarm ■ Warning ■ Logbook entry only

841 Event category

Navigation	Diagnostics → Diag. settings → Configuration → Process → 841 Event category
User interface	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ Not categorized

900 Event category

Navigation

  Diagnostics → Diag. settings → Configuration → Process → 900Event category

User interface

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Not categorized

900 Diagnostic behavior

**Navigation**

  Diagnostics → Diag. settings → Configuration → Process → 900 Diag. behav.

Description

Select event behavior

'Logbook entry only':

No forwarding of the message via the fieldbus.

'Warning': Warning message is transmitted via the fieldbus (default setting).

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Warning
- Logbook entry only

906 Diagnostic behavior

**Navigation**

  Diagnostics → Diag. settings → Configuration → Process → 906 Diag. behav.

Description

Select event behavior

'Logbook entry only':

No forwarding of the message via the fieldbus.

'Warning': Warning message is transmitted via the fieldbus (default setting).

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Warning
- Logbook entry only

906 Event category

Navigation Diagnostics → Diag. settings → Configuration → Process → 906Event category**User interface**

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Not categorized

3.5 "Application" menu

Navigation  Application

3.5.1 "Measured values" submenu

Navigation  Application → Measured values

Pressure

Navigation   Application → Measured values → Pressure

Scaled variable

Navigation   Application → Measured values → Scaled variable

User interface Signed floating-point number

Sensor temperature

Navigation   Application → Measured values → Sensor temp.

User interface -273.15 to 9 726.85 °C

Terminal voltage 1

Navigation   Application → Measured values → Terminal volt. 1

Description Shows the current terminal voltage that is applied at the output

User interface 0.0 to 50.0 V

Electronics temperature

Navigation   Application → Measured values → Electronics temp

Description Displays the current temperature of the main electronics.

User interface	Signed floating-point number
----------------	------------------------------

3.5.2 "Measuring units" submenu

Navigation



Application → Measuring units

Pressure unit



Navigation

Application → Measuring units → Pressure unit

Description

Use this function to select the unit for the pipe pressure.

Selection

SI units

- MPa
- kPa
- Pa
- bar
- mbar a
- torr
- atm
- kgf/cm²
- gf/cm²

US units

- psi

Other units

- inH2O
- inH2O (4°C)
- mmH2O
- mmH2O (4°C)
- mH2O
- mH2O (4°C)
- ftH2O
- inHg
- mmHg

Decimal places pressure



Navigation

Application → Measuring units → Decimal pressure

Description

This selection does not affect the measurement and calculation accuracy of the device.

Selection

- Automatic
- x
- x.X
- x.XX
- x.XXX
- x.XXXX

Temperature unit



Navigation

Application → Measuring units → Temperature unit

Description

Use this function to select the unit for the temperature.

Selection	<i>SI units</i>	<i>US units</i>
	▪ °C	°F
	▪ K	
Factory setting	Country-specific:	
	▪ °C	
	▪ °F	
Additional information	<i>Selection</i>	

Scaled variable unit

Navigation Application → Measuring units → SV unit

Description Use 'Free text', first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ %	■ ft	■ gal (imp)	
■ mm	■ in	■ gal/s (imp)	
■ cm	■ ft ³	■ gal/min (imp)	
■ m	■ gal (us)	■ gal/h (imp)	
■ l	■ bbl (us;oil)		
■ hl	■ oz		
■ m ³	■ lb		
■ g	■ STon		
■ kg	■ lb/s		
■ t	■ lb/min		
■ g/s	■ lb/h		
■ kg/s	■ STon/min		
■ kg/min	■ STon/h		
■ kg/h	■ STon/d		
■ t/min	■ ft ³ /s		
■ t/h	■ ft ³ /min		
■ t/d	■ ft ³ /h		
■ m ³ /s	■ ft ³ /d		
■ m ³ /min	■ gal/s (us)		
■ m ³ /h	■ gal/min (us)		
■ m ³ /d	■ gal/h (us)		
■ l/s	■ gal/d (us)		
■ l/min	■ bbl/s (us;oil)		
■ l/h	■ bbl/min (us;oil)		
■ Nm ³ /h	■ bbl/h (us;oil)		
■ NI/h	■ bbl/d (us;oil)		
■ Sm ³ /s	■ Sft ³ /min		
■ Sm ³ /min	■ Sft ³ /h		
■ Sm ³ /h	■ Sft ³ /d		
■ Sm ³ /d			
■ Nm ³ /s			
■ g/cm ³			
■ kg/m ³			
■ Nm ³ /min			
■ Nm ³ /d			

Custom-specific units
Free text

Free text**Navigation**

Application → Measuring units → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Decimal places scaled variable**Navigation**

Application → Measuring units → Decimal scaled

Description

This selection does not affect the measurement and calculation accuracy of the device.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

3.5.3 "Sensor" submenu

Navigation

Application → Sensor → Sensor cal.

**Zero adjustment****Navigation**

Application → Sensor → Sensor cal. → Zero adjustment

Description

Due to the mounting position of the measuring instrument, a pressure shift may occur. The pressure shift can be corrected with the zero adjustment.

Selection

- No
- Confirm

**Calibration offset****Navigation**

Application → Sensor → Sensor cal. → Calibr offset

Prerequisite

Absolute pressure sensor

User entry

Signed floating-point number

**Zero adjustment offset****Navigation**

Application → Sensor → Sensor cal. → Zero adj. offset

User entry

Signed floating-point number

**Sensor Trim Reset****Navigation**

Application → Sensor → Sensor cal. → Sen. Trim Reset

Selection

- No
- Confirm

Lower sensor trim**Navigation**

Application → Sensor → Sensor cal. → LowerSensor trim

Description

These two parameters allow a recalibration of the sensor, i.e., if you want to fit the sensor to the measuring range. The highest accuracy is obtained when the value for the 'Lower sensor trim' is as close as possible to 'LRV' (lower range value) and the value for 'Upper sensor trim' as close as possible to 'URV' (upper range value).

There must be a known reference pressure when setting a new lower or upper sensor characteristic curve value. The more accurate the reference pressure is during recalibration, the higher the accuracy of the pressure transmitter later. A new value is assigned to the applied pressure using 'Lower sensor trim' and 'Upper sensor trim' parameters.

Proceed as follows:

- Apply reference pressure for lower range value ('LRV')
- Enter the measured reference pressure at 'Lower sensor trim' and confirm
- Apply reference pressure for upper range value ('URV')
- Enter the measured reference pressure at 'Upper sensor trim' and confirm
- The sensor is now calibrated

User entry

Signed floating-point number

Upper sensor trim**Navigation**

Application → Sensor → Sensor cal. → UpperSensor trim

User entry

Signed floating-point number

Lower range value**Navigation**

Application → Sensor → Sensor cal. → Lower range val.

Description

The calibrated span corresponds to the span between the LRV and URV.

Factory setting: 0 to URL.

Other calibrated spans can be ordered as customized span.

User entry

Signed floating-point number

Upper range value**Navigation**

Application → Sensor → Sensor cal. → Upper range val.

Description

The calibrated span corresponds to the span between the LRV and URV.

Factory setting: 0 to URL.

Other calibrated spans can be ordered as customized span.

User entry	Signed floating-point number
------------	------------------------------

"Sensor configuration" submenu

Navigation  Application → Sensor → Sensor conf.

Damping



Navigation	  Application → Sensor → Sensor conf. → Damping
------------	---

Description	The damping is effective before the measured value is further processed, i.e., before the following processes:
-------------	--

- Scaling
- Limit value monitoring
- Forwarding to display
- Forwarding to Analog Input Block

Note:

The Analog Input Block has its own "Damping" parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.

User entry	0 to 999.0 s
------------	--------------

"Sensor limits" submenu

Navigation  Application → Sensor → Sensor limits

Lower Range Limit

Navigation	 Application → Sensor → Sensor limits → LRL
------------	--

Description	Indicates the lower measuring limit of the sensor.
-------------	--

User interface	Signed floating-point number
----------------	------------------------------

Upper Range Limit

Navigation  Application → Sensor → Sensor limits → URL

Description Indicates the upper measuring limit of the sensor.

User interface Signed floating-point number

Minimum span

Navigation  Application → Sensor → Sensor limits → Minimum span

Description Specifies the smallest possible measuring span of the sensor.

User interface Signed floating-point number

Sensor temperature lower range limit

Navigation  Application → Sensor → Sensor limits → Sens.temp.lo.lim

User interface -273.15 to 9 726.85 °C

Sensor temperature upper range limit

Navigation  Application → Sensor → Sensor limits → Sens.temp.up.lim

User interface -273.15 to 9 726.85 °C

"Scaled variable" submenu

Navigation  Application → Sensor → Scaled variable

Scaled variable unit

Navigation   Application → Sensor → Scaled variable → SV unit

Description Use 'Free text', first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection

SI units

- %
- mm
- cm
- m
- l
- hl
- m³
- g
- kg
- t
- g/s
- kg/s
- kg/min
- kg/h
- t/min
- t/h
- t/d
- m³/s
- m³/min
- m³/h
- m³/d
- l/s
- l/min
- l/h
- Nm³/h
- NI/h
- Sm³/s
- Sm³/min
- Sm³/h
- Sm³/d
- Nm³/s
- g/cm³
- kg/m³
- Nm³/min
- Nm³/d

Custom-specific units

Free text

US units

- ft
- in
- ft³
- gal (us)
- bbl (us;oil)
- oz
- lb
- STon
- lb/s
- lb/min
- lb/h
- STon/min
- STon/h
- STon/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- Sft³/min
- Sft³/h
- Sft³/d

Imperial units

- gal (imp)
- gal/s (imp)
- gal/min (imp)
- gal/h (imp)

Free text**Navigation**

Application → Sensor → Scaled variable → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Pressure**Navigation**
 Application → Sensor → Scaled variable → Pressure
Scaled variable transfer function**Navigation**
 Application → Sensor → Scaled variable → Scal. v. trans.
Description

'Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. Deviating from the bar graph (output signal), the digital value on the display shows continues to be the eradicated value.

'Square root'

The root flow signal is used for the output signal. The 'Flow (square root)' output signal is indicated on the on-site display with a root symbol.

'Table'

The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

Pressure value 1**Navigation**
 Application → Sensor → Scaled variable → P. value 1
Description

Enter pressure for the first scaling point. 'Scaled variable value 1' will be allocated to this pressure.

User entry

Signed floating-point number

Scaled variable value 1**Navigation**
 Application → Sensor → Scaled variable → Sc. var.value 1
Description

Enter value for the first scaling point. This value is allocated to 'Pressure value 1'.

User interface

Signed floating-point number

* Visibility depends on order options or device settings

Pressure value 2**Navigation**

Application → Sensor → Scaled variable → P. value 2

Description

Enter pressure for the second scaling point. 'Scaled variable value 2' will be allocated to this pressure.

User entry

Signed floating-point number

Scaled variable value 2**Navigation**

Application → Sensor → Scaled variable → Sc. var.value 2

Description

Enter value for the second scaling point. This value is allocated to 'Pressure value 2'.

User entry

Signed floating-point number

Activate table**Navigation**

Application → Sensor → Scaled variable → Activate table

Selection

- Disable
- Enable

Pressure**Navigation**

Application → Sensor → Scaled variable → Pressure

User entry

Signed floating-point number

Scaled variable**Navigation**

Application → Sensor → Scaled variable → Scaled variable

User entry

Signed floating-point number

3.5.4 "PROFINET" submenu

Navigation



Application → PROFINET

"Configuration" submenu

Navigation



Application → PROFINET → Configuration

PROFINET device name

Navigation

Application → PROFINET → Configuration → PROFINET DevName

Description

Shows the short form of the PROFINET device name for the measuring point

User interface

Character string comprising numbers, letters and special characters

PROFINET device name

Navigation

Application → PROFINET → Configuration → PROFINET DevName

Description

Up to 240 characters are allowed.

The following syntax must be used:

- 1 or more identifiers, separated with [.]
- Identifier length is 1 to 63 characters
- Identifier consists of [a-z 0-9] only lowercase letters and numbers allowed.

User entry

Character string comprising numbers, letters and special characters (240)

Parameter change acknowledge mode

Navigation

Application → PROFINET → Configuration → ParaChngAcknMode

Description

Select how to acknowledge the displayed flag when changing the device configuration:

- "Auto acknowledge": the flag disappears automatically after 20 seconds.
- "Manual acknowledge": the flag must be acknowledged manually.

Selection

- Auto acknowledge
- Manual acknowledge

Acknowledge parameter change

Navigation Application → PROFINET → Configuration → AcknParaChange**Description**

If the Option "Manual acknowledgement" is selected as the acknowledgement type, then a parameter change must be acknowledged with the "Reset update event flag" option.

Selection

- No acknowledge
- Reset update event flag

Descriptor

Navigation Application → PROFINET → Configuration → Descriptor**Description**

Enter a description for the measuring point

User entry

Character string comprising numbers, letters and special characters (54)

"Analog input 1 to 7" submenu

Navigation  Application → PROFINET → Analog input → Analog input 1 to 7

Process value

Navigation Application → PROFINET → Analog input → Analog input 1 to 7 → Process value**Description**

Shows the process value reported to the controller for further processing

User interface

Signed floating-point number

Assign process variable

Navigation Application → PROFINET → Analog input → Analog input 1 to 7 → Assign variable**Description**

Select a process variable

User interface

- Pressure *
- Scaled variable *
- Sensor temperature *

* Visibility depends on order options or device settings

- Sensor pressure *
- Electronics temperature *
- Median of pressure signal *
- Noise of pressure signal *

Additional information*User interface***"Sensor pressure" option**

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

Damping**Navigation**
 Application → PROFINET → Analog input → Analog input 1 to 7 → Damping
Description

Enter time constant for input damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.

User entry

Positive floating-point number

"Binary input 1 to 2" submenu*Navigation*

Application → PROFINET → Binary input → Binary input 1 to 2

Controller input value**Navigation**
 Application → PROFINET → Binary input → Binary input 1 to 2 → ControllInputVal
Description

Shows for each device function the state reported to the controller for further processing

User interface

0 to 255

* Visibility depends on order options or device settings

"Binary output" submenu*Navigation*

Application → PROFINET → Binary output

Set point value

Navigation

Application → PROFINET → Binary output → Set point value

User entry

0 to 255

BO block output value

Navigation

Application → PROFINET → Binary output → BOBlockOutValue

Description

Shows for each device function the state reported to the measuring device for further processing

User entry

0 to 255

Failure behavior

Navigation

Application → PROFINET → Binary output → Failure behavior

Description

Select failure behavior in the event of a failure (value with status 'Bad')

Selection

- Fixed value
- Last valid value
- Actual value

Failure behavior delay

Navigation

Application → PROFINET → Binary output → FailBehavDelay

Description

Enter a delay until in the event of a failure (value with status 'Bad') the failure behavior specified applies

User entry

Positive floating-point number

Fixed value

Navigation  Application → PROFINET → Binary output → Fixed value

Description Enter value to report in the event of a failure (value with status 'Bad')

User entry 0 to 255

"Information" submenu

Navigation  Application → PROFINET → Information

Device ID

Navigation  Application → PROFINET → Information → Device ID

User interface 0 to 65 535

PA profile version

Navigation  Application → PROFINET → Information → PA profile vers.

User interface 0 to 65 535

"Application relation" submenu

Navigation  Application → PROFINET → Applicat. relat.

AR state

Navigation  Application → PROFINET → Applicat. relat. → AR state

Description Shows whether an AR connection and a system redundancy have been established

User interface

- Active
- Not active
- Redundancy 1AR active
- Redundancy 2AR active

MAC address IO controller

Navigation	 Application → PROFINET → Applicat. relat. → MAC IO contr.
Description	Shows the MAC address of the only or of the primary IO controller
User interface	Character string comprising numbers, letters and special characters

MAC address backup IO controller

Navigation	 Application → PROFINET → Applicat. relat. → MAC backup IO c.
Description	Shows the MAC address of the backup IO controller
User interface	Character string comprising numbers, letters and special characters

IP address IO controller

Navigation	 Application → PROFINET → Applicat. relat. → IP IO controller
Description	Shows the IP address of the only or of the primary IO controller
User interface	Character string comprising numbers, letters and special characters

IP address backup IO controller

Navigation	 Application → PROFINET → Applicat. relat. → IP backup IO c.
Description	Shows the IP address of the backup IO controller
User interface	Character string comprising numbers, letters and special characters

3.6 "System" menu

Navigation  System

3.6.1 "Device management" submenu

Navigation  System → Device manag.

Device tag

Navigation   System → Device manag. → Device tag

Description Enter a name for the measuring point to identify the measuring device in the plant

User entry Character string comprising numbers, letters and special characters (32)

Locking status

Navigation   System → Device manag. → Locking status

Description Displays the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information *User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

Selection

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status display parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

Configuration counter

Navigation System → Device manag. → Config. counter**Description**

Shows the number of changes made to static parameters (e.g. configuration parameters)

User interface

0 to 65 535

Reset device

**Navigation** System → Device manag. → Reset device**Description**

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To factory defaults *
- To delivery settings *
- Restart device

Additional information

Selection

Options	Description
Cancel	No action is executed and the user exits the parameter.
To factory defaults	Every parameter is reset to its factory setting.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

* Visibility depends on order options or device settings

3.6.2 "User management" submenu

Navigation  System → User manag.

User role

Navigation   System → User manag. → User role

Description Shows the access authorization to the parameters via the operating tool

User interface

- Operator
- Maintenance
- Expert
- Production
- Development

Password

Navigation  System → User manag. → Password

Description Enter the password for the 'Maintenance' user role to get access to the functionality of this role.

User entry Character string comprising numbers, letters and special characters (16)

Enter access code



Navigation  System → User manag. → Ent. access code

Description Use this function to enter the user-specific release code to remove parameter write protection in the operating tool.

User entry 0 to 9 999

Status password entry

Navigation   System → User manag. → Status pw entry

Description Use this function to display the status of the password verification.

User interface

- -----
- Wrong password
- Password rule violated

- Password accepted
- Permission denied
- Confirm PW mismatch
- Reset password accepted
- Invalid user role
- Wrong sequence of entry

New password

**Navigation**

System → User manag. → New password

Description

Define the new 'Maintenance' password.

A new password is valid after it has been confirmed within the 'Confirm new password' parameter.

Any valid password consists of 4 to 16 characters and can contain letters and numbers.

User entry

Character string comprising numbers, letters and special characters (16)

Confirm new password

**Navigation**

System → User manag. → Conf. new passw.

Description

Enter the new password again to confirm.

User entry

Character string comprising numbers, letters and special characters (16)

Old password

**Navigation**

System → User manag. → Old password

Description

Enter the current password, to subsequently change the existing password.

User entry

Character string comprising numbers, letters and special characters (16)

Reset password

Navigation

System → User manag. → Reset password

Description

Enter a code to reset the current 'Maintenance' password.
The code is delivered by your local support.

User entry

Character string comprising numbers, letters and special characters (16)

3.6.3 "Connectivity" submenu

Navigation  System → Connectivity

"Interfaces" submenu

Navigation  System → Connectivity → Interfaces

Display operation



Navigation   System → Connectivity → Interfaces → DisplayOperation

Selection

- Disable
- Enable

Web server functionality



Navigation   System → Connectivity → Interfaces → Webserver funct.

Description Switch web server on and off, switch off HTML.

Selection

- Disable
- Enable

Bluetooth activation

Navigation   System → Connectivity → Interfaces → Bluetooth active

Description If Bluetooth is deactivated, it can only be reactivated via the display or the operating tool. Reactivating via the SmartBlue app is not possible.

Selection

- Disable
- Enable

Service (UART-CDI)



Navigation   System → Connectivity → Interfaces → Service (CDI)

Selection

- Disable
- Enable

"Ethernet" submenu**Navigation**

System → Connectivity → Ethernet

MAC address**Navigation**

System → Connectivity → Ethernet → MAC Address

Description

Shows the MAC address of the measuring device

User interface

Character string comprising numbers, letters and special characters

IP address**Navigation**

System → Connectivity → Ethernet → IP address

Description

Enter the IP address of the measuring device

User entry

Character string comprising numbers, letters and special characters (15)

Subnet mask**Navigation**

System → Connectivity → Ethernet → Subnet mask

Description

Enter subnet mask of the measuring device

User entry

Character string comprising numbers, letters and special characters (15)

Default gateway**Navigation**

System → Connectivity → Ethernet → Default gateway

Description

Enter IP address for the default gateway of the measuring device

User entry

Character string comprising numbers, letters and special characters (15)

Service IP active

Navigation  System → Connectivity → Ethernet → Service IP act.

User interface

- No
- Yes

Interface connection status

Navigation  System → Connectivity → Ethernet → Interface status

User interface

- Connected
- Not connected

Interface speed

Navigation  System → Connectivity → Ethernet → Interface speed

User interface Positive integer

Duplex status

Navigation  System → Connectivity → Ethernet → Duplex status

User interface

- Full duplex
- Half duplex
- Unknown

Auto negotiation status

Navigation  System → Connectivity → Ethernet → Auto negot.stat.

User interface

- Idle
- In progress
- Completed
- Failed
- Speed detection failed

Received packet number

Navigation   System → Connectivity → Ethernet → RX packet no.**User interface** Positive integer**Sent packet number**

Navigation   System → Connectivity → Ethernet → TX packet number**User interface** Positive integer**Number of failed received packets**

Navigation   System → Connectivity → Ethernet → FailRcvdPackets**User interface** Positive integer**Number of failed sent packets**

Navigation   System → Connectivity → Ethernet → FailTXPacketsNo.**User interface** Positive integer**Signal to noise ratio**

Navigation   System → Connectivity → Ethernet → SNR**Description** Shows the signal to noise ratio of the Ethernet-APL connection. A value >21dB is good and >23dB is excellent.**User interface** Signed floating-point number**Number of failed received packets**

Navigation   System → Connectivity → Ethernet → FailRXPacketsNo.**Description** Shows the number of failed received packets.

User interface 0 to 65 535

Active TCP connections

Navigation  System → Connectivity → Ethernet → Act. TCP connec.

User interface 0 to 65 535

Supported TCP connections

Navigation  System → Connectivity → Ethernet → Supported TCP

User interface 0 to 65 535

TCP connection requests

Navigation  System → Connectivity → Ethernet → TCPConneRequest

User interface 0 to 65 535

TCP connection timeouts

Navigation  System → Connectivity → Ethernet → TCPConneTimeout

User interface 0 to 255

Number of TCP connections closed

Navigation  System → Connectivity → Ethernet → TCPConnect.close

User interface 0 to 255

Number of received TCP packets

Navigation  System → Connectivity → Ethernet → No.RX TCP Packet

User interface Positive integer

TCP sent packet number

Navigation  System → Connectivity → Ethernet → TCP TX PacketNo.

User interface Positive integer

Number of TCP failed received packets

Navigation  System → Connectivity → Ethernet → TCPFailRXPackets

User interface Positive integer

Available UDP ports

Navigation  System → Connectivity → Ethernet → Avail. UDP ports

User interface Positive integer

UDP received packet number

Navigation  System → Connectivity → Ethernet → UDP RX PacketNo.

User interface Positive integer

UDP sent packet number

Navigation  System → Connectivity → Ethernet → UDP TX PacketNo.

User interface Positive integer

Number of UDP failed received packets

Navigation  System → Connectivity → Ethernet → UDPFailRXPackets

User interface Positive integer

3.6.4 "Display" submenu

Navigation



System → Display

Language

Navigation System → Display → Language

Prerequisite A local display is provided.

Description Use this function to select the configured language on the local display.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- Bahasa Indonesia
- tiếng Việt (Vietnamese)
- čeština (Czech)

Factory setting English (alternatively, the ordered language is preset in the device)

Format display

Navigation System → Display → Format display

Prerequisite A local display is provided.

Description Use this function to select how the measured value is shown on the local display.

Selection

- 1 value, max. size
- 2 values

Additional information*Description*

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.



- The **Value 1 display** parameter (→ 82)...**Value 8 display** parameter **Value 4 display** parameter (→ 83) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter.

Value 1 display**Navigation**

System → Display → Value 1 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.



- The **Format display** parameter (→ 81) is used to specify how many measured values are displayed simultaneously and how.

Dependency

The unit of the displayed measured value is taken from the **System units** submenu.

Value 2 display**Navigation**

System → Display → Value 2 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 81) is used to specify how many measured values are displayed simultaneously and how.

Dependency

The unit of the displayed measured value is taken from the **System units** submenu.

Value 3 display**Navigation**

System → Display → Value 3 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 81) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu.

Value 4 display**Navigation**

System → Display → Value 4 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 81) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu.

Contrast display

Navigation

 System → Display → Contrast display

Description

Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

User entry

20 to 80 %

Factory setting

Depends on the display

Additional information

 Set the contrast via the push-buttons:

- Weaker: Press the  and  buttons simultaneously
- Stronger: Press the  and  buttons simultaneously

3.6.5 "Date/time" submenu

Navigation

 System → Date/time

Date/time

Navigation

 System → Date/time → Date/time

Description

Displays the date and time entered.

User interface

Character string comprising numbers, letters and special characters

Time zone

**Navigation**

 System → Date/time → Time zone

Description

Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:30
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+13:45
- UTC+14:00

Enable NTP**Navigation** System → Date/time → Enable NTP**Selection**

- No
- Yes

NTP server address**Navigation** System → Date/time → NTP server add.**Description** IP address of the NTP server.**User entry** Character string comprising numbers, letters and special characters (64)**Clock synchronized****Navigation** System → Date/time → Clock synch.**Description** Timestamp of last synchronization with an NTP server.**User interface** Character string comprising numbers, letters and special characters

3.6.6 "Geolocation" submenu

Navigation System → Geolocation**Location description****Navigation** System → Geolocation → Location descr.**Description** Enter a description for the location**User entry** Character string comprising numbers, letters and special characters (32)**Longitude****Navigation** System → Geolocation → Longitude**Description** Enter the longitude.**User entry** -180 to 180 °

Latitude

Navigation System → Geolocation → Latitude

Description Enter latitude

User entry -90 to 90 °

Altitude

Navigation System → Geolocation → Altitude

Description Enter altitude

User entry Signed floating-point number

3.6.7 "Information" submenu

Navigation System → Information

Device name

Navigation System → Information → Device name

Description Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface Max. 32 characters such as letters or numbers.

Manufacturer

Navigation System → Information → Manufacturer

User interface Character string comprising numbers, letters and special characters

Serial number

Navigation	  System → Information → Serial number
Description	Displays the serial number of the measuring device.  The number can be found on the nameplate of the sensor and transmitter.
User interface	Max. 11-digit character string comprising letters and numbers.
Additional information	<i>Description</i>  Uses of the serial number <ul style="list-style-type: none">▪ To identify the measuring device quickly, e.g. when contacting Endress+Hauser.▪ To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Order code	
Navigation	  System → Information → Order code
Description	Shows the device order code.
User interface	Character string composed of letters, numbers and certain punctuation marks (e.g. /).
Factory setting	–
Additional information	<i>Description</i> The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.  Uses of the order code <ul style="list-style-type: none">▪ To order an identical spare device.▪ To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Firmware version	
Navigation	  System → Information → Firmware version
Description	Displays the device firmware version that is installed.
User interface	Character string in the format xx.yy.zz
Additional information	<i>User interface</i>  The Firmware version is also located: <ul style="list-style-type: none">▪ On the title page of the Operating instructions▪ On the transmitter nameplate

Hardware version

Navigation  System → Information → Hardware version**User interface** Character string comprising numbers, letters and special characters

Extended order code 1

Navigation  System → Information → Ext. order cd. 1**Description** The extended order code is an alphanumeric code containing all information to identify the device and its options.**User interface** Character string**Factory setting** –**Additional information** *Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

Extended order code 2

Navigation  System → Information → Ext. order cd. 2**Description** The extended order code is an alphanumeric code containing all information to identify the device and its options.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface Character string**Factory setting** –

Extended order code 3

Navigation  System → Information → Ext. order cd. 3**Description** The extended order code is an alphanumeric code containing all information to identify the device and its options.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface Character string

Factory setting

–

Checksum**Navigation**  System → Information → Checksum**Description** Checksum for Firmware version.**User interface** Positive integer**3.6.8 "Software configuration" submenu***Navigation*  System → Softw. config.**Activate SW option** **Navigation**  System → Softw. config. → Activate SW opt.**Description** Use this function to enter an activation code to enable an additional, ordered software option.**User entry** Max. 10-digit string of numbers.**Factory setting** Depends on the software option ordered**Additional information** *Description*

If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.

User entry

 To activate a software option subsequently, please contact your Endress+Hauser sales organization.

NOTE!

The activation code is linked to the serial number of the measuring device and varies according to the device and software option.

If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.

- ▶ Before you enter a new activation code, make a note of the current activation code from the parameter protocol.
- ▶ Enter the new activation code provided by Endress+Hauser when the new software option was ordered.
- ▶ If the code entered is incorrect or invalid, enter the old activation code from the parameter protocol.

- ▶ Have the Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.

Example for a software option

Order code for "Application package", option EA "Extended HistoROM"

Software option overview

Navigation  System → Softw. config. → SW option overv.

Description Shows all enabled software options

User interface

- Heartbeat Verification
- Heartbeat Monitoring

"Firmware update" wizard

Depending on device and software interface, it is possible to update main software, sensor and display firmware.

Be sure to have a valid firmware package (e.g.: Device_Name_BusType_Vxx.yy.zz_bbbb_pkgVuu.vv.ww.sfu) already available on your system.

A list of available firmware can be found on “www.endress.com” or asking to local service supplier.

If the firmware is validated, a further confirmation will be prompted before to start the update process.

It is always possible to cancel the firmware update process before final confirmation.

Navigation  System → Softw. config. → Firmware update

"Start update" wizard

Warning: Firmware update is irreversible. It is not always possible to downgrade the firmware after a successfully update to ensure compatibility.

Be sure to save configuration before to start the firmware update process.

After firmware confirmation a device restart can occur; be sure to consider all the related safety measures.

Navigation

System → Softw. config. → Firmware update → Start update

**I have read the warning texts.****Navigation**

System → Softw. config. → Firmware update → Start update → warning texts

Selection

Yes

"Device information" wizard

Warning: Firmware update is irreversible. It is not always possible to downgrade the firmware after a successfully update to ensure compatibility.

Be sure to save configuration before to start the firmware update process.

After firmware confirmation a device restart can occur; be sure to consider all the related safety measures.

Navigation

System → Softw. config. → Firmware update → Device info

Device tag**Navigation**


System → Softw. config. → Firmware update → Device info → Device tag

Description

Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

User interface

Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

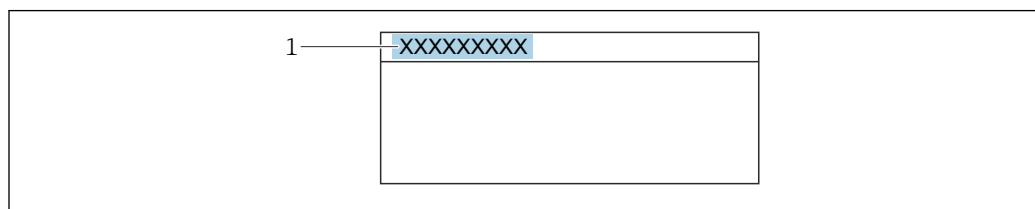Additional information*User interface*

A0029422

1 Position of the header text on the display

The number of characters displayed depends on the characters used.

Device name

Navigation  System → Softw. config. → Firmware update → Device info → Device name

Description Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface Max. 32 characters such as letters or numbers.

Package version

Navigation  System → Softw. config. → Firmware update → Device info → Package version

Description Current version of installed firmware package.
The package is an '.sfu' extension file containing all needed device software components.

User interface Positive integer

"Select file" wizard

Select firmware update file to be transferred to the device.

Navigation  System → Softw. config. → Firmware update → Select file

File check status

Navigation  System → Softw. config. → Firmware update → Select file → File check st.

User interface

- Active
- Failed
- Not done
- Passed

"Performing verification" wizard

Navigation



System → Softw. config. → Firmware update → Perform.verific.

File validation status

Navigation



System → Softw. config. → Firmware update → Perform.verific. → File val. st.

User interface

- Active
- Failed
- Not done
- Passed

"Finish" wizard

Caution: Firmware updates are irreversible.

Firmware update has been transferred successfully. Continue to start update.

Navigation



System → Softw. config. → Firmware update → Finish

I have read the warning texts.



Navigation



System → Softw. config. → Firmware update → Finish → warning texts

Selection

Yes

Index

0 ... 9

436 Diagnostic behavior (Parameter)	48
436 Event category (Parameter)	49
500 Diagnostic behavior (Parameter)	49
500 Event category (Parameter)	49
500 Process alert pressure (Parameter)	46
501 Diagnostic behavior (Parameter)	50
501 Event category (Parameter)	50
501 Process alert scaled variable (Parameter)	47
502 Diagnostic behavior (Parameter)	50
502 Event category (Parameter)	51
841 Event category (Parameter)	51
900 Diagnostic behavior (Parameter)	52
900 Event category (Parameter)	52
906 Diagnostic behavior (Parameter)	52
906 Event category (Parameter)	53

A

Acknowledge parameter change (Parameter)	66
Activate SW option (Parameter)	90
Activate table (Parameter)	64
Active diagnostics (Parameter)	38
Active diagnostics (Submenu)	38
Active TCP connections (Parameter)	79
Altitude (Parameter)	87
Analog input 1 to 7 (Submenu)	66
Application (Menu)	54
Application relation (Submenu)	69
AR state (Parameter)	69
Assign process variable (Parameter)	37, 66
Assign scaled variable? (Parameter)	29
Auto negotiation status (Parameter)	77
Available UDP ports (Parameter)	80

B

Binary input 1 to 2 (Submenu)	67
Binary output (Submenu)	68
Bluetooth activation (Parameter)	75
BO block output value (Parameter)	68

C

Calibration offset (Parameter)	58
Checksum (Parameter)	90
Clock synchronized (Parameter)	86
Commissioning (Wizard)	23
Configuration (Submenu)	48, 65
Configuration counter (Parameter)	72
Confirm new password (Parameter)	74
Connectivity (Submenu)	75
Contrast display (Parameter)	84
Controller input value (Parameter)	67
Counter limit overruns sensor Pmax (Parameter)	43
Counter limit overruns sensor Tmax (Parameter)	44
Counter limit underruns sensor Pmin (Parameter)	41
Counter limit underruns sensor Tmin (Parameter)	42
Counter overruns of user limit Pmax (Parameter)	43

Counter overruns of user limit Tmax (Parameter)	44
Counter underruns of user limit Pmin (Parameter)	41
Counter underruns of user limit Tmin (Parameter)	42

D

Damping (Parameter)	29, 60, 67
Date/time (Parameter)	27, 84
Date/time (Submenu)	84
Decimal places pressure (Parameter)	55
Decimal places scaled variable (Parameter)	57
Default gateway (Parameter)	76
Description of device parameters	19
Descriptor (Parameter)	28, 66
Device ID (Parameter)	28, 69
Device identification (Wizard)	23, 25, 26, 27
Device information (Menu)	22
Device information (Wizard)	92
Device management (Submenu)	71
Device name (Parameter)	23, 87, 93
Device tag (Parameter)	23, 71, 92
Diagnostic event simulation (Parameter)	45
Diagnostic settings (Submenu)	46
Diagnostics (Menu)	38
Display (Submenu)	81
Display operation (Parameter)	75
Do not show this message again (Parameter)	22

Document

Explanation of the structure of a parameter description	4
Function	4
Structure	4
Symbols used	5
Target group	4
Using the document	4

Document function	4
Duplex status (Parameter)	77

E

Electronics temperature (Parameter)	54
Enable NTP (Parameter)	85
Enter access code (Parameter)	73
Ethernet (Submenu)	76
Event logbook (Submenu)	40
Extended order code 1 (Parameter)	24, 89
Extended order code 2 (Parameter)	24, 89
Extended order code 3 (Parameter)	24, 89

F

Failure behavior (Parameter)	68
Failure behavior delay (Parameter)	68
File check status (Parameter)	93
File validation status (Parameter)	94
Filter options (Parameter)	40
Finish (Wizard)	94
Firmware update (Wizard)	91
Firmware version (Parameter)	88
Fixed value (Parameter)	69

Format display (Parameter) 81
Free text (Parameter) 31, 57, 62
Function
 see Parameter

G

Geolocation (Submenu) 86
Guidance (Menu) 19, 23

H

Hardware version (Parameter) 89
High alert value (Parameter) 47, 48

I

I have read the warning texts. (Parameter) 92, 94
Information (Submenu) 69, 87
Interface connection status (Parameter) 77
Interface speed (Parameter) 77
Interfaces (Submenu) 75
IP address (Parameter) 27, 76
IP address backup IO controller (Parameter) 70
IP address IO controller (Parameter) 70

L

Language (Parameter) 81
Latitude (Parameter) 87
Location description (Parameter) 86
Locking status (Parameter) 25, 71
Longitude (Parameter) 86
Low alert value (Parameter) 46, 47, 48
Lower Range Limit (Parameter) 33, 36, 60
Lower range value (Parameter) 59
Lower sensor trim (Parameter) 59

M

MAC address (Parameter) 28, 76
MAC address backup IO controller (Parameter) 70
MAC address IO controller (Parameter) 70
Manufacturer (Parameter) 87
Manufacturer ID (Parameter) 28
Maximum electronics temperature (Parameter) 44
Maximum sensor temperature (Parameter) 43
Maximum terminal voltage (Parameter) 44
Measured values (Submenu) 54
Measurement adjustments (Wizard) 29, 30, 32
Measuring units (Submenu) 55
Menu
 Application 54
 Device information 22
 Diagnostics 38
 Guidance 19, 23
 System 71
Minimum electronics temperature (Parameter) 42
Minimum sensor temperature (Parameter) 41
Minimum span (Parameter) 34, 36, 61
Minimum terminal voltage (Parameter) 42
Minimum/maximum values (Submenu) 41

N

New password (Parameter) 74

NTP server address (Parameter) 86
Number of failed received packets (Parameter) 78
Number of failed sent packets (Parameter) 78
Number of received TCP packets (Parameter) 79
Number of TCP connections closed (Parameter) 79
Number of TCP failed received packets (Parameter) 80
Number of UDP failed received packets (Parameter) 80

O

Old password (Parameter) 74
Operating time (Parameter) 40
Operating time from restart (Parameter) 39
Order code (Parameter) 88
Output settings (Wizard) 33, 34, 35, 37

P

PA profile version (Parameter) 69
Package version (Parameter) 93
Parameter
 Structure of a parameter description 4
Parameter change acknowledge mode (Parameter) 65
Password (Parameter) 73
Performing verification (Wizard) 94
Pressure (Parameter) 22, 33, 34, 54, 63, 64
Pressure max (Parameter) 43
Pressure min (Parameter) 41
Pressure unit (Parameter) 29, 30, 55
Pressure value 1 (Parameter) 35, 63
Pressure value 2 (Parameter) 36, 64
Previous diagnostics (Parameter) 39
Process (Submenu) 51
Process value (Parameter) 66
PROFINET (Submenu) 65
PROFINET device name (Parameter) 27, 65
Properties (Submenu) 46

R

Received packet number (Parameter) 78
Reset device (Parameter) 72
Reset password (Parameter) 74
Reset user defined counters P and T (Parameter) 42

S

Scaled variable (Parameter) 22, 34, 54, 64
Scaled variable (Submenu) 61
Scaled variable transfer function (Parameter) 33, 35, 63
Scaled variable unit (Parameter) 31, 56, 61
Scaled variable value 1 (Parameter) 35, 63
Scaled variable value 2 (Parameter) 36, 64
Select file (Wizard) 93
Sensor calibration (Submenu) 58
Sensor configuration (Submenu) 60
Sensor limits (Submenu) 60
Sensor pressure range behavior (Parameter) 51
Sensor temperature (Parameter) 54
Sensor temperature lower range limit (Parameter) 61
Sensor temperature upper range limit (Parameter) 61
Sensor Trim Reset (Parameter) 58
Sent packet number (Parameter) 78
Serial number (Parameter) 23, 88

Service (UART-CDI) (Parameter)	75	UDP sent packet number (Parameter)	80
Service IP active (Parameter)	77	Upper Range Limit (Parameter)	34, 36, 61
Set point value (Parameter)	68	Upper range value (Parameter)	59
Signal to noise ratio (Parameter)	78	Upper sensor trim (Parameter)	59
Simulation (Parameter)	45	User management (Submenu)	73
Simulation (Submenu)	45	User role (Parameter)	73
Software configuration (Submenu)	90	User temperature process alert (Parameter)	48
Software option overview (Parameter)	91		
SSD Monitoring delay time (Parameter)	46		
SSD Out of range delay time (Parameter)	46		
Start update (Wizard)	91		
Status password entry (Parameter)	73		
Status signal (Parameter)	22		
Submenu			
Active diagnostics	38		
Analog input 1 to 7	66		
Application relation	69		
Binary input 1 to 2	67		
Binary output	68		
Configuration	48, 65		
Connectivity	75		
Date/time	84		
Device management	71		
Diagnostic settings	46		
Display	81		
Ethernet	76		
Event logbook	40		
Geolocation	86		
Information	69, 87		
Interfaces	75		
Measured values	54		
Measuring units	55		
Minimum/maximum values	41		
Process	51		
PROFINET	65		
Properties	46		
Scaled variable	61		
Sensor calibration	58		
Sensor configuration	60		
Sensor limits	60		
Simulation	45		
Software configuration	90		
User management	73		
Subnet mask (Parameter)	76		
Supported TCP connections (Parameter)	79		
System (Menu)	71		
T			
Target group	4		
TCP connection requests (Parameter)	79		
TCP connection timeouts (Parameter)	79		
TCP sent packet number (Parameter)	80		
Temperature unit (Parameter)	30, 32, 55		
Terminal voltage 1 (Parameter)	54		
Time zone (Parameter)	26, 84		
Timestamp (Parameter)	38, 39		
U			
UDP received packet number (Parameter)	80		
UDP sent packet number (Parameter)	80		
Upper Range Limit (Parameter)	34, 36, 61		
Upper range value (Parameter)	59		
Upper sensor trim (Parameter)	59		
User management (Submenu)	73		
User role (Parameter)	73		
User temperature process alert (Parameter)	48		
V			
Value 1 display (Parameter)	82		
Value 2 display (Parameter)	82		
Value 3 display (Parameter)	83		
Value 4 display (Parameter)	83		
Value pressure simulation (Parameter)	45		
W			
Web server functionality (Parameter)	75		
Z			
Zero adjustment (Parameter)	32, 58		
Zero adjustment offset (Parameter)	58		



71606664

www.addresses.endress.com
