BA02278O/09/EN/01.22-00 71600050 2022-11-16 Valid as of version 01.01 (device version)

Operating Instructions **L20222**

Temperature transmitter with HART® protocol





L20222 Table of contents

Table of contents

1	About this document 4	8	Commissioning	32
1.1	Document function 4	8.1	Post-installation check	32
1.2	Safety instructions 4	8.2	Switching on the transmitter	
1.3	Symbols used 4	8.3	Protecting settings from unauthorized access .	32
1.4	Tool symbols 5			
1.5	Registered trademarks 6	9	Diagnostics and troubleshooting	34
2	Basic safety instructions 7	9.1	General troubleshooting	
		9.2	Diagnostic information on local display	. 36
2.1 2.2	Requirements for the personnel	9.3	Diagnostic information via communication interface	36
2.3	Intended use	9.4	Diagnostic list	
۵.۶	Operational safety	9.5	Event logbook	
3	Incoming acceptance and product	9.6	Overview of diagnostic events	
	identification 8			
3.1	Incoming acceptance 8	10	Maintenance	39
3.2	Nameplate			
3.3	Name and address of manufacturer 9	11	Repair	39
3.4	Scope of delivery 9	11.1	General information	39
3.5	Certificates and approvals 9	11.2	Spare parts	40
3.6	Storage and transport	11.3	Return	
-		11.4	Disposal	40
4	Mounting	10		, 0
4.1	Mounting requirements	12	Accessories	40
4.2	Mounting the device			
4.3	Post-installation check	13	Technical data	41
5	Electrical connection 17	13.1	Input	
		13.2	Output	42
5.1 5.2	Connecting requirements	13.3 13.4	Power supply	
5.2 5.3	Quick wiring guide	13.5	Environment	
5.4	Connecting the transmitter	13.6	Mechanical construction	
5.5	Special connection instructions 20	13.7	Certificates and approvals	
5.6	Ensuring the degree of protection 21			
5.7	Post-connection check 21	14	Operating menu and parameter	
6	Operation entions 22		description	56
6	Operation options	14.1	Menu: Diagnostics	60
6.1	Overview of operation options	14.2	Menu: Application	
6.2	Structure and function of the operating menu	14.3	Menu: System	76
6.3	Access to the operating menu via the PC			
	operating tool	Inde	x	92
6.4	Access to the operating menu via the			
	Wireless Field Device Configurator App 28			
7	System integration 29			
7.1	Overview of device description files 29			
7.2	Measured variables via HART protocol 29			
7.3	Supported HART® commands 29			

0.1	rost-installation theta	27
8.2	Switching on the transmitter	32
8.3	Protecting settings from unauthorized access .	32
9	Diagnostics and troubleshooting	34
9.1	General troubleshooting	34
9.2	Diagnostic information on local display	36
9.3	Diagnostic information via communication	
	interface	36
9.4	Diagnostic list	37
9.5	Event logbook	37
9.6	Overview of diagnostic events	37
10	Maintenance	39
10	Wantenance	,
11	Repair	39
11.1	General information	39
11.2	Spare parts	40
11.3	Return	40
11.4	Disposal	40
12	Accessories	40
13	Technical data	41
13.1	Input	41
13.1 13.2	Input	41 42
13.1 13.2 13.3	Input	41 42 43
13.1 13.2 13.3 13.4	Input	41 42 43 44
13.1 13.2 13.3 13.4 13.5	Input	41 42 43 44 51
13.1 13.2 13.3 13.4 13.5 13.6	Input	41 42 43 44 51 52
13.1 13.2 13.3 13.4 13.5	Input	41 42 43 44 51
13.1 13.2 13.3 13.4 13.5 13.6	Input	41 42 43 44 51 52
13.1 13.2 13.3 13.4 13.5 13.6 13.7	Input	41 42 43 44 51 52 54
13.1 13.2 13.3 13.4 13.5 13.6 13.7	Input	41 42 43 44 51 52 54
13.1 13.2 13.3 13.4 13.5 13.6 13.7 14	Input	41 42 43 44 51 52 54 56
13.1 13.2 13.3 13.4 13.5 13.6 13.7 14	Input	41 42 43 44 51 52 54
13.1 13.2 13.3 13.4 13.5 13.6 13.7 14	Input	41 42 43 44 51 52 54 56 60 66
13.1 13.2 13.3 13.4 13.5 13.6 13.7 14 14.1 14.2 14.3	Input	41 42 43 44 51 52 54 56 60 66
13.1 13.2 13.3 13.4 13.5 13.6 13.7 14 14.1 14.2 14.3	Input	41 42 43 44 51 52 54 56 60 66 76

About this document L20222

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Safety instructions

When using in hazardous areas, compliance with national regulations is mandatory. Separate Ex-specific documentation is provided for measuring systems that are used in hazardous areas. This documentation is an integral part of these Operating Instructions. The installation specifications, connection data and safety instructions it contains must be strictly observed! Make sure that you use the right Ex-specific documentation for the right device with approval for use in hazardous areas!

1.3 Symbols used

1.3.1 Safety symbols

A DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.3.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device: Interior ground terminal: potential equalization is connected to the supply network. Exterior ground terminal: device is connected to the plant grounding system.

L20222 About this document

1.3.3 Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
✓ ✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
1	Reference to documentation
A	Reference to page
	Reference to graphic
•	Notice or individual step to be observed
1., 2., 3	Series of steps
L	Result of a step
?	Help in the event of a problem
	Visual inspection

1.3.4 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,	Item numbers	1., 2., 3	Series of steps
A, B, C,	Views	A-A, B-B, C-C,	Sections
EX	Hazardous area	×	Safe area (non-hazardous area)

1.4 Tool symbols

Symbol	Meaning
00	Flat-blade screwdriver
A0011220	
06	Phillips head screwdriver
A0011219	
0 6	Allen key
A0011221	
Ø	Open-ended wrench
A0011222	
	Torx screwdriver
A0013442	

About this document L20222

1.5 Registered trademarks

Bluetooth®

The $Bluetooth^{\circledR}$ word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

L20222 Basic safety instructions

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists: must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- ► They must have read and understood the instructions in the manual, supplementary documentation and certificates (depending on the application) prior to starting work
- ► Follow instructions and comply with basic conditions

The operating personnel must fulfill the following requirements:

- Must be suitably trained and authorized by the plant operator to meet the requirements of the task
- Follow the instructions in this manual

2.2 Intended use

The device is a universal and user-configurable temperature transmitter with one sensor input for resistance thermometers (RTD), thermocouples (TC), resistance and voltage transmitters. The head transmitter version of the device is intended for mounting in a terminal head (flat face) as per DIN EN 50446. It is also possible to mount the device on a DIN rail using the optional DIN rail clip. The device is also optionally available in a version suitable for DIN rail mounting as per IEC 60715 (TH35).

If the device is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.

The manufacturer is not liable for damage caused by improper or non-intended use.

2.3 Operational safety

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for the interference-free operation of the device.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.q. explosion protection or safety equipment):

- ▶ Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

Electromagnetic compatibility

The measuring system complies with the general safety requirements as per EN 61010-1, the EMC requirements as per the IEC/EN 61326 series and the NAMUR recommendations NE 21.

NOTICE

► The device must only be powered by a power unit that operates using an energy-limited electric circuit according to UL/EN/IEC 61010-1, Section 9.4 and the requirements in Table 18.

3 Incoming acceptance and product identification


3.1 **Incoming acceptance**

- 1. Unpack the temperature transmitter carefully. Is the packaging or content free from damage?
 - ► Damaged components must not be installed as the manufacturer can otherwise not quarantee compliance with the original safety requirements or the material resistance, and can therefore not be held responsible for any resulting damage.
- 2. Is the delivery complete or is anything missing? Check the scope of delivery against your order.
- 3. Does the nameplate match the ordering information on the delivery note?
- 4. Are the technical documentation and all other necessary documents provided? If applicable: are the Safety Instructions (e.g. XA) for hazardous areas provided?


3.2 Nameplate

The right device?

Compare and check the data on the nameplate of the device against the requirements of the measuring point:



- **■** 1 Nameplate of the head transmitter (example)
- Power supply, current consumption, serial number, device revision and hardware version
- Radio approval (Bluetooth) and serial number
- Approvals with symbols
- Approval data and order code
- Device name
- Characters for tag name (TAG)

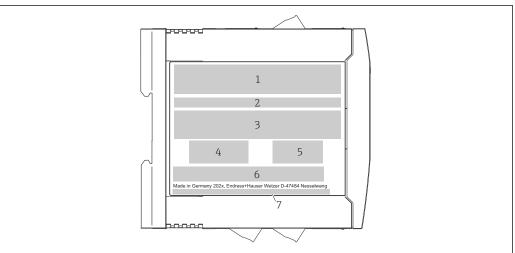

A0051224

■ 2 Nameplate of DIN rail transmitter (example)

- 1 Device name
- 2 Characters for tag name (TAG)
- 3 Approval data
- 4 Power supply and current consumption, output
- 5 Radio approval (Bluetooth)
- 6 Approvals with symbols
- 7 Serial number, device revision, order code

3.3 Name and address of manufacturer

Name of manufacturer:	Endress+Hauser Wetzer GmbH + Co. KG
Address of manufacturer:	Obere Wank 1, D-87484 Nesselwang

3.4 Scope of delivery

The scope of delivery of the device comprises:

- Temperature transmitter
- Mounting material (optional for head transmitter)
- Printed copy of the Brief Operating Instructions in English
- Additional documentation for devices which are suitable for use in the hazardous area (ATEX, FM, CSA).

3.5 Certificates and approvals

The device left the factory in a safe operating condition. The device complies with the requirements of the standards EN 61010-1 "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use" and with the EMC requirements as per the IEC/EN 61326 series.

3.5.1 CE/EAC mark, Declaration of Conformity

The device meets the legal requirements of the EU/EEU guidelines. The manufacturer confirms that the device is compliant with the relevant guidelines by applying the CE/EAC mark.

3.5.2 HART® protocol certification

The temperature transmitter is registered by the HART $^{\circ}$ FieldComm Group. The device meets the requirements of the HART $^{\circ}$ Communication Protocol Specifications, Revision 7 (HCF 7.6).

3.6 Storage and transport

Storage temperature

- Head transmitter: -50 to +100 °C (-58 to +212 °F)
- DIN rail device: -50 to +100 °C (-58 to +212 °F)
- Humidity: (device-specific): max. rel. humidity: 95 % as per IEC 60068-2-30
- Pack the device for storage and transportation in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

Avoid the following environmental influences during storage:

- Direct sunlight
- Vibration
- Aggressive media

L20222 Mounting

4 Mounting

4.1 Mounting requirements

4.1.1 Dimensions

The dimensions of the device are provided in the "Technical data" section .

4.1.2 Mounting location

- Head transmitter:
 - In the terminal head, flat face, as per DIN EN 50446, direct mounting on insert with cable entry (middle hole 7 mm)
 - In the field housing, separated from the process
- DIN rail transmitter:

Designed for mounting on a DIN rail (IEC 60715 TH35).

It is also possible to mount the head transmitter on a DIN rail as per IEC 60715 using the DIN rail clip accessory.

Information about the conditions (such as the ambient temperature, degree of protection, climate class etc.) that must be present at the installation point so that the device can be mounted correctly is provided in the "Technical data" section $\rightarrow \implies 51$.

When using in hazardous areas, the limit values of the certificates and approvals must be observed (see Ex Safety Instructions).

NOTICE

When using a DIN rail transmitter with a thermocouple/mV measurement, increased measurement deviations may occur depending on the installation situation and ambient conditions.

▶ If the DIN rail transmitter is mounted on the DIN rail without any adjacent devices, this may result in deviations of up to \pm 1.34 °C. If the DIN rail transmitter is mounted in series between other DIN rail devices (reference operating conditions: 24 V, 12 mA), deviations of up to \pm 2.94 °C may occur.


4.2 Mounting the device

A Phillips head screwdriver is required to mount the head transmitter:

- Maximum torque for securing screws = 1 Nm (¾ foot-pound), screwdriver: Pozidriv Z2
- Maximum torque for screw terminals = 0.35 Nm (¼ foot-pound), screwdriver: Pozidriv Z1

Mounting L20222

4.2.1 Mounting the head transmitter

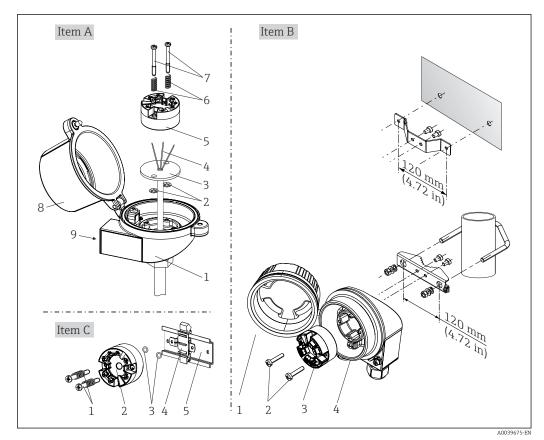

■ 3 Head transmitter mounting (three versions)


Fig. A	Mounting in a terminal head (terminal head flat face as per DIN 43729)
1	Terminal head
2	Circlips
3	Insert
4	Connection wires
5	Head transmitter
6	Mounting springs
7	Mounting screws
8	Terminal head cover
9	Cable entry

Procedure for mounting in a terminal head, Fig. A:

- 1. Open the terminal head cover (8) on the terminal head.
- 2. Guide the connection wires (4) of the insert (3) through the center hole in the head transmitter (5).
- 3. Fit the mounting springs (6) on the mounting screws (7).
- 4. Guide the mounting screws (7) through the side boreholes of the head transmitter and the insert (3). Then fix both mounting screws with the snap rings (2).
- 5. Then tighten the head transmitter (5) along with the insert (3) in the terminal head.

L20222 Mounting

Fig. B	Mounting in a field housing
1	Field housing cover
2	Mounting screws with springs
3	Head transmitter
4	Field housing

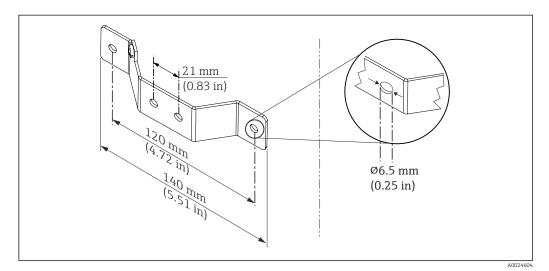

■ 4 Dimensions of angle bracket for wall mount (complete wall mounting set available as accessory)

Procedure for mounting in a field housing, Fig. B:

- 1. Open the cover (1) of the field housing (4).
- 2. Guide the mounting screws (2) through the lateral bores in the head transmitter (3).
- 3. Screw the head transmitter to the field housing.


Fig. C	Mounting on DIN rail (DIN rail as per IEC 60715)
1	Mounting screws with springs
2	Head transmitter
3	Circlips
4	DIN rail clip
5	DIN rail

Procedure for mounting on a DIN rail, Fig. C:

- 1. Press the DIN rail clip (4) onto the DIN rail (5) until it engages with a click.
- 2. Fit the mounting springs on the mounting screws (1) and guide the screws through the side boreholes of the head transmitter (2). Then fix both mounting screws with the snap rings (3).
- 3. Screw the head transmitter (2) onto the DIN rail clip (4).

Mounting L20222

Mounting typical of North America

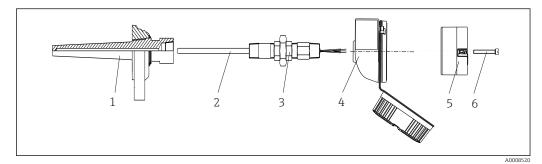

■ 5 Head transmitter mounting

- 1 Thermowell
- 2 Insert
- 3 Adapter, coupling
- 4 Terminal head
- 5 Head transmitter
- 6 Mounting screws

Thermometer design with thermocouples or RTD sensors and head transmitter:

- 1. Fit the thermowell (1) on the process pipe or the container wall. Secure the thermowell according to the instructions before the process pressure is applied.
- 2. Fit the necessary neck tube nipples and adapter (3) on the thermowell.
- 3. Make sure sealing rings are installed if such rings are needed for harsh environmental conditions or special regulations.
- 4. Guide the mounting screws (6) through the lateral bores of the head transmitter (5).
- 5. Position the head transmitter (5) in the terminal head (4) in such a way that the bus cable (terminals 1 and 2) point to the cable entry.
- 6. Using a screwdriver, screw down the head transmitter (5) in the terminal head (4).
- 7. Guide the connection wires of the insert (3) through the lower cable entry of the terminal head (4) and through the middle hole in the head transmitter (5). Wire the connection wires up to the transmitter $\rightarrow \implies 18$.
- 8. Screw the terminal head (4), with the integrated and wired head transmitter, onto the ready-mounted nipple and adapter (3).


NOTICE

The terminal head cover must be secured properly to meet the requirements for explosion protection.

► After wiring, securely screw the terminal head cover back on.

L20222 Mounting

Mounting the display on the head transmitter

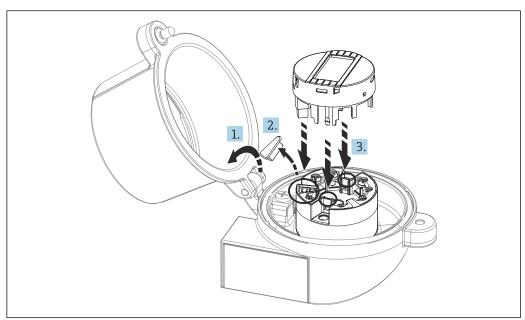

- 6 Mounting the display
- 1. Loosen the screw on the terminal head cover. Flip back the terminal head cover.
- 2. Remove the cover of the display connection area.
- 3. Fit the display module onto the mounted and wired head transmitter. The fastening pins must click securely into place on the head transmitter. After mounting, securely tighten the terminal head cover.
- The display can be used only with the appropriate terminal heads cover with viewing window.


4.2.2 Mounting the DIN rail transmitter

NOTICE

Wrong orientation

Measurement deviates from the maximum accuracy rating when a thermocouple is connected and the internal reference junction is used.

▶ Mount the device vertically and ensure it is oriented correctly!

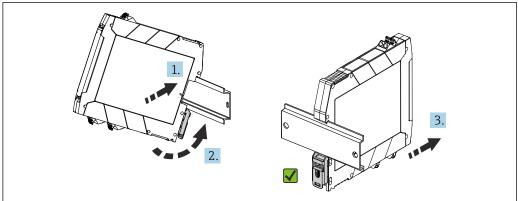

A003967


- 7 Mounting the DIN rail transmitter
- 1. Position the top DIN rail groove at the top end of the DIN rail.

Mounting L20222

2. Slide the bottom of the device over the bottom end of the DIN rail until you can hear the lower DIN rail clip click into place on the DIN rail.

3. Pull gently on the device to check if it is correctly mounted on the DIN rail.

If it doesn't move, the DIN rail transmitter is correctly mounted.

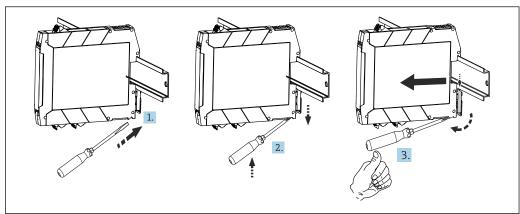

 \blacksquare 8 Dismantling the DIN rail transmitter

A003969

Dismantling the DIN rail transmitter:

- 1. Insert a screwdriver into the tab of the DIN rail clip.
- 2. Use the screwdriver to pull down on the DIN rail clip as shown in the diagram.
- 3. Hold down the screwdriver to remove the device from the DIN rail.

4.3 Post-installation check

After installing the device, run the following final checks:

Device condition and specifications	Notes
Is the device undamaged (visual inspection)?	-
Do the ambient conditions match the device specification (e.g. ambient temperature, measuring range, etc.)?	See 'Technical data' section

L20222 Electrical connection

5 Electrical connection

A CAUTION

► Switch off the power supply before installing or connecting the device. Failure to observe this may result in the destruction of parts of the electronics.

▶ Do not occupy the display connection. An incorrect connection can destroy the electronics.

NOTICE

Do not overtighten the screw terminals, as this could damage the transmitter.

► Maximum tightening torque = $1 \text{ Nm } (\frac{3}{4} \text{ lbf ft})$.

5.1 Connecting requirements

A Phillips head screwdriver is required to wire the head transmitter with screw terminals. Use a flat blade screwdriver for the DIN rail housing version with screw terminals. The push-in terminal version can be wired without any tools.


Proceed as follows to wire a head transmitter mounted in the terminal head or field housing:

- 1. Open the cable gland and the housing cover on the terminal head or the field housing.
- 2. Feed the cables through the opening in the cable gland.
- 4. Tighten the cable gland again and close the housing cover.

In order to avoid connection errors always follow the instructions in the post-connection check section before commissioning!


Electrical connection L20222

5.2 Quick wiring guide

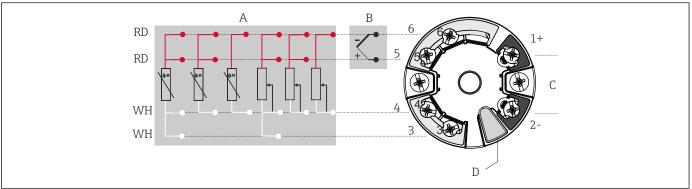

A0047635

- 9 Assignment of terminal connections for head transmitter
- A Sensor input, RTD and Ω , 4-, 3- and 2-wire
- B Sensor input, TC and mV
- C Bus terminator and power supply
- D Display connection and CDI interface

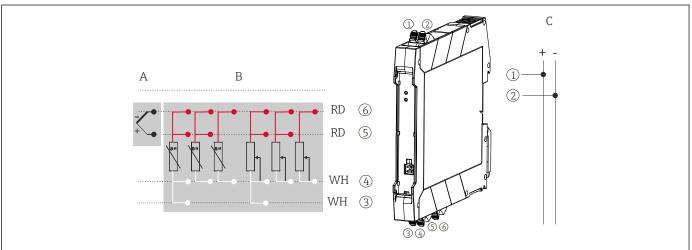

A00476

 $\blacksquare 10$ Assignment of terminal connections for DIN rail transmitter

- A Sensor input, TC and mV
- B Sensor input, RTD and Ω , 4-, 3- and 2-wire
- C Power supply 4 to 20 mA

A minimum load of 250 Ω is required in the signal circuit in order to operate the HART[®] transmitter via the HART[®] protocol (terminals 1 and 2).

In the case of a thermocouple (TC) measurement, a 2-wire RTD can be connected to measure the reference junction temperature. This is connected to terminals 4 and 6.

NOTICE


► ▲ ESD – Electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

5.3 Connecting the sensor cables

Terminal assignment of the sensor connections $\rightarrow \blacksquare 18$.

L20222 Electrical connection

5.3.1 Connecting to push-in terminals

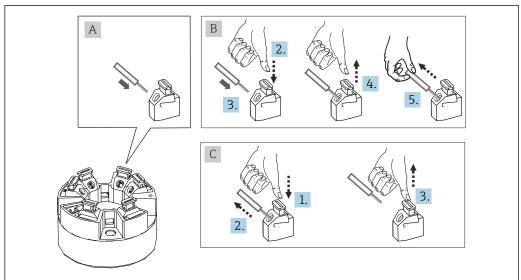

A003946

lacktriangledown 11 Push-in terminal connection, using the example of a head transmitter

Fig. A, solid wire:

- 1. Strip wire end. Minimum stripping length 10 mm (0.39 in).
- 2. Insert the wire end into the terminal.
- 3. Pull the wire gently to ensure it is connected correctly. Repeat starting from step 1 if necessary.

Fig. B, fine-strand wire without ferrule:

- 1. Strip wire end. Minimum stripping length 10 mm (0.39 in).
- 2. Press down on the lever opener.
- 3. Insert the wire end into the terminal.
- 4. Release lever opener.
- 5. Pull the wire gently to ensure it is connected correctly. Repeat starting from step 1 if necessary.

Fig. C, releasing the connection:

- 1. Press down on the lever opener.
- 2. Remove the wire from the terminal.
- 3. Release lever opener.


5.4 Connecting the transmitter

Cable specification

- A normal device cable suffices if only the analog signal is used.
- For the DIN rail version, a shielded cable must be used as of a sensor cable length of 30 m (98.4 ft). The use of shielded sensor cables is generally recommended.

Also observe the general procedure on $\rightarrow \blacksquare 17$.

Electrical connection L20222

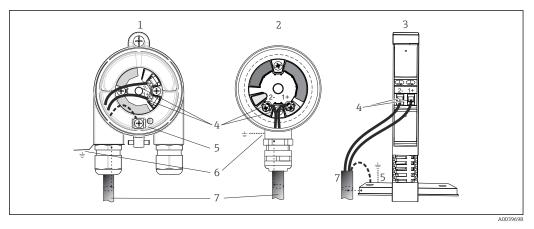


 $label{eq:linear_state}
label{eq:linear_state_state}
label{eq:linear_state_state}
label{eq:linear_state_state_state}$

- 1 Head transmitter installed in field housing
- 2 Head transmitter installed in terminal head
- 3 DIN rail transmitter mounted on DIN rail
- 4 Terminals for power supply
- 5 Internal ground connection
- 6 External ground connection
- 7 Shielded signal cable
- i
- The terminals for (1+ and 2-) are protected against reverse polarity.
- Conductor cross-section:
 - Max. 2.5 mm² for screw terminals
 - Max. 1.5 mm 2 for push-in terminals. Stripping length of wire at least 10 mm (0.39 in).

5.5 Special connection instructions

Shielding and grounding

The specifications of the $HART^{\circ}$ FieldComm Group must be observed when installing a $HART^{\circ}$ transmitter.

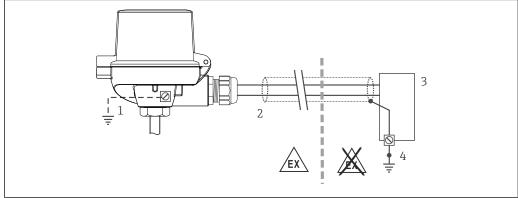

A001446


- 13 Shielding and grounding the signal cable at one end with HART® communication
- 1 Optional grounding of the field device, isolated from cable shielding
- 2 Grounding of the cable shield at one end
- 3 Supply unit
- 4 Grounding point for HART® communication cable shield

L20222 Electrical connection

5.6 Ensuring the degree of protection

Compliance with the following points is mandatory following installation in the field or servicing in order to ensure that IP67 protection is maintained:

- The transmitter must be mounted in a terminal head with the appropriate degree of protection.
- The housing seals must be clean and undamaged when inserted into their grooves. The seals must be dried, cleaned or replaced if necessary.
- The connecting cables used must have the specified external diameter (e.g. M20x1.5, cable diameter 8 to 12 mm).
- Firmly tighten the cable gland. \rightarrow 14, \rightleftharpoons 21
- The cables must loop down before they enter the cable glands ("water trap"). This means that any moisture that may form cannot enter the gland. Install the device in such a way that the cable glands are not facing upwards. $\rightarrow \blacksquare 14$, $\trianglerighteq 21$
- Replace unused cable glands with dummy plugs.
- Do not remove the grommet from the cable gland.

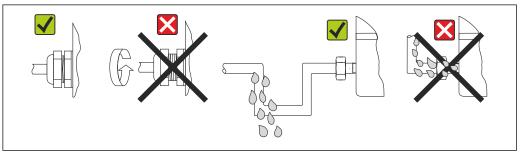

A00245

■ 14 Connection tips to retain IP67 protection


5.7 Post-connection check

Device condition and specifications	Notes
Is the device or cable undamaged (visual check)?	
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	 Head transmitter: U = 10 to 36 V_{DC} DIN rail transmitter: U = 11 to 36 V_{DC} Other values apply in the hazardous area, see the corresponding Ex Safety Instructions.
Are the mounted cables relieved of tension?	
Are the power supply and signal cables connected correctly?	→ 🖺 18
Are all the screw terminals firmly tightened and have the push-in terminal connections been checked?	
Are all the cable entries mounted, tightened and leaktight?	
Are all housing covers installed and firmly tightened?	

Operation options L20222


6 Operation options

6.1 Overview of operation options

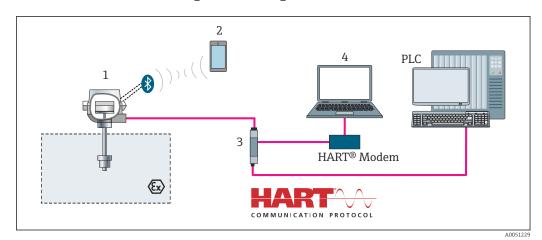

 \blacksquare 15 Operation options for the transmitter via HART® communication

- 1 Transmitter
- 2 Operation via Bluetooth®
- 3 Active barrier
- 4 Configuration software

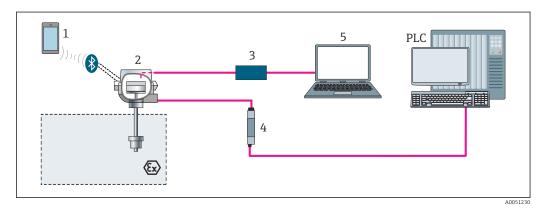


■ 16 Operation options for the transmitter via the CDI interface

- Operation via Bluetooth®
- 2 Transmitter
- 3 Configuration kit
- 4 Active barrier
- 5 Configuration software
- The transmitter's optional Bluetooth interface is only active if a display unit is not attached or the CDI interface is not used for device configuration.

L20222 Operation options

6.1.1 Measured value display and operating elements


Option: display with transmitter

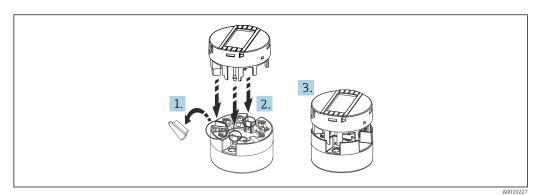

■ 17 Attach the display to the transmitter

Display elements

Head transmitter

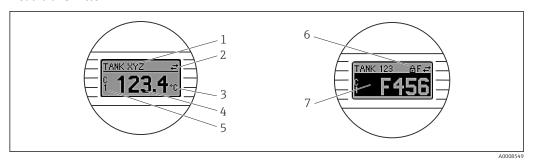

 \blacksquare 18 Optional LC display for head transmitter

Item no.	Function	Description	
1	Displays the TAG	TAG, 32 characters long.	
2	'Communication' symbol	The communication symbol appears when read and write-accessing via the fieldbus protocol.	
3	Unit display	Unit display for the measured value displayed.	
4	Measured value display	Displays the current measured value.	
5	Value/channel display DT, PV, I, %	e.g. PV for a measured value from channel 1 or DT for the device temperature	
6	'Configuration locked' symbol	The 'configuration locked' symbol appears when configuration is locked via the hardware.	
7 Status signals Symbols Meaning F Error message "Failure detected" An operating error has occurred. The measured value is no leading to the measured value is not lead to the measured value is not le			
		Meaning	
		Error message "Failure detected" An operating error has occurred. The measured value is no longer valid.	
		The display alternates between the error message and "" (no valid measured value present), see "Diagnostics events" section → 🗎 36. Detailed information on the error messages can be found in the Operating Instructions.	
	С	"Service mode" The device is in the service mode (e.g. during a simulation).	

23

Operation options L20222

Item no.	Function	Description	
during startup or cleaning processes). Maintenance required Maintenance is required. The measured value is still valid		The device is being operated outside its technical specifications (e.g.	
		Maintenance is required. The measured value is still valid. The display alternates between the measured value and the status	

DIN rail transmitter

Two LEDs on the front indicate the device status.

Туре	Function and characteristic	
Status LED (red)	When the device is operating without errors, the device status is displayed. This function can no longer be guaranteed in the event of an error.	
	 LED off: without diagnostic message LED is lit: diagnostic display, category F LED flashing: diagnostic display, categories C, S or M 	
Power LED (green) 'ON'	When the device is operating without errors, the operating status is displayed. This function can no longer be guaranteed in the event of an error.	
	 LED off: Power failure or insufficient supply voltage LED is lit: Supply voltage is OK (either via CDI or via supply voltage, terminals 1+, 2-) 	

The DIN rail transmitter version does not have an interface to the LC display and therefore does not have a local display either.


Local operation

You can make various hardware settings using miniature switches (DIP switches) on the rear of the optional display.

Optionally, the display can be ordered with the head transmitter, or as an accessory for subsequent mounting.

NOTICE

► ▲ ESD - Electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

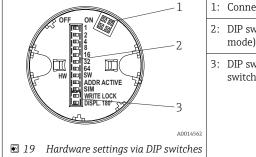

- 1: Connection to head transmitter
- 2: DIP switches (1 64, SW/HW, ADDR and SIM = simulation mode) have **no function** for this head transmitter
- 3: DIP switch (WRITE LOCK = write protection; DISPL. 180° = switch, turn the display monitor 180°)

Procedure for setting the DIP switch:

- 1. Open the cover of the terminal head or field housing.
- 2. Remove the attached display from the head transmitter.

L20222 Operation options

3. Configure the DIP switch on the rear of the display accordingly. In general: switch to ON = function enabled, switch to OFF = function disabled.

- 4. Fit the display onto the head transmitter in the correct position. The head transmitter accepts the settings within one second.
- 5. Secure the cover back onto the terminal head or field housing.

Switching write protection on/off


Write protection is switched on and off via a DIP switch on the rear of the optional attachable display. When write protection is active, parameters cannot be modified. A lock symbol on the display indicates that write protection is on. Write protection prevents any write access to the parameters. Write protection remains active even when the display is removed. To deactivate write protection, the display must be attached to the transmitter with the DIP switch switched off (WRITE LOCK = OFF). The transmitter adopts the setting during operation and does not need to be restarted.

Turning the display

The display can be rotated 180° using the "DISPL. 180° DIP switch.

6.2 Structure and function of the operating menu

6.2.1 Structure of the operating menu

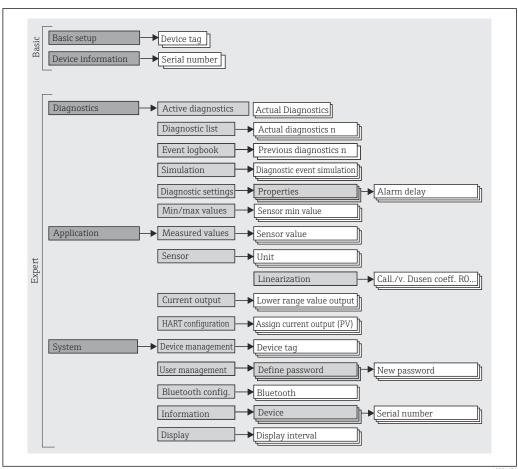

A005167

Operation options L20222

User roles

The role-based access concept consists of two hierarchical levels for the user and presents the various user roles with defined read/write authorizations derived from the NAMUR shell model.

Operator

The plant operator can only change settings that do not affect the application - and particularly the measuring path - and simple, application-specific functions that are used during operation. The operator is able to read all the parameters, however.

Maintenance

The **Maintenance** user role refers to configuration situations: commissioning and process adaptations as well as troubleshooting. It allows the user to configure and modify all available parameters. In contrast to the **Operator** user role, in the Maintenance role the user has read and write access to all the parameters.

Changing the user role

A user role - and therefore existing read and write authorization - is changed by selecting the desired user role (already pre-selected depending on the operating tool) and entering the correct password when subsequently prompted. When a user logs out, system access always returns to the lowest level in the hierarchy. A user is logged out either by actively selecting the logout function when operating the device or is logged out automatically if the device is not operated for a period of over 600 seconds. Irrespective of this, actions that are already in progress (e.g. active upload/download, data logging, etc.) continue to be executed in the background.

As-delivered state

The **Operator** user role is not enabled when the device is delivered from the factory, i.e. the **Maintenance** role is the lowest level in the hierarchy ex-works. This state makes it possible to commission the device and make other process adaptations without having to enter a password. Afterwards, a password can be assigned for the **Maintenance** user role to protect this configuration. The **Operator** user role is not visible when the device is delivered from the factory.

Password

The **Maintenance** user role can assign a password in order to restrict access to device functions. This activates the **Operator** user role, which is now the lowest hierarchy level where the user is not asked to enter a password. The password can only be changed or disabled in the **Maintenance** user role. A password can be defined at different points in the operation of the device:

In the menu: System \rightarrow User management

L20222 Operation options

Submenus

Menu	Typical tasks	Content/meaning
"Diagnostics"	Troubleshooting: Diagnosing and eliminating process errors. Error diagnostics in difficult cases. Interpretation of device error messages and correcting associated errors.	Contains all parameters for detecting and analyzing errors: Diagnostic list Contains up to 3 error messages currently pending Event logbook Contains the last 10 error messages "Simulation" submenu Used to simulate measured values, output values or diagnostic messages "Diagnostic settings" submenu Contains all the parameters for configuring error events "Min/max values" submenu Contains the minimum/maximum indicator and the reset option
"Application"	Commissioning: Configuration of the measurement. Configuration of data processing (scaling, linearization, etc.). Configuration of the analog measured value output. Tasks during operation: Reading measured values.	Contains all parameters for commissioning: "Measured values" submenu Contains all the current measured values "Sensor" submenu Contains all the parameters for configuring the measurement "Output" submenu Contains all the parameters for configuring the analog current output "HART configuration" submenu Contains the settings and the most important parameters for HART communication
"System"	Tasks that require detailed knowledge of the system administration of the device: Optimum adaptation of the measurement for system integration. Detailed configuration of the communication interface. User and access administration, password control Information for device identification, HART infos and display configuration	Contains all the higher-level device parameters that are assigned for system, device and user management, including Bluetooth configuration. "Device management" submenu Contains parameters for general device management "Bluetooth configuration" submenu (option) Contains the function for enabling/disabling the Bluetooth interface "Device and user management" submenus Parameters for access authorization, password assignment, etc. "Information" submenu Contains all the parameters for the unique identification of the device "Display" submenu Configuration of the display

6.3 Access to the operating menu via the PC operating tool

6.3.1 Field Device Configurator (FDC) Tool

Function scope



The FDC Tool is a configuration tool that is available free of charge. The devices can be connected directly via a modem (point-to-point). It is fast, easy and intuitive to use. It can run on a PC, laptop or tablet with a Windows operating system. For more information, please contact your supplier.

Operation options L20222

6.4 Access to the operating menu via the Wireless Field Device Configurator App



The device, which is equipped with optional Bluetooth communication electronics, can be operated and configured via the Wireless Field Device Configurator (FDC) app. The connection is established via the Bluetooth® interface.

Prerequisite:

A005170

A smartphone or tablet with the FDC app installed.

Supported functions

- Device selection in Live List and access to the device (login)
- · Configuration of the device
- Access to measured values, device status and diagnostic information

The FDC app is available for free download for Android devices (Google Playstore) and iOS devices (iTunes Apple Shop): Field Device Configurator

Directly to the app with the QR code:



A0051703

Download the FDC app:

- 1. Install and start the FDC app.
 - ► A Live List shows all the devices available.
- 2. Select the device from the Live List.
 - The Login dialog box opens.

Logging in:

- 3. Enter the user name: admin
- 4. Enter the initial password: serial number of the device.
- 5. Confirm your entry.
 - ► The device information opens.
- Navigate through the various items of information about the device: swipe the screen to the side.
- The range under reference conditions is:
 - 10 m (33 ft) when installed in the terminal head or field housing with a display window or DIN rail transmitter
 - 5 m (16.4 ft) when installed in the terminal head or field housing
- Incorrect operation by unauthorized persons is prevented by means of encrypted communication and password encryption
- The Bluetooth® interface can be deactivated.
- The transmitter's optional Bluetooth interface is only active if a display unit is not attached or the CDI interface is not used for device configuration.

L20222 System integration

7 System integration

7.1 Overview of device description files

Version data for the device

Firmware version	01.01.zz	 On the title page of the manual On the nameplate Firmware version parameter System → Information → Device → Firmware version
Manufacturer ID	0x11	Manufacturer ID parameter System → Information → HART info → Manufacturer ID
Device type ID	0x11D0	Device type parameter System → Information → HART info → Device type
HART protocol revision	7	
Device revision	1	 On the transmitter nameplate Device revision parameter System → Information → HART info → Device revision

7.2 Measured variables via HART protocol

The following measured values are assigned to the device variables at the factory:

Device variable	Measured value
Primary device variable (PV)	Sensor 1
Secondary device variable (SV)	Device temperature
Tertiary device variable (TV)	Sensor 1
Quaternary device variable (QV)	Sensor 1

It is possible to change the assignment of device variables to process variables in the menu Expert \rightarrow Communication \rightarrow HART output.

7.3 Supported HART® commands

The HART® protocol enables the transfer of measuring data and device data between the HART® master and the field device for configuration and diagnostics purposes. HART® masters such as the handheld terminal or PC-based operating programs need device description files (DD = Device Descriptions, DTM) which are used to access all the information in a HART® device. This information is transmitted exclusively via "commands".

System integration L20222

There are three different types of command

• Universal commands:

All HART® devices support and use universal commands. These are associated with the following functionalities for example:

- Recognition of HART® devices
- Reading digital measured values
- Common practice commands:
 Common practice commands offer functions which are supported and can be executed by many but not all field devices.
- Device-specific commands:

These commands allow access to device-specific functions which are not HART® standard. Such commands access individual field device information, among other things.

Command No.	Description		
Universal command	Universal commands		
0, Cmd0	Read unique identifier		
1, Cmd001	Read primary variable		
2, Cmd002	Read loop current and percent of range		
3, Cmd003	Read dynamic variables and loop current		
6, Cmd006	Write polling address		
7, Cmd007	Read loop configuration		
8, Cmd008	Read dynamic variable classifications		
9, Cmd009	Read device variables with status		
11, Cmd011	Read unique identifier associated with TAG		
12, Cmd012	Read message		
13, Cmd013	Read TAG, descriptor, date		
14, Cmd014	Read primary variable transducer information		
15, Cmd015	Read device information		
16, Cmd016	Read final assembly number		
17, Cmd017	Write message		
18, Cmd018	Write TAG, descriptor, date		
19, Cmd019	Write final assembly number		
20, Cmd020	Read long TAG (32-byte TAG)		
21, Cmd021	Read unique identifier associated with long TAG		
22, Cmd022	Write long TAG (32-byte TAG)		
38, Cmd038	Reset configuration changed flag		
48, Cmd048	Read additional device status		
Common practice co	mmands		
33, Cmd033	Read device variables		
34, Cmd034	Write primary variable damping value		
35, Cmd035	Write primary variable range values		
40, Cmd040	Enter/Exit fixed current mode		
42, Cmd042	Perform device reset		
44, Cmd044	Write primary variable units		
45, Cmd045	Trim loop current zero		
46, Cmd046	Trim loop current gain		

L20222 System integration

Command No.	Description
50, Cmd050	Read dynamic variable assignments
54, Cmd054	Read device variable information
59, Cmd059	Write number of response preambles
72, Cmd072	Squawk
95, Cmd095	Read Device Communication Statistics
100, Cmd100	Write Primary Variable Alarm Code
516, Cmd516	Read Device Location
517, Cmd517	Write Device Location
518, Cmd518	Read Location Description
519, Cmd519	Write Location Description
520, Cmd520	Read Process Unit Tag
521, Cmd521	Write Process Unit Tag
523, Cmd523	Read Condensed Status Mapping Array
524, Cmd524	Write Condensed Status Mapping Array
525, Cmd525	Reset Condensed Status Mapping Array
526, Cmd526	Write Simulation Mode
527, Cmd527	Simulate Status Bit

Commissioning L20222

8 Commissioning

8.1 Post-installation check

Before commissioning the measuring point make sure that all final checks have been carried out:

- "Post-installation check" checklist → 🖺 16
- "Post-connection check" checklist → 🖺 21

8.2 Switching on the transmitter

Once you have completed the post-connection checks, switch on the supply voltage. The transmitter performs a number of internal test functions after power-up. During this process, the following sequence of messages appears on the display:

Step	Display		
1	"Display" text and firmware version of the display		
2	Device name with firmware version, hardware version and device revision		
3	Displays the sensor configuration (sensor type and type of connection) along with the configured measuring range		
4a	Current measured value or		
4b	Current status message		
	If the switch-on procedure is not successful, the relevant diagnostic event, depending on the cause, is displayed. A detailed list of diagnostic events and the corresponding troubleshooting instructions can be found in the "Diagnostics and troubleshooting" section → 🖺 34.		

The device works after approx. 7 seconds, including the attached display. Normal measuring mode commences as soon as the switch-on procedure is completed. Measured values and status values appear on the display.



If the display is attached when the Bluetooth interface is activated, display initialization is performed twice and Bluetooth communication is disabled simultaneously.

8.3 Protecting settings from unauthorized access

8.3.1 Hardware locking

8.3.2 Software locking

By assigning a password for the **Maintenance** user role, it is possible to restrict access authorization and protect the device against unauthorized access.

The parameters are also protected against modification by logging out of the **Maintenance** user role and switching to the **Operator** role. No lock symbol appears, however.

L20222 Commissioning

To disable the write protection, the user must \log on with the **Maintenance** user role via the relevant operating tool.

User role concept → 🗎 26

9 Diagnostics and troubleshooting

9.1 General troubleshooting

Always start troubleshooting with the checklists below if faults occur after startup or during operation. The checklists take you directly (via various queries) to the cause of the problem and the appropriate remedial measures.

Due to its design, the device cannot be repaired. However, it is possible to send the device in for examination. See the information in the "Return" section.

General errors

Problem	Possible cause	Remedy
Device is not responding.	Supply voltage does not match the voltage specified on the nameplate.	Check the voltage at the transmitter directly using a voltmeter and correct.
	Connecting cables are not in contact with the terminals.	Ensure electrical contact between the cable and the terminal.
	Electronics unit is defective.	Replace the device.
Output current < 3.6 mA	Signal line is not wired correctly.	Check wiring.
	Electronics unit is defective.	Replace the device.
HART® communication is not working.	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 Ω) correctly.
	HART modem is not properly connected.	Connect HART modem correctly.
	HART modem is not set to "HART®".	Set HART modem selector switch to "HART®".
Status LED is lit or flashing red (DIN rail transmitter only).	Diagnostic events as per NAMUR NE107 → 🖺 36	Check diagnostic events: LED is lit: diagnostic display, category F LED flashing: diagnostic display, categories C, S or M
Power LED is not lit green (DIN rail transmitter only).	Power failure or insufficient supply voltage	Check the supply voltage and check if wiring is correct.

 \blacksquare

Check display (optional in conjunction with head transmitter)

Problem	Possible cause	Remedy
Display is blank	No supply voltage	 Check the supply voltage at the head transmitter, terminals + and Ensure that the display module holders are correctly seated and that the display module is properly connected to the head transmitter, see the "Mounting" section. If possible, test the display module with other suitable head transmitters.
	The display module is defective.	Replace the module.
	The electronics of the head transmitter are defective.	Replace the head transmitter.

↓

Local error messages on the display	
→ 🖺 36	

↓

Faulty connection to the fieldbus host system			
Problem	Possible cause	Remedy	
HART® communication is not working.	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 Ω) correctly.	
	Commubox is connected incorrectly.	Connect Commubox correctly.	

ŧ

Error messages in the configuration software		
→ 🖺 36		

Application errors without status messages for RTD sensor connection

Problem	Possible cause	Remedy
Measured value is incorrect/inaccurate	Incorrect sensor orientation.	Install the sensor correctly.
	Heat conducted by sensor.	Observe the installed length of the sensor.
	Device programming is incorrect (number of wires).	Change the Connection type device function.
	Device programming is incorrect (scaling).	Change scaling.
	Incorrect RTD configured.	Change the Sensor type device function.
	Sensor connection.	Check that the sensor is connected correctly.
	The cable resistance of the sensor (2-wire) was not compensated.	Compensate the cable resistance.
	Offset incorrectly set.	Check offset.
Failure current (≤ 3.6 mA or ≥ 21 mA)	Faulty sensor.	Check the sensor.
	RTD connected incorrectly.	Connect the connecting cables correctly (terminal diagram).
	Device programming is incorrect (e.g. number of wires).	Change the Connection type device function.
	Incorrect programming.	Incorrect sensor type set in the Sensor type device function. Set the correct sensor type.


↓

Application errors without status messages for TC sensor connection

Problem	Possible cause	Remedy
Measured value is incorrect/inaccurate	Incorrect sensor orientation.	Install the sensor correctly.
	Heat conducted by sensor.	Observe the installed length of the sensor.

Problem	Possible cause	Remedy
	Device programming is incorrect (scaling).	Change scaling.
	Incorrect thermocouple type (TC) configured.	Change the Sensor type device function.
	Incorrect reference junction set.	Set the correct reference junction .
	Interference via the thermocouple wire welded in the thermowell (interference voltage coupling).	Use a sensor where the thermocouple wire is not welded.
	Offset incorrectly set.	Check offset.
	Faulty sensor.	Check the sensor.
Failure current (≤ 3.6 mA or ≥ 21 mA)	Sensor is connected incorrectly.	Connect the connecting cables correctly (terminal diagram).
	Incorrect programming.	Incorrect sensor type set in the Sensor type device function. Set the correct sensor type.

9.2 Diagnostic information on local display

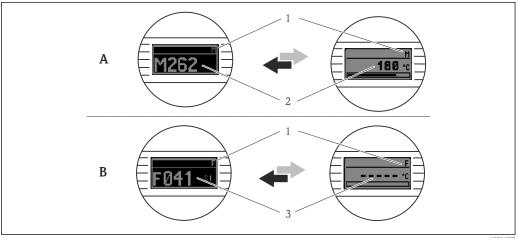

A0014837

- Α Display in the event of a warning
- В Display in the event of an alarm
- Status signal in the header
- The display alternates between the primary measured value and the status indicated by the appropriate letter (M, C or S) - plus the defined error number.
- The display alternates between "- - -" (no valid measured value) and the status indicated by the appropriate letter (F) - plus the defined error number.

9.3 Diagnostic information via communication interface

NOTICE

Status signals and diagnostic behavior can be configured manually for certain diagnostic events. If a diagnostic event occurs, however, it is not quaranteed that the measured values are valid for the event and comply with the process for the status signals S and M and the diagnostic behavior: 'Warning' and Disabled'.

▶ Reset the status signal assignment to the factory setting.

Status signals

Letter/ symbol 1)	Event category	Meaning
F 😵	Operating error	An operating error has occurred.
C 🔻	Service mode	The device is in the service mode (e.g. during a simulation).
S	Out of specification	The device is being operated outside its technical specifications (e.g. during startup or cleaning processes).
M♠	Maintenance required	Maintenance is required.
N -	Not categorized	

As per NAMUR NE107

Diagnostic behavior

Alarm	Measurement is interrupted. The signal outputs adopt the defined alarm state. A diagnostic message is generated.
Warning	The device continues to measure. A diagnostic message is generated.
Disabled	The diagnosis is completely disabled even if the device is not recording a measured value.

9.4 Diagnostic list

If two or more diagnostic events occur simultaneously, only the diagnostic message with the highest priority is shown. Additional pending diagnostic messages are shown in the **Diagnostic list** submenu . The status signal dictates the priority in which the diagnostic messages are displayed. The following order of priority applies: F, C, S, M. If two or more diagnostic events with the same status signal are active simultaneously, the numerical order of the event number dictates the order of priority in which the events are displayed, e.g.: F042 appears before F044 and before S044.

9.5 Event logbook

Previous diagnostic messages are displayed in the **Event logbook** submenu. $\rightarrow \triangleq 61$

9.6 Overview of diagnostic events

Each diagnostic event is assigned a certain event behavior at the factory. The user can change this assignment for certain diagnostic events.

Example:

		Settings		Device behavior			
Configuration examples	Diagnostic number	Status signal	Diagnostic behavior from the factory	Status signal	Current output	PV,status	Display
1. Default setting	047	S	Warning	S	Measured value	Measured value, UNCERTAIN	S047
2. Manual setting: status signal S changed to F	047	F	Warning	F	Measured value	Measured value, UNCERTAIN	F047

		Settings		Device behavior			
Configuration examples	Diagnostic number	Status signal	Diagnostic behavior from the factory	Status signal	Current output	PV,status	Display
3. Manual setting: Warning diagnostic behavior changed to Alarm	047	S	Alarm	S	Configured failure current	Measured value, BAD	S047
4. Manual setting: Warning changed to Disabled	047	S 1)	Disabled	_ 2)	Last valid measured value ³⁾	Last valid measured value, GOOD	S047

- 1)
- 2)
- Setting is not relevant. Status signal is not displayed. The failure current is output if no valid measured value is available.

Diagnostic number	Short text	Corrective measure	Status signal from the factory	Customizable 1) Not customizable	Diagnosti c behavior from the factory	Customizable Not customizable
		Diagnostics for the sensor				
041	Sensor interrupted	 Check electrical wiring. Replace sensor. Check connection type. 	F	✓	Alarm	
042	Sensor corroded	Check sensor. Replace sensor.	M	\checkmark	Warning	✓
043	Short-circuit	Check electrical connection. Check sensor. Replace sensor or cable.	F	✓	Alarm	~
047	Sensor limit reached, sensor n	Check sensor. Check process conditions.	S	✓	Warning	✓
145	Compensation reference point	Check terminal temperature. Check external reference point.	F	✓	Alarm	✓
		Diagnostics for the electronics				
201	Electronics faulty	Restart device. Replace electronics.	F	X	Alarm	X
221	Reference sensor defective	Replace device.	M	✓	Alarm	×
		Diagnostics for the configuration	1			
401	Factory reset active	Factory reset active, please wait.	С	X	Warning	×
402	Initialization is active	Initialization active, please wait.	С	X	Warning	X
410	Data transfer failed	Check connection. Retry data transfer.	F	X	Alarm	X
411	Upload/download active	Upload/download active, please wait.	С	X	Warning	×
435	Linearization incorrect	Check linearization.	F	X	Alarm	X
485	Simulation of the process variable is active	Deactivate simulation.	С	X	Warning	X

L20222 Maintenance

Diagnostic number	Short text	Corrective measure	Status signal from the factory	Customizable 1) Not customizable	Diagnosti c behavior from the factory	Customizable 2) Not customizable
491	Current output simulation	Deactivate simulation.	С	\checkmark	Warning	\checkmark
495	Diagnostic event simulation active	Deactivate simulation.	С	✓	Warning	\checkmark
531	Factory calibration missing	1. Contact service. 2. Replace device.	F	X	Alarm	×
537	Configuration	Check device configuration Upload and download new configuration. (In case of current output: check configuration of analog output.)	F	X	Alarm	X
582	Sensor diagnostics TC deactivated	Switch on diagnostics for thermocouple measurement	С	X	Warning	X
		Diagnostics for the process				
801	Supply voltage too low 3)	Increase supply voltage.	S	✓	Alarm	×
825	Operating temperature	Check ambient temperature. Check process temperature.	S	✓	Warning	\checkmark
844	Process value out of specification	Check process value. Check application. Check sensor. Check scaling of analog output	S	✓	Warning	

- 1) Can be set to F, C, S, M, N
- 2) Can be set to 'Alarm', 'Warning' and 'Disabled'
- 3) With this diagnostic event, the device always outputs a "low" alarm status (output current \leq 3.6 mA).

10 Maintenance

No special maintenance work is required for the device.

Cleaning

A clean, dry cloth can be used to clean the device.

11 Repair

11.1 General information

Due to its design, the device cannot be repaired.

Accessories L20222

11.2 Spare parts

Ask your supplier for information on available spare parts.

Type

Standard - DIN securing set (2 screws and springs, 4 shaft lock-down rings, 1 plug for the display interface)

US - M4 securing set (2 screws and 1 plug for the display interface)

Connecting cable for service interface, 40 cm

11.3 Return

The requirements for safe device return can vary depending on the device type and national legislation. Please contact your supplier for further information.

11.4 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

12 Accessories

Various accessories, which can be ordered separately from your supplier, are available for the device. Contact your service organization for detailed information on the relevant order code. When ordering accessories, please quote the serial number of the device!

Accessories included in the scope of delivery:

- Brief Operating Instructions
- Supplementary ATEX documentation
- Mounting material for head transmitter, optional

Accessories

Attachable display unit

Field housing head transmitter (on request), aluminum, IP 66, dimensions B x H x D: $100 \times 100 \times 60 \text{ mm}$ (3.94" x 3.94" x 2.36")

Adapter for DIN rail mounting, clip as per IEC 60715 (TH35)

Standard - DIN mounting set (2 screws + springs, 4 securing disks and 1 display connector cover)

US - M4 Mounting screws (2 M4 screws and 1 display connector cover)

13 Technical data

13.1 Input

Measured variable

Temperature (temperature-linear transmission behavior), resistance and voltage.

Resistance thermometer (RTD) as per standard	Designation	α	Measuring range limits	Min. span
IEC 60751:2008	Pt100 (1) Pt200 (2) Pt500 (3) Pt1000 (4)	0.003851	-200 to +850 °C (-328 to +1562 °F) -200 to +850 °C (-328 to +1562 °F) -200 to +500 °C (-328 to +932 °F) -200 to +250 °C (-328 to +482 °F)	10 K (18 °F)
JIS C1604:1984	Pt100 (5)	0.003916	-200 to +510 °C (-328 to +950 °F)	10 K (18 °F)
DIN 43760 IPTS-68	Ni100 (6) Ni120 (7)	0.006180	-60 to +250 °C (-76 to +482 °F) -60 to +250 °C (-76 to +482 °F)	10 K (18 °F)
GOST 6651-94	Pt50 (8) Pt100 (9)	0.003910	-185 to +1100 °C (-301 to +2012 °F) -200 to +850 °C (-328 to +1562 °F)	10 K (18 °F)
OIML R84: 2003,	Cu50 (10) Cu100 (11)	0.004280	-180 to +200 °C (-292 to +392 °F) -180 to +200 °C (-292 to +392 °F)	10 K (18 °F)
GOST 6651-2009	Ni100 (12) Ni120 (13)	0.006170	-60 to +180 °C (-76 to +356 °F) -60 to +180 °C (-76 to +356 °F)	10 K (18 °F)
OIML R84: 2003, GOST 6651-94	Cu50 (14)	0.004260	-50 to +200 °C (−58 to +392 °F)	10 K (18 °F)
-	Pt100 (Callendar van Dusen) Nickel polynomial Copper polynomial	-	The measuring range limits are specified by entering the limit values that depend on the coefficients A to C and RO.	10 K (18 °F)
 Connection type: 2-wire, 3-wire or 4-wire connection, sensor current: ≤ 0.3 mA With 2-wire circuit, compensation of wire resistance possible (0 to 30 Ω) With 3-wire and 4-wire connection, sensor wire resistance up to max. 50 Ω per wire 				
Resistance transmitter	Resistance Ω		10 to 400Ω 10 to 2000Ω	10 Ω 10 Ω

Thermocouples as per standard	Designation	Measuring range limits		Min. span
IEC 60584, Part 1 ASTM E230-3	Type A (W5Re-W20Re) (30) Type B (PtRh30-PtRh6) (31) Type E (NiCr-CuNi) (34) Type J (Fe-CuNi) (35) Type K (NiCr-Ni) (36) Type N (NiCrSi-NiSi) (37) Type R (PtRh13-Pt) (38) Type S (PtRh10-Pt) (39) Type T (Cu-CuNi) (40)	0 to +2500 °C (+32 to +4532 °F) +40 to +1820 °C (+104 to +3308 °F) -250 to +1000 °C (-482 to +1832 °F) -210 to +1200 °C (-346 to +2192 °F) -270 to +1372 °C (-454 to +2501 °F) -270 to +1300 °C (-454 to +2372 °F) -50 to +1768 °C (-58 to +3214 °F) -50 to +1768 °C (-58 to +3214 °F) -200 to +400 °C (-328 to +752 °F)	Recommended temperature range: 0 to +2500 °C (+32 to +4532 °F) +500 to +1820 °C (+932 to +3308 °F) -150 to +1000 °C (-238 to +1832 °F) -150 to +1200 °C (-238 to +2192 °F) -150 to +1200 °C (-238 to +2192 °F) -150 to +1300 °C (-238 to +2372 °F) +50 to +1768 °C (+122 to +3214 °F) +50 to +1768 °C (+122 to +3214 °F) -150 to +400 °C (-238 to +752 °F)	50 K (90 °F) 50 K (90 °F)
IEC 60584, Part 1 ASTM E230-3 ASTM E988-96	Type C (W5Re-W26Re) (32)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
ASTM E988-96	Type D (W3Re-W25Re) (33)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
DIN 43710	Type L (Fe-CuNi) (41) Type U (Cu-CuNi) (42)	-200 to +900 °C (-328 to +1652 °F) -200 to +600 °C (-328 to +1112 °F)	-150 to +900 °C (-238 to +1652 °F) -150 to +600 °C (-238 to +1112 °F)	50 K (90 °F)
GOST R8.585-2001	Type L (NiCr-CuNi) (43)	-200 to +800 °C (-328 to +1472 °F)	-200 to +800 °C (+328 to +1472 °F)	50 K (90 °F)

Thermocouples as per standard	Designation	Measuring range limits Min. span				
	 Internal reference junction (Pt100) External preset value: configurable value -40 to +85 °C (-40 to +185 °F) Maximum sensor wire resistance 10 kΩ (If the sensor wire resistance is greater than 10 kΩ, an error message is output in accordance with NAMUR NE89.) 					
Voltage transmitter (mV)	Millivolt transmitter (mV)	-20 to 100 mV	5 mV			

13.2 Output

Output signal	Analog output	4 to 20 mA, 20 to 4 mA (can be inverted)	
	Signal encoding	FSK ±0.5 mA via current signal	
	Data transmission rate	1200 baud	
	Galvanic isolation	U = 2 kV AC for 1 minute (input/output)	


Failure information

Failure information as per NAMUR NE43:

Failure information is created if the measuring information is missing or not valid. A complete list of all the errors occurring in the measuring system is created.

Underranging	Linear decrease from 4.0 to 3.8 mA
Overranging	Linear increase from 20.0 to 20.5 mA
Failure e.g. sensor failure; sensor short-circuit	\leq 3.6 mA ("low") or \geq 21 mA ("high"), can be selected The "high" alarm setting can be set between 21.5 mA and 23 mA, thus providing the flexibility needed to meet the requirements of various control systems.



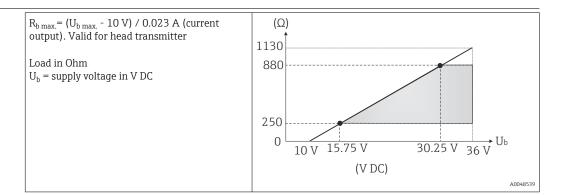

Linearization/transmission behavior	Temperature-linear, resistance-linear, voltage-linear			
Mains filter	50/60 Hz			
Filter	1st order digital filter: 0 to 120 s			
Protocol-specific data	Manufacturer ID	17 (0x11)		
	Device type ID	0x11D0		

HART® specification	7	
Device address in multi-drop mode	Software setting addresses 0 to 63	
Device description files (DTM, DD)	Information and files available at: www.fieldcommgroup.org	
HART load	Min. 250 Ω	
HART device variables	Measured value for primary value (PV) Sensor (measured value)	
	Measured values for SV, TV, QV (secondary, tertiary and quaternary variable) SV: device temperature TV: sensor (measured value) QV: sensor (measured value)	
Supported functions	■ Squawk ■ Condensed status	

Wireless HART data

Minimum starting voltage	10 V _{DC}
Start-up current	3.58 mA
Starting time	7 s
Minimum operating voltage	10 V _{DC}
Multidrop current	4.0 mA
Time for connection setup	9 s

Write protection for device parameters

- Hardware: Write protection for head transmitter on optional display using DIP switch
- Software: User role concept (password assignment)

Switch-on delay

 ≤ 7 s, until the first valid measured value signal is present at the current output. While switch-on delay = $I_a \leq 3.8~mA$

13.3 Power supply

Supply voltage

Values for non-hazardous areas, protected against polarity reversal:

Head transmitter: 10 V ≤ Vcc ≤ 36 V
 DIN rail device: 11 V ≤ Vcc ≤ 36 V

Values for the hazardous area, see Ex documentation.

Current consumption

- 3.6 to 23 mA
- Minimum current consumption 3.5 mA
- Current limit ≤ 23 mA

Terminal

Choice of screw terminals or push-in terminals for sensor and power supply cables:

Terminal design	Cable design	Cable cross-section
Screw terminals	Rigid or flexible	≤ 2.5 mm² (14 AWG)
Push-in terminals (cable version,	Rigid or flexible	0.2 to 1.5 mm ² (24 to 16 AWG)
stripping length = min. 10 mm (0.39 in)	Flexible with wire end ferrules with/without plastic ferrule	0.25 to 1.5 mm ² (24 to 16 AWG)

Ferrules must be used with push-in terminals and when using flexible cables with a cable cross-section of $\leq 0.3 \text{ mm}^2$. Otherwise, the use of ferrules when connecting flexible cables to push-in terminals is not recommended.

13.4 Performance characteristics

Response time

Resistance thermometer (RTD) and resistance transmitter (Ω measurement)	≤1 s
Thermocouples (TC) and voltage transmitters (mV)	≤1s
Reference temperature	≤ 1 s

When recording step responses, it must be taken into account that the times of the internal reference measuring point are added to the specified times where applicable.

Refresh time

Approx. 100 ms

Reference operating conditions

- Calibration temperature: +25 °C ± 3 K (77 °F ± 5.4 °F)
- Supply voltage: 24 V DC
- 4-wire circuit for resistance adjustment

Maximum measured error

In accordance with DIN EN 60770 and the reference conditions specified above. The measured error data correspond to $\pm 2~\sigma$ (Gaussian distribution). The data include nonlinearities and repeatability.

MV = measured value

LRV = lower range value of relevant sensor

MR = measuring range of relevant sensor

Typical

Standard	Designation	signation Measuring range Typical measured error (±)		
Resistance thermometer (RTD) as per standard		Digital value ¹⁾	Value at current output	
IEC 60751:2008	Pt100 (1)		0.07 °C (0.13 °F)	0.10 °C (0.18 °F)
IEC 60751:2008	Pt1000 (4)	0 to +200 °C (32 to +392 °F)	0.05 °C (0.09 °F)	0.08 °C (0.14 °F)
GOST 6651-94	Pt100 (9)		0.06 °C (0.11 °F)	0.09°C (0.16°F)
Thermocouples (TC) as per standard		Digital value ¹⁾	Value at current output	
IEC 60584, Part 1	Type K (NiCr-Ni) (36)	0 to +800 °C (32 to +1472 °F)	0.60 °C (1.08 °F)	0.64 °C (1.15 °F)

Standard	Designation	Measuring range	Typical measured error (±)	
IEC 60584, Part 1	Type S (PtRh10-Pt) (39)		1.83 °C (3.29 °F)	1.84 °C (3.31 °F)
GOST R8.585-2001	Type L (NiCr-CuNi) (43)		2.45 °C (4.41 °F)	2.46 °C (4.43 °F)

1) Measured value transmitted via HART®.

Measured error for resistance thermometers (RTD) and resistance transmitters

Standard	Designation	Measuring range	Measured error (±)		
			Digital ¹⁾		D/A ²⁾
			Maximum ³⁾	Based on measured value 4)	
	Pt100 (1)	−200 to +850 °C	≤ 0.1 °C (0.19 °F)	ME = ± (0.05 °C (0.09 °F) + 0.006% * (MV - LRV))	
IEC 60751:2008	Pt200 (2)	(−328 to +1 562 °F)	≤ 0.20 °C (0.36 °F)	ME = ± (0.08 °C (0.14 °F) + 0.011% * (MV - LRV))	
IEC 007 31.2000	Pt500 (3)	-200 to +510 °C (-328 to +950 °F)	≤ 0.1 °C (0.19 °F)	ME = ± (0.035 °C (0.063 °F) + 0.008% * (MV - LRV))	0.03 % (=
	Pt1000 (4)	-200 to +250 °C (-328 to +482 °F)	≤ 0.06 °C (0.11 °F)	ME = ± (0.02 °C (0.04 °F) + 0.007% * (MV - LRV))	4.8 μA)
JIS C1604:1984	Pt100 (5)	-200 to +510 °C (-328 to +950 °F)	≤ 0.09 °C (0.16 °F)	$ME = \pm (0.05 ^{\circ}C (0.09 ^{\circ}F) + 0.006\% ^{*} (MV - LRV))$	
GOST 6651-94	Pt50 (8)	−185 to +1 100 °C (−301 to +2 012 °F)	≤0.18 °C (0.32 °F)	ME = ± (0.07 °C (0.13 °F) + 0.008% * (MV - LRV))	
GOS1 0031-94	Pt100 (9)	−200 to +850 °C (−328 to +1562 °F)	≤ 0.11 °C (0.2 °F)	ME = ± (0.05 °C (0.09 °F) + 0.006% * (MV - LRV))	
DIN 43760 IPTS-68	Ni100 (6)	-60 to +250 °C (-76 to +482 °F)	≤ 0.04 °C (0.07 °F)	$ME = \pm (0.04 ^{\circ}\text{C} (0.07 ^{\circ}\text{F}) -$	
DIN 43700 IF 13-00	Ni120 (7)	-00 t0 1230 C (-70 t0 1402 f)	≤ 0.04 C (0.07 F)	0.004% * (MV- LRV))	
	Cu50 (10)	-180 to +200 °C (-292 to +392 °F)	≤ 0.10 °C (0.19 °F)	ME = ± (0.08 °C (0.14 °F) + 0.006% * (MV - LRV))	0.03 % (=
OIML R84: 2003 / GOST 6651-2009	Cu100 (11)	-180 to +200 °C (-292 to +392 °F)	≤ 0.06 °C (0.11 °F)	ME = ± (0.04 °C (0.07 °F) + 0.003% * (MV - LRV))	4.8 μΑ)
	Ni100 (12)	60 to +180 °C (-76 to +356 °F)	≤ 0.04 °C (0.07 °F)	$ME = \pm (0.04 ^{\circ}\text{C} (0.07 ^{\circ}\text{F}) -$	
	Ni120 (13)	-00 t0 +100 C (-70 t0 +550 F)	≤ 0.04 C (0.07 F)	0.004% * (MV-LRV))	
OIML R84: 2003, GOST 6651-94	Cu50 (14)	−50 to +200 °C (−58 to +392 °F)	≤ 0.10 °C (0.18 °F)	ME = ± (0.09 °C (0.16 °F) + 0.004% * (MV - LRV))	
Resistance transmitter	Resistance Ω	10 to 400 Ω	29.5mΩ	$ME = \pm 17 \text{ m}\Omega + 0.0034 \%$ * MV	0.03 % (≘
		10 to 2 000 Ω	179.4mΩ	$ME = \pm 60 \text{ m}\Omega + 0.006 \% *$ MV	4.8 μA)

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal.
- 3) Maximum measured error for the specified measuring range.
- 4) Deviations from maximum measured error possible due to rounding.

${\it Measured error for thermocouples (TC) and voltage transmitters}$

Standard	Designation	Measuring range	Measured error (±)		
			Dig	gital ¹⁾	D/A ²⁾
			Maximum ³⁾	Based on measured value 4)	
IEC 60584-1 ASTM E230-3	Туре А (30)	0 to +2 500 °C (+32 to +4 532 °F)	≤ 1.65 °C (2.97 °F)	ME = ± (1.0 °C (1.8 °F) + 0.018% * (MV - LRV))	0.03 % (≘ 4.8 µA)

Standard	Designation	Measuring range	Measured error (±)		
			Di	gital ¹⁾	D/A ²⁾
	Type B (31)	+500 to +1820 ℃ (+932 to +3308 ℉)	≤ 2.1 °C (3.8 °F)	ME = ± (2.1 °C (3.8 °F) - 0.055% * (MV- LRV))	
IEC 60584-1 ASTM E230-3 ASTM E988-96	Type C (32)	0 to +2 000 °C (+32 to +3 632 °F)	≤ 0.86 °C (1.55 °F)	ME = ± (0.75 °C (1.35 °F) + 0.0055% * (MV - LRV))	
ASTM E988-96	Type D (33)		≤ 1.1 °C (1.98 °F)	ME = ± (1.1 °C (1.98 °F) - 0.008% * (MV- LRV))	
	Туре Е (34)	−150 to +1000 °C (−238 to +1832 °F)	≤ 0.3 °C (0.54 °F)	ME = ± (0.3 °C (0.54 °F) - 0.006% * (MV- LRV))	
	Type J (35)	−150 to +1200 °C (−238 to +2192 °F)	≤ 0.36 °C (0.65 °F)	ME = ± (0.36 °C (0.65 °F) - 0.005% * (MV- LRV))	
	Туре К (36)		≤ 0.5 °C (0.9 °F)	ME = ± (0.5 °C (0.9 °F) - 0.005% * (MV- LRV))	
IEC 60584-1 ASTM E230-3	Туре N (37)	−150 to +1 300 °C (−238 to +2 372 °F)	≤ 0.7 °C (1.26 °F)	ME = ± (0.7 °C (1.26 °F) - 0.014% * (MV- LRV))	
	Type R (38)	+50 to +1768 °C	≤ 1.6 °C (2.88 °F)	ME = ± (1.6 °C (2.88 °F) - 0.026% * (MV- LRV))	
	Type S (39)	(+122 to +3 214 °F)	≤ 1.6 °C (2.88 °F)	ME = ± (1.6 °C (2.88 °F) - 0.022% * (MV- LRV))	
	Туре Т (40)	-150 to +400 °C (-238 to +752 °F)	≤ 0.5 °C (0.9 °F)	ME = ± (0.5 °C (0.9 °F) - 0.04% * (MV- LRV))	0.03 % (≘ 4.8 µA)
DIN 42710	Type L (41)	−150 to +900 °C (−238 to +1652 °F)	≤ 0.39 °C (0.7 °F)	ME = ± (0.39 °C (0.7 °F) - 0.008% * (MV- LRV))	
DIN 43710	Type U (42)	−150 to +600 °C (−238 to +1112 °F)	≤ 0.45 °C (0.81 °F)	ME = ± (0.45 °C (0.81 °F) - 0.025% * (MV- LRV))	
GOST R8.585-2001	Type L (43)	−200 to +800 °C (−328 to +1472 °F)	≤ 2.30 °C (4.14 °F)	ME = ± (2.3 °C (4.14 °F) - 0.015% * (MV- LRV))	
Voltage transmitter (mV)		-20 to +100 mV	10.0 μV	ME = ± 10.0 μV	4.8 μΑ

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal.
- 3) Maximum measured error for the specified measuring range.
- 4) Deviations from maximum measured error possible due to rounding.

Total measured error of transmitter at current output = $\sqrt{\text{(Measured error digital}^2 + \text{Measured error D/A}^2)}$

Sample calculation with Pt100, measuring range 0 to +200 °C (+32 to +392 °F), ambient temperature +25 °C (+77 °F), supply voltage 24 V:

Measured error digital = $0.05 ^{\circ}\text{C} + 0.006\% ^{\circ}\text{x} (200 ^{\circ}\text{C} - (-200 ^{\circ}\text{C}))$:	0.07 °C (0.126 °F)
Measured error D/A = 0.03 % x 200 °C (360 °F)	0.06 °C (0.108 °F)
Measured error digital value (HART):	0.07 °C (0.126 °F)
Measured error analog value (current output): $\sqrt{\text{(Measured error digital}^2 + Measured error D/A^2)}$	0.10 °C (0.18 °F)

Sample calculation with Pt100, measuring range 0 to +200 $^{\circ}$ C (+32 to +392 $^{\circ}$ F), amb	ient
temperature $+35$ °C ($+95$ °F), supply voltage 30 V:	

Measured error analog value (current output): $\sqrt{(\text{Measured error D/A}^2 + \text{Influence of ambient}} \\ + \text{Influence of ambient temperature (digital)}^2 + \text{Influence of ambient temperature (D/A)}^2 + \text{Influence of supply voltage (D/A)}^2$	0.13 °C (0.23 °F)
Measured error digital value (HART): $\sqrt{(\text{Measured error digital}^2 + \text{Influence of ambient temperature (digital)}^2 + \text{Influence of supply voltage (digital)}^2}$	0.10 °C (0.18 °F)
Influence of supply voltage (D/A) = $(30 - 24) \times (0.003\% \times 200 ^{\circ}C)$	0.04 °C (0.72 °F)
Influence of supply voltage (digital) = (30 - 24) x (0.0007% x 200 °C - (-200 °C)), min. 0.005 °C	0.02 °C (0.036 °F)
Influence of ambient temperature (D/A) = (35 - 25) x (0.003% x 200 °C)	0.06 °C (0.108 °F)
Influence of ambient temperature (digital) = (35 - 25) x (0.0013 % x 200 °C - (-200 °C)), min. 0.003 °C	0.05 °C (0.09 °F)
Measured error D/A = $0.03 \% \times 200 \degree C (360 \degree F)$	0.06 °C (0.108 °F)
Measured error digital = 0.04 °C + 0.006% x (200 °C - (-200 °C)):	0.07 °C (0.126 °F)

The measured error data corresponds to 2 σ (Gaussian distribution)

Physical input measuring range of sensors				
10 to 400 Ω Cu50, Cu100, polynomial RTD, Pt50, Pt100, Ni100, Ni120				
10 to 2 000 Ω	Pt200, Pt500, Pt1000			
-20 to 100 mV	Thermocouples type: A, B, C, D, E, J, K, L, N, R, S, T, U			

Sensor adjustment

Sensor-transmitter matching

RTD sensors are one of the most linear temperature measuring elements. Nevertheless, the output must be linearized. To significantly improve temperature measurement accuracy, the device allows the use of two methods:

■ Callendar van Dusen coefficients (Pt100 resistance thermometer) The Callendar van Dusen equation is described as: $R_T = R_0[1+AT+BT^2+C(T-100)T^3]$

The coefficients A, B and C are used to match the sensor (platinum) and transmitter in order to improve the accuracy of the measuring system. The coefficients for a standard sensor are specified in IEC 751. If no standard sensor is available or if greater accuracy is required, the coefficients for each sensor can be determined specifically with the aid of sensor calibration.

■ Linearization for copper/nickel resistance thermometers (RTD) The polynomial equation for copper/nickel is as follows: $R_T = R_0(1+AT+BT^2)$

The coefficients A and B are used for the linearization of nickel or copper resistance thermometers (RTD). The exact values of the coefficients derive from the calibration data and are specific to each sensor. The sensor-specific coefficients are then sent to the transmitter.

Sensor-transmitter matching using one of the methods mentioned above significantly improves the temperature measurement accuracy of the entire system. This is because the transmitter uses the specific data pertaining to the connected sensor to calculate the measured temperature, instead of using the standardized sensor curve data.

1-point adjustment (offset)

Shifts the sensor value

Current output adjustment Correction of the 4 or 20 mA current output value.

Operating influences The measured error data corresponds to 2 σ (Gaussian distribution).

Influence of ambient temperature and supply voltage on operation for resistance thermometers (RTD) and resistance transmitters

Designation	Standard	Ambient temperature: Supply voltage: Influence (\pm) per 1 °C (1.8 °F) change Influence (\pm) per V change						
			Digital ¹⁾ D/A ²⁾		Digital ¹⁾		D/A ²⁾	
		Maximum	Based on measured value		Maximum	Based on measured value		
Pt100 (1)		≤ 0.013 °C (0.023 °F)	0.0013% * (MV - LRV), at least 0.003 °C (0.005 °F)	(≤ 0.007 °C (0.013 °F)	0.0007% * (MV - LRV), at least 0.003 °C (0.005 °F)	
Pt200 (2)	IEC 60751:2008	≤ 0.017 °C (0.031 °F)	-		≤ 0.009 °C (0.016 °F)	-		
Pt500 (3)		≤ 0.008 °C (0.014 °F)	0.0013% * (MV - LRV), at least 0.006 °C (0.011 °F)		≤ 0.004 °C (0.007 °F)	0.0007% * (MV - LRV), at least 0.006 °C (0.011 °F)		
Pt1000 (4)		≤ 0.005 °C (0.009 °F)	-	0.003 %	≤ 0.003 °C (0.005 °F)	-	0.003 %	
Pt100 (5)	JIS C1604:1984	≤ 0.009 °C (0.016 °F)	0.0013% * (MV - LRV), at least 0.003 °C (0.005 °F)		≤ 0.004 °C (0.007 °F)	0.0007% * (MV - LRV), at least 0.003 °C (0.005 °F)	_	
Pt50 (8)	COST 6651 04	≤ 0.017 °C (0.031 °F)	0.0015% * (MV - LRV), at least 0.01 °C (0.018 °F)		≤ 0.009 °C (0.016 °F)	0.0007% * (MV - LRV), at least 0.01 °C (0.018 °F)		
Pt100 (9)	- GOST 6651-94	≤ 0.013 °C (0.023 °F)	0.0013% * (MV - LRV), at least 0.003 °C (0.005 °F)		≤ 0.007 °C (0.013 °F)	0.0007% * (MV - LRV), at least 0.003 °C (0.005 °F)		
Ni100 (6)	DIN 43760	≤ 0.003 °C	-		≤ 0.001 °C	-		
Ni120 (7)	IPTS-68	(0.005 °F)	-		(0.002 °F)	-		
Cu50 (10)	ON W. DO /	≤ 0.005 °C (0.009 °F)	-		≤ 0.005 °C (0.009 °F)	-		
Cu100 (11)	OIML R84: 2003 / GOST	≤ 0.004 °C (0.007 °F)	-	0.003 %	≤ 0.004 °C (0.007 °F)	-	0.003 %	
Ni100 (12)	6651-2009	≤ 0.003 °C	-		≤ 0.003 ℃	-		
Ni120 (13)		(0.005 °F)	-		(0.005 °F)	-		
Cu50 (14)	OIML R84: 2003 / GOST 6651-94	≤ 0.005 °C (0.009 °F)	-		≤ 0.005 °C (0.009 °F)	-		
Resistance tran	smitter (Ω)							
10 to 400 Ω		≤ 4 mΩ	0.001% * MV, at least 1 mΩ	0.000.31	≤ 2 mΩ	0.0005% * MV, at least 1 m Ω	0.000.3	
10 to 2 000 Ω		≤ 20 mΩ	0.001% * MV, at least 10 mΩ	0.003 %	≤ 10 mΩ	0.0005% * MV, at least 5 mΩ	0.003 %	
	1		I .	-1				

¹⁾ Measured value transmitted via HART®.

²⁾ Percentages based on the configured span of the analog output signal

Influence of ambient temperature and supply voltage on operation for thermocouples (TC) and voltage transmitters

Designation	Standard	Ambient temperature: Supply voltage: Influence (\pm) per 1 °C (1.8 °F) change Influence (\pm) per V change					
			Digital ¹⁾	D/A ²⁾		Digital	D/A ²⁾
		Maximum	Based on measured value		Maximum	Based on measured value	
Type A (30)	IEC 60584-1	≤ 0.07 °C (0.126 °F)	0.003% * (MV - LRV), at least 0.01 °C (0.018 °F)		≤ 0.03 °C (0.054 °F)	0.0012% * (MV - LRV), at least 0.013 °C (0.023 °F)	
Туре В (31)	ASTM E230-3	≤ 0.04 °C (0.072 °F)	-		≤ 0.02 °C (0.036 °F)	-	
Туре С (32)	IEC 60584-1 ASTM E230-3 ASTM E988-96	≤ 0.04 °C (0.072 °F)	0.0021% * (MV - LRV), at least 0.01 °C (0.018 °F)		≤ 0.02 °C (0.036 °F)	0.0012% * (MV - LRV), at least 0.013 °C (0.023 °F)	
Type D (33)	ASTM E988-96	≤ 0.04 °C (0.072 °F)	0.0019% * (MV - LRV), at least 0.01 °C (0.018 °F)	0.003 %	≤ 0.02 °C (0.036 °F)	0.0011% * (MV - LRV), at least 0.0 °C (0.0 °F)	0.003 %
Туре Е (34)		≤ 0.02 °C	0.0014% * (MV - LRV), at least 0.0 °C (0.0 °F)		≤ 0.01 °C	0.0008% * (MV - LRV), at least 0.0 °C (0.0 °F)	
Туре Ј (35)		(0.036°F)	0.0014% * (MV - LRV), at least 0.0 °C (0.0 °F)		(0.018°F)	0.0008% * MV, at least 0.0 °C (0.0 °F)	
Туре К (36)	IEC 60584-1	≤ 0.02 °C	0.0015% * (MV - LRV), at least 0.0 °C (0.0 °F)		≤ 0.01 °C	0.0009% * (MV - LRV), at least 0.0 °C (0.0 °F)	
Type N (37)	ASTM E230-3	(0.036°F)	0.0014% * (MV - LRV), at least 0.010 °C (0.018 °F)		(0.018°F)	0.0008% * MV, at least 0.0 °C (0.0 °F)	
Type R (38)		≤ 0.03 °C	-		≤ 0.02 °C	-	
Type S (39)		(0.054 °F)	-		(0.036 °F)	-	
Туре Т (40)			-	0.003 %	0.0 °C (0.0 °F)	-	0.003 %
Type L (41)	DIN 42710	≤ 0.01 °C	-		≤ 0.01 °C (0.018 °F)	-	
Type U (42)	DIN 43710	(0.018°F)	-		0.0 °C (0.0 °F)	-	
Type L (43)	GOST R8.585-2001		-		≤ 0.01 °C (0.018 °F)	-	
Voltage transmi	tter (mV)						
-20 to 100 mV	-	≤ 1.5 µV	0.0015% * MV	0.003 %	≤ 0.8 µV	0.0008% * MV	0.003 %

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal

MV = measured value

LRV = lower range value of relevant sensor

MR = measuring range of relevant sensor

Total measured error of transmitter at current output = $\sqrt{(Measured\ error\ digital^2 + Measured\ error\ D/A^2)}$

Long-term drift, resistance thermometers (RTD) and resistance transmitters

Designation	Standard	Long-term drift (±) 1)				
		after 1 month	after 6 months	after 1 year	after 3 years	after 5 years
		Based on measured value				
Pt100 (1)	IEC 60751:2008	≤ 0.039% * (MV - LRV) or 0.01 °C (0.02 °F)	≤ 0.061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)

Designation	Standard	Long-term drift (±) 1)					
Pt200 (2)		0.05 °C (0.09 °F)	0.05 °C (0.09 °F)	0.09 °C (0.17 °F)	0.12 °C (0.27 °F)	0.13 °C (0.24 °F)	
Pt500 (3)		≤ 0.048% * (MV - LRV)	≤ 0.0075% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.068% * (MV - LRV) or 0.03 °C (0.06 °F)	≤ 0.011% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0124% * (MV - LRV) or 0.04 °C (0.07 °F)	
Pt1000 (4)		or 0.01 °C (0.02 °F)	≤ 0.0077% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0088% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0114% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.013% * (MV - LRV) or 0.03 °C (0.05 °F)	
Pt100 (5)	JIS C1604:1984	≤ 0.039% * (MV - LRV) or 0.01 °C (0.02 °F)	≤ 0.0061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)	
Pt50 (8)	GOST	<pre>< 0.042% * (MV - LRV) or 0.02 °C (0.04 °F)</pre>	≤ 0.0068% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.0076% * (MV - LRV) or 0.04 °C (0.08 °F)	≤ 0.01% * (MV - LRV) or 0.06 °C (0.11 °F)	≤ 0.011% * (MV - LRV) or 0.07 °C (0.12 °F)	
Pt100 (9)	6651-94	≤ 0.016% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.0061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)	
Ni100 (6)	DIN 43760	0.01 °C (0.02 °F)	0.01 °C (0.02 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	
Ni120 (7)	IPTS-68	0.01 C (0.02 1)	0.01 C (0.02 1)	0.02 € (0.04 1)	0.02 € (0.04 1)	0.02 € (0.04 1)	
Cu50 (10)	OIML R84:	0.02 °C (0.04 °F)	0.03 ℃ (0.05 °F)	0.04 °C (0.07 °F)	0.05 °C (0.09 °F)	0.05 °C (0.09 °F)	
Cu100 (11)	2003 /		0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	0.03 °C (0.05 °F)	0.04 °C (0.07 °F)	
Ni100 (12)	GOST 6651-2009	0.01 °C (0.02 °F)	0.01 °C (0.02 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	
Ni120 (13)	0091 2009		0.01 C (0.02 1)	0.02 ((0.04 1)	0.02 € (0.04 1)	0.02 ((0.04 1)	
Cu50 (14)	OIML R84: 2003 / GOST 6651-94	0.02 °C (0.04 °F)	0.03 °C (0.05 °F)	0.04 °C (0.07 °F)	0.05 °C (0.09 °F)	0.05 °C (0.09 °F)	
Resistance tra	Resistance transmitter						
10 to 400 Ω		$\leq 0.003\%$ * MV or 4 m Ω	≤ 0.0048% * MV or 6 mΩ	$\leq 0.0055\%$ * MV or 7 m Ω	$\leq 0.0073\%$ * MV or $10 \text{ m}\Omega$	\leq 0.008% * (MV - LRV) or 11 m Ω	
10 to 2 000 Ω		≤ 0.0038% * MV or 25 mΩ	$\leq 0.006\%$ * MV or $40 \text{ m}\Omega$	≤ 0.007% * (MV - LRV) or 47 mΩ	≤ 0.009% * (MV - LRV) or 60 mΩ	≤ 0.0067% * (MV - LRV) or 67 mΩ	

1) Whichever is greater

Long-term drift, thermocouples (TC) and voltage transmitters

Designation	Standard	Long-term drift (±) 1)				
		after 1 month	after 6 months	after 1 year	after 3 years	after 5 years
		Based on measured value				
Туре А (30)	IEC 60584-1 ASTM	≤ 0.021% * (MV - LRV) or 0.34 °C (0.61 °F)	≤ 0.037% * (MV - LRV) or 0.59 °C (1.06 °F)	≤ 0.044% * (MV - LRV) or 0.70 °C (1.26 °F)	≤ 0.058% * (MV - LRV) or 0.93 °C (1.67 °F)	≤ 0.063% * (MV - LRV) or 1.01 °C (1.82 °F)
Туре В (31)	E230-3	0.80 °C (1.44 °F)	1.40 °C (2.52 °F)	1.66 °C (2.99 °F)	2.19 °C (3.94 °F)	2.39 °C (4.30 °F)
Type C (32)	IEC 60584-1 ASTM E230-3 ASTM E988-96	0.34 °C (0.61 °F)	0.58 °C (1.04 °F)	0.70 °C (1.26 °F)	0.92 °C (1.66 °F)	1.00 °C (1.80 °F)
Type D (33)	ASTM E988-96	0.42 °C (0.76 °F)	0.73 °C (1.31 °F)	0.87 °C (1.57 °F)	1.15 °C (2.07 °F)	1.26 °C (2.27 °F)
Type E (34)	IEC 60584-1	0.13 °C (0.23 °F)	0.22 °C (0.40 °F)	0.26 °C (0.47 °F)	0.34 °C (0.61 °F)	0.37 °C (0.67 °F)
Type J (35)	ASTM E230-3	0.15 °C (0.27 °F)	0.26 °C (0.47 °F)	0.31 °C (0.56 °F)	0.41 °C (0.74 °F)	0.44 °C (0.79 °F)

Designation	Standard	Long-term drift (±) 1)				
Туре К (36)		0.17 °C (0.31 °F)	0.30 °C (0.54 °F)	0.36 °C (0.65 °F)	0.47 °C (0.85 °F)	0.51 °C (0.92 °F)
Type N (37)		0.25 °C (0.45 °F)	0.44 °C (0.79 °F)	0.52 °C (0.94 °F)	0.69 °C (1.24 °F)	0.75 °C (1.35 °F)
Type R (38)		0.62 °C (1.12 °E)	1.00 °C (1.04 °E)	1.28 °C (2.30 °F)	1.69 °C (3.04 °F)	1 OF °C (2 22 °T)
Type S (39)		0.62 °C (1.12 °F)	1.08 °C (1.94 °F)	1.29 °C (2.32 °F)	1.70 °C (3.06 °F)	1.85 °C (3.33 °F)
Type T (40)		0.18 °C (0.32 °F)	0.32 °C (0.58 °F)	0.38°C (0.68°F)	0.50 ℃ (0.90 ℉)	0.54 °C (0.97 °F)
Type L (41)	DW (0510	0.12 °C (0.22 °F)	0.21 °C (0.38 °F)	0.25 °C (0.45 °F)	0.33 °C (0.59 °F)	0.36 °C (0.65 °F)
Type U (42)	DIN 43710	0.18 °C (0.32 °F)	0.31 °C (0.56 °F)	0.37 °C (0.67 °F)	0.49 °C (0.88 °F)	0.53 °C (0.95 °F)
Type L (43)	GOST R8.585-2001	0.15 °C (0.27 °F)	0.26 °C (0.47 °F)	0.31 °C (0.56 °F)	0.41 °C (0.74 °F)	0.44 °C (0.79 °F)
Voltage transmitter (mV)						
- 20 to 100 mV		≤ 0.012% * MV or 4 μV	≤ 0.021% * MV or 7 µV	≤ 0.025% * MV or 8 μV	≤ 0.033% * MV or 11 μV	≤ 0.036% * MV or 12 μV

1) Whichever is greater

Analog output long-term drift

Long-term drift D/A 1) (±)						
after 1 month	after 6 months	after 1 year	after 3 years	after 5 years		
0.018%	0.026%	0.030%	0.036%	0.038%		

Percentages based on the configured span of the analog output signal.

Influence of the reference junction

Pt100 DIN IEC 60751 Cl. B (internal reference junction with thermocouples TC)

If an external 2-wire Pt100 is used for the reference junction measurement, the measured error caused by the transmitter is < 0.5 $^{\circ}$ C (0.9 $^{\circ}$ F). The measured error of the sensor element also needs to be added.

13.5 Environment

Ambient temperature range	–40 to +85 $^{\circ}$ C (–40 to +185 $^{\circ}$ F), for hazardous areas see Ex documentation
Storage temperature	 Head transmitter: -50 to +100 °C (-58 to +212 °F) DIN rail device: -40 to +100 °C (-40 to +212 °F)
Altitude	Up to 4000 m (4374.5 yards) above mean sea level.
Humidity	 Condensation: Head transmitter permitted DIN rail transmitter not permitted Max. rel. humidity: 95% as per IEC 60068-2-30
Climate class	 Head transmitter: climate class C1 as per EN 60654-1 DIN rail device: climate class B2 as per IEC 60654-1

Degree of protection

• Head transmitter with screw terminals: IP 20, with push-in terminals: IP 30. When the device is installed, the degree of protection depends on the terminal head or field housing used.

■ DIN rail device: IP 20

Shock and vibration resistance

Vibration resistance as per DNVGL-CG-0339: 2015 and DIN EN 60068-2-27

- Head transmitter: 2 to 100 Hz at 4g (increased vibration stress)
- DIN rail device: 2 to 100 Hz at 0.7q (general vibration stress)

Shock resistance as per KTA 3505 (section 5.8.4 Shock test)

Electromagnetic compatibility (EMC)

CE conformity

Electromagnetic compatibility in accordance with all the relevant requirements of the IEC/EN 61326 series and NAMUR Recommendation EMC (NE21). For details, refer to the Declaration of Conformity. All tests were passed both with and without ongoing communication.

Maximum measured error <1% of measuring range.

Interference immunity as per IEC/EN 61326 series, industrial requirements

Interference emission as per IEC/EN 61326 series, Class B equipment

Overvoltage category

Overvoltage category II

Pollution degree


Pollution degree 2

13.6 Mechanical construction

Design, dimensions

Dimensions in mm (in)


Head transmitter

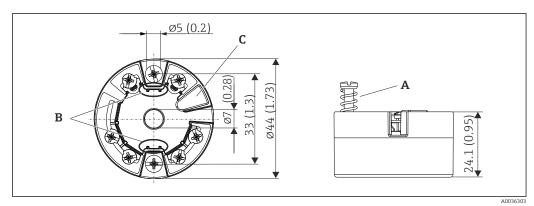

 \blacksquare 20 Version with screw terminals


- A Spring travel $L \ge 5$ mm (not for US M4 securing screws)
- B Mounting elements for attachable measured value display TID10
- C Interface for connecting measured value display or configuration tool

52

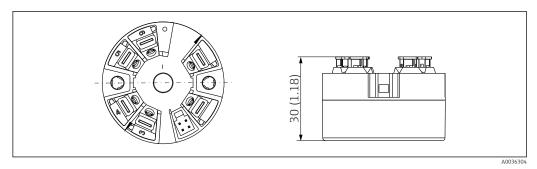


21 Version with push-in terminals. Dimensions are identical to the version with screw terminals, apart from housing height.

DIN rail device/version with power supply source at bottom

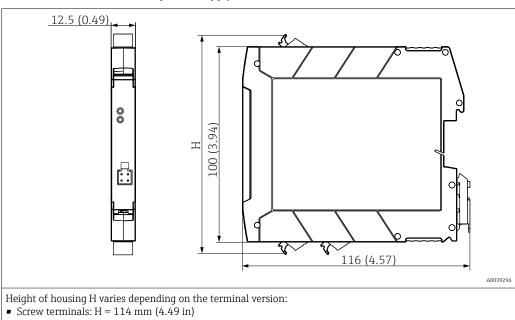

• Push-in terminals: H = 111.5 mm (4.39 in)

DIN rail device/version with power supply source at top

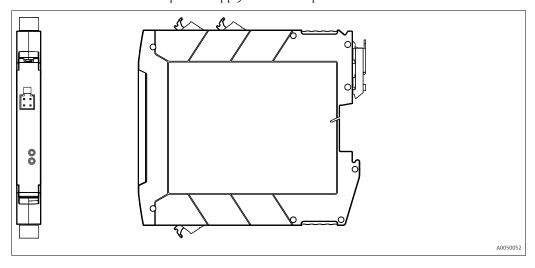

Weight

- Head transmitter: approx. 40 to 50 g (1.4 to 1.8 oz)
- DIN rail device: approx. 100 g (3.53 oz)

Materials

All the materials used are RoHS-compliant.

- Housing: polycarbonate (PC)
- Terminals:
- Screw terminals: nickel-plated brass and gold-plated or tin-plated contacts
- Push-in terminals: tin-plated brass, contact springs 1.4310, 301 (AISI)
- Potting compound:
 - Head transmitter: QSIL 553DIN rail housing: Silgel612EH

Field housing: see specifications

13.7 Certificates and approvals

Certificates and approvals currently available for the product are available from the supplier.

HART® certification

The temperature transmitter is registered by the HART $^{\circ}$ Communication Foundation. The device meets the requirements of the HART $^{\circ}$ Communication Protocol Specifications, Revision 7.

Radio approval

The device has Bluetooth® radio approval in accordance with the Radio Equipment Directive (RED) and the Federal Communications Commission (FCC) 15.247 for the USA.

Europe	
This device meets the requirements of the Radio Equipment Directive RED 2014/53/EU:	EN 300 328EN 301 489-1EN 301 489-17

Canada and United States

English:

This device complies with Part 15 of the FCC Rules and with Industry Canada licenceexempt RSS standard(s).

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this equipment not expressly approved by the manufacturer may void the user's authorization to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Français:

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- $\bullet\,$ L'appareil ne doit pas produire de brouillage, et
- L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Les changements ou modifications apportées à cet appareil non expressément approuvée par le fabricant peut annuler l'autorisation de l'utilisateur d'opérer cet appareil.

Déclaration d'exposition aux radiations: Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

MTTF

- Without Bluetooth® wireless technology: 168 years
- With Bluetooth® wireless technology: 123 years

The mean time to failure (MTTF) denotes the theoretically expected time until the device fails during normal operation. The term MTTF is used for systems that cannot be repaired, e.g. temperature transmitters.

Operating menu and parameter description 14

The following tables list all the parameters in the Expert mode that are contained in the "Diagnostics, Application and System" operating menus. The page number refers to where a description of the parameter can be found.

Depending on the parameter configuration, not all submenus and parameters are available in every device. Information on this can be found in the parameter description under "Prerequisite".

This symbol 🔲 indicates how to navigate to the parameter using operating tools.

Diagnostics →	Actual diagnostics →	Actual diagnostics 1		→ 🖺 60
		Operating time		→ 🖺 60
Diagnostics →	Diagnostic list →	Actual diagnostics 1, 2	2, 3	→ 🖺 60
		Actual diag channel 1,	, 2, 3	→ 🖺 60
		Time stamp 1, 2, 3		→ 🖺 61
Diagnostics →	Event logbook →	Previous diagnostics n		→ 🖺 61
		Previous diag n chann	el	→ 🖺 61
		Time stamp n		→ 🖺 62
Diagnostics →	Simulation →	Diagnostic event simu	lation	→ 🖺 62
		Current output simulation		→ 🖺 62
		Value current output		→ 🖺 62
		Sensor simulation		→ 🖺 63
		Sensor simulation valu	ıe	→ 🖺 63
Diagnostics →	Diagnostic settings →	Properties →	Alarm delay	→ 🖺 63
			Limit corrosion detection	→ 🖺 64
			Sensor line resistance	→ 🖺 64
			Thermocouple diagnostic	→ 🖺 64
		Diagnostic behavior		→ 🖺 64
		Sensor, electronics, pr	ocess, configuration	
		Status signal → Sensor, electronics, pro	ocess, configuration	→ 🖺 65
Diagnostics →	Min/max values →	Sensor min value		→ 🖺 65
		Sensor max value		→ 🖺 65
		Reset sensor min/max values		→ 🖺 65
		Device temperature min.		→ 🖺 66
		Device temperature m	ax.	→ 🖺 66
		Reset device temp. mir	n/max values	→ 🖺 66
Application →	Measured values →	Sensor value		→ 🖺 66
		Sensor raw value		→ 🖺 66

		Output current		→ 🖺 66
		Percent of range		→ 🖺 66
		Device temperature		→ 🖺 66
		PV		→ 🖺 67
		SV		→ 1 67
		TV		→ 🖺 68
		QV		→ 🖺 68
		QV		7 월 00
Application →	Sensor →	Unit		→ 🖺 68
Application	JCHSOI /	Sensor type		→ 🖺 68
		Connection type		→ 🖺 69
		2-wire compensation		→ 🖺 69
		Reference junction		→ 🖺 69
				→ 1 70
		RJ preset value Sensor offset		→ 🖺 70
		Sensor onset		7 目 /U
Application →	Sensor →	Linearization →	Call./v. Dusen coeff. RO, A, B, C	→ 🖺 70
			Polynomial coeff. RO, A, B	→ 🖺 71
			Sensor lower limit	→ 🖺 71
			Sensor upper limit	→ 🖺 72
Application →	Current output →	4mA value		→ 🖺 72
		20mA value		→ 🖺 72
		Failure mode		→ 🖺 73
		Failure current		→ 🖺 73
		Current trimming 4 m	A	→ 🖺 74
		Current trimming 20 m	nA	→ 🖺 74
		Damping		→ 🖺 74
Application \rightarrow	HART configuration \rightarrow	Assign current output	(PV)	→ 🖺 75
		Assign SV		→ 🖺 75
		Assign TV		→ 🖺 75
		Assign QV		→ 🖺 75
		HART address		→ 🖺 76
		No. of preambles		→ 🖺 76
System →	Device management →	HART short tag		→ 🖺 76
		Device tag		→ 🖺 77
		Mains filter		→ 🖺 77
		Locking status		→ 🗎 77
		Device reset		→ 🗎 77
		Configuration counter		→ 🖺 78

Configuration changed	→ 🖺 78
Reset configuration changed flag	→ 🖺 78

System →	User management →	Define password →	New password	→ 🖺 79
			Confirm new password	→ 🖺 80
			Status password entry	→ 🖺 80
		Change user role →	Password ¹⁾	→ 🖺 80
			Status password entry	→ 🖺 80
		Reset password →	Reset password	→ 🖺 81
			Status password entry	→ 🖺 81
		Change password \rightarrow	Old password	→ 🖺 82
			New password	→ 🖺 82
			Confirm new password	→ 🖺 82
			Status password entry	→ 🖺 82
		Delete password →	Delete password	→ 🖺 82

1) The required user role must first be selected here when operating the device via the Configuration app.

System →	Bluetooth configuration \rightarrow	Bluetooth	→ 🖺 82
		Change Bluetooth password ¹⁾	→ 🖺 83

1) Function is only visible in the Configuration app

System →	Information →	Device →	Squawk	→ 🖺 83
			Serial number	→ 🖺 83
			Order code	→ 🖺 84
			Firmware version	→ 🖺 84
			Hardware revision	→ 🖺 84
			Extended order code (n) 1)	→ 🖺 84
			Device name	→ 🖺 84
			Manufacturer	→ 🖺 85

1) n = 1, 2, 3

System →	Information \rightarrow	Device location \rightarrow	Latitude	→ 🖺 85
			Longitude	→ 🖺 85
			Altitude	→ 🖺 85
			Location method	→ 🖺 86
			Location description	→ 🖺 86
			Process unit TAG	→ 🖺 86

System →	Information \rightarrow	HART info →	Device type	→ 🖺 86
			Device revision	→ 🖺 87
			HART revision	→ 🖺 87
			HART descriptor	→ 🖺 87

HART message	→ 🖺 87
Hardware revision	→ 🖺 88
Software revision	→ 🖺 88
HART date code	→ 🖺 88
Manufacturer ID	→ 🖺 88
Device ID	→ 🖺 89

System →	Display →	Display interval	→ 🖺 89
		Format display	→ 🖺 89
	Value 1 display	→ 🖺 90	
		Decimal places 1	→ 🖺 90
	Value 2 display	→ 🖺 90	
		Decimal places 2	→ 🖺 90
		Value 3 display	→ 🖺 90
		Decimal places 3	→ 🗎 90

14.1 Menu: Diagnostics

14.1.1 Submenu: Actual diagnostics

Actual diagnostics 1		
Navigation	☐ Diagnostics → Actual diagnostics → Actual diagnostics 1	
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Additional information	Example for display format: F041-Sensor interrupted	
Operating time		
Navigation	☐ Diagnostics → Actual diagnostics → Operating time	
Description	Displays the length of time the device has been in operation.	
User interface	Hours (h)	
	14.1.2 "Diagnostic list" submenu n = Number of diagnostic messages (n = 1 to 3)	
Actual diagnostics n		
Navigation	□ Diagnostics → Actual diagnostics → Actual diagnostics n	
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Additional information	Example for display format: F041-Sensor interrupted	
Actual diag channel n		
Navigation	☐ Diagnostics → Actual diagnostics → Actual diag channel n	
Description	Displays the function module to which the diagnostic message refers.	

User interface

- Device
- Sensor
- ullet Device temperature
- Current output
- Sensor RJ

Time stamp n

Navigation \Box Diagnostics \rightarrow Actual diagnostics \rightarrow Time stamp n

Description Displays the time stamp of the current diagnostic message in relation to the operating

time.

User interface Hours (h)

14.1.3 "Event logbook" submenu

i

n = Number of diagnostic messages (n = 1 to 10). The last 10 messages are listed in chronological order.

Previous diagnostics n

Navigation Diagnostics \rightarrow Event logbook \rightarrow Previous diagnostics n

Description Displays the diagnostic messages that occurred in the past. The last 10 messages are listed

in chronological order.

User interface Symbol for event behavior and diagnostic event.

Additional information Example for display format:

F201-Electronics faulty

Previous diag n channel

Navigation \Box Diagnostics \rightarrow Event logbook \rightarrow Previous diag n channel

Description Displays the function module to which the diagnostic message refers.

User interface ■ Device

- Sensor
- Device temperature
- Current output
- Sensor RJ

Time stamp n	
Navigation	☐ Diagnostics → Event logbook → Time stamp n
Description	Displays the time stamp of the current diagnostic message in relation to the operating time.
User interface	Hours (h)
	14.1.4 "Simulation" submenu
Diagnostic event sim	ulation
Navigation	
Description	Switches diagnostic simulation on and off.
Selection	Enter one of the diagnostic events using the dropdown menu $\Rightarrow \triangleq 37$. The assigned status signals and diagnostic behaviors are used in the simulation mode. Select 'Off' to quit the simulation. Example: x043 Short circuit
Factory setting	Off
Current output simula	ation
Navigation	
Description	Use this function to switch simulation of the current output on and off. The status signal indicates a category "C" diagnostic message ("function check") while the simulation is running.
Selection	OffOn
Factory setting	Off
Value current output	
Navigation	

Description Use this function to set a current value for the simulation. In this way, users can verify the

correct adjustment of the current output and the correct function of downstream switching

units.

User entry 3.58 to 23 mA

Factory setting 3.58 mA

Sensor simulation

Navigation \square Diagnostics \rightarrow Simulation \rightarrow Sensor simulation

Description Use this function to enable the simulation of the process variable. The simulation value of

the process variable is defined in the **Sensor simulation value** parameter.

Selection ■ Off

On

Factory setting Off

Sensor simulation value

Navigation \square Diagnostics \rightarrow Simulation \rightarrow Sensor simulation value

Description Use this function to enter a simulation value for the process variable. Subsequent

measured value processing and the signal output use this simulation value. In this way,

users can verify whether the measuring device has been configured correctly.

User entry $-1.0 \cdot 10^{20} \text{ to } +1.0 \cdot 10^{20} \,^{\circ}\text{C}$

Factory setting 0.00 °C

14.1.5 "Diagnostic settings" submenu

Submenu: Properties

Alarm delay

Navigation □ Diagnostics → Diagnostic settings → Properties → Alarm delay

Description Use this function to set the delay time during which a diagnostics signal is suppressed

before it is output.

User entry 0 to 5 s

Factory setting

2 s

Limit corrosion detection

Navigation Diagnostics \rightarrow Diagnostic settings \rightarrow Properties \rightarrow Limit corrosion detection

Prerequisite A 4-wire RTD or TC must be selected as the sensor type or connection type. $\rightarrow \triangleq 68$

Description Use this function to enter the limit value for corrosion detection. If this value is exceeded,

the device behaves as defined in the diagnostic settings.

User entry 5 to 10000Ω

Factory setting • 50.0Ω for 4-wire RTD connection type

• 5000Ω for TC connection type

Sensor line resistance

Navigation Diagnostics \rightarrow Diagnostic settings \rightarrow Properties \rightarrow Sensor line resistance

Prerequisite A 4-wire RTD or TC must be selected as the sensor type or connection type. $\rightarrow \triangleq 68$

Description Displays the highest measured resistance value of the sensor lines.

User interface $-1.0 \cdot 10^{20} \text{ to } +1.0 \cdot 10^{20} \Omega$

Thermocouple diagnostic

Navigation □ Diagnostics → Diagnostic settings → Properties → Thermocouple diagnostic

DescriptionUse this function to switch off the "Sensor corrosion" and "Sensor break" diagnostic

functions during thermocouple measurement.

This may be necessary in order to connect electronic simulators (e.g. calibrators) during a thermocouple measurement. The accuracy of the transmitter is not influenced by either the activation or deactivation of the thermocouple diagnostics

function.

Selection • On

Off

Factory setting On

Diagnostic behavior

Reset sensor min/max values

Navigation Diagnostics → Diagnostic settings → Diagnostic behavior Description Each diagnostic event is assigned a certain diagnostic behavior. The user can change this assignment for certain diagnostic events. $\rightarrow \triangleq 37$ Selection Alarm Warning Disabled **Factory setting** See the list of diagnostic events $\rightarrow \triangleq 38$ Status signal **Navigation** Diagnostics → Diagnostic settings → Status signal Description Each diagnostic event is assigned a certain status signal at the factory. The user can change this assignment for certain diagnostic events. $\rightarrow \implies 37$ Selection ■ Failure (F) ■ Function check (C) Out of specification (S) Maintenance required (M) ■ No effect (N) **Factory setting** See the list of diagnostic events $\rightarrow \implies 37$ "Min/max values" submenu 14.1.6 Sensor min value **Navigation** Diagnostics \rightarrow Min/max values \rightarrow Sensor min value Description Displays the minimum temperature measured in the past at the sensor input (minimum indicator). Sensor max value **Navigation** Diagnostics → Min/max values → Sensor max value Description Displays the maximum temperature measured in the past at the sensor input (maximum indicator).

Navigation	
Description	Resets the min/max values of the sensor to their default values.
User entry	Clicking the Reset sensor min/max values button activates the reset function. As a result of this action, the min/max values of the sensor only display the reset, temporary values.
Device temperature min.	
Navigation	
Description	Displays the minimum electronics temperature measured in the past (minimum indicator).
Device temperature max.	
Navigation	☐ Diagnostics \rightarrow Min/max values \rightarrow Device temperature max.
Description	Displays the maximum electronics temperature measured in the past (maximum indicator).
Reset device temp. min/m	ax values
Navigation	☐ Diagnostics → Min/max values → Reset device temp. min/max values
Description	Resets the peakhold indicators for the minimum and maximum electronic temperatures measured.
User entry	Clicking the Reset device temperature min/max values button activates the reset function. As a result of this action, the min/max values for the device temperature only display the reset, temporary values.
	14.2 Menu: Application
	14.2.1 Submenu: Measured values
Sensor value	
Navigation	
Description	Displays the current measured value at the sensor input.

Sensor raw value	
Navigation	☐ Application → Measured values → Sensor raw value
Description	Displays the non-linearized mV/Ohm value at the specific sensor input.
Output current	
Navigation	□ Application → Measured values → Output current
Description	Displays the calculated output current in mA.
Percent of range	
Navigation	□ Application → Measured values → Percent of range
Description	Displays the measured value in percentage of the span
Device temperature	
Navigation	
Description	Displays the current electronics temperature.
PV	
Navigation	□ Application → Measured values → PV
Description	Displays the primary device variable.
SV	
Navigation	□ Application → Measured values → SV
Description	Displays the secondary device variable.

TV	
Navigation	
Description	Displays the tertiary device variable.
QV	
Navigation	\square Application \rightarrow Measured values \rightarrow QV
Description	Displays the quaternary (fourth) device variable.
	14.2.2 Submenu: Sensor
Unit	
Navigation	
Description	Use this function to select the engineering unit for all the measured values.
Selection	- °C - °F - K - Ω - mV
Factory setting	°C
Additional information	Please note: If another unit has been selected instead of the factory setting (°C), all the set temperature values are converted to correspond to the configured temperature unit. Example: 150 °C is set as the upper range value. Following the selection of °F as the engineering unit, the new (converted) upper range value = 302 °F.
Sensor type	
Navigation	
Description	Use this function to select the sensor type for the sensor input.
	Please observe the terminal assignment when connecting the sensors. \rightarrow $\stackrel{ riangle}{=}$ 18

Factory setting Pt100 IEC751

Connection type

Navigation \square Application \rightarrow Sensor \rightarrow Connection type

Prerequisite An RTD sensor or a resistance transmitter must be specified as the sensor type.

Description Use this function to select the connection type for the sensor.

Selection 2-wire, 3-wire, 4-wire

Factory setting 4-wire

2-wire compensation

Navigation Application \rightarrow Sensor \rightarrow 2-wire compensation

Prerequisite An RTD sensor or a resistance transmitter with a **2-wire** connection type must be specified

as the sensor type.

Description Use this function to specify the resistance value for two-wire compensation in RTDs.

User entry $0 \text{ to } 30 \Omega$

Factory setting 0Ω

Reference junction

Navigation Application \rightarrow Sensor \rightarrow Reference junction

Prerequisite A thermocouple (TC) sensor must be selected as the sensor type.

Description Use this function to select reference junction measurement for temperature compensation

of thermocouples (TC).

If **Preset value** is selected, the compensation value is specified via the **RJ preset value** parameter.

Selection• Internal measurement: the internal reference junction temperature is used.

• Fixed value: a fixed value is used.

 Measured value of external sensor: The measured value of an RTD Pt100 2-wire sensor which is connected to terminals 1 and 3 is used.

69

Factory setting Internal measurement RJ preset value Navigation Application \rightarrow Sensor \rightarrow RJ preset value **Prerequisite** The **Preset value** parameter must be set if the **Reference junction** option is selected. Description Use this function to define the fixed preset value for temperature compensation. -58 to +360 User entry **Factory setting** 0.00 Sensor offset Navigation Application \rightarrow Sensor \rightarrow Sensor offset Use this function to set the zero point correction (offset) of the sensor measured value. Description The value indicated is added to the measured value. -18.0 to +18.0**User entry Factory setting** 0.0 Submenu: Linearization 14.2.3 Call./v. Dusen coeff. R0 **Navigation** Application \rightarrow Sensor \rightarrow Linearization \rightarrow Call./v. Dusen coeff. RO The RTD platinum (Callendar/Van Dusen) option is enabled in the **Sensor type** parameter. Prerequisite Description Use this function to set the RO Value only for linearization with the Callendar/Van Dusen polynomial.

Call./v. Dusen coeff. A, B and C

10 to $2\,000\,\Omega$

 100.000Ω

User entry

Factory setting

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Call./v. Dusen coeff. A, B and C

Prerequisite The RTD platinum (Callendar/Van Dusen) option is enabled in the **Sensor type** parameter.

Description Use this function to set the coefficients for sensor linearization based on the

Callendar/Van Dusen method.

User entry ■ A: 3.0e-003 to 4.0e-003

B: -2.0e-006 to 2.0e-006C: -1.0e-009 to 1.0e-009

Factory setting ■ A: 3.90830e-003

■ B: -5.77500e-007 ■ C: -4.18300e-012

Polynomial coeff. R0

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Polynomial coeff. R0

Prerequisite The RTD poly nickel or RTD copper polynomial option is enabled in the **Sensor type**

parameter.

Description Use this function to set the RO Value only for linearization of nickel/copper sensors.

User entry $10 \text{ to } 2000 \Omega$

Factory setting 100.00Ω

Polynomial coeff. A, B

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Polynomial coeff. Polynomial coeff. A, B

Prerequisite The RTD poly nickel or RTD copper polynomial option is enabled in the **Sensor type**

parameter.

Description Use this function to set the coefficients for sensor linearization of copper/nickel resistance

thermometers.

User entry ■ Polynomial coeff. A: 4.0e-003 to 6.0e-003

■ Polynomial coeff. B: -2.0e-005 to 2.0e-005

Factory setting Polynomial coeff. A = 5.49630e-003

Polynomial coeff. B = 6.75560e-006

Sensor lower limit

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Sensor lower limit

Prerequisite The RTD platinum, RTD poly nickel or RTD copper polynomial option is enabled in the

Sensor type parameter.

Description Use this function to set the lower calculation limit for special sensor linearization.

User entry Depends on the **sensor type** selected.

Factory setting Depends on the **sensor type** selected.

Sensor upper limit

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Sensor upper limit

Prerequisite The RTD platinum, RTD poly nickel or RTD copper polynomial option is enabled in the

Sensor type parameter.

Description Use this function to set the upper calculation limit for special sensor linearization.

User entry Depends on the **sensor type** selected.

Factory setting Depends on the **sensor type** selected.

14.2.4 Submenu: Current output

4mA value

Navigation Application \rightarrow Current output \rightarrow 4mA value

Description Use this function to assign a measured value to the current value 4 mA.

Factory setting $0 \,^{\circ}\text{C}$

20mA value

Navigation Application \rightarrow Current output \rightarrow 20mA value

Description Use this function to assign a measured value to the current value 20 mA.

Factory setting 100 °C

Failure mode

Navigation Application \rightarrow Current output \rightarrow Failure mode

Description Use this function to select the signal on alarm level of the current output in the event of an

Selection ■ High alarm

Low alarm

Factory setting Low alarm

Failure current

Navigation Application \rightarrow Current output \rightarrow Failure current

Prerequisite The **High alarm** option is enabled in the "Failure mode" parameter.

Description Use this function to set the value the current output adopts in an alarm condition.

User entry 21.5 to 23 mA

22.5 mA Factory setting

Adjustment of the analog output (4 and 20 mA current trimming)

Current trimming is used to compensate the analog output (D/A conversion). Here, the output current of the transmitter can be adapted so that it suits the value expected at the higher-level system.



Current trimming does not affect the digital HART® value. This can cause the measured value shown on the locally installed display to differ marginally from the value displayed in the higher-level system.

Procedure

1. Start
↓
2. Install an accurate ammeter (more accurate than the transmitter) in the current loop.
↓
3. Switch on current output simulation and set the simulation value to 4 mA.
↓
4. Measure the loop current with the ammeter and make a note of the value.
\
5. Set the simulation value to 20 mA.
↓
6. Measure the loop current with the ammeter and make a note of the value.
\
7. Enter the current values determined as adjustment values in the Current trimming 4 mA / 20 mA parameters

V
8. Deactivate simulation
↓
9. End

Current trimming 4 mA

Navigation Application \rightarrow Current output \rightarrow Current trimming 4 mA

Description Use this function to set the correction value for the current output at the start of the

measuring range at 4 mA.

User entry 3.85 to 4.15 mA

Factory setting 4 mA

Additional information The trimming only affects the current loop values from 3.8 to 20.5 mA. The failure mode

with **Low Alarm** and **High Alarm** current values is not subject to trimming.

Current trimming 20 mA

Navigation ☐ Application → Current output → Current trimming 20 mA

Description Use this function to set the correction value for the current output at the end of the

measuring range at 20 mA.

User entry 19.85 to 20.15 mA

Factory setting 20.000 mA

Additional information The trimming only affects the current loop values from 3.8 to 20.5 mA. The failure mode

with Low Alarm and High Alarm current values is not subject to trimming.

Damping

Navigation \square Application \rightarrow Current output \rightarrow Damping

Description Use this function to set the time constant for current output damping.

User entry 0 to 120 s

Factory setting 0 s

Additional information

The current output responds to fluctuations in the measured value with an exponential delay. The time constant of this delay is defined by this parameter. If a low time constant is entered, the current output responds quickly to the measured value. On the other hand, the response of the current output is delayed significantly if a high time constant is entered.

14.2.5 Submenu: HART configuration

Assign current outpu	t (PV)					
Navigation	Application → HART configuration → Assign current output (PV)					
Description	Use this function to assign the measured variables to the primary HART® value (PV).					
User interface	Sensor					
Factory setting	Sensor (fixed assignment)					
Assign SV						
Navigation						
Description Use this function to assign the measured variable to the secondary HART v						
User interface	Device temperature (fixed assignment)					
Factory setting	Device temperature (fixed assignment)					
Assign TV						
Navigation						
Description	Use this function to assign the measured variable to the tertiary HART value (TV).					
User interface	Sensor (fixed assignment)					
Factory setting	Sensor (fixed assignment)					
Assign QV						
Navigation						

Description Use this function to assign the measured variable to the quaternary (fourth) HART value

(QV).

User interface Sensor (fixed assignment)

Factory setting Sensor (fixed assignment)

HART address

Navigation \square Application \rightarrow HART configuration \rightarrow HART address

Description Use this function to define the HART address of the device.

It is not possible to write to the parameter. The HART address can be set in FDT/DTM-based operating tools, via the CommDTM. 1)

It cannot be set via the Configuration app, however.

Factory setting 0

Additional information The measured value can only be transmitted via the current value if the address is set to

"O". The current is fixed at 4.0 mA for all other addresses (Multidrop mode).

No. of preambles

Navigation Application \rightarrow HART configuration \rightarrow No. of preambles

Description Use this function to define the number of preambles in the HART telegram.

User entry 5 to 20

Factory setting 5

14.3 Menu: System

14.3.1 Submenu: Device management

HART short tag

Navigation System \rightarrow Device management \rightarrow HART short tag

Description Use this function to define a short tag for the measuring point.

User entry Up to 8 alphanumeric characters (letters, numbers and special characters).

Description

state.

Factory setting	8 x '?'
Device tag	
Navigation	
Description	Use this function to enter a unique name for the measuring point so it can be identified quickly within the plant.
User entry	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /)
Factory setting	Depends on the product root and serial number
Mains filter	
Navigation	System → Device management → Mains filter
Description	Use this function to select the mains filter for A/D conversion.
Selection	■ 50 Hz ■ 60 Hz
Factory setting	50 Hz
Locking status	
Navigation	System → Device management → Locking status
Description	Displays the device locking status. When write protection is activated, write access to the parameters is disabled.
User interface	Enabled or disabled check box: Locked by hardware
Device reset	
Navigation	

Use this function to reset the device configuration - either entirely or in part - to a defined $% \left(1\right) =\left(1\right) \left(1\right)$

Selection

Not active

No action is executed and the user exits the parameter.

■ To factory defaults

All the parameters are reset to the factory setting.

■ To delivery settings

All the parameters are reset to the order configuration. The order configuration can differ from the factory setting if customer-specific parameter values were defined when the device was ordered.

Restart device

The device is restarted but the device configuration remains unchanged.

Factory setting

Not active

Configuration counter

Navigation

System → Device management → Configuration counter

Description

Displays the counter reading for changes to device parameters.



Static parameters, whose values change during optimization or configuration, cause this parameter to increase by 1. This supports parameter version management. If several parameters change, e. g. due to loading of parameters from the operating software etc. in the device, the counter can show a higher value. The counter cannot be reset and is also not reset to the default value when the device is reset. If the counter overflows, (16 bit), it starts again at 1.

Configuration changed

Navigation

System → Device management → Configuration changed

Description

Displays whether the configuration of the device has been changed by a master (primary or secondary).

Reset configuration changed flag

Navigation

 \square System \rightarrow Device management \rightarrow Reset configuration changed flag

Description

The **Configuration changed** information is reset by a master (primary or secondary).

14.3.2 User management submenu

Define password → Maintenance	New password
	Confirm new password
	Status password entry

Change user role → Operator	Password ¹⁾	
	Status password entry	
Reset password → Operator	Reset password	
	Status password entry	
Change password → Maintenance	Old password	
	New password	
	Confirm new password	
	Status password entry	
Delete password → Maintenance	Delete password	

1) The required user role must be selected here when operating the device via the Configuration app.

Navigation in the submenu is supported by the following operating elements:

Back

Return to the previous page

Cancel

If Cancel is selected, the status before the submenu was started is restored

Define password	
Navigation	
Description	Use this function to start password definition
User entry	Activate the button
New password	

Navigation System \rightarrow User management \rightarrow Define password \rightarrow New password

Description Use this function to enter a password for the **Maintenance** user role to gain access to the relevant functions.

Additional information

If the factory setting is not changed, the device is set to the **Maintenance** user role. This means that the device's configuration data are not write-protected and can be edited at all times.

Once a password has been defined, devices can be switched to the **Maintenance** user role if the correct password is entered in the **Password** parameter. A new password becomes valid once it has been verified after being entered in the **Confirm new password** parameter.

The password must contain a minimum of 4 and a maximum of 16 characters and can consist of both letters and numbers. Leading and trailing spaces not used as part of the password. If you lose your password, please contact your supplier.

User entry (enter the password)

Confirm new password

Navigation System \rightarrow User management \rightarrow Define password \rightarrow Confirm new password

Description Use this function to confirm the new password that has been defined.

Additional information A new password becomes valid once it has been verified after being entered in the

Confirm new password parameter.

The password must contain a minimum of 4 and a maximum of 16 characters and can consist of both letters and numbers. If you lose your password, please contact your

supplier.

User entry (enter the password)

Status password entry

Navigation System \rightarrow User management \rightarrow Define password \rightarrow Status password entry

Description Displays the status of the password verification.

- Password accepted
- Wrong password
- Password rules violated
- Permission denied
- Incorrect input sequence
- Invalid user role
- Confirm PW mismatch
- Reset password accepted

Enter password

Navigation System \rightarrow User management \rightarrow Enter password

Prerequisite The **Operator** user role is active and a password has been defined.

Description Use this function to enter a password for the selected user role to gain access to the

functions of this role.

User entry Enter the defined password.

Status password entry

Navigation System \rightarrow User management \rightarrow Enter password \rightarrow Status password entry

→ 🖺 80 Description Reset password Navigation System → User management → Reset password **Prerequisite** The **Operator** user role is active and a password has already been defined. Description Use this function to enter the reset code to reset the current password. **A** CAUTION Current password is lost. Only use the reset code if you have lost the current password. Contact supplier. Activate the text box and enter the reset code. User entry Status password entry Navigation System → User management → Reset password → Status password entry Description → 🖺 80 Logout Navigation System → User management → Loqout The **Maintenance** user role must be active. **Prerequisite**

The **Maintenance** user role is exited and the system switches to the **Operator** user role.

Change password

Description

User entry

Navigation System \rightarrow User management \rightarrow Change password

Activate the button.

Prerequisite The **Maintenance** user role must be active.

Description Old password: Use this function to enter the current password to then be able to make changes to the existing password. ■ New password: \rightarrow 🗎 78 ■ Confirm new password: → 🖺 78 **User entry** • (enter the old password) • (enter the new password) • (confirm the new password) Status password entry **Navigation** System \rightarrow User management \rightarrow Change password \rightarrow Status password entry → 🖺 80 Description Delete password Navigation System → User management → Delete password **Prerequisite** The **Maintenance** user role must be active. The password currently valid is deleted. Description The **Define password** button appears. User entry Activate the **Delete password** button. 14.3.3 Bluetooth configuration submenu Bluetooth **Navigation** System \rightarrow Bluetooth configuration \rightarrow Bluetooth Use this function to enable or disable the Bluetooth function. Description • Off: The Bluetooth interface is disabled immediately. • On: The Bluetooth interface is enabled and a connection to the device can be established. Bluetooth communication is only possible if the CDI and display interface is not used. Selection Off ■ On

Factory setting

On

Change Bluetooth password 1)

1) Function is only visible in the Configuration app

Navigation System \rightarrow Bluetooth configuration \rightarrow Change Bluetooth password

Description Use this function to change the Bluetooth password. This function is visible in the

Configuration app only.

Prerequisite The Bluetooth interface is enabled (ON) and a connection to the device is established.

User entry Enter:

■ User name

Current password

New password

Confirm new password

Press OK to confirm your entries.

14.3.4 Information submenu

Device submenu

Squawk		

Navigation \square System \rightarrow Information \rightarrow Device \rightarrow Squawk

Description This function can be used locally to facilitate the identification of the device in the field.

Once the Squawk function has been activated, all the segments flash on the display.

Selection • **Squawk once**: Display of device flashes for 60 seconds and then returns to normal

operation.

• **Squawk on**: Display of device flashes continuously.

■ **Squawk off**: Squawk is switched off and the display returns to normal operation.

User entry Activate the relevant button

Serial number

Navigation System \rightarrow Information \rightarrow Device \rightarrow Serial number

Description Displays the serial number of the device. It can also be found on the nameplate.

User interface Max. 11-digit character string comprising letters and numbers.

Order code **Navigation** System \rightarrow Information \rightarrow Device \rightarrow Order code Description Displays the order code of the device. It can also be found on the nameplate. The order code is generated from the extended order code, which defines all the device features of the product structure. In contrast, the device features cannot be read directly from the order code. Firmware version Navigation System \rightarrow Information \rightarrow Device \rightarrow Firmware version Description Displays the device firmware version that is installed. User interface Max. 6-digit character string in the format xx.yy.zz Hardware revision **Navigation** System \rightarrow Information \rightarrow Device \rightarrow Hardware revision Description Displays the hardware revision of the device. Extended order code (n) n = Number of parts of the extended order code (n = 1 to 3)**Navigation** System \rightarrow Information \rightarrow Device \rightarrow Extended order code n Description Displays the first, second and/or third part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates the version of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate. Uses of the extended order code ■ To order an identical spare device. • To check the ordered device features using the delivery note. Device name

Navigation System \rightarrow Information \rightarrow Device \rightarrow Device name

Description Displays the device name. It can also be found on the nameplate.

Manufacturer

Navigation System \rightarrow Information \rightarrow Device \rightarrow Manufacturer

Description Displays the name of the manufacturer.

Device location submenu

Latitude

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Latitude

Description Use this function to enter the latitude coordinates that describe the device location.

User entry -90.000 to +90.000 °

Factory setting 0

Longitude

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Longitude

Description Use this function to enter the longitude coordinates that describe the device location.

User entry -180.000 to +180.000 °

Factory setting 0

Altitude

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Altitude

Description Use this function to enter the altitude data that describe the device location.

User entry $-1.0 \cdot 10^{+20}$ to $+1.0 \cdot 10^{+20}$ m

Factory setting 0 m

Location method

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Location method

Description Use this function to select the data format for specifying the geographic location. The

codes for specifying the location are based on the US National Marine Electronics

Association (NMEA) Standard NMEA 0183.

Selection ■ No fix

• GPS or Standard Positioning Service (SPS) fix

■ Differential PGS fix

Precise positioning service (PPS)

• Real Time Kinetic (RTK) fixed solution

■ Real Time Kinetic (RTK) float solution

Estimated dead reckoning

Manual input mode

Simulation mode

Factory setting

Manual input mode

Location description

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Location description

Description Use this function to enter a description of the location so that the device can be located in

the plant.

User entry Up to 32 alphanumeric characters (letters, numbers and special characters)

Factory setting 32 x '?'

Process unit tag

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Process unit tag

Description Use this function to enter the process unit in which the device is installed.

User entry Up to 32 alphanumeric characters (letters, numbers and special characters)

Factory setting $32 \times ?'$

HART info submenu

Device type

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Device type

Description Displays the device type with which the device is registered with the HART FieldComm

Group. The device type is specified by the manufacturer. It is needed to assign the

appropriate device description file (DD) to the device.

User interface 4-digit hexadecimal number

Factory setting 0x11D0

Device revision

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Device revision

Description Displays the device revision with which the device is registered with the HART® FieldComm

Group. It is needed to assign the appropriate device description file (DD) to the device.

User interface Revision in hexadecimal format

Factory setting 0x01

HART revision

Navigation System \rightarrow Information \rightarrow HART info \rightarrow HART revision

Description Displays the HART revision of the device

HART descriptor

Navigation \square System \rightarrow Information \rightarrow HART info \rightarrow HART descriptor

Description Use this function to define a description for the measuring point.

User entry Up to 16 alphanumeric characters (uppercase letters, numbers and special characters)

Factory setting 16 x '?'

HART message

Navigation System \rightarrow Information \rightarrow HART info \rightarrow HART message

Description Use this function to define a HART message which is sent via the HART protocol when

requested by the master.

User entry Up to 32 alphanumeric characters (uppercase letters, numbers and special characters)

Factory setting 32 x '?'

Hardware revision → 🖺 84

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Hardware revision

Software revision

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Software revision

Description Displays the software revision of the device.

HART date code

Navigation System \rightarrow Information \rightarrow HART info \rightarrow HART date code

Description Use this function to define date information for individual use.

User entry Date in the format year-month-day (YYYY-MM-DD)

Factory setting $2010-01-01^{1}$

1) Also 01.01.2010 depending on the operating tool

Manufacturer ID

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Manufacturer ID

Description Displays the manufacturer ID with which the device is registered with the HART

FieldComm Group.

User interface 4-digit hexadecimal number

Factory setting 0x0011

Device ID

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Device ID

Description A unique HART identifier is saved in the device ID and used by the control systems to

identify the device. The device ID is also transmitted in command 0. The device ID is

determined unambiguously from the serial number of the device.

User interface ID generated for specific serial number

14.3.5 Submenu: Display

Display interval

Navigation System \rightarrow Display \rightarrow Display interval

Description Set the display duration of the measured values on the local display if they are displayed in alternation. This type of change is only generated automatically if several measured values

are specified.

■ The Value 1 display - Value 3 display parameters are used to specify which measured values are shown on the local display.

 The display format of the displayed measured values is specified using the Format display parameter.

User entry 4 to 20 s

Factory setting 4 s

Format display

Navigation System \rightarrow Display \rightarrow Format display

Description Use this function to select how the measured value is shown on the local display. The

display format Measured value or Measured value with bar graph can be configured.


Selection • Value

■ Value + bar graph


Factory setting Value

Additional information

Value

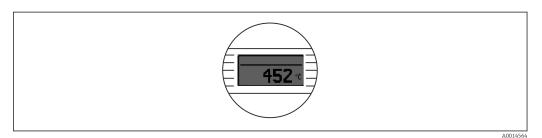

Value + bar graph

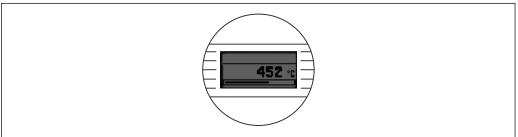

Δ0014563

Value 1 display (Value 2 or 3 display)

Navigation

System \rightarrow Display \rightarrow Format display \rightarrow Value 1 display (Value 2 or 3 display)

Description

Use this function to select a measured value that is shown on the local display.

i

The **Format display** parameter is used to specify how the measured values are displayed.

Selection

- Process value
- Device temperature
- Output current
- Percent of range
- Off

Factory setting

Process value

Decimal places 1 (decimal places 2 or 3)

Navigation

System \rightarrow Display \rightarrow Format display \rightarrow Decimal places 1 (Decimal places 2 or 3)

Prerequisite

A measured value is defined in the parameter **Value 1 display** (Value 2 or 3 display).

Description

Use this function to select the number of decimal places for the display value. This setting does not affect the accuracy of the device for measuring or calculating the value.

If **Automatic** is selected, the maximum possible number of decimal places is always shown on the display.

Selection

■ X

■ X.X

■ X.XX

X.XXXX.XXXX

Automatic

Factory setting

Automatic

Index L20222

Index

0 9	Diagnostic events
2-wire compensation (parameter) 69	Diagnostic behavior
4mA value (parameter)	Overview
20mA value (parameter)	Status signals
•	Diagnostic list (submenu) 60
A	Diagnostic settings (submenu) 63
Actual diag channel n 60	Display (submenu)
Actual diagnostics (submenu) 60	Display interval (parameter) 89
Actual diagnostics 1 60	Disposal
Actual diagnostics n 60	Document
Alarm delay (parameter) 63	Function 4
Altitude (parameter)	Document function 4
Assign current output (PV) (parameter)	
Assign QV (parameter)	E
Assign SV (parameter)	Enter password (parameter) 80
Assign TV (parameter)	Event logbook (submenu) 61
parameter,	
В	F
Bluetooth (parameter)	Failure current (parameter)
Bluetooth configuration (submenu) 82	Failure mode (parameter)
sactooth comigaration (babmena, 111111111111111111111111111111111111	Firmware version
C	Format display (parameter)
Cable specification	
Call./v. Dusen coeff. A, B and C (parameter) 70	H
Call./v. Dusen coeff. RO (parameter) 70	Hardware revision
Change Bluetooth password (parameter) 83	HART address (parameter)
Change password (parameter)	HART configuration (submenu)
Configuration changed (parameter)	HART date code (parameter)
Configuration counter (parameter)	HART descriptor (parameter)
Confirm new password (parameter)	HART info (submenu)
Connection type (parameter)	HART message (parameter)
Current output (submenu)	HART revision
Current output simulation (parameter) 62	HART short tag (parameter)
Current trimming 4 mA (parameter)	,
Current trimming 4 mr (parameter)	I
Surrent trimming 20 mrs (parameter)	Information (submenu)
D	Intended use
Damping (parameter)	
Decimal point (parameter)	L
Define password (parameter)	Latitude (parameter)
Delete password (parameter)	Limit corrosion detection (parameter) 64
Device (submenu)	Linearization (submenu)
Device ID	Location description (parameter) 86
Device location (submenu)	Location method (parameter) 86
Device management (submenu)	Locking status
Device name	Logout (parameter)
Device reset (parameter)	Longitude (parameter)
Device revision	-
Device tag (parameter)	M
Device temperature	Mains filter (parameter)
Device temperature max. (parameter)	Manufacturer (parameter)
Device temperature min. (parameter)	Manufacturer ID (parameter)
Device type	Measured values (submenu) 66
Device variables	Min/max values (submenu) 65
Diagnostic behavior (parameter)	Mounting location
Diagnostic event simulation (parameter) 62	DIN rail (DIN rail clip)
Diagnostic event simulation (parameter) 02	Field housing

L20222 Index

Terminal head, flat face as per DIN 43729	11
N	
Nameplate	79
0	
Operating time	60
Local operation	22 22 22 28
Wireless Field Device Configurator app Order code	84 84 67
P	
Percent of range	
Properties (submenu)	63 67
Q	
QV	68
Reference junction (parameter)	78 66 81 65
S	
Sensor (submenu) Sensor line resistance (parameter) Sensor lower limit (parameter) Sensor max value (parameter) Sensor min value (parameter) Sensor offset (parameter) Sensor raw value Sensor simulation (parameter) Sensor simulation value (parameter) Sensor type (parameter) Sensor upper limit (parameter) Sensor value Serial number Simulation (submenu) Software revision	63 68 72 66 83 62 88
Solid wire	19 83
Status password entry (parameter) 80, 81,	82
Status signal (parameter)	65 25

SV
Terminal assignment
U Unit (parameter)
VValue current output (parameter)62Value display (parameter)90Version data for the device29
W Wire without wire end ferrule

