# Brief Operating Instructions **iTEMP TMT162**

Temperature field transmitter PROFIBUS® PA protocol






These Brief Operating Instructions are not a substitute for the Operating Instructions pertaining to the device.

Detailed information is provided in the Operating Instructions and other documentation.

Available for all device versions via:

- Internet: www.endress.com/deviceviewer
- Smartphone/tablet: Endress+Hauser Operations app



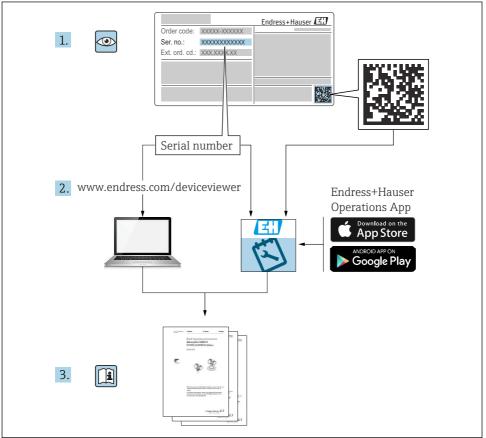

A0023555

# Table of contents

<b>1</b> 1.1 1.2	About this document . Function of document and how to use . Symbols .	. 3
<b>2</b> 2.1 2.2 2.3 2.4 2.5	Safety instructions Requirements for the personnel . Intended use . Workplace safety . Operational safety . Product safety .	5 5 6
<b>3</b> 3.1 3.2 3.3 3.4	Incoming acceptance and product identification Incoming acceptance Product identification Certificates and approvals	6 .7 .7
<b>4</b> 4.1 4.2 4.3	Mounting Mounting requirements . Mounting the transmitter . Post-mounting check .	. 8 . 9
<b>5</b> 5.1 5.2 5.3 5.4 5.5	Electrical connection	11 12 14 15
<b>6</b> 6.1 6.2	Operation options	. 17
<b>7</b> 7.1 7.2	Commissioning Function check Switching on the transmitter	21
<b>8</b> 8.1	Maintenance	

# 1 About this document

# 1.1 Function of document and how to use

#### 1.1.1 Document function

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

#### 1.1.2 Safety Instructions (XA)

When using in hazardous areas, the relevant national standards must be observed. Separate Ex-specific documentation is provided for measuring systems that are used in hazardous areas. This documentation is an integral part of these Operating Instructions. The installation specifications, connection data and safety instructions contained therein must be strictly observed! Make sure that you use the right Ex-specific documentation for the right device with approval for use in hazardous areas! The number of the specific Ex documentation (XA...) is provided on the nameplate. If the two numbers (on the Ex documentation and the nameplate) are identical, then you may use this Ex-specific documentation.

## 1.2 Symbols

#### 1.2.1 Safety symbols

#### A DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **A**CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

#### 1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current	$\sim$	Alternating current
~	Direct current and alternating current	<u> </u>	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Symbol	Meaning
	<b>Potential equalization connection (PE: protective earth)</b> Ground terminals that must be connected to ground prior to establishing any other connections.
	<ul> <li>The ground terminals are located on the interior and exterior of the device:</li> <li>Interior ground terminal: potential equalization is connected to the supply network.</li> <li>Exterior ground terminal: device is connected to the plant grounding system.</li> </ul>

#### 1.2.3 Symbols for certain types of information

Symbol	Meaning	Symbol	Meaning
	Permitted           Procedures, processes or actions that are permitted.		<b>Preferred</b> Procedures, processes or actions that are preferred.
	Forbidden           Procedures, processes or actions that are forbidden.		Tip Indicates additional information.
ĺÌ	Reference to documentation		Reference to page
	Reference to graphic		Series of steps
4	Result of a step		Visual inspection

# 2 Safety instructions

## 2.1 Requirements for the personnel

The operating personnel must fulfill the following requirements:

- Trained, qualified specialists: must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- Before beginning work, the specialist staff must have read and understood the instructions in the manuals and supplementary documentation as well as in the certificates (depending on the application)
- ► Follow instructions and comply with basic conditions

## 2.2 Intended use

The device is a universal and configurable temperature field transmitter with either one or two temperature sensor inputs for resistance thermometers (RTD), thermocouples (TC) and resistance and voltage transmitters. The device is designed for mounting in the field.

The manufacturer is not liable for damage caused by improper or non-intended use.

## 2.3 Workplace safety

When working on and with the device:

• Wear the required personal protective equipment as per national regulations.

# 2.4 Operational safety

- Operate the device only if it is in proper technical condition, free from errors and faults.
- The operator is responsible for the interference-free operation of the device.

Power supply

PROFIBUS® PA Ub = 9 to 32 V, polarity-independent, maximum voltage Ub = 35 V. According to IEC 60079-27, FISCO/FNICO

#### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection or safety equipment):

- Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- Observe the specifications in the separate supplementary documentation included as an integral part of these instructions.

#### Electromagnetic compatibility

The measuring system complies with the general safety requirements as per EN 61010-1, the EMC requirements as per the IEC/EN 61326 series and the NAMUR recommendations NE 21 and NE 89.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet stateof-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device.

# 3 Incoming acceptance and product identification

## 3.1 Incoming acceptance

Proceed as follows on receipt of the device:

- 1. Check whether the packaging is intact.
- 2. If damage is discovered:

Report all damage immediately to the manufacturer.

- 3. Do not install damaged components, as the manufacturer cannot otherwise guarantee the material resistance or compliance with the original safety requirements, and can also not be held responsible for the consequences that may result.
- 4. Compare the scope of delivery against the contents of your order.

- 5. Remove all the packaging material used for transportation.
- 6. Do the data on the nameplate match the ordering information on the delivery note?
- 7. Are the technical documentation and all other necessary documents provided, e.g. certificates?



If one of the conditions is not satisfied, contact your Sales Center.

# 3.2 Product identification

The device can be identified in the following ways:

- Nameplate specifications
- Enter the serial number from the nameplate in the *Device Viewer* (www.endress.com/deviceviewer): all data relating to the device and an overview of the Technical Documentation supplied with the device are displayed.
- Enter the serial number on the nameplate into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information about the device and the technical documentation pertaining to the device is displayed.

#### 3.2.1 Nameplate

#### The right device?

The nameplate provides you with the following information on the device:

- Manufacturer identification, device designation
- Order code
- Extended order code
- Serial number
- Tag name (TAG)
- Technical values: supply voltage, current consumption, ambient temperature, communication-specific data (optional)
- Degree of protection
- Approvals with symbols
- Compare the information on the nameplate with the order.

#### 3.2.2 Name and address of manufacturer

Name of manufacturer:         Endress+Hauser Wetzer GmbH + Co. KG	
Address of manufacturer:	Obere Wank 1, D-87484 Nesselwang or www.endress.com

# 3.3 Certificates and approvals

For certificates and approvals valid for the device: see the data on the nameplate



Approval-related data and documents: www.endress.com/deviceviewer  $\rightarrow$  (enter the serial number)

#### 3.3.1 PROFIBUS® PA certification

- Certified according to PROFIBUS<sup>®</sup> PA Profile 3.02 + Profile 3.01 Amendment 2, Amendment 3. The device can also be operated with certified devices of other manufacturers (interoperability).
- An overview of other approvals and certifications is provided in the Operating Instructions.

# 3.4 Storage and transport

Storage temperature	Without display -40 to +100 °C (-40 to +212 °F)
	With display -40 to +80 °C (-40 to +176 °F)

Maximum relative humidity: < 95 % as per IEC 60068-2-30



Pack the device for storage and transportation in such a way that it is reliably protected against impact and external influences. The original packaging provides the best protection.

Avoid the following environmental influences during storage:

- Direct sunlight
- Proximity to hot objects
- Mechanical vibration
- Aggressive media

# 4 Mounting

If stable sensors are used, the device can be fitted directly to the sensor. For remote mounting to a wall or stand pipe, two mounting brackets are available. The illuminated display can be mounted in four different positions.

# 4.1 Mounting requirements

#### 4.1.1 Installation point

For use in hazardous areas, the limit values specified on the certificates and approvals must be observed (see Safety Instructions).

#### 4.1.2 Important ambient conditions

Ambient temperature range	<ul> <li>Without display: -40 to +85 °C (-40 to +185 °F)</li> <li>With display: -40 to +80 °C (-40 to +176 °F)</li> </ul>
	For use in hazardous areas, please see the Ex certificate, which is an integral part of the product documentation.
	The display may react slowly at temperatures < -20 °C (-4 °F). The readability of the display cannot be guaranteed at temperatures < -30 °C (-22 °F).
Altitude	Up to 2 000 m (6 560 ft) above mean sea level

Overvoltage category	П	
Pollution degree	2	
Insulation class	Class III	
Condensation	Permitted	
Climate class	As per IEC 60654-1, Class C	
Degree of protection	Die-cast aluminum or stainless steel housing: IP67, NEMA 4X	
Shock and vibration resistance	2 to 150 Hz at 3g as per IEC 60068-2-6	
	The use of L-shaped mounting brackets can cause resonance (see wall/ pipe 2" mounting bracket in the 'Accessories' section). Caution: vibrations occurring directly at the transmitter may not exceed specifications.	


## 4.2 Mounting the transmitter

## NOTICE

Do not over-tighten the mounting screws, as this could damage the field transmitter.

Maximum torque = 6 Nm (4.43 lbf ft)

#### 4.2.1 Direct sensor mounting

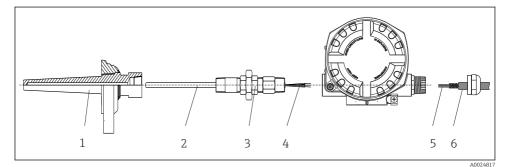


I Direct field transmitter mounting on sensor

- 1 Thermowell
- 2 Insert
- 3 Neck tube nipple and adapter
- 4 Sensor cables
- 5 Fieldbus cables
- 6 Fieldbus shielded cable
- 1. Mount the thermowell and screw down (1).
- 2. Screw the insert with the neck tube nipple and adapter into the transmitter (2). Seal the nipple and adapter thread with silicone tape.
- **3.** Connect the sensor cables (4) to the terminals for the sensors, see the terminal assignment.

- 4. Fit the field transmitter with the insert on the thermowell (1).
- 5. Mount the fieldbus shielded cable or fieldbus connector (6) on the other cable gland.
- 6. Guide the fieldbus cables (5) through the cable gland of the fieldbus transmitter housing into the connection compartment.
- **7.** Screw the cable gland tight as described in the *Ensuring the degree of protection* section  $\rightarrow \cong 15$ . The cable gland must meet explosion protection requirements.

#### 4.2.2 Remote mounting

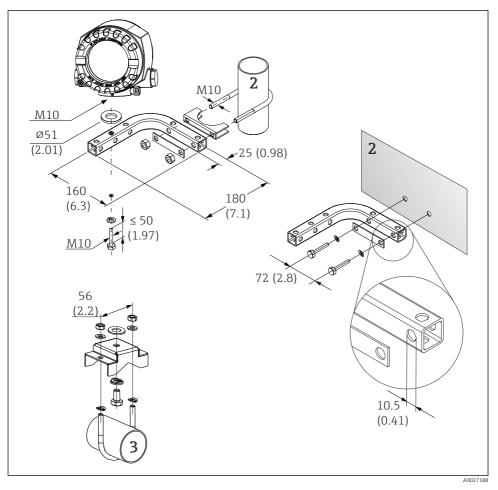

- Installation of the field transmitter using the mounting bracket, see 'Accessories' section. Dimensions in mm (in)
- 2 Combined wall/pipe mounting bracket 2", L-shaped, material 304
- 3 Pipe mounting bracket 2", U-shaped, material 316L

# 4.3 Post-mounting check

After installing the device, always perform the following checks:

Device condition and specifications	Notes
Is the device undamaged (visual inspection)?	-
Do the ambient conditions match the device specification (e.g. ambient temperature, degree of protection, etc.)?	→ 🖺 8

# 5 Electrical connection

## 5.1 Connecting requirements

#### **A**CAUTION

#### The electronics could be destroyed

- ► Switch off power supply before installing or connecting the device. Failure to observe this may result in the destruction of parts of the electronics.
- When connecting Ex-certified devices, please take special note of the instructions and connection schematics in the Ex-specific supplement to these Operating Instructions. Contact the supplier if you have any questions.

A Phillips head screwdriver is required to wire the field transmitter at the terminals.

#### NOTICE

#### Do not over-tighten the screw terminals, as this could damage the transmitter.

Maximum torque = 1 Nm (<sup>3</sup>/<sub>4</sub> lbf ft).

Proceed as follows to wire the device:

- 1. Remove the cover clamp.
- 2. Unscrew the housing cover on the connection compartment together with the O-ring . The connection compartment is opposite the electronics module.
- 3. Open the cable glands of the device.
- 4. Route the appropriate connecting cables through the openings of the cable glands.
- 5. Wire the cables in accordance with  $\rightarrow \square 3$ ,  $\square 12$  and as described in the sections: "Connecting the sensor"  $\rightarrow \square 12$  and "Connecting the measuring device"  $\rightarrow \square 14$ .
- 6. On completion of the wiring, screw the screw terminals tight. Tighten the cable glands again. Refer to the information provided in the 'Ensuring the degree of protection' section.
- 7. Clean the thread in the housing cover and housing base and lubricate if necessary. (Recommended lubricant: Klüber Syntheso Glep 1)
- 8. Screw the housing cover tight again and fit the cover clamp back on.


In order to avoid connection errors always follow the instructions in the post-connection check section before commissioning!

# 5.2 Connecting the sensor


#### NOTICE

& ESD - Electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

#### Terminal assignment

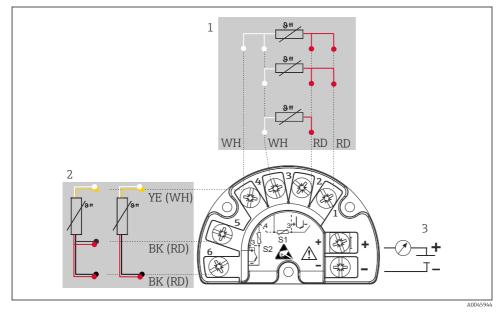

- **3** *Wiring of the field transmitter, RTD, dual sensor input*
- 1 Sensor input 1, RTD, : 2-, 3- and 4-wire
- 2 Sensor input 2, RTD: 2-, 3-wire
- 3 Field transmitter power supply and analog output 4 to 20 mA or fieldbus connection

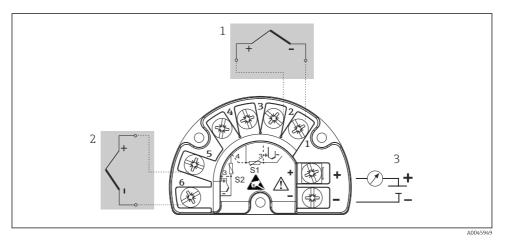

Wiring of the field transmitter, TC, dual sensor input

- 1 Sensor input 1, TC
- 2 Sensor input 2, TC
- 3 Field transmitter power supply and analog output 4 to 20 mA or fieldbus connection

#### NOTICE

When connecting 2 sensors ensure that there is no galvanic connection between the sensors (e.g. caused by sensor elements that are not isolated from the thermowell). The resulting equalizing currents distort the measurements considerably.

The sensors must remain galvanically isolated from one another by connecting each sensor separately to a transmitter. The transmitter provides sufficient galvanic isolation (> 2 kV AC) between the input and output.

*The following connection combinations are possible when both sensor inputs are assigned:* 

	Sensor input 1				
		RTD or resistance transmitter, 2- wire	RTD or resistance transmitter, 3- wire	RTD or resistance transmitter, 4- wire	Thermocouple (TC), voltage transmitter
	RTD or resistance transmitter, 2-wire			-	
Sensor input 2	RTD or resistance transmitter, 3-wire			-	
	RTD or resistance transmitter, 4-wire	-	-	-	-
	Thermocouple (TC), voltage transmitter				

# 5.3 Connecting the measuring device

#### 5.3.1 Cable gland or cable entry


## 

н

#### Risk of damage

- Switch off power supply before installing or connecting the device. Failure to observe this may result in the destruction of parts of the electronics.
- If the device has not been grounded as a result of the housing being installed, we recommended grounding it via one of the ground screws. Observe the grounding concept of the plant! Keep the cable shield between the stripped fieldbus cable and the ground terminal as short as possible! Connection of the functional grounding may be needed for functional purposes. Compliance with the electrical codes of individual countries is mandatory.
- ► If the shielding of the fieldbus cable is grounded at more than one point in systems without additional potential matching, mains frequency equalizing currents can occur that damage the cable or the shielding. In such cases, the shielding of the fieldbus cable is to be grounded on one side only, i.e. it must not be connected to the ground terminal of the housing. The shield that is not connected should be insulated!
- We recommend that the fieldbus not be looped using conventional cable glands. If you later replace even just one device, the bus communication will have to be interrupted.
  - The terminals for the fieldbus connection have integrated reverse polarity protection.
    - Cable cross-section: max. 2.5 mm<sup>2</sup>
    - A shielded cable must be used for the connection.

Follow the general procedure.  $\rightarrow \square 11$ .

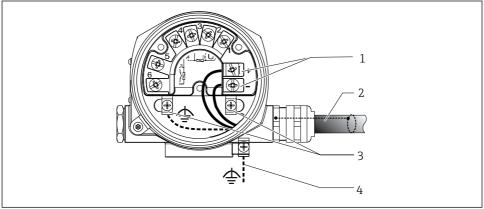

A0010823

- ☑ 5 Connecting the device to the fieldbus cable
- 1 Fieldbus terminals fieldbus communication and power supply
- 2 Shielded fieldbus cable
- 3 Ground terminals, internal
- 4 Ground terminal (external, relevant for remote version)

#### 5.3.2 Fieldbus connection

Fieldbus cable specifications as per IEC 61158-2 (MBP), see Operating Instructions for details.


Devices can be connected to the fieldbus in two ways:

- Via conventional cable glands
- Via fieldbus connectors (optional, available as an accessory)

Grounding via one of the grounding screws (terminal head, field housing) is recommended.

#### 5.3.3 Shielding and grounding

The specifications of the PROFIBUS User Organization for device installation must be observed during installation.

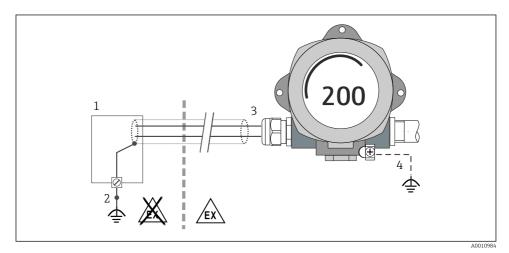

6 Shielding and grounding the signal cable at one end with PROFIBUS® PA communication

- 1 Supply unit
- 2 Grounding point for PROFIBUS® PA communication cable shield
- 3 Grounding of the cable shield at one end
- 4 Optional grounding of the field device, isolated from cable shielding


## 5.4 Ensuring the degree of protection

The device meets all the requirements of IP66/IP67 protection. Compliance with the following points is mandatory following installation in the field or servicing in order to ensure that IP66/IP67 protection is maintained:

- The housing seals must be clean and undamaged when inserted into their grooves. The seals must be dried, cleaned or replaced if necessary.
- All housing screws and screw caps must be firmly tightened.
- The connecting cables used must have the specified external diameter (e.g. M20x1.5, cable diameter 8 to 12 mm).

- Firmly tighten the cable gland.  $\rightarrow \square 7$ ,  $\square 16$
- The cables must loop down before they enter the cable glands ("water trap"). This means that any moisture that may form cannot enter the gland. Install the device so that the cable glands are not facing upwards. → 

   7, 
   16
- Replace unused cable glands with dummy plugs.
- Do not remove the grommet from the cable gland.

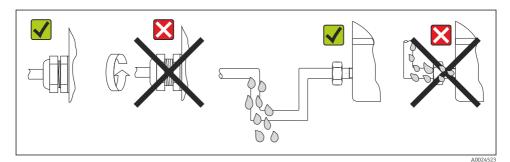

☑ 7 Connection tips to retain IP66/IP67 protection


# 5.5 Post-connection check

Device condition and specifications	Notes
Are the device and cables undamaged (visual check)?	
Electrical connection	Notes
Does the supply voltage match the information on the nameplate?	9 to 32 V <sub>DC</sub>
Do the cables used meet the necessary specifications?	For the fieldbus cable specifications, see the relevant Operating Instructions Sensor cables → 🗎 12
Are the mounted cables relieved of tension?	
Are the power supply and fieldbus cables correctly connected?	See the wiring diagram inside the cover of the terminal compartment
Are all screw terminals well tightened?	
Are all cable glands installed, securely tightened and leak- tight? Cable run with "water trap"?	→ 🗎 15
Are all housing covers installed and securely tightened?	
Electrical connection of the fieldbus system	Notes
Are all the connecting components (T-boxes, junction boxes, connectors, etc.) connected with each other correctly?	
Has each fieldbus segment been terminated at both ends with a bus terminator?	

Device condition and specifications	Notes
Does the max. length of the fieldbus cable comply with the fieldbus specifications?	
Has the max. length of the spurs been observed in accordance with the fieldbus specifications?	For the fieldbus cable specifications, see the relevant Operating Instructions
Is the fieldbus cable fully shielded and correctly grounded?	

# 6 Operation options


# 6.1 Overview of operation options

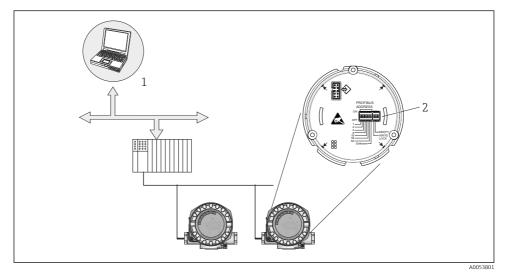

- Operation options of the device via the PROFIBUS® PA interface
- 1 Configuration/operating programs for operation via PROFIBUS® PA (fieldbus functions, device parameters)
- 2 DIP switches for hardware settings (write protection, simulation mode)

# 6.2 Measured value display and operating elements

#### 6.2.1 Display elements

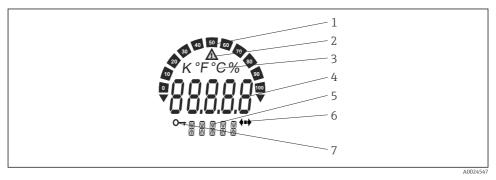

IC display of the field transmitter (illuminated, can be plugged in in 90° steps)


Item no.	Function	Description
1	Bar graph display	In increments of 10% with indicators for underranging and overranging. The bar graph display flashes when an error occurs.
2	'Caution' symbol	This is displayed when an error or warning occurs.
3	Unit display K, °F, °C or %	Unit display for the internal measured value shown.
4	Measured value display, digit height 20.5 mm	Displays the current measured value. In the event of an error or warning, the corresponding diagnostics information is displayed. Please refer to the relevant Operating Instructions for the device for more information.
5	Status and information display	Indicates which value is currently shown on the display. A special text can be entered for every measured value to be displayed. In the event of a warning or an error, the associated channel information is displayed where available. The field remains empty if the channel information is not available.
6	'Communication' symbol	The communication symbol appears when bus communication is active.
7	'Configuration locked' symbol	The 'configuration locked' symbol appears when configuration is locked via the hardware

#### 6.2.2 Local operation

#### NOTICE

ESD - Electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.


Settings (a bus address and a write lock) for the PROFIBUS® PA interface can be made via DIP switches on the electronics module.

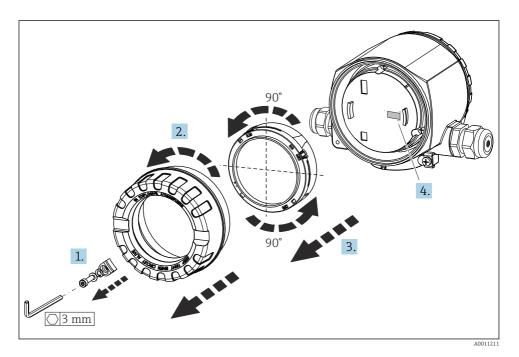

Procedure for setting the DIP switch:

- 1. Remove the cover clamp.
- 2. Unscrew the housing cover together with the O-ring.
- 3. If necessary, remove the display with retainer from the electronics module.
- 4. Configure the hardware write protection WRITE LOCK accordingly using the DIP switch. In general, the following applies: switch to ON = function enabled, switch to OFF = function disabled.

Once the hardware setting has been made, re-assemble the housing cover in the reverse order.

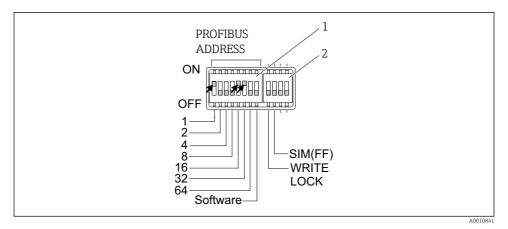

IO Hardware configuration via DIP switches


- 1 Configuring the device address taking the example of bus address 49: DIP switches 32, 16, 1 to "ON" (32 + 16 + 1 = 49). Software' DIP switch to "OFF".
- 2 SIM DIP switch = simulation mode (no function for PROFIBUS® PA communication); WRITE LOCK = write protection

Note the following points:

- The address must always be configured for a PROFIBUS<sup>®</sup> PA device. Valid device addresses are in the range between 0 and 125. In a PROFIBUS<sup>®</sup> PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. The address 126 is reserved for initial commissioning and servicing.
- On leaving the factory, all devices are delivered with the default address 126 and software addressing (DIP switch set to "ON").

The bus address is configured as follows:

- 'Software' DIP switch set from "ON" to "OFF": The device restarts after 10 seconds and adopts the valid bus address configured with DIP switches 1 to 64. The bus address cannot be changed by software via a DDLM\_SLAVE\_ADD telegram.
- 'Software' DIP switch set from "OFF" to "ON": The device restarts after 10 seconds and adopts the default bus address 126. The bus address can be changed by software via a DDLM\_SLAVE\_ADD telegram.

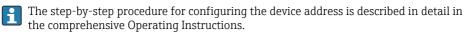

#### 6.2.3 Access to the operating menu via the operating tool

PROFIBUS<sup>®</sup> PA functions and device-specific parameters are configured via fieldbus communication. The following configuration systems, among others, are available for this purpose:

Operating tools

FieldCare	SIMATIC PDM
(Endress+Hauser)	(Siemens)

i

The step-by-step procedure for commissioning the fieldbus functions for the first time is described in detail in the comprehensive Operating Instructions, as is the configuration of device-specific parameters.

# 7 Commissioning

## 7.1 Function check

Before commissioning the measuring point make sure that all final checks have been carried out:

- "Post-installation check" checklist,  $\rightarrow \square 11$
- "Post-connection check" checklist,  $\rightarrow \square 16$

# 7.2 Switching on the transmitter

Switch on the supply voltage after completing the final checks. The device is ready for operation after approx. 20 seconds! The transmitter performs a number of internal test functions after power-up. As this procedure progresses, the following sequence of messages appears on the local display:

Step	User interface	
1	All segments on	
2	All segments off	
3	Manufacturer data and device name are displayed	
4	Current firmware version is displayed	
5	Current device revision is displayed	
6a	The current measured value is displayed. Bar graph displays the % value within the set bar graph range	
6b	The current status message is displayed. If the switch-on procedure fails, the appropriate status message is displayed, depending on the cause.	
	If the switch-on procedure is not successful, the relevant diagnostic event, depending on the cause, is displayed. A detailed list of diagnostic events and the corresponding troubleshooting instructions can be found in the Operating Instructions.	

Normal measuring mode commences as soon as the switch-on procedure is completed. Various measured value and/or status variables appear on the display.

# 8 Maintenance

No special maintenance work is required for the temperature transmitter.

# 8.1 Cleaning

A clean, dry cloth can be used to clean the device.



# www.addresses.endress.com

