


# Operating Instructions

## Levelflex FMP53

### PROFIBUS PA

Guided-wave radar

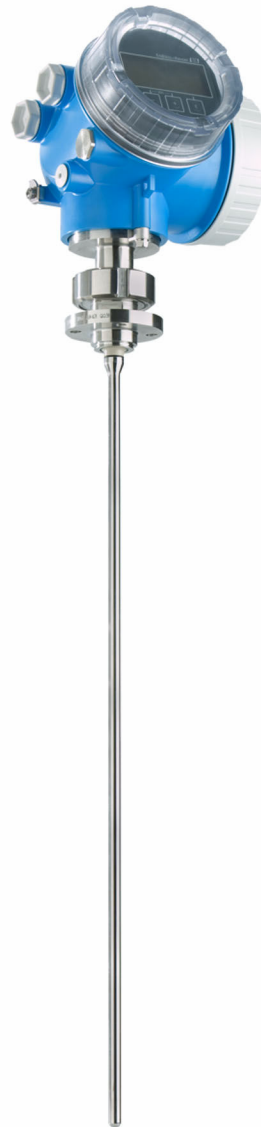



A0023555

# Table of contents

<b>1</b>	<b>About this document</b> . . . . .	<b>5</b>	<b>7</b>	<b>Electrical connection</b> . . . . .	<b>28</b>
1.1	Document function . . . . .	5	7.1	Connecting requirements . . . . .	28
1.2	Symbols . . . . .	5	7.1.1	Terminal assignment . . . . .	28
1.2.1	Safety symbols . . . . .	5	7.1.2	Cable specification . . . . .	29
1.2.2	Electrical symbols . . . . .	5	7.1.3	Device plug . . . . .	29
1.2.3	Tool symbols . . . . .	5	7.1.4	Supply voltage . . . . .	30
1.2.4	Symbols for certain types of information and graphics . . . . .	6	7.1.5	Overvoltage protection . . . . .	30
1.3	List of abbreviations . . . . .	6	7.2	Connecting the device . . . . .	31
1.4	Documentation . . . . .	7	7.2.1	Opening cover . . . . .	31
1.5	Registered trademarks . . . . .	8	7.2.2	Connecting . . . . .	31
<b>2</b>	<b>Basic safety instructions</b> . . . . .	<b>9</b>	7.2.3	Plug-in spring-force terminals . . . . .	32
2.1	Requirements for the personnel . . . . .	9	7.2.4	Closing the cover of the connection compartment . . . . .	32
2.2	Intended use . . . . .	9	7.3	Post-connection check . . . . .	33
2.3	Workplace safety . . . . .	10	<b>8</b>	<b>Operation options</b> . . . . .	<b>34</b>
2.4	Operational safety . . . . .	10	8.1	Overview of operation options . . . . .	34
2.5	Product security . . . . .	10	8.1.1	Access to operating menu via local display . . . . .	34
2.5.1	CE mark . . . . .	10	8.1.2	Access to the operating menu via the operating tool . . . . .	35
2.5.2	EAC conformity . . . . .	11	8.2	Structure and function of the operating menu . . . . .	36
<b>3</b>	<b>Product description</b> . . . . .	<b>12</b>	8.2.1	Structure of the operating menu . . . . .	36
3.1	Product design . . . . .	12	8.2.2	User roles and related access authorization . . . . .	37
3.1.1	Levelflex FMP53 . . . . .	12	8.2.3	Data access - Security . . . . .	38
3.1.2	Electronics housing . . . . .	13	8.3	Display and operating module . . . . .	42
<b>4</b>	<b>Incoming acceptance and product identification</b> . . . . .	<b>14</b>	8.3.1	Display format . . . . .	42
4.1	Incoming acceptance . . . . .	14	8.3.2	Operating elements . . . . .	44
4.2	Product identification . . . . .	14	8.3.3	Entering numbers and text . . . . .	45
4.2.1	Nameplate . . . . .	14	8.3.4	Opening the context menu . . . . .	47
4.2.2	Manufacturer address . . . . .	15	8.3.5	Envelope curve display on the display and operating module . . . . .	48
<b>5</b>	<b>Storage, transport</b> . . . . .	<b>16</b>	<b>9</b>	<b>System integration</b> . . . . .	<b>49</b>
5.1	Storage temperature . . . . .	16	9.1	Overview of device master file (GSD) . . . . .	49
5.2	Transporting to the measuring point . . . . .	16	9.2	Setting the device address . . . . .	49
<b>6</b>	<b>Installation</b> . . . . .	<b>17</b>	9.2.1	Hardware addressing . . . . .	49
6.1	Mounting requirements . . . . .	17	9.2.2	Software addressing . . . . .	49
6.1.1	Suitable mounting position . . . . .	17	<b>10</b>	<b>Commissioning using the wizard</b> . . . . .	<b>51</b>
6.1.2	Mounting under confined conditions . . . . .	18	<b>11</b>	<b>Commissioning via operating menu</b> . . . . .	<b>52</b>
6.1.3	Notes on the mechanical load of the probe . . . . .	19	11.1	Installation and function check . . . . .	52
6.1.4	Special installation situations . . . . .	20	11.2	Configuring the operating language . . . . .	52
6.2	Mounting the device . . . . .	24	11.3	Configuring level measurement . . . . .	53
6.2.1	Tool list . . . . .	24	11.4	Recording the reference echo curve . . . . .	54
6.2.2	Mounting the "Sensor, remote" version . . . . .	24	11.5	Configuring the local display . . . . .	54
6.2.3	Turning the transmitter housing . . . . .	25	11.5.1	Factory setting of local display for level measurements . . . . .	54
6.2.4	Turning the display . . . . .	26			
6.3	Post-mounting check . . . . .	27			

11.5.2	Adjusting the local display . . . . .	54	<b>16</b>	<b>Operating menu . . . . .</b>	<b>77</b>
11.6	Configuration management . . . . .	55	16.1	Overview of the operating menu (display module) . . . . .	77
11.7	Protecting settings from unauthorized access .	55	16.2	Overview of the operating menu (operating tool) . . . . .	84
<b>12</b>	<b>Diagnostics and troubleshooting . . . . .</b>	<b>56</b>	16.3	"Setup" menu . . . . .	91
12.1	General troubleshooting . . . . .	56	16.3.1	"Mapping" wizard . . . . .	98
12.1.1	General errors . . . . .	56	16.3.2	"Analog input 1 to 6" submenu . . . . .	99
12.1.2	Parameter configuration errors . . . . .	56	16.3.3	"Advanced setup" submenu . . . . .	101
12.2	Diagnostic information on local display . . . . .	57	16.4	"Diagnostics" menu . . . . .	145
12.2.1	Diagnostic message . . . . .	57	16.4.1	"Diagnostic list" submenu . . . . .	147
12.2.2	Calling up remedial measures . . . . .	59	16.4.2	"Event logbook" submenu . . . . .	148
12.3	Diagnostic event in the operating tool . . . . .	59	16.4.3	"Device information" submenu . . . . .	149
12.4	Diagnostic list . . . . .	61	16.4.4	"Measured values" submenu . . . . .	151
12.5	List of diagnostic events . . . . .	62	16.4.5	"Analog input 1 to 6" submenu . . . . .	153
12.6	Event logbook . . . . .	63	16.4.6	"Data logging" submenu . . . . .	155
12.6.1	Event history . . . . .	63	16.4.7	"Simulation" submenu . . . . .	158
12.6.2	Filtering the event logbook . . . . .	64	16.4.8	"Device check" submenu . . . . .	162
12.6.3	Overview of information events . . . . .	64	16.4.9	"Heartbeat" submenu . . . . .	164
12.7	Firmware history . . . . .	65	<b>Index . . . . .</b>	<b>165</b>	
<b>13</b>	<b>Maintenance . . . . .</b>	<b>66</b>			
13.1	Exterior cleaning . . . . .	66			
13.2	General cleaning instructions . . . . .	66			
13.3	Cleaning the probe . . . . .	66			
13.3.1	Cleaning the probe in the vessel . . . . .	66			
13.3.2	Cleaning the probe outside the vessel . . . . .	66			
<b>14</b>	<b>Repair . . . . .</b>	<b>68</b>			
14.1	General information . . . . .	68			
14.1.1	Repair concept . . . . .	68			
14.1.2	Repairs to Ex-approved devices . . . . .	68			
14.1.3	Replacing electronics modules . . . . .	68			
14.1.4	Replacing a device . . . . .	68			
14.2	Spare parts . . . . .	69			
14.3	Return . . . . .	69			
14.4	Disposal . . . . .	69			
<b>15</b>	<b>Accessories . . . . .</b>	<b>70</b>			
15.1	Device-specific accessories . . . . .	70			
15.1.1	Weather protection cover . . . . .	70			
15.1.2	Mounting bracket for electronics housing . . . . .	71			
15.1.3	Weld-in adapter . . . . .	72			
15.1.4	Protective cover . . . . .	72			
15.1.5	Calibration kit . . . . .	73			
15.1.6	Remote display FHX50 . . . . .	73			
15.1.7	Overvoltage protection . . . . .	74			
15.1.8	Bluetooth module BT10 for HART devices . . . . .	75			
15.2	Communication-specific accessories . . . . .	76			
15.3	Service-specific accessories . . . . .	76			
15.4	System components . . . . .	76			
15.4.1	Memograph M RSG45 . . . . .	76			

# 1 About this document

## 1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

### 1.2.1 Safety symbols

#### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **WARNING**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.






#### **CAUTION**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### **NOTICE**

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

### 1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective earth (PE)</b> Ground terminals that must be connected to ground prior to establishing any other connections.  The ground terminals are located on the interior and exterior of the device: <ul style="list-style-type: none"> <li>▪ Interior ground terminal: protective earth is connected to the mains supply.</li> <li>▪ Exterior ground terminal: device is connected to the plant grounding system.</li> </ul>

### 1.2.3 Tool symbols



Phillips head screwdriver



Flat blade screwdriver



Torx screwdriver



Allen key



Open-ended wrench

### 1.2.4 Symbols for certain types of information and graphics

**Permitted**

Procedures, processes or actions that are permitted

**Preferred**

Procedures, processes or actions that are preferred

**Forbidden**

Procedures, processes or actions that are forbidden

**Tip**

Indicates additional information




Reference to documentation



Reference to graphic



Notice or individual step to be observed

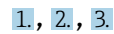

Series of steps



Result of a step




Visual inspection




Operation via operating tool



Write-protected parameter

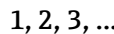

Item numbers

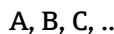

Views

**Safety instructions**

Observe the safety instructions contained in the associated Operating Instructions

**Temperature resistance of the connection cables**

Specifies the minimum value of the temperature resistance of the connection cables

## 1.3 List of abbreviations

**BA**

Document type "Operating Instructions"

**KA**

Document type "Brief Operating Instructions"

**TI**

Document type "Technical Information"

**SD**

Document type "Special Documentation"

**XA**

Document type "Safety Instructions"

**PN**

Nominal pressure

**MWP**

Maximum working pressure

The MWP is indicated on the nameplate.

**ToF**

Time of Flight

**$\epsilon_r$  (Dk value)**

Relative dielectric constant

**PLC**

Programmable logic controller (PLC)

**CDI**

Common Data Interface

**BD**

Blocking Distance; no signals are analyzed within the BD.

**PLC**

Programmable logic controller (PLC)


**CDI**

Common Data Interface

**PFS**

Pulse Frequency Status (Switch output)


## 1.4 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

The following documentation may be available depending on the device version ordered:

Document type	Purpose and content of the document
Technical Information (TI)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	<b>Guide that takes you quickly to the 1st measured value</b> The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	<b>Your reference document</b> These Operating Instructions contain all the information that is required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

Document type	Purpose and content of the document
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are a constituent part of the Operating Instructions.  Information on the Safety Instructions (XA) that are relevant for the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is a constituent part of the device documentation.

## 1.5 Registered trademarks

### **PROFIBUS®**

PROFIBUS and the associated trademarks (The Association Trademark, the Technology Trademarks, the Certification Trademark and the Certified by PI Trademark) are registered trademarks of the PROFIBUS User Organization e.V. (Profibus User Organization), Karlsruhe - Germany

### **Bluetooth®**

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

### **Apple®**

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

### **Android®**

Android, Google Play and the Google Play logo are trademarks of Google Inc.

### **KALREZ®, VITON®**

Registered trademarks of DuPont Performance Elastomers L.L.C., Wilmington, DE USA

### **TEFLON®**

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

### **TRI-CLAMP®**

Registered trademark of Ladish & Co., Inc., Kenosha, USA



## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Intended use

#### Application and media

The measuring instrument described in this manual is intended only for the level measurement of liquids. Depending on the version ordered, the measuring instrument can also measure potentially explosive, flammable, poisonous and oxidizing media.

If the limit values specified in the "Technical data" and the conditions listed in the instructions and additional documentation are observed, the measuring instrument may be used only for the following measurements:

- ▶ Measured process variables: level
- ▶ Calculable process variables: volume or mass in any shape of vessel (calculated from the level by the linearization functionality)

To ensure that the measuring instrument remains in proper condition for the operation time:

- ▶ Use the measuring instrument only for media to which the process-wetted materials are sufficiently resistant.
- ▶ Observe the limit values in the "Technical data".

#### Incorrect use

The manufacturer is not liable for harm caused by improper or unintended use.

Clarification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability.

#### Residual risks

Due to heat transfer from the process as well as power loss in the electronics, the temperature of the electronics housing and the assemblies contained therein (e.g. display module, main electronics module and I/O electronics module) may rise up to 80 °C (176 °F). When in operation, the sensor may reach a temperature close to the medium temperature.

Danger of burns from contact with surfaces!

- ▶ In the event of elevated fluid temperatures, ensure protection against contact to prevent burns.

## 2.3 Workplace safety

When working on and with the device:

- ▶ Wear the required personal protective equipment as per national regulations.

With separable probe rods, medium may penetrate the joints between the individual parts of the rod. This medium may escape when the joints are loosened. This can cause injuries in the case of dangerous (e.g., aggressive or toxic) media.

- ▶ When loosening the joints between the individual parts of the probe rod, wear appropriate protective equipment according to the medium.

## 2.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for ensuring that the device is in good working order.

### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

- ▶ If modifications are nevertheless required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories from the manufacturer.

### Hazardous area

To eliminate danger to persons or the installation when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation included as an integral part of these instructions.

## 2.5 Product security

This measuring instrument is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

- ▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

### 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU directives. These are listed in the corresponding EU Declaration of Conformity together with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the CE mark.

### **2.5.2 EAC conformity**


The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the EAC mark.

## 3 Product description

### 3.1 Product design

#### 3.1.1 Levelflex FMP53

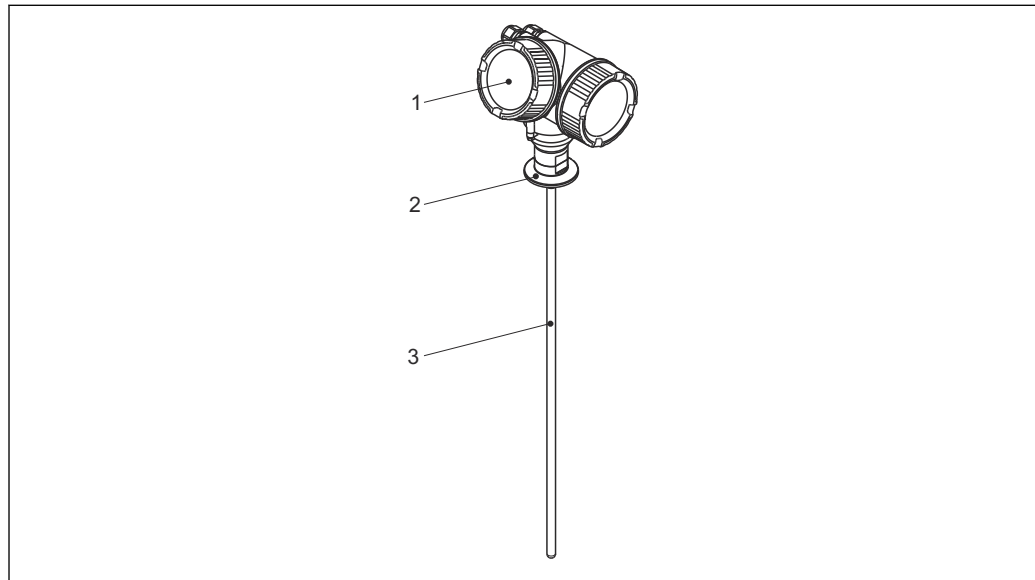


A0013421

#### 1 Design of the Levelflex

- 1 Electronics housing
- 2 Process connection
- 3 Rod probe

### 3.1.2 Electronics housing

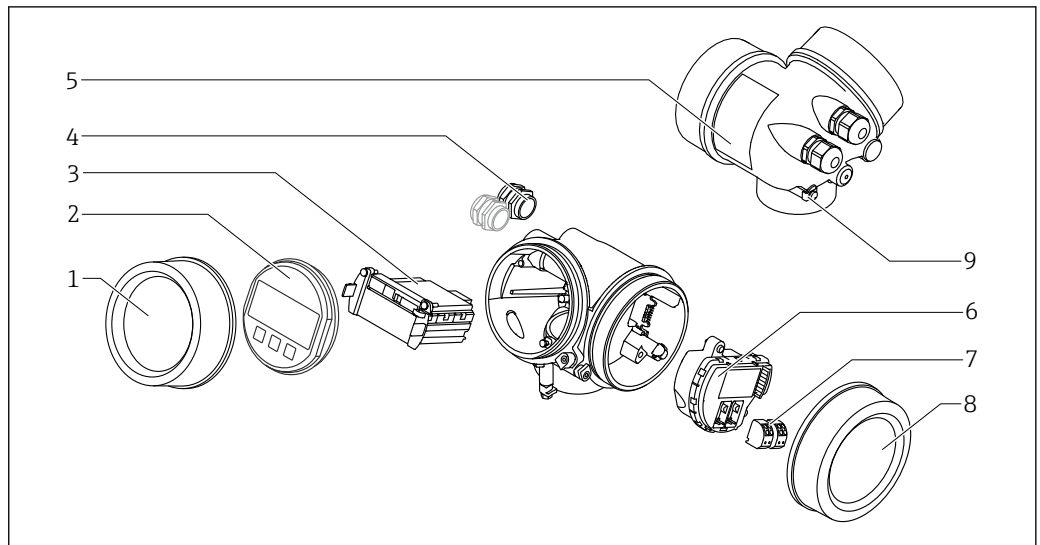


A0012422

#### 2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

## 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

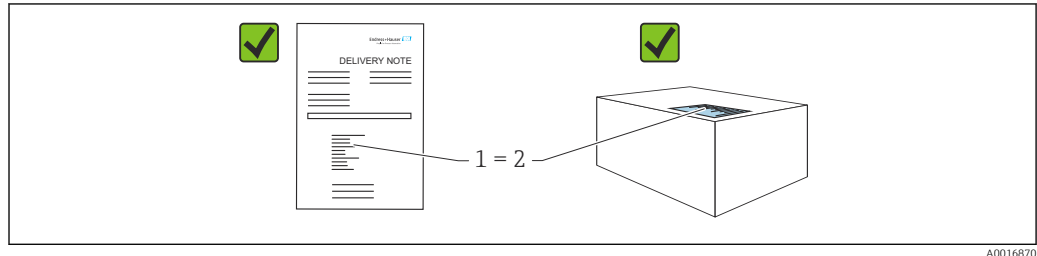

Check the following during incoming acceptance:

- Is the order code on the delivery note (1) identical to the order code on the product sticker (2)?
- Are the goods undamaged?
- Do the data on the nameplate correspond to the order specifications and the delivery note?
- Is the documentation provided?
- If required (see nameplate): are the Safety Instructions (XA) provided?



If one of these conditions is not met, please contact the manufacturer's sales office.

### 4.2 Product identification

The following options are available for identification of the device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- ▶ *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)); manually enter the serial number from the nameplate.
  - ↳ All the information about the measuring device is displayed.
- ▶ *Endress+Hauser Operations app*; manually enter the serial number indicated on the nameplate or scan the 2D matrix code on the nameplate.
  - ↳ All the information about the measuring device is displayed.

#### 4.2.1 Nameplate

The information that is required by law and is relevant to the device is shown on the nameplate, e.g.:

- Manufacturer identification
- Order number, extended order code, serial number
- Technical data, degree of protection
- Firmware version, hardware version
- Approval-related information, reference to Safety Instructions (XA)
- DataMatrix code (information about the device)

#### **4.2.2 Manufacturer address**

Endress+Hauser SE+Co. KG  
Hauptstraße 1  
79689 Maulburg, Germany  
Place of manufacture: See nameplate.

## 5 Storage, transport

### 5.1 Storage temperature

- Permitted storage temperature:  $-40$  to  $+80$  °C ( $-40$  to  $+176$  °F)
- Use original packaging.


### 5.2 Transporting to the measuring point

**⚠ WARNING**

**Housing or probe may become damaged or break off.**

Risk of injury!

- ▶ Transport the measuring instrument to the measuring point in its original packaging or by the process connection.
- ▶ Always secure lifting equipment (slings, eyes, etc.) at the process connection and never lift the device by the electronic housing or probe. Pay attention to the center of gravity of the device so that it does not tilt or slip unintentionally.
- ▶ Follow the safety instructions and transport conditions for devices weighing more than 18 kg (39.6 lbs) (IEC 61010).

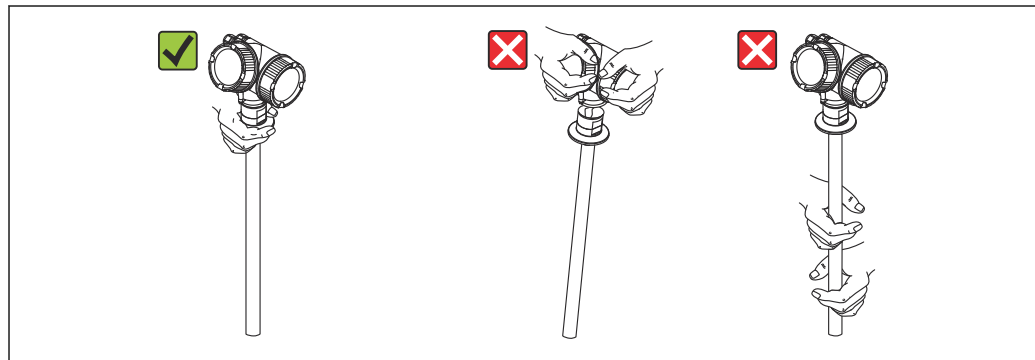


A0014267



## 6 Installation

### 6.1 Mounting requirements

#### 6.1.1 Suitable mounting position

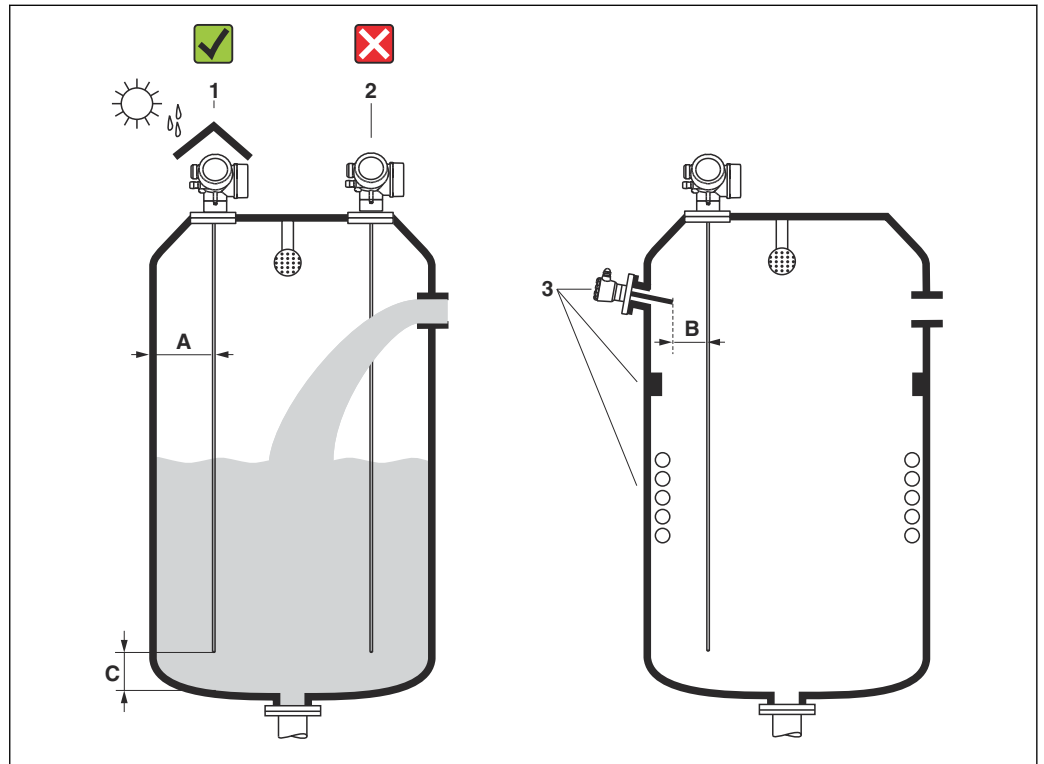

3 Installation positions

A0014130

#### Spacing requirements when mounting

- Distance (A) between the vessel wall and rod probes:
  - For smooth metallic walls: > 50 mm (2 in)
  - For plastic walls: > 300 mm (12 in) to metallic parts outside the vessel
- Distance (B) between rod probes and internal fittings (4): > 300 mm (12 in)
- When using more than one Levelflex:
  - Minimum distance between the sensor axes: 100 mm (3.94 in)
- Distance (C) from the end of the probe to the bottom of the vessel: > 10 mm (0.4 in)

#### Additional mounting requirements


- When mounting outdoors, a weather protection cover (1) can be used to protect the device against extreme weather conditions.
- Do not mount the probe in the filling curtain (2).

**i** When mounting the housing in a recess (e.g. in a concrete ceiling), observe a minimum distance of 100 mm (4 in) between the cover of the connection compartment/electronics compartment and the wall. Otherwise the connection compartment/electronics compartment will not be accessible after installation.

## 6.1.2 Mounting under confined conditions


### Mounting with remote probe

The device version with a remote probe is suitable for applications with restricted mounting space (product structure: probe design). In this case, the electronics housing is mounted at a separate position from the probe.

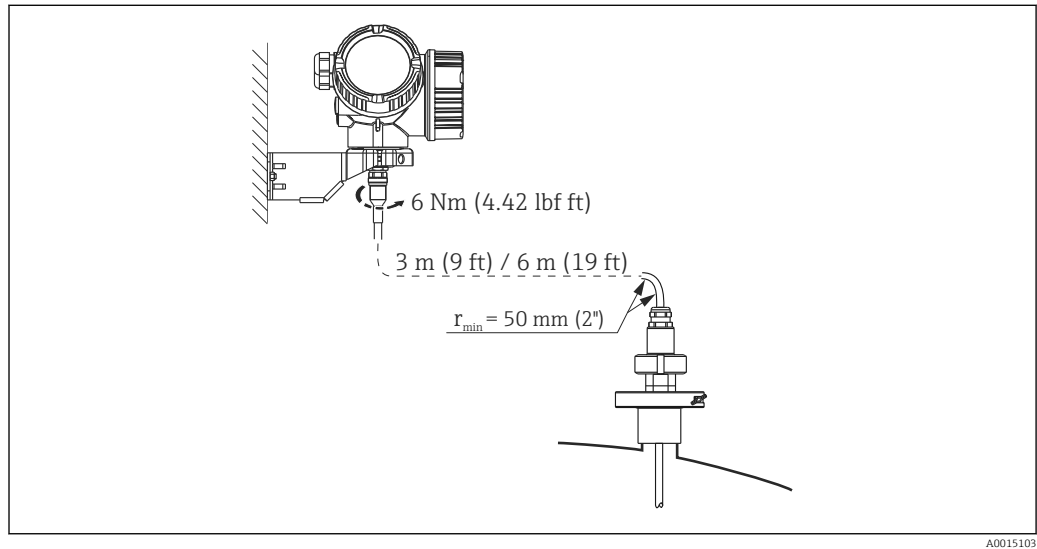

- The connecting cable is connected to the probe upon delivery.
    - Length: 3 m (9 ft) or 6 m (18 ft)
    - Minimum bending radius: 50 mm (2 inch)
  - The mounting bracket for the electronics housing is included in the delivery with this version. Mounting options:
    - Wall mounting
    - Mounting on DN32 to DN50 (1¼ to 2 inch) post or pipe
- i** The probe with the connection cable and the electronics are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

### Separable probes

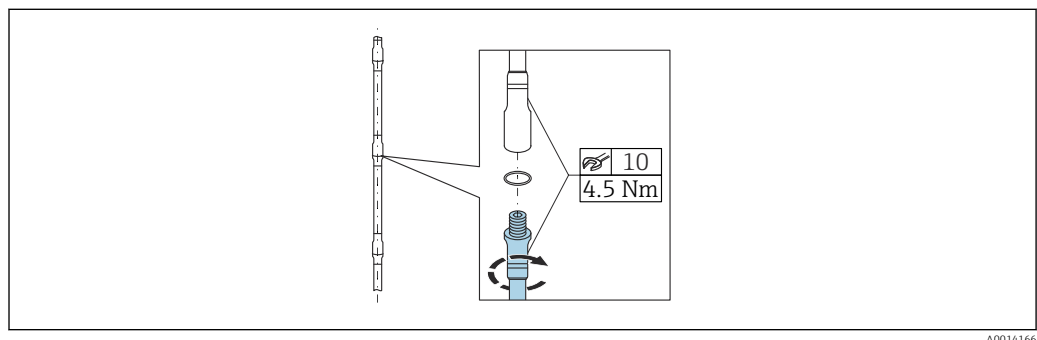

In confined mounting conditions (ceiling clearance), the use of separable rod probe ( $\varnothing$  8 mm) is advisable.

- Max. probe length 4 m (13.12 ft)
- Max. lateral loading capacity 10 Nm
- Probes can be separated several times, with the individual parts having the following lengths:
  - 500 mm (20 in)
  - 1 000 mm (40 in)
- The connection points are sealed gap-free by an O-ring.

**i Mounting instructions**

- Use fitting pliers with a plastic surface to avoid damage.
- Install the separable rods in a vertical position.
- Align the rods with each other so that the threads do not tilt.

### 6.1.3 Notes on the mechanical load of the probe

#### Lateral loading capacity (flexural strength) of rod probes

FMP53


**Rod 8 mm (0.31 in) 316L**

Flexural strength 10 Nm

**Rod 8 mm (0.31 in) 316 L separable**

Flexural strength 10 Nm

*Lateral load (bending moment) from flow conditions*

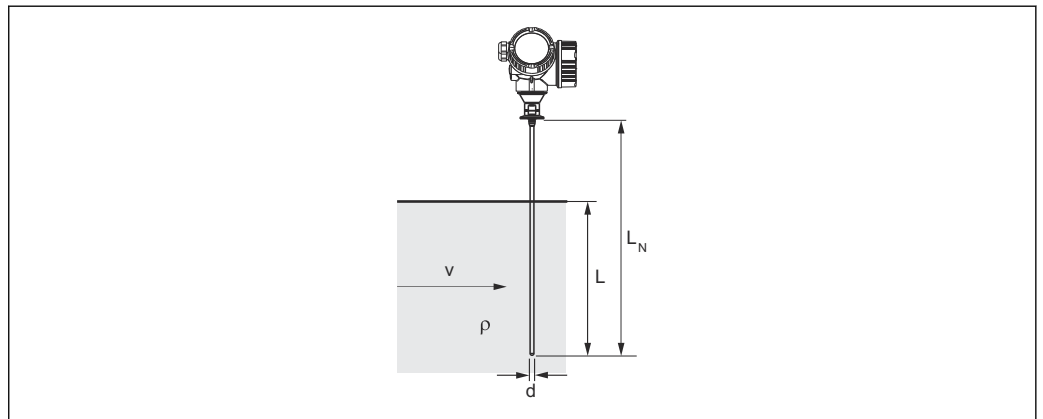

A0014175

- $\rho$  Density of the medium [kg/m<sup>3</sup>]
- $v$  Flow velocity [m/s] of the medium, perpendicular to the probe rod
- $d$  Diameter [m] of probe rod
- $L$  Level [m]
- $L_N$  Probe length [m]

The formula for calculating the bending moment  $M$  acting on the probe:


$$M = c_w \times \rho / 2 \times v^2 \times d \times L \times (L_N - 0.5 \times L)$$

With:

$c_w$ : coefficient of friction

**Sample calculation**


Coefficient of friction $c_w$	0.9 (assuming turbulent flow - high Reynolds number)
Density $\rho$ [kg/m <sup>3</sup> ]	1000 (e.g. water)
Probe diameter $d$ [m]	0.008
$L = L_N$	(unfavorable conditions)

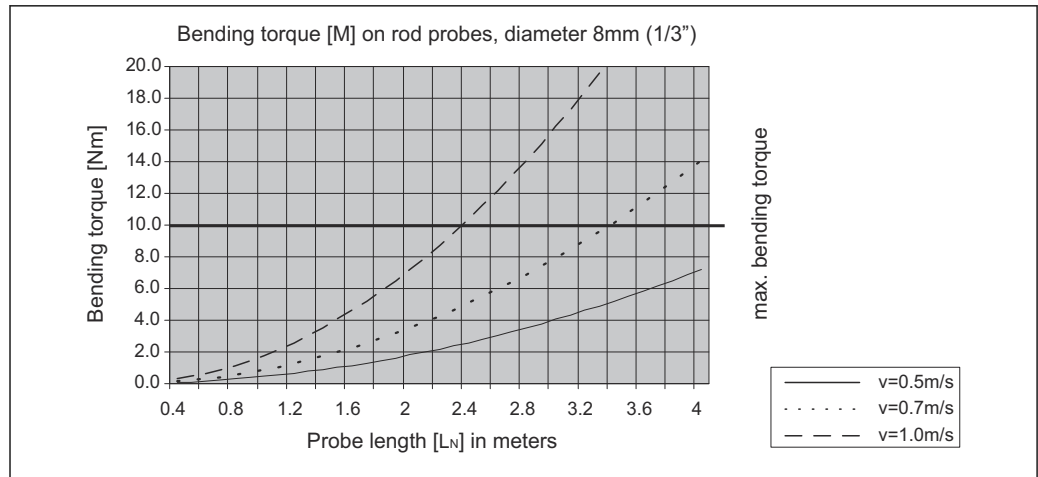

A0014182-EN

### 6.1.4 Special installation situations

#### Tanks with spray ball for probe cleaning

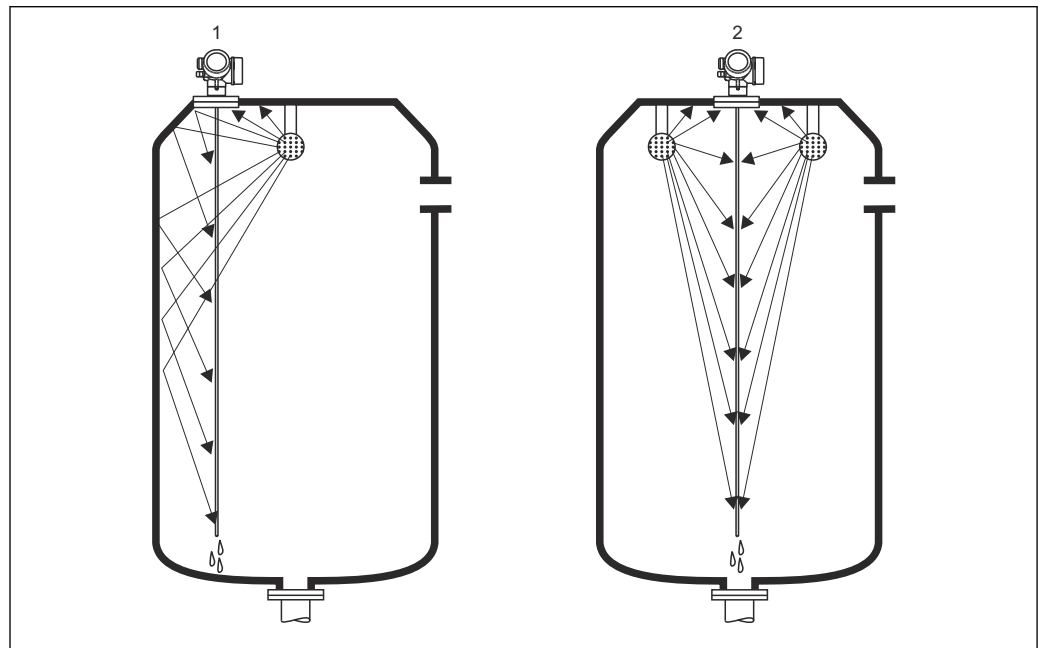

A0014131


#### *Mounting close to vessel wall*

Mounting the probe close to the vessel wall improves the cleaning effect when a spray ball is used. The cleaning jet is directed onto the probe via the vessel wall. As a result, the probe is also cleaned in places the spray ball jet would normally not reach. You only require one spray ball for this probe arrangement.

#### *Mounting in the center of the vessel*

If the probe is mounted in the center of the vessel, the use of a second spray ball may be necessary. These balls should then be mounted to the left and right of the probe.


### Mounting at an angle

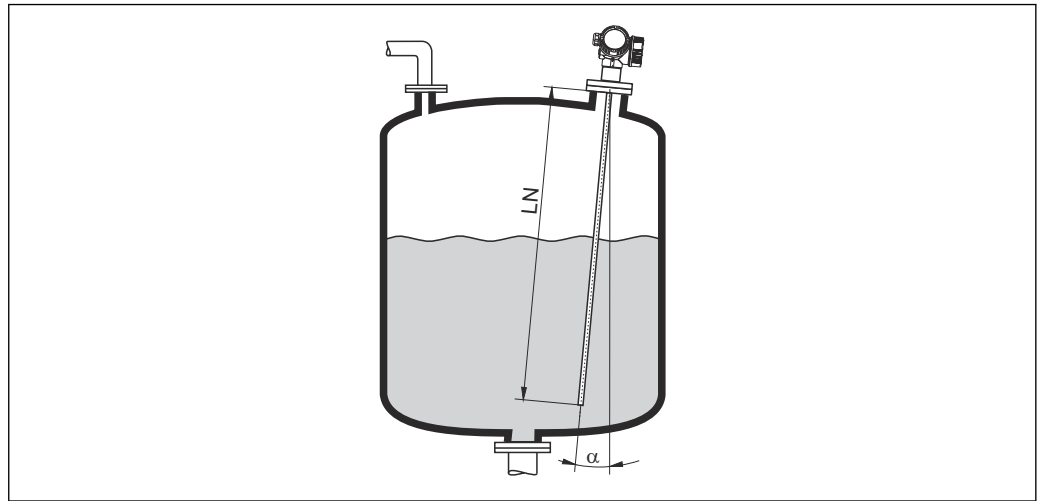

A0014145

- For mechanical reasons, the probe should be installed as vertically as possible.
- If the probe is installed at an angle, the length of the probe must be reduced depending on the angle of installation.
  - $\alpha$  5°:  $LN_{max}$ . 4 m (13.1 ft)
  - $\alpha$  10°:  $LN_{max}$ . 2 m (6.6 ft)
  - $\alpha$  30°:  $LN_{max}$ . 1 m (3.3 ft)

### Non-metal vessels

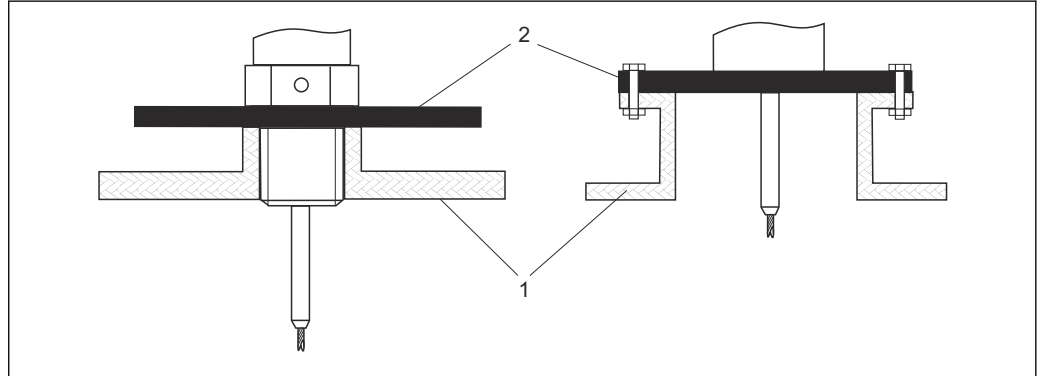


A0012527

- 1 Non-metal vessel
- 2 Metal sheet or metal flange

To ensure good measurement results when mounting on non-metal vessels, at the process connection mount a metal sheet with a diameter of at least 200 mm (8 in) at a right angle to the probe.

### Plastic and glass vessels: Mounting the probe on the outside wall

In the case of plastic and glass vessels, the probe can also be mounted on the outside wall under certain conditions.

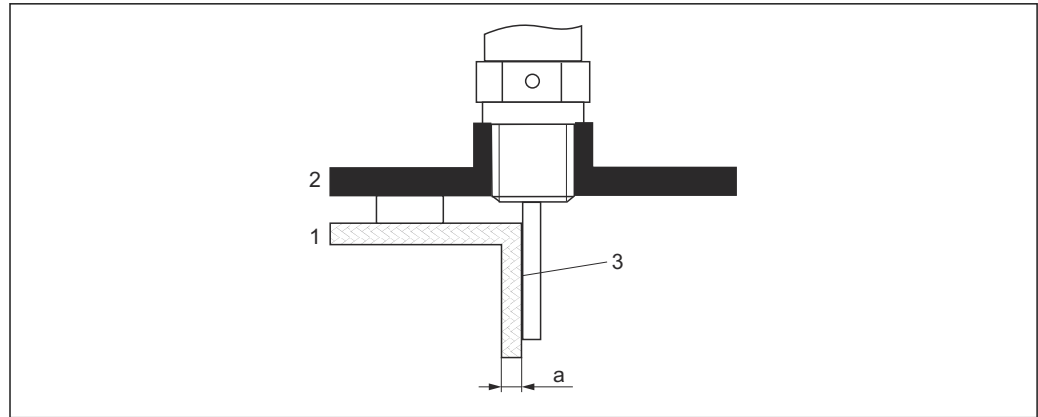

A0014150

- 1 Plastic or glass vessel
- 2 Metal plate with screw-in sleeve
- 3 No space between vessel wall and probe!

### Requirements

- Relative permittivity of medium:  $\epsilon_r > 7$
- Non-conductive vessel wall.
- Maximum wall thickness (a):
  - Plastic: < 15 mm (0.6 in)
  - Glass: < 10 mm (0.4 in)
- No metal reinforcements on the vessel

### Note the following when mounting the device:

- Mount the probe directly on the tank wall without any clearance.
- To protect against interference with the measurement, fit a plastic half pipe with a minimum diameter of 200 mm (8 in) or a similar protective unit on the probe.
- If the vessel diameter is less than 300 mm (12 in):
  - On the opposite side of the vessel, fit a grounding plate that is conductively connected to the process connection and covers around half of the vessel's circumference.
- If the vessel diameter is 300 mm (12 in) or higher:
  - At the process connection, fit a metal plate with a diameter of at least 200 mm (8 in) at a right angle to the probe (see above).

### Adjustment when mounting on the vessel exterior

When the probe is mounted on the outside of the vessel wall, the wave velocity of the signal is reduced. There are two ways to compensate for this.

### Compensation via gas phase compensation factor

The effect of the dielectric wall is comparable to the effect of a dielectric gas phase and can therefore be corrected in the same way. The correction factor is calculated as the quotient of the actual probe length  $LN$  and the probe length measured when the vessel is empty.

**i** The device determines the position of the end-of-probe signal in the differential curve. Therefore, the value of the measured probe length depends on the mapping curve. In order to obtain a more accurate value, it is advisable to determine the measured probe length manually using the envelope curve display in FieldCare.

1. Parameter Expert → Sensor → Gas phase compensation → GPC mode
  - ↳ Select **Const. GPC factor** option.
2. Parameter Expert → Sensor → Gas phase compensation → Const. GPC factor
  - ↳ Quotient: Enter "(actual probe length)/(measured probe length)".

### Compensation via the calibration parameters

If it is necessary to actually compensate for a gas phase, the gas phase compensation function is not available for the correction of external mounting. In this case, the


calibration parameters (**Empty calibration** and **Full calibration**) must be adjusted. In addition, a value that is greater than the actual probe length must be entered in the **Present probe length** parameter. In all three cases, the correction factor is the quotient of the probe length measured when the vessel is empty and the actual probe LN.

**i** The device searches for the end-of-probe signal in the differential curve. Therefore, the value of the measured probe length depends on the mapping curve. In order to obtain a more accurate value, it is advisable to determine the measured probe length manually using the envelope curve display in FieldCare.

1. Parameter Setup → Empty calibration
  - ↳ Increase the parameter value by the factor "(measured probe length)/(actual probe length)".
2. Parameter Setup → Full calibration
  - ↳ Increase the parameter value by the factor "(measured probe length)/(actual probe length)".
3. Parameter Setup → Advanced setup → Probe settings → Probe length correction → Confirm probe length
  - ↳ Select **Manual input** option.
4. Parameter Setup → Advanced setup → Probe settings → Probe length correction → Present probe length
  - ↳ Enter the measured probe length.

#### Vessel with thermal insulation

**i** If process temperatures are high, the device must be included in normal vessel insulation (1) in order to prevent the electronics heating up as a result of thermal radiation or convection. The insulation may not go beyond the points labeled "MAX" in the drawings.

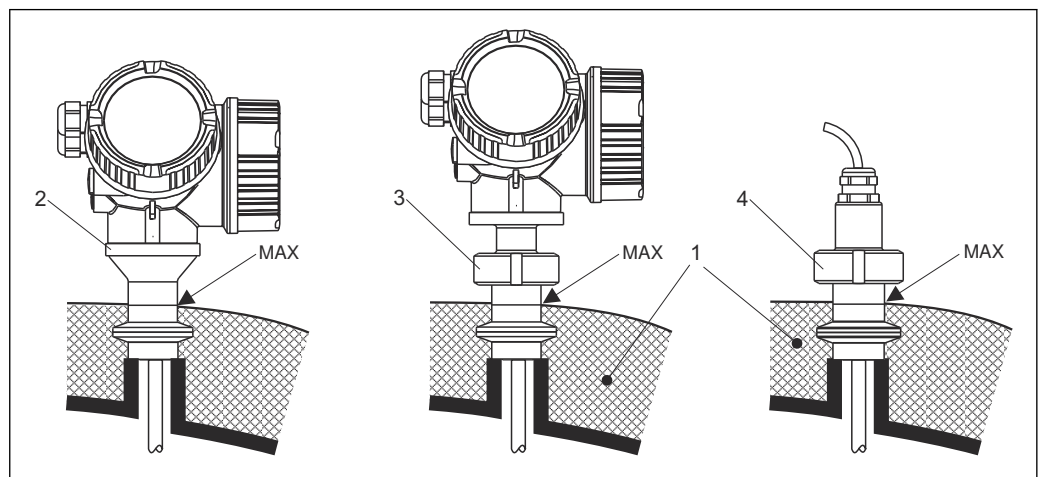


**4** Hygienic process connections

- 1 Vessel insulation
- 2 Compact device
- 3 Compact device, detachable
- 4 Sensor, remote

## 6.2 Mounting the device

### 6.2.1 Tool list

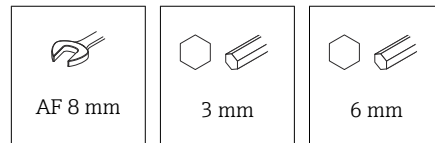

- To shorten rope probes: use a saw or bolt cutters.
- To shorten rod or coaxial probes: use a saw.
- For flanges and other process connections: use an appropriate mounting tool.

### 6.2.2 Mounting the "Sensor, remote" version

**i** This section only applies for devices with the version "Probe design" = "Sensor, remote" (feature 600, version MB or MC).

The following is included in the delivery with the version "Probe design" = "Remote":

- The probe with process connection and connecting cable (3 m (9 ft) or 6 m (18 ft))
- The electronics housing
- The mounting bracket for mounting the electronics housing on a wall or post

**i** The connecting cable is connected to the probe upon delivery.

**i** The probe with the connection cable and the electronics are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

#### **CAUTION**


**Mechanical stress can damage the plug of the connection cable or cause it to become loose.**

- ▶ Mount the probe and the electronics housing securely before connecting the connecting cable.
- ▶ Lay the connecting cable in such a way that it is not exposed to mechanical stress.  
Minimum bending radius: 50 mm (2 in).
- ▶ Torque of the union nut at the plug on the electronics side: 6 Nm
- ▶ Torque of the union nut at the plug on the sensor side: 20 Nm

**i** In the event of strong vibrations, a locking compound, e.g. Loctite 243, can also be used on the plug on the electronics side.



**Mounting the electronics housing**

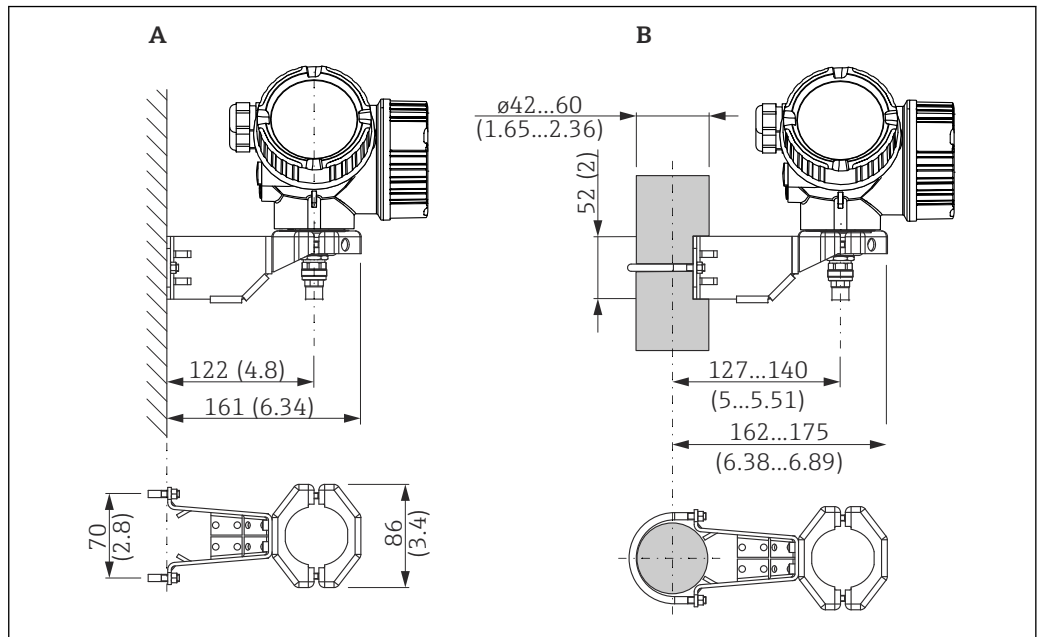



A0034793

5 Mounting the electronics housing with the mounting bracket. Unit of measurement mm (in)

A Wall mounting

B Post mounting


**Connecting the connecting cable**

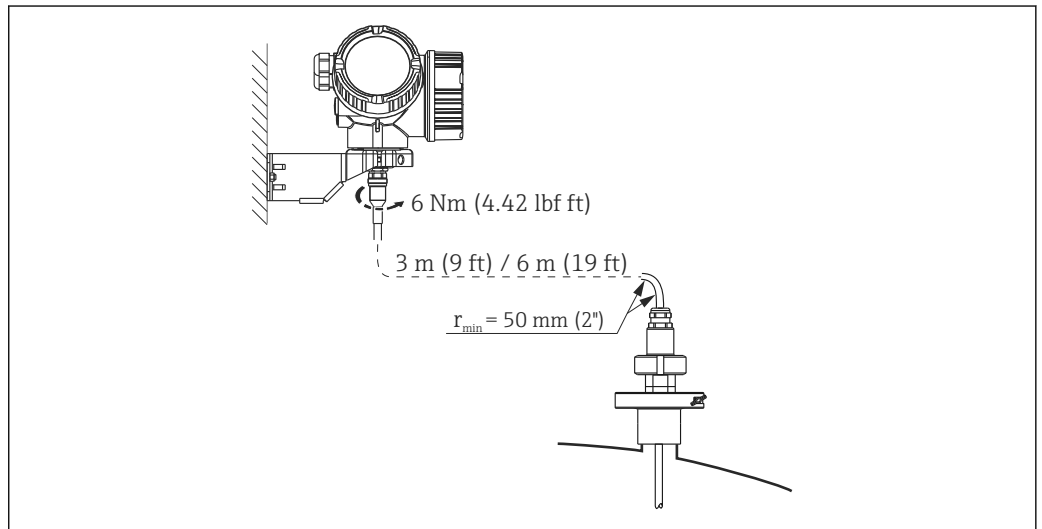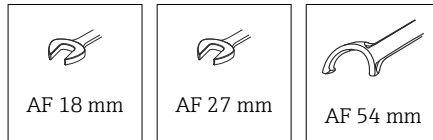

A0015103

**6.2.3 Turning the transmitter housing**

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

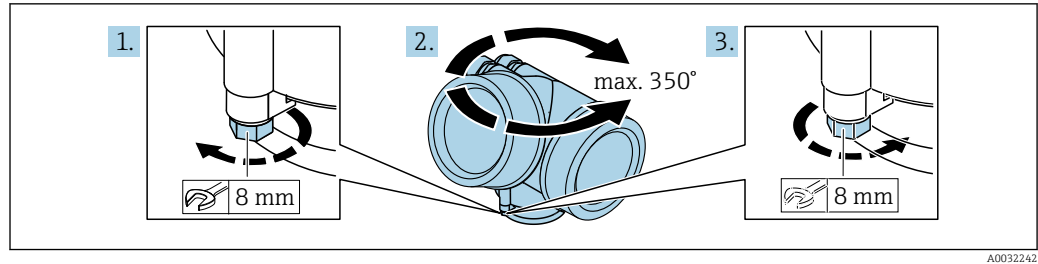


A0032242

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housings; 2.5 Nm for aluminum or stainless steel housing).

## 6.2.4 Turning the display


### Opening the cover

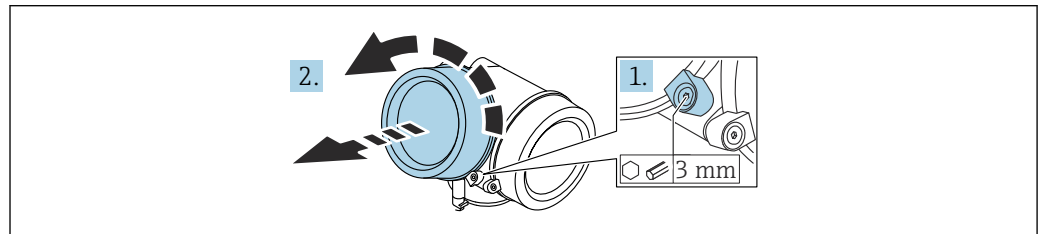

A0021430

1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90° counterclockwise.
2. Unscrew the electronics compartment cover and check the cover seal; replace it if necessary.


### Turning the display module

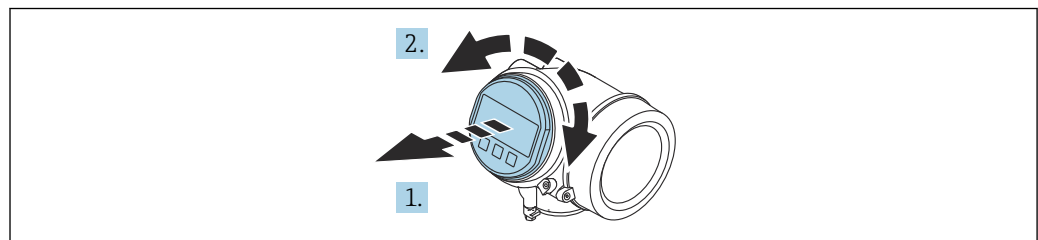

A0036401

1. Pull out the display module with a gentle rotational movement.
2. Turn the display module to the desired position: Max.  $8 \times 45^\circ$  in each direction.
3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

### Closing the cover of the electronics compartment

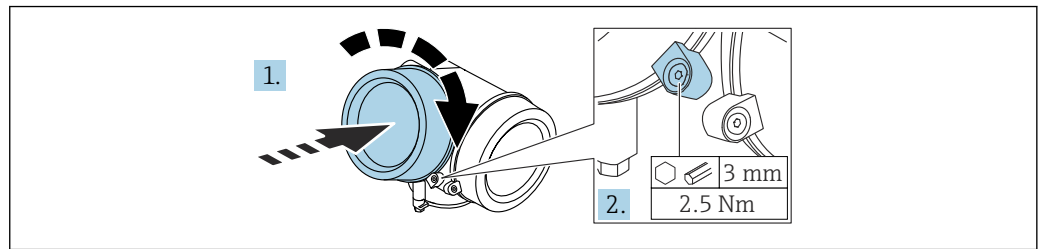

1. Screw down the cover of the electronics compartment.
2. Turn the securing clamp 90 ° in the clockwise direction and, using an Allen key (3 mm), tighten the screw of the securing clamp on the electronics compartment cover with 2.5 Nm.

### 6.3 Post-mounting check

- Is the device free from damage (visual inspection)?
- Are the measuring point identification and labeling correct (visual inspection)?
- Is the measuring device protected against precipitation and sunlight?
- Are the securing screws and cover lock tightened securely?
- Does the measuring device comply with the measuring point specifications?

For example:


- Process temperature
- Process pressure
- Ambient temperature
- Measuring range

## 7 Electrical connection

### 7.1 Connecting requirements

#### 7.1.1 Terminal assignment

##### Terminal assignment, 4-wire: 4 to 20 mA HART (90 to 253 V<sub>AC</sub>)

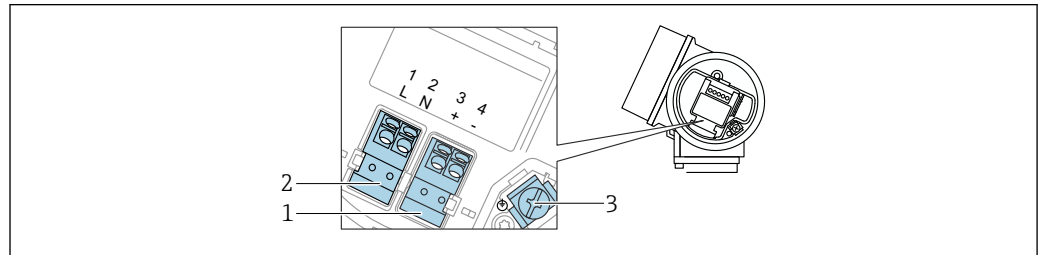

A0036519

##### 6 Terminal assignment, 4-wire: 4 to 20 mA HART (90 to 253 V<sub>AC</sub>)


- 1 Connection 4 to 20 mA HART (active): terminals 3 and 4
- 2 Power supply connection: terminals 1 and 2
- 3 Terminal for cable shield

#### **CAUTION**

##### To ensure electrical safety:

- ▶ Do not disconnect the protective ground connection.
  - ▶ Disconnect the device from the supply voltage before disconnecting the protective ground.
- i** Connect protective ground to the inner ground terminal (3) before connecting the power supply. If necessary, connect the potential matching line to the outer ground terminal.
  - i** In order to ensure electromagnetic compatibility (EMC): do **not** ground the device exclusively via the protective ground conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
  - i** An easily accessible power switch must be installed in the proximity of the device. The switch must be marked as a disconnecter for the device (61010IEC/).

### Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

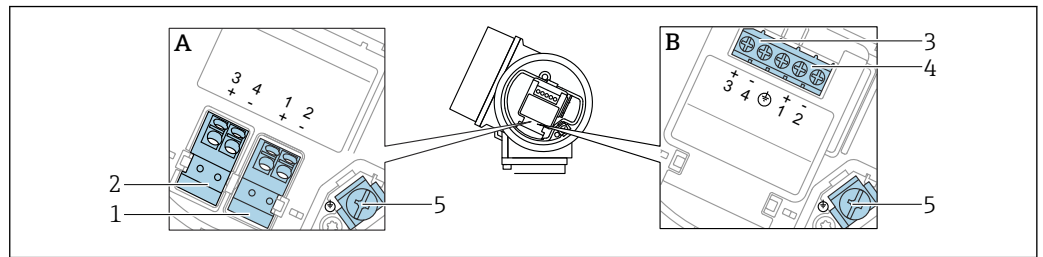

7 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection, PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection


2 Connection, switch output (open collector): terminals 3 and 4, without integrated overvoltage protection

3 Connection, switch output (open collector): terminals 3 and 4, with integrated overvoltage protection

4 Connection, PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable shield

### Block view PROFIBUS PA / FOUNDATION Fieldbus

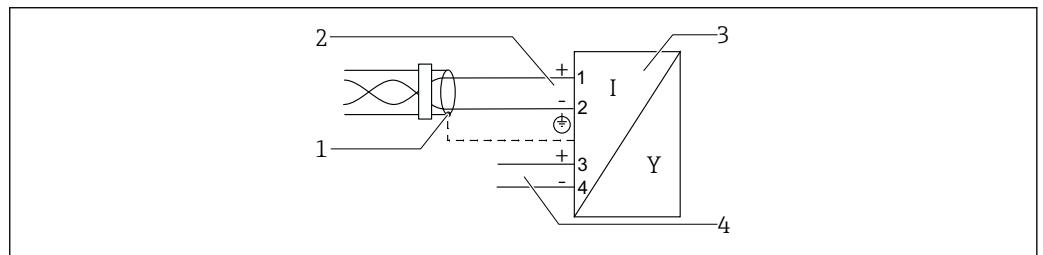

8 Block view PROFIBUS PA / FOUNDATION Fieldbus

1 Cable screen; observe cable specification

2 Connection PROFIBUS PA / FOUNDATION Fieldbus

3 Measuring instrument

4 Switch output (open collector)

## 7.1.2 Cable specification

### ■ Devices without integrated overvoltage protection

Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

### ■ Devices with integrated overvoltage protection

Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)

■ For ambient temperature  $T_U \geq 60 \text{ °C}$  (140 °F): use cable for temperature  $T_U + 20 \text{ K}$ .


## PROFIBUS

Use a twisted, screened two-wire cable, preferably cable type A.

**i** For further information on the cable specifications, see Operating Instructions BA00034S "PROFIBUS DP/PA: Guidelines for planning and commissioning", PNO Guideline 2.092 "PROFIBUS PA User and Installation Guideline" and IEC 61158-2 (MBP).

## 7.1.3 Device plug

**i** In the case of the device versions with a plug, the housing does not need to be opened to connect the signal cable.

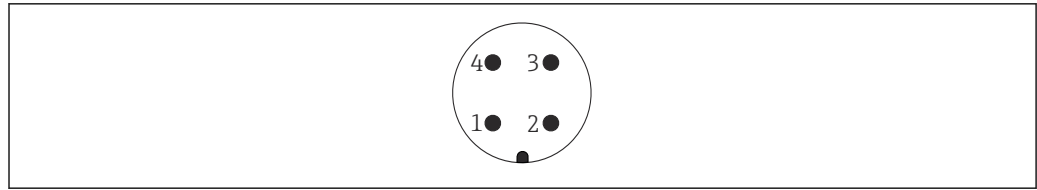

A0011175

9 Pin assignment of M12 plug

- 1 Signal +
- 2 Not assigned
- 3 Signal -
- 4 Ground

## 7.1.4 Supply voltage

### PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage
<b>E:</b> 2-wire; FOUNDATION Fieldbus, switch output <b>G:</b> 2-wire; PROFIBUS PA, switch output	<ul style="list-style-type: none"> <li>■ Non-hazardous</li> <li>■ Ex nA</li> <li>■ Ex nA[ia]</li> <li>■ Ex ic</li> <li>■ Ex ic[ia]</li> <li>■ Ex d[ia] / XP</li> <li>■ Ex ta / DIP</li> <li>■ CSA GP</li> </ul>	9 to 32 V <sup>3)</sup>
	<ul style="list-style-type: none"> <li>■ Ex ia / IS</li> <li>■ Ex ia + Ex d[ia] / IS + XP</li> </ul>	9 to 30 V <sup>3)</sup>

- 1) Feature 020 in the product structure
- 2) Feature 010 in the product structure
- 3) Input voltages up to 35 V do not damage the device.

Polarity-dependent	Yes
FISCO/FNICO compliant according to IEC 60079-27	Yes

## 7.1.5 Overvoltage protection

If the device is intended to be used for level measurement of flammable liquids which requires overvoltage protection in accordance with DIN EN 60079-14, test standard 60060-1 (10 kA, pulse  $\frac{8}{20}$   $\mu$ s): use the overvoltage protection module.

### Integrated overvoltage protection module


An integrated overvoltage protection module is available for the HART 2-wire devices as well as for PROFIBUS PA and FOUNDATION Fieldbus.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Resistance per channel	Maximum $2 \times 0.5 \Omega$
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacity at 1 MHz	< 1.5 pF
Nominal discharge current (8/20 $\mu$ s)	10 kA

### External overvoltage protection module

The HAW562 or HAW569 for example from Endress+Hauser are suitable options for external overvoltage protection.

-  More information is provided in the following documents:
  - HAW562: TI01012K
  - HAW569: TI01013K

## 7.2 Connecting the device

### WARNING


#### Explosion hazard!

- ▶ Comply with applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

#### Required tools/accessories:

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


### 7.2.1 Opening cover

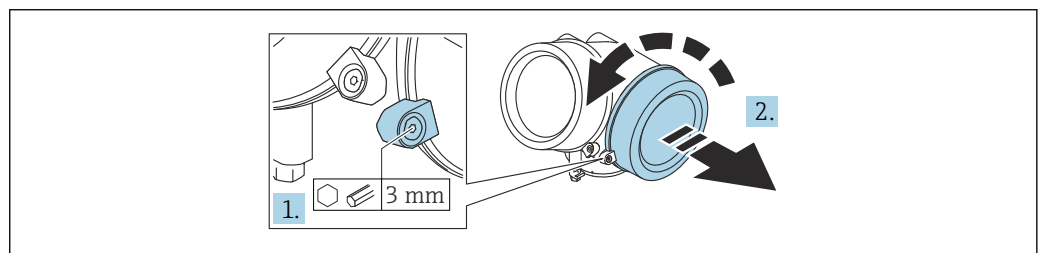

A0021490

1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90° counterclockwise.
2. Unscrew the connection compartment cover and check the cover seal; replace it if necessary.

### 7.2.2 Connecting

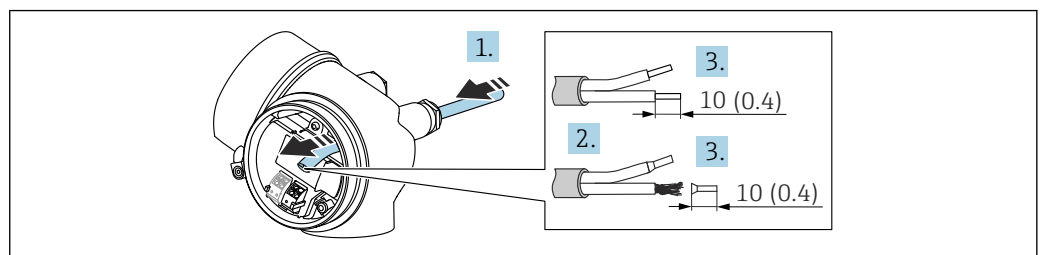


A0036418

 10 Unit: mm (in)

1. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.

2. Remove the cable sheath.
3. Strip the cable ends 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
4. Firmly tighten the cable glands.
5. Connect the cable according to the terminal assignment.

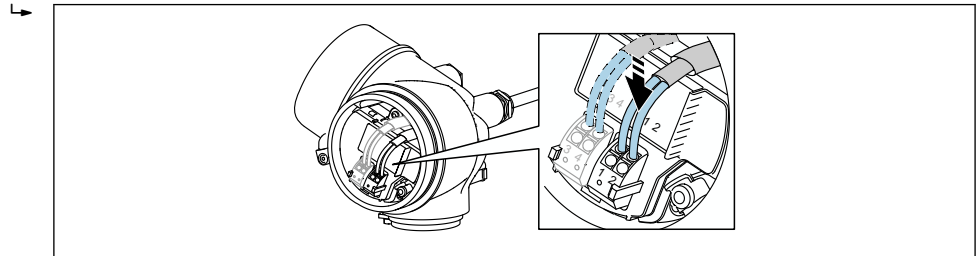


A0034682

6. If using shielded cables: Connect the cable shield to the ground terminal.

### 7.2.3 Plug-in spring-force terminals

The electrical connection of device versions without an integrated overvoltage protection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

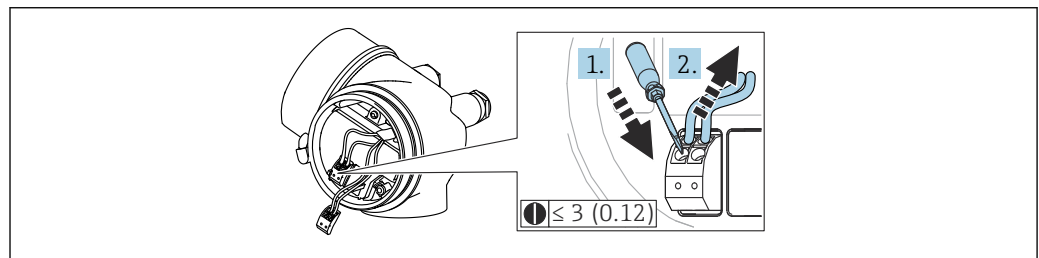


A0013661

11 Unit: mm (in)

To remove the cable from the terminal again:

1. Use a flat-blade screwdriver  $\leq 3$  mm (0.12 in) to press down on the slot between the two terminal holes.
2. Simultaneously pull the cable end out of the terminal.

### 7.2.4 Closing the cover of the connection compartment

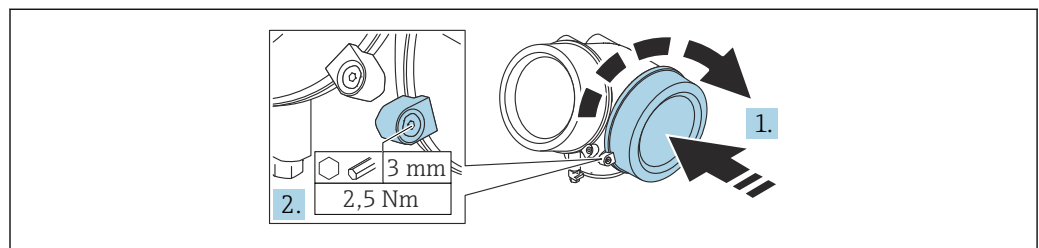

A0021491

1. Screw down the cover of the connection compartment.
2. Turn the securing clamp  $90^\circ$  in the clockwise direction and, using an Allen key (3 mm), tighten the screw of the securing clamp on the connection compartment cover with 2.5 Nm.





### 7.3 Post-connection check

- Is the device or cable undamaged (visual inspection)?
- Do the cables used comply with the requirements?
- Do the mounted cables have adequate strain relief?
- Are all the cable glands installed, firmly tightened and leak-tight?
- Does the supply voltage match the specifications on the nameplate?
- Is the terminal assignment correct?
- If necessary, has a protective ground connection been established?
- If supply voltage is present, is the device ready for operation and do values appear on the display module?
- Are all the housing covers installed and tightened?
- Is the securing clamp firmly tightened?


## 8 Operation options

### 8.1 Overview of operation options


#### 8.1.1 Access to operating menu via local display

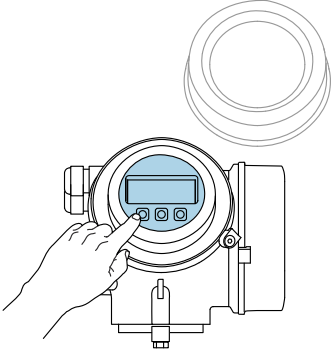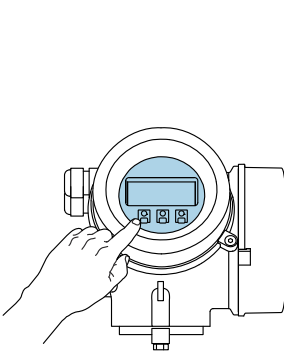Operation with	Pushbuttons	Touch control
Order code for "Display; operation"	Option C "SD02"	Option E "SD03"
	 A0036312	 A0036313
Display elements	4-line display	4-line display White background lighting; switches to red in event of device errors
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
Operating elements	Onsite operation with 3 pushbuttons (⊕, ⊖, ↻)	External operation via touch control; 3 optical keys: ⊕, ⊖, ↻
	Operating elements also accessible in various hazardous areas	
Additional functionality	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

#### Operation with remote display and operating module FHX50

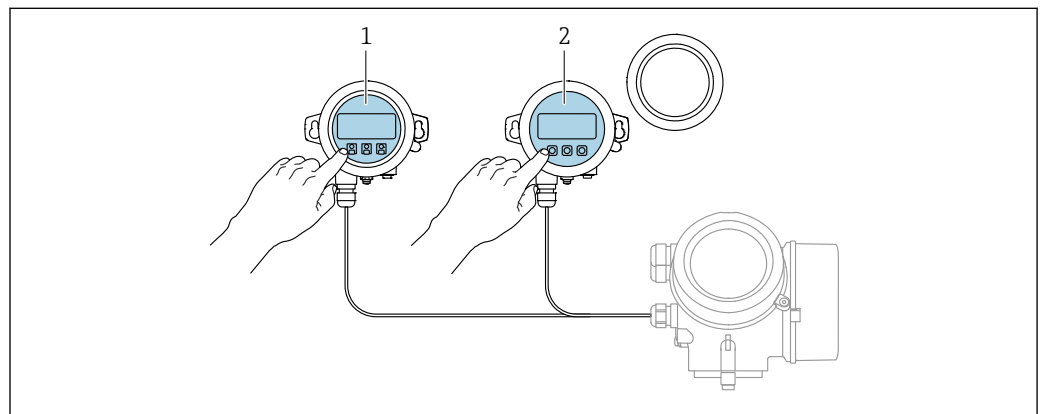


A0036314

 12 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

### 8.1.2 Access to the operating menu via the operating tool


#### Via PROFIBUS PA protocol

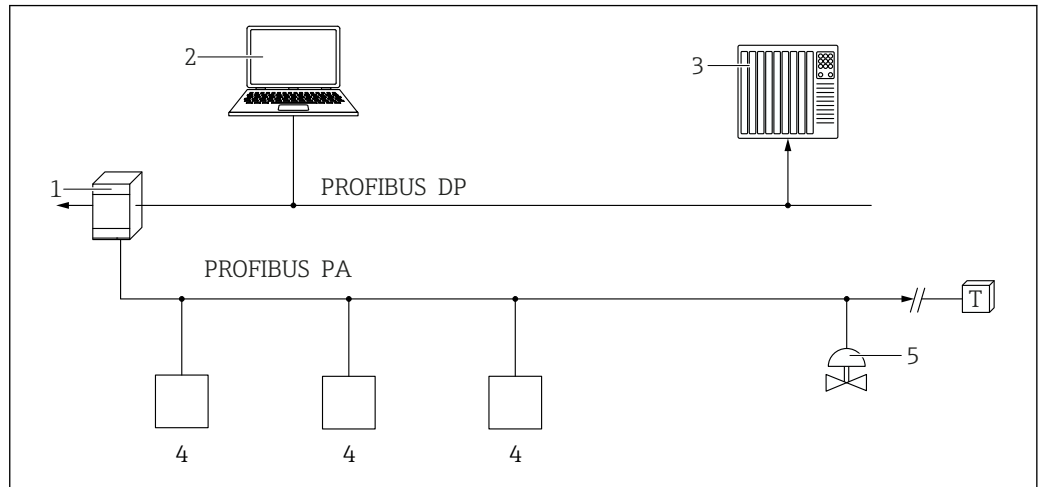

A0050944

- 1 Segment coupler
- 2 Computer with PROFibus and operating tool (e.g. DeviceCare/FieldCare )
- 3 PLC (programmable logic controller)
- 4 Transmitter
- 5 Additional functions (valves etc.)

#### Via service interface (CDI)

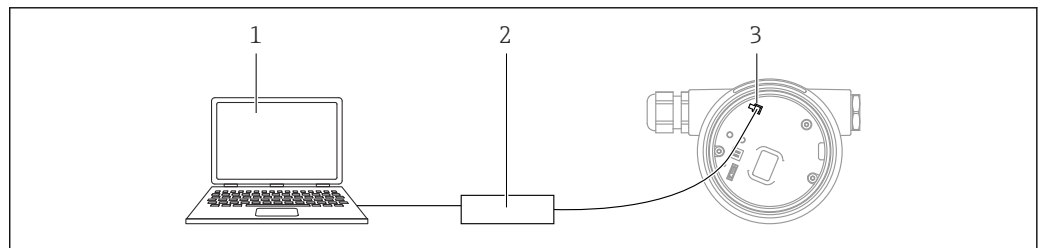


A0039148

- 1 Computer with FieldCare/DeviceCare operating tool
- 2 Commubox
- 3 Service interface (CDI) of the measuring instrument (= Endress+Hauser Common Data Interface)

#### Operation via Bluetooth® wireless technology

##### Requirements

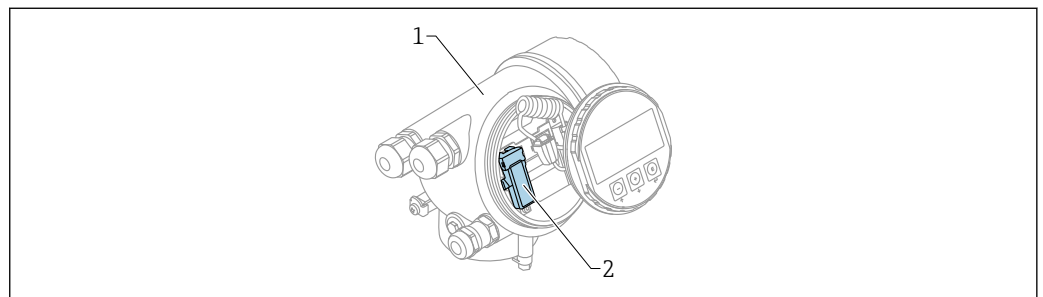


A0036790

- 13 Device with Bluetooth module
- 1 Electronics housing of the device
- 2 Bluetooth module

This operation option is only available for devices with Bluetooth module. There are the following options:

- The device has been ordered with a Bluetooth module:  
Feature 610 "Accessory Mounted", option NF "Bluetooth"
- The Bluetooth module has been ordered as an accessory (ordering number: 71377355) and has been mounted. See Special Documentation SD02252F.

Operation via SmartBlue (app)

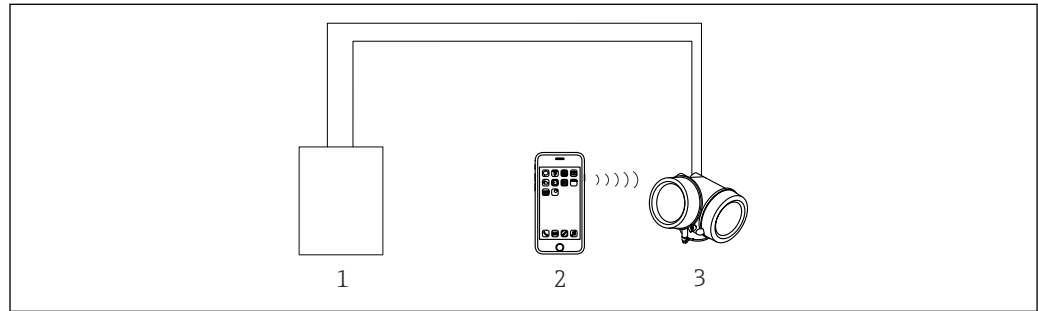

14 Operation via SmartBlue (app)

- 1 Transmitter power supply unit
- 2 Smartphone / tablet with SmartBlue (app)
- 3 Transmitter with Bluetooth module

## 8.2 Structure and function of the operating menu


### 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the local display
<b>Commissioning</b> <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
<b>Setup</b>	Parameter 1 ... Parameter N	Once values have been set for these parameters, the measurement should usually be fully configured.
	<b>Advanced setup</b>	Contains additional submenus and parameters: <ul style="list-style-type: none"> <li>■ For more accurate configuration of the measurement (adaptation to special measuring conditions).</li> <li>■ For converting the measured value (scaling, linearization).</li> <li>■ For scaling the output signal.</li> </ul>
<b>Diagnostics</b>	<b>Diagnostic list</b>	Contains up to 5 currently active error messages.
	<b>Event logbook</b> <sup>3)</sup>	Contains the last 20 messages (which are no longer active).
	<b>Device information</b>	Contains information for identifying the device.
	<b>Measured values</b>	Contains all current measured values.
	<b>Data logging</b>	Contains the history of the individual measured values

Menu	Submenu / parameter	Meaning
	<b>Simulation</b>	Is used to simulate measured values or output values.
	<b>Device check</b>	Contains all parameters needed to check the measurement capability of the device.
	<b>Heartbeat<sup>4)</sup></b>	Contains all the wizards for the <b>Heartbeat Verification</b> and <b>Heartbeat Monitoring</b> application packages.
<b>Expert<sup>5)</sup></b> Contains all the parameters of the device (including those already contained in one of the other menus). This menu is organized according to the function blocks of the device.  The parameters of the Expert menu are described in: GPO1001F (PROFIBUS PA)	<b>System</b>	Contains all higher-level device parameters that do not affect measurement or measured value communication.
	<b>Sensor</b>	Contains all parameters for configuring the measurement.
	<b>Output</b>	Contains all parameters to configure the switch output (PFS)
	<b>Communication</b>	Contains all parameters needed to configure the digital communication interface.
	<b>Diagnostics</b>	Contains all parameters needed to detect and analyze operational errors.

- 1) If you are operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) Only available if operating via the local display
- 4) Only available if operating via DeviceCare or FieldCare
- 5) When you call up the "Expert" menu, you are always asked for an access code. If a customer-specific access code has not been defined, "0000" must be entered.


### 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  38.

*Access authorization to parameters*

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.


 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (if operating via the local display) or the **Access status tooling** parameter (if operating via an operating tool).

### 8.2.3 Data access - Security

#### Write protection via access code

Using the device-specific access code, the parameters for the measuring instrument configuration are write-protected and their values can no longer be changed via local operation.

#### Defining the access code via the local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the numeric code in the **Confirm access code** parameter to confirm it.
  - ↳ The -symbol appears in front of all write-protected parameters.



#### Defining the access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
  - ↳ Write protection is active.


#### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.



The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

-  If write access is activated via an access code, it can be only be deactivated again via this access code.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

#### Disabling write protection via access code

If the  symbol appears in front of a parameter on the local display, the parameter is write-protected by a device-specific access code and its value cannot currently be changed via the local display.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
  - ↳ The  symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

#### Deactivation of the write protection via access code

##### Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.

3. Repeat **0000** in the **Confirm access code** parameter to confirm.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

**Via an operating tool (e.g. FieldCare)**


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

**Write protection via write protection switch**

Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display" parameter**.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFIBUS PA protocol
- Via PROFIBUS DP protocol

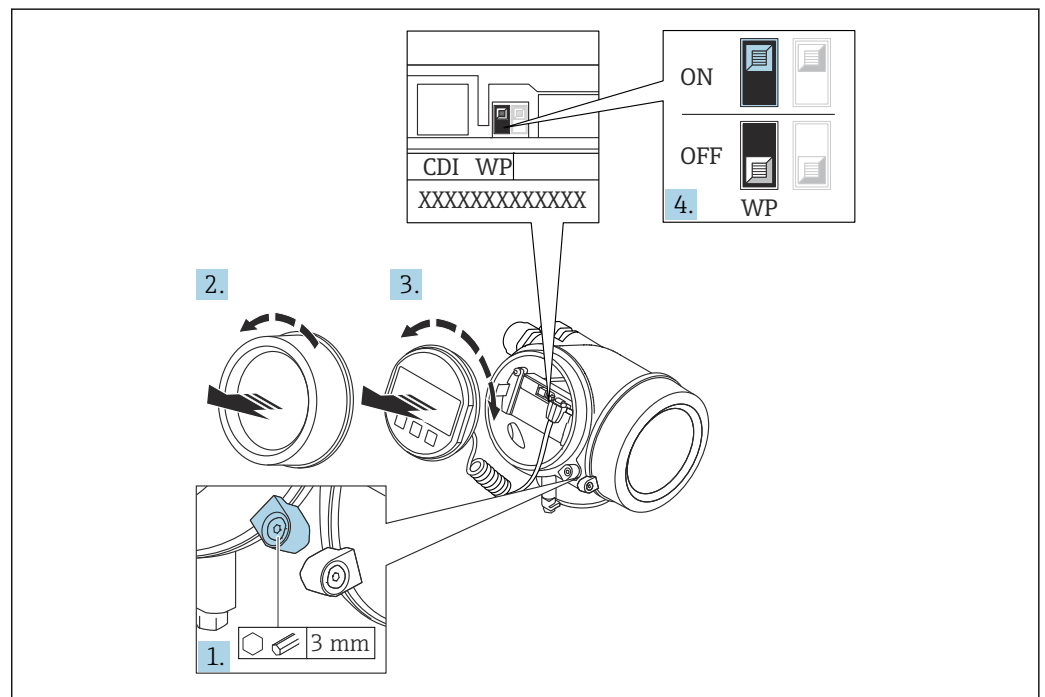


1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.


3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.

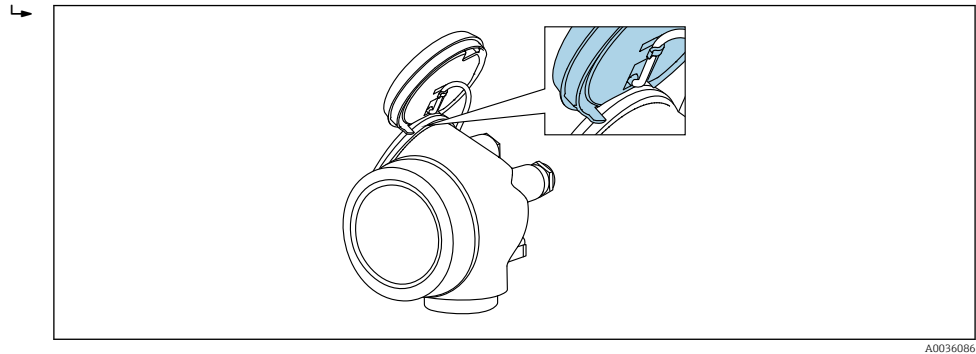


A0036086

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition, on the local display the  symbol appears in front of the parameters in the header of the operational display and in the navigation view.

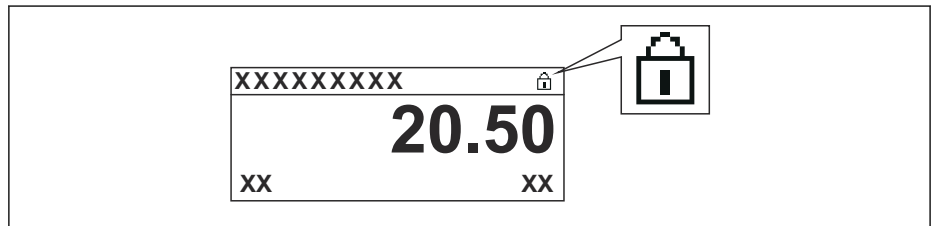

A0015870

If hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the  symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reassemble the transmitter in the reverse order.

### Enabling and disabling the keypad lock

Access to the entire operating menu via local operation can be locked via the keypad lock. When access is locked, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via a context menu.

#### Switching on the keypad lock


##### SD03 display module only

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.




### Switching on the keypad lock manually

1. The device is in the measured value display.  
Press  for at least 2 seconds.
  - ↳ A context menu appears.
2. Select the **Keylock on** option in the context menu.
  - ↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

### Switching off the keypad lock

1. The keypad lock is switched on.  
Press  for at least 2 seconds.
  - ↳ A context menu appears.
2. Select the **Keylock off** option in the context menu.
  - ↳ The keypad lock is switched off.


### Bluetooth® wireless technology

**Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute**

- The device is not visible via *Bluetooth®* wireless technology without the SmartBlue app
- Only one point-to-point connection is established between **one** sensor and **one** smartphone or tablet

## 8.3 Display and operating module

### 8.3.1 Display format

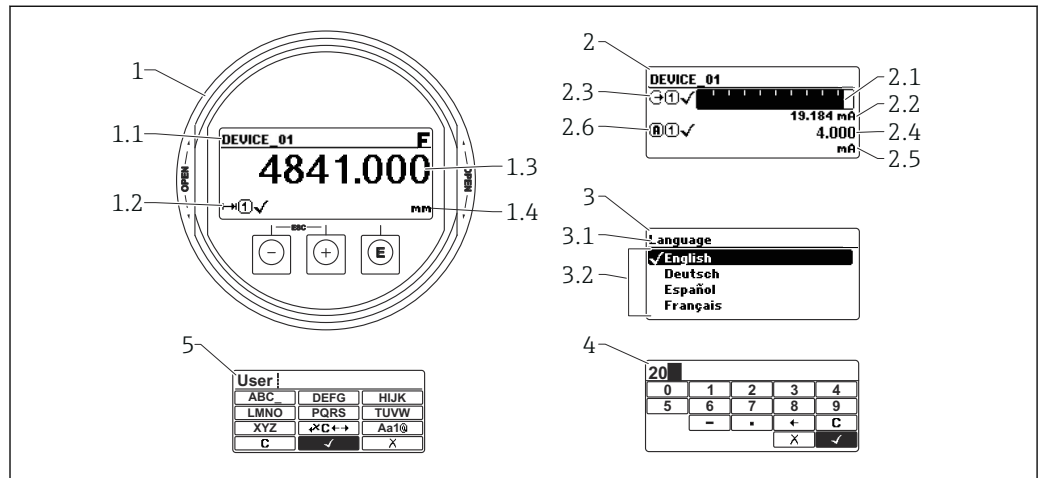





A0012635

15 Display format on the display and operating module

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (bar graph + 1 value)
  - 2.1 Bargraph for measured value 1
  - 2.2 Measured value 1 (including unit)
  - 2.3 Measured value symbols for measured value 1
  - 2.4 Measured value 2
  - 2.5 Unit for measured value 2
  - 2.6 Measured value symbols for measured value 2
- 3 Parameter display (here: parameter with drop-down list)
  - 3.1 Header containing parameter name and error symbol (if an error is active)
  - 3.2 Drop-down list;  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



### Display symbols for the submenus

Symbol	Meaning
 <small>A0018367</small>	<b>Display/operat.</b> Is displayed: <ul style="list-style-type: none"> <li>▪ In the main menu next to the "Display/operat." selection</li> <li>▪ In the header on the left in the "Display/operat." menu</li> </ul>
 <small>A0018364</small>	<b>Setup</b> Is displayed: <ul style="list-style-type: none"> <li>▪ In the main menu next to the "Setup" selection</li> <li>▪ In the header on the left in the "Setup" menu</li> </ul>
 <small>A0018365</small>	<b>Expert</b> Is displayed: <ul style="list-style-type: none"> <li>▪ In the main menu next to the "Expert" selection</li> <li>▪ In the header on the left in the "Expert" menu</li> </ul>
 <small>A0018366</small>	<b>Diagnostics</b> Is displayed: <ul style="list-style-type: none"> <li>▪ In the main menu next to the "Diagnostics" selection</li> <li>▪ In the header on the left in the "Diagnostics" menu</li> </ul>


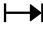








### Status signals

Symbol	Meaning
<b>F</b> <small>A0032902</small>	<b>"Failure"</b> A device error has occurred. The measured value is no longer valid.
<b>C</b> <small>A0032903</small>	<b>"Function check"</b> The device is in the service mode (e.g. during a simulation).
<b>S</b> <small>A0032904</small>	<b>"Out of specification"</b> The device is operated: <ul style="list-style-type: none"> <li>▪ Outside its technical specifications (e.g. during startup or cleaning)</li> <li>▪ Outside the configuration performed by the user (e.g. level outside the configured range)</li> </ul>
<b>M</b> <small>A0032905</small>	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.



### Display symbols for locking status





Symbol	Meaning
 <small>A0013148</small>	<b>Read-only parameter</b> The parameter shown is only for display purposes and cannot be edited.
 <small>A0013150</small>	<b>Device locked</b> <ul style="list-style-type: none"> <li>▪ In front of a parameter name: The device is locked via software and/or hardware.</li> <li>▪ In the header of the measured value screen: The device is locked via hardware.</li> </ul>

### Measured value symbols


Symbol	Meaning
<b>Measured values</b>	
 A0032892	Level
 A0032893	Distance
 A0032908	Current output
 A0032894	Measured current
 A0032895	Terminal voltage
 A0032896	Electronics or sensor temperature
<b>Measuring channels</b>	
 A0032897	Measuring channel 1
 A0032898	Measuring channel 2
<b>Status of the measured value</b>	
 A0018361	<b>"Alarm" status</b> Measurement is interrupted. The output assumes the defined alarm condition. A diagnostic message is generated.
 A0018360	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### 8.3.2 Operating elements

Operating key	Meaning
 A0018330	<b>Minus key</b> <i>In a menu, submenu</i> Moves the selection bar upwards in a picklist. <i>In the text and numeric editor</i> In the input screen, moves the selection bar to the left (backwards).
 A0018329	<b>Plus key</b> <i>In a menu, submenu</i> Moves the selection bar downwards in a picklist. <i>In the text and numeric editor</i> In the input screen, moves the selection bar to the right (forwards).

Operating key	Meaning
 <small>A0018328</small>	<p><b>Enter key</b></p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly opens the operating menu.</li> <li>Pressing the key for 2 s opens the context menu.</li> </ul> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly: Opens the selected menu, submenu or parameter.</li> <li>Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.</li> </ul> <p><i>In the text and numeric editor</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly:                             <ul style="list-style-type: none"> <li>Opens the selected group.</li> <li>Carries out the selected action.</li> </ul> </li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
 <small>A0032909</small>	<p><b>Escape key combination (press keys simultaneously)</b></p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly:                             <ul style="list-style-type: none"> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the key for 2 s returns you to the measured value display ("home position").</li> </ul> <p><i>In the text and numeric editor</i></p> <p>Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p><b>Minus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p><b>Plus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Increases the contrast (darker setting).</p>



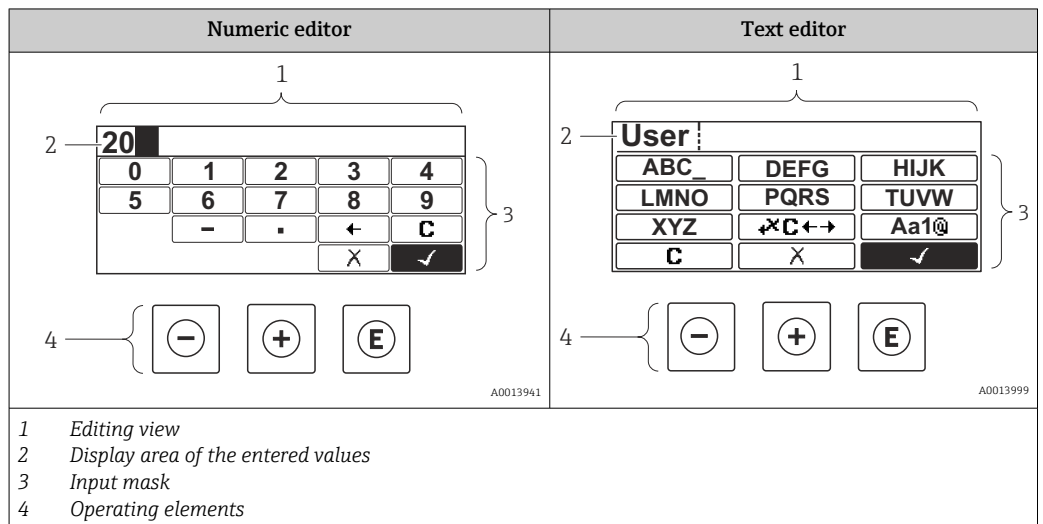




### 8.3.3 Entering numbers and text









#### Input mask

The following input and operating symbols are available in the input mask of the numeric and text editor:

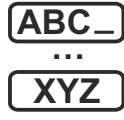

*Numeric editor*



Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9
 <small>A0016619</small>	Inserts decimal separator at the cursor position.
 <small>A0016620</small>	Inserts minus sign at the cursor position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

*Text editor*

Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> <li>▪ Between upper-case and lower-case letters</li> <li>▪ For entering numbers</li> <li>▪ For entering special characters</li> </ul>
 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

*Text correction under *

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.

 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.


### 8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Envelope curve
- Keylock on



#### Calling up and closing the context menu

The user is in the operational display.

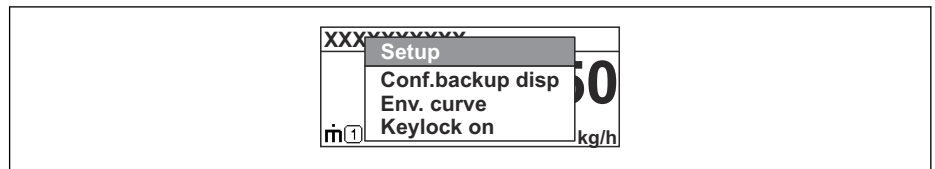

1. Press  for 2 s.
  - ↳ The context menu opens.



A0037872


2. Press  +  simultaneously.
  - ↳ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
  - ↳ The selected menu opens.

### 8.3.5 Envelope curve display on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be shown on the display and operating module:

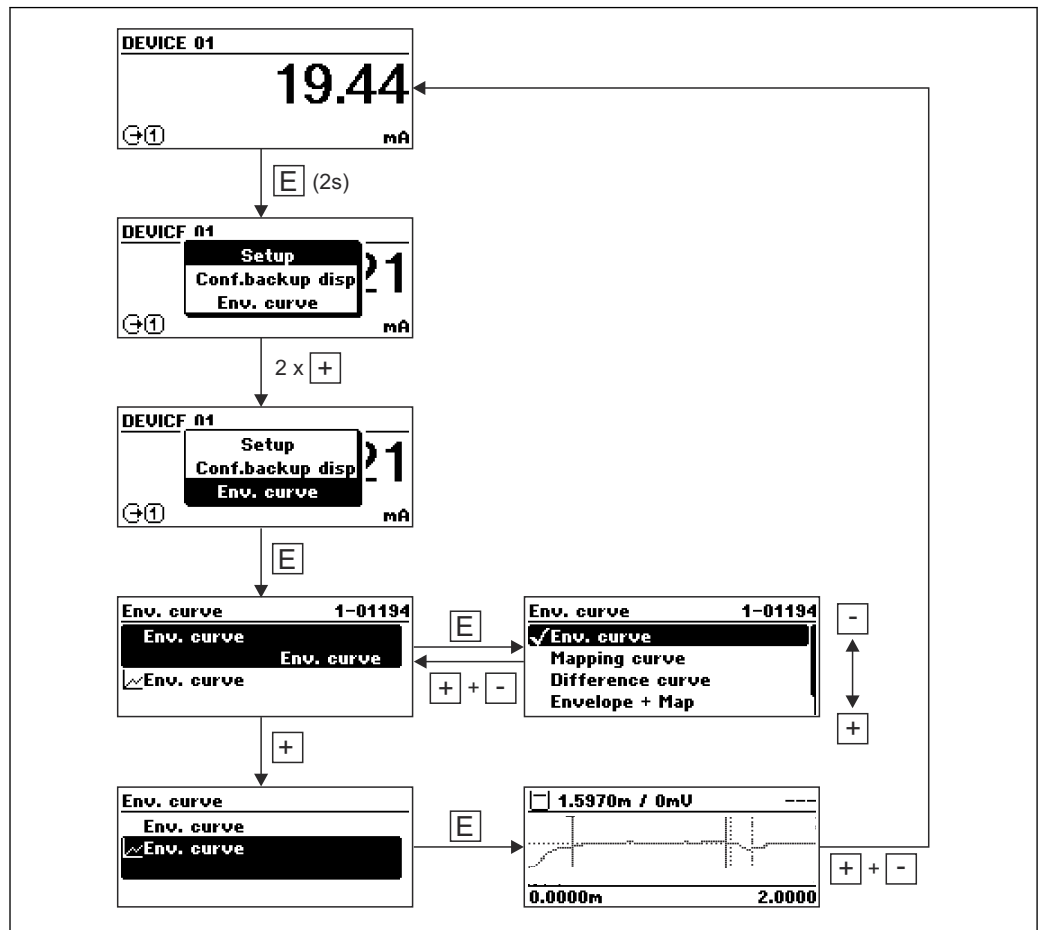

A0014277




## 9 System integration

### 9.1 Overview of device master file (GSD)

Manufacturer ID	17 (0x11)
Ident number	0x1558
Profile version	3.02
GSD file	Information and files available at:
GSD file version	<ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.profibus.org">www.profibus.org</a></li> </ul>

### 9.2 Setting the device address

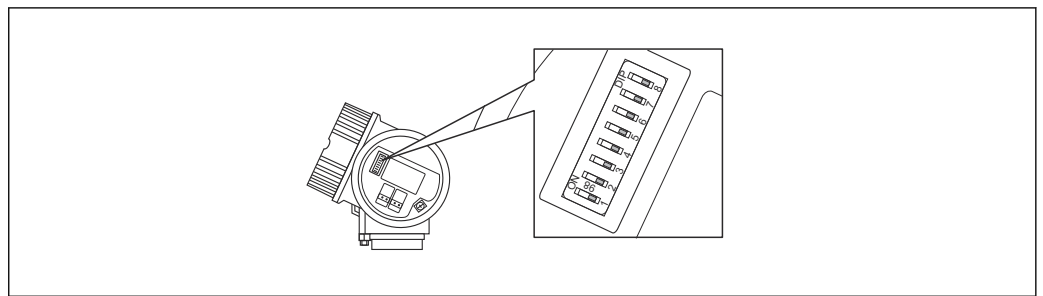

A0015686


16 Address switch in the connection compartment

#### 9.2.1 Hardware addressing

1. Set switch 8 to the "OFF" position.
2. Using switches 1 to 7, set the address as indicated in the table below.

The change of address takes effect after 10 seconds. The device is restarted.

Switch	1	2	3	4	5	6	7
Value in "ON" position	1	2	4	8	16	32	64
Value in "OFF" position	0	0	0	0	0	0	0

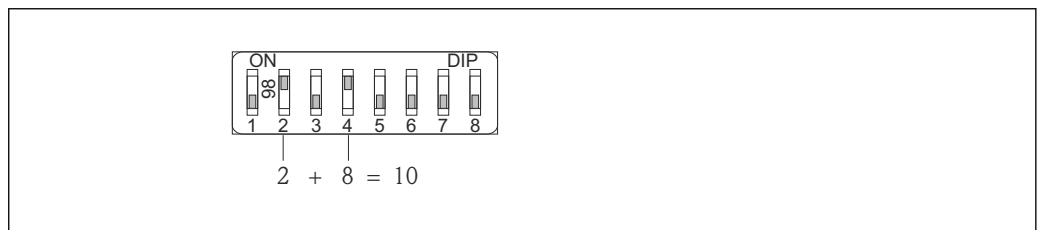


A0015902

17 Example of hardware addressing; switch 8 is set to the "OFF" position; switches 1 to 7 define the address.

#### 9.2.2 Software addressing

1. Set switch 8 to "ON".

2. The device restarts automatically and reports the current address (factory setting: 126).
3. Configure the address via the operating menu: Setup → Device address

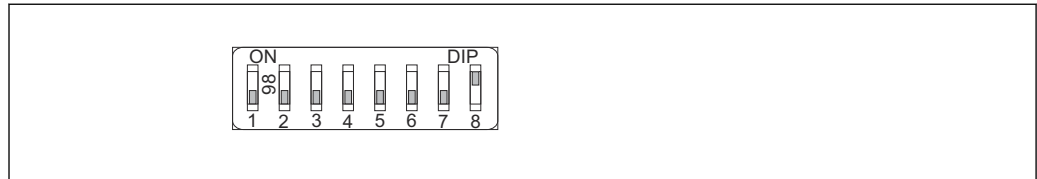


A0015903

- 18 Example of software addressing; switch 8 is set to the "ON" position; the address is defined in the operating menu (Setup → Device address).

## 10 Commissioning using the wizard

FieldCare and DeviceCare have a wizard that guides the user through initial commissioning.

1. Connect the device with FieldCare or DeviceCare.
2. Open the device in FieldCare or DeviceCare.
  - ↳ The dashboard (homepage) of the device is displayed:

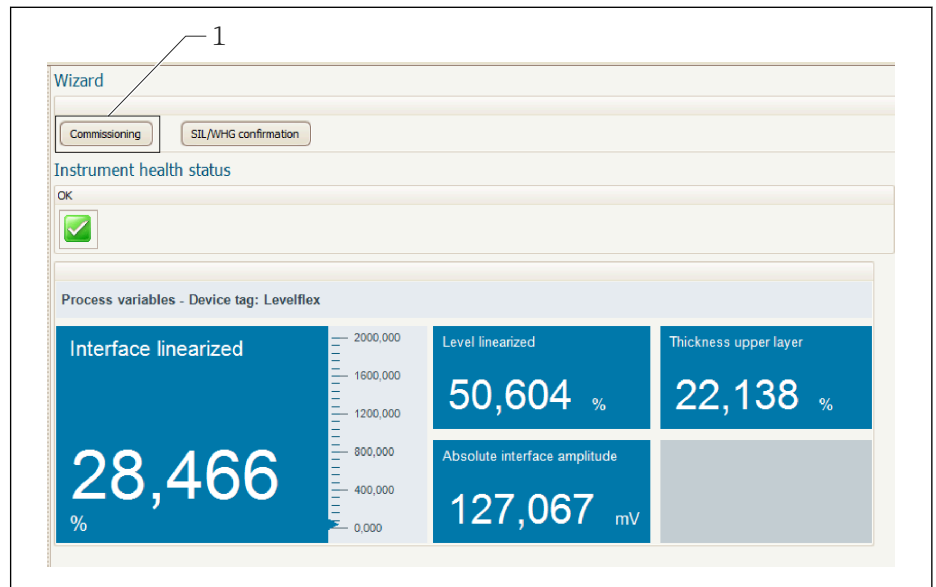


1 "Commissioning" button calls up the wizard


3. Click "Commissioning" to launch the Wizard.
  4. Enter the appropriate value in each parameter or select the appropriate option. These values are written directly to the device.
  5. Click "Next" to go to the next page.
  6. Once all the pages have been completed, click "Finish" to close the Wizard.
- i** If you cancel the Wizard before all the necessary parameters have been entered, the device may be in an undefined state. In such situations, it is advisable to reset the device to the factory default settings.

# 11 Commissioning via operating menu

## 11.1 Installation and function check


Before commissioning the measuring point, check whether the post-installation and post-connection checks have been performed.

 Post-mounting check


 Post-connection check

## 11.2 Configuring the operating language


Factory setting: English or ordered local language

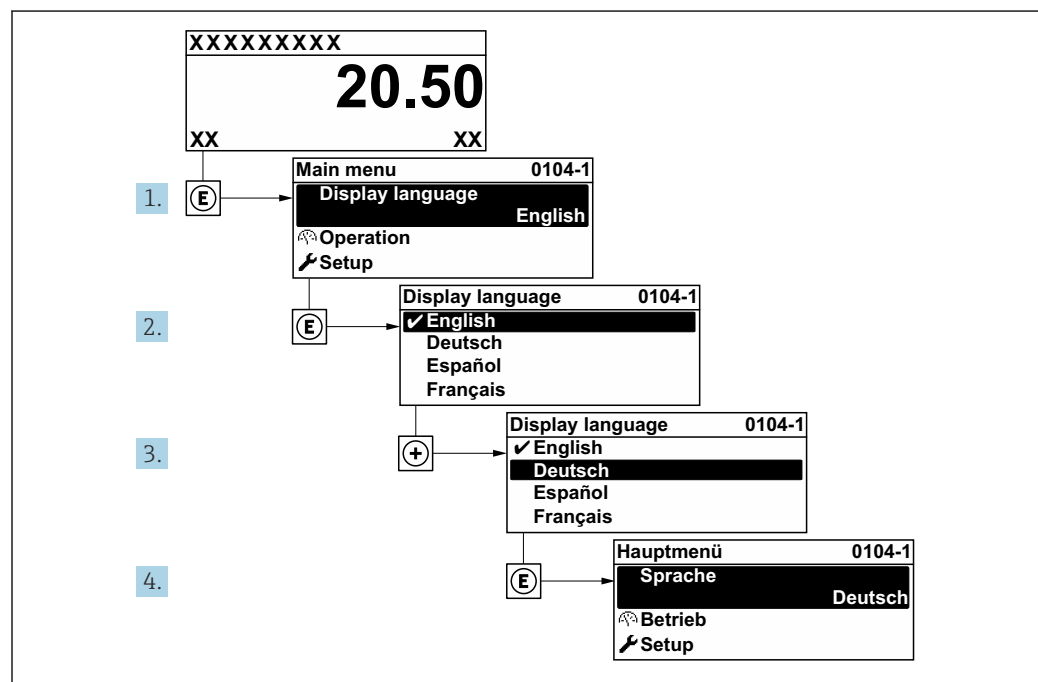

A0029420

 19 Using the example of the local display

## 11.3 Configuring level measurement

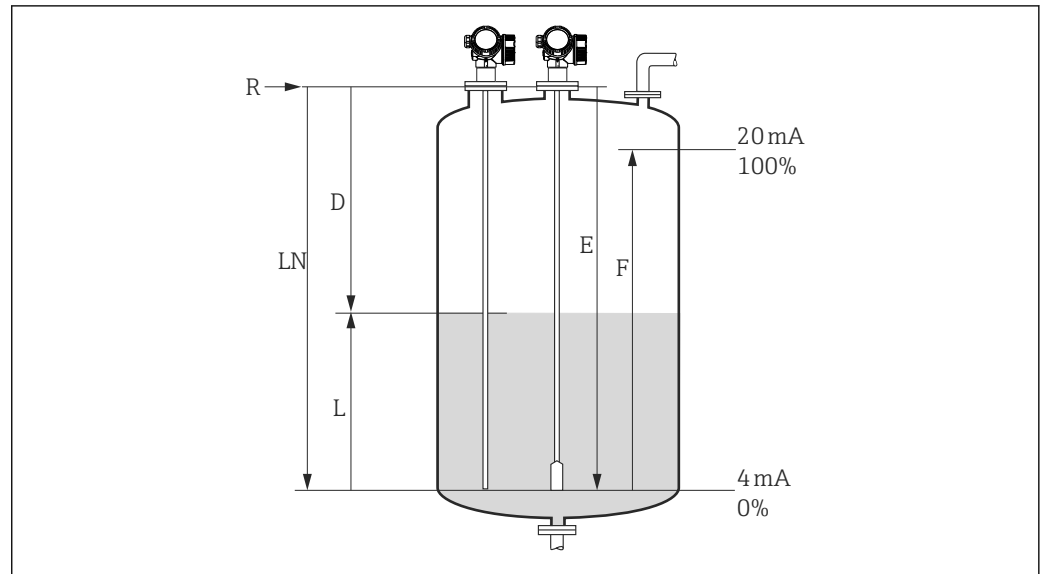

A0011360

20 Configuration parameters for level measurement in liquids

- LN Length of probe
- R Reference point of the measurement
- D Distance
- L Level
- E Empty calibration (= zero point)
- F Full calibration (= span)

**i** If the  $\epsilon_r$  value is lower than 7 in the case of rope probes, measurement is not possible in the area of the probe weight. The empty calibration  $E$  should not exceed  $LN - 250$  mm ( $LN - 10$  in) in these cases.

1. Navigate to: Setup → Device tag
  - ↳ Enter the tag name.
2. Navigate to: Setup → Device address
  - ↳ Enter the device bus address (only if the address is set via the software).
3. Navigate to: Setup → Distance unit
  - ↳ Select the length unit.
4. Navigate to: Setup → Tank type
  - ↳ Select tank type.
5. For **Tank type** parameter = Bypass / pipe:
  - Navigate to: Setup → Tube diameter
    - ↳ Specify the diameter of the bypass or stilling well.
6. Navigate to: Setup → Medium group
  - ↳ Specify the medium group: (**Water based (DC >= 4)** or **Others**)
7. Navigate to: Setup → Empty calibration
  - ↳ Specify empty distance  $E$  (distance from reference point  $R$  to 0% mark).
8. Navigate to: Setup → Full calibration
  - ↳ Specify the full distance  $F$  (distance from the 0% mark to the 100% mark).
9. Navigate to: Setup → Level
  - ↳ Displays the measured level  $L$ .
10. Navigate to: Setup → Distance
  - ↳ Displays the distance  $D$  between the reference point  $R$  and the level  $L$ .

11. Navigate to: Setup → Signal quality
  - ↳ Displays the signal quality of the analyzed level echo.
12. Operation via local display:
  - Navigate to: Setup → Mapping → Confirm distance
    - ↳ Compare the distance displayed with the actual value to start recording an interference echo map if necessary.
13. Operation via operating tool:
  - Navigate to: Setup → Confirm distance
    - ↳ Compare the distance displayed with the actual value to start recording an interference echo map if necessary.

## 11.4 Recording the reference echo curve

After the measurement has been configured, it is recommended to record the current envelope curve as a reference echo curve. This can then be used later for diagnostic purposes. The **Save reference curve** parameter is used to record the envelope curve.


### Path in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

### Meaning of the options

- No
  - No action
- Yes
  - The current envelope curve is saved as a reference curve.

 This submenu is only visible for the "Service" user role in devices supplied with software version 01.00.zz.

 The reference echo curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. The "Load Reference Curve" function in FieldCare is used for this.



 21 "Load Reference Curve" function

## 11.5 Configuring the local display

### 11.5.1 Factory setting of local display for level measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Level linearized	Level linearized
Value 2 display	Distance	Distance
Value 3 display	Current output 1	Current output 1
Value 4 display	None	Current output 2

### 11.5.2 Adjusting the local display

The local display can be adjusted in the following submenu:  
Setup → Advanced setup → Display

## 11.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and the options available.

### Path in the menu

Setup → Advanced setup → Configuration backup display → Configuration management

### Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration is saved from the HistoROM (integrated in the device) to the display module of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

- **Duplicate**

The transmitter configuration of the device is duplicated to another device using the display module. The following parameters, which characterize the individual measuring point are **not** transferred:

Medium type

- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of the comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup copy is restored on a device other than the original device using the **Restore** option, in some cases individual device functions may not be available. In some cases it is also not possible to restore the original state by resetting to the "as-delivered" state.

The **Duplicate** option should always be used to copy the configuration to another device.

## 11.7 Protecting settings from unauthorized access





The settings can be protected from unauthorized access in two ways:

- Locking via parameters (software locking)
- Locking via write protection switch (hardware locking)

## 12 Diagnostics and troubleshooting



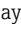


### 12.1 General troubleshooting

#### 12.1.1 General errors

Error	Possible cause	Solution
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> <li>▪ Increase contrast by pressing  and  simultaneously.</li> <li>▪ Decrease contrast by pressing  and  simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display.	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Replace display.
Duplication of parameters via display from one device to another not working. Only the "Save" and "Cancel" options are available.	Display with backup is not properly detected if a data backup was not carried out on the new device previously.	Connect display (with backup) and restart device.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parameter configuration error	Check and correct the parameter configuration.

#### 12.1.2 Parameter configuration errors

*Parameter configuration errors for level measurements*

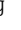Error	Possible cause	Solution
Measured value is incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> <li>▪ Check the <b>Empty calibration</b> parameter (→  93) and correct if necessary.</li> <li>▪ Check the <b>Full calibration</b> parameter (→  93) and correct if necessary.</li> <li>▪ Check the linearization and correct if necessary (<b>Linearization</b> submenu (→  109)).</li> </ul>
	If measured distance (Setup → Distance) does not match the real distance: An interference echo is present.	Carry out mapping ( <b>Confirm distance</b> parameter (→  96)).
No change of measured value on filling/emptying	An interference echo is present.	Carry out mapping ( <b>Confirm distance</b> parameter (→  96)).
	Buildup at the probe.	Clean the probe.
	Error in the echo tracking	Deactivate echo tracking (Expert → Sensor → Echo tracking → Evaluation mode = <b>History off</b> ).




Error	Possible cause	Solution
Echo lost diagnostic message appears after the supply voltage is switched on.	Echo threshold too high.	Check the <b>Medium group</b> parameter (→ 92). If necessary, select a more detailed setting with the <b>Medium property</b> parameter (→ 103).
	Level echo suppressed.	Delete the map and record it again if necessary ( <b>Record map</b> parameter (→ 97)).
Device displays a level when the tank is empty.	Incorrect probe length	Perform a probe length correction ( <b>Confirm probe length</b> parameter (→ 124)).
	Interference echo	Carry out mapping over the entire probe length when the tank is empty ( <b>Confirm distance</b> parameter (→ 96)).
Wrong slope of the level over the entire measuring range	Wrong tank type selected.	Select the correct <b>Tank type</b> parameter (→ 91).

## 12.2 Diagnostic information on local display

### 12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring instrument are displayed as a diagnostic message in alternation with the measured value display.

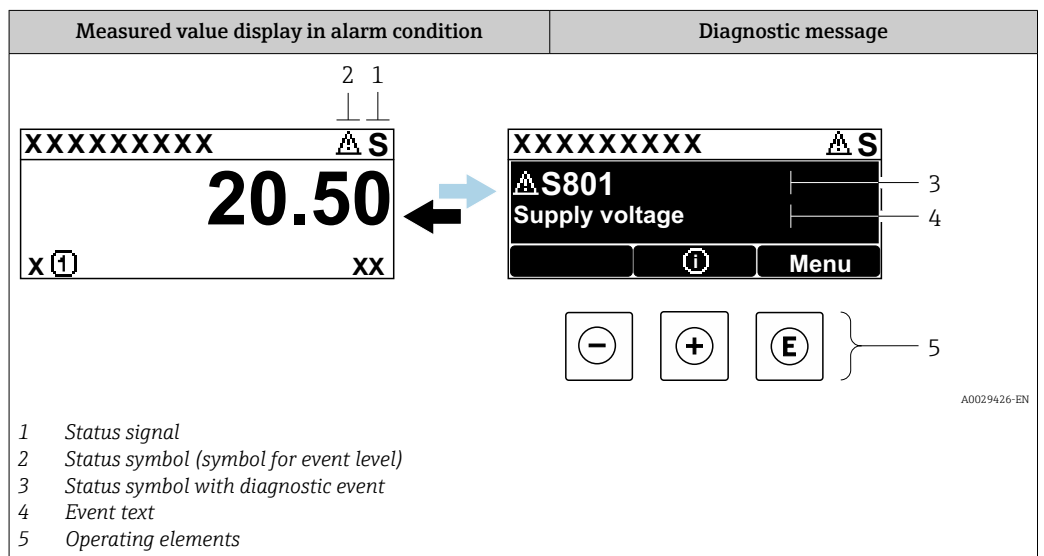

### Status signals


<b>F</b> A0032902	<b>"Failure (F)" option</b> A device error has occurred. The measured value is no longer valid.
<b>C</b> A0032903	<b>"Function check (C)" option</b> The device is in the service mode (e.g. during a simulation).
<b>S</b> A0032904	<b>"Out of specification (S)" option</b> The device is operated: <ul style="list-style-type: none"> <li>Outside its technical specifications (e.g. during startup or cleaning)</li> <li>Outside the configuration performed by the user (e.g. level outside the configured range)</li> </ul>
<b>M</b> A0032905	<b>"Maintenance required (M)" option</b> Maintenance is required. The measured value is still valid.

### Status symbols (symbol for event level)

⊗	<b>"Alarm" status</b> Measurement is interrupted. The signal outputs adopt the defined alarm state. A diagnostic message is generated.
⚠	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### Diagnostic event and event text

The fault can be identified by means of the diagnostic event. The event text helps you by providing information about the fault. In addition, the associated status symbol is displayed in front of the diagnostic event.

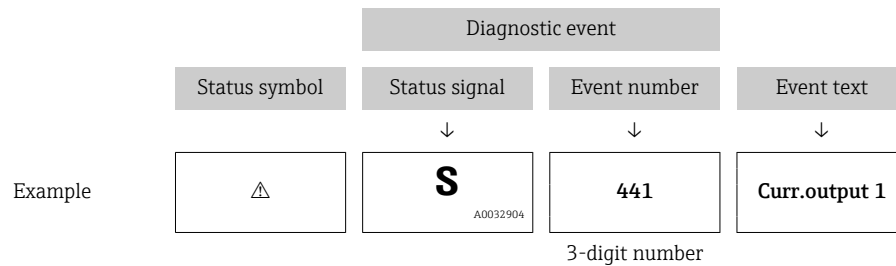

If several diagnostic events are pending at the same time, only the diagnostic message with the highest priority is displayed. Additional queued diagnostic messages can be shown in the **Diagnostic list** submenu.




Past diagnostic messages that are no longer pending are shown as follows:

- On the local display:  
in the **Event logbook** submenu
- In FieldCare:  
via the "Event List/HistoROM" function

### Operating elements

Operating functions in menu, submenu	
+	<b>Plus key</b> Opens the message about the remedial measures.
E	<b>Enter key</b> Opens the operating menu.

### 12.2.2 Calling up remedial measures

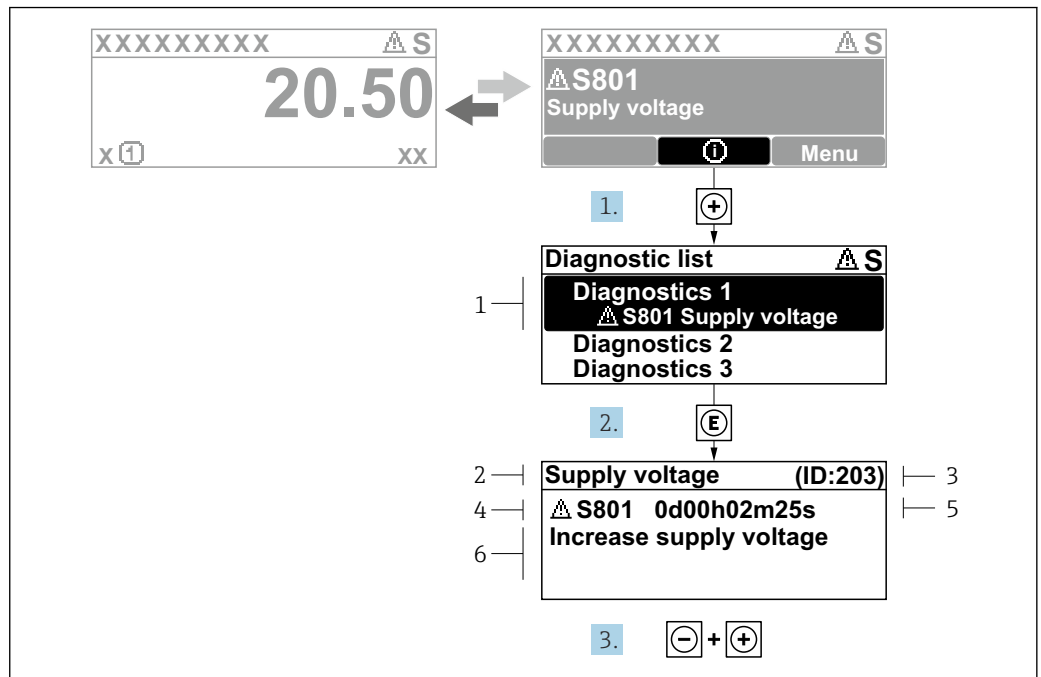

22 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time when error occurred
- 6 Remedial measures

The user is in the diagnostic message.

1. Press  $\oplus$  (Ⓢ symbol).
  - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with  $\oplus$  or  $\ominus$  and press  $\ominus$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press  $\ominus$  +  $\oplus$  simultaneously.
  - ↳ The message about the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** or in **Previous diagnostics**.

1. Press  $\ominus$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  $\ominus$  +  $\oplus$  simultaneously.
  - ↳ The message about the remedial measures closes.


## 12.3 Diagnostic event in the operating tool

If a diagnostic event has occurred in the device, the status signal appears in the top left status area of the operating tool together with the corresponding symbol for the event level according to NAMUR NE 107:


- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

**A: Via the operating menu**


1. Navigate to the **Diagnostics** menu.
  - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display area, hover the cursor over the **Actual diagnostics** parameter.
  - ↳

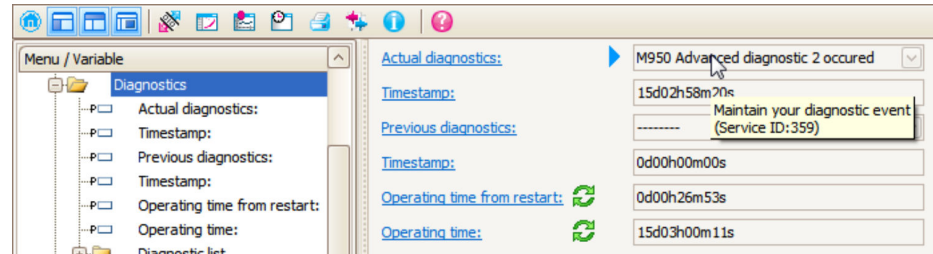

A tool tip with remedy information for the diagnostic event appears.

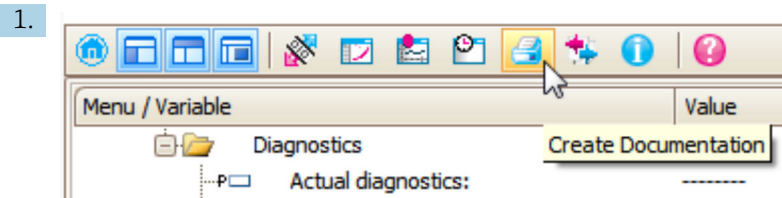**B: Via the "Create Documentation" function**

Select the "Create documentation" function.

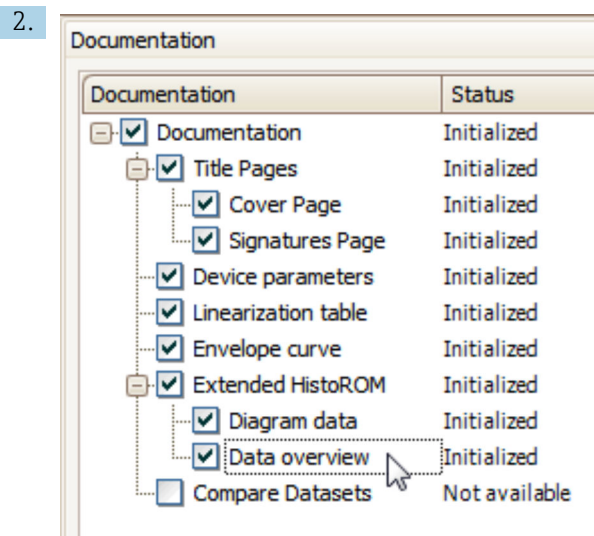


Make sure that "Data overview" is marked.

3. Click "Save as..." and save a PDF of the report.
  - ↳ The report contains the diagnostic messages including remedial measures.


### C: Via the "Event list/Extended HistoROM" function

1.

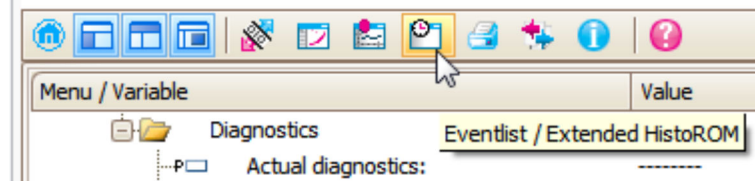

Select the ("Event list/Extended HistoROM") function.

2.

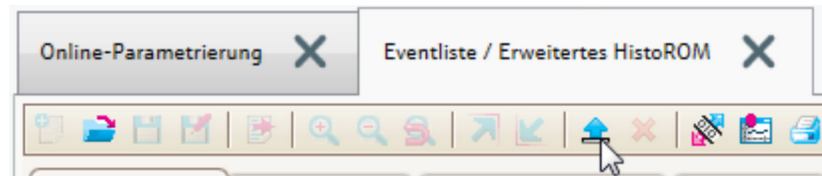

Select the "Load event list" function.

- ↳ The event list including remedial measures is displayed in the "Data overview" window.

## 12.4 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

### Calling up and closing the remedial measures

1. Press .

- ↳ The message for the remedial measures for the selected diagnostic event opens.

2. Press  +  simultaneously.

- ↳ The message about the remedial measures closes.

## 12.5 List of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
<b>Diagnostic of sensor</b>				
003	Broken probe detected	1. Check map 2. Check sensor	F	Alarm
046	Build-up detected	Clean sensor	F	Alarm
104	HF cable	and check sealing 1. Dry HF cable connection 2. Change HF cable	F	Alarm
105	HF cable	1. Tighten HF cable connection 2. Check sensor 3. Change HF cable	F	Alarm
106	Sensor	1. Check sensor 2. Check HF cable 3. Contact service	F	Alarm
<b>Diagnostic of electronic</b>				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check electronic modules 2. Change I/O or main electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module failure	Change I/O module	F	Alarm
276	I/O module failure	1. Restart device 2. Change I/O module	F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
<b>Diagnostic of configuration</b>				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
412	Processing Download	Download active, please wait	C	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	C	Alarm
485	Simulation measured value	Deactivate simulation	C	Warning
494	Switch output simulation	Deactivate simulation switch output	C	Warning
495	Simulation diagnostic event	Deactivate simulation	C	Warning
497	Simulation block output	Deactivate simulation	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
<b>Diagnostic of process</b>				
801	Energy too low	Increase supply voltage	S	Warning
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	Operating temperature		F	Alarm
921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	S	Warning
936	EMC interference	Check installation on EMC	F	Alarm
941	Echo lost	Check parameter 'DC value'	F	Alarm <sup>1)</sup>
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Alarm <sup>1)</sup>
943	In blocking distance	Reduced accuracy Check level	S	Warning
944	Level range	Reduced accuracy Level at process connection	S	Warning
950	Advanced diagnostic 1 to 2 occurred	Maintain your diagnostic event	M	Warning <sup>1)</sup>

1) Diagnostic behavior can be changed.

## 12.6 Event logbook

### 12.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list**

(This submenu only exists if operating via the local display. In the case of operation via FieldCare, the event list can be displayed with the "Event list/HistoROM" functionality of FieldCare.

**Navigation path**

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.




The event history includes entries for:

- Diagnostic events
- Information events

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostic event
  - ☹: Occurrence of the event
  - ☺: End of the event
- Information event
  - ☹: Occurrence of the event

**Calling up and closing the remedial measures**

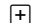1. Press .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
  - ↳ The message about the remedial measures closes.

**12.6.2 Filtering the event logbook**Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.**Navigation path**

Diagnostics → Event logbook → Filter options

**Filter categories**

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

**12.6.3 Overview of information events**

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list




Info number	Info name
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

## 12.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMP53, PROFIBUS)		
			Operating Instructions	Description of Device Parameters	Technical Information
07.2011	01.00.zz	Original software	BA01007F/00/EN/10.10	GP01001F/00/EN/10.10	TI01002F/00/EN/13.11
02.2015	01.01.zz	<ul style="list-style-type: none"> <li>▪ Support of SD03</li> <li>▪ Additional languages</li> <li>▪ HistoROM functionality enhanced</li> <li>▪ "Advanced Diagnostics" function block integrated</li> <li>▪ Improvements and bugfixes</li> </ul>	BA01007F/00/EN/14.14 BA01007F/00/EN/15.16 <sup>1)</sup>	GP01001F/00/EN/13.14	TI01002F/00/EN/17.14 TI01002F/00/EN/20.16 <sup>1)</sup>

1) Contains information on the Heartbeat wizards available in the current DTM version for DeviceCare and. FieldCare

 The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## 13 Maintenance

No special maintenance work is required.

### 13.1 Exterior cleaning

When cleaning the exterior, always use cleaning agents that do not corrode the surface of the housing and the seals.

### 13.2 General cleaning instructions

Dirt or buildup may form on the probe depending on the application. A thin, even layer has little impact on the measurement. Thick layers can dampen the signal and reduce the measuring range. Very uneven deposit formation or caking (e.g. due to crystallization) can result in incorrect measurements. In such cases, use a non-contact measuring principle, or regularly inspect the probe for contamination.

Cleaning with sodium hydroxide solution (e.g. in CIP procedures): if the coupling is wetted, larger measurement errors can occur than under reference operating conditions. Wetting can cause temporary incorrect measurements.

### 13.3 Cleaning the probe

#### 13.3.1 Cleaning the probe in the vessel

If a suitable mounting position has been selected, the probe can be cleaned using a spray ball in the vessel →  20.

#### 13.3.2 Cleaning the probe outside the vessel

The probe can be disassembled to facilitate cleaning.

The following tools are required for cleaning:

- Vice with fiber protective jaws (surface protection of polished probe rod)
- Hook wrench with nose  $\phi$  54 mm (2.1 in)
- Open-ended wrench AF27/AF32 with torque adjustment up to 20 Nm

**Caution!**

- Before starting work, make sure that the power supply for the device is switched off.
- When unscrewing the slotted nut (1), you must use an open-ended wrench to counterhold the process connection ring (5). Otherwise the adapter (3) will become detached from the flange.

**Disassembling the electronics housing**

- Loosen the slotted nut (1) using the hook wrench.
- Pull the loosened housing (2) together with the housing bracket upwards from the adapter (3) of the process connection. The housing bracket remains attached to the housing. Place the housing to the side. Remove only the cable adapter in the "Sensor, remote" version.
- Replace the O-ring (7) if necessary.  
Order number: see Device Viewer → 69

**Disassembling the rod probe**

- Unscrew the adapter (3) from the process connection (flange in the example): Using an open-ended wrench (AF27), unscrew the adapter at the wrench flat and pull it out of the vessel together with the probe rod (max. 4 m).
- Clamp the probe rod (4) at the wrench flat or use a pair of pliers.


**Caution:** Make sure the surface of the polished probe rod is protected! It must not be damaged by scratches or dents.

- Unscrew the adapter (3) from the probe rod (turning left for approx. 12 rotations) and remove (plug-in connection). The probe rod is screwed into the insulating socket with 4.5 Nm.
- The O-ring seals (6) on the probe rod and on the adapter are now freely accessible and can be replaced if necessary. The probe rod and adapter can be autoclaved.  
Order number of the O-rings: see Device Viewer → 69

**Probe mounting**

Assembly is the reverse of the disassembly sequence:

- Screw the adapter (3) onto the probe rod (4) with 4.5 Nm.
- Screw the adapter together with the probe rod into the vessel process connection and tighten it with 20 Nm.
- Attach the housing (2) with the housing bracket to the adapter and screw on with the slotted nut (1); torque 20 Nm.

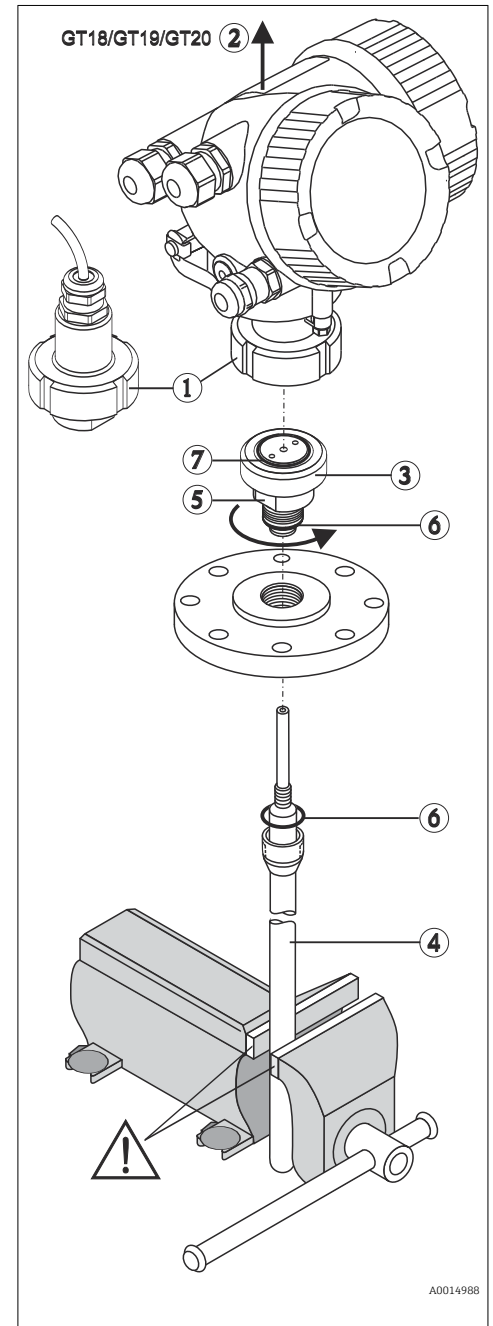

## 14 Repair

### 14.1 General information

#### 14.1.1 Repair concept

Under the Endress+Hauser repair concept, devices have a modular design and repairs can be carried out by Endress+Hauser Service or by properly trained customers.

Spare parts are grouped into logical kits with the associated replacement instructions.

For more information on service and spare parts, please contact Endress+Hauser Service.

#### 14.1.2 Repairs to Ex-approved devices

**⚠ WARNING**

**Incorrect repair can compromise electrical safety!**

Explosion hazard!

- ▶ Repairs to Ex-approved devices must be carried out by Endress+Hauser Service or by specialist personnel according to national regulations.
- ▶ Relevant standards and national regulations on hazardous areas, safety instructions and certificates must be observed.
- ▶ Use only original Endress+Hauser spare parts.
- ▶ Please note the device designation on the nameplate. Only identical parts may be used as replacements.
- ▶ Carry out repairs according to the instructions.
- ▶ Only the Endress+Hauser service team is permitted to modify a certified device and convert it to another certified version.

#### 14.1.3 Replacing electronics modules

When electronics modules have been replaced the device does not need to be recalibrated as the parameters are saved in the HistoROM inside the housing. It may be necessary when replacing the main electronics to record a new interference echo suppression.

#### 14.1.4 Replacing a device


Once a complete device has been replaced, the parameters can be transferred back into the device using one of the following methods:

- Using the display module  
Prerequisite: The configuration of the old device was saved previously to the display module.
- Via FieldCare  
Prerequisite: The configuration of the old device was saved previously to the computer using FieldCare.

You can continue measuring without performing a new calibration. Only interference echo suppression may need to be carried out once again.

## 14.2 Spare parts

- Some replaceable measuring instrument components are identified by means of a spare part nameplate. This contains information about the spare part.
- In the connection compartment cover of the device there is a spare part nameplate which contains the following information:
  - A list of the most important spare parts for the measuring instrument, including their ordering information.
  - The URL to the *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)):  
All the spare parts for the measuring instrument, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

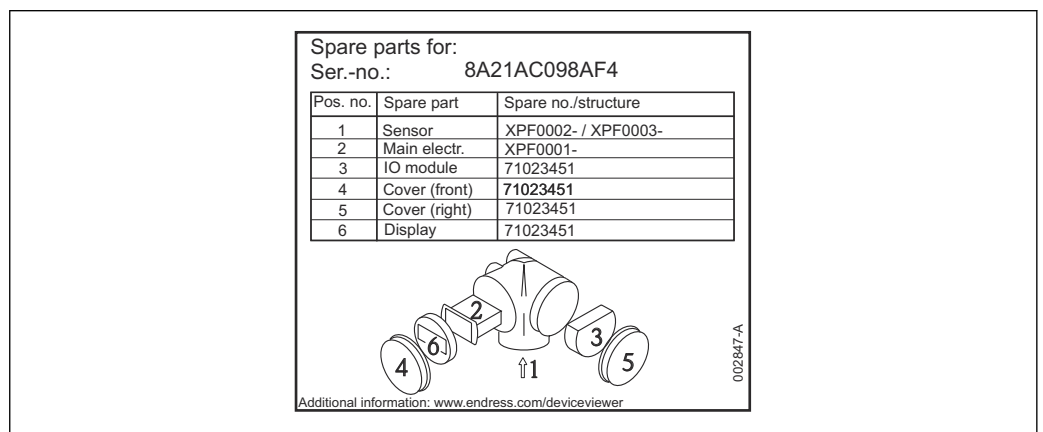

23 Example for spare part nameplate in the connection compartment cover


- i** Measuring instrument serial number:
  - Located on the device and spare part nameplate.
  - Can be read out via the "Serial number" parameter in the "Device information" submenu.

## 14.3 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the web page for information:  
<https://www.endress.com/support/return-material>  
↳ Select the region.
2. If returning the device, pack the device in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

## 14.4 Disposal

-  If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

## 15 Accessories

The accessories currently available for the product can be selected at [www.endress.com](http://www.endress.com):


1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Spare parts & Accessories**.

### 15.1 Device-specific accessories

#### 15.1.1 Weather protection cover


The weather protection cover can be ordered together with the device via the "Accessory enclosed" product structure.

It is used to protect against direct sunlight, precipitation and ice.

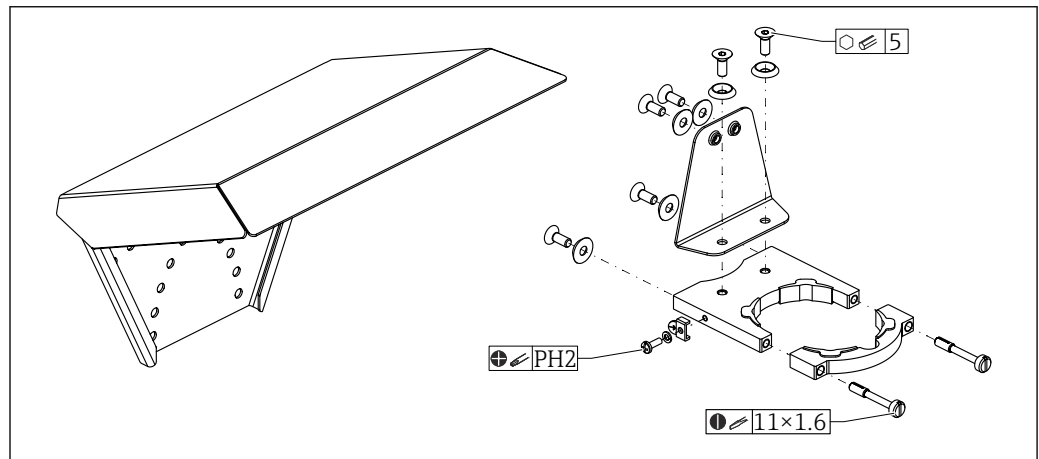


A0051672

24 Overview

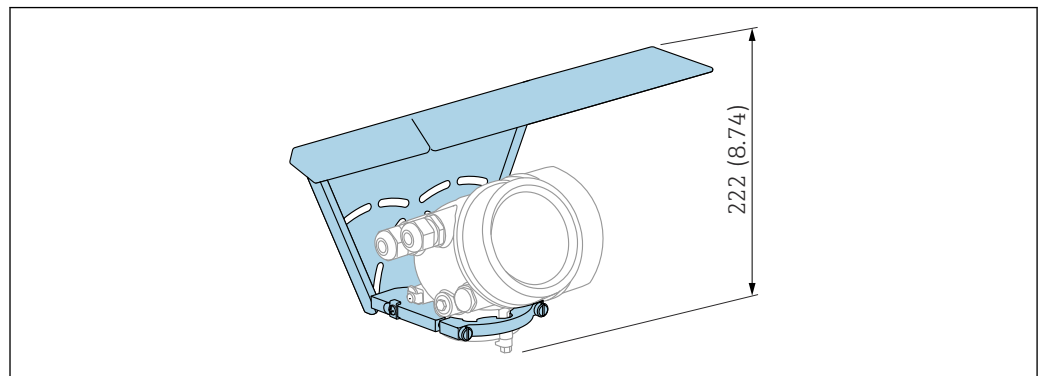

A0015466

25 Height. Unit of measurement mm (in)

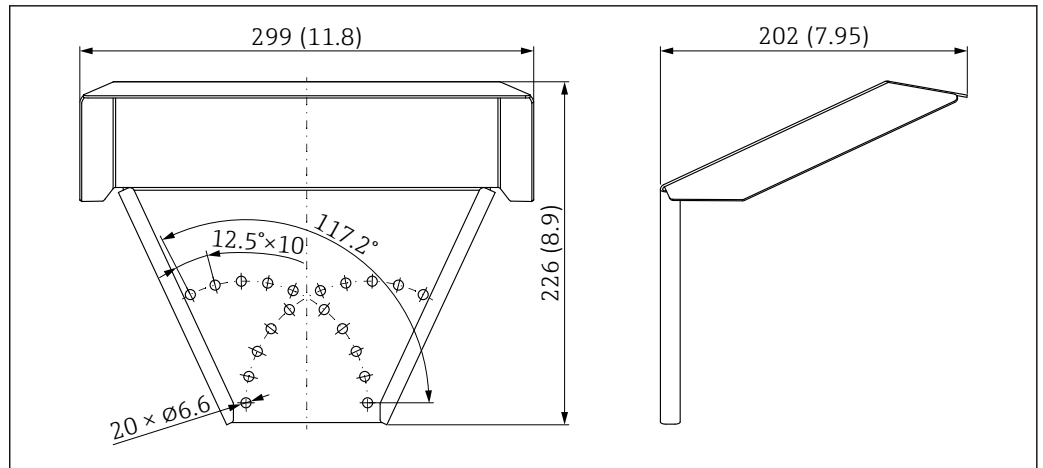

A0015472

26 Dimensions. Unit of measurement mm (in)

**Material**


- Protection cap; 316L (1.4404)
- Bracket; 316L (1.4404)
- Angle bracket; 316L (1.4404)
- Clamping screw; 316L (1.4404) + carbon fiber
- Molded rubber part (4x); EPDM
- Screws; A4
- Disks; A4
- Ground terminal; A4, 316L (1.4404)

**Order number for accessories:**

71162242

**15.1.2 Mounting bracket for electronics housing**


With "remote sensor" device versions (feature 060 in the product structure), the mounting bracket is included in the scope of delivery. It can be ordered as a separate accessory .

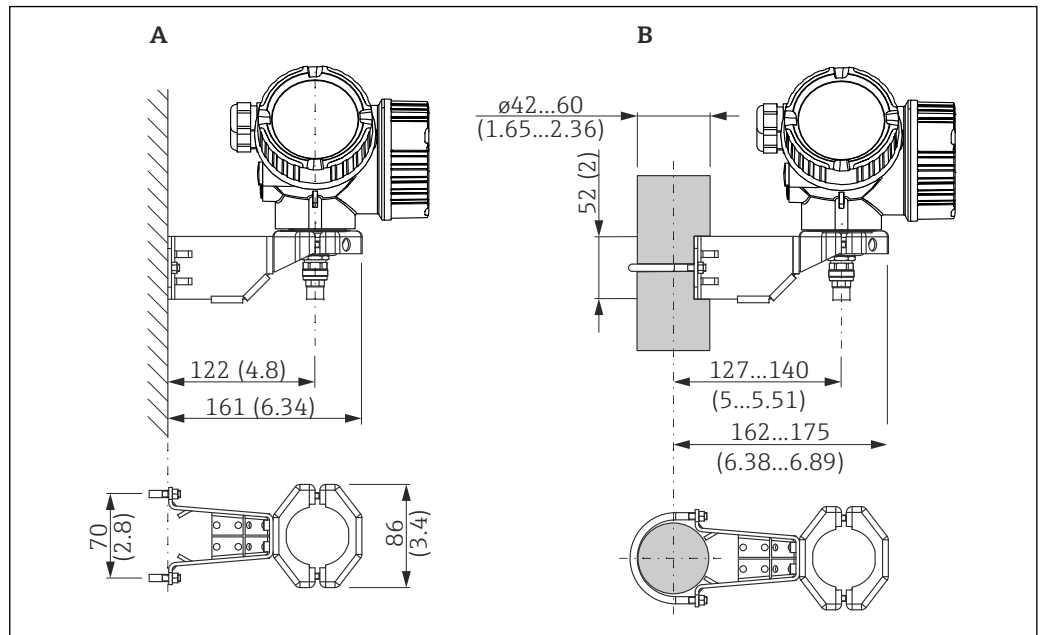

A0014793

27 Mounting bracket for electronics housing; unit: mm (in)

- A Wall mounting
- B Post mounting

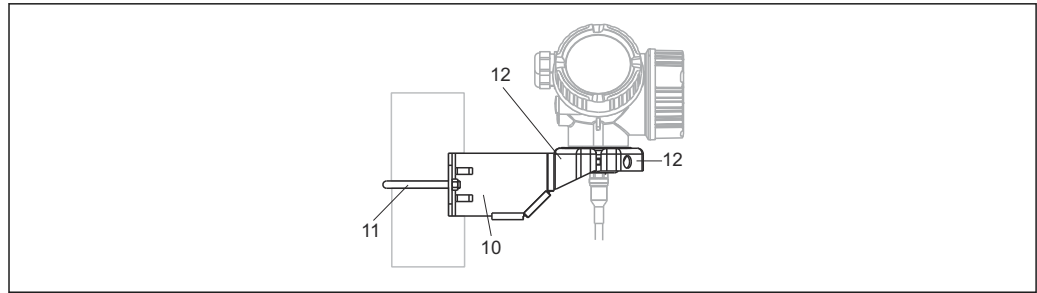

A0015143

28 Material; mounting bracket

10 Bracket, 316L (1.4404)

11 Round bracket, 316L (1.4404); screws/nuts, A4-70; distance sleeves, 316L (1.4404)


12 Half-shells, 316 L (1.4404)

**Order number for accessories:**

71102216

### 15.1.3 Weld-in adapter

With M24x1.5 thread for flush-mounted installation of sensor.

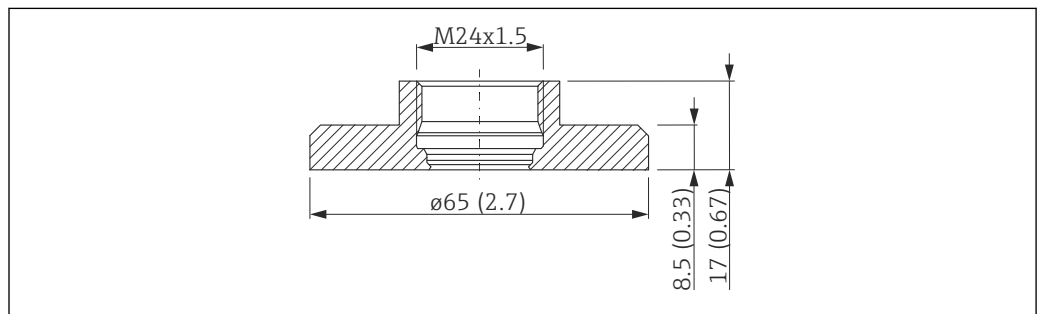

A0012776

29 Dimensions, weld-in adapter

- Material: 1.4435 (AISI 316L)

- Weight: 0.22 kg (0.48 lbs)

**Order number for accessories:**

- Standard version: 71041381


- With 3.1 material certificate: 71041383



For details, see Operating Instructions BA00361F

### 15.1.4 Protective cover

For closing off the probe when the electronics module is removed

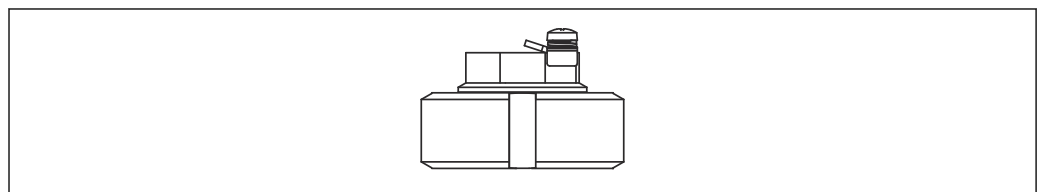

A0013589



**Order number for accessories:**

71041379



For details, see Operating Instructions BA00362F.

**15.1.5 Calibration kit**


The calibration kit is used for regular testing of the accuracy and reproducibility of the device.

**Order number for accessories:**

71041382



For details, see SD01003F.

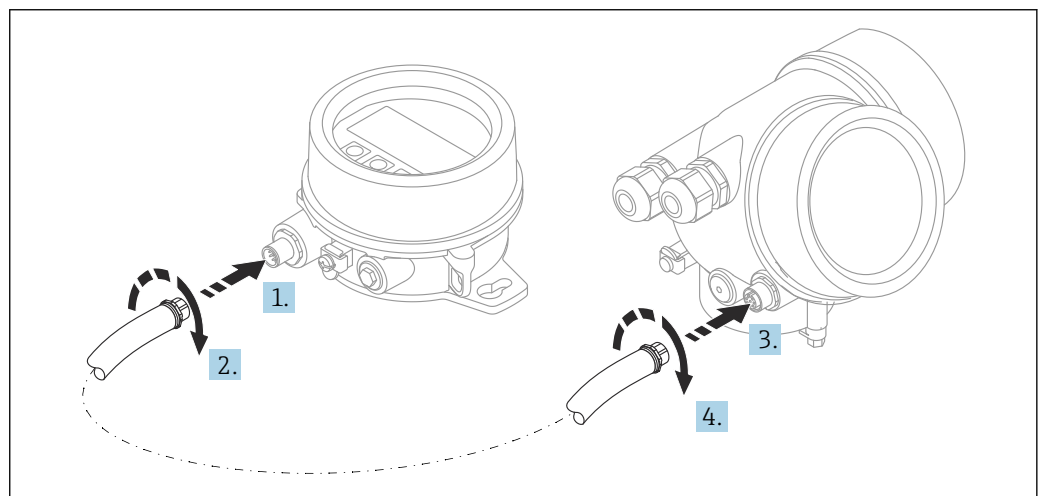**15.1.6 Remote display FHX50**

A0019128

**Technical data**

- Material:
    - Plastic PBT
    - 316L/1.4404
    - Aluminum
  - Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x
  - Suitable for display modules:
    - SD02 (push buttons)
    - SD03 (touch control)
  - Connecting cable:
    - Cable supplied with device up to 30 m (98 ft)
    - Standard cable provided by customer onsite up to 60 m (196 ft)
  - Ambient temperature: -40 to 80 °C (-40 to 176 °F)
  - Ambient temperature, optionally available for order. -50 to 80 °C (-58 to 176 °F)
- NOTICE** If the temperature is permanently below -40 °C (-40 °F), higher failure rates can be expected.

### Ordering information

- If the remote display is to be used, the device version "Prepared for display FHX50" must be ordered.

For FHX50, the option "Prepared for display FHX50" must be selected under "Measuring device version".

- If a measuring instrument has not been ordered with the version "Prepared for display FHX50" and is to be retrofitted with an FHX50, the version "Not prepared for display FHX50" must be ordered for the FHX50 under "Measuring device version". In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used.

**i** Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option "Prepared for FHX50" is listed under *Basic specifications*, "Display, operation" in the Safety instructions (XA) for the device.

Also refer to the Safety Instructions (XA) of the FHX50.

Retrofitting is not possible on transmitters with:

- An approval for use in areas with flammable dust (dust ignition-proof approval)
- Type of protection Ex nA


**📖** For details, see "Special Documentation" document SD01007F.

### 15.1.7 Overvoltage protection

The surge arrester for loop-powered devices can be ordered together with the device via the "Accessory mounted" section of the product order structure.

The surge arrester can be used for loop-powered devices.

- 1-channel devices - OVP10
- 2-channel devices - OVP20

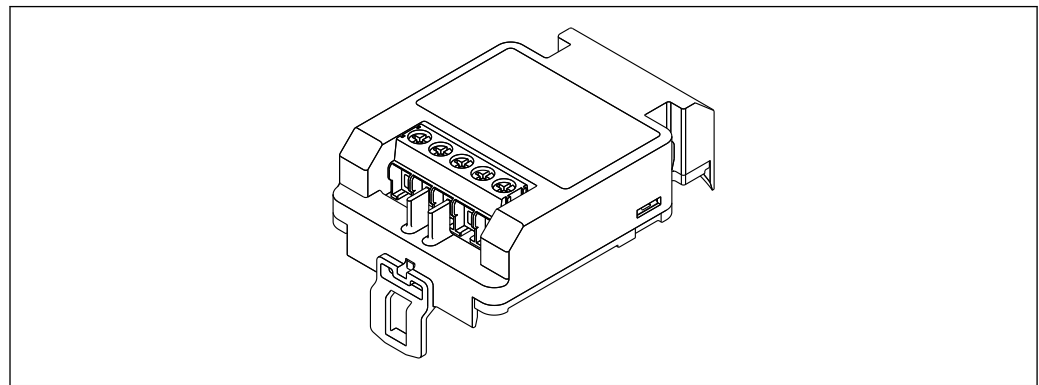

A0021734

### Technical data

- Resistance per channel:  $2 \times 0.5 \Omega_{\max}$
- Threshold DC voltage: 400 to 700 V
- Threshold surge voltage: < 800 V
- Capacitance at 1 MHz: < 1.5 pF
- Nominal leakage current (8/20  $\mu$ s): 10 kA
- Suitable for conductor cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)

**If retrofitting:**


- Order number for 1-channel devices (OVP10): 71128617
- Order number for 2-channel devices (OVP20): 71128619
- The use of the OVP module may be restricted depending on the transmitter approval. A device may only be retrofitted with the OVP module if the option *NA* (overvoltage protection) is listed under *Optional specifications* in the Safety Instructions (XA) associated with the device.
- In order to keep the necessary safety distances when using the surge arrester module, the housing cover also needs to be replaced when the device is retrofitted. Depending on the housing type, the suitable cover can be ordered using the following order number:
  - Housing GT18: 71185516
  - Housing GT19: 71185518
  - Housing GT20: 71185517



For details, see the "Special Documentation" SD01090F

### 15.1.8 Bluetooth module BT10 for HART devices

The Bluetooth module BT10 can be ordered together with the device via the "Accessory mounted" section of the product order structure.

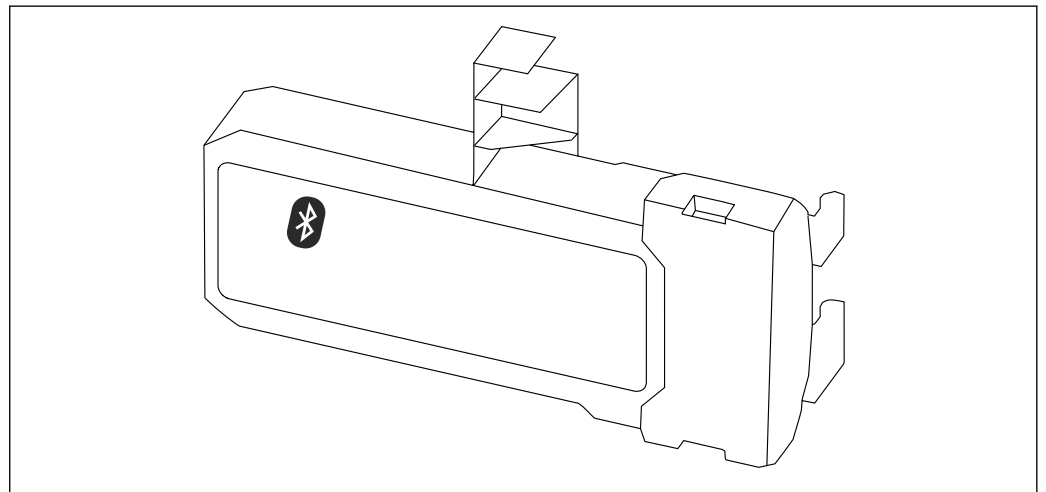

A0036493

**Technical data**

- Quick and easy setup with the SmartBlue app
- No additional tools or adapters needed
- Signal curve via SmartBlue (app)
- Encrypted single point-to-point data transmission (tested by Fraunhofer Institute) and password-protected communication via Bluetooth® wireless technology
- Range under reference conditions:
  - > 10 m (33 ft)
- When the Bluetooth module is used, the minimum supply voltage of the device increases by up to 3 V.

**If retrofitting:**

- Order number: 71377355
- The use of the Bluetooth module may be restricted depending on the transmitter approval. A device may only be retrofitted with the Bluetooth module if the option *NF* (Bluetooth module) is listed under *Optional specifications* in the Safety Instructions (XA) associated with the device.



For details, see the "Special Documentation" SD02252F

## 15.2 Communication-specific accessories

### Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop

Order number: 51516983



For details, see "Technical Information" TI00405C

## 15.3 Service-specific accessories

### DeviceCare SFE100

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices



Technical Information TI01134S

### FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.



Technical Information TI00028S

## 15.4 System components

### 15.4.1 Memograph M RSG45

The Advanced Data Manager is a flexible and powerful system for organizing process values.

The Memograph M is used for electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals as well as calculated values.



Technical Information TI01180R and Operating Instructions BA01338R

# 16 Operating menu


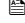
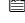
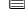
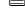
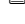
















## 16.1 Overview of the operating menu (display module)

Navigation  Operating menu

Language	
<b>Setup</b>	→ 91
Device tag	→ 91
Device address	→ 91
Distance unit	→ 91
Tank type	→ 91
Tube diameter	→ 92
Medium group	→ 92
Empty calibration	→ 93
Full calibration	→ 93
Level	→ 94
Distance	→ 94
Signal quality	→ 95
<b>► Mapping</b>	→ 98
Confirm distance	→ 98
Mapping end point	→ 98
Record map	→ 98
Distance	→ 98
<b>► Analog inputs</b>	
<b>► Analog input 1 to 6</b>	→ 99
Channel	→ 99


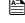

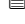
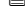
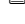





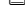
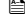
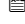
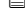
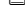
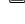

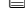
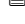
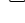

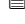
PV filter time	→ 99
Fail safe type	→ 100
Fail safe value	→ 100
<b>▶ Advanced setup</b>	→ 101
Locking status	→ 101
Access status display	→ 102
Enter access code	→ 102
<b>▶ Level</b>	→ 103
Medium type	→ 103
Medium property	→ 103
Process property	→ 104
Advanced process conditions	→ 105
Level unit	→ 106
Blocking distance	→ 106
Level correction	→ 107
<b>▶ Linearization</b>	→ 109
Linearization type	→ 111
Unit after linearization	→ 112
Free text	→ 113
Maximum value	→ 114
Diameter	→ 114
Intermediate height	→ 115
Table mode	→ 115

▶ Edit table	
Level	
Customer value	
Activate table	→ 117
▶ Safety settings	→ 118
Output echo lost	→ 118
Value echo lost	→ 118
Ramp at echo lost	→ 119
Blocking distance	→ 106
▶ WHG confirmation	→ 121
▶ Deactivate WHG	→ 122
Reset write protection	→ 122
Code incorrect	→ 122
▶ Probe settings	→ 123
Probe grounded	→ 123
▶ Probe length correction	→ 125
Confirm probe length	→ 125
Present probe length	→ 123
▶ Switch output	→ 127
Switch output function	→ 127
Assign status	→ 127
Assign limit	→ 128
Assign diagnostic behavior	→ 128
Switch-on value	→ 129
Switch-on delay	→ 130

Switch-off value	→  130
Switch-off delay	→  131
Failure mode	→  131
Switch status	→  131
Invert output signal	→  131
<b>► Display</b>	→  133
Language	→  133
Format display	→  133
Value 1 to 4 display	→  135
Decimal places 1 to 4	→  135
Display interval	→  135
Display damping	→  136
Header	→  136
Header text	→  136
Separator	→  137
Number format	→  137
Decimal places menu	→  137
Backlight	→  138
Contrast display	→  138
<b>► Configuration backup display</b>	→  139
Operating time	→  139
Last backup	→  139



Configuration management	→ 139
Comparison result	→ 140
▶ Administration	→ 142
▶ Define access code	→ 144
Define access code	→ 144
Confirm access code	→ 144
Device reset	→ 142
🔍 Diagnostics	→ 145
Actual diagnostics	→ 145
Previous diagnostics	→ 145
Operating time from restart	→ 146
Operating time	→ 139
▶ Diagnostic list	→ 147
Diagnostics 1 to 5	→ 147
▶ Event logbook	→ 148
Filter options	
▶ Event list	→ 148
▶ Device information	→ 149
Device tag	→ 149
Serial number	→ 149
Firmware version	→ 149
Device name	→ 149
Order code	→ 150
Extended order code 1 to 3	→ 150

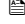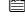Status PROFIBUS Master Config	→  150
PROFIBUS ident number	→  150
<b>▶ Measured values</b>	→  151
Distance	→  94
Level linearized	→  114
Terminal voltage 1	→  152
Switch status	→  131
<b>▶ Analog inputs</b>	
<b>▶ Analog input 1 to 6</b>	→  153
Channel	→  99
Out value	→  153
Out status	→  154
Out status HEX	→  154
<b>▶ Data logging</b>	→  155
Assign channel 1 to 4	→  155
Logging interval	→  155
Clear logging data	→  156
<b>▶ Display channel 1 to 4</b>	→  157
<b>▶ Simulation</b>	→  159
Assign measurement variable	→  160
Value process variable	→  160
Switch output simulation	→  160
Switch status	→  161
Simulation device alarm	→  161

Diagnostic event category	
Simulation diagnostic event	→ 161
▶ Device check	→ 162
Start device check	→ 162
Result device check	→ 162
Last check time	→ 162
Level signal	→ 163
Launch signal	→ 163












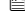



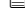
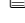
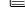
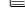






## 16.2 Overview of the operating menu (operating tool)











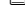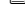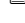





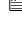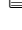








Navigation














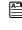











Operating menu

<b>Setup</b>	→ 91
Device tag	→ 91
Device address	→ 91
Distance unit	→ 91
Tank type	→ 91
Tube diameter	→ 92
Medium group	→ 92
Empty calibration	→ 93
Full calibration	→ 93
Level	→ 94
Distance	→ 94
Signal quality	→ 95
Confirm distance	→ 96
Present mapping	→ 97
Mapping end point	→ 97
Record map	→ 97
<b>▶ Analog inputs</b>	
<b>▶ Analog input 1 to 6</b>	→ 99
Channel	→ 99
PV filter time	→ 99

Fail safe type	→  100
Fail safe value	→  100
<b>► Advanced setup</b>	→  101
Locking status	→  101
Access status tooling	→  101
Enter access code	→  102
<b>► Level</b>	→  103
Medium type	→  103
Medium property	→  103
Process property	→  104
Advanced process conditions	→  105
Level unit	→  106
Blocking distance	→  106
Level correction	→  107
<b>► Linearization</b>	→  109
Linearization type	→  111
Unit after linearization	→  112
Free text	→  113
Level linearized	→  114
Maximum value	→  114
Diameter	→  114
Intermediate height	→  115
Table mode	→  115
Table number	→  116
Level	→  116

Level	→  117
Customer value	→  117
Activate table	→  117
<b>▶ Safety settings</b>	→  118
Output echo lost	→  118
Value echo lost	→  118
Ramp at echo lost	→  119
Blocking distance	→  106
<b>▶ WHG confirmation</b>	→  121
<b>▶ Deactivate WHG</b>	→  122
Reset write protection	→  122
Code incorrect	→  122
<b>▶ Probe settings</b>	→  123
Probe grounded	→  123
Present probe length	→  123
Confirm probe length	→  124
<b>▶ Switch output</b>	→  127
Switch output function	→  127
Assign status	→  127
Assign limit	→  128
Assign diagnostic behavior	→  128
Switch-on value	→  129
Switch-on delay	→  130
Switch-off value	→  130
Switch-off delay	→  131

Failure mode	→ 131
Switch status	→ 131
Invert output signal	→ 131
<b>► Display</b>	→ 133
Language	→ 133
Format display	→ 133
Value 1 to 4 display	→ 135
Decimal places 1 to 4	→ 135
Display interval	→ 135
Display damping	→ 136
Header	→ 136
Header text	→ 136
Separator	→ 137
Number format	→ 137
Decimal places menu	→ 137
Backlight	→ 138
Contrast display	→ 138
<b>► Configuration backup display</b>	→ 139
Operating time	→ 139
Last backup	→ 139
Configuration management	→ 139





Backup state	→  140
Comparison result	→  140
<b>▶ Administration</b>	→  142
Define access code	
Device reset	→  142
<b>🔍 Diagnostics</b>	→  145
Actual diagnostics	→  145
Timestamp	→  145
Previous diagnostics	→  145
Timestamp	→  146
Operating time from restart	→  146
Operating time	→  139
<b>▶ Diagnostic list</b>	→  147
Diagnostics 1 to 5	→  147
Timestamp 1 to 5	→  147
<b>▶ Device information</b>	→  149
Device tag	→  149
Serial number	→  149
Firmware version	→  149
Device name	→  149
Order code	→  150
Extended order code 1 to 3	→  150
Status PROFIBUS Master Config	→  150
PROFIBUS ident number	→  150












▶ Measured values	→ 151
Distance	→ 94
Level linearized	→ 114
Terminal voltage 1	→ 152
Switch status	→ 131
▶ Analog inputs	
▶ Analog input 1 to 6	→ 153
Channel	→ 99
Out value	→ 153
Out status	→ 154
Out status HEX	→ 154
▶ Data logging	→ 155
Assign channel 1 to 4	→ 155
Logging interval	→ 155
Clear logging data	→ 156
▶ Simulation	→ 159
Assign measurement variable	→ 160
Value process variable	→ 160
Switch output simulation	→ 160
Switch status	→ 161
Simulation device alarm	→ 161
Simulation diagnostic event	→ 161
▶ Device check	→ 162
Start device check	→ 162
Result device check	→ 162

Last check time	→ 📄 162
Level signal	→ 📄 163
Launch signal	→ 📄 163
▶ Heartbeat	→ 📄 164

### 16.3 "Setup" menu

- 
  -  : Indicates how to navigate to the parameter using the display and operating module
  -  : Indicates how to navigate to the parameter using operating tools (e.g. FieldCare)
  -  : Indicates parameters that can be locked via the access code.

Navigation  Setup




<b>Device tag</b>		
Navigation	 Setup → Device tag	
Description	Enter tag for measuring point.	
User entry	Up to 32 alphanumerical characters	
<b>Device address</b>		
Navigation	 Setup → Device address	
Description	<ul style="list-style-type: none"> <li>▪ for <b>Address mode = Software</b>: Enter bus address.</li> <li>▪ for <b>Address mode = Hardware</b>: Displays bus address.</li> </ul>	
User entry	0 to 126	
<b>Distance unit</b>		
Navigation	 Setup → Distance unit	
Description	Length unit for distance calculation.	
Selection	<i>SI units</i> <ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> </ul>	<i>US units</i> <ul style="list-style-type: none"> <li>▪ ft</li> <li>▪ in</li> </ul>
<b>Tank type</b>		
Navigation	 Setup → Tank type	
Prerequisite	<b>Medium type</b> (→  103) = <b>Liquid</b>	
Description	Select tank type.	

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Metallic</li> <li>■ Bypass / pipe</li> <li>■ Non metallic</li> <li>■ Mounted outside</li> <li>■ Coaxial</li> </ul>
<b>Factory setting</b>	Depending on the probe
<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ Depending on the probe some of the options mentioned above may not be available or there may be additional options.</li> <li>■ For coax probes and probes with metallic center washer <b>Tank type</b> parameter corresponds to the type of probe and cannot be changed.</li> </ul>

---

**Tube diameter** 






---


<b>Navigation</b>	  Setup → Tube diameter
<b>Prerequisite</b>	<b>Tank type</b> (→  91) = <b>Bypass / pipe</b>
<b>Description</b>	Specify diameter of bypass or stilling well.
<b>User entry</b>	0 to 9.999 m



---

**Medium group** 

---
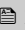
<b>Navigation</b>	  Setup → Medium group
<b>Prerequisite</b>	<b>Medium type</b> (→  103) = <b>Liquid</b>
<b>Description</b>	Select medium group.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Others</li> <li>■ Water based (DC &gt;= 4)</li> </ul>
<b>Additional information</b>	<p>This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the <b>Medium property</b> parameter (→  103).</p> <p>The <b>Medium group</b> parameter presets the <b>Medium property</b> parameter (→  103) as follows:</p>

Medium group	Medium property (→  103)
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

-  The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.
-  The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

---

**Empty calibration**

---




**Navigation**                       Setup → Empty calibr.

**Description**                      Distance process connection to min. level.


**User entry**                      Depending on the probe

**Factory setting**                      Depending on the probe

**Additional information**

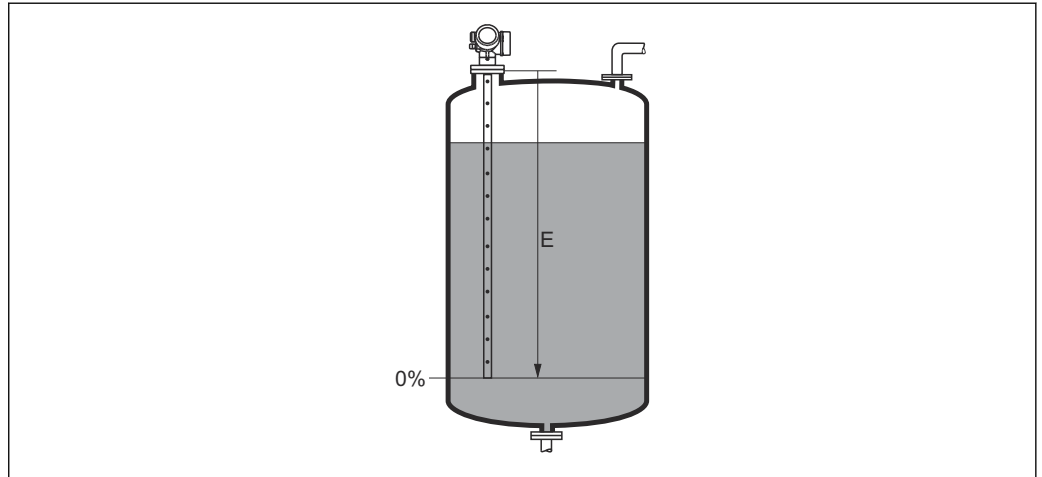

A0013178

 30    *Empty calibration (E) for level measurements in liquids*

---

**Full calibration**

---




**Navigation**                       Setup → Full calibr.

**Description**                      Span: max. level - min level.

**User entry**                      Depending on the probe

**Factory setting**                      Depending on the probe

**Additional information**

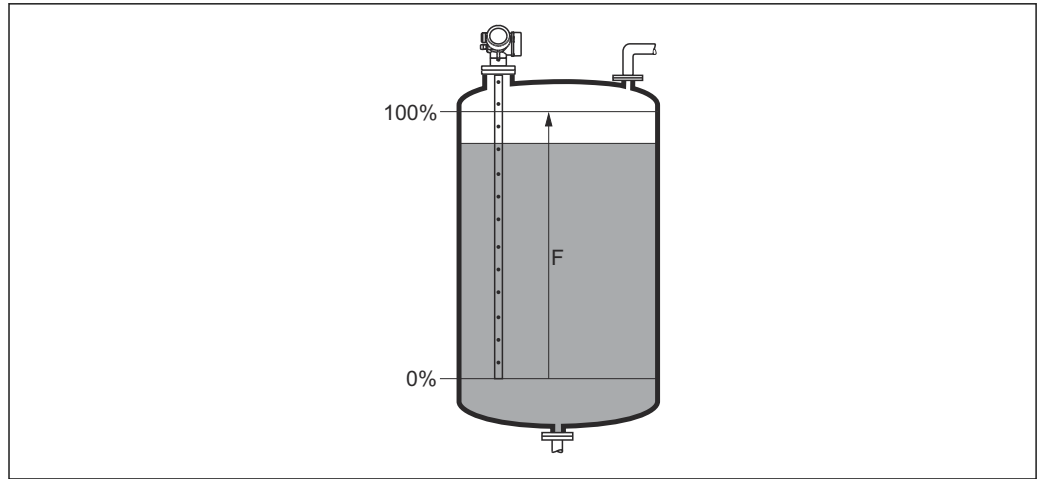

A0013186

31 Full calibration (F) for level measurements in liquids

**Level**


**Navigation**

☰☰ Setup → Level

**Description**

Displays measured level  $L_L$  (before linearization).

**Additional information**

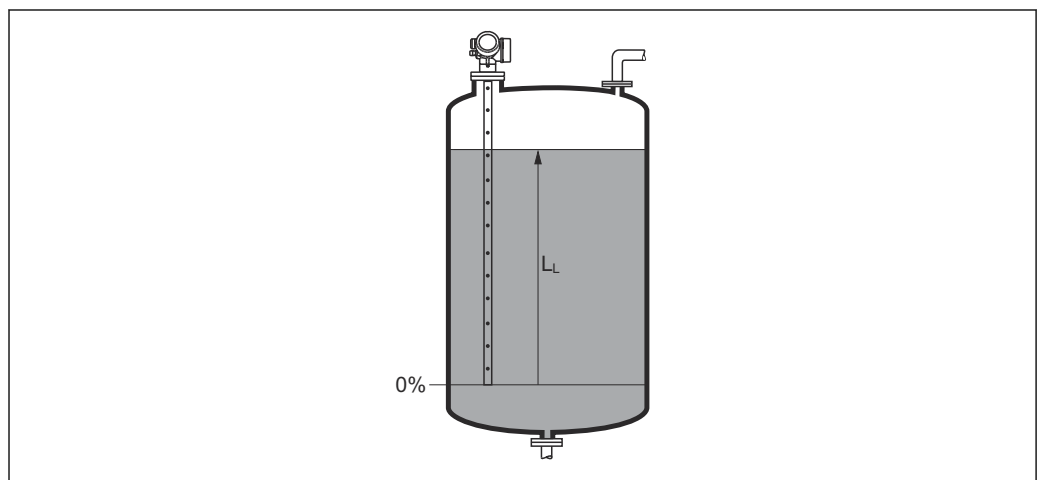

A0013194

32 Level in case of liquid measurements

**i** The unit is defined in the **Level unit** parameter (→ ☰ 106).

**Distance**


**Navigation**

☰☰ Setup → Distance


**Description**

Displays the measured distance  $D_L$  between the reference point (lower edge of the flange or threaded connection) and the level.

## Additional information

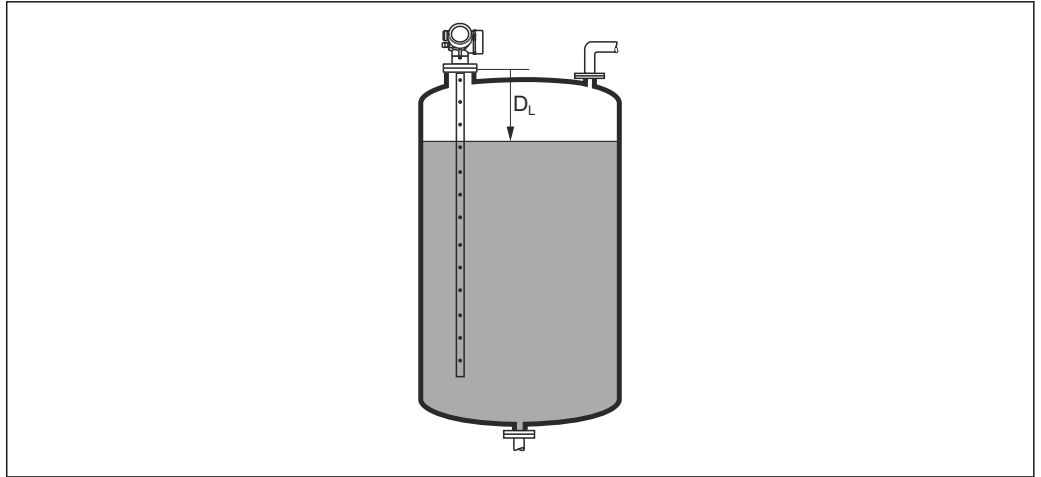



A0013198

 33 Distance for liquid measurements

 The unit is defined in the **Distance unit** parameter (→  91).

## Signal quality

## Navigation

  Setup → Signal quality

## Description


Displays the signal quality of the evaluated echo.



## Additional information

**Meaning of the display options**

- **Strong**  
The evaluated echo exceeds the threshold by at least 10 mV.
- **Medium**  
The evaluated echo exceeds the threshold by at least 5 mV.
- **Weak**  
The evaluated echo exceeds the threshold by less than 5 mV.
- **No signal**  
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo <sup>1)</sup> or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.

 In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  118) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  118).

1) Of these two echos the one with the lower quality is indicated.

---

**Confirm distance**
**Navigation**

Setup → Confirm distance

**Description**

Specify, whether the measured distance matches the real distance.  
Depending on the selection the device automatically sets the range of mapping.

**Selection**

- Manual map
- Distance ok
- Distance unknown
- Distance too small<sup>\*</sup>
- Distance too big<sup>\*</sup>
- Tank empty
- Delete map

**Additional information****Meaning of the options**

- **Manual map**  
To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→ 97). In this case it is not necessary to confirm the distance.
  - **Distance ok**  
To be selected if the measured distance matches the actual distance. The device performs a mapping.
  - **Distance unknown**  
To be selected if the actual distance is unknown. A mapping can not be performed in this case.
  - **Distance too small**  
To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
  - **Distance too big<sup>2)</sup>**  
To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
  - **Tank empty**  
To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.  
To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range minus **Map gap to LN**.
  - **Factory map**  
To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.
- When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
- If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

---

\* Visibility depends on order options or device settings


2) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"



---

**Present mapping**




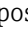

---

<b>Navigation</b>	 Setup → Present mapping
<b>Description</b>	Indicates up to which distance a mapping has already been recorded.

---

**Mapping end point**






---

<b>Navigation</b>	 Setup → Map. end point
<b>Prerequisite</b>	<b>Confirm distance</b> (→  96) = <b>Manual map</b> or <b>Distance too small</b>
<b>Description</b>	Specify new end of the mapping.
<b>User entry</b>	0 to 200 000.0 m
<b>Additional information</b>	<p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p> For reference purposes the <b>Present mapping</b> parameter (→  97) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.</p>



---

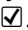
**Record map**


---

<b>Navigation</b>	 Setup → Record map
<b>Prerequisite</b>	<b>Confirm distance</b> (→  96) = <b>Manual map</b> or <b>Distance too small</b>
<b>Description</b>	Start recording of the map.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Record map</li> <li>■ Delete map</li> </ul>
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>■ <b>No</b> The map is not recorded.</li> <li>■ <b>Record map</b> The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing .</li> <li>■ <b>Delete map</b> The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing .</li> </ul>

### 16.3.1 "Mapping" wizard

 The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  91).

 In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

*Navigation*            Setup → Mapping

---


#### Confirm distance

**Navigation**            Setup → Mapping → Confirm distance

**Description**      →  96

---

#### Mapping end point

**Navigation**            Setup → Mapping → Map. end point

**Description**      →  97

---

#### Record map

**Navigation**            Setup → Mapping → Record map

**Description**      →  97


---

#### Distance


**Navigation**            Setup → Mapping → Distance





**Description**      →  94



### 16.3.2 "Analog input 1 to 6" submenu

 There is an **Analog input** submenu for each AI block of the device. The AI block is used to configure the measured value transmission to the bus.

Only the most basic properties of the AI blocks can be configured in this submenu. For a detailed configuration of the AI blocks refer to Expert → Analog inputs → Analog input 1 to 6.

*Navigation*  Expert → Analog inputs → Analog input 1 to 6

<b>Channel</b>	
<b>Navigation</b>	  Expert → Analog inputs → Analog input 1 to 6 → Channel
<b>Description</b>	Standard parameter <b>CHANNEL</b> of the Analog Input Block according to the PROFIBUS Profile.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Interface linearized *</li> <li>■ Interface distance *</li> <li>■ Thickness upper layer *</li> <li>■ Terminal voltage</li> <li>■ Electronic temperature</li> <li>■ Measured capacitance *</li> <li>■ Absolute echo amplitude</li> <li>■ Relative echo amplitude</li> <li>■ Absolute interface amplitude *</li> <li>■ Relative interface amplitude *</li> <li>■ Absolute EOP amplitude</li> <li>■ Noise of signal</li> <li>■ EOP shift</li> <li>■ Calculated DC value *</li> <li>■ Sensor debug</li> <li>■ Analog output adv. diagnostics 1</li> <li>■ Analog output adv. diagnostics 2</li> </ul>
<b>Additional information</b>	Allocates a measured value to the AI block.
<b>PV filter time</b>	

<b>Navigation</b>	  Expert → Analog inputs → Analog input 1 to 6 → PV filter time
<b>Description</b>	Standard parameter <b>PV_FTIME</b> of the Analog Input Block according to the PROFIBUS profile.
<b>User entry</b>	Positive floating-point number


\* Visibility depends on order options or device settings

**Additional information** This parameter defines the damping constant  $\tau$  (in seconds) for the output of the Analog Input Block.

---

## Fail safe type

---


**Navigation**   Expert → Analog inputs → Analog input 1 to 6 → Fail safe type

**Description** Standard parameter **FSAFE\_TYPE** of the Analog Input Block according to the PROFIBUS profile.

**Selection**

- Fail safe value
- Fallback value
- Off


**Additional information** **Meaning of the options**  
This parameter specifies the output value of the Analog Input block in the event of an error.

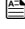- **Fail safe value**  
The output value in the event of an error is defined in the **Fail safe value** parameter (→  100).
- **Fallback value**  
The last output value that was valid before the error occurred is retained.
- **Off**  
The output value follows the current measured value. The status is set to BAD.

---

## Fail safe value

---

**Navigation**   Expert → Analog inputs → Analog input 1 to 6 → Fail safe value

**Prerequisite** **Fail safe type (→  100) = Fail safe value**

**Description** Standard parameter **FSAFE\_VALUE** of the Analog Input Block according to the PROFIBUS profile.

**User entry** Signed floating-point number

**Additional information** This parameter defines the output value of the Analog Input Block in case of an error.





### 16.3.3 "Advanced setup" submenu

Navigation  Setup → Advanced setup

---

#### Locking status






---

<b>Navigation</b>	  Setup → Advanced setup → Locking status
<b>Description</b>	Indicates the write protection with the highest priority that is currently active.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Hardware locked</li> <li>▪ SIL locked</li> <li>▪ WHG locked</li> <li>▪ Temporarily locked</li> </ul>
<b>Additional information</b>	<p><b>Meaning and priorities of the types of write protection</b></p> <ul style="list-style-type: none"> <li>▪ <b>Hardware locked (priority 1)</b> The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.</li> <li>▪ <b>SIL locked (priority 2)</b> The SIL mode is activated. Writing access to the relevant parameters is denied.</li> <li>▪ <b>WHG locked (priority 3)</b> The WHG mode is activated. Writing access to the relevant parameters is denied.</li> <li>▪ <b>Temporarily locked (priority 4)</b> Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.</li> </ul> <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

---

#### Access status tooling






---

<b>Navigation</b>	 Setup → Advanced setup → Access stat.tool
<b>Description</b>	Shows the access authorization to the parameters via the operating tool.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  102).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  101).</p>

---

**Access status display**







---

<b>Navigation</b>	 Setup → Advanced setup → Access stat.disp
<b>Prerequisite</b>	The device has a local display.
<b>Description</b>	Indicates access authorization to parameters via local display.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  102).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  101).</p>

---


**Enter access code**




---


<b>Navigation</b>	 Setup → Advanced setup → Ent. access code
<b>Description</b>	Enter access code to disable write protection of parameters.
<b>User entry</b>	0 to 9999
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ The customer-specific access code that was defined in the <b>Define access code</b> parameter (→  142) must be entered for local operation.</li> <li>▪ If an incorrect access code is entered, users retain their current access authorization.</li> <li>▪ The write protection affects all parameters marked with the  symbol in the document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</li> <li>▪ If no key is pressed for 10 minutes or the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.</li> </ul> <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p>




**"Level" submenu**

*Navigation*       Setup → Advanced setup → Level

**Medium type** 

<b>Navigation</b>	 Setup → Advanced setup → Level → Medium type
<b>Description</b>	Specify type of medium.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Liquid</li> <li>■ Solid</li> </ul>
<b>Factory setting</b>	FMP50, FMP51, FMP52, FMP53, FMP54, FMP55: <b>Liquid</b>
<b>Additional information</b>	 This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended <b>not to change</b> the factory setting.

**Medium property** 

<b>Navigation</b>	 Setup → Advanced setup → Level → Medium property
<b>Prerequisite</b>	<b>EOP level evaluation ≠ Fix DC</b>
<b>Description</b>	Specify the dielectric constant $\epsilon_r$ of the medium.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Unknown</li> <li>■ DC 1.4 ... 1.6</li> <li>■ DC 1.6 ... 1.9</li> <li>■ DC 1.9 ... 2.5</li> <li>■ DC 2.5 ... 4</li> <li>■ DC 4 ... 7</li> <li>■ DC 7 ... 15</li> <li>■ DC &gt; 15</li> </ul>
<b>Factory setting</b>	Depends on the <b>Medium type</b> (→  103) and <b>Medium group</b> (→  92) parameters.

**Additional information** *Dependency of "Medium type" and "Medium group"*

Medium type (→ ⓘ 103)	Medium group (→ ⓘ 92)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

**i** For the relative permittivity values ( $\epsilon_r$  values) of many media commonly used in industry, please refer to:

- Relative permittivity ( $\epsilon_r$  value), Compendium CP01076F
- The Endress+Hauser "DC Values app" (available for Android and iOS)

**i** If **EOP level evaluation = Fix DC**, the exact dielectric constant must be specified in the **DC value** parameter. The **Medium property** parameter therefore does not apply in this case.

**Process property**



**Navigation** Setup → Advanced setup → Level → Process property

**Description** Specify typical rate of level change.

- Selection**
- For "Medium type" = "Liquid"**
- Very fast > 10 m (400 in)/min
  - Fast > 1 m (40 in)/min
  - Standard < 1 m (40in) /min
  - Medium < 10 cm (4in) /min
  - Slow < 1 cm (0.4in) /min
  - No filter / test
- For "Medium type" = "Solid"**
- Very fast > 100 m (333 ft) /h
  - Fast > 10 m (33 ft) /h
  - Standard < 10 m (33 ft) /h
  - Medium < 1 m (3ft) /h
  - Slow < 0.1 m (0.3ft) /h
  - No filter / test

**Additional information** The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

*For "Operating mode" = "Level" and "Medium type" = "Liquid"*

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	14
Medium < 10 cm (4in) /min	39
Slow < 1 cm (0.4in) /min	76
No filter / test	< 1



For "Operating mode" = "Level" and "Medium type" = "Solid"

Process property	Step response time / s
Very fast > 100 m (333 ft) /h	37
Fast > 10 m (33 ft) /h	37
Standard < 10 m (33 ft) /h	74
Medium < 1 m (3ft) /h	146
Slow < 0.1 m (0.3ft) /h	290
No filter / test	< 1

For "Operating mode" = "Interface" or "Interface with capacitance"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	23
Medium < 10 cm (4in) /min	47
Slow < 1 cm (0.4in) /min	81
No filter / test	2.2

## Advanced process conditions



### Navigation

Setup → Advanced setup → Level → Adv. conditions

### Description

Specify additional process conditions (if required).

### Selection

- None
- Oil/Water condensate
- Probe near tank bottom
- Build up
- Foam (>5cm/0,16ft)

### Additional information

#### Meaning of the options

- **Oil/Water condensate** (only **Medium type = Liquid**)  
Makes sure that in the case of two-phase media only the total level is detected (example: oil/condensate application).
- **Probe near tank bottom** (only for **Medium type = Liquid**)  
Improves the empty detection, especially if the probe is mounted close to the tank bottom.
- **Build up**  
Increases **EOP range upper area** in order to ensure a safe empty-detection even if the end-of-probe signal has shifted due to build-up.  
Enables a safe empty-detection even if the end-of-probe signal has shifted due to build-up.
- **Foam (>5cm/0,16ft)** (only for **Medium type = Liquid**)  
Optimizes the signal evaluation in applications with foam formation.

---

**Level unit**
**Navigation**

Setup → Advanced setup → Level → Level unit

**Description**

Select level unit.

**Selection***SI units*

- %
- m
- mm

*US units*

- ft
- in

**Additional information**

The level unit may differ from the distance unit defined in the **Distance unit** parameter (→ 91):

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→ 93) and **Full calibration** (→ 93)).
- The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level.

---

**Blocking distance**
**Navigation**

Setup → Advanced setup → Level → Blocking dist.

**Description**

Specify upper blocking distance UB.

**User entry**

0 to 200 m

**Factory setting**

For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)

**Additional information**

Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.



This behavior is only valid if the following two conditions are met:

- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
- Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**


If one of these conditions is not met, signals in the blocking distance will always be ignored.



A different behavior for signals in the blocking distance can be defined in the **Blocking distance evaluation mode** parameter.



If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

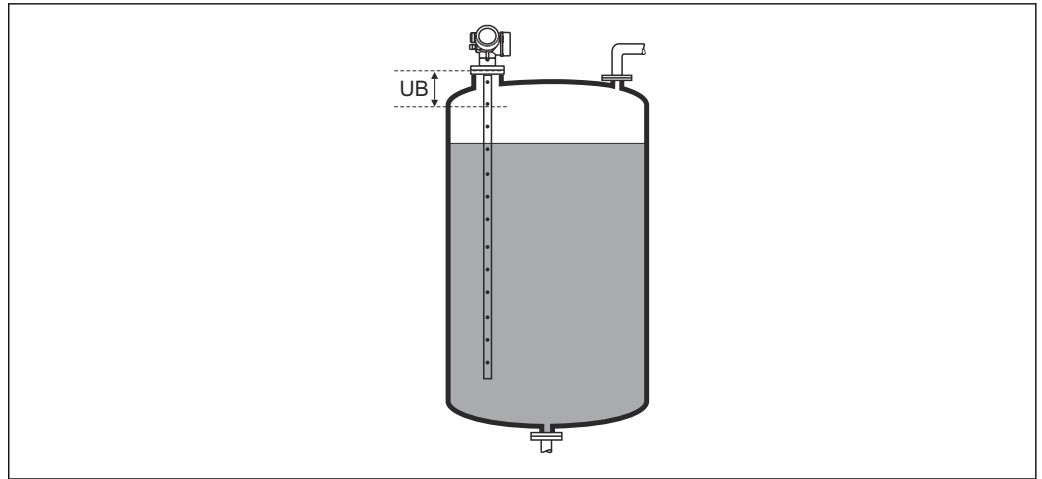

A0013219

34 Blocking distance (UB) for liquid measurements

**Level correction**



**Navigation**

Setup → Advanced setup → Level → Level correction

**Description**

Specify level correction (if required).


**User entry**

-200 000.0 to 200 000.0 %

**Additional information**

The value specified in this parameter is added to the measured level (before linearization).

"Linearization" submenu

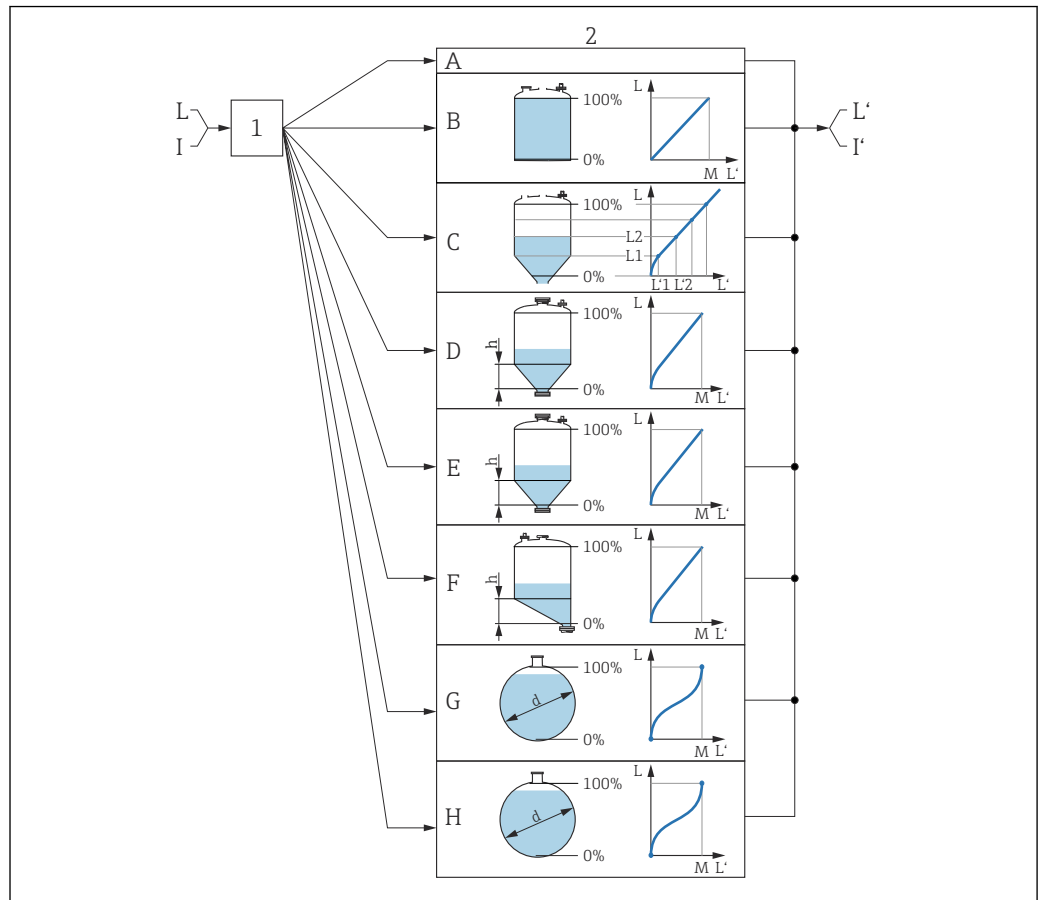


A0016084

35 Linearization: Conversion of the level and, if applicable, interface into a volume or a weight; the conversion depends on the vessel shape

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 111) = None
- B Linearization type (→ 111) = Linear
- C Linearization type (→ 111) = Table
- D Linearization type (→ 111) = Pyramid bottom
- E Linearization type (→ 111) = Conical bottom
- F Linearization type (→ 111) = Angled bottom
- G Linearization type (→ 111) = Horizontal cylinder
- H Linearization type (→ 111) = Sphere
- I For "Operating mode" = "Interface" or "Interface with capacitance": interface before linearization (measured in the level unit)
- I' For "Operating mode" = "Interface" or "Interface with capacitance": interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in level unit)
- L' Level linearized (→ 114) (corresponds to volume or weight)
- M Maximum value (→ 114)
- d Diameter (→ 114)
- h Intermediate height (→ 115)

*Structure of the submenu on the local display*

Navigation  Setup → Advanced setup → Linearization

► **Linearization**

Linearization type

Unit after linearization

Free text

Maximum value

Diameter

Intermediate height

Table mode


► **Edit table**

Level

Customer value

Activate table

Structure of the submenu in the operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

► **Linearization**

Linearization type

Unit after linearization

Free text

Level linearized

Maximum value

Diameter

Intermediate height

Table mode

Table number


Level


Level

Customer value

Activate table

*Description of the parameters*

Navigation  Setup → Advanced setup → Linearization


**Linearization type** 

**Navigation**  Setup → Advanced setup → Linearization → Lineariz. type


**Description** Select linearization type.

- Selection**
- None
  - Linear
  - Table
  - Pyramid bottom
  - Conical bottom
  - Angled bottom
  - Horizontal cylinder
  - Sphere

**Additional information**

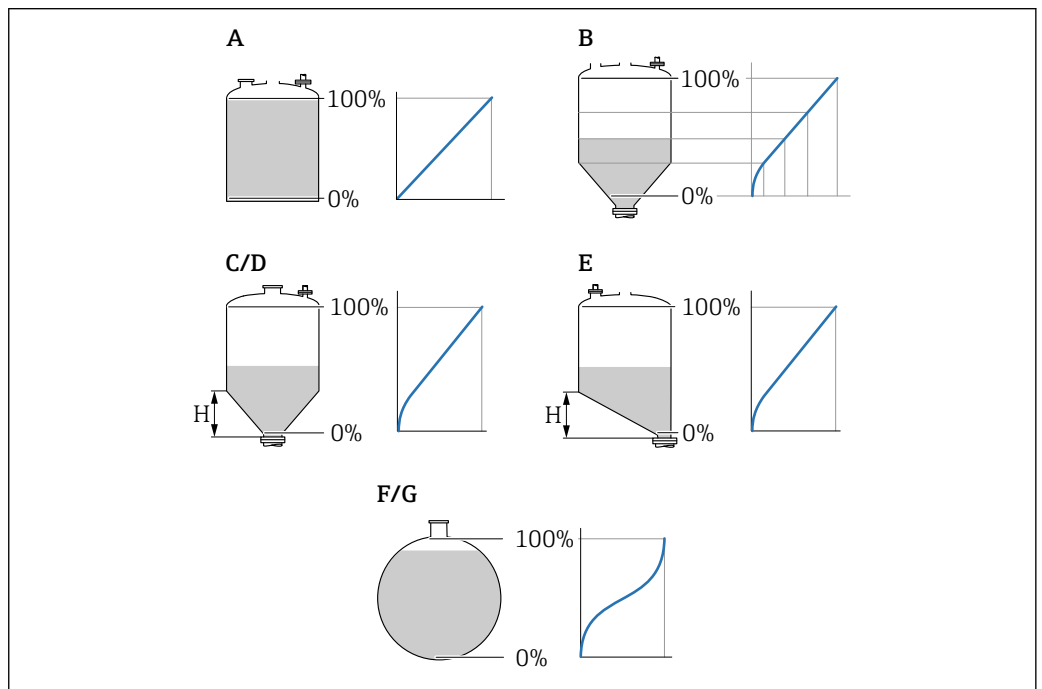

A0021476

 36 Linearization types

- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder


**Meaning of the options**


- **None**

The level is output in the level unit without being converted (linearized) beforehand.

- **Linear**


The output value (volume/weight) is proportional to the level L. This applies, for example, to vertical cylindrical tanks and silos. The following parameters must also be specified:


- **Unit after linearization** (→  112)


- **Maximum value** (→  114): maximum volume or weight


- **Table**


The relationship between the measured level L and the output value (volume/weight) is defined by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight" respectively. The following parameters must also be specified:

- **Unit after linearization** (→  112)

- **Table mode** (→  115)

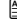- For every point in the table: **Level** (→  116)


- For every point in the table: **Customer value** (→  117)


- **Activate table** (→  117)


- **Pyramid bottom**

The output value corresponds to the volume or weight in a silo with a pyramid bottom.

The following parameters must also be specified:

- **Unit after linearization** (→  112)


- **Maximum value** (→  114): maximum volume or weight


- **Intermediate height** (→  115): the height of the pyramid

- **Conical bottom**

The output value corresponds to the volume or weight in a tank with a conical bottom.

The following parameters must also be specified:

- **Unit after linearization** (→  112)


- **Maximum value** (→  114): maximum volume or weight


- **Intermediate height** (→  115): the height of the cone


- **Angled bottom**

The output value corresponds to the volume or weight in a silo with an angled bottom.

The following parameters must also be specified:


- **Unit after linearization** (→  112)


- **Maximum value** (→  114): maximum volume or weight

- **Intermediate height** (→  115): height of the angled bottom

- **Horizontal cylinder**

The output value corresponds to the volume or weight in a horizontal cylinder. The following parameters must also be specified:


- **Unit after linearization** (→  112)


- **Maximum value** (→  114): maximum volume or weight


- **Diameter** (→  114)

- **Sphere**

The output value corresponds to the volume or weight in a spherical tank. The following parameters must also be specified:



- **Unit after linearization** (→  112)

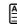- **Maximum value** (→  114): maximum volume or weight


- **Diameter** (→  114)

---

**Unit after linearization**
**Navigation**

  Setup → Advanced setup → Linearization → Unit lineariz.

**Prerequisite**

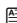**Linearization type** (→  111) ≠ None


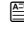


**Description** Select the unit for the linearized value.

**Selection** Selection/input (uint16)

- 1095 = [short Ton]
- 1094 = [lb]
- 1088 = [kg]
- 1092 = [Ton]
- 1048 = [US Gal.]
- 1049 = [Imp. Gal.]
- 1043 = [ft<sup>3</sup>]
- 1571 = [cm<sup>3</sup>]
- 1035 = [dm<sup>3</sup>]
- 1034 = [m<sup>3</sup>]
- 1038 = [l]
- 1041 = [hl]
- 1342 = [%]
- 1010 = [m]
- 1012 = [mm]
- 1018 = [ft]
- 1019 = [inch]
- 1351 = [l/s]
- 1352 = [l/min]
- 1353 = [l/h]
- 1347 = [m<sup>3</sup>/s]
- 1348 = [m<sup>3</sup>/min]
- 1349 = [m<sup>3</sup>/h]
- 1356 = [ft<sup>3</sup>/s]
- 1357 = [ft<sup>3</sup>/min]
- 1358 = [ft<sup>3</sup>/h]
- 1362 = [US Gal./s]
- 1363 = [US Gal./min]
- 1364 = [US Gal./h]
- 1367 = [Imp. Gal./s]
- 1358 = [Imp. Gal./min]
- 1359 = [Imp. Gal./h]
- 32815 = [ML/s]
- 32816 = [ML/min]
- 32817 = [ML/h]
- 1355 = [ML/d]



**Additional information** The selected unit is only used for display purposes. The measured value is **not** converted on the basis of the selected unit.

 Distance-to-distance linearization is also possible, i.e. a linearization from the level unit to another length unit. Select the **Linear** linearization mode for this purpose. To specify the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the unit in the **Free text** parameter (→  113).

---

**Free text**



**Navigation**   Setup → Advanced setup → Linearization → Free text

**Prerequisite** **Unit after linearization** (→  112) = **Free text**

**Description** Enter unit symbol.

**User entry** Up to 32 alphanumerical characters (letters, numbers, special characters)


---

### Level linearized

---

**Navigation**  Setup → Advanced setup → Linearization → Level linearized

**Description** Displays linearized level.


**Additional information**  This unit is defined by the **Unit after linearization** parameter.

---

### Maximum value

---

**Navigation**   Setup → Advanced setup → Linearization → Maximum value

**Prerequisite** **Linearization type** (→  111) has one of the following values:



- Linear
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

**User entry** -50 000.0 to 50 000.0 %

---

### Diameter

---

**Navigation**   Setup → Advanced setup → Linearization → Diameter

**Prerequisite** **Linearization type** (→  111) has one of the following values:

- Horizontal cylinder
- Sphere

**User entry** 0 to 9 999.999 m

**Additional information** The unit is defined in the **Distance unit** parameter (→  91).

## Intermediate height 🔒

### Navigation

🏠📄 Setup → Advanced setup → Linearization → Intermed. height

### Prerequisite


**Linearization type** (→ 📄 111) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom

### User entry

0 to 200 m

### Additional information

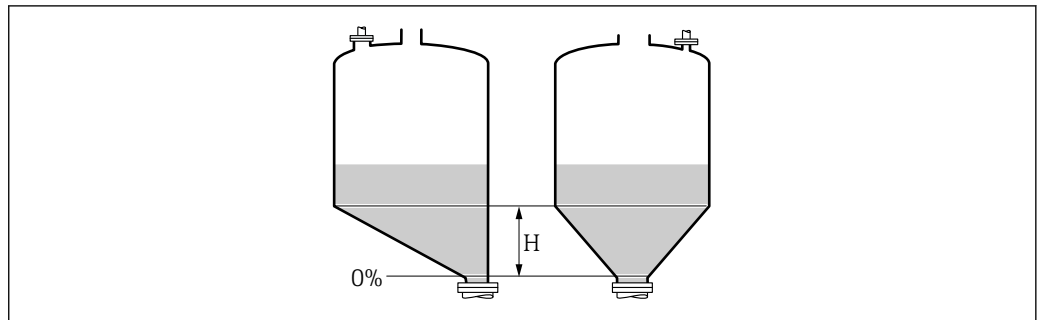

A0013264

*H* Intermediate height

The unit is defined in the **Distance unit** parameter (→ 📄 91).

## Table mode 🔒

### Navigation

🏠📄 Setup → Advanced setup → Linearization → Table mode

### Prerequisite

**Linearization type** (→ 📄 111) = Table

### Description

Select editing mode of the linearization table.

### Selection

- Manual
- Semiautomatic \*
- Clear table
- Sort table

### Additional information


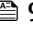

#### Meaning of the options


- **Manual**  
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**  
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**  
Deletes the existing linearization table.
- **Sort table**  
Rearranges the linearization points into an ascending order.

\* Visibility depends on order options or device settings




**Conditions the linearization table must meet:**



- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

 Before entering a linearization table, the values for **Empty calibration** (→  93) and **Full calibration** (→  93) must be set correctly.


If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  115) = **Clear table**). Then enter a new table.

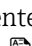**How to enter the table**



- Via FieldCare  
The table points can be entered via the **Table number** (→  116), **Level** (→  116) and **Customer value** (→  117) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- Via local display  
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  106) beforehand.


---

**Table number** 


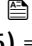

---

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Table number
<b>Prerequisite</b>	<b>Linearization type</b> (→  111) = <b>Table</b>
<b>Description</b>	Select table point you are going to enter or change.
<b>User entry</b>	1 to 32

---

**Level (Manual)** 




---

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Level
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>■ <b>Linearization type</b> (→  111) = <b>Table</b></li> <li>■ <b>Table mode</b> (→  115) = <b>Manual</b></li> </ul>
<b>Description</b>	Enter level value of the table point (value before linearization).
<b>User entry</b>	Signed floating-point number

---

**Level (Semiautomatic)**




---

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Level
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Linearization type</b> (→  111) = <b>Table</b></li> <li>▪ <b>Table mode</b> (→  115) = <b>Semiautomatic</b></li> </ul>
<b>Description</b>	Displays measured level (value before linearization). This value is transmitted to the table.

---

**Customer value**







---

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Customer value
<b>Prerequisite</b>	<b>Linearization type</b> (→  111) = <b>Table</b>
<b>Description</b>	Enter linearized value for the table point.
<b>User entry</b>	Signed floating-point number


---


**Activate table**





---


<b>Navigation</b>	  Setup → Advanced setup → Linearization → Activate table
<b>Prerequisite</b>	<b>Linearization type</b> (→  111) = <b>Table</b>
<b>Description</b>	Activate (enable) or deactivate (disable) the linearization table.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ <b>Disable</b></li> <li>▪ <b>Enable</b></li> </ul>
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>Disable</b> The measured level is not linearized. If <b>Linearization type</b> (→  111) = <b>Table</b> at the same time, the device issues error message F435.</li> <li>▪ <b>Enable</b> The measured level is linearized according to the table.</li> </ul> <p> When editing the table, the <b>Activate table</b> parameter is automatically reset to <b>Disable</b> and must be reset to <b>Enable</b> after the table has been entered.</p>





**"Safety settings" submenu**

*Navigation*  Setup → Advanced setup → Safety sett.

**Output echo lost** 

<b>Navigation</b>	 Setup → Advanced setup → Safety sett. → Output echo lost
<b>Description</b>	Output signal in case of a lost echo.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Last valid value</li> <li>■ Ramp at echo lost</li> <li>■ Value echo lost</li> <li>■ Alarm</li> </ul>
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>■ <b>Last valid value</b> The last valid value is kept in the case of a lost echo.</li> <li>■ <b>Ramp at echo lost</b> <sup>3)</sup> In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the <b>Ramp at echo lost</b> parameter (→  119).</li> <li>■ <b>Value echo lost</b> <sup>3)</sup> In the case of a lost echo the output assumes the value defined in the <b>Value echo lost</b> parameter (→  118).</li> <li>■ <b>Alarm</b> In the case of a lost echo the device generates an alarm; see the <b>Failure mode</b> parameter</li> </ul>

**Value echo lost** 

<b>Navigation</b>	 Setup → Advanced setup → Safety sett. → Value echo lost
<b>Prerequisite</b>	<b>Output echo lost (→  118) = Value echo lost</b>
<b>Description</b>	Output value in case of a lost echo
<b>User entry</b>	0 to 200 000.0 %
<b>Additional information</b>	<p>Use the unit which has been defined for the measured value output:</p> <ul style="list-style-type: none"> <li>■ without linearization: <b>Level unit (→  106)</b></li> <li>■ with linearization: <b>Unit after linearization (→  112)</b></li> </ul>

<sup>3)</sup> Only visible if "Linearization type (→  111)" = "None"

**Ramp at echo lost**




**Navigation**                      Setup → Advanced setup → Safety sett. → Ramp echo lost

**Prerequisite**                      **Output echo lost (→ 118) = Ramp at echo lost**

**Description**                      Slope of the ramp in the case of a lost echo

**User entry**                      Signed floating-point number

**Additional information**

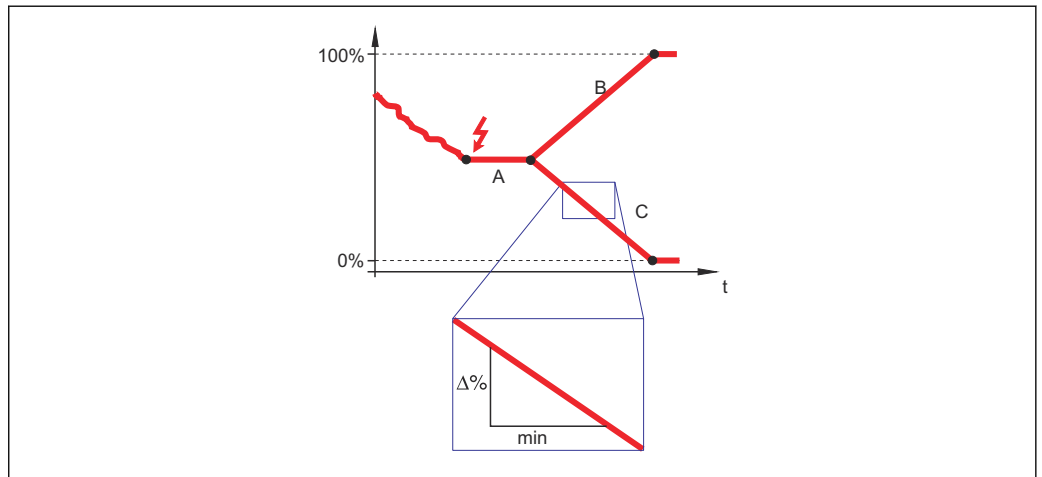

A0013269

- A    Delay time echo lost
- B    Ramp at echo lost (→ 119) (positive value)
- C    Ramp at echo lost (→ 119) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

**Blocking distance**



**Navigation**                      Setup → Advanced setup → Safety sett. → Blocking dist.

**Description**                      Specify upper blocking distance UB.

**User entry**                      0 to 200 m

**Factory setting**                      For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)

**Additional information**                      Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance


due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
  - Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

- i** A different behavior for signals in the blocking distance can be defined in the **Blocking distance evaluation mode** parameter.

- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

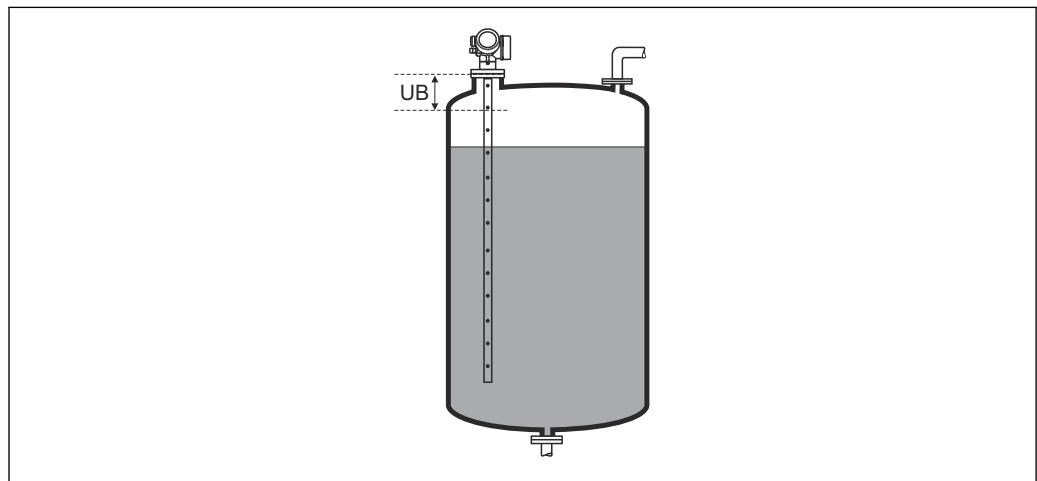

A0013219

**i** 37 Blocking distance (UB) for liquid measurements



**"WHG confirmation" wizard**

The **WHG confirmation** wizard is only available for devices with WHG approval (Feature 590: "Additional Approval", option LC: "WHG overfill prevention" ) which are currently not in the WHG-locked state.



The **WHG confirmation** wizard is used to lock the device according to WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.


*Navigation*



Setup → Advanced setup → WHG confirmation

**"Deactivate WHG" wizard**

 The **Deactivate WHG** wizard (→  122) is only visible if the device is WHG-locked. For details refer to the "Functional Safety Manual" of the respective device.


*Navigation*       Setup → Advanced setup → Deactivate WHG

**Reset write protection** 

**Navigation**       Setup → Advanced setup → Deactivate WHG → Res. write prot.

**Description**      Enter unlocking code.

**User entry**      0 to 65 535

**Code incorrect** 


**Navigation**       Setup → Advanced setup → Deactivate WHG → Code incorrect





**Description**      Indicates that a wrong unlocking code has been entered. Select procedure.



**Selection**



- Reenter code
- Abort sequence

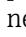





**"Probe settings" submenu**

The **Probe settings** submenu helps to ensure that the device correctly assigns the end of probe signal within the envelope curve. The assignment is correct if the length of probe indicated by the device matches the actual length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium) over the entire length. For partially filled vessels and if the probe length is known, select **Confirm probe length** (→  124) = **Manual input** to enter the value manually.

-  If a mapping has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. There are two options if this occurs:
  - First delete the mapping curve using the **Record map** parameter (→  97) and the probe length correction can then be performed. After the probe length correction, a new mapping curve can be recorded using the **Record map** parameter (→  97).
  - Alternatively, select **Confirm probe length** (→  124) = **Manual input** and manually enter the probe length in the **Present probe length** parameter.

-  An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter (→  123).

*Navigation*        Setup → Advanced setup → Probe settings

Probe grounded 	
<b>Navigation</b>	  Setup → Advanced setup → Probe settings → Probe grounded
<b>Prerequisite</b>	<b>Operating mode = Level</b>
<b>Description</b>	Specify whether the probe is grounded.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>
Present probe length 	
<b>Navigation</b>	 Setup → Advanced setup → Probe settings → Pres. length
<b>Description</b>	<ul style="list-style-type: none"> <li>▪ In most cases: Displays the length of the probe according to the currently measured end-of-probe signal.</li> <li>▪ For <b>Confirm probe length</b> (→  124) = <b>Manual input</b>: Enter actual length of probe.</li> </ul>
<b>User entry</b>	0 to 200 m

---

**Confirm probe length**
**Navigation**

Setup → Advanced setup → Probe settings → Confirm length

**Description**

Specify whether the value displayed in the **Present probe length** parameter matches the actual length of the probe. Based on this input, the device performs a probe length correction.

**Selection**

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

**Additional information****Meaning of the options**

- **Probe length OK**  
To be selected if the correct probe length is displayed. A correction is not required. The device exits the sequence.
- **Probe length too small**  
To be selected if the displayed length is less than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe length too big**  
To be selected if the displayed length is greater than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe covered**  
To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case.
- **Manual input**  
To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually in the **Present probe length** parameter.<sup>4)</sup>
- **Probe length unknown**  
To be selected if the actual probe length is unknown. A probe length correction is impossible in this case.

---

4) When operating via FieldCare, the **Manual input** option does not need to be selected explicitly; manual editing of the probe length is always possible here.

*"Probe length correction" wizard*

The **Probe length correction** wizard is only available when operating via the local display. When operating via an operating tool, the parameters for probe length correction are located directly in the **Probe settings** submenu (→ 123).

*Navigation*

Setup → Advanced setup → Probe settings → Prob.length corr

**Confirm probe length****Navigation**

Setup → Advanced setup → Probe settings → Prob.length corr → Confirm length

**Description**

Specify whether the value displayed in the **Present probe length** parameter matches the actual length of the probe. Based on this input, the device performs a probe length correction.

**Selection**

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

**Additional information****Meaning of the options**

- **Probe length OK**  
To be selected if the correct probe length is displayed. A correction is not required. The device exits the sequence.
- **Probe length too small**  
To be selected if the displayed length is less than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe length too big**  
To be selected if the displayed length is greater than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe covered**  
To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case.
- **Manual input**  
To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually in the **Present probe length** parameter.<sup>5)</sup>
- **Probe length unknown**  
To be selected if the actual probe length is unknown. A probe length correction is impossible in this case.


5) When operating via FieldCare, the **Manual input** option does not need to be selected explicitly; manual editing of the probe length is always possible here.

---


**Present probe length**

---

**Navigation**

 Setup → Advanced setup → Probe settings → Prob.length corr → Pres. length


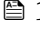
**Description**



- In most cases:  
Displays the length of the probe according to the currently measured end-of-probe signal.
- For **Confirm probe length** (→  124) = **Manual input**:  
Enter actual length of probe.

**User entry**



0 to 200 m

**"Switch output" submenu**

 The **Switch output** submenu (→  127) is only available for devices with a switch output.<sup>6)</sup>

*Navigation*        Setup → Advanced setup → Switch output

**Switch output function****Navigation**

  Setup → Advanced setup → Switch output → Switch out funct






**Description**


Select function for switch output.

**Selection**

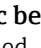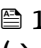

- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

**Additional information****Meaning of the options**


- **Off**  
The output is always open (non-conductive).
- **On**  
The output is always closed (conductive).
- **Diagnostic behavior**  
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  128) determines for which type of event the output is opened.
- **Limit**  
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
  - **Assign limit** (→  128)
  - **Switch-on value** (→  129)
  - **Switch-off value** (→  130)
- **Digital Output**  
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  127).

 The **Off** and **On** options can be used to simulate the switch output.

**Assign status****Navigation**

  Setup → Advanced setup → Switch output → Assign status

**Prerequisite**

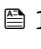**Switch output function** (→  127) = **Digital Output**

**Description**

Select device status for switch output.



6) Order code 020 "Power supply; output", option B, E or G


- Selection**
- Off
  - Digital output AD 1
  - Digital output AD 2
  - Digital output 1
  - Digital output 2
  - Digital output 3
  - Digital output 4

**Additional information** The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostics Blocks. A switch signal generated in these blocks can be output via the switch output.

---

## Assign limit

**Navigation**   Setup → Advanced setup → Switch output → Assign limit


**Prerequisite** **Switch output function (→  127) = Limit**

- Selection**
- Off
  - Level linearized
  - Distance
  - Interface linearized \*
  - Interface distance \*
  - Thickness upper layer \*
  - Terminal voltage
  - Electronic temperature
  - Measured capacitance \*
  - Relative echo amplitude
  - Relative interface amplitude \*
  - Absolute echo amplitude
  - Absolute interface amplitude \*

---

## Assign diagnostic behavior

**Navigation**   Setup → Advanced setup → Switch output → Assign diag. beh

**Prerequisite** **Switch output function (→  127) = Diagnostic behavior**

**Description** Select diagnostic behavior for switch output.

- Selection**
- Alarm
  - Alarm or warning
  - Warning

---

\* Visibility depends on order options or device settings



---

**Switch-on value**


---

**Navigation**

Setup → Advanced setup → Switch output → Switch-on value

**Prerequisite****Switch output function** (→ 127) = **Limit****Description**

Enter measured value for the switch-on point.

**User entry**


Signed floating-point number

**Additional information**

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

**Switch-on value > Switch-off value**

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

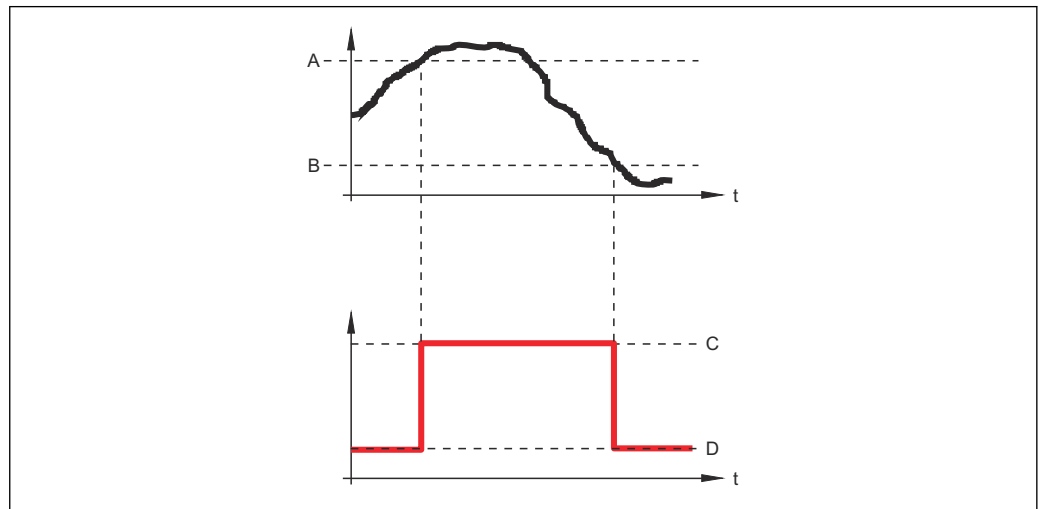


A0015585

- A *Switch-on value*  
 B *Switch-off value*  
 C *Output closed (conductive)*  
 D *Output opened (non-conductive)*

**Switch-on value < Switch-off value**

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

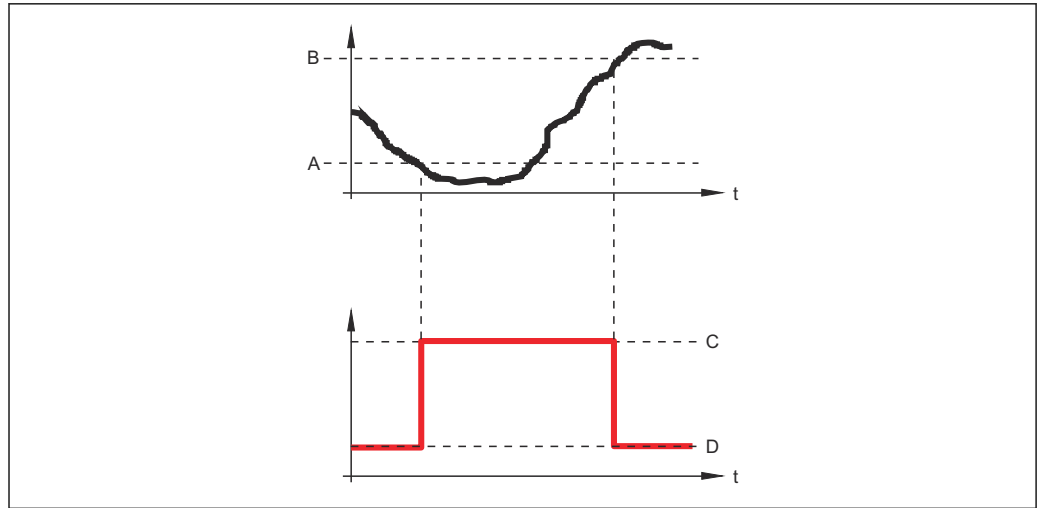

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



- Navigation** Setup → Advanced setup → Switch output → Switch-on delay
- Prerequisite**
  - **Switch output function** (→ 127) = **Limit**
  - **Assign limit** (→ 128) ≠ **Off**
- Description** Define delay for the switch-on of status output.
- User entry** 0.0 to 100.0 s

Switch-off value



- Navigation** Setup → Advanced setup → Switch output → Switch-off value
- Prerequisite** **Switch output function** (→ 127) = **Limit**
- Description** Enter measured value for the switch-off point.
- User entry** Signed floating-point number
- Additional information** The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters; description: see the **Switch-on value** parameter (→ 129).

---

**Switch-off delay**


<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch-off delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Switch output function</b> (→  127) = <b>Limit</b></li> <li>▪ <b>Assign limit</b> (→  128) ≠ <b>Off</b></li> </ul>
<b>Description</b>	Define delay for the switch-off of status output.
<b>User entry</b>	0.0 to 100.0 s

---

**Failure mode**


<b>Navigation</b>	Setup → Advanced setup → Switch output → Failure mode
<b>Prerequisite</b>	<b>Switch output function</b> (→  127) = <b>Limit</b> or <b>Digital Output</b>
<b>Description</b>	Define output behavior in alarm condition.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Actual status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul>

**Additional information**


---

**Switch status**

<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch status
<b>Description</b>	Shows the current switch output status.

---

**Invert output signal**


<b>Navigation</b>	Setup → Advanced setup → Switch output → Invert outp.sig.
<b>Description</b>	Invert the output signal.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>

**Additional information****Meaning of the options**

- **No**  
The behavior of the switch output is as described above.
- **Yes**  
The states **Open** and **Closed** are inverted as compared to the description above.

**"Display" submenu**

**Display** submenu is only visible if a display module is connected to the device.

*Navigation*



Setup → Advanced setup → Display

**Language****Navigation**

Setup → Advanced setup → Display → Language

**Description**

Set display language.

**Selection**

- English
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык (Russian) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- Bahasa Indonesia \*
- tiếng Việt (Vietnamese) \*
- čeština (Czech) \*

**Factory setting**

The language selected in feature 500 of the product structure.  
If no language has been selected: **English**

**Additional information****Format display****Navigation**

Setup → Advanced setup → Display → Format display

**Description**


Select how measured values are shown on the display.

**Selection**

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values


\* Visibility depends on order options or device settings

Additional information

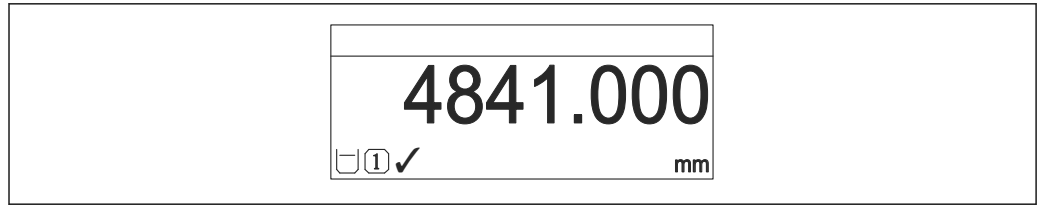


A0019963

38 "Format display" = "1 value, max. size"

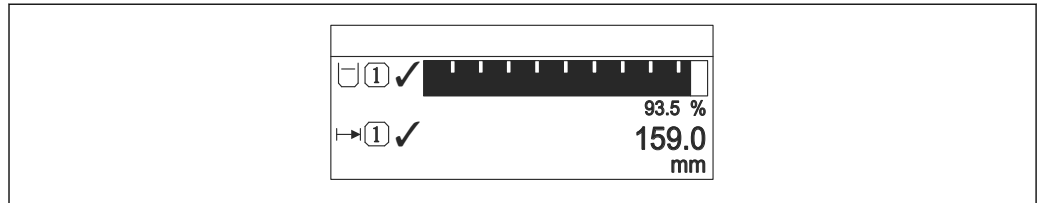


A0019964

39 "Format display" = "1 bargraph + 1 value"

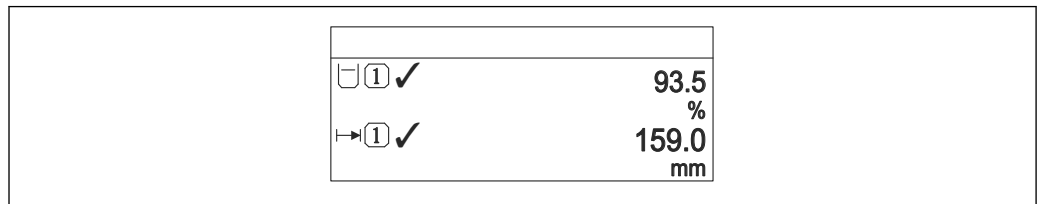


A0019965

40 "Format display" = "2 values"

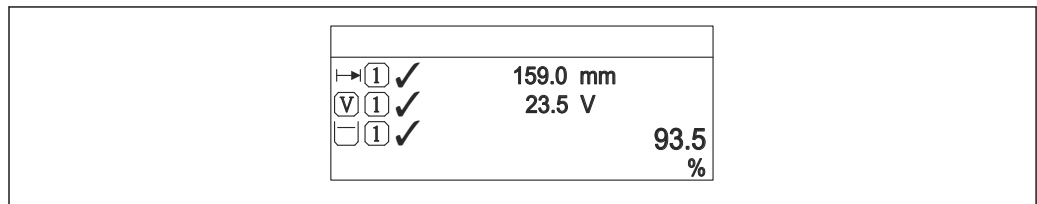

A0019966

41 "Format display" = "1 value large + 2 values"

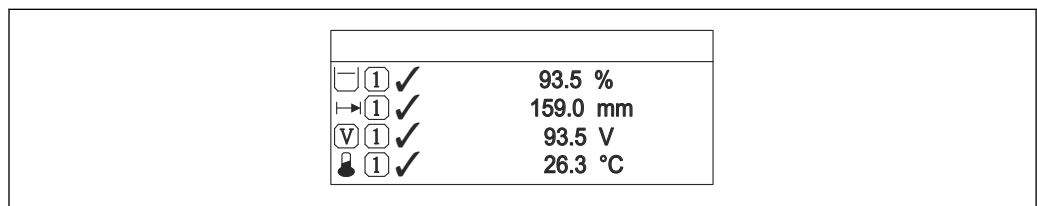

A0019968

42 "Format display" = "4 values"

- i** The **Value 1 to 4 display** parameters are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 135).

---

**Value 1 to 4 display**


<b>Navigation</b>	Setup → Advanced setup → Display → Value 1 display
<b>Description</b>	Select the measured value that is shown on the local display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Interface linearized *</li> <li>■ Interface distance *</li> <li>■ Thickness upper layer *</li> <li>■ Terminal voltage</li> <li>■ Electronic temperature</li> <li>■ Measured capacitance *</li> <li>■ Analog output 1</li> <li>■ Analog output 2</li> <li>■ Analog output 3</li> <li>■ Analog output 4</li> <li>■ Analog output adv. diagnostics 1</li> <li>■ Analog output adv. diagnostics 2</li> </ul>
<b>Factory setting</b>	<p><b>For level measurements</b></p> <ul style="list-style-type: none"> <li>■ Value 1 display: Level linearized</li> <li>■ Value 2 display: Distance</li> <li>■ Value 3 display: Current output 1</li> <li>■ Value 4 display: None</li> </ul>

---

**Decimal places 1 to 4**


<b>Navigation</b>	Setup → Advanced setup → Display → Decimal places 1
<b>Description</b>	Select the number of decimal places for the display value.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>
<b>Additional information</b>	The setting does not affect the measuring or computational accuracy of the device.

---

**Display interval**


<b>Navigation</b>	Setup → Advanced setup → Display → Display interval
<b>Description</b>	Set time measured values are shown on display if display alternates between values.



---

\* Visibility depends on order options or device settings

**User entry** 1 to 10 s


**Additional information** This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.


**Display damping** 

**Navigation**   Setup → Advanced setup → Display → Display damping

**Description** Set display reaction time to fluctuations in the measured value.

**User entry** 0.0 to 999.9 s


**Header** 

**Navigation**   Setup → Advanced setup → Display → Header

**Description** Select header contents on local display.

- Selection**
- Device tag
  - Free text


**Additional information**

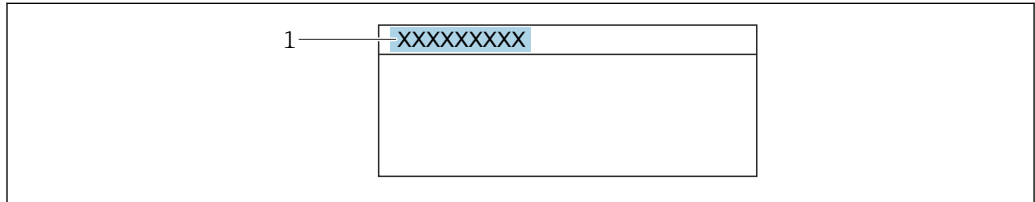



A0029422

1 Position of the header text on the display

*Meaning of the options*

- **Device tag**  
Is defined in the **Device tag** parameter.
- **Free text**  
Is defined in the **Header text** parameter (→  136).

**Header text** 

**Navigation**   Setup → Advanced setup → Display → Header text

**Prerequisite** **Header** (→  136) = **Free text**

**Description** Enter display header text.

**User entry** Character string comprising numbers, letters and special characters (12)





**Additional information** The number of characters which can be displayed depends on the characters used.

---

## Separator

---

**Navigation**   Setup → Advanced setup → Display → Separator

**Description** Select decimal separator for displaying numerical values.



**Selection**

- .
- ,

---

## Number format

---

**Navigation**   Setup → Advanced setup → Display → Number format

**Description** Choose number format for the display.

**Selection**



- Decimal
- ft-in-1/16"

**Additional information** The **ft-in-1/16"** option is only valid for distance units.

---

## Decimal places menu

---

**Navigation**   Setup → Advanced setup → Display → Dec. places menu

**Description** Select number of decimal places for the representation of numbers within the operating menu.

**Selection**

- x
- x.x
- x.xx
- x.xxx
- x.xxxx



**Additional information**

- Is only valid for numbers in the operating menu (e.g. **Empty calibration, Full calibration**), but not for the measured value display. The number of decimal places for the measured value display is defined in the **Decimal places 1 to 4** parameters
- This setting does not affect the accuracy of the device for measuring or calculating the value

---

## Backlight







---

<b>Navigation</b>	 Setup → Advanced setup → Display → Backlight
<b>Prerequisite</b>	The device has the SD03 local display (with optical keys).
<b>Description</b>	Switch the local display backlight on and off.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Disable</li><li>▪ Enable</li></ul>
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"><li>▪ <b>Disable</b> Switches the backlight off.</li><li>▪ <b>Enable</b> Switches the backlight on.</li></ul> <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p>

---

## Contrast display



---

<b>Navigation</b>	 Setup → Advanced setup → Display → Contrast display
<b>Description</b>	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
<b>User entry</b>	20 to 80 %
<b>Factory setting</b>	Dependent on the display.
<b>Additional information</b>	<p> Setting the contrast via push-buttons:</p> <ul style="list-style-type: none"><li>▪ Darker: press the   buttons simultaneously.</li><li>▪ Brighter: press the   buttons simultaneously.</li></ul>

**"Configuration backup display" submenu**

 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

*Navigation*        Setup → Advanced setup → Conf.backup disp

**Operating time**

**Navigation**        Setup → Advanced setup → Conf.backup disp → Operating time

**Description**      Indicates how long the device has been in operation.

**Additional information**      *Maximum time*  
 9 999 d ( ≈ 27 years)

**Last backup**

**Navigation**        Setup → Advanced setup → Conf.backup disp → Last backup

**Description**      Indicates when the last data backup was saved to the display module.




**Configuration management**



**Navigation**        Setup → Advanced setup → Conf.backup disp → Config. managem.

**Description**      Select action for managing the device data in the display module.


- Selection**
- Cancel
  - Execute backup
  - Restore
  - Duplicate
  - Compare
  - Clear backup data
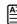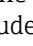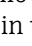
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>Cancel</b> No user is executed and the user exits the parameter.</li> <li>▪ <b>Execute backup</b> A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.</li> <li>▪ <b>Restore</b> The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.</li> <li>▪ <b>Duplicate</b> The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are <b>not</b> included in the transmitted configuration: Medium type</li> <li>▪ <b>Compare</b> The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the <b>Comparison result</b> parameter (→  140).</li> <li>▪ <b>Clear backup data</b> The backup copy of the device configuration is deleted from the display module of the device.</li> </ul> <p> While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.</p> <p> If an existing backup is restored to a different device using the <b>Restore</b> option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.</p> <p>In order to transmit a configuration to a different device, the <b>Duplicate</b> option should always be used.</p>
-------------------------------	--

---

### Backup state



---

<b>Navigation</b>	 Setup → Advanced setup → Conf.backup disp → Backup state
<b>Description</b>	Displays which backup action is currently in progress.

---

### Comparison result

---
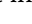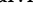
<b>Navigation</b>	  Setup → Advanced setup → Conf.backup disp → Compar. result
<b>Description</b>	Comparison between present device data and display backup.

**Additional information****Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

**■ Settings not identical**

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

**■ No backup available**

There is no backup copy of the device configuration of the HistoROM in the display module.

**■ Backup settings corrupt**

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.


**■ Check not done**

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.


**■ Dataset incompatible**

The data sets are incompatible and can not be compared.





To start the comparison, set **Configuration management** (→  139) = **Compare**.



If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  139) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

**"Administration" submenu**

Navigation  Setup → Advanced setup → Administration










**Define access code** 


**Navigation**  Setup → Advanced setup → Administration → Def. access code

**Description** Define release code for write access to parameters.

**User entry** 0 to 9999

**Additional information**

-  If the factory setting is not changed or if "0" is entered, the parameters are not write-protected and the device configuration data can therefore always be modified. The user is logged on in the "Maintenance" role.
-  The write protection affects all parameters marked with the  symbol in the document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.
-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  102).
-  Please contact your Endress+Hauser Sales Center if you lose the access code.
-  If operating via the local display: the new access code is only valid once it has been confirmed in the **Confirm access code** parameter (→  144).

**Device reset** 

**Navigation**   Setup → Advanced setup → Administration → Device reset

**Description** Reset the device configuration - either entirely or in part - to a defined state.

**Selection**

- Cancel
- To factory defaults
- To delivery settings
- Of customer settings
- To transducer defaults
- Restart device

**Additional information**

**Meaning of the options**

- **Cancel**  
No action
- **To factory defaults**  
All parameters are reset to the order-code specific factory setting.
- **To delivery settings**  
All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.  
This option is only visible if customer specific settings have been ordered.

- **Of customer settings**

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.


- **To transducer defaults**


Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

- **Restart device**

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

*"Define access code" wizard*


 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

*Navigation*  Setup → Advanced setup → Administration → Def. access code

**Define access code****Navigation**

 Setup → Advanced setup → Administration → Def. access code → Def. access code

**Description**

→  142

**Confirm access code****Navigation**

 Setup → Advanced setup → Administration → Def. access code → Confirm code

**Description**


Confirm the entered access code.

**User entry**

0 to 9 999



## 16.4 "Diagnostics" menu

Navigation   Diagnostics

---

### Actual diagnostics


---



**Navigation**   Diagnostics → Actual diagnos.

**Description** Displays current diagnostic message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

### Timestamp

---

**Navigation**  Diagnostics → Timestamp

---

### Previous diagnostics


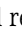
---

**Navigation**   Diagnostics → Prev.diagnostics

**Description** Displays the last diagnostic message which has been active before the current message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

**Timestamp**

---

**Navigation**  Diagnostics → Timestamp

**Operating time from restart**

---

**Navigation**   Diagnostics → Time fr. restart

**Description** Displays the time the device has been in operation since the last device restart.

**Operating time**

---

**Navigation**   Diagnostics → Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time*  
9 999 d ( ≈ 27 years)


### 16.4.1 "Diagnostic list" submenu

*Navigation*       Diagnostics → Diagnostic list

---

#### Diagnostics 1 to 5


---

<b>Navigation</b>	 Diagnostics → Diagnostic list → Diagnostics 1
<b>Description</b>	Display the current diagnostics messages with the highest to fifth-highest priority.
<b>Additional information</b>	The display consists of: <ul style="list-style-type: none"><li>■ Symbol for event behavior</li><li>■ Code for diagnostic behavior</li><li>■ Operating time of occurrence</li><li>■ Event text</li></ul>


---

#### Timestamp 1 to 5

---

**Navigation**       Diagnostics → Diagnostic list → Timestamp 1 to 5

## 16.4.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

*Navigation*  Diagnostics → Event logbook


---

### Filter options

**Navigation**  Diagnostics → Event logbook → Filter options


**Selection**

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)



**Additional information** 


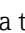
- This parameter is only used for operation via the local display.
- The status signals are categorized according to NAMUR NE 107.

### "Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  148). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

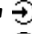- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

### Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

*Navigation*  Diagnostics → Event logbook → Event list


### 16.4.3 "Device information" submenu

Navigation  Diagnostics → Device info

---

#### Device tag




---

<b>Navigation</b>	 Diagnostics → Device info → Device tag
<b>Description</b>	Enter the name for the measuring point.
<b>User interface</b>	Character string comprising numbers, letters and special characters

---

#### Serial number



---

<b>Navigation</b>	 Diagnostics → Device info → Serial number
<b>Description</b>	Shows the serial number of the measuring device.
<b>Additional information</b>	<p> <b>Uses of the serial number</b></p> <ul style="list-style-type: none"> <li>▪ To identify the device quickly, e.g. when contacting Endress+Hauser.</li> <li>▪ To obtain specific information on the device using the Device Viewer: <a href="http://www.endress.com/deviceviewer">www.endress.com/deviceviewer</a></li> </ul> <p> The serial number is also indicated on the nameplate.</p>

---

#### Firmware version


---

<b>Navigation</b>	 Diagnostics → Device info → Firmware version
<b>Description</b>	Shows the device firmware version installed.
<b>User interface</b>	xx.yy.zz
<b>Additional information</b>	<p> For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.</p>


---

#### Device name



---

<b>Navigation</b>	 Diagnostics → Device info → Device name
<b>Description</b>	Shows the name of the transmitter.

---

**Order code**



---



<b>Navigation</b>	  Diagnostics → Device info → Order code
<b>Description</b>	Shows the device order code.
<b>User interface</b>	Character string comprising numbers, letters and special characters
<b>Additional information</b>	The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

---

**Extended order code 1 to 3**





---

<b>Navigation</b>	  Diagnostics → Device info → Ext. order cd. 1
<b>Description</b>	Display the three parts of the extended order code.
<b>User interface</b>	Character string comprising numbers, letters and special characters
<b>Additional information</b>	The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

---

**Status PROFIBUS Master Config**




---

<b>Navigation</b>	  Diagnostics → Device info → Stat Master Conf
<b>Description</b>	Indicates whether the cyclic data exchange with the master is currently active.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Active</li> <li>■ Not active</li> </ul>

---

**PROFIBUS ident number**


---

<b>Navigation</b>	  Diagnostics → Device info → Ident number
<b>Description</b>	Indicates the ident number of the device.
<b>Additional information</b>	The <b>Ident number selector</b> parameter can be used to define which ident number is used.

## 16.4.4 "Measured values" submenu

Navigation  Diagnostics → Measured val.

---


### Distance

---


Navigation  Diagnostics → Measured val. → Distance

Description Displays the measured distance  $D_L$  between the reference point (lower edge of the flange or threaded connection) and the level.

### Additional information

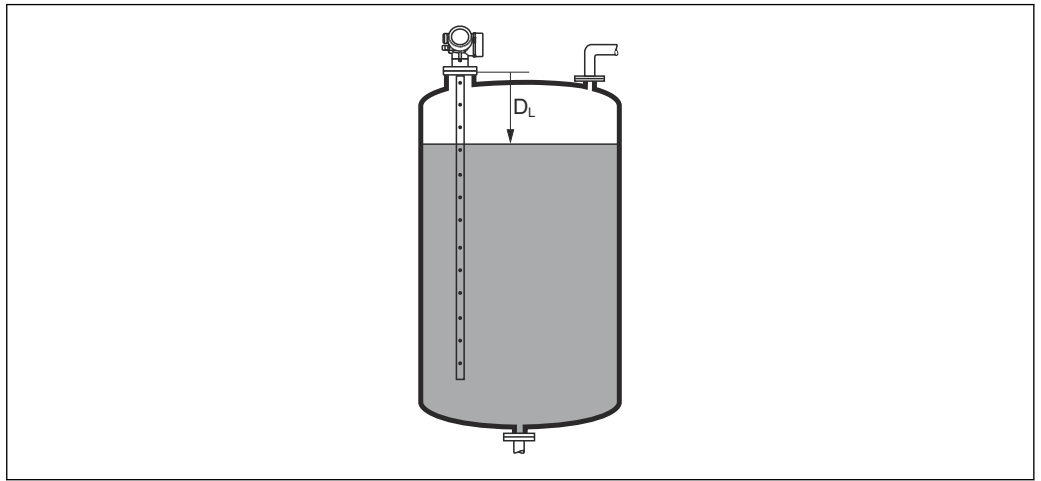

A0013198


 43 Distance for liquid measurements

 The unit is defined in the **Distance unit** parameter (→  91).


---

### Level linearized

---


Navigation  Diagnostics → Measured val. → Level linearized

Description Displays linearized level.


Additional information  This unit is defined by the **Unit after linearization** parameter.

**Terminal voltage 1**

---

**Navigation** Diagnostics → Measured val. → Terminal volt. 1**Switch status**


---


**Navigation** Diagnostics → Measured val. → Switch status**Description**



Shows the current switch output status.




### 16.4.5 "Analog input 1 to 6" submenu

 There is an **Analog input** submenu for each Analog Input Block of the device. Only the most important parameters of the respective block are available at this position of the operating menu. For a complete list of the block parameters refer to: Diagnostics → Analog inputs → Analog input 1 to 6

*Navigation*  Diagnostics → Analog inputs → Analog input 1 to 6

Channel	
<b>Navigation</b>	 Diagnostics → Analog inputs → Analog input 1 to 6 → Channel
<b>Description</b>	Standard parameter <b>CHANNEL</b> of the Analog Input Block according to the PROFIBUS Profile.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Interface linearized *</li> <li>■ Interface distance *</li> <li>■ Thickness upper layer *</li> <li>■ Terminal voltage</li> <li>■ Electronic temperature</li> <li>■ Measured capacitance *</li> <li>■ Absolute echo amplitude</li> <li>■ Relative echo amplitude</li> <li>■ Absolute interface amplitude *</li> <li>■ Relative interface amplitude *</li> <li>■ Absolute EOP amplitude</li> <li>■ Noise of signal</li> <li>■ EOP shift</li> <li>■ Calculated DC value *</li> <li>■ Sensor debug</li> <li>■ Analog output adv. diagnostics 1</li> <li>■ Analog output adv. diagnostics 2</li> </ul>
<b>Additional information</b>	Allocates a measured value to the AI block.

Out value	
<b>Navigation</b>	 Diagnostics → Analog inputs → Analog input 1 to 6 → Out value
<b>Description</b>	Element <b>Value</b> of the standard parameter <b>OUT</b> in the Analog Input Block according to the PROFIBUS Profile.
<b>User entry</b>	Signed floating-point number

\* Visibility depends on order options or device settings


---

<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ For <b>Mode block actual = Man</b>: Enter the output value of the Analog Input Block.</li> <li>■ Else: Displays the output value of the Analog Input Block.</li> </ul>
-------------------------------	---

---

### Out status


---

<b>Navigation</b>	 Diagnostics → Analog inputs → Analog input 1 to 6 → Out status
<b>Description</b>	Element <b>Status</b> of the standard parameter <b>OUT</b> in the Analog Input Block according to the PROFIBUS Profile.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Good</li> <li>■ Uncertain</li> <li>■ Bad</li> </ul>
<b>Additional information</b>	Only the two quality bits are evaluated in this parameter.

---

### Out status HEX

---



<b>Navigation</b>	 Diagnostics → Analog inputs → Analog input 1 to 6 → Out status HEX
<b>Description</b>	Element <b>Status</b> of the standard parameter <b>OUT</b> in the Analog Input Block according to the PROFIBUS Profile.
<b>User entry</b>	0 to 255
<b>Additional information</b>	The complete status byte is displayed in the form of a two-digit hexadecimal number in this parameter.

## 16.4.6 "Data logging" submenu

Navigation   Diagnostics → Data logging

---

### Assign channel 1 to 4

**Navigation**   Diagnostics → Data logging → Assign chan. 1 to 4

- Selection**
- Off
  - Level linearized
  - Distance
  - Unfiltered distance
  - Interface linearized \*
  - Interface distance \*
  - Unfiltered interface distance
  - Thickness upper layer \*
  - Terminal voltage
  - Electronic temperature
  - Measured capacitance \*
  - Absolute echo amplitude
  - Relative echo amplitude
  - Absolute interface amplitude \*
  - Relative interface amplitude \*
  - Absolute EOP amplitude
  - EOP shift
  - Noise of signal
  - Calculated DC value \*
  - Analog output adv. diagnostics 1
  - Analog output adv. diagnostics 2

**Additional information** A total of 1000 measured values can be logged. This means:



- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

---

### Logging interval

**Navigation**  Diagnostics → Data logging → Logging interval  
 Diagnostics → Data logging → Logging interval

**User entry** 1.0 to 3 600.0 s

---

\* Visibility depends on order options or device settings

**Additional information**

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time  $T_{\log}$  :

- If 1 logging channel is used:  $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used:  $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used:  $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used:  $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of  $T_{\log}$  always remains in the memory (ring memory principle).



The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 10000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

**Clear logging data****Navigation**

- Diagnostics → Data logging → Clear logging
- Diagnostics → Data logging → Clear logging


**Selection**

- Cancel
- Clear data

**"Display channel 1 to 4" submenu**

**i** The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

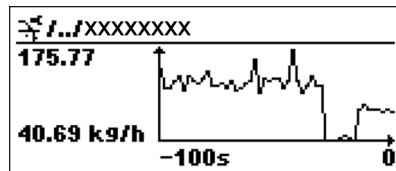

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.


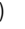



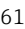
**i** To return to the operating menu, press  $\oplus$  and  $\ominus$  simultaneously.

Navigation  $\left[ \text{Diagnostics} \rightarrow \text{Data logging} \rightarrow \text{Displ.channel 1 to 4} \right]$

### 16.4.7 "Simulation" submenu







The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

*Conditions which can be simulated*

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> <li>▪ Assign measurement variable (→  160)</li> <li>▪ Value process variable (→  160)</li> </ul>
Specific state of the switch output	<ul style="list-style-type: none"> <li>▪ Switch output simulation (→  160)</li> <li>▪ Switch status (→  161)</li> </ul>
Existence of an alarm	Simulation device alarm (→  161)
Existence of a specific diagnostic message	Simulation diagnostic event (→  161)

**Structure of the submenu**

*Navigation*  Expert → Diagnostics → Simulation

<b>► Simulation</b>	
Assign measurement variable	→  160
Value process variable	→  160
Switch output simulation	→  160
Switch status	→  161
Simulation device alarm	→  161
Simulation diagnostic event	→  161



## Description of parameters

*Navigation*  Expert → Diagnostics → Simulation

---

### Assign measurement variable



---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Assign meas.var.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Level</li> <li>▪ Interface *</li> <li>▪ Level linearized</li> <li>▪ Interface linearized</li> <li>▪ Thickness linearized</li> </ul>
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ The value of the variable to be simulated is defined in the <b>Value process variable</b> parameter (→  160).</li> <li>▪ If <b>Assign measurement variable</b> ≠ <b>Off</b>, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.</li> </ul>

---

### Value process variable


---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Value proc. var.
<b>Prerequisite</b>	<b>Assign measurement variable</b> (→  160) ≠ <b>Off</b>
<b>User entry</b>	Signed floating-point number
<b>Additional information</b>	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

---

### Switch output simulation

---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Switch sim.
<b>Description</b>	Switch the simulation of the switch output on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>

---

\* Visibility depends on order options or device settings



---

**Switch status**

---

**Navigation**

Expert → Diagnostics → Simulation → Switch status

**Prerequisite****Switch output simulation (→ 160) = On****Description**

Select the status of the status output for the simulation.

**Selection**

- Open
- Closed

**Additional information**

The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

---

**Simulation device alarm**

---

**Navigation**

Expert → Diagnostics → Simulation → Sim. alarm

**Description**

Switch the device alarm on and off.

**Selection**

- Off
- On

**Additional information**

When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.

An active simulation is indicated by the **C484 Simulation failure mode** diagnostic message.

---

**Simulation diagnostic event**

---

**Navigation**

Expert → Diagnostics → Simulation → Sim. diag. event

**Description**

Select a diagnostic event for the simulation process that is activated.

**Additional information**

When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter).


## 16.4.8 "Device check" submenu

*Navigation*  Diagnostics → Device check

---

### Start device check


---

<b>Navigation</b>	 Diagnostics → Device check → Start dev. check
<b>Description</b>	Start a device check.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>
<b>Additional information</b>	In the case of a lost echo a device check can not be performed.

---

### Result device check


---

<b>Navigation</b>	 Diagnostics → Device check → Result dev.check
<b>Description</b>	Displays the result of the device check.
<b>Additional information</b>	<p><b>Meaning of the display options</b></p> <ul style="list-style-type: none"> <li>■ <b>Installation ok</b> Measurement possible without restrictions.</li> <li>■ <b>Accuracy reduced</b> A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.</li> <li>■ <b>Measurement capability reduced</b> A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.</li> <li>■ <b>Check not done</b> No device check has been performed.</li> </ul>

---

### Last check time



---

<b>Navigation</b>	 Diagnostics → Device check → Last check time
<b>Description</b>	Displays the operating time at which the last device check has been performed.
<b>User interface</b>	Character string comprising numbers, letters and special characters

---

**Level signal**



---

<b>Navigation</b>	  Diagnostics → Device check → Level signal
<b>Prerequisite</b>	Device check has been performed.
<b>Description</b>	Displays result of the device check for the level signal.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Check not done</li><li>■ Check not OK</li><li>■ Check OK</li></ul>
<b>Additional information</b>	For <b>Level signal = Check not OK</b> : Check the mounting position of the device and the dielectric constant of the medium.


---

**Launch signal**

---

<b>Navigation</b>	  Diagnostics → Device check → Launch signal
<b>Prerequisite</b>	Device check has been performed.
<b>Description</b>	Displays result of the display check for the launch signal.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Check not done</li><li>■ Check not OK</li><li>■ Check OK</li></ul>
<b>Additional information</b>	For <b>Launch signal = Check not OK</b> : Check the mounting position of the device. In non-metallic vessels use a metal plate or a metal flange.


### 16.4.9 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

#### Detailed description

SD01872F

*Navigation*

 Diagnostics → Heartbeat

# Index

## A

- Access authorization to parameters
  - Read access . . . . . 37
  - Write access . . . . . 37
- Access code . . . . . 37
  - Incorrect input . . . . . 37
- Access status display (Parameter) . . . . . 102
- Access status tooling (Parameter) . . . . . 101
- Accessories
  - Communication-specific . . . . . 76
  - Device-specific . . . . . 70
  - Service-specific . . . . . 76
  - System components . . . . . 76
- Activate table (Parameter) . . . . . 117
- Actual diagnostics (Parameter) . . . . . 145
- Administration (Submenu) . . . . . 142
- Advanced process conditions (Parameter) . . . . . 105
- Advanced setup (Submenu) . . . . . 101
- Analog input 1 to 6 (Submenu) . . . . . 99, 153
- Application . . . . . 9
- Assign channel 1 to 4 (Parameter) . . . . . 155
- Assign diagnostic behavior (Parameter) . . . . . 128
- Assign limit (Parameter) . . . . . 128
- Assign measurement variable (Parameter) . . . . . 160
- Assign status (Parameter) . . . . . 127

## B

- Backlight (Parameter) . . . . . 138
- Backup state (Parameter) . . . . . 140
- Blocking distance (Parameter) . . . . . 106, 119
- Bluetooth® wireless technology . . . . . 35

## C

- Channel (Parameter) . . . . . 99, 153
- Cleaning . . . . . 66
- Clear logging data (Parameter) . . . . . 156
- Code incorrect (Parameter) . . . . . 122
- Comparison result (Parameter) . . . . . 140
- Configuration backup display (Submenu) . . . . . 139
- Configuration management (Parameter) . . . . . 139
- Configuration of a level measurement . . . . . 53
- Configuring level measurement . . . . . 53
- Configuring the operating language . . . . . 52
- Confirm access code (Parameter) . . . . . 144
- Confirm distance (Parameter) . . . . . 96, 98
- Confirm probe length (Parameter) . . . . . 124, 125
- Context menu . . . . . 47
- Contrast display (Parameter) . . . . . 138
- Customer value (Parameter) . . . . . 117

## D

- Data logging (Submenu) . . . . . 155
- Deactivate WHG (Wizard) . . . . . 122
- Decimal places 1 (Parameter) . . . . . 135
- Decimal places menu (Parameter) . . . . . 137
- Define access code (Parameter) . . . . . 142, 144

- Define access code (Wizard) . . . . . 144
- Defining the access code . . . . . 38
- Device address (Parameter) . . . . . 91
- Device check (Submenu) . . . . . 162
- Device information (Submenu) . . . . . 149
- Device name (Parameter) . . . . . 149
- Device replacement . . . . . 68
- Device reset (Parameter) . . . . . 142
- Device tag (Parameter) . . . . . 91, 149
- Diagnostic event . . . . . 58
  - In the operating tool . . . . . 59
- Diagnostic events . . . . . 57
- Diagnostic list . . . . . 61
- Diagnostic list (Submenu) . . . . . 147
- Diagnostic message . . . . . 57
- Diagnostics
  - Symbols . . . . . 57
- Diagnostics (Menu) . . . . . 145
- Diagnostics 1 (Parameter) . . . . . 147
- Diameter (Parameter) . . . . . 114
- DIP switch
  - see Write protection switch
- Display (Submenu) . . . . . 133
- Display and operating module FHX50 . . . . . 34
- Display channel 1 to 4 (Submenu) . . . . . 157
- Display damping (Parameter) . . . . . 136
- Display interval (Parameter) . . . . . 135
- Display module . . . . . 42
- Display symbols . . . . . 43
- Disposal . . . . . 69
- Distance (Parameter) . . . . . 94, 98, 151
- Distance unit (Parameter) . . . . . 91
- Document
  - Function . . . . . 5
- Document function . . . . . 5

## E

- Electronics housing
  - Design . . . . . 13
- Empty calibration (Parameter) . . . . . 93
- Enter access code (Parameter) . . . . . 102
- Envelope curve display . . . . . 48
- Event history . . . . . 63
- Event level
  - Explanation . . . . . 58
  - Symbols . . . . . 58
- Event list . . . . . 63
- Event list (Submenu) . . . . . 148
- Event logbook (Submenu) . . . . . 148
- Event text . . . . . 58
- Extended order code 1 (Parameter) . . . . . 150
- Exterior cleaning . . . . . 66

## F

- Fail safe type (Parameter) . . . . . 100
- Fail safe value (Parameter) . . . . . 100

- Failure mode (Parameter) . . . . . 131
- FHX50 . . . . . 34
- Field of application
  - Residual risks . . . . . 9
- Filter options (Parameter) . . . . . 148
- Filtering the event logbook . . . . . 64
- Firmware version (Parameter) . . . . . 149
- Format display (Parameter) . . . . . 133
- Free text (Parameter) . . . . . 113
- Full calibration (Parameter) . . . . . 93
- H**
  - Hardware write protection . . . . . 39
  - Header (Parameter) . . . . . 136
  - Header text (Parameter) . . . . . 136
  - Heartbeat (Submenu) . . . . . 164
  - Housing
    - Design . . . . . 13
    - Turning . . . . . 25
- I**
  - Input mask . . . . . 45
  - Intended use . . . . . 9
  - Intermediate height (Parameter) . . . . . 115
  - Invert output signal (Parameter) . . . . . 131
- K**
  - Keypad lock
    - Disabling . . . . . 40
    - Enabling . . . . . 40
- L**
  - Language (Parameter) . . . . . 133
  - Last backup (Parameter) . . . . . 139
  - Last check time (Parameter) . . . . . 162
  - Launch signal (Parameter) . . . . . 163
  - Level (Parameter) . . . . . 94, 116, 117
  - Level (Submenu) . . . . . 103
  - Level correction (Parameter) . . . . . 107
  - Level linearized (Parameter) . . . . . 114, 151
  - Level signal (Parameter) . . . . . 163
  - Level unit (Parameter) . . . . . 106
  - Linearization (Submenu) . . . . . 109, 110, 111
  - Linearization type (Parameter) . . . . . 111
  - Local display
    - see Diagnostic message
    - see In alarm condition
  - Locking status . . . . . 43
  - Locking status (Parameter) . . . . . 101
  - Logging interval (Parameter) . . . . . 155
- M**
  - Maintenance . . . . . 66
  - Managing the device configuration . . . . . 55
  - Mapping (Wizard) . . . . . 98
  - Mapping end point (Parameter) . . . . . 97, 98
  - Maximum value (Parameter) . . . . . 114
  - Measured value symbols . . . . . 44
  - Measured values (Submenu) . . . . . 151
  - Media . . . . . 9
  - Medium group (Parameter) . . . . . 92
  - Medium property (Parameter) . . . . . 103
  - Medium type (Parameter) . . . . . 103
  - Menu
    - Diagnostics . . . . . 145
    - Setup . . . . . 91
  - Mounting outside the vessel . . . . . 21
  - Mounting position for level measurements . . . . . 17
- N**
  - Non-metal vessels . . . . . 21
  - Number format (Parameter) . . . . . 137
- O**
  - Onsite operation . . . . . 34
  - Operating elements
    - Diagnostic message . . . . . 58
  - Operating module . . . . . 42
  - Operating time (Parameter) . . . . . 139, 146
  - Operating time from restart (Parameter) . . . . . 146
  - Operational safety . . . . . 10
  - Order code (Parameter) . . . . . 150
  - Out status (Parameter) . . . . . 154
  - Out status HEX (Parameter) . . . . . 154
  - Out value (Parameter) . . . . . 153
  - Output echo lost (Parameter) . . . . . 118
  - Overvoltage protection
    - General information . . . . . 30
- P**
  - Present mapping (Parameter) . . . . . 97
  - Present probe length (Parameter) . . . . . 123, 126
  - Previous diagnostics (Parameter) . . . . . 145
  - Probe grounded (Parameter) . . . . . 123
  - Probe length correction (Wizard) . . . . . 125
  - Probe settings (Submenu) . . . . . 123
  - Process property (Parameter) . . . . . 104
  - Product security . . . . . 10
  - PROFIBUS ident number (Parameter) . . . . . 150
  - PV filter time (Parameter) . . . . . 99
- R**
  - Ramp at echo lost (Parameter) . . . . . 119
  - Read access . . . . . 37
  - Record map (Parameter) . . . . . 97, 98
  - Registered trademarks . . . . . 8
  - Remedial measures
    - Calling up . . . . . 59
    - Closing . . . . . 59
  - Repair concept . . . . . 68
  - Replacing a device . . . . . 68
  - Requirements for personnel . . . . . 9
  - Reset write protection (Parameter) . . . . . 122
  - Result device check (Parameter) . . . . . 162
  - Return . . . . . 69
  - Rod probe
    - Design . . . . . 12
  - Rod probes
    - Lateral loading capacity . . . . . 19

**S**

Safety instructions  
 Basic . . . . . 9  
 Safety settings (Submenu) . . . . . 118  
 Separator (Parameter) . . . . . 137  
 Serial number (Parameter) . . . . . 149  
 Service interface (CDI) . . . . . 35  
 Settings  
     Managing the device configuration . . . . . 55  
     Operating language . . . . . 52  
 Setup (Menu) . . . . . 91  
 Signal quality (Parameter) . . . . . 95  
 Simulation (Submenu) . . . . . 159, 160  
 Simulation device alarm (Parameter) . . . . . 161  
 Simulation diagnostic event (Parameter) . . . . . 161  
 Spare parts . . . . . 69  
     Nameplate . . . . . 69  
 Start device check (Parameter) . . . . . 162  
 Status PROFIBUS Master Config (Parameter) . . . . . 150  
 Status signals . . . . . 43, 57  
 Submenu  
     Administration . . . . . 142  
     Advanced setup . . . . . 101  
     Analog input 1 to 6 . . . . . 99, 153  
     Configuration backup display . . . . . 139  
     Data logging . . . . . 155  
     Device check . . . . . 162  
     Device information . . . . . 149  
     Diagnostic list . . . . . 147  
     Display . . . . . 133  
     Display channel 1 to 4 . . . . . 157  
     Event list . . . . . 63, 148  
     Event logbook . . . . . 148  
     Heartbeat . . . . . 164  
     Level . . . . . 103  
     Linearization . . . . . 109, 110, 111  
     Measured values . . . . . 151  
     Probe settings . . . . . 123  
     Safety settings . . . . . 118  
     Simulation . . . . . 159, 160  
     Switch output . . . . . 127  
 Switch output (Submenu) . . . . . 127  
 Switch output function (Parameter) . . . . . 127  
 Switch output simulation (Parameter) . . . . . 160  
 Switch status (Parameter) . . . . . 131, 152, 161  
 Switch-off delay (Parameter) . . . . . 131  
 Switch-off value (Parameter) . . . . . 130  
 Switch-on delay (Parameter) . . . . . 130  
 Switch-on value (Parameter) . . . . . 129  
 Symbols  
     For correction . . . . . 45  
     In the text and numeric editor . . . . . 45  
 System components . . . . . 76

**T**

Table mode (Parameter) . . . . . 115  
 Table number (Parameter) . . . . . 116  
 Tank type (Parameter) . . . . . 91  
 Terminal voltage 1 (Parameter) . . . . . 152

Thermal insulation . . . . . 23  
 Timestamp (Parameter) . . . . . 145, 146  
 Timestamp 1 to 5 (Parameter) . . . . . 147  
 Tool . . . . . 24  
 Transmitter  
     Turning the display . . . . . 26  
     Turning the display module . . . . . 26  
 Transmitter housing  
     Turning . . . . . 25  
 Troubleshooting . . . . . 56  
 Tube diameter (Parameter) . . . . . 92  
 Turning the display . . . . . 26  
 Turning the display module . . . . . 26

**U**

Unit after linearization (Parameter) . . . . . 112  
 Use of measuring instrument  
     see Intended use  
 Use of the measuring instruments  
     Borderline cases . . . . . 9  
     Incorrect use . . . . . 9

**V**

Value 1 display (Parameter) . . . . . 135  
 Value echo lost (Parameter) . . . . . 118  
 Value process variable (Parameter) . . . . . 160

**W**

WHG confirmation (Wizard) . . . . . 121  
 Wizard  
     Deactivate WHG . . . . . 122  
     Define access code . . . . . 144  
     Mapping . . . . . 98  
     Probe length correction . . . . . 125  
     WHG confirmation . . . . . 121  
 Workplace safety . . . . . 10  
 Write access . . . . . 37  
 Write protection  
     Via access code . . . . . 38  
     Via write protection switch . . . . . 39  
 Write protection switch . . . . . 39



71664107

[www.addresses.endress.com](http://www.addresses.endress.com)

---