


Operating Instructions

Levelflex FMP51, FMP52, FMP54

FOUNDATION Fieldbus

Guided-wave radar



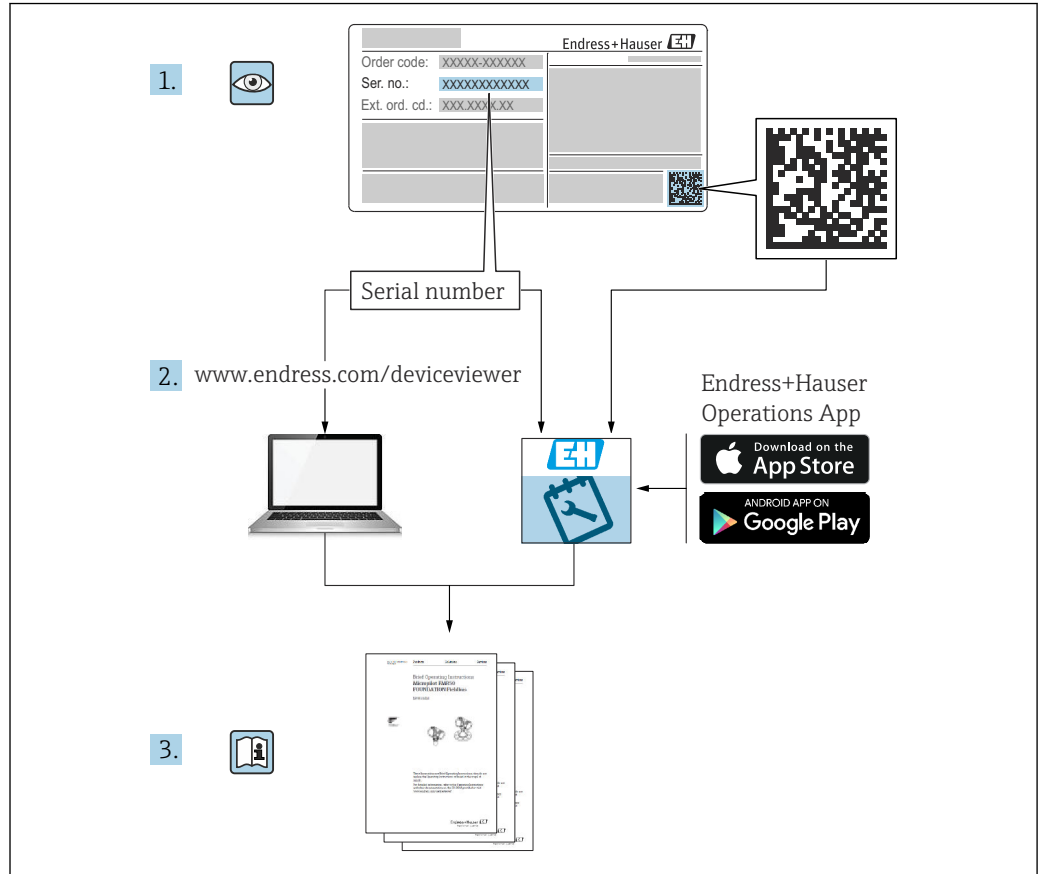

A0023555

Table of contents

1	About this document	6	6.2	Mounting the device	35
1.1	Document function	6	6.2.1	Tool list	35
1.2	Symbols	6	6.2.2	Mounting the rod probe	36
1.2.1	Safety symbols	6	6.2.3	Shortening the probe	36
1.2.2	Electrical symbols	6	6.2.4	Device with gas phase compensation: mounting the probe rod	38
1.2.3	Tool symbols	6	6.2.5	Mounting the device	39
1.2.4	Symbols for certain types of information and graphics	7	6.2.6	Mounting the "Sensor, remote" version	40
1.3	List of abbreviations	7	6.2.7	Turning the transmitter housing	42
1.4	Documentation	8	6.2.8	Turning the display	43
1.5	Registered trademarks	9	6.3	Post-mounting check	43
2	Basic safety instructions	10	7	Electrical connection	45
2.1	Requirements for the personnel	10	7.1	Connecting requirements	45
2.2	Intended use	10	7.1.1	Terminal assignment	45
2.3	Workplace safety	11	7.1.2	Cable specification	46
2.4	Operational safety	11	7.1.3	Device plug	46
2.5	Product security	11	7.1.4	Supply voltage	47
2.5.1	CE mark	11	7.1.5	Overvoltage protection	47
2.5.2	EAC conformity	12	7.2	Connecting the device	48
3	Product description	13	7.2.1	Opening cover	48
3.1	Product design	13	7.2.2	Connecting	48
3.1.1	Levelflex FMP51/FMP52/FMP54/ FMP55	13	7.2.3	Plug-in spring-force terminals	49
3.1.2	Electronics housing	14	7.2.4	Closing the cover of the connection compartment	49
4	Incoming acceptance and product identification	15	7.3	Post-connection check	50
4.1	Incoming acceptance	15	8	Operation options	51
4.2	Product identification	15	8.1	Overview of operation options	51
4.2.1	Nameplate	15	8.1.1	Access to operating menu via local display	51
4.2.2	Manufacturer address	16	8.1.2	Access to the operating menu via the operating tool	52
5	Storage, transport	17	8.2	Structure and function of the operating menu	53
5.1	Storage temperature	17	8.2.1	Structure of the operating menu	53
5.2	Transporting to the measuring point	17	8.2.2	User roles and related access authorization	54
6	Installation	18	8.2.3	Data access - Security	55
6.1	Mounting requirements	18	8.3	Display and operating module	59
6.1.1	Suitable mounting position	18	8.3.1	Display format	59
6.1.2	Mounting under confined conditions	19	8.3.2	Operating elements	61
6.1.3	Notes on the mechanical load of the probe	20	8.3.3	Entering numbers and text	62
6.1.4	Lateral loading capacity (flexural strength) of coaxial probes	22	8.3.4	Opening the context menu	64
6.1.5	Information concerning the process connection	22	8.3.5	Envelope curve display on the display and operating module	65
6.1.6	Mounting cladded flanges	24	9	System integration	66
6.1.7	Securing the probe	25	9.1	Device description file (DD)	66
6.1.8	Special installation situations	28	9.2	Integration into the FF network	66
			9.3	Device identification and addressing	66
			9.4	Block model	67
			9.4.1	Blocks in the device software	67

9.4.2	Block configuration when device is delivered	68	12.8.2	Factory setting of local display for interface measurements	95
9.5	Assignment of measured values (CHANNEL) in the AI block	68	12.9	Configuration management	96
9.6	Index tables of Endress+Hauser parameters	69	12.10	Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912	97
9.6.1	Setup Transducer Block	69	12.10.1	Event groups	98
9.6.2	Advanced Setup Transducer Block	70	12.10.2	Assignment parameters	99
9.6.3	Display Transducer Block	71	12.10.3	Configurable area	101
9.6.4	Diagnostic Transducer Block	72	12.10.4	Transmission of the event messages to the bus	103
9.6.5	Expert Configuration Transducer Block	73	12.11	Protecting settings from unauthorized access	103
9.6.6	Expert Information Transducer Block	74	13	Diagnostics and troubleshooting	104
9.6.7	Service Sensor Transducer Block	76	13.1	General troubleshooting	104
9.6.8	Service Information Transducer Block	76	13.1.1	General errors	104
9.6.9	Data Transfer Transducer Block	76	13.1.2	Parameter configuration errors	104
9.7	Methods	78	13.2	Diagnostic information on local display	106
10	Commissioning using the wizard	79	13.2.1	Diagnostic message	106
11	Commissioning via operating menu	80	13.2.2	Calling up remedial measures	108
11.1	Installation and function check	80	13.3	Diagnostic event in the operating tool	108
11.2	Configuring the operating language	80	13.4	Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)	110
11.3	Checking the reference distance	80	13.5	Diagnostic list	110
11.4	Configuring level measurement	82	13.6	Event logbook	110
11.5	Configuring interface measurement	84	13.6.1	Event history	110
11.6	Recording the reference echo curve	85	13.6.2	Filtering the event logbook	111
11.7	Configuring the local display	86	13.6.3	Overview of information events	111
11.7.1	Factory setting of local display for level measurements	86	13.7	Firmware history	112
11.7.2	Factory setting of local display for interface measurements	86	14	Maintenance	113
11.7.3	Adjusting the local display	86	14.1	Exterior cleaning	113
11.8	Configuration management	86	14.2	General cleaning instructions	113
11.9	Protecting settings from unauthorized access	87	15	Repair	114
12	Commissioning (block-based operation)	88	15.1	General information	114
12.1	Installation and function check	88	15.1.1	Repair concept	114
12.2	Block configuration	88	15.1.2	Repairs to Ex-approved devices	114
12.2.1	Preliminaries	88	15.1.3	Replacing electronics modules	114
12.2.2	Configuring the Resource Block	88	15.1.4	Replacing a device	114
12.2.3	Configuring the Transducer Blocks	88	15.2	Spare parts	115
12.2.4	Configuring the Analog Input Blocks	89	15.3	Return	115
12.2.5	Additional configuration	89	15.4	Disposal	115
12.3	Scaling of the measured value in an AI Block	89	16	Accessories	116
12.4	Language selection	90	16.1	Device-specific accessories	116
12.5	Checking the reference distance	90	16.1.1	Weather protection cover	116
12.6	Configuring level measurement	92	16.1.2	Mounting bracket for electronics housing	117
12.7	Configuring interface measurement	93	16.1.3	Rod extension (centering device) HMP40	119
12.8	Configuring the local display	95	16.1.4	Mounting kit, insulated	119
12.8.1	Factory setting of local display for level measurements	95	16.1.5	Centering star	120
			16.1.6	Centering weight	123
			16.1.7	Remote display FHX50	125
			16.1.8	Overvoltage protection	126

16.1.9	Bluetooth module BT10 for HART devices	127
16.2	Communication-specific accessories	128
16.3	Service-specific accessories	128
16.4	System components	128
16.4.1	Memograph M RSG45	128
17	Operating menu	130
17.1	Overview of the operating menu (display module)	130
17.2	Overview of the operating menu (operating tool)	137
17.3	"Setup" menu	144
17.3.1	"Mapping" wizard	157
17.3.2	"Analog input 1 to 5" submenu	158
17.3.3	"Advanced setup" submenu	160
17.4	"Diagnostics" menu	210
17.4.1	"Diagnostic list" submenu	212
17.4.2	"Event logbook" submenu	213
17.4.3	"Device information" submenu	214
17.4.4	"Measured values" submenu	216
17.4.5	"Analog input 1 to 5" submenu	218
17.4.6	"Data logging" submenu	221
17.4.7	"Simulation" submenu	224
17.4.8	"Device check" submenu	229
17.4.9	"Heartbeat" submenu	231
Index		232

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.






CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective earth (PE) Ground terminals that must be connected to ground prior to establishing any other connections. The ground terminals are located on the interior and exterior of the device: <ul style="list-style-type: none"> ▪ Interior ground terminal: protective earth is connected to the mains supply. ▪ Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Tool symbols



Phillips head screwdriver



Flat blade screwdriver



Torx screwdriver



Allen key



Open-ended wrench


1.2.4 Symbols for certain types of information and graphics

 **Permitted**

Procedures, processes or actions that are permitted

  **Preferred**

Procedures, processes or actions that are preferred

 **Forbidden**

Procedures, processes or actions that are forbidden

 **Tip**

Indicates additional information



Reference to documentation



Reference to graphic



Notice or individual step to be observed

1., 2., 3.

Series of steps



Result of a step



Visual inspection



Operation via operating tool



Write-protected parameter

1, 2, 3, ...

Item numbers

A, B, C, ...

Views

 →  **Safety instructions**

Observe the safety instructions contained in the associated Operating Instructions

 **Temperature resistance of the connection cables**

Specifies the minimum value of the temperature resistance of the connection cables

1.3 List of abbreviations

BA

Document type "Operating Instructions"

KA

Document type "Brief Operating Instructions"

TI

Document type "Technical Information"

SD

Document type "Special Documentation"

XA

Document type "Safety Instructions"

PN

Nominal pressure

MWP

Maximum working pressure

The MWP is indicated on the nameplate.

ToF

Time of Flight

FieldCare

Scalable software tool for device configuration and integrated plant asset management solutions

DeviceCare

Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices

DTM

Device Type Manager

 ϵ_r (Dk value)

Relative dielectric constant

PLC

Programmable logic controller (PLC)

CDI

Common Data Interface

Operating tool

The term "operating tool" is used in place of the following operating software: SmartBlue (app), for operation using an Android or iOS smartphone or tablet

BD

Blocking Distance; no signals are analyzed within the BD.

PLC

Programmable logic controller (PLC)

CDI

Common Data Interface

PFS

Pulse Frequency Status (Switch output)

MBP

Manchester Bus Powered

PDU

Protocol Data Unit


1.4 Documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

The following documentation may be available depending on the device version ordered:

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document These Operating Instructions contain all the information that is required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are a constituent part of the Operating Instructions.  Information on the Safety Instructions (XA) that are relevant for the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is a constituent part of the device documentation.

1.5 Registered trademarks

FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

Bluetooth®

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

Apple®

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

KALREZ®, VITON®

Registered trademarks of DuPont Performance Elastomers L.L.C., Wilmington, DE USA

TEFLON®

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

NORD-LOCK®

Registered trademark of Nord-Lock International AB

FISHER®

Registered trademark of Fisher Controls International LLC, Marshalltown, USA

MASONEILAN®

Registered trademark of Dresser, Inc., Addison, USA

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and media

The measuring instrument described in this manual is intended only for the level and interface measurement of liquids. Depending on the version ordered, the measuring instrument can also measure potentially explosive, flammable, poisonous and oxidizing media.

If the limit values specified in the "Technical data" and the conditions listed in the instructions and additional documentation are observed, the measuring instrument may be used only for the following measurements:

- ▶ Measured process variables: level and/or interface height
- ▶ Calculable process variables: volume or mass in any shape of vessel (calculated from the level by the linearization functionality)

To ensure that the measuring instrument remains in proper condition for the operation time:

- ▶ Use the measuring instrument only for media to which the process-wetted materials are sufficiently resistant.
- ▶ Observe the limit values in the "Technical data".

Incorrect use

The manufacturer is not liable for harm caused by improper or unintended use.

Clarification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability.

Residual risks

Due to heat transfer from the process as well as power loss in the electronics, the temperature of the electronics housing and the assemblies contained therein (e.g. display module, main electronics module and I/O electronics module) may rise up to 80 °C (176 °F). When in operation, the sensor may reach a temperature close to the medium temperature.

Danger of burns from contact with surfaces!

- ▶ In the event of elevated fluid temperatures, ensure protection against contact to prevent burns.

2.3 Workplace safety

When working on and with the device:

- ▶ Wear the required personal protective equipment as per national regulations.

With separable probe rods, medium may penetrate the joints between the individual parts of the rod. This medium may escape when the joints are loosened. This can cause injuries in the case of dangerous (e.g., aggressive or toxic) media.

- ▶ When loosening the joints between the individual parts of the probe rod, wear appropriate protective equipment according to the medium.

2.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for ensuring that the device is in good working order.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

- ▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories from the manufacturer.

Hazardous area

To eliminate danger to persons or the installation when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation included as an integral part of these instructions.

2.5 Product security

This measuring instrument is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

NOTICE

Loss of degree of protection by opening of the device in humid environments

- ▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU directives. These are listed in the corresponding EU Declaration of Conformity together with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the CE mark.

2.5.2 EAC conformity


The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

The manufacturer confirms successful testing of the device by affixing to it the EAC mark.

3 Product description

3.1 Product design

3.1.1 Levelflex FMP51/FMP52/FMP54/FMP55

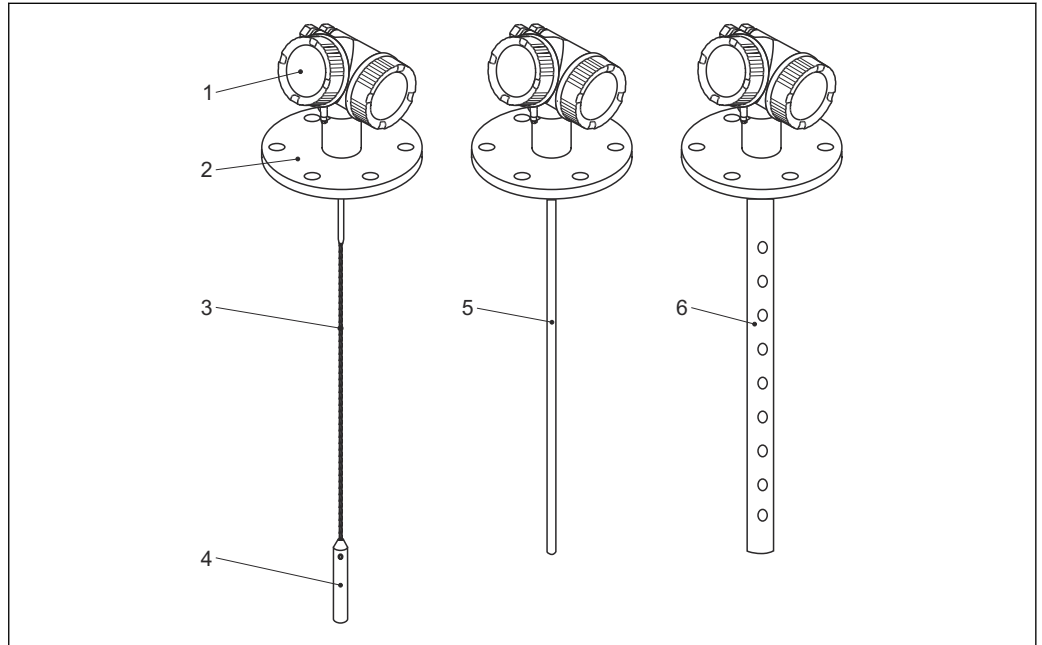


A0012399

1 Design of the Levelflex

- 1 Electronics housing
- 2 Process connection (here as an example: flange)
- 3 Rope probe
- 4 End-of-probe weight
- 5 Rod probe
- 6 Coax probe

3.1.2 Electronics housing

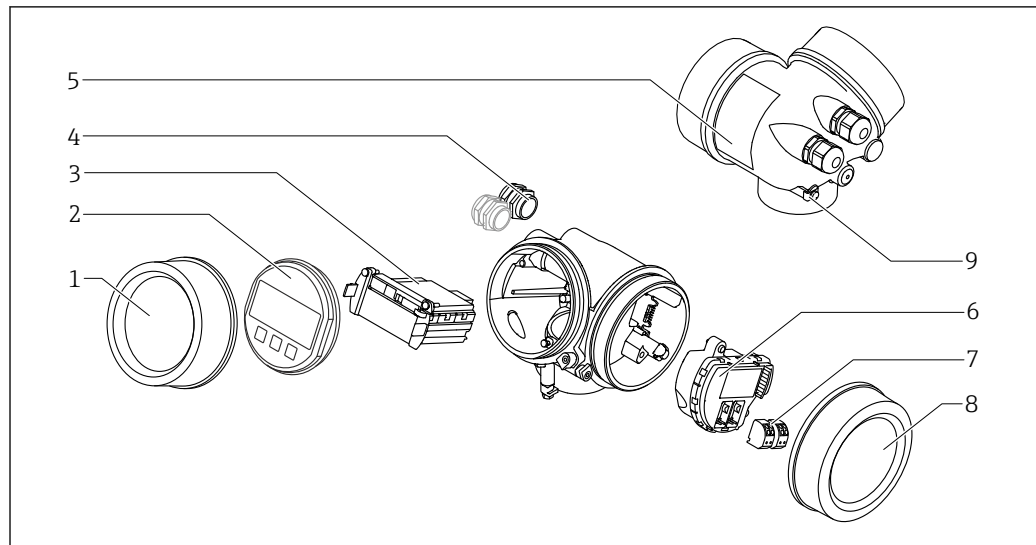


A0012422

2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

4 Incoming acceptance and product identification

4.1 Incoming acceptance

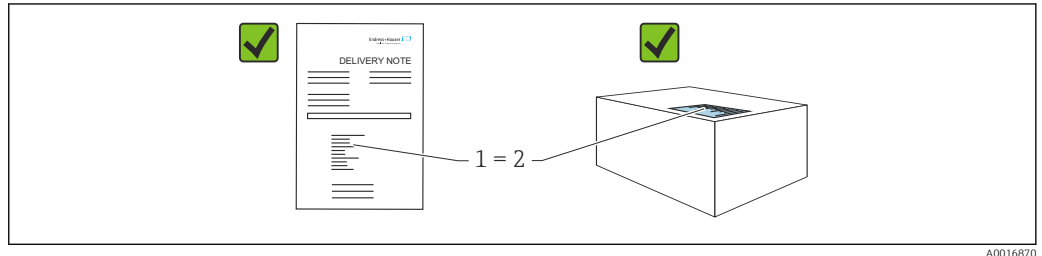

A0016870

Check the following during incoming acceptance:

- Is the order code on the delivery note (1) identical to the order code on the product sticker (2)?
- Are the goods undamaged?
- Do the data on the nameplate correspond to the order specifications and the delivery note?
- Is the documentation provided?
- If required (see nameplate): are the Safety Instructions (XA) provided?



If one of these conditions is not met, please contact the manufacturer's sales office.

4.2 Product identification

The following options are available for identification of the device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- ▶ *Device Viewer* (www.endress.com/deviceviewer); manually enter the serial number from the nameplate.
 - ↳ All the information about the measuring device is displayed.
- ▶ *Endress+Hauser Operations app*; manually enter the serial number indicated on the nameplate or scan the 2D matrix code on the nameplate.
 - ↳ All the information about the measuring device is displayed.

4.2.1 Nameplate

The information that is required by law and is relevant to the device is shown on the nameplate, e.g.:

- Manufacturer identification
- Order number, extended order code, serial number
- Technical data, degree of protection
- Firmware version, hardware version
- Approval-related information, reference to Safety Instructions (XA)
- DataMatrix code (information about the device)

4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG
Hauptstraße 1
79689 Maulburg, Germany
Place of manufacture: See nameplate.

5 Storage, transport

5.1 Storage temperature

- Permitted storage temperature: -40 to $+80$ °C (-40 to $+176$ °F)
- Use original packaging.
- Option for FMP51 and FMP54: -50 to $+80$ °C (-58 to $+176$ °F)
This range applies if the option JN "Transmitter ambient temperature" -50 °C (-58 °F) was selected in order code 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), higher failure rates can be expected.


5.2 Transporting to the measuring point

⚠ WARNING

Housing or probe may become damaged or break off.

Risk of injury!

- ▶ Transport the measuring instrument to the measuring point in its original packaging or by the process connection.
- ▶ Always secure lifting equipment (slings, eyes, etc.) at the process connection and never lift the device by the electronic housing or probe. Pay attention to the center of gravity of the device so that it does not tilt or slip unintentionally.
- ▶ Follow the safety instructions and transport conditions for devices weighing more than 18 kg (39.6 lbs) (IEC 61010).

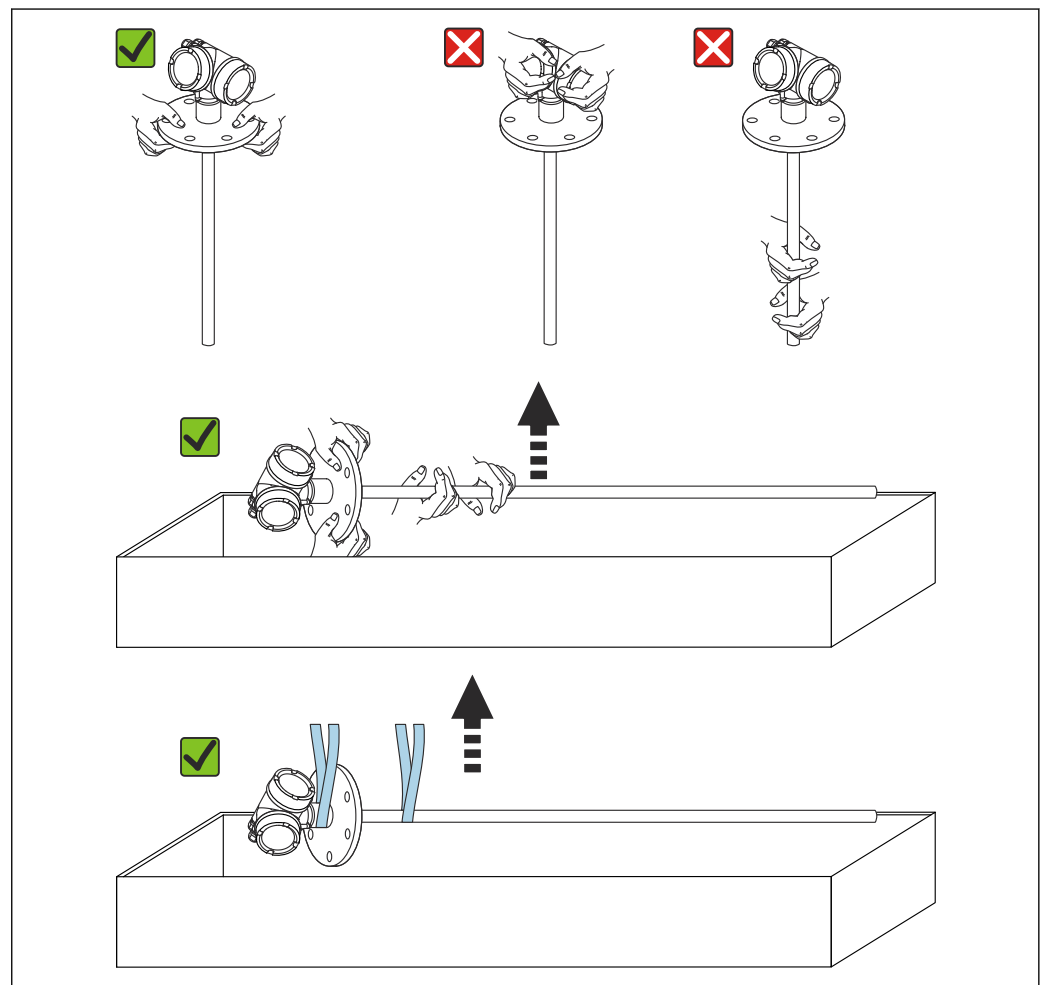


A0013920

6 Installation

6.1 Mounting requirements

6.1.1 Suitable mounting position

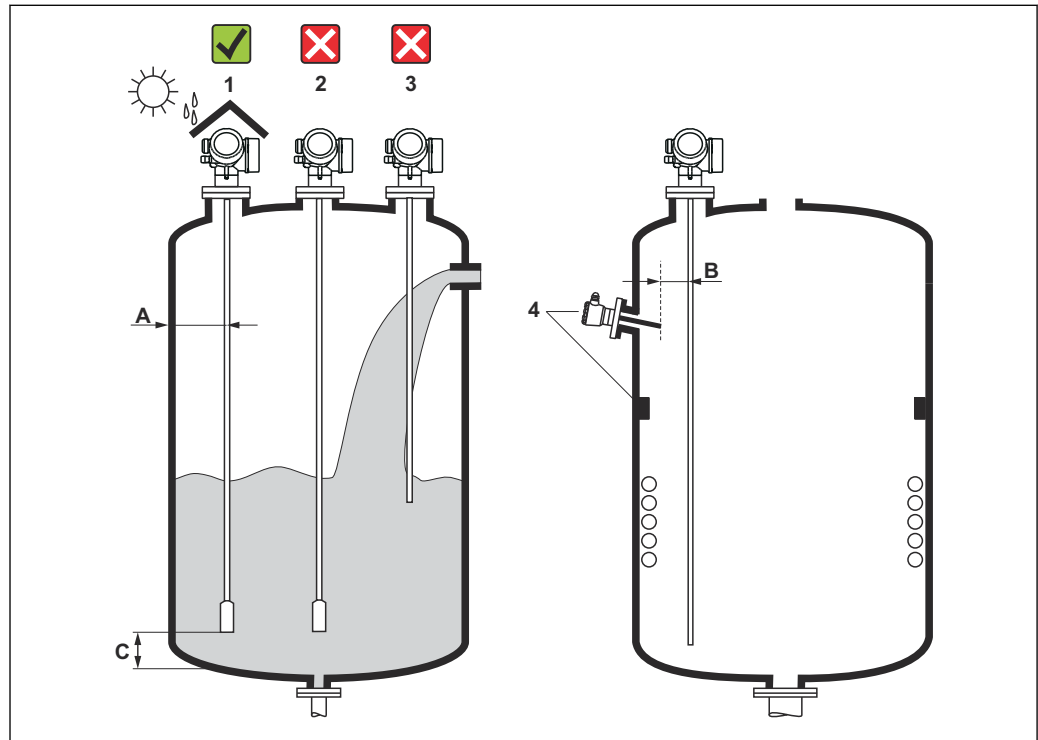

3 Installation positions

A0012606

Spacing requirements when mounting

- Distance (A) between the vessel wall and rod and rope probes:
 - For smooth metallic walls: > 50 mm (2 in)
 - For plastic walls: > 300 mm (12 in) to metallic parts outside the vessel
 - For concrete walls: > 500 mm (20 in), otherwise the permitted measuring range may be reduced.
- Distance (B) between rod probes and internal fittings (3): > 300 mm (12 in)
- When using more than one Levelflex:
 - Minimum distance between the sensor axes: 100 mm (3.94 in)
- Distance (C) from the end of the probe to the bottom of the vessel:
 - Rope probe: > 150 mm (6 in)
 - Rod probe: > 10 mm (0.4 in)
 - Coaxial probe: > 10 mm (0.4 in)

i Coaxial probes can be mounted at any distance to the wall and internal fixtures.


Additional mounting requirements

- When mounting outdoors, a weather protection cover (1) can be used to protect the device against extreme weather conditions.
 - In metallic vessels, preferably do not mount the probe in the center of the vessel (2), as this would lead to increased interference echoes.
If a central mounting position cannot be avoided, it is essential to perform interference echo suppression (mapping) after commissioning the device.
 - Do not mount the probe in the filling curtain (3).
 - Avoid buckling the rope probe during installation or operation (e.g. as a result of product movement against silo wall) by selecting a suitable mounting location.
- i** In the case of freely suspended rope probes (probe end not fixed at the bottom), the distance between the probe rope and internal fittings, which can change due to the movement of the product, must never be less than 300 mm (12 in). Occasional contact between the probe weight and the cone of the vessel, however, does not influence the measurement provided that the relative permittivity is at least $\epsilon_r = 1.8$.
- i** When mounting the housing in a recess (e.g. in a concrete ceiling), observe a minimum distance of 100 mm (4 in) between the cover of the connection compartment/electronics compartment and the wall. Otherwise the connection compartment/electronics compartment will not be accessible after installation.

6.1.2 Mounting under confined conditions

Mounting with remote probe


The device version with a remote probe is suitable for applications with restricted mounting space. In this case, the electronics housing is mounted at a separate position from the probe.

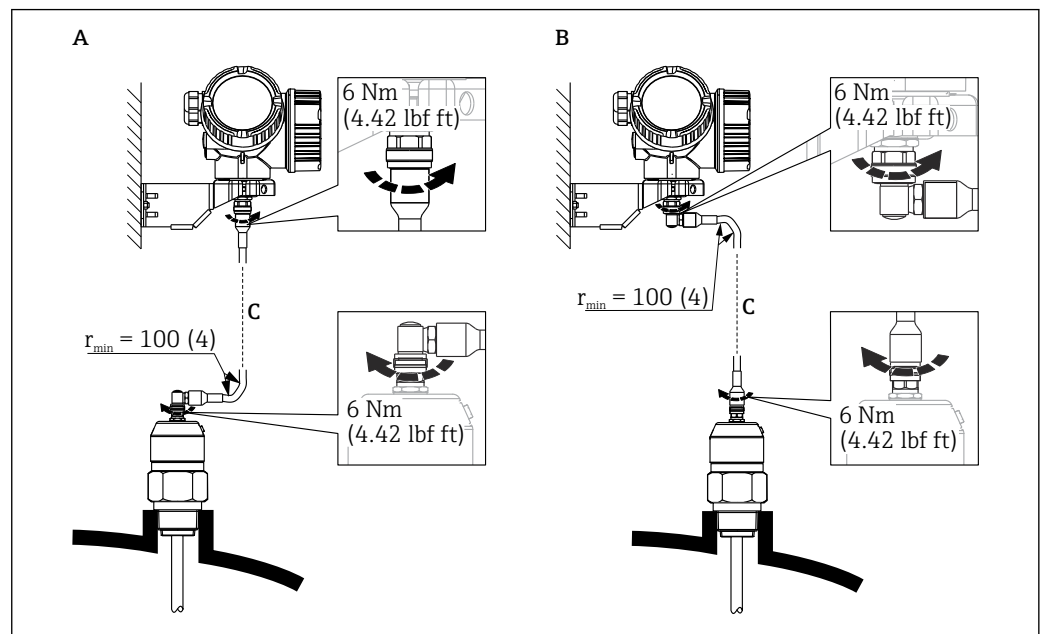

- A Angled plug at the probe
 B Angled plug at the electronics housing
 C Length of the remote cable as ordered

- Product structure, feature 600 "Probe design":
 - Version MB "Remote sensor, 3 m cable"
 - Version MC "Remote sensor, 6 m cable"
 - Version MD "Remote sensor, 9 m cable"
 - The connecting cable is included in the delivery with these versions.
Minimum bending radius: 100 mm (4 inch)
 - The mounting bracket for the electronics housing is included in the delivery with these versions. Mounting options:
 - Wall mounting
 - Mounting on DN32 to DN50 (1¼ to 2 inch) post or pipe
 - The connecting cable has one straight plug and one plug angled at 90°. Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.
- i** The probe, electronics and connection cable are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

Separable probes

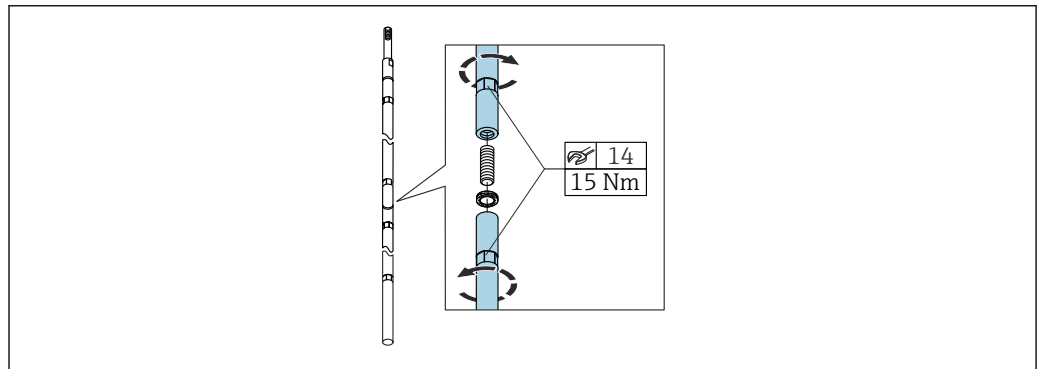

In confined mounting conditions (ceiling clearance), the use of separable rod probe (Ø 16 mm) is advisable.

- Max. probe length 10 m (394 in)
- Max. lateral loading capacity 30 Nm
- Probes can be separated several times, with the individual parts having the following lengths:
 - 500 mm (20 in)
 - 1 000 mm (40 in)

i The joints between the individual rod segments are secured by the enclosed Nord Lock washers. Install the pre-assembled washers in pairs, cam face to cam face.

6.1.3 Notes on the mechanical load of the probe

Tensile loading capacity of rope probes

FMP51

Rope 4 mm (1/8 in) 316

Tensile loading capacity 5 kN

Rope 4 mm (1/8 in) Alloy C

Tensile loading capacity 5 kN

Rope 4 mm (1/8 in) PFA>316L

Tensile loading capacity 1 kN

FMP52

Rope 4 mm (1/6 in) PFA>316

Tensile loading capacity 2 kN

FMP54

Rope 4 mm (1/6 in) 316

Tensile loading capacity 10 kN

Lateral loading capacity (flexural strength) of rod probes

FMP51

Rod 8 mm (1/3 in) 316L

10 Nm

Rod 12 mm (1/2 in) 316L

Flexural strength 30 Nm

Rod 12 mm (1/2 in) AlloyC

Flexural strength 30 Nm

Rod 16 mm (0.63 in) 316 L separable

Flexural strength 30 Nm

FMP52

Rod 16 mm (0.63 in) PFA>316L

Flexural strength 30 Nm

FMP54


Rod 16 mm (0.63 in) 316L

Flexural strength 30 Nm

Rod 16 mm (0.63 in) 316 L separable

Flexural strength 30 Nm

Lateral load (bending moment) from flow conditions

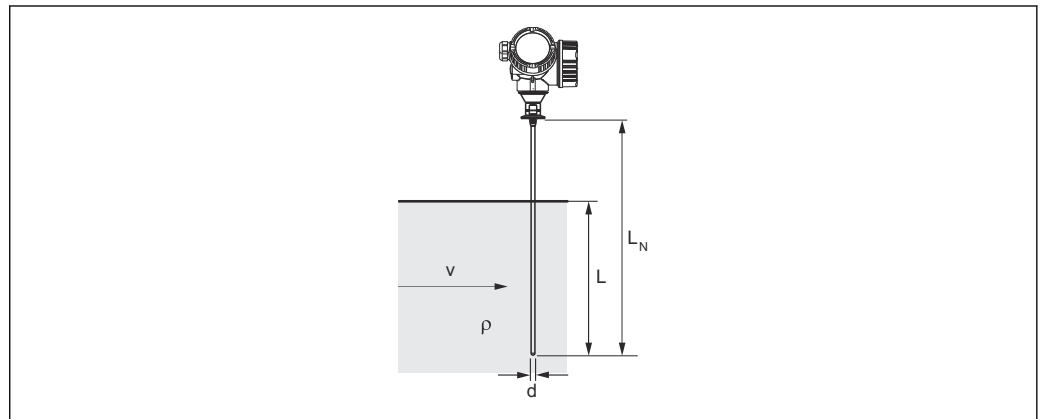

A0014175

ρ Density of the medium [kg/m³]

v Flow velocity [m/s] of the medium, perpendicular to the probe rod

d Diameter [m] of probe rod

L Level [m]

L_N Probe length [m]

The formula for calculating the bending moment M acting on the probe:


$$M = c_w \times \rho / 2 \times v^2 \times d \times L \times (L_N - 0.5 \times L)$$

With:

c_w : coefficient of friction

Sample calculation

Coefficient of friction c_w	0.9 (assuming turbulent flow - high Reynolds number)
Density ρ [kg/m ³]	1000 (e.g. water)
Probe diameter d [m]	0.008
$L = L_N$	(unfavorable conditions)

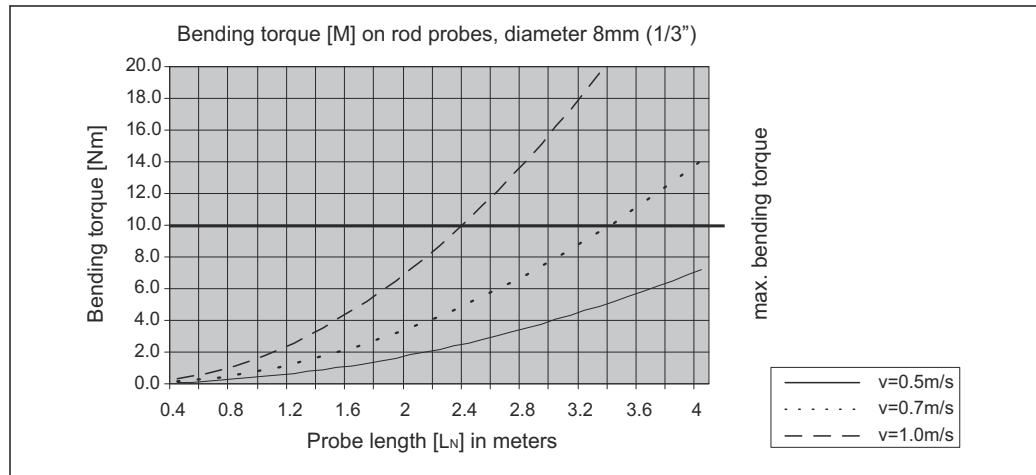

6.1.4 Lateral loading capacity (flexural strength) of coaxial probes

FMP51

Probe Ø21.3 mm 316L

Flexural strength: 60 Nm

Probe Ø42.4 mm 316L

Flexural strength: 300 Nm

Probe Ø 42.4 mm AlloyC

Flexural strength: 300 Nm

FMP54

Probe Ø 42.4 mm 316L


Flexural strength: 300 Nm

6.1.5 Information concerning the process connection



Probes are mounted on the process connection with threaded connections or flanges. If there is the danger with this installation that the probe end moves so much that it occasionally touches the vessel floor or cone, the probe may need to be shortened at the lower end and fixed in place.

Threaded connection

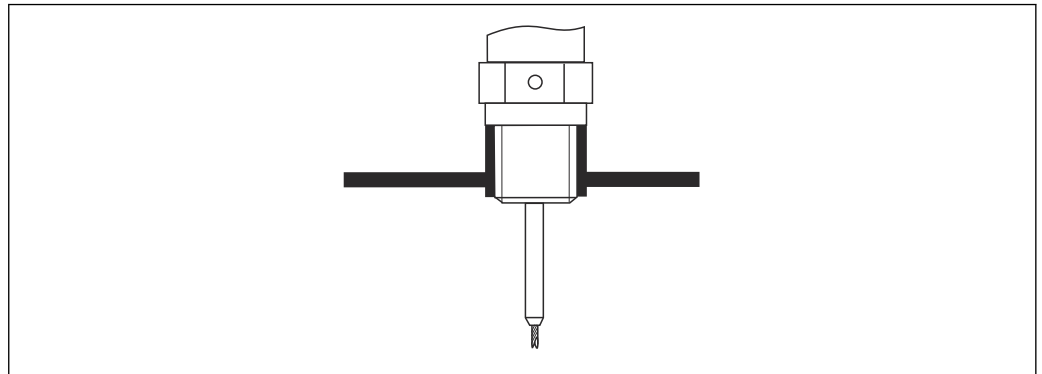

4 Mounting with threaded connection; flush with the vessel ceiling

A0015121

Sealing


The thread and the type of seal comply with DIN3852 Part 2, screwed plug, form A.

The following types of sealing ring can be used:

- For thread G $\frac{3}{4}$ ": according to DIN7603 with dimensions 27 mm × 32 mm
- For thread G1 $\frac{1}{2}$ ": according to DIN 7603 with dimensions 48 mm × 55 mm

Use a sealing ring according to this standard in form A, C or D and of a material that offers appropriate resistance for the application.

Nozzle installation

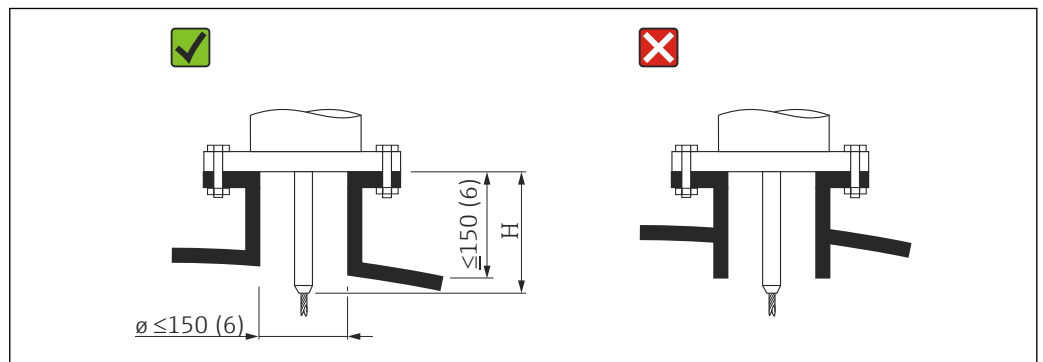

A0015122

H Length of the centering rod or the rigid part of the rope probe

- Permissible nozzle diameter: ≤ 150 mm (6 in)
For larger diameters, the near-range measuring capability may be reduced.
For large nozzles, see the section "Mounting in nozzles \geq DN300"
- Permissible nozzle height: ≤ 150 mm (6 in)
For larger heights, the near-range measuring capability may be reduced.
Larger nozzle heights are possible in special cases (on request), see sections "Centering rod for FMP51 and FMP52" and "Rod extension/centering device HMP40 for FMP54".
- The end of the nozzle should be flush with the tank ceiling in order to avoid ringing effects.

i In thermally insulated vessels, the nozzle should also be insulated in order to prevent condensate formation.

Centering rod

In the case of rope probes, it may be necessary to use a version with a centering rod so that the rope does not come in contact with the nozzle wall during the process.

The length of the optional centering rod determines the maximum nozzle height.

Rod extension/centering device HMP40 for FMP54

For FMP54 with rope probes, the rod extension/centering device HMP40 is available as an accessory. It must be used if the probe rope would otherwise come into contact with the lower edge of the nozzle.


i This accessory consists of the extension rod, corresponding to the nozzle height, on which a centering disk is also mounted if the nozzles are narrow or when used in bulk solids.

This component is delivered separately from the device. Order a correspondingly shorter probe length.

Only use centering disks with small diameters (DN40 and DN50) if there is no significant build-up in the nozzle above the disk. The nozzle must not become clogged with product.

Mounting in nozzles ≥ DN300

If installation in nozzles ≥ 300 mm (12 in) is unavoidable, installation must be carried out in accordance with the following diagram in order to avoid interference signals in the near range.

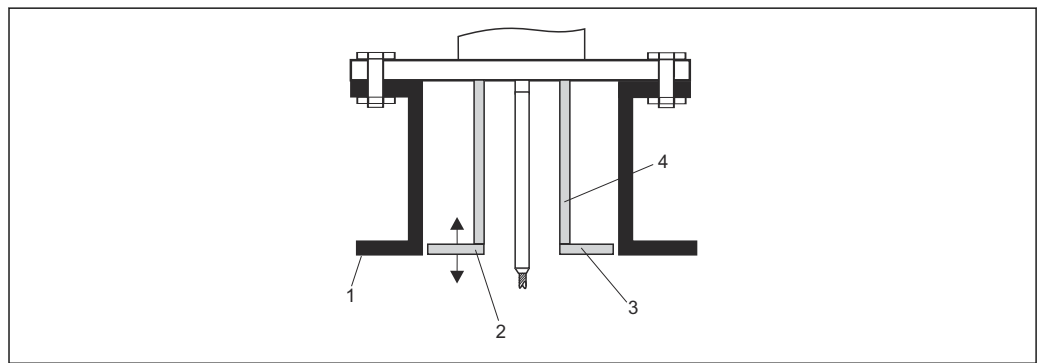

A0016199

- 1 Lower edge of the nozzle
- 2 Approximately flush with the lower edge of the nozzle (± 50 mm)
- 3 Plate, nozzle \varnothing 300 mm (12 in) = plate \varnothing 280 mm (11 in); nozzle \varnothing \geq 400 mm (16 in) = plate \varnothing \geq 350 mm (14 in)
- 4 Pipe \varnothing 150 to 180 mm

6.1.6 Mounting cladded flanges

- i** Note the following for cladded flanges:
- Use the same number of flange screws as the number of flange bores provided.
 - Tighten the screws with the necessary torque (see Table).
 - Retighten after 24 hours or after the first temperature cycle.
 - Depending on the process pressure and temperature, check and retighten the screws, where necessary, at regular intervals.


The PTFE flange cladding normally acts simultaneously as a seal between the nozzle and the device flange.

Flange size	Number of screws	Tightening torque
EN		
DN40/PN40	4	35 to 55 Nm
DN50/PN16	4	45 to 65 Nm
DN50/PN40	4	45 to 65 Nm
DN80/PN16	8	40 to 55 Nm

Flange size	Number of screws	Tightening torque
DN80/PN40	8	40 to 55 Nm
DN100/PN16	8	40 to 60 Nm
DN100/PN40	8	55 to 80 Nm
DN150/PN16	8	75 to 115 Nm
DN150/PN40	8	95 to 145 Nm
ASME		
1½"/150lbs	4	20 to 30 Nm
1½"/300lbs	4	30 to 40 Nm
2"/150lbs	4	40 to 55 Nm
2"/300lbs	8	20 to 30 Nm
3"/150lbs	4	65 to 95 Nm
3"/300lbs	8	40 to 55 Nm
4"/150lbs	8	45 to 70 Nm
4"/300lbs	8	55 to 80 Nm
6"/150lbs	8	85 to 125 Nm
6"/300lbs	12	60 to 90 Nm
JIS		
10K 40A	4	30 to 45 Nm
10K 50A	4	40 to 60 Nm
10K 80A	8	25 to 35 Nm
10K 100A	8	35 to 55 Nm
10K 100A	8	75 to 115 Nm

6.1.7 Securing the probe

Securing rope probes

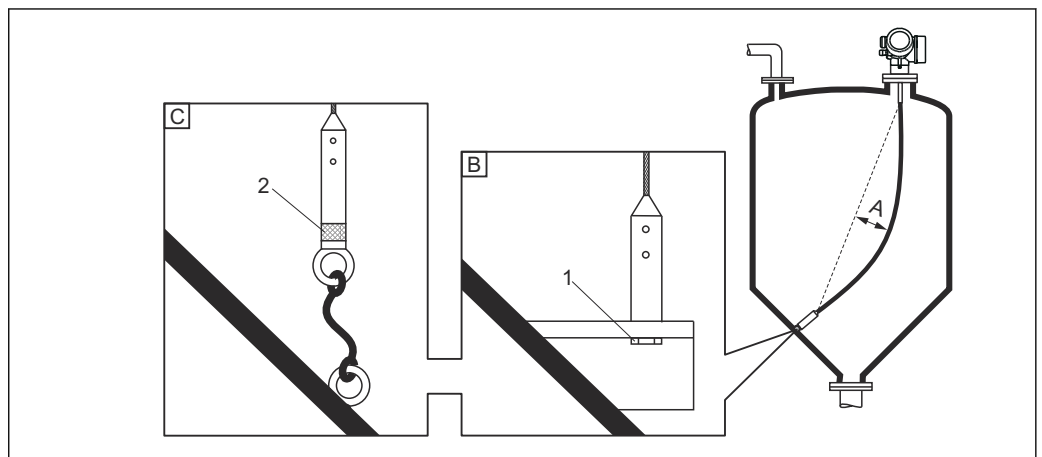


A0012609

- A Sag: $\geq 10 \text{ mm/m}$ (0.12 in/ft) probe length
- B Reliably grounded end of probe
- C Reliably insulated end of probe
- 1 Fastener in female thread of probe weight
- 2 Insulated fastening kit

- The end of the rope probe must be secured or fixed down under the following conditions:
 - If the probe temporarily comes into contact with the vessel wall, the cone, internal fittings/beams or another part of the installation
- A female thread is provided in the probe weight to secure the end of the probe:
 - Rope 4 mm ($\frac{1}{8}$ in), 316: M 14
- When fixed down, the end of the probe must be reliably grounded or reliably insulated.
 - If it is not otherwise possible to secure the probe with a reliably insulated connection, use the insulated fastening kit.
- If the end of the probe is fixed down and grounded, the search for a positive end-of-probe signal must be activated. Otherwise automatic probe length correction is not possible.
 - Navigation: Expert → Sensor → EOP evaluation → EOP search mode
 - Setting: **Positive EOP** option
- To prevent an extremely high tensile load (e.g. due to thermal expansion) and the risk of the rope breaking, the rope must be slack. Required sag: ≥ 10 mm/m (0.12 in/ft) rope length.
 - Pay attention to the tensile loading capacity of rope probes.

Securing rod probes

- In the case of WHG approval: a support is required for probe lengths ≥ 3 m (10 ft).
- In general, rod probes must be secured in the event of horizontal flow (e.g. from an agitator) or strong vibrations.
- Only secure rod probes directly at the end of the probe.

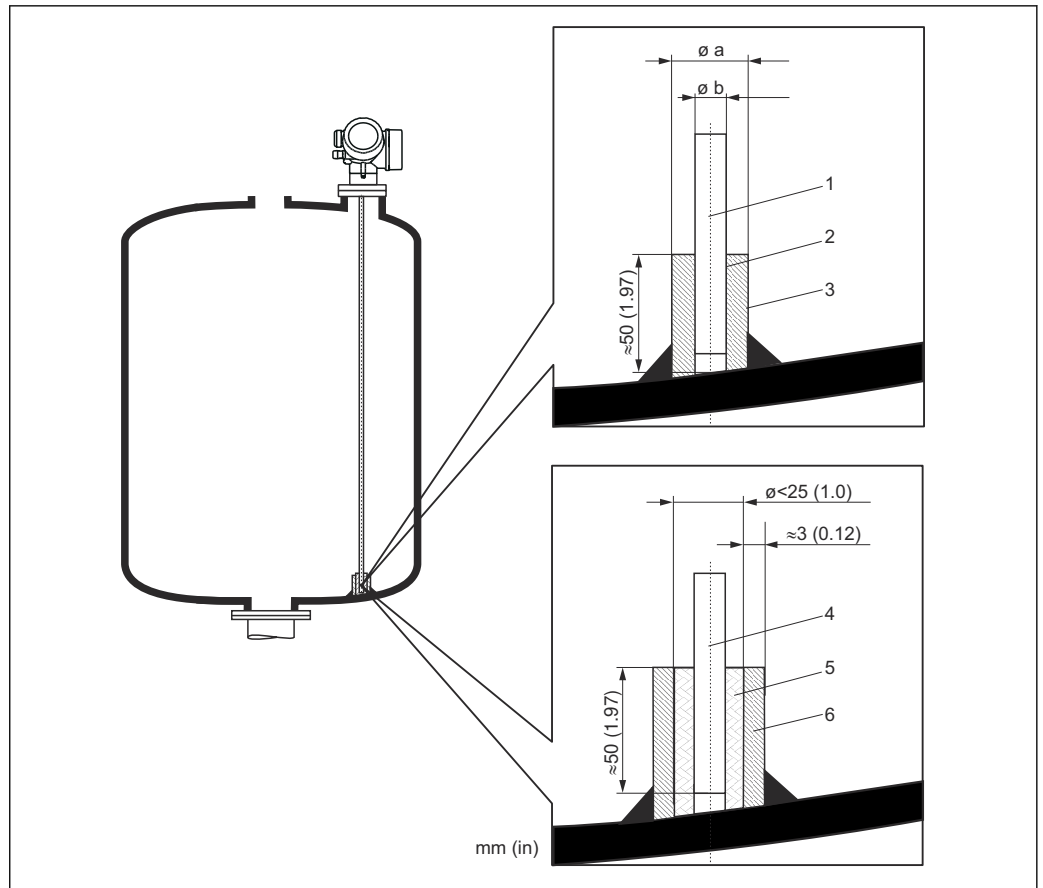

A0012607

Unit of measurement mm (in)

- 1 Probe rod, uncoated
- 2 Sleeve with narrow bore to ensure electrical contact between the sleeve and the rod.
- 3 Short metal pipe, e.g. welded in place
- 4 Probe rod, coated
- 5 Plastic sleeve, e.g. PTFE, PEEK, PPS
- 6 Short metal pipe, e.g. welded in place

Probe \varnothing 8 mm (0.31 in)

- $a < \varnothing$ 14 mm (0.55 in)
- $b = \varnothing$ 8.5 mm (0.34 in)

Probe \varnothing 12 mm (0.47 in)

- $a < \varnothing$ 20 mm (0.78 in)
- $b = \varnothing$ 12.5 mm (0.52 in)

Probe \varnothing 16 mm (0.63 in)

- $a < \varnothing$ 26 mm (1.02 in)
- $b = \varnothing$ 16.5 mm (0.65 in)

NOTICE

Poor grounding of the probe end may cause incorrect measurements.

- ▶ Use a sleeve with a narrow bore to ensure good electrical contact between the sleeve and the probe rod.


NOTICE

Welding can damage the main electronics module.

- ▶ Before welding: Ground the probe rod and remove the electronics.

Securing coaxial probes

For WHG approval: a support is required for probe lengths \geq 3 m (10 ft).

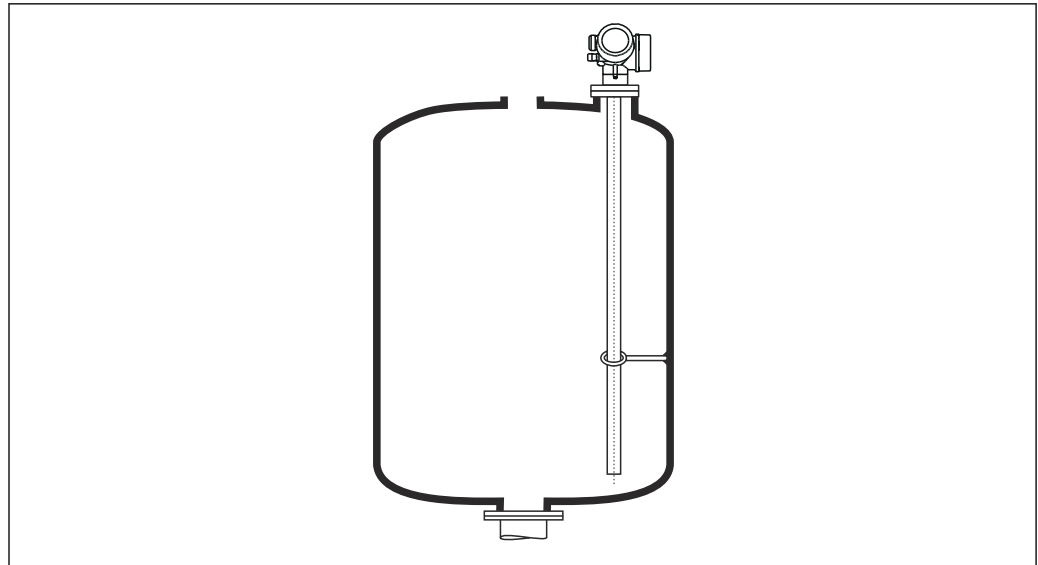


A0012608

Coaxial probes can be secured (fixed) at any point in the ground tube.

6.1.8 Special installation situations

Bypasses and stilling wells

- i** The use of centering disks/stars/weights (available as accessories) is recommended in bypass and stilling well applications.
- i** Since the measuring signal permeates a large number of plastics, incorrect measurements can result when the device is installed in bypasses or stilling wells made of plastic. For this reason use a bypass or stilling well made of metal.

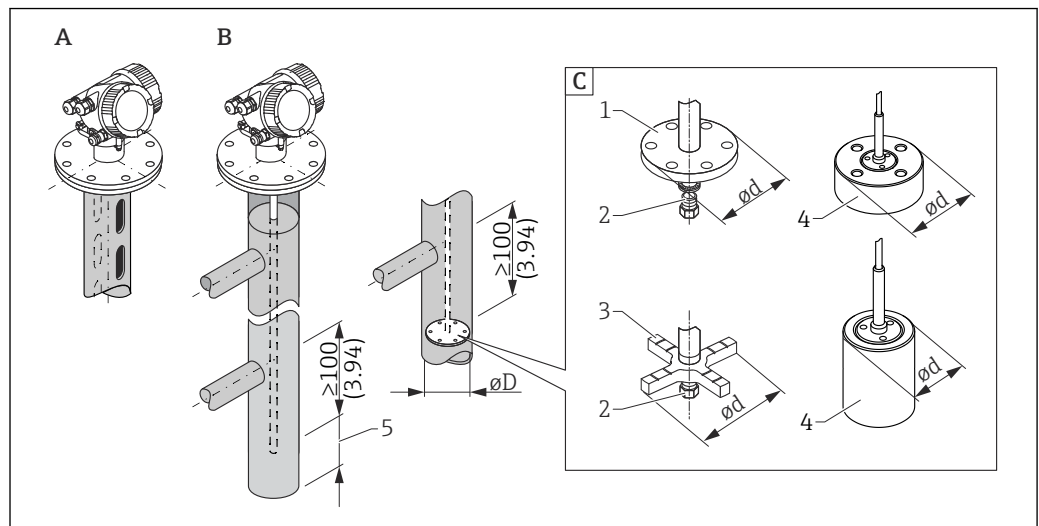


A0039216


5 Unit: mm (in)

- A Mounting in stilling well
- B Mounting in bypass
- C Centering disk/centering star/centering weight
- 1 Metal centering disk (316L) for level measurement
- 2 Securing screw; torque: 25 Nm \pm 5 Nm
- 3 Non-metal centering star (PEEK, PFA) preferred for interface measurement
- 4 Metal centering weight (316L) for level measurement
- 5 Minimum distance between probe end and lower edge of bypass 10 mm (0.4 in)

- Pipe diameter: > 40 mm (1.6 in) (for rod probes).
- A rod probe can be installed in pipes with a diameter of up to 150 mm (6 in). The use of a coaxial probe is recommended for larger pipe diameters.
- Side outlets, holes, slots and welds - with a maximum inward projection of 5 mm (0.2 in) - do not affect the measurement.
- There should not be any changes in the diameter of the pipe.
- The probe must be 100 mm (4 in) longer than the lower outlet.
- The probes must not touch the pipe wall within the measuring range. Support or brace the probe if necessary. All rope probes are prepared for bracing in vessels (probe weight with anchor hole).
- If a metal centering disk is mounted at the end of the probe rod, the signal for detecting the end of the probe is reliably defined.
Note: The non-metal centering stars made of PEEK or PFA are recommended for interface measurements. When using metal centering disks, it is important to ensure that the lower medium covers the centering disk at all times. Otherwise, incorrect interface measurements can result.
- Coaxial probes can be used within any restrictions provided that the pipe diameter permits their installation.

 For bypasses with condensate formation (water) and a medium with a low relative permittivity (e.g. hydrocarbons):

Over time, the bypass fills with condensate up to the lower outlet. When levels are low, the level echo is masked by the echo of the condensate as a result. In this range, the level of the condensate is output and the correct value is only output when levels are higher. For this reason, ensure that the lower outlet is 100 mm (4 in) below the lowest level to be measured and fit a metal centering disk at the level of the lower edge of the lower outlet.

 In thermally insulated vessels, the bypass should also be insulated in order to prevent condensate formation.

Assignment of centering disk/centering star/centering weight to the pipe diameter

Metal centering disk (316L)

for level measurement

Rod centering disk (Ø d) 45 mm (1.77 in)

for pipe diameters (Ø D)

DN50/2" to DN65/2½"

Rod centering disk (Ø d) 75 mm (2.95 in)

for pipe diameters (Ø D)

DN80/3" to DN100/4"

Rope centering disk (Ø d) 75 mm (2.95 in)

for pipe diameters (Ø D)

DN80/3" to DN100/4"

Metal centering weight (316L)

for level measurement

Rope centering weight (Ø d) 45 mm (1.77 in), h 60 mm (2.36 in)

for pipe diameters (Ø D)

DN50/2"

Rope centering weight (Ø d) 75 mm (2.95 in), h 30 mm (1.81 in)

for pipe diameters (Ø D)

DN80/3"

Rope centering weight (Ø d) 95 mm (3.74 in), h 30 mm (1.81 in)

for pipe diameters (Ø D)

DN100/4"

Non-metal centering star (PEEK)


For level and interface measurement, operating temperature:
 -60 to +250 °C (-76 to 482 °F)

Rod centering star (∅ d) 48 to 95 mm (1.89 to 3.74 in)
 for pipe diameters (∅ D)
 ≥ DN50/2"

Non-metal centering star (PFA)

for level and interface measurement, operating temperature:
 -200 to +250 °C (-328 to +482 °F)


Rod centering star (∅ d) 37 mm (1.46 in)
 for pipe diameters (∅ D)
 ≥ 40 mm (1.57 in)

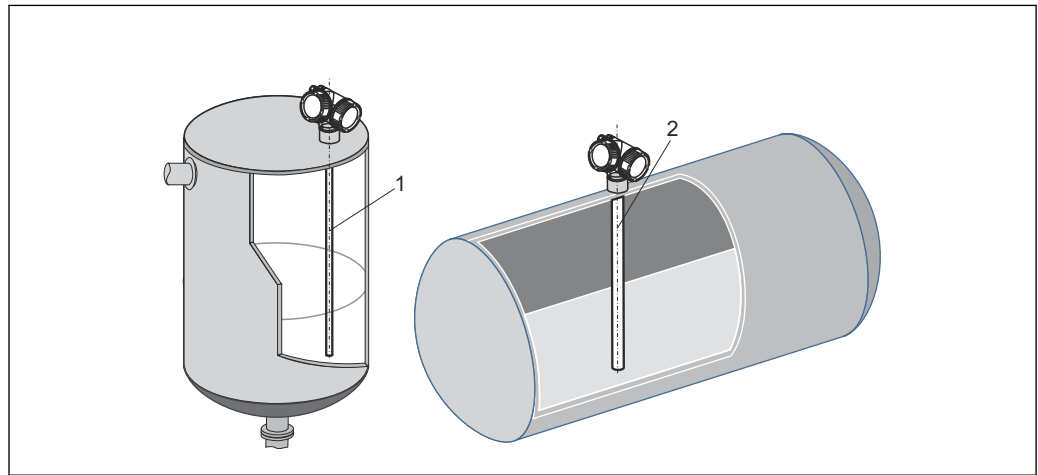Horizontal cylindrical and vertical tanks

A0014141

1 Coaxial probe


- Any distance from wall provided occasional contact is avoided.
- Use a coaxial probe (1) if installing in tanks with many internal fixtures or internal fixtures located close to the probe.

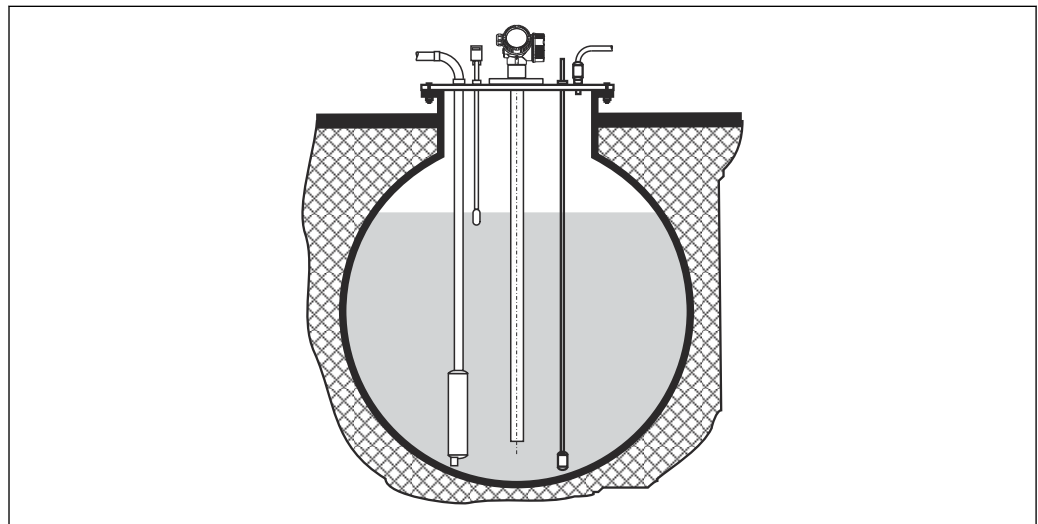Underground tanks

A0014142

In the case of nozzles with large diameters, use a coaxial probe to avoid reflections at the nozzle wall.


Mounting at an angle

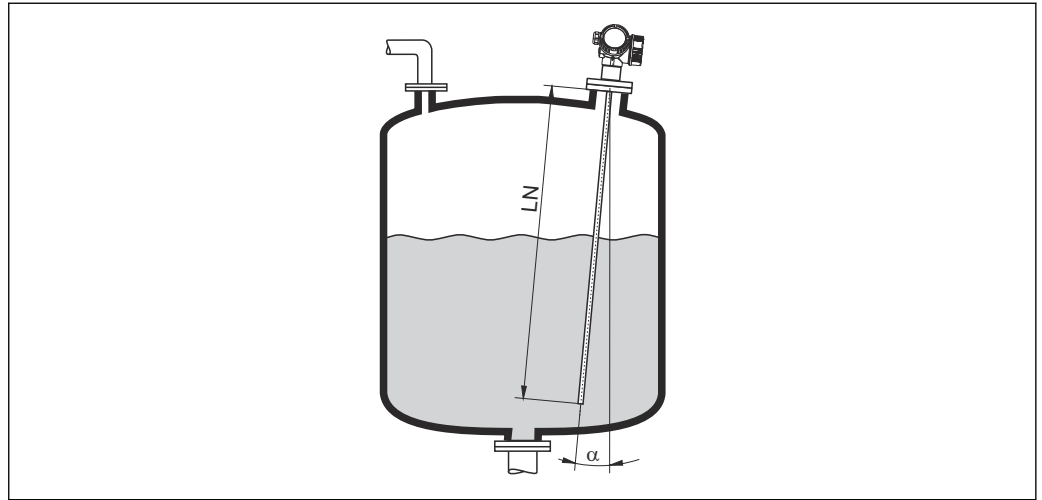

A0014145

- For mechanical reasons, the probe should be installed as vertically as possible.
- If the probe is installed at an angle, the length of the probe must be reduced depending on the angle of installation.
 - α 5°: LN_{max} 4 m (13.1 ft)
 - α 10°: LN_{max} 2 m (6.6 ft)
 - α 30°: LN_{max} 1 m (3.3 ft)

Non-metal vessels

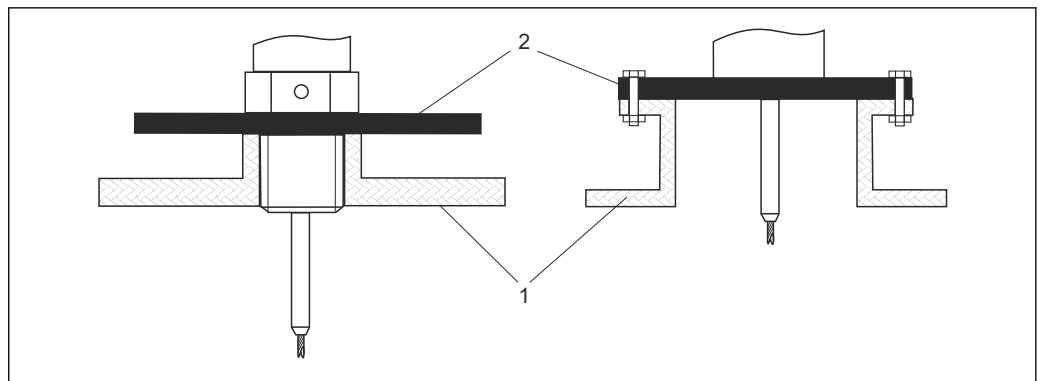

A0012527

- 1 Non-metal vessel
- 2 Metal sheet or metal flange


To ensure good measurement results when mounting on non-metal vessels

- Use a device with a metal flange (minimum size DN50/2").
- Alternatively, mount a metal plate with a diameter of at least 200 mm (8 in) at a right angle to the probe at the process connection.

i A metal surface is not required at the process connection in the case of coaxial probes.

Plastic and glass vessels: Mounting the probe on the outside wall

In the case of plastic and glass vessels, the probe can also be mounted on the outside wall under certain conditions.

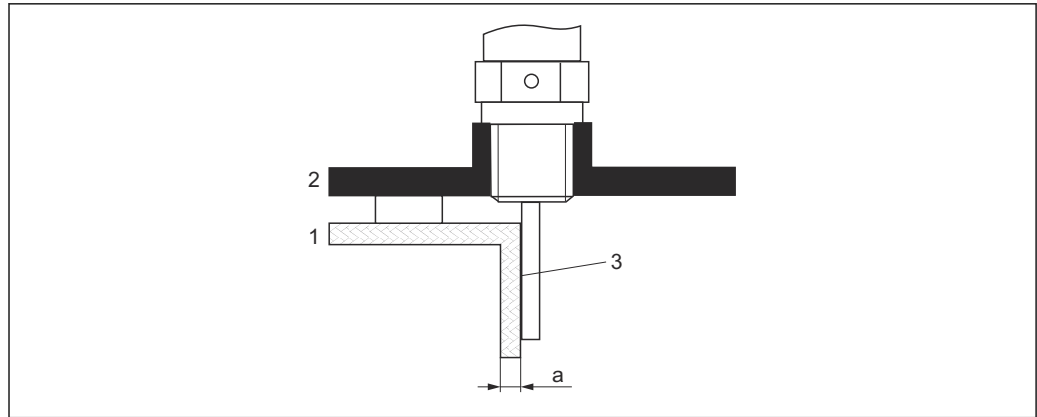

A0014150

- 1 Plastic or glass vessel
- 2 Metal plate with screw-in sleeve
- 3 No space between vessel wall and probe!

Requirements

- Relative permittivity of medium: $\epsilon_r > 7$
- Non-conductive vessel wall.
- Maximum wall thickness (a):
 - Plastic: < 15 mm (0.6 in)
 - Glass: < 10 mm (0.4 in)
- No metal reinforcements on the vessel

Note the following when mounting the device:

- Mount the probe directly on the tank wall without any clearance.
- To protect against interference with the measurement, fit a plastic half pipe with a minimum diameter of 200 mm (8 in) or a similar protective unit on the probe.
- If the vessel diameter is less than 300 mm (12 in):
 - On the opposite side of the vessel, fit a grounding plate that is conductively connected to the process connection and covers around half of the vessel's circumference.
- If the vessel diameter is 300 mm (12 in) or higher:
 - At the process connection, fit a metal plate with a diameter of at least 200 mm (8 in) at a right angle to the probe (see above).

Adjustment when mounting on the vessel exterior

When the probe is mounted on the outside of the vessel wall, the wave velocity of the signal is reduced. There are two ways to compensate for this.

Compensation via gas phase compensation factor

The effect of the dielectric wall is comparable to the effect of a dielectric gas phase and can therefore be corrected in the same way. The correction factor is calculated as the quotient of the actual probe length LN and the probe length measured when the vessel is empty.

i The device determines the position of the end-of-probe signal in the differential curve. Therefore, the value of the measured probe length depends on the mapping curve. In order to obtain a more accurate value, it is advisable to determine the measured probe length manually using the envelope curve display in FieldCare.

1. Parameter Expert → Sensor → Gas phase compensation → GPC mode
 - ↳ Select **Const. GPC factor** option.
2. Parameter Expert → Sensor → Gas phase compensation → Const. GPC factor
 - ↳ Quotient: Enter "(actual probe length)/(measured probe length)".

Compensation via the calibration parameters

If it is necessary to actually compensate for a gas phase, the gas phase compensation function is not available for the correction of external mounting. In this case, the


calibration parameters (**Empty calibration** and **Full calibration**) must be adjusted. In addition, a value that is greater than the actual probe length must be entered in the **Present probe length** parameter. In all three cases, the correction factor is the quotient of the probe length measured when the vessel is empty and the actual probe LN.

i The device searches for the end-of-probe signal in the differential curve. Therefore, the value of the measured probe length depends on the mapping curve. In order to obtain a more accurate value, it is advisable to determine the measured probe length manually using the envelope curve display in FieldCare.

1. Parameter Setup → Empty calibration
 - ↳ Increase the parameter value by the factor "(measured probe length)/(actual probe length)".
2. Parameter Setup → Full calibration
 - ↳ Increase the parameter value by the factor "(measured probe length)/(actual probe length)".
3. Parameter Setup → Advanced setup → Probe settings → Probe length correction → Confirm probe length
 - ↳ Select **Manual input** option.
4. Parameter Setup → Advanced setup → Probe settings → Probe length correction → Present probe length
 - ↳ Enter the measured probe length.


Vessel with thermal insulation

i If process temperatures are high, the device must be included in normal vessel insulation (1) in order to prevent the electronics heating up as a result of thermal radiation or convection. The insulation may not go beyond the points labeled "MAX" in the drawings.

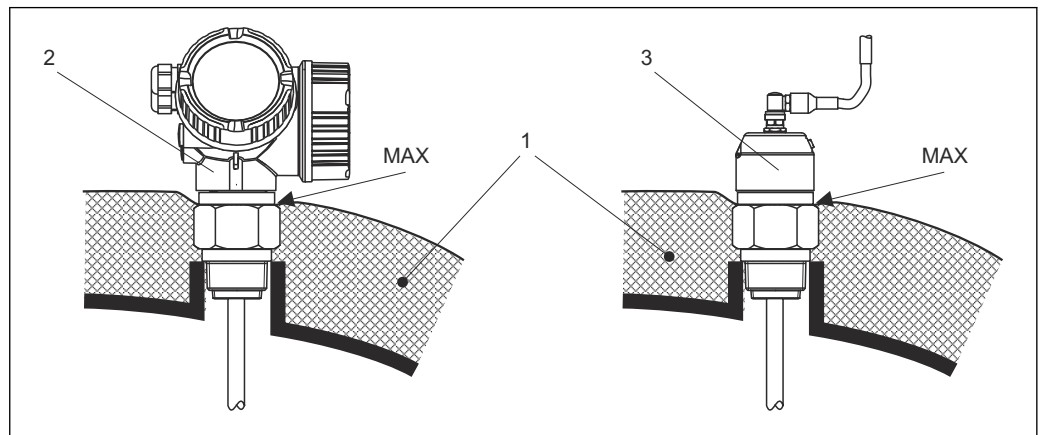

6 Process connection with thread


- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

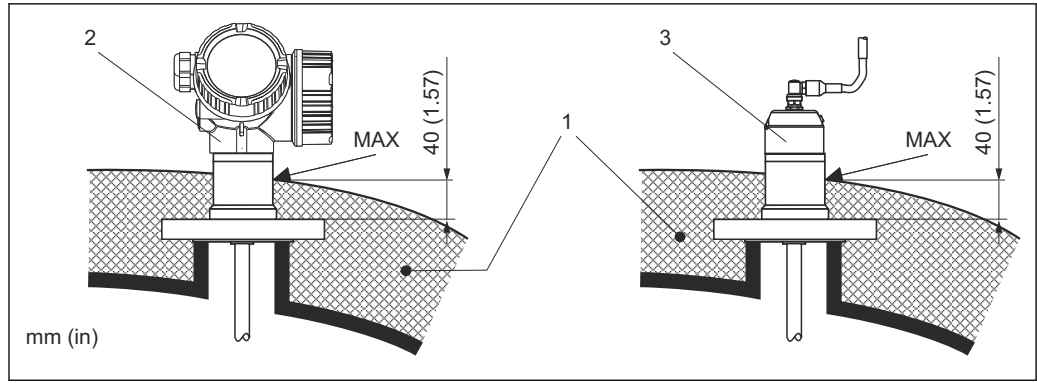

A0014654

7 Process connection with flange

- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

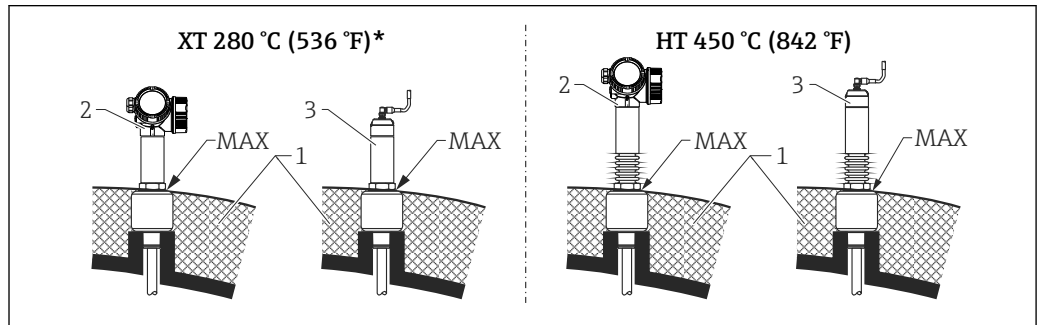


A0014657

8 Process connection with thread - sensor version XT and HT

- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

* The XT version is not recommended for saturated steam above 200 °C (392 °F); the HT version should be used instead

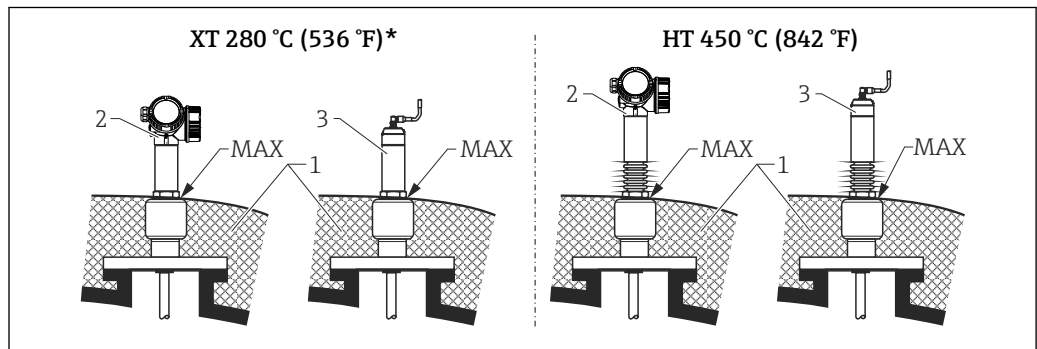

A0014658

9 Process connection with flange - sensor version XT and HT

- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

* The XT version is not recommended for saturated steam above 200 °C (392 °F); the HT version should be used instead


Replacing a displacer system in an existing displacer chamber

FMP51 and FMP54 are a perfect replacement for a conventional displacer system in an existing displacer chamber. Flanges that suit Fisher and Masoneilan displacer chambers are available for this purpose (special product for FMP51; feature 100 of the product

structure, options LNJ, LPJ, LQJ for FMP54). Thanks to menu-guided local operation, commissioning the Levelflex only takes a few minutes. Replacement is also possible when partially filled, and wet calibration is not required.

Your benefits:

- No moving parts, therefore zero-maintenance operation.
- Not affected by process influences such as temperature, density, turbulence and vibrations.
- The rod probes can be easily shortened or replaced. Therefore, the probe can also be easily adjusted on site.

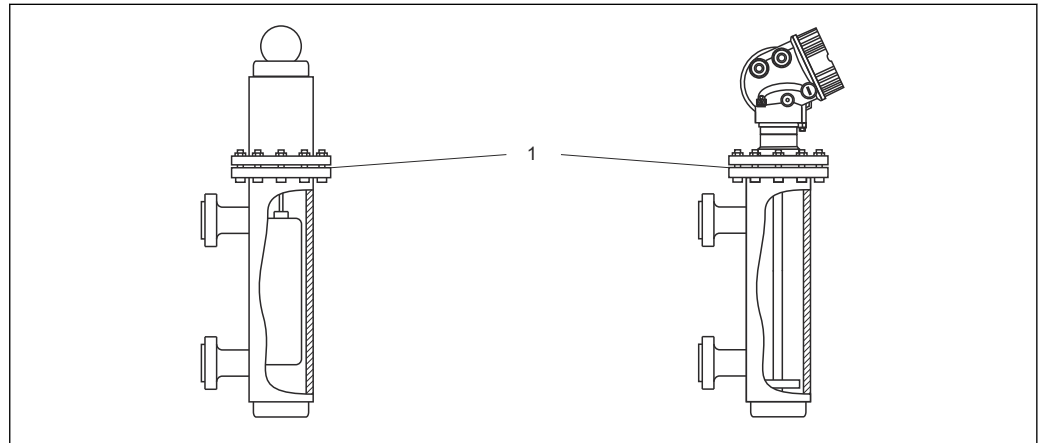

A0014153

1 Flange of the displacer chamber

Planning instructions:


- In normal cases, use a rod probe. When installing into a metal displacer chamber up to 150 mm (5.91 in), you have all the advantages of a coaxial probe.
- Contact between the probe and the side wall must be avoided. Where necessary, use a centering disk or centering star at the bottom end of the probe.
- The centering disk or centering star must be adapted as accurately as possible to the internal diameter of the displacer chamber to also ensure correct operation around the probe end.

Additional information regarding interface measurement

- In the case of oil and water, the centering star should be positioned at the lower edge of the lower outlet (water level).
- There should not be any changes in the diameter of the pipe. Use the coaxial probe if necessary.
- It must be ensured that rod probes do not come into contact with the wall. Where necessary, use a centering star at the end of the probe.
- The non-metal centering stars made of PEEK or PFA are recommended for interface measurements. When using metal centering disks, it is important to ensure that the lower medium covers the centering disk at all times. Otherwise, incorrect interface measurements can result.

6.2 Mounting the device

6.2.1 Tool list

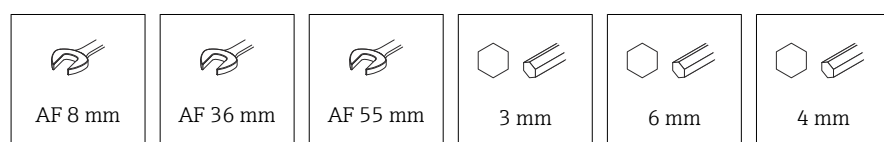


- To shorten rope probes: use a saw or bolt cutters.
- To shorten rod or coaxial probes: use a saw.
- For flanges and other process connections: use an appropriate mounting tool.

6.2.2 Mounting the rod probe

i Coaxial probes are ready mounted and adjusted upon delivery. Once installed, they are ready for immediate use. Additional settings are not necessary.

The device is supplied with the rod probe disassembled. The probe must be mounted as follows prior to installation:

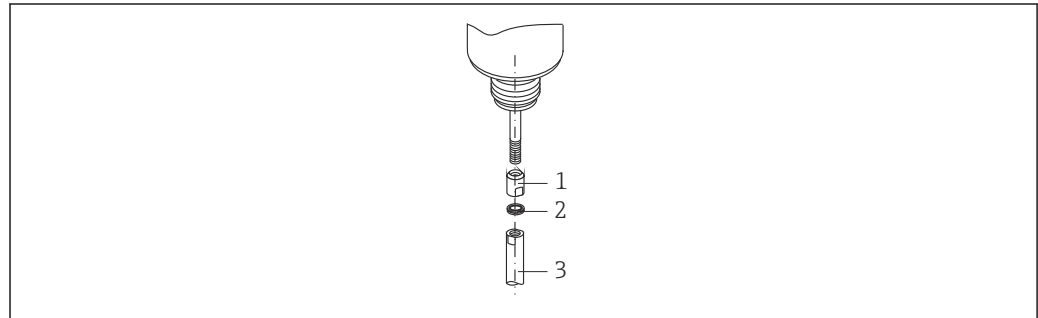

- 1 Threaded sleeve
2 Nord Lock washers
3 Probe rod

1. Screw the threaded sleeve onto the connection thread (M10x1) of the gland as far as the end stop. In doing so, ensure that the chamfer is oriented towards the gland.
2. Fit Nord Lock washers on the connection thread. Install the pre-assembled washers in pairs, cam face to cam face.
3. Screw the probe rod onto the threaded bolt, hold it steady by the threaded sleeve with an open-end wrench (14 mm AF) and tighten at the wrench flats of the probe rod using an open-end wrench (14 mm AF). Torque 15 Nm.

6.2.3 Shortening the probe

Shortening rod probes


Rod probes must be shortened if the distance to the vessel floor or outlet cone is less than 10 mm (0.4 in). To shorten, saw off the bottom end of the rod probe.

i Coated rod probes **cannot** be shortened.

Shortening rope probes

Rope probes must be shortened if the distance to the vessel floor or outlet cone is less than 150 mm (6 in).

i Coated rope probes **cannot** be shortened.

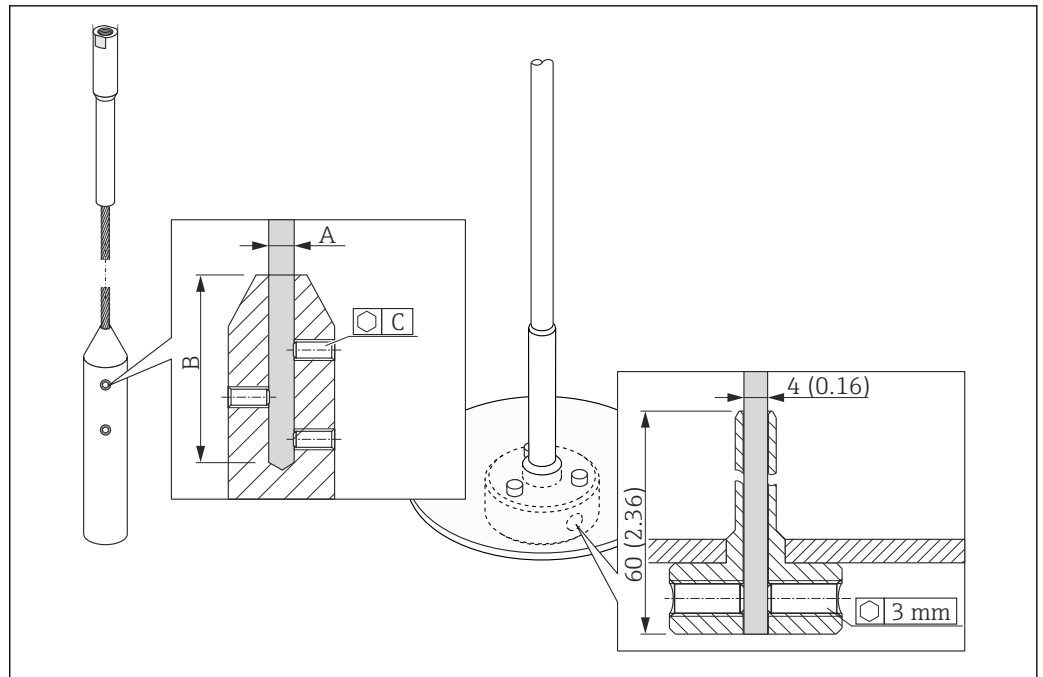

A0012453

Rope material 316

- A:
4 mm (0.16 in)
- B:
40 mm (1.6 in)
- C:
3 mm; 5 Nm (3.69 lbf ft)

1. Using the Allen key, loosen the setscrews on the rope weight or on the fastener for the centering disk. Note: The setscrews have a clamping coating in order to prevent them from becoming loose accidentally. A higher torque is therefore required to loosen the screws.
2. Remove the released rope from the weight or from the sleeve.
3. Measure off the new rope length.
4. At the point to be shortened, wrap adhesive tape around the rope to prevent it from fraying.
5. Saw off the rope at a right angle or cut it off with a bolt cutter.
6. Insert the rope completely into the weight or sleeve.
7. Screw the setscrews back into place. Due to the clamping coating of the setscrews, it is not necessary to apply a locking compound.

Shortening coaxial probes

Coaxial probes must be shortened if the distance to the vessel floor or outlet cone is less than 10 mm (0.4 in).


- i** Coaxial probes can be shortened by a maximum of 80 mm (3.2 in) from below. They have centering devices on the inside to secure the rod centrally in the pipe. A raised edge holds the centering devices in place on the rod. It is possible to shorten the probe up to approx. 10 mm (0.4 in) below the centering device.

To shorten, saw off the bottom end of the coaxial probe.

Entering the new probe length

After shortening the probe:

1. Switch to the **Probe settings** submenu and perform a probe length correction.
- 2.

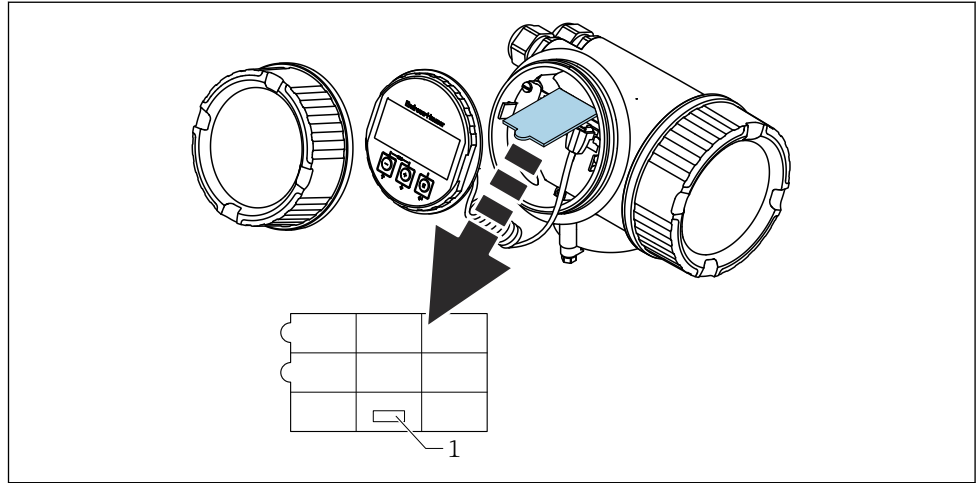

1 Field for the new probe length

For documentation purposes, enter the new probe length into the quick reference guide which can be found in the electronics housing behind the display module.

6.2.4 Device with gas phase compensation: mounting the probe rod

i This section applies only to the FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG)


Coaxial probes

Coaxial probes with reference reflection are ready mounted and adjusted upon delivery. Once installed, they are ready for immediate use. Additional settings are not necessary.

Rod probes

Rod probes with reference reflection are supplied with the rod probe disassembled. The rod probe must be mounted as follows prior to installation:

i The joints between the individual rod segments are secured by the enclosed Nord Lock washers. Install the pre-assembled washers in pairs, cam face to cam face.

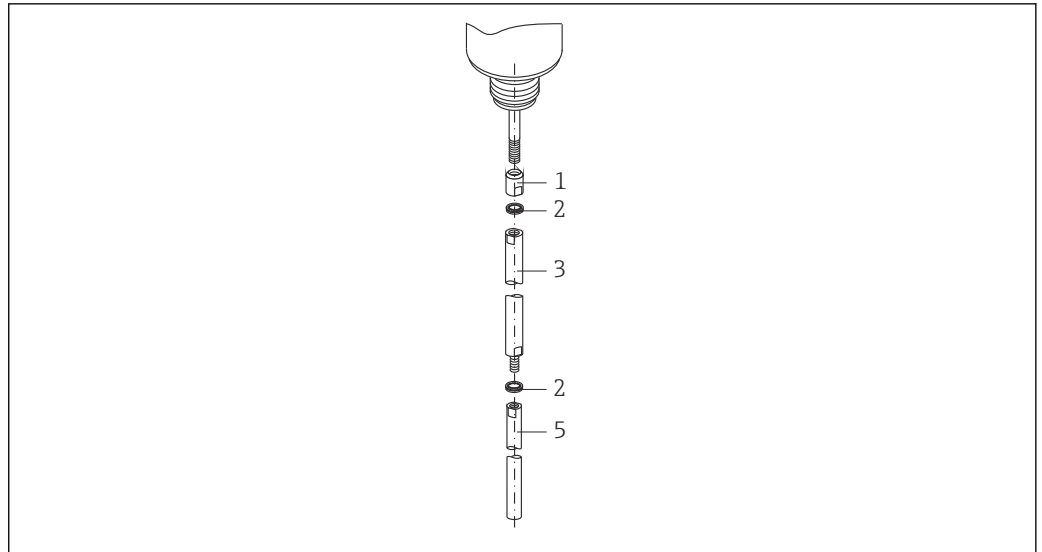

A0014545


- 1 Threaded sleeve
- 2 Nord Lock washers
- 3 Probe rod; larger diameter
- 4 Probe rod; larger diameter

1. Screw the threaded sleeve onto the connection thread (M10x1) of the gland as far as the end stop. In doing so, ensure that the chamfer is oriented towards the gland.
2. Fit Nord Lock washers on the connection thread.
3. Screw the probe rod with the larger diameter onto the connection thread and fasten it hand-tight.
4. Fit the second pair of Nord Lock washers on the threaded bolt.
5. Screw the probe rod with the smaller diameter onto the threaded bolt, hold it steady by the threaded sleeve with an open-end wrench (14 mm AF) and tighten at the wrench flats of the probe rod using an open-end wrench (14 mm AF). Torque 15 Nm.

i After mounting the rod probe in the stilling well or bypass, check and - if necessary - correct the setting of the reference distance in the unpressurized state.

6.2.5 Mounting the device

Mounting devices with a threaded connection

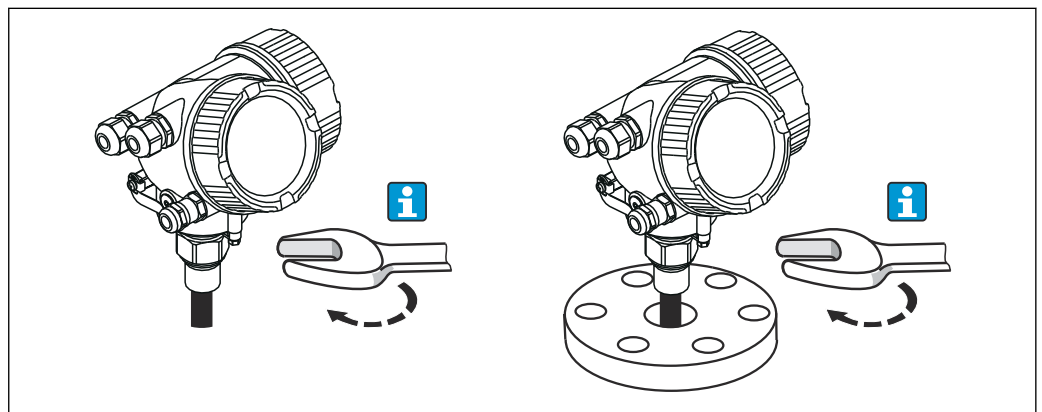

A0012528

Screw the device with the threaded connection into a sleeve or flange and then secure it to the process vessel via the sleeve/flange.

- i**
 - When screwing into place, turn by the hex bolt only:
 - Thread ¾": 36 mm
 - Thread 1½": 55 mm
 - Maximum permissible tightening torque:
 - Thread ¾": 45 Nm
 - Thread 1½": 450 Nm
 - Recommended torque when using the supplied aramid fiber seal and 40 bar (580 psi) pressure (FMP51 only; no seal is supplied for FMP54):
 - Thread ¾": 25 Nm
 - Thread 1½": 140 Nm
 - When installing in metal vessels, ensure there is good metal contact between the process connection and the vessel.

Mounting devices with a flange


If a seal is used to mount the device, use uncoated metal screws to ensure good electrical contact between the process flange and the probe flange.

Mounting rope probes

NOTICE

Electrostatic discharge can damage the electronics.

- ▶ Ground the housing before lowering the rope probe into the vessel.

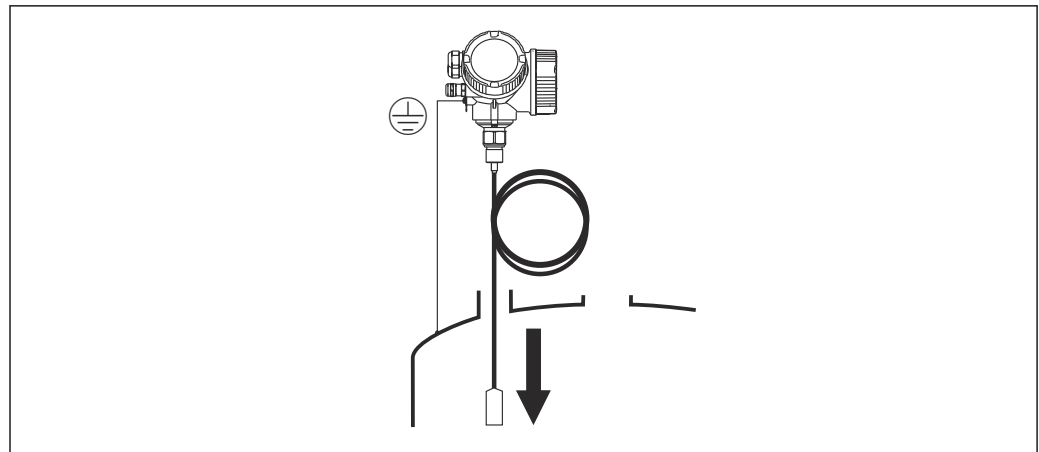

A0012852

Pay attention to the following when introducing the rope probe into the vessel:

- Uncoil the rope slowly and lower it carefully into the vessel.
- Make sure the rope does not bend or buckle.
- Avoid uncontrolled swinging of the weight, as this could damage internal fittings in the vessel.

6.2.6 Mounting the "Sensor, remote" version

i This section only applies for devices with the version "Probe design" = "Sensor, remote" (feature 600, version MB/MC/MD).

The following is included in the delivery with the version "Probe design" = "Remote":

- The probe with process connection
- The electronics housing
- The mounting bracket for mounting the electronics housing on a wall or post
- The connection cable (length as ordered). The cable has one straight plug and one angled at 90°. Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.

CAUTION


Mechanical stress can damage the plugs of the connection cable or cause them to become loose.

- ▶ Mount the probe and the electronics housing securely before connecting the connecting cable.
- ▶ Lay the connecting cable in such a way that it is not exposed to mechanical stress. Minimum bending radius: 100 mm (4 in).
- ▶ When connecting the cable, connect the straight plug before you connect the angled plug. Torque for the union nuts of both plugs: 6 Nm.

i The probe, electronics and connection cable are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

In the event of strong vibrations, a locking compound, e.g. Loctite 243, can also be used on the plug-in connectors.

Mounting the electronics housing

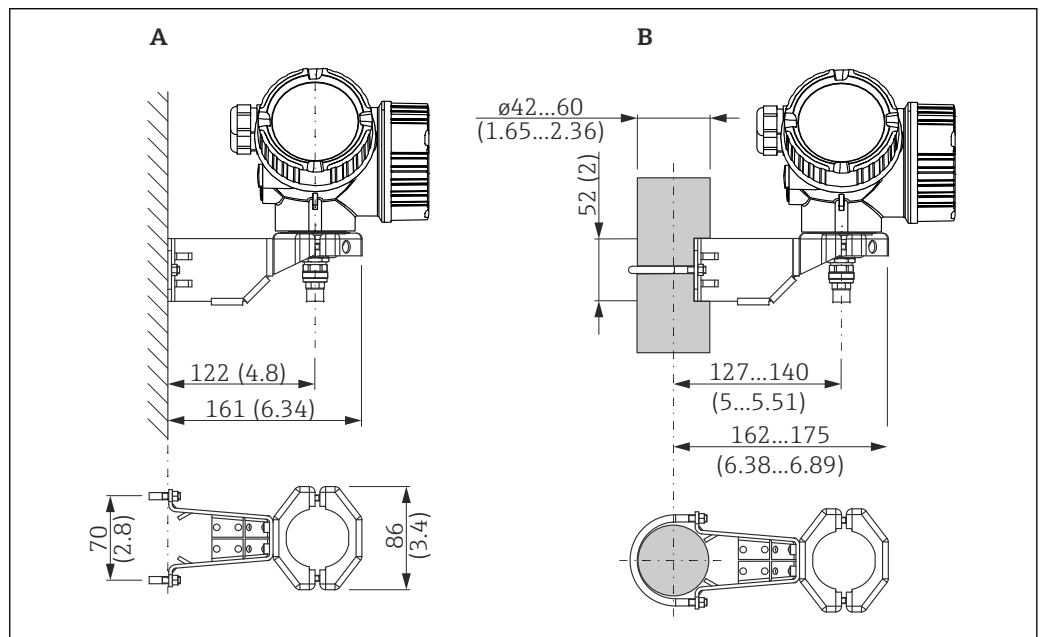


10 Mounting the electronics housing with the mounting bracket. Unit of measurement mm (in)

- A Wall mounting
- B Post mounting

Connecting the connecting cable



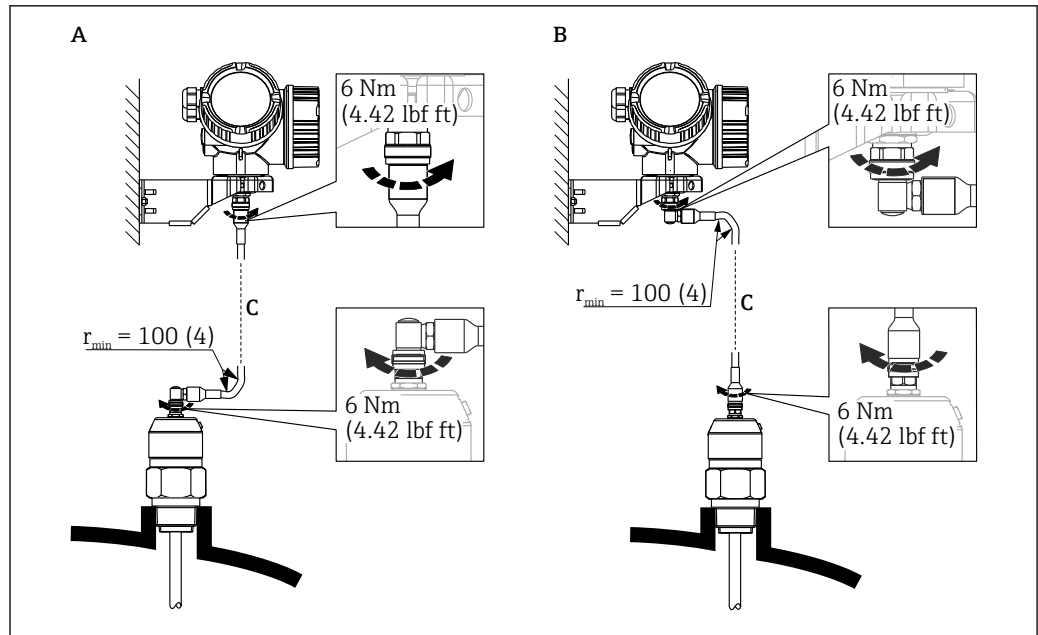


A0014794

11 Connecting the connecting cable. The cable can be connected in the following ways: Unit of measurement mm (in)

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

6.2.7 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

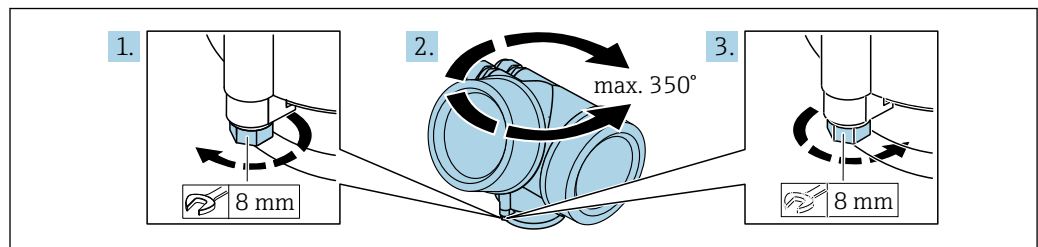


A0032242

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housings; 2.5 Nm for aluminum or stainless steel housing).

6.2.8 Turning the display


Opening the cover

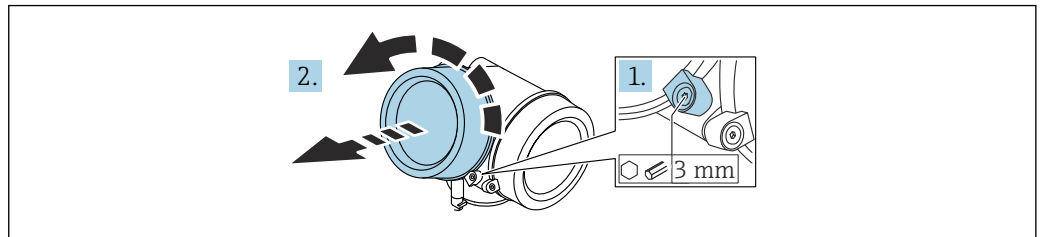

A0021430

1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90° counterclockwise.
2. Unscrew the electronics compartment cover and check the cover seal; replace it if necessary.


Turning the display module

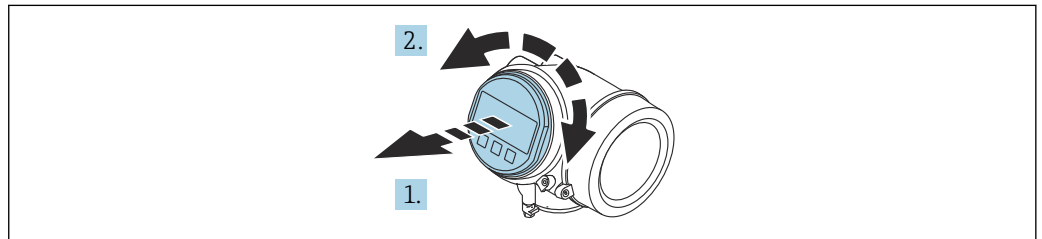

A0036401

1. Pull out the display module with a gentle rotational movement.
2. Turn the display module to the desired position: Max. $8 \times 45^\circ$ in each direction.
3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

Closing the cover of the electronics compartment

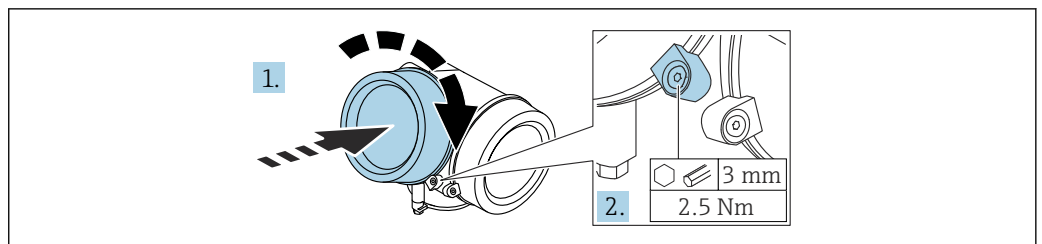

A0021451

1. Screw down the cover of the electronics compartment.
2. Turn the securing clamp 90° in the clockwise direction and, using an Allen key (3 mm), tighten the screw of the securing clamp on the electronics compartment cover with 2.5 Nm.

6.3 Post-mounting check

- Is the device free from damage (visual inspection)?
- Are the measuring point identification and labeling correct (visual inspection)?

- Is the measuring device protected against precipitation and sunlight?
- Are the securing screws and cover lock tightened securely?
- Does the measuring device comply with the measuring point specifications?

For example:


- Process temperature
- Process pressure
- Ambient temperature
- Measuring range

7 Electrical connection

7.1 Connecting requirements

7.1.1 Terminal assignment

Terminal assignment, 4-wire: 4 to 20 mA HART (90 to 253 V_{AC})

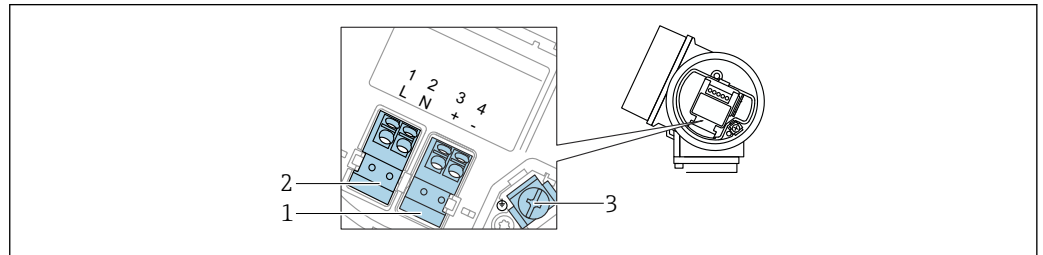

12 Terminal assignment, 4-wire: 4 to 20 mA HART (90 to 253 V_{AC})


- 1 Connection 4 to 20 mA HART (active): terminals 3 and 4
- 2 Power supply connection: terminals 1 and 2
- 3 Terminal for cable shield

CAUTION

To ensure electrical safety:

- ▶ Do not disconnect the protective ground connection.
 - ▶ Disconnect the device from the supply voltage before disconnecting the protective ground.
- i** Connect protective ground to the inner ground terminal (3) before connecting the power supply. If necessary, connect the potential matching line to the outer ground terminal.
 - i** In order to ensure electromagnetic compatibility (EMC): do **not** ground the device exclusively via the protective ground conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
 - i** An easily accessible power switch must be installed in the proximity of the device. The switch must be marked as a disconnecter for the device (61010IEC/).

Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

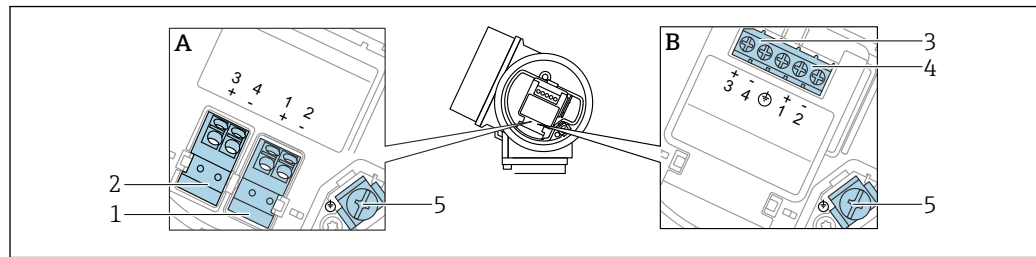

A0036500

13 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection, PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection


2 Connection, switch output (open collector): terminals 3 and 4, without integrated overvoltage protection

3 Connection, switch output (open collector): terminals 3 and 4, with integrated overvoltage protection

4 Connection, PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable shield

Block view PROFIBUS PA / FOUNDATION Fieldbus

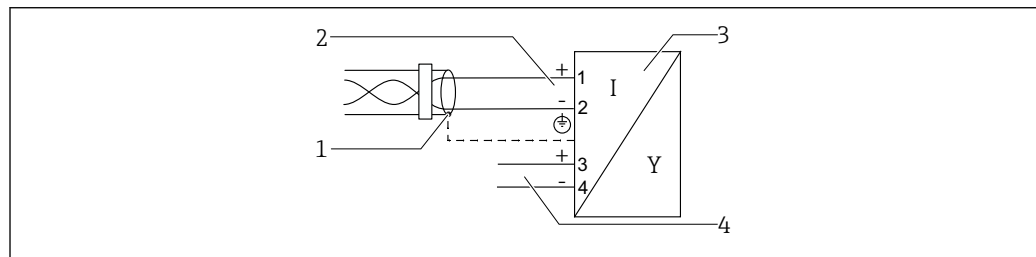

A0036530

14 Block view PROFIBUS PA / FOUNDATION Fieldbus

1 Cable screen; observe cable specification

2 Connection PROFIBUS PA / FOUNDATION Fieldbus

3 Measuring instrument

4 Switch output (open collector)

7.1.2 Cable specification

■ Devices without integrated overvoltage protection

Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

■ Devices with integrated overvoltage protection

Screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

■ For ambient temperature $T_U \geq 60^\circ\text{C}$ (140 °F): use cable for temperature $T_U + 20\text{ K}$.


FOUNDATION Fieldbus

Endress+Hauser recommends using twisted, shielded two-wire cables.

i For further information on the cable specifications, see Operating Instructions BA00013S "FOUNDATION Fieldbus Overview", FOUNDATION Fieldbus Guideline and IEC 61158-2 (MBP).

7.1.3 Device plug

i In the case of the device versions with a plug, the housing does not need to be opened to connect the signal cable.

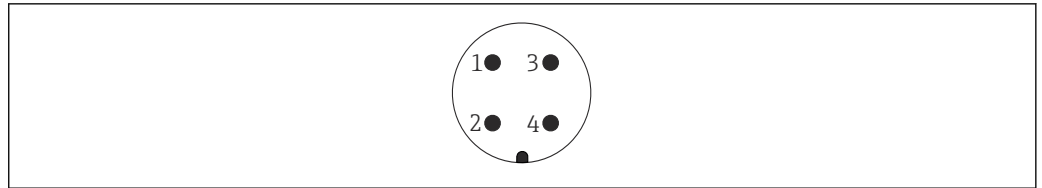

A0011176

15 Pin assignment of 7/8" plug

- 1 Signal -
- 2 Signal +
- 3 Not assigned
- 4 Shielding

7.1.4 Supply voltage

PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; output" ¹⁾	"Approval" ²⁾	Terminal voltage
E: 2-wire; FOUNDATION Fieldbus, switch output G: 2-wire; PROFIBUS PA, switch output	<ul style="list-style-type: none"> ▪ Non-hazardous ▪ Ex nA ▪ Ex nA[ia] ▪ Ex ic ▪ Ex ic[ia] ▪ Ex d[ia] / XP ▪ Ex ta / DIP ▪ CSA GP 	9 to 32 V ³⁾
	<ul style="list-style-type: none"> ▪ Ex ia / IS ▪ Ex ia + Ex d[ia] / IS + XP 	9 to 30 V ³⁾

- 1) Feature 020 in the product structure
- 2) Feature 010 in the product structure
- 3) Input voltages up to 35 V do not damage the device.

Polarity-dependent	Yes
FISCO/FNICO compliant according to IEC 60079-27	Yes

7.1.5 Overvoltage protection

If the device is intended to be used for level measurement of flammable liquids which requires overvoltage protection in accordance with DIN EN 60079-14, test standard 60060-1 (10 kA, pulse $\frac{8}{20}$ μ s): use the overvoltage protection module.

Integrated overvoltage protection module

An integrated overvoltage protection module is available for the HART 2-wire devices as well as for PROFIBUS PA and FOUNDATION Fieldbus.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Resistance per channel	Maximum $2 \times 0.5 \Omega$
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacity at 1 MHz	< 1.5 pF
Nominal discharge current (8/20 μ s)	10 kA

External overvoltage protection module

The HAW562 or HAW569 for example from Endress+Hauser are suitable options for external overvoltage protection.



More information is provided in the following documents:

- HAW562: TI01012K
- HAW569: TI01013K

7.2 Connecting the device

⚠ WARNING


Explosion hazard!

- ▶ Comply with applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

Required tools/accessories:

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


7.2.1 Opening cover

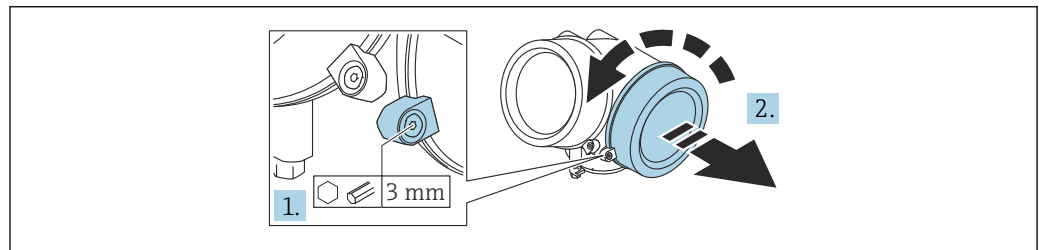

A0021490

1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90° counterclockwise.
2. Unscrew the connection compartment cover and check the cover seal; replace it if necessary.

7.2.2 Connecting

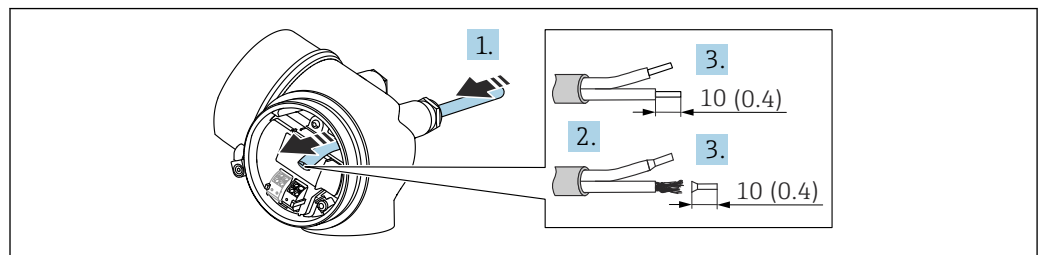


A0036418

16 Unit: mm (in)

1. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.

2. Remove the cable sheath.
3. Strip the cable ends 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
4. Firmly tighten the cable glands.
5. Connect the cable according to the terminal assignment.

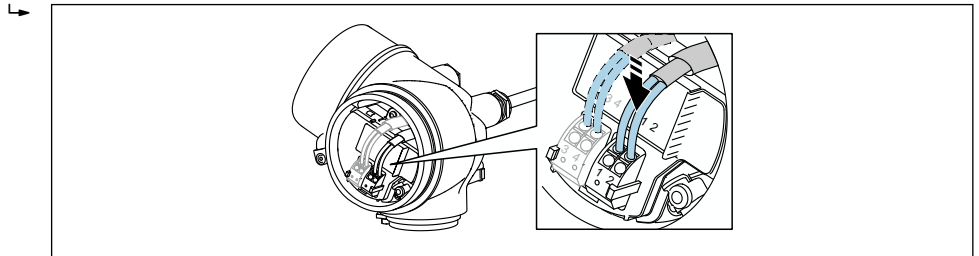


A0034682

6. If using shielded cables: Connect the cable shield to the ground terminal.

7.2.3 Plug-in spring-force terminals

The electrical connection of device versions without an integrated overvoltage protection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

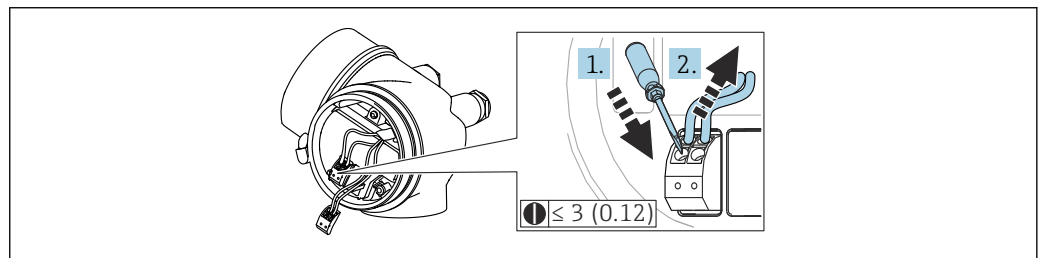


A0013661

17 Unit: mm (in)

To remove the cable from the terminal again:

1. Use a flat-blade screwdriver ≤ 3 mm (0.12 in) to press down on the slot between the two terminal holes.
2. Simultaneously pull the cable end out of the terminal.

7.2.4 Closing the cover of the connection compartment

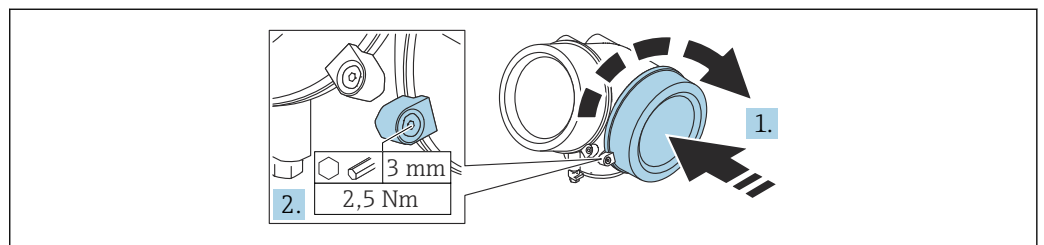

A0021491

1. Screw down the cover of the connection compartment.
2. Turn the securing clamp 90° in the clockwise direction and, using an Allen key (3 mm), tighten the screw of the securing clamp on the connection compartment cover with 2.5 Nm.



7.3 Post-connection check

- Is the device or cable undamaged (visual inspection)?
- Do the cables used comply with the requirements?
- Do the mounted cables have adequate strain relief?
- Are all the cable glands installed, firmly tightened and leak-tight?
- Does the supply voltage match the specifications on the nameplate?
- Is the terminal assignment correct?
- If necessary, has a protective ground connection been established?
- If supply voltage is present, is the device ready for operation and do values appear on the display module?
- Are all the housing covers installed and tightened?
- Is the securing clamp firmly tightened?


8 Operation options

8.1 Overview of operation options

8.1.1 Access to operating menu via local display

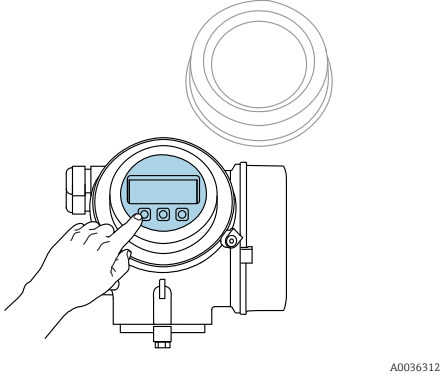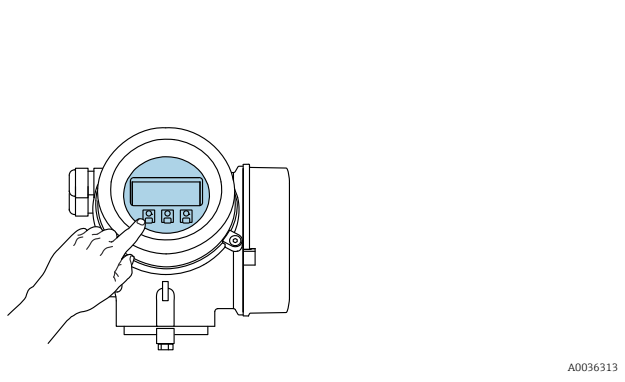Operation with	Pushbuttons	Touch control
Order code for "Display; operation"	Option C "SD02"	Option E "SD03"
		
Display elements	4-line display Format for displaying measured variables and status variables can be individually configured Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	4-line display White background lighting; switches to red in event of device errors
Operating elements	Onsite operation with 3 pushbuttons (⊕, ⊖, ⊞) Operating elements also accessible in various hazardous areas	External operation via touch control; 3 optical keys: ⊕, ⊖, ⊞
Additional functionality	Data backup function The device configuration can be saved in the display module. Data comparison function The device configuration saved in the display module can be compared to the current device configuration. Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

Operation with remote display and operating module FHX50

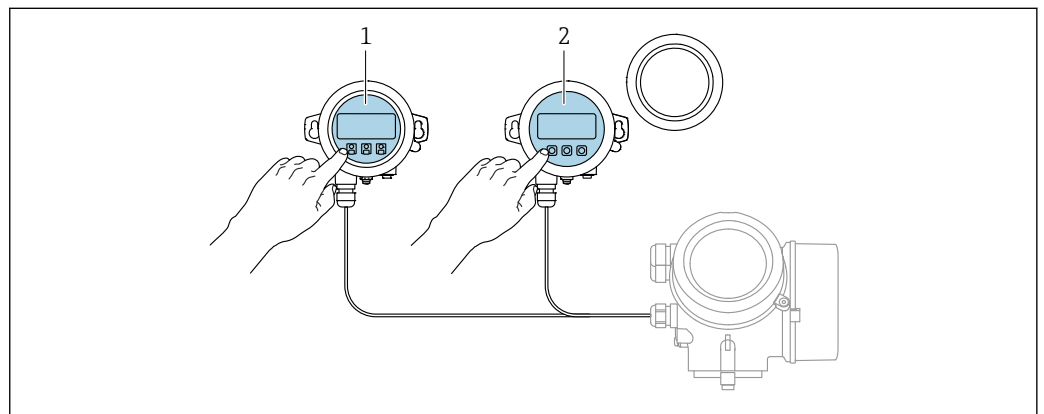


18 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

8.1.2 Access to the operating menu via the operating tool

Via FOUNDATION Fieldbus

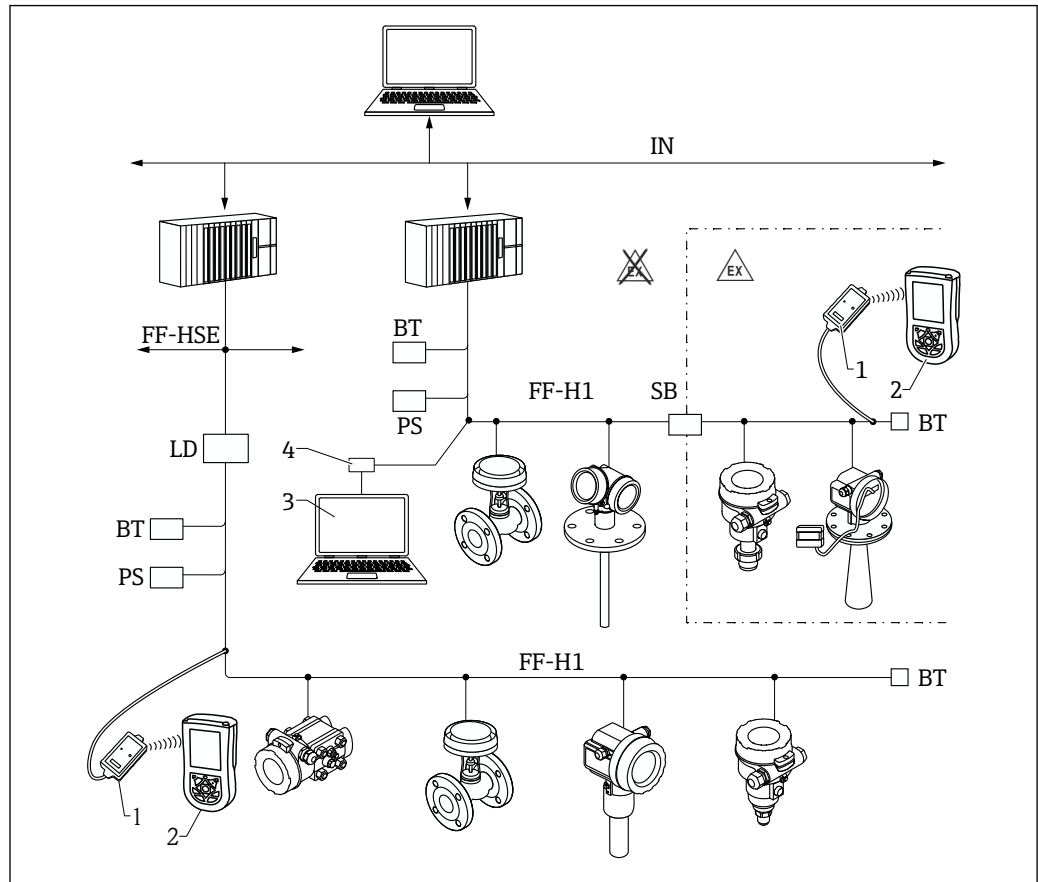


A0017188

19 FOUNDATION Fieldbus system architecture with associated components

- 1 FFblue Bluetooth modem
- 2 Field Xpert
- 3 DeviceCare/FieldCare
- 4 NI-FF interface card
- IN Industrial network
- FF- High Speed Ethernet
- HSE
- FF- FOUNDATION Fieldbus-H1
- H1
- LD Linking Device FF-HSE/FF-H1
- PS Bus Power Supply
- SB Safety barrier
- BT Bus Terminator

Via service interface (CDI)

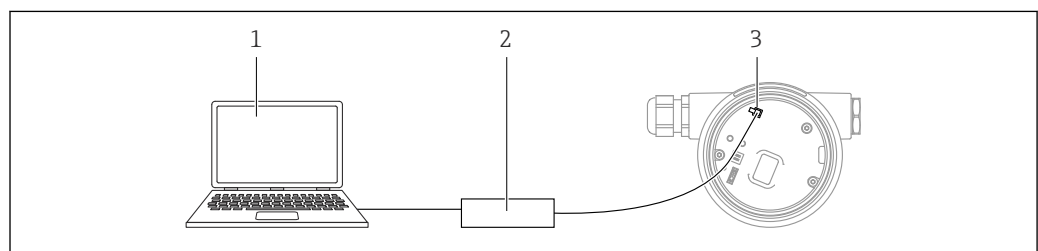


A0039148

- 1 Computer with FieldCare/DeviceCare operating tool
- 2 Commubox
- 3 Service interface (CDI) of the measuring instrument (= Endress+Hauser Common Data Interface)

Operation via Bluetooth® wireless technology

Requirements

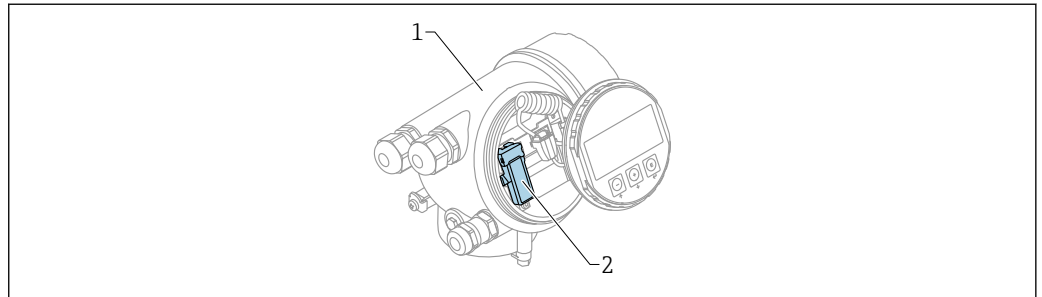

A0036790


20 Device with Bluetooth module

- 1 Electronics housing of the device
- 2 Bluetooth module

This operation option is only available for devices with Bluetooth module. There are the following options:

- The device has been ordered with a Bluetooth module:
Feature 610 "Accessory Mounted", option NF "Bluetooth"
- The Bluetooth module has been ordered as an accessory (ordering number: 71377355) and has been mounted. See Special Documentation SD02252F.

Operation via SmartBlue (app)

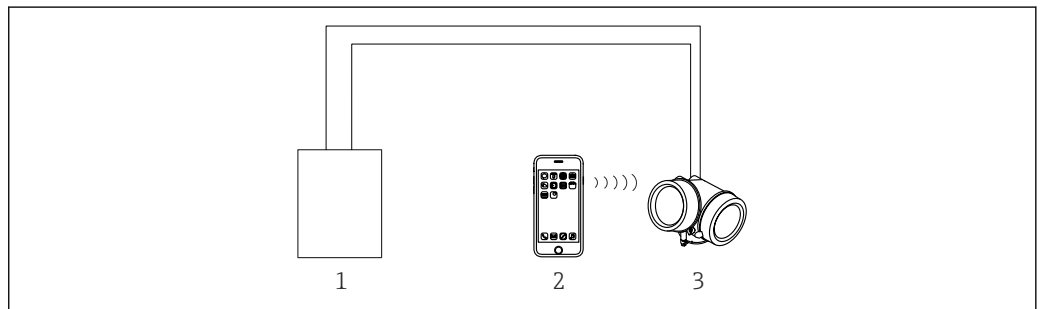

A0034939

21 Operation via SmartBlue (app)

- 1 Transmitter power supply unit
- 2 Smartphone / tablet with SmartBlue (app)
- 3 Transmitter with Bluetooth module

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language ¹⁾	Defines the operating language of the local display
Commissioning ²⁾		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.

Menu	Submenu / parameter	Meaning
Setup	Parameter 1 ... Parameter N	Once values have been set for these parameters, the measurement should usually be fully configured.
	Advanced setup	Contains additional submenus and parameters: <ul style="list-style-type: none"> ▪ For more accurate configuration of the measurement (adaptation to special measuring conditions). ▪ For converting the measured value (scaling, linearization). ▪ For scaling the output signal.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook ³⁾	Contains the last 20 messages (which are no longer active).
	Device information	Contains information for identifying the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measured values
	Simulation	Is used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ⁵⁾ Contains all the parameters of the device (including those already contained in one of the other menus). This menu is organized according to the function blocks of the device. The parameters of the Expert menu are described in: GP01015F (FOUNDATION Fieldbus)	System	Contains all higher-level device parameters that do not affect measurement or measured value communication.
	Sensor	Contains all parameters for configuring the measurement.
	Output	Contains all parameters to configure the switch output (PFS)
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) If you are operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) Only available if operating via the local display
- 4) Only available if operating via DeviceCare or FieldCare
- 5) When you call up the "Expert" menu, you are always asked for an access code. If a customer-specific access code has not been defined, "0000" must be entered.


8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access → 55.

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.


 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (if operating via the local display) or the **Access status tooling** parameter (if operating via an operating tool).

8.2.3 Data access - Security

Write protection via access code

Using the device-specific access code, the parameters for the measuring instrument configuration are write-protected and their values can no longer be changed via local operation.

Defining the access code via the local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the numeric code in the **Confirm access code** parameter to confirm it.
 - ↳ The -symbol appears in front of all write-protected parameters.



Defining the access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
 - ↳ Write protection is active.


Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

-  If write access is activated via an access code, it can be only be deactivated again via this access code.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

Disabling write protection via access code

If the  symbol appears in front of a parameter on the local display, the parameter is write-protected by a device-specific access code and its value cannot currently be changed via the local display.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press \square , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The \square symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

Deactivation of the write protection via access code

Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in the **Confirm access code** parameter to confirm.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Via an operating tool (e.g. FieldCare)


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the "**Contrast display**" parameter.


The parameter values are now read only and cannot be edited any more (exception "**Contrast display**" parameter):

- Via local display
- Via FOUNDATION Fieldbus

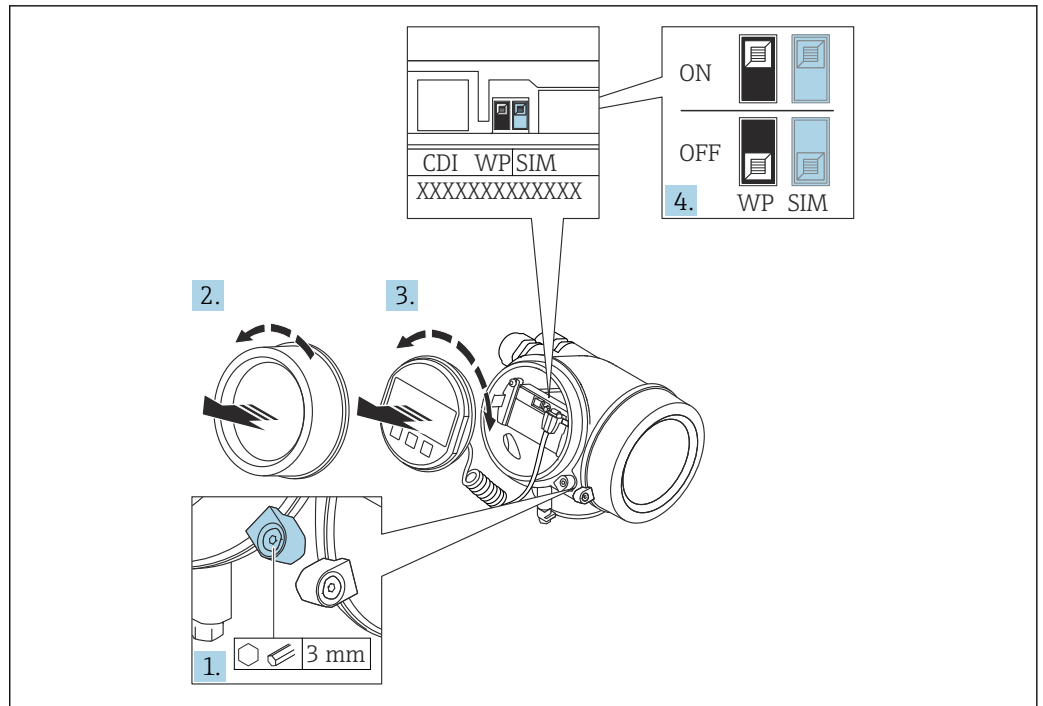


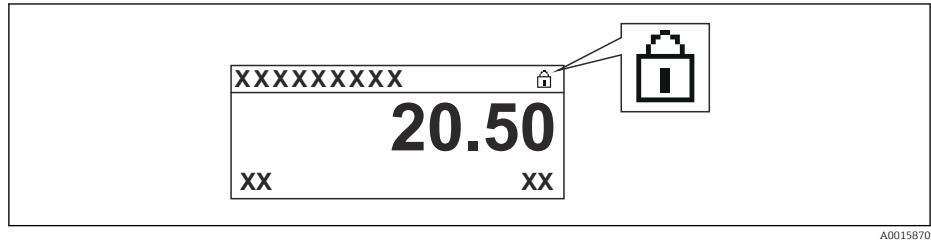
A0021474


1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.

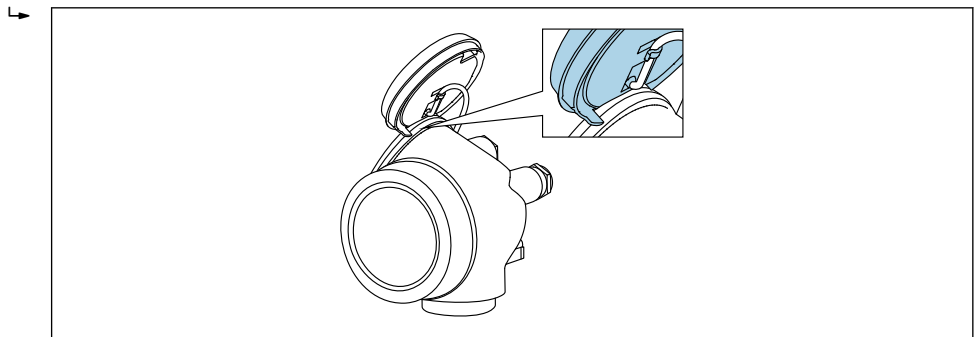

A0036086

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition, on the local display the  symbol appears in front of the parameters in the header of the operational display and in the navigation view.



If hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the  symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reassemble the transmitter in the reverse order.

Enabling and disabling the keypad lock

Access to the entire operating menu via local operation can be locked via the keypad lock. When access is locked, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via a context menu.


Switching on the keypad lock


SD03 display module only

The keypad lock is switched on automatically:


- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

Switching on the keypad lock manually

1. The device is in the measured value display.
Press  for at least 2 seconds.
↳ A context menu appears.
2. Select the **Keylock on** option in the context menu.
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.
Press  for at least 2 seconds.
↳ A context menu appears.

2. Select the **Keylock off** option in the context menu.
 - ↳ The keypad lock is switched off.


Bluetooth® wireless technology

Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via Bluetooth® wireless technology without the SmartBlue app
- Only one point-to-point connection is established between **one** sensor and **one** smartphone or tablet

8.3 Display and operating module



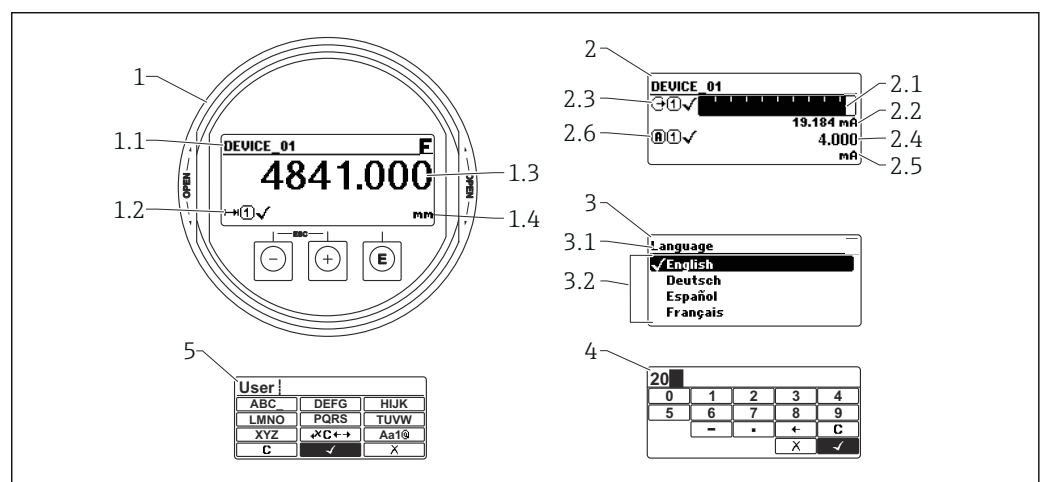

8.3.1 Display format



22 Display format on the display and operating module

- 1 Measured value display (1 value max. size)
 - 1.1 Header containing tag and error symbol (if an error is active)
 - 1.2 Measured value symbols
 - 1.3 Measured value
 - 1.4 Unit
- 2 Measured value display (bar graph + 1 value)
 - 2.1 Bargraph for measured value 1
 - 2.2 Measured value 1 (including unit)
 - 2.3 Measured value symbols for measured value 1
 - 2.4 Measured value 2
 - 2.5 Unit for measured value 2
 - 2.6 Measured value symbols for measured value 2
- 3 Parameter display (here: parameter with drop-down list)
 - 3.1 Header containing parameter name and error symbol (if an error is active)
 - 3.2 Drop-down list; marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



Display symbols for the submenus

Symbol	Meaning
 A0018367	Display/operat. Is displayed: <ul style="list-style-type: none"> ■ In the main menu next to the "Display/operat." selection ■ In the header on the left in the "Display/operat." menu
 A0018364	Setup Is displayed: <ul style="list-style-type: none"> ■ In the main menu next to the "Setup" selection ■ In the header on the left in the "Setup" menu
 A0018365	Expert Is displayed: <ul style="list-style-type: none"> ■ In the main menu next to the "Expert" selection ■ In the header on the left in the "Expert" menu
 A0018366	Diagnostics Is displayed: <ul style="list-style-type: none"> ■ In the main menu next to the "Diagnostics" selection ■ In the header on the left in the "Diagnostics" menu


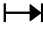








Status signals

Symbol	Meaning
F A0032902	"Failure" A device error has occurred. The measured value is no longer valid.
C A0032903	"Function check" The device is in the service mode (e.g. during a simulation).
S A0032904	"Out of specification" The device is operated: <ul style="list-style-type: none"> ■ Outside its technical specifications (e.g. during startup or cleaning) ■ Outside the configuration performed by the user (e.g. level outside the configured range)
M A0032905	"Maintenance required" Maintenance is required. The measured value is still valid.



Display symbols for locking status





Symbol	Meaning
 A0013148	Read-only parameter The parameter shown is only for display purposes and cannot be edited.
 A0013150	Device locked <ul style="list-style-type: none"> ■ In front of a parameter name: The device is locked via software and/or hardware. ■ In the header of the measured value screen: The device is locked via hardware.

Measured value symbols


Symbol	Meaning
Measured values	
 <small>A0032892</small>	Level
 <small>A0032893</small>	Distance
 <small>A0032908</small>	Current output
 <small>A0032894</small>	Measured current
 <small>A0032895</small>	Terminal voltage
 <small>A0032896</small>	Electronics or sensor temperature
Measuring channels	
 <small>A0032897</small>	Measuring channel 1
 <small>A0032898</small>	Measuring channel 2
Status of the measured value	
 <small>A0018361</small>	"Alarm" status Measurement is interrupted. The output assumes the defined alarm condition. A diagnostic message is generated.
 <small>A0018360</small>	"Warning" status The device continues to measure. A diagnostic message is generated.

8.3.2 Operating elements

Operating key	Meaning
 <small>A0018330</small>	Minus key <i>In a menu, submenu</i> Moves the selection bar upwards in a picklist. <i>In the text and numeric editor</i> In the input screen, moves the selection bar to the left (backwards).
 <small>A0018329</small>	Plus key <i>In a menu, submenu</i> Moves the selection bar downwards in a picklist. <i>In the text and numeric editor</i> In the input screen, moves the selection bar to the right (forwards).

Operating key	Meaning
 <small>A0018328</small>	<p>Enter key</p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> Pressing the key briefly opens the operating menu. Pressing the key for 2 s opens the context menu. <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> Pressing the key briefly: Opens the selected menu, submenu or parameter. Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter. <p><i>In the text and numeric editor</i></p> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
 <small>A0032909</small>	<p>Escape key combination (press keys simultaneously)</p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the measured value display ("home position"). <p><i>In the text and numeric editor</i></p> <p>Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p>Minus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p>



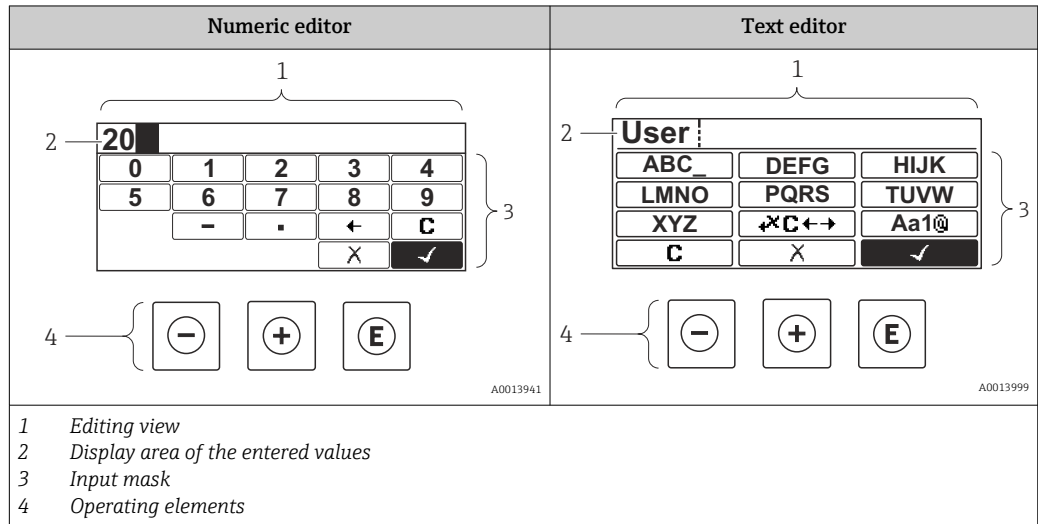




8.3.3 Entering numbers and text









Input mask


The following input and operating symbols are available in the input mask of the numeric and text editor:



Numeric editor



Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9
 <small>A0016619</small>	Inserts decimal separator at the cursor position.
 <small>A0016620</small>	Inserts minus sign at the cursor position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Text editor

Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> ▪ Between upper-case and lower-case letters ▪ For entering numbers ▪ For entering special characters
 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Text correction under 

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.

 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.


8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Envelope curve
- Keylock on



Calling up and closing the context menu

The user is in the operational display.



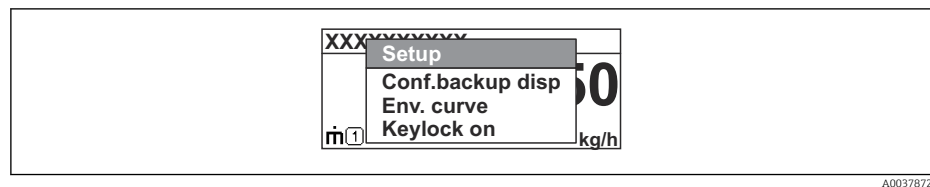1. Press  for 2 s.
 - ↳ The context menu opens.



A0037872


2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.5 Envelope curve display on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be shown on the display and operating module:

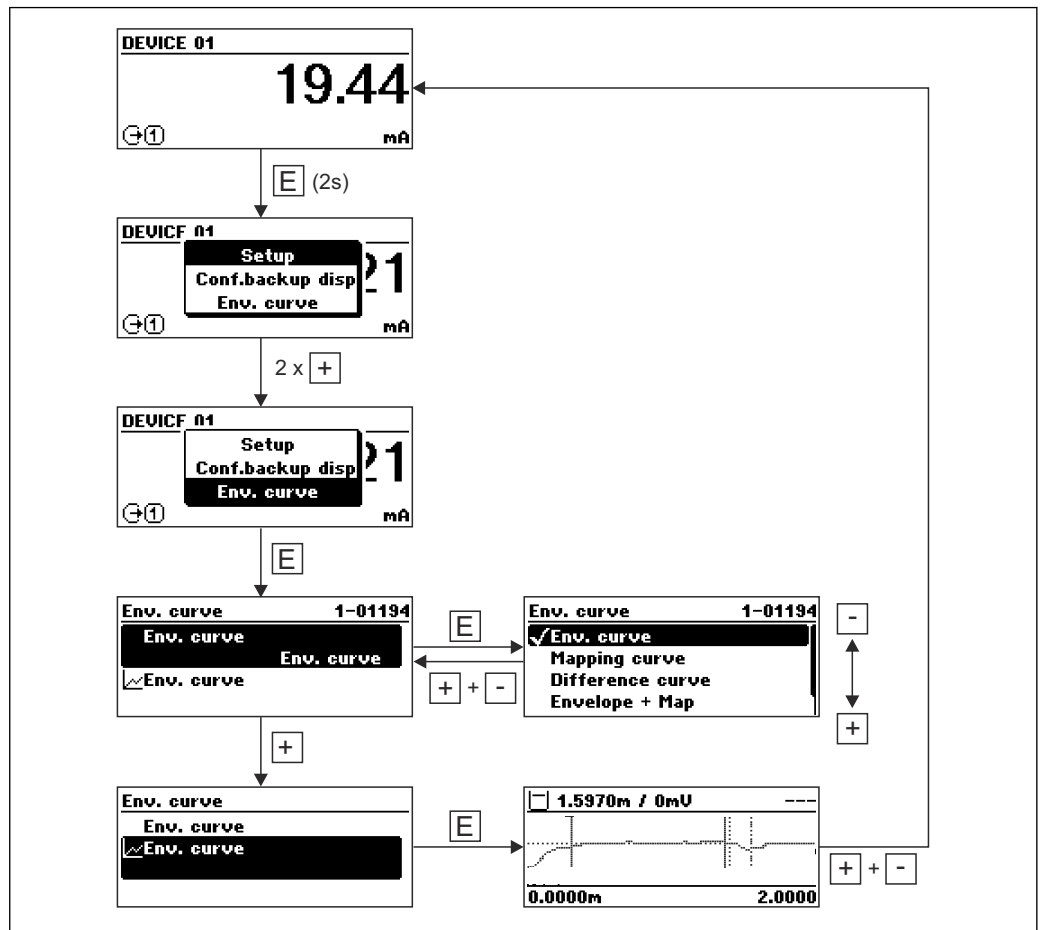

A0014277

9 System integration

9.1 Device description file (DD)


You require the following to configure a device and integrate it into an FF network:

- An FF configuration program
- The Cff file (Common File Format: *.cff)
- The device description (DD) is in one of the following formats:
 - Device description format 4 : *sym, *ffo
 - Device description format 5 : *sy5, *ff5

Data for device-specific DD

Manufacturer ID	452B48hex
Device type	100Fhex
Device revision	05hex
DD Revision	Information and files available at:
CFF Revision	<ul style="list-style-type: none"> ▪ www.endress.com ▪ www.fieldcommgroup.org

9.2 Integration into the FF network

-  For more in-depth information on integrating the device into the FF system, see the description for the configuration software used.
 - When integrating the field devices into the FF system, make sure you are using the right files. You can read out the required version by means of the Device Revision/DEV_REV and DD Revision/DD_REV parameters in the Resource Block.


The device is integrated into the FF network as follows:

1. Start the FF configuration program.
2. Download the Cff and device description files (*.ffo, *.sym (for format 4) *ff5, *sy5 (for format 5) to the system.
3. Configure the interface.
4. Configure the device for the measuring task and for the FF system.

9.3 Device identification and addressing

FOUNDATION Fieldbus identifies the device using its identification code (device ID) and automatically assigns it a suitable field address. The identity code cannot be changed. The device appears in the network display once you have started the FF configuration program and integrated the device into the network. The blocks available are displayed under the device name.

If the device description has not yet been loaded, the blocks report "Unknown" or "(UNK)".

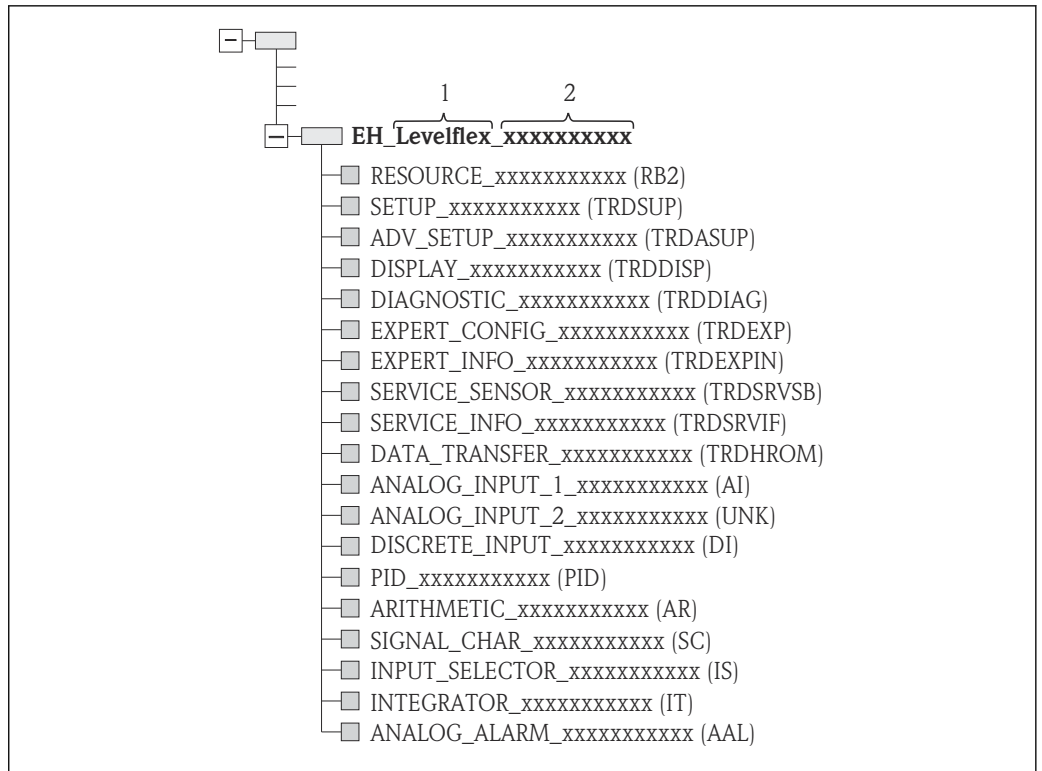

A0017208

23 Typical display in a configuration program after the connection has been established

- 1 Device name
- 2 Serial number

9.4 Block model

9.4.1 Blocks in the device software

The device has the following blocks:

- Resource Block (device block)
- Transducer Blocks
 - Setup Transducer Block (TRDSUP)
 - Advanced Setup Transducer Block (TRDASUP)
 - Display Transducer Block (TRDDISP)
 - Diagnostic Transducer Block (TRDDIAG)
 - Expert Configuration Transducer Block (TRDEXP)
 - Expert Information Transducer Block (TRDEXPIN)
 - Service Sensor Transducer Block (TRDSRVSB)
 - Service Information Transducer Block (TRDSRVIF)
 - Data Transfer Transducer Block (TRDHROM)
- Function blocks
 - 2 Analog Input Blocks (AI)
 - 1 Discrete Input Block (DI)
 - 1 PID Block (PID)
 - 1 Arithmetic Block (AR)
 - 1 Signal Characterizer Block (SC)
 - 1 Input Selector Block (IS)
 - 1 Integrator Block (IT)
 - 1 Analog Alarm Block (AAL)

In addition to the pre-instantiated blocks already mentioned, the following blocks can also be instantiated:


- 5 Analog Input Blocks (AI)
- 2 Discrete Input Blocks (DI)
- 3 PID Blocks (PID)
- 3 Arithmetic Blocks (AR)
- 2 Signal Characterizer Blocks (SC)
- 5 Input Selector Blocks (IS)
- 3 Integrator Blocks (IT)
- 2 Analog Alarm Blocks (AAL)

Up to 20 blocks can be instantiated in the device altogether, including the blocks already instantiated. For instantiating blocks, see the appropriate Operating Instructions of the configuration program used.

 Endress+Hauser Guideline BA00062S.

The guideline provides an overview of the standard function blocks that are described in FOUNDATION Fieldbus Specifications FF 890 - 894. It is designed as an aid when using these blocks that are implemented in the Endress+Hauser field devices.

9.4.2 Block configuration when device is delivered

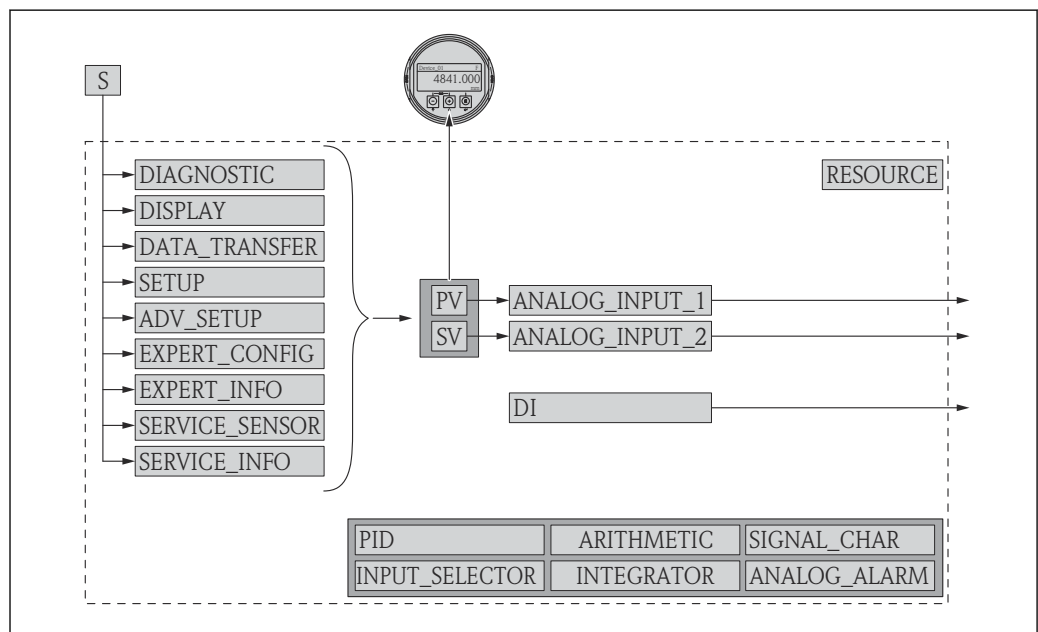

 24 Block configuration when device is delivered

S Sensor
 PV Primary value: level linearized
 SV Secondary value: distance

9.5 Assignment of measured values (CHANNEL) in the AI block

The input value of an analog input block is determined via the CHANNEL parameter.

Channel	Measured value
0	Uninitialized
89	Measured capacitance
144	EOP shift

Channel	Measured value
145	Interface distance
172	Calculated DC value
211	Terminal voltage
212	Sensor debug
32785	Absolute EOP amplitude
32786	Absolute echo amplitude
32787	Absolute interface amplitude
32856	Distance
32885	Electronics temperature
32938	Interface linearized
32949	Level linearized
33044	Relative echo amplitude
33045	Relative interface amplitude
33070	Noise of signal
33107	Upper interface thickness

9.6 Index tables of Endress+Hauser parameters

The manufacturer-specific device parameters of the resource blocks are listed in the following tables. Refer to document BA062S "Guideline - FOUNDATION Fieldbus Function Blocks" for the FOUNDATION fieldbus parameters. This document can be downloaded from the www.endress.com web page.

9.6.1 Setup Transducer Block

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
confirm_distance	Confirm distance	82	ENUM16	2	Static	x	OOS	→ 154
filtered_dist_val	Distance	76	FLOAT	4	Dynamic			→ 149
interface_distance	Interface distance	79	FLOAT	4	Dynamic			→ 154
map_end_x	Present mapping	84	FLOAT	4	Dynamic			→ 155
mapping_end_point	Mapping end point	83	FLOAT	4	Static	x	AUTO	→ 156
record_map	Record map	86	ENUM16	2	Static	x	OOS	→ 156
operating_mode	Operating mode	50	ENUM16	2	Static	x	OOS	→ 144
signal_quality	Signal quality	81	ENUM16	2	Dynamic			→ 150
medium_group	Medium group	55	ENUM16	2	Static	x	OOS	→ 145
tank_level	Tank level	66	ENUM16	2	Static	x	OOS	→ 151
tank_type	Tank type	52	ENUM16	2	Static	x	OOS	→ 144
tube_diameter	Tube diameter	53	FLOAT	4	Static	x	OOS	→ 145
dc_value	DC value	68	ENUM16	2	Static	x	OOS	→ 152
distance_to_upper_connection	Distance to upper connection	67	FLOAT	4	Static	x	OOS	→ 151
empty_calibration	Empty calibration	56	FLOAT	4	Static	x	OOS	→ 146
full_calibration	Full calibration	57	FLOAT	4	Static	x	OOS	→ 147
distance_unit	Distance unit	51	ENUM16	2	Static	x	OOS	→ 144

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
interface	Interface	70	FLOAT	4	Dynamic			→ ⓘ 153
level_unit	Level unit	58	ENUM16	2	Static	x	OOS	→ ⓘ 165
output_unit_after_linearization	Unit after linearization	62	ENUM16	2	Static			→ ⓘ 177
level_linearized	Level linearized	64	FLOAT	4	Dynamic			→ ⓘ 179
present_probe_length	Present probe length	87	FLOAT	4	Dynamic	x	AUTO	→ ⓘ 187
level	Level	60	FLOAT	4	Dynamic			→ ⓘ 148
interface_linearized	Interface linearized	73	FLOAT	4	Dynamic			→ ⓘ 179
decimal_places_menu_ro	Decimal places	93	ENUM16	2	Static	x	AUTO	→ ⓘ 199
locking_status	Locking status	96	BIT_ENUM16	2	Dynamic			→ ⓘ 160
medium_type_ro	Medium type	92	ENUM16	2	Static	x	OOS	→ ⓘ 162

9.6.2 Advanced Setup Transducer Block

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
calculated_dc_value	Calculated DC value	61	FLOAT	4	Dynamic			→ ⓘ 170
blocking_distance	Blocking distance	55	FLOAT	4	Static	x	OOS	→ ⓘ 165
dc_value_lower_medium	DC value lower medium	58	FLOAT	4	Static	x	OOS	→ ⓘ 167
medium_type	Medium type	50	ENUM16	2	Static	x	OOS	→ ⓘ 162
present_probe_length_ro	Present probe length	80	FLOAT	4	Dynamic	x	AUTO	→ ⓘ 187
confirm_probe_length	Confirm probe length	79	ENUM16	2	Static	x	OOS	→ ⓘ 188
process_property	Process property	52	ENUM16	2	Static	x	OOS	→ ⓘ 163
advanced_process_conditions	Advanced process conditions	53	ENUM16	2	Static	x	OOS	→ ⓘ 164
meas_upper_iface_thickness	Measured thickness upper layer	60	FLOAT	4	Dynamic			→ ⓘ 170
manual_interface_thickness	Manual thickness upper layer	59	FLOAT	4	Static	x	OOS	→ ⓘ 169
medium_property	Medium property	51	ENUM16	2	Static	x	OOS	→ ⓘ 162
use_calculated_dc_value	Use calculated DC value	62	ENUM16	2	Static	x	OOS	→ ⓘ 171
linearization_type	Linearization type	71	ENUM16	2	Static	x	OOS	→ ⓘ 176
activate_table	Activate table	70	ENUM16	2	Static	x	OOS	→ ⓘ 182
table_mode	Table mode	69	ENUM16	2	Static	x	OOS	→ ⓘ 180
custom_table_sel_level	Level	73	FLOAT	4	Static	x	OOS	→ ⓘ 148
custom_table_sel_value	Customer value	74	FLOAT	4	Static	x	OOS	→ ⓘ 182
unit_after_linearization	Unit after linearization	63	ENUM16	2	Static	x	OOS	→ ⓘ 177
free_text	Free text	64	STRING		Static	x	AUTO	→ ⓘ 178
diameter	Diameter	66	FLOAT	4	Static	x	OOS	→ ⓘ 179
output_echo_lost	Output echo lost	76	ENUM16	2	Static	x	OOS	→ ⓘ 184
intermediate_height	Intermediate height	67	FLOAT	4	Static	x	AUTO	→ ⓘ 180
level_correction	Level correction	56	FLOAT	4	Static	x	OOS	→ ⓘ 166
level_unit_ro	Level unit	54	ENUM16	2	Static	x	OOS	→ ⓘ 165

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
assign_limit	Assign limit	82	ENUM16	2	Static	x	AUTO	→ 192
maximum_value	Maximum value	65	FLOAT	4	Static	x	OOS	→ 179
assign_diag_behavior	Assign diagnostic behavior	83	ENUM16	2	Static	x	AUTO	→ 192
value_echo_lost	Value echo lost	77	FLOAT	4	Static	x	OOS	→ 184
ramp_at_echo_lost	Ramp at echo lost	78	FLOAT	4	Static	x	OOS	→ 185
switch_output_failure_mode	Failure mode	88	ENUM16	2	Static	x	AUTO	→ 195
switch_output_function	Switch output function	81	ENUM16	2	Static	x	AUTO	→ 191
switch_status	Switch status	89	ENUM16	2	Dynamic			→ 195
switch_off_delay	Switch-off delay	87	FLOAT	4	Static	x	AUTO	→ 195
switch_off_value	Switch-off value	86	FLOAT	4	Static	x	AUTO	→ 194
switch_on_delay	Switch-on delay	85	FLOAT	4	Static	x	AUTO	→ 194
switch_on_value	Switch-on value	84	FLOAT	4	Static	x	AUTO	→ 193
operating_mode_ro	Operating mode	95	ENUM16	2	Static	x	OOS	→ 144
table_number	Table number	68	UINT8	1	Static	x	OOS	→ 181
level_semiautomatic	Level	75	FLOAT	4	Dynamic			→ 182
assign_status	Assign status	91	ENUM16	2	Static	x	AUTO	→ 191
locking_status	Locking status	99	BIT_ENUM16	2	Dynamic			→ 160
decimal_places_menu	Decimal places menu	93	ENUM16	2	Static	x	AUTO	→ 202
distance_unit_ro	Distance unit	92	ENUM16	2	Static	x	OOS	→ 144

9.6.3 Display Transducer Block

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
access_status_display	Access status display	51	ENUM16	2	Static			→ 160
display_damping	Display damping	65	FLOAT	4	Static	x	AUTO	→ 200
display_interval	Display interval	64	FLOAT	4	Static	x	AUTO	→ 200
header	Header	66	ENUM16	2	Static	x	AUTO	→ 200
format_display	Format display	55	ENUM16	2	Static	x	AUTO	→ 197
number_format	Number format	69	ENUM16	2	Static	x	AUTO	→ 201
display_separator	Separator	68	ENUM16	2	Static	x	AUTO	→ 201
language	Language	54	ENUM16	2	Static	x	AUTO	→ 197
contrast_display	Contrast display	71	FLOAT	4	Static	x	AUTO	→ 202
header_text	Header text	67	STRING		Static	x	AUTO	→ 201
access_code_for_display	Enter access code	52	UINT16	2	Static	x	AUTO	→ 161
configuration_management	Configuration management	75	ENUM16	2	Static	x	AUTO	→ 204
decimal_places_1	Decimal places 1	57	ENUM16	2	Static	x	AUTO	→ 199
decimal_places_2	Decimal places 2	59	ENUM16	2	Static	x	AUTO	→ 199
decimal_places_3	Decimal places 3	61	ENUM16	2	Static	x	AUTO	→ 199
decimal_places_4	Decimal places 4	63	ENUM16	2	Static	x	AUTO	→ 199
last_backup	Last backup	74	STRING		Static	x	AUTO	→ 204
value_1_display	Value 1 display	56	ENUM16	2	Static	x	AUTO	→ 199


Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
value_2_display	Value 2 display	58	ENUM16	2	Static	x	AUTO	→ ⓘ 199
value_3_display	Value 3 display	60	ENUM16	2	Static	x	AUTO	→ ⓘ 199
value_4_display	Value 4 display	62	ENUM16	2	Static	x	AUTO	→ ⓘ 199
locking_status_display	Locking status	50	ENUM16	2	Static			→ ⓘ 160
define_access_code	Define access code	53	UINT16	2	Static	x	AUTO	→ ⓘ 207
comparison_result	Comparison result	76	ENUM16	2	Static	x	AUTO	→ ⓘ 205
decimal_places_menu	Decimal places menu	70	ENUM16	2	Static	x	AUTO	→ ⓘ 202
operating_time	Operating time	73	STRING		Dynamic			→ ⓘ 204
operating_mode_ro	Operating mode	83	ENUM16	2	Static	x	OOS	→ ⓘ 144
locking_status	Locking status	85	BIT_ENUM16	2	Dynamic			→ ⓘ 160

9.6.4 Diagnostic Transducer Block

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
operating_time	Operating time	55	STRING		Dynamic			→ ⓘ 204
diagnostics_1	Diagnostics	56	UINT32	4	Static			→ ⓘ 212
diagnostics_2	Diagnostics 2	58	UINT32	4	Static			→ ⓘ 212
diagnostics_3	Diagnostics 3	60	UINT32	4	Static			→ ⓘ 212
diagnostics_4	Diagnostics 4	62	UINT32	4	Static			→ ⓘ 212
diagnostics_5	Diagnostics 5	64	UINT32	4	Static			→ ⓘ 212
operating_time_from_restart	Operating time from restart	54	STRING		Dynamic			→ ⓘ 211
launch_signal	Launch signal	81	ENUM16	2	Dynamic			→ ⓘ 230
start_device_check	Start device check	77	ENUM16	2	Static	x	AUTO	→ ⓘ 229
interface_signal	Interface signal	82	ENUM16	2	Dynamic			→ ⓘ 230
level_signal	Level signal	80	ENUM16	2	Dynamic			→ ⓘ 230
simulation_device_alarm	Simulation device alarm	75	ENUM16	2	Static	x	OOS	→ ⓘ 228
filter_options	Filter options	66	ENUM8	1	Static	x	AUTO	→ ⓘ 213
previous_diagnostics	Previous diagnostics	52	UINT32	4	Static			→ ⓘ 210
actual_diagnostics	Actual diagnostics	50	UINT32	4	Static			→ ⓘ 210
assign_sim_meas	Assign measurement variable	71	ENUM16	2	Static	x	OOS	→ ⓘ 227
sim_value_process_variable	Process variable value	72	FLOAT	4	Static	x	OOS	→ ⓘ 227
switch_output_simulation	Switch output simulation	73	ENUM16	2	Static	x	OOS	→ ⓘ 227
sim_switch_status	Switch status	74	ENUM16	2	Static	x	OOS	→ ⓘ 228
result_device_check	Result device check	78	ENUM16	2	Dynamic			→ ⓘ 229
last_check_time	Last check time	79	STRING		Dynamic			→ ⓘ 229
linearization_type	Linearization type	84	ENUM16	2	Static	x	OOS	→ ⓘ 176
unit_after_linearization_ro	Unit after linearization	85	STRING		Static	x	AUTO	→ ⓘ 177
decimal_places_menu	Decimal places menu	88	ENUM16	2	Static	x	AUTO	→ ⓘ 202
level_unit_ro	Level unit	90	ENUM16	2	Static	x	OOS	→ ⓘ 165
operating_mode_ro	Operating mode	91	ENUM16	2	Static	x	OOS	→ ⓘ 144

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK	Description
assign_channel_1	Assign channel 1	92	ENUM16	2	Static	x	AUTO	→ ⓘ 221
assign_channel_2	Assign channel 2	93	ENUM16	2	Static	x	AUTO	→ ⓘ 221
assign_channel_3	Assign channel 3	94	ENUM16	2	Static	x	AUTO	→ ⓘ 221
assign_channel_4	Assign channel 4	95	ENUM16	2	Static	x	AUTO	→ ⓘ 221
clear_logging_data	Clear logging data	97	ENUM16	2	Static	x	AUTO	→ ⓘ 222
logging_interval	Logging interval	96	FLOAT	4	Static	x	AUTO	→ ⓘ 222
display_filter_options	Filter options	99	ENUM8	1	Static	x	AUTO	→ ⓘ 213
locking_status	Locking status	108	BIT_ENUM16	2	Dynamic			→ ⓘ 160
distance_unit_ro	Distance unit	89	ENUM16	2	Static	x	OOS	→ ⓘ 144

9.6.5 Expert Configuration Transducer Block

 The parameters of the **Expert Configuration Transducer Block** are described in document GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK
acknowledge_alarm	Reset self holding	81	ENUM16	2	Static	x	AUTO
integration_time	Integration time	67	FLOAT	4	Static	x	OOS
result_self_check	Result self check	77	ENUM16	2	Dynamic		
start_self_check	Start self check	76	ENUM16	2	Static	x	AUTO
broken_probe_detection	Broken probe detection	75	ENUM16	2	Static	x	AUTO
gpc_mode	GPC mode	68	ENUM16	2	Static	x	OOS
reference_echo_threshold	Reference echo threshold	73	FLOAT	4	Static	x	OOS
const_gpc_factor	Const. GPC factor	74	FLOAT	4	Static	x	OOS
build_up_ratio	Buildup ratio	90	FLOAT	4	Dynamic		
build_up_threshold	Buildup thres.	91	FLOAT	4	Static	x	AUTO
delay_time_echo_lost	Delay time echo lost	78	FLOAT	4	Static	x	AUTO
empty_capacity	Empty capacity	92	FLOAT	4	Static	x	AUTO
external_pressure_selector	External pressure selector	69	ENUM16	2	Static	x	OOS
measured_capacity	Measured capacitance	89	FLOAT	4	Dynamic		
gas_phase_compens_factor	Gas phase compensation factor	70	FLOT	4	Static	x	OOS
in_safety_distance	In safety distance	80	ENUM16	2	Static	x	OOS
ratio_amplitude_interface_level	Ratio amplitude interface/level	86	FLOAT	4	Static	x	OOS
interface_criterion	Interface criterion	87	FLOAT	4	Dynamic		
control_measurement	Measurement	106	ENUM16	2	Static	x	AUTO
control_measurement	Control measurement	105	ENUM16	2	Static	x	AUTO
filter_dead_time	Dead time	66	FLOAT	4	Static	x	OOS
present_reference_distance	Present reference distance	72	FLOAT	4	Dynamic		
history_reset	History reset	83	ENUM16	2	Static	x	OOS
safety_distance	Safety distance	79	FLOAT	4	Static	x	OOS
history_learning_control	History learning	85	ENUM16	2	Static	x	AUTO
history_learning_control	History learning control	84	ENUM16	2	Static	x	AUTO
sensor_module	Sensor module	107	ENUM16	2	Static		

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK
evaluation_mode	Evaluation mode	82	ENUM16	2	Static	x	OOS
thin_interface	Thin interface	88	ENUM16	2	Static	x	OOS
calculated_dc_value	Calculated DC value	59	FLOAT	4	Dynamic	x	AUTO
dc_value_expert	DC value	55	FLOAT	4	Static	x	OOS
distance_offset	Distance offset	60	FLOAT	4	Static	x	OOS
level_limit_mode	Level limit mode	62	ENUM16	2	Static	x	OOS
level_high_limit	High limit	63	FLOAT	4	Static	x	OOS
level_low_limit	Low limit	64	FLOAT	4	Static	x	OOS
output_mode	Output mode	65	ENUM16	2	Static	x	OOS
level_external_input_1	Level external input 1	93	ENUM16	2	Static	x	AUTO
level_external_input_2	Level external input 2	96	ENUM16	2	Static	x	AUTO
function_input_1_level	Function Input 1 Level	94	ENUM16	2	Static	x	AUTO
function_input_2_level	Function Input 2 Level	97	ENUM16	2	Static	x	AUTO
fixed_value_inp_1	Fixed value input 1	95	FLOAT	4	Static	x	AUTO
fixed_value_inp_2	Fixed value input 2	98	FLOAT	4	Static	x	AUTO
interface_external_input_1	Interface external input 1	99	ENUM16	2	Static	x	OOS
interface_external_input_2	Interface external input 2	102	ENUM16	2	Static	x	OOS
function_input_1_interface	Function input 1 interface	100	ENUM16	2	Static	x	OOS
function_input_2_interface	Function input 2 interface	103	ENUM16	2	Static	x	OOS
fixed_value_input_1_interface	Fixed value input 1 interface	101	FLOAT	4	Static	x	OOS
fixed_value_input_2_interface	Fixed value input 2 interface	104	FLOAT	4	Static	x	OOS
distance_unit_ro	Distance unit	53	ENUM16	2	Static	x	OOS
level_unit_ro	Level unit	61	ENUM16	2	Static	x	OOS
operating_mode_ro	Operating mode	54	ENUM16	2	Static	x	OOS
enter_access_code	Enter access code	52	UINT16	2	Static	x	AUTO
locking_status	Locking status	50	BIT_ENUM16	2	Dynamic		
access_status_tooling	Access status tooling	51	ENUM16	2	Static		
reference_distance	Reference distance	71	FLOAT	4	Static	x	OOS
sw_option_active_overview	SW option active overview	110	BIT_ENUM32	4	Static		
decimal_places_menu	Decimal places menu	109	ENUM16	2	Static	x	AUTO
fieldbus_type	Fieldbus type	111	ENUM8	1	Static		
interface_property_ro	Interface property	108	ENUM16	2	Static	x	OOS
medium_type_ro	Medium type	112	ENUM16	2	Static	x	OOS
eop_level_evaluation_ro	EOP level evaluation	113	ENUM16	2	Static	x	OOS
sensor_type_ro	Sensor type	114	ENUM16	2	Static	x	OOS
calculated_dc_status_en	Status	58	ENUM8	1	Dynamic		

9.6.6 Expert Information Transducer Block



The parameters of the **Expert Information Transducer Block** are described in document GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK
abs_echo_amp_val	Absolute echo amplitude	51	FLOAT	4	Dynamic		
abs_eop_amp_val	Absolute EOP amplitude	55	FLOAT	4	Dynamic		
absolute_interface_amplitude	Absolute interface amplitude	58	FLOAT	4	Dynamic		
application_parameter	Application parameter	74	ENUM16	2	Dynamic		
electronic_temp_value	Electronics temperature	66	FLOAT	4	Dynamic		
eop_shift_value	EOP shift	69	FLOAT	4	Dynamic		
found_echoes	Found echoes	71	ENUM16	2	Dynamic		
max_electr_temp	Max. electronics temperature	73	FLOAT	4	Dynamic	x	AUTO
time_max_electr_temp	Time max. electronics temperature	75	STRING		Dynamic		
measurement_frequency	Measuring frequency	76	FLOAT	4	Dynamic		
min_electr_temp	Min. electronics temperature	77	FLOAT	4	Dynamic	x	AUTO
time_min_electr_temp	Time min. electronics temperature	78	STRING		Dynamic		
rel_echo_amp_val	Relative echo amplitude	53	FLOAT	4	Dynamic		
relative_interface_amplitude	Relative interface amplitude	60	FLOAT	4	Dynamic		
reset_min_max_temp	Reset min./max. temp.	79	ENUM16	2	Static	x	AUTO
noise_signal_val	Noise of signal	63	FLOAT	4	Dynamic		
used_calculation	Used calculation	80	ENUM16	2	Dynamic		
tank_trace_state	Tank trace state	81	ENUM16	2	Dynamic		
max_draining_speed	Max. draining speed	82	FLOAT	4	Dynamic	x	AUTO
max_filling_speed	L max. fill speed	83	FLOAT	4	Dynamic	x	AUTO
time_max_level	Time max. level	84	STRING		Dynamic		
max_level_value	Max. level	85	FLOAT	4	Dynamic	x	AUTO
time_min_level	Time min. level	86	STRING		Dynamic		
min_level_value	Min. level value	87	FLOAT	4	Dynamic	x	AUTO
reset_min_max	Rest min./max.	94	ENUM16	2	Static	x	AUTO
interf_max_drain_speed	I max. drain speed	88	FLOAT	4	Dynamic	x	AUTO
interf_max_fill_speed	I max. fill speed	89	FLOAT	4	Dynamic	x	AUTO
time_max_interface	Time max. interface	90	STRING		Dynamic		
max_interface_value	Max. interface value	91	FLOAT	4	Dynamic	x	AUTO
time_min_interface	Time min. interface	92	STRING		Dynamic		
min_interface_value	Min. interface value	93	FLOAT	4	Dynamic	x	AUTO
application_parameter	Application parameter	95	ENUM16	2	Dynamic		
operating_mode_ro	Operating mode	108	ENUM16	2	Static	x	OOS
temperature_unit	Temperature unit	72	ENUM16	2	Static	x	AUTO
activate_sw_option	Activate SW option	110	UINT32	4	Static	x	AUTO
target_echo_status	Status	56	ENUM8	1	Dynamic		
iface_target_echo_status	Status	61	ENUM8	1	Dynamic		
signal_noise_status	Status	64	ENUM8	1	Dynamic		
sens_temp_status	Status	67	ENUM8	1	Dynamic		
eop_shift_status	Status	70	ENUM8	1	Dynamic		
terminal_voltage_1	Terminal voltage 1	97	FLOAT	4	Dynamic		
calculated_dc_value	Calculated DC value	100	FLOAT	4	Dynamic	x	AUTO

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK
upper_interface_thickness	Upper interface thickness	103	FLOAT	4	Dynamic		
debug_value	Debug value	106	FLOAT	4	Dynamic	x	AUTO
sw_option_active_overview	SW option active overview	111	BIT_ENUM32	4	Static		
locking_status	Locking status	113	BIT_ENUM16	2	Dynamic		
decimal_places_menu_ro	Decimal places menu	109	ENUM16	2	Static	x	AUTO
linearization_type	Linearization type	104	ENUM16	2	Static	x	OOS
eop_level_evaluation	EOP level evaluation	112	ENUM16	2	Static	x	OOS
access_status_tooling	Access status tooling	114	ENUM16	2	Static		
calculated_dc_status	Status	99	UINT8	1	Dynamic		
status_up_iface_thickness	Customized upper phase thickness status	102	UINT8	1	Dynamic		
debug_status		107	UINT8	1	Dynamic	x	AUTO


9.6.7 Service Sensor Transducer Block

The parameters of the **Service Sensor** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

9.6.8 Service Information Transducer Block

The parameters of the **Service Information** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

9.6.9 Data Transfer Transducer Block

 The parameters of the **Data Transfer Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK
used_calculation	Used calculation	87	ENUM16	2	Dynamic		
bdt_cfg_rdwr_ctrl		101	UINT16	2	Static	x	AUTO
bdt_transferred_ctrl		102	BYTEARRAY		Static	x	AUTO
bdt_data_trans		103	BYTEARRAY		Static	x	AUTO
bdt_prepare		99	BYTEARRAY		Static	x	AUTO
bdt_status		100	BYTEARRAY		Static		
sw_option_active_overview	SW option active overview	98	BIT_ENUM32	4	Static		
digits_at_0_mVdB		90	FLOAT	4	Dynamic	x	AUTO
digits_per_mVdB		91	FLOAT	4	Dynamic	x	AUTO
actual_diagnostics	Actual diagnostics	97	UINT32	4	Static		
electric_probe_length	Electric probe length	92	FLOAT	4	Dynamic		
empty_calibration_ro	Empty calibration	93	FLOAT	4	Static	x	OOS
full_calibration_ro	Full calibration	94	FLOAT	4	Static	x	OOS
distance_unit_ro	Distance unit	95	ENUM16	2	Static	x	OOS
operating_mode_ro	Operating mode	88	ENUM16	2	Static	x	OOS
present_probe_length_ro	Present probe length	89	FLOAT	4	Dynamic	x	AUTO
trend_operation_hours		104	UINT32	4	Static		

Name	Label	Index	Data type	Size (bytes)	Storage Class	Write access	MODE_BLK
trend_package_size		105	UINT8	1	Static	x	AUTO
trend_storage_time	Trend storage time	106	UINT32	4	Static		
trend_sup_pack_size		107	UINT8	1	Static		
gpc_mode_ro	GPC mode	109	ENUM16	2	Static	x	OOS
eop_level_evaluation_ro	EOP level evaluation	110	ENUM16	2	Static	x	OOS
temperature_unit_ro	Temperature unit	111	ENUM16	2	Static	x	OOS
max_trend_entries		108	UINT16	2	Static		
line_mapping_point_number	Line mapping point number	126	UINT16	2	Static	x	AUTO
line_mapping_array_x	Line mapping array X	127	FLOAT	4	Static	x	AUTO
line_mapping_array_y	Line mapping array Y	128	FLOAT	4	Static	x	AUTO
mapping_end_point_ro	Mapping end point	125	FLOAT	4	Static	x	AUTO
mapping_start_point	Mapping start point	124	FLOAT	4	Static	x	AUTO
function_block_table		143	UINT32	4	Static		
custom_empty_value		112	FLOAT	4	Static		
custom_full_value		113	FLOAT	4	Static		
customized	Customized	121	UINT8	1	Static		
reset_ordered_configuration	Reset ordered configuration	122	ENUM16	2	Static	x	AUTO
empty_scale		114	FLOAT	4	Static	x	AUTO
eop_map_point_number		116	UINT16	2	Static	x	AUTO
factory_data_valid		123	UINT8	1	Static		
fieldbus_type	Fieldbus type	144	ENUM8	1	Static		
full_scale		115	FLOAT	4	Static	x	AUTO
init_map_point_number		117	UINT16	2	Static	x	AUTO
max_not_assoc_track		118	UINT16	2	Static	x	AUTO
ref_max_dist	Ref max. dist.	119	FLOAT	4	Static	x	AUTO
ref_min_dist	Reference min. distance	120	FLOAT	4	Static	x	AUTO
line_mapping_accuracy	Line mapping accuracy	130	FLOAT	4	Static	x	AUTO
mapping_curve_left_margin	Mapping curve left margin	131	FLOAT	4	Static	x	AUTO
device_calib_changed		133	ENUM16	2	Static	x	AUTO
echo_thresh_attenuat_const_ee	Threshold attenuation constant	134	FLOAT	4	Dynamic	x	AUTO
echo_threshold_far_ee		135	FLOAT	4	Static	x	AUTO
echo_thresh_inactive_len		137	FLOAT	4	Static	x	AUTO
echo_threshold_near_ee		136	FLOAT	4	Static	x	AUTO
present_probe_length_ee		138	FLOAT	4	Static	x	AUTO
reset_appl_para_chg_flags		139	ENUM16	2	Static	x	AUTO
reset_dyn_persistent		140	ENUM16	2	Static	x	AUTO
locking_status	Locking status	142	BIT_ENUM16	2	Dynamic		
decimal_places_menu	Decimal places menu	96	ENUM16	2	Static	x	AUTO
access_status_tooling	Access status tooling	141	ENUM16	2	Static		
level_linearized	Level linearized	147	FLOAT	4	Dynamic		
bdt_transferred_ctrl		197	UINT8	1	Static	x	AUTO
bdt_cfg_rdwr_ctrl		196	UINT16	2	Static	x	AUTO

9.7 Methods

The FOUNDATION Fieldbus Specification allows for the use of methods to simplify device operation. A method is a sequence of interactive steps to be carried out in the specified order so as to configure certain device functions.


The following methods are available for the devices:

- **Restart**
This method is located in the resource block and is used to configure the **Reset device** parameter. This resets the device parameters to a specific state.
- **ENP Restart**
This method is located in the resource block and allows the parameters of the electronic nameplate (**Electronic Name Plate**) to be changed.
- **Setup**
This method is located in the SETUP Transducer Block and is used for basic configuration of the measurement parameters (units, tank or vessel type, medium, empty and full calibration).
- **Linearization**
This method is located in the ADV_SETUP Transducer Block and allows the linearization table to be managed for the purpose of converting the level measured into a volume, a mass or a flow rate.
- **Self Check**
This method is located in the EXPERT_CONFIG Transducer Block and is used to perform a device self-test.

10 Commissioning using the wizard

FieldCare and DeviceCare have a wizard that guides the user through initial commissioning.

1. Connect the device with FieldCare or DeviceCare.
2. Open the device in FieldCare or DeviceCare.
 - ↳ The dashboard (homepage) of the device is displayed:

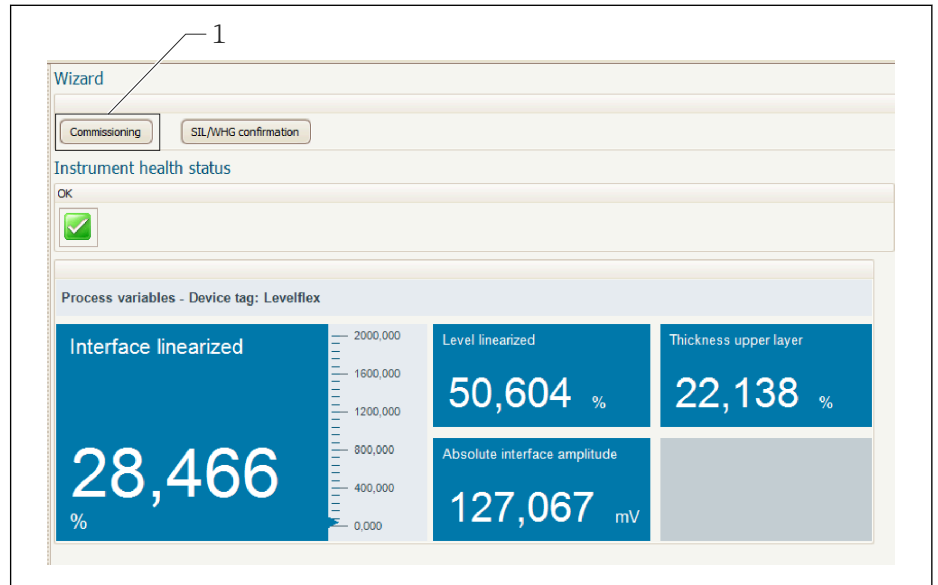

1 "Commissioning" button calls up the wizard


3. Click "Commissioning" to launch the Wizard.
 4. Enter the appropriate value in each parameter or select the appropriate option. These values are written directly to the device.
 5. Click "Next" to go to the next page.
 6. Once all the pages have been completed, click "Finish" to close the Wizard.
- i** If you cancel the Wizard before all the necessary parameters have been entered, the device may be in an undefined state. In such situations, it is advisable to reset the device to the factory default settings.

11 Commissioning via operating menu

11.1 Installation and function check


Before commissioning the measuring point, check whether the post-installation and post-connection checks have been performed.


 Post-mounting check

 Post-connection check

11.2 Configuring the operating language


Factory setting: English or ordered local language

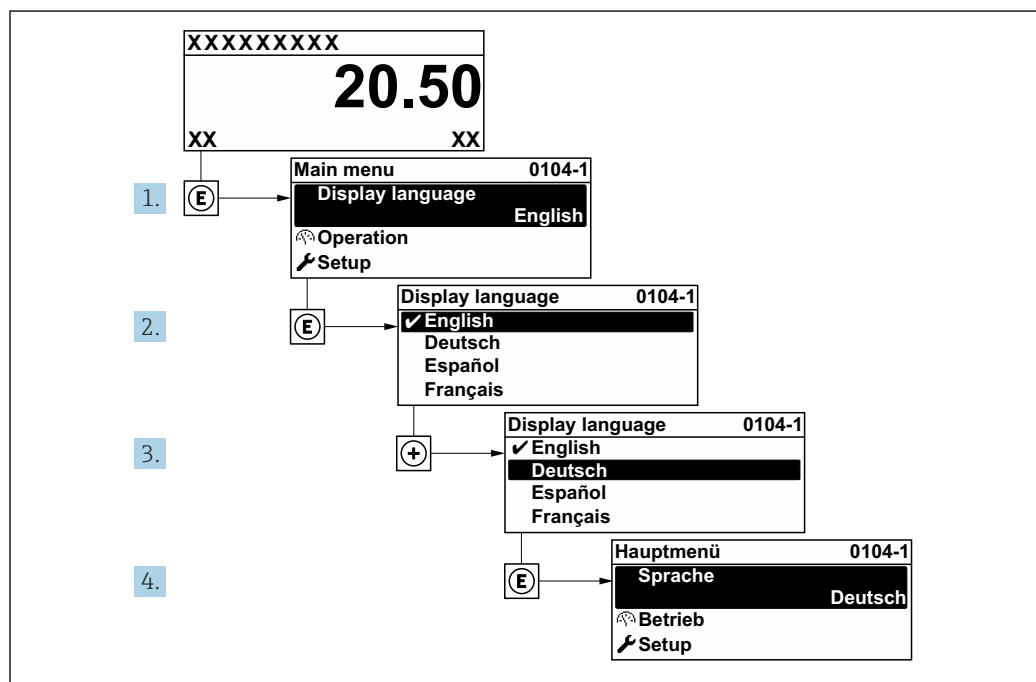

 25 Using the example of the local display

A0029420

11.3 Checking the reference distance

 This section applies only to the FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG)

Coax probes with gas phase compensation are calibrated on delivery. Rod probes, on the other hand, must be recalibrated after mounting:

After mounting the rod probe in the stilling well or bypass, check and - if necessary - correct the setting of the reference distance in the unpressurized state. The level should be at least 200 mm below the reference distance L_{ref} in order to achieve maximum accuracy.


Step	Parameter	Action
1	Expert → Sensor → Gas phase compensation → GPC mode	Select the On option to enable gas phase compensation.
2	Expert → Sensor → Gas phase compensation → Present reference distance	Check if the current reference distance displayed corresponds with the nominal value (300 mm or 550 mm, see nameplate). If yes: No further action is required. If not: Continue with Step 3
3	Expert → Sensor → Gas phase compensation → Reference distance	Accept the value displayed under the Present reference distance parameter. This corrects the reference distance.



For a detailed description of all parameters, see:

GP01015F, "Levelflex - Description of Device Parameters - FOUNDATION Fieldbus"

11.4 Configuring level measurement

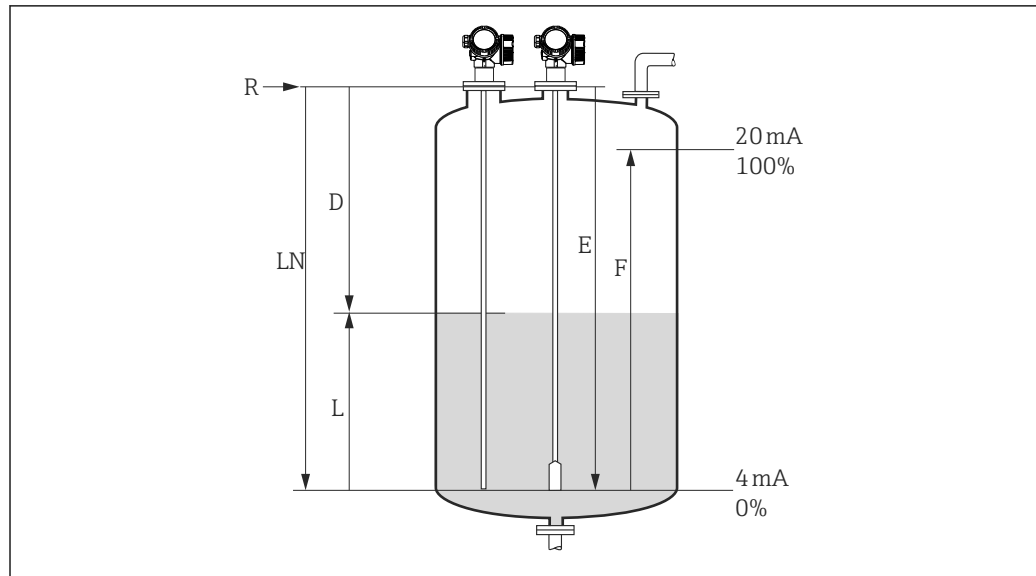

A0011360

26 Configuration parameters for level measurement in liquids

<i>LN</i>	Length of probe
<i>R</i>	Reference point of the measurement
<i>D</i>	Distance
<i>L</i>	Level
<i>E</i>	Empty calibration (= zero point)
<i>F</i>	Full calibration (= span)


i If the ϵ_r value is lower than 7 in the case of rope probes, measurement is not possible in the area of the probe weight. The empty calibration *E* should not exceed $LN - 250$ mm ($LN - 10$ in) in these cases.

1. Setup → Device tag
 - ↳ Enter the tag name.
2. For devices in the "Interface measurement" application package:
 - Navigate to: Setup → Operating mode
 - ↳ Select the **Level** option.
3. Navigate to: Setup → Distance unit
 - ↳ Select the length unit.
4. Navigate to: Setup → Tank type
 - ↳ Select tank type.
5. For **Tank type** parameter = Bypass / pipe:
 - Navigate to: Setup → Tube diameter
 - ↳ Specify the diameter of the bypass or stilling well.
6. Navigate to: Setup → Medium group
 - ↳ Specify the medium group: (**Water based (DC ≥ 4)** or **Others**)
7. Navigate to: Setup → Empty calibration
 - ↳ Specify empty distance *E* (distance from reference point *R* to 0% mark).
8. Navigate to: Setup → Full calibration
 - ↳ Specify the full distance *F* (distance from the 0% mark to the 100% mark).
9. Navigate to: Setup → Level
 - ↳ Displays the measured level *L*.

10. Navigate to: Setup → Distance
 - ↳ Displays the distance D between the reference point R and the level L.
11. Navigate to: Setup → Signal quality
 - ↳ Displays the signal quality of the analyzed level echo.
12. Operation via local display:
Navigate to: Setup → Mapping → Confirm distance
 - ↳ Compare the distance displayed with the actual value to start recording an interference echo map if necessary.
NOTICE For FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG) a map may NOT be recorded.
13. Operation via operating tool:
Navigate to: Setup → Confirm distance
 - ↳ Compare the distance displayed with the actual value to start recording an interference echo map if necessary.
NOTICE For FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG) a map may NOT be recorded.

11.5 Configuring interface measurement

i An interface measurement is only possible if the device has the corresponding software option. In the product structure: feature 540 "Application Package", option EB "Interface measurement".

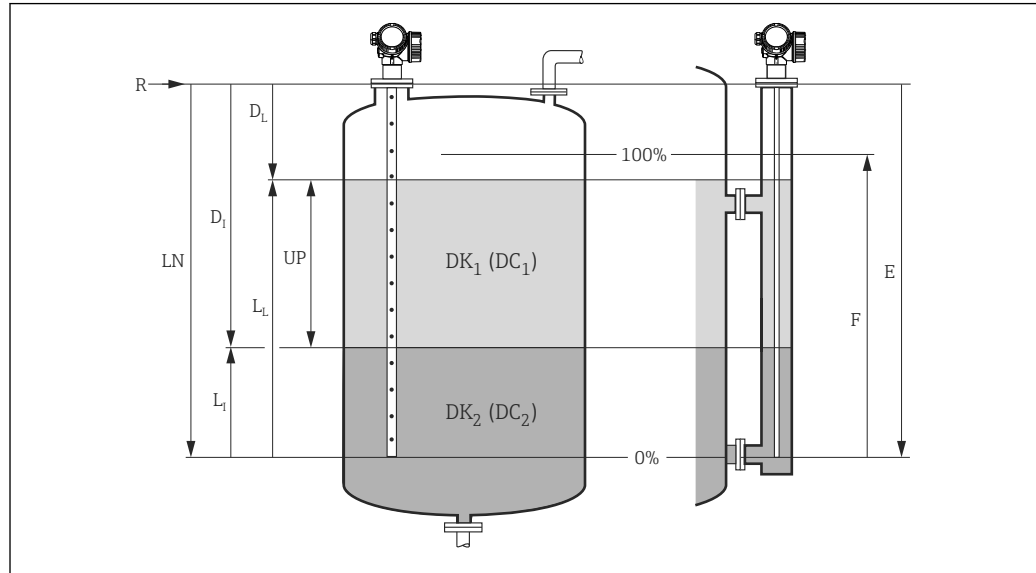

A0011177

27 Configuration parameters for interface measurement

LN Length of probe
R Reference point of the measurement
D1 Interface distance (distance from flange to lower medium)
L1 Interface
DL Distance
LL Level
UP Thickness upper layer
E Empty calibration (= zero point)
F Full calibration (= span)

1. Navigate to: Setup → Device tag
 - ↳ Enter the tag name.
2. Navigate to: Setup → Operating mode
 - ↳ Select the **Interface** option.
3. Navigate to: Setup → Distance unit
 - ↳ Select the length unit.
4. Navigate to: Setup → Tank type
 - ↳ Select tank type.
5. For **Tank type** parameter = Bypass / pipe:
 - Navigate to: Setup → Tube diameter
 - ↳ Specify the diameter of the bypass or stilling well.
6. Navigate to: Setup → Tank level
 - ↳ Specify the filling level (**Fully flooded** or **Partially filled**)
7. Navigate to: Setup → Distance to upper connection
 - ↳ In bypasses: Specify the distance from the reference point R to the lower edge of the upper outflow. In all other cases, retain the factory setting.
8. Navigate to: Setup → DC value
 - ↳ Specify the relative dielectric constant (ϵ_r) of the upper medium.

9. Navigate to: Setup → Empty calibration
 - ↳ Specify empty distance E (distance from reference point R to 0% mark).
10. Navigate to: Setup → Full calibration
 - ↳ Specify the full distance F (distance from the 0% mark to the 100% mark).
11. Navigate to: Setup → Level
 - ↳ Displays the measured level L_L .
12. Navigate to: Setup → Interface
 - ↳ Displays the interface height L_I .
13. Navigate to: Setup → Distance
 - ↳ Displays the distance D_L between the reference point R and the level L_L .
14. Navigate to: Setup → Interface distance
 - ↳ Displays the distance D_I between the reference point R and the interface L_I .
15. Navigate to: Setup → Signal quality
 - ↳ Displays the signal quality of the analyzed level echo.
16. Operation via local display:
 - Navigate to: Setup → Mapping → Confirm distance
 - ↳ Compare the distance displayed with the actual value to start recording an interference echo map if necessary.

NOTICE For FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG) a map may NOT be recorded
17. Via an operating tool (e.g. FieldCare):
 - Navigate to: Setup → Confirm distance
 - ↳ Compare the distance displayed with the actual value to start recording an interference echo map if necessary.

NOTICE For FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG) a map may NOT be recorded

11.6 Recording the reference echo curve

After the measurement has been configured, it is recommended to record the current envelope curve as a reference echo curve. This can then be used later for diagnostic purposes. The **Save reference curve** parameter is used to record the envelope curve.


Path in the menu


Expert → Diagnostics → Envelope diagnostics → Save reference curve


Meaning of the options

- No
 - No action
- Yes
 - The current envelope curve is saved as a reference curve.

 This submenu is only visible for the "Service" user role in devices supplied with software version 01.00.zz.

 The reference echo curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. The "Load Reference Curve" function in FieldCare is used for this.



 28 "Load Reference Curve" function

11.7 Configuring the local display

11.7.1 Factory setting of local display for level measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Level linearized	Level linearized
Value 2 display	Distance	Distance
Value 3 display	Current output 1	Current output 1
Value 4 display	None	Current output 2

11.7.2 Factory setting of local display for interface measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Interface linearized	Interface linearized
Value 2 display	Level linearized	Level linearized
Value 3 display	Thickness upper layer	Current output 1
Value 4 display	Current output 1	Current output 2

11.7.3 Adjusting the local display

The local display can be adjusted in the following submenu:
Setup → Advanced setup → Display

11.8 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and the options available.

Path in the menu

Setup → Advanced setup → Configuration backup display → Configuration management

Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration is saved from the HistoROM (integrated in the device) to the display module of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

- **Duplicate**

The transmitter configuration of the device is duplicated to another device using the display module. The following parameters, which characterize the individual measuring point are **not** transferred:

Medium type

- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of the comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup copy is restored on a device other than the original device using the **Restore** option, in some cases individual device functions may not be available. In some cases it is also not possible to restore the original state by resetting to the "as-delivered" state.

The **Duplicate** option should always be used to copy the configuration to another device.

11.9 Protecting settings from unauthorized access

The settings can be protected from unauthorized access in two ways:


- Locking via parameters (software locking)
- Locking via write protection switch (hardware locking)

12 Commissioning (block-based operation)

12.1 Installation and function check

Before commissioning the measuring point, check whether the post-installation and post-connection checks have been performed.

 Post-mounting check

 Post-connection check

12.2 Block configuration

12.2.1 Preliminaries

1. Switch on the measuring instrument.
2. Make a note of the **DEVICE_ID**.
3. Open the configuration program.
4. Load Cff and device description files into the host system or the configuration program. Make sure you are using the right system files.
5. Identify the device using the **DEVICE_ID** (see point 2). Assign the desired tag name to the device via the **Pd-tag/FF_PD_TAG** parameter.


12.2.2 Configuring the Resource Block

1. Open the Resource Block.
2. If necessary, disable the lock for device operation.
3. If necessary, change the block name. Factory setting: RS-xxxxxxxxxxx (RB2)
4. If necessary, assign a description to the block by means of the **Tag Description/TAG_DESC** parameter.
5. If necessary, change other parameters as required.

12.2.3 Configuring the Transducer Blocks

The measurement and the display module are configured via the Transducer Blocks. The basic procedure is the same for all Transducer Blocks:




1. If necessary, change the block name.
2. Set the block mode to **OOS** via the **Block mode/MODE_BLK** parameter, **TARGET** element.
3. Configure the device in accordance with the measuring task.
4. Set the block mode to **Auto** via the **Block mode/MODE_BLK** parameter, **TARGET** element.

 The block mode must be set to **Auto** for the measuring instrument to function correctly.

12.2.4 Configuring the Analog Input Blocks

The device has 2 Analog Input Blocks that can be assigned as required to the various process variables.

Factory setting	
Analog Input Block	CHANNEL
AI 1	32949: Level linearized
AI 2	32856: Distance


1. If necessary, change the block name.
2. Set the block mode to **OOS** via the **Block mode/MODE_BLK** parameter, **TARGET** element.
3. Via the **CHANNEL** parameter, select the process variable which should be used as the input value for the Analog Input Block →  68.
4. Via the **Transducer scale/XD_SCALE** parameter, select the desired unit and the block input range for the process variable →  89. Make sure that the unit selected suits the process variable selected. If the process variable and unit do not match, the **Block error/ BLOCK_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
5. Via the **Linearization type/L_TYPE** parameter, select the type of linearization for the input variable (factory setting: **Direct**). In the **Direct** linearization mode, the settings for the **Transducer scale/XD_SCALE** and **Output scale/OUT_SCALE** parameters must be identical. If the values and units do not match, the **Block error/ BLOCK_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
6. Enter the alarm and critical alarm messages by means of the **High High Limit/ HI_HI_LIM**, **High Limit/HI_LIM**, **Low Low Limit/LO_LO_LIM** and **Low Limit/ LO_LIM** parameters. The limit values entered must be within the value range specified for the **Output scale/OUT_SCALE** parameter →  89.
7. Specify the alarm priorities via the **Priority for high limit value alarm/HI_HI_PRI**, **Priority for high early warning/HI_PRI**, **Priority for low limit value alarm/ LO_LO_PRI** and **Priority for low limit value early warning/LO_PRI** parameters. Reporting to the field host system only takes place with alarms with a priority greater than 2.
8. Set the block mode to **Auto** via the **Block mode/MODE_BLK** parameter, **TARGET** element. For this purpose, the Resource Block must also be set to the **Auto** block mode.

12.2.5 Additional configuration

1. Link the function blocks and output blocks.
2. After specifying the active LAS, download all the data and parameters to the field device.

12.3 Scaling of the measured value in an AI Block

The measured value can be scaled if the **L_TYPE = Indirect** linearization type has been selected in the Analog Input Block. **XD_SCALE** defines the input range with the **EU_0** and **EU_100** elements. This is mapped linearly to the output range, defined by **OUT_SCALE** also with the elements **EU_0** and **EU_100**.

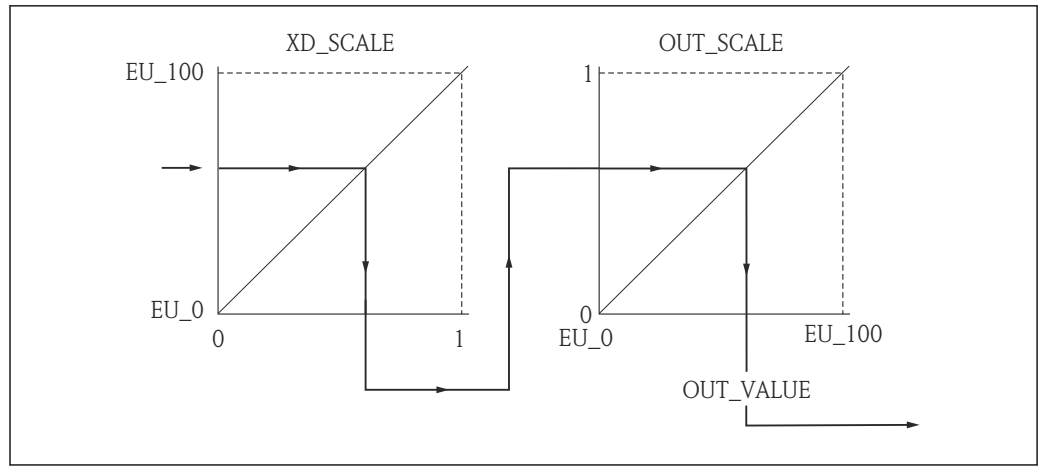

29 Scaling of the measured value in an AI Block

- i** If you have selected the **Direct** mode in the **L_TYPE** parameter, you cannot change the values and units for **XD_SCALE** and **OUT_SCALE**.
- The **L_TYPE**, **XD_SCALE** and **OUT_SCALE** parameters can only be changed in the OOS block mode.

12.4 Language selection

Step	Block	Parameter	Action
1	DISPLAY (TRDDISP)	Language (language)	Select language ¹⁾ . Selection: <ul style="list-style-type: none"> ▪ 32805: Arabic ▪ 32824: Chinese ▪ 32842: Czech ▪ 32881: Dutch ▪ 32888: English ▪ 32917: French ▪ 32920: German ▪ 32945: Italian ▪ 32946: Japanese ▪ 32948: Korean ▪ 33026: Polish ▪ 33027: Portuguese ▪ 33062: Russian ▪ 33083: Spanish ▪ 33103: Thai ▪ 33120: Vietnamese ▪ 33155: Indonesian ▪ 33166: Turkish

1) When ordering a device the set of available languages is defined. Refer to the product structure, feature 500 "Additional Operation Language".


12.5 Checking the reference distance

- i** This section applies only to the FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG)

Coax probes with gas phase compensation are calibrated on delivery. Rod probes, on the other hand, must be recalibrated after mounting:


After mounting the rod probe in the stilling well or bypass, check and - if necessary - correct the setting of the reference distance in the unpressurized state. The level should be at least 200 mm below the reference distance L_{ref} in order to achieve maximum accuracy.

Step	Block	Parameter	Action
1	EXPERT_CONFIG (TRDEXP)	GPC mode (gpc_mode)	Select the On (33006) option to activate gas phase compensation.
2	EXPERT_CONFIG (TRDEXP)	Present reference distance (present_reference_distance)	Check if the current reference distance displayed corresponds with the nominal value (300 mm or 550 mm, see nameplate). If yes: No further action is required. If not: Continue with Step 3
3	EXPERT_CONFIG (TRDEXP)	Reference distance (reference_distance)	Adopt the value displayed under "Present reference distance (present_reference_distance)" for the "Reference distance (reference_distance)" parameter.

 For a detailed description of all parameters, see:
GP01015F, "Levelflex - Description of Device Parameters - FOUNDATION Fieldbus"

12.6 Configuring level measurement

i The **Setup** method can also be used to configure the measurement. It is called up via the SETUP (TRDSUP) Transducer Block.

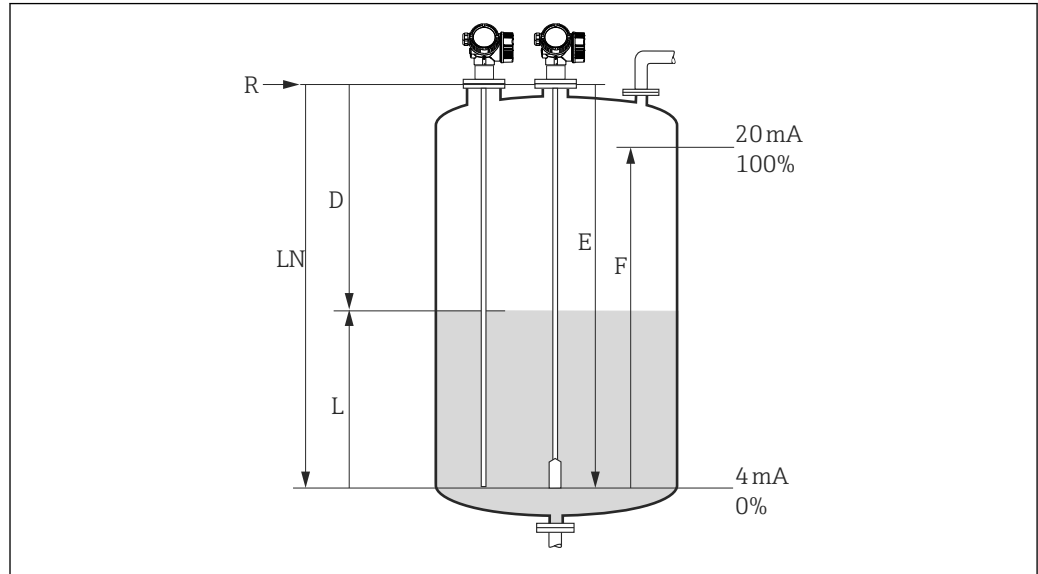

A0011360

30 Configuration parameters for level measurement in liquids

LN = Probe length

D = Distance

L = Level

R = Reference point of measurement

E = Empty calibration (= zero point)

F = Full calibration (= span)



i If the DC value is less than 7 in the case of rope probes, measurement in the area of the probe weight is not possible. The empty calibration *E* should not exceed *LN* - 250 mm (*LN* - 10 in) in these cases.


Step	Block	Parameter	Action
1	SETUP (TRDSUP)	Distance unit (distance_unit)	Select the length unit. Selection: <ul style="list-style-type: none"> ▪ 1010: m ▪ 1013: mm ▪ 1018: in ▪ 1019: ft
2	SETUP (TRDSUP)	Operating mode (operating_mode) ¹⁾	Select 32949: Level .
3	SETUP (TRDSUP)	Tank type (tank_type)	Select tank type. Selection: <ul style="list-style-type: none"> ▪ 32816: Bypass/Stilling well ▪ 33288: Metallic ▪ 33302: Coaxial ▪ 33432: Twin rope ▪ 33433: Twin rod ▪ 33437: Rope centering disk metallic ▪ 33438: Rod centering disk metallic ▪ 33441: Non metallic ▪ 33444: Mounted outside
4	SETUP (TRDSUP)	Tube diameter (tube_diameter) ²⁾	Specify the diameter of the bypass or stilling well.

Step	Block	Parameter	Action
5	SETUP (TRDSUP)	Medium group (medium_group)	Specify medium group. Selection: <ul style="list-style-type: none"> ■ Other (DC > 1.9) ³⁾ ■ Water-based (DC > 4)
6	SETUP (TRDSUP)	Empty calibration (empty_calibration)	Specify empty distance E (distance from reference point R to 0% mark).
7	SETUP (TRDSUP)	Full calibration (full_calibration)	Specify the full distance F (distance from the 0% mark to the 100% mark).
8	SETUP (TRDSUP)	Level (level)	Displays the measured level L.
9	SETUP (TRDSUP)	Distance (filtered_dist_val)	Displays the distance D between the reference point R and the level L.
10	SETUP (TRDSUP)	Signal quality (signal_quality)	Displays the signal quality of the analyzed level echo.
11	SETUP (TRDSUP)	Confirm distance (confirm_distance)	Compare the distance displayed with the actual value to start recording an interference echo map. Selection: <ul style="list-style-type: none"> ■ 179: Manual map ■ 32847: Delete all ■ 32859: Distance ok ■ 32860: Distance too big ■ 32861: Distance too small ■ 32862: Distance unknown ■ 33100: Tank empty

- 1) only available for devices with the "Interface measurement" application package
- 2) only available for coated probes and "Tank type" = "Bypass/Stilling well"
- 3) If required, lower DCs can be entered into the "DC value (dc_value)" parameter. However, for a DC value < 1.6, the measuring range may be reduced; for details, please contact Endress+Hauser.

12.7 Configuring interface measurement

-  An interface measurement is only possible if the device has the corresponding software option. In the product structure: feature 540 "Application Package", option EB "Interface measurement".
-  The **Setup** method can also be used to configure the measurement. It is called up via the SETUP (TRDSUP) Transducer Block.

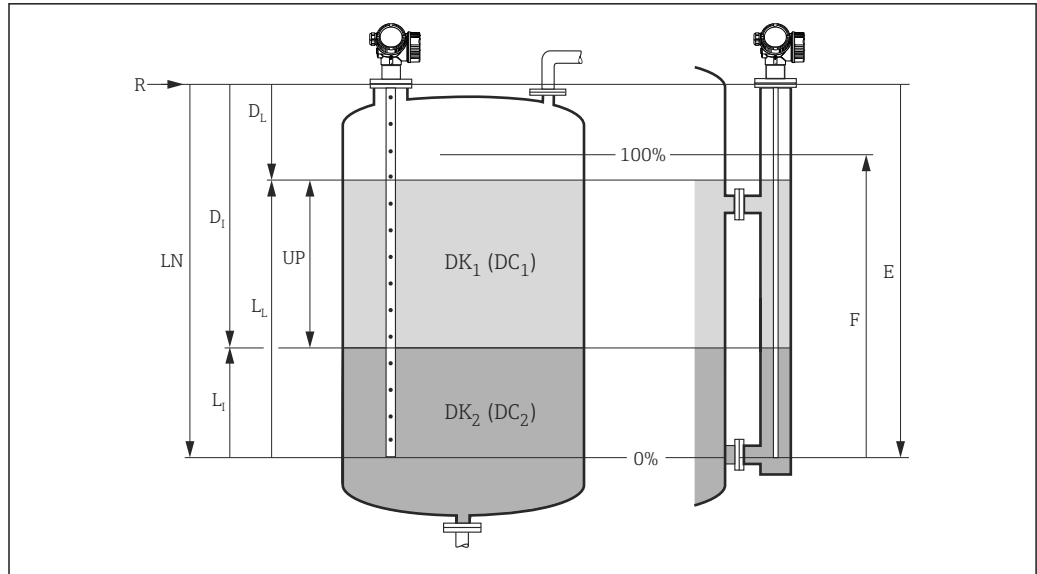

A0011177

31 Configuration parameters for interface measurement

- R = Reference point of measurement
- E = Empty calibration (= zero point)
- F = Full calibration (= span)
- LN = Probe length
- UP = Thickness of upper medium
- D₁ = Interface distance (Distance from flange to DC₂)
- L₁ = Interface level
- D_L = Distance total level
- L_L = Total level

Step	Block	Parameter	Action
1	SETUP (TRDSUP)	Distance unit (distance_unit)	Select the length unit. Selection: <ul style="list-style-type: none"> ▪ 1010: m ▪ 1013: mm ▪ 1018: in ▪ 1019: ft
2	SETUP (TRDSUP)	Operating mode (operating_mode) ¹⁾	Select 32938: Interface .
3	SETUP (TRDSUP)	Tank type (tank_type)	Select tank type. Selection: <ul style="list-style-type: none"> ▪ 32816: Bypass/Stilling well ▪ 33288: Metallic ▪ 33302: Coaxial ▪ 33432: Twin rope ▪ 33433: Twin rod ▪ 33437: Rope centering disk metallic ▪ 33438: Rod centering disk metallic ▪ 33441: Non metallic ▪ 33444: Mounted outside
4	SETUP (TRDSUP)	Tube diameter (tube_diameter) ²⁾	Specify the diameter of the bypass or stilling well.
5	SETUP (TRDSUP)	Tank level (tank_level)	Select tank level. Selection: <ul style="list-style-type: none"> ▪ 32919: Fully flooded (typical for bypass measurements) ▪ 33021: Partially filled (typical for measurements directly in tank)
6	SETUP (TRDSUP)	Distance to upper connection (distance_to_upper_connection)	<ul style="list-style-type: none"> ▪ For measurements in bypasses, enter the distance from the reference point R to the lower edge of the upper connection. ▪ Otherwise, retain the factory setting.


Step	Block	Parameter	Action
7	SETUP (TRDSUP)	DC value (dc_value)	Specify the dielectric constant of the upper medium.
8	SETUP (TRDSUP)	Empty calibration (empty_calibration)	Specify empty distance E (distance from reference point R to 0% mark).
9	SETUP (TRDSUP)	Full calibration (full_calibration)	Specify the full distance F (distance from the 0% mark to the 100% mark).
10	SETUP (TRDSUP)	Level (level)	Displays the measured level L.
11	SETUP (TRDSUP)	Interface (interface)	Displays the interface height L _I .
12	SETUP (TRDSUP)	Distance (filtered_dist_val)	Displays the distance D between the reference point R and the level L.
13	SETUP (TRDSUP)	Interface distance (interface_distance)	Displays the distance D _I between the reference point R and the interface L _I .
14	SETUP (TRDSUP)	Signal quality (signal_quality)	Displays the signal quality of the analyzed level echo.
15	SETUP (TRDSUP)	Confirm distance (confirm_distance)	Compare the distance displayed with the actual value to start recording an interference echo map. Selection: <ul style="list-style-type: none"> ▪ 179: Manual map ▪ 32847: Delete all ▪ 32859: Distance ok ▪ 32860: Distance too big ▪ 32861: Distance too small ▪ 32862: Distance unknown ▪ 33100: Tank empty

- 1) only available for devices with the "Interface measurement" application package
- 2) only available for coated probes and "Tank type" = "Bypass/Stilling well"

12.8 Configuring the local display

12.8.1 Factory setting of local display for level measurements


Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Level linearized	Level linearized
Value 2 display	Distance	Distance
Value 3 display	Current output 1	Current output 1
Value 4 display	None	Current output 2

 The local display can be adjusted in the **DISPLAY (TRDDISP)** Transducer Block.

12.8.2 Factory setting of local display for interface measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Interface	Interface
Value 2 display	Level linearized	Level linearized

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Value 3 display	Upper interface thickness	Current output 1
Value 4 display	Current output 1	Current output 2

 The local display can be adjusted in the **DISPLAY (TRDDISP)** Transducer Block.

12.9 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and the options available.

Path in the menu

Setup → Advanced setup → Conf.backup disp. → Config. managem.

Block operation

Block: **DISPLAY (TRDDISP)**



Parameter: **Configuration management (configuration_management)**

Functions of the parameter options

Options	Description
33097: Execute backup	A backup copy of the current device configuration in the HistoROM is saved to the display module of the device. The backup copy includes the transmitter data of the device.
33057: Restore	The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy includes the transmitter data of the device.
33838: Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
265: Compare	The device configuration saved in the display module is compared to the current device configuration of the HistoROM.
32848: Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

HistoROM


A HistoROM is a "non-volatile" device memory in the form of an EEPROM.


-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  For devices with FOUNDATION Fieldbus communication, the PD Tag parameter is also transmitted when duplicating the parameter configuration. If required change this parameter to the required value after duplicating the set.

12.10 Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912

The device complies with the FOUNDATION Fieldbus specification FF912. This means the following, among other things:

- The diagnostic category as per NAMUR Recommendation NE107 is transmitted over the fieldbus in a format that is independent of the manufacturer:
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- The diagnostic category of pre-defined groups of events can be adjusted by the user according to the requirements of the specific application.
- Certain events can be separated from their group and can be treated separately:
 - 941: Echo lost
 - 942: In safety distance
- Additional information and remedial measures are transmitted together with the event message via the fieldbus.

 The diagnostic messages according to FF912 are available in the host only if the **Multi-bit support** option has been activated in the **FEATURE_SEL** parameter of the resource block. For reasons of compatibility, this option is **not** activated on delivery:

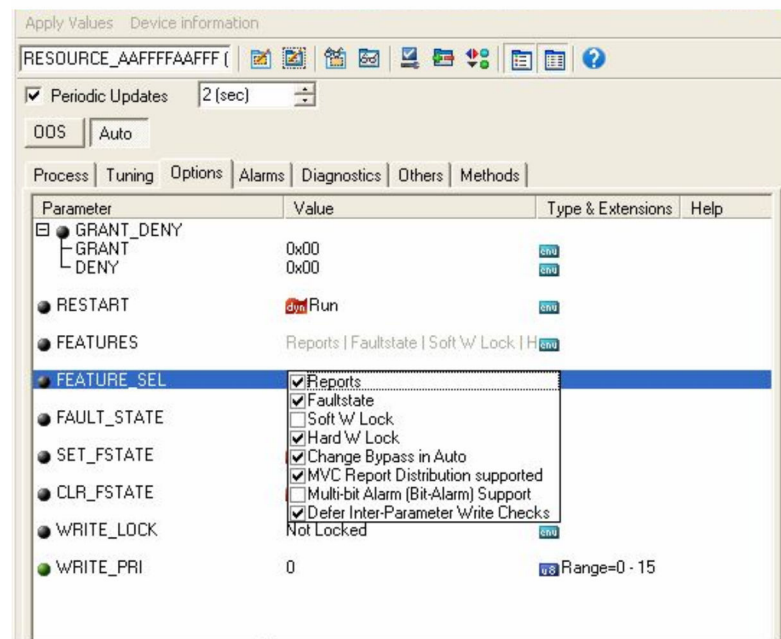

12.10.1 Event groups

The diagnostic messages are classified into 16 groups according to the **source** and **severity** of the respective event. A **default diagnostic category** is allocated to each group. Each group is also represented by one bit of the assignment parameters.

Severity of the event	Default diagnostic category	Event source	Bit	Events within this group
Highest severity	Failure (F)	Sensor	31	<ul style="list-style-type: none"> ▪ F003: Broken probe detected ▪ F046: Buildup detected ▪ F083: Memory content ▪ F104: HF cable ▪ F105: HF cable ▪ F106: Sensor
		Electronics	30	<ul style="list-style-type: none"> ▪ F242: Software incompatible ▪ F252: Module incompatible ▪ F261: Electronics modules ▪ F262: Module connecting ▪ F270: Main electronics failure ▪ F271: Main electronics failure ▪ F272: Main electronics failure ▪ F273: Main electronics failure ▪ F275: I/O module failure ▪ F276: I/O module failure ▪ F282: Data memory ▪ F283: Memory content ▪ F311: Memory content
		Configuration	29	<ul style="list-style-type: none"> ▪ F410: Data transfer ▪ F411: Up-/Download ▪ F435: Linearization ▪ F437: Configuration incompatible
		Process	28	<ul style="list-style-type: none"> ▪ F803: Current loop 1 ▪ F825: Operating temperature ▪ F936: EMC interference ▪ F941: Echo lost ¹⁾ ▪ F970: Linearization

- 1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Event source	Bit	Events within this group
High severity	Function check (C)	Sensor	27	not used in Levelflex
		Electronics	26	not used in Levelflex
		Configuration	25	<ul style="list-style-type: none"> ▪ C411: Up-/Download ▪ C431: Trim ▪ C484: Simulation failure mode ▪ C485: Simulation measured value ▪ C491: Simulation current output ▪ C585: Simulation distance
		Process	24	not used in Levelflex

Severity of the event	Default diagnostic category	Event source	Bit	Events within this group
Low severity	Out of specification (S)	Sensor	23	not used in Levelflex
		Electronics	22	not used in Levelflex

Severity of the event	Default diagnostic category	Event source	Bit	Events within this group
		Configuration	21	S441: Current output 1
		Process	20	<ul style="list-style-type: none"> ▪ S801: Energy too low ▪ S825: Operating temperature ▪ S921: Change of reference ▪ S942: In safety distance ¹⁾. ▪ S943: In blocking distance ▪ S944: Level range ▪ S968: Level limited

1) This event can be removed from the group and treated individually; see the "Configurable area" section

Severity of the event	Default diagnostic category	Event source	Bit	Events within this group
Lowest severity	Maintenance required (M)	Sensor	19	not used in Levelflex
		Electronics	18	<ul style="list-style-type: none"> ▪ M270: Main electronics failure ▪ M272: Main electronics failure ▪ M311: Memory content
		Configuration	17	M438: Data set
		Process	16	M801: Current loop 1

12.10.2 Assignment parameters

The assignment of event categories to event groups is done via four assignment parameters. They reside in the **RESOURCE (RB2)** block:

- **FD_FAIL_MAP**: for the **Failure (F)** event category
- **FD_CHECK_MAP**: for the **Function check (C)** event category
- **FD_OFFSPEC_MAP**: for the **Out of specification (S)** event category
- **FD_MAINT_MAP**: for the **Maintenance required (M)** event category

Each of these parameters consists of 32 bits with the following meaning:

- **Bit 0**: reserved by the Fieldbus Foundation
- **Bits 1 to 15**: Configurable area; here, a number of predefined diagnostic events can be allocated irrespective of the group of events they belong to. In this case, they are removed from their group and their behavior can be configured individually. With Levelflex, the following parameters can be assigned to the configurable area:
 - 941: Echo lost
 - 942: In safety distance
- **Bits 16 to 31**: Standard area; these bits are permanently assigned to the event groups. If the bit is set to **1**, this event group is assigned to the respective event category.

The following table represents the default setting of the assignment parameters. In the default setting, there is a clear relationship between the severity of the event and the event category (i.e. its assignment parameter).

Default setting of assignment parameters

Severity of the event	Standard area																Configurable area
	Highest severity				High severity				Low severity				Lowest severity				
Event source ¹⁾	S	E	C	P	S	E	C	P	S	E	C	P	S	E	C	P	
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15 ... 1
FD_FAIL_MAP	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
FD_CHECK_MAP	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0

FD_OFFSPEC_MAP	0	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0
FD_MAINT_MAP	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0


1) S: Sensor; E: Electronics; C: Configuration; P: Process

In order to change the diagnostic behaviour of an event group, proceed as follows:


1. Open the assignment parameter to which the group is currently allocated.
2. Switch the bit of the event group from **1** to **0**. When operating via FieldCare, this is done by deactivating the corresponding check box (see the following example).
3. Open the assignment parameter which the group should be assigned to.
4. Switch the bit of the event group from **0** to **1**. When operating via FieldCare, this is done by activating the corresponding check box (see the following example).

Example

The **Highest severity/Configuration error** group contains the messages **410: Data transfer**, **411: Up-/Download**, **435: Linearization** and **437: Configuration incompatible**. These messages are no longer to be classified as **Failure (F)** but as **Function check (C)**.

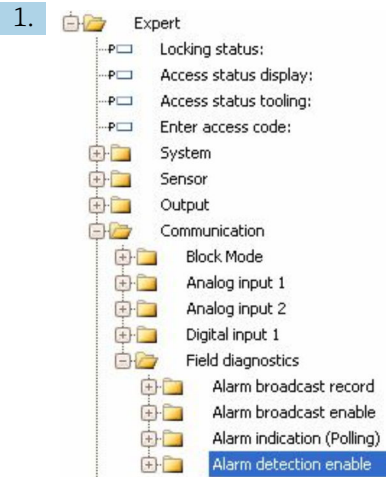

Use the FieldCare navigation window to navigate to the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.

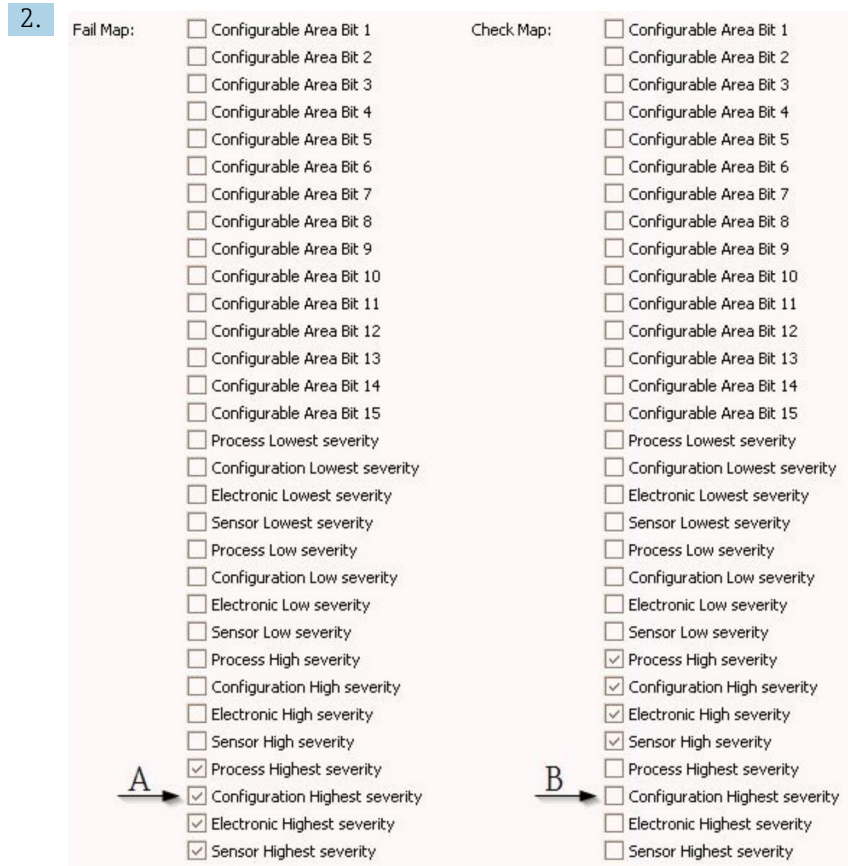

32 Default state of the "Fail Map" and "Check Map" columns

Look for the **Configuration Highest Severity** group in the **Fail Map** column and deactivate the associated check box (A). Activate the corresponding check box in the **Check Map** (B) column. Remember to confirm each change by pressing the Enter key.



33 The "Fail Map" and "Check Map" columns after the change

i Make sure that the corresponding bit is set in at least one of the assignment parameters for each event group. Otherwise no event category is transmitted with the event over the bus. As a consequence, the message will not be recognized by the control system.

i FieldCare's **Alarm detection enable** screen is used to configure the detection of diagnostic events but not the transmission of event messages to the bus. The latter is configured in the **Alarm broadcast enable** screen, which is operated exactly in the same way as the **Alarm detection enable** screen. Status information is only transmitted to the bus if the Resource Block is in the **Auto** mode.

12.10.3 Configurable area


An event category can be individually defined for the following parameters - irrespective of the group of events they belong to by default:

- **F941:** Echo lost
- **S942:** In safety distance

Prior to changing the event category, the event must be allocated to one of the bits 1 to 15. This is done via parameters **FF912 ConfigArea_1** to **FF912ConfigArea_15** in the **DIAGNOSTIC (TRDDIAG)** block. Then the corresponding bit can be set from **0** to **1** in the desired assignment parameter.

Example

Error **942 "In safety distance"** should no longer be categorized as **Out of specification (S)** but rather as **Function check (C)**.

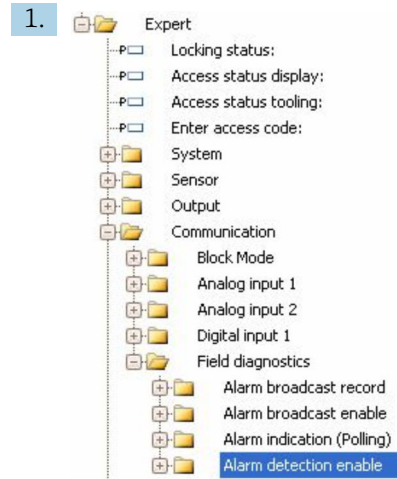


Use the FieldCare navigation window to navigate to the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.



By default, all the **Configurable Area Bits** are set to **not used**.



Select one of these bits (in the example: **Configurable Area Bit 1**) and select **In safety distance** from the associated picklist. Confirm the selection by pressing the Enter key.

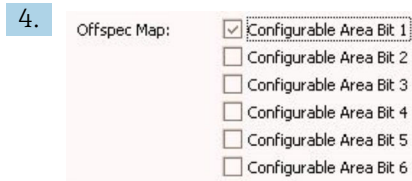


Go to the **Offspec Map** column and activate the check box of the respective bit (in the example: **Configurable Area Bit 1**). Press the Enter key to confirm your entry.

i A change of the error category of **In safety distance** does not affect an error that is already present. The new category is only assigned if this error occurs again after the change has been made.

12.10.4 Transmission of the event messages to the bus

Event priority

Event messages are only transmitted to the bus if their priority is between 2 and 15. Priority 1-events are displayed but are not transmitted over the bus. Events of priority 0 are ignored. By default, the priority is 0 for all events. The priority can be adjusted individually for each assignment parameter. This is done via the following four parameters in the Resource Block:

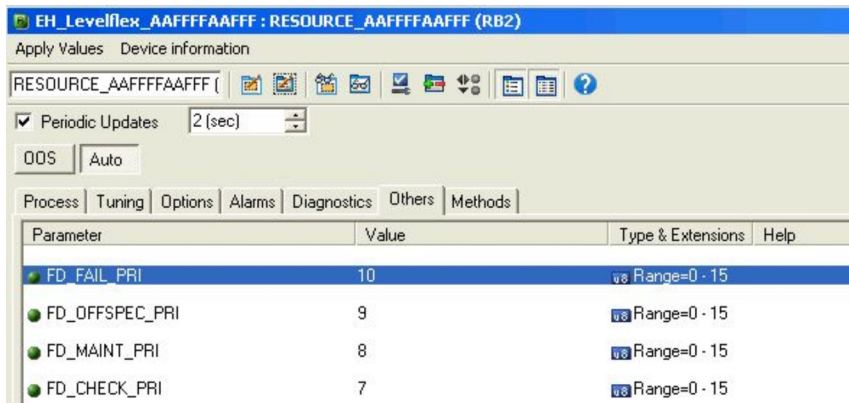

Suppressing individual events

It is possible to suppress certain events during transmission over the bus using a mask. While these events are displayed they are not transmitted over the bus. In FieldCare this mask can be found in **Expert → Communication → Field diagnostics → Alarm broadcast enable**. The mask is a negative selection mask, i.e. if a field is selected, the associated diagnostic information is **not** transmitted over the bus.

12.11 Protecting settings from unauthorized access





The settings can be protected from unauthorized access in the following ways:

- Locking via write protection switch (hardware locking)
- Locking via operating menu (software locking)
- Locking via block operation:
 - Block: **DISPLAY (TRDDISP)**; parameter: **Define access code**
 - Block: **EXPERT_CONFIG (TRDEXP)**; parameter: **Enter access code**

13 Diagnostics and troubleshooting






13.1 General troubleshooting

13.1.1 General errors

Error	Possible cause	Solution
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> ▪ Increase contrast by pressing  and  simultaneously. ▪ Decrease contrast by pressing  and  simultaneously.
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display.	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Replace display.
Duplication of parameters via display from one device to another not working. Only the "Save" and "Cancel" options are available.	Display with backup is not properly detected if a data backup was not carried out on the new device previously.	Connect display (with backup) and restart device.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parameter configuration error	Check and correct the parameter configuration.

13.1.2 Parameter configuration errors

Parameter configuration errors for level measurements

Error	Possible cause	Solution
Measured value is incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> ▪ Check the Empty calibration parameter (→  146) and correct if necessary. ▪ Check the Full calibration parameter (→  147) and correct if necessary. ▪ Check the linearization and correct if necessary (Linearization submenu (→  174)).
	If measured distance (Setup → Distance) does not match the real distance: An interference echo is present.	Carry out mapping (Confirm distance parameter (→  154)).
No change of measured value on filling/emptying	An interference echo is present.	Carry out mapping (Confirm distance parameter (→  154)).
	Buildup at the probe.	Clean the probe.
	Error in the echo tracking	Deactivate echo tracking (Expert → Sensor → Echo tracking → Evaluation mode = History off).

Error	Possible cause	Solution
Echo lost diagnostic message appears after the supply voltage is switched on.	Echo threshold too high.	Check the Medium group parameter (→ 145). If necessary, select a more detailed setting with the Medium property parameter (→ 162).
	Level echo suppressed.	Delete the map and record it again if necessary (Record map parameter (→ 156)).
Device displays a level when the tank is empty.	Incorrect probe length	Perform a probe length correction (Confirm probe length parameter (→ 188)).
	Interference echo	Carry out mapping over the entire probe length when the tank is empty (Confirm distance parameter (→ 154)).
Wrong slope of the level over the entire measuring range	Wrong tank type selected.	Select the correct Tank type parameter (→ 144).


Parameter configuration errors for interface measurements

Error	Possible cause	Solution
With the setting Tank level = Fully flooded , the interface level displayed jumps to higher values when the tank is emptied.	The total level is detected outside the upper blocking distance.	Increase the blocking distance (Blocking distance parameter (→ 165)).
		Set Tank level parameter (→ 151) = Partially filled .
With the setting Tank level = Partially filled , the total level displayed jumps to lower values when the tank is filled.	The total level goes to the upper blocking distance	Reduce the blocking distance (Blocking distance parameter (→ 165)).
Incorrect slope of the interface measured value	The dielectric constant (DC value) of the upper medium is incorrectly set.	Enter the correct dielectric constant (DC value) of the upper medium (DC value parameter (→ 152)).
The measured value for the interface and the total level are identical.	The echo threshold for the total level is too high due to an incorrect dielectric constant.	Enter the correct dielectric constant (DC value) of the upper medium (DC value parameter (→ 152)).
The total level jumps to the interface level in the case of thin interfaces.	The thickness of the upper medium is lower than 60 mm.	Measurement of the interface is only possible for interface heights greater than 60 mm.
Interface measured value jumps.	Emulsion layer present.	Emulsion layers impair the measurement. Contact Endress+Hauser.

13.2 Diagnostic information on local display

13.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring instrument are displayed as a diagnostic message in alternation with the measured value display.

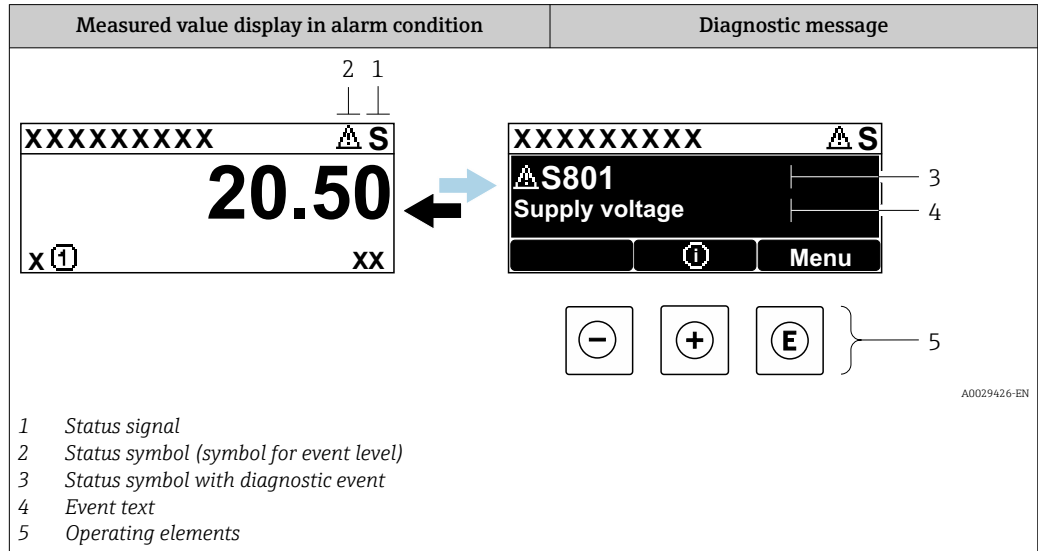

Status signals


F <small>A0032902</small>	"Failure (F)" option A device error has occurred. The measured value is no longer valid.
C <small>A0032903</small>	"Function check (C)" option The device is in the service mode (e.g. during a simulation).
S <small>A0032904</small>	"Out of specification (S)" option The device is operated: <ul style="list-style-type: none"> ▪ Outside its technical specifications (e.g. during startup or cleaning) ▪ Outside the configuration performed by the user (e.g. level outside the configured range)
M <small>A0032905</small>	"Maintenance required (M)" option Maintenance is required. The measured value is still valid.

Status symbols (symbol for event level)


⊗	"Alarm" status Measurement is interrupted. The signal outputs adopt the defined alarm state. A diagnostic message is generated.
⚠	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostic event and event text

The fault can be identified by means of the diagnostic event. The event text helps you by providing information about the fault. In addition, the associated status symbol is displayed in front of the diagnostic event.

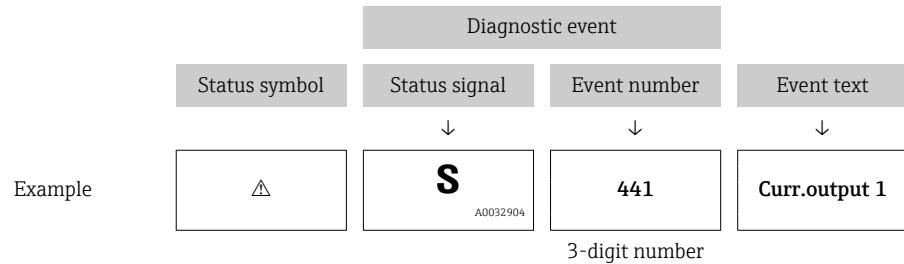


If several diagnostic events are pending at the same time, only the diagnostic message with the highest priority is displayed. Additional queued diagnostic messages can be shown in the **Diagnostic list** submenu.

-  Past diagnostic messages that are no longer pending are shown as follows:
 - On the local display:
in the **Event logbook** submenu
 - In FieldCare:
via the "Event List/HistoROM" function

Operating elements

Operating functions in menu, submenu	
+	Plus key Opens the message about the remedial measures.
E	Enter key Opens the operating menu.

13.2.2 Calling up remedial measures

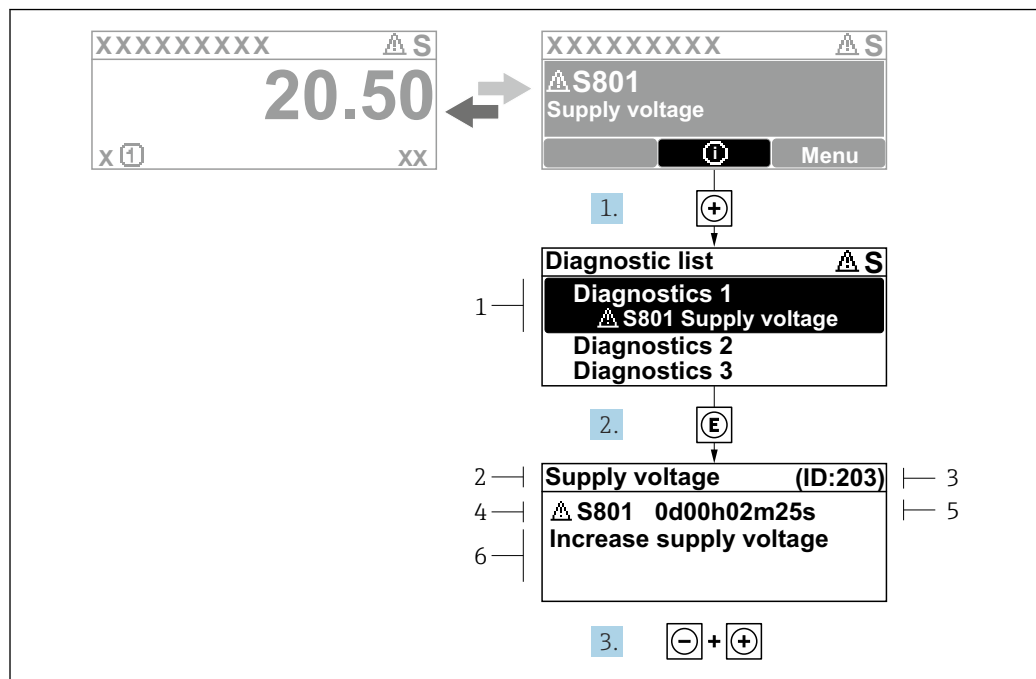

34 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time when error occurred
- 6 Remedial measures

The user is in the diagnostic message.

1. Press \oplus ($\text{\textcircled{+}}$ symbol).
 - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with \oplus or \ominus and press $\text{\textcircled{+}}$.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press $\ominus + \oplus$ simultaneously.
 - ↳ The message about the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** or in **Previous diagnostics**.

1. Press $\text{\textcircled{+}}$.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press $\ominus + \oplus$ simultaneously.
 - ↳ The message about the remedial measures closes.


13.3 Diagnostic event in the operating tool

If a diagnostic event has occurred in the device, the status signal appears in the top left status area of the operating tool together with the corresponding symbol for the event level according to NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)


A: Via the operating menu

1. Navigate to the **Diagnostics** menu.
 - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display area, hover the cursor over the **Actual diagnostics** parameter.

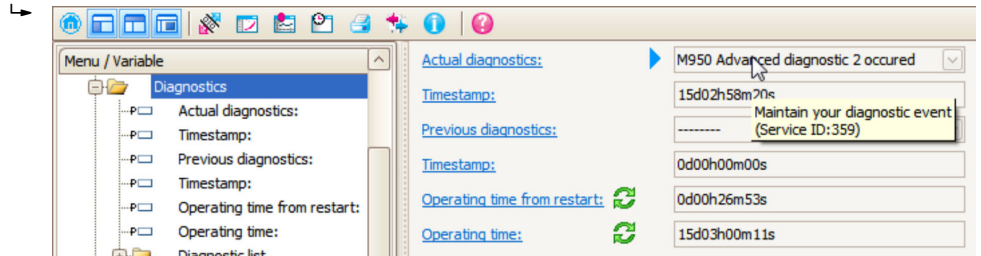


A tool tip with remedy information for the diagnostic event appears.

B: Via the "Create Documentation" function

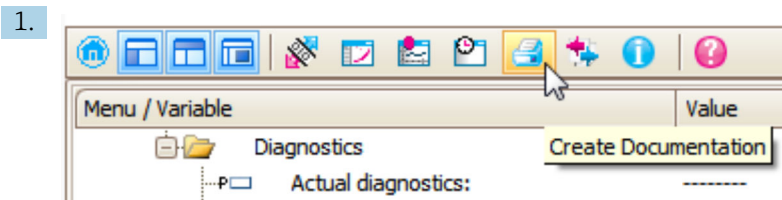


Select the "Create documentation" function.

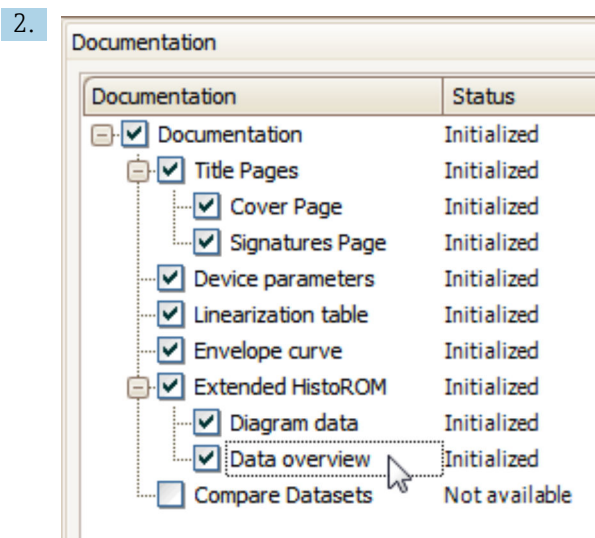


Make sure that "Data overview" is marked.

3. Click "Save as..." and save a PDF of the report.
 - ↳ The report contains the diagnostic messages including remedial measures.

C: Via the "Event list/Extended HistoROM" function

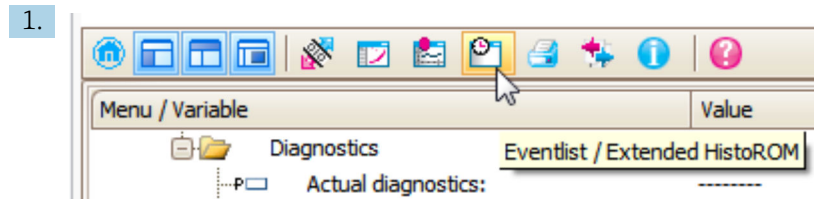

Select the ("Event list/Extended HistoROM") function.

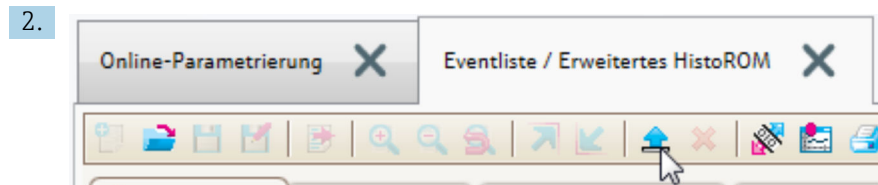

Select the "Load event list" function.

↳ The event list including remedial measures is displayed in the "Data overview" window.

13.4 Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)

- The **Actual diagnostics** parameter displays the message with the highest priority. Every message is also output as per the FOUNDATION Fieldbus Specification by means of the **XD_ERROR** and **BLOCK_ERROR** parameters.
- A list of diagnostic messages is displayed in the **Diagnostics 1** to **Diagnostics 5** parameters. If more than 5 messages are currently active, only those with the highest priority are displayed.
- You can view a list of alarms which are no longer active (event log) via the **Previous diagnostics** parameter.

13.5 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

Calling up and closing the remedial measures

1. Press \square .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press $\square + \oplus$ simultaneously.
 - ↳ The message about the remedial measures closes.

13.6 Event logbook

13.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list**

(This submenu only exists if operating via the local display. In the case of operation via FieldCare, the event list can be displayed with the "Event list/HistoROM" functionality of FieldCare.

Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.

The event history includes entries for:

- Diagnostic events
- Information events

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostic event
 - ☹: Occurrence of the event
 - ☺: End of the event
- Information event
 - ☹: Occurrence of the event

Calling up and closing the remedial measures

1. Press .

↳ The message for the remedial measures for the selected diagnostic event opens.

2. Press  +  simultaneously.

↳ The message about the remedial measures closes.

13.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

13.6.3 Overview of information events


Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature

Info number	Info name
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

13.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMP51, FMP52, FMP54, FOUNDATION Fieldbus)		
			Operating Instructions	Description of Device Parameters	Technical Information
04.2012	01.00.zz	Original software	BA01052F/00/EN/01.12	GP01015F/00/EN/01.12	TI01001F/00/EN/15.12
05.2015	01.01.zz	<ul style="list-style-type: none"> ▪ Support of SD03 ▪ Additional languages ▪ HistoROM functionality enhanced ▪ "Advanced Diagnostics" function block integrated ▪ Improvements and bugfixes 	BA01052F/00/EN/03.15 BA01052F/00/EN/04.16 ¹⁾	GP01015F/00/EN/02.15	TI01001F/00/EN/19.15 TI01001F/00/EN/22.16 ¹⁾

1) Contains information on the Heartbeat wizards available in the current DTM version for DeviceCare and. FieldCare

 The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

14 Maintenance

No special maintenance work is required.

14.1 Exterior cleaning

When cleaning the exterior, always use cleaning agents that do not corrode the surface of the housing and the seals.

14.2 General cleaning instructions

Dirt or buildup may form on the probe depending on the application. A thin, even layer has little impact on the measurement. Thick layers can dampen the signal and reduce the measuring range. Very uneven deposit formation or caking (e.g. due to crystallization) can result in incorrect measurements. In such cases, use a non-contact measuring principle, or regularly inspect the probe for contamination.

Cleaning with sodium hydroxide solution (e.g. in CIP procedures): if the coupling is wetted, larger measurement errors can occur than under reference operating conditions. Wetting can cause temporary incorrect measurements.

15 Repair

15.1 General information

15.1.1 Repair concept

Under the Endress+Hauser repair concept, devices have a modular design and repairs can be carried out by Endress+Hauser Service or by properly trained customers.

Spare parts are grouped into logical kits with the associated replacement instructions.

For more information on service and spare parts, please contact Endress+Hauser Service.

15.1.2 Repairs to Ex-approved devices

⚠ WARNING

Incorrect repair can compromise electrical safety!

Explosion hazard!

- ▶ Repairs to Ex-approved devices must be carried out by Endress+Hauser Service or by specialist personnel according to national regulations.
- ▶ Relevant standards and national regulations on hazardous areas, safety instructions and certificates must be observed.
- ▶ Use only original Endress+Hauser spare parts.
- ▶ Please note the device designation on the nameplate. Only identical parts may be used as replacements.
- ▶ Carry out repairs according to the instructions.
- ▶ Only the Endress+Hauser service team is permitted to modify a certified device and convert it to another certified version.

15.1.3 Replacing electronics modules

When electronics modules have been replaced the device does not need to be recalibrated as the parameters are saved in the HistoROM inside the housing. It may be necessary when replacing the main electronics to record a new interference echo suppression.

15.1.4 Replacing a device


Once a complete device has been replaced, the parameters can be transferred back into the device using one of the following methods:

- Using the display module
Prerequisite: The configuration of the old device was saved previously to the display module.
- Via FieldCare
Prerequisite: The configuration of the old device was saved previously to the computer using FieldCare.

You can continue measuring without performing a new calibration. Only interference echo suppression may need to be carried out once again.

15.2 Spare parts

- Some replaceable measuring instrument components are identified by means of a spare part nameplate. This contains information about the spare part.
- In the connection compartment cover of the device there is a spare part nameplate which contains the following information:
 - A list of the most important spare parts for the measuring instrument, including their ordering information.
 - The URL to the *W@M Device Viewer* (www.endress.com/deviceviewer):
All the spare parts for the measuring instrument, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

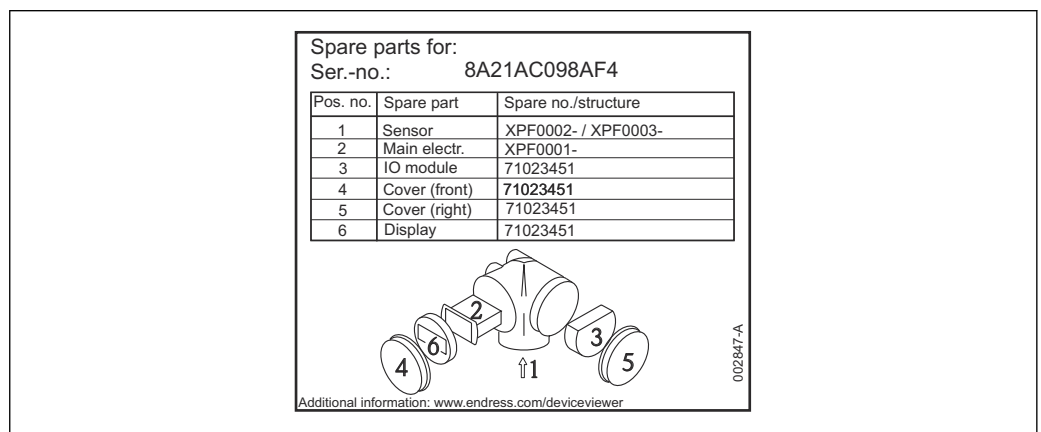

35 Example for spare part nameplate in the connection compartment cover


- i** Measuring instrument serial number:
 - Located on the device and spare part nameplate.
 - Can be read out via the "Serial number" parameter in the "Device information" submenu.

15.3 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the web page for information:
<https://www.endress.com/support/return-material>
↳ Select the region.
2. If returning the device, pack the device in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

15.4 Disposal

-  If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

16 Accessories

The accessories currently available for the product can be selected at www.endress.com:


1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Spare parts & Accessories**.

16.1 Device-specific accessories

16.1.1 Weather protection cover


The weather protection cover can be ordered together with the device via the "Accessory enclosed" product structure.

It is used to protect against direct sunlight, precipitation and ice.

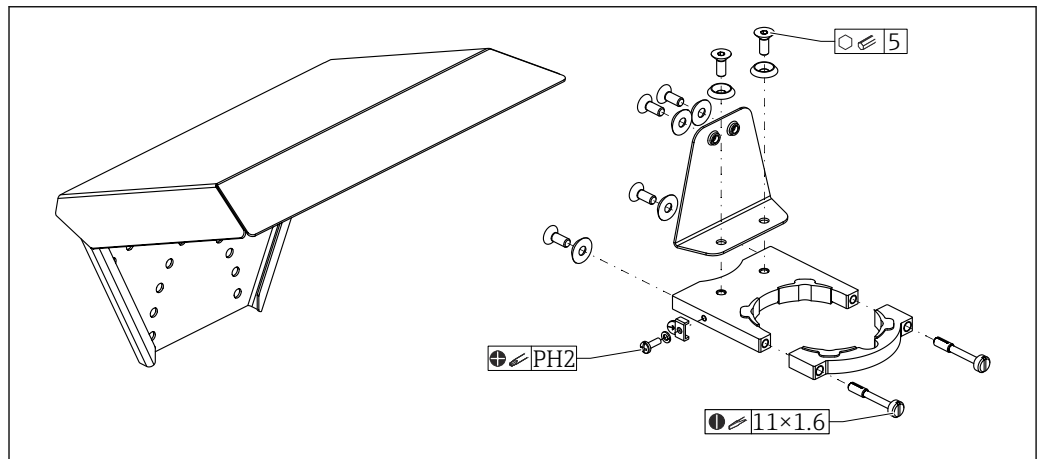


A0051672

36 Overview

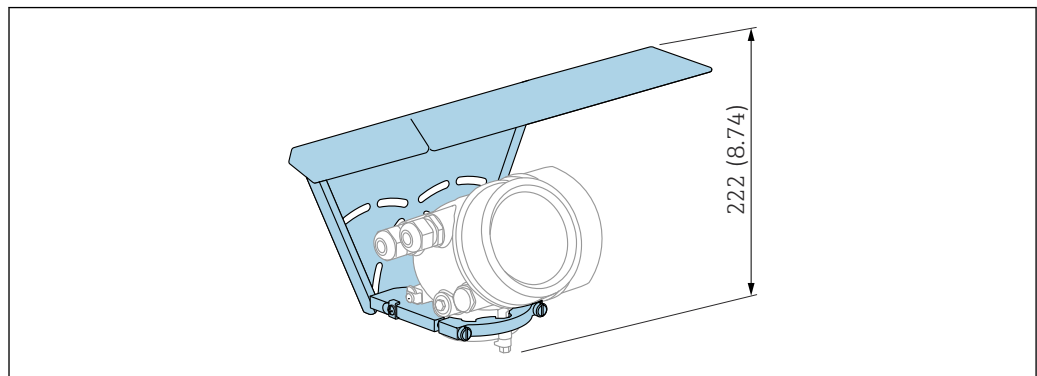

A0015466

37 Height. Unit of measurement mm (in)

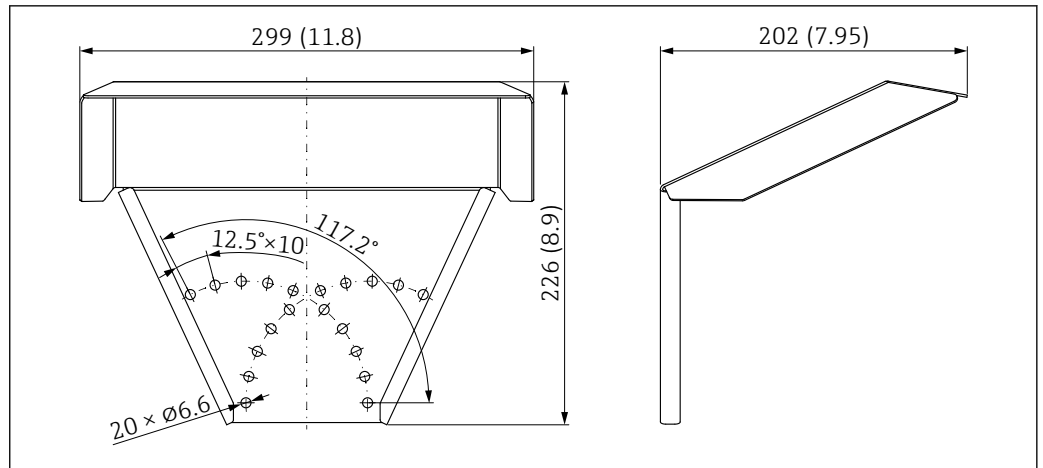

A0015472

38 Dimensions. Unit of measurement mm (in)

Material


- Protection cap; 316L (1.4404)
- Bracket; 316L (1.4404)
- Angle bracket; 316L (1.4404)
- Clamping screw; 316L (1.4404) + carbon fiber
- Molded rubber part (4x); EPDM
- Screws; A4
- Disks; A4
- Ground terminal; A4, 316L (1.4404)

Order number for accessories:

71162242

16.1.2 Mounting bracket for electronics housing


With "remote sensor" device versions (feature O60 in the product structure), the mounting bracket is included in the scope of delivery. It can be ordered as a separate accessory .

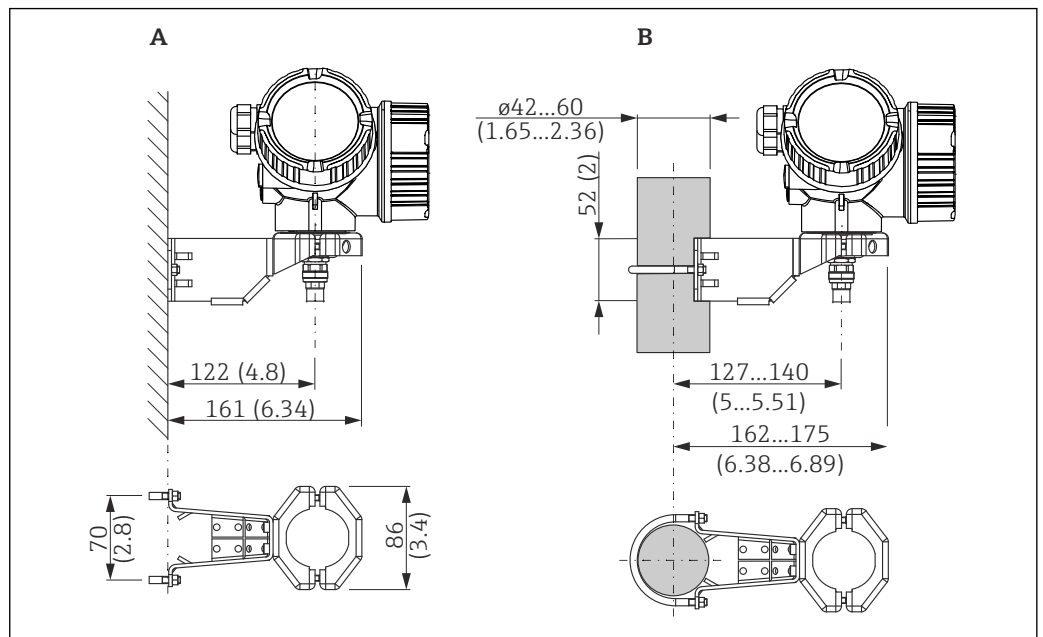

A0014793

39 Mounting bracket for electronics housing; unit: mm (in)

- A Wall mounting
- B Post mounting

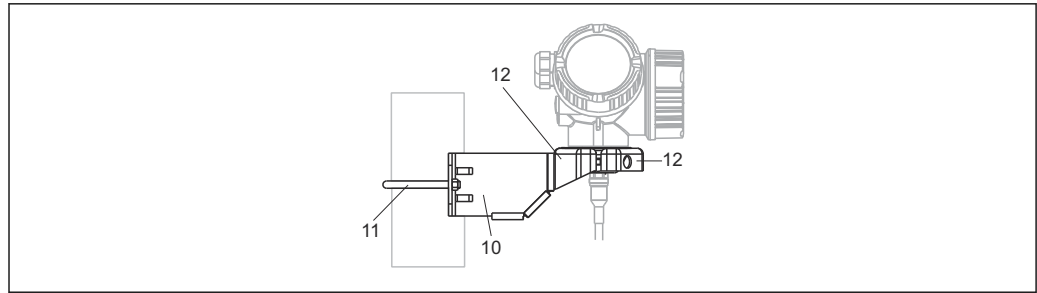

A0015143

40 Material; mounting bracket

10 Bracket, 316L (1.4404)

11 Round bracket, 316L (1.4404); screws/nuts, A4-70; distance sleeves, 316L (1.4404)


12 Half-shells, 316 L (1.4404)

Order number for accessories:

71102216

16.1.3 Rod extension (centering device) HMP40

The rod extension (centering device) HMP40 is ordered via the Product Configurator.

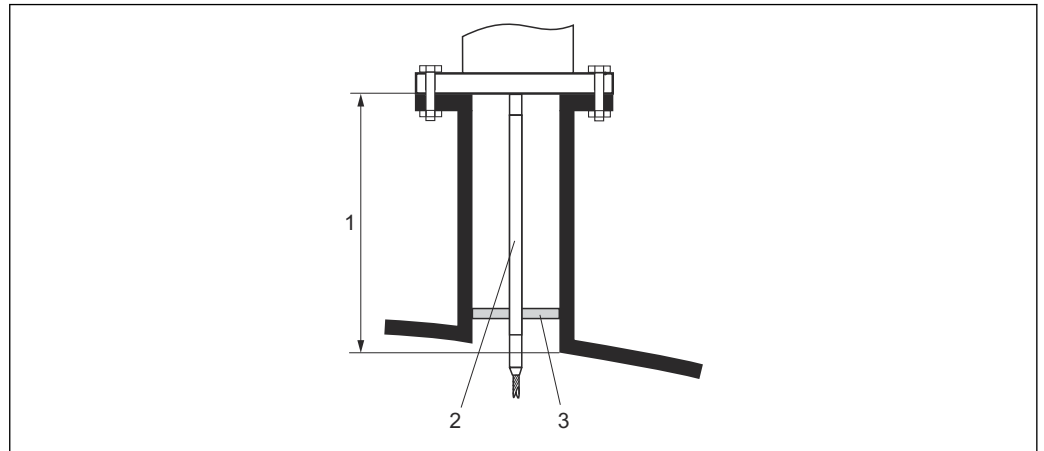

A0013597

- 1 Nozzle height
- 2 Extension rod
- 3 Centering disk

Permitted temperature at lower edge of nozzle:

- Without centering disk, no restriction
- With centering disk, -40 to $+150$ °C (-40 to $+302$ °F)



For details, see SD01002F.


16.1.4 Mounting kit, insulated

To secure rope probes so that they are reliably insulated.

Maximum process temperature: 150 °C (300 °F)

Mounting set, insulated, can be used for:

- FMP51
- FMP54

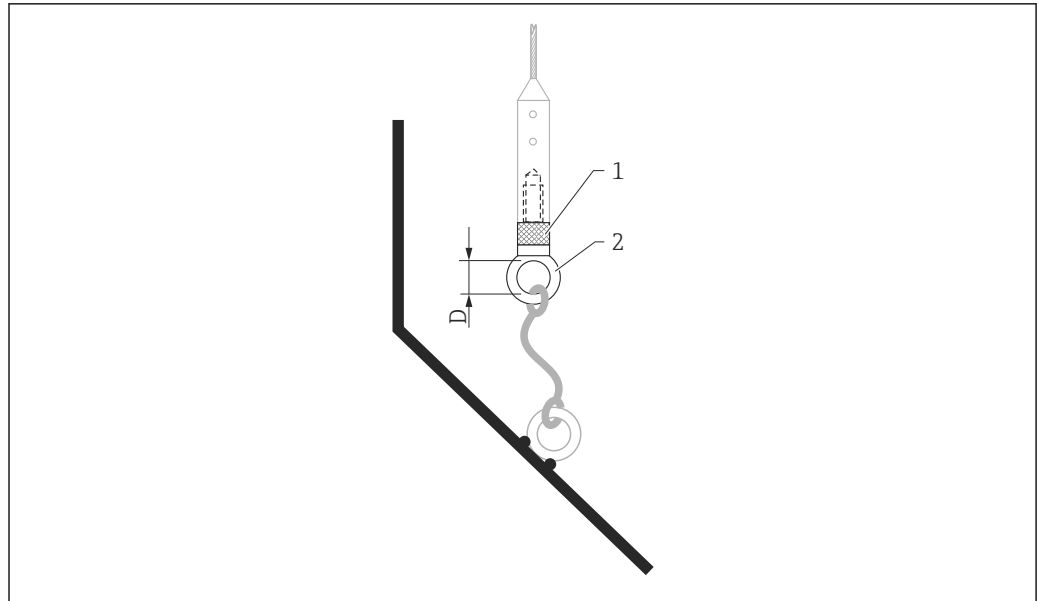

A0013586

41 Scope of delivery of mounting kit:

- 1 Insulation sleeve
- 2 Ring bolt

For rope probes 4 mm ($\frac{1}{8}$ in) or 6 mm ($\frac{1}{4}$ in) with PA > steel:
Diameter D = 20 mm (0.8 in)

Order number for accessories:

52014249

For rope probes 6 mm ($\frac{1}{4}$ in) or 8 mm ($\frac{1}{2}$ in) with PA > steel:
Diameter D = 25 mm (1 in)

Order number for accessories:

52014250

Due to the risk of electrostatic charge, the insulation sleeve is not suitable for use in hazardous areas! In this case, the probe must be secured so that it is reliably grounded.


i The mounting kit can also be ordered directly with the device (Levelflex product structure, feature 620 "Accessory enclosed", version PG "mounting kit, insulated, rope").

16.1.5 Centering star

Centering star PEEK, \varnothing 48 to 95 mm (1.89 to 3.74 in)

Suitable for:

- FMP51
- FMP54

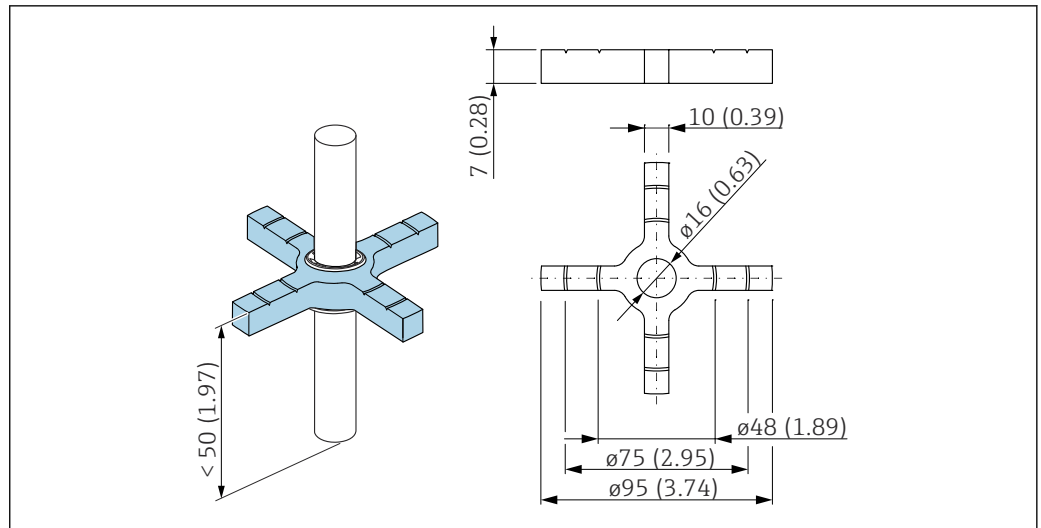

42 Dimensions; centering star PEEK ϕ 48 to 95 mm (1.89 to 3.74 in)

The centering star is suitable for probes with a rod diameter of 16 mm (0.6 in) and can be used in pipes from DN50 to DN100. The markings make it easier to cut to size, ensuring that the centering star can be adjusted to the pipe diameter.

For details, see SD02316F.

- Material of centering star: PEEK
- Material of retaining rings: PH15-7Mo (UNS S15700)
- Permitted process temperature range: -60 to $+250$ °C (-76 to $+482$ °F)

Order number for accessories:

71069064

- i** If the centering star is used in a bypass, it must be positioned below the lower bypass outlet. This must be taken into account when choosing the probe length. In general, the centering star should not be mounted more than 50 mm (1.97") above the probe tip. It is advised not to use the PEEK centering star in the measuring range of the rod probe.
- i** The PEEK centering star can also be ordered directly with the device (Levelflex product structure, feature 610 "Accessory mounted", option OD). In this case, it is not secured to the rod using the retaining rings, but instead is secured using a hexagonal-headed bolt (A4-70) and a Nord Lock washer (1.4547) at the tip of the probe rod.


Centering star PFA

Suitable for:

- FMP51
- FMP52
- FMP54


Available versions:

- ϕ 16.4 mm (0.65 in)
- ϕ 37 mm (1.46 in)

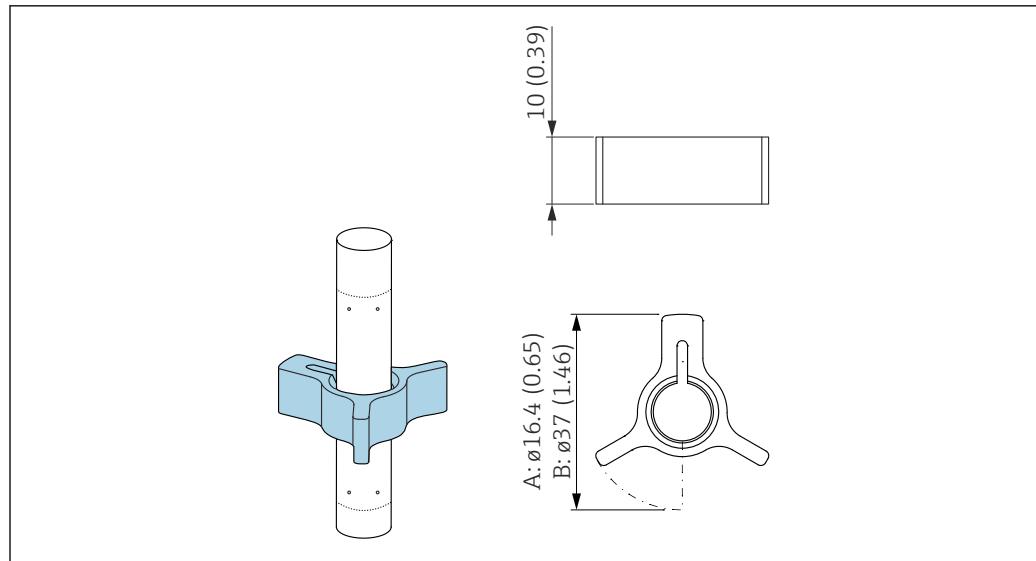

- A For probe 8 mm (0.3 in)
 B For probes 12 mm (0.47 in) and 16 mm (0.63 in)


The centering star is suitable for probes with a rod diameter of 8 mm (0.3 in), 12 mm (0.47 in) and 16 mm (0.63 in) (including coated rod probes) and can be used in pipes from DN40 to DN50.

 For details, see BA00378F.

- Material: PFA
- Permitted process temperature range: -200 to +250 °C (-328 to +482 °F)

Order number for accessories:


- Probe 8 mm (0.3 in)
71162453
- Probe 12 mm (0.47 in)
71157270
- Probe 16 mm (0.63 in)
71069065

 The PFA centering star can also be ordered directly with the device (Levelflex product structure, feature 610 "Accessory mounted", option OE).

Centering star PEEK, ø 48 to 95 mm (1.9 to 3.7 in)


Suitable for:

- FMP51
- FMP52
- FMP54

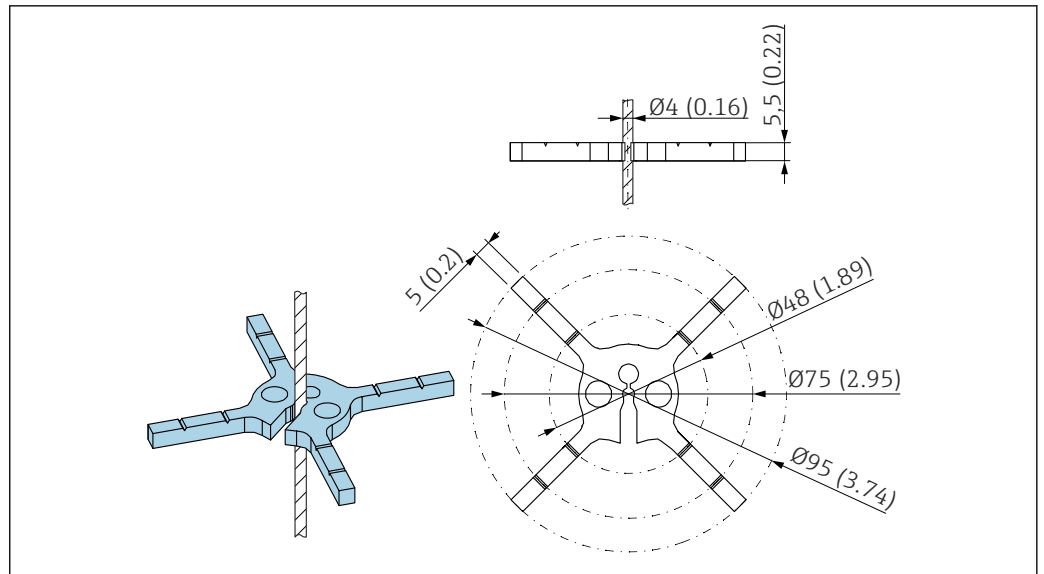

A0035182

The centering star is suitable for probes with a rope diameter of 4 mm ($\frac{1}{8}$ in) (including coated rope probes).

 For details, see SD01961F.

- Material: PEEK
- Permitted process temperature range: -60 to $+250$ °C (-76 to $+482$ °F)

Order number for accessories:


- 71373490 (1x)
- 71373492 (5x)

16.1.6 Centering weight

Centering weight 316 L for DN50/2" pipes

Suitable for:

- FMP51
- FMP54

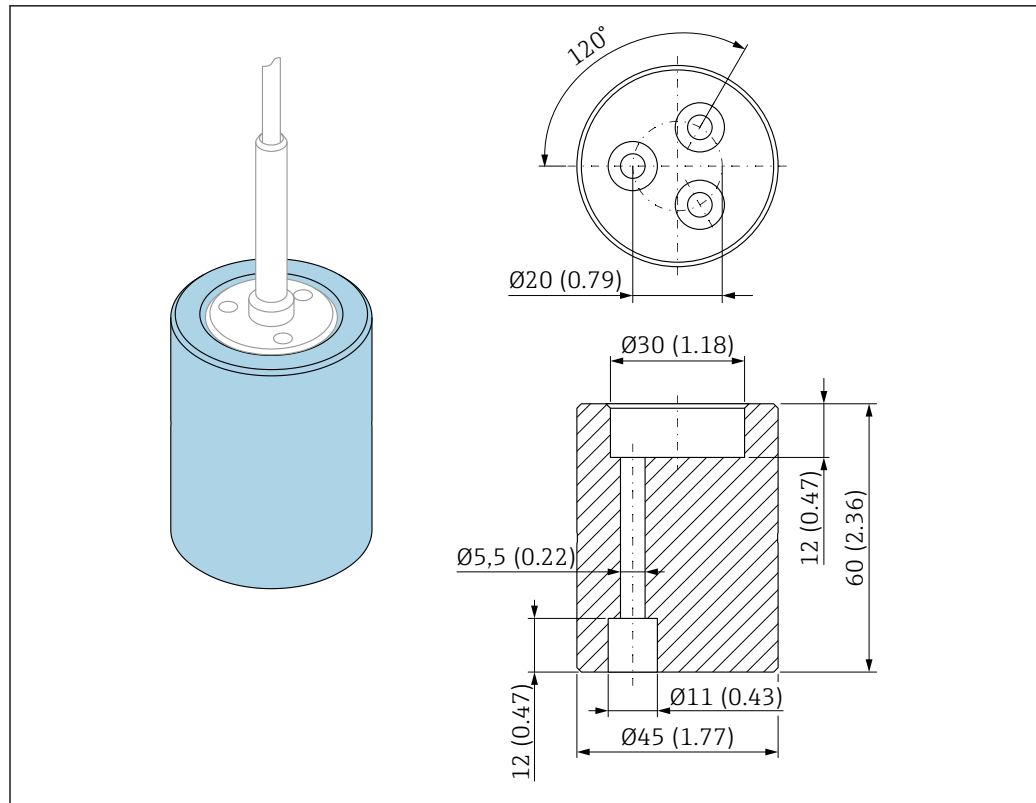

A0038923

The centering weight is suitable for probes with a rope diameter of 4 mm ($\frac{1}{8}$ in) and can be used in DN50/2" pipes.

The centering weight can be ordered directly with the device (product structure Levelflex) or as a probe without a process connection (product structure XPF0005-) using feature 610 "Accessory mounted", version **OK** (for pipe DN50/2").


Centering weight 316 L for pipes \geq DN80/3"

Suitable for:

- FMP51
- FMP54

Available versions:

- \varnothing 75 mm (2.95 in)
- \varnothing 95 mm (3.7 in)

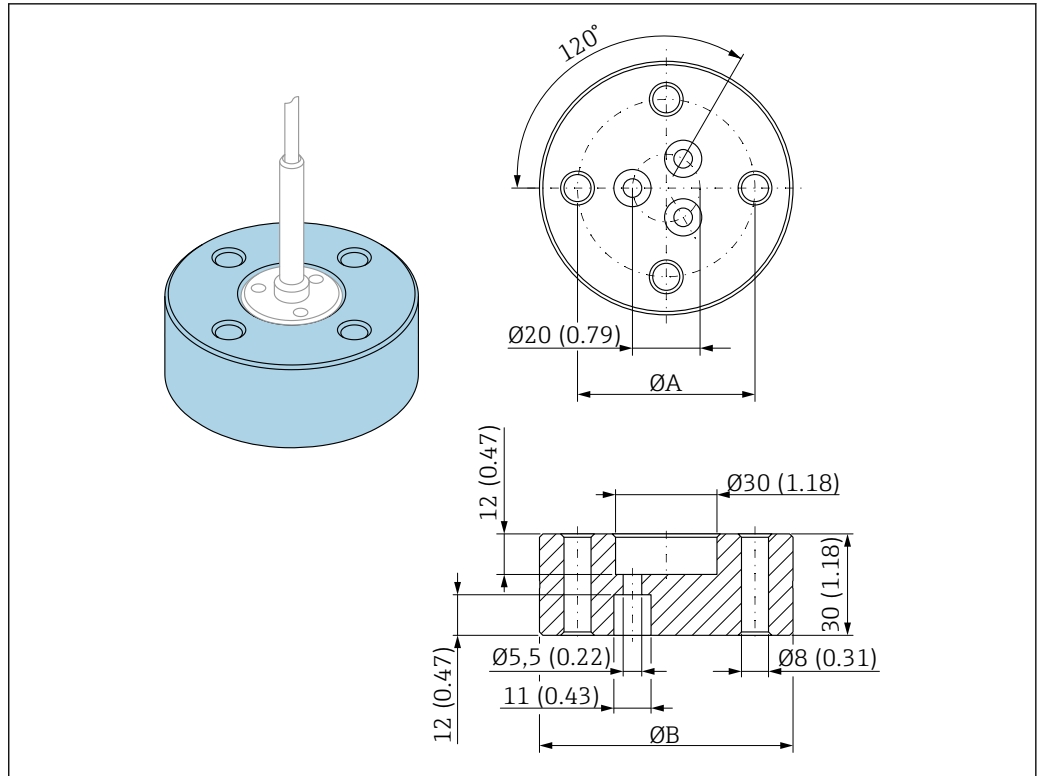


A0038924

- Ø A = 52.5 mm (2.07 in) for DN80/3" pipe
- = 62.5 mm (2.47 in) for DN100/4" pipe
- Ø B = 75 mm (2.95 in) for DN80/3" pipe
- = 95 mm (3.7 in) for DN100/4" pipe

The centering weight is suitable for probes with a rope diameter of 4 mm (1/6 in) and can be used in DN80/3" or DN100/4" pipes.

The centering weight can be ordered directly with the device (product structure Levelflex) or as a probe without a process connection (product structure XPF0005-) using feature 610 "Accessory mounted", version **OL** (for pipe DN80/3") or **OM** (for pipe DN100/4").

16.1.7 Remote display FHX50

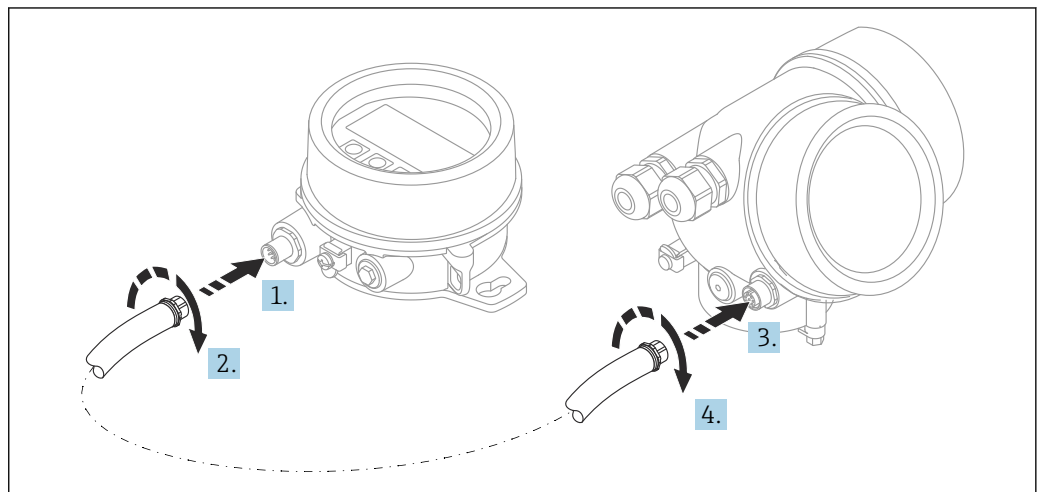


A0019128

Technical data

- Material:
 - Plastic PBT
 - 316L/1.4404
 - Aluminum
 - Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x
 - Suitable for display modules:
 - SDO2 (push buttons)
 - SDO3 (touch control)
 - Connecting cable:
 - Cable supplied with device up to 30 m (98 ft)
 - Standard cable provided by customer onsite up to 60 m (196 ft)
 - Ambient temperature: -40 to 80 °C (-40 to 176 °F)
 - Ambient temperature, optionally available for order. -50 to 80 °C (-58 to 176 °F)
- NOTICE** If the temperature is permanently below -40 °C (-40 °F), higher failure rates can be expected.

Ordering information


- If the remote display is to be used, the device version "Prepared for display FHX50" must be ordered.
For FHX50, the option "Prepared for display FHX50" must be selected under "Measuring device version".
- If a measuring instrument has not been ordered with the version "Prepared for display FHX50" and is to be retrofitted with an FHX50, the version "Not prepared for display FHX50" must be ordered for the FHX50 under "Measuring device version". In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used.

 Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option "Prepared for FHX50" is listed under *Basic specifications*, "Display, operation" in the Safety instructions (XA) for the device.

Also refer to the Safety Instructions (XA) of the FHX50.

Retrofitting is not possible on transmitters with:

- An approval for use in areas with flammable dust (dust ignition-proof approval)
- Type of protection Ex nA


 For details, see "Special Documentation" document SD01007F.

16.1.8 Overvoltage protection

The surge arrester for loop-powered devices can be ordered together with the device via the "Accessory mounted" section of the product order structure.

The surge arrester can be used for loop-powered devices.

- 1-channel devices - OVP10
- 2-channel devices - OVP20

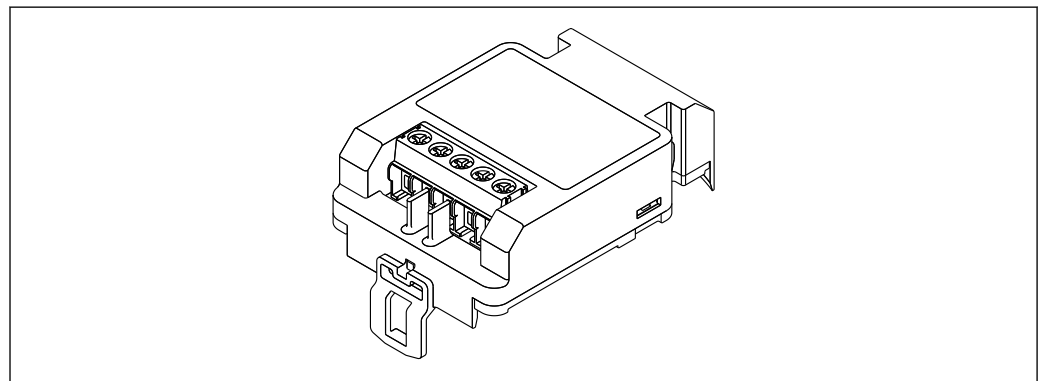

A0021734

Technical data

- Resistance per channel: $2 \times 0.5 \Omega_{\max}$
- Threshold DC voltage: 400 to 700 V
- Threshold surge voltage: < 800 V
- Capacitance at 1 MHz: < 1.5 pF
- Nominal leakage current (8/20 μ s): 10 kA
- Suitable for conductor cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG)

If retrofitting:


- Order number for 1-channel devices (OVP10): 71128617
- Order number for 2-channel devices (OVP20): 71128619
- The use of the OVP module may be restricted depending on the transmitter approval. A device may only be retrofitted with the OVP module if the option *NA* (overvoltage protection) is listed under *Optional specifications* in the Safety Instructions (XA) associated with the device.
- In order to keep the necessary safety distances when using the surge arrester module, the housing cover also needs to be replaced when the device is retrofitted. Depending on the housing type, the suitable cover can be ordered using the following order number:
 - Housing GT18: 71185516
 - Housing GT19: 71185518
 - Housing GT20: 71185517



For details, see the "Special Documentation" SD01090F

16.1.9 Bluetooth module BT10 for HART devices

The Bluetooth module BT10 can be ordered together with the device via the "Accessory mounted" section of the product order structure.

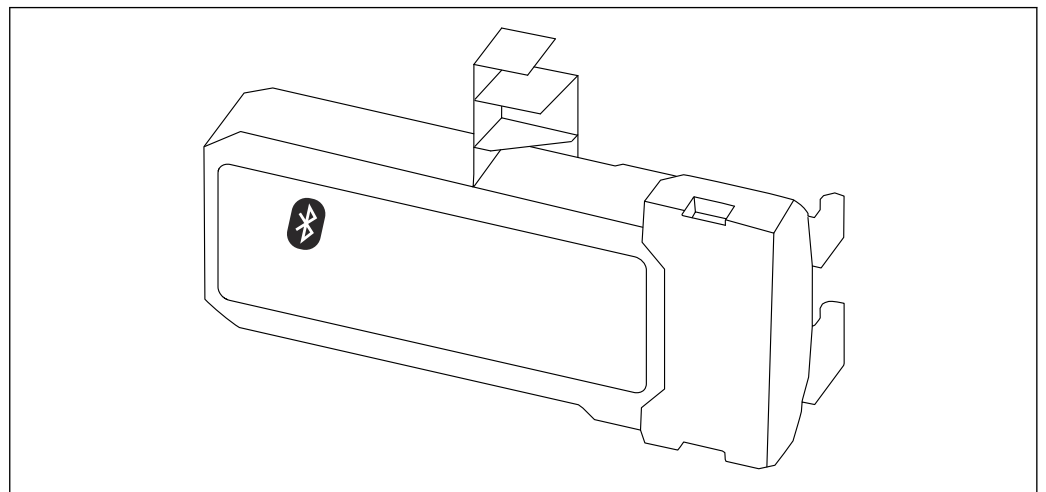

A0036493

Technical data

- Quick and easy setup with the SmartBlue app
- No additional tools or adapters needed
- Signal curve via SmartBlue (app)
- Encrypted single point-to-point data transmission (tested by Fraunhofer Institute) and password-protected communication via Bluetooth® wireless technology
- Range under reference conditions:
 - > 10 m (33 ft)
- When the Bluetooth module is used, the minimum supply voltage of the device increases by up to 3 V.

If retrofitting:

- Order number: 71377355
- The use of the Bluetooth module may be restricted depending on the transmitter approval. A device may only be retrofitted with the Bluetooth module if the option *NF* (Bluetooth module) is listed under *Optional specifications* in the Safety Instructions (XA) associated with the device.



For details, see the "Special Documentation" SD02252F

16.2 Communication-specific accessories

Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop

Order number: 51516983



For details, see "Technical Information" TI00405C

Field Xpert SFX350

Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-Ex area**.



For details, see Operating Instructions BA01202S

Field Xpert SFX370

Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-Ex area** and the **Ex area**.



For details, see Operating Instructions BA01202S

16.3 Service-specific accessories

DeviceCare SFE100

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices



Technical Information TI01134S

FieldCare SFE500

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.



Technical Information TI00028S

16.4 System components

16.4.1 Memograph M RSG45

The Advanced Data Manager is a flexible and powerful system for organizing process values.

The Memograph M is used for electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals as well as calculated values.







Technical Information TI01180R and Operating Instructions BA01338R

17 Operating menu

17.1 Overview of the operating menu (display module)

























Navigation  Operating menu

Language	
Setup	→  158
Operating mode	
Distance unit	
Tank type	
Tube diameter	
Tank level	
Distance to upper connection	
DC value	
Medium group	
Empty calibration	
Full calibration	
Level	
Interface	
Distance	
Interface distance	
Signal quality	
► Mapping	→  157
Confirm distance	→  157
Mapping end point	→  157



















Record map	→ 157
Distance	→ 157
► Analog inputs	
► Analog input 1 to 5	→ 158
Block tag	→ 158
Channel	→ 158
Process Value Filter Time	→ 159
► Advanced setup	→ 160
Locking status	→ 160
Access status display	→ 160
Enter access code	→ 161
► Level	→ 162
Medium type	→ 162
Medium property	→ 162
Process property	→ 163
Advanced process conditions	→ 164
Level unit	→ 165
Blocking distance	→ 165
Level correction	→ 166
► Interface	→ 167
Process property	→ 167
DC value lower medium	→ 167
Level unit	→ 168
Blocking distance	→ 168

Level correction	→ 169
▶ Automatic DC calculation	→ 172
Manual thickness upper layer	→ 172
DC value	→ 172
Use calculated DC value	→ 172
▶ Linearization	→ 174
Linearization type	→ 176
Unit after linearization	→ 177
Free text	→ 178
Maximum value	→ 179
Diameter	→ 179
Intermediate height	→ 180
Table mode	→ 180
▶ Edit table	
Level	
Customer value	
Activate table	→ 182
▶ Safety settings	→ 184
Output echo lost	→ 184
Value echo lost	→ 184
Ramp at echo lost	→ 185
Blocking distance	→ 165

▶ Probe settings	→ 187
Probe grounded	→ 187
▶ Probe length correction	→ 189
Confirm probe length	→ 189
Present probe length	→ 187
▶ Switch output	→ 191
Switch output function	→ 191
Assign status	→ 191
Assign limit	→ 192
Assign diagnostic behavior	→ 192
Switch-on value	→ 193
Switch-on delay	→ 194
Switch-off value	→ 194
Switch-off delay	→ 195
Failure mode	→ 195
Switch status	→ 195
Invert output signal	→ 195
▶ Display	→ 197
Language	→ 197
Format display	→ 197
Value 1 to 4 display	→ 199
Decimal places 1 to 4	→ 199
Display interval	→ 200
Display damping	→ 200
Header	→ 200

Header text	→  201
Separator	→  201
Number format	→  201
Decimal places menu	→  202
Backlight	→  202
Contrast display	→  202
► Configuration backup display	→  204
Operating time	→  204
Last backup	→  204
Configuration management	→  204
Comparison result	→  205
► Administration	→  207
► Define access code	→  209
Define access code	→  209
Confirm access code	→  209
Device reset	→  207
 Diagnostics	→  210
Actual diagnostics	→  210
Previous diagnostics	→  210
Operating time from restart	→  211
Operating time	→  204
► Diagnostic list	→  212
Diagnostics 1 to 5	→  212

▶ Event logbook	→ 213
Filter options	
▶ Event list	→ 213
▶ Device information	→ 214
Device tag	→ 214
Serial number	→ 214
Firmware version	→ 214
Device name	→ 215
Order code	→ 215
Extended order code 1 to 3	→ 215
▶ Measured values	→ 216
Distance	→ 149
Level linearized	→ 179
Interface distance	→ 154
Interface linearized	→ 179
Thickness upper layer	→ 218
Terminal voltage 1	→ 218
▶ Analog inputs	
▶ Analog input 1 to 5	→ 218
Block tag	→ 158
Channel	→ 158
Status	→ 219
Value	→ 220
Units index	→ 220

▶ Data logging	→  221
Assign channel 1 to 4	→  221
Logging interval	→  222
Clear logging data	→  222
▶ Display channel 1 to 4	→  223
▶ Simulation	→  226
Assign measurement variable	→  227
Process variable value	→  227
Switch output simulation	→  227
Switch status	→  228
Simulation device alarm	→  228
▶ Device check	→  229
Start device check	→  229
Result device check	→  229
Last check time	→  229
Level signal	→  230
Launch signal	→  230
Interface signal	→  230

17.2 Overview of the operating menu (operating tool)

Navigation



Operating menu

⚙ Setup

→ 158

Operating mode

Distance unit

Tank type

Tube diameter

Medium group

Empty calibration

Full calibration

Level

Distance

Signal quality

Tank level

Distance to upper connection

DC value

Interface

Interface distance

Confirm distance

Present mapping

Mapping end point

Record map

▶ Analog inputs

▶ Analog input 1 to 5

























→ 158


























Block tag

























→ 158

Channel	→ 158
Process Value Filter Time	→ 159
► Advanced setup	→ 160
Locking status	→ 160
Access status tooling	→ 160
Enter access code	→ 161
► Level	→ 162
Medium type	→ 162
Medium property	→ 162
Process property	→ 163
Advanced process conditions	→ 164
Level unit	→ 165
Blocking distance	→ 165
Level correction	→ 166
► Interface	→ 167
Process property	→ 167
DC value lower medium	→ 167
Level unit	→ 168
Blocking distance	→ 168
Level correction	→ 169
Manual thickness upper layer	→ 169
Measured thickness upper layer	→ 170
DC value	→ 170
Calculated DC value	→ 170
Use calculated DC value	→ 171

▶ Linearization	→ 174
Linearization type	→ 176
Unit after linearization	→ 177
Free text	→ 178
Level linearized	→ 179
Interface linearized	→ 179
Maximum value	→ 179
Diameter	→ 179
Intermediate height	→ 180
Table mode	→ 180
Table number	→ 181
Level	→ 182
Level	→ 182
Customer value	→ 182
Activate table	→ 182
▶ Safety settings	→ 184
Output echo lost	→ 184
Value echo lost	→ 184
Ramp at echo lost	→ 185
Blocking distance	→ 165
▶ Probe settings	→ 187
Probe grounded	→ 187
Present probe length	→ 187
Confirm probe length	→ 188





► Switch output	→  191
Switch output function	→  191
Assign status	→  191
Assign limit	→  192
Assign diagnostic behavior	→  192
Switch-on value	→  193
Switch-on delay	→  194
Switch-off value	→  194
Switch-off delay	→  195
Failure mode	→  195
Switch status	→  195
Invert output signal	→  195
► Display	→  197
Language	→  197
Format display	→  197
Value 1 to 4 display	→  199
Decimal places 1 to 4	→  199
Display interval	→  200
Display damping	→  200
Header	→  200
Header text	→  201
Separator	→  201
Number format	→  201
Decimal places menu	→  202

Backlight	→  202
Contrast display	→  202
► Configuration backup display	→  204
Operating time	→  204
Last backup	→  204
Configuration management	→  204
Backup state	→  205
Comparison result	→  205
► Administration	→  207
Define access code	
Device reset	→  207
 Diagnostics	→  210
Actual diagnostics	→  210
Timestamp	→  210
Previous diagnostics	→  210
Timestamp	→  211
Operating time from restart	→  211
Operating time	→  204
► Diagnostic list	→  212
Diagnostics 1 to 5	→  212
Timestamp 1 to 5	→  212
► Device information	→  214
Device tag	→  214
Serial number	→  214
Firmware version	→  214

Device name	→  215
Order code	→  215
Extended order code 1 to 3	→  215
▶ Measured values	→  216
Distance	→  149
Level linearized	→  179
Interface distance	→  154
Interface linearized	→  179
Thickness upper layer	→  218
Terminal voltage 1	→  218
▶ Analog inputs	
▶ Analog input 1 to 5	→  218
Block tag	→  158
Channel	→  158
Status	→  219
Value	→  220
Units index	→  220
▶ Data logging	→  221
Assign channel 1 to 4	→  221
Logging interval	→  222
Clear logging data	→  222
▶ Simulation	→  226
Assign measurement variable	→  227
Process variable value	→  227
Switch output simulation	→  227



Switch status	→ 228
Simulation device alarm	→ 228
▶ Device check	→ 229
Start device check	→ 229
Result device check	→ 229
Last check time	→ 229
Level signal	→ 230
Launch signal	→ 230
Interface signal	→ 230
▶ Heartbeat	→ 231

17.3 "Setup" menu



-   : Indicates how to navigate to the parameter using the display and operating module
-  : Indicates how to navigate to the parameter using operating tools (e.g. FieldCare)
-  : Indicates parameters that can be locked via the access code.

Navigation   Setup




Operating mode

Navigation	  Setup → Operating mode
Prerequisite	The device has the "interface measurement" application package (available for FMP51, FMP52, FMP54) ¹⁾ .
Description	Select operating mode.
Selection	<ul style="list-style-type: none"> ■ Level ■ Interface with capacitance * ■ Interface *
Factory setting	FMP51/FMP52/FMP54: Level

Distance unit

Navigation	  Setup → Distance unit						
Description	Length unit for distance calculation.						
Selection	<table border="0" style="width: 100%;"> <tr> <td style="text-align: left;"><i>SI units</i></td> <td style="text-align: left;"><i>US units</i></td> </tr> <tr> <td>■ mm</td> <td>■ ft</td> </tr> <tr> <td>■ m</td> <td>■ in</td> </tr> </table>	<i>SI units</i>	<i>US units</i>	■ mm	■ ft	■ m	■ in
<i>SI units</i>	<i>US units</i>						
■ mm	■ ft						
■ m	■ in						

Tank type

Navigation	  Setup → Tank type
Prerequisite	Medium type (→  162) = Liquid
Description	Select tank type.

1) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"
 * Visibility depends on order options or device settings

Selection	<ul style="list-style-type: none"> ■ Metallic ■ Bypass / pipe ■ Non metallic ■ Mounted outside ■ Coaxial
Factory setting	Depending on the probe
Additional information	<ul style="list-style-type: none"> ■ Depending on the probe some of the options mentioned above may not be available or there may be additional options. ■ For coax probes and probes with metallic center washer Tank type parameter corresponds to the type of probe and cannot be changed.


Tube diameter



Navigation	Setup → Tube diameter
Prerequisite	<ul style="list-style-type: none"> ■ Tank type (→ 144) = Bypass / pipe ■ The probe is coated.
Description	Specify diameter of bypass or stilling well.
User entry	0 to 9.999 m


Medium group


Navigation	Setup → Medium group
Prerequisite	<ul style="list-style-type: none"> ■ For FMP51/FMP52/FMP54/FMP55: Operating mode (→ 144) = Level ■ Medium type (→ 162) = Liquid
Description	Select medium group.
Selection	<ul style="list-style-type: none"> ■ Others ■ Water based (DC >= 4)
Additional information	This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the Medium property parameter (→ 162).

The **Medium group** parameter presets the **Medium property** parameter (→  162) as follows:



Medium group	Medium property (→  162)
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

 The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.

 The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Empty calibration

Navigation

  Setup → Empty calibr.

Description

Distance process connection to min. level.


User entry

Depending on the probe


Factory setting


Depending on the probe

Additional information

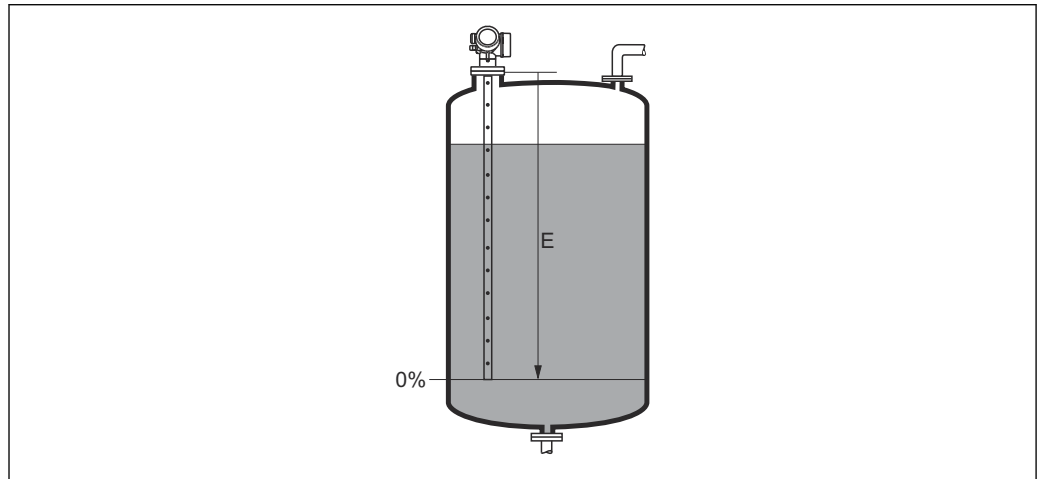

A0013178

 43 Empty calibration (E) for level measurements in liquids

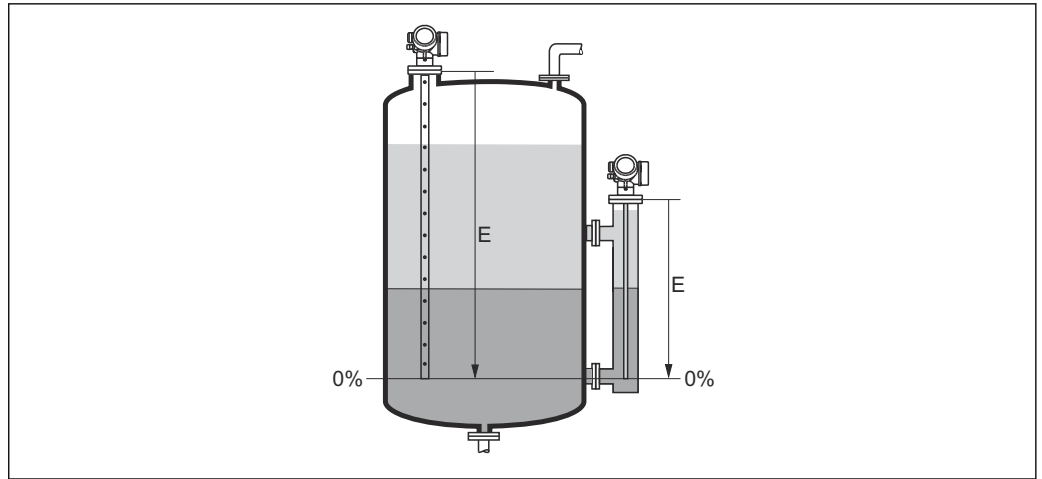

A0013177


44 Empty calibration (E) for interface measurements

i In the case of interface measurements the **Empty calibration** parameter is valid for both, the total and the interface level.

Full calibration




Navigation	Setup → Full calibr.
Description	Span: max. level - min level.
User entry	Depending on the probe
Factory setting	Depending on the probe
Additional information	

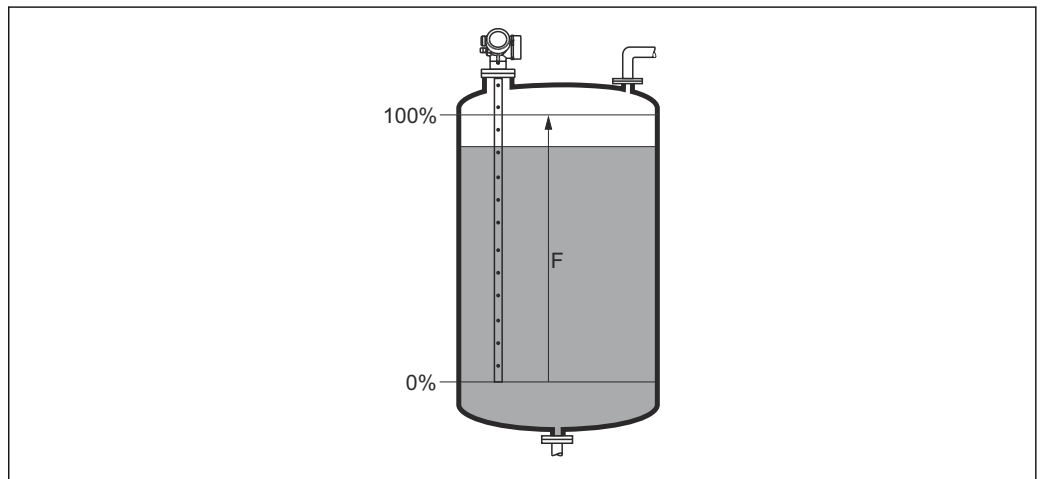

A0013186

45 Full calibration (F) for level measurements in liquids

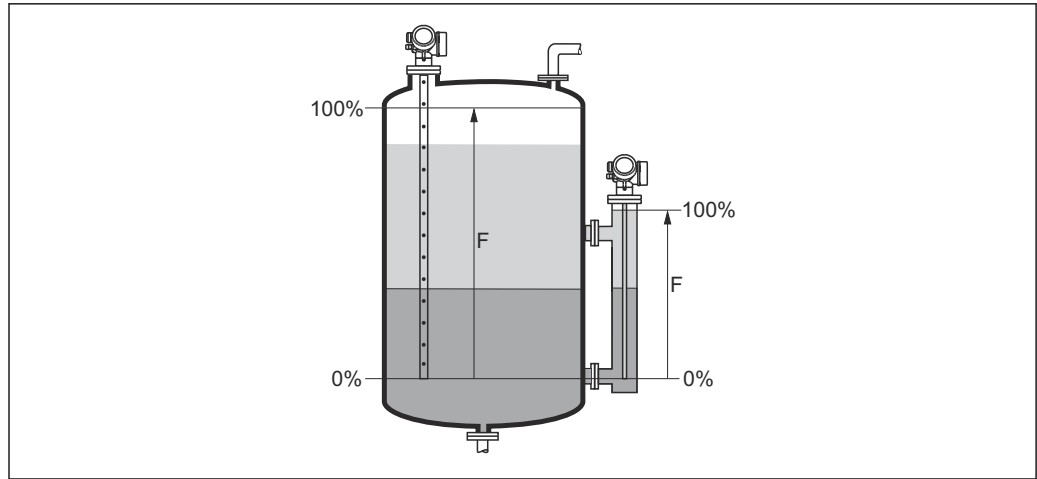

A0013188

46 Full calibration (F) for interface measurements

i In the case of interface measurements the **Full calibration** parameter is valid for both, the total and the interface level.

Level


Navigation

☰ ☰ Setup → Level

Description


Displays measured level L_L (before linearization).

Additional information

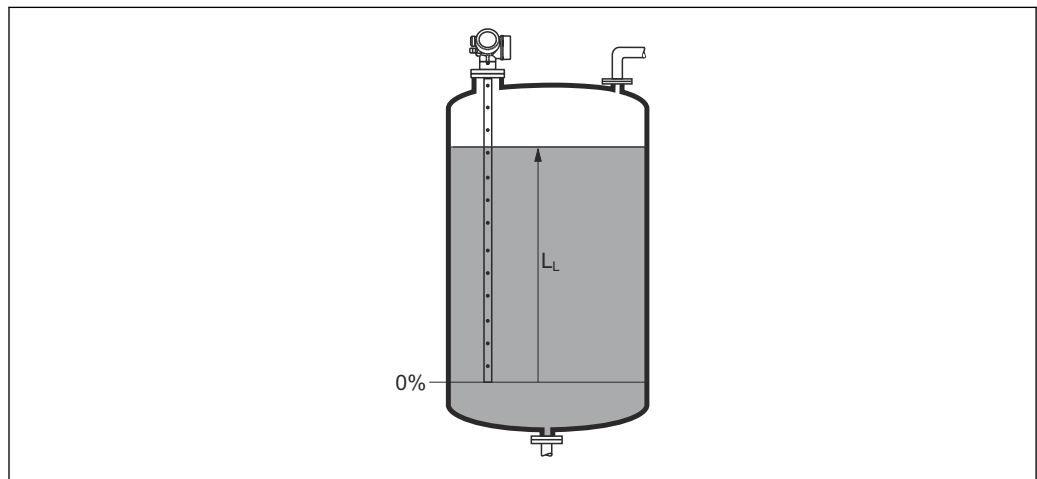


A0013194

47 Level in case of liquid measurements

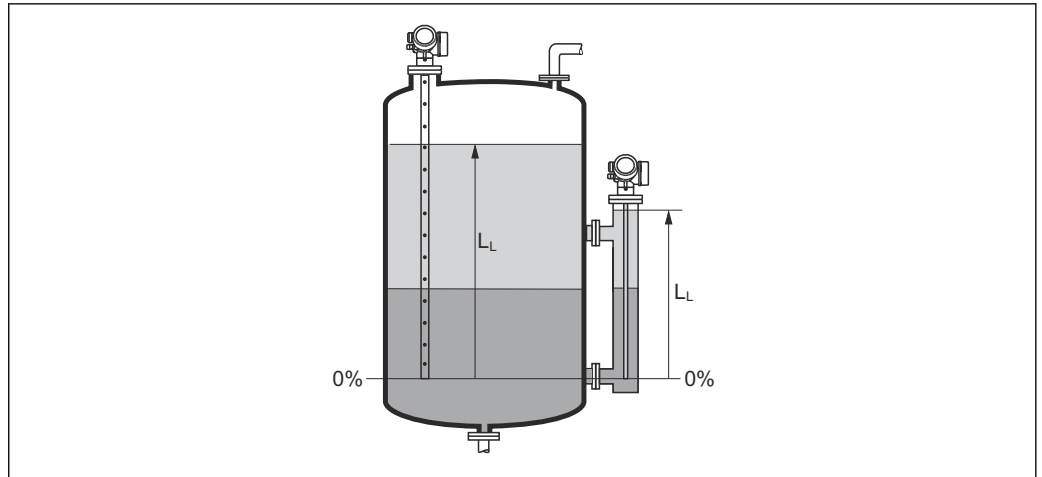



A0013195

48 Level in case of interface measurements

-  The unit is defined in the **Level unit** parameter (→ 165).
- In case of interface measurements, this parameter always refers to the total level.

Distance


Navigation

  Setup → Distance

Description


Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

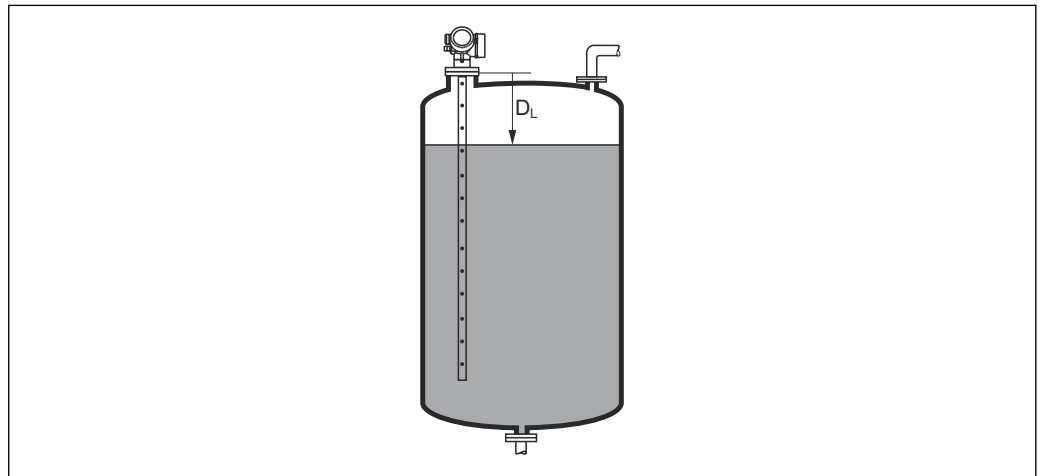

A0013198

49 Distance for liquid measurements

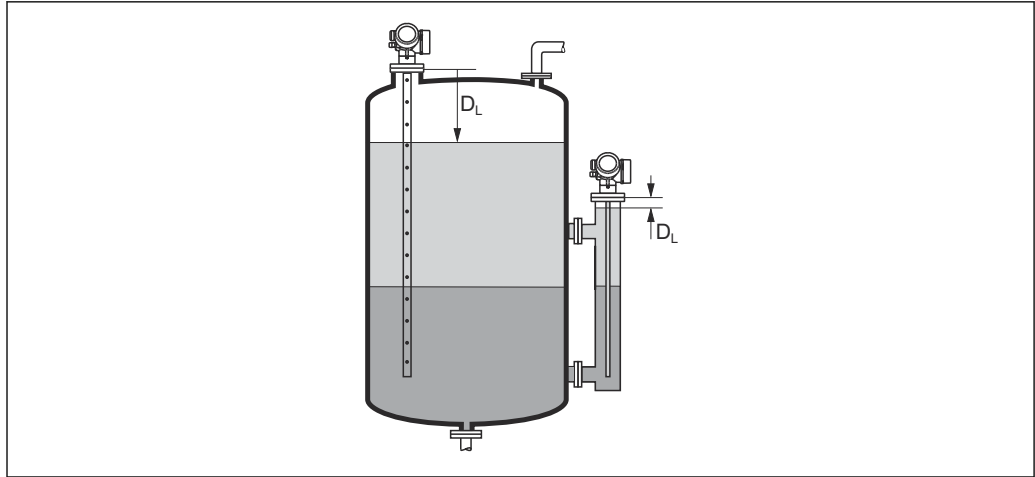

A0013199

50 Distance for interface measurements

The unit is defined in the **Distance unit** parameter (→ 144).

Signal quality

Navigation

Setup → Signal quality

Description

Displays the signal quality of the evaluated echo.

Additional information

Meaning of the display options

- **Strong**
The evaluated echo exceeds the threshold by at least 10 mV.
- **Medium**
The evaluated echo exceeds the threshold by at least 5 mV.
- **Weak**
The evaluated echo exceeds the threshold by less than 5 mV.
- **No signal**
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo ²⁾ or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.

In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→ 184) = Alarm.
- S941, if another option has been selected in **Output echo lost** (→ 184).

2) Of these two echos the one with the lower quality is indicated.

Tank level
**Navigation**

Setup → Tank level

Prerequisite**Operating mode (→ 144) = Interface****Description**

Specify whether the tank or bypass is completely flooded or not.

Selection

- Partially filled
- Fully flooded


Additional information**Meaning of the options**

- **Partially filled**

The device searches for 2 echo signals, one for the interface and one for the total level.

- **Fully flooded**

The device searches for the interface level only. With this setting it is essential that the upper level signal always is within the upper blocking distance (UB) in order to avoid that it is evaluated by mistake.

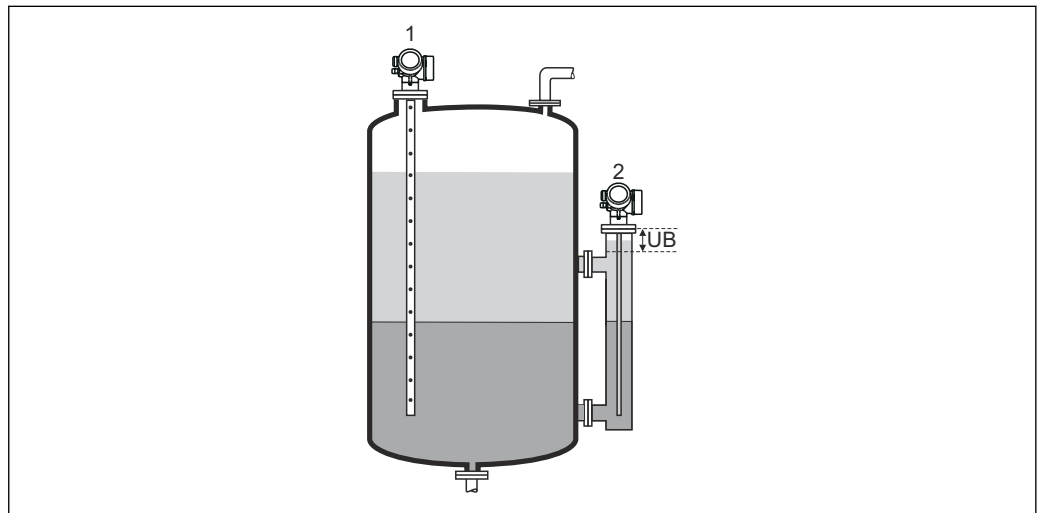

A0013173

- 1 Partially filled
 2 Fully flooded
 UB Upper blocking distance

Distance to upper connection
**Navigation**



Setup → Dist. up.connect


PrerequisiteThe device has the "Interface measurement" application package ³⁾.**Description**Specify distance D_U to upper connection.**User entry**

0 to 200 m

3) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"



Factory setting

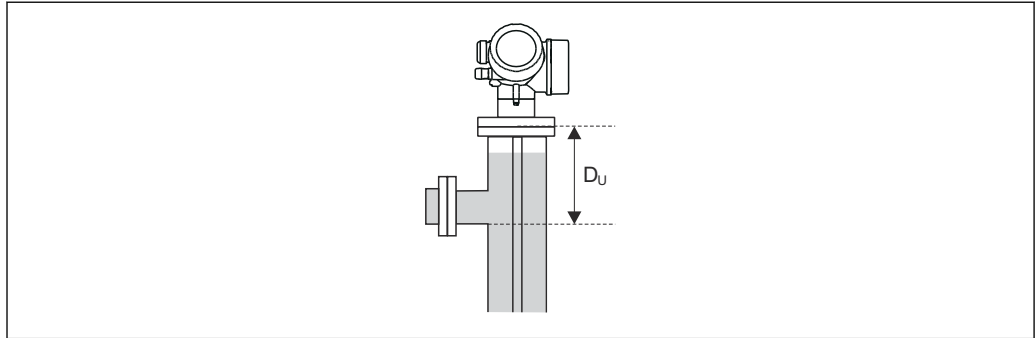- For Tank level (→  151) = **Partially filled**: 0 mm (0 in)
- For Tank level (→  151) = **Fully flooded**: 250 mm (9.8 in)



Additional information

A0013174

Dependence on the "Tank level" parameter

- **Tank level (→  151) = Partially filled:**
In this case the **Distance to upper connection** parameter does not influence the measurement. Thus, the default setting needs not to be changed.
- **Tank level (→  151) = Fully flooded:**
In this case enter the distance D_U between the reference point and the lower edge of the upper connection.

DC value**Navigation**

  Setup → DC value

Prerequisite

The device has the "Interface measurement" application package ⁴⁾.

Description


Specify the relative dielectric constant ϵ_r of the upper medium (DC_1).

User entry

1.0 to 100

4) Product structure: feature 540 "Application packages", option EB "Interface measurement"

Additional information

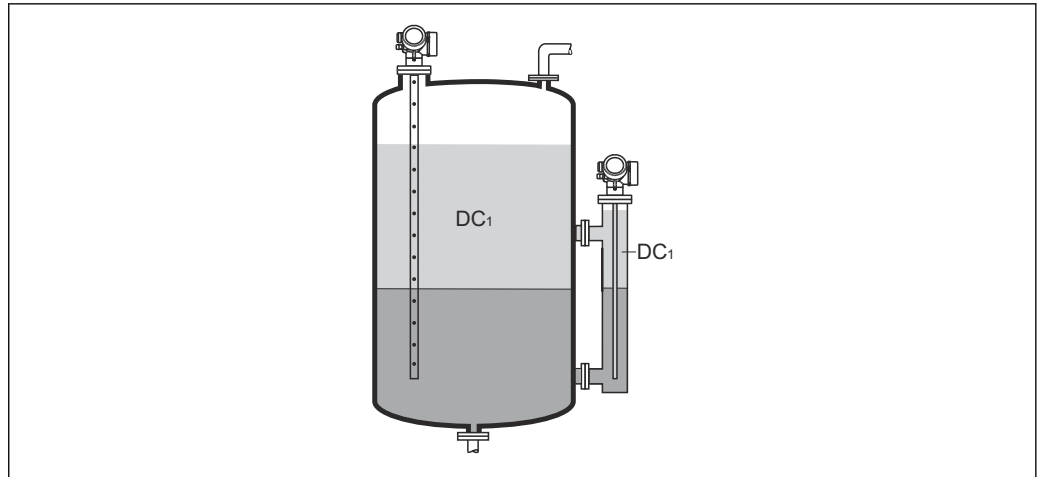

A0013181

DC1 Relative dielectric constant of the upper medium.

- i** For the relative permittivity values (ϵ_r values) of many media commonly used in industry, please refer to:
 - Relative permittivity (ϵ_r value), Compendium CP01076F
 - The Endress+Hauser "DC Values app" (available for Android and iOS)

Interface

Navigation

Setup → Interface


Prerequisite

Operating mode (→ 144) = **Interface** or **Interface with capacitance**

Description

Displays the measured interface level L_1 (before linearization).


Additional information

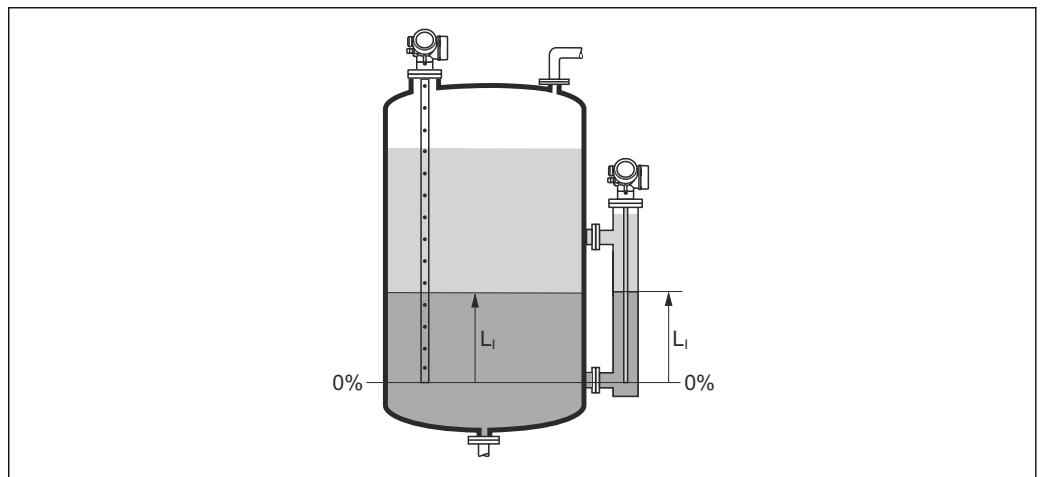


A0013197

- i** The unit is defined in the **Level unit** parameter (→ 165).

Interface distance

Navigation
 Setup → Interface dist.
Prerequisite
Operating mode (→  144) = **Interface** or **Interface with capacitance**
Description


Displays the measured distance D_1 between the reference point (lower edge of flange or threaded connection) and the interface.

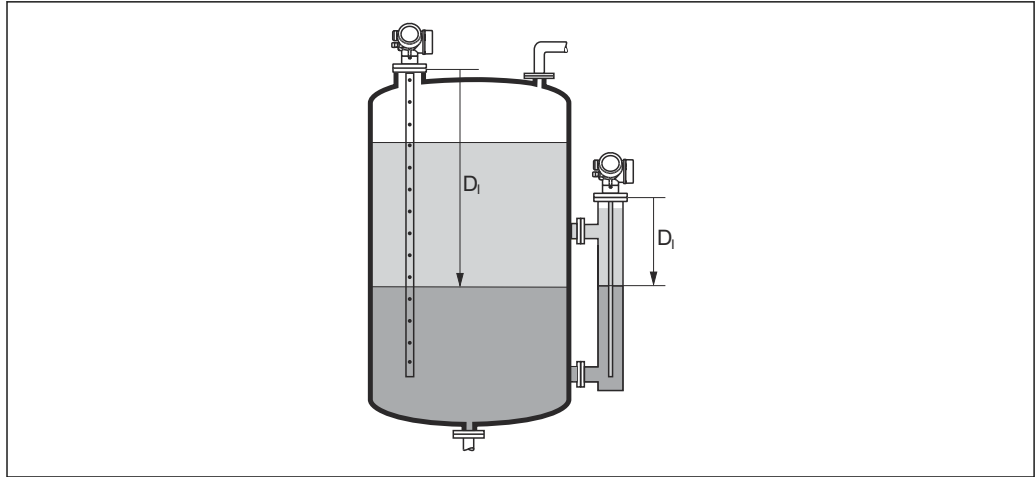Additional information

A0013202

 The unit is defined in the **Distance unit** parameter (→  144).

Confirm distance

**Navigation**
 Setup → Confirm distance
Description

Specify, whether the measured distance matches the real distance.

Depending on the selection the device automatically sets the range of mapping.


Selection

- Manual map
- Distance ok
- Distance unknown
- Distance too small*
- Distance too big*
- Tank empty
- Delete map

* Visibility depends on order options or device settings

Additional information**Meaning of the options**

- **Manual map**

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  156). In this case it is not necessary to confirm the distance.

- **Distance ok**

To be selected if the measured distance matches the actual distance. The device performs a mapping.

- **Distance unknown**

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

- **Distance too small**

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Distance too big**⁵⁾

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Tank empty**

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.

- **Factory map**

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.



When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.



For interface measurements the distance always refers to the total level (not the interface level).




If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.



For FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG) a map must **not** be recorded.

Present mapping

Navigation

 Setup → Present mapping

Description

Indicates up to which distance a mapping has already been recorded.

5) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"




Mapping end point


Navigation	Setup → Map. end point
Prerequisite	Confirm distance (→ 154) = Manual map or Distance too small
Description	Specify new end of the mapping.
User entry	0 to 200 000.0 m
Additional information	<p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p> For reference purposes the Present mapping parameter (→ 155) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.</p>

Record map



Navigation	Setup → Record map
Prerequisite	Confirm distance (→ 154) = Manual map or Distance too small
Description	Start recording of the map.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Record map ▪ Delete map
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ No The map is not recorded. ▪ Record map The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>. ▪ Delete map The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>.

17.3.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  144).
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.


Navigation  Setup → Mapping

Confirm distance

Navigation  Setup → Mapping → Confirm distance

Description →  154


Mapping end point

Navigation  Setup → Mapping → Map. end point

Description →  156

Record map

Navigation  Setup → Mapping → Record map

Description →  156

Distance


Navigation  Setup → Mapping → Distance

Description →  149

17.3.2 "Analog input 1 to 5" submenu


There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation  Setup → Analog inputs → Analog input 1 to 5

Block tag

Navigation

 Setup → Analog inputs → Analog input 1 to 7 → Block tag

Description


Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.

User entry

Character string comprising numbers, letters and special characters (32)

Channel

Navigation

 Setup → Analog inputs → Analog input 1 to 7 → Channel

Description

Use this function to select the input value that should be processed in the Analog Input function block.

Selection

- Uninitialized
- Level linearized
- Absolute echo amplitude
- Absolute EOP amplitude
- Absolute interface amplitude *
- Distance
- Electronic temperature
- EOP shift
- Interface linearized *
- Interface distance *
- Measured capacitance *
- Relative echo amplitude
- Relative interface amplitude *
- Noise of signal
- Terminal voltage
- Thickness upper layer *
- Calculated DC value *
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 1

* Visibility depends on order options or device settings

Process Value Filter Time

Navigation Setup → Analog inputs → Analog input 1 to 7 → PV Filter Time**Description**

Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).

User entry

Positive floating-point number

Additional information

Factory setting







If the value 0 s is entered, filtering will not be performed.






17.3.3 "Advanced setup" submenu

Navigation  Setup → Advanced setup


Locking status

Navigation	  Setup → Advanced setup → Locking status
Description	Indicates the write protection with the highest priority that is currently active.
User interface	<ul style="list-style-type: none"> ▪ Hardware locked ▪ Temporarily locked
Additional information	<p>Meaning and priorities of the types of write protection</p> <ul style="list-style-type: none"> ▪ Hardware locked (priority 1) The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters. ▪ SIL locked (priority 2) The SIL mode is activated. Writing access to the relevant parameters is denied. ▪ WHG locked (priority 3) The WHG mode is activated. Writing access to the relevant parameters is denied. ▪ Temporarily locked (priority 4) Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete. <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

Access status tooling





Navigation	 Setup → Advanced setup → Access stat.tool
Description	Shows the access authorization to the parameters via the operating tool.
Additional information	<p> The access authorization can be changed via the Enter access code parameter (→  161).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  160).</p>

Access status display

Navigation	 Setup → Advanced setup → Access stat.disp
Prerequisite	The device has a local display.

Description Indicates access authorization to parameters via local display.

Additional information

-  The access authorization can be changed via the **Enter access code** parameter (→  161).
-  If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  160).




Enter access code


Navigation  Setup → Advanced setup → Ent. access code

Description Enter access code to disable write protection of parameters.




User entry 0 to 9999


Additional information


- The customer-specific access code that was defined in the **Define access code** parameter (→  207) must be entered for local operation.
- If an incorrect access code is entered, users retain their current access authorization.
- The write protection affects all parameters marked with the  symbol in the document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.
- If no key is pressed for 10 minutes or the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.





 Please contact your Endress+Hauser Sales Center if you lose your access code.


"Level" submenu






 **Level** submenu (→  162) is only visible for **Operating mode** (→  144) = **Level**

Navigation   Setup → Advanced setup → Level

Medium type 

Navigation	  Setup → Advanced setup → Level → Medium type
Description	Specify type of medium.
User interface	<ul style="list-style-type: none"> ▪ Liquid ▪ Solid
Factory setting	FMP50, FMP51, FMP52, FMP53, FMP54, FMP55: Liquid
Additional information	<p>The Solid option is only available for Operating mode (→  144) = Level</p> <p> This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended not to change the factory setting.</p>

Medium property 

Navigation	  Setup → Advanced setup → Level → Medium property
Prerequisite	<ul style="list-style-type: none"> ▪ Operating mode (→  144) = Level ▪ EOP level evaluation ≠ Fix DC
Description	Specify the dielectric constant ϵ_r of the medium.
Selection	<ul style="list-style-type: none"> ▪ Unknown ▪ DC 1.4 ... 1.6 ▪ DC 1.6 ... 1.9 ▪ DC 1.9 ... 2.5 ▪ DC 2.5 ... 4 ▪ DC 4 ... 7 ▪ DC 7 ... 15 ▪ DC > 15
Factory setting	Depends on the Medium type (→  162) and Medium group (→  145) parameters.

Additional information

Dependency of "Medium type" and "Medium group"

Medium type (→ ⓘ 162)	Medium group (→ ⓘ 145)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

i For the relative permittivity values (ϵ_r values) of many media commonly used in industry, please refer to:

- Relative permittivity (ϵ_r value), Compendium CP01076F
- The Endress+Hauser "DC Values app" (available for Android and iOS)

i If **EOP level evaluation = Fix DC**, the exact dielectric constant must be specified in the **DC value** parameter (→ ⓘ 152). The **Medium property** parameter therefore does not apply in this case.

Process property



Navigation

☰☰ Setup → Advanced setup → Level → Process property

Description

Specify typical rate of level change.

Selection

For "Medium type" = "Liquid"

- Very fast > 10 m (400 in)/min
- Fast > 1 m (40 in)/min
- Standard < 1 m (40in) /min
- Medium < 10 cm (4in) /min
- Slow < 1 cm (0.4in) /min
- No filter / test

For "Medium type" = "Solid"

- Very fast > 100 m (333 ft) /h
- Fast > 10 m (33 ft) /h
- Standard < 10 m (33 ft) /h
- Medium < 1 m (3ft) /h
- Slow < 0.1 m (0.3ft) /h
- No filter / test

Additional information

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

For "Operating mode" = "Level" and "Medium type" = "Liquid"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	14
Medium < 10 cm (4in) /min	39
Slow < 1 cm (0.4in) /min	76
No filter / test	< 1

For "Operating mode" = "Level" and "Medium type" = "Solid"

Process property	Step response time / s
Very fast > 100 m (333 ft) /h	37
Fast > 10 m (33 ft) /h	37
Standard < 10 m (33 ft) /h	74
Medium < 1 m (3ft) /h	146
Slow < 0.1 m (0.3ft) /h	290
No filter / test	< 1

For "Operating mode" = "Interface" or "Interface with capacitance"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	23
Medium < 10 cm (4in) /min	47
Slow < 1 cm (0.4in) /min	81
No filter / test	2.2

Advanced process conditions



Navigation

Setup → Advanced setup → Level → Adv. conditions

Prerequisite

Operating mode (→ 144) = Level

Description

Specify additional process conditions (if required).












Selection

- None
- Oil/Water condensate
- Probe near tank bottom
- Build up
- Foam (>5cm/0,16ft)


Additional information

Meaning of the options

- **Oil/Water condensate** (only **Medium type = Liquid**)
Makes sure that in the case of two-phase media only the total level is detected (example: oil/condensate application).
- **Probe near tank bottom** (only for **Medium type = Liquid**)
Improves the empty detection, especially if the probe is mounted close to the tank bottom.
- **Build up**
Enables a safe empty-detection even if the end-of-probe signal has shifted due to build-up.
- **Foam (>5cm/0,16ft)** (only for **Medium type = Liquid**)
Optimizes the signal evaluation in applications with foam formation.

Level unit 									
Navigation	  Setup → Advanced setup → Level → Level unit								
Description	Select level unit.								
Selection	<table border="0"> <thead> <tr> <th><i>SI units</i></th> <th><i>US units</i></th> </tr> </thead> <tbody> <tr> <td>■ %</td> <td>■ ft</td> </tr> <tr> <td>■ m</td> <td>■ in</td> </tr> <tr> <td>■ mm</td> <td></td> </tr> </tbody> </table>	<i>SI units</i>	<i>US units</i>	■ %	■ ft	■ m	■ in	■ mm	
<i>SI units</i>	<i>US units</i>								
■ %	■ ft								
■ m	■ in								
■ mm									
Additional information	<p>The level unit may differ from the distance unit defined in the Distance unit parameter (→  144):</p> <ul style="list-style-type: none"> ■ The unit defined in the Distance unit parameter is used for the basic calibration (Empty calibration (→  146) and Full calibration (→  147)). ■ The unit defined in the Level unit parameter is used to display the (nonlinearized) level. 								
Blocking distance 									
Navigation	  Setup → Advanced setup → Level → Blocking dist.								
Description	Specify upper blocking distance UB.								
User entry	0 to 200 m								
Factory setting	<ul style="list-style-type: none"> ■ For coax probes: 0 mm (0 in) ■ For rod and rope probes up to 8 m (26 ft): 200 mm (8 in) ■ For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge <p>For FMP51/FMP52/FMP54 with the Interface measurement application package⁶⁾ and for FMP55: 100 mm (3.9 in) for all antenna types</p>								
Additional information	<p>Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.</p> <p> This behavior is only valid if the following two conditions are met:</p> <ul style="list-style-type: none"> ■ Expert → Sensor → Echo tracking → Evaluation mode = Short time history or Long time history ■ Expert → Sensor → Gas phase compensation → GPC mode= On, Without correction or External correction <p>If one of these conditions is not met, signals in the blocking distance will always be ignored.</p> <p> If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.</p>								

6) Ordering feature 540 "Application Package", option EB "Interface measurement"

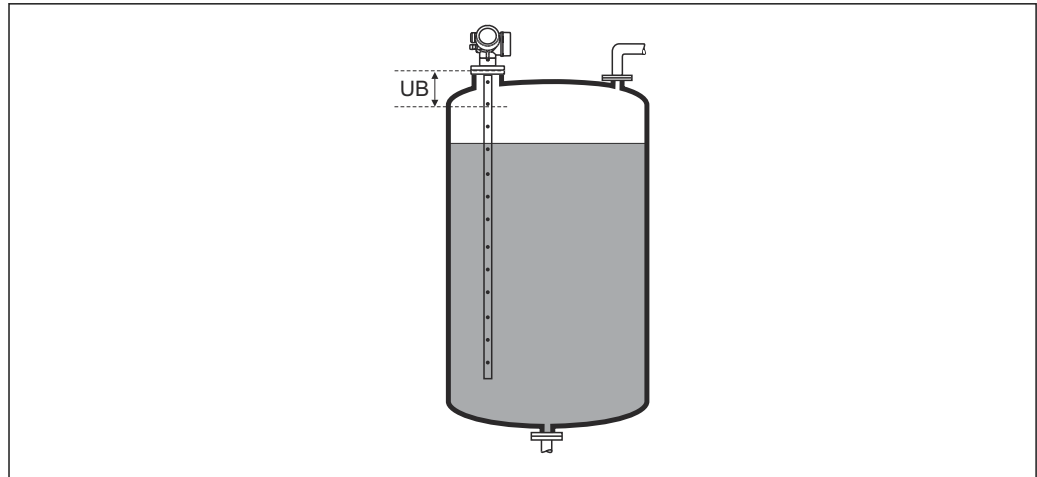

A0013219

51 Blocking distance (UB) for liquid measurements

Level correction



Navigation

  Setup → Advanced setup → Level → Level correction

Description

Specify level correction (if required).


User entry


-200 000.0 to 200 000.0 %


Additional information

The value specified in this parameter is added to the measured level (before linearization).

"Interface" submenu

Navigation  Setup → Advanced setup → Interface

Process property 


Navigation  Setup → Advanced setup → Interface → Process property

Description Specify typical rate of change for the interface position.


- Selection**
- Fast > 1 m (40 in)/min
 - Standard < 1 m (40in) /min
 - Medium < 10 cm (4in) /min
 - Slow < 1 cm (0.4in) /min
 - No filter / test

Additional information The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Process property	Step response time / s
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	15
Medium < 10 cm (4in) /min	40
Slow < 1 cm (0.4in) /min	74
No filter / test	2.2



DC value lower medium 


Navigation  Setup → Advanced setup → Interface → DC lower medium


Prerequisite **Operating mode** (→  144) = **Interface** or **Interface with capacitance**

Description Specify the dielectric constant ϵ_r of the lower medium.

User entry 1 to 100

- Additional information**
-  For the relative permittivity values (ϵ_r values) of many media commonly used in industry, please refer to:
 - Relative permittivity (ϵ_r value), Compendium CP01076F
 - The Endress+Hauser "DC Values app" (available for Android and iOS)
 -  The factory setting, $\epsilon_r = 80$, applies for water at 20 °C (68 °F).


Level unit




Navigation  Setup → Advanced setup → Interface → Level unit


Description Select level unit.


Selection

<i>SI units</i>	<i>US units</i>
■ %	■ ft
■ m	■ in
■ mm	

Additional information The level unit may differ from the distance unit defined in the **Distance unit** parameter (→  144):

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→  146) and **Full calibration** (→  147)).
- The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level and interface position.

Blocking distance


Navigation  Setup → Advanced setup → Interface → Blocking dist.

Description Specify upper blocking distance UB.


User entry 0 to 200 m

Factory setting

- For coax probes: 100 mm (3.9 in)
- For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
- For rod and rope probes above 8 m (26 ft): 0.025 * length of probe

Additional information Echoes from within the blocking distance are not taken into account in the signal evaluation. The upper blocking distance is used

- to suppress interference echoes at the top end of the probe.
- to suppress the echo of the total level in the case of flooded bypasses.

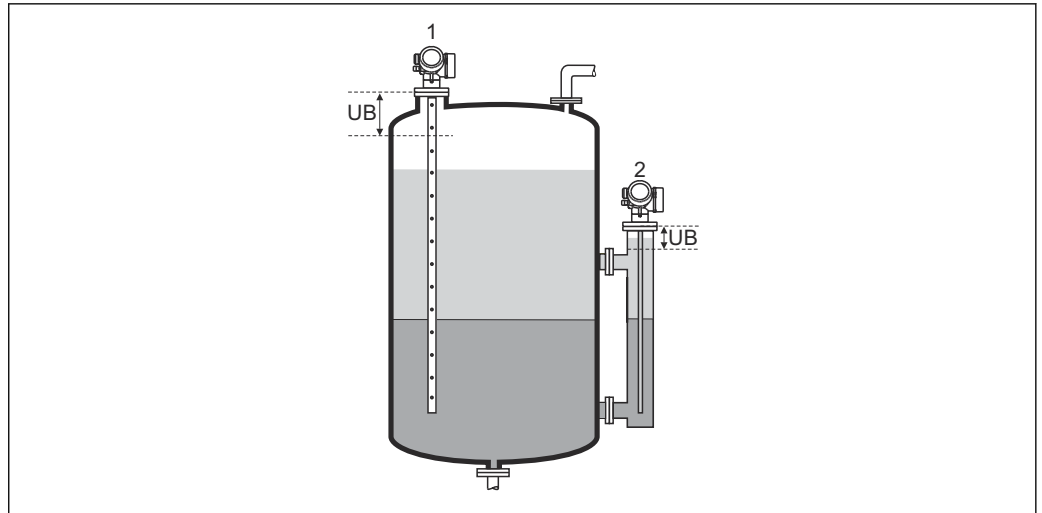

A0013220

- 1 Suppression of interference echoes at the top end of the probe.
- 2 Suppression of the level signal in case of a flooded bypass.
- UB Upper blocking distance

Level correction




Navigation	☰☰ Setup → Advanced setup → Interface → Level correction
Description	Specify level correction (if required).
User entry	-200 000.0 to 200 000.0 %
Additional information	The value specified in this parameter is added to the measured total and interface levels (before linearization).

Manual thickness upper layer




Navigation	☰ Setup → Advanced setup → Interface → Man.thick.up.lay
Description	Specify the manually determined interface thickness UP (i.e. the thickness of the upper medium).
User entry	0 to 200 m

Additional information

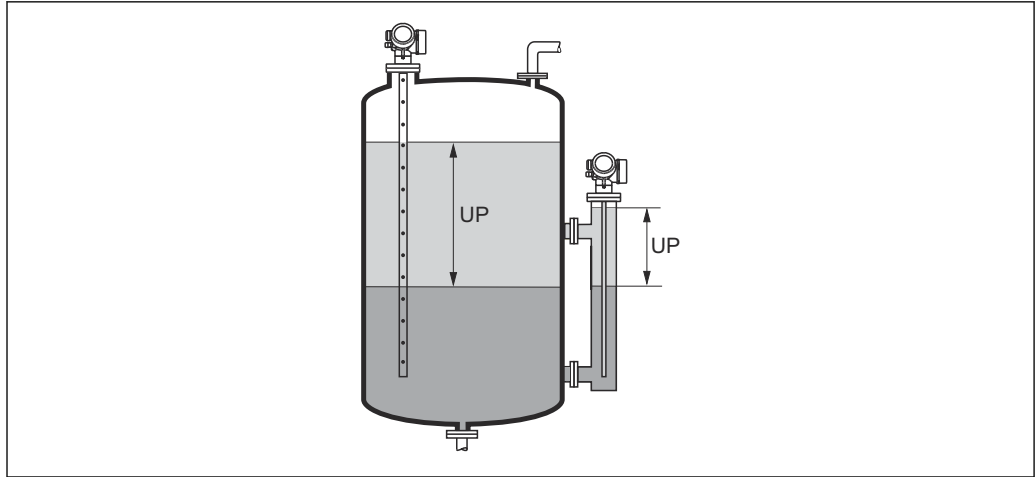


A0013313

UP Interface thickness (= thickness of upper medium)

 On the local display, the measured interface thickness is indicated together with the manual interface thickness. By comparing these two values the device can automatically adjust the dielectric constant of the upper medium.


Measured thickness upper layer

Navigation  Setup → Advanced setup → Interface → Meas.thick.u.lay

Description Displays the measured interface thickness. (Thickness UP of the upper medium).


DC value



Navigation  Setup → Advanced setup → Interface → DC value

Description Displays relative dielectric constant ϵ_r of the upper medium (DC₁) before correction.

Calculated DC value

Navigation  Setup → Advanced setup → Interface → Calc. DC value

Description Displays calculated (i.e. corrected) relative dielectric constant ϵ_r (DC₁) of the upper medium.

Use calculated DC value

**Navigation**

Setup → Advanced setup → Interface → Use calc. DC

Description

Specify whether the calculated dielectric constant is to be used.

Selection



- Save and exit
- Cancel and exit


Additional information**Meaning of the options**

- Save and exit
The calculated constant is assumed to be the correct one.
- Cancel and exit
The calculated dielectric constant is rejected; the previous dielectric constant remains active.


On the local display, the **Calculated DC value** parameter (→ 170) is displayed together with this parameter.


"Automatic DC calculation" wizard

 The **Automatic DC calculation** wizard is only available when operating via the local display. When operating via an operating tool, the parameters for automatic DC calculation are located directly in **Interface** submenu (→  167)


 In the **Automatic DC calculation** wizard, one or two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Advanced setup → Interface → Autom. DC calc.

Manual thickness upper layer 


Navigation  Setup → Advanced setup → Interface → Autom. DC calc. → Man.thick.up.lay

Description Specify the manually determined interface thickness UP (i.e. the thickness of the upper medium).

DC value 

Navigation  Setup → Advanced setup → Interface → Autom. DC calc. → DC value

Description Displays relative dielectric constant ϵ_r of the upper medium (DC_1) before correction.

Use calculated DC value 



Navigation  Setup → Advanced setup → Interface → Autom. DC calc. → Use calc. DC

Description Specify whether the calculated dielectric constant should be used.


- Selection**
- Save and exit
 - Cancel and exit

Additional information **Meaning of the options**

- Save and exit
The calculated dielectric constant is adopted.
- Cancel and exit
The calculated dielectric constant is rejected; the previous dielectric constant remains active.

 The **Calculated DC value** parameter (→  170) is displayed on the local display together with this parameter.

"Linearization" submenu

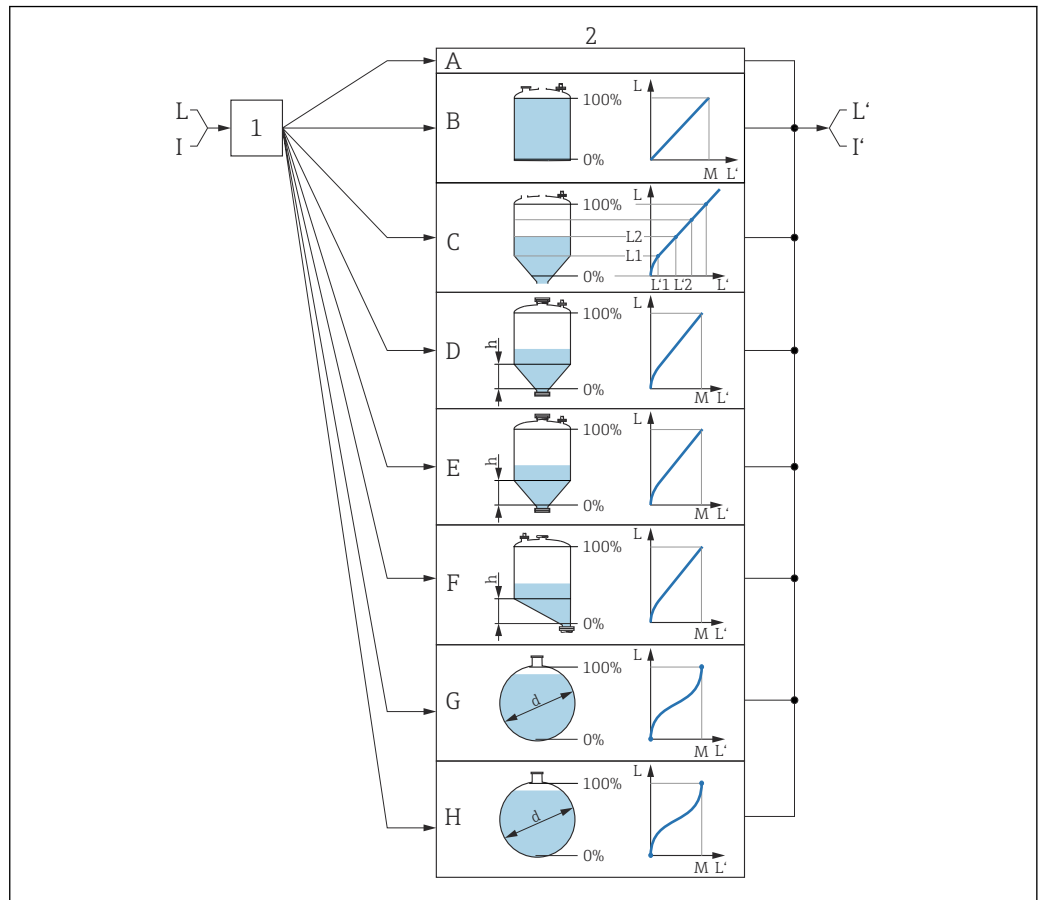


A0016084

52 Linearization: Conversion of the level and, if applicable, interface into a volume or a weight; the conversion depends on the vessel shape

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 176) = None
- B Linearization type (→ 176) = Linear
- C Linearization type (→ 176) = Table
- D Linearization type (→ 176) = Pyramid bottom
- E Linearization type (→ 176) = Conical bottom
- F Linearization type (→ 176) = Angled bottom
- G Linearization type (→ 176) = Horizontal cylinder
- H Linearization type (→ 176) = Sphere
- I For "Operating mode (→ 144)" = "Interface" or "Interface with capacitance": interface before linearization (measured in the level unit)
- I' For "Operating mode (→ 144)" = "Interface" or "Interface with capacitance": interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in level unit)
- L' Level linearized (→ 179) (corresponds to volume or weight)
- M Maximum value (→ 179)
- d Diameter (→ 179)
- h Intermediate height (→ 180)

Structure of the submenu on the local display

Navigation  Setup → Advanced setup → Linearization

▶ **Linearization**

Linearization type

Unit after linearization

Free text

Maximum value

Diameter

Intermediate height

Table mode


▶ **Edit table**

Level

Customer value

Activate table

Structure of the submenu in the operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

► **Linearization**

Linearization type

Unit after linearization

Free text

Level linearized

Interface linearized

Maximum value

Diameter

Intermediate height

Table mode

Table number


Level

Level

Customer value

Activate table

Description of the parameters

Navigation  Setup → Advanced setup → Linearization


Linearization type 

Navigation  Setup → Advanced setup → Linearization → Lineariz. type


Description Select linearization type.

- Selection**
- None
 - Linear
 - Table
 - Pyramid bottom
 - Conical bottom
 - Angled bottom
 - Horizontal cylinder
 - Sphere

Additional information

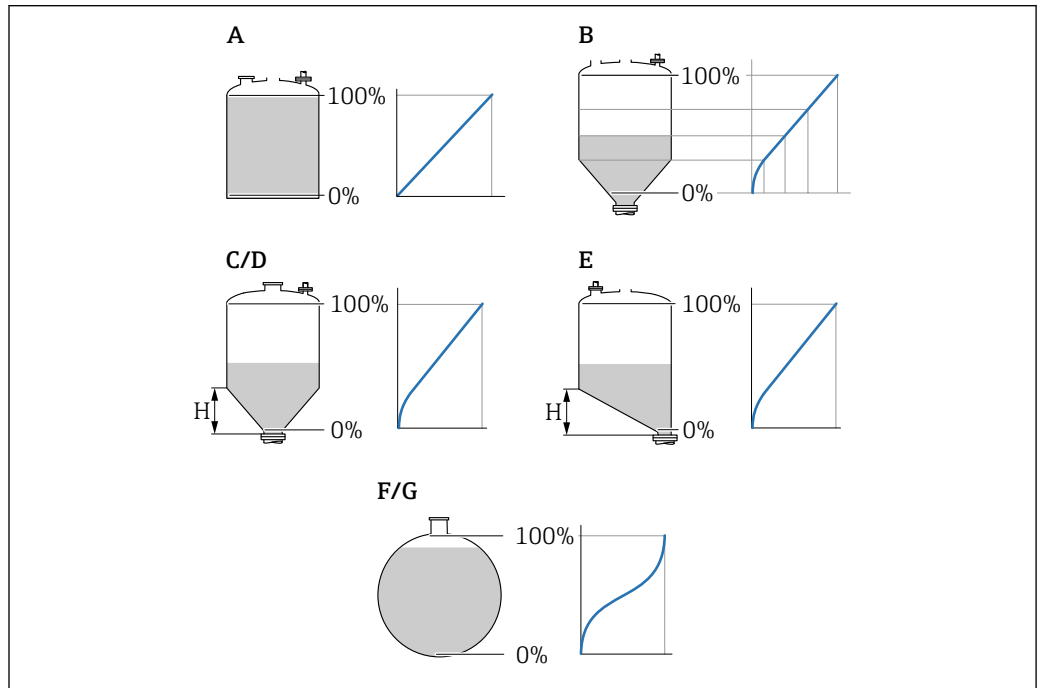

A0021476

 53 *Linearization types*

- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder


Meaning of the options


■ None

The level is output in the level unit without being converted (linearized) beforehand.

■ Linear


The output value (volume/weight) is proportional to the level L. This applies, for example, to vertical cylindrical tanks and silos. The following parameters must also be specified:

■ **Unit after linearization** (→  177)


■ **Maximum value** (→  179): maximum volume or weight


■ Table


The relationship between the measured level L and the output value (volume/weight) is defined by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight" respectively. The following parameters must also be specified:

■ **Unit after linearization** (→  177)

■ **Table mode** (→  180)


■ For every point in the table: **Level** (→  182)


■ For every point in the table: **Customer value** (→  182)


■ **Activate table** (→  182)

■ Pyramid bottom

The output value corresponds to the volume or weight in a silo with a pyramid bottom. The following parameters must also be specified:


■ **Unit after linearization** (→  177)


■ **Maximum value** (→  179): maximum volume or weight

■ **Intermediate height** (→  180): the height of the pyramid

■ Conical bottom

The output value corresponds to the volume or weight in a tank with a conical bottom. The following parameters must also be specified:


■ **Unit after linearization** (→  177)


■ **Maximum value** (→  179): maximum volume or weight


■ **Intermediate height** (→  180): the height of the cone

■ Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following parameters must also be specified:


■ **Unit after linearization** (→  177)


■ **Maximum value** (→  179): maximum volume or weight


■ **Intermediate height** (→  180): height of the angled bottom

■ Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following parameters must also be specified:


■ **Unit after linearization** (→  177)


■ **Maximum value** (→  179): maximum volume or weight


■ **Diameter** (→  179)

■ Sphere

The output value corresponds to the volume or weight in a spherical tank. The following parameters must also be specified:

■ **Unit after linearization** (→  177)



■ **Maximum value** (→  179): maximum volume or weight

■ **Diameter** (→  179)


Unit after linearization









Navigation

  Setup → Advanced setup → Linearization → Unit lineariz.

Prerequisite

Linearization type (→  176) ≠ None


Description	Select the unit for the linearized value.
Selection	<p>Selection/input (uint16)</p> <ul style="list-style-type: none"> ▪ 1095 = [short Ton] ▪ 1094 = [lb] ▪ 1088 = [kg] ▪ 1092 = [Ton] ▪ 1048 = [US Gal.] ▪ 1049 = [Imp. Gal.] ▪ 1043 = [ft³] ▪ 1571 = [cm³] ▪ 1035 = [dm³] ▪ 1034 = [m³] ▪ 1038 = [l] ▪ 1041 = [hl] ▪ 1342 = [%] ▪ 1010 = [m] ▪ 1012 = [mm] ▪ 1018 = [ft] ▪ 1019 = [inch] ▪ 1351 = [l/s] ▪ 1352 = [l/min] ▪ 1353 = [l/h] ▪ 1347 = [m³/s] ▪ 1348 = [m³/min] ▪ 1349 = [m³/h] ▪ 1356 = [ft³/s] ▪ 1357 = [ft³/min] ▪ 1358 = [ft³/h] ▪ 1362 = [US Gal./s] ▪ 1363 = [US Gal./min] ▪ 1364 = [US Gal./h] ▪ 1367 = [Imp. Gal./s] ▪ 1358 = [Imp. Gal./min] ▪ 1359 = [Imp. Gal./h] ▪ 32815 = [Ml/s] ▪ 32816 = [Ml/min] ▪ 32817 = [Ml/h] ▪ 1355 = [Ml/d]
Additional information	<p>The selected unit is only used for display purposes. The measured value is not converted on the basis of the selected unit.</p> <p> Distance-to-distance linearization is also possible, i.e. a linearization from the level unit to another length unit. Select the Linear linearization mode for this purpose. To specify the new level unit, select the Free text option in the Unit after linearization parameter and enter the unit in the Free text parameter (→  178).</p>
Free text	
Navigation	  Setup → Advanced setup → Linearization → Free text
Prerequisite	Unit after linearization (→  177) = Free text
Description	Enter unit symbol.

User entry Up to 32 alphanumerical characters (letters, numbers, special characters)

Level linearized

Navigation  Setup → Advanced setup → Linearization → Level linearized


Description Displays linearized level.

Additional information 


- This unit is defined by the **Unit after linearization** parameter.
- In the case of interface measurements, this parameter always refers to the total level.

Interface linearized

Navigation  Setup → Advanced setup → Linearization → Interf. lineariz


Prerequisite **Operating mode** (→  144) = **Interface** or **Interface with capacitance**

Description Displays the linearized interface height.

Additional information  This unit is defined by the **Unit after linearization** parameter.

Maximum value



Navigation   Setup → Advanced setup → Linearization → Maximum value


Prerequisite **Linearization type** (→  176) has one of the following values:

- Linear
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

User entry -50 000.0 to 50 000.0 %


Diameter

Navigation   Setup → Advanced setup → Linearization → Diameter



Prerequisite **Linearization type** (→  176) has one of the following values:

- Horizontal cylinder
- Sphere

User entry 0 to 9 999.999 m

Additional information The unit is defined in the **Distance unit** parameter (→  144).

Intermediate height


Navigation   Setup → Advanced setup → Linearization → Intermed. height

Prerequisite **Linearization type** (→  176) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom

User entry 0 to 200 m

Additional information

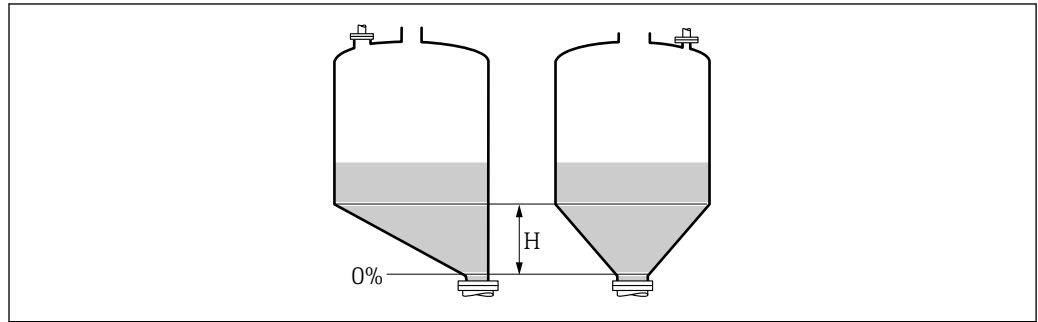

A0013264

H Intermediate height





The unit is defined in the **Distance unit** parameter (→  144).

Table mode

Navigation   Setup → Advanced setup → Linearization → Table mode

Prerequisite **Linearization type** (→  176) = Table

Description Select editing mode of the linearization table.

Selection

- Manual
- Semiautomatic *
- Clear table
- Sort table

* Visibility depends on order options or device settings




Additional information


Meaning of the options

- **Manual**
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**
Deletes the existing linearization table.
- **Sort table**
Rearranges the linearization points into an ascending order.




Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

 Before entering a linearization table, the values for **Empty calibration** (→  146) and **Full calibration** (→  147) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  180) = **Clear table**). Then enter a new table.

How to enter the table

- **Via FieldCare**
The table points can be entered via the **Table number** (→  181), **Level** (→  182) and **Customer value** (→  182) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- **Via local display**
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.









 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  165) beforehand.

Table number	
Navigation	 Setup → Advanced setup → Linearization → Table number
Prerequisite	Linearization type (→  176) = Table
Description	Select table point you are going to enter or change.
User entry	1 to 32

Level (Manual)

**Navigation** Setup → Advanced setup → Linearization → Level**Prerequisite**

- **Linearization type** (→  176) = Table
- **Table mode** (→  180) = Manual

Description



Enter level value of the table point (value before linearization).

User entry

Signed floating-point number

Level (Semiautomatic)



Navigation Setup → Advanced setup → Linearization → Level**Prerequisite**

- **Linearization type** (→  176) = Table
- **Table mode** (→  180) = Semiautomatic

Description

Displays measured level (value before linearization). This value is transmitted to the table.

Customer value




**Navigation** Setup → Advanced setup → Linearization → Customer value**Prerequisite****Linearization type** (→  176) = Table**Description**

Enter linearized value for the table point.

User entry

Signed floating-point number

Activate table

**Navigation**  Setup → Advanced setup → Linearization → Activate table**Prerequisite****Linearization type** (→  176) = Table**Description**


Activate (enable) or deactivate (disable) the linearization table.

Selection

- Disable
- Enable

Additional information**Meaning of the options****■ Disable**

The measured level is not linearized.

If **Linearization type** (→  **176**) = **Table** at the same time, the device issues error message F435.


■ Enable


The measured level is linearized according to the table.







When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.





"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety sett.

Output echo lost 

Navigation	 Setup → Advanced setup → Safety sett. → Output echo lost
Description	Output signal in case of a lost echo.
Selection	<ul style="list-style-type: none"> ■ Last valid value ■ Ramp at echo lost ■ Value echo lost ■ Alarm
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Last valid value The last valid value is kept in the case of a lost echo. ■ Ramp at echo lost ⁷⁾ In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the Ramp at echo lost parameter (→  185). ■ Value echo lost ⁷⁾ In the case of a lost echo the output assumes the value defined in the Value echo lost parameter (→  184). ■ Alarm In the case of a lost echo the device generates an alarm; see the Failure mode parameter

Value echo lost 


Navigation	 Setup → Advanced setup → Safety sett. → Value echo lost
Prerequisite	Output echo lost (→  184) = Value echo lost
Description	Output value in case of a lost echo
User entry	0 to 200 000.0 %
Additional information	<p>Use the unit which has been defined for the measured value output:</p> <ul style="list-style-type: none"> ■ without linearization: Level unit (→  165) ■ with linearization: Unit after linearization (→  177)

7) Only visible if "Linearization type" (→  176) = "None"

Ramp at echo lost



Navigation	Setup → Advanced setup → Safety sett. → Ramp echo lost
Prerequisite	Output echo lost (→ 184) = Ramp at echo lost
Description	Slope of the ramp in the case of a lost echo
User entry	Signed floating-point number
Additional information	

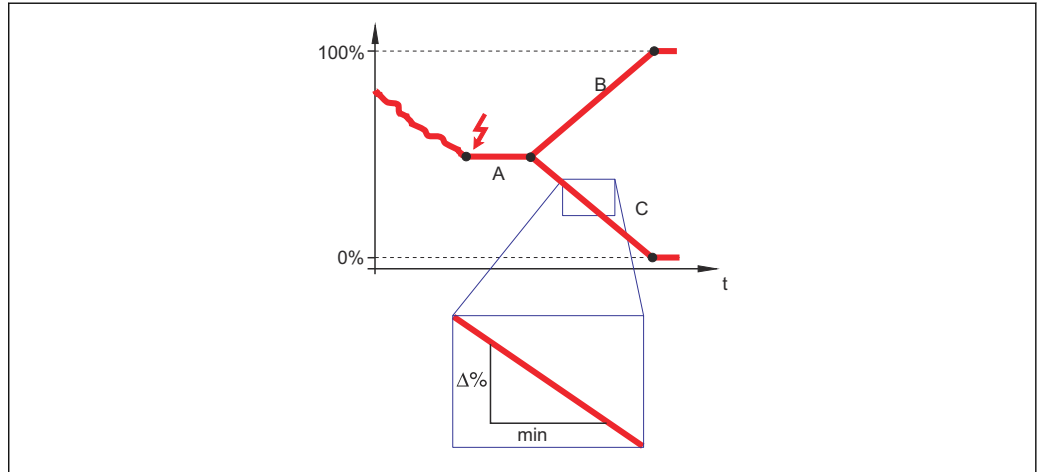

A0013269

- A Delay time echo lost
 B Ramp at echo lost (→ 185) (positive value)
 C Ramp at echo lost (→ 185) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

Blocking distance



Navigation	Setup → Advanced setup → Safety sett. → Blocking dist.
Description	Specify upper blocking distance UB.
User entry	0 to 200 m
Factory setting	<ul style="list-style-type: none"> ■ For coax probes: 0 mm (0 in) ■ For rod and rope probes up to 8 m (26 ft): 200 mm (8 in) ■ For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge

For FMP51/FMP52/FMP54 with the **Interface measurement** application package ⁸⁾ and for FMP55:
100 mm (3.9 in) for all antenna types


Additional information

Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
 - Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.


- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

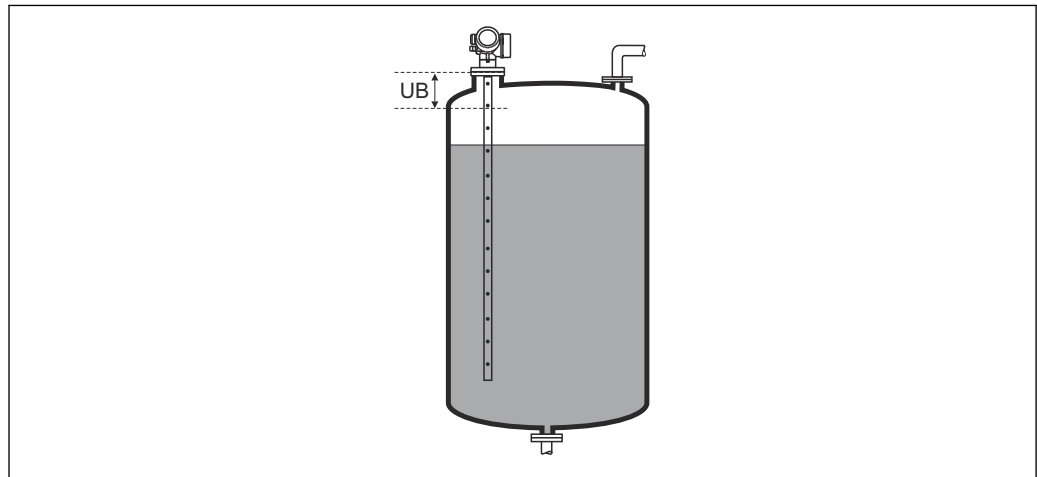









54 Blocking distance (UB) for liquid measurements


8) Ordering feature 540 "Application Package", option EB "Interface measurement"




"Probe settings" submenu

The **Probe settings** submenu helps to ensure that the device correctly assigns the end of probe signal within the envelope curve. The assignment is correct if the length of probe indicated by the device matches the actual length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium) over the entire length. For partially filled vessels and if the probe length is known, select **Confirm probe length** (→  188) = **Manual input** to enter the value manually.



-  If a mapping has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. There are two options if this occurs:
 - First delete the mapping curve using the **Record map** parameter (→  156) and the probe length correction can then be performed. After the probe length correction, a new mapping curve can be recorded using the **Record map** parameter (→  156).
 - Alternatively, select **Confirm probe length** (→  188) = **Manual input** and manually enter the probe length in the **Present probe length** parameter.
-  An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter (→  187).

Navigation   Setup → Advanced setup → Probe settings

Probe grounded 

Navigation	  Setup → Advanced setup → Probe settings → Probe grounded
Prerequisite	Operating mode (→  144) = Level
Description	Specify whether the probe is grounded.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Yes

Present probe length 

Navigation	 Setup → Advanced setup → Probe settings → Pres. length
Description	<ul style="list-style-type: none"> ▪ In most cases: Displays the length of the probe according to the currently measured end-of-probe signal. ▪ For Confirm probe length (→  188) = Manual input: Enter actual length of probe.
User entry	0 to 200 m

Confirm probe length
**Navigation**

Setup → Advanced setup → Probe settings → Confirm length

Description

Specify whether the value displayed in the **Present probe length** parameter matches the actual length of the probe. Based on this input, the device performs a probe length correction.

Selection

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

Additional information**Meaning of the options**

- **Probe length OK**
To be selected if the correct probe length is displayed. A correction is not required. The device exits the sequence.
- **Probe length too small**
To be selected if the displayed length is less than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe length too big**
To be selected if the displayed length is greater than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe covered**
To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case.
- **Manual input**
To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually in the **Present probe length** parameter.⁹⁾
- **Probe length unknown**
To be selected if the actual probe length is unknown. A probe length correction is impossible in this case.

9) When operating via FieldCare, the **Manual input** option does not need to be selected explicitly; manual editing of the probe length is always possible here.

"Probe length correction" wizard

The **Probe length correction** wizard is only available when operating via the local display. When operating via an operating tool, the parameters for probe length correction are located directly in the **Probe settings** submenu (→ 187).

Navigation

Setup → Advanced setup → Probe settings → Prob.length corr

Confirm probe length**Navigation**

Setup → Advanced setup → Probe settings → Prob.length corr → Confirm length

Description

Specify whether the value displayed in the **Present probe length** parameter matches the actual length of the probe. Based on this input, the device performs a probe length correction.

Selection

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

Additional information**Meaning of the options**

- **Probe length OK**
To be selected if the correct probe length is displayed. A correction is not required. The device exits the sequence.
- **Probe length too small**
To be selected if the displayed length is less than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe length too big**
To be selected if the displayed length is greater than the actual probe length. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe covered**
To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case.
- **Manual input**
To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually in the **Present probe length** parameter.¹⁰⁾
- **Probe length unknown**
To be selected if the actual probe length is unknown. A probe length correction is impossible in this case.

10) When operating via FieldCare, the **Manual input** option does not need to be selected explicitly; manual editing of the probe length is always possible here.

Present probe length

**Navigation**

Setup → Advanced setup → Probe settings → Prob.length corr → Pres. length



Description



- In most cases:
Displays the length of the probe according to the currently measured end-of-probe signal.
- For **Confirm probe length** (→ 188) = **Manual input**:
Enter actual length of probe.

User entry



0 to 200 m

"Switch output" submenu

 The **Switch output** submenu (→  191) is only available for devices with a switch output.¹¹⁾

Navigation   Setup → Advanced setup → Switch output

Switch output function**Navigation**

  Setup → Advanced setup → Switch output → Switch out funct






Description


Select function for switch output.

Selection



- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

Additional information**Meaning of the options**


- **Off**
The output is always open (non-conductive).
- **On**
The output is always closed (conductive).
- **Diagnostic behavior**
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  192) determines for which type of event the output is opened.
- **Limit**
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
 - **Assign limit** (→  192)
 - **Switch-on value** (→  193)
 - **Switch-off value** (→  194)
- **Digital Output**
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  191).

 The **Off** and **On** options can be used to simulate the switch output.

Assign status**Navigation**

  Setup → Advanced setup → Switch output → Assign status

Prerequisite

Switch output function (→  191) = **Digital Output**

Selection

- Off
- Digital output AD 1
- Digital output AD 2

11) Order code 020 "Power supply; output", option B, E or G

- Digital output 1
- Digital output 2
- Digital output 3
- Digital output 4
- Digital output 5
- Digital output 6
- Digital output 7
- Digital output 8

Additional information

The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostics Blocks. A switch signal generated in these blocks can be output via the switch output.

Assign limit**Navigation**

Setup → Advanced setup → Switch output → Assign limit

Prerequisite

Switch output function (→ 191) = Limit

Selection

- Off
- Level linearized
- Distance
- Interface linearized *
- Interface distance *
- Thickness upper layer *
- Terminal voltage
- Electronic temperature
- Measured capacitance *
- Relative echo amplitude
- Relative interface amplitude *
- Absolute echo amplitude
- Absolute interface amplitude *

Assign diagnostic behavior**Navigation**

Setup → Advanced setup → Switch output → Assign diag. beh

Prerequisite

Switch output function (→ 191) = Diagnostic behavior

Description

Select diagnostic behavior for switch output.

Selection

- Alarm
- Alarm or warning
- Warning

* Visibility depends on order options or device settings

Switch-on value
**Navigation**

Setup → Advanced setup → Switch output → Switch-on value

Prerequisite**Switch output function** (→ 191) = **Limit****Description**

Enter measured value for the switch-on point.

User entry


Signed floating-point number

Additional information

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

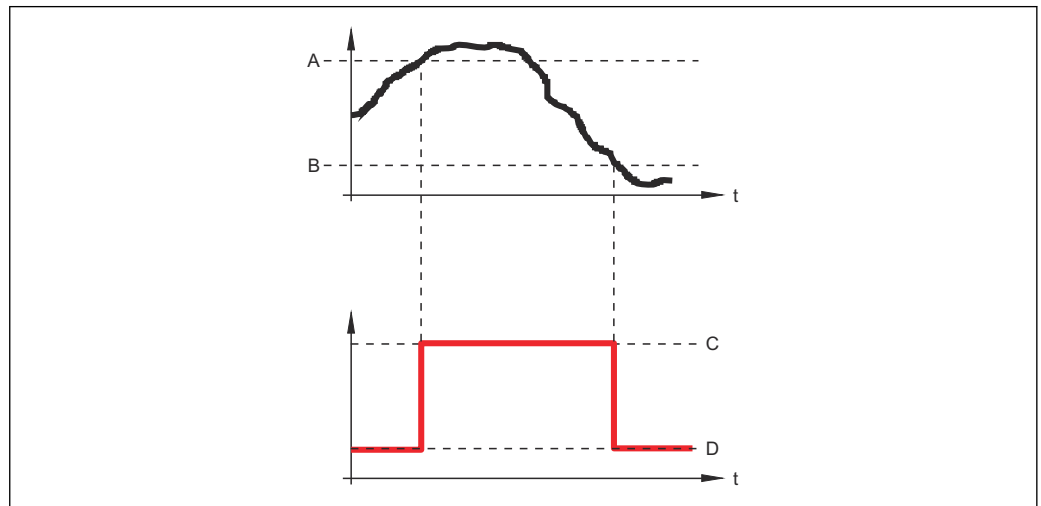


A0015585

- A *Switch-on value*
 B *Switch-off value*
 C *Output closed (conductive)*
 D *Output opened (non-conductive)*

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

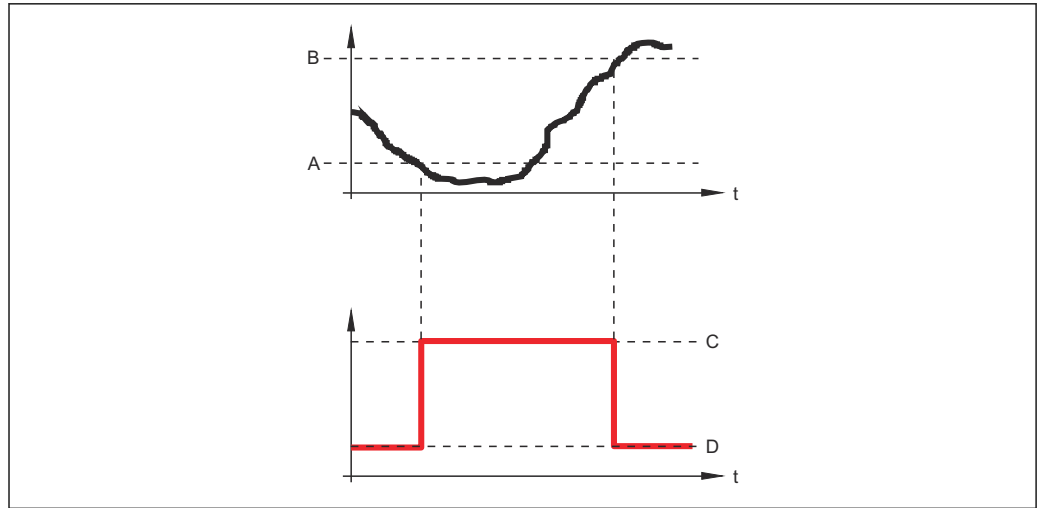

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



- Navigation** Setup → Advanced setup → Switch output → Switch-on delay
- Prerequisite**
 - **Switch output function** (→ 191) = **Limit**
 - **Assign limit** (→ 192) ≠ **Off**
- Description** Define delay for the switch-on of status output.
- User entry** 0.0 to 100.0 s

Switch-off value



- Navigation** Setup → Advanced setup → Switch output → Switch-off value
- Prerequisite** **Switch output function** (→ 191) = **Limit**
- Description** Enter measured value for the switch-off point.
- User entry** Signed floating-point number
- Additional information** The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters; description: see the **Switch-on value** parameter (→ 193).

Switch-off delay



Navigation	Setup → Advanced setup → Switch output → Switch-off delay
Prerequisite	<ul style="list-style-type: none"> ▪ Switch output function (→ 191) = Limit ▪ Assign limit (→ 192) ≠ Off
Description	Define delay for the switch-off of status output.
User entry	0.0 to 100.0 s

Failure mode



Navigation	Setup → Advanced setup → Switch output → Failure mode
Prerequisite	Switch output function (→ 191) = Limit or Digital Output
Description	Define output behavior in alarm condition.
Selection	<ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed

Additional information

Switch status

Navigation	Setup → Advanced setup → Switch output → Switch status
Description	Shows the current switch output status.

Invert output signal



Navigation	Setup → Advanced setup → Switch output → Invert outp.sig.
Description	Invert the output signal.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Yes

Additional information**Meaning of the options**■ **No**

The behavior of the switch output is as described above.

■ **Yes**

The states **Open** and **Closed** are inverted as compared to the description above.

"Display" submenu

Display submenu is only visible if a display module is connected to the device.

Navigation



Setup → Advanced setup → Display

Language**Navigation**

Setup → Advanced setup → Display → Language

Description

Set display language.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

The language selected in feature 500 of the product structure.
If no language has been selected: **English**

Additional information**Format display****Navigation**

Setup → Advanced setup → Display → Format display

Description


Select how measured values are shown on the display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values


* Visibility depends on order options or device settings

Additional information

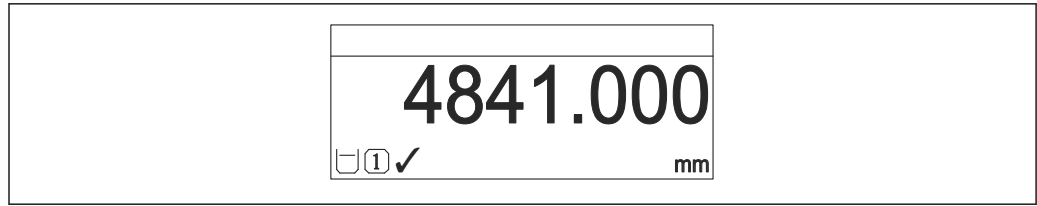


A0019963

55 "Format display" = "1 value, max. size"

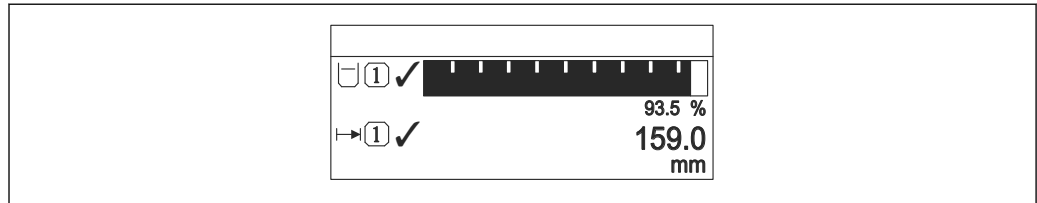


A0019964

56 "Format display" = "1 bargraph + 1 value"

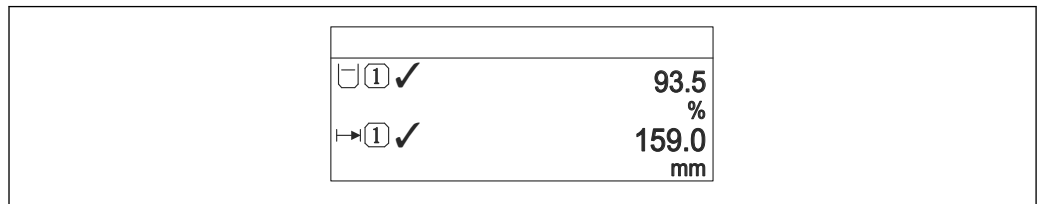


A0019965

57 "Format display" = "2 values"

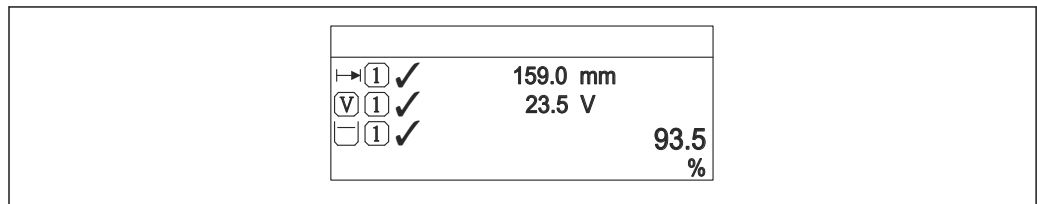

A0019966

58 "Format display" = "1 value large + 2 values"

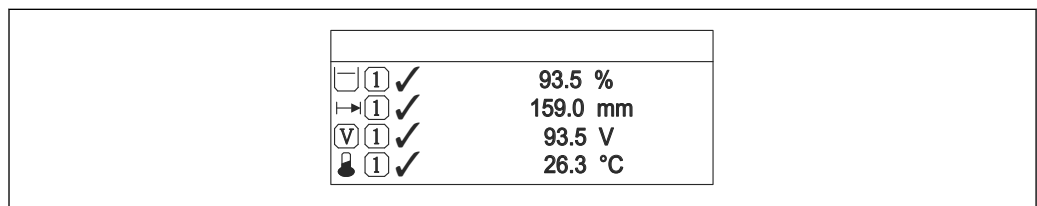

A0019968

59 "Format display" = "4 values"

- i
■
 The **Value 1 to 4 display** parameters are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 200).

Value 1 to 4 display


Navigation	Setup → Advanced setup → Display → Value 1 display
Description	Select the measured value that is shown on the local display.
Selection	<ul style="list-style-type: none"> ■ Level linearized ■ Distance ■ Interface linearized * ■ Interface distance * ■ Thickness upper layer * ■ Terminal voltage ■ Electronic temperature ■ Measured capacitance * ■ Analog output adv. diagnostics 1 ■ Analog output adv. diagnostics 2 ■ Analog output 1 ■ Analog output 2 ■ Analog output 3 ■ Analog output 4 ■ Analog output 5 ■ Analog output 6 ■ Analog output 7 ■ Analog output 8
Factory setting	<p>For level measurements</p> <ul style="list-style-type: none"> ■ Value 1 display: Level linearized ■ Value 2 display: Distance ■ Value 3 display: Current output 1 ■ Value 4 display: None <p>For interface measurements and one current output</p> <ul style="list-style-type: none"> ■ Value 1 display: Interface linearized ■ Value 2 display: Level linearized ■ Value 3 display: Thickness upper layer ■ Value 4 display: Current output 1 <p>For interface measurements and two current outputs</p> <ul style="list-style-type: none"> ■ Value 1 display: Interface linearized ■ Value 2 display: Level linearized ■ Value 3 display: Current output 1 ■ Value 4 display: Current output 2


Decimal places 1 to 4


Navigation	Setup → Advanced setup → Display → Decimal places 1
Description	Select the number of decimal places for the display value.

* Visibility depends on order options or device settings


Selection	<ul style="list-style-type: none"> ■ X ■ X.X ■ X.XX ■ X.XXX ■ X.XXXX
Additional information	The setting does not affect the measuring or computational accuracy of the device.

Display interval

Navigation	 Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Additional information	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.


Display damping




Navigation	 Setup → Advanced setup → Display → Display damping
Description	Set display reaction time to fluctuations in the measured value.
User entry	0.0 to 999.9 s

Header



Navigation	 Setup → Advanced setup → Display → Header
Description	Select header contents on local display.
Selection	<ul style="list-style-type: none"> ■ Device tag ■ Free text

Additional information

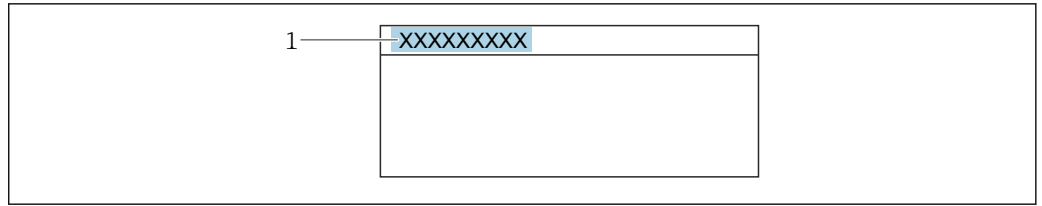

A0029422

1 Position of the header text on the display

Meaning of the options

- **Device tag**
Is defined in the **Device tag** parameter.
- **Free text**
Is defined in the **Header text** parameter (→ 201).

Header text 🔒

Navigation 🏠📄 Setup → Advanced setup → Display → Header text

Prerequisite **Header (→ 200) = Free text**

Description Enter display header text.

User entry Character string comprising numbers, letters and special characters (12)

Additional information The number of characters which can be displayed depends on the characters used.

Separator 🔒

Navigation 🏠📄 Setup → Advanced setup → Display → Separator

Description Select decimal separator for displaying numerical values.

- Selection**
- .
 - ,

Number format 🔒

Navigation 🏠📄 Setup → Advanced setup → Display → Number format

Description Choose number format for the display.

- Selection**
- Decimal
 - ft-in-1/16"

Additional information The **ft-in-1/16"** option is only valid for distance units.

Decimal places menu


Navigation	Setup → Advanced setup → Display → Dec. places menu
Description	Select number of decimal places for the representation of numbers within the operating menu.
Selection	<ul style="list-style-type: none"> ▪ X ▪ X.X ▪ X.XX ▪ X.XXX ▪ X.XXXX
Additional information	<ul style="list-style-type: none"> ▪ Is only valid for numbers in the operating menu (e.g. Empty calibration, Full calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the Decimal places 1 to 4 parameters ▪ This setting does not affect the accuracy of the device for measuring or calculating the value

Backlight





Navigation	Setup → Advanced setup → Display → Backlight
Prerequisite	The device has the SD03 local display (with optical keys).
Description	Switch the local display backlight on and off.
Selection	<ul style="list-style-type: none"> ▪ Disable ▪ Enable
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Disable Switches the backlight off. ▪ Enable Switches the backlight on. <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p>

Contrast display


Navigation	Setup → Advanced setup → Display → Contrast display
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
User entry	20 to 80 %
Factory setting	Dependent on the display.

Additional information



Setting the contrast via push-buttons:


- Darker: press the   buttons simultaneously.
- Brighter: press the   buttons simultaneously.

"Configuration backup display" submenu


 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.


 Configurations can only be exchanged between devices which are in the same operating mode (see the **Operating mode** parameter (→  144)).

Navigation  Setup → Advanced setup → Conf.backup disp


Operating time




Navigation	 Setup → Advanced setup → Conf.backup disp → Operating time
Description	Indicates how long the device has been in operation.
Additional information	<i>Maximum time</i> 9999 d (≈ 27 years)

Last backup


Navigation	 Setup → Advanced setup → Conf.backup disp → Last backup
Description	Indicates when the last data backup was saved to the display module.

Configuration management



Navigation	 Setup → Advanced setup → Conf.backup disp → Config. managem.
Description	Select action for managing the device data in the display module.
Selection	<ul style="list-style-type: none"> ▪ Cancel ▪ Execute backup ▪ Restore ▪ Duplicate ▪ Compare ▪ Clear backup data ▪ Display incompatible

Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Cancel No action is executed and the user exits the parameter. ▪ Execute backup A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. ▪ Restore The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. ▪ Duplicate The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are not included in the transmitted configuration: Medium type ▪ Compare The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the Comparison result parameter (→  205). ▪ Clear backup data The backup copy of the device configuration is deleted from the display module of the device. <p> While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.</p> <p> If an existing backup is restored to a different device using the Restore option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.</p> <p>In order to transmit a configuration to a different device, the Duplicate option should always be used.</p>
-------------------------------	--

Backup state

Navigation	 Setup → Advanced setup → Conf.backup disp → Backup state
Description	Displays which backup action is currently in progress.

Comparison result

Navigation	  Setup → Advanced setup → Conf.backup disp → Compar. result
Description	Comparison between present device data and display backup.

Additional information**Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

■ Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

■ Backup settings corrupt

The current configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.


■ Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.


■ Dataset incompatible

The data sets are incompatible and can not be compared.





To start the comparison, set **Configuration management** (→  204) = **Compare**.















If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  204) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.



"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code 

Navigation	  Setup → Advanced setup → Administration → Def. access code
Description	Define release code for write access to parameters.
User entry	0 to 9999
Additional information	<p> If the factory setting is not changed or if "0" is entered, the parameters are not write-protected and the device configuration data can therefore always be modified. The user is logged on in the "Maintenance" role.</p> <p> The write protection affects all parameters marked with the  symbol in the document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</p> <p> Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the Enter access code parameter (→  161).</p> <p> Please contact your Endress+Hauser Sales Center if you lose the access code.</p> <p> If operating via the local display: the new access code is only valid once it has been confirmed in the Confirm access code parameter (→  209).</p>

Device reset 

Navigation	<p> Setup → Advanced setup → Administration → Device reset</p> <p> Setup → Advanced setup → Administration → Device reset</p>
Selection	<ul style="list-style-type: none"> ■ Cancel ■ To fieldbus defaults ■ To factory defaults ■ To delivery settings ■ Of customer settings ■ To transducer defaults ■ Restart device
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Cancel No action ■ To factory defaults All parameters are reset to the order-code specific factory setting. ■ To delivery settings All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered. This option is only visible if customer specific settings have been ordered.

- **Of customer settings**

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.


- **To transducer defaults**


Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.


- **Restart device**

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard


 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Navigation  Setup → Advanced setup → Administration → Def. access code

Define access code 

Navigation  Setup → Advanced setup → Administration → Def. access code → Def. access code

Description →  207

Confirm access code 

Navigation  Setup → Advanced setup → Administration → Def. access code → Confirm code

Description Confirm the entered access code.

User entry 0 to 9999

17.4 "Diagnostics" menu

Navigation  Diagnostics


Actual diagnostics



Navigation  Diagnostics → Actual diagnos.

Description Displays current diagnostic message.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp



Previous diagnostics

Navigation  Diagnostics → Prev.diagnostics

Description Displays the last diagnostic message which has been active before the current message.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Operating time from restart

Navigation   Diagnostics → Time fr. restart

Description Displays the time the device has been in operation since the last device restart.

Operating time

Navigation   Diagnostics → Operating time

Description Indicates how long the device has been in operation.


Additional information *Maximum time*
9 999 d (≈ 27 years)

17.4.1 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

Diagnostics 1 to 5

Navigation

 Diagnostics → Diagnostic list → Diagnostics 1

Description

Display the current diagnostics messages with the highest to fifth-highest priority.


Additional information

The display consists of:


- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

Timestamp 1 to 5

Navigation

 Diagnostics → Diagnostic list → Timestamp 1 to 5

17.4.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation  Diagnostics → Event logbook

Filter options


Navigation

 Diagnostics → Event logbook → Filter options


Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)



Additional information



-  ▪ This parameter is only used for operation via the local display.
- The status signals are categorized according to NAMUR NE 107.

"Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  213). A maximum of 100 events are displayed in chronological order.


The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred



Navigation  Diagnostics → Event logbook → Event list

17.4.3 "Device information" submenu

Navigation  Diagnostics → Device info

Device tag

Navigation

-  Diagnostics → Device info → Device tag
-  Diagnostics → Device info → Device tag

Description



Enter tag for measuring point.

User interface



Character string comprising numbers, letters and special characters

Serial number

Navigation



-  Diagnostics → Device info → Serial number
-  Diagnostics → Device info → Serial number

Additional information

-  **Uses of the serial number**
 - To identify the device quickly, e.g. when contacting Endress+Hauser.
 - To obtain specific information on the device using the Device Viewer:
www.endress.com/deviceviewer
-  The serial number is also indicated on the nameplate.

Firmware version


Navigation

-  Diagnostics → Device info → Firmware version
-  Diagnostics → Device info → Firmware version



User interface

xx.yy.zz

Additional information



-  For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name

- Navigation**
-  Diagnostics → Device info → Device name
 -  Diagnostics → Device info → Device name

Order code





- Navigation**
-  Diagnostics → Device info → Order code
 -  Diagnostics → Device info → Order code

User interface Character string comprising numbers, letters and special characters

Additional information The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

Extended order code 1 to 3



- Navigation**
-  Diagnostics → Device info → Ext. order cd. 1
 -  Diagnostics → Device info → Ext. order cd. 1

Description Display the three parts of the extended order code.

User interface Character string comprising numbers, letters and special characters

Additional information The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

17.4.4 "Measured values" submenu

Navigation  Diagnostics → Measured val.

Distance


Navigation

 Diagnostics → Measured val. → Distance


Description


Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

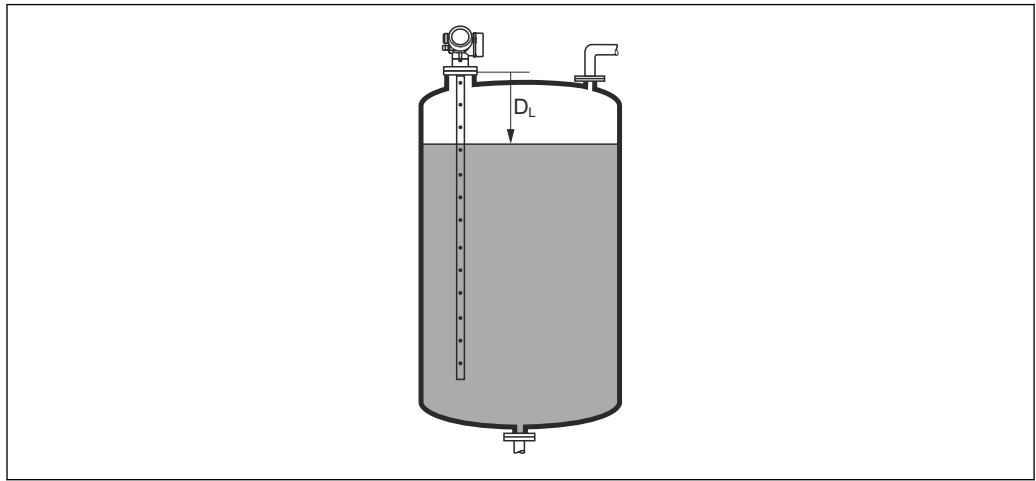




A0013198

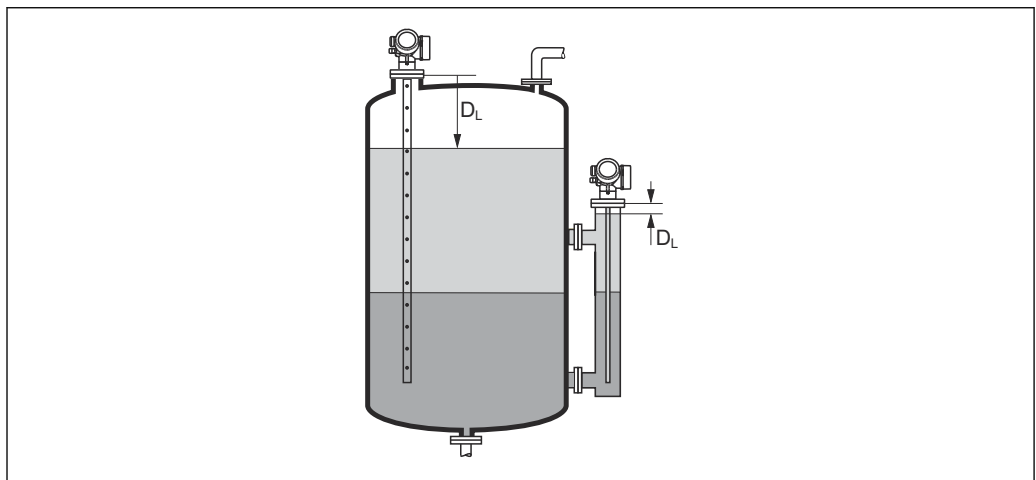 60 Distance for liquid measurements






A0013199




 61 Distance for interface measurements


 The unit is defined in the **Distance unit** parameter (→  144).

Level linearized

Navigation	  Diagnostics → Measured val. → Level linearized
Description	Displays linearized level.
Additional information	 <ul style="list-style-type: none"> ▪ This unit is defined by the Unit after linearization parameter. ▪ In the case of interface measurements, this parameter always refers to the total level.

Interface distance



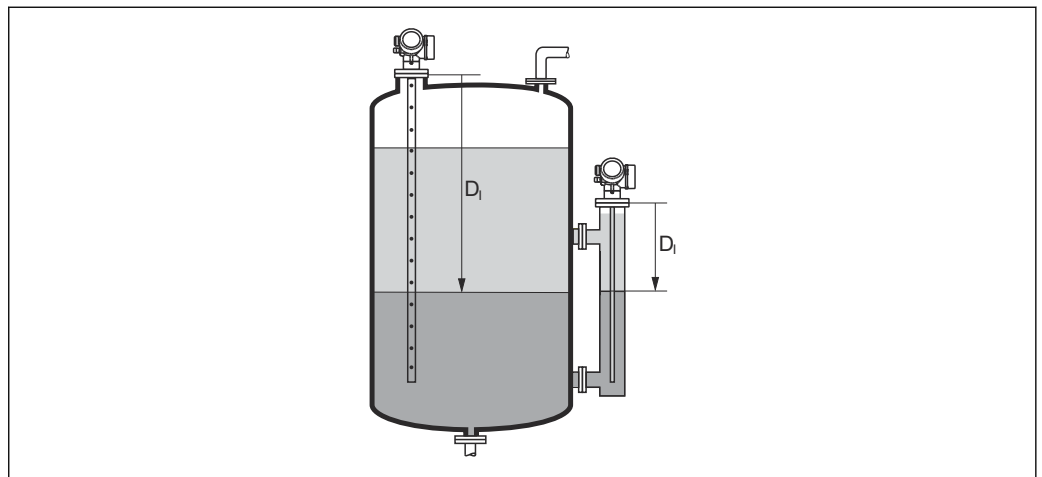

Navigation	  Diagnostics → Measured val. → Interface dist.
Prerequisite	Operating mode (→  144) = Interface or Interface with capacitance
Description	Displays the measured distance D_1 between the reference point (lower edge of flange or threaded connection) and the interface.

Additional information


A0013202

 The unit is defined in the **Distance unit** parameter (→  144).


Interface linearized

Navigation	  Diagnostics → Measured val. → Interf. lineariz
Prerequisite	Operating mode (→  144) = Interface or Interface with capacitance
Description	Displays the linearized interface height.
Additional information	 This unit is defined by the Unit after linearization parameter.

Thickness upper layer

Navigation
 Diagnostics → Measured val. → Thickn.upper.layer
Prerequisite
Operating mode (→  144) = **Interface** or **Interface with capacitance**
Description

Displays the upper interface thickness (UP).

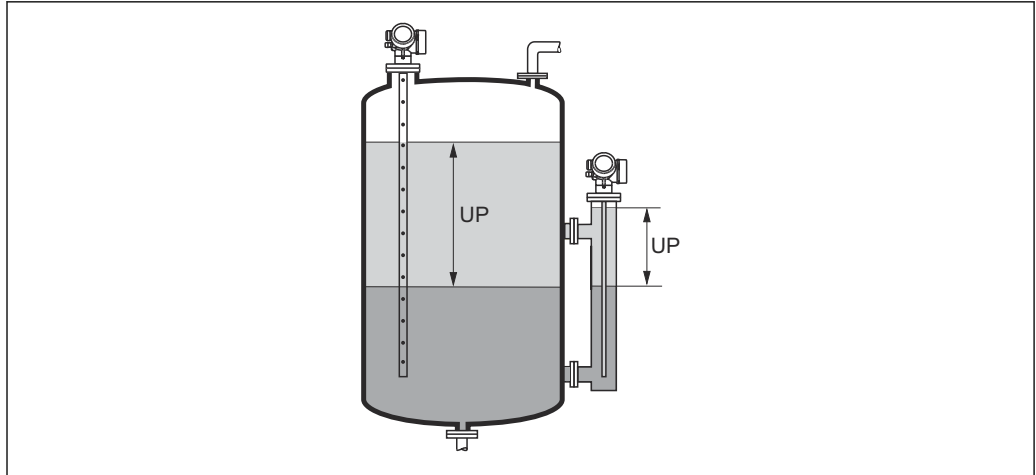
Additional information

A0013313


UP Thickness upper layer

 The unit is defined by the **Unit after linearization** parameter →  177.


Terminal voltage 1

Navigation
 Diagnostics → Measured val. → Terminal volt. 1
17.4.5 "Analog input 1 to 5" submenu


There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation

 Diagnostics → Analog inputs → Analog input 1 to 5

Block tag


Navigation Diagnostics → Analog inputs → Analog input 1 to 7 → Block tag**Description**

Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.

User entry

Character string comprising numbers, letters and special characters (32)

Channel


Navigation Diagnostics → Analog inputs → Analog input 1 to 7 → Channel**Description**

Use this function to select the input value that should be processed in the Analog Input function block.

Selection

- Uninitialized
- Level linearized
- Absolute echo amplitude
- Absolute EOP amplitude
- Absolute interface amplitude *
- Distance
- Electronic temperature
- EOP shift
- Interface linearized *
- Interface distance *
- Measured capacitance *
- Relative echo amplitude
- Relative interface amplitude *
- Noise of signal
- Terminal voltage
- Thickness upper layer *
- Calculated DC value *
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 1

Status

Navigation Diagnostics → Analog inputs → Analog input 1 to 7 → Status**Description**


Indicates the status of the output of the AI block according to the FOUNDATION Fieldbus specification.

* Visibility depends on order options or device settings

Value

Navigation Diagnostics → Analog inputs → Analog input 1 to 7 → Value**Description**Indicates the output value of the AI block.

Units index


Navigation Diagnostics → Analog inputs → Analog input 1 to 7 → Units index**Description**

Indicates the unit of the output value.

17.4.6 "Data logging" submenu

Navigation  Diagnostics → Data logging

Assign channel 1 to 4

Navigation  Diagnostics → Data logging → Assign chan. 1 to 4

- Selection
- Off
 - Level linearized
 - Distance
 - Unfiltered distance
 - Interface linearized *
 - Interface distance *
 - Unfiltered interface distance
 - Thickness upper layer *
 - Terminal voltage
 - Electronic temperature
 - Measured capacitance *
 - Absolute echo amplitude
 - Relative echo amplitude
 - Absolute interface amplitude *
 - Relative interface amplitude *
 - Absolute EOP amplitude
 - EOP shift
 - Noise of signal
 - Calculated DC value *
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2
 - Analog output 1
 - Analog output 2
 - Analog output 3
 - Analog output 4

Additional information A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

* Visibility depends on order options or device settings

Logging interval
**Navigation**

- Diagnostics → Data logging → Logging interval
- Diagnostics → Data logging → Logging interval

User entry

1.0 to 3 600.0 s

Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{\log} :

- If 1 logging channel is used: $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used: $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used: $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used: $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).

The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 10000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data
**Navigation**

- Diagnostics → Data logging → Clear logging
- Diagnostics → Data logging → Clear logging


Selection

- Cancel
- Clear data

"Display channel 1 to 4" submenu



i The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

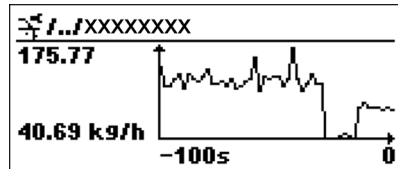The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.



- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.

i To return to the operating menu, press \oplus and \ominus simultaneously.

Navigation   Diagnostics → Data logging → Displ.channel 1 to 4

17.4.7 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.


Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> ▪ Assign measurement variable (→ 227) ▪ Process variable value (→ 227)
Specific state of the switch output	<ul style="list-style-type: none"> ▪ Switch output simulation (→ 227) ▪ Switch status (→ 228)
Existence of an alarm	Simulation device alarm (→ 228)

Enable/disable simulation

The simulation of measured values can be enabled or disabled via a hardware switch (SIM switch) at the electronics. Simulating a measured value is only possible if the SIM switch is in the ON position.


The switch output can always be simulated, irrespective of the position of the SIM switch.

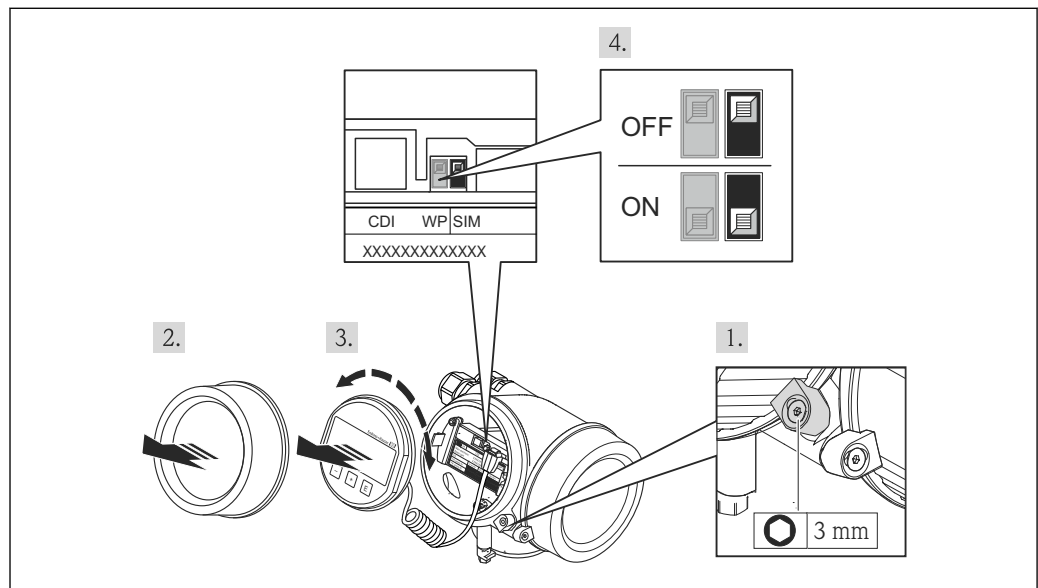

A00258B2

1. Loosen the securing clamp.
2. Unscrew the housing cover.


3. Pull out the display module with a gentle rotation movement. To make it easier to access the SIM switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

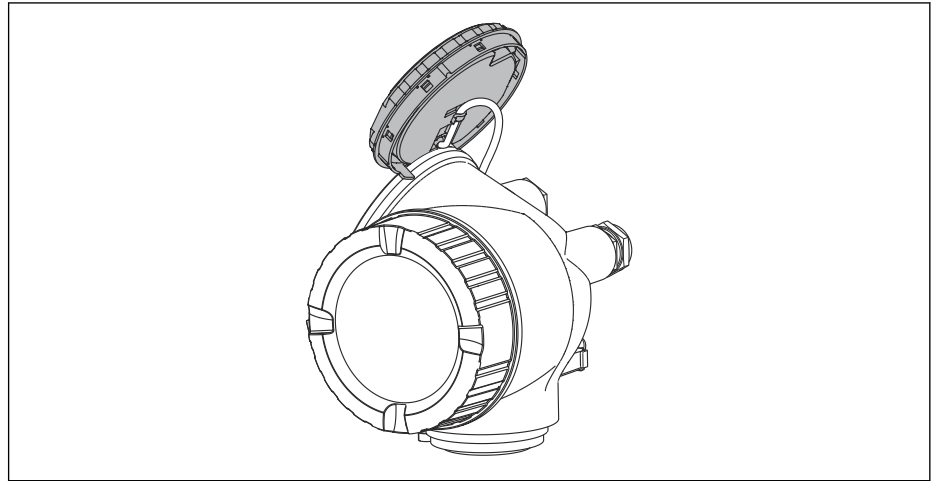






A0013909

4. SIM switch in the **ON** position: measured values can be simulated. SIM switch in the **OFF** position (factory setting): Simulation of measured values is disabled.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

Structure of the submenu


Navigation  Expert → Diagnostics → Simulation

▶ Simulation	
Assign measurement variable	→  227
Process variable value	→  227
Switch output simulation	→  227
Switch status	→  228
Simulation device alarm	→  228

Description of parameters

Navigation  Expert → Diagnostics → Simulation


Assign measurement variable

Navigation  Expert → Diagnostics → Simulation → Assign meas.var.


Selection


- Off
- Level
- Interface *
- Level linearized
- Interface linearized
- Thickness linearized

Additional information

- The value of the variable to be simulated is defined in the **Process variable value** parameter (→  227).
- If **Assign measurement variable** ≠ **Off**, a simulation is active. This is indicated by a diagnostic message of the *Function check (C)* category.

Process variable value

Navigation  Expert → Diagnostics → Simulation → Proc. var. value

Prerequisite **Assign measurement variable** (→  227) ≠ **Off**

User entry Signed floating-point number

Additional information Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

Switch output simulation

Navigation  Expert → Diagnostics → Simulation → Switch sim.

Description Switch the simulation of the switch output on and off.

Selection

- Off
- On

* Visibility depends on order options or device settings

Switch status
**Navigation**

Expert → Diagnostics → Simulation → Switch status

Prerequisite**Switch output simulation** (→ 227) = On**Description**

Select the status of the status output for the simulation.

Selection

- Open
- Closed

Additional information

The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

Simulation device alarm
**Navigation**

Expert → Diagnostics → Simulation → Sim. alarm

Description

Switch the device alarm on and off.

Selection

- Off
- On

Additional information

When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.

An active simulation is indicated by the **C484 Simulation failure mode** diagnostic message.

Diagnostic event simulation
Navigation

Expert → Diagnostics → Simulation → Diag. event sim.

Description

Select a diagnostic event to simulate this event.



Additional information

When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter).



17.4.8 "Device check" submenu

Navigation   Diagnostics → Device check



Start device check

Navigation	  Diagnostics → Device check → Start dev. check
Description	Start a device check.
Selection	<ul style="list-style-type: none"> ■ No ■ Yes
Additional information	In the case of a lost echo a device check can not be performed.



Result device check

Navigation	  Diagnostics → Device check → Result dev.check
Description	Displays the result of the device check.
Additional information	<p>Meaning of the display options</p> <ul style="list-style-type: none"> ■ Installation ok Measurement possible without restrictions. ■ Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes. ■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium. ■ Check not done No device check has been performed.



Last check time

Navigation	  Diagnostics → Device check → Last check time
Description	Displays the operating time at which the last device check has been performed.
User interface	Character string comprising numbers, letters and special characters




Level signal

Navigation	  Diagnostics → Device check → Level signal
Prerequisite	Device check has been performed.
Description	Displays result of the device check for the level signal.
User interface	<ul style="list-style-type: none"> ▪ Check not done ▪ Check not OK ▪ Check OK
Additional information	For Level signal = Check not OK : Check the mounting position of the device and the dielectric constant of the medium.


Launch signal

Navigation	  Diagnostics → Device check → Launch signal
Prerequisite	Device check has been performed.
Description	Displays result of the display check for the launch signal.
User interface	<ul style="list-style-type: none"> ▪ Check not done ▪ Check not OK ▪ Check OK
Additional information	For Launch signal = Check not OK : Check the mounting position of the device. In non-metallic vessels use a metal plate or a metal flange.

Interface signal

Navigation	  Diagnostics → Device check → Interface signal
Prerequisite	<ul style="list-style-type: none"> ▪ Operating mode (→  144) = Interface or Interface with capacitance ▪ Device check has been performed.
Description	Displays result of the device check for the interface signal.
User interface	<ul style="list-style-type: none"> ▪ Check not done ▪ Check not OK ▪ Check OK

17.4.9 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

Detailed description

SD01872F

Navigation  Diagnostics → Heartbeat

Index

A

- Access authorization to parameters
 - Read access 54
 - Write access 54
- Access code 54
 - Incorrect input 54
- Access status display (Parameter) 160
- Access status tooling (Parameter) 160
- Accessories
 - Communication-specific 128
 - Device-specific 116
 - Service-specific 128
 - System components 128
- Activate table (Parameter) 182
- Actual diagnostics (Parameter) 210
- Administration (Submenu) 207
- Advanced process conditions (Parameter) 164
- Advanced setup (Submenu) 160
- Analog input 1 to 5 (Submenu) 158, 218
- Application 10
- Assign channel 1 to 4 (Parameter) 221
- Assign diagnostic behavior (Parameter) 192
- Assign limit (Parameter) 192
- Assign measurement variable (Parameter) 227
- Assign status (Parameter) 191
- Automatic DC calculation (Wizard) 172

B

- Backlight (Parameter) 202
- Backup state (Parameter) 205
- Block tag (Parameter) 158, 219
- Blocking distance (Parameter) 165, 168, 185
- Bluetooth® wireless technology 53
- Bypass 28

C

- Calculated DC value (Parameter) 170
- Channel (Parameter) 158, 219
- Cleaning 113
- Clear logging data (Parameter) 222
- Coax probe
 - Design 13
- Coaxial probes
 - Lateral loading capacity 22
 - Shortening 37
- Comparison result (Parameter) 205
- Configuration backup display (Submenu) 204
- Configuration management (Parameter) 204
- Configuration of a level measurement 82, 92
- Configuration of an interface measurement 84, 93
- Configuring interface measurement 84, 93
- Configuring level measurement 82, 92
- Configuring the language 90
- Configuring the operating language 80
- Confirm access code (Parameter) 209
- Confirm distance (Parameter) 154, 157

- Confirm probe length (Parameter) 188, 189
- Context menu 64
- Contrast display (Parameter) 202
- Customer value (Parameter) 182

D

- Data logging (Submenu) 221
- DC value (Parameter) 152, 170, 172
- DC value lower medium (Parameter) 167
- Decimal places 1 (Parameter) 199
- Decimal places menu (Parameter) 202
- Define access code (Parameter) 207, 209
- Define access code (Wizard) 209
- Defining the access code 55
- Device check (Submenu) 229
- Device information (Submenu) 214
- Device name (Parameter) 215
- Device replacement 114
- Device reset (Parameter) 207
- Device tag (Parameter) 214
- Diagnostic event 107
 - In the operating tool 108
- Diagnostic event simulation (Parameter) 228
- Diagnostic events 106
- Diagnostic list 110
- Diagnostic list (Submenu) 212
- Diagnostic message 106
- Diagnostics
 - Symbols 106
- Diagnostics (Menu) 210
- Diagnostics 1 (Parameter) 212
- Diameter (Parameter) 179
- DIP switch
 - see Write protection switch
- Disable simulation 224
- Display (Submenu) 197
- Display and operating module FHX50 51
- Display channel 1 to 4 (Submenu) 223
- Display damping (Parameter) 200
- Display interval (Parameter) 200
- Display module 59
- Display symbols 60
- Disposal 115
- Distance (Parameter) 149, 157, 216
- Distance to upper connection (Parameter) 151
- Distance unit (Parameter) 144
- Document
 - Function 6
- Document function 6

E

- Electronics housing
 - Design 14
- Empty calibration (Parameter) 146
- Enable simulation 224
- Enter access code (Parameter) 161

- Envelope curve display 65
- Event history 110
- Event level
 - Explanation 106
 - Symbols 106
- Event list 110
- Event list (Submenu) 213
- Event logbook (Submenu) 213
- Event text 107
- Extended order code 1 (Parameter) 215
- Exterior cleaning 113

- F**
- Failure mode (Parameter) 195
- FHX50 51
- Field of application
 - Residual risks 10
- Filter options (Parameter) 213
- Filtering the event logbook 111
- Firmware version (Parameter) 214
- Flange 40
- Format display (Parameter) 197
- Free text (Parameter) 178
- Full calibration (Parameter) 147

- G**
- Gas phase compensation
 - Mounting the probe rod 38

- H**
- Hardware write protection 56
- Header (Parameter) 200
- Header text (Parameter) 201
- Heartbeat (Submenu) 231
- HistoROM (description) 96
- Housing
 - Design 14
 - Turning 42

- I**
- Input mask 62
- Intended use 10
- Interface (Parameter) 153
- Interface (Submenu) 167
- Interface distance (Parameter) 154, 217
- Interface linearized (Parameter) 179, 217
- Interface signal (Parameter) 230
- Intermediate height (Parameter) 180
- Invert output signal (Parameter) 195

- K**
- Keypad lock
 - Disabling 58
 - Enabling 58

- L**
- Language (Parameter) 197
- Last backup (Parameter) 204
- Last check time (Parameter) 229
- Launch signal (Parameter) 230

- Level (Parameter) 148, 182
- Level (Submenu) 162
- Level correction (Parameter) 166, 169
- Level linearized (Parameter) 179, 217
- Level signal (Parameter) 230
- Level unit (Parameter) 165, 168
- Linearization (Submenu) 174, 175, 176
- Linearization type (Parameter) 176
- Local display
 - see Diagnostic message
 - see In alarm condition
- Locking status 60
- Locking status (Parameter) 160
- Logging interval (Parameter) 222

- M**
- Maintenance 113
- Managing the device configuration 86, 96
- Manual thickness upper layer (Parameter) 169, 172
- Mapping (Wizard) 157
- Mapping end point (Parameter) 156, 157
- Maximum value (Parameter) 179
- Measured thickness upper layer (Parameter) 170
- Measured value symbols 61
- Measured values (Submenu) 216
- Media 10
- Medium group (Parameter) 145
- Medium property (Parameter) 162
- Medium type (Parameter) 162
- Menu
 - Diagnostics 210
 - Setup 144
- Mounting outside the vessel 31
- Mounting position for level measurements 18
- Mounting the probe 36

- N**
- Non-metal vessels 31
- Number format (Parameter) 201

- O**
- Onsite operation 51
- Operating elements
 - Diagnostic message 107
- Operating mode (Parameter) 144
- Operating module 59
- Operating time (Parameter) 204, 211
- Operating time from restart (Parameter) 211
- Operational safety 11
- Order code (Parameter) 215
- Output echo lost (Parameter) 184
- Overvoltage protection
 - General information 47

- P**
- Present mapping (Parameter) 155
- Present probe length (Parameter) 187, 190
- Previous diagnostics (Parameter) 210
- Probe grounded (Parameter) 187
- Probe length correction (Wizard) 189

Probe settings (Submenu)	187
Process property (Parameter)	163, 167
Process Value Filter Time (Parameter)	159
Process variable value (Parameter)	227
Product security	11

R

Ramp at echo lost (Parameter)	185
Read access	54
Record map (Parameter)	156, 157
Registered trademarks	9
Remedial measures	
Calling up	108
Closing	108
Repair concept	114
Replacing a device	114
Requirements for personnel	10
Result device check (Parameter)	229
Return	115
Rod probe	
Design	13
Rod probes	
Lateral loading capacity	21
Shortening	36
Rope probe	
Design	13
Rope probes	
Installation	40
Shortening	36
Tensile loading capacity	20

S

Safety instructions	
Basic	10
Safety settings (Submenu)	184
Securing coaxial probes	27
Securing rod probes	26
Securing rope probes	25
Separator (Parameter)	201
Serial number (Parameter)	214
Service interface (CDI)	52
Settings	
Managing the device configuration	86, 96
Operating language	80
Setup (Menu)	144
Signal quality (Parameter)	150
SIM switch	224
Simulation (Submenu)	226, 227
Simulation device alarm (Parameter)	228
Spare parts	115
Nameplate	115
Start device check (Parameter)	229
Status (Parameter)	219
Status signals	60, 106
Stilling well	28
Submenu	
Administration	207
Advanced setup	160
Analog input 1 to 5	158, 218

Configuration backup display	204
Data logging	221
Device check	229
Device information	214
Diagnostic list	212
Display	197
Display channel 1 to 4	223
Event list	110, 213
Event logbook	213
Heartbeat	231
Interface	167
Level	162
Linearization	174, 175, 176
Measured values	216
Probe settings	187
Safety settings	184
Simulation	226, 227
Switch output	191
Switch output (Submenu)	191
Switch output function (Parameter)	191
Switch output simulation (Parameter)	227
Switch status (Parameter)	195, 228
Switch-off delay (Parameter)	195
Switch-off value (Parameter)	194
Switch-on delay (Parameter)	194
Switch-on value (Parameter)	193
Symbols	
For correction	62
In the text and numeric editor	62
System components	128

T

Table mode (Parameter)	180
Table number (Parameter)	181
Tank level (Parameter)	151
Tank type (Parameter)	144
Terminal voltage 1 (Parameter)	218
Thermal insulation	33
Thickness upper layer (Parameter)	218
Threaded connection	39
Timestamp (Parameter)	210, 211
Timestamp 1 to 5 (Parameter)	212
Tool	35
Transmitter	
Turning the display	43
Turning the display module	43
Transmitter housing	
Turning	42
Troubleshooting	104
Tube diameter (Parameter)	145
Turning the display	43
Turning the display module	43

U

Underground tanks	30
Unit after linearization (Parameter)	177
Units index (Parameter)	220
Use calculated DC value (Parameter)	171, 172

Use of measuring instrument	
see Intended use	
Use of the measuring instruments	
Borderline cases	10
Incorrect use	10
V	
Value (Parameter)	220
Value 1 display (Parameter)	199
Value echo lost (Parameter)	184
W	
Wizard	
Automatic DC calculation	172
Define access code	209
Mapping	157
Probe length correction	189
Workplace safety	11
Write access	54
Write protection	
Via access code	55
Via write protection switch	56
Write protection switch	56



71664111

www.addresses.endress.com
