

Description of Device Parameters

Proline Promag 200

PROFIBUS PA

Electromagnetic flowmeter

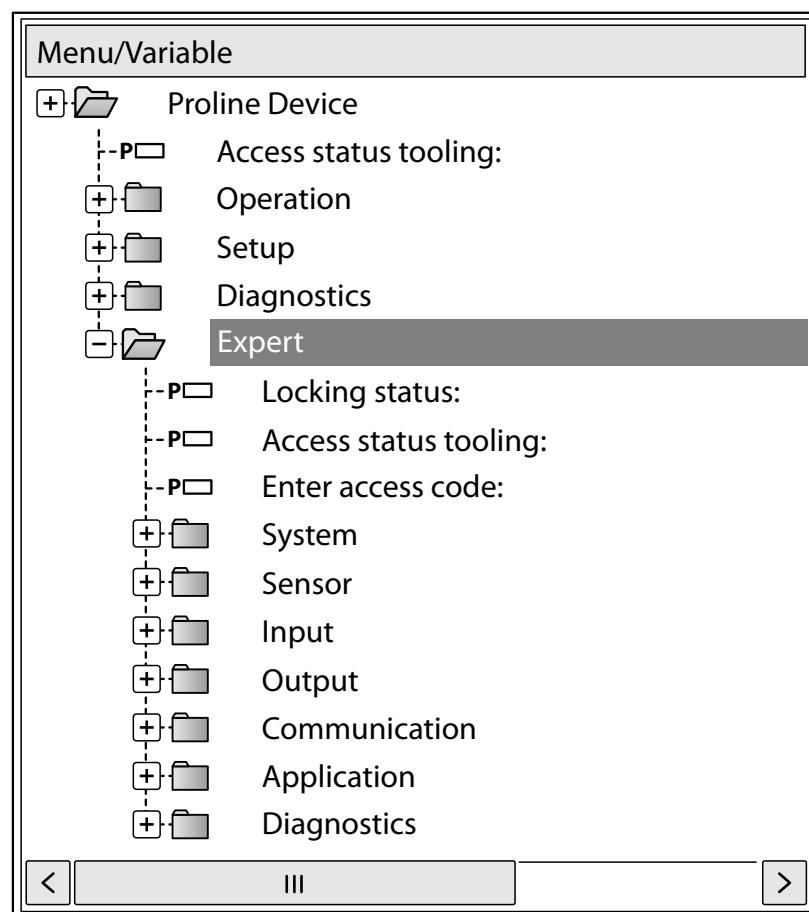


Table of contents

1 Document information	4	3.9.8 "Heartbeat" submenu	159	
1.1 Document function	4	3.9.9 "Simulation" submenu	159	
1.2 Target group	4	4 Country-specific factory settings .. 165		
1.3 Using this document	4	4.1 SI units	165	
1.3.1 Information on the document structure	4	4.1.1 System units	165	
1.3.2 Structure of a parameter description	6	4.1.2 Full scale values	165	
1.4 Symbols used	6	4.1.3 On value low flow cut off	165	
1.4.1 Symbols for certain types of information	6	4.2 US units	166	
1.4.2 Symbols in graphics	7	4.2.1 System units	166	
2 Overview of the Expert operating menu	8	4.2.2 Full scale values	166	
3 Description of device parameters ... 10		4.2.3 On value low flow cut off	167	
3.1 "System" submenu	13	5 Explanation of abbreviated units .. 168		
3.1.1 "Display" submenu	13	5.1 SI units	168	
3.1.2 "Configuration backup display" submenu	26	5.2 US units	168	
3.1.3 "Diagnostic handling" submenu	29	5.3 Imperial units	169	
3.1.4 "Administration" submenu	34	Index 170		
3.2 "Sensor" submenu	39			
3.2.1 "Measured values" submenu	39			
3.2.2 "System units" submenu	44			
3.2.3 "Process parameters" submenu	49			
3.2.4 "Calculated values" submenu	56			
3.2.5 "Sensor adjustment" submenu	57			
3.2.6 "Calibration" submenu	60			
3.3 "Output" submenu	61			
3.3.1 "Pulse/frequency/switch output" submenu	61			
3.4 "Communication" submenu	80			
3.4.1 "PROFIBUS PA configuration" submenu	80			
3.4.2 "PROFIBUS PA info" submenu	81			
3.4.3 "Physical block" submenu	83			
3.5 "Analog inputs" submenu	92			
3.5.1 "Analog input 1 to 2" submenu	93			
3.6 "Discrete inputs" submenu	106			
3.6.1 "Discrete input 1 to 2" submenu	106			
3.7 "Discrete outputs" submenu	113			
3.7.1 "Discrete output 1 to 3" submenu	113			
3.8 "Application" submenu	123			
3.8.1 "Totalizer 1 to 3" submenu	123			
3.9 "Diagnostics" submenu	136			
3.9.1 "Diagnostic list" submenu	139			
3.9.2 "Event logbook" submenu	143			
3.9.3 "Device information" submenu	145			
3.9.4 "I/O module" submenu	149			
3.9.5 "Display module" submenu	149			
3.9.6 "Data logging" submenu	150			
3.9.7 "Min/max values" submenu	155			

1 Document information

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document


1.3.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the **Expert** menu (→  8).

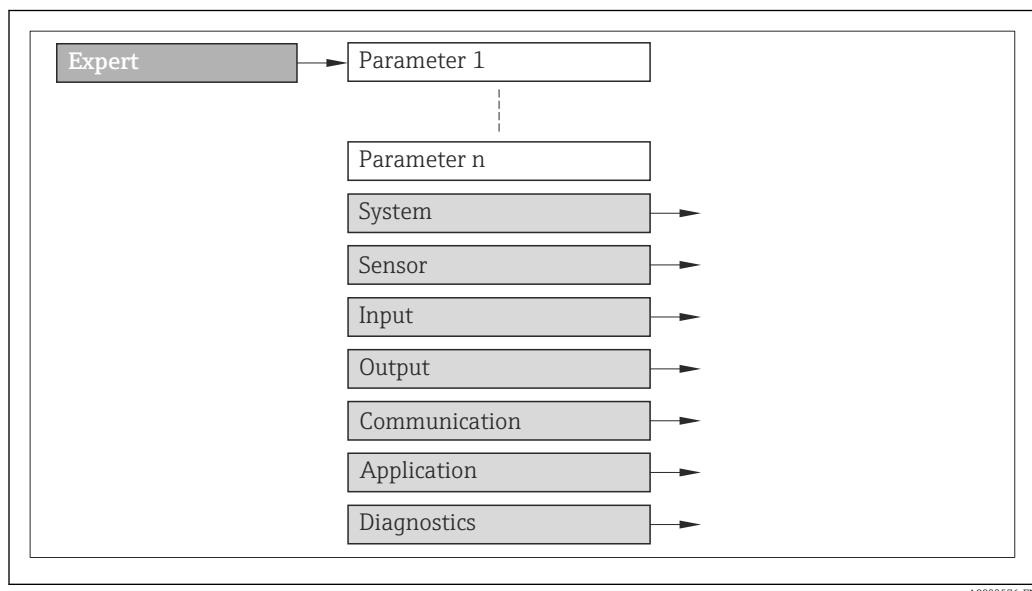

 1 *Sample graphic*

 For information on the arrangement of the parameters according to the structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu (→  136), along with a brief description, see the Operating Instructions for the device.

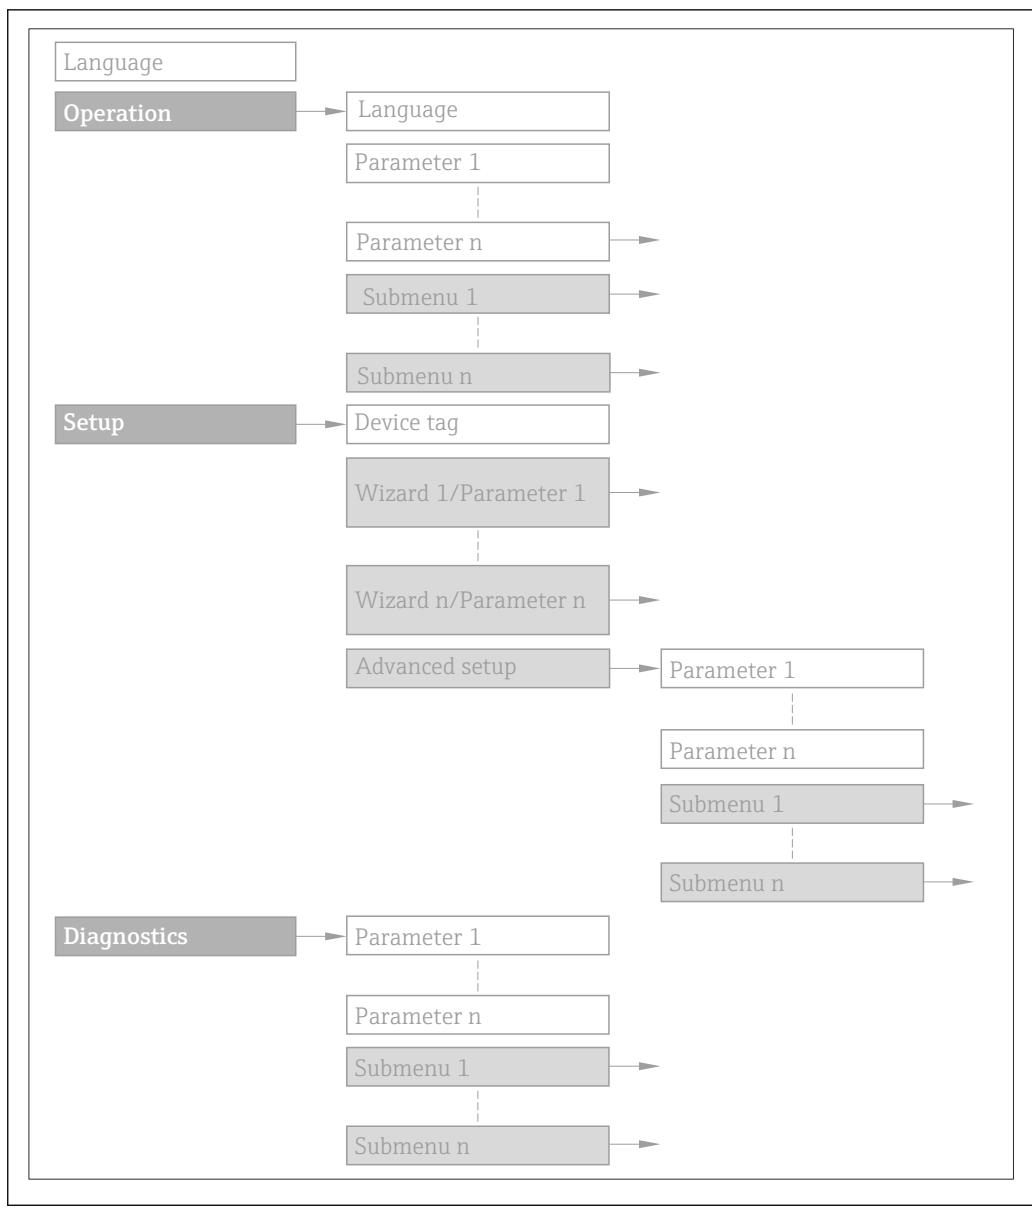

2 Sample graphic

 For information about the operating philosophy, see the "Operating philosophy" chapter in the device's Operating Instructions

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter = 
Navigation	 Navigation path to the parameter via the local display (direct access code)  Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Options	List of the individual options for the parameter <ul style="list-style-type: none"> ▪ Option 1 ▪ Option 2
User entry	Input range for the parameter
User interface	User interface value/data for parameter
Factory setting	Default setting ex works
Additional information	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> ▪ On individual options ▪ On display values/data ▪ On the input range ▪ On the factory setting ▪ On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

Expert	
Direct access (0106)	→ 10
Locking status (0004)	→ 11
Access status display (0091)	→ 11
Enter access code (0092)	→ 13
 System	→ 13
► Display	→ 13
► Configuration backup display	→ 26
► Diagnostic handling	→ 29
► Administration	→ 34
 Sensor	→ 39
► Measured values	→ 39
► System units	→ 44
► Process parameters	→ 49
► Calculated values	→ 56
► Sensor adjustment	→ 57
► Calibration	→ 60
 Output	→ 61
► Pulse/frequency/switch output	→ 61
 Communication	→ 80
► PROFIBUS PA configuration	→ 80

▶ PROFIBUS PA info	→ 81
▶ Physical block	→ 83
▶ Analog inputs	→ 92
▶ Analog input 1 to 2	→ 93
▶ Discrete inputs	→ 106
▶ Discrete input 1 to 2	→ 106
▶ Discrete outputs	→ 113
▶ Discrete output 1 to 3	→ 113
▶ Application	→ 123
▶ Totalizer 1 to 3	→ 123
▶ Diagnostics	→ 136
Actual diagnostics (0691)	→ 137
Previous diagnostics (0690)	→ 138
Operating time from restart (0653)	→ 139
Operating time (0652)	→ 139
▶ Diagnostic list	→ 139
▶ Event logbook	→ 143
▶ Device information	→ 145
▶ I/O module	→ 149
▶ Display module	→ 149
▶ Data logging	→ 150
▶ Min/max values	→ 155
▶ Heartbeat	→ 159
▶ Simulation	→ 159

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert	
Direct access (0106)	→ 10
Locking status (0004)	→ 11
Access status display (0091)	→ 11
Enter access code (0092)	→ 13
▶ System	→ 13
▶ Sensor	→ 39
▶ Output	→ 61
▶ Communication	→ 80
▶ Analog inputs	→ 92
▶ Discrete inputs	→ 106
▶ Discrete outputs	→ 113
▶ Application	→ 123
▶ Diagnostics	→ 136

Direct access



Navigation

Expert → Direct access (0106)

Description

Input of the access code to enable direct access to the desired parameter via the local display. For this reason, each parameter is assigned a parameter number that appears on the right in the header of the selected parameter in the navigation view.

User entry

0 to 65 535

Additional information*User entry*

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1



- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Input of 0914 → **Assign process variable** parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Input of 0914-3 → **Assign process variable** parameter

Locking status**Navigation**

Expert → Locking status (0004)

Description

Use this function to view the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information*Display*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display.

In the operating tool all active types of write protection are selected.



If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→ 11).

"Hardware locked" option (priority 1)

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters (e.g. via local display or operating tool).



Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

"Temporarily locked" option (priority 3)

Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

Access status display**Navigation**

Expert → Access stat.disp (0091)

Prerequisite

A local display is provided.

Description

Use this function to view the access authorization to the parameters via the local display.

User interface	<ul style="list-style-type: none">▪ Operator▪ Maintenance
Factory setting	Operator
Additional information	<p><i>Description</i></p> <p>If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.</p> <p> The access authorization can be modified via the Enter access code parameter (→  13).</p> <p> For information on the Enter access code parameter (→  13), see the "Disabling write protection via access code" section of the Operating Instructions for the device</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  11).</p>
	<p><i>User interface</i></p> <p> Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.</p>

Access status tooling

Navigation	 Expert → Access stat.tool (0005)
Description	Use this function to view the access authorization to the parameters via the operating tool.
User interface	<ul style="list-style-type: none">▪ Operator▪ Maintenance
Factory setting	Maintenance
Additional information	<p><i>Description</i></p> <p> The access authorization can be modified via the Enter access code parameter (→  13).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  11).</p>
	<p><i>Display</i></p> <p> Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.</p>


Enter access code

Navigation	Expert → Ent. access code (0092)
Description	Use this function to enter the user-specific release code to remove parameter write protection on the local display.
User entry	0 to 9 999


Enter access code

Navigation	Expert → Ent. access code (0003)
Description	Use this function to enter the user-specific release code to remove parameter write protection in the operating tool.
User entry	0 to 9 999

3.1 "System" submenu

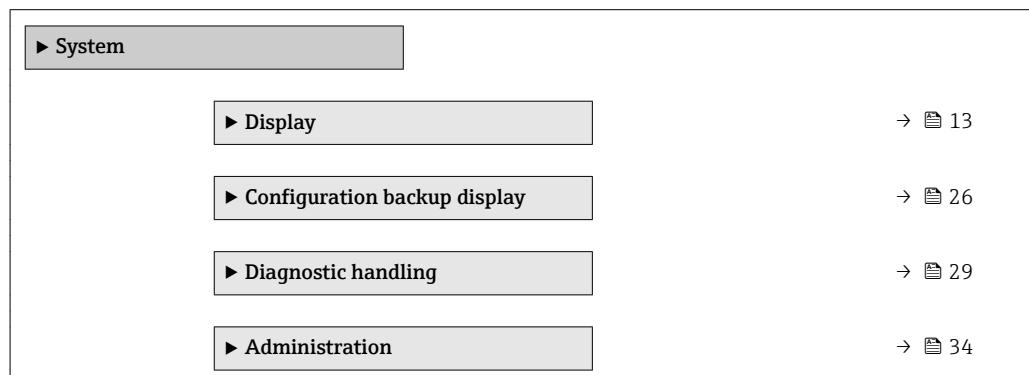Navigation Expert → System

3.1.1 "Display" submenu

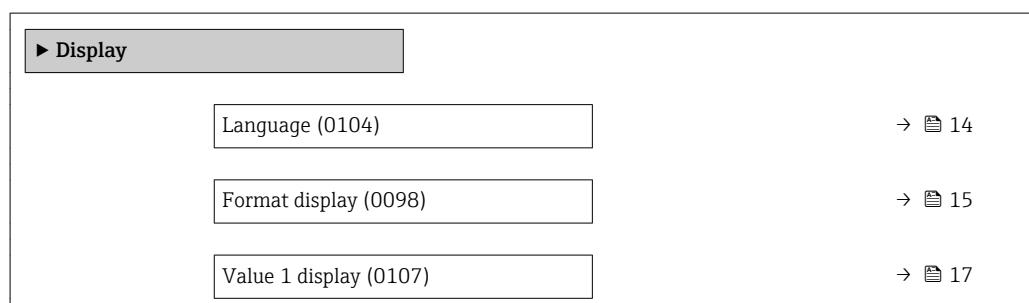Navigation Expert → System → Display

0% bargraph value 1 (0123)	→ 17
100% bargraph value 1 (0125)	→ 18
Decimal places 1 (0095)	→ 18
Value 2 display (0108)	→ 18
Decimal places 2 (0117)	→ 19
Value 3 display (0110)	→ 19
0% bargraph value 3 (0124)	→ 20
100% bargraph value 3 (0126)	→ 20
Decimal places 3 (0118)	→ 21
Value 4 display (0109)	→ 21
Decimal places 4 (0119)	→ 22
Display interval (0096)	→ 22
Display damping (0094)	→ 23
Header (0097)	→ 23
Header text (0112)	→ 24
Separator (0101)	→ 24
Contrast display (0105)	→ 24
Backlight (0111)	→ 25
Access status display (0091)	→ 25

Language

Navigation

Expert → System → Display → Language (0104)

Prerequisite

A local display is provided.

Description

Use this function to select the configured language on the local display.

Selection

- English *
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- العربية (Arabic) *
- Bahasa Indonesia *
- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

English (alternatively, the ordered language is preset in the device)

Format display**Navigation**

 Expert → System → Display → Format display (0098)

Prerequisite

A local display is provided.

Description

Use this function to select how the measured value is shown on the local display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting

1 value, max. size

Additional information*Description*

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.



- The **Value 1 display** parameter (→  17)...**Value 4 display** parameter (→  21) parameters are used to specify which measured values are shown on the display and in which order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter (→  22) parameter.

Possible measured values shown on the local display:


* Visibility depends on order options or device settings

"1 value, max. size" option




A0016529

"1 bargraph + 1 value" option

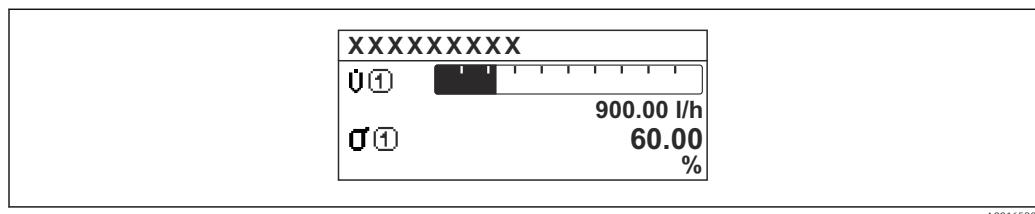

A0016530


"2 values" option

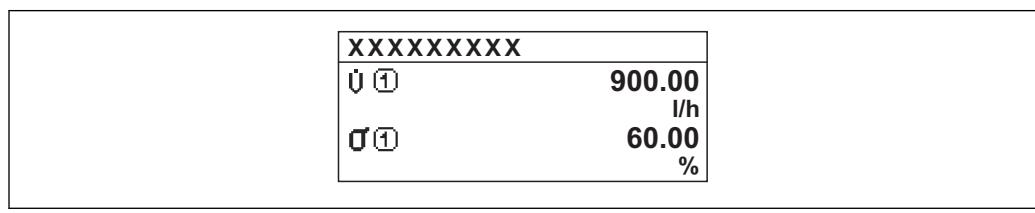

A0016531


■ 3

"1 value large + 2 values" option

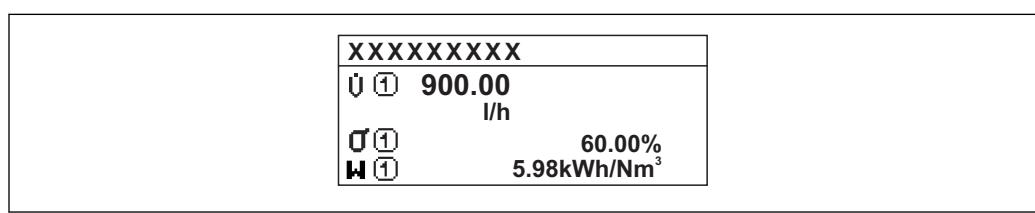

A0016532

"4 values" option

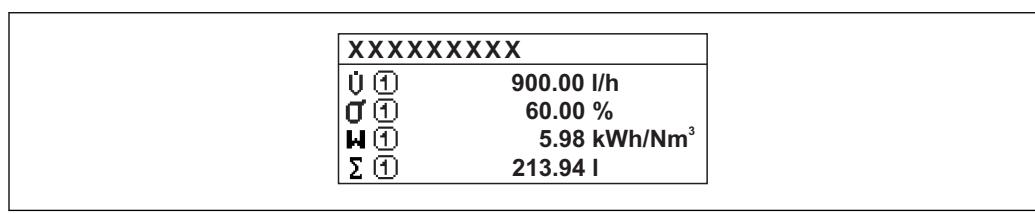

A0016533

Value 1 display

Navigation	Expert → System → Display → Value 1 display (0107)
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values to be shown on the local display.
Selection	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3
Factory setting	Volume flow
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Selection</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 44).</p>

0% bargraph value 1

Navigation	Expert → System → Display → 0% bargraph 1 (0123)
Prerequisite	A local display is provided.
Description	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Country-specific: <ul style="list-style-type: none"> ■ 0 l/h ■ 0 gal/min (us)
Additional information	<p><i>Description</i></p> <p> The Format display parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.</p> <p><i>User entry</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 44).</p>

100% bargraph value 1



Navigation

Expert → System → Display → 100% bargraph 1 (0125)

Prerequisite

A local display is provided.

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter → [165](#)

Additional information

Description

The **Format display** parameter (→ [15](#)) is used to specify that the measured value is to be displayed as a bar graph.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ [44](#)).

Decimal places 1



Navigation

Expert → System → Display → Decimal places 1 (0095)

Prerequisite

A measured value is specified in the **Value 1 display** parameter (→ [17](#)).

Description

Use this function to select the number of decimal places for measured value 1.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information

Description

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 2 display



Navigation

Expert → System → Display → Value 2 display (0108)

Prerequisite

A local display is provided.

Description	Use this function to select one of the measured values to be shown on the local display.
Selection	Picklist see Value 1 display parameter (→ 17)
Factory setting	None
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Selection</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 44).</p>

Decimal places 2



Navigation	 Expert → System → Display → Decimal places 2 (0117)
Prerequisite	A measured value is specified in the Value 2 display parameter (→ 18).
Description	Use this function to select the number of decimal places for measured value 2.
Selection	<ul style="list-style-type: none"> <input type="checkbox"/> X <input type="checkbox"/> X.X <input type="checkbox"/> X.XX <input type="checkbox"/> X.XXX <input type="checkbox"/> X.XXXX
Factory setting	x.xx
Additional information	<p><i>Description</i></p> <p> This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.</p>

Value 3 display



Navigation	 Expert → System → Display → Value 3 display (0110)
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values to be shown on the local display.
Selection	Picklist see Value 1 display parameter (→ 17)
Factory setting	None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

0% bargraph value 3**Navigation**

  Expert → System → Display → 0% bargraph 3 (0124)

Prerequisite

A selection has been made in the **Value 3 display** parameter (→ 19).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 l/h
- 0 gal/min (us)

Additional information*Description*

 The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

 The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

100% bargraph value 3**Navigation**

  Expert → System → Display → 100% bargraph 3 (0126)

Prerequisite

An option has been selected in the **Value 3 display** parameter (→ 19).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

0

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

Decimal places 3**Navigation**

Expert → System → Display → Decimal places 3 (0118)

Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 19).

Description

Use this function to select the number of decimal places for measured value 3.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 4 display**Navigation**

Expert → System → Display → Value 4 display (0109)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

Picklist see **Value 1 display** parameter (→ 17)

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

Decimal places 4

Navigation	  Expert → System → Display → Decimal places 4 (0119)
Prerequisite	A measured value is specified in the Value 4 display parameter (→ 21).
Description	Use this function to select the number of decimal places for measured value 4.
Selection	<ul style="list-style-type: none">■ X■ X.X■ X.XX■ X.XXX■ X.XXXX
Factory setting	x.xx
Additional information	<i>Description</i>  This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Display interval


Navigation	  Expert → System → Display → Display interval (0096)
Prerequisite	A local display is provided.
Description	Use this function to enter the length of time the measured values are displayed if the values alternate on the display.
User entry	1 to 10 s
Factory setting	5 s
Additional information	<i>Description</i> This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.  ▪ The Value 1 display parameter (→ 17)... Value 4 display parameter (→ 21) are used to specify which measured values are shown on the display. ▪ The display format of the displayed measured values is specified using the Format display parameter (→ 15).

Display damping

Navigation	Expert → System → Display → Display damping (0094)
Prerequisite	A local display is provided.
Description	Use this function to enter the reaction time of the local display to fluctuations in the measured value caused by process conditions.
User entry	0.0 to 999.9 s
Factory setting	0.0 s
Additional information	<p><i>User entry</i></p> <p>A time constant is entered:</p> <ul style="list-style-type: none"> ▪ If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables. ▪ On the other hand, the display reacts more slowly if a high time constant is entered.

Header

Navigation	Expert → System → Display → Header (0097)
Prerequisite	A local display is provided.
Description	Use this function to select the contents of the header of the local display.
Selection	<ul style="list-style-type: none"> ▪ Device tag ▪ Free text
Factory setting	Device tag
Additional information	<p><i>Description</i></p> <p>The header text only appears during normal operation.</p>

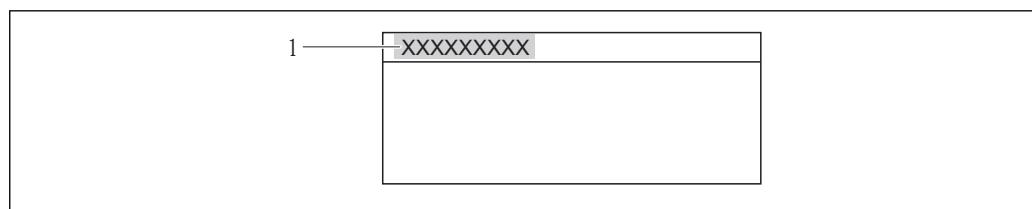

A0013375

1 Position of the header text on the display

Selection

- Device tag
Is defined in the **Device tag** parameter (→ 146).
- Free text
Is defined in the **Header text** parameter (→ 24).

Header text**Navigation**

Expert → System → Display → Header text (0112)

PrerequisiteThe **Free text** option is selected in the **Header** parameter (→ 23).**Description**

Use this function to enter a customer-specific text for the header of the local display.


User entry

Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Additional information*Description*

The header text only appears during normal operation.

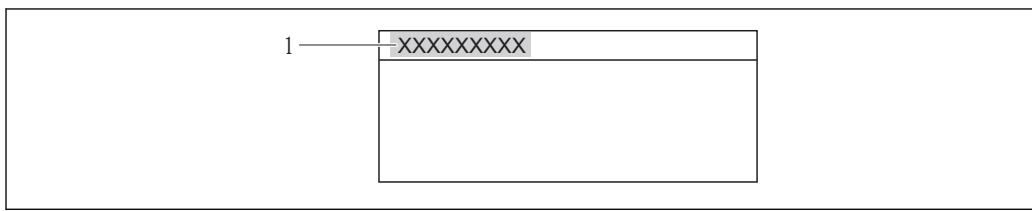

A0013375

1 Position of the header text on the display

User entry

The number of characters displayed depends on the characters used.

Separator**Navigation**

Expert → System → Display → Separator (0101)

Prerequisite

A local display is provided.

Description

Use this function to select the decimal separator.

Selection

- . (point)
- , (comma)

Factory setting

. (point)

Contrast display**Navigation**

Expert → System → Display → Contrast display (0105)

Prerequisite

A local display is provided.

Description	Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).
User entry	20 to 80 %
Factory setting	Depends on the display
Additional information	<p><i>Set the contrast via the push-buttons:</i></p> <ul style="list-style-type: none"> ■ Brighter: Press and hold down the   keys simultaneously. ■ Darker: Press and hold down the   keys simultaneously.

Backlight

Navigation	  Expert → System → Display → Backlight (0111)
Prerequisite	Order code for "Display; operation", option E "SD03 4-line, illum.; touch control + data backup function"
Description	Option for switching the backlight of the local display on and off.
Selection	<ul style="list-style-type: none"> ■ Disable ■ Enable
Factory setting	Disable

Access status display

Navigation	  Expert → System → Display → Access stat.disp (0091)
Prerequisite	A local display is provided.
Description	Use this function to view the access authorization to the parameters via the local display.
User interface	<ul style="list-style-type: none"> ■ Operator ■ Maintenance
Factory setting	Operator
Additional information	<p><i>Description</i></p> <p>If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.</p> <p> The access authorization can be modified via the Enter access code parameter (→  13).</p> <p> For information on the Enter access code parameter (→  13), see the "Disabling write protection via access code" section of the Operating Instructions for the device</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  11).</p>


User interface

Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

3.1.2 "Configuration backup display" submenu

Navigation

Expert → System → Conf.backup disp

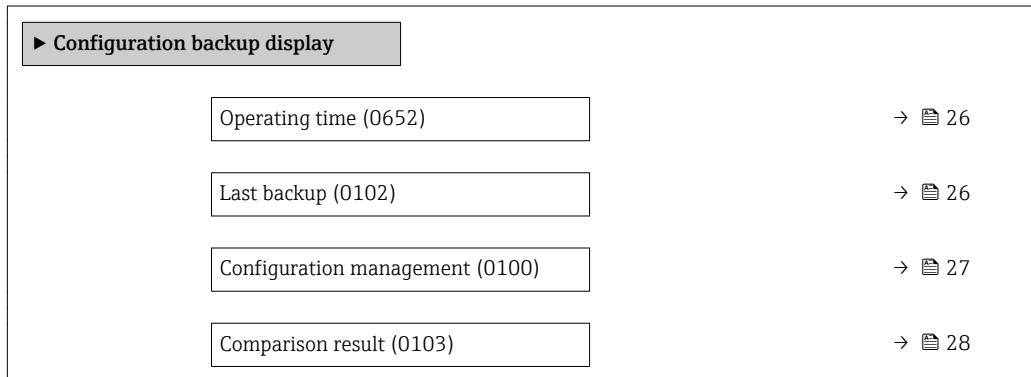

Operating time

Navigation

Expert → System → Conf.backup disp → Operating time (0652)

Description

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

User interface

The maximum number of days is 9999, which is equivalent to 27 years.

Last backup

Navigation

Expert → System → Conf.backup disp → Last backup (0102)

Prerequisite

A local display is provided.

Description

Use this function to display the time since a backup copy of the data was last saved to the display module.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Configuration management

Navigation Expert → System → Conf.backup disp → Config. managem. (0100)

Prerequisite A local display is provided.

Description Use this function to select an action to save the data to the display module.

- Selection**
- Cancel
 - Execute backup
 - Restore
 - Duplicate
 - Compare
 - Clear backup data

Factory setting Cancel

Additional information *Description*
Configuration via the local display is disabled while the action is performed.
 For information on the status message in the operating tool, see the **Backup state** parameter (→ 28)

Selection

- Cancel
No action is executed and the user exits the parameter.
- Execute backup
 - A backup copy of the current device configuration in the HistoROM is saved to the display module of the device. The backup copy includes the transmitter data of the device.
 - The following message appears on local display: Backup active, please wait!
- Restore
 - The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter data of the device.
 - The following message appears on local display: Restore active! Do not interrupt power supply!
- Duplicate
 - The transmitter configuration from another device is duplicated to the device using the display module.
 - The following message appears on local display: Copy active! Do not interrupt power supply!
- Compare
 - The device configuration saved in the display module is compared to the current device configuration of the HistoROM.
 - The following message appears on local display: Comparing files
 - The result can be viewed in the **Comparison result** parameter (→ 28).
- Clear backup data
 - The backup copy of the device configuration is deleted from the display module of the device.
 - The following message appears on local display: Deleting file

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

Backup state

Navigation	 Expert → System → Conf.backup disp → Backup state (0121)
Prerequisite	A local display is provided.
Description	Use this function to view the status of the data backup process.
User interface	<ul style="list-style-type: none">■ None■ Store in progress■ Restore in progress■ Import in progress■ Delete in progress■ Compare in progress
Factory setting	None

Comparison result

Navigation	  Expert → System → Conf.backup disp → Compar. result (0103)
Prerequisite	A local display is provided.
Description	Use this function to view the last result of comparing the current device configuration to the backup copy in the display module.
User interface	<ul style="list-style-type: none">■ Settings identical■ Settings not identical■ No backup available■ Backup settings corrupt■ Check not done■ Dataset incompatible
Factory setting	Check not done
Additional information	<i>Description</i>  The comparison is started via the Compare option in the Configuration management parameter (→  27).

Selection

- Settings identical
 - The current device configuration of the HistoROM is identical to the backup copy in the display module.
 - If the transmitter configuration of another device has been copied to the device via the display module and the **Duplicate** option in the **Configuration management** parameter (→ 27), the current device configuration of the HistoROM only partly matches the backup copy in the display module: The settings for the transmitter are not identical.
- Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.
- No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.
- Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.
- Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.
- Dataset incompatible

The backup copy in the display module is not compatible with the device.


HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.1.3 "Diagnostic handling" submenu

Navigation

Expert → System → Diagn. handling

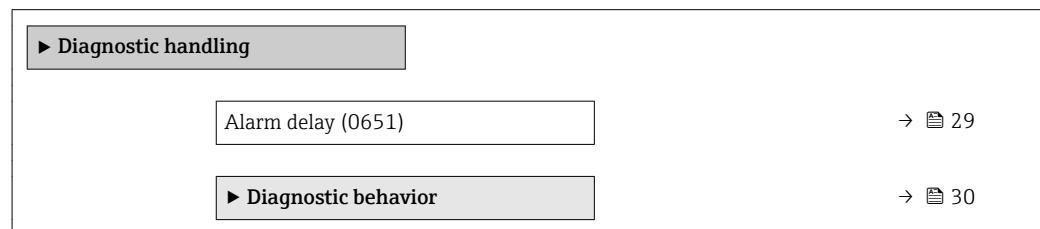

Alarm delay
**Navigation**

Expert → System → Diagn. handling → Alarm delay (0651)

Description

Use this function to enter the time interval until the device generates a diagnostic message.



The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting 0 s

Additional information *Description*

This setting affects the following diagnostic messages:

- 832 Electronic temperature too high
- 833 Electronic temperature too low

"Diagnostic behavior" submenu

 For a list of all the diagnostic events, see the Operating Instructions for the device.

 Modifying the diagnostic behavior of a diagnostic event. Each diagnostic event is assigned a certain diagnostic behavior at the factory. The user can change this assignment for certain diagnostics events.

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

▪ **Off** option

The diagnostic event is ignored; it is neither entered into the Event logbook, nor is a diagnostic message generated.

▪ **Alarm** option

The device continues to measure. The signal outputs assume the defined alarm condition. A diagnostic message is generated.

▪ **Warning** option

The device continues to measure. A diagnostic message is generated.

▪ **Logbook entry only** option

The device continues to measure. The diagnostic message is entered in the **Event logbook** submenu (→ [143](#)) (**Event list** submenu (→ [144](#))) only and is not displayed in alternation with the measured value display.

Navigation

 Expert → System → Diagn. handling → Diagn. behavior

 Diagnostic behavior	
Assign behavior of diagnostic no. 004 (0734)	→ 31
Assign behavior of diagnostic no. 442 (0658)	→ 31
Assign behavior of diagnostic no. 443 (0659)	→ 32
Assign behavior of diagnostic no. 531 (0733)	→ 32
Assign behavior of diagnostic no. 801 (0660)	→ 32
Assign behavior of diagnostic no. 832 (0675)	→ 33

Assign behavior of diagnostic no. 833 (0676)	→ 33
Assign behavior of diagnostic no. 861 (0736)	→ 33
Assign behavior of diagnostic no. 862 (0679)	→ 34
Assign behavior of diagnostic no. 937 (0735)	→ 34

Assign behavior of diagnostic no. 004 (Sensor)

**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 004 (0734)

Description

Use this function to change the diagnostic behavior of the diagnostic message **004 Sensor**.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available for selection: → [30](#)

Assign behavior of diagnostic no. 442 (Frequency output)

**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 442 (0658)

Prerequisite

The measuring device has a pulse/frequency/switch output.

Description

Use this function to change the diagnostic behavior of the diagnostic message **442 Frequency output**.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available for selection: → [30](#)

Assign behavior of diagnostic no. 443 (Pulse output)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 443 (0659)
Prerequisite	The measuring device has a pulse/frequency/switch output.
Description	Use this function to change the diagnostic behavior of the diagnostic message 443 Pulse output .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available for selection: → 30

Assign behavior of diagnostic no. 531 (Empty pipe detection)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 531 (0733)
Description	Use this function to change the diagnostic behavior of the diagnostic message 531 Empty pipe detection .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available for selection: → 30

Assign behavior of diagnostic no. 801 (Supply voltage too low)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 801 (0660)
Description	Use this function to change the diagnostic behavior of the diagnostic message 801 Supply voltage too low .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning

Additional informationFor a detailed description of the options available for selection: → [30](#)**Assign behavior of diagnostic no. 832 (Electronic temperature too high)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832 (0675)

DescriptionUse this function to change the diagnostic behavior of the diagnostic message **832 Electronic temperature too high**.**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional informationFor a detailed description of the options available for selection: → [30](#)**Assign behavior of diagnostic no. 833 (Electronic temperature too low)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833 (0676)

DescriptionUse this function to change the diagnostic behavior of the diagnostic message **833 Electronic temperature too low**.**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional informationFor a detailed description of the options available for selection: → [30](#)**Assign behavior of diagnostic no. 861 (Process fluid)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 861 (0736)

DescriptionUse this function to change the diagnostic behavior of the diagnostic message **861 Process fluid**.**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Alarm

Additional information  For a detailed description of the options available for selection: →  30

Assign behavior of diagnostic no. 862 (Empty pipe)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 862 (0679)

Description Use this function to change the diagnostic behavior of the diagnostic message **862 Empty pipe**.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available for selection: →  30

Assign behavior of diagnostic no. 937 (EMC interference)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 937 (0735)

Description Use this function to change the diagnostic behavior of the diagnostic message **937 EMC interference**.

Selection


- Off
- Alarm
- Warning
- Logbook entry only

Factory setting Warning

Additional information  For a detailed description of the options available for selection: →  30

3.1.4 "Administration" submenu

Navigation  Expert → System → Administration

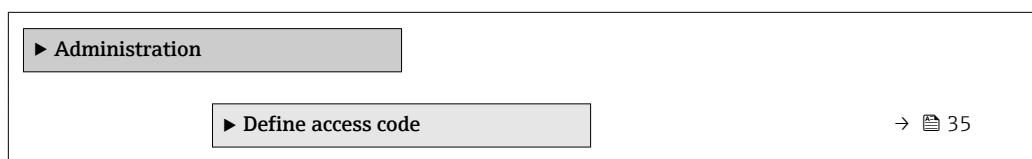

Device reset (0000)	→ 37
Activate SW option (0029)	→ 37
Software option overview (0015)	→ 38
Activate sensor emergency mode (6611)	→ 38

"Define access code" wizard

 The **Define access code** wizard is only available if operating using the local display. If you are operating using the operating tool, the **Define access code** parameter (→ [36](#)) is directly in the **Administration** submenu. The **Confirm access code** parameter is not available if you are operating using the operating tool.

Navigation



Expert → System → Administration → Def. access code

▶ Define access code	
Define access code	→ 35
Confirm access code	→ 36

Define access code



Navigation



Expert → System → Administration → Def. access code → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the local display.

User entry

0 to 9 999

Factory setting

0

Additional information

Description

The write protection affects all parameters in the document marked with the  symbol. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.

 Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→ [13](#)).

 Please contact your Endress+Hauser Sales Center if you lose your access code.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Confirm access code

Navigation	Expert → System → Administration → Def. access code → Confirm code
Description	Enter the defined release code a second time to confirm the release code.
User entry	0 to 9 999
Factory setting	0

Additional parameters in the "Administration" submenu

Define access code

Navigation	Expert → System → Administration → Def. access code (0093)
Description	Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the operating tool.
User entry	0 to 9 999
Factory setting	0
Additional information	<i>Description</i> The write protection affects all parameters in the document marked with the symbol. Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the Enter access code parameter (→ 13). Please contact your Endress+Hauser Sales Center if you lose your access code.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Device reset**Navigation**

Expert → System → Administration → Device reset (0000)

Description

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To fieldbus defaults **
- To factory defaults
- To delivery settings
- Restart device

Factory setting

Cancel

Additional information

"Cancel" option

No action is executed and the user exits the parameter.

"To factory defaults" option

Every parameter is reset to the factory setting.

"To delivery settings" option

Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.

This option is not visible if no customer-specific settings have been ordered.

"Restart device" option

The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Activate SW option**Navigation**

Expert → System → Administration → Activate SW opt. (0029)

Description

Use this function to enter an activation code to enable an additional, ordered software option.

User entry

Max. 10-digit string consisting of numbers.

Factory setting

0

Additional information

User entry

Endress+Hauser provides the corresponding activation code for the software option with the order.

NOTICE! This activation code varies depending on the measuring device and the software option. If an incorrect or invalid code is entered, this can result in the loss of software options that are already been activated. After commissioning the measuring device: in this

** Visibility depends on communication

parameter only enter activation codes which Endress+Hauser has provided (e.g. when a new software option was ordered). If an incorrect or invalid activation code is entered, enter the activation code from the parameter protocol again and contact your Endress+Hauser sales organization, quoting the serial number of your device.

Example for a software option

Order code for "Application package", option EA "Extended HistoROM"

Software option overview

Navigation	  Expert → System → Administration → SW option overv. (0015)
Description	Displays all the software options that are enabled in the device.
User interface	<ul style="list-style-type: none">▪ Extended HistoROM▪ Heartbeat Verification
Additional information	<p><i>Description</i></p> <p>Displays all the options that are available if ordered by the customer.</p> <p><i>"Extended HistoROM" option</i></p> <p>Order code for "Application package", option EA "Extended HistoROM"</p> <p><i>"Heartbeat Verification" option</i></p> <p>Order code for "Application package", option EB "Heartbeat Verification"</p>

Activate sensor emergency mode



Navigation	  Expert → System → Administration → Sens. emerg.mode (6611)
Prerequisite	The device has identified an error during verification of the characteristics in the sensor data storage or electronics module. A diagnostic message of status type XF is output.
Description	Use this function to switch on the emergency mode of the sensor to use the backup of the sensor characteristics or main electronics characteristics stored in the HistoROM.
Selection	<ul style="list-style-type: none">▪ Cancel▪ Ok
Factory setting	Cancel
Additional information	<p><i>Description</i></p> <p>The status signal of the output diagnostic message changes from F (failure) to M (maintenance required), the diagnostic behavior changes from Alarm to Warning: AM.</p>

The diagnostic message is output until the characteristics in the sensor data storage are again correct.

 Information on what is causing the diagnostic message, and remedy measures, can be viewed by pressing the -button.

 Information on status signals and diagnostic behavior: Operating Instructions about the device, "Diagnostic message" chapter

3.2 "Sensor" submenu

Navigation

  Expert → Sensor


► Sensor	
► Measured values	→  39
► System units	→  44
► Process parameters	→  49
► Calculated values	→  56
► Sensor adjustment	→  57
► Calibration	→  60

3.2.1 "Measured values" submenu

Navigation

  Expert → Sensor → Measured val.

► Measured values	
► Process variables	→  40
► Totalizer	→  40
► Output values	→  42

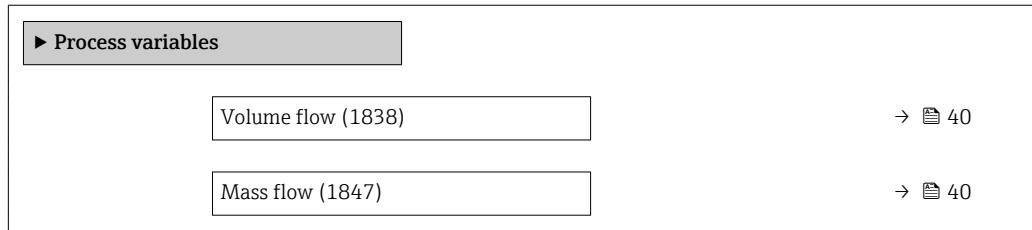"Process variables" submenu**Navigation** Expert → Sensor → Measured val. → Process variab.

Volume flow

Navigation Expert → Sensor → Measured val. → Process variab. → Volume flow (1838)**Description**

Use this function to view the volume flow currently measured.

User interface

Signed floating-point number

Additional information*Dependency* The unit is taken from the **Volume flow unit** parameter (→ 44)


Mass flow

Navigation Expert → Sensor → Measured val. → Process variab. → Mass flow (1847)**Description**

Displays the mass flow currently calculated.

User interface

Signed floating-point number

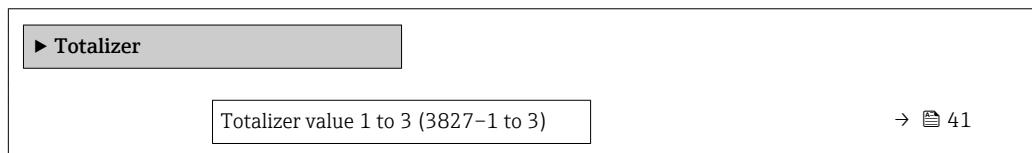Additional information*Dependency* The unit is taken from the **Mass flow unit** parameter (→ 46)**Totalizer****Navigation** Expert → Sensor → Measured val. → Totalizer

Totalizer status (Hex) 1 to 3 (3825-1 to 3)	→ 41
Totalizer status 1 to 3 (3826-1 to 3)	→ 41

Totalizer value 1 to 3

Navigation	[Icon] Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to 3 (3827-1 to 3)
Prerequisite	In Target mode parameter (→ 41 129), the Auto option is selected.
Description	Displays the current reading for totalizer 1-3.
User interface	Signed floating-point number
Additional information	<p><i>Description</i></p> <p>As it is only possible to display a maximum of 7 digits, the current counter value is the sum of the totalizer value and the overflow value from the Totalizer overflow 1 to 3 parameter if the display range is exceeded.</p> <p> In the event of an error, the totalizer adopts the mode defined in the Failure mode parameter.</p> <p><i>User interface</i></p> <p>The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the Totalizer operation mode parameter.</p> <p> The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 41 124).</p>

Totalizer status (Hex) 1 to 3


Navigation	[Icon] Expert → Sensor → Measured val. → Totalizer → Status (Hex) 1 to 3 (3825-1 to 3)
Prerequisite	In Target mode parameter (→ 41 129), the Auto option is selected.
Description	Displays the status value (hex) of the particular totalizer.
User interface	0 to 0xFF

Totalizer status 1 to 3

Navigation	[Icon] Expert → Sensor → Measured val. → Totalizer → Tot. status 1 to 3 (3826-1 to 3)
Description	Displays the status of the particular totalizer.

User interface

- Good
- Uncertain
- Bad

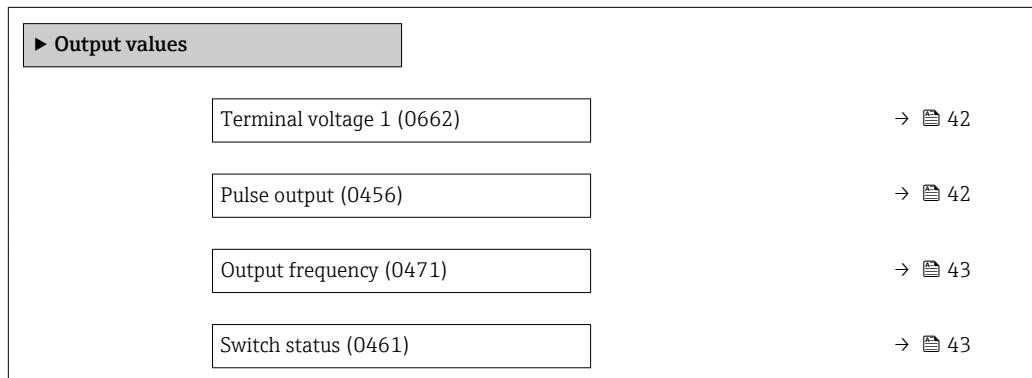"Output values" submenu**Navigation**
 Expert → Sensor → Measured val. → Output values
**Terminal voltage 1****Navigation**
 Expert → Sensor → Measured val. → Output values → Terminal volt. 1 (0662)
Description

Use this function to view the actual terminal voltage that is present at the current output.

User interface

0.0 to 50.0 V

Pulse output**Navigation**
 Expert → Sensor → Measured val. → Output values → Pulse output (0456)
Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 62).

Description


Displays the pulse frequency currently output.

User interface

Positive floating-point number

Additional information*Description*

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.
- The **Value per pulse** parameter (→ 64) and the **Pulse width** parameter (→ 65) can be used to define the value (i.e. the amount of the measured value that corresponds to a pulse) and the duration of the pulse.

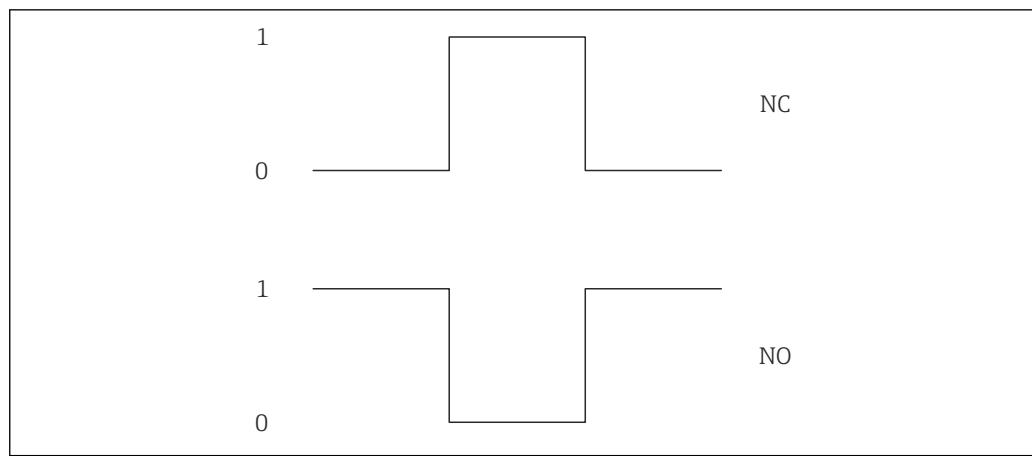

A0025816-EN

0 Non-conductive

1 Conductive

NC NC contact (normally closed)

NO NO contact (normally open)

The output behavior can be reversed via the **Invert output signal** parameter (→ 79), i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of an error (**Failure mode** parameter (→ 66)) can be configured.

Output frequency

Navigation Expert → Sensor → Measured val. → Output values → Output freq. (0471)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→ 62).

Description Use this function to view the actual value of the output frequency which is currently measured.

User interface 0 to 1250 Hz

Switch status

Navigation Expert → Sensor → Measured val. → Output values → Switch status (0461)

Prerequisite In the **Operating mode** parameter (→ 62), the **Switch** option is selected.

Description Displays the current switch status of the status output.

User interface

- Open
- Closed

Additional information*Selection*

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

3.2.2 "System units" submenu

Navigation Expert → Sensor → System units

▶ System units	
Volume flow unit (0553)	→  44
Volume unit (0563)	→  46
Mass flow unit (0554)	→  46
Mass unit (0574)	→  47
Density unit (0555)	→  47
Temperature unit (0557)	→  48
Date/time format (2812)	→  49

Volume flow unit*Navigation* Expert → Sensor → System units → Volume flow unit (0553)**Description**

Use this function to select the unit for the volume flow.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ cm ³ /s	■ af/s	■ gal/s (imp)	
■ cm ³ /min	■ af/min	■ gal/min (imp)	
■ cm ³ /h	■ af/h	■ gal/h (imp)	
■ cm ³ /d	■ af/d	■ gal/d (imp)	
■ dm ³ /s	■ ft ³ /s	■ Mgal/s (imp)	
■ dm ³ /min	■ ft ³ /min	■ Mgal/min (imp)	
■ dm ³ /h	■ ft ³ /h	■ Mgal/h (imp)	
■ dm ³ /d	■ ft ³ /d	■ Mgal/d (imp)	
■ m ³ /s	■ fl oz/s (us)	■ bbl/s (imp;beer)	
■ m ³ /min	■ fl oz/min (us)	■ bbl/min (imp;beer)	
■ m ³ /h	■ fl oz/h (us)	■ bbl/h (imp;beer)	
■ m ³ /d	■ fl oz/d (us)	■ bbl/d (imp;beer)	
■ ml/s	■ gal/s (us)	■ bbl/s (imp;oil)	
■ ml/min	■ gal/min (us)	■ bbl/min (imp;oil)	
■ ml/h	■ gal/h (us)	■ bbl/h (imp;oil)	
■ ml/d	■ gal/d (us)	■ bbl/d (imp;oil)	
■ l/s	■ kgal/s (us)		
■ l/min	■ kgal/min (us)		
■ l/h	■ kgal/h (us)		
■ l/d	■ kgal/d (us)		
■ hl/s	■ Mgal/s (us)		
■ hl/min	■ Mgal/min (us)		
■ hl/h	■ Mgal/h (us)		
■ hl/d	■ Mgal/d (us)		
■ Ml/s	■ bbl/s (us;liq.)		
■ Ml/min	■ bbl/min (us;liq.)		
■ Ml/h	■ bbl/h (us;liq.)		
■ Ml/d	■ bbl/d (us;liq.)		
	■ bbl/s (us;beer)		
	■ bbl/min (us;beer)		
	■ bbl/h (us;beer)		
	■ bbl/d (us;beer)		
	■ bbl/s (us;oil)		
	■ bbl/min (us;oil)		
	■ bbl/h (us;oil)		
	■ bbl/d (us;oil)		
	■ bbl/s (us;tank)		
	■ bbl/min (us;tank)		
	■ bbl/h (us;tank)		
	■ bbl/d (us;tank)		
Factory setting	Country-specific: ■ l/h ■ gal/min (us)		
Additional information	<i>Result</i> The selected unit applies for: Volume flow parameter (→  40) <i>Options</i>  For an explanation of the abbreviated units: →  168		
	<i>Customer-specific units</i>  The unit for the customer-specific volume is specified in the User volume text parameter.		

Volume unit**Navigation**

Expert → Sensor → System units → Volume unit (0563)

Description

Use this function to select the unit for the volume.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Factory setting

Country-specific:

- m³
- gal (us)

Additional information*Options*

For an explanation of the abbreviated units: → 168

Customer-specific units

The unit for the customer-specific volume is specified in the **User volume text** parameter.

Mass flow unit**Navigation**

Expert → Sensor → System units → Mass flow unit (0554)

Description

Use this function to select the unit for the mass flow.

Selection*SI units*

- g/s
- g/min
- g/h
- g/d
- kg/s
- kg/min
- kg/h
- kg/d
- t/s
- t/min
- t/h
- t/d

US units

- oz/s
- oz/min
- oz/h
- oz/d
- lb/s
- lb/min
- lb/h
- lb/d
- STon/s
- STon/min
- STon/h
- STon/d

Factory setting	Country-specific: ■ kg/h ■ lb/min
------------------------	---

Additional information	<i>Result</i> The selected unit applies for: Mass flow parameter (→ 40)
-------------------------------	---

Options
 For an explanation of the abbreviated units: → 168

Customer-specific units

The unit for the customer-specific mass is specified in the **User mass text** parameter.

Mass unit



Navigation Expert → Sensor → System units → Mass unit (0574)

Description Use this function to select the unit for the mass.

Selection	<i>SI units</i>	<i>US units</i>
	■ g	■ oz
	■ kg	■ lb
	■ t	■ STon

Factory setting	Country-specific: ■ kg ■ lb
------------------------	-----------------------------------

Additional information	<i>Options</i> For an explanation of the abbreviated units: → 168
-------------------------------	---

Customer-specific units

The unit for the customer-specific mass is specified in the **User mass text** parameter.

Density unit



Navigation Expert → Sensor → System units → Density unit (0555)

Description Use this function to select the unit for the density.

Selection*SI units*

- g/cm³
- g/m³
- kg/dm³
- kg/l
- kg/m³
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

Imperial units

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Factory setting

Country-specific:

- kg/l
- lb/ft³

Additional information*Result*

The selected unit applies for:

Fixed density parameter (→  57)*Options*

- SD = specific density

The specific density is the ratio of the density of the fluid to the density of water at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

 For an explanation of the abbreviated units: →  168

Temperature unit **Navigation**
  Expert → Sensor → System units → Temperature unit (0557)
Description

Use this function to select the unit for the temperature.

Selection*SI units*

- °C
- K

US units

- °F
- °R

Factory setting

Country-specific:

- °C
- °F

Additional information*Result*

The selected unit applies for:

- **Maximum value** parameter (→  157)
- **Minimum value** parameter (→  157)
- **Maximum value** parameter (→  158)
- **Minimum value** parameter (→  158)
- **Average value** parameter (→  159)

Options

For an explanation of the abbreviated units: → 168

**Date/time format****Navigation**

Expert → Sensor → System units → Date/time format (2812)

Description

Use this function to select the desired time format for calibration history.

Selection

- dd.mm.yy hh:mm
- dd.mm.yy hh:mm am/pm
- mm/dd/yy hh:mm
- mm/dd/yy hh:mm am/pm

Factory setting

dd.mm.yy hh:mm

Additional information*Selection*

For an explanation of the abbreviated units: → 168

**3.2.3 "Process parameters" submenu***Navigation*

Expert → Sensor → Process param.

▶ Process parameters	
Flow override (1839)	→ 49
Flow damping (6661)	→ 50
▶ Low flow cut off	→ 50
▶ Empty pipe detection	→ 53

**Flow override****Navigation**

Expert → Sensor → Process param. → Flow override (1839)

Description

Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

Selection

- Off
- On

Factory setting Off

Additional information *Effect*

 This setting affects all the functions and outputs of the measuring device.

Description

Flow override is active

- The diagnostic message diagnostic message **△C453 Flow override** is displayed.
- Output values
 - Output: Value at zero flow
 - Temperature: proceeding output
 - Totalizers 1-3: Stop being totalized

Flow damping



Navigation  Expert → Sensor → Process param. → Flow damping (6661)

Description Use this function to enter flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

User entry 0 to 15

Factory setting 7

Additional information *Effect*

 The damping affects the following variables of the device:


- Outputs →  61
- Low flow cut off →  50
- Totalizer →  123

User entry

- Value = 0: no damping
- Value > 0: damping is increased

"Low flow cut off" submenu

Navigation  Expert → Sensor → Process param. → Low flow cut off

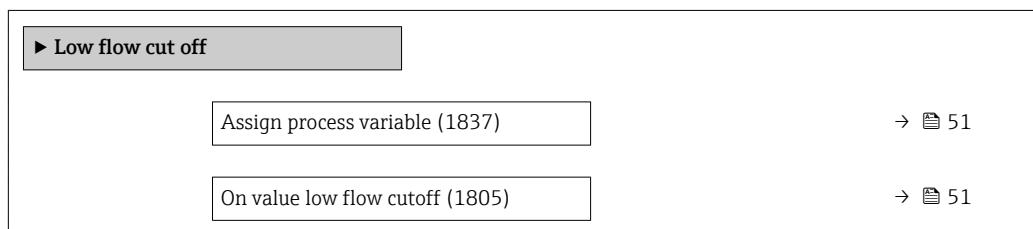

Off value low flow cutoff (1804)	→ 51
Pressure shock suppression (1806)	→ 52

Assign process variable



Navigation	Expert → Sensor → Process param. → Low flow cut off → Assign variable (1837)
Description	Use this function to select the process variable for low flow cutoff detection.
Selection	<ul style="list-style-type: none">■ Off■ Volume flow■ Mass flow
Factory setting	Volume flow

On value low flow cutoff



Navigation	Expert → Sensor → Process param. → Low flow cut off → On value (1805)
Prerequisite	One of the following options is selected in the Assign process variable parameter (→ 51): <ul style="list-style-type: none">■ Volume flow■ Mass flow
Description	Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 → 51 .
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter → 165
Additional information	<i>Dependency</i> The unit depends on the process variable selected in the Assign process variable parameter (→ 51).

Off value low flow cutoff




Navigation	Expert → Sensor → Process param. → Low flow cut off → Off value (1804)
Prerequisite	One of the following options is selected in the Assign process variable parameter (→ 51): <ul style="list-style-type: none">■ Volume flow■ Mass flow

Description Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → 51.

User entry 0 to 100.0 %

Factory setting 50 %

Additional information *Example*

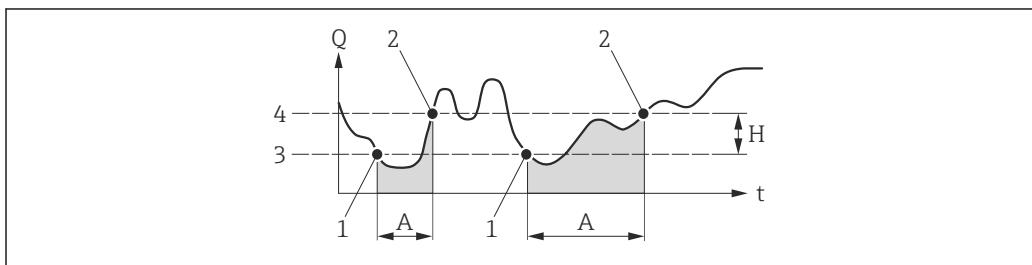

A0012887

- Q Flow
- t Time
- H Hysteresis
- A Low flow cut off active
- 1 Low flow cut off is activated
- 2 Low flow cut off is deactivated
- 3 On value entered
- 4 Off value entered

Pressure shock suppression



Navigation Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup. (1806)

Prerequisite One of the following options is selected in the **Assign process variable** parameter (→ 51):

- Volume flow
- Mass flow

Description Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

User entry 0 to 100 s

Factory setting 0 s

Additional information *Description*

Pressure shock suppression is enabled


- Prerequisite:
Flow rate < on-value of low flow cut off
- Output values
 - Flow displayed: 0
 - Totalizer: the totalizers are pegged at the last correct value

Pressure shock suppression is disabled

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

Example

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

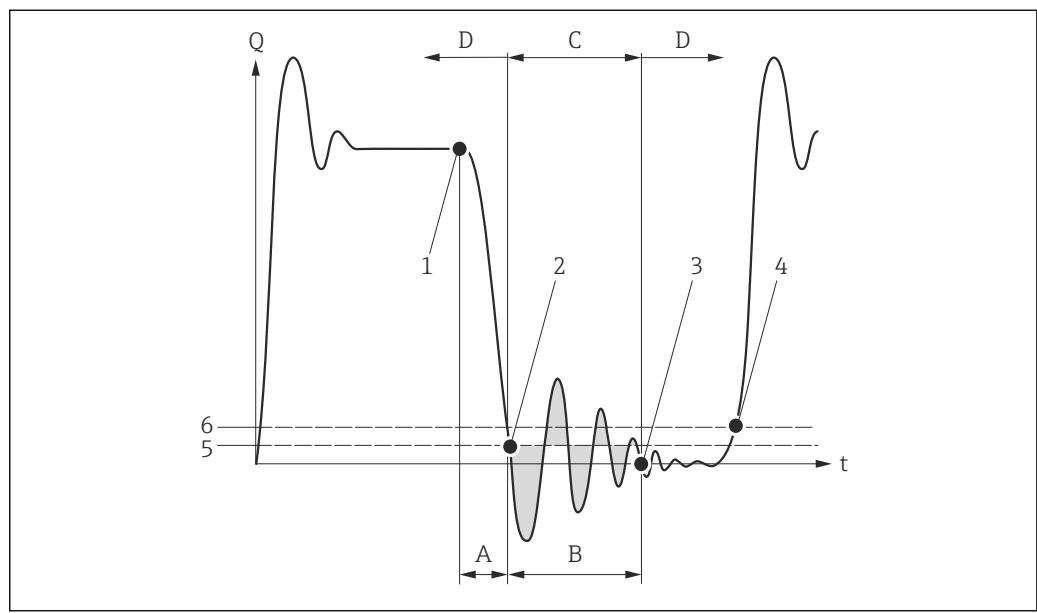

A0012888

- Q* Flow
- t* Time
- A* Drip
- B* Pressure shock
- C* Pressure shock suppression active as specified by the time entered
- D* Pressure shock suppression inactive
- 1 Valve closes
- 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
- 3 The time entered has elapsed: pressure shock suppression is deactivated
- 4 The actual flow value is now displayed and output
- 5 On value for low flow cut off
- 6 Off value for low flow cut off

"Empty pipe detection" submenu

Navigation

Expert → Sensor → Process param. → Empty pipe det.

► Empty pipe detection	
Empty pipe detection (1860)	→ 54
Switch point empty pipe detection (6562)	→ 54
Response time empty pipe detection (1859)	→ 54
Empty pipe adjust value (6527)	→ 55

Full pipe adjust value (6548)	→ 55
Measured value EPD (6559)	→ 55
► Empty pipe adjust	→ 55

Empty pipe detection



Navigation Expert → Sensor → Process param. → Empty pipe det. → Empty pipe det. (1860)

Description Use this function to switch empty pipe detection on and off.

Selection
■ Off
■ On

Factory setting Off

Switch point empty pipe detection



Navigation Expert → Sensor → Process param. → Empty pipe det. → Switch point EPD (6562)

Prerequisite The **On** option is selected in the **Empty pipe detection** parameter (→ 54).

Description Use this function to enter the percentage threshold value of the resistance in relation to the adjustment values.

User entry 1 to 99 %

Factory setting 10 %

Response time empty pipe detection



Navigation Expert → Sensor → Process param. → Empty pipe det. → Response time (1859)

Prerequisite In the **Empty pipe detection** parameter (→ 54), the **On** option is selected.

Description Enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message **△S862 Empty pipe** to be triggered if the measuring pipe is empty or partially full.

User entry 0 to 100 s

Factory setting 1 s

Empty pipe adjust value

Navigation	④⑤ Expert → Sensor → Process param. → Empty pipe det. → Empty pipe value (6527)
Prerequisite	<ul style="list-style-type: none"> ■ In the Empty pipe detection parameter (→ 54), the On option is selected. ■ Adjustment value > full pipe value.
Description	Displays the adjustment value when the measuring pipe is empty.
User interface	Positive floating-point number

Full pipe adjust value


Navigation	④⑤ Expert → Sensor → Process param. → Empty pipe det. → Full pipe value (6548)
Prerequisite	<ul style="list-style-type: none"> ■ In the Empty pipe detection parameter (→ 54), the On option is selected. ■ Adjustment value < empty pipe value.
Description	Displays the adjustment value when the measuring pipe is full.
User interface	Positive floating-point number

Measured value EPD

Navigation	④⑤ Expert → Sensor → Process param. → Empty pipe det. → Meas. value EPD (6559)
Prerequisite	In the Empty pipe detection parameter (→ 54), the On option is selected.
Description	Displays the current measured value.
User interface	Positive floating-point number

"Empty pipe adjust" wizard

Navigation ④ Expert → Sensor → Process param. → Empty pipe det. → Empty pipe adj.

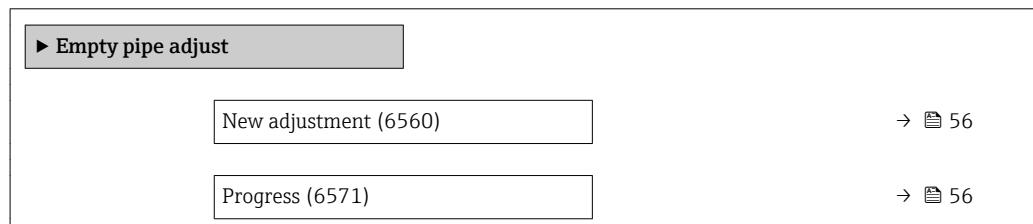

New adjustment


Navigation	Expert → Sensor → Process param. → Empty pipe det. → Empty pipe adj. → New adjustment (6560)
Prerequisite	The On option is selected in the Empty pipe detection parameter (→ 54).
Description	For selecting whether to perform an empty pipe or full pipe adjustment.
Selection	<ul style="list-style-type: none">■ Cancel■ Empty pipe adjust■ Full pipe adjust
Factory setting	Cancel

Progress

Navigation	Expert → Sensor → Process param. → Empty pipe det. → Empty pipe adj. → Progress (6571)
Prerequisite	The On option is selected in the Empty pipe detection parameter (→ 54).
Description	Use this function to view the progress.
User interface	<ul style="list-style-type: none">■ Ok■ Busy■ Not ok


3.2.4 "Calculated values" submenu

Navigation Expert → Sensor → Calculated value

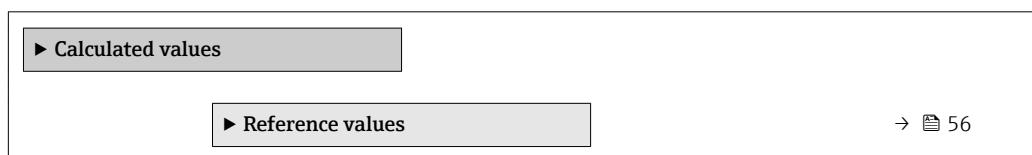

"Reference values" submenu

Navigation Expert → Sensor → Calculated value → Reference values

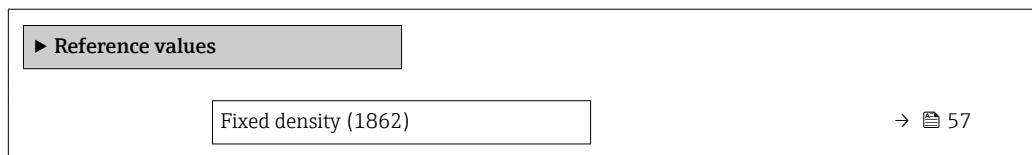

Fixed density

Navigation Expert → Sensor → Calculated value → Reference values → Fixed density (1862)

Description Use this function to enter a fixed value for the density. The density is used to calculate the mass flow.

User entry Positive floating-point number

Factory setting 1 000 kg/l

Additional information *User entry*

The unit is taken from the **Density unit** parameter (→ 47).

3.2.5 "Sensor adjustment" submenu

Navigation

Expert → Sensor → Sensor adjustm.

Sensor adjustment	
Installation direction (1809)	→ 57
Integration time (6533)	→ 58
Measuring period (6536)	→ 58
Process variable adjustment	→ 58

Installation direction

Navigation Expert → Sensor → Sensor adjustm. → Install. direct. (1809)

Description Use this function to change the sign of the medium flow direction.

Selection

- Flow in arrow direction
- Flow against arrow direction

Factory setting Flow in arrow direction

Additional information *Description*

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

Integration time

Navigation Expert → Sensor → Sensor adjustm. → Integration time (6533)

Description Display the duration of an integration cycle.

User interface 5 to 100 ms

Measuring period

Navigation Expert → Sensor → Sensor adjustm. → Measuring period (6536)

Description Display the time of a full measuring period.

User interface 40 to 1 000 ms

"Process variable adjustment" submenu

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust

▶ Process variable adjustment	
Volume flow factor (1832)	→ 58
Volume flow offset (1831)	→ 59
Mass flow factor (1846)	→ 59
Mass flow offset (1841)	→ 59

Volume flow factor



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor (1832)

Description Use this function to enter a quantity factor (without time) for the volume flow. This multiplication factor is applied over the volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information*Description*

Corrected value = (factor × value) + offset

**Volume flow offset****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset (1831)

DescriptionUse this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.**User entry**

Signed floating-point number

Factory setting0 m³/s**Additional information***Description*

Corrected value = (factor × value) + offset

**Mass flow factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor (1846)

Description

Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

**Mass flow offset****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset (1841)

Description

Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

User entry

Signed floating-point number

Factory setting

0 kg/s


Additional information*Description*

Corrected value = (factor × value) + offset

3.2.6 "Calibration" submenu

Navigation

Expert → Sensor → Calibration

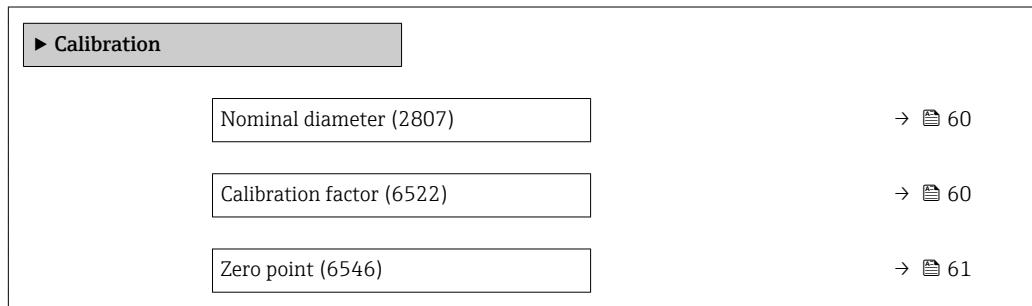

Nominal diameter

Navigation

Expert → Sensor → Calibration → Nominal diameter (2807)

Description

Displays the nominal diameter of the sensor.

User interface

DNxx / x"

Factory setting

Depends on the size of the sensor

Additional information*Description*

The value is also specified on the sensor nameplate.

Calibration factor

Navigation

Expert → Sensor → Calibration → Cal. factor (6522)

Description

Displays the current calibration factor for the sensor.

User interface

Signed floating-point number

Factory setting

Depends on nominal diameter and calibration.

Zero point

Navigation  Expert → Sensor → Calibration → Zero point (6546)

Description This function shows the zero point correction value for the sensor.

User interface Signed floating-point number

Factory setting Depends on nominal diameter and calibration

3.3 "Output" submenu

Navigation  Expert → Output

 ▶ Output

 ▶ Pulse/frequency/switch output

→  61

3.3.1 "Pulse/frequency/switch output" submenu

Navigation  Expert → Output → PFS output

 ▶ Pulse/frequency/switch output

Operating mode (0469)

→  62

Assign pulse output (0460)

→  64

Value per pulse (0455)

→  64

Pulse width (0452)

→  65

Measuring mode (0457)

→  66

Failure mode (0480)

→  66

Pulse output (0456)

→  67

Assign frequency output (0478)

→  68

Minimum frequency value (0453)

→  68

Maximum frequency value (0454)

→  68

Measuring value at minimum frequency (0476)	→ 69
Measuring value at maximum frequency (0475)	→ 69
Measuring mode (0479)	→ 70
Damping output (0477)	→ 71
Failure mode (0451)	→ 72
Failure frequency (0474)	→ 72
Output frequency (0471)	→ 73
Switch output function (0481)	→ 73
Assign diagnostic behavior (0482)	→ 74
Assign limit (0483)	→ 74
Switch-on value (0466)	→ 76
Switch-off value (0464)	→ 76
Assign flow direction check (0484)	→ 77
Assign status (0485)	→ 77
Switch-on delay (0467)	→ 78
Switch-off delay (0465)	→ 78
Failure mode (0486)	→ 78
Switch status (0461)	→ 79
Invert output signal (0470)	→ 79

Operating mode**Navigation**

Expert → Output → PFS output → Operating mode (0469)

Description

Use this function to select the operating mode of the output as a pulse, frequency or switch output.

Selection	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch
Factory setting	Pulse
Additional information	<p><i>"Off"</i> option The pulse/frequency/switch output is not used.</p> <p><i>"Pulse"</i> option Quantity-dependent pulse with configurable pulse width</p> <ul style="list-style-type: none"> ■ Whenever a specific mass or volume is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width). ■ The pulses are never shorter than the set duration. <p>Example</p> <ul style="list-style-type: none"> ■ Flow rate approx. 100 g/s ■ Pulse value 0.1 g ■ Pulse width 0.05 ms ■ Pulse rate 1000 Impuls/s

A0026883

4 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Frequency" option

Flow-proportional frequency output with 1:1 on/off ratio

An output frequency is output that is proportional to the value of a process variable, such as mass flow or volume flow.

Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1000 g/s
- Output frequency approx. 1000 Hz

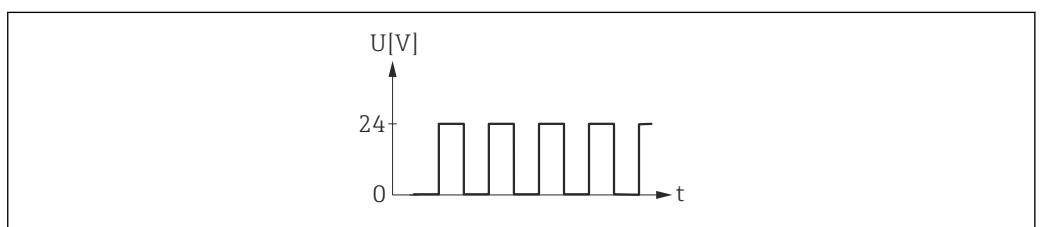


A0026886

5 Flow-proportional frequency output

"Switch" option

Switch to indicate a state (e.g. alarm or warning if a limit value is reached)


Example
Alarm response without alarm

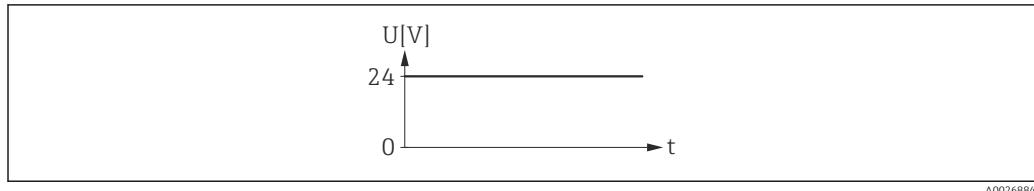

A0026884

6 No alarm, high level

Example
Alarm response in case of alarm

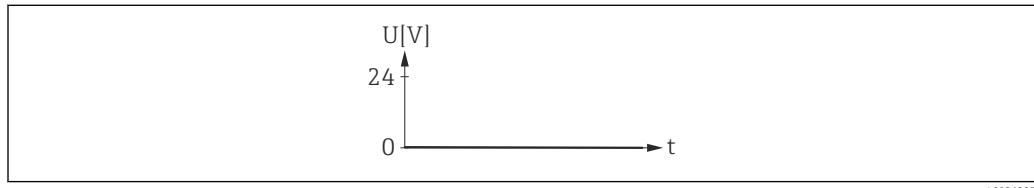

A0026885

7 Alarm, low level

Assign pulse output



Navigation

Expert → Output → PFS output → Assign pulse (0460)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 62).

Description

Use this function to select the process variable for the pulse output.

Selection

- Off
- Mass flow
- Volume flow

Factory setting

Off

Value per pulse



Navigation

Expert → Output → PFS output → Value per pulse (0455)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse output** parameter (→ 64):

- Mass flow
- Volume flow

Description

Use this function to enter the value for the measured value that a pulse is equivalent to.

User entry

Signed floating-point number

Factory setting

0

Additional information*User entry*

Weighting of the pulse output with a quantity.

The lower the pulse value:

- the better the resolution.
- the higher the frequency of the pulse response.

Pulse width**Navigation**

Expert → Output → PFS output → Pulse width (0452)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse output** parameter (→ 64):

- Mass flow
- Volume flow

Description

Use this function to enter the duration of the output pulse.

User entry


5 to 2 000 ms

Factory setting

100 ms

Additional information*Description*

- Define how long a pulse is (duration).
- The maximum pulse rate is defined by $f_{max} = 1 / (2 \times \text{pulse width})$.
- The interval between two pulses lasts at least as long as the set pulse width.
- The maximum flow is defined by $Q_{max} = f_{max} \times \text{pulse value}$.
- If the flow exceeds these limit values, the measuring device displays the diagnostic message **△S443 Pulse output 1 to 2**.

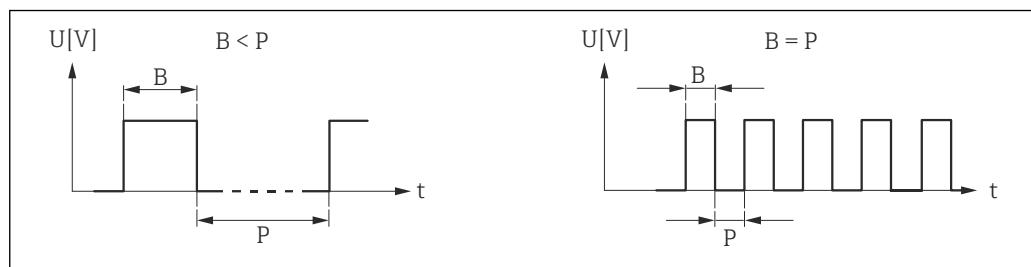

B Pulse width entered

P Intervals between the individual pulses

Example

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$



The pulse width is not relevant for **Automatic pulse** option.

Measuring mode



Navigation

Expert → Output → PFS output → Measuring mode (0457)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse output** parameter (→ 64):

- Mass flow
- Volume flow

Description

Use this function to select the measuring mode for the pulse output.

Selection

- Forward flow
- Forward/Reverse flow
- Reverse flow
- Reverse flow compensation

Factory setting

Forward flow

Additional information

Selection

- Forward flow
Positive flow is output, negative flow is not output.
- Forward/Reverse flow
Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow.
- Reverse flow
Negative flow is output, positive flow is not output.
- Reverse flow compensation

i For a detailed description of the options available, see the **Measuring mode** parameter (→ 70)

Failure mode



Navigation

Expert → Output → PFS output → Failure mode (0480)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse output** parameter (→ 64):

- Mass flow
- Volume flow

Description

Use this function to select the failure mode of the pulse output in the event of a device alarm.

Selection

- Actual value
- No pulses

Factory setting

No pulses

Additional information

Description

The dictates of safety render it advisable to ensure that the pulse output shows a predefined behavior in the event of a fault.

Options

- Actual value

In the event of a device alarm, the pulse output continues on the basis of the current flow measurement. The fault is ignored.

- No pulses

In the event of a device alarm, the pulse output is "switched off".

NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The **Actual value** option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Pulse output

Navigation

Expert → Output → PFS output → Pulse output (0456)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 62).

Description


Displays the pulse frequency currently output.

User interface

Positive floating-point number

Additional information
Description

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.
- The **Value per pulse** parameter (→ 64) and the **Pulse width** parameter (→ 65) can be used to define the value (i.e. the amount of the measured value that corresponds to a pulse) and the duration of the pulse.

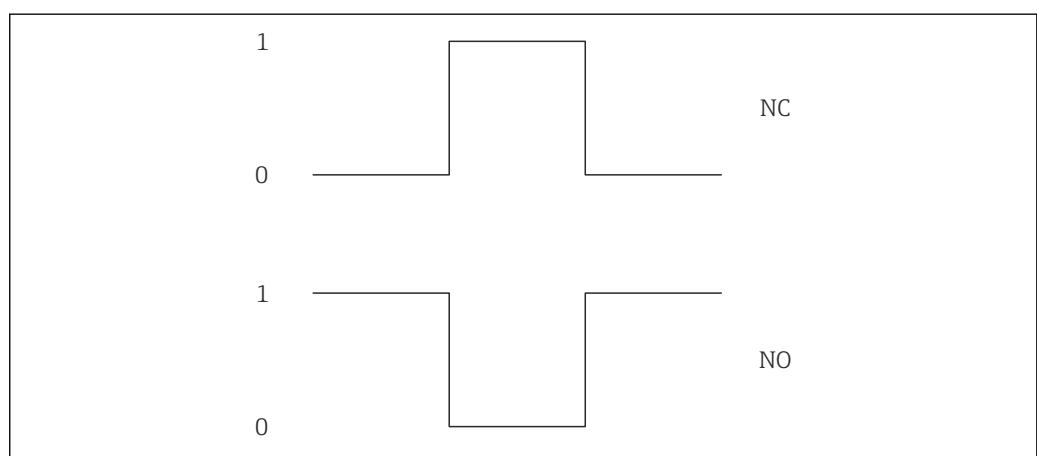

0 Non-conductive

1 Conductive

NC NC contact (normally closed)

NO NO contact (normally open)

The output behavior can be reversed via the **Invert output signal** parameter (→ 79), i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of an error (**Failure mode** parameter (→ 66)) can be configured.

Assign frequency output



Navigation	Expert → Output → PFS output → Assign freq. (0478)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 62).
Description	Use this function to select the process variable for the frequency output.
Selection	<ul style="list-style-type: none">■ Off■ Volume flow■ Mass flow
Factory setting	Off

Minimum frequency value



Navigation	Expert → Output → PFS output → Min. freq. value (0453)
Prerequisite	In the Operating mode parameter (→ 62), the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 68): <ul style="list-style-type: none">■ Volume flow■ Mass flow
Description	Use this function to enter the start value frequency.
User entry	0 to 1 000 Hz
Factory setting	0 Hz

Maximum frequency value



Navigation	Expert → Output → PFS output → Max. freq. value (0454)
Prerequisite	In the Operating mode parameter (→ 62), the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 68): <ul style="list-style-type: none">■ Volume flow■ Mass flow
Description	Use this function to enter the end value frequency.
User entry	0 to 1 000 Hz
Factory setting	1 000 Hz

Measuring value at minimum frequency

**Navigation**

Expert → Output → PFS output → Val. at min.freq (0476)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Frequency** option is selected and one of the following options is selected in the **Assign frequency output** parameter (→ 68):

- Volume flow
- Mass flow

Description

Use this function to enter the measured value for the start value frequency.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information

Dependency

The entry depends on the process variable selected in the **Assign frequency output** parameter (→ 68).

Measuring value at maximum frequency

**Navigation**

Expert → Output → PFS output → Val. at max.freq (0475)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Frequency** option is selected and one of the following options is selected in the **Assign frequency output** parameter (→ 68):

- Volume flow
- Mass flow

Description

Use this function to enter the measured value for the end value frequency.

User entry

Signed floating-point number

Factory setting

Depends on country and nominal diameter

Additional information

Description

Use this function to enter the maximum measured value at the maximum frequency. The selected process variable is output as a proportional frequency.

Dependency

The entry depends on the process variable selected in the **Assign frequency output** parameter (→ 68).

Measuring mode**Navigation**

Expert → Output → PFS output → Measuring mode (0479)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Frequency** option is selected and one of the following options is selected in the **Assign frequency output** parameter (→ 68):

- Volume flow
- Mass flow

Description

Use this function to select the measuring mode for the frequency output.

Selection

- Forward flow
- Forward/Reverse flow
- Reverse flow compensation

Factory setting

Forward flow

Additional information*"Forward flow" option*

The frequency output signal is proportional to the measured variable assigned. The measuring range is defined by the values that are assigned to the Measuring value at minimum frequency (A) and the Measuring value at maximum frequency (B).

The flow components outside the scaled measuring range are taken into account for signal output as follows:


One of the values is defined as equal to zero flow e.g.:

- Measuring value at minimum frequency = 0 kg/h
- Measuring value at maximum frequency = 10kg/h
 - If the effective flow exceeds or falls below this measured value, no diagnostic message is output and the frequency output retains its value (0 Hz in the example).
 - If the effective flow exceeds or drops below the other value, the diagnostic message **△S442 Frequency output** is displayed and the frequency output behaves as configured in the **Failure mode** parameter (→ 72).

Both values are defined such that they are not equal to zero flow e.g.:

- Measuring value at minimum frequency = -5 kg/h
- Measuring value at maximum frequency = 10kg/h

If the effective flow exceeds or drops below this measuring range, the diagnostic message **△S442 Frequency output 1 to 2** is displayed and the frequency output behaves as configured in the **Failure mode** parameter (→ 72).

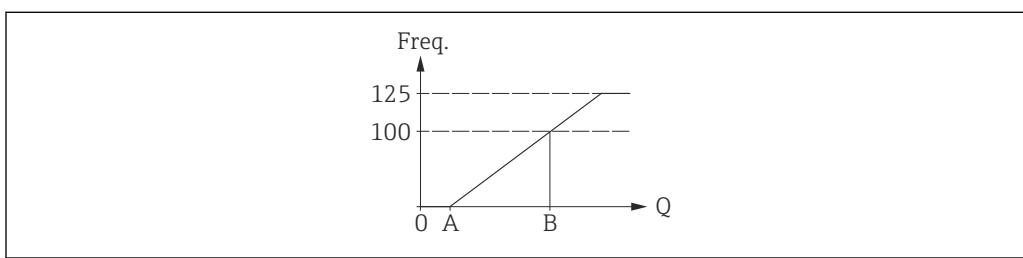

A0026641


A Measuring value at minimum frequency

B Measuring value at maximum frequency

"Forward/Reverse flow" option

The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The Measuring value at minimum frequency (A) and the Measuring value at maximum frequency (B) must have the same sign (+ or -). The

Measuring value at maximum frequency (C) (e.g. reverse flow) is equivalent to the mirrored value Measuring value at minimum frequency (e.g. forward flow).

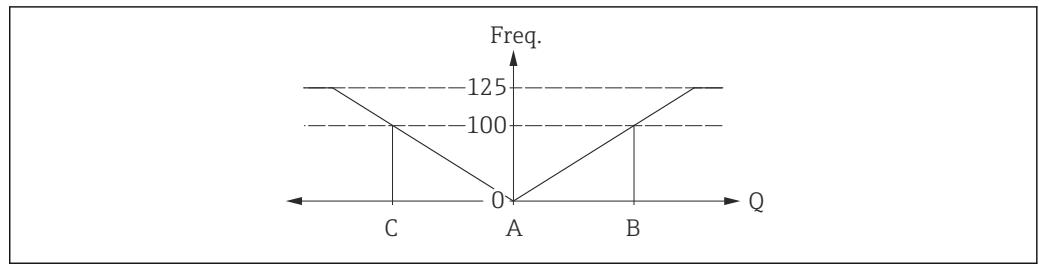

- The flow direction can be output via the configurable relay or status outputs.
- The **Forward/Reverse flow** option can only be selected if the values in the **Measuring value at minimum frequency** parameter (→ 69) and **Measuring value at maximum frequency** parameter (→ 69) have the same sign or if one of the values is zero.
- If the values have different signs, the **Forward/Reverse flow** option cannot be selected.

"Reverse flow compensation" option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside of the measuring range are buffered, balanced and output after a maximum delay of 60 s.

If buffering cannot be processed within approx. 60 s, the diagnostic message **△S442 Frequency output** is displayed.

Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid reverse flow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.

Damping output



Navigation

Expert → Output → PFS output → Damping out. (0477)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Frequency** option is selected and one of the following options is selected in the **Assign frequency output** parameter (→ 68):

- Volume flow
- Mass flow

Description

Use this function to enter the reaction time of the output signal to fluctuations in the measured value.

User entry

0 to 999.9 s

Factory setting

0.0 s

Additional information

Description

Use this function to enter a time constant (PT1 element) for frequency output damping. The frequency output is subject to separate damping that is independent of all preceding time constants.

Failure mode**Navigation**

Expert → Output → PFS output → Failure mode (0451)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Frequency** option is selected and one of the following options is selected in the **Assign frequency output** parameter (→ 68):

- Volume flow
- Mass flow

Description

Use this function to select the failure mode of the frequency output in the event of a device alarm.

Selection

- Actual value
- Defined value
- 0 Hz

Factory setting

0 Hz

Additional information*Options*

- Actual value

In the event of a device alarm, the frequency output continues on the basis of the current flow measurement. The fault is ignored.

- Defined value

In the event of a device alarm, the frequency output continues on the basis of a predefined value. This Failure frequency (→ 72) replaces the current measured value and the alarm can be bypassed as a result. The actual measurement is switched off for the duration of the alarm.

- 0 Hz

In the event of a device alarm, the frequency output is "switched off".

NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The **Actual value** option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Failure frequency**Navigation**

Expert → Output → PFS output → Failure freq. (0474)

Prerequisite

In the **Operating mode** parameter (→ 62), the **Frequency** option is selected and one of the following options is selected in the **Assign frequency output** parameter (→ 68):

- Volume flow
- Mass flow

Description

Use this function to enter the value for the frequency output in the event of a device alarm in order to bypass the alarm.

User entry

0.0 to 1250.0 Hz

Factory setting

0.0 Hz

Output frequency

Navigation	  Expert → Output → PFS output → Output freq. (0471)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 62).
Description	Use this function to view the actual value of the output frequency which is currently measured.
User interface	0 to 1250 Hz

Switch output function

Navigation	  Expert → Output → PFS output → Switch out funct (0481)
Prerequisite	The Switch option is selected in the Operating mode parameter (→ 62).
Description	Use this function to select a function for the switch output.
Selection	<ul style="list-style-type: none">■ Off■ On■ Diagnostic behavior■ Limit■ Flow direction check■ Status
Factory setting	Off
Additional information	<i>Options</i> <ul style="list-style-type: none">■ Off The switch output is permanently switched off (open, non-conductive).■ On The switch output is permanently switched on (closed, conductive).■ Diagnostic behavior Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.■ Limit Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.■ Flow direction check Indicates the flow direction (forward or reverse flow).■ Status Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign diagnostic behavior




Navigation	Expert → Output → PFS output → Assign diag. beh (0482)
Prerequisite	<ul style="list-style-type: none">■ The Switch option is selected in the Operating mode parameter (→ 62).■ The Diagnostic behavior option is selected in the Switch output function parameter (→ 73).
Description	Use this function to select the diagnostic event category that is displayed for the switch output.
Selection	<ul style="list-style-type: none">■ Alarm■ Alarm or warning■ Warning
Factory setting	Alarm
Additional information	<p><i>Description</i></p> <p> If no diagnostic event is pending, the switch output is closed and conductive.</p> <p><i>Options</i></p> <ul style="list-style-type: none">■ Alarm The switch output signals only diagnostic events in the alarm category.■ Alarm or warning The switch output signals diagnostic events in the alarm and warning category.■ Warning The switch output signals only diagnostic events in the warning category.

Assign limit




Navigation	Expert → Output → PFS output → Assign limit (0483)
Prerequisite	<ul style="list-style-type: none">■ The Switch option is selected in the Operating mode parameter (→ 62).■ The Limit option is selected in the Switch output function parameter (→ 73).
Description	Use this function to select a process variable for the limit function.
Selection	<ul style="list-style-type: none">■ Volume flow■ Mass flow■ Totalizer 1■ Totalizer 2■ Totalizer 3
Factory setting	Volume flow
Additional information	<p><i>Description</i></p> <p>Behavior of status output when Switch-on value > Switch-off value:</p> <ul style="list-style-type: none">■ Process variable > Switch-on value: transistor is conductive■ Process variable < Switch-off value: transistor is non-conductive

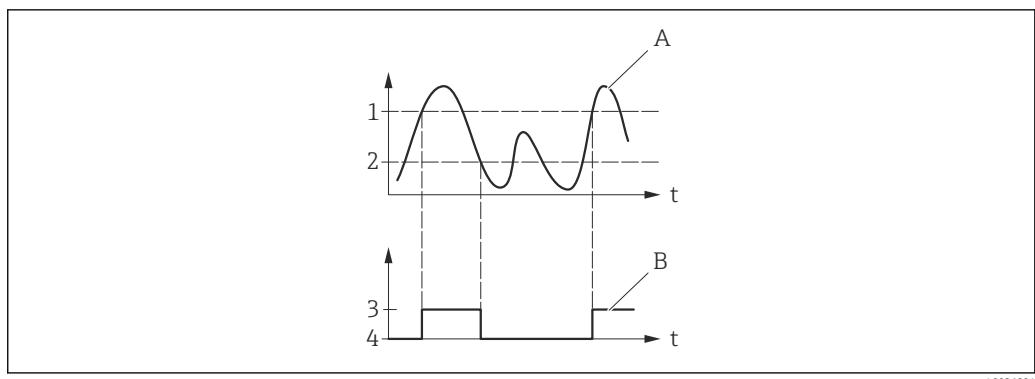

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value < Switch-off value:


- Process variable < Switch-on value: transistor is conductive
- Process variable > Switch-off value: transistor is non-conductive

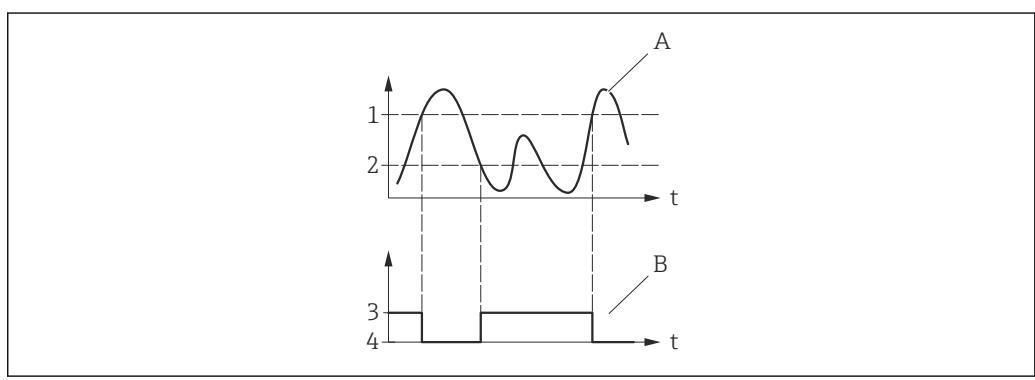

- 1 Switch-off value
- 2 Switch-on value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value = Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

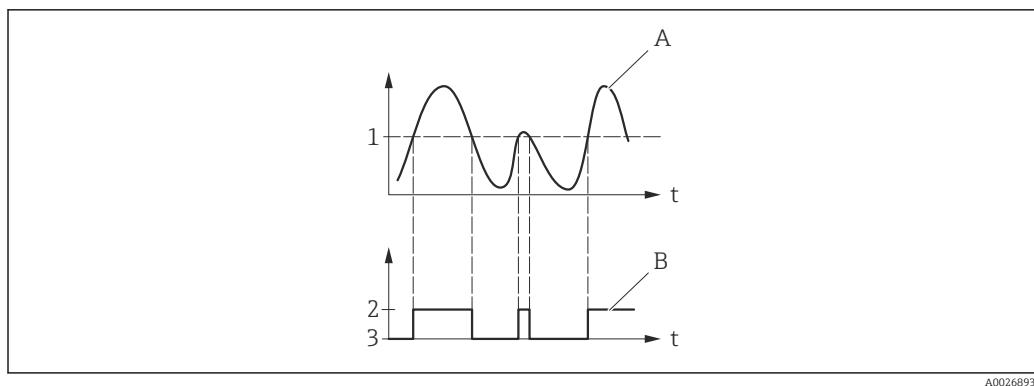

1 Switch-on value = Switch-off value

2 Conductive

3 Non-conductive

A Process variable

B Status output

Switch-on value



Navigation

Expert → Output → PFS output → Switch-on value (0466)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 62).
- The **Limit** option is selected in the **Switch output function** parameter (→ 73).

Description

Use this function to enter the measured value for the switch-on point.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 l/h
- 0 gal/min (us)

Additional information

Description

Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).

When using a hysteresis: Switch-on value > Switch-off value.

Dependency

The unit depends on the process variable selected in the **Assign limit** parameter (→ 74).

Switch-off value



Navigation

Expert → Output → PFS output → Switch-off value (0464)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 62).
- The **Limit** option is selected in the **Switch output function** parameter (→ 73).

Description	Use this function to enter the measured value for the switch-off point.
User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
Additional information	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).</p> <p> When using a hysteresis: Switch-on value > Switch-off value.</p> <p><i>Dependency</i></p> <p> The unit depends on the process variable selected in the Assign limit parameter (→ 74).</p>

Assign flow direction check



Navigation	 Expert → Output → PFS output → Assign dir.check (0484)
Prerequisite	<ul style="list-style-type: none"> ■ The Switch option is selected in the Operating mode parameter (→ 62). ■ The Flow direction check option is selected in the Switch output function parameter (→ 73).
Description	Use this function to select a process variable for monitoring the flow direction.
Selection	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow
Factory setting	Volume flow

Assign status



Navigation	 Expert → Output → PFS output → Assign status (0485)
Prerequisite	<ul style="list-style-type: none"> ■ The Switch option is selected in the Operating mode parameter (→ 62). ■ The Status option is selected in the Switch output function parameter (→ 73).
Description	Use this function to select a device status for the switch output.
Selection	<ul style="list-style-type: none"> ■ Empty pipe detection ■ Low flow cut off ■ Digital output 2
Factory setting	Empty pipe detection

Additional information*Options*

If empty pipe detection or low flow cut off are enabled, the output is conductive. Otherwise, the switch output is non-conductive.

Switch-on delay**Navigation**

Expert → Output → PFS output → Switch-on delay (0467)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [62](#)).
- The **Limit** option is selected in the **Switch output function** parameter (→ [73](#)).

Description

Use this function to enter a delay time for switching on the switch output.

User entry

0.0 to 100.0 s

Factory setting

0.0 s

Switch-off delay**Navigation**

Expert → Output → PFS output → Switch-off delay (0465)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ [62](#)).
- The **Limit** option is selected in the **Switch output function** parameter (→ [73](#)).

Description

Use this function to enter a delay time for switching off the switch output.

User entry

0.0 to 100.0 s

Factory setting

0.0 s

Failure mode**Navigation**

Expert → Output → PFS output → Failure mode (0486)

Description

Use this function to select a failsafe mode for the switch output in the event of a device alarm.

Selection

- Actual status
- Open
- Closed

Factory setting

Open

Additional information*Options*

■ Actual status

In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the switch output. The **Actual status** option behaves in the same way as the current input value.

■ Open

In the event of a device alarm, the switch output's transistor is set to **non-conductive**.

■ Closed

In the event of a device alarm, the switch output's transistor is set to **conductive**.

Switch status**Navigation**
 Expert → Output → PFS output → Switch status (0461)
Prerequisite

In the **Operating mode** parameter (→ 62), the **Switch** option is selected.

Description

Displays the current switch status of the status output.

User interface

- Open
- Closed

Additional information*Selection*

■ Open

The switch output is not conductive.

■ Closed

The switch output is conductive.

Invert output signal**Navigation**
 Expert → Output → PFS output → Invert outp.sig. (0470)
Description

Use this function to select whether to invert the output signal.

Selection


- No
- Yes

Factory setting


No

Additional information*Selection*

No option (passive - negative)

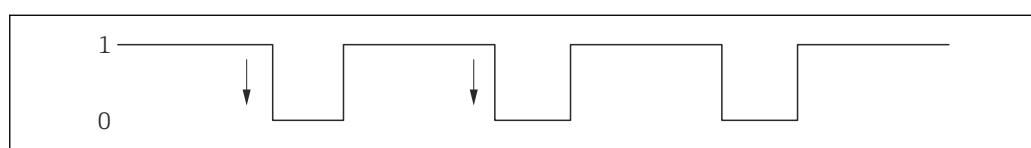


Yes option (passive - positive)

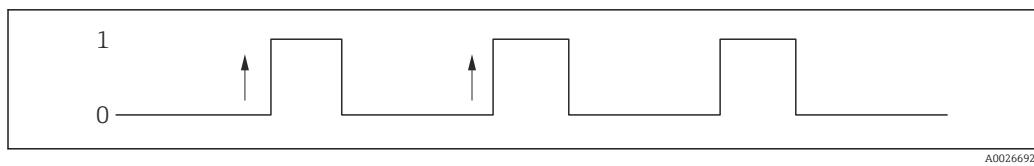

3.4 "Communication" submenu

Navigation


Expert → Communication

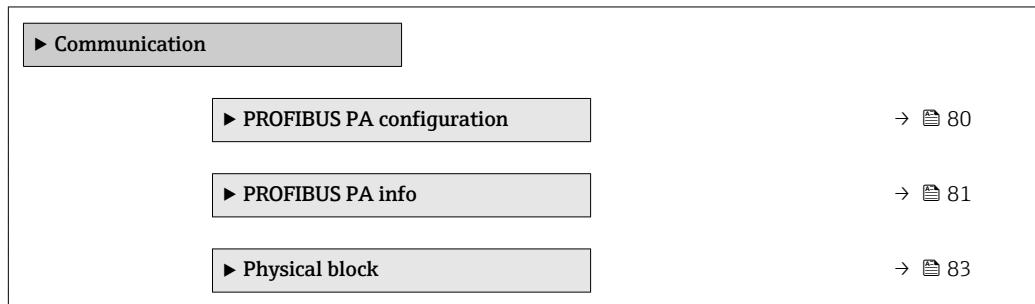

3.4.1 "PROFIBUS PA configuration" submenu

Navigation

Expert → Communication → PROFIBUS PA conf

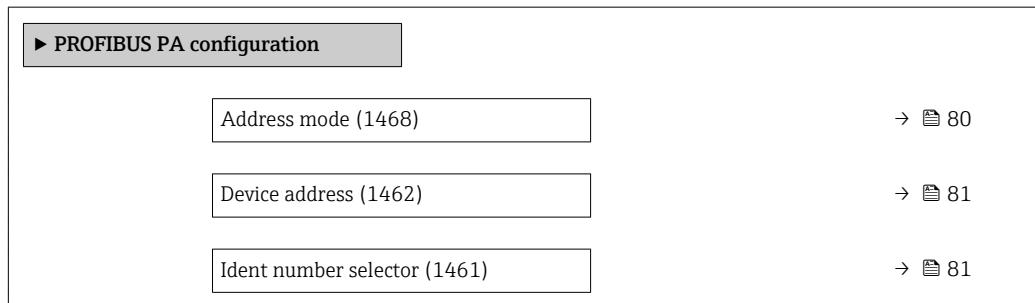

Address mode

Navigation

Expert → Communication → PROFIBUS PA conf → Address mode (1468)

Description

Displays the configured address mode.

User interface

- Hardware
- Software

Factory setting

Software

Additional information

Description

For detailed information, see the "Setting the device address" section of the Operating Instructions.

Device address

Navigation Expert → Communication → PROFIBUS PA conf → Device address (1462)

Description Use this function to enter the device address.

User entry 0 to 126

Factory setting 126

Additional information *Description*

The address must always be configured for a PROFIBUS device. The valid address range is between 1 and 126. In a PROFIBUS network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.



Displays the configured address mode: **Address mode** parameter (→ 80)

Ident number selector

Navigation Expert → Communication → PROFIBUS PA conf → Ident num select (1461)

Description Use this function to select the device master file (GSD).

Selection

- Automatic mode
- Promag 200 (0x1563)
- 2 AI, 1 Totalizer (0x9741)
- 1 AI, 1 Totalizer (0x9740)

Factory setting Automatic mode

Additional information *Description*

In order to integrate the field devices into the bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate. These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned.

3.4.2 "PROFIBUS PA info" submenu

Navigation

Expert → Communication → PROFIBUS PA info

► PROFIBUS PA info

Status PROFIBUS Master Config (1465)

→ 82

PROFIBUS ident number (1464)	→ 82
Profile version (1463)	→ 82
Base current (1466)	→ 83
Terminal voltage 1 (0662)	→ 83

Status PROFIBUS Master Config

Navigation	Expert → Communication → PROFIBUS PA info → Stat Master Conf (1465)
Description	For displaying the status of the PROFIBUS Master configuration.
User interface	<ul style="list-style-type: none">■ Active■ Not active
Factory setting	Not active

PROFIBUS ident number

Navigation	Expert → Communication → PROFIBUS PA info → Ident number (1464)
Description	For displaying the PROFIBUS identification number.
User interface	0 to FFFF
Factory setting	0x1563

Profile version

Navigation	Expert → Communication → PROFIBUS PA info → Profile version (1463)
Description	Displays the profile version.
User interface	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).
Factory setting	3.02

Base current**Navigation**

Expert → Communication → PROFIBUS PA info → Base current (1466)

Description

Every PA measuring device taps a constant base current from the MBP cable. This base current must be at least 10 mA. The base current enables power to be supplied to the measuring device.

User interface

15 mA

Terminal voltage 1**Navigation**

Expert → Communication → PROFIBUS PA info → Terminal volt. 1 (0662)

Description

Use this function to view the actual terminal voltage that is present at the current output.

User interface

0.0 to 50.0 V

3.4.3 "Physical block" submenu

Navigation

Expert → Communication → Physical block

► Physical block	
Device tag (1496)	→ 84
Static revision (1495)	→ 85
Strategy (1494)	→ 85
Alert key (1473)	→ 85
Target mode (1497)	→ 85
Mode block actual (1472)	→ 86
Mode block permitted (1493)	→ 86
Mode block normal (1492)	→ 86
Alarm summary (1474)	→ 86
Software revision (1478)	→ 87

Hardware revision (1479)	→ 87
Manufacturer ID (1502)	→ 88
Device ID (1480)	→ 88
Serial number (1481)	→ 88
Diagnostics (1482)	→ 88
Diagnostics mask (1484)	→ 89
Device certification (1486)	→ 90
Factory reset (1488)	→ 90
Descriptor (1489)	→ 90
Device message (1490)	→ 90
Device install date (1491)	→ 91
Ident number selector (1461)	→ 91
Hardware lock (1499)	→ 91
Feature supported (1477)	→ 92
Feature enabled (1476)	→ 92
Condensed status diagnostic (1500)	→ 92

Device tag**Navigation**

Expert → Communication → Physical block → Device tag (1496)

Description

Use this function to enter the name for the measuring point.

User entry

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Factory setting

Prowirl 200 PA

Static revision

Navigation	  Expert → Communication → Physical block → Static revision (1495)
Description	Displays the event counter: every write access to a static block parameter is counted.
User interface	0 to FFFF
Additional information	<i>Description</i>  Static parameters are parameters that are not changed by the process.

Strategy

Navigation	  Expert → Communication → Physical block → Strategy (1494)
Description	Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.
User entry	0 to FFFF
Factory setting	0

Alert key

Navigation	  Expert → Communication → Physical block → Alert key (1473)
Description	Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
User entry	0 to 0xFF
Factory setting	0

Target mode

Navigation	  Expert → Communication → Physical block → Target mode (1497)
Description	Displays the target mode: this target mode display indicates which mode applies for this block. This mode is generally set by a control application.
User interface	<ul style="list-style-type: none">■ Auto■ Out of service

Mode block actual

Navigation

 Expert → Communication → Physical block → Mode block act (1472)

Description

Displays the "Mode block actual": under certain circumstances a block might not operate in the target mode (mode to be applied for the block). In such instances, the "Mode block actual" indicates the valid mode in which the block is currently operating.

User interface

- Auto
- Out of service

Additional information*Description*

 A comparison of the current mode with the target mode (**Target mode** parameter (→  85)) indicates whether it was possible to reach the target mode.

Mode block permitted

Navigation

 Expert → Communication → Physical block → Mode block perm (1493)

Description

Displays the "Mode block permitted": the permitted target modes for a block are defined via the permitted mode. The modes that are supported vary depending on the type and function of a block.

User interface

0 to 255

Mode block normal

Navigation

 Expert → Communication → Physical block → Mode blk norm (1492)

Description

Displays the "Mode block normal": the normal mode is provided so that users can select the normal mode from the various modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.

User interface

- Auto
- Out of service

Alarm summary

Navigation

 Expert → Communication → Physical block → Alarm summary (1474)

Description

Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

User interface

- Discrete alarm
- Alarm state HiHi limit
- Alarm state Hi limit
- Alarm state LoLo limit
- Alarm state Lo limit
- Update Event

Additional information*Description*

 Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Physical Block function block.

Selection

- Discrete alarm
Alarm or warning message with a discrete value.
- Alarm state HiHi limit
Upper alarm limit
- Alarm state Hi limit
Upper warning limit
- Alarm state LoLo limit
Lower alarm limit
- Alarm state Lo limit
Lower warning limit
- Update Event
This option constitutes a special alarm that is triggered if a static parameter is changed. If such a parameter is changed, the associated bit is set in the **Alarm summary** parameter (→ 86), the block output switches to "GOOD (NC) Active Update Event" (if the current status has a lower priority than this) and the block remains in this state for 10 s. Afterwards, the block returns to the normal state (the output has the last status and the **Update Event** option bit in the **Alarm summary** parameter (→ 86) is deleted again).

Software revision**Navigation**

 Expert → Communication → Physical block → Software rev. (1478)

Description

Displays the firmware version of the measuring device.

User interface

Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

Hardware revision**Navigation**

 Expert → Communication → Physical block → Hardware rev. (1479)

Description

Displays the hardware revision of the measuring device.

User interface

Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

Manufacturer ID

Navigation	  Expert → Communication → Physical block → Manufacturer ID (1502)
Description	Displays the manufacturer ID with which the measuring device has been registered with the PNO (PROFIBUS User Organization). V.) registriert ist.
User interface	0 to FFFF
Factory setting	0x11

Device ID

Navigation	  Expert → Communication → Physical block → Device ID (1480)
Description	Displays the device ID for identifying the measuring device in a PROFIBUS network.
User interface	Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).
Factory setting	Promag 200 PA

Serial number

Navigation	  Expert → Communication → Physical block → Serial number (1481)
Description	Displays the serial number of the measuring device. It can also be found on the nameplate of the sensor and transmitter.
User interface	Max. 11-digit character string comprising letters and numbers.
Additional information	<i>Description</i>  Uses of the serial number <ul style="list-style-type: none">■ To identify the measuring device quickly, e.g. when contacting Endress+Hauser.■ To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Diagnostics

Navigation	  Expert → Communication → Physical block → Diagnostics (1482)
Description	Displays the diagnostic messages.
User interface	<ul style="list-style-type: none">■ Hardware failure electronics■ Hardware failure mechanics■ Temperature motor

- Electronic temperature
- Memory checksum error
- Measurement error
- Device not initialized
- Initialization error
- Zero point error
- Power supply
- Configuration invalid
- On warmstart
- On coldstart
- Maintenance required
- Characterization invalid
- Ident number violation
- More information available
- Maintenance alarm
- Maintenance demanded
- Function check or simulation
- Invalid process condition

Diagnostics mask

Navigation Expert → Communication → Physical block → Diagnostics mask (1484)**Description**

Displays the diagnostic messages supported by the measuring device.

User interface

- Hardware failure electronics
- Hardware failure mechanics
- Temperature motor
- Electronic temperature
- Memory checksum error
- Measurement error
- Device not initialized
- Initialization error
- Zero point error
- Power supply
- Configuration invalid
- On warmstart
- On coldstart
- Maintenance required
- Characterization invalid
- Ident number violation
- More information available
- Maintenance alarm
- Maintenance demanded
- Function check or simulation
- Invalid process condition

Device certification

Navigation   Expert → Communication → Physical block → Device certific. (1486)

Description Displays certificates of the measuring device, e.g. Ex certificate.

User interface Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Factory reset



Navigation   Expert → Communication → Physical block → Factory reset (1488)

Description Use this function to reset a certain set of parameters in a block.

Selection

- to defaults
- warmstart device
- reset bus address
- Cancel

Factory setting Cancel

Descriptor



Navigation   Expert → Communication → Physical block → Descriptor (1489)

Description Use this function to enter a user-specific string to describe the device within the application.

User entry Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Device message



Navigation   Expert → Communication → Physical block → Device message (1490)

Description Use this function to enter a user-definable message (a string) to describe the device within the application or in the plant.

User entry Max. 32 Zeichen wie Buchstaben, Zahlen oder Sonderzeichen (z.B. @, %, /).

Device install date

Navigation Expert → Communication → Physical block → Device inst.date (1491)

Description Use this function to enter the date of installation of the device.

User entry Max. 16 Zeichen wie Buchstaben, Zahlen oder Sonderzeichen (z.B. @, %, /).

Ident number selector

Navigation Expert → Communication → Physical block → Ident num select (1461)

Description Use this function to select the device master file (GSD).

Selection

- Automatic mode
- Promag 200 (0x1563)
- 2 AI, 1 Totalizer (0x9741)
- 1 AI, 1 Totalizer (0x9740)

Factory setting Automatic mode

Additional information *Description*

In order to integrate the field devices into the bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate. These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned.

Hardware lock

Navigation Expert → Communication → Physical block → Hardware lock (1499)

Description Displays the hardware write protection.

User interface

- Unprotected
- Protected

Additional information *Description*

Indicates whether it is possible to write-access the measuring device via PROFIBUS (acyclic data transmission, e.g. via the "FieldCare" operating program).

For detailed information on hardware write protection, see the "Write protection via write protection switch" section of the Operating Instructions.

Selection

- Unprotected
Write access via PROFIBUS is possible (acyclic data transmission).
- Protected
Write access via PROFIBUS is locked (acyclic data transmission).

Feature supported

Navigation  Expert → Communication → Physical block → Feature support (1477)

Description Displays the PROFIBUS features that are supported by the measuring device.

User interface

- Condensed status
- Classic status diagnosis
- Data exchange broadcast
- MS1 application relationship
- PROFIsafe communication

Feature enabled

Navigation  Expert → Communication → Physical block → Feature enabled (1476)

Description Displays the PROFIBUS features that are enabled in the measuring device.

User interface

- Condensed status
- Classic status diagnosis
- Data exchange broadcast
- MS1 application relationship
- PROFIsafe communication

Condensed status diagnostic 

Navigation  Expert → Communication → Physical block → Condensed status (1500)

Description Use this function to switch the condensed status diagnostic on and off.

Selection

- Off
- On

Factory setting On

3.5 "Analog inputs" submenu

Navigation  Expert → Analog inputs

 **Analog inputs**

 **Analog input 1 to 2**

→  93

3.5.1 "Analog input 1 to 2" submenu

Navigation

Expert → Analog inputs → Analog input 1 to 2

► Analog input 1 to 2	
Channel (1561-1 to 2)	→ 93
PV filter time (1524-1 to 2)	→ 93
Fail safe type (1525-1 to 2)	→ 94
Fail safe value (1526-1 to 2)	→ 94
Out value (1552-1 to 2)	→ 94
Out status (1564-1 to 2)	→ 95
Out status (1549-1 to 2)	→ 95

Channel



Navigation

Expert → Analog inputs → Analog input 1 to 2 → Channel (1561-1 to 2)

Description

For selecting the process variable.

Selection

- Volume flow
- Mass flow

Factory setting

Volume flow

PV filter time



Navigation

Expert → Analog inputs → Analog input 1 to 2 → PV filter time (1524-1 to 2)

Description

Use this function to enter a time to suppress signal peaks. During the specified time the Analog input does not respond to an erratic increase in the process variable.

User entry

Positive floating-point number

Factory setting

0

Fail safe type



Navigation Expert → Analog inputs → Analog input 1 to 2 → Fail safe type (1525–1 to 2)

Description Use this function to select the failure mode.

Selection

- Fail safe value
- Fallback value
- Off

Factory setting Off

Additional information *Selection*

If an input or simulation value has the status BAD, the function block uses this predefined failure value:

- Fail safe value
A substitute value is used. This is specified in the **Fail safe value** parameter (→ 94).
- Fallback value
If the value was good at one point, then this last valid value is used.
- Off
The system continues to use the bad value.

Fail safe value



Navigation Expert → Analog inputs → Analog input 1 to 2 → Fail safe value (1526–1 to 2)

Prerequisite In **Fail safe type** parameter (→ 94), the **Fail safe value** option is selected.

Description Use this function to enter a failure value. The value entered is displayed as the output value (**Out value** parameter (→ 94)) in the event of an error.

User entry Signed floating-point number

Factory setting 0

Out value

Navigation Expert → Analog inputs → Analog input 1 to 2 → Out value (1552–1 to 2)

Prerequisite In **Target mode** parameter (→ 96), the **Auto** option is selected.

Description Displays the analog value which is calculated when the function is executed.

User interface Signed floating-point number

Out status

Navigation	  Expert → Analog inputs → Analog input 1 to 2 → Out status (1564–1 to 2)
Description	Displays the current output status (Good, Bad, Uncertain).
User interface	<ul style="list-style-type: none">■ Good■ Uncertain■ Bad

Out status

Navigation	  Expert → Analog inputs → Analog input 1 to 2 → Out status (1549–1 to 2)
Prerequisite	In Target mode parameter (→ 96), the Auto option is selected.
Description	Displays the current output status (hex value).
User interface	0 to 0xFF

Tag description

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Tag description (1562–1 to 2)
Description	Use this function to enter a string to identify the block.
User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static revision

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Static revision (1560–1 to 2)
Description	Displays the event counter: every write access to a static block parameter is counted.
User interface	0 to FFFF
Additional information	<i>Description</i>  Static parameters are parameters that are not changed by the process.

Strategy**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Strategy (1559–1 to 2)

Description

Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.

User entry

0 to FFFF

Factory setting

0

Alert key**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Alert key (1522–1 to 2)

Description

Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.

User entry

0 to 0xFF

Factory setting

0

Target mode**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Target mode (1563–1 to 2)

Description

Displays the target mode: this target mode display indicates which mode applies for this block. This mode is generally set by a control application.

User interface

- Auto
- Man
- Out of service

Mode block actual**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Mode block act (1521–1 to 2)

Description

Displays the "Mode block actual": under certain circumstances a block might not operate in the target mode (mode to be applied for the block). In such instances, the "Mode block actual" indicates the valid mode in which the block is currently operating. A comparison of the current mode with the target mode indicates whether it was possible to reach the target mode.

User interface

- Auto
- Man
- Out of service

Additional information*Description*

A comparison of the current mode with the target mode (**Target mode** parameter (→ 96)) indicates whether it was possible to reach the target mode.

Mode block permitted**Navigation**

Expert → Analog inputs → Analog input 1 to 2 → Mode block perm (1553-1 to 2)

Description

Displays the "Mode block permitted": the permitted target modes for a block are defined via the permitted mode. The modes that are supported vary depending on the type and function of a block.

User interface

0 to 255

Mode block normal**Navigation**

Expert → Analog inputs → Analog input 1 to 2 → Mode blk norm (1546-1 to 2)

Description

Displays the "Mode block normal": the normal mode is provided so that users can select the normal mode from the various modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.

User interface

- Auto
- Man
- Out of service

Alarm summary**Navigation**

Expert → Analog inputs → Analog input 1 to 2 → Alarm summary (1537-1 to 2)

Description

Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

User interface

- Discrete alarm
- Alarm state HiHi limit
- Alarm state Hi limit
- Alarm state LoLo limit
- Alarm state Lo limit
- Update Event

Additional information*Description*

Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Analog Inputs function block.

Batch ID**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Batch ID (1533–1 to 2)

Description

Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.

User entry

Positive integer

Batch operation**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Batch operation (1534–1 to 2)

Description

Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.

User entry

0 to 65 535

Factory setting

0

Batch phase**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Batch phase (1535–1 to 2)

Description

Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.

User entry

0 to 65 535

Factory setting

0

Batch Recipe Unit Procedure**Navigation**

█ Expert → Analog inputs → Analog input 1 to 2 → Batch Recipe (1536–1 to 2)

Description

Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

User entry

0 to 65 535

Factory setting

0

Additional information *Description*

The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

PV scale lower range

Navigation	Expert → Analog inputs → Analog input 1 to 2 → PVscale lo range (1554–1 to 2)
Description	Use this function to enter the lower value range for the input value (Process Value Scale) in system units. The process value scale normalizes the input value to a user-specific range.
User entry	Signed floating-point number
Factory setting	0

PV scale upper range

Navigation	Expert → Analog inputs → Analog input 1 to 2 → PVscale up range (1555–1 to 2)
Description	Use this function to enter the upper value range for the input value (Process Value Scale) in system units. The process value scale normalizes the input value to a user-specific range.
User entry	Signed floating-point number
Factory setting	100.0

Out scale lower range

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Out scale low (1548–1 to 2)
Description	Use this function to enter the lower value range for the output value in system units.
User entry	Signed floating-point number
Factory setting	0

Out scale upper range

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Out scale up (1551–1 to 2)
Description	Use this function to enter the upper value range for the output value in system units.

User entry Signed floating-point number

Factory setting 100.0

Lin type

Navigation ☐ Expert → Analog inputs → Analog input 1 to 2 → Lin type (1523–1 to 2)

Description Use this function to switch off the linearization type for the input value.

Selection Off

Factory setting Off

Out unit

Navigation ☐ Expert → Analog inputs → Analog input 1 to 2 → Out unit (1550–1 to 2)

Description Use this function to enter a numerical code (hex) for the system unit.

User entry 0 to 65 535

Factory setting 1997

Out decimal point

Navigation ☐ Expert → Analog inputs → Analog input 1 to 2 → Out dec_point (1547–1 to 2)

Description Use this function to enter the maximum number of decimal places that are displayed for the output value.

User entry 0 to 7

Factory setting 0

Alarm hysteresis

Navigation ☐ Expert → Analog inputs → Analog input 1 to 2 → Alarm hysteresis (1527–1 to 2)

Description Use this function to enter the hysteresis value for the upper and lower warning or alarm limit values.

User entry Signed floating-point number

Factory setting	0
------------------------	---

Hi Hi Lim

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Hi Hi Lim (1528–1 to 2)
Description	Use this function to enter the value for the upper alarm limit (Hi Hi alarm value parameter (→ 102)).
User entry	Signed floating-point number
Factory setting	Positive floating-point number
Additional information	<p><i>Description</i></p> <p> If the output value Out value (→ 94) exceeds this limit value, the Hi Hi alarm state parameter (→ 103) is output.</p> <p><i>User entry</i></p> <p> The value is entered in the defined units (Out unit parameter (→ 100)) and must be in the range defined in the Out scale lower range parameter (→ 99) and Out scale upper range parameter (→ 99).</p>

Hi Lim

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Hi Lim (1529–1 to 2)
Description	Use this function to enter the value for the upper warning limit (Hi alarm value parameter (→ 103)).
User entry	Signed floating-point number
Factory setting	Positive floating-point number
Additional information	<p><i>Description</i></p> <p> If the output value Out value (→ 94) exceeds this limit value, the Hi alarm state parameter (→ 103) is output.</p> <p><i>User entry</i></p> <p> The value is entered in the defined units (Out unit parameter (→ 100)) and must be in the range defined in the Out scale lower range parameter (→ 99) and Out scale upper range parameter (→ 99).</p>

Lo Lim

Navigation	█ Expert → Analog inputs → Analog input 1 to 2 → Lo Lim (1530–1 to 2)
Description	Use this function to enter the value for the lower warning limit (Lo alarm value parameter (→ 103)).
User entry	Signed floating-point number
Factory setting	Negative floating-point number
Additional information	<i>Description</i> i If the output value Out value (→ 94) exceeds this limit value, the Lo alarm state parameter (→ 104) is output. <i>User entry</i> i The value is entered in the defined units (Out unit parameter (→ 100)) and must be in the range defined in the Out scale lower range parameter (→ 99) and Out scale upper range parameter (→ 99).

Lo Lo Lim

Navigation	█ Expert → Analog inputs → Analog input 1 to 2 → Lo Lo Lim (1531–1 to 2)
Description	Use this function to enter the value for the lower alarm limit (Lo Lo alarm value parameter (→ 104)).
User entry	Signed floating-point number
Factory setting	Negative floating-point number
Additional information	<i>Description</i> i If the output value Out value (→ 94) exceeds this limit value, the Lo Lo alarm state parameter (→ 104) is output. <i>User entry</i> i The value is entered in the defined units (Out unit parameter (→ 100)) and must be in the range defined in the Out scale lower range parameter (→ 99) and Out scale upper range parameter (→ 99).

Hi Hi alarm value

Navigation	█ Expert → Analog inputs → Analog input 1 to 2 → HiHi alarm value (1541–1 to 2)
Description	Displays the alarm value for the upper alarm limit value (Hi Hi Lim parameter (→ 101)).

User interface	Signed floating-point number
----------------	------------------------------

Hi Hi alarm state

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → HiHi alarm state (1540–1 to 2)
Description	Displays the status for the upper alarm limit value (Hi Hi Lim parameter (→  101)).
User interface	<ul style="list-style-type: none">■ No alarm■ Alarm state HiHi limit
Additional information	<i>User interface</i>  The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.

Hi alarm value

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Hi alarm value (1539–1 to 2)
Description	Displays the alarm value for the upper warning limit value (Hi Lim parameter (→  101)).
User interface	Signed floating-point number

Hi alarm state

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Hi alarm state (1538–1 to 2)
Description	Displays the status for the upper warning limit value (Hi Lim parameter (→  101)).
User interface	<ul style="list-style-type: none">■ No warning■ Alarm state Hi limit
Additional information	<i>User interface</i>  The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

Lo alarm value

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Lo alarm value (1543–1 to 2)
Description	Displays the alarm value for the lower warning limit value (Lo Lim parameter (→  102)).

User interface	Signed floating-point number
----------------	------------------------------

Lo alarm state

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Lo alarm state (1542–1 to 2)
Description	Displays the status for the lower warning limit value (Lo Lim parameter (→  102)).
User interface	<ul style="list-style-type: none">■ No warning■ Alarm state Lo limit
Additional information	<i>User interface</i>  The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

Lo Lo alarm value

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → LoLo alarm value (1545–1 to 2)
Description	Displays the alarm value for the lower alarm limit value (Lo Lo Lim parameter (→  102)).
User interface	Signed floating-point number

Lo Lo alarm state

Navigation	 Expert → Analog inputs → Analog input 1 to 2 → LoLo alarm state (1544–1 to 2)
Description	Displays the status for the lower alarm limit value (Lo Lo Lim parameter (→  102)).
User interface	<ul style="list-style-type: none">■ No alarm■ Alarm state LoLo limit
Additional information	<i>User interface</i>  The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.

Simulate enabled



Navigation	 Expert → Analog inputs → Analog input 1 to 2 → Simulate enabled (1556–1 to 2)
Description	Use this function to enable or disable block simulation.

Selection	<ul style="list-style-type: none">■ Disable■ Enable
Factory setting	Disable
Additional information	<i>Description</i> The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.

Simulate value

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Simulate value (1558-1 to 2)
Description	Use this function to enter a simulation value for the block.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i> The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.

Simulate status

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Simulate status (1557-1 to 2)
Description	Use this function to enter a simulation status for the block.
User entry	0 to 255
Factory setting	0
Additional information	<i>Description</i> The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.

Out unit text

Navigation	Expert → Analog inputs → Analog input 1 to 2 → Out unit text (1532-1 to 2)
Description	Use this function to enter the out unit text: if a specific out unit does not appear in the code list, the user can enter the specific text. The unit code is then equivalent to the definition provided here.


User entry Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

Factory setting NoUnit

3.6 "Discrete inputs" submenu

Navigation


Expert → Discrete inputs

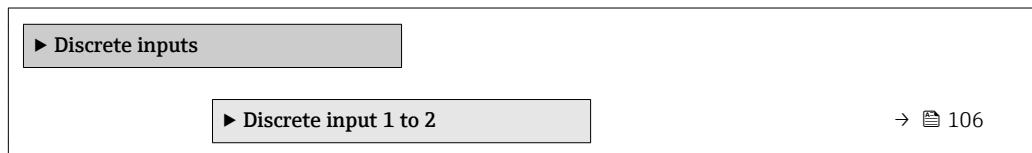

3.6.1 "Discrete input 1 to 2" submenu

Navigation

Expert → Discrete inputs → Discrete input 1 to 2

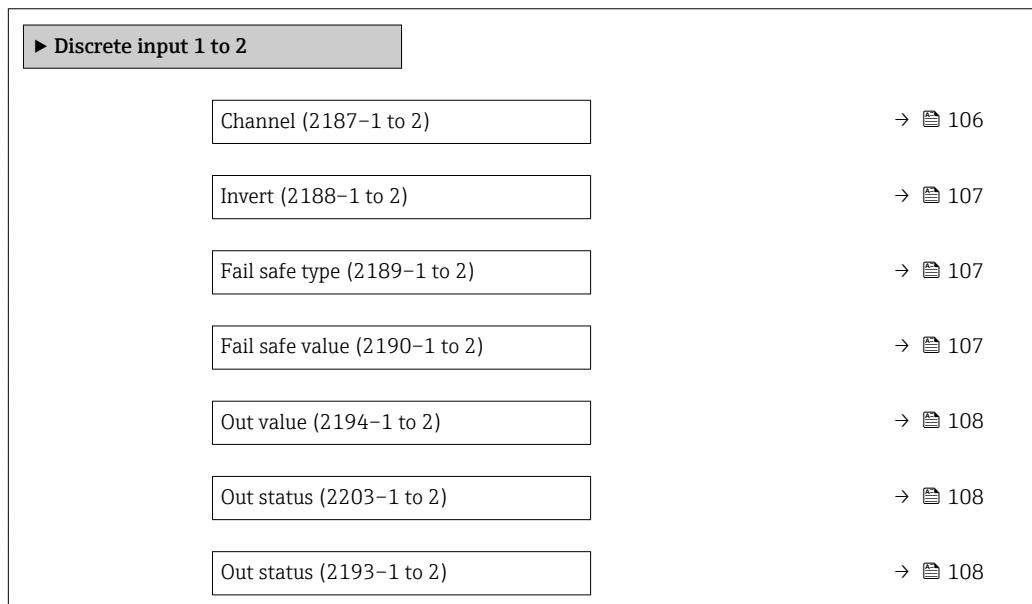

Channel



Navigation Expert → Discrete inputs → Discrete input 1 to 2 → Channel (2187-1 to 2)

Description Use this function to assign a measured variable to the particular function block.

Selection

- Empty pipe detection
- Low flow cut off
- Switch output status*
- Verification status*

* Visibility depends on order options or device settings

Factory setting	Switch output status
------------------------	----------------------

Invert

Navigation	Expert → Discrete inputs → Discrete input 1 to 2 → Invert (2188–1 to 2)
Description	Use this function to invert the input signal.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Factory setting	Off

Fail safe type

Navigation	Expert → Discrete inputs → Discrete input 1 to 2 → Fail safe type (2189–1 to 2)
Description	Use this function to select the failure mode.
Selection	<ul style="list-style-type: none"> ▪ Fail safe value ▪ Fallback value ▪ Off
Factory setting	Off
Additional information	<p><i>Selection</i></p> <p>If an input or simulation value has the status BAD, the function block uses this predefined failure value:</p> <ul style="list-style-type: none"> ▪ Fail safe value A substitute value is used. This is specified in the Fail safe value parameter (→ 107). ▪ Fallback value If the value was good at one point, then this last valid value is used. ▪ Off The system continues to use the bad value.

Fail safe value

Navigation	Expert → Discrete inputs → Discrete input 1 to 2 → Fail safe value (2190–1 to 2)
Prerequisite	In Fail safe type parameter (→ 107), the Fail safe value option is selected.
Description	Use this function to enter a failure value. The value entered is displayed as the output value (Out value parameter (→ 108)) in the event of an error.
User entry	0 to 255

Factory setting 0

Out value

Navigation  Expert → Discrete inputs → Discrete input 1 to 2 → Out value (2194-1 to 2)

Prerequisite In **Target mode** parameter (→ [109](#)), the **Auto** option is selected.

Description Displays the analog value which is calculated when the function is executed.

User interface 0 to 255

Out status

Navigation  Expert → Discrete inputs → Discrete input 1 to 2 → Out status (2203-1 to 2)

Description Displays the current output status (Good, Bad, Uncertain).

User interface

- Good
- Uncertain
- Bad

Out status

Navigation  Expert → Discrete inputs → Discrete input 1 to 2 → Out status (2193-1 to 2)

Prerequisite In **Target mode** parameter (→ [109](#)), the **Auto** option is selected.

Description Displays the current output status (hex value).

User interface 0 to 0xFF

Tag description



Navigation  Expert → Discrete inputs → Discrete input 1 to 2 → Tag description (2201-1 to 2)

Description Use this function to enter a string to identify the block.

User entry Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static revision

Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Static revision (2200–1 to 2)
Description	Displays the event counter: every write access to a static block parameter is counted.
User interface	0 to FFFF
Additional information	<p><i>Description</i></p>  Static parameters are parameters that are not changed by the process.

Strategy



Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Strategy (2199–1 to 2)
Description	Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.
User entry	0 to FFFF
Factory setting	0

Alert key



Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Alert key (2182–1 to 2)
Description	Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
User entry	0 to 0xFF
Factory setting	0

Target mode



Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Target mode (2202–1 to 2)
Description	Displays the target mode: this target mode display indicates which mode applies for this block. This mode is generally set by a control application. Target mode (→  109)
User interface	Auto

Mode block actual

Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Mode block act (2181-1 to 2)
Description	Displays the "Mode block actual": under certain circumstances a block might not operate in the target mode (mode to be applied for the block). In such instances, the "Mode block actual" indicates the valid mode in which the block is currently operating. A comparison of the current mode with the target mode indicates whether it was possible to reach the target mode.
User interface	<ul style="list-style-type: none">▪ Auto▪ Man▪ Out of service
Additional information	Description  A comparison of the current mode with the target mode (Target mode parameter (→  109)) indicates whether it was possible to reach the target mode.

Mode block permitted

Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Mode block perm (2195-1 to 2)
Description	Displays the "Mode block permitted": the permitted target modes for a block are defined via the permitted mode. The modes that are supported vary depending on the type and function of a block.
User interface	0 to 255

Mode block normal

Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Mode blk norm (2192-1 to 2)
Description	Displays the "Mode block normal": the normal mode is provided so that users can select the normal mode from the various modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.
User interface	<ul style="list-style-type: none">▪ Auto▪ Man▪ Out of service

Alarm summary

Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Alarm summary (2191-1 to 2)
Description	Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

User interface	<ul style="list-style-type: none"> ■ Discrete alarm ■ Alarm state HiHi limit ■ Alarm state Hi limit ■ Alarm state LoLo limit ■ Alarm state Lo limit ■ Update Event
Additional information	<p>Description</p> <p> Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Discrete Inputs function block.</p>

Batch ID	
Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Batch ID (2183–1 to 2)
Description	Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.
User entry	Positive integer

Batch operation	
Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Batch operation (2184–1 to 2)
Description	Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.
User entry	0 to 65 535
Factory setting	0

Batch phase	
Navigation	 Expert → Discrete inputs → Discrete input 1 to 2 → Batch phase (2185–1 to 2)
Description	Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.
User entry	0 to 65 535
Factory setting	0

Batch Recipe Unit Procedure

Navigation Expert → Discrete inputs → Discrete input 1 to 2 → Batch Recipe (2186–1 to 2)

Description Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

User entry 0 to 65 535

Factory setting 0

Additional information *Description*

The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

Simulate enabled

Navigation Expert → Discrete inputs → Discrete input 1 to 2 → Simulate enabled (2196–1 to 2)

Description Use this function to enable or disable block simulation.

Selection
■ Disable
■ Enable

Factory setting Disable

Additional information *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.

Simulate status

Navigation Expert → Discrete inputs → Discrete input 1 to 2 → Simulate status (2197–1 to 2)

Description Use this function to enter a simulation status for the block.

User entry 0 to 255

Factory setting 0

Additional information *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.

Simulate value

Navigation Expert → Discrete inputs → Discrete input 1 to 2 → Simulate value (2198-1 to 2)

Description Use this function to enter a simulation value for the block.

User entry 0 to 255

Factory setting 0

Additional information *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.

3.7 "Discrete outputs" submenu

Navigation Expert → Discrete outputs

► Discrete outputs

► Discrete output 1 to 3

→ 113

3.7.1 "Discrete output 1 to 3" submenu

Navigation Expert → Discrete outputs → Discr. out. 1 to 3

► Discrete output 1 to 3

Set point value (1715-1 to 3)

→ 114

Set point status (1714-1 to 3)

→ 114

Invert (1692-1 to 3)

→ 114

Fail safe time (1697-1 to 3)

→ 114

Fail safe type (1696-1 to 3)

→ 115

Fail safe value (1693-1 to 3)

→ 115

Out value (1704-1 to 3)

→ 116

Out status (1723-1 to 3)

→ 116

Out status (1703-1 to 3)

→ 116

Set point value

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Set point val (1715–1 to 3)

Description Use this function to enter an analog set point.

User entry 0 to 255

Factory setting 0

Set point status

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Set point status (1714–1 to 3)

Description Use this function to enter a status for the analog set point.

User entry 0 to 255

Factory setting 0

Invert

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Invert (1692–1 to 3)

Description Use this function to switch inversion on and off. Specifies whether the set point should be inverted before the value is set as the output value or the RCAS value (in the automatic mode).

Selection

- Off
- On

Factory setting Off

Fail safe time

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Fail safe time (1697–1 to 3)

Description Use this function to enter a time span within which the criteria for an error must be met continuously before an error message or notice message is generated.

User entry Signed floating-point number

Factory setting 0

Additional information*User entry***NOTE!**

If this parameter is used, error messages and notice messages are delayed by the set time before being relayed to the higher-level controller (DCS, etc.).

- ▶ Check in advance to ensure that the safety-specific requirements of the process would permit this.
- ▶ If the error and notice messages may not be suppressed, a value of 0 seconds must be configured here.

Fail safe type**Navigation**
 Expert → Discrete outputs → Discr. out. 1 to 3 → Fail safe type (1696–1 to 3)
Description

Use this function to select the failure mode.

Selection

- Fail safe value
- Fallback value
- Off

Factory setting

Fallback value

Additional information

Selection

If an input or simulation value has the status BAD, the function block uses this predefined failure value:

- Fail safe value
A substitute value is used. This is specified in the **Fail safe value** parameter (→ 115).
- Fallback value
If the value was good at one point, then this last valid value is used.
- Off
The system continues to use the bad value.

Fail safe value**Navigation**
 Expert → Discrete outputs → Discr. out. 1 to 3 → Fail safe value (1693–1 to 3)
Prerequisite

In **Fail safe type** parameter (→ 115), the **Fail safe value** option is selected.

Description

Use this function to enter a failure value. The value entered is displayed as the output value (**Out value** parameter (→ 116)) in the event of an error.

User entry

0 to 255

Factory setting

0

Out value

Navigation	  Expert → Discrete outputs → Discr. out. 1 to 3 → Out value (1704–1 to 3)
Prerequisite	In Target mode parameter (→  117), the Auto option is selected.
Description	Displays the analog value which is calculated when the function is executed.
User interface	0 to 255

Out status

Navigation	  Expert → Discrete outputs → Discr. out. 1 to 3 → Out status (1723–1 to 3)
Description	Displays the current output status (Good, Bad, Uncertain).
User interface	<ul style="list-style-type: none">■ Good■ Uncertain■ Bad

Out status

Navigation	  Expert → Discrete outputs → Discr. out. 1 to 3 → Out status (1703–1 to 3)
Prerequisite	In Target mode parameter (→  117), the Auto option is selected.
Description	Displays the current output status (hex value).
User interface	0 to 0xFF

Tag description



Navigation	  Expert → Discrete outputs → Discr. out. 1 to 3 → Tag description (1721–1 to 3)
Description	Use this function to enter a string to identify the block.
User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static revision

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Static revision (1720–1 to 3)
Description	Displays the event counter: every write access to a static block parameter is counted.
User interface	0 to FFFF
Additional information	<i>Description</i>  Static parameters are parameters that are not changed by the process.

Strategy



Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Strategy (1719–1 to 3)
Description	Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.
User entry	0 to FFFF
Factory setting	0

Alert key



Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Alert key (1694–1 to 3)
Description	Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
User entry	0 to 0xFF
Factory setting	0

Target mode



Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Target mode (1722–1 to 3)
Description	Displays the target mode: this target mode display indicates which mode applies for this block. This mode is generally set by a control application.

User interface

- Local override
- Remote Cascaded
- Man
- Out of service
- Auto

Mode block actual

Navigation

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Mode block act (1691–1 to 3)

Description

Displays the "Mode block actual": under certain circumstances a block might not operate in the target mode (mode to be applied for the block). In such instances, the "Mode block actual" indicates the valid mode in which the block is currently operating. A comparison of the current mode with the target mode indicates whether it was possible to reach the target mode.

User interface

- Local override
- Remote Cascaded
- Man
- Out of service
- Auto

Additional information**Description**

 A comparison of the current mode with the target mode (**Target mode** parameter (→ 117)) indicates whether it was possible to reach the target mode.

Mode block permitted

Navigation

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Mode block perm (1705–1 to 3)

Description

Displays the "Mode block permitted": the permitted target modes for a block are defined via the permitted mode. The modes that are supported vary depending on the type and function of a block.

User interface

0 to 255

Mode block normal

Navigation

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Mode blk norm (1702–1 to 3)

Description

Displays the "Mode block normal": the normal mode is provided so that users can select the normal mode from the various modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.

User interface	<ul style="list-style-type: none"> ■ Local override ■ Remote Cascaded ■ Man ■ Out of service ■ Auto
-----------------------	--

Alarm summary

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Alarm summary (1701–1 to 3)
-------------------	--

Description	Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.
--------------------	---

User interface	<ul style="list-style-type: none"> ■ Discrete alarm ■ Alarm state HiHi limit ■ Alarm state Hi limit ■ Alarm state LoLo limit ■ Alarm state Lo limit ■ Update Event
-----------------------	--

Additional information	<i>Description</i>
	 Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Discrete Outputs function block.

Batch ID



Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Batch ID (1695–1 to 3)
-------------------	---

Description	Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.
--------------------	---

User entry	Positive integer
-------------------	------------------

Batch operation



Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Batch operation (1698–1 to 3)
-------------------	--

Description	Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.
--------------------	--

User entry	0 to 65 535
-------------------	-------------

Factory setting	0
------------------------	---

Batch phase

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Batch phase (1699–1 to 3)

Description Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.

User entry 0 to 65 535

Factory setting 0

Batch Recipe Unit Procedure

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Batch Recipe (1700–1 to 3)

Description Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

User entry 0 to 65 535

Factory setting 0

Additional information *Description*

The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

Readback value

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Readback value (1713–1 to 3)

Description Displays the readback value. The readback value indicates the current position of the control element and the element's sensors.

User interface 0 to 255

Readback status

Navigation Expert → Discrete outputs → Discr. out. 1 to 3 → Readback status (1712–1 to 3)

Description Displays the readback status. Displays the status of the readback value.

User interface 0 to 255

RCAS in value

Navigation	Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS in value (1707–1 to 3)
Description	Use this function to enter the RCAS (Remote Cascade) in value. The block set point is set by a control application via the remote cascade RCAS in value parameter (→ 121). The normal algorithm calculates the output value of the block on the basis of this set point.
User entry	0 to 255
Factory setting	0

RCAS in status

Navigation	Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS in status (1706–1 to 3)
Description	Use this function to enter the RCAS (Remote Cascade) in status. Defines the status for the RCAS in value (→ 121).
User entry	0 to 255
Factory setting	0

Input channel

Navigation	Expert → Discrete outputs → Discr. out. 1 to 3 → Input channel (1724–1 to 3)
Description	Use this function to select the input channel. The number of logical hardware channels from the converter that is connected to this I/O block.
Selection	None
Factory setting	None

Output channel

Navigation	Expert → Discrete outputs → Discr. out. 1 to 3 → Output channel (1725–1 to 3)
Description	Use this function to select the output channel. The number of logical hardware channels to the converter that is connected to this I/O block.

Selection	<ul style="list-style-type: none">■ Flow override■ Pulse/frequency/switch output *■ Start verification
Factory setting	Flow override

RCAS out value

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS out value (1711-1 to 3)
Description	Displays the RCAS out value. Displays the set point of the block which is made available to the higher-level host for monitoring/back calculation and which makes it possible to take action under certain conditions or in a different mode.
User interface	0 to 255

RCAS out status

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS out status (1708-1 to 3)
Description	Displays the RCAS out status. Displays the status of the set point.
User interface	0 to 255

Simulate enabled



Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Simulate enabled (1716-1 to 3)
Description	Use this function to enable or disable block simulation.
Selection	<ul style="list-style-type: none">■ Disable■ Enable
Factory setting	Disable
Additional information	<p><i>Description</i></p> <p>The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.</p>

* Visibility depends on order options or device settings

Simulate value

Navigation	Expert → Discrete outputs → Discr. out. 1 to 3 → Simulate value (1718-1 to 3)
Description	Use this function to enter a simulation value.
User entry	0 to 255
Factory setting	0
Additional information	<p><i>Description</i></p> <p>The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.</p>


Simulate status

Navigation	Expert → Discrete outputs → Discr. out. 1 to 3 → Simulate status (1717-1 to 3)
Description	Use this function to enter a simulation status for the block.
User entry	0 to 255
Factory setting	0
Additional information	<p><i>Description</i></p> <p>The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.</p>

3.8 "Application" submenu

Navigation


Expert → Application

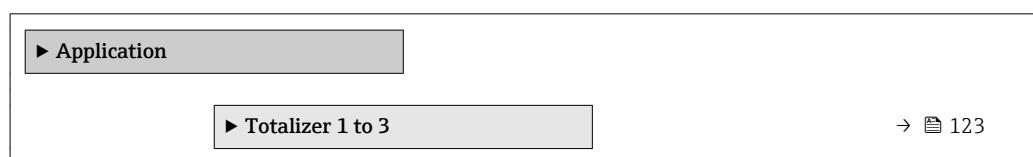

3.8.1 "Totalizer 1 to 3" submenu

Navigation

Expert → Application → Totalizer 1 to 3

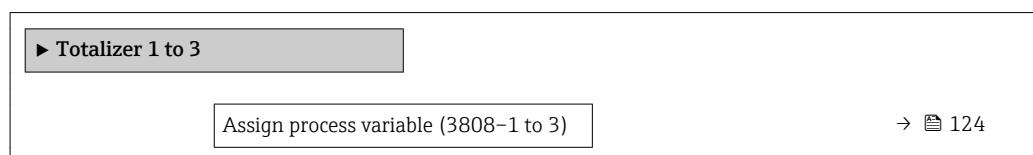

Unit totalizer (3835-1 to 3)	→ 124
Control Totalizer 1 to 3 (3830-1 to 3)	→ 125
Preset value 1 to 3 (3829-1 to 3)	→ 126
Totalizer operation mode (3823-1 to 3)	→ 126
Failure mode (3810-1 to 3)	→ 127
Totalizer value 1 to 3 (3827-1 to 3)	→ 127
Totalizer status 1 to 3 (3826-1 to 3)	→ 128
Totalizer status (Hex) 1 to 3 (3825-1 to 3)	→ 128

Assign process variable



Navigation

Expert → Application → Totalizer 1 to 3 → Assign variable (3808-1 to 3)

Description

Use this function to select a process variable for totalizer 1-3.

Selection

- Volume flow
- Mass flow

Factory setting

Volume flow

Additional information

Description

If the option selected is changed, the device resets the totalizer to 0.

Unit totalizer

Navigation

Expert → Application → Totalizer 1 to 3 → Unit totalizer (3835-1 to 3)

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ [124](#)):

- Volume flow
- Mass flow

Description

Use this function to select the process variable of a totalizer.

The unit is selected separately for each totalizer. It is independent of the option selected in the **System units** submenu (→ [44](#)).

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

or

SI units

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;oil)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Factory setting

Country-specific:

- m³
- ft³

Additional information*Options*

The selection depends on the process variable selected in the **Assign process variable** parameter (→ 124).

Dependency

The following parameters depend on the option selected:

- Totalizer value (→ 41)
- Preset value (→ 126)

Control Totalizer 1 to 3

Navigation

Expert → Application → Totalizer 1 to 3 → Control Tot. 1 to 3 (3830-1 to 3)

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 124):

- Volume flow
- Mass flow

Description

Use this function to select the control of totalizer value 1-3.

Selection

- Totalize
- Reset + hold
- Preset + hold

Factory setting

Totalize

Additional information*Options*

- Totalize
The totalizer is started or continues totalizing with the current counter reading.
- Reset + hold
The totaling process is stopped and the totalizer is reset to 0.
- Preset + hold
The totaling process is stopped and the totalizer is set to its defined start value from the **Preset value** parameter.

Preset value 1 to 3

Navigation Expert → Application → Totalizer 1 to 3 → Preset value 1 to 3 (3829–1 to 3)**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→  124):

- Volume flow
- Mass flow

Description

Use this function to enter an initial value for the specific totalizer.

User entry

Signed floating-point number

Factory setting

Country-specific:

- m^3
- ft^3

Additional information*User entry*

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→  124).

Example

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

Totalizer operation mode

**Navigation** Expert → Application → Totalizer 1 to 3 → Operation mode (3823–1 to 3)**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→  124):

- Volume flow
- Mass flow

Description

Use this function to select how the totalizer summates the flow.

Selection

- Net flow total
- Forward flow total
- Reverse flow total
- Last valid value

Factory setting	Net flow total
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Net flow total Positive and negative flow values are totalized and balanced against one another. Net flow is registered in the flow direction. ■ Forward flow total Only the flow in the forward flow direction is totalized. ■ Reverse flow total Only the flow against the forward flow direction is totalized (= reverse flow total). ■ Last valid value The value is frozen. Totaling is stopped.

Failure mode

Navigation	 Expert → Application → Totalizer 1 to 3 → Failure mode (3810-1 to 3)
Prerequisite	One of the following options is selected in the Assign process variable parameter (→  124): <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow
Description	Use this function to select how a totalizer behaves in an alarm condition.
Selection	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value
Factory setting	Actual value
Additional information	<p><i>Description</i></p> <p> This setting does not affect the error response mode of other totalizers and the outputs. This is specified in separate parameters.</p> <p><i>Options</i></p> <ul style="list-style-type: none"> ■ Stop Totalizing is stopped in an alarm condition. ■ Actual value The totalizer continues to count based on the actual measured value; the error is ignored. ■ Last valid value The totalizer continues to count based on the last valid measured value before the error occurred.

Totalizer value 1 to 3

Navigation	 Expert → Application → Totalizer 1 to 3 → Totalizer val. 1 to 3 (3827-1 to 3)
Prerequisite	In Target mode parameter (→  129), the Auto option is selected.

Description	Displays the current reading for totalizer 1-3.
User interface	Signed floating-point number
Additional information	<p><i>Description</i></p> <p>As it is only possible to display a maximum of 7 digits, the current counter value is the sum of the totalizer value and the overflow value from the Totalizer overflow 1 to 3 parameter if the display range is exceeded.</p> <p> In the event of an error, the totalizer adopts the mode defined in the Failure mode parameter.</p> <p><i>User interface</i></p> <p>The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the Totalizer operation mode parameter.</p> <p> The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 124).</p>

Totalizer status 1 to 3

Navigation	  Expert → Application → Totalizer 1 to 3 → Tot. status 1 to 3 (3826-1 to 3)
Description	Displays the status of the particular totalizer.
User interface	<ul style="list-style-type: none"> ■ Good ■ Uncertain ■ Bad

Totalizer status (Hex) 1 to 3

Navigation	  Expert → Application → Totalizer 1 to 3 → Status (Hex) 1 to 3 (3825-1 to 3)
Prerequisite	In Target mode parameter (→ 129), the Auto option is selected.
Description	Displays the status value (hex) of the particular totalizer.
User interface	0 to 0xFF

Tag description

Navigation	 Expert → Application → Totalizer 1 to 3 → Tag description (3833-1 to 3)
Description	Use this function to enter a string to identify the block.
User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

Static revision

Navigation  Expert → Application → Totalizer 1 to 3 → Static revision (3832–1 to 3)

Description Displays the event counter: every write access to a static block parameter is counted.

User interface 0 to FFFF

Additional information *Description*



Static parameters are parameters that are not changed by the process.

Strategy



Navigation  Expert → Application → Totalizer 1 to 3 → Strategy (3831–1 to 3)

Description Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.

User entry 0 to FFFF

Factory setting 0

Alert key



Navigation  Expert → Application → Totalizer 1 to 3 → Alert key (3803–1 to 3)

Description Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.

User entry 0 to 0xFF

Factory setting 0

Target mode



Navigation  Expert → Application → Totalizer 1 to 3 → Target mode (3834–1 to 3)

Description Use this function to select the target mode: this choice of target mode specifies which mode should apply for this block. This mode is generally selected by a control application or an operator via HMI.

Selection

- Auto
- Man
- Out of service

Mode block actual

Navigation  Expert → Application → Totalizer 1 to 3 → Mode block act (3801–1 to 3)

Description Displays the "Mode block actual": under certain circumstances a block might not operate in the target mode (mode to be applied for the block). In such instances, the "Mode block actual" indicates the valid mode in which the block is currently operating. A comparison of the current mode with the target mode indicates whether it was possible to reach the target mode.

User interface

- Auto
- Man
- Out of service

Additional information *Description*
 A comparison of the current mode with the target mode (**Target mode** parameter (→  129)) indicates whether it was possible to reach the target mode.

Mode block permitted

Navigation  Expert → Application → Totalizer 1 to 3 → Mode block perm (3828–1 to 3)

Description Displays the "Mode block permitted": the permitted target modes for a block are defined via the permitted mode. The modes that are supported vary depending on the type and function of a block.

User interface 0 to 255

Mode block normal

Navigation  Expert → Application → Totalizer 1 to 3 → Mode blk norm (3824–1 to 3)

Description Displays the "Mode block normal": the normal mode is provided so that users can select the normal mode from the various modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.

User interface

- Auto
- Man
- Out of service

Alarm summary

Navigation  Expert → Application → Totalizer 1 to 3 → Alarm summary (3809–1 to 3)

Description Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

User interface	<ul style="list-style-type: none">■ Discrete alarm■ Alarm state HiHi limit■ Alarm state Hi limit■ Alarm state LoLo limit■ Alarm state Lo limit■ Update Event
Additional information	<p>Description</p> <p> Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Totalizer function block.</p>

Batch ID	
Navigation	 Expert → Application → Totalizer 1 to 3 → Batch ID (3804–1 to 3)
Description	Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.
User entry	Positive integer
Factory setting	0

Batch operation	
Navigation	 Expert → Application → Totalizer 1 to 3 → Batch operation (3805–1 to 3)
Description	Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.
User entry	0 to 65 535
Factory setting	0

Batch phase	
Navigation	 Expert → Application → Totalizer 1 to 3 → Batch phase (3806–1 to 3)
Description	Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.
User entry	0 to 65 535
Factory setting	0

Batch Recipe Unit Procedure

Navigation	Expert → Application → Totalizer 1 to 3 → Batch Recipe (3807–1 to 3)
Description	Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).
User entry	0 to 65 535
Factory setting	0
Additional information	<i>Description</i> The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

Alarm hysteresis

Navigation	Expert → Application → Totalizer 1 to 3 → Alarm hysteresis (3802–1 to 3)
Description	Use this function to enter the hysteresis value for the upper and lower warning or alarm limit values.
User entry	Signed floating-point number
Factory setting	0 m ³
Additional information	<i>User entry</i> The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 124).

Hi Hi Lim

Navigation	Expert → Application → Totalizer 1 to 3 → Hi Hi Lim (3815–1 to 3)
Description	Use this function to enter the value for the upper alarm limit of the totalizer (Hi Hi alarm value parameter (→ 134)).
User entry	Signed floating-point number
Factory setting	Positive floating-point number
Additional information	<i>Description</i> If the output value Out value (→ 94) exceeds this limit value, the Hi Hi alarm state parameter (→ 134) is output.

User entry

 The value is entered in the defined units (**Out unit** parameter (→ 100)) and must be in the range defined in the **Out scale lower range** parameter (→ 99) and **Out scale upper range** parameter (→ 99).

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 124).

Hi Lim**Navigation**

 Expert → Application → Totalizer 1 to 3 → Hi Lim (3816–1 to 3)

Description

Use this function to enter the value for the upper warning limit of the totalizer (**Hi alarm value** parameter (→ 135)).

User entry

Signed floating-point number

Factory setting

Positive floating-point number

Additional information*Description*

 If the output value Out value (→ 94) exceeds this limit value, the **Hi alarm state** parameter (→ 135) is output.

User entry

 The value is entered in the defined units (**Out unit** parameter (→ 100)) and must be in the range defined in the **Out scale lower range** parameter (→ 99) and **Out scale upper range** parameter (→ 99).

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 124).

Lo Lim**Navigation**

 Expert → Application → Totalizer 1 to 3 → Lo Lim (3819–1 to 3)

Description

Use this function to enter the value for the lower warning limit of the totalizer (**Lo alarm value** parameter (→ 135)).

User entry

Signed floating-point number

Factory setting

Negative floating-point number

Additional information*Description*

 If the output value Out value (→ 94) exceeds this limit value, the **Lo alarm state** parameter (→ 135) is output.

User entry

i The value is entered in the defined units (**Out unit** parameter (→ 100)) and must be in the range defined in the **Out scale lower range** parameter (→ 99) and **Out scale upper range** parameter (→ 99).

i The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 124).

Lo Lo Lim**Navigation**

█ Expert → Application → Totalizer 1 to 3 → Lo Lo Lim (3822–1 to 3)

Description

Use this function to enter the value for the lower alarm limit of the totalizer (**Lo Lo alarm value** parameter (→ 136)).

User entry

Signed floating-point number

Factory setting

Negative floating-point number

Additional information*Description*

i If the output value Out value (→ 94) exceeds this limit value, the **Lo Lo alarm state** parameter (→ 136) is output.

User entry

i The value is entered in the defined units (**Out unit** parameter (→ 100)) and must be in the range defined in the **Out scale lower range** parameter (→ 99) and **Out scale upper range** parameter (→ 99).

i The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 124).

Hi Hi alarm value**Navigation**

█ Expert → Application → Totalizer 1 to 3 → HiHi alarm value (3814–1 to 3)

Description

Displays the alarm value for the upper alarm limit value (**Hi Hi Lim** parameter (→ 132)).

User interface

Signed floating-point number

Hi Hi alarm state**Navigation**

█ Expert → Application → Totalizer 1 to 3 → HiHi alarm state (3813–1 to 3)

Description

Displays the status for the upper alarm limit value (**Hi Hi Lim** parameter (→ 132)).

User interface	<ul style="list-style-type: none">■ No alarm■ Alarm state HiHi limit
Additional information	<p><i>User interface</i></p> <p> The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.</p>

Hi alarm value

Navigation	 Expert → Application → Totalizer 1 to 3 → Hi alarm value (3812–1 to 3)
Description	Displays the warning value for the upper warning limit value (Hi Lim parameter (→ 133)).
User interface	Signed floating-point number

Hi alarm state

Navigation	 Expert → Application → Totalizer 1 to 3 → Hi alarm state (3811–1 to 3)
Description	Displays the status for the upper warning limit value (Hi Lim parameter (→ 133)).
User interface	<ul style="list-style-type: none">■ No warning■ Alarm state Hi limit
Additional information	<p><i>User interface</i></p> <p> The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.</p>

Lo alarm value

Navigation	 Expert → Application → Totalizer 1 to 3 → Lo alarm value (3818–1 to 3)
Description	Displays the warning value for the lower warning limit value (Lo Lim parameter (→ 133)).
User interface	Signed floating-point number

Lo alarm state

Navigation	 Expert → Application → Totalizer 1 to 3 → Lo alarm state (3817–1 to 3)
Description	Displays the status for the lower warning limit value (Lo Lim parameter (→ 133)).

User interface	<ul style="list-style-type: none">■ No warning■ Alarm state Lo limit
----------------	---

Additional information	<i>User interface</i>
	 The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

Lo Lo alarm value

Navigation	 Expert → Application → Totalizer 1 to 3 → LoLo alarm value (3821–1 to 3)
Description	Displays the alarm value for the lower alarm limit value (Lo Lo Lim parameter (→ 图 134)).
User interface	Signed floating-point number

Lo Lo alarm state

Navigation	 Expert → Application → Totalizer 1 to 3 → LoLo alarm state (3820–1 to 3)
Description	Displays the status for the lower alarm limit value (Lo Lo Lim parameter (→ 图 134)).
User interface	<ul style="list-style-type: none">■ No alarm■ Alarm state LoLo limit
Additional information	<i>User interface</i>

3.9 "Diagnostics" submenu

Navigation   Expert → Diagnostics

 **Diagnostics**

Actual diagnostics (0691)	→ 图 137
Previous diagnostics (0690)	→ 图 138
Operating time from restart (0653)	→ 图 139
Operating time (0652)	→ 图 139

► Diagnostic list	→ 139
► Event logbook	→ 143
► Device information	→ 145
► I/O module	→ 149
► Display module	→ 149
► Data logging	→ 150
► Min/max values	→ 155
► Heartbeat	→ 159
► Simulation	→ 159

Actual diagnostics

Navigation	  Expert → Diagnostics → Actual diagnos. (0691)
Prerequisite	A diagnostic event has occurred.
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<p><i>User interface</i></p> <p> Additional pending diagnostic messages can be shown in the Diagnostic list submenu (→ 139).</p> <p> Information on what is causing the diagnostic message, and remedy measures, can be viewed by pressing the -button.</p> <p><i>Example</i></p> <p>For the display format: △S442 Frequency output</p>

Timestamp

Navigation	 Expert → Diagnostics → Timestamp (0667)
Description	Displays the operating time when the current diagnostic message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Additional information*User interface*

The diagnostic message can be displayed via the **Actual diagnostics** parameter
(→ 137).

Example

For the display format:

24d12h13m00s

Previous diagnostics

Navigation

Expert → Diagnostics → Prev.diagnostics (0690)

Prerequisite

Two diagnostic events have already occurred.

Description

Displays the diagnostic message that occurred before the current message.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*User interface*

Information on what is causing the diagnostic message, and remedy measures, can be viewed by pressing the -button.

Example

For the display format:

△S442 Frequency output

Timestamp

Navigation

Expert → Diagnostics → Timestamp (0672)

Description

Displays the operating time when the last diagnostic message before the current message occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*User interface*

The diagnostic message can be displayed via the **Previous diagnostics** parameter
(→ 138).

Example

For the display format:

24d12h13m00s

Operating time from restart

Navigation

Expert → Diagnostics → Time fr. restart (0653)

Description

Use this function to display the time the device has been in operation since the last device restart.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Operating time

Navigation

Expert → Diagnostics → Operating time (0652)

Description

Use this function to display the length of time the device has been in operation.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

User interface

The maximum number of days is 9999, which is equivalent to 27 years.

3.9.1 "Diagnostic list" submenu

Navigation

Expert → Diagnostics → Diagnostic list

► Diagnostic list	
Diagnostics 1 (0692)	→ 139
Diagnostics 2 (0693)	→ 140
Diagnostics 3 (0694)	→ 141
Diagnostics 4 (0695)	→ 142
Diagnostics 5 (0696)	→ 142

Diagnostics 1

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 1 (0692)

Description

Use this function to display the current diagnostics message with the highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

- Δ S442 Frequency output
- \otimes F276 I/O module failure

Timestamp

Navigation  Expert → Diagnostics → Diagnostic list → Timestamp (0683)

Description Displays the operating time when the diagnostic message with the highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

 The diagnostic message can be displayed via the **Diagnostics 1** parameter (→  139).

Example

For the display format:
24d12h13m00s

Diagnostics 2

Navigation   Expert → Diagnostics → Diagnostic list → Diagnostics 2 (0693)

Description Use this function to display the current diagnostics message with the second-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

- Δ S442 Frequency output
- \otimes F276 I/O module failure

Timestamp

Navigation  Expert → Diagnostics → Diagnostic list → Timestamp (0684)

Description Displays the operating time when the diagnostic message with the second-highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

 The diagnostic message can be displayed via the **Diagnostics 2** parameter (→ 140).

Example

For the display format:
24d12h13m00s

Diagnostics 3

Navigation  Expert → Diagnostics → Diagnostic list → Diagnostics 3 (0694)

Description Use this function to display the current diagnostics message with the third-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

-  S442 Frequency output
-  F276 I/O module failure

Timestamp

Navigation  Expert → Diagnostics → Diagnostic list → Timestamp (0685)

Description Displays the operating time when the diagnostic message with the third-highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

 The diagnostic message can be displayed via the **Diagnostics 3** parameter (→ 141).

Example

For the display format:
24d12h13m00s

Diagnostics 4

Navigation   Expert → Diagnostics → Diagnostic list → Diagnostics 4 (0695)

Description Use this function to display the current diagnostics message with the fourth-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

-  ΔS442 Frequency output
-  F276 I/O module failure

Timestamp

Navigation   Expert → Diagnostics → Diagnostic list → Timestamp (0686)

Description Displays the operating time when the diagnostic message with the fourth-highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*

 The diagnostic message can be displayed via the **Diagnostics 4** parameter (→  142).

Example

For the display format:
24d12h13m00s

Diagnostics 5

Navigation   Expert → Diagnostics → Diagnostic list → Diagnostics 5 (0696)

Description Use this function to display the current diagnostics message with the fifth-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

-  ΔS442 Frequency output
-  F276 I/O module failure

Timestamp**Navigation**

 Expert → Diagnostics → Diagnostic list → Timestamp (0687)

Description

Displays the operating time when the diagnostic message with the fifth-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

User interface


 The diagnostic message can be displayed via the **Diagnostics 5** parameter (→  142).

Example

For the display format:
24d12h13m00s

3.9.2 "Event logbook" submenu*Navigation*

 Expert → Diagnostics → Event logbook

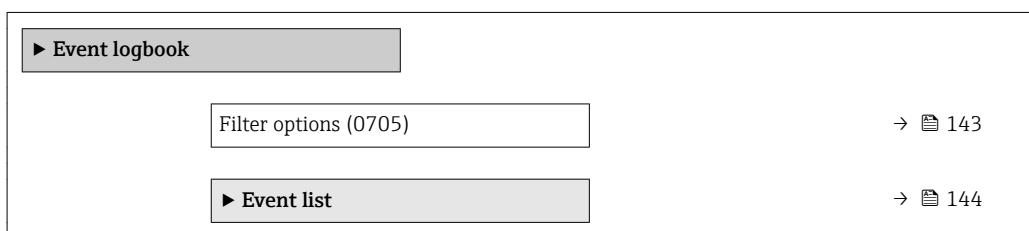**Filter options****Navigation**

 Expert → Diagnostics → Event logbook → Filter options (0705)

Description

Use this function to select the category whose event messages are displayed in the events list.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required

Filter options**Navigation**

Expert → Diagnostics → Event logbook → Filter options (0656)

Description

Use this function to select the category whose event messages are displayed in the events list.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required

"Event list" submenu**Navigation**

Expert → Diagnostics → Event logbook → Event list



Event list**Navigation**
 Expert → Diagnostics → Event logbook → Event list
Description

Use this function to display the history of event messages that have occurred in the category selected in the **Filter options** parameter (→ [143](#)).

User interface

- For a "Category I" event message

Information event, short message, symbol for event recording and operating time when error occurred

- For a "Category F, C, S, M" event message (status signal)

Diagnostics code, short message, symbol for event recording and operating time when error occurred

Additional information*Description*

A maximum of 20 event messages are displayed in chronological order. If the advanced HistoROM function is enabled in the device, the event list can contain up to 100 entries.

The following symbols indicate whether an event has occurred or has ended:

- ⊖: Occurrence of the event
- ⊕: End of the event

Examples

For the display format:

- I1091 Configuration modified
⊖ 24d12h13m00s
- △S442 Frequency output
⊖ 01d04h12min30s

 Additional information, such as remedial measures, can be called up via the [key](#).

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

 To order the **HistoROM advanced capabilities** application package, see the "Accessories" section of the "Technical Information" document.

3.9.3 "Device information" submenu*Navigation*
 Expert → Diagnostics → Device info
► Device information

Device tag (0011)

→ [146](#)

Serial number (0009)

→ [146](#)

Firmware version (0010)

→ [147](#)

Device name (0013)

→ [147](#)

Order code (0008)	→ 147
Extended order code 1 (0023)	→ 148
Extended order code 2 (0021)	→ 148
Extended order code 3 (0022)	→ 148
ENP version (0012)	→ 148

Device tag

Navigation

Expert → Diagnostics → Device info → Device tag (0011)

Description

Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

User interface


Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Promag 200 PA

Additional information

User interface

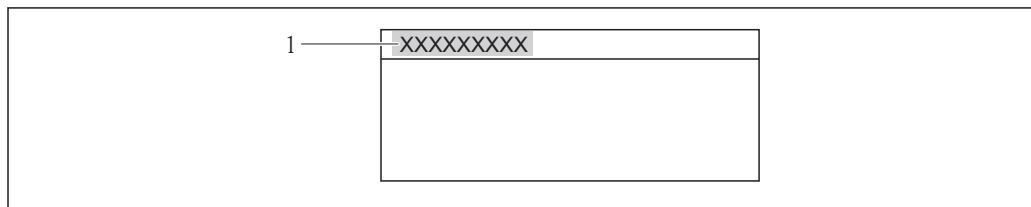

8 Header text

The number of characters displayed depends on the characters used.

Serial number

Navigation

Expert → Diagnostics → Device info → Serial number (0009)

Description

Displays the serial number of the measuring device.

The number can be found on the nameplate of the sensor and transmitter.

User interface

A maximum of 11-digit character string comprising letters and numbers.

Additional information*Description***Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Firmware version**Navigation**

Expert → Diagnostics → Device info → Firmware version (0010)

Description

Displays the device firmware version installed.

User interface

Character string in the format xx.yy.zz

Factory setting

01.01.zz

Device name**Navigation**

Expert → Diagnostics → Device info → Device name (0013)

Description

Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface

Promag 200

Order code**Navigation**

Expert → Diagnostics → Device info → Order code (0008)

Description

Displays the device order code.

User interface

Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Additional information*Description*

The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

**Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Extended order code 1

Navigation	  Expert → Diagnostics → Device info → Ext. order cd. 1 (0023)
Description	Displays the first part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 3 parameters.
User interface	Character string
Additional information	<i>Description</i> The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Extended order code 2

Navigation	  Expert → Diagnostics → Device info → Ext. order cd. 2 (0021)
Description	For displaying the second part of the extended order code.
User interface	Character string
Additional information	For additional information, see Extended order code 1 parameter (→  148)

Extended order code 3

Navigation	  Expert → Diagnostics → Device info → Ext. order cd. 3 (0022)
Description	For displaying the third part of the extended order code.
User interface	Character string
Additional information	For additional information, see Extended order code 1 parameter (→  148)

ENP version

Navigation	  Expert → Diagnostics → Device info → ENP version (0012)
Description	Displays the version of the electronic nameplate.
User interface	Character string

Factory setting 2.02.00


Additional information *Description*

This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

3.9.4 "I/O module" submenu

Navigation

Expert → Diagnostics → I/O module

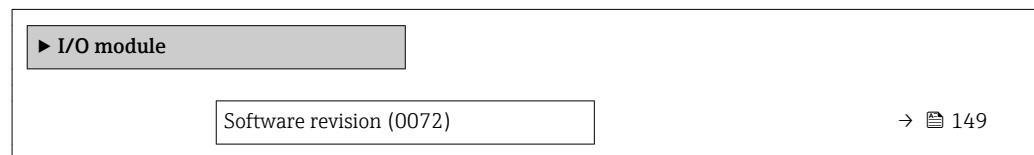

Software revision

Navigation Expert → Diagnostics → I/O module → Software rev. (0072)


Description Use this function to display the software revision of the module.

User interface Positive integer

3.9.5 "Display module" submenu

Navigation

Expert → Diagnostics → Display module

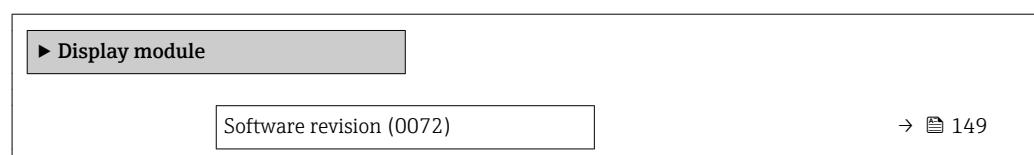

Software revision

Navigation Expert → Diagnostics → Display module → Software rev. (0072)

Description Use this function to display the software revision of the module.

User interface Positive integer

3.9.6 "Data logging" submenu

Navigation

Expert → Diagnostics → Data logging

▶ Data logging	
Assign channel 1 (0851)	→ 150
Assign channel 2 (0852)	→ 151
Assign channel 3 (0853)	→ 151
Assign channel 4 (0854)	→ 152
Logging interval (0856)	→ 152
Clear logging data (0855)	→ 153
▶ Display channel 1	→ 153
▶ Display channel 2	→ 154
▶ Display channel 3	→ 154
▶ Display channel 4	→ 155

Assign channel 1



Navigation

Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Prerequisite

The **Extended HistoROM** application package is available.

i The software options currently enabled are displayed in the **Software option overview** parameter (→ 38).

Description

Use this function to select a process variable for the data logging channel.

Selection

- Off
- Volume flow
- Mass flow
- Electronic temperature
- Current difference potential

Factory setting

Off

Additional information*Description*

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The log contents are cleared if the option selected is changed.

Assign channel 2**Navigation**

  Expert → Diagnostics → Data logging → Assign chan. 2 (0852)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  38).

Description

Options for the assignment of a process variable to the data logging channel.

Selection

Picklist, see **Assign channel 1** parameter (→  150)

Factory setting

Off

Assign channel 3**Navigation**

  Expert → Diagnostics → Data logging → Assign chan. 3 (0853)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **Software option overview** parameter (→  38).

Description

Options for the assignment of a process variable to the data logging channel.

Selection

Picklist, see **Assign channel 1** parameter (→  150)

Factory setting

Off

Assign channel 4**Navigation**

Expert → Diagnostics → Data logging → Assign chan. 4 (0854)

Prerequisite

The **Extended HistoROM** application package is available.

i The software options currently enabled are displayed in the **Software option overview** parameter (→ 38).

Description

Options for the assignment of a process variable to the data logging channel.

Selection

Picklist, see **Assign channel 1** parameter (→ 150)

Factory setting

Off

Logging interval**Navigation**

Expert → Diagnostics → Data logging → Logging interval (0856)

Expert → Diagnostics → Data logging → Logging interval (0856)

Prerequisite

The **Extended HistoROM** application package is available.

i The software options currently enabled are displayed in the **Software option overview** parameter (→ 38).

Description

Use this function to enter the logging interval t_{log} for data logging.

User entry

1.0 to 3 600.0 s

Factory setting

10.0 s

Additional information**Description**

This defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{log} :

- If 1 logging channel is used: $T_{log} = 1000 \times t_{log}$
- If 2 logging channels are used: $T_{log} = 500 \times t_{log}$
- If 3 logging channels are used: $T_{log} = 333 \times t_{log}$
- If 4 logging channels are used: $T_{log} = 250 \times t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{log} always remains in the memory (ring memory principle).

i The log contents are cleared if the length of the logging interval is changed.

Example

If 1 logging channel is used:


- $T_{log} = 1000 \times 1 \text{ s} = 1000 \text{ s} \approx 15 \text{ min}$
- $T_{log} = 1000 \times 10 \text{ s} = 10000 \text{ s} \approx 3 \text{ h}$
- $T_{log} = 1000 \times 80 \text{ s} = 80000 \text{ s} \approx 1 \text{ d}$
- $T_{log} = 1000 \times 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data


Navigation	Expert → Diagnostics → Data logging → Clear logging (0855) Expert → Diagnostics → Data logging → Clear logging (0855)
Prerequisite	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter (→ 38).
Description	Option to clear the entire logging data.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ Clear data
Factory setting	Cancel
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Cancel The data is not cleared. All the data is retained. ■ Clear data The logging data is cleared. The logging process starts from the beginning.

"Display channel 1" submenu

Navigation Expert → Diagnostics → Data logging → Displ.channel 1

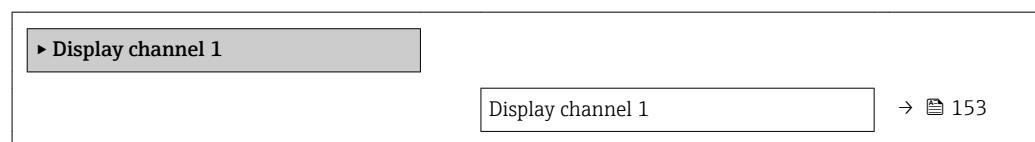**Display channel 1**

Navigation	Expert → Diagnostics → Data logging → Displ.channel 1
Prerequisite	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter (→ 38). One of the following options is selected in the Assign channel 1 parameter (→ 150): <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Electronic temperature ■ Current difference potential
Description	Displays the measured value trend for the logging channel in the form of a chart.

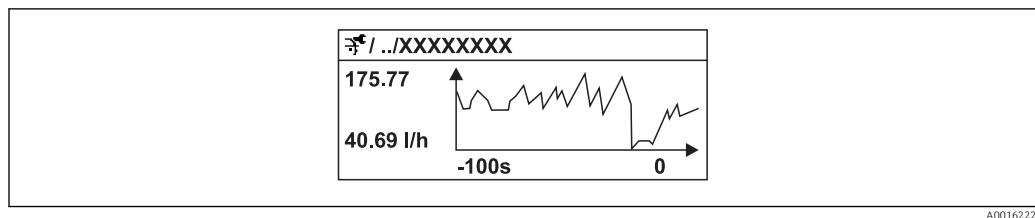Additional information**Description**

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

"Display channel 2" submenu**Navigation**

Expert → Diagnostics → Data logging → Displ.channel 2

**Display channel 2****Navigation**

Expert → Diagnostics → Data logging → Displ.channel 2

PrerequisiteA process variable is defined in the **Assign channel 2** parameter.**Description**See the **Display channel 1** parameter → [153](#)**"Display channel 3" submenu****Navigation**

Expert → Diagnostics → Data logging → Displ.channel 3



Display channel 3

Navigation  Expert → Diagnostics → Data logging → Displ.channel 3

Prerequisite A process variable is defined in the **Assign channel 3** parameter.

Description See the **Display channel 1** parameter →  153

"Display channel 4" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 4

 **Display channel 4**

Display channel 4

→  155

Display channel 4

Navigation  Expert → Diagnostics → Data logging → Displ.channel 4

Prerequisite A process variable is defined in the **Assign channel 4** parameter.

Description See the **Display channel 1** parameter →  153

3.9.7 "Min/max values" submenu

Navigation   Expert → Diagnostics → Min/max val.

 **Min/max values**

Reset min/max values (6541)

→  156

 **Terminal voltage**

→  156

 **Main electronic temperature**

→  157

 **IO module temperature**

→  158

Reset min/max values**Navigation**

Expert → Diagnostics → Min/max val. → Reset min/max (6541)

Description

Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

Selection


- Cancel
- Terminal voltage
- IO module temperature

Factory setting

Cancel

"Terminal voltage" submenu**Navigation**

Expert → Diagnostics → Min/max val. → Terminal volt.

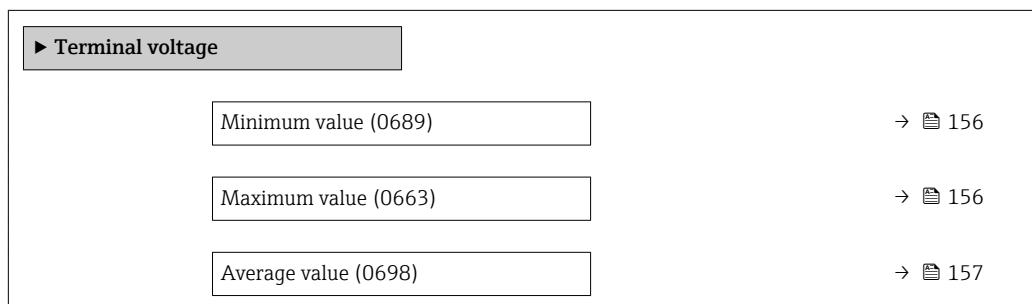

Minimum value**Navigation**

Expert → Diagnostics → Min/max val. → Terminal volt. → Minimum value (0689)

Description

Use this function to display the smallest previously measured terminal voltage value in Volts.

User interface

0.0 to 50.0 V

Maximum value**Navigation**

Expert → Diagnostics → Min/max val. → Terminal volt. → Maximum value (0663)

Description

Use this function to view the largest previously measured terminal voltage value in Volts.

User interface


0.0 to 50.0 V

Average value

Navigation	Expert → Diagnostics → Min/max val. → Terminal volt. → Average value (0698)
Description	Use this function to view the average of all previously measured terminal voltage values in Volts.
User interface	Signed floating-point number

"Main electronic temperature" submenu

Navigation Expert → Diagnostics → Min/max val. → Main elect.temp.

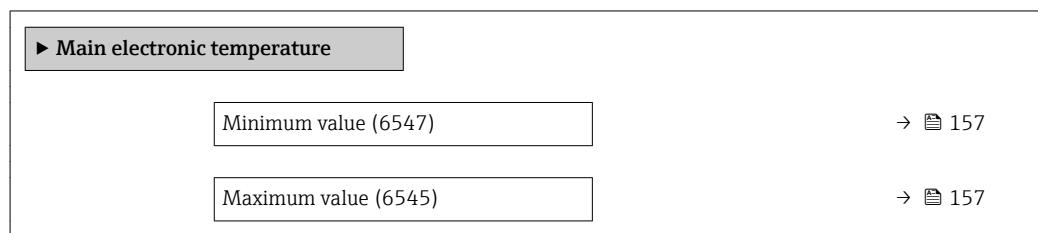

Minimum value

Navigation	Expert → Diagnostics → Min/max val. → Main elect.temp. → Minimum value (6547)
Description	Displays the lowest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i> The unit is taken from the Temperature unit parameter (→ 48)

Maximum value


Navigation	Expert → Diagnostics → Min/max val. → Main elect.temp. → Maximum value (6545)
Description	Displays the highest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Temperature unit** parameter (→ [48](#))

"IO module temperature" submenu**Navigation**

Expert → Diagnostics → Min/max val. → IO module temp.

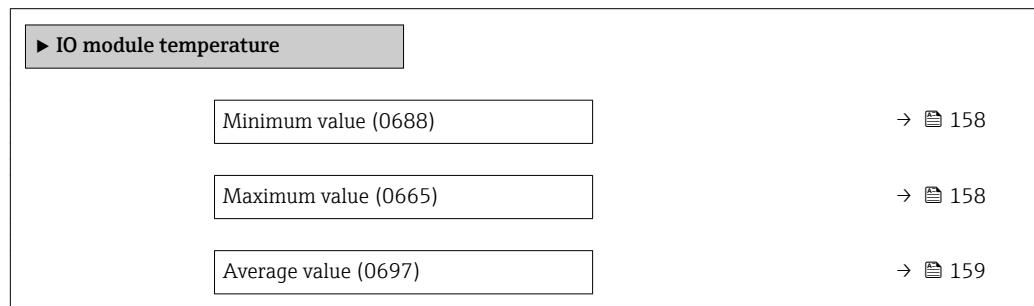

Minimum value

Navigation

Expert → Diagnostics → Min/max val. → IO module temp. → Minimum value (0688)

Description

Displays the lowest previously measured temperature value of the I/O electronics module.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Temperature unit** parameter (→ [48](#))

Maximum value

Navigation

Expert → Diagnostics → Min/max val. → IO module temp. → Maximum value (0665)

Description

Displays the highest previously measured temperature value of the I/O electronics module.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Temperature unit** parameter (→ [48](#))


Average value

Navigation	Diagram icon Expert → Diagnostics → Min/max val. → IO module temp. → Average value (0697)
Description	Displays the average value of all previously measured temperature values of the I/O electronics module.
User interface	Country-dependent <ul style="list-style-type: none"> ■ -1 273.15 to +726.85 °C ■ -2 259.67 to +1 340.33 °F
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→ 48)


3.9.8 "Heartbeat" submenu

 For detailed information on the parameter descriptions of the **Heartbeat Verification** application package, see the Special Documentation for the device

Navigation Diagram icon Expert → Diagnostics → Heartbeat

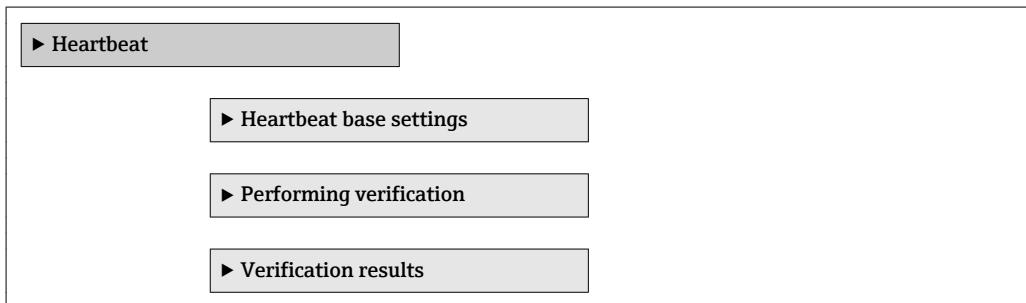**3.9.9 "Simulation" submenu**

Navigation Diagram icon Expert → Diagnostics → Simulation

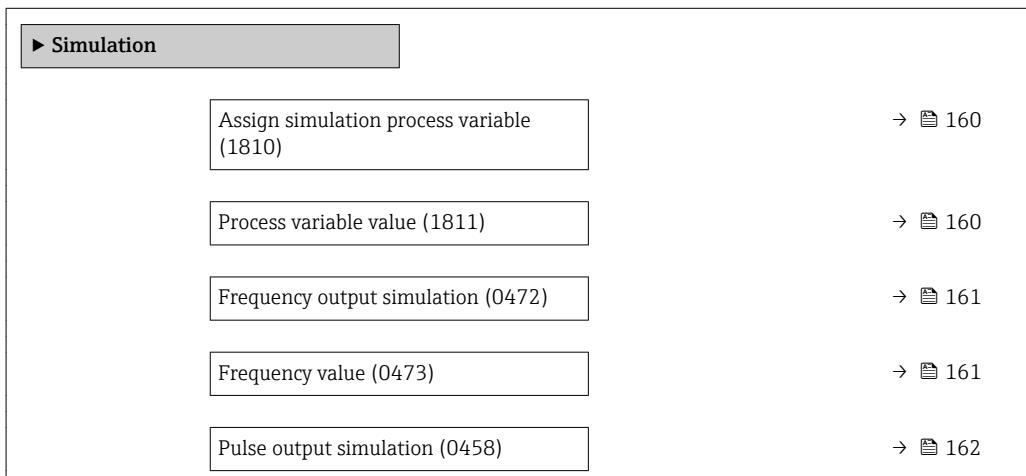

Pulse value (0459)	→ 162
Switch output simulation (0462)	→ 162
Switch status (0463)	→ 163
Simulation device alarm (0654)	→ 163
Diagnostic event category (0738)	→ 164
Diagnostic event simulation (0737)	→ 164

Assign simulation process variable



Navigation

Expert → Diagnostics → Simulation → Assign proc.var. (1810)

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Volume flow
- Mass flow

Factory setting

Off

Additional information

Description

The simulation value of the selected process variable is specified in the **Process variable value** parameter (→ 160).

Process variable value



Navigation

Expert → Diagnostics → Simulation → Proc. var. value (1811)

Prerequisite

One of the following options is selected in the **Assign simulation process variable** parameter (→ 160):

- Volume flow
- Mass flow

Description

Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

User entry

Depends on the process variable selected

Factory setting

0

Additional information*User entry*

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

Frequency output simulation**Navigation**

Expert → Diagnostics → Simulation → Freq.outp.sim. (0472)

Prerequisite

The **Frequency** option is selected in the **Operating mode** parameter (→ 62).

Description

Use this function to switch simulation of the frequency output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting

Off

Additional information*Description*

The desired simulation value is specified in the **Frequency value** parameter (→ 161).

Selection

- Off
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Current simulation is active.

Frequency value**Navigation**

Expert → Diagnostics → Simulation → Freq. value (0473)

Prerequisite

The **On** option is selected in the **Frequency output simulation** parameter (→ 161).

Description

Use this function to enter a frequency value for the simulation. In this way, users can verify the correct adjustment of the frequency output and the correct function of downstream switching units.

User entry

0.0 to 1 250.0 Hz

Factory setting

0.0 Hz

Pulse output simulation



Navigation

Expert → Diagnostics → Simulation → Puls.outp.sim. (0458)

Prerequisite

The **Pulse** option is selected in the **Operating mode** parameter (→ 62).

Description

Use this function to switch simulation of the pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Fixed value
- Down-counting value

Factory setting

Off

Additional information

Description

The desired simulation value is specified in the **Pulse value** parameter (→ 162).

Selection

- Off
Pulse simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- Fixed value
Pulses with the pulse width specified in the **Pulse width** parameter (→ 65) are output continuously.
- Down-counting value
The pulses specified in the **Pulse value** parameter (→ 162) are output.

Pulse value



Navigation

Expert → Diagnostics → Simulation → Pulse value (0459)

Prerequisite

In the **Pulse output simulation** parameter (→ 162), the **Down-counting value** option is selected.

Description

Use this function to enter a pulse value for the simulation. In this way, users can verify the correct adjustment of the pulse output and the correct function of downstream switching units.

User entry

0 to 65 535

Switch output simulation



Navigation

Expert → Diagnostics → Simulation → Switch sim. (0462)

Prerequisite

The **Switch** option is selected in the **Operating mode** parameter (→ 62).

Description	Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Factory setting	Off
Additional information	<p><i>Description</i></p> <p> The desired simulation value is specified in the Switch status parameter (→ 163).</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ▪ On Switch simulation is active.

Switch status		
Navigation	 Expert → Diagnostics → Simulation → Switch status (0463)	
Prerequisite	The On option is selected in the Switch output simulation parameter (→ 162).	
Description	Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.	
Selection	<ul style="list-style-type: none"> ▪ Open ▪ Closed 	
Factory setting	Open	
Additional information	<p><i>Options</i></p> <ul style="list-style-type: none"> ▪ Open Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ▪ Closed Switch simulation is active. 	

Simulation device alarm		
Navigation	 Expert → Diagnostics → Simulation → Sim. alarm (0654)	
Description	Use this function to switch the device alarm on and off.	

Selection	<ul style="list-style-type: none">▪ Off▪ On
Factory setting	Off
Additional information	<i>Description</i> <p>In this way, users can verify the correct function of downstream switching units. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.</p>

Diagnostic event category

Navigation	 Expert → Diagnostics → Simulation → Event category (0738)
Description	Use this function to select the category of the diagnostic events that are displayed for the simulation in the Diagnostic event simulation parameter (→  164).
Selection	<ul style="list-style-type: none">▪ Sensor▪ Electronics▪ Configuration▪ Process
Factory setting	Process

Diagnostic event simulation

Navigation	  Expert → Diagnostics → Simulation → Diag. event sim. (0737)
Description	Use this function to select a diagnostic event for the simulation process that is activated.
Selection	<ul style="list-style-type: none">▪ Off▪ Diagnostic event picklist (depends on the category selected)
Factory setting	Off
Additional information	<i>Description</i> <p> For the simulation, you can choose from the diagnostic events of the category selected in the Diagnostic event category parameter (→  164).</p>

4 Country-specific factory settings

4.1 SI units

 Not valid for USA and Canada.

4.1.1 System units

Mass	kg
Mass flow	kg/h
Volume	m ³
Volume flow	l/h
Density	kg/l
Temperature	°C

4.1.2 Full scale values

 The factory settings apply to the following parameters:
100% bar graph value 1

Nominal diameter [mm]	(v ~ 2.5 m/s) [dm ³ /min]
2	0.5
4	2
8	8
15	25
25	75
32	125
40	200
50	300
65	500
80	750
100	1200
125	1850
150	150 m ³ /h
200	300 m ³ /h

4.1.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	On value low flow cut off (v ~ 0.04 m/s) [dm ³ /h]
2	0.01
4	0.05
8	0.1

Nominal diameter [mm]	On value low flow cut off (v ~ 0.04 m/s) [dm ³ /h]
15	0.5
25	1
32	2
40	3
50	5
65	8
80	12
100	20
125	30
150	2.5 m ³ /h
200	5 m ³ /h

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Mass	lb
Mass flow	lb/min
Volume	gal (us)
Volume flow	gal/min (us)
Density	lb/ft ³
Temperature	°F

4.2.2 Full scale values

 The factory settings apply to the following parameters:
100% bar graph value 1

Nominal diameter [in]	(v ~ 2.5 m/s) [gal/min]
1/12	0.1
1/8	0.5
3/8	2
1/2	6
1	18
1½	50
2	75
3	200
4	300
6	600
8	1200

4.2.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	On value low flow cut off (v ~ 0.04 m/s) [gal/min]
1/12	0.002
1/8	0.008
3/8	0.025
1/2	0.1
1	0.25
1½	0.75
2	1.25
3	2.5
4	4
6	12
8	15

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml	Milliliter, liter, hectoliter, megaliter
Volume flow	cm ³ /s, cm ³ /min, cm ³ /h, cm ³ /d	Cubic centimeter/time unit
	dm ³ /s, dm ³ /min, dm ³ /h, dm ³ /d	Cubic decimeter/time unit
	m ³ /s, m ³ /min, m ³ /h, m ³ /d	Cubic meter/time unit
	ml/s, ml/min, ml/h, ml/d	Milliliter/time unit
	l/s, l/min, l/h, l/d	Liter/time unit
Time	m, h, d, y	Minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit

Process variable	Units	Explanation
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	m, h, d, y	Minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	m, h, d, y	Minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

- 0% bargraph value 1 (Parameter) 17
0% bargraph value 3 (Parameter) 20
100% bargraph value 1 (Parameter) 18
100% bargraph value 3 (Parameter) 20

A

- Access status display (Parameter) 11, 25
Access status tooling (Parameter) 12
Activate sensor emergency mode (Parameter) 38
Activate SW option (Parameter) 37
Actual diagnostics (Parameter) 137
Address mode (Parameter) 80
Administration (Submenu) 34
Alarm delay (Parameter) 29
Alarm hysteresis (Parameter) 100, 132
Alarm summary (Parameter) 86, 97, 110, 119, 130
Alert key (Parameter) 85, 96, 109, 117, 129
Analog input 1 to 2 (Submenu) 93
Analog inputs (Submenu) 92
Application (Submenu) 123
Assign behavior of diagnostic no. 004 (Parameter) 31
Assign behavior of diagnostic no. 442 (Parameter) 31
Assign behavior of diagnostic no. 443 (Parameter) 32
Assign behavior of diagnostic no. 531 (Parameter) 32
Assign behavior of diagnostic no. 801 (Parameter) 32
Assign behavior of diagnostic no. 832 (Parameter) 33
Assign behavior of diagnostic no. 833 (Parameter) 33
Assign behavior of diagnostic no. 861 (Parameter) 33
Assign behavior of diagnostic no. 862 (Parameter) 34
Assign behavior of diagnostic no. 937 (Parameter) 34
Assign channel 1 (Parameter) 150
Assign channel 2 (Parameter) 151
Assign channel 3 (Parameter) 151
Assign channel 4 (Parameter) 152
Assign diagnostic behavior (Parameter) 74
Assign flow direction check (Parameter) 77
Assign frequency output (Parameter) 68
Assign limit (Parameter) 74
Assign process variable (Parameter) 51, 124
Assign pulse output (Parameter) 64
Assign simulation process variable (Parameter) 160
Assign status (Parameter) 77
Average value (Parameter) 157, 159

B

- Backlight (Parameter) 25
Backup state (Parameter) 28
Base current (Parameter) 83
Batch ID (Parameter) 98, 111, 119, 131
Batch operation (Parameter) 98, 111, 119, 131
Batch phase (Parameter) 98, 111, 120, 131
Batch Recipe Unit Procedure (Parameter) 98, 112, 120, 132

C

- Calculated values (Submenu) 56
Calibration (Submenu) 60
Calibration factor (Parameter) 60
Channel (Parameter) 93, 106
Clear logging data (Parameter) 153
Communication (Submenu) 80
Comparison result (Parameter) 28
Condensed status diagnostic (Parameter) 92
Configuration backup display (Submenu) 26
Configuration management (Parameter) 27
Confirm access code (Parameter) 36
Contrast display (Parameter) 24
Control Totalizer 1 to 3 (Parameter) 125

D

- Damping output (Parameter) 71
Data logging (Submenu) 150
Date/time format (Parameter) 49
Decimal places 1 (Parameter) 18
Decimal places 2 (Parameter) 19
Decimal places 3 (Parameter) 21
Decimal places 4 (Parameter) 22
Define access code (Parameter) 35, 36
Define access code (Wizard) 35
Density unit (Parameter) 47
Descriptor (Parameter) 90
Device address (Parameter) 81
Device certification (Parameter) 90
Device ID (Parameter) 88
Device information (Submenu) 145
Device install date (Parameter) 91
Device message (Parameter) 90
Device name (Parameter) 147
Device reset (Parameter) 37
Device tag (Parameter) 84, 146
Diagnostic behavior (Submenu) 30
Diagnostic event category (Parameter) 164
Diagnostic event simulation (Parameter) 164
Diagnostic handling (Submenu) 29
Diagnostic list (Submenu) 139
Diagnostics (Parameter) 88
Diagnostics (Submenu) 136
Diagnostics 1 (Parameter) 139
Diagnostics 2 (Parameter) 140
Diagnostics 3 (Parameter) 141
Diagnostics 4 (Parameter) 142
Diagnostics 5 (Parameter) 142
Diagnostics mask (Parameter) 89
Direct access
 0% bargraph value 1 (0123) 17
 0% bargraph value 3 (0124) 20
 100% bargraph value 1 (0125) 18
 100% bargraph value 3 (0126) 20
 Access status display (0091) 11, 25
 Access status tooling (0005) 12

Activate sensor emergency mode (6611)	38
Activate SW option (0029)	37
Actual diagnostics (0691)	137
Address mode (1468)	80
Alarm delay (0651)	29
Alarm hysteresis	
Analog input 1 to 2 (1527-1 to 2)	100
Totalizer 1 to 3 (3802-1 to 3)	132
Alarm summary	
Analog input 1 to 2 (1537-1 to 2)	97
Discrete input 1 to 2 (2191-1 to 2)	110
Discrete output 1 to 3 (1701-1 to 3)	119
Totalizer 1 to 3 (3809-1 to 3)	130
Alarm summary (1474)	86
Alert key	
Analog input 1 to 2 (1522-1 to 2)	96
Discrete input 1 to 2 (2182-1 to 2)	109
Discrete output 1 to 3 (1694-1 to 3)	117
Totalizer 1 to 3 (3803-1 to 3)	129
Alert key (1473)	85
Assign behavior of diagnostic no. 004 (0734)	31
Assign behavior of diagnostic no. 442 (0658)	31
Assign behavior of diagnostic no. 443 (0659)	32
Assign behavior of diagnostic no. 531 (0733)	32
Assign behavior of diagnostic no. 801 (0660)	32
Assign behavior of diagnostic no. 832 (0675)	33
Assign behavior of diagnostic no. 833 (0676)	33
Assign behavior of diagnostic no. 861 (0736)	33
Assign behavior of diagnostic no. 862 (0679)	34
Assign behavior of diagnostic no. 937 (0735)	34
Assign channel 1 (0851)	150
Assign channel 2 (0852)	151
Assign channel 3 (0853)	151
Assign channel 4 (0854)	152
Assign diagnostic behavior (0482)	74
Assign flow direction check (0484)	77
Assign frequency output (0478)	68
Assign limit (0483)	74
Assign process variable	
Totalizer 1 to 3 (3808-1 to 3)	124
Assign process variable (1837)	51
Assign pulse output (0460)	64
Assign simulation process variable (1810)	160
Assign status (0485)	77
Average value (0697)	159
Average value (0698)	157
Backlight (0111)	25
Backup state (0121)	28
Base current (1466)	83
Batch ID	
Analog input 1 to 2 (1533-1 to 2)	98
Discrete input 1 to 2 (2183-1 to 2)	111
Discrete output 1 to 3 (1695-1 to 3)	119
Totalizer 1 to 3 (3804-1 to 3)	131
Batch operation	
Analog input 1 to 2 (1534-1 to 2)	98
Discrete input 1 to 2 (2184-1 to 2)	111
Discrete output 1 to 3 (1698-1 to 3)	119
Totalizer 1 to 3 (3805-1 to 3)	131
Batch phase	
Analog input 1 to 2 (1535-1 to 2)	98
Discrete input 1 to 2 (2185-1 to 2)	111
Discrete output 1 to 3 (1699-1 to 3)	120
Totalizer 1 to 3 (3806-1 to 3)	131
Batch Recipe Unit Procedure	
Analog input 1 to 2 (1536-1 to 2)	98
Discrete input 1 to 2 (2186-1 to 2)	112
Discrete output 1 to 3 (1700-1 to 3)	120
Totalizer 1 to 3 (3807-1 to 3)	132
Calibration factor (6522)	60
Channel	
Analog input 1 to 2 (1561-1 to 2)	93
Discrete input 1 to 2 (2187-1 to 2)	106
Clear logging data (0855)	153
Comparison result (0103)	28
Condensed status diagnostic (1500)	92
Configuration management (0100)	27
Contrast display (0105)	24
Control Totalizer 1 to 3 (3830-1 to 3)	125
Damping output (0477)	71
Date/time format (2812)	49
Decimal places 1 (0095)	18
Decimal places 2 (0117)	19
Decimal places 3 (0118)	21
Decimal places 4 (0119)	22
Define access code (0093)	36
Density unit (0555)	47
Descriptor (1489)	90
Device address (1462)	81
Device certification (1486)	90
Device ID (1480)	88
Device install date (1491)	91
Device message (1490)	90
Device name (0013)	147
Device reset (0000)	37
Device tag (0011)	146
Device tag (1496)	84
Diagnostic event category (0738)	164
Diagnostic event simulation (0737)	164
Diagnostics (1482)	88
Diagnostics 1 (0692)	139
Diagnostics 2 (0693)	140
Diagnostics 3 (0694)	141
Diagnostics 4 (0695)	142
Diagnostics 5 (0696)	142
Diagnostics mask (1484)	89
Direct access (0106)	10
Display damping (0094)	23
Display interval (0096)	22
Empty pipe adjust value (6527)	55
Empty pipe detection (1860)	54
ENP version (0012)	148
Enter access code (0003)	13
Enter access code (0092)	13
Extended order code 1 (0023)	148
Extended order code 2 (0021)	148
Extended order code 3 (0022)	148
Factory reset (1488)	90

Fail safe time	14
Discrete output 1 to 3 (1697-1 to 3)	114
Fail safe type	
Analog input 1 to 2 (1525-1 to 2)	94
Discrete input 1 to 2 (2189-1 to 2)	107
Discrete output 1 to 3 (1696-1 to 3)	115
Fail safe value	
Analog input 1 to 2 (1526-1 to 2)	94
Discrete input 1 to 2 (2190-1 to 2)	107
Discrete output 1 to 3 (1693-1 to 3)	115
Failure frequency (0474)	72
Failure mode	
Totalizer 1 to 3 (3810-1 to 3)	127
Failure mode (0451)	72
Failure mode (0480)	66
Failure mode (0486)	78
Feature enabled (1476)	92
Feature supported (1477)	92
Filter options (0656)	144
Filter options (0705)	143
Firmware version (0010)	147
Fixed density (1862)	57
Flow damping (6661)	50
Flow override (1839)	49
Format display (0098)	15
Frequency output simulation (0472)	161
Frequency value (0473)	161
Full pipe adjust value (6548)	55
Hardware lock (1499)	91
Hardware revision (1479)	87
Header (0097)	23
Header text (0112)	24
Hi alarm state	
Analog input 1 to 2 (1538-1 to 2)	103
Totalizer 1 to 3 (3811-1 to 3)	135
Hi alarm value	
Analog input 1 to 2 (1539-1 to 2)	103
Totalizer 1 to 3 (3812-1 to 3)	135
Hi Hi alarm state	
Analog input 1 to 2 (1540-1 to 2)	103
Totalizer 1 to 3 (3813-1 to 3)	134
Hi Hi alarm value	
Analog input 1 to 2 (1541-1 to 2)	102
Totalizer 1 to 3 (3814-1 to 3)	134
Hi Hi Lim	
Analog input 1 to 2 (1528-1 to 2)	101
Totalizer 1 to 3 (3815-1 to 3)	132
Hi Lim	
Analog input 1 to 2 (1529-1 to 2)	101
Totalizer 1 to 3 (3816-1 to 3)	133
Ident number selector (1461)	81, 91
Input channel	
Discrete output 1 to 3 (1724-1 to 3)	121
Installation direction (1809)	57
Integration time (6533)	58
Invert	
Discrete input 1 to 2 (2188-1 to 2)	107
Discrete output 1 to 3 (1692-1 to 3)	114
Invert output signal (0470)	79
Language (0104)	14
Last backup (0102)	26
Lin type	
Analog input 1 to 2 (1523-1 to 2)	100
Lo alarm state	
Analog input 1 to 2 (1542-1 to 2)	104
Totalizer 1 to 3 (3817-1 to 3)	135
Lo alarm value	
Analog input 1 to 2 (1543-1 to 2)	103
Totalizer 1 to 3 (3818-1 to 3)	135
Lo Lim	
Analog input 1 to 2 (1530-1 to 2)	102
Totalizer 1 to 3 (3819-1 to 3)	133
Lo Lo alarm state	
Analog input 1 to 2 (1544-1 to 2)	104
Totalizer 1 to 3 (3820-1 to 3)	136
Lo Lo alarm value	
Analog input 1 to 2 (1545-1 to 2)	104
Totalizer 1 to 3 (3821-1 to 3)	136
Lo Lo Lim	
Analog input 1 to 2 (1531-1 to 2)	102
Totalizer 1 to 3 (3822-1 to 3)	134
Locking status (0004)	11
Logging interval (0856)	152
Manufacturer ID (1502)	88
Mass flow (1847)	40
Mass flow factor (1846)	59
Mass flow offset (1841)	59
Mass flow unit (0554)	46
Mass unit (0574)	47
Maximum frequency value (0454)	68
Maximum value (0663)	156
Maximum value (0665)	158
Maximum value (6545)	157
Measured value EPD (6559)	55
Measuring mode (0457)	66
Measuring mode (0479)	70
Measuring period (6536)	58
Measuring value at maximum frequency (0475)	69
Measuring value at minimum frequency (0476)	69
Minimum frequency value (0453)	68
Minimum value (0688)	158
Minimum value (0689)	156
Minimum value (6547)	157
Mode block actual	
Analog input 1 to 2 (1521-1 to 2)	96
Discrete input 1 to 2 (2181-1 to 2)	110
Discrete output 1 to 3 (1691-1 to 3)	118
Totalizer 1 to 3 (3801-1 to 3)	130
Mode block actual (1472)	86
Mode block normal	
Analog input 1 to 2 (1546-1 to 2)	97
Discrete input 1 to 2 (2192-1 to 2)	110
Discrete output 1 to 3 (1702-1 to 3)	118
Totalizer 1 to 3 (3824-1 to 3)	130
Mode block normal (1492)	86
Mode block permitted	
Analog input 1 to 2 (1553-1 to 2)	97
Discrete input 1 to 2 (2195-1 to 2)	110

Discrete output 1 to 3 (1705-1 to 3)	118
Totalizer 1 to 3 (3828-1 to 3)	130
Mode block permitted (1493)	86
New adjustment (6560)	56
Nominal diameter (2807)	60
Off value low flow cutoff (1804)	51
On value low flow cutoff (1805)	51
Operating mode (0469)	62
Operating time (0652)	26, 139
Operating time from restart (0653)	139
Order code (0008)	147
Out decimal point	
Analog input 1 to 2 (1547-1 to 2)	100
Out scale lower range	
Analog input 1 to 2 (1548-1 to 2)	99
Out scale upper range	
Analog input 1 to 2 (1551-1 to 2)	99
Out status	
Analog input 1 to 2 (1549-1 to 2)	95
Analog input 1 to 2 (1564-1 to 2)	95
Discrete input 1 to 2 (2193-1 to 2)	108
Discrete input 1 to 2 (2203-1 to 2)	108
Discrete output 1 to 3 (1703-1 to 3)	116
Discrete output 1 to 3 (1723-1 to 3)	116
Out unit	
Analog input 1 to 2 (1550-1 to 2)	100
Out unit text	
Analog input 1 to 2 (1532-1 to 2)	105
Out value	
Analog input 1 to 2 (1552-1 to 2)	94
Discrete input 1 to 2 (2194-1 to 2)	108
Discrete output 1 to 3 (1704-1 to 3)	116
Output channel	
Discrete output 1 to 3 (1725-1 to 3)	121
Output frequency (0471)	43, 73
Preset value 1 to 3 (3829-1 to 3)	126
Pressure shock suppression (1806)	52
Previous diagnostics (0690)	138
Process variable value (1811)	160
PROFIBUS ident number (1464)	82
Profile version (1463)	82
Progress (6571)	56
Pulse output (0456)	42, 67
Pulse output simulation (0458)	162
Pulse value (0459)	162
Pulse width (0452)	65
PV filter time	
Analog input 1 to 2 (1524-1 to 2)	93
PV scale lower range	
Analog input 1 to 2 (1554-1 to 2)	99
PV scale upper range	
Analog input 1 to 2 (1555-1 to 2)	99
RCAS in status	
Discrete output 1 to 3 (1706-1 to 3)	121
RCAS in value	
Discrete output 1 to 3 (1707-1 to 3)	121
RCAS out status	
Discrete output 1 to 3 (1708-1 to 3)	122
RCAS out value	
Discrete output 1 to 3 (1711-1 to 3)	122
Readback status	
Discrete output 1 to 3 (1712-1 to 3)	120
Readback value	
Discrete output 1 to 3 (1713-1 to 3)	120
Reset min/max values (6541)	156
Response time empty pipe detection (1859)	54
Separator (0101)	24
Serial number (0009)	146
Serial number (1481)	88
Set point status	
Discrete output 1 to 3 (1714-1 to 3)	114
Set point value	
Discrete output 1 to 3 (1715-1 to 3)	114
Simulate enabled	
Analog input 1 to 2 (1556-1 to 2)	104
Discrete input 1 to 2 (2196-1 to 2)	112
Discrete output 1 to 3 (1716-1 to 3)	122
Simulate status	
Analog input 1 to 2 (1557-1 to 2)	105
Discrete input 1 to 2 (2197-1 to 2)	112
Discrete output 1 to 3 (1717-1 to 3)	123
Simulate value	
Analog input 1 to 2 (1558-1 to 2)	105
Discrete input 1 to 2 (2198-1 to 2)	113
Discrete output 1 to 3 (1718-1 to 3)	123
Simulation device alarm (0654)	163
Software option overview (0015)	38
Software revision (0072)	149
Software revision (1478)	87
Static revision	
Analog input 1 to 2 (1560-1 to 2)	95
Discrete input 1 to 2 (2200-1 to 2)	109
Discrete output 1 to 3 (1720-1 to 3)	117
Totalizer 1 to 3 (3832-1 to 3)	129
Static revision (1495)	85
Status PROFIBUS Master Config (1465)	82
Strategy	
Analog input 1 to 2 (1559-1 to 2)	96
Discrete input 1 to 2 (2199-1 to 2)	109
Discrete output 1 to 3 (1719-1 to 3)	117
Totalizer 1 to 3 (3831-1 to 3)	129
Strategy (1494)	85
Switch output function (0481)	73
Switch output simulation (0462)	162
Switch point empty pipe detection (6562)	54
Switch status (0461)	43, 79
Switch status (0463)	163
Switch-off delay (0465)	78
Switch-off value (0464)	76
Switch-on delay (0467)	78
Switch-on value (0466)	76
Tag description	
Analog input 1 to 2 (1562-1 to 2)	95
Discrete input 1 to 2 (2201-1 to 2)	108
Discrete output 1 to 3 (1721-1 to 3)	116
Totalizer 1 to 3 (3833-1 to 3)	128

Target mode	54
Analog input 1 to 2 (1563-1 to 2)	96
Discrete input 1 to 2 (2202-1 to 2)	109
Discrete output 1 to 3 (1722-1 to 3)	117
Totalizer 1 to 3 (3834-1 to 3)	129
Target mode (1497)	85
Temperature unit (0557)	48
Terminal voltage 1 (0662)	42, 83
Timestamp (0667)	137
Timestamp (0672)	138
Timestamp (0683)	140
Timestamp (0684)	140
Timestamp (0685)	141
Timestamp (0686)	142
Timestamp (0687)	143
Totalizer operation mode	
Totalizer 1 to 3 (3823-1 to 3)	126
Totalizer status (Hex) 1 to 3 (3825-1 to 3)	41, 128
Totalizer status 1 to 3 (3826-1 to 3)	41, 128
Totalizer value 1 to 3 (3827-1 to 3)	41, 127
Unit totalizer	
Totalizer 1 to 3 (3835-1 to 3)	124
Value 1 display (0107)	17
Value 2 display (0108)	18
Value 3 display (0110)	19
Value 4 display (0109)	21
Value per pulse (0455)	64
Volume flow (1838)	40
Volume flow factor (1832)	58
Volume flow offset (1831)	59
Volume flow unit (0553)	44
Volume unit (0563)	46
Zero point (6546)	61
Direct access (Parameter)	10
Discrete input 1 to 2 (Submenu)	106
Discrete inputs (Submenu)	106
Discrete output 1 to 3 (Submenu)	113
Discrete outputs (Submenu)	113
Display (Submenu)	13
Display channel 1 (Submenu)	153
Display channel 2 (Submenu)	154
Display channel 3 (Submenu)	154
Display channel 4 (Submenu)	155
Display damping (Parameter)	23
Display interval (Parameter)	22
Display module (Submenu)	149
Document	
Explanation of the structure of a parameter	
description	6
Function	4
Structure	4
Symbols used	6
Target group	4
Using the document	4
Document function	4
E	
Empty pipe adjust (Wizard)	55
Empty pipe adjust value (Parameter)	55
Empty pipe detection (Parameter)	54
Empty pipe detection (Submenu)	53
ENP version (Parameter)	148
Enter access code (Parameter)	13
Event list (Submenu)	144
Event logbook (Submenu)	143
Extended order code 1 (Parameter)	148
Extended order code 2 (Parameter)	148
Extended order code 3 (Parameter)	148
F	
Factory reset (Parameter)	90
Factory settings	165
SI units	165
US units	166
Fail safe time (Parameter)	114
Fail safe type (Parameter)	94, 107, 115
Fail safe value (Parameter)	94, 107, 115
Failure frequency (Parameter)	72
Failure mode (Parameter)	66, 72, 78, 127
Feature enabled (Parameter)	92
Feature supported (Parameter)	92
Filter options (Parameter)	143, 144
Firmware version (Parameter)	147
Fixed density (Parameter)	57
Flow damping (Parameter)	50
Flow override (Parameter)	49
Format display (Parameter)	15
Frequency output simulation (Parameter)	161
Frequency value (Parameter)	161
Full pipe adjust value (Parameter)	55
Function	
see Parameter	
H	
Hardware lock (Parameter)	91
Hardware revision (Parameter)	87
Header (Parameter)	23
Header text (Parameter)	24
Heartbeat (Submenu)	159
Hi alarm state (Parameter)	103, 135
Hi alarm value (Parameter)	103, 135
Hi Hi alarm state (Parameter)	103, 134
Hi Hi alarm value (Parameter)	102, 134
Hi Hi Lim (Parameter)	101, 132
Hi Lim (Parameter)	101, 133
I	
I/O module (Submenu)	149
Ident number selector (Parameter)	81, 91
Input channel (Parameter)	121
Installation direction (Parameter)	57
Integration time (Parameter)	58
Invert (Parameter)	107, 114
Invert output signal (Parameter)	79
IO module temperature (Submenu)	158
L	
Language (Parameter)	14
Last backup (Parameter)	26

Lin type (Parameter)	100
Lo alarm state (Parameter)	104, 135
Lo alarm value (Parameter)	103, 135
Lo Lim (Parameter)	102, 133
Lo Lo alarm state (Parameter)	104, 136
Lo Lo alarm value (Parameter)	104, 136
Lo Lo Lim (Parameter)	102, 134
Locking status (Parameter)	11
Logging interval (Parameter)	152
Low flow cut off (Submenu)	50

M

Main electronic temperature (Submenu)	157
Manufacturer ID (Parameter)	88
Mass flow (Parameter)	40
Mass flow factor (Parameter)	59
Mass flow offset (Parameter)	59
Mass flow unit (Parameter)	46
Mass unit (Parameter)	47
Maximum frequency value (Parameter)	68
Maximum value (Parameter)	156, 157, 158
Measured value EPD (Parameter)	55
Measured values (Submenu)	39
Measuring mode (Parameter)	66, 70
Measuring period (Parameter)	58
Measuring value at maximum frequency (Parameter)	69
Measuring value at minimum frequency (Parameter)	69
Min/max values (Submenu)	155
Minimum frequency value (Parameter)	68
Minimum value (Parameter)	156, 157, 158
Mode block actual (Parameter)	86, 96, 110, 118, 130
Mode block normal (Parameter)	86, 97, 110, 118, 130
Mode block permitted (Parameter)	86, 97, 110, 118, 130

N

New adjustment (Parameter)	56
Nominal diameter (Parameter)	60

O

Off value low flow cutoff (Parameter)	51
On value low flow cutoff (Parameter)	51
Operating mode (Parameter)	62
Operating time (Parameter)	26, 139
Operating time from restart (Parameter)	139
Order code (Parameter)	147
Out decimal point (Parameter)	100
Out scale lower range (Parameter)	99
Out scale upper range (Parameter)	99
Out status (Parameter)	95, 108, 116
Out unit (Parameter)	100
Out unit text (Parameter)	105
Out value (Parameter)	94, 108, 116
Output (Submenu)	61
Output channel (Parameter)	121
Output frequency (Parameter)	43, 73
Output values (Submenu)	42

P

Parameter

Structure of a parameter description	6
Physical block (Submenu)	83
Preset value 1 to 3 (Parameter)	126
Pressure shock suppression (Parameter)	52
Previous diagnostics (Parameter)	138
Process parameters (Submenu)	49
Process variable adjustment (Submenu)	58
Process variable value (Parameter)	160
Process variables (Submenu)	40
PROFIBUS ident number (Parameter)	82
PROFIBUS PA configuration (Submenu)	80
PROFIBUS PA info (Submenu)	81
Profile version (Parameter)	82
Progress (Parameter)	56
Pulse output (Parameter)	42, 67
Pulse output simulation (Parameter)	162
Pulse value (Parameter)	162
Pulse width (Parameter)	65
Pulse/frequency/switch output (Submenu)	61
PV filter time (Parameter)	93
PV scale lower range (Parameter)	99
PV scale upper range (Parameter)	99

R

RCAS in status (Parameter)	121
RCAS in value (Parameter)	121
RCAS out status (Parameter)	122
RCAS out value (Parameter)	122
Readback status (Parameter)	120
Readback value (Parameter)	120
Reference values (Submenu)	56
Reset min/max values (Parameter)	156
Response time empty pipe detection (Parameter)	54

S

Sensor (Submenu)	39
Sensor adjustment (Submenu)	57
Separator (Parameter)	24
Serial number (Parameter)	88, 146
Set point status (Parameter)	114
Set point value (Parameter)	114
Simulate enabled (Parameter)	104, 112, 122
Simulate status (Parameter)	105, 112, 123
Simulate value (Parameter)	105, 113, 123
Simulation (Submenu)	159
Simulation device alarm (Parameter)	163
Software option overview (Parameter)	38
Software revision (Parameter)	87, 149
Static revision (Parameter)	85, 95, 109, 117, 129
Status PROFIBUS Master Config (Parameter)	82
Strategy (Parameter)	85, 96, 109, 117, 129
Submenu	
Administration	34
Analog input 1 to 2	93
Analog inputs	92
Application	123
Calculated values	56

Calibration	60
Communication	80
Configuration backup display	26
Data logging	150
Device information	145
Diagnostic behavior	30
Diagnostic handling	29
Diagnostic list	139
Diagnostics	136
Discrete input 1 to 2	106
Discrete inputs	106
Discrete output 1 to 3	113
Discrete outputs	113
Display	13
Display channel 1	153
Display channel 2	154
Display channel 3	154
Display channel 4	155
Display module	149
Empty pipe detection	53
Event list	144
Event logbook	143
Heartbeat	159
I/O module	149
IO module temperature	158
Low flow cut off	50
Main electronic temperature	157
Measured values	39
Min/max values	155
Output	61
Output values	42
Physical block	83
Process parameters	49
Process variable adjustment	58
Process variables	40
PROFIBUS PA configuration	80
PROFIBUS PA info	81
Pulse/frequency/switch output	61
Reference values	56
Sensor	39
Sensor adjustment	57
Simulation	159
System	13
System units	44
Terminal voltage	156
Totalizer	40
Totalizer 1 to 3	123
Switch output function (Parameter)	73
Switch output simulation (Parameter)	162
Switch point empty pipe detection (Parameter)	54
Switch status (Parameter)	43, 79, 163
Switch-off delay (Parameter)	78
Switch-off value (Parameter)	76
Switch-on delay (Parameter)	78
Switch-on value (Parameter)	76
System (Submenu)	13
System units (Submenu)	44

T

Tag description (Parameter)	95, 108, 116, 128
Target group	4
Target mode (Parameter)	85, 96, 109, 117, 129
Temperature unit (Parameter)	48
Terminal voltage (Submenu)	156
Terminal voltage 1 (Parameter)	42, 83
Timestamp (Parameter)	137, 138, 140, 141, 142, 143
Totalizer (Submenu)	40
Totalizer 1 to 3 (Submenu)	123
Totalizer operation mode (Parameter)	126
Totalizer status (Hex) 1 to 3 (Parameter)	41, 128
Totalizer status 1 to 3 (Parameter)	41, 128
Totalizer value 1 to 3 (Parameter)	41, 127

U

Unit totalizer (Parameter)	124
----------------------------	-----

V

Value 1 display (Parameter)	17
Value 2 display (Parameter)	18
Value 3 display (Parameter)	19
Value 4 display (Parameter)	21
Value per pulse (Parameter)	64
Volume flow (Parameter)	40
Volume flow factor (Parameter)	58
Volume flow offset (Parameter)	59
Volume flow unit (Parameter)	44
Volume unit (Parameter)	46

W

Wizard

Define access code	35
Empty pipe adjust	55

Z

Zero point (Parameter)	61
------------------------	----

www.addresses.endress.com
