


# Description of Device Parameters

## Proline Promag 500

## FOUNDATION Fieldbus

Electromagnetic flowmeter

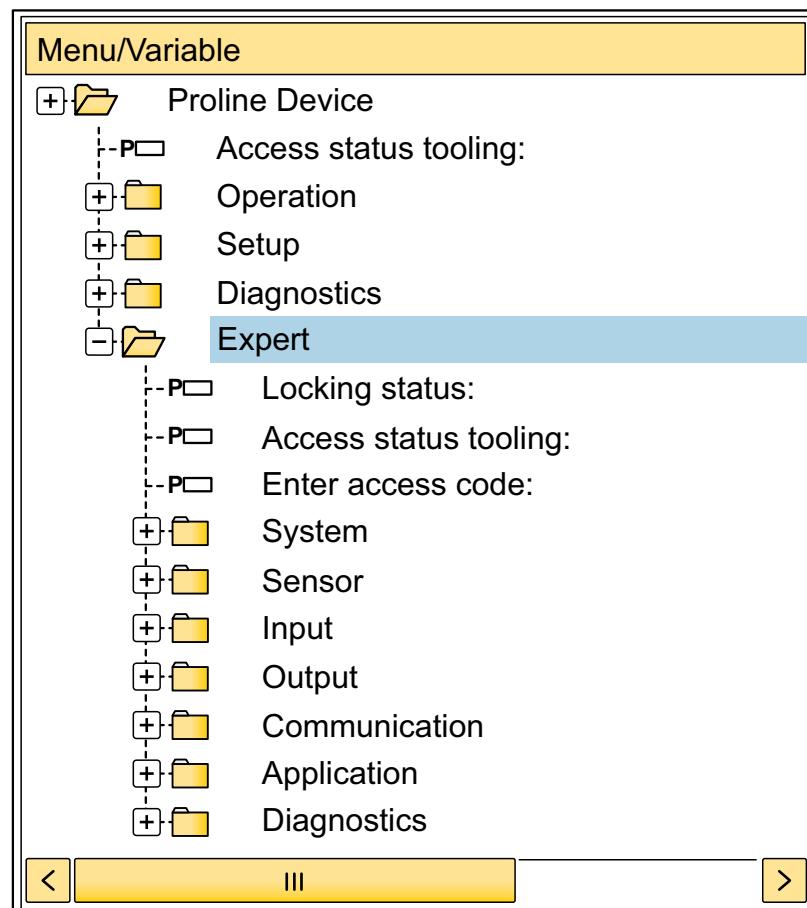



## Table of contents

<b>1 Document information .....</b>	<b>4</b>		
1.1 Document function .....	4	3.11 "Application" submenu .....	261
1.2 Target group .....	4	3.11.1 "Totalizer 1 to n" submenu .....	262
1.3 Using this document .....	4	3.12 "Diagnostics" submenu .....	266
1.3.1 Information on the document structure .....	4	3.12.1 "Diagnostic list" submenu .....	269
1.3.2 Structure of a parameter description .....	6	3.12.2 "Event logbook" submenu .....	273
1.4 Symbols used .....	6	3.12.3 "Device info" submenu .....	276
1.4.1 Symbols for certain types of information .....	6	3.12.4 "Mainboard module" submenu .....	279
1.4.2 Symbols in graphics .....	7	3.12.5 "Sens. electronic" submenu .....	280
1.5 Documentation .....	7	3.12.6 "I/O module 1" submenu .....	280
1.5.1 Standard documentation .....	7	3.12.7 "I/O module 2" submenu .....	281
1.5.2 Supplementary device-dependent documentation .....	7	3.12.8 "Display module" submenu .....	282
<b>2 Overview of the Expert operating menu .....</b>	<b>8</b>	3.12.9 "Data logging" submenu .....	282
<b>3 Description of device parameters ...</b>	<b>11</b>	3.12.10 "Min/max val." submenu .....	290
3.1 "System" submenu .....	13	3.12.11 "Heartbeat" submenu .....	294
3.1.1 "Display" submenu .....	14	3.12.12 "Simulation" submenu .....	294
3.1.2 "Configuration backup" submenu .....	27		
3.1.3 "Diagn. handling" submenu .....	30		
3.1.4 "Administration" submenu .....	42		
3.2 "Sensor" submenu .....	47	<b>4 Country-specific factory settings ..</b>	<b>304</b>
3.2.1 "Measured values" submenu .....	47	4.1 SI units .....	304
3.2.2 "System units" submenu .....	57	4.1.1 System units .....	304
3.2.3 "Process param." submenu .....	64	4.1.2 Full scale values .....	304
3.2.4 "External compensation" submenu .....	76	4.1.3 Output current span .....	305
3.2.5 "Sensor adjustment" submenu .....	81	4.1.4 Pulse value .....	305
3.2.6 "Calibration" submenu .....	87	4.1.5 On value low flow cut off .....	306
3.3 "I/O configuration" submenu .....	88	4.2 US units .....	307
3.4 "Input" submenu .....	91	4.2.1 System units .....	307
3.4.1 "Current input 1 to n" submenu .....	91	4.2.2 Full scale values .....	307
3.4.2 "Status input 1 to n" submenu .....	94	4.2.3 Output current span .....	308
3.5 "Output" submenu .....	96	4.2.4 Pulse value .....	308
3.5.1 "Current output 1 to n" submenu .....	96	4.2.5 On value low flow cut off .....	309
3.5.2 "Pulse/frequency/switch output 1 to n" submenu .....	110		
3.5.3 "Relay output 1 to n" submenu .....	130		
3.6 "Communication" submenu .....	137	<b>5 Explanation of abbreviated units ..</b>	<b>311</b>
3.6.1 "Resource block" submenu .....	137	5.1 SI units .....	311
3.6.2 "WLAN settings" submenu .....	158	5.2 US units .....	311
3.6.3 "Web server" submenu .....	162	5.3 Imperial units .....	312
3.7 "Analog inputs" submenu .....	165		
3.7.1 "Analog input 1 to n" submenu .....	165		
3.8 "Discrete inputs" submenu .....	215		
3.8.1 "Discrete input 1 to n" submenu .....	215		
3.9 "Analog outputs" submenu .....	243		
3.9.1 "Multiple AO" submenu .....	244		
3.10 "Discrete outputs" submenu .....	252		
3.10.1 "Multiple DO" submenu .....	252	<b>Index .....</b>	<b>313</b>

# 1 Document information

## 1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases


## 1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

## 1.3 Using this document

### 1.3.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the **Expert** menu (→ 8), which is displayed when the "**Maintenance**" user role is enabled.

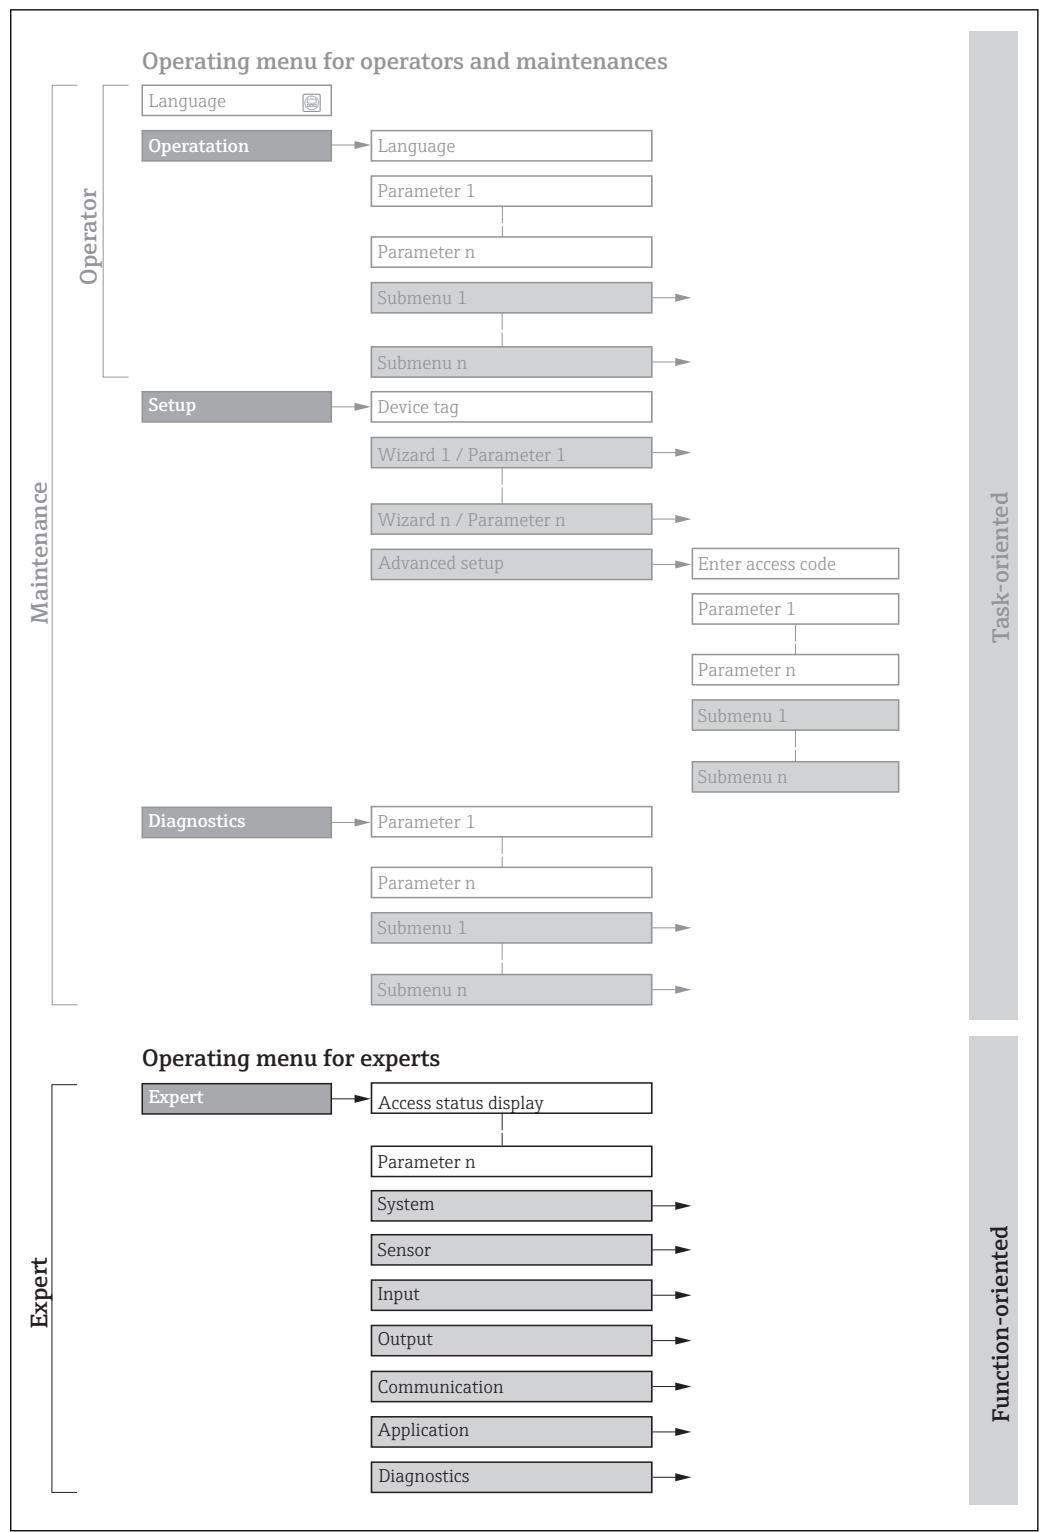

1 Sample graphic for the schematic layout of the operating menu



Detailed information concerning:

- Arrangement of the parameters according to the menu structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu along with a brief description, see the Operating Instructions for the device → 7
- Operating philosophy of the operating menu: "Operating philosophy" chapter of the Operating Instructions for the device → 7

### 1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name

Write-protected parameter = 

**Navigation**



Navigation path to the parameter via the local display (direct access code) or web browser  
 Navigation path to the parameter via the operating tool  
 The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.

**Prerequisite**

The parameter is only available under these specific conditions

**Description**

Description of the parameter function

**Selection**

List of the individual options for the parameter

- Option 1
- Option 2

**User entry**

Input range for the parameter

**User interface**

Display value/data for the parameter

**Factory setting**

Default setting ex works

**Additional information**

Additional explanations (e.g. in examples):

- On individual options
- On display values/data
- On the input range
- On the factory setting
- On the parameter function

## 1.4 Symbols used

### 1.4.1 Symbols for certain types of information

Symbol	Meaning
	<b>Tip</b> Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

### 1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

## 1.5 Documentation

### 1.5.1 Standard documentation

#### Operating Instructions

Measuring device	Documentation code
Promag H 500	BA01479D
Promag P 500	BA01480D
Promag W 500	BA01481D

### 1.5.2 Supplementary device-dependent documentation

#### Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Heartbeat Technology	SD01745D
Web server	SD01661D

## 2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

<b>Expert</b>	
Direct access (0106)	→ <a href="#">11</a>
Locking status (0004)	→ <a href="#">12</a>
Access status (0005)	→ <a href="#">13</a>
Ent. access code (0003)	→ <a href="#">13</a>
<b>System</b>	→ <a href="#">13</a>
▶ Display	→ <a href="#">14</a>
▶ Config. backup	→ <a href="#">27</a>
▶ Diagn. handling	→ <a href="#">30</a>
▶ Administration	→ <a href="#">42</a>
<b>Sensor</b>	→ <a href="#">47</a>
▶ Measured val.	→ <a href="#">47</a>
▶ System units	→ <a href="#">57</a>
▶ Process param.	→ <a href="#">64</a>
▶ External comp.	→ <a href="#">76</a>
▶ Sensor adjustm.	→ <a href="#">81</a>
▶ Calibration	→ <a href="#">87</a>
<b>I/O config.</b>	→ <a href="#">88</a>
I/O 1 to n terminals (3902–1 to n)	→ <a href="#">89</a>
I/O 1 to n info (3906–1 to n)	→ <a href="#">89</a>
I/O 1 to n type (3901–1 to n)	→ <a href="#">89</a>

Apply I/O config (3907)	→ 90
Conversion code (2762)	→ 90
▶ Input	→ 91
▶ Current input 1 to n	→ 91
▶ Status input 1 to n	→ 94
▶ Output	→ 96
▶ Curr.output 1 to n	→ 96
▶ PFS output 1 to n	→ 110
▶ Relay output 1 to n	→ 130
▶ Communication	→ 137
Device address (11061)	→ 137
▶ Resource block	→ 137
▶ WLAN settings	→ 158
▶ Web server	→ 162
▶ Analog inputs	→ 165
▶ Analog input 1 to n	→ 165
▶ Discrete inputs	→ 215
▶ Discrete input 1 to n	→ 215
▶ Analog outputs	→ 243
▶ Multiple AO	→ 244
▶ Discrete outputs	→ 252
▶ Multiple DO	→ 252

► Application	→ ↗ 261
Reset all tot. (2806)	→ ↗ 261
► Totalizer 1 to n	→ ↗ 262
► Diagnostics	→ ↗ 266
Actual diagnos. (0691)	→ ↗ 267
Timestamp (0667)	→ ↗ 267
Prev.diagnostics (0690)	→ ↗ 268
Timestamp (0672)	→ ↗ 268
Time fr. restart (0653)	→ ↗ 269
Operating time (0652)	→ ↗ 269
► Diagnostic list	→ ↗ 269
► Event logbook	→ ↗ 273
► Device info	→ ↗ 276
► Mainboard module	→ ↗ 279
► Sens. electronic	→ ↗ 280
► I/O module 1	→ ↗ 280
► I/O module 2	→ ↗ 281
► I/O module 3	→ ↗ 280
► I/O module 4	→ ↗ 280
► Display module	→ ↗ 282
► Min/max val.	→ ↗ 290
► Data logging	→ ↗ 282
► Heartbeat	→ ↗ 294
► Simulation	→ ↗ 294

### 3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert	
Direct access (0106)	→ 11
Locking status (0004)	→ 12
Access status (0005)	→ 13
Ent. access code (0003)	→ 13
▶ System	→ 13
▶ Sensor	→ 47
▶ I/O config.	→ 88
▶ Input	→ 91
▶ Output	→ 96
▶ Communication	→ 137
▶ Analog inputs	→ 165
▶ Discrete inputs	→ 215
▶ Analog outputs	→ 243
▶ Discrete outputs	→ 252
▶ Application	→ 261
▶ Diagnostics	→ 266

#### Direct access



##### Navigation

Expert → Direct access (0106)

##### Description


Use this function to enter the access code to enable direct access to the desired parameter via the local display. A parameter number is assigned to each parameter for this purpose.

##### User entry

0 to 65 535

**Additional information***User entry*

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

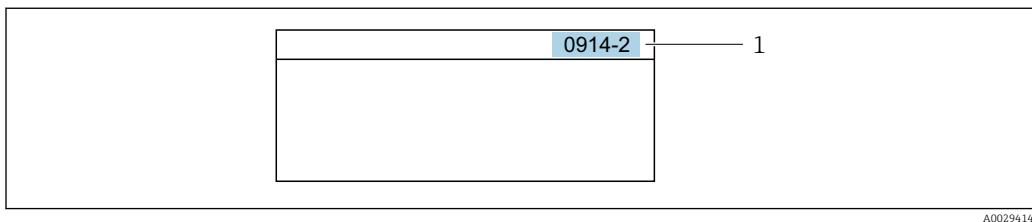

1 Direct access code

A0029414

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.  
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.  
Example: Enter 0914 → **Assign variable** parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.  
Example: Enter 0914-2 → **Assign variable** parameter

**Locking status****Navigation**

Expert → Locking status (0004)

**Description**

Displays the active write protection.

**User interface**

- Hardware locked
- Temp. locked

**Additional information***Display*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device → 7

*Selection*

Options	Description
None	The access status displayed in the <b>Access status</b> parameter (→  13) applies . Only appears on local display.
Hardware locked (priority 1)	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool).
Temp. locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

---

**Access status**

---

<b>Navigation</b>	  Expert → Access status (0005)
<b>Description</b>	Displays the access authorization to the parameters via the local display, Web browser or operating tool.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Operator</li> <li>▪ Maintenance</li> </ul>
<b>Factory setting</b>	Maintenance
<b>Additional information</b>	<p><i>Description</i></p> <p> Access authorization can be modified via the <b>Ent. access code</b> parameter (→  13).</p> <p> If additional write protection is active, this restricts the current access authorization even further.</p> <p><i>Display</i></p> <p> Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device →  7</p>

---


**Ent. access code**

---

<b>Navigation</b>	  Expert → Ent. access code (0003)
<b>Description</b>	Use this function to enter the user-specific release code to remove parameter write protection.
<b>User entry</b>	0 to 9 999

### 3.1 "System" submenu

*Navigation*   Expert → System

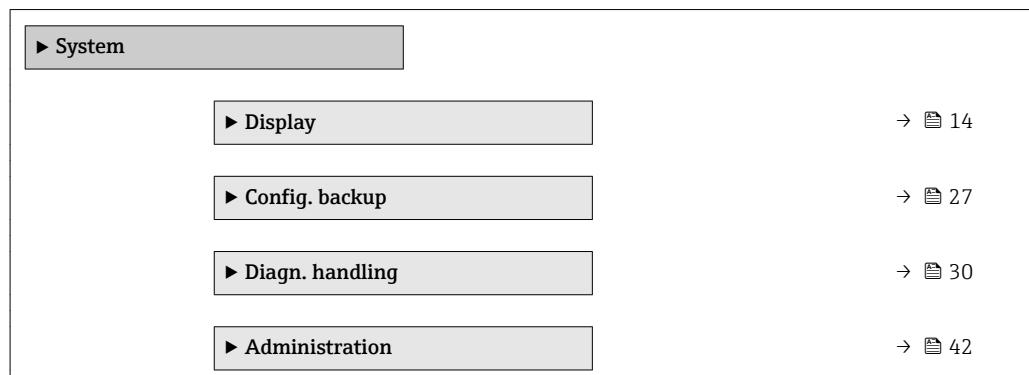

### 3.1.1 "Display" submenu

Navigation       Expert → System → Display

► Display	
Display language (0104)	→  15
Format display (0098)	→  15
Value 1 display (0107)	→  18
0% bargraph 1 (0123)	→  18
100% bargraph 1 (0125)	→  19
Decimal places 1 (0095)	→  19
Value 2 display (0108)	→  20
Decimal places 2 (0117)	→  20
Value 3 display (0110)	→  21
0% bargraph 3 (0124)	→  21
100% bargraph 3 (0126)	→  22
Decimal places 3 (0118)	→  22
Value 4 display (0109)	→  22
Decimal places 4 (0119)	→  23
Display interval (0096)	→  23
Display damping (0094)	→  24
Header (0097)	→  24
Header text (0112)	→  25
Separator (0101)	→  26
Contrast display (0105)	→  26
Backlight (0111)	→  26

---

## Display language

---

**Navigation**  Expert → System → Display → Display language (0104)

**Prerequisite** A local display is provided.

**Description** Use this function to select the configured language on the local display.

**Selection**

- English \*
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык(Ru) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- العربية (Ara) \*
- Bahasa Indonesia \*
- ภาษาไทย (Thai) \*
- tiếng Việt (Vit) \*
- čeština (Czech) \*

**Factory setting** English (alternatively, the ordered language is preset in the device)

---

## Format display

---

**Navigation**  Expert → System → Display → Format display (0098)

**Prerequisite** A local display is provided.

**Description** Use this function to select how the measured value is shown on the local display.

**Selection**

- 1 value, max.
- Bagr. + 1 value
- 2 values
- Val. large+2val.
- 4 values

**Factory setting** 1 value, max.

---

\* Visibility depends on order options or device settings

**Additional information***Description*

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.



- The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 22) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured via the **Display interval** parameter (→ 23).


Possible measured values shown on the local display:

"1 value, max." option




A0016529

"Bagr. + 1 value" option

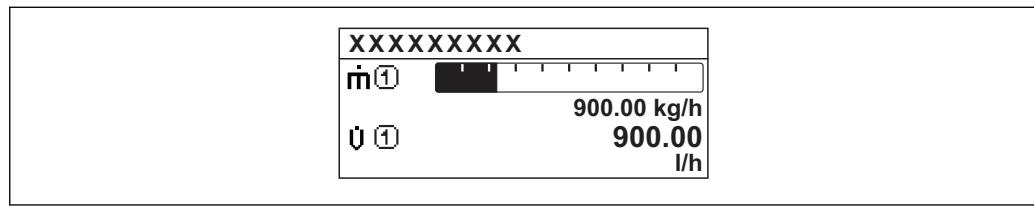


A0013098

"2 values" option

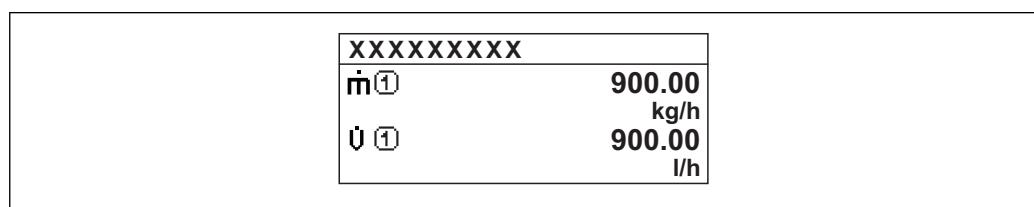


A0013100

"Val. large+2val." option

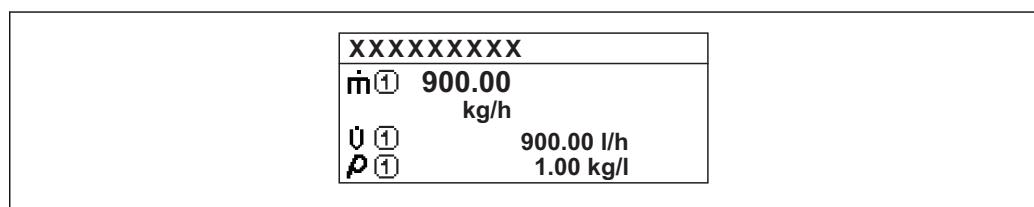

A0013102

"4 values" option

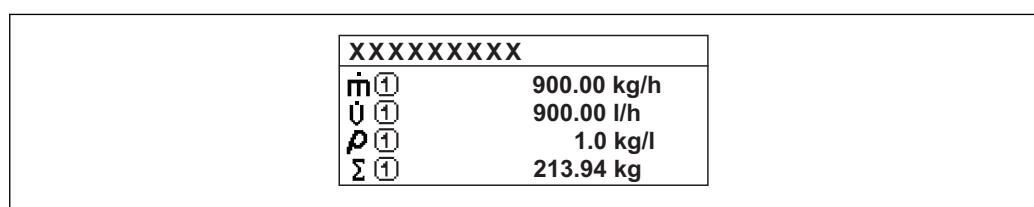

A0013103

**Value 1 display****Navigation**

Expert → System → Display → Value 1 display (0107)

**Prerequisite**

A local display is provided.

**Description**

Use this function to select one of the measured values to be shown on the local display.

**Selection**

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity \*
- Conductivity \*
- CorrConductivity \*
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Curr.output 1 \*
- Temperature \*
- Electronic temp.

**Factory setting**

Volume flow

**Additional information***Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

*Dependency*

The unit of the displayed measured value is taken from the **System units** submenu (→ 57).

**0% bargraph 1****Navigation**

Expert → System → Display → 0% bargraph 1 (0123)

**Prerequisite**

A local display is provided.

**Description**

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.

**User entry**

Signed floating-point number

**Factory setting**

Country-specific:

- 0 l/h
- 0 gal/min (us)

\* Visibility depends on order options or device settings

**Additional information***Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

*User entry*

The unit of the displayed measured value is taken from the **System units** submenu (→ 57).

**100% bargraph 1****Navigation**

Expert → System → Display → 100% bargraph 1 (0125)

**Prerequisite**

A local display is provided.

**Description**

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.

**User entry**

Signed floating-point number

**Factory setting**

Depends on country and nominal diameter → 304

**Additional information***Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

*User entry*

The unit of the displayed measured value is taken from the **System units** submenu (→ 57).

**Decimal places 1****Navigation**

Expert → System → Display → Decimal places 1 (0095)

**Prerequisite**

A measured value is specified in the **Value 1 display** parameter (→ 18).

**Description**

Use this function to select the number of decimal places for measured value 1.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.XX

**Additional information***Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

**Value 2 display****Navigation**

Expert → System → Display → Value 2 display (0108)

**Prerequisite**

A local display is provided.

**Description**

Use this function to select one of the measured values to be shown on the local display.

**Selection**

For the picklist, see the **Value 1 display** parameter (→ 18)

**Factory setting**

None

**Additional information***Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

*Dependency*

The unit of the displayed measured value is taken from the **System units** submenu (→ 57).

**Decimal places 2****Navigation**

Expert → System → Display → Decimal places 2 (0117)

**Prerequisite**

A measured value is specified in the **Value 2 display** parameter (→ 20).

**Description**

Use this function to select the number of decimal places for measured value 2.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.XX

**Additional information***Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

---

**Value 3 display**

<b>Navigation</b>	Expert → System → Display → Value 3 display (0110)
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to select one of the measured values to be shown on the local display.
<b>Selection</b>	For the picklist, see the <b>Value 1 display</b> parameter (→  18)
<b>Factory setting</b>	None
<b>Additional information</b>	<i>Description</i> If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation. The <b>Format display</b> parameter (→  15) is used to specify how many measured values are displayed simultaneously and how. <i>Selection</i> The unit of the displayed measured value is taken from the <b>System units</b> submenu (→  57).

---

**0% bargraph 3**

<b>Navigation</b>	Expert → System → Display → 0% bargraph 3 (0124)
<b>Prerequisite</b>	A selection was made in the <b>Value 3 display</b> parameter (→  21).
<b>Description</b>	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
<b>Additional information</b>	<i>Description</i> The <b>Format display</b> parameter (→  15) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i> The unit of the displayed measured value is taken from the <b>System units</b> submenu (→  57).

## 100% bargraph 3



### Navigation

Expert → System → Display → 100% bargraph 3 (0126)

### Prerequisite

A selection was made in the **Value 3 display** parameter (→ 21).

### Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

### User entry

Signed floating-point number

### Factory setting

0

### Additional information

#### Description

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

#### User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 57).

## Decimal places 3



### Navigation

Expert → System → Display → Decimal places 3 (0118)

### Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 21).

### Description

Use this function to select the number of decimal places for measured value 3.

### Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

### Factory setting

X.XX

### Additional information

#### Description

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

## Value 4 display



### Navigation

Expert → System → Display → Value 4 display (0109)

### Prerequisite

A local display is provided.

<b>Description</b>	Use this function to select one of the measured values to be shown on the local display.
<b>Selection</b>	For the picklist, see the <b>Value 1 display</b> parameter (→ 18)
<b>Factory setting</b>	None
<b>Additional information</b>	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.</p> <p> The <b>Format display</b> parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Selection</i></p> <p> The unit of the displayed measured value is taken from the <b>System units</b> submenu (→ 57).</p>

---

## Decimal places 4



<b>Navigation</b>	 Expert → System → Display → Decimal places 4 (0119)
<b>Prerequisite</b>	A measured value is specified in the <b>Value 4 display</b> parameter (→ 22).
<b>Description</b>	Use this function to select the number of decimal places for measured value 4.
<b>Selection</b>	<ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> X</li> <li><input type="checkbox"/> X.X</li> <li><input type="checkbox"/> X.XX</li> <li><input type="checkbox"/> X.XXX</li> <li><input type="checkbox"/> X.XXXX</li> </ul>
<b>Factory setting</b>	X.XX
<b>Additional information</b>	<p><i>Description</i></p> <p> This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.</p>

---

## Display interval

<b>Navigation</b>	 Expert → System → Display → Display interval (0096)
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to enter the length of time the measured values are displayed if the values alternate on the display.
<b>User entry</b>	1 to 10 s

**Factory setting** 5 s

**Additional information** *Description*

This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.

-  ■ The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 22) are used to specify which measured values are shown on the local display.  
■ The display format of the displayed measured values is specified using the **Format display** parameter (→ 15).

---

## Display damping



**Navigation**  Expert → System → Display → Display damping (0094)

**Prerequisite** A local display is provided.

**Description** Use this function to enter a time constant for the reaction time of the local display to fluctuations in the measured value caused by process conditions.

**User entry** 0.0 to 999.9 s

**Factory setting** 0.0 s

**Additional information** *User entry*

Use this function to enter a time constant (PT1 element<sup>1)</sup>) for display damping:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.

 Damping is switched off if **0** is entered (factory setting).

---

## Header



**Navigation**  Expert → System → Display → Header (0097)

**Prerequisite** A local display is provided.

**Description** Use this function to select the contents of the header of the local display.

**Selection**

- Device tag
- Free text


**Factory setting** Device tag

---

1) proportional transmission behavior with first order delay

**Additional information***Description*

The header text only appears during normal operation.

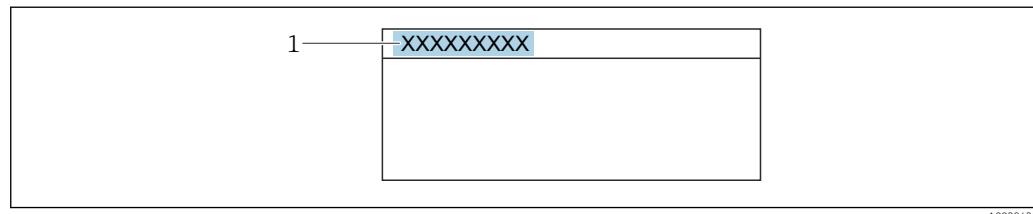

A0029422

1 Position of the header text on the display

*Selection*

- Device tag  
Is defined in the **Device tag** parameter (→ 276).
- Free text  
Is defined in the **Header text** parameter (→ 25).

**Header text****Navigation**

Expert → System → Display → Header text (0112)

**Prerequisite**

In the **Header** parameter (→ 24), the **Free text** option is selected.

**Description**

Use this function to enter a customer-specific text for the header of the local display.

**User entry**


Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

**Factory setting**

-----

**Additional information***Description*

The header text only appears during normal operation.

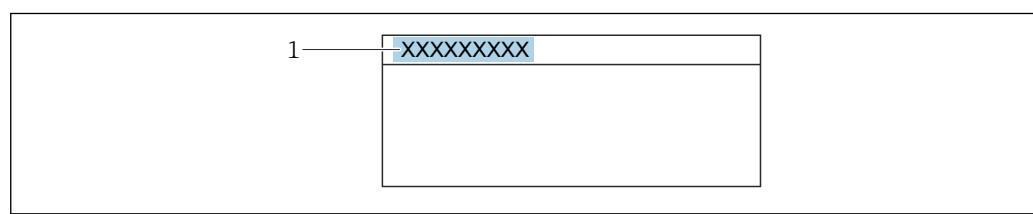

A0029422

1 Position of the header text on the display

**User entry**

The number of characters displayed depends on the characters used.

---

**Separator**

**Navigation** Expert → System → Display → Separator (0101)

**Prerequisite** A local display is provided.

**Description** Use this function to select the decimal separator.

**Selection**

- . (point)
- , (comma)

**Factory setting** . (point)

---

**Contrast display**

**Navigation** Expert → System → Display → Contrast display (0105)

**Prerequisite** A local display is provided.

**Description** Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

**User entry** 20 to 80 %

**Factory setting** Depends on the display

---

**Backlight**

**Navigation** Expert → System → Display → Backlight (0111)

**Prerequisite** One of the following conditions is met:

- Order code for "Display; operation", option F "4-line, illum.; touch control"
- Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"

**Description** Use this function to switch the backlight of the local display on and off.

**Selection**


- Disable
- Enable

**Factory setting** Enable

### 3.1.2 "Configuration backup" submenu

*Navigation*

Expert → System → Config. backup

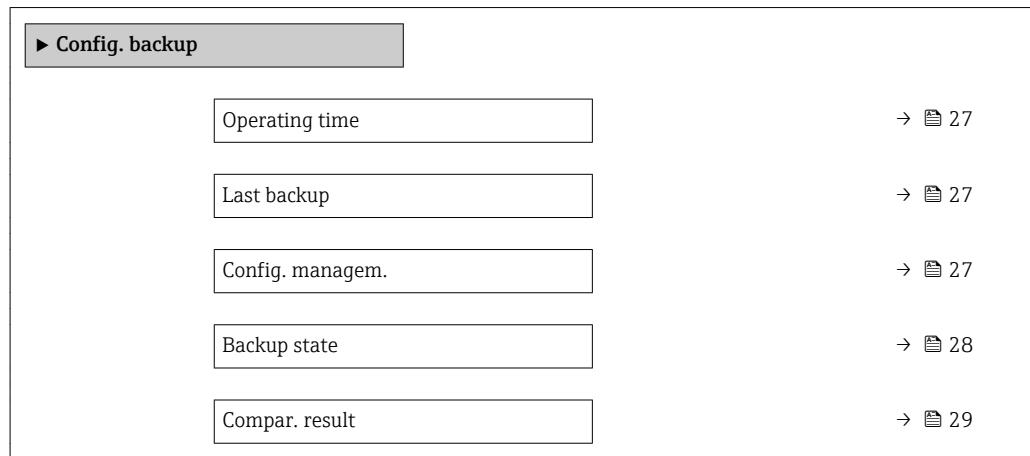

#### Operating time

**Navigation**

Expert → System → Config. backup → Operating time (0652)

**Description**

Use this function to display the length of time the device has been in operation.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information**

*User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

#### Last backup

**Navigation**

Expert → System → Config. backup → Last backup (2757)

**Description**

Displays the time since a backup copy of the data was last saved to the device memory.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

#### Config. managem.



**Navigation**

Expert → System → Config. backup → Config. managem. (2758)

**Description**

Use this function to select an action to save the data to the device memory.

**Selection**

- Cancel
- Execute backup
- Restore
- Compare
- Clear backup

**Factory setting**

Cancel

**Additional information***Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the integrated HistoROM to the memory of the device. The backup copy includes the transmitter data of the device. The following message appears on local display: Backup active, please wait!
Restore	The last backup copy of the device configuration is restored from the device memory to the device's integrated HistoROM. The backup copy includes the transmitter data of the device. The following message appears on local display: Restore active! Do not interrupt power supply!
Compare	The device configuration saved in the device memory is compared with the current device configuration of the integrated HistoROM. The following message appears on local display: Comparing files The result can be viewed in <b>Compar. result</b> parameter.
Clear backup	The backup copy of the device configuration is deleted from the memory of the device. The following message appears on local display: Deleting file

*HistoROM*

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

---

**Backup state****Navigation**
 Expert → System → Config. backup → Backup state (2759)
**Description**

Displays the status of the data backup process.

**User interface**

- None
- Backup in progr.
- Restore in progr.
- Delete in progr.
- Comp. in progr.
- Restoring failed
- Backup failed

**Factory setting**

None

**Compar. result****Navigation**

 Expert → System → Config. backup → Compar. result (2760)

**Description**

Displays the last result of the comparison of the data records in the device memory and in the HistoROM.

**User interface**

- Set. identical
- Set. not ident.
- No backup
- Backup corrupt
- Check not done
- Dataset incompr.

**Factory setting**

Check not done

**Additional information***Description*

 The comparison is started via the **Compare** option in the **Config. managem.** parameter (→  27).

*Selection*

Options	Description
Set. identical	The current device configuration of the HistoROM is identical to the backup copy in the device memory. If the transmitter configuration of another device has been transmitted to the device via HistoROM in the <b>Config. managem.</b> parameter, the current device configuration of the HistoROM is only partially identical to the backup copy in the device memory: The settings for the transmitter are not identical.
Set. not ident.	The current device configuration of the HistoROM is not identical to the backup copy in the device memory.
No backup	There is no backup copy of the device configuration of the HistoROM in the device memory.
Backup corrupt	The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the device memory.
Check not done	The device configuration of the HistoROM has not yet been compared to the backup copy in the device memory.
Dataset incompr.	The backup copy in the device memory is not compatible with the device.


*HistoROM*

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

### 3.1.3 "Diagn. handling" submenu

Navigation

Expert → System → Diagn. handling

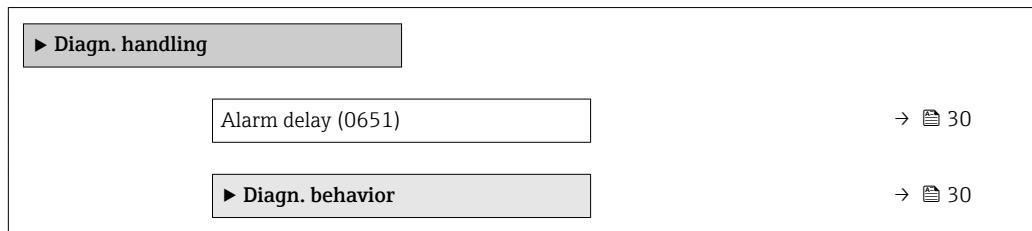

#### Alarm delay



Navigation

Expert → System → Diagn. handling → Alarm delay (0651)

Description

Use this function to enter the time interval until the device generates a diagnostic message.

The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting

0 s

Additional information

Result

This setting affects the following diagnostic messages:

- 170 coil resistance
- 832 Electronic temp.
- 833 Electronic temp.
- 834 Process temp.
- 835 Process temp.

#### "Diagnostic behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagn. behavior** submenu (→ 30).

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Options	Description
Alarm	The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Options	Description
Logbook only	The device continues to measure. The diagnostic message is displayed only in the <b>Event logbook</b> submenu (→ 273) ( <b>Event list</b> submenu (→ 275)) and is not displayed in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

 Assignment of the status of a diagnostic event.

The following options are available in the **Assign status of diagnostic no. xxx** parameters:

- Bad  
The status of the input value (PV) is Bad.
- Uncertain  
The status of the input value (PV) is Uncertain.
- Good  
The status of the input value (PV) is Good.

 For a list of all the diagnostic events, see the Operating Instructions for the device → 7

*Navigation*

  Expert → System → Diagn. handling → Diagn. behavior

► Diagn. behavior	
Diagnostic no. 043 (0650)	→ 32
Diagnostic no. 302 (0739)	→ 33
Diagnostic no. 376 (0645)	→ 33
Diagnostic no. 377 (0777)	→ 33
Diagnostic no. 441 (0657)	→ 34
Diagnostic no. 442 (0658)	→ 34
Diagnostic no. 443 (0659)	→ 34
Diagnostic no. 444 (0740)	→ 35
Diagnostic no. 531 (0741)	→ 35
Diagnostic no. 832 (0681)	→ 35
Diagnostic no. 833 (0682)	→ 36
Diagnostic no. 834 (0700)	→ 36
Diagnostic no. 835 (0702)	→ 37
Diagnostic no. 937 (0743)	→ 37

Diagnostic no. 938 (0642)	→  37
Diagnostic no. 962 (0745)	→  38
Status diag. 043 (11041)	→  38
Status diag. 302 (11001)	→  38
Status diag. 376 (11006)	→  39
Status diag. 377 (11007)	→  39
Status diag. 531 (11016)	→  39
Status diag. 832 (11002)	→  40
Status diag. 833 (11003)	→  40
Status diag. 834 (11004)	→  40
Status diag. 835 (11005)	→  41
Status diag. 937 (11042)	→  41
Status diag. 938 (11008)	→  41
Status diag. 962 (11000)	→  42

## Diagnostic no. 043 (Sens.short circ.)



### Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 043 (0650)

### Description

Option for changing the diagnostic behavior of the diagnostic message **043 Sens.short circ.**.

### Selection

- Off
- Alarm
- Warning
- Logbook only

### Factory setting

Warning

### Additional information

For a detailed description of the options available, see → 30

---

**Diagnostic no. 302 (Verific. active)**

<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 302 (0739)
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>302 Verific. active</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Alarm</li><li>▪ Warning</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">30</a>

---

**Diagnostic no. 376 (Sensor electron.)**

<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 376 (0645)
<b>Description</b>	Option for changing the diagnostic behavior of the diagnostic message <b>376 Sensor electron.</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">30</a>

---

**Diagnostic no. 377 (Sensor electron.)**

<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 377 (0777)
<b>Description</b>	Option for changing the diagnostic behavior of the diagnostic message <b>377 Sensor electron.</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">30</a>

**Diagnostic no. 441 (Curr.output 1 to n)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 441 (0657)

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **441 Curr.output 1 to n**.

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → 30

**Diagnostic no. 442 (Freq. output 1 to n)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 442 (0658)

**Prerequisite**

The measuring device has a pulse/frequency/switch output.

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **442 Freq. output 1 to n**.

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → 30

**Diagnostic no. 443 (Pulse output 1 to n)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 443 (0659)

**Prerequisite**

The measuring device has a pulse/frequency/switch output.

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **443 Pulse output 1 to n**.

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting** Warning

**Additional information**  For a detailed description of the options available, see → [30](#)

## Diagnostic no. 444 (Current input 1 to n)



**Navigation**  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 444 (0740)

**Prerequisite** The device has one current input.

**Description** Use this function to change the diagnostic behavior of the diagnostic message **444 Current input 1 to n**.

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting** Warning

**Additional information**  For a detailed description of the options available, see → [30](#)



## Diagnostic no. 531 (Empty pipe det.)

**Navigation**  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 531 (0741)

**Description** Use this function to change the diagnostic behavior of the diagnostic message **531 Empty pipe det.**.

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting** Warning

**Additional information**  For a detailed description of the options available, see → [30](#)



## Diagnostic no. 832 (Electronic temp.)

**Navigation**  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832 (0681)

**Description** Use this function to change the diagnostic behavior of the diagnostic message **832 Electronic temp..**

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting**

Logbook only

**Additional information**

 For a detailed description of the options available, see → [30](#)

---

**Diagnostic no. 833 (Electronic temp.)****Navigation**

 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833 (0682)

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **833 Electronic temp..**

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting**

Logbook only

**Additional information**

 For a detailed description of the options available, see → [30](#)

---

**Diagnostic no. 834 (Process temp.)****Navigation**

 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834 (0700)

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **834 Process temp..**

**Selection**

- Off
- Alarm
- Warning
- Logbook only

**Factory setting**

Warning

**Additional information**

 For a detailed description of the options available, see → [30](#)

---

**Diagnostic no. 835 (Process temp.)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835 (0702)
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>835 Process temp..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">30</a>

---

**Diagnostic no. 937 (EMC interference)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 937 (0743)
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>937 EMC interference.</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">30</a>

---

**Diagnostic no. 938 (EMC interference)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 938 (0642)
<b>Description</b>	Option for changing the diagnostic behavior of the diagnostic message <b>938 EMC interference.</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook only</li></ul>
<b>Factory setting</b>	Alarm
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">30</a>

**Diagnostic no. 962 (Empty pipe)**

<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 962 (0745)
<b>Description</b>	Option for changing the diagnostic behavior of the diagnostic message <b>862 Empty pipe</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see →  30

---

**Status diag. 043 (Sens.short circ.)**

<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Status diag. 043 (11041)
<b>Description</b>	Use this function to change the status of diagnostic message <b>043 Sens.short circ.</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Bad</li><li>▪ Uncertain</li><li>▪ Good</li></ul>
<b>Factory setting</b>	Bad
<b>Additional information</b>	Detailed description of the options available for selection: →  31

---

**Status diag. 302 (Verific. active)**

<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Status diag. 302 (11001)
<b>Description</b>	Use this function to change the status of diagnostic message <b>302 Verific. active</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Bad</li><li>▪ Uncertain</li><li>▪ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	Detailed description of the options available for selection: →  31

---

**Status diag. 376 (Sensor electron.)**

---

<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 376 (11006)
<b>Description</b>	Use this function to change the status of diagnostic message <b>376 Sensor electron..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: → <a href="#">31</a>

---

**Status diag. 377 (Sensor electron.)**

---

<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 377 (11007)
<b>Description</b>	Use this function to change the status of diagnostic message <b>377 Sensor electron..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: → <a href="#">31</a>

---

**Status diag. 531 (Empty pipe det.)**

---

<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 531 (11016)
<b>Description</b>	Option for changing the status of the diagnostic message <b>531 Empty pipe det..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: → <a href="#">31</a>

---

**Status diag. 832 (Electronic temp.)**

---

<b>Navigation</b>	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 832 (11002)
<b>Description</b>	Option for changing the status of the diagnostic message <b>832 Electronic temp..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: →  31

---

**Status diag. 833 (Electronic temp.)**

---

<b>Navigation</b>	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 833 (11003)
<b>Description</b>	Option for changing the status of the diagnostic message <b>833 Electronic temp..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: →  31

---

**Status diag. 834 (Process temp.)**

---

<b>Navigation</b>	  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 834 (11004)
<b>Description</b>	Use this function to change the status of diagnostic message <b>834 Process temp..</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: →  31

---

**Status diag. 835 (Process temp.)**

---

<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 835 (11005)
<b>Description</b>	Use this function to change the status of diagnostic message <b>835 Process temp.</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: → <a href="#">31</a>

---

**Status diag. 937 (EMC interference)**

---

<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 937 (11042)
<b>Description</b>	Option for changing the status of the diagnostic message <b>937 EMC interference</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: → <a href="#">31</a>

---

**Status diag. 938 (EMC interference)**

---

<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Status diag. 938 (11008)
<b>Description</b>	Use this function to change the status of diagnostic message <b>938 EMC interference</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad</li><li>■ Uncertain</li><li>■ Good</li></ul>
<b>Factory setting</b>	Uncertain
<b>Additional information</b>	 Detailed description of the options available for selection: → <a href="#">31</a>

**Status diag. 962 (Empty pipe)****Navigation**

  Expert → System → Diagn. handling → Diagn. behavior → Status diag. 962 (11000)

**Description**

Use this function to change the status of diagnostic message **862 Empty pipe**.

**Selection**

- Bad
- Uncertain
- Good

**Factory setting**


Uncertain

**Additional information**

 Detailed description of the options available for selection: → [31](#)

**3.1.4 "Administration" submenu****Navigation**

  Expert → System → Administration

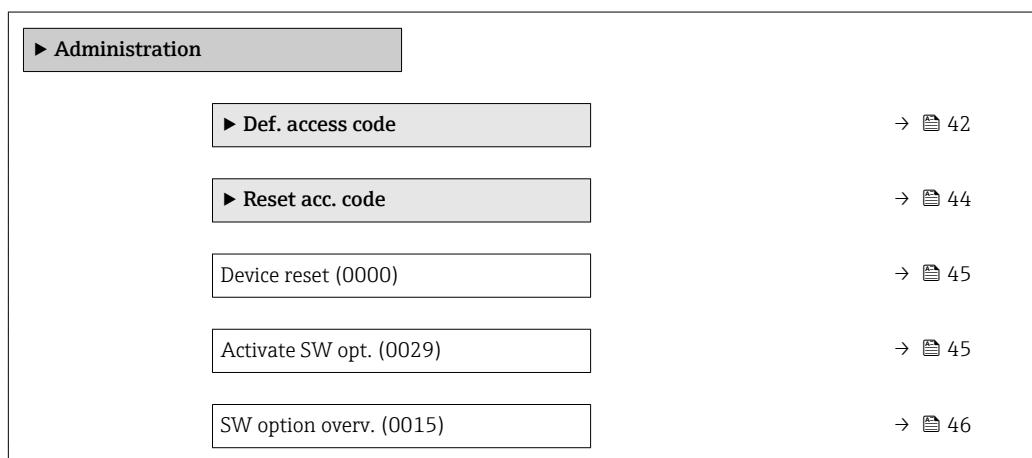
**"Def. access code" wizard**

 The **Def. access code** wizard (→ [42](#)) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Def. access code** parameter can be found directly in the **Administration** submenu. There is no **Confirm code** parameter if the device is operated via the operating tool.

**Navigation**

 Expert → System → Administration → Def. access code

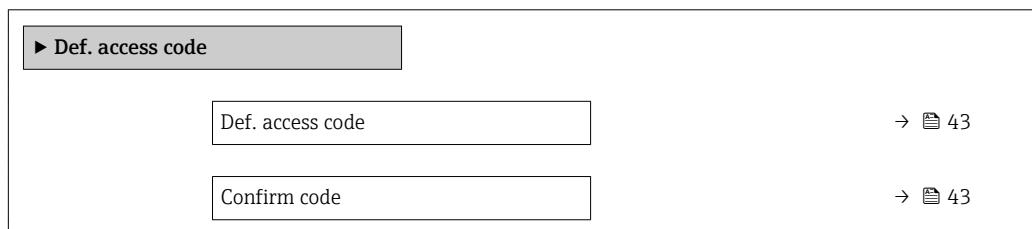

---

**Def. access code****Navigation**

Expert → System → Administration → Def. access code → Def. access code

**Description**

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the device configuration against any inadvertent modifications via the local display, Web browser, FieldCare or DeviceCare (via CDI-RJ45 service interface).

**User entry**

Max. 16-digit character string comprising numbers, letters and special characters

**Additional information***Description*

The write protection affects all parameters in the document marked with the symbol.

On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Ent. access code** parameter (→ 13).

If you lose the access code, please contact your Endress+Hauser sales organization.

*User entry*

A message is displayed if the access code is not in the input range.

*Factory setting*

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

---

**Confirm code****Navigation**


Expert → System → Administration → Def. access code → Confirm code

**Description**

Enter the defined release code a second time to confirm the release code.

**User entry**

Max. 16-digit character string comprising numbers, letters and special characters

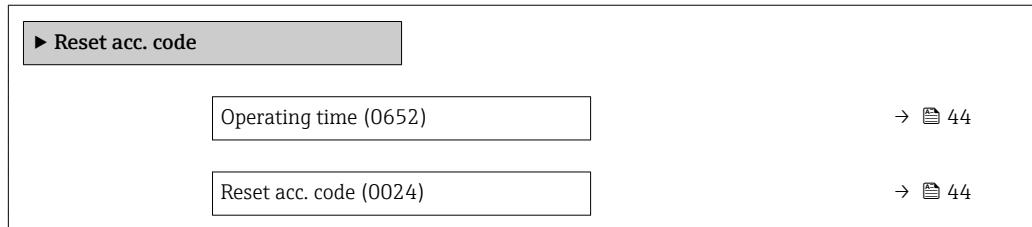**"Reset access code" submenu****Navigation**  Expert → System → Administration → Reset acc. code

---

**Operating time****Navigation**  Expert → System → Administration → Reset acc. code → Operating time (0652)**Description**

Use this function to display the length of time the device has been in operation.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

---

**Reset acc. code****Navigation**  Expert → System → Administration → Reset acc. code → Reset acc. code (0024)**Description**

Use this function to enter a reset code to reset the user-specific release code to the factory setting.

**User entry**

Character string comprising numbers, letters and special characters

**Factory setting**

0x00

**Additional information***Description*

 For a reset code, contact your Endress+Hauser service organization.

*User entry*

The reset code can only be entered via:

- Web browser
- DeviceCare, FieldCare (via interface CDI RJ45)
- Fieldbus

### Additional parameters in the "Administration" submenu

**Device reset****Navigation**

Expert → System → Administration → Device reset (0000)

**Description**

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

**Selection**

- Cancel
- To delivery set.
- Restart device
- ENP restart

**Factory setting**

Cancel

**Additional information**

*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery set.	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
ENP restart	The parameters of the electronic name plate are reset. The device is restarted.

**Activate SW opt.****Navigation**

Expert → System → Administration → Activate SW opt. (0029)

**Description**

Use this function to enter an activation code to enable an additional, ordered software option.

**User entry**

Max. 10-digit string consisting of numbers.

**Factory setting**

Depends on the software option ordered

**Additional information**

*Description*

If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.

*User entry*

To activate a software option subsequently, please contact your Endress+Hauser sales organization.

**NOTE!**

**The activation code is linked to the serial number of the measuring device and varies according to the device and software option.**

If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.

- Before you enter a new activation code, make a note of the current activation code .
- Enter the new activation code provided by Endress+Hauser when the new software option was ordered.
- Once the activation code has been entered, check if the new software option is displayed in the **SW option overv.** parameter (→  46).
- ↳ The new software option is active if it is displayed.
- ↳ If the new software option is not displayed or all software options have been deleted, the code entered was either incorrect or invalid.
- If the code entered is incorrect or invalid, enter the old activation code .
- Have your Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.

*Example for a software option*

Order code for "Application package", option **EA** "Extended HistoROM"

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  46).

*Web browser*

 Once a software option has been activated, the page must be loaded again in the Web browser.

---

## SW option overv.

---

### Navigation

 Expert → System → Administration → SW option overv. (0015)

### Description

Displays all the software options that are enabled in the device.

### User interface

- Extend. HistoROM
- ECC
- HBT Verification
- HBT Monitoring

### Additional information

#### *Description*

Displays all the options that are available if ordered by the customer.

*"Extend. HistoROM" option*

Order code for "Application package", option **EA** "Extended HistoROM"

*"ECC" option*

Order code for "Application package", option **EC** "ECC electrode cleaning"

*"HBT Verification" option and "HBT Monitoring" option*

Order code for "Application package", option **EB** "Heartbeat Verification + Monitoring"

### 3.2 "Sensor" submenu

Navigation

Expert → Sensor

► Sensor	
► Measured val.	→ 47
► System units	→ 57
► Process param.	→ 64
► External comp.	→ 76
► Sensor adjustm.	→ 81
► Calibration	→ 87

#### 3.2.1 "Measured values" submenu

Navigation

Expert → Sensor → Measured val.

► Measured val.	
► Process variab.	→ 47
► Totalizer	→ 50
► Input values	→ 52
► Output values	→ 53

#### "Process variables" submenu

Navigation

Expert → Sensor → Measured val. → Process variab.

► Process variab.	
Volume flow (1838)	→ 48
Mass flow (1847)	→ 48
Correct.vol.flow (1851)	→ 48
Flow velocity (1854)	→ 49
Conductivity (1850)	→ 49

CorrConductivity (1853)	→  49
Temperature (1852)	→  49
Density (1857)	→  50

---

## Volume flow

---

<b>Navigation</b>	Expert → Sensor → Measured val. → Process variab. → Volume flow (1838)
<b>Description</b>	Displays the volume flow that is currently measured.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	

---

## Mass flow

---

<b>Navigation</b>	Expert → Sensor → Measured val. → Process variab. → Mass flow (1847)
<b>Description</b>	Displays the mass flow currently calculated.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i> The unit is taken from the <b>Mass flow unit</b> parameter (→  60)

---

## Correct.vol.flow

---

<b>Navigation</b>	Expert → Sensor → Measured val. → Process variab. → Correct.vol.flow (1851)
<b>Description</b>	Displays the corrected volume flow currently measured.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i> The unit is taken from the <b>Cor.volflow unit</b> parameter (→  62)

---

## Flow velocity

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Flow velocity (1854)
<b>Description</b>	Displays the flow velocity currently calculated.
<b>User interface</b>	Signed floating-point number

---

## Conductivity

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Conductivity (1850)
<b>Description</b>	Displays the conductivity currently measured.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the <b>Conductiv. unit</b> parameter (→  59)

---

## CorrConductivity

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → CorrConductivity (1853)
<b>Prerequisite</b>	One of the following conditions is met: <ul style="list-style-type: none"><li>■ Order code for "Sensor option", option <b>CI</b> "Medium temperature measurement" or</li><li>■ The temperature is read into the flowmeter from an external device.</li></ul>
<b>Description</b>	Displays the conductivity currently corrected.
<b>User interface</b>	Positive floating-point number
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the <b>Conductiv. unit</b> parameter (→  59)

---

## Temperature

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Temperature (1852)
<b>Prerequisite</b>	One of the following conditions is met: <ul style="list-style-type: none"><li>■ Order code for "Sensor option", option <b>CI</b> "Medium temperature measurement" or</li><li>■ The temperature is read into the flowmeter from an external device.</li></ul>

**Description** Displays the temperature currently calculated.

**User interface** Positive floating-point number

**Additional information** *Dependency*

 The unit is taken from the **Temperature unit** parameter (→ [60](#))

## Density

**Navigation**  Expert → Sensor → Measured val. → Process variab. → Density (1857)

**Description** Displays the density currently calculated.


**User interface** Signed floating-point number

**Additional information** *Dependency*

 The unit is taken from the **Density unit** parameter (→ [62](#))

## "Totalizer" submenu

**Navigation**  Expert → Sensor → Measured val. → Totalizer

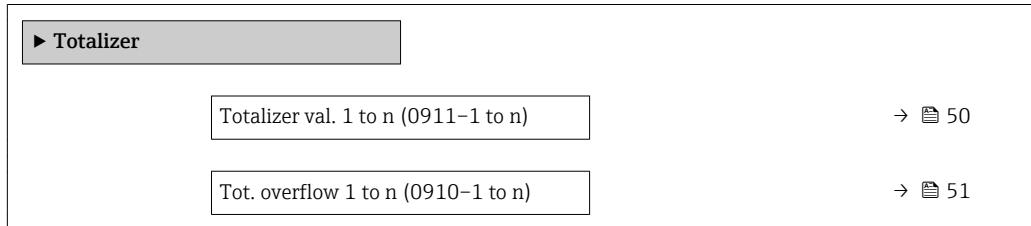

## Totalizer val. 1 to n

**Navigation**  Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to n (0911-1 to n)

**Prerequisite** A process variable is selected in the **Assign variable** parameter (→ [262](#)) of the **Totalizer 1 to n** submenu.

**Description** Displays the current totalizer reading.

**User interface** Signed floating-point number

**Additional information***Description*

As it is only possible to display a maximum of 7 digits in the operating tool, the current counter value is the sum of the totalizer value and the overflow value from the **Tot. overflow 1 to n** parameter if the display range is exceeded.

-  In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter (→ [265](#)).

*User interface*

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Operation mode** parameter (→ [264](#)).

-  The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [263](#)).

*Example*

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer val. 1** parameter: 1 968 457 m<sup>3</sup>
- Value in the **Tot. overflow 1** parameter:  $1 \cdot 10^7$  (1 overflow) = 10 000 000 [m<sup>3</sup>]
- Current totalizer reading: 11 968 457 m<sup>3</sup>

**Tot. overflow 1 to n****Navigation**

 Expert → Sensor → Measured val. → Totalizer → Tot. overflow 1 to n (0910-1 to n)

**Prerequisite**

A process variable is selected in the **Assign variable** parameter (→ [262](#)) of the **Totalizer 1 to n** submenu.

**Description**

Displays the current totalizer overflow.

**User interface**

Integer with sign

**Additional information***Description*

If the current totalizer reading exceeds 7 digits, which is the maximum value range that can be displayed by the operating tool, the value above this range is output as an overflow. The current totalizer value is therefore the sum of the overflow value and the totalizer value from the **Totalizer val. 1 to n** parameter.



*User interface*

-  The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [263](#)).

*Example*

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer val. 1** parameter: 1 968 457 m<sup>3</sup>
- Value in the **Tot. overflow 1** parameter:  $2 \cdot 10^7$  (2 overflows) = 20 000 000 [m<sup>3</sup>]
- Current totalizer reading: 21 968 457 m<sup>3</sup>

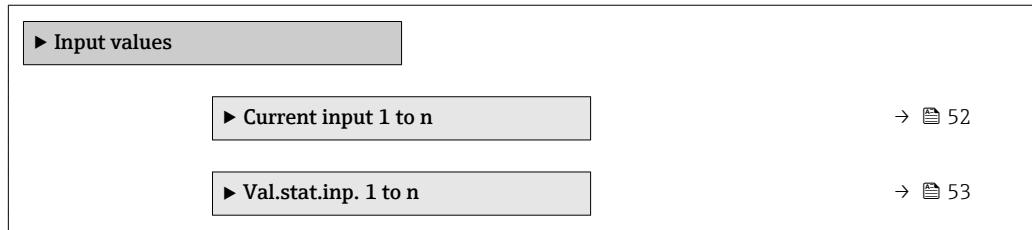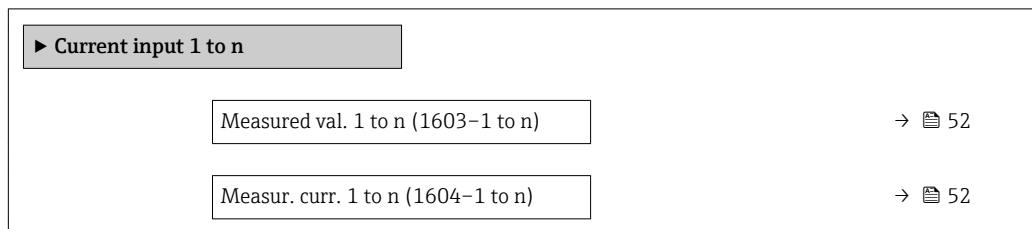**"Input values" submenu****Navigation** Expert → Sensor → Measured val. → Input values**"Current input 1 to n" submenu****Navigation** Expert → Sensor → Measured val. → Input values → Current input 1 to n

---

**Measured val.****Navigation** Expert → Sensor → Measured val. → Input values → Current input 1 to n  
→ Measured val. 1 to n (1603-1 to n)**Description**

Displays the current input value.

**User interface**

Signed floating-point number

---

**Measur. curr.****Navigation** Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measur. curr. 1 to n (1604-1 to n)**Description**


Displays the current value of the current input.

**User interface**

0 to 22.5 mA

*"Value status input 1 to n" submenu**Navigation*

Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n

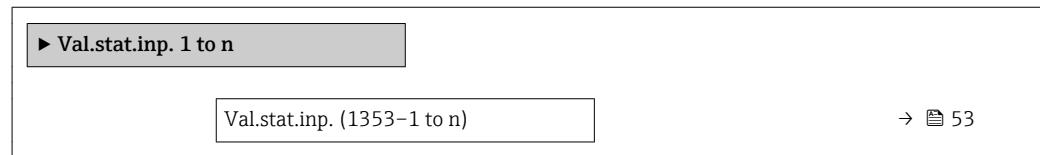**Val.stat.inp.****Navigation**

Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n  
→ Val.stat.inp. (1353-1 to n)

**Description**


Displays the current input signal level.

**User interface**


- High
- Low

*"Output values" submenu**Navigation*

Expert → Sensor → Measured val. → Output values

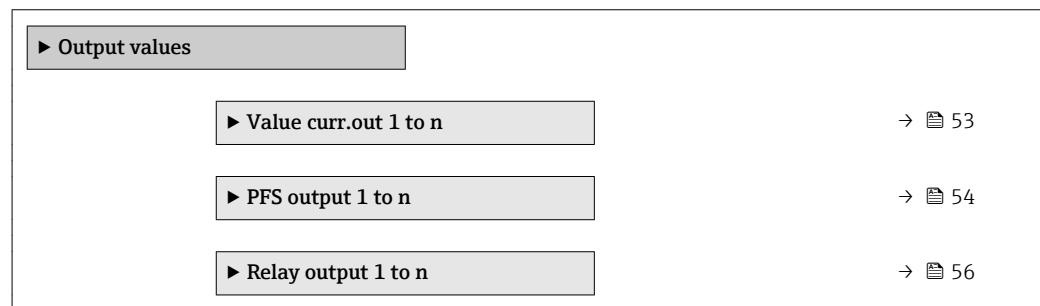*"Value current output 1 to n" submenu**Navigation*

Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n

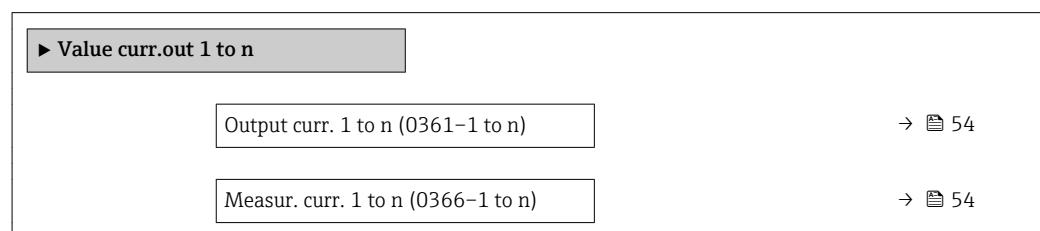

**Output curr.**

---

<b>Navigation</b>	 Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Output curr. 1 to n (0361–1 to n)
<b>Description</b>	Displays the current value currently calculated for the current output.
<b>User interface</b>	0 to 22.5 mA

---

**Measur. curr.**


---

<b>Navigation</b>	 Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Measur. curr. 1 to n (0366–1 to n)
<b>Description</b>	Use this function to display the actual measured value of the output current.
<b>User interface</b>	0 to 30 mA

---

*"Pulse/frequency/switch output 1 to n" submenu*

*Navigation*   Expert → Sensor → Measured val. → Output values → PFS output 1 to n

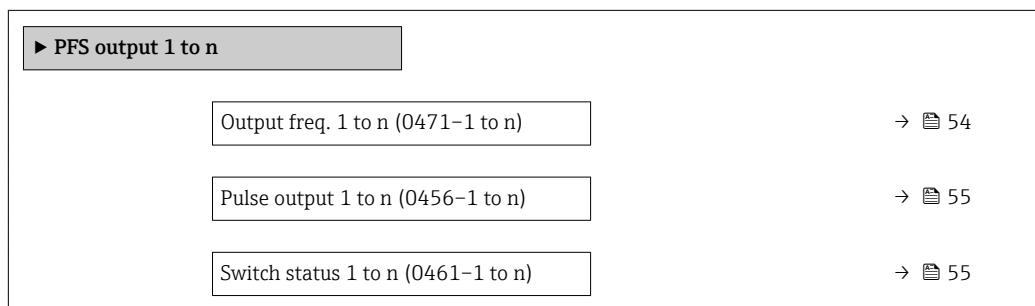

---


**Output freq.**

---

<b>Navigation</b>	 Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Output freq. 1 to n (0471–1 to n)
<b>Prerequisite</b>	In the <b>Operating mode</b> parameter (→ 112), the <b>Frequency</b> option is selected.
<b>Description</b>	Displays the actual value of the output frequency which is currently measured.
<b>User interface</b>	0.0 to 12 500.0 Hz

## Pulse output

<b>Navigation</b>	Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Pulse output 1 to n (0456–1 to n)
<b>Prerequisite</b>	In the <b>Operating mode</b> parameter (→ 112), the <b>Pulse</b> option is selected.
<b>Description</b>	Displays the pulse frequency currently output.
<b>User interface</b>	Positive floating-point number
<b>Additional information</b>	<p><i>Description</i></p> <ul style="list-style-type: none"> <li>■ The pulse output is an open collector output.</li> <li>■ This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.</li> </ul>

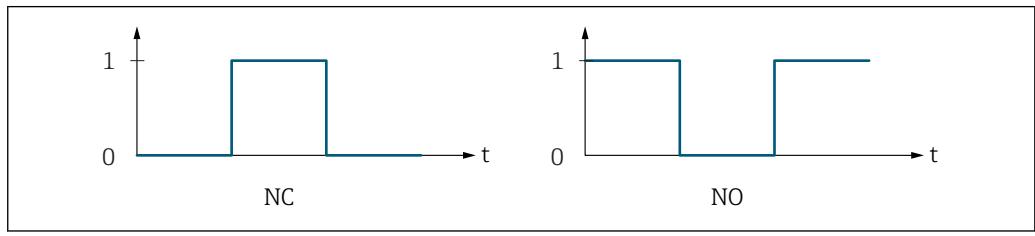

0 Non-conductive  
 1 Conductive  
 NC NC contact (normally closed)  
 NO NO contact (normally open)

The output behavior can be reversed via the **Invert outp.sig.** parameter (→ 130) i.e. the transistor does not conduct for the duration of the pulse.


In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→ 116)) can be configured.

## Switch status

<b>Navigation</b>	Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Switch status 1 to n (0461–1 to n)
<b>Prerequisite</b>	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter (→ 112).
<b>Description</b>	Displays the current switch status of the status output.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Open</li> <li>■ Closed</li> </ul>

**Additional information***User interface*

- Open  
The switch output is not conductive.
- Closed  
The switch output is conductive.

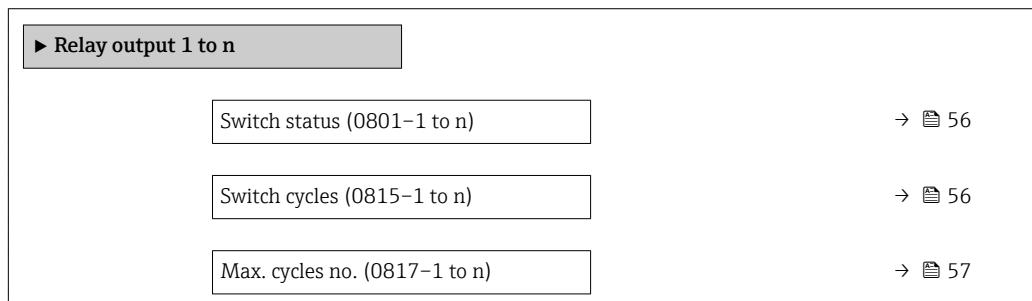*"Relay output 1 to n" submenu**Navigation* Expert → Sensor → Measured val. → Output values → Relay output 1 to n

---

**Switch status****Navigation** Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch status (0801-1 to n)**Description**

Displays the current status of the relay output.

**User interface**

- Open
- Closed

**Additional information***User interface*

- Open  
The relay output is not conductive.
- Closed  
The relay output is conductive.

---

**Switch cycles****Navigation** Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch cycles (0815-1 to n)**Description**

Displays all the switch cycles performed.

**User interface**

Positive integer

**Max. cycles no.**

<b>Navigation</b>	Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Max. cycles no. (0817–1 to n)
<b>Description</b>	Displays the maximum number of guaranteed switch cycles.
<b>User interface</b>	Positive integer

**3.2.2 "System units" submenu***Navigation*

Expert → Sensor → System units

► System units	
Volume flow unit (0553)	→ 57
Volume unit (0563)	→ 59
Conductiv. unit (0582)	→ 59
Temperature unit (0557)	→ 60
Mass flow unit (0554)	→ 60
Mass unit (0574)	→ 61
Density unit (0555)	→ 62
Cor.volflow unit (0558)	→ 62
Corr. vol. unit (0575)	→ 63
Date/time format (2812)	→ 64

**Volume flow unit**

<b>Navigation</b>	Expert → Sensor → System units → Volume flow unit (0553)
<b>Description</b>	Use this function to select the unit for the volume flow.

**Selection**

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ cm <sup>3</sup> /s	■ af/s	■ gal/s (imp)
■ cm <sup>3</sup> /min	■ af/min	■ gal/min (imp)
■ cm <sup>3</sup> /h	■ af/h	■ gal/h (imp)
■ cm <sup>3</sup> /d	■ af/d	■ gal/d (imp)
■ dm <sup>3</sup> /s	■ ft <sup>3</sup> /s	■ Mgal/s (imp)
■ dm <sup>3</sup> /min	■ ft <sup>3</sup> /min	■ Mgal/min (imp)
■ dm <sup>3</sup> /h	■ ft <sup>3</sup> /h	■ Mgal/h (imp)
■ dm <sup>3</sup> /d	■ ft <sup>3</sup> /d	■ Mgal/d (imp)
■ m <sup>3</sup> /s	■ fl oz/s (us)	■ bbl/s (imp;beer)
■ m <sup>3</sup> /min	■ fl oz/min (us)	■ bbl/min (imp;beer)
■ m <sup>3</sup> /h	■ fl oz/h (us)	■ bbl/h (imp;beer)
■ m <sup>3</sup> /d	■ fl oz/d (us)	■ bbl/d (imp;beer)
■ ml/s	■ gal/s (us)	■ bbl/s (imp;oil)
■ ml/min	■ gal/min (us)	■ bbl/min (imp;oil)
■ ml/h	■ gal/h (us)	■ bbl/h (imp;oil)
■ ml/d	■ gal/d (us)	■ bbl/d (imp;oil)
■ l/s	■ kgal/s (us)	
■ l/min	■ kgal/min (us)	
■ l/h	■ kgal/h (us)	
■ l/d	■ kgal/d (us)	
■ hl/s	■ Mgal/s (us)	
■ hl/min	■ Mgal/min (us)	
■ hl/h	■ Mgal/h (us)	
■ hl/d	■ Mgal/d (us)	
■ Ml/s	■ bbl/s (us;liq.)	
■ Ml/min	■ bbl/min (us;liq.)	
■ Ml/h	■ bbl/h (us;liq.)	
■ Ml/d	■ bbl/d (us;liq.)	
	■ bbl/s (us;beer)	
	■ bbl/min (us;beer)	
	■ bbl/h (us;beer)	
	■ bbl/d (us;beer)	
	■ bbl/s (us;oil)	
	■ bbl/min (us;oil)	
	■ bbl/h (us;oil)	
	■ bbl/d (us;oil)	
	■ bbl/s (us;tank)	
	■ bbl/min (us;tank)	
	■ bbl/h (us;tank)	
	■ bbl/d (us;tank)	

**Factory setting**

Country-specific:

- l/h
- gal/min (us)

**Additional information***Result*

The selected unit applies for:

Volume flow parameter (→  48)*Selection*
 For an explanation of the abbreviated units: →  311

**Volume unit****Navigation**

Expert → Sensor → System units → Volume unit (0563)

**Description**

Use this function to select the unit for the volume.

**Selection***SI units*

- cm<sup>3</sup>
- dm<sup>3</sup>
- m<sup>3</sup>
- ml
- l
- hl
- Ml Mega

*US units*

- af
- ft<sup>3</sup>
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

*Imperial units*

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

**Factory setting**

Country-specific:

- m<sup>3</sup>
- gal (us)

**Additional information***Selection*

For an explanation of the abbreviated units: → [311](#)

**Conductiv. unit****Navigation**

Expert → Sensor → System units → Conductiv. unit (0582)

**Prerequisite**

The **On** option is selected in the **Conduct. measur.** parameter (→ [68](#)) parameter.

**Description**

Use this function to select the unit for the conductivity.

**Selection***SI units*

- nS/cm
- µS/cm
- µS/m
- µS/mm
- mS/m
- mS/cm
- S/cm
- S/m
- kS/m
- MS/m

**Factory setting**

µS/cm

**Additional information***Effect*

The selected unit applies for:

- **Conductivity** parameter (→ [49](#))
- **CorrConductivity** parameter (→ [49](#))

*Selection*

 For an explanation of the abbreviated units: → [311](#)

---

**Temperature unit****Navigation**

  Expert → Sensor → System units → Temperature unit (0557)

**Description**

Use this function to select the unit for the temperature.

**Selection***SI units*

- °C
- K

*US units*

- °F
- °R

**Factory setting**

Country-specific:

- °C
- °F

**Additional information***Result*

The selected unit applies for:

- **Temperature** parameter (→ [49](#))
- **Maximum value** parameter (→ [292](#))
- **Minimum value** parameter (→ [292](#))
- **External temp.** parameter (→ [80](#))
- **Maximum value** parameter (→ [293](#))
- **Minimum value** parameter (→ [293](#))

*Selection*

 For an explanation of the abbreviated units: → [311](#)

---

**Mass flow unit****Navigation**

  Expert → Sensor → System units → Mass flow unit (0554)

**Description**

Use this function to select the unit for the mass flow.

Selection	<i>SI units</i>	<i>US units</i>
■ g/s	■ oz/s	
■ g/min	■ oz/min	
■ g/h	■ oz/h	
■ g/d	■ oz/d	
■ kg/s	■ lb/s	
■ kg/min	■ lb/min	
■ kg/h	■ lb/h	
■ kg/d	■ lb/d	
■ t/s	■ STon/s	
■ t/min	■ STon/min	
■ t/h	■ STon/h	
■ t/d	■ STon/d	

Factory setting	Country-specific: ■ kg/h ■ lb/min
-----------------	---

Additional information	<i>Result</i>  The selected unit applies for: <b>Mass flow</b> parameter (→ 48)
------------------------	--

*Selection*

 For an explanation of the abbreviated units: → 311

**Mass unit**

Navigation	 Expert → Sensor → System units → Mass unit (0574)
------------	---

Description	Use this function to select the unit for the mass.
-------------	--

Selection	<i>SI units</i>	<i>US units</i>
■ g	■ oz	
■ kg	■ lb	
■ t	■ STon	

Factory setting	Country-specific: ■ kg ■ lb
-----------------	-----------------------------------

Additional information	<i>Selection</i>   For an explanation of the abbreviated units: → 311
------------------------	--

**Density unit****Navigation**

Expert → Sensor → System units → Density unit (0555)

**Description**

Use this function to select the unit for the density.

**Selection***SI units*

- g/cm<sup>3</sup>
- g/m<sup>3</sup>
- kg/dm<sup>3</sup>
- kg/l
- kg/m<sup>3</sup>
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

*US units*

- lb/ft<sup>3</sup>
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

*Imperial units*

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

**Factory setting**

Country-specific:

- kg/l
- lb/ft<sup>3</sup>

**Additional information***Result*

The selected unit applies for:

- **External density** parameter (→ 77)
- **Fixed density** parameter (→ 77)

*Selection*

- SD = specific density

The specific density is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

For an explanation of the abbreviated units: → 311

**Cor.volflow unit****Navigation**

Expert → Sensor → System units → Cor.volflow unit (0558)

**Description**

Use this function to select the unit for the corrected volume flow.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	■ Nl/s	■ Sft <sup>3</sup> /s	■ Sgal/s (imp)
	■ Nl/min	■ Sft <sup>3</sup> /min	■ Sgal/min (imp)
	■ Nl/h	■ Sft <sup>3</sup> /h	■ Sgal/h (imp)
	■ Nl/d	■ Sft <sup>3</sup> /d	■ Sgal/d (imp)
	■ Nm <sup>3</sup> /s	■ Sgal/s (us)	
	■ Nm <sup>3</sup> /min	■ Sgal/min (us)	
	■ Nm <sup>3</sup> /h	■ Sgal/h (us)	
	■ Nm <sup>3</sup> /d	■ Sgal/d (us)	
	■ Sm <sup>3</sup> /s	■ Sbbl/s (us;liq.)	
	■ Sm <sup>3</sup> /min	■ Sbbl/min (us;liq.)	
	■ Sm <sup>3</sup> /h	■ Sbbl/h (us;liq.)	
	■ Sm <sup>3</sup> /d	■ Sbbl/d (us;liq.)	
Factory setting	Country-specific:		
	■ Nl/h		
	■ Sft <sup>3</sup> /h		
Additional information	<i>Result</i>		
	The selected unit applies for: <b>Correct.vol.flow</b> parameter (→  48)		
	<i>Selection</i>		
	 For an explanation of the abbreviated units: →  311		

**Corr. vol. unit**

**Navigation**  Expert → Sensor → System units → Corr. vol. unit (0575)

**Description** Use this function to select the unit for the corrected volume.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	■ Nl	■ Sft <sup>3</sup>	Sgal (imp)
	■ Nm <sup>3</sup>	■ Sgal (us)	
	■ Sm <sup>3</sup>	■ Sbbl (us;liq.)	

Factory setting	Country-specific:
	■ Nm <sup>3</sup>
	■ Sft <sup>3</sup>

Additional information	<i>Selection</i>
	 For an explanation of the abbreviated units: →  311

**Date/time format****Navigation**

Expert → Sensor → System units → Date/time format (2812)

**Description**

Use this function to select the desired time format for calibration history.

**Selection**

- dd.mm.yy hh:mm
- dd.mm.yy am/pm
- mm/dd/yy hh:mm
- mm/dd/yy am/pm

**Factory setting**

dd.mm.yy hh:mm

**Additional information***Selection*

For an explanation of the abbreviated units: → 311

### 3.2.3 "Process param." submenu

**Navigation**

Expert → Sensor → Process param.

<b>► Process param.</b>	
Filter options (6710)	→  65
Flow damping (6661)	→  66
Flow override (1839)	→  66
Conduct. measur. (6514)	→  68
Conduct. damping (1803)	→  67
Cond. temp.coeff (1891)	→  68
Temp. damping (1886)	→  67
Ref.density (1885)	→  68
<b>► Low flow cut off</b>	→  69
<b>► Empty pipe det.</b>	→  72
<b>► ECC</b>	→  74

**Filter options****Navigation**

Expert → Sensor → Process param. → Filter options (6710)

**Description**

Use this function to select a filter option.

**Selection**

- Adaptive
- Adaptive CIP on
- Dynamic
- Dynamic CIP on
- Binomial
- Binomial CIP on

**Factory setting**

Binomial

**Additional information***Description*

The user can choose from a range of filter combinations which can optimize the measurement result depending on the application. Each change in the filter setting affects the output signal of the measuring device. The response time of the output signal increases as the filter depth increases.

*Selection*

- **Standard**
  - Strong flow damping with a short output signal response time.
  - Some time is needed before a stable output signal can be generated.
  - Not suitable for pulsating flow as the average flow can be different here.
- **Dynamic**
  - Average flow damping with a delayed output signal response time.
  - The average flow is displayed correctly over a measuring interval determined over a long period.
- **Binomial**
  - Weak flow damping with a short output signal response time.
  - The average flow is displayed correctly over a measuring interval determined over a long period.
- **CIP**
  - This filter is also available for the **Standard** and **Dynamic** filter options.
  - If the CIP filter has detected a change in the medium (abrupt increase in the noise level, e.g. quickly changing medium conductivity values during CIP cleaning), flow damping is greatly increased and the raw value (before flow damping) is limited by the mean value (delimiter). This eliminates extremely high measured errors (up to several 100 m/s).
  - If the CIP filter is enabled, the response time of the entire measuring system increases and the output signal is delayed accordingly.

*Examples**Possible applications for the filters*

Application	Standard	Standard CIP	Dynamic	Dynamic CIP	Binomial
Pulsating flow (flow is negative intermittently)	---	---	++	--	++
Flow changes frequently (flow is dynamic)	-	--	++	-	++
Clear signal, quick control loop (< 1 s)	--	--	+ <sup>1)</sup>		++
Poor signal, slow control loop (response time of a few seconds)	++	-	--	----	----

Application	Standard	Standard CIP	Dynamic	Dynamic CIP	Binomial
Permanently bad signal	++	--	-	---	-
Short and severe signal distortion after a while		++		++	
Promag 50/53 replacement: Promag 100 system damping = 0.5 * Promag 50/53					+++
Promag 10 replacement: Promag 100 system damping = Promag 10 + 2			+++		
For a stable flow signal (no other requirements)	+++				

1) Flow damping value < 6

## Flow damping



### Navigation

Expert → Sensor → Process param. → Flow damping (6661)

### Description

Use this function to enter flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

### User entry

0 to 15

### Factory setting

4

### Additional information

*User entry*

- Value = 0: no damping
- Value > 0: damping is increased



- 0 is a weak damping and 15 a strong one.
- A damping of 0 is not recommended, as the measuring signal is then so noisy that it is almost impossible to carry out a measurement.
- The damping depends on the measuring period and the filter type selected.
- An increase or decrease in the damping depends on the application.

### Effect



The damping affects the following variables of the device:

- Outputs
- Low flow cut off → 69
- Totalizers → 262

## Flow override



### Navigation

Expert → Sensor → Process param. → Flow override (1839)

### Description

Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

### Selection

- Off
- On

**Factory setting** Off

**Additional information** *Description*

**Flow override is active**

- The diagnostic message diagnostic message **△C453 Flow override** is displayed.
- Output values
  - Temperature: proceeding output
  - Totalizers 1-3: Stop being totalized



Positive zero return can also be enabled via the Status input: **Assign stat.inp.** parameter (→ 95).

## Conduct. damping

**Navigation** Expert → Sensor → Process param. → Conduct. damping (1803)

**Prerequisite** In the **Conduct. measur.** parameter (→ 68), the **On** option is selected.

**Description** Use this function to enter a time constant for conductivity damping (PT1 element).

**User entry** 0 to 999.9 s

**Factory setting** 0 s

**Additional information** *Description*



The damping is performed by a PT1 element<sup>2)</sup>.

*User entry*

- Value = 0: no damping
- Value > 0: damping is increased



Damping is switched off if **0** is entered (factory setting).

## Temp. damping

**Navigation** Expert → Sensor → Process param. → Temp. damping (1886)

**Prerequisite** One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement"  
or
- The temperature is read into the flowmeter from an external device.

**Description** Use this function to enter the time constant for temperature damping.

**User entry** 0 to 999.9 s

2) Proportional behavior with first-order lag

---

Factory setting	0 s
-----------------	-----

---

## Conduct. measur.



**Navigation**  Expert → Sensor → Process param. → Conduct. measur. (6514)

**Prerequisite** The **On** option is selected in the **Conduct. measur.** parameter (→  68) parameter.

**Description** Use this function to enable and disable conductivity measurement.

- Selection**
- Off
  - On

**Factory setting** Off

**Additional information** *Description*

 For conductivity measurement to work, the medium must have a minimum conductivity of 5 µS/cm.

---

## Cond. temp.coeff



**Navigation**  Expert → Sensor → Process param. → Cond. temp.coeff (1891)

**Prerequisite** One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement" or
- The temperature is read into the flowmeter from an external device.

**Description** Use this function to enter the temperature coefficient for the conductivity.

**User entry** Signed floating-point number

**Factory setting** 2.1 %/K

---

## Ref.density



**Navigation**  Expert → Sensor → Process param. → Ref.density (1885)

**Description** Use this function to enter a fixed value for the reference density.

**User entry** Positive floating-point number

**Factory setting** Country-specific:


- 1 kg/l
- 1 lb/ft<sup>3</sup>

**Additional information***Dependency*

The unit is taken from the **Density unit** parameter (→ 62)

**"Low flow cut off" submenu***Navigation*

Expert → Sensor → Process param. → Low flow cut off

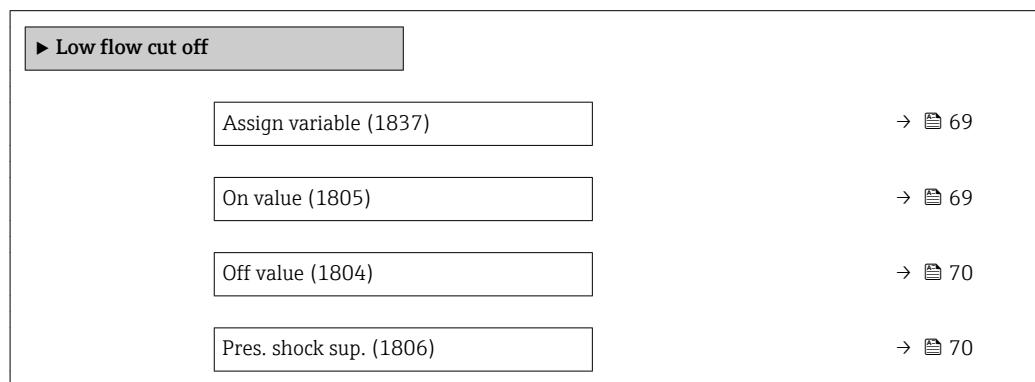**Assign variable****Navigation**

Expert → Sensor → Process param. → Low flow cut off → Assign variable (1837)

**Description**

Use this function to select the process variable for low flow cutoff detection.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

**Factory setting**

Volume flow

**On value****Navigation**

Expert → Sensor → Process param. → Low flow cut off → On value (1805)

**Prerequisite**

One of the following options is selected in the **Assign variable** parameter (→ 69):

- Volume flow
- Mass flow

**Description**

Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 → 70.

**User entry**

Positive floating-point number

**Factory setting** Depends on country and nominal diameter → 306

**Additional information** *Dependency*

The unit depends on the process variable selected in the **Assign variable** parameter (→ 69).

## Off value



**Navigation** Expert → Sensor → Process param. → Low flow cut off → Off value (1804)

**Prerequisite** One of the following options is selected in the **Assign variable** parameter (→ 69):


- Volume flow
- Mass flow
- Correct.vol.flow

**Description** Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → 69.

**User entry** 0 to 100.0 %

**Factory setting** 50 %

**Additional information** *Example*

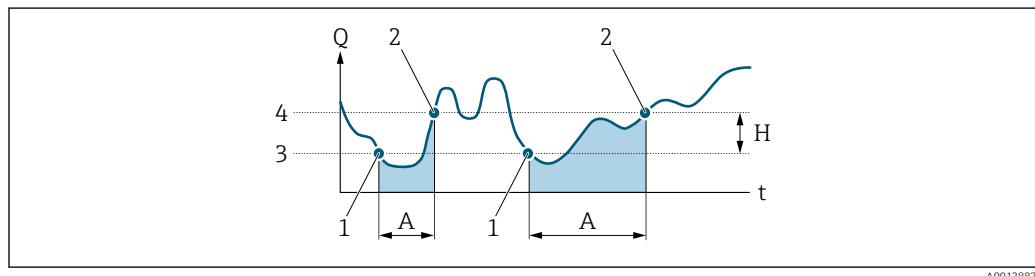

- |   |                                 |
|---|---------------------------------|
| Q | Flow                            |
| t | Time                            |
| H | Hysteresis                      |
| A | Low flow cut off active         |
| 1 | Low flow cut off is activated   |
| 2 | Low flow cut off is deactivated |
| 3 | On value entered                |
| 4 | Off value entered               |

## Pres. shock sup.



**Navigation** Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup. (1806)

**Prerequisite** One of the following options is selected in the **Assign variable** parameter (→ 69):

- Volume flow
- Mass flow
- Correct.vol.flow

**Description** Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

**User entry** 0 to 100 s

**Factory setting** 0 s

**Additional information** *Description*

**Pressure shock suppression is enabled**


- Prerequisite:  
Flow rate < on-value of low flow cut off
- Output values
  - Flow displayed: 0
  - Totalizer: the totalizers are pegged at the last correct value

**Pressure shock suppression is disabled**

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

*Example*

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

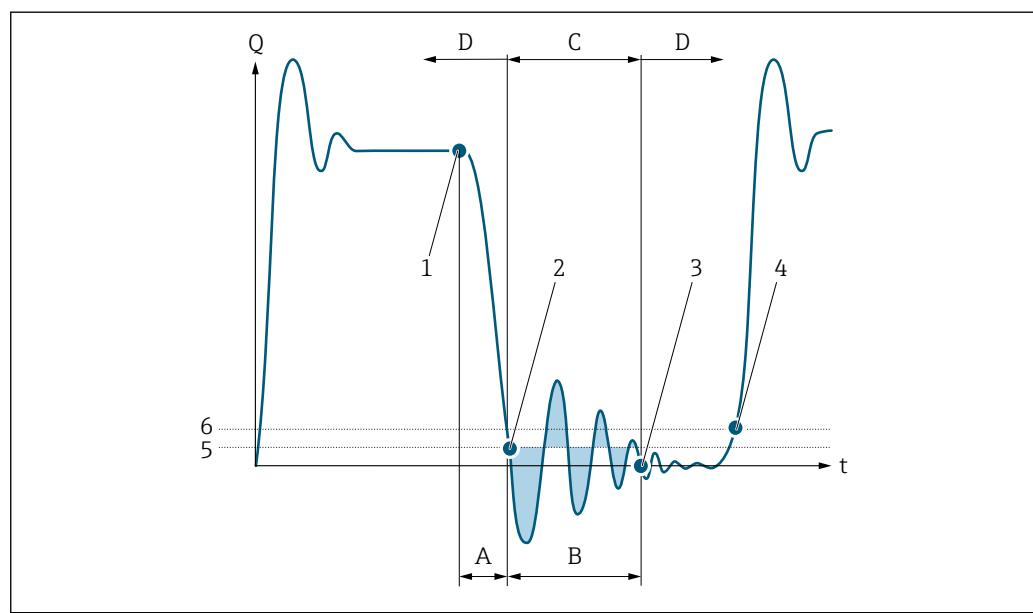

A0012888

- |          |  |
|----------|--|
| <i>Q</i> | Flow   |
| <i>t</i> | Time   |
| A        | Drip   |
| B        | Pressure shock   |
| C        | Pressure shock suppression active as specified by the time entered                             |
| D        | Pressure shock suppression inactive  |
| 1        | Valve closes   |
| 2        | Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated |
| 3        | The time entered has elapsed: pressure shock suppression is deactivated                        |
| 4        | The actual flow value is now displayed and output  |
| 5        | On value for low flow cut off  |
| 6        | Off value for low flow cut off   |

**"Empty pipe det." submenu****Navigation**

Expert → Sensor → Process param. → Empty pipe det.

<b>► Empty pipe det.</b>	
Empty pipe det. (1860)	→ 72
Switch point EPD (6562)	→ 72
Response time (1859)	→ 73
New adjustment (6560)	→ 73
Progress (6571)	→ 73
Empty pipe value (6527)	→ 74
Full pipe value (6548)	→ 74
Meas. value EPD (6559)	→ 74

**Empty pipe det.****Navigation**

Expert → Sensor → Process param. → Empty pipe det. → Empty pipe det. (1860)

**Description**

Use this function to switch empty pipe detection on and off.

**Selection**

- Off
- On

**Factory setting**

Off

**Switch point EPD****Navigation**

Expert → Sensor → Process param. → Empty pipe det. → Switch point EPD (6562)

**Prerequisite**

The **On** option is selected in the **Empty pipe det.** parameter (→ 72).

**Description**

Use this function to enter the percentage threshold value of the resistance in relation to the adjustment values.

**User entry**

0 to 100 %

**Factory setting**

10 %

---

**Response time**

<b>Navigation</b>	Expert → Sensor → Process param. → Empty pipe det. → Response time (1859)
<b>Prerequisite</b>	In the <b>Empty pipe det.</b> parameter (→ 72), the <b>On</b> option is selected.
<b>Description</b>	Use this function to enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message <b>△S862 Empty pipe</b> to be triggered if the measuring pipe is empty or partially full.
<b>User entry</b>	0 to 100 s
<b>Factory setting</b>	1 s

---

**New adjustment**

<b>Navigation</b>	Expert → Sensor → Process param. → Empty pipe det. → New adjustment (6560)
<b>Prerequisite</b>	The <b>On</b> option is selected in the <b>Empty pipe det.</b> parameter (→ 72).
<b>Description</b>	For selecting whether to perform an empty pipe or full pipe adjustment.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Cancel</li><li>■ Empty pipe adj.</li><li>■ Full pipe adjust</li></ul>
<b>Factory setting</b>	Cancel

---

**Progress**

<b>Navigation</b>	Expert → Sensor → Process param. → Empty pipe det. → Progress (6571)
<b>Prerequisite</b>	The <b>On</b> option is selected in the <b>Empty pipe det.</b> parameter (→ 72).
<b>Description</b>	Use this function to view the progress.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Ok</li><li>■ Busy</li><li>■ Not ok</li></ul>

**Empty pipe value****Navigation**

④ ⑤ Expert → Sensor → Process param. → Empty pipe det. → Empty pipe value (6527)

**Prerequisite**

- In the **Empty pipe det.** parameter (→ ④ 72), the **On** option is selected.
- Adjustment value > full pipe value.

**Description**

Displays the adjustment value when the measuring pipe is empty.

**User interface**

Positive floating-point number

---

**Full pipe value****Navigation**

④ ⑤ Expert → Sensor → Process param. → Empty pipe det. → Full pipe value (6548)

**Prerequisite**

- In the **Empty pipe det.** parameter (→ ④ 72), the **On** option is selected.
- Adjustment value < empty pipe value.

**Description**

Displays the adjustment value when the measuring pipe is full.

**User interface**

Positive floating-point number

---

**Meas. value EPD****Navigation**

④ ⑤ Expert → Sensor → Process param. → Empty pipe det. → Meas. value EPD (6559)

**Prerequisite**

In the **Empty pipe det.** parameter (→ ④ 72), the **On** option is selected.

**Description**

Displays the current measured value.

**User interface**

Positive floating-point number

---

**"ECC" submenu****Navigation**

④ ⑤ Expert → Sensor → Process param. → ECC

▶ ECC	
ECC (6528)	→ ④ 75
ECC duration (6555)	→ ④ 75
ECC recov. time (6556)	→ ④ 75

ECC clean. cycle (6557)	→  76
ECC Polarity (6631)	→  76

**ECC**

**Navigation** Expert → Sensor → Process param. → ECC → ECC (6528)

**Prerequisite** For the following order code:  
"Application package", option **EC** "ECC electrode cleaning"

**Description** Use this function to enable and disable cyclic electrode cleaning.

**Selection**

- Off
- On

**Factory setting** Off

**ECC duration**

**Navigation** Expert → Sensor → Process param. → ECC → ECC duration (6555)

**Prerequisite** For the following order code:  
"Application package", option **EC** "ECC electrode cleaning"

**Description** Use this function to enter the duration of electrode cleaning in seconds.

**User entry** 0.01 to 30 s

**Factory setting** 2 s

**ECC recov. time**

**Navigation** Expert → Sensor → Process param. → ECC → ECC recov. time (6556)

**Prerequisite** For the following order code:  
"Application package", option **EC** "ECC electrode cleaning"

**Description** Use this function to enter the recovery time after electrode cleaning to prevent signal output interference. The current output values are frozen in the meanwhile.

**User entry** 1 to 600 s

**Factory setting** 60 s

**ECC clean. cycle****Navigation**

Expert → Sensor → Process param. → ECC → ECC clean. cycle (6557)

**Prerequisite**

For the following order code:  
"Application package", option **EC** "ECC electrode cleaning"

**Description**

Use this function to enter the pause duration until the next electrode cleaning.

**User entry**

0.5 to 168 h

**Factory setting**

0.5 h

**ECC Polarity****Navigation**

Expert → Sensor → Process param. → ECC → ECC Polarity (6631)

**Prerequisite**

For the following order code:  
"Application package", option **EC** "ECC electrode cleaning"

**Description**

Displays the polarity of the electrode cleaning circuit.

**User interface**

- Positive
- Negative

**Factory setting**

Depends on the electrode material:

- Platinum: **Negative** option
- Tantalum, Alloy C22, stainless steel: **Positive** option

### 3.2.4 "External compensation" submenu

**Navigation**

Expert → Sensor → External comp.

► External comp.	
Density source (6615)	→  77
Fixed density (6623)	→  77
External density (6630)	→  77
Linear exp coeff (1817)	→  78
Square exp coeff (1818)	→  78

Ref. density (1892)	→  78
Temp. source (6712)	→  80
External temp. (6673)	→  80
Ref. temperature (1816)	→  80

**Density source**

**Navigation** Expert → Sensor → External comp. → Density source (6615)

**Description** Use this function to select the density source.

- Selection**
- Fixed density
  - External density\*
  - Current input 1\*
  - Calculated value

**Factory setting** Fixed density

**Fixed density**

**Navigation** Expert → Sensor → External comp. → Fixed density (6623)

**Description** Use this function to enter a fixed value for the density.

**User entry** Positive floating-point number

- Factory setting** Country-specific:
- 1 000 kg/l
  - 1 000 lb/ft<sup>3</sup>

**Additional information** *Dependency*

The unit is taken from the **Density unit** parameter (→ 62)

**External density**

**Navigation** Expert → Sensor → External comp. → External density (6630)

**User entry** Positive floating-point number

\* Visibility depends on order options or device settings

**Factory setting** 0 kg/l

**Additional information** *Dependency*

 The unit is taken from the **Density unit** parameter (→ 62)

---

## Linear exp coeff



**Navigation**  Expert → Sensor → External comp. → Linear exp coeff (1817)

**Prerequisite** The **Calculated value** option is selected in the **Density source** parameter (→ 77) parameter.

**Description** Use this function to enter a linear, fluid-specific expansion coefficient for calculating the reference density.

**User interface** Signed floating-point number

**Factory setting**  $-2.0295 \cdot 10^{-4}$

---

## Square exp coeff



**Navigation**  Expert → Sensor → External comp. → Square exp coeff (1818)

**Prerequisite** The **Calculated value** option is selected in the **Density source** parameter (→ 77) parameter.

**Description** For fluid with a non-linear expansion pattern: use this function to enter a quadratic, fluid-specific expansion coefficient for calculating the reference density.

**User interface** Signed floating-point number

**Factory setting**  $-3.8436 \cdot 10^{-6}$

---

## Ref. density



**Navigation**  Expert → Sensor → External comp. → Ref. density (1892)

**Prerequisite** The **Calculated value** option is selected in the **Density source** parameter (→ 77) parameter.

**Description** Displays the reference density.

**User interface** Positive floating-point number

**Additional information***Description*

The reference density is required for density calculation.

*Deviation of the process temperature from the reference temperature:*

$$\Delta T = T - T_{\text{ref}}$$

$\Delta T$ : Deviation

$T$ : Process temperature

$T_{\text{ref}}$ : Ref. temperature ( $\rightarrow$  80)

*Temperature-compensated density:*

$$\rho_{\text{comp}} = \rho_{\text{ref}}(1 + \alpha\Delta T + \beta\Delta T^2)$$

$\rho_{\text{comp}}$ : Calculated density

$\rho_{\text{ref}}$ : Reference density

$\Delta T$ : Deviation of the process temperature from the reference temperature

$\alpha$ : Linear exp coeff ( $\rightarrow$  78)


$\beta$ : Square exp coeff ( $\rightarrow$  78)

*Example for water (factory setting)*

For a reference temperature of  $T_{\text{ref}} = 20^\circ\text{C}$

A quadratic fit of a number of density values results in the following coefficients:

- $\alpha = -2.0295 \cdot 10^{-4} \text{ 1/K}$
- $\beta = -3.8436 \cdot 10^{-6} \text{ 1/K}^2$
- $\rho_{\text{ref}} = 997.82 \text{ kg/m}^3$

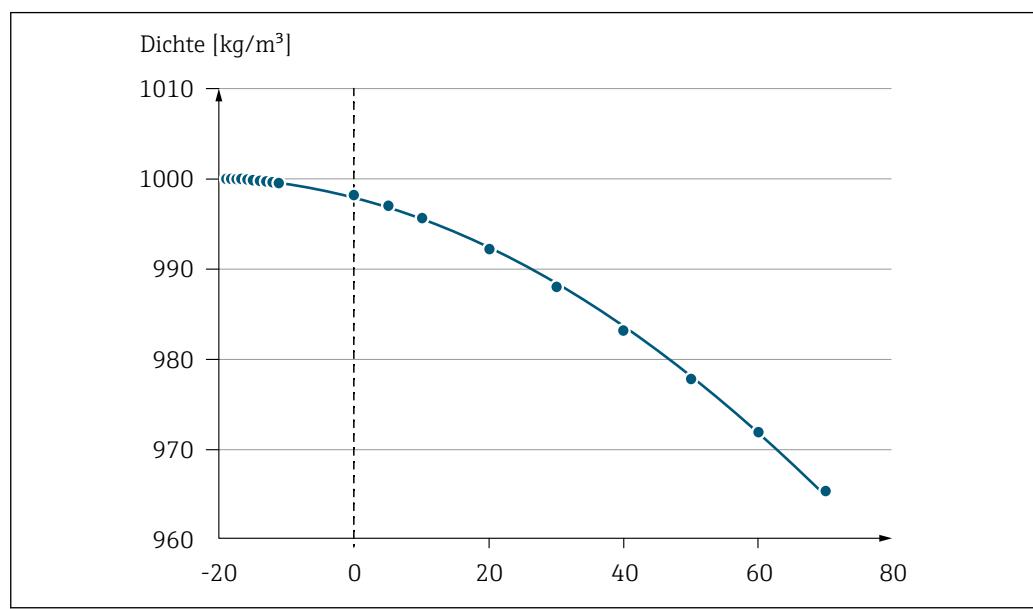

80 Quadratic fit

*Dependency*

The unit is taken from the **Density unit** parameter ( $\rightarrow$  62)

**Temp. source**

**Navigation** Expert → Sensor → External comp. → Temp. source (6712)

**Description** Use this function to select the temperature source.

**Selection**

- Int.temp. sensor
- Off
- External value
- Current input 1 \*

**Factory setting** Off

---

**External temp.**

**Navigation** Expert → Sensor → External comp. → External temp. (6673)

**User entry** Floating point number with sign

**Factory setting** -273.15 °C

**Additional information** *Dependency*

The unit is taken from the **Temperature unit** parameter (→ 60)

---

**Ref. temperature**

**Navigation** Expert → Sensor → External comp. → Ref. temperature (1816)

**Prerequisite** The **Calculated value** option is selected in the **Density source** parameter (→ 77) parameter.

**Description** Use this function to enter a reference temperature for calculating the reference density.

**User interface** -273.15 to 99 999 °C

**Factory setting** Country-specific:  
▪ +20 °C  
▪ +68 °F

---

\* Visibility depends on order options or device settings

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ 60)

*Reference density calculation*

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

- $\rho_N$ : reference density
- $\rho$ : fluid density currently measured
- $t$ : fluid temperature currently measured
- $t_N$ : reference temperature at which the reference density is calculated (e.g. 20 °C)
- $\Delta t$ :  $t - t_N$
- $\alpha$ : linear expansion coefficient of the fluid, unit = [1/K]; K = Kelvin
- $\beta$ : square expansion coefficient of the fluid, unit = [1/K<sup>2</sup>]

### 3.2.5 "Sensor adjustment" submenu

*Navigation*

Expert → Sensor → Sensor adjustm.

<b>► Sensor adjustm.</b>	
Install. direct. (1809)	→ 81
Integration time (6533)	→ 82
Measuring period (6536)	→ 82
<b>► Variable adjust</b>	→ 82

---

**Install. direct.**
*Navigation*

Expert → Sensor → Sensor adjustm. → Install. direct. (1809)

*Description*

Use this function to change the sign of the medium flow direction.

*Selection*

- In arrow direct.
- Against arrow

*Factory setting*

In arrow direct.

*Additional information**Description*

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

**Integration time****Navigation**

Expert → Sensor → Sensor adjustm. → Integration time (6533)

**Description**

Display the duration of an integration cycle.

**User interface**

1 to 65 ms

**Measuring period****Navigation**

Expert → Sensor → Sensor adjustm. → Measuring period (6536)

**Description**

Display the time of a full measuring period.

**User interface**

0 to 1 000 ms

**"Variable adjust" submenu***Navigation*

Expert → Sensor → Sensor adjustm. → Variable adjust

▶ Variable adjust	
Vol. flow offset (1831)	→  83
Vol. flow factor (1832)	→  83
Mass flow offset (1841)	→  83
Mass flow factor (1846)	→  84
Conduct. offset (1848)	→  84
Conduct. factor (1849)	→  84
Corr. vol offset (1866)	→  85
Corr. vol factor (1867)	→  85
Temp. offset (1868)	→  85
Temp. factor (1869)	→  86

Flow vel. offset (1879)	→  86
Flow vel. factor (1880)	→  86

**Vol. flow offset**

**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset (1831)

**Description** Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m<sup>3</sup>/s.

**User entry** Signed floating-point number

**Factory setting** 0 m<sup>3</sup>/s

**Additional information** *Description*

Corrected value = (factor × value) + offset

**Vol. flow factor**

**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor (1832)

**User entry** Positive floating-point number

**Factory setting** 1

**Additional information** *Description*

Corrected value = (factor × value) + offset

**Mass flow offset**

**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset (1841)

**Description** Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

**User entry** Signed floating-point number

**Factory setting** 0 kg/s

**Additional information** *Description*

Corrected value = (factor × value) + offset

**Mass flow factor**

<b>Navigation</b>	Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor (1846)
<b>Description</b>	Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.
<b>User entry</b>	Positive floating-point number
<b>Factory setting</b>	1
<b>Additional information</b>	<i>Description</i> Corrected value = (factor × value) + offset

**Conduct. offset**

<b>Navigation</b>	Expert → Sensor → Sensor adjustm. → Variable adjust → Conduct. offset (1848)
<b>Prerequisite</b>	The <b>On</b> option is selected in the <b>Conduct. measur.</b> parameter (→  68) parameter.
<b>Description</b>	Use this function to enter the zero point shift for the conductivity trim. The conductivity unit on which the shift is based is S/m.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 S/m
<b>Additional information</b>	<i>Description</i> Corrected value = (factor × value) + offset

**Conduct. factor**

<b>Navigation</b>	Expert → Sensor → Sensor adjustm. → Variable adjust → Conduct. factor (1849)
<b>Prerequisite</b>	The <b>On</b> option is selected in the <b>Conduct. measur.</b> parameter (→  68) parameter.
<b>Description</b>	Use this function to enter a quantity factor for the conductivity. This multiplication factor is applied over the conductivity range.
<b>User entry</b>	Positive floating-point number
<b>Factory setting</b>	1
<b>Additional information</b>	<i>Description</i> Corrected value = (factor × value) + offset

---

**Corr. vol offset**

**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset (1866)

**Description** Use this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm<sup>3</sup>/s.

**User entry** Signed floating-point number

**Factory setting** 0 Nm<sup>3</sup>/s

**Additional information** *Description*



Corrected value = (factor × value) + offset

---

**Corr. vol factor**

**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor (1867)

**Description** Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.

**User entry** Positive floating-point number

**Factory setting** 1

**Additional information** *Description*



Corrected value = (factor × value) + offset

---

**Temp. offset**

**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset (1868)

**Prerequisite**

One of the following conditions is met:

- Order code for "Sensor option", option CI "Medium temperature measurement"  
or
- The temperature is read into the flowmeter from an external device.

**Description** Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is 1 K.

**User entry** Signed floating-point number

**Factory setting** 0 K

**Additional information***Description*

Corrected value = (factor × value) + offset

**Temp. factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor (1869)

**Prerequisite**

One of the following conditions is met:

- Order code for "Sensor option", option CI "Medium temperature measurement"  
or
- The temperature is read into the flowmeter from an external device.

**Description**

Use this function to enter a quantity factor (without time) for the temperature. This multiplication factor is applied over the temperature range.

**User entry**

Positive floating-point number

**Factory setting**

1

**Additional information***Description*

Corrected value = (factor × value) + offset

**Flow vel. offset****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Flow vel. offset (1879)

**Description**

Use this function to enter the zero point shift for the flow velocity trim. The unit of flow velocity on which the shift is based is m/s.

**User entry**

Signed floating-point number

**Factory setting**

0 m/s

**Additional information***Description*

Corrected value = (factor × value) + offset

**Flow vel. factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Flow vel. factor (1880)

**Description**


Use this function to enter a quantity factor (without time) for the flow velocity. This multiplication factor is applied over the flow velocity range.

<b>User entry</b>	Positive floating-point number
<b>Factory setting</b>	1
<b>Additional information</b>	<i>Description</i>
	 Corrected value = (factor × value) + offset

### 3.2.6 "Calibration" submenu

*Navigation*

 Expert → Sensor → Calibration

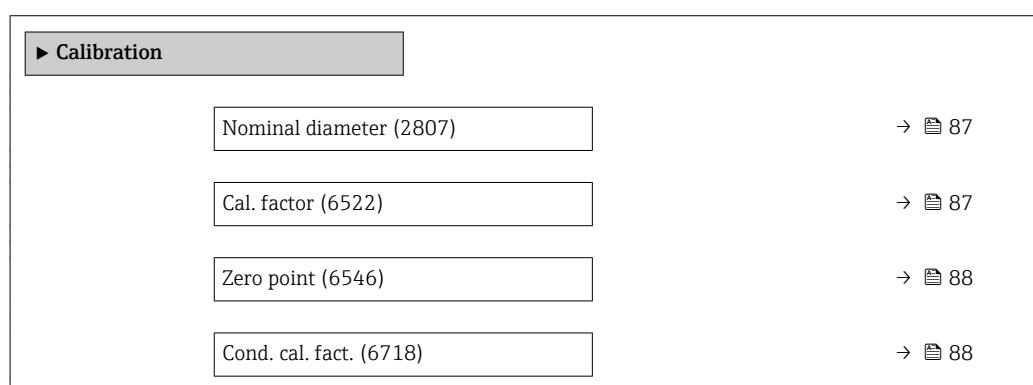


---

#### Nominal diameter

---

**Navigation**  Expert → Sensor → Calibration → Nominal diameter (2807)

**Description** Displays the nominal diameter of the sensor.

**User interface** DNxx / x"

**Factory setting** Depends on the size of the sensor


**Additional information** *Description*

 The value is also specified on the sensor nameplate.

---

#### Cal. factor

---

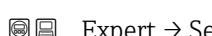**Navigation**  Expert → Sensor → Calibration → Cal. factor (6522)

**Description** Displays the current calibration factor for the sensor.

**User interface** Positive floating-point number

**Factory setting** Depends on nominal diameter and calibration.

---

## Zero point

---



**Navigation** Expert → Sensor → Calibration → Zero point (6546)

**Description** This function shows the zero point correction value for the sensor.

**User interface** Signed floating-point number

**Factory setting** Depends on nominal diameter and calibration

---

## Cond. cal. fact.

---



**Navigation** Expert → Sensor → Calibration → Cond. cal. fact. (6718)

**Prerequisite** The **On** option is selected in the **Conduct. measur.** parameter (→ 68) parameter.

**Description** Displays the calibration factor for the conductivity measurement.

**User interface** 0 to 10 000

## 3.3 "I/O configuration" submenu

*Navigation* Expert → I/O config.

I/O config.	
I/O 1 to n terminals (3902–1 to n)	→  89
I/O 1 to n info (3906–1 to n)	→  89
I/O 1 to n type (3901–1 to n)	→  89
Apply I/O config (3907)	→  90
Conversion code (2762)	→  90

---

**I/O terminals**

---

**Navigation**  Expert → I/O config. → I/O 1 to n terminals (3902–1 to n)

**Description** Displays the terminal numbers used by the I/O module.

**User interface**

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)

---

**I/O info**

---

**Navigation**  Expert → I/O config. → I/O 1 to n info (3906–1 to n)

**Description** Displays information about the plugged in I/O module.

**User interface**

- Not plugged
- Invalid
- Not configurable
- Configurable
- Fieldbus

**Additional information** *"Not plugged" option*

The I/O module is not plugged in.

*"Invalid" option*

The I/O module is not plugged correctly.

*"Not configurable" option*

The I/O module is not configurable.

*"Configurable" option*

The I/O module is configurable.

*"Fieldbus" option*

The I/O module is configured for the fieldbus.

---

**I/O type**

---



**Navigation**  Expert → I/O config. → I/O 1 to n type (3901–1 to n)

**Prerequisite** For the following order code:  
"Output; input 2", option **D** "Configurable I/O initial setting off"

**Description** Use this function to select the I/O module type for the configuration of the I/O module.

**Selection**

- Off
- Curr.output<sup>\*</sup>
- Current input<sup>\*</sup>
- Status input<sup>\*</sup>
- PFS output<sup>\*</sup>

**Factory setting**

Off

---

**Apply I/O config****Navigation**

Expert → I/O config. → Apply I/O config (3907)

**Description**

Use this function to activate the newly configured I/O module type.

**Selection**

- No
- Yes

**Factory setting**

No

---

**Conversion code****Navigation**

Expert → I/O config. → Conversion code (2762)

**Description**

Use this function to enter the ordered activation code to activate the I/O configuration change.

**User entry**

Positive integer

**Factory setting**

0

**Additional information***Description*The I/O configuration is changed in the **I/O type** parameter (→ 89).


---

\* Visibility depends on order options or device settings

## 3.4 "Input" submenu

*Navigation*


Expert → Input

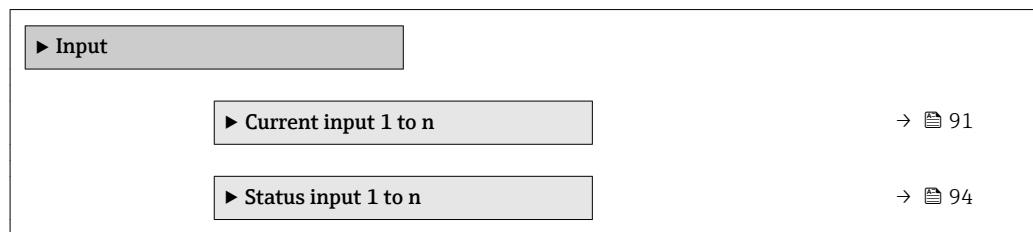

### 3.4.1 "Current input 1 to n" submenu

*Navigation*

Expert → Input → Current input 1 to n

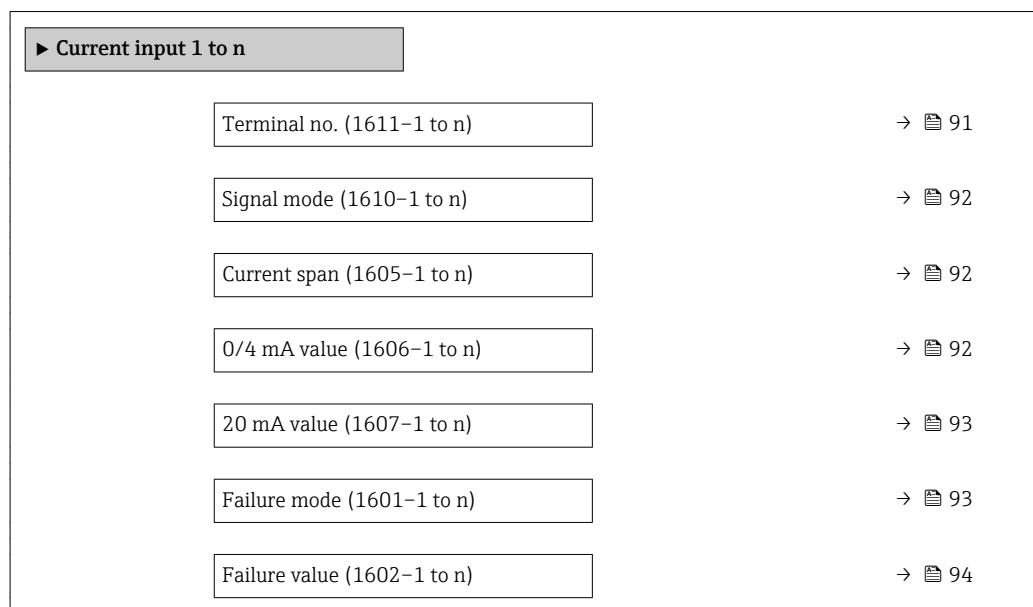


---

#### Terminal no.

---

**Navigation**

Expert → Input → Current input 1 to n → Terminal no. (1611-1 to n)

**Description**

Displays the terminal numbers used by the current input module.

**User interface**

- Not used
- 24-25 (I/O 2)

**Additional information**

"Not used" option

The current input module does not use any terminal numbers.

**Signal mode****Navigation**

Expert → Input → Current input 1 to n → Signal mode (1610–1 to n)

**Prerequisite**

The measuring device is **not** approved for use in the hazardous area with type of protection Ex-i.

**Description**

Use this function to select the signal mode for the current input.

**Selection**

- Passive
- Active

**Factory setting**

Passive

**Current span****Navigation**

Expert → Input → Current input 1 to n → Current span (1605–1 to n)

**Description**

Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

**Selection**

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- 0...20 mA

**Factory setting**

Country-specific:

- 4...20 mA NAMUR
- 4...20 mA US

**Additional information**

*Examples*

Sample values for the current range: **Current span** parameter (→ 98)

**0/4 mA value****Navigation**

Expert → Input → Current input 1 to n → 0/4 mA value (1606–1 to n)

**Description**

Use this function to enter a value for the 4 mA current.

**User entry**

Signed floating-point number

**Factory setting**

0

**Additional information***Current input behavior*

The current input behaves differently depending on the settings configured in the following parameters:

- Current span (→ [92](#))
- Failure mode (→ [93](#))

*Configuration examples*

 Pay attention to the configuration examples for **4 mA value** parameter (→ [99](#)).

---

**20 mA value****Navigation**

 Expert → Input → Current input 1 to n → 20 mA value (1607–1 to n)

**Description**

Use this function to enter a value for the 20 mA current.

**User entry**

Signed floating-point number

**Factory setting**

Depends on country and nominal diameter

**Additional information***Configuration examples*

 Pay attention to the configuration examples for **4 mA value** parameter (→ [99](#)).

---

**Failure mode****Navigation**

 Expert → Input → Current input 1 to n → Failure mode (1601–1 to n)

**Description**

Use this function to select the input behavior when measuring a current outside the configured **Current span** parameter (→ [92](#)).

**Selection**

- Alarm
- Last valid value
- Defined value

**Factory setting**

Alarm

**Additional information***Options*


- Alarm  
An error message is set.
- Last valid value  
The last valid measured value is used.
- Defined value  
A user-defined measured value is used (**Failure value** parameter (→ [94](#))).

**Failure value**

<b>Navigation</b>	Expert → Input → Current input 1 to n → Failure value (1602–1 to n)
<b>Prerequisite</b>	In the <b>Failure mode</b> parameter (→ <a href="#">93</a> ), the <b>Defined value</b> option is selected.
<b>Description</b>	Use this function to enter the value that the device uses if it does not receive an input signal from the external device, or if the input signal is invalid.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0

### 3.4.2 "Status input 1 to n" submenu

*Navigation* Expert → Input → Status input 1 to n

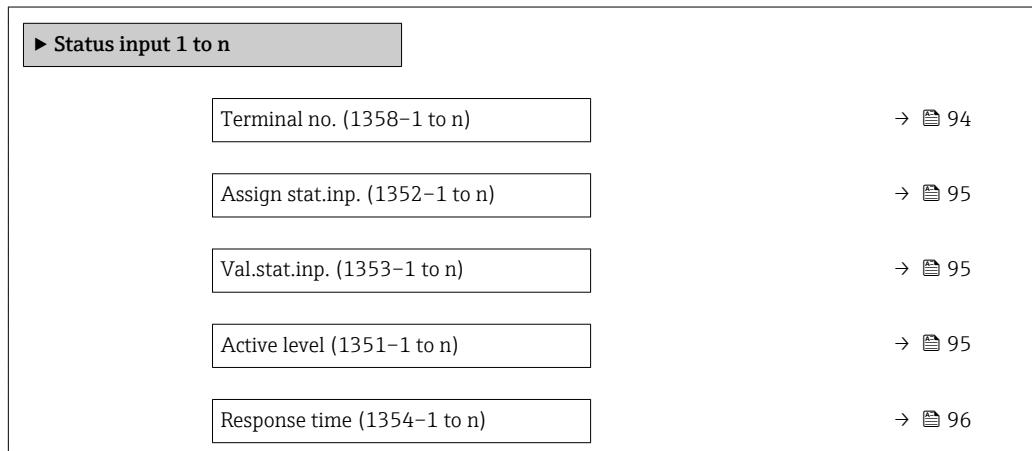

---

**Terminal no.**

---

<b>Navigation</b>	Expert → Input → Status input 1 to n → Terminal no. (1358–1 to n)
<b>Description</b>	Displays the terminal numbers used by the status input module.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Not used</li><li>■ 24-25 (I/O 2)</li></ul>
<b>Additional information</b>	<i>"Not used" option</i> The status input module does not use any terminal numbers.

**Assign stat.inp.**

**Navigation** Expert → Input → Status input 1 to n → Assign stat.inp. (1352–1 to n)

**Description** Use this function to select the function for the status input.

**Selection**

- Off
- Reset totaliz. 1
- Reset totaliz. 2
- Reset totaliz. 3
- Reset all tot.
- Flow override

**Factory setting** Off

**Additional information** *Selection*

- Off  
The status input is switched off.
- Reset totaliz. 1...3  
The individual totalizers are reset.
- Reset all tot.  
All totalizers are reset.
- Flow override  
The Flow override (→ 66) is activated.



Note on the Flow override (→ 66):

- The Flow override (→ 66) is enabled as long as the level is at the status input (continuous signal).
- All other assignments react to a change in level (pulse) at the status input.

**Val.stat.inp.**

**Navigation** Expert → Input → Status input 1 to n → Val.stat.inp. (1353–1 to n)

**Description** Displays the current input signal level.

**User interface**

- High
- Low

**Active level**

**Navigation** Expert → Input → Status input 1 to n → Active level (1351–1 to n)

**Description** Use this function to determine the input signal level at which the assigned function is activated.

**Selection**

- High
- Low

**Factory setting** High

**Response time**



**Navigation** Expert → Input → Status input 1 to n → Response time (1354-1 to n)


**Description** Use this function to enter the minimum time period for which the input signal level must be present before the selected function is activated.

**User entry** 5 to 200 ms

**Factory setting** 50 ms


### 3.5 "Output" submenu

**Navigation** Expert → Output

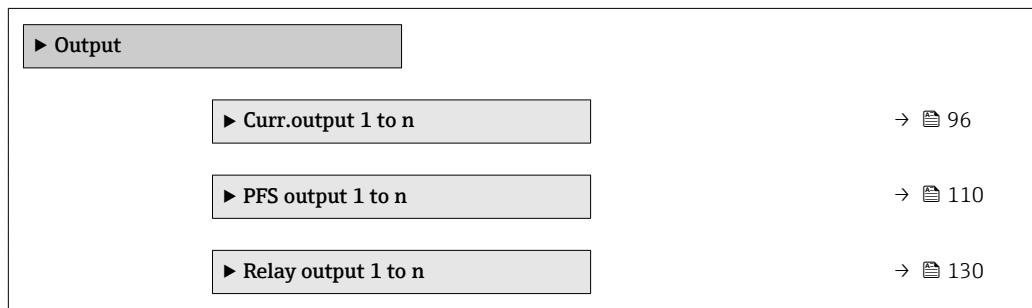

#### 3.5.1 "Current output 1 to n" submenu

**Navigation** Expert → Output → Curr.output 1 to n

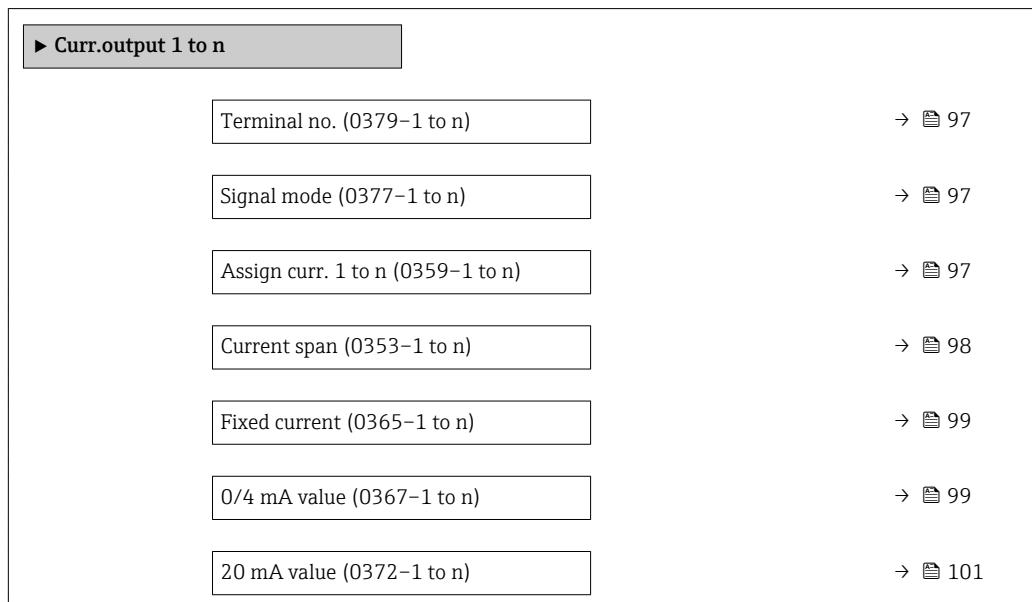

Measuring mode (0351-1 to n)	→  102
Damping out. 1 to n (0363-1 to n)	→  106
Response time (0378-1 to n)	→  107
Failure mode (0364-1 to n)	→  108
Failure current (0352-1 to n)	→  109
Output curr. 1 to n (0361-1 to n)	→  109
Measur. curr. 1 to n (0366-1 to n)	→  110

---

**Terminal no.**

---

<b>Navigation</b>	Expert → Output → Curr.output 1 to n → Terminal no. (0379-1 to n)
<b>Description</b>	Displays the terminal numbers used by the current output module.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Not used</li> <li>■ 24-25 (I/O 2)</li> </ul>
<b>Additional information</b>	<p><i>"Not used" option</i></p> <p>The current output module does not use any terminal numbers.</p>

---

**Signal mode**

---



<b>Navigation</b>	Expert → Output → Curr.output 1 to n → Signal mode (0377-1 to n)
<b>Description</b>	Use this function to select the signal mode for the current output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Passive</li> <li>■ Active</li> </ul>
<b>Factory setting</b>	Passive

---

**Assign curr.**

---



<b>Navigation</b>	Expert → Output → Curr.output 1 to n → Assign curr. 1 to n (0359-1 to n)
<b>Description</b>	Use this function to select a process variable for the current output.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity<sup>\*</sup>
- CorrConductivity<sup>\*</sup>
- Temperature<sup>\*</sup>
- Electronic temp.

**Factory setting**

Volume flow

**Current span****Navigation**

Expert → Output → Curr.output 1 to n → Current span (0353-1 to n)

**Description**

Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

**Selection**

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA
- Fixed current

**Factory setting**

Country-specific:

- 4...20 mA NAMUR
- 4...20 mA US

**Additional information***Description*

- In the event of a device alarm, the current output adopts the value specified in the **Failure mode** parameter (→ 108).
- If the measured value is outside the measuring range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.
- The measuring range is specified via the **0/4 mA value** parameter (→ 99) and **20 mA value** parameter (→ 101).


*"Fixed current" option*

The current value is set via the **Fixed current** parameter (→ 99).

*Example*

Shows the relationship between the current span for the output of the process variable and the lower and upper alarm levels:

\* Visibility depends on order options or device settings

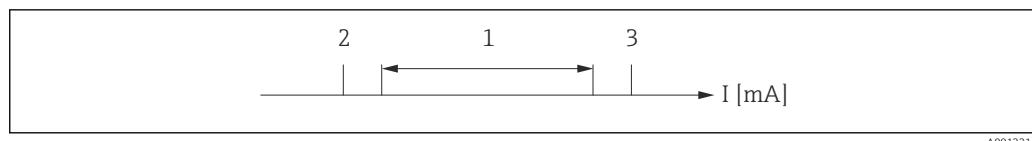

- I Current*  
 1 Current span for process value  
 2 Lower level for signal on alarm  
 3 Upper level for signal on alarm

### Selection

Selection	1	2	3
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US	3.9 to 20.8 mA US	< 3.6 mA	> 21.95 mA
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
0...20 mA	0 to 20.5 mA	< 0 mA	> 21.95 mA

**i** If the flow exceeds or falls below the upper or lower signal on alarm level, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

## Fixed current



**Navigation** Expert → Output → Curr.output 1 to n → Fixed current (0365-1 to n)

**Prerequisite** In the **Current span** parameter (→ 98), the **Fixed current** option is selected.

**Description** Use this function to enter a constant current value for the current output.

**User entry** 0 to 22.5 mA

**Factory setting** 22.5 mA

## 0/4 mA value



**Navigation** Expert → Output → Curr.output 1 to n → 0/4 mA value (0367-1 to n)

**Prerequisite** One of the following options is selected in the **Current span** parameter (→ 98):  

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

**Description** Use this function to enter a value for the 0/4 mA current.

**User entry** Signed floating-point number

**Factory setting**

Country-specific:

- 0 l/h
- 0 gal/min (us)

**Additional information***Description*

Positive and negative values are permitted depending on the process variable assigned in the **Assign curr.** parameter (→ 97). In addition, the value can be greater than or smaller than the value assigned for the 20 mA current in the **20 mA value** parameter (→ 101).

*Dependency*

**i** The unit depends on the process variable selected in the **Assign curr.** parameter (→ 97).

*Current output behavior*

The current output behaves differently depending on the settings configured in the following parameters:

- Current span (→ 98)
- Failure mode (→ 108)


*Configuration examples*

Some examples of parameter settings and their effect on the current output are given in the following section.

**Configuration example A**

Measuring mode with **Forward flow** option

- **0/4 mA value** parameter (→ 99) = not equal to zero flow (e.g. -250 m<sup>3</sup>/h)
- **20 mA value** parameter (→ 101) = not equal to zero flow (e.g. +750 m<sup>3</sup>/h)
- Calculated current value = 8 mA at zero flow

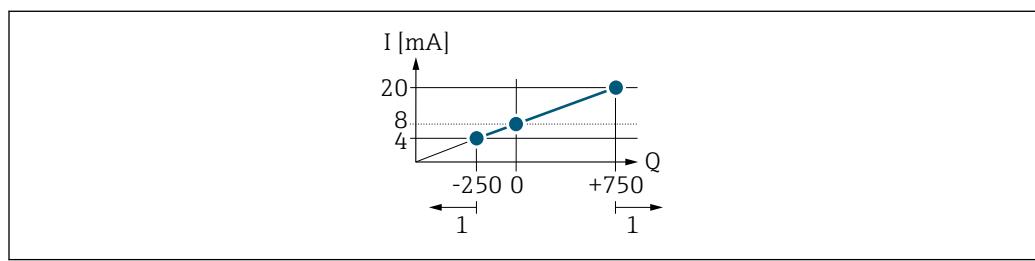

Q Flow


I Current

1 Measuring range is exceeded or undershot

The operational range of the measuring device is defined by the values entered for the **0/4 mA value** parameter (→ 99) and **20 mA value** parameter (→ 101). If the effective flow exceeds or falls below this operational range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

**Configuration example B**

Measuring mode with **Forward/Reverse** option

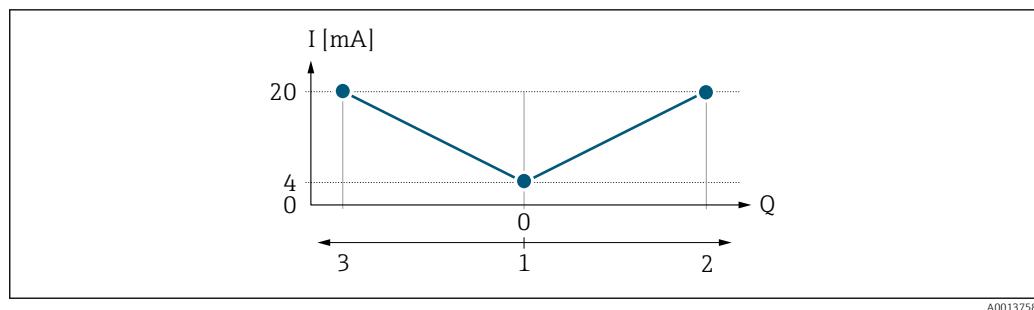

- $I$  Current  
 $Q$  Flow  
 1 Value assigned to the 0/4 mA current  
 2 Forward flow  
 3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 99) and **20 mA value** parameter (→ 101) must have the same sign. The value for the **20 mA value** parameter (→ 101) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 101) (e.g. forward flow).

#### Configuration example C

Measuring mode with **Rev. flow comp.** option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s → 102.

## 20 mA value



### Navigation

Expert → Output → Curr.output 1 to n → 20 mA value (0372–1 to n)

### Prerequisite

One of the following options is selected in the **Current span** parameter (→ 98):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

### Description

Use this function to enter a value for the 20 mA current.

### User entry

Signed floating-point number

### Factory setting

Depends on country and nominal diameter → 304

### Additional information

#### Description

Positive and negative values are permitted depending on the process variable assigned in the **Assign curr.** parameter (→ 97). In addition, the value can be greater than or

smaller than the value assigned for the 0/4 mA current in the **0/4 mA value** parameter (→ [99](#)).

#### Dependency

 The unit depends on the process variable selected in the **Assign curr.** parameter (→ [97](#)).

#### Example

- Value assigned to 0/4 mA = -250 m<sup>3</sup>/h
- Value assigned to 20 mA = +750 m<sup>3</sup>/h
- Calculated current value = 8 mA (at zero flow)

If the **Forward/Reverse** option is selected in the **Measuring mode** parameter (→ [102](#)), different signs cannot be entered for the values of the **0/4 mA value** parameter (→ [99](#)) and **20 mA value** parameter (→ [101](#)). The diagnostic message **△S441 Curr.output 1 to n** is displayed.

#### Configuration examples

 Observe the configuration examples for the **0/4 mA value** parameter (→ [99](#)).

## Measuring mode



### Navigation

 Expert → Output → Curr.output 1 to n → Measuring mode (0351-1 to n)

### Prerequisite

One of the following options is selected in the **Assign curr.** parameter (→ [97](#)):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

One of the following options is selected in the **Current span** parameter (→ [98](#)):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

### Description

Use this function to select the measuring mode for the current output.

### Selection

- Forward flow
- Forward/Reverse
- Rev. flow comp.

### Factory setting

Forward flow

\* Visibility depends on order options or device settings

**Additional information***Description*


The process variable that is assigned to the current output via the **Assign curr.** parameter (→ 97) is displayed below the parameter.

*"Forward flow" option*

The current output signal is proportional to the process variable assigned. The measuring range is defined by the values that are assigned to the 0/4 mA and 20 mA current value.

The flow components outside the scaled measuring range are taken into account for signal output as follows:

- Both values are defined such that they are not equal to zero flow e.g.:
  - 0/4 mA current value = -5 m<sup>3</sup>/h
  - 20 mA current value = 10 m<sup>3</sup>/h
- If the effective flow exceeds or falls below this measuring range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

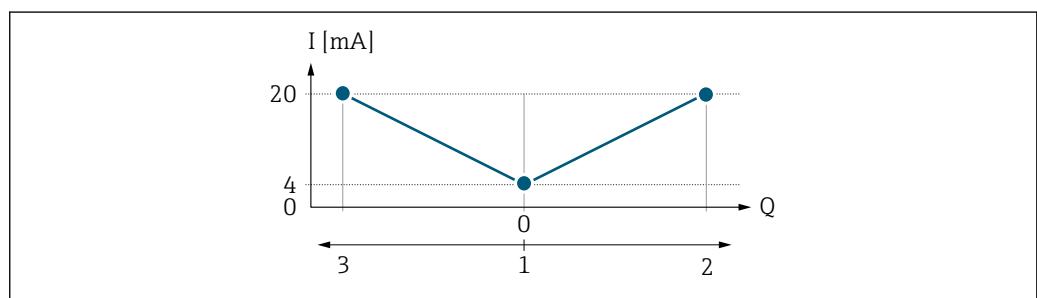*"Forward/Reverse" option*

- |          |   |
|----------|---|
| <i>I</i> | <i>Current</i>                              |
| <i>Q</i> | <i>Flow</i>                                 |
| 1        | <i>Value assigned to the 0/4 mA current</i> |
| 2        | <i>Forward flow</i>                         |
| 3        | <i>Reverse flow</i>                         |

- The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 99) and **20 mA value** parameter (→ 101) must have the same sign.
- The value for the **20 mA value** parameter (→ 101) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 101) (e.g. forward flow).

*"Rev. flow comp." option*

The **Rev. flow comp.** option is primarily used to compensate for abrupt reverse flow which can occur in connection with positive displacement pumps as a result of wear or high viscosity. The reverse flows are recorded in a buffer and balanced against forward flow the next time flow is in the forward direction.


If buffering cannot be processed within approx. 60 s, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

Flow values can aggregate in the buffer in the event of prolonged and unwanted fluid reverse flow. However, these flows are not taken into consideration by the current output configuration, i.e. the reverse flow is not compensated.

If this option is set, the measuring device does not attenuate the flow signal. The flow signal is not attenuated.

*Examples of how the current output behaves***Example 1**


Defined measuring range: lower range value and upper range value with the **same** sign

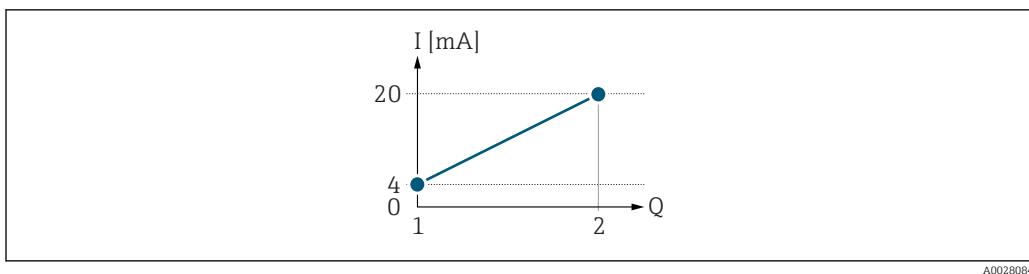**Fig. 3 Measuring range***I Current**Q Flow*


1 Lower range value (value assigned to 0/4 mA current)

2 Upper range value (value assigned to 20 mA current)


With the following flow response:

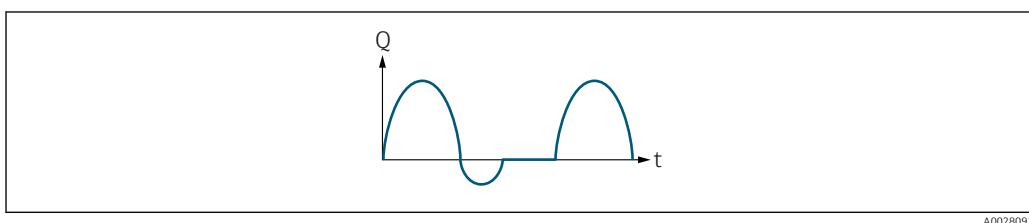**Fig. 4 Flow response***Q Flow**t Time*With the **Forward flow** option


The current output signal is proportional to the process variable assigned. The flow components outside the scaled measuring range are not taken into account for signal output:

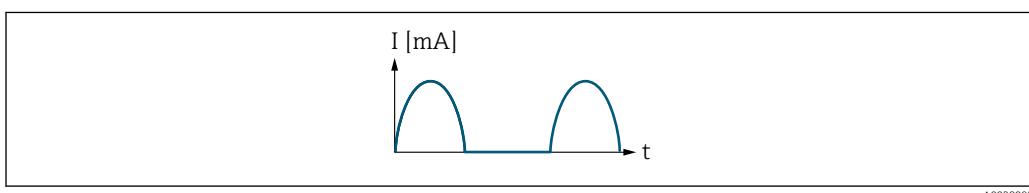*I Current**t Time*With the **Forward/Reverse** option

The current output signal is independent of the direction of flow.

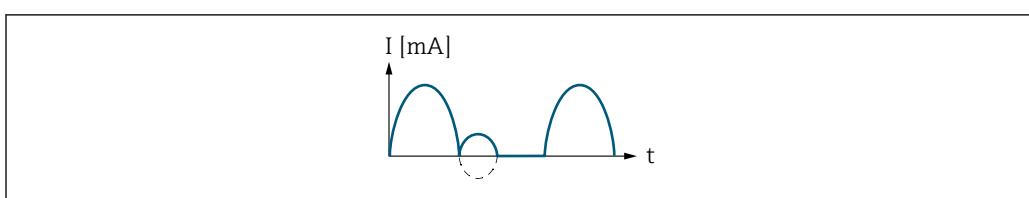*I Current**t Time*With the **Rev. flow comp.** option


Flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

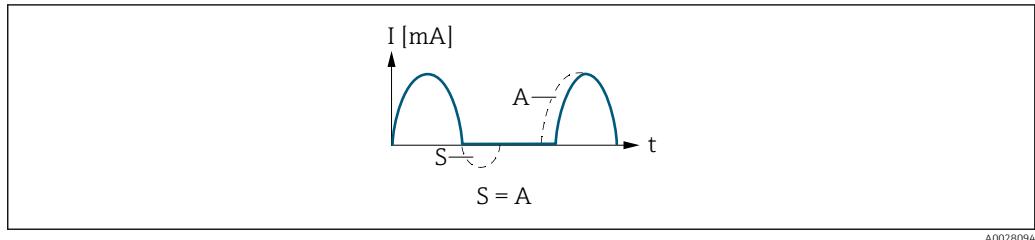

$I$  Current  
 $t$  Time  
 $S$  Flow components saved  
 $A$  Balancing of saved flow components

### Example 2


Defined measuring range: lower range value and upper range value with **different** signs

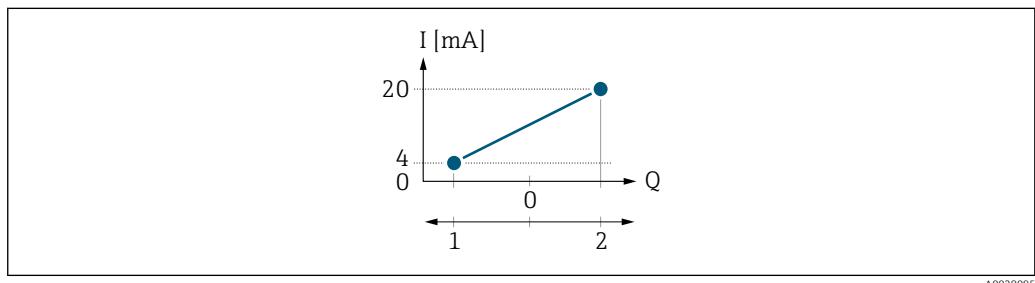

5 Measuring range

$I$  Current  
 $Q$  Flow  
 1 Lower range value (value assigned to 0/4 mA current)  
 2 Upper range value (value assigned to 20 mA current)


With flow a (–) outside, b (- -) inside the measuring range

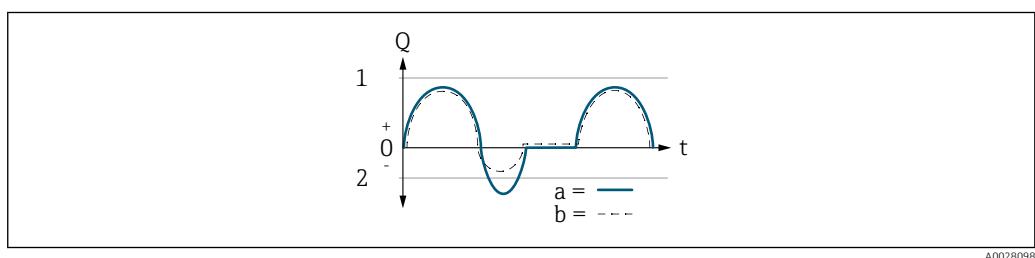

$Q$  Flow  
 $t$  Time  
 1 Lower range value (value assigned to 0/4 mA current)  
 2 Upper range value (value assigned to 20 mA current)

With the **Forward flow** option

- a (–): The flow components outside the scaled measuring range cannot be taken into account for signal output.  
The diagnostic message **△S441 Curr.output 1 to n** is displayed.
- b (- -): The current output signal is proportional to the process variable assigned.

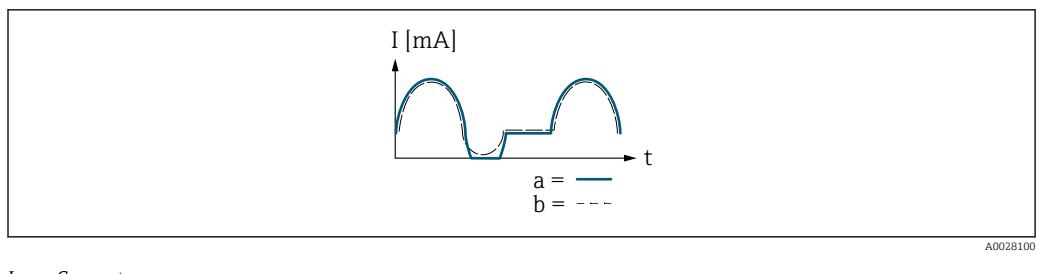


*I*      Current  
*t*      Time

#### With the **Forward/Reverse** option

This option is not possible in this case as the values for the **0/4 mA value** parameter (→ 99) and **20 mA value** parameter (→ 101) have different signs.

#### With the **Rev. flow comp.** option

Flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

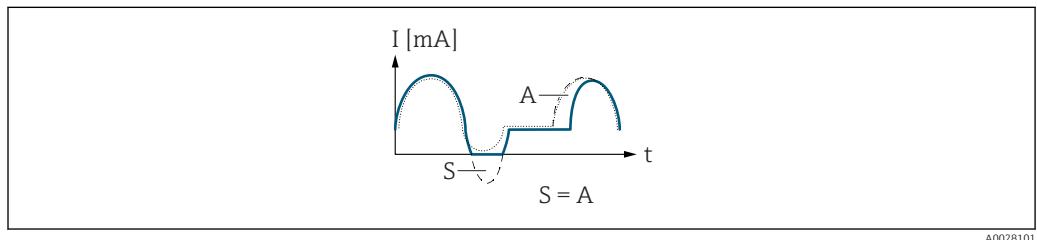

*I*      Current  
*t*      Time  
*S*      Flow components saved  
*A*      Balancing of saved flow components

## Damping out.



### Navigation

Expert → Output → Curr.output 1 to n → Damping out. 1 to n (0363-1 to n)

### Prerequisite

One of the following options is selected in the **Assign curr.** parameter (→ 97):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

One of the following options is selected in the **Current span** parameter (→ 98):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

\* Visibility depends on order options or device settings

<b>Description</b>	Use this function to enter a time constant for the reaction time of the current output signal to fluctuations in the measured value caused by process conditions.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	1.0 s
<b>Additional information</b>	<p><i>User entry</i></p> <p>Use this function to enter a time constant (PT1 element<sup>3)</sup>) for current output damping:</p> <ul style="list-style-type: none"> <li>▪ If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.</li> <li>▪ On the other hand, the current output reacts more slowly if a high time constant is entered.</li> </ul> <p> Damping is switched off if <b>0</b> is entered (factory setting).</p>

## Response time

<b>Navigation</b>	 Expert → Output → Curr.output 1 to n → Response time (0378-1 to n)
<b>Prerequisite</b>	<p>One of the following options is selected in the <b>Assign curr.</b> parameter (→  97):</p> <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Correct.vol.flow</li> <li>▪ Flow velocity</li> <li>▪ Conductivity *</li> <li>▪ CorrConductivity *</li> <li>▪ Temperature *</li> <li>▪ Electronic temp.</li> </ul> <p>One of the following options is selected in the <b>Current span</b> parameter (→  98):</p> <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 4...20 mA</li> <li>▪ 0...20 mA</li> </ul>
<b>Description</b>	Displays the response time. This specifies how quickly the current output reaches the measured value change of 63 % of 100 % of the measured value change.
<b>User interface</b>	Positive floating-point number
<b>Additional information</b>	<p><i>Description</i></p> <p> The response time is made up of the time specified for the following dampings:</p> <ul style="list-style-type: none"> <li>▪ Current output damping →  106 and</li> <li>▪ Depending on the measured variable assigned to the output. Flow damping</li> </ul>

<sup>3)</sup> proportional transmission behavior with first order delay  
<sup>\*</sup> Visibility depends on order options or device settings

**Failure mode****Navigation**

Expert → Output → Curr.output 1 to n → Failure mode (0364-1 to n)

**Prerequisite**

One of the following options is selected in the **Assign curr.** parameter (→ 97):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

One of the following options is selected in the **Current span** parameter (→ 98):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

**Description**

Use this function to select the value of the current output in the event of a device alarm.

**Selection**

- Min.
- Max.
- Last valid value
- Actual value
- Defined value

**Factory setting**

Max.

\* Visibility depends on order options or device settings

**Additional information***Description*

This setting does not affect the failsafe mode of other outputs and totalizers. This is specified in separate parameters.

*"Min." option*

The current output adopts the value of the lower level for signal on alarm.



The signal on alarm level is defined via the **Current span** parameter (→ 98).

*"Max." option*

The current output adopts the value of the upper level for signal on alarm.



The signal on alarm level is defined via the **Current span** parameter (→ 98).

*"Last valid value" option*

The current output adopts the last measured value that was valid before the device alarm occurred.

*"Actual value" option*

The current output adopts the measured value on the basis of the current flow measurement; the device alarm is ignored.

*"Defined value" option*

The current output adopts a defined measured value.



The measured value is defined via the **Failure current** parameter (→ 109).

**Failure current****Navigation**

Expert → Output → Curr.output 1 to n → Failure current (0352-1 to n)

**Prerequisite**

In the **Failure mode** parameter (→ 108), the **Defined value** option is selected.

**Description**

Use this function to enter a fixed value that the current output adopts in the event of a device alarm.

**User entry**

0 to 22.5 mA

**Factory setting**

22.5 mA

**Output curr.****Navigation**

Expert → Output → Curr.output 1 to n → Output curr. 1 to n (0361-1 to n)

**Description**

Displays the current value currently calculated for the current output.

**User interface**

3.59 to 22.5 mA

**Measur. curr.**

**Navigation**  Expert → Output → Curr.output 1 to n → Measur. curr. 1 to n (0366–1 to n)

**Description** Use this function to display the actual measured value of the output current.

**User interface** 0 to 30 mA

### 3.5.2 "Pulse/frequency/switch output 1 to n" submenu

*Navigation*   Expert → Output → PFS output 1 to n

 PFS output 1 to n	
Terminal no. (0492–1 to n)	→  111
Signal mode (0490–1 to n)	→  112
Operating mode (0469–1 to n)	→  112
Assign pulse 1 to n (0460–1 to n)	→  114
Value per pulse (0455–1 to n)	→  114
Pulse width (0452–1 to n)	→  115
Measuring mode (0457–1 to n)	→  115
Failure mode (0480–1 to n)	→  116
Pulse output 1 to n (0456–1 to n)	→  117
Assign freq. (0478–1 to n)	→  118
Min. freq. value (0453–1 to n)	→  118
Max. freq. value (0454–1 to n)	→  119
Val. at min.freq (0476–1 to n)	→  119
Val. at max.freq (0475–1 to n)	→  120
Measuring mode (0479–1 to n)	→  120
Damping out. 1 to n (0477–1 to n)	→  121

Response time (0491-1 to n)	→  122
Failure mode (0451-1 to n)	→  122
Failure freq. (0474-1 to n)	→  123
Output freq. 1 to n (0471-1 to n)	→  123
Switch out funct (0481-1 to n)	→  124
Assign diag. beh (0482-1 to n)	→  124
Assign limit (0483-1 to n)	→  125
Switch-on value (0466-1 to n)	→  127
Switch-off value (0464-1 to n)	→  127
Assign dir.check (0484-1 to n)	→  128
Assign status (0485-1 to n)	→  128
Switch-on delay (0467-1 to n)	→  128
Switch-off delay (0465-1 to n)	→  129
Failure mode (0486-1 to n)	→  129
Switch status 1 to n (0461-1 to n)	→  129
Invert outp.sig. (0470-1 to n)	→  130

---

**Terminal no.**

---

**Navigation** Expert → Output → PFS output 1 to n → Terminal no. (0492-1 to n)**Description** Displays the terminal numbers used by the pulse/frequency/switch output module.**User interface**

- Not used
- 24-25 (I/O 2)

**Additional information** "Not used" option

The pulse/frequency/switch output module does not use any terminal numbers.

**Signal mode**

**Navigation** Expert → Output → PFS output 1 to n → Signal mode (0490–1 to n)

**Description** Use this function to select the signal mode for the pulse/frequency/switch output.

**Selection**

- Passive
- Active

**Factory setting** Passive

---

**Operating mode**

**Navigation** Expert → Output → PFS output 1 to n → Operating mode (0469–1 to n)

**Description** Use this function to select the operating mode of the output as a pulse, frequency or switch output.

**Selection**

- Pulse
- Frequency
- Switch

**Factory setting** Pulse


**Additional information** "Pulse" option

Quantity-dependent pulse with configurable pulse width

- Whenever a specific mass, volume or corrected volume is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width).
- The pulses are never shorter than the set duration.

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Pulse width 0.05 ms
- Pulse rate 1 000 Impuls/s

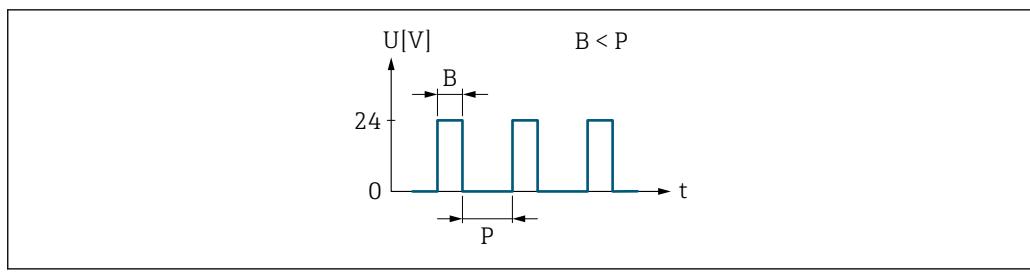

■ 6 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


#### "Frequency" option

Flow-proportional frequency output with 1:1 on/off ratio

An output frequency is output that is proportional to the value of a process variable, such as volume flow, mass flow, corrected volume flow, flow velocity, conductivity, corrected conductivity, temperature or electronic temperature.

#### Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1000 g/s
- Output frequency approx. 1000 Hz

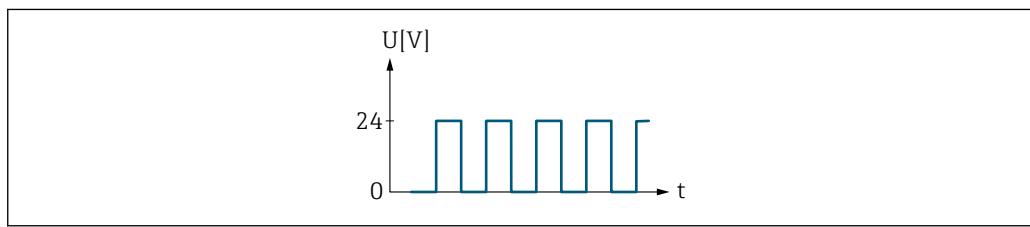


■ 7 Flow-proportional frequency output

#### "Switch" option

Contact for displaying a condition (e.g. alarm or warning if a limit value is reached)

#### Example


Alarm response without alarm

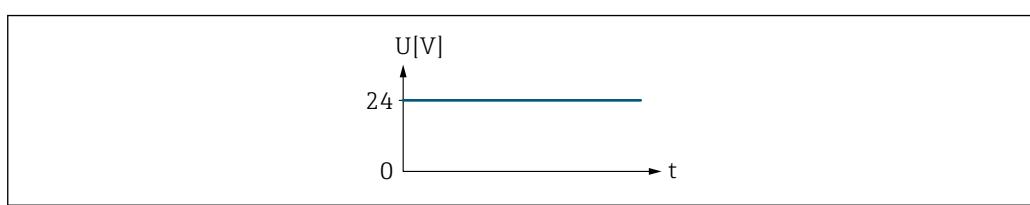

■ 8 No alarm, high level

#### Example

Alarm response in case of alarm

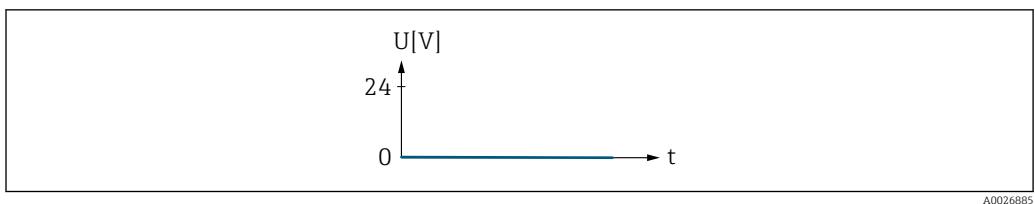

9 *Alarm, low level*

## Assign pulse



**Navigation** Expert → Output → PFS output 1 to n → Assign pulse 1 to n (0460–1 to n)

**Prerequisite** In the **Operating mode** parameter (→ 112), the **Pulse** option is selected.

**Description** Use this function to select the process variable for the pulse output.

### Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

**Factory setting** Off

## Value per pulse



**Navigation** Expert → Output → PFS output 1 to n → Value per pulse (0455–1 to n)

**Prerequisite** In the **Operating mode** parameter (→ 112), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse** parameter (→ 114):

- Mass flow
- Volume flow
- Correct.vol.flow

**Description** Use this function to enter the value for the measured value that a pulse is equivalent to.

**User entry** Signed floating-point number

**Factory setting** Depends on country and nominal diameter → 305

**Additional information** *User entry*

Weighting of the pulse output with a quantity.

The lower the pulse value, the

- better the resolution.
- the higher the frequency of the pulse response.

**Pulse width****Navigation**

Expert → Output → PFS output 1 to n → Pulse width (0452–1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse** parameter (→ 114):

- Mass flow
- Volume flow
- Correct.vol.flow

**Description**

Use this function to enter the duration of the output pulse.

**User entry**


0.05 to 2 000 ms

**Factory setting**

100 ms

**Additional information***Description*

- Define how long a pulse is (duration).
- The maximum pulse rate is defined by  $f_{\max} = 1 / (2 \times \text{pulse width})$ .
- The interval between two pulses lasts at least as long as the set pulse width.
- The maximum flow is defined by  $Q_{\max} = f_{\max} \times \text{pulse value}$ .
- If the flow exceeds these limit values, the measuring device displays the diagnostic message **△S443 Pulse output 1 to n**.

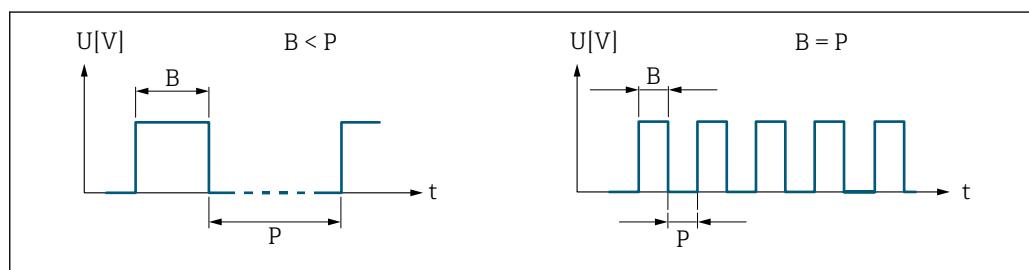

A0026882

$B$  Pulse width entered  
 $P$  Pauses between the individual pulses

**Example**

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{\max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{\max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

**Measuring mode****Navigation**

Expert → Output → PFS output 1 to n → Measuring mode (0457–1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse** parameter (→ 114):

- Mass flow
- Volume flow
- Correct.vol.flow

**Description** Use this function to select the measuring mode for the pulse output.

**Selection**

- Forward flow
- Forward/Reverse
- Reverse flow
- Rev. flow comp.

**Factory setting** Forward flow

**Additional information** *Selection*

- Forward flow  
Positive flow is output, negative flow is not output.
- Forward/Reverse  
Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow.
- Reverse flow  
Negative flow is output, positive flow is not output.
- Rev. flow comp.  
The flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

 For a detailed description of the options available, see the **Measuring mode** parameter (→ 102)

*Examples*

 For a detailed description of the configuration examples, see the **Measuring mode** parameter (→ 102)

---

## Failure mode



**Navigation**  Expert → Output → PFS output 1 to n → Failure mode (0480–1 to n)

**Prerequisite** In the **Operating mode** parameter (→ 112), the **Pulse** option is selected and one of the following options is selected in the **Assign pulse** parameter (→ 114):

- Mass flow
- Volume flow
- Correct.vol.flow

**Description** Use this function to select the failure mode of the pulse output in the event of a device alarm.

**Selection**

- Actual value
- No pulses

**Factory setting** No pulses

**Additional information***Description*

The dictates of safety render it advisable to ensure that the pulse output shows a predefined behavior in the event of a device alarm.

*Selection***■ Actual value**

In the event of a device alarm, the pulse output continues on the basis of the current flow measurement. The fault is ignored.

**■ No pulses**

In the event of a device alarm, the pulse output is "switched off".

**NOTICE!** A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The **Actual value** option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

**Pulse output****Navigation**

④ Expert → Output → PFS output 1 to n → Pulse output 1 to n (0456–1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Pulse** option is selected.

**Description**


Displays the pulse frequency currently output.

**User interface**

Positive floating-point number

**Additional information***Description***■ The pulse output is an open collector output.**

**■ This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.**

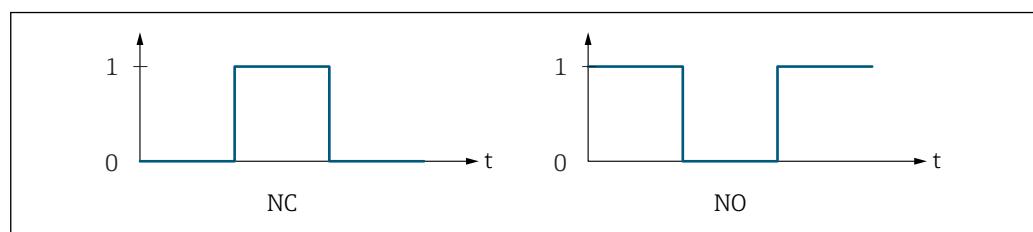

0 Non-conductive

1 Conductive

NC NC contact (normally closed)

NO NO contact (normally open)

The output behavior can be reversed via the **Invert outp.sig.** parameter (→ 130) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→ 116)) can be configured.

**Assign freq.**

**Navigation** Expert → Output → PFS output 1 to n → Assign freq. (0478-1 to n)

**Prerequisite** In the **Operating mode** parameter (→ 112), the **Frequency** option is selected.

**Description** Use this function to select the process variable for the frequency output.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity \*
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

**Factory setting** Off

**Min. freq. value**

**Navigation** Expert → Output → PFS output 1 to n → Min. freq. value (0453-1 to n)

**Prerequisite** One of the following options is selected in the **Assign curr.** parameter (→ 97):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity \*
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

**Description** Use this function to enter the start value frequency.

**User entry** 0.0 to 10 000.0 Hz

**Factory setting** 0.0 Hz

\* Visibility depends on order options or device settings

**Max. freq. value**

**Navigation** Expert → Output → PFS output 1 to n → Max. freq. value (0454–1 to n)

**Prerequisite** One of the following options is selected in the **Assign curr.** parameter (→ [97](#)):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity\*
- Conductivity\*
- CorrConductivity\*
- Temperature\*
- Electronic temp.

**Description** Use this function to enter the end value frequency.

**User entry** 0.0 to 10 000.0 Hz

**Factory setting** 10 000.0 Hz

**Val. at min.freq**

**Navigation** Expert → Output → PFS output 1 to n → Val. at min.freq (0476–1 to n)

**Prerequisite** One of the following options is selected in the **Assign curr.** parameter (→ [97](#)):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity\*
- Conductivity\*
- CorrConductivity\*
- Temperature\*
- Electronic temp.

**Description** Use this function to enter the measured value for the start value frequency.

**User entry** Signed floating-point number

**Factory setting** Depends on country and nominal diameter

**Additional information** *Dependency*

The entry depends on the process variable selected in the **Assign freq.** parameter (→ [118](#)).

\* Visibility depends on order options or device settings

**Val. at max.freq****Navigation**

Expert → Output → PFS output 1 to n → Val. at max.freq (0475–1 to n)

**Prerequisite**

One of the following options is selected in the **Assign curr.** parameter (→ [97](#)):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

**Description**

Use this function to enter the measured value for the end value frequency.

**User entry**

Signed floating-point number

**Factory setting**

Depends on country and nominal diameter

**Additional information***Description*

Use this function to enter the maximum measured value at the maximum frequency. The selected process variable is output as a proportional frequency.

*Dependency*

The entry depends on the process variable selected in the **Assign freq.** parameter (→ [118](#)).

**Measuring mode****Navigation**

Expert → Output → PFS output 1 to n → Measuring mode (0479–1 to n)

**Prerequisite**

One of the following options is selected in the **Assign curr.** parameter (→ [97](#)):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity \*
- CorrConductivity \*
- Temperature \*
- Electronic temp.

**Description**

Use this function to select the measuring mode for the frequency output.

**Selection**

- Forward flow
- Forward/Reverse
- Rev. flow comp.

**Factory setting**

Forward flow

\* Visibility depends on order options or device settings

**Additional information***Selection*

 For a detailed description of the options available, see the **Measuring mode** parameter (→ 102)

*Examples*

 For a detailed description of the configuration examples, see the **Measuring mode** parameter (→ 102)

**Damping out.****Navigation**

Expert → Output → PFS output 1 to n → Damping out. 1 to n (0477-1 to n)

**Prerequisite**

One of the following options is selected in the **Assign curr.** parameter (→ 97):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity\*
- CorrConductivity\*
- Temperature\*
- Electronic temp.

**Description**

Use this function to enter a time constant for the reaction time of the output signal to fluctuations in the measured value.

**User entry**

0 to 999.9 s

**Factory setting**

0.0 s

**Additional information***User entry*

Use this function to enter a time constant (PT1 element<sup>4)</sup>) for frequency output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.

 Damping is switched off if **0** is entered (factory setting).

The frequency output is subject to separate damping that is independent of all preceding time constants.

\* Visibility depends on order options or device settings

4) proportional transmission behavior with first order delay

## Response time

<b>Navigation</b>	 Expert → Output → PFS output 1 to n → Response time (0491–1 to n)
<b>Prerequisite</b>	One of the following options is selected in the <b>Assign curr.</b> parameter (→  97): <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Correct.vol.flow</li> <li>▪ Flow velocity</li> <li>▪ Conductivity *</li> <li>▪ CorrConductivity *</li> <li>▪ Temperature *</li> <li>▪ Electronic temp.</li> </ul>
<b>Description</b>	Displays the response time. This specifies how quickly the pulse/frequency/switch output reaches the measured value change of 63 % of 100 % of the measured value change.
<b>User interface</b>	Positive floating-point number
<b>Additional information</b>	<p><i>Description</i></p> <p> The response time is made up of the time specified for the following dampings:</p> <ul style="list-style-type: none"> <li>▪ Damping of pulse/frequency/switch output →  106 and</li> <li>▪ Depending on the measured variable assigned to the output. Flow damping</li> </ul>

## Failure mode



<b>Navigation</b>	 Expert → Output → PFS output 1 to n → Failure mode (0451–1 to n)
<b>Prerequisite</b>	One of the following options is selected in the <b>Assign curr.</b> parameter (→  97): <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Correct.vol.flow</li> <li>▪ Flow velocity</li> <li>▪ Conductivity *</li> <li>▪ CorrConductivity *</li> <li>▪ Temperature *</li> <li>▪ Electronic temp.</li> </ul>
<b>Description</b>	Use this function to select the failure mode of the frequency output in the event of a device alarm.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Actual value</li> <li>▪ Defined value</li> <li>▪ 0 Hz</li> </ul>
<b>Factory setting</b>	0 Hz

\* Visibility depends on order options or device settings

**Additional information***Selection*

## ■ Actual value

In the event of a device alarm, the frequency output continues on the basis of the current flow measurement. The device alarm is ignored.

## ■ Defined value

In the event of a device alarm, the frequency output continues on the basis of a predefined value. The Failure freq. (→ 123) replaces the current measured value, making it possible to bypass the device alarm. The actual measurement is switched off for the duration of the device alarm.

## ■ 0 Hz

In the event of a device alarm, the frequency output is "switched off".

**NOTICE!** A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The **Actual value** option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

**Failure freq.****Navigation**

④ Expert → Output → PFS output 1 to n → Failure freq. (0474-1 to n)

**Prerequisite**

One of the following options is selected in the **Assign curr.** parameter (→ 97):

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity\*
- Conductivity\*
- CorrConductivity\*
- Temperature\*
- Electronic temp.

**Description**

Use this function to enter the value for the frequency output in the event of a device alarm in order to bypass the alarm.

**User entry**

0.0 to 12 500.0 Hz

**Factory setting**

0.0 Hz

**Output freq.****Navigation**

④ Expert → Output → PFS output 1 to n → Output freq. 1 to n (0471-1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Frequency** option is selected.

**Description**

Displays the actual value of the output frequency which is currently measured.

**User interface**

0.0 to 12 500.0 Hz

\* Visibility depends on order options or device settings

## Switch out funct



**Navigation** Expert → Output → PFS output 1 to n → Switch out funct (0481-1 to n)

**Prerequisite** In the **Operating mode** parameter (→ 112) the **Switch** option is selected.

**Description** Use this function to select a function for the switch output.

**Selection**

- Off
- On
- Diag. behavior
- Limit
- Fl. direct.check
- Status

**Factory setting** Off

**Additional information** Selection

- Off  
The switch output is permanently switched off (open, non-conductive).
- On  
The switch output is permanently switched on (closed, conductive).
- Diag. behavior  
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit  
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Fl. direct.check  
Indicates the flow direction (forward or reverse flow).
- Status  
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

## Assign diag. beh



**Navigation** Expert → Output → PFS output 1 to n → Assign diag. beh (0482-1 to n)

**Prerequisite**

- In the **Operating mode** parameter (→ 112), the **Switch** option is selected.
- In the **Switch out funct** parameter (→ 124), the **Diag. behavior** option is selected.

**Description** Use this function to select the diagnostic event category that is displayed for the switch output.

**Selection**

- Alarm
- Alarm or warning
- Warning

**Factory setting** Alarm

**Additional information***Description*

If no diagnostic event is pending, the switch output is closed and conductive.

*Selection*

- Alarm  
The switch output signals only diagnostic events in the alarm category.
- Alarm or warning  
The switch output signals diagnostic events in the alarm and warning category.
- Warning  
The switch output signals only diagnostic events in the warning category.

**Assign limit****Navigation**

Expert → Output → PFS output 1 to n → Assign limit (0483-1 to n)

**Prerequisite**

- In the **Operating mode** parameter (→ 112), the **Switch** option is selected.
- In the **Switch out funct** parameter (→ 124), the **Limit** option is selected.

**Description**

Use this function to select a process variable for the limit function.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity \*
- Conductivity \*
- CorrConductivity \*
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Temperature \*
- Electronic temp.

**Factory setting**


Volume flow

**Additional information***Description*

Behavior of status output when Switch-on value > Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive


\* Visibility depends on order options or device settings

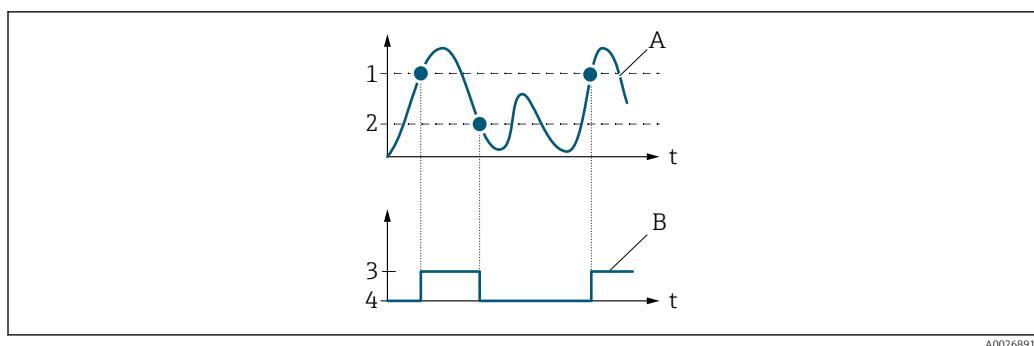

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value < Switch-off value:


- Process variable < Switch-on value: transistor is conductive
- Process variable > Switch-off value: transistor is non-conductive

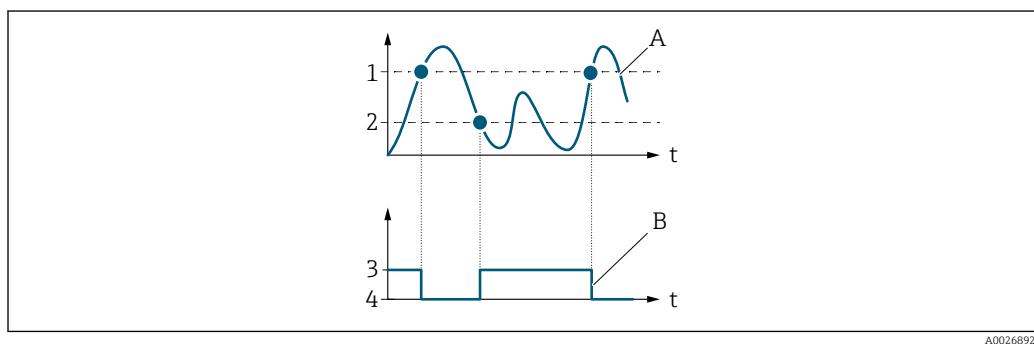

- 1 Switch-off value
- 2 Switch-on value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value = Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

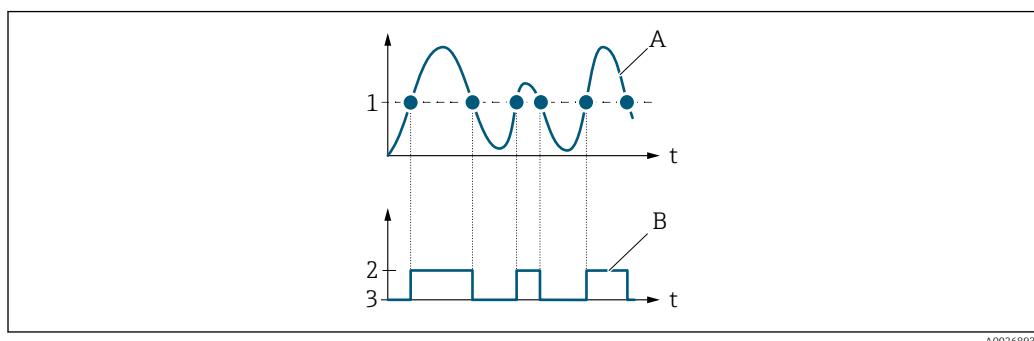

- 1 Switch-on value = Switch-off value
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

**Switch-on value**

**Navigation** Expert → Output → PFS output 1 to n → Switch-on value (0466–1 to n)

**Prerequisite** ■ In the **Operating mode** parameter (→ 112), the **Switch** option is selected.  
■ In the **Switch out funct** parameter (→ 124), the **Limit** option is selected.

**Description** Use this function to enter the measured value for the switch-on point.

**User entry** Signed floating-point number

**Factory setting** Country-specific:  
■ 0 l/h  
■ 0 gal/min (us)

**Additional information** *Description*

Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).

When using a hysteresis: Switch-on value > Switch-off value.

*Dependency*

The unit depends on the process variable selected in the **Assign limit** parameter (→ 125).

**Switch-off value**

**Navigation** Expert → Output → PFS output 1 to n → Switch-off value (0464–1 to n)

**Prerequisite** ■ In the **Operating mode** parameter (→ 112), the **Switch** option is selected.  
■ In the **Switch out funct** parameter (→ 124), the **Limit** option is selected.

**Description** Use this function to enter the measured value for the switch-off point.

**User entry** Signed floating-point number

**Factory setting** Country-specific:  
■ 0 l/h  
■ 0 gal/min (us)

**Additional information** *Description*

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

*Dependency*

The unit depends on the process variable selected in the **Assign limit** parameter (→ 125).

## Assign dir.check



**Navigation** Expert → Output → PFS output 1 to n → Assign dir.check (0484-1 to n)

**Prerequisite**

- The **Switch** option is selected in the **Operating mode** parameter (→ 112).
- The **Fl. direct.check** option is selected in the **Switch out funct** parameter (→ 124).

**Description** Use this function to select a process variable for monitoring the flow direction.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

**Factory setting** Volume flow

## Assign status



**Navigation** Expert → Output → PFS output 1 to n → Assign status (0485-1 to n)

**Prerequisite**

- The **Switch** option is selected in the **Operating mode** parameter (→ 112).
- The **Status** option is selected in the **Switch out funct** parameter (→ 124).

**Description** Use this function to select a device status for the switch output.

**Selection**

- Empty pipe det.
- Low flow cut off
- Digital outpt. 6

**Factory setting** Empty pipe det.

**Additional information** *Options*

If empty pipe detection or low flow cut off are enabled, the output is conductive. Otherwise, the switch output is non-conductive.

## Switch-on delay



**Navigation** Expert → Output → PFS output 1 to n → Switch-on delay (0467-1 to n)

**Prerequisite**

- The **Switch** option is selected in the **Operating mode** parameter (→ 112).
- The **Limit** option is selected in the **Switch out funct** parameter (→ 124).

**Description** Use this function to enter a delay time for switching on the switch output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

**Switch-off delay**

**Navigation** Expert → Output → PFS output 1 to n → Switch-off delay (0465–1 to n)

**Prerequisite**

- The **Switch** option is selected in the **Operating mode** parameter (→ 112).
- The **Limit** option is selected in the **Switch out funct** parameter (→ 124).

**Description** Use this function to enter a delay time for switching off the switch output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

**Failure mode**

**Navigation** Expert → Output → PFS output 1 to n → Failure mode (0486–1 to n)

**Description** Use this function to select a failsafe mode for the switch output in the event of a device alarm.

**Selection**

- Actual status
- Open
- Closed

**Factory setting** Open

**Additional information** *Options*

- Actual status  
In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the switch output. The **Actual status** option behaves in the same way as the current input value.
- Open  
In the event of a device alarm, the switch output's transistor is set to **non-conductive**.
- Closed  
In the event of a device alarm, the switch output's transistor is set to **conductive**.

**Switch status**

**Navigation** Expert → Output → PFS output 1 to n → Switch status 1 to n (0461–1 to n)

**Prerequisite** The **Switch** option is selected in the **Operating mode** parameter (→ 112).

**Description** Displays the current switch status of the status output.

**User interface**

- Open
- Closed

**Additional information***User interface*

- Open  
The switch output is not conductive.
- Closed  
The switch output is conductive.

**Invert outp.sig.****Navigation**

Expert → Output → PFS output 1 to n → Invert outp.sig. (0470-1 to n)

**Description**

Use this function to select whether to invert the output signal.

**Selection**


- No
- Yes

**Factory setting**


No

**Additional information***Selection*

**No** option (passive - negative)

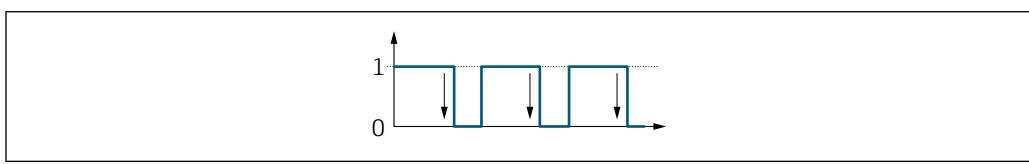

**Yes** option (passive - positive)

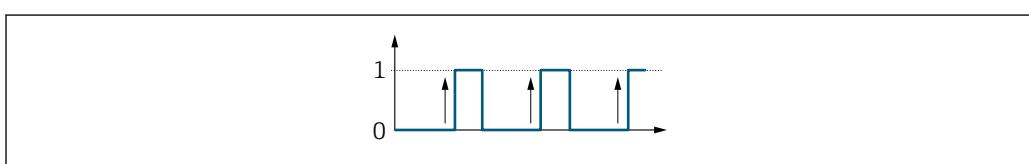

### 3.5.3 "Relay output 1 to n" submenu

**Navigation**

Expert → Output → Relay output 1 to n

<b>► Relay output 1 to n</b>	
Terminal no.	→  131
Relay outp.func.	→  131
Assign dir.check	→  132

Assign limit	→  132
Assign diag. beh	→  133
Assign status	→  133
Switch-off value	→  134
Switch-off delay	→  134
Switch-on value	→  134
Switch-on delay	→  135
Failure mode	→  135
Switch status	→  136
Powerless relay	→  136

---

**Terminal no.**

---

**Navigation** Expert → Output → Relay output 1 to n → Terminal no. (0812-1 to n)**Description** Displays the terminal numbers used by the relay output module.**User interface**

- Not used
- 24-25 (I/O 2)

**Additional information** "Not used" option

The relay output module does not use any terminal numbers.

---

**Relay outp.func.**

---

**Navigation** Expert → Output → Relay output 1 to n → Relay outp.func. (0804-1 to n)**Description** Use this function to select an output function for the relay output.**Selection**

- Closed
- Open
- Diag. behavior
- Limit
- Fl. direct.check
- Digital Output

**Factory setting** Closed

**Additional information***Selection*

- Closed  
The relay output is permanently switched on (closed, conductive).
- Open  
The relay output is permanently switched off (open, non-conductive).
- Diag. behavior  
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit  
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Fl. direct.check  
Indicates the flow direction (forward or reverse flow).
- Digital Output  
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

**Assign dir.check****Navigation**

Expert → Output → Relay output 1 to n → Assign dir.check (0808-1 to n)

**Prerequisite**

In the **Relay outp.func.** parameter (→ 131), the **Fl. direct.check** option is selected.

**Description**

Use this function to select a process variable for monitoring the flow direction.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

**Factory setting**

Volume flow

**Assign limit****Navigation**

Expert → Output → Relay output 1 to n → Assign limit (0807-1 to n)

**Prerequisite**

In the **Relay outp.func.** parameter (→ 131), the **Limit** option is selected.

**Description**

Use this function to select a process variable for the limit value function.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity<sup>\*</sup>
- CorrConductivity<sup>\*</sup>

\* Visibility depends on order options or device settings

- Totalizer 1
- Totalizer 2
- Totalizer 3
- Temperature \*
- Electronic temp.

**Factory setting** Volume flow

## Assign diag. beh



**Navigation** Expert → Output → Relay output 1 to n → Assign diag. beh (0806–1 to n)

**Prerequisite** In the **Relay outp.func.** parameter (→ 131), the **Diag. behavior** option is selected.

**Description** Use this function to select the category of the diagnostic events that are displayed for the relay output.

- Selection**
- Alarm
  - Alarm or warning
  - Warning

**Factory setting** Alarm

**Additional information** *Description*

If no diagnostic event is pending, the relay output is closed and conductive.

*Selection*

- Alarm  
The relay output signals only diagnostic events in the alarm category.
- Alarm or warning  
The relay output signals diagnostic events in the alarm and warning category.
- Warning  
The relay output signals only diagnostic events in the warning category.

## Assign status



**Navigation** Expert → Output → Relay output 1 to n → Assign status (0805–1 to n)

**Prerequisite** In the **Relay outp.func.** parameter (→ 131), the **Digital Output** option is selected.

**Description** Use this function to select the device status for the relay output.

- Selection**
- Partial pipe det
  - Low flow cut off
  - Digital outp. 6

\* Visibility depends on order options or device settings

**Factory setting** Partial pipe det

## Switch-off value



**Navigation** Expert → Output → Relay output 1 to n → Switch-off value (0809–1 to n)

**Prerequisite** In the **Relay outp.func.** parameter (→ 131), the **Limit** option is selected.

**Description** Use this function to enter the measured value for the switch-off point.

**User entry** Signed floating-point number

**Factory setting** Country-specific:

- 0 l/h
- 0 gal(us)/min

**Additional information** *Description*

Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

When using a hysteresis: Switch-on value > Switch-off value.

*Dependency*

The unit is dependent on the process variable selected in the **Assign limit** parameter (→ 132).

## Switch-off delay



**Navigation** Expert → Output → Relay output 1 to n → Switch-off delay (0813–1 to n)

**Prerequisite** In the **Relay outp.func.** parameter (→ 131), the **Limit** option is selected.

**Description** Use this function to enter a delay time for switching off the switch output.

**User entry** 0.0 to 100.0 s

**Factory setting** 0.0 s

## Switch-on value



**Navigation** Expert → Output → Relay output 1 to n → Switch-on value (0810–1 to n)

**Prerequisite** In the **Relay outp.func.** parameter (→ 131), the **Limit** option is selected.

**Description** Use this function to enter the measured value for the switch-on point.

<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	Country-specific: <ul style="list-style-type: none"><li>■ 0 l/h</li><li>■ 0 gal(us)/min</li></ul>
<b>Additional information</b>	<i>Description</i> <p>Use this function to enter the limit value for the switch-on value (process variable &gt; switch-on value = closed, conductive).</p> <p> When using a hysteresis: Switch-on value &gt; Switch-off value.</p> <i>Dependency</i> <p> The unit is dependent on the process variable selected in the <b>Assign limit</b> parameter (→ 132).</p>
<b>Switch-on delay</b>	

<b>Navigation</b>	 Expert → Output → Relay output 1 to n → Switch-on delay (0814-1 to n)
<b>Prerequisite</b>	In the <b>Relay outp.func.</b> parameter (→ 131), the <b>Limit</b> option is selected.
<b>Description</b>	Use this function to enter a delay time for switching on the switch output.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

<b>Failure mode</b>	
<b>Navigation</b>	 Expert → Output → Relay output 1 to n → Failure mode (0811-1 to n)
<b>Description</b>	Use this function to select the failure mode of the relay output in the event of a device alarm.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Actual status</li><li>■ Open</li><li>■ Closed</li></ul>
<b>Factory setting</b>	Open

**Additional information***Selection*

## ■ Actual status

In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the relay output. The **Actual status** option behaves in the same way as the current input value.

## ■ Open

In the event of a device alarm, the relay output's transistor is set to **non-conductive**.

## ■ Closed

In the event of a device alarm, the relay output's transistor is set to **conductive**.

---

**Switch status**

---

**Navigation** Expert → Output → Relay output 1 to n → Switch status (0801-1 to n)**Description**

Displays the current status of the relay output.

**User interface**

- Open
- Closed

**Additional information***User interface*

## ■ Open

The relay output is not conductive.

## ■ Closed

The relay output is conductive.

---

**Powerless relay**

---

**Navigation** Expert → Output → Relay output 1 to n → Powerless relay (0816-1 to n)**Description**

Use this function to select the quiescent state for the relay output.

**Selection**

- Open
- Closed

**Factory setting**

Open

**Additional information***Selection*

## ■ Open

The relay output is not conductive.

## ■ Closed

The relay output is conductive.

### 3.6 "Communication" submenu

*Navigation*

Expert → Communication

► Communication	
Device address (11061)	→  137
► Resource block	→  137
► WLAN settings	→  158
► Web server	→  162

---

#### Device address

---

**Navigation**

Expert → Communication → Device address (11061)

**Description**

Displays the device address.

**User interface**

1 to 255

#### 3.6.1 "Resource block" submenu

*Navigation*

Expert → Communication → Resource block

► Resource block	
Block tag (10702)	→  138
Target mode (10728)	→  139
Actual mode (10725)	→  141
Manufacturer Id (10721)	→  144
Device type (10711)	→  144
Device revision (10710)	→  144
DD Revision (10709)	→  144
Restart (10800)	→  145

Write Lock (10747)	→  152
ITK Version (10794)	→  158

---

## Block tag

---

**Navigation** Expert → Communication → Resource block → Block tag (10702)

**Description** Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Static Revision

---

**Navigation** Expert → Communication → Resource block → Static Revision (10735)

**Description** Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).

**User interface** 0 to FFFF

**Additional information** *Description*

Static parameters are parameters that are not changed by the process.

---

## Tag Description

---

**Navigation** Expert → Communication → Resource block → Tag Description (10736)

**Description** Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Strategy

---

**Navigation** Expert → Communication → Resource block → Strategy (10734)

**Description** Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.

**User entry** 0 to FFFF

**Factory setting** 0

---

### Alert Key

---

**Navigation**  Expert → Communication → Resource block → Alert Key (10696)

**Description** Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.

**User entry** 0 to 0xFF

**Factory setting** 1

---

### Target mode

---

**Navigation**  Expert → Communication → Resource block → Target mode (10728)

**Description** Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting** OOS

Additional information	Options
	<b>ROut</b>
	In the <b>ROut</b> operating mode, the set point (SP) for the function block is controlled by the field bus host system, which runs over an interface, via the RIn parameter. The set point (SP) is used as an output signal after internal calculations. The output value and the status of the function block is communicated to the field bus host system as feedback via the ROut parameter. The set point can be initiated or retained for the value of the process variables.
	<b>RCas</b>
	In the <b>RCas</b> operating mode (external cascade mode), the set point (SP) for the function block is controlled by the field bus host system, which runs over an interface, via the RCas-In parameter. The set point (SP) is used as an output signal after internal calculations. The output value and status of the function block is communicated to the field bus host system as feedback via the RCas-Out parameter.
	<b>Cas</b>
	In the <b>Cas</b> (cascade mode) operating mode, the function block receives a discrete signal via the function block input, which is provided by the Cas-In parameter of an upstream function block. This signal controls the set point (SP) of the function block and is used as an output signal after internal calculations. The output is used to communicate the output value and status to the upstream function block.
	<b>Auto</b>
	The <b>Auto</b> operating mode is the normal operating mode of the function block. The set point (SP) is specified locally in the function block and is used as an output signal after internal calculations. This set point can be specified by the user via an interface.
	<b>Man</b>
	In the <b>Man</b> operating mode, the output value can be specified directly in the function block. This is specified by the user via an interface. There is no internal calculation. The algorithm is initiated in such a way that there is no interruption when the operating mode is changed. The set point can be retained or initiated for the value of the process variables or for the set point of the previous operating mode if the system is switched back to it.
	<b>LO</b>
	The <b>LO</b> operating mode is used in control and output blocks that support a track input parameter. The manufacturer can also provide a local lock switch on the device to enable the <b>LO</b> operating mode. Tracking must be supported in the group of control parameters and is initiated by a discrete track-in parameter.
	In local bridge mode, the output value of the function block is set in order to track the value of the track-input parameter. The algorithm is initiated in such a way that there is no interruption when the operating mode switches from <b>LO</b> back to the previous operating mode. The set point can be initiated or retained for the value of the process variables.
	<b>IMan</b>
	In the <b>IMan</b> operating mode, the output value of the function block is performed as a reaction to the status of the back-calculation-input parameter. When this status indicates that there is no signal for the final output element, the control blocks ensure that there is a smooth transition. The back-calculation-input parameter is supported by all control and output blocks. The set point can be initiated or retained for the value of the process variables.
	<b>OOS</b>
	In the <b>OOS</b> operating mode, implementation of the function block is blocked. Either the last valid value or, in the case of an output block, the last valid set point is retained as the output value. This operating mode is used during configuration of the device.

---

## Actual mode

---

**Navigation**  Expert → Communication → Resource block → Actual mode (10725)

**Description** Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode that the function block is currently operating in. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→ [139](#)).

**User interface**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Additional information** *User interface*

 Detailed description of the options displayed: **Target mode** parameter (→ [139](#))

---

## Permitted mode

---

**Navigation**  Expert → Communication → Resource block → Permitted mode (10727)

**Description** Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→ [139](#)) for the function block. The operating modes that are supported vary depending on the type and function of the block.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting**

- Auto
- OOS

**Additional information** *Options*

 Detailed description of the options available for selection: **Target mode** parameter (→ [139](#))

## Normal mode

---

**Navigation**  Expert → Communication → Resource block → Normal mode (10726)

**Description** Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Additional information** *Options*  
 Detailed description of the options available for selection: **Target mode** parameter  
(→  139)

---

## Block Error

---

**Navigation**  Expert → Communication → Resource block → Block Error (10703)

**Description** Displays the short text for the Block Error that has occurred in the function block.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

## Resource State

---

**Navigation**  Expert → Communication → Resource block → Resource State (10730)

**Description** Displays the Resource State: Displays the current operating mode of the resource block.

<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ StartRestart</li> <li>■ Initialization</li> <li>■ Online Linking</li> <li>■ Online</li> <li>■ Standby</li> <li>■ Failure</li> </ul>
<b>Additional information</b>	<p><i>User interface</i></p> <ul style="list-style-type: none"> <li>■ Uninitialized The resource block is in an invalid operating mode.</li> <li>■ StartRestart The resource block is in the start-up or restore phase. The necessary memory and hardware tests are carried out for the current operation. If these tests are successful, the resource block switches to the Initialization operating mode. If these tests are not successful, the resource block switches to the Failure operating mode.</li> <li>■ Initialization The resource block is in this operating mode if the block successfully passes the hardware tests from the StartRestart or Failure status. In this operating mode, all alarms of the function block that are not displayed are automatically confirmed and acknowledged. When system management is operational, the implementation of the block can be planned and the resource block switches to the Online Linking operating mode.</li> <li>■ Online Linking The resource block is in this operating mode when the block switches from the Initialization or Online operating mode. The configured connections between the function blocks are not yet established. When all configured connections have been established, the resource block switches to the Online operating mode.</li> <li>■ Online Normal operating mode, the resource block is in the Auto operating mode. The configured connections between the function blocks have been established. If one of the connections could not be established, the resource block switches back to the Online Linking operating mode.</li> <li>■ Standby The Resource Block is in the <b>OOS</b> option operating mode. It is not possible to implement the remaining blocks. The operating mode of the transducer block is not necessarily affected by this. Switching the resource block to the Auto mode causes the resource block to switch back to the StartRestart operating mode.</li> <li>■ Failure The resource block is in the fault state. It switches to this operating mode if a memory or hardware fault that would hinder current operation has been detected in the block. The fault can affect the block or the entire device. When this operating mode is active, blocks with an output function are also in the fault state. The hardware test is carried out again. If the error does not reoccur, the resource block switches back to the Initialization operating mode.</li> </ul>

---

## DD Resource

---

<b>Navigation</b>	 Expert → Communication → Resource block → DD Resource (10708)
<b>Description</b>	Displays the DD Resource: Indicates the reference source for the device description (DD).
<b>User interface</b>	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

**Additional information***User interface*

Zero: No device description is stored on the device.

---

**Manufacturer Id****Navigation**

Expert → Communication → Resource block → Manufacturer Id (10721)

**Description**

Manufacturer Id display: is used by the interface to assign the right DD file for the resource.

**User interface**

Endress+Hauser

---

**Device type****Navigation**

Expert → Communication → Resource block → Device type (10711)

**Description**

Use this function to view the device type with which the measuring device is registered with FOUNDATION Fieldbus.

**User interface**

Promag 300/500

---

**Device revision****Navigation**

Expert → Communication → Resource block → Device revision (10710)

**Description**

Use this function to view the device revision with which the measuring device is registered with FOUNDATION Fieldbus.

**User interface**

1

---

**DD Revision****Navigation**

Expert → Communication → Resource block → DD Revision (10709)

**Description**

Displays the revision number of the device description (DD).

**User interface**

1

**Additional information***Description*

This display can be used to ensure that the right system files (DD = device description) are used for integration into the host system. The system files can be downloaded free of charge online at: [www.endress.com](http://www.endress.com).

---

**Grant**

---

**Navigation** Expert → Communication → Resource block → Grant (10718)**Description**

Option for releasing certain access authorizations of the field bus host system on the device.

**Selection**

- Program
- Tune
- Alarm
- Local
- Operate
- Service
- Diagnostic

---

**Deny**

---

**Navigation** Expert → Communication → Resource block → Deny (10717)**Description**

Option for restricting certain access authorizations of the field bus host system on the device.

**Selection**

- Program Denied
- Tune Denied
- Alarm Denied
- Local
- Operate Denied

---

**Hard Types**

---

**Navigation** Expert → Communication → Resource block → Hard Types (10719)**Description**

Displays the input signal type for the Analog input block.

**User interface**

- Scalar Input
- Scalar Output
- Discrete Input
- Discrete Output

---

**Restart**

---

**Navigation**  Expert → Communication → Resource block → Restart (10800)**Description**

Use this function to select a manual restart or a manual device reset.

**Selection**

- Uninitialized
- Run
- Resource
- Defaults
- Processor
- To delivery set.

**Factory setting**

Uninitialized

---

**Features****Navigation**

█ Expert → Communication → Resource block → Features (10713)

**Description**

Displays the additional options that are supported by the measuring device.

**User interface**

- Reports
- Faultstate
- Soft W Lock
- Hard W Lock
- Chng Bypass Auto
- MVCReporDistrsup
- Multibit AlmSupp
- InterParamWrChk

---

**Feature Select****Navigation**

█ Expert → Communication → Resource block → Feature Select (10714)

**Description**

Use this function to select additional options that are supported by the measuring device.

**Selection**

- Reports
- Faultstate
- Soft W Lock
- Hard W Lock
- Chng Bypass Auto
- MVCReporDistrsup
- Multibit AlmSupp
- InterParamWrChk

---

**Cycle Type****Navigation**

█ Expert → Communication → Resource block → Cycle Type (10707)

**Description**

Displays the implementation methods for the block that are supported by the measuring device.

<b>User interface</b>	<ul style="list-style-type: none"><li>■ Scheduled</li><li>■ Block Execution</li></ul>
-----------------------	---

---

### Cycle Selection

---

<b>Navigation</b>	 Expert → Communication → Resource block → Cycle Selection (10706)
-------------------	---

<b>Description</b>	Use this function to select the implementation method for the block that is used by the field bus host system. This implementation method is selected by the field bus host system.
--------------------	---

<b>Selection</b>	<ul style="list-style-type: none"><li>■ Scheduled</li><li>■ Block Execution</li></ul>
------------------	---

---

### Mimumum Cyc.Time

---

<b>Navigation</b>	 Expert → Communication → Resource block → Mimumum Cyc.Time (10724)
-------------------	--

<b>Description</b>	Displays the implementation time of all function blocks that are available in the measuring device.
--------------------	---

<b>User interface</b>	Positive integer
-----------------------	------------------

---

### Memory Size

---

<b>Navigation</b>	 Expert → Communication → Resource block → Memory Size (10723)
-------------------	---

<b>Description</b>	Displays the available configuration memory in kilobytes.
--------------------	---

<b>User interface</b>	0 to 65 535 Kbytes
-----------------------	--------------------

---

### Nonvolat CycTime

---

<b>Navigation</b>	 Expert → Communication → Resource block → Nonvolat CycTime (10729)
-------------------	--

<b>Description</b>	Displays the time interval during which the dynamic device parameters are stored in the non-volatile memory.
--------------------	--

<b>User interface</b>	Positive integer
-----------------------	------------------

## Free Space

---

**Navigation**  Expert → Communication → Resource block → Free Space (10715)

**Description** Displays the free system memory volume available for implementing further function blocks as a percentage.

**User interface** 0.000000 to 100.000 %

---

## Free Time

---

**Navigation**  Expert → Communication → Resource block → Free Time (10716)

**Description** Displays the free system time available for implementing further function blocks as a percentage.

**User interface** 0.000000 to 100.000 %

---

## Clear Fault Stat

---

**Navigation**  Expert → Communication → Resource block → Clear Fault Stat (10704)

**Description** Use this function to select the fault state for the Discrete outputs (→  252) block.

**Selection**

- Uninitialized
- Off
- Clear

**Factory setting** Uninitialized

**Additional information** *Options*

 The fault state can be disabled with **Clear** option.

---

## Confirm Time

---

**Navigation**  Expert → Communication → Resource block → Confirm Time (10705)

**Description** Use this function to enter a time interval for confirming the event report. If the measuring device does not receive a confirmation within this interval, the event report is sent to the field bus host system again.

**User entry** Positive integer

**Factory setting** 0 1/32 ms

---

## Fault State

---

<b>Navigation</b>	 Expert → Communication → Resource block → Fault State (10712)
<b>Description</b>	Displays the current status of the fault state for the Discrete outputs (→  252) block.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Clear</li><li>■ Active</li></ul>
<b>Additional information</b>	<p><i>User interface</i></p> <ul style="list-style-type: none"><li>■ Uninitialized The fault state is disabled.</li><li>■ Active The fault state is enabled.</li></ul>

---

## Limit Notify

---

<b>Navigation</b>	 Expert → Communication → Resource block → Limit Notify (10720)
<b>Description</b>	Use this function to enter the maximum number of event reports that may be pending at the same time without confirmation.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0

---

## Max Notify

---

<b>Navigation</b>	 Expert → Communication → Resource block → Max Notify (10722)
<b>Description</b>	Displays the maximum number of event reports that are supported by the measuring device and may be pending at the same time without confirmation.
<b>User interface</b>	0 to 255

---

## Set Fault State

---

<b>Navigation</b>	 Expert → Communication → Resource block → Set Fault State (10731)
<b>Description</b>	Option for manually enabling or disabling the fault state for the Discrete outputs (→  252) function block.

<b>Selection</b>	<ul style="list-style-type: none"><li>■ OFF</li><li>■ SET</li></ul>
<b>Factory setting</b>	OFF
<b>Additional information</b>	<i>Options</i> <ul style="list-style-type: none"><li>■ OFF The fault state is disabled.</li><li>■ SET The fault state is enabled.</li></ul>

---

## Shed Remote Casc

---

<b>Navigation</b>	 Expert → Communication → Resource block → Shed Remote Casc (10732)
<b>Description</b>	Use this function to enter the time interval after which the computer stops writing to function blocks with RCas points.
<b>User entry</b>	Positive integer
<b>Factory setting</b>	0 1/32 ms

---

## Shed Remote Out

---

<b>Navigation</b>	 Expert → Communication → Resource block → Shed Remote Out (10733)
<b>Description</b>	Use this function to enter the time interval after which the computer stops writing to function blocks with ROut points.
<b>User entry</b>	Positive integer
<b>Factory setting</b>	0 1/32 ms

---

## Unacknowledged

---

<b>Navigation</b>	 Expert → Communication → Resource block → Unacknowledged (10740)
<b>Description</b>	Option for manually acknowledging an update of the static block parameter.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Acknowledged</li><li>■ Unacknowledged</li></ul>
<b>Factory setting</b>	Uninitialized

**Additional information***Description*

- If a new diagnostic event occurs, the measuring device sets **Unacknowledged** option.
- If the diagnostic event has been acknowledged, the user can set **Acknowledged** option.

---

**Update State**

---

**Navigation**

Expert → Communication → Resource block → Update State (10741)

**Description**

Displays the status of an update of the static block parameter. The status indicates whether the update was communicated or not.

**User interface**

- Uninitialized
- Reported
- Not Reported

---

**Time Stamp**

---

**Navigation**

Expert → Communication → Resource block → Time Stamp (10739)

**Description**

Displays the time stamp indicating when the analysis of the block was started and when a status change of an update to the static block parameter that has not yet been communicated was identified. The time stamp is retained until the update confirmation is received.

**User interface**

Days (d), hours (h), minutes (m), seconds (s)

---

**Static revision**

---

**Navigation**

Expert → Communication → Resource block → Static revision (10738)

**Description**

Displays the Static revision: Each instance of a static block parameter being accessed with write and report access due to an update is counted (event counter).

**User interface**

0 to 65 535

---

**Relative Index**

---

**Navigation**

Expert → Communication → Resource block → Relative Index (10737)

**Description**

Displays the relative index of the static block parameter that triggered the alarm (OD index minus field bus start index).

User interface	0 to 65 535
----------------	-------------

---

## Write Lock

---

Navigation	  Expert → Communication → Resource block → Write Lock (10747)
Description	Option for enabling and disabling the hardware write protection.
Selection	<ul style="list-style-type: none"><li>▪ Not Locked</li><li>▪ Locked</li></ul>
Factory setting	Not Locked
Additional information	<p><i>Description</i></p> <p>Option for enabling and disabling write access to the measuring device via the FOUNDATION Fieldbus (acyclic data transmission, e.g. via the "FieldCare" operating program).</p> <p> For detailed information on hardware write protection, see the "Write protection via write protection switch" section of the Operating Instructions.</p> <p><i>Options</i></p> <ul style="list-style-type: none"><li>▪ Not Locked Device data can be changed via the FOUNDATION Fieldbus interface.</li><li>▪ Locked Device data cannot be changed via the FOUNDATION Fieldbus interface.</li></ul>

---

## Unacknowledged

---

Navigation	 Expert → Communication → Resource block → Unacknowledged (10700)
Description	Option for manually acknowledging a block alarm.
Selection	<ul style="list-style-type: none"><li>▪ Uninitialized</li><li>▪ Acknowledged</li><li>▪ Unacknowledged</li></ul>
Factory setting	Uninitialized
Additional information	<p><i>Description</i></p> <p> ▪ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option. ▪ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.</p>

---

**Alarm State**

---

**Navigation**  Expert → Communication → Resource block → Alarm State (10697)**Description** Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.**User interface**

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

---

**Time Stamp**

---

**Navigation**  Expert → Communication → Resource block → Time Stamp (10699)**Description** Displays the time stamp indicating when the analysis of the block was started and when a status change of the block alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.**User interface** Days (d), hours (h), minutes (m), seconds (s)

---

**Subcode**

---

**Navigation**  Expert → Communication → Resource block → Subcode (10698)**Description** Displays the specific cause of the block alarm.**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

**Value**

<b>Navigation</b>	 Expert → Communication → Resource block → Value (10701)
<b>Description</b>	Displays the value of the affected parameter at the time at which the block alarm was detected.
<b>User interface</b>	0 to 255

**Current**

<b>Navigation</b>	 Expert → Communication → Resource block → Current (10692)
<b>Description</b>	Use this function to view the current status of the process alarms.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Discrete Alarm</li><li>■ Block Alarm</li><li>■ Fail Alarm</li><li>■ Off Spec Alarm</li><li>■ Maint. Alarm</li><li>■ Check Alarm</li></ul>

**Unacknowledged**

<b>Navigation</b>	 Expert → Communication → Resource block → Unacknowledged (10694)
<b>Description</b>	Displays an unacknowledged process alarm.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Disc Alm Unack</li><li>■ Block Alm Unack</li><li>■ Fail Alm Unack</li><li>■ Off SpecAlmUnack</li><li>■ Maint Alm Unack</li><li>■ Check Alm Unack</li></ul>

**Unreported**

<b>Navigation</b>	 Expert → Communication → Resource block → Unreported (10695)
<b>Description</b>	Displays a process alarm that has not been communicated.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Disc Alm Unrep</li><li>■ Block Alm Unrep</li><li>■ Fail Alm Unrep</li></ul>

- Off SpecAlmUnrep
- Maint Alm Unrep
- Check Alm Unrep

---

## Disabled

---

**Navigation**  Expert → Communication → Resource block → Disabled (10693)

**Description** Option for disabling a process alarm category.

**Selection**

- Disc Alm Disabl
- Block Alm Disabl
- Fail Alm Disabl
- OffSpecAlmDisabl
- Maint Alm Disabl
- Check Alm Disab.

---

## Ack. Option

---

**Navigation**  Expert → Communication → Resource block → Ack. Option (10691)

**Description** Option for automatic acknowledgment of process alarms in a specific category.

**Selection**

- Disc Alm Aut Ack
- Blk Alm Auto Ack
- Fail Alm Aut Ack
- OffSpecAlmAutAck
- Maint Alm AutAck
- Check Alm AutAck

**Additional information** *Description*

Use this function to determine whether an alarm must be acknowledged via the field bus host system.

 If the process alarm option has not been enabled in this parameter, this process alarm must only be acknowledged in **Unacknowledged** parameter (→  152).  
**Current** parameter (→  154) indicates the current status of all process alarms.

---

## Write Priority

---

**Navigation**  Expert → Communication → Resource block → Write Priority (10748)

**Description** Use this function to enter the priority for the write protection alarm.

**User entry** 0 to 15

**Factory setting** 0

**Additional information***Description*

If write protection is disabled on the FOUNDATION Fieldbus I/O board, the alarm priority entered here is checked before the status change is transferred to the field bus host system. The alarm priority determines the behavior in the event of an active write protection alarm.



The alarm is triggered when the write protection is disabled.

---

**Unacknowledged**

---

**Navigation**

Expert → Communication → Resource block → Unacknowledged (10745)

**Description**

Option for manually acknowledging a write protection alarm.

**Selection**

- Uninitialized
- Acknowledged
- Unacknowledged

**Factory setting**

Uninitialized

**Additional information***Description*

- If a new alarm occurs, the measuring device sets **Unacknowledged** option.
- If the alarm has been acknowledged, the user can set **Acknowledged** option.

---

**Alarm State**

---

**Navigation**

Expert → Communication → Resource block → Alarm State (10742)

**Description**

Displays the status of the write protection alarm. The status indicates whether the write protection alarm is active and whether it has already been communicated to the field bus host system.

**User interface**

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

---

**Time Stamp**

---

**Navigation**

Expert → Communication → Resource block → Time Stamp (10744)

**Description**

Displays the time stamp indicating when the analysis of the block was started and when the status change of a write protection alarm that has not yet been communicated was identified. The time stamp is retained until the alarm confirmation is received.

---

User interface	Days (d), hours (h), minutes (m), seconds (s)
----------------	---

---

## Subcode

---

Navigation	 Expert → Communication → Resource block → Subcode (10743)
------------	---

Description	Displays the specific cause of the write protection alarm, which is to be communicated to the field bus host system.
-------------	--

User interface	<ul style="list-style-type: none"><li>■ Other</li><li>■ BlockConfigurat</li><li>■ LinkConfigurat</li><li>■ SimulationActive</li><li>■ LocalOverride</li><li>■ DeviceFaultState</li><li>■ DeviceMainten</li><li>■ SensorFailure</li><li>■ OutputFailure</li><li>■ MemoryFailure</li><li>■ LostStaticData</li><li>■ LostNVData</li><li>■ ReadbackCheck</li><li>■ MaintenanceNeed</li><li>■ PowerUp</li><li>■ OutOfService</li></ul>
----------------	---

---

## Discrete Value

---

Navigation	 Expert → Communication → Resource block → Discrete Value (10746)
------------	--

Description	Displays the discrete value of the affected parameter at the time at which the write protection alarm was detected.
-------------	---

User interface	<ul style="list-style-type: none"><li>■ State 0</li><li>■ State 1</li><li>■ State 2</li><li>■ State 3</li><li>■ State 4</li><li>■ State 5</li><li>■ State 6</li><li>■ State 7</li><li>■ State 8</li><li>■ State 9</li><li>■ State 10</li><li>■ State 11</li><li>■ State 12</li><li>■ State 13</li><li>■ State 14</li><li>■ State 15</li><li>■ State 16</li></ul>
----------------	--

**ITK Version****Navigation**  Expert → Communication → Resource block → ITK Version (10794)**Description**

Displays the revision status of the Interoperability Test Kits (ITK).

**User interface**

6

### 3.6.2 "WLAN settings" submenu

*Navigation*  Expert → Communication → WLAN settings

 WLAN settings	
WLAN (2702)	→  158
WLAN IP address (2711)	→  159
WLAN subnet mask (2709)	→  159
WLAN MAC address (2703)	→  159
Security type (2705)	→  160
WLAN passphrase (2706)	→  160
Assign SSID name (2708)	→  160
SSID name (2707)	→  161
Select antenna (2713)	→  161
WLAN channel (2704)	→  161
Apply changes (2712)	→  161

---

**WLAN****Navigation**  Expert → Communication → WLAN settings → WLAN (2702)**Description**

Use this function to enable and disable the WLAN connection.

**Selection**

- Disable
- Enable

---

<b>Factory setting</b>	Enable
------------------------	--------

---

**WLAN IP address**

<b>Navigation</b>	Expert → Communication → WLAN settings → WLAN IP address (2711)
<b>Description</b>	Use this function to enter the IP address of the measuring device's WLAN connection.
<b>User entry</b>	4 octet: 0 to 255 (in the particular octet)
<b>Factory setting</b>	192.168.1.212

---

**WLAN subnet mask**

<b>Navigation</b>	Expert → Communication → WLAN settings → WLAN subnet mask (2709)
<b>Description</b>	Use this function to enter the subnet mask.
<b>User entry</b>	4 octet: 0 to 255 (in the particular octet)
<b>Factory setting</b>	255.255.255.0

---

**WLAN MAC address**

<b>Navigation</b>	Expert → Communication → WLAN settings → WLAN MAC address (2703)
<b>Description</b>	Displays the MAC <sup>5)</sup> address of the measuring device.
<b>User interface</b>	Unique 12-digit character string comprising letters and numbers
<b>Factory setting</b>	Each measuring device is given an individual address.
<b>Additional information</b>	<i>Example</i> For the display format 00:07:05:10:01:5F

---

5) Media Access Control

**Security type**

**Navigation** Expert → Communication → WLAN settings → Security type (2705)

**Description** Use this function to select the type of security for the WLAN interface.

**Selection**

- Unsecured
- WPA2-PSK

**Factory setting** WPA2-PSK

**Additional information** *Selection*

- Unsecured  
Access the WLAN connection without identification.
- WPA2-PSK  
Access the WLAN connection with a network key.

**WLAN passphrase**

**Navigation** Expert → Communication → WLAN settings → WLAN passphrase (2706)

**Prerequisite** In the **Security type** parameter (→ 160), the **WPA2-PSK** option is selected.

**Description** Use this function to enter the network key.

**User entry** 8 to 32-digit character string comprising numbers, letters and special characters

**Factory setting** Serial number of the measuring device (e.g. L100A802000)

**Assign SSID name**

**Navigation** Expert → Communication → WLAN settings → Assign SSID name (2708)

**Description** Use this function to select which name is used for the SSID<sup>6)</sup>.

**Selection**

- Device tag
- User-defined

**Factory setting** User-defined

**Additional information** *Selection*

- Device tag  
The device tag name is used as the SSID.
- User-defined  
A user-defined name is used as the SSID.

6) Service Set Identifier

---

**SSID name****Navigation**

Expert → Communication → WLAN settings → SSID name (2707)

**Prerequisite**In the **Assign SSID name** parameter (→ 160), the **User-defined** option is selected.**Description**

Use this function to enter a user-defined SSID name.

**User entry**

Max. 32-digit character string comprising numbers, letters and special characters

**Factory setting**EH\_device designation\_last 7 digits of the serial number (e.g.  
EH\_Promag\_500\_A802000)

---

**Select antenna****Navigation**

Expert → Communication → Select antenna (2713)

**Description**

Use this function to select whether the external or internal antenna is used for reception.

**Selection**

- External antenna
- Internal antenna

**Factory setting**

Internal antenna

---

**WLAN channel****Navigation**

Expert → Communication → WLAN settings → WLAN channel (2704)

**Description**

Use this function to enter the WLAN channel.

**User entry**

1 to 11

**Factory setting**

6

**Additional information***Description*

- 
- It is only necessary to enter a WLAN channel if multiple WLAN devices are in use.
  - If just one measuring device is in use, it is recommended to keep the factory setting.

---

**Apply changes****Navigation**

Expert → Communication → WLAN settings → Apply changes (2712)


**Description**

Use this function to adopt modified WLAN settings.

<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Ok</li> </ul>
<b>Factory setting</b>	Cancel
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ Cancel No action is executed and the user exits the parameter.</li> <li>▪ Ok The measuring device adopts the modified WLAN settings.</li> </ul>

### 3.6.3 "Web server" submenu

Navigation

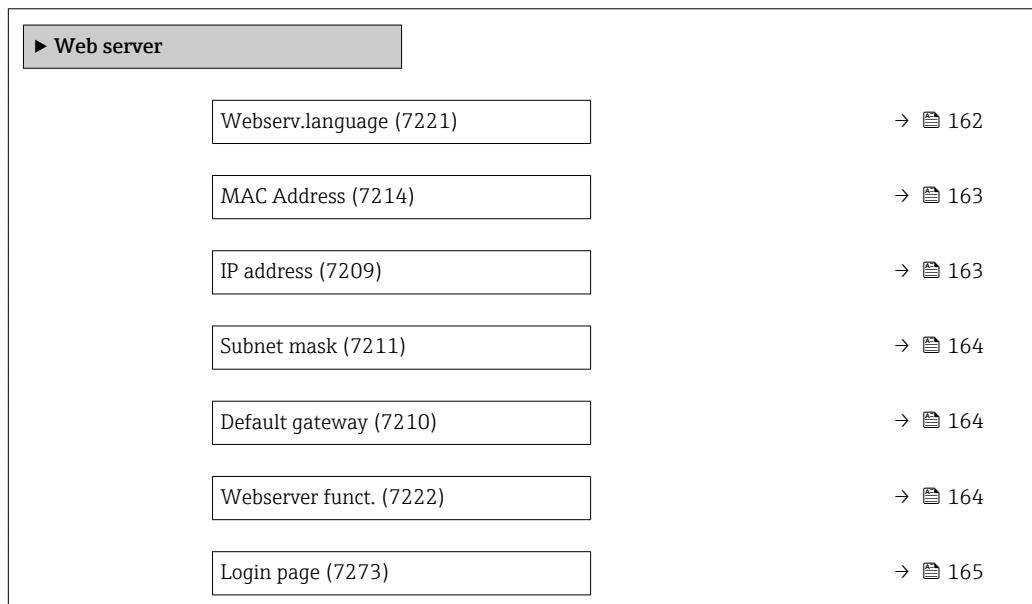 Expert → Communication → Web server



---

#### Wbserv.language

---

Navigation

 Expert → Communication → Web server → Wbserv.language (7221)

Description

Use this function to select the web server language setting.

Selection

- English
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*

---

\* Visibility depends on order options or device settings

- Polski \*
- русский язык(Ru) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- العربية (Arabic) \*
- Bahasa Indonesia \*
- ภาษาไทย (Thai) \*
- tiếng Việt (Viet) \*
- čeština (Czech) \*

**Factory setting** English

## MAC Address

<b>Navigation</b>	  Expert → Communication → Web server → MAC Address (7214)
<b>Description</b>	Displays the MAC <sup>7)</sup> address of the measuring device.
<b>User interface</b>	Unique 12-digit character string comprising letters and numbers
<b>Factory setting</b>	Each measuring device is given an individual address.
<b>Additional information</b>	<p><i>Example</i></p> <p>For the display format 00:07:05:10:01:5F</p>

## IP address



<b>Navigation</b>	  Expert → Communication → Web server → IP address (7209)
<b>Description</b>	Displays the IP address of the Web server of the measuring device.
<b>User interface</b>	4 octet: 0 to 255 (in the particular octet)
<b>Factory setting</b>	192.168.1.212

\* Visibility depends on order options or device settings

7) Media Access Control

**Subnet mask****Navigation**

Expert → Communication → Web server → Subnet mask (7211)

**Description**

Displays the subnet mask.

**User interface**

4 octet: 0 to 255 (in the particular octet)

**Factory setting**

255.255.255.0

**Default gateway****Navigation**

Expert → Communication → Web server → Default gateway (7210)

**Description**

Displays the default gateway.

**User interface**

4 octet: 0 to 255 (in the particular octet)

**Factory setting**

0.0.0.0

**Webserver funct.****Navigation**

Expert → Communication → Web server → Webserver funct. (7222)

**Description**

Use this function to switch the Web server on and off.

**Selection**

- Off
- On

**Factory setting**

On

**Additional information****Description**

Once disabled, the Webserver funct. can only be re-enabled via or the operating tool FieldCare.

**Selection**

Option	Description
Off	<ul style="list-style-type: none"> <li>▪ The web server is completely disabled.</li> <li>▪ Port 80 is locked.</li> </ul>
On	<ul style="list-style-type: none"> <li>▪ The complete functionality of the web server is available.</li> <li>▪ JavaScript is used.</li> <li>▪ The password is transferred in an encrypted state.</li> <li>▪ Any change to the password is also transferred in an encrypted state.</li> </ul>

**Login page****Navigation**

Expert → Communication → Web server → Login page (7273)

**Description**

Use this function to select the format of the login page.

**Selection**

- Without header
- With header

**Factory setting**

With header

### 3.7 "Analog inputs" submenu

In the analog input function block (AI function block), the process variables from the transducer block are prepared in terms of control for the subsequent automation functions (e.g. scaling, limit value processing). The automation function is defined by interconnecting the outputs.

*Navigation*

Expert → Analog inputs

**Analog inputs**

**Analog input 1 to n**

→ 165

#### 3.7.1 "Analog input 1 to n" submenu

*Navigation*

Expert → Analog inputs → Analog input 1 to n

**Analog input 1 to n**

Block tag (6901–1 to n)

→ 166

Status (6906–1 to n)

→ 172

Value (6907–1 to n)

→ 174

Channel (6902–1 to n)

→ 194

Lin Type (6905–1 to n)

→ 195

PV Filter Time (6909–1 to n)

→ 200

## Block tag

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Block tag (6901–1 to n)

**Description** Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Static Revision

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Static Revision (6973–1 to n)

**Description** Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).

**User interface** 0 to FFFF

**Additional information** *Description*

 Static parameters are parameters that are not changed by the process.

---

## Tag Description

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Tag Description (6974–1 to n)

**Description** Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Strategy

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Strategy (6972–1 to n)

**Description** Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.

**User entry** 0 to FFFF

**Factory setting** 0

---

**Alert Key**

---

**Navigation**

█ Expert → Analog inputs → Analog input 1 to n → Alert Key (6916-1 to n)

**Description**

Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.

**User entry**

0 to 0xFF

**Factory setting**

1

---

**Target mode**

---

**Navigation**

█ Expert → Analog inputs → Analog input 1 to n → Target mode (6960-1 to n)

**Description**

Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting**

OOS

**Additional information**

*Options*

 Detailed description of the options available for selection: **Target mode** parameter  
(→ [139](#))

---

**Actual mode**

---

**Navigation**

█ Expert → Analog inputs → Analog input 1 to n → Actual mode (6957-1 to n)

**Description**

Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode in which the function block is currently operating. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→ [167](#)).

**User interface**

- ROut
- RCas
- Cas
- Auto
- Man

- LO
- IMan
- OOS

**Additional information***User interface*Detailed description of the options displayed: **Target mode** parameter (→ [139](#))

---

**Permitted mode****Navigation**

Expert → Analog inputs → Analog input 1 to n → Permitted mode (6959–1 to n)

**Description**

Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→ [167](#)) for the function block. The operating modes that are supported vary depending on the type and function of the block.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting**

- Auto
- OOS

**Additional information***Options*Detailed description of the options available for selection: **Target mode** parameter (→ [139](#))

---

**Normal mode****Navigation**

Expert → Analog inputs → Analog input 1 to n → Normal mode (6958–1 to n)

**Description**

Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting**

Auto

**Additional information***Options*

Detailed description of the options available for selection: **Target mode** parameter  
(→ 139)

---

**Block Error**

---

**Navigation**

Expert → Analog inputs → Analog input 1 to n → Block Error (6922-1 to n)

**Description**

Displays the short text for the Block Error that has occurred in the function block.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

**Status**

---

**Navigation**

Expert → Analog inputs → Analog input 1 to n → Status (6964-1 to n)

**Description**

Displays the status of the input value (PV).

**User interface**

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)

- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)

- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

---

**Value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Value (6965–1 to n)
<b>Description</b>	Displays the input value (PV).
<b>User interface</b>	Signed floating-point number

**Additional information***Dependency*

The unit is taken from the: **Units index** parameter (→ 184)

---

**Status**

---

**Navigation**

Expert → Analog inputs → Analog input 1 to n → Status (6906-1 to n)

**Description**

Displays the status of the output value (OUT).

**User interface**

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)

- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)

- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

---

## Value

---

<b>Navigation</b>	  Expert → Analog inputs → Analog input 1 to n → Value (6907–1 to n)
<b>Description</b>	Input for the output value (OUT).
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the: <b>Units index</b> parameter (→  184)

---

## Simulate Status

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Simulate Status (6967–1 to n)
<b>Description</b>	Use this function to select the status that is used for the transducer block simulation.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Bad (0x00)</li><li>■ Bad (0x01)</li><li>■ Bad (0x02)</li><li>■ Bad (0x03)</li><li>■ Bad (0x04)</li><li>■ Bad (0x05)</li><li>■ Bad (0x06)</li><li>■ Bad (0x07)</li><li>■ Bad (0x08)</li><li>■ Bad (0x09)</li></ul>

- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)

- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

**Factory setting**

Bad (0x00)

---

## Simulate Value

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Simulate Value (6968–1 to n)
<b>Description</b>	Use this function to enter the value that is used for the transducer block simulation.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the: <b>Units index</b> parameter (→  180)

---

## Transducer Stat

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Transducer Stat (6969–1 to n)
<b>Description</b>	Displays the current status of the transducer block.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Bad (0x00)</li><li>■ Bad (0x01)</li><li>■ Bad (0x02)</li><li>■ Bad (0x03)</li><li>■ Bad (0x04)</li><li>■ Bad (0x05)</li><li>■ Bad (0x06)</li><li>■ Bad (0x07)</li><li>■ Bad (0x08)</li><li>■ Bad (0x09)</li><li>■ Bad (0x0A)</li><li>■ Bad (0x0B)</li><li>■ Bad (0x0C)</li><li>■ Bad (0x0D)</li><li>■ Bad (0x0E)</li><li>■ Bad (0x0F)</li><li>■ Bad (0x10)</li><li>■ Bad (0x11)</li><li>■ Bad (0x12)</li><li>■ Bad (0x13)</li><li>■ Bad (0x14)</li><li>■ Bad (0x15)</li><li>■ Bad (0x16)</li><li>■ Bad (0x17)</li><li>■ Bad (0x18)</li><li>■ Bad (0x19)</li><li>■ Bad (0x1A)</li><li>■ Bad (0x1B)</li><li>■ Bad (0x1C)</li><li>■ Bad (0x1D)</li><li>■ Bad (0x1E)</li><li>■ Bad (0x1F)</li><li>■ Uncertain (0x40)</li></ul>

- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)

- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

---

## Transducer Value

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Transducer Value (6970–1 to n)
<b>Description</b>	Displays the current value of the transducer block.
<b>User interface</b>	Signed floating-point number
<b>Factory setting</b>	0 %
<b>Additional information</b>	<i>Dependency</i>
	 The unit is taken from the: <b>Units index</b> parameter (→  180)

**Sim. En/Disable**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Sim. En/Disable (6966-1 to n)
<b>Description</b>	Use this function to enable or disable the function block simulation.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Disabled</li><li>■ Active</li></ul>
<b>Factory setting</b>	Uninitialized

---

**EU at 100%**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → EU at 100% (6982-1 to n)
<b>Description</b>	Use this function to enter the upper limit value of the output value measuring range.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %
<b>Additional information</b>	<i>Dependency</i>
	 The unit is taken from the: <b>Units index</b> parameter (→  180)

---

**EU at 0%**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → EU at 0% (6981-1 to n)
<b>Description</b>	Use this function to enter the lower limit value of the output value measuring range.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %
<b>Additional information</b>	<i>Dependency</i>
	 The unit is taken from the: <b>Units index</b> parameter (→  180)

---

**Units index**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Units index (6983-1 to n)
<b>Description</b>	Use this function to select the unit for the output value.

**Selection****SI units**

- g/s
- g/min
- g/h
- g/d
- kg/s
- kg/min
- kg/h
- kg/d
- t/s
- t/min
- t/h
- t/d
- l/s
- l/min
- l/d
- l/h
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d
- m<sup>3</sup>/s
- m<sup>3</sup>/min
- m<sup>3</sup>/h
- m<sup>3</sup>/d
- cm<sup>3</sup>/s
- cm<sup>3</sup>/min
- cm<sup>3</sup>/h
- cm<sup>3</sup>/d
- dm<sup>3</sup>/s
- dm<sup>3</sup>/min
- dm<sup>3</sup>/h
- dm<sup>3</sup>/d
- ml/s
- ml/min
- ml/h
- ml/d
- NL/s
- NL/d
- NL/h
- NL/min
- Nm<sup>3</sup>/s
- Nm<sup>3</sup>/min
- Nm<sup>3</sup>/h
- Nm<sup>3</sup>/d
- Sm<sup>3</sup>/s
- Sm<sup>3</sup>/min
- Sm<sup>3</sup>/h
- Sm<sup>3</sup>/d
- MSft<sup>3</sup>/d
- kg/l
- kg/m<sup>3</sup>
- kg/dm<sup>3</sup>
- g/cm<sup>3</sup>
- g/m<sup>3</sup>

**US units**

- oz/s
- oz/min
- oz/h
- oz/d
- lb/s
- lb/min
- lb/h
- lb/d
- STon/s
- STon/min
- STon/h
- STon/d
- af/s
- af/min
- af/h
- af/d
- ft<sup>3</sup>/s
- ft<sup>3</sup>/min
- ft<sup>3</sup>/h
- ft<sup>3</sup>/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- Sgal/s (imp)
- Sgal/min (imp)
- Sgal/h (imp)
- Sgal/d (imp)
- lb/gal (imp)
- lb/bbl (imp;oil)
- MMBtu/min
- MMBtu/h
- MMBtu/d
- MBtu/s
- MBtu/min
- MBtu/h
- MBtu/d
- MMBtu/s
- Btu/s
- Btu/min
- Btu/h
- Btu/day
- Mgal (imp)
- bbl (imp;beer)
- Sgal (imp)
- bbl (imp;oil)
- gal (imp)

**Imperial units**

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- Sgal/s (imp)
- Sgal/min (imp)
- Sgal/h (imp)
- Sgal/d (imp)
- lb/gal (imp)
- lb/bbl (imp;oil)

- MMBtu/min
- MMBtu/h
- MMBtu/d
- MBtu/s
- MBtu/min
- MBtu/h
- MBtu/d
- MMBtu/s
- Btu/s
- Btu/min
- Btu/h
- Btu/day
- Mgal (imp)

- gal (imp)
- Sgal (imp)
- bbl (imp;oil)
- gal (imp)

- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG20°C
- SG15°C
- kg/Nl
- g/Scm<sup>3</sup>
- kg/Sm<sup>3</sup>
- kg/Nm<sup>3</sup>
- K
- °C
- m/s
- bar
- mbar a
- Pa
- MPa
- kPa
- torr
- atm
- %
- kW
- MW
- MJ/h
- GJ/d
- Gcal/h
- MJ/s
- MJ/min
- MJ/d
- kJ/s
- kJ/min
- kJ/h
- kJ/d
- GJ/s
- GJ/min
- GJ/h
- kcal/s
- kcal/min
- kcal/h
- kcal/d
- Mcal/s
- Mcal/min
- Mcal/h
- Mcal/d
- Gcal/s
- Gcal/min
- Gcal/d
- W
- TW
- GW
- mW
- µW
- nW
- pW
- g
- Nl
- Nm<sup>3</sup>
- Sl
- Sm<sup>3</sup>
- Sgal/d (us)
- Sgal/h (us)
- Sbbl/s (us;liq.)
- Sbbl/min (us;liq.)
- Sbbl/h (us;liq.)
- Sbbl/d (us;liq.)
- MSft<sup>3</sup>/D
- lb/ft<sup>3</sup>
- lb/gal (us)
- lb/bbl (us;tank)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/Sft<sup>3</sup>
- °F
- °R
- ft/s
- psi
- inH2Og(4°C)
- inH2Og(68°F)
- ftH2Og(68°F)
- hp
- oz
- af
- fl oz (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;tank)
- Sgal (us)
- Sbbl (us;liq.)
- Sft<sup>3</sup>
- kgal (us)
- lb
- ft<sup>3</sup>
- gal (us)
- bbl (us;beer)
- STon

- ml
- Ml Mega
- kg
- l
- t
- m<sup>3</sup>
- dm<sup>3</sup>
- cm<sup>3</sup>
- hl
- kgf/cm<sup>2</sup>
- gf/cm<sup>2</sup>
- mA

*Other units*

- mmH2O (4°C)
- mmH2O (68°F)
- inHg (0°C)
- mmHg (0°C)
- mmH2Oa(4°C)
- mmH2Oa(68°F)
- inH2O (4°C)
- inH2O (68°F)
- ftH2O (4°C)
- ftH2O (68°F)

**Factory setting** %

**Additional information** *Result*

The selected unit applies for:

- **Simulate Value** parameter (→ 177)
- **Transducer Value** parameter (→ 179)
- **EU at 0%** parameter (→ 180)
- **EU at 100%** parameter (→ 180)

### Decimal

**Navigation** ☐ Expert → Analog inputs → Analog input 1 to n → Decimal (6980–1 to n)

**Description** Use this function to enter the number of decimal places for the output value.

**User entry** -128 to 127

**Factory setting** 0

### EU at 100%

**Navigation** ☐ Expert → Analog inputs → Analog input 1 to n → EU at 100% (6963–1 to n)

**Description** Use this function to enter the upper limit value of the input value measuring range from the transducer block (input value).

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Dependency*

 The unit is taken from the: **Units index** parameter (→ 184)

---

## EU at 0%

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → EU at 0% (6962–1 to n)

**Description** Function for entering the lower limit value of the input value measuring range from the transducer block (input value).

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Dependency*

 The unit is taken from the: **Units index** parameter (→ 184)

---

## Units index

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Units index (6908–1 to n)

**Description** Use this function to select the unit for the input value from the transducer block (input value).

Selection	SI units	US units	Imperial units
■ K	■ mils	■ lbf/in	
■ m	■ °F	■ gal (imp)	
■ m <sup>3</sup>	■ °R	■ Btu	
■ Pa s	■ ft	■ LTon	
■ m <sup>2</sup> /s	■ in	■ datherm	
■ P	■ bbl (us;liq.)	■ Btu/h	
■ cP	■ Sft <sup>3</sup>	■ Btu/day	
■ St	■ in/min	■ Btu/min	
■ cSt	■ oz	■ Btu/s	
■ Wbm	■ STon	■ LTon/d	
■ Ns/m	■ lb/d	■ LTon/h	
■ 1/Jm <sup>3</sup>	■ lb/h	■ LTon/min	
■ e/Vm <sup>3</sup>	■ lb/min	■ LTon/s	
■ m <sup>3</sup> /C	■ lb/s	■ gal/d (imp)	
■ (1/32 millisecond)/min	■ STon/d	■ gal/h (imp)	
■ °C	■ STon/h	■ gal/min (imp)	
■ '	■ STon/min	■ gal/s (imp)	
■ "	■ STon/s	■ lb/gal (imp)	
■ rad	■ mile	■ Mgal/min (imp)	
■ °	■ yd	■ Mgal/h (imp)	
■ gon	■ ft <sup>2</sup>	■ Mgal/d (imp)	
■ µm	■ in <sup>2</sup>	■ kgal/d (imp)	
■ mm	■ mile <sup>2</sup>	■ kgal/h (imp)	
■ cm <sup>3</sup>	■ yd <sup>2</sup>	■ kgal/min (imp)	
■ dm <sup>3</sup>	■ ft <sup>3</sup>	■ kgal/s (imp)	
■ hl	■ gal (us)	■ µgal/d (imp)	
■ l	■ quart	■ µgal/h (imp)	
■ ml	■ pint	■ µgal/min (imp)	
■ s	■ yd <sup>3</sup>	■ µgal/s (imp)	
■ min	■ mile <sup>3</sup>	■ mgal/d (imp)	
■ d	■ in <sup>3</sup>	■ mgal/h (imp)	
■ h	■ bushel	■ mgal/min (imp)	
■ ks	■ bbl (us;oil)	■ mgal/s (imp)	
■ µs	■ ft/s	■ Mgal/s (imp)	
■ ms	■ ft/h	■ µbbl/d (us;oil)	
■ m/h	■ lb	■ µbbl/h (us;oil)	
■ m/s	■ ft/min	■ µbbl/min (us;oil)	
■ mm/s	■ in/h	■ µbbl/s (us;oil)	
■ Hz	■ in/s	■ kImpGal	
■ g	■ yd/h	■ Btu/lb	
■ kg	■ yd/min	■ oz/ft	
■ GWh	■ yd/s		
■ J	■ lb/in <sup>3</sup>		
■ kWh	■ lb/gal (us)		
■ MWh	■ STon/yd <sup>3</sup>		
■ kcal	■ psi		
■ Mcal	■ psi a		
■ kW	■ psi g		
■ MW	■ ftlbf		
■ W	■ hp		
■ MJ/h	■ lb/ft <sup>3</sup>		
■ mV	■ MPH		
■ Ohm	■ ft <sup>3</sup> /d		
■ pF	■ ft <sup>3</sup> /h		
■ V	■ ft <sup>3</sup> /min		
■ Ml Mega	■ ft <sup>3</sup> /s		
■ mbar a	■ Sft <sup>3</sup> /h		
■ bar	■ Sft <sup>3</sup> /min		

- dB
- kPa a
- kPa g
- MPa a
- MPa g
- Pa a
- Pa g
- g/d
- g/h
- g/min
- g/s
- kg/d
- kg/h
- kg/min
- kg/s
- cm
- km
- nm
- pm
- a
- ha
- cm<sup>2</sup>
- dm<sup>2</sup>
- km<sup>2</sup>
- m<sup>2</sup>
- mm<sup>2</sup>
- mm<sup>3</sup>
- cl
- t
- kg/m<sup>3</sup>
- kg/dm<sup>3</sup>
- g/cm<sup>3</sup>
- g/m<sup>3</sup>
- kg/l
- kgf/cm<sup>2</sup>
- GJ
- kJ
- MJ
- km/h
- kt
- m/s<sup>2</sup>
- GHz
- kHz
- MHz
- 1/min
- 1/s
- THz
- rad/s
- 1/s<sup>2</sup>
- Mg
- mg
- g/l
- g/ml
- Mg/m<sup>3</sup>
- t/m<sup>3</sup>
- mg/m
- tex
- kg/m
- kgm/s
- gal/d (us)
- gal/h (us)
- gal/min (us)
- gal/s (us)
- Mgal/d (us)
- bbl/d (us;oil)
- bbl/h (us;oil)
- bbl/min (us;oil)
- bbl/s (us;oil)
- Mgal/h (us)
- Mgal/min (us)
- Mgal/s (us)
- Mgal (us)
- af
- af/d
- af/h
- af/min
- af/s
- bbl/d (us;beer)
- bbl/h (us;beer)
- bbl/min (us;beer)
- bbl/s (us;beer)
- kgal/d (us)
- kgal/h (us)
- kgal/min (us)
- kgal/s (us)
- µgal/d (us)
- µgal/h (us)
- µgal/min (us)
- µgal/s (us)
- mgal/d (us)
- mgal/h (us)
- mgal/min (us)
- mgal/s (us)
- Mbbl/d (us;oil)
- Mbbl/h (us;oil)
- Mbbl/min (us;oil)
- Mbbl/s (us;oil)
- mbbl/d (us;oil)
- mbbl/h (us;oil)
- mbbl/min (us;oil)
- mbbl/s (us;oil)
- kft<sup>3</sup>/d
- kft<sup>3</sup>/h
- kft<sup>3</sup>/min
- kft<sup>3</sup>/s
- mft<sup>3</sup>/d
- mft<sup>3</sup>/h
- mft<sup>3</sup>/min
- mft<sup>3</sup>/s
- kbbl(US Beer)/d
- kbbl(US Beer)/h
- kbbl(US Beer)/min
- ubbl(US Beer)/min
- ubbl(US Beer)/s
- mbbl(US Beer)/d
- mbbl(US Beer)/h
- mbbl(US Beer)/min
- mbbl(US Beer)/s

- kgm<sup>2</sup>
- kgm<sup>2</sup>/s
- kNm
- MNm
- mNm
- Nm
- kN
- MN
- $\mu$ N
- mN
- N
- mN/m
- N/m
- atm
- GPa
- hPa
- kPa
- MPa
- $\mu$ Pa
- mPa
- Pa
- torr
- gf/cm<sup>2</sup>
- cal
- EJ
- mJ
- PJ
- TJ
- TWh
- Wh
- GW
- $\mu$ W
- mW
- nW
- pW
- TW
- Mcal/h
- kcal/d
- kcal/h
- kcal/min
- kcal/s
- Mcal/d
- Mcal/min
- Mcal/s
- kJ/d
- kJ/h
- kJ/min
- kJ/s
- A
- mA
- kA
- $\mu$ A
- nA
- pA
- C
- kC
- MC
- $\mu$ C
- nC
- kgal (us)
- ac-in/d
- ac-in/h
- ac-in/m
- ac-in/s
- Mft<sup>3</sup>/d
- ac-in
- Mft<sup>3</sup>
- inH2Oa
- inH2Og
- inH2O a(4°C)
- inH2Og(4°C)
- inH2O a(68°F)
- inH2Og(68°F)
- ftH2Oa
- ftH2Og
- ftH2O a(4°C)
- ftH2Og(4°C)
- ftH2O a(68°F)
- ftH2Og(68°F)
- inHga
- inHgg
- inHg a(0°C)
- inHgg(0°C)
- klb(US)/d
- klb(US)/h
- klb(US)/min
- klb(US)/s
- MSft<sup>3</sup>/D
- mils/yr
- ft/s<sup>2</sup>
- MLB/H
- lbf-in/deg

- pC
- Ah
- W/mK
- m2K/W
- W/m<sup>2</sup>K
- J/K
- kJ/K
- J/(kgK)
- kJ/(kgK)
- J/kg
- kJ/kg
- MJ/kg
- C/cm<sup>3</sup>
- C/m<sup>3</sup>
- C/mm<sup>3</sup>
- kC/m<sup>3</sup>
- $\mu$ C/m<sup>3</sup>
- mC/m<sup>3</sup>
- C/cm<sup>2</sup>
- C/m<sup>2</sup>
- C/mm<sup>2</sup>
- kC/m<sup>2</sup>
- $\mu$ C/m<sup>2</sup>
- mC/m<sup>2</sup>
- kV/m
- MV/m
- $\mu$ V/m
- mV/m
- V/cm
- V/m
- kV
- MV
- $\mu$ V
- F
- $\mu$ F
- mF
- nF
- F/m
- A/cm<sup>2</sup>
- kA/m<sup>2</sup>
- MA/m<sup>2</sup>
- A/cm
- A/m
- kA/m
- $\mu$ T
- mT
- nT
- T
- mWb
- Wb
- kWb/m
- Wb/m
- H
- $\mu$ H
- mH
- nH
- pH
- H/m
- $\mu$ H/m

- nH/m
- Am<sup>2</sup>
- GOhm
- kOhm
- MOhm
- $\mu$ Ohm
- mOhm
- kS
- $\mu$ S
- $\mu$ S/cm
- mS
- S
- t/d
- t/h
- t/min
- t/s
- %
- m<sup>3</sup>/d
- m<sup>3</sup>/h
- m<sup>3</sup>/min
- m<sup>3</sup>/s
- GOhmm
- kOhmm
- MOhmm
- $\mu$ Ohmm
- mOhmm
- nOhmm
- Ohmcm
- Ohmm
- kS/m
- MS/m
- $\mu$ S/mm
- mS/cm
- S/m
- sr
- l/d
- l/h
- l/min
- l/s
- Ml/d
- kW/m<sup>2</sup>
- W/(sr·m<sup>2</sup>)
- cd
- cd/m<sup>2</sup>
- lm
- lm/m<sup>2</sup>
- lm/W
- lmh
- lms
- lx
- lxs
- $\mu$ W/m<sup>2</sup>
- mW/m<sup>2</sup>
- pW/m<sup>2</sup>
- Pas/m<sup>3</sup>
- Pas/m
- ppm
- MJ/d
- MJ/min

- MJ/s
- cm<sup>3</sup>/d
- cm<sup>3</sup>/h
- cm<sup>3</sup>/min
- cm<sup>3</sup>/s
- Nm<sup>3</sup>
- Nm<sup>3</sup>/d
- Nm<sup>3</sup>/h
- Nm<sup>3</sup>/min
- Nm<sup>3</sup>/s
- Sm<sup>3</sup>
- Sm<sup>3</sup>/d
- Sm<sup>3</sup>/h
- Sm<sup>3</sup>/min
- Sm<sup>3</sup>/s
- NI
- NI/d
- NI/h
- NI/min
- NI/s
- Sl
- ml/min
- B
- ppb
- ppth
- Balling
- km<sup>3</sup>/d
- km<sup>3</sup>/h
- km<sup>3</sup>/min
- km<sup>3</sup>/s
- Mm<sup>3</sup>/d
- Mm<sup>3</sup>/h
- Mm<sup>3</sup>/min
- Mm<sup>3</sup>/s
- µm<sup>3</sup>/d
- µm<sup>3</sup>/h
- µm<sup>3</sup>/min
- µm<sup>3</sup>/s
- mm<sup>3</sup>/d
- mm<sup>3</sup>/h
- mm<sup>3</sup>/min
- mm<sup>3</sup>/s
- kl/d
- kl/h
- kl/min
- kl
- Sl/d
- Sl/h
- Sl/min
- Sl/s
- kL/s
- Ml/h
- Ml/min
- Mm<sup>3</sup>/d
- Mm<sup>3</sup>
- GPa a
- GPa g
- mPa a
- mPa g

- $\mu\text{Pa}$  a
- $\mu\text{Pa}$  g
- hPa a
- hPa g
- gf/cm<sup>2</sup> a
- gf/cm<sup>2</sup> g
- kgf/cm<sup>2</sup> a
- kgf/cm<sup>2</sup> g
- mBarg
- $\mu\text{bar}$
- Gy
- kcal/kg
- mGy
- mSv
- rad
- rem
- Sv
- Bq
- kBq
- MBq
- cnt/s
- MSft<sup>3</sup>/d
- SCCM
- dm
- mm/yr
- g/m
- $\mu\text{g}/\text{m}^3$
- $\mu\text{g}/\text{l}$
- mg/m<sup>3</sup>
- kmol
- $\mu\text{mol}$
- mmol
- mol
- mol/dm<sup>3</sup>
- mol/m<sup>3</sup>
- mol/l
- cm<sup>3</sup>/mol
- dm<sup>3</sup>/mol
- m<sup>3</sup>/mol
- g/mol
- kg/mol
- l/mol
- mmol/kg
- mol/kg
- mg/l
- $\mu\text{S}/\text{m}$
- mS/m
- nS/cm
- S/cm
- kOhmcm
- MOhmcm
- l/m<sup>3</sup>
- L/m
- $\mu\text{L}/\text{L}$
- ml/m<sup>3</sup>
- ml/l
- %Sat
- % sol/vol
- % sol/mass

- %vol
- WT-%
- J/mol
- kJ/mol
- J/(molK)
- Bq/kg
- kBq/kg
- MBq/kg
- mV/K
- V/K
- J/g
- mV/pH
- pH
- pH/°C
- mV/%
- %/s
- %/V
- nA/ppm
- 1/32 ms
- 1/H
- /cm
- 1/K
- 1/m
- 1/mm
- A/hPa
- A/Pa
- Nm<sup>2</sup>/A
- Pa/A
- pA/hPa
- C/kg
- mC/kg
- dyne-cm/deg
- newton-m/deg
- bar a
- bar g

*Custom-specific units*  
PV/Sec

**Factory setting**

K

**Additional information**

*Result*

The selected unit applies for:

- **Value** parameter (→ 171)
- **Value** parameter (→ 174)
- **EU at 100%** parameter (→ 180)
- **EU at 0%** parameter (→ 180)
- **Low Cutoff** parameter (→ 197)
- **High High Limit** parameter (→ 205)
- **Float Value** parameter (→ 209)
- **High Limit** parameter (→ 206)
- **Float Value** parameter (→ 211)
- **Low Limit** parameter (→ 207)
- **Float Value** parameter (→ 212)
- **Low Low Limit** parameter (→ 207)
- **Float Value** parameter (→ 214)

---

**Decimal**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Decimal (6961–1 to n)

**Description** Use this function to select the number of decimal places for the input value from the transducer block (input value).

**User entry** -128 to 127

**Factory setting** 0

---

**Grant**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Grant (6926–1 to n)

**Description** Option for releasing certain access authorizations of the field bus host system on the device.

**Selection**

- Program
- Tune
- Alarm
- Local
- Operate
- Service
- Diagnostic

---

**Deny**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Deny (6925–1 to n)

**Description** Option for restricting certain access authorizations of the field bus host system on the device.

**Selection**

- Program Denied
- Tune Denied
- Alarm Denied
- Local
- Operate Denied

---

**I/O Options**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → I/O Options (6941–1 to n)

**Description** Option for activating the low flow cut off.

**Selection** Low Cutoff

**Additional information**      *Description*

 The limit value for the low flow cut off is defined in **Low Cutoff** parameter  
(→  197).

---

**Channel****Navigation**

 Expert → Analog inputs → Analog input 1 to n → Channel (6902–1 to n)

**Description**

Use this function to select the input value that should be processed in the analog input function block.

**Selection**

- Uninitialized
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity
- CorrConductivity
- Temperature
- Electronic temp.
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Current input 1 \*

**Factory setting**

Uninitialized

---

**Status Options****Navigation**

 Expert → Analog inputs → Analog input 1 to n → Status Options (6971–1 to n)

**Prerequisite**

The measuring device must be in the OOS operating mode so that the parameter can be edited.

**Description**

Use this function to select an option for the status of the output value that is supported by the analog input block.

**Selection**

- Propag Fault Fwd
- Uncertain if Lim
- Bad if Limited
- Uncertain if Man

---

\* Visibility depends on order options or device settings

**Additional information****Options****■ Propag Fault Fwd**

If the measuring device has the status **Bad DeviceFailure** or **Bad SensorFailure**, the device continues to measure and no alarm is triggered. The use of this substatus in the output value (OUT) is defined by **Propag Fault Fwd** option. With the aid of this option, the user/operator can specify whether the alarm generation (sending an alarm) is triggered by the block or is forwarded downstream.

**■ Uncertain if Lim**

If the measured or calculated value reaches a limit value, **Uncertain if Lim** option is used for the output status.

**■ Bad if Limited**

If the measured value exceeds or falls below an upper or lower limit value, **Bad if Limited** option is used as the output status.

**■ Uncertain if Man**

If the Actual mode of the function block is in the **Man** option operating mode, **Uncertain if Man** option is used as the output status.

**Lin Type****Navigation**
 Expert → Analog inputs → Analog input 1 to n → Lin Type (6905–1 to n)
**Description**

Use this function to select the type of linearization of the input or simulation value.

**Selection**

- Uninitialized
- Direct
- Indirect
- Indirect Sq Root

**Factory setting**

Uninitialized

**Additional information***"Uninitialized" option*

The function block does not switch to Auto operating mode.

*"Direct" option*

The measured value from the transducer block (input value) bypasses the linearization function and is routed unchanged through the analog input function block ( $Xd\_Scale = Out\_Scale$ ). This is selected if the input value already has the required physical units.

$PV = \text{Input value}$

The units in Units index (→  180) ( $Xd\_Scale$ ) and Units index (→  184) ( $Out\_Scale$ ) must be the same. Otherwise, the function block will remain in the OOS operating mode and the BlockConfigurat block error is displayed in Block Error (→  169).

*"Indirect" option*

The measured value from the transducer block (input value) is linearly rescaled via the  $Xd\_Scale$  input scaling to the required  $Out\_Scale$  output range.

$$PV = \frac{X}{100} \cdot (Y - Z) - Z$$

A0024820

PV Primary value

X Value (→ 200) (Field\_Val)

Y EU at 100% (→ 183) (Out\_Scale)

Z EU at 0% (→ 184) (Out\_Scale)

*"Indirect Sq Root" option*

The measured value from the transducer block (input value ) is rescaled via the Xd\_Scale parameter group and recalculated using a root function. It is then rescaled again to the required output range via the Out\_Scale parameter group.

$$PV = \sqrt{\frac{X}{100}} \cdot (Y - Z) - Z$$

A0024847

PV Primary value

X Value (→ 200) (Field\_Val)

Y EU at 100% (→ 183) (Out\_Scale)

Z EU at 0% (→ 184) (Out\_Scale)


*Example*

- System unit in transducer block: kg/h
- Sensor measuring range: 0 to 30 kg/h
- Output range for the automation system: 0 to 100 %

The analog input function block must be configured as follows:

1. In **Channel** parameter (→ 194), select **Mass flow** option.
2. In **Lin Type** parameter (→ 195), select **Indirect** option.
  - ↳ The "Volume Flow" process variable of the transducer block "Flow" is linearly rescaled in the AI block to the required Out\_Scale output range via the Xd\_Scale input scaling.
3. In the Xd\_Scale parameter group:
  - ↳ **EU at 0%** parameter (→ 180), enter the value 0.
  - In **EU at 100%** parameter (→ 180), enter the value 30.
  - In **Units index** parameter (→ 180), select **kg/h** option.
4. In the Out\_Scale parameter group:
  - ↳ **EU at 0%** parameter (→ 184), enter the value 0.
  - In **EU at 100%** parameter (→ 183), enter the value 100.
  - In **Units index** parameter (→ 184), select **%** option.

The result is that an input value of 15 kg/h, for example, outputs a value of 50 % via the **Value** parameter (→ 174).

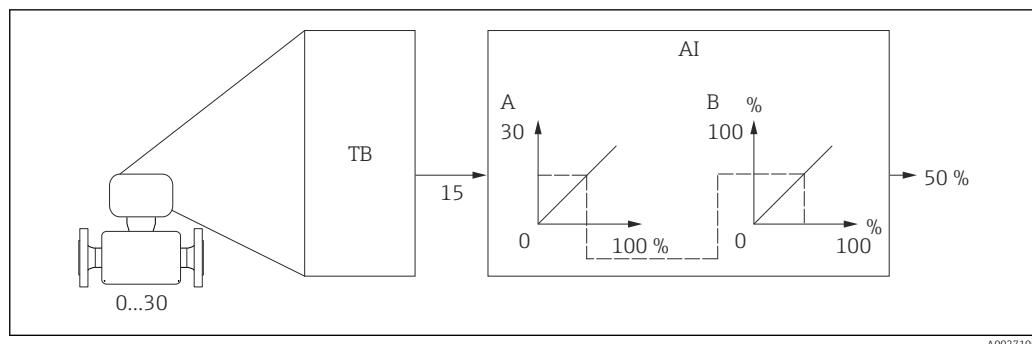

10 Engineering unit in kg/h

## Low Cutoff

### Navigation

Expert → Analog inputs → Analog input 1 to n → Low Cutoff (6956–1 to n)

### Description

Use this function to enter a limit value for low flow cut off.

### User entry

Positive floating-point number

### Factory setting

0

### Additional information

#### Description

If the converted input value (PV) falls below this limit value, then it is set to zero.

The low flow cut off is enabled via **I/O Options** parameter (→ 193).

#### Dependency

The unit is taken from the: **Units index** parameter (→ 184)

## Status

### Navigation

Expert → Analog inputs → Analog input 1 to n → Status (6923–1 to n)

### Description

Displays the status of the unprocessed measured value from the device, which reflects the status of the transducer before signal transmission.

### User interface

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)

- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)

- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

**Value**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Value (6924–1 to n)
<b>Description</b>	Displays the unprocessed measured value from the device as a % of the primary value (PV).
<b>User interface</b>	Signed floating-point number

**PV Filter Time**

<b>Navigation</b>	  Expert → Analog inputs → Analog input 1 to n → PV Filter Time (6909–1 to n)
<b>Description</b>	Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).
<b>User entry</b>	Positive floating-point number
<b>Factory setting</b>	0 s
<b>Additional information</b>	<i>Factory setting</i>  If the value 0 s is entered, filtering will not be performed.

**Unacknowledged**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6978–1 to n)
<b>Description</b>	Option for manually acknowledging an update of the static block parameter.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Uninitialized</li><li>▪ Acknowledged</li><li>▪ Unacknowledged</li></ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<i>Description</i>  ▪ If a new diagnostic event occurs, the measuring device sets <b>Unacknowledged</b> option. ▪ If the diagnostic event has been acknowledged, the user can set <b>Acknowledged</b> option.

---

## Update State

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Update State (6979–1 to n)
<b>Description</b>	Displays the status of an update of the static block parameter. The status indicates whether the update was communicated or not.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Reported</li><li>■ Not Reported</li></ul>

---

## Time Stamp

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6977–1 to n)
<b>Description</b>	Displays the time stamp indicating when the analysis of the block was started and when a status change of an update to the static block parameter that has not yet been communicated was identified. The time stamp is retained until the update confirmation is received.
<b>User interface</b>	Days (d), hours (h), minutes (m), seconds (s)

---

## Static revision

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Static revision (6976–1 to n)
<b>Description</b>	Displays the Static revision: Each instance of a static block parameter being accessed with write and communicate access due to an update is counted (event counter).
<b>User interface</b>	0 to 65 535

---

## Relative Index

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Relative Index (6975–1 to n)
<b>Description</b>	Displays the relative index of the static block parameter that triggered the alarm (OD index minus field bus start index).
<b>User interface</b>	0 to 65 535

## Unacknowledged

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6920-1 to n)
<b>Description</b>	Description for manually acknowledging a block alarm.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Acknowledged</li><li>■ Unacknowledged</li></ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p> <p>If <b>Blk Alm Auto Ack</b> option is not enabled in <b>Ack. Option</b> parameter (→  204), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option. ■ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.</p>

---

## Alarm State

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6917-1 to n)
<b>Description</b>	Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Clear-Reported</li><li>■ ClearNotReported</li><li>■ Active-Reported</li><li>■ ActiveNotRep</li></ul>

---

## Time Stamp

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6919-1 to n)
<b>Description</b>	Displays the time stamp indicating when the analysis of the block was started and when a status change of the block alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
<b>User interface</b>	Days (d), hours (h), minutes (m), seconds (s)

---

**Subcode**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Subcode (6918-1 to n)
<b>Description</b>	Displays the specific cause of the block alarm.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Other</li><li>■ BlockConfigurat</li><li>■ LinkConfigurat</li><li>■ SimulationActive</li><li>■ LocalOverride</li><li>■ DeviceFaultState</li><li>■ DeviceMainten</li><li>■ SensorFailure</li><li>■ OutputFailure</li><li>■ MemoryFailure</li><li>■ LostStaticData</li><li>■ LostNVData</li><li>■ ReadbackCheck</li><li>■ MaintenanceNeed</li><li>■ PowerUp</li><li>■ OutOfService</li></ul>

---

**Value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Value (6921-1 to n)
<b>Description</b>	Displays the value of the affected parameter at the time at which the block alarm was detected.
<b>User interface</b>	0 to 255

---

**Current**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Current (6912-1 to n)
<b>Description</b>	Use this function to view the current status of the process alarms.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ HiHi Alarm</li><li>■ Hi Alarm</li><li>■ LoLo Alarm</li><li>■ Lo Alarm</li><li>■ Block Alarm</li></ul>

**Unacknowledged**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6914–1 to n)
<b>Description</b>	Displays an unacknowledged process alarm.
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ HiHi Alarm Unack</li><li>▪ Hi Alm Unack</li><li>▪ LoLo Alm Unack</li><li>▪ Lo Alm Unack</li><li>▪ Block Alm Unack</li></ul>

**Unreported**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unreported (6915–1 to n)
<b>Description</b>	Displays a process alarm that has not been communicated.
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ HiHi Alm Unrep</li><li>▪ Hi Alm Unrep</li><li>▪ LoLo Alm Unrep</li><li>▪ Lo Alm Unrep</li><li>▪ Block Alm Unrep</li></ul>

**Disabled**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Disabled (6913–1 to n)
<b>Description</b>	Option for disabling a process alarm category.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ HiHi Alm Disabl</li><li>▪ Hi Alm Disabled</li><li>▪ LoLo Alm Disabl</li><li>▪ Lo Alm Disabled</li><li>▪ Block Alm Disabl</li></ul>

**Ack. Option**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Ack. Option (6910–1 to n)
<b>Description</b>	Option for automatic acknowledgment of process alarms in a specific category.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ HiHi Alm Aut Ack</li><li>▪ Hi Alm Auto Ack</li><li>▪ LoLo Alm Aut Ack</li><li>▪ Lo Alm Auto Ack</li></ul>

- Blk Alm Auto Ack
- Fail Alm Aut Ack
- OffSpecAlmAutAck
- Maint Alm AutAck
- Check Alm AutAck

**Additional information***Description*

Use this function to determine whether an alarm must be acknowledged via the field bus host system.

 If the process alarm option has not been enabled in this parameter, this process alarm must only be acknowledged in **Unacknowledged** parameter (→ 204). **Current** parameter (→ 203) indicates the current status of all process alarms.

**Alarm Hysteresis**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Alarm Hysteresis (6911–1 to n)
<b>Description</b>	Use this function to enter the hysteresis value for the upper and lower warning or alarm limit values.
<b>User entry</b>	0.000000 to 50.0000 %
<b>Factory setting</b>	0 %

**Hi Hi Priority**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Hi Hi Priority (6938–1 to n)
<b>Description</b>	Use this function to enter the priority for the upper alarm limit, which determines the behavior in the event of an active limit value violation.
<b>User entry</b>	0 to 15
<b>Factory setting</b>	0

**High High Limit**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → High High Limit (6937–1 to n)
<b>Description</b>	Use this function to enter the value for the upper alarm limit.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0

**Additional information***Dependency*

The unit is taken from the: **Units index** parameter (→ 184)

---

**High Priority**

---

**Navigation**

Expert → Analog inputs → Analog input 1 to n → High Priority (6940–1 to n)

**Description**

Use this function to enter the priority for the upper early warning limit, which determines the behavior in the event of an active limit value violation.

**User entry**

0 to 15

**Factory setting**

0

---

**High Limit**

---

**Navigation**

Expert → Analog inputs → Analog input 1 to n → High Limit (6939–1 to n)

**Description**

Use this function to enter the value for the upper early warning limit.

**User entry**

Signed floating-point number

**Factory setting**

0

**Additional information***Dependency*

The unit is taken from the: **Units index** parameter (→ 184)

---

**Low Priority**

---

**Navigation**

Expert → Analog inputs → Analog input 1 to n → Low Priority (6955–1 to n)

**Description**

Use this function to enter the priority for the lower early warning limit, which determines the behavior in the event of an active limit value violation.

**User entry**

0 to 15

**Factory setting**

0

---

## Low Limit

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Low Limit (6947–1 to n)
<b>Description</b>	Use this function to enter the value for the lower early warning limit.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the: <b>Units index</b> parameter (→  184)

---

## Low Low Priority

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Low Low Priority (6954–1 to n)
<b>Description</b>	Use this function to enter the priority for the lower alarm limit, which determines the behavior in the event of an active limit value violation.
<b>User entry</b>	0 to 15
<b>Factory setting</b>	0

---

## Low Low Limit

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Low Low Limit (6953–1 to n)
<b>Description</b>	Use this function to enter the value for the lower alarm limit.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the: <b>Units index</b> parameter (→  184)

---

## Unacknowledged

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6935–1 to n)
<b>Description</b>	Option for manually acknowledging a process alarm that has exceeded the upper alarm limit (High High Limit (→  205)).

<b>Selection</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Acknowledged</li><li>■ Unacknowledged</li></ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p> <p>If <b>HiHi Alm Aut Ack</b> option is not enabled in <b>Ack. Option</b> parameter (→ 204), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option. ■ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.</p>

---

## Alarm State

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6932-1 to n)
<b>Description</b>	Displays the status of the process alarm for the upper alarm limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Clear-Reported</li><li>■ ClearNotReported</li><li>■ Active-Reported</li><li>■ ActiveNotRep</li></ul>

---

## Time Stamp

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6934-1 to n)
<b>Description</b>	Displays the time stamp of the process alarm for the upper alarm limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
<b>User interface</b>	Days (d), hours (h), minutes (m), seconds (s)

---

## Subcode

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Subcode (6933-1 to n)
<b>Description</b>	Displays the specific cause of the process alarm for the upper alarm limit.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Other</li><li>■ BlockConfigurat</li><li>■ LinkConfigurat</li></ul>

- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

## Float Value

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Float Value (6936–1 to n)
<b>Description</b>	Displays the value of the affected parameter at the time at which the process alarm for the upper alarm limit was triggered.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<p><i>Dependency</i></p>  The unit is taken from the: <b>Units index</b> parameter (→  184)

## Unacknowledged

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6930–1 to n)
<b>Description</b>	Option for manually acknowledging a process alarm that has exceeded the upper early warning limit (High Limit) (→  206)).
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ Acknowledged</li> <li>■ Unacknowledged</li> </ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p> <p>If <b>Hi Alm Auto Ack</b> option is not enabled in <b>Ack. Option</b> parameter (→  204), the process alarm must be manually acknowledged in this parameter.</p>  ■ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option. ■ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.

**Alarm State**

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Alarm State (6927–1 to n)

**Description** Displays the status of the process alarm for the upper early warning limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.

**User interface**

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

---

**Time Stamp**

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Time Stamp (6929–1 to n)

**Description** Displays the time stamp of the process alarm for the upper early warning limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

**User interface**

Days (d), hours (h), minutes (m), seconds (s)

---

**Subcode**

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Subcode (6928–1 to n)

**Description** Displays the specific cause of the process alarm for the upper early warning limit.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

**Float Value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Float Value (6931–1 to n)
<b>Description</b>	Displays the value of the affected parameter at the time at which the process alarm for the upper early warning limit was triggered.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<p><i>Dependency</i></p>  The unit is taken from the: <b>Units index</b> parameter (→  184)

---

**Unacknowledged**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6945–1 to n)
<b>Description</b>	Option for manually acknowledging a process alarm that has exceeded the lower early warning limit (Low Limit (→  207))).
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Uninitialized</li> <li>▪ Acknowledged</li> <li>▪ Unacknowledged</li> </ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p> <p>If <b>Lo Alm Auto Ack</b> option is not enabled in <b>Ack. Option</b> parameter (→  204), the process alarm must be manually acknowledged in this parameter.</p>  <ul style="list-style-type: none"> <li>▪ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option.</li> <li>▪ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.</li> </ul>

---

**Alarm State**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6942–1 to n)
<b>Description</b>	Displays the status of the process alarm for the lower early warning limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Uninitialized</li> <li>▪ Clear-Reported</li> <li>▪ ClearNotReported</li> <li>▪ Active-Reported</li> <li>▪ ActiveNotRep</li> </ul>

**Time Stamp**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Time Stamp (6944–1 to n)

**Description** Displays the time stamp of the process alarm for the lower early warning limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

**User interface** Days (d), hours (h), minutes (m), seconds (s)

---

**Subcode**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Subcode (6943–1 to n)

**Description** Displays the specific cause of the process alarm for the lower early warning limit.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

**Float Value**

---

**Navigation**  Expert → Analog inputs → Analog input 1 to n → Float Value (6946–1 to n)

**Description** Displays the value of the affected parameter at the time at which the process alarm for the lower early warning limit was triggered.

**User interface** Signed floating-point number

**Additional information** *Dependency*

 The unit is taken from the: **Units index** parameter (→  184)

---

## Unacknowledged

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Unacknowledged (6951–1 to n)
<b>Description</b>	Option for manually acknowledging a process alarm that has exceeded the lower alarm limit (Low Low Limit (→  207)).
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Acknowledged</li><li>■ Unacknowledged</li></ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p> <p>If <b>LoLo Alm Aut Ack</b> option is not enabled in <b>Ack. Option</b> parameter (→  204), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option. ■ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.</p>

---

## Alarm State

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Alarm State (6948–1 to n)
<b>Description</b>	Displays the status of the process alarm for the lower alarm limit. The status indicates whether the process alarm is active and whether it has already been communicated to the field bus host system.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Clear-Reported</li><li>■ ClearNotReported</li><li>■ Active-Reported</li><li>■ ActiveNotRep</li></ul>

---

## Time Stamp

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Time Stamp (6950–1 to n)
<b>Description</b>	Displays the time stamp of the process alarm for the lower alarm limit. This records the time at which analysis of the block was started and at which a status change of the process alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.
<b>User interface</b>	Days (d), hours (h), minutes (m), seconds (s)

**Subcode**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Subcode (6949–1 to n)
<b>Description</b>	Displays the specific cause of the process alarm for the lower alarm limit.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Other</li><li>■ BlockConfigurat</li><li>■ LinkConfigurat</li><li>■ SimulationActive</li><li>■ LocalOverride</li><li>■ DeviceFaultState</li><li>■ DeviceMainten</li><li>■ SensorFailure</li><li>■ OutputFailure</li><li>■ MemoryFailure</li><li>■ LostStaticData</li><li>■ LostNVData</li><li>■ ReadbackCheck</li><li>■ MaintenanceNeed</li><li>■ PowerUp</li><li>■ OutOfService</li></ul>

**Float Value**

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Float Value (6952–1 to n)
<b>Description</b>	Displays the value of the affected parameter at the time at which the process alarm for the lower alarm limit was triggered.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the: <b>Units index</b> parameter (→  184)

**Block err.desc.**


<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to n → Block err.desc. (6984–1 to n)
<b>Description</b>	Displays the Block err.desc.: Specifies a more detailed reason or cause for the Block Error (→  169).
<b>User interface</b>	<ul style="list-style-type: none"><li>■ RS in OOS</li><li>■ Channel undef.</li><li>■ Blk. not sched.</li></ul>

- LType undefined
- Unit Inconsist.
- Sensor failure

## 3.8 "Discrete inputs" submenu

*Navigation*


Expert → Discrete inputs

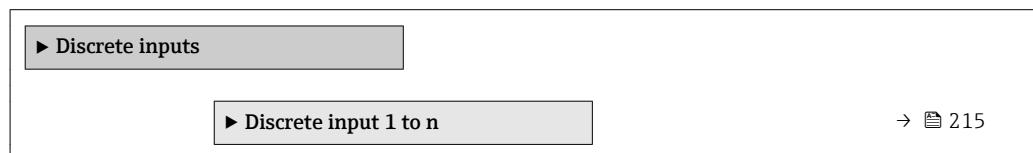

### 3.8.1 "Discrete input 1 to n" submenu

*Navigation*

Expert → Discrete inputs → Discrete input 1 to n

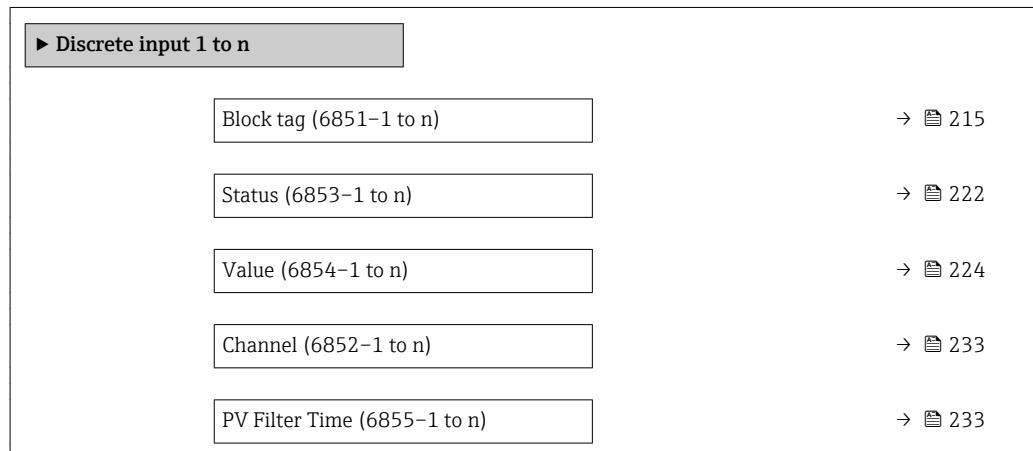


---

#### Block tag

---

**Navigation**

Expert → Discrete inputs → Discrete input 1 to n → Block tag (6851-1 to n)

**Description**

Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.

**User entry**

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

## Static Revision

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Static Revision (6884–1 to n)
<b>Description</b>	Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).
<b>User interface</b>	0 to FFFF
<b>Additional information</b>	<i>Description</i>  Static parameters are parameters that are not changed by the process.

---

## Tag Description

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Tag Description (6885–1 to n)
<b>Description</b>	Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.
<b>User entry</b>	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Strategy

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Strategy (6883–1 to n)
<b>Description</b>	Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.
<b>User entry</b>	0 to FFFF
<b>Factory setting</b>	0

---

## Alert Key

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Alert Key (6846–1 to n)
<b>Description</b>	Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.
<b>User entry</b>	0 to 0xFF
<b>Factory setting</b>	1

---

## Target mode

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Target mode (6873–1 to n)
<b>Description</b>	Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>
<b>Factory setting</b>	OOS
<b>Additional information</b>	<i>Options</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→  139)

---

## Actual mode

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Actual mode (6870–1 to n)
<b>Description</b>	Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode in which the function block is currently operating. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→  217).
<b>User interface</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>
<b>Additional information</b>	<i>User interface</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→  139)

## Permitted mode

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Permitted mode (6872–1 to n)
<b>Description</b>	Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→ <a href="#">217</a> ) for the function block. The operating modes that are supported vary depending on the type and function of the block.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ ROut</li><li>▪ RCas</li><li>▪ Cas</li><li>▪ Auto</li><li>▪ Man</li><li>▪ LO</li><li>▪ IMan</li><li>▪ OOS</li></ul>
<b>Factory setting</b>	<ul style="list-style-type: none"><li>▪ Auto</li><li>▪ OOS</li></ul>
<b>Additional information</b>	<i>Options</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→ <a href="#">139</a> )

---

## Normal mode

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Normal mode (6871–1 to n)
<b>Description</b>	Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ ROut</li><li>▪ RCas</li><li>▪ Cas</li><li>▪ Auto</li><li>▪ Man</li><li>▪ LO</li><li>▪ IMan</li><li>▪ OOS</li></ul>
<b>Additional information</b>	<i>Options</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→ <a href="#">139</a> )

---

**Block Error**

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Block Error (6857–1 to n)

**Description** Displays the short text for the Block Error that has occurred in the function block.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

**Status**

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Status (6875–1 to n)

**Description** Displays the status of the discrete input value (PV).

**User interface**

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)

- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)

- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

---

**Value**

---

**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to n → Value (6876–1 to n)

**Description**

Displays the discrete process variable that is used for the block implementation.

**User interface**

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- Verificaton overall result=failed
- Status=Check not done/Result=failed
- Status=failed/Result=failed

- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done
- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

---

## Status

---

**Navigation**

 Expert → Discrete inputs → Discrete input 1 to n → Status (6853–1 to n)

**Description**

Displays the status of the discrete output value.

**User interface**

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)

- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)

- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

---

**Value**

---

**Navigation**

 Expert → Discrete inputs → Discrete input 1 to n → Value (6854-1 to n)

**Description**

Use this function to select the discrete output value.

**Selection**

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- State 15
- Verificaton overall result=failed
- Status=Check not done/Result=failed
- Status=failed/Result=failed
- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done

- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

**Factory setting** Low flow or PFS Stat.=Not active

---

## Simulate Status

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Simulate Status (6878–1 to n)

**Description** Use this function to select the status that is used for the transducer block simulation.

- Selection**
- Bad (0x00)
  - Bad (0x01)
  - Bad (0x02)
  - Bad (0x03)
  - Bad (0x04)
  - Bad (0x05)
  - Bad (0x06)
  - Bad (0x07)
  - Bad (0x08)
  - Bad (0x09)
  - Bad (0x0A)
  - Bad (0x0B)
  - Bad (0x0C)
  - Bad (0x0D)
  - Bad (0x0E)
  - Bad (0x0F)
  - Bad (0x10)
  - Bad (0x11)
  - Bad (0x12)
  - Bad (0x13)
  - Bad (0x14)
  - Bad (0x15)
  - Bad (0x16)
  - Bad (0x17)
  - Bad (0x18)
  - Bad (0x19)
  - Bad (0x1A)
  - Bad (0x1B)
  - Bad (0x1C)
  - Bad (0x1D)
  - Bad (0x1E)
  - Bad (0x1F)
  - Uncertain (0x40)
  - Uncertain (0x41)
  - Uncertain (0x42)
  - Uncertain (0x43)
  - Uncertain (0x44)
  - Uncertain (0x45)
  - Uncertain (0x46)
  - Uncertain (0x47)
  - Uncertain (0x48)
  - Uncertain (0x49)
  - Uncertain (0x4A)

- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)

- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

**Factory setting** Bad (0x00)

### Simulate Value

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Simulate Value (6879–1 to n)
<b>Description</b>	Use this function to select the simulation value that is used for the transducer block simulation.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Low flow or PFS Stat.=Not active</li> <li>■ Low flow or PFS Stat.=Active or Verif. stat.=Check not done</li> <li>■ Verification status=failed</li> <li>■ Verification status=busy</li> <li>■ Verification status=ready</li> <li>■ Verificaton overall result=failed</li> <li>■ Status=Check not done/Result=failed</li> <li>■ Status=failed/Result=failed</li> <li>■ Status=busy/Result=failed</li> <li>■ Status=ready/Result=failed</li> <li>■ Verificaton overall result=passed</li> <li>■ Status=Check not done/Result=passed</li> <li>■ Status=failed/Result=passed</li> <li>■ Status=busy/Result=passed</li> <li>■ Status=ready/Result=passed</li> <li>■ Verificaton overall result=Check not done</li> <li>■ Status=Check not done/Result=Check not done</li> <li>■ Status=failed/Result=Check not done</li> <li>■ Status=busy/Result=Check not done</li> <li>■ Status=ready/Result=Check not done</li> </ul>
<b>Factory setting</b>	Low flow or PFS Stat.=Not active

**Transducer Stat**

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Transducer Stat (6880-1 to n)
<b>Description</b>	Displays the current status of the transducer block.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Bad (0x00)</li><li>■ Bad (0x01)</li><li>■ Bad (0x02)</li><li>■ Bad (0x03)</li><li>■ Bad (0x04)</li><li>■ Bad (0x05)</li><li>■ Bad (0x06)</li><li>■ Bad (0x07)</li><li>■ Bad (0x08)</li><li>■ Bad (0x09)</li><li>■ Bad (0x0A)</li><li>■ Bad (0x0B)</li><li>■ Bad (0x0C)</li><li>■ Bad (0x0D)</li><li>■ Bad (0x0E)</li><li>■ Bad (0x0F)</li><li>■ Bad (0x10)</li><li>■ Bad (0x11)</li><li>■ Bad (0x12)</li><li>■ Bad (0x13)</li><li>■ Bad (0x14)</li><li>■ Bad (0x15)</li><li>■ Bad (0x16)</li><li>■ Bad (0x17)</li><li>■ Bad (0x18)</li><li>■ Bad (0x19)</li><li>■ Bad (0x1A)</li><li>■ Bad (0x1B)</li><li>■ Bad (0x1C)</li><li>■ Bad (0x1D)</li><li>■ Bad (0x1E)</li><li>■ Bad (0x1F)</li><li>■ Uncertain (0x40)</li><li>■ Uncertain (0x41)</li><li>■ Uncertain (0x42)</li><li>■ Uncertain (0x43)</li><li>■ Uncertain (0x44)</li><li>■ Uncertain (0x45)</li><li>■ Uncertain (0x46)</li><li>■ Uncertain (0x47)</li><li>■ Uncertain (0x48)</li><li>■ Uncertain (0x49)</li><li>■ Uncertain (0x4A)</li><li>■ Uncertain (0x4B)</li><li>■ Uncertain (0x4C)</li><li>■ Uncertain (0x4D)</li><li>■ Uncertain (0x4E)</li><li>■ Uncertain (0x4F)</li><li>■ Uncertain (0x50)</li><li>■ Uncertain (0x51)</li><li>■ Uncertain (0x52)</li><li>■ Uncertain (0x53)</li></ul>

- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)
- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)

- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)
- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

---

## Transducer Value

---

**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to n → Transducer Value (6881-1 to n)

**Description**

Displays the current value of the transducer block.

**User interface**

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- Verificaton overall result=failed
- Status=Check not done/Result=failed
- Status=failed/Result=failed
- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done
- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

**Factory setting**

Low flow or PFS Stat.=Not active

---

## Sim. En/Disable

---

**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to n → Sim. En/Disable (6877-1 to n)

**Description**

Use this function to enable or disable the function block simulation.

---

<b>Selection</b>	<ul style="list-style-type: none"><li>■ Uninitialized</li><li>■ Disabled</li><li>■ Active</li></ul>
------------------	---

<b>Factory setting</b>	Uninitialized
------------------------	---------------

---

## Transducer State

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Transducer State (6891-1 to n)
<b>Description</b>	Use this function to enter the transducer state: this is required by FieldValD ( <b>Status</b> parameter (→ <a href="#">233</a> ), <b>Value</b> parameter (→ <a href="#">236</a> )) to display the actual on/off status of the hardware.
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0

---

## Output State

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Output State (6874-1 to n)
<b>Description</b>	Use this function to enter the output state: This is required for scaling the discrete input value (PV).
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0

---

## Deny

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Deny (6867-1 to n)
<b>Description</b>	Option for restricting certain access authorizations of the field bus host system on the device.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Program Denied</li><li>■ Tune Denied</li><li>■ Alarm Denied</li><li>■ Local</li><li>■ Operate Denied</li></ul>

**Grant**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Grant (6868–1 to n)
<b>Description</b>	Option for releasing certain access authorizations of the field bus host system on the device.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Program</li><li>■ Tune</li><li>■ Alarm</li><li>■ Local</li><li>■ Operate</li><li>■ Service</li><li>■ Diagnostic</li></ul>

---

**I/O Options**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → I/O Options (6869–1 to n)
<b>Description</b>	Option for activating the inversion of the signal.
<b>Selection</b>	Invert
<b>Additional information</b>	<b>Description</b> This selection determines whether the discrete input is inverted before it is stored as a process variable. Normally a discrete value of 0 is regarded as a logical value of 0 and a discrete value that is not equal to 0 is regarded as a logical value of 1. If inversion is enabled, this correlation is reversed. A field device input value that is not equal to 0 results in a discrete output value of 0 and an input value of 0 results in a discrete output value of 1.

---

**Status Options**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Status Options (6882–1 to n)
<b>Prerequisite</b>	The measuring device must be in the OOS operating mode so that the parameter can be edited.
<b>Description</b>	For selecting an option for the status of the output value that is supported by the Discrete input block.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Propag Fault Fwd</li><li>■ Uncertain if Man</li></ul>

**Additional information***Options*

## ■ Propag Fault Fwd

If the measuring device indicates the status **Bad DeviceFailure** or **Bad SensorFailure**, the device continues to measure and no alarm is triggered. The use of this substatus in the output value (OUT) is defined by **Propag Fault Fwd** option. With the aid of this option, the user/operator can specify whether the alarm generation (sending an alarm) is triggered by the block or is forwarded downstream.

## ■ Uncertain if Man

If the Actual mode of the function block is in the **Man** option operating mode, **Uncertain if Man** option is used as the output status.

**Channel****Navigation**
 Expert → Discrete inputs → Discrete input 1 to n → Channel (6852–1 to n)
**Description**

Use this function to select the input value that should be processed in the discrete input function block.

**Selection**

- Uninitialized
- Empty pipe det.
- Low flow cut off
- Switch out.stat.
- Verific. status

**Factory setting**

Empty pipe det.

**PV Filter Time****Navigation**
 Expert → Discrete inputs → Discrete input 1 to n → PV Filter Time (6855–1 to n)
**Description**

Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).

**User entry**

Positive floating-point number

**Factory setting**

0 s

**Additional information***Factory setting*
 If the value 0 s is entered, filtering will not be performed.
**Status****Navigation**
 Expert → Discrete inputs → Discrete input 1 to n → Status (6865–1 to n)
**Description**

Displays the status of the discrete input value from a measuring device in the field.

**User interface**

- Bad (0x00)
- Bad (0x01)
- Bad (0x02)
- Bad (0x03)
- Bad (0x04)
- Bad (0x05)
- Bad (0x06)
- Bad (0x07)
- Bad (0x08)
- Bad (0x09)
- Bad (0x0A)
- Bad (0x0B)
- Bad (0x0C)
- Bad (0x0D)
- Bad (0x0E)
- Bad (0x0F)
- Bad (0x10)
- Bad (0x11)
- Bad (0x12)
- Bad (0x13)
- Bad (0x14)
- Bad (0x15)
- Bad (0x16)
- Bad (0x17)
- Bad (0x18)
- Bad (0x19)
- Bad (0x1A)
- Bad (0x1B)
- Bad (0x1C)
- Bad (0x1D)
- Bad (0x1E)
- Bad (0x1F)
- Uncertain (0x40)
- Uncertain (0x41)
- Uncertain (0x42)
- Uncertain (0x43)
- Uncertain (0x44)
- Uncertain (0x45)
- Uncertain (0x46)
- Uncertain (0x47)
- Uncertain (0x48)
- Uncertain (0x49)
- Uncertain (0x4A)
- Uncertain (0x4B)
- Uncertain (0x4C)
- Uncertain (0x4D)
- Uncertain (0x4E)
- Uncertain (0x4F)
- Uncertain (0x50)
- Uncertain (0x51)
- Uncertain (0x52)
- Uncertain (0x53)
- Uncertain (0x54)
- Uncertain (0x55)
- Uncertain (0x56)
- Uncertain (0x57)
- Uncertain (0x58)
- Uncertain (0x59)
- Uncertain (0x5A)

- Uncertain (0x5B)
- Good (0x80)
- Good (0x81)
- Good (0x82)
- Good (0x83)
- Good (0x84)
- Good (0x85)
- Good (0x86)
- Good (0x87)
- Good (0x88)
- Good (0x89)
- Good (0x8A)
- Good (0x8B)
- Good (0x8C)
- Good (0x8D)
- Good (0x8E)
- Good (0x8F)
- Good (0x90)
- Good (0x91)
- Good (0x92)
- Good (0x93)
- Good (0x94)
- Good (0x95)
- Good (0x96)
- Good (0x97)
- Good (0x98)
- Good (0x99)
- Good (0x9A)
- Good (0x9B)
- Good (0xC0)
- Good (0xC1)
- Good (0xC2)
- Good (0xC3)
- Good (0xC4)
- Good (0xC5)
- Good (0xC6)
- Good (0xC7)
- Good (0xC8)
- Good (0xC9)
- Good (0xCA)
- Good (0xCB)
- Good (0xCC)
- Good (0xCD)
- Good (0xCE)
- Good (0xCF)
- Good (0xD0)
- Good (0xD1)
- Good (0xD2)
- Good (0xD3)
- Good (0xD4)
- Good (0xD5)
- Good (0xD6)
- Good (0xD7)
- Good (0xD8)
- Good (0xD9)
- Good (0xDA)
- Good (0xDB)
- Good (0xDC)
- Good (0xDD)

- Good (0xDE)
- Good (0xDF)
- Good (0xE0)
- Good (0xE1)
- Good (0xE2)
- Good (0xE3)

**Factory setting** Bad (0x00)

**Additional information** *Description*

An output parameter can be linked to an input parameter from another function block. Both the input parameter and the output parameter have a field value and status. The status of the input parameter is taken from the linked output parameter.

## Value

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Value (6866–1 to n)

**Description** Displays the discrete input value from a measuring device in the field.

**User interface**

- Low flow or PFS Stat.=Not active
- Low flow or PFS Stat.=Active or Verif. stat.=Check not done
- Verification status=failed
- Verification status=busy
- Verification status=ready
- Verificaton overall result=failed
- Status=Check not done/Result=failed
- Status=failed/Result=failed
- Status=busy/Result=failed
- Status=ready/Result=failed
- Verificaton overall result=passed
- Status=Check not done/Result=passed
- Status=failed/Result=passed
- Status=busy/Result=passed
- Status=ready/Result=passed
- Verificaton overall result=Check not done
- Status=Check not done/Result=Check not done
- Status=failed/Result=Check not done
- Status=busy/Result=Check not done
- Status=ready/Result=Check not done

**Factory setting** Low flow or PFS Stat.=Not active

## Unacknowledged

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6889–1 to n)

**Description** Option for manually acknowledging an update of the static block parameter.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ Acknowledged</li> <li>■ Unacknowledged</li> </ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p>  <ul style="list-style-type: none"> <li>■ If a new diagnostic event occurs, the measuring device sets <b>Unacknowledged</b> option.</li> <li>■ If the diagnostic event has been acknowledged, the user can set <b>Acknowledged</b> option.</li> </ul>

---

## Update State

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Update State (6890–1 to n)
<b>Description</b>	Displays the status of an update of the static block parameter. The status indicates whether the update was communicated or not.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ Reported</li> <li>■ Not Reported</li> </ul>

---

## Time Stamp

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Time Stamp (6888–1 to n)
<b>Description</b>	Displays the time stamp indicating when the analysis of the block was started and when a status change of an update to the static block parameter that has not yet been communicated was identified. The time stamp is retained until the update confirmation is received.
<b>User interface</b>	Days (d), hours (h), minutes (m), seconds (s)

---

## Static revision

---

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Static revision (6887–1 to n)
<b>Description</b>	Displays the Static revision: Each instance of a static block parameter being accessed with write and communicate access due to an update is counted (event counter).
<b>User interface</b>	0 to 65 535

---

## Relative Index

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Relative Index (6886–1 to n)

**Description** Displays the relative index of the static block parameter that triggered the alarm (OD index minus field bus start index).

**User interface** 0 to 65 535

---

## Ack. Option

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Ack. Option (6841–1 to n)

**Description** Option for automatic acknowledgment of process alarms in a specific category.

**Selection**

- Disc Alm Aut Ack
- Blk Alm Auto Ack
- Fail Alm Aut Ack
- OffSpecAlmAutAck
- Maint Alm AutAck
- Check Alm AutAck

**Additional information** *Description*

Use this function to determine whether an alarm must be acknowledged via the field bus host system.

 If the process alarm option has not been enabled in this parameter, this process alarm must only be acknowledged in **Unacknowledged** parameter (→  204).  
**Current** parameter (→  203) indicates the current status of all process alarms.

---

## Current

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Current (6842–1 to n)

**Description** Use this function to view the current status of the process alarms.

**User interface**

- Discrete Alarm
- Block Alarm
- Fail Alarm
- Off Spec Alarm
- Maint. Alarm
- Check Alarm

---

**Disabled**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Disabled (6843–1 to n)
<b>Description</b>	Option for disabling a process alarm category.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Disc Alm Disabl</li><li>■ Block Alm Disabl</li><li>■ Fail Alm Disabl</li><li>■ OffSpecAlmDisabl</li><li>■ Maint Alm Disabl</li><li>■ Check Alm Disab.</li></ul>

---

**Unacknowledged**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6844–1 to n)
<b>Description</b>	Displays an unacknowledged process alarm.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Disc Alm Unack</li><li>■ Block Alm Unack</li><li>■ Fail Alm Unack</li><li>■ Off SpecAlmUnack</li><li>■ Maint Alm Unack</li><li>■ Check Alm Unack</li></ul>

---

**Unreported**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Unreported (6845–1 to n)
<b>Description</b>	Displays a process alarm that has not been communicated.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Disc Alm Unrep</li><li>■ Block Alm Unrep</li><li>■ Fail Alm Unrep</li><li>■ Off SpecAlmUnrep</li><li>■ Maint Alm Unrep</li><li>■ Check Alm Unrep</li></ul>

---

**Alarm State**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Alarm State (6847–1 to n)
<b>Description</b>	Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.

**User interface**

- Uninitialized
- Clear-Reported
- ClearNotReported
- Active-Reported
- ActiveNotRep

---

**Subcode****Navigation**

- Expert → Discrete inputs → Discrete input 1 to n → Subcode (6848-1 to n)

**Description**

Displays the specific cause of the block alarm.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

**Time Stamp****Navigation**

- Expert → Discrete inputs → Discrete input 1 to n → Time Stamp (6849-1 to n)

**Description**

Displays the time stamp indicating when the analysis of the block was started and when a status change of the block alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

**User interface**

Days (d), hours (h), minutes (m), seconds (s)

---

**Unacknowledged****Navigation**

- Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6850-1 to n)

**Description**

Option for manually acknowledging a block alarm.

---

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ Acknowledged</li> <li>■ Unacknowledged</li> </ul>
<b>Factory setting</b>	Uninitialized
<b>Additional information</b>	<p><i>Description</i></p> <p>If <b>Blk Alm Auto Ack</b> option is not enabled in <b>Ack. Option</b> parameter (→ 238), the process alarm must be manually acknowledged in this parameter.</p> <p> ■ If a new alarm occurs, the measuring device sets <b>Unacknowledged</b> option. ■ If the alarm has been acknowledged, the user can set <b>Acknowledged</b> option.</p>

---

**Value**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Value (6856–1 to n)
<b>Description</b>	Displays the value of the affected parameter at the time at which the block alarm was detected.
<b>User interface</b>	0 to 255

---

**Alarm State**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Alarm State (6858–1 to n)
<b>Description</b>	Displays the status of the block alarm. The status indicates whether the block alarm is active and whether it has already been communicated to the field bus host system.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ Clear-Reported</li> <li>■ ClearNotReported</li> <li>■ Active-Reported</li> <li>■ ActiveNotRep</li> </ul>

---

**Subcode**

<b>Navigation</b>	 Expert → Discrete inputs → Discrete input 1 to n → Subcode (6859–1 to n)
<b>Description</b>	Displays the specific cause of the discrete alarm.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Other</li> <li>■ BlockConfigurat</li> <li>■ LinkConfigurat</li> <li>■ SimulationActive</li> <li>■ LocalOverride</li> <li>■ DeviceFaultState</li> </ul>

- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

## Time Stamp

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Time Stamp (6860–1 to n)

**Description** Displays the time stamp indicating when the analysis of the function block was started and when a status change of the discrete alarm that has not yet been communicated to the field bus host system was detected. The time stamp is retained until the alarm confirmation is received.

**User interface** Days (d), hours (h), minutes (m), seconds (s)

---

## Unacknowledged

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Unacknowledged (6861–1 to n)

**Description** Option for manually acknowledging a discrete alarm.

**Selection**

- Uninitialized
- Acknowledged
- Unacknowledged

**Factory setting** Uninitialized

**Additional information** *Description*

If **Disc Alm Aut Ack** option is not enabled in **Ack. Option** parameter (→  238), the process alarm must be manually acknowledged in this parameter.

-  ■ If a new alarm occurs, the measuring device sets **Unacknowledged** option.  
■ If the alarm has been acknowledged, the user can set **Acknowledged** option.

---

## Discrete Value

---

**Navigation**  Expert → Discrete inputs → Discrete input 1 to n → Discrete Value (6862–1 to n)

**Description** Displays the value of the associated parameter at the time at which the alarm was detected.

**User interface**

- State 0
- State 1
- State 2
- State 3
- State 4
- State 5
- State 6
- State 7
- State 8
- State 9
- State 10
- State 11
- State 12
- State 13
- State 14
- State 15
- State 16

**Discrete Limit**


<b>Navigation</b>	Expert → Discrete inputs → Discrete input 1 to n → Discrete Limit (6863–1 to n)
<b>Description</b>	Use this to enter the status of the discrete input value that triggers an alarm.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0

**Discrete Prio**

<b>Navigation</b>	Expert → Discrete inputs → Discrete input 1 to n → Discrete Prio (6864–1 to n)
<b>Description</b>	Use this to enter the priority of a discrete alarm.
<b>User entry</b>	0 to 15
<b>Factory setting</b>	0

**3.9 "Analog outputs" submenu***Navigation*

Expert → Analog outputs

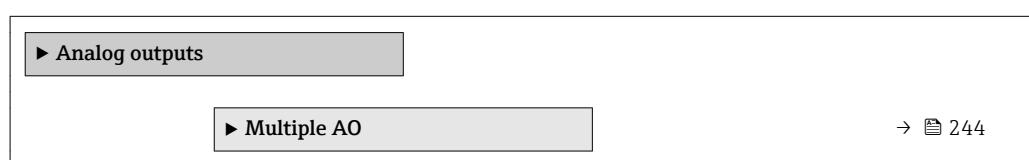

### 3.9.1 "Multiple AO" submenu

Navigation

Expert → Analog outputs → Multiple AO

► Multiple AO	
Block tag (11351)	→ 244
Status Options (11363)	→ 248
Fault State Time (11354)	→ 249
FaultState Val 1 (11355)	→ 249
FaultState Val 2 (11356)	→ 249
FaultState Val 3 (11357)	→ 250
FaultState Val 4 (11358)	→ 250
FaultState Val 5 (11359)	→ 250
FaultState Val 6 (11360)	→ 251
FaultState Val 7 (11361)	→ 251
FaultState Val 8 (11362)	→ 251
FaultStateStatus (11353)	→ 252

---

#### Block tag

---

Navigation

Expert → Analog outputs → Multiple AO → Block tag (11351)

Description

Use this function to enter the Block tag: specify a "label" for identifying the function block.

User entry

Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

---

#### Static Revision

---

Navigation

Expert → Analog outputs → Multiple AO → Static Revision (11371)

Description

Displays the Static Revision: every write access to a static block parameter is counted (event counter).

User interface

0 to FFFF

**Additional information***Description*

Static parameters are parameters that are not changed by the process.

---

**Tag Description**

---

**Navigation** Expert → Analog outputs → Multiple AO → Tag Description (11372)

**Description** Use this function to enter the Tag Description: define a user-specific text for the detailed description of the function block.

**User entry** Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

---

**Strategy**

---

**Navigation** Expert → Analog outputs → Multiple AO → Strategy (11370)

**Description** Use this function to enter the Strategy: makes it possible to group blocks by entering identical numbers.

**User entry** 0 to FFFF

**Factory setting** 0

---

**Alert Key**

---

**Navigation** Expert → Analog outputs → Multiple AO → Alert Key (11365)

**Description** Use this function to enter the Alert Key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.

**User entry** 0 to 0xFF

**Factory setting** 1

---

**Target mode**

---

**Navigation** Expert → Analog outputs → Multiple AO → Target mode (11369)

**Description** Use this function to select the Target mode: the selection specifies which operating mode is used for this block. This mode is generally set by a control application.

<b>Selection</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>
<b>Factory setting</b>	OOS
<b>Additional information</b>	<i>Selection</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→  139)

---

## Actual mode

---

<b>Navigation</b>	 Expert → Analog outputs → Multiple AO → Actual mode (11366)
<b>Description</b>	Displays the Actual mode: under certain conditions a block may not work in the operating mode to be used. In this case, the Actual mode represents the valid mode in which the block is currently operating. A comparison of the Actual mode with the Target mode indicates whether the Target mode (→  245) could be reached.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>
<b>Additional information</b>	<i>Selection</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→  139)

---

## Permitted mode

---

<b>Navigation</b>	 Expert → Analog outputs → Multiple AO → Permitted mode (11368)
<b>Description</b>	Use this function to select the Permitted mode: the selection defines which operating modes are available for the function block in the Target mode (→  245). The operating modes that are supported vary depending on the type and function of the block.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li></ul>

---

	<ul style="list-style-type: none"><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>
<b>Factory setting</b>	<ul style="list-style-type: none"><li>■ Auto</li><li>■ OOS</li></ul>
<b>Additional information</b>	<i>Selection</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→  139)

---

## Normal mode

---

<b>Navigation</b>	 Expert → Analog outputs → Multiple AO → Normal mode (11367)
<b>Description</b>	Use this function to select the Normal mode: this mode is provided to enable the user to select the Normal mode among the operating modes available. This can be set using an operating tool in order to help the user configure the operating mode of a block.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>
<b>Factory setting</b>	Auto
<b>Additional information</b>	<i>Selection</i>  Detailed description of the options available for selection: <b>Target mode</b> parameter (→  139)

---

## Block Error

---

<b>Navigation</b>	 Expert → Analog outputs → Multiple AO → Block Error (11364)
<b>Description</b>	Displays the short text for the Block Error that occurred in the function block.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Other</li><li>■ BlockConfigurat</li><li>■ LinkConfigurat</li><li>■ SimulationActive</li><li>■ LocalOverride</li><li>■ DeviceFaultState</li><li>■ DeviceMainten</li><li>■ SensorFailure</li><li>■ OutputFailure</li><li>■ MemoryFailure</li></ul>

- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

## Channel

---

**Navigation**  Expert → Analog outputs → Multiple AO → Channel (11352)

**Description** Use this function to select the assignment or connection between the Analog Output function block and the Transducer Block.

**Selection**

- Uninitialized
- Channel\_0

**Factory setting** Channel\_0

---

## Status Options

---

**Navigation**   Expert → Analog outputs → Multiple AO → Status Options (11363)

**Description** Option for determining the fault state of the function block.

**Selection**

- Fstate to val 1
- Fstate to val 2
- Fstate to val 3
- Fstate to val 4
- Fstate to val 5
- Fstate to val 6
- Fstate to val 7
- Fstate to val 8
- Fstate restart 1
- Fstate restart 2
- Fstate restart 3
- Fstate restart 4
- Fstate restart 5
- Fstate restart 6
- Fstate restart 7
- Fstate restart 8

**Additional information** *Description*

This behavior is activated if an error condition of the set point that applies is present for longer than defined in the **Fault State Time** parameter (→  249) or if the **Set Fault State** parameter (→  149) is activated in the Resource block.

The fault state is defined via the following parameters:

- Fault State Time (→ 249)
- FaultState Val 1 to n

#### *Selection*

- Fstate to val 1...8

The value predefined in the **FaultState Val 1 to n** parameter is used instead of the analog set point. The fault state is enabled if there is an error condition.

- Fstate restart 1...8

The value predefined in the **FaultState Val 1 to n** parameter is used if the device is restarted. The non-volatile value is used otherwise. The fault state is not enabled and only the predefined value is used.

---

## Fault State Time

---

**Navigation**   Expert → Analog outputs → Multiple AO → Fault State Time (11354)

**Description** Use this function to enter a time range during which an error condition (of the currently valid set point) must be met without interruption before an error message is generated.

**User entry** Positive floating-point number

**Factory setting** 0 s

---

## FaultState Val 1

---

**Navigation**   Expert → Analog outputs → Multiple AO → FaultState Val 1 (11355)

**Description** Use this function to enter a predefined analog value to be used if an error condition of the analog set point 1 is present.

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Description*

 This value is ignored if the **Fstate to val 1** option is not selected in the **Status Options** parameter (→ 248).

---

## FaultState Val 2

---

**Navigation**   Expert → Analog outputs → Multiple AO → FaultState Val 2 (11356)

**Description** Use this function to enter a predefined analog value to be used if an error condition of the analog set point 2 is present.

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Description*

 This value is ignored if the **Fstate to val 2** option is not selected in the **Status Options** parameter (→ 248).

---

## FaultState Val 3

---

**Navigation**   Expert → Analog outputs → Multiple AO → FaultState Val 3 (11357)

**Description** Use this function to enter a predefined analog value to be used if an error condition of the analog set point 3 is present.

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Description*

 This value is ignored if the **Fstate to val 3** option is not selected in the **Status Options** parameter (→ 248).

---

## FaultState Val 4

---

**Navigation**   Expert → Analog outputs → Multiple AO → FaultState Val 4 (11358)

**Description** Use this function to enter a predefined analog value to be used if an error condition of the analog set point 4 is present.

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Description*

 This value is ignored if the **Fstate to val 4** option is not selected in the **Status Options** parameter (→ 248).

---

## FaultState Val 5

---

**Navigation**   Expert → Analog outputs → Multiple AO → FaultState Val 5 (11359)

**Description** Use this function to enter a predefined analog value to be used if an error condition of the analog set point 5 is present.

<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>  This value is ignored if the <b>Fstate to val 5</b> option is not selected in the <b>Status Options</b> parameter (→ 248).

---

## FaultState Val 6

---

<b>Navigation</b>	  Expert → Analog outputs → Multiple AO → FaultState Val 6 (11360)
<b>Description</b>	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 6 is present.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>  This value is ignored if the <b>Fstate to val 6</b> option is not selected in the <b>Status Options</b> parameter (→ 248).

---

## FaultState Val 7

---

<b>Navigation</b>	  Expert → Analog outputs → Multiple AO → FaultState Val 7 (11361)
<b>Description</b>	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 7 is present.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>  This value is ignored if the <b>Fstate to val 7</b> option is not selected in the <b>Status Options</b> parameter (→ 248).

---

## FaultState Val 8

---

<b>Navigation</b>	  Expert → Analog outputs → Multiple AO → FaultState Val 8 (11362)
<b>Description</b>	Use this function to enter a predefined analog value to be used if an error condition of the analog set point 8 is present.

User entry	Signed floating-point number
Factory setting	0
Additional information	<p>Description</p> <p><b>i</b> This value is ignored if the <b>Fstate to val 8</b> option is not selected in the <b>Status Options</b> parameter (→ <a href="#">248</a>).</p>


## FaultStateStatus

Navigation	Expert → Analog outputs → Multiple AO → FaultStateStatus (11353)
Description	Displays the values for which the fault state is enabled.
User interface	<ul style="list-style-type: none"> <li>▪ Val 1 in FState</li> <li>▪ Val 2 in FState</li> <li>▪ Val 3 in FState</li> <li>▪ Val 4 in FState</li> <li>▪ Val 5 in FState</li> <li>▪ Val 6 in FState</li> <li>▪ Val 7 in FState</li> <li>▪ Val 8 in FState</li> </ul>

## 3.10 "Discrete outputs" submenu


The Discrete outputs function block (DO, discrete output) processes a discrete set point received from an upstream function block or a higher-level process control system that enables various device functions (e.g. zero point adjustment or reset of the totalizer) to be triggered in the downstream transducer block.

Navigation Expert → Discrete outputs

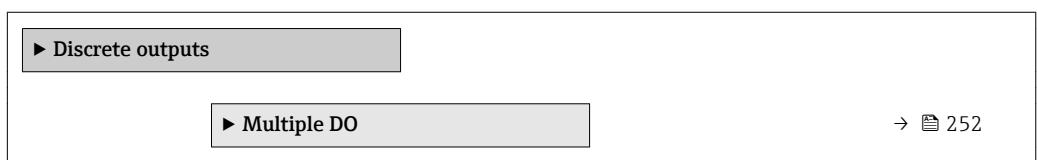

### 3.10.1 "Multiple DO" submenu

Navigation Expert → Discrete outputs → Multiple DO

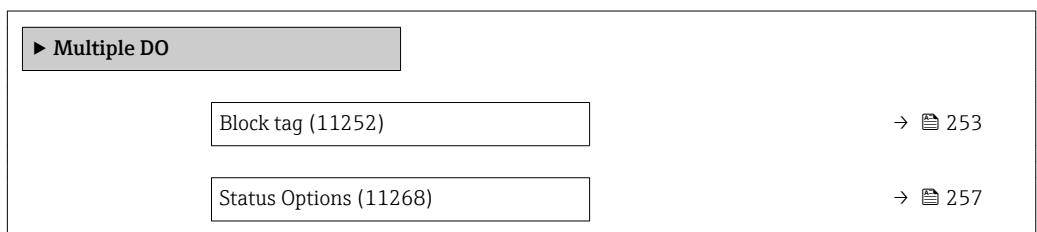

Fault State Time (11255)	→  258
FStateValue DO 1 (11256)	→  258
FStateValue DO 2 (11257)	→  258
FStateValue DO 3 (11258)	→  259
FStateValue DO 4 (11259)	→  259
FStateValue DO 5 (11260)	→  259
FStateValue DO 6 (11261)	→  260
FStateValue DO 7 (11262)	→  260
FStateValue DO 8 (11263)	→  260
FaultStateStatus (11254)	→  261

---

## Block tag

---

**Navigation**

Expert → Discrete outputs → Multiple DO → Block tag (11252)

**Description**

Use this function to enter the Block tag: Used for specifying a "label" for identifying the function block.

**User entry**

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Static Revision

---

**Navigation**

Expert → Discrete outputs → Multiple DO → Static Revision (11270)

**Description**

Displays the Static Revision: Each instance of a static block parameter being accessed with write access is counted (event counter).

**User interface**

0 to FFFF

**Additional information***Description*

Static parameters are parameters that are not changed by the process.

## Tag Description

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → Tag Description (11271)
<b>Description</b>	Use this function to enter the Tag Description: Used for defining a user-specific text for detailed description of the function block.
<b>User entry</b>	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Strategy

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → Strategy (11269)
<b>Description</b>	Use this function to enter the Strategy: Enables blocks to be grouped by entering identical numbers.
<b>User entry</b>	0 to FFFF
<b>Factory setting</b>	0

---

## Alert Key

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → Alert Key (11251)
<b>Description</b>	Use this function to enter the Alert Key: Identifies the plant unit where the transmitter is located. This helps in pinpointing events.
<b>User entry</b>	0 to 0xFF
<b>Factory setting</b>	1

---

## Target mode

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → Target mode (11267)
<b>Description</b>	Use this function to select the Target mode: The selection indicates which operating mode is used for this function block. This mode is generally set by a control application.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ ROut</li><li>■ RCas</li><li>■ Cas</li><li>■ Auto</li><li>■ Man</li><li>■ LO</li><li>■ IMan</li><li>■ OOS</li></ul>

**Factory setting** OOS

**Additional information** *Options*



Detailed description of the options available for selection: **Target mode** parameter  
(→ [254](#) 139)

---

## Actual mode

---

**Navigation** Expert → Discrete outputs → Multiple DO → Actual mode (11264)

**Description** Displays the Actual mode: Under certain conditions, a function block may not work in the operating mode to be used. In this case, the Actual mode shows the actual operating mode that the function block is currently operating in. By comparing the Actual mode with the Target mode, users can see whether it was possible to reach the Target mode (→ [254](#) 254).

**User interface**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Additional information** *User interface*



Detailed description of the options available for selection: **Target mode** parameter  
(→ [254](#) 139)

---

## Permitted mode

---

**Navigation** Expert → Discrete outputs → Multiple DO → Permitted mode (11266)

**Description** Use this function to select the Permitted mode: The selection defines which operating modes are available in Target mode (→ [254](#) 254) for the function block. The operating modes that are supported vary depending on the type and function of the block.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting**

- Auto
- OOS

**Additional information***Options*

Detailed description of the options available for selection: **Target mode** parameter  
(→ 139)

---

**Normal mode****Navigation**

Expert → Discrete outputs → Multiple DO → Normal mode (11265)

**Description**

Use this function to select the Normal mode: This is available to enable the user to select the Normal mode from the available operating modes. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

**Selection**

- ROut
- RCas
- Cas
- Auto
- Man
- LO
- IMan
- OOS

**Factory setting**

Auto

**Additional information***Options*

Detailed description of the options available for selection: **Target mode** parameter  
(→ 139)

---

**Block Error****Navigation**

Expert → Discrete outputs → Multiple DO → Block Error (11272)

**Description**

Displays the short text for the Block Error that has occurred in the function block.

**User interface**

- Other
- BlockConfigurat
- LinkConfigurat
- SimulationActive
- LocalOverride
- DeviceFaultState
- DeviceMainten
- SensorFailure
- OutputFailure
- MemoryFailure
- LostStaticData
- LostNVData
- ReadbackCheck
- MaintenanceNeed
- PowerUp
- OutOfService

---

**Channel**

---

<b>Navigation</b>	Expert → Discrete outputs → Multiple DO → Channel (11253)
<b>Description</b>	Option for the assignment or connection between the discrete output function block and the transducer block.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Uninitialized</li> <li>■ Channel_D0</li> </ul>
<b>Factory setting</b>	Channel_D0

---

**Status Options**

---

<b>Navigation</b>	Expert → Discrete outputs → Multiple DO → Status Options (11268)
<b>Description</b>	Option for determining the fault state of the function block.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Fstate to val 1</li> <li>■ Fstate to val 2</li> <li>■ Fstate to val 3</li> <li>■ Fstate to val 4</li> <li>■ Fstate to val 5</li> <li>■ Fstate to val 6</li> <li>■ Fstate to val 7</li> <li>■ Fstate to val 8</li> <li>■ Fstate restart 1</li> <li>■ Fstate restart 2</li> <li>■ Fstate restart 3</li> <li>■ Fstate restart 4</li> <li>■ Fstate restart 5</li> <li>■ Fstate restart 6</li> <li>■ Fstate restart 7</li> <li>■ Fstate restart 8</li> </ul>
<b>Additional information</b>	<p><i>Description</i></p> <p>This behavior is enabled if an error condition of the valid set point persists for longer than the time specified in <b>Fault State Time</b> parameter (→ <a href="#">258</a>) or if <b>Set Fault State</b> parameter (→ <a href="#">149</a>) is enabled in Resource block.</p> <p>The fault state is defined via the following parameters:</p> <ul style="list-style-type: none"> <li>■ Fault State Time (→ <a href="#">258</a>)</li> <li>■ FStateValue DO 1 to n</li> </ul> <p><i>Options</i></p> <ul style="list-style-type: none"> <li>■ Fstate to val 1...8 The value predefined in <b>FStateValue DO 1 to n</b> parameter is used in place of the discrete set point. The fault state is enabled if there is an error condition.</li> <li>■ Fstate restart 1...8 The value predefined in <b>FStateValue DO 1 to n</b> parameter is used if the device is restarted. The non-volatile value is used otherwise. The fault state is not enabled and only the predefined value is used.</li> </ul>

**Fault State Time**

---

**Navigation**  Expert → Discrete outputs → Multiple DO → Fault State Time (11255)

**Description** Use this function to enter a time range during which an error condition (of the currently valid set point) must be met without interruption before an error message is generated.

**User entry** Positive floating-point number

**Factory setting** 0 s

---

**FStateValue DO 1**

---

**Navigation**  Expert → Discrete outputs → Multiple DO → FStateValue DO 1 (11256)

**Description** Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 1 is present.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

 If **Fstate to val 1** option is not selected in **Status Options** parameter (→ 257), this value is ignored.

---

**FStateValue DO 2**

---

**Navigation**  Expert → Discrete outputs → Multiple DO → FStateValue DO 2 (11257)

**Description** Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 2 is present.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

 If **Fstate to val 2** option is not selected in **Status Options** parameter (→ 257), this value is ignored.

---

### FStateValue DO 3

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → FStateValue DO 3 (11258)
<b>Description</b>	Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 3 is present.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>  If <b>Fstate to val 3</b> option is not selected in <b>Status Options</b> parameter (→ 257), this value is ignored.

---

### FStateValue DO 4

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → FStateValue DO 4 (11259)
<b>Description</b>	Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 4 is present.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>  If <b>Fstate to val 4</b> option is not selected in <b>Status Options</b> parameter (→ 257), this value is ignored.

---

### FStateValue DO 5

---

<b>Navigation</b>	 Expert → Discrete outputs → Multiple DO → FStateValue DO 5 (11260)
<b>Description</b>	Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 5 is present.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>  If <b>Fstate to val 5</b> option is not selected in <b>Status Options</b> parameter (→ 257), this value is ignored.

## FStateValue DO 6

---

**Navigation**  Expert → Discrete outputs → Multiple DO → FStateValue DO 6 (11261)

**Description** Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 6 is present.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

 If **Fstate to val 6** option is not selected in **Status Options** parameter (→  257), this value is ignored.

---

## FStateValue DO 7

---

**Navigation**  Expert → Discrete outputs → Multiple DO → FStateValue DO 7 (11262)

**Description** Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 7 is present.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

 If **Fstate to val 7** option is not selected in **Status Options** parameter (→  257), this value is ignored.

---

## FStateValue DO 8

---

**Navigation**  Expert → Discrete outputs → Multiple DO → FStateValue DO 8 (11263)

**Description** Use this function to enter a predefined discrete value to be used if an error condition of the discrete set point 8 is present.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

 If **Fstate to val 8** option is not selected in **Status Options** parameter (→  257), this value is ignored.

**FaultStateStatus**

**Navigation**        Expert → Discrete outputs → Multiple DO → FaultStateStatus (11254)


**Description**      Displays the values for which the fault state is enabled.

**User interface**

- Val 1 in FState
- Val 2 in FState
- Val 3 in FState
- Val 4 in FState
- Val 5 in FState
- Val 6 in FState
- Val 7 in FState
- Val 8 in FState

**3.11 "Application" submenu**

*Navigation*        Expert → Application

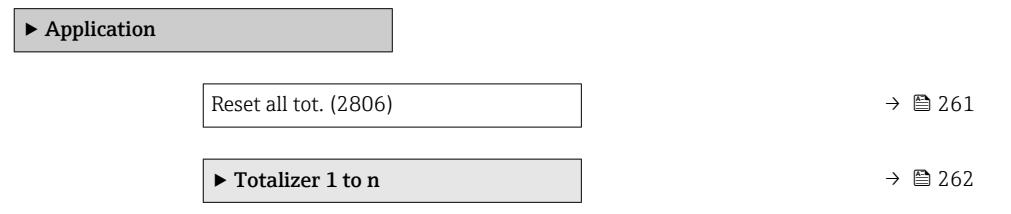**Reset all tot.**

**Navigation**        Expert → Application → Reset all tot. (2806)

**Description**      Use this function to reset all totalizers to the value **0** and restart the totaling process. This deletes all the flow values previously totaled.

**Selection**

- Cancel
- Reset + totalize

**Factory setting**      Cancel


**Additional information**      *Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totaled.

### 3.11.1 "Totalizer 1 to n" submenu

Navigation

Expert → Application → Totalizer 1 to n

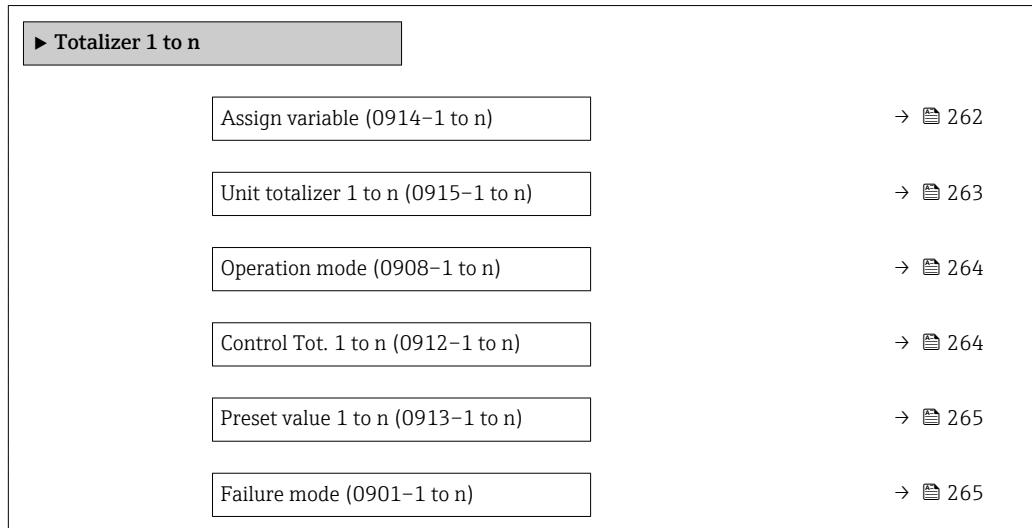

#### Assign variable



Navigation

Expert → Application → Totalizer 1 to n → Assign variable (0914-1 to n)

Description

Use this function to select a process variable for the Totalizer 1 to n.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

Factory setting

Volume flow

Additional information

Description

If the option selected is changed, the device resets the totalizer to 0.

Selection

If the **Off** option is selected, only **Assign variable** parameter (→ 262) is still displayed in the **Totalizer 1 to n** submenu. All other parameters in the submenu are hidden.

**Unit totalizer 1 to n****Navigation**

Expert → Application → Totalizer 1 to n → Unit totalizer 1 to n (0915–1 to n)

**Prerequisite**

One of the following options is selected in the **Assign variable** parameter (→ 262) of the **Totalizer 1 to n** submenu:

- Volume flow
- Mass flow
- Correct.vol.flow

**Description**

Use this function to select the process variable unit for the Totalizer 1 to n (→ 262).

**Selection***SI units*

- g
- kg
- t

*US units*

- oz
- lb
- STon

or

*SI units*

- cm<sup>3</sup>
- dm<sup>3</sup>
- m<sup>3</sup>
- ml
- l
- hl
- Ml Mega

*US units*

- af
- ft<sup>3</sup>
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;oil)
- bbl (us;tank)

*Imperial units*

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

or

*SI units*

- Nl
- Nm<sup>3</sup>
- Sm<sup>3</sup>

*US units*

- Sft<sup>3</sup>
- Sgal (us)
- Sbbl (us;liq.)

*Imperial units*

- Sgal (imp)

**Factory setting**

1

**Additional information***Description*

The unit is selected separately for each totalizer. It is independent of the selection made in the **System units** submenu (→ 57).

*Selection*

The selection is dependent on the process variable selected in the **Assign variable** parameter (→ 262).

**Operation mode****Navigation**

Expert → Application → Totalizer 1 to n → Operation mode (0908–1 to n)

**Description**

Use this function to select how the totalizer summates the flow.

**Selection**

- Net flow total
- Forward total
- Reverse total

**Factory setting**

Net flow total

**Additional information***Selection*

- Net flow total

Flow values in the forward and reverse flow direction are totalized and balanced against one another. Net flow is registered in the flow direction.

- Forward total

Only the flow in the forward flow direction is totalized.

- Reverse total

Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

**Control Tot. 1 to n****Navigation**

Expert → Application → Totalizer 1 to n → Control Tot. 1 to n (0912–1 to n)

**Prerequisite**

One of the following options is selected in the **Assign variable** parameter  
(→ **Totalizer 1 to n** submenu:  
Volume flow

**Description**

Use this function to select the control of totalizer value 1-3.

**Selection**

- Totalize
- Reset + hold
- Preset + hold
- Reset + totalize
- Preset+totalize
- Hold

**Factory setting**

Totalize

**Additional information***Selection*

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.

Options	Description
Preset+totalize	The totalizer is set to the defined start value from the <b>Preset value</b> parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

## Preset value 1 to n

**Navigation**  Expert → Application → Totalizer 1 to n → Preset value 1 to n (0913–1 to n)

**Prerequisite** One of the following options is selected in the **Assign variable** parameter  
(→  262) **Totalizer 1 to n** submenu:  
Volume flow

**Description** Use this function to enter a start value for the Totalizer 1 to n.

**User entry** Signed floating-point number

**Factory setting** 0 1

**Additional information** *User entry*

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→  263).

*Example*

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

---

## Failure mode



**Navigation**  Expert → Application → Totalizer 1 to n → Failure mode (0901–1 to n)

**Description** Use this function to select how a totalizer behaves in the event of a device alarm.

**Selection**

- Stop
- Actual value
- Last valid value

**Factory setting** Stop

**Additional information****Description**

This setting does not affect the failsafe mode of other totalizers and the outputs. This is specified in separate parameters.

**Selection**

- Stop  
The totalizer is stopped in the event of a device alarm.
- Actual value  
The totalizer continues to count based on the actual measured value; the device alarm is ignored.
- Last valid value  
The totalizer continues to count based on the last valid measured value before the device alarm occurred.

## 3.12 "Diagnostics" submenu

**Navigation**

Expert → Diagnostics

► Diagnostics	
Actual diagnos.	→  267
Timestamp	→  267
Prev.diagnostics	→  268
Timestamp	→  268
Time fr. restart	→  269
Operating time	→  269
► Diagnostic list	→  269
► Event logbook	→  273
► Device info	→  276
► Mainboard module	→  279
► Sens. electronic	→  280
► I/O module 1	→  280
► I/O module 2	→  281
► I/O module 3	→  280

► I/O module 4	→  280
► Display module	→  282
► Min/max val.	→  290
► Data logging	→  282
► Heartbeat	→  294
► Simulation	→  294

---

## Actual diagnos.

---

**Navigation**

Expert → Diagnostics → Actual diagnos. (0691)

**Prerequisite**

A diagnostic event has occurred.

**Description**

Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***Display*

- Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu (→ 269).
- Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

*Example*

For the display format:

F271 Main electronics

---

## Timestamp

---

**Navigation**

Expert → Diagnostics → Timestamp

**Description**

Displays the operating time when the current diagnostic message occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***Display*

The diagnostic message can be viewed via the **Actual diagnos.** parameter  
(→ 267).

*Example*

For the display format:

24d12h13m00s

---

**Prev.diagnostics**

---

**Navigation**

Expert → Diagnostics → Prev.diagnostics (0690)

**Prerequisite**

Two diagnostic events have already occurred.

**Description**

Displays the diagnostic message that occurred before the current message.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***Display*

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

*Example*

For the display format:

F271 Main electronics

---

**Timestamp**

---

**Navigation**

Expert → Diagnostics → Timestamp

**Description**

Displays the operating time when the last diagnostic message before the current message occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***Display*

The diagnostic message can be viewed via the **Prev.diagnostics** parameter  
(→ 268).

*Example*

For the display format:

24d12h13m00s

---

**Time fr. restart**

---

**Navigation**
 Expert → Diagnostics → Time fr. restart (0653)
**Description**

Use this function to display the time the device has been in operation since the last device restart.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

---

**Operating time**

---

**Navigation**
 Expert → Diagnostics → Operating time (0652)
**Description**

Use this function to display the length of time the device has been in operation.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information**

*User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

---

### 3.12.1 "Diagnostic list" submenu

*Navigation*
 Expert → Diagnostics → Diagnostic list

 Diagnostic list	
Diagnostics 1 (0692)	→  269
Diagnostics 2 (0693)	→  270
Diagnostics 3 (0694)	→  271
Diagnostics 4 (0695)	→  272
Diagnostics 5 (0696)	→  273

---

**Diagnostics 1**

---

**Navigation**
 Expert → Diagnostics → Diagnostic list → Diagnostics 1 (0692)
**Description**

Displays the current diagnostics message with the highest priority.

**User interface** Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information** *Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

*Examples*

For the display format:

-  F271 Main electronics
-  F276 I/O module

---

## Timestamp

---

**Navigation**  Expert → Diagnostics → Diagnostic list → Timestamp

**Description** Displays the operating time when the diagnostic message with the highest priority occurred.

**User interface** Days (d), hours (h), minutes (m) and seconds (s)

**Additional information** *Display*

 The diagnostic message can be viewed via the **Diagnostics 1** parameter (→  269).

*Example*

For the display format:

24d12h13m00s

---

## Diagnostics 2

---

**Navigation**  Expert → Diagnostics → Diagnostic list → Diagnostics 2 (0693)

**Description** Displays the current diagnostics message with the second-highest priority.

**User interface** Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information** *Display*

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

*Examples*

For the display format:

-  F271 Main electronics
-  F276 I/O module

---

**Timestamp**

---

<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the second-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<i>Display</i>  The diagnostic message can be viewed via the <b>Diagnostics 2</b> parameter (→  270).
	<i>Example</i> For the display format: 24d12h13m00s

---

**Diagnostics 3**

---

<b>Navigation</b>	  Expert → Diagnostics → Diagnostic list → Diagnostics 3 (0694)
<b>Description</b>	Displays the current diagnostics message with the third-highest priority.
<b>User interface</b>	Symbol for diagnostic behavior, diagnostic code and short message.
<b>Additional information</b>	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.
	<i>Examples</i> For the display format: <ul style="list-style-type: none"><li>■  F271 Main electronics</li><li>■  F276 I/O module</li></ul>

---

**Timestamp**

---

<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the third-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***Display*

The diagnostic message can be viewed via the **Diagnostics 3** parameter (→ 271).

*Example*

For the display format:  
24d12h13m00s

---

**Diagnostics 4**

---

**Navigation**

Expert → Diagnostics → Diagnostic list → Diagnostics 4 (0695)

**Description**

Displays the current diagnostics message with the fourth-highest priority.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***Display*

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

*Examples*

For the display format:  
■ F271 Main electronics  
■ F276 I/O module

---

**Timestamp**

---

**Navigation**

Expert → Diagnostics → Diagnostic list → Timestamp

**Description**

Displays the operating time when the diagnostic message with the fourth-highest priority occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***Display*

The diagnostic message can be viewed via the **Diagnostics 4** parameter (→ 272).

*Example*

For the display format:  
24d12h13m00s

## Diagnostics 5

### Navigation

  Expert → Diagnostics → Diagnostic list → Diagnostics 5 (0696)

### Description

Displays the current diagnostics message with the fifth-highest priority.

### User interface

Symbol for diagnostic behavior, diagnostic code and short message.

### Additional information

#### Display

 Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

#### Examples

For the display format:

-  F271 Main electronics
-  F276 I/O module

## Timestamp

### Navigation

 Expert → Diagnostics → Diagnostic list → Timestamp

### Description

Displays the operating time when the diagnostic message with the fifth-highest priority occurred.

### User interface

Days (d), hours (h), minutes (m) and seconds (s)

### Additional information

#### Display

 The diagnostic message can be viewed via the **Diagnostics 5** parameter (→  273).

#### Example


For the display format:

24d12h13m00s

## 3.12.2 "Event logbook" submenu

### Navigation

 Expert → Diagnostics → Event logbook

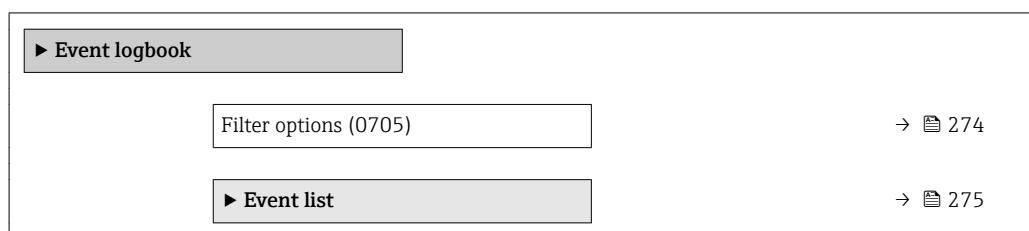

**Filter options****Navigation**

Expert → Diagnostics → Event logbook → Filter options (0705)

**Description**

Use this function to select the category whose event messages are displayed in the event list of the local display.

**Selection**

- All
- Failure (F)
- Funct. check (C)
- Out of spec. (S)
- Mainten. req.(M)
- Information (I)

**Factory setting**

All

**Additional information***Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
  - F = Failure
  - C = Function Check
  - S = Out of Specification
  - M = Maintenance Required

**Filter options****Navigation**

Expert → Diagnostics → Event logbook → Filter options

**Description**

Use this function to select the category whose event messages are displayed in the event list of the operating tool.

**Selection**

- All
- Failure (F)
- Funct. check (C)
- Out of spec. (S)
- Mainten. req.(M)
- Information (I)

**Factory setting**

All

**Additional information***Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
  - F = Failure
  - C = Function Check
  - S = Out of Specification
  - M = Maintenance Required

**"Event list" submenu**

 The **Event list** submenu is only displayed if operating via the local display.

If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.

If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

*Navigation*

 Expert → Diagnostics → Event logbook → Event list

**Event list****Navigation**

 Expert → Diagnostics → Event logbook → Event list

**Description**

Displays the history of event messages of the category selected in the **Filter options** parameter (→  274).

**User interface**

- For a "Category I" event message

Information event, short message, symbol for event recording and operating time when error occurred

- For a "Category F, C, S, M" event message (status signal)

Diagnostics code, short message, symbol for event recording and operating time when error occurred

**Additional information***Description*

A maximum of 20 event messages are displayed in chronological order.

If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The following symbols indicate whether an event has occurred or has ended:

-  Occurrence of the event
-  End of the event

*Examples*

For the display format:

- I1091 Configuration modified  
 24d12h13m00s
-  F271 Main electronics  
 01d04h12min30s

*HistoROM*

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

### 3.12.3 "Device info" submenu

Navigation

 Expert → Diagnostics → Device info

▶ Device info	
Device tag (10799)	→  276
Serial number (10798)	→  277
Device name (0020)	→  277
Device revision (10710)	→  144
Device type (10711)	→  144
DD Revision (10709)	→  144
Firmware version (10792)	→  277
Hardware rev. (10793)	→  278
ITK Version (10794)	→  278
Order code (10795)	→  278
Ext. order cd. 1 (10796)	→  278
Ext. order cd. 2 (10797)	→  279
ENP version (10791)	→  279

---

#### Device tag

---

Navigation

 Expert → Diagnostics → Device info → Device tag (10799)

Description

Use this function to enter a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header:

1	<input type="text" value="XXXXXXXXXX"/>
---	---

A0029422

User entry

32 characters such as letters, numbers or special characters (e.g. @, %, /)

**Factory setting** Promag300/500

**Additional information** *User entry*

The number of characters displayed depends on the characters used.

---

## Serial number

---

**Navigation**   Expert → Diagnostics → Device info → Serial number (10798)

**Description** Displays the serial number of the measuring device. It can also be found on the nameplate of the sensor and transmitter.

 **Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)

**User interface** Max. 11-digit character string comprising letters and numbers.

**Additional information** *Factory setting*

 This information varies depending on the device. Only an example is given here.

---

## Device name

---

**Navigation**   Expert → Diagnostics → Device info → Device name (0020)

**Description** Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

**User interface** Promag300/500

---

## Firmware version

---

**Navigation**   Expert → Diagnostics → Device info → Firmware version (10792)

**Description** Displays the device firmware version installed.

**User interface** Character string with the following format:  
xx.yy.zz

**Hardware rev.**

<b>Navigation</b>	  Expert → Diagnostics → Device info → Hardware rev. (10793)
<b>Description</b>	Displays the Hardware rev..
<b>User interface</b>	Character string in the format xx.yy.zz

---

**ITK Version**

<b>Navigation</b>	  Expert → Diagnostics → Device info → ITK Version (10794)
<b>Description</b>	Displays the revision status of the Interoperability Test Kits (ITK).
<b>User interface</b>	6

---

**Order code**

<b>Navigation</b>	  Expert → Diagnostics → Device info → Order code (10795)
<b>Description</b>	Use this function to enter the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.
<b>User entry</b>	Character string composed of letters, numbers and certain punctuation marks
<b>Additional information</b>	<b>Description</b> The order code is generated from the extended order code, which defines all the device features of the product structure. In contrast, the device features cannot be read directly from the order code.  <b>Uses of the order code</b> <ul style="list-style-type: none"><li>▪ To order an identical spare device.</li><li>▪ To identify the device quickly and easily, e.g. when contacting Endress+Hauser.</li></ul>

---

**Ext. order cd. 1**

<b>Navigation</b>	  Expert → Diagnostics → Device info → Ext. order cd. 1 (10796)
<b>Description</b>	Use this function to enter the first part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 2 parameters.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

---

<b>User entry</b>	Character string
<b>Additional information</b>	<p><i>Description</i></p> <p>The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.</p> <p> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.</p>

---

### Ext. order cd. 2

---

<b>Navigation</b>	  Expert → Diagnostics → Device info → Ext. order cd. 2 (10797)
<b>Description</b>	Use this function to enter the second part of the extended order code.
	 Deletion of the ordered customer-specific parameter set that was preconfigured before delivery. This parameter set cannot be reset. It can only be restored to the factory setting.
<b>User entry</b>	Character string
<b>Additional information</b>	For additional information, see <b>Ext. order cd. 1</b> parameter

---

### ENP version

---

<b>Navigation</b>	  Expert → Diagnostics → Device info → ENP version (10791)
<b>Description</b>	Displays the version of the electronic nameplate. This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.
<b>User interface</b>	Character string in the format xx.yy.zz

### 3.12.4 "Mainboard module" submenu

*Navigation*        Expert → Diagnostics → Mainboard module

 <b>Mainboard module</b>
Software rev. (0072)
→  280

**Software rev.**


**Navigation**   Expert → Diagnostics → Mainboard module → Software rev. (0072)

**Description** Use this function to display the software revision of the module.

**User interface** Positive integer

### 3.12.5 "Sens. electronic" submenu

*Navigation*   Expert → Diagnostics → Sens. electronic

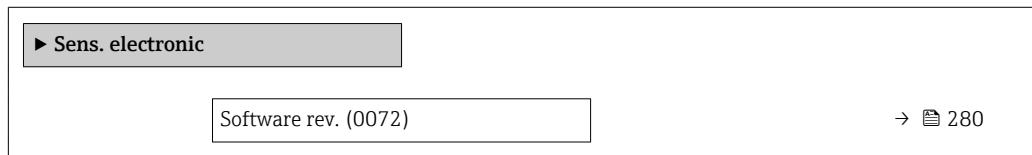

---

**Software rev.**


**Navigation**   Expert → Diagnostics → Sens. electronic → Software rev. (0072)

**Description** Use this function to display the software revision of the module.

**User interface** Positive integer

### 3.12.6 "I/O module 1" submenu

*Navigation*   Expert → Diagnostics → I/O module 1

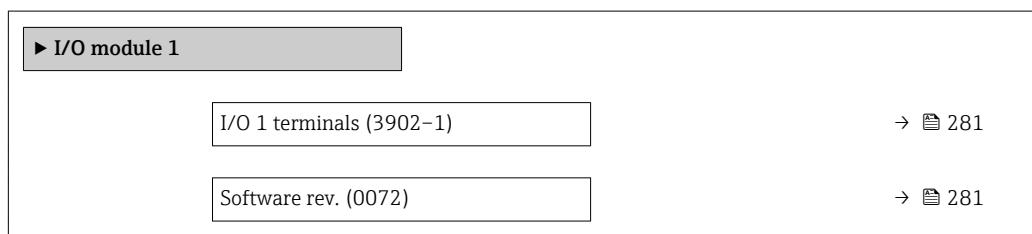

---

**I/O terminals**

---

**Navigation**  Expert → Diagnostics → I/O module 1 → I/O 1 terminals (3902-1)

**Description** Displays the terminal numbers used by the I/O module.

**User interface**

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)

---

**Software rev.**

---


**Navigation**  Expert → Diagnostics → I/O module 1 → Software rev. (0072)

**Description** Use this function to display the software revision of the module.

**User interface** Positive integer

### 3.12.7 "I/O module 2" submenu

*Navigation*   Expert → Diagnostics → I/O module 2

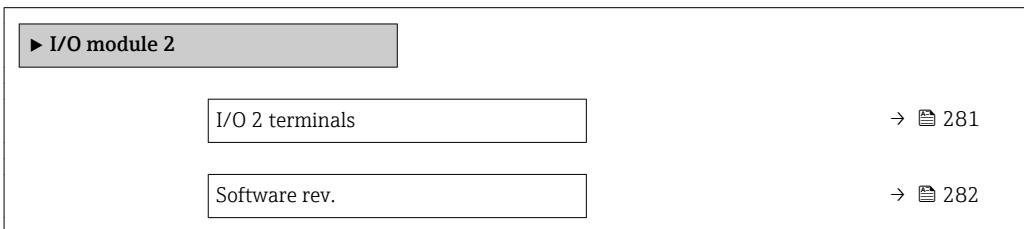

---

**I/O terminals**

---

**Navigation**  Expert → Diagnostics → I/O module 2 → I/O 2 terminals (3902-2)

**Description** Displays the terminal numbers used by the I/O module.

**User interface**

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)

**Software rev.**


**Navigation**  Expert → Diagnostics → I/O module 2 → Software rev. (0072)

**Description** Use this function to display the software revision of the module.

**User interface** Positive integer

### 3.12.8 "Display module" submenu

*Navigation*   Expert → Diagnostics → Display module

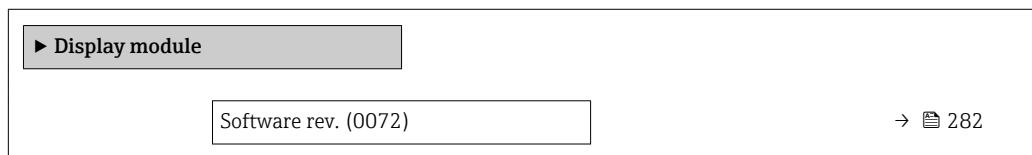

---

**Software rev.**


**Navigation**   Expert → Diagnostics → Display module → Software rev. (0072)

**Description** Use this function to display the software revision of the module.

**User interface** Positive integer

### 3.12.9 "Data logging" submenu

*Navigation*   Expert → Diagnostics → Data logging

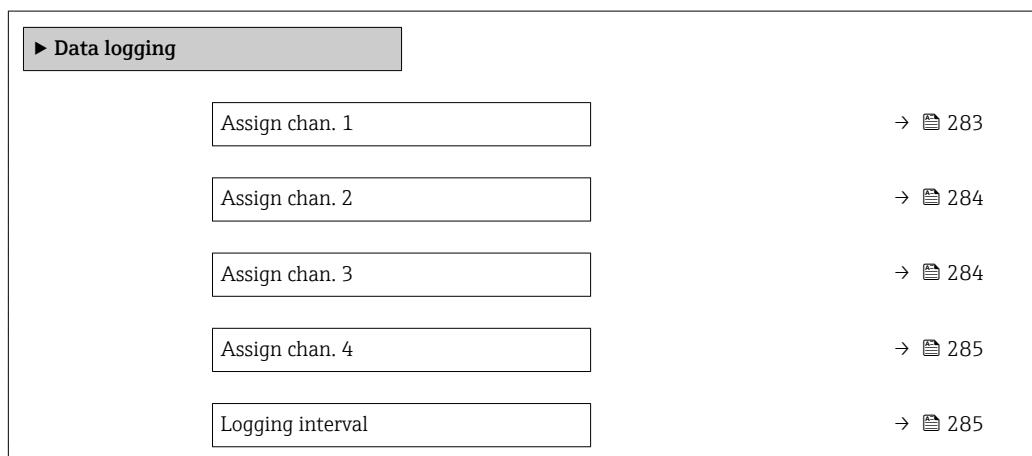

Clear logging	→  286
Data logging	→  286
Logging delay	→  286
Data log.control	→  287
Data log. status	→  287
Logging duration	→  288
► Displ.channel 1	→  288
► Displ.channel 2	→  289
► Displ.channel 3	→  289
► Displ.channel 4	→  290

## Assign chan. 1

**Navigation**

Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

**Prerequisite**

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **SW option overv.** parameter (→ 46).

**Description**

Use this function to select a process variable for the data logging channel.

**Selection**

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity \*
- Conductivity \*
- CorrConductivity \*
- Curr.output 1 \*
- Temperature \*
- Electronic temp.

**Factory setting**

Off

\* Visibility depends on order options or device settings

**Additional information****Description**

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The log contents are cleared if the option selected is changed.

---

**Assign chan. 2****Navigation**

 Expert → Diagnostics → Data logging → Assign chan. 2 (0852)

**Prerequisite**

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  46).

**Description**

Options for the assignment of a process variable to the data logging channel.

**Selection**

Picklist, see **Assign channel 1** parameter (→  283)

**Factory setting**

Off

---

**Assign chan. 3****Navigation**

 Expert → Diagnostics → Data logging → Assign chan. 3 (0853)

**Prerequisite**

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  46).

**Description**

Options for the assignment of a process variable to the data logging channel.

**Selection**

Picklist, see **Assign channel 1** parameter (→  283)

**Factory setting**

Off

**Assign chan. 4**

<b>Navigation</b>	Expert → Diagnostics → Data logging → Assign chan. 4 (0854)
<b>Prerequisite</b>	The <b>Extended HistoROM</b> application package is available.
	The software options currently enabled are displayed in the <b>SW option overv.</b> parameter (→  46).
<b>Description</b>	Options for the assignment of a process variable to the data logging channel.
<b>Selection</b>	Picklist, see <b>Assign channel 1</b> parameter (→  283)
<b>Factory setting</b>	Off

**Logging interval**

<b>Navigation</b>	Expert → Diagnostics → Data logging → Logging interval (0856)
<b>Prerequisite</b>	The <b>Extended HistoROM</b> application package is available.
	The software options currently enabled are displayed in the <b>SW option overv.</b> parameter (→  46).
<b>Description</b>	Use this function to enter the logging interval $T_{log}$ for data logging.
<b>User entry</b>	0.1 to 999.0 s
<b>Factory setting</b>	1.0 s
<b>Additional information</b>	<p><i>Description</i></p> <p>This defines the interval between the individual data points in the data log, and thus the maximum loggable process time <math>T_{log}</math>:</p> <ul style="list-style-type: none"> <li>▪ If 1 logging channel is used: <math>T_{log} = 1000 \times t_{log}</math></li> <li>▪ If 2 logging channels are used: <math>T_{log} = 500 \times t_{log}</math></li> <li>▪ If 3 logging channels are used: <math>T_{log} = 333 \times t_{log}</math></li> <li>▪ If 4 logging channels are used: <math>T_{log} = 250 \times t_{log}</math></li> </ul> <p>Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of <math>T_{log}</math> always remains in the memory (ring memory principle).</p> <p> The log contents are cleared if the length of the logging interval is changed.</p> <p><i>Example</i></p> <p>If 1 logging channel is used:</p> <ul style="list-style-type: none"> <li>▪ <math>T_{log} = 1000 \times 1 \text{ s} = 1000 \text{ s} \approx 15 \text{ min}</math></li> <li>▪ <math>T_{log} = 1000 \times 10 \text{ s} = 10000 \text{ s} \approx 3 \text{ h}</math></li> <li>▪ <math>T_{log} = 1000 \times 80 \text{ s} = 80000 \text{ s} \approx 1 \text{ d}</math></li> <li>▪ <math>T_{log} = 1000 \times 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}</math></li> </ul>

## Clear logging



### Navigation

Expert → Diagnostics → Data logging → Clear logging (0855)

### Prerequisite

The **Extended HistoROM** application package is available.

The software options currently enabled are displayed in the **SW option overv.** parameter (→ 46).

### Description

Use this function to clear the entire logging data.

### Selection

- Cancel
- Clear data

### Factory setting

Cancel

### Additional information

*Selection*

- Cancel  
The data is not cleared. All the data is retained.
- Clear data  
The logging data is cleared. The logging process starts from the beginning.

## Data logging



### Navigation

Expert → Diagnostics → Data logging → Data logging (0860)

### Description

Use this function to select the data logging method.

### Selection

- Overwriting
- Not overwriting

### Factory setting

Overwriting

### Additional information

*Selection*

- Overwriting  
The device memory applies the FIFO principle.
- Not overwriting  
Data logging is canceled if the measured value memory is full (single shot).

## Logging delay



### Navigation

Expert → Diagnostics → Data logging → Logging delay (0859)

### Prerequisite

In the **Data logging** parameter (→ 286), the **Not overwriting** option is selected.

### Description

Use this function to enter the time delay for measured value logging.

### User entry

0 to 999 h

**Factory setting** 0 h

**Additional information** *Description*

Once measured value logging has been started with the **Data log.control** parameter (→ 287), the device does not save any data for the duration of the time delay entered.

---

## Data log.control



**Navigation** Expert → Diagnostics → Data logging → Data log.control (0857)

**Prerequisite** In the **Data logging** parameter (→ 286), the **Not overwriting** option is selected.

**Description** Use this function to start and stop measured value logging.

**Selection**

- None
- Delete + start
- Stop

**Factory setting** None

**Additional information** *Selection*

- None  
Initial measured value logging status.
- Delete + start  
All the measured values recorded for all the channels are deleted and measured value logging starts again.
- Stop  
Measured value logging is stopped.

---

## Data log. status

**Navigation** Expert → Diagnostics → Data logging → Data log. status (0858)

**Prerequisite** In the **Data logging** parameter (→ 286), the **Not overwriting** option is selected.

**Description** Displays the measured value logging status.

**User interface**

- Done
- Delay active
- Active
- Stopped

**Factory setting** Done

**Additional information***Selection*

- Done  
Measured value logging has been performed and completed successfully.
- Delay active  
Measured value logging has been started but the logging interval has not yet elapsed.
- Active  
The logging interval has elapsed and measured value logging is active.
- Stopped  
Measured value logging is stopped.

---

**Logging duration**

---

**Navigation** Expert → Diagnostics → Data logging → Logging duration (0861)**Prerequisite**In the **Data logging** parameter (→  286), the **Not overwriting** option is selected.**Description**

Displays the total logging duration.

**User interface**

Positive floating-point number

**Factory setting**

0 s

---

**"Displ.channel 1" submenu****Navigation** Expert → Diagnostics → Data logging → Displ.channel 1

---

**Display channel 1**

---

**Navigation** Expert → Diagnostics → Data logging → Displ.channel 1**Prerequisite**The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  46).

One of the following options is selected in the **Assign chan. 1** parameter (→  283):


- Conductivity \*
- CorrConductivity \*
- Temperature \*

---

\* Visibility depends on order options or device settings

**Description** Displays the measured value trend for the logging channel in the form of a chart.

**Additional information** *Description*

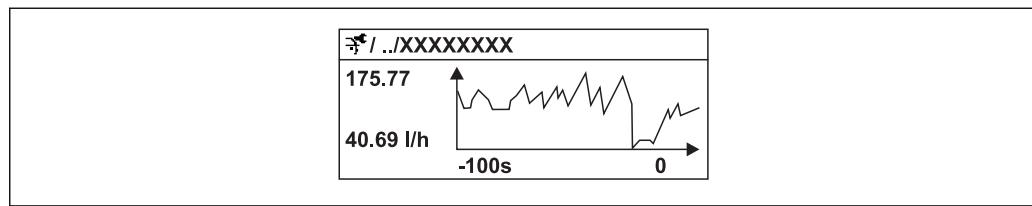

A0016222

11 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

#### "Displ.channel 2" submenu

*Navigation*



Expert → Diagnostics → Data logging → Displ.channel 2



#### Display channel 2

**Navigation**

Expert → Diagnostics → Data logging → Displ.channel 2

**Prerequisite**

A process variable is defined in the **Assign chan. 2** parameter.

**Description**

See the **Display channel 1** parameter → 288

#### "Displ.channel 3" submenu

*Navigation*



Expert → Diagnostics → Data logging → Displ.channel 3




## Display channel 3

---

<b>Navigation</b>	④ Expert → Diagnostics → Data logging → Displ.channel 3
<b>Prerequisite</b>	A process variable is defined in the <b>Assign chan. 3</b> parameter.
<b>Description</b>	See the <b>Display channel 1</b> parameter → ④ 288

### "Displ.channel 4" submenu

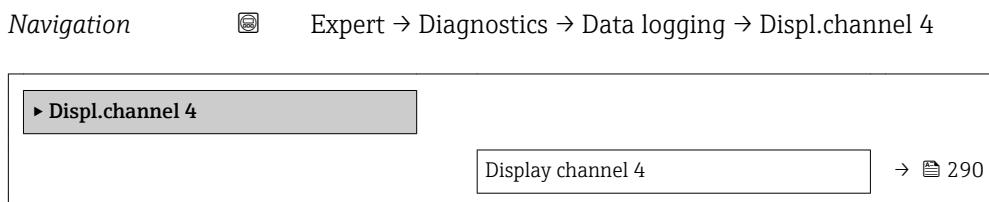


---

## Display channel 4

---

<b>Navigation</b>	④ Expert → Diagnostics → Data logging → Displ.channel 4
<b>Prerequisite</b>	A process variable is defined in the <b>Assign chan. 4</b> parameter.
<b>Description</b>	See the <b>Display channel 1</b> parameter → ④ 288

### 3.12.10 "Min/max val." submenu

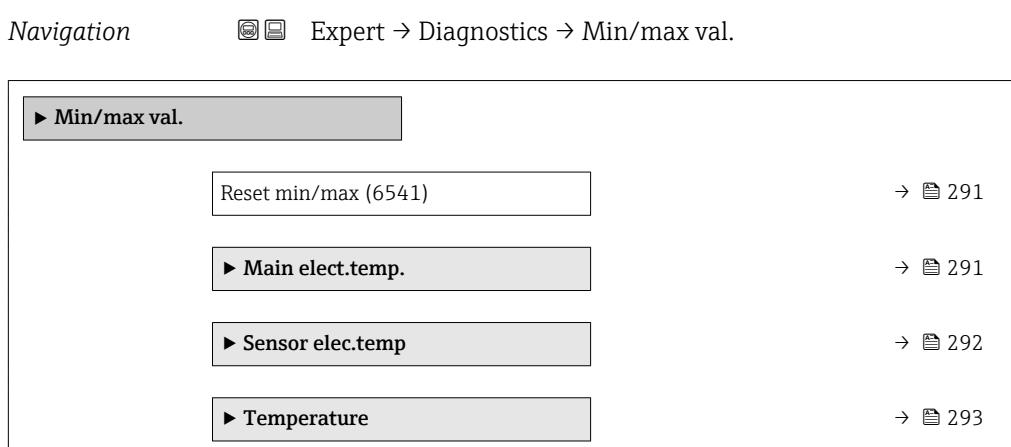

**Reset min/max**

**Navigation** Expert → Diagnostics → Min/max val. → Reset min/max (6541)

**Description** Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

**Selection** Cancel

**Factory setting** Cancel

**"Main electronic temperature" submenu**

*Navigation* Expert → Diagnostics → Min/max val. → Main elect.temp.

**► Main elect.temp.**

Minimum value (0688)

→ 291

Maximum value (0665)

→ 291

**Minimum value**

**Navigation** Expert → Diagnostics → Min/max val. → Main elect.temp. → Minimum value (0688)

**Description** Displays the lowest previously measured temperature value of the electronics module in the transmitter.

**User interface** Signed floating-point number

**Additional information** *Dependency*

The unit is taken from the **Temperature unit** parameter (→ 60)

**Maximum value**

**Navigation** Expert → Diagnostics → Min/max val. → Main elect.temp. → Maximum value (0665)

**Description** Displays the highest previously measured temperature value of the electronics module in the transmitter.


**User interface** Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ [60](#))

**"Sensor electronic temperature (ISEM)" submenu****Navigation**

Expert → Diagnostics → Min/max val. → Sensor elec.temp

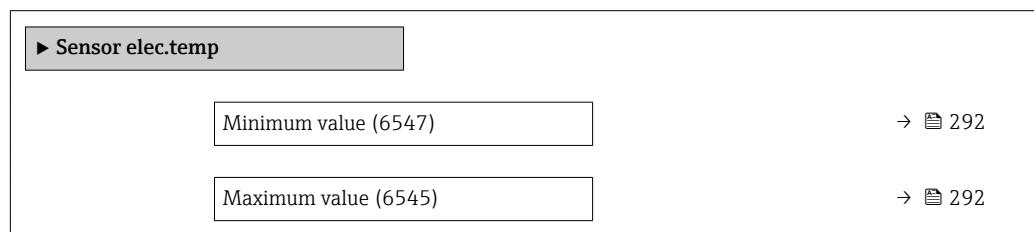

---

**Minimum value**

---

**Navigation**

Expert → Diagnostics → Min/max val. → Sensor elec.temp → Minimum value (6547)

**Description**

Displays the lowest previously measured temperature value of the main electronics module.

**User interface**

Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ [60](#))

---

**Maximum value**

---

**Navigation**

Expert → Diagnostics → Min/max val. → Sensor elec.temp → Maximum value (6545)

**Description**

Displays the highest previously measured temperature value of the main electronics module.

**User interface**

Signed floating-point number


**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ [60](#))

### "Temperature" submenu

#### Navigation

Expert → Diagnostics → Min/max val. → Temperature

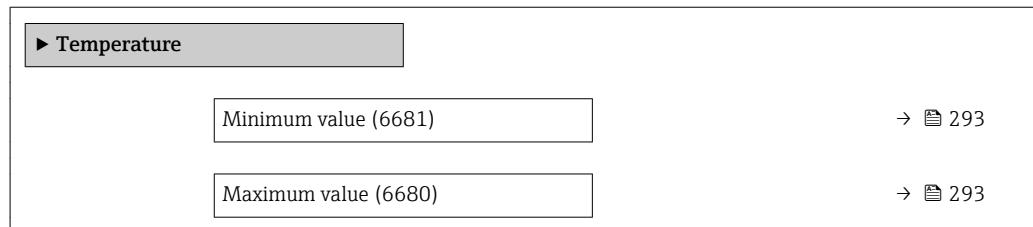

---

## Minimum value

---

#### Navigation

Expert → Diagnostics → Min/max val. → Temperature → Minimum value (6681)

#### Prerequisite

One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement"  
or
- The temperature is read into the flowmeter from an external device.

#### Description

Displays the lowest previously measured medium temperature value.

#### User interface

Signed floating-point number

#### Additional information

*Dependency*

The unit is taken from the **Temperature unit** parameter (→ 60)

---

## Maximum value

---

#### Navigation

Expert → Diagnostics → Min/max val. → Temperature → Maximum value (6680)

#### Prerequisite

One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement"  
or
- The temperature is read into the flowmeter from an external device.

#### Description

Displays the highest previously measured medium temperature value.

#### User interface

Signed floating-point number

#### Additional information

*Dependency*

The unit is taken from the **Temperature unit** parameter (→ 60)


### 3.12.11 "Heartbeat" submenu



For detailed information on the parameter descriptions for the **Heartbeat Verification+Monitoring** application package, refer to the Special Documentation for the device → [7](#)

*Navigation*


Expert → Diagnostics → Heartbeat

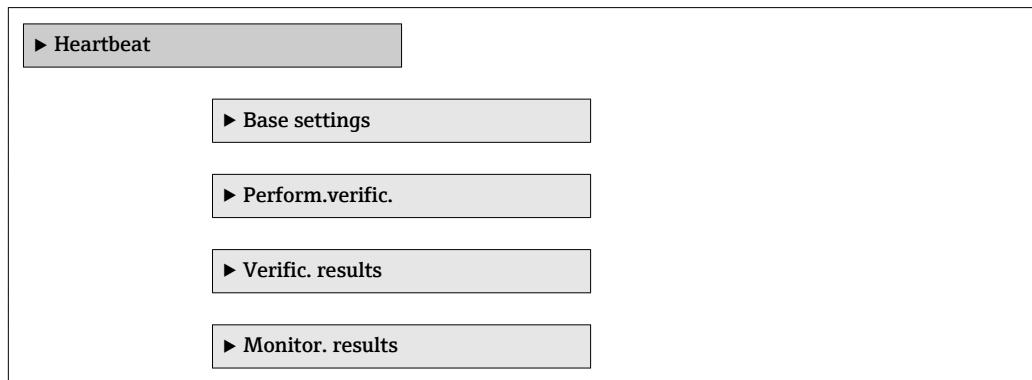

### 3.12.12 "Simulation" submenu

*Navigation*

Expert → Diagnostics → Simulation

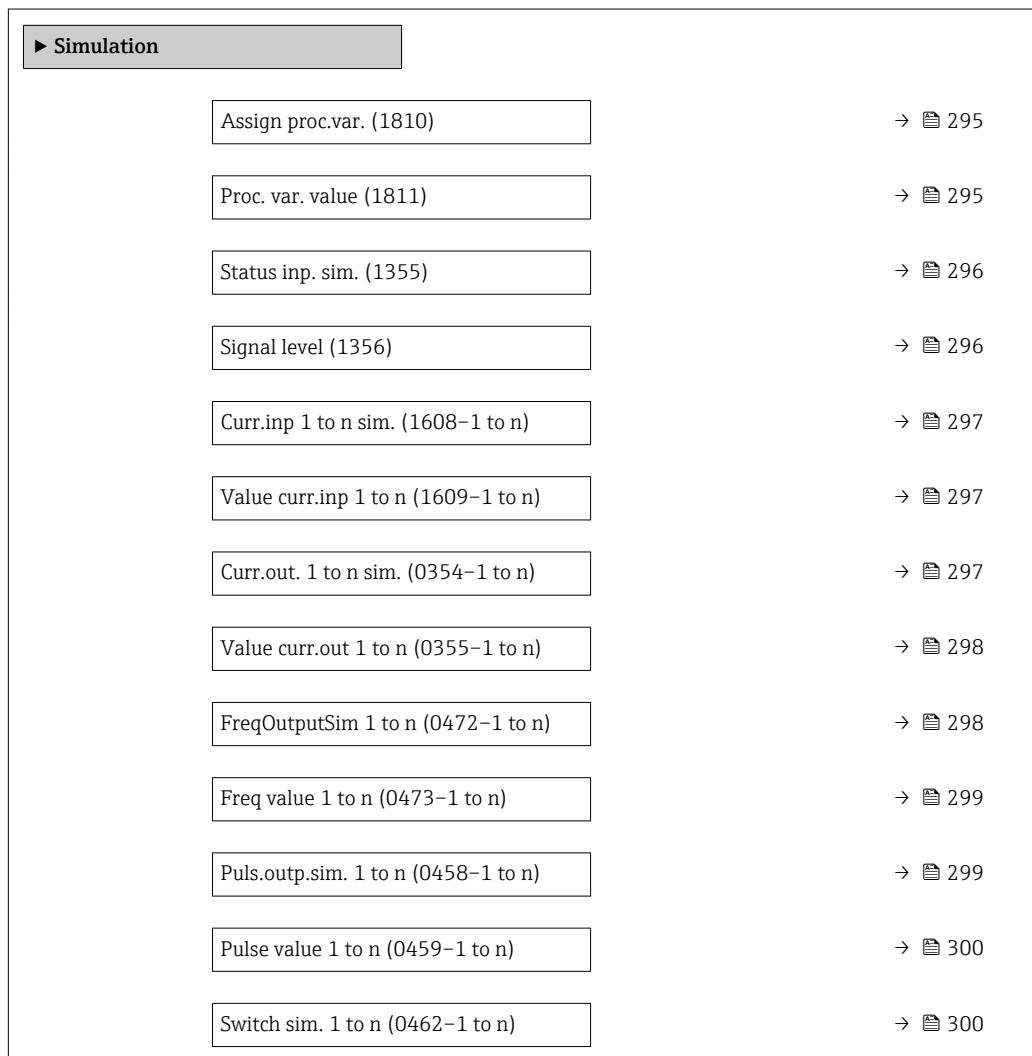

Switch status 1 to n (0463-1 to n)	→  301
Relay out. 1 to n sim (0802-1 to n)	→  301
Switch status 1 to n (0803-1 to n)	→  302
Dev. alarm sim. (0654)	→  302
Event category (0738)	→  303
Diag. event sim. (0737)	→  303

**Assign proc.var.****Navigation**

Expert → Diagnostics → Simulation → Assign proc.var. (1810)

**Description**

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off
- Mass flow
- Volume flow
- Correct.vol.flow
- Flow velocity
- Conductivity \*
- CorrConductivity \*
- Temperature

**Factory setting**

Off

**Additional information***Description*

The simulation value of the process variable selected is defined in the **Proc. var. value** parameter (→ 295).

**Proc. var. value****Navigation**

Expert → Diagnostics → Simulation → Proc. var. value (1811)

**Description**

Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

**User entry**

Depends on the process variable selected

\* Visibility depends on order options or device settings

**Factory setting** 0

**Additional information** *User entry*

 The unit of the displayed measured value is taken from the **System units** submenu (→ 57).

## Status inp. sim.



**Navigation**  Expert → Diagnostics → Simulation → Status inp. sim. (1355)

**Description** Use this function to switch simulation of the status input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off
- On

**Factory setting** Off

**Additional information** *Description*

 The desired simulation value is defined in the **Signal level** parameter (→ 296).

*Selection*

- Off  
Simulation for the status input is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On  
Simulation for the status input is active.

## Signal level



**Navigation**  Expert → Diagnostics → Simulation → Signal level (1356)

**Prerequisite** In the **Status inp. sim.** parameter (→ 296), the **On** option is selected.

**Description** Use this function to select the signal level for the simulation of the status input. In this way, users can verify the correct configuration of the status input and the correct function of upstream feed-in units.

**Selection**

- High
- Low

---

**Curr.inp sim.****Navigation**

Expert → Diagnostics → Simulation → Curr.inp 1 to n sim. (1608–1 to n)

**Description**

Option for switching simulation of the current input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

The desired simulation value is defined in the **Value curr.inp 1 to n** parameter.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information***Selection*

- Off  
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On  
Current simulation is active.

---

**Value curr.inp****Navigation**

Expert → Diagnostics → Simulation → Value curr.inp 1 to n (1609–1 to n)

**Prerequisite**

In the **Curr.inp 1 to n sim.** parameter, the **On** option is selected.

**Description**

Use this function to enter the current value for the simulation. In this way, users can verify the correct configuration of the current input and the correct function of upstream feed-in units.

**User entry**

0 to 22.5 mA

---

**Curr.out. 1 to n sim.****Navigation**

Expert → Diagnostics → Simulation → Curr.out. 1 to n sim. (0354–1 to n)

**Description**

Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information***Description*

The desired simulation value is defined in the **Value curr.out 1 to n** parameter.

*Selection*

- Off

Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Current simulation is active.

---

**Value curr.out 1 to n****Navigation**

Expert → Diagnostics → Simulation → Value curr.out 1 to n (0355–1 to n)

**Prerequisite**

In the **Curr.out. 1 to n sim.** parameter, the **On** option is selected.

**Description**

Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.

**User entry**

3.59 to 22.5 mA

**Additional information***Dependency*

The input range is dependent on the option selected in the **Current span** parameter (→ 98).

---

**FreqOutputSim****Navigation**

Expert → Diagnostics → Simulation → FreqOutputSim 1 to n (0472–1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Frequency** option is selected.

**Description**

Use this function to switch simulation of the frequency output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information***Description*

The desired simulation value is defined in the **Freq value 1 to n** parameter.

*Selection*

- Off

Frequency simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Frequency simulation is active.

---

**Freq value****Navigation**

Expert → Diagnostics → Simulation → Freq value 1 to n (0473–1 to n)

**Prerequisite**

In the **FreqOutputSim 1 to n** parameter, the **On** option is selected.

**Description**

Use this function to enter a frequency value for the simulation. In this way, users can verify the correct adjustment of the frequency output and the correct function of downstream switching units.

**User entry**

0.0 to 12 500.0 Hz

---

**Puls.outp.sim.****Navigation**

Expert → Diagnostics → Simulation → Puls.outp.sim. 1 to n (0458–1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Pulse** option is selected.

**Description**

Use this function to switch simulation of the pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off

- Fixed value

- Down-count. val.

**Factory setting**

Off

**Additional information***Description*

The desired simulation value is defined in the **Pulse value 1 to n** parameter.

*Selection*

- Off

Pulse simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Fixed value

Pulses are continuously output with the pulse width specified in the **Pulse width** parameter (→ 115).

- Down-count. val.

The pulses specified in the **Pulse value** parameter (→ 300) are output.

---

**Pulse value****Navigation**

Expert → Diagnostics → Simulation → Pulse value 1 to n (0459-1 to n)

**Prerequisite**

In the **Puls.outp.sim. 1 to n** parameter, the **Down-count. val.** option is selected.

**Description**

Use this function to enter a pulse value for the simulation. In this way, users can verify the correct adjustment of the pulse output and the correct function of downstream switching units.

**User entry**

0 to 65 535

---

**Switch sim.****Navigation**

Expert → Diagnostics → Simulation → Switch sim. 1 to n (0462-1 to n)

**Prerequisite**

In the **Operating mode** parameter (→ 112), the **Switch** option is selected.

**Description**

Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information***Description*

The desired simulation value is defined in the **Switch status 1 to n** parameter.

*Selection*

- Off

Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Switch simulation is active.

---

**Switch status****Navigation**

Expert → Diagnostics → Simulation → Switch status 1 to n (0463-1 to n)

**Description**

Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.

**Selection**

- Open
- Closed

**Additional information***Selection*

- Open

Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Closed

Switch simulation is active.

---

**Relay out. 1 to n sim****Navigation**

Expert → Diagnostics → Simulation → Relay out. 1 to n sim (0802-1 to n)

**Description**

Use this function to switch simulation of the relay output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information***Description*

The desired simulation value is defined in the **Switch status 1 to n** parameter.

*Selection*

- Off

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- On

Relay simulation is active.

---

**Switch status 1 to n****Navigation**

Expert → Diagnostics → Simulation → Switch status 1 to n (0803–1 to n)

**Prerequisite**

The **On** option is selected in the **Switch sim. 1 to n** parameter parameter.

**Description**

Use this function to select a relay value for the simulation. In this way, users can verify the correct adjustment of the relay output and the correct function of downstream switching units.

**Selection**

- Open
- Closed

**Additional information***Selection*

- Open

Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

- Closed

Relay simulation is active.

---

**Dev. alarm sim.****Navigation**

Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)

**Description**

Use this function to switch the device alarm on and off.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information***Description*

The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

---

**Event category**

<b>Navigation</b>	Expert → Diagnostics → Simulation → Event category (0738)
<b>Description</b>	Use this function to select the category of the diagnostic events that are displayed for the simulation in the <b>Diag. event sim.</b> parameter (→  303).
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Sensor</li><li>■ Electronics</li><li>■ Configuration</li><li>■ Process</li></ul>
<b>Factory setting</b>	Process

---

**Diag. event sim.**

<b>Navigation</b>	Expert → Diagnostics → Simulation → Diag. event sim. (0737)
<b>Description</b>	Use this function to select a diagnostic event for the simulation process that is activated.
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Off</li><li>■ Diagnostic event picklist (depends on the category selected)</li></ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<i>Description</i> For the simulation, you can choose from the diagnostic events of the category selected in the <b>Event category</b> parameter (→  303).

## 4 Country-specific factory settings

### 4.1 SI units

 Not valid for USA and Canada.

#### 4.1.1 System units

Volume flow	l/h
Volume	m <sup>3</sup>
Conductivity	µS/cm
Temperature	°C
Mass flow	kg/h
Mass	kg
Density	kg/l
Corrected volume flow	Nl/h
Corrected volume	Nm <sup>3</sup>

#### 4.1.2 Full scale values

 The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [mm]	(v ~ 2.5 m/s) [dm <sup>3</sup> /min]
2	0.5
4	2
8	8
15	25
25	75
32	125
40	200
50	300
65	500
80	750
100	1200
125	1850
150	150 m <sup>3</sup> /h
200	300 m <sup>3</sup> /h
250	500 m <sup>3</sup> /h
300	750 m <sup>3</sup> /h
350	1000 m <sup>3</sup> /h
400	1200 m <sup>3</sup> /h
450	1500 m <sup>3</sup> /h
500	2000 m <sup>3</sup> /h

Nominal diameter [mm]	( $v \sim 2.5 \text{ m/s}$ ) [dm $^3$ /min]
600	2500 m $^3$ /h
700	3500 m $^3$ /h
750	4000 m $^3$ /h
800	4500 m $^3$ /h
900	6000 m $^3$ /h
1000	7000 m $^3$ /h
1200	10000 m $^3$ /h
1400	14000 m $^3$ /h
1600	18000 m $^3$ /h
1800	23000 m $^3$ /h
2000	28500 m $^3$ /h

#### 4.1.3 Output current span

Current output 1 to n	4 to 20 mA NAMUR
-----------------------	------------------

#### 4.1.4 Pulse value

Nominal diameter [mm]	(~ 2 pulse/s) [dm $^3$ ]
2	0.005
4	0.025
8	0.1
15	0.2
25	0.5
32	1
40	1.5
50	2.5
65	5
80	5
100	10
125	15
150	0.03 m $^3$
200	0.05 m $^3$
250	0.05 m $^3$
300	0.1 m $^3$
350	0.1 m $^3$
400	0.15 m $^3$
450	0.25 m $^3$
500	0.25 m $^3$
600	0.3 m $^3$
700	0.5 m $^3$
750	0.5 m $^3$

Nominal diameter [mm]	(~ 2 pulse/s) [dm <sup>3</sup> ]
800	0.75 m <sup>3</sup>
900	0.75 m <sup>3</sup>
1000	1 m <sup>3</sup>
1200	1.5 m <sup>3</sup>
1400	2 m <sup>3</sup>
1600	2.5 m <sup>3</sup>
1800	3 m <sup>3</sup>
2000	3.5 m <sup>3</sup>

#### 4.1.5 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	(v ~ 0.04 m/s) [m <sup>3</sup> /h]
2	0.01
4	0.05
8	0.1
15	0.5
25	1
32	2
40	3
50	5
65	8
80	12
100	20
125	30
150	2.5
200	5
250	7.5
300	10
350	15
400	20
450	25
500	30
600	40
700	50
750	60
800	75
900	100
1000	125
1200	150
1400	225

Nominal diameter [mm]	(v ~ 0.04 m/s) [m³/h]
1600	300
1800	350
2 000	450

## 4.2 US units

 Only valid for USA and Canada.

### 4.2.1 System units

Volume flow	gal/min (us)
Volume	gal (us)
Temperature	°F
Mass flow	lb/min
Mass	lb
Density	lb/ft³
Corrected volume flow	Sft³/h
Corrected volume	Sft³

### 4.2.2 Full scale values

 The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [in]	(v ~ 2.5 m/s) [gal/min]
1/12	0.1
1/8	0.5
3/8	2
1/2	6
1	18
1½	50
2	75
3	200
4	300
5	450
6	600
8	1200
10	1500
12	2400
14	3600
15	4800
16	4800

Nominal diameter [in]	(v ~ 2.5 m/s) [gal/min]
18	6 000
20	7 500
24	10 500
28	13 500
30	16 500
32	19 500
36	24 000
40	30 000
42	33 000
48	42 000
54	75 Mgal/d
60	95 Mgal/d
66	120 Mgal/d
72	140 Mgal/d
78	175 Mgal/d

#### 4.2.3 Output current span

Current output 1 to n	4 to 20 mA US
-----------------------	---------------

#### 4.2.4 Pulse value

Nominal diameter [in]	(~ 2 pulse/s) [gal]
1/12	0.001
1/8	0.005
3/8	0.02
1/2	0.1
1	0.2
1½	0.5
2	0.5
3	2
4	2
5	5
6	5
8	10
10	15
12	25
14	30
15	50
16	50
18	50
20	75

Nominal diameter [in]	(~ 2 pulse/s) [gal]
24	100
28	125
30	150
32	200
36	225
40	250
42	250
48	400
54	0.0005 Mgal
60	0.0005 Mgal
66	0.0008 Mgal
72	0.0008 Mgal
78	0.001 Mgal

#### 4.2.5 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	(v ~ 0.04 m/s) [gal/min]
1/12	0.002
1/8	0.008
3/8	0.025
1/2	0.15
1	0.25
1½	0.75
2	1.25
3	2.5
4	4
5	7
6	12
8	15
10	30
12	45
14	60
15	60
16	60
18	90
20	120
24	180
28	210
30	270
32	300

Nominal diameter [in]	(v ~ 0.04 m/s) [gal/min]
36	360
40	480
42	600
48	600
54	1.3 Mgal/d
60	1.3 Mgal/d
66	2.2 Mgal/d
72	2.6 Mgal/d
78	3.0 Mgal/d

## 5 Explanation of abbreviated units

### 5.1 SI units

Process variable	Units	Explanation
Density	g/cm <sup>3</sup> , g/m <sup>3</sup>	Gram/volume unit
	kg/dm <sup>3</sup> , kg/l, kg/m <sup>3</sup>	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Conductivity	µS/mm	Microsiemens/length unit
	nS/cm, µS/cm, mS/cm, S/cm	Nano-, Micro-, Milli-, Siemens/length unit
	µS/m, mS/m, S/m, kS/m, MS/m	Micro-, Milli-, Siemens, Kilo-, Megasiemens/length unit
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Temperature	°C , K	Celsius, Kelvin
Volume	cm <sup>3</sup> , dm <sup>3</sup> , m <sup>3</sup>	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Time	s, m, h, d, y	Second, minute, hour, day, year

### 5.2 US units

Process variable	Units	Explanation
Density	lb/ft <sup>3</sup> , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Corrected volume	Sft <sup>3</sup> , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Correct.vol.flow	Sft <sup>3</sup> /s, Sft <sup>3</sup> /min, Sft <sup>3</sup> /h, Sft <sup>3</sup> /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft <sup>3</sup>	Cubic foot

Process variable	Units	Explanation
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft <sup>3</sup> /s, ft <sup>3</sup> /min, ft <sup>3</sup> /h, ft <sup>3</sup> /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem ( before midday), post meridiem (after midday)

### 5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Correct.vol.flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem ( before midday), post meridiem (after midday)

# Index

## 0 ... 9

- 0/4 mA value (Parameter) ..... 92, 99
- 0% bargraph value 1 (Parameter) ..... 18
- 0% bargraph value 3 (Parameter) ..... 21
- 2.4 GHz WLAN channel (Parameter) ..... 161
- 20 mA value (Parameter) ..... 93, 101
- 100% bargraph value 1 (Parameter) ..... 19
- 100% bargraph value 3 (Parameter) ..... 22

## A

- Access status (Parameter) ..... 13
- Acknowledge Option (Parameter) ..... 155, 204, 238
- Activate SW option (Parameter) ..... 45
- Active level (Parameter) ..... 95
- Actual diagnostics (Parameter) ..... 267
- Actual mode (Parameter) ..... 141, 167, 217, 246, 255
- Administration (Submenu) ..... 42
- Alarm delay (Parameter) ..... 30
- Alarm Hysteresis (Parameter) ..... 205
- Alarm State (Parameter) 153, 156, 202, 208, 210, 211, 213, 239, 241
- Alert Key (Parameter) ..... 139, 167, 216, 245, 254
- Analog input 1 to n (Submenu) ..... 165
- Analog inputs (Submenu) ..... 165
- Analog outputs (Submenu) ..... 243
- Application (Submenu) ..... 261
- Apply changes (Parameter) ..... 161
- Apply I/O configuration (Parameter) ..... 90
- Assign behavior of diagnostic no. 043 (Parameter) ..... 32
- Assign behavior of diagnostic no. 302 (Parameter) ..... 33
- Assign behavior of diagnostic no. 376 (Parameter) ..... 33
- Assign behavior of diagnostic no. 377 (Parameter) ..... 33
- Assign behavior of diagnostic no. 441 (Parameter) ..... 34
- Assign behavior of diagnostic no. 442 (Parameter) ..... 34
- Assign behavior of diagnostic no. 443 (Parameter) ..... 34
- Assign behavior of diagnostic no. 444 (Parameter) ..... 35
- Assign behavior of diagnostic no. 531 (Parameter) ..... 35
- Assign behavior of diagnostic no. 832 (Parameter) ..... 35
- Assign behavior of diagnostic no. 833 (Parameter) ..... 36
- Assign behavior of diagnostic no. 834 (Parameter) ..... 36
- Assign behavior of diagnostic no. 835 (Parameter) ..... 37
- Assign behavior of diagnostic no. 937 (Parameter) ..... 37
- Assign behavior of diagnostic no. 938 (Parameter) ..... 37
- Assign behavior of diagnostic no. 962 (Parameter) ..... 38
- Assign channel 1 (Parameter) ..... 283
- Assign channel 2 (Parameter) ..... 284
- Assign channel 3 (Parameter) ..... 284
- Assign channel 4 (Parameter) ..... 285
- Assign current output 1 to n (Parameter) ..... 97
- Assign diagnostic behavior (Parameter) ..... 124, 133
- Assign flow direction check (Parameter) ..... 128, 132
- Assign frequency output (Parameter) ..... 118
- Assign limit (Parameter) ..... 125, 132
- Assign process variable (Parameter) ..... 69, 262
- Assign pulse output 1 to n (Parameter) ..... 114
- Assign simulation process variable (Parameter) ..... 295

- Assign SSID name (Parameter) ..... 160
- Assign status (Parameter) ..... 128, 133
- Assign status input (Parameter) ..... 95
- Assign status of diagnostic number 043 (Parameter) ..... 38
- Assign status of diagnostic number 302 (Parameter) ..... 38
- Assign status of diagnostic number 376 (Parameter) ..... 39
- Assign status of diagnostic number 377 (Parameter) ..... 39
- Assign status of diagnostic number 531 (Parameter) ..... 39
- Assign status of diagnostic number 832 (Parameter) ..... 40
- Assign status of diagnostic number 833 (Parameter) ..... 40
- Assign status of diagnostic number 834 (Parameter) ..... 40
- Assign status of diagnostic number 835 (Parameter) ..... 41
- Assign status of diagnostic number 937 (Parameter) ..... 41
- Assign status of diagnostic number 938 (Parameter) ..... 41
- Assign status of diagnostic number 962 (Parameter) ..... 42

## B

- Backlight (Parameter) ..... 26
- Backup state (Parameter) ..... 28
- Block Error (Parameter) ..... 142, 169, 219, 247, 256
- Block error description (Parameter) ..... 214
- Block tag (Parameter) ..... 138, 166, 215, 244, 253

## C

- Calibration (Submenu) ..... 87
- Calibration factor (Parameter) ..... 87
- Channel (Parameter) ..... 194, 233, 248, 257
- Clear Fault State (Parameter) ..... 148
- Clear logging data (Parameter) ..... 286
- Communication (Submenu) ..... 137
- Comparison result (Parameter) ..... 29
- Conductivity (Parameter) ..... 49
- Conductivity calibration factor (Parameter) ..... 88
- Conductivity damping (Parameter) ..... 67
- Conductivity factor (Parameter) ..... 84
- Conductivity measurement (Parameter) ..... 68
- Conductivity offset (Parameter) ..... 84
- Conductivity temperature coefficient (Parameter) ..... 68
- Conductivity unit (Parameter) ..... 59
- Configuration backup (Submenu) ..... 27
- Configuration management (Parameter) ..... 27
- Confirm access code (Parameter) ..... 43
- Confirm Time (Parameter) ..... 148
- Contrast display (Parameter) ..... 26
- Control Totalizer 1 to n (Parameter) ..... 264
- Conversion code (Parameter) ..... 90
- Corrected conductivity (Parameter) ..... 49
- Corrected volume flow (Parameter) ..... 48
- Corrected volume flow factor (Parameter) ..... 85
- Corrected volume flow offset (Parameter) ..... 85
- Corrected volume flow unit (Parameter) ..... 62
- Corrected volume unit (Parameter) ..... 63
- Current (Parameter) ..... 154, 203, 238
- Current input 1 to n (Submenu) ..... 52, 91
- Current input 1 to n simulation (Parameter) ..... 297
- Current output 1 to n (Submenu) ..... 96

Current output 1 to n simulation (Parameter) . . . . .	297
Current span (Parameter) . . . . .	92, 98
Cycle Selection (Parameter) . . . . .	147
Cycle Type (Parameter) . . . . .	146
<b>D</b>	
Damping output 1 to n (Parameter) . . . . .	106, 121
Data logging (Parameter) . . . . .	286
Data logging (Submenu) . . . . .	282
Data logging control (Parameter) . . . . .	287
Data logging status (Parameter) . . . . .	287
Date/time format (Parameter) . . . . .	64
DD Resource (Parameter) . . . . .	143
DD Revision (Parameter) . . . . .	144
Decimal (Parameter) . . . . .	183, 193
Decimal places 1 (Parameter) . . . . .	19
Decimal places 2 (Parameter) . . . . .	20
Decimal places 3 (Parameter) . . . . .	22
Decimal places 4 (Parameter) . . . . .	23
Default gateway (Parameter) . . . . .	164
Define access code (Parameter) . . . . .	43
Define access code (Wizard) . . . . .	42
Density (Parameter) . . . . .	50
Density source (Parameter) . . . . .	77
Density unit (Parameter) . . . . .	62
Deny (Parameter) . . . . .	145, 193, 231
Device address (Parameter) . . . . .	137
Device alarm simulation (Parameter) . . . . .	302
Device information (Submenu) . . . . .	276
Device name (Parameter) . . . . .	277
Device reset (Parameter) . . . . .	45
Device revision (Parameter) . . . . .	144
Device tag (Parameter) . . . . .	276
Device type (Parameter) . . . . .	144
Diagnostic behavior (Submenu) . . . . .	30
Diagnostic event category (Parameter) . . . . .	303
Diagnostic event simulation (Parameter) . . . . .	303
Diagnostic handling (Submenu) . . . . .	30
Diagnostic list (Submenu) . . . . .	269
Diagnostics (Submenu) . . . . .	266
Diagnostics 1 (Parameter) . . . . .	269
Diagnostics 2 (Parameter) . . . . .	270
Diagnostics 3 (Parameter) . . . . .	271
Diagnostics 4 (Parameter) . . . . .	272
Diagnostics 5 (Parameter) . . . . .	273
Direct access	
0/4 mA value	
Current input 1 to n (1606-1 to n) . . . . .	92
Current output 1 to n (0367-1 to n) . . . . .	99
0% bargraph value 1 (0123) . . . . .	18
0% bargraph value 3 (0124) . . . . .	21
2.4 GHz WLAN channel (2704) . . . . .	161
20 mA value	
Current input 1 to n (1607-1 to n) . . . . .	93
Current output 1 to n (0372-1 to n) . . . . .	101
100% bargraph value 1 (0125) . . . . .	19
100% bargraph value 3 (0126) . . . . .	22
Access status (0005) . . . . .	13

Acknowledge Option	
Analog input 1 to n (6910-1 to n) . . . . .	204
Discrete input 1 to n (6841-1 to n) . . . . .	238
Acknowledge Option (10691) . . . . .	155
Activate SW option (0029) . . . . .	45
Active level	
Status input 1 to n (1351-1 to n) . . . . .	95
Actual diagnostics (0691) . . . . .	267
Actual mode	
Analog input 1 to n (6957-1 to n) . . . . .	167
Discrete input 1 to n (6870-1 to n) . . . . .	217
Actual mode (10725) . . . . .	141
Actual mode (11264) . . . . .	255
Actual mode (11366) . . . . .	246
Alarm delay (0651) . . . . .	30
Alarm Hysteresis	
Analog input 1 to n (6911-1 to n) . . . . .	205
Alarm State	
Analog input 1 to n (6917-1 to n) . . . . .	202
Analog input 1 to n (6927-1 to n) . . . . .	210
Analog input 1 to n (6932-1 to n) . . . . .	208
Analog input 1 to n (6942-1 to n) . . . . .	211
Analog input 1 to n (6948-1 to n) . . . . .	213
Discrete input 1 to n (6847-1 to n) . . . . .	239
Discrete input 1 to n (6858-1 to n) . . . . .	241
Alarm State (10697) . . . . .	153
Alarm State (10742) . . . . .	156
Alert Key	
Analog input 1 to n (6916-1 to n) . . . . .	167
Discrete input 1 to n (6846-1 to n) . . . . .	216
Alert Key (10696) . . . . .	139
Alert Key (11251) . . . . .	254
Alert Key (11365) . . . . .	245
Apply changes (2712) . . . . .	161
Apply I/O configuration (3907) . . . . .	90
Assign behavior of diagnostic no. 043 (0650) . . . . .	32
Assign behavior of diagnostic no. 302 (0739) . . . . .	33
Assign behavior of diagnostic no. 376 (0645) . . . . .	33
Assign behavior of diagnostic no. 377 (0777) . . . . .	33
Assign behavior of diagnostic no. 441 (0657) . . . . .	34
Assign behavior of diagnostic no. 442 (0658) . . . . .	34
Assign behavior of diagnostic no. 443 (0659) . . . . .	34
Assign behavior of diagnostic no. 444 (0740) . . . . .	35
Assign behavior of diagnostic no. 531 (0741) . . . . .	35
Assign behavior of diagnostic no. 832 (0681) . . . . .	35
Assign behavior of diagnostic no. 833 (0682) . . . . .	36
Assign behavior of diagnostic no. 834 (0700) . . . . .	36
Assign behavior of diagnostic no. 835 (0702) . . . . .	37
Assign behavior of diagnostic no. 937 (0743) . . . . .	37
Assign behavior of diagnostic no. 938 (0642) . . . . .	37
Assign behavior of diagnostic no. 962 (0745) . . . . .	38
Assign channel 1 (0851) . . . . .	283
Assign channel 2 (0852) . . . . .	284
Assign channel 3 (0853) . . . . .	284
Assign channel 4 (0854) . . . . .	285
Assign current output 1 to n (0359-1 to n) . . . . .	97
Assign diagnostic behavior	
Pulse/frequency/switch output 1 to n (0482-1 to n) . . . . .	124

Relay output 1 to n (0806-1 to n) . . . . .	133
Assign flow direction check	
Pulse/frequency/switch output 1 to n (0484-1 to n) . . . . .	128
Relay output 1 to n (0808-1 to n) . . . . .	132
Assign frequency output	
Pulse/frequency/switch output 1 to n (0478-1 to n) . . . . .	118
Assign limit	
Pulse/frequency/switch output 1 to n (0483-1 to n) . . . . .	125
Relay output 1 to n (0807-1 to n) . . . . .	132
Assign process variable	
Totalizer 1 to n (0914-1 to n) . . . . .	262
Assign process variable (1837) . . . . .	69
Assign pulse output 1 to n (0460-1 to n) . . . . .	114
Assign simulation process variable (1810) . . . . .	295
Assign SSID name (2708) . . . . .	160
Assign status	
Pulse/frequency/switch output 1 to n (0485-1 to n) . . . . .	128
Relay output 1 to n (0805-1 to n) . . . . .	133
Assign status input	
Status input 1 to n (1352-1 to n) . . . . .	95
Assign status of diagnostic number 043 (11041) .	38
Assign status of diagnostic number 302 (11001) .	38
Assign status of diagnostic number 376 (11006) .	39
Assign status of diagnostic number 377 (11007) .	39
Assign status of diagnostic number 531 (11016) .	39
Assign status of diagnostic number 832 (11002) .	40
Assign status of diagnostic number 833 (11003) .	40
Assign status of diagnostic number 834 (11004) .	40
Assign status of diagnostic number 835 (11005) .	41
Assign status of diagnostic number 937 (11042) .	41
Assign status of diagnostic number 938 (11008) .	41
Assign status of diagnostic number 962 (11000) .	42
Backlight (0111) . . . . .	26
Backup state (2759) . . . . .	28
Block Error	
Analog input 1 to n (6922-1 to n) . . . . .	169
Discrete input 1 to n (6857-1 to n) . . . . .	219
Block Error (10703) . . . . .	142
Block Error (11272) . . . . .	256
Block Error (11364) . . . . .	247
Block error description	
Analog input 1 to n (6984-1 to n) . . . . .	214
Block tag	
Analog input 1 to n (6901-1 to n) . . . . .	166
Discrete input 1 to n (6851-1 to n) . . . . .	215
Block tag (10702) . . . . .	138
Block tag (11252) . . . . .	253
Block tag (11351) . . . . .	244
Calibration factor (6522) . . . . .	87
Channel	
Analog input 1 to n (6902-1 to n) . . . . .	194
Discrete input 1 to n (6852-1 to n) . . . . .	233
Channel (11253) . . . . .	257
Channel (11352) . . . . .	248
Clear Fault State (10704) . . . . .	148
Clear logging data (0855) . . . . .	286
Comparison result (2760) . . . . .	29
Conductivity (1850) . . . . .	49
Conductivity calibration factor (6718) . . . . .	88
Conductivity damping (1803) . . . . .	67
Conductivity factor (1849) . . . . .	84
Conductivity measurement (6514) . . . . .	68
Conductivity offset (1848) . . . . .	84
Conductivity temperature coefficient (1891) .	68
Conductivity unit (0582) . . . . .	59
Configuration management (2758) . . . . .	27
Confirm Time (10705) . . . . .	148
Contrast display (0105) . . . . .	26
Control Totalizer 1 to n (0912-1 to n) . . . . .	264
Conversion code (2762) . . . . .	90
Corrected conductivity (1853) . . . . .	49
Corrected volume flow (1851) . . . . .	48
Corrected volume flow factor (1867) . . . . .	85
Corrected volume flow offset (1866) . . . . .	85
Corrected volume flow unit (0558) . . . . .	62
Corrected volume unit (0575) . . . . .	63
Current	
Analog input 1 to n (6912-1 to n) . . . . .	203
Discrete input 1 to n (6842-1 to n) . . . . .	238
Current (10692) . . . . .	154
Current input 1 to n simulation (1608-1 to n) .	297
Current output 1 to n simulation (0354-1 to n) .	297
Current span	
Current input 1 to n (1605-1 to n) . . . . .	92
Current output 1 to n (0353-1 to n) . . . . .	98
Cycle Selection (10706) . . . . .	147
Cycle Type (10707) . . . . .	146
Damping output 1 to n (0363-1 to n) . . . . .	106
Damping output 1 to n (0477-1 to n) . . . . .	121
Data logging (0860) . . . . .	286
Data logging control (0857) . . . . .	287
Data logging status (0858) . . . . .	287
Date/time format (2812) . . . . .	64
DD Resource (10708) . . . . .	143
DD Revision (10709) . . . . .	144
Decimal	
Analog input 1 to n (6961-1 to n) . . . . .	193
Analog input 1 to n (6980-1 to n) . . . . .	183
Decimal places 1 (0095) . . . . .	19
Decimal places 2 (0117) . . . . .	20
Decimal places 3 (0118) . . . . .	22
Decimal places 4 (0119) . . . . .	23
Default gateway (7210) . . . . .	164
Density (1857) . . . . .	50
Density source (6615) . . . . .	77
Density unit (0555) . . . . .	62
Deny	
Analog input 1 to n (6925-1 to n) . . . . .	193
Discrete input 1 to n (6867-1 to n) . . . . .	231
Deny (10717) . . . . .	145
Device address (11061) . . . . .	137
Device alarm simulation (0654) . . . . .	302
Device name (0020) . . . . .	277
Device reset (0000) . . . . .	45

Device revision (10710) . . . . .	144	Relay output 1 to n (0811-1 to n) . . . . .	135
Device tag (10799) . . . . .	276	Totalizer 1 to n (0901-1 to n) . . . . .	265
Device type (10711) . . . . .	144	Failure value	
Diagnostic event category (0738) . . . . .	303	Current input 1 to n (1602-1 to n) . . . . .	94
Diagnostic event simulation (0737) . . . . .	303	Fault State (10712) . . . . .	149
Diagnostics 1 (0692) . . . . .	269	Fault State Status (11254) . . . . .	261
Diagnostics 2 (0693) . . . . .	270	Fault State Status (11353) . . . . .	252
Diagnostics 3 (0694) . . . . .	271	Fault State Time (11255) . . . . .	258
Diagnostics 4 (0695) . . . . .	272	Fault State Time (11354) . . . . .	249
Diagnostics 5 (0696) . . . . .	273	Fault State Val 1 (11355) . . . . .	249
Direct access (0106) . . . . .	11	Fault State Val 2 (11356) . . . . .	249
Disabled		Fault State Val 3 (11357) . . . . .	250
Analog input 1 to n (6913-1 to n) . . . . .	204	Fault State Val 4 (11358) . . . . .	250
Discrete input 1 to n (6843-1 to n) . . . . .	239	Fault State Val 5 (11359) . . . . .	250
Disabled (10693) . . . . .	155	Fault State Val 6 (11360) . . . . .	251
Discrete Limit		Fault State Val 7 (11361) . . . . .	251
Discrete input 1 to n (6863-1 to n) . . . . .	243	Fault State Val 8 (11362) . . . . .	251
Discrete Priority		Fault State Value Discrete 1 (11256) . . . . .	258
Discrete input 1 to n (6864-1 to n) . . . . .	243	Fault State Value Discrete 2 (11257) . . . . .	258
Discrete Value		Fault State Value Discrete 3 (11258) . . . . .	259
Discrete input 1 to n (6862-1 to n) . . . . .	242	Fault State Value Discrete 4 (11259) . . . . .	259
Discrete Value (10746) . . . . .	157	Fault State Value Discrete 5 (11260) . . . . .	259
Display damping (0094) . . . . .	24	Fault State Value Discrete 6 (11261) . . . . .	260
Display interval (0096) . . . . .	23	Fault State Value Discrete 7 (11262) . . . . .	260
Display language (0104) . . . . .	15	Fault State Value Discrete 8 (11263) . . . . .	260
ECC cleaning cycle (6557) . . . . .	76	Feature Selection (10714) . . . . .	146
ECC duration (6555) . . . . .	75	Features (10713) . . . . .	146
ECC Polarity (6631) . . . . .	76	Filter options . . . . .	274
ECC recovery time (6556) . . . . .	75	Filter options (0705) . . . . .	274
Electrode cleaning circuit (6528) . . . . .	75	Filter options (6710) . . . . .	65
Empty pipe adjust value (6527) . . . . .	74	Firmware version (10792) . . . . .	277
Empty pipe detection (1860) . . . . .	72	Fixed current	
ENP version (10791) . . . . .	279	Current output 1 to n (0365-1 to n) . . . . .	99
Enter access code (0003) . . . . .	13	Fixed density (6623) . . . . .	77
Entire logging duration (0861) . . . . .	288	Float Value	
EU at 0%		Analog input 1 to n (6931-1 to n) . . . . .	211
Analog input 1 to n (6962-1 to n) . . . . .	184	Analog input 1 to n (6936-1 to n) . . . . .	209
Analog input 1 to n (6981-1 to n) . . . . .	180	Analog input 1 to n (6946-1 to n) . . . . .	212
EU at 100%		Analog input 1 to n (6952-1 to n) . . . . .	214
Analog input 1 to n (6963-1 to n) . . . . .	183	Flow damping (6661) . . . . .	66
Analog input 1 to n (6982-1 to n) . . . . .	180	Flow override (1839) . . . . .	66
Extended order code 1 (10796) . . . . .	278	Flow velocity (1854) . . . . .	49
Extended order code 2 (10797) . . . . .	279	Flow velocity factor (1880) . . . . .	86
External density (6630) . . . . .	77	Flow velocity offset (1879) . . . . .	86
External temperature (6673) . . . . .	80	Format display (0098) . . . . .	15
Failure current		Free Space (10715) . . . . .	148
Current output 1 to n (0352-1 to n) . . . . .	109	Free Time (10716) . . . . .	148
Failure frequency		Frequency output simulation 1 to n (0472-1 to n)	
Pulse/frequency/switch output 1 to n (0474-1		. . . . .	298
to n) . . . . .	123	Frequency value 1 to n (0473-1 to n) . . . . .	299
Failure mode		Full pipe adjust value (6548) . . . . .	74
Current input 1 to n (1601-1 to n) . . . . .	93	Grant	
Current output 1 to n (0364-1 to n) . . . . .	108	Analog input 1 to n (6926-1 to n) . . . . .	193
Pulse/frequency/switch output 1 to n (0451-1		Discrete input 1 to n (6868-1 to n) . . . . .	232
to n) . . . . .	122	Grant (10718) . . . . .	145
Pulse/frequency/switch output 1 to n (0480-1		Hard Types (10719) . . . . .	145
to n) . . . . .	116	Hardware revision (10793) . . . . .	278
Pulse/frequency/switch output 1 to n (0486-1		Header (0097) . . . . .	24
to n) . . . . .	129	Header text (0112) . . . . .	25

High High Limit	Maximum value (0665) . . . . .	291
Analog input 1 to n (6937-1 to n) . . . . .	205	
High High Priority	Maximum value (6545) . . . . .	292
Analog input 1 to n (6938-1 to n) . . . . .	205	
High Limit	Maximum value (6680) . . . . .	293
Analog input 1 to n (6939-1 to n) . . . . .	206	
High Priority	Measured current 1 to n (0366-1 to n) . . . . .	54, 110
Analog input 1 to n (6940-1 to n) . . . . .	206	
I/O module 1 terminal numbers (3902-1)	Measured current 1 to n (1604-1 to n) . . . . .	52
I/O module 1 to n information (3906-1 to n)	Measured value EPD (6559) . . . . .	74
I/O module 1 to n terminal numbers (3902-1 to	Measured values 1 to n (1603-1 to n) . . . . .	52
n) . . . . .	Measuring mode	
I/O module 1 to n type (3901-1 to n) . . . . .	Current output 1 to n (0351-1 to n) . . . . .	102
I/O module 2 terminal numbers (3902-2)	Pulse/frequency/switch output 1 to n (0457-1	
I/O module 3 terminal numbers (3902-3)	to n) . . . . .	115
I/O module 4 terminal numbers (3902-4)	Pulse/frequency/switch output 1 to n (0479-1	
I/O Options	to n) . . . . .	120
Analog input 1 to n (6941-1 to n) . . . . .	Measuring period (6536) . . . . .	82
Discrete input 1 to n (6869-1 to n) . . . . .	Measuring value at maximum frequency	
Input signal level (1356)	Pulse/frequency/switch output 1 to n (0475-1	
Installation direction (1809)	to n) . . . . .	120
Integration time (6533)	Measuring value at minimum frequency	
Invert output signal	Pulse/frequency/switch output 1 to n (0476-1	
Pulse/frequency/switch output 1 to n (0470-1	to n) . . . . .	119
to n) . . . . .	Memory Size (10723) . . . . .	147
IP address (7209)	Minimum frequency value	
ITK Version (10794)	Pulse/frequency/switch output 1 to n (0453-1	
Last backup (2757)	to n) . . . . .	118
Limit Notify (10720)	Minimum value (0688) . . . . .	291
Linear expansion coefficient (1817)	Minimum value (6547) . . . . .	292
Linearization Type	Minimum value (6681) . . . . .	293
Analog input 1 to n (6905-1 to n) . . . . .	Minumum Cycle Time (10724) . . . . .	147
Locking status (0004)	New adjustment (6560) . . . . .	73
Logging delay (0859)	Nominal diameter (2807) . . . . .	87
Logging interval (0856)	Nonvolatile Cycle Time (10729) . . . . .	147
Login page (7273)	Normal mode	
Low Cutoff	Analog input 1 to n (6958-1 to n) . . . . .	168
Analog input 1 to n (6956-1 to n) . . . . .	Discrete input 1 to n (6871-1 to n) . . . . .	218
Low Limit	Normal mode (10726) . . . . .	142
Analog input 1 to n (6947-1 to n) . . . . .	Normal mode (11265) . . . . .	256
Low Low Limit	Normal mode (11367) . . . . .	247
Analog input 1 to n (6953-1 to n) . . . . .	Off value low flow cutoff (1804) . . . . .	70
Low Low Priority	On value low flow cutoff (1805) . . . . .	69
Analog input 1 to n (6954-1 to n) . . . . .	Operating mode	
Low Priority	Pulse/frequency/switch output 1 to n (0469-1	
Analog input 1 to n (6955-1 to n) . . . . .	to n) . . . . .	112
MAC address (7214)	Operating time (0652) . . . . .	27, 44, 269
Manufacturer Id (10721)	Operating time from restart (0653) . . . . .	269
Mass flow (1847)	Order code (10795) . . . . .	278
Mass flow factor (1846)	Output current 1 to n (0361-1 to n) . . . . .	54, 109
Mass flow offset (1841)	Output frequency 1 to n (0471-1 to n) . . . . .	54, 123
Mass flow unit (0554)	Output State	
Mass unit (0574)	Discrete input 1 to n (6874-1 to n) . . . . .	231
Max Notify (10722)	Permitted mode	
Max. switch cycles number	Analog input 1 to n (6959-1 to n) . . . . .	168
Relay output 1 to n (0817-1 to n) . . . . .	Discrete input 1 to n (6872-1 to n) . . . . .	218
Maximum frequency value	Permitted mode (10727) . . . . .	141
Pulse/frequency/switch output 1 to n (0454-1	Permitted mode (11266) . . . . .	255
to n) . . . . .	Permitted mode (11368) . . . . .	246
Powerless relay status		
	Relay output 1 to n (0816-1 to n) . . . . .	136
	Preset value 1 to n (0913-1 to n) . . . . .	265
	Pressure shock suppression (1806) . . . . .	70

Previous diagnostics (0690) . . . . .	268
Process Value Filter Time	
Analog input 1 to n (6909-1 to n) . . . . .	200
Discrete input 1 to n (6855-1 to n) . . . . .	233
Process variable value (1811) . . . . .	295
Progress (6571) . . . . .	73
Pulse output 1 to n (0456-1 to n) . . . . .	55, 117
Pulse output simulation 1 to n (0458-1 to n) . .	299
Pulse value 1 to n (0459-1 to n) . . . . .	300
Pulse width	
Pulse/frequency/switch output 1 to n (0452-1 to n) . . . . .	115
Reference density (1885) . . . . .	68
Reference density (1892) . . . . .	78
Reference temperature (1816) . . . . .	80
Relative Index	
Analog input 1 to n (6975-1 to n) . . . . .	201
Discrete input 1 to n (6886-1 to n) . . . . .	238
Relative Index (10737) . . . . .	151
Relay output 1 to n simulation (0802-1 to n) . .	301
Relay output function	
Relay output 1 to n (0804-1 to n) . . . . .	131
Reset access code (0024) . . . . .	44
Reset all totalizers (2806) . . . . .	261
Reset min/max values (6541) . . . . .	291
Resource State (10730) . . . . .	142
Response time	
Current output 1 to n (0378-1 to n) . . . . .	107
Pulse/frequency/switch output 1 to n (0491-1 to n) . . . . .	122
Response time empty pipe detection (1859) . . .	73
Response time status input	
Status input 1 to n (1354-1 to n) . . . . .	96
Restart (10800) . . . . .	145
Security type (2705) . . . . .	160
Select antenna (2713) . . . . .	161
Separator (0101) . . . . .	26
Serial number (10798) . . . . .	277
Set Fault State (10731) . . . . .	149
Shed Remote Cascade (10732) . . . . .	150
Shed Remote Out (10733) . . . . .	150
Signal mode	
Current input 1 to n (1610-1 to n) . . . . .	92
Current output 1 to n (0377-1 to n) . . . . .	97
Pulse/frequency/switch output 1 to n (0490-1 to n) . . . . .	112
Simulate En/Disable	
Analog input 1 to n (6966-1 to n) . . . . .	180
Discrete input 1 to n (6877-1 to n) . . . . .	230
Simulate Status	
Analog input 1 to n (6967-1 to n) . . . . .	174
Discrete input 1 to n (6878-1 to n) . . . . .	225
Simulate Value	
Analog input 1 to n (6968-1 to n) . . . . .	177
Discrete input 1 to n (6879-1 to n) . . . . .	227
Software option overview (0015) . . . . .	46
Software revision	
I/O module 1 (0072) . . . . .	281, 282
I/O module 2 (0072) . . . . .	281, 282

I/O module 3 (0072) . . . . .	281, 282
I/O module 4 (0072) . . . . .	281, 282
Software revision (0072) . . . . .	280, 282
Square expansion coefficient (1818) . . . . .	78
SSID name (2707) . . . . .	161
Static revision	
Analog input 1 to n (6976-1 to n) . . . . .	201
Discrete input 1 to n (6887-1 to n) . . . . .	237
Static Revision	
Analog input 1 to n (6973-1 to n) . . . . .	166
Discrete input 1 to n (6884-1 to n) . . . . .	216
Static Revision (10735) . . . . .	138
Static revision (10738) . . . . .	151
Static Revision (11270) . . . . .	253
Static Revision (11371) . . . . .	244
Status	
Analog input 1 to n (6906-1 to n) . . . . .	172
Analog input 1 to n (6923-1 to n) . . . . .	197
Analog input 1 to n (6964-1 to n) . . . . .	169
Discrete input 1 to n (6853-1 to n) . . . . .	222
Discrete input 1 to n (6865-1 to n) . . . . .	233
Discrete input 1 to n (6875-1 to n) . . . . .	219
Status input simulation (1355) . . . . .	296
Status Options	
Analog input 1 to n (6971-1 to n) . . . . .	194
Discrete input 1 to n (6882-1 to n) . . . . .	232
Status Options (11268) . . . . .	257
Status Options (11363) . . . . .	248
Strategy	
Analog input 1 to n (6972-1 to n) . . . . .	166
Discrete input 1 to n (6883-1 to n) . . . . .	216
Strategy (10734) . . . . .	138
Strategy (11269) . . . . .	254
Strategy (11370) . . . . .	245
Subcode	
Analog input 1 to n (6918-1 to n) . . . . .	203
Analog input 1 to n (6928-1 to n) . . . . .	210
Analog input 1 to n (6933-1 to n) . . . . .	208
Analog input 1 to n (6943-1 to n) . . . . .	212
Analog input 1 to n (6949-1 to n) . . . . .	214
Discrete input 1 to n (6848-1 to n) . . . . .	240
Discrete input 1 to n (6859-1 to n) . . . . .	241
Subcode (10698) . . . . .	153
Subcode (10743) . . . . .	157
Subnet mask (7211) . . . . .	164
Switch cycles	
Relay output 1 to n (0815-1 to n) . . . . .	56
Switch output function	
Pulse/frequency/switch output 1 to n (0481-1 to n) . . . . .	124
Switch output simulation 1 to n (0462-1 to n) . .	300
Switch point empty pipe detection (6562) . . . .	72
Switch status	
Relay output 1 to n (0801-1 to n) . . . . .	56, 136
Switch status 1 to n (0461-1 to n) . . . . .	55, 129
Switch status 1 to n (0463-1 to n) . . . . .	301
Switch status 1 to n (0803-1 to n) . . . . .	302

Switch-off delay	
Pulse/frequency/switch output 1 to n (0465-1 to n) . . . . .	129
Relay output 1 to n (0813-1 to n) . . . . .	134
Switch-off value	
Pulse/frequency/switch output 1 to n (0464-1 to n) . . . . .	127
Relay output 1 to n (0809-1 to n) . . . . .	134
Switch-on delay	
Pulse/frequency/switch output 1 to n (0467-1 to n) . . . . .	128
Relay output 1 to n (0814-1 to n) . . . . .	135
Switch-on value	
Pulse/frequency/switch output 1 to n (0466-1 to n) . . . . .	127
Relay output 1 to n (0810-1 to n) . . . . .	134
Tag Description	
Analog input 1 to n (6974-1 to n) . . . . .	166
Discrete input 1 to n (6885-1 to n) . . . . .	216
Tag Description (10736) . . . . .	138
Tag Description (11271) . . . . .	254
Tag Description (11372) . . . . .	245
Target mode	
Analog input 1 to n (6960-1 to n) . . . . .	167
Discrete input 1 to n (6873-1 to n) . . . . .	217
Target mode (10728) . . . . .	139
Target mode (11267) . . . . .	254
Target mode (11369) . . . . .	245
Temperature (1852) . . . . .	49
Temperature damping (1886) . . . . .	67
Temperature factor (1869) . . . . .	86
Temperature offset (1868) . . . . .	85
Temperature source (6712) . . . . .	80
Temperature unit (0557) . . . . .	60
Terminal number	
Current input 1 to n (1611-1 to n) . . . . .	91
Current output 1 to n (0379-1 to n) . . . . .	97
Pulse/frequency/switch output 1 to n (0492-1 to n) . . . . .	111
Relay output 1 to n (0812-1 to n) . . . . .	131
Status input 1 to n (1358-1 to n) . . . . .	94
Time Stamp	
Analog input 1 to n (6919-1 to n) . . . . .	202
Analog input 1 to n (6929-1 to n) . . . . .	210
Analog input 1 to n (6934-1 to n) . . . . .	208
Analog input 1 to n (6944-1 to n) . . . . .	212
Analog input 1 to n (6950-1 to n) . . . . .	213
Analog input 1 to n (6977-1 to n) . . . . .	201
Discrete input 1 to n (6849-1 to n) . . . . .	240
Discrete input 1 to n (6860-1 to n) . . . . .	242
Discrete input 1 to n (6888-1 to n) . . . . .	237
Time Stamp (10699) . . . . .	153
Time Stamp (10739) . . . . .	151
Time Stamp (10744) . . . . .	156
Timestamp . . . . .	267, 268, 270, 271, 272, 273
Totalizer operation mode	
Totalizer 1 to n (0908-1 to n) . . . . .	264
Totalizer overflow 1 to n (0910-1 to n) . . . . .	51
Totalizer value 1 to n (0911-1 to n) . . . . .	50
Transducer State	
Discrete input 1 to n (6891-1 to n) . . . . .	231
Transducer Status	
Analog input 1 to n (6969-1 to n) . . . . .	177
Discrete input 1 to n (6880-1 to n) . . . . .	228
Transducer Value	
Analog input 1 to n (6970-1 to n) . . . . .	179
Discrete input 1 to n (6881-1 to n) . . . . .	230
Unacknowledged	
Analog input 1 to n (6914-1 to n) . . . . .	204
Analog input 1 to n (6920-1 to n) . . . . .	202
Analog input 1 to n (6930-1 to n) . . . . .	209
Analog input 1 to n (6935-1 to n) . . . . .	207
Analog input 1 to n (6945-1 to n) . . . . .	211
Analog input 1 to n (6951-1 to n) . . . . .	213
Analog input 1 to n (6978-1 to n) . . . . .	200
Discrete input 1 to n (6844-1 to n) . . . . .	239
Discrete input 1 to n (6850-1 to n) . . . . .	240
Discrete input 1 to n (6861-1 to n) . . . . .	242
Discrete input 1 to n (6889-1 to n) . . . . .	236
Unacknowledged (10694) . . . . .	154
Unacknowledged (10700) . . . . .	152
Unacknowledged (10740) . . . . .	150
Unacknowledged (10745) . . . . .	156
Unit totalizer 1 to n (0915-1 to n) . . . . .	263
Units index	
Analog input 1 to n (6908-1 to n) . . . . .	184
Analog input 1 to n (6983-1 to n) . . . . .	180
Unreported	
Analog input 1 to n (6915-1 to n) . . . . .	204
Discrete input 1 to n (6845-1 to n) . . . . .	239
Unreported (10695) . . . . .	154
Update State	
Analog input 1 to n (6979-1 to n) . . . . .	201
Discrete input 1 to n (6890-1 to n) . . . . .	237
Update State (10741) . . . . .	151
Value	
Analog input 1 to n (6907-1 to n) . . . . .	174
Analog input 1 to n (6921-1 to n) . . . . .	203
Analog input 1 to n (6924-1 to n) . . . . .	200
Analog input 1 to n (6965-1 to n) . . . . .	171
Discrete input 1 to n (6854-1 to n) . . . . .	224
Discrete input 1 to n (6856-1 to n) . . . . .	241
Discrete input 1 to n (6866-1 to n) . . . . .	236
Discrete input 1 to n (6876-1 to n) . . . . .	221
Value (10701) . . . . .	154
Value 1 display (0107) . . . . .	18
Value 2 display (0108) . . . . .	20
Value 3 display (0110) . . . . .	21
Value 4 display (0109) . . . . .	22
Value current input 1 to n (1609-1 to n) . . . . .	297
Value current output 1 to n (0355-1 to n) . . . . .	298
Value per pulse	
Pulse/frequency/switch output 1 to n (0455-1 to n) . . . . .	114
Value status input	
Status input 1 to n (1353-1 to n) . . . . .	95
Value status input 1 to n (1353-1 to n) . . . . .	53
Volume flow (1838) . . . . .	48

Volume flow factor (1832) . . . . .	83	Extended order code 2 (Parameter) . . . . .	279
Volume flow offset (1831) . . . . .	83	External compensation (Submenu) . . . . .	76
Volume flow unit (0553) . . . . .	57	External density (Parameter) . . . . .	77
Volume unit (0563) . . . . .	59	External temperature (Parameter) . . . . .	80
Web server functionality (7222) . . . . .	164	<b>F</b>	
Web server language (7221) . . . . .	162	Factory settings . . . . .	304
WLAN (2702) . . . . .	158	SI units . . . . .	304
WLAN IP address (2711) . . . . .	159	US units . . . . .	307
WLAN MAC address (2703) . . . . .	159	Failure current (Parameter) . . . . .	109
WLAN passphrase (2706) . . . . .	160	Failure frequency (Parameter) . . . . .	123
WLAN subnet mask (2709) . . . . .	159	Failure mode (Parameter) 93, 108, 116, 122, 129, 135, . . . . .	265
Write Lock (10747) . . . . .	152	Failure value (Parameter) . . . . .	94
Write Priority (10748) . . . . .	155	Fault State (Parameter) . . . . .	149
Zero point (6546) . . . . .	88	Fault State Status (Parameter) . . . . .	252, 261
Direct access (Parameter) . . . . .	11	Fault State Time (Parameter) . . . . .	249, 258
Disabled (Parameter) . . . . .	155, 204, 239	Fault State Val 1 (Parameter) . . . . .	249
Discrete input 1 to n (Submenu) . . . . .	215	Fault State Val 2 (Parameter) . . . . .	249
Discrete inputs (Submenu) . . . . .	215	Fault State Val 3 (Parameter) . . . . .	250
Discrete Limit (Parameter) . . . . .	243	Fault State Val 4 (Parameter) . . . . .	250
Discrete outputs (Submenu) . . . . .	252	Fault State Val 5 (Parameter) . . . . .	250
Discrete Priority (Parameter) . . . . .	243	Fault State Val 6 (Parameter) . . . . .	251
Discrete Value (Parameter) . . . . .	157, 242	Fault State Val 7 (Parameter) . . . . .	251
Display (Submenu) . . . . .	14	Fault State Val 8 (Parameter) . . . . .	251
Display channel 1 (Submenu) . . . . .	288	Fault State Value Discrete 1 (Parameter) . . . . .	258
Display channel 2 (Submenu) . . . . .	289	Fault State Value Discrete 2 (Parameter) . . . . .	258
Display channel 3 (Submenu) . . . . .	289	Fault State Value Discrete 3 (Parameter) . . . . .	259
Display channel 4 (Submenu) . . . . .	290	Fault State Value Discrete 4 (Parameter) . . . . .	259
Display damping (Parameter) . . . . .	24	Fault State Value Discrete 5 (Parameter) . . . . .	259
Display interval (Parameter) . . . . .	23	Fault State Value Discrete 6 (Parameter) . . . . .	260
Display language (Parameter) . . . . .	15	Fault State Value Discrete 7 (Parameter) . . . . .	260
Display module (Submenu) . . . . .	282	Fault State Value Discrete 8 (Parameter) . . . . .	260
Document		Feature Selection (Parameter) . . . . .	146
Explanation of the structure of a parameter		Features (Parameter) . . . . .	146
description . . . . .	6	Filter options (Parameter) . . . . .	65, 274
Function . . . . .	4	Firmware version (Parameter) . . . . .	277
Structure . . . . .	4	Fixed current (Parameter) . . . . .	99
Symbols used . . . . .	6	Fixed density (Parameter) . . . . .	77
Target group . . . . .	4	Float Value (Parameter) . . . . .	209, 211, 212, 214
Using the document . . . . .	4	Flow damping (Parameter) . . . . .	66
Document function . . . . .	4	Flow override (Parameter) . . . . .	66
<b>E</b>			
ECC cleaning cycle (Parameter) . . . . .	76	Flow velocity (Parameter) . . . . .	49
ECC duration (Parameter) . . . . .	75	Flow velocity factor (Parameter) . . . . .	86
ECC Polarity (Parameter) . . . . .	76	Flow velocity offset (Parameter) . . . . .	86
ECC recovery time (Parameter) . . . . .	75	Format display (Parameter) . . . . .	15
Electrode cleaning circuit (Parameter) . . . . .	75	Free Space (Parameter) . . . . .	148
Electrode cleaning circuit (Submenu) . . . . .	74	Free Time (Parameter) . . . . .	148
Empty pipe adjust value (Parameter) . . . . .	74	Frequency output simulation 1 to n (Parameter) . . . . .	298
Empty pipe detection (Parameter) . . . . .	72	Frequency value 1 to n (Parameter) . . . . .	299
Empty pipe detection (Submenu) . . . . .	72	Full pipe adjust value (Parameter) . . . . .	74
ENP version (Parameter) . . . . .	279	Function	
Enter access code (Parameter) . . . . .	13	see Parameter	
Entire logging duration (Parameter) . . . . .	288	<b>G</b>	
EU at 0% (Parameter) . . . . .	180, 184	Grant (Parameter) . . . . .	145, 193, 232
EU at 100% (Parameter) . . . . .	180, 183	<b>H</b>	
Event list (Submenu) . . . . .	275	Hard Types (Parameter) . . . . .	145
Event logbook (Submenu) . . . . .	273		
Extended order code 1 (Parameter) . . . . .	278		

Hardware revision (Parameter) . . . . .	278	Maximum value (Parameter) . . . . .	291, 292, 293																																										
Header (Parameter) . . . . .	24	Measured current 1 to n (Parameter) . . . . .	52, 54, 110																																										
Header text (Parameter) . . . . .	25	Measured value EPD (Parameter) . . . . .	74																																										
Heartbeat (Submenu) . . . . .	294	Measured values (Submenu) . . . . .	47																																										
High High Limit (Parameter) . . . . .	205	Measured values 1 to n (Parameter) . . . . .	52																																										
High High Priority (Parameter) . . . . .	205	Measuring mode (Parameter) . . . . .	102, 115, 120																																										
High Limit (Parameter) . . . . .	206	Measuring period (Parameter) . . . . .	82																																										
High Priority (Parameter) . . . . .	206	Measuring value at maximum frequency (Parameter)																																											
		120																																											
<b>I</b>		Measuring value at minimum frequency (Parameter)																																											
I/O configuration (Submenu) . . . . .	88	119																																											
I/O module 1 (Submenu) . . . . .	280	Memory Size (Parameter) . . . . .	147																																										
I/O module 1 terminal numbers (Parameter) . . . . .	281	Min/max values (Submenu) . . . . .	290																																										
I/O module 1 to n information (Parameter) . . . . .	89	Minimum frequency value (Parameter) . . . . .	118																																										
I/O module 1 to n terminal numbers (Parameter) . . . . .	89	Minimum value (Parameter) . . . . .	291, 292, 293																																										
I/O module 1 to n type (Parameter) . . . . .	89	Minumum Cycle Time (Parameter) . . . . .	147																																										
I/O module 2 (Submenu) . . . . .	281	Multiple analog output (Submenu) . . . . .	244																																										
I/O module 2 terminal numbers (Parameter) . . . . .	281	Multiple discrete output (Submenu) . . . . .	252																																										
I/O module 3 terminal numbers (Parameter) . . . . .	281																																												
I/O module 4 terminal numbers (Parameter) . . . . .	281																																												
I/O Options (Parameter) . . . . .	193, 232																																												
Input (Submenu) . . . . .	91																																												
Input signal level (Parameter) . . . . .	296																																												
Input values (Submenu) . . . . .	52																																												
Installation direction (Parameter) . . . . .	81																																												
Integration time (Parameter) . . . . .	82																																												
Invert output signal (Parameter) . . . . .	130																																												
IP address (Parameter) . . . . .	163																																												
ITK Version (Parameter) . . . . .	158, 278																																												
<b>L</b>																																													
Last backup (Parameter) . . . . .	27	Off value low flow cutoff (Parameter) . . . . .	70																																										
Limit Notify (Parameter) . . . . .	149	On value low flow cutoff (Parameter) . . . . .	69																																										
Linear expansion coefficient (Parameter) . . . . .	78	Operating mode (Parameter) . . . . .	112																																										
Linearization Type (Parameter) . . . . .	195	Operating time (Parameter) . . . . .	27, 44, 269																																										
Locking status (Parameter) . . . . .	12	Operating time from restart (Parameter) . . . . .	269																																										
Logging delay (Parameter) . . . . .	286	Order code (Parameter) . . . . .	278																																										
Logging interval (Parameter) . . . . .	285	Output (Submenu) . . . . .	96																																										
Login page (Parameter) . . . . .	165	Output current 1 to n (Parameter) . . . . .	54, 109																																										
Low Cutoff (Parameter) . . . . .	197	Output frequency 1 to n (Parameter) . . . . .	54, 123																																										
Low flow cut off (Submenu) . . . . .	69	Output State (Parameter) . . . . .	231																																										
Low Limit (Parameter) . . . . .	207	Output values (Submenu) . . . . .	53																																										
Low Low Limit (Parameter) . . . . .	207																																												
Low Low Priority (Parameter) . . . . .	207																																												
Low Priority (Parameter) . . . . .	206																																												
<b>M</b>																																													
MAC address (Parameter) . . . . .	163	<b>P</b>																																											
Main electronic temperature (Submenu) . . . . .	291	Parameter		Structure of a parameter description . . . . .	6	Mainboard module (Submenu) . . . . .	279	Permitted mode (Parameter) . . . . .	141, 168, 218, 246, 255	Manufacturer Id (Parameter) . . . . .	144	Powerless relay status (Parameter) . . . . .	136	Mass flow (Parameter) . . . . .	48	Preset value 1 to n (Parameter) . . . . .	265	Mass flow factor (Parameter) . . . . .	84	Pressure shock suppression (Parameter) . . . . .	70	Mass flow offset (Parameter) . . . . .	83	Previous diagnostics (Parameter) . . . . .	268	Mass flow unit (Parameter) . . . . .	60	Process parameters (Submenu) . . . . .	64	Mass unit (Parameter) . . . . .	61	Process Value Filter Time (Parameter) . . . . .	200, 233	Max Notify (Parameter) . . . . .	149	Process variable adjustment (Submenu) . . . . .	82	Max. switch cycles number (Parameter) . . . . .	57	Process variable value (Parameter) . . . . .	295	Maximum frequency value (Parameter) . . . . .	119	Process variables (Submenu) . . . . .	47
Parameter		Structure of a parameter description . . . . .	6																																										
Mainboard module (Submenu) . . . . .	279	Permitted mode (Parameter) . . . . .	141, 168, 218, 246, 255																																										
Manufacturer Id (Parameter) . . . . .	144	Powerless relay status (Parameter) . . . . .	136																																										
Mass flow (Parameter) . . . . .	48	Preset value 1 to n (Parameter) . . . . .	265																																										
Mass flow factor (Parameter) . . . . .	84	Pressure shock suppression (Parameter) . . . . .	70																																										
Mass flow offset (Parameter) . . . . .	83	Previous diagnostics (Parameter) . . . . .	268																																										
Mass flow unit (Parameter) . . . . .	60	Process parameters (Submenu) . . . . .	64																																										
Mass unit (Parameter) . . . . .	61	Process Value Filter Time (Parameter) . . . . .	200, 233																																										
Max Notify (Parameter) . . . . .	149	Process variable adjustment (Submenu) . . . . .	82																																										
Max. switch cycles number (Parameter) . . . . .	57	Process variable value (Parameter) . . . . .	295																																										
Maximum frequency value (Parameter) . . . . .	119	Process variables (Submenu) . . . . .	47																																										

**R**

Reference density (Parameter) ..... 68, 78  
Reference temperature (Parameter) ..... 80  
Relative Index (Parameter) ..... 151, 201, 238  
Relay output 1 to n (Submenu) ..... 56, 130  
Relay output 1 to n simulation (Parameter) ..... 301  
Relay output function (Parameter) ..... 131  
Reset access code (Parameter) ..... 44  
Reset access code (Submenu) ..... 44  
Reset all totalizers (Parameter) ..... 261  
Reset min/max values (Parameter) ..... 291  
Resource block (Submenu) ..... 137  
Resource State (Parameter) ..... 142  
Response time (Parameter) ..... 107, 122  
Response time empty pipe detection (Parameter) ..... 73  
Response time status input (Parameter) ..... 96  
Restart (Parameter) ..... 145

**S**

Security type (Parameter) ..... 160  
Select antenna (Parameter) ..... 161  
Sensor (Submenu) ..... 47  
Sensor adjustment (Submenu) ..... 81  
Sensor electronic module (ISEM) (Submenu) ..... 280  
Sensor electronic temperature (ISEM) (Submenu) ..... 292  
Separator (Parameter) ..... 26  
Serial number (Parameter) ..... 277  
Set Fault State (Parameter) ..... 149  
Shed Remote Cascade (Parameter) ..... 150  
Shed Remote Out (Parameter) ..... 150  
Signal mode (Parameter) ..... 92, 97, 112  
Simulate En/Disable (Parameter) ..... 180, 230  
Simulate Status (Parameter) ..... 174, 225  
Simulate Value (Parameter) ..... 177, 227  
Simulation (Submenu) ..... 294  
Software option overview (Parameter) ..... 46  
Software revision (Parameter) ..... 280, 281, 282  
Square expansion coefficient (Parameter) ..... 78  
SSID name (Parameter) ..... 161  
Static revision (Parameter) ..... 151, 201, 237  
Static Revision (Parameter) ..... 138, 166, 216, 244, 253  
Status (Parameter) ..... 169, 172, 197, 219, 222, 233  
Status input 1 to n (Submenu) ..... 94  
Status input simulation (Parameter) ..... 296  
Status Options (Parameter) ..... 194, 232, 248, 257  
Strategy (Parameter) ..... 138, 166, 216, 245, 254  
Subcode (Parameter) ..... 153, 157, 203, 208, 210, 212, 214, 240, 241  
Submenu  
    Administration ..... 42  
    Analog input 1 to n ..... 165  
    Analog inputs ..... 165  
    Analog outputs ..... 243  
    Application ..... 261  
    Calibration ..... 87  
    Communication ..... 137  
    Configuration backup ..... 27  
    Current input 1 to n ..... 52, 91  
    Current output 1 to n ..... 96

    Data logging ..... 282  
    Device information ..... 276  
    Diagnostic behavior ..... 30  
    Diagnostic handling ..... 30  
    Diagnostic list ..... 269  
    Diagnostics ..... 266  
    Discrete input 1 to n ..... 215  
    Discrete inputs ..... 215  
    Discrete outputs ..... 252  
    Display ..... 14  
    Display channel 1 ..... 288  
    Display channel 2 ..... 289  
    Display channel 3 ..... 289  
    Display channel 4 ..... 290  
    Display module ..... 282  
    Electrode cleaning circuit ..... 74  
    Empty pipe detection ..... 72  
    Event list ..... 275  
    Event logbook ..... 273  
    External compensation ..... 76  
    Heartbeat ..... 294  
    I/O configuration ..... 88  
    I/O module 1 ..... 280  
    I/O module 2 ..... 281  
    Input ..... 91  
    Input values ..... 52  
    Low flow cut off ..... 69  
    Main electronic temperature ..... 291  
    Mainboard module ..... 279  
    Measured values ..... 47  
    Min/max values ..... 290  
    Multiple analog output ..... 244  
    Multiple discrete output ..... 252  
    Output ..... 96  
    Output values ..... 53  
    Process parameters ..... 64  
    Process variable adjustment ..... 82  
    Process variables ..... 47  
    Pulse/frequency/switch output 1 to n ..... 54, 110  
    Relay output 1 to n ..... 56, 130  
    Reset access code ..... 44  
    Resource block ..... 137  
    Sensor ..... 47  
    Sensor adjustment ..... 81  
    Sensor electronic module (ISEM) ..... 280  
    Sensor electronic temperature (ISEM) ..... 292  
    Simulation ..... 294  
    Status input 1 to n ..... 94  
    System ..... 13  
    System units ..... 57  
    Temperature ..... 293  
    Totalizer ..... 50  
    Totalizer 1 to n ..... 262  
    Value current output 1 to n ..... 53  
    Value status input 1 to n ..... 53  
    Web server ..... 162  
    WLAN settings ..... 158  
    Subnet mask (Parameter) ..... 164  
    Switch cycles (Parameter) ..... 56

Switch output function (Parameter) . . . . .	124	Volume flow offset (Parameter) . . . . .	83
Switch output simulation 1 to n (Parameter) . . . . .	300	Volume flow unit (Parameter) . . . . .	57
Switch point empty pipe detection (Parameter) . . . . .	72	Volume unit (Parameter) . . . . .	59
Switch status (Parameter) . . . . .	56, 136		
Switch status 1 to n (Parameter) . . . . .	55, 129, 301, 302		
Switch-off delay (Parameter) . . . . .	129, 134		
Switch-off value (Parameter) . . . . .	127, 134		
Switch-on delay (Parameter) . . . . .	128, 135		
Switch-on value (Parameter) . . . . .	127, 134		
System (Submenu) . . . . .	13		
System units (Submenu) . . . . .	57		
<b>T</b>			
Tag Description (Parameter) . . . . .	138, 166, 216, 245, 254		
Target group . . . . .	4		
Target mode (Parameter) . . . . .	139, 167, 217, 245, 254		
Temperature (Parameter) . . . . .	49		
Temperature (Submenu) . . . . .	293		
Temperature damping (Parameter) . . . . .	67		
Temperature factor (Parameter) . . . . .	86		
Temperature offset (Parameter) . . . . .	85		
Temperature source (Parameter) . . . . .	80		
Temperature unit (Parameter) . . . . .	60		
Terminal number (Parameter) . . . . .	91, 94, 97, 111, 131		
Time Stamp (Parameter) . . . . .	151, 153, 156, 201, 202, 208, 210, 212, 213, 237, 240, 242		
Timestamp (Parameter) . . . . .	267, 268, 270, 271, 272, 273		
Totalizer (Submenu) . . . . .	50		
Totalizer 1 to n (Submenu) . . . . .	262		
Totalizer operation mode (Parameter) . . . . .	264		
Totalizer overflow 1 to n (Parameter) . . . . .	51		
Totalizer value 1 to n (Parameter) . . . . .	50		
Transducer State (Parameter) . . . . .	231		
Transducer Status (Parameter) . . . . .	177, 228		
Transducer Value (Parameter) . . . . .	179, 230		
<b>U</b>			
Unacknowledged (Parameter) . . . . .	150, 152, 154, 156, 200, 202, 204, 207, 209, 211, 213, 236, 239, 240, 242		
Unit totalizer 1 to n (Parameter) . . . . .	263		
Units index (Parameter) . . . . .	180, 184		
Unreported (Parameter) . . . . .	154, 204, 239		
Update State (Parameter) . . . . .	151, 201, 237		
<b>V</b>			
Value (Parameter) . . . . .	154, 171, 174, 200, 203, 221, 224, 236, 241		
Value 1 display (Parameter) . . . . .	18		
Value 2 display (Parameter) . . . . .	20		
Value 3 display (Parameter) . . . . .	21		
Value 4 display (Parameter) . . . . .	22		
Value current input 1 to n (Parameter) . . . . .	297		
Value current output 1 to n (Parameter) . . . . .	298		
Value current output 1 to n (Submenu) . . . . .	53		
Value per pulse (Parameter) . . . . .	114		
Value status input (Parameter) . . . . .	53, 95		
Value status input 1 to n (Submenu) . . . . .	53		
Volume flow (Parameter) . . . . .	48		
Volume flow factor (Parameter) . . . . .	83		
Volume flow offset (Parameter) . . . . .	83		
Volume flow unit (Parameter) . . . . .	57		
Volume unit (Parameter) . . . . .	59		
<b>W</b>			
Web server (Submenu) . . . . .	162		
Web server functionality (Parameter) . . . . .	164		
Web server language (Parameter) . . . . .	162		
Wizard			
Define access code . . . . .	42		
WLAN (Parameter) . . . . .	158		
WLAN IP address (Parameter) . . . . .	159		
WLAN MAC address (Parameter) . . . . .	159		
WLAN passphrase (Parameter) . . . . .	160		
WLAN settings (Submenu) . . . . .	158		
WLAN subnet mask (Parameter) . . . . .	159		
Write Lock (Parameter) . . . . .	152		
Write Priority (Parameter) . . . . .	155		
<b>Z</b>			
Zero point (Parameter) . . . . .	88		

[www.addresses.endress.com](http://www.addresses.endress.com)

---