
Operating Instructions **Proline Promag H 300 FOUNDATION Fieldbus**

Electromagnetic flowmeter





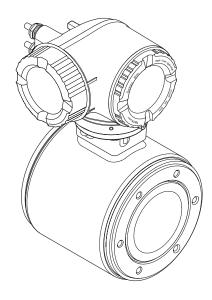

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	Document information	6
1.1 1.2	Document functionSymbols used1.2.1Safety symbols1.2.2Electrical symbols1.2.3Communication symbols1.2.4Tool symbols1.2.5Symbols for certain types of information1.2.6Symbols in graphics	6 6 6 7 7 7
1.3	Documentation1.3.1Standard documentation1.3.2Supplementary device-dependent documentation	8 8 8
1.4	Registered trademarks	9
2	Basic safety instructions	10
2.1 2.2 2.3 2.4 2.5 2.6 2.7	Requirements for the personnel Designated use	10 10 11 11 11 12 12 12
	2.7.3 Access via fieldbus	12 13 13
3	Product description	14
3.1	Product design	14
4	Incoming acceptance and product	
4.1		15 15
4.1 4.2	5 1	15
	1	16
	1	17 18
5	Storage and transport	19
5.1	5	19
5.2	Transporting the product	19
	lugs	19
5.3	5.2.3 Transporting with a fork lift	20 20 20

6	Installation	21
6.1	Installation conditions6.1.1Mounting position6.1.2Requirements from environment and	21 21
6.0	6.1.3 Special mounting instructions	23 25
6.2	Mounting the measuring device6.2.1Required tools6.2.2Preparing the measuring device	25 25 25
	6.2.3 Mounting the sensor6.2.4 Turning the transmitter housing	25 28
6.3	6.2.5 Turning the display module Post-installation check	28 29
7	Electrical connection	30
7.1	Connection conditions7.1.1Required tools7.1.2Requirements for connecting cable	30 30 30
	7.1.3 Terminal assignment7.1.4 Device plugs available	32 32
	7.1.5 Pin assignment of device plug7.1.6 Preparing the measuring device	32 32
7.2	Connecting the measuring device	33 33
7.3	operating module DKX001 Ensure potential equalization	36 36
7.7	7.3.1 Requirements7.3.2 Connection example, standard	36
	scenario7.3.3 Connection example in special	36
7.4	situationsSpecial connection instructions7.4.1Connection examples	36 38 38
7.5 7.6	Ensuring the degree of protection Post-connection check	40 41
8	Operation options	42
8.1 8.2	Overview of operation options Structure and function of the operating	42
0.2	menu	43
	8.2.1 Structure of the operating menu8.2.2 Operating philosophy	43 44
8.3	Access to the operating menu via the local	45
	display	45 45
	8.3.2 Navigation view	47
	8.3.3 Editing view	49 50
	8.3.4 Operating elements8.3.5 Opening the context menu	50 51
	8.3.6 Navigating and selecting from list	53
	8.3.7 Calling the parameter directly	53
	8.3.8 Calling up help text	54
	8.3.9 Changing the parameters	55

	8.3.10	User roles and related access	ГС
	8.3.11	authorization	56
	8.3.12	code	56
8.4	Access	lock	56
		r	57
	8.4.1	Function range	57
	8.4.2	Prerequisites	57
	8.4.3	Establishing a connection	59
	8.4.4	Logging on	60
	8.4.5	User interface	61
	8.4.6	Disabling the Web server	62
8.5	8.4.7 Access	Logging out	62
ر.0		ng tool	63
	8.5.1	Connecting the operating tool	63
	8.5.2	Field Xpert SFX350, SFX370	65
	8.5.3	FieldCare	66
	8.5.4	DeviceCare	67
	8.5.5	AMS Device Manager	67
	8.5.6	Field Communicator 475	68
9	Syster	m integration	69
9.1	Overvie	ew of device description files	69
	9.1.1	Current version data for the device	69
	9.1.2	Operating tools	69
9.2		lata transmission	69
	9.2.1	Block model	69
	9.2.1 9.2.2	Assignment of the measured values	
	9.2.2	Assignment of the measured values in the function blocks	70
	9.2.2 9.2.3	Assignment of the measured values in the function blocks Execution times	70 73
	9.2.2	Assignment of the measured values in the function blocks	70
10	9.2.2 9.2.3 9.2.4	Assignment of the measured values in the function blocks Execution times	70 73 73
10 10.1	9.2.2 9.2.3 9.2.4 Comm	Assignment of the measured values in the function blocks Execution times	70 73 73
	9.2.2 9.2.3 9.2.4 Comm Functic Switchi	Assignment of the measured values in the function blocks	70 73 73 74
10.1 10.2 10.3	9.2.2 9.2.3 9.2.4 Comm Function Switchin Connect	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Function Switchi Connect Setting	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 74
10.1 10.2 10.3	9.2.2 9.2.3 9.2.4 Comm Function Switching Connect Setting Configu	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 74 75
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Function Switchin Connect Setting Configu 10.5.1	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 75 76
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Function Switchi Connect Setting Configu 10.5.1 10.5.2	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 75 76 76
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Function Switchi Connect Setting Configu 10.5.1 10.5.2 10.5.3	Assignment of the measured values in the function blocks Execution times	70 73 73 74 74 74 74 74 75 76 76 79
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4	Assignment of the measured values in the function blocks Execution times	70 73 73 74 74 74 74 74 75 76 76 79 79
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5	Assignment of the measured values in the function blocks Execution times	70 73 73 74 74 74 74 74 75 76 76 79 80
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4	Assignment of the measured values in the function blocks Execution times	70 73 73 74 74 74 74 74 75 76 76 79 79
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6	Assignment of the measured values in the function blocks Execution times	70 73 73 74 74 74 74 74 75 76 76 79 80 81
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7	Assignment of the measured values in the function blocks Execution times	70 73 73 74 74 74 74 74 74 75 76 76 79 80 81 82 85
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 75 76 79 79 80 81 82 85 91
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 75 76 76 76 76 79 80 81 82 82 85 91 93
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 75 76 76 79 80 81 82 85 91 93 94
10.1 10.2 10.3 10.4 10.5	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.12	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 75 76 76 79 80 81 82 85 91 93 94 96
10.1 10.2 10.3 10.4	9.2.2 9.2.3 9.2.4 Comm Function Switchi Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.12 Advance	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 75 76 76 79 80 81 82 85 91 93 94
10.1 10.2 10.3 10.4 10.5	9.2.2 9.2.3 9.2.4 Comm Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.12	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 74 75 76 79 80 81 82 85 91 93 94 97
10.1 10.2 10.3 10.4 10.5	9.2.2 9.2.3 9.2.4 Comm Function Switchi Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.12 Advance	Assignment of the measured values in the function blocks	70 73 73 74 74 74 74 74 75 76 76 79 80 81 82 85 91 93 94 96

	10.6.3 10.6.4	Configuring the totalizer Carrying out additional display	. 98
		configurations	100
	10.6.5	Performing electrode cleaning	103
	10.6.6	WLAN configuration	103
	10.6.7 10.6.8	Configuration management Using parameters for device	104
		administration	106
10.7		ion	107
10.8		ing settings from unauthorized	110
		TAT	110
	10.8.1	1	110
	10.8.2	1 1	117
	10.8.3	switch Write protection via block	112
	10.0.5	operation	112
			112
11		tion	113
11.1		g the device locking status	113
11.2		ng the operating language	113
11.3		uring the display	113
11.4		g measured values	113
	11.4.1		114
	11.4.2		115
	11.4.3	1	115 117
11.5	11.4.4 Adaptir	Output values	11/
11.7		ng the measuring device to the process	119
11.6		ning a totalizer reset	119
11.0	11.6.1	5	11)
	11.0.1	Totalizer" parameter	119
	11.6.2	Function scope of the "Reset all	117
	11.0.2	totalizers" parameter	120
11.7	Showin	g data logging	120
10			100
12	-	ostics and troubleshooting	122
12.1 12.2		l troubleshooting	122
	diodes .		124
	12.2.1		124
12.3	Diagnos	stic information on local display	125
	12.3.1	5	125
	12.3.2	Calling up remedial measures	127
12.4		stic information in the Web browser .	127
	12.4.1	Diagnostic options	127
40 5	12.4.2	Calling up remedy information	128
12.5		stic information in DeviceCare or re	170
			128 128
	12.5.1 12.5.2	Diagnostic options Calling up remedy information	128
12.6		ig the diagnostic information	130
14.0	Auaptii 12.6.1	Adapting the diagnostic behavior	130
	12.6.2	Adapting the status signal	130
12.7		w of diagnostic information	134
±4./	12.7.1	Diagnostic of sensor	135
	12.7.2	Diagnostic of electronic	136
	12.7.3	Diagnostic of configuration	143
	12.7.4	Diagnostic of process	151

12.8 12.9	Pending diagnostic events Diagnostic messages in the DIAGNOSTIC	154
12 10	Transducer Block Diagnostic list	155 155
	Event logbook	156
	12.11.1 Event history	156
	12.11.2 Filtering the event logbook	156
	12.11.3 Overview of information events	157
12.12	Resetting the measuring device	158
	12.12.1 Function scope of the "Restart"	158
12 13	parameter Device information	158
	Firmware history	160
		100
13	Maintenance	161
13.1	Maintenance tasks	161
	13.1.1 Exterior cleaning	161
	13.1.2 Interior cleaning	161
10.0	13.1.3 Replacing seals	161
13.2 13.3	Measuring and test equipment	161 161
13.3	Endress+Hauser services	101
14	Repairs	162
14.1	General notes	162
	14.1.1 Repair and conversion concept	162
	14.1.2 Notes for repair and conversion	162
14.2	Spare parts	162
14.3	Endress+Hauser services	162
14.4	Return	162
14.5	Disposal	163
	1451 Removing the measuring device	163
	14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device	163 163
	14.5.2 Disposing of the measuring device	163
15	14.5.2 Disposing of the measuring device Accessories	163 164
15 15.1	14.5.2 Disposing of the measuring device Accessories	163 164 164
	14.5.2 Disposing of the measuring device Accessories	163 164 164 164
15.1	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensor	163 164 164 164 164
15.1 15.2	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessories	163 164 164 164 165
15.1	14.5.2 Disposing of the measuring device Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories	163 164 164 164 164
15.1 15.2 15.3	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessories	163 164 164 164 165 165
15.1 15.2 15.3	14.5.2 Disposing of the measuring deviceAccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessoriesService-specific accessoriesSystem componentsTechnical data	163 164 164 164 165 165
15.1 15.2 15.3 15.4 16 16.1	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components Technical data Application	163 164 164 164 165 165 166 167 167
15.1 15.2 15.3 15.4 16 16.1 16.2	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components Technical data Application Function and system design	163 164 164 164 165 165 165 166 167 167 167
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components Technical data Application Function and system design Input	163 164 164 164 165 165 165 166 167 167 167 167
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components System components Function and system design Input Output	163 164 164 164 165 165 165 166 167 167 167 167 170
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components Technical data Application Function and system design Input Output Power supply	163 164 164 164 165 165 166 167 167 167 167 167 170 176
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components System components Function and system design Input Output	163 164 164 164 165 165 165 166 167 167 167 167 170
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessoriesService-specific accessoriesSystem componentsTechnical dataApplicationFunction and system designInputOutputPower supplyPerformance characteristics	163 164 164 164 165 165 166 167 167 167 167 167 170 176 177
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessoriesService-specific accessoriesSystem componentsTechnical dataApplicationFunction and system designInputOutputPower supplyPerformance characteristicsInstallationEnvironmentProcess	163 164 164 164 165 165 165 166 167 167 167 167 170 176 177 178 178 178 179
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessoriesService-specific accessoriesSystem componentsTechnical dataApplicationFunction and system designInputOutputPower supplyPerformance characteristicsInstallationEnvironmentProcessMechanical construction	163 164 164 164 165 165 165 166 167 167 167 167 170 176 177 178 178 178 179 181
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components System components Function and system design Input Output Power supply Performance characteristics Installation Environment Process Mechanical construction	163 164 164 164 165 165 166 167 167 167 167 170 176 177 178 178 178 178 179 181 184
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11 16.12	14.5.2 Disposing of the measuring device .AccessoriesDevice-specific accessories15.1.1 For the transmitter15.1.2 For the sensorCommunication-specific accessoriesService-specific accessoriesSystem componentsTechnical dataApplicationFunction and system designInputOutputPower supplyPerformance characteristicsInstallationProcessMechanical constructionOperabilityCertificates and approvals	163 164 164 164 165 165 166 167 167 167 167 170 176 177 178 178 178 179 181 184 188
15.1 15.2 15.3 15.4 16 16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8 16.9 16.10 16.11 16.12 16.13	14.5.2 Disposing of the measuring device . Accessories Device-specific accessories 15.1.1 For the transmitter 15.1.2 For the sensor Communication-specific accessories Service-specific accessories System components System components Function and system design Input Output Power supply Performance characteristics Installation Environment Process Mechanical construction	163 164 164 164 165 165 166 167 167 167 167 170 176 177 178 178 178 178 179 181 184

	100
Index	193

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
A WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
\sim	Alternating current
\sim	Direct current and alternating current
<u>+</u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
4	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Communication symbols

Symbol	Meaning
((:-	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
8	Bluetooth Wireless data transmission between devices over a short distance.

Symbol	Meaning
	LED Light emitting diode is off.
- <u>\</u>	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

1.2.4 Tool symbols

Symbol	Meaning
•	Flat blade screwdriver
$\bigcirc \not \blacksquare$	Allen key
Ń	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
×	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
1., 2., 3	Series of steps
L.	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.6 Symbols in graphics

Symbol	Meaning	
1, 2, 3,	m numbers	
1., 2., 3	eries of steps	
A, B, C,	/iews	
A-A, B-B, C-C,	Sections	

Symbol	Meaning		
Hazardous area			
Safe area (non-hazardous area)			
≈➡	Flow direction		

1.3 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W*@*M* Device Viewer : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

For a detailed list of the individual documents along with the documentation code $\rightarrow \cong 191$

1.3.1 Standard documentation

Document type	Purpose and content of the document		
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.		
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device.		
	Incoming acceptance and product identificationStorage and transportInstallation		
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value).		
	 Product description Installation Electrical connection Operation options System integration Commissioning Diagnostic information 		
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.		

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

FOUNDATIONTM Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

Applicator[®], FieldCare[®], DeviceCare[®], Field XpertTM, HistoROM[®], Heartbeat TechnologyTM

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ► Follow the instructions in this manual.

2.2 Designated use

Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids with a minimum conductivity of 5 μ S/cm.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ► If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section. → <a> 8.
- Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids!

- ► Verify the compatibility of the process fluid with the sensor material.
- Ensure the resistance of all fluid-wetted materials in the process.
- Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

WARNING

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

► For elevated fluid temperatures, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

• Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

• Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- Operate the device in proper technical condition and fail-safe condition only.
- ► The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered \rightarrow \cong 112.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

User-specific access code

Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Is equivalent to hardware write protection in terms of functionality.

WLAN passphrase

The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ($\rightarrow \cong 110$).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ($\rightarrow \bigoplus 64$) which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter ($\rightarrow \triangleq 104$).

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

2.7.3 Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to *"Read only"* access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.

For detailed information, see the "Description of Device Parameters" document pertaining to the device $\rightarrow \cong 191$

2.7.4 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server (). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information, see the "Description of Device Parameters" document pertaining to the device $\rightarrow \cong 191$


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

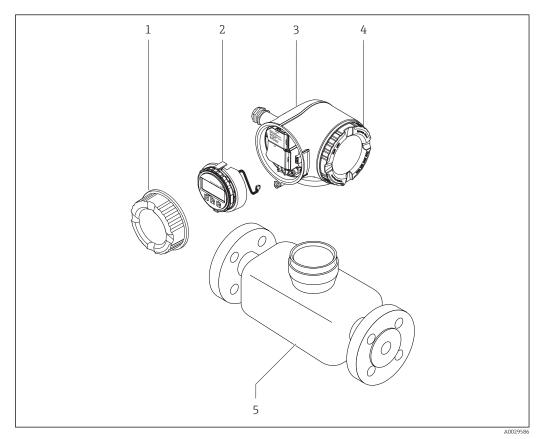


■ 1 Important components of a measuring device

- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Electronics compartment cover
- 5 Sensor

4 Incoming acceptance and product identification

4.1 Incoming acceptance

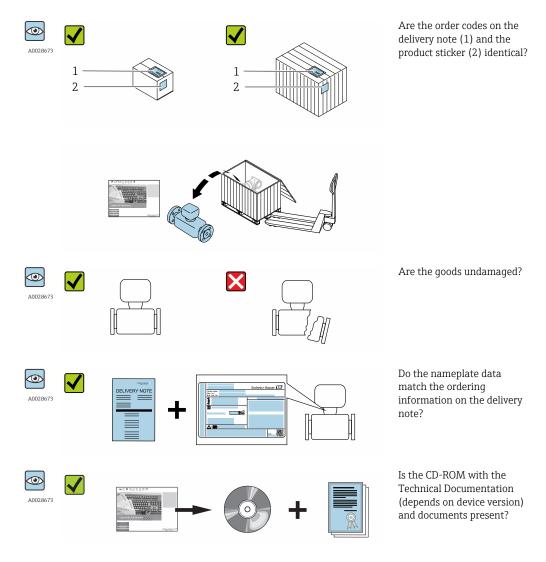

4.2 Product identification


The following options are available for identification of the measuring device: • Nameplate specifications

- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" $\rightarrow \cong 8$ and "Supplementary device-dependent documentation" $\rightarrow \cong 8$
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.


4.2.1 Transmitter nameplate

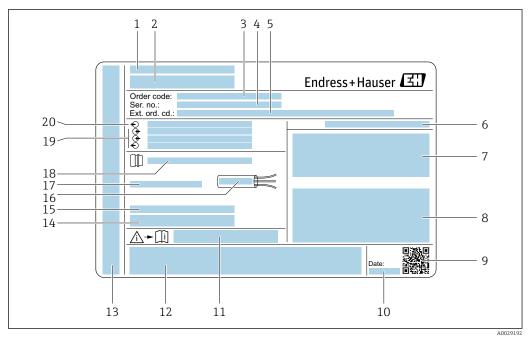

Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

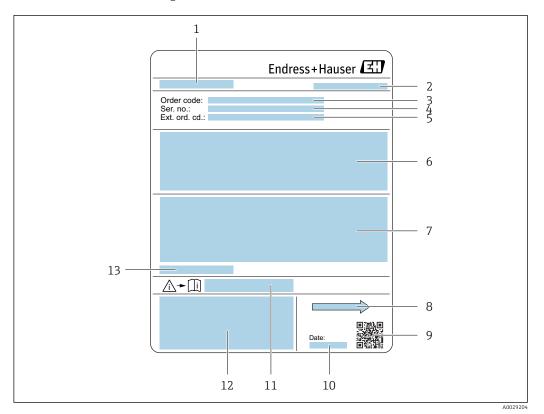

🛃 3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- Flow; nominal diameter of the sensor; pressure rating; nominal pressure; system pressure; fluid temperature 6 range; material of liner and electrodes
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- Document number of safety-related supplementary documentation $\rightarrow \square$ 191 11
- CE mark, C-Tick 12
- 13 Permitted ambient temperature (T_a)



Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

Symbol	Meaning
Δ	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
Ĩ	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

4.2.3 Symbols on measuring device

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature $\rightarrow \square 179$

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

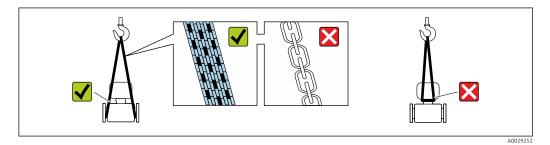

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- Secure the measuring device against slipping or turning.
- Observe the weight specified on the packaging (stick-on label).

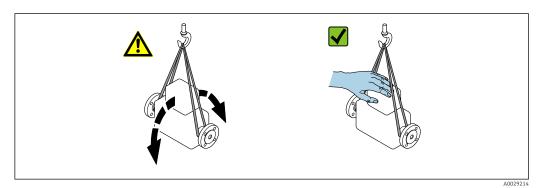

5.2.2 Measuring devices with lifting lugs

Special transportation instructions for devices with lifting lugs

- Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.


5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

ACAUTION

Risk of damaging the magnetic coil

- If transporting by forklift, do not lift the sensor by the metal casing.
- This would buckle the casing and damage the internal magnetic coils.

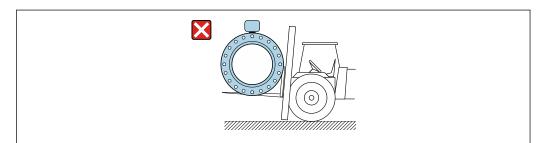

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

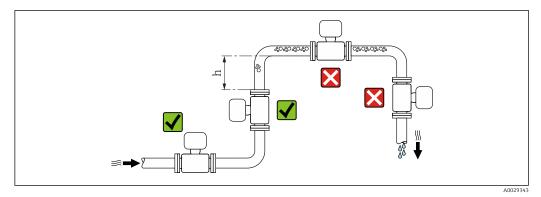

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h \ge 2 \times DN$


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length $h \ge 5 \text{ m}$ (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.

For information on the liner's resistance to partial vacuum

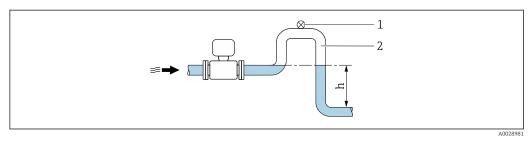


Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon

h Length of down pipe

Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration. The empty pipe detection (EPD) function offers additional protection by detecting empty or partially filled pipes.

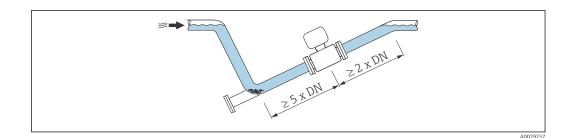


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube.


The measuring device also offers the empty pipe detection function to detect partially filled measuring pipes in the event of outgassing fluids or variable process pressures.

Vertical



Optimum for self-emptying pipe systems and for use in conjunction with empty pipe detection.

Horizontal

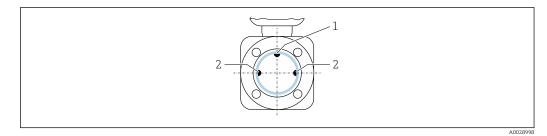

1 EPD electrode for empty pipe detection


2 Measuring electrodes for signal detection

• Ideally, the measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.

• Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows. Observe the following inlet and outlet runs to comply with accuracy specifications:

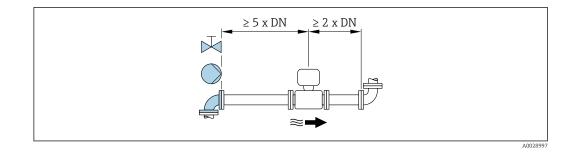

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

6.1.2 Requirements from environment and process


Ambient temperature range

Transmitter	Standard: -40 to +60 °C (-40 to +140 °F)
Local display	-20 to $+60$ °C (-4 to $+140$ °F), the readability of the display may be impaired at temperatures outside the temperature range.
Sensor	-20 to +60 °C (-4 to +140 °F)
Liner	Do not exceed or fall below the permitted temperature range of the liner .

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

System pressure



Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.


Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.

- For information on the liner's resistance to partial vacuum
 - For information on the shock resistance of the measuring system
 - For information on the vibration resistance of the measuring system

Vibrations

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.


- For information on the shock resistance of the measuring system
- For information on the vibration resistance of the measuring system

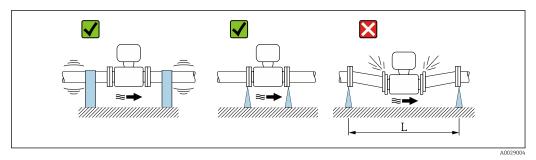


• \blacksquare 5 Measures to avoid device vibrations (L > 10 m (33 ft))


Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.






2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

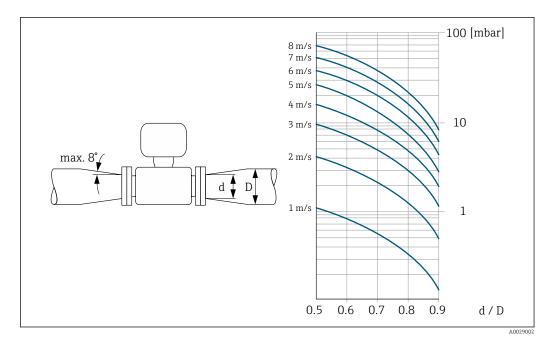

6.1.3 Special mounting instructions

Protective cover

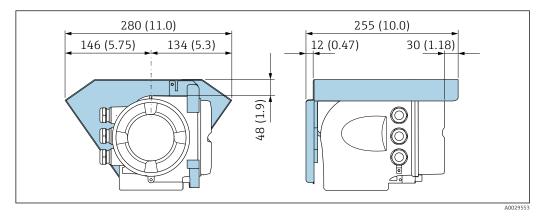

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections:

- Screws, nuts, seals etc. are not included in the scope of supply and must be provided by the customer.
- Appropriate mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.

- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the sensor

WARNING

Danger due to improper process sealing!

- Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- Ensure that the gaskets are clean and undamaged.
- ► Install the gaskets correctly.
- **1.** Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
- 2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.

3. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

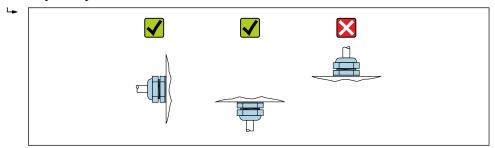

The sensor is supplied to order, with or without pre-installed process connections. Preinstalled process connections are firmly secured to the sensor by 4 or 6 hexagonal-headed bolts.

- Depending on the application and pipe length: Support the sensor or secure it additionally.
- If using plastic process connections:
 It is absolutely essential to secure the sensor.

An appropriate wall mounting kit can be ordered separately as an accessory from Endress+Hauser $\rightarrow \cong$ 190.

Welding the sensor into the pipe (welding connections)

WARNING

Risk of destroying the electronics!

- Make sure that the welding system is not grounded via the sensor or transmitter.
- **1.** Tack-weld the sensor to secure it in the pipe. A suitable welding aid can be ordered separately as an accessory $\rightarrow \triangleq 190$.
- 2. Release the screws on the process connection flange and remove the sensor, along with the seal, from the pipe.
- 3. Weld the process connection into the pipe.
- 4. Reinstall the sensor in the pipe, and in doing so make sure that the seal is clean and in the right position.
- If thin-walled pipes carrying food are welded correctly: Disassemble the sensor and seal even if the seal is not damaged by the heat when mounted.

It must be possible to open the pipe by at least 8 mm (0.31 in) to permit disassembly.

Mounting the seals

Comply with the following instructions when installing seals:

- 1. In the case of metal process connections, the screws must be tightened securely. The process connection forms a metal connection with the sensor, which ensures a defined compression of the seal.
- 2. In the case of plastic process connections, observe the maximum torques for lubricated threads: 7 Nm (5.2 lbf ft); always insert a seal between the connection and the counterflange in the case of plastic flanges.

3. Depending on the application the seals should be replaced periodically, particularly if molded seals are used (aseptic version)! The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature. Replacement seals can be ordered as an accessory → 🗎 190.


Mounting grounding rings (DN 2 to 25 (1/12 to 1"))

Pay attention to the information on potential equalization .

In the case of plastic process connections (e.g. flange connections or adhesive fittings), additional ground rings must be used to ensure potential matching between the sensor and the fluid. If grounding rings are not installed, this can affect the measuring accuracy or cause the destruction of the sensor as a result of the electrochemical decomposition of the electrodes.

- Depending on the option ordered, plastic disks are used instead of grounding rings on some process connections. These plastic disks only act as "spacers" and do not have any potential matching function. Furthermore, they also perform a significant sealing function at the sensor/process connection interface. Therefore, in the case of process connections without metal grounding rings, these plastic disks/seals should never be removed and should always be installed!
 - Grounding rings can be ordered separately as an accessory from Endress+Hauser
 →
 ⇒ 190. When ordering make sure that the grounding rings are compatible with the material used for the electrodes, as otherwise there is the danger that the electrodes could be destroyed by electrochemical corrosion!

 Material specifications →
 ⇒ 183.
 - Grounding rings, including seals, are mounted inside the process connections. Therefore the installation length is not affected.

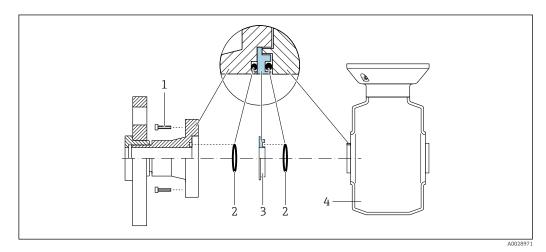

- 6 Installing grounding rings
- 1 Hexagonal-headed bolts of process connection
- 2 O-ring seals
- 3 Grounding ring or plastic disk (spacer)
- 4 Sensor


1. Release the 4 or 6 hexagonal-headed bolts (1) and remove the process connection from the sensor (4).

- **2.** Remove the plastic disk (3), along with the two O-ring seals (2), from the process connection.
- 3. Place the first O-ring seal (2) back into the groove of the process connection.
- 4. Fit the metal grounding ring (3) in the process connection as illustrated.
- 5. Place the second O-ring seal (2) into the groove of the grounding ring.

Mount the process connection back on the sensor. When doing so, make sure to observe the maximum screw tightening torques for lubricated threads: 7 Nm (5.2 lbf ft)

6.2.4 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

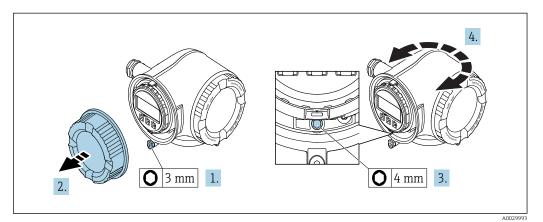

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Release the fixing screw.
- 4. Turn the housing to the desired position.
- 5. Firmly tighten the securing screw.
- 6. Screw on the connection compartment cover
- 7. Fit the securing clamp of the connection compartment cover.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

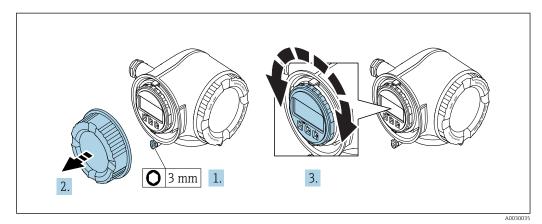

- **1.** Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max. $8 \times 45^{\circ}$ in every direction.
- 4. Screw on the connection compartment cover.
- 5. Fit the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?		
Does the measuring device conform to the measuring point specifications? For example: • Process temperature • Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) • Ambient temperature • Measuring range		
 Has the correct orientation for the sensor been selected ? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids) 		
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ?		
Are the measuring point identification and labeling correct (visual inspection)?		
Have the fixing screws been tightened with the correct tightening torque?		

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ► For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ► Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver $\leq 3 \text{ mm} (0.12 \text{ in})$

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable: 2.1 mm² (14 AWG)

The grounding impedance must be less than 1Ω .

Permitted temperature range

Minimum requirement: cable temperature range ≥ ambient temperature +20 K

Power supply cable

Standard installation cable is sufficient.

Signal cable

FOUNDATION Fieldbus

Twisted, shielded two-wire cable.

For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
- M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) • Spring-loaded terminals: Suitable for strands and strands with ferrules.
- Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Connecting cable for transmitter - remote display and operating module DKX001

Standard cable

A standard cable can be used as the connecting cable.

Standard cable 4 cores (2 pairs); pair-stranded with common shield	
ShieldingTin-plated copper-braid, optical cover ≥ 85 %	
Capacitance: core/shieldMaximum 1000 nF for Zone 1, Class I, Division 1	
L/R Maximum 24 μ H/Ω for Zone 1, Class I, Division 1	
Cable length	Maximum 300 m (1000 ft), see the following table

Cross-section	Cable length for use in non-hazardous area, Ex Zone 2, Class I, Division 2 Ex Zone 1, Class I, Division 1		
0.34 mm ² (22 AWG)	80 m (270 ft)		
0.50 mm ² (20 AWG)	120 m (400 ft)		
0.75 mm ² (18 AWG)	180 m (600 ft)		
1.00 mm ² (17 AWG)	240 m (800 ft)		
1.50 mm ² (15 AWG)	300 m (1000 ft)		

Optionally available connecting cable

Standard cable $2 \times 2 \times 0.34 \text{ mm}^2$ (22 AWG) PVC cable with common shield (2 pairs, pair stranded)		
Flame resistance	According to DIN EN 60332-1-2	
Oil-resistance According to DIN EN 60811-2-1		
Shielding	Tin-plated copper-braid, optical cover \ge 85 %	
Capacitance: core/shield	<200 pF/m	
L/R	\leq 24 μ H/ Ω	
Available cable length	10 m (35 ft)	
Operating temperature	When mounted in a fixed position: –50 to +105 $^\circ$ C (–58 to +221 $^\circ$ F); when cable can move freely: –25 to +105 $^\circ$ C (–13 to +221 $^\circ$ F)	

7.1.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.					

Terminal assignment of the remote display and operating module: $\rightarrow \cong 36$

7.1.4 Device plugs available

P Device plugs may not be used in hazardous areas!

Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for		Cable entry	Cable entry	
"Electrical connection"		2	3	
M, 3, 4, 5		7/8" plug	-	

7.1.5 Pin assignment of device plug

Pin		Assignment	Coding	Plug/socket
1	+	Signal +	А	Plug
2	-	Signal –		
3		Grounding		
4		Not assigned]	

7.1.6 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

► Use suitable cable glands corresponding to the degree of protection.

- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands: Observe requirements for connecting cables $\rightarrow \cong 30$.


7.2 Connecting the measuring device

NOTICE


Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by correspondingly trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- For use in potentially explosive atmospheres, observe the information in the devicespecific Ex documentation.


7.2.1 Connecting the transmitter

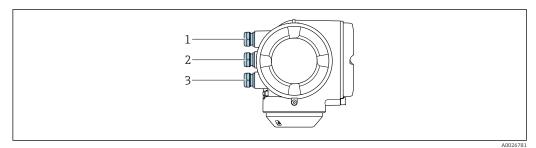


- 1 Cable entry for supply voltage
- 2 Cable entry for signal transmission, input/output 1 and 2
- 3 Cable entry for input/output signal transmission; Optional: connection of external WLAN antenna, connection of remote display and operating module DKX001 or service plug

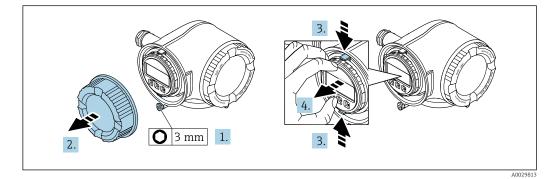


- **1.** Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

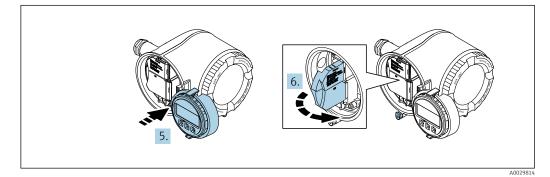

- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

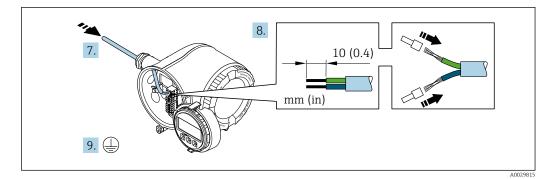


- 7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 9. Connect the protective ground.

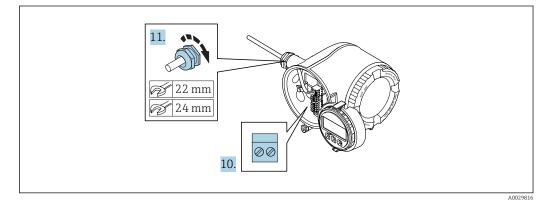

- **10.** Connect the cable in accordance with the terminal assignment .
- **11.** Firmly tighten the cable glands.
 - \blacktriangleright This concludes the cable connection process.
- 12. Close the terminal cover.
- **13.** Fit the display module holder in the electronics compartment.
- **14.** Screw on the connection compartment cover.
- **15.** Secure the securing clamp of the connection compartment cover.

Removing a cable

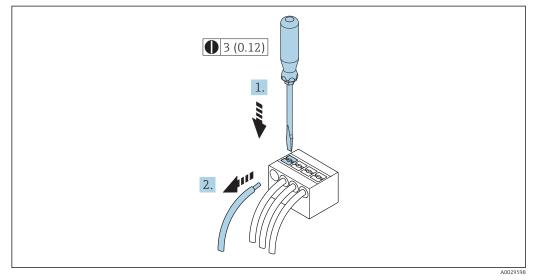

☑ 7 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes


2. while simultaneously pulling the cable end out of the terminal.

7.2.2 Connecting remote display and operating module DKX001 NOTICE

Only one display or operation unit may be connected to the transmitter at any one time.

The remote display and operating module DKX001 cannot be connected at the same time as the existing display and operating module.

- Existing display and operating module: Disconnect electrical connection.
- Connect the remote display and operating module DKX001.

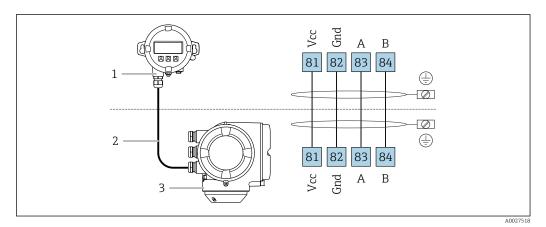

- 1 Remote display and operating module DKX001
- 2 Connecting cable
- 3 Measuring device

Remote display and operating module DKX001 \rightarrow 164

7.3 Ensure potential equalization

7.3.1 Requirements

ACAUTION

Electrode damage can result in the complete failure of the device!

- ► Same electrical potential for the fluid and sensor
- ► Company-internal grounding concepts
- ▶ Pipe material and grounding

7.3.2 Connection example, standard scenario

Metal process connections

Potential equalization is generally via the metal process connections that are in contact with the medium and mounted directly on the sensor. Therefore there is generally no need for additional potential equalization measures.

7.3.3 Connection example in special situations


Plastic process connections

In the case of plastic process connections, additional grounding rings or process connections with an integrated grounding electrode must be used to ensure potential matching between the sensor and the fluid. If there is no potential matching, this can affect the measuring accuracy or cause the destruction of the sensor as a result of the electrochemical decomposition of the electrodes.

Note the following when using grounding rings:


- Depending on the option ordered, plastic disks are used instead of grounding rings on some process connections. These plastic disks only act as "spacers" and do not have any potential matching function. Furthermore, they also perform a significant sealing function at the sensor/connection interface. Therefore, in the case of process connections without metal grounding rings, these plastic disks/seals should never be removed and should always be installed!
- Grounding rings can be ordered separately as an accessory from Endress+Hauser . When ordering make sure that the grounding rings are compatible with the material used for the electrodes, as otherwise there is the danger that the electrodes could be destroyed by electrochemical corrosion!
- Grounding rings, including seals, are mounted inside the process connections. Therefore the installation length is not affected.

Potential equalization via additional grounding ring

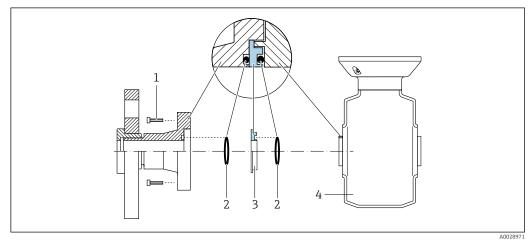

- 1 Hexagonal-headed bolts of process connection
- 2 O-ring seals
- 3 Plastic disk (spacer) or grounding ring
- 4 Sensor

Potential equalization via grounding electrodes on process connection

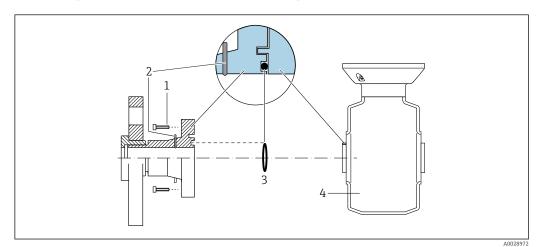


- 1 Hexagonal-headed bolts of process connection
- 2 Integrated grounding electrodes
- 3 O-ring seal
- 4 Sensor

7.4 Special connection instructions

7.4.1 Connection examples


FOUNDATION Fieldbus

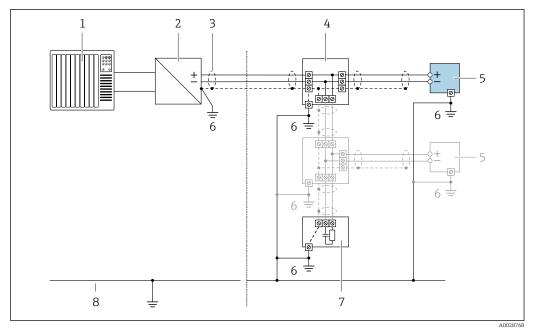

Connection example for FOUNDATION Fieldbus


- 1 Control system (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

Current output 4-20 mA

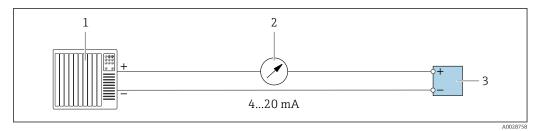


Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

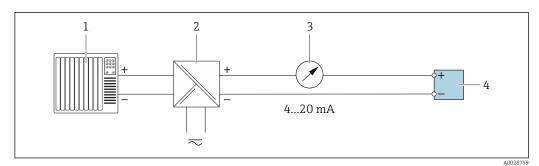

- 10 Connection example for 4-20 mA current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


Pulse/frequency output

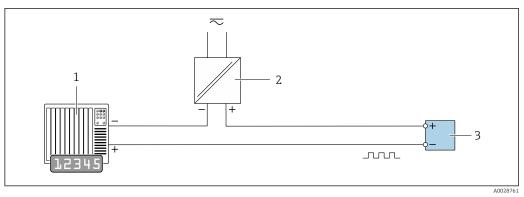

11 Connection example for pulse/frequency output (passive)


- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \implies 170$

Switch output

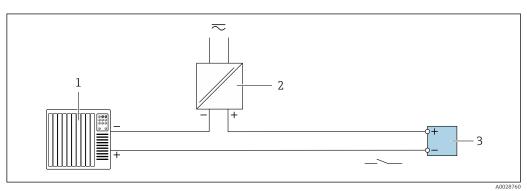

- I2 Connection example for switch output (passive)
- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \triangleq 170$


Relay output

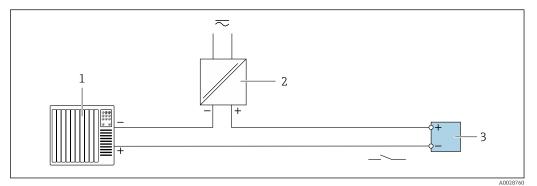

■ 13 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \square 171$


Current input

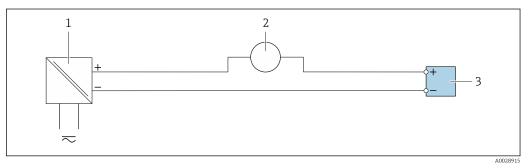

■ 14 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

Status input

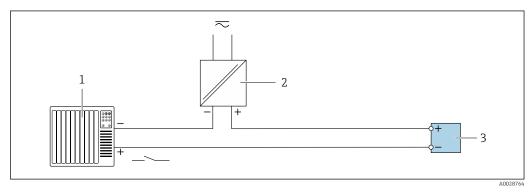

15 Connection example for status input


- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values

7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- To ensure that moisture does not enter the cable entry: Route the cable so that it loops down before the cable entry ("water trap").

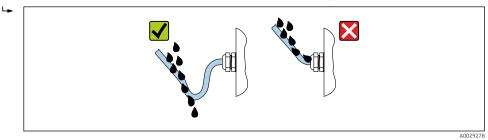


6. Insert dummy plugs into unused cable entries.

7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used meet the requirements?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" $\rightarrow \cong 40$?	
If supply voltage is present, do values appear on the display module?	
Is the potential equalization established correctly ?	

8 Operation options

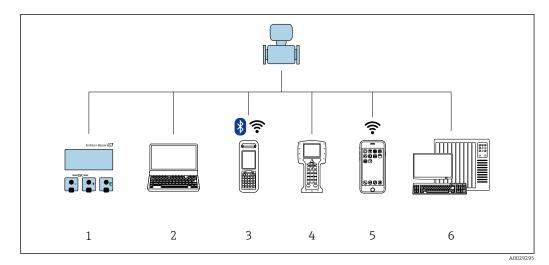


8.1 Overview of operation options

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Communicator 475
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device $\Rightarrow \square 191$

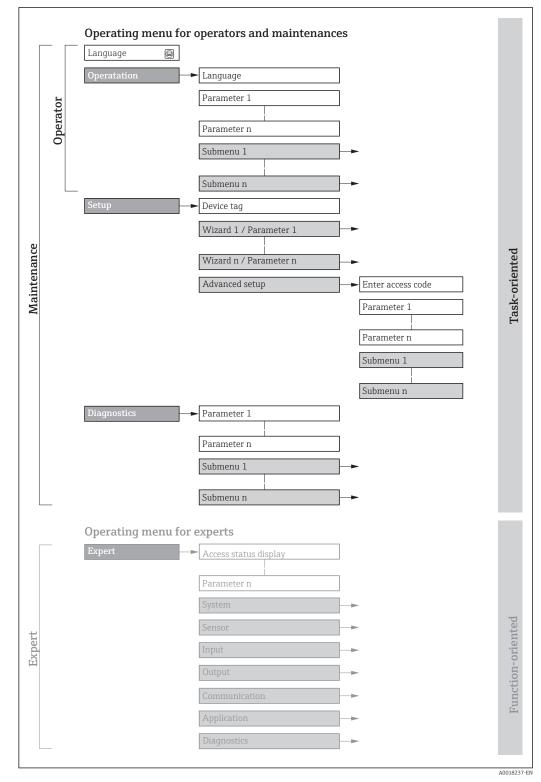

I6 Schematic structure of the operating menu

8.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu	/parameter	User role and tasks	Content/meaning	
Language	task-oriented	 Role "Operator", "Maintenance" Tasks during operation: Configuring the operational display Reading measured values 	Tasks during operation:• Defining the Web server operating language• Configuring the operational• Resetting and controlling totalizers	 Defining the Web server operating language
Operation			Configuring the operational display (e.g. display format, display contrast)Resetting and controlling totalizers	
Setup	p	 "Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface 	 Wizards for fast commissioning: Set the system units Display I/O/configuration Configure the inputs Configure the outputs Configuring the operational display Define the output conditioning Set the low flow cut off Configure empty pipe detection 	
			 Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configuration of electrode cleaning (optional) Configure the WLAN settings Administration (define access code, reset measuring device) 	
Diagnostics		 "Maintenance" role Fault elimination: Diagnostics and elimination of process and device errors Measured value simulation 	 Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values. 	

Menu/pa	rameter	User role and tasks	Content/meaning
Expert fur	nction-oriented	 Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	 Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Output Configure the pulse/frequency/switch output. Input Configuring the status input. Output Configuring of the analog current outputs as well as the pulse/frequency and switch output. Communication Configuration of the digital communication interface and the Web server. Submenus for function blocks (e.g. "Analog Inputs") Configure the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

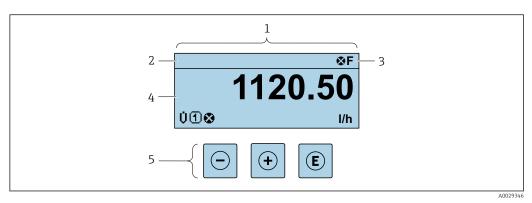

1 Operational display

2 Device tag $\rightarrow \textcircled{1}{76}$

3 Status area

4 Display area for measured values (4-line)

5 Operating elements $\rightarrow \square 50$

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 125
 - **F**: Failure
 - **C**: Function check
 - ${\bf S}$: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior \rightarrow 🗎 126
 - 🔉: Alarm
 - 🕂: Warning
- 🛱: Locking (the device is locked via the hardware)
- 🖘: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured values

Symbol	Meaning
Ú	Volume flow
G	Conductivity
ṁ	Mass flow
Σ	Totalizer Image: The measurement channel number indicates which of the three totalizers is displayed.
Ð	Status input

Measurement channel numbers


Symbol	Meaning
14	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols $\rightarrow \cong 126$


The number and display format of the measured values can be configured via the **Format display** parameter ($\rightarrow \cong 93$).

8.3.2 Navigation view

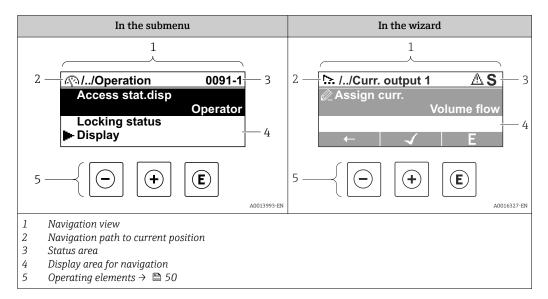

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

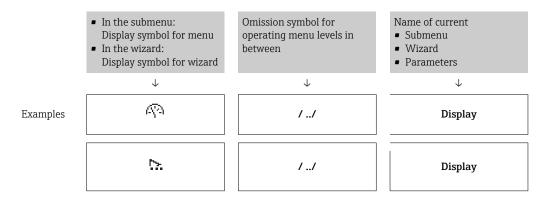


For more information about the icons in the menu, refer to the "Display area" section $\rightarrow \cong 48$

Status area

The following appears in the status area of the navigation view in the top right corner: • In the submenu

- The direct access code for the parameter you are navigating to (e.g. 0022-1)
- If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
- If a diagnostic event is present, the diagnostic behavior and status signal



Display area

Menus

Symbol	Meaning
R	Operation Appears: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu
ų	 Setup Appears: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
ų	Diagnostics Appears: In the menu next to the "Diagnostics" selection At the left in the navigation path in the Diagnostics menu
-3°	 Expert Appears: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
<u>⊳</u>	Wizard
Ø	Parameters within a wizard Image: No display symbol exists for parameters in submenus.


Locking

Symbol	Meaning
ô	 Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. By a user-specific access code By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
\checkmark	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

8.3.3 Editing view

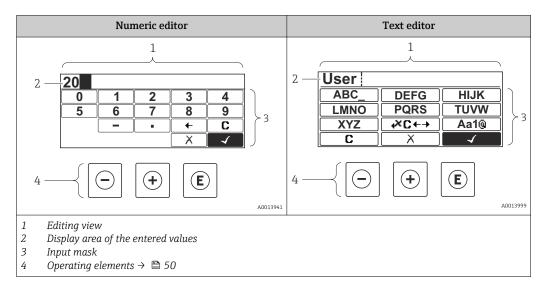

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor

Symbol	Meaning
0 9	Selection of numbers from 0 to 9.
·	Inserts decimal separator at the input position.
_	Inserts minus sign at the input position.
\checkmark	Confirms selection.
+	Moves the input position one position to the left.
	Exits the input without applying the changes.
C	Clears all entered characters.

Text editor

Symbol	Meaning
(Aa1@)	Toggle • Between upper-case and lower-case letters • For entering numbers • For entering special characters
ABC_ XYZ	Selection of letters from A to Z.

abc _ Xyz	Selection of letters from a to z.
···· ··· ~& _	Selection of special characters.
	Confirms selection.
₩C +→	Switches to the selection of the correction tools.
X	Exits the input without applying the changes.
C	Clears all entered characters.

Correction symbols under **∞***c* + **→**

Symbol	Meaning
C	Clears all entered characters.
Ð	Moves the input position one position to the right.
Ð	Moves the input position one position to the left.
×.	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Кеу	Meaning
	Minus key
	<i>In a menu, submenu</i> Moves the selection bar upwards in a choose list.
Θ	With a Wizard Confirms the parameter value and goes to the previous parameter.
	With a text and numeric editor In the input mask, moves the selection bar to the left (backwards).
	Plus key
Ŧ	<i>In a menu, submenu</i> Moves the selection bar downwards in a choose list.
	With a Wizard Confirms the parameter value and goes to the next parameter.
	With a text and numeric editor Moves the selection bar to the right (forwards) in an input screen.

Кеу	Meaning
	Enter key
Ē	For operational displayPressing the key briefly opens the operating menu.Pressing the key for 2 s opens the context menu.
	 In a menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.
	With a Wizard Opens the editing view of the parameter.
	 With a text and numeric editor Pressing the key briefly: Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously)
(□++)	 In a menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position").
	<i>With a Wizard</i> Exits the wizard and takes you to the next higher level.
	With a text and numeric editor Closes the text or numeric editor without applying changes.
()+E	Minus/Enter key combination (press the keys simultaneously)
	Reduces the contrast (brighter setting).
++E	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
	Minus/Plus/Enter key combination (press the keys simultaneously)
-+++E	For operational display Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu

Using the context menu, the user can call up the following menus quickly and directly from the operational display:


- Setup
- Data backup
- Simulation

Calling up and closing the context menu

The user is in the operational display.



└ The context menu opens.

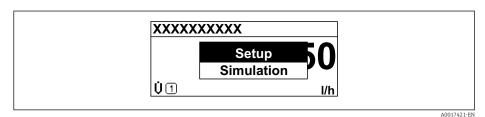

- **2.** Press \boxdot + \pm simultaneously.
 - └ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press \pm to navigate to the desired menu.
- 3. Press 🗉 to confirm the selection.
 - └ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\rightarrow \cong 47$


Example: Setting the number of displayed measured values to "2 values"

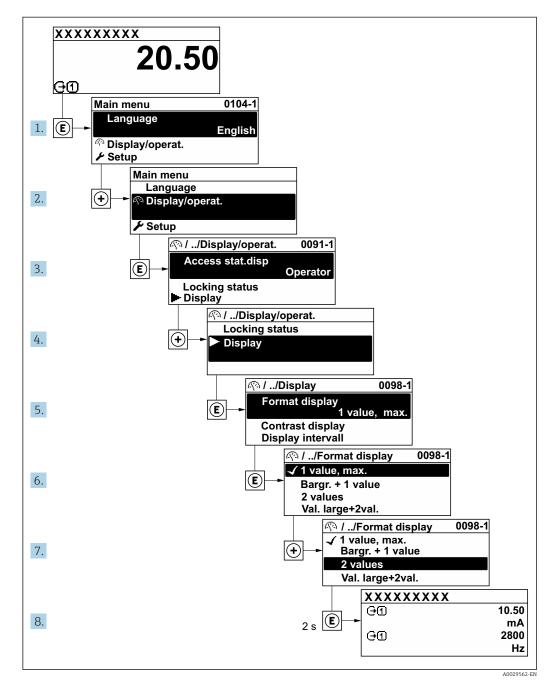

8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path Expert \rightarrow Direct access The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.



¹ Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically. Example: Enter 0914 → Assign process variable parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.

Example: Enter $0914-2 \rightarrow Assign \ process \ variable$ parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press E for 2 s.

← The help text for the selected parameter opens.

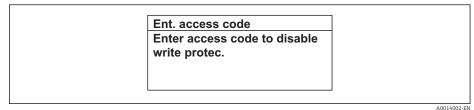


☑ 17 Example: Help text for parameter "Enter access code"

- 2. Press \Box + \pm simultaneously.
 - ← The help text is closed.

8.3.9 Changing the parameters

For a description of the editing display - consisting of text editor and numeric editor - with symbols $\rightarrow \cong 49$, for a description of the operating elements $\rightarrow \cong 50$

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

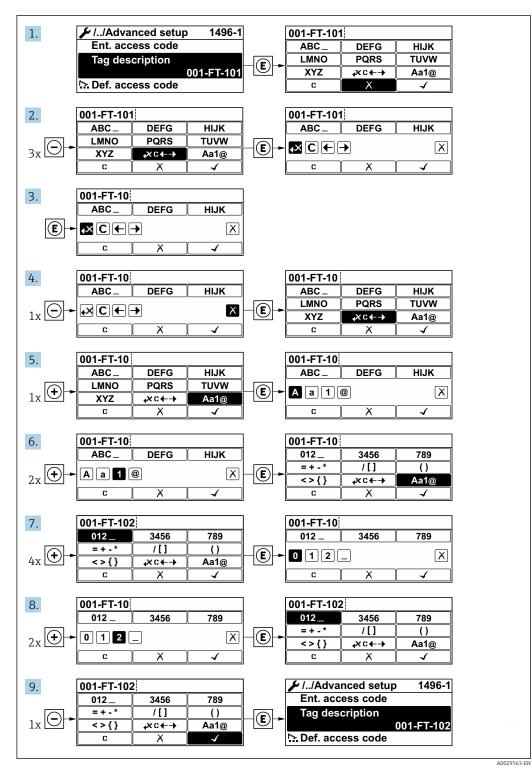

A message is displayed if the value entered is outside the permitted value range.

Ent. access code	
Invalid or out of range input	
value	
Min:0	
Max:9999	
max.0000	

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access $\rightarrow \cong 110$.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	1)

 Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	 ¹⁾

1) If an incorrect access code is entered, the user obtains the access rights of the "Operator" user role.

The user role with which the user is currently logged on is indicated by the Access status parameter. Navigation path: Operation \rightarrow Access status

8.3.11 Disabling write protection via access code

If the @-symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation $\Rightarrow @$ 110.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ($\rightarrow \square$ 98) via the respective access option.

1. After you press E, the input prompt for the access code appears.

2. Enter the access code.

→ The @-symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with touch control

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

- The keypad lock is switched on automatically:
- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.

1. The device is in the measured value display.

Press E for at least 2 seconds.

└ A context menu appears.

2. In the context menu, select the **Keylock on** option.

└ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.

Press 🗉 for at least 2 seconds.

- 2. In the context menu, select the **Keylock off** option.

└ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

For additional information on the Web server, refer to the Special Documentation for the device $\rightarrow \square$ 192

8.4.2 Prerequisites

Computer hardware

Hardware	Interface		
	CDI-RJ45	WLAN	
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.	
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.	
Screen	Recommended size: ≥12" (depends on the screen resolution)		

Computer software

Software	Interface		
	CDI-RJ45	WLAN	
Recommended operating systems	 Microsoft Windows 7 or higher. Mobile operating systems: iOS Android Microsoft Windows XP is supported 		
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari 		

Computer settings

Settings	Interface		
	CDI-RJ45	WLAN	
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).		
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .		
JavaScript	JavaScript must be enabled.		
	If JavaScript cannot be enabled: enter http://192.168.1.212/basic.html in the address line of the Web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.		
		version: To enable correct data display, he) of the Web browser under Internet	
Network connections	Only the active network connections to	the measuring device should be used.	
	Switch off all other network connections such as WLAN.	Switch off all other network connections.	

In the event of connection problems: $\rightarrow \cong 123$

Measuring device

Device	Interface		
	CDI-RJ45	WLAN	
Measuring device	The measuring device has an RJ45 interface.	 The measuring device has a WLAN antenna: Transmitter with integrated WLAN antenna Transmitter with external WLAN antenna 	
Web server	Web server must be enabled; factory setting: ON For information on enabling the Web server → 🗎 62	Web server and WLAN must be enabled; factory setting: ON For information on enabling the Web server $\rightarrow \bigoplus 62$	

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

- Depending on the housing version: Release the securing clamp or securing screw of the housing cover.
- 2. Depending on the housing version: Unscrew or open the housing cover.
- **3.** The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

1. Switch on the measuring device.

- **2.** Connect to the computer using a cable $\rightarrow \triangleq 64$.
- 3. If a 2nd network card is not used, close all the applications on the notebook.
 - ← Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.

4. Close any open Internet browsers.

5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

 In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH_Promag_300_A802000).

- 2. If necessary, select the WPA2 encryption method.
- **3.** Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.


🖪 The serial number can be found on the nameplate.

Disconnecting

 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

Starting the Web browser

- 1. Start the Web browser on the computer.
- 2. Enter the IP address of the Web server in the address line of the Web browser: 192.168.1.212
 - └ The login page appears.

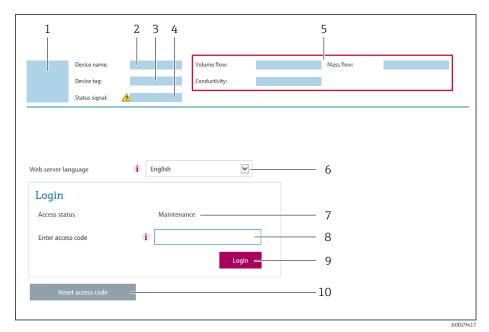

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ($\rightarrow \square 107$)

F

If a login page does not appear, or if the page is incomplete \rightarrow 🗎 123

8.4.4 Logging on

1. Select the preferred operating language for the Web browser.

- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer	
--	--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface



1 Function row

2 Operating language on the local display

3 Navigation area

Header

The following information appears in the header:

- Device tag
- Device status with status signal $\rightarrow \square 128$
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the measuring device
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the local display For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	 Data exchange between PC and measuring device: Load the configuration from the measuring device (XML format, save configuration) Save the configuration to the measuring device (XML format, restore configuration) Export the event list (.csv file) Export parameter settings (.csv file, create documentation of the measuring point configuration) Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package) If using fieldbuses, upload device drivers for system integration from the measuring device: DD file Flashing a firmware version
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: Network settings (e.g. IP address, MAC address) Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	OffOn	On

Function scope of the "Web server functionality" parameter

Option	Description		
Off	The web server is completely disabled.Port 80 is locked.		
On	The complete functionality of the web server is available.JavaScript is used.The password is transferred in an encrypted state.Any change to the password is also transferred in an encrypted state.		

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.

- ← The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

Reset modified properties of the Internet protocol (TCP/IP) $\rightarrow \square$ 59.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

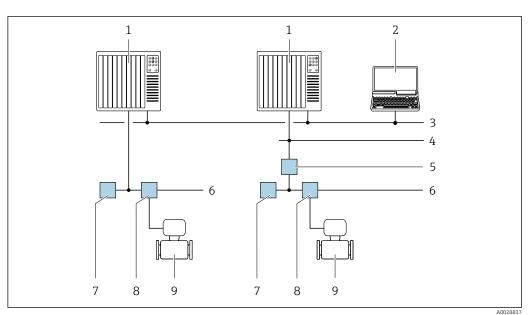


■ 18 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

Service interface

Via service interface (CDI-RJ45)

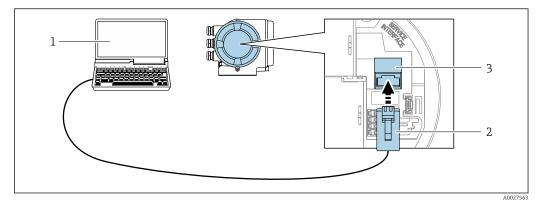


☑ 19 Connection via service interface (CDI-RJ45)

- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"

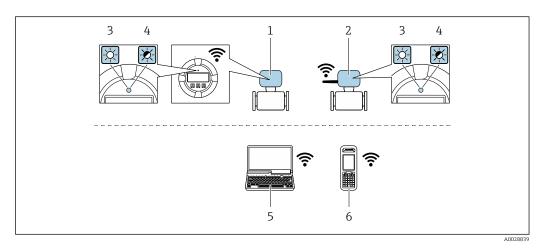

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)

Wireless LAN IEEE 802.11 b/g (2.4 GHz) WLAN	
Encryption WPA2 PSK/TKIP AES-128	
Configurable channels	1 to 11
Function	Access point with DHCP

Range with integrated antenna	Max. 10 m (32 ft)
Range with external antenna	Max. 50 m (164 ft)

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

• Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

- In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH_Promag_300_A802000).
- 2. If necessary, select the WPA2 encryption method.
- **3.** Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.

Disconnecting

 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

8.5.2 Field Xpert SFX350, SFX370

Function scope

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the **non-Ex area** (SFX350, SFX370) and the **Ex area** (SFX370).

For details, see Operating Instructions BA01202S

Source for device description files

See data $\rightarrow \textcircled{1}{69}$ 69

8.5.3 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- CDI-RJ45 service interface $\rightarrow \cong 64$
- WLAN interface $\rightarrow = 64$

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S


Source for device description files

See information $\rightarrow \cong 69$

Establishing a connection

For additional information, see Operating Instructions BA00027S and BA00059S

User interface

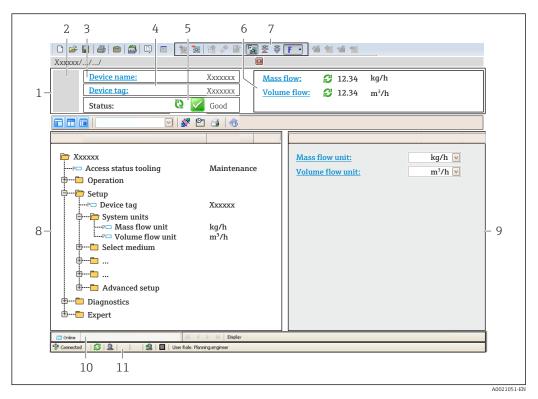

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal $\rightarrow \square 128$
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.4 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

For details, see Innovation Brochure IN01047S

Source for device description files

See information $\rightarrow \square 69$

8.5.5 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via FOUNDATION Fieldbus H1 protocol.

Source for device description files

See data $\rightarrow \square 69$

8.5.6 Field Communicator 475

Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via FOUNDATION Fieldbus H1 protocol.

Source for device description files

See data $\rightarrow \square 69$

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	 On the title page of the Operating instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version 	
Release date of firmware version	02.2017		
Manufacturer ID	0x452B48 (hex)	Manufacturer ID Diagnostics → Device information → Manufacturer ID	
Device type ID	0x103C (hex)	Device type Diagnostics \rightarrow Device information \rightarrow Device type	
Device revision	1	 On the transmitter nameplate Device revision Diagnostics → Device information → Device revision 	
DD revision	Information and files under: • www.endress.com • www.fieldbus.org		
CFF revision			

For an overview of the different firmware versions for the device \rightarrow 🗎 160

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via FOUNDATION Fieldbus	Sources for obtaining device descriptions		
FieldCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser) 		
DeviceCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser) 		
Field Xpert SFX350Field Xpert SFX370	Use update function of handheld terminal		
AMS Device Manager (Emerson Process Management)	www.endress.com → Download Area		
Field Communicator 475 (Emerson Process Management)	Use update function of handheld terminal		

9.2 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.2.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a FOUNDATION Fieldbus master (Class 1), e.g. a control system etc.

Display text (xxxx = serial number)	Base index	Description
RESOURCE_ xxxxxxxxx	400	Resource block
SETUP_ xxxxxxxxx	600	"Setup" Transducer block
TRDDISP_ xxxxxxxxx	800	"Display" Transducer block
TRDHROM_ xxxxxxxxx	1000	"HistoROM" Transducer block
TRDDIAG_ xxxxxxxxx	1200	"Diagnostic" Transducer block
EXPERT_CONFIG_xxxxxxxxxxx	1400	"Expert configuration" Transducer block
SERVICE_SENSOR_xxxxxxxxxx	1600	"Service sensor" Transducer block
TRDTIC_xxxxxxxxx	1800	"Totalizer" Transducer block
TRDHBT_ xxxxxxxxx	2000	Transducer block "Heartbeat results"
ANALOG_INPUT_1_xxxxxxxxxx	3400	Analog Input function block 1 (AI)
ANALOG_INPUT_2_xxxxxxxxxx	3600	Analog Input function block 2 (AI)
ANALOG_INPUT_3_xxxxxxxxxx	3800	Analog Input function block 3 (AI)
ANALOG_INPUT_4_xxxxxxxxxx	4000	Analog Input function block 4 (AI)
ANALOG_INPUT_5_xxxxxxxxxx	4200	Analog Input function block 5 (AI)
MAO_ xxxxxxxxx	4400	Multiple Analog Output block (MAO)
DIGITAL_INPUT_1_xxxxxxxxxx	4600	Digital Input function block 1 (DI)
DIGITAL_INPUT_2_xxxxxxxxxx	4800	Digital Input function block 2 (DI)
MDO_ xxxxxxxxx	5000	Multiple Digital Output block (MDO)
PID_ xxxxxxxxx	5200	PID function block (PID)
INTEGRATOR_xxxxxxxxxx	5400	Integrator function block (INTG)

9.2.2 Assignment of the measured values in the function blocks

The input value of a module/function block is defined via the CHANNEL parameter.

AI module (Analog Input)

Five Analog Input blocks are available.

CHANNEL	Measured variable
0	Uninitialized (factory setting)
7	Temperature
9	Volume flow
11	Mass flow
12	Flow velocity
13	Corrected volume flow
16	Totalizer 1
17	Totalizer 2
18	Totalizer 3
65	Electronic temperature
70	Conductivity
71	Corrected conductivity
99	Current input 1

MAO module (Multiple Analog Output)


Channel	Description
121	Channel_0

Structure

Channel_0							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8

Values	Measured variable
Value 1	Temperature ¹⁾
Value 2	Density ¹⁾
Value 3	Not assigned
Value 4	Not assigned
Value 5	Not assigned
Value 6	Not assigned
Value 7	Not assigned
Value 8	Not assigned

1) The external measured values must be transmitted to the device in the SI basic unit



DI module (Discrete Input)

Two Discrete Input blocks are available.

CHANNEL	Device function	State	
0	Uninitialized (factory setting)	-	
101	Switch output state	0 = off, 1 = active	
103 Low flow cut off		0 = off, 1 = active	

CHANNEL	Device function	State
104	Empty pipe detection	0 = off, 1 = active
105	Verification status ¹⁾	Overall result of the verification Verification: • 16 = Failed • 32 = Passed • 64 = Not performed Verification status Verification: • 1 = Not performed
		 2 = Failed 4 = Being performed 8 = Finished
		<pre>Status; result 17 = Status: not performed; Result: failed 18 = Status: failed; Result: failed 20 = Status: being performed; Result: failed 24 = Status: finished; Result: failed 33 = Status: not performed; Result: passed 34 = Status: failed; Result: passed 36 = Status: being performed; Result: passed 40 = Status: finished; Result: passed 40 = Status: not performed; Result: passed 65 = Status: not performed; Result: not performed 66 = Status: failed; Result: not performed 68 = Status: being performed; Result: not performed 72 = Status: finished; Result: not performed</pre>

1) Only available with the Heartbeat Verification application package

MDO module (Multiple Discrete Output)

Channel	Description
122	Channel_DO

Structure

Channel_DO								
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8	

Value	Device function	State	
Value 1	Reset totalizer 1	0 = off, 1 = execute	
Value 2	Reset totalizer 2	0 = off, 1 = execute	
Value 3	Reset totalizer 3	0 = off, 1 = execute	
Value 4	Flow override	0 = off, 1 = active	
Value 5	Start heartbeat verification ¹⁾	0 = off, 1 = start	
Value 6	Status output	0 = off, 1 = active	

Value	Device function	State
Value 7	Not assigned	-
Value 8	Not assigned	-

1) Only available with the Heartbeat Verification application package

9.2.3 Execution times

Function block	Execution time (ms)
Analog Input function block (AI)	6
Digital Input function block (DI)	4
PID function block (PID)	5
Multiple Analog Output block (MAO)	4
Multiple Digital Output block (MDO)	4
Integrator function block (INTG)	5

9.2.4 Methods

Method	Block	Navigation	Description
Set to "AUTO" mode	Resource Block	Via menu: Expert \rightarrow Communication \rightarrow Resource block \rightarrow Target mode	This method sets the Resource Block and all the Transducer Blocks to the AUTO (Automatic) mode.
Set to "OOS" mode	Resource Block	Via menu: Expert \rightarrow Communication \rightarrow Resource block \rightarrow Target mode	This method sets the Resource Block and all the Transducer Blocks to the OOS (Out of service) mode.
Restart	Resource Block	Via menu: Expert → Communication → Resource block → Restart	This method is used for selecting the setting for the restart parameter in the Resource Block. This resets device parameters to a specific value. The following options are supported: Uninitialized Run Resource Defaults Processor To delivery settings
ENP parameter	Resource Block	Via menu: Actions → Methods→ Calibrate → ENP parameter	This method is used to display and configure the parameters of the electronic nameplate (ENP).
Overview diagnostics - Remedy information	Diagnostic Transducer Block	Via link: Namur symbol	This method is used to display the diagnostic event with the highest priority that is currently active and the corresponding remedial measures.
Actual diagnostics – Remedy information	Diagnostic Transducer Block	Via menu: - Configure/Setup → Diagnostics → Actual diagnostics - Device/Diagnostics → Diagnostics	This method is used to display remedial measures for the diagnostic event with the highest priority that is currently active. This method is only available if an appropriate diagnostic event has occurred.
Previous diagnostics – Remedy information	Diagnostic Transducer Block	 Via menu: Configure/Setup → Diagnostics → Previous diagnostics Device/Diagnostics → Diagnostics 	This method is used to display remedial measures for the previous diagnostic event. This method is only available if an appropriate diagnostic event has occurred.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist \rightarrow 🖺 29
- "Post-connection check" checklist $\rightarrow \oplus 41$

10.2 Switching on the measuring device

- ► After a successful function check, switch on the measuring device.
 - ← After a successful startup, the local display switches automatically from the startup display to the operational display.


If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" $\rightarrow \square$ 122.

10.3 Connecting via FieldCare

- For FieldCare $\rightarrow \triangleq 64$ connection
- For connecting via FieldCare $\rightarrow \square 66$
- For the FieldCare $\rightarrow \triangleq 67$ user interface

10.4 Setting the operating language


Factory setting: English or ordered local language

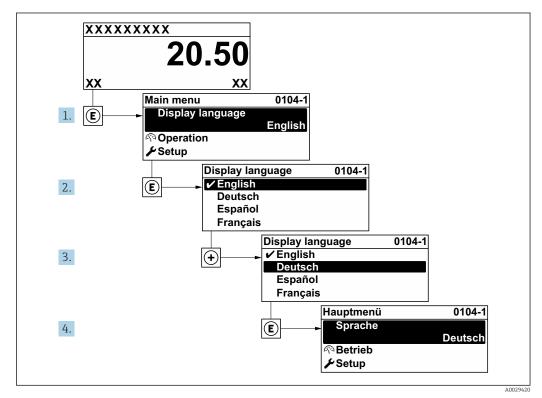

■ 20 Taking the example of the local display

10.5 Configuring the measuring device

- The **Setup** menuwith its guided wizards contains all the parameters needed for standard operation.
- Navigation to the Setup menu

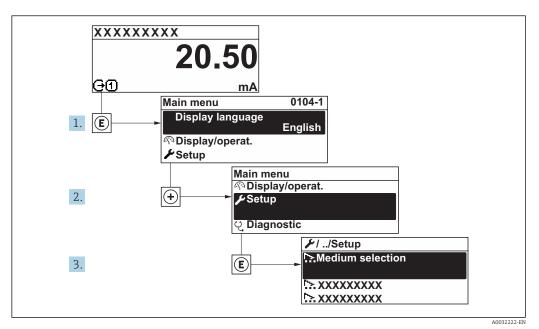


21 Taking the example of the local display

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation


"Setup" menu

🗲 Setup	
Device tag	→ 🗎 76
► System units	→ 🗎 76
► Analog inputs	→ 🗎 79
► I/O configuration	→ 🗎 79
► Current input 1 to n	→ 🗎 80
► Status input 1 to n	→ 🗎 81
► Current output 1 to n	→ 🗎 82
Pulse/frequency/switch output 1 to n	→ 🗎 85
► Relay output 1 to n	→ 🗎 91

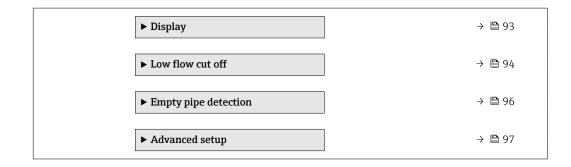

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.



22 Header of the operational display with tag name

1 Tag name

FieldCare" operating tool $\rightarrow \oplus 67$

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promag300/500

10.5.2 Setting the system units


In the **System units** submenu the units of all the measured values can be set.

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation

"Setup" menu → System units

► System units			
	Volume flow unit]	→ 🗎 77
	Volume unit]	→ 🗎 77

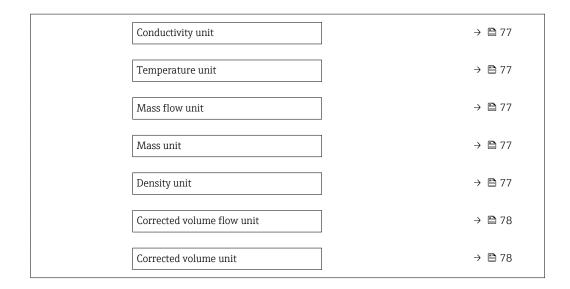

Parameter	Prerequisite	Description	Selection	Factory setting
Volume flow unit	-	Select volume flow unit. Result The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific: • l/h • gal/min (us)
Volume unit	-	Select volume unit.	Unit choose list	Country-specific: • m ³ • gal (us)
Conductivity unit	The On option is selected in the Conductivity measurement parameter parameter.	Select conductivity unit. <i>Effect</i> The selected unit applies for: Simulation process variable	Unit choose list	μS/cm
Temperature unit	-	Select temperature unit. Result The selected unit applies for: • Temperature parameter • Maximum value parameter • Minimum value parameter • External temperature parameter • Maximum value parameter • Minimum value parameter		Country-specific: • °C • °F
Mass flow unit	unit – Select mass flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable		Unit choose list	Country-specific: • kg/h • lb/min
Mass unit	-	Select mass unit.	Unit choose list	Country-specific: • kg • lb
Density unit	-	Select density unit. <i>Result</i> The selected unit applies for: • Output • Simulation process variable	Unit choose list	Country-specific: • kg/l • lb/ft ³

Parameter	Prerequisite	Description	Selection	Factory setting
Corrected volume flow unit	-	Select corrected volume flow unit. Result The selected unit applies for: Corrected volume flow parameter ($\rightarrow \square$ 114)	Unit choose list	Country-specific: • Nl/h • Sft ³ /h
Corrected volume unit	-	Select corrected volume unit.	Unit choose list	Country-specific: • Nm ³ • Sft ³

10.5.3 Configuring the analog inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1** to **n** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu → Analog inputs

► Analog inputs	
► Analog input 1 to n	
Block tag	→ 🗎 79
Channel	→ 🗎 79
Process Value Filter Time	→ 🗎 79

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Block tag	Unique name of the measuring device.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	-
Channel	Select the process variable.	 Uninitialized Volume flow Mass flow Corrected volume flow Flow velocity Conductivity Corrected conductivity Temperature Electronic temperature Totalizer 1 Totalizer 2 Totalizer 3 Current input 1 * 	Uninitialized
Process Value Filter Time	Enter the filter time specification for the filtering of the unconverted input value (PV).	Positive floating-point number	0 s

* Visibility depends on order options or device settings

10.5.4 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu \rightarrow I/O configuration

► I/O configuration		
I/O module 1 to n te	rminal numbers	→ 80

I/O module 1 to n information] → 🗎 80
I/O module 1 to n type) → 🗎 80
Apply I/O configuration) → 🗎 80
Conversion code) → 🗎 80

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module terminal numbers	Shows the terminal numbers used by the I/O module.	 Not used 26-27 (I/O 1) 24-25 (I/O 2) 	-
I/O module information	Shows information of the plugged I/O module.	 Not plugged Invalid Not configurable Configurable Fieldbus 	-
I/O module type	Shows the I/O module type.	 Off Current output* Current input* Status input* Pulse/frequency/switch output* 	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	NoYes	No
Conversion code	Enter the code in order to change the I/O configuration.	Positive integer	0

* Visibility depends on order options or device settings

10.5.5 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu \rightarrow Current input

► Current input 1	
Terminal number	→ 🖹 81
Signal mode	→ 🗎 81
0/4 mA value	→ 🗎 81
20 mA value	→ 🗎 81
Current span	→ 🖹 81

Failure mode	→ 🖺 81
Failure value	→ 🗎 81

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	Not used24-25 (I/O 2)	-
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	PassiveActive	Passive
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA 420 mA NAMUR 420 mA US 020 mA 	Country-specific: • 420 mA NAMUR • 420 mA US
Failure mode	-	Define input behavior in alarm condition.	AlarmLast valid valueDefined value	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

10.5.6 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu → Status input

► Status input 1 to n	
Assign status input) → 🗎 82
Terminal number) → 🖺 82
Active level) → 🗎 82
Terminal number) → 🗎 82

Response time status input]	→ 🗎 82
Terminal number]	→ 🗎 82

Parameter	Description	User interface / Selection / User entry	Factory setting
Terminal number	Shows the terminal numbers used by the status input module.	Not used24-25 (I/O 2)	-
Assign status input	Select function for the status input.	 Off Reset totalizer 1 Reset totalizer 2 Reset totalizer 3 Reset all totalizers Flow override 	Off
Active level	Define input signal level at which the assigned function is triggered.	HighLow	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

10.5.7 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu \rightarrow Current output

► Current output 1	
Terminal number] → 🗎 83
Signal mode] → 🗎 83
Assign current output 1) → 🗎 83
Current span) → 🖹 83
0/4 mA value] → 🗎 83
20 mA value] → 🖹 83
Fixed current] → 🖹 83
Failure mode] → 🗎 84
Failure current] → 🖹 84

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign current output	_	Select process variable for current output.	 Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Temperature* Electronic temperature 	Volume flow
Terminal number	-	Shows the terminal numbers used by the current output module.	 Not used 24-25 (I/O 2) 	-
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA NAMUR 420 mA US 420 mA 020 mA Fixed current 	Country-specific: • 420 mA NAMUR • 420 mA US
Signal mode	-	Select the signal mode for the current output.	PassiveActive	Passive
0/4 mA value	One of the following options is selected in the Current span parameter (→ 🗎 83): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Enter 4 mA value.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
20 mA value	One of the following options is selected in the Current span parameter (→ 🗎 83): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	In the Current span parameter $(\rightarrow \textcircled{B} 83)$, the Fixed current option is selected.	Defines the fixed output current.	0 to 22.5 mA	22.5 mA

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	One of the following options is selected in the Assign current output parameter ($\rightarrow \blacksquare 83$): Volume flow Mass flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Temperature* Electronic temperature One of the following options is selected in the Current span parameter ($\rightarrow \blacksquare 83$): 420 mA NAMUR 420 mA	Define output behavior in alarm condition.	 Min. Max. Last valid value Actual value Defined value 	Max.
	• 020 mA			
Failure current	In the Failure mode parameter, the Defined value option is selected.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

* Visibility depends on order options or device settings

10.5.8 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Pulse/frequency/switch output

Pulse/frequency/switch output 1 to n	
Operating mode	→ 🗎 85

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse

Configuring the pulse output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

Pulse/frequency/switch output 1 to n	
Operating mode	→ 🗎 86
Terminal number	→ 🖺 86
Signal mode	→ 🗎 86
Assign pulse output	→ 🗎 86
Value per pulse	→ 🗎 86
Pulse width	→ 🗎 86
Failure mode	→ 🗎 86
Invert output signal	→ 🗎 86

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActive	Passive
Assign pulse output 1 to n	In the Operating mode parameter, the Pulse option is selected.	Select process variable for pulse output.	 Off Volume flow Mass flow Corrected volume flow 	Off
Value per pulse	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 86): • Mass flow • Volume flow • Corrected volume flow	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 86): • Mass flow • Volume flow • Corrected volume flow	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 86): • Mass flow • Volume flow • Corrected volume flow	Define output behavior in alarm condition.	Actual valueNo pulses	No pulses
Invert output signal	-	Invert the output signal.	NoYes	No

Configuring the frequency output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

Pulse/frequency/switch output 1 to n	
Operating mode) → 🖹 87
Terminal number] → 🗎 87

Signal mode	→ 🗎 87
Assign frequency output	→ 🖺 87
Minimum frequency value	→ 🗎 87
Maximum frequency value	→ 🗎 88
Measuring value at minimum frequency	→ 🗎 88
Measuring value at maximum frequency	→ 🗎 88
Failure mode	→ 🗎 88
Failure frequency	→ 🗎 88
Invert output signal	→ 🗎 88

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActive	Passive
Assign frequency output	In the Operating mode parameter (→ 🗎 85), the Frequency option is selected.	Select process variable for frequency output.	 Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Temperature Electronic temperature 	Off
Minimum frequency value	One of the following options is selected in the Assign current output parameter (→ 🗎 83): • Volume flow • Mass flow • Corrected volume flow • Flow velocity • Conductivity [*] • Corrected conductivity [*] • Temperature [*] • Electronic temperature	Enter minimum frequency.	0.0 to 10000.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Maximum frequency value	One of the following options is selected in the Assign current output parameter (→	Enter maximum frequency.	0.0 to 10 000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	One of the following options is selected in the Assign current output parameter (→ 🖺 83): • Volume flow • Mass flow • Corrected volume flow • Flow velocity • Corrected conductivity* • Corrected conductivity • Electronic temperature	Enter measured value for minmum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	One of the following options is selected in the Assign current output parameter (→ 🗎 83):• Volume flow• Mass flow• Corrected volume flow• Flow velocity• Conductivity*• Corrected conductivity*• Temperature*• Electronic temperature	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	One of the following options is selected in the Assign current output parameter (→	Define output behavior in alarm condition.	 Actual value Defined value 0 Hz 	0 Hz
Failure frequency	One of the following options is selected in the Assign current output parameter (→	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	NoYes	No

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode	→ 🗎 89
Terminal number	→ 🖺 89
Signal mode) → 🗎 89
Switch output function	→ 🗎 90
Assign diagnostic behavior	→ 🗎 90
Assign limit	→ 🗎 90
Assign flow direction check) → 🗎 90
Assign status) → 🗎 90
Switch-on value	→ 🗎 90
Switch-off value) → 🗎 90
Switch-on delay	→ 🗎 90
Switch-off delay) → 🗎 91
Failure mode	→ 🗎 91
Invert output signal	→ 🗎 91

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActive	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	In the Operating mode parameter the Switch option is selected.	Select function for switch output.	 Off On Diagnostic behavior Limit Flow direction check Status 	Off
Assign diagnostic behavior	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Diagnostic behavior option is selected. 	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm
Assign limit	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Select process variable for limit function.	 Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Totalizer 1 Totalizer 1 Totalizer 2 Totalizer 3 Temperature * Electronic temperature 	Volume flow
Assign flow direction check	 The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	 Off Volume flow Mass flow Corrected volume flow 	Volume flow
Assign status	 The Switch option is selected in the Operating mode parameter. The Status option is selected in the Switch output function parameter. 	Select device status for switch output.	 Empty pipe detection Low flow cut off Digital output 6 	Empty pipe detection
Switch-on value	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
Switch-off value	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
Switch-on delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	Open
Invert output signal	-	Invert the output signal.	NoYes	No

* Visibility depends on order options or device settings

10.5.9 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu \rightarrow Relay output 1 to n

► RelaisOutput 1 to n	
Switch output function	→ 🗎 92
Assign flow direction check	→ 🗎 92
Assign limit	→ 🗎 92
Assign diagnostic behavior	→ 🗎 92
Assign status	→ 🗎 92
Switch-off value	→ 🗎 92
Switch-on value	→ 🗎 92
Failure mode	→ 🗎 92

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Relay output function	-	Select the function for the relay output.	 Closed Open Diagnostic behavior Limit Flow direction check Digital Output 	Closed
Terminal number	-	Shows the terminal numbers used by the relay output module.	 Not used 24-25 (I/O 2) 	-
Assign flow direction check	In the Relay output function parameter, the Flow direction check option is selected.	Select process variable for flow direction monitoring.	 Off Volume flow Mass flow Corrected volume flow 	Volume flow
Assign limit	In the Relay output function parameter, the Limit option is selected.	Select process variable for limit function.	 Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Totalizer 1 Totalizer 1 Totalizer 2 Totalizer 3 Temperature * Electronic temperature 	Volume flow
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	 Partially filled pipe detection Low flow cut off Digital output 6 	Partially filled pipe detection
Switch-off value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 1/h • 0 gal(us)/min
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal(us)/min
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	Open

* Visibility depends on order options or device settings

10.5.10 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu \rightarrow Display

► Display	
Format display	→ 🗎 93
Value 1 display	→ 🗎 93
0% bargraph value 1	→ 🗎 93
100% bargraph value 1	→ 🗎 94
Value 2 display	→ 🗎 94
Value 3 display	→ 🗎 94
0% bargraph value 3	→ 🗎 94
100% bargraph value 3	→ 🗎 94
Value 4 display	→ 🗎 94

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Volume flow Mass flow Corrected volume flow Flow velocity Corrected conductivity* Totalizer 1 Totalizer 2 Totalizer 3 Current output 1 Temperature* Electronic temperature 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter ($\Rightarrow \square 93$)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter ($\Rightarrow \square 93$)	None


* Visibility depends on order options or device settings

10.5.11 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

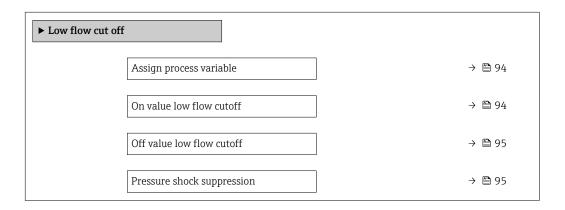

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	 Off Volume flow Mass flow Corrected volume flow 	Volume flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🗎 94): • Volume flow • Mass flow	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	 One of the following options is selected in the Assign process variable parameter (→ ● 94): Volume flow Mass flow Corrected volume flow 	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

10.5.12 Configuring empty pipe detection

The **Empty pipe detection** submenu contains parameters that must be configured for the configuration of empty pipe detection.

Navigation

"Setup" menu \rightarrow Empty pipe detection


► Empty pipe detection	
Empty pipe detection) → 🗎 96
New adjustment) → 🗎 96
Progress) → 🗎 96
Switch point empty pipe detection) → 🗎 96
Response time empty pipe detection) → 🗎 96

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Empty pipe detection	-	Switch empty pipe detection on and off.	OffOn	Off
New adjustment	The On option is selected in the Empty pipe detection parameter.	Select type of adjustment.	CancelEmpty pipe adjustFull pipe adjust	Cancel
Progress	The On option is selected in the Empty pipe detection parameter.	Shows the progress.	OkBusyNot ok	-
Switch point empty pipe detection	The On option is selected in the Empty pipe detection parameter.	Enter hysteresis in %, below this value the measuring tube will detected as empty.	0 to 100 %	10 %
Response time empty pipe detection	In the Empty pipe detection parameter ($\rightarrow \square 96$), the On option is selected.	Enter the time before diagnostic message S862 "Pipe empty" is displayed for empty pipe detection.	0 to 100 s	1 s

10.6 Advanced settings

The Advanced setup submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

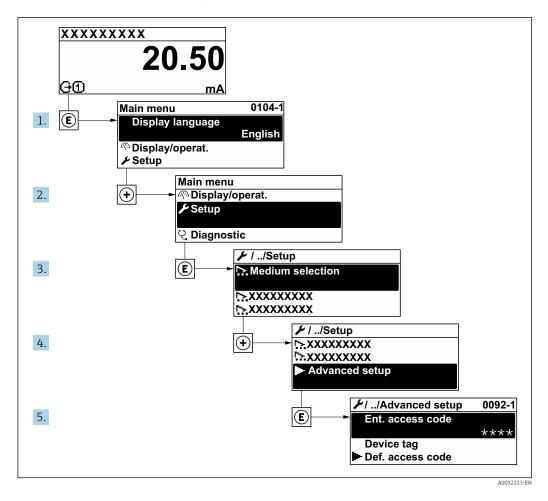




The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu \rightarrow Advanced setup

► Advanced setup		
Enter access code] → 🗎 9	8
► Sensor adjustment] → 🗎 9	8
► Totalizer 1 to n] → 🗎 9	8
► Display	$ ightarrow extsf{B}1$.00
► Electrode cleaning circuit	ightarrow riangleq 1	.03

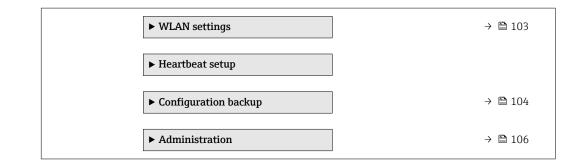

10.6.1 Using the parameter to enter the access code

Navigation

"Setup" menu \rightarrow Advanced setup

Parameter overview with brief description

Parameter	Description	User entry
Enter access code	Enter access code to disable write protection of parameters.	0 to 9 999

10.6.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment

► Sensor adjustme	nt	
	Installation direction	→ 🗎 98

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
	Set sign of flow direction to match the direction of the arrow on the sensor.	Flow in arrow directionFlow against arrow direction	Flow in arrow direction

10.6.3 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

► Totalizer 1 to n		
Assign process	variable	→ 🗎 99
Unit totalizer 1	to n	→ 🖺 99

Totalizer operation mode	→ 🗎 99
Failure mode	→ 🗎 99

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	-	Select process variable for totalizer.	 Off Volume flow Mass flow Corrected volume flow 	Volume flow
Unit totalizer 1 to n	One of the following options is selected in the Assign process variable parameter (→ 🗎 99) of the Totalizer 1 to n submenu: • Volume flow • Mass flow • Corrected volume flow	Select process variable totalizer unit.	Unit choose list	1
Totalizer operation mode	-	Select totalizer calculation mode.	Net flow totalForward flow totalReverse flow total	Net flow total
Failure mode	-	Define totalizer behavior in alarm condition.	StopActual valueLast valid value	Stop

10.6.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display		
[Format display	→ 🗎 101
[Value 1 display	→ 🗎 101
[0% bargraph value 1	→ 🗎 101
[100% bargraph value 1	→ 🗎 101
[Decimal places 1	→ 🗎 101
[Value 2 display	→ 🗎 101
[Decimal places 2	→ 🗎 101
[Value 3 display	→ 🗎 101
	0% bargraph value 3	→ 🗎 101
	100% bargraph value 3	→ 🗎 101
[Decimal places 3	→ 🗎 101
[Value 4 display	→ 🗎 101
	Decimal places 4	→ 🗎 102
	Display language	→ 🗎 102
[Display interval	→ 🗎 102
[Display damping	→ 🗎 102
[Header	→ 🗎 102
	Header text	→ 🗎 102
	Separator	→ 🗎 102
[Backlight	→ 🗎 102

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Volume flow Mass flow Corrected volume flow Flow velocity Corrected conductivity* Totalizer 1 Totalizer 2 Totalizer 3 Current output 1 Temperature* Electronic temperature 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter ($\rightarrow \square$ 93)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter ($\rightarrow \square$ 93)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxx x.xxxx 	x.xx
Display language	A local display is provided.	Set display language.	 English Deutsch* Français* Español* Italiano* Nederlands* Portuguesa* Polski* pycский язык (Russian)* Svenska* Türkçe* 中文 (Chinese)* 日本語 (Japanese)* 한국 어 (Korean)* 값பூ Bahasa Indonesia* ภาษาไทย (Thai)* tiếng Việt (Vietnamese)* čeština (Czech)* 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	 Device tag Free text	Device tag
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	 . (point) , (comma) 	. (point)
Backlight	 One of the following conditions is met: Order code for "Display; operation", option F "4-line, illum.; touch control" Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" Order code for "Display; operation", option O "remote 4-line display, illum; 10m/ 30ft cable; touch control" 	Switch the local display backlight on and off.	DisableEnable	Enable

* Visibility depends on order options or device settings

10.6.5 Performing electrode cleaning

The **Electrode cleaning circuit** submenu contains parameters that must be configured for the configuration of electrode cleaning.

The submenu is only available if the device was ordered with electrode cleaning.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Electrode cleaning circuit

► Electrode cleaning circuit	
Electrode cleaning circuit	→ 🗎 103
ECC duration	→ 🗎 103
ECC recovery time	→ 🗎 103
ECC cleaning cycle	→ 🗎 103
ECC Polarity	→ 🗎 103

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Electrode cleaning circuit	For the following order code: "Application package", option EC "ECC electrode cleaning"	Enable the cyclic electrode cleaning circuit.	OffOn	Off
ECC duration	For the following order code: "Application package", option EC "ECC electrode cleaning"	Enter the duration of electrode cleaning in seconds.	0.01 to 30 s	2 s
ECC recovery time	For the following order code: "Application package", option EC "ECC electrode cleaning"	Define recovery time after electrode cleaning. During this time the current output values will be held at last valid value.	1 to 600 s	60 s
ECC cleaning cycle	For the following order code: "Application package", option EC "ECC electrode cleaning"	Enter the pause duration between electrode cleaning cycles.	0.5 to 168 h	0.5 h
ECC Polarity	For the following order code: "Application package", option EC "ECC electrode cleaning"	Select the polarity of the electrode cleaning circuit.	PositiveNegative	Depends on the electrode material: • Platinum: Negative option • Tantalum, Alloy C22, stainless steel: Positive option

10.6.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" m	ienu → Advance	d setup \rightarrow	WLAN Settings
			· · _ · · _ · · · · · · · · · · · · · ·

► WLAN settings	
WLAN IP address	→ 🗎 104
Security type	→ 🗎 104
WLAN passphrase	→ 🗎 104
Assign SSID name	→ 🗎 104
SSID name) → 🗎 104
Apply changes	→ 🗎 104

Parameter overview with brief description

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN IP address	-	Enter IP address of the device WLAN interface.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Security type	-	Select the security type of the WLAN interface.	UnsecuredWPA2-PSK	WPA2-PSK
WLAN passphrase	In the Security type parameter, the WPA2-PSK option is selected.	Enter the network key (8 to 32 characters). The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user- defined name.	Device tagUser-defined	User-defined
SSID name	In the Assign SSID name parameter, the User-defined option is selected.	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promag_300_A 802000)
Apply changes	_	Use changed WLAN settings.	CancelOk	Cancel

10.6.7 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Configuration backup

► Configuration backup	
Operating time	→ 🗎 105
Last backup	→ 🗎 105
Configuration management	→ 🗎 105
Backup state	→ 🗎 105
Comparison result	→ 🗎 105

Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to embedded HistoROM.	Days (d), hours (h), minutes (m) and seconds (s)	-
Configuration management	Select action for managing the device data in the embedded HistoROM.	 Cancel Execute backup Restore Compare Clear backup data 	Cancel
Backup state	Shows the current status of data saving or restoring.	 None Backup in progress Restoring in progress Delete in progress Compare in progress Restoring failed Backup failed 	None
Comparison result	Comparison of current device data with embedded HistoROM.	 Settings identical Settings not identical No backup available Backup settings corrupt Check not done Dataset incompatible 	Check not done

Function scope of the "Configuration management" parameter

Options	Description			
Cancel	No action is executed and the user exits the parameter.			
Execute backup	A backup copy of the current device configuration is saved from the integrated HistoROM to the memory of the device. The backup copy includes the transmitter data of the device.			
Restore	The last backup copy of the device configuration is restored from the device memory to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.			

Options	Description
Compare	The device configuration saved in the device memory is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

Integrated HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.6.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

► Administration	
► Define access code	→ 🗎 106
► Reset access code	→ 🗎 107
Device reset) → 🗎 107

Using the parameter to define the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

► Define access code	
Define access code) → 🗎 106
Confirm access code) → 🖺 106

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Reset access code

► Reset access code	
Operating time] → 🗎 107
Reset access code] → 🗎 107

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	 Reset access code to factory settings. For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: Web browser DeviceCare, FieldCare (via service interface CDI-RJ45) Fieldbus 	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To delivery settings Restart device Restore S-DAT backup ENP restart 	Cancel

10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu \rightarrow Simulation

► Simulation				
	Assign simulation p	rocess variable]	→ 🗎 109

Process variable value	→ 🖺 109
Status input simulation	→ 🖺 109
Input signal level	→ 🖺 109
Current input 1 to n simulation	→ 🖺 109
Value current input 1 to n	→ 🖺 109
Current output 1 to n simulation	→ 🖺 109
Value current output 1 to n	→ 🖺 109
Frequency output simulation 1 to n	→ 🖺 109
Frequency value 1 to n	→ 🖺 109
Pulse output simulation 1 to n	→ 🖺 109
Pulse value 1 to n	→ 🖺 109
Switch output simulation 1 to n	→ 🖺 109
Switch status 1 to n	→ 🖺 109
Relay output 1 to n simulation	→ 🖺 109
Switch status 1 to n	→ 🖺 109
Device alarm simulation	→ 🖺 110
Diagnostic event category	→ 🖺 110
Diagnostic event simulation	→ 🖺 110

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	 Off Mass flow Volume flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Temperature 	Off
Process variable value	-	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Status input simulation	-	Switch simulation of the status input on and off.	OffOn	Off
Input signal level	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	HighLow	High
Current input simulation	-	Switch simulation of the current input on and off.	OffOn	Off
Value current input	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Current output simulation	-	Switch the simulation of the current output on and off.	OffOn	Off
Value current output	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output simulation	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	OffOn	Off
Frequency value	In the Frequency output simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation	In the Operating mode parameter, the Pulse option is selected.	 Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter (→	 Off Fixed value Down-counting value 	Off
Pulse value	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	OffOn	Off
Switch status	-	Select the status of the status output for the simulation.	OpenClosed	Open
Relay output simulation	-	Switch simulation of the relay output on and off.	OffOn	Off
Switch status	The On option is selected in the Switch output simulation 1 to n parameter parameter.	Select status of the relay output for the simulation.	 Open Closed	Open

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Pulse output simulation	-	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	OffFixed valueDown-counting value	Off
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65535	0
Device alarm simulation	-	Switch the device alarm on and off.	OffOn	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	 Off Diagnostic event picklist (depends on the category selected) 	Off
Logging interval	-	Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	-

* Visibility depends on order options or device settings

10.8 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code $\rightarrow \implies 110$
- Protect access to local operation via key locking $\rightarrow \square 56$
- Protect access to measuring device via write protection switch $\rightarrow \square 112$
- Protect access to parameters via block operation $\rightarrow \implies 112$

10.8.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display

- **1.** Navigate to the **Define access code** parameter ($\rightarrow \triangleq 106$).
- 2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ($\rightarrow \triangleq 106$) to confirm the code.
 - └ The △-symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

The user role with which the user is currently logged on via the local display is indicated by the →

 ^B 56 Access status parameter. Navigation path: Operation → Access status

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

	Parameters for configuring the local display	Parameters for configuring the totalizer
	\downarrow	4
Language	Format display	Control Totalizer
	Contrast display	Preset value
	Display interval	Reset all totalizers

Defining the access code via the Web browser

- **1.** Navigate to the **Define access code** parameter ($\rightarrow \square$ 106).
- 2. Max. Define a max. 4-digit numeric code as an access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ($\rightarrow \triangleq 106$) to confirm the code.
 - └ The Web browser switches to the login page.

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

- - The user role with which the user is currently logged on via Web browser is indicated by the Access status parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

For a reset code, contact your Endress+Hauser service organization.

1. Navigate to the **Reset access code** parameter ($\rightarrow \implies 107$).

2. Enter the reset code.


→ The access code has been reset to the factory setting **0000**. It can be redefined $\rightarrow \cong 110$.

10.8.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via FOUNDATION Fieldbus

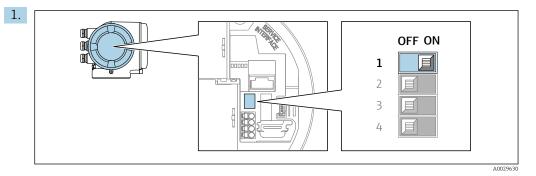

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

In the Locking status parameter the Hardware locked option is displayed
 → ■ 113. In addition, on the local display the @-symbol appears in front of the parameters in the header of the operational display and in the navigation view.

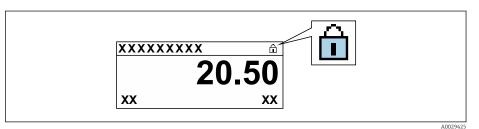

2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

Iso option is displayed in the Locking status parameter → <a>Phi 113. On the local display, the <a>B-symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

10.8.3 Write protection via block operation

Locking via block operation:

- Block: DISPLAY (TRDDISP); parameter: Define access code
- Block: EXPERT_CONFIG (TRDEXP); parameter: Enter access code

11 Operation

11.1 Reading the device locking status

Device active write protection: Locking status parameter

Operation \rightarrow Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status parameter applies $\rightarrow \square$ 56. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Petailed information:

- To configure the operating language $\rightarrow \square 74$
- For information on the operating languages supported by the measuring device $\rightarrow \, \boxdot \, 184$

11.3 Configuring the display

Detailed information:

- On the basic settings for the local display \rightarrow \bigcirc 93
- On the advanced settings for the local display $\rightarrow \cong 100$

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu \rightarrow Measured values

► Measured value	s	
	► Process variables	→ 🗎 114
	► Input values	→ 🖺 115
	► Output values	→ 🖺 117
	► Totalizer	→ 🗎 115

11.4.1 "Process variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Process variables

► Process variables	
Volume flow	→ 🗎 114
Mass flow	→ 🗎 114
Corrected volume flow	→ 🗎 114
Flow velocity	→ 🗎 114
Conductivity	→ 🗎 114
Corrected conductivity	→ 🗎 115
Temperature	→ 🗎 115
Density	→ 🗎 115

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Volume flow	-	Displays the volume flow currently measured.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter ($\rightarrow \square 77$).	
Mass flow	-	Displays the mass flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Mass flow unit parameter ($\rightarrow \square 77$).	
Corrected volume flow	-	Displays the corrected volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Corrected volume flow unit parameter $(\rightarrow \cong 78).$	
Flow velocity	-	Displays the flow velocity currently calculated.	Signed floating-point number
Conductivity	-	Displays the conductivity currently measured.	Signed floating-point number
		Dependency The unit is taken from the Conductivity unit parameter ($\rightarrow \square$ 77).	

Parameter	Prerequisite	Description	User interface
Corrected conductivity	 One of the following conditions is met: Order code for "Sensor option", option CI "Medium temperature measurement" or The temperature is read into the flowmeter from an external device. 	Displays the conductivity currently corrected. <i>Dependency</i> The unit is taken from the Conductivity unit parameter ($\rightarrow \square$ 77).	Positive floating-point number
Temperature	 One of the following conditions is met: Order code for "Sensor option", option CI "Medium temperature measurement" or The temperature is read into the flowmeter from an external device. 	Displays the temperature currently calculated. Dependency The unit is taken from the Temperature unit parameter $(\rightarrow \cong 77)$.	Positive floating-point number
Density	-	Displays the current fixed density or density read in from an external device. <i>Dependency</i> The unit is taken from the Density unit parameter.	Signed floating-point number

11.4.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer

► Totalizer	
Totalizer value 1 to n	→ 🗎 115
Totalizer overflow 1 to n	→ 🗎 115

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	A process variable is selected in the Assign process variable parameter $(\rightarrow \textcircled{P} 99)$ of the Totalizer 1 to n submenu.	Displays the current totalizer counter value.	Signed floating-point number
Totalizer overflow 1 to n	A process variable is selected in the Assign process variable parameter $(\rightarrow \textcircled{B} 99)$ of the Totalizer 1 to n submenu.	Displays the current totalizer overflow.	Integer with sign

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values


► Input values		
[► Current input 1 to n	→ 🖺 116
[► Status input 1 to n	→ 🖺 116

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Current input 1 to n

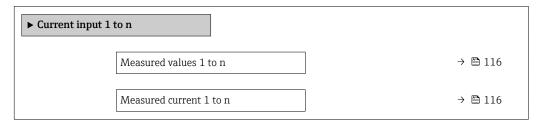

Parameter overview with brief description

Parameter	Description	User interface
Measured values	Displays the current input value.	Signed floating-point number
Measured current	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Status input 1 to n

► Status input 1 to n		
Value status input		→ 🗎 116

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	HighLow

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values

► Output values	
► Current output 1 to n	→ 🗎 117
Pulse/frequency/switch output 1 to n	→ 🗎 117
► Relay output 1 to n	→ 🗎 118

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Value current output 1 to n

► Current output 1 to n	
Output current 1 to n	→ 🗎 117
Measured current 1 to n	→ 🗎 117

Parameter overview with brief description

Parameter	Description	User interface
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Pulse/frequency/switch output 1 to n

Pulse/frequency/switch output 1 to n	
Output frequency 1 to n	→ 🗎 118
Pulse output 1 to n	→ 🗎 118
Switch status 1 to n	→ 🗎 118

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output	In the Operating mode parameter, the Pulse option is selected.	Displays the pulse frequency currently output.	Positive floating-point number
Switch status	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	OpenClosed

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Relay output 1 to n

► Relay output 1 to n	
Switch status) → 🗎 118
Switch cycles) → 🗎 118
Max. switch cycles number) → 🗎 118

Parameter overview with brief description

Parameter	Description	User interface
Switch status	Shows the current relay switch status.	 Open Closed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

• Basic settings using the **Setup** menu ($\rightarrow \square 75$)

• Advanced settings using the **Advanced setup** submenu ($\rightarrow \square 97$)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu \rightarrow Totalizer handling

► Totalizer handling	
Control Totalizer 1 to n) → 🗎 119
Preset value 1 to n) → 🗎 119
Reset all totalizers] → 🗎 119

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	One of the following options is selected in the Assign process variable parameter $(\rightarrow \textcircled{P} 99)$ Totalizer 1 to n submenu: Volume flow	Control totalizer value.	 Totalize Reset + hold Preset + hold Reset + totalize Preset + totalize Hold 	Totalize
Preset value 1 to n	One of the following options is selected in the Assign process variable parameter (→ P 99) Totalizer 1 to n submenu: Volume flow	 Specify start value for totalizer. Dependency The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→	Signed floating-point number	01
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	Cancel

11.6.1 Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.

Options	Description
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

11.6.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

11.7 Showing data logging


The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

Pata logging is also available via:

- - Web browser

Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart



23 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

► Data logging	
Assign channel 14	→ 🗎 121
Logging interval	→ 🗎 121

Clear logging data	→ 🗎 121
Data logging	→ 🗎 121
Logging delay	→ 🗎 121
Data logging control	→ 🗎 121
Data logging status	→ 🗎 121
Entire logging duration) → 🗎 121

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1 to n	The Extended HistoROM application package is available.	Assign process variable to logging channel.	 Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity* Corrected conductivity* Current output 1 Temperature* Electronic temperature 	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 999.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	CancelClear data	Cancel
Data logging	-	Select the data logging method.	OverwritingNot overwriting	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	NoneDelete + startStop	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	DoneDelay activeActiveStopped	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

* Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage $\rightarrow \ \ \cong \ 33.$
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part $\rightarrow \square$ 162.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing ± + E. Set the display darker by simultaneously pressing □ + E.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part $\rightarrow \square$ 162.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	 Press □ + ⊕ for 2 s ("home position"). Press □. Set the desired language in the Display language parameter (→ □ 102).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part →

For output signals

Error	Possible causes	Solution
Signal output outside the valid range	Main electronics module is defective.	Order spare part $\rightarrow \square$ 162.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	 Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access


Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the OFF position $\rightarrow \bigoplus$ 112.
No write access to parameters	Current user role has limited access authorization	1. Check user role $\rightarrow \square$ 56. 2. Enter correct customer-specific access code $\rightarrow \square$ 56.
No connection via FOUNDATION Fieldbus	Device plug connected incorrectly	Check the pin assignment of the connector .
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary → 🖺 62.
	Incorrect setting for the Ethernet interface of the computer	 Check the properties of the Internet protocol (TCP/IP) . Check the network settings with the IT manager.
Not connecting to Web server	Incorrect WLAN access data	 Check WLAN network status. Log on to the device again using WLAN access data. Verify that WLAN is enabled on the measuring device and operating device .
	WLAN communication disabled	-
Not connecting to Web server, FieldCare or DeviceCare	No WLAN network available	 Check if WLAN reception is present: LED on display module is lit blue Check if WLAN connection is enabled: LED on display module flashes blue Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	 Operating device is outside of reception range: Check network status on operating device. To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	 Check network settings. Temporarily enable only the WLAN as an interface.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	 Check cable connection and power supply. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	 Use the correct Web browser version . Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	JavaScript not enabledJavaScript cannot be enabled	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/ basic.html as the IP address.

Error	Possible causes	Solution
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

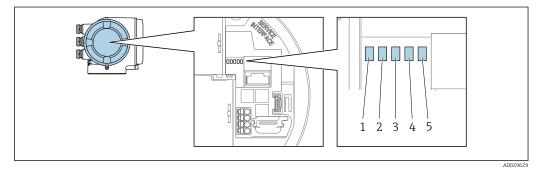


- Supply voltage Device status 1
- 2
- 3 Not used
- 4 Communication
- Service interface (CDI) active 5

LED		Color	Meaning
1	Supply voltage	Green	Supply voltage is ok
		Off	Supply voltage is off or too low
2	Device status	Red	Error
		Flashing red	Warning
3	Not used	-	-
4	Communication	White	Communication active
5	Service interface (CDI)	Yellow	Connection established
		Flashing yellow	Communication active
		Off	No connection

12.3 Diagnostic information on local display

12.3.1 **Diagnostic message**

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

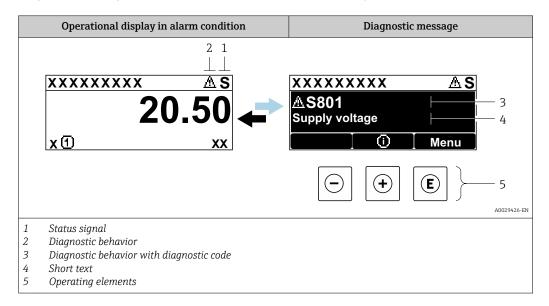

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

- Via parameter
- Via submenus $\rightarrow \square$ 155

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).



The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
С	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
М	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
8	 Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
Δ	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.


Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

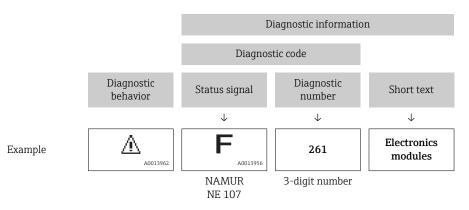

Operating elements

Кеу	Meaning
(+)	Plus key <i>In a menu, submenu</i> Opens the message about remedy information.
E Enter key In a menu, submenu Opens the operating menu.	

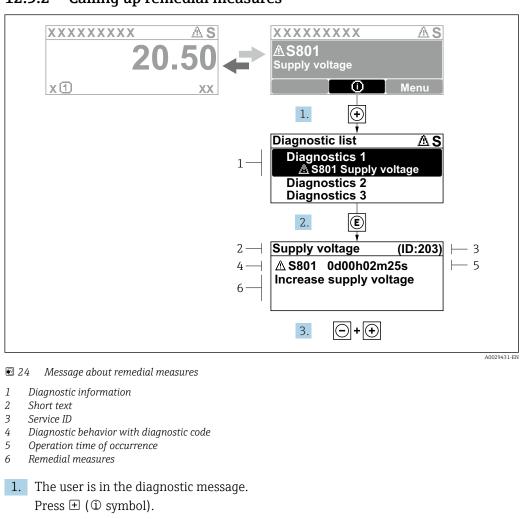

12.3.2 Calling up remedial measures

- └→ The Diagnostic list submenu opens.
- **2.** Select the desired diagnostic event with \pm or \Box and press E.
 - \blacktriangleright The message about the remedial measures opens.
- 3. Press = + \pm simultaneously.
 - └ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press + + simultaneously.
 - └ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

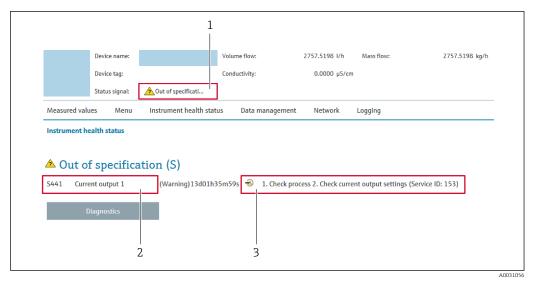

- 1 Status area with status signal
- 2 Diagnostic information $\rightarrow \square 126$
- 3 Remedy information with Service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 🖺 155

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
\otimes	Failure A device error has occurred. The measured value is no longer valid.
V	Function check The device is in service mode (e.g. during a simulation).
<u>^</u>	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in DeviceCare or FieldCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

D 🛩 🖬 🍜 📾 👼 📭 🕅 🇯	¥ ¥ ≤ < ≤ ¥ ≥	ኞ <mark>F</mark> ····································
Device name: XXXXXXX Device tag: XXXXXXX Status signal:	Function check (C	Mass flow: ♂ 12.34 kg/h Volume flow: ♂ 12.34 m ³ /h
Xxxxxx Xxxxx Xxxxx Xxx Xxx Xxx	C485 Simu Deactivate	Instrument health status
Access status tooling: Operation Setup Diagnostics Expert	Mainenance	 Failure (F) Function check (C) Diagnostics 1: C485 Simulation measured vari v Remedy information: Deactivate Simulation (Service v Out of spezification (S) Maintenance required (M)


- 1 Status area with status signal $\rightarrow \square$ 125
- 2 Diagnostic information $\rightarrow \square 126$
- 3 Remedy information with Service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 🗎 155

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

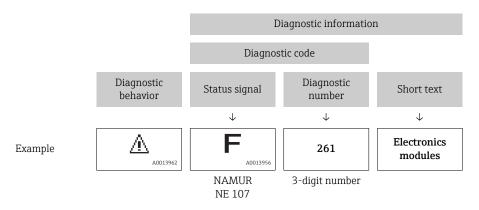

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu

Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ← A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

 $\texttt{Expert} \rightarrow \texttt{System} \rightarrow \texttt{Diagnostic} \text{ handling} \rightarrow \texttt{Diagnostic} \text{ behavior}$

() / /Diama habarian	0723-1	
오.//Diagn. behavior	0723-1	
Diagnostic no. 044		
	Warning	
Diagnostic no. 274		
Diagnostic no. 801		
		4001

☑ 25 Taking the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description	
Alarm	The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.	
Warning	The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.	
Logbook entry only The device continues to measure. The diagnostic message is displayed only in the logbook submenu (Event list submenu) and is not displayed in alternation with operational display.		
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.	

12.6.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic** event category submenu.

Expert \rightarrow Communication \rightarrow Diagnostic event category

Available status signals

Configuration as per FOUNDATION Fieldbus Specification (FF912), in accordance with NAMUR NE107.

Symbol		Meaning
A0013956		Failure A device error is present. The measured value is no longer valid.
C	A0013959	Function check The device is in service mode (e.g. during a simulation).

Symbol	Meaning	
S	 Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range) Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value) 	
A0013957	Maintenance required Maintenance is required. The measured value is still valid.	

Enabling the configuration of the diagnostic information according to FF912

For compatibility reasons, the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912 is not enabled when the device is delivered from the factory.

Enabling the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912

1. Open the Resource block.

- 2. In Feature Selection parameter, select Multi-bit Alarm (Bit-Alarm) Support option.
 - └ The diagnostic information can be configured according to FOUNDATION Fieldbus Specification FF912.

Grouping the diagnostic information

Diagnostic information is assigned to different groups. The groups differ depending on the weighting (severity) of the diagnostic event:

- Highest weighting
- High weighting
- Low weighting

Assignment of the diagnostic information (factory setting)

The assignment of the diagnostic information ex-works is indicated in the following tables.

The individual ranges of the diagnostic information can be assigned to another status signal $\rightarrow \cong 132$.

Some diagnostic information can be assigned individually, irrespective of their range $\rightarrow \cong 133$.

Proverview and description of all diagnostic information → 🗎 134

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Highest Failure (F)	Failure (F)	Sensor	F000 to 199
		Electronics	F200 to 399
		Configuration	F400 to 700
		Process	F800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
High	Function check (C)	Sensor	C000 to 199
		Electronics	C200 to 399

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
		Configuration	C400 to 700
		Process	C800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Low	ow Out of specification (S)	Sensor	S000 to 199
		Electronics	S200 to 399
		Configuration	S400 to 700
		Process	S800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Low	Low Maintenance required (M)	Sensor	M000 to 199
		Electronics	M200 to 399
		Configuration	M400 to 700
		Process	M800 to 999

Changing the assignment of the diagnostic information

The individual ranges of the diagnostic information can be assigned to another status signal. This is done by changing the bit in the associated parameter. The bit change always applies for the entire range of the diagnostic information.

Some diagnostic information can be assigned individually, irrespective of their range $\rightarrow \cong 133$

Each status signal has a parameter in the Resource Block in which it is possible to define the diagnostic event for which the status signal is transmitted:

- Failure (F): **FD_FAIL_MAP** parameter
- Function check (C): **FD_CHECK_MAP** parameter
- Out of specification (S): FD_OFFSPEC_MAP parameter
- Maintenance required (M): FD_MAINT_MAP parameter

Structure and assignment of the parameters for the status signals (factory setting)

Weighting	Allocation	Bit	FD_ FAIL_ MAP	FD_ CHECK_ MAP	FD_ OFFSPEC_ MAP	FD_ MAINT_ MAP
Highest	Sensor	31	1	0	0	0
	Electronics	30	1	0	0	0
	Configuration	29	1	0	0	0
	Process	28	1	0	0	0
High	Sensor	27	0	1	0	0
	Electronics	26	0	1	0	0
	Configuration	25	0	1	0	0
	Process	24	0	1	0	0
Low	Sensor	23	0	0	1	0
	Electronics	22	0	0	1	0
	Configuration	21	0	0	1	0

Weighting	Allocation	Bit	FD_ FAIL_ MAP	FD_ CHECK_ MAP	FD_ OFFSPEC_ MAP	FD_ MAINT_ MAP
	Process	20	0	0	1	0
Low	Sensor	19	0	0	0	1
	Electronics	18	0	0	0	1
	Configuration	17	0	0	0	1
	Process	16	0	0	0	1
Configurable range $\rightarrow \square 133$		15 to 1	0	0	0	0
Reserved (Fieldbus Foundati	Reserved (Fieldbus Foundation)		0	0	0	0

Changing the status signal for a range of diagnostic information

Example: The status signal for the diagnostic information for electronics with the "Highest" weighting is to be changed from failure (F) to function check (C).

- 1. Set the Resource Block to the **OOS** block mode.
- 2. Open the **FD_FAIL_MAP** parameter in the Resource Block.
- 3. Change **Bit 30** to **0** in the parameter.
- 4. Open the **FD_CHECK_MAP** parameter in the Resource Block.
- 5. Change **Bit 26** to **1** in the parameter.
 - If a diagnostic event occurs for electronics with the "Highest weighting", the diagnostic information to this effect is displayed with the function check (C) status signal.
- 6. Set the Resource Block to the **AUTO** block mode.

NOTICE

No status signal is assigned to an area of diagnostic information.

If a diagnostic event occurs in this area, no status signal is transmitted to the control system.

 If you are changing the parameters, make sure that a status signal is assigned to all areas.

If FieldCare is used, the status signal is enabled and disabled using the check box of the particular parameter.

Assigning diagnostic information individually to a status signal

Some diagnostic information can be individually assigned to a status signal, irrespective of their original range.

Assigning diagnostic information individually to a status signal via FieldCare.

In the FieldCare navigation window: Expert → Communication → Field diagnostics
 → Alarm detection enable

2. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.

- 3. Press Enter to confirm.
- When selecting the desired status signal (e.g. Offspec Map), also select the Configurable Area Bit 1 to Configurable Area Bit 15 that was assigned previously to the diagnostic information (step 2).
- 5. Press Enter to confirm.
 - └ The diagnostic event of the selected diagnostic information is recorded.

- 6. In the FieldCare navigation window: **Expert** → **Communication** → **Field diagnostics** → **Alarm broadcast enable**
- 7. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.
- 8. Press Enter to confirm.
- 9. When selecting the desired status signal (e.g. Offspec Map), also select the **Configurable Area Bit 1** to **Configurable Area Bit 15** that was assigned previously to the diagnostic information (step 7).
- 10. Press Enter to confirm.
 - └ The selected diagnostic information is transmitted over the bus when a diagnostic event to this effect occurs.
- A change in the status signal does not affect diagnostic information that already exists. The new status signal is only assigned if this error occurs again after the status signal has changed.

Transmitting the diagnostic information over the bus

Prioritizing diagnostic information for transmission over the bus

Diagnostic information is only transmitted over the bus if its priority is between 2 and 15. Priority 1-events are displayed but are not transmitted over the bus. Diagnostic information with priority 0 (factory setting) is ignored.

It is possible to change the priority individually for the different status signals. The following parameters of the Resource Block are used for this purpose:

- FD_FAIL_PRI
- FD_CHECK_PRI
- FD_OFFSPEC_PRI
- FD_MAINT_PRI

Suppressing certain diagnostic information

It is possible to suppress certain events during transmission over the bus using a mask. While these events are displayed they are not transmitted over the bus. This mask is in FieldCare **Expert** \rightarrow **Communication** \rightarrow **Field diagnostics** \rightarrow **Alarm broadcast enable**. The mask is a negative selection mask, i.e. if a field is selected the associated diagnostic information is not transmitted over the bus.

12.7 Overview of diagnostic information

The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Change the diagnostic information $\rightarrow \cong 130$

12.7.1 Diagnostic of sensor

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
043	Measured variable status [from the factory] $^{1)}$		1. Check sensor cable and sensor	 Density
			 Execute Heartbeat Verification Replace sensor cable or sensor 	Empty pipe detectionLow flow cut off
	Quality	Good		 Switch output status
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
082	Data storage	5		DensityEmpty pipe detectionLow flow cut off
	Measured variable status		2. Contact service	
	Quality	Bad		Switch output status
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

No.	Diagnostic information o. Short text		Remedy instructions	Influenced measured variables
083	Memory content		1. Restart device	 Density
	Measured variable status		2. Restore HistoROM S-DAT backup ('Device reset' parameter)	Empty pipe detectionLow flow cut off
	Quality	Bad	3. Replace HistoROM S-DAT	 Switch output status
	Quality substatus	Sensor failure		
		_		
	Status signal [from the factory] ¹⁾	P		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
170	Coil resistance		Check ambient and process	DensityEmpty pipe detectionLow flow cut off
	Measured variable status		temperature -	
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾ F			
	Status signal [from the factory] ¹⁾	r	_	
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
180	7 Temperature sensor defective		1. Check sensor connections	 Density 	
	Measured variable status			Empty pipe detectionLow flow cut off	
	Quality	Bad			
	Quality substatus	Sensor failure			
	Status signal [from the factory] ¹⁾	E			
		F	-		
	Diagnostic behavior	Warning			

1) Status signal can be changed.

	Diagnostic	nformation	Remedy instructions	Influenced measured
No.	Short text			variables
181			1. Check sensor cable and sensor	 Density
	Measured variable status		 Execute Heartbeat Verification Replace sensor cable or sensor 	Empty pipe detectionLow flow cut off
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	۲ 		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

12.7.2 Diagnostic of electronic

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
201	Device failure		1. Restart device 2. Contact service	DensityEmpty pipe detectionLow flow cut off
	Measured variable status			
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
242	Software incompatible		1. Check software	 Density
	Measured variable status		2. Flash or change main electronics module	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
252	Modules incompatible		1. Check electronic modules	 Density
	Measured variable status		2. Change electronic modules	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
262	5	1. Check or replace connection	DensityEmpty pipe detectionLow flow cut off	
	Measured variable status			cable between sensor electronic module (ISEM) and main
	Quality Bad	Bad	electronics 2. Check or replace ISEM or main	 Switch output status
	Quality substatus	Device failure	electronics	
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
270	Main electronic failure		Change main electronic module	 Density
	Measured variable status			 Empty pipe detection Low flow cut off Switch output status
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	1		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
271	271 Main electronic failure		1. Restart device	Density
	Measured variable status		2. Change main electronic module	Empty pipe detectionLow flow cut off
	Quality	Bad		Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
272	Main electronic failure		1. Restart device	 Density
	Measured variable status		2. Contact service	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		variables
273	Main electronic failure		Change electronic	 Density
	Measured variable status			Empty pipe detectionLow flow cut off
	Quality	Bad		Switch output status
	Quality substatus	Device failure		
		_		
	Status signal [from the factory] ¹⁾	F	_	
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
275	I/O module 1 to n defective		Change I/O module	Density
	Measured variable status			Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic	nformation	Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
276	I/O module 1 to n faulty		1. Restart device	Density	
	Measured variable status		2. Change I/O module	Empty pipe detectionLow flow cut off	
	Quality	Bad		 Switch output status 	
	Quality substatus	Device failure			
	Status signal [from the factory] ¹⁾	F			
	Diagnostic behavior	Alarm			

	Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	hort text		variables	
283	283 Memory content		1. Reset device	 Density 	
	Measured variable status		2. Contact service	Empty pipe detectionLow flow cut off	
	Quality	Bad		 Switch output status 	
	Quality substatus	Device failure			
	Status signal [from the factory] ¹⁾	E			
		1	-		
	Diagnostic behavior	Alarm			

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	hort text		variables
302	Device verification active		Device verification active, please	 Density
	Measured variable status [from t	the factory] ¹⁾	wait.	Empty pipe detectionLow flow cut off
	Quality	Good		 Switch output status
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	С		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

No.	Diagnostic information		Remedy instructions	Influenced measured variables
311	Electronic failure		1. Do not reset device	Density
	Measured variable status		2. Contact service	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	M		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
332	2 Writing in embedded HistoROM failed	Replace user interface board	Density	
	Measured variable status		Ex d/XP: replace transmitter	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
		_		
	Status signal [from the factory] ¹⁾	4		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
361	I/O module 1 to n faulty		1. Restart device	 Density
	Measured variable status			Empty pipe detectionLow flow cut offSwitch output status
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	Ĩ		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
372	Sensor electronic (ISEM) faulty		1. Restart device	Density
	Measured variable status		 Check if failure recurs Replace sensor electronic module 	Empty pipe detectionLow flow cut off
	Quality	Bad	(ISEM)	 Switch output status
	Quality substatus	Device failure		
		-		
	Status signal [from the factory] ¹⁾	۲ 		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
373			1. Transfer data or reset device	 Density
	Measured variable status		2. Contact service	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Device failure		
		_		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
375	I/O- 1 to n communication failed		1. Restart device	 Density
	Measured variable status		 Check if failure recurs Replace module rack inclusive electronic modules 	Empty pipe detectionLow flow cut offSwitch output status
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
376	5 Sensor electronic (ISEM) faulty		1. Replace sensor electronic module	DensityEmpty pipe detectionLow flow cut off
	Measured variable status [from the factory] ¹⁾		(ISEM) 2. Turn off diagnostic message	
	Quality	Good		 Switch output status
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	F		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
377	Sensor electronic (ISEM) faulty		1. Check sensor cable and sensor	Density
	Measured variable status [from	the factory] ¹⁾	 Perform Heartbeat Verification Replace sensor cable or sensor 	Empty pipe detectionLow flow cut off
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	F		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
382	382 Data storage 1. Insert T-DAT Measured variable status 2. Replace T-DAT			 Density
		2. Replace T-DAT	Empty pipe detectionLow flow cut off	
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	E		
		1.		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
383	Memory content		1. Restart device	 Density
	Measured variable status		2. Delete T-DAT via 'Reset device' parameter• Empty pipe detection • Low flow cut off	Empty pipe detectionLow flow cut off
	Quality	Bad	3. Replace T-DAT	 Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
387	Embedded HistoROM failed		Contact service organization	 Density
	Measured variable status		- Lov	Empty pipe detectionLow flow cut off
	Quality	Bad		Switch output status
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
512	Sensor electronic (ISEM) faulty		1. Check ECC recovery time	Density
	Measured variable status		2. Turn off ECC	Empty pipe detectionLow flow cut off
	Quality	Uncertain		 Switch output status
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

12.7.3 Diagnostic of configuration

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
303	5 5 115 5	-		
	Measured variable status		(parameter 'Apply I/O configuration')	
	Quality	Good	2. Afterwards reload device description and check wiring	
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	M		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
330	Flash file invalid		1. Update firmware of device	Density
	Measured variable status		2. Restart device	Empty pipe detectionLow flow cut off
	Quality	Bad		Switch output status
	Quality substatus	Configuration error		
		X		
	Status signal [from the factory] ¹⁾	IVI		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

No.	J	nformation nort text	Remedy instructions	Influenced measured variables
331	1 Firmware update failed		1. Update firmware of device	 Density
	Measured variable status		2. Restart device	 Empty pipe detection Low flow cut off Switch output status
	Quality	Bad		 Switch output status
	Quality substatus	Configuration error		
	1)			
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
410	Data transfer 1. Check connection	 Density 		
	Measured variable status		2. Retry data transfer	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured
No.	Short text			variables
412	Processing download Measured variable status		Download active, please wait	DensityEmpty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	C		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	Short text			variables
431	Trim 1 to n		Carry out trim	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured
No.	Short text			variables
437	Configuration incompatible		1. Restart device	Density
	Measured variable status		2. Contact service	Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
438	Dataset			,
Measured variable status				Empty pipe detectionLow flow cut off
	Quality	Uncertain	configuration	 Switch output status
	Quality substatus	Non specific		
			1	
	Status signal [from the factory] ¹⁾	M		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
441	Current output 1 to n		1. Check process	-
	Measured variable status		2. Check current output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	5		
	Diagnostic behavior [from the factory] ²⁾	Warning		

2) Diagnostic behavior can be changed.

No.	Diagnostic information		Remedy instructions	Influenced measured variables
442	Frequency output 1 to n		1. Check process	-
	Measured variable status		2. Check frequency output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
	Diagnostic behavior [from the factory] ²⁾	Warning		

1)

Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
443	Pulse output 1 to n		1. Check process	-
	Measured variable status		2. Check pulse output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	5		
	Diagnostic behavior [from the factory] ²⁾	Warning		

Status signal can be changed. 1)

2) Diagnostic behavior can be changed.

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
444	444 Current input 1 to n		1. Check process	-
	Measured variable status		2. Check current input settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
	Diagnostic behavior [from the factory] ²⁾	Warning		

2) Diagnostic behavior can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
453	Flow override		Deactivate flow override	Density
	Measured variable status			Empty pipe detectionLow flow cut off
	Quality	Good		 Switch output status
	Quality substatus	Non specific		
		_		
	Status signal [from the factory] ¹⁾	C	_	
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
463	Analog input 1 to n selection inval	lid	1. Check module/channel	Density
	Measured variable status		configuration 2. Check I/O module configuration	Empty pipe detectionLow flow cut off
	Quality	Bad		Switch output status
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
484	Failure mode simulation		Deactivate simulation	 Density
	Measured variable status			Empty pipe detectionLow flow cut off
	Quality	Bad		 Switch output status
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾			
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
485	Measured variable simulation		Deactivate simulation	Density	
	Measured variable status			Empty pipe detectionLow flow cut off	
	Quality	Good		 Switch output status 	
	Quality substatus	Non specific			
	Status signal [from the factory] ¹⁾	С	-		
	Diagnostic behavior	Warning			

No.	Diagnostic information		Remedy instructions	Influenced measured variables
486	Current input 1 to n simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
491	Current output 1 to n simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
492			Deactivate simulation frequency	-
	Measured variable status		output	
	Quality	Good		
	Quality substatus	Non specific		
			1	
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
493	Simulation pulse output 1 to n		Deactivate simulation pulse output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
			-	
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

	Diagnostic	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
494	Switch output simulation 1 to n		Deactivate simulation switch output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		Turnuoreo
495	Diagnostic event simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
496	Status input simulation		Deactivate simulation status input	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
497	Simulation block output		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
511	Sensor electronic (ISEM) faulty		1. Check measuring period and	-
	Measured variable status		integration time 2. Check sensor properties	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	J	nformation	Remedy instructions	Influenced measured variables
No.	SI	nort text		
520	I/O 1 to n hardware configuration	invalid	1. Check I/O hardware	-
	Measured variable status		configuration 2. Replace wrong I/O module	
	Quality	Good	3. Plug the module of double pulse output on correct slot	
	Quality substatus	Non specific	output on correct blot	
	Status signal [from the factory] ¹⁾	E		
		1.		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
530	Electrode cleaning is running		Turn off ECC	 Density
	Measured variable status			Empty pipe detectionLow flow cut off
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
	Diagnostic behavior	Warning	-	

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
531	Empty pipe detection		Execute EPD adjustment	Empty pipe detection
	Measured variable status [from	the factory] ¹⁾] • L	 Low flow cut off
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

Quality can be changed. This causes the overall status of the measured variable to change. Status signal can be changed. 1)

2) 3)

Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		Variables
537	Configuration		1. Check IP addresses in network	-
	Measured variable status		2. Change IP address	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
594	Relay output simulation		Deactivate simulation switch output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
			-	
	Status signal [from the factory] ¹⁾	С		
	Diagnostic behavior	Warning		

12.7.4 Diagnostic of process

	Diagnostic information		Remedy instructions	Influenced measured
No.	Sł	nort text		variables
803	Current loop 1 to n		1. Check wiring	-
	Measured variable status		2. Change I/O module	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] $^{1)}$	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
832	2 Electronic temperature too high		Reduce ambient temperature	 Density 	
	Measured variable status [from	the factory] ¹⁾		Empty pipe detectionLow flow cut off	
	Quality	Good		 Switch output status 	
	Quality substatus	Non specific			
	Status signal [from the factory] ²⁾	S			
	Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
833	Electronic temperature too low		Increase ambient temperature	Density
	Measured variable status [from the factory] ¹⁾			Empty pipe detectionLow flow cut off
	Quality	Good	-	 Switch output status
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	5		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
834	Process temperature too high		Reduce process temperature	 Empty pipe detection
	Measured variable status [from the factory] 1)		1	 Low flow cut off
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

Quality can be changed. This causes the overall status of the measured variable to change. Status signal can be changed. 1)

2) 3)

Diagnostic behavior can be changed.

	Diagnostic	nformation	Remedy instructions	Influenced measured variables
No.	SI	nort text		Variables
835	Process temperature too low		Increase process temperature	 Empty pipe detection
	Measured variable status [from the factory] 1)			 Low flow cut off
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	ç.		
	Status signal [IIOIII the factory]	3		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) 3)

Status signal can be changed. Diagnostic behavior can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
842	Process limit		-	
	Measured variable status		1. Check low flow cut off configuration	
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
	Diagnostic behavior	Warning		

	Diagnostic	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
882	Input signal		1. Check input configuration	 Density
	Measured variable status		Check external device or process conditions	Empty pipe detectionLow flow cut off
	Quality	Bad		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
937	7 EMC interference		1. Eliminate external magnetic field	DensityEmpty pipe detectionLow flow cut off
	Measured variable status [from the factory] ¹⁾		near sensor 2. Turn off diagnostic message	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
938	38 EMC interference		1. Check ambient conditions	DensityEmpty pipe detectionLow flow cut off
	Measured variable status [from the factory] 1)		regarding EMC influence 2. Turn off diagnostic message	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	F		
	Diagnostic behavior [from the factory] ³⁾	Alarm		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
962			1. Perform full pipe adjustment	Low flow cut off	
	Measured variable status [from the factory] 1)		 Perform empty pipe adjustment Turn off empty pipe detection 		
	Quality	Good			
	Quality substatus	Non specific			
	Status signal [from the factory] ²⁾	S			
	Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

1 To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \cong 127$
- Via Web browser →
 [™]
 [™]
 128
- Via "FieldCare" operating tool $\rightarrow \implies 129$
- Via "DeviceCare" operating tool $\rightarrow \implies 129$

Other pending diagnostic events can be displayed in the **Diagnostic list** submenu $\rightarrow \cong 155$

Navigation

"Diagnostics" menu

ें Diagnostics	
Actual diagnostics	→ 🗎 155
Previous diagnostics	→ 🗎 155
Operating time from restart	→ 🗎 155
Operating time	→ 🗎 155

Parameter	Prerequisite	Description	User interface
Actual diagnostics	tual diagnostics A diagnostic event has occurred. Shows the curred event along winformation.		Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

Parameter overview with brief description

12.9 Diagnostic messages in the DIAGNOSTIC Transducer Block


- The Actual diagnostics parameter (actual diagnostics) displays the message with the highest priority.
- A list of the active alarms can be viewed via the Diagnostics 1 parameter (diagnostics_1) to Diagnostics 5 (diagnostics 5). If more than 5 messages are pending, the messages with the highest priority are shown on the display.
- You can view the last alarm that is no longer active via the **Previous diagnostics** parameter (previous_diagnostics).

12.10 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics \rightarrow Diagnostic list



26 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \square 127$
- Via Web browser $\rightarrow \cong 128$
- Via "FieldCare" operating tool \rightarrow 🗎 129
- Via "DeviceCare" operating tool $\rightarrow \square$ 129

A0014008-EN

12.11 Event logbook

12.11.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

인 //Eventlist	⊗F
I1091 Config. change	
I1157 Mem.err. ev.list	
(→0d01h	9m10s
F311 Electr. failure	

■ 27 Taking the example of the local display

- Max. 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Diagnostic events $\rightarrow \equiv 134$
- Information events $\rightarrow \triangleq 157$

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - \odot : Occurrence of the event
 - 🕒: End of the event
- Information event

 \odot : Occurrence of the event

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \implies 127$
- Via Web browser $\rightarrow \square 128$
- Via "DeviceCare" operating tool →

 [≜] 129

For filtering the displayed event messages $\rightarrow \square 156$

12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Embedded HistoROM deleted
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1256	Display: access status changed
I1278	I/O module reset detected
I1335	Firmware changed
I1351	Empty pipe detection adjustment failure
I1353	Empty pipe detection adjustment ok
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1443	Coating thickness not determined
I1444	Device verification passed
I1445	Device verification failed
I1457	Measured error verification failed
I1459	I/O module verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1618	I/O module replaced
I1619	I/O module replaced
I1621	I/O module replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server login successful

Info number	Info name	
I1628	Display login successful	
I1629	CDI login successful	
I1631	Web server access changed	
I1632	Display login failed	
I1633	CDI login failed	
I1634	Parameter factory reset	
I1635	Parameter delivery reset	
I1637	FOUNDATION Fieldbus specific reset done	
I1639	Max. switch cycles number reached	
I1649	Hardware write protection activated	
I1650	Hardware write protection deactivated	
I1712	New flash file received	
I1725	Sensor electronic module (ISEM) changed	
I1726	Configuration backup failed	

12.12 Resetting the measuring device

Using the **Restart** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.12.1 Function scope of the "Restart" parameter

Options	Description	
Uninitialized	The selection has no effect on the device.	
Run	The selection has no effect on the device.	
Resource	The selection has no effect on the device.	
Defaults	All FOUNDATION Fieldbus blocks are reset to their factory settings. Example: Analog Input Channel to the Uninitialized option.	
Processor	The device is restarted.	
To delivery settings	Advanced FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information) and device parameters for which a customer-specific default setting was ordered are reset to this customer-specific value.	

12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

► Device information	
Device tag	→ 🗎 159
Serial number	→ 🗎 159

Device name		→ 🖺 159
Firmware version		→ 🖺 159
Order code]	→ 🖺 159
Extended order code 1]	→ 🖺 159
Extended order code 2]	→ 🖺 159
ENP version		→ 🖺 159

Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
Device tag	Enter the name for the measuring point.	32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promag300/500
Serial number	Displays the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Promag300/500	-
Firmware version	Shows the device firmware version installed.	Character string with the following format: xx.yy.zz	-
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string in the format xx.yy.zz	-

12.14 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware Modifications	Documentation type	Documentation
02.2017	01.00.zz	Option 72	Original firmware	Operating Instructions	BA01477D/06/EN/01.16

It is possible to flash the firmware to the current version or the previous version using the service interface.

For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

- The manufacturer's information is available:
 - In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
 - Specify the following details:
 - Product root: e.g. 5H3B
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Cleaning with pigs

It is essential to take the internal diameters of the measuring tube and process connection into account when cleaning with pigs. All the dimensions and lengths of the sensor and transmitter are provided in the separate "Technical Information" document.

13.1.3 Replacing seals

The sensor's seals (particularly aseptic molded seals) must be replaced periodically.

The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory) $\rightarrow \implies 190$

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \square 164$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repairs

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ► Document every repair and each conversion and enter them into the *W*@*M* life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

P Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter in the **Device information** submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at http://www.endress.com/support/return-material

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions.

- Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

 Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description	
Transmitter Promag 300	Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Output Input Display / operation Housing Software Order number: 5X3BXX For details, see Installation Instructions EA01150	
Remote display and operating module DKX001	The remote display and operating module DKX001 is available as an optional extra Order code for "Display; operation", option O "Separate backlit, 4-line display; 10 m (30 ft) Cable; touch control" The remote display and operating module DKX001 can also be ordered separately and subsequently as an accessory without a measuring device . Image: The mounting bracket can be ordered directly with the DKX001 (order code DKX001: order code for "Accessory enclosed", option RA "Mounting bracket, 1"/2" pipe"). It is also available as a separate accessory. Order number: 71340960 Image: Further information on display and operating module DKX001 → 185. Image: For details, see Special Documentation SD01763D	
WLAN antenna Wide range	External WLAN antenna for a range of up to 50 m (165 ft). I Further information on the WLAN interface $\rightarrow \square 64$.	
Protective cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. Order number: 71343505 For details, see Installation Instructions EA01160	

15.1.2 For the sensor

Accessories	Description
Adapter set	Adapter connections for installing a Promag H instead of a Promag 30/33 A or Promag 30/33 H (DN 25).
	Consists of: • 2 process connections • Screws • Seals
Seal set	For the regular replacement of seals for the sensor.

Spacer	If replacing a DN 80/100 sensor in an existing installation, a spacer is needed if the new sensor is shorter.
Welding jig	Welding nipple as process connection: welding jig for installation in pipe.
Grounding rings	Are used to ground the fluid in lined measuring tubes to ensure proper measurement. For details, see Installation Instructions EA00070D
Mounting kit	Consists of: • 2 process connections • Screws • Seals
Wall mounting kit	Wall mounting kit for measuring device (only DN 2 to 25 (1/12 to 1"))

15.2 Communication-specific accessories

Accessories	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area . For details, see Operating Instructions BA01202S
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area and the Ex area . For details, see Operating Instructions BA01202S

15.3 Service-specific accessories

Accessories	Description	
Applicator	 Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of project. 	
	 Applicator is available: Via the Internet: https://wapps.endress.com/applicator As a downloadable DVD for local PC installation. 	
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement	

FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices. For details, see Innovation brochure IN01047S

15.4 System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	For details, see "Technical Information" TI00133R and Operating Instructions BA00247R

16 Technical data

16.1 Application

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Electromagnetic flow measurement on the basis of Faraday's law of magnetic induction.	
Measuring system	The device consists of a transmitter and a sensor.	
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.	
	For information on the structure of the device $\rightarrow \cong 14$	
	16.3 Input	
Measured variable	Direct measured variables	
	 Volume flow (proportional to induced voltage) 	

- Volume flow (proportional to induced voltage)
- Temperature (DN 15 to 150 ($\frac{1}{2}$ to 6"))
- Electrical conductivity

Calculated measured variables

- Mass flow
- Corrected volume flow
- Corrected electrical conductivity

Measuring range

Typically v = 0.01 to 10 m/s (0.03 to 33 ft/s) with the specified accuracy

Flow characteristic values in SI units

Nominal diameterRecommended flowFactory settings					
		min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[dm³/min]	[dm ³ /min]	[dm ³]	[dm³/min]
2	1/12	0.06 to 1.8	0.5	0.005	0.01
4	1/8	0.25 to 7	2	0.025	0.05
8	3/8	1 to 30	8	0.1	0.1
15	1/2	4 to 100	25	0.2	0.5
25	1	9 to 300	75	0.5	1
40	1 ½	25 to 700	200	1.5	3

Nominal diameter		Recommended flow	Factory settings		
		min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[dm³/min]	[dm ³ /min]	[dm ³]	[dm ³ /min]
50	2	35 to 1100	300	2.5	5
65	-	60 to 2 000	500	5	8
80	3	90 to 3 000	750	5	12
100	4	145 to 4700	1200	10	20
125	5	220 to 7 500	1850	15	30
150	6	20 to 600 m ³ /h	150 m ³ /h	0.03 m ³	2.5 m ³ /h

Flow characteristic values in US units

Nominal Recommende diameter flow		Recommended flow	Factory settings		
		min./max. full scale value (v ~ 0.3/10 m/s)	Current output full scale value ¹⁾ (v ~ 2.5 m/s)	Pulse value ¹⁾ (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]	[gal]	[gal/min]
1/12	2	0.015 to 0.5	0.1	0.001	0.002
1/8	4	0.07 to 2	0.5	0.005	0.008
3/8	8	0.25 to 8	2	0.02	0.025
1/2	15	1 to 27	6	0.05	0.1
1	25	2.5 to 80	18	0.2	0.25
1 1/2	40	7 to 190	50	0.5	0.75
2	50	10 to 300	75	0.5	1.25
3	80	24 to 800	200	2	2.5
4	100	40 to 1250	300	2	4
5	125	60 to 1950	450	5	7
6	150	90 to 2 650	600	5	12

1) HART only

Recommended measuring range

"Flow limit" section \rightarrow 🗎 180

Operable flow range	Over 1000 : 1
Input signal	External measured values
	To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device: • Fluid temperature to increase the accuracy of the electrical conductivity (e.g. iTEMP) • Reference density for calculating the corrected volume flow
	Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section $\rightarrow \square 166$

It is recommended to read in external measured values to calculate the following measured variables: Corrected volume flow

Corrected volume i

Current input

The measured values are written from the automation system to the measuring device via the current input $\rightarrow \cong 169$.

Digital communication

The measured values are written from the automation system to the measuring device via FOUNDATION Fieldbus.

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	 4 to 20 mA (active) 0/4 to 20 mA (passive)
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	< 28.8 V (active)
Possible input variables	PressureTemperatureDensity

Status input

Maximum input values	 DC -3 to 30 V If status input is active (ON): R_i >3 kΩ
Response time	Adjustable: 5 to 200 ms
Input signal level	 Low signal: DC -3 to +5 V High signal: DC 12 to 30 V
Assignable functions	 Off Reset the individual totalizers separately Reset all totalizers Flow override

16.4 Output

Output Signal

FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 KBit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

Current output 0/4 to 20 mA

Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to:
	 4 to 20 mA (active) 0/4 to 20 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 μΑ
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	 Volume flow Mass flow Corrected volume flow Flow velocity Conductivity Corrected conductivity Temperature Electronic temperature

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector
	Can be set to: • Active • Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable

Assignable measured variables	Volume flowMass flowCorrected volume flow
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to 10 000 Hz (f $_{\rm max}$ = 12 500 Hz)
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	 Volume flow Mass flow Corrected volume flow Flow velocity Conductivity Corrected conductivity Temperature Electronic temperature
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	 Off On Diagnostic behavior Limit value: Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity Corrected conductivity Totalizer 1-3 Temperature Electronic temperature Flow direction monitoring Status Empty pipe detection Low flow cut off

Relay output

Function	Switch output	
Version	Relay output, galvanically isolated	
Switching behavior	Can be set to: • NO (normally open), factory setting • NC (normally closed)	

Maximum switching capacity (passive)	 DC 30 V, 0.1 A AC 30 V, 0.5 A
Assignable functions	 Off On Diagnostic behavior Limit value: Off Volume flow Mass flow Corrected volume flow Flow velocity Conductivity Corrected conductivity Totalizer 1-3 Temperature Electronic temperature Flow direction monitoring Status Empty pipe detection Low flow cut off

User configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm Depending on the interface, failure information is displayed as follows:

FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891	
Error current FDE (Fault Disconnection Electronic)	0 mA	

Current output 0/4 to 20 mA

4 to 20 mA

Failure mode	 Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Freely definable value between: 3.59 to 22.5 mA Actual value Last valid value
--------------	---

0 to 20 mA

Failure mode	Choose from:	
	 Maximum alarm: 22 mA 	
	 Freely definable value between: 0 to 20.5 mA 	

Pulse/frequency/switch output

Pulse output		
Failure mode	Choose from: • Actual value • No pulses	
Frequency output		
Failure mode	Choose from: • Actual value • 0 Hz • Defined value (f max 2 to 12 500 Hz)	
Switch output		
Failure mode	Choose from: • Current status • Open • Closed	

Relay output

Failure mode	Choose from:
	 Current status
	 Open
	 Closed

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red backlighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: FOUNDATION Fieldbus
- Via service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web server

Plain text display With information on cause and remedial measures	
--	--

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes	
	 The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred 	
	Diagnostic information via light emitting diodes	

Low flow cut off	The switch points for low f	The switch points for low flow cut off are user-selectable.	
Galvanic isolation	The outputs are galvanical	The outputs are galvanically isolated from one another and from earth (PE).	
Protocol-specific data	Manufacturer ID	0x452B48 (hex)	
	Ident number	0x103C (hex)	
	Device revision	1	
	DD revision	Information and files under:	
	CFF revision	www.endress.comwww.fieldbus.org	
	Interoperability Test Kit (ITK)	Version 6.2.0	
	ITK Test Campaign Number	Information: • www.endress.com • www.fieldbus.org	
	Link Master capability (LAS)	Yes	
	Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device	
	Node address	Factory setting: 247 (0xF7)	
	Supported functions	The following methods are supported: Restart ENP Restart Diagnostic Set to OOS Set to AUTO Read trend data Read event logbook	
	Virtual Communication Relation	Virtual Communication Relationships (VCRs)	
	Number of VCRs	44	
	Number of link objects in VFD	50	
	Permanent entries	1	
	Client VCRs	0	
	Server VCRs	10	
	Source VCRs	43	
	Sink VCRs	0	
	Subscriber VCRs	43	
	Publisher VCRs	43	
	Device Link Capabilities		
	Slot time	4	
	Min. delay between PDU	8	
	Max. response delay	16	

Transducer Blocks

Block	Contents	Output values
Setup Transducer Block (TRDSUP)	All parameters for standard commissioning.	No output values
Display Transducer Block (TRDDISP)	Parameters for configuring the local display.	No output values

Block	Contents	Output values
HistoROM Transducer Block (TRDHROM)	Parameters for using the HistoROM function.	No output values
Diagnostic Transducer Block (TRDDIAG)	Diagnostics information.	Process variables (AI Channel) • Temperature (7) • Volume flow (9) • Mass flow (11) • Corrected volume flow (13) • Flow velocity (37) • Electronic temperature (39) • Conductivity (70) • Corrected conductivity (71)
Expert Configuration Transducer Block (TRDEXP)	Parameters that require the user to have in- depth knowledge of the operation of the device in order to configure the parameters appropriately.	No output values
Service Sensor Transducer Block (TRDSRVS)	Parameters that can only be accessed by Endress +Hauser Service.	No output values
Total Inventory Counter Transducer Block (TRDTIC)	Parameters for configuring all the totalizers and the inventory counter.	Process variables (AI Channel) • Totalizer 1 (16) • Totalizer 2 (17) • Totalizer 3 (18)
Heartbeat Technology Transducer Block (TRDHBT)	Parameters for the configuration and comprehensive information about the results of the verification.	No output values

Function blocks

Block	Number blocks	Execution times	Process variables (Channel)
Resource Block (RB)	1	This Block (extended functionality) contains all the data that uniquely identify the device; it is the equivalent of an electronic nameplate for the device.	-
Analog Input Block (AI)	5	6 ms	Process variables (AI Channel) Temperature (7) Volume flow (9) Mass flow (11) Corrected volume flow (13) Totalizer 1 (16) Totalizer 2 (17) Totalizer 3 (18) Flow velocity (37) Electronic temperature (39) Conductivity (70) Corrected conductivity (71)
Discrete Input Block (DI)	2	4 ms	 Switch output state (101) Low flow cut off (103) Empty pipe detection (104) Status verification (105)
PID Block (PID)	1	5 ms	-


Block	Number blocks	Execution times	Process variables (Channel)
Multiple Analog Output Block (MAO)	1	4 ms	 Channel_0 (121) Value 1: External compensation variable, temperature Value 2: External compensation variable, density The compensation variable be transmitted to the device in the SI basic units.
Multiple Digital Output Block (MDO)	1	4 ms	Channel_DO (122) Value 1: Reset totalizer 1 Value 2: Reset totalizer 2 Value 3: Reset totalizer 3 Value 4: Flow override Value 5: Start heartbeat verification Value 6: Status switch output Value 7: Not assigned Value 8: Not assigned
Integrator Block (IT)	1	5 ms	-

16.5 Power supply

Terminal assignment	→ 🗎 32			
Device plugs available	→ 🗎 32			
Pin assignment, device plug	→ 🗎 32			
Supply voltage	Order code for "Power supply"	terminal voltage	Frequency range	
	Option D	DC 24 V	±20%	-
	Option E	AC100 to 240 V	-15+10%	50/60 Hz, ±4 Hz
		DC 24 V	±20%	-
	Option I	AC100 to 240 V	-15+10%	50/60 Hz, ±4 Hz
Power consumption	Transmitter			
	Max. 10 W (active power)			
Current consumption	Transmitter			

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure	 Totalizers stop at the last value measured. Configuration is retained in the plug-in memory (HistoROM DAT). Error messages (incl. total operated hours) are stored. 					
Electrical connection	→ 🗎 33					
Potential equalization	→ 🗎 36					
terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm^2 (24 to 12 AWG).					
Cable entries	 Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) Thread for cable entry: NPT ½" G ½" M20 Device plug for digital communication: M12 					
Cable specification	 → ■ 30 16.6 Performance characteristics 					
Reference operating conditions	 Error limits following DIN EN 29104, in future ISO 20456 Water, typically +15 to +45 °C (+59 to +113 °F); 0.5 to 7 bar (73 to 101 psi) Data as indicated in the calibration protocol Accuracy based on accredited calibration rigs according to ISO 17025 					
Maximum measured error	Error limits under reference operating conditions o.r. = of reading Volume flow • $\pm 0.5 \%$ o.r. $\pm 1 \text{ mm/s} (0.04 \text{ in/s})$ • Optional: $\pm 0.2 \%$ o.r. $\pm 2 \text{ mm/s} (0.08 \text{ in/s})$ Fluctuations in the supply voltage do not have any effect within the specified range. $\begin{bmatrix} 10 \\ 2.5 \\ 2.0 \\ 1.5 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1.5 \\ 0 \\ 0 \\ 1 \\ 2 \\ 4 \\ 0 \\ 1 \\ 2 \\ 4 \\ 0 \\ 1 \\ 2 \\ 4 \\ 0 \\ 1 \\ 1 \\ 2 \\ 4 \\ 0 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1$					



Temperature

±3 °C (±5.4 °F)

Electrical conductivity

Max. measured error not specified.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA		
----------	-------	--	--

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50 ppm o.r. (across the entire ambient temperature range)	
--	--

Repeatability

o.r. = of reading

Volume flow

Max. ± 0.1 % o.r. \pm 0.5 mm/s (0.02 in/s)

Temperature ±0.5 °C (±0.9 °F)

Electrical conductivity

Max. ±5 % o.r.

Current output

 Max. ±1 % o.r. for DN 15 to 150 in conjunction with stainless steel process connections, 1.4404 (F316L)

Temperature measurement $T_{90} < 15$ s response time

Influence of ambient
temperature

Temperature coefficient Max. 1 µA/°C

r

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

16.7 Installation

"Mounting requirements"

16.8 Environment

Ambient temperature range

→ 🗎 23

	Temperature tables				
	Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.				
	For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.				
Storage temperature	–50 to +80 °C (–58 to +176 °F)				
	 Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures. Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner. If protection caps or protective covers are mounted these should never be removed before installing the measuring device. 				
Degree of protection	 As standard: IP66/67, type 4X enclosure With the order code for "Sensor options", option CM: IP69 can also be ordered When housing is open: IP20, type 1 enclosure Display module: IP20, type 1 enclosure 				
	External WLAN antenna IP67				
Vibration resistance	 Vibration, sinusoidal according to IEC 60068-2-6 2 to 8.4 Hz, 3.5 mm peak 8.4 to 2 000 Hz, 1 g peak Vibration broad-band random, according to IEC 60068-2-64 10 to 200 Hz, 0.003 g²/Hz 200 to 2 000 Hz, 0.001 g²/Hz Total: 1.54 g rms 				
Shock resistance	Shock, half-sine according to IEC 60068-2-27 6 ms 30 g				
Impact resistance	Rough handling shocks according to IEC 60068-2-31				
Mechanical load	 Protect the transmitter housing against mechanical effects, such as shock or impact. Never use the transmitter housing as a ladder or climbing aid. 				
Interior cleaning	 Cleaning in place (CIP) Sterilization in place (SIP) 				
Electromagnetic	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)				

Medium temperature range -20 to +150 °C (-4 to +302 °F)

								
			C] 60					
		-						
		100- '	40					
			20					
		_	0					
		0	20					
		-						
		-40	40 -40 -20 0	2.0 40 60	80 100 120 14	→ → → → → → → → → → → → → → → → → → →		
						T _F		
			-40 0	100	200	300 360 [°F]		
	T _A Ambient	temperature	ranae				A0027450	
		nperature	runge					
Conductivity	≥ 5 µS/cm conductivit		in general. St	ronger filter d	amping is req	uired for very l	OW	
	Conductivit	y values.						
Pressure-temperature	An ove	erview of t	he pressure-t	emperature ra	tings for the r	process connec	tions is	
ratings	An ove provid	ed in the "	Technical Info	ormation" docu	ment			
Pressure tightness	Liner: PFA							
	Nominal	diameter		1	1	([psi]) for fluid to	1	
	[mm]	[in]	+25 ℃ (+77 ℉)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 ℃ (+266 ℉)	+150 °C (+302 °F)	
	2 to 150	¹⁄₁₂ to 6	0 (0)	0 (0)	0 (0)	0 (0)	0 (0)	
			1					
Flow limit	The diamet	er of the p	oipe and the f	low rate deter	mine the nomi	inal diameter o	of the sensor.	
	The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the							
	velocity of flow (v) to the physical properties of the fluid: ■ v < 2 m/s (6.56 ft/s): for low conductivity values							
	 v > 2 m/s (6.56 ft/s): for fluids producing buildup (e.g. milk with a high fat content) 							
	A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.							
		overview section →		lle values for t	he measuring :	range, see the	"Measuring	
Pressure loss					r DN 8 (3/8") i:	f the sensor is	installed in a	
	pipe with the same nominal diameter. Pressure losses for configurations incorporating adapters according to DIN EN 545							
	$\rightarrow \cong 24$	103363 101	comguation		y adapters all	Jorunny to DIN	UT) TT)	
System pressure	→ 🗎 23							

Vibrations

→ 🗎 23

16.10 Mechanical construction

Design, dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

- Weight specifications apply to standard pressure ratings and without packaging material.
- Weight data including transmitter
- Transmitter version for the hazardous area: +2 kg (+4.4 lbs)

Nominal diameter		Weight	
[mm]	[in]	[kg]	[lbs]
2	1/12	4.7	10.4
4	1/8	4.7	10.4
8	3/8	4.7	10.4
15	1/2	4.6	10.1
25	1	5.5	12.1
40	1 ½	6.8	15.0
50	2	7.3	16.1
65	_	8.1	17.9
80	3	8.7	19.2
100	4	10.0	22.1
125	5	15.4	34.0
150	6	17.8	39.3

Measuring tube specification	Nomina	l diameter	Pressure rating ¹⁾ EN (DIN)	Process connection internal diameter PFA	
	[mm]	[in]	[bar]	[mm]	[in]
	2	1/12	PN 16/40	2.25	0.09
	4	1/8	PN 16/40	4.5	0.18
	8	3/8	PN 16/40	9.0	0.35
	15	1/2	PN 16/40	16.0	0.63
	-	1	PN 16/40	22.6	0.89
	25	-	PN 16/40	26.0	1.02

1) Depending on process connection and seals used

Materials


Transmitter housing

Order code for "Housing": Option **A** "Aluminum, coated": aluminum, AlSi10Mg, coated

Window material

Order code for "Housing": Option **A** "Aluminum, coated": glass

Cable entries/cable glands

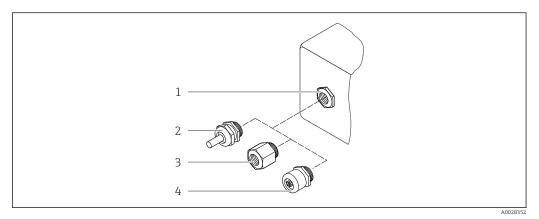

29 Possible cable entries/cable glands

- 1 Cable entry with M20 × 1.5 internal thread
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ¹/₂" or NPT ¹/₂"
- 4 Device plug coupling

Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Plastic/nickel-plated brass
Adapter for cable entry with internal thread G $\frac{1}{2}$	Nickel-plated brass
Adapter for cable entry with internal thread NPT $\frac{1}{2}$ "	
Device plug coupling	Plug M12 × 1 • Socket: Stainless steel, 1.4404 (316L) • Contact housing: Polyamide • Contacts: Gold-plated brass

Device plug

Electrical connection	Material
Plug M12x1	 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Sensor housing

Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel 1.4301 (304)

Liner

PFA (USP Class VI, FDA 21 CFR 177.1550, 3A)

Process connections

- Stainless steel, 1.4404 (F316L)
- PVDF
- PVC adhesive sleeve

Electrodes

Standard: 1.4435 (316L)

Seals

- O-ring seal, DN 2 to 25 (1/12 to 1"): EPDM, FKM, Kalrez
- Aseptic molded seal, DN 2 to 150 (1/12 to 6"): EPDM ¹⁾, FKM, silicone ¹⁾

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- WLAN antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
 Adapter:
- Stainless steel and copper

Grounding rings

- Standard: 1.4435 (316L)
- Optional: Alloy C22, tantalum

Wall mounting kit

Stainless steel 1.4301 (304)

Spacer

1.4435 (F316L)

Fitted electrodes	 2 measuring electrodes for signal detection 1 empty pipe detection electrode for empty pipe detection/temperature measurement (only DN 15 to 150 (½ to 6"))
Process connections	With O-ring seal Welding nipple (DIN EN ISO 1127, ODT/SMS, ISO 2037) Flange (EN (DIN), ASME, JIS) Flange from PVDF (EN (DIN), ASME, JIS) External thread Internal thread Hose connection PVC adhesive sleeve
	With aseptic molded seal: • Coupling (DIN 11851, DIN 11864-1, ISO 2853, SMS 1145) • Flange DIN 11864-2
	For information on the different materials used in the process connections \rightarrow 🗎 182
Surface roughness	Stainless steel electrodes, 1.4435 (316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum: ≤ 0.3 to 0.5 μm (11.8 to 19.7 μin) (All data relate to parts in contact with fluid)

¹⁾ USP Class VI, FDA 21 CFR 177.2600, 3A

Liner with PFA: \leq 0.4 µm (15.7 µin) (All data relate to parts in contact with fluid)

Stainless steel process connections:

 With O-ring seal: ≤ 1.6 μm (63 μin)
 With aseptic seal: ≤ 0.8 μm (31.5 μin) Optional: ≤ 0.38 μm (15 μin) (All data relate to parts in contact with fluid)

16.11 Operability

Languages	 Can be operated in the following languages: Via local operation English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish Via Web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
Local operation	Via display module
	 Two display modules are available: Order code for "Display; operation", option F "4-line, backlit, graphic display; touch control" Order code for "Display; operation", option G "4-line, backlit, graphic display; touch control + WLAN"
	Information about WLAN interface $\rightarrow \cong 64$
	■ 30 Operation with touch control

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

Operating elements


- External operation via touch control (3 optical keys) without opening the housing: , \boxdot , \blacksquare
- Operating elements also accessible in various hazardous areas

Via remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra: Order code for "Display; operation", option **O** "Separate backlit, 4-line display; 10 m (30 ft) Cable; touch control"

Another device version, e.g. other housing material, other cable length etc., can be ordered via the separate product structure DKX001. The measuring device is ordered with:

Order code for "Display; operation", option M "None, prepared for remote display"

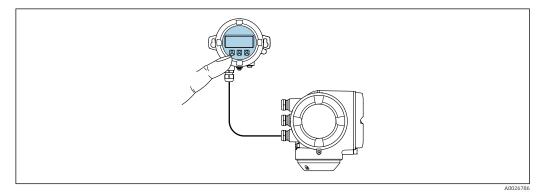

31 Operation via remote display and operating module DKX001

Display and operating elements

The display and operating elements correspond to those of the display module .

- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is used. Display or operation at the transmitter is not possible in this case.

 - If ordered subsequently: The remote display and operating module DKX001 cannot be connected at the same time as the existing display or operation unit. Only one display or operation unit may be connected to the transmitter at any one time.

Material

The housing material of the display and operating module DKX001 corresponds to the selected material of the transmitter housing.

Transmitter housing	Remote display and operating module	
Order code for "Housing" Material		Material
Option A "Aluminum, coated"	AlSi10Mg, coated	AlSi10Mg, coated

Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

Connecting cable

→ 🗎 31

Dimensions Image: Port the dimensions, see the "Technical Information" document, "Mechanical construction" section. Remote operation → 🖹 63 Service interface → 🖺 64 Supported operating tools Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	CDI-RJ45 service interfaceWLAN interface	Special Documentation for the device $\rightarrow \cong 192$
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	CDI-RJ45 service interfaceWLAN interfaceFieldbus protocol	→ 🗎 165
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	 CDI-RJ45 service interface WLAN interface Fieldbus protocol 	→ 🗎 165
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal

- Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
 - Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
 - FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
 - Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
 - FieldMate by Yokogawa → www.yokogawa.com
 - PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com \rightarrow Downloads

Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Uploading the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file, create documentation of the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration

HistoROMThe measuring device features HistoROM data management. HistoROM data managementdata managementcomprises both the storage and import/export of key device and process data, making
operation and servicing far more reliable, secure and efficient.

When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	 Event history, such as diagnostic events Parameter data record backup Device firmware package Driver for system integration e.g.: DD for FOUNDATION Fieldbus 	 Measured value memory ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Maximum indicators (min/max values) Totalizer values 	 Sensor data: diameter etc. Serial number User-specific access code (to use the "Maintenance" user role) Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface board in the connection compartment	Can be plugged into the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory for:

- Data backup function
- Backup and subsequent restoration of a device configuration in the device memory • Data comparison function
- Comparison of the current device configuration with the device configuration saved in the device memory

Data transfer

Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging

Manual

- If the **Extended HistoROM** application package (order option) is enabled:
- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or Web server
- Use the recorded measured value data in the integrated device simulation function in the **Diagnostics** submenu ($\rightarrow \cong 154$).

Service logbook

Manual

- Create up to 20 user-specific events with a date and customized text in a separate logbook for documentation of the measuring point
- Use for calibration or service operations, for example, or for maintenance or revision work that has been performed

16.12 Certificates and approvals

CE mark	The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.		
	Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.		
C-Tick symbol	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".		
Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.		
Sanitary compatibility• 3A approval and EHEDG-certified• Seals → FDA-compliant (apart from Kalrez seals)			

FOUNDATION Fieldbus	FOUNDATION Fieldbus interface			
certification	 The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications: Certified in accordance with FOUNDATION Fieldbus H1 Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request) Physical Layer Conformance Test The device can also be operated with certified devices of other manufacturers (interoperability) 			
Radio approval	Europe: RED 2014/53/EU			
	United States of America: CFR Title 47, FCC Part 15.247			
	Canada: RSS-247 Issue 1			
	Japan: Article 2 clause 1 item 19			
	Additional country-specific approvals on request.			
Other standards and guidelines	 EN 60529 Degrees of protection provided by enclosures (IP code) EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). NAMUR NE 2.1 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal. NAMUR NE 53 Software of field devices and signal-processing devices with digital electronics NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices NAMUR NE 131 Requirements for field devices for standard applications ETSI EN 300 328 Guidelines for 2.4 GHz radio components. EN 301489 Electromagnetic compatibility and radio spectrum matters (ERM). 			

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Diagnostics functions	Package	Description
	Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
		Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
		 Data logging (line recorder): Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.

Heartbeat Technology	Package	Description
	Heartbeat Verification +Monitoring	 Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets.
		 Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk assessment.

Cleaning	Package	Description
	Electrode cleaning circuit (ECC)	The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite (Fe_3O_4) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite).

16.14 Accessories

Overview of accessories available for order $\rightarrow \implies 164$

16.15 Supplementary documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The W@M Device Viewer : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promag H	KA01289D

Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 300	KA01294D

Technical Information

Measuring device	Documentation code
Promag H 300	TI01223D

Description of device parameters

Me	easuring device	Documentation code
Pro	omag 300	GP01098D

Supplementary devicedependent documentation

Safety instructions

Contents	Documentation code
ATEX/IECEx Ex d/Ex de	XA01414D
ATEX/IECEx Ex ec	XA01514D
cCSAus XP	XA01515D
cCSAus Ex d/ Ex de	XA01516D
cCSAus Ex nA	XA01517D
INMETRO Ex d/Ex de	XA01518D
INMETRO Ex ec	XA01519D
NEPSI Ex d/Ex de	XA01520D
NEPSI Ex nA	XA01521D

Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEx Ex i	XA01494D
ATEX/IECEx Ex ec	XA01498D

Contents	Documentation code
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Heartbeat Technology	SD01742D
Web server	SD01657D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	Overview of accessories available for order $\rightarrow \square 164$

Index

Δ

A
Access authorization to parameters
Read access
Write access
Access code
Incorrect input
Adapters
Adapting the diagnostic behavior
Adapting the status signal
Ambient temperature
Influence
Ambient temperature range
AMS Device Manager
Function
Application
Applicator
Approvals
Approvais
С
C-Tick symbol
Cable entries
Technical data 177
Cable entry
Degree of protection
CE mark
Certificates
Checklist
Post-connection check
Post-installation check
Cleaning
Exterior cleaning
Interior cleaning
Cleaning in place (CIP) 179
Commissioning
Advanced settings
Configuring the measuring device
Conductivity
Connecting cable
Connecting the measuring device
Connecting the signal cables
Connecting the supply voltage cables
Connection
see Electrical connection
Connection examples, potential equalization 36
Connection preparations
Connection tools
Context menu
Calling up
Closing
Explanation
Current consumption
Cyclic data transmission
D

Declaration of Conformity11Define access code110, 111

Device components	79 10 14 69
Supplementary documentation	
Sensor	69 69 67
Explanation1Symbols1	26 26
Diagnostic information Design, description DeviceCare 1 FieldCare 1 Light emitting diodes 1 Local display 1 Overview 1 Remedial measures	.29 .28 .28 .24 .25 .34 .34 .27
Diagnostic message	.55 .25 .55
Symbols	25
Disabling write protection 1 Display	53 47 10
see Local display Display and operating module DKX001 1 Display area	
Display values	48
For locking status	.63
Function Symbols used Symbols used Document function Down pipe Down	. 6 6
E ECC	

Measuring device
Via FOUNDATION Fieldbus network
Via service interface (CDI-RJ45)
Via WLAN interface
Web server
WLAN interface
Electromagnetic compatibility
Electronics module
Enabling write protection
Endress+Hauser services
Maintenance
Repair
Environment
Ambient temperature range
Impact resistance
Mechanical load
Shock resistance
Storage temperature
Vibration resistance
Error messages
see Diagnostic messages
Event history
Event list
Ex approval
Extended order code
Sensor
Transmitter
Exterior cleaning

F

Field Communicator	
Function	
Field Communicator 475	68
Field of application	
Residual risks	11
Field Xpert	
Function	
Field Xpert SFX350	65
FieldCare	
Device description file	
Establishing a connection	
Function	
User interface	
Filtering the event logbook	156
Firmware	
Release date	
Version	
Firmware history	
Fitted electrodes	
Flow direction	
Flow limit	
FOUNDATION Fieldbus certification	
Function check	74
Function scope	
AMS Device Manager	
Field Communicator	
Field Communicator 475	
Field Xpert	65

K Ke

eypad lock	
Disabling	56
Enabling	56

L

Languages, operation options	184
Line recorder	120
Local display	184
Editing view	. 49
Navigation view	47
see Diagnostic message	
see In alarm condition	
see Operational display	
Low flow cut off	174

Μ

101
$Main \ electronics \ module \ \ldots \ \ldots \ 14$
Maintenance tasks 161
Replacing seals
Managing the device configuration
Manufacturer ID
Manufacturing date
Materials
Maximum measured error
Measured values
Calculated 167
Measured
see Process variables
Measuring and test equipment
Measuring device
Configuration
-
Conversion
Disposal
Integrating via communication protocol 69
Mounting the sensor
Cleaning with pigs
Mounting grounding rings
Mounting the seals
Welding nipples
Preparing for electrical connection
Preparing for mounting
Removing
Repairs 162
Structure
Switch-on
Measuring principle
Measuring range
Measuring system
Measuring tube specification
Mechanical load
Medium temperature range
Menu
Diagnostics
Setup
Menus
For measuring device configuration
For specific settings
Mounting dimensions
see Installation dimensions
Mounting location
Mounting preparations
Mounting tools
Ν
Nameplate
Sensor
Transmitter
Navigation path (navigation view)
Navigation view
In the submenu

0

0
Operable flow range 168
Operating elements
Operating keys
see Operating elements
Operating menu
Menus, submenus
Structure
Submenus and user roles
Operating philosophy
Operation
Operation options
Operational display
Operational safety
Order code
Orientation (vertical, horizontal) 22
Outlet runs
Output
Output Signal

Ρ

Packaging disposal	. 20
Administration (Submenu)	107
Advanced setup (Submenu)	
Analog inputs (Submenu)	
Configuration backup (Submenu)	
Current input	
Current input (Wizard)	
Current input 1 to n (Submenu)	
Current output	
Current output (Wizard)	
Data logging (Submenu)	
Define access code (Wizard)	
Device information (Submenu)	
Diagnostics (Menu)	
Display (Submenu)	
Display (Wizard)	
Electrode cleaning circuit (Submenu)	
Empty pipe detection (Wizard)	
I/O configuration	
I/O configuration (Submenu)	. 79
Low flow cut off (Wizard)	
Process variables (Submenu)	
Pulse/frequency/switch output	
Pulse/frequency/switch output (Wizard) 85, 8	
Pulse/frequency/switch output 1 to n (Submenu)	
Relay output	
Relay output 1 to n (Submenu)	
Relay output 1 to n (Wizard)	
Reset access code (Submenu)	
Sensor adjustment (Submenu)	
Setup (Menu)	
Simulation (Submenu)	
Status input	
Status input (Submenu)	
Status input 1 to n (Submenu)	
System units (Submenu)	
Totalizer (Submenu)	

Totalizer 1 to n (Submenu)
Totalizer handling (Submenu)
Value current output 1 to n (Submenu) 117
Web server (Submenu)
WLAN Settings (Submenu)
Parameters
Changing
Enter a value
Partially filled pipe 21
Performance characteristics
Post-connection check (checklist) 41
Post-installation check
Post-installation check (checklist)
Potential equalization
Power consumption
Power supply failure
Pressure loss
Pressure tightness
Pressure-temperature ratings
Process conditions
Conductivity
Flow limit
Fluid temperature
Pressure loss
Pressure tightness
Process connections
Product safety
Protecting parameter settings

R

Radio approval	189
Read access	56
Reading measured values	113
Recalibration	161
Reference operating conditions	177
Registered trademarks	. 9
Remedial measures	
Calling up	127
Closing	127
Remote operation	186
Repair of a device	162
Repairs	162
Notes	162
Repeatability	178
Replacement	
Device components	162
Replacing seals	161
Requirements for personnel	10
Return	162

S

Safety
Sensor
Mounting
Serial number
Setting the operating language

Adapting the measuring device to the process	
conditions	. 119
Administration	. 106
Advanced display configurations	. 100
Analog input	79
Current input	
Current output	
Device reset	
Device tag	
Electrode cleaning circuit (ECC)	
Empty pipe detection (EPD)	
I/O configuration	
Local display	93
Low flow cut off	
Managing the device configuration	
Operating language	
Pulse output	
Pulse/frequency/switch output	
Relay output	
Resetting the totalizer	
Restart device	
Sensor adjustment	
Simulation	
Status input	
Switch output	
System units	
Totalizer	
Totalizer reset	. 119
WLAN	. 103
Shock resistance	. 179
Showing data logging	. 120
Signal on alarm	. 172
Signal on alarm	.172 69
Signal on alarm	. 172 69 . 162
Signal on alarm	. 172 69 . 162 . 162
Signal on alarm Signal on alarm Software release Spare part Spare part Spare parts Spare parts Special connection instructions	. 172 69 . 162 . 162 38
Signal on alarm Signal on alarm Software release Software release Spare part Spare part Spare parts Spare parts Special connection instructions Standards and guidelines	. 172 69 . 162 . 162 38
Signal on alarm Signal on alarm Software release Spare part Spare part Spare parts Spare parts Spare parts Special connection instructions Standards and guidelines Status area Status area	. 172 69 . 162 . 162 38 . 189
Signal on alarm Signal on alarm Software release Spare part Spare part Spare parts Special connection instructions Standards and guidelines Status area For operational display	. 172 69 . 162 . 162 38 . 189 46
Signal on alarm Software release Software part Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view Status	. 172 69 . 162 . 162 38 . 189 46 47
Signal on alarm Signal on alarm Software release Spare part Spare part Spare parts Special connection instructions Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display In the navigation view 12 Status signals 12	. 172 69 . 162 . 162 . 38 . 189 . 46 47 5, 128
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display In the navigation view Status signals 12 Sterilization in place (SIP) Sterilization in place	. 172 69 . 162 . 162 . 38 . 189 . 46 47 5, 128 . 179
Signal on alarm Signal on alarm Software release Software part Spare part Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view 12 Status signals 12 Sterilization in place (SIP) Storage conditions	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19
Signal on alarm Signal on alarm Software release Software part Spare part Spare parts Special connection instructions Standards and guidelines Status area For operational display For operational display 12 Status signals 12 Sterilization in place (SIP) Storage conditions Storage temperature Storage temperature	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display In the navigation view 12 Status signals 12 Storage conditions Storage temperature Storage temperature range Storage temperature range	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display Status signals Status signals 12! Sterilization in place (SIP) Storage conditions Storage temperature Storage temperature Structure Structure	. 172 . 69 . 162 . 162 . 38 . 189 . 46 . 47 5, 128 . 179 . 19 . 19 . 179
Signal on alarm Signal on alarm Software release Spare part Spare part Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view Status signals Status signals 12! Sterilization in place (SIP) Storage temperature Storage temperature range Storage temperature range Structure Measuring device	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 179 19 19 179 14
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display In the navigation view In the navigation view 12 Status signals 12 Storage conditions 12 Storage temperature Storage temperature range Storage temperature range Storage temperature range Measuring device Operating menu	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 179 19 19 179 14
Signal on alarm Software release Spare part Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view Status signals Storage conditions Storage temperature Storage temperature range Structure Measuring device Operating menu Stubmenu	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19 19 19 14 43
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display In the navigation view Status signals 12 Status signals 12 Storage conditions Storage temperature Storage temperature range Storage temperature range Structure Measuring device Measuring menu Operating menu Stubmenu Administration	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19 19 19 14 43 6, 107
Signal on alarm Software release Software part Spare part Spare parts Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display For operational display 12 Status signals 12 Sterilization in place (SIP) 12 Storage conditions 12 Storage temperature Storage temperature range Structure Measuring device Measuring menu Operating menu Stubmenu Administration Advanced setup 9	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19 19 19 14 43 6, 107 97, 98
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Special connection instructions Standards and guidelines Status area For operational display In the navigation view In the navigation view Status signals Status signals 12! Sterilization in place (SIP) Storage conditions Storage temperature Storage temperature ange Storage temperature range Storage temperature ange Storage temperature ange Storage temperature ange Storage temperature ange Storage temperature ange Storage temperature ange Storage temperature ange Administration 100 Adwanced setup 9 Analog inputs 9	. 172 . 69 . 162 . 162 . 38 . 189 . 46 . 47 5, 128 . 179 . 19 . 19 . 179 . 14 . 43 6, 107 97, 98 . 79
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Status area Status area For operational display In the navigation view In the navigation view Status signals Status signals 12 Storage conditions Storage temperature Storage temperature range Storage temperature range Storage temperature range Storage temperature range Administration 10 Advanced setup 4 Analog inputs 9	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19 19 19 14 43 6, 107 97, 98 79 104
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view Status signals Status signals 12! Sterilization in place (SIP) Storage conditions Storage temperature Storage temperature range Storage temperature range Storage temperature range Storage temperature signals 10! Administration 10! Advanced setup 4 Analog inputs 9 Configuration backup 9 Current input 1 to n 10!	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19 19 19 19 19 14 43 6, 107 97, 98 79 . 104 . 116
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view 12 Status signals 12 Status signals 12 Sterilization in place (SIP) 12 Storage conditions 12 Storage temperature Storage temperature range Storage temperature range Storage temperature range Storage temperature signals 10 Advanced setup 10 Advanced setup 10 Analog inputs 10 Ata logging 10	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 19 19 19 19 19 19 19 14 43 6, 107 97, 98 79 . 104 . 116 120
Signal on alarm Signal on alarm Software release Spare part Spare parts Special connection instructions Standards and guidelines Standards and guidelines Status area For operational display For operational display 12 Status signals 12 Status signals 12 Status signals 12 Storage conditions Storage temperature Storage temperature range Storage temperature range Structure Measuring device Operating menu 10 Advanced setup 6 Analog inputs 6 Configuration backup 6 Device information 0	. 172 69 . 162 . 162 38 . 189 46 47 5, 128 . 179 10 10 10 10
Signal on alarm Signal on alarm Software release Spare part Spare parts Spare parts Special connection instructions Standards and guidelines Status area For operational display In the navigation view 12 Status signals 12 Status signals 12 Sterilization in place (SIP) 12 Storage conditions 12 Storage temperature Storage temperature range Storage temperature range Storage temperature range Storage temperature signals 10 Advanced setup 10 Advanced setup 10 Analog inputs 10 Ata logging 10	. 172 69 . 162 . 162 . 38 . 189 . 189 . 46 . 47 5, 128 . 179 . 19 . 19 . 19 . 19 . 19 . 19 . 19 . 1

	156
I/O configuration	79
1	115
	113
····	117
Overview	44
	114
	117
J 1	118
Reset access code	107
Sensor adjustment	98
Simulation	107
Status input	81
Status input 1 to n	116
System units	76
Totalizer	115
Totalizer 1 to n	. 98
Totalizer handling	119
	117
Web server	62
	103
Supplementary documentation	191
Supply voltage	176
	183
	171
Symbols	
For communication	46
For correction	. 49
For diagnostic behavior	46
For locking	. 46
For measured variable	46
For measurement channel number	46
For menus	48
For parameters	. 48
For status signal	. 46
For submenu	48
For wizard	48
In the status area of the local display	. 46
In the text and numeric editor	. 49
System design	
Measuring system	167
see Measuring device design	
System integration	69
System pressure	23
-	
T	
	167
1 1	178
Temperature range	
Ambient temperature range for display	10/

Storage temperature19Terminal assignment32terminals177Text editor49

Electrical connection30For mounting25

Transport	19
Totalizer Configuration	98
Turning the display moduleTurning the housing	28 28 19
General	28
	28
U Use of the measuring device Borderline cases	10
Previous diagnostic event	54
V Version data for the device	79
W W@M 161, 1 W@M Device Viewer 15, 1 Weight Transport (notes)	62
Low flow cut off	82 06 93 96 94 89 91
WLAN settings 1 Workplace safety	03 11
Write access	56

see Help text

Tool tip

Tools

www.addresses.endress.com

