


Operating Instructions

Proline Promass G 100

PROFIBUS DP

Coriolis flowmeter

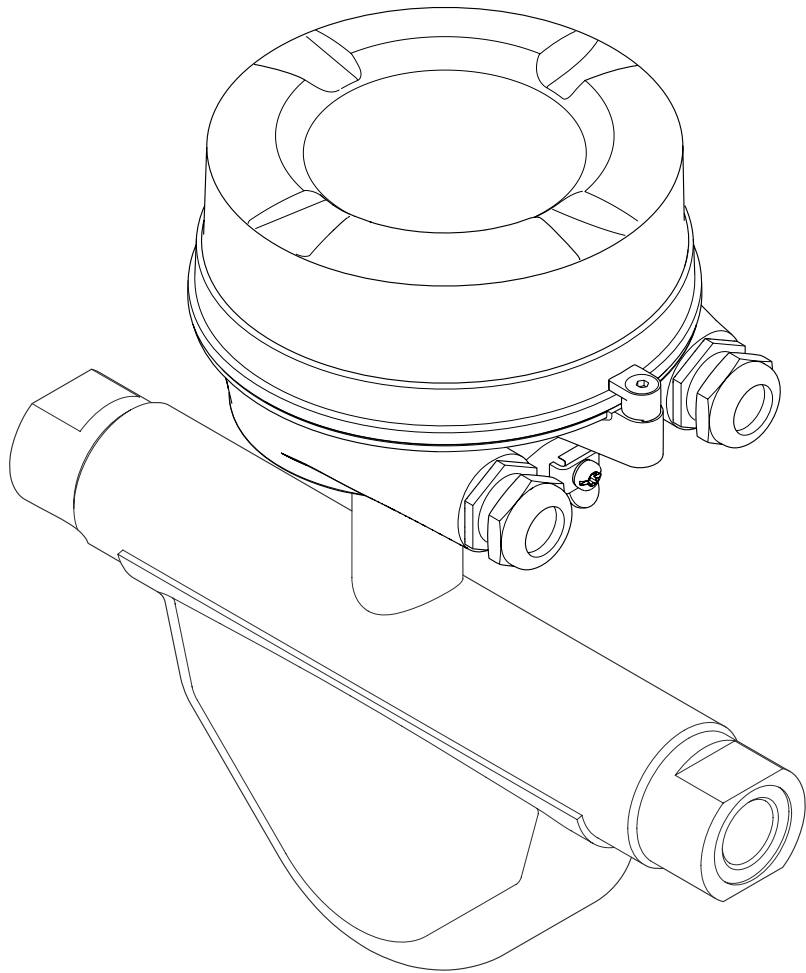

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these Instructions.

Table of contents

1	Document information	5	6.2	Mounting the measuring device	21
1.1	Document function	5	6.2.1	Required tools	21
1.2	Symbols used	5	6.2.2	Preparing the measuring device	21
1.2.1	Safety symbols	5	6.2.3	Mounting the measuring device	22
1.2.2	Electrical symbols	5	6.2.4	Turning the display module	22
1.2.3	Tool symbols	5	6.3	Post-installation check	22
1.2.4	Symbols for certain types of information	6	7	Electrical connection	24
1.2.5	Symbols in graphics	6	7.1	Connection conditions	24
1.3	Documentation	6	7.1.1	Required tools	24
1.3.1	Standard documentation	7	7.1.2	Requirements for connecting cable	24
1.3.2	Supplementary device-dependent documentation	7	7.1.3	Terminal assignment	25
1.4	Registered trademarks	7	7.1.4	Pin assignment, device plug	26
2	Basic safety instructions	8	7.1.5	Preparing the measuring device	26
2.1	Requirements for the personnel	8	7.2	Connecting the measuring device	26
2.2	Designated use	8	7.2.1	Connecting the transmitter	27
2.3	Workplace safety	9	7.3	Special connection instructions	28
2.4	Operational safety	9	7.3.1	Connection examples	28
2.5	Product safety	9	7.4	Hardware settings	29
2.6	IT security	9	7.4.1	Setting the device address	29
3	Product description	11	7.4.2	Enabling the terminating resistor	29
3.1	Product design	11	7.5	Ensuring the degree of protection	30
3.1.1	Device version with PROFIBUS DP communication type	11	7.6	Post-connection check	31
4	Incoming acceptance and product identification	12	8	Operation options	32
4.1	Incoming acceptance	12	8.1	Overview of operation options	32
4.2	Product identification	12	8.2	Structure and function of the operating menu	33
4.2.1	Transmitter nameplate	13	8.2.1	Structure of the operating menu	33
4.2.2	Sensor nameplate	13	8.2.2	Operating philosophy	34
4.2.3	Symbols on measuring device	14	8.3	Access to the operating menu via the Web browser	34
5	Storage and transport	15	8.3.1	Function range	34
5.1	Storage conditions	15	8.3.2	Prerequisites	35
5.2	Transporting the product	15	8.3.3	Establishing a connection	35
5.2.1	Measuring devices without lifting lugs	15	8.3.4	Logging on	36
5.2.2	Measuring devices with lifting lugs	16	8.3.5	User interface	36
5.2.3	Transporting with a fork lift	16	8.3.6	Disabling the Web server	37
5.3	Packaging disposal	16	8.3.7	Logging out	38
6	Installation	17	8.4	Access to the operating menu via the operating tool	38
6.1	Mounting requirements	17	8.4.1	Connecting the operating tool	38
6.1.1	Mounting position	17	8.4.2	FieldCare	39
6.1.2	Requirements from environment and process	18	9	System integration	41
6.1.3	Special mounting instructions	20	9.1	Overview of device description files	41
			9.1.1	Current version data for the device	41
			9.1.2	Operating tools	41
			9.2	Device master file (GSD)	41
			9.2.1	Manufacturer-specific GSD	41
			9.2.2	Profile GSD	42
			9.3	Cyclic data transmission	42
			9.3.1	Block model	42
			9.3.2	Description of the modules	43

10	Commissioning	49		
10.1	Function check	49		
10.2	Establishing a connection via FieldCare	49		
10.3	Configuring the measuring device	49		
10.3.1	Defining the tag name	49		
10.3.2	Setting the system units	50		
10.3.3	Selecting and setting the medium	52		
10.3.4	Configuring the communication interface	53		
10.3.5	Configuring the analog inputs	54		
10.3.6	Configuring the low flow cut off	56		
10.3.7	Configuring the partial filled pipe detection	57		
10.4	Advanced settings	58		
10.4.1	Calculated values	58		
10.4.2	Carrying out a sensor adjustment	59		
10.4.3	Configuring the totalizer	60		
10.4.4	Carrying out additional display configurations	61		
10.5	Simulation	63		
10.6	Protecting settings from unauthorized access	64		
10.6.1	Write protection via access code	64		
10.6.2	Write protection via write protection switch	65		
11	Operation	66		
11.1	Reading device locking status	66		
11.2	Reading measured values	66		
11.2.1	Process variables	66		
11.2.2	Totalizer	67		
11.2.3	Output values	67		
11.3	Adapting the measuring device to the process conditions	68		
11.4	Performing a totalizer reset	68		
12	Diagnostics and troubleshooting	70		
12.1	General troubleshooting	70		
12.2	Diagnostic information via light emitting diodes	71		
12.2.1	Transmitter	71		
12.3	Diagnostic information in FieldCare	71		
12.3.1	Diagnostic options	71		
12.3.2	Calling up remedy information	72		
12.4	Adapting the diagnostic information	73		
12.4.1	Adapting the diagnostic behavior	73		
12.5	Overview of diagnostic information	75		
12.5.1	Diagnostics for the sensor	77		
12.5.2	Diagnostics for the electronics	80		
12.5.3	Diagnostics for the configuration	85		
12.5.4	Diagnostics for the process	88		
12.6	Pending diagnostic events	94		
12.7	Diagnostic list	94		
12.8	Event logbook	95		
12.8.1	Event history	95		
12.8.2	Filtering the event logbook	95		
12.8.3	Overview of information events	95		
12.9	Resetting the measuring device	96		
12.10	Device information	97		
12.11	Firmware history	98		
13	Maintenance	100		
13.1	Maintenance tasks	100		
13.1.1	Exterior cleaning	100		
13.2	Measuring and test equipment	100		
13.3	Endress+Hauser services	100		
14	Repair	101		
14.1	General notes	101		
14.2	Spare parts	101		
14.3	Endress+Hauser services	101		
14.4	Return	101		
14.5	Disposal	101		
14.5.1	Removing the measuring device	101		
14.5.2	Disposing of the measuring device	102		
15	Accessories	103		
15.1	Service-specific accessories	103		
16	Technical data	104		
16.1	Application	104		
16.2	Function and system design	104		
16.3	Input	104		
16.4	Output	105		
16.5	Power supply	107		
16.6	Performance characteristics	108		
16.7	Installation	111		
16.8	Environment	111		
16.9	Process	112		
16.10	Mechanical construction	113		
16.11	Operability	115		
16.12	Certificates and approvals	117		
16.13	Application packages	118		
16.14	Accessories	118		
16.15	Documentation	118		
17	Appendix	120		
17.1	Overview of the operating menu	120		
17.1.1	"Operation" menu	120		
17.1.2	"Setup" menu	121		
17.1.3	"Diagnostics" menu	125		
17.1.4	"Expert" menu	129		
	Index	146		





1 Document information

1.1 Document function







These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used



1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.












1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.





1.2.3 Tool symbols

Symbol	Meaning
	Allen key
	Open-ended wrench


1.2.4 Symbols for certain types of information


Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a sequence of actions
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3, ...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

1.3 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

-  For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

Microsoft®

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA

Applicator®, FieldCare®, Field Xpert™, HistoROM®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use


Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section (→  6).

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage of the measuring tube due to corrosive or abrasive fluids.

Housing breakage due to mechanical overload possible!

- ▶ Verify the compatibility of the process fluid with the measuring tube material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Observe the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any

warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 20 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Product description

The device consists of a transmitter and a sensor.

One device version is available: compact version - transmitter and sensor form a mechanical unit.

3.1 Product design

3.1.1 Device version with PROFIBUS DP communication type

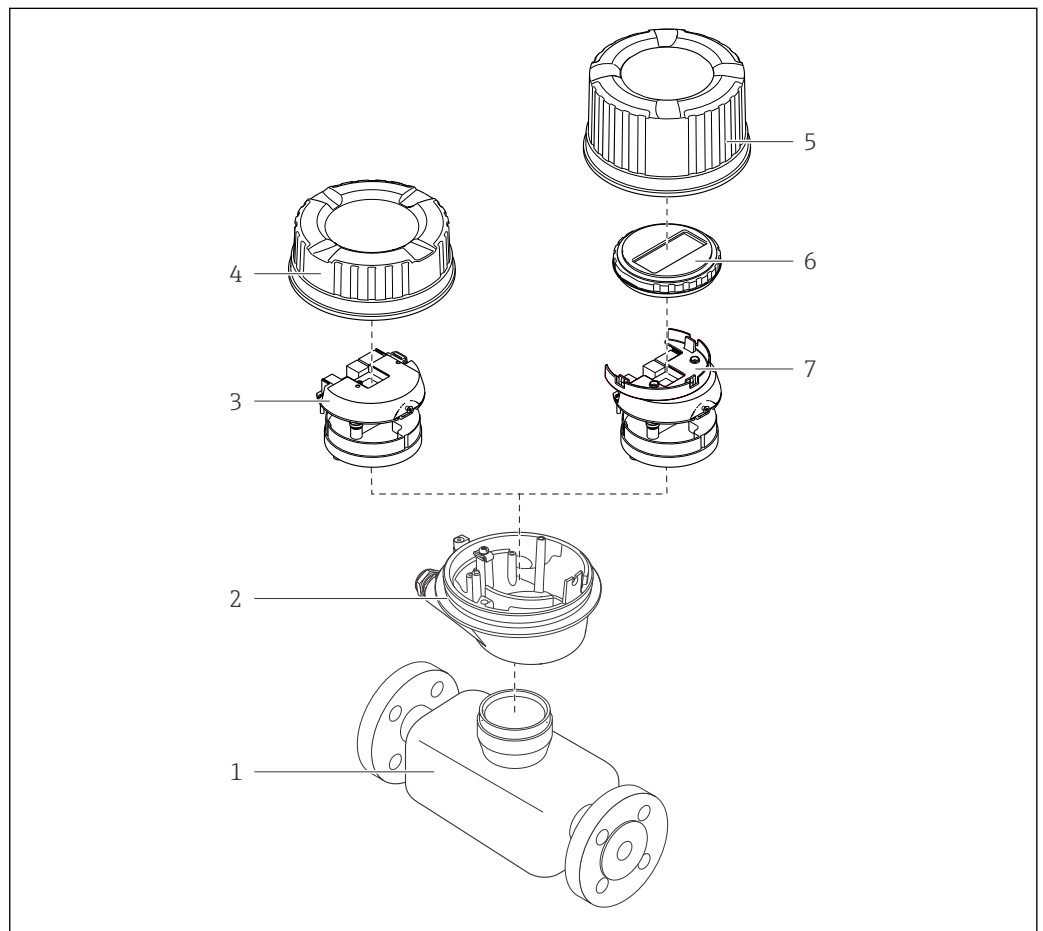










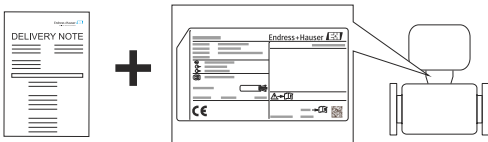



A0023153


1 Important components of a measuring device

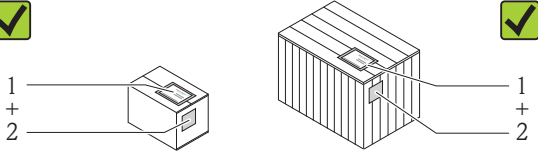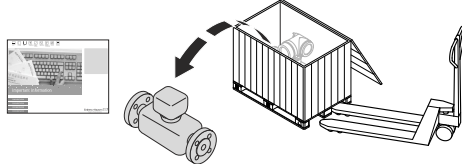- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover
- 5 Transmitter housing cover (version for optional onsite display)
- 6 Onsite display (optional)
- 7 Main electronics module (with bracket for optional onsite display)

4 Incoming acceptance and product identification

4.1 Incoming acceptance

 		<p>Are the order codes on the delivery note (1) and the product sticker (2) identical?</p>
		
 		<p>Are the goods undamaged?</p>
 		<p>Do the nameplate data match the ordering information on the delivery note?</p>
 		<p>Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?</p>



-  If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section (→ 13).

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" (→  7) and "Supplementary device-dependent documentation" (→  7)
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

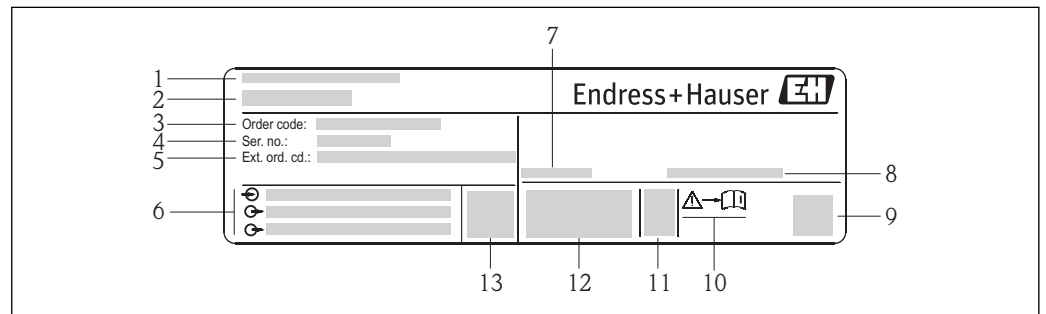

A0017520

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature (T_a)
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

4.2.2 Sensor nameplate






Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport


5.1 Storage conditions

Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Storage temperature: -40 to $+80$ °C (-40 to $+176$ °F),
Order Code "Test, Certificate", Option JM: -50 to $+60$ °C (-58 to $+140$ °F),
preferably at $+20$ °C ($+68$ °F)
- Store in a dry and dust-free place.
- Do not store outdoors.

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

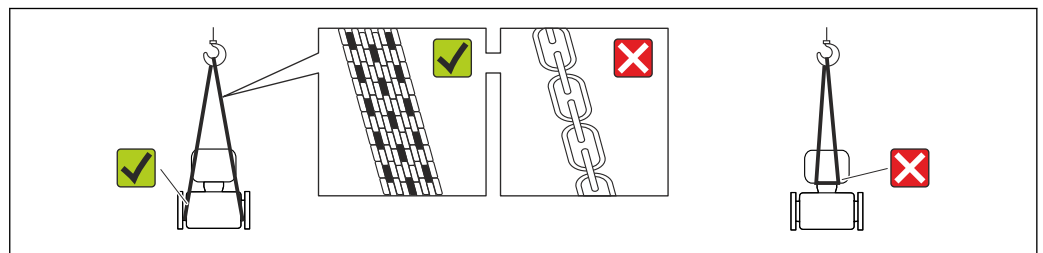

A0015604

- i** Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

⚠ WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

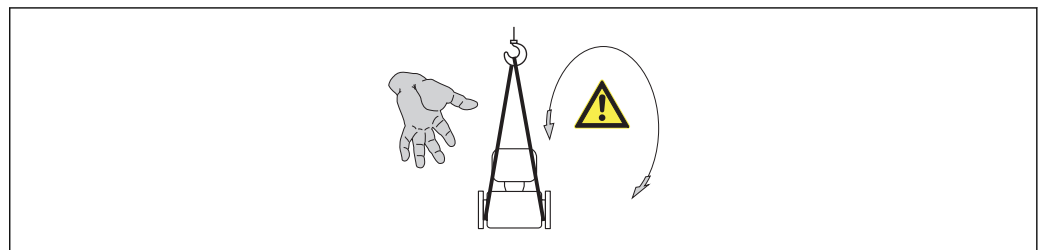

A0015606

5.2.2 Measuring devices with lifting lugs

CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Mounting requirements


No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:





- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

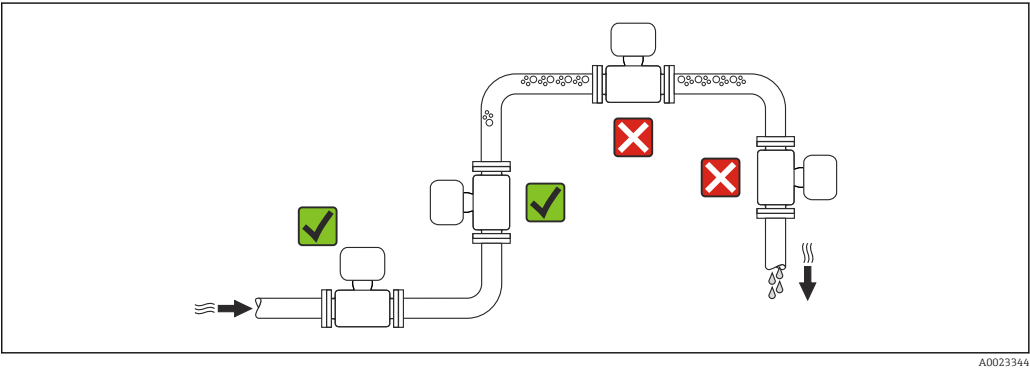

A0023344


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation	 A0015591	✓✓
B	Horizontal orientation, transmitter head up	 A0015589	✓✓ ¹⁾ Exception: (→ 3, 18)
C	Horizontal orientation, transmitter head down	 A0015590	✓✓ ²⁾ Exception: (→ 3, 18)
D	Horizontal orientation, transmitter head at side	 A0015592	✗

- 1) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.


If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

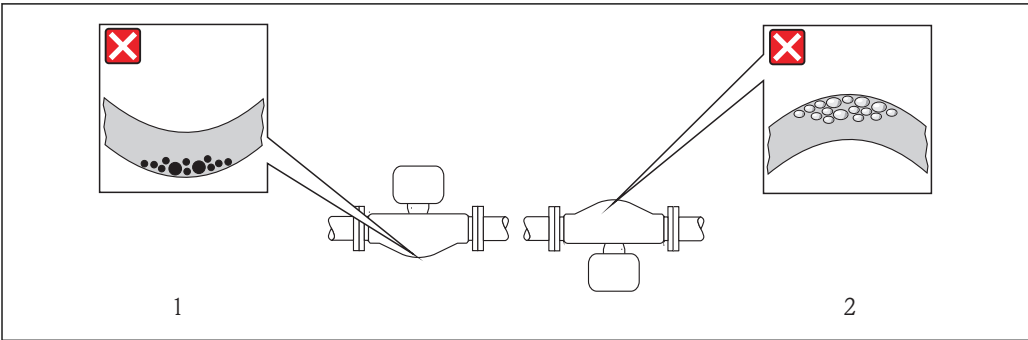

- 3 *Orientation of sensor with curved measuring tube*
- 1 *Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.*
- 2 *Avoid this orientation for outgassing fluids: Risk of gas accumulating.*

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs (→ 18).

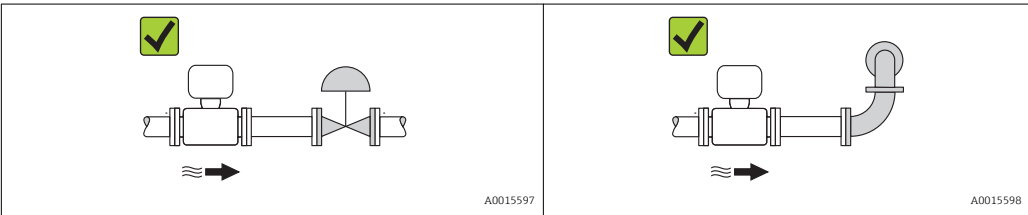

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Measuring device	Non-Ex	-40 to +60 °C (-40 to +140 °F)
	Ex na, NI version	-40 to +60 °C (-40 to +140 °F)
	Ex ia, IS version	■ -40 to +60 °C (-40 to +140 °F) ■ -50 to +60 °C (-58 to +140 °F) (Order code for "Test, certificate", option JM)
Local display		-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

System pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.


Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines

► Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

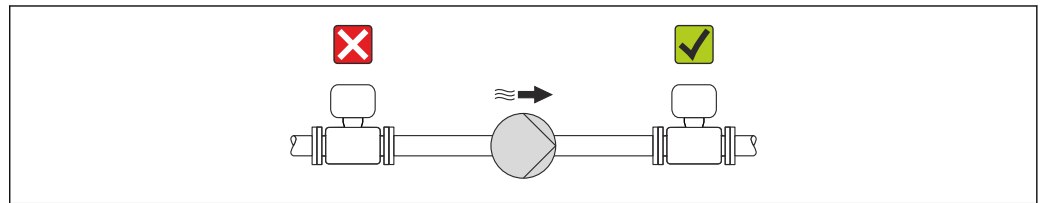

A0015594


Thermal insulation

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

NOTICE

Electronics overheating on account of thermal insulation!

- Observe maximum permitted insulation height of the transmitter neck so that the transmitter head is completely free.

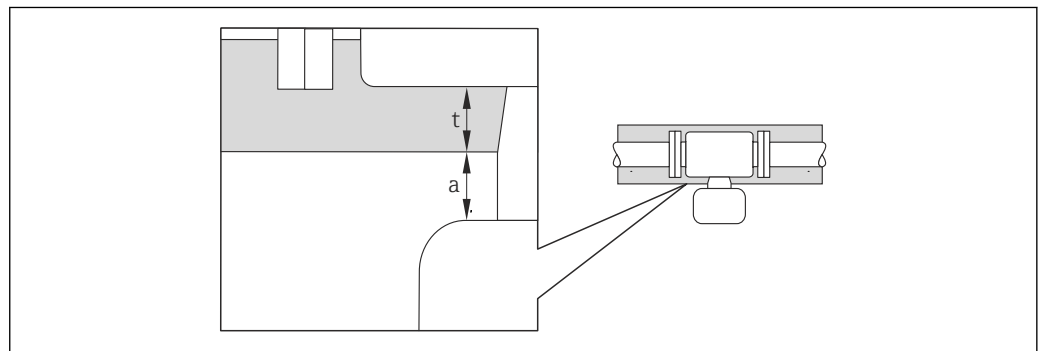

A0019919

- a* Minimum distance to insulation
t maximum Insulation thickness

The minimum distance between the transmitter housing and the insulation is 10 mm (0.39 in) so that the transmitter head remains completely exposed.

NOTICE

Danger of overheating with insulation

- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F)

NOTICE

The insulation can also be thicker than the maximum recommended insulation thickness.

Prerequisite:

- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- ▶ Observe maximum permitted ambient temperature for the transmitter (→ 18).
- ▶ Depending on the fluid temperature, take the device orientation requirements into account.

NOTICE

Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F)
- ▶ Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values approved by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability $\mu_r \geq 300$
- Plate thickness $d \geq 0.35 \text{ mm}$ ($d \geq 0.014 \text{ in}$)


Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Rupture disk

Make sure that the function and operation of the rupture disk are not impeded when installing the device. The position of the rupture disk is indicated on a sticker applied over it. If the rupture disk is triggered, the sticker is destroyed. The disk can therefore be visually monitored. For additional information that is relevant to the process (→ 112).

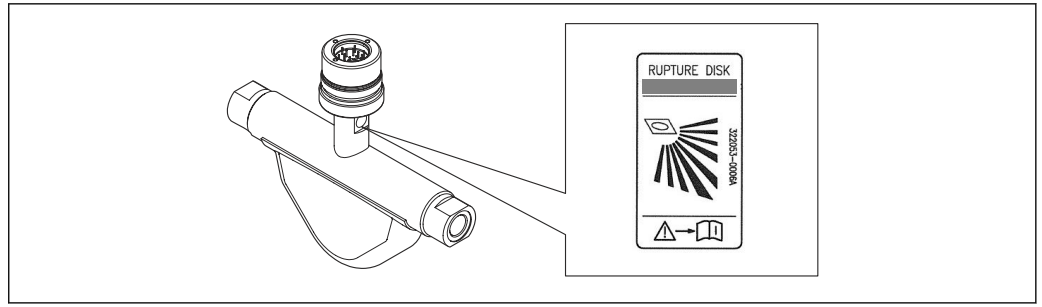

A0024599

4 Rupture disk label

WARNING

Limited functional reliability of the rupture disk.

Danger to persons from escaping fluids!

- ▶ Do not remove the rupture disk.
- ▶ When using a rupture disk, do not use a heating jacket.
- ▶ Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Take precautions to prevent damage and danger to persons if the rupture disk is actuated.
- ▶ Observe information on the rupture disk sticker.

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions (→ 108). Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

i Zero point adjustment is performed via the **Zero point adjustment control** parameter (→ 60).

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the measuring device

⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

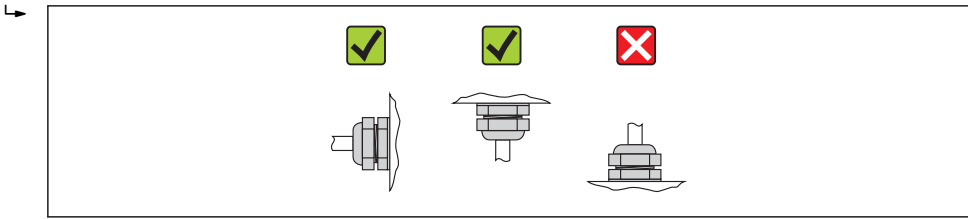


A0013964

6.2.4 Turning the display module

The display module can be turned to optimize display readability.


Aluminum housing version, AlSi10Mg, coated

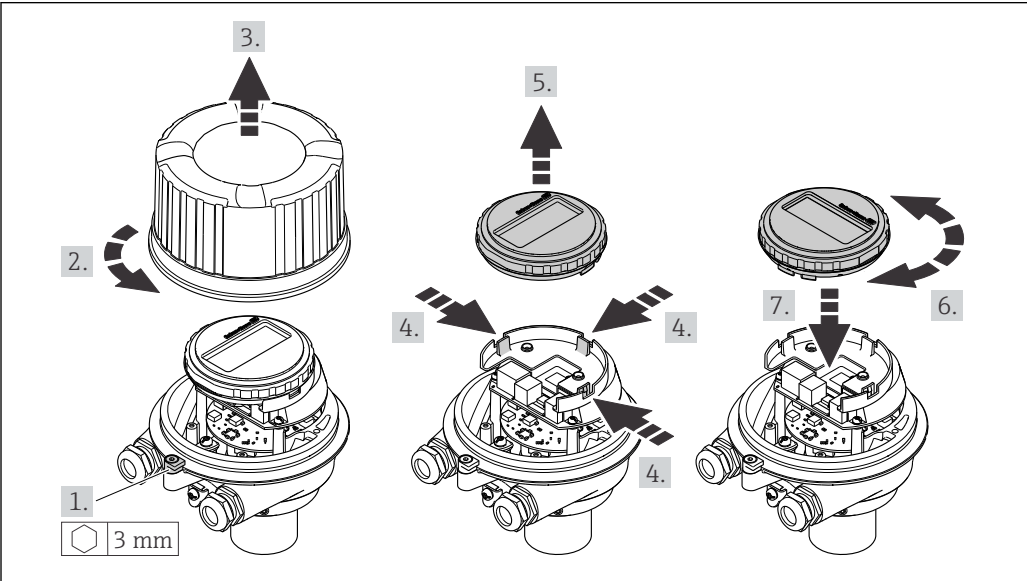


A0023192

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none">■ Process temperature (→ 112)■ Process pressure (refer to the chapter on "Pressure-temperature ratings" of the "Technical Information" document)■ Ambient temperature (→ 18)■ Measuring range (→ 104)	<input type="checkbox"/>

Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none">■ According to sensor type■ According to medium temperature■ According to medium properties (outgassing, with entrained solids)	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping (->  17)?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

 The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw 3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- -40 °C (-40 °F) to $+80\text{ °C}$ ($+176\text{ °F}$)
- Minimum requirement: cable temperature range \geq ambient temperature $+20\text{ K}$

Power supply cable

Standard installation cable is sufficient.

Signal cable

PROFIBUS DP

The IEC 61158 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A
Characteristic impedance	135 to 165 Ω at a measuring frequency of 3 to 20 MHz
Cable capacitance	<30 pF/m
Wire cross-section	>0.34 mm ² (22 AWG)
Cable type	Twisted pairs
Loop resistance	$\leq 110\text{ }\Omega/\text{km}$
Signal damping	Max. 9 dB over the entire length of the cable cross-section
Shielding	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.

Cable diameter

- Cable glands supplied:
M20 \times 1.5 with cable $\phi 6$ to 12 mm (0.24 to 0.47 in)
- Spring terminals:
Wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

7.1.3 Terminal assignment




Transmitter


PROFIBUS DP connection version

 For use in the non-hazardous area and Zone 2/Div. 2.

Order code for "Output", option **L**

Depending on the housing version, the transmitters can be ordered with clamps or device plugs.

Order Code "Housing"	Connection methods available		Possible options for order code "Electrical connection"
	Output	Power supply	
Options A, B	Terminals	Terminals	<ul style="list-style-type: none">▪ Option A: coupling M20x1▪ Option B: thread M20x1▪ Option C: thread G ½"▪ Option D: thread NPT ½"
Options A, B	Device plugs (→  26)	Terminals	<ul style="list-style-type: none">▪ Option L: plug M12x1 + thread NPT ½"▪ Option N "Plug M12x1 + coupling M20"▪ Option P "Plug M12x1 + thread G ½"▪ Option U "Plug M12x1 + thread M20"
Options A, B, C	Device plugs (→  26)	Device plugs (→  26)	Option Q "2 x plug M12x1"
Order code for "Housing": <ul style="list-style-type: none">▪ Option A: compact, coated aluminum▪ Option B: compact, stainless▪ Option C "Ultra-compact, stainless"			

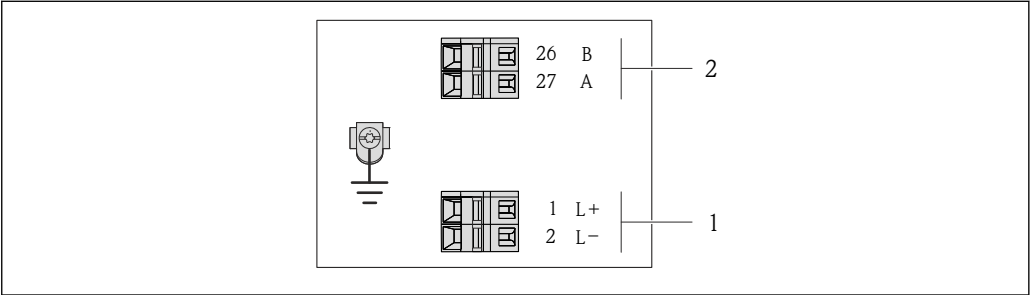

A0022716

 5 PROFIBUS DP terminal assignment

- 1 Power supply: DC 24 V
- 2 PROFIBUS DP


Order Code "Output"	Terminal number			
	Power supply		Output	
	2 (L-)	1 (L+)	26 (RxD/TxD-P)	27 (RxD/TxD-N)
Option L	DC 24 V		B	A
Order code for "Output": Option L: PROFIBUS DP, for use in non-hazardous areas and Zone 2/div. 2				

7.1.4 Pin assignment, device plug


PROFIBUS DP

 For use in the non-hazardous area and Zone 2/Div. 2.

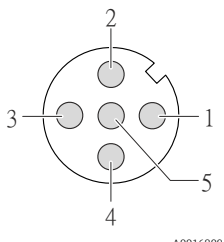

Device plug for supply voltage (device side)

 A0016809	Pin		Assignment
	1	L+	DC 24 V
	2		
	3		
	4	L-	DC 24 V
	5		Grounding/shielding
	Coding		Plug/socket
		A	Plug

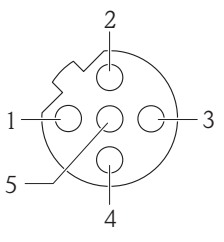Device plug for signal transmission (device side)

 A0016811	Pin		Assignment
	1		
	2	A	PROFIBUS DP
	3		
	4	B	PROFIBUS DP
	5		Grounding/shielding
	Coding		Plug/socket
		B	Socket

7.1.5 Preparing the measuring device

1. Remove dummy plug if present.
2. **NOTICE!** Insufficient sealing of the housing! Operational reliability of the measuring device could be compromised. Use suitable cable glands corresponding to the degree of protection.
If measuring device is delivered without cable glands:
Provide suitable cable gland for corresponding connecting cable (→  24).
3. If measuring device is delivered with cable glands:
Observe cable specification (→  24).

7.2 Connecting the measuring device

NOTICE


Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:


- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

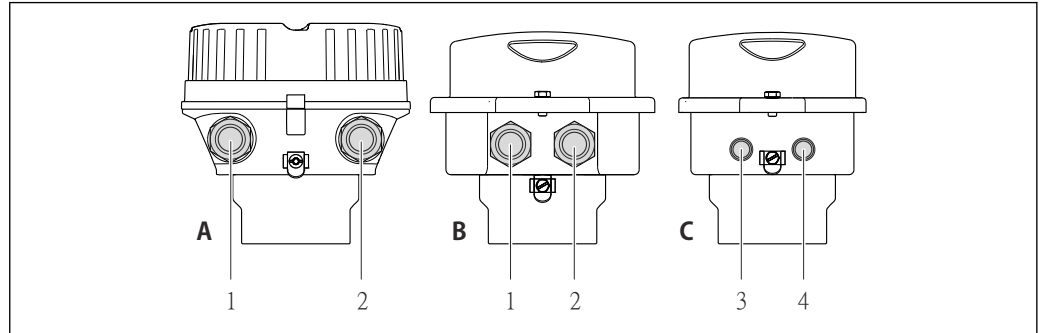

A0016924

6 Device versions and connection versions

- A Housing version: compact, aluminum coated
 B Housing version: compact, stainless
 1 Cable entry or device plug for signal transmission
 2 Cable entry or device plug for supply voltage
 C Housing version: ultra-compact, stainless:
 3 Device plug for signal transmission
 4 Device plug for supply voltage

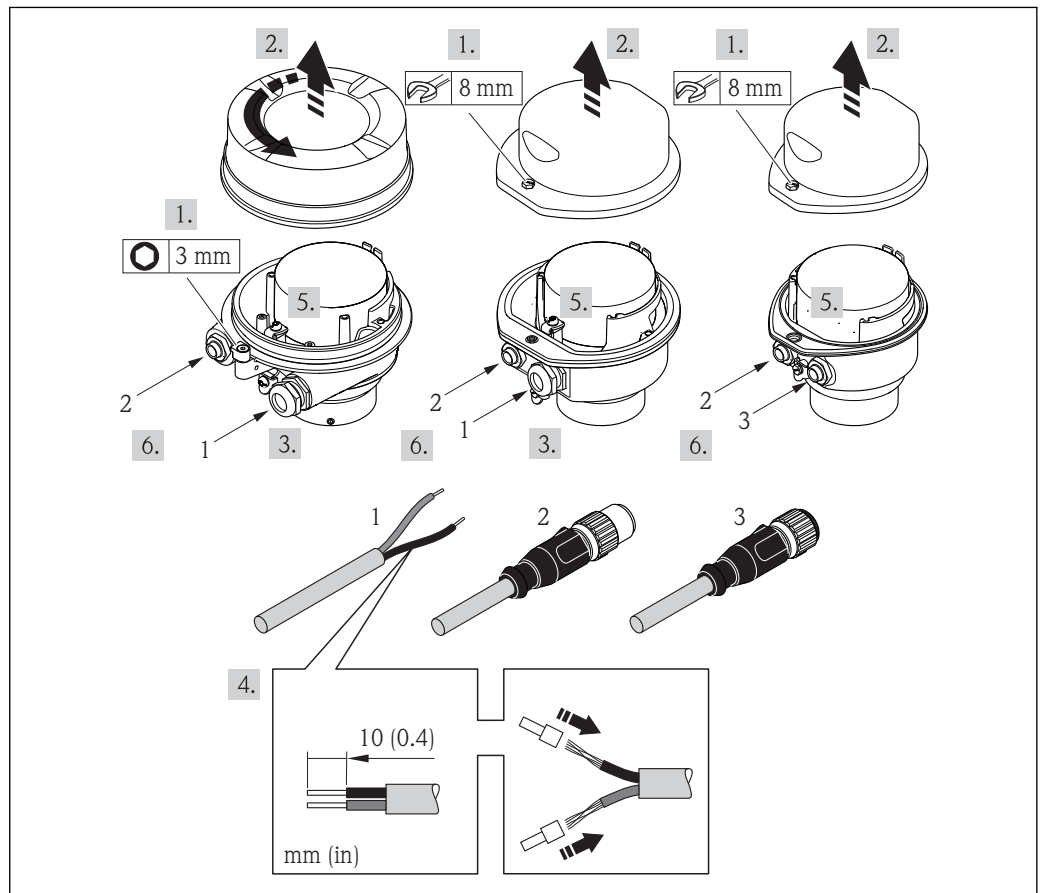

A0017844

7 Device versions with connection examples

- 1 Cable
 2 Device plug for signal transmission
 3 Device plug for supply voltage

For device version with device plug: follow step 6 only.


1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary (→ 115).
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit wire end ferrules.
5. Connect the cable in accordance with the terminal assignment or the device plug pin assignment .
6. Depending on the device version, tighten the cable glands or plug in the device plug and tighten.
7. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.

7.3 Special connection instructions

7.3.1 Connection examples

PROFIBUS DP

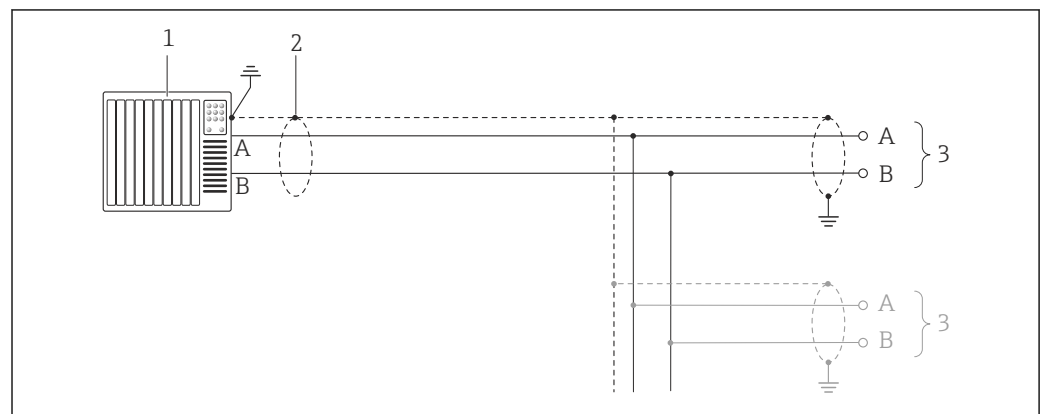

A0021429

8 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2

- 1 Control system (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications (→ 24)
- 3 Transmitter

i If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


7.4 Hardware settings

7.4.1 Setting the device address

PROFIBUS DP

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

Setting the address

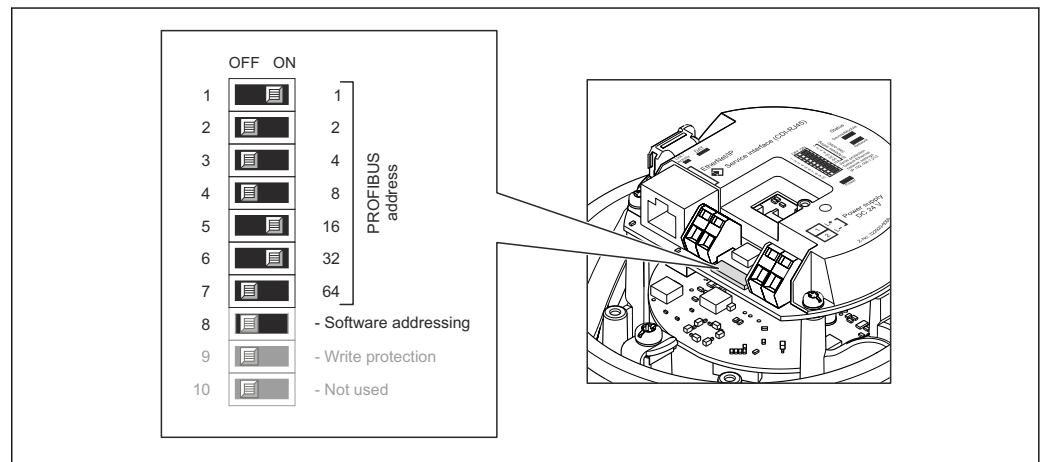

9 Addressing using DIP switches on the I/O electronics module

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary (→ 115).
3. Disable software addressing via DIP switch 8 (OFF).
4. Set the desired device address via the corresponding DIP switches.
 - Example (→ 9, 29): $1 + 16 + 32 = \text{device address } 49$
 - The device demands rebooting after 10 s. After rebooting, hardware addressing is enabled with the configured IP address.
5. Reverse the removal procedure to reassemble the transmitter.


7.4.2 Enabling the terminating resistor

PROFIBUS DP

To avoid incorrect communication transmission caused by impedance mismatch, terminate the PROFIBUS DP cable correctly at the start and end of the bus segment.

- If the device is operated with a baud rate of 1.5 Mbaud and under:
For the last transmitter on the bus, terminate via DIP switch 2 (bus termination) and DIP switch 1 and 3 (bus polarization). Setting: ON – ON – ON (→ 10, 30).
- For baud rates > 1.5 Mbaud:
Due to the capacitance load of the user and the line reflections generated as a result, ensure that an external bus terminator is used.

i It is generally advisable to use an external bus terminator as the entire segment can fail if a device that is terminated internally is defective.

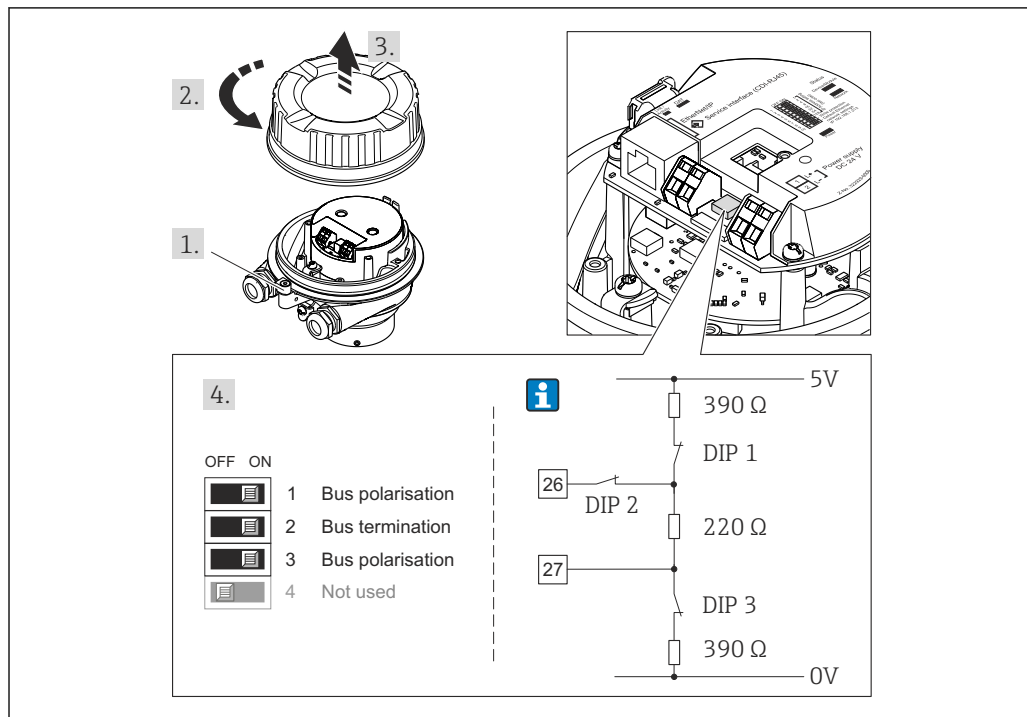

A0021274


10 Termination using DIP switches on the I/O electronics module (for baud rates < 1.5 Mbaud)

7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

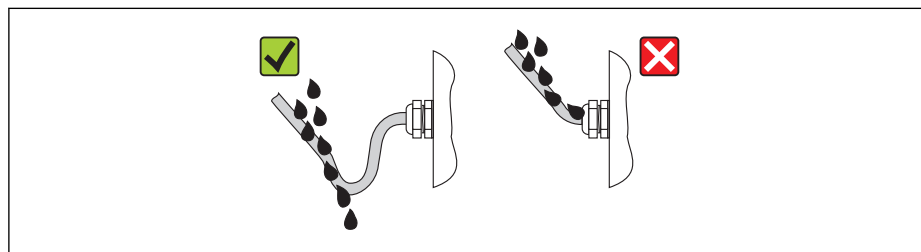


1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").



A0013960


5. Insert dummy plugs into unused cable entries.

7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables comply with the requirements (→  24)?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" (→  30) ?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate ?	<input type="checkbox"/>
If supply voltage is present, is the power LED on the electronics module of the transmitter lit green (→  11)?	<input type="checkbox"/>
Depending on the device version, is the securing clamp or fixing screw firmly tightened?	<input type="checkbox"/>

8 Operation options


8.1 Overview of operation options

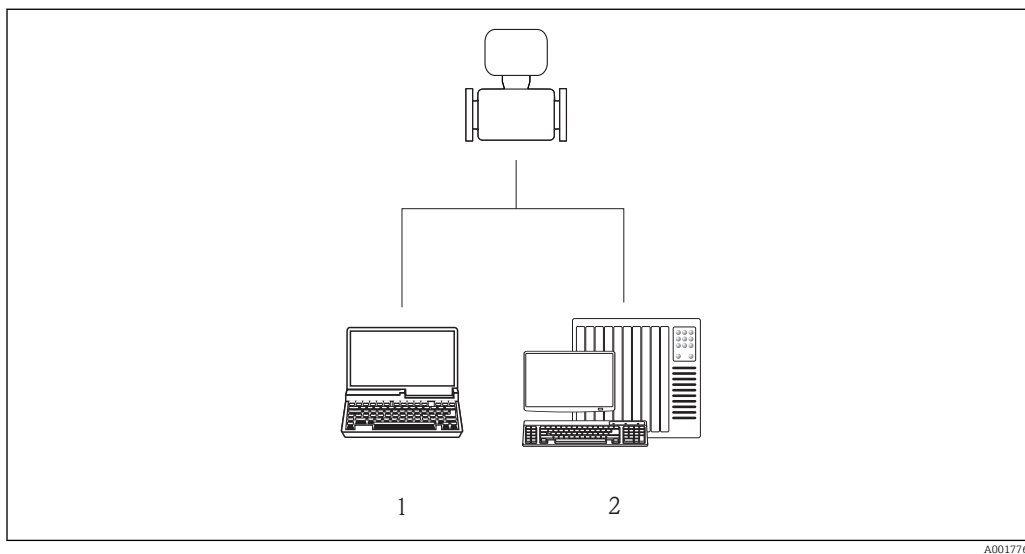



- 1 Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- 2 Automation system, e.g. "RSLogix" (Rockwell Automation) and work station for measuring device operation with Add-on Profile Level 3 for "RSLogix 5000" software (Rockwell Automation)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters

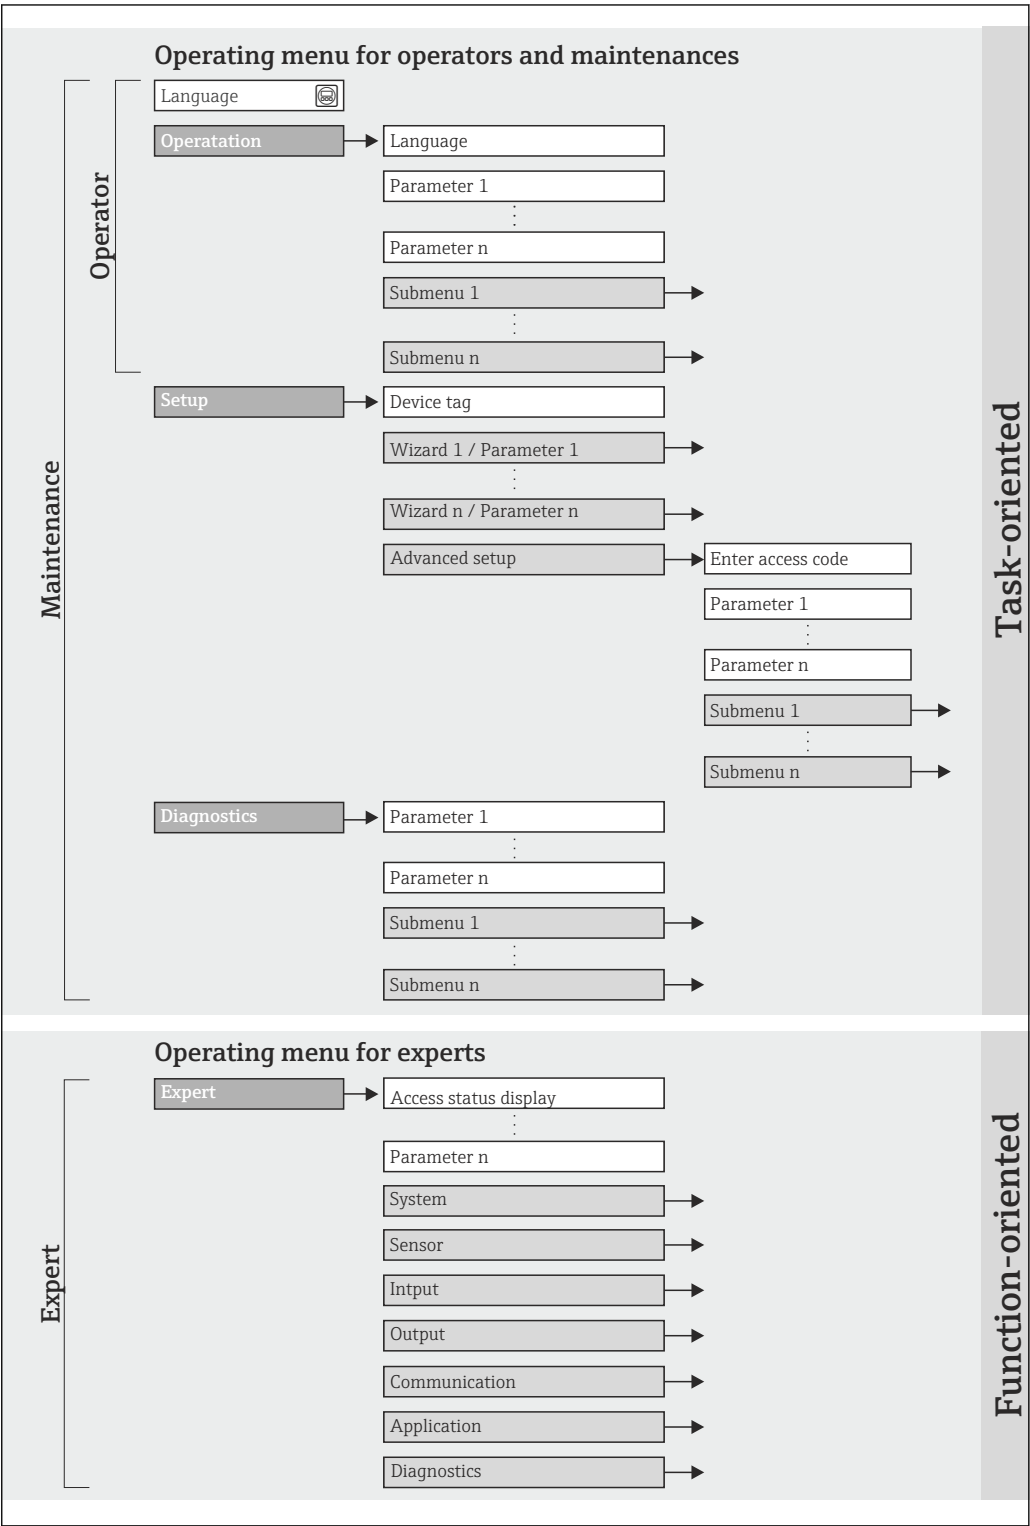

 11 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> Configuring the operational display Reading measured values 	Defining the operating language
Operation			<ul style="list-style-type: none"> Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: <ul style="list-style-type: none"> Configuration of the measurement Configuration of the inputs and outputs 	"Advanced setup" submenu: <ul style="list-style-type: none"> For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: <ul style="list-style-type: none"> Diagnostics and elimination of process and device errors Measured value simulation 	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> "Diagnostic list" submenu Contains up to 5 currently pending diagnostic messages. "Event logbook" submenu Contains up to 20 or 100 (order option "Extended HistoROM") event messages that have occurred. "Device information" submenu Contains information for identifying the device. "Measured values" submenu Contains all current measured values. "Heartbeat Technology" submenu The functionality of the device is checked on demand and the verification results are documented. "Simulation" submenu Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> "System" submenu Contains all higher-order device parameters that do not pertain either to measurement or the measured value communication. "Sensor" submenu Configuration of the measurement. "Application" submenu Configuration of the functions that go beyond the actual measurement (e.g. totalizer). "Diagnostics" submenu Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.


8.3 Access to the operating menu via the Web browser

8.3.1 Function range

Thanks to the integrated Web server the device can be operated and configured via a Web browser. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.


8.3.2 Prerequisites

Hardware

Connecting cable	Standard Ethernet cable with RJ45 connector
Computer	RJ45 interface
Measuring device:	Web server must be enabled; factory setting: ON  For information on enabling the Web server (→ 37)

Software of the computer

Web browsers supported	<ul style="list-style-type: none"> Microsoft Internet Explorer (min. 8.x) Mozilla Firefox Google chrome
Recommended operating systems	<ul style="list-style-type: none"> Windows XP Windows 7
User rights for TCP/IP settings	User rights required for TCP/IP settings (e.g. for changes to IP address, subnet mask)
Computer configuration	<ul style="list-style-type: none"> JavaScript is enabled If JavaScript cannot be enabled, enter <code>http://XXX.XXX.X.XXX/basic.html</code> in the address line of the Web browser, e.g. <code>http://192.168.1.212/basic.html</code>. A fully functional but simplified version of the operating menu structure starts in the Web browser.

 When installing a new firmware version:
To enable correct data display, clear the temporary memory (cache) of the Web browser under **Internet options**.

8.3.3 Establishing a connection

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)


IP address	192.168.1.XXX; for XXX all numerical values except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

1. Switch on the measuring device and connect to the computer via the cable (→ 39).
2. If a 2nd network card is not used: all the applications on the notebook should be closed, or all the applications that require the Internet or network, such as e-mail, SAP applications, Internet or Windows Explorer, i.e. close all open Internet browsers.
3. Configure the properties of the Internet protocol (TCP/IP) as defined in the table above.

Starting the Web browser

1. Start the Web browser on the computer.
2. Enter the IP address of the Web server in the address line of the Web browser: 192.168.1.212

The login page appears.

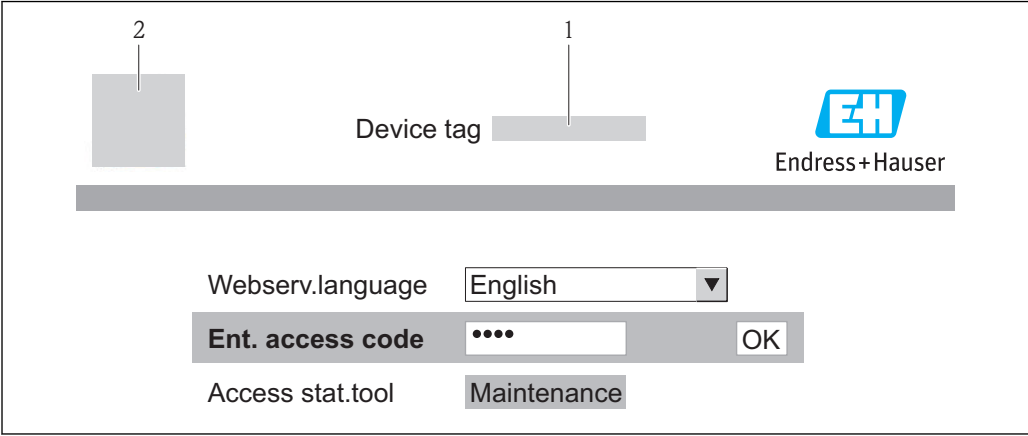

- 1 Device tag (→ 49)
- 2 Picture of device

If a login page does not appear, or if the page is incomplete (→ 70)


8.3.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the access code.
- 3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer (→ 64)
-------------	---

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

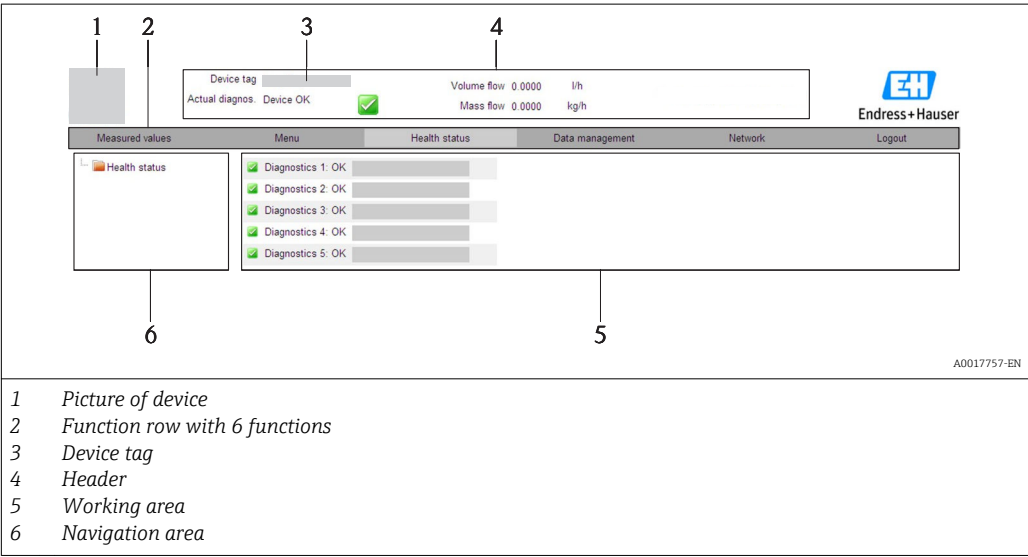

8.3.5 User interface



- 1 Picture of device
- 2 Function row with 6 functions
- 3 Device tag
- 4 Header
- 5 Working area
- 6 Navigation area

Header

The following information appears in the header:

- Device tag (→  49)
- Device status with status signal (→  72)
- Current measured values

Function row

Functions	Meaning
Measured values	The measured values of the device are displayed
Menu	Access to the operating menu structure of the device, same as for the operating tool
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	<ul style="list-style-type: none"> ■ Data exchange between PC and measuring device: <ul style="list-style-type: none"> – Upload the configuration from the device (XML format, create configuration back-up) – Save the configuration to the device (XML format, restore configuration) – Export the event list (.csv file) – Export parameter settings (.csv file, create documentation of the measuring point configuration) – Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package) ■ Upload the device driver for system integration from the device
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the device: <ul style="list-style-type: none"> ■ Network settings (e.g. IP address, MAC address) ■ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.3.6 Disabling the Web server

The Web server for the measuring device can enabled and disabled as required via the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	On

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:
Via "FieldCare" operating tool

8.3.7 Logging out


i Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.
↳ The home page with the Login box appears.
2. Close the Web browser.
3. Reset the modified properties of the Internet protocol (TCP/IP) if they are no longer needed (→ 35).

8.4 Access to the operating menu via the operating tool

8.4.1 Connecting the operating tool


Via PROFIBUS DP network

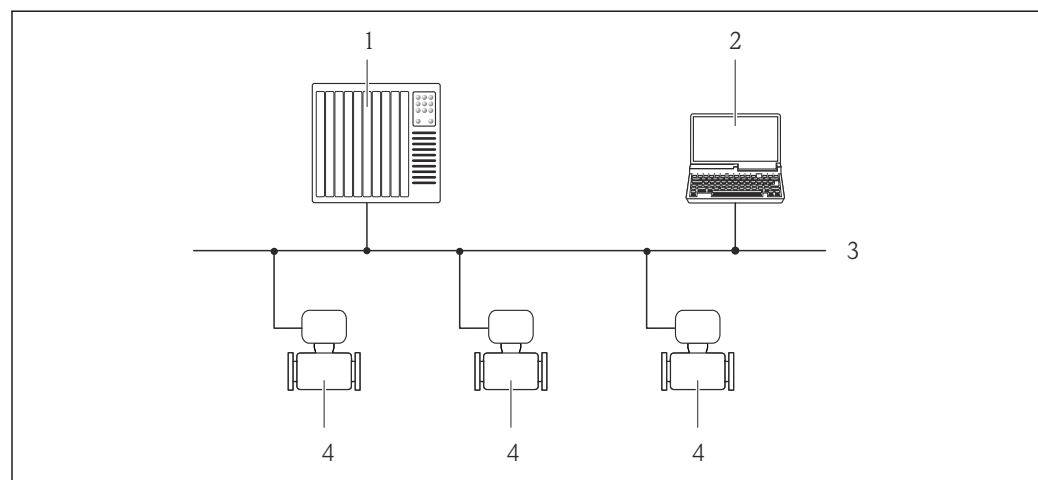

A0020903

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

Via service interface (CDI-RJ45)

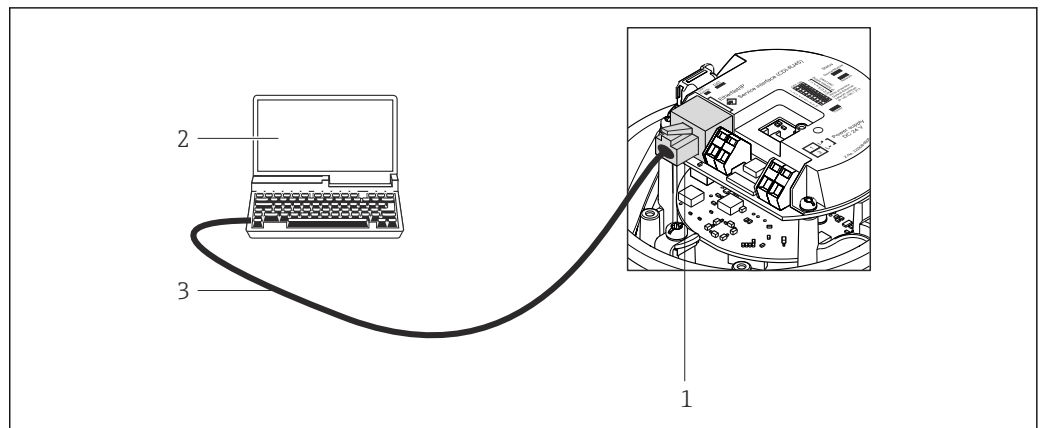

A0021270

 12 Connection for order code for "Output", option L: PROFIBUS DP


- 1 Service interface (CDI -RJ45) of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

8.4.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access takes place via:

Service interface CDI-RJ45 (→  39)


Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For details, see Operating Instructions BA00027S and BA00059S

Source for device description files

See data (→  41)

Establishing a connection


Via service interface (CDI-RJ45)

1. Start FieldCare and launch the project.
2. In the network: Add a device.
 - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
 - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.

6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known .
7. Establish the online connection to the device.

 For details, see Operating Instructions BA00027S and BA00059S

User interface

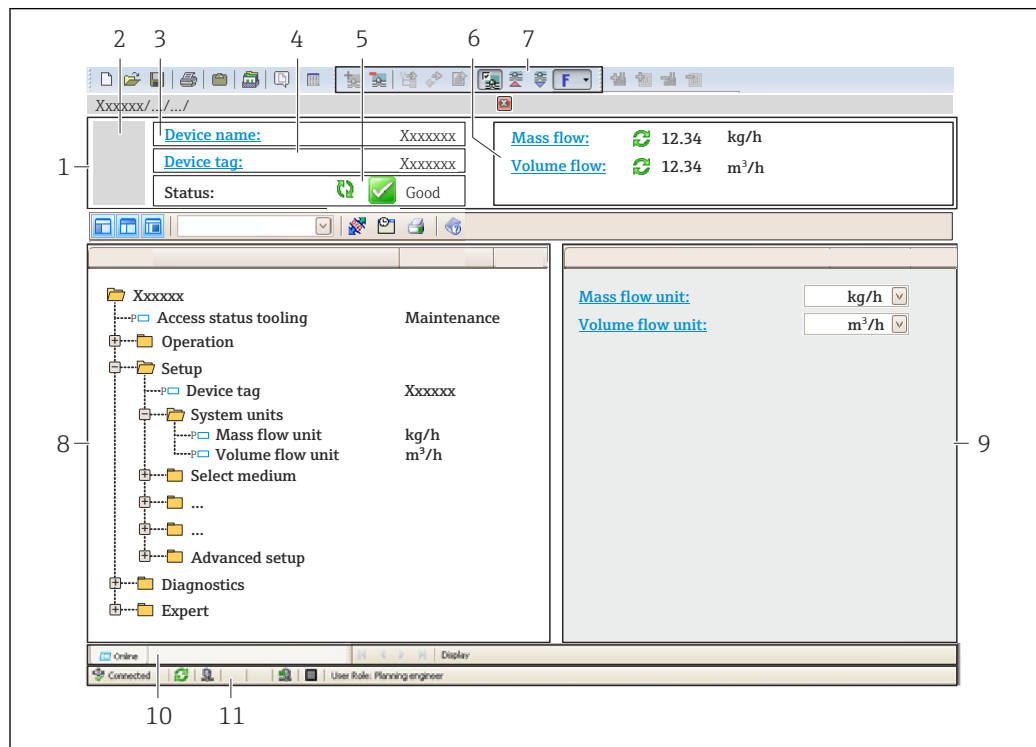


A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag (→ 49)
- 5 Status area with status signal (→ 72)
- 6 Display area for current measured values (→ 66)
- 7 Event list with additional functions such as save/load, events list and document creation
- 8 Navigation area with operating menu structure
- 9 Operating range
- 10 Range of action
- 11 Status area

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	<ul style="list-style-type: none"> On the title page of the Operating instructions On transmitter nameplate (→  13) Parameter firmware version Diagnostics → Device info → Firmware version
Release date of firmware version	10.2014	---
Manufacturer ID	0x11	Manufacturer ID parameter Diagnostics → Device info → Manufacturer ID
Device type ID	0x1561	Device type parameter Diagnostics → Device info → Device type
Profile version	3.02	---

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

The suitable device description file for the operating tool is listed in the table below, along with information on where the file can be acquired.

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions
FieldCare	<ul style="list-style-type: none"> www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.0 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking two different GSD versions are possible with Profile 3.0 and higher.




- Before configuring, the user must decide which GSD should be used to operate the system.
- The setting can be changed via a Class 2 master.

9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS DP	0x1561	EH3x1561.gsd

The fact that the manufacturer-specific GSD should be used is specified in the **Ident number selector** parameter by selecting the **Manufacturer** option.

 Where to acquire the manufacturer-specific GSD:
www.endress.com → Download Area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels
0x9740	<ul style="list-style-type: none"> 1 Analog Input 1 Totalizer 	<ul style="list-style-type: none"> Channel Analog Input: volume flow Channel totalizer: volume flow
0x9741	<ul style="list-style-type: none"> 2 Analog Input 1 Totalizer 	<ul style="list-style-type: none"> Channel Analog Input 1: volume flow Channel Analog Input 2: mass flow Channel totalizer: volume flow
0x9742	<ul style="list-style-type: none"> 3 Analog Input 1 Totalizer 	<ul style="list-style-type: none"> Channel Analog Input 1: volume flow Channel Analog Input 2: mass flow Channel Analog Input 3: corrected volume flow Channel totalizer: volume flow

The Profile GSD that is to be used is specified in the **Ident number selector** parameter by selecting the **Profile 0x9740** option, **Profile 0x9741** option or **Profile 0x9742** option.

9.3 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.3.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system etc.

Measuring device				Control system
Transducer Block	Analog Input block 1 to 8	(→ ⓘ 43)	Output value AI	→
			Output value TOTAL	→
	Totalizer block 1 to 3	(→ ⓘ 44)	Controller SETTOT	←
			Configuration MODETOT	←
	Analog Output block 1 to 3	(→ ⓘ 46)	Input values AO	←
	Discrete Input block 1 to 2	(→ ⓘ 47)	Output values DI	→
	Discrete Output block 1 to 3	(→ ⓘ 47)	Input values DO	←
				PROFIBUS DP

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The

device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
1 to 8	AI	Analog Input block 1 to 8
9	TOTAL or SETTOT_TOTAL or SETTOT_MODETOT_TOTAL	Totalizer block 1
10		Totalizer block 2
11		Totalizer block 3
12 to 14	AO	Analog Output block 1 to 3
15 to 16	DI	Discrete Input block 1 to 2
17 to 19	DO	Discrete Output block 1 to 3

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. Any resulting gaps between the configured modules must be assigned to the EMPTY_MODULE.

9.3.2 Description of the modules



The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Eight Analog Input blocks are available (slot 1 to 8).

Selection: input variable

The input variable can be specified using the CHANNEL parameter.

CHANNEL	Input variable
32961	Mass flow
33122	Volume flow
33093	Corrected volume flow
708	Flow velocity
32850	Density
33092	Reference density
33101	Temperature
1042	Electronics temperature
901	Target fluid mass flow ¹⁾
793	Carrier mass flow ¹⁾

CHANNEL	Input variable
794	Concentration ¹⁾
263	Carrier tube temperature ²⁾

- 1) Only available with the "Concentration" application package
 2) Only available with the "Heartbeat Verification" application package

Factory setting

Function block	Factory setting
AI 1	Mass flow
AI 2	Volume flow
AI 3	Corrected volume flow
AI 4	Density
AI 5	Reference density
AI 6	Temperature
AI 7	Off
AI 8	Off

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

Via the TOTAL module, a selected totalizer value along with the status is cyclically transmitted to a PROFIBUS master (Class 1). The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three totalizer blocks are available (slot 9 to 11).

Selection: totalizer value

The totalizer value can be specified using the CHANNEL parameter.

CHANNEL	Input variable
32961	Mass flow
33122	Volume flow
33093	Corrected volume flow
901	Target fluid mass flow ¹⁾
793	Carrier mass flow ¹⁾

- 1) Only available with the "Concentration" application package

Factory setting

Function block	Factory setting: TOTAL
Totalizer 1, 2 and 3	Mass flow

*Data structure**Input data of TOTAL*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit the totalizer value along with the status to the PROFIBUS master.

Three totalizer blocks are available (slot 9 to 11).

Selection: control totalizer

CHANNEL	Value SETTOT	Control totalizer
33310	0	Totalize
33046	1	Resetting
33308	2	Adopt totalizer initial setting

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

*Data structure**Output data of SETTOT*

Byte 1
Control variable 1

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit the totalizer value along with the status to the PROFIBUS master.

Three totalizer blocks are available (slot 9 to 11).

Selection: totalizer configuration

CHANNEL	MODETOT value	Totalizer configuration
33306	0	Balancing
33028	1	Balance the positive flow
32976	2	Balance the negative flow
32928	3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

*Data structure**Output data of SETTOT and MODETOT*

Byte 1	Byte 2
Control variable 1: SETTOT	Control variable 2: MODETOT

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

AO module (Analog Output)

Transmit a compensation value from the PROFIBUS master (Class 1) to the measuring device.

Via the AO module, a compensation value along with the status is cyclically transmitted from the PROFIBUS master (Class 1) to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Three Analog Output blocks are available (slot 12 to 14).

Assigned compensation values

A compensation value is permanently assigned to the individual Analog Output blocks.

CHANNEL	Function block	Compensation value
306	AO 1	External pressure ¹⁾
307	AO 2	External temperature ¹⁾
488	AO 3	External reference density

1) The compensation variables must be transmitted to the device in the SI basic unit



The selection is made via: "Expert" menu → Sensor → External compensation

*Data structure**Output data of Analog Output*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 15 to 16).

Selection: device function

The device function can be specified using the CHANNEL parameter.

CHANNEL	Device function	Factory setting: state (meaning)
894	Empty pipe detection	<ul style="list-style-type: none"> ■ 0 (device function not active) ■ 1 (device function active)
895	Low flow cut off	
1430	Status verification ¹⁾	

1) Only available with the "Heartbeat Verification" application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

*Data structure**Input data of Discrete Input*

Byte 1	Byte 2
Discrete	Status

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Three Discrete Output blocks are available (slot 17 to 19).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

CHANNEL	Function block	Device function	Values: control (meaning)
891	DO 1	Flow override	<ul style="list-style-type: none">0 (disable device function)1 (enable device function)
890	DO 2	Zero point adjustment	
1429	DO 3	Start verification ¹⁾	

1) Only available with the "Heartbeat Verification" application package

Data structure

Output data of Discrete Output

Byte 1	Byte 2
Discrete	Status



EMPTY_MODULE module

This module is used to assign empty spaces arising from modules not being used in the slots (→  42).




10 Commissioning

10.1 Function check

Before commissioning the device, make sure that the post-installation and post-connection checks have been performed.







- "Post-installation check" checklist (→  22)
- "Post-connection check" checklist (→  31)

10.2 Establishing a connection via FieldCare

- For FieldCare connection (→  38)
- For establishing a connection via FieldCare (→  39)
- For FieldCare user interface (→  40)

10.3 Configuring the measuring device



The **Setup** menu with its submenus contains all the parameters needed for standard operation.

 50), 'System units', 'Medium selection', 'Communication' (→  53), 'Analog inputs' (→  54), 'Low flow cut off' (→  56), 'Partially filled pipe detection' (→  57), and 'Advanced setup' (→  58)." data-bbox="313 424 960 725"/>

10.3.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

 The number of characters displayed depends on the characters used.

 For information on the tag name in the "FieldCare" operating tool (→  40)

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promass 100 DP

10.3.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Structure of the submenu

System units

→

Mass flow unit

Mass unit

Volume flow unit

Volume unit

Corrected volume flow unit

Corrected volume unit

Density unit

Reference density unit

Temperature unit

Pressure unit

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	Select mass unit. <i>Result</i> The selected unit is taken from: Mass flow unit parameter	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> l/h gal/min (us)
Volume unit	Select volume unit. Result The selected unit is taken from: Volume flow unit parameter	Unit choose list	Country-specific: <ul style="list-style-type: none"> l gal (us)

Parameter	Description	Selection	Factory setting
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> NI/h Sft³/h
Corrected volume unit	Select corrected volume unit. <i>Result</i> The selected unit is taken from: Corrected volume flow unit parameter	Unit choose list	Country-specific: <ul style="list-style-type: none"> NI Sft³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³
Reference density unit	Select reference density unit.	Unit choose list	kg/NI
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Reference temperature Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> °C (Celsius) °F (Fahrenheit)
Pressure unit	Select process pressure unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> bar psi

10.3.3 Selecting and setting the medium

The **Medium selection** submenu contains parameters that have to be configured for selecting and setting the medium.

Navigation

"Setup" menu → Select medium

► Medium selection	
Select medium	(→ ⓘ 52)
Select gas type	(→ ⓘ 52)
Reference sound velocity	(→ ⓘ 52)
Temperature coefficient sound velocity	(→ ⓘ 52)
Pressure compensation	(→ ⓘ 52)
Pressure value	(→ ⓘ 52)
External pressure	(→ ⓘ 52)

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select medium	–	Select medium type.	Gas	Liquid
Select gas type	The following option is selected in the Medium selection parameter: Gas	Select measured gas type.	Gas type choose list	Methane CH ₄
Reference sound velocity	The following option is selected in the Select gas type parameter: Others	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	0 m/s
Temperature coefficient sound velocity	The following option is selected in the Select gas type parameter: Others	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number	0 (m/s)/K
Pressure compensation	The following option is selected in the Medium selection parameter: Gas	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value 	Off
Pressure value	The following option is selected in the Pressure compensation parameter: Fixed value	Enter process pressure to be used for pressure correction.	Positive floating-point number	0 bar
External pressure	The following option is selected in the Pressure compensation parameter: External value		Positive floating-point number	0 bar

10.3.4 **Configuring the communication interface**

The **"Communication"** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation
"Setup" menu → Communication

► Communication

Device address

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126

10.3.5 Configuring the analog inputs

The **Analog inputs** submenu guides you systematically to the individual **Analog input 1 to 4** submenu. From here you get to the parameters of the individual analog input.

Navigation
"Setup" menu → Analog inputs

▶ Analog inputs

▶ Analog input 1 to 8


Channel

PV filter time

Fail safe type

Fail safe value

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Channel	Select the process variable.  Depending on the device version, not all options are available in this parameter. The selection can vary depending on the sensor, e.g. viscosity is available only with the Promass I.	<ul style="list-style-type: none">■ Mass flow■ Volume flow■ Corrected volume flow■ Target mass flow■ Carrier mass flow■ Density■ Reference density■ Concentration■ Dynamic viscosity■ Kinematic viscosity■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Carrier pipe temperature■ Electronic temperature■ Oscillation frequency 0■ Oscillation frequency 1■ Oscillation amplitude 0■ Oscillation amplitude 1■ Frequency fluctuation 0■ Frequency fluctuation 1■ Oscillation damping 0■ Oscillation damping 1■ Tube damping fluctuation 0■ Tube damping fluctuation 1■ Signal asymmetry■ Exciter current 0■ Exciter current 1■ Sensor integrity	Mass flow
PV filter time	Specify a time to suppress signal peaks. During the specified time the totalizer does not respond to an erratic increase in the process variable.	Positive floating-point number	0

Parameter	Description	Selection / User entry	Factory setting
Fail safe type	Select the failure mode.	<ul style="list-style-type: none">■ Fail safe value■ Fallback value■ Off	Off
Fail safe value	Specify the value to be output when an error occurs.	Signed floating-point number	0

10.3.6 Configuring the low flow cut off

The **Low flow cut off** submenu contains parameters that must be configured for the configuration of low flow cut off.

Navigation

"Setup" menu → Low flow cut off

► Low flow cut off	
Assign process variable	(→ ⓘ 56)
On value low flow cutoff	(→ ⓘ 56)
Off value low flow cutoff	(→ ⓘ 56)
Pressure shock suppression	(→ ⓘ 56)

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none"> Off Mass flow Volume flow Corrected volume flow 	Mass flow
On value low flow cutoff	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow 	Enter on value for low flow cut off.	Positive floating-point number	For liquids: depends on country and nominal diameter
Off value low flow cutoff	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow 	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> Mass flow Volume flow Corrected volume flow 	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

10.3.7 Configuring the partial filled pipe detection

The **Partially filled pipe detection** submenu contains parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu → Partially filled pipe detection

► Partially filled pipe detection	
Assign process variable	(→ 57)
Low value partial filled pipe detection	(→ 57)
High value partial filled pipe detection	(→ 57)
Response time part. filled pipe detect.	(→ 57)

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for partially filled pipe detection.	<ul style="list-style-type: none"> ■ Off ■ Density ■ Reference density 	Off
Low value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Country-dependent: <ul style="list-style-type: none"> ■ 0.2 kg/l ■ 12.5 lb/ft³
High value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Country-dependent: <ul style="list-style-type: none"> ■ 6 kg/l ■ 374.6 lb/ft³
Response time part. filled pipe detect.	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

10.4 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

The number of submenus can vary depending on the device version, e.g. viscosity is available only with the Promass I.

Navigation

"Setup" menu → Advanced setup

▶ Advanced setup

Enter access code

▶ Calculated values

(→ ⓘ 58)

▶ Sensor adjustment

(→ ⓘ 59)

▶ Totalizer 1 to 3

(→ ⓘ 60)

▶ Display

(→ ⓘ 61)

▶ Viscosity

▶ Concentration

▶ Heartbeat setup

▶ Administration

10.4.1 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu → Advanced setup → Calculated values

Structure of the submenu

Calculated values

→

Corrected volume flow calculation

→

Corrected volume flow calculation

External reference density

Fixed reference density

Reference temperature

Linear expansion coefficient

Square expansion coefficient

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Corrected volume flow calculation	–	Select reference density for calculating the corrected volume flow.	<ul style="list-style-type: none"> ■ Fixed reference density ■ Calculated reference density ■ Reference density by API table 53 ■ External reference density 	Calculated reference density
External reference density	–	Shows external reference density.	Floating point number with sign	0 kg/Nl
Fixed reference density	The following option is selected in the Corrected volume flow calculation parameter: Fixed reference density	Enter fixed value for reference density.	Positive floating-point number	1 kg/Nl
Reference temperature	The following option is selected in the Corrected volume flow calculation parameter: Calculated reference density	Enter reference temperature for calculating the reference density.	–273.15 to 99 999 °C	20 °C
Linear expansion coefficient	The following option is selected in the Corrected volume flow calculation parameter: Calculated reference density	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Square expansion coefficient	–	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0


10.4.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

Structure of the submenu

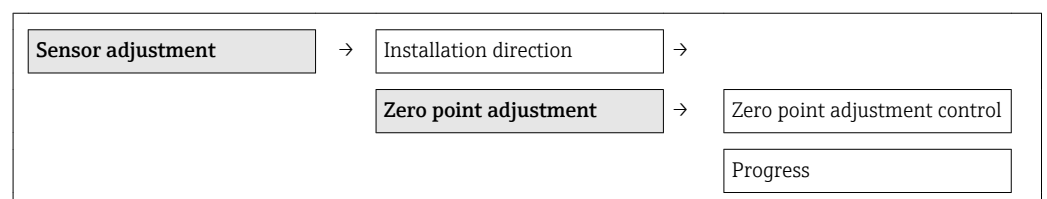

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<ul style="list-style-type: none"> ■ Flow in arrow direction ■ Flow against arrow direction 	Flow in arrow direction
Zero point adjustment control	Start zero point adjustment.	<ul style="list-style-type: none"> ■ Cancel ■ Busy ■ Zero point adjust failure ■ Start 	Cancel
Progress	Shows the progress of the process.	0 to 100 %	0 %

10.4.3 Configuring the totalizer

In the "Totalizer 1 to 3" submenu the individual totalizers can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to 3

▶ Totalizer 1 to 3

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Totalizer operation mode	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total 	Net flow total
Assign process variable	Assignment of a process variable to the totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow 	Mass flow
Unit totalizer		Unit choose list	kg
Control Totalizer 1 to 3	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold 	Totalize
Totalizer operation mode		<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value 	Net flow total
Failure mode		<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	Actual value

10.4.4 Carrying out additional display configurations

In the **"Display"** submenu you can set all the parameters involved in the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Display language

Display interval

Display damping


Header


Header text

Separator

Backlight

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Format display	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	Select the measured value that is shown on the local display.  Depending on the device version, not all options are available in this parameter. The selection can vary depending on the sensor, e.g. viscosity is available only with the Promass I.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow ■ Density ■ Reference density ■ Concentration ■ Dynamic viscosity ■ Kinematic viscosity ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation frequency 1 ■ Oscillation amplitude 0 ■ Oscillation amplitude 1 ■ Frequency fluctuation 0 ■ Frequency fluctuation 1 ■ Oscillation damping 0 ■ Oscillation damping 1 ■ Tube damping fluctuation 0 ■ Tube damping fluctuation 1 ■ Signal asymmetry ■ Exciter current 0 ■ Exciter current 1 ■ Sensor integrity ■ None ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Mass flow
0% bargraph value 1	Enter 0% value for bar graph display.	Signed floating-point number	0 kg/h
100% bargraph value 1	Enter 100% value for bar graph display.	Signed floating-point number	2.5 kg/h
Decimal places 1	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 2 display	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
Decimal places 2	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 3 display	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
0% bargraph value 3	Enter 0% value for bar graph display.	Signed floating-point number	0
100% bargraph value 3	Enter 100% value for bar graph display.	Signed floating-point number	0

Parameter	Description	Selection / User entry	Factory setting
Decimal places 3	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 4 display	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
Decimal places 4	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Display language	Set display language.	<ul style="list-style-type: none"> ■ English ■ Deutsch ■ Français ■ Español ■ Italiano ■ Nederlands ■ Portuguesa ■ Polski ■ русский язык (Russian) ■ Svenska ■ Türkçe ■ 中文 (Chinese) ■ 日本語 (Japanese) ■ 한국어 (Korean) ■ العربية (Arabic) ■ Bahasa Indonesia ■ ภาษาไทย (Thai) ■ tiếng Việt (Vietnamese) ■ čeština (Czech) 	English (alternatively, the ordered language is preset in the device)
Display interval	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	Select header contents on local display.	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	Enter display header text.		-----
Separator	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . ■ , 	.
Backlight	Switch the local display backlight on and off.  Only for device version with onsite display SD03 (touch control)	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Enable

10.5 Simulation

The **"Simulation" submenu** enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation

► Simulation

Assign simulation process variable


Value process variable

Simulation device alarm

Diagnostic event category



Simulation diagnostic event

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated. <div> Depending on the device version, not all options are available in this parameter. The selection can vary depending on the sensor, e.g. viscosity is available only with the Promass I.</div>	<div><div>■ Off</div><div>■ Mass flow</div><div>■ Volume flow</div><div>■ Corrected volume flow</div><div>■ Density</div><div>■ Reference density</div><div>■ Temperature</div><div>■ Dynamic viscosity</div><div>■ Kinematic viscosity</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Concentration</div><div>■ Target mass flow</div><div>■ Carrier mass flow</div></div>	Off
Value process variable	A process variable is selected in the Assign simulation process variable parameter.	Enter the simulation value for the selected process variable.	Signed floating-point number	0
Simulation device alarm	–	Switch the device alarm on and off.	<div><div>■ Off</div><div>■ On</div></div>	Off

10.6 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code for Web browser (→  64)
- Write protection via write protection switch (→  65)

10.6.1 Write protection via access code

With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

Structure of the submenu

Define access code

 →

Define access code

	Confirm access code
--	---------------------

Defining the access code via the Web browser

1. Navigate to the **Enter access code** parameter.
2. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ↳ The Web browser switches to the login page.

i If no action is performed for 10 minutes, the Web browser automatically returns to the login page.


i The user role with which the user is currently logged on via the Web browser is indicated by the **Access status tooling** parameter. Navigation path: Operation → Access status tooling

10.6.2 Write protection via write protection switch

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:

- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer

The parameter values are now read only and cannot be edited any more:
Via service interface (CDI-RJ45)

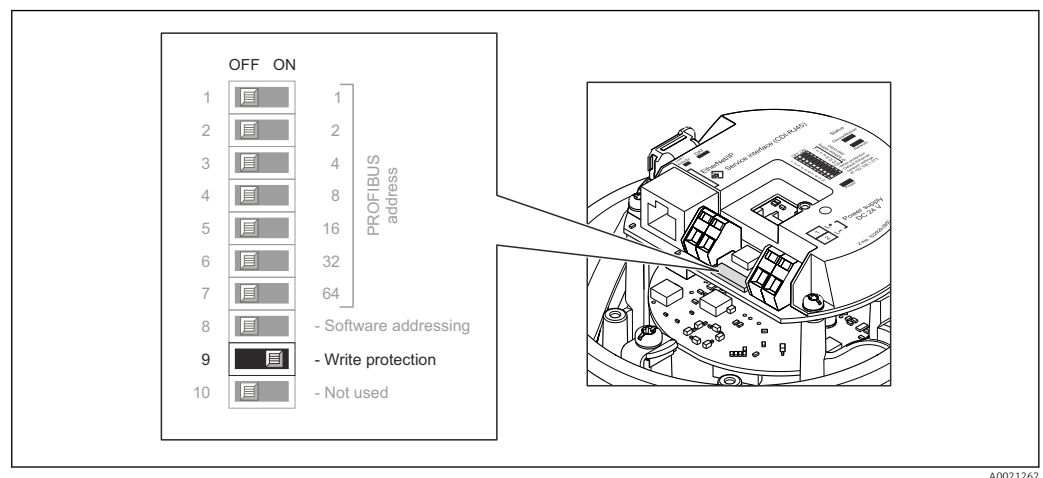

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary (→ 115).
3. Setting the write protection switch on the main electronics module to the ON position enables the hardware write protection. Setting the write protection switch on the main electronics module to the OFF position (factory setting) disables the hardware write protection.
 - ↳ If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option(→ 66); if disabled, the **Locking status** parameter does not display any option (→ 66)
4. Reverse the removal procedure to reassemble the transmitter.

11 Operation

11.1 Reading device locking status

The write protection types that are currently active can be determined using the **Locking status** parameter.

Navigation

"Operation" menu → Locking status

Function scope of "Locking status" parameter

Options	Description
Hardware locked	The write protection switch (DIP switch) for hardware locking is activated on the I/O electronic module. This prevents write access to the parameters (→ 65).
Temporarily locked	Due to internal processing in the device (e.g. up-/downloading of data, reset), write access to the parameters is blocked for a short time. Once the internal processing has been completed, the parameters can be changed once again.

11.2 Reading measured values

Using the **Measured values** submenu , it is possible to read all the measured values.

"Diagnostics" menu → Measured values

11.2.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

Process variables

Mass flow

Volume flow

Corrected volume flow

Density

Reference density

Temperature

Pressure value

Parameter overview with brief description

Parameter	Description	User interface
Mass flow	Displays the mass flow currently measured.	Signed floating-point number
Volume flow	Displays the calculated volume flow.	Signed floating-point number
Corrected volume flow	Displays the corrected volume flow currently calculated.	Signed floating-point number

Parameter	Description	User interface
Density	Displays the density currently measured.	Signed floating-point number
Reference density	Displays the reference density currently calculated.	Signed floating-point number
Temperature	Displays the temperature currently measured.	Signed floating-point number
Pressure value	Displays either a fixed or external pressure value.	Signed floating-point number

11.2.2 Totalizer

The **"Totalizer"** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer

Totalizer value 1 to 3

Totalizer overflow 1 to 3

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	–	Assignment of a process variable to the totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow 	Mass flow
Totalizer value #	In the Assign process variable parameter one of the following options is selected: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	Displays the current totalizer counter value.	Signed floating-point number	0 kg
Totalizer status #	–	Displays the current totalizer status.	<ul style="list-style-type: none"> ■ Good ■ Uncertain ■ Bad 	Good
Totalizer status (Hex) #	–	Displays the current status value (hex) of the totalizer.	0 to 255	128

11.2.3 Output values

The **"Output values"** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

► Output values

Terminal voltage 1

Pulse output

Output frequency

Switch status

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Pulse output	Displays the value currently measured for the pulse output.	Positive floating-point number	0 Hz
Output frequency	Displays the value currently measured for the frequency output.	0.0 to 1 250.0 Hz	0.0 Hz
Switch status	Displays the current switch output status.	<div>■ Open</div> <div>■ Closed</div>	Open

11.3 Adapting the measuring device to the process conditions

- The following are available for this purpose:
- Basic settings using the **Setup** menu(→ ⓘ 49)
 - Advanced settings using the **Advanced setup** submenu(→ ⓘ 58)

11.4 Performing a totalizer reset

In the **Operation** submenu the totalizers are reset:
Control Totalizer 1 to 3

Function scope of "Control Totalizer " parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to 3 parameter.

Navigation
"Operation" menu → Operation

► Totalizer handling

Control Totalizer 1 to 3

Preset value 1 to 3

Reset all totalizers

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Control Totalizer 1 to 3	Control totalizer value.	<ul style="list-style-type: none">■ Totalize■ Reset + hold■ Preset + hold■ Reset + totalize■ Preset + totalize	Totalize
Preset value #	Specify start value for totalizer.	Signed floating-point number	0 kg

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For output signals

Problem	Possible causes	Remedy
Green power LED on the main electronics module of the transmitter is dark	Supply voltage does not match that specified on the nameplate.	Apply the correct supply voltage (→ 27).
Device measures incorrectly.	Configuration error or device is operated outside the application.	1. Check and correct parameter configuration. 2. Observe limit values specified in the "Technical Data".

For access

Problem	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position (→ 65).
No connection via PROFIBUS DP	PROFIBUS DP bus cable connected incorrectly	Check the terminal assignment .
No connection via PROFIBUS DP	PROFIBUS DP cable incorrectly terminated	Check terminating resistor (→ 29).
Not connecting to Web server	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) (→ 35). 2. Check the network settings with the IT manager.
Not connecting to Web server	Web server disabled	Via the "FieldCare" operating tool check whether the Web server of the measuring device is enabled and enable it if necessary (→ 37).
No or incomplete display of contents in the Web browser	<ul style="list-style-type: none"> ■ JavaScript not enabled ■ JavaScript cannot be enabled 	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/basic.html as the IP address.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
Web browser frozen and operation no longer possible	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version (→ 35). 2. Clear the Web browser cache and restart the Web browser.
Content of Web browser incomplete or difficult to read	Unsuitable view settings.	Change the font size/display ratio of the Web browser.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter


Various light emitting diodes (LEDs) on the main electronics module of the transmitter provide information on device status.

LED	Color	Meaning
Power	Off	Supply voltage is off or too low
	Green	Supply voltage is ok
Alarm	Off	Device status is ok
	Flashing red	A device error of diagnostic behavior "Warning" has occurred
	Red	<ul style="list-style-type: none"> A device error of diagnostic behavior "Alarm" has occurred Boot loader is active
Communication	Flashing white	PROFIBUS DP communication is active

12.3 Diagnostic information in FieldCare

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

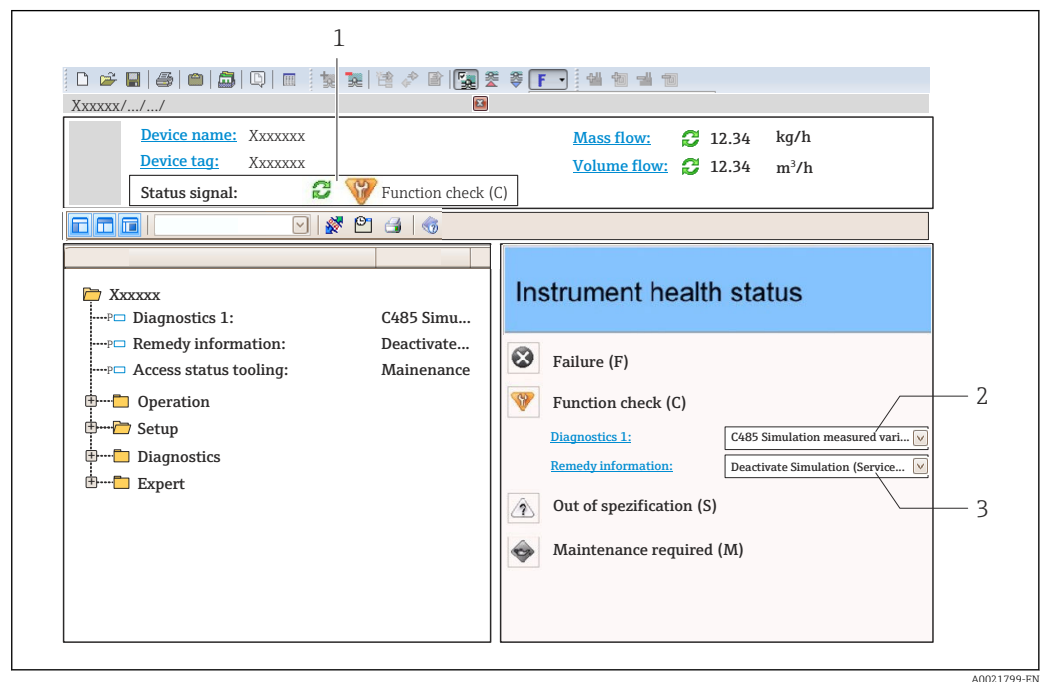





- 1 Status area with status signal
- 2 Diagnostic information (→ 72)
- 3 Remedial measures with Service ID


i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameters (→ 94)
- Via submenu (→ 94)

Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
 A0017271	Failure A device error has occurred. The measured value is no longer valid.
 A0017278	Function check The device is in service mode (e.g. during a simulation).
 A0017277	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
 A0017276	Maintenance required Maintenance is required. The measured value is still valid.

 The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

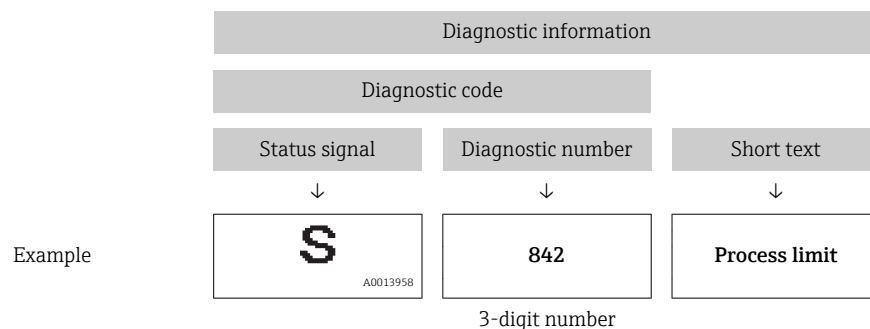

12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.


The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.

12.4 Adapting the diagnostic information

12.4.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu.

 Diagnostic behavior in accordance with Specification PROFIBUS Profile 3.02, Condensed Status.

"Expert" menu → System → Diagnostic handling → Diagnostic behavior


Available diagnostic behaviors


The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	Measurement is interrupted. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	Measurement is resumed. Measured value output via PROFIBUS and totalizers are not affected. A diagnostics message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS Profile Specification 3.02 and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

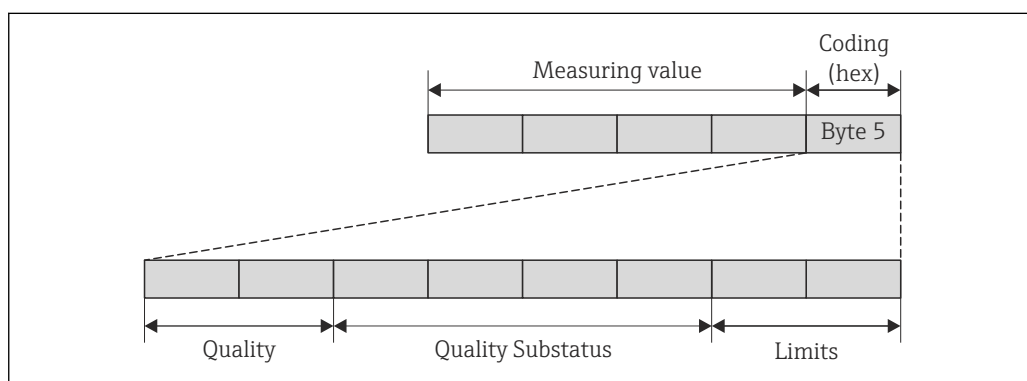





 13 Structure of the coding byte

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte.

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
(→  74)
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
(→  74)
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
(→  74)
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
(→  75)

Depending on the group in which diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor (diagnostic no.: 000 to 199)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the electronics (diagnostic no.: 200 to 399)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the configuration (diagnostic no.: 400 to 599)



Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the process (diagnostic no.: 800 to 999)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

12.5 Overview of diagnostic information

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapt the diagnostic information (→  73)

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of sensor				
022	Sensor temperature	1.Change main electronic module 2.Change sensor	F	Alarm
046	Sensor limit exceeded	1. Inspect sensor 2. Check process condition	S	Warning ¹⁾
062	Sensor connection	1.Change main electronic module 2.Change sensor	F	Alarm
082	Data storage	1. Check module connections 2. Contact service	F	Alarm
083	Memory content	1. Restart device 2. Contact service	F	Alarm
140	Sensor signal	1.Check or change main electronics 2.Change sensor	S	Alarm ¹⁾
144	Measuring error too high	1. Check or change sensor 2. Check process conditions	F	Alarm ¹⁾
190	Special event 1	Contact service	F	Alarm
191	Special event 5	Contact service	F	Alarm
192	Special event 9	Contact service	F	Alarm ¹⁾
Diagnostic of electronic				
201	Device failure	1. Restart device 2. Contact service	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check electronic modules 2. Change electronic modules	F	Alarm ¹⁾
262	Module connection	1. Check module connections 2. Change main electronics	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	Change electronic	F	Alarm
274	Main electronic failure	Change electronic	S	Warning ¹⁾
283	Memory content	1. Reset device 2. Contact service	F	Alarm
311	Electronic failure	1. Reset device 2. Contact service	F	Alarm
311	Electronic failure	1. Do not reset device 2. Contact service	M	Warning
382	Data storage	1. Insert DAT module 2. Change DAT module	F	Alarm
383	Memory content	1. Restart device 2. Check or change DAT module 3. Contact service	F	Alarm
390	Special event 2	Contact service	F	Alarm
391	Special event 6	Contact service	F	Alarm
392	Special event 10	Contact service	F	Alarm ¹⁾
Diagnostic of configuration				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
453	Flow override	Deactivate flow override	C	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	C	Alarm
485	Simulation measured variable	Deactivate simulation	C	Warning
495	Simulation diagnostic event	Deactivate simulation	C	Warning
497	Simulation block output	Deactivate simulation	C	Warning
537	Configuration	1. Check IP addresses in network 2. Change IP address	F	Warning
590	Special event 3	Contact service	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
591	Special event 7	Contact service	F	Alarm
592	Special event 11	Contact service	F	Alarm ¹⁾
Diagnostic of process				
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	F	Alarm
830	Sensor temperature too high	Reduce ambient temp. around the sensor housing	S	Warning
831	Sensor temperature too low	Increase ambient temp. around the sensor housing	S	Warning
832	Electronic temperature too high	Reduce ambient temperature	S	Warning ¹⁾
833	Electronic temperature too low	Increase ambient temperature	S	Warning ¹⁾
834	Process temperature too high	Reduce process temperature	S	Warning ¹⁾
835	Process temperature too low	Increase process temperature	S	Warning ¹⁾
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration	S	Warning
843	Process limit	Check process conditions	S	Warning
862	Partly filled pipe	1. Check for gas in process 2. Adjust detection limits	S	Warning
882	Input signal	1. Check input configuration 2. Check external device or process conditions	F	Alarm
910	Tubes not oscillating	1. Check electronic 2. Inspect sensor	F	Alarm
912	Medium inhomogeneous	1. Check process cond. 2. Increase system pressure	S	Warning ¹⁾
912	Inhomogeneous	1. Check process cond. 2. Increase system pressure	S	Warning ¹⁾
913	Medium unsuitable	1. Check process conditions 2. Check electronic modules or sensor	S	Warning ¹⁾
944	Monitoring failed	Check process conditions for Heartbeat Monitoring	S	Warning ¹⁾
948	Tube damping too high	Check process conditions	S	Warning
990	Special event 4	Contact service	F	Alarm
991	Special event 8	Contact service	F	Alarm
992	Special event 12	Contact service	F	Alarm ¹⁾

1) Diagnostic status is changeable.

12.5.1 Diagnostics for the sensor


Diagnostic no. 022

Message: F022 Sensor temperature

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<div>▪ Change main electronics module.</div> <div>▪ Change sensor.</div>		

Diagnostic no. 044

Message: *044 Sensor drift

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Maintenance demanded	
Coding (hex):	0xA8	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
<ul style="list-style-type: none">■ Check or change main electronics module.■ Change sensor.		

Diagnostic no. 046

Message: *046 Sensor limit

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Volume flow
Quality Substatus:	Maintenance demanded	
Coding (hex):	0xA8	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→ ⓘ 73)		
Warning (factory setting)		
Remedial measures		
<ul style="list-style-type: none">■ Check sensor.■ Check process conditions.		

Diagnostic no. 062

Message: F062 Sensor connection

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	

Diagnostic behavior:	Alarm
Remedial measures	
<ul style="list-style-type: none"> Change main electronics module. Change sensor. 	


Diagnostic no. 082**Message: F082 Data storage**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">■ Check module connections.■ Contact service.		

Diagnostic no. 083**Message: F083 Memory content**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">Restart the device.Contact service.		

Diagnostic no. 144**Message: *144 Measuring error too high**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior, configurable (→  73)		
Alarm (factory setting)		
Remedial measures		
<ul style="list-style-type: none">■ Check or change sensor.■ Check process conditions.		


Diagnostic no. 190 **Message: F190 Special event 1**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		

Diagnostic no. 191 **Message: F191 Special event 5**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		

Diagnostic no. 192 **Message: *192 Special event 9**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior, configurable (→  73)		
Alarm (factory setting)		
Remedial measures		
Contact service.		

12.5.2 Diagnostics for the electronics

Diagnostic no. 201 **Message: F201 Device failure**


Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	

Category (NE107):	F (Failure)
Diagnostic behavior:	Alarm
Remedial measures	
<ul style="list-style-type: none"> Restart the device. Contact service. 	

Diagnostic no. 242**Message: F242 Software incompatible**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">▪ Check software.▪ Flash or change main electronic module.		

Diagnostic no. 252**Message: *252 Modules incompatible**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior, configurable (→  73)		
Alarm (factory setting)		
Remedial measures		
<ul style="list-style-type: none">▪ Check electronic modules.▪ Change electronics modules.		

Diagnostic no. 262**Message: F262 Module connection**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">▪ Check module connections.▪ Change main electronics.		

Diagnostic no. 270

Message: F270 Main electronic failure

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
Change main electronics.		

Diagnostic no. 271

Message: F271 Main electronic failure

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">Restart the device.Change main electronics module.		

Diagnostic no. 272

Message: F272 Main electronic failure

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<div>▪ Restart the device.</div> <div>▪ Contact service.</div>		


Diagnostic no. 273

Message: F273 Main electronic failure

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	

Category (NE107):	F (Failure)
Diagnostic behavior:	Alarm
Remedial measures	
Replace electronics.	

Diagnostic no. 274**Message: *274 Main electronic failure**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Mass flow■ Corrected volume flow■ Volume flow
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Replace electronics.		

Diagnostic no. 283**Message: F283 Memory content**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<div>▪ Reset device.</div> <div>▪ Contact service.</div>		

Diagnostic no. 311**Message: F311 Electronic failure**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<div>▪ Reset device.</div> <div>▪ Contact service.</div>		

Diagnostic no. 311

Message: M311 Electronic failure

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	M (Maintenance)	
Diagnostic behavior:	Warning	
Remedial measures		
<ul style="list-style-type: none">■ Do not reset device.■ Contact service.		

Diagnostic no. 382

Message: F382 Data storage

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">■ Insert DAT module.■ Replace DAT module.		

Diagnostic no. 383

Message: F383 Memory content

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<div>▪ Restart the device.</div> <div>▪ Check or replace DAT module.</div> <div>▪ Contact service.</div>		

Diagnostic no. 390

Message: F390 Special event 2


Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	

Coding (hex):	0x24
Category (NE107):	F (Failure)
Diagnostic behavior:	Alarm
Remedial measures	
Contact service.	

Diagnostic no. 391**Message: F391 Special event 6**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		

Diagnostic no. 392**Message: *392 Special event 10**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior, configurable (→  73)		
Alarm (factory setting)		
Remedial measures		
Contact service.		

12.5.3 Diagnostics for the configuration

Diagnostic no. 410**Message: F410 Data transfer**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		

- Check connection.
- Retry data transfer.

Diagnostic no. 411

Message: C411 Up-/download active

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Function check	
Coding (hex):	0x3C	
Category (NE107):	C (Check)	
Diagnostic behavior:	Warning	
Remedial measures		
Up-/download active: Wait until the up-/download is complete.		

Diagnostic no. 411

Message: C411 Up-/download active

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Function check	
Coding (hex):	0x3C	
Category (NE107):	C (Check)	
Diagnostic behavior:	Warning	
Remedial measures		
Up-/download active: Wait until the up-/download is complete.		

Diagnostic no. 437

Message: F437 Configuration incompatible

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<div>■ Restart the device.</div> <div>■ Contact service.</div>		

Diagnostic no. 438

Message: M438 Dataset

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none"> ■ Density ■ Partially filled pipe detection

Quality Substatus:	Maintenance demanded	<ul style="list-style-type: none">■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Coding (hex):	0x68	
Category (NE107):	M (Maintenance)	
Diagnostic behavior:	Warning	
Remedial measures		
<ul style="list-style-type: none">■ Check data set file.■ Check device configuration.■ Up- and download new configuration.		

Diagnostic no. 453**Message: C453 Flow override**

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none"> ■ Density ■ Partially filled pipe detection ■ Low flow cut off ■ Mass flow ■ Status value pulse/freq./switch output ■ Reference density ■ Corrected volume flow ■ Temperature ■ Volume flow
Quality Substatus:	Function check	
Coding (hex):	0xBC	
Category (NE107):	C (Check)	
Diagnostic behavior:	Warning	
Remedial measures		
Deactivate flow override.		

Diagnostic no. 484**Message: C484 Simulation failsafe mode**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none"> ■ Density ■ Partially filled pipe detection ■ Low flow cut off ■ Mass flow ■ Status value pulse/freq./switch output ■ Reference density ■ Corrected volume flow ■ Temperature ■ Volume flow
Quality Substatus:	Function check	
Coding (hex):	0x3C	
Category (NE107):	C (Check)	
Diagnostic behavior:	Alarm	
Remedial measures		
Deactivate simulation.		

Diagnostic no. 485**Message: C485 Simulation process variable**

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none"> ■ Density ■ Partially filled pipe detection ■ Low flow cut off ■ Mass flow ■ Status value pulse/freq./switch output ■ Reference density ■ Corrected volume flow ■ Temperature ■ Volume flow
Quality Substatus:	Function check	
Coding (hex):	0xBC	
Category (NE107):	C (Check)	
Diagnostic behavior:	Warning	
Remedial measures		
Deactivate simulation.		


Diagnostic no. 590 **Message: F590 Special event 3**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	M (Maintenance)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		

Diagnostic no. 591 **Message: F591 Special event 7**

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	M (Maintenance)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		

Diagnostic no. 592 **Message: *592 Special event 11**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Function check	
Coding (hex):	0x3C	
Category (NE107):	F (Failure)	
Diagnostic behavior, configurable (→  73)		
Alarm (factory setting)		
Remedial measures		
Contact service.		

12.5.4 Diagnostics for the process

Diagnostic no. 825 **Message: S825 Operating temperature**

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	All the measured variables available
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	

Diagnostic behavior:	Warning
Remedial measures	
<ul style="list-style-type: none"> ■ Check ambient temperature. ■ Check process temperature. 	


Diagnostic no. 825

Message: F825 Operating temperature

Measured value status		Measured variables concerned
Quality:	BAD	All the measured variables available
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x28	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">▪ Check ambient temperature.▪ Check process temperature.		


Diagnostic no. 830

Message: *830 Ambient temperature

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Reduce the ambient temp. around the sensor housing.		

Diagnostic no. 831


Message: *831 Ambient temperature

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Reduce the ambient temp. around the sensor housing.		


Diagnostic no. 832

Message: *832 Ambient temperature too high


Measured value status	Measured variables concerned
-----------------------	------------------------------

Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Reduce ambient temperature.		


Diagnostic no. 833**Message: *833 Ambient temperature too low**

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Volume flow
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Increase ambient temperature.		

Diagnostic no. 834**Message: *834 Process temperature too high**

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Reduce process temperature.		

Diagnostic no. 835**Message: *835 Process temperature too low**

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		

Increase process temperature.


Diagnostic no. 842**Message: S842 Process limit**

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	ok	
Coding (hex):	0x80	
Category (NE107):	S (Out of specification)	
Diagnostic behavior:	Warning	
Remedial measures		
Low flow cut off active: Check settings for low flow cut off.		

Diagnostic no. 843**Message: S843 Process limit**

Measured value status		Measured variables concerned
Quality:	GOOD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	ok	
Coding (hex):	0x80	
Category (NE107):	S (Out of specification)	
Diagnostic behavior:	Warning	
Remedial measures		
Check process conditions.		

Diagnostic no. 862**Message: *862 Partly filled pipe**

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
<div>■ Check for gas in process.</div> <div>■ Check detection limits.</div>		

Diagnostic no. 882**Message: S882 Input signal**

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none"> ■ Density ■ Mass flow ■ Reference density ■ Corrected volume flow
Quality Substatus:	Maintenance alarm, more diagnosis available	

Coding (hex):	0x24	■ Volume flow
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
■ Check input configuration.		
■ Check pressure sensor or process conditions.		


Diagnostic no. 910

Message: F910 Measuring tube does not vibrate

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Maintenance alarm	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
<ul style="list-style-type: none">■ Check electronics.■ Check sensor.		

Diagnostic no. 912

Message: *912 Inhomogeneous

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Partially filled pipe detection■ Low flow cut off■ Mass flow■ Status value pulse/freq./switch output■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
<ul style="list-style-type: none">■ Check process conditions.■ Increase system pressure.		


Diagnostic no. 913

Message: *913 Inhomogeneous

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→ ⓘ 73)		
Warning (factory setting)		
Remedial measures		
<ul style="list-style-type: none">■ Check process conditions.■ Check electronic modules or sensor.		

Diagnostic no. 944

Message: *944 Monitoring failed

Measured value status		Measured variables concerned
Quality:	UNCERTAIN	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x78	
Category (NE107):	S (Out of specification)	
Diagnostic behavior, configurable (→  73)		
Warning (factory setting)		
Remedial measures		
Check process conditions for Heartbeat Monitoring.		

Diagnostic no. 990

Message: *990 Special event 4

Measured value status		Measured variables concerned
Quality:	BAD	–
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		


Diagnostic no. 991

Message: *991 Special event 8

Measured value status		Measured variables concerned
Quality:	BAD	–
Quality Substatus:	Maintenance alarm, more diagnosis available	
Coding (hex):	0x24	
Category (NE107):	F (Failure)	
Diagnostic behavior:	Alarm	
Remedial measures		
Contact service.		

Diagnostic no. 992





Message: *992 Special event 12

Measured value status		Measured variables concerned
Quality:	BAD	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
Quality Substatus:	Process related, no maintenance	
Coding (hex):	0x28	
Category (NE107):	F (Failure)	
Diagnostic behavior, configurable (→  73)		

Alarm (factory setting)	
Remedial measures	
Contact service.	


12.6 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.


-  To call up the measures to rectify a diagnostic event:
 - Via Web browser
 - Via "FieldCare" operating tool (→  72)
-  Other pending diagnostic events can be displayed in the **Diagnostic list** submenu(→  94)

Navigation
"Diagnostics" menu

Structure of the submenu

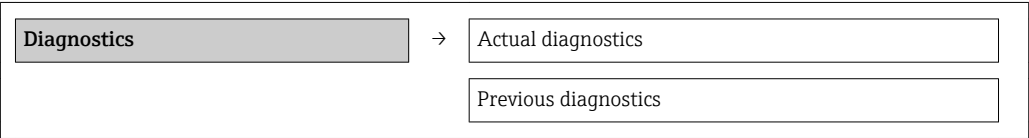



Parameter overview with brief description

Parameter	Prerequisite	Description	User interface	Factory setting
Actual diagnostics	1 diagnostic event has occurred.	Displays the current diagnostic event along with the diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.	–
Previous diagnostics	2 diagnostic events have already occurred.	Displays the diagnostic event that occurred prior to the current diagnostic event along with the diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.	–

12.7 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path
Diagnostics menu→**Diagnostic list** submenu

-  To call up the measures to rectify a diagnostic event:
 - Via Web browser
 - Via "FieldCare" operating tool (→  72)


12.8 Event logbook

12.8.1 Event history



A chronological overview of the event messages that have occurred is provided in the events list which contains a maximum of 20 message entries. This list can be displayed via FieldCare if necessary.

Navigation path




Event list: **F** → Tool box → Additional functions

 For information on the event list, see the FieldCare user interface

This event history includes entries for:

- Diagnostic events (→  75)
- Information events (→  95)


In addition to the operation time of its occurrence and possible troubleshooting measures, each event is also assigned a symbol that indicates whether the event has occurred or is ended:


- Diagnostic event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Events list

 To call up the measures to rectify a diagnostic event:

- Via Web browser
- Via "FieldCare" operating tool (→  72)

 For filtering the displayed event messages (→  95)

12.8.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.8.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1089	Power on


Info number	Info name
I1090	Configuration reset
I1091	Configuration changed
I1110	Write protection switch changed
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1361	Wrong web server login
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1446	Device verification active
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off
I1451	Monitoring on
I1457	Failed:Measured error verification
I1459	Failed: I/O module verification
I1460	Failed: Sensor integrity verification
I1461	Failed: Sensor verification
I1462	Failed:Sensor electronic module verific.

12.9 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

"Setup" menu → Advanced setup → Administration

Function scope of "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
History reset	Every parameter is reset to its factory setting.

12.10 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation

"Diagnostics" menu → Device information

► Device information

Device tag

Serial number

Firmware version

Device name

Order code

Extended order code 1

Extended order code 2

Extended order code 3

ENP version

PROFIBUS ident number

Status PROFIBUS Master Config

IP address

Subnet mask

Default gateway

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /)	Promass 100 DP
Serial number	Displays the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	79AFF16000
Firmware version	Displays the device firmware version installed.	Character string with the following format: xx.yy.zz	01.01
Device name	Displays the name of the transmitter.	Character string composed of letters, numbers and certain punctuation marks.	Promass 100 DP
Order code	Displays the device order code.	Character string composed of letters, numbers and certain punctuation marks	–
Extended order code 1	Displays the 1st part of the extended order code.	Character string	–
Extended order code 2	Displays the 2nd part of the extended order code.	Character string	–
Extended order code 3	Displays the 3rd part of the extended order code.	Character string	–
ENP version	Displays the version of the electronic nameplate.	Character string in the format xx.yy.zz	2.02.00
PROFIBUS ident number		0 to 65 535	5 473
Status PROFIBUS Master Config		<ul style="list-style-type: none"> ■ Active ■ Not active 	Not active
IP address	Displays the IP address of the Web server of the measuring device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0

12.11 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
09.2013	01.00.00	Option 78	Original firmware	Operating Instructions	–
10.2014	01.01.zz	Option 69	<ul style="list-style-type: none"> ■ Integration of optional local display ■ New unit "Beer Barrel (BBL)" ■ Simulation of diagnostic events 	Operating Instructions	BA01348D/06/EN/01.14



Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .



For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.



The manufacturer's information is available:

- In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download
- Specify the following details:
 - Product root, e.g. 8E1B
 - Text search: Manufacturer's information
 - Search range: documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.



For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter in the **Device information** submenu (→ 97).

14.3 Endress+Hauser services



Contact your Endress+Hauser Sales Center for information on services and spare parts.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at

<http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.
2. **WARNING!** Danger to persons from process conditions. Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> ■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections. ■ Graphic illustration of the calculation results <p>Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project.</p> <p>Applicator is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: https://wapps.endress.com/applicator ■ On CD-ROM for local PC installation.
W@M	<p>Life cycle management for your plant</p> <p>W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle.</p> <p>The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.</p> <p>W@M is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: www.endress.com/lifecyclemanagement ■ On CD-ROM for local PC installation.
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>

16 Technical data


16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	<p>The device consists of a transmitter and a sensor.</p> <p>One device version is available: compact version - transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the device (→  11)</p>

16.3 Input

Measured variable	<p>Direct measured variables</p> <ul style="list-style-type: none"> ■ Mass flow ■ Density ■ Temperature <p>Calculated measured variables</p> <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Reference density
-------------------	---

Measuring range	Measuring ranges for liquids			
	DN		Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$	
	[mm]	[in]	[kg/h]	[lb/min]
	8	$\frac{3}{8}$	0 to 2 000	0 to 73.50
	15	$\frac{1}{2}$	0 to 6 500	0 to 238.9
	25	1	0 to 18 000	0 to 661.5

Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

$\dot{m}_{\max(G)}$	Maximum full scale value for gas [kg/h]
$\dot{m}_{\max(F)}$	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$
ρ_G	Gas density in [kg/m ³] at operating conditions

	DN		x [kg/m ³]
	[mm]	[in]	
	8	$\frac{3}{8}$	85
	15	$\frac{1}{2}$	110
	25	1	125

Recommended measuring range

"Flow limit" section (→  112)

Operable flow range	Over 1000 : 1. Flow rates above the preset full scale value are not overridden by the electronics unit, with the result that the totalizer values are registered correctly.
---------------------	--

16.4 Output

Output signal	PROFIBUS DP				
	<table> <tr> <td>Signal encoding</td><td>NRZ code</td></tr> <tr> <td>Data transfer</td><td>9.6 kBaud...12 MBaud</td></tr> </table>	Signal encoding	NRZ code	Data transfer	9.6 kBaud...12 MBaud
Signal encoding	NRZ code				
Data transfer	9.6 kBaud...12 MBaud				

Signal on alarm	Depending on the interface, failure information is displayed as follows:
-----------------	--

PROFIBUS DP

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
---------------------------	---

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
PROFIBUS DP
- Via service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation The following connections are galvanically isolated from each other:

- Outputs
- Power supply

Protocol-specific data

PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x1561
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under: <ul style="list-style-type: none"> ■ www.endress.com On the product page for the device: Documents/Software → Device drivers ■ www.profibus.org
Output values (from measuring device to automation system)	Analog input 1 to 8 <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow ■ Density ■ Reference density ■ Concentration ■ Temperature ■ Carrier pipe temperature ■ Electronics temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Frequency fluctuation ■ Oscillation damping ■ Tube damping fluctuation ■ Signal asymmetry ■ Exciter current Digital input 1 to 2 <ul style="list-style-type: none"> ■ Monitoring of partially filled measuring tube ■ Low flow cut off Totalizer 1 to 3 <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow
Input values (from automation system to measuring device)	Analog output 1 to 3 (fixed assignment) <ul style="list-style-type: none"> ■ Pressure ■ Temperature ■ Reference density Digital output 1 to 3 (fixed assignment) <ul style="list-style-type: none"> ■ Digital output 1: switch positive zero return on/off ■ Digital output 2: perform zero point adjustment ■ Digital output 3: switch switch output on/off Totalizer 1 to 3 <ul style="list-style-type: none"> ■ Totalize ■ Reset and hold ■ Preset and hold ■ Stop ■ Operating mode configuration: <ul style="list-style-type: none"> – Net flow total – Forward flow total – Reverse flow total

Supported functions	<ul style="list-style-type: none"> ■ Identification & Maintenance Simplest device identification on the part of the control system and nameplate ■ PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download ■ Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul style="list-style-type: none"> ■ DIP switches on the I/O electronics module ■ Via operating tools (e.g. FieldCare)

16.5 Power supply

Terminal assignment (→  25)

Pin assignment, device plug (→  26)

Supply voltage **Transmitter**
 For device version with all communication types except Modbus RS485 intrinsically safe:
 DC 20 to 30 V
 The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

Power consumption **Transmitter**


Order code for "Output"	Maximum power consumption
Option L: PROFIBUS DP	3.5 W

Current consumption **Transmitter**

Order Code "Output"	Maximum Current consumption	Maximum switch-on current
Option L: PROFIBUS DP	145 mA	18 A (<0.125 ms)

Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection (→  26)



Potential equalization No special measures for potential equalization are required.

Terminals **Transmitter**
 Spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Cable entries	<ul style="list-style-type: none"> ■ Cable gland: M20 × 1.5 with cable $\phi 6$ to 12 mm (0.24 to 0.47 in) ■ Thread for cable entry: <ul style="list-style-type: none"> – NPT ½" – G ½" – M20
---------------	--

Cable specification	(→  24)
---------------------	--

16.6 Performance characteristics

Reference operating conditions	<ul style="list-style-type: none"> ■ Error limits based on ISO 11631 ■ Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi) ■ Specifications as per calibration protocol ■ Accuracy based on accredited calibration rigs that are traced to ISO 17025. <p> To obtain measured errors, use the <i>Applicator</i> sizing tool (→  118)</p>
--------------------------------	--

Maximum measured error	o.r. = of reading; 1 g/cm ³ = 1 kg/l; T = medium temperature
------------------------	---

Base accuracy

Mass flow and volume flow (liquids)

±0.15 % o.r.

Mass flow (gases)

±0.75 % o.r.

 Design fundamentals (→  110)

Density (liquids)

- Reference conditions: ±0.0005 g/cm³
- Standard density calibration: ±0.02 g/cm³
(valid over the entire temperature range and density range)

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	$\frac{3}{8}$	0.20	0.007
15	$\frac{1}{2}$	0.65	0.024
25	1	1.80	0.066

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6 500	650	325	130	65	13
25	18 000	1 800	900	360	180	36

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
$\frac{3}{8}$	73.50	7.350	3.675	1.470	0.735	0.147
$\frac{1}{2}$	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature**Base repeatability****Mass flow and volume flow (liquids)** $\pm 0.075 \%$ o.r.**Mass flow (gases)** $\pm 0.35 \%$ o.r.Design fundamentals (\rightarrow 110)**Density (liquids)** $\pm 0.00025 \text{ g/cm}^3$ **Temperature** $\pm 0.25 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C}$ ($\pm 0.45 \text{ }^\circ\text{F} \pm 0.0015 \cdot (T-32) \text{ }^\circ\text{F}$)

Response time

The response time depends on the configuration (damping).


Influence of medium temperature

Mass flow

When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the sensor is $\pm 0.0003 \%$ of the full scale value/ $^\circ\text{C}$ ($\pm 0.00015 \%$ of the full scale value/ $^\circ\text{F}$).

Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is $\pm 0.0001 \text{ g/cm}^3 \text{ }^\circ\text{C}$ ($\pm 0.00005 \text{ g/cm}^3 \text{ }^\circ\text{F}$). Field density calibration is possible.

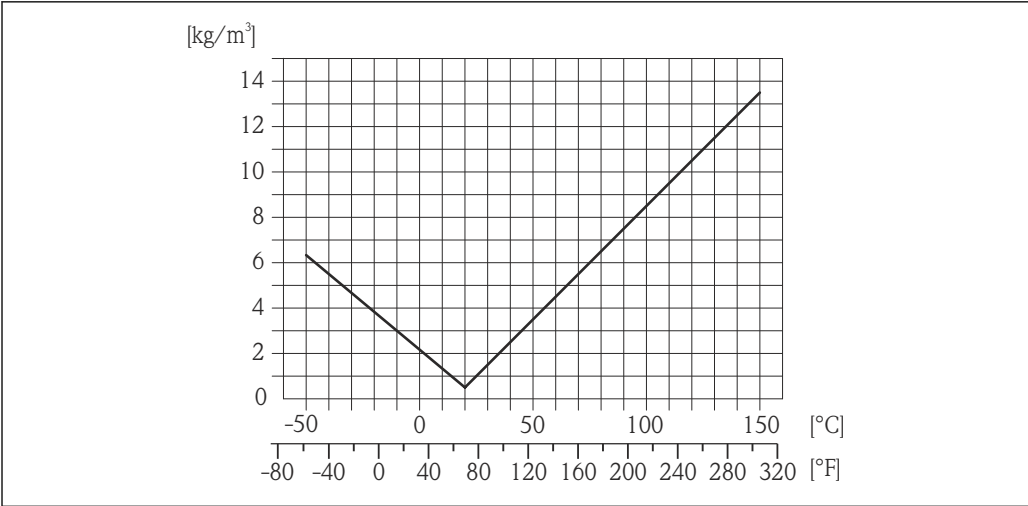

A0024231

14 Field density calibration, for example at +20 °C (+68 °F)

Temperature
 $\pm 0.005 \cdot T \text{ }^{\circ}\text{C}$ ($\pm 0.005 \cdot (T - 32) \text{ }^{\circ}\text{F}$)

Influence of medium pressure A difference between the calibration pressure and process pressure does not affect accuracy.

Design fundamentals o.r. = of reading, o.f.s. = of full scale value
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.
MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021335</small>	$\pm \text{BaseRepeat}$ <small>A0021340</small>
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021336</small>	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021337</small>

Example for max. measured error

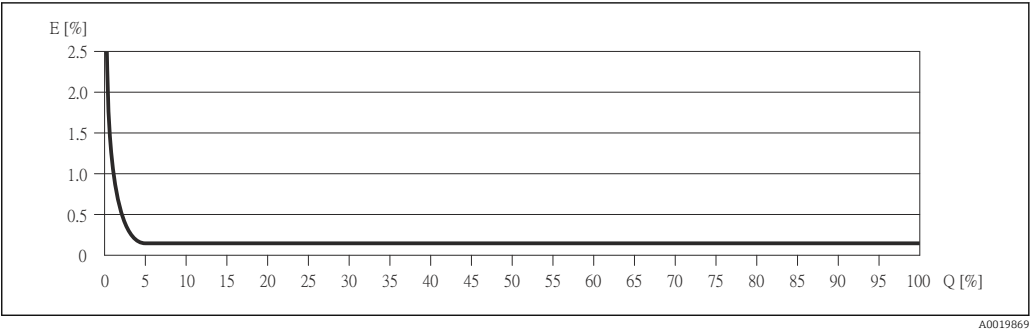


E Error: Maximum measured error as % o.r. (example)
Q Flow rate as %

 Design fundamentals (→  110)


16.7 Installation


"Mounting requirements" (→  17)

16.8 Environment

Ambient temperature range (→  18)

Temperature tables

 Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.

 For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

- -40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F) (standard version)
- -50 to +80 °C (-58 to +176 °F) (Order code for "Test, certificate", option JM)

Climate class DIN EN 60068-2-38 (test Z/AD)



Degree of protection

Transmitter and sensor








- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Shock resistance As per IEC/EN 60068-2-31

Vibration resistance Acceleration up to 1 g, 10 to 150 Hz, based on IEC/EN 60068-2-6

Electromagnetic compatibility (EMC)	<ul style="list-style-type: none"> ■ As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21) ■ Complies with emission limits for industry as per EN 55011 (Class A) ■ Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170 Volume 2, IEC 61784 <p> The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.</p> <p> For details refer to the Declaration of Conformity.</p>
-------------------------------------	---

16.9 Process

Medium temperature range	<p>Sensor –50 to +150 °C (–58 to +302 °F)</p> <p>Seals No internal seals</p>
Density	0 to 5 000 kg/m ³ (0 to 312 lb/cf)
Pressure-temperature ratings	 An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document
Rupture disk	<p>Trigger pressure in housing: 10 to 15 bar (145 to 218 psi)</p> <p>Special mounting instructions: (→  20)</p>
Flow limit	<p>Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.</p> <p> For an overview of the measuring range full scale values, see the "Measuring range" section (→  104)</p> <ul style="list-style-type: none"> ■ The minimum recommended full scale value is approx. 1/20 of the maximum full scale value ■ In most applications, 20 to 50 % of the maximum full scale value can be considered ideal ■ A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s). ■ For gas measurement the following rules apply: <ul style="list-style-type: none"> – The flow velocity in the measuring tubes should not exceed half the sonic velocity (0.5 Mach). – The maximum mass flow depends on the density of the gas: formula (→  104)
Pressure loss	 To calculate the pressure loss, use the <i>Applicator</i> sizing tool (→  118)

16.10 Mechanical construction

Design, dimensions

 For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Compact version

Weight in SI units

DN [mm]	Weight [kg]
8	3.8
15	4.4
25	5.1

Weight in US units


DN [in]	Weight [lbs]
3/8	8.4
1/2	9.7
1	11.3

Materials


Transmitter housing

- Order code for "Housing", option **A** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **B** "Compact, stainless":
Stainless steel 1.4301 (304)
- Order code for "Housing", option **C** "Ultra-compact, stainless":
Stainless steel 1.4301 (304)

Cable entries/cable glands

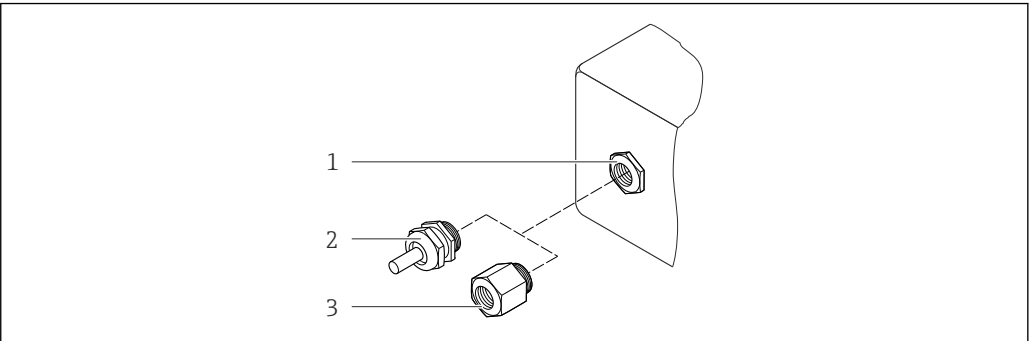

A0020640

 15 Possible cable entries/cable glands

- 1 Cable entry in transmitter housing, wall-mount housing or connection housing with internal thread M20 x 1.5
- 2 Cable gland M20 x 1.5
- 3 Adapter for cable entry with internal thread G 1/2" or NPT 1/2"

Order Code for "Housing", Option A "Compact, coated aluminum"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Nickel-plated brass
Adapter for cable entry with internal thread G ½"	
Adapter for cable entry with internal thread NPT ½"	

Order code for "Housing", option B "Compact, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with internal thread G ½"	
Adapter for cable entry with internal thread NPT ½"	

Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none"> ■ Socket: Stainless steel, 1.4404 (316L) ■ Contact housing: Polyamide ■ Contacts: Gold-plated brass

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4435 (316L)

Process connections/manifolds

For all process connections/manifolds
Stainless steel, 1.4404 (316/316L)

 List of all available process connections (→  115)

Surface quality (parts in contact with medium)




All data relate to parts in contact with fluid.
Not polished

Seals


Welded process connections without internal seals

Safety Barrier Promass 100

Housing: Polyamide


Process connections	<p>Internal thread</p> <p>Cylindrical internal thread BSPP (G) in accordance with ISO 228-1 with sealing surfaces in accordance with DIN 3852-2/ISO 1179-1</p> <p> Sealed with profile seal (not included in scope of delivery) in accordance with DIN 3869 or copper disk or steel gasket with plastic lip.</p> <p> For information on the materials of the process connections (→  114)</p>
---------------------	--

16.11 Operability

Local display	<p>The local display is only available with the following device version: Order code for "Display; Operation", option B: 4-line; lit, via communication</p> <p>Display element</p> <ul style="list-style-type: none"> ■ 4-line liquid crystal display with 16 characters per line. ■ White background lighting; switches to red in event of device errors. ■ Format for displaying measured variables and status variables can be individually configured. ■ Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range. <p>Disconnecting the local display from the main electronics module</p> <p> In the case of the "Compact, aluminum coated" housing version, the local display must only be disconnected manually from the main electronics module. In the case of the "Compact, hygienic, stainless" and "Ultra-compact, hygienic, stainless" housing versions, the local display is integrated in the housing cover and is disconnected from the main electronics module when the housing cover is opened.</p> <p><i>"Compact, aluminum coated" housing version</i></p> <p>The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.</p> <p>For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:</p> <ol style="list-style-type: none"> 1. Press in the side latches of the local display. 2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so. <p>Once the work is completed, plug the local display back on.</p>
---------------	--

Remote operation

Via PROFIBUS DP network

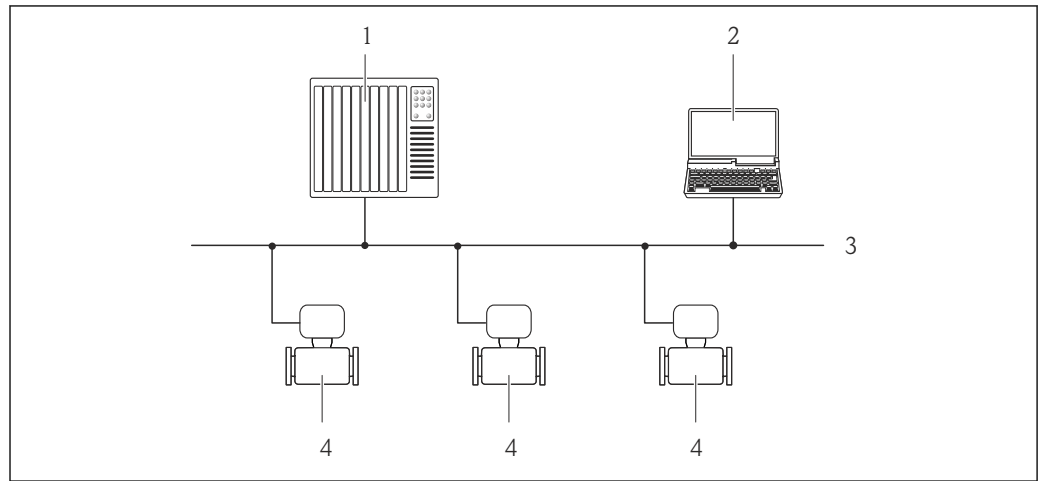


A0020903

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

Service interface

Service interface (CDI-RJ45)

PROFIBUS DP

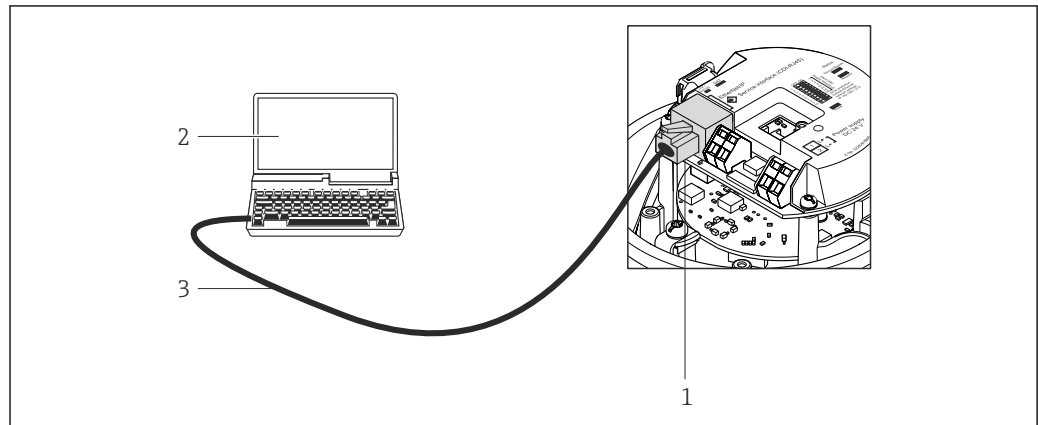

A0021270

16 Connection for order code for "Output", option L: PROFIBUS DP

- 1 Service interface (CDI -RJ45) of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

Languages

Can be operated in the following languages:

- Via "FieldCare" operating tool:
English, German, French, Spanish, Italian, Chinese, Japanese
- Via Web browser
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech


16.12 Certificates and approvals

CE mark	<p>The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>
C-Tick symbol	<p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p>
Ex approval	<p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>
Certification PROFIBUS	<p>PROFIBUS interface</p> <p>The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none"> ■ Certified in accordance with PROFIBUS PA Profile 3.02 ■ The device can also be operated with certified devices of other manufacturers (interoperability)
Other standards and guidelines	<ul style="list-style-type: none"> ■ EN 60529 Degrees of protection provided by enclosures (IP code) ■ IEC/EN 60068-2-6 Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal). ■ IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices. ■ EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use ■ IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). ■ NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment ■ NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors ■ NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal. ■ NAMUR NE 53 Software of field devices and signal-processing devices with digital electronics ■ NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices ■ NAMUR NE 107 Self-monitoring and diagnosis of field devices ■ NAMUR NE 131 Requirements for field devices for standard applications ■ NAMUR NE 132 Coriolis mass meter



16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.


The application packages can be ordered from Endress+Hauser either directly with the device or subsequently. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

 Detailed information on the application packages:
Special Documentation on the device

16.14 Accessories

 Overview of accessories available for order (→  103)

16.15 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Measuring device	Documentation code
Promass G 100	KA01180D

Technical Information

Measuring device	Documentation code
Promass G 100	TI01189D

Supplementary device-dependent documentation



Safety Instructions

Contents	Documentation code
ATEX/IECEX Ex i	XA00159D
ATEX/IECEX Ex nA	XA01029D
cCSAus IS	XA00160D
INMETRO Ex i	XA01219D
INMETRO Ex nA	XA01220D

Special Documentation

Contents	Documentation code
Concentration Measurement	SD01152D
Heartbeat Technology	SD01153D

Installation instructions

Contents	Documentation code
Installation Instructions for spare part sets	Specified for each individual accessory (→  103)  Overview of accessories available for order (→  103)









17 Appendix

17.1 Overview of the operating menu

The following graphic provides an overview of the entire operating menu structure with its menus, submenus and parameters. The page reference indicates where a description of the parameter can be found in the manual.









Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.


For the Order Code "Application Package", the associated parameters are described in the Special Documentation.

 Operation	(→  120)
 Setup	(→  121)
 Diagnostics	(→  125)
 Expert	(→  129)

17.1.1 "Operation" menu



















Navigation  Operation

 Operation	(→  66)
Display language	(→  63)
Access status tooling	
Locking status	
► Display	(→  61)
Format display	(→  62)
Contrast display	
Backlight	(→  63)
Display interval	(→  63)
► Totalizer handling	
Control Totalizer 1 to 3	(→  60)

























<div>Preset value 1 to 3</div> <div>Reset all totalizers</div>	(→  69)
--	--

17.1.2 "Setup" menu

Navigation   Setup

<div> Setup</div> <div>Device tag</div> <div>► System units</div> <div>Mass flow unit</div> <div>Mass unit</div> <div>Volume flow unit</div> <div>Volume unit</div> <div>Corrected volume flow unit</div> <div>Corrected volume unit</div> <div>Density unit</div> <div>Reference density unit</div> <div>Temperature unit</div> <div>Pressure unit</div> <div>► Medium selection</div> <div>Select medium</div> <div>Select gas type</div> <div>Reference sound velocity</div> <div>Temperature coefficient sound velocity</div> <div>Pressure compensation</div>	(→  49) (→  50) (→  50) (→  50) (→  50) (→  50) (→  51) (→  51) (→  51) (→  51) (→  51) (→  51) (→  52) (→  52) (→  52) (→  52) (→  52)
---	--

Pressure value	(→ 52)
External pressure	(→ 52)
► Communication	(→ 53)
Device address	(→ 53)
► Analog inputs	(→ 54)
► Analog input 1 to 8	
Channel	(→ 54)
PV filter time	(→ 54)
Fail safe type	(→ 55)
Fail safe value	(→ 55)
► Low flow cut off	(→ 56)
Assign process variable	(→ 56)
On value low flow cutoff	(→ 56)
Off value low flow cutoff	(→ 56)
Pressure shock suppression	(→ 56)
► Partially filled pipe detection	(→ 57)
Assign process variable	(→ 57)
Low value partial filled pipe detection	(→ 57)
High value partial filled pipe detection	(→ 57)
Response time part. filled pipe detect.	(→ 57)
► Advanced setup	(→ 58)
Enter access code	
► Calculated values	(→ 58)
► Corrected volume flow calculation	
Corrected volume flow calculation	(→ 59)

External reference density	(→  59)
Fixed reference density	(→  59)
Reference temperature	(→  59)
Linear expansion coefficient	(→  59)
Square expansion coefficient	(→  59)
► Sensor adjustment	(→  59)
Installation direction	(→  60)
► Zero point adjustment	
Zero point adjustment control	(→  60)
Progress	(→  60)
► Totalizer 1 to 3	(→  60)
Assign process variable	(→  60)
Unit totalizer	(→  60)
Control Totalizer 1 to 3	(→  60)
Totalizer operation mode	(→  60)
Failure mode	(→  60)
► Display	(→  61)
Format display	(→  62)
Value 1 display	(→  62)
0% bargraph value 1	(→  62)
100% bargraph value 1	(→  62)
Decimal places 1	(→  62)
Value 2 display	(→  62)
Decimal places 2	(→  62)
Value 3 display	(→  62)

0% bargraph value 3	(→ ⓘ 62)
100% bargraph value 3	(→ ⓘ 62)
Decimal places 3	(→ ⓘ 63)
Value 4 display	(→ ⓘ 63)
Decimal places 4	(→ ⓘ 63)
Display language	(→ ⓘ 63)
Display interval	(→ ⓘ 63)
Display damping	(→ ⓘ 63)
Header	(→ ⓘ 63)
Header text	(→ ⓘ 63)
Separator	(→ ⓘ 63)
Backlight	(→ ⓘ 63)
► Viscosity	
► Temperature compensation	
Calculation model	
Reference temperature	
Compensation coefficient X 1	
Compensation coefficient X 2	
► Dynamic viscosity	
Dynamic viscosity unit	
► Kinematic viscosity	
Kinematic viscosity unit	
► Concentration	
Concentration unit	
A 0	

A 1

A 2

A 3

A 4

B 1

B 2

B 3

► Heartbeat setup

► Heartbeat Monitoring

Activate monitoring


► Administration

Define access code

Device reset

17.1.3 "Diagnostics" menu

Navigation  Diagnostics

 Diagnostics (→ ⓘ 94)

Actual diagnostics (→ ⓘ 94)

Timestamp

Previous diagnostics (→ ⓘ 94)

Timestamp
















Operating time from restart

Operating time

► Diagnostic list

Diagnostics 1

Timestamp	
Diagnostics 2	
Timestamp	
Diagnostics 3	
Timestamp	
Diagnostics 4	
Timestamp	
Diagnostics 5	
Timestamp	
► Event logbook	
Filter options	
► Device information	(→ ⓘ 97)
Device tag	(→ ⓘ 98)
Serial number	(→ ⓘ 98)
Firmware version	(→ ⓘ 98)
Device name	(→ ⓘ 98)
Order code	(→ ⓘ 98)
Extended order code 1	(→ ⓘ 98)
Extended order code 2	(→ ⓘ 98)
Extended order code 3	(→ ⓘ 98)
ENP version	(→ ⓘ 98)
PROFIBUS ident number	(→ ⓘ 98)
Status PROFIBUS Master Config	(→ ⓘ 98)
IP address	(→ ⓘ 98)

Subnet mask	(→  98)
Default gateway	(→  98)
► Measured values	
► Process variables	(→  66)
Mass flow	(→  66)
Volume flow	(→  66)
Corrected volume flow	(→  66)
Density	(→  67)
Reference density	(→  67)
Temperature	(→  67)
Pressure value	(→  67)
Dynamic viscosity	
Kinematic viscosity	
Temp. compensated dynamic viscosity	
Temp. compensated kinematic viscosity	
Concentration	
Target mass flow	
Carrier mass flow	
► Totalizer 1 to 3	(→  60)
Assign process variable	(→  60)
Totalizer value 1 to 3	(→  67)
Totalizer status 1 to 3	(→  67)
Totalizer status (Hex) 1 to 3	(→  67)

► Analog inputs

(→ ⓘ 54)

► Analog input 1 to 8

Channel

(→ ⓘ 54)

Out value

Out status

Out status

► Heartbeat

► Performing verification

Year

Month

Day

Hour

AM/PM

Minute

Start verification

Progress

(→ ⓘ 60)

Status

Overall result

► Verification results

Date/time

Verification ID

Operating time

Overall result

Sensor

Sensor integrity

Sensor electronic module	
I/O module	
► Monitoring results	
Sensor integrity	
► Simulation	(→ 63)
Assign simulation process variable	(→ 64)
Value process variable	(→ 64)
Simulation device alarm	(→ 64)
Simulation diagnostic event	

17.1.4 "Expert" menu

The following tables provide an overview of the **Expert** menu with its submenus and parameters. The direct access code to the parameter is given in brackets. The page reference indicates where a description of the parameter can be found in the manual.















Navigation Expert

Expert

"System" submenu














Navigation Expert → System



















► System	
► Display	(→ 61)
Display language	(→ 63)
Format display	(→ 62)
Value 1 display	(→ 62)
0% bargraph value 1	(→ 62)
100% bargraph value 1	(→ 62)
Decimal places 1	(→ 62)


















Value 2 display	(→  62)
Decimal places 2	(→  62)
Value 3 display	(→  62)
0% bargraph value 3	(→  62)
100% bargraph value 3	(→  62)
Decimal places 3	(→  63)
Value 4 display	(→  63)
Decimal places 4	(→  63)
Display interval	(→  63)
Display damping	(→  63)
Header	(→  63)
Header text	(→  63)
Separator	(→  63)
Contrast display	
Backlight	(→  63)
Access status display	
► Diagnostic handling	
Alarm delay	
► Administration	
Define access code	
Device reset	
Activate SW option	
Software option overview	

"Sensor" submenu

Navigation  Expert → Sensor

► Sensor	
► Measured values	
► Process variables	(→  66)
Mass flow	(→  66)
Volume flow	(→  66)
Corrected volume flow	(→  66)
Density	(→  67)
Reference density	(→  67)
Temperature	(→  67)
Pressure value	(→  67)
Dynamic viscosity	
Kinematic viscosity	
Temp. compensated dynamic viscosity	
Temp. compensated kinematic viscosity	
Concentration	
Target mass flow	
Carrier mass flow	
► Totalizer	(→  60)
Totalizer value 1 to 3	(→  67)
Totalizer status (Hex) 1 to 3	(→  67)
Totalizer status 1 to 3	(→  67)
► System units	
Mass flow unit	(→  50)

Mass unit	(→  50)
Volume flow unit	(→  50)
Volume unit	(→  50)
Corrected volume flow unit	(→  51)
Corrected volume unit	(→  51)
Density unit	(→  51)
Reference density unit	(→  51)
Temperature unit	(→  51)
Pressure unit	(→  51)
Date/time format	
► Process parameters	
Flow damping	
Density damping	
Temperature damping	
Flow override	
► Low flow cut off	(→  56)
Assign process variable	(→  56)
On value low flow cutoff	(→  56)
Off value low flow cutoff	(→  56)
Pressure shock suppression	(→  56)
► Partially filled pipe detection	(→  57)
Assign process variable	(→  57)
Low value partial filled pipe detection	(→  57)
High value partial filled pipe detection	(→  57)

Response time part. filled pipe detect.	(→  57)
Maximum damping partial filled pipe det.	
► Measurement mode	
Select medium	(→  52)
Select gas type	(→  52)
Reference sound velocity	(→  52)
Temperature coefficient sound velocity	(→  52)
► External compensation	
Pressure compensation	(→  52)
Pressure value	(→  52)
External pressure	(→  52)
► Calculated values	(→  58)
► Corrected volume flow calculation	
Corrected volume flow calculation	(→  59)
External reference density	(→  59)
Fixed reference density	(→  59)
Reference temperature	(→  59)
Linear expansion coefficient	(→  59)
Square expansion coefficient	(→  59)
► Sensor adjustment	(→  59)
Installation direction	(→  60)

► Zero point adjustment

Zero point adjustment control

(→ ⓘ 60)

Progress

(→ ⓘ 60)

► Process variable adjustment

Mass flow offset

Mass flow factor

Volume flow offset

Volume flow factor

Density offset

Density factor

Corrected volume flow offset

Corrected volume flow factor

Reference density offset

Reference density factor

Temperature offset

Temperature factor

► Calibration

Calibration factor

Zero point

Nominal diameter

C


C

C

C

	C
	C
► Testpoints	
	Oscillation frequency
	Oscillation frequency
	Frequency fluctuation
	Frequency fluctuation
	Oscillation amplitude
	Oscillation amplitude
	Oscillation damping
	Oscillation damping
	Tube damping fluctuation
	Tube damping fluctuation
	Signal asymmetry
	Electronic temperature
	Carrier pipe temperature
	Exciter current
	Exciter current
	RawMassFlow
► Supervision	
	Limit value measuring tube damping

"Current input" submenu

Navigation  Expert → Input → Current input

► Input

► Status input

Assign status input

Value status input

Active level

Response time status input

► Output

► Pulse/frequency/switch output 1 to 2

Operating mode

Channel 2


Assign pulse output

Value per pulse

Pulse width

Measuring mode

Failure mode

Pulse output (→  68)

Assign frequency output

Minimum frequency value

Maximum frequency value

Measuring value at maximum frequency

Measuring mode

Damping output	
Failure mode	
Failure frequency	
Output frequency	(→ ⓘ 68)
Switch output function	
Assign diagnostic behavior	
Assign limit	
Switch-on value	
Switch-off value	
Assign flow direction check	
Assign status	
Failure mode	
Switch status	(→ ⓘ 68)
Invert output signal	

► Communication	(→ ⓘ 53)
► PROFIBUS DP configuration	
Address mode	
Device address	(→ ⓘ 53)
Ident number selector	
► PROFIBUS DP info	
Status PROFIBUS Master Config	(→ ⓘ 98)
PROFIBUS ident number	(→ ⓘ 98)
Profile version	
Base current	

	Baudrate	
	Master availability	
	► Physical block	
	Device tag	(→ ⓘ 50)
	Static revision	
	Strategy	
	Alert key	
	Target mode	
	Mode block actual	
	Mode block permitted	
	Mode block normal	
	Alarm summary	
	Software revision	
	Hardware revision	
	Manufacturer ID	
	Device ID	
	Serial number	
	Diagnostics	
	Diagnostics mask	
	Device certification	
	Factory reset	
	Descriptor	
	Device message	
	Device install date	
	Ident number selector	

Hardware lock

Feature supported

Feature enabled

Condensed status diagnostic

► Web server

(→ ⓘ 37)

Web server language

MAC address

IP address

(→ ⓘ 98)

Subnet mask

(→ ⓘ 98)

Default gateway

(→ ⓘ 98)

Web server functionality

(→ ⓘ 37)

► Channel Configuration

► Application

► Totalizer 1 to 3

(→ ⓘ 60)

Tag description

Static revision

Strategy

Alert key

Target mode










Mode block actual

Mode block permitted

Mode block normal

Alarm summary

Batch ID

Batch operation	
Batch phase	
Batch Recipe Unit Procedure	
Totalizer value 1 to 3	(→  67)
Totalizer status 1 to 3	(→  67)
Totalizer status (Hex) 1 to 3	(→  67)
Unit totalizer	(→  60)
Assign process variable	(→  60)
Control Totalizer 1 to 3	(→  60)
Totalizer operation mode	(→  60)
Failure mode	(→  60)
Preset value 1 to 3	(→  69)
Alarm hysteresis	
Hi Hi Lim	
Hi Lim	
Lo Lim	
Lo Lo Lim	
Hi Hi alarm value	
Hi Hi alarm state	
Hi alarm value	
Hi alarm state	
Lo alarm value	
Lo alarm state	
Lo Lo alarm value	
Lo Lo alarm state	

► Viscosity

Viscosity damping

► Temperature compensation

Calculation model

Reference temperature

Compensation coefficient X 1

Compensation coefficient X 2

► Dynamic viscosity

Dynamic viscosity unit

► Kinematic viscosity

Kinematic viscosity unit

► Concentration

Concentration damping

Concentration unit

A 0

A 1

A 2

A 3

A 4

B 1

B 2

B 3

► Diagnostics

(→ ⓘ 94)

Actual diagnostics

(→ ⓘ 94)

Timestamp	
Previous diagnostics	(→ ⓘ 94)
Timestamp	
Operating time from restart	
Operating time	
► Diagnostic list	
Diagnostics 1	
Timestamp	
Diagnostics 2	
Timestamp	
Diagnostics 3	
Timestamp	
Diagnostics 4	
Timestamp	
Diagnostics 5	
Timestamp	
► Event logbook	
Filter options	
► Device information	(→ ⓘ 97)
Device tag	(→ ⓘ 98)
Serial number	(→ ⓘ 98)
Firmware version	(→ ⓘ 98)
Device name	(→ ⓘ 98)
Order code	(→ ⓘ 98)
Extended order code 1	(→ ⓘ 98)

Extended order code 2	(→ ⓘ 98)
Extended order code 3	(→ ⓘ 98)
ENP version	(→ ⓘ 98)
► Min/max values	
Reset min/max values	
► Electronic temperature	
Minimum value	
Maximum value	
► Medium temperature	
Minimum value	
Maximum value	
► Carrier pipe temperature	
Minimum value	
Maximum value	
► Oscillation frequency	
Minimum value	
Maximum value	
► Torsion oscillation frequency	
Minimum value	
Maximum value	
► Oscillation amplitude	
Minimum value	
Maximum value	

► Torsion oscillation amplitude

Minimum value

Maximum value

► Oscillation damping

Minimum value

Maximum value

► Torsion oscillation damping

Minimum value

Maximum value

► Signal asymmetry

Minimum value

Maximum value

► Heartbeat

► Performing verification

Year

Month

Day

Hour

AM/PM

Minute

Start verification

Progress

Status

Overall result

(→ ⓘ 60)

► Verification results	
Date/time	
Verification ID	
Operating time	
Overall result	
Sensor	
Sensor integrity	
Sensor electronic module	
I/O module	
► Heartbeat Monitoring	
Activate monitoring	
► Monitoring results	
Sensor integrity	
► Simulation	(→ ⓘ 63)
Assign simulation process variable	(→ ⓘ 64)
Value process variable	(→ ⓘ 64)
Simulation device alarm	(→ ⓘ 64)
Simulation diagnostic event	

Index

A

Accuracy	108
Adapting the diagnostic behavior	73
Ambient temperature range	18
Application	8, 104
Application packages	118
Applicator	104
Approvals	117

C

C-Tick symbol	117
Cable entries	
Technical data	108
Cable entry	
Degree of protection	30
CE mark	9, 117
Certificates	117
Certification PROFIBUS	117
Check	
Installation	22
Checklist	
Post-connection check	31
Post-installation check	22
Cleaning	
Exterior cleaning	100
Climate class	111
Commissioning	49
Advanced settings	58
Configuring the measuring device	49
Compatibility with earlier model	41
Connecting cable	24
Connecting the measuring device	26
Connection	
see Electrical connection	
Connection preparations	26
Connection tools	24
Current consumption	107
Current input (Submenu)	136
Cyclic data transmission	42

D

Declaration of Conformity	9
Define access code	65
Degree of protection	30, 111
Density	112
Design	
Measuring device	11
Design fundamentals	
Maximum measured error	110
Repeatability	110
Designated use	8
Device components	11
Device description files	41
Device documentation	
Supplementary documentation	7
Device locking, status	66

Device master file	
GSD	41
Device name	
Sensor	13
Transmitter	13
Device repair	101
Device revision	41
Device type ID	41
Diagnostic information	
Design, description	72
FieldCare	71
Light emitting diodes	71
Overview	75
Remedial measures	75
Diagnostic list	94
Diagnostics (Menu)	125
DIP switch	
see Write protection switch	
Disabling write protection	64
Display	
Current diagnostic event	94
Previous diagnostic event	94
Display values	
For locking status	66
Disposal	101
Document	
Function	5
Symbols used	5
Document function	5

E

Electrical connection	
Degree of protection	30
Measuring device	24
Operating tools	
Via PROFIBUS DP network	38, 116
Via service interface (CDI-RJ45)	39
Web server	39
Electromagnetic compatibility	112
Enabling write protection	64
Endress+Hauser services	
Maintenance	100
Repair	101
Error messages	
see Diagnostic messages	
Event history	95
Events list	95
Ex approval	117
Expert (Menu)	129
Extended order code	
Sensor	13
Transmitter	13
Exterior cleaning	100

F

Field of application	
----------------------	--

Residual risks	9	Design	11
FieldCare	39	Disposal	102
Device description file	41	Integrating via HART protocol	41
Establishing a connection	39	Mounting the sensor	22
Function	39	Preparing for electrical connection	26
User interface	40	Preparing for mounting	21
Filtering the event logbook	95	Removing	101
Firmware		Repair	101
Release date	41	Measuring principle	104
Version	41	Measuring range	
Firmware history	98	For gases	104
Flow direction	17, 22	For liquids	104
Flow limit	112	Measuring range, recommended	112
Function check	49	Measuring system	104
Functions		Media	8
see Parameter		Medium pressure	
		Influence	110
G		Medium temperature	
Galvanic isolation	106	Influence	109
		Menu	
H		Diagnostics	94, 125
Hardware write protection	65	Expert	129
		Operation	66, 120
I		Setup	49, 121
I/O electronics module	11, 27	Menus	
Identifying the measuring device	12	For measuring device configuration	49
Incoming acceptance	12	For specific settings	58
Influence		Mounting dimensions	
Medium pressure	110	see Installation dimensions	
Medium temperature	109	Mounting location	17
Information on the document	5	Mounting preparations	21
Inlet runs	18	Mounting requirements	
Input	104	Inlet and outlet runs	18
Inspection		Installation dimensions	18
Received goods	12	Mounting location	17
Inspection check		Orientation	17
Connection	31	Rupture disk	20
Installation	17	Sensor heating	20
Installation conditions		Thermal insulation	19
System pressure	18	Mounting tools	21
Vibrations	20		
Installation dimensions	18		
		N	
L		Nameplate	
Languages, operation options	116	Sensor	13
Low flow cut off	106	Transmitter	13
M		O	
Main electronics module	11	Operable flow range	105
Maintenance tasks	100	Operating menu	
Manufacturer ID	41	Menus, submenus	33
Manufacturing date	13	Overview of menus with parameters	120
Materials	113	Structure	33
Maximum measured error	108	Submenus and user roles	34
Measured variables		Operating philosophy	34
see Process variables		Operation	66
Measuring and test equipment	100	Operation (Menu)	120
Measuring device		Operation options	32
Configuring	49	Operational safety	9
Conversion	101	Order code	13

Orientation (vertical, horizontal)	17
Outlet runs	18
Output	105
Output signal	105
Overview	
Operating menu	120

P

Packaging disposal	16
Parameter settings	
Analog inputs (Submenu)	54
Calculated values (Submenu)	58
Communication (Submenu)	53
Device information (Submenu)	97
Diagnostics (Menu)	94
Display (Submenu)	61
Low flow cut off (Wizard)	56
Operation (Submenu)	68
Output values (Submenu)	67
Partially filled pipe detection (Wizard)	57
Process variables (Submenu)	66
Select medium (Submenu)	52
Sensor adjustment (Submenu)	59
Setup (Menu)	49
Simulation (Submenu)	63
Totalizer (Submenu)	67
Totalizer 1 to 3 (Submenu)	60
Web server (Submenu)	37
Performance characteristics	108
Post-connection check (checklist)	31
Post-installation check	49
Post-installation check (checklist)	22
Potential equalization	107
Power consumption	107
Power supply failure	107
Pressure loss	112
Pressure-temperature ratings	112
Process connections	115
Process variables	
Calculated	104
Measured	104
Product safety	9
Protecting parameter settings	64

R

Reading measured values	66
Recalibration	100
Reference operating conditions	108
Registered trademarks	7
Remote operation	116
Repair	101
Notes	101
Repair of a device	101
Repeatability	109
Replacement	
Device components	101
Requirements for personnel	8
Response time	109
Return	101

Rupture disk	
Safety instructions	20
Triggering pressure	112

S

Safety	8
Seals	
Fluid temperature range	112
Sensor	
Fluid temperature range	112
Mounting	22
Sensor (Submenu)	131
Sensor heating	20
Serial number	13
Service interface (CDI-RJ45)	116
Settings	
Adapting the measuring device to the process	
conditions	68
Advanced display configurations	61
Analog input	54
Communication interface	53
Device reset	96
Device tag	49
Low flow cut off	56
Medium	52
Partial filled pipe detection	57
Resetting the totalizer	68
Sensor adjustment	59
Simulation	63
System units	50
Totalizer	60
Totalizer reset	68
Setup (Menu)	121
Shock resistance	111
Signal on alarm	105
Software release	41
Spare part	101
Spare parts	101
Special connection instructions	28
Standards and guidelines	117
Status signals	72
Storage conditions	15
Storage temperature	15
Structure	
Operating menu	33
Submenu	
Advanced setup	58
Analog inputs	54
Calculated values	58
Communication	53
Current input	136
Define access code	64
Device information	97
Display	61
Events list	95
Operation	68
Output values	67
Overview	34
Process variables	58, 66

Select medium	52	Write protection	
Sensor	131	Via access code	64
Sensor adjustment	59	Via write protection switch	65
Simulation	63	Write protection switch	65
System	129		
Totalizer	67		
Totalizer 1 to 3	60		
Web server	37		
Supply voltage	107		
System (Submenu)	129		
System design			
Measuring system	104		
see Measuring device design			
System integration	41		
System pressure	18		
T			
Technical data, overview	104		
Temperature range			
Medium temperature	112		
Storage temperature	15		
Terminal assignment	25, 27		
Terminals	107		
Thermal insulation	19		
Tools			
Electrical connection	24		
Installation	21		
Transport	15		
Transmitter			
Connecting the signal cables	27		
Turning the display module	22		
Transporting the measuring device	15		
Troubleshooting			
General	70		
Turning the display module	22		
U			
Use of the measuring device			
Borderline cases	8		
Incorrect use	8		
see Designated use			
User roles	34		
V			
Version data for the device	41		
Vibration resistance	111		
Vibrations	20		
W			
W@M	100, 101		
W@M Device Viewer	12, 101		
Weight			
SI units	113		
Transport (notes)	15		
US units	113		
Wizard			
Define access code	64		
Low flow cut off	56		
Partially filled pipe detection	57		
Workplace safety	9		

www.addresses.endress.com
