

Supplementary documentation

Proline Promass 83

Data transmission via EtherNet/IP

Connection to an EtherNet/IP network and integration into a control system



Using the supplementary documentation

This supplementary document should only be used in conjunction with a Proline Promass 83 EtherNet/IP transmitter.

Associated device documentation

This document is an integral part of Operating Instructions BA107D (Proline Promass 83 MODBUS RS485). It acts as a supplement to BA107D by providing information on using the transmitter in an EtherNet/IP network.

Table of contents

System design	3	Integration into a Rockwell Automation control syst.	20
Measuring device	3	Installing the electronic data sheet file (EDS)	20
Dual Ethernet module	3	Installation Add On Profile (AOP) incl. EDS	20
Connection versions	3	Implementation in the Rockwell EtherNet/IP architecture	20
Connection label	4	Download the settings	25
Dual Ethernet module	5	Displaying the measured, input and output values in online mode	26
Configuration	5		
Status light emitting diodes (LED)	5		
DIP switches for hardware addressing	5		
DIP switches to reset software addressing	6		
Connection values	6		
Dual Ethernet module connection	6		
Power supply	6		
Ethernet port	6		
M12 fieldbus connector	7		
RJ45 connector	7		
Cable entries	7		
Grounding and shielding	8		
EMC PG cable gland	8		
Conduit cabling	8		
Webserver	8		
PC/laptop settings	8		
Configuring the IP address	9		
Hardware addressing	9		
Software addressing	10		
DHCP client	10		
Local operation	11		
Webserver menus	12		
Overview of the Webserver menus	12		
Login	12		
User Management	12		
Info	13		
Overview	13		
Network Configuration	14		
Data Map	15		
Ethernet Diagnostics	16		
Device Configuration	17		
Firmware Update	17		
Parameter Up-/Download	17		
Technical data	17		
Configuring the Data Map via the Webserver	18		
Integrating into a control system	20		
Electronic data sheet file (EDS)	20		


System design

Measuring device

The measuring device has a dual Ethernet module to connect it to an EtherNet/IP network and for connecting to a Webserver integrated in the measuring device. It uses the EtherNet/IP communication protocol (Ethernet Industrial Protocol) in accordance with the ODVA specification.

Transmitters with a dual Ethernet module are marked "EtherNet/IP" on the nameplate.

Dual Ethernet module

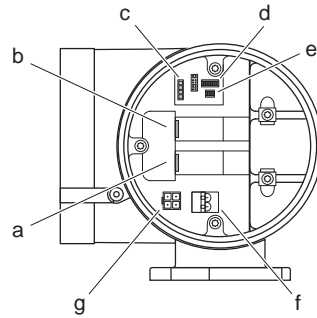


Structure of the dual Ethernet module

- a Ethernet port 1 for EtherNet/IP network or Webserver
- b Ethernet port 2 for EtherNet/IP network or Webserver
- c Status light emitting diodes (LED)
- d DIP switches for hardware addressing
- e DIP switches to reset software addressing
- f Power supply connection
- g Port for service interface FXA193 (FieldCare)

Connection versions

There are primarily three ways to connect the measuring device.

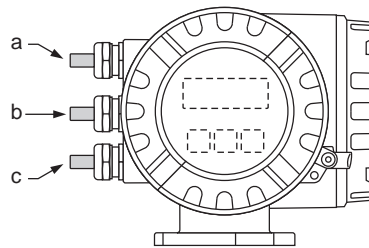

Transmitter cable entries

	Connection version 1	Connection version 2	Connection version 3
a	Ethernet via cable entry/cable gland	Ethernet via fieldbus connector	Ethernet via fieldbus connector
b	Dummy plug	Dummy plug	Ethernet via fieldbus connector
c	Power supply via cable entry/cable gland	Power supply via cable entry/cable gland	Power supply via cable entry/cable gland

Connection version 1

If the network cable is routed directly into the measuring device through the cable entry, an RJ45 plug must be connected to the network cable.



Note!

An RJ45 plug does **not** form part of the delivery.



Caution!

If this connection version is used, attention must be paid to the grounding and shielding of the measuring device → 8.

Connection version 2 and 3

If the measuring device is connected using one or two fieldbus connectors, the device is supplied with one or two 4-pin M12 ports (in accordance with IEC 61076-2-10). You require M12 connectors to connect the device (e.g. Binder Ethernet Connector, Series 825, Article No: 99-3729-810-04).



Note!

M12 connectors do **not** form part of the delivery.

Connecting to the EtherNet/IP network and accessing the Webserver

The measuring device has a dual Ethernet module with two Ethernet ports. A connection to the EtherNet/IP network, as well as a connection to the Webserver, can be established through the two Ethernet ports. The ports are assigned using the individual IP address.

The dual Ethernet module has an integrated switch that processes the Ethernet data packets on a "store and forward" basis. It can manage up to 256 MAC addresses in its source address table (SAT).

With regard to connection version 3, you can access the Webserver of the measuring device without having to open the device if a connection to the EtherNet/IP network has already been established.


In the case of connection versions 1 and 2, if a connection to the EtherNet/IP network has already been established you can connect to the Webserver by connecting a PC/laptop directly to the dual Ethernet module. The connection compartment of the measuring device must be opened for this purpose, however.



Warning!
Heed the safety instructions in the Operating Instructions when opening the connection compartment!

Connection label

A connection label in the cover of the connection compartment provides information on the default IP addresses and the device-specific MAC addresses. If a new IP address is assigned, this can be documented on the connection label.

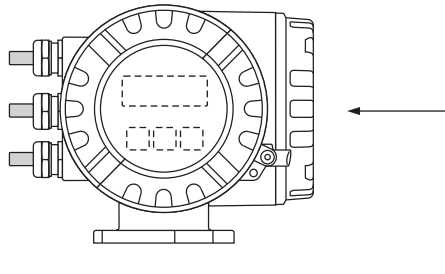

See operating manual
Betriebsanleitung beachten
Observer manuel d'instruction

	Ser.No.: 12345678912	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr> <td style="width: 20px;"></td> <td style="width: 20px; text-align: center;">1</td> <td style="width: 20px; text-align: center;">2</td> <td style="width: 20px; text-align: center;">⊕</td> </tr> <tr> <td style="text-align: center;">L1 / L+</td> <td style="text-align: center;">X</td> <td style="text-align: center;">X</td> <td style="text-align: center;">X</td> </tr> <tr> <td style="text-align: center;">N / L-</td> <td style="text-align: center;">X</td> <td style="text-align: center;">X</td> <td style="text-align: center;">X</td> </tr> <tr> <td style="text-align: center;">PE ⊕</td> <td style="text-align: center;">X</td> <td style="text-align: center;">X</td> <td style="text-align: center;">X</td> </tr> </table>		1	2	⊕	L1 / L+	X	X	X	N / L-	X	X	X	PE ⊕	X	X	X
		1	2	⊕														
	L1 / L+	X	X	X														
N / L-	X	X	X															
PE ⊕	X	X	X															
Supply / Versorgung / Tension d'alimentation																		
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Ethernet Network</td> <td style="width: 30%;"> IP Address: Ex works: 192.168.212.212 Update: </td> <td style="width: 40%;"></td> </tr> <tr> <td></td> <td> MAC Address: Ex works: 00:07:05:10:01:1F Update: </td> <td></td> </tr> </table>	Ethernet Network	IP Address: Ex works: 192.168.212.212 Update: 			MAC Address: Ex works: 00:07:05:10:01:1F Update: 													
Ethernet Network	IP Address: Ex works: 192.168.212.212 Update: 																	
	MAC Address: Ex works: 00:07:05:10:01:1F Update: 																	
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Webserver</td> <td style="width: 30%;"> IP Address: Ex works: 192.168.212.213 Update: </td> <td style="width: 40%;"></td> </tr> <tr> <td></td> <td> MAC Address: Ex works: 00:07:05:10:01:1G Update: </td> <td></td> </tr> </table>	Webserver	IP Address: Ex works: 192.168.212.213 Update: 			MAC Address: Ex works: 00:07:05:10:01:1G Update: 													
Webserver	IP Address: Ex works: 192.168.212.213 Update: 																	
	MAC Address: Ex works: 00:07:05:10:01:1G Update: 																	

Ex-works / ab Werk / réglages usine

Device SW: 1.01.00 (WEA)

Communication: Ethernet

Drivers: 2.01

Date: 1. DEC 2010


Update 1	Update 2

319475-0001B

Connection label (example)

Dual Ethernet module

Configuration

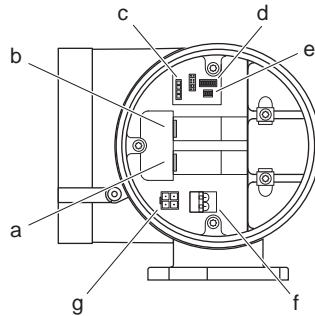

Configuration of the dual Ethernet module

- a Ethernet port 1 for EtherNet/IP network or Webserver
- b Ethernet port 2 for EtherNet/IP network or Webserver
- c Status light emitting diodes (LED)
- d DIP switches for hardware addressing
- e DIP switches to reset software addressing
- f Power supply connection
- g Port for service interface FXA193 (FieldCare)

Status light emitting diodes (LED)



Meaning of the individual light emitting diodes

- a LED 1 Is not used
- b LED 2 Is not used
- c LED 3
 - STEADY OFF The device does not have any IP address or is without power supply.
 - FLASHING GREEN The device has no established connection, but has obtain an IP address.
 - STEADY GREEN The device has at least one established connection (even to the message router)
 - FLASHING RED One or more of the connections in which the device is the target has a time out. This shall be left only if all connections are reestablished or if the device is reset.
- d LED 4
 - STEADY OFF The device is without power supply.
 - FLASHING GREEN Either no I/O connection is established or any established I/O connection is in idle mode (1 Hz).
 - STEADY GREEN All established I/O connection are in run mode.

DIP switches for hardware addressing

The IP address of the measuring device can be configured for the EtherNet/IP network using the DIP switches. Addresses in the range from 0 to 254 are permitted (the address 255 is reserved for the broadcast address).

The IP address for software addressing is active when the device leaves the factory (default IP address: 192.168.212.212), i.e. all the DIP switches for hardware addressing are set to OFF.

Addressing and enabling hardware addressing


- Set the desired IP address using the corresponding DIP switches. This configures the last three digits (last octet) of the IP address = 192.168.212.**XXX** (see example).



Note!

The first nine decimal digits (first three octets) can only be configured via software addressing → 10.

- After 10 seconds the hardware addressing with the defined IP address is activated.

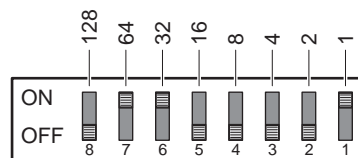

Hardware addressing (example for address 97)

DIP switch	Value:
128	OFF 0
64	ON 64
32	ON 32
16	OFF 0
8	OFF 0
4	OFF 0
2	OFF 0
1	ON 1
<hr/>	
97	= 192.168.212.97

Disabling hardware addressing and activating software addressing

Switch all the DIP switches for hardware addressing to OFF.

DIP switches to reset software addressing

The set IP addresses can be reset with the DIP switch to reset software addressing (see configuration of the dual Ethernet module → 5). This resets the measuring device to the following default IP addresses: EtherNet/IP Network (192.168.212.212), WebServer (192.168.212.213).

Resetting the IP addresses set via software addressing




- Prerequisite
- Software addressing is enabled (see DIP switch for hardware addressing → 9)
 - The measuring device is switched on (power supply switched on)

- Procedure:
1. DIP switch (No. 1) from OFF → ON
 2. DIP switch (No. 1) from ON → OFF

Result: IP addresses of the measuring device: 192.168.212.212 (EtherNet/IP Network)
192.168.212.213 (WebServer)

Connection values

Dual Ethernet module connection

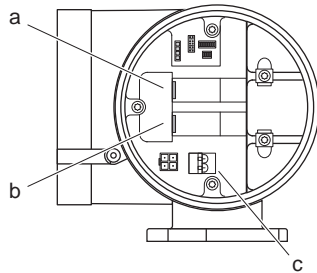

Dual Ethernet module connection

- a Ethernet port 1 for EtherNet/IP network or Webserver
- b Ethernet port 2 for EtherNet/IP network or Webserver
- c Power supply connection



Note!
Due to the internal switch, both ports may only be connected to the same network when a Ring or Line topology is used.

Power supply

85 to 260 V AC, 20 to 55 V AC, 16 to 62 V DC

- Terminal No. 1: L1 for AC, L+ for DC
- Terminal No. 2: N for AC, L- for DC

Ethernet port

The measuring device has a dual Ethernet module to connect it to an EtherNet/IP network and for connecting to a Webserver integrated in the measuring device. It uses the EtherNet/IP communication protocol (Ethernet Industrial Protocol) in accordance with the ODVA specification.

A connection to the EtherNet/IP network, as well as a connection to the Webserver, can be established through the two Ethernet ports. The ports are assigned using the individual IP address.

The measuring device has the following default addresses when delivered:


	EtherNet/IP network	Webserver
IP address	192.168.212.212	192.168.212.213
Netmask	255.255.255.0	255.255.255.0
Gateway	192.168.212.212	192.168.212.213



Note!
A connection label in the cover of the connection compartment provides information on the default IP addresses and the device-specific MAC addresses. If a new IP address is assigned, this can be documented on the connection label → 4.

M12 fieldbus connector

4-pole M12 port (in accordance with IEC 61076-2-10)

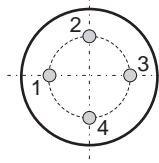

Assignment:

- Pin No. 1 and 3: signal channel 1
- Pin No. 2 and 4: signal channel 2



Note!

You require M12 connectors to connect the device (e.g. Binder Ethernet Connector, Series 825, Article No: 09-3732-700-04). M12 connectors do **not** form part of the delivery.

Technical data for M12 fieldbus connector

General characteristic values	
Number of contacts	4
Locking system	Screws M12 x 1
Wire gage in mm ²	Max. 0.75 (screw); max. 0.25 (solder)
Wire gage in AWG	Max. 20 (screw); max. 24 (solder)
Shell protection	IP 67
Upper temperature	+85 °C (+185 °F)
Lower temperature	-40 °C (-40 °F)
Mechanical operation	> 50 mating cycles
Electrical characteristics	
Rated voltage	250 V
Rated impulse voltage	2500 V
Pollution degree	3 (flange plug-in connections in connection area 2)
Overvoltage category	II
Material group	III
Test voltage	2950 V
Rated current (40 °C)	4 A
Contact resistance	≤ 3 mΩ (gold)
Insulation resistance	≥ 10 ¹⁰ Ω
Material	
Pin contact	CuZn (brass)
Socket contact	CuZn (brass)
Cable contact plating	Au (shielded)
Flange contact plating	Au (gold)
Male insert	PA 66 (UL 94 HB)
Female insert	PA 66 (UL 94 HB)
Metal housing cable connector	CuZn nickel-plated, zinc die-casting, nickel-plated
Socket	Zinc die-casting, nickel-plated
Thread ring	Zinc die-casting, nickel-plated

RJ45 connector

If the network cable is routed directly into the measuring device through the cable entry, an RJ45 plug must be connected to the network cable.



Note!

An RJ45 plug does **not** form part of the delivery.

Cable entries

- Cable entry M20 × 1.5 (8 to 12 mm)
- Threads for cable entries, 1/2" NPT, G 1/2"

Grounding and shielding

If the EtherNet/IP cable is routed directly into the measuring device through the cable entry (a fieldbus connector is not used), correct grounding and shielding must be ensured. This is required to guarantee electromagnetic compatibility (EMC). The following grounding and shielding options are available:


EMC PG cable gland

Users can ensure correct grounding of the shield at the cable entry by using a standard armored thread (PG) cable gland that meets EMC requirements.

Conduit cabling

If conduit cabling is used, both the conduit and the Ethernet cable (large area shield contact) have to be grounded at both ends.

- The shield of the Ethernet cable must be grounded at the entrance to the cabinet.
- The conduit must be electrically connected to the transmitter housing and the cabinet.

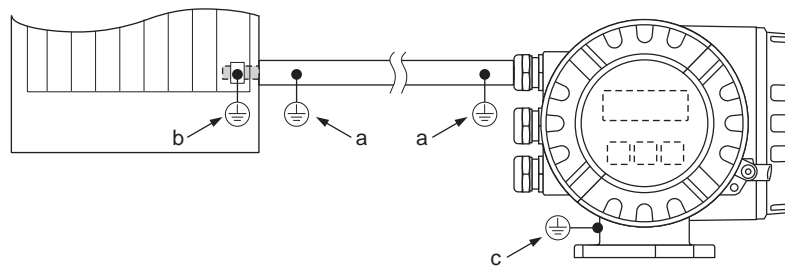

Ground connections necessary if using a conduit

- a* Ground connections on the conduit
- b* Ground connection at the entrance to the cabinet
- c* Ground connection at the measuring device

Webserver

PC/laptop settings

The IP address of the Webserver (default IP address: 192.168.212.213) must be configured on the PC/laptop to establish a connection to the Webserver of the measuring device.

The Webserver can be launched using any standard Web browser.



Note!

To establish a connection, the option for using the proxy server for LAN must be disabled in the settings for the Web browser.

Configuring the IP address

Hardware addressing

The IP address of the measuring device can be configured for the EtherNet/IP network via the DIP switches for hardware addressing (see configuration of dual Ethernet module → 5). Addresses in the range from 0 to 254 are permitted (the address 255 is reserved for the broadcast address).

The IP address for software addressing is active when the device leaves the factory (default IP address: 192.168.212.212), i.e. all the DIP switches for hardware addressing are set to OFF.

Addressing and enabling hardware addressing


- Set the desired IP address using the corresponding DIP switches. This configures the last three digits (last octet) of the IP address = 192.168.212.**XXX** (see example).



Note!

The first nine decimal digits (first three octets) can only be configured via software addressing → 10.

- After 10 seconds the hardware addressing with the defined IP address is activated.

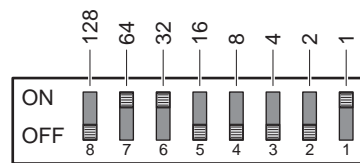

Hardware addressing (example for address 97)

DIP switch	Status	= Value configured (IP address):
8	OFF	0
7	ON	64
6	ON	32
5	OFF	0
4	OFF	0
3	OFF	0
2	OFF	0
1	ON	1
		97 = 192.168.212. 97



Note!

The IP address set via the hardware addressing function can be visualized using the Webserver. A warning appears in the "Network Configuration" menu indicating that hardware addressing is active and which IP address has been set. Example of hardware addressing with IP address 5:

IP Settings EtherNet/IP

DHCP	<input type="checkbox"/>
IP-Address	192.168.212.5
Netmask	255.255.255.0
Gateway	192.168.212.212
Submit	

Warning: DIP SW1 active, last byte of the EtherNet/IP Address ist fixed to 5!

Disabling hardware addressing and activating software addressing

Switch all the DIP switches for hardware addressing to OFF.

Software addressing

Software addressing is performed in the "Network Configuration" menu of the Webserver. Both the IP address for the Webserver and the IP address for the EtherNet/IP network can be configured.

The measuring device has the following default addresses when delivered:

	EtherNet/IP network	Webserver
IP address	192.168.212.212	192.168.212.213
Netmask	255.255.255.0	255.255.255.0
Gateway	192.168.212.212	192.168.212.213

Addresses in the range from 0 to 254 are permitted (the address 255 is reserved for the broadcast address).

The image shows two screenshots of the configuration interface. The top one is titled 'IP Settings Webserver' and the bottom one is 'IP Settings EtherNet/IP'. Both have a 'DHCP' checkbox that is unchecked. The 'IP Address', 'Netmask', and 'Gateway' fields are filled with the values shown in the table above.

Software addressing via the "Network Configuration" menu



Note!

- Software addressing is disabled if hardware addressing is activated → 9.
- When changing from software addressing to hardware addressing, the first nine digits (first three octets) that were configured using software addressing, remain unchanged.
- A reset of the software addressing to the default setting is possible → 6.

DHCP client

If a DHCP server is used within the EtherNet/IP network, the IP address, gateway and subnet mask are set automatically when the DHCP client function is enabled. The MAC address of the measuring device is used for identification purposes (see also the connection label on → 4).

The DHCP client function is enabled in the "Network Configuration" menu.

The measuring device has the following DHCP default settings when delivered:

	EtherNet/IP network	Webserver
DHCP	Yes (enabled)	No (disabled)




Note!

The DHCP client function is disabled if hardware addressing is enabled → 9.

Local operation

The address configuration for the measuring device is displayed via the local display.

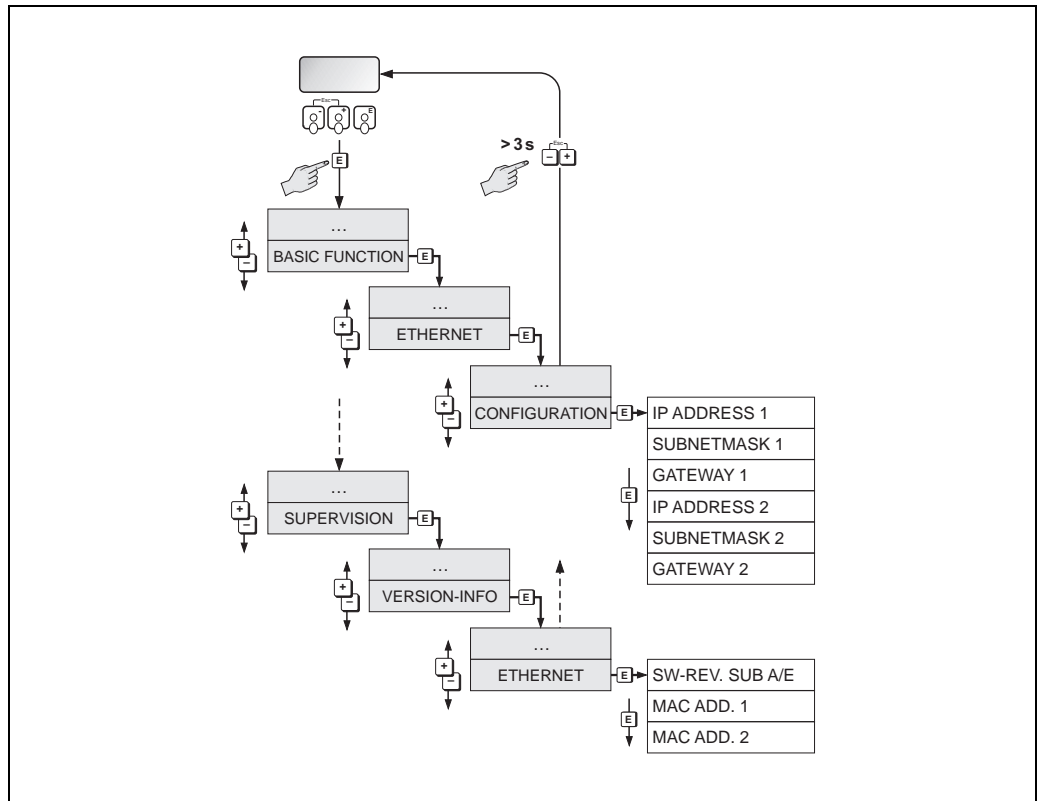

Displaying the address configuration via the local display

The individual addressing parameters are assigned as follows:











Parameter	Assignment
IP ADDRESS 1	EtherNet/IP network
SUBNETMASK 1	
GATEWAY 1	
MAC ADD. 1	Webserver
IP ADDRESS 2	
SUBNETMASK 2	
GATEWAY 2	
MAC ADD. 2	

Webserver menus

Overview of the Webserver menus

Promass 83 - Ethernet - Info					
Info	User Management		Parameter Up-/Download	Ethernet Diagnostic	Endress+Hauser
Overview	Network Configuration	Data Map	Device Config	Firmware Update	Login

The Webserver has the following menus:

Info	Displaying the serial number of the device, EtherNet HW and communication status →  13
User Management	For assigning access authorization to the Webserver →  12
Parameter Up-/Download	Loading resp. saving of the device parameter →  17
Ethernet Diagnostics	Displaying the Ethernet Diagnostics values →  16
Endress+Hauser	Link to the Endress+Hauser homepage
Overview	Information on the measuring device, the status and displaying measured values →  13
Network Configuration	Configuration of the network →  14
Data Map	Displaying the input and output values for EtherNet/IP data transmission →  15
Device Config	Configuration of the parameters of the measuring device →  17
Firmware Update	Update to the firmware of the dual Ethernet module →  17
Login	For enabling access to the Webserver →  12

Login

Enabling access to the Webserver.




Webserver login

Configuration when delivered:

- User: admin
- Password: admin



Note!

We recommend that you change the password for the administrator after configuring the user rights (see "User Management" Webserver menu →  12).

User Management

Configuration of the access authorization for individual users or user groups (user name) and the related password. Select the individual categories (Firmware Update, Network Config etc.) to enable these menus for the users or user groups.

Network Configuration

- Assigning a tag name to the measuring device.
- Activating the DHCP client function for the EtherNet/IP network and the Webserver
- Address configuration: IP settings for the EtherNet/IP network and the Webserver
- Uploading the device-specific EDS (Electronic Data Sheet) file for integrating the measuring device into a network

The screenshot shows a web-based configuration interface with the following sections:

- Device Settings:** A text input field for 'Tag'.
- IP Settings Webserver:** A checkbox for 'DHCP' (unchecked), and input fields for 'IP Address' (192.168.212.213), 'Netmask' (255.255.255.0), and 'Gateway' (0.0.0.0).
- IP Settings EtherNet/IP:** A checkbox for 'DHCP' (checked), and input fields for 'IP Address' (192.168.212.212), 'Netmask' (255.255.255.0), and 'Gateway' (0.0.0.0).
- Buttons:** 'Load EDS File' (with a tooltip 'Load EDS File for system integration') and 'Submit'.

Network Configuration menu

Tag

A tag name can be entered for the measuring device or the measuring point. The tag also appears in the "Overview" menu. Possible entries: max. 32-digit text (A-Z, 0-9, +, -, punctuation marks).

DHCP client

The IP address, gateway and netmask are set automatically if the DHCP client function is enabled for the Web server or the EtherNet/IP network. The MAC address of the measuring device is used for identification purposes (see also the connection label on → 4). When the device leaves the factory, the DHCP client function is enabled for the EtherNet/IP network and disabled for the Webserver.

IP settings

The IP address, the netmask and the gateway can be entered for the Webserver and the EtherNet/IP network via the IP settings. The measuring device has the following default addresses when delivered:

	EtherNet/IP network	Webserver
IP address	192.168.212.212	192.168.212.213
Netmask	255.255.255.0	255.255.255.0
Gateway	192.168.212.212	192.168.212.213

Submit

Clicking the "Submit" button sends all the settings and entries of the "Network Configuration" menu to the measuring device.

Load EDS File

The EDS file that is needed to integrate the measuring device into an EtherNet/IP network can be downloaded from the measuring device to the PC/laptop using the "Load EDS File" button.

Data Map

Displays the input and output values for EtherNet/IP data transmission and related information:

- Position number
- Description (1)
- Register number
- Current input and output values
- Description (2)
- Data type
- Description (3)

Subdivision of the Data Map:

- Pos. 1 to 10 = input values (sent by the measuring device to the controller)
- Pos. 11 to 16 = output values (sent by the controller to the measuring device)

Pos.	Description	Register	Value	Description	Data Type	Description	
1	Mass Flow	2007	131.4044		Input Float	Mass Flow	Edit
2	Volume Flow	2009	0.0217		Input Float	Volume Flow	Edit
3	Cor.Volume Flow	2011	3.5841		Input Float	Corrected Volume Flow	Edit
4	Density	2013	0.9965		Input Float	Density	Edit
5	Ref.Density	2015	0.9983		Input Float	Reference Density	Edit
6	Temperature	2017	74.5217		Input Float	Temperature	Edit
7	Totalisator 1	2610	4852438.5000		Input Float	Totalisator 1	Edit
8	Totalisator 2	2810	54106.6641		Input Float	Totalisator 2	Edit
9	Totalisator 3	3010	0.0000		Input Float	Totalisator 3	Edit
10	System Condition	6859	1	1 = System OK	Input Integer	Actual System Condition	Edit
11	Reset Tot 1	2608	0	0_1_0 Edges	Output Integer	Reset Tot 1	Edit
12	Reset Tot 2	2808	0	0_1_0 Edges	Output Integer	Reset Tot 2	Edit
13	Reset Tot 3	3008	0	0_1_0 Edges	Output Integer	Reset Tot 3	Edit
14	Not Used	0	0		Output Integer		Edit
15	Not Used	0	0		Output Integer		Edit
16	Not Used	0	0		Output Integer		Edit

Data Map menu

Input and output values

The sequence and number of input and output values for EtherNet/IP data transmission are displayed via the Data Map (configuration of the Data Map via Webserver → 18). The Data Map is configured as follows when the measuring device leaves the factory:

Pos.	Parameter	Register	Input/output values
1	Mass flow	2007	Input values The input values are sent by the measuring device to the controller.
2	Volume flow	2009	
3	Corrected volume flow	2011	
4	Density	2013	
5	Corrected density	2015	
6	Temperature	2017	
7	Totalizer 1	2610	
8	Totalizer 2	2810	
9	Totalizer 3	3010	
10	Actual system condition	6859	
11	Reset totalizer 1	2608	Output values The output values are sent by the controller to the measuring device.
12	Reset totalizer 2	2808	
13	Reset totalizer 3	3008	
14	–	0	
15	–	0	
16	–	0	

Ethernet Diagnostics


Displaying the Ethernet Diagnostics values.

Ethernet Port 1		
Link Status:	Active	
Media Speed:	100 Mbps	
Duplex:	Full Duplex	
Autonegotiate Status:	Successfully negotiated speed and duplex	
Ethernet Port 2		
Link Status:	Inactive	
Media Speed:	Unknown	
Duplex:	Unknown	
Autonegotiate Status:	Autonegotiation in progress	
CIP Connection Statistics		
Active Explicit Msg Connections:	0	
Explicit Msg Connections Supported:	20	
Total Explicit Msg Connections Observed:	0	
Active I/O Connections:	0	
I/O Connections Supported:	10	
Total I/O Connections Observed:	0	
Conn Open Requests:	0	
Open Request Errors:	0	
Conn Close Requests:	0	
Close Request Errors:	0	
Conn Timeouts:	0	
TCP Connection Statistics		
Active TCP Connections:	0	
TCP Connections Supported:	10	
Total TCP Connections Observed:	0	
CIP Explicit Messaging Statistics		
Connected Messages Sent:	0	
Connected Messages Received:	0	
Unconnected Messages Sent:	0	
Unconnected Messages Received:	0	
CIP I/O Messaging Statistics		
	Packets/Second	Total
Messages Sent:	0	0
Messages Received:	0	0
Messages Inhibited:	0	0
Messages Rejected:	0	0
Messages Missed:	0	0
Sum (Sent + Recv + Inhib + Rejc):	0	0
I/O Packet Capacity:	500	
Theoretical reserve I/O Capacity:	500	
Actual reserve I/O Capacity:	500	

EtherNet Diagnostics menu

Device Configuration

- Configuration of the parameters of the measuring device
- Show any system or process errors on the display
- Direct access to individual parameters of the measuring device

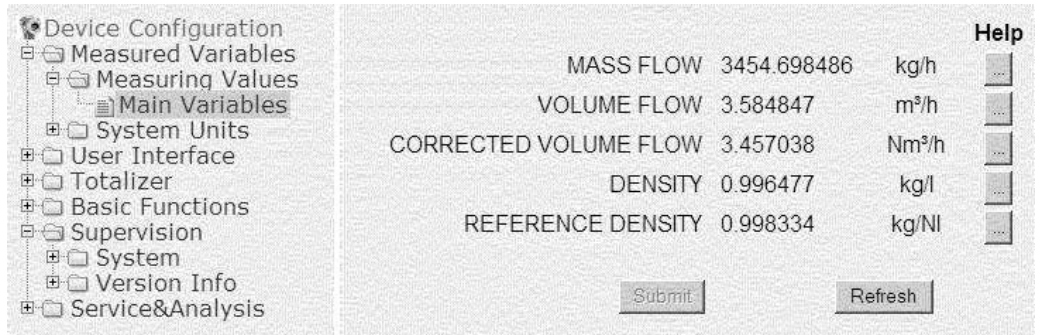

"Device Configuration" menu

Firmware Update

The Ethernet module's firmware can be updated via this menu. The latest firmware file can be obtained from www.endress.com.




Note!

The device software (amplifier, I/O module) is updated via the FXA193 service interface using the Flow Device FXA193/291 DTM and the FieldCare plant asset management tool.

Parameter Up-/Download

Use this function to save the configuration parameter from the device or upload the configuration parameter to the device.

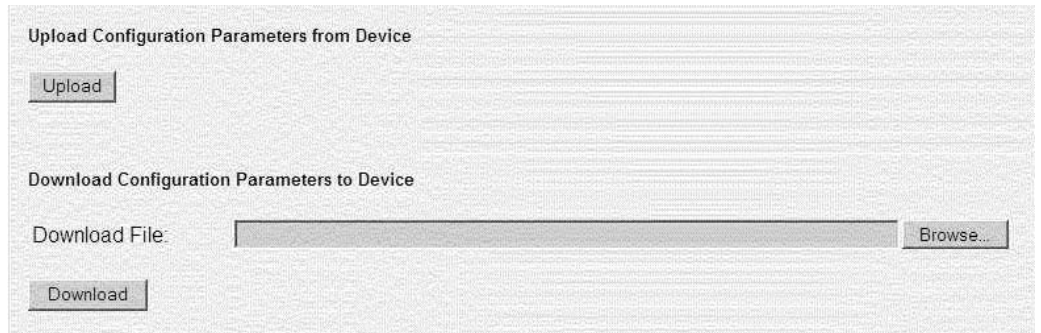

"Up-/Download" menu

Technical data

The device supported the full duplex mode. Cyclic time: 3 ms (RPI Range)


Configuring the Data Map via the Webserver

The input and output values for EtherNet/IP data transmission and related information are displayed in the Data Map (Data Map → 15). The order and number of the input and output values can be adapted for EtherNet/IP data transmission. Write access to the related parameters has to be enabled to configure the Data Map (Login → 12).

1. Open the "**Device Config**" menu in the Webserver.

Promass 83 - Ethernet - Info					
Info	User Management		Parameter Up-/Download	Ethernet Diagnostic	Endress+Hauser
Overview	Network Configuration	Data Map	Device Config	Firmware Update	Login

2. Open "**Basic functions**" → "**Additional Config.**" → "**Configuration**" in the "**Device Config**" menu.

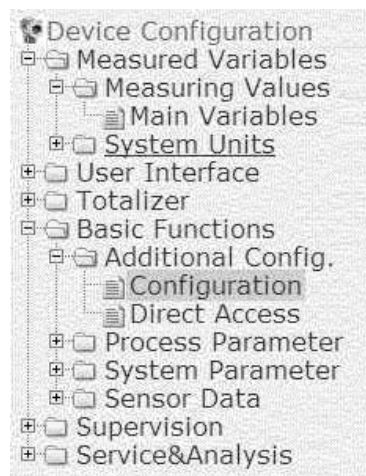

3. Scroll down until you come to the **SCAN LIST REG. 1** parameter.

SCAN LIST REG. 1	2007
SCAN LIST REG. 2	2009
SCAN LIST REG. 3	2011
SCAN LIST REG. 4	2013
SCAN LIST REG. 5	2015
SCAN LIST REG. 6	2017
SCAN LIST REG. 7	2610
SCAN LIST REG. 8	9503
SCAN LIST REG. 9	9505
SCAN LIST REG. 10	6859
SCAN LIST REG. 11	2608
SCAN LIST REG. 12	2808
SCAN LIST REG. 13	3008
SCAN LIST REG. 14	0
SCAN LIST REG. 15	0
SCAN LIST REG. 16	0

The parameters SCAN LIST REG. 1 to 16 stand for the particular row (position) 1-16 in the Data Map. The Data Map is configured as follows when the measuring device leaves the factory:

Parameter in Additional Settings, related register = position (row) in the Data Map			Value configuration when delivered (an input or output value is assigned to the position in question)	
Parameter	Register	Pos. in Data Map	Value = Register for	Input/output value
SCAN LIST REG. 1	5001	Row 1	2007 = Mass flow	Input values*
SCAN LIST REG. 2	5002	Row 2	2009 = Volume flow	
SCAN LIST REG. 3	5003	Row 3	2011 = Corrected volume flow	
SCAN LIST REG. 4	5004	Row 4	2013 = Density	
SCAN LIST REG. 5	5005	Row 5	2015 = Corrected density	
SCAN LIST REG. 6	5006	Row 6	2017 = Register temperature	
SCAN LIST REG. 7	5007	Row 7	2610 = Totalizer 1	
SCAN LIST REG. 8	5008	Row 8	2810 = Totalizer 2	
SCAN LIST REG. 9	5009	Row 9	3010 = Totalizer 3	
SCAN LIST REG. 10	5010	Row 10	6859 = Actual system condition	
SCAN LIST REG. 11	5011	Row 11	2608 = Reset totalizer 1	Output values*
SCAN LIST REG. 12	5012	Row 12	2808 = Reset totalizer 2	
SCAN LIST REG. 13	5013	Row 13	3008 = Reset totalizer 3	
SCAN LIST REG. 14	5015	Row 14	0 = -	
SCAN LIST REG. 15	5016	Row 15	0 = -	
SCAN LIST REG. 16	5017	Row 16	0 = -	

* Input and output value from the point of view of the higher-order controller

- The mass flow appears in the first row (Pos. 1) in the Data Map, i.e. this input value is the first value to be sent to the higher-order controller via EtherNet/IP data transmission. The system can continue to describe the individual input or output value in the Data Map → 15

Pos.	Description	Register	Value	Description	Data Type	Description	
1	Massflow	2007	3547.8340		Input Float	Massflow	Edit



Note!

The Data Map can be configured via the "Device Config" menu (by entering the Register and Value → 17).

Integrating into a control system

Electronic data sheet file (EDS)


The EDS file required for the installation can be loaded directly from the device via the Webserver ("Network Configuration" menu, Load EDS File → 14). Alternatively, the file can also be downloaded from the Endress+Hauser Website (www.endress.com).

Integration into a Rockwell Automation control system

Integration into the Rockwell Automation control system RSLinx5000.

Installing the electronic data sheet file (EDS)

The file is installed via the "EDS Hardware Installation Tool" in the "RSLinx" menu.

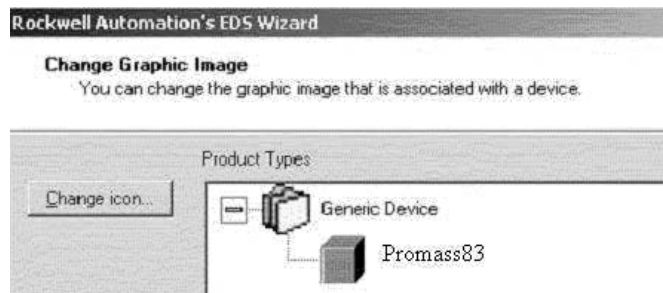


Installation Add On Profile (AOP) incl. EDS


The AOP Level 3 file (incl. EDS file) required for the installation can be loaded directly from the Endress+Hauser Website (www.endress.com).

Implementation in the Rockwell EtherNet/IP architecture


1. Select the Ethernet Network in the "Controller Organizer" under I/O Configuration → EtherNet/IP → Ethernet. Click the right mouse button and select "New Module...".

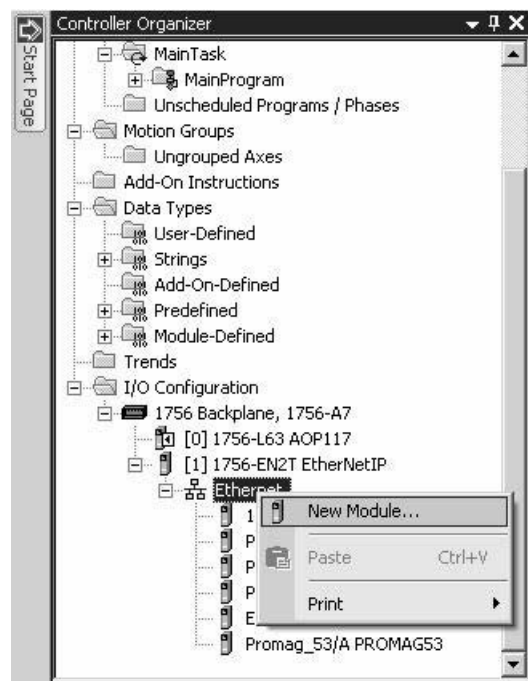


- Choose the desired device. The window "New Module" will open automatically.

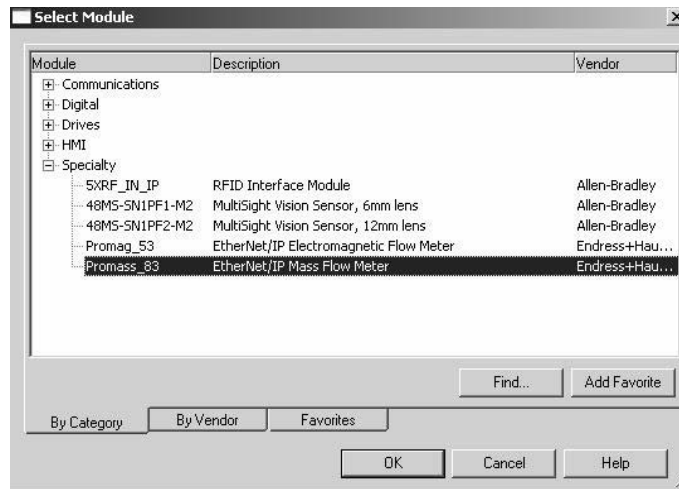


- Adapt the details for "Name" and "Ethernet Address" in register "General" in the "New Module" window.

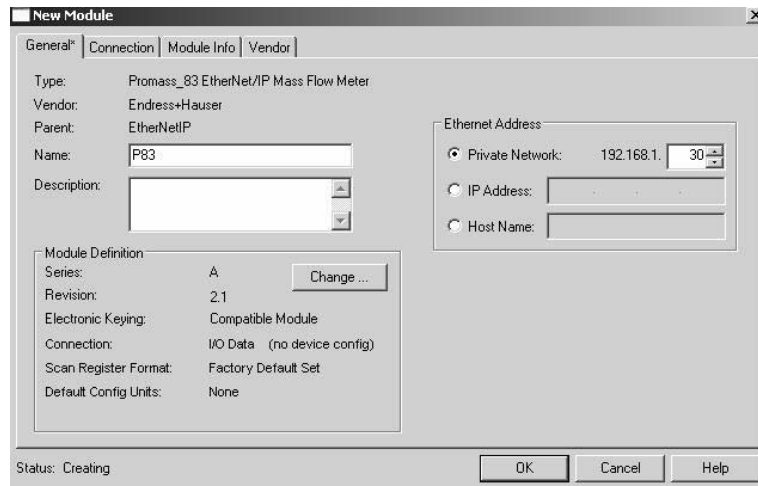


- Open the "Module Definition" window by using the button "Change":
 - under "Connection" choose the specification "I/O Data (with config)". With this selection the inputs, outputs and also the device configuration will be used.
 - under "Scan register format" choose the specification "Factory Default Set". With this selection the settings as supplied to customer will be used. Alternative the specification "Customer User Set" can be selected, to allow customer specific settings of the measuring value transmissions (Communication → 23, Pt. 9).
 - under "Default Config Units" choose the desired format for the units.

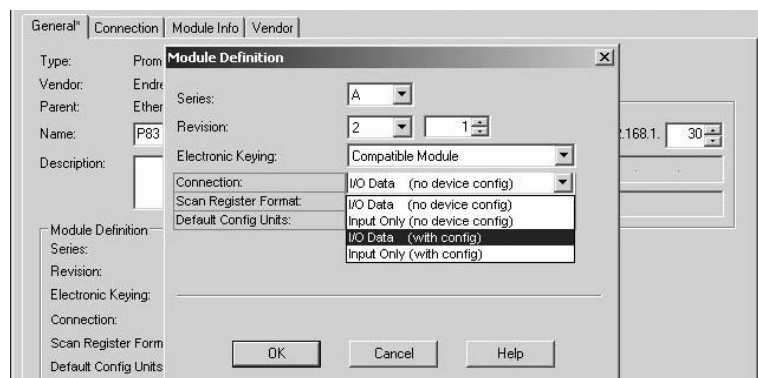


- Switch to register "Connection" and activate the "Major Fault On If Connection Fails While in Run Mode".

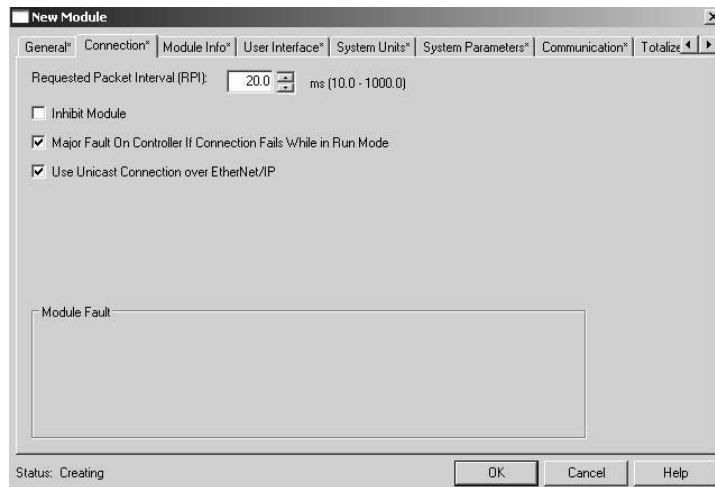


- Switch to register "User Interface". Examine the settings and change them if necessary.

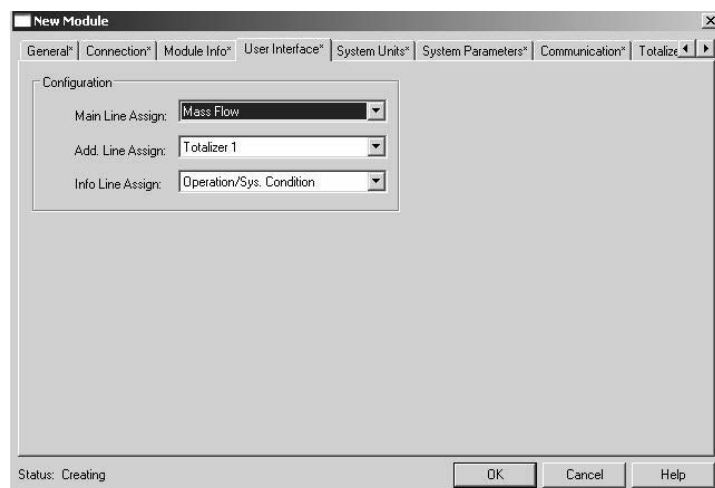

- Switch to register "System Units". Examine the settings and change them if necessary.

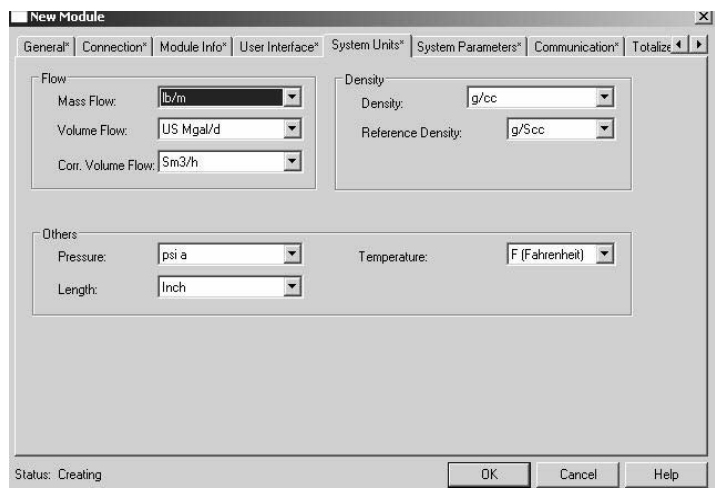


8. Switch to register "System Parameters". Examine the settings and change them if necessary.

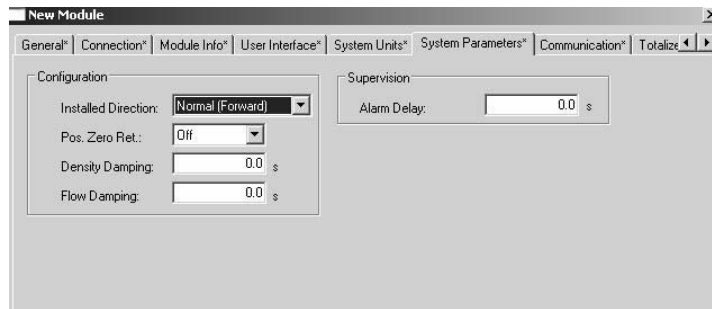


9. Switch to register "Communication". Examine the settings and change them if necessary.

Note!


The register "Communication" is only available, if the specification "Customer User Set" is selected in the "Module Definition" under "Scan register format" → 21, Pt. 4. If the specification "Factory Default Set" is selected, the register "Communication" isn't displayed. However, the settings are readable via WebSever.

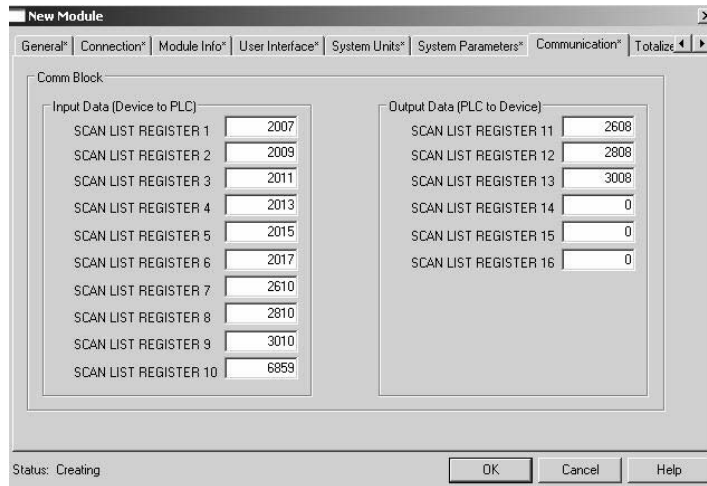

10. Switch to register "Totalizer (1...3)". Examine the settings and change them if necessary. Use the button 1, 2 or 3 to select the specific totalizer.

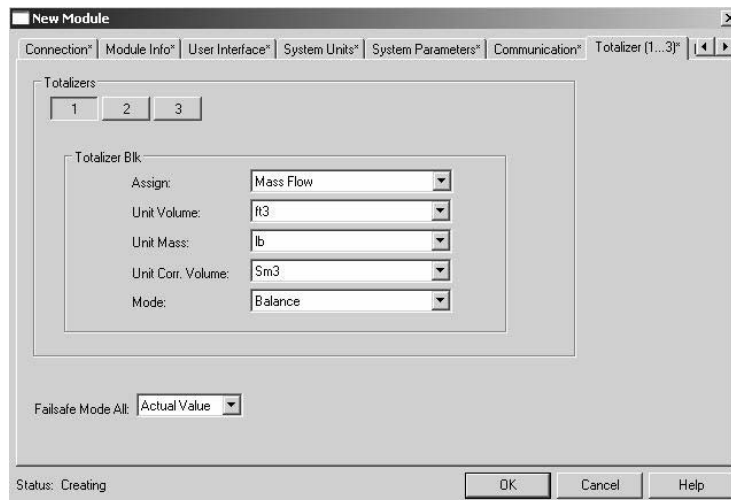


- Switch to register "Processparameter". Examine the settings and change them if necessary.

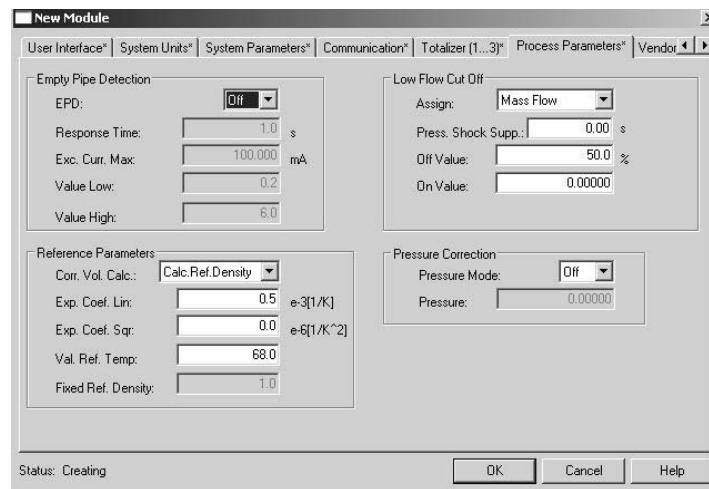

- Additional information about the device will be displayed in the register "Vendor".




- At that time, information about the device won't be displayed in register "Module Info". This display occurs not until the download of the settings is executed in online mode.

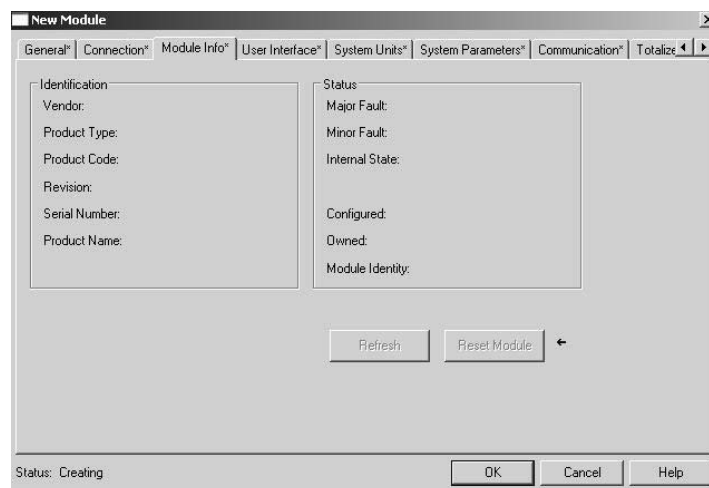


Download the settings

1. Download the settings with the command "Download" under the "Communications" menu.

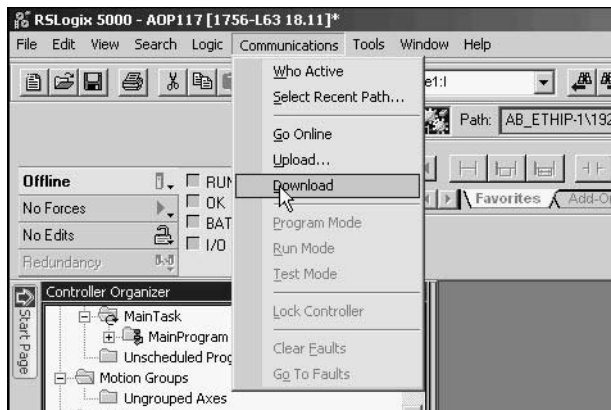


2. Choose the device in the "Controller Organizer" window. Now the information about the device will be shown in the register "Module Info".

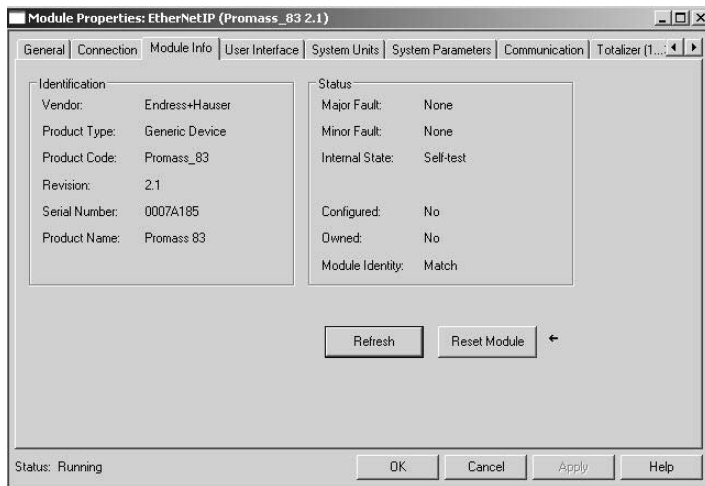

Displaying the measured, input and output values in online mode

Open the "Controller Tags" window with the command "Monitor Tags" under the "Logic" menu.

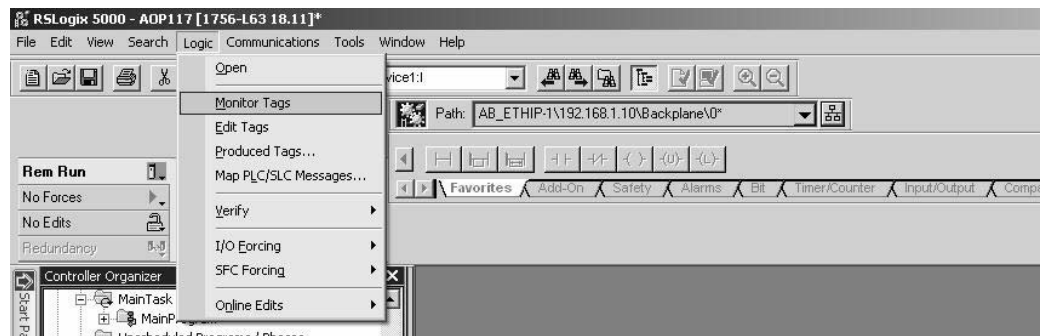

Search for your device in the "Controller Tags" window. Under the name extension:

- "Device name: C" the configuration parameters are displayed
- "Device name: O" the output values are displayed
- "Device name: I" the input values are displayed

The "Controller Tags" window with setting "Factory Default Set" in the "Module Definition" → 21

The screenshot shows the 'Controller Tags - AOP117(controller)' window. The 'Scope' is set to 'AOP117' and 'Show' is set to 'All Tags'. The table below lists the tags and their values for the 'Factory Default Set' configuration.

Name	Value	Force Mask	Style
p53:I	{...}	{...}	
p53:O	{...}	{...}	
P83:C	{...}	{...}	
P83:I	{...}	{...}	
P83:I.Mass_Flow	132.45358		Float
P83:I.Volume_Flow	0.022328261		Float
P83:I.Corrected_Volume_Flow	3.525544		Float
P83:I.Density	0.99652845		Float
P83:I.Corrected_Density	0.9983866		Float
P83:I.Temperature	74.71268		Float
P83:I.Totalizer1	4340583.5		Float
P83:I.Totalizer2	4340543.0		Float
P83:I.Totalizer3	1550209.0		Float
P83:I.Actual_System_Condition	1		Decim
P83:O	{...}	{...}	
P83:O.Reset_Totalizer1	0		Decim
P83:O.Reset_Totalizer2	0		Decim
P83:O.Reset_Totalizer3	0		Decim

The "Controller Tags" window with setting "Customer User Set" in the "Module Definition" → 21

The screenshot shows the 'Controller Tags - AOP117(controller)' window. The 'Scope' is set to 'AOP117' and 'Show' is set to 'All Tags'. The table below lists the tags and their values for the 'Customer User Set' configuration.

Name	Value	Force Mask	Style
P83:C	{...}	{...}	
P83:I	{...}	{...}	
P83:I.Scan_List_Reg_1	131.93427		Float
P83:I.Scan_List_Reg_2	0.023379022		Float
P83:I.Scan_List_Reg_3	3.473679		Float
P83:I.Scan_List_Reg_4	0.99647367		Float
P83:I.Scan_List_Reg_5	0.9983312		Float
P83:I.Scan_List_Reg_6	74.7106		Float
P83:I.Scan_List_Reg_7	4340339.5		Float
P83:I.Scan_List_Reg_8	4340300.5		Float
P83:I.Scan_List_Reg_9	1550209.0		Float
P83:I.Scan_List_Reg_10	1		Decim
P83:O	{...}	{...}	
P83:O.Scan_List_Reg_11	0		Decim
P83:O.Scan_List_Reg_12	0		Decim
P83:O.Scan_List_Reg_13	0		Decim
P83:O.Scan_List_Reg_14	0		Decim
P83:O.Scan_List_Reg_15	0		Decim
P83:O.Scan_List_Reg_16	0		Decim

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel. +41 61 715 81 00
Fax +41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress+Hauser 
People for Process Automation