


# Description of Device Parameters

## Proline Cubemass 100

### PROFIBUS DP

Coriolis flowmeter

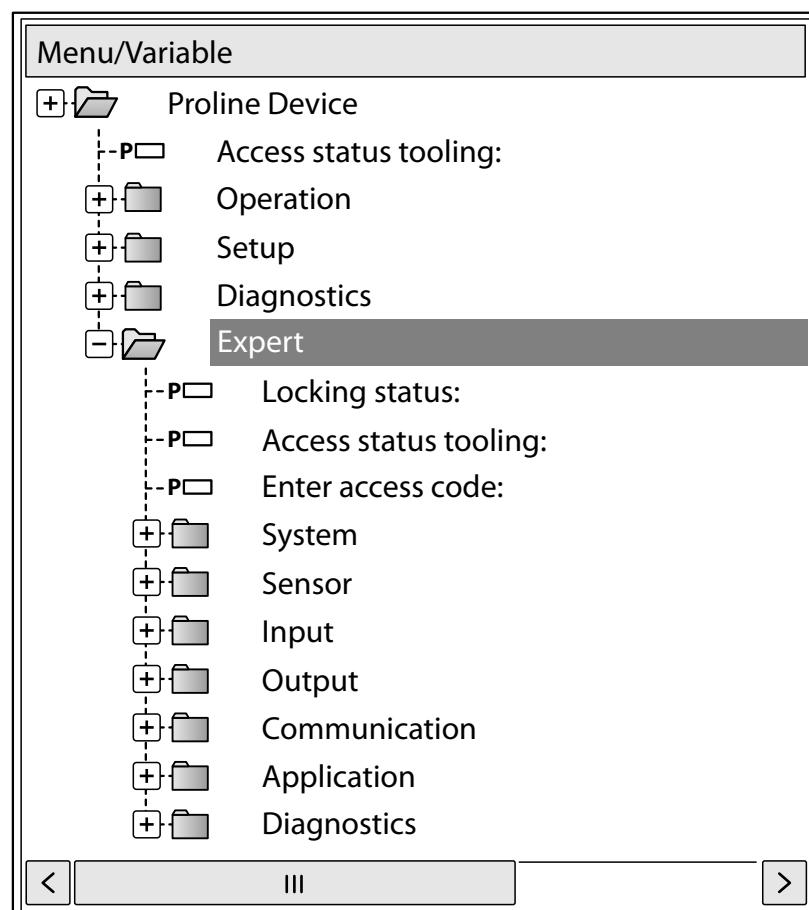



# Table of contents

<b>1 Document information .....</b>	<b>4</b>	3.9.6 "Simulation" submenu .....	166
1.1 Document function .....	4		
1.2 Target group .....	4		
1.3 Using this document .....	4		
1.3.1 Information on the document structure .....	4		
1.3.2 Structure of a parameter description .....	6		
1.4 Symbols used .....	6		
1.4.1 Symbols for certain types of information .....	6		
1.4.2 Symbols in graphics .....	7		
<b>2 Overview of the Expert operating menu .....</b>	<b>8</b>		
<b>3 Description of device parameters ...</b>	<b>10</b>		
3.1 "System" submenu .....	13		
3.1.1 "Display" submenu .....	13		
3.1.2 "Diagnostic handling" submenu .....	27		
3.1.3 "Administration" submenu .....	34		
3.2 "Sensor" submenu .....	38		
3.2.1 "Measured values" submenu .....	39		
3.2.2 "System units" submenu .....	44		
3.2.3 "Process parameters" submenu .....	52		
3.2.4 "Measurement mode" submenu .....	59		
3.2.5 "External compensation" submenu .....	61		
3.2.6 "Calculated values" submenu .....	63		
3.2.7 "Sensor adjustment" submenu .....	65		
3.2.8 "Calibration" submenu .....	72		
3.2.9 "Supervision" submenu .....	73		
3.3 "Communication" submenu .....	74		
3.3.1 "PROFIBUS DP configuration" submenu .....	74		
3.3.2 "PROFIBUS DP info" submenu .....	76		
3.3.3 "Physical block" submenu .....	78		
3.3.4 "Web server" submenu .....	87		
3.4 "Analog inputs" submenu .....	89		
3.4.1 "Analog input 1 to 8" submenu .....	90		
3.5 "Discrete inputs" submenu .....	103		
3.5.1 "Discrete input 1 to 2" submenu .....	103		
3.6 "Analog outputs" submenu .....	110		
3.6.1 "Analog output 1 to 3" submenu .....	110		
3.7 "Discrete outputs" submenu .....	122		
3.7.1 "Discrete output 1 to 3" submenu .....	122		
3.8 "Application" submenu .....	132		
3.8.1 "Totalizer 1 to 3" submenu .....	133		
3.8.2 "Concentration" submenu .....	147		
3.9 "Diagnostics" submenu .....	147		
3.9.1 "Diagnostic list" submenu .....	150		
3.9.2 "Event logbook" submenu .....	153		
3.9.3 "Device information" submenu .....	156		
3.9.4 "Min/max values" submenu .....	159		
3.9.5 "Heartbeat" submenu .....	165		
<b>4 Country-specific factory settings ..</b>	<b>169</b>		
4.1 SI units .....	169		
4.1.1 System units .....	169		
4.1.2 Full scale values .....	169		
4.1.3 On value low flow cut off .....	169		
4.2 US units .....	170		
4.2.1 System units .....	170		
4.2.2 Full scale values .....	170		
4.2.3 On value low flow cut off .....	170		
<b>5 Explanation of abbreviated units ..</b>	<b>172</b>		
5.1 SI units .....	172		
5.2 US units .....	172		
5.3 Imperial units .....	174		
<b>Index .....</b>	<b>175</b>		

# 1 Document information

## 1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.


## 1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

## 1.3 Using this document

### 1.3.1 Information on the document structure

This document lists the submenus and their parameters according to the structure of the **Expert** menu (→ 8) menu that are available once the "**Operator**" user role or the "**Maintenance**" user role is enabled.

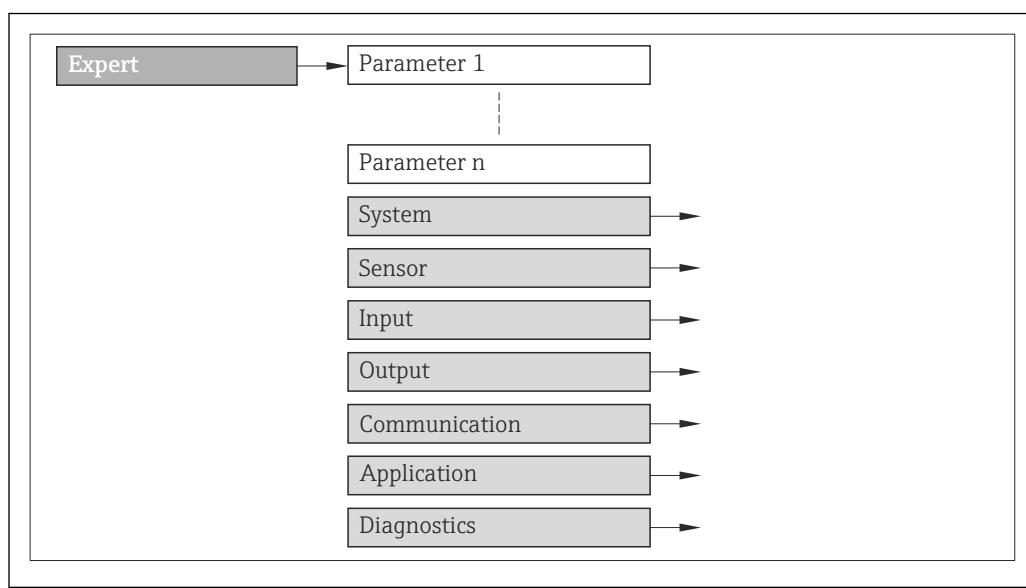


A0022576-EN

1 Sample graphic



For information on the arrangement of the parameters according to the structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu (→ 147), along with a brief description, see the Operating Instructions for the device.

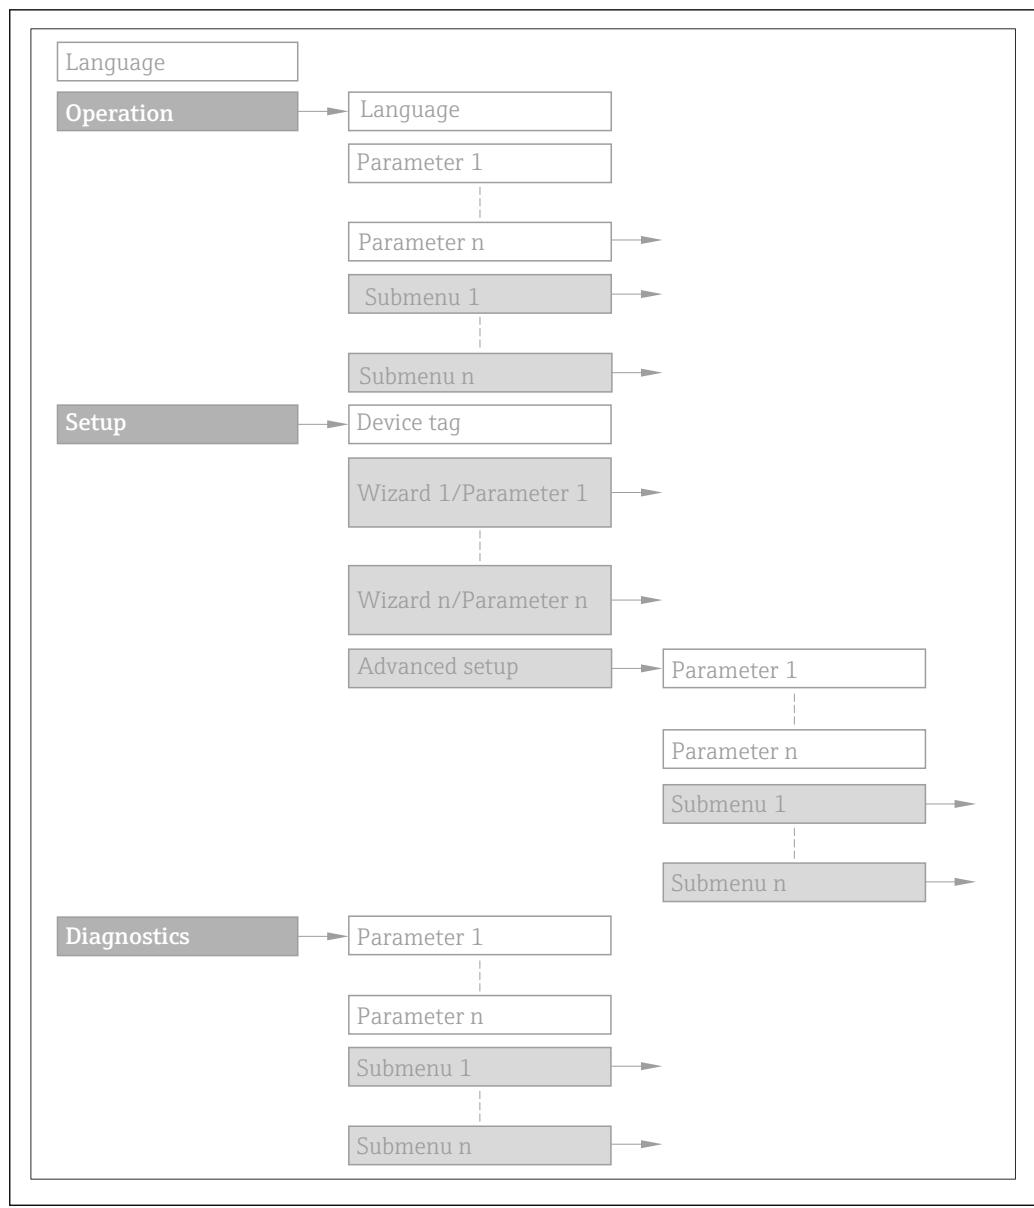

2 Sample graphic

 For information about the operating philosophy, see the "Operating philosophy" chapter in the device's Operating Instructions

### 1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter = 
<b>Navigation</b>	 Navigation path to the parameter via the local display (direct access code) or Web browser  Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
<b>Prerequisite</b>	The parameter is only available under these specific conditions
<b>Description</b>	Description of the parameter function
<b>Selection</b>	List of the individual options for the parameter <ul style="list-style-type: none"> <li>▪ Option 1</li> <li>▪ Option 2</li> </ul>
<b>User entry</b>	Input range for the parameter
<b>User interface</b>	Display value/data for the parameter
<b>Factory setting</b>	Default setting ex works
<b>Additional information</b>	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> <li>▪ On individual options</li> <li>▪ On display values/data</li> <li>▪ On the input range</li> <li>▪ On the factory setting</li> <li>▪ On the parameter function</li> </ul>

## 1.4 Symbols used

### 1.4.1 Symbols for certain types of information

Symbol	Meaning
	<b>Tip</b> Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

### 1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

## 2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

<b>Expert</b>	
Direct access	→ <a href="#">10</a>
Locking status	→ <a href="#">11</a>
Access status display	→ <a href="#">11</a>
Access status tooling	→ <a href="#">12</a>
Enter access code	→ <a href="#">13</a>
<b>System</b>	→ <a href="#">13</a>
▶ Display	→ <a href="#">13</a>
▶ Diagnostic handling	→ <a href="#">27</a>
▶ Administration	→ <a href="#">34</a>
<b>Sensor</b>	→ <a href="#">38</a>
▶ Measured values	→ <a href="#">39</a>
▶ System units	→ <a href="#">44</a>
▶ Process parameters	→ <a href="#">52</a>
▶ Measurement mode	→ <a href="#">59</a>
▶ External compensation	→ <a href="#">61</a>
▶ Calculated values	→ <a href="#">63</a>
▶ Sensor adjustment	→ <a href="#">65</a>
▶ Calibration	→ <a href="#">72</a>
▶ Supervision	→ <a href="#">73</a>

▶ Output	
▶ Current output 1	
▶ Pulse/frequency/switch output 1	
▶ Communication	→  74
▶ HART input	
▶ HART output	
▶ Web server	→  87
▶ Diagnostic configuration	
▶ Application	→  132
Reset all totalizers	
▶ Totalizer 1 to 3	→  133
▶ Concentration	→  147
▶ Diagnostics	→  147
Actual diagnostics	→  147
Previous diagnostics	→  148
Operating time from restart	→  149
Operating time	→  149
▶ Diagnostic list	→  150
▶ Event logbook	→  153
▶ Device information	→  156
▶ Min/max values	→  159
▶ Heartbeat	→  165
▶ Simulation	→  166

### 3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

⚡ Expert	
Direct access	→ 10
Locking status	→ 11
Access status display	→ 11
Access status tooling	→ 12
Enter access code	→ 13
▶ System	→ 13
▶ Sensor	→ 38
▶ Communication	→ 74
▶ Analog inputs	→ 89
▶ Discrete inputs	→ 103
▶ Analog outputs	→ 110
▶ Discrete outputs	→ 122
▶ Application	→ 132
▶ Diagnostics	→ 147

#### Direct access



##### Navigation

⌚ Expert → Direct access

##### Prerequisite

There is a local display with operating elements.

##### Description

Input of the access code to enable direct access to the desired parameter via the local display. For this reason, each parameter is assigned a parameter number that appears in the navigation view on the right in the header of the selected parameter.

##### User entry

0 to 65 535

**Additional information***User entry*

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1



- The leading zeros in the direct access code do not have to be entered.  
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.  
Example: Enter 0914 → **Assign process variable** parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.  
Example: Enter 0914-3 → **Assign process variable** parameter

**Locking status****Navigation**

Expert → Locking status

**Description**

Use this function to view the active write protection.

**User interface**

- Hardware locked
- Temporarily locked

**Additional information***User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display.

In the operating tool all active types of write protection are selected.



If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→ 11).

*"Hardware locked" option (priority 1)*

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters (e.g. via local display or operating tool).



Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

*"Temporarily locked" option (priority 2)*

Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

**Access status display****Navigation**

Expert → Access stat.disp

**Prerequisite**

A local display is provided.

**Description**

Use this function to view the access authorization to the parameters via the local display.

User interface	<ul style="list-style-type: none"><li>▪ Operator</li><li>▪ Maintenance</li></ul>
Factory setting	Operator
Additional information	<p><i>Description</i></p> <p>If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.</p> <p> The access authorization can be modified via the <b>Enter access code</b> parameter.</p> <p> For information on the <b>Enter access code</b> parameter, see the "Disabling write protection via access code" section of the Operating Instructions for the device</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  11).</p>
	<p><i>User interface</i></p> <p> Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.</p>

---

## Access status tooling

---

Navigation	  Expert → Access stat.tool
Description	Use this function to view the access authorization to the parameters via the operating tool.
User interface	<ul style="list-style-type: none"><li>▪ Operator</li><li>▪ Maintenance</li></ul>
Factory setting	Maintenance
Additional information	<p><i>Description</i></p> <p> The access authorization can be modified via the <b>Enter access code</b> parameter.</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  11).</p>
	<p><i>Display</i></p> <p> Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.</p>


**Enter access code****Navigation**
  Expert → Ent. access code
**Description**

Use this function to enter the user-specific release code to remove parameter write protection.


**User entry**

0 to 9 999

### 3.1 "System" submenu

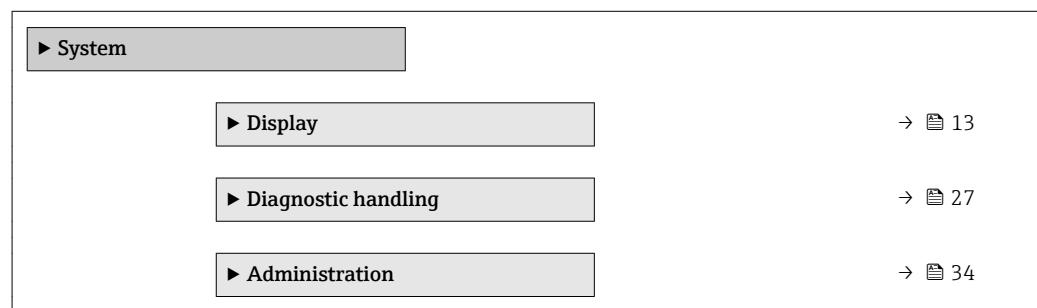*Navigation*
  Expert → System


#### 3.1.1 "Display" submenu

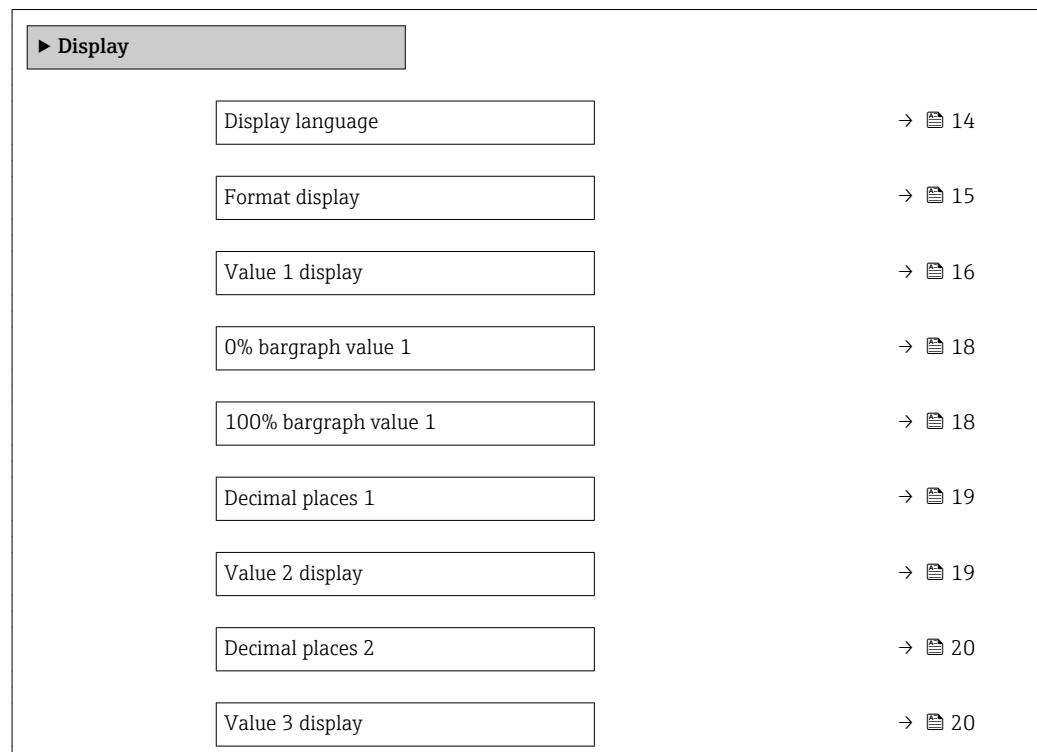*Navigation*
  Expert → System → Display


0% bargraph value 3	→  21
100% bargraph value 3	→  21
Decimal places 3	→  22
Value 4 display	→  22
Decimal places 4	→  23
Display interval	→  23
Display damping	→  23
Header	→  24
Header text	→  24
Separator	→  25
Contrast display	→  25
Backlight	→  26
Access status display	→  26

## Display language

### Navigation

Expert → System → Display → Display language

### Prerequisite

A local display is provided.

### Description

Use this function to select the configured language on the local display.

### Selection

- English
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык (Russian) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*

\* Visibility depends on order options or device settings

- 한국어 (Korean) \*
- Bahasa Indonesia \*
- tiếng Việt (Vietnamese) \*
- čeština (Czech) \*

**Factory setting** English (alternatively, the ordered language is preset in the device)

## Format display

**Navigation**  Expert → System → Display → Format display

**Prerequisite** A local display is provided.

**Description** Use this function to select how the measured value is shown on the local display.

- Selection**
- 1 value, max. size
  - 1 bargraph + 1 value
  - 2 values
  - 1 value large + 2 values
  - 4 values

**Factory setting** 1 value, max. size

**Additional information** *Description*

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.

-  ■ The **Value 1 display** parameter (→ 16)...**Value 4 display** parameter (→ 22) parameters are used to specify which measured values are shown on the display and in which order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter (→ 23) parameter.

Possible measured values shown on the local display:


"1 value, max. size" option



A0016529


\* Visibility depends on order options or device settings

"1 bargraph + 1 value" option

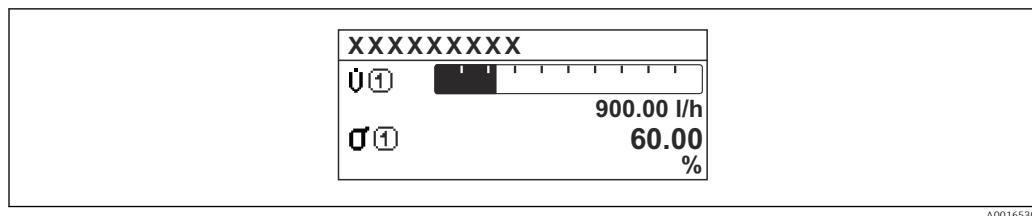

A0016530


"2 values" option

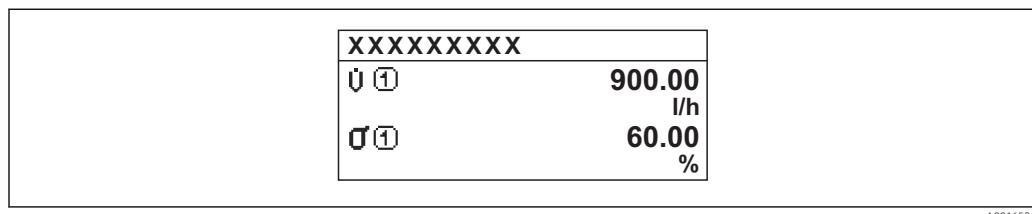

A0016531


3

"1 value large + 2 values" option

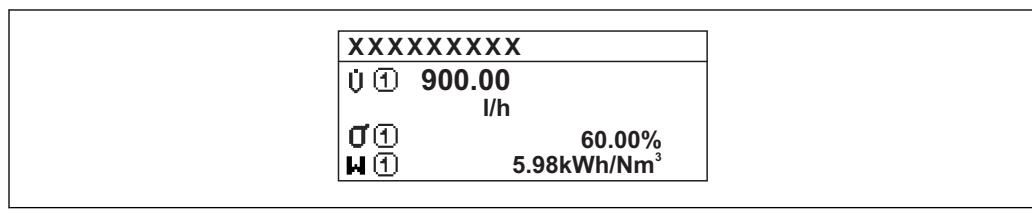

A0016532

"4 values" option

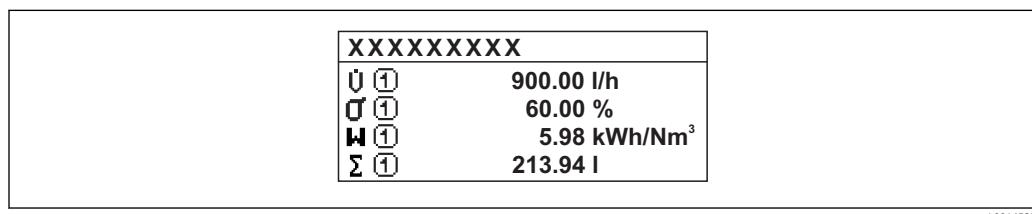

A0016533

## Value 1 display



### Navigation

Expert → System → Display → Value 1 display

### Prerequisite

A local display is provided.

### Description

Use this function to select one of the measured values to be shown on the local display.

### Selection

- Mass flow
- Volume flow
- Corrected volume flow

- Target mass flow \*
- Carrier mass flow \*
- Density
- Reference density
- Concentration
- Temperature
- Carrier pipe temperature \*
- Electronic temperature
- Oscillation frequency 0
- Frequency fluctuation 0
- Oscillation amplitude 0 \*
- Frequency fluctuation 0
- Oscillation damping 0
- Tube damping fluctuation 0
- Signal asymmetry
- Exciter current 0
- None
- Totalizer 1
- Totalizer 2
- Totalizer 3

**Factory setting** Mass flow

**Additional information** *Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

*Selection*

 The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

■ Oscillation frequency

Displays the current oscillation frequency of the measuring tubes. This frequency depends on the density of the medium.

■ Oscillation amplitude

Displays the relative oscillation amplitude of the measuring tubes in relation to the preset value. This value is 100 % under optimum conditions. The value can decrease in the event of low 4 to 20 mA loop currents and/or difficult media (two-phase, high viscosity or high gas velocity).

■ Oscillation damping

Displays the current oscillation damping. Oscillation damping is an indicator of the sensor's current need for excitation power.

■ Signal asymmetry

Displays the relative difference between the oscillation amplitude at the inlet and outlet of the sensor. The measured value is the result of production tolerances of the sensor coils and should remain constant over the life time of a sensor.

---

\* Visibility depends on order options or device settings

## 0% bargraph value 1



### Navigation

Expert → System → Display → 0% bargraph 1

### Prerequisite

A local display is provided.

### Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.

### User entry

Signed floating-point number

### Factory setting

Country-specific:

- 0 kg/h
- 0 lb/min

### Additional information

#### Description

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

#### User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

## 100% bargraph value 1



### Navigation

Expert → System → Display → 100% bargraph 1

### Prerequisite

A local display is provided.

### Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.

### User entry

Signed floating-point number

### Factory setting

Depends on country and nominal diameter → 169

### Additional information

#### Description

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

#### User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

---

**Decimal places 1****Navigation**

Expert → System → Display → Decimal places 1

**Prerequisite**A measured value is specified in the **Value 1 display** parameter (→ 16).**Description**

Use this function to select the number of decimal places for measured value 1.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.XX

**Additional information***Description*

- This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

---

**Value 2 display****Navigation**

Expert → System → Display → Value 2 display

**Prerequisite**

A local display is provided.

**Description**

Use this function to select one of the measured values to be shown on the local display.

**Selection**Picklist, see **Value 1 display** parameter (→ 16)**Factory setting**

None

**Additional information***Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.

- The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

*Selection*

- The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

## Decimal places 2



### Navigation

Expert → System → Display → Decimal places 2

### Prerequisite

A measured value is specified in the **Value 2 display** parameter (→ 19).

### Description

Use this function to select the number of decimal places for measured value 2.

### Selection

- x
- x.X
- x.XX
- x.XXX
- x.XXXX

### Factory setting

x.XX

### Additional information

#### Description

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

## Value 3 display



### Navigation

Expert → System → Display → Value 3 display

### Prerequisite

A local display is provided.

### Description

Use this function to select one of the measured values to be shown on the local display.

### Selection

Picklist, see **Value 1 display** parameter (→ 16)

### Factory setting

None

### Additional information

#### Description

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

#### Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

## 0% bargraph value 3



<b>Navigation</b>	Expert → System → Display → 0% bargraph 3
<b>Prerequisite</b>	A selection has been made in the <b>Value 3 display</b> parameter (→ <a href="#">20</a> ).
<b>Description</b>	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	Country-specific: ■ 0 kg/h ■ 0 lb/min
<b>Additional information</b>	<i>Description</i> The <b>Format display</b> parameter (→ <a href="#">15</a> ) is used to specify that the measured value is to be displayed as a bar graph.  <i>User entry</i> The unit of the displayed measured value is taken from the <b>System units</b> submenu (→ <a href="#">44</a> ).

## 100% bargraph value 3



<b>Navigation</b>	Expert → System → Display → 100% bargraph 3
<b>Prerequisite</b>	A selection was made in the <b>Value 3 display</b> parameter (→ <a href="#">20</a> ).
<b>Description</b>	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i> The <b>Format display</b> parameter (→ <a href="#">15</a> ) is used to specify that the measured value is to be displayed as a bar graph.  <i>User entry</i> The unit of the displayed measured value is taken from the <b>System units</b> submenu (→ <a href="#">44</a> ).

## Decimal places 3



### Navigation

Expert → System → Display → Decimal places 3

### Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 20).

### Description

Use this function to select the number of decimal places for measured value 3.

### Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

### Factory setting

X.XX

### Additional information

#### Description

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

## Value 4 display



### Navigation

Expert → System → Display → Value 4 display

### Prerequisite

A local display is provided.

### Description

Use this function to select one of the measured values to be shown on the local display.

### Selection

Picklist, see **Value 1 display** parameter (→ 16)

### Factory setting

None

### Additional information

#### Description

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

#### Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

---

**Decimal places 4**

---



<b>Navigation</b>	Expert → System → Display → Decimal places 4
<b>Prerequisite</b>	A measured value is specified in the <b>Value 4 display</b> parameter (→ <a href="#">22</a> ).
<b>Description</b>	Use this function to select the number of decimal places for measured value 4.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ X</li> <li>■ X.X</li> <li>■ X.XX</li> <li>■ X.XXX</li> <li>■ X.XXXX</li> </ul>
<b>Factory setting</b>	x.xx
<b>Additional information</b>	<p><i>Description</i></p> <p> This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.</p>

---

**Display interval**

---



<b>Navigation</b>	Expert → System → Display → Display interval
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to enter the length of time the measured values are displayed if the values alternate on the display.
<b>User entry</b>	1 to 10 s
<b>Factory setting</b>	5 s
<b>Additional information</b>	<p><i>Description</i></p> <p>This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.</p> <p> ■ The <b>Value 1 display</b> parameter (→ <a href="#">16</a>)...<b>Value 4 display</b> parameter (→ <a href="#">22</a>) are used to specify which measured values are shown on the display.</p> <p>■ The display format of the displayed measured values is specified using the <b>Format display</b> parameter (→ <a href="#">15</a>).</p>

---

**Display damping**

---



<b>Navigation</b>	Expert → System → Display → Display damping
<b>Prerequisite</b>	A local display is provided.

<b>Description</b>	Use this function to enter the reaction time of the local display to fluctuations in the measured value caused by process conditions.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	0.0 s
<b>Additional information</b>	<p><i>User entry</i></p> <p>A time constant is entered:</p> <ul style="list-style-type: none"> <li>▪ If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.</li> <li>▪ On the other hand, the display reacts more slowly if a high time constant is entered.</li> </ul>

**Header**

**Navigation** Expert → System → Display → Header

**Prerequisite** A local display is provided.

**Description** Use this function to select the contents of the header of the local display.


**Selection**

- Device tag
- Free text

**Factory setting** Device tag

**Additional information** *Description*

The header text only appears during normal operation.

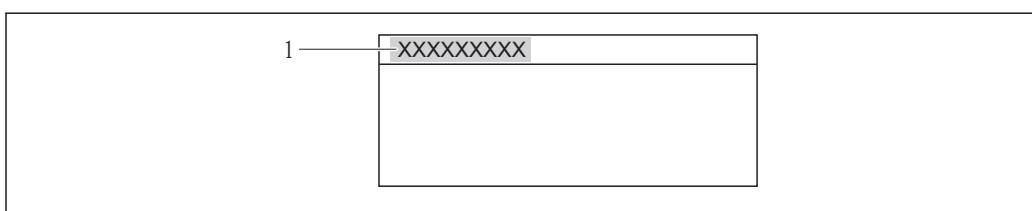

A0013375

1 Position of the header text on the display

*Selection*

Free text

Is defined in the **Header text** parameter (→ 24).

**Header text**

**Navigation** Expert → System → Display → Header text

**Prerequisite** The **Free text** option is selected in the **Header** parameter (→ 24).


**Description** Use this function to enter a customer-specific text for the header of the local display.

**User entry** Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

**Factory setting** -----

**Additional information** *Description*

The header text only appears during normal operation.

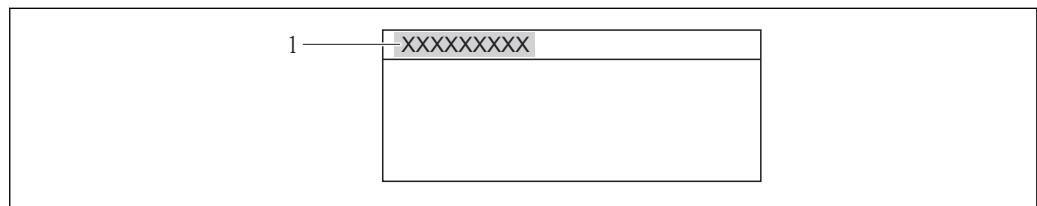

1 Position of the header text on the display

*User entry*

The number of characters displayed depends on the characters used.

## Separator



**Navigation** Expert → System → Display → Separator

**Prerequisite** A local display is provided.

**Description** Use this function to select the decimal separator.

**Selection**

- . (point)
- , (comma)

**Factory setting** . (point)

## Contrast display

**Navigation** Expert → System → Display → Contrast display

**Prerequisite** A local display is provided.

**Description** Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

**User entry** 20 to 80 %

**Factory setting** Depends on the display

**Additional information**

*Set the contrast via the push-buttons:*

- Brighter: Press and hold down the keys simultaneously.
- Darker: Press and hold down the keys simultaneously.

---

**Backlight****Navigation**

Expert → System → Display → Backlight

**Prerequisite**

Order code for "Display; operation", option E "SD03 4-line, illum.; touch control + data backup function"

**Description**

Option for switching the backlight of the local display on and off.

**Selection**

- Disable
- Enable

**Factory setting**

Enable

---

**Access status display****Navigation**

Expert → System → Display → Access stat.disp

**Prerequisite**

A local display is provided.

**Description**

Use this function to view the access authorization to the parameters via the local display.

**User interface**

- Operator
- Maintenance

**Factory setting**

Operator

**Additional information****Description**

If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.

The access authorization can be modified via the **Enter access code** parameter.

For information on the **Enter access code** parameter, see the "Disabling write protection via access code" section of the Operating Instructions for the device

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→ 11).


**User interface**

Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

### 3.1.2 "Diagnostic handling" submenu

*Navigation*

Expert → System → Diagn. handling

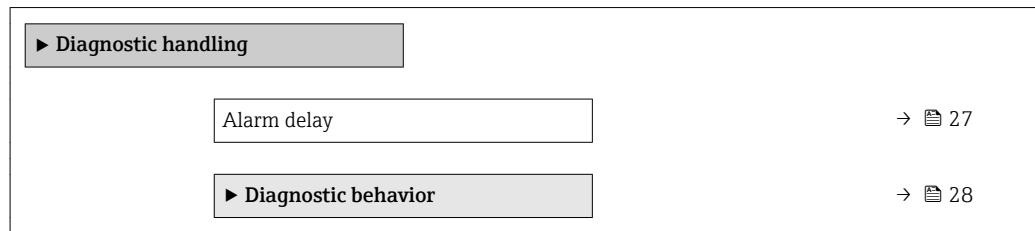

#### Alarm delay



**Navigation**

Expert → System → Diagn. handling → Alarm delay

**Description**

Use this function to enter the time interval until the device generates a diagnostic message.

The diagnostic message is reset without a time delay.

**User entry**

0 to 60 s

**Factory setting**

0 s

**Additional information**

*Result*

This setting affects the following diagnostic messages:

- 046 Sensor limit exceeded
- 140 Sensor signal
- 144 Measuring error too high
- 190 Special event 1
- 191 Special event 5
- 192 Special event 9
- 830 Sensor temperature too high
- 831 Sensor temperature too low
- 832 Electronic temperature too high
- 833 Electronic temperature too low
- 834 Process temperature too high
- 835 Process temperature too low
- 843 Process limit
- 862 Partly filled pipe
- 910 Tubes not oscillating
- 912 Medium inhomogeneous
- 913 Medium unsuitable
- 944 Monitoring failed
- 990 Special event 4
- 991 Special event 8
- 992 Special event 12

### "Diagnostic behavior" submenu

 For a list of all the diagnostic events, see the Operating Instructions for the device.

 Modifying the diagnostic behavior of a diagnostic event. Each diagnostic event is assigned a certain diagnostic behavior at the factory. The user can change this assignment for certain diagnostics events.

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

- **Off** option

The device continues to measure. The diagnostic event is ignored; it is neither entered into the Event logbook, nor is a diagnostic message generated.

- **Alarm** option

The device continues to measure. The signal outputs assume the specified alarm condition. A diagnostic message is generated.

- **Warning** option

The device continues to measure. A diagnostic message is generated.

- **Logbook entry only** option

The device continues to measure. The diagnostic message is entered in the **Event logbook** submenu (→ 153) (**Event list** submenu (→ 155)) only and is not displayed in alternation with the measured value display.

*Navigation*

  Expert → System → Diagn. handling → Diagn. behavior

 Diagnostic behavior	
<a href="#">Assign behavior of diagnostic no. 140</a>	→ 29
<a href="#">Assign behavior of diagnostic no. 046</a>	→ 29
<a href="#">Assign behavior of diagnostic no. 144</a>	→ 29
<a href="#">Assign behavior of diagnostic no. 832</a>	→ 30
<a href="#">Assign behavior of diagnostic no. 833</a>	→ 30
<a href="#">Assign behavior of diagnostic no. 834</a>	→ 31
<a href="#">Assign behavior of diagnostic no. 835</a>	→ 31
<a href="#">Assign behavior of diagnostic no. 912</a>	→ 31
<a href="#">Assign behavior of diagnostic no. 913</a>	→ 32
<a href="#">Assign behavior of diagnostic no. 944</a>	→ 32
<a href="#">Assign behavior of diagnostic no. 948</a>	→ 32
<a href="#">Assign behavior of diagnostic no. 192</a>	→ 33
<a href="#">Assign behavior of diagnostic no. 274</a>	→ 33
<a href="#">Assign behavior of diagnostic no. 392</a>	→ 33

[Assign behavior of diagnostic no. 592](#)

→ 34

[Assign behavior of diagnostic no. 992](#)

→ 34

## Assign behavior of diagnostic no. 140 (Sensor signal)

**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 140

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **140 Sensor signal**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → 28

## Assign behavior of diagnostic no. 046 (Sensor limit exceeded)

**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 046

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **046 Sensor limit exceeded**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → 28

## Assign behavior of diagnostic no. 144 (Measuring error too high)

**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 144

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **144 Measuring error too high**.

<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Alarm
<b>Additional information</b>	 For a detailed description of the options available, see → <a href="#">28</a>

---

### Assign behavior of diagnostic no. 832 (Electronic temperature too high)



<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>832 Electronic temperature too high.</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	 For a detailed description of the options available, see → <a href="#">28</a>

---

### Assign behavior of diagnostic no. 833 (Electronic temperature too low)



<b>Navigation</b>	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>833 Electronic temperature too low.</b>
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	 For a detailed description of the options available, see → <a href="#">28</a>

---

**Assign behavior of diagnostic no. 834 (Process temperature too high)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>834 Process temperature too high</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">28</a>

---

**Assign behavior of diagnostic no. 835 (Process temperature too low)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>835 Process temperature too low</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">28</a>

---

**Assign behavior of diagnostic no. 912 (Medium inhomogeneous)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 912
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>912 Medium inhomogeneous</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">28</a>

**Assign behavior of diagnostic no. 913 (Medium unsuitable)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 913

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **913 Medium unsuitable**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → [28](#)

**Assign behavior of diagnostic no. 944 (Monitoring failed)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 944

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **944 Monitoring failed**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → [28](#)

**Assign behavior of diagnostic no. 948 (Tube damping too high)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 948

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **948 Tube damping too high**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → [28](#)

---

**Assign behavior of diagnostic no. 192 (Special event 9)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 192
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>192 Special event 9</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">28</a>

---

**Assign behavior of diagnostic no. 274 (Main electronic failure)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 274
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>274 Main electronic failure</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">28</a>

---

**Assign behavior of diagnostic no. 392 (Special event 10)**

---



<b>Navigation</b>	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 392
<b>Description</b>	Use this function to change the diagnostic behavior of the diagnostic message <b>392 Special event 10</b> .
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Alarm</li><li>▪ Warning</li><li>▪ Logbook entry only</li></ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, see → <a href="#">28</a>

**Assign behavior of diagnostic no. 592 (Special event 11)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 592

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **592 Special event 11**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning

**Additional information**

For a detailed description of the options available, see → [28](#)

**Assign behavior of diagnostic no. 992 (Special event 12)****Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 992

**Description**

Use this function to change the diagnostic behavior of the diagnostic message **992 Special event 12**.

**Selection**

- Off
- Alarm
- Warning
- Logbook entry only

**Factory setting**

Warning


**Additional information**

For a detailed description of the options available, see → [28](#)

### 3.1.3 "Administration" submenu

**Navigation**

Expert → System → Administration

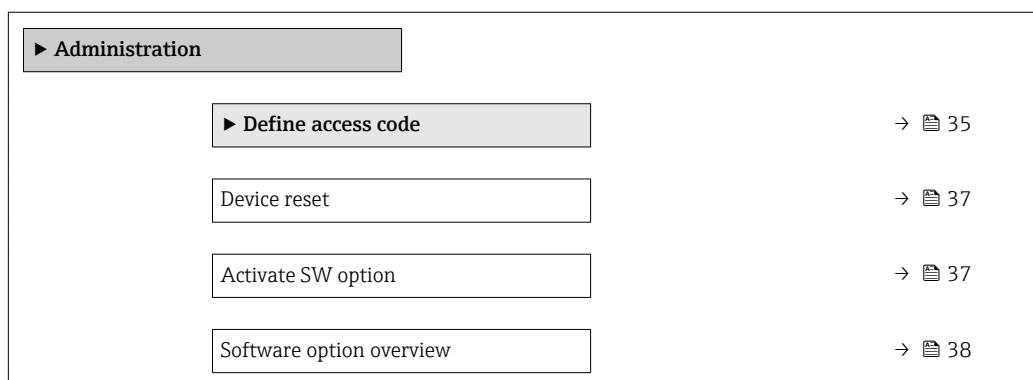


**"Define access code" wizard**

**i** The **Define access code** wizard is only available if operating using the local display. If you are operating using the operating tool, the **Define access code** parameter (→ 36) is directly in the **Administration** submenu. The **Confirm access code** parameter is not available if you are operating using the operating tool.

**Navigation**

Expert → System → Administration → Def. access code

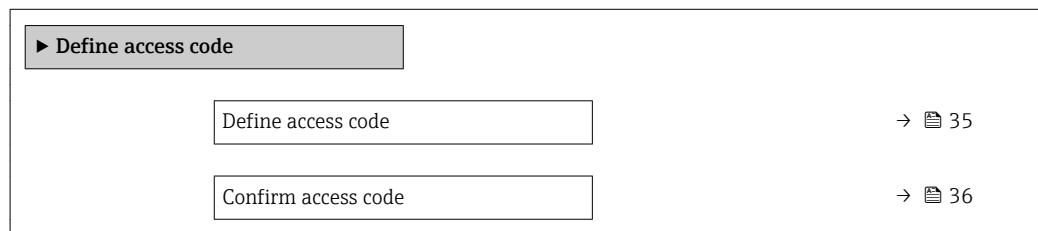**Define access code****Navigation**

Expert → System → Administration → Def. access code → Def. access code

**Description**

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the local display.

**User entry**

0 to 9 999

**Factory setting**

0

**Additional information***Description*

The write protection affects all parameters in the document marked with the symbol. On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.

**i** Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter.

**i** If you lose the access code, please contact your Endress+Hauser Sales Center.

*User entry*

A message is displayed if the access code is not in the input range.

*Factory setting*

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

**Confirm access code**

<b>Navigation</b>	Expert → System → Administration → Def. access code → Confirm code
<b>Description</b>	Enter the defined release code a second time to confirm the release code.
<b>User entry</b>	0 to 9 999
<b>Factory setting</b>	0

**Additional parameters in the "Administration" submenu****Define access code**

<b>Navigation</b>	Expert → System → Administration → Def. access code
<b>Description</b>	Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the operating tool.
<b>User entry</b>	0 to 9 999
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i> The write protection affects all parameters in the document marked with the  symbol. Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the <b>Enter access code</b> parameter. If you lose the access code, please contact your Endress+Hauser Sales Center.  <i>User entry</i> A message is displayed if the access code is not in the input range.  <i>Factory setting</i> If the factory setting is not changed or <b>0</b> is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the " <b>Maintenance</b> " role.

**Device reset****Navigation**

Expert → System → Administration → Device reset

**Description**

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

**Selection**

- Cancel
- To delivery settings
- Restart device

**Factory setting**

Cancel

**Additional information***"Cancel" option*

No action is executed and the user exits the parameter.

*"To delivery settings" option*

Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.

This option is not visible if no customer-specific settings have been ordered.

*"Restart device" option*

The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

**Activate SW option****Navigation**

Expert → System → Administration → Activate SW opt.

**Description**

Use this function to enter an activation code to enable an additional, ordered software option.

**User entry**

Max. 10-digit string consisting of numbers.

**Factory setting**

0

**Additional information***User entry*

Endress+Hauser provides the corresponding activation code for the software option with the order.

**NOTICE!** This activation code varies depending on the measuring device and the software option. If an incorrect or invalid code is entered, this can result in the loss of software options that are already been activated. After commissioning the measuring device: in this parameter only enter activation codes which Endress+Hauser has provided (e.g. when a new software option was ordered). If an incorrect or invalid activation code is entered, enter the activation code from the parameter protocol again and contact your Endress+Hauser sales organization, quoting the serial number of your device.


*Example for a software option*

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

## Software option overview

<b>Navigation</b>	  Expert → System → Administration → SW option overv.
<b>Description</b>	Displays all the software options that are enabled in the device.
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ Heartbeat Verification</li><li>▪ Heartbeat Monitoring</li><li>▪ Concentration</li></ul>
<b>Additional information</b>	<p><i>Description</i></p> <p>Displays all the options that are available if ordered by the customer.</p> <p><i>"Heartbeat Verification" option and "Heartbeat Monitoring" option</i> Order code for "Application package", option EB "Heartbeat Verification + Monitoring"</p> <p><i>"Concentration" option</i> Order code for "Application package", option ED "Concentration" and option EF "Special density + concentration"</p>

## 3.2 "Sensor" submenu
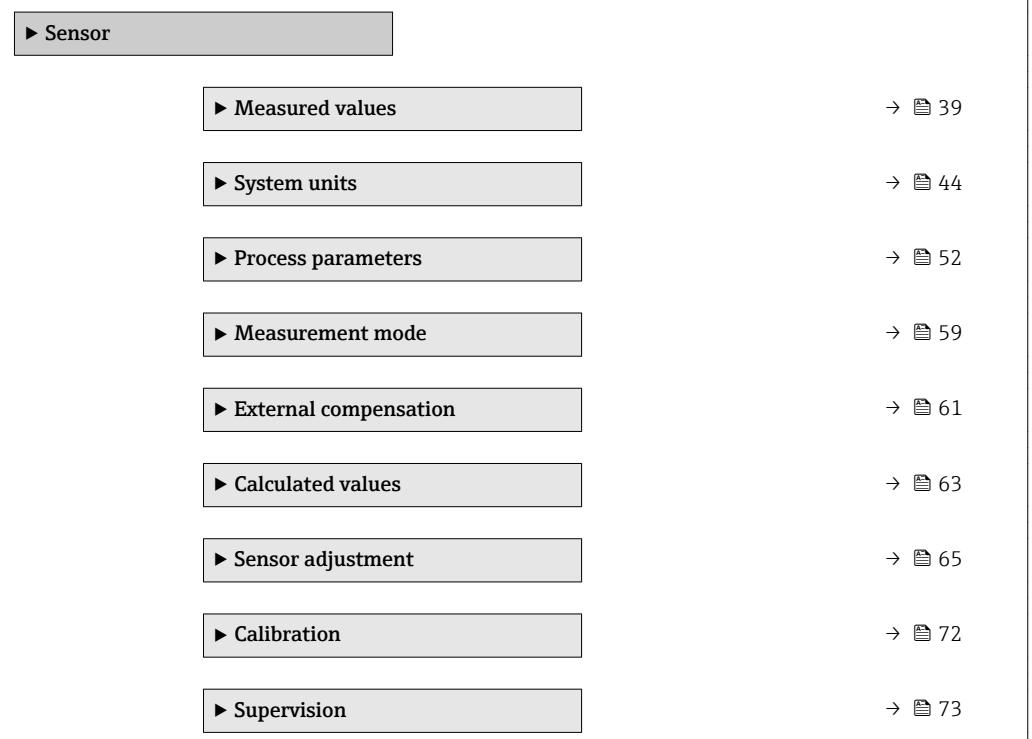
<i>Navigation</i>	  Expert → Sensor
	


The diagram shows the "Sensor" submenu structure. It starts with a main menu item "Sensor" which branches into eight sub-items: "Measured values", "System units", "Process parameters", "Measurement mode", "External compensation", "Calculated values", "Sensor adjustment", "Calibration", and "Supervision". Each sub-item is associated with a page number: 39, 44, 52, 59, 61, 63, 65, 72, and 73 respectively.

```
graph TD; Sensor["▶ Sensor"] --> MeasuredValues["▶ Measured values"]; Sensor --> SystemUnits["▶ System units"]; Sensor --> ProcessParameters["▶ Process parameters"]; Sensor --> MeasurementMode["▶ Measurement mode"]; Sensor --> ExternalCompensation["▶ External compensation"]; Sensor --> CalculatedValues["▶ Calculated values"]; Sensor --> SensorAdjustment["▶ Sensor adjustment"]; Sensor --> Calibration["▶ Calibration"]; Sensor --> Supervision["▶ Supervision"];
```

### 3.2.1 "Measured values" submenu

*Navigation*


Expert → Sensor → Measured val.

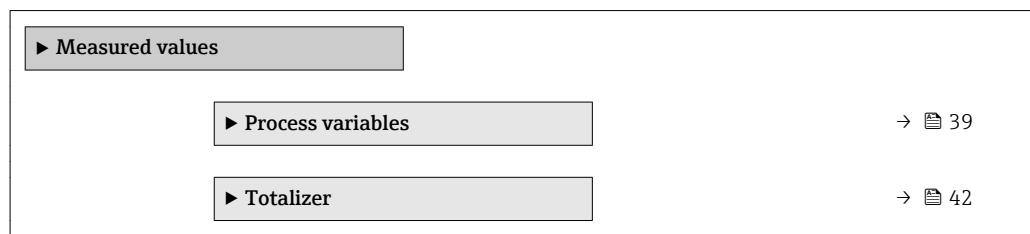

#### "Process variables" submenu

*Navigation*

Expert → Sensor → Measured val. → Process variab.

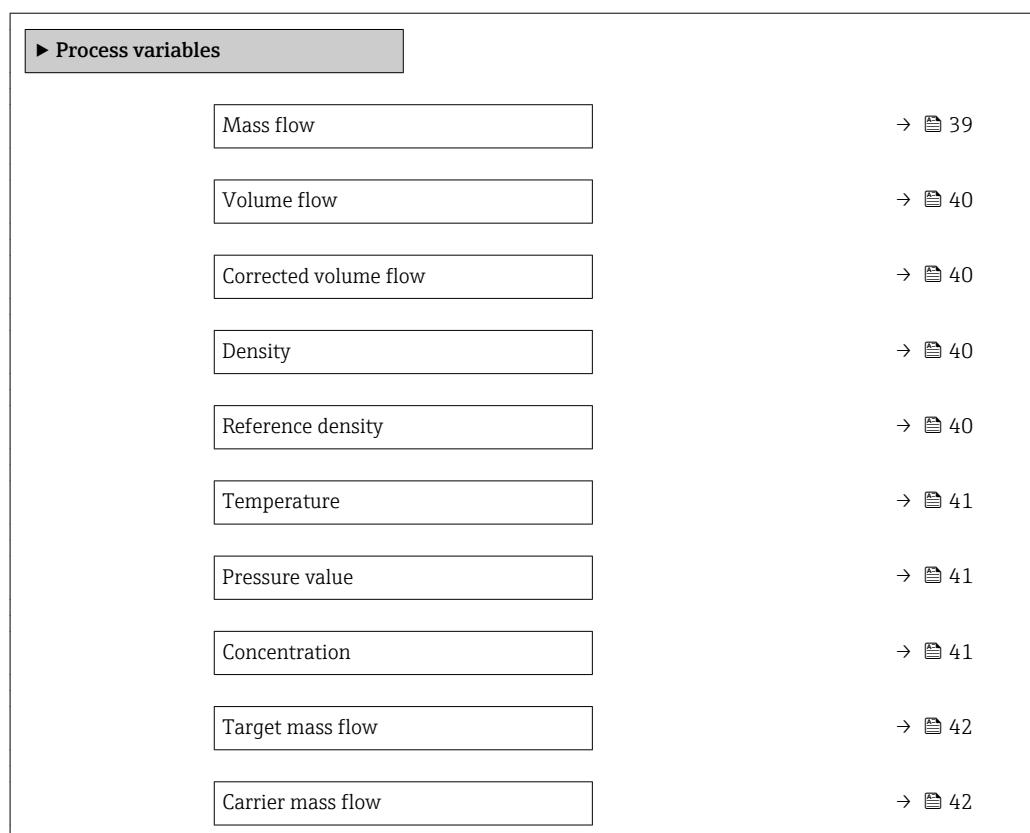


---

## Mass flow

---

**Navigation**

Expert → Sensor → Measured val. → Process variab. → Mass flow

**Description**

Use this function to view the mass flow currently measured.

**User interface**

Signed floating-point number

**Additional information**

*Dependency*

The unit is taken from the **Mass flow unit** parameter (→ 44).

## Volume flow

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Volume flow
<b>Description</b>	Displays the volume flow currently calculated.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>
	 The unit is taken from the <b>Volume flow unit</b> parameter (→  46)

---

## Corrected volume flow

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Correct.vol.flow
<b>Description</b>	Displays the corrected volume flow currently measured.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>
	 The unit is taken from the <b>Corrected volume flow unit</b> parameter (→  47)

---

## Density

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Density
<b>Description</b>	Displays the density currently measured.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>
	 The unit is taken from the <b>Density unit</b> parameter (→  49)

---

## Reference density

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Ref.density
<b>Description</b>	Displays the reference density currently calculated.
<b>User interface</b>	Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Reference density unit** parameter (→ 49)

---

**Temperature**

---

**Navigation**

Expert → Sensor → Measured val. → Process variab. → Temperature

**Description**

Displays the medium temperature currently measured.

**User interface**

Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ 50)

---

**Pressure value**

---

**Navigation**

Expert → Sensor → Measured val. → Process variab. → Pressure value

**Description**

Displays the fixed or external pressure value.

**User interface**

Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Pressure unit** parameter (→ 50)

---

**Concentration**

---

**Navigation**

Expert → Sensor → Measured val. → Process variab. → Concentration

**Prerequisite**

For the following order code:  
"Application package", option ED "Concentration"



The software options currently enabled are displayed in the **Software option overview** parameter (→ 38).

**Description**

Displays the concentration currently calculated.

**User interface**

Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Concentration unit** parameter.

---

## Target mass flow

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Target mass flow
<b>Prerequisite</b>	With the following conditions: <ul style="list-style-type: none"><li>▪ Order code for "Application package", option ED "Concentration"</li><li>▪ The <b>WT-%</b> option is selected in the <b>Concentration unit</b> parameter.</li></ul> <p> The software options currently enabled are displayed in the <b>Software option overview</b> parameter (→  38).</p>
<b>Description</b>	Displays the mass flow currently measured for the target medium.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the <b>Mass flow unit</b> parameter (→  44)

---

## Carrier mass flow

---

<b>Navigation</b>	  Expert → Sensor → Measured val. → Process variab. → Carrier mass fl.
<b>Prerequisite</b>	With the following conditions: <ul style="list-style-type: none"><li>▪ Order code for "Application package", option ED "Concentration"</li><li>▪ The <b>WT-%</b> option is selected in the <b>Concentration unit</b> parameter.</li></ul> <p> The software options currently enabled are displayed in the <b>Software option overview</b> parameter (→  38).</p>
<b>Description</b>	Displays the mass flow currently measured for the carrier medium.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Dependency</i>  The unit is taken from the <b>Mass flow unit</b> parameter (→  44)

## Totalizer

*Navigation*   Expert → Sensor → Measured val. → Totalizer

 **Totalizer**

Totalizer value 1 to 3

→  43

Totalizer status (Hex) 1 to 3	→ <a href="#">43</a>
Totalizer status 1 to 3	→ <a href="#">43</a>

## Totalizer value 1 to 3

**Navigation**

Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to 3

**Prerequisite**

In **Target mode** parameter (→ [140](#)), the **Auto** option is selected.

**Description**

Displays the current reading for totalizer 1-3.

**User interface**

Signed floating-point number

**Additional information***Description*

As it is only possible to display a maximum of 7 digits, the current counter value is the sum of the totalizer value and the overflow value from the **Totalizer overflow 1 to 3** parameter if the display range is exceeded.

 In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter.

*User interface*

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Totalizer operation mode** parameter.

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [134](#)).

## Totalizer status (Hex) 1 to 3

**Navigation**

Expert → Sensor → Measured val. → Totalizer → Status (Hex) 1 to 3

**Prerequisite**

In **Target mode** parameter (→ [140](#)), the **Auto** option is selected.

**Description**

Displays the status value (hex) of the particular totalizer.

**User interface**

0 to 0xFF

## Totalizer status 1 to 3

**Navigation**

Expert → Sensor → Measured val. → Totalizer → Tot. status 1 to 3

**Description**

Displays the status of the particular totalizer.

**User interface**

- Good
- Uncertain
- Bad

### 3.2.2 "System units" submenu

*Navigation*

Expert → Sensor → System units

► System units	
Mass flow unit	→  44
Mass unit	→  45
Volume flow unit	→  46
Volume unit	→  47
Corrected volume flow unit	→  47
Corrected volume unit	→  48
Density unit	→  49
Reference density unit	→  49
Temperature unit	→  50
Pressure unit	→  50
Date/time format	→  51

---

**Mass flow unit**

**Navigation**

Expert → Sensor → System units → Mass flow unit

**Description**

Use this function to select the unit for the mass flow.

Selection	<i>SI units</i>	<i>US units</i>
■ g/s	■ oz/s	
■ g/min	■ oz/min	
■ g/h	■ oz/h	
■ g/d	■ oz/d	
■ kg/s	■ lb/s	
■ kg/min	■ lb/min	
■ kg/h	■ lb/h	
■ kg/d	■ lb/d	
■ t/s	■ STon/s	
■ t/min	■ STon/min	
■ t/h	■ STon/h	
■ t/d	■ STon/d	

Factory setting	Country-specific: ■ kg/h ■ lb/min
-----------------	---

Additional information	<i>Result</i>  The selected unit applies for: <b>Mass flow</b> parameter (→ 39)
------------------------	--

*Selection*

 For an explanation of the abbreviated units: → 172

**Mass unit**

Navigation	 Expert → Sensor → System units → Mass unit
------------	--

Description	Use this function to select the unit for the mass.
-------------	--

Selection	<i>SI units</i>	<i>US units</i>
■ g	■ oz	
■ kg	■ lb	
■ t	■ STon	

Factory setting	Country-specific: ■ kg ■ lb
-----------------	-----------------------------------

Additional information	<i>Selection</i>   For an explanation of the abbreviated units: → 172
------------------------	--

**Volume flow unit****Navigation**

Expert → Sensor → System units → Volume flow unit

**Description**

Use this function to select the unit for the volume flow.

**Selection***SI units*

- cm<sup>3</sup>/s
- cm<sup>3</sup>/min
- cm<sup>3</sup>/h
- cm<sup>3</sup>/d
- dm<sup>3</sup>/s
- dm<sup>3</sup>/min
- dm<sup>3</sup>/h
- dm<sup>3</sup>/d
- m<sup>3</sup>/s
- m<sup>3</sup>/min
- m<sup>3</sup>/h
- m<sup>3</sup>/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

*US units*

- af/s
- af/min
- af/h
- af/d
- ft<sup>3</sup>/s
- ft<sup>3</sup>/min
- ft<sup>3</sup>/h
- ft<sup>3</sup>/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)

*Imperial units*

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

**Factory setting**

Country-specific:

- l/h
- gal/min (us)

**Additional information**

*Result*

The selected unit applies for:

**Volume flow parameter** (→ 40)

*Selection*

For an explanation of the abbreviated units: → 172

**Volume unit****Navigation**

Expert → Sensor → System units → Volume unit

**Description**

Use this function to select the unit for the volume.

**Selection***SI units*

- cm<sup>3</sup>
- dm<sup>3</sup>
- m<sup>3</sup>
- ml
- l
- hl
- Ml Mega

*US units*

- af
- ft<sup>3</sup>
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

*Imperial units*

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

**Factory setting**

Country-specific:

- l
- gal (us)

**Additional information***Selection*

For an explanation of the abbreviated units: → 172

**Corrected volume flow unit****Navigation**

Expert → Sensor → System units → Cor.volflow unit

**Description**

Use this function to select the unit for the corrected volume flow.

**Selection**

- | <i>SI units</i>        | <i>US units</i>         |
|------------------------|-------------------------|
| ■ NI/s                 | ■ Sft <sup>3</sup> /s   |
| ■ NI/min               | ■ Sft <sup>3</sup> /min |
| ■ NI/h                 | ■ Sft <sup>3</sup> /h   |
| ■ NI/d                 | ■ Sft <sup>3</sup> /d   |
| ■ Nm <sup>3</sup> /s   | ■ Sgal/s (us)           |
| ■ Nm <sup>3</sup> /min | ■ Sgal/min (us)         |
| ■ Nm <sup>3</sup> /h   | ■ Sgal/h (us)           |
| ■ Nm <sup>3</sup> /d   | ■ Sgal/d (us)           |
| ■ Sm <sup>3</sup> /s   | ■ Sbbl/s (us;liq.)      |
| ■ Sm <sup>3</sup> /min | ■ Sbbl/min (us;liq.)    |
| ■ Sm <sup>3</sup> /h   | ■ Sbbl/h (us;liq.)      |
| ■ Sm <sup>3</sup> /d   | ■ Sbbl/d (us;liq.)      |

**Factory setting**

Country-specific:

- NI/h
- Sft<sup>3</sup>/min

**Additional information***Result*

The selected unit applies for:

**Corrected volume flow parameter** (→ 40)*Selection*

 For an explanation of the abbreviated units: → 172

**Corrected volume unit****Navigation**

  Expert → Sensor → System units → Corr. vol. unit

**Description**

Use this function to select the unit for the corrected volume.

**Selection**

- | <i>SI units</i>   | <i>US units</i>    | <i>Imperial units</i> |
|-------------------|--------------------|-----------------------|
| ■ NI              | ■ Sft <sup>3</sup> | Sgal (imp)            |
| ■ Nm <sup>3</sup> | ■ Sgal (us)        |                       |
| ■ Sm <sup>3</sup> | ■ Sbbl (us;liq.)   |                       |

**Factory setting**

Country-specific:

- NI
- Sft<sup>3</sup>

**Additional information***Selection*

 For an explanation of the abbreviated units: → 172

**Density unit****Navigation**

Expert → Sensor → System units → Density unit

**Description**

Use this function to select the unit for the density.

**Selection***SI units*

- g/cm<sup>3</sup>
- g/m<sup>3</sup>
- kg/dm<sup>3</sup>
- kg/l
- kg/m<sup>3</sup>
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

*US units*

- lb/ft<sup>3</sup>
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

*Imperial units*

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

**Factory setting**

Country-specific:

- kg/l
- lb/ft<sup>3</sup>

**Additional information***Result*

The selected unit applies for:

**Density** parameter (→ 40)

*Selection*

- SD = specific density

The specific density is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).



For an explanation of the abbreviated units: → 172

**Reference density unit****Navigation**

Expert → Sensor → System units → Ref. dens. unit

**Description**

Use this function to select the unit for the reference density.

**Selection***SI units*

- kg/Nm<sup>3</sup>
- kg/Nl
- g/Scm<sup>3</sup>
- kg/Sm<sup>3</sup>

*US units*

- lb/Sft<sup>3</sup>

<b>Factory setting</b>	Country-dependent <ul style="list-style-type: none"><li>▪ kg/Nl</li><li>▪ lb/Sft<sup>3</sup></li></ul>
<b>Additional information</b>	<p><i>Result</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"><li>▪ <b>External reference density</b> parameter (→ <a href="#">63</a>)</li><li>▪ <b>Fixed reference density</b> parameter (→ <a href="#">64</a>)</li><li>▪ <b>Reference density</b> parameter (→ <a href="#">40</a>)</li></ul> <p><i>Selection</i></p> <p> For an explanation of the abbreviated units: → <a href="#">172</a></p>

<b>Temperature unit</b>							
<b>Navigation</b>	 Expert → Sensor → System units → Temperature unit						
<b>Description</b>	Use this function to select the unit for the temperature.						
<b>Selection</b>	<table><tr><td><i>SI units</i></td><td><i>US units</i></td></tr><tr><td>▪ °C</td><td>▪ °F</td></tr><tr><td>▪ K</td><td>▪ °R</td></tr></table>	<i>SI units</i>	<i>US units</i>	▪ °C	▪ °F	▪ K	▪ °R
<i>SI units</i>	<i>US units</i>						
▪ °C	▪ °F						
▪ K	▪ °R						
<b>Factory setting</b>	Country-specific: <ul style="list-style-type: none"><li>▪ °C</li><li>▪ °F</li></ul>						
<b>Additional information</b>	<p><i>Result</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"><li>▪ <b>Maximum value</b> parameter (→ <a href="#">161</a>)</li><li>▪ <b>Minimum value</b> parameter (→ <a href="#">160</a>)</li><li>▪ <b>Maximum value</b> parameter (→ <a href="#">161</a>)</li><li>▪ <b>Minimum value</b> parameter (→ <a href="#">161</a>)</li><li>▪ <b>Maximum value</b> parameter (→ <a href="#">162</a>)</li><li>▪ <b>Minimum value</b> parameter (→ <a href="#">162</a>)</li><li>▪ <b>Reference temperature</b> parameter (→ <a href="#">64</a>)</li><li>▪ <b>Temperature</b> parameter (→ <a href="#">41</a>)</li></ul> <p><i>Selection</i></p> <p> For an explanation of the abbreviated units: → <a href="#">172</a></p>						

<b>Pressure unit</b>	
<b>Navigation</b>	 Expert → Sensor → System units → Pressure unit
<b>Description</b>	Use this function to select the unit for the pipe pressure.

Selection	<i>SI units</i>	<i>US units</i>
	▪ Pa a	▪ psi a
	▪ kPa a	▪ psi g
	▪ MPa a	
	▪ bar	
	▪ Pa g	
	▪ kPa g	
	▪ MPa g	
	▪ bar g	

Factory setting	Country-specific:
	▪ bar a
	▪ psi a

Additional information	<i>Result</i>
	The unit is taken from:
	▪ <b>Pressure value</b> parameter (→ <a href="#">41</a> )
	▪ <b>External pressure</b> parameter (→ <a href="#">62</a> )
	▪ <b>Pressure value</b> parameter (→ <a href="#">62</a> )

*Selection*

 *For an explanation of the abbreviated units: → [172](#)*

Date/time format	
------------------	---

Navigation	  Expert → Sensor → System units → Date/time format
------------	---

Description	Use this function to select the desired time format for calibration history.
-------------	--

Selection	▪ dd.mm.yy hh:mm ▪ dd.mm.yy hh:mm am/pm ▪ mm/dd/yy hh:mm ▪ mm/dd/yy hh:mm am/pm
-----------	--

Factory setting	dd.mm.yy hh:mm
-----------------	----------------

Additional information	<i>Selection</i>
	 <i>For an explanation of the abbreviated units: → <a href="#">172</a></i>

### 3.2.3 "Process parameters" submenu

*Navigation*

Expert → Sensor → Process param.

▶ Process parameters	
Flow damping	→ <a href="#">52</a>
Density damping	→ <a href="#">52</a>
Temperature damping	→ <a href="#">53</a>
Flow override	→ <a href="#">53</a>
▶ Low flow cut off	→ <a href="#">54</a>
▶ Partially filled pipe detection	→ <a href="#">57</a>

#### Flow damping



*Navigation*

Expert → Sensor → Process param. → Flow damping

**Description**

Use this function to enter a time constant for flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

**User entry**

0 to 100.0 s

**Factory setting**

0 s

**Additional information**

*Effect*



The damping affects the following variables of the device:

- Outputs
- Low flow cut off → [54](#)
- Totalizer → [133](#)

*User entry*

- Value = 0: no damping
- Value > 0: damping is increased

#### Density damping



*Navigation*

Expert → Sensor → Process param. → Density damping

**Description**

Use this function to enter the time constant for density damping.

**User entry** 0 to 999.9 s

**Factory setting** 0 s

---

## Temperature damping

---



**Navigation** Expert → Sensor → Process param. → Temp. damping

**Description** Use this function to enter a temperature damping time in seconds.

**User entry** 0 to 999.9 s

**Factory setting** 0 s

---

## Flow override

---



**Navigation** Expert → Sensor → Process param. → Flow override

**Description** Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

**Selection**

- Off
- On

**Factory setting** Off

**Additional information** *Effect*




This setting affects all the functions and outputs of the measuring device.

*Description*

**Flow override is active**

- The diagnostic message diagnostic message **△C453 Flow override** is displayed.
- Output values
  - Output: Value at zero flow
  - Temperature: proceeding output
  - Totalizers 1-3: Stop being totalized

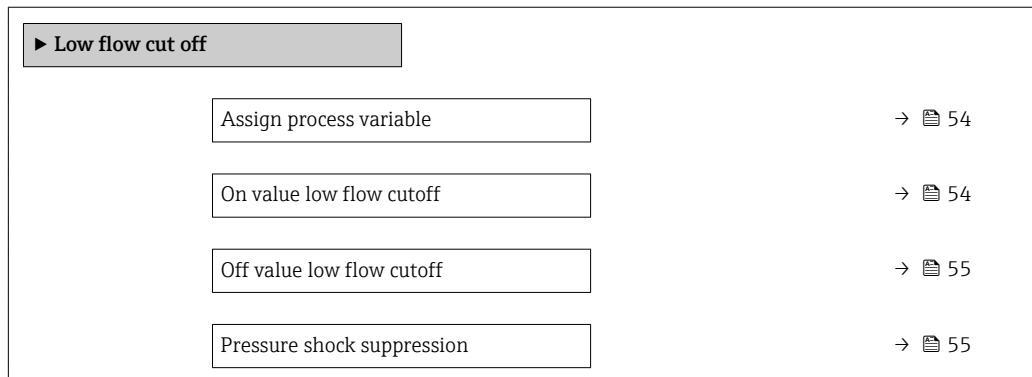**"Low flow cut off" submenu****Navigation** Expert → Sensor → Process param. → Low flow cut off**Assign process variable****Navigation** Expert → Sensor → Process param. → Low flow cut off → Assign variable**Description**

Use this function to select the process variable for low flow cutoff detection.

**Selection**

- Off
- Mass flow
- Volume flow
- Corrected volume flow

**Factory setting**

Mass flow

**On value low flow cutoff****Navigation** Expert → Sensor → Process param. → Low flow cut off → On value**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter  
(→ 54):

- Mass flow
- Volume flow
- Corrected volume flow

**Description**

Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 or pressure shock suppression is active → 55.

**User entry**

Positive floating-point number

**Factory setting**

Depends on country and nominal diameter → 169

**Additional information***Dependency*

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 54).

**Off value low flow cutoff****Navigation**

 Expert → Sensor → Process param. → Low flow cut off → Off value

**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→ 54):

- Mass flow
- Volume flow
- Corrected volume flow

**Description**


Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → 54.

**User entry**

0 to 100.0 %

**Factory setting**

50 %

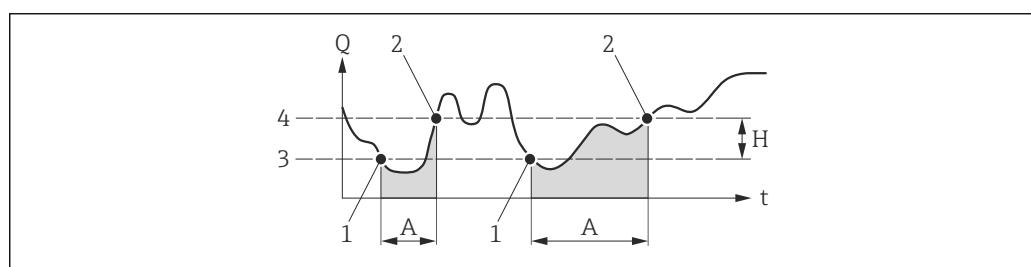**Additional information***Example*

A0012887

- |          |                                 |
|----------|---------------------------------|
| <i>Q</i> | Flow                            |
| <i>t</i> | Time                            |
| <i>H</i> | Hysteresis                      |
| <i>A</i> | Low flow cut off active         |
| 1        | Low flow cut off is activated   |
| 2        | Low flow cut off is deactivated |
| 3        | On value entered                |
| 4        | Off value entered               |

**Pressure shock suppression****Navigation**

 Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup.

**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→ 54):

- Mass flow
- Volume flow
- Corrected volume flow

**Description** Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

**User entry** 0 to 100 s

**Factory setting** 0 s

**Additional information** *Description*

**Pressure shock suppression is enabled**


- Prerequisite:
  - Flow rate < on-value of low flow cut off
  - or
  - Changing the flow direction
- Output values
  - Flow displayed: 0
  - Totalizer: the totalizers are pegged at the last correct value

**Pressure shock suppression is disabled**

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

*Example*

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

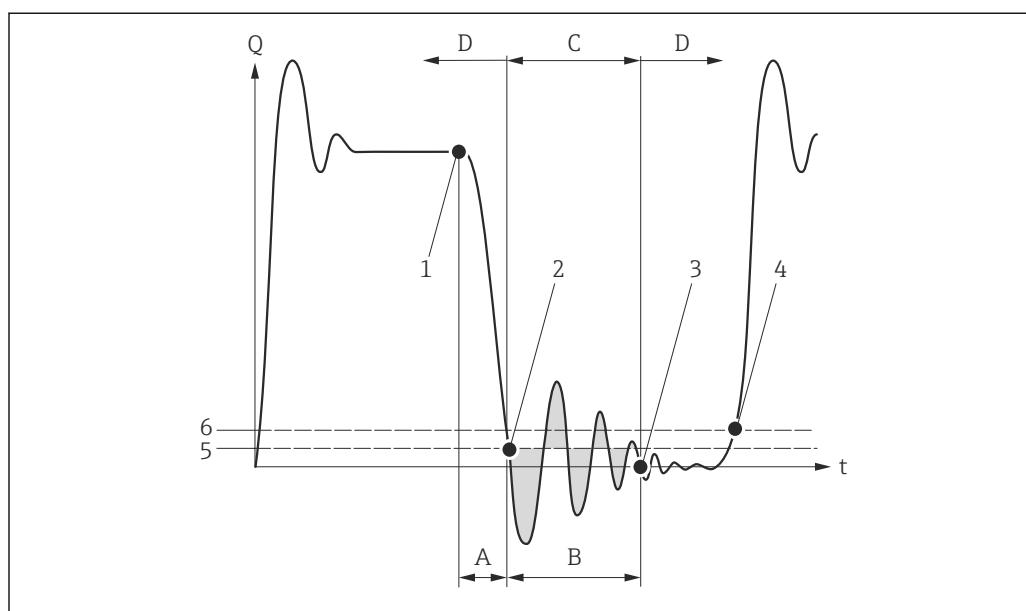

A0012888

Q	Flow
t	Time
A	Drip
B	Pressure shock
C	Pressure shock suppression active as specified by the time entered
D	Pressure shock suppression inactive
1	Valve closes
2	Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
3	The time entered has elapsed: pressure shock suppression is deactivated
4	The actual flow value is now displayed and output
5	On value for low flow cut off
6	Off value for low flow cut off

**"Partially filled pipe detection" submenu****Navigation**
 Expert → Sensor → Process param. → Partial pipe det

<b>► Partially filled pipe detection</b>	
Assign process variable	→  57
Low value partial filled pipe detection	→  57
High value partial filled pipe detection	→  58
Response time part. filled pipe detect.	→  58
Maximum damping partial filled pipe det.	→  59

**Assign process variable****Navigation**
 Expert → Sensor → Process param. → Partial pipe det → Assign variable
**Description**

Use this function to select a process variable to detect empty or partially filled measuring tubes.

For gas measurement: Deactivate monitoring due to low gas density.

**Selection**

- Off
- Density
- Reference density

**Factory setting**

Off

**Low value partial filled pipe detection****Navigation**
 Expert → Sensor → Process param. → Partial pipe det → Low value
**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter  
(→  57):

- Density
- Reference density

**Description**

Use this function to enter a lower limit value to enable detection of empty or partially filled measuring tubes. If the measured density falls below this value, monitoring is enabled.

**User entry**

Signed floating-point number

**Factory setting**

200

**Additional information***User entry*

The lower limit value must be less than the upper limit value defined in the **High value partial filled pipe detection** parameter (→  58).

 The unit is dependent on the process variable selected in the **Assign process variable** parameter.

*Limit value*

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled pipe**.

---

**High value partial filled pipe detection****Navigation**

  Expert → Sensor → Process param. → Partial pipe det → High value

**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→  57):

- Density
- Reference density

**Description**

Use this function to enter an upper limit value to enable detection of empty or partially filled measuring tubes. If the measured density exceeds this value, detection is enabled.

**User entry**

Signed floating-point number

**Factory setting**

6 000

**Additional information***User entry*

The upper limit value must be greater than the lower limit value defined in the **Low value partial filled pipe detection** parameter (→  57).

 The unit is dependent on the process variable selected in the **Assign process variable** parameter.

*Limit value*

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled pipe**.

---

**Response time part. filled pipe detect.****Navigation**

  Expert → Sensor → Process param. → Partial pipe det → Response time

**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→  57):

- Density
- Reference density

**Description**

Enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message **△S862 Partly filled pipe** to be triggered if the measuring pipe is empty or partially full.

**User entry** 0 to 100 s

**Factory setting** 1 s

### Maximum damping partial filled pipe det.



**Navigation** Expert → Sensor → Process param. → Partial pipe det → Max. damping

**Prerequisite** One of the following options is selected in the **Assign process variable** parameter (→ [57](#)):  

- Density
- Reference density

**Description** Use this function to enter a damping value to enable detection of empty or partially filled measuring tubes.

**User entry** Positive floating-point number

**Factory setting** 0

**Additional information** *Description*

If pipe damping (**Testpoints** submenu) exceeds the specified value, the measuring device presumes that the pipe is partially filled and the flow signal is set to **0**. The measuring device displays the diagnostic message **△S862 Partly filled pipe**. In the case of non-homogeneous media or air pockets, the damping of the measuring tubes increases.

*User entry*

The function is enabled only if the input value is greater than **0**.

### 3.2.4 "Measurement mode" submenu

*Navigation* Expert → Sensor → Measurement mode

<b>► Measurement mode</b>	
Select medium	→ <a href="#">60</a>
Select gas type	→ <a href="#">60</a>
Reference sound velocity	→ <a href="#">61</a>
Temperature coefficient sound velocity	→ <a href="#">61</a>

**Select medium**

**Navigation** Expert → Sensor → Measurement mode → Select medium

**Description** Use this function to select the type of medium.

**Selection**

- Liquid
- Gas

**Factory setting** Liquid

**Select gas type**

**Navigation** Expert → Sensor → Measurement mode → Select gas type

**Prerequisite** The **Gas** option is selected in the **Select medium** parameter (→ 60).

**Description** Use this function to select the type of gas for the measuring application.

**Selection**

- Air
- Ammonia NH<sub>3</sub>
- Argon Ar
- Sulfur hexafluoride SF<sub>6</sub>
- Oxygen O<sub>2</sub>
- Ozone O<sub>3</sub>
- Nitrogen oxide NO<sub>x</sub>
- Nitrogen N<sub>2</sub>
- Nitrous oxide N<sub>2</sub>O
- Methane CH<sub>4</sub>
- Hydrogen H<sub>2</sub>
- Helium He
- Hydrogen chloride HCl
- Hydrogen sulfide H<sub>2</sub>S
- Ethylene C<sub>2</sub>H<sub>4</sub>
- Carbon dioxide CO<sub>2</sub>
- Carbon monoxide CO
- Chlorine Cl<sub>2</sub>
- Butane C<sub>4</sub>H<sub>10</sub>
- Propane C<sub>3</sub>H<sub>8</sub>
- Propylene C<sub>3</sub>H<sub>6</sub>
- Ethane C<sub>2</sub>H<sub>6</sub>
- Others

**Factory setting** Methane CH<sub>4</sub>

**Reference sound velocity**

**Navigation** Expert → Sensor → Measurement mode → Sound velocity

**Prerequisite** The **Others** option is selected in the **Select gas type** parameter (→ [60](#)).

**Description** Use this function to enter the sound velocity of the gas at 0 °C (+32 °F).

**User entry** 1 to 99 999.9999 m/s

**Factory setting** 0 m/s

**Temperature coefficient sound velocity**

**Navigation** Expert → Sensor → Measurement mode → Temp. coeff. SV

**Prerequisite** The **Others** option is selected in the **Select gas type** parameter (→ [60](#)).

**Description** Use this function to enter a temperature coefficient for the sound velocity of the gas.


**User entry** Positive floating-point number

**Factory setting** 0 (m/s)/K

**3.2.5 "External compensation" submenu**

*Navigation*

Expert → Sensor → External comp.

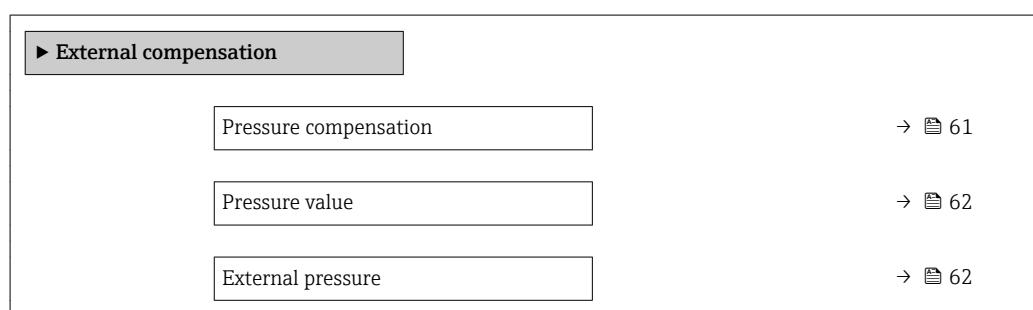**Pressure compensation**

**Navigation** Expert → Sensor → External comp. → Pressure compen.

**Prerequisite** The **Gas** option is selected in the **Select medium** parameter (→ [60](#)).

**Description** Use this function select the type of pressure compensation.

<b>Selection</b>	<ul style="list-style-type: none"><li>■ Off</li><li>■ Fixed value</li><li>■ External value</li></ul>
------------------	--

<b>Factory setting</b>	Off
------------------------	-----

---

## Pressure value

---

**Navigation**  Expert → Sensor → External comp. → Pressure value

**Prerequisite** The **Fixed value** option is selected in the **Pressure compensation** parameter (→ 61).

**Description** Use this function to enter a value for the process pressure that is used for pressure correction.

**User entry** Positive floating-point number

**Factory setting** 0 bar

**Additional information** *User entry*

 The unit is taken from the **Pressure unit** parameter (→ 50)

---

## External pressure

---

**Navigation**  Expert → Sensor → External comp. → External press.

**Prerequisite** The **External value** option is selected in the **Pressure compensation** parameter (→ 61).

**Description** Use this function to enter an external pressure value.

**User entry** Positive floating-point number

**Factory setting** 0 bar


**Additional information** *User entry*

 The unit is taken from the **Pressure unit** parameter (→ 50)

### 3.2.6 "Calculated values" submenu

*Navigation*


Expert → Sensor → Calculated value

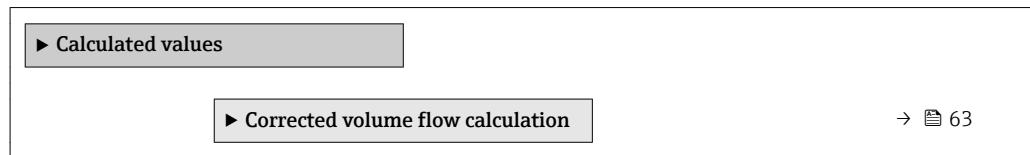

#### "Corrected volume flow calculation" submenu

*Navigation*

Expert → Sensor → Calculated value → Corr. vol.flow.

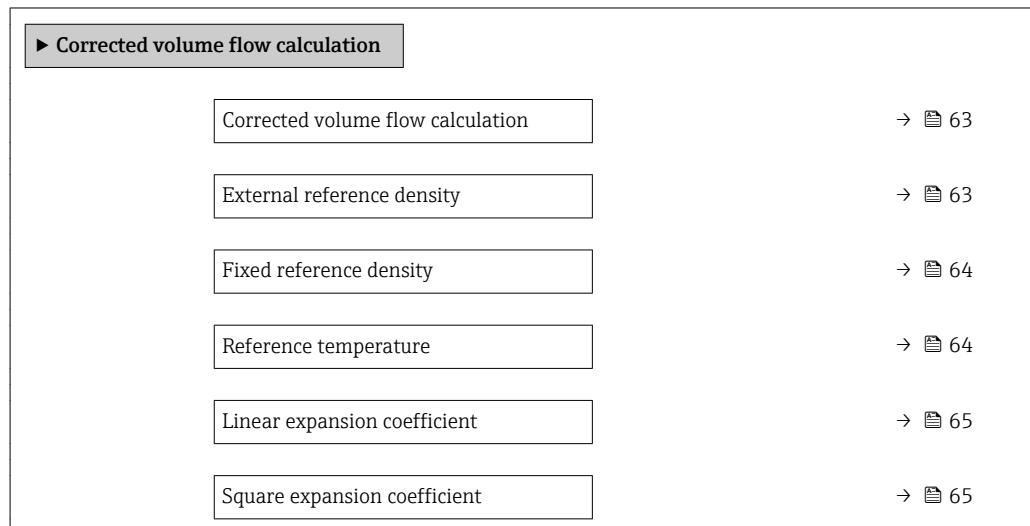

#### Corrected volume flow calculation



**Navigation**

Expert → Sensor → Calculated value → Corr. vol.flow. → Corr. vol.flow.

**Description**

Use this function to select the reference density for calculating the corrected volume flow.

**Selection**

- Fixed reference density
- Calculated reference density
- Reference density by API table 53
- External reference density

**Factory setting**

Calculated reference density

#### External reference density

**Navigation**

Expert → Sensor → Calculated value → Corr. vol.flow. → Ext. ref.density

**Prerequisite**

The **External reference density** option is selected in the **Corrected volume flow calculation** parameter (→ 63).

**Description** Use this function to enter the external reference density.

**User entry** Floating point number with sign

**Factory setting** 0 kg/Nl

## Fixed reference density



**Navigation** Expert → Sensor → Calculated value → Corr. vol.flow. → Fix ref.density

**Prerequisite** In the **Corrected volume flow calculation** parameter (→ 63) the **Fixed reference density** option is selected.

**Description** Use this function to enter a fixed value for the reference density.

**User entry** Positive floating-point number

**Factory setting** 1 kg/Nl

**Additional information** *Dependency*

The unit is taken from the **Reference density unit** parameter (→ 49)

## Reference temperature



**Navigation** Expert → Sensor → Calculated value → Corr. vol.flow. → Ref. temperature

**Prerequisite** In the **Corrected volume flow calculation** parameter (→ 63) the **Calculated reference density** option is selected.

**Description** Use this function to enter a reference temperature for calculating the reference density.

**User entry** -273.15 to 99 999 °C

**Factory setting** Country-specific:

- +20 °C
- +68 °F

**Additional information** *Dependency*

The unit is taken from the **Temperature unit** parameter (→ 50)

*Reference density calculation*

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

- $\rho_N$ : reference density
- $\rho$ : fluid density currently measured
- $t$ : fluid temperature currently measured
- $t_N$ : reference temperature at which the reference density is calculated (e.g. 20 °C)
- $\Delta t$ :  $t - t_N$
- $\alpha$ : linear expansion coefficient of the fluid, unit = [1/K]; K = Kelvin
- $\beta$ : square expansion coefficient of the fluid, unit = [1/K<sup>2</sup>]

## Linear expansion coefficient



**Navigation** Expert → Sensor → Calculated value → Corr. vol.flow. → Linear exp coeff

**Prerequisite** In the **Corrected volume flow calculation** parameter (→ 63) the **Calculated reference density** option is selected.

**Description** Use this function to enter a linear, fluid-specific expansion coefficient for calculating the reference density.

**User entry** Signed floating-point number

**Factory setting** 0.0

## Square expansion coefficient



**Navigation** Expert → Sensor → Calculated value → Corr. vol.flow. → Square exp coeff


**Description** For fluid with a non-linear expansion pattern: use this function to enter a quadratic, fluid-specific expansion coefficient for calculating the reference density.

**User entry** Signed floating-point number

**Factory setting** 0.0

## 3.2.7 "Sensor adjustment" submenu

*Navigation* Expert → Sensor → Sensor adjustm.

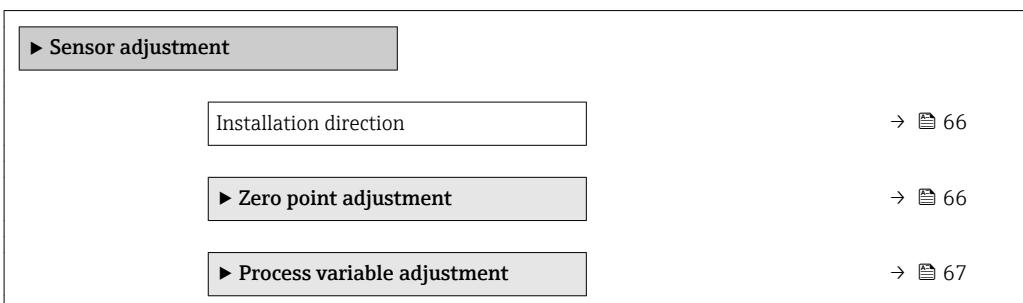

**Installation direction****Navigation**

Expert → Sensor → Sensor adjustm. → Install. direct.

**Description**

Use this function to change the sign of the medium flow direction.

**Selection**

- Flow in arrow direction
- Flow against arrow direction

**Factory setting**


Flow in arrow direction

**Additional information****Description**

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

**"Zero point adjustment" submenu****Navigation**

Expert → Sensor → Sensor adjustm. → Zero point adj.

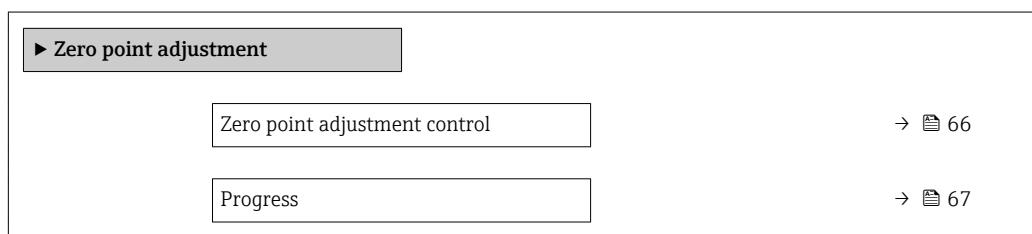**Zero point adjustment control****Navigation**

Expert → Sensor → Sensor adjustm. → Zero point adj. → Zero point adj.

**Description**

Use this function to select the start of the zero point adjustment.

Note conditions .

**Selection**

- Cancel
- Busy
- Zero point adjust failure
- Start

**Factory setting**

Cancel

**Additional information***Description*

- Cancel  
If zero point adjustment has failed, select this option to cancel zero point adjustment.
- Busy  
Is displayed during zero point adjustment.
- Zero point adjust failure  
Is displayed if zero point adjustment has failed.
- Start  
Select this option to start zero point adjustment.

**Progress****Navigation**
 Expert → Sensor → Sensor adjustm. → Zero point adj. → Progress
**Description**

The progress of the process is indicated.

**User interface**

0 to 100 %

**"Process variable adjustment" submenu***Navigation*
 Expert → Sensor → Sensor adjustm. → Variable adjust

► Process variable adjustment	
Mass flow offset	→  68
Mass flow factor	→  68
Volume flow offset	→  68
Volume flow factor	→  69
Density offset	→  69
Density factor	→  69
Corrected volume flow offset	→  70
Corrected volume flow factor	→  70
Reference density offset	→  70
Reference density factor	→  71

Temperature offset	→  71
Temperature factor	→  71

## Mass flow offset



**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset

**Description** Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

**User entry** Signed floating-point number

**Factory setting** 0 kg/s

**Additional information** *Description*

Corrected value = (factor × value) + offset

## Mass flow factor



**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor

**Description** Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

**User entry** Positive floating-point number

**Factory setting** 1

**Additional information** *Description*

Corrected value = (factor × value) + offset

## Volume flow offset



**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset

**Description** Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m<sup>3</sup>/s.

**User entry** Signed floating-point number

**Factory setting** 0 m<sup>3</sup>/s

**Additional information***Description*

Corrected value = (factor × value) + offset

**Volume flow factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor

**Description**

Use this function to enter a quantity factor (without time) for the volume flow. This multiplication factor is applied over the volume flow range.

**User entry**

Positive floating-point number

**Factory setting**

1

**Additional information***Description*

Corrected value = (factor × value) + offset

**Density offset****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Density offset

**Description**Use this function to enter the zero point shift for the density trim. The density unit on which the shift is based is kg/m<sup>3</sup>.**User entry**

Signed floating-point number

**Factory setting**0 kg/m<sup>3</sup>**Additional information***Description*

Corrected value = (factor × value) + offset

**Density factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Density factor

**Description**

Use this function to enter a quantity factor for the density. This multiplication factor is applied over the density range.

**User entry**

Positive floating-point number

**Factory setting**

1

**Additional information**      *Description* Corrected value = (factor × value) + offset**Corrected volume flow offset** **Navigation**  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset**Description** Use this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm<sup>3</sup>/s.**User entry** Signed floating-point number**Factory setting** 0 Nm<sup>3</sup>/s**Additional information**      *Description* Corrected value = (factor × value) + offset**Corrected volume flow factor** **Navigation**  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor**Description** Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.**User entry** Positive floating-point number**Factory setting** 1**Additional information**      *Description* Corrected value = (factor × value) + offset**Reference density offset** **Navigation**  Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. offset**Description** Use this parameter to enter the zero point shift for the reference density trim. The reference density unit on which the shift is based is 1 kg/Nm<sup>3</sup>.**User entry** Signed floating-point number**Factory setting** 0 kg/Nm<sup>3</sup>

**Additional information***Description*

Corrected value = (factor × value) + offset

**Reference density factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. factor

**Description**

Use this function to enter a quantity factor (without time) for the reference density. This multiplication factor is applied over the reference density range.

**User entry**

Positive floating-point number

**Factory setting**

1

**Additional information***Description*

Corrected value = (factor × value) + offset

**Temperature offset****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset

**Description**

Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is K.

**User entry**

Signed floating-point number

**Factory setting**

0 K

**Additional information***Description*

Corrected value = (factor × value) + offset

**Temperature factor****Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor

**Description**

Use this function to enter a quantity factor for the temperature. In each case, this factor refers to the temperature in K.

**User entry**

Positive floating-point number

**Factory setting**

1


**Additional information**      *Description*

 Corrected value = (factor × value) + offset

### 3.2.8 "Calibration" submenu

**Navigation**

 Expert → Sensor → Calibration

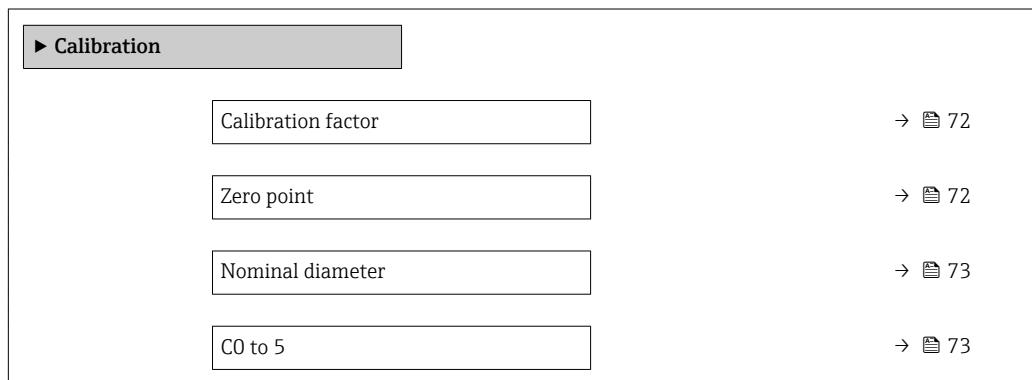

---

#### Calibration factor

**Navigation**

 Expert → Sensor → Calibration → Cal. factor

**Description**

Displays the current calibration factor for the sensor.

**User interface**

Signed floating-point number

**Factory setting**

Depends on nominal diameter and calibration.

---

#### Zero point

**Navigation**

 Expert → Sensor → Calibration → Zero point

**Description**

Use this function to enter the zero point correction value for the sensor.

**User entry**

Signed floating-point number

**Factory setting**

Depends on nominal diameter and calibration.

---

**Nominal diameter**

---

<b>Navigation</b>	Expert → Sensor → Calibration → Nominal diameter
<b>Description</b>	Displays the nominal diameter of the sensor.
<b>User interface</b>	DNxx / x"
<b>Factory setting</b>	Depends on the size of the sensor
<b>Additional information</b>	<i>Description</i>
	 The value is also specified on the sensor nameplate.

---

**C0 to 5**

---

<b>Navigation</b>	Expert → Sensor → Calibration → C0 to 5
<b>Description</b>	Displays the current density coefficients C0 to 5 of the sensor.
<b>User interface</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	<i>Description</i>
	 A density trim can alter the calibration value of the density coefficient.

### 3.2.9 "Supervision" submenu

*Navigation*       Expert → Sensor → Supervision



---

**Limit value measuring tube damping**

---

<b>Navigation</b>	Expert → Sensor → Supervision → Limit tube damp.
<b>Description</b>	Use this function to enter a limit value for measuring tube damping.
<b>User entry</b>	Positive floating-point number

**Factory setting** Positive floating-point number

**Additional information** *Limit value*




- If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S948 Tube damping too high.**
- For detecting inhomogeneous media, for example

### 3.3 "Communication" submenu

*Navigation*


Expert → Communication

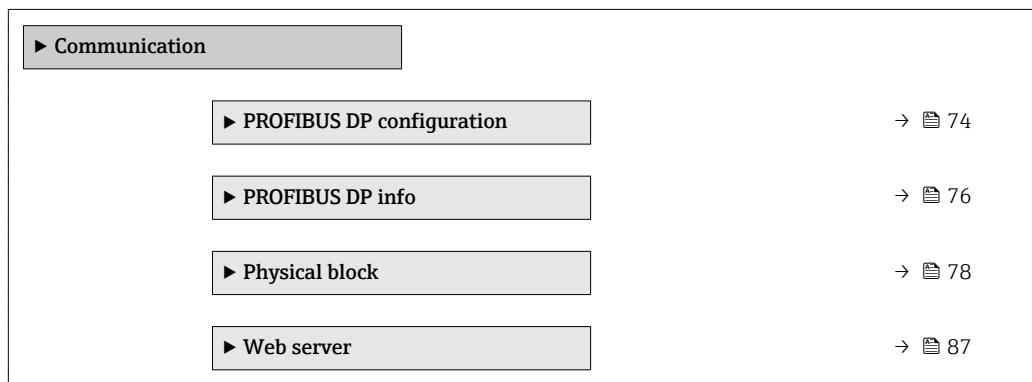

#### 3.3.1 "PROFIBUS DP configuration" submenu

*Navigation*

Expert → Communication → PROFIBUS DP conf

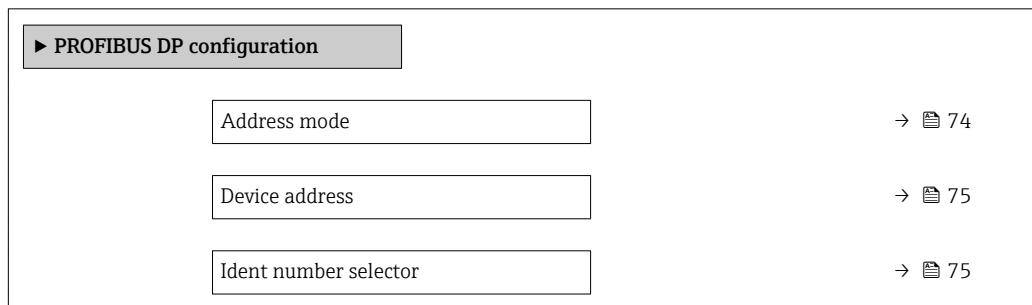


---

#### Address mode

---

**Navigation**

Expert → Communication → PROFIBUS DP conf → Address mode

**Description**

Displays the configured address mode.

**User interface**

- Hardware
- Software

**Factory setting**

Software

Additional information	Description
	 For detailed information, see the "Setting the device address" section of the Operating Instructions.

**Device address**

<b>Navigation</b>	 Expert → Communication → PROFIBUS DP conf → Device address
<b>Description</b>	Use this function to enter the device address.
<b>User entry</b>	0 to 126
<b>Factory setting</b>	126
Additional information	Description
	The address must always be configured for a PROFIBUS device. The valid address range is between 1 and 126. In a PROFIBUS network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.  Displays the configured address mode: <b>Address mode</b> parameter (→  74)


**Ident number selector**

<b>Navigation</b>	 Expert → Communication → PROFIBUS DP conf → Ident num select
<b>Description</b>	Use this function to select the device master file (GSD).
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Automatic mode</li> <li>▪ Manufacturer</li> <li>▪ Profile</li> <li>▪ 1 AI, 1 Totalizer (0x9740)</li> <li>▪ 2 AI, 1 Totalizer (0x9741)</li> </ul>
<b>Factory setting</b>	Automatic mode
Additional information	Description
	In order to integrate the field devices into the bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate. These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned.

### 3.3.2 "PROFIBUS DP info" submenu

Navigation

Expert → Communication → PROFIBUS DP info

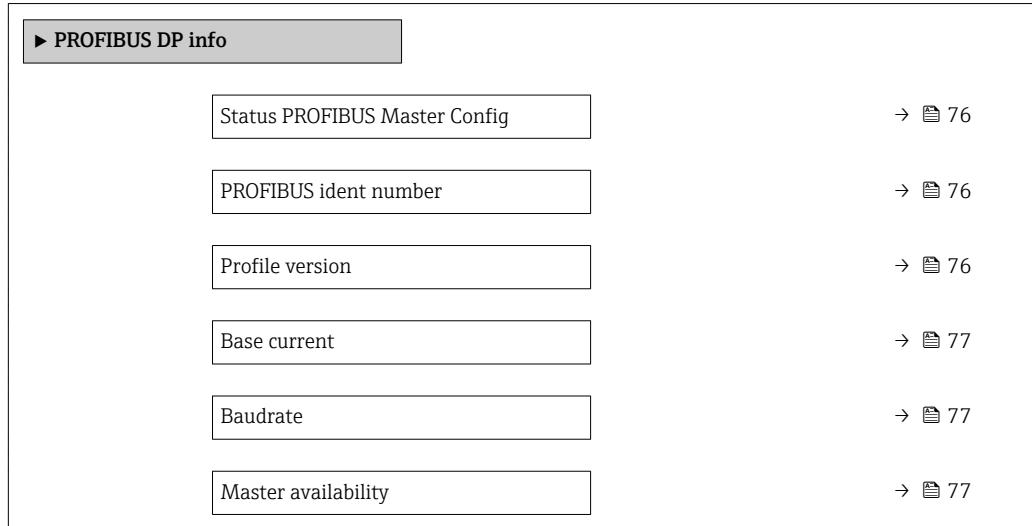

---

#### Status PROFIBUS Master Config

---

Navigation

Expert → Communication → PROFIBUS DP info → Stat Master Conf

Description

For displaying the status of the PROFIBUS Master configuration.

User interface

- Active
- Not active

Factory setting

Not active

---

#### PROFIBUS ident number

---

Navigation

Expert → Communication → PROFIBUS DP info → Ident number

Description

For displaying the PROFIBUS identification number.

User interface

0 to FFFF

Factory setting

0x1561

---

#### Profile version

---

Navigation

Expert → Communication → PROFIBUS DP info → Profile version

Description

Displays the profile version.

**User interface** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

**Factory setting** 3.02

### Base current

**Navigation**  Expert → Communication → PROFIBUS DP info → Base current

**Description** Displays the basic current: Every PA measuring device taps a constant basic current from the MBP cable. This base current must be at least 10 mA. The base current enables power to be supplied to the measuring device.

**User interface** 16 mA

### Baudrate

**Navigation**  Expert → Communication → PROFIBUS DP info → Baudrate

**Description** Displays the transmission rate.

**User interface**

- Not available
- 9.6 kBaud
- 19.2 kBaud
- 31.25 kBaud
- 45.45 kBaud
- 93.75 kBaud
- 187.5 kBaud
- 500 kBaud
- 1.5 MBaud
- 3 MBaud
- 6 MBaud
- 12 MBaud

**Factory setting** 9.6 kBaud

### Master availability

**Navigation**  Expert → Communication → PROFIBUS DP info → Master avail.

**Description** Displays whether or not a PROFIBUS master is present in the network.

**User interface**

- No
- Yes

**Factory setting** No

### 3.3.3 "Physical block" submenu

Navigation

Expert → Communication → Physical block

► Physical block	
Device tag	→ <a href="#">79</a>
Static revision	→ <a href="#">79</a>
Strategy	→ <a href="#">79</a>
Alert key	→ <a href="#">80</a>
Target mode	→ <a href="#">80</a>
Mode block actual	→ <a href="#">80</a>
Mode block permitted	→ <a href="#">80</a>
Mode block normal	→ <a href="#">81</a>
Alarm summary	→ <a href="#">81</a>
Software revision	→ <a href="#">82</a>
Hardware revision	→ <a href="#">82</a>
Manufacturer ID	→ <a href="#">82</a>
Device ID	→ <a href="#">82</a>
Serial number	→ <a href="#">83</a>
Diagnostics	→ <a href="#">83</a>
Diagnostics mask	→ <a href="#">83</a>
Device certification	→ <a href="#">84</a>
Factory reset	→ <a href="#">84</a>
Descriptor	→ <a href="#">85</a>
Device message	→ <a href="#">85</a>
Device install date	→ <a href="#">85</a>
Ident number selector	→ <a href="#">85</a>

Hardware lock	→  86
Feature supported	→  86
Feature enabled	→  86
Condensed status diagnostic	→  87

---

**Device tag****Navigation** Expert → Communication → Physical block → Device tag**Description** Use this function to enter the name for the measuring point.**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).**Factory setting** Promass 100 DP

---

**Static revision****Navigation** Expert → Communication → Physical block → Static revision**Description** Displays the event counter: every write access to a static block parameter is counted.**User interface** 0 to FFFF**Additional information** *Description*

Static parameters are parameters that are not changed by the process.

---

**Strategy****Navigation** Expert → Communication → Physical block → Strategy**Description** Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.**User entry** 0 to FFFF**Factory setting** 0

**Alert key****Navigation**

Expert → Communication → Physical block → Alert key

**Description**

Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.

**User entry**

0 to 0xFF

**Factory setting**

0

**Target mode****Navigation**

Expert → Communication → Physical block → Target mode

**Description**

Displays the Target mode: The target mode indicates which mode of operation is used for this function block. This mode is generally set by a control application.

**User interface**

- Auto
- Out of service

**Mode block actual****Navigation**

Expert → Communication → Physical block → Mode block act

**Description**

Displays the Mode block actual: Under certain conditions, it is possible that a function block will not operate in the required mode. In this case, the Mode block actual shows the actual mode in which the function block is currently operating. A comparison of the Mode block actual with the Target mode indicates whether it was possible to reach the Target mode (→ [80](#)).

**User interface**

- Auto
- Out of service

**Additional information****Description**

A comparison of the current mode with the target mode (**Target mode** parameter (→ [80](#))) indicates whether it was possible to reach the target mode.

**Mode block permitted****Navigation**

Expert → Communication → Physical block → Mode block perm

**Description**

Displays the Mode block permitted: This defines which modes of operation in the Target mode (→ [80](#)) are available for the function block. The operating modes that are supported vary depending on the type and function of the block.

User interface	0 to 255
----------------	----------

---

### Mode block normal

---

Navigation	 Expert → Communication → Physical block → Mode blk norm
------------	---

Description	Displays the Mode block normal: This is available to allow the operator to select the Mode block normal from the available modes of operation. This can be set using an operating tool in order to help the user configure the operating mode of a function block.
-------------	--

User interface	<ul style="list-style-type: none"> <li>■ Auto</li> <li>■ Out of service</li> </ul>
----------------	--

---

### Alarm summary

---

Navigation	 Expert → Communication → Physical block → Alarm summary
------------	---

Description	Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.
-------------	---

User interface	<ul style="list-style-type: none"> <li>■ Discrete alarm</li> <li>■ Alarm state HiHi limit</li> <li>■ Alarm state Hi limit</li> <li>■ Alarm state LoLo limit</li> <li>■ Alarm state Lo limit</li> <li>■ Update Event</li> </ul>
----------------	--

Additional information	<p><i>Description</i></p> <p> Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Physical Block function block.</p>
------------------------	--

*User interface*

<ul style="list-style-type: none"> <li>■ Discrete alarm Alarm or warning message with a discrete value.</li> <li>■ Alarm state HiHi limit Upper alarm limit</li> <li>■ Alarm state Hi limit Upper warning limit</li> <li>■ Alarm state LoLo limit Lower alarm limit</li> <li>■ Alarm state Lo limit Lower warning limit</li> <li>■ Update Event This option constitutes a special alarm that is triggered if a static parameter is changed. If such a parameter is modified, the associated bit is set in the <b>Alarm summary</b> parameter (→ 81), the output of the block switches to "GOOD (NC) Active Update Event" (if the current status has a lower priority than this), and the block remains in this state for a duration of 10 s. The block then reverts to the normal state (the output has the last status and the <b>Update Event</b> option bit in the <b>Alarm summary</b> parameter (→ 81) is deleted again).</li> </ul>
---

**Software revision**

---

**Navigation**  Expert → Communication → Physical block → Software rev.

**Description** Displays the firmware version of the measuring device.

**User interface** Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

---

**Hardware revision**

---

**Navigation**  Expert → Communication → Physical block → Hardware rev.

**Description** Displays the hardware revision of the measuring device.

**User interface** Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

---

**Manufacturer ID**

---

**Navigation**  Expert → Communication → Physical block → Manufacturer ID

**Description** Displays the manufacturer ID with which the measuring device has been registered with the PNO (PROFIBUS User Organization).

**User interface** 0 to FFFF

**Factory setting** 0x11

---

**Device ID**

---

**Navigation**  Expert → Communication → Physical block → Device ID

**Description** Displays the device ID for identifying the measuring device in a PROFIBUS network.

**User interface** Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

**Factory setting** Promass 100 DP

---

## Serial number

---

<b>Navigation</b>	  Expert → Communication → Physical block → Serial number
<b>Description</b>	Displays the serial number of the measuring device. It can also be found on the nameplate of the sensor and transmitter.
<b>User interface</b>	Max. 11-digit character string comprising letters and numbers.
<b>Additional information</b>	<i>Description</i>  <b>Uses of the serial number</b> <ul style="list-style-type: none"><li>▪ To identify the measuring device quickly, e.g. when contacting Endress+Hauser.</li><li>▪ To obtain specific information on the measuring device using the Device Viewer: <a href="http://www.endress.com/deviceviewer">www.endress.com/deviceviewer</a></li></ul>

---

## Diagnostics

---

<b>Navigation</b>	  Expert → Communication → Physical block → Diagnostics
<b>Description</b>	Displays the diagnostic messages.
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ Hardware failure electronics</li><li>▪ Hardware failure mechanics</li><li>▪ Temperature motor</li><li>▪ Electronic temperature</li><li>▪ Memory checksum error</li><li>▪ Measurement error</li><li>▪ Device not initialized</li><li>▪ Initialization error</li><li>▪ Zero point error</li><li>▪ Power supply</li><li>▪ Configuration invalid</li><li>▪ On warmstart</li><li>▪ On coldstart</li><li>▪ Maintenance required</li><li>▪ Characterization invalid</li><li>▪ Ident number violation</li><li>▪ More information available</li><li>▪ Maintenance alarm</li><li>▪ Maintenance demanded</li><li>▪ Function check or simulation</li><li>▪ Invalid process condition</li></ul>

---

## Diagnostics mask

---

<b>Navigation</b>	  Expert → Communication → Physical block → Diagnostics mask
<b>Description</b>	Displays the diagnostic messages supported by the measuring device.

**User interface**

- Hardware failure electronics
- Hardware failure mechanics
- Temperature motor
- Electronic temperature
- Memory checksum error
- Measurement error
- Device not initialized
- Initialization error
- Zero point error
- Power supply
- Configuration invalid
- On warmstart
- On coldstart
- Maintenance required
- Characterization invalid
- Ident number violation
- More information available
- Maintenance alarm
- Maintenance demanded
- Function check or simulation
- Invalid process condition

---

**Device certification**

---

**Navigation** Expert → Communication → Physical block → Dev certificate**Description**

Displays certificates of the measuring device, e.g. Ex certificate.

**User interface**

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

**Factory reset**

---

**Navigation** Expert → Communication → Physical block → Factory reset**Description**

Use this function to reset a certain set of parameters in a block.

**Selection**

- to defaults
- warmstart device
- reset bus address
- Cancel

**Factory setting**

Cancel

**Descriptor****Navigation**

Expert → Communication → Physical block → Descriptor

**Description**

Use this function to enter a user-specific string to describe the device within the application.

**User entry**

Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

**Device message****Navigation**

Expert → Communication → Physical block → Device message

**Description**

Use this function to enter a user-definable message (a string) to describe the device within the application or in the plant.

**User entry**

Max. 32 Zeichen wie Buchstaben, Zahlen oder Sonderzeichen (z.B. @, %, /).

**Device install date****Navigation**

Expert → Communication → Physical block → Device inst.date

**Description**

Use this function to enter the date of installation of the device.

**User entry**

Max. 16 Zeichen wie Buchstaben, Zahlen oder Sonderzeichen (z.B. @, %, /).

**Ident number selector****Navigation**

Expert → Communication → Physical block → Ident num select

**Description**

Use this function to select the device master file (GSD).

**Selection**

- Automatic mode
- Manufacturer
- Profile
- 1 AI, 1 Totalizer (0x9740)
- 2 AI, 1 Totalizer (0x9741)

**Factory setting**

Automatic mode

**Additional information***Description*

In order to integrate the field devices into the bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate. These data are available in the device master file

(GSD) which is provided to the PROFIBUS Master when the communication system is commissioned.

---

## Hardware lock

---

**Navigation**  Expert → Communication → Physical block → Hardware lock

**Description** Displays the hardware write protection.

**User interface**

- Unprotected
- Protected

**Additional information** *Description*  
Indicates whether it is possible to write-access the measuring device via PROFIBUS (acyclic data transmission, e.g. via the "FieldCare" operating program).

 For detailed information on hardware write protection, see the "Write protection via write protection switch" section of the Operating Instructions.

*User interface*

- Unprotected  
Write access via PROFIBUS is possible (acyclic data transmission).
- Protected  
Write access via PROFIBUS is locked (acyclic data transmission).

---

## Feature supported

---

**Navigation**  Expert → Communication → Physical block → Feature support

**Description** Displays the PROFIBUS features that are supported by the measuring device.

**User interface**

- Condensed status
- Classic status diagnosis
- Data exchange broadcast
- MS1 application relationship
- PROFIsafe communication

---

## Feature enabled

---

**Navigation**  Expert → Communication → Physical block → Feature enabled

**Description** Displays the PROFIBUS features that are enabled in the measuring device.

**User interface**

- Condensed status
- Classic status diagnosis
- Data exchange broadcast
- MS1 application relationship
- PROFIsafe communication

**Condensed status diagnostic****Navigation**

Expert → Communication → Physical block → Condensed status

**Description**

Use this function to switch the condensed status diagnostic on and off.

**Selection**

- Off
- On

**Factory setting**

On

**3.3.4 "Web server" submenu***Navigation*

Expert → Communication → Web server

▶ Web server	
Web server language	→  87
MAC address	→  88
IP address	→  88
Subnet mask	→  89
Default gateway	→  89
Web server functionality	→  89

**Web server language****Navigation**

Expert → Communication → Web server → Webserv.language

**Description**

Use this function to select the web server language setting.

**Selection**

- English \*
- Deutsch \*
- Français \*
- Español \*
- Italiano
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык (Russian) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- العربية (Arabic) \*
- Bahasa Indonesia \*
- ภาษาไทย (Thai) \*
- tiếng Việt (Vietnamese) \*
- čeština (Czech) \*

**Factory setting**

English

**MAC address****Navigation**
  Expert → Communication → Web server → MAC Address
**Description**Displays the MAC<sup>1)</sup> address of the measuring device.**User interface**

Unique 12-digit character string comprising letters and numbers

**Factory setting**

Each measuring device is given an individual address.

**Additional information***Example*

For the display format  
00:07:05:10:01:5F

**IP address****Navigation**
  Expert → Communication → Web server → IP address
**Description**

Displays the IP address of the Web server of the measuring device.

**User interface**

4 octet: 0 to 255 (in the particular octet)

**Factory setting**

192.168.1.212

\* Visibility depends on order options or device settings

1) Media Access Control

**Subnet mask**

**Navigation** Expert → Communication → Web server → Subnet mask

**Description** Displays the subnet mask.

**User interface** 4 octet: 0 to 255 (in the particular octet)

**Factory setting** 255.255.255.0

**Default gateway**

**Navigation** Expert → Communication → Web server → Default gateway

**Description** Displays the default gateway.

**User interface** 4 octet: 0 to 255 (in the particular octet)

**Factory setting** 0.0.0.0

**Web server functionality**

**Navigation** Expert → Communication → Web server → Webserver funct.

**Description** Use this function to switch the Web server on and off.

**Selection**

- Off
- On

**Factory setting** On

### 3.4 "Analog inputs" submenu

*Navigation* Expert → Analog inputs

► Analog inputs

► Analog input 1 to 8

→ 90

### 3.4.1 "Analog input 1 to 8" submenu

Navigation



Expert → Analog inputs → Analog input 1 to 8

► Analog input 1 to 8	
Channel	→  90
PV filter time	→  91
Fail safe type	→  91
Fail safe value	→  91
Out value	→  92
Out status	→  92
Out status	→  92

#### Channel



Navigation



Expert → Analog inputs → Analog input 1 to 8 → Channel

Description

For selecting the process variable.

Selection

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow \*
- Carrier mass flow \*
- Density
- Reference density \*
- Concentration \*
- Temperature
- Carrier pipe temperature \*
- Electronic temperature
- Oscillation frequency 0
- Frequency fluctuation 0
- Oscillation amplitude 0 \*
- Frequency fluctuation 0
- Oscillation damping 0
- Tube damping fluctuation 0
- Signal asymmetry
- Exciter current 0
- Sensor integrity

Factory setting

Mass flow

\* Visibility depends on order options or device settings

**Additional information***Selection*

Detailed description of the options **Oscillation frequency**, **Oscillation amplitude**, **Oscillation damping** and **Signal asymmetry**: Value 1 display parameter (→ 16)

**PV filter time****Navigation**

Expert → Analog inputs → Analog input 1 to 8 → PV filter time

**Description**

Use this function to enter a time to suppress signal peaks. During the specified time the Analog input does not respond to an erratic increase in the process variable.

**User entry**

Positive floating-point number

**Factory setting**

0

**Fail safe type****Navigation**

Expert → Analog inputs → Analog input 1 to 8 → Fail safe type

**Description**

Use this function to select the failure mode.

**Selection**

- Fail safe value
- Fallback value
- Off

**Factory setting**

Off

**Additional information***Selection*

If an input or simulation value has the status BAD, the function block uses this predefined failure value:

- Fail safe value  
A substitute value is used. This is specified in the **Fail safe value** parameter (→ 91).
- Fallback value  
If the value was good at one point, then this last valid value is used.
- Off  
The system continues to use the bad value.

**Fail safe value****Navigation**

Expert → Analog inputs → Analog input 1 to 8 → Fail safe value

**Prerequisite**

In **Fail safe type** parameter (→ 91), the **Fail safe value** option is selected.

**Description**

Use this function to enter a failure value. The value entered is displayed as the output value (**Out value** parameter (→ 92)) in the event of an error.

**User entry** Signed floating-point number

**Factory setting** 0

---

### Out value

---

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Out value

**Prerequisite** In **Target mode** parameter (→ 93), the **Auto** option is selected.

**Description** Displays the analog value which is calculated when the function is executed.

**User interface** Signed floating-point number

---

### Out status

---

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Out status

**Description** Displays the current output status (Good, Bad, Uncertain).

**User interface**

- Good
- Uncertain
- Bad

---

### Out status

---

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Out status

**Prerequisite** In **Target mode** parameter (→ 93), the **Auto** option is selected.

**Description** Displays the current output status (hex value).

**User interface** 0 to 0xFF

---

### Tag description

---



**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Tag description

**Description** Use this function to enter a string to identify the block.

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Static revision

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Static revision
<b>Description</b>	Displays the event counter: every write access to a static block parameter is counted.
<b>User interface</b>	0 to FFFF
<b>Additional information</b>	<p><i>Description</i></p>  Static parameters are parameters that are not changed by the process.

---

## Strategy

---



<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Strategy
<b>Description</b>	Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.
<b>User entry</b>	0 to FFFF
<b>Factory setting</b>	0

---

## Alert key

---



<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Alert key
<b>Description</b>	Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
<b>User entry</b>	0 to 0xFF
<b>Factory setting</b>	0

---

## Target mode

---



<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Target mode
<b>Description</b>	Displays the Target mode: The target mode indicates which mode of operation is used for this function block. This mode is generally set by a control application.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Auto</li> <li>▪ Man</li> <li>▪ Out of service</li> </ul>

---

## Mode block actual

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Mode block act
<b>Description</b>	Displays the Mode block actual: Under certain conditions, it is possible that a function block will not operate in the required mode. In this case, the Mode block actual shows the actual mode in which the function block is currently operating. A comparison of the Mode block actual with the Target mode indicates whether it was possible to reach the Target mode (→ <a href="#">93</a> ).
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ Auto</li><li>▪ Man</li><li>▪ Out of service</li></ul>
<b>Additional information</b>	<p><i>Description</i></p> <p> A comparison of the current mode with the target mode (<b>Target mode</b> parameter (→ <a href="#">93</a>)) indicates whether it was possible to reach the target mode.</p>

---

## Mode block permitted

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Mode block perm
<b>Description</b>	Displays the Mode block permitted: This defines which modes of operation in the Target mode (→ <a href="#">93</a> ) are available for the function block. The operating modes that are supported vary depending on the type and function of the block.
<b>User interface</b>	0 to 255

---

## Mode block normal

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Mode blk norm
<b>Description</b>	Displays the Mode block normal: This is available to allow the operator to select the Mode block normal from the available modes of operation. This can be set using an operating tool in order to help the user configure the operating mode of a function block.
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ Auto</li><li>▪ Man</li><li>▪ Out of service</li></ul>

---

## Alarm summary

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Alarm summary
<b>Description</b>	Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Discrete alarm</li> <li>■ Alarm state HiHi limit</li> <li>■ Alarm state Hi limit</li> <li>■ Alarm state LoLo limit</li> <li>■ Alarm state Lo limit</li> <li>■ Update Event</li> </ul>
<b>Additional information</b>	<p><b>Description</b></p> <p> Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Analog Inputs function block.</p>

<b>Batch ID</b>	
<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Batch ID
<b>Description</b>	Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.
<b>User entry</b>	Positive integer

<b>Batch operation</b>	
<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Batch operation
<b>Description</b>	Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0

<b>Batch phase</b>	
<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Batch phase
<b>Description</b>	Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0

**Batch Recipe Unit Procedure****Navigation**

█ Expert → Analog inputs → Analog input 1 to 8 → Batch Recipe

**Description**

Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

**User entry**

0 to 65 535

**Factory setting**

0

**Additional information****Description**

The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

**PV scale lower range****Navigation**

█ Expert → Analog inputs → Analog input 1 to 8 → PVscale lo range

**Description**

Use this function to enter the lower value range for the input value (Process Value Scale) in system units. The process value scale normalizes the input value to a user-specific range.

**User entry**

Signed floating-point number

**Factory setting**

0

**PV scale upper range****Navigation**

█ Expert → Analog inputs → Analog input 1 to 8 → PVscale up range

**Description**

Use this function to enter the upper value range for the input value (Process Value Scale) in system units. The process value scale normalizes the input value to a user-specific range.

**User entry**

Signed floating-point number

**Factory setting**

100.0

**Out scale lower range****Navigation**

█ Expert → Analog inputs → Analog input 1 to 8 → Out scale low

**Description**

Use this function to enter the lower value range for the output value in system units.

**User entry** Signed floating-point number

**Factory setting** 0

---

**Out scale upper range** 

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Out scale up

**Description** Use this function to enter the upper value range for the output value in system units.

**User entry** Signed floating-point number

**Factory setting** 100.0

---

**Lin type** 

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Lin type

**Description** Use this function to switch off the linearization type for the input value.

**Selection** Off

**Factory setting** Off

---

**Out unit** 

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Out unit

**Description** Use this function to enter a numerical code (hex) for the system unit.

**User entry** 0 to 65 535

**Factory setting** 1997

---

**Out decimal point** 

**Navigation**  Expert → Analog inputs → Analog input 1 to 8 → Out dec\_point

**Description** Use this function to enter the maximum number of decimal places that are displayed for the output value.

**User entry** 0 to 7

---

Factory setting	0
-----------------	---

---

## Alarm hysteresis



**Navigation** Expert → Analog inputs → Analog input 1 to 8 → Alarm hysteresis

**Description** Use this function to enter the hysteresis value for the upper and lower warning or alarm limit values.

**User entry** Signed floating-point number

Factory setting	0
-----------------	---

---

## Hi Hi Lim



**Navigation** Expert → Analog inputs → Analog input 1 to 8 → Hi Hi Lim

**Description** Use this function to enter the value for the upper alarm limit (**Hi Hi alarm value** parameter (→ 100)).

**User entry** Signed floating-point number

**Factory setting** Positive floating-point number

**Additional information** *Description*

If the output value Out value (→ 92) exceeds this limit value, the **Hi Hi alarm state** parameter (→ 100) is output.

*User entry*

The value is entered in the defined units (**Out unit** parameter (→ 97)) and must be in the range defined in the **Out scale lower range** parameter (→ 96) and **Out scale upper range** parameter (→ 97).

---

## Hi Lim



**Navigation** Expert → Analog inputs → Analog input 1 to 8 → Hi Lim

**Description** Use this function to enter the value for the upper warning limit (**Hi alarm value** parameter (→ 100)).

**User entry** Signed floating-point number

**Factory setting** Positive floating-point number

**Additional information***Description*

 If the output value Out value (→ 92) exceeds this limit value, the **Hi alarm state** parameter (→ 100) is output.

*User entry*

 The value is entered in the defined units (**Out unit** parameter (→ 97)) and must be in the range defined in the **Out scale lower range** parameter (→ 96) and **Out scale upper range** parameter (→ 97).

**Lo Lim****Navigation**

Expert → Analog inputs → Analog input 1 to 8 → Lo Lim

**Description**

Use this function to enter the value for the lower warning limit (**Lo alarm value** parameter (→ 101)).

**User entry**

Signed floating-point number

**Factory setting**

Negative floating-point number

**Additional information***Description*

 If the output value Out value (→ 92) exceeds this limit value, the **Lo alarm state** parameter (→ 101) is output.

*User entry*

 The value is entered in the defined units (**Out unit** parameter (→ 97)) and must be in the range defined in the **Out scale lower range** parameter (→ 96) and **Out scale upper range** parameter (→ 97).

**Lo Lo Lim****Navigation**

Expert → Analog inputs → Analog input 1 to 8 → Lo Lo Lim

**Description**

Use this function to enter the value for the lower alarm limit (**Lo Lo alarm value** parameter (→ 101)).

**User entry**

Signed floating-point number

**Factory setting**

Negative floating-point number

**Additional information***Description*

 If the output value Out value (→ 92) exceeds this limit value, the **Lo Lo alarm state** parameter (→ 101) is output.

*User entry*

 The value is entered in the defined units (**Out unit** parameter (→ 97)) and must be in the range defined in the **Out scale lower range** parameter (→ 96) and **Out scale upper range** parameter (→ 97).

**Hi Hi alarm value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → HiHi alarm value
<b>Description</b>	Displays the alarm value for the upper alarm limit value ( <b>Hi Hi Lim</b> parameter (→ <a href="#">98</a> )).
<b>User interface</b>	Signed floating-point number

**Hi Hi alarm state**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → HiHi alarm state
<b>Description</b>	Displays the status for the upper alarm limit value ( <b>Hi Hi Lim</b> parameter (→ <a href="#">98</a> )).
<b>User interface</b>	<ul style="list-style-type: none"><li>■ No alarm</li><li>■ Alarm state HiHi limit</li></ul>
<b>Additional information</b>	<i>User interface</i>
	 The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.

**Hi alarm value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Hi alarm value
<b>Description</b>	Displays the alarm value for the upper warning limit value ( <b>Hi Lim</b> parameter (→ <a href="#">98</a> )).
<b>User interface</b>	Signed floating-point number

**Hi alarm state**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Hi alarm state
<b>Description</b>	Displays the status for the upper warning limit value ( <b>Hi Lim</b> parameter (→ <a href="#">98</a> )).
<b>User interface</b>	<ul style="list-style-type: none"><li>■ No warning</li><li>■ Alarm state Hi limit</li></ul>
<b>Additional information</b>	<i>User interface</i>
	 The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

---

**Lo alarm value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Lo alarm value
<b>Description</b>	Displays the alarm value for the lower warning limit value ( <b>Lo Lim</b> parameter (→ <a href="#">99</a> )).
<b>User interface</b>	Signed floating-point number

---

**Lo alarm state**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → Lo alarm state
<b>Description</b>	Displays the status for the lower warning limit value ( <b>Lo Lim</b> parameter (→ <a href="#">99</a> )).
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ No warning</li><li>▪ Alarm state Lo limit</li></ul>
<b>Additional information</b>	<i>User interface</i>
	 The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

---

**Lo Lo alarm value**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → LoLo alarm value
<b>Description</b>	Displays the alarm value for the lower alarm limit value ( <b>Lo Lo Lim</b> parameter (→ <a href="#">99</a> )).
<b>User interface</b>	Signed floating-point number

---

**Lo Lo alarm state**

---

<b>Navigation</b>	 Expert → Analog inputs → Analog input 1 to 8 → LoLo alarm state
<b>Description</b>	Displays the status for the lower alarm limit value ( <b>Lo Lo Lim</b> parameter (→ <a href="#">99</a> )).
<b>User interface</b>	<ul style="list-style-type: none"><li>▪ No alarm</li><li>▪ Alarm state LoLo limit</li></ul>
<b>Additional information</b>	<i>User interface</i>
	 The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.

**Simulate enabled**

**Navigation** Expert → Analog inputs → Analog input 1 to 8 → Simulate enabled

**Description** Use this function to enable or disable block simulation.

**Selection**

- Disable
- Enable

**Factory setting** Disable

**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.

**Simulate value**

**Navigation** Expert → Analog inputs → Analog input 1 to 8 → Simulate value

**Description** Use this function to enter a simulation value for the block.

**User entry** Signed floating-point number

**Factory setting** 0

**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.

**Simulate status**

**Navigation** Expert → Analog inputs → Analog input 1 to 8 → Simulate status

**Description** Use this function to enter a simulation status for the block.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.

**Out unit text****Navigation**

Expert → Analog inputs → Analog input 1 to 8 → Out unit text

**Description**

Use this function to enter the out unit text: if a specific out unit does not appear in the code list, the user can enter the specific text. The unit code is then equivalent to the definition provided here.

**User entry**

Max. 16 characters such as letters, numbers or special characters (e.g. @, %, /).

**Factory setting**

NoUnit

### 3.5 "Discrete inputs" submenu

*Navigation*

Expert → Discrete inputs

## ► Discrete inputs

## ► Discrete input 1 to 2

→ 103

#### 3.5.1 "Discrete input 1 to 2" submenu

*Navigation*

Expert → Discrete inputs → Discrete input 1 to 2

## ► Discrete input 1 to 2

Channel

→ 104

Invert

→ 104

Fail safe type

→ 104

Fail safe value

→ 105

Out value

→ 105

Out status

→ 105

Out status

→ 105

---

**Channel**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Channel

**Description** Use this function to assign a measured variable to the particular function block.

**Selection**

- Empty pipe detection
- Low flow cut off
- Verification status \*

**Factory setting** Empty pipe detection

---

**Invert**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Invert

**Description** Use this function to invert the input signal.

**Selection**

- Off
- On

**Factory setting** Off

---

**Fail safe type**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Fail safe type

**Description** Use this function to select the failure mode.

**Selection**

- Fail safe value
- Fallback value
- Off

**Factory setting** Off

**Additional information** Selection

If an input or simulation value has the status BAD, the function block uses this predefined failure value:

- Fail safe value  
A substitute value is used. This is specified in the **Fail safe value** parameter (→ 105).
- Fallback value  
If the value was good at one point, then this last valid value is used.
- Off  
The system continues to use the bad value.

---

\* Visibility depends on order options or device settings

---

**Fail safe value**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Fail safe value

**Prerequisite** In **Fail safe type** parameter (→ 104), the **Fail safe value** option is selected.

**Description** Use this function to enter a failure value. The value entered is displayed as the output value (**Out value** parameter (→ 105)) in the event of an error.

**User entry** 0 to 255

**Factory setting** 0

---

**Out value**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Out value

**Prerequisite** In **Target mode** parameter (→ 107), the **Auto** option is selected.

**Description** Displays the analog value which is calculated when the function is executed.

**User interface** 0 to 255

---

**Out status**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Out status

**Description** Displays the current output status (Good, Bad, Uncertain).

**User interface**

- Good
- Uncertain
- Bad

---

**Out status**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Out status

**Prerequisite** In **Target mode** parameter (→ 107), the **Auto** option is selected.

**Description** Displays the current output status (hex value).

**User interface** 0 to 0xFF

**Tag description**

**Navigation**  Expert → Discrete inputs → Discrete input 1 to 2 → Tag description

**Description** Use this function to enter a string to identify the block.

**User entry** Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

**Static revision**

**Navigation**  Expert → Discrete inputs → Discrete input 1 to 2 → Static revision

**Description** Displays the event counter: every write access to a static block parameter is counted.

**User interface** 0 to FFFF

**Additional information** *Description*

 Static parameters are parameters that are not changed by the process.

**Strategy**

**Navigation**  Expert → Discrete inputs → Discrete input 1 to 2 → Strategy

**Description** Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.

**User entry** 0 to FFFF

**Factory setting** 0

**Alert key**

**Navigation**  Expert → Discrete inputs → Discrete input 1 to 2 → Alert key

**Description** Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.

**User entry** 0 to 0xFF

**Factory setting** 0

**Target mode**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Target mode

**Description** Displays the Target mode: The target mode indicates which mode of operation is used for this function block. This mode is generally set by a control application.

**User interface**

- Auto
- Man
- Out of service

**Mode block actual**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Mode block act

**Description** Displays the Mode block actual: Under certain conditions, it is possible that a function block will not operate in the required mode. In this case, the Mode block actual shows the actual mode in which the function block is currently operating. A comparison of the Mode block actual with the Target mode indicates whether it was possible to reach the Target mode (→ 107).

**User interface**

- Auto
- Man
- Out of service

**Additional information** *Description*

A comparison of the current mode with the target mode (**Target mode** parameter (→ 107)) indicates whether it was possible to reach the target mode.

**Mode block permitted**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Mode block perm

**Description** Displays the Mode block permitted: This defines which modes of operation in the Target mode (→ 107) are available for the function block. The operating modes that are supported vary depending on the type and function of the block.

**User interface** 0 to 255

**Mode block normal**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Mode blk norm

**Description** Displays the Mode block normal: This is available to allow the operator to select the Mode block normal from the available modes of operation. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

**User interface**

- Auto
- Man
- Out of service

---

**Alarm summary**

---

**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to 2 → Alarm summary

**Description**

Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

**User interface**

- Discrete alarm
- Alarm state HiHi limit
- Alarm state Hi limit
- Alarm state LoLo limit
- Alarm state Lo limit
- Update Event

**Additional information****Description**

 Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Discrete Inputs function block.

---

**Batch ID**

---

**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to 2 → Batch ID

**Description**

Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.

**User entry**

Positive integer

---

**Batch operation**

---

**Navigation**

█ Expert → Discrete inputs → Discrete input 1 to 2 → Batch operation

**Description**

Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.

**User entry**

0 to 65 535

**Factory setting**

0

---

**Batch phase**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Batch phase

**Description** Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.

**User entry** 0 to 65 535

**Factory setting** 0

---

**Batch Recipe Unit Procedure**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Batch Recipe

**Description** Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

**User entry** 0 to 65 535

**Factory setting** 0

**Additional information** *Description*

The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

---

**Simulate enabled**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Simulate enabled

**Description** Use this function to enable or disable block simulation.

**Selection**

- Disable
- Enable

**Factory setting** Disable

**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.

**Simulate status**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Simulate status

**Description** Use this function to enter a simulation status for the block.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.

**Simulate value**

**Navigation** Expert → Discrete inputs → Discrete input 1 to 2 → Simulate value

**Description** Use this function to enter a simulation value for the block.

**User entry** 0 to 255

**Factory setting** 0


**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.

## 3.6 "Analog outputs" submenu

*Navigation*


Expert → Analog outputs

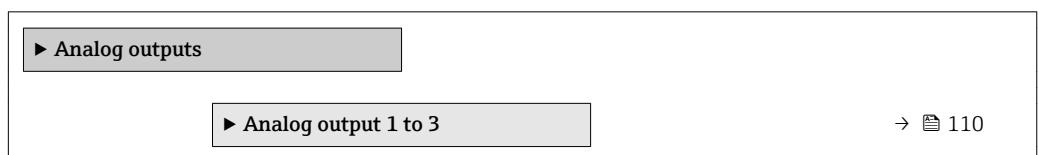

### 3.6.1 "Analog output 1 to 3" submenu

*Navigation*

Expert → Analog outputs → Analog output 1 to 3

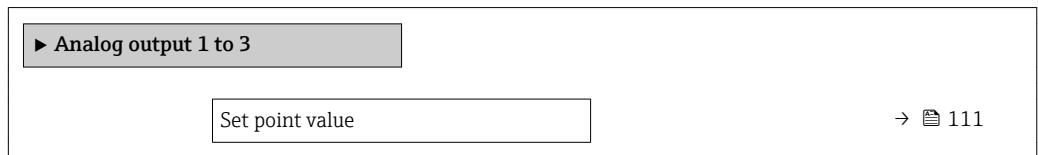

Set point status	→  111
Fail safe time	→  111
Fail safe type	→  112
Fail safe value	→  112
Out value	→  113
Out status	→  113
Out status	→  113

**Set point value**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Set point val

**Description** Use this function to enter an analog set point.

**User entry** Signed floating-point number

**Factory setting** 0

**Set point status**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Set point status

**Description** Use this function to enter a status for the analog set point.

**User entry** 0 to 255

**Factory setting** 0

**Fail safe time**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Fail safe time

**Description** Use this function to enter a time span within which the criteria for an error must be met continuously before an error message or notice message is generated.

**User entry** 0 to 999.0

**Factory setting** 0

**Additional information***User entry***NOTE!**

If this parameter is used, error messages and notice messages are delayed by the set time before being relayed to the higher-level controller (DCS, etc.).

- Check in advance to ensure that the safety-specific requirements of the process would permit this.
- If the error and notice messages may not be suppressed, a value of 0 seconds must be configured here.

---

**Fail safe type****Navigation**

Expert → Analog outputs → Analog output 1 to 3 → Fail safe type

**Description**

Use this function to select the failure mode.

**Selection**

- Fail safe value
- Fallback value
- Off

**Factory setting**

Fallback value

**Additional information***Selection*

If an input or simulation value has the status BAD, the function block uses this predefined failure value:

- Fail safe value
  - A substitute value is used. This is specified in the **Fail safe value** parameter (→ 112).
- Fallback value
  - If the value was good at one point, then this last valid value is used.
- Off
  - The system continues to use the bad value.

---

**Fail safe value****Navigation**

Expert → Analog outputs → Analog output 1 to 3 → Fail safe value

**Prerequisite**

In **Fail safe type** parameter (→ 112), the **Fallback value** option is selected.

**Description**

Use this function to enter a failure value. The value entered is displayed as the output value (**Out value** parameter (→ 113)) in the event of an error.

**User entry**

Signed floating-point number

**Factory setting**

0

---

**Out value**

---

<b>Navigation</b>	  Expert → Analog outputs → Analog output 1 to 3 → Out value
<b>Prerequisite</b>	In <b>Target mode</b> parameter (→ 114), the <b>Auto</b> option is selected.
<b>Description</b>	Displays the analog value which is calculated when the function is executed.
<b>User interface</b>	Signed floating-point number

---

**Out status**

---

<b>Navigation</b>	  Expert → Analog outputs → Analog output 1 to 3 → Out status
<b>Description</b>	Displays the current output status (Good, Bad, Uncertain).
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Good</li><li>■ Uncertain</li><li>■ Bad</li></ul>

---

**Out status**

---

<b>Navigation</b>	  Expert → Analog outputs → Analog output 1 to 3 → Out status
<b>Prerequisite</b>	In <b>Target mode</b> parameter (→ 114), the <b>Auto</b> option is selected.
<b>Description</b>	Displays the current output status (hex value).
<b>User interface</b>	0 to 0xFF

---

**Tag description**

---

<b>Navigation</b>	 Expert → Analog outputs → Analog output 1 to 3 → Tag description
<b>Description</b>	Use this function to enter a string to identify the block.
<b>User entry</b>	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

## Static revision

---

**Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Static revision

**Description** Displays the event counter: every write access to a static block parameter is counted.

**User interface** 0 to FFFF

**Additional information** *Description*



Static parameters are parameters that are not changed by the process.

---

## Strategy

---



**Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Strategy

**Description** Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.

**User entry** 0 to FFFF

**Factory setting** 0

---

## Alert key

---



**Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Alert key

**Description** Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.

**User entry** 0 to 0xFF

**Factory setting** 0

---

## Target mode

---



**Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Target mode

**Description** Displays the Target mode: The target mode indicates which mode of operation is used for this function block. This mode is generally set by a control application.

<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Auto</li> <li>■ Local override</li> <li>■ Man</li> <li>■ Out of service</li> <li>■ Remote Cascaded</li> </ul>
-----------------------	--

## Mode block actual

<b>Navigation</b>	 Expert → Analog outputs → Analog output 1 to 3 → Mode block act
<b>Description</b>	Displays the Mode block actual: Under certain conditions, it is possible that a function block will not operate in the required mode. In this case, the Mode block actual shows the actual mode in which the function block is currently operating. A comparison of the Mode block actual with the Target mode indicates whether it was possible to reach the Target mode (→ <a href="#">114</a> ).
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Auto</li> <li>■ Local override</li> <li>■ Man</li> <li>■ Out of service</li> <li>■ Remote Cascaded</li> </ul>
<b>Additional information</b>	<p><b>Description</b></p> <p> A comparison of the current mode with the target mode (<b>Target mode</b> parameter (→ <a href="#">114</a>)) indicates whether it was possible to reach the target mode.</p>

## Mode block permitted

<b>Navigation</b>	 Expert → Analog outputs → Analog output 1 to 3 → Mode block perm
<b>Description</b>	Displays the Mode block permitted: This defines which modes of operation in the Target mode (→ <a href="#">114</a> ) are available for the function block. The operating modes that are supported vary depending on the type and function of the block.
<b>User interface</b>	0 to 255

## Mode block normal

<b>Navigation</b>	 Expert → Analog outputs → Analog output 1 to 3 → Mode blk norm
<b>Description</b>	Displays the Mode block normal: This is available to allow the operator to select the Mode block normal from the available modes of operation. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

**User interface**

- Auto
- Local override
- Man
- Out of service
- Remote Cascaded

**Alarm summary****Navigation**

█ Expert → Analog outputs → Analog output 1 to 3 → Alarm summary

**Description**

Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

**User interface**

- Discrete alarm
- Alarm state HiHi limit
- Alarm state Hi limit
- Alarm state LoLo limit
- Alarm state Lo limit
- Update Event

**Additional information****Description**

 Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Analog Outputs function block.

**Batch ID****Navigation**

█ Expert → Analog outputs → Analog output 1 to 3 → Batch ID

**Description**

Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.

**User entry**

Positive integer

**Batch operation****Navigation**

█ Expert → Analog outputs → Analog output 1 to 3 → Batch operation

**Description**

Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.

**User entry**

0 to 65 535

**Factory setting**

0

---

**Batch phase**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Batch phase

**Description** Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.

**User entry** 0 to 65 535

**Factory setting** 0

---

**Batch Recipe Unit Procedure**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Batch Recipe

**Description** Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

**User entry** 0 to 65 535

**Factory setting** 0

**Additional information** *Description*



The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

---

**PV scale lower range**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → PVscale lo range

**Description** Use this function to enter the lower value range for the input value (Process Value Scale) in system units. The process value scale normalizes the input value to a user-specific range.

**User entry** Signed floating-point number

**Factory setting** 0

**PV scale upper range**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → PVscale up range
<b>Description</b>	Use this function to enter the upper value range for the input value (Process Value Scale) in system units. The process value scale normalizes the input value to a user-specific range.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	100.0

**Readback value**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → Readback value
<b>Description</b>	Displays the readback value. The readback value indicates the current position of the control element within the travel range (between the open and close position) in PV scale units.
<b>User interface</b>	Signed floating-point number

**Readback status**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → Readback status
<b>Description</b>	Displays the readback status. The readback status contains the status information of the slave.
<b>User interface</b>	0 to 255

**RCAS in value**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → RCAS in value
<b>Description</b>	Use this function to enter the RCAS (Remote Cascade) in value. The block set point is set by a control application via the remote cascade <b>RCAS in value</b> parameter (→  118). The normal algorithm calculates the output value of the block on the basis of this set point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0

---

**RCAS in status**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → RCAS in status

**Description** Use this function to enter the RCAS (Remote Cascade) in status. Defines the status for the RCAS in value (→ 118).

**User entry** 0 to 255

**Factory setting** 0

---

**Input channel**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Input channel

**Description** Use this function to select the input channel. The number of logical hardware channels from the converter that is connected to this I/O block.

**Selection** None

**Factory setting** None

---

**Output channel**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → Output channel

**Description** Use this function to select the output channel. The number of logical hardware channels to the converter that is connected to this I/O block.

**Selection**

- External pressure
- External temperature
- External reference density

**Factory setting** External pressure

---

**RCAS out value**

**Navigation** Expert → Analog outputs → Analog output 1 to 3 → RCAS out value

**Description** Displays the RCAS out value. Displays the set point of the block which is made available to the higher-level host for monitoring/back calculation and which makes it possible to take action under certain conditions or in a different mode.

**User interface** Signed floating-point number

**RCAS out status**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → RCAS out status
<b>Description</b>	Displays the RCAS out status. Displays the status of the set point.
<b>User interface</b>	0 to 0xFF

**Position value**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → Pos value
<b>Description</b>	Displays the current value of the positioner.
<b>User interface</b>	0 to 255

**Position status**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → Position status
<b>Description</b>	Displays the current status of the positioner.
<b>User interface</b>	0 to 255

**Setpoint deviation**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → Setp. deviation
<b>Description</b>	Displays the deviation between the set point ( <b>Set point value</b> parameter (→  111)) and the actual value ( <b>Readback value</b> parameter (→  118)).
<b>User interface</b>	Signed floating-point number

**Simulate enabled**

<b>Navigation</b>	Expert → Analog outputs → Analog output 1 to 3 → Simulate enabled
<b>Description</b>	Use this function to enable or disable block simulation.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Disable</li><li>▪ Enable</li></ul>

**Factory setting** Disable**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.

---

**Simulate value** **Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Simulate value**Description** Use this function to enter a simulation value.**User entry** Signed floating-point number**Factory setting** 0**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.

---

**Simulate status** **Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Simulate status**Description** Use this function to enter a simulation status for the block.**User entry** 0 to 255**Factory setting** 0**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.

---

**Increase close** **Navigation**  Expert → Analog outputs → Analog output 1 to 3 → Increase close**Description** Use this function to enter the effective direction of the positioner in automatic mode.**User entry** 0 to 255**Factory setting** 0

**Out scale upper range**

**Navigation**      Expert → Analog outputs → Analog output 1 to 3 → Out scale up

**Description**      Use this function to enter the upper value range for the output value in system units.

**User entry**      Signed floating-point number

**Factory setting**      100.0

**Out scale lower range**

**Navigation**      Expert → Analog outputs → Analog output 1 to 3 → Out scale low


**Description**      Use this function to enter the lower value range for the output value in system units.

**User entry**      Signed floating-point number

**Factory setting**      0


## 3.7 "Discrete outputs" submenu

*Navigation*      Expert → Discrete outputs

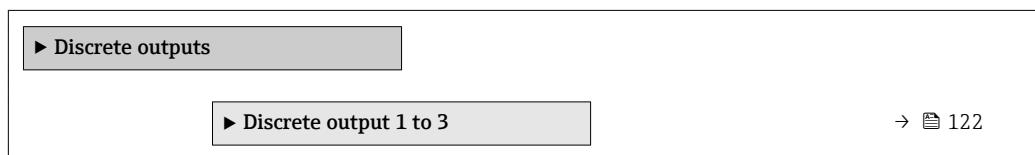

### 3.7.1 "Discrete output 1 to 3" submenu

*Navigation*      Expert → Discrete outputs → Discr. out. 1 to 3

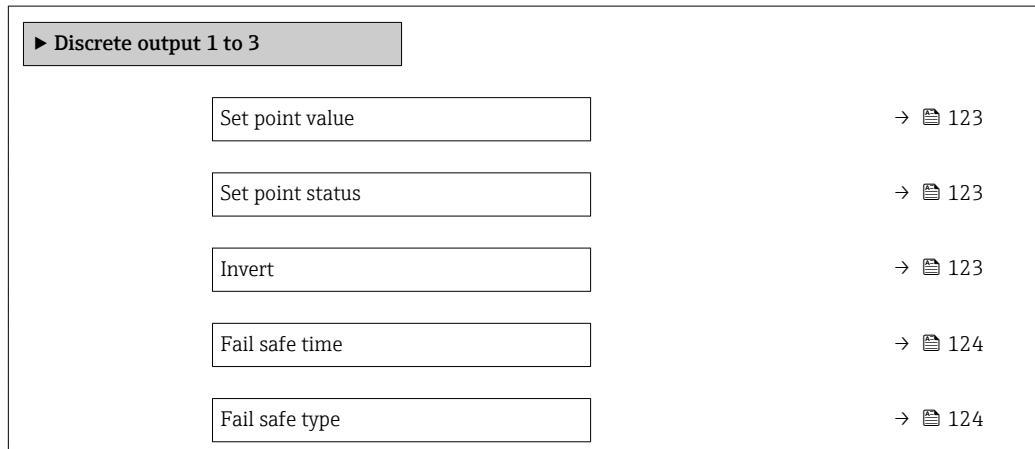

Fail safe value	→  124
Out value	→  125
Out status	→  125
Out status	→  125

**Set point value**

**Navigation** Expert → Discrete outputs → Discr. out. 1 to 3 → Set point val

**Description** Use this function to enter an analog set point.

**User entry** 0 to 255

**Factory setting** 0

**Set point status**

**Navigation** Expert → Discrete outputs → Discr. out. 1 to 3 → Set point status

**Description** Use this function to enter a status for the analog set point.

**User entry** 0 to 255

**Factory setting** 0

**Invert**

**Navigation** Expert → Discrete outputs → Discr. out. 1 to 3 → Invert

**Description** Use this function to switch inversion on and off. Specifies whether the set point should be inverted before the value is set as the output value or the RCAS value (in the automatic mode).

**Selection**

- Off
- On

**Factory setting** Off

**Fail safe time****Navigation**

Expert → Discrete outputs → Discr. out. 1 to 3 → Fail safe time

**Description**

Use this function to enter a time span within which the criteria for an error must be met continuously before an error message or notice message is generated.

**User entry**

Signed floating-point number

**Factory setting**

0

**Additional information**

*User entry*

**NOTE!**

If this parameter is used, error messages and notice messages are delayed by the set time before being relayed to the higher-level controller (DCS, etc.).

- ▶ Check in advance to ensure that the safety-specific requirements of the process would permit this.
- ▶ If the error and notice messages may not be suppressed, a value of 0 seconds must be configured here.

**Fail safe type****Navigation**

Expert → Discrete outputs → Discr. out. 1 to 3 → Fail safe type

**Description**

Use this function to select the failure mode.

**Selection**

- Fail safe value
- Fallback value
- Off

**Factory setting**

Fallback value

**Additional information**

*Selection*

If an input or simulation value has the status BAD, the function block uses this predefined failure value:

- Fail safe value  
A substitute value is used. This is specified in the **Fail safe value** parameter (→ 124).
- Fallback value  
If the value was good at one point, then this last valid value is used.
- Off  
The system continues to use the bad value.

**Fail safe value****Navigation**

Expert → Discrete outputs → Discr. out. 1 to 3 → Fail safe value

**Prerequisite**

In **Fail safe type** parameter (→ 124), the **Fail safe value** option is selected.

---

<b>Description</b>	Use this function to enter a failure value. The value entered is displayed as the output value ( <b>Out value</b> parameter (→ 125)) in the event of an error.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0

---

### Out value

<b>Navigation</b>	  Expert → Discrete outputs → Discr. out. 1 to 3 → Out value
<b>Prerequisite</b>	In <b>Target mode</b> parameter (→ 126), the <b>Auto</b> option is selected.
<b>Description</b>	Displays the analog value which is calculated when the function is executed.
<b>User interface</b>	0 to 255

---

### Out status

<b>Navigation</b>	  Expert → Discrete outputs → Discr. out. 1 to 3 → Out status
<b>Description</b>	Displays the current output status (Good, Bad, Uncertain).
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Good</li> <li>■ Uncertain</li> <li>■ Bad</li> </ul>

---

### Out status

<b>Navigation</b>	  Expert → Discrete outputs → Discr. out. 1 to 3 → Out status
<b>Prerequisite</b>	In <b>Target mode</b> parameter (→ 126), the <b>Auto</b> option is selected.
<b>Description</b>	Displays the current output status (hex value).
<b>User interface</b>	0 to 0xFF

---

### Tag description

<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → Tag description
<b>Description</b>	Use this function to enter a string to identify the block.

---

User entry	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).
------------	---

---

## Static revision

---

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Static revision
------------	--

Description	Displays the event counter: every write access to a static block parameter is counted.
-------------	--

User interface	0 to FFFF
----------------	-----------

Additional information	<i>Description</i>
	 Static parameters are parameters that are not changed by the process.

---

## Strategy

---

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Strategy
------------	---

Description	Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.
-------------	---

User entry	0 to FFFF
------------	-----------

Factory setting	0
-----------------	---

---

## Alert key

---

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Alert key
------------	--

Description	Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
-------------	---

User entry	0 to 0xFF
------------	-----------

Factory setting	0
-----------------	---

---

## Target mode

---

Navigation	 Expert → Discrete outputs → Discr. out. 1 to 3 → Target mode
------------	--

Description	Displays the Target mode: The target mode specifies which mode of operation is used for this function block. This mode is generally set by a control application.
-------------	---

---

<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Local override</li> <li>■ Remote Cascaded</li> <li>■ Man</li> <li>■ Out of service</li> <li>■ Auto</li> </ul>
-----------------------	--

---

## Mode block actual

---

<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → Mode block act
<b>Description</b>	Displays the Mode block actual: Under certain conditions, it is possible that a function block will not operate in the required mode. In this case, the Mode block actual shows the actual mode in which the function block is currently operating. A comparison of the Mode block actual with the Target mode indicates whether it was possible to reach the Target mode (→ <a href="#">126</a> ).
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Local override</li> <li>■ Remote Cascaded</li> <li>■ Man</li> <li>■ Out of service</li> <li>■ Auto</li> </ul>
<b>Additional information</b>	<p><i>Description</i></p> <p> A comparison of the current mode with the target mode (<b>Target mode</b> parameter (→ <a href="#">126</a>)) indicates whether it was possible to reach the target mode.</p>

---

## Mode block permitted

---

<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → Mode block perm
<b>Description</b>	Displays the Mode block permitted: This defines which modes of operation in the Target mode (→ <a href="#">126</a> ) are available for the function block. The operating modes that are supported vary depending on the type and function of the block.
<b>User interface</b>	0 to 255

---

## Mode block normal

---

<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → Mode blk norm
<b>Description</b>	Displays the Mode block normal: This is available to allow the operator to select the Mode block normal from the available modes of operation. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

**User interface**

- Local override
- Remote Cascaded
- Man
- Out of service
- Auto

---

**Alarm summary**

---

**Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Alarm summary

**Description**

Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.

**User interface**

- Discrete alarm
- Alarm state HiHi limit
- Alarm state Hi limit
- Alarm state LoLo limit
- Alarm state Lo limit
- Update Event

**Additional information***Description*

 Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Discrete Outputs function block.

---

**Batch ID**

---

**Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Batch ID

**Description**

Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.

**User entry**

Positive integer

---

**Batch operation**

---

**Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Batch operation

**Description**

Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.

**User entry**

0 to 65 535

**Factory setting**

0

---

**Batch phase****Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Batch phase

**Description**

Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.

**User entry**

0 to 65 535

**Factory setting**

0

---

**Batch Recipe Unit Procedure****Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Batch Recipe

**Description**

Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

**User entry**

0 to 65 535

**Factory setting**

0

**Additional information***Description*

The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

---

**Readback value****Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Readback value

**Description**

Displays the readback value. The readback value indicates the current position of the control element and the element's sensors.

**User interface**

0 to 255

---

**Readback status****Navigation**

█ Expert → Discrete outputs → Discr. out. 1 to 3 → Readback status

**Description**

Displays the readback status. Displays the status of the readback value.

**User interface**

0 to 255

**RCAS in value**

<b>Navigation</b>	Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS in value
<b>Description</b>	Use this function to enter the RCAS (Remote Cascade) in value. The block set point is set by a control application via the remote cascade <b>RCAS in value</b> parameter (→  130). The normal algorithm calculates the output value of the block on the basis of this set point.
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0

**RCAS in status**

<b>Navigation</b>	Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS in status
<b>Description</b>	Use this function to enter the RCAS (Remote Cascade) in status. Defines the status for the RCAS in value (→  130).
<b>User entry</b>	0 to 255
<b>Factory setting</b>	0

**Input channel**

<b>Navigation</b>	Expert → Discrete outputs → Discr. out. 1 to 3 → Input channel
<b>Description</b>	Use this function to select the input channel. The number of logical hardware channels from the converter that is connected to this I/O block.
<b>Selection</b>	None
<b>Factory setting</b>	None

**Output channel**

<b>Navigation</b>	Expert → Discrete outputs → Discr. out. 1 to 3 → Output channel
<b>Description</b>	Use this function to select the output channel. The number of logical hardware channels to the converter that is connected to this I/O block.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Flow override</li> <li>■ Zero point adjustment</li> <li>■ Start verification*</li> </ul>
------------------	---

<b>Factory setting</b>	Flow override
------------------------	---------------

---

### RCAS out value

---

<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS out value
-------------------	---

<b>Description</b>	Displays the RCAS out value. Displays the set point of the block which is made available to the higher-level host for monitoring/back calculation and which makes it possible to take action under certain conditions or in a different mode.
--------------------	---

<b>User interface</b>	0 to 255
-----------------------	----------

---

### RCAS out status

---

<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → RCAS out status
-------------------	--

<b>Description</b>	Displays the RCAS out status. Displays the status of the set point.
--------------------	---

<b>User interface</b>	0 to 255
-----------------------	----------

---

### Simulate enabled

---



<b>Navigation</b>	 Expert → Discrete outputs → Discr. out. 1 to 3 → Simulate enabled
-------------------	---

<b>Description</b>	Use this function to enable or disable block simulation.
--------------------	--

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Disable</li> <li>■ Enable</li> </ul>
------------------	---

<b>Factory setting</b>	Disable
------------------------	---------

<b>Additional information</b>	<i>Description</i>
-------------------------------	--------------------

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated discrete I/O channel during operation.

---

\* Visibility depends on order options or device settings

**Simulate value**

**Navigation** Expert → Discrete outputs → Discr. out. 1 to 3 → Simulate value

**Description** Use this function to enter a simulation value.

**User entry** 0 to 255

**Factory setting** 0

**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated value during operation.

**Simulate status**

**Navigation** Expert → Discrete outputs → Discr. out. 1 to 3 → Simulate status

**Description** Use this function to enter a simulation status for the block.

**User entry** 0 to 255

**Factory setting** 0


**Additional information** *Description*

The simulation is used to bypass the physical I/O channel. In this way, the block remains in the normal mode and uses the simulated status during operation.

### 3.8 "Application" submenu

*Navigation*

Expert → Application

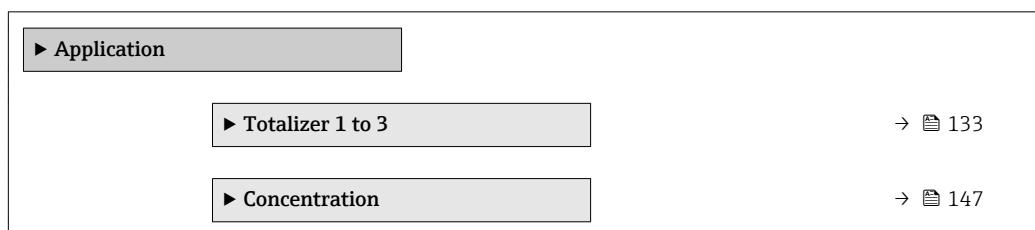

### 3.8.1 "Totalizer 1 to 3" submenu

#### *Navigation*

Expert → Application → Totalizer 1 to 3

► Totalizer 1 to 3	
Assign process variable	→ 133
Unit totalizer	→ 134
Control Totalizer 1 to 3	→ 135
Preset value 1 to 3	→ 136
Totalizer operation mode	→ 136
Failure mode	→ 137
Totalizer value 1 to 3	→ 138
Totalizer status 1 to 3	→ 138
Totalizer status (Hex) 1 to 3	→ 138

#### Assign process variable



##### **Navigation**

Expert → Application → Totalizer 1 to 3 → Assign variable

##### **Description**

Use this function to select a process variable for the Totalizer 1 to 3.

##### **Selection**

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow \*
- Carrier mass flow \*

##### **Factory setting**

Mass flow

##### **Additional information**

##### *Description*

If the option selected is changed, the device resets the totalizer to 0.

\* Visibility depends on order options or device settings

**Unit totalizer****Navigation**

  Expert → Application → Totalizer 1 to 3 → Unit totalizer

**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→ [133](#)):

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow <sup>\*</sup>
- Carrier mass flow <sup>\*</sup>

**Description**

Use this function to select the process variable of a totalizer.

 The unit is selected separately for each totalizer. It is independent of the selection made in the **System units** submenu (→ [44](#)).

**Selection***SI units*

- g
- kg
- t

*US units*

- oz
- lb
- STon

or

*SI units*

- cm<sup>3</sup>
- dm<sup>3</sup>
- m<sup>3</sup>
- ml
- l
- hl
- Ml Mega

*US units*

- af
- ft<sup>3</sup>
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;oil)
- bbl (us;tank)

*Imperial units*

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

or

*SI units*

- NI
- Nm<sup>3</sup>
- Sl
- Sm<sup>3</sup>

*US units*

- Sft<sup>3</sup>
- Sgal (us)
- Sbbl (us;liq.)

*Imperial units*

- Sgal (imp)

**Factory setting**

Country-specific:

- kg
- lb

**Additional information***Selection*

The selection is independent of the process variable selected in the **Assign process variable** parameter (→ [133](#)).

\* Visibility depends on order options or device settings

*Dependency*

The following parameters depend on the option selected:

- **Alarm hysteresis** parameter (→ 142)
- **Hi Hi Lim** parameter (→ 143)
- **Hi Lim** parameter (→ 143)
- **Lo Lim** parameter (→ 144)
- **Lo Lo Lim** parameter (→ 144)
- **Totalizer value** parameter (→ 43)
- **Preset value** parameter (→ 136)

**Control Totalizer 1 to 3****Navigation**

Expert → Application → Totalizer 1 to 3 → Control Tot. 1 to 3

**Prerequisite**

In the **Assign process variable** parameter (→ 133), one of the following options is selected:

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow \*
- Carrier mass flow \*

**Description**

Use this function to select the control of totalizer value 1-3.

**Selection**

- Totalize
- Reset + hold
- Preset + hold

**Factory setting**

Totalize

**Additional information***Selection*

- Totalize  
The totalizer is started or continues totalizing with the current counter reading.
- Reset + hold  
The totaling process is stopped and the totalizer is reset to 0.
- Preset + hold  
The totaling process is stopped and the totalizer is set to its defined start value from the **Preset value** parameter.

\* Visibility depends on order options or device settings

---

## Preset value 1 to 3

---

**Navigation**

  Expert → Application → Totalizer 1 to 3 → Preset value 1 to 3

**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→ [图 133](#)):

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow <sup>\*</sup>
- Carrier mass flow <sup>\*</sup>

**Description**

Use this function to enter an initial value for the specific totalizer.

**User entry**

Signed floating-point number

**Factory setting**

Country-specific:

- kg
- lb

**Additional information**

*User entry*

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [图 134](#)).

*Example*

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

---

## Totalizer operation mode

---

**Navigation**

  Expert → Application → Totalizer 1 to 3 → Operation mode

**Prerequisite**

In the **Assign process variable** parameter (→ [图 133](#)), one of the following options is selected:

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow <sup>\*</sup>
- Carrier mass flow <sup>\*</sup>

**Description**

Use this function to select how the totalizer summates the flow.

**Selection**

- Net flow total
- Forward flow total
- Reverse flow total
- Last valid value

**Factory setting**

Net flow total

---

\* Visibility depends on order options or device settings

**Additional information***Selection*

- Net flow total  
Positive and negative flow values are totalized and balanced against one another. Net flow is registered in the flow direction.
- Forward flow total  
Only the flow in the forward flow direction is totalized.
- Reverse flow total  
Only the flow against the forward flow direction is totalized (= reverse flow total).
- Last valid value  
The value is frozen. Totaling is stopped.

**Failure mode****Navigation**

Expert → Application → Totalizer 1 to 3 → Failure mode

**Prerequisite**

In the **Assign process variable** parameter (→ 133), one of the following options is selected:

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow <sup>\*</sup>
- Carrier mass flow <sup>\*</sup>

**Description**

Use this function to select how a totalizer behaves in an alarm condition.

**Selection**

- Stop
- Actual value
- Last valid value

**Factory setting**

Actual value

**Additional information***Description*

This setting does not affect the error response mode of other totalizers and the outputs. This is specified in separate parameters.

*Selection*

- Stop  
Totalizing is stopped in an alarm condition.
- Actual value  
The totalizer continues to count based on the actual measured value; the error is ignored.
- Last valid value  
The totalizer continues to count based on the last valid measured value before the error occurred.

\* Visibility depends on order options or device settings

## Totalizer value 1 to 3

---

<b>Navigation</b>	  Expert → Application → Totalizer 1 to 3 → Totalizer val. 1 to 3
<b>Prerequisite</b>	In <b>Target mode</b> parameter (→ 140), the <b>Auto</b> option is selected.
<b>Description</b>	Displays the current reading for totalizer 1-3.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<i>Description</i> As it is only possible to display a maximum of 7 digits, the current counter value is the sum of the totalizer value and the overflow value from the <b>Totalizer overflow 1 to 3</b> parameter if the display range is exceeded.  In the event of an error, the totalizer adopts the mode defined in the <b>Failure mode</b> parameter.  <i>User interface</i> The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the <b>Totalizer operation mode</b> parameter.  The unit of the selected process variable is specified for the totalizer in the <b>Unit totalizer</b> parameter (→ 134).

---

## Totalizer status 1 to 3

---

<b>Navigation</b>	  Expert → Application → Totalizer 1 to 3 → Tot. status 1 to 3
<b>Description</b>	Displays the status of the particular totalizer.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Good</li><li>■ Uncertain</li><li>■ Bad</li></ul>

---

## Totalizer status (Hex) 1 to 3

---

<b>Navigation</b>	  Expert → Application → Totalizer 1 to 3 → Status (Hex) 1 to 3
<b>Prerequisite</b>	In <b>Target mode</b> parameter (→ 140), the <b>Auto</b> option is selected.
<b>Description</b>	Displays the status value (hex) of the particular totalizer.
<b>User interface</b>	0 to 0xFF

---

**Tag description**

<b>Navigation</b>	Expert → Application → Totalizer 1 to 3 → Tag description
<b>Description</b>	Use this function to enter a string to identify the block.
<b>User entry</b>	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).

---

**Static revision**

<b>Navigation</b>	Expert → Application → Totalizer 1 to 3 → Static revision
<b>Description</b>	Displays the event counter: every write access to a static block parameter is counted.
<b>User interface</b>	0 to FFFF
<b>Additional information</b>	<i>Description</i>
	Static parameters are parameters that are not changed by the process.

---

**Strategy**

<b>Navigation</b>	Expert → Application → Totalizer 1 to 3 → Strategy
<b>Description</b>	Use this function to enter the strategy: makes it possible to group blocks by entering identical numbers.
<b>User entry</b>	0 to FFFF
<b>Factory setting</b>	0

---

**Alert key**

<b>Navigation</b>	Expert → Application → Totalizer 1 to 3 → Alert key
<b>Description</b>	Use this function to enter the alert key: identifies the section of the plant where the transmitter is located. This helps in pinpointing events.
<b>User entry</b>	0 to 0xFF
<b>Factory setting</b>	0

## Target mode



### Navigation

Expert → Application → Totalizer 1 to 3 → Target mode

### Description

Displays the Target mode: The target mode indicates which mode of operation is used for this function block. This mode is generally set by a control application.

### User interface

- Auto
- Man
- Out of service

## Mode block actual

### Navigation

Expert → Application → Totalizer 1 to 3 → Mode block act

### Description

Displays the Mode block actual: Under certain conditions, it is possible that a function block will not operate in the required mode. In this case, the Mode block actual shows the actual mode in which the function block is currently operating. A comparison of the Mode block actual with the Target mode indicates whether it was possible to reach the Target mode (→ 140).

### User interface

- Auto
- Man
- Out of service

### Additional information

#### Description

A comparison of the current mode with the target mode (**Target mode** parameter (→ 140)) indicates whether it was possible to reach the target mode.

## Mode block permitted

### Navigation

Expert → Application → Totalizer 1 to 3 → Mode block perm

### Description

Displays the Mode block permitted: This defines which modes of operation in the Target mode (→ 140) are available for the function block. The operating modes that are supported vary depending on the type and function of the block.

### User interface

0 to 255

## Mode block normal

### Navigation

Expert → Application → Totalizer 1 to 3 → Mode blk norm

### Description

Displays the Mode block normal: This is available to allow the operator to select the Mode block normal from the available modes of operation. This can be set using an operating tool in order to help the user configure the operating mode of a function block.

---

<b>User interface</b>	<ul style="list-style-type: none"><li>■ Auto</li><li>■ Man</li><li>■ Out of service</li></ul>
-----------------------	---

---

## Alarm summary

<b>Navigation</b>	 Expert → Application → Totalizer 1 to 3 → Alarm summary
<b>Description</b>	Displays the alarm summary: the current status of the block alarms is displayed. A summary of up to 16 statuses can be displayed.
<b>User interface</b>	<ul style="list-style-type: none"><li>■ Discrete alarm</li><li>■ Alarm state HiHi limit</li><li>■ Alarm state Hi limit</li><li>■ Alarm state LoLo limit</li><li>■ Alarm state Lo limit</li><li>■ Update Event</li></ul>
<b>Additional information</b>	<p><i>Description</i></p> <p> Currently, the system only displays a change in a static parameter for 10 seconds, and violations of the early warning and alarm limits in the Totalizer function block.</p>

---

## Batch ID



<b>Navigation</b>	 Expert → Application → Totalizer 1 to 3 → Batch ID
<b>Description</b>	Use this function to enter the batch ID: identification of a specific batch to make it possible to assign device-specific information (e.g. errors, alarm conditions etc.) to the batching process.
<b>User entry</b>	Positive integer
<b>Factory setting</b>	0

---

## Batch operation



<b>Navigation</b>	 Expert → Application → Totalizer 1 to 3 → Batch operation
<b>Description</b>	Use this function to enter the batch operation: control recipe operation number to identify the active control recipe operation.
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0

**Batch phase****Navigation**

Diagram: Expert → Application → Totalizer 1 to 3 → Batch phase

**Description**

Use this function to enter the batch phase: control recipe phase number to identify the active control recipe operation.

**User entry**

0 to 65 535

**Factory setting**

0

**Batch Recipe Unit Procedure****Navigation**

Diagram: Expert → Application → Totalizer 1 to 3 → Batch Recipe

**Description**

Use this function to enter the batch recipe unit procedure (RUP): identification of the active control recipe unit procedure or the associated unit (e.g. inductor, centrifuge, drying agent).

**User entry**

0 to 65 535

**Factory setting**

0

**Additional information****Description**

**i** The unit is defined in IEC61512 Part1/ISA S88 but its meaning is different to that of the parameter unit, such as system units.

**Alarm hysteresis****Navigation**

Diagram: Expert → Application → Totalizer 1 to 3 → Alarm hysteresis

**Description**

Use this function to enter the hysteresis value for the upper and lower warning or alarm limit values.

**User entry**

Signed floating-point number

**Factory setting**

0 kg

**Additional information****User entry**

**i** The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 134).

**Hi Hi Lim****Navigation**

Expert → Application → Totalizer 1 to 3 → Hi Hi Lim

**Description**

Use this function to enter the value for the upper alarm limit of the totalizer (**Hi Hi alarm value** parameter (→ [145](#))).

**User entry**

Signed floating-point number

**Factory setting**

Positive floating-point number

**Additional information***Description*

If the output value Out value (→ [92](#)) exceeds this limit value, the **Hi Hi alarm state** parameter (→ [145](#)) is output.

*User entry*

The value is entered in the defined units (**Out unit** parameter (→ [97](#))) and must be in the range defined in the **Out scale lower range** parameter (→ [96](#)) and **Out scale upper range** parameter (→ [97](#)).

The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [134](#)).

**Hi Lim****Navigation**

Expert → Application → Totalizer 1 to 3 → Hi Lim

**Description**

Use this function to enter the value for the upper warning limit of the totalizer (**Hi alarm value** parameter (→ [145](#))).

**User entry**

Signed floating-point number

**Factory setting**

Positive floating-point number

**Additional information***Description*

If the output value Out value (→ [92](#)) exceeds this limit value, the **Hi alarm state** parameter (→ [145](#)) is output.

*User entry*

The value is entered in the defined units (**Out unit** parameter (→ [97](#))) and must be in the range defined in the **Out scale lower range** parameter (→ [96](#)) and **Out scale upper range** parameter (→ [97](#)).

The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [134](#)).

**Lo Lim****Navigation**

Expert → Application → Totalizer 1 to 3 → Lo Lim

**Description**

Use this function to enter the value for the lower warning limit of the totalizer (**Lo alarm value** parameter (→ 146)).

**User entry**

Signed floating-point number

**Factory setting**

Negative floating-point number

**Additional information***Description*

**i** If the output value Out value (→ 92) exceeds this limit value, the **Lo alarm state** parameter (→ 146) is output.

*User entry*

**i** The value is entered in the defined units (**Out unit** parameter (→ 97)) and must be in the range defined in the **Out scale lower range** parameter (→ 96) and **Out scale upper range** parameter (→ 97).

**i** The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 134).

**Lo Lo Lim****Navigation**

Expert → Application → Totalizer 1 to 3 → Lo Lo Lim

**Description**

Use this function to enter the value for the lower alarm limit of the totalizer (**Lo Lo alarm value** parameter (→ 146)).

**User entry**

Signed floating-point number

**Factory setting**

Negative floating-point number

**Additional information***Description*

**i** If the output value Out value (→ 92) exceeds this limit value, the **Lo Lo alarm state** parameter (→ 146) is output.

*User entry*

**i** The value is entered in the defined units (**Out unit** parameter (→ 97)) and must be in the range defined in the **Out scale lower range** parameter (→ 96) and **Out scale upper range** parameter (→ 97).

**i** The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 134).

---

**Hi Hi alarm value**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → HiHi alarm value

**Description** Displays the alarm value for the upper alarm limit value (**Hi Hi Lim** parameter (→  143)).

**User interface** Signed floating-point number

---

**Hi Hi alarm state**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → HiHi alarm state

**Description** Displays the status for the upper alarm limit value (**Hi Hi Lim** parameter (→  143)).

**User interface**

- No alarm
- Alarm state HiHi limit

**Additional information** *User interface*

 The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.

---

**Hi alarm value**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → Hi alarm value

**Description** Displays the warning value for the upper warning limit value (**Hi Lim** parameter (→  143)).

**User interface** Signed floating-point number

---

**Hi alarm state**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → Hi alarm state

**Description** Displays the status for the upper warning limit value (**Hi Lim** parameter (→  143)).

**User interface**

- No warning
- Alarm state Hi limit

**Additional information** *User interface*

 The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

**Lo alarm value**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → Lo alarm value

**Description** Displays the warning value for the lower warning limit value (**Lo Lim** parameter (→ [图 144](#))).

**User interface** Signed floating-point number

**Lo alarm state**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → Lo alarm state

**Description** Displays the status for the lower warning limit value (**Lo Lim** parameter (→ [图 144](#))).

**User interface**

- No warning
- Alarm state Lo limit

**Additional information** *User interface*

 The display contains information such as the time of the warning (date and time) and the value that triggered the alarm.

**Lo Lo alarm value**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → LoLo alarm value

**Description** Displays the alarm value for the lower alarm limit value (**Lo Lo Lim** parameter (→ [图 144](#))).

**User interface** Signed floating-point number

**Lo Lo alarm state**

---

**Navigation**  Expert → Application → Totalizer 1 to 3 → LoLo alarm state

**Description** Displays the status for the lower alarm limit value (**Lo Lo Lim** parameter (→ [图 144](#))).

**User interface**

- No alarm
- Alarm state LoLo limit

**Additional information** *User interface*

 The display contains information such as the time of the alarm (date and time) and the value that triggered the alarm.

### 3.8.2 "Concentration" submenu

 For detailed information on the parameter descriptions for the **Concentration** application package: Special Documentation for the device

*Navigation*

 Expert → Application → Concentration

 ► Concentration

### 3.9 "Diagnostics" submenu

*Navigation*

 Expert → Diagnostics

 ► Diagnostics

Actual diagnostics

→  147

Previous diagnostics

→  148

Operating time from restart

→  149

Operating time

→  149

 ► Diagnostic list

→  150

 ► Event logbook

→  153

 ► Device information

→  156

 ► Min/max values

→  159

 ► Heartbeat

→  165

 ► Simulation

→  166

#### Actual diagnostics

**Navigation**

 Expert → Diagnostics → Actual diagnos.

**Prerequisite**

A diagnostic event has occurred.

**Description**

Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***User interface*

 Additional pending diagnostic messages can be displayed in the **Diagnostic list** submenu (→  150).

 Information on what is causing the diagnostic message, and remedy measures, can be viewed by pressing the -button.

*Example*

For the display format:

F271 Main electronic failure

---

**Timestamp****Navigation**

 Expert → Diagnostics → Timestamp

**Description**

Displays the operating time when the current diagnostic message occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***User interface*

 The diagnostic message can be displayed via the **Actual diagnostics** parameter (→  147).

*Example*

For the display format:

24d12h13m00s

---

**Previous diagnostics****Navigation**

  Expert → Diagnostics → Prev.diagnostics

**Prerequisite**

Two diagnostic events have already occurred.

**Description**

Displays the diagnostic message that occurred before the current message.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***User interface*

 Information on what is causing the diagnostic message, and remedy measures, can be viewed by pressing the -button.

*Example*

For the display format:

F271 Main electronic failure

---

**Timestamp**

---

<b>Navigation</b>	 Expert → Diagnostics → Timestamp
<b>Description</b>	Displays the operating time when the last diagnostic message before the current message occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<i>User interface</i>  The diagnostic message can be displayed via the <b>Previous diagnostics</b> parameter (→  148).
	<i>Example</i> For the display format: 24d12h13m00s

---

**Operating time from restart**

---

<b>Navigation</b>	  Expert → Diagnostics → Time fr. restart
<b>Description</b>	Use this function to display the time the device has been in operation since the last device restart.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)

---

**Operating time**


---

<b>Navigation</b>	  Expert → Diagnostics → Operating time
<b>Description</b>	Use this function to display the length of time the device has been in operation.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<i>User interface</i> The maximum number of days is 9999, which is equivalent to 27 years.

### 3.9.1 "Diagnostic list" submenu

Navigation

Expert → Diagnostics → Diagnostic list

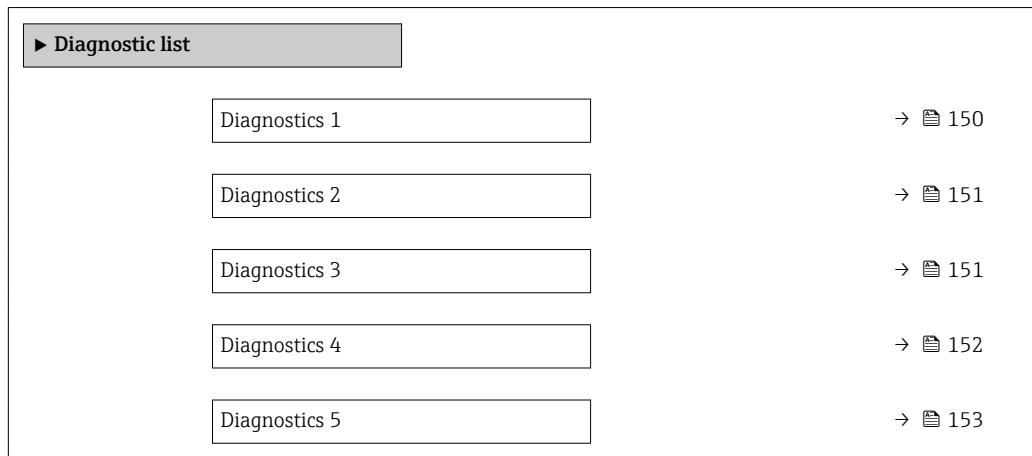

---

#### Diagnostics 1

---

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 1

Description

Use this function to display the current diagnostics message with the highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information

*Examples*

For the display format:

- F271 Main electronic failure
- F276 I/O module failure

---

#### Timestamp

---

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

*User interface*

The diagnostic message can be displayed via the **Diagnostics 1** parameter (→ 150).

*Example*

For the display format:

24d12h13m00s

---

## Diagnostics 2

---

**Navigation**

  Expert → Diagnostics → Diagnostic list → Diagnostics 2

**Description**

Use this function to display the current diagnostics message with the second-highest priority.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***Examples*

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

---

## Timestamp

---

**Navigation**

  Expert → Diagnostics → Diagnostic list → Timestamp

**Description**

Displays the operating time when the diagnostic message with the second-highest priority occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information***User interface*

 The diagnostic message can be displayed via the **Diagnostics 2** parameter (→  151).

*Example*

For the display format:  
24d12h13m00s

---

## Diagnostics 3

---

**Navigation**

  Expert → Diagnostics → Diagnostic list → Diagnostics 3

**Description**

Use this function to display the current diagnostics message with the third-highest priority.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information***Examples*

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

**Timestamp**

---

**Navigation**

█ Expert → Diagnostics → Diagnostic list → Timestamp

**Description**

Displays the operating time when the diagnostic message with the third-highest priority occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information**

*User interface*

**i** The diagnostic message can be displayed via the **Diagnostics 3** parameter  
(→  151).

*Example*

For the display format:

24d12h13m00s

---

**Diagnostics 4**

---

**Navigation**

█ █ Expert → Diagnostics → Diagnostic list → Diagnostics 4

**Description**

Use this function to display the current diagnostics message with the fourth-highest priority.

**User interface**

Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information**

*Examples*

For the display format:

- **F271** Main electronic failure
- **F276** I/O module failure

---

**Timestamp**

---

**Navigation**

█ Expert → Diagnostics → Diagnostic list → Timestamp

**Description**

Displays the operating time when the diagnostic message with the fourth-highest priority occurred.

**User interface**

Days (d), hours (h), minutes (m) and seconds (s)

**Additional information**

*User interface*

**i** The diagnostic message can be displayed via the **Diagnostics 4** parameter  
(→  152).

*Example*

For the display format:

24d12h13m00s

## Diagnostics 5


<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Diagnostics 5
<b>Description</b>	Use this function to display the current diagnostics message with the fifth-highest priority.
<b>User interface</b>	Symbol for diagnostic behavior, diagnostic code and short message.
<b>Additional information</b>	<p><i>Examples</i></p> <p>For the display format:</p> <ul style="list-style-type: none"> <li>▪  F271 Main electronic failure</li> <li>▪  F276 I/O module failure</li> </ul>

## Timestamp

<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the fifth-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<p><i>User interface</i></p> <p> The diagnostic message can be displayed via the <b>Diagnostics 5</b> parameter (→  153).</p> <p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>

### 3.9.2 "Event logbook" submenu

*Navigation*       Expert → Diagnostics → Event logbook

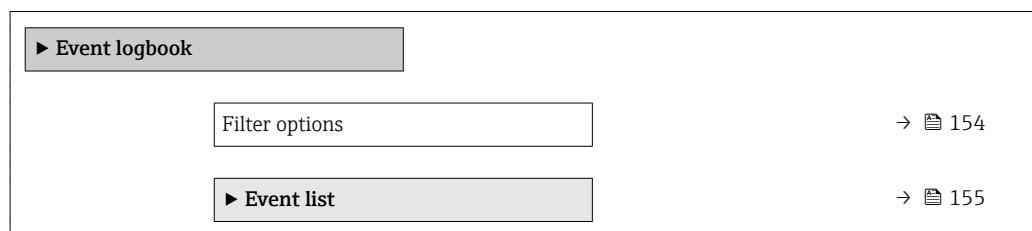

**Filter options****Navigation**

Expert → Diagnostics → Event logbook → Filter options

**Description**

Use this function to select the category whose event messages are displayed in the event list of the local display.

**Selection**

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

**Factory setting**

All

**Additional information***Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
  - F = Failure
  - C = Function Check
  - S = Out of Specification
  - M = Maintenance Required

**Filter options****Navigation**

Expert → Diagnostics → Event logbook → Filter options

**Description**

Use this function to select the category whose event messages are displayed in the event list of the operating tool.

**Selection**

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

**Factory setting**

All

**Additional information***Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
  - F = Failure
  - C = Function Check
  - S = Out of Specification
  - M = Maintenance Required

**"Event list" submenu*****Navigation***
 Expert → Diagnostics → Event logbook → Event list
**Event list*****Navigation***
 Expert → Diagnostics → Event logbook → Event list
***Description***

Displays the history of event messages of the category selected in the **Filter options** parameter (→  154).

***User interface***

- For a "Category I" event message  
Information event, short message, symbol for event recording and operating time when error occurred
- For a "Category F, C, S, M" event message (status signal)  
Diagnostics code, short message, symbol for event recording and operating time when error occurred

***Additional information******Description***

A maximum of 20 event messages are displayed in chronological order.

If the advanced HistoROM function is enabled in the device, the event list can contain up to 100 entries.

The following symbols indicate whether an event has occurred or has ended:

- : Occurrence of the event
- : End of the event

***Examples***

For the display format:

- I1091 Configuration modified  
 24d12h13m00s
-  F271 Main electronic failure  
 01d04h12min30s

***HistoROM***

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

### 3.9.3 "Device information" submenu

Navigation

 Expert → Diagnostics → Device info

► Device information	
Device tag	→  156
Serial number	→  157
Firmware version	→  157
Device name	→  157
Order code	→  157
Extended order code 1	→  158
Extended order code 2	→  158
Extended order code 3	→  158
ENP version	→  159

---

#### Device tag

---

Navigation

 Expert → Diagnostics → Device info → Device tag
**Description**

Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

**User interface**


Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

**Factory setting**

Promass 100 DP

**Additional information**

*User interface*

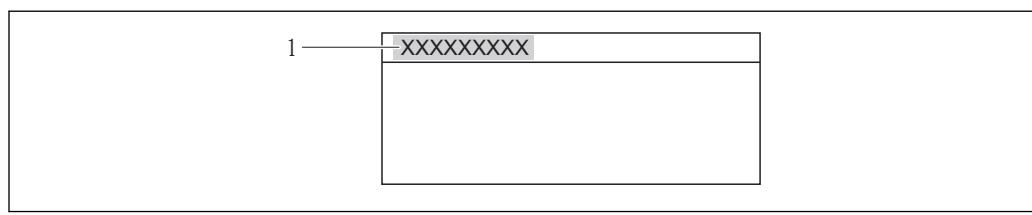

 4 *Header text*

The number of characters displayed depends on the characters used.

---

**Serial number**

---

**Navigation**   Expert → Diagnostics → Device info → Serial number**Description** Displays the serial number of the measuring device. The number can be found on the nameplate of the sensor and transmitter.**User interface** A maximum of 11-digit character string comprising letters and numbers.**Additional information** *Description* **Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)

---

**Firmware version**

---

**Navigation**   Expert → Diagnostics → Device info → Firmware version**Description** Displays the device firmware version installed.**User interface** Character string in the format xx.yy**Factory setting** 01.01

---

**Device name**

---

**Navigation**   Expert → Diagnostics → Device info → Device name**Description** Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.**User interface** Promass 100

---

**Order code**

---

**Navigation**   Expert → Diagnostics → Device info → Order code**Description** Displays the device order code.**User interface** Character string composed of letters, numbers and certain punctuation marks (e.g. /).

**Additional information***Description*

 The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

 **Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

---

**Extended order code 1****Navigation**

  Expert → Diagnostics → Device info → Ext. order cd. 1

**Description**

Displays the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

**User interface**

Character string

**Additional information***Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

---

**Extended order code 2****Navigation**

  Expert → Diagnostics → Device info → Ext. order cd. 2

**Description**

For displaying the second part of the extended order code.

**User interface**

Character string

**Additional information**

For additional information, see **Extended order code 1** parameter (→  158)

---

**Extended order code 3****Navigation**

  Expert → Diagnostics → Device info → Ext. order cd. 3

**Description**

For displaying the third part of the extended order code.

**User interface**

Character string

**Additional information** For additional information, see **Extended order code 1** parameter (→ 158)

## ENP version

**Navigation**  Expert → Diagnostics → Device info → ENP version

**Description** Displays the version of the electronic nameplate.

**User interface** Character string


**Factory setting** 2.02.00

**Additional information** *Description*

This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

## 3.9.4 "Min/max values" submenu

*Navigation*  Expert → Diagnostics → Min/max val.

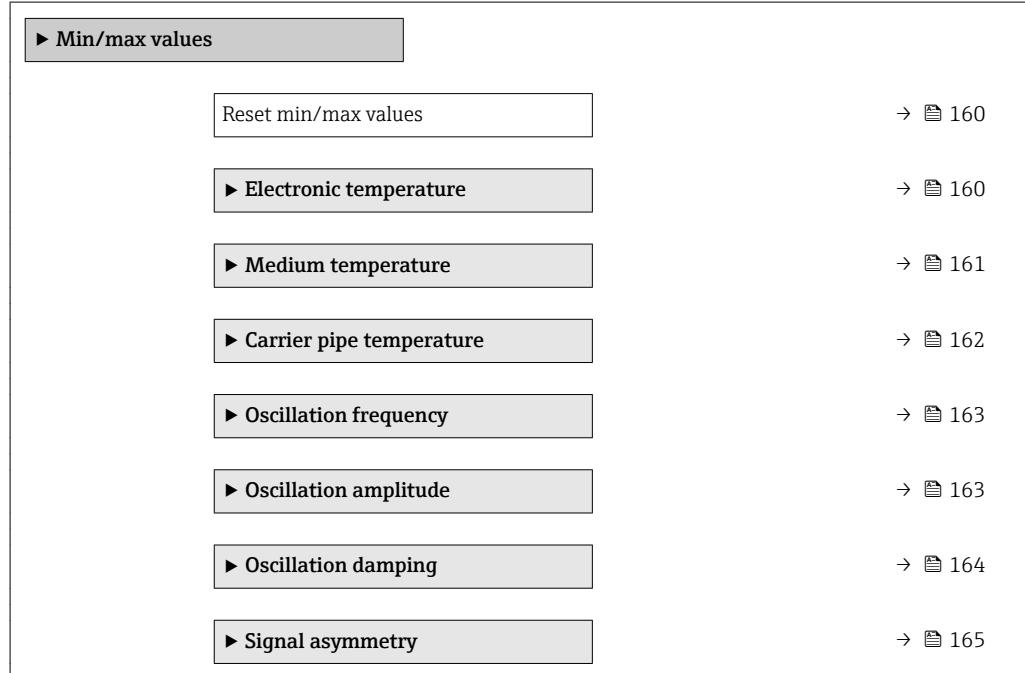

Item	Description	Page Number
▶ Min/max values		
Reset min/max values		→ 160
▶ Electronic temperature		→ 160
▶ Medium temperature		→ 161
▶ Carrier pipe temperature		→ 162
▶ Oscillation frequency		→ 163
▶ Oscillation amplitude		→ 163
▶ Oscillation damping		→ 164
▶ Signal asymmetry		→ 165

**Reset min/max values****Navigation**

Expert → Diagnostics → Min/max val. → Reset min/max

**Description**

Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

**Selection**

- Cancel
- Oscillation amplitude
- Oscillation amplitude 1 \*
- Oscillation damping
- Torsion oscillation damping \*
- Oscillation frequency
- Torsion oscillation frequency \*
- Signal asymmetry

**Factory setting**

Cancel


**Additional information**

*Selection*

Detailed description of the options **Oscillation frequency**, **Oscillation amplitude**, **Oscillation damping** and **Signal asymmetry**: Value 1 display parameter (→ 16)

**"Electronic temperature" submenu****Navigation**

Expert → Diagnostics → Min/max val. → Electronic temp.

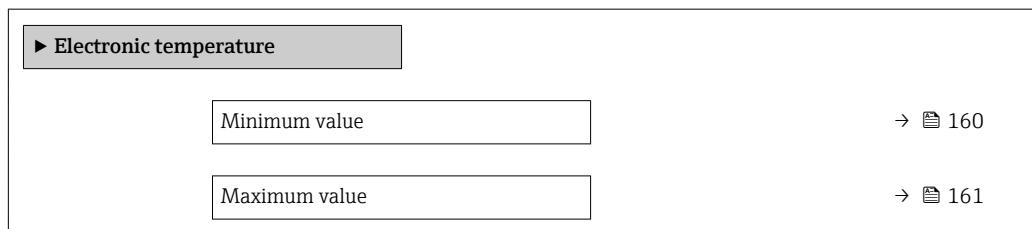

---

**Minimum value****Navigation**

Expert → Diagnostics → Min/max val. → Electronic temp. → Minimum value

**Description**

Displays the lowest previously measured temperature value of the main electronics module.

**User interface**

Signed floating-point number

**Additional information**

*Dependency*

The unit is taken from the **Temperature unit** parameter (→ 50)

---

\* Visibility depends on order options or device settings

---


## Maximum value

---

<b>Navigation</b>	Diagram Expert → Diagnostics → Min/max val. → Electronic temp. → Maximum value
<b>Description</b>	Displays the highest previously measured temperature value of the main electronics module.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<p><i>Dependency</i></p>  The unit is taken from the <b>Temperature unit</b> parameter (→ <a href="#">50</a> )

### "Medium temperature" submenu

*Navigation*      Diagram Expert → Diagnostics → Min/max val. → Medium temp.

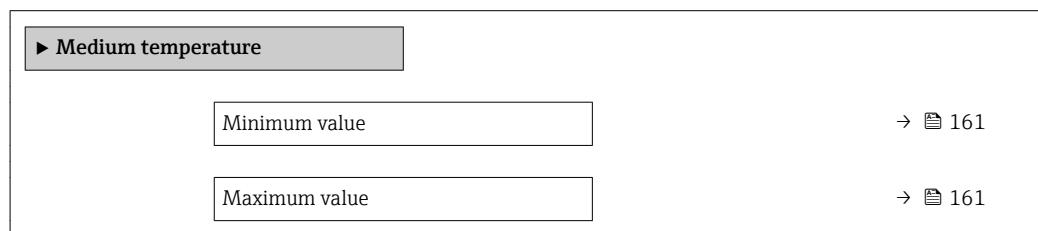


---

## Minimum value

---

<b>Navigation</b>	Diagram Expert → Diagnostics → Min/max val. → Medium temp. → Minimum value
<b>Description</b>	Displays the lowest previously measured medium temperature value.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	<p><i>Dependency</i></p>  The unit is taken from the <b>Temperature unit</b> parameter (→ <a href="#">50</a> )

---

## Maximum value

---


<b>Navigation</b>	Diagram Expert → Diagnostics → Min/max val. → Medium temp. → Maximum value
<b>Description</b>	Displays the highest previously measured medium temperature value.
<b>User interface</b>	Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ [50](#))

**"Carrier pipe temperature" submenu****Navigation**

Expert → Diagnostics → Min/max val. → Carr. pipe temp.

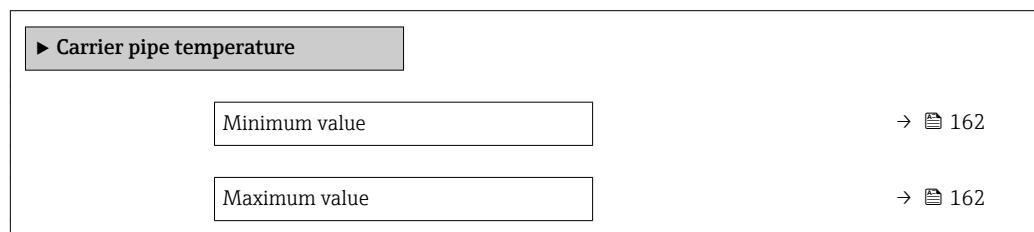

---

**Minimum value**

---

**Navigation**

Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Minimum value

**Prerequisite**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

**Description**

Displays the lowest previously measured temperature value of the carrier pipe.

**User interface**

Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ [50](#))

---

**Maximum value**

---

**Navigation**

Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Maximum value

**Prerequisite**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

**Description**


Displays the highest previously measured temperature value of the carrier pipe.

**User interface**

Signed floating-point number

**Additional information***Dependency*

The unit is taken from the **Temperature unit** parameter (→ [50](#))

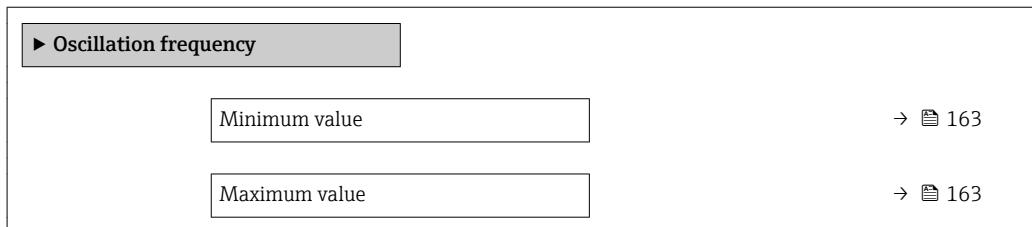**"Oscillation frequency" submenu****Navigation** Expert → Diagnostics → Min/max val. → Oscil. frequency

---

**Minimum value**

---

**Navigation** Expert → Diagnostics → Min/max val. → Oscil. frequency → Minimum value**Description**

Displays the lowest previously measured oscillation frequency.

**User interface**

Signed floating-point number

---

**Maximum value**


---

**Navigation** Expert → Diagnostics → Min/max val. → Oscil. frequency → Maximum value**Description**

Displays the highest previously measured oscillation frequency.

**User interface**

Signed floating-point number

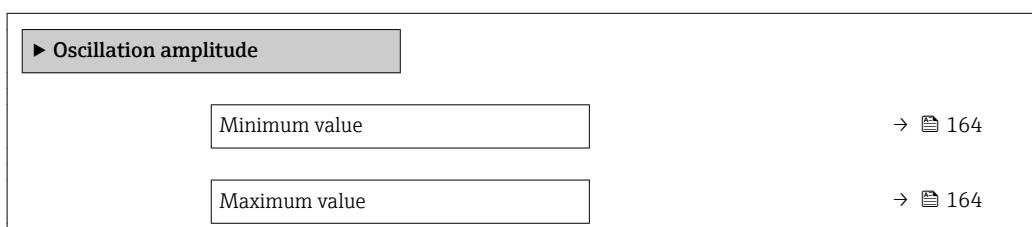**"Oscillation amplitude" submenu****Navigation** Expert → Diagnostics → Min/max val. → Oscil. amplitude

**Minimum value**

<b>Navigation</b>	  Expert → Diagnostics → Min/max val. → Oscil. amplitude → Minimum value
<b>Description</b>	Displays the lowest previously measured oscillation amplitude.
<b>User interface</b>	Signed floating-point number


---

**Maximum value**

<b>Navigation</b>	  Expert → Diagnostics → Min/max val. → Oscil. amplitude → Maximum value
<b>Description</b>	Displays the highest previously measured oscillation amplitude.
<b>User interface</b>	Signed floating-point number

**"Oscillation damping" submenu**

*Navigation*        Expert → Diagnostics → Min/max val. → Oscil. damping

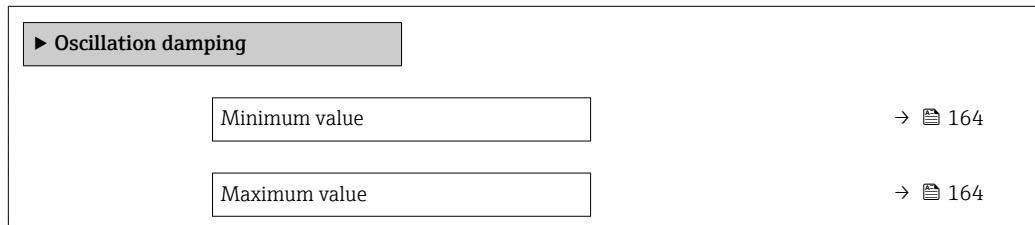

---

**Minimum value**

<b>Navigation</b>	  Expert → Diagnostics → Min/max val. → Oscil. damping → Minimum value
<b>Description</b>	Displays the lowest previously measured oscillation damping.
<b>User interface</b>	Signed floating-point number

---


**Maximum value**

<b>Navigation</b>	  Expert → Diagnostics → Min/max val. → Oscil. damping → Maximum value
<b>Description</b>	Displays the highest previously measured oscillation damping.

User interface      Signed floating-point number

#### "Signal asymmetry" submenu

Navigation        Expert → Diagnostics → Min/max val. → Signal asymmetry

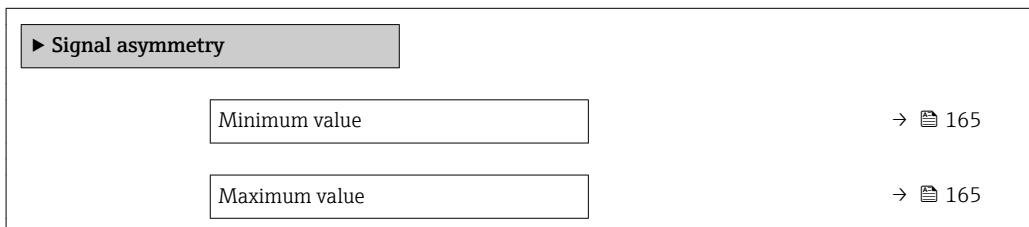

#### Minimum value

Navigation        Expert → Diagnostics → Min/max val. → Signal asymmetry → Minimum value

Description      Displays the lowest previously measured signal asymmetry.

User interface      Signed floating-point number

#### Maximum value

Navigation        Expert → Diagnostics → Min/max val. → Signal asymmetry → Maximum value


Description      Displays the highest previously measured signal asymmetry.


User interface      Signed floating-point number

#### 3.9.5 "Heartbeat" submenu

 For detailed information on the parameter descriptions of the **Heartbeat Verification** application package, see the Special Documentation for the device

Navigation        Expert → Diagnostics → Heartbeat

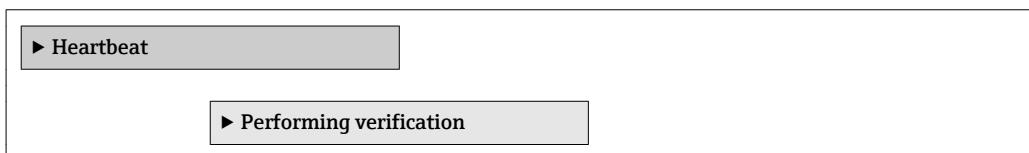


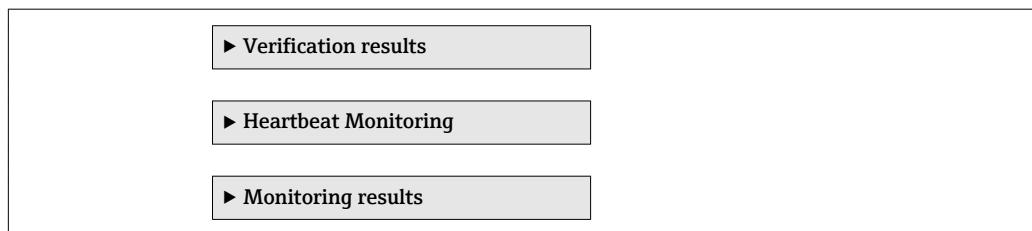

### 3.9.6 "Simulation" submenu

Navigation

Expert → Diagnostics → Simulation

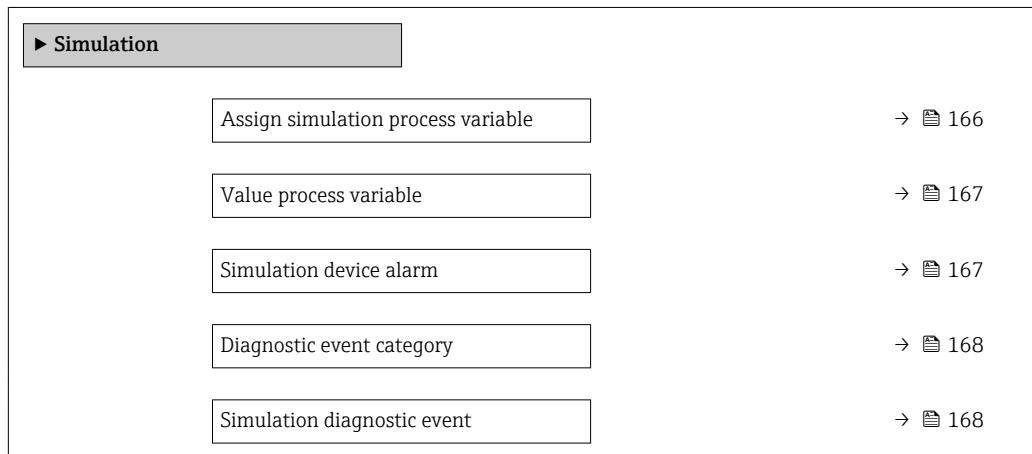

#### Assign simulation process variable



Navigation

Expert → Diagnostics → Simulation → Assign proc.var.

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow
- Density
- Reference density
- Temperature
- Concentration \*
- Target mass flow \*
- Carrier mass flow \*

Factory setting

Off

Additional information

Description

The simulation value of the process variable selected is defined in the **Value process variable** parameter (→ 167).

\* Visibility depends on order options or device settings

**Value process variable****Navigation**

Expert → Diagnostics → Simulation → Value proc. var.

**Prerequisite**

One of the following options is selected in the **Assign simulation process variable** parameter (→ 166):

- Mass flow
- Volume flow
- Corrected volume flow
- Density
- Reference density
- Temperature
- Concentration \*
- Target mass flow \*
- Carrier mass flow \*

**Description**

Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

**User entry**

Depends on the process variable selected

**Factory setting**

0

**Additional information**

*User entry*

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

**Simulation device alarm****Navigation**

Expert → Diagnostics → Simulation → Sim. alarm

**Description**

Use this function to switch the device alarm on and off.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information**

*Description*

In this way, users can verify the correct function of downstream switching units.

The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

\* Visibility depends on order options or device settings

---

## Diagnostic event category

---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Event category
<b>Description</b>	Use this function to select the category of the diagnostic events that are displayed for the simulation in the <b>Simulation diagnostic event</b> parameter (→  168).
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Sensor</li><li>▪ Electronics</li><li>▪ Configuration</li><li>▪ Process</li></ul>
<b>Factory setting</b>	Process

---

## Simulation diagnostic event

---

<b>Navigation</b>	  Expert → Diagnostics → Simulation → Sim. diag. event
<b>Description</b>	Use this function to select a diagnostic event for the simulation process that is activated.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Off</li><li>▪ Diagnostic event picklist (depends on the category selected)</li></ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<i>Description</i>  For the simulation, you can choose from the diagnostic events of the category selected in the <b>Diagnostic event category</b> parameter (→  168).

## 4 Country-specific factory settings

### 4.1 SI units

 Not valid for USA and Canada.

#### 4.1.1 System units

Mass	kg
Mass flow	kg/h
Volume	l
Volume flow	l/h
Corrected volume	Nl
Corrected volume flow	Nl/h
Density	kg/l
Reference density	kg/Nl
Temperature	°C
Pressure	bar a

#### 4.1.2 Full scale values

 The factory settings apply to the following parameters:  
100% bar graph value 1

Nominal diameter [mm]	[kg/h]
1	4
2	20
4	90
6	200

#### 4.1.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	On-value for liquid [kg/h]
1	0.08
2	0.4
4	1.8
6	4

Nominal diameter [mm]	Switch-on value for gas [kg/h]
1	0.02
2	0.1

Nominal diameter [mm]	Switch-on value for gas [kg/h]
4	0.45
6	1

## 4.2 US units

 Only valid for USA and Canada.

### 4.2.1 System units

Mass	lb
Mass flow	lb/min
Volume	gal (us)
Volume flow	gal/min (us)
Corrected volume	Sft <sup>3</sup>
Corrected volume flow	Sft <sup>3</sup> /min
Density	lb/ft <sup>3</sup>
Reference density	lb/Sft <sup>3</sup>
Temperature	lb/ft <sup>3</sup>
Pressure	psi a

### 4.2.2 Full scale values

 The factory settings apply to the following parameters:  
100% bar graph value 1

Nominal diameter [in]	[lb/min]
1/24	0.15
1/12	0.75
1/8	3.3
1/4	7.4

### 4.2.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	On-value for liquid [lb/min]
1/24	0.003
1/12	0.015
1/8	0.066
1/4	0.15

Nominal diameter [in]	Switch-on value for gas [lb/min]
$^{1/2}_{24}$	0.001
$^{1/12}$	0.004
$^{1/8}$	0.016
$^{1/4}$	0.0375

## 5 Explanation of abbreviated units

### 5.1 SI units

Process variable	Units	Explanation
Density	g/cm <sup>3</sup> , g/m <sup>3</sup>	Gram/volume unit
	kg/dm <sup>3</sup> , kg/l, kg/m <sup>3</sup>	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Pressure	Pa a, kPa a, MPa a	Pascal, kilopascal, megapascal (absolute)
	bar	Bar
	Pa g, kPa g, MPa g	Pascal, kilopascal, megapascal (relative/gauge)
	bar g	Bar (relative/gauge)
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Reference density	kg/Nm <sup>3</sup> , kg/Nl, g/Scm <sup>3</sup> , kg/Sm <sup>3</sup>	Kilogram, gram/standard volume unit
Corrected volume	Nl, Nm <sup>3</sup> , Sm <sup>3</sup>	Normal liter, normal cubic meter, standard cubic meter
Corrected volume flow	Nl/s, Nl/min, Nl/h, Nl/d	Normal liter/time unit
	Nm <sup>3</sup> /s, Nm <sup>3</sup> /min, Nm <sup>3</sup> /h, Nm <sup>3</sup> /d	Normal cubic meter/time unit
	Sm <sup>3</sup> /s, Sm <sup>3</sup> /min, Sm <sup>3</sup> /h, Sm <sup>3</sup> /d	Standard cubic meter/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm <sup>3</sup> , dm <sup>3</sup> , m <sup>3</sup>	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Volume flow	cm <sup>3</sup> /s, cm <sup>3</sup> /min, cm <sup>3</sup> /h, cm <sup>3</sup> /d	Cubic centimeter/time unit
	dm <sup>3</sup> /s, dm <sup>3</sup> /min, dm <sup>3</sup> /h, dm <sup>3</sup> /d	Cubic decimeter/time unit
	m <sup>3</sup> /s, m <sup>3</sup> /min, m <sup>3</sup> /h, m <sup>3</sup> /d	Cubic meter/time unit
	ml/s, ml/min, ml/h, ml/d	Milliliter/time unit
	l/s, l/min, l/h, l/d	Liter/time unit
	hl/s, hl/min, hl/h, hl/d	Hectoliter/time unit
	Ml/s, Ml/min, Ml/h, Ml/d	Megaliter/time unit
Time	s, m, h, d, y	Second, minute, hour, day, year

### 5.2 US units

Process variable	Units	Explanation
Density	lb/ft <sup>3</sup> , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit

Process variable	Units	Explanation
Pressure	psi a	Pounds per square inch (absolute)
	psi g	Pounds per square inch (gauge)
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Reference density	lb/Sft <sup>3</sup>	Weight unit/standard volume unit
Corrected volume	Sft <sup>3</sup> , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Corrected volume flow	Sft <sup>3</sup> /s, Sft <sup>3</sup> /min, Sft <sup>3</sup> /h, Sft <sup>3</sup> /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft <sup>3</sup>	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft <sup>3</sup> /s, ft <sup>3</sup> /min, ft <sup>3</sup> /h, ft <sup>3</sup> /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem ( before midday), post meridiem (after midday)

### 5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Corrected volume flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp)  bbl (imp;beer), bbl (imp;oil)	Gallon, mega gallon  Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)  Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)  bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Gallon/time unit  Mega gallon/time unit  Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y  am, pm	Second, minute, hour, day, year  Ante meridiem ( before midday), post meridiem (after midday)

# Index

## 0 ... 9

- 0% bargraph value 1 (Parameter) ..... 18
- 0% bargraph value 3 (Parameter) ..... 21
- 100% bargraph value 1 (Parameter) ..... 18
- 100% bargraph value 3 (Parameter) ..... 21

## A

- Access status display (Parameter) ..... 11, 26
- Access status tooling (Parameter) ..... 12
- Activate SW option (Parameter) ..... 37
- Actual diagnostics (Parameter) ..... 147
- Address mode (Parameter) ..... 74
- Administration (Submenu) ..... 34
- Alarm delay (Parameter) ..... 27
- Alarm hysteresis (Parameter) ..... 98, 142
- Alarm summary (Parameter) ..... 81, 94, 108, 116, 128, 141
- Alert key (Parameter) ..... 80, 93, 106, 114, 126, 139
- Analog input 1 to 8 (Submenu) ..... 90
- Analog inputs (Submenu) ..... 89
- Analog output 1 to 3 (Submenu) ..... 110
- Analog outputs (Submenu) ..... 110
- Application (Submenu) ..... 132
- Assign behavior of diagnostic no. 046 (Parameter) ..... 29
- Assign behavior of diagnostic no. 140 (Parameter) ..... 29
- Assign behavior of diagnostic no. 144 (Parameter) ..... 29
- Assign behavior of diagnostic no. 192 (Parameter) ..... 33
- Assign behavior of diagnostic no. 274 (Parameter) ..... 33
- Assign behavior of diagnostic no. 392 (Parameter) ..... 33
- Assign behavior of diagnostic no. 592 (Parameter) ..... 34
- Assign behavior of diagnostic no. 832 (Parameter) ..... 30
- Assign behavior of diagnostic no. 833 (Parameter) ..... 30
- Assign behavior of diagnostic no. 834 (Parameter) ..... 31
- Assign behavior of diagnostic no. 835 (Parameter) ..... 31
- Assign behavior of diagnostic no. 912 (Parameter) ..... 31
- Assign behavior of diagnostic no. 913 (Parameter) ..... 32
- Assign behavior of diagnostic no. 944 (Parameter) ..... 32
- Assign behavior of diagnostic no. 948 (Parameter) ..... 32
- Assign behavior of diagnostic no. 992 (Parameter) ..... 34
- Assign process variable (Parameter) ..... 54, 57, 133
- Assign simulation process variable (Parameter) ..... 166

## B

- Backlight (Parameter) ..... 26
- Base current (Parameter) ..... 77
- Batch ID (Parameter) ..... 95, 108, 116, 128, 141
- Batch operation (Parameter) ..... 95, 108, 116, 128, 141
- Batch phase (Parameter) ..... 95, 109, 117, 129, 142
- Batch Recipe Unit Procedure (Parameter) ..... 96, 109, 117, 129, 142
- Baudrate (Parameter) ..... 77

## C

- CO to 5 (Parameter) ..... 73
- Calculated values (Submenu) ..... 63
- Calibration (Submenu) ..... 72
- Calibration factor (Parameter) ..... 72

- Carrier mass flow (Parameter) ..... 42
- Carrier pipe temperature (Submenu) ..... 162
- Channel (Parameter) ..... 90, 104
- Communication (Submenu) ..... 74
- Concentration (Parameter) ..... 41
- Concentration (Submenu) ..... 147
- Condensed status diagnostic (Parameter) ..... 87
- Confirm access code (Parameter) ..... 36
- Contrast display (Parameter) ..... 25
- Control Totalizer 1 to 3 (Parameter) ..... 135
- Corrected volume flow (Parameter) ..... 40
- Corrected volume flow calculation (Parameter) ..... 63
- Corrected volume flow calculation (Submenu) ..... 63
- Corrected volume flow factor (Parameter) ..... 70
- Corrected volume flow offset (Parameter) ..... 70
- Corrected volume flow unit (Parameter) ..... 47
- Corrected volume unit (Parameter) ..... 48

## D

- Date/time format (Parameter) ..... 51
- Decimal places 1 (Parameter) ..... 19
- Decimal places 2 (Parameter) ..... 20
- Decimal places 3 (Parameter) ..... 22
- Decimal places 4 (Parameter) ..... 23
- Default gateway (Parameter) ..... 89
- Define access code (Parameter) ..... 35, 36
- Define access code (Wizard) ..... 35
- Density (Parameter) ..... 40
- Density damping (Parameter) ..... 52
- Density factor (Parameter) ..... 69
- Density offset (Parameter) ..... 69
- Density unit (Parameter) ..... 49
- Descriptor (Parameter) ..... 85
- Device address (Parameter) ..... 75
- Device certification (Parameter) ..... 84
- Device ID (Parameter) ..... 82
- Device information (Submenu) ..... 156
- Device install date (Parameter) ..... 85
- Device message (Parameter) ..... 85
- Device name (Parameter) ..... 157
- Device reset (Parameter) ..... 37
- Device tag (Parameter) ..... 79, 156
- Diagnostic behavior (Submenu) ..... 28
- Diagnostic event category (Parameter) ..... 168
- Diagnostic handling (Submenu) ..... 27
- Diagnostic list (Submenu) ..... 150
- Diagnostics (Parameter) ..... 83
- Diagnostics (Submenu) ..... 147
- Diagnostics 1 (Parameter) ..... 150
- Diagnostics 2 (Parameter) ..... 151
- Diagnostics 3 (Parameter) ..... 151
- Diagnostics 4 (Parameter) ..... 152
- Diagnostics 5 (Parameter) ..... 153
- Diagnostics mask (Parameter) ..... 83
- Direct access
- 0% bargraph value 1 ..... 18

0% bargraph value 3 . . . . .	21	Analog output 1 to 3 . . . . .	117
100% bargraph value 1 . . . . .	18	Discrete input 1 to 2 . . . . .	109
100% bargraph value 3 . . . . .	21	Discrete output 1 to 3 . . . . .	129
Access status display . . . . .	11, 26	Totalizer 1 to 3 . . . . .	142
Access status tooling . . . . .	12	Batch Recipe Unit Procedure	
Activate SW option . . . . .	37	Analog input 1 to 8 . . . . .	96
Actual diagnostics . . . . .	147	Analog output 1 to 3 . . . . .	117
Address mode . . . . .	74	Discrete input 1 to 2 . . . . .	109
Alarm delay . . . . .	27	Discrete output 1 to 3 . . . . .	129
Alarm hysteresis		Totalizer 1 to 3 . . . . .	142
Analog input 1 to 8 . . . . .	98	Baudrate . . . . .	77
Totalizer 1 to 3 . . . . .	142	C0 to 5 . . . . .	73
Alarm summary . . . . .	81	Calibration factor . . . . .	72
Analog input 1 to 8 . . . . .	94	Carrier mass flow . . . . .	42
Analog output 1 to 3 . . . . .	116	Channel	
Discrete input 1 to 2 . . . . .	108	Analog input 1 to 8 . . . . .	90
Discrete output 1 to 3 . . . . .	128	Discrete input 1 to 2 . . . . .	104
Totalizer 1 to 3 . . . . .	141	Concentration . . . . .	41
Alert key . . . . .	80	Condensed status diagnostic . . . . .	87
Analog input 1 to 8 . . . . .	93	Contrast display . . . . .	25
Analog output 1 to 3 . . . . .	114	Control Totalizer 1 to 3 . . . . .	135
Discrete input 1 to 2 . . . . .	106	Corrected volume flow . . . . .	40
Discrete output 1 to 3 . . . . .	126	Corrected volume flow calculation . . . . .	63
Totalizer 1 to 3 . . . . .	139	Corrected volume flow factor . . . . .	70
Assign behavior of diagnostic no. 046 . . . . .	29	Corrected volume flow offset . . . . .	70
Assign behavior of diagnostic no. 140 . . . . .	29	Corrected volume flow unit . . . . .	47
Assign behavior of diagnostic no. 144 . . . . .	29	Corrected volume unit . . . . .	48
Assign behavior of diagnostic no. 192 . . . . .	33	Date/time format . . . . .	51
Assign behavior of diagnostic no. 274 . . . . .	33	Decimal places 1 . . . . .	19
Assign behavior of diagnostic no. 392 . . . . .	33	Decimal places 2 . . . . .	20
Assign behavior of diagnostic no. 592 . . . . .	34	Decimal places 3 . . . . .	22
Assign behavior of diagnostic no. 832 . . . . .	30	Decimal places 4 . . . . .	23
Assign behavior of diagnostic no. 833 . . . . .	30	Default gateway . . . . .	89
Assign behavior of diagnostic no. 834 . . . . .	31	Define access code . . . . .	36
Assign behavior of diagnostic no. 835 . . . . .	31	Density . . . . .	40
Assign behavior of diagnostic no. 912 . . . . .	31	Density damping . . . . .	52
Assign behavior of diagnostic no. 913 . . . . .	32	Density factor . . . . .	69
Assign behavior of diagnostic no. 944 . . . . .	32	Density offset . . . . .	69
Assign behavior of diagnostic no. 948 . . . . .	32	Density unit . . . . .	49
Assign behavior of diagnostic no. 992 . . . . .	34	Descriptor . . . . .	85
Assign process variable . . . . .	54, 57	Device address . . . . .	75
Totalizer 1 to 3 . . . . .	133	Device certification . . . . .	84
Assign simulation process variable . . . . .	166	Device ID . . . . .	82
Backlight . . . . .	26	Device install date . . . . .	85
Base current . . . . .	77	Device message . . . . .	85
Batch ID		Device name . . . . .	157
Analog input 1 to 8 . . . . .	95	Device reset . . . . .	37
Analog output 1 to 3 . . . . .	116	Device tag . . . . .	79, 156
Discrete input 1 to 2 . . . . .	108	Diagnostic event category . . . . .	168
Discrete output 1 to 3 . . . . .	128	Diagnostics . . . . .	83
Totalizer 1 to 3 . . . . .	141	Diagnostics 1 . . . . .	150
Batch operation		Diagnostics 2 . . . . .	151
Analog input 1 to 8 . . . . .	95	Diagnostics 3 . . . . .	151
Analog output 1 to 3 . . . . .	116	Diagnostics 4 . . . . .	152
Discrete input 1 to 2 . . . . .	108	Diagnostics 5 . . . . .	153
Discrete output 1 to 3 . . . . .	128	Diagnostics mask . . . . .	83
Totalizer 1 to 3 . . . . .	141	Direct access . . . . .	10
Batch phase		Display damping . . . . .	23
Analog input 1 to 8 . . . . .	95	Display interval . . . . .	23

Display language .....	14	Input channel	
ENP version .....	159	Analog output 1 to 3 .....	119
Enter access code .....	13	Discrete output 1 to 3 .....	130
Extended order code 1 .....	158	Installation direction .....	66
Extended order code 2 .....	158	Invert	
Extended order code 3 .....	158	Discrete input 1 to 2 .....	104
External pressure .....	62	Discrete output 1 to 3 .....	123
External reference density .....	63	IP address .....	88
Factory reset .....	84	Limit value measuring tube damping .....	73
Fail safe time		Lin type	
Analog output 1 to 3 .....	111	Analog input 1 to 8 .....	97
Discrete output 1 to 3 .....	124	Linear expansion coefficient .....	65
Fail safe type		Lo alarm state	
Analog input 1 to 8 .....	91	Analog input 1 to 8 .....	101
Analog output 1 to 3 .....	112	Totalizer 1 to 3 .....	146
Discrete input 1 to 2 .....	104	Lo alarm value	
Discrete output 1 to 3 .....	124	Analog input 1 to 8 .....	101
Fail safe value		Totalizer 1 to 3 .....	146
Analog input 1 to 8 .....	91	Lo Lim	
Analog output 1 to 3 .....	112	Analog input 1 to 8 .....	99
Discrete input 1 to 2 .....	105	Totalizer 1 to 3 .....	144
Discrete output 1 to 3 .....	124	Lo Lo alarm state	
Failure mode		Analog input 1 to 8 .....	101
Totalizer 1 to 3 .....	137	Totalizer 1 to 3 .....	146
Feature enabled .....	86	Lo Lo alarm value	
Feature supported .....	86	Analog input 1 to 8 .....	101
Filter options .....	154	Totalizer 1 to 3 .....	146
Firmware version .....	157	Lo Lo Lim	
Fixed reference density .....	64	Analog input 1 to 8 .....	99
Flow damping .....	52	Totalizer 1 to 3 .....	144
Flow override .....	53	Locking status .....	11
Format display .....	15	Low value partial filled pipe detection .....	57
Hardware lock .....	86	MAC address .....	88
Hardware revision .....	82	Manufacturer ID .....	82
Header .....	24	Mass flow .....	39
Header text .....	24	Mass flow factor .....	68
Hi alarm state		Mass flow offset .....	68
Analog input 1 to 8 .....	100	Mass flow unit .....	44
Totalizer 1 to 3 .....	145	Mass unit .....	45
Hi alarm value		Master availability .....	77
Analog input 1 to 8 .....	100	Maximum damping partial filled pipe det. ....	59
Totalizer 1 to 3 .....	145	Maximum value .....	161, 162, 163, 164, 165
Hi Hi alarm state		Minimum value .....	160, 161, 162, 163, 164, 165
Analog input 1 to 8 .....	100	Mode block actual .....	80
Totalizer 1 to 3 .....	145	Analog input 1 to 8 .....	94
Hi Hi alarm value		Analog output 1 to 3 .....	115
Analog input 1 to 8 .....	100	Discrete input 1 to 2 .....	107
Totalizer 1 to 3 .....	145	Discrete output 1 to 3 .....	127
Hi Hi Lim		Totalizer 1 to 3 .....	140
Analog input 1 to 8 .....	98	Mode block normal .....	81
Totalizer 1 to 3 .....	143	Analog input 1 to 8 .....	94
Hi Lim		Analog output 1 to 3 .....	115
Analog input 1 to 8 .....	98	Discrete input 1 to 2 .....	107
Totalizer 1 to 3 .....	143	Discrete output 1 to 3 .....	127
High value partial filled pipe detection .....	58	Totalizer 1 to 3 .....	140
Ident number selector .....	75, 85	Mode block permitted .....	80
Increase close		Analog input 1 to 8 .....	94
Analog output 1 to 3 .....	121	Analog output 1 to 3 .....	115
		Discrete input 1 to 2 .....	107

Discrete output 1 to 3 . . . . .	127	Discrete output 1 to 3 . . . . .	130
Totalizer 1 to 3 . . . . .	140	RCAS out status	
Nominal diameter . . . . .	73	Analog output 1 to 3 . . . . .	120
Off value low flow cutoff . . . . .	55	Discrete output 1 to 3 . . . . .	131
On value low flow cutoff . . . . .	54	RCAS out value	
Operating time . . . . .	149	Analog output 1 to 3 . . . . .	119
Operating time from restart . . . . .	149	Discrete output 1 to 3 . . . . .	131
Order code . . . . .	157	Readback status	
Out decimal point		Analog output 1 to 3 . . . . .	118
Analog input 1 to 8 . . . . .	97	Discrete output 1 to 3 . . . . .	129
Out scale lower range		Readback value	
Analog input 1 to 8 . . . . .	96	Analog output 1 to 3 . . . . .	118
Analog output 1 to 3 . . . . .	122	Discrete output 1 to 3 . . . . .	129
Out scale upper range		Reference density . . . . .	40
Analog input 1 to 8 . . . . .	97	Reference density factor . . . . .	71
Analog output 1 to 3 . . . . .	122	Reference density offset . . . . .	70
Out status		Reference density unit . . . . .	49
Analog input 1 to 8 . . . . .	92	Reference sound velocity . . . . .	61
Analog output 1 to 3 . . . . .	113	Reference temperature . . . . .	64
Discrete input 1 to 2 . . . . .	105	Reset min/max values . . . . .	160
Discrete output 1 to 3 . . . . .	125	Response time part. filled pipe detect. . . . .	58
Out unit		Select gas type . . . . .	60
Analog input 1 to 8 . . . . .	97	Select medium . . . . .	60
Out unit text		Separator . . . . .	25
Analog input 1 to 8 . . . . .	103	Serial number . . . . .	83, 157
Out value		Set point status	
Analog input 1 to 8 . . . . .	92	Analog output 1 to 3 . . . . .	111
Analog output 1 to 3 . . . . .	113	Discrete output 1 to 3 . . . . .	123
Discrete input 1 to 2 . . . . .	105	Set point value	
Discrete output 1 to 3 . . . . .	125	Analog output 1 to 3 . . . . .	111
Output channel		Discrete output 1 to 3 . . . . .	123
Analog output 1 to 3 . . . . .	119	Setpoint deviation	
Discrete output 1 to 3 . . . . .	130	Analog output 1 to 3 . . . . .	120
Position status		Simulate enabled	
Analog output 1 to 3 . . . . .	120	Analog input 1 to 8 . . . . .	102
Position value		Analog output 1 to 3 . . . . .	120
Analog output 1 to 3 . . . . .	120	Discrete input 1 to 2 . . . . .	109
Preset value 1 to 3 . . . . .	136	Discrete output 1 to 3 . . . . .	131
Pressure compensation . . . . .	61	Simulate status	
Pressure shock suppression . . . . .	55	Analog input 1 to 8 . . . . .	102
Pressure unit . . . . .	50	Analog output 1 to 3 . . . . .	121
Pressure value . . . . .	41, 62	Discrete input 1 to 2 . . . . .	110
Previous diagnostics . . . . .	148	Discrete output 1 to 3 . . . . .	132
PROFIBUS ident number . . . . .	76	Simulate value	
Profile version . . . . .	76	Analog input 1 to 8 . . . . .	102
Progress . . . . .	67	Analog output 1 to 3 . . . . .	121
PV filter time		Discrete input 1 to 2 . . . . .	110
Analog input 1 to 8 . . . . .	91	Discrete output 1 to 3 . . . . .	132
PV scale lower range		Simulation device alarm . . . . .	167
Analog input 1 to 8 . . . . .	96	Simulation diagnostic event . . . . .	168
Analog output 1 to 3 . . . . .	117	Software option overview . . . . .	38
PV scale upper range		Software revision . . . . .	82
Analog input 1 to 8 . . . . .	96	Square expansion coefficient . . . . .	65
Analog output 1 to 3 . . . . .	118	Static revision . . . . .	79
RCAS in status		Analog input 1 to 8 . . . . .	93
Analog output 1 to 3 . . . . .	119	Analog output 1 to 3 . . . . .	114
Discrete output 1 to 3 . . . . .	130	Discrete input 1 to 2 . . . . .	106
RCAS in value		Discrete output 1 to 3 . . . . .	126
Analog output 1 to 3 . . . . .	118	Totalizer 1 to 3 . . . . .	139

Status PROFIBUS Master Config . . . . .	76	Document	Explanation of the structure of a parameter
Strategy . . . . .	79		description . . . . .
Analog input 1 to 8 . . . . .	93	Function . . . . .	4
Analog output 1 to 3 . . . . .	114	Structure . . . . .	4
Discrete input 1 to 2 . . . . .	106	Symbols used . . . . .	6
Discrete output 1 to 3 . . . . .	126	Target group . . . . .	4
Totalizer 1 to 3 . . . . .	139	Using the document . . . . .	4
Subnet mask . . . . .	89	Document function . . . . .	4
Tag description			
Analog input 1 to 8 . . . . .	92	<b>E</b>	
Analog output 1 to 3 . . . . .	113	Electronic temperature (Submenu) . . . . .	160
Discrete input 1 to 2 . . . . .	106	ENP version (Parameter) . . . . .	159
Discrete output 1 to 3 . . . . .	125	Enter access code (Parameter) . . . . .	13
Totalizer 1 to 3 . . . . .	139	Event list (Submenu) . . . . .	155
Target mass flow . . . . .	42	Event logbook (Submenu) . . . . .	153
Target mode . . . . .	80	Extended order code 1 (Parameter) . . . . .	158
Analog input 1 to 8 . . . . .	93	Extended order code 2 (Parameter) . . . . .	158
Analog output 1 to 3 . . . . .	114	Extended order code 3 (Parameter) . . . . .	158
Discrete input 1 to 2 . . . . .	107	External compensation (Submenu) . . . . .	61
Discrete output 1 to 3 . . . . .	126	External pressure (Parameter) . . . . .	62
Totalizer 1 to 3 . . . . .	140	External reference density (Parameter) . . . . .	63
Temperature . . . . .	41	<b>F</b>	
Temperature coefficient sound velocity . . . . .	61	Factory reset (Parameter) . . . . .	84
Temperature damping . . . . .	53	Factory settings . . . . .	169
Temperature factor . . . . .	71	SI units . . . . .	169
Temperature offset . . . . .	71	US units . . . . .	170
Temperature unit . . . . .	50	Fail safe time (Parameter) . . . . .	111, 124
Timestamp . . . . .	148, 149, 150, 151, 152, 153	Fail safe type (Parameter) . . . . .	91, 104, 112, 124
Totalizer operation mode		Fail safe value (Parameter) . . . . .	91, 105, 112, 124
Totalizer 1 to 3 . . . . .	136	Failure mode (Parameter) . . . . .	137
Totalizer status (Hex) 1 to 3 . . . . .	43, 138	Feature enabled (Parameter) . . . . .	86
Totalizer status 1 to 3 . . . . .	43, 138	Feature supported (Parameter) . . . . .	86
Totalizer value 1 to 3 . . . . .	43, 138	Filter options (Parameter) . . . . .	154
Unit totalizer		Firmware version (Parameter) . . . . .	157
Totalizer 1 to 3 . . . . .	134	Fixed reference density (Parameter) . . . . .	64
Value 1 display . . . . .	16	Flow damping (Parameter) . . . . .	52
Value 2 display . . . . .	19	Flow override (Parameter) . . . . .	53
Value 3 display . . . . .	20	Format display (Parameter) . . . . .	15
Value 4 display . . . . .	22	Function	
Value process variable . . . . .	167	see Parameter	
Volume flow . . . . .	40	<b>H</b>	
Volume flow factor . . . . .	69	Hardware lock (Parameter) . . . . .	86
Volume flow offset . . . . .	68	Hardware revision (Parameter) . . . . .	82
Volume flow unit . . . . .	46	Header (Parameter) . . . . .	24
Volume unit . . . . .	47	Header text (Parameter) . . . . .	24
Web server functionality . . . . .	89	Heartbeat (Submenu) . . . . .	165
Web server language . . . . .	87	Hi alarm state (Parameter) . . . . .	100, 145
Zero point . . . . .	72	Hi alarm value (Parameter) . . . . .	100, 145
Zero point adjustment control . . . . .	66	Hi Hi alarm state (Parameter) . . . . .	100, 145
Direct access (Parameter) . . . . .	10	Hi Hi alarm value (Parameter) . . . . .	100, 145
Discrete input 1 to 2 (Submenu) . . . . .	103	Hi Lim (Parameter) . . . . .	98, 143
Discrete inputs (Submenu) . . . . .	103	Hi Lim (Parameter) . . . . .	98, 143
Discrete output 1 to 3 (Submenu) . . . . .	122	High value partial filled pipe detection (Parameter) . . . . .	58
Discrete outputs (Submenu) . . . . .	122		
Display (Submenu) . . . . .	13		
Display damping (Parameter) . . . . .	23		
Display interval (Parameter) . . . . .	23		
Display language (Parameter) . . . . .	14		

Input channel (Parameter) . . . . .	119, 130
Installation direction (Parameter) . . . . .	66
Invert (Parameter) . . . . .	104, 123
IP address (Parameter) . . . . .	88

**L**

Limit value measuring tube damping (Parameter) . . . . .	73
Lin type (Parameter) . . . . .	97
Linear expansion coefficient (Parameter) . . . . .	65
Lo alarm state (Parameter) . . . . .	101, 146
Lo alarm value (Parameter) . . . . .	101, 146
Lo Lim (Parameter) . . . . .	99, 144
Lo Lo alarm state (Parameter) . . . . .	101, 146
Lo Lo alarm value (Parameter) . . . . .	101, 146
Lo Lo Lim (Parameter) . . . . .	99, 144
Locking status (Parameter) . . . . .	11
Low flow cut off (Submenu) . . . . .	54
Low value partial filled pipe detection (Parameter) . . . . .	57

**M**

MAC address (Parameter) . . . . .	88
Manufacturer ID (Parameter) . . . . .	82
Mass flow (Parameter) . . . . .	39
Mass flow factor (Parameter) . . . . .	68
Mass flow offset (Parameter) . . . . .	68
Mass flow unit (Parameter) . . . . .	44
Mass unit (Parameter) . . . . .	45
Master availability (Parameter) . . . . .	77
Maximum damping partial filled pipe det. (Parameter) . . . . .	59
Maximum value (Parameter) . . . . .	161, 162, 163, 164, 165
Measured values (Submenu) . . . . .	39
Measurement mode (Submenu) . . . . .	59
Medium temperature (Submenu) . . . . .	161
Min/max values (Submenu) . . . . .	159
Minimum value (Parameter) . . . . .	160, 161, 162, 163, 164,
Mode block actual (Parameter) . . . . .	80, 94, 107, 115, 127,
Mode block normal (Parameter) . . . . .	81, 94, 107, 115, 127,
Mode block permitted (Parameter) . . . . .	80, 94, 107, 115, 127,

**N**

Nominal diameter (Parameter) . . . . .	73
--	----

**O**

Off value low flow cutoff (Parameter) . . . . .	55
On value low flow cutoff (Parameter) . . . . .	54
Operating time (Parameter) . . . . .	149
Operating time from restart (Parameter) . . . . .	149
Order code (Parameter) . . . . .	157
Oscillation amplitude (Submenu) . . . . .	163
Oscillation damping (Submenu) . . . . .	164
Oscillation frequency (Submenu) . . . . .	163
Out decimal point (Parameter) . . . . .	97
Out scale lower range (Parameter) . . . . .	96, 122
Out scale upper range (Parameter) . . . . .	97, 122
Out status (Parameter) . . . . .	92, 105, 113, 125

Out unit (Parameter) . . . . .	97
Out unit text (Parameter) . . . . .	103
Out value (Parameter) . . . . .	92, 105, 113, 125
Output channel (Parameter) . . . . .	119, 130

**P**

Parameter	
Structure of a parameter description	6
Partially filled pipe detection (Submenu) . . . . .	57
Physical block (Submenu) . . . . .	78
Position status (Parameter) . . . . .	120
Position value (Parameter) . . . . .	120
Preset value 1 to 3 (Parameter) . . . . .	136
Pressure compensation (Parameter) . . . . .	61
Pressure shock suppression (Parameter) . . . . .	55
Pressure unit (Parameter) . . . . .	50
Pressure value (Parameter) . . . . .	41, 62
Previous diagnostics (Parameter) . . . . .	148
Process parameters (Submenu) . . . . .	52
Process variable adjustment (Submenu) . . . . .	67
Process variables (Submenu) . . . . .	39
PROFIBUS DP configuration (Submenu) . . . . .	74
PROFIBUS DP info (Submenu) . . . . .	76
PROFIBUS ident number (Parameter) . . . . .	76
Profile version (Parameter) . . . . .	76
Progress (Parameter) . . . . .	67
PV filter time (Parameter) . . . . .	91
PV scale lower range (Parameter) . . . . .	96, 117
PV scale upper range (Parameter) . . . . .	96, 118

**R**

RCAS in status (Parameter) . . . . .	119, 130
RCAS in value (Parameter) . . . . .	118, 130
RCAS out status (Parameter) . . . . .	120, 131
RCAS out value (Parameter) . . . . .	119, 131
Readback status (Parameter) . . . . .	118, 129
Readback value (Parameter) . . . . .	118, 129
Reference density (Parameter) . . . . .	40
Reference density factor (Parameter) . . . . .	71
Reference density offset (Parameter) . . . . .	70
Reference density unit (Parameter) . . . . .	49
Reference sound velocity (Parameter) . . . . .	61
Reference temperature (Parameter) . . . . .	64
Reset min/max values (Parameter) . . . . .	160
Response time part. filled pipe detect. (Parameter) . . . . .	58

**S**

Select gas type (Parameter) . . . . .	60
Select medium (Parameter) . . . . .	60
Sensor (Submenu) . . . . .	38
Sensor adjustment (Submenu) . . . . .	65
Separator (Parameter) . . . . .	25
Serial number (Parameter) . . . . .	83, 157
Set point status (Parameter) . . . . .	111, 123
Set point value (Parameter) . . . . .	111, 123
Setpoint deviation (Parameter) . . . . .	120
Signal asymmetry (Submenu) . . . . .	165
Simulate enabled (Parameter) . . . . .	102, 109, 120, 131
Simulate status (Parameter) . . . . .	102, 110, 121, 132

Simulate value (Parameter) . . . . .	102, 110, 121, 132	
Simulation (Submenu) . . . . .	166	
Simulation device alarm (Parameter) . . . . .	167	
Simulation diagnostic event (Parameter) . . . . .	168	
Software option overview (Parameter) . . . . .	38	
Software revision (Parameter) . . . . .	82	
Square expansion coefficient (Parameter) . . . . .	65	
Static revision (Parameter) . . . . .	79, 93, 106, 114, 126, 139	
Status PROFIBUS Master Config (Parameter) . . . . .	76	
Strategy (Parameter) . . . . .	79, 93, 106, 114, 126, 139	
Submenu		
Administration . . . . .	34	
Analog input 1 to 8 . . . . .	90	
Analog inputs . . . . .	89	
Analog output 1 to 3 . . . . .	110	
Analog outputs . . . . .	110	
Application . . . . .	132	
Calculated values . . . . .	63	
Calibration . . . . .	72	
Carrier pipe temperature . . . . .	162	
Communication . . . . .	74	
Concentration . . . . .	147	
Corrected volume flow calculation . . . . .	63	
Device information . . . . .	156	
Diagnostic behavior . . . . .	28	
Diagnostic handling . . . . .	27	
Diagnostic list . . . . .	150	
Diagnostics . . . . .	147	
Discrete input 1 to 2 . . . . .	103	
Discrete inputs . . . . .	103	
Discrete output 1 to 3 . . . . .	122	
Discrete outputs . . . . .	122	
Display . . . . .	13	
Electronic temperature . . . . .	160	
Event list . . . . .	155	
Event logbook . . . . .	153	
External compensation . . . . .	61	
Heartbeat . . . . .	165	
Low flow cut off . . . . .	54	
Measured values . . . . .	39	
Measurement mode . . . . .	59	
Medium temperature . . . . .	161	
Min/max values . . . . .	159	
Oscillation amplitude . . . . .	163	
Oscillation damping . . . . .	164	
Oscillation frequency . . . . .	163	
Partially filled pipe detection . . . . .	57	
Physical block . . . . .	78	
Process parameters . . . . .	52	
Process variable adjustment . . . . .	67	
Process variables . . . . .	39	
PROFIBUS DP configuration . . . . .	74	
PROFIBUS DP info . . . . .	76	
Sensor . . . . .	38	
Sensor adjustment . . . . .	65	
Signal asymmetry . . . . .	165	
Simulation . . . . .	166	
Supervision . . . . .	73	
System . . . . .	13	
System units . . . . .	44	
Totalizer . . . . .	42	
Totalizer 1 to 3 . . . . .	133	
Web server . . . . .	87	
Zero point adjustment . . . . .	66	
Subnet mask (Parameter) . . . . .	89	
Supervision (Submenu) . . . . .	73	
System (Submenu) . . . . .	13	
System units (Submenu) . . . . .	44	
<b>T</b>		
Tag description (Parameter) . . . . .	92, 106, 113, 125, 139	
Target group . . . . .	4	
Target mass flow (Parameter) . . . . .	42	
Target mode (Parameter) . . . . .	80, 93, 107, 114, 126, 140	
Temperature (Parameter) . . . . .	41	
Temperature coefficient sound velocity (Parameter) . . . . .	61	
Temperature damping (Parameter) . . . . .	53	
Temperature factor (Parameter) . . . . .	71	
Temperature offset (Parameter) . . . . .	71	
Temperature unit (Parameter) . . . . .	50	
Timestamp (Parameter) . . . . .	148, 149, 150, 151, 152, 153	
Totalizer (Submenu) . . . . .	42	
Totalizer 1 to 3 (Submenu) . . . . .	133	
Totalizer operation mode (Parameter) . . . . .	136	
Totalizer status (Hex) 1 to 3 (Parameter) . . . . .	43, 138	
Totalizer status 1 to 3 (Parameter) . . . . .	43, 138	
Totalizer value 1 to 3 (Parameter) . . . . .	43, 138	
<b>U</b>		
Unit totalizer (Parameter) . . . . .	134	
<b>V</b>		
Value 1 display (Parameter) . . . . .	16	
Value 2 display (Parameter) . . . . .	19	
Value 3 display (Parameter) . . . . .	20	
Value 4 display (Parameter) . . . . .	22	
Value process variable (Parameter) . . . . .	167	
Volume flow (Parameter) . . . . .	40	
Volume flow factor (Parameter) . . . . .	69	
Volume flow offset (Parameter) . . . . .	68	
Volume flow unit (Parameter) . . . . .	46	
Volume unit (Parameter) . . . . .	47	
<b>W</b>		
Web server (Submenu) . . . . .	87	
Web server functionality (Parameter) . . . . .	89	
Web server language (Parameter) . . . . .	87	
Wizard		
Define access code . . . . .	35	
<b>Z</b>		
Zero point (Parameter) . . . . .	72	
Zero point adjustment (Submenu) . . . . .	66	
Zero point adjustment control (Parameter) . . . . .	66	

[www.addresses.endress.com](http://www.addresses.endress.com)

---