

# Safety Instructions

## Proline Cubemass 100

INMETRO: Zone 2

### Segurança



Document: XA01222D

Safety instructions for electrical apparatus for explosion-hazardous areas according to ABNT NBR IEC

60079-0 →  3



# Proline Cubemass 100

## Table of contents

Associated documentation .....	4
Manufacturer's certificates .....	4
Manufacturer contact address .....	4
Extended order code .....	5
Safety instructions: General .....	6
Safety instructions: Installation .....	7
Temperature tables .....	8
Connection data: Signal circuits .....	10

## Associated documentation

All documentation is available:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
  - Internet: [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)
  - Smart phone/tablet: *Endress+Hauser Operations App*
- In the Download Area of the Endress+Hauser web site: [www.endress.com](http://www.endress.com) → Download

This document is an integral part of the following Operating Instructions:

Measuring device	Documentation code				
	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Cubemass C 100	BA01188D	BA01247D	BA01178D	BA01183D	BA01425D

*Additional documentation:*

Document type	Contents	Documentation code
Brochure	Explosion Protection	CP00021Z/11

Please note the documentation associated with the device.

## Manufacturer's certificates

### Declaration of conformity

INMETRO CERTIFICADO DE CONFORMIDADE

### INMETRO certificate of conformity

Certificate number:

DEKRA 13.0003

Affixing the certificate number certifies conformity with the standards under [www.abnt.org.br](http://www.abnt.org.br) (depending on the device version).

- ABNT NBR IEC 60079-0: 2013
- ABNT NBR IEC 60079-15: 2012

## Manufacturer contact address

Endress+Hauser Flowtec AG  
 Kägenstrasse 7  
 4153 Reinach BL  
 Switzerland

**Extended order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

**Structure of the extended order code**



- **Device type**  
 The device and the device design is defined in the "Device type" section (Product root).
- **Basic specifications**  
 The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.
- **Optional specifications**  
 The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = test, certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

**Device type**

Position	Order code	Selected option	Description
1	Instrument family	8	Coriolis flowmeter
2	Sensor	C	Sensor type
3	Transmitter	1	Transmitter type: 4-wire, compact version

Position	Order code	Selected option	Description
4	Generation index	B	Platform generation
5, 6	Nominal diameter	DN 1: 01 DN 2: 02 DN 4: 04 DN 6: 06	Nominal diameter of sensor

### Basic specifications

Position	Order code	Selected Option	Description
1, 2	Approval	M5	Ex nA IIC T5...T1 Gc Ex nA IIC T6...T1 Gc
3	Input; Output	B	4-20mA HART, Pulse/Frequency/Switch output
		L	PROFIBUS DP
		M	Modbus RS485
		N	EtherNet/IP
4	Display; Operation	A	without; via communication
		B	4-line; via communication
5	Housing	A	Compact, alu, coated
		B	Compact hygienic, stainless
		C	ultra-compact hygienic, stainless

### Optional specifications

No options specific to hazardous locations are available.

### Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations (e.g. ABNT NBR IEC 60079-14)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.

- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).

### **Safety instructions: Installation**

In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.

- Temperature: -20 to +60 °C
- Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
- Air with normal oxygen content, usually 21 % (V/V)

If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.

- Connecting or disconnecting the devices:
  - Ensure the supply voltage is switched off.
  - Or the device is located in a non-hazardous area.
- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit.
- Only use certified cable entries and connection plugs M12×1 suitable for the application. Please comply with the selection criteria as defined in ABNT NBR IEC 60079-14.
- Continuous service temperature of the connecting cable: -40 to +80 °C; however, at least in accordance with the range of service temperature taking into account additional influences of the process conditions ( $T_{a,min}$  and  $T_{a,max} + 20$  K).
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Supplied cable glands M20 × 1.5 are only suitable for fixed installation of cables and connections. In the installation, a strain relief must be provided.

*Basic specification, Position 5 (Housing) = B, C*

To protect the housing of stainless steel housings ensure that the housing gasket is flat and not bent when closing the housing cover. Replace bent gaskets.

### Potential equalization

- Integrate the device into the local potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

### Temperature tables

#### Ambient temperature

Minimum ambient temperature:

$$T_a = -40 \text{ °C}$$

Maximum ambient temperature:

$T_a = +60 \text{ °C}$  depending on the medium temperature and temperature class

#### Medium temperature

Minimum medium temperature:

$$T_m = -50 \text{ °C}$$

Maximum medium temperature:

$T_m$  for T6...T1 depending on the maximum ambient temperature  $T_a$

### Compact version

*Basic specification, Position 5 (Housing) = A, B*

$T_a$ [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [300 °C]
35	50	85	120	150 <sup>1)</sup>	150 <sup>2)</sup>	150 <sup>2)</sup>
50	–	85	120	150 <sup>1)</sup>	150 <sup>2)</sup>	150 <sup>2)</sup>
60	–	–	120	150 <sup>1)</sup>	150 <sup>2)</sup>	150 <sup>2)</sup>

- 1) The following applies to specified sensors with a maximum fluid temperature  $T_m = 205 \text{ °C}$ :  $T_m = 170 \text{ °C}$
- 2) The following applies to specified sensors with a maximum fluid temperature  $T_m = 205 \text{ °C}$ :  $T_m = 205 \text{ °C}$

*Basic specification, Position 5 (Housing) = C*

T <sub>a</sub> [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [300 °C]
50	-	85	120	150 <sup>1)</sup>	150 <sup>2)</sup>	150 <sup>2)</sup>
60	-	-	120	150 <sup>1)</sup>	150 <sup>2)</sup>	150 <sup>2)</sup>

- 1) The following applies to specified sensors with a maximum fluid temperature T<sub>m</sub> = 205 °C: T<sub>m</sub> = 170 °C
- 2) The following applies to specified sensors with a maximum fluid temperature T<sub>m</sub> = 205 °C: T<sub>m</sub> = 205 °C

**Connection data:  
Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

**Terminal assignment**

*Transmitter*




The order code constitutes part of the extended order code. For detailed information on the device features and the structure of the extended order code → 5.

*Connection version 4-20 mA HART with pulse/frequency/switch output*

Order code for "Output", option **B**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

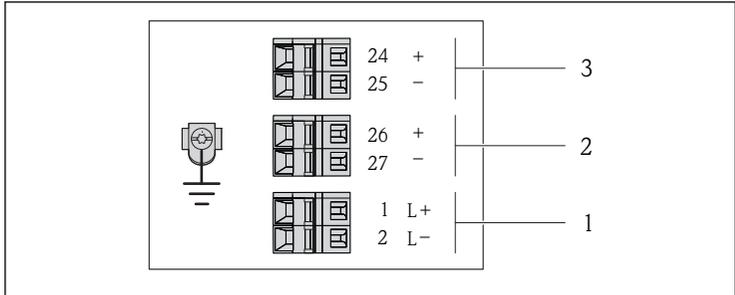

A0016888

1 Terminal assignment 4-20 mA HART with pulse/frequency/switch output


- 1 Power supply: DC 24 V
- 2 Output 1: 4-20 mA HART (active)
- 3 Output 2: pulse/frequency/switch output (passive)

Order code for "Output"	Terminal number					
	Power supply		Output 1		Output 2	
	2 (L-)	1 (L+)	27 (-)	26 (+)	25 (-)	24 (+)
Option B	DC 24 V		4-20 mA HART (active)		Pulse/frequency/switch output (passive)	
Order code for "Output": Option B: 4-20 mA HART with pulse/frequency/switch output						

*PROFIBUS DP connection version*

Order code for "Output", option **L**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

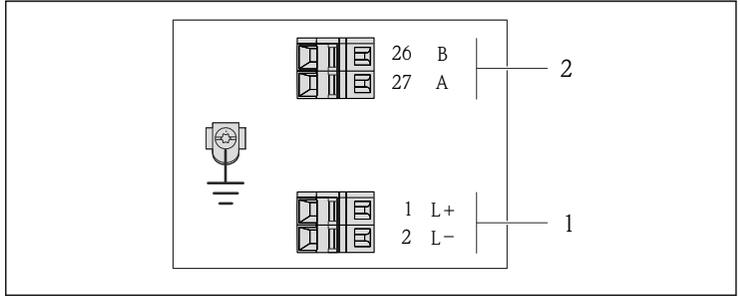

A0022716

**2** PROFIBUS DP terminal assignment


- 1 Power supply: DC 24 V
- 2 PROFIBUS DP

Order code for "Output"	Terminal number			
	Power supply		Output	
	2 (L-)	1 (L+)	26 (RxD/ TxD-P)	27 (RxD/ TxD-N)
Option <b>L</b>	DC 24 V		B	A
Order code for "Output": Option <b>L</b> : PROFIBUS DP, for use in non-hazardous areas and Zone 2				

*Modbus RS485 connection version*

Order code for "Output", option **M**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

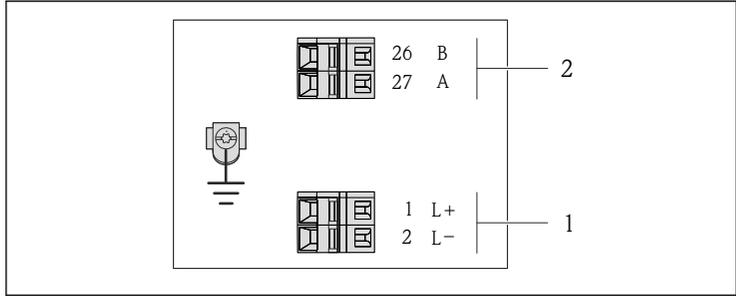

A0019528

3 *Modbus RS485 terminal assignment, connection version for use in non-hazardous areas and Zone 2*

1 *Power supply: DC 24 V*

2 *Modbus RS485*

Order code for "Output"	Terminal number			
	Power supply		Output	
	2 (L-)	1 (L+)	27 (B)	26 (A)
Option <b>M</b>	DC 24 V		Modbus RS485	
Order code for "Output": Option <b>M</b> : Modbus RS485, for use in non-hazardous areas and Zone 2				


*Modbus RS485 connection version*



For use in the intrinsically safe area. Connection via Safety Barrier Promass 100.

Order code for "Output", option **M**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

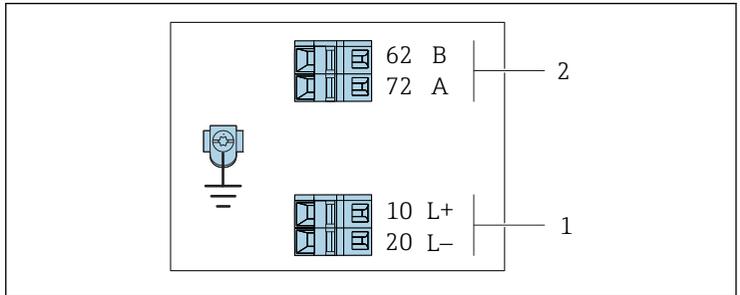

A0030219

**4** *Modbus RS485 terminal assignment, connection version for use in intrinsically safe areas (connection via Safety Barrier Promass 100)*


- 1 *Intrinsically safe power supply*
- 2 *Modbus RS485*

Order code for "Output"	20 (L-)	10 (L+)	72 (B)	62 (A)
Option <b>M</b>	Intrinsically safe supply voltage		Modbus RS485 intrinsically safe	
Order code for "Output": Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas (connection via Safety Barrier Promass 100)				

*EtherNet/IP connection version*

Order code for "Output", option **N**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

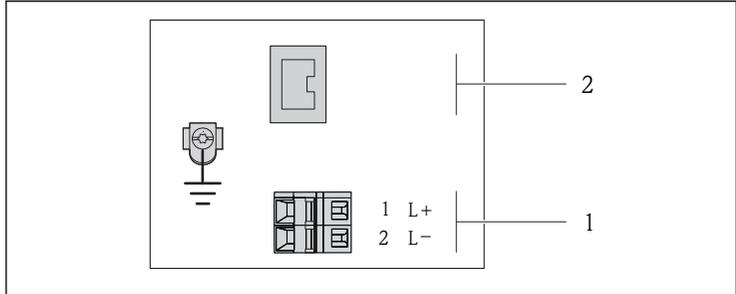

A0017054

5 EtherNet/IP terminal assignment

- 1 Power supply: DC 24 V
- 2 EtherNet/IP

Order code for "Output"	Terminal number	
	Power supply 2 (L-)	Output 1 (L+)
Option N	DC 24 V	Device plug M12x1 EtherNet/IP
Order code for "Output": Option N: EtherNet/IP		

**Pin assignment, device plug**

*Supply voltage*

*For all connection versions (device side)*

Pin	Assignment	
	1	L+
2		Not assigned
3		Not assigned
4	L-	DC 24 V
5		Grounding/shielding
Coding		Plug/socket
A		Plug

A0029042

4-20 mA HART with pulse/frequency/switch output

Device plug for signal transmission (device side)

<p>A0016810</p>	Pin	Assignment	
	1	+	4-20 mA HART (active)
	2	-	4-20 mA HART (active)
	3	+	Pulse/frequency/switch output (passive)
	4	-	Pulse/frequency/switch output (passive)
	5		Grounding/shielding
Coding		Plug/socket	
A		Socket	

PROFIBUS DP

Device plug for signal transmission (device side)


<p>A0016811</p>	Pin	Assignment		
	1		Not assigned	
	2	A	PROFIBUS DP	
	3		Not assigned	
	4	B	PROFIBUS DP	
	5		Grounding/shielding	
Coding		Plug/socket		
B		Socket		

MODBUS RS485

Device plug for signal transmission (device side)

<p>A0016811</p>	Pin	Assignment		
	1		Not assigned	
	2	A	Modbus RS485	
	3		Not assigned	
	4	B	Modbus RS485	
	5		Grounding/shielding	
Coding		Plug/socket		
B		Socket		

*EtherNet/IP**Device plug for signal transmission (device side)*

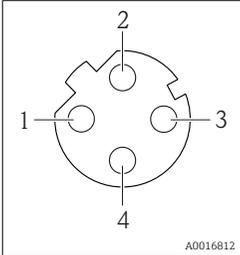 <p style="text-align: center;">A0016812</p>	Pin		Assignment	
	1	+	Tx	
	2	+	Rx	
	3	-	Tx	
	4	-	Rx	
Coding		Plug/socket		
D		Socket		







[www.addresses.endress.com](http://www.addresses.endress.com)

---