Safety Instructions iTEMP TMT84, TMT85

ATEX: II1G Ex ia IIC T6...T4 Ga IECEx: Ex ia IIC T6...T4 Ga





iTEMP TMT84, TMT85 XA00069R

iTEMP TMT84, TMT85

Table of contents

Associated documentation	ł
Supplementary documentation	'n
Manufacturer address	Ŧ
Certificates	H
Safety instructions	5
Safety instructions: Installation	5
Safety instructions: Zone 1 and Zone 26	ó
Safety instructions: Zone 06	ó
Safety instructions: Specific requirements	7
Temperature tables	7
Connection data	7

XA00069R iTEMP TMT84, TMT85

Associated documentation

This document is an integral part of the following Operating Instructions:

Associated documentation for TMT84

Operating instructions: BA00257R/09/ENTechnical information: TI00138R/09/EN

Associated documentation for TMT85

Operating instructions: BA00251R/09/EN
 Technical information: TI00134R/09/EN

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available: In the download area of the Endress+Hauser website: www.endress.com \rightarrow Download \rightarrow

Advanced → Documentation code: CP00021Z

Manufacturer address

Endress+Hauser Wetzer GmbH + Co KG

Obere Wank 1

D-87484 Nesselwang

Germany

Phone: +49 (0)8361 308 0

Certificates

IECEx certificate

Certificate number: IECEx PTB 08.0001 X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

■ IEC 60079-0:2017 ■ IEC 60079-11:2011

ATEX certificate

Certificate number: PTB 07ATEX2056 X

EU Declaration of Conformity

Declaration number: EC_00175

UKCA certificate


Certificate number: CML 21UKEX21010X

UKCA Declaration of Conformity

Declaration number: UK_00430

iTEMP TMT84, TMT85 XA00069R

Safety instructions

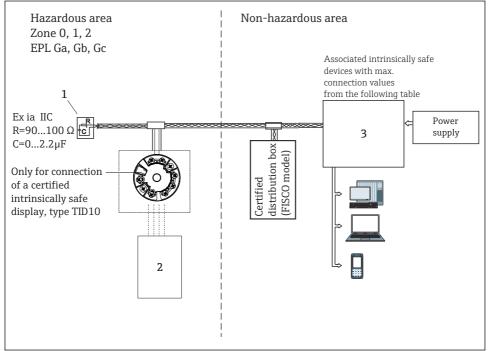

A0047313

- 1 Termination resistance (FISCO model)
- E.g. RTD or TC sensor (simple apparatus) mounted directly or remotely.
 Optionally two-channel
- 3 Certified additional operating material (FISCO model) with max. connection values from the following table

Safety instructions: Installation

Safety instructions: Installation

- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- When installing the unit note that the housing ingress protection classification IP20 according to EN/IEC 60529 is upheld.
- When connecting the measurement unit with a certified circuit of category "ib" into an IIC or IIB hazardous area the ignition class changes to: Ex ib IIC or Ex ib IIB.
- The device (terminal head) must be connected to the potential compensation cable.
- The certified TID10 display may only be installed in zone 1/EPL Gb or zone 2/EPL Gc.

XA00069R iTEMP TMT84, TMT85

 The permissible ambient temperatures for the display, type TID10, are to be observed.

- When using a capacitive isolation of the ground system the maximum capacity must not exceed 10 nF and must also be done in the non-hazardous area (e.g. 1 nF capacitors, insulation voltage 1500 V, ceramic).
- Disconnect the transmitter from the power supply, terminals (1+) and (2-), before accessing the device via the CDI (Endress+Hauser Common Data Interface) using the Commubox type FXA291.

Safety instructions: Zone 1 and Zone 2

- According to the specifications of the manufacturer, this apparatus can be operated in zone 1 (category 2)/EPL Gb or zone 2 (category 3) /EPL Gc.
- The sensor current circuit may be introduced into zone 0 (category 1)/EPL Ga.

Safety instructions: Zone 0

(These instructions are only valid if the unit is to be installed directly in the zone 0 (category 1)/EPL Ga.)

- Explosive moisture/air mixtures are only allowed to occur under atmospheric conditions.
 - -20 °C ≤ Ta ≤ +60 °C
 - $0.8 \text{ bar} \le p \le 1.1 \text{ bar}$

If there is no explosive mixture present or the additional measures according to EN 1127-1 are upheld the unit can also be operated outside the atmospheric conditions according to the manufacturers specification.

- The restricted ambient temperatures as per EN 1127-1 6.4.2 must be observed (see table).
- The power circuit to be supplied must meet the specifications for explosion protection Ex ia IIC (EN/IEC 60079-14 12.3).
- The devices can only be used in fluids if the process-wetted materials are sufficiently resistant to such fluids.
- If the entire device is operated in Zone O/EPL Ga, the compatibility of the device materials with the fluids has to be ensured. (Housing: polycarbonate (PC), potting: polyurethane (silicone)).
- It is not permitted to mount the TID10 display in zone 0/EPL Ga.
- The temperature transmitter must be installed in such a way that electrostatic charge cannot occur, e.g. installation in grounded metallic head or grounded housing.

iTEMP TMT84, TMT85 XA00069R

Safety instructions: Specific requirements

- Only the display type TID10, which has undergone an EU-Type Examination in accordance with PTB 08 ATEX 2007, may be optionally connected to the display interface of the iTEMP TMT8x and OTMT8x temperature head transmitter.
- Please ensure that no electrostatic charge can occur during installation of the iTEMP TMT84, TMT85 or OTMT84 and OTMT85 temperature head transmitter.

Temperature tables

Туре	Temperature class	Ambient temperature zone 1	Ambient temperature zone 0
TMT84, OTMT84	Т6	-40 °C ≤ Ta ≤ +55 °C	-20 °C ≤ Ta ≤ +40 °C
TMT85, OTMT85	T5	-40 °C ≤ Ta ≤ +70 °C	-20 °C ≤ Ta ≤ +50 °C
	T4	-40 °C ≤ Ta ≤ +85 °C	-20 °C ≤ Ta ≤ +60 °C

Connection data

Туре	Electrical data				
TMT84, OTMT84 TMT85, OTMT85	Power supply (terminals + and -)	$Ui \le 17.5 V_{DC}$ or $Ii \le 380 \text{ mA}$	$24 V_{DC}$ 250 mA $Pi \le 1400 \text{mW}$		
		Ci = 5 nF Li = 2.75 μH	5 nF 2.75 μH		
	Applicable for connection to a Fieldbus system according to FISCO/FNICO-model				
	Sensor circuit (terminals 3 to 6)	$eq:continuous_continuous$			
	Max. connection values Ex ia IIC Ex ia IIB Ex ia IIA	Lo = 20 mH Lo = 50 mH Lo = 100 mH	$Co = 0.97 \ \mu F$ $Co = 4.6 \ \mu F$ $Co = 6.0 \ \mu F$		

Category	Type of protection (ATEX)	Туре
II1G	Ex ia IIC T6T4 Ga	TMT84, OTMT84 TMT85, OTMT85

XA00069R iTEMP TMT84, TMT85

Type of protection (IEC)	Туре
Ex ia IIC T6T4 Ga	TMT84, OTMT84 TMT85, OTMT85







www.addresses.endress.com