# Safety Instructions iTEMP TMT82, TMT84, TMT85

PROFIBUS®, FOUNDATION Fieldbus™

ATEX, IECEx: Ex ia [ia Ga] IIC T6 Gb

Safety instructions for electrical apparatus in explosion-hazardous areas







### iTEMP TMT82, TMT84, TMT85

PROFIBUS®, FOUNDATION Fieldbus™

#### Table of contents

About this document
Associated documentation
Supplementary documentation
Manufacturer´s certificates
Manufacturer address
Safety instructions
Safety instructions: Installation
Safety instructions: Special conditions
Temperature tables
Electrical connection data


### About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
   www.endress.com -> Downloads -> Manuals and Datasheets ->
   Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

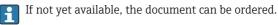

### Associated documentation

This document is an integral part of the following Operating Instructions:

#### **iTEMP TMT82**

- Operating Instructions: BA01028T
- Brief operating instructions: KA01095T
- Technical information: TI01010T

#### **iTEMP TMT84**

- Operating Instructions: BA00257R
- Brief operating instructions: KA00258R
- Technical information: TI00138R

#### **iTEMP TMT85**

- Operating Instructions: BA00251R
- Brief operating instructions: KA00252R
- Technical information: TI00134R

# Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
   www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z
- On the CD for devices with CD-based documentation

# Manufacturer's certificates

#### IECEx certificate

Certificate number: IECEx DEK 11.0096

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

IEC 60079-0:2017IEC 60079-11:2011

#### ATEX certificate

Certificate number: DEKRA 11ATEX0265

# **EU Declaration of Conformity** Declaration number: EC\_00095

**UKCA** certificate

Certificate number: CML 21UKEX11008

# **UKCA Declaration of Conformity** Declaration number: UK\_00424


# Manufacturer address

Endress+Hauser Wetzer GmbH + Co. KG

Obere Wank 1

87484 Nesselwang, Germany

### Safety instructions

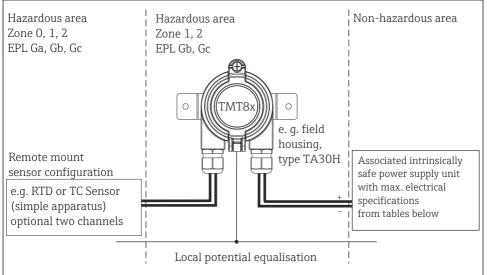

A0050182

#### Safety instructions: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The housing of the field transmitter must be connected to the potential matching line.
- The type of protection changes as follows when the device is connected to certified intrinsically safe circuits of Category ib: Ex ib IIC.
  - When connecting an intrinsically safe ib circuit, do not operate the sensor at Zone 0 (EPL Ga).
- When connecting two independent sensors make sure that the potential equalisation cables are at the same potential.
- The circuits of assembled head transmitter are isolated from its enclosure in conformance with EN/IEC 60079-11 chapter 6.3.13.

#### Safety instructions: Special conditions

The temperature transmitter must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.

# Temperature tables

Transmitter version with field housing, type TA30H, TA30A, TA30D		Temperature class / code	Ambient temperature range
iTEMP TMT82 v	iTEMP TMT82 without display TID10	Т6	−52 to +58 °C
		T5	−52 to +75 °C
		T4	−52 to +85 °C
Ex ia IIC  iTEMP TMT84 and iTEMP TMT85 without display TID10  iTEMP TMT82, TMT84, TMT85 with display TID10		Т6	−40 to +55 °C
		T5	−40 to +70 °C
		T4	−40 to +85 °C
	1 ' '	Т6	−40 to +55 °C
		T5	−40 to +70 °C
	T4	−40 to +85 °C	

Transmitter version with field mount housing (dual compartment)		Temperature class / code	Ambient temperature range
Ex ia IIC	iTEMP TMT82 without display TID10	Т6	−40 to +58 °C
		T5	−40 to +75 °C
		T4	−40 to +85 °C
	iTEMP TMT82 with display TID10	Т6	−40 to +55 °C
		T5	−40 to +70 °C
		T4	−40 to +85 °C

# Electrical connection data

Туре	Electrical data			
iTEMP TMT82 HART®-protocol	Supply voltage (terminal + and -)	$\begin{split} &U_l \leq 30 \ V_{DC} \\ &I_i \leq 130 \ mA \\ &P_i \leq 800 \ mW \\ &C_i = negligibly \ small \\ &L_i = negligibly \ small \end{split}$		
	Sensor circuit (terminal 3 to 7)	$\begin{split} &U_{o} \leq 7.6 \ V_{DC} \\ &I_{o} \leq 13 \ mA \\ &P_{o} \leq 24.7 \ mW \\ &C_{i} = negligibly \ small \\ &L_{i} = negligibly \ small \end{split}$		

Туре	Electrical data			
	Maximum connection values Ex ia IIC Ex ia IIB Ex ia IIA	$L_0 = 10 \text{ mH}$ $L_0 = 50 \text{ mH}$ $L_0 = 50 \text{ mH}$	$C_o = 1 \mu F$ $C_o = 4.5 \mu F$ $C_o = 6.7 \mu F$	
ITEMP TMT84 PROFIBUS® PA-protocol ITEMP TMT85 FOUNDATION Fieldbus™-protocol	Supply voltage (terminal + and -)	$\begin{aligned} & FISCO: \\ & U_{l} \leq 17.5 \ V_{DC} \\ & I_{i} \leq 380 \ mA \\ & C_{i} \leq 5 \ nF \\ & L_{i} = 2.75 \ \mu H \end{aligned}$	or: $\begin{aligned} &U_i \leq 24 \ V_{DC} \\ &I_i \leq 250 \ mA \\ &C_i \leq 5 \ nF \\ &L_i = 2.75 \ \mu H \end{aligned}$	
	Applicable for connection to a Fieldbus system according to FISCO-model			
	Sensor circuit (terminal 3 to 7)	$\begin{aligned} &U_o \leq 7.2 \ V_{DC} \\ &I_o \leq 25.9 \ mA \\ &P_o \leq 46.7 \ mW \\ &C_i \leq 5 \ nF \\ &L_i = negligibly \ low \end{aligned}$		
	Max. connection values Ex ia IIC Ex ia IIB Ex ia IIA	$L_o = 20 \text{ mH}$ $L_o = 50 \text{ mH}$ $L_o = 100 \text{ mH}$	$C_o = 0.97 \ \mu F$ $C_o = 4.6 \ \mu F$ $C_o = 6 \ \mu F$	

Category	Type of protection (ATEX, IECEx)	Туре
II 2(1)G	Ex ia [ia Ga] IIC T6T4 Gb	iTEMP TMT82, TMT84, TMT85







www.addresses.endress.com