Safety Instructions **RIA14**

ATEX: II2(1)G Ex ib [ia Ga] IIC T6...T4 Gb

IECEx: Ex ib [ia Ga] IIC T6...T4 Gb







RIA14 XA00090R

RIA14

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer´s certificates	5
Manufacturer address	5
Safety instructions:	6
Safety instructions: Installation	6
Safety instructions: Special conditions of use	7
Temperature tables	7
Electrical connection data	7

XA00090R RIA14


About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Manuals and Datasheets -> Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

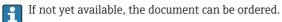

Associated documentation

This document is an integral part of the following Operating Instructions:

Operating instructions: BA00278R

■ Brief operating instructions: KA00277R

■ Technical information: TI00143R

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.

• On the CD for devices with CD-based documentation

RIA14 XA00090R

Manufacturer's certificates

IECEx certificate

Certificate number: IECEx KEM 10.0012X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

■ IEC 60079-0:2017 ■ IEC 60079-11:2011

ATEX certificate

Certificate number: KEMA 08ATEX0023 X

EU Declaration of Conformity Declaration number: EC_00182

UKCA certificate

Certificate number: CML 21UKEX2994X

UKCA Declaration of Conformity Declaration number: UK_00399

Manufacturer address


Endress+Hauser Wetzer GmbH + Co. KG

Obere Wank 1

87484 Nesselwang, Germany

XA00090R RIA14

Safety instructions:

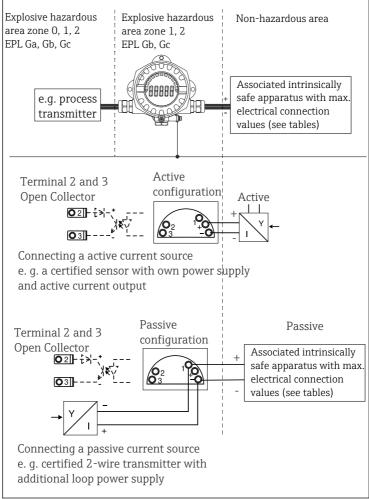

Δ0048122

■ 1 Installation of the field indicator

Safety instructions: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The indicator housing must be connected to the potential matching line.
- The type of protection changes as follows when the devices are connected to certified intrinsically safe circuits of Category ib: Ex ib IIC.

RIA14 XA00090R

• When connecting an intrinsically safe ib circuit, do not operate the process transmitter at Zone 0.

- The indicator must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.
- The circuits of indicator are isolated from its enclosure in conformance with EN/IEC 60079-11 chapter 6.3.13.

Safety instructions: Special conditions of use

When the enclosure is provided with an non-conductive coating, electrostatic charges on the equipment enclosure shall be avoided. For more details see safety instructions.

Temperature tables

Туре	Temperature class	Ambient temperature
RIA14	Т6	-40 °C ≤ Ta ≤ +50 °C
	T5	-40 °C ≤ Ta ≤ +60 °C
	T4	-40 °C ≤ Ta ≤ +85 °C

Electrical connection data

Туре	Electrical data	
RIA14	Power supply (Terminals + and -, + and 1)	$\label{eq:continuous_continuous} \begin{split} Ui &\leq 30 \ V_{DC} \\ Ii &\leq 100 \ mA \\ Pi &\leq 750 \ mW \\ Li &= 0 \ mH \\ Ci &= 15.2 \ nF \end{split}$
	Open Collector (Terminals 2 and 3)	$\label{eq:controller} \begin{split} &Ui \leq 30 \ V_{DC} \\ &Ii \leq 100 \ mA \\ Π \leq 375 \ mW \\ &Li = 0 \ mH \\ &Ci = 0 \ nF \end{split}$

Category	Type of protection	Туре
II2(1)G	Ex ib [ia Ga] IIC T6T4 Gb	RIA14

Type of protection (IEC)	Туре
Ex ib [ia Ga] IIC T6T4 Gb	RIA14



www.addresses.endress.com